


Frequency Inverter

MW500 V2.1X

Programming Manual

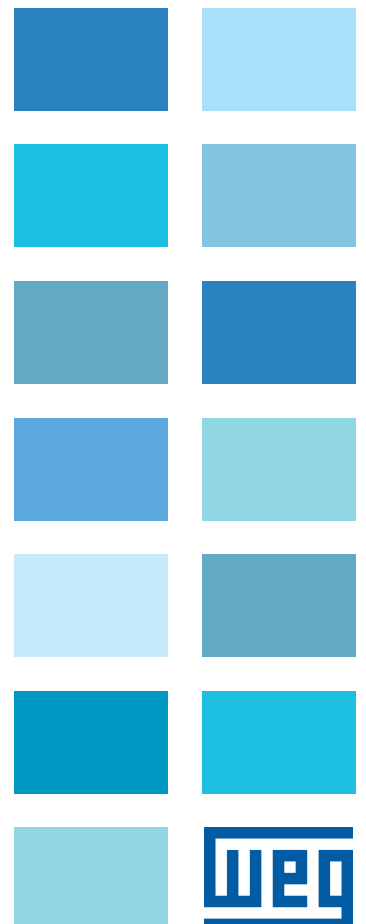



Programming Manual

Series: MW500

Language: English

Document: 10002170331 / 06

Software Version: 2.1X

Publication Date: 07/2024

The information below describes the reviews made to this manual.

Version	Review	Description
V1.5X	R00	First edition
V1.5X	R01	General review
V2.0X	R02	General review Version update Addition of new parameters: P0031, P0038, P0039, P0261, P0262, P0319, P0588 to P0591, P0800 to P0849 and P1004 Change of parameters: P0204, P0312, P0343 and P0408 New faults: F0068 and F0085 New alarm: A0701 New Ethernet Interface
V2.1X	R03	Addition of new parameter: P0298
V2.1X	R04, R05 and R06	General review

QUICK REFERENCE OF PARAMETERS, ALARMS AND FAULTS	0-1
1 SAFETY INSTRUCTIONS	1-1
1.1 SAFETY WARNINGS IN THIS MANUAL	1-1
1.2 SAFETY WARNINGS IN THE PRODUCT.....	1-1
1.3 PRELIMINARY RECOMMENDATIONS.....	1-2
2 GENERAL INFORMATION.....	2-1
2.1 ABOUT THE MANUAL	2-1
2.2 TERMINOLOGY AND DEFINITIONS.....	2-1
2.2.1 Terms and Definitions Used.....	2-1
2.2.2 Numerical Representation.....	2-3
3 ABOUT THE MW500.....	3-1
4 HMI AND BASIC PROGRAMMING	4-1
4.1 USE OF THE HMI TO OPERATE THE INVERTER.....	4-1
4.2 INDICATIONS ON THE HMI DISPLAY.....	4-2
4.3 OPERATING MODES OF THE HMI.....	4-3
5 PROGRAMMING BASIC INSTRUCTIONS.....	5-1
5.1 PARAMETER STRUCTURE.....	5-1
5.2 PARAMETERS SELECTED BY THE HMI MENU	5-1
5.3 HMI.....	5-2
5.4 BACKUP PARAMETERS	5-5
5.5 SETTING OF DISPLAY INDICATIONS IN THE MONITORING MODE.....	5-6
5.6 POSSIBLE CAUSES OF INVERTER CONFIG STATUS.....	5-6
5.7 SOFTPLC ENGINEERING UNITS	5-7
5.8 MW500 FEATURES.....	5-9
5.8.1 Potentiometer	5-9
5.8.2 Leds	5-9
5.8.3 Fan State Control	5-11
5.8.4 DIP Switches.....	5-12
6 INVERTER MODEL AND ACCESSORIES IDENTIFICATION.....	6-1
6.1 INVERTER DATA	6-1
7 LOGICAL COMMAND AND SPEED REFERENCE.....	7-1
7.1 SELECTION FOR LOGICAL COMMAND AND SPEED REFERENCE.....	7-1
7.2 SPEED REFERENCE	7-7
7.2.1 Speed Reference Limits	7-8
7.2.2 Speed Reference Backup	7-8
7.2.3 Speed Reference Parameters	7-9
7.2.4 Reference via Electronic Potentiometer	7-11
7.2.5 Analog Input Alx and Frequency Input FI	7-12
7.2.6 13-bit Speed Reference	7-12
7.3 INVERTER CONTROL AND STATUS WORD.....	7-12
7.3.1 Control via HMI Inputs	7-15
7.3.2 Control via Digital Inputs	7-16
7.3.1 Control via HMI Inputs	7-15
7.3.2 Control via Digital Inputs	7-16
7.3.2 Control via Digital Inputs	7-16

- 8 AVAILABLE MOTOR CONTROL TYPES8-1**

- 9 V/f SCALAR CONTROL9-1**
 - 9.1 PARAMETERIZATION OF THE V/f SCALAR CONTROL 9-3
 - 9.2 START-UP IN V/f MODE 9-7

- 10 VVW VECTOR CONTROL 10-1**
 - 10.1 VVW VECTOR CONTROL PARAMETERIZATION 10-3
 - 10.2 START-UP IN VVW MODE 10-8

- 11 COMMON FUNCTIONS TO ALL THE CONTROL MODES 11-1**
 - 11.1 RAMPS 11-1
 - 11.2 DC LINK VOLTAGE AND OUTPUT CURRENT LIMITATION..... 11-3
 - 11.2.1 DC Link Voltage Limitation by “Ramp Hold” P0150 = 0 or 2 11-4
 - 11.2.2 DC Link Voltage Limitation by “Accelerate Ramp” P0150 = 1 or 3 11-4
 - 11.2.3 Output Current Limitation by “Ramp Hold” P0150 = 2 or 3: 11-6
 - 11.2.4 Current Limitation Type “Decelerate Ramp” P0150 = 0 or 1: 11-6
 - 11.3 SLEEP MODE 11-7
 - 11.4 FLYING START / RIDE-THROUGH 11-9
 - 11.4.1 Flying Start Function 11-9
 - 11.4.2 Ride-Through Function 11-10
 - 11.5 DC BRAKING 11-10
 - 11.6 AVOIDED FREQUENCY 11-12
 - 11.7 ENERGY SAVING 11-13

- 12 DIGITAL AND ANALOG INPUTS AND OUTPUTS 12-1**
 - 12.1 ANALOG INPUTS 12-1
 - 12.2 ANALOG OUTPUTS 12-6
 - 12.3 FREQUENCY INPUT 12-9
 - 12.4 FREQUENCY OUTPUT 12-12
 - 12.5 DIGITAL INPUTS 12-14
 - 12.6 DIGITAL OUTPUTS 12-23
 - 12.5 DIGITAL INPUTS 12-14
 - 12.6 DIGITAL OUTPUTS 12-23

- 13 PID CONTROLLER 13-1**
 - 13.1 DESCRIPTIONS AND DEFINITIONS 13-1
 - 13.2 START-UP 13-4
 - 13.3 SLEEP MODE WITH PID 13-7
 - 13.4 MONITORING MODE SCREEN 13-7
 - 13.5 PID PARAMETERS..... 13-8
 - 13.6 ACADEMIC PID 13-13

- 14 RHEOSTATIC BRAKING 14-1**

15 FAULTS AND ALARMS	15-1
15.1 MOTOR OVERLOAD PROTECTION (F0072 AND A0046).....	15-1
15.2 IGBTs OVERLOAD PROTECTION (F0048 AND A0047).....	15-3
15.3 MOTOR OVERTEMPERATURE PROTECTION (F0078)	15-5
15.4 IGBTs OVERTEMPERATURE PROTECTION (F0051 AND A0050)	15-6
15.5 OVERCURRENT PROTECTION (F0070 AND F0074).....	15-7
15.6 LINK VOLTAGE SUPERVISION (F0021 AND F0022)	15-7
15.7 PLUG-IN MODULE COMMUNICATION FAULT (F0031)	15-7
15.8 VVW CONTROL MODE SELF-TUNING FAULT (F0033)	15-7
15.9 REMOTE HMI COMMUNICATION FAULT ALARM (A0700).....	15-7
15.10 REMOTE HMI COMMUNICATION ERROR FAULT (F0700).....	15-7
15.11 POWER HARDWARE IDENTIFICATION FAULT (F0084).....	15-7
15.12 FAN SPEED FAULT (F0179).....	15-8
15.13 MOTOR PTC FAULT (F0068).....	15-8
15.14 FAULT IN THE CPU (F0080).....	15-8
15.15 INCOMPATIBLE MAIN SOFTWARE VERSION (F0151).....	15-8
15.16 PULSE FEEDBACK FAULT (F0182)	15-8
15.17 FAULT HISTORY	15-9
15.18 FAULT AUTO-RESET.....	15-11
16 READING PARAMETERS	16-1
17 COMMUNICATION.....	17-1
17.1 SERIAL USB, RS-232 AND RS485 INTERFACE.....	17-1
17.2 CAN – CANOPEN/DEVICENET INTERFACE	17-3
17.3 PROFIBUS DP INTERFACE	17-4
17.4 ETHERNET INTERFACE	17-5
17.5 COMMANDS AND COMMUNICATION STATUS	17-7
18 SOFTPLC	18-1

QUICK REFERENCE OF PARAMETERS, ALARMS AND FAULTS

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0000	Access to Parameters	0 to 9999	0				5-2
P0001	Speed Reference	0 to 65535			ro	READ	16-1
P0002	Motor Speed	0 to 65535			ro	READ	16-1
P0003	Motor Current	0.0 to 200.0 A			ro	READ	16-1
P0004	DC Link Voltage (Ud)	0 to 2000 V			ro	READ	16-2
P0005	Motor Frequency	0.0 to 500.0 Hz			ro	READ	16-2
P0006	VFD Status	0 = Ready 1 = Run 2 = Undervoltage 3 = Fault 4 = Self-Tuning 5 = Configuration 6 = DC-Braking 7 = Sleep Mode			ro	READ	16-2
P0007	Motor Voltage	0 to 2000 V			ro	READ	16-3
P0009	Motor Torque	-1000.0 to 1000.0 %			ro, VVW	READ	16-4
P0010	Output Power	0.0 to 6553.5 kW			ro	READ	16-4
P0011	Power Factor	-1.00 to 1.00			ro	READ	16-4
P0012	DI8 to DI1 Status	Bit 0 = DI1 Bit 1 = DI2 Bit 2 = DI3 Bit 3 = DI4 Bit 4 = DI5 Bit 5 = DI6 Bit 6 = DI7 Bit 7 = DI8			ro	READ, I/O	12-15
P0013	DO5 to DO1 Status	Bit 0 = DO1 Bit 1 = DO2 Bit 2 = DO3 Bit 3 = DO4 Bit 4 = DO5			ro	READ, I/O	12-23
P0014	AO1 Value	0.0 to 100.0 %			ro	READ, I/O	12-7
P0015	AO2 Value	0.0 to 100.0 %			ro	READ, I/O	12-7
P0016	FO % Value	0.0 to 100.0 %			ro	READ, I/O	12-12
P0017	FO Hz Value	0 to 20000 Hz			ro	READ, I/O	12-12
P0018	AI1 Value	-100.0 to 100.0 %			ro	READ, I/O	12-1
P0019	AI2 Value	-100.0 to 100.0 %			ro	READ, I/O	12-1
P0020	AI3 Value	-100.0 to 100.0 %			ro	READ, I/O	12-1
P0021	FI % Value	-100.0 to 100.0 %			ro	READ, I/O	12-10
P0022	FI Hz Value	0 to 20000 Hz			ro	READ, I/O	12-10
P0023	Main SW Version	0.00 to 655.35			ro	READ	6-1
P0024	Sec. SW Version	0.00 to 655.35			ro	READ	6-1
P0027	Plug-in Mod. Config.	0 = No Plug-in 1 = CFW500-IOS 2 = CFW500-IOD 3 = CFW500-IOAD 4 = CFW500-IOR 5 = CFW500-CUSB 6 = CFW500-CCAN 7 = CFW500-CRS232 8 = CFW500-CPDP 9 = CFW500-CRS485 10 = CFW500-ENC 11 = CFW500-CETH-IP CFW500-CEMB-TCP CFW500-CEPN-IO 12 = CFW500-ENC2			ro	READ	6-1

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0029	Power HW Config.	0 = Not Identified 1 = 200-240 V / 1.6 A 2 = 200-240 V / 2.6 A 3 = 200-240 V / 4.3 A 4 = 200-240 V / 7.0 A 5 = 200-240 V / 9.6 A 6 = 380-480 V / 1.0 A 7 = 380-480 V / 1.6 A 8 = 380-480 V / 2.6 A 9 = 380-480 V / 4.0 A 10 = 380-480 V / 6.1 A 11 = 200-240 V / 7.3 A 12 = 200-240 V / 10.0 A 13 = 200-240 V / 16.0 A 14 = 380-480 V / 2.7 A 15 = 380-480 V / 4.3 A 16 = 380-480 V / 6.5 A 17 = 380-480 V / 10.0 A 18 = 200-240 V / 24.0 A 19 = 380-480 V / 14.0 A 20 = 380-480 V / 16.0 A 21 = 500-600 V / 1.7 A 22 = 500-600 V / 3.0 A 23 = 500-600 V / 4.3 A 24 = 500-600 V / 7.0 A 25 = 500-600 V / 10.0 A 26 = 500-600 V / 12.0 A 27 = 200-240 V / 28.0 A 28 = 200-240 V / 33.0 A 29 = 380-480 V / 24.0 A 30 = 380-480 V / 31.0 A 33 = 200-240 V / 47.0 A 34 = 200-240 V / 56.0 A 35 = 380-480 V / 39.0 A 36 = 380-480 V / 49.0 A 44 = 200-240 V / 6.0 A 45 = 380-480 V / 38.0 A 46 = 200-240 V / 12.2 A 47 = 200-240 V / 17.0 A 48 = 200-240 V / 19.4 A 49 = 200-240 V / 2.1 A 50 = 200-240 V / 2.9 A 51 = 200-240 V / 3.4 A 52 = 380-480 V / 1.3 A 53 = 380-480 V / 2.0 A 54 = 380-480 V / 5.2 A	According to inverter model		ro	READ	6-2
P0030	Heatsink Temperature	-20 to 150 °C			ro	READ	16-5
P0031	Analog Input Value Knob (AI4)	-100.0 to 100.0 %			ro	READ/I/O	12-1
P0036	Fan Heatsink Speed	0 to 15000 rpm			ro	READ	5-11
P0037	Motor Overload Ixt	0 to 100 %			ro	READ	15-2
P0038	Encoder Speed	0 to 65535 rpm			ro	READ	15-3
P0039	Encoder Pulse Counter	0 to 40000			ro	READ	15-3
P0040	PID Process Variable	0.0 to 3000.0			ro	READ	13-8
P0041	PID Setpoint Value	0.0 to 3000.0			ro	READ	13-8
P0045	Fan Enabled Time	0 to 65535 h			ro	READ	5-11
P0047	CONFIG Status	0 to 999			ro	READ	16-6
P0048	Present Alarm	0 to 999			ro	READ	15-9
P0049	Present Fault	0 to 999			ro	READ	15-9
P0050	Last Fault	0 to 999			ro	READ	15-9
P0051	Current at Last Fault	0.0 to 200.0 A			ro	READ	15-9
P0052	DC Link at Last Fault	0 to 2000 V			ro	READ	15-9
P0053	Frequency at Last Fault	0.0 to 500.0 Hz			ro	READ	15-10
P0054	Temp. at Last Fault	-20 to 150 °C			ro	READ	15-10
P0055	Log. State Last Fault	0000h to FFFFh			ro	READ	15-10

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0060	Second Fault	0 to 999			ro	READ	15-9
P0061	Current at 2 nd Fault	0.0 to 200.0 A			ro	READ	15-9
P0062	DC Link at 2 nd Fault	0 to 2000 V			ro	READ	15-9
P0063	Frequency 2 nd Fault	0.0 to 500.0 Hz			ro	READ	15-10
P0064	Temp. 2 nd Fault	-20 to 150 °C			ro	READ	15-10
P0065	Log. State 2 nd Fault	0000h to FFFFh			ro	READ	15-10
P0070	Third Fault	0 to 999			ro	READ	15-9
P0071	Current at 3 rd Fault	0.0 to 200.0 A			ro	READ	15-9
P0072	DC Link 3 rd Fault	0 to 2000 V			ro	READ	15-10
P0073	Frequency 3 rd Fault	0.0 to 500.0 Hz			ro	READ	15-10
P0074	Temp. 3 rd Fault	-20 to 150 °C			ro	READ	15-10
P0075	Log. State 3 rd Fault	0000h to FFFFh			ro	READ	15-11
P0100	Acceleration Time	0.1 to 999.0 s	10.0 s			BASIC	11-1
P0101	Deceleration Time	0.1 to 999.0 s	10.0 s			BASIC	11-1
P0102	2 nd Ramp Accel. Time	0.1 to 999.0 s	10.0 s				11-2
P0103	2 nd Ramp Decel. Time	0.1 to 999.0 s	10.0 s				11-2
P0104	S Ramp	0 = Inactive 1 = Active	0		cfg		11-2
P0105	1 st /2 nd Ramp Sel.	0 = First Ramp 1 = Second Ramp 2 = Dlx 3 = Serial/USB 4 = Reserved 5 = CO/DN/DP/Eth 6 = SoftPLC	3			I/O	11-3
P0106	3 rd Ramp Accel. Time	0.1 to 999.0 s	5.0 s				11-3
P0120	Speed Ref. Backup	0 = Inactive 1 = Active 2 = Backup by P0121	1				7-8
P0121	Speed Reference via HMI	0.0 to 500.0 Hz	3.0 Hz				7-9
P0122	Speed Reference for JOG	-500.0 to 500.0 Hz	5.0 Hz				7-9
P0124	Multispeed Ref. 1	-500.0 to 500.0 Hz	3.0 Hz				7-10
P0125	Multispeed Ref. 2	-500.0 to 500.0 Hz	10.0 (5.0) Hz				7-10
P0126	Multispeed Ref. 3	-500.0 to 500.0 Hz	20.0 (10.0) Hz				7-10
P0127	Multispeed Ref. 4	-500.0 to 500.0 Hz	30.0 (20.0) Hz				7-10
P0128	Multispeed Ref. 5	-500.0 to 500.0 Hz	40.0 (30.0) Hz				7-10
P0129	Multispeed Ref. 6	-500.0 to 500.0 Hz	50.0 (40.0) Hz				7-10
P0130	Multispeed Ref. 7	-500.0 to 500.0 Hz	60.0 (50.0) Hz				7-10
P0131	Multispeed Ref. 8	-500.0 to 500.0 Hz	66.0 (55.0) Hz				7-10
P0133	Minimum Speed	0.0 to 500.0 Hz	3.0 Hz			BASIC	7-8
P0134	Maximum Speed	0.0 to 500.0 Hz	66.0 (55.0) Hz			BASIC	7-8
P0135	Max. Output Current	0.0 to 200.0 A	1.5xI _{nom}			BASIC, MOTOR	11-7
P0136	Manual Torque Boost	0.0 to 30.0 %	According to inverter model		V/f	BASIC, MOTOR	9-4
P0137	Autom. Torque Boost	0.0 to 30.0 %	0.0 %		V/f	MOTOR	9-5
P0138	Slip Compensation	-10.0 to 10.0 %	0.0 %		V/f	MOTOR	9-6
P0139	Output Current Filter	0 to 9999 ms	50 ms				8-1
P0140	Slip Com. Filter	0 to 9999 ms	500 ms		VVW		8-2
P0142	Max. Output Voltage	0.0 to 100.0 %	100.0 %		cfg, V/f		9-4
P0143	Interm. Output Voltage	0.0 to 100.0 %	66.7 %		cfg, V/f		9-4
P0144	Minim. Output Voltage	0.0 to 100.0 %	33.3 %		cfg, V/f		9-4
P0145	Field Weakening Frequency	0.0 to 500.0 Hz	60.0 (50.0) Hz		cfg, V/f		9-5

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0146	Intermediate Frequency	0.0 to 500.0 Hz	40.0 (33.3) Hz		cfg, V/f		9-5
P0147	Low Output Frequency	0.0 to 500.0 Hz	20.0 (16.7) Hz		cfg, V/f		9-5
P0150	Type DC V/f Link Regulator	0 = hold_Ud and dec_LC 1 = accel_Ud and dec_LC 2 = hold_Ud and hold_LC 3 = accel_Ud and hold_LC	0		cfg	MOTOR	11-4
P0151	DC Link Regul. Level	339 to 1200 V	400 V (P0296 = 0) 800 V (P0296 = 1) 1000 V (P0296 = 2)			MOTOR	11-4
P0152	DC Link Regul. Prop. Gain	0.00 to 9.99	1.50			MOTOR	11-5
P0153	Dyn. Braking Level	339 to 1200 V	375 V (P0296 = 0) 750 V (P0296 = 1) 950 V (P0296 = 2)			MOTOR	14-1
P0156	Overl. Curr. 100 % Speed	0.0 to 200.0 A	1.1xI _{nom}			MOTOR	15-1
P0157	Overl. Curr. 50 % Speed	0.0 to 200.0 A	1.0xI _{nom}			MOTOR	15-1
P0158	Overl. Curr. 20 % Speed	0.0 to 200.0 A	0.8xI _{nom}			MOTOR	15-1
P0178	Rated Flux	0.0 to 150.0 %	100.0 %			MOTOR	10-4
P0200	Password	0 = Inactive 1 = Active 1 to 9999 = New Password	0			HMI	5-2
P0202	Control Type	0 = V/f 1 to 4 = Not Used 5 = VVW	0		cfg	STARTUP	8-1
P0203	Special Function Sel.	0 = None 1 = PID via AI1 2 = PID via AI3 3 = PID via FI	0		cfg		13-8
P0204	Load/Save Parameters	0 and 1 = Not Used 2 = Reset P0045 3 and 4 = Not Used 5 = Load WEG 60 Hz 6 = Load WEG 50 Hz 7 = Load User 1 8 = Load User 2 9 = Save User 1 10 = Save User 2 11 = Load Default SoftPLC 12 to 15 = Reserved	0		cfg		5-5
P0205	Main Display Parameter	0 to 1500	2			HMI	5-3
P0206	Secondary Parameter Display	0 to 1500	1			HMI	5-3
P0207	Parameter for Bar	0 to 1500	3			HMI	5-3
P0208	Ref. Scale Factor	1 to 65535	600 (500)			HMI	5-3
P0209	Ref. Eng. Unit	0 = None 1 = V 2 = A 3 = rpm 4 = s 5 = ms 6 = N 7 = m 8 = Nm 9 = mA 10 = % 11 = °C 12 = CV 13 = Hz 14 = HP 15 = h 16 = W 17 = kW 18 = kWh 19 = H	13			HMI	5-4

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0210	Ref. Indication Form	0 = wxyz 1 = wxy.z 2 = wx.yz 3 = w.xyz	1			HMI	5-4
P0213	Bar Scale Factor	1 to 65535	According to inverter model (P0295)			HMI	5-4
P0216	HMI Backlight	0 = OFF 1 = ON	1		cfg	HMI	5-5
P0217	Sleep Mode Frequency	0.0 to 500.0 Hz	0.0 Hz				11-8
P0218	Sleep Mode Time	0 to 999 s	0 s				11-8
P0220	LOC/REM Selection Source	0 = Always LOC. 1 = Always REM. 2 = HMI Key (LOC) 3 = HMI Key (REM) 4 = Dlx 5 = Serial/USB (LOC) 6 = Serial/USB (REM) 7 and 8 = Not Used 9 = CO/DN/DP/Eth (LOC) 10 = CO/DN/DP/Eth (REM) 11 = SoftPLC	4		cfg	I/O	7-5
P0221	LOC Reference Sel.	0 = Keypad 1 = AI1 2 = AI2 3 = AI3 4 = FI 5 = AI1 + AI2 > 0 6 = AI1 + AI2 7 = E.P. 8 = Multispeed 9 = Serial/USB 10 = Not Used 11 = CO/DN/DP/Eth 12 = SoftPLC 13 = Not Used 14 = AI1 > 0 15 = AI2 > 0 16 = AI3 > 0 17 = FI > 0 18 = Knob	18		cfg	I/O	7-5
P0222	REM Reference Sel.	See options in P0221	9		cfg	I/O	7-5
P0223	LOC FWD/REV Selection	0 = Always FWD 1 = Always REV 2 = HMI Key (FWD) 3 = HMI Key (REV) 4 = Dlx 5 = Serial/USB (FWD) 6 = Serial/USB (REV) 7 and 8 = Not Used 9 = CO/DN/DP/Eth (FWD) 10 = CO/DN/DP/Eth (REV) 11 = Not Used 12 = SoftPLC	4		cfg	I/O	7-6
P0224	LOC Run/Stop Sel.	0 = HMI Key 1 = Dlx 2 = Serial/USB 3 = Not Used 4 = CO/DN/DP/Eth 5 = SoftPLC	1		cfg	I/O	7-7
P0225	LOC JOG Selection	0 = Disable 1 = HMI Key 2 = Dlx 3 = Serial/USB 4 = Not Used 5 = CO/DN/DP/Eth 6 = SoftPLC	1		cfg	I/O	7-7

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0226	REM FWD/REV Selection	See options in P0223	5		cfg	I/O	7-6
P0227	REM Run/Stop Sel.	See options in P0224	2		cfg	I/O	7-7
P0228	REM JOG Selection	See options in P0225	3		cfg	I/O	7-7
P0229	Stop Mode Selection	0 = By Ramp 1 = Coast 2 = Quick Stop	0		cfg	I/O	7-15
P0230	Dead Zone (Als)	0 = Inactive 1 = Active	0		cfg	I/O	12-2
P0231	AI1 Signal Function	0 = Speed Ref. 1 to 3 = Not Used 4 = PTC 5 and 6 = Not Used 7 = SoftPLC 8 = Function 1 Application 9 = Function 2 Application 10 = Function 3 Application 11 = Function 4 Application 12 = Function 5 Application 13 = Function 6 Application 14 = Function 7 Application 15 = Function 8 Application	0		cfg	I/O	12-3
P0232	AI1 Gain	0.000 to 9.999	1.000			I/O	12-3
P0233	AI1 Signal Type	0 = 0 to 10 V / 20 mA 1 = 4 to 20 mA 2 = 10 V / 20 mA to 0 3 = 20 to 4 mA	0			I/O	12-4
P0234	AI1 Offset	-100.0 to 100.0 %	0.0 %			I/O	12-4
P0235	AI1 Filter	0.00 to 16.00 s	0.00 s			I/O	12-4
P0236	AI2 Signal Function	See options in P0231	0		cfg	I/O	12-3
P0237	AI2 Gain	0.000 to 9.999	1.000			I/O	12-3
P0238	AI2 Signal Type	See options in P0233	0			I/O	12-4
P0239	AI2 Offset	-100.0 to 100.0 %	0.0 %			I/O	12-4
P0240	AI2 Filter	0.00 to 16.00 s	0.00 s			I/O	12-4
P0241	AI3 Signal Function	All P0231 options except 4 = PTC	0		cfg	I/O	12-3
P0242	AI3 Gain	0.000 to 9.999	1.000			I/O	12-3
P0243	AI3 Input Signal	0 = 0 to 10 V / 20 mA 1 = 4 to 20 mA 2 = 10 V / 20 mA to 0 3 = 20 to 4 mA 4 = -10 V to +10 V	0			I/O	12-5
P0244	AI3 Offset	-100.0 to 100.0 %	0.0 %			I/O	12-4
P0245	AI3 Filter	0.00 to 16.00 s	0.00 s			I/O	12-4
P0246	Freq. Input FI	0 = Inactive 1 = Active	0			I/O	12-10
P0247	FI Gain	0.000 to 9.999	1.000			I/O	12-10
P0248	Min. FI	10 to 20000 Hz	10 Hz			I/O	12-11
P0249	FI Offset	-100.0 to 100.0 %	0.0 %			I/O	12-11
P0250	Max. FI	10 to 20000 Hz	10000 Hz			I/O	12-11

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0251	AO1 Function	0 = Speed Ref. 1 = Not Used 2 = Real Speed 3 and 4 = Not Used 5 = Output Current 6 = Process Var. 7 = Active Current 8 = Not Used 9 = PID Setpoint 10 = Not Used 11 = Motor Torque 12 = SoftPLC 13 to 15 = Not Used 16 = Motor Ixt 17 = Not Used 18 = P0696 Value 19 = P0697 Value 20 = P0698 Value 21 = Function 1 Application 22 = Function 2 Application 23 = Function 3 Application 24 = Function 4 Application 25 = Function 5 Application 26 = Function 6 Application 27 = Function 7 Application 28 = Function 8 Application	2			I/O	12-7
P0252	AO1 Gain	0.000 to 9.999	1.000			I/O	12-8
P0253	AO1 Signal Type	0 = 0 to 10 V 1 = 0 to 20 mA 2 = 4 to 20 mA 3 = 10 V to 0 4 = 20 to 0 mA 5 = 20 to 4 mA	0			I/O	12-8
P0254	AO2 Function	See options in P0251	5			I/O	12-7
P0255	AO2 Gain	0.000 to 9.999	1.000			I/O	12-8
P0256	AO2 Signal Type	See options in P0253	0			I/O	12-8
P0257	FO Function	0 = Speed Ref. 1 = Not Used 2 = Real Speed 3 and 4 = Not Used 5 = Output Current 6 = Process Var. 7 = Active Current 8 = Not Used 9 = PID Setpoint 10 = Not Used 11 = Motor Torque 12 = SoftPLC 13 and 14 = Not Used 15 = Disable FO 16 = Motor Ixt 17 = Not Used 18 = Value of P0696 19 = Value of P0697 20 = Value of P0698 21 = Function 1 Application 22 = Function 2 Application 23 = Function 3 Application 24 = Function 4 Application 25 = Function 5 Application 26 = Function 6 Application 27 = Function 7 Application 28 = Function 8 Application	15			I/O	12-13
P0258	FO Gain	0.000 to 9.999	1.000			I/O	12-14
P0259	Min. FO	10 to 20000 Hz	10 Hz			I/O	12-14
P0260	Max. FO	10 to 20000 Hz	10000 Hz			I/O	12-14

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0261	Knob Input Gain	0.000 to 9.999	1.000			I/O	12-6
P0262	Knob Input Offset	-100.0 % to +100.0 %	0.0 %			I/O	12-6
P0263	DI1 Function	0 = Not Used 1 = Run/Stop 2 = General Enable 3 = Quick Stop 4 = FWD Run 5 = REV Run 6 = Start 7 = Stop 8 = Clockwise Rotation Dir 9 = LOC/REM 10 = JOG 11 = Increase E.P. 12 = Decrease E.P. 13 = Multispeed 14 = 2 nd Ramp 15 to 17 = Not Used 18 = No Ext. Alarm 19 = No Ext. Fault 20 = Reset 21 = SoftPLC 22 = Manual/Auto PID 23 = Not Used 24 = Disable Flying Start 25 = Not Used 26 = Program. Off 27 = Load User 1 28 = Load User 2 29 = PTC 30 and 31 = Not Used 32 = 2 nd Ramp Multispeed 33 = 2 nd Ramp E.P. Ac. 34 = 2 nd Ramp E.P. De. 35 = 2 nd Ramp FWD Run 36 = 2 nd Ramp REV Run 37 = Start / Inc. E.P. 38 = Dec. E.P. / Stop 39 = Function 1 Application 40 = Function 2 Application 41 = Function 3 Application 42 = Function 4 Application 43 = Function 5 Application 44 = Function 6 Application 45 = Function 7 Application 46 = Function 8 Application	1		cfg	I/O	12-15
P0264	DI2 Function	All P0263 options except 29 = PTC	8		cfg	I/O	12-15
P0265	DI3 Function	See Options in P0263	20		cfg	I/O	12-15
P0266	DI4 Function	See Options in P0263	9		cfg	I/O	12-15
P0267	DI5 Function	See Options in P0263	0		cfg	I/O	12-15
P0268	DI6 Function	See Options in P0263	0		cfg	I/O	12-15
P0269	DI7 Function	See Options in P0263	0		cfg	I/O	12-15
P0270	DI8 Function	See Options in P0263	0		cfg	I/O	12-16
P0271	DIs Signal	0 = All DIx are NPN 1 = DI1-PNP 2 = (DI1...DI2) PNP 3 = (DI1...DI3) PNP 4 = (DI1...DI4) PNP 5 = (DI1...DI5) PNP 6 = (DI1...DI6) PNP 7 = (DI1...DI7) PNP 8 = All DIx are PNP	0		cfg	I/O	12-14

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0275	DO1 Output Function	0 = Not Used 1 = F* > Fx 2 = F > Fx 3 = F < Fx 4 = F = F* 5 = Not Used 6 = Is > Ix 7 = Is < Ix 8 = Torque > Tx 9 = Torque < Tx 10 = Remote 11 = Run 12 = Ready 13 = No Fault 14 = No F0070 15 = Not Used 16 = No F0021/22 17 = Not Used 18 = No F0072 19 = 4-20 mA OK 20 = P0695 Value 21 = Forward 22 = Proc. V. > VPx 23 = Proc. V. < VPx 24 = Ride-Through 25 = Pre-Charge OK 26 = Fault 27 = Not Used 28 = SoftPLC 29 to 34 = Not Used 35 = No Alarm 36 = No Fault/Alarm 37 = Function 1 Application 38 = Function 2 Application 39 = Function 3 Application 40 = Function 4 Application 41 = Function 5 Application 42 = Function 6 Application 43 = Function 7 Application 44 = Function 8 Application	13			I/O	12-24
P0276	DO2 Function	See Options in P0275	2			I/O	12-24
P0277	DO3 Function	See Options in P0275	0			I/O	12-24
P0278	DO4 Function	See Options in P0275	0			I/O	12-24
P0279	DO5 Function	See Options in P0275	0			I/O	12-24
P0287	Fx Hysteresis	0.0 to 500.0 Hz	0.5 Hz			I/O	12-25
P0288	Fx Speed	0.0 to 500.0 Hz	3.0 Hz			I/O	12-25
P0290	Ix Current	0.0 to 200.0 A	1.0I _{nom}			I/O	12-25
P0293	Tx Torque	0 to 200 %	100 %			I/O	12-25
P0295	VFD Rated Curr.	0.0 to 200.0 A	According to inverter model		ro	READ	6-3
P0296	Power Supply Rated Voltage	0 = 200 - 240 V 1 = 380 V 2 = 400 - 415 V 3 = 440 - 460 V 4 = 480 V 5 = 500 - 525 V 6 = 550 - 575 V 7 = 600 V	According to inverter model		ro, cfg	READ	6-4
P0297	Switching Frequency	1500 to 15000 Hz	4000 Hz				6-4

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0298	Application	0 = The inverter is mounted on the motor for applications at ambient temperature of 40 °C (104 °F) 1 = The inverter is mounted on the motor for applications at ambient temperature of 50 °C (122 °F), or on a flat surface for applications at ambient temperature of 40 °C (104 °F)	0		cfg		6-4
P0299	DC-Braking Start Time	0.0 to 15.0 s	0.0 s				11-10
P0300	DC-Braking Stop Time	0.0 to 15.0 s	0.0 s				11-11
P0301	DC-Braking Frequency	0.0 to 500.0 Hz	3.0 Hz				11-12
P0302	DC Braking Voltage	0.0 to 100.0 %	20.0 %				11-12
P0303	Skip Frequency 1	0.0 to 500.0 Hz	20.0 Hz				11-12
P0304	Skip Frequency 2	0.0 to 500.0 Hz	30.0 Hz				11-12
P0306	Skip Band	0.0 to 25.0 Hz	0.0 Hz				11-13
P0308	Serial Address	1 to 247	1			NET	17-2
P0310	Serial Baud Rate	0 = 9600 bits/s 1 = 19200 bits/s 2 = 38400 bits/s	1			NET	17-2
P0311	Serial Bytes Config.	0 = 8 bits, no, 1 1 = 8 bits, even, 1 2 = 8 bits, odd, 1 3 = 8 bits, no, 2 4 = 8 bits, even, 2 5 = 8 bits, odd, 2	1			NET	17-2
P0312	Serial Protocol (1)(2)	0 = HMI (1) 1 = Reserved 2 = Modbus RTU (1) 3 and 4 = Reserved 5 = Master RTU (1) 6 = HMI (1) + Modbus RTU (2) 7 = Modbus RTU (2) 8 to 11 = Reserved 12 = HMI (1)/RTU Master (2) 13 = RTU Master (2)	2		cfg	NET	17-3
P0313	Comm. Error Action	0 = Inactive 1 = Ramp Stop 2 = General Disab. 3 = Go to LOC 4 = LOC Keep Enab. 5 = Cause Fault	1			NET	17-3
P0314	Serial Watchdog	0.0 to 999.0 s	0.0 s			NET	17-3
P0316	Serial Interf. Status	0 = Inactive 1 = Active 2 = Watchdog Error				NET	17-3
P0319	Led Control	0 to 7h	0			SPLC	5-11
P0320	Flying Start/Ride-Through	0 = Inactive 1 = Flying Start (FS) 2 = FS and RT 3 = Ride-Through (RT)	0		cfg		11-9
P0331	Voltage Ramp	0.2 to 60.0 s	2.0 s				11-9
P0340	Auto-Reset Time	0 to 255 s	0 s				15-11
P0343	Fault Mask	Bit 0 = F0074 Bit 1 = F0048 Bit 2 = F0078 Bit 3 = F0079 Bit 4 = F0076 Bit 5 = F0179 Bit 6 = F0068 Bit 7 = F700/A700 8 to 15 = Reserved	00AFh		cfg		15-4

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0349	Ixt Alarm Level	70 to 100 %	85 %		cfg		15-2
P0397	Control Config.	Bit 0 = Slip Compens. Regen. Bit 1 = Dead Time Compensation Bit 2 = Io Stabilization Bit 3 = Red. P0297 on A0050 Bit 4 = Enable Fan Bit 5 = Control Fan	003Fh		cfg		8-2
P0399	Motor Rated Eff.	50.0 to 99.9 %	75.0 %		cfg, VVW	MOTOR, STARTUP	10-4
P0400	Motor Rated Voltage	200 to 600 V	According to Figure 10.2 on page 10-10		cfg, VVW	MOTOR, STARTUP	10-5
P0401	Motor Rated Current	0.0 to 200.0 A	1.0xI _{nom}		cfg	MOTOR, STARTUP	10-5
P0402	Motor Rated Speed	0 to 30000 rpm	1710 (1425) rpm		cfg	MOTOR, STARTUP	10-5
P0403	Motor Rated Frequency	0 to 500 Hz	60 Hz (50) Hz		cfg	MOTOR, STARTUP	10-6
P0404	Motor Rated Power	0 = 0.16 HP (0.12 kW) 1 = 0.25 HP (0.19 kW) 2 = 0.33 HP (0.25 kW) 3 = 0.5 HP (0.37 kW) 4 = 0.75 HP (0.55 kW) 5 = 1 HP (0.75 kW) 6 = 1.5 HP (1.1 kW) 7 = 2 HP (1.5 kW) 8 = 3 HP (2.2 kW) 9 = 4 HP (3 kW) 10 = 5 HP (3.7 kW) 11 = 5.5 HP (4 kW) 12 = 6 HP (4.5 kW) 13 = 7.5 HP (5.5 kW) 14 = 10 HP (7.5 kW) 15 = 12.5 HP (9 kW) 16 = 15 HP (11 kW) 17 = 20 HP (15 kW) 18 = 25 HP (18.5 kW) 19 = 30 HP (22 kW)	According to inverter model		cfg, VVW	MOTOR, STARTUP	10-6
P0406	Motor Ventilation	0 = Self-Vent. 1 = Separate Vent.	0		cfg	MOTOR, STARTUP	10-7
P0407	Motor Rated Power Fac.	0.50 to 0.99	0.80		cfg, VVW	MOTOR, STARTUP	10-7
P0408	Run Self-Tuning	0 = No 1 = No Rotation	0		cfg, VVW	MOTOR, STARTUP	10-7
P0409	Stator Resistance	0.01 to 99.99 Ω	According to inverter model		cfg, VVW	MOTOR, STARTUP	10-8
P0510	SoftPLC Eng. Unit 1	0 = None 1 = V 2 = A 3 = rpm 4 = s 5 = ms 6 = N 7 = m 8 = N.m 9 = mA 10 = % 11 = °C 12 = CV 13 = Hz 14 = HP 15 = h 16 = W 17 = kW 18 = kWh 19 = H	13			HMI, SPLC	5-7

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0511	Decimal Point Unit Eng. 1	0 = wxyz 1 = wxy.z 2 = wx.yz 3 = w.xyz	1			HMI, SPLC	5-7
P0512	SoftPLC Eng. Unit 2	See options in P0510	13			HMI, SPLC	5-8
P0513	Decimal Point Unit Eng. 2	0 = wxyz 1 = wxy.z 2 = wx.yz 3 = w.xyz	1			HMI, SPLC	5-8
P0520	PID Proportional Gain	0.000 to 9.999	1.000				13-9
P0521	PID Integral Gain	0.000 to 9.999	0.430				13-9
P0522	PID Differential Gain	0.000 to 9.999	0.000				13-9
P0525	Keypad PID Setpoint	0.0 to 100.0 %	0.0 %				13-9
P0526	PID Setpoint Filter	0 to 9999 ms	50 ms				13-10
P0527	PID Action Type	0 = Direct 1 = Reverse	0				13-10
P0528	VP Scale Factor	10 to 30000	1000			HMI	13-10
P0529	VP Indication Form	0 = wxyz 1 = wxy.z 2 = wx.yz 3 = w.xyz	1			HMI	13-11
P0533	PVx Value	0.0 to 100.0 %	90.0 %			I/O	13-11
P0535	Wake Up Band	0.0 to 100.0 %	0.0 %			I/O	13-11
P0536	P0525 Autom. Setting	0 = Inactive 1 = Active	0		cfg		13-12
P0588	Maximum Torque Level	0 to 85 %	0 %		V/f, VVW	MOTOR, NET	11-14
P0589	Level of Minimum Applied Voltage	8 to 40 %	40 %		V/f, VVW	MOTOR, NET	11-14
P0590	Minimum Speed Level	360 to 18000 rpm	600 rpm		V/f, VVW	MOTOR, NET	11-14
P0591	Hysteresis for the Maximum Torque Level	0 to 30 %	10 %		V/f, VVW	MOTOR, NET	11-15
P0680	Logical Status	Bit 0 = Reserved Bit 1 = Run Command Bit 2 and 3 = Reserved Bit 4 = Quick Stop Bit 5 = 2 nd Ramp Bit 6 = Config. Mode Bit 7 = Alarm Bit 8 = Running Bit 9 = Enabled Bit 10 = Forward Bit 11 = JOG Bit 12 = Remote Bit 13 = Undervoltage Bit 14 = Automatic (PID) Bit 15 = Fault			ro	READ, NET	7-13
P0681	Speed at 13 bits	-32768 to 32767			ro	NET	17-7
P0682	Serial/USB Control	Bit 0 = Ramp Enable Bit 1 = General Enable Bit 2 = Run Forward Bit 3 = JOG Enable Bit 4 = Remote Bit 5 = 2 nd Ramp Bit 6 = Quick Stop Bit 7 = Fault Reset Bit 8 to 15 = Reserved			ro	NET	7-14
P0683	Serial/USB Ref. Speed	-32768 to 32767			ro	NET	17-3
P0684	CO/DN Control	See options in P0682			ro	NET	7-14
P0685	CO/DN Speed Ref	-32768 to 32767			ro	NET	17-3

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0690	Logical Status 2	Bit 0 to 3 = Reserved Bit 4 = Force Low Fs Bit 5 = Sleep Mode Bit 6 = Deceleration Ramp Bit 7 = Acceleration Ramp Bit 8 = Freeze Ramp Bit 9 = Setpoint Ok Bit 10 = DC Link Regulation Bit 11 = 50 Hz Config. Bit 12 = Ride-Through Bit 13 = Flying Start Bit 14 = DC Braking Bit 15 = PWM			ro	READ, NET	7-14
P0695	DOx Value	Bit 0 = DO1 Bit 1 = DO2 Bit 2 = DO3 Bit 3 = DO4 Bit 4 = DO5			ro	NET	17-7
P0696	AOx Value 1	-32768 to 32767			ro	NET	17-7
P0697	AOx Value 2	-32768 to 32767			ro	NET	17-7
P0698	AOx Value 3	-32768 to 32767			ro	NET	17-7
P0700	CAN Protocol	1 = CANopen 2 = DeviceNet	2			NET	17-3
P0701	CAN Address	0 to 127	63			NET	17-3
P0702	CAN Baud Rate	0 = 1 Mbps/Auto 1 = Reserved/Auto 2 = 500 Kbps 3 = 250 Kbps 4 = 125 Kbps 5 = 100 Kbps/Auto 6 = 50 Kbps/Auto 7 = 20 Kbps/Auto 8 = 10 Kbps/Auto	0			NET	17-3
P0703	Bus Off Reset	0 = Manual 1 = Automatic	0			NET	17-3
P0705	CAN Controller Status	0 = Disable 1 = Auto-baud 2 = CAN Enabled 3 = Warning 4 = Error Passive 5 = Bus Off 6 = No Bus Power			ro	NET	17-3
P0706	RX CAN Telegrams	0 to 65535			ro	NET	17-4
P0707	TX CAN Telegrams	0 to 65535			ro	NET	17-4
P0708	Bus Off Counter	0 to 65535			ro	NET	17-4
P0709	CAN Lost Messages	0 to 65535			ro	NET	17-4
P0710	DNet I/O instances	0 = ODVA Basic 2W 1 = ODVA Extend 2W 2 = Manuf. Spec. 2W 3 = Manuf. Spec. 3W 4 = Manuf. Spec. 4W 5 = Manuf. Spec. 5W 6 = Manuf. Spec. 6W	0			NET	17-4
P0711	DeviceNet Reading #3	0 to 1199	0			NET	17-4
P0712	DeviceNet Reading #4	0 to 1199	0			NET	17-4
P0713	DeviceNet Reading #5	0 to 1199	0			NET	17-4
P0714	DeviceNet Reading #6	0 to 1199	0			NET	17-4
P0715	DeviceNet Writing #3	0 to 1199	0			NET	17-4
P0716	DeviceNet Writing #4	0 to 1199	0			NET	17-4
P0717	DeviceNet Writing #5	0 to 1199	0			NET	17-4
P0718	DeviceNet Writing #6	0 to 1199	0			NET	17-4

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0719	DNet Network Status	0 = Offline 1 = Online, Not Conn. 2 = Online, Connect. 3 = Conn. Timed out 4 = Link Failure 5 = Auto-Baud			ro	NET	17-4
P0720	DNet Master Status	0 = Run 1 = Idle			ro	NET	17-4
P0721	CANopen Comm. Status	0 = Disabled 1 = Reserved 2 = Comm. Enabled 3 = Error Ctrl. Enab 4 = Guarding Error 5 = Heartbeat Error			ro	NET	17-4
P0722	CANopen Node State	0 = Disabled 1 = Initialization 2 = Stopped 3 = Operational 4 = Preoperational			ro	NET	17-4
P0740	Profibus Comm. Status	0 = Disabled 1 = Access Error 2 = Offline 3 = Config. Error 4 = Param. Error 5 = Clear Mode 6 = Online			ro	NET	17-4
P0741	Profibus Data Profile	0 = PROFIdrive 1 = Manufacturer	1			NET	17-4
P0742	Profibus Reading #3	0 to 1199	0			NET	17-4
P0743	Profibus Reading #4	0 to 1199	0			NET	17-4
P0744	Profibus Reading #5	0 to 1199	0			NET	17-4
P0745	Profibus Reading #6	0 to 1199	0			NET	17-5
P0746	Profibus Reading #7	0 to 1199	0			NET	17-5
P0747	Profibus Reading #8	0 to 1199	0			NET	17-5
P0750	Profibus Writing #3	0 to 1199	0			NET	17-5
P0751	Profibus Writing #4	0 to 1199	0			NET	17-5
P0752	Profibus Writing #5	0 to 1199	0			NET	17-5
P0753	Profibus Writing #6	0 to 1199	0			NET	17-5
P0754	Profibus Writing #7	0 to 1199	0			NET	17-5
P0755	Profibus Writing #8	0 to 1199	0			NET	17-5
P0800	Eth: Module Identification	0 = Not Identified 1 = Modbus TCP 2 = EtherNet/IP 3 = PROFINET IO			ro	READ, NET	17-5
P0801	Eth: Communication Status	0 = Setup 1 = Init 2 = Wait Comm 3 = Idle 4 = Data Active 5 = Error 6 = Reserved 7 = Exception 8 = Access Error			ro	READ, NET	17-5
P0803	Eth: Baud Rate	0 = Auto 1 = 10 Mbit, Half Duplex 2 = 10 Mbit, Full Duplex 3 = 100 Mbit, Half Duplex 4 = 100 Mbit, Full Duplex	0			NET	17-5
P0806	Eth: Modbus TCP Timeout	0.0 to 65.5	0,0			NET	17-5
P0810	Eth: IP Address Config	0 = Parameters 1 = DHCP	1			NET	17-5

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0811	Eth: IP Address 1	0 to 255	192			NET	17-5
P0812	Eth: IP Address 2	0 to 255	168			NET	17-5
P0813	Eth: IP Address 3	0 to 255	0			NET	17-5
P0814	Eth: IP Address 4	0 to 255	14			NET	17-5
P0815	Eth: CIDR Sub-net	1 to 31	24			NET	17-6
P0816	Eth: Gateway 1	0 to 255	0			NET	17-6
P0817	Eth: Gateway 2	0 to 255	0			NET	17-6
P0818	Eth: Gateway 3	0 to 255	0			NET	17-6
P0819	Eth: Gateway 4	0 to 255	0			NET	17-6
P0820	Eth: Read Word #3	0 to 9999	0			NET	17-6
P0821	Eth: Read Word #4	0 to 9999	0			NET	17-6
P0822	Eth: Read Word #5	0 to 9999	0			NET	17-6
P0823	Eth: Read Word #6	0 to 9999	0			NET	17-6
P0824	Eth: Read Word #7	0 to 9999	0			NET	17-6
P0825	Eth: Read Word #8	0 to 9999	0			NET	17-6
P0826	Eth: Read Word #9	0 to 9999	0			NET	17-6
P0827	Eth: Read Word #10	0 to 9999	0			NET	17-6
P0828	Eth: Read Word #11	0 to 9999	0			NET	17-6
P0829	Eth: Read Word #12	0 to 9999	0			NET	17-6
P0830	Eth: Read Word #13	0 to 9999	0			NET	17-6
P0831	Eth: Read Word #14	0 to 9999	0			NET	17-6
P0835	Eth: Write Word #3	0 to 9999	0			NET	17-6
P0836	Eth: Write Word #4	0 to 9999	0			NET	17-6
P0837	Eth: Write Word #5	0 to 9999	0			NET	17-6
P0838	Eth: Write Word #6	0 to 9999	0			NET	17-6
P0839	Eth: Write Word #7	0 to 9999	0			NET	17-6
P0840	Eth: Write Word #8	0 to 9999	0			NET	17-6
P0841	Eth: Write Word #9	0 to 9999	0			NET	17-6
P0842	Eth: Write Word #10	0 to 9999	0			NET	17-6
P0843	Eth: Write Word #11	0 to 9999	0			NET	17-7
P0844	Eth: Write Word #12	0 to 9999	0			NET	17-7
P0845	Eth: Write Word #13	0 to 9999	0			NET	17-7
P0846	Eth: Write Word #14	0 to 9999	0			NET	17-7
P0849	Eth: Configuration Update	0 = Normal Operation 1 = Configuration Update	0			NET	17-7
P0918	Profibus Address	1 to 126	1			NET	17-5
P0922	Profibus Teleg. Sel.	2 = Std. Teleg. 1 3 = Telegram 103 4 = Telegram 104 5 = Telegram 105 6 = Telegram 106 7 = Telegram 107 8 = Telegram 108	2			NET	17-5
P0963	Profibus Baud Rate	0 = 9.6 kbit/s 1 = 19.2 kbit/s 2 = 93.75 kbit/s 3 = 187.5 kbit/s 4 = 500 kbit/s 5 = Not Detected 6 = 1500 kbit/s 7 = 3000 kbit/s 8 = 6000 kbit/s 9 = 12000 kbit/s 10 = Reserved 11 = 45.45 kbit/s			ro	NET	17-5

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P0967	Control Word 1	Bit 0 = ON Bit 1 = No Coast Stop Bit 2 = No Quick Stop Bit 3 = Enable Operation Bit 4 = Enable Ramp Generator Bit 5 = Reserved Bit 6 = Enable Setpoint Bit 7 = Fault Acknowledge Bit 8 = JOG 1 ON Bit 9 = Reserved Bit 10 = Control by PLC Bit 11 to 15 = Reserved			ro	NET	17-5
P0968	Status Word 1	Bit 0 = Ready to Switch ON Bit 1 = Ready to Operate Bit 2 = Operation Enabled Bit 3 = Fault Present Bit 4 = Coast Stop Not Active Bit 5 = Quick Stop Not Active Bit 6 = Switching ON Inhibited Bit 7 = Warning Present Bit 8 = Reserved Bit 9 = Control Requested Bit 10 to 15 = Reserved			ro	NET	17-5
P1000	SoftPLC Status	0 = No Application 1 = Installing App. 2 = Incompatible App. 3 = Stopped App. 4 = App. Running			ro	READ, SPLC	18-1
P1001	SoftPLC Command	0 = Stop Program 1 = Run Program 2 = Delete Program	0			SPLC	18-1
P1002	Scan Cycle Time	0 to 65535 ms			ro	READ, SPLC	18-1
P1004	Area for SoftPLC Application not Running	0 = Inactive 1 = Generate Alarm 2 = Generate Fault	0		cfg	SPLC	18-2
P1010	SoftPLC Parameter 1	-32768 to 32767	0			SPLC	18-2
P1011	SoftPLC Parameter 2	-32768 to 32767	0			SPLC	18-2
P1012	SoftPLC Parameter 3	-32768 to 32767	0			SPLC	18-2
P1013	SoftPLC Parameter 4	-32768 to 32767	0			SPLC	18-2
P1014	SoftPLC Parameter 5	-32768 to 32767	0			SPLC	18-2
P1015	SoftPLC Parameter 6	-32768 to 32767	0			SPLC	18-2
P1016	SoftPLC Parameter 7	-32768 to 32767	0			SPLC	18-2
P1017	SoftPLC Parameter 8	-32768 to 32767	0			SPLC	18-2
P1018	SoftPLC Parameter 9	-32768 to 32767	0			SPLC	18-2
P1019	SoftPLC Parameter 10	-32768 to 32767	0			SPLC	18-2
P1020	SoftPLC Parameter 11	-32768 to 32767	0			SPLC	18-2
P1021	SoftPLC Parameter 12	-32768 to 32767	0			SPLC	18-2
P1022	SoftPLC Parameter 13	-32768 to 32767	0			SPLC	18-2
P1023	SoftPLC Parameter 14	-32768 to 32767	0			SPLC	18-2
P1024	SoftPLC Parameter 15	-32768 to 32767	0			SPLC	18-2
P1025	SoftPLC Parameter 16	-32768 to 32767	0			SPLC	18-2
P1026	SoftPLC Parameter 17	-32768 to 32767	0			SPLC	18-2
P1027	SoftPLC Parameter 18	-32768 to 32767	0			SPLC	18-2
P1028	SoftPLC Parameter 19	-32768 to 32767	0			SPLC	18-2
P1029	SoftPLC Parameter 20	-32768 to 32767	0			SPLC	18-2
P1030	SoftPLC Parameter 21	-32768 to 32767	0			SPLC	18-2
P1031	SoftPLC Parameter 22	-32768 to 32767	0			SPLC	18-2
P1032	SoftPLC Parameter 23	-32768 to 32767	0			SPLC	18-2

Parameter	Description	Adjustable Range	Factory Setting	User Setting	Properties	Groups	Page
P1033	SoftPLC Parameter 24	-32768 to 32767	0			SPLC	18-2
P1034	SoftPLC Parameter 25	-32768 to 32767	0			SPLC	18-2
P1035	SoftPLC Parameter 26	-32768 to 32767	0			SPLC	18-2
P1036	SoftPLC Parameter 27	-32768 to 32767	0			SPLC	18-2
P1037	SoftPLC Parameter 28	-32768 to 32767	0			SPLC	18-2
P1038	SoftPLC Parameter 29	-32768 to 32767	0			SPLC	18-2
P1039	SoftPLC Parameter 30	-32768 to 32767	0			SPLC	18-2
P1040	SoftPLC Parameter 31	-32768 to 32767	0			SPLC	18-2
P1041	SoftPLC Parameter 32	-32768 to 32767	0			SPLC	18-2
P1042	SoftPLC Parameter 33	-32768 to 32767	0			SPLC	18-2
P1043	SoftPLC Parameter 34	-32768 to 32767	0			SPLC	18-2
P1044	SoftPLC Parameter 35	-32768 to 32767	0			SPLC	18-2
P1045	SoftPLC Parameter 36	-32768 to 32767	0			SPLC	18-2
P1046	SoftPLC Parameter 37	-32768 to 32767	0			SPLC	18-2
P1047	SoftPLC Parameter 38	-32768 to 32767	0			SPLC	18-2
P1048	SoftPLC Parameter 39	-32768 to 32767	0			SPLC	18-2
P1049	SoftPLC Parameter 40	-32768 to 32767	0			SPLC	18-2
P1050	SoftPLC Parameter 41	-32768 to 32767	0			SPLC	18-2
P1051	SoftPLC Parameter 42	-32768 to 32767	0			SPLC	18-2
P1052	SoftPLC Parameter 43	-32768 to 32767	0			SPLC	18-2
P1053	SoftPLC Parameter 44	-32768 to 32767	0			SPLC	18-2
P1054	SoftPLC Parameter 45	-32768 to 32767	0			SPLC	18-2
P1055	SoftPLC Parameter 46	-32768 to 32767	0			SPLC	18-2
P1056	SoftPLC Parameter 47	-32768 to 32767	0			SPLC	18-2
P1057	SoftPLC Parameter 48	-32768 to 32767	0			SPLC	18-2
P1058	SoftPLC Parameter 49	-32768 to 32767	0			SPLC	18-2
P1059	SoftPLC Parameter 50	-32768 to 32767	0			SPLC	18-2

ro = Read only parameter.

V/f = Parameter available in V/f mode.

cfg = Configuration parameter, value can only be changed with the motor stopped.

VVW = Parameter available in VVW mode.

Fault / Alarm	Description	Possible Causes
A0046 Motor Overload	Motor overload alarm.	<ul style="list-style-type: none"> Overload on the motor shaft.
A0047 IGBT Overload	Overload alarm on the power pack with IGBTs.	<ul style="list-style-type: none"> Inverter output overcurrent.
A0050 Power Module Overtemperature	Overtemperature alarm from the power module temperature sensor (NTC).	<ul style="list-style-type: none"> High ambient temperature around the inverter (> 50 °C (> 122 °F)) and high output current. Blocked or defective fan. Heatsink is too dirty, preventing the air flow.
A0090 External Alarm	External alarm via DlX (option "No External Alarm" in P026x).	<ul style="list-style-type: none"> Wiring on DI1 to DI8 inputs are open or have poor contact.
A0128 Telegram Reception Timeout	Alarm that indicates serial communication fault. It indicates the equipment stopped receiving valid serial telegrams for a period longer than the setting in P0314.	<ul style="list-style-type: none"> Check network installation, broken cable or fault/poor contact on the connections with the network, grounding. Ensure the master always sends telegrams to the equipment in a time shorter than the setting in P0314. Disable this function in P0314.
A0133 No Supply on CAN Interface	It indicates that the CAN interface has no supply between pins 1 and 5 of the connector.	<ul style="list-style-type: none"> Measure if there is voltage within the allowed range between the pins 1 and 5 of the CAN interface connector. Check if the supply cables are not misconnected or inverted. Check for contact problems on the cable or connector of the CAN interface.
A0134 Bus Off	Bus off error detected on the CAN interface.	<ul style="list-style-type: none"> Check for short circuit on the CAN circuit transmission cable. Check if the cables are not misconnected or inverted. Check if all the network devices use the same baud rate. Check if the termination resistors with the right value were installed only at the end of the main bus. Check if the CAN network was properly installed.
A0135 Node Guarding/ Heartbeat	CANopen communication error control detected communication error using the guarding mechanism.	<ul style="list-style-type: none"> Check the times set on the master and on the slave to exchange messages. In order to prevent problems due to transmission delays and time counting, it is recommended that the values set for error detection by the slave be multiples of the times set for message exchange on the master. Check if the master is sending the guarding telegrams in the time set. Check the problems in the communications that may cause missing telegrams or transmission delays.
A0136 Idle Master	Alarm indicates that the DeviceNet network master is in idle mode.	<ul style="list-style-type: none"> Set the switch that controls the master operation for Run or the corresponding bit on the configuration word of the master software. If further information is needed, refer to the documentation of the master used.
A0137 DeviceNet Connection Timeout	Alarm that indicates that one or more DeviceNet connections timed out.	<ul style="list-style-type: none"> Check the network master status. Check network installation, broken cable or fault/poor contact on the connections with the network.
A0138 Profibus DP Interface in Clear Mode	It indicates that the inverter received the command from the Profibus DP network master to go into clear mode.	<ul style="list-style-type: none"> Check the network master status, ensuring it is in the run mode.
A0139 Profibus DP Interface Offline	It indicates interruption in the communication between the Profibus DP network and the inverter. The Profibus DP communication interface went into offline status.	<ul style="list-style-type: none"> Check if the network master is correctly configured and operating properly. Check for short circuit or poor contact on the communication cables. Check if the cables are not misconnected or inverted. Check if the termination resistors with the right value were installed only at the end of the main bus. Check the network installation in general – cabling, grounding.
A0140 Profibus DP Module Access Error	It indicates error in the access to the Profibus DP communication module data.	<ul style="list-style-type: none"> Check if the Profibus DP module is correctly fitted. Hardware errors due to improper handling or installation of the accessory, for instance, may cause this error. If possible, carry out tests by replacing the communication accessory.
A0163 Signal Fault Alx 4 to 20 mA	It indicates that Alx (AI1, AI2 or AI3) current (4-20 mA or 20-4 mA) is out of range (< 2 mA).	<ul style="list-style-type: none"> Broken Alx cable. Bad contact at Alx signal connection is to the terminal strip. Wrong setting of Alx parameters.
A0177 Fan Replacement	Internal fan with speed (P0036) under 2/3 of rated fan speed.	<ul style="list-style-type: none"> Internal fan failure.
A0700 Communication Fault with Remote HMI	No communication with remote HMI, but there is no speed command or reference for this source.	<ul style="list-style-type: none"> Check if the communication interface with the HMI is properly configured in parameter P0312. HMI cable disconnected.

Fault / Alarm	Description	Possible Causes
A0701 Force HMI	"Force HMI" DIP-SWITCH is active.	<ul style="list-style-type: none"> ■ Set P0312 for HMI protocol before disable "Force HMI" DIP-SWITCH. ■ Disable "Force HMI" DIP-SWITCH only.
A0702 Inverter Disabled	This failure occurs when there is a SoftPLC movement block (REF block) active and the "General Enable" command is disabled.	<ul style="list-style-type: none"> ■ Check if the drive general enable command is active.
A0704 Two mov. Enabled	It occurs when 2 or more SoftPLC movement blocks (REF Block) are enabled at the same time.	<ul style="list-style-type: none"> ■ Check the user's program logic.
A0706 Refer. Not Prog. SPLC	This failure occurs when a SoftPLC movement block is enabled and the speed reference is not programmed for the SoftPLC.	<ul style="list-style-type: none"> ■ Check the programming of the references in the Local and/or Remote mode (P0221 and P0222).
A0710 SPLC Prog. Bigger than 8 KB	This failure occurs when the user tries to download a SoftPLC program bigger than 8 Kb.	<ul style="list-style-type: none"> ■ Extension of the SoftPLC prog. exceeded 8 KBytes.
F0021 Undervoltage on the DC Link	Undervoltage fault on the intermediate circuit.	<ul style="list-style-type: none"> ■ Wrong voltage supply; check if the data on the inverter label complies with the power supply and parameter P0296. ■ Supply voltage too low, producing voltage on the DC link below the minimum value (in P0004): <ul style="list-style-type: none"> Ud < 200 Vdc in 200-240 Vac (P0296 = 0). Ud < 360 Vdc in 380-480 Vac (P0296 = 1). Ud < 500 Vdc in 500-600 Vac (P0296 = 2). ■ Phase fault in the input. ■ Fault in the pre-charge circuit.
F0022 Overvoltage on the DC Link	Overvoltage fault on the intermediate circuit.	<ul style="list-style-type: none"> ■ Wrong voltage supply; check if the data on the inverter label complies with the power supply and parameter P0296. ■ Supply voltage is too high, producing voltage on the DC link above the maximum value (in P0004): <ul style="list-style-type: none"> Ud > 410 Vdc in 200-240 Vac (P0296 = 0). Ud > 810 Vdc in 380-480 Vac (P0296 = 1). Ud > 1000 Vdc in 500-600 Vac (P0296 = 2). ■ Load inertia is too high or deceleration ramp is too fast. ■ P0151 or P0153 setting is too high.
F0031 Communication Fault with Plug-in Module	Main control cannot set a communication link with the plug-in module.	<ul style="list-style-type: none"> ■ Plug-in module is damaged. ■ Plug-in module is not properly connected. ■ Problem in the identification of the plug-in module; refer to P0027 for further information.
F0033 VVW Self-tuning Fault	Stator resistance setting fault P0409.	<ul style="list-style-type: none"> ■ Stator resistance value in P0409 does not comply with the inverter power. ■ Motor connection error; turn off the power supply and check the motor terminal box and the connections with the motor terminals. ■ Motor power too low or too high in relation to the inverter.
F0048 Overload on the IGBTs	Overload fault on the power pack with IGBTs (3 s in 1.5 x Inom).	<ul style="list-style-type: none"> ■ Inverter output overcurrent (>2 x Inom).
F0051 IGBTs Overtemperature	Overtemperature fault measured on the temperature sensor of the power pack.	<ul style="list-style-type: none"> ■ High ambient temperature around the inverter (>50 °C (>122 °F)) and high output current. ■ Blocked or defective fan. ■ Heatsink is too dirty, preventing the air flow.
F0068 Motor Overtemperature (dedicated input)	Overtemperature fault measured on the motor temperature sensor (Triple PTC) via dedicated circuitry in the power scheme.	<ul style="list-style-type: none"> ■ Overload on the motor shaft. ■ Load cycle is too high (high number of starts and stops per minute). ■ High ambient temperature around the motor. ■ Poor contact (3 kΩ < RPTC). ■ Motor thermistor not installed. ■ Motor shaft is stuck.
F0070 Overcurrent/Short Circuit	Overcurrent or short circuit on the output, DC link or braking resistor.	<ul style="list-style-type: none"> ■ Short circuit between two motor phases. ■ Short circuit of the rheostatic braking resistor connecting cables. ■ IGBTs module in short circuit or damaged. ■ Start with too short acceleration ramp. ■ Start with motor spinning without the Flying Start function.
F0072 Motor Overload	Motor Overload Fault (60 s in 1.5 x Inom).	<ul style="list-style-type: none"> ■ P0156, P0157 and P0158 setting is too low in relation to the motor operating current. ■ Overload on the motor shaft.
F0074 Ground Fault	Ground overcurrent fault. Note: It can be disabled by setting bit 0 of P0343 to 0.	<ul style="list-style-type: none"> ■ Short circuit to the ground in one or more output phases. ■ Motor cable capacitance too high, causing current peaks in the output.

Fault / Alarm	Description	Possible Causes
F0076 Motor Connection Lost	There is an input phase fault or unbalanced 3 phase input power supply.	<ul style="list-style-type: none"> Bad motor connection to the drive. Motor connection is broken.
F0078 Motor Overtemperature	Overtemperature fault measured on the motor temperature sensor (Triple PTC) via analog input Alx or digital input Dlx.	<ul style="list-style-type: none"> Overload on the motor shaft. Load cycle is too high (high number of starts and stops per minute). High ambient temperature around the motor. Poor contact or short circuit. Motor thermistor not installed. Motor shaft is stuck.
F0079 Encoder Signal Fault	Failure of absence of encoder signals.	<ul style="list-style-type: none"> Wiring between encoder and the accessory interface encoder interrupted. Defective encoder.
F0080 CPU Fault (Watchdog)	Fault related to the supervision algorithm.	<ul style="list-style-type: none"> Electric noise. Inverter firmware fault.
F0084 Auto-diagnosis Fault	Fault related to the automatic identification algorithm of the inverter hardware and plug-in module.	<ul style="list-style-type: none"> Poor contact in the connection between the main control and the power pack. Hardware not compatible with the firmware version. Defect on the internal circuits of the inverter.
F0085 Plug-in Module Will not Start	Failure in the initialization of the plug-in module.	<ul style="list-style-type: none"> Defect on the plug-in module. Poor contact on the connections of the plug-in module to the inverter. Plug-in module without firmware.
F0091 External Fault	External fault via Dlx ("No External Fault" in P026x).	<ul style="list-style-type: none"> Wiring on DI1 to DI8 inputs are open or have poor contact.
F0151 Incomp. Main sw Version	Main firmware version is different from the plug-in firmware version.	<ul style="list-style-type: none"> Blank memory on plug-in module (1st power-up). Data backup fault during power-down.
F0179 Fan Low Speed	Internal fan with speed (P0036) under 2/3 of rated fan speed.	<ul style="list-style-type: none"> Internal fan failure.
F0182 Pulse Feedback Fault	Pulse feedback circuit fault of the output voltage. Note: it may be turned off in P0397.	<ul style="list-style-type: none"> Hardware identification fault; compare P0295 and P0296 to the inverter identification label. Inverter internal circuits fault.
F0228 Telegram Reception Timeout	It indicates serial communication fault. It indicates the equipment stopped receiving valid serial telegrams for a period longer than the setting in P0314.	<ul style="list-style-type: none"> Pulse feedback input circuit fault. Check network installation, broken cable or fault/poor contact on the connections with the network, grounding. Ensure the master always sends telegrams to the equipment in a time shorter than the setting in P0314. Disable this function in P0314.
F0233 No Supply on CAN Interface	This failure indicates that the CAN interface has no supply between pins 1 and 5 of the connector.	<ul style="list-style-type: none"> Measure if there is voltage within the allowed range between the pins 1 and 5 of the CAN interface connector. Check if the supply cables are not misconnected or inverted. Check for contact problems on the cable or connector of the CAN interface.
F0234 Bus Off	Bus off error detected on the CAN interface.	<ul style="list-style-type: none"> Check for short circuit on the CAN circuit transmission cable. Check if the cables are not misconnected or inverted. Check if all the network devices use the same baud rate. Check if the termination resistors are with correct values and have been installed only at the end of the main bus. Check if the CAN network was properly installed.
F0235 Node Guarding/Heartbeat	CANopen communication error control detected communication error using the guarding mechanism.	<ul style="list-style-type: none"> Check the times set on the master and on the slave to exchange messages. In order to prevent problems due to transmission delays and time counting, it is recommended that the values set for error detection by the slave be multiples of the times set for message exchange on the master. Check if the master is sending the guarding telegrams in the time set. Check the problems in the communications that may cause missing telegrams or transmission delays.
F0236 Idle Master	Fault indicates that the DeviceNet network master is in idle mode.	<ul style="list-style-type: none"> Set the switch that controls the master operation for Run or the corresponding bit on the configuration word of the master software. If further information is needed, refer to the documentation of the master used.
F0237 DeviceNet Connection Timeout	Fault that indicates that one or more DeviceNet connections timed out.	<ul style="list-style-type: none"> Check the network master status. Check network installation, broken cable or fault/poor contact on the connections with the network.
F0238 Profibus DP Interface in Clear Mode	It indicates that the inverter received the command from the Profibus DP network master to go into clear mode.	<ul style="list-style-type: none"> Check the network master status, ensuring it is in the run mode.

Fault / Alarm	Description	Possible Causes
F0239 Profibus DP Interface Offline	It indicates interruption in the communication between the Profibus DP network and the inverter. The Profibus DP communication interface went into offline status.	<ul style="list-style-type: none"> ■ Check if the network master is correctly configured and operating properly. ■ Check for short circuit or poor contact on the communication cables. ■ Check if the cables are not misconnected or inverted. ■ Check if the termination resistors with the right value were installed only at the end of the main bus. ■ Check the network installation in general – cabling, grounding.
F0240 Profibus DP Module Access Fault	It indicates fault in the access to the Profibus DP communication module data.	<ul style="list-style-type: none"> ■ Check if the Profibus DP module is correctly fitted. ■ Hardware errors due to improper handling or installation of the accessory, for instance, may cause this fault. If possible, carry out tests by replacing the communication accessory.
F0700 Remote HMI Communication Fault	No communication with remote HMI, but there is no speed command or reference for this source.	<ul style="list-style-type: none"> ■ Check if the communication interface with the HMI is properly configured in parameter P0312. ■ HMI cable disconnected.
F0710 SoftPLC Oversize	The SoftPLC user program size exceeds internal memory space.	<ul style="list-style-type: none"> ■ The user application logic is too large, more than 8 kB.
F0711 SoftPLC Program Failure	There is some failure in the SoftPLC user program.	<ul style="list-style-type: none"> ■ The SoftPLC user program is corrupted. ■ There was a timeout in the SoftPLC scan.

Table 0.1: Situations for CONFIG status

P0047	Origin Situation of CONFIG Status
0	Out of CONFIG status, HMI, P0006 and P0680 must not indicate CONF.
1	Two or more Dlx (P0263...P0270) programmed for Forward Run (4).
2	Two or more Dlx (P0263...P0270) programmed for Reverse Run (5).
3	Two or more Dlx (P0263...P0270) programmed for Start (6).
4	Two or more Dlx (P0263...P0270) programmed for Stop (7).
5	Two or more Dlx (P0263...P0270) set to Direction or Rotation (8). DI set to direction of rotation with Forward Run (4) or Reverse Run (5) DI, simultaneously.
6	Two or more Dlx (P0263...P0270) programmed for LOC/REM (9).
7	Two or more Dlx (P0263...P0270) programmed for Accelerate E.P. (11).
8	Two or more Dlx (P0263...P0270) programmed for Decelerate E.P. (12).
9	Two or more Dlx (P0263...P0270) programmed for 2 nd Ramp (14).
10	Two or more Dlx (P0263...P0270) programmed for PID Man./Auto (22).
11	Two or more Dlx (P0263...P0270) programmed for Disable Flying Start (24).
12	Two or more Dlx (P0263...P0270) programmed for Lock Programming (26).
13	Two or more Dlx (P0263...P0270) programmed for Load User 1 (27).
14	Two or more Dlx (P0263...P0270) programmed for Load User 2 (28).
15	Dlx (P0263...P0270) programmed for Forward Run (4) without Dlx (P0263...P0270) programmed for Reverse Run (5) or the opposite.
16	Dlx (P0263...P0270) programmed for Start (6) without Dlx (P0263...P0270) programmed for Stop (7) or the opposite.
17	Reference (P0221 or P0222) programmed for Multispeed (8) without Dlx (P0263...P0270) programmed for Multispeed (13) or the opposite.
18	Reference (P0221 or P0222) programmed for Electronic Potentiometer (7) without Dlx (P0263...P0270) programmed for 11 = Accelerate E.P or the opposite.
19	Run/Stop command (P0224 or P0227) programmed for Dlx (1) without Dlx (P0263...P0270) programmed for (1 = Run/Stop) and without Dlx (P0263...P0270) programmed for General Enable (2) and without Dlx (P0263...P0270) programmed for Quick Stop (3) and without Dlx (P0263...P0270) programmed for Forward Run (4) and without Dlx (P0263...P0270) programmed for Start (6).
20	Digital input DI2 (P0264) programmed for PTC (29) or analog input AI3 (P0241) programmed for PTC (4).
21	P0203 programmed for PID via AI1 (1) and reference (P0221 or P0222) programmed for AI1 (1).
22	P0203 programmed for PID via AI3 (2) and reference (P0221 or P0222) programmed for AI3 (3).
23	P0203 programmed for PID via FI (3) and reference (P0221 or P0222) programmed for FI (4).
24	P0203 programmed for PID via AI3 (2) and the plug-in module has no AI3.
25	Reference (P0221 or P0222) programmed for AI2 (2) or AI3 (3) and the plug-in module has no AI2 and AI3.
26	P0312 programmed for Remote HMI (0 or 6) without HMI connected.
27	Poor configuration of the V/f curve (P0142 to P0147 causes voltage step in the output).
28	Reserved.
29	Reserved.
30	Oriented Start-Up is active.
31	Vector control is active with one of the motor parameters (P0409, P0410, P0411, P0412, or P0413) in zero.
32	Two or more Dlx programmed for Multispeed MS2 (DI1, DI2, DI5 and DI6) or MS1 (DI3 and DI7) or MS0 (DI4 and DI8).

1 SAFETY INSTRUCTIONS

This manual contains the information necessary for the correct setting of the frequency inverter MW500.

It was developed to be used by people with proper technical training or qualification to operate this kind of equipment. These people must follow the safety instructions defined by local standards. The noncompliance with the safety instructions may result in death risk and/or equipment damage.

1.1 SAFETY WARNINGS IN THIS MANUAL


DANGER!

The procedures recommended in this warning aim at protecting the user against death, serious injuries and considerable material damages.


DANGER!

Les procédures concernées par cet avertissement sont destinées à protéger l'utilisateur contre des dangers mortels, des blessures et des détériorations matérielles importantes.


ATTENTION!

The procedures recommended in this warning aim at preventing material damages.


NOTE!

The text aims at providing important information for the full understanding and proper operation of the product.

1.2 SAFETY WARNINGS IN THE PRODUCT

The following symbols are fixed to the product, as a safety warning:



High voltages present.



Components sensitive to electrostatic discharges.
Do not touch them.



Mandatory connection to the protection grounding (PE).



Connection of the shield to the grounding.



Hot surface.

1.3 PRELIMINARY RECOMMENDATIONS

**DANGER!**

Only qualified personnel, familiar with the MW500 inverter and related equipment must plan or perform the installation, commissioning, operation and maintenance of this equipment.

The personnel must follow the safety instructions described in this manual and/or defined by local standards.

The noncompliance with the safety instructions may result in death risk and/or equipment damage.

**DANGER!**

Seulement personnes avec la qualification adéquate et familiarisation avec le MW500 et équipements associés doivent planifier ou implémenter l'installation, mise en marche, operation et entretien de cet équipement.

Cettes personnes doivent suivre toutes les instructions de sécurités indiquées dans ce manuel, et/ou définies par normes locales.

L'inobservance des instructions de sécurité peut résulter en risque de vie et/ou dommages de cet équipement.

**NOTE!**

For the purposes of this manual, qualified personnel are those trained in order to be able to:

1. Install, ground, power up and operate the MW500 in accordance with this manual and the safety legal procedures in force.
2. Use the protective equipment in accordance with the relevant standards.
3. Give first aid.

**DANGER!**

Always disconnect the general power supply before changing any electric component associated to the inverter.

Many components may remain loaded with high voltages and/or moving (fans), even after the AC power supply input is disconnected or turned off. Wait for at least ten minutes in order to guarantee the full discharge of the capacitors. Always connect the frame of the equipment to the protection grounding (PE) at the proper point for that.

**DANGER!**

Débranchez toujours l'alimentation principale avant d'entrer en contact avec un appareil électrique associé au variateur.

Plusieurs composants peuvent rester chargés à un potentiel électrique élevé et/ou être en mouvement (ventilateurs), même après la déconnexion ou la coupure de l'alimentation en courant alternatif.

Attendez au moins 10 minutes que les condensateurs se déchargent complètement. Raccordez toujours la masse de l'appareil à une terre protectrice (PE).

**ATTENTION!**

The electronic cards have components sensitive to electrostatic discharge. Do not touch directly the component parts or connectors. If necessary, first touch the grounded metallic frame or use proper grounding strap.

**Do not execute any applied potential test on the inverter!
If necessary, contact WEG.**

**NOTE!**

Frequency inverters may interfere in other electronic equipments. Observe the recommendations of Chapter 3 Installation and Connection of the user's manual in order to minimize these effects. Read of the MW500 user's manual completely before installing or operating this inverter.

2 GENERAL INFORMATION

2.1 ABOUT THE MANUAL

This manual presents information necessary for the configuration of all the functions and parameters of the frequency inverter MW500. This manual must be used together with the user's manual of the MW500, available for download on the website: www.weg.net.

The text provides additional information so as to simplify the use and programming of the MW500 in certain applications.

2.2 TERMINOLOGY AND DEFINITIONS

2.2.1 Terms and Definitions Used

I_{nom} : inverter rated current by P0295.

Overload Duty: in the MW500 there is no difference in the operating duty between “Light - Normal Duty” (ND) and “Heavy - Heavy Duty” (HD). Thus, the overload duty adopted for the MW500 is equivalent to the HD standard, that is, the maximum overload current is $1.5 \times I_{nom}$ for one minute of continuous operation.

Rectifier: input circuit of the inverters that transforms the input AC voltage into DC. It is formed by high-power diodes.

IGBT: insulated gate bipolar transistor - basic component part of the output inverter bridge. It works as an electronic switch in the saturated (closed switch) and cut-off (open switch) modes.

DC Link: intermediary circuit of the inverter; voltage in direct current obtained by rectifying the power supply alternate voltage or external supply; it supplies the output inverter bridge with IGBTs.

Pre-Charge Circuit: charges the capacitors of the DC link with limited current, avoiding current peaks in the inverter power-up.

Braking IGBT: it works as a switch to turn on the braking resistor. It is controlled by the DC link level.

PTC: resistor whose resistance value in ohms increases proportionally to the temperature; it is used as a temperature sensor in motors.

NTC: resistor whose resistance value in ohms decreases proportionally to the increase of the temperature; it is used as a temperature sensor in power packs.

HMI: human-machine interface; device which allows controlling the motor, viewing and changing the inverter parameters. It features keys to control the motor, navigation keys and graphic LCD display.

PE: protective earth.

PWM: pulse width modulation - modulation by pulse width; pulsed voltage that supplies the motor.

Switching Frequency: switching frequency of the IGBTs of the inverter bridge, normally expressed in kHz.

General Enable: when activated, it accelerates the motor by acceleration ramp and Run/Stop = Run. When disabled, the PWM pulses will be immediately blocked. It may be controlled by digital input set for this function or via serial.

Run/Stop: inverter function which, when activated (run), accelerates the motor by acceleration ramp up to the reference speed and, when deactivated (stop), decelerates the motor by deceleration ramp. It may be controlled by digital input set for this function or via serial.

Heatsink: metal part designed to dissipate the heat produced by power semiconductors.

Amp, A: ampere.

°C: celsius degrees.

°F: fahrenheit degrees.

CA: alternate current.

DC: direct current.

CV: cavalo-vapor = 736 watts (Brazilian unit of measurement of power, normally used to indicate mechanical power of electric motors).

HP: horse power = 746 watts (unit of measurement of power, normally used to indicate mechanical power of electric motors).

Fmin: minimum frequency or speed (P0133).

Fmax: maximum frequency or speed (P0134).

Dlx: digital Input "x".

Alx: analog input "x".

AOx: analog output "x".

DOx: digital output "x".

Io: output current.

Iu: current on phase u (RMS).

Iv: current on phase v (RMS).

Iw: current on phase w (RMS).

Ia: output active current (RMS).

Hz: hertz.

kHz: kilohertz = 1000 hertz.

mA: milliampere = 0.001 ampere.

min: minute.

ms: millisecond = 0.001 seconds.

Nm: newton meter; unit of torque.

rms: root mean square - effective value.

rpm: revolutions per minute; unit of measurement of rotation.

s: second.

V: volts.

Ω: ohms.

CO/DN/DP/Eth: CANopen, DeviceNet, Profibus DP or Ethernet Interface.

2.2.2 Numerical Representation

The decimal numbers are represented by means of digits without suffix. Hexadecimal numbers are represented with the letter “h” after the number.

3 ABOUT THE MW500

The frequency inverter MW500 is a high performance product which enables speed and torque control of three phase induction motors. The MW500 line is heavily based on the CFW500 family, with added features to allow decentralized installation. This adds a great deal of flexibility, allowing the user to install the product near the controlled motor thus eliminating the need for lengthy runs of high power motor cables. In addition, MW500 has compliance to IP66 / NEMA 4x protection levels, further improving the use cases.

This product provides the user with the options of vector (VVW) or scalar (V/f) control, both programmable according to the application. In the vector mode, the operation is optimized for the used motor, providing a better performance in terms of speed control torque. The “Self-Tuning” function, available for the vector control, allows the automatic setting of control parameters and controllers based on the identification (also automatic) of the motor parameters.


Also, it is possible to reduce the motor and inverter losses by adjusting the V/f curve through the parameters by approximation of quadratic curve of the V/f relationship, which results in energy saving.

Like the CFW500, the MW500 integrates the SoftPLC (Programmable Logic Controller) feature. For further details regarding the programming of those functions, refer to the SoftPLC manual of the CFW500.

Developed to meet the main technological requirements of the market, the MW500 has a plug-in modular interface which adapts to the application. This modular interface is compatible with all the plugin modules available for the CFW500 inverter.


As shown in item 2 of [Figure 3.2 on page 3-3](#), the plug-in module allows the MW500 meeting the requirements of simple applications, as well as applications with high-performance interfaces. All MW500 interface models feature communication in physical media RS485 with Modbus RTU and resources for data transfer via memory card.

The main components of the MW500 can be viewed in the block diagram of [Figure 3.1 on page 3-2](#) and in the drawing of [Figure 3.2 on page 3-3](#). The mechanical project was designed to simplify the connection and maintenance, provide IP66 / Nema 4x protection and ensure the safety of the product.

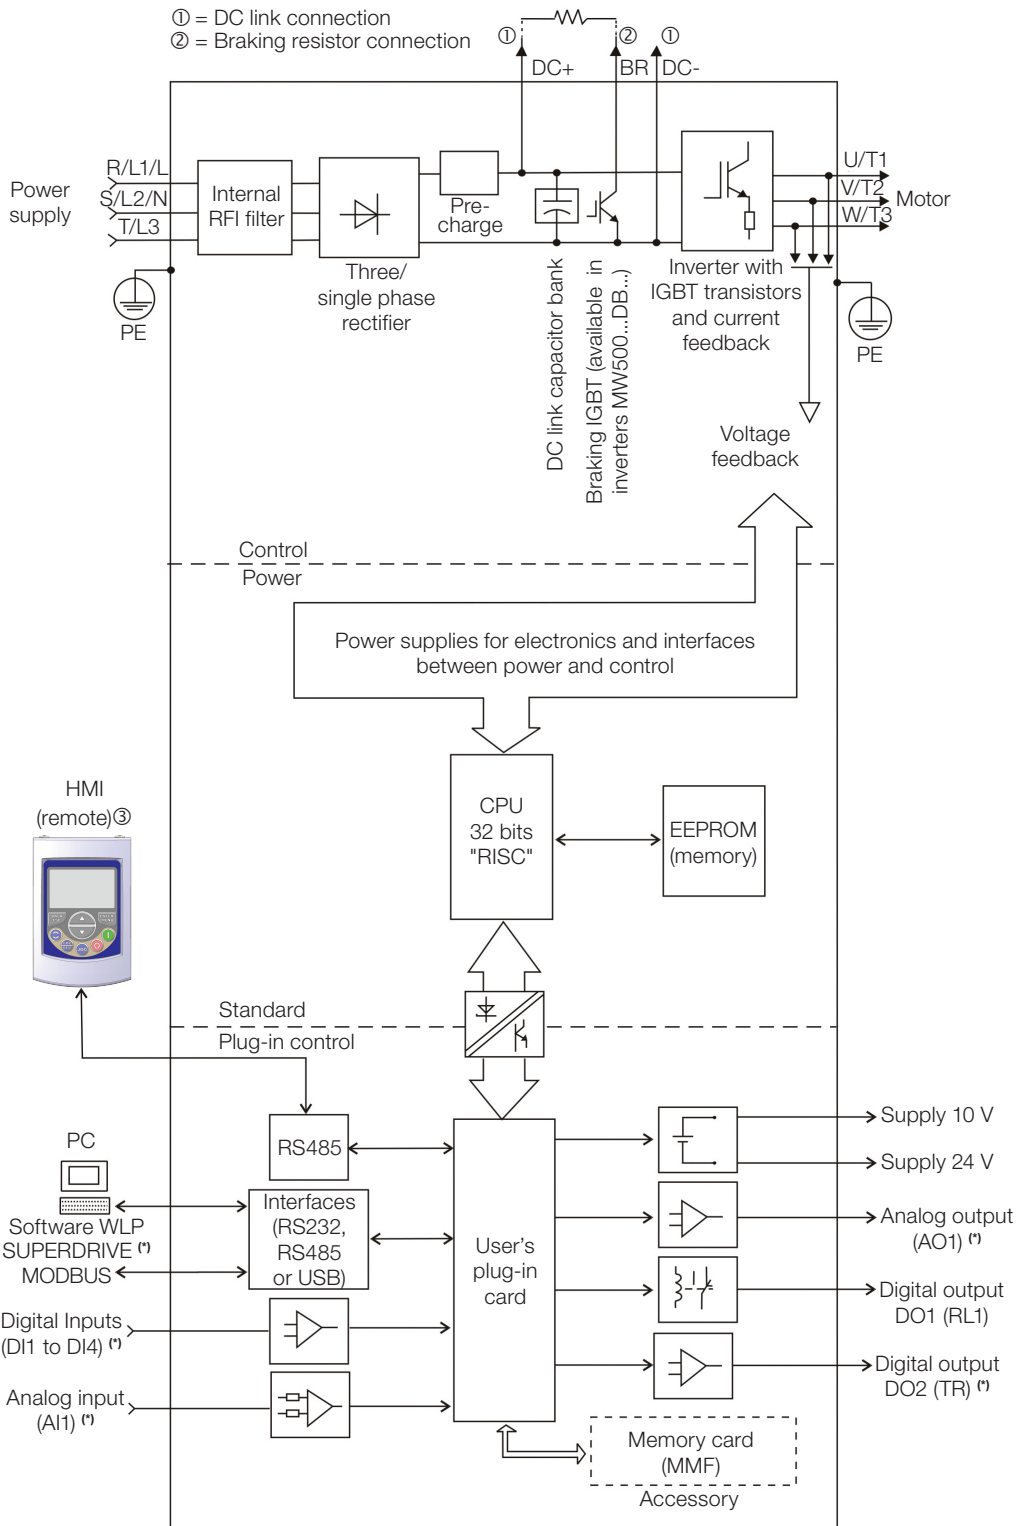

(*) The number of analog and digital inputs and outputs, may vary according to the plug-in used. For further information, refer to the installation, configuration and operation guide of the accessory with plug-in module used.

Figure 3.1: MW500 block diagram

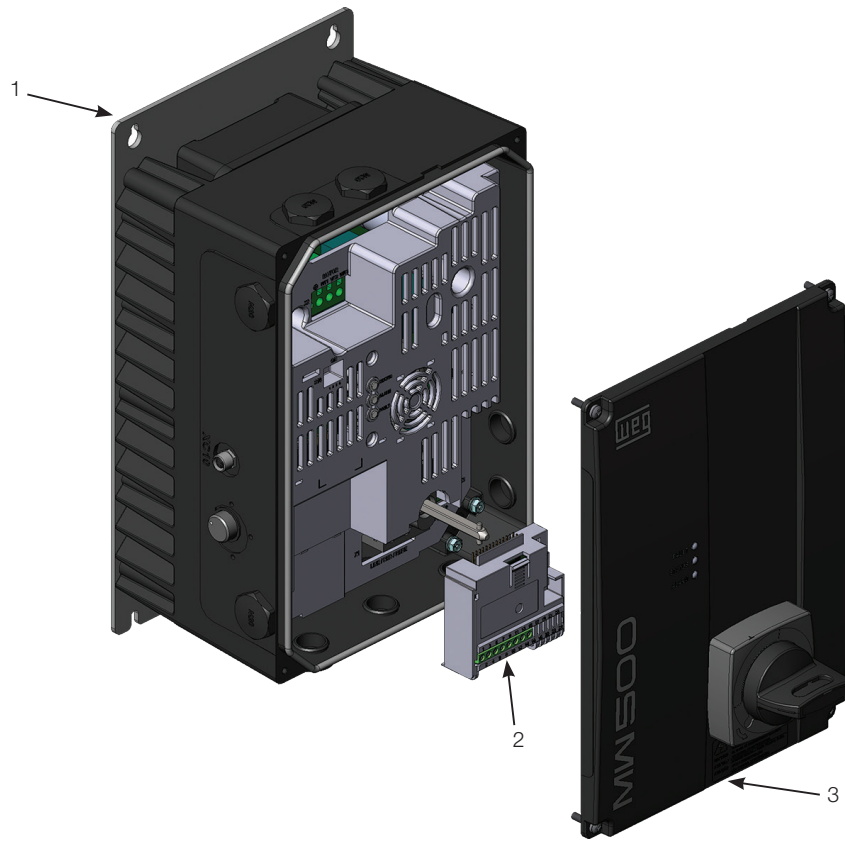

- 1 – Fixing support (for surface mounting).
- 2 – Plug-in module.
- 3 – Front cover.

Figure 3.2: Main components of the MW500

4 HMI AND BASIC PROGRAMMING

4.1 USE OF THE HMI TO OPERATE THE INVERTER

The HMI is not included in the standard MW500 product. The instructions here are valid for using the MW500 with the remote HMI (sold separately). The HMI functionality can be activated directly by "Force HMI DIP switch" see [Item 5.8.4 DIP Switches on page 5-12](#).

Through the HMI, it is possible to view and set all the parameters. The HMI features two operating modes:

- Monitoring.
- Setting.

The functions of the keys and the active fields on the HMI display vary according to the operating mode. The setting mode is composed of three levels.

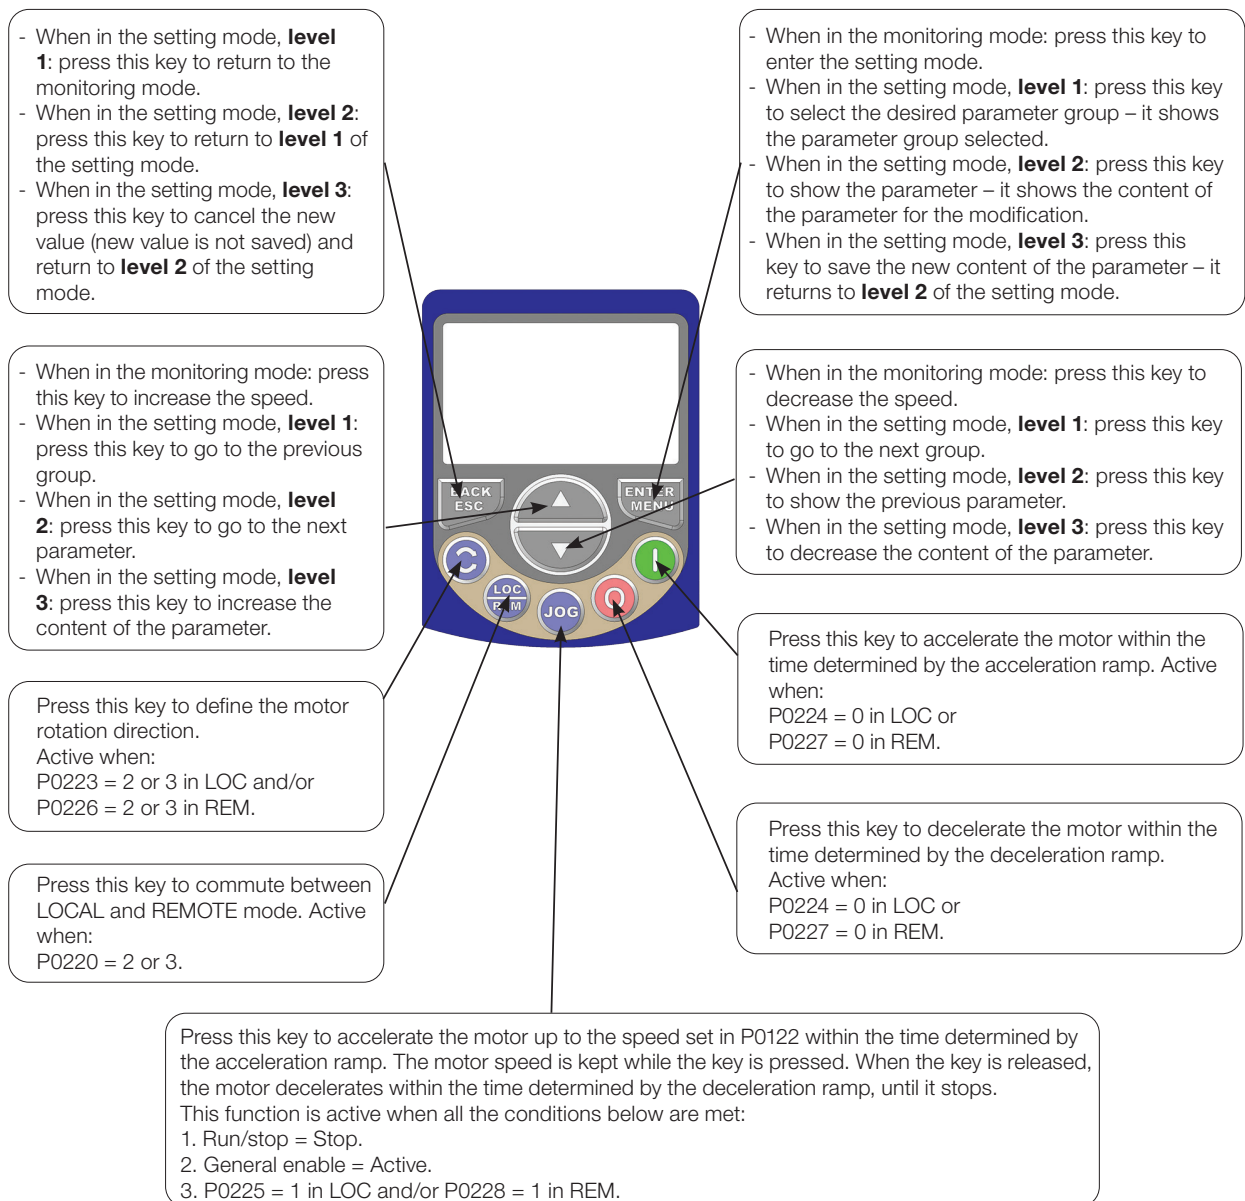


Figure 4.1: HMI keys

4.2 INDICATIONS ON THE HMI DISPLAY

The information shown on the HMI LCD display are divided into six fields: menu, status, secondary display, unit, main display and bar graph. Those fields are defined in Figure 4.2 on page 4-2. The main and secondary displays allow alternating the focus to scroll the parameter number or parameter value according to levels 2 and 3 of the parameterization mode, respectively.

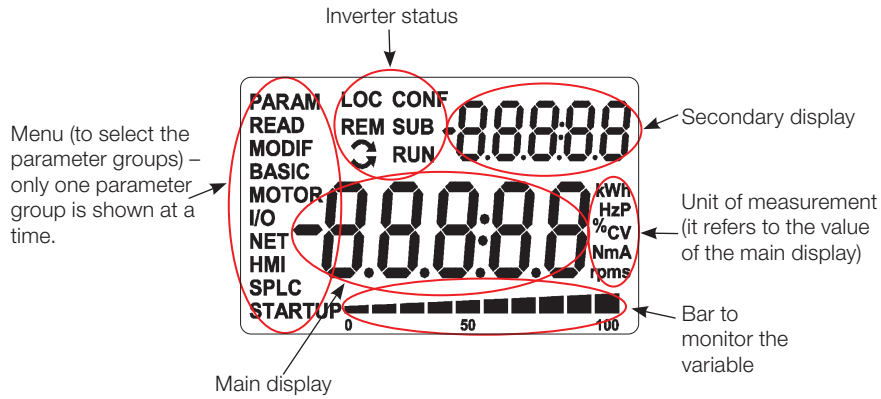


Figure 4.2: Display areas

Parameter groups available in the field Menu:

- **PARAM:** all parameters.
- **READ:** read only parameters.
- **MODIF:** parameters modified in relation to the factory default.
- **BASIC:** parameters for basic application.
- **MOTOR:** parameters related to the motor control.
- **I/O:** parameters related to digital and analog inputs and outputs.
- **NET:** parameters related to the communication networks.
- **HMI:** parameters to configure the HMI.
- **SPLC:** parameters related to the SoftPLC.
- **STARTUP:** parameters for Oriented Start-Up.

Status of the inverter:

- **LOC:** command source or Local references.
- **REM:** command source or Remote references.
- **↻:** direction of rotation by means of arrows.
- **CONF:** CONFIG status active.
- **SUB:** undervoltage.
- **RUN:** execution.

4.3 OPERATING MODES OF THE HMI

The monitoring mode allows the user to view up to three variables on the main display, secondary display and bar graph. Such fields of the display are defined in [Figure 4.2 on page 4-2](#).

The setting mode is composed of three levels:

Level 1 allows the user to select the menu items to direct the browsing of the parameters.

Level 2 allows browsing the parameters of the group selected by **level 1**.

Level 3, in turn, allows the modification of the parameter selected in **level 2**. At the end of this level, the modified value is saved or not if the key ENTER or ESC is pressed, respectively.

The [Figure 4.3 on page 4-3](#) illustrates the basic browsing of the operating modes of the HMI.

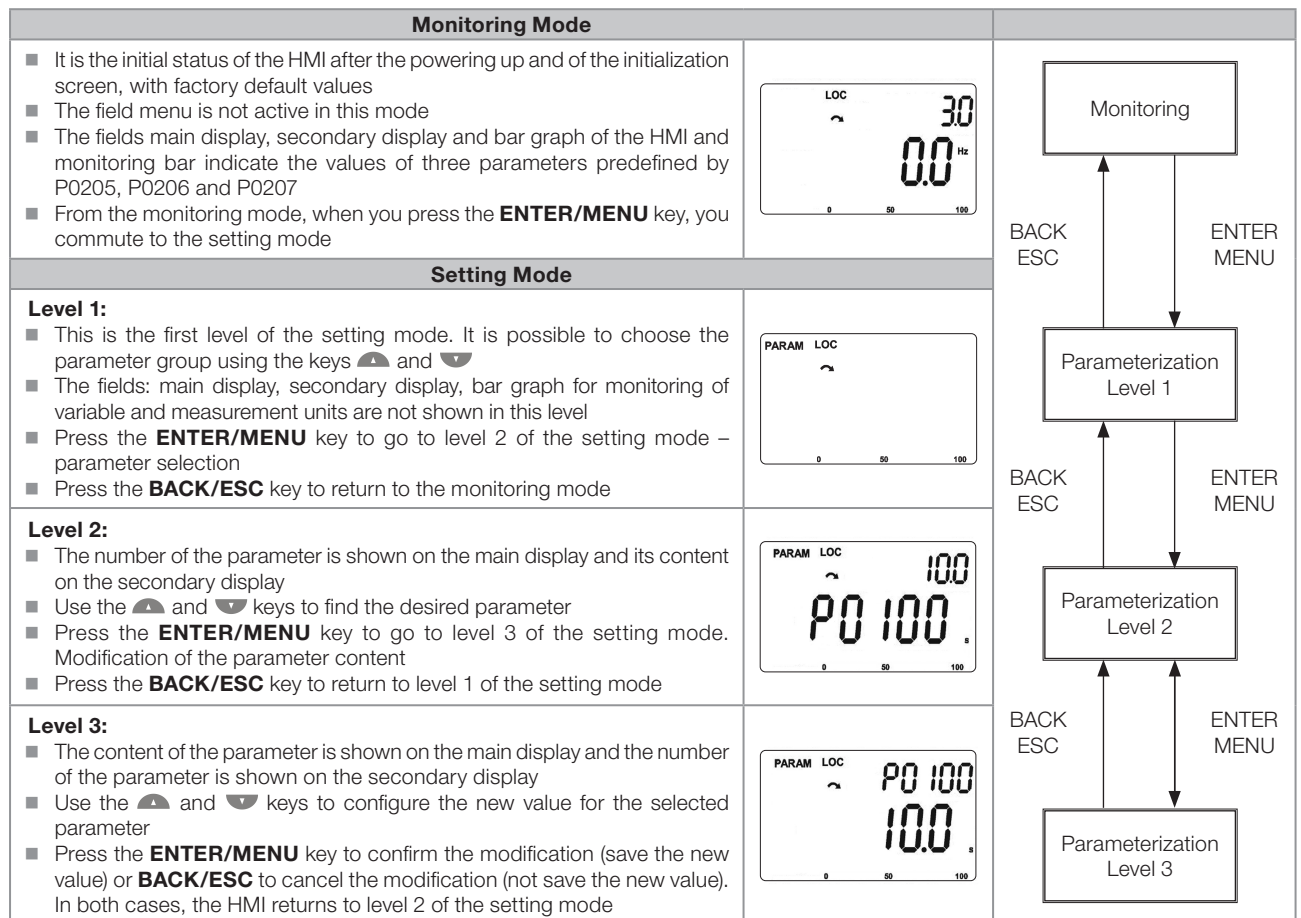


Figure 4.3: HMI operating modes



NOTE!

When the inverter is in the fault status, the main display indicates the number of the fault in the format **Fxxxx**. The browsing is allowed after pressing the ESC key, and the indication **Fxxxx** goes to the secondary display until the fault is reset.



NOTE!

When the inverter is in the alarm state, the main display indicates the number of the alarm in the format **Axxxx**. The browsing is allowed after pressing any key, and the indication **Axxxx** goes to the secondary display until the situation causing the alarm is solved.

5 PROGRAMMING BASIC INSTRUCTIONS

5.1 PARAMETER STRUCTURE

Aiming at simplifying the parameterization process, the MW500 parameters were classified into ten groups which can be individually selected in the Menu area of the HMI display. When the enter/menu key of the HMI is pressed in the monitoring mode, you enter the setting mode level 1. In this mode, it is possible to select the desired parameter group by browsing with the "▲" and "▼" keys. For further details on the use of the HMI, refer to [Chapter 4 HMI AND BASIC PROGRAMMING on page 4-1](#).


NOTE!

The inverter comes from the factory with the frequency (V/f 50/60 Hz mode) and voltage adjusted according to the market.

The reset to factory default may change the content of the parameters related to frequency as per P0204. In the detailed description, some parameters have values between brackets, which represents the default value for operation in 50 Hz; thus the value without brackets is the default for operation in 60 Hz.

5.2 PARAMETERS SELECTED BY THE HMI MENU

In the first level of the setting mode, select the group to browse the next levels according to the table below.

Table 5.1: Parameter group accessed by the HMI MENU

Group	Contained Parameters
PARAM	All parameters
READ	Read only parameters: P0001, P0002, P0003, P0004, P0005, P0006, P0007, P0009, P0010, P0011, P0012, P0013, P0014, P0015, P0016, P0017, P0018, P0019, P0020, P0021, P0022, P0023, P0024, P0027, P0029, P0030, P0036, P0037, P0040, P0041, P0045, P0047, P0048, P0049, P0050, P0051, P0052, P0053, P0054, P0055, P0060, P0061, P0062, P0063, P0064, P0065, P0070, P0071, P0072, P0073, P0074, P0075, P0295, P0296, P0680, P0690
MODIF	Only parameters with content different form the factory default
BASIC	Parameters for simple application: ramps, minimum and maximum speed, maximum current and torque boost: P0100, P0101, P0133, P0134, P0135, P0136
MOTOR	Parameters related to the motor data control: P0135, P0136, P0137, P0138, P0150, P0151, P0152, P0153, P0156, P0157, P0158, P0178, P0399, P0400, P0401, P0402, P0403, P0404, P0406, P0407, P0408, P0409
I/O	Groups related to digital and analog inputs and outputs: P0012, P0013, P0014, P0015, P0016, P0017, P0018, P0019, P0020, P0021, P0022, P0105, P0220, P0221, P0222, P0223, P0224, P0225, P0226, P0227, P0228, P0229, P0230, P0231, P0232, P0233, P0234, P0235, P0236, P0237, P0238, P0239, P0240, P0241, P0242, P0243, P0244, P0245, P0246, P0247, P0248, P0249, P0250, P0251, P0252, P0253, P0254, P0255, P0256, P0257, P0258, P0259, P0260, P0263, P0264, P0265, P0266, P0267, P0268, P0269, P0270, P0271, P0275, P0276, P0277, P0278, P0279, P0287, P0288, P0290, P0293, P0533, P0535
NET	Parameters related to the communication networks: P0308, P0310, P0311, P0312, P0313, P0314, P0316, P0680, P0681, P0682, P0683, P0684, P0685, P0690, P0695, P0696, P0697, P0698, P0700, P0701, P0702, P0703, P0705, P0706, P0707, P0708, P0709, P0710, P0711, P0712, P0713, P0714, P0715, P0716, P0717, P0718, P0719, P0720, P0721, P0722, P0740 ... P0968
HMI	Parameters to configure the HMI: P0200, P0205, P0206, P0207, P0208, P0209, P0210, P0213, P0216, P0510, P0511, P0512, P0513, P0528, P0529
SPLC	Parameters related to the SoftPLC function: P0510, P0511, P0512, P0513, P0528, P0529, P1000, P1001, P1002, P1010...P1059
STARTUP	Parameters to enter the VVW-Oriented Start-Up mode: P0202, P0399, P0400, P0401, P0402, P0403, P0404, P0406, P0407, P0408, P0409


NOTE!

Besides the selected group in the menu field of the HMI, the view of the parameters on the HMI depends on the hardware installed and on the operating mode of the MW500. Therefore, observe the connected plug-in module, as well as the motor control mode: VVW or V/f. For example, if the plug-in module only features the analog input AI1, the parameters related to the other analog inputs are not shown. The same occurs with the parameters exclusively related to the VVW and V/f modes.

5.3 HMI

In the HMI group, you find parameters related to the showing of information on the display, backlight and password of the HMI. See detailed description below of the possible settings of the parameters.

P0000 – Access to the Parameters

Adjustable Range:	0 to 9999	Factory Setting:	0
Properties:			
Access Groups via HMI:			

Description:

Password input to release the access to the parameters. Once a password is saved in P0200, the access to the parameters is only allowed if this password is set in P0000.

After setting P0000 with the current password, the parameter will show the status of the parameter access in browse mode. If the parameter is "1", the access to the parameters is granted. Otherwise the access is denied until a valid password is entered.



NOTE!

The access to the parameters and P0000 is cleared together with the powering down of the inverter.

P0200 – Password

Adjustable Range:	0 = Inactive 1 = Active 1 to 9999 = New Password	Factory Setting:	0
Properties:			
Access Groups via HMI:	<input type="text" value="HMI"/>		

Description:

It allows activating the password (by inserting a new value) or disabling it. For further details regarding the use of this parameter, refer to [Table 5.2 on page 5-2](#).

Table 5.2: Required procedure for each kind of action

Action	Procedure
Activate password	<ol style="list-style-type: none"> 1. Set P0200 with the desired value for the password (P0200 = password) 2. After this procedure, the new password is active and P0200 is automatically adjusted for 1 (password active) ⁽¹⁾
Change password	<ol style="list-style-type: none"> 1. Set the current value of the password (P0000 = password) 2. Set the desired value for the new password in P0200 (P0200 = new password) 3. After this procedure, the new password is active and P0200 is automatically adjusted for 1 (password active) ⁽¹⁾
Disable password	<ol style="list-style-type: none"> 1. Set the current value of the password (P0000 = password) 2. Set inactive password (P0200 = 0) 3. After this procedure, the password is disabled ⁽²⁾
Disable password	<ol style="list-style-type: none"> 1. Activate a factory default by means of P0204 2. After this procedure, the password is disabled ⁽²⁾

⁽¹⁾ It only allows changing the content of the parameters when P0000 is equal to the value of the password.

⁽²⁾ It is allowed to change the content of the parameters and P0000 is inaccessible.

P0205 – Main Display Parameter Selection
P0206 – Secondary Display Parameter Selection
P0207 – Bar Graph Parameter Selection

Adjustable Range:	0 to 1500	Factory Setting:	P0205 = 2 P0206 = 1 P0207 = 3
--------------------------	-----------	-------------------------	-------------------------------------

Properties:

Access Groups via HMI:

Description:

These parameters define which parameters are shown on the HMI display in the monitoring mode. More details of this programming can be found in [Section 5.5 SETTING OF DISPLAY INDICATIONS IN THE MONITORING MODE](#) on page 5-6.

P0208 – Reference Scale Factor

Adjustable Range:	1 to 65535	Factory Setting:	600 (500)
--------------------------	------------	-------------------------	-----------

Properties:

Access Groups via HMI:

Description:

This parameter allows adjusting the scale of the parameters speed reference P0001 and output (motor) speed P0002 for the motor rated frequency point given by P0403. Thus, you can adjust the indication of P0001 and P0002 for any scale, such as the output frequency (Hz), motor speed (rpm) or a percentage value (%), for instance.

Together with the unit in P0209 and the decimal places in P0210, the reference scale factor (P0208) defines the speed indication on the inverter HMI. According to the factory default of those parameters, the preset scale on the inverter is in “Hz” and with a decimal place (60.0 Hz or 50.0 Hz). On the other hand, by setting P0208 = 1800 or 1500, P0209 = 3 and P0210 = 0, a scale in “rpm” with no decimal places is defined (1800 rpm or 1500 rpm).

P0209 – Reference Engineering Unit

Adjustable Range:	0 = None 1 = V 2 = A 3 = rpm 4 = s 5 = ms 6 = N 7 = m 8 = N.m 9 = mA 10 = % 11 = °C 12 = CV 13 = Hz 14 = HP 15 = h 16 = W 17 = kW 18 = kWh 19 = H	Factory Setting: 13
--------------------------	--	----------------------------

Properties:

Access Groups via HMI:

Description:

This parameter selects the engineering unit that will be presented on parameters P0001 and P0002.

P0210 – Reference Indication Form

Adjustable Range:	0 = wxyz 1 = wxy.z 2 = wx.yz 3 = w.xyz	Factory Setting: 1
--------------------------	---	---------------------------

Properties:

Access Groups via HMI:

Description:

This parameter allows setting the form of indication of parameters P0001 and P0002.

P0213 – Bar Graph Scale Factor

Adjustable Range:	1 to 65535	Factory Setting: According to inverter model (P0295)
--------------------------	------------	---

Properties:

Access Groups via HMI:

Description:

This parameter configures the full scale (100 %) of the bar graph to indicate the parameter selected by P0207.


NOTE!

The bar graph normally indicates the value defined by P0207 and P0210; however, in some special situations, such as parameter loading, data transfer and self-tuning, the function of the bar graph is changed in order to show the progress of those operations.

P0216 – HMI Display Backlight

Adjustable Range:	0 = OFF 1 = ON	Factory Setting:	1
Properties:	cfg		
Access Groups via HMI:	<input type="text" value="HMI"/>		

Description:

The function of this parameter is to turn on or off the backlight of the HMI display.

5.4 BACKUP PARAMETERS

The MW500 BACKUP functions allow saving the inverter current parameter contents in a specific EEPROM memory area (User 1 or User 2), as well as restoring the current parameters from this area.

P0204 – Load / Save Parameters

Adjustable Range:	0 and 1 = Not Used 2 = Reset P0045 3 and 4 = Not Used 5 = Load WEG 60 Hz 6 = Load WEG 50 Hz 7 = Load User 1 8 = Load User 2 9 = Save User 1 10 = Save User 2 11 = Load Default SoftPLC 12 to 15 = Reserved	Factory Setting:	0
Properties:	cfg		
Access Groups via HMI:			

Description:

It allows saving the inverter present parameters in a non-volatile memory (EEPROM) of the control module or the opposite, loading the parameters with the content of this area. [Table 5.3 on page 5-5](#) describes the actions performed by each option.

Table 5.3: Option of parameter P0204

P0204	Action
0 and 1	Not Used: No action
2	Reset P0045: Clear internal fan enabled time counter P0045
3 and 4	Not Used: No action
5	Load WEG 60 Hz: It loads the default parameters on the inverter with the factory default for 60 Hz
6	Load WEG 50 Hz: It loads the default parameters on the inverter with the factory default for 50 Hz
7	Load User 1: It transfers the content of the memory of parameters 1 to the inverter current parameters
8	Load User 2: It transfers the content of the memory of parameters 2 to the inverter current parameters
9	Saver User 1: It transfers the current content of the parameters to the memory of parameters 1
10	Saver User 2: It transfers the current content of the parameters to the memory of parameters 2
11	Load Default SoftPLC: It loads the factory default in SoftPLC parameters (P1010 to P1059)
12 to 15	Reserved

In order to load the parameters of user 1 and/or user 2 to the MW500 operating area (P0204 = 7 or 8), it is necessary that those areas be previously saved.

The operation of loading one of those memories (P0204 = 7 or 8) can also be done via digital inputs (DIx). For further details referring to this programming, refer to [Section 12.5 DIGITAL INPUTS on page 12-14](#).

NOTE! When P0204 = 5 or 6, parameters P0296 (Rated voltage), P0297 (Switching frequency) and P0308 (Serial address) are not changed to the factory default.

5.5 SETTING OF DISPLAY INDICATIONS IN THE MONITORING MODE

5

Whenever the inverter is powered up, the HMI display goes to the monitoring mode. In order to simplify the reading of the inverter parameters, the display was designed to show three parameters simultaneously, at the user's discretion. Two of those parameters (main display and secondary display) are shown as numbers and the other parameter as a bar graph. The selection of those parameters is done via P0205, P0206 and P0207, as indicated in [Figure 5.1 on page 5-6](#).

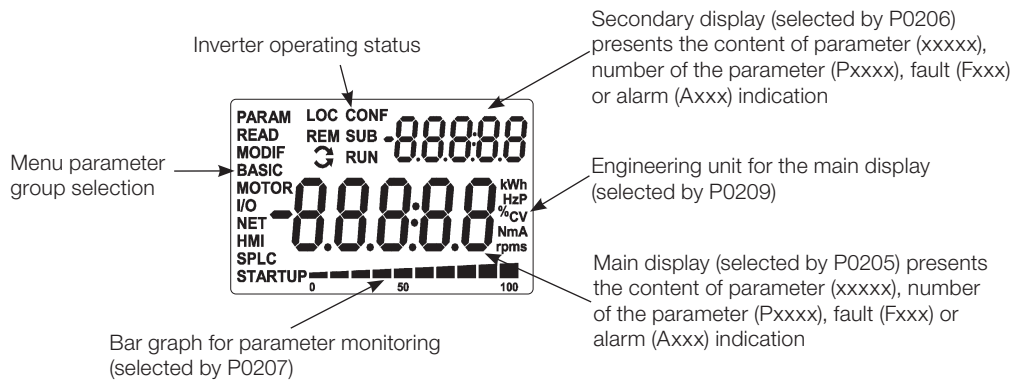


Figure 5.1: Screen on initialization and display fields

5.6 POSSIBLE CAUSES OF INVERTER CONFIG STATUS

The CONFIG status is indicated by the HMI "CONF" status, as well as in parameters P0006 and P0680. Such status indicates that the MW500 cannot enable the output PWM pulses because the inverter configuration is incorrect or incomplete.

The [Table 0.1 on page 0-22](#) shows the situations of CONFIG status, where the user can identify the origin condition through parameter P0047.

5.7 SOFTPLC ENGINEERING UNITS

This parameter group allows the user to configure the engineering units for SoftPLC user parameters.

P0510 – SoftPLC Engineering Unit 1

Adjustable Range:	0 = None 1 = V 2 = A 3 = rpm 4 = s 5 = ms 6 = N 7 = m 8 = N.m 9 = mA 10 = % 11 = °C 12 = CV 13 = Hz 14 = HP 15 = h 16 = W 17 = kW 18 = kWh 19 = H	Factory Setting: 13
Properties:		
Access Groups via HMI:	<input type="text" value="HMI, SPLC"/>	

Description:

This parameter selects the engineering unit that will be displayed in SoftPLC user parameter that is associated with it, i.e., any SoftPLC user parameter that has its engineering unit associated with the SoftPLC engineering unit 1 will be displayed in this format in the inverter HMI.

P0511 – Decimal Point SoftPLC Engineering Unit 1

Adjustable Range:	0 = wxyz 1 = wxy.z 2 = wx.yz 3 = w.xyz	Factory Setting: 1
Properties:		
Access Groups via HMI:	<input type="text" value="HMI, SPLC"/>	

Description:

This parameter selects the decimal point that will be displayed in SoftPLC user parameter that is associated with it, i.e., any SoftPLC user parameter that has its decimal point associated with the SoftPLC engineering unit 1 will be displayed in this format in the inverter HMI.

P0512 – Unit SoftPLC Engineering 2

Adjustable Range:	0 = None 1 = V 2 = A 3 = rpm 4 = s 5 = ms 6 = N 7 = m 8 = N.m 9 = mA 10 = % 11 = °C 12 = CV 13 = Hz 14 = HP 15 = h 16 = W 17 = kW 18 = kWh 19 = H	Factory Setting: 13
--------------------------	--	----------------------------

5

Properties:

Access Groups via HMI:

Description:

This parameter selects the engineering unit that will be displayed in SoftPLC user parameter that is associated with it, i.e., any SoftPLC user parameter that has its engineering unit associated with the SoftPLC engineering unit 2 will be displayed in this format in the inverter HMI.

P0513 – Decimal Point SoftPLC Engineering Unit 2

Adjustable Range:	0 = wxyz 1 = wxy.z 2 = wx.yz 3 = w.xyz	Factory Setting: 1
--------------------------	---	---------------------------

Properties:

Access Groups via HMI:

Description:

This parameter selects the decimal point that will be displayed in SoftPLC user parameter that is associated with it, i.e., any SoftPLC user parameter that has its decimal point associated with the SoftPLC engineering unit 2 will be displayed in this format in the inverter HMI.

5.8 MW500 FEATURES

The standard MW500 comes from factory without an HMI. Because of this, it contains two sets of default parameters (called LOC and REM) that allow the user to run a motor in V/f mode without any special configuration. The LOC mode comes preconfigured in such a way that the user can start and control basic functions via digital inputs and the included potentiometer. The standard configurations for LOC are:

P0220 – 4 (DIx) LOC/REM selection
P0221 – 18 (Knob) LOC speed reference
P0223 – 4 (DIx) LOC clockwise selection
P0224 – 1 (DIx) LOC Run/Stop selection
P0263 – 1 (DI1 = Run/Stop)
P0264 – 8 (DI2 = FWD/REW)
P0265 – 20 (DI3 = Fault Reset)
P0266 – 9 (DI4 = LOC/REM)

The standard settings for the REM set are:

P0222 – 9 (Serial speed reference)
P0226 – 5 (Serial FWD/REW)
P0227 – 2 (Serial Run/Stop)
P0228 – 3 (Serial JOG)

5.8.1 Potentiometer

The standard MW500 enclosure includes an analog potentiometer (Knob) pre-configured as the speed reference for the drive. This allows the user to control the motor speed directly, without having to resort to an HMI. The parameters P0261 and P0262 can be used to adjust the gain and offset for the Knob speed reference input.

5.8.2 Leds

The MW500 contains three leds which indicate the inverter states. The Green Led indicates the states "run" and "ready to run". The Yellow Led indicates the alarm state blinking the alarm number code. The Red Led indicates the fault state blinking the fault number code. The following table summarises the MW500 Leds behavior.

Table 5.4: State of the leds and inverter

Inverter States	Led States
Inverter ON, ready to run	- Red OFF - Green ON - Yellow OFF
Inverter ON, motor running	- Red OFF - Green blinking - Yellow OFF
Inverter with alarm state	- Red OFF - Green normal operation (depends on states "run" and "read to run") - Yellow blinks the alarm code
Inverter running with forced configuration via DIP switch	- Red OFF - Green normal operation (depends on states "run" and "read to run") - Yellow blinks alarm A701 (code 10)
Inverter in failure state (PWM disabled)	- Red blinks the fault code - Green OFF - Yellow OFF

5

The table below lists the led blinking codes for alarms and faults.

Table 5.5: Alarm and faults blinking codes

Code	Alarm Number	Fault Number	Description
1	A051	F051, F068, F078	Over-temperature
2	A046, A047	F072, F048	Over-load situation
3	A128, A135, A139, A140, A700	F031, F228, F233, F234, F235, F236, F237, F238, F239, F240, F700	Communication
4	A090	F091	External alarm or fault
5	-	F070 and F074	Over-current
6	-	F022 and F021	Over-voltage or Under-voltage
7	-	-	
8	-	-	
9	-	-	
10	Any alarm number	Any fault number	Others alarms or faults

NOTE!
The softPLC user program can read the MW500 leds state although system marker %SX3052 (Red-Fault), %SX3054 (Green-Status) and %SX3056 (Yellow-Alarm).

NOTE!
The softPLC user program can write the MW500 leds state although system marker %SX3051 (Red-Fault), %SX3053 (Green-Status) and %SX3055 (Yellow-Alarm). This operation are allowed by the setting the parameter P0319 properly.

P0319 – Led Control

Adjustable Range:	0 to 7h	Factory Setting:	0
Properties:			
Access Groups via HMI:	<input type="text" value="SPLC"/>		

Description:

This parameter allows to the SoftPLC for control the MW500 leds instead of de primary firmware function. Setting P0319 properly the leds controls can be transfered to SoftPLC user program through system markers, as described:

- Bit 0** = Yellow led (ALARM) is controlled by softPLC by the system marker %SX3055.
- Bit 1** = Green led (STATUS) is controlled by softPLC by the system marker %SX3053.
- Bit 2** = Red led (FAULT) is controlled by softPLC by the system marker %SX3051.

5.8.3 Fan State Control

The MW500 inverter includes an internal fan that is used to equalize the air temperature inside the enclosure. This fan is electronically controlled based on the IGBT module temperature, being turned on when the temperature is above 50 °C (122 °F), and turned off when the temperature goes below 40 °C (104 °F). This control allows the temperature inside the case to be even while increasing the lifespan of the fan.

The fan speed can be monitored through the parameter P0036, if it is too small the inverter will be set the fault F0179. In the same way, the enabled time can be monitored by P0045, if it is greater then 50000 hours the alarm A0177 will be set.

P0036 – Fan Heatsink Speed

Adjustable Range:	0 to 15000 rpm	Factory Setting:	
Properties:	ro		
Access Groups via HMI:	<input type="text" value="READ"/>		

Description:

This parameter permits the monitoring of the internal fan speed.

P0045 – Fan Enabled Time

Adjustable Range:	0 to 65535 h	Factory Setting:	
Properties:	ro		
Access Groups via HMI:	<input type="text" value="READ"/>		

Description:

It indicates the total number of hours that the fan remained enabled up to 65535 hours, and then it gets back to zero. If this value is greater than 50000 hours the alarm A0177 will be asserted.

By setting P0204 = 2, the value of the parameter P0045 is reset to zero.

5.8.4 DIP Switches

The MW500 control board has four DIP-SWITCHES dedicated to force some inverter preset configuration. At inverter power-up, these switches are read and the required function is executed. The following table shows the functions implemented in the DIP-SWITCHES set S10.

Table 5.6: Control board DIP-SWITCH power-up functions

ID	S10.1	S10.2	S10.3	S10.4	Power-Up Function
0	OFF	OFF	OFF	OFF	None
1	OFF	OFF	OFF	ON	Load 50 Hz factory parameter table standard
2	OFF	OFF	ON	OFF	Load 60 Hz factory parameter table standard
3	OFF	OFF	ON	ON	None
4	OFF	ON	OFF	OFF	None
5	OFF	ON	OFF	ON	None
6	OFF	ON	ON	OFF	None
7	OFF	ON	ON	ON	None
8	ON	OFF	OFF	OFF	Force HMI serial protocol
9	ON	OFF	OFF	ON	Force Modbus RTU serial protocol
10	ON	OFF	ON	OFF	None
11	ON	OFF	ON	ON	None
12	ON	ON	OFF	OFF	None
13	ON	ON	OFF	ON	None
14	ON	ON	ON	OFF	None
15	ON	ON	ON	ON	None

6 INVERTER MODEL AND ACCESSORIES IDENTIFICATION

To verify the inverter model, check the code on the product identification labels. The inverter has two identification labels: a complete one on the side of the inverter, and a summarized one under the HMI.

Once the inverter model identification code is checked, it is necessary to interpret it in order to understand its meaning. Refer to Chapter 2 General Information of the MW500 user’s manual, available for download on the website: www.weg.net.

Below are the parameters related to the inverter model which change according to the inverter model and version. Those parameters must comply with the data read on the product identification label.

6.1 INVERTER DATA

P0023 – Main Software Version

P0024 – Secondary Software Version

Adjustable Range:	0.00 to 655.35	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

These parameters indicate the software versions of the microprocessor: main one, on the control card of the MW500 and secondary one, on the plug-in module. The data is stored on the EEPROM memory located on the control board.

P0027 – Plug-in Module Configuration

Adjustable Range:	0 to 63	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

This parameter identifies the plug-in which is connected to the control module. [Table 6.1 on page 6-2](#) presents the interfaces available for the MW500.

Table 6.1: Identification of the plug-in modules available for use in the MW500

Name	Description	P0027
	No plug-in module connected	0
CFW500-IOS	Standard plug-in module (I/O Standard)	1
CFW500-IOD	Plug-in module with addition of digital inputs and outputs (Digital I/O)	2
CFW500-IOAD	Plug-in module with addition of analog and digital inputs and outputs (Analog and Digital I/O)	3
CFW500-IOR	Plug-in module with addition of relay digital outputs (I/O Relay)	4
CFW500-CUSB	Plug-in module with addition of a USB communication port	5
CFW500-CCAN	Plug-in module with addition of a CAN communication port	6
CFW500-CRS232	Plug-in module with addition of a RS-232 communication port	7
CFW500-CPDP	Plug-in module with Profibus communication	8
CFW500-CRS485	Plug-in module with addition of a RS485 communication port	9
CFW500-ENC	Plug-in module with encoder input ENC	10 and 13
CFW500-CETH-IP CFW500-CEMB-TCP CFW500-CEPN-IO	Plug-in module with EtherNet communication	11
CFW500-ENC2	Plug-in Module with encoder ENC2 input	12

P0029 – Power Hardware Configuration

6

Adjustable Range:	0 to 38	Factory Setting:	According to inverter model
Properties:	ro		
Access Groups via HMI:	<input type="text" value="READ"/>		

Description:

This parameter identifies the inverter model, distinguishing supply voltage and rated current as per [Table 6.2 on page 6-3](#).

From P0029, the MW500 determines the current and voltage parameters which depend on the identification of the model.

NOTE! This action is only executed at the moment the factory default is loaded (P0204 = 5 or 6).

Table 6.2: Identification of the MW500 models for frame sizes A and B

Voltage	Current	P0029
-	-	0
200-240	1.6	1
200-240	2.6	2
200-240	4.3	3
200-240	7.0	4
200-240	9.6	5
380-480	1.0	6
380-480	1.6	7
380-480	2.6	8
380-480	4.3	9
380-480	6.1	10
200-240	7.3	11
200-240	10.0	12
200-240	16.0	13
380-480	2.6	14
380-480	4.3	15
380-480	6.5	16
380-480	10.0	17
200-240	24.0	18
380-480	14.0	19
380-480	16.0	20
500-600	1.7	21
500-600	3.0	22
500-600	4.3	23
500-600	7.0	24
500-600	10.0	25
500-600	12.0	26
200-240	28.0	27
200-240	33.0	28
380-480	24.0	29
380-480	31.0	30
200-240	47.0	33
200-240	56.0	34
380-480	39.0	35
380-480	49.0	36
200-240	6.0	44
380-480	38.0	45
200-240	12.2	46
200-240	17.0	47
200-240	19.4	48
200-240	2.1	49
200-240	2.9	50
200-240	3.4	51
380-480	1.3	52
380-480	2.0	53
380-480	5.2	54

P0295 – VFD Rated Current

Adjustable Range:	0.0 to 200.0 A	Factory Setting:	According to inverter model
Properties:	ro		
Access Groups via HMI:	<input type="text" value="READ"/>		

Description:

This parameter presents the inverter rated current as per [Table 6.2 on page 6-3](#).

P0296 – Power Supply Rated Voltage

Adjustable Range:	0 = 200 - 240 V 1 = 380 V 2 = 400 - 415 V 3 = 440 - 460 V 4 = 480 V 5 = 500 - 525 V 6 = 550 - 575 V 7 = 600 V	Factory Setting:	According to inverter model
--------------------------	--	-------------------------	-----------------------------

Properties:	ro, cfg
Access Groups via HMI:	<input type="text" value="READ"/>

Description:

This parameter presents the inverter power supply rated voltage as shown in [Table 6.2 on page 6-3](#).



NOTE!

The voltage setting in P0296 is allowed only inside of the oriented startup (P0317 = 1).

P0297 – Switching Frequency

Adjustable Range:	1500 to 15000 Hz	Factory Setting:	4000 Hz
--------------------------	------------------	-------------------------	---------

Properties:	
Access Groups via HMI:	

Description:

You can use this parameter to define the inverter IGBT switching frequency.

The inverter switching frequency may be adjusted according to the application needs. Higher switching frequencies imply less acoustic noise in the motor. However, the switching frequency choice results in a compromise among the acoustic noise in the motor, the inverter IGBT losses and the maximum permitted currents.

The reduction of the switching frequency reduces the effects related to the motor instability, which occurs in certain application conditions. Besides, it reduces the earth leakage current, preventing the actuation of the faults F0074 (earth fault) or F0070 (output overcurrent or short circuit).

P0298 – Application

Adjustable Range:	0 = The inverter is mounted on the motor for applications at ambient temperature of 40 °C (104 °F) 1 = The inverter is mounted on the motor for applications at ambient temperature of 50 °C (122 °F), or on a flat surface for applications at ambient temperature of 40 °C (104 °F)	Factory Setting:	0
--------------------------	--	-------------------------	---

Properties:	cfg
--------------------	-----

Access Groups via HMI:	
-------------------------------	--

Description:

Set the content of this parameter according to the application.

- For some models, in applications on a motor at ambient temperature of 40 °C (104 °F), the product internally adjusts to the application and may operate at a higher rated current, but without changing the value of parameter P0295. Information on these models can be found in the MW500 user manual.
- For applications at ambient temperature of 50 °C (122 °F), or applications on a flat surface at ambient temperature of 40 °C (104 °F), no changes are made internally to the product, which operates at its rated current.

**NOTE!**

When parameter P0298 is changed, parameters P0135, P0156, P0157, P0158, P0290, P0401, P0404 and P0409 are also automatically modified.

**NOTE!**

The application setting at P0298 affects the factory default value (P0204) of parameters P0135, P0156, P0157, P0158, P0290, P0401, P0404 and P0409.

7 LOGICAL COMMAND AND SPEED REFERENCE

The drive of the electric motor connected to the inverter depends on the logical command and on the reference defined by one of the several possible sources, such as: HMI keys, digital inputs (Dix), analog inputs (Aix), Serial/USB interface, CANopen interface, DeviceNet interface, SoftPLC, etc.

The command via HMI is limited to a set of functions pre-defined for the keys according to [Chapter 4 HMI AND BASIC PROGRAMMING on page 4-1](#), similarly to the digital inputs (Dix), with the functions implemented in parameter P0263 to P0270. On the other hand, the command via digital interfaces, such as communication network and SoftPLC, act directly on the inverter control word by means of control parameters and system markers of the SoftPLC, respectively.

The speed reference, in turn, is processed inside the MW500 in 16 bits with signal (-32768 to +32767) for a range of -500.0 Hz to +500.0 Hz. On the other hand, the unit factor, range and resolution of the reference depend on the used source, as described in [Section 7.2 SPEED REFERENCE on page 7-7](#).

7.1 SELECTION FOR LOGICAL COMMAND AND SPEED REFERENCE

The inverter command and reference source is defined by the inverter parameters for two different situations: Local and Remote, which can be switched dynamically during the inverter operation. Thus, for a certain parameterization, the inverter has two sets for command and reference, according to block diagram of [Figure 7.1 on page 7-2](#).

Parameter P0220 determines the command source for Local and Remote situations.

Parameters P0223, P0224 and P0225 define the commands in the Local situation; parameters P0226, P0227 and P0228 define the commands in the Remote situation, and parameter P0105 determines the source for selection between 1st and 2nd Ramp. This structure for the selection of the command source is shown in [Figure 7.2 on page 7-3](#), where parameter P0312 directs the serial communication source for the plug-in modules with two ports.

Parameters P0221 and P0222 define the speed reference in the Local and Remote situations. This structure for the selection of the reference source is shown in [Figure 7.3 on page 7-4](#), where parameter P0312 directs the serial communication source to the plug-in modules with two ports.

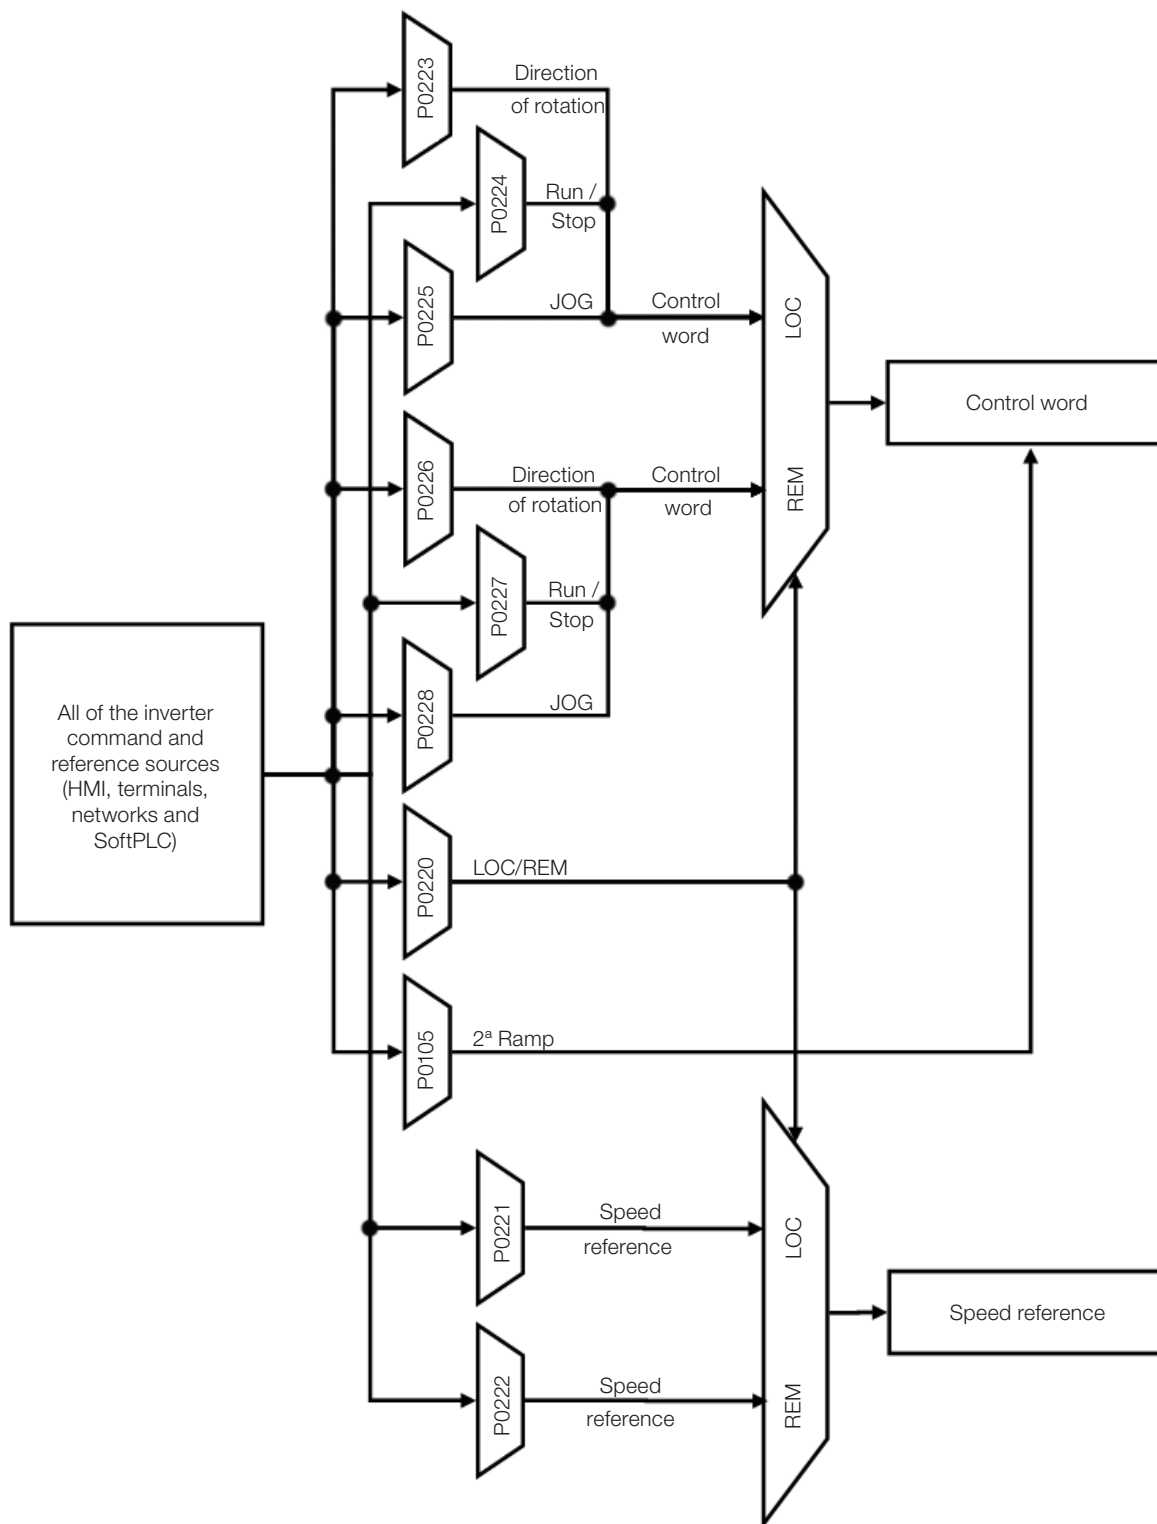


Figure 7.1: General block diagram for commands and references


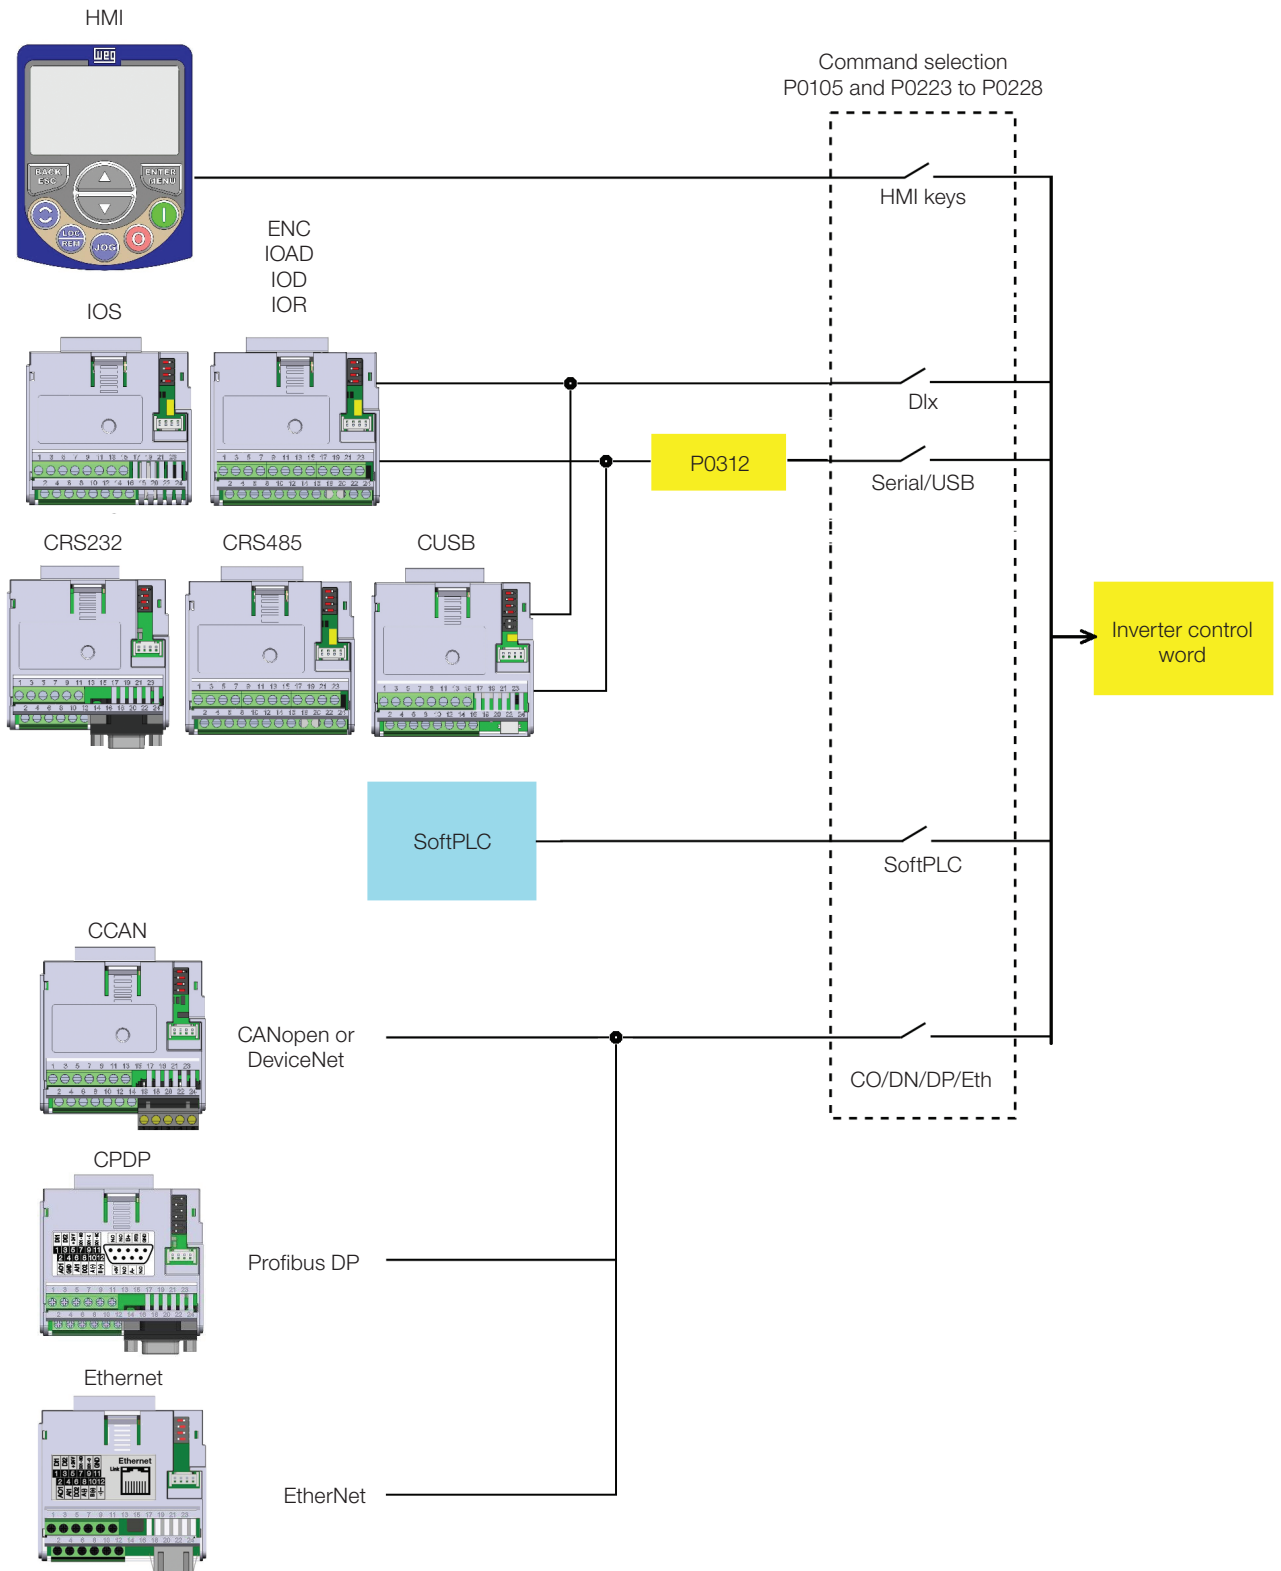


Figure 7.2: Command selection structure

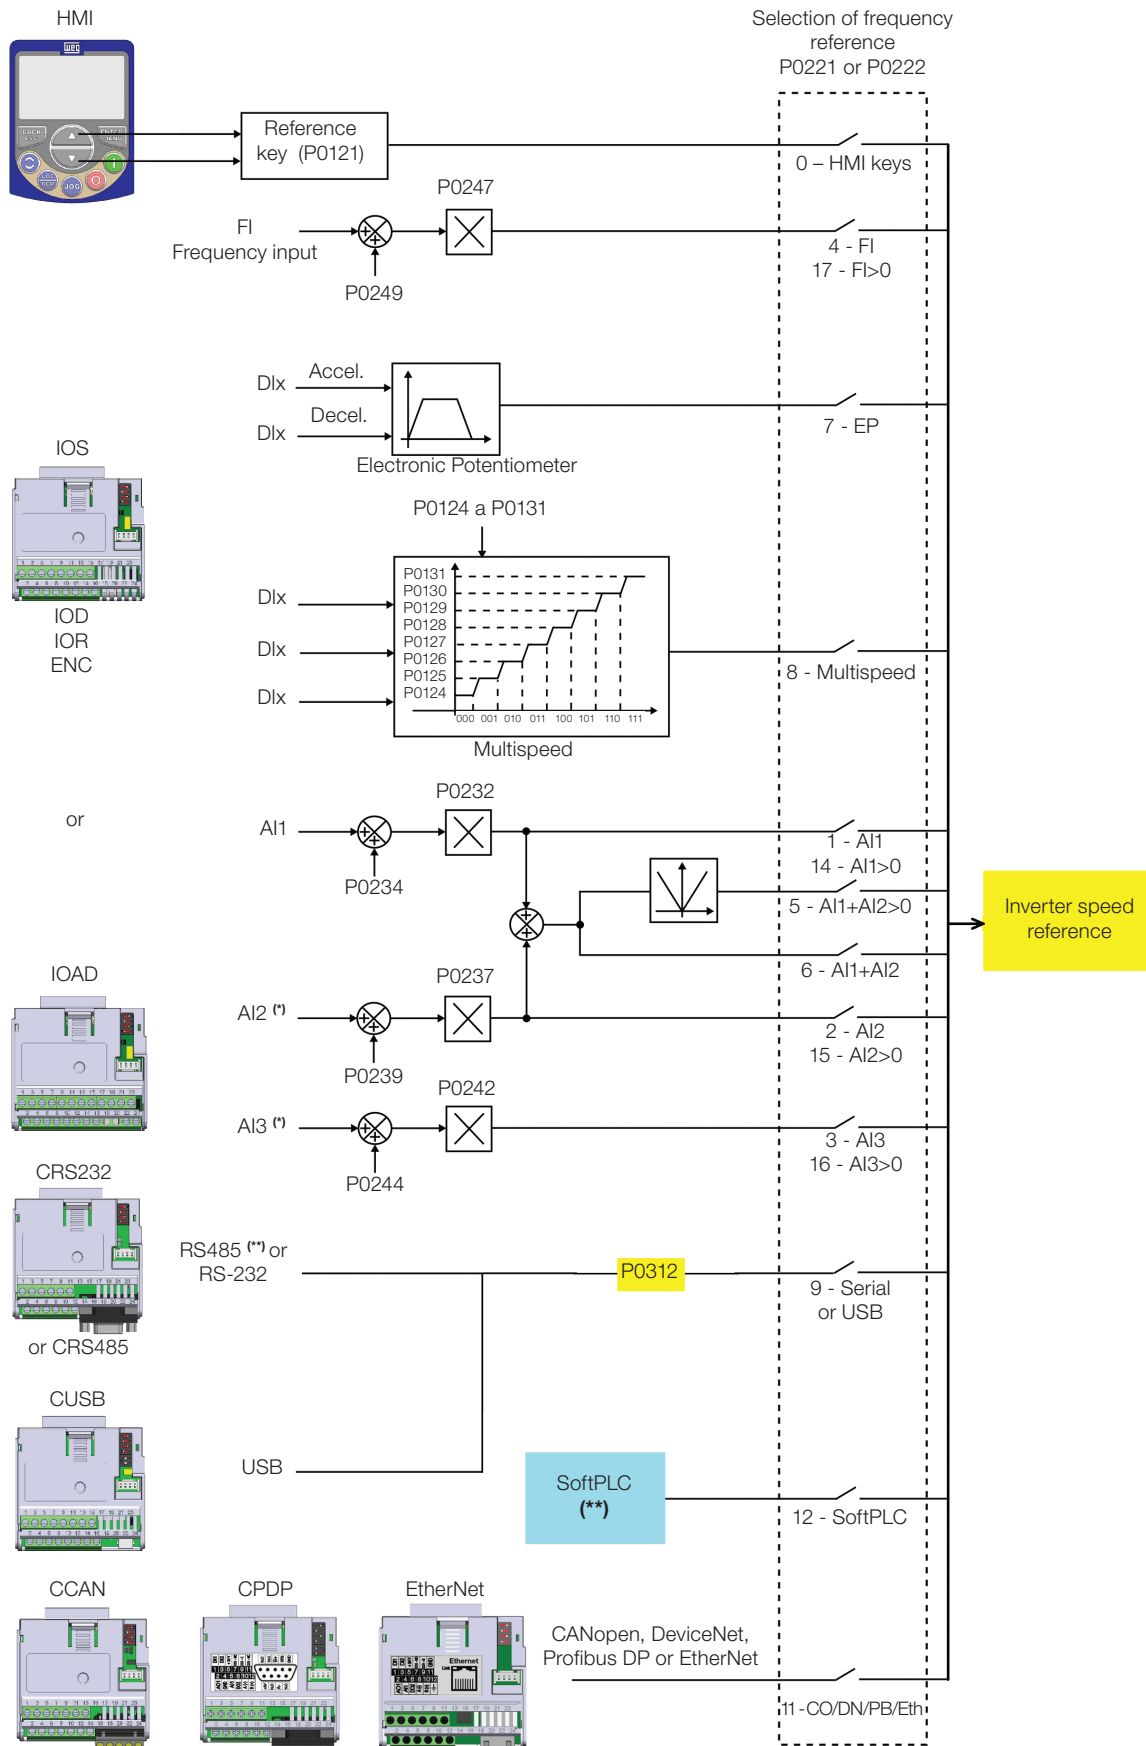

(*) Available only on the plug-in CFW500-IOAD module.

(**) Available in all plug-in modules.

Figure 7.3: Structure to select the speed reference

P0220 – Local/Remote Selection Source

Adjustable Range:	0 = Always Local 1 = Always Remote 2 = HMI Key (LOC) 3 = HMI Key (REM) 4 = Digital Input (Dlx) 5 = Serial/USB (LOC) 6 = Serial/USB (REM) 7 and 8 = Not used 9 = CO/DN/DP/Eth (LOC) 10 = CO/DN/DP/Eth (REM) 11 = SoftPLC	Factory Setting: 4
Properties:	cfg	
Access Groups via HMI:	<input type="text" value="I/O"/>	

Description:

It defines the command origin source which will select between Local situation and Remote situation, where:

- **LOC:** means Local situation default.
- **REM:** means Remote situation default.
- **Dlx:** according to function programmed for digital input in P0263 to P0270.
- **CO/DN/DP/Eth:** CANopen, DeviceNet, Profibus DP or Ethernet Interface.

P0221 – Speed Reference Selection – LOCAL Situation

P0222 – Speed Reference Selection – REMOTE Situation

Adjustable Range:	0 = Keypad 1 = AI1 2 = AI2 3 = AI3 4 = Frequency Input (FI) 5 = AI1 + AI2 > 0 (Sum AIs > 0) 6 = AI1 + AI2 (Sum AIs) 7 = E.P. 8 = Multispeed 9 = Serial/USB 10 = Not Used 11 = CO/DN/DP/Eth 12 = SoftPLC 13 = Not Used 14 = AI1 > 0 15 = AI2 > 0 16 = AI3 > 0 17 = FI > 0 18 = Knob	Factory Setting: P0221 = 18 P0222 = 9
Properties:	cfg	
Access Groups via HMI:	<input type="text" value="I/O"/>	

Description:

These parameters define the origin source for the speed reference in the Local situation and Remote situation. Some comments on the options of this parameter:

- **Alx:** it refers to the analog input signal according to [Section 12.1 ANALOG INPUTS on page 12-1](#).
- **HMI:** the reference value set by the keys and contained in parameter P0121.
- **E.P.:** electronic potentiometer; refer to [Section 12.5 DIGITAL INPUTS on page 12-14](#).
- **Multispeed:** refer to [Section 12.5 DIGITAL INPUTS on page 12-14](#).
- When P0203 = 1, the value set in P0221 and P0222 becomes the PID Setpoint and no longer the speed reference. The PID Setpoint is shown in P0040 and saved in P0525 when the source is the HMI keys.
- **Alx > 0:** the negative values of the Alx reference are zeroed.
- **CO/DN/DP/Eth:** CANopen, DeviceNet, Profibus DP or Ethernet Interface.
- **Knob:** It refers to the internal potentiometer speed reference input.

7

P0223 – Direction of Rotation Selection – LOCAL Situation

P0226 – Direction of Rotation Selection – REMOTE Situation

Adjustable Range:	0 = Always FWD 1 = Always REV 2 = HMI Key (FWD) 3 = HMI Keys (REV) 4 = DIx 5 = Serial/USB (FWD) 6 = Serial/USB (REV) 7 and 8 = Not Used 9 = CO/DN/DP/Eth (FWD) 10 = CO/DN/DP/Eth (REV) 11 = Not Used 12 = SoftPLC	Factory Setting:	P0223 = 4 P0226 = 5
--------------------------	--	-------------------------	------------------------

Properties:	cfg
Access Groups via HMI:	<input type="text" value="I/O"/>

Description:

These parameters define the origin source for the "Direction of Rotation" command in the Local and Remote situation, where:

- **FWD:** means clockwise default at the inverter power-up.
- **REV:** means counterclockwise default at the inverter power-up.
- **DIx:** refer to [Section 12.5 DIGITAL INPUTS on page 12-14](#).
- The polarity option AI3 (11) defines the counterclockwise direction of rotation if the referred analog input operated by the gain and offset results in negative signal as per [Section 12.1 ANALOG INPUTS on page 12-1](#).
- **CO/DN/DP/Eth:** CANopen, DeviceNet, Profibus DP or Ethernet Interface.

P0224 – Run/Stop Selection – LOCAL Situation

P0227 – Run/Stop Selection – REMOTE Situation

Adjustable Range:	0 = HMI Key 1 = DIx 2 = Serial/USB 3 = Not Used 4 = CO/DN/DP/Eth 5 = SoftPLC	Factory Setting:	P0224 = 1 P0227 = 2
Properties:	cfg		
Access Groups via HMI:	<input type="text" value="I/O"/>		

Description:

These parameters define the origin source for the "Run/Stop" command in the Local and Remote situation. This command corresponds to the functions implemented in any of the command sources able to enable the motor movement, that is, General Enable, ramp enable, Forward Run, reverse run, turn on, turn off, JOG, etc.

P0225 – JOG Selection – LOCAL Situation

P0228 – JOG Selection – REMOTE Situation

Adjustable Range:	0 = Disable 1 = HMI Key 2 = DIx 3 = Serial/USB 4 = Not Used 5 = CO/DN/DP/Eth 6 = SoftPLC	Factory Setting:	P0225 = 1 P0228 = 3
Properties:	cfg		
Access Groups via HMI:	<input type="text" value="I/O"/>		

Description:

These parameters define the origin source for the JOG function in the Local and Remote situation. The JOG function means a run/stop command added to the reference defined by P0122; see [Section 7.2.3 Speed Reference Parameters on page 7-9](#).

7.2 SPEED REFERENCE

The speed reference is the value applied to the input of the acceleration ramp module (P0001) to control the frequency applied to the inverter output (P0002) and consequently the motor shaft speed.

Inside the CPU, the inverter uses signed 16 bit variables to treat the speed references. Besides, the full scale of the reference, output frequency and related variables are defined in 500.0 Hz. On the other hand, depending on the source, this scale is conveniently modified considering the interface with the user by standardization or application requirements.

In general, the digital references are defined by parameters like: HMI keys (P0121), Multispeed (P0124 to P0131), E.P. and JOG have a scale from 0.0 to 500.0 Hz with resolution of 0.1 Hz. On the other hand the speed reference via analog input uses a 16-bit internal scale with signal, with the full scale in 500.0 Hz.

The speed reference via HMI can be the JOG key or electronic potentiometer of the keys "▲" and "▼" on parameter P0121.

In digital inputs (DIx), the reference is defined according to the function predefined for P0263 to P0270.

The speed reference via analog inputs and frequency input is according to the signal, gain and offset parameters P0230 to P0250. The full scale of the reference is always by P0134, that is, maximum value in AIx is equivalent to the speed reference equal to P0134.

The digital references Serial/USB, CANopen, DeviceNet and SoftPLC act on a standardized scale called “13-bit speed”, where the value 8192 (2^{13}) is equivalent to the motor rated speed by P0403. Those references are accessed by parameters P0683, P0685 and system marker of the SoftPLC, respectively.

The digital references, though, have a different scale and the speed reference parameters with their range from 0.0 to 500.0 Hz, according to previous descriptions. The frequency value on the ramp input (P0001) is always limited by P0133 and P0134. For example, the JOG reference is given by P0122; this parameter may be set in up to 500.0 Hz, but the value applied to the ramp input as reference will be limited by P0134 when the function is executed.

Table 7.1: Summary of the scales and resolutions of the speed references

Reference	Full Scale	Resolution
Analog inputs (AIx)	- P0134 to P0134	10 bits or (P0134 / 1024)
Communication networks and SoftPLC	-500.0 Hz to 500.0 Hz	Speed 13 bits (P0403 / 8192)
HMI Parameters	-500.0 Hz to 500.0 Hz	0.1 Hz

7

7.2.1 Speed Reference Limits

Although the parameters to adjust the reference have a wide range of values (0 to 500.0 Hz), the value applied to the ramp is limited by P0133 and P0134. Therefore, the values in module out of this range will have no effect on the reference.

P0133 – Minimum Speed Reference

Adjustable Range: 0.0 to 500.0 Hz **Factory Setting:** 3.0 Hz

P0134 – Maximum Speed Reference

Adjustable Range: 0.0 to 500.0 Hz **Factory Setting:** 66.0 (55.0) Hz

Properties:

Access Groups via HMI:

Description:

Limits for the inverter speed reference. Those limits are applied to any reference source, even in the case of 13-bit speed reference.

7.2.2 Speed Reference Backup

P0120 – Speed Reference Backup

Adjustable Range: 0 = Inactive
1 = Active
2 = Backup by P0121 **Factory Setting:** 1

Properties:

Access Groups via HMI:

Description:

This parameter defines the operation of the speed reference backup function between the options active (P0120 = 1), inactive (P0120 = 0) and by P0121 (P0120 = 2). This function determines the form of backup of digital references and sources: HMI (P0121), E.P., Serial/USB (P0683), CANopen/DeviceNet (P0685), SoftPLC (P0687) and PID Setpoint (P0525) according to [Table 7.2 on page 7-9](#).

Table 7.2: Options of parameter P0120

P0120	Reference Initial Values at the Enabling or Power-up
0	Value of P0133
1	Last adjusted value
2	Value of P0121

If P0120 = Inactive, the inverter will not save the speed reference value when it is disabled. Thus, when the inverter is enabled again, the speed reference value will become the speed minimum limit value (P0133).

If P0120 = Active, the value set in the reference is not lost when the inverter is disabled or powered down.

If P0120 = Backup by P0121, the reference initial value is fixed by P0121 at the enabling or power-up of the inverter.

7.2.3 Speed Reference Parameters

P0121 – Speed Reference via HMI

Adjustable Range:	0 to 500.0 Hz	Factory Setting:	3.0 Hz
--------------------------	---------------	-------------------------	--------

Properties:
Access Groups via HMI:
Description:

Parameter P0121 stores the speed reference via HMI. When the keys "▲" and "▼" are active and the HMI in the monitoring mode, the value of P0121 is increased and shown on the HMI main display. Besides, the P0121 is used as input for the reference backup function.


NOTE!

The maximum setting value of parameter P0121 via HMI is limited by P0134.

P0122 – Speed Reference for JOG

Adjustable Range:	-500.0 to 500.0 Hz	Factory Setting:	5.0 Hz
--------------------------	--------------------	-------------------------	--------

Properties:
Access Groups via HMI:
Description:

During the JOG command, the motor accelerates up to the value defined in P0122, following the acceleration ramp set according to P0105. This command may be activated by any of the sources, as per [Section 7.1 SELECTION FOR LOGICAL COMMAND AND SPEED REFERENCE on page 7-1](#). The negative values determine a direction of rotation opposite to that defined by the inverter command word.

P0124 – Multispeed Reference 1

Adjustable Range:	-500.0 to 500.0 Hz	Factory Setting:	3.0 Hz
--------------------------	--------------------	-------------------------	--------

P0125 – Multispeed Reference 2

Adjustable Range:	-500.0 to 500.0 Hz	Factory Setting:	10.0 (5.0) Hz
--------------------------	--------------------	-------------------------	---------------

P0126 – Multispeed Reference 3

Adjustable Range:	-500.0 to 500.0 Hz	Factory Setting:	20.0 (10.0) Hz
--------------------------	--------------------	-------------------------	----------------

P0127 – Multispeed Reference 4

Adjustable Range:	-500.0 to 500.0 Hz	Factory Setting:	30.0 (20.0) Hz
--------------------------	--------------------	-------------------------	----------------

P0128 – Multispeed Reference 5

Adjustable Range:	-500.0 to 500.0 Hz	Factory Setting:	40.0 (30.0) Hz
--------------------------	--------------------	-------------------------	----------------

P0129 – Multispeed Reference 6

Adjustable Range:	-500.0 to 500.0 Hz	Factory Setting:	50.0 (40.0) Hz
--------------------------	--------------------	-------------------------	----------------

P0130 – Multispeed Reference 7

Adjustable Range:	-500.0 to 500.0 Hz	Factory Setting:	60.0 (50.0) Hz
--------------------------	--------------------	-------------------------	----------------

P0131 – Multispeed Reference 8

Adjustable Range:	-500.0 to 500.0 Hz	Factory Setting:	66.0 (55.0) Hz
--------------------------	--------------------	-------------------------	----------------

Properties:

Access Groups via HMI:

Descriptions:

By the combination of up to three digital inputs, one from eight levels that form the Multispeed reference is selected. Read the description of the digital input in [Section 12.5 DIGITAL INPUTS on page 12-14](#), as well as the reference selection in [Section 7.1 SELECTION FOR LOGICAL COMMAND AND SPEED REFERENCE on page 7-1](#). The negative values determine a direction of rotation opposite to that defined by the inverter command word (Bit 2 of P0682 and P0684).

Figure 7.4 on page 7-11 and Table 7.3 on page 7-11 show the operation of the Multispeed, considering digital inputs programmed for NPN in P0271. Although the most relevant digital input can be programmed in DI1, DI2, DI5 or DI6, only one of those options is allowed; otherwise, the config status (CONF), according to Section 5.6 POSSIBLE CAUSES OF INVERTER CONFIG STATUS on page 5-6, is activated to indicate parameterization incompatibility.

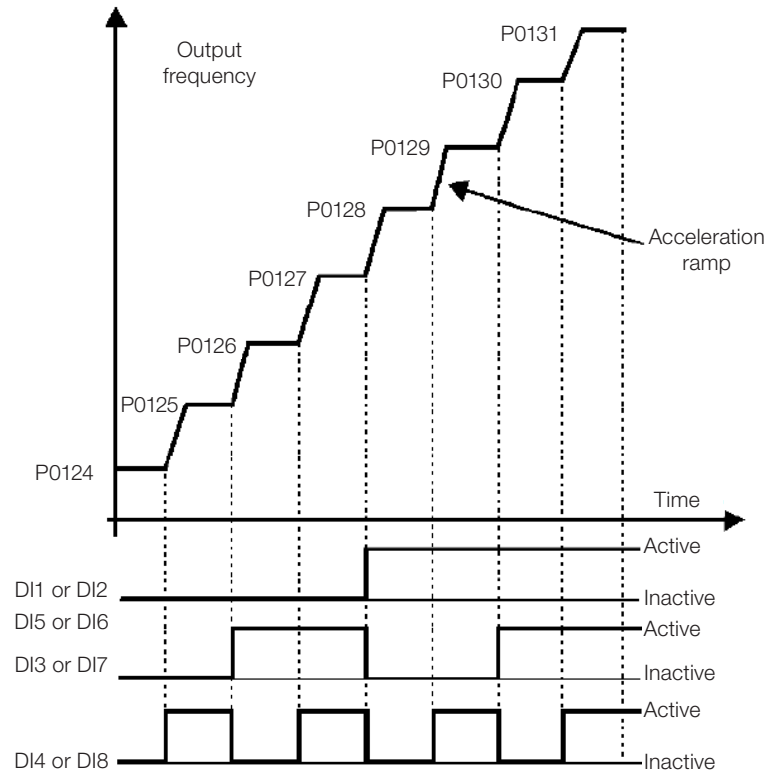


Figure 7.4: Operating graph of the Multispeed function

Table 7.3: Multispeed speeds

8 Speeds			
DI1 or DI2 or DI5 or DI6	4 Speeds		
	DI3 or DI7	2 Speeds	
DI4 or DI8		Speed Reference	
Open	Open	Open	P0124
Open	Open	0 V	P0125
Open	0 V	Open	P0126
Open	0 V	0 V	P0127
0 V	Open	Open	P0128
0 V	Open	0 V	P0129
0 V	0 V	Open	P0130
0 V	0 V	0 V	P0131

7.2.4 Reference via Electronic Potentiometer

The electronic potentiometer function (E.P.) allows the speed reference to be set by means of two digital inputs (one to increment it and another to decrement it).

In order to enable this function, you must first configure the speed reference via E.P., making P0221 = 7 and/or P0222 = 7. After enabling this function, just program two digital inputs (P0263 to P0270) in 11 or 33 (Accelerate E.P.) and 12 or 34 (Decelerate E.P.).

Figure 7.5 on page 7-12 shows the operation of the E.P. function using DI3 as Accelerate E.P. (P0265 = 11), DI4 as Decelerate E.P. (P0266 = 12) and DI1 as Run/Stop (P0263 = 1). In this example, the reference reset is done with the inverter disabled and activating both accelerate and decelerate E.P. inputs. Besides, you can monitor the action of the inputs individually, as well as the action of the reference backup (P0120 = 1) when the Run/Stop command is opened and closed again.

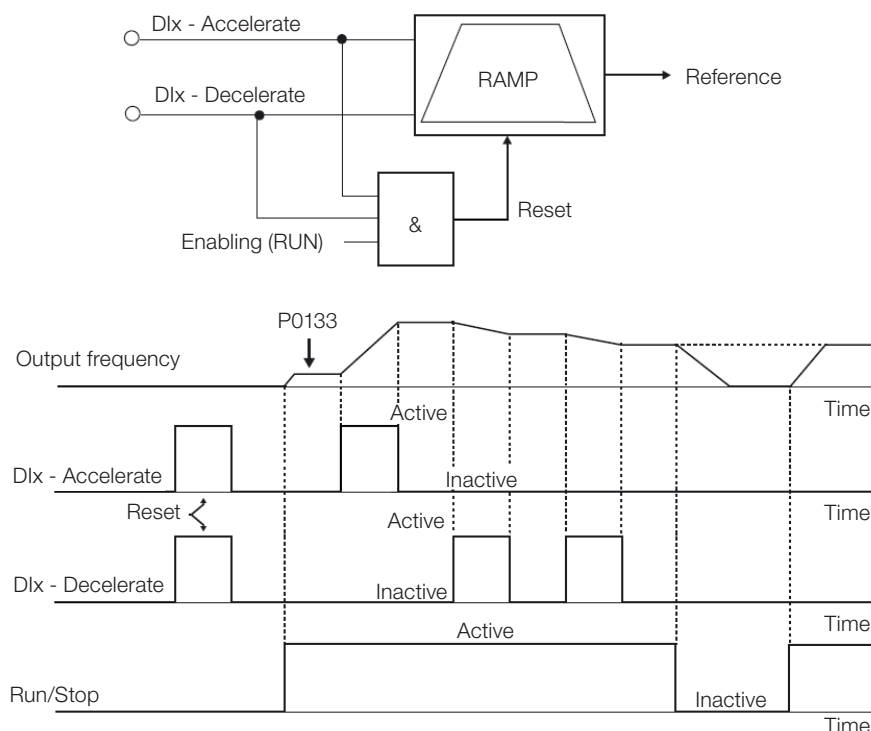


Figure 7.5: Operating graph of the E.P. function

7.2.5 Analog Input Alx and Frequency Input FI

The behaviors of the analog input and frequency input are described in details in [Section 12.1 ANALOG INPUTS on page 12-1](#). Thus, after the proper signal treatment, it is applied to the ramp input according to the reference selection described in [Section 7.1 SELECTION FOR LOGICAL COMMAND AND SPEED REFERENCE on page 7-1](#).

7.2.6 13-bit Speed Reference

The 13-bit speed reference is a scale based on the motor rated speed (P0402) or on the motor rated frequency (P0403). In the MW500, parameter P0403 is taken as the base to determine the speed reference. Thus, the 13-bit speed value has a range of 16 bits with signal, that is, -32768 to 32767; however, the rated frequency in P0403 is equivalent to the value 8192. Therefore, the maximum value in the range 32767 is equivalent to four times P0403.

The 13-bit speed reference is used in parameters P0681, P0683, P0685 and system markers for the SoftPLC, which are related to the interfaces with communication networks and SoftPLC function of the product.

7.3 INVERTER CONTROL AND STATUS WORD

The inverter control word is the grouping of a set of bits to determine the commands received by the inverter from an external source. On the other hand, the status word is another set of bits that define the inverter status. This way, the control and status words establish an interface for the exchanging of information between the inverter and an external module, such as a communication network or a controller.

P0680 – Logical Status

Adjustable Range:	Bit 0 = Reserved Bit 1 = Run Command Bit 2 and 3 = Reserved Bit 4 = Quick Stop Bit 5 = 2 nd Ramp Bit 6 = Config. Mode Bit 7 = Alarm Bit 8 = Running Bit 9 = Enabled Bit 10 = Forward Bit 11 = JOG Bit 12 = Remote Bit 13 = Undervoltage Bit 14 = Automatic (PID) Bit 15 = Fault	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ, NET"/>	

Description:

The inverter status word is unique for all the sources and can only be accessed for reading. It indicates all the relevant operating status and modes of the inverter. The function of each bit of P0680 is described in [Table 7.4 on page 7-13](#).

Table 7.4: Status word

Bit	Function	Description
0	Reserved	
1	Run Command	0: There is no run command active 1: There is run command active
2 and 3	Reserved	
4	Quick Stop	0: Quick stop inactive 1: Quick stop active
5	2 nd Ramp	0: 1 st Acceleration and deceleration ramp by P0100 and P0101 1: 2 nd Acceleration and deceleration ramp by P0102 and P0103
6	Config. Status	0: Inverter operating in normal conditions 1: Inverter in configuration state. It indicates a special condition in which the inverter cannot be enabled, because it has parameterization incompatibility
7	Alarm	0: Inverter is not in Alarm state 1: Inverter is in Alarm state
8	Running	0: Motor is stopped 1: Inverter is running according to reference and command
9	Enabled	0: Inverter is completely disabled 1: Inverter is completely Enabled and ready to turn the motor
10	Clockwise	0: Motor spinning counter Clockwise 1: Motor spinning Clockwise
11	JOG	0: JOG function inactive 1: JOG function active
12	Remote	0: Inverter in Local mode 1: Inverter in Remote mode
13	Undervoltage	0: No undervoltage 1: With undervoltage
14	Automatic	0: In manual mode (PID function) 1: In automatic mode (PID function)
15	Fault	0: Inverter is not in fault state 1: Some fault registered by the inverter

P0690 – Logical Status 2

Adjustable Range:	0000h to FFFFh	Factory Setting:
Properties:	ro	
Access Groups via HMI:	READ, NET	

Description:

Parameter P0690 presents other signaling bits for functions exclusively implemented in the MW500. The function of each bit of P0690 is described in [Table 7.5 on page 7-14](#).

Table 7.5: Status word

Bit	Function	Description
0 to 3	Reserved	
4	Fs Reduction	0: Output frequency reduction inactive 1: Output frequency reduction active
5	Sleep Mode	0: Sleep mode inactive 1: Sleep mode active
6	Deceleration Ramp	0: No deceleration 1: Inverter decelerating
7	Acceleration Ramp	0: No acceleration 1: Inverter accelerating
8	Freeze Ramp	0: Ramp operating in normal conditions 1: The path of the ramp is frozen by some command source or internal function
9	Setpoint Ok	0: Output frequency has not reached reference yet 1: Output frequency reached reference
10	DC Link Regulation	0: DC link regulation or current limitation inactive 1: DC link regulation or current limitation active (P0150)
11	Configuration in 50 Hz	0: Factory default loaded in 60 Hz (P0204 = 5) 1: Factory default loaded in 50 Hz (P0204 = 6)
12	Ride-Through	0: No execution of Ride-Through 1: Executing Ride-Through
13	Flying Start	0: No execution of Flying Start 1: Executing Flying Start
14	DC Braking	0: DC braking inactive 1: DC braking active
15	PWM Pulses	0: PWM voltage pulses in the output disabled 1: PWM voltage pulses in the output enabled

P0682 – Serial Control

P0684 – CANopen/DeviceNet Control

Adjustable Range:	0000h to FFFFh	Factory Setting:
Properties:	ro	
Access Groups via HMI:	NET	

Description:

The inverter control word for a certain source is accessible for reading and writing, but read only access is permitted for the other sources. The inverter has a common word for interface, which is defined by the function of its bits separately as per [Table 7.6 on page 7-15](#).

Table 7.6: Control word

Bit	Function	Description
0	Ramp Enable	0: Stops the motor by deceleration ramp 1: Turn the motor according to the acceleration ramp until reaching the speed reference value
1	General Enable	0: Disable the inverter completely, interrupting the power supply to the motor 1: Enable completely the inverter, allowing the operation of the motor
2	Run Clockwise	0: Run the motor in the opposite direction of the reference signal (counter clockwise) 1: Run the motor in direction of the reference signal (clockwise)
3	JOG Enable	0: Disable JOG function 1: Enable JOG function
4	Remote	0: Inverter goes into Local mode 1: Inverter goes into Remote mode
5	2 nd Ramp	0: Acceleration and deceleration ramp by P0100 and P0101 1: Acceleration and deceleration ramp by P0102 and P0103
6	Quick Stop	0: Quick stop inactive 1: Quick stop active
7	Fault Reset	0: Not used 1: If in fault state, reset the fault
8 to 15	Reserved	

P0229 – Stop Mode Selection

Adjustable Range:	0 = By Ramp 1 = Coast 2 = Quick Stop	Factory Setting: 0
Properties:	cfg	
Access Groups via HMI:	<input type="text" value="I/O"/>	

Description:

This parameter defines the motor stop mode when the inverter receives the “Stop” command. [Table 7.7 on page 7-15](#) describes the options of this parameter.

Table 7.7: Selection of stop mode

P0229	Description
0	The inverter will apply the stop ramp programmed in P0101 and/or P0103
1	The motor will run free until it stops
2	The inverter will apply the stop ramp programmed in P0106


NOTE!

When the coast stop mode is programmed and the Flying Start function is disabled, only activate the motor if it is stopped.


NOTE!

This parameter is applied to all the inverter command sources, but it was created aiming at allowing the command via HMI to be able to disable the motor by inertia instead of deceleration ramp. In this way, when P0229 = 1, Bit 0 of the control word (Ramp Enable) has a function similar to Bit 1 (General Enable). The same way, the digital input functions such as: Run/Stop, Forward/Reverse run and Command with Three Wires Turn off the motor by inertia in this condition of P0229.

7.3.1 Control via HMI Inputs

Contrary to the network interfaces and SoftPLC, the HMI commands do not access the inverter control word directly, because of limitations of key functions and HMI behavior. The HMI behavior is described in [Chapter 4 HMI AND BASIC PROGRAMMING on page 4-1](#).

7.3.2 Control via Digital Inputs

Contrary to the network interfaces and SoftPLC, the digital inputs do not access the inverter control word directly, because the user can create several combinations of DI's to execute commands according to the desired application. Such digital input functions are detailed in [Chapter 12 DIGITAL AND ANALOG INPUTS AND OUTPUTS on page 12-1](#).

8 AVAILABLE MOTOR CONTROL TYPES

The inverter feeds the motor with variable voltage, current and frequency, providing control of the motor speed. The values applied to the motor follow a control strategy, which depends on the selected type of motor control and on the inverter parameter settings.

The selection of the proper control type for the application depends on the static and dynamic requirements of torque and speed of the driven load, that is, the control type is directly connected to the required performance. Additionally, proper configuration of the selected control mode parameters is essential to reach maximum performance.

The MW500 is equipped with two control modes for the three-phase induction motor, that are:

- **V/f Scalar Control:** for basic applications without output speed control.
- **VVW Sensorless Vector Control:** for applications that need high performance in the control of the output speed.

In [Chapter 9 V/f SCALAR CONTROL on page 9-1](#) and [Chapter 10 VVW VECTOR CONTROL on page 10-1](#), each of these kinds of control, related parameters and directions regarding the use of each of these modes are described in details.

P0202 – Control Type

Adjustable Range:	0 = V/f 1 to 4 = Not Used 5 = VVW	Factory Setting: 0
Properties:	cfg	
Access Groups via HMI:	<input type="text" value="STARTUP"/>	

Description:

This parameter selects the kind of three-phase induction motor control used.



NOTE!

When the VVW mode is programmed via HMI (P0202 = 5), the STARTUP menu is activated automatically, forcing an Oriented Start-Up for vector mode setting. See [Section 10.2 START-UP IN VVW MODE on page 10-8](#).

P0139 – Output Current Filter

Adjustable Range:	0 to 9999 ms	Factory Setting: 50 ms
Properties:		
Access Groups via HMI:		

Description:

Time constant of the filter for the total and active output current. You must consider a filter response time equal to three times the time constant set in P0139 (50 ms).

P0140 – Slip Compensation Filter

Adjustable Range:	0 to 9999 ms	Factory Setting:	500 ms
--------------------------	--------------	-------------------------	--------

Properties: VVW

Access Groups via HMI:

Description:

Time constant of the filter for slip compensation in the output frequency. You must consider a filter response time equal to three times the time constant set in P0140 (500 ms).

P0397 – Control Configuration

Adjustable Range:	Bit 0 = Enable Slip Compensation Bit 1 = Dead Time Compensation Bit 2 = Io Stabilization Bit 3 = Red. P0297 on A0050 Bit 4 = Enable Fan Bit 5 = Control Fan	Factory Setting:	003F h
--------------------------	--	-------------------------	--------

Properties: cfg

Access Groups via HMI:

Description:

This configuration parameter is input in hexadecimal form, with each bit having its meaning according to the description below:

■ Enable Slip Compensation (Bit 0)

The motor slip speed compensation in the inverter output frequency can be enable or disable through thi bit 0 of parameter P0397.

■ Dead Time Compensation (Bit 1)

The dead time is a time interval introduced in the PWM necessary for the commutation of the power inverter bridge. On the other hand, the dead time generates distortions on the voltage applied to the motor, which can cause torque reduction at low speeds and current oscillation in motors above 5 HP running with no load. Thus, the dead time compensation measures the voltage pulse width in the output and compensates this distortion introduced by the dead time.

Bit 1 of P0397 (set in 0) allows deactivating this compensation. This feature is useful when there is a problem related to the inverter internal circuit for pulse feedback causing fault F0182. Thus, the compensation and the fault can be disabled until the underlying cause of the problem cannot be solved.

■ Output Current Stabilization (Bit 2)

"High-performance motors with power above 5 HP operate on the edge of stability, and may become unstable when driven by frequency inverters and at operation with no load. Therefore, in this situation a resonance may occur in the output current which may reach the overcurrent level F0070. Bit 2 of P0397 (set in 1) activates a regulation algorithm of the output current in closed loop which tries to compensate the resonant current oscillations, causing much better performance in low load / no load situations. Bit 2 of P0397 allows the user to turn off the stabilization algorithm, if necessary."

■ Reduction of P0297 in Alarm A0050 (Bit 3)

Bit 3 of P0397 controls the overtemperature protection action, refer to [Section 15.4 IGBTs OVERTEMPERATURE PROTECTION \(F0051 AND A0050\) on page 15-6](#).

- **Enable Fan (Bit 4)**

Turn-on the internal FAN. If this bit is cleared the fan will be turned-off anyway.

- **Control Fan (Bit 5)**

Enable automatic fan control considering the internal temperature, if the fan is enabled in Bit 4. The inverter will automatically turn on the fan as soon as the temperature increases above the required threshold and turn the fan off when the temperature is below the threshold.

Disabling this bit means that if the fan is enabled in Bit 4, it will be always running, regardless of the internal temperature.

**ATTENTION!**

The default setting of P0397 meets most application needs of the inverter. Therefore, avoid modifying its content without knowing the related consequences. If you are not sure, contact WEG Technical Assistance before changing P0397.

9 V/f SCALAR CONTROL

This is the classical control method for three-phase induction motors, based on a curve that relates output frequency and voltage. The inverter works as a variable frequency and voltage source, generating a combination of voltage and frequency according to the configured curve. It is possible to adjust this curve for standard 50 Hz or 60 Hz or special motors.

According to the block diagram of [Figure 9.1 on page 9-2](#), the speed reference f^* is limited by P0133 and P0134 and applied to the input of “V/f curve” block, where the output voltage amplitude and frequency imposed to the motor are obtained. For further details on the speed reference, refer to [Chapter 7 LOGICAL COMMAND AND SPEED REFERENCE on page 7-1](#).

By monitoring the total and active output current, and the DC link voltage, compensators and regulators are implanted so as to help in the protection and performance of the V/f control. The operation and parameterization of those blocks are detailed in [Section 11.2 DC LINK VOLTAGE AND OUTPUT CURRENT LIMITATION on page 11-3](#).

The advantage of the V/f control is its simplicity and the need of few settings. The start-up is quick and simple normally requires little or no modification. Besides, in cases where the application allows the proper adjustments of the V/f curve, you save energy.

The V/f or scalar control is recommended for the following cases:

- Drive of several motors with the same inverter (multi-motor drive).
- Energy saving in the drive of loads with quadratic torque/speed relationship.
- Motor rated current lower than 1/3 of the inverter rated current.
- For test purposes, the inverter is turned on without motor or with a small motor with no load.
- Applications where the load connected to the inverter is not a three-phase induction motor.

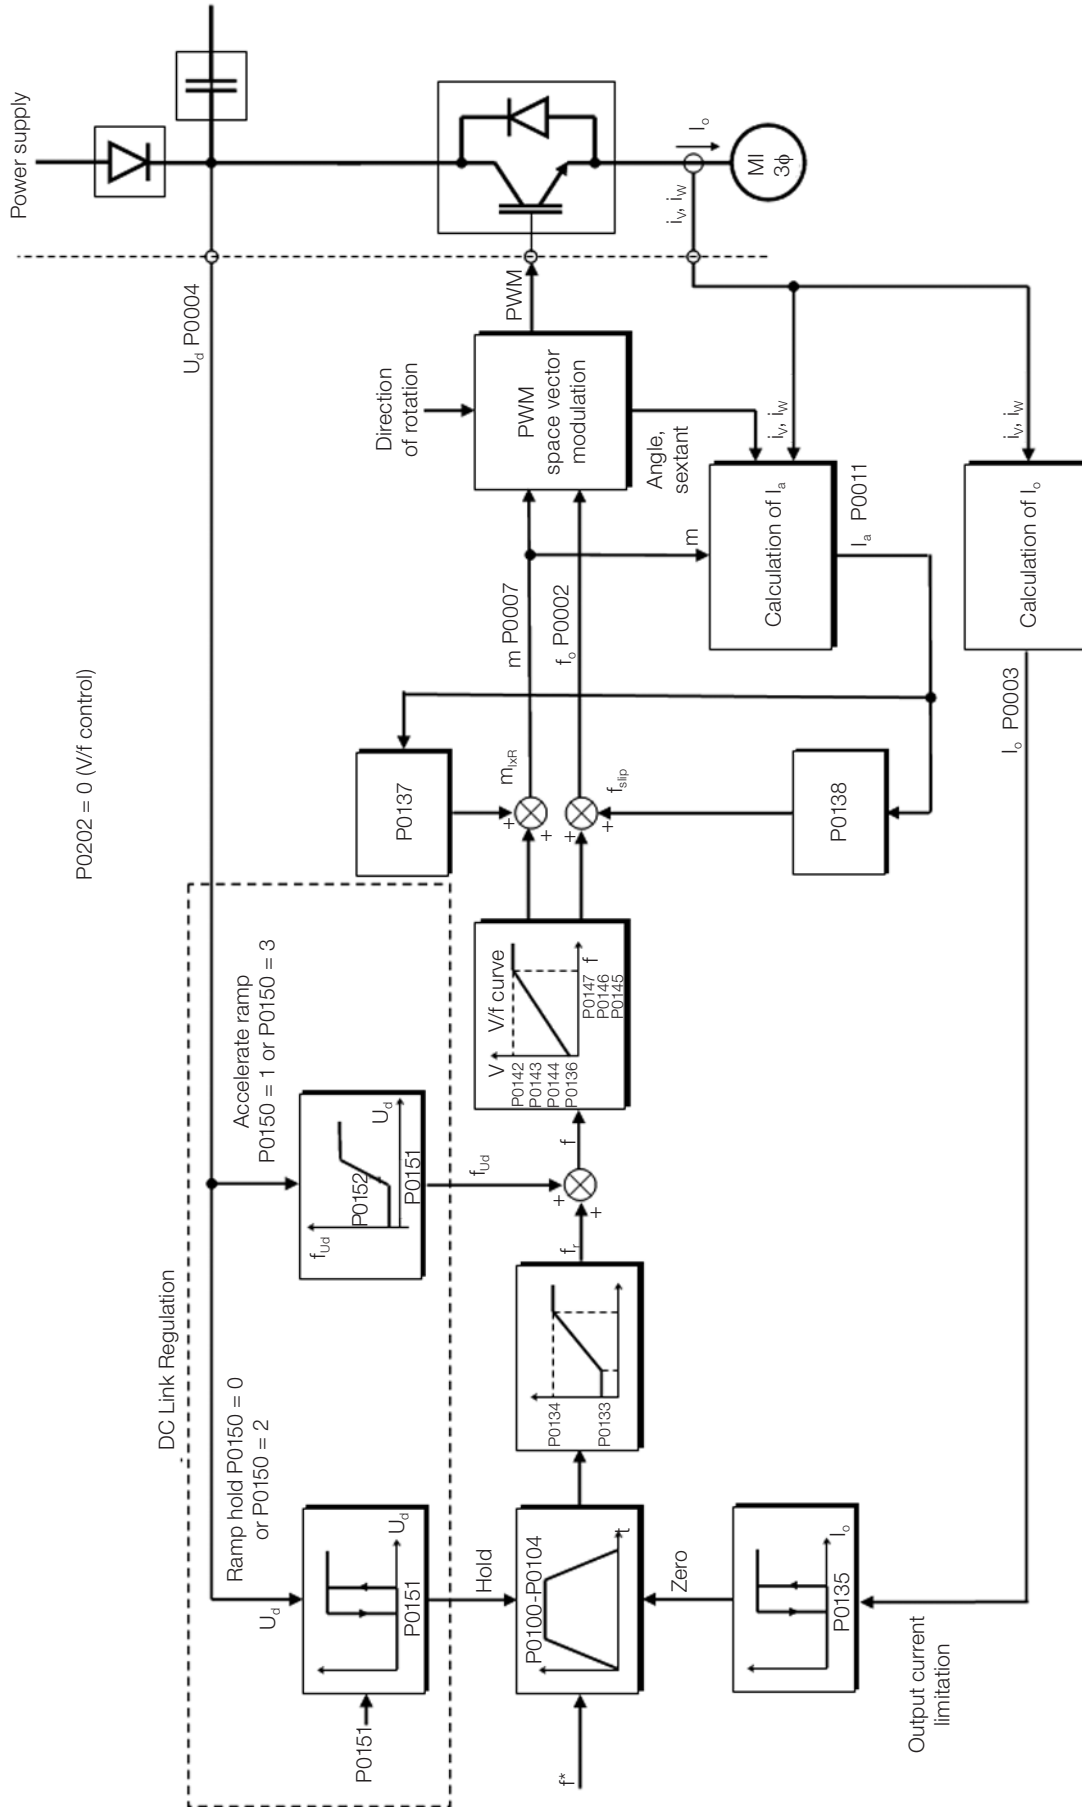


Figure 9.1: Block diagram of V/f scale control

9.1 PARAMETERIZATION OF THE V/f SCALAR CONTROL

The scalar control is the inverter factory default control mode for its popularity and because it meets most applications of the market. However, parameter P0202 allows the selection of other options for the control mode, as per [Chapter 8 AVAILABLE MOTOR CONTROL TYPES](#) on page 8-1.

The V/f curve is completely adjustable in five different points as shown in [Figure 9.2](#) on page 9-3, although the factory default defines a preset curve for motors 50 Hz or 60 Hz, as per options of P0204. In this format, point P_0 defines the voltage applied at 0 Hz, while P_3 defines the rated amplitude and frequency and beginning of field weakening. Intermediate points P_1 and P_2 allow the setting of the curve for a non-linear relationship between torque and speed, for instance, in fans where the load torque is quadratic in relation to the speed. The field weakening region is determined between P_3 and P_4 , where the amplitude is maintained in 100 %.

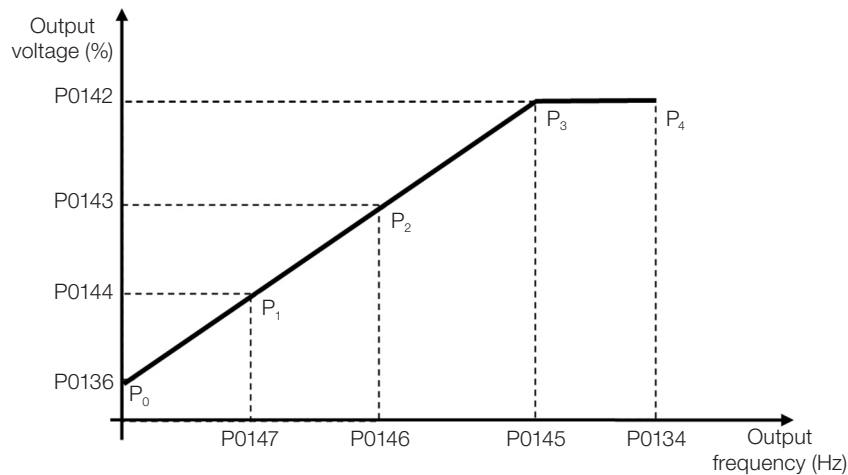


Figure 9.2: Curve V/f

The MW500 factory default settings define a linear relationship of the torque with the speed, overlapping points P_1 , P_2 and P_3 at 50 Hz or 60 Hz; refer to the description of P0204. In this way, V/f curve is a straight line defined by just two points, P0136 which is the constant term or voltage in 0 Hz and the rated frequency and voltage operation point (50 Hz or 60 Hz and 100 % of maximum output voltage).

The points P_0 [P0136, 0 Hz], P_1 [P0144, P0147], P_2 [P0143, P0146], P_3 [P0142, P0145] and P_4 [100 %, P0134] can be adjusted so that the voltage and frequency relationship imposed to the output approximates the ideal curve for the load. Therefore, for loads in which the torque behavior is quadratic in relation to the speed, such as in centrifugal pumps and fans, the points of the curve can be adjusted so energy saving is obtained.



NOTE!

A V/f quadratic curve can be approximated by: P0136 = 0; P0144 = 11.1 % and P0143 = 44.4 %.



NOTE!

If $P0147 \geq P0146$ or $P0146 \geq P0145$ or the V/f curve results in a segment with slope (rate) above 10 % / Hz, CONFIG (CONF) status is activated.



NOTE!

In frequencies below 0.1 Hz, the output PWM pulses are cut, except when the inverter is in DC Braking.

P0136 – Manual Torque Boost

Adjustable Range:	0.0 to 30.0 %	Factory Setting:	According to inverter model
Properties:	V/f		
Access Groups via HMI:	BASIC, MOTOR		

Description:

This parameter actuates in low speeds, that is, in the range from 0 Hz to P0147, increasing the inverter output voltage to compensate the voltage drop in the motor stator resistance so as to keep the torque constant.

The optimum setting is the smallest value of P0136 which allows the motor satisfactory start. A value greater than necessary will excessively increase the motor current at low speeds, which may lead the inverter to a fault condition (F0048, F0051 or F0070) or alarm (A0046, A0047 or A0050), as well as motor overheating. [Figure 9.3 on page 9-4](#) shows the region of actuation of the Torque Boost between points P₀ and P₁.

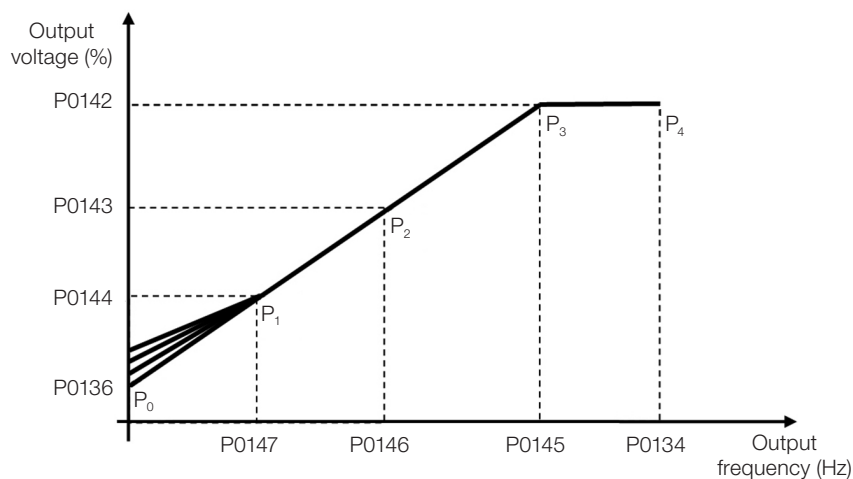


Figure 9.3: Torque boost region

P0142 – Maximum Output Voltage

P0143 – Intermediate Output Voltage

P0144 – Minimum Output Voltage

Adjustable Range:	0.0 to 100.0 %	Factory Setting:	P0142 = 100.0 % P0143 = 66.7 % P0144 = 33.3 %
Properties:	cfg, V/f		
Access Groups via HMI:			

Description:

These parameters allow adjusting the inverter V/f curve together with its orderly pairs P0145, P0146 and P0147.

NOTE! The parameter P0178 allows an output voltage regulation after V/f curve defined. This is useful for output voltage compensation or motor field weakening applications via SoftPLC or Network control.

P0145 – Field Weakening Start Frequency
P0146 – Intermediate Output Frequency
P0147 – Low Output Frequency

Adjustable Range:	0.0 to 500.0 Hz	Factory Setting:	P0145 = 60.0 (50.0) Hz P0146 = 40.0 (33.3) Hz P0147 = 20.0 (16.7) Hz
Properties:	cfg, V/f		
Access Groups via HMI:			

Description:

These parameters allow adjusting the inverter V/f curve together with its orderly pairs P0142, P0143 and P0144.

The V/f curve can be adjusted in applications where the motor rated voltage is smaller than the power supply voltage, for instance, in a 440 V power supply with 380 V motor.

The adjustment of the V/f curve is necessary when the motor has a frequency different from 50 Hz or 60 Hz, or when a quadratic approximation is desired for energy saving in centrifugal pumps and fans, or in special applications: when a transformer is used between the inverter and the motor or the inverter is used as a power supply.

P0137 – Automatic Torque Boost

Adjustable Range:	0.0 to 30.0 %	Factory Setting:	0.0 %
Properties:	V/f		
Access Groups via HMI:	<input type="text" value="MOTOR"/>		

Description:

The automatic torque boost compensates the voltage drop in the stator resistance because of active current. Look at [Figure 9.1 on page 9-2](#), where variable m_{IxR} corresponds to the automatic torque boost action on the modulation index defined by V/f curve.

P0137 actuates similarly to P0136, but the value set is applied proportionally to the output active current in relation to the maximum current (2 x P0295).

The setting criteria of P0137 are the same as those of P0136, that is, set the value as low as possible for the motor start and operation at low frequencies, because values above those increase the losses, heating and overload of the motor and inverter.

The block diagram of [Figure 9.4 on page 9-6](#) shows the automatic compensation action $I \times R$ responsible for the increment of the voltage in the ramp output according to the increase of the active current.

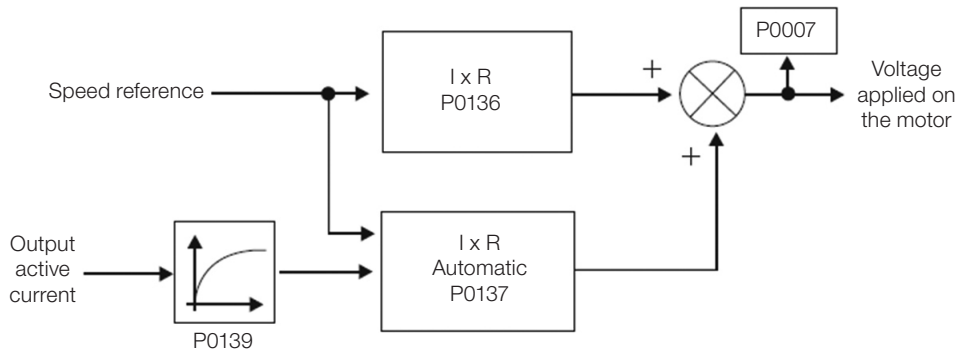


Figure 9.4: Block diagram of the automatic torque boost

P0138 – Slip Compensation

Adjustable Range:	-10.0 to 10.0 %	Factory Setting:	0.0 %
Properties:	V/f		
Access Groups via HMI:	MOTOR		

Description:

Parameter P0138 is used in the motor slip compensation function, when set for positive values. In this case, it compensates the speed drop due to application of the load on the shaft and, consequently, the slip. In this way, it increments the output frequency (Δf) considering the increase of the motor active current as shown in Figure 9.5 on page 9-6. In Figure 9.1 on page 9-2 this compensation is represented in the variable f_{slip} .

9

The setting in P0138 allows regulating with good accuracy the slip compensation by moving the operation point on the V/f curve, as shown in Figure 9.5 on page 9-6. Once P0138 is set, the inverter is able to keep the speed constant even with load variations.

Negative values are used in special applications where you wish to reduce the output speed considering the increase of the motor current.

E.g.: load distribution in motors driven in parallel.

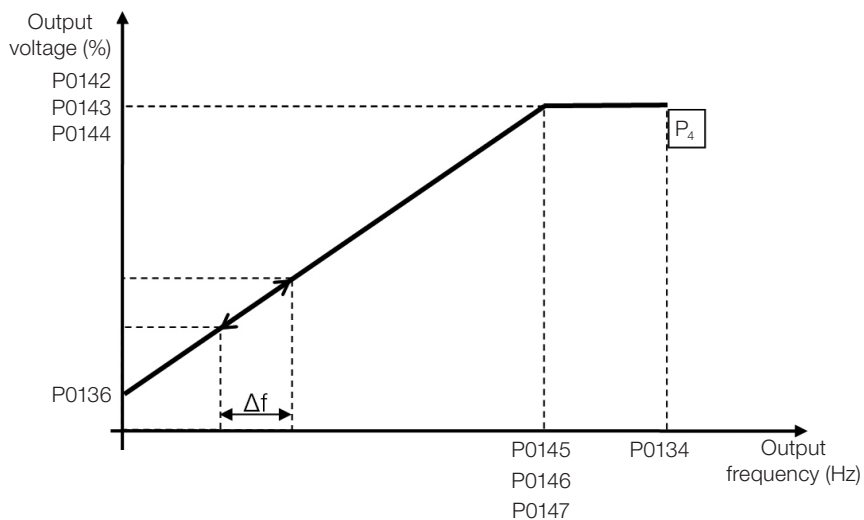


Figure 9.5: Slip compensation in an operation point of the standard V/f curve

9.2 START-UP IN V/f MODE


NOTE!

Read Chapter 3 Installation and Connection of the MW500 user's manual before installing, powering up or operating the inverter.

Sequence for installation, verification, power up and start-up.

1. Install the inverter: according to Chapter 3 Installation and Connection of the MW500 user's manual, making all the power and control connections.
2. Prepare and power up the inverter according to Section 3.2 Electrical Installation of the MW500 user's manual.
3. Load the factory default with P0204 = 5 (60 Hz) or P0204 = 6 (50 Hz), according to the input rated frequency (power supply) of the inverter used.
4. Use the "Oriented Start-Up" with P0317 = 1 to configure the main parameters of the V/f mode (P0202 = 0). The MW500 user's manual shows the screen sequence of the "Oriented Start-Up" of the V/f scalar control.
5. Following the "Oriented Start-Up", set the rated values of the motor service factor (P0398), voltage (P0400), current (P0401), frequency (P0403), speed (P0402) and power (P0404). In addition to those parameters, P0406 defines the motor ventilation type for automatic setting of P0156, P0157 and P0158, according to [Table 10.3 on page 10-7](#).
6. Parameter P0407 allows the setting of the motor power factor used in the EOC function; see [Section 11.7 ENERGY SAVING on page 11-13](#).
7. Setting parameter P0408 = 1 activates the self-tuning of the motor stator resistance in P0409. The correct setting of P0409 can improve the DC braking torque; see [Section 11.5 DC BRAKING on page 11-10](#).
8. In order to set a V/f curve different from the default, set the V/f curve using parameters P0136 to P0147.
9. Setting of specific parameters and functions for the application: program the digital and analog inputs and outputs, HMI keys, etc., according to the application requirements.

For applications:

- Simple applications that can use the factory default programming of the analog and digital inputs and outputs, use the HMI "BASIC" menu.
- Applications that require just the analog and digital inputs and outputs with programming different from the factory default, use the HMI "I/O" menu.
- Applications that require functions such as Flying Start, Ride-Through, DC Braking, Rheostatic Braking, etc., access and modify the parameter of those functions in the HMI "PARAM" menu.

10 VVW VECTOR CONTROL

The VVW vector control mode (Voltage Vector WEG) uses a control method with a much higher performance than the V/f control because of the load torque estimation and of the control of the magnetic flux in the air gap, as per scheme of [Figure 10.1 on page 10-2](#). In this control strategy, losses, efficiency, rated slip and power factor of the motor are considered in order to improve the control performance.

The main advantage compared to the V/f control is the best speed regulation with greater torque capacity at low speeds (frequencies below 5 Hz), allowing a relevant improvement in the drive performance in permanent duty. Besides, the VVW control has a quick and simple setting and it is suitable for most medium-performance applications in the control of three-phase induction motor.

By just measuring the output current, the VVW control instantly obtains the motor torque and slip. Thus, the VVW actuates in the output voltage compensation and slip compensation. Therefore, the VVW controller action replaces the classical V/f functions in P0137 and P0138, but with a calculation model much more sophisticated and accurate, meeting several load conditions or operation points of the application.

In order to achieve a good speed regulation in permanent duty with a good operation of the VVW control, the parameter setting in the range P0399 to P0407 and the stator resistance in P0409 are essential. Those parameters can easily be obtained on the motor nameplate and in the self-tuning routine activated by P0408.

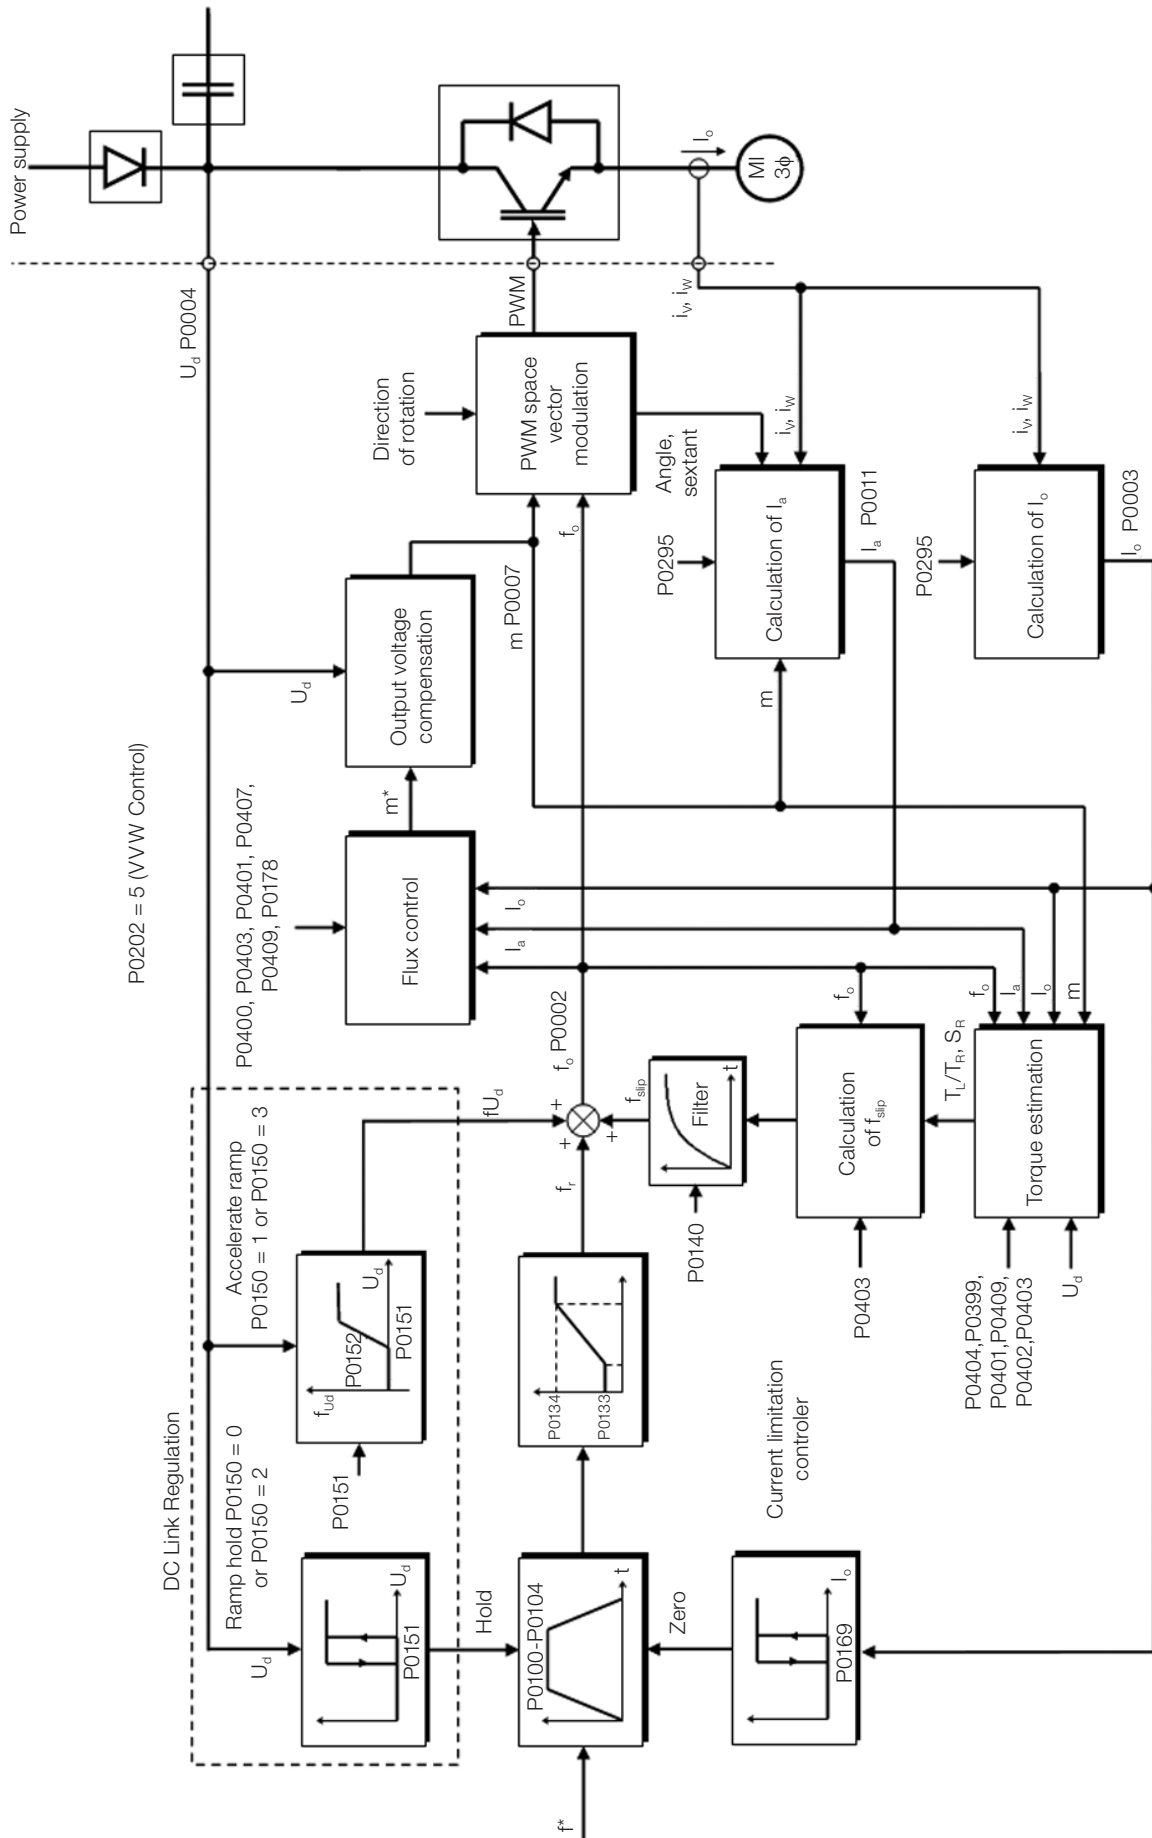


Figure 10.1: VVW control flow

10.1 VVW VECTOR CONTROL PARAMETERIZATION

The VVW control mode is selected by parameter P0202, control mode selection, as described in [Chapter 8 AVAILABLE MOTOR CONTROL TYPES](#) on page 8-1.

Opposite to the V/f scalar control, the VVW control requires a series of data from the motor nameplate and a self-tuning for its proper operation. Besides, it is recommended that the driven motor match the inverter, that is, the motor and inverter power be as close as possible.

The VVW control setting process is simplified by the HMI “STARTUP” menu, where the relevant parameters for the configuration of the VVW are selected for browsing the HMI.

Below are described the parameters to configure the VVW vector control setting. This data is easily obtained on WEG standard motor nameplates, however in older motors or motors made by other manufacturers, the data may not be readily available. In those cases, it is recommended first contact the motor manufacturer, measure or calculate the desired parameter. As a last resort, the user always can make a relationship with [Table 10.1](#) on page 10-3 and use the equivalent or approximate WEG standard motor parameter.


NOTE!

The correct setting of the parameters directly contributes to the VVW control performance.

Table 10.1: Characteristics of IV pole WEG standard motors

Power [P0404]		Frame	Voltage [P0400] (V)	Current [P0401] (A)	Frequency [P0403] (Hz)	Speed [P0402] (rpm)	Efficiency [P0399] (%)	Power Factor [P0407]	Stator Resistance [P0409] (Ω)
(HP)	(kW)								
0.16	0.12	63	220	0.85	60	1720	56.0	0.66	21.77
0.25	0.18	63		1.12		1720	64.0	0.66	14.87
0.33	0.25	63		1.42		1720	67.0	0.69	10.63
0.50	0.37	71		2.07		1720	68.0	0.69	7.37
0.75	0.55	71		2.90		1720	71.0	0.70	3.97
1.00	0.75	80		3.08		1730	78.0	0.82	4.13
1.50	1.10	80		4.78		1700	72.7	0.83	2.78
2.00	1.50	90S		6.47		1720	80.0	0.76	1.55
3.00	2.20	90L		8.57		1710	79.3	0.85	0.99
4.00	3.00	100L		11.6		1730	82.7	0.82	0.65
5.00	3.70	100L		13.8		1730	84.6	0.83	0.49
6.00	4.50	112M		16.3		1730	84.2	0.86	0.38
7.50	5.50	112M		20.0		1740	88.5	0.82	0.27
10.0	7.50	132S		26.6		1760	89.0	0.84	0.23
12.5	9.20	132M		33.0		1755	87.7	0.86	0.16
0.16	0.12	63	380	0.49	60	1720	56.0	0.66	65.30
0.25	0.18	63		0.65		1720	64.0	0.66	44.60
0.33	0.25	63		0.82		1720	67.0	0.69	31.90
0.50	0.37	71		1.20		1720	68.0	0.69	22.10
0.75	0.55	71		1.67		1720	71.0	0.70	11.90
1.00	0.75	80		1.78		1730	78.0	0.82	12.40
1.50	1.10	80		2.76		1700	72.7	0.83	8.35
2.00	1.50	90S		3.74		1720	80.0	0.76	4.65
3.00	2.20	90L		4.95		1710	79.3	0.85	2.97
4.00	3.00	100L		6.70		1730	82.7	0.82	1.96
5.00	3.70	100L		7.97		1730	84.6	0.83	1.47
6.00	4.50	112M		9.41		1730	84.2	0.86	1.15
7.50	5.50	112M		11.49		1740	88.5	0.82	0.82
10.0	7.50	132S		15.18		1760	89.0	0.84	0.68
12.5	9.20	132M		18.48		1755	87.7	0.86	0.47
15.0	11.0	132M		22.7		1755	88.5	0.83	0.43
20.0	15.0	160M		30.0		1760	90.2	0.83	0.23

Power [P0404]		Frame	Voltage [P0400] (V)	Current [P0401] (A)	Frequency [P0403] (Hz)	Speed [P0402] (rpm)	Efficiency [P0399] (%)	Power Factor [P0407]	Stator Resistance [P0409] (Ω)
(HP)	(kW)								
0.16	0.12	63	230	0.73	50	1375	57.0	0.72	30.62
0.25	0.18	63		1.05		1360	58.0	0.74	20.31
0.33	0.25	71		1.4		1310	59.0	0.76	14.32
0.50	0.37	71		1.97		1320	62.0	0.76	7.27
0.75	0.55	80		2.48		1410	68.0	0.82	5.78
1.00	0.75	80		3.23		1395	72.0	0.81	4.28
1.50	1.10	90S		4.54		1420	77.0	0.79	2.58
2.00	1.50	90L		5.81		1410	79.0	0.82	1.69
3.00	2.20	100L		8.26		1410	81.5	0.82	0.98
4.00	3.00	100L		11.3		1400	82.6	0.81	0.58
5.00	3.70	112M		14.2		1440	85.0	0.83	0.43
7.50	5.50	132S		19.1		1450	86.0	0.84	0.25
10.0	7.50	132M		25.7		1455	87.0	0.84	0.20
0.16	0.12	63		400		0.42	50	1375	57.0
0.25	0.18	63	0.60		1360	58.0		0.74	60.94
0.33	0.25	71	0.80		1310	59.0		0.76	42.96
0.50	0.37	71	1.13		1320	62.0		0.76	21.81
0.75	0.55	80	1.42		1410	68.0		0.82	17.33
1.00	0.75	80	1.86		1395	72.0		0.81	12.85
1.50	1.10	90S	2.61		1420	77.0		0.79	7.73
2.00	1.50	90L	3.34		1410	79.0		0.82	5.06
3.00	2.20	100L	4.75		1410	81.5		0.82	2.95
4.00	3.00	100L	6.47		1400	82.6		0.81	1.75
5.00	3.70	112M	8.18		1440	85.0		0.83	1.29
7.50	5.50	132S	11.0		1450	86.0		0.84	0.76
10.0	7.50	132M	14.8		1455	87.0		0.84	0.61
15.0	11.0	160M	22.1		1455	88.5		0.81	0.35
20.0	15.0	160L	29.1		1460	89.7		0.83	0.24

10

P0178 – Rated Flux

Adjustable Range: 0.0 to 150.0 % **Factory Setting:** 100.0 %

Properties:

Access Groups via HMI:

Description:

This parameter defines the desired flux in the motor air gap in percentage (%) of the rated flux. In general, it is not necessary to modify the value of P0178 of the standard value of 100 %. However, some specific situations may use values slightly above to increase the torque, or below to reduce the energy consumption.

NOTE! Only in Scalar V/f Control, the parameter P0178 allows an output voltage regulation after V/f curve defined. This is useful for output voltage compensation or motor field weakening applications via SoftPLC or Network control.

P0399 – Motor Rated Efficiency

Adjustable Range: 50.0 to 99.9 % **Factory Setting:** 75.0 %

Properties: cfg, VVW

Access Groups via HMI:

Description:

This parameter is important for the precise operation of the VVW control. A misconfiguration will cause incorrect calculation of the slip compensation, reducing the performance of the speed control.

P0400 – Motor Rated Voltage

Adjustable Range:	200 to 600 V	Factory Setting:	According to Table 10.2 on page 10-5
Properties:	cfg, VVW		
Access Groups via HMI:	<input type="text" value="MOTOR, STARTUP"/>		

Description:

Set according to the data on the motor nameplate and the wire connection on the motor terminal box. This value cannot be above the rated voltage value set in P0296 (power supply rated voltage).


NOTE!

In order to validate a new setting of P0400 out of the HMI “STARTUP” menu, it's necessary to de-energize/energize the inverter.

Table 10.2: Default setting of P0400 according to the identified inverter model

P0296	P0145 (Hz)	P0400 (V)
0	50.0	230
	60.0	220
1	50.0	400
	60.0	380
2	50.0	525
	60.0	575

For further information on model identification, refer to [Table 6.2 on page 6-3](#).

P0401 – Motor Rated Current

Adjustable Range:	0.0 to 200.0 A	Factory Setting:	$1.0 \times I_{nom}$
Properties:	cfg		
Access Groups via HMI:	<input type="text" value="MOTOR, STARTUP"/>		

P0402 – Motor Rated Speed

Adjustable Range:	0 to 30000 rpm	Factory Setting:	1710 rpm (1425 rpm)
Properties:	cfg		
Access Groups via HMI:	<input type="text" value="MOTOR, STARTUP"/>		

P0403 – Motor Rated Frequency

Adjustable Range:	0 to 500 Hz	Factory Setting:	60 Hz (50 Hz)
Properties:	cfg		
Access Groups via HMI:	<input type="text" value="MOTOR, STARTUP"/>		

P0404 – Motor Rated Power

Adjustable Range:	0 = 0.16 HP (0.12 kW) 1 = 0.25 HP (0.19 kW) 2 = 0.33 HP (0.25 kW) 3 = 0.5 HP (0.37 kW) 4 = 0.75 HP (0.55 kW) 5 = 1 HP (0.75 kW) 6 = 1.5 HP (1.1 kW) 7 = 2 HP (1.5 kW) 8 = 3 HP (2.2 kW) 9 = 4 HP (3 kW) 10 = 5 HP (3.7 kW) 11 = 5.5 HP (4 kW) 12 = 6 HP (4.5 kW) 13 = 7.5 HP (5.5 kW) 14 = 10 HP (7.5 kW) 15 = 12.5 HP (9 kW) 16 = 15 HP (11 kW) 17 = 20 HP (15 kW) 18 = 25 HP (18.5 kW) 19 = 30 HP (22 kW)	Factory Setting:	According to inverter model
Properties:	cfg, VVW		
Access Groups via HMI:	<input type="text" value="MOTOR, STARTUP"/>		

10



NOTE!

Parameters P0401 and P0404 have their value affected by parameter P0298. When the value of parameter P0298 is changed, the value of parameters P0401 and P0404 are also automatically modified.

P0406 – Motor Ventilation

Adjustable Range:	0 = Self-Ventilated 1 = Separate Ventilation	Factory Setting: 0
Properties:	cfg	
Access Groups via HMI:	<input type="text" value="MOTOR, STARTUP"/>	

Description:

Changing this parameter will change automatically the parameters related to the motor overload, in the following manner:

Table 10.3: Motor overload modification in function of P0406

P0406	P0156 (Overl. Cur. 100 %)	P0157 (Overl. Cur. 50 %)	P0158 (Overl. Cur. 20 %)
0	1.1 x P0401	0.8 x P0401	0.6 x P0401
1	1.1 x P0401	1.0 x P0401	0.8 x P0401

P0407 – Motor Rated Power Factor

Adjustable Range:	0.50 to 0.99	Factory Setting: 0.80
Properties:	cfg, VVW	
Access Groups via HMI:	<input type="text" value="MOTOR, STARTUP"/>	

Description:

The setting of parameters P0401, P0402, P0403, P0404 and P0407 must be according to the data on the nameplate of the motor used, taking into account the motor voltage.

P0408 – Self-Tuning

Adjustable Range:	0 = No 1 = No Rotation	Factory Setting: 0
Properties:	cfg, VVW	
Access Groups via HMI:	<input type="text" value="MOTOR, STARTUP"/>	

Description:

Parameter P0408 in 1 activates the self-tuning of the VVW mode, where the motor stator resistance is measured. The self-tuning can only be activated via HMI, and it can be interrupted at any time with the "O" key.

During the self-tuning, the bar graph shows the progress of the operation and the motor remains still, because a DC signal is sent to measure the stator resistance.

If the estimated value of the motor stator resistance is too high for the inverter used (for example: motor not connected or motor too small for the inverter) the inverter indicates fault F0033.


At the end of the self-tuning process, the measured motor stator resistance is saved in P0409.

P0409 – Stator Resistance

Adjustable Range:	0.01 to 99.99 Ω	Factory Setting:	According to inverter model
Properties:	cfg, VVW		
Access Groups via HMI:	MOTOR, STARTUP		

Description:

Motor phase stator resistance in ohms (Ω), assuming a star (Y) motor connection.

If the value adjusted in P0409 is too high or too low for the inverter used, the inverter indicates fault F0033. In order to exit this condition, just perform a reset by using the “” key. In this case, P0409 will be loaded with the factory default value which is equivalent to WEG IV pole standard motor stator resistance with power matched to the inverter, as per [Table 10.1 on page 10-3](#).



NOTE!

Parameter P0409 has its value affected by parameter P0298. When the value of parameter P0298 is changed, the value of parameters P0409 is also automatically modified.


10.2 START-UP IN VVW MODE



NOTE!

Read Chapter 3 Installation and Connection of the MW500 user’s manual before installing, powering up or operating the inverter.


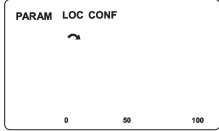

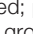
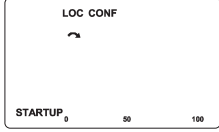














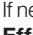

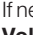
Sequence for installation, verification, power up and start-up.

1. Install the inverter according to Chapter 3 Installation and Connection of the MW500 user’s manual, making all the power and control connections.
2. Prepare and power up the inverter according to Section 3.2 Electrical Installation of the MW500 user’s manual.
3. Load the correct factory default in P0204 based on the motor rated frequency (set P0204 = 5 for 60 Hz motors and P0204 = 6 for 50 Hz motors).
4. Program the digital and analog inputs and outputs, HMI keys, etc., according to the application requirements.
5. Activation of the VVW control: set P0202 = 5; then the “STARTUP” menu browses the relevant parameters to set the VVW.
6. Parameterization of the VVW control: browsing the “STARTUP” menu, set parameters P0399, P0400, P0401, P0402, P0403, P0404 and P0407 according to the data on the motor nameplate. If some of those data are not available, insert the approximate value by calculation or similarity to WEG standard motor – see [Table 10.1 on page 10-3](#).
7. Self-Tuning of the VVW control: the self-tuning is activated by setting P0408 = 1. In this process, the inverter applies DC to the motor to measure the stator resistance, while the HMI bar graph shows the progress of the self-tuning. The self-tuning process can be interrupted at any time by pressing the “” key.
8. End of the Self-Tuning: at end of the self-tuning, the HMI returns to the browsing menu, the bar displays the parameter programmed by P0207 again and the stator resistance measured is stored in P0409. On the other hand, if the self-tuning fails, the inverter will indicate a fault. The most common fault in this case is F0033, which indicates error in the estimated stator resistance. Refer to [Chapter 15 FAULTS AND ALARMS on page 15-1](#).

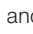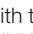For applications:

- That can use the factory default programming of the analog and digital inputs and outputs, use the HMI “BASIC” menu.
- That require just the analog and digital inputs and outputs with programming different from the factory default, use the HMI “I/O” menu.
- That require functions such as Flying Start, Ride-Through, DC braking, Rheostatic braking, etc., access and modify the parameter of those functions in the HMI “PARAM” menu. For further information on the HMI menus, refer to [Chapter 5 PROGRAMMING BASIC INSTRUCTIONS](#) on page 5-1.

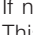For better visualization of the start-up in the VVW mode, check [Figure 10.2](#) on page 10-10, below:

Step	Action/Indication on the Display	Step	Action/Indication on the Display
1	 <ul style="list-style-type: none"> ■ Monitoring mode ■ Press the ENTER/MENU key to enter the 1st level of the programming mode 	2	 <ul style="list-style-type: none"> ■ The PARAM group is selected; press the  or  key until selecting the STARTUP group
3	 <ul style="list-style-type: none"> ■ When the STARTUP group is selected, press the ENTER/MENU key 	4	 <ul style="list-style-type: none"> ■ The parameter “P0317 – Oriented Start-Up” is then selected, press the ENTER/MENU to get into the parameter content
5	 <ul style="list-style-type: none"> ■ Change the parameter P0317 to “1 - Yes”, by using the  key 	6	 <ul style="list-style-type: none"> ■ Press ENTER/MENU and with the  and  keys set the value 5, which activates VVW control mode
7	 <ul style="list-style-type: none"> ■ Press ENTER/MENU to save the modification of P0202 	8	 <ul style="list-style-type: none"> ■ Press the  key to proceed with the Startup of the VVW
9	 <ul style="list-style-type: none"> ■ If necessary, change “P0296 - Line Rated Voltage”. This change will affect P0151, P0153, P0185, P0321, P0322, P0323 and P0400, or press the  key for the next parameter 	10	 <ul style="list-style-type: none"> ■ If necessary, change “P0398 - Motor Service Factor”. This change will affect the current and the time of the motor overload protection operation, or press the  key for the next parameter
11	 <ul style="list-style-type: none"> ■ If necessary, modify the content of “P0399 – Motor Rated Efficiency”, or press the  key for the next parameter 	12	 <ul style="list-style-type: none"> ■ If necessary, modify the content of “P0400 – Motor Rated Voltage”, or press the  key for the next parameter

Step	Action/Indication on the Display	Step	Action/Indication on the Display
13	<ul style="list-style-type: none"> If necessary, modify the content of “P0401 – Motor Rated Current”, or press the key for the next parameter 	14	<ul style="list-style-type: none"> If necessary, modify the content of “P0403 – Motor Rated Frequency”, or press the key for the next parameter
15	<ul style="list-style-type: none"> If necessary, modify the content of “P0402 – Motor Rated Speed”, or press the key for the next parameter 	16	<ul style="list-style-type: none"> If necessary, modify the content of “P0404 – Motor Rated Power”, or press the key for the next parameter
17	<ul style="list-style-type: none"> If necessary, change “P0406 - Motor Ventilation” parameter, or press the key for the next parameter 	18	<ul style="list-style-type: none"> If necessary, modify the content of “P0407 – Motor Rated Power Factor”, or press the key for the next parameter
19	<ul style="list-style-type: none"> At this point, the HMI shows the option to do the Selftuning. Whenever possible, execute the Self-tuning. To activate the Self-tuning, change the value of P0408 to “1” The keypad will show “CONF” and “RUN” status simultaneously during the self-tuning. The “RUN” status is automatically off and parameter P0408 is automatically set back to zero Press the key for the next parameter 	20	<ul style="list-style-type: none"> To exit the STARTUP menu, just press BACK/ESC
21	<ul style="list-style-type: none"> By means of the and keys, select the desired menu or press BACK/ESC again to return directly to the HMI monitoring mode 		

Figure 10.2: Startup of the VVW mode

11 COMMON FUNCTIONS TO ALL THE CONTROL MODES

This chapter describes the functions common to the inverter V/f and VVW control modes, but which interferes in the drive performance.

11.1 RAMPS

The inverter ramp functions allow the motor to accelerate or decelerate faster or slower. They are adjusted by parameters that define the linear acceleration time between zero and the maximum speed (P0134) and the time for a linear deceleration from the maximum speed to zero.

In the MW500, three ramps with different functions were implemented:

- 1st Ramp – standard for most functions.
- 2nd Ramp – it may be activated by the user, according to the drive requirement, by means of the inverter command word or by a digital input.
- 3rd Ramp – it is used for the inverter protection functions, such as: Current Limitation, DC link Control, Quick Stop, etc. The 3rd Ramp has priority over the other ramps.



NOTE!

The setting with too short ramp time may cause overcurrent in the output (F0070), undervoltage (F0021) or overvoltage (F0022) of the DC link.

P0100 – Acceleration Time

Adjustable Range:	0.1 to 999.0 s	Factory Setting:	10.0 s
--------------------------	----------------	-------------------------	--------

Properties:

Access Groups via HMI:

Description:

Acceleration time from zero to maximum speed (P0134).

P0101 – Deceleration Time

Adjustable Range:	0.1 to 999.0 s	Factory Setting:	10.0 s
--------------------------	----------------	-------------------------	--------

Properties:

Access Groups via HMI:

Description:

Deceleration time from maximum speed (P0134) to zero.

P0102 – Acceleration Time 2nd Ramp

Adjustable Range: 0.1 to 999.0 s **Factory Setting:** 10.0 s

Properties:

Access Groups via HMI:

Description:

Acceleration time from zero to maximum speed (P0134) when the 2nd Ramp is active.

P0103 – Deceleration Time 2nd Ramp

Adjustable Range: 0.1 to 999.0 s **Factory Setting:** 10.0 s

Properties:

Access Groups via HMI:

Description:

Deceleration time from maximum speed (P0134) to zero when the 2nd Ramp is active.

P0104 – S Ramp

Adjustable Range: 0 = Inactive, 1 = Active **Factory Setting:** 0

Properties: cfg

Access Groups via HMI:

Description:

This parameter allows the inverter acceleration and deceleration ramps to have a non-linear profile, similar to an “S”, aiming at reducing the mechanical shocks on the load, as shown in [Figure 11.1 on page 11-2](#).

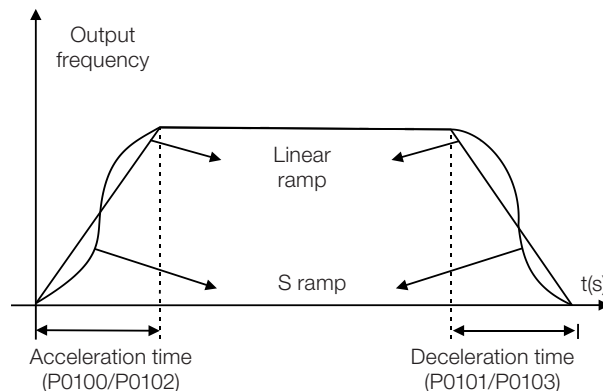


Figure 11.1: S or Linear Ramp

P0105 – 1st / 2nd Ramp Selection

Adjustable Range:	0 = First Ramp 1 = Second Ramp 2 = DIx 3 = Serial/USB 4 = Reserved 5 = CO/DN/DP/Eth 6 = SoftPLC	Factory Setting: 3
--------------------------	---	---------------------------

Properties:

Access Groups via HMI:

Description:

It defines the command origin source to activate the 2nd Ramp.

Note: Parameter P0680 (Logical Status) indicates if the 2nd Ramp is active or not. For further information on this parameter, refer to [Section 7.3 INVERTER CONTROL AND STATUS WORD on page 7-12](#).

NOTE! The inactive status of any of the sources activates the 1st Ramp. The same occurs in option 2 (DIx) and there is no digital input for the 2nd Ramp.

P0106 – 3rd Ramp Accel. Time

Adjustable Range:	0.1 to 999.0 s	Factory Setting: 5.0 s
--------------------------	----------------	-------------------------------

Properties:

Access Groups via HMI:

Description:

Acceleration time from zero to maximum speed (P0134) or deceleration from maximum speed (P0134) to zero when the 3rd Ramp is active.

11.2 DC LINK VOLTAGE AND OUTPUT CURRENT LIMITATION

The DC link voltage and output current limitation are protection functions of the inverter which act on the ramp control according to the P0150 options, aiming at containing the rise of voltage on the DC link and of the output current. In this way, the following of the reference by the ramp is blocked and the output speed follows the 3rd Ramp for P0133 or P0134.

When the DC link voltage is too high, the inverter may freeze (hold) the deceleration ramp or increase the output speed in order to contain this voltage. On the other hand, when the output current is too high, the inverter may decelerate or freeze (hold) the acceleration ramp in order to reduce this current. Those actions prevent the occurrence of faults F0022 and F0070, respectively.

Both protections normally occur at different moments of the inverter operation, but in case of occurrence at the same time, by definition, the DC link limitation has higher priority than the output current limitation.

There are two modes to limit the DC link voltage during the motor braking: “Ramp Holding” (P0150 = 0 or 2) and “Accelerate Ramp” (P0150 = 1 or 3). Both actuate limiting the braking torque and power, so as to prevent the shutting down of the inverter by overvoltage (F0022). This situation often occurs when a load with high moment of inertia is decelerated or when short deceleration time is programmed.



NOTE!

The inverter protection functions use the 3rd Ramp defined by P0106 for both acceleration and deceleration.

11.2.1 DC Link Voltage Limitation by “Ramp Hold” P0150 = 0 or 2

- It has effect during deceleration only.
- Actuation: when the DC link voltage reaches the level set in P0151, a command is set to the “ramp” block, which inhibits the motor speed variation according to [Figure 9.1 on page 9-2](#) and [Figure 10.1 on page 10-2](#).
- Use recommended in the drive of loads with high moment of inertia referred to the motor shaft or loads that require short deceleration ramps.

11.2.2 DC Link Voltage Limitation by “Accelerate Ramp” P0150 = 1 or 3

- It has effect in any situation, regardless the motor speed condition: accelerating, decelerating or constant speed.
- Actuation: the DC link voltage is measured (P0004) and compared to the value set in P0151; the difference between those signals (error) is multiplied by the proportional gain (P0152); the result is then added to the ramp output, as per [Figure 11.4 on page 11-6](#) and [Figure 11.5 on page 11-6](#).
- Use recommended in the drive of loads that require braking torques at constant speed situation in the inverter output. For example, drive of loads with eccentric shaft as in sucker rod pumps; another application is the load handling with balance like in the translation in overhead cranes.



NOTE!

When using Rheostatic Braking, the function “Ramp Hold” or “Accelerate Ramp” must be disabled. Refer to description of P0151.

P0150 – Type DC V/f Link Regulator

Adjustable Range:	0 = hold_Ud and decel_LC 1 = accel_Ud and decel_LC 2 = hold_Ud and hold_LC 3 = accel_Ud and hold_LC	Factory Setting: 0
Properties:	cfg	
Access Groups via HMI:	<input type="text" value="MOTOR"/>	

Description:

P0150 configures the behavior of the ramp for the limitation functions of the DC Link Voltage and Current Limitation. In those cases, the ramp ignores the reference and takes an action of accelerating (accel), decelerating (decel) or freezing (hold) the normal path of the ramp. That occurs because of the limit pre-defined in P0151 and P0135 for the DC link (Ud) Limitation and for Current (LC) Limitation, respectively.

P0151 – DC Link Regulation Level

Adjustable Range:	339 to 1200 V	Factory Setting: 400 V (P0296 = 0) 800 V (P0296 = 1) 1000 V (P0296 = 2)
Properties:		
Access Groups via HMI:	<input type="text" value="MOTOR"/>	

Description:

Voltage level to activate the DC Link Voltage regulation.

P0152 – Gain Proportional to the DC Link Voltage Regulator

Adjustable Range:	0.00 to 9.99	Factory Setting:	1.50
Properties:			
Access Groups via HMI:	MOTOR		

Description:

Gain proportional to the DC link voltage controller.

When the option of P0150 is 1 or 3, the value of P0152 is multiplied by the DC link voltage “error”, that is, error = current DC link voltage – P0151. The result is directly added to the inverter output frequency in Hz. This resource is normally used to prevent overvoltage in applications with eccentric loads.

The next figures show the block diagrams and example graphs.

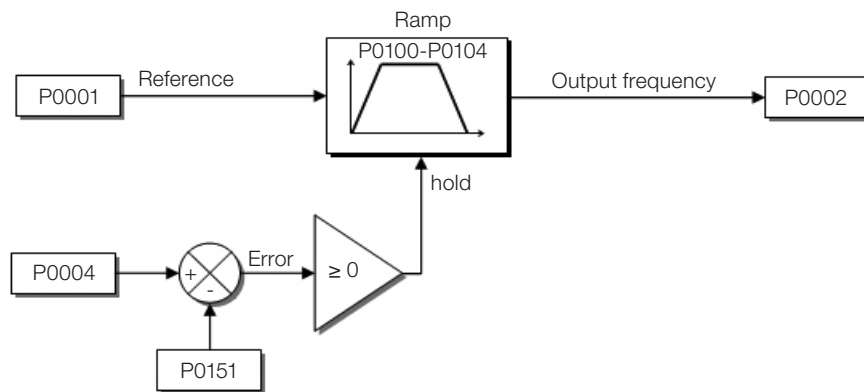


Figure 11.2: Block diagram DC link voltage limitation – Ramp Hold

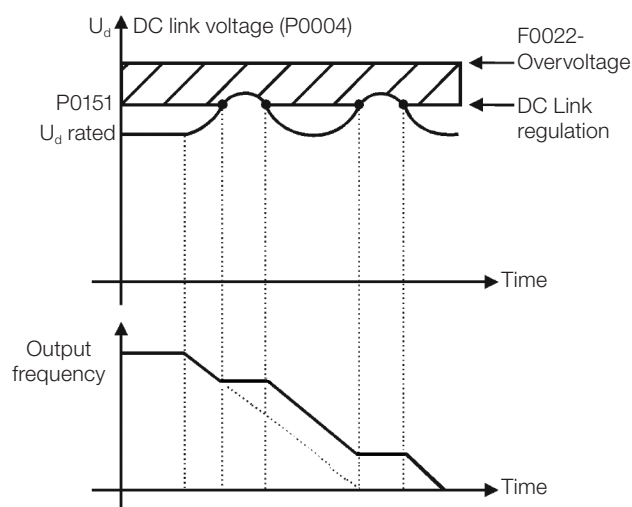


Figure 11.3: Example graph of DC link voltage limitation – Ramp Hold

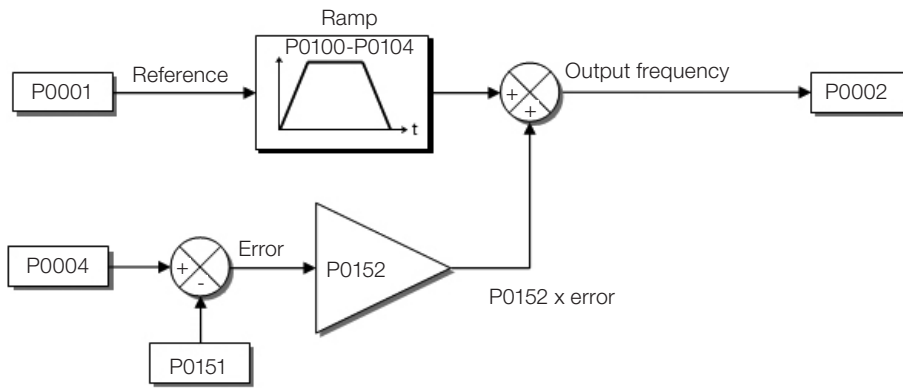


Figure 11.4: Block diagram of DC link voltage limitation – Accelerate Ramp

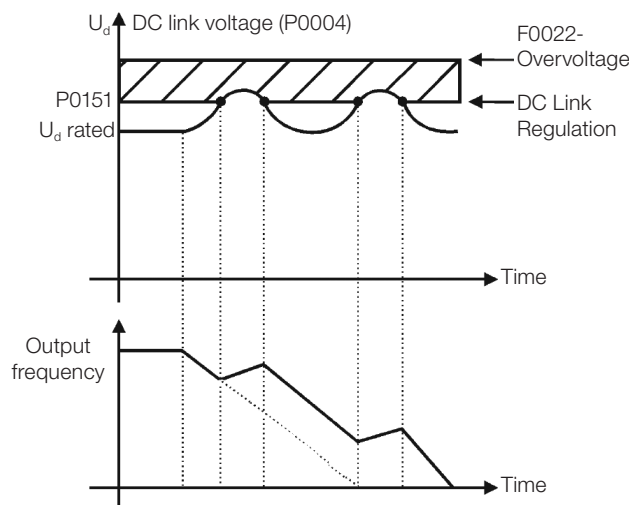


Figure 11.5: Example graph of the DC link voltage limitation – Accelerate Ramp

Like in the DC link voltage regulation, the output current regulation also has two operating modes: “Ramp Holding” (P0150 = 2 or 3) and “Decelerate Ramp” (P0150 = 0 or 1). Both actuate limiting the torque and power delivered to the motor, so as to prevent the shutting down of the inverter by overcurrent (F0070). This situation often occurs when a load with high moment of inertia is accelerated or when short acceleration time is programmed.

11.2.3 Output Current Limitation by “Ramp Hold” P0150 = 2 or 3:

- It prevents the motor from collapsing during torque overload in the acceleration or deceleration.
- Actuation: if the motor current exceeds the value set in P0135 during acceleration or deceleration, the speed will not be incremented (acceleration) or decremented (deceleration). When the motor current reaches a value below P0135, the motor accelerates or decelerates again. Refer to [Figure 11.6 on page 11-7](#).
- It has a faster action than the “Decelerate Ramp” mode.
- It acts in the motorization and regeneration modes.

11.2.4 Current Limitation Type “Decelerate Ramp” P0150 = 0 or 1:

- It prevents the motor from collapsing during torque overload in the acceleration or constant speed.
- Actuation: if the motor current exceeds the value set in P0135, a null value is forced for the speed ramp input forcing the motor deceleration. When the motor current reaches a value below P0135, the motor accelerates again. Look at [Figure 11.6 on page 11-7](#).

P0135 – Maximum Output Current

Adjustable Range: 0.0 to 200.0 A


Factory Setting: $1.5 \times I_{nom}$

Properties:


Access Groups via HMI: BASIC, MOTOR

Description:

Current level to activate the current limitation for the ramp hold and decelerate ramp modes, as per [Figure 11.6 on page 11-7](#), respectively.

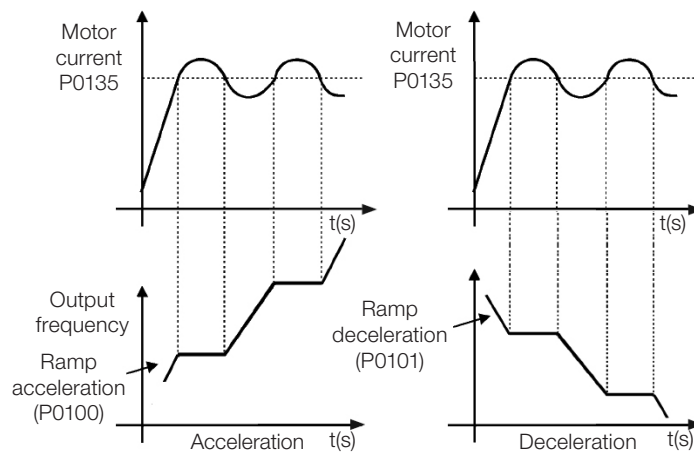

(a) Ramp Hold

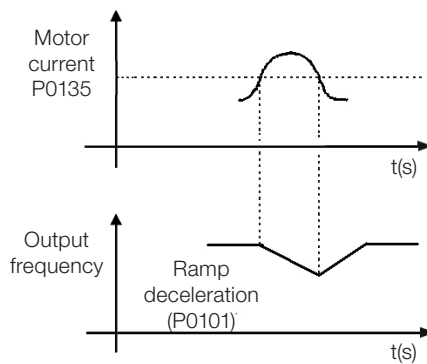

(b) Ramp Deceleration

Figure 11.6: (a) and (b) Actuation modes of current limitation via P0135



NOTE!

Parameter P0135 has its value affected by parameter P0298. When the value of parameter P0298 is changed, the value of parameters P0135 is also automatically modified.

11.3 SLEEP MODE

The Sleep mode allows the inverter to turn off the motor when the speed reference is below the value programmed in P0217 for a period defined by P0218. In this way, the speed reference itself is able to turn off the motor, reducing the energy consumption. Besides, there is no need of digital command to drive the motor, that is, the reference also actuates as a logical command.

Common Functions to All the Control Modes

When the PID controller is active, the condition for the Sleep mode is incremented by P0535, besides parameters P0217 and P0218. This condition adds a minimum deviation criterion of the process variable in relation to the Setpoint (error), ensuring that the PID keeps the process variable control over the Sleep mode. For further details, refer to [Section 13.3 SLEEP MODE WITH PID on page 13-7](#).

The Sleep mode is signaled in P0006 equal to 7.



DANGER!

When in the Sleep mode, the motor can spin at any time considering the process conditions. If you wish to handle the motor or execute any kind of maintenance, power down the inverter.



DANGER!

Quand en mode Sleep, le moteur peut tourner subitement en fonction des conditions du procès. S'il faut manipuler le moteur ou faire de l'entretien, déconnectez le variateur.

P0217 – Sleep Mode Frequency

Adjustable Range:	0.0 to 500.0 Hz	Factory Setting:	0.0 Hz
--------------------------	-----------------	-------------------------	--------

Properties:

Access Groups via HMI:

Description:

Parameter P0217 defines a value for the frequency reference, seeing that below this value the inverter may go into the Sleep mode depending also on P0218 and P0535.

The Sleep mode disables the inverter at moments in which the frequency reference is below P0217. That will happen after the time interval set in P0218.

If the frequency reference goes above P0217 again, the inverter will exit the Sleep mode automatically. However, if the inverter is in the PID mode in automatic, besides the previous condition, if the error in the PID is higher than the value programmed in P0535, the inverter will also exit the Sleep mode.

P0218 – Sleep Mode Time

Adjustable Range:	0 to 999 s	Factory Setting:	0 s
--------------------------	------------	-------------------------	-----

Properties:

Access Groups via HMI:

Description:

The parameter P0218 establishes the time interval in which the Sleep mode conditions by P0217 and P0535 must remain stable. That prevents that momentary disturbances and oscillations incorrectly activate the sleep state.

11.4 FLYING START / RIDE-THROUGH

The Flying Start function allows driving a motor that is in free spinning, accelerating it from the rotation in which it is. The Ride-Through function allows recovering the inverter, with no locking by undervoltage, when there is an instant drop in the power supply.

Both functions have as a premise the special case in which the motor is spinning in the same direction and at a speed close to the speed reference, and, thus, immediately applying to the output the speed reference and increasing the output voltage in ramp, the slip and the starting torque are minimized.

P0320 – Flying Start (FS) / Ride-Through (RT)

Adjustable Range:	0 = OFF 1 = Flying Start 2 = Flying Start / Ride-Through 3 = Ride-Through	Factory Setting: 0
Properties:	cfg	
Access Groups via HMI:		

Description:

Parameter P0320 selects the use of the Flying Start and Ride-Through functions. More details in the following sections.

P0331 – Voltage Ramp for FS and RT

Adjustable Range:	0.2 to 60.0 s	Factory Setting: 2.0 s
Properties:		
Access Groups via HMI:		

Description:

This parameter determines the rising time of the output voltage during the execution of the Flying Start and Ride-Through functions.

11.4.1 Flying Start Function

In order to activate this function, just program P0320 in 1 or 2; thus the inverter will impose a fixed frequency at the start, defined by the speed reference, and apply the voltage ramp defined in parameter P0331. In this way, the start current is reduced. On the other hand, if the motor is at rest, the speed reference and the real speed of the motor are very different or the direction of rotation is inverted; the result in such cases may be worse than the conventional start without Flying Start.

The Flying Start function is applied on loads with high inertia or systems that require start with the motor spinning. Besides, the function may be deactivated dynamically by a digital input P0263 to P0270 programmed for “24 = Disable Flying Start”. In this way, the user may activate the function in a convenient way according to the application.

11.4.2 Ride-Through Function

The Ride-Through function will disable the inverter output pulses (IGBT) as soon as the supply voltage reaches a value below the undervoltage value. A fault due to undervoltage (F0021) does not occur and the DC link voltage will slowly drop until the supply voltage returns. In case it takes the supply voltage too long to return (over 2 seconds), the inverter may indicate F0021 (undervoltage on the DC link). If the supply voltage returns before, the inverter will enable the pulses again, imposing the speed reference instantly (like in the Flying Start function) and making a voltage ramp with time defined by parameter P0331. Refer to [Figure 11.7 on page 11-10](#).

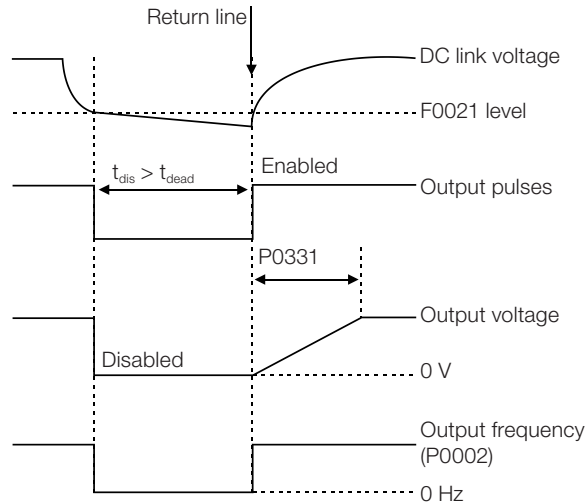


Figure 11.7: Actuation of the Ride-Through function

The Ride-Through function allows recovering the inverter without locking by undervoltage F0021 for momentary power supply drops. The time interval accepted during a fault is at most two seconds.

11.5 DC BRAKING

The DC Braking allows stopping the motor by applying direct current to it. The current applied at the DC braking is proportional to the braking torque and may be set in P0302. It is set in percentage (%) of the inverter rated current considering the motor of power compatible with the inverter.

P0299 – DC Braking Time at Start

Adjustable Range:	0.0 to 15.0 s	Factory Setting:	0.0 s
Properties:			
Access Groups via HMI:			

Description:
DC Braking duration at the start.

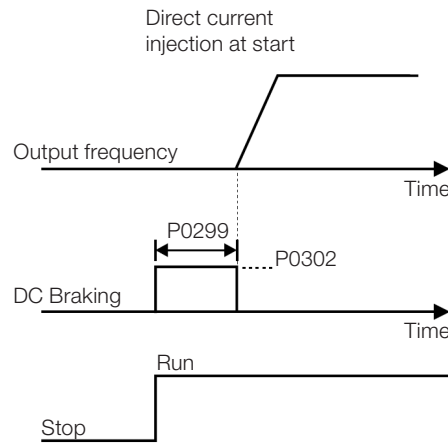


Figure 11.8: DC Braking actuation at start

P0300 – DC Braking Time at Stop

Adjustable Range: 0.0 to 15.0 s

Factory Setting: 0.0 s

Properties:

Access Groups via HMI:

Description:

DC braking duration at the stop. Figure 11.9 on page 11-11 shows the braking behavior at the stop, where the dead time for the demagnetization of the motor can be observed. This time is proportional to the speed at the moment of the injection of direct current.

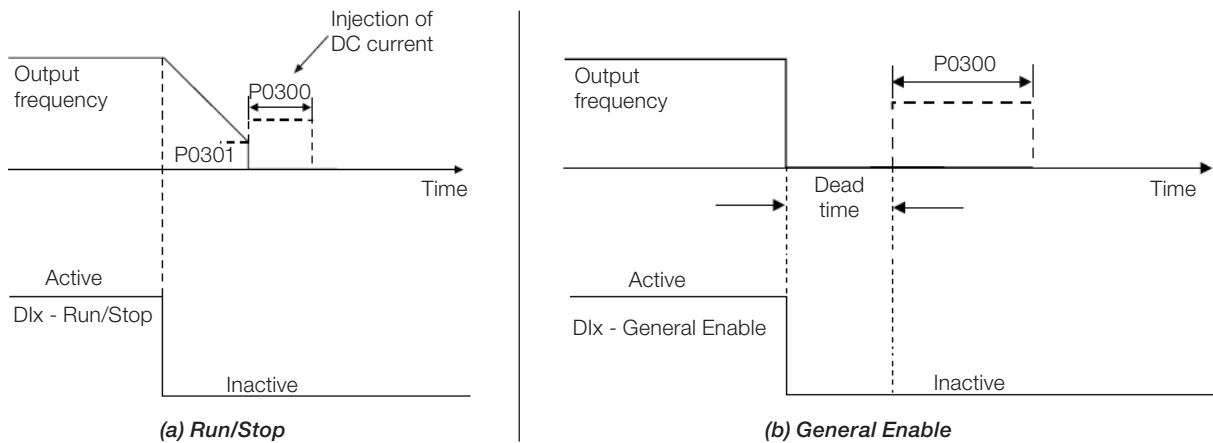


Figure 11.9: (a) and (b) Actuation of DC braking

During the braking process, if the inverter is enabled, the braking is interrupted and the inverter will start operating normally.



ATTENTION!

The DC braking can continue acting even if the motor has already stopped. Be careful with the thermal dimensioning of the motor for short-period cyclic braking.

P0301 – Frequency to Begin DC Braking at Stop

Adjustable Range:	0.0 to 500.0 Hz	Factory Setting:	3.0 Hz
--------------------------	-----------------	-------------------------	--------

Properties:

Access Groups via HMI:

Description:

This parameter establishes the initial point to apply the DC braking at the stop when the inverter is disabled by ramp, as per [Figure 11.9 on page 11-11](#).

P0302 – Voltage Applied to the DC Braking

Adjustable Range:	0.0 to 100.0 %	Factory Setting:	20.0 %
--------------------------	----------------	-------------------------	--------

Properties:

Access Groups via HMI:

Description:

This parameter sets the DC voltage (DC braking torque) applied to the motor during the braking.

The setting must be done by gradually increasing the value of P0302, which varies from 0.0 to 100.0 % of the rated braking voltage, until the desired braking is obtained.

The 100 % braking voltage is the DC voltage value, which results in two times the rated current for the motor with power matched to the inverter. Therefore, if the inverter has a power too much higher than the motor, the braking torque will be too low; however, if the opposite occurs, there might be overcurrent during the braking, as well as motor overheating.

11.6 AVOIDED FREQUENCY

This inverter function prevents the motor from operating permanently at frequency values in which, for example, the mechanical system goes into resonance (causing excessive vibration or noises).

P0303 – Skip Frequency 1

Adjustable Range:	0.0 to 500.0 Hz	Factory Setting:	20.0 Hz
--------------------------	-----------------	-------------------------	---------

P0304 – Skip Frequency 2

Adjustable Range:	0.0 to 500.0 Hz	Factory Setting:	30.0 Hz
--------------------------	-----------------	-------------------------	---------

P0306 – Skip Band

Adjustable Range: 0.0 to 25.0 Hz

Factory Setting: 0.0 Hz

Properties:

Access Groups via HMI:

Description:

The actuation of those parameters is done as presented in Figure 11.10 on page 11-13 below.

The passage by the avoided frequency band ($2 \times P0306$) is done through acceleration/deceleration ramp.

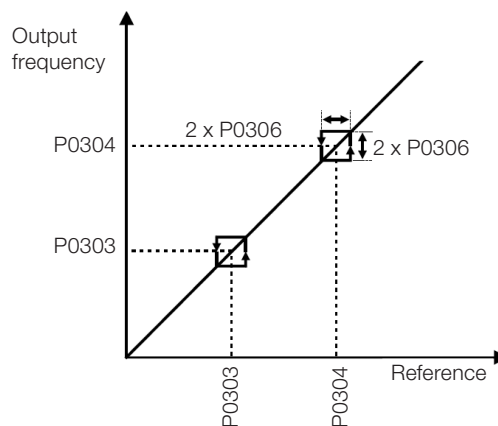


Figure 11.10: Actuation of the avoided frequency

11.7 ENERGY SAVING

The efficiency of a machine is defined as being the ratio between the output mechanical power and the input electrical power. Remember that the mechanical power is the product between torque and rotor speed, and that the input electric power is the sum of the output mechanical power and the motor losses.

In the case of the three-phase induction motor, the optimized efficiency is achieved with $\frac{3}{4}$ of the rated load. In the region below this point, the Energy Saving function has its best performance.

The Energy Saving function acts directly on the voltage applied at the inverter output; thus, the flux relationship delivered to the motor is changed so as to reduce the motor losses and enhance the efficiency, consequently reducing consumption and noise.

The function is active when the load is below the maximum value (P0588) and the speed is above the minimum value (P0590). In addition, in order to prevent the stalling of the motor, the applied voltage is limited to a minimum acceptable value (P0589). The parameter group presented in the sequence defines those and other characteristics necessary for the energy saving function.

P0407 – Motor Rated Power Factor

Adjustable Range: 0.50 to 0.99

Factory Setting: 0.80

Properties: cfg, V/f, VVW

Access Groups via HMI: MOTOR, STARTUP

Description:

Setting of the motor rated power factor.

In order to obtain the proper operation of the energy saving function, the motor power factor must be correctly set, according to the information on the motor nameplate.

Note:

With the motor nameplate data and for applications with constant torque, the motor optimum efficiency is normally obtained with the energy saving function active. In some cases, the output current may increase, and then it is necessary to gradually reduce the value of this parameter to the point in which the current value remains equal to or below the current value obtained with the function disabled.

For information regarding the actuation of P0407 in the VVW control mode, refer to [Section 10.1 VVW VECTOR CONTROL PARAMETERIZATION](#) on page 10-3.

P0588 – Maximum Torque Level

Adjustable Range:	0 to 85 %	Factory Setting:	0 %
Properties:	V/f, VVW		
Access Groups via HMI:	<input type="text" value="MOTOR, NET"/>		

Description:

This parameter defines the torque value to activate the operation of the energy saving function.

Setting this parameter to zero disables the function.

It is recommended to set this parameter to 60 %, but it has to be set according the application requirement.

P0589 – Level of Minimum Applied Voltage

Adjustable Range:	8 to 40 %	Factory Setting:	40 %
Properties:	V/f, VVW		
Access Groups via HMI:	<input type="text" value="MOTOR, NET"/>		

Description:

This parameter defines the minimum voltage value that will be applied to the motor when the energy saving function is active. This minimum value is relative to the voltage imposed by the V/f curve for a certain speed.

P0590 – Minimum Speed Level

Adjustable Range:	360 to 18000 rpm	Factory Setting:	600 rpm
Properties:	V/f, VVW		
Access Groups via HMI:	<input type="text" value="MOTOR, NET"/>		

Description:

This parameter defines the minimum speed value at which the energy saving function will remain active.

The hysteresis for the minimum speed level is of 2 Hz.

P0591 – Hysteresis for the Maximum Torque Level

Adjustable Range:	0 to 30 %	Factory Setting:	10 %
Properties:	V/f, VVW		
Access Groups via HMI:	<input type="text" value="MOTOR, NET"/>		

Description:

Hysteresis used to activate and deactivate the energy saving function.

If the function is active and the output current oscillates, it is necessary to increase the value of the hysteresis.



NOTE!

It is not possible to set these parameters while the motor is spinning.

12 DIGITAL AND ANALOG INPUTS AND OUTPUTS

This section presents the parameters to configure the MW500 inputs and outputs. This configuration depends on the plug-in module, as per [Figure 12.1 on page 12-2](#).

Table 12.1: I/O configurations of the MW500

Functions														Plug-in Module
DI	AI	ENC	AO	DOR	DOT	USB	CAN	RS-232	RS485	Profibus	EtherNet	Sup 10 V	Sup 24 V	
4	1	-	1	1	1	-	-	-	1	-	-	1	1	CFW500-IOS
8	1	-	1	1	4	-	-	-	1	-	-	1	1	CFW500-IOD
6	3	-	2	1	3	-	-	-	1	-	-	1	1	CFW500-IOAD
5	1	-	1	4	1	-	-	-	1	-	-	1	1	CFW500-IOR
4	1	-	1	1	1	1	-	-	1	-	-	1	1	CFW500-CUSB
2	1	-	1	1	1	-	1	-	1	-	-	1	1	CFW500-CCAN
2	1	-	1	1	1	-	-	1	1	-	-	-	1	CFW500-CRS232
4	2	-	1	2	1	-	-	-	2	-	-	1	1	CFW500-CRS485
2	1	-	1	1	1	-	-	-	1	1	-	-	1	CFW500-CPDP
2	1	-	1	1	1	-	-	-	1	-	1	-	1	CFW500-CETH-IP CFW500-CEMB-TCP CFW500-CEPN-IO
5	1	1	1	3	1	-	-	-	1	-	-	-	1	CFW500 - ENC
7	-	1	-	3	1	-	-	-	1	-	-	-	1	CFW500 - ENC2

DI – Digital Input DOR – Relay Digital Output AI – Analog Input AO – Analog Output DOT – Transistor Digital Output



NOTE!

MW500 HMI shows just the parameters related to the resources available in the plug-in module connected to the product.

12.1 ANALOG INPUTS

With the analog inputs it is possible, for instance, to use an external speed reference or to connect a sensor in order to measure temperature (PTC). Details for those configurations are described in the parameters below.

P0018 – Analog Input Value AI1

P0019 – Analog Input Value AI2

P0020 – Analog Input Value AI3

P0031 - Analog Input Value Knob (AI4)

Adjustable Range: -100.0 to 100.0 %

Factory Setting:

Properties: ro

Access Groups via HMI:

Description:

Those read-only parameters indicate the value of the analog inputs AI1, AI2 and AI3 in percentage of the full scale. The indicated values are those obtained after the offset action and multiplication by the gain. Check the description of parameters P0230 to P0245. The Knob input (AI4) has adjustment in P0261 and P0262.

P0230 – Dead Zone of the Analog Inputs

Adjustable Range:	0 = Inactive 1 = Active	Factory Setting:	0
Properties:	cfg		
Access Groups via HMI:	I/O		

Description:

This parameter acts just for the analog inputs (AIx) programmed as frequency reference, and defines if the dead zone in those inputs is Active (1) or Inactive (0).

If the parameter is configured as Inactive (P0230 = 0), the signal in the analog inputs will actuate on the frequency reference from the minimum point (0 V / 0 mA / 4 mA or 10 V / 20 mA), and it will be directly related to the minimum speed set in P0133. When using PID special function (P0203) via AI1 (1) or AI3 (2), PID setpoint (P0041) value goes to zero and not to the minimum speed (P0133). Check [Figure 12.1 on page 12-2](#).

If the parameter is configured as Active (P0230 = 1), the signal in the analog inputs will have a dead zone, where the speed reference remains at the Minimum Speed value (P0133), even with the variation of the input signal. Check [Figure 12.1 on page 12-2](#).

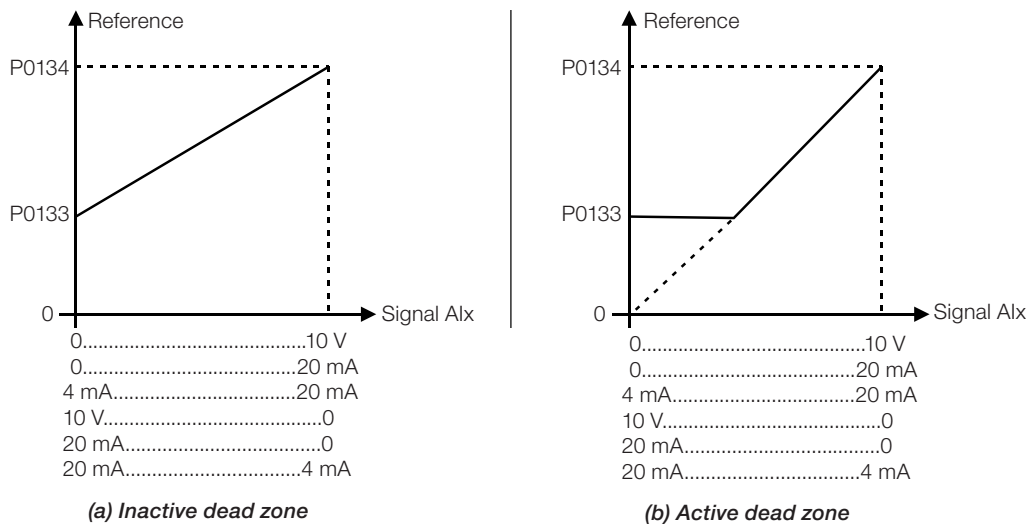


Figure 12.1: (a) and (b) Actuation of the analog inputs with inactive dead zone

In the case of analog inputs AI3 set for -10 V to +10 V (P0243 = 4), we will have curves similar to [Figure 12.1 on page 12-2](#); except that when AI3 is negative, the direction of rotation will be the opposite.

P0231 – AI1 Signal Function
P0236 – AI2 Signal Function
P0241 – AI3 Signal Function

Adjustable Range:	0 = Speed Reference 1 to 3 = Not Used 4 = PTC 5 and 6 = Not Used 7 = SoftPLC 8 = Function 1 of Application 9 = Function 2 of Application 10 = Function 3 of Application 11 = Function 4 of Application 12 = Function 5 of Application 13 = Function 6 of Application 14 = Function 7 of Application 15 = Function 8 of Application	Factory Setting: 0
Properties:	cfg	
Access Groups via HMI:	<input type="text" value="I/O"/>	

Description:

These parameters define the analog input functions.

When the 0 option is selected (Speed Reference), the analog inputs can provide the reference for the motor, subject to the specified limits (P0133 and P0134) and to the action of the ramps (P0100 to P0103). However, in order to do so, it is also necessary to configure parameters P0221 and/or P0222 by selecting the use of the desired analog input. For further detail, refer to the description of those parameters in [Chapter 7 LOGICAL COMMAND AND SPEED REFERENCE on page 7-1](#).

Option 4 (PTC) configures the input to monitor the motor temperature by means of the reading of a PTC-type sensor when there is one installed on the motor. For further details on this function refer to [Section 15.3 MOTOR OVERTEMPERATURE PROTECTION \(F0078\) on page 15-5](#).


NOTE!

AI3 cannot be set with the PTC function, as it is a bipolar analog input. Therefore, if input AI3 is set to PTC (P0241 = 4), the inverter goes into the configuration state (CONF).

Option 7 (SoftPLC) configures the input to be used by the programming done in the memory area reserved for the SoftPLC function. For further details, refer to the SoftPLC user's manual.

P0232 – AI1 Input Gain
P0237 – AI2 Input Gain
P0242 – AI3 Input Gain

Adjustable Range:	0.000 to 9.999	Factory Setting: 1.000
--------------------------	----------------	-------------------------------

P0234 – AI1 Input Offset

P0239 – AI2 Input Offset

P0244 – AI3 Input Offset

Adjustable Range:	-100.0 to 100.0 %	Factory Setting:	0.0 %
--------------------------	-------------------	-------------------------	-------

P0235 – AI1 Input Filter

P0240 – AI2 Input Filter

P0245 – AI3 Input Filter


Adjustable Range:	0.00 to 16.00 s	Factory Setting:	0.00 s
--------------------------	-----------------	-------------------------	--------

Properties:

Access Groups via HMI:

Description:

Each analog input of the inverter is defined by the steps of calculation of signal, offset, gain, filter, function and value Alx, as shown in [Figure 12.2 on page 12-4](#).

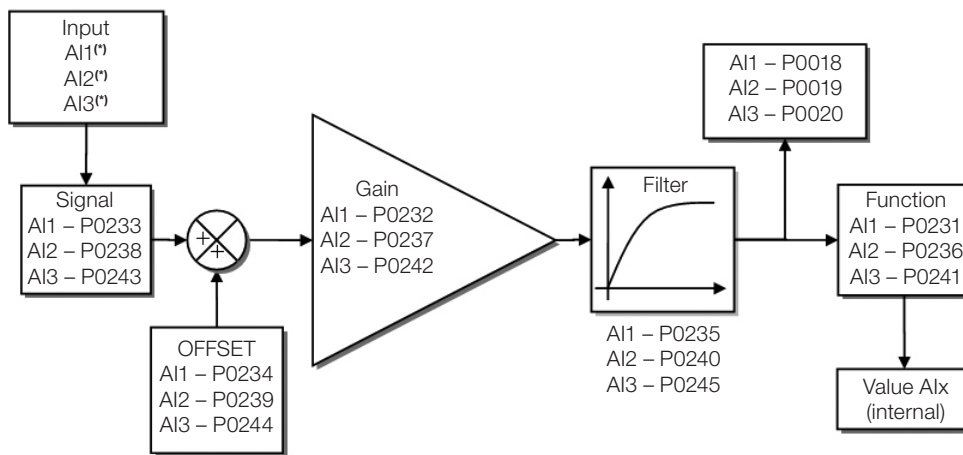

(*) Control terminals available in the plug-in module.

Figure 12.2: Block diagram of the analog inputs - Alx

P0233 – AI1 Input Signal

P0238 – AI2 Input Signal

Adjustable Range:	0 = 0 to 10 V / 20 mA 1 = 4 to 20 mA 2 = 10 V / 20 mA to 0 3 = 20 to 4 mA	Factory Setting:	0
--------------------------	--	-------------------------	---

P0243 – AI3 Input Signal

Adjustable Range:	0 = 0 to 10 V / 20 mA 1 = 4 to 20 mA 2 = 10 V / 20 mA to 0 3 = 20 to 4 mA 4 = -10 to +10 V	Factory Setting: 0
--------------------------	--	---------------------------

Properties:

Access Groups via HMI:

Description:

These parameters configure the signal type (if current or voltage) that will be read in each analog input, as well as its variation range. Note that only AI3 has option 4 (-10 V to +10 V). In options 2 and 3 of the parameters, the reference is inverted, that is, we have the maximum speed with the minimum signal in the AIx.

In the MW500 plug-in module, DIP Switch S1:1 in ON configures input AI1 for signal in current. In the other cases, refer to the installation, configuration and operation guide of the plug-in used. [Table 12.2 on page 12-5](#) below summarizes the configuration and equation of the analog inputs.

Table 12.2: AIx configuration and equation

Signal	P0233, P0238	P0243	DIP Switch	Equation AIx(%)
0 to 10 V	0	0	OFF	$AIx = \left(\frac{AIx(V)}{10 V} \times (100 \%) + \text{offset} \right) \times \text{gain}$
0 to 20 mA	0	0	ON	$AIx = \left(\frac{AIx(mA)}{20 mA} \times (100 \%) + \text{offset} \right) \times \text{gain}$
4 to 20 mA	1	1	ON	$AIx = \left(\left(\frac{AIx(mA) - 4 mA}{16 mA} \right)_0^1 \times (100 \%) + \text{offset} \right) \times \text{gain}$
10 to 0 V	2	2	OFF	$AIx = 100 \% - \left(\frac{AIx(V)}{10 V} \times (100 \%) + \text{offset} \right) \times \text{gain}$
20 to 0 mA	2	2	ON	$AIx = 100 \% - \left(\frac{AIx(mA)}{20 mA} \times (100 \%) + \text{offset} \right) \times \text{gain}$
20 to 4 mA	3	3	ON	$AIx = 100 \% - \left(\left(\frac{AIx(mA) - 4 mA}{16 mA} \right)_0^1 \times (100 \%) + \text{offset} \right) \times \text{gain}$
-10 to +10 V	-	4	OFF	$AIx = \left(\frac{AIx(V)}{10 V} \times (100 \%) + \text{offset} \right) \times \text{gain}$

For example: AIx = 5 V, offset = -70.0 %, Gain = 1.000, with signal of 0 to 10 V, that is, AIx_{ini} = 0 and AIx_{FE} = 10.

$$AIx(\%) = \left(\frac{5}{10} \times (100 \%) + (70 \%) \right) \times 1 = -20.0 \%$$

Another example: AIx = 12 mA, offset = -80.0 %, Gain = 1.000, with signal of 4 to 20 mA, that is, AIx_{ini} = 4 and AIx_{FE} = 16.

$$AIx(\%) = \left(\frac{12 - 4}{16} \times (100 \%) + (-80 \%) \right) \times 1 = -30.0 \%$$

AIx' = -30.0 % means that the motor will spin counterclockwise with a reference in module equal to 30.0 % of P0134 if the signal AIx function is "Speed Reference".

In the case of filter parameters (P0235, P0240 and P0245), the value set corresponds to the time constant used to filter the input signal read. Therefore, the filter response time is around three times the value of this time constant.

P0261 – Knob Input Gain

Adjustable Range: 0.000 to 9.999 **Factory Setting:** 1.000

P0262 – Knob Input Offset

Adjustable Range: -100.0 % to +100.0 % **Factory Setting:** 0.0 %

Properties:

Access Groups via HMI:

Description:


Like an Analog Input, the built in Knob input has gain and offset parameters for adjust the signal from knob potentiometer input. These parameters allow the user to set the reference range values of Knob including to revert the spin clockwise by the Knob value. Unlike the analog input there is no signal and filter adjustment for the Knob input.

NOTE! The analog input dead-zone configuration in P0230 also affects the Knob input.

12.2 ANALOG OUTPUTS

The analog outputs (AOx) are configured by means of three types of parameters: function, gain and signal, as per block diagram of [Figure 12.3 on page 12-6](#).

The standard CFW500-IOS plug-in module has just the analog output AO1, but the CFW500-IOAD plug-in provides one more analog output AO2.

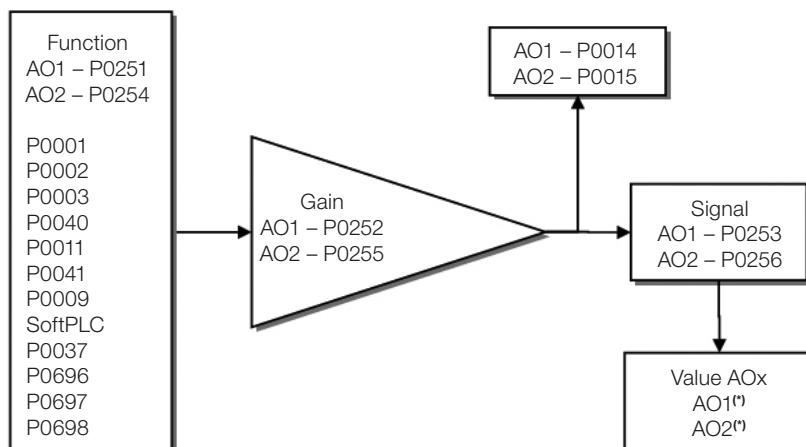

(*) Control terminals available in the plug-in module.

Figure 12.3: Block diagram of analog outputs – AOx

P0014 – Analog Output AO1 Value

P0015 – Analog Output AO2 Value

Adjustable Range:	0.0 to 100.0 %	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ, I/O"/>	

Description:

Those read-only parameters indicate the value of the analog outputs AO1 and AO2 in percentage of the full scale. The indicated values are those obtained after the multiplication by the gain. Check the description of parameters P0251 to P0256.

P0251 – AO1 Output Function

P0254 – AO2 Output Function

Adjustable Range:	0 = Speed Reference 1 = Not Used 2 = Real Speed 3 and 4 = Not Used 5 = Output Current 6 = Process Variable 7 = Active Current 8 = Not Used 9 = PID Setpoint 10 = Not Used 11 = Motor Torque 12 = SoftPLC 13 to 15 = Not Used 16 = Motor Ixt 17 = Not Used 18 = Value of P0696 19 = Value of P0697 20 = Value of P0698 21 = Function 1 of Application 22 = Function 2 of Application 23 = Function 3 of Application 24 = Function 4 of Application 25 = Function 5 of Application 26 = Function 6 of Application 27 = Function 7 of Application 28 = Function 8 of Application	Factory Setting:	P0251 = 2 P0254 = 5
Properties:			
Access Groups via HMI:	<input type="text" value="I/O"/>		

Description:

These parameters set the analog output functions, according to function and scale presented in [Table 12.3 on page 12-8](#).

Table 12.3: Full scale of analog outputs

Function	Description	Full Scale
0	Speed reference at the ramp input P0001.	P0134
2	Effective speed at the inverter output (P0005).	P0134
3	Torque Current Ref.	P0169(+) or P0170(-)
4	Torque Current	P0169(+) or P0170(-)
5	Total output current in RMS.	2 x P0295
6	PID process variable.	P0528
7	Active current.	2 x P0295
8	Output Power	$1.5 \times \sqrt{3} \times P0295 \times P0296$
9	PID set point.	P0528
10	Torque Current > 0	P0169(+) or P0170(-)
11	Torque on the motor in rela-tion to the rated torque.	200 %
12	SoftPLC scale for the analog output.	32767
16	Ixt overload of the motor (P0037).	100 %
18	Value of P0696 for analog output AOx.	32767
19	Value of P0697 for analog output AOx.	32767
20	Value of P0698 for analog output AOx.	32767
21 a 28	Value defined by the SoftPLC application on the WLP.	32767

P0252 – AO1 Output Gain

P0255 – AO2 Output Gain

Adjustable Range: 0.000 to 9.999 **Factory Setting:** 1.000

Properties:

Access Groups via HMI:

Description:

It determines the analog output gain according to the equation of [Table 12.3 on page 12-8](#).

P0253 – AO1 Output Signal

P0256 – AO2 Output Signal

Adjustable Range: 0 = 0 to 10 V
 1 = 0 to 20 mA
 2 = 4 to 20 mA
 3 = 10 to 0 V
 4 = 20 to 0 mA
 5 = 20 to 4 mA

Factory Setting: P0253 = 0
 P0256 = 0

Properties:

Access Groups via HMI:

Description:

These parameters configure if the analog output signal will be in current or voltage with direct or reverse reference. Besides setting those parameters, it is also necessary to position the DIP switches. In the standard CSP500 plug-in module, the DIP switch S1:2 in ON configures the analog output in voltage. In the other cases, refer to the installation, configuration and operation guide of the plug-in used.

[Table 12.4 on page 12-9](#) below summarizes the configuration and equation of the analog outputs, where the relationship between the analog output function and the full scale is defined by P0251, as per [Table 12.3 on page 12-8](#).

Table 12.4: Characteristic configuration and equations of the AOx

Signal	P0253	P0256	DIP Switch	Equation
0 to 10 V	0	0	ON	$AOx = \left(\frac{\text{function}}{\text{scale}} \times \text{gain} \right)_0^1 \times 10 \text{ V}$
0 to 20 mA	1	1	OFF	$AOx = \left(\frac{\text{function}}{\text{scale}} \times \text{gain} \right)_0^1 \times 20 \text{ mA}$
4 to 20 mA	2	2	OFF	$AOx = \left(\frac{\text{function}}{\text{scale}} \times \text{gain} \right)_0^1 \times 16 \text{ mA} + 4 \text{ mA}$
10 to 0 V	3	3	ON	$AOx = 10 \text{ V} - \left(\frac{\text{function}}{\text{scale}} \times \text{gain} \right)_0^1 \times 10 \text{ V}$
20 to 0 mA	4	4	OFF	$AOx = 20 \text{ mA} - \left(\frac{\text{function}}{\text{scale}} \times \text{gain} \right)_0^1 \times 20 \text{ mA}$
20 to 4 mA	5	5	OFF	$AOx = 20 \text{ mA} - \left(\frac{\text{function}}{\text{scale}} \times \text{gain} \right)_0^1 \times 16 \text{ mA}$


12.3 FREQUENCY INPUT

A frequency input consists of a fast digital input able to convert the frequency of the pulses in the input into a proportional signal with 10-bit resolution. After the conversion, this signal is used as an analog signal for speed reference, process variable, use of SoftPLC, etc.

According to the block diagram of [Figure 12.4 on page 12-9](#), the signal in frequency is converted into a digital quantity in 10 bits by means of the block “calc. Hz/%”, where parameters P0248 and P0250 define the input signal frequency band, while parameter P0022 shows the frequency of the pulses in Hz. From this conversion step, the signal in frequency receives a treatment similar to that of a regular analog input; compare to [Figure 12.2 on page 12-4](#).


NOTE!

The frequency input signal at DI2 must be NPN regardless the setting in P0271 and it must not exceed the limit of 20 kHz.

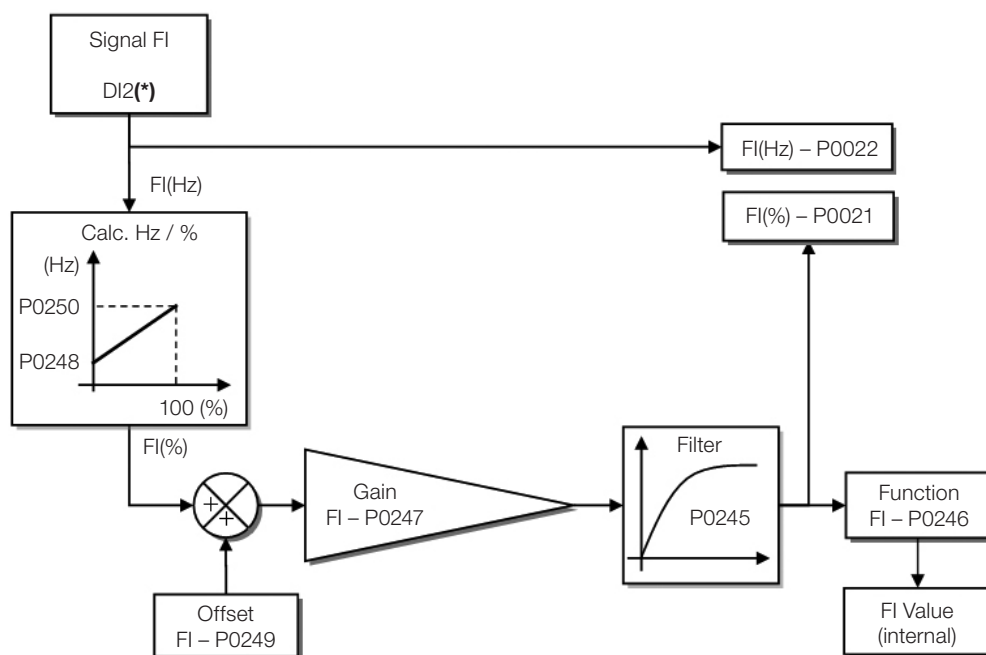

(*) Control terminal available in the plugin module.

Figure 12.4: Block diagram of frequency input – FI (DI2)

Digital input DI2 is pre-defined for frequency input with operating capacity in a wide band from 10 to 20.000 Hz. The frequency input filter is the same as the one used for input AI3, that is, parameter P0245.

P0021 – Value of Frequency Input in %

Adjustable Range:	-100.0 to 100.0 %	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ, I/O"/>	

Description:

This read-only parameter indicates the value of the frequency input in percentage of full scale. The indicated values are those obtained after the offset action and multiplication by the gain. Check the description of parameters P0247 to P0250.

P0022 – Value of Frequency Input in Hz

Adjustable Range:	0 to 20000 Hz	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ, I/O"/>	

Description:

Value in hertz of the frequency input FI.

NOTE! The operation of parameters P0021 and P0022, as well as of the frequency input, depends on the activation of P0246.

P0246 – Frequency Input

Adjustable Range:	0 = Inactive 1 = Active	Factory Setting:	0
Properties:			
Access Groups via HMI:	<input type="text" value="I/O"/>		

Description:

When in "1" this parameter activates the frequency input, making the digital input DI2 function in P0264 be ignored, as well as the value of Bit "1" of P0012 is maintained in "0". On the other hand, when in "0" the frequency input is inactive keeping parameters P0021 and P0022 in zero.

P0247 – Input Gain in Frequency

Adjustable Range:	0.000 to 9.999	Factory Setting:	1.000
--------------------------	----------------	-------------------------	-------

P0248 – Minimum Frequency Input

Adjustable Range: 10 to 20000 Hz

Factory Setting: 10 Hz

P0249 – Input Offset in Frequency

Adjustable Range: -100.0 to 100.0 %

Factory Setting: 0.0 %

P0250 – Maximum Frequency Input

Adjustable Range: 10 to 20000 Hz

Factory Setting: 10000 Hz

Properties:

Access Groups via HMI:

Description:

Those parameters define the behavior of the frequency input according to the equation:

$$FI = \left(\left(\frac{FI(\text{Hz}) - P0248}{P0250 - P0248} \right)_0^1 \times (100 \% + P0249) \right) \times P0247$$

Parameters P0248 and P0250 determine the operation range of the frequency input (FI), while parameters P0249 and P0247 determine the offset and gain, respectively. For example, FI = 5000 Hz, P0248 = 10 Hz, P0250 = 10000 Hz, P0249 = -70.0 % and P0247 = 1.000, thus:

$$FI = \left(\left(\frac{5000 - 10}{10000 - 10} \right)_0^1 \times (100 \% - 70 \%) \right) \times 1.000 = 20.05 \%$$

The value FI = -20.05 % means that the motor will spin in the opposite direction with a reference in module equal to 20.0 % of P0134.


When P0246 = 1, the digital input DI2 is pre-defined for frequency input, regardless the value of P0264, with operating capacity in the band from 10 to 20.000 Hz in 10 Vpp.

The time constant of the digital filter for the frequency input is shared with the analog input AI3 through parameter P0245.

12.4 FREQUENCY OUTPUT

Like the frequency input is implemented in the digital input DI2, the frequency output is fixed to the transistor digital output DO2.

The configuration and resources available in the frequency output are basically the same as those of analog outputs, as shown in [Figure 12.5 on page 12-12](#).

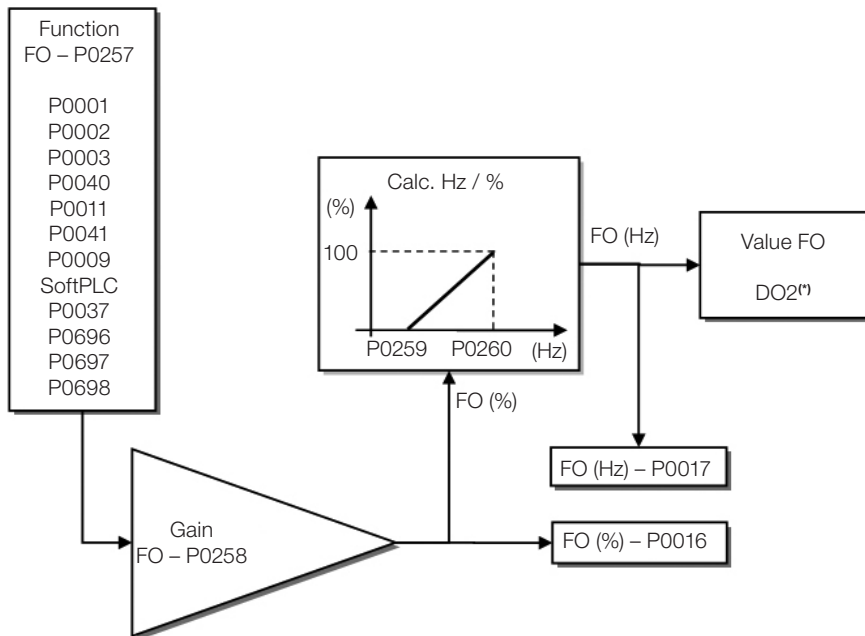

(*) Control terminal available in the plug-in module.

Figure 12.5: Block diagram of the output in frequency FO (DO2)

P0016 – Frequency Output Value FO in %

Adjustable Range:	0.0 to 100.0 %	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ, I/O"/>	

Description:

The percentage value of the output frequency (FO). This value is given in relation to the range defined by P0259 and P0260.

P0017 – Frequency Output Value FO in Hz

Adjustable Range:	0 to 20000 Hz	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ, I/O"/>	

Description:

The value in hertz of the output frequency (FO).

P0257 – Frequency Output Function FO

Adjustable Range:	0 = Speed Reference 1 = Not Used 2 = Real Speed 3 and 4 = Not Used 5 = Output Current 6 = Process Variable 7 = Active Current 8 = Not Used 9 = PID Setpoint 10 = Not Used 11 = Motor Torque 12 = SoftPLC 13 and 14 = Not Used 15 = Disable FO 16 = Motor lxt 17 = Not Used 18 = Value of P0696 19 = Value of P0697 20 = Value of P0698 21 = Function 1 of Application 22 = Function 2 of Application 23 = Function 3 of Application 24 = Function 4 of Application 25 = Function 5 of Application 26 = Function 6 of Application 27 = Function 7 of Application 28 = Function 8 of Application	Factory Setting: 15
--------------------------	--	----------------------------

Properties:
Access Groups via HMI:

Description:

This parameter sets the frequency output function similarly to the setting of the analog outputs, like function and scale present in [Table 12.5 on page 12-13](#).

The Transistor Digital Output DO2 function is defined by P0276 when the Frequency Output function is inactive, that is, P0257 = 15. However, any other option of P0257 and the Digital Output DO2 becomes the Frequency Output ignoring the Digital Output function set in P0276.

Table 12.5: Full scale of frequency output

Function	Description	Full Scale
0	Speed reference in the ramp input (P0001)	P0134
2	Real speed in the inverter output (P0002)	P0134
5	Total output current in RMS	2 x P0295
6	PID process variable	P0528
7	Active current	2 x P0295
9	PID Setpoint	P0528
11	Motor torque in relation to rated torque	200.0 %
12	SoftPLC scale for frequency output	32767
15	Inactive frequency output - DO2 is digital output	-
16	Motor overload lxt (P0037)	100 %
18	Value of P0696 for analog output AOx	32767
19	Value of P0697 for analog output AOx	32767
20	Value of P0698 for analog output AOx	32767
21 to 28	Value defined by the SoftPLC application	32767

P0258 – Frequency Output Gain FO

Adjustable Range:	0.000 to 9.999	Factory Setting:	1.000
--------------------------	----------------	-------------------------	-------

P0259 – Minimum Frequency Output FO

Adjustable Range:	10 to 20000 Hz	Factory Setting:	10 Hz
--------------------------	----------------	-------------------------	-------

P0260 – Maximum Frequency Output FO

Adjustable Range:	10 to 20000 Hz	Factory Setting:	10000 Hz
--------------------------	----------------	-------------------------	----------

Properties:

Access Groups via HMI:	I/O
-------------------------------	-----

Description:

Gain, minimum and maximum values for frequency output FO.

12.5 DIGITAL INPUTS

In order to use the digital inputs, the MW500 features up to eight ports, depending on the plug-in module connected to the product. Check [Table 12.1 on page 12-1](#).

Below is a detailed description of the parameters for digital inputs.

P0271 – Digital Input Signal

Adjustable Range:	0 = All DIx are NPN 1 = (DI1) - PNP 2 = (DI1...DI2) - PNP 3 = (DI1...DI3) - PNP 4 = (DI1...DI4) - PNP 5 = (DI1...DI5) - PNP 6 = (DI1...DI6) - PNP 7 = (DI1...DI7) - PNP 8 = All DIx are PNP	Factory Setting:	0
--------------------------	---	-------------------------	---

Properties:

Access Groups via HMI:	I/O
-------------------------------	-----

Description:

This parameter configures the default for the digital input signal, that is, NPN and the digital input is activated with 0 V, PNP and the digital input is activated with +24 V.

P0012 – Status of Digital Inputs DI8 to DI1

Adjustable Range:	Bit 0 = DI1 Bit 1 = DI2 Bit 2 = DI3 Bit 3 = DI4 Bit 4 = DI5 Bit 5 = DI6 Bit 6 = DI7 Bit 7 = DI8	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ, I/O"/>	

Description:

Using this parameter, it is possible to view the status of the product digital inputs, according to the plug-in module connected. Refer to parameter P0027 in [Section 6.1 INVERTER DATA on page 6-1](#).

The P0012 value is indicated in hexadecimal, where each bit of the number indicates the status of a digital input, that is, if Bit₀ is “0”, DI1 is inactive; if Bit₀ is “1”, DI1 is active, and so on, up to DI8. Besides, the determination of DI_x active or inactive takes into account the signal type in the DI_x defined by P0271.

The activation of DI_x depends on the signal in the digital input and on P0271, as per [Table 12.6 on page 12-15](#), which lists parameters P0271, threshold voltage for activation “V_{TH}”, threshold voltage for deactivation “V_{TL}” and status indication of DI_x in parameter P0012.

Table 12.6: Values of P0012 for x from 1 to 8

Setting in P0271	Threshold Voltage in DI _x	P0012
DI _x = NPN	V _{TL} > 9 V	Bit _{x-1} = 0
	V _{TH} < 5 V	Bit _{x-1} = 1
DI _x = PNP	V _{TL} < 17 V	Bit _{x-1} = 0
	V _{TH} > 20 V	Bit _{x-1} = 1


NOTE!

Parameter P0012 requires the user to know the conversion between binary and hexadecimal numerical system.

P0263 – Function of Digital Input DI1
P0264 – Function of Digital Input DI2
P0265 – Function of Digital Input DI3
P0266 – Function of Digital Input DI4
P0267 – Function of Digital Input DI5
P0268 – Function of Digital Input DI6
P0269 – Function of Digital Input DI7

P0270 – Function of Digital Input DI8

Adjustable Range:	0 to 46	Factory Setting:	P0263 = 1 P0264 = 8 P0265 = 20 P0266 = 10 P0267 = 0 P0268 = 0 P0269 = 0 P0270 = 0
--------------------------	---------	-------------------------	--

Properties:	cfg
Access Groups via HMI:	<input type="text" value="I/O"/>

Description:

These parameters allow configuring the digital input function, according to the adjustable range listed in [Table 12.7 on page 12-16](#).

Table 12.7: Digital input functions

Value	Description	Dependence
0	Not Used	-
1	Run/Stop Command	P0224 = 1 or P0227 = 1
2	General Enable Command	P0224 = 1 or P0227 = 1
3	Quick Stop Command	P0224 = 1 or P0227 = 1
4	Forward Run Command	P0224 = 1 or P0227 = 1
5	Reverse Run Command	P0224 = 1 or P0227 = 1
6	Three Wires Start Command	P0224 = 1 or P0227 = 1
7	Three Wires Stop Command	P0224 = 1 or P0227 = 1
8	Direction of Rotation Command	P0223 = 4 or P0226 = 4
9	Local/Remote Selection	P0220 = 4
10	JOG Command	P0225 = 2 or P0228 = 2
11	Electronic Potentiometer: Accelerate E.P.	P0221 = 7 or P0222 = 7
12	Electronic Potentiometer: Decelerate E.P.	P0221 = 7 or P0222 = 7
13	Multispeed Reference	P0221 = 8 or P0222 = 8
14	2 nd Ramp Selection	P0105 = 2
15 to 17	Not Used	-
18	No External Alarm	-
19	No External Fault	-
20	Fault Reset	Active fault
21	Use of SoftPLC	SoftPLC user prog.
22	PID Manual/Automatic	P0203 = 1 or 2
23	Not Used	-
24	Disable Flying Start	P0320 = 1 or 3
25	Not Used	-
26	Lock Programming	-
27	Load User 1	Inverter disabled
28	Load User 2	Inverter disabled
29	PTC - motor thermal sensor	-
30 and 31	Not Used	-
32	Multispeed Reference with 2 nd Ramp	P0221 = 8 or P0222 = 8 and P0105 = 2
33	Electronic Potentiometer: Accelerate E.P. with 2 nd Ramp	P0221 = 7 or P0222 = 7 and P0105 = 2
34	Electronic Potentiometer: Decelerate E.P. with 2 nd Ramp	P0221 = 7 or P0222 = 7 and P0105 = 2
35	Forward Run Command with 2 nd Ramp	P0224 = 1 or P0227 = 1 and P0105 = 2
36	Reverse Run Command with 2 nd Ramp	P0224 = 1 or P0227 = 1 and P0105 = 2
37	Accelerate E.P./Turn ON	P0224 = 1 or P0227 = 1 P0221 = 7 or P0222 = 7
38	Decelerate E.P./Turn OFF	P0224 = 1 or P0227 = 1 P0221 = 7 or P0222 = 7
39	Application Function 1	-
40	Application Function 2	-
41	Application Function 3	-

Value	Description	Dependence
42	Application Function 4	-
43	Application Function 5	-
44	Application Function 6	-
45	Application Function 7	-
46	Application Function 8	-

a) RUN/STOP

It enables or disables the motor rotation through the acceleration and deceleration ramp.

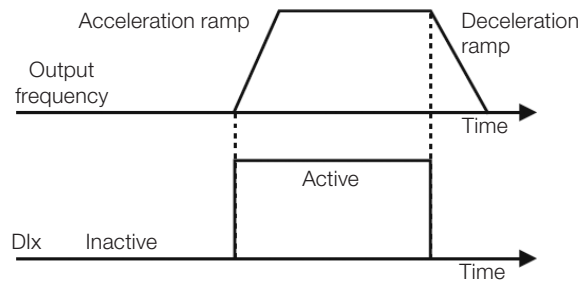


Figure 12.6: Example of the Run-Stop function

b) GENERAL ENABLE

It enables the motor rotation through the acceleration ramp and disables it by cutting off the pulses immediately; the motor stops by inertia.

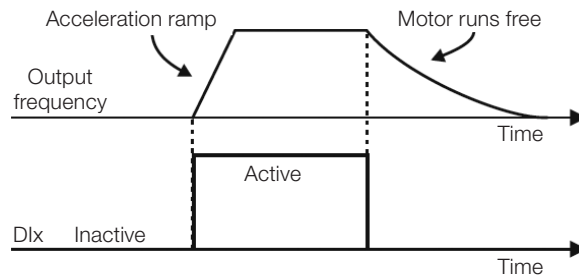


Figure 12.7: Example of the General Enable function

c) QUICK STOP

When inactive, it disables the inverter by the 3rd Ramp by P0106.

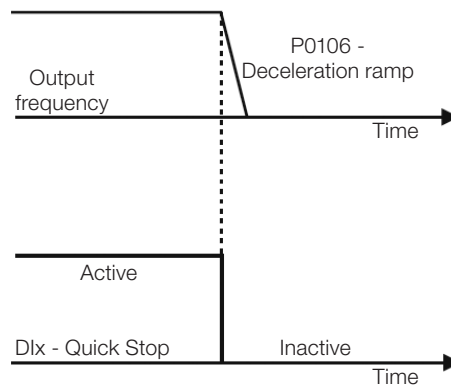


Figure 12.8: Example of the Quick Stop function

d) FORWARD RUN/REVERSE RUN

This command is the combination of Run/Stop with Direction of Rotation.

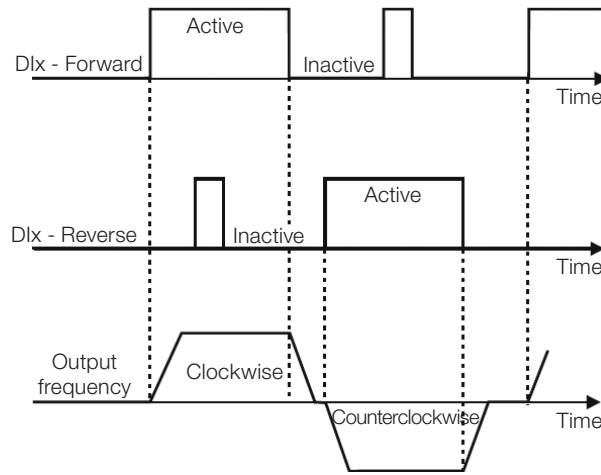


Figure 12.9: Example of the forward Run/Reverse run function

e) THREE-WIRE START/STOP

This function tries to reproduce the activation of a three-wire direct start with retention contact, where a pulse in the Dlx-Start enables the motor spin while the Dlx-Stop is active.

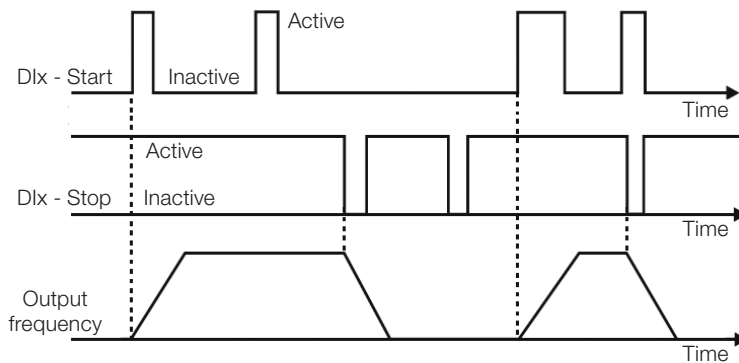


Figure 12.10: Example of the three-wire Start/Stop function



NOTE!

All the digital inputs set for General Enable, Quick Stop, Forward Run/Reverse Run and Start/Stop must be in the “Active” state so that the inverter is able to enable the motor spin.

f) DIRECTION OF ROTATION

If Dl_x is inactive, the direction of rotation is clockwise; otherwise, the direction of rotation will be counterclockwise.

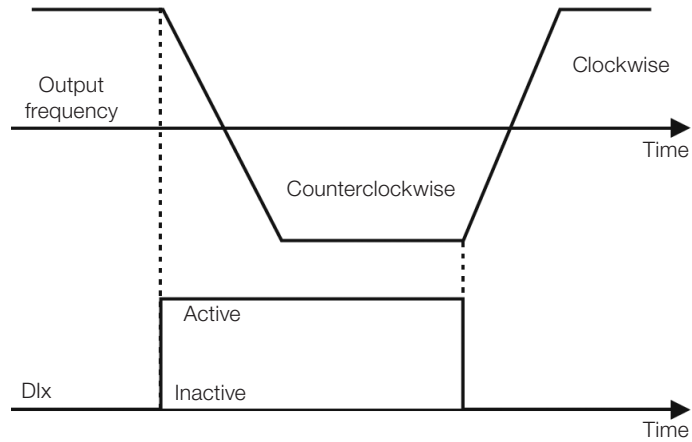


Figure 12.11: Example of the Direction of Rotation function

g) LOCAL/REMOTE

If Dl_x is inactive, the Local command is selected; otherwise, the Remote command is selected.

h) JOG

The JOG command is the combination of the Run/Stop command with a speed reference via parameter P0122.

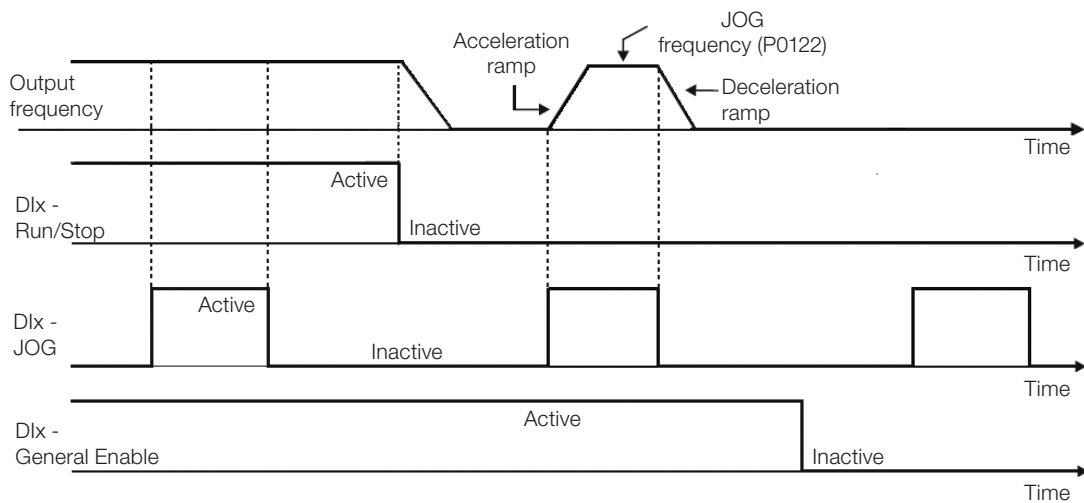


Figure 12.12: Example of the JOG function

i) ELECTRONIC POTENTIOMETER (E.P.)

The E.P. function enables the setting of the speed via digital inputs programmed for accelerate E.P. and decelerate E.P. The basic principle of this function is similar to the sound volume and intensity control in electronic appliances.

The operation of the E.P. function is also affected by the behavior of parameter P0120, that is, if P0120 = 0, the E.P. reference initial value will be P0133; if P0120 = 1, the initial value will be the last reference value before the disabling of the inverter, and if P0120 = 2, the initial value will be the reference via P0121 keys.

Besides, the E.P. reference can be reset by activating both accelerate E.P. and decelerate E.P. inputs when the inverter is disabled.

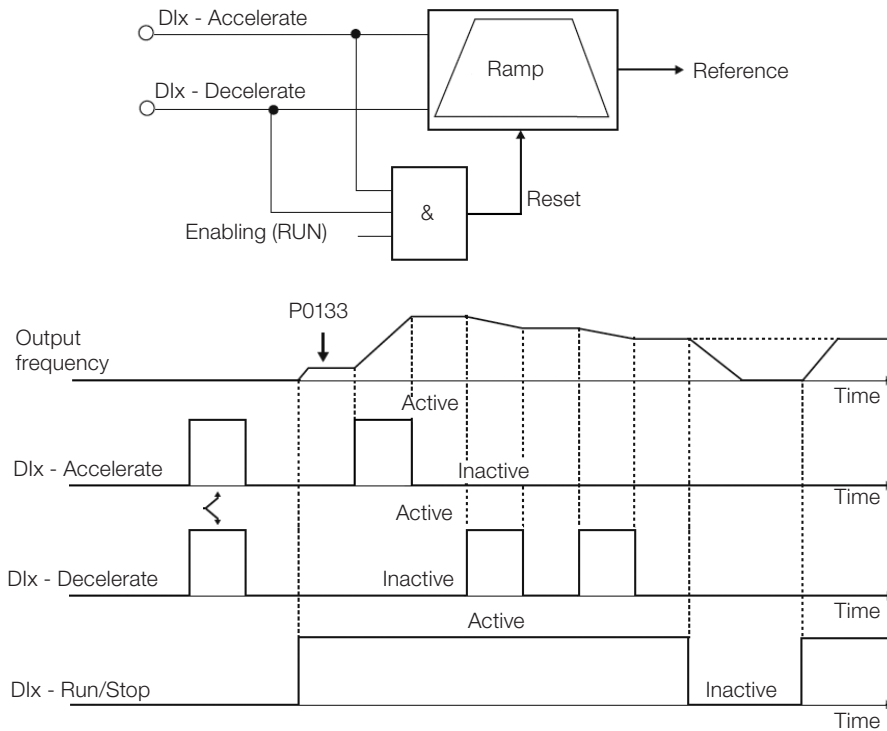


Figure 12.13: Example of the electronic potentiometer (E.P.) function

j) MULTISPEED

The Multispeed reference, as described in [Item 7.2.3 Speed Reference Parameters on page 7-9](#), allows selecting one among eight reference levels pre-defined in parameters P0124 to P0131 by the combination of up to three digital inputs. For further details, refer to [Chapter 7 LOGICAL COMMAND AND SPEED REFERENCE on page 7-1](#).

k) 2nd RAMP

If Dlx is inactive, the inverter uses the default ramp by P0100 and P0101; otherwise, it will use the 2nd Ramp by P0102 and P0103.

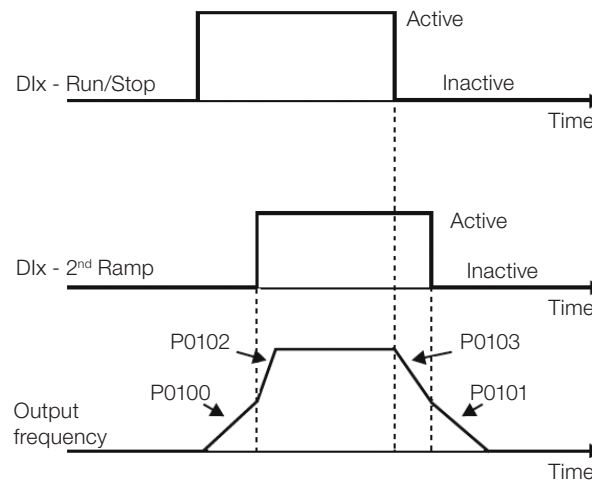


Figure 12.14: Example of the 2nd Ramp function

l) NO EXTERNAL ALARM

If Dlx is inactive, the inverter will activate the external alarm A0090.

m) NO EXTERNAL FAULT

If Dlx is inactive, the inverter will activate the external fault F0091. In this case, the PWM pulses are disabled immediately.

n) FAULT RESET

Once the inverter is in the fault status and the fault origin condition is no longer active, the fault status will be reset in the transition of the Dlx programmed for this function.

o) USE OF SoftPLC

Only the digital input status Dlx in P0012 is used for the SoftPLC functions.

p) MAN/AUTO PID

It allows selecting the inverter speed reference when the PID function is active (P0203 = 1, 2 or 3) between the reference defined by P0221/P0222 (Manual mode - Dlx Inactive) and the reference defined by the PID controller output (Automatic mode - Dlx Active). For further details, refer to [Chapter 13 PID CONTROLLER on page 13-1](#).

q) DISABLE FLYING START

It allows the Dlx, when active, to disable the action of the Flying Start function preset in parameter P0320 = 1 or 2. When the Dlx is inactive, the Flying Start function operates normally again, refer to [Section 11.4 FLYING START / RIDE-THROUGH on page 11-9](#).

r) LOCK PROG

When the Dlx input is active, parameters cannot be changed, no matter the values set in P0000 and P0200. When the Dlx input is inactive, the modification of parameters will depend on the values set in P0000 and P0200.

s) LOAD Us. 1

This function allows selecting the user 1 memory, process similar to P0204 = 7, with the difference that the user is loaded from a transition in the Dlx programmed for this function.

t) LOAD Us. 2

This function allows selecting the user 2 memory, process similar to P0204 = 8, with the difference that the user is loaded from a transition in the Dlx programmed for this function.

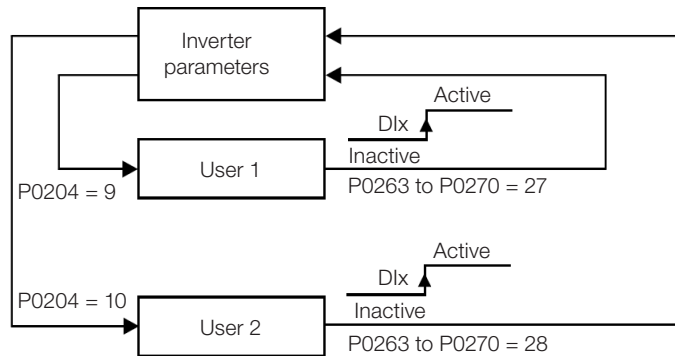


Figure 12.15: Block diagram of the functions us. 1 and us. 2

u) PTC

The Dlx digital inputs can read the resistance of a triple thermistor according to resistance values specified in the DIN 44081 and 44082 standards, as well as IEC 34-11-2. To do so, just connect the triple thermistor between the Dlx input and the GND (0 V), besides programming the referred Dlx for PTC (29).



NOTE!

The PTC thermistor can be used at any Dlx, except for DI2, which has a different input circuit for frequency input. Therefore, if the DI2 input is set to PTC (P0264 = 29), the inverter goes into the configuration state (CONF).



NOTE!

The PTC input via Dlx digital input does not detect short-circuits in the thermistor, but this resource is available via analog input. Refer to [Section 15.3 MOTOR OVERTEMPERATURE PROTECTION \(F0078\)](#) on page 15-5.

v) MULTISPEED, ELECTRONIC POTENTIOMETER, FORWARD RUN/REVERSE RUN WITH 2ND RAMP

It combines the Multispeed, E.P. and Forward Run/Reverse Run with 2nd Ramp primary functions in the same Dlx digital input.

w) ACCELERATE E.P. - TURN ON / DECELERATE E.P. - TURN OFF

It consists of the electronic potentiometer function with capacity to enable the inverter by means of a pulse at the start, and a pulse for the stop when the output speed is minimum (P0133).

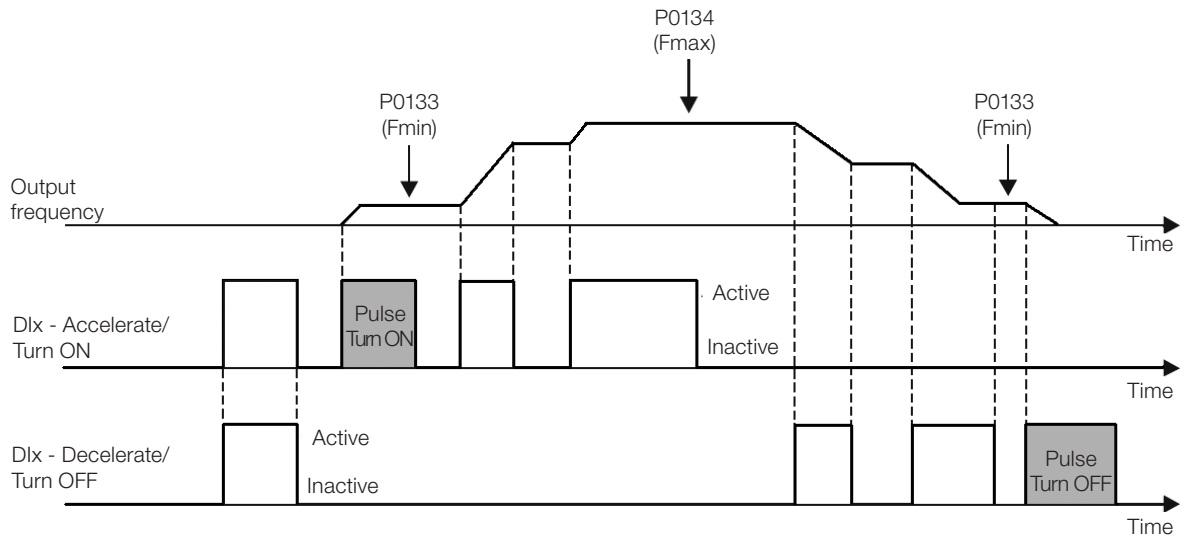


Figure 12.16: Example of the Accelerate turn on / Decelerate turn off

12.6 DIGITAL OUTPUTS

The MW500 can operate up to five digital outputs according to the selected interface plug-in module; refer to [Table 12.1 on page 12-1](#).

The DO1 digital output is always relay, while DO2 is always transistor; the other outputs can be relay or transistor according to the plug-in module. On the other hand, the digital output parameter configuration makes no distinction in this aspect, as detailed description below. Besides, the transistor digital outputs are always NPN, that is, in open collector (sink).

P0013 – Digital Output Status DO5 to DO1

Adjustable Range:	Bit 0 = DO1 Bit 1 = DO2 Bit 2 = DO3 Bit 3 = DO4 Bit 4 = DO5	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ, I/O"/>	

Description:

By using this parameter, it is possible to view the MW500 digital output status.

The value of P0013 is indicated in hexadecimal, where each bit indicates the status of a digital output, that is, if the Bit₀ is “0”, DO1 is inactive; if the Bit₀ is “1”, DO1 is active, and so on up to DO5. Therefore, DOx active (1) means closed transistor or relay, inactive (0) means open transistor or relay.



NOTE!

Parameter P0013 requires the user to know the conversion between binary and hexadecimal numerical system.

P0275 – DO1 Output Function

P0276 – DO2 Output Function

P0277 – DO3 Output Function

P0278 – DO4 Output Function

P0279 – DO5 Output Function

Adjustable Range:	0 to 44	Factory Setting:	P0275 = 13 P0276 = 2 P0277 = 0 P0278 = 0 P0279 = 0
--------------------------	---------	-------------------------	--

Properties:

Access Groups via HMI:

Description:

These parameters define the DOx Digital Output function, as per [Table 12.8 on page 12-24](#).

Table 12.8: Digital output functions

Value	Function	Description
0	Not Used	Digital output inactive
1	F* > Fx	Active when the speed reference F* (P0001) is greater than Fx (P0288)
2	F > Fx	Active when output frequency F (P0002) is greater than Fx (P0288)
3	F < Fx	Active when output frequency F (P0002) is smaller than Fx (P0288)
4	F = F*	Active if the output frequency F (P0002) is equal to reference F* (P0001) (ramp end)
5	Not Used	Digital output inactive
6	Is > Ix	Active if the output current Is (P0003) > Ix (P0290)
7	Is < Ix	Active if the output current Is (P0003) < Ix (P0290)
8	Torque > Tx	Active if the motor torque T (P0009) > Tx (P0293)
9	Torque < Tx	Active if the motor torque T (P0009) < Tx (P0293)
10	Remote	Active if the command is the Remote condition (REM)
11	Run	Active if the motor is running (active output PWM pulses) RUN status
12	Ready	Active if the inverter is ready for enabling
13	No Fault	Active if the inverter has no fault
14	No F0070	Active if the inverter has no overcurrent fault (F0070)
15	Not Used	Digital output inactive
16	No F0021/22	Active if the inverter has no overvoltage or undervoltage fault (F0022 or F0021)
17	Not Used	Digital output inactive
18	No F0072	Active if the inverter has no motor overload fault (F0072)
19	4-20 mA OK	Active if Alx is set for 4 to 20 mA (P0233 and/or P0238 and/or P0243 equal to 1 or 3) and Alx < 2 mA
20	Value of P0695	Status of the bits 0 to 4 of P0695 activate digital outputs DO1 to DO5, respectively.
21	Forward	Active if the inverter direction of rotation is Clockwise
22	Proc. V. > VPx	Active if process variable (P0040) > VPx (P0533)
23	Proc. V. < VPx	Active if process variable (P0040) < VPx (P0533)
24	Ride-Through	Active if the inverter is executing the Ride-Through function
25	Pre-Charge OK	Active if the pre-charge relay of the DC link capacitors was already activated
26	With Fault	Active if the inverter has a fault
27	Not Used	Digital output inactive
28	SoftPLC	Activates DOx output according to the SoftPLC memory area. Read the SoftPLC user's manual
29 to 34	Not Used	Digital output inactive
35	No Alarm	Active when the inverter has no alarm
36	No Fault/Alarm	Active when the inverter has no alarm and no fault
37	Function 1 Application	
38	Function 2 Application	

Value	Function	Description
39	Function 3 Application	
40	Function 4 Application	
41	Function 5 Application	
42	Function 6 Application	
43	Function 7 Application	
44	Function 8 Application	

P0287 – Fx Hysteresis

P0288 – Fx Speed

Adjustable Range: 0.0 to 500.0 Hz **Factory Setting:** P0287 = 0.5 Hz
P0288 = 3.0 Hz

Properties:

Access Groups via HMI:

Description:

These parameters set the hysteresis and actuation level on the Fx output frequency signal and on the F* ramp input of the relay digital outputs. In this way, the relay commutation levels are "P0288 + P0287" and "P0288 - P0287".

P0290 – Ix Current

Adjustable Range: 0.0 to 200.0 A **Factory Setting:** $1.0 \times I_{nom}$

Properties:

Access Groups via HMI:

Description:

Current level to activate the relay output in the $I_s > I_x$ (6) and $I_s < I_x$ (7) functions. The actuation occurs on a hysteresis with upper level in P0290 and lower by: $P0290 - 0.05 \times P0295$, that is, the equivalent value is Amperes for 5 % of P0295 below P0290.



NOTE!

Parameter P0290 has its value affected by parameter P0298. When the value of parameter P0298 is changed, the value of parameters P0290 is also automatically modified.

P0293 – Tx Torque

Adjustable Range: 0 to 200 % **Factory Setting:** 100 %

Properties:

Access Groups via HMI:

Description:

Torque percentage level to activate the relay output in the Torque > Tx (8) and Torque < Tx (9) functions. The actuation occurs on a hysteresis with upper level in P0293 and lower by: $P0293 - 5\%$. This percentage value is related to the motor rated torque matched to the inverter power.

13 PID CONTROLLER

13.1 DESCRIPTIONS AND DEFINITIONS

The MW500 features the PID controller function, which can be used to control a closed loop process. This function plays the role of a proportional, integral and differential controller which overrides the inverter regular speed control. [Figure 13.1 on page 13-3](#) presents a scheme of the PID controller.

The process control is done by varying the motor speed, maintaining the process variable value (the one you wish to control) at the desired value, which is set in the reference input (Setpoint).

Application examples:

- Flow or pressure control in a pipeline.
- Temperature of a furnace or oven.
- Chemical dosage in tanks.

The example below defines the terms used by the PID controller:

An electric pump in a water pumping system where the pressure must be controlled at the pump outlet pipe. A pressure transducer is installed on the pipe and provides an analog feedback signal to the MW500 that is proportional to the water pressure. This signal is called process variable and can be viewed in parameter P0040. A Setpoint is programmed on the MW500 via HMI (P0525) or via speed references as per [Section 7.2 SPEED REFERENCE on page 7-7](#). The Setpoint is the value desired for the water pressure regardless the variations in demand of the system output.



NOTE!

When the Setpoint is defined by a speed reference, the input unit in Hz is converted into the equivalent percentage value of P0134.

The MW500 will compare the Setpoint (SP) to the process variable (VP) and control the motor speed so as to try to nullify the error and keep the process variable equal to the Setpoint. The setting of the gains P, I and D determine the behavior of the inverter to eliminate this error.

The input variable operating scale of the PID controller: process variable (P0040) and Setpoint (P0041) are defined by P0528 and P0529. On the other hand, PID works internally with a percentage scale from 0.0 to 100.0 % according to P0525 and P0533. Refer to [Figure 13.1 on page 13-3](#).

Both the Setpoint (P0041) and the process variable (P0040) can be indicated via analog output AO1 or AO2, and it is necessary to set P0251 or P0254 in 9 or 6, respectively. The full scale given by P0528 corresponds to 10 V or 20 mA in the respective AOx output.

The PID or VP feedback can have as its source the analog inputs (P0203 = 1 for AI1 or P0203 = 2 for AI3) or the frequency input FI (P0203 = 3). In case the selected reference for the Setpoint is the same input that is being used as PID feedback, the inverter will activate the Config Status. For further information, refer to [Section 5.6 POSSIBLE CAUSES OF INVERTER CONFIG STATUS on page 5-6](#).

Once the PID controller is active (P0203) and in Automatic mode (Dlx and Bit 14 of P0680), the MW500 HMI (if connected), in the monitoring mode, will increment the value of P0525 in the main display by the keys and . This indication of P0525 will depend on the band and shape as per P0528 and P0529. On the other hand if in Manual mode, the HMI will increment the value of P0121 in Hz.

The Manual/Automatic command is done by one of the digital inputs DI1 to DI8, and the value 22 = Manual/Automatic PID must be set in one of the respective parameters (P0263 to P0270). In case more than a DIx is programmed for this function, the inverter will activate the Config Status ([Section 5.6 POSSIBLE CAUSES OF INVERTER CONFIG STATUS on page 5-6](#)). In case no digital input is set, the PID controller will work only in the Automatic mode.

If the input programmed with the Manual/Automatic function is active, the PID will operate in the Automatic mode, but if it is inactive, the PID will operate in the Manual mode. In this last case, the PID controller is disconnected and the ramp input becomes the Setpoint directly (bypass operation).

The digital outputs DO1 to DO5 can be set to activate logics of comparison to the process variable (VP), and the value 22 (=VP>VPx) or 23 (=VP<VPx) must be programmed in one of the respective parameters (P0275 to P0279).

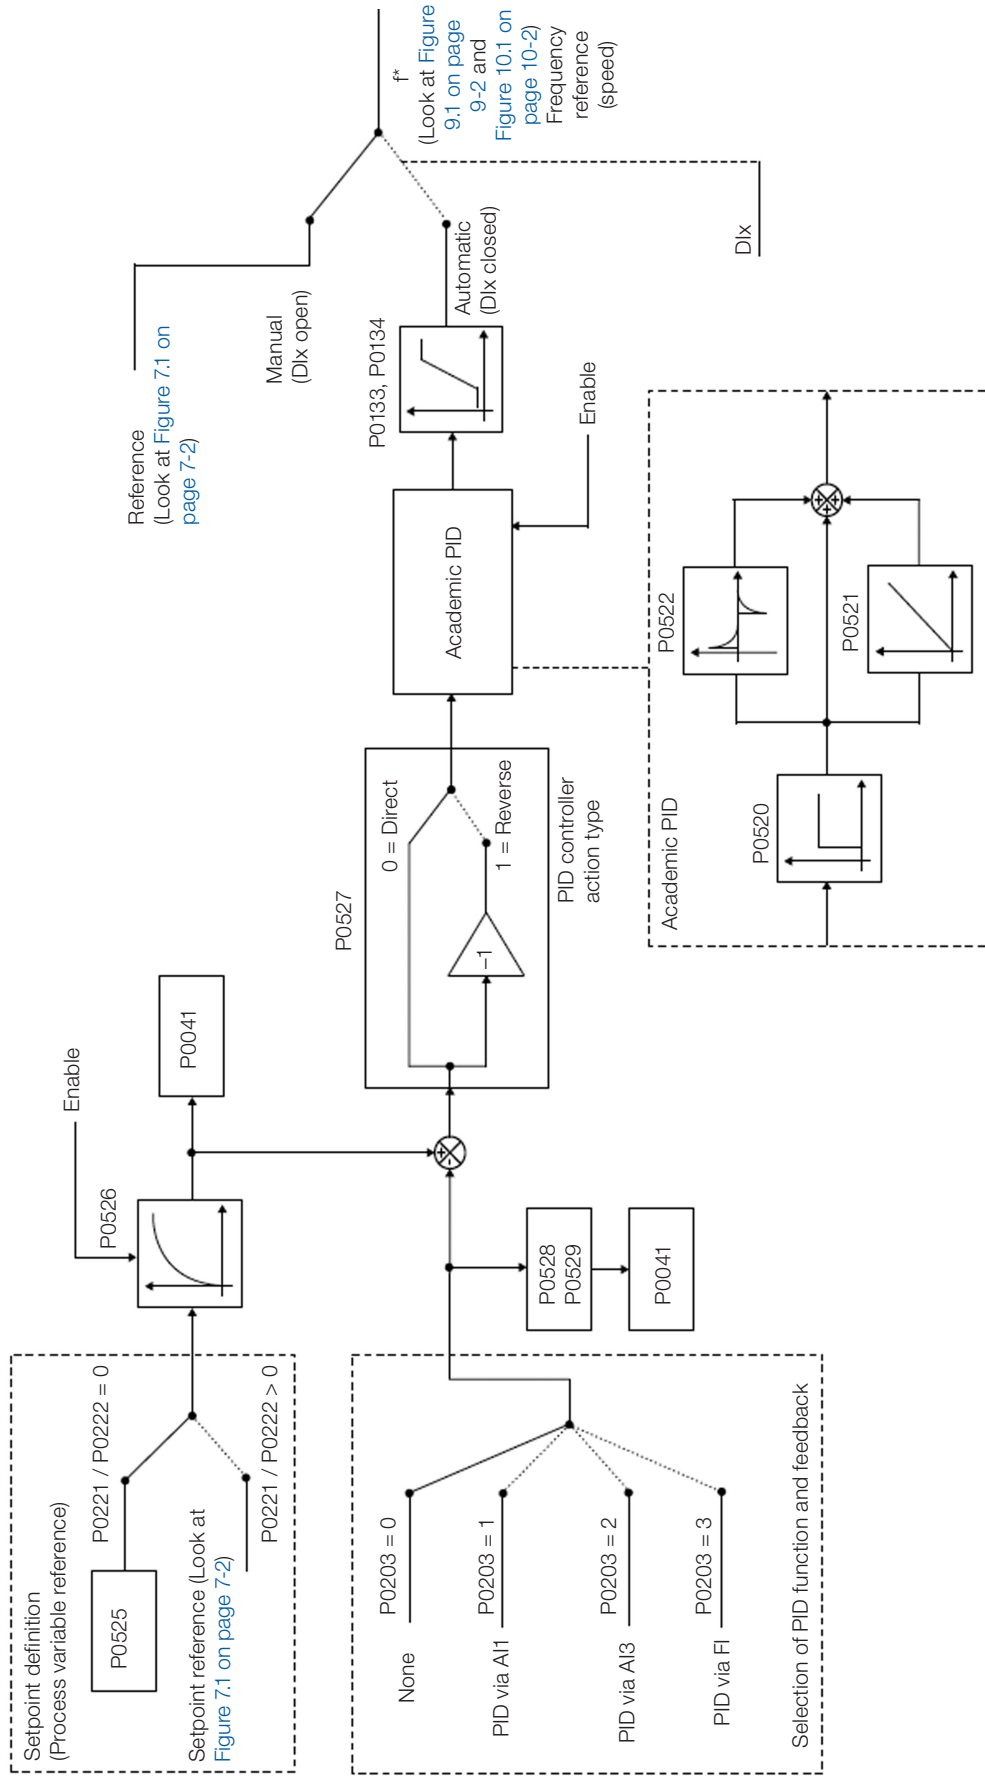


Figure 13.1: Block diagram of the PID regulator

13.2 START-UP

Before describing in details the parameters related to this function, below we present the directions to perform the start-up of the PID controller.



NOTE!

For the PID function to operate properly, it is essential to check if the inverter is configured properly to drive the motor at the desired speed. To do so, check the following settings:

- Torque boosts (P0136 and P0137) and slip compensation (P0138) if in the control mode V/f (P0202 = 0).
- If the self-tuning was executed if in the control mode VVW (P0202 = 5).
- Acceleration and deceleration ramps (P0100 to P0103) and current limitation (P0135).
- Normally, the scalar control defined in the factory default (P0204 = 5 or 6) and with P0100 = P0101 = 1.0 s meets the requirements of most applications related to the PID controller.

Configuring the PID Controller

1. Enable PID:

For the operation of the PID controller application, it is necessary to set the parameter P0203 ≠ 0.

2. Define the PID feedback:

The PID feedback (measurement of the process variable) is done via analog input AI1 (P0203 = 1), AI2 (P0203 = 2) or frequency input FI (P0203 = 3).

3. Define the reading parameters of the HMI monitoring screen:

The monitoring mode of the MW500 Remote HMI (if connected) can be configured to show the control variables of the PID controller in the numerical form. In the example below are shown the PID feedback or process variable, PID Setpoint and motor speed.

Example:

a. Main display parameter to show the process variable:

- Program P0205 in 40, which corresponds to parameter P0040 (PID Process Variable).
- Program P0209 in 10 (%).
- Program P0212 in 1 (wxy.z) – form of indication of PID variables.

b. Secondary display parameter to show the PID Setpoint:

- Program P0206 in 41, which corresponds to parameter P0041 (PID Setpoint Variable).

c. Bar parameter to show the motor speed:

- Program P0207 in 2.
- Program P0210 according to P0134 (if P0134 = 66.0 Hz, thus P0210 = 660).

4. Set Reference (Setpoint):

The Setpoint is defined similarly to the speed reference as per [Section 7.2 SPEED REFERENCE on page 7-7](#), but instead of applying the value directly to the ramp input, it is applied to the PID input according to [Figure 13.1 on page 13-3](#).

The PID operation internal scale is defined in percentage from 0.0 to 100.0 %, as well as the PID reference via keys in P0525 and via analog input. The other sources whose references are in another scale, such as the speed references like Multispeed and the 13-bit reference, are converted to this scale before the processing of the PID. The same occurs with parameters P0040 and P0041 which have their scale defined by P0528 and P0529.

5. Define digital input for the Manual/Automatic command:

In order to execute the Manual/Automatic command in the PID controller, it is necessary to define which digital input will execute this command. In order to do so, program one of the parameters P0263 to P0270 in 22.

Suggestion: program P0265 in 22 for the digital input DI3 to execute the Manual/Automatic command.

6. Define the action type of the PID controller:

The control action must be direct ($P0527 = 0$) when it is necessary that the motor speed be increased to increment the process variable. Otherwise, select reverse ($P0527 = 1$).

Examples:

- a. Direct: pump driven by the inverter filling the tank with the PID controlling its level. For the level (process variable) to increase, it is necessary that the flow increase, which is accomplished by increasing the speed of the motor.
- b. Reverse: fan driven by inverter cooling a refrigeration tower with PID controlling its temperature. If an increase in temperature is desired (process variable), it is necessary to reduce the ventilation by reducing the motor speed.

7. Adjust the PID feedback scale:

The transducer (sensor) to be used for the feedback of the process variable must have a full scale of at least 1.1 times the highest value you wish to control.

Example: if you wish to control a pressure in 20 bars, a sensor with full scale of at least 22 bars (1.1×20) must be chosen.

Once the sensor is defined, the type of signal to be read in the input must be selected (if current or voltage) and adjust the switch corresponding to the selection made.

In this sequence, we will assume that the sensor signal varies from 4 to 20 mA (configure $P0233 = 1$ and switch $S1.1 = ON$).

For the manipulated values to have physical meaning, the scale defined by P0528 and P0529 must be set according to the maximum reading value of the sensor in the same scale and unit. For example, for a pressure sensor from 0 to 4 bars, P0528 and P0529 can set the scale in 4.00 (400 and 2, respectively) or 4.000 (4000 and 3, respectively), for instance. Thus, the indications of Setpoint (P0041) and VP (P0040) will comply with the application. Besides, the feedback gain and offset also affect the scale of the PID input variables when changed from the default and must be taken into account, but it is recommended to use the default values (unit gain and null offset).

Although P0528 and P0529 define a scale to indicate the variables of interest of the PID controller, the calculations are based on the scale of P0525 (0.0 to 100.0 %). Therefore, the threshold parameters of comparison of the relay output VPx (P0533) and wake up band (P0535) operate in percentage values of the sensor full scale, that is, 50.0 % are equivalent to 2.00 bars of pressure in the output.

8. Speed limits:

Set P0133 and P0134 within the operating range desired for the excursion of the PID output between 0 and 100.0 %. Like in the analog inputs, the PID output signal band can be adjusted to those limits without dead zone by parameter P0230; refer to [Section 12.1 ANALOG INPUTS on page 12-1](#).

Putting into Operation

The HMI monitoring mode simplifies the PID operation when the PID Setpoint is defined via keys in P0525, because, as it occurs with P0121, P0525 is incremented while P0041 is shown on the main display when the keys and are pressed. In this way, in the monitoring mode, it is possible to increment both P0121 when PID in Manual, and P0525 when PID in Automatic.

1. Manual operation (Manual/Automatic Dlx inactive):

Keeping the Dlx inactive (Manual), check the indication of the process variable on the HMI (P0040) based on an external measurement of the feedback signal (transducer) in AI1. Then, with the HMI in the monitoring mode, vary the speed reference in the keys and (P0121) until reaching the desired value of the process variable. Only then go to the Automatic mode.



NOTE!

If the Setpoint is defined by P0525, the inverter will automatically set P0525 to the instant value of P0040 when the mode is changed from Manual to Automatic (since P0536 = 1). In this case, the commutation from Manual to Automatic is smooth (there is no sudden speed variation).

2. Automatic operation (Manual/Automatic Dlx active):

With Dlx active (Automatic) perform the dynamic setting of the PID controller, that is, of the proportional (P0520), integral (P0521) and differential (P0522) gains, checking if the regulation is being done correctly and the response is satisfactory. In order to do so, just compare the Setpoint and the process variable and check if the values are close. Also check the motor dynamic response to the variations of the process variable.

It is important to point out that the setting of the PID gains is a step that requires some trial and error to reach the desired response time. If the system responds quickly and oscillates close to the Setpoint, then the proportional gain is too high. If the system responds slowly and it takes a long time to reach the Setpoint, the proportional gain is too low and must be increased. In case the process variable does not reach the required value (Setpoint), then the integral gain must be adjusted.

As a summary of this sequence, below is presented a scheme of the connections to use the PID controller and also the setting of the parameters used in this example.

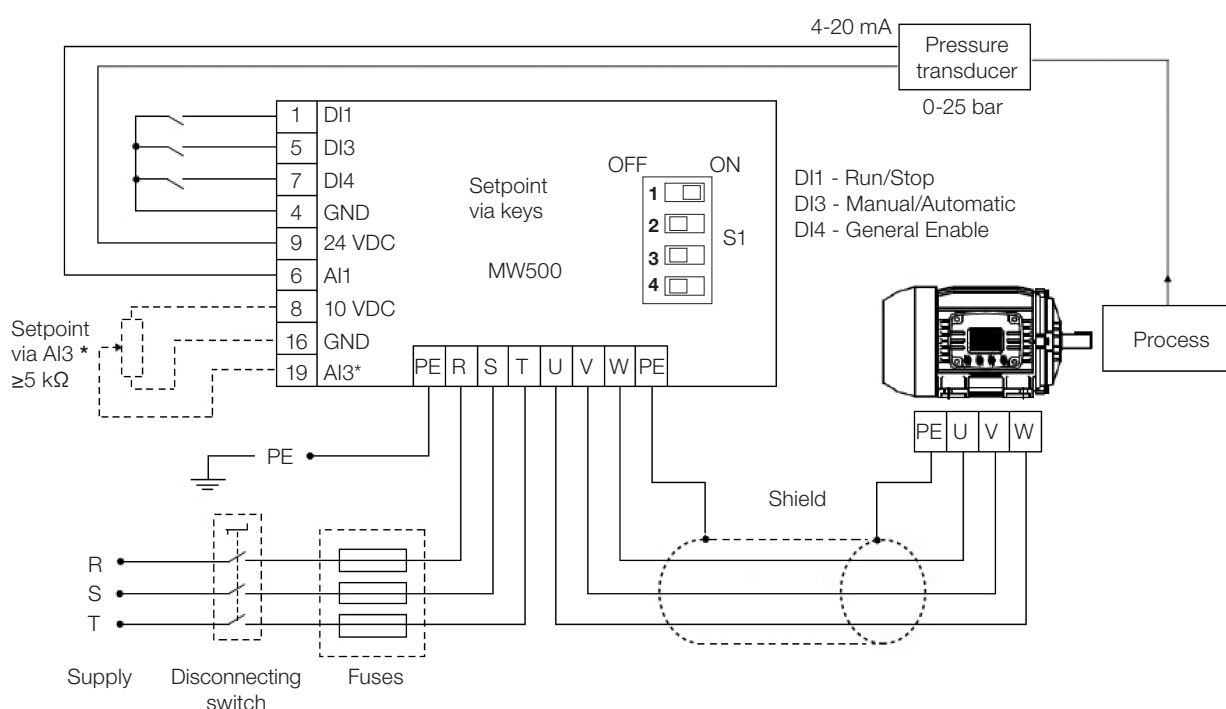


Figure 13.2: Example of application of the MW500 PID regulator

Table 13.1: Setting of parameters for the example presented

Parameter	Description
P0203 = 1	Enables the PID regulator via AI1 input (feedback)
P0205 = 40	Main display parameter selection (Process Variable)
P0206 = 41	Secondary display parameter selection (PID Setpoint)
P0207 = 2	Bar parameter selection (Motor Speed)
P0208 = 660	Reference scale factor
P0209 = 0	Reference engineering unit: none
P0210 = 660	Bar full scale
P0212 = 1	Reference indication form: wxy.z
P0220 = 1	Selection of LOC/REM source: operation in Remote condition
P0222 = 0	Selection of REM reference: HMI
P0226 = 0	Selection of remote direction of rotation: clockwise
P0228 = 0	Selection of remote JOG source: inactive
P0232 = 1.000	AI1 Input gain
P0233 = 1	AI1 input signal: 4 to 20 mA
P0234 = 0.00 %	AI1 input offset
P0235 = 0.15 s	AI1 input filter
P0230 = 1	Dead zone (active)
P0227 = 1	Selection of remote Run/Stop (Dlx)
P0263 = 1	DI1 input function: Run/Stop
P0265 = 22	DI3 input function: PID Manual/Automatic
P0266 = 2	DI4 input function: General Enable
P0527 = 0	PID regulator action: direct
P0528 = 250	PID VP indication scale
P0529 = 1	PID VP indication form
P0525 = 20.0	PID Setpoint
P0536 = 1	P0525 automatic setting: Active
P0520 = 1.000	PID proportional gain
P0521 = 0.430	PID integral gain
P0522 = 0.000	PID differential gain

13.3 SLEEP MODE WITH PID

The Sleep mode is a useful resource to save on energy when the PID controller is used. In many applications with PID controller, energy is wasted by keeping the motor spinning at the minimum speed when, for example, the pressure or the level of a tank keeps rising.

In order to enable the Sleep mode just program the frequency to sleep in parameter P0217 the following way: $P0133 < P0217 \leq P0134$. Besides that, parameter P0218 defines the time interval in which the input conditions in the Sleep mode, by P0217 and P0535, must remain stable. See the detailed description of P0535 below.


DANGER!

When in the Sleep mode, the motor can spin at any time considering the process conditions. If you wish to handle the motor or execute any kind of maintenance, power down the inverter.


DANGER!

Quand en mode Sleep, le moteur peut tourner subitement en fonction des conditions du procés. S'il faut manipuler le moteur ou faire de l'entretien, déconnectez le variateur.

For further information on the configuration of the sleep state, refer to [Section 11.3 SLEEP MODE on page 11-7](#).

13.4 MONITORING MODE SCREEN

When the PID controller is used, the monitoring mode screen can be configured to show the main variables numerically with or without engineering units.

One example of HMI with this configuration can be observed in [Figure 13.3 on page 13-8](#), where it is shown: the process variable, the Setpoint, both without engineering unit (with reference at 25.0 bars) and the motor speed on the variable monitoring bar, according to the parameterization shown in [Table 13.1 on page 13-7](#). For further information refer to [Section 5.3 HMI on page 5-2](#).

On the screen of [Figure 13.3 on page 13-8](#) is observed a Setpoint of 20.0 bars on the secondary display, the process variable also at 20.0 bars on the main display and the output speed at 80 % on the bar.

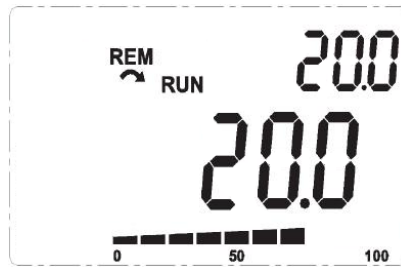


Figure 13.3: Example of HMI in the monitoring mode to use the PID regulator

13.5 PID PARAMETERS

Below are described in details the parameters related to the PID controller.

P0040 – PID Process Variable

Adjustable Range:	0.0 to 3000.0	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

Read only parameter which presents, in format (wxy.z) defined by P0529 and without engineering unit, the value of the process variable or feedback of the PID controller according to the scale defined in P0528.

P0041 – PID Setpoint Value

Adjustable Range:	0.0 to 3000.0	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

Read only parameter which presents, in format (wxy.z) defined by P0529 and without engineering unit, the value of the Setpoint (reference) of the PID controller according to the scale defined in P0528.

P0203 – Special Function Selection

Adjustable Range:	0 = None 1 = PID via AI1 2 = PID via AI3 3 = PID via FI	Factory Setting: 0
Properties:	cfg	
Access Groups via HMI:		

Description:

It enables the special function PID controller, when set P0203 ≠ 0. Besides, when you enable PID, you can select the feedback input (measurement of the process variable) of the controller. The PID feedback can be done via analog input (P0203 = 1 for AI1 or P0203 = 2 for AI3) or frequency input FI (P0203 = 3).

P0520 – PID Proportional Gain

P0521 – PID Integral Gain

P0522 – PID Differential Gain

Adjustable Range: 0.000 to 9.999 **Factory Setting:** P0520 = 1.000
P0521 = 0.430
P0522 = 0.000

Properties:

Access Groups via HMI:

Description:

These parameters define the proportional, integral and differential gains of the function PID controller and must be set according to the application which is being controlled.

Some examples of initial settings for some applications are presented in [Table 13.2 on page 13-9](#).

Table 13.2: Suggestion for setting the PID regulator gains

Magnitude	Gains		
	Proportional P0520	Integral P0521	Differential P0522
Pressure in pneumatic system	1.000	0.430	0.000
Flow in pneumatic system	1.000	0.370	0.000
Pressure in hydraulic system	1.000	0.430	0.000
Flow in hydraulic system	1.000	0.370	0.000
Temperature	2.000	0.040	0.000
Level	1.000	Read the next note	0.000



NOTE!

In the case of the level control, the setting of the integral gain will depend on the time it takes the tank to go from the minimum acceptable level to the desired level in the following conditions:

- For direct action, the time must be measured with the maximum input flow and minimum output flow.
- For reverse action, the time must be measured with the minimum input flow and maximum output flow.

The formula to calculate the initial value of P0521 considering the system response time is presented below:

$$P0521 = 0.5 / t,$$

Where: t = time (in seconds).

P0525 – Keypad PID Setpoint

Adjustable Range: 0.0 to 100.0 % **Factory Setting:** 0.0 %

Properties:

Access Groups via HMI:

Description:

This parameter allows setting the Setpoint of the PID controller by the HMI keys, since P0221 = 0 or P0222 = 0 and if it is operating in the Automatic mode. The value of 100.0 % is equivalent to the full scale of the indication in P0040 and P0041 given by P0528.

In case the operation is in the Manual mode, the reference via HMI is set in parameter P0121.

The value of P0525 is kept in the last value set (backup) even when disabling or powering down the inverter when P0536 = 1 (Active).

P0526 – PID Setpoint Filter

Adjustable Range: 0 to 9999 ms **Factory Setting:** 50 ms

Properties:

Access Groups via HMI:

Description:

This parameter sets the Setpoint filter time constant of the PID controller. It is intended to attenuate sudden changes in the Setpoint value of the PID.

P0527 – PID Action Type

Adjustable Range: 0 = Direct, 1 = Reverse **Factory Setting:** 0

Properties:

Access Groups via HMI:

Description:

The PID action type must be selected as “direct” when it is necessary that the motor speed be increased to make the process variable increment. Otherwise, select “Reverse”.

Table 13.3: Selection of the PID action

Motor Speed (P0002)	Process Variable (P0040)	P0527
Increases	Increases	0 (Direct)
	Decreases	1 (Reverse)

This characteristic varies according to the process type, but direct feedback is more commonly used.

In temperature or level control processes, the setting of the kind of action will depend on the configuration. For example: in the level control, if the inverter acts on the motor that removes liquid from the tank, the action will be reverse, because when the level rises, the inverter will have to increase the motor speed to make it lower. In case the inverter acts on the motor that fills the tank, the action will be direct.

P0528 – Process Variable Scale Factor

Adjustable Range: 10 to 30000 **Factory Setting:** 1000

Properties:

Access Groups via HMI:

Description:

It defines how the PID feedback or process variable will be presented in P0040, as well as the PID Setpoint in P0041. Therefore, the PID feedback or process variable full scale which corresponds to 100.0 % in P0525, in the analog input (AI1 or AI3) or in the frequency input (FI) used as feedback of the PID controller is indicated in P0040 and P0041 in the scale defined by P0528 and P0529.

Example: the pressure transducer operates at 4-20 mA for a band of 0 to 25 bars; setting of parameter P0528 at 250 and P0529 at 1.

P0529 – Process Variable Indication Form

Adjustable Range:	0 = wxyz 1 = wxy.z 2 = wx.yz 3 = w.xyz	Factory Setting:	1
Properties:			
Access Groups via HMI:	<input type="text" value="HMI"/>		

Description:

This parameter allows setting the form of indication of the PID process variable (P0040) and PID Setpoint (P0041).

P0533 – X Process Variable Value

Adjustable Range:	0.0 to 100.0 %	Factory Setting:	90.0 %
Properties:			
Access Groups via HMI:	<input type="text" value="I/O"/>		

Description:

These parameters are used in the digital output functions (refer to [Section 12.6 DIGITAL OUTPUTS on page 12-23](#)) with the purpose of signaling/alarm. In order to do so, you must program the Digital Output function (P0275...P0279) at 22 = Process Variable > VPx, or at 23 = Process Variable < VPx.

P0535 – Wake Up Band

Adjustable Range:	0.0 to 100.0 %	Factory Setting:	0.0 %
Properties:			
Access Groups via HMI:	<input type="text" value="I/O"/>		

Description:

It is the process variable error in relation to the PID Setpoint to enter and exit the Sleep mode. The value of P0535 is expressed in % of the full scale (P0528) like the scale of P0525, that is:

$$\text{Error} = \frac{P0041 - P0040}{P0528} \cdot 100 \%$$

The parameter P0535 ensures that, besides the conditions defined by P0217 and P0218, the PID controller error is in an acceptable range around the Setpoint so as to allow the inverter to go into the Sleep mode (disabling the motor), as shown by [Figure 13.4 on page 13-12](#).

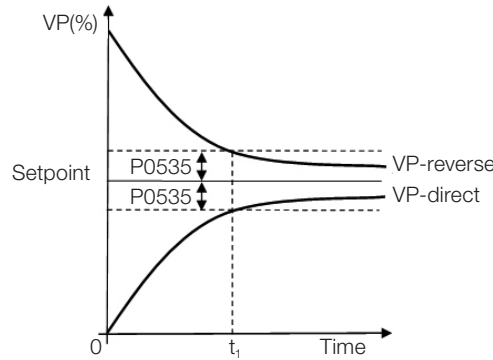


Figure 13.4: OK Setpoint band defined by P0535

According to [Figure 13.4 on page 13-12](#), the condition imposed by P0535 depends on the type of action of the PID: direct or reverse. Therefore, if the PID is direct (P0527 = 0) the error must be smaller than P0535 for the inverter to go into the Sleep mode (Setpoint ok). On the other hand, if the PID is reverse (P0527 = 1), the error must be bigger than -P0535 for the inverter to go into the Sleep mode.

Parameter P0535 acts together with parameters P0217 and P0218. According to [Figure 13.4 on page 13-12](#), from “t₁” the Sleep mode can occur in case the other conditions are met. For further information on the Sleep mode, refer to [Section 11.3 SLEEP MODE on page 11-7](#).

P0536 – P0525 Automatic Setting

Adjustable	0 = Inactive	Factory	0
Range:	1 = Active	Setting:	
Properties:	cfg		

Access Groups via HMI:

Description:

If the PID controller Setpoint is via HMI (P0221/P0222 = 0) and P0536 = 1, when changing from Manual to Automatic, the value of the process variable (P0040) will be converted in % of P0528 and loaded in P0525. Thus, you prevent oscillations of the PID in the change from manual to automatic.

Table 13.4: P0536 configuration

P0536	Function
0	Inactive (does not copy the P0040 value in P0525)
1	Active (copies the P0040 value in P0525)

13.6 ACADEMIC PID

The PID controller implemented in the MW500 is academic type. Below are presented the equations that characterize the academic PID, which is the algorithm base of this function.

The transfer function in the frequency domain of the academic PID controller is:

$$y(s) = K_p \times e(s) \times [1 + \frac{1}{sT_i} + sT_d]$$

Replacing the integrator by a sum and the derivative by the incremental quotient, you obtain the approximation for the discrete (recursive) transfer equation presented below:

$$y(k) = y(k-1) + K_p[(1 + K_i.T_a + K_d/T_a).e(k) - (K_d/T_a).e(k-1)]$$

Where:

y(k): present PID output, it may vary from 0.0 to 100.0 %.

y(k-1): PID previous output.

K_p (Proportional gain): K_p = P0520.

K_i (Integral gain): K_i = P0521 x 100 = [1/T_i x 100].

K_d (Differential gain): K_d = P0522 x 100 = [T_d x 100].

T_a = 0.05 sec (sampling period of the PID controller).

e(k): present error [SP*(k) – X(k)].

e(k-1): previous error [SP*(k-1) – X(k-1)].

SP*: Setpoint (reference), it may vary from 0.0 to 100.0 %.

X: process variable (or feedback) read through one of the analog inputs, according to the selection of P0203, and it may vary from 0.0 to 100.0 %.

14 RHEOSTATIC BRAKING

The braking torque that may be obtained by the application of frequency inverters, without rheostatic braking resistors, varies from 10 % to 35 % of the motor rated torque.

In order to obtain higher braking torques, resistors for rheostatic braking are used. In this case, the regenerated energy is dissipated in the resistor mounted outside the inverter.

This kind of braking is used in cases where short deceleration times are desired or when high-inertia loads are driven.

The Rheostatic Braking function can only be used if a braking resistor is connected to the inverter, and if the parameters related to it are properly set.

P0153 – Dynamic Braking Level

Adjustable Range:	339 to 1200 V	Factory Setting:	375 V (P0296 = 0) 750 V (P0296 = 1) 950 V (P0296 = 2)
--------------------------	---------------	-------------------------	---

Properties:

Access Groups via HMI:

Description:

Parameter P0153 defines the voltage level to activate the braking IGBT, and it must be compatible with the power supply.

If P0153 is set at a level too close to the overvoltage actuation level (F0022), it may occur before the braking resistor can dissipate the motor regenerated energy. On the other hand, if the level is too lower than the overvoltage, the function limits the actuation at a maximum of 15 % of the overvoltage level.

Thus, it is ensured that the braking resistor will not actuate in the DC link rated operating region; refer to [Table 14.1 on page 14-1](#). Therefore, although P0153 has a wide setting band (339 to 1200 V), only the values defined by the actuation band in [Table 14.1 on page 14-1](#) are effective, that is, values below the actuation band are internally limited in the execution of the function and values above naturally deactivate the function.

Table 14.1: Rheostatic braking actuation value

Input Voltage	Rated DC Link	P0153 Actuation Band	P0153 Factory Default
200 to 240 Vac	339 Vdc	349 to 410 Vdc	375 Vdc
380 to 480 Vac	678 Vdc	688 to 810 Vdc	750 Vdc
500 to 600 Vac	846 Vdc	850 to 1000 Vdc	950 Vdc

[Figure 14.1 on page 14-2](#) shows an example of typical DC braking actuation, where it can be observed the hypothetical wave shapes of the voltage on the braking resistor and the voltage on the DC link. Thus, when the braking IGBT connects the link to the external resistor, the DC link voltage drops below the value set by P0153, keeping the level below fault F0022.

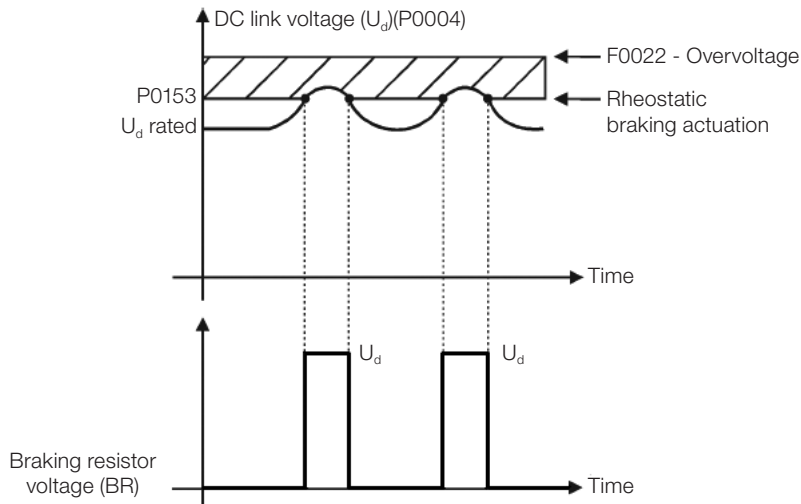


Figure 14.1: Rheostatic braking actuation curve

Steps to enable the rheostatic braking:

- With the inverter powered down, connect the braking resistor (refer to the MW500 user’s manual, Section 3.2 Electrical Installation).
- Setting P0151 for the maximum value: 410 V (P0296 = 0), 810 V (P0296 = 1) or 1200 V (P0296 = 3), according to the situation, in order to prevent the actuation of the DC link voltage regulation before the rheostatic braking.



DANGER!

Be sure the inverter is Off and disconnected before handling the electric connections and read carefully the installation instructions of the MW500 user's manual available for download on the website: www.weg.net.



DANGER!

Vérifier que le variateur est hors tension et débranché avant de manipuler les connexions électriques et lire attentivement les instructions d'installation dans le mode d'emploi.

15 FAULTS AND ALARMS

The problem detection structure in the inverter is based on the fault and alarm indication. In case of fault, the locking the IGBTs and motor stop by inertia will occur.

The alarm works as a warning for the user of critical operating conditions and that may cause a fault if the situation is not corrected.

Refer to Chapter 6 Troubleshooting and Maintenance of the MW500 user's manual and [QUICK REFERENCE OF PARAMETERS, ALARMS AND FAULTS on page 0-1](#) contained in this manual to obtain more information regarding the faults and alarms.

15.1 MOTOR OVERLOAD PROTECTION (F0072 AND A0046)

The motor overload protection is based on the use of curves that simulate the heating and cooling of the motor in cases of overload. The motor overload protection fault and alarm codes are F0072 and A0046 respectively.

The motor overload is given considering the reference value $I_n \times FS$ (motor rated current multiplied by the duty factor), which is the maximum value at which the overload protection must not actuate, because the motor can work continuously at that value without damages.

However, for that protection to actuate properly, the winding-temperature supervision (which corresponds to the time of heating and cooling of the motor) is estimated.

This winding-temperature supervision is approximated by a function called I_{xt} , which integrates the output current value from a level previously defined by P0156, P0157 and P0158. When the accumulated value reaches the limit, an alarm and/or fault are indicated.

In order to ensure greater protection in case of restart, this function keeps the value integrated by the function I_{xt} in the inverter non-volatile memory. Thus, after power up the function will use the I_{xt} value saved in this memory to perform a new evaluation of overload.

P0156 – Motor Overload Current at 100 % of its Rated Speed

P0157 – Motor Overload Current at 50 % of its Rated Speed

P0158 – Motor Overload Current at 20 % of its Rated Speed

Adjustable Range: 0.0 to 200.0 A

Factory Setting: P0156 = $1.1 \times I_{nom}$
P0157 = $1.0 \times I_{nom}$
P0158 = $0.8 \times I_{nom}$

Properties:

Access Groups via HMI:

Description:

These parameters define the motor overload current (I_{xt} - F0072). The motor overload current is the current value (P0156, P0157 and P0158) based on which the inverter will understand that the motor is operating in overload.

For self-ventilated motors, the overload current depends on the speed that is being applied to the motor. Therefore, for speeds below 20 % of the rated speed the overload current is P0158, while for speeds between 20 % and 50 % the overload current is P0157, and above 50 %, it is P0156.

The greater the difference between the motor current and the overload current (P0156, P0157 or P0158), the faster the actuation of fault F0072.

It is recommended that parameter P0156 (motor overload current at rated speed) be set at a value 10 % above the used motor rated current (P0401).

In order to deactivate the motor overload function just set parameters P0156 to P0158 to values equal to or above two times the inverter rated current P0295.

Figure 15.1 on page 15-3 shows the overload actuation time considering the normalized output current in relation to the overload current (P0156, P0157 or P0158), that is, for a constant output current with 150 % of overload, fault F0072 occurs in 60 seconds. On the other hand, for output current values below P0156, P0157 or P0158, according to the output frequency, fault F0072 does not occur. Where as for values above 150 % of P0156, P0157 or P0158 the fault actuation time is below 60 s.



NOTE!

Parameters P0156, P0157 and P0158 have their value affected by parameter P0298. When the value of parameter P0298 is changed, the value of parameters P0156, P0157 and P0158 are also automatically modified.

P0349 – Level for Alarm lxt

Adjustable Range:	70 to 100 %	Factory Setting:	85 %
--------------------------	-------------	-------------------------	------

Properties: cfg

Access Groups via HMI:

Description:

This parameter defines the level for alarm actuation of the motor overload protection (A0046 when P0037 > P0349). The parameter is expressed in percentage of the overload integrator limit value, where fault F0072 occurs. Therefore, by setting P0349 at 100 %, the overload alarm is inactive.

P0037 – Overload of Motor lxt

Adjustable Range:	0 to 100 %	Factory Setting:	
--------------------------	------------	-------------------------	--

Properties: ro

Access Groups via HMI:

Description:

This parameter indicates the present motor overload percentage or overload integrator level. When this parameter reaches the P0349 value the inverter will indicate the motor overload alarm (A0046). As soon as the value of the parameter is at 100 %, a motor overload fault (F0072) is raised.

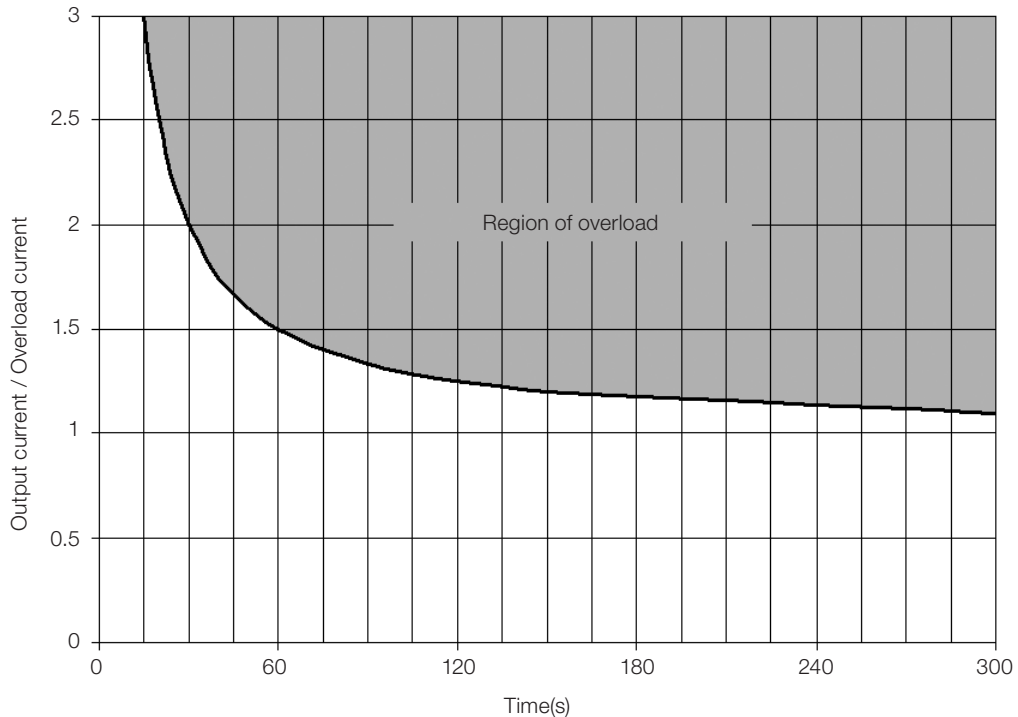


Figure 15.1: Actuation of the motor overload

P0038 – Encoder Speed

Adjustable Range:	0 to 65535 rpm	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

It indicates the encoder actual speed, in revolutions per minute (rpm), through a 0.5 second filter.

P0039 – Encoder Pulse Counter

Adjustable Range:	0 to 40000	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

This parameter shows the counting of the pulses of the encoder. The counting can be increased from 0 to 40000 (Hourly turn) or decreased from 40000 to 0 (rotate Counterclockwise).

15.2 IGBTs OVERLOAD PROTECTION (F0048 AND A0047)

The MW500 IGBTs overload protection uses the same motor protection format. However, the project point was modified for the fault F0048 to occur in three seconds for 200 % of overload in relation to the inverter rated current (P0295), as shown in Figure 15.2 on page 15-4. On the other hand, the IGBTs overload (F0048) has no actuation for levels below 150 % of the inverter rated current (P0295).

Before the actuation of fault F0048, the inverter can indicate alarm A0047 when the IGBTs overload level is above the value programmed in P0349.

The IGBTs overload protection can be disabled through parameter P0343.

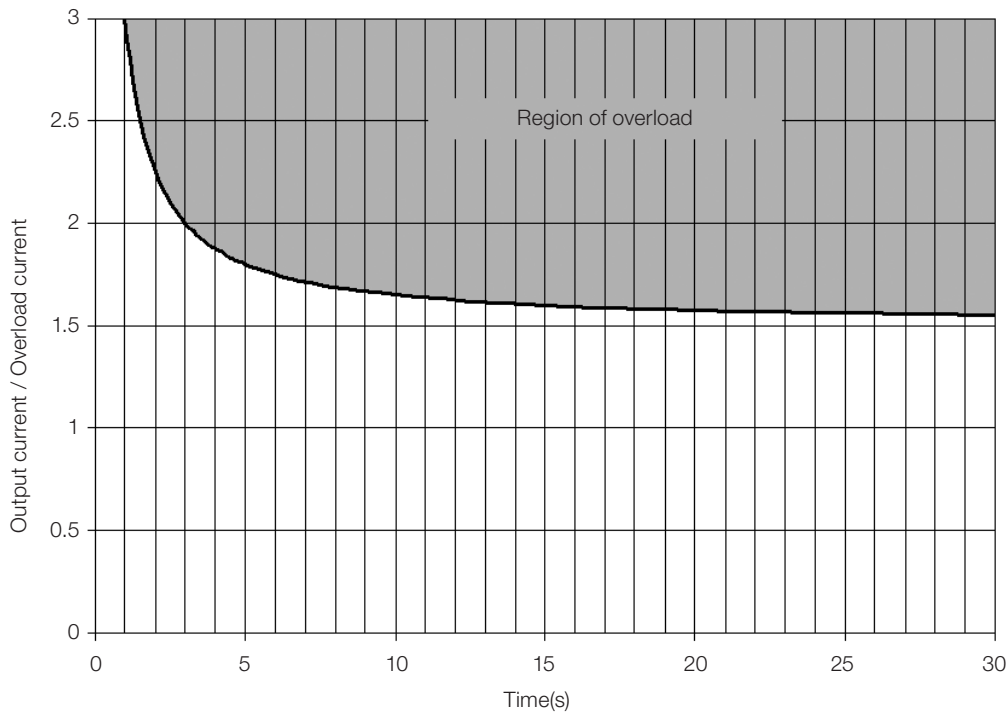


Figure 15.2: Actuation of the overload of the IGBTs

P0343 – Fault Mask

Adjustable Range:	Bit 0 = F0074 Bit 1 = F0048 Bit 2 = F0078 Bit 3 = F0079 Bit 4 = F0076 Bit 5 = F0179 Bit 6 = F0068 Bit 7 = F700/A700 Bit 8 to 18 = Reserved	Factory Setting: 00AFh
--------------------------	--	-------------------------------

Properties: cfg

Access Groups via HMI:

Description:

This parameters allows the user to control the reporting of several different failures, as described:

- Bit 0 = F0074.
- Bit 1 = F0048.
- Bit 2 = F0078.
- Bit 3 = F0079.
- Bit 4 = F0076.
- Bit 5 = F0179.
- Bit 6 = F0068.
- Bit 7 = F700/A700.
- Bit 8 to 18 = Reserved.



ATTENTION!

Disable the ground fault or overload protections may damage the inverter. Only do that under WEG technical directions.

15.3 MOTOR OVERTEMPERATURE PROTECTION (F0078)

This function protects the motor against overtemperature through indication of fault F0078.

The motor needs a temperature sensor of the triple PTC type. The reading of the sensor can be done in two different ways: through the analog input or through the digital input. . Please note that only the connection via analog input provides protection against short circuit.

For the reading of the PTC via analog input, it is necessary to configure it for current input and select option "4 = PTC" in P0231 or P0236. Connect the PTC between source +10 Vdc and the analog input, as well as close the Alx configuration DIP-Switch in "mA".

The analog input reads the PTC resistance and compares it to the limits values for the fault. When those values are exceeded, fault F0078 is indicated, as shown in [Table 15.1 on page 15-5](#).



ATTENTION!

The PTC must have reinforced electrical insulation up to 1000 V.

Table 15.1: Actuation level of fault F0078 PTC via analog input

PTC Resistance	Alx	Overtemperature
$R_{PTC} < 50 \Omega$	$V_{IN} > 9.1 V$	F0078
$50 \Omega < R_{PTC} < 3.9 k\Omega$	$9.1 V > V_{IN} > 1.3 V$	Standard
$R_{PTC} > 3.9 k\Omega$	$V_{IN} < 1.3 V$	F0078



NOTE!

For this function to work properly, it is important to keep the gain(s) and offset(s) of the analog inputs at the standard values.

For the PTC via digital input it is necessary to set the option 29 (PTC) in the DIx programming in P0263 to P0270, and connect the PTC to the referred digital input and to the GND. The resistance levels of the triple PTC are the same as those of the analog input in [Table 15.1 on page 15-5](#), but the short circuit of PTC ($R_{PTC} < 50 \Omega$) cannot be detected, and thus it is seen as normal operation. Only the case $R_{PTC} > 3.9 k\Omega$ activates fault F0078.



NOTE!

The DI2 is the only one that cannot be used as PTC input, because it has input circuit dedicated to frequency input (FI).

[Figure 15.3 on page 15-5](#) shows the PTC connection to the inverter terminals for both situations: via analog input **(a)** and via digital input **(b)**.

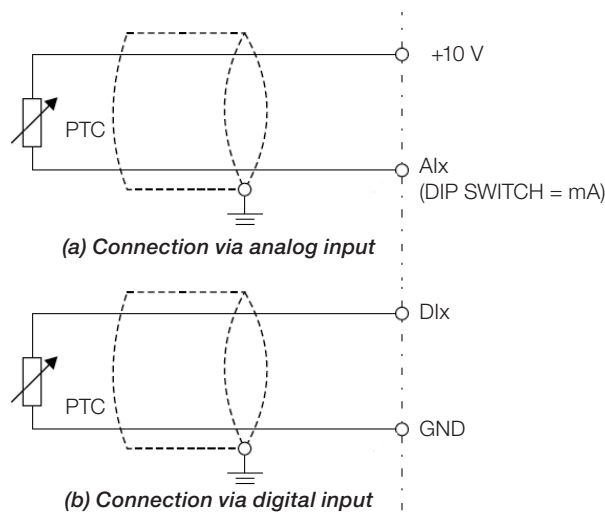


Figure 15.3: (a) and (b) PTC connection to the MW500

15.4 IGBTs OVERTEMPERATURE PROTECTION (F0051 AND A0050)

The power module temperature is monitored and indicated in parameter P0030 in degrees Celsius. This value is constantly compared to the overtemperature fault and alarm trigger value of the power module F0051 and A0050 according to [Table 15.2 on page 15-6](#). The A0050 alarm actuation level is fixed at 5 °C (41 °F) below the F0051 fault level.

Table 15.2: F0051 power module overtemperature actuation levels

F0051 Level	P0029 Model
90 °C (194 °F)	1
90 °C (194 °F)	2
90 °C (194 °F)	3
105 °C (221 °F)	4
123 °C (253.4 °F)	5
108 °C (226.4 °F)	6
108 °C (226.4 °F)	7
108 °C (226.4 °F)	8
108 °C (226.4 °F)	9
120 °C (248 °F)	10
105 °C (221 °F)	11
115 °C (239 °F)	12
115 °C (239 °F)	13
108 °C (226.4 °F)	14
108 °C (226.4 °F)	15
105 °C (221 °F)	16
110 °C (230 °F)	17
120 °C (248 °F)	18
110 °C (230 °F)	19
110 °C (230 °F)	20
110 °C (230 °F)	21
110 °C (230 °F)	22
110 °C (230 °F)	23
110 °C (230 °F)	24
110 °C (230 °F)	25
110 °C (230 °F)	26
110 °C (230 °F)	27
110 °C (230 °F)	28
110 °C (230 °F)	29
110 °C (230 °F)	30
110 °C (230 °F)	31
110 °C (230 °F)	32
110 °C (230 °F)	33
110 °C (230 °F)	34
105 °C (221 °F)	35
105 °C (221 °F)	36
107 °C (224.6 °F)	37
105 °C (221 °F)	38
105 °C (221 °F)	39
110 °C (230 °F)	40
110 °C (230 °F)	41
110 °C (230 °F)	42
110 °C (230 °F)	43
105 °C (221 °F)	44
110 °C (230 °F)	45
110 °C (230 °F)	46
110 °C (230 °F)	47
110 °C (230 °F)	48
90 °C (194 °F)	49
90 °C (194 °F)	50
100 °C (212 °F)	51
120 °C (248 °F)	52
120 °C (248 °F)	53
110 °C (230 °F)	54

In addition to triggering alarm A0050, the overtemperature protection automatically reduces the switching frequency (P0297) to 2000 Hz when the temperature (P0030) reaches 80 % of the F0051 level, and the output current (P0003) is above the rated current (P0295). This overtemperature protection characteristic can be deactivated in the control configuration parameter P0397.



ATTENTION!

An improper change of P0397 may damage the inverter. Only do that under WEG technical directions.

15.5 OVERCURRENT PROTECTION (F0070 AND F0074)

The ground fault and output overcurrent protections act very fast by means of the hardware to instantly cut the output PWM pulses when the output current is high.

Fault F0070 corresponds to an overcurrent between output phases, while fault F0074 indicates an overcurrent from the phase to the ground (PE).

The protection current level depends on the used power module so as the protection is effective, still this value is well above the inverter rated operating current (P0295).

15.6 LINK VOLTAGE SUPERVISION (F0021 AND F0022)

The DC link voltage is constantly compared to the maximum and minimum values according to the inverter power supply, as shown in [Table 15.3 on page 15-7](#).

Table 15.3: Supervision actuation levels of the DC link voltage

Supply	Level F0021	Level F0022
200 to 240 Vac	200 Vdc	410 Vdc
380 to 480 Vac	360 Vdc	810 Vdc
500 to 600 Vac	500 Vdc	1000 Vdc

15.7 PLUG-IN MODULE COMMUNICATION FAULT (F0031)

This failure occurs when the inverter detects a plug-in module connected, but cannot communicate with it.

15.8 VVW CONTROL MODE SELF-TUNING FAULT (F0033)

At the end of the self-tuning process of the VVW mode (P0408 = 1), if the estimate motor stator resistance (P0409) is too high for the inverter in use, the inverter will indicate fault F0033. Besides, the manual modification of P0409 may also cause fault F0033.

15.9 REMOTE HMI COMMUNICATION FAULT ALARM (A0700)

After the connection of the remote HMI to the MW500 terminals with parameter P0312 set to remote HMI interface, a supervision of the communication with the HMI is activated so that alarm A0700 is activated whenever this communication link is broken.

15.10 REMOTE HMI COMMUNICATION ERROR FAULT (F0700)

The condition for fault F0700 is the same as that of alarm A0700, but it is necessary that the HMI be the source for some command or reference (HMI keys option) in parameters P0220 to P0228.

15.11 POWER HARDWARE IDENTIFICATION FAULT (F0084)

Before starting loading the factory default (P0204 = 5 or 6), the inverter identifies the power hardware in order to obtain information on the power module voltage, current and trigger, as well as it verifies the inverter control basic circuits.

Fault F0084 indicates something wrong happened during the identification of the hardware: nonexistent inverter model, some loose connection cable or damaged internal circuit.



NOTE!

When this fault occurs, contact WEG.

15.12 FAN SPEED FAULT (F0179)

This fault occurs when the inverter internal temperature is higher than the threshold to enable the fan (>50 °C (>122 °F)) and the fan speed read is below 2/3 of the rated fan speed. The user should check if the fan is properly connected and not clogged with dirt. If the fan doesn't start it should be replaced as soon as possible.

15.13 MOTOR PTC FAULT (F0068)

This function provides protection against motor overtemperature by indicating fault F0068. This connection dedicated to XC5 does not provide short circuit protection.

This failure occurs when there is a trip in the PTC circuit, based on the temperature read by the motor's internal PTC. The motor is too hot and if the operation condition is maintained there is a risk of damaging the motor permanently.

In order to use it, it is necessary to remove F0068 (Bit 6) from the fault mask (P0343), which is masked by default.

15.14 FAULT IN THE CPU (F0080)

The execution of the inverter firmware is monitored at several levels of the firmware internal structure. When some internal fault is detected in the execution, the inverter will indicate F0080.



NOTE!

When this fault occurs, contact WEG.

15.15 INCOMPATIBLE MAIN SOFTWARE VERSION (F0151)

When the inverter is energized, the main software version stored in the non-volatile area (EEPROM) is compared to the version stored in the secondary microcontroller flash memory (plug-in module). This comparison is done to check the integrity and compatibility of the stored data. Those data are stored to allow copying the parameter configuration (standard user, 1 and 2) between inverters using the CFW500-MMF and with the inverter de-energized. If the versions are not compatible, fault F0151 will occur.

For further information on possible causes for the occurrence of fault F0151, refer to the CFW500-MMF accessory guide.

15.16 PULSE FEEDBACK FAULT (F0182)

When the dead time compensation is active in P0397 (refer to [Chapter 8 AVAILABLE MOTOR CONTROL TYPES on page 8-1](#)) and the pulse feedback circuit has some defect, fault F0182 will occur.



NOTE!

When this fault occurs, contact WEG.

15.17 FAULT HISTORY

The inverter is able to store a set of data on the last three faults occurred, such as: fault number, current (P0003), DC link voltage CC (P0004), output frequency (P0005), power module temperature (P0030) and logical status (P0680).

P0048 – Present Alarm

P0049 – Present Fault

Adjustable Range:	0 to 999	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

These parameters indicate the alarm number (P0048) or the fault (P0049) that may be present in the inverter.

P0050 – Last Fault

P0060 – Second Fault

P0070 – Third Fault

Adjustable Range:	0 to 999	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

These parameters indicate the number of the occurred fault.

P0051 – Current at Last Fault

P0061 – Current at 2nd Fault

P0071 – Current at 3rd Fault

Adjustable Range:	0.0 to 200.0 A	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

These parameters indicate the output current at the moment of the occurred fault.

P0052 – DC Link at Last Fault

P0062 – DC Link at 2nd Fault

P0072 – DC Link 3rd Fault

Adjustable Range:	0 to 2000 V	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:
 These parameters indicate the DC link voltage at the moment of the occurred fault.

P0053 – Frequency at Last Fault

P0063 – Frequency 2nd Fault

P0073 – Frequency 3rd Fault

Adjustable Range:	0.0 to 500.0 Hz	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:
 These parameters indicate the output frequency at the moment of the occurred fault.

P0054 – Temperature at Last Fault

P0064 – Temperature 2nd Fault

P0074 – Temperature 3rd Fault

Adjustable Range:	-20 to 150 °C	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:
 These parameters indicate the IGBTs temperature at the moment of the occurred fault.

P0055 – Logical State Last Fault

P0065 – Logical State 2nd Fault

P0075 – Logical State 3rd Fault

Adjustable Range:	0000h to FFFFh	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

These parameters record the inverter logical status of P0680 at the moment of the occurred fault. Refer to [Section 7.3 INVERTER CONTROL AND STATUS WORD](#) on page 7-12.

15.18 FAULT AUTO-RESET

This function allows the inverter to execute the automatic reset of a fault by means of the setting of P0340.

NOTE! The auto-reset is locked if the same fault occurs three times in a row within 30 seconds after the reset.

P0340 – Auto-Reset Time

Adjustable Range:	0 to 255 s	Factory Setting:	0 s
Properties:			
Access Groups via HMI:			

Description:

This parameter defines the interval after a fault to activate the inverter auto-reset. If the value of P0340 is zero the fault auto-reset function is disabled.

16 READING PARAMETERS

In order to simplify the view of the main inverter reading variables, you may directly access the READ – “Reading Parameters” menu of the MW500 Remote HMI.

It is important to point out that all the parameters of this group can only be viewed on the HMI display, and cannot be changed by the user.

P0001 – Speed Reference

Adjustable Range:	0 to 65535	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

This parameter presents, regardless of the origin source, the speed reference value in the unit and scale defined for the reference by P0208, P0209 and P0212. The full scale and reference unit in the factory default are 66.0 Hz for P0204 = 5 and 55.0 Hz for P0204 = 6.

P0002 – Motor Speed

Adjustable Range:	0 to 65535	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

Parameter P0002 indicates the speed imposed to the inverter output at the same scale defined for P0001. In this parameter, the compensations made to the output frequency are not shown. To read the compensated output, use P0005.

P0003 – Motor Current

Adjustable Range:	0.0 to 200.0 A	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

This parameter indicates the inverter output current in amperes RMS (Arms).

P0004 – DC Link Voltage (Ud)

Adjustable Range:	0 to 2000 V	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:
 This parameter indicates the DC link direct current voltage in Volts (V).

P0005 – Motor Frequency

Adjustable Range:	0.0 to 500.0 Hz	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:
 Real frequency instantly applied to the motor in Hertz (Hz).

P0006 – Inverter Status

Adjustable Range:	According to Table 16.1 on page 16-3	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:
 This parameter indicates one of the eight possible inverter status. In [Table 16.1 on page 16-3](#), a description of each status is presented, as well as the indication on the HMI.

Table 16.1: Inverter status - P0006

P0006	Status	HMI	Description
0	Ready		Indicates the inverter is ready to be enabled
1	Run		Indicates the inverter is enabled
2	Undervoltage		Indicates the voltage in the inverter is too low for operation (undervoltage), and will not accept the enabling command.
3	Fault		Indicates the inverter is in the fault status
4	Self-Tuning		Indicates the inverter is executing the Self-Tuning routine
5	Configuration		Indicates the inverter has incompatible parameter programming. Refer to Section 5.6 POSSIBLE CAUSES OF INVERTER CONFIG STATUS on page 5-6.
6	DC-Braking		Indicates the inverter is applying DC braking to stop the motor
7	Sleep Mode		Indicates the inverter is in the Sleep mode according to P0217, P0213 and P0535

P0007 – Motor Voltage

Adjustable Range: 0 to 2000 V

Factory Setting:

Properties: ro

Access Groups via HMI:

Description:

This parameter indicates the line voltage in inverter output, in Volts (V).

P0009 – Motor Torque

Adjustable Range:	-1000.0 to 1000.0 %	Factory Setting:
Properties:	ro, VVW	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:
 This parameter indicates the torque developed by the motor in relation to the rated torque.

P0010 – Output Power

Adjustable Range:	0.0 to 6553.5 kW	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:
 It indicates the electric power at the inverter output. This power is determined through the formula:

$$P0010 = \sqrt{3} \times P0003 \times P0007 \times P0011$$

Where:
 P0003 is the measured output current.
 P0007 is the reference output voltage (estimated).
 P0011 is the measured output power factor (Cos Phi).

P0011 – Power Factor

Adjustable Range:	-1.00 to 1.00	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:
 This parameter indicates the power factor, that is, the relationship between the real power and the total power absorbed by the motor.

P0012 – Digital Input Status

Refer to [Section 12.5 DIGITAL INPUTS on page 12-14](#).

P0013 – Digital Output Status

Refer to [Section 12.6 DIGITAL OUTPUTS on page 12-23](#).

P0014 – Analog Output Value AO1

P0015 – Analog Output Value AO2

Refer to [Section 12.2 ANALOG OUTPUTS](#) on page 12-6.

P0016 – Frequency Output Value FO in %

P0017 – Frequency Output Value FO in Hz

Refer to [Section 12.4 FREQUENCY OUTPUT](#) on page 12-12.

P0018 – Analog Input Value AI1

P0019 – Analog Input Value AI2

P0020 – Analog Input Value AI3

Refer to [Section 12.1 ANALOG INPUTS](#) on page 12-1.

P0021 – Frequency Input Value FI in %

P0022 – Frequency Input Value FI in Hz

Refer to [Section 12.3 FREQUENCY INPUT](#) on page 12-9.

P0023 – Version of Main Software

P0024 – Version of Secondary Software

P0027 – Plug-in Module Configuration

P0029 – Power Hardware Configuration

Refer to [Section 6.1 INVERTER DATA](#) on page 6-1.

P0030 – Heatsink Temperature

Adjustable Range:	-20 to 150 °C	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

Temperature in °C measured inside the power module by the internal NTC.

P0037 – Motor Overload lxt

P0038 – Encoder Speed

P0039 – Encoder Pulse Counter

Refer to [Section 15.1 MOTOR OVERLOAD PROTECTION \(F0072 AND A0046\)](#) on page 15-1.

P0040 – PID Process Variable

P0041 – PID Setpoint Value

Refer to [Section 13.5 PID PARAMETERS](#) on page 13-8.

P0047 – CONF Status

Adjustable Range:	0 to 999	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="READ"/>	

Description:

This parameter shows the origin situation of CONFIG mode. Refer to [Section 5.6 POSSIBLE CAUSES OF INVERTER CONFIG STATUS](#) on page 5-6.

The reading parameters in the range from P0048 to P0075 are detailed in [Section 15.17 FAULT HISTORY](#) on page 15-9.

The reading parameters P0295 and P0296 are detailed in the [Section 6.1 INVERTER DATA](#) on page 6-1.

The reading parameters P0680 and P0690 are detailed in the [Section 7.3 INVERTER CONTROL AND STATUS WORD](#) on page 7-12.

17 COMMUNICATION

In order to exchange information via communication network, the MW500 features several standardized communication protocols, such as Modbus, CANopen and DeviceNet.

For further details referring to the inverter configuration to operate in those protocols, refer to the MW500 user's manual for communication with the desired network. Below are listed the parameters related to the communication.

17.1 SERIAL USB, RS-232 AND RS485 INTERFACE

Depending on the plug-in module installed, the MW500 features up to two simultaneous serial interfaces; however, only one of them can be source for commands or references; the other is mandatorily inactive or remote HMI according to the selection of P0312.

One of those interfaces, identified as Serial (1), is the MW500 standard interface and is present in all the plug-in modules through the terminals of the RS485 standard port. On the other hand, Serial (2) interface is only present in the CFW500-CUSB, CFW500-CRS232 and CFW500-CRS485 plug-in modules, as per the figures below:

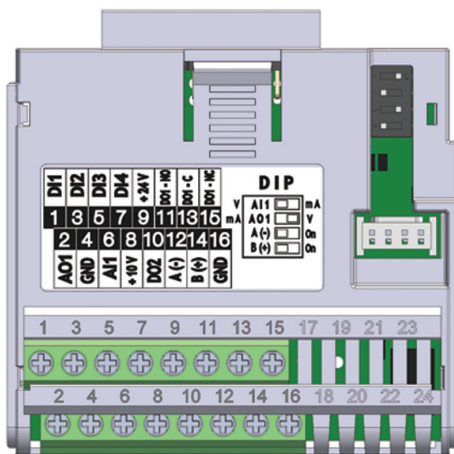


Figure 17.1: Plug-in module CFW500-IOS

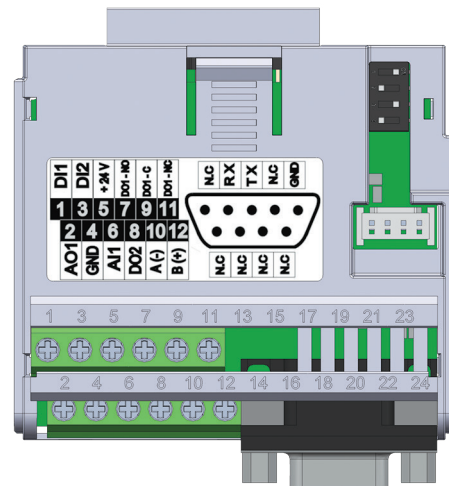


Figure 17.2: Plug-in module CFW500-CRS232

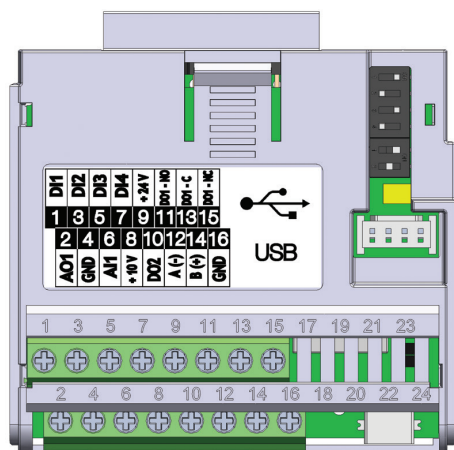


Figure 17.3: Plug-in module CFW500-CUSB

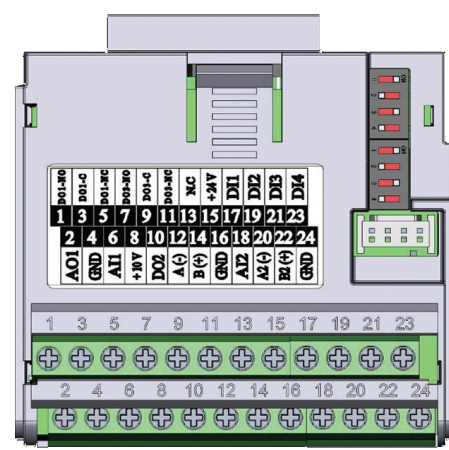


Figure 17.4: Plug-in module CFW500-CRS485



NOTE!

The CFW500-IOS plug-in module has only Serial (1) interface through RS485 port at terminals 12(A-) and 14(B+), see [Figure 17.1](#) on page 17-1.



NOTE!

The CFW500-CRS232 plug-in module has Serial (1) interface through RS485 port at terminals 10(A-) and 12(B+), as well as the Serial (2) interface through RS-232 port at standard connector DB9, see [Figure 17.2 on page 17-1](#).



NOTE!

The CFW500-CUSB plug-in module has Serial (1) interface through RS485 port at terminals 12(A-) and 14(B+), as well as the Serial (2) interface through USB port at standard connector mini USB (mini B), see [Figure 17.3 on page 17-1](#).



NOTE!

The CFW500-CRS485 plug-in module has Serial (1) interface through RS485 port at terminals 12(A-) and 14(B+), as well as the Serial (2) interface through another RS485 port at terminals 20(A2+) and 22(B2+), see [Figure 17.4 on page 17-1](#).

Parameters P0308 to P0316 together with P0682 and P0683 characterize the serial interface which is active for commands and/or reference.

P0308 – Serial Address

Adjustable Range:	1 to 247	Factory Setting:	1
--------------------------	----------	-------------------------	---

P0310 – Serial Baud Rate

Adjustable Range:	0 = 9600 bits/s 1 = 19200 bits/s 2 = 38400 bits/s	Factory Setting:	1
--------------------------	---	-------------------------	---

P0311 – Serial Interface Byte Configuration

Adjustable Range:	0 = 8 bits, no, 1 1 = 8 bits, even, 1 2 = 8 bits, odd, 1 3 = 8 bits, no, 2 4 = 8 bits, even, 2 5 = 8 bits, odd, 2	Factory Setting:	1
--------------------------	--	-------------------------	---

Properties:

Access Groups via HMI:

Description:

For a detailed description, refer to the Modbus RTU user’s manual, available for download on the website: www.weg.net.

P0312 – Serial Interface Protocol (1)(2)

Adjustable Range:	0 = HMI (1) 1 = Reserved 2 = Modbus RTU (1) 3 and 4 = Reserved 5 = Master RTU (1) 6 = HMI (1) + Modbus RTU (2) 7 = Modbus RTU (2) 8 to 11 = Reserved 12 = HMI (1)/RTU Master (2) 13 = RTU Master (2)	Factory Setting: 2
--------------------------	---	---------------------------

Properties:

Access Groups via HMI:

Description:

P0312 defines the type of protocol for (1) and (2) Serial interfaces of the frequency inverter; see also [Chapter 17 COMMUNICATION on page 17-1](#). Depending on the plug-in module installed, the MW500 can feature up to two serial interfaces, but only one of them is available for commands and references. The other interface remains inactive or as interface for MW500-HMIR, in which the protocol is pre-defined without parameterization and of internal use exclusive of the inverter remote HMI.

P0313 – Action for Communication Error
P0314 – Serial Watchdog
P0316 – Serial Interface Status
P0682 – Control Word via Serial/USB
P0683 – Speed Reference via Serial/USB
Description:

These parameters can be used for configuration and operation of the RS-232 and RS485 serial interfaces. For a detailed description, refer to the Modbus RTU user’s manual, available for download on the website: www.weg.net.

17.2 CAN – CANOPEN/DEVICENET INTERFACE
P0684 – Control Word via CANopen/DeviceNet
P0685 – Speed Reference via CANopen/DeviceNet
P0700 – CAN Protocol
P0701 – CAN Address
P0702 – CAN Baud Rate
P0703 – Bus Off Reset
P0705 – CAN Controller Status

P0706 – Counter of Received CAN Telegrams

P0707 – Counter of Transmitted CAN Telegrams

P0708 – Counter of Bus Off Errors

P0709 – Counter of Lost CAN Messages

P0710 – DeviceNet I/O Instances

P0711 – DeviceNet Reading #3

P0712 – DeviceNet Reading #4

P0713 – DeviceNet Reading #5

P0714 – DeviceNet Reading #6

P0715 – DeviceNet Writing #3

P0716 – DeviceNet Writing #4

P0717 – DeviceNet Writing #5

P0718 – DeviceNet Writing #6

P0719 – DeviceNet Network Status

P0720 – DeviceNet Master Status

P0721 – CANopen Communication Status

P0722 – CANopen Node Status

Description:

These parameters can be used for configuration and operation of the CAN interface. For detailed description, refer to the CANopen communication manual or DeviceNet communication manual available for download on the website: www.weg.net.

17.3 PROFIBUS DP INTERFACE

P0740 – Profibus Com. Status

P0741 - Profibus Data Profile

P0742 - Profibus Reading #3

P0743 - Profibus Reading #4

P0744 - Profibus Reading #5

P0745 - Profibus Reading #6

P0746 - Profibus Reading #7

P0747 - Profibus Reading #8

P0750 - Profibus Writing #3

P0751 - Profibus Writing #4

P0752 - Profibus Writing #5

P0753 - Profibus Writing #6

P0754 - Profibus Writing #7

P0755 - Profibus Writing #8

P0918 - Profibus Address

P0922 - Profibus Teleg. Sel.

P0963 - Profibus Baud Rate

P0967 - Control Word 1

P0968 - Status Word 1

Description:

These parameters can be used for configuration and operation of the Profibus DP interface. For detailed description, refer to the Profibus communication manual available for download on the website: www.weg.net.

17.4 ETHERNET INTERFACE

P0800 - Eth: Module Identification

P0801 - Eth: Communication Status

P0803 - Eth: Baud Rate

P0806 - Eth: Modbus TCP Timeout

P0810 - Eth: IP Address Config

P0811 - Eth: IP Address 1

P0812 - Eth: IP Address 2

P0813 - Eth: IP Address 3

P0814 - Eth: IP Address 4

P0815 – Eth: CIDR Sub-net

P0816 – Eth: Gateway 1

P0817 – Eth: Gateway 2

P0818 – Eth: Gateway 3

P0819 – Eth: Gateway 4

P0820 – Eth: Read Word #3

P0821 – Eth: Read Word #4

P0822 – Eth: Read Word #5

P0823 – Eth: Read Word #6

P0824 – Eth: Read Word #7

P0825 – Eth: Read Word #8

P0826 – Eth: Read Word #9

P0827 – Eth: Read Word #10

P0828 – Eth: Read Word #11

P0829 – Eth: Read Word #12

P0830 – Eth: Read Word #13

P0831 – Eth: Read Word #14

P0835 – Eth: Write Word #3

P0836 – Eth: Write Word #4

P0837 – Eth: Write Word #5

P0838 – Eth: Write Word #6

P0839 – Eth: Write Word #7

P0840 – Eth: Write Word #8

P0841 – Eth: Write Word #9

P0842 – Eth: Write Word #10

P0843 – Eth: Write Word #11

P0844 – Eth: Write Word #12

P0845 – Eth: Write Word #13

P0846 – Eth: Write Word #14

P0849 – Eth: Configuration Update

Description:

Parameters for configuration and operation of the EtherNet interface. For detailed description, refer to the Ethernet communication manual, user's manual, available in www.weg.net

17.5 COMMANDS AND COMMUNICATION STATUS

P0721 – CANopen Communication Status

P0722 – CANopen Node Status

P0681 – Speed at 13 bits

P0695 – Value for Digital Outputs

P0696 – Value 1 for Analog Outputs

P0697 – Value 2 for Analog Outputs

P0698 – Value 3 for Analog Outputs

Description:

These parameters can be used for monitoring and controlling the MW500 inverter by using the communication interfaces. For detailed description, refer to the communication manual (User) according to the interface used. These manuals are they available for download on the website: www.weg.net.

18 SOFTPLC

The SoftPLC function allows the inverter to assume PLC (Programmable Logical Controller). For further details regarding the programming of those functions in the MW500, refer to the CFW500 SoftPLC manual. Below are described the parameters related to the SoftPLC.

P1000 – SoftPLC Status

Adjustable Range:	0 = No Applicative 1 = Installing Applicative 2 = Applicative Incompatible 3 = Applicative Stopped 4 = Applicative Running	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="SPLC"/>	

Description:

This parameter allows the user to view the status in which the SoftPLC is. If there are no applications installed, the parameters P1001 to P1059 will not be shown on the HMI.

If this parameter presents option 2 = App. Incomp., it indicates the user's program loaded on the SoftPLC is not compatible with the MW500 firmware version.

In this case, it is necessary that the user recompile the project on the WLP, considering the new MW500 version and redo the download. If that is not possible, the upload of this application can be done with the WLP, provided that the application password is known or is not enabled.

P1001 – Command for SoftPLC

Adjustable Range:	0 = Stop Program 1 = Run Program 2 = Delete Program	Factory Setting: 0
Properties:		
Access Groups via HMI:	<input type="text" value="SPLC"/>	

Description:

This parameter allows stopping, running or excluding an application installed, but to do so, the motor must be disabled.

P1002 – Scan Cycle Time

Adjustable Range:	0.0 to 65535 ms	Factory Setting:
Properties:	ro	
Access Groups via HMI:	<input type="text" value="SPLC"/>	

Description:

This parameter sets the application scanning time. The larger the application, the longer is the scanning time.

P1004 - Area for SoftPLC Application Not Running

Adjustable Range:	0 = Inactive 1 = Generate alarm 2 = Generate fault	Factory Setting:	0
Properties:	cfg		
Access Groups via HMI:	<input type="text" value="SPLC"/>		

Description:

It defines which action will be taken by the product in case the SoftPLC not running condition is detected, and it may generate alarm A0708 (1), fault F0709 (2) or neither of the previous actions, remaining inactive (0).

P1010 to P1059 – SoftPLC Parameters

Adjustable Range:	-32768 to 32767	Factory Setting:	0
Properties:			
Access Groups via HMI:	<input type="text" value="SPLC"/>		

Description:

These are parameters whose use is defined by the SoftPLC function.



NOTE!

Parameters P1010 to P1019 can be viewed in the monitoring mode (refer to [Section 5.5 SETTING OF DISPLAY INDICATIONS IN THE MONITORING MODE](#) on page 5-6).



NOTE!

For further information on the use of the SoftPLC function, refer to the CFW500 SoftPLC manual.