

# ACH550

## User's Manual ACH550-01 Drives



# ACH550-01 Drive manuals

## GENERAL MANUALS

---

### ACH550-01 User's Manual

[3AFE68258537](#) (English)

### HVAC Info Guide

[3AFE68338743](#) (English)

### Flange Mounting Instructions

Kit, IP21 / UL type 1	Frame size	Code (English)
--------------------------	---------------	----------------

---

FMK-A-R1	R1	<a href="#">100000982</a>
----------	----	---------------------------

FMK-A-R2	R2	<a href="#">100000984</a>
----------	----	---------------------------

FMK-A-R3	R3	<a href="#">100000986</a>
----------	----	---------------------------

FMK-A-R4	R4	<a href="#">100000988</a>
----------	----	---------------------------

Kit, IP54 / UL type 12	Frame size	Code (English)
---------------------------	---------------	----------------

---

FMK-B-R1	R1	<a href="#">100000990</a>
----------	----	---------------------------

FMK-B-R2	R2	<a href="#">100000992</a>
----------	----	---------------------------

FMK-B-R3	R3	<a href="#">100000994</a>
----------	----	---------------------------

FMK-B-R4	R4	<a href="#">100000996</a>
----------	----	---------------------------

## OPTION MANUALS

---

(delivered with optional equipment)

### BACnet® Protocol

[3AUA0000004591](#) (English)

### Embedded Fieldbus (EFB) Control

[3AFE68320658](#) (English)

### MFDT-01 FlashDrop User's Manual

[3AFE68591074](#) (English)

### OREL-01 Relay Output Extension Module User's Manual

[3AUA0000001935](#) (English)

### RBIP-01 BACnet/IP Router Module Installation Manual

[3AUA00000040168](#) (English)

### RBIP-01 BACnet/IP Router Module User's Manual

[3AUA00000040159](#) (English)

### RCAN-01 CANopen Adapter User's Manual

[3AFE64504231](#) (English)

### RCNA-01 ControlNet Adapter User's Manual

[3AFE64506005](#) (English)

### RDNA-01 DeviceNet Adapter User's Manual

[3AFE64504223](#) (English)

### RECA-01 EtherCAT Adapter Module User's Manual

[3AUA00000043520](#) (English)

### REPL-01 Ethernet POWERLINK Adapter Module User's Manual

[3AUA00000052289](#) (English)

### REPL-02 Ethernet POWERLINK Adapter Module User's Manual

[3AUA00000090411](#) (English)

### RETA-01 Ethernet Adapter Module User's Manual

[3AFE64539736](#) (English)

### RETA-02 Ethernet Adapter Module User's Manual

[3AFE68895383](#) (English)

### RLON-01 LonWORKS® Adapter Module User's Manual

[3AFE64798693](#) (English)

### RPBA-01 PROFIBUS DP Adapter User's Manual

[3AFE64504215](#) (English)

### SREA-01 Ethernet Adapter User's Manual

[3AUA00000042896](#) (English)

## MAINTENANCE MANUALS

---

Guide for Capacitor Reforming in  
ACS50, ACS55, ACS150, ACS310,  
ACS350, ACS355, ACS550,  
ACH550 and R1-R4 OINT-/SINT-  
boards [3AFE68735190](#) (English)

[ACH550-01 manuals](#)





1. Contents of this manual

2. Preparing for installation

3. Installing the drive

4. Start-up and control panel

5. Application macros and wiring

6. Real-time clock and timed functions

7. Serial communications

8. Parameter listing and descriptions

9. Diagnostics and maintenance

10. Technical data  
Index

APOGEE® is a registered trademark of Siemens Building Technologies Inc.

BACnet® is a registered trademark of ASHRAE.

CANopen is a registered trademark of CAN in Automation e.V.

ControlNet™ is a trademark of ODVA™.

DeviceNet™ is a trademark of ODVA™.

DRIVECOM is a registered trademark of DRIVECOM User Group e.V.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

EtherNet/IP™ is a trademark of ODVA™.

ETHERNET POWERLINK is a trademark of Bernecker + Rainer Industrie-ElektronikGes.m.b.H.

LONWORKS® is a registered trademark of Echelon Corporation.

Metasys® N2 is a registered trademark of Johnson Controls Inc.

Modbus and Modbus/TCP are registered trademarks of Schneider Automation Inc.

PROFIBUS, PROFIBUS DP and PROFINET IO are registered trademarks of Profibus International.

# Table of contents

---

<b>1. Contents of this manual .....</b>	<b>7</b>
What this chapter contains .....	7
Compatibility .....	7
Intended use .....	7
Intended audience .....	7
Use of warnings and notes .....	8
Safety instructions .....	8
Drive package .....	11
Lifting the drive .....	12
<b>2. Preparing for installation .....</b>	<b>13</b>
What this chapter contains .....	13
Drive identification .....	14
Frame size .....	17
Motor identification .....	19
Motor compatibility .....	21
Suitable environment and enclosure .....	22
Suitable mounting location .....	23
Wiring and EMC considerations .....	26
Cabling instructions .....	28
Input power (mains) cables .....	28
Motor cables .....	28
Control cables .....	32
Tools required .....	35
Checklist for installation preparations .....	36
<b>3. Installing the drive .....</b>	<b>37</b>
What this chapter contains .....	37
Preparing the mounting location .....	38
Removing front cover (IP54) .....	39
Removing front cover (IP21) .....	40
Mounting the drive (IP54) .....	41
Mounting the drive (IP21) .....	42

Overview of wiring installation (R1...R4) .....	43
Overview of wiring installation (R5...R6) .....	44
Checking the insulation of the assembly.....	46
Power wiring (IP54).....	47
Power wiring (R1...R3 IP54, units with main switch option +F278).....	50
Control wiring (IP54) .....	55
Power wiring (IP21).....	56
Control wiring (IP21) .....	59
Check installation.....	61
Re-install cover (IP54) .....	63
Re-install cover (IP21) .....	64
Apply power .....	65
<b>4. Start-up and control panel.....</b>	<b>67</b>
What this chapter contains.....	67
Control panel compatibility .....	67
HVAC control panel (ACH-CP-B) features.....	67
Start-up .....	68
Modes .....	71
Output (Standard display) mode .....	72
Parameters mode .....	74
Assistants mode.....	76
Changed parameters mode .....	80
Drive parameter backup mode.....	81
Time and date mode .....	88
I/O settings mode .....	91
Fault logger mode .....	92
<b>5. Application macros and wiring .....</b>	<b>93</b>
What this chapter contains.....	93
Applications.....	93
Selecting an application macro .....	94
Restoring defaults .....	95
1. HVAC default .....	96
2. Supply fan .....	98
3. Return fan .....	100
4. Cooling tower fan .....	102

5. Condenser .....	104
6. Booster pump .....	106
7. Pump alternation.....	108
8. Internal timer .....	110
9. Internal timer with constant speeds / Powered roof ventilator.....	112
10. Floating point .....	114
11. Dual setpoint PID .....	116
12. Dual setpoint PID with constant speeds .....	118
13. E-bypass (USA only) .....	120
14. Hand control .....	122
Connection examples of two-wire and three-wire sensors.....	124
Connection for obtaining 0...10 V from analogue outputs .....	125
<b>6. Real-time clock and timed functions .....</b>	<b>127</b>
What this chapter contains .....	127
Real-time clock and timed functions .....	127
Using the timer.....	128
Example of timer use .....	135
<b>7. Serial communications .....</b>	<b>139</b>
What this chapter contains .....	139
System overview.....	140
Embedded fieldbus (EFB).....	142
Fieldbus adapter (EXT FBA).....	147
Drive control parameters .....	153
Fault handling .....	162
<b>8. Parameter listing and descriptions .....</b>	<b>165</b>
What this chapter contains .....	165
Parameter groups .....	165
Complete parameter list.....	328
<b>9. Diagnostics and maintenance.....</b>	<b>369</b>
What this chapter contains .....	369

Diagnostics displays .....	370
Correcting faults .....	371
Fault resetting .....	380
History .....	381
Correcting alarms.....	381
Maintenance intervals .....	386
Heatsink .....	387
Main fan replacement .....	387
Internal enclosure fan replacement.....	391
Capacitors .....	392
Control panel.....	393
<b>10. Technical data.....</b>	<b>395</b>
What this chapter contains.....	395
Ratings.....	395
Input power (mains) cable, fuses and circuit breakers... 401	
Input power and motor connection terminals .....	408
Input power (mains) connection .....	409
Motor connection .....	410
Control connections .....	414
Efficiency.....	418
Losses, cooling data and noise.....	418
Dimensions and weights .....	420
Ambient conditions.....	440
Materials .....	441
Applicable standards.....	442
Markings .....	442
IEC/EN 61800-3:2004 Definitions .....	444
Compliance with the IEC/EN 61800-3:2004 +A1:2012.. 445	
<b>Index.....</b>	<b>447</b>
<b>Further information .....</b>	<b>471</b>
Product and service inquiries .....	471
Product training.....	471
Providing feedback on ABB Drives manuals .....	471



Document library on the Internet ..... 471



# Contents of this manual

---

## What this chapter contains

This chapter contains the safety instructions which you must follow when installing, operating and servicing the drive. If ignored, physical injury or death may follow, or damage may occur to the drive, the motor or driven equipment. Read the safety instructions before you work on the unit.

This chapter also contains an introduction to the contents of this manual.

## Compatibility

This manual covers ACH550-01 drives. For ACH550-UH drive data and instructions, please refer to *ACH550-UH HVAC Drives User's Manual* (3AUA0000004092 [English]).

The manual is compatible with the ACH550-01 drive firmware version 3.14e or later. See parameter 3301 FIRMWARE on page [256](#).

## Intended use

The ACH550 and the instructions in this manual are intended for use in HVAC applications. The macros should only be applied to the applications defined in the respective section.

## Intended audience

This manual is intended for personnel who install, commission, operate and service the drive. Read the manual before working on the drive. The reader is expected to know the fundamentals of electricity, wiring, electrical components and electrical schematic symbols.

## Use of warnings and notes

There are two types of safety instructions throughout this manual:

- Warnings caution you about conditions which can result in serious injury or death and/or damage to the equipment. They also tell you how to avoid the danger.
- Notes draw attention to a particular condition or fact, or give information on a subject.

The warning symbols are used as follows:



**Electricity warning** warns of hazards from electricity which can cause physical injury and/or damage to the equipment.



**General warning** warns about conditions, other than those caused by electricity, which can result in physical injury and/or damage to the equipment.

## Safety instructions

### General safety

---



**WARNING!** Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

---

- Use safety shoes to avoid foot injury.
- Handle the drive carefully.
- Beware of hot surfaces. Some parts, such as heatsinks, remain hot for a while after disconnection of the electrical supply. See chapter [Technical data](#).
- Keep the drive in its package or protect it otherwise from dust and burr from drilling and grinding until you install it. Protect also the installed drive against dust and burr. Electrically conductive debris inside the drive can cause damage or malfunction.

### Electrical safety

---



**WARNING!** The ACH550 should ONLY be installed by a qualified technician.

---



**WARNING!** Even when the motor is stopped, dangerous voltage is present at the power circuit terminals U1, V1, W1 and U2, V2, W2, and, depending on the frame size, UDC+/BRK+ and UDC-/BRK-.

---

---



**WARNING!** Dangerous voltage is present when input power is connected. After disconnecting the supply, wait at least 5 minutes before removing the cover. To check, measure for zero voltage at the DC terminals, which are, depending on the frame size, UDC+/BRK+ and UDC-/BRK-.

---

---



**WARNING!** Even when the power is switched off from the input terminals of the ACH550, there may be dangerous voltage (from external sources) on the terminals of the relay outputs RO1...RO3 and, if the relay extension board is included in the installation, RO4...RO6.

---

---



**WARNING!** When the control terminals of two or more drive units are connected in parallel, the auxiliary voltage for these control connections must be taken from a single source which can either be one of the units or an external supply.

---

---



**WARNING!** If you install the drive on an IT system (an ungrounded power system or a high-resistance-grounded [over 30 ohms] power system) or a power system equipped with residual current circuit breakers), disconnect the internal EMC filter, otherwise the system will be connected to ground potential through the EMC filter capacitors. This can cause danger or damage the drive.

If you install the drive on a corner-grounded TN system, disconnect the internal EMC filter, otherwise the system will be connected to ground potential through the EMC filter capacitors. This will damage the drive.

**Note:** Disconnecting the internal EMC filter increases the conducted emission and reduces the drive EMC compatibility considerably.

For disconnecting the EMC filter, see [Disconnecting the internal EMC filter](#) on page 45.

---

## Maintenance

---



**WARNING!** The ACH550 is not a field repairable unit. Never attempt to repair a malfunctioning unit; contact your local ABB representative for replacement.

---

## Control of the drive and motor




---



**WARNING!** The ACH550 will start up automatically after an input voltage interruption if the external run command is on.

---



**WARNING!** Do not control the motor with an AC contactor or disconnecting device (disconnecting means); use instead the control panel (operator keypad) start (HAND ) , AUTO ) and stop (OFF ) keys or external commands (I/O or fieldbus). The maximum allowed number of charging cycles of the DC capacitors (i.e. power-ups by applying power) is five in ten minutes.

---

**Note:** For more technical information, contact your local ABB representative.

---

## Drive package

After opening the package, check that the following items are included:

- ACH550 drive (1)
  - type IP21: box containing clamps and connection box (2), type IP54: top cover
  - box containing control panel (operator keypad) ACH-CP-B and panel connector (3)
  - cardboard mounting template (4)
  - user's manual (5)
  - warning stickers
  - polyamide screws (in the R1, R2 and R3 packages) (6).
- The figure below shows the contents of the drive package.



## **Lifting the drive**

The figure below shows how to lift the drive.

---

**Note:** Lift the drive only from the metal chassis.

---





# Preparing for installation

---

## What this chapter contains

This chapter contains instructions for preparing for the installation of the drive. It contains the drive identification, wiring and EMC guidelines and a list of tools necessary for the installation.

---










**Note:** The installation must always be designed and made according to applicable local laws and regulations. ABB does not assume any liability whatsoever for any installation which breaches the local laws and/or other regulations. Furthermore, if the recommendations given by ABB are not followed, the drive may experience problems that the warranty does not cover.

---

## Drive identification

### IP54 drive labels

The location and the contents of example labels for the IP54 degree of protection are shown in the figure below. The labels contain information on the [Type designation](#) (page 16), [Serial number](#) (page 16), degree of protection, ratings (see also [Ratings](#) on page 395) and valid markings (see also [Markings](#) on page 442).


ACH550-01-023A-4+B055	<b>ACH550-01-023A-4+B055</b>	
 *1090903718*	U1 3~ 380...480 V I2N 23 A PN 11 kW	 Serno *1090903718*
Input U1 3~ 380...480 V I1 23 A f1 48...63 Hz Output U2 3~ 0...U1 V I2N 23 A f2 0...500 Hz Motor PN 11 kW <b>ACH550-01-023A-4+B055</b>	IP54, UL type 12, NEMA 12 LISTED 44Y1    IND. CONT. EQ.   Serno *1090903718*	 MADE IN FINLAND  <b>RoHS</b>
For more information see User's Manual		



**Note:** The location of the labels may vary between different frame sizes.

### IP21 drive labels


The location and the contents of example labels for the IP21 degree of protection are shown in the figure below. The labels contain information on the *Type designation* (page 16), *Serial number* (page 16), degree of protection, ratings (see also *Ratings* on page 395) and valid markings (see also *Markings* on page 442).

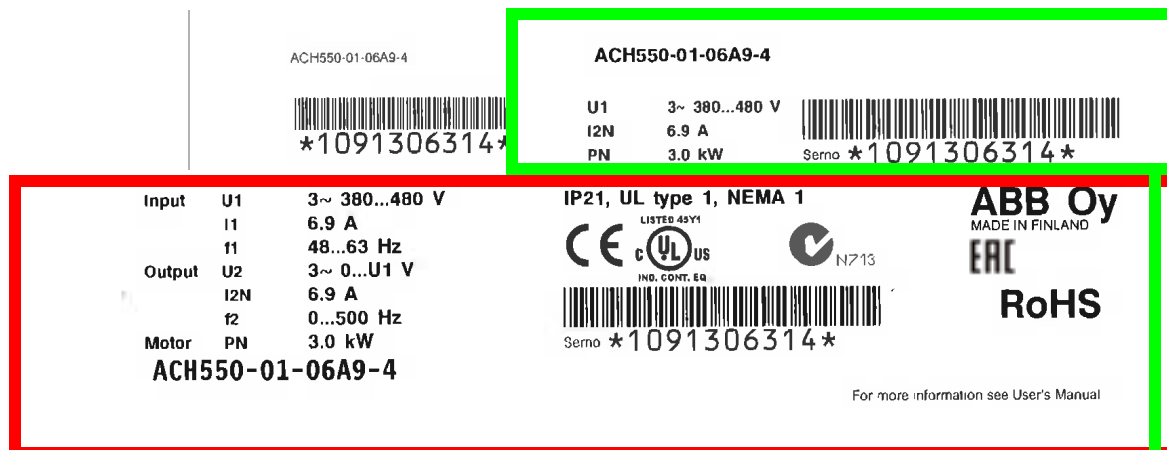

**Note:** The location of the labels may vary between different frame sizes.

## Type designation

The contents of the drive type designation shown on the labels are described below.

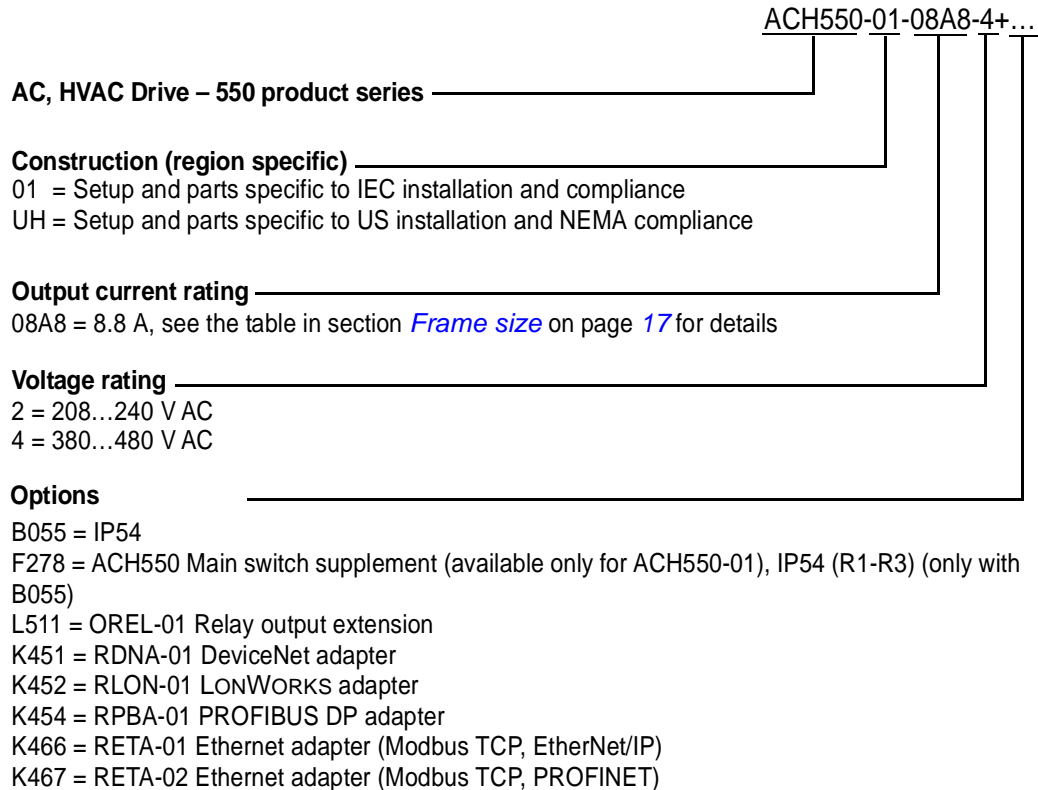

## Serial number

The format of the drive serial number shown on the labels is described below.

Serial number is of format CYYWWXXXXX, where

C: Country of manufacture

YY: Year of manufacture

WW: Week of manufacture; 01, 02, 03, ... for week 1, week 2, week 3, ...

XXXXX: Integer starting every week from 00001.

## Frame size

Type ACH550-01-	$I_{2N}$ A	$P_N$ kW	Frame size
Three-phase supply voltage, 220...240 V			
04A6-2	4.6	0.75	R1
06A6-2	6.6	1.1	R1
07A5-2	7.5	1.5	R1
012A-2	11.8	2.2	R1
017A-2	16.7	4.0	R1
024A-2	24.2	5.5	R2
031A-2	30.8	7.5	R2
046A-2	46	11	R3
059A-2	59	15	R3
075A-2	75	18.5	R4
088A-2	88	22	R4
114A-2	114	30	R4
143A-2	143	37	R6
178A-2	178	45	R6
221A-2	221	55	R6
248A-2	248	75	R6
Three-phase supply voltage, 380...480 V			
02A4-4	2.4	0.75	R1
03A3-4	3.3	1.1	R1
04A1-4	4.1	1.5	R1
05A4-4	5.4	2.2	R1
06A9-4	6.9	3.0	R1
08A8-4	8.8	4.0	R1
012A-4	11.9	5.5	R1
015A-4	15.4	7.5	R2
023A-4	23	11	R2
031A-4	31	15	R3
038A-4	38	18.5	R3
045A-4	45	22	R3

Type ACH550-01-	$I_{2N}$ A	$P_N$ kW	Frame size
059A-4	59	30	R4
072A-4	72	37	R4
087A-4	87	45	R4
125A-4	125	55	R5
157A-4	157	75	R6
180A-4	180	90	R6
195A-4	205	110	R6
246A-4	246	132	R6
290A-4	290	160	R6


 


00467918.xls C

<b>Mark the frame size of your drive in the box on the right.</b>	
---	--

**Note:** For detailed technical information, see chapter [Technical data](#).

## Motor identification


An example motor rating plate for an IEC motor is shown below.

 0081		ABB Oy, Electrical Machines LV Motors, Vaasa, Finland				
3 ~ Motor M3JP 250SMA 4 EExd IIB T4 B3						
IEC 250S/M 65						
S1			No. 3492820			
LJ-20964-1 / 2001				Ins.cl. F		IP 55
V	Hz	kW	r/min	A	cos $\varphi$	Duty
690 Y	50	55	1479	58	0.83	
400 D	50	55	1479	101	0.83	
660 Y	50	55	1475	60	0.85	
380 D	50	55	1475	104	0.85	
415 D	50	55	1480	99	0.82	
440 D	60	63	1775	103	0.85	
Prod.code 3GJP252210-ADG138148						
LCIE 00 ATEX 6030						
6315/C3		 6313/C3			450 kg	
 II 2D		A B B		IEC 60034-1		

Collect the following information:

- voltage
- nominal motor current
- nominal frequency
- nominal speed
- nominal power.

The figure below shows a motor with star and delta connections. For the highlighted row of the example motor rating plate on page 19, the connection is delta.

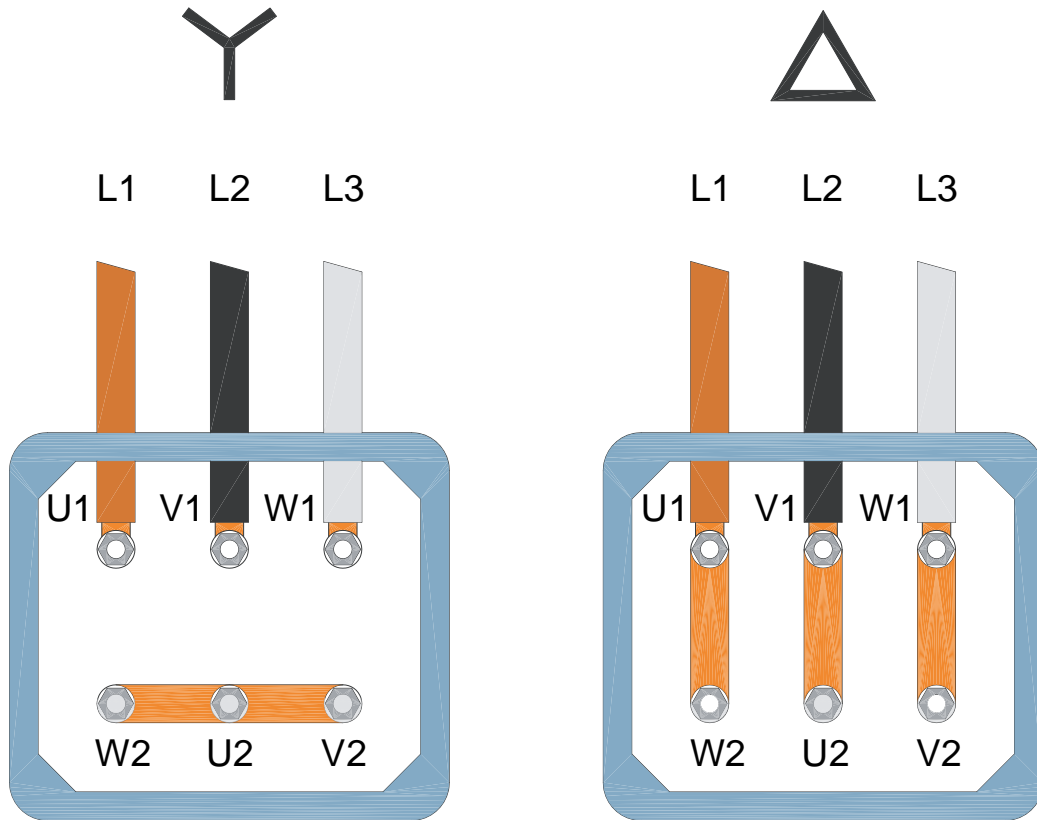

---

**Note:** Check which connection is correct for your motor type.

---



## Motor compatibility

The motor, drive and supply power must be compatible:

Motor specification	Verify	Reference
Motor type	3-phase induction motor	-
Nominal current	type dependent	<ul style="list-style-type: none"> <li>• type designation label on drive, entry for “Output <math>I_{2N}</math>” (current), or</li> <li>• type designation on drive and rating table in <a href="#">Ratings</a> in chapter <a href="#">Technical data</a>.</li> </ul>
Nominal frequency	10...500 Hz	-
Voltage range	Motor requirement and supply voltage are both 3-phase voltage and are within the ACH550 voltage range.	208...240 V 380...480 V

## Suitable environment and enclosure

Confirm that the site meets the environmental requirements. To prevent damage prior to installation, store and transport the drive according to the environmental requirements specified for storage and transportation. See section [Ambient conditions](#) on page [440](#).

Confirm that the enclosure (degree of protection) is appropriate, based on the site containment level:

- IP21 type enclosure. The site must be free from airborne dust, corrosive gases or liquids, and conductive contaminants such as dripping water, condensation, carbon dust, and metallic particles.
- IP54 type enclosure. This enclosure provides protection from airborne dust and light sprays or splashing water from all directions.

Compared to the IP21 enclosure, the IP54 enclosure has:

- the same internal plastic shell as the IP21 enclosure
- a different outer plastic cover
- an additional internal fan to improve cooling
- larger dimensions
- the same rating (does not require a derating).

If, for some reason, an IP21 drive needs to be installed without the conduit box or cover, or an IP54 drive without the conduit plate or top cover, see the note on page [444](#).

## Suitable mounting location


Confirm that the mounting location meets the following constraints:

- The drive must be mounted vertically on a smooth, non-flammable, solid surface or frame, and in a suitable environment as defined in section [Suitable environment and enclosure](#) on page 22.
- For horizontal installation, contact your local ABB representative for more information.




Mounting on a machine frame is also possible. No additional plates are needed for cooling as the drive has an integral heatsink backplate.

See section [Mounting dimensions](#) on page 421 for mounting dimensions for all frame sizes and protection types.


The figure below shows the necessary free space for the installation of the unit.

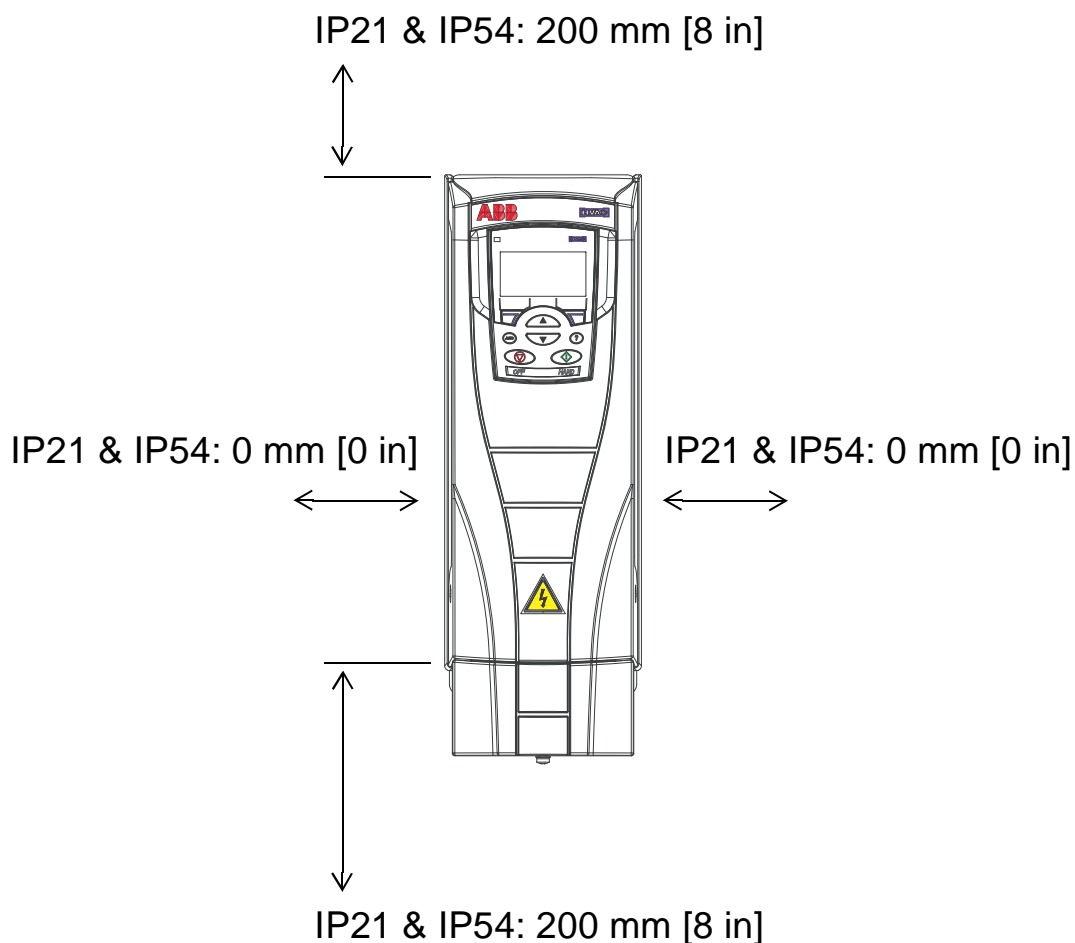

Make sure that the hot air does not re-circulate into the drive.  
The figure below show the minimum space for cooling air.

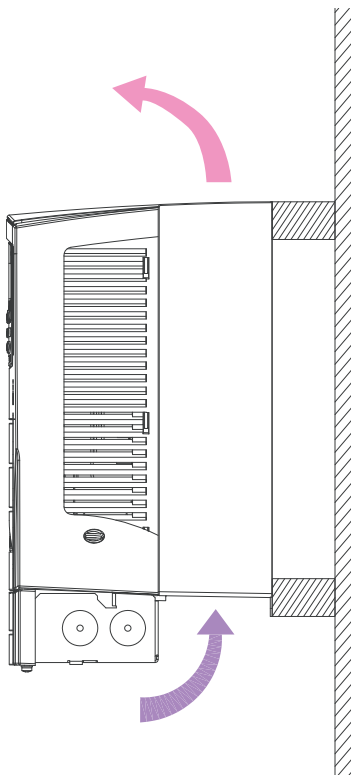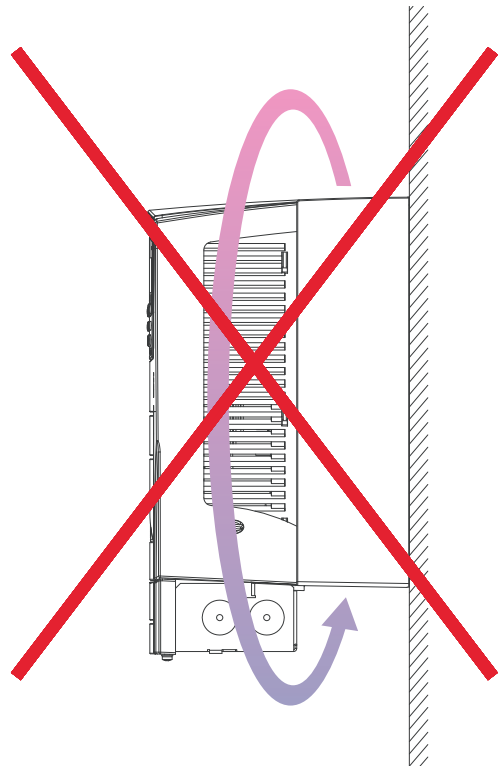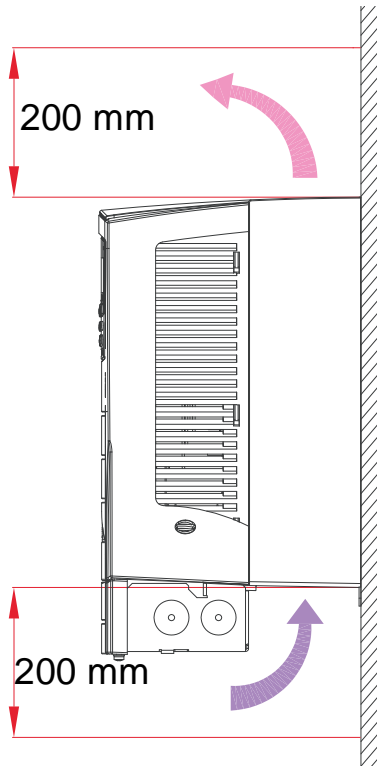

Stop the hot air from a drive from entering the cooling air intake of another drive with an adequate mechanical obstacle between the drives. The figure below shows the minimum space for cooling air.

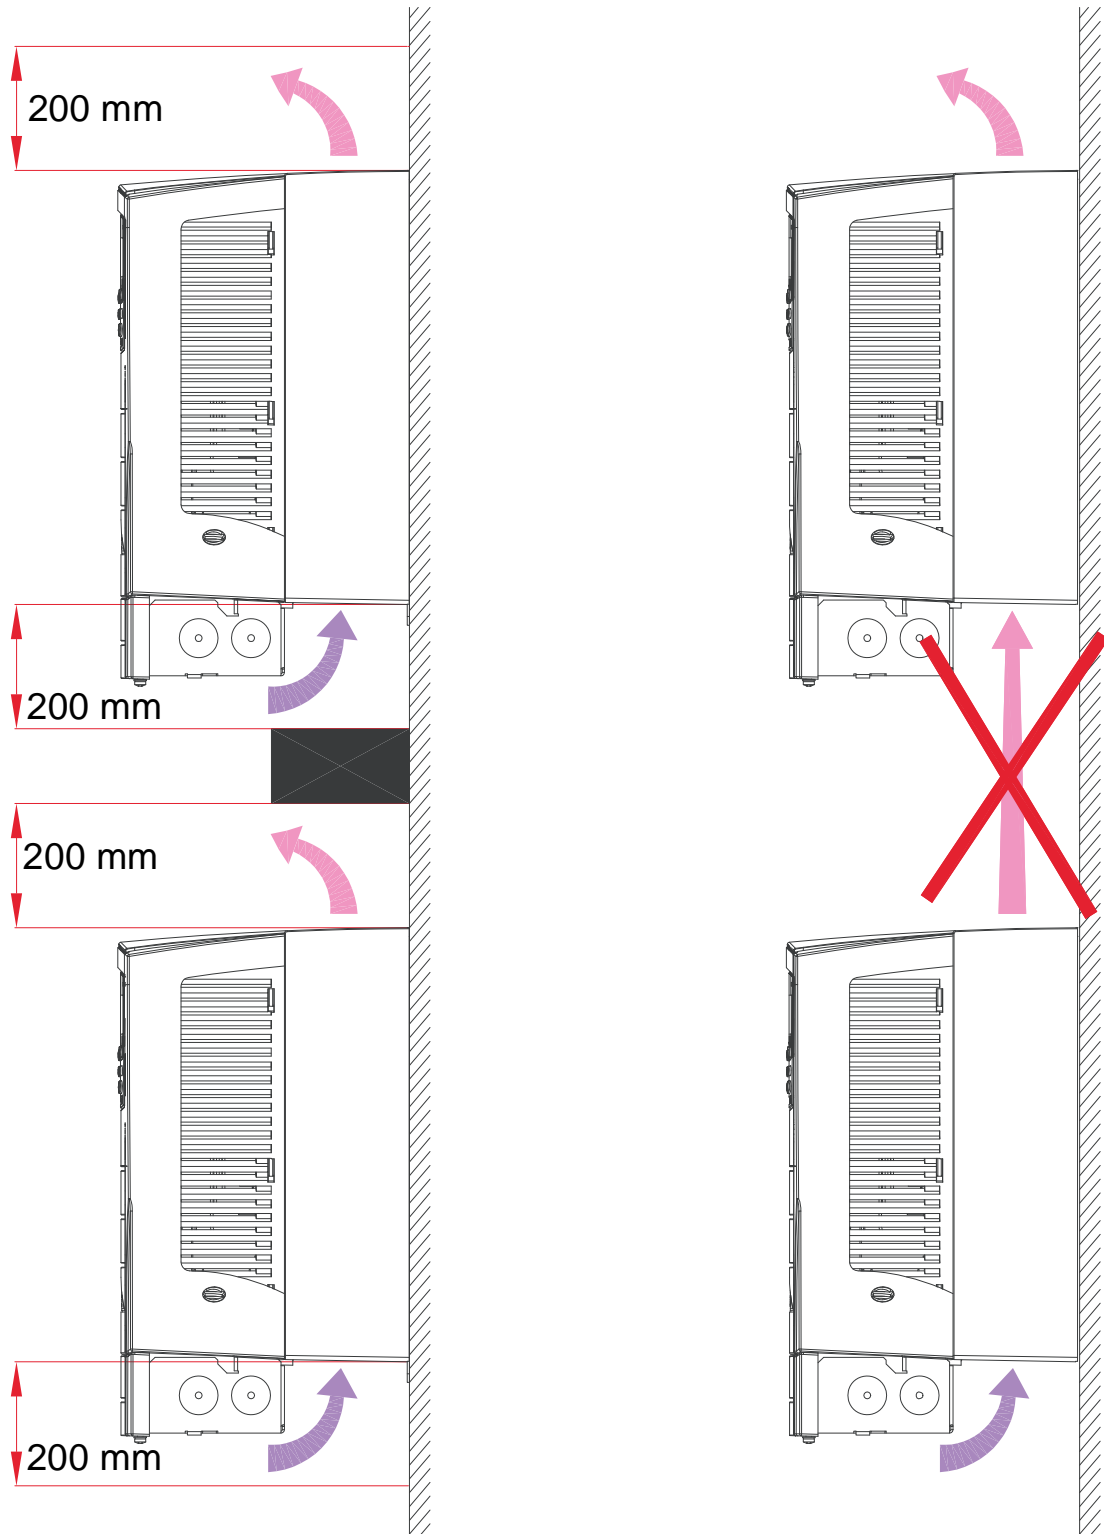

## Wiring and EMC considerations

Determine electro-magnetic compliance (EMC) requirements per local codes. In general:


- Follow local codes for cable size.
- Keep these three classes of wiring separated: input power wiring, motor wiring and control/communications wiring.
- Check the operational limits for the allowed maximum motor cable length in section [Motor connection](#) on page 410.
- If the installation must meet the European EMC Directive requirements (see section [Compliance with the IEC/EN 61800-3:2004 +A1:2012](#) on page 445), check also the EMC limits for the allowed maximum motor cable length in section [Motor connection](#) on page 410.

---

**Note:** Non-proper wiring is the source of the majority of EMC problems. Please follow the instructions to avoid these problems.

---

The figure below shows an example of correct wiring.

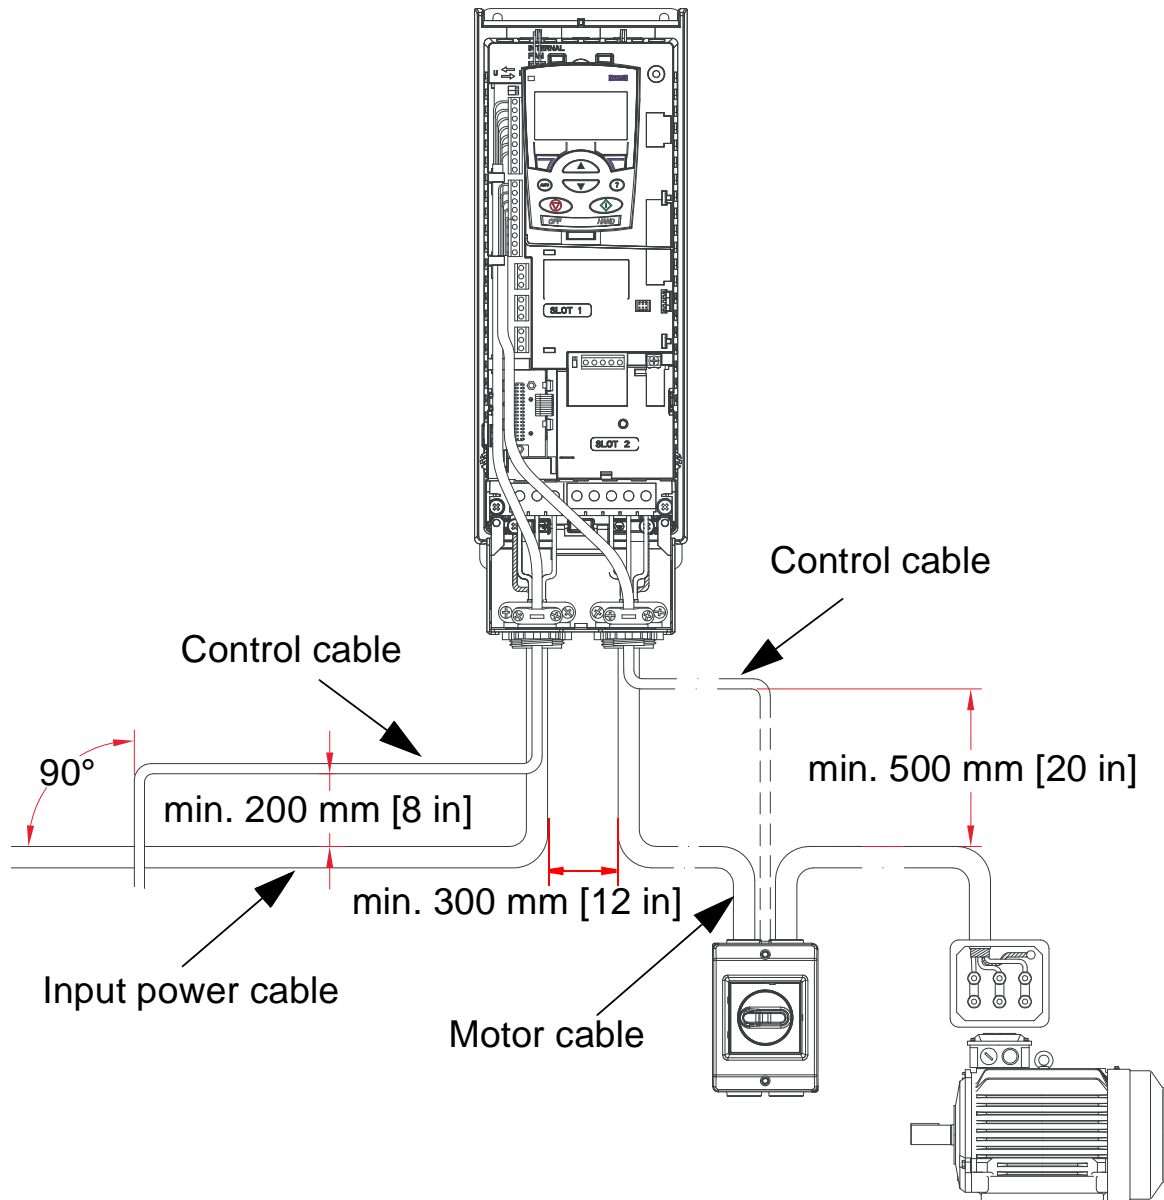


---

**Note:** If an motor safety switch or contactor is used, supply either 2102 STOP FUNCTION [value must be 1 (COAST)] or 1608 START ENABLE 1 from an auxiliary contact of the isolator to the ACH550.

---



---

**Note:** Wiring is discussed in more detail in chapter [Installing the drive](#).

---

## Cabling instructions

Keep individual unshielded wires between the cable clamps and the screw terminals as short as possible. Route control cables away from power cables.

### Input power (mains) cables

See sections [Input power \(mains\) cable, fuses and circuit breakers](#) on page 401 and [Input power \(mains\) cable](#) on page 406.


### Motor cables

See section [Motor connection](#) on page 410 for the maximum motor cable lengths meeting the IEC/EN 61800-3 requirements for category C2 or C3, as applicable.


The figure below shows the minimum requirements for the motor cable shield.



Galvanised steel or tinned copper wire with braided shield.

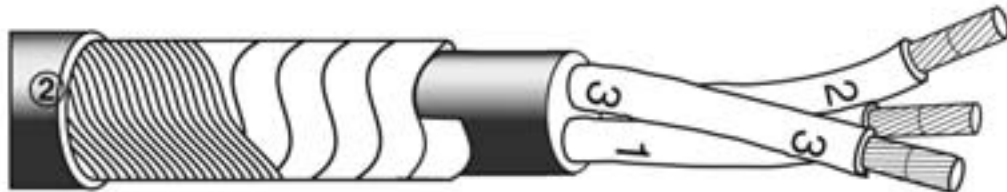

Layer of copper tape with concentric layer of copper wire.

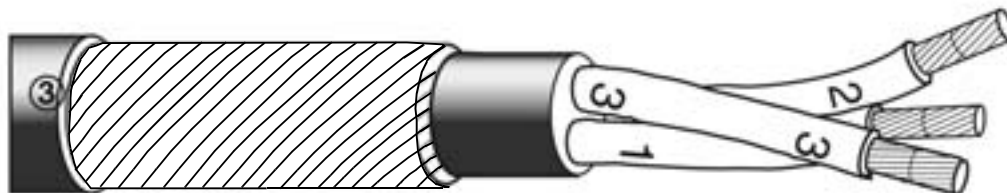

Concentric layer of copper wire.




The figure below shows non-recommended motor cable types.




Figures courtesy of Draka NK Cables. Copyright © 2003 Draka NK Cables.

The figure below shows the recommended conductor layout.

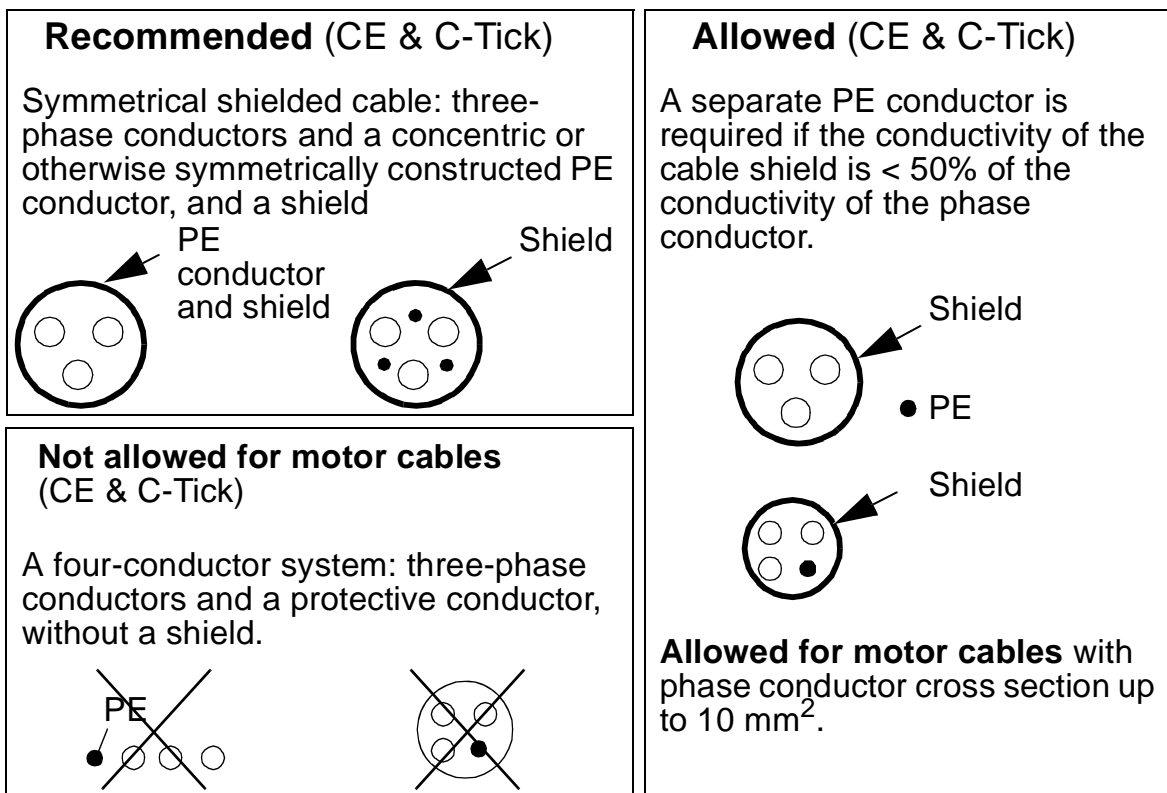


## Effective motor cable shields

The general rule for cable shield effectiveness is: the better and tighter the shield, the lower the radiated emission level. The figure below shows an example of an effective construction (for example Ölflex-Servo-FD 780 CP, Lapp Kabel or MCCMK, Draka NK Cables).

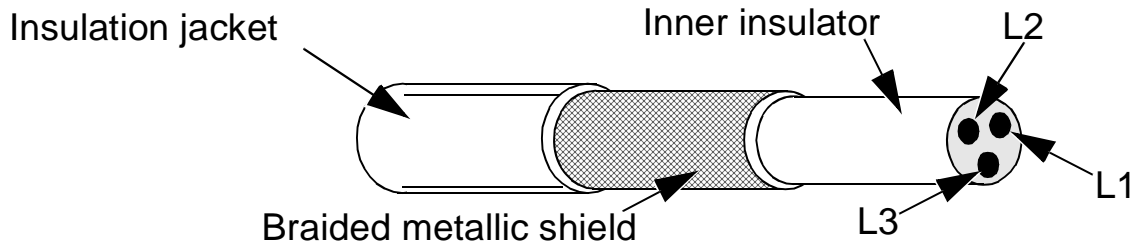

Clamp the cable shield into the gland plate at the drive end, twist the cable shield wires together into a bundle (pigtail) not longer than five times its width and connect it to the terminal marked  $\perp$  (at the bottom right-hand corner of the drive) if you are using a cable without a separate PE conductor.

The figure below shows the grounding principles of cables.

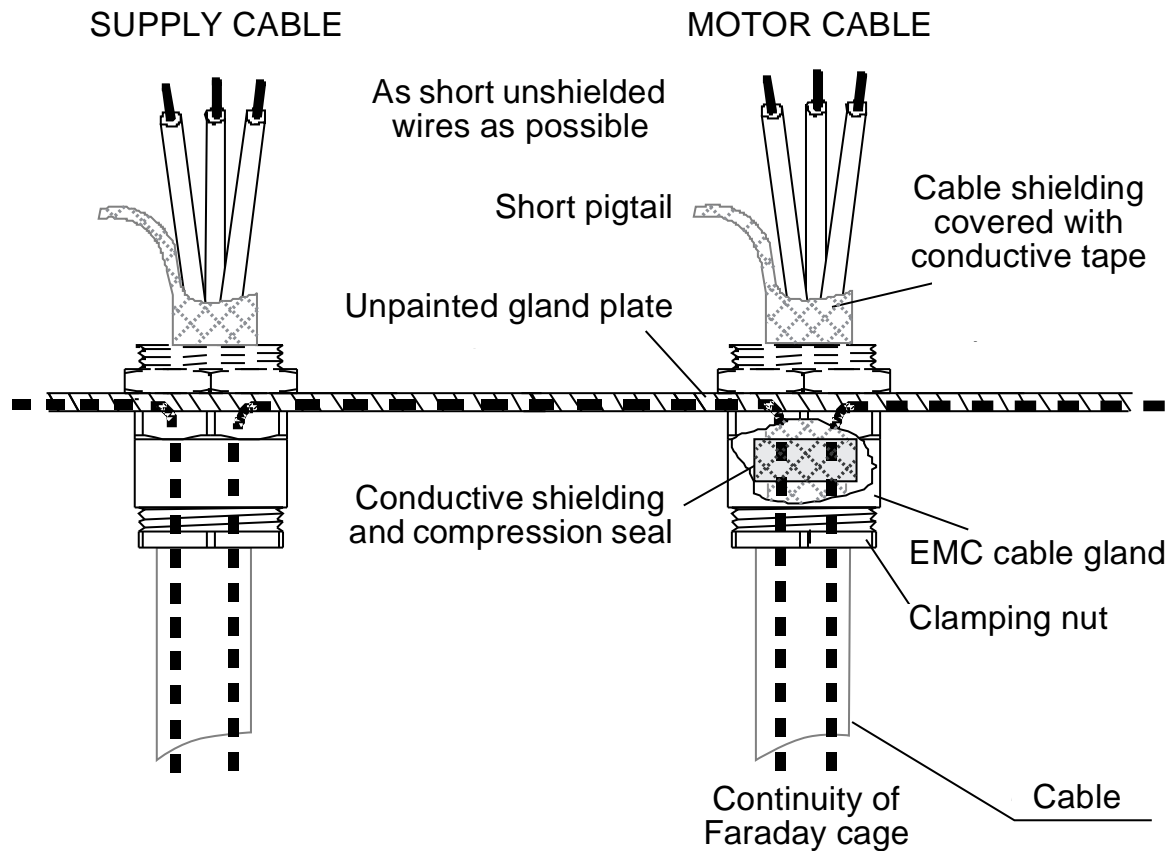

At the motor end, the motor cable shield must be grounded 360 degrees with an EMC cable gland, or the shield wires must be twisted together into a bundle (pigtail) not longer than five times its width and connected to the PE terminal of the motor. The same principle applies to cabinet installations.

## Control cables

### General recommendation

Use shielded cables, temperature rated at 60 °C (140 °F) or above.

The figure below shows examples of recommended cables.



Jamak by Draka NK Cables



Nomak by Draka NK Cables


*Figures courtesy of Draka NK Cables. Copyright © 2003 Draka NK Cables.*

- Control cables must be shielded and of twisted pair type.
- The shield must be twisted together into a bundle (pigtail) not longer than five times its width and connected to terminal X1:1 (for digital and analogue I/O cables). For connecting the shield wires of the RS485 cable, see the instructions (and note 3) on page [142](#).

Route control cables to minimise radiation to the cable:

- Route as far away as possible from the input power and motor cables (at least 20 cm [8 in]).
- Where control cables must cross power cables make sure they are at an angle as near to 90° as possible to minimise interference.
- Keep at least 20 cm (8 in) away from the sides of the drive.
- Run relay-controlled signals as twisted pairs (especially if voltage > 30 V). Relay-controlled signals using less than 30 V can be run in the same cables as digital input signals.

The figure below shows an example of control cable routing.

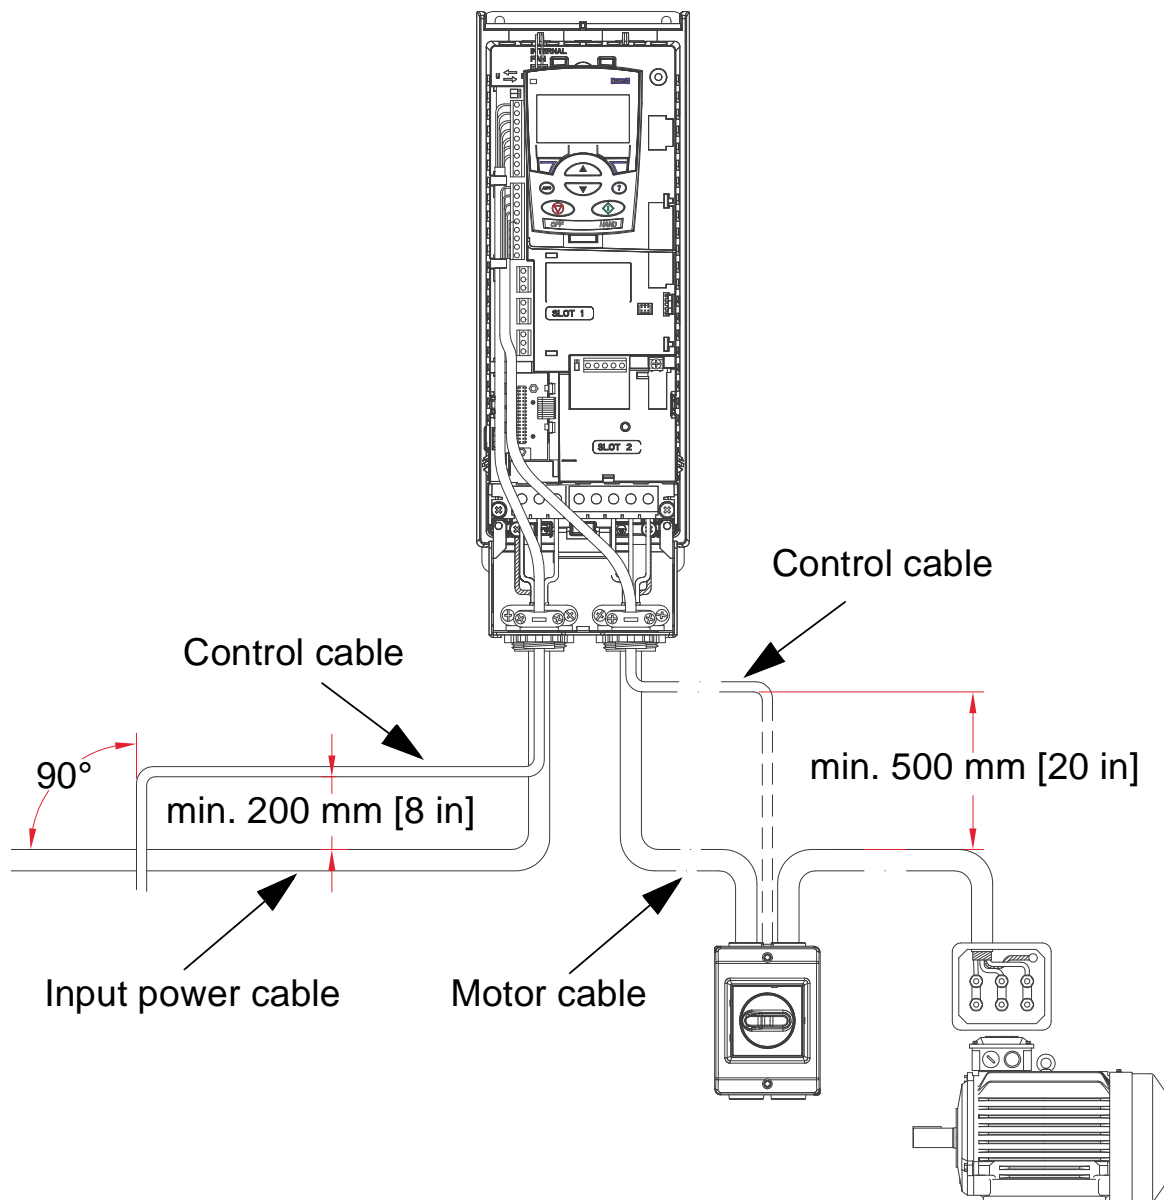

---

**Note:** Do not mix relay-controlled signals using more than 30 V and other control signals in the same cable.

---

---

**Note:** Never mix 24 V DC and 115/230 V AC signals in the same cable.

---

## **Analogue cables**

Recommendations for analogue signal runs:

- Use double-shielded, twisted-pair cable.
- Use one individually shielded pair for each signal.
- Earth at one end only.

## **Digital cables**

Recommendations for digital signal runs:

- A double-shielded cable is the best alternative, but a single-shielded twisted multipair cable is also usable.

## **Control panel (operator keypad) cable**

If the control panel is connected to the drive with a cable, use only twisted-pair, ethernet cable. For example Standard CAT5 UTP Ethernet Patch Cable, wiring 568-B. Maximum length is 3 meters.

## Tools required

To install the ACH550 you need the following:

- screwdrivers (as appropriate for the mounting hardware used)
- wire stripper
- tape measure
- drill
- mounting hardware: screws or nuts and bolts, four each. The type of hardware depends on the mounting surface and the frame size as follows:

Frame size	Frame weight kg IP21/IP54	Frame weight lb IP21/IP54	Mounting hardware Metric units	Mounting hardware Imperial units
R1	6.5 / 8	14 / 18	M5	#10
R2	9.0 / 11	20 / 24	M5	#10
R3	16 / 17	35 / 37.5	M5	#10
R4	24 / 26	53 / 57	M5	#10
R5	34 / 42	75 / 93	M6	1/4 in
R6	69 <sup>1</sup> / 86 <sup>2</sup>	152 <sup>1</sup> / 190 <sup>2</sup>	M8	5/16 in

<sup>1</sup> ACH550-01-221A-2, IP21: 70 kg / 154 lb  
 ACH550-01-246A-4, IP21: 70 kg / 154 lb  
 ACH550-01-248A-2, IP21, 80 kg / 176 lb  
 ACH550-01-290A-4, IP21: 80 kg / 176 lb

<sup>2</sup> ACH550-01-246A-4, IP54: 80 kg / 176 lb  
 ACH550-01-290A-4, IP54: 90 kg / 198 lb

---

**Note:** Do not lift frame size R6 without a lifting aid.

---

## Checklist for installation preparations

✓	Check
	Check the frame type of the drive from the identification label ( <i>Drive identification</i> on page 14, <i>Frame size</i> on page 17).
	Check the compatibility of the motor and the drive ( <i>Motor identification</i> on page 19, <i>Motor compatibility</i> on page 21).
	Check the suitability of the environment and mounting location ( <i>Suitable environment and enclosure</i> on page 22, <i>Suitable mounting location</i> on page 23).
	Check that the cables meet the requirements ( <i>Wiring and EMC considerations</i> on page 26, <i>Motor cables</i> on page 28, <i>Control cables</i> on page 32, <i>Compliance with the IEC/EN 61800-3:2004 +A1:2012</i> on page 445).
	Check that you have the required tools ( <i>Tools required</i> on page 35).
	Check that the walls support the drive weight ( <i>Weights and mounting screws</i> on page 422).



# Installing the drive

---

## What this chapter contains

This chapter contains the mechanical and electrical installation procedure of the drive.

---



**WARNING!** Before installing the ACH550, ensure the input power supply to the drive is off.

---

For flange mounting (mounting the drive in a cooling air duct), see the appropriate *Flange Mounting Instructions*:

Frame size	IP21 / UL type 1		IP54 / UL type 12	
	Kit	Code (English)	Kit	Code (English)
R1	FMK-A-R1	100000982	FMK-B-R1	100000990
R2	FMK-A-R2	100000984	FMK-B-R2	100000992
R3	FMK-A-R3	100000986	FMK-B-R3	100000994
R4	FMK-A-R4	100000988	FMK-B-R4	100000996


---

**Note:** The ACH550 should only be mounted where all of the requirements defined in chapter *Preparing for installation* are met and the checklist has been completed.

---

## Preparing the mounting location

1. Use the mounting template to mark the position of the mounting holes.
2. Drill the holes.
3. Insert the screws halfway into the holes.

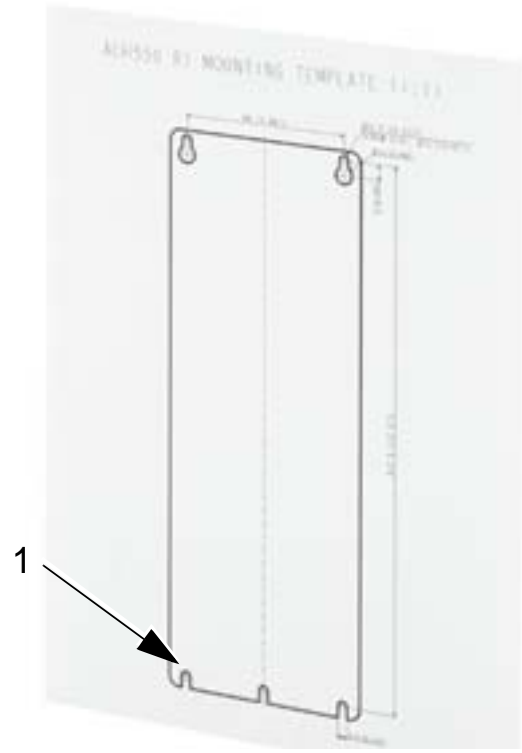

---

**Note:** Frame sizes R3 and R4 have four holes along the top. Use only two. If possible, use the two outside holes (to allow room to remove the fan for maintenance).

---

## Removing front cover (IP54)

1. Loosen the captive screws (the amount of screws depends on the size of the frame) around the edge of the cover.
2. Remove the cover.

1



2



3


## Removing front cover (IP21)

1. Remove the control panel, if attached.
2. Loosen the captive screw at the top.
3. Push side clamps in.
4. Pull up to lift the cover.



## Mounting the drive (IP54)

1. Remove the rubber plugs by pushing from the outside.
2. Position the ACH550 onto the mounting screws or bolts <sup>1</sup> and securely tighten in all four corners.
3. Reinstall the protective plugs.
4. Warning stickers in different languages are supplied with this manual. Attach a warning sticker in the appropriate language on the inside plastic shell.

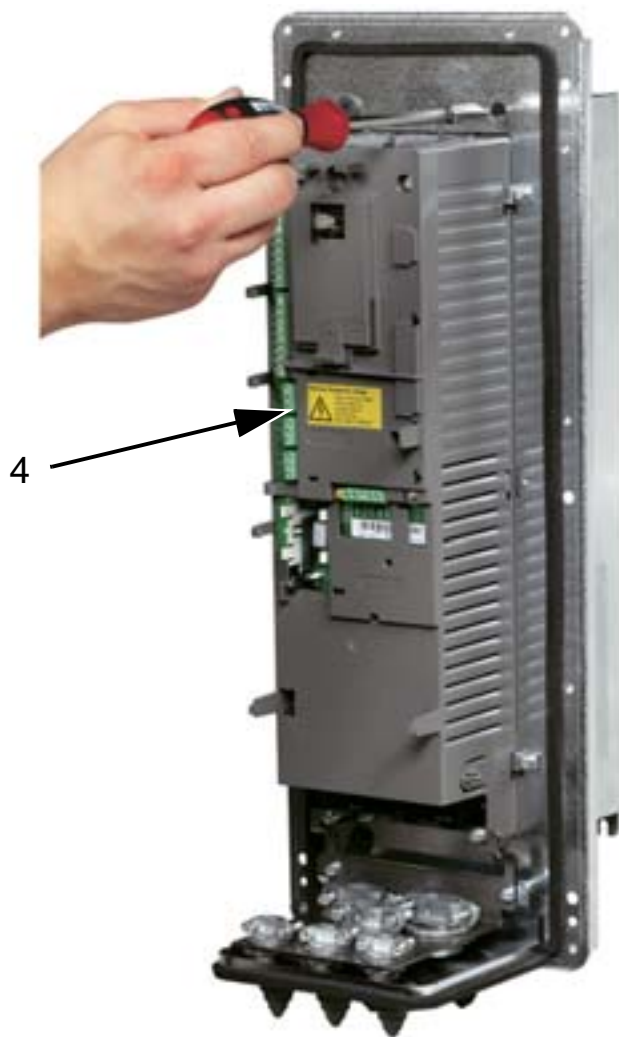

<sup>1</sup> Lift R6 drives by their lifting holes.




## Mounting the drive (IP21)

1. Position the ACH550 onto the mounting screws or bolts <sup>1</sup> and securely tighten in all four corners.
2. Warning stickers in different languages are supplied with this manual. Attach a warning sticker in the appropriate language on the inside plastic shell.




<sup>1</sup> Lift R6 drives by their lifting holes.

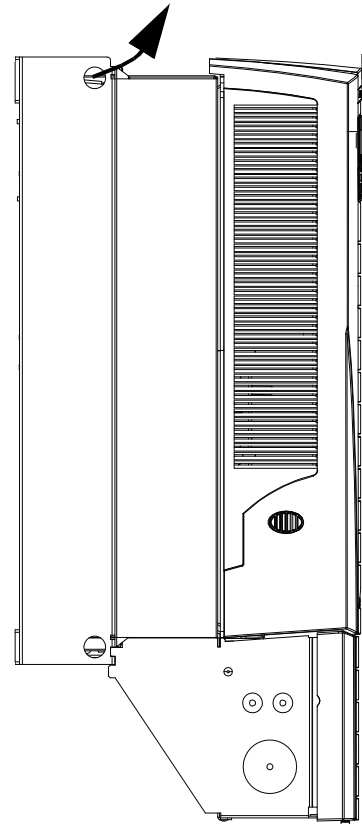

## Overview of wiring installation (R1...R4)

The figure below shows an overview of the terminal layout for frame sizes R1...R4.

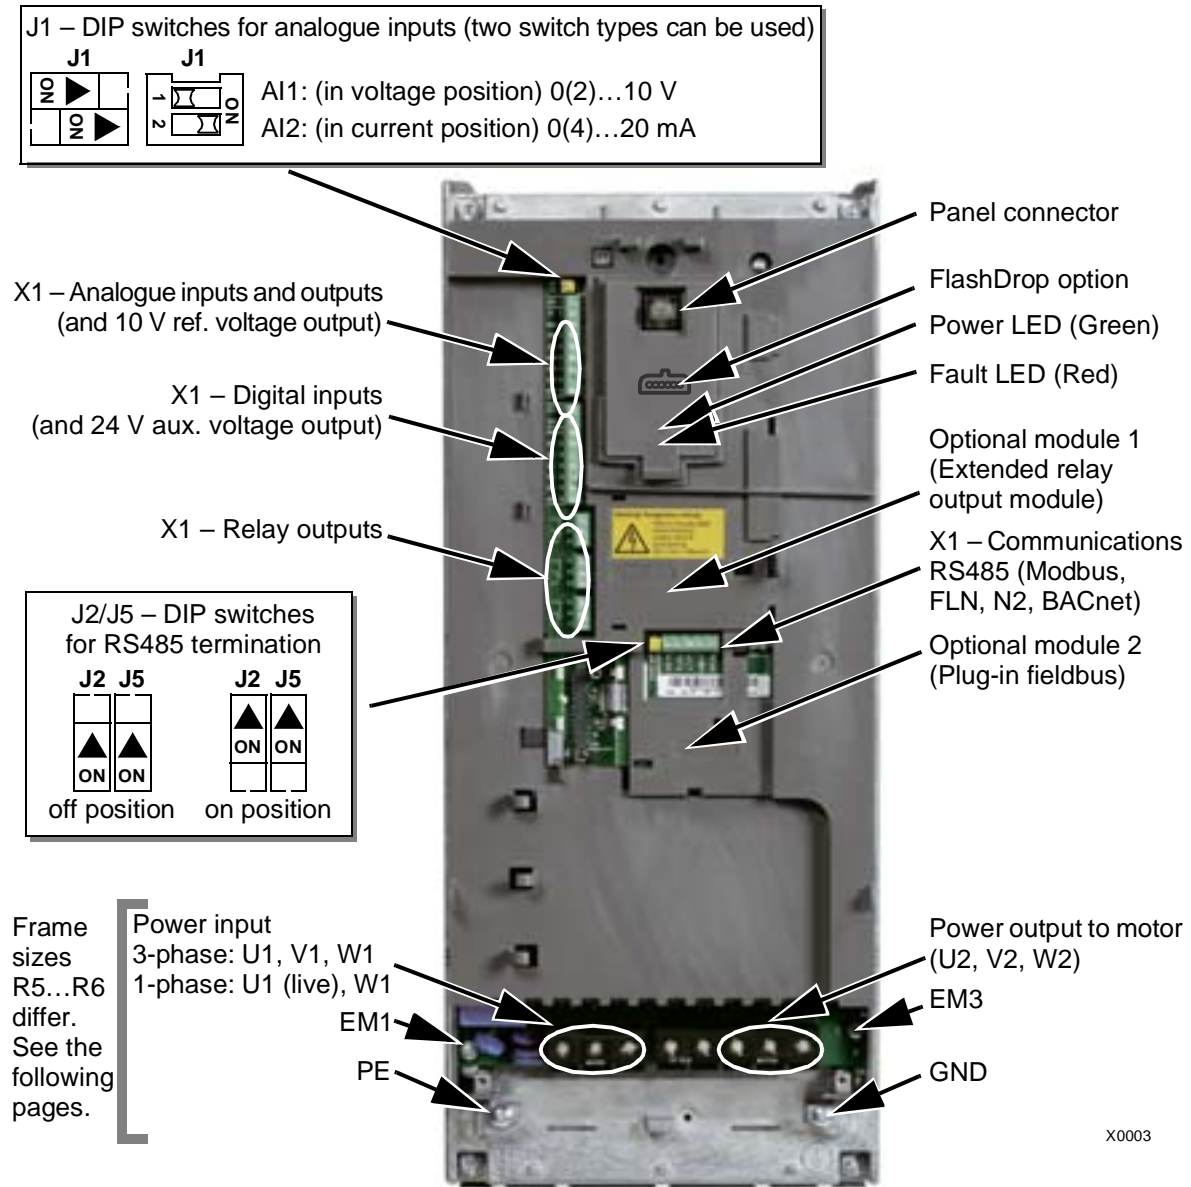


The figure shows the R3 frame size. Other frame sizes have similar layouts.



**WARNING!** To avoid danger, or damage to the drive, on IT systems, corner-grounded TN systems and residual current circuit breakers, see section [Disconnecting the internal EMC filter](#) on page 45.

## Overview of wiring installation (R5...R6)

The figures below show the general terminal layouts for frame sizes R5...R6.

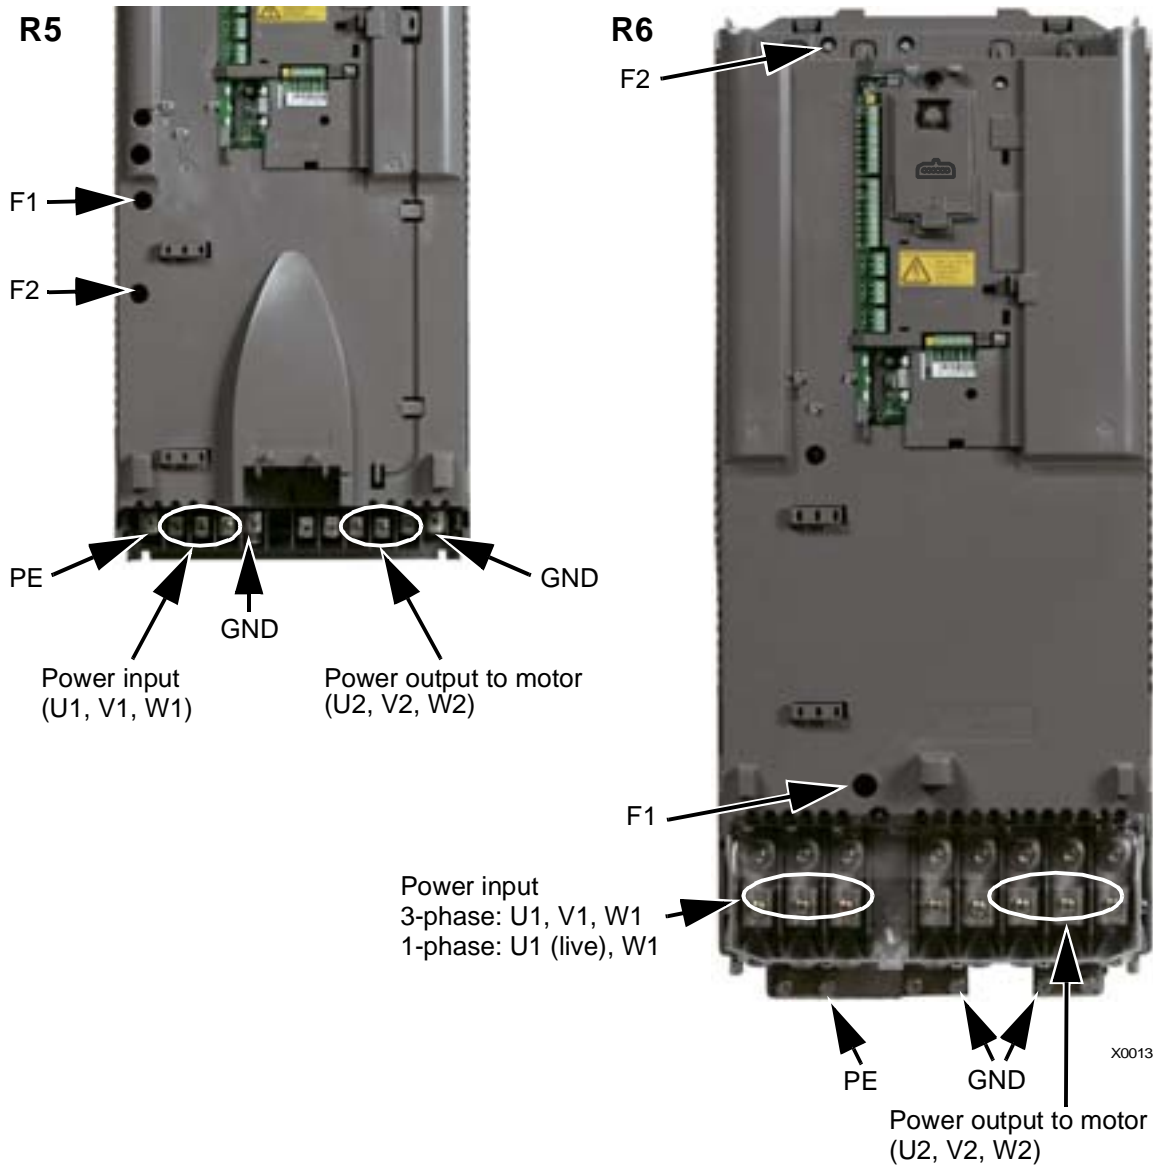

**WARNING!** To avoid danger, or damage to the drive, on IT systems, corner-grounded TN systems and residual current circuit breakers, see section [Disconnecting the internal EMC filter](#) on page 45.



## Disconnecting the internal EMC filter

On certain types of systems, you must disconnect the internal EMC filter, otherwise the system will be connected to ground (earth) potential through the EMC filter capacitors, which might cause danger, or damage the drive.

**Note:** Disconnecting the internal EMC filter increases the conducted emission and reduces the drive EMC compatibility considerably.

The following table shows the installation rules for the EMC filter screws to connect or disconnect the filter, depending on the system type and the frame size.

The locations of the screws EM1 and EM3 are shown in the diagram on page 43. The location of the screws F1 and F2 are shown in the diagram on page 44.

Frame sizes	Screw	Symmetri- cally grounded TN systems (TN-S systems)	Corner- grounded TN systems	IT systems (ungrounded or high- resistance- grounded [>30 ohms])	Residual current circuit breakers (RCD)*
R1...R3	EM1	x	x	•	•
	EM3	x	•	•	•
R4	EM1	x	x	–	–
	EM3	x	–	–	–
R5...R6	F1	x	x	–	–
	F2	x	x	–	–

x = Install the screw. (EMC filter will be connected.)

• = Replace the screw with the provided polyamide screw. (EMC filter will be disconnected.)

– = Remove the screw. (EMC filter will be disconnected.)

\* In case of 30 mA RCD, it is recommended to remove the screws. With 300 mA RCD, consult your local ABB representative.

## Checking the insulation of the assembly

### Drive

Do not make any voltage tolerance or insulation resistance tests on any part of the drive as testing can damage the drive. Every drive has been tested for insulation between the main circuit and the chassis at the factory. Also, there are voltage-limiting circuits inside the drive which cut down the testing voltage automatically.


### Supply cable

Check the insulation of the supply (input) cable according to local regulations before connecting to the drive.

### Motor and motor cable

Check the insulation of the motor and motor cable as follows:

1. Check that the motor cable is connected to the motor, and disconnected from the drive output terminals U2, V2 and W2.
2. Measure the insulation resistance between phase conductors and between each phase conductor and the Protective Earth conductor using a measuring voltage of 1000 V DC. The insulation resistance of an ABB motor must exceed 100 Mohm (reference value at 25 °C or 77 °F). For the insulation resistance of other motors, please consult the manufacturer's instructions. **Note:** Moisture inside the motor casing will reduce the insulation resistance. If moisture is suspected, dry the motor and repeat the measurement.

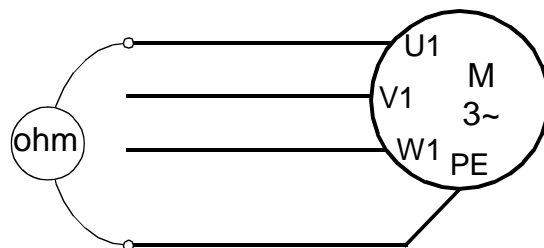


## Power wiring (IP54)

1. Remove the rubber cable seals and cut adequate holes into them for the 1) power, 2) motor, and 3) control cables. The conical part of the seals must face downwards when the seals are inserted in the lead-through plate holes.



2. On the input power cable, strip the sheathing back far enough to route individual wires. Also strip the individual wires.

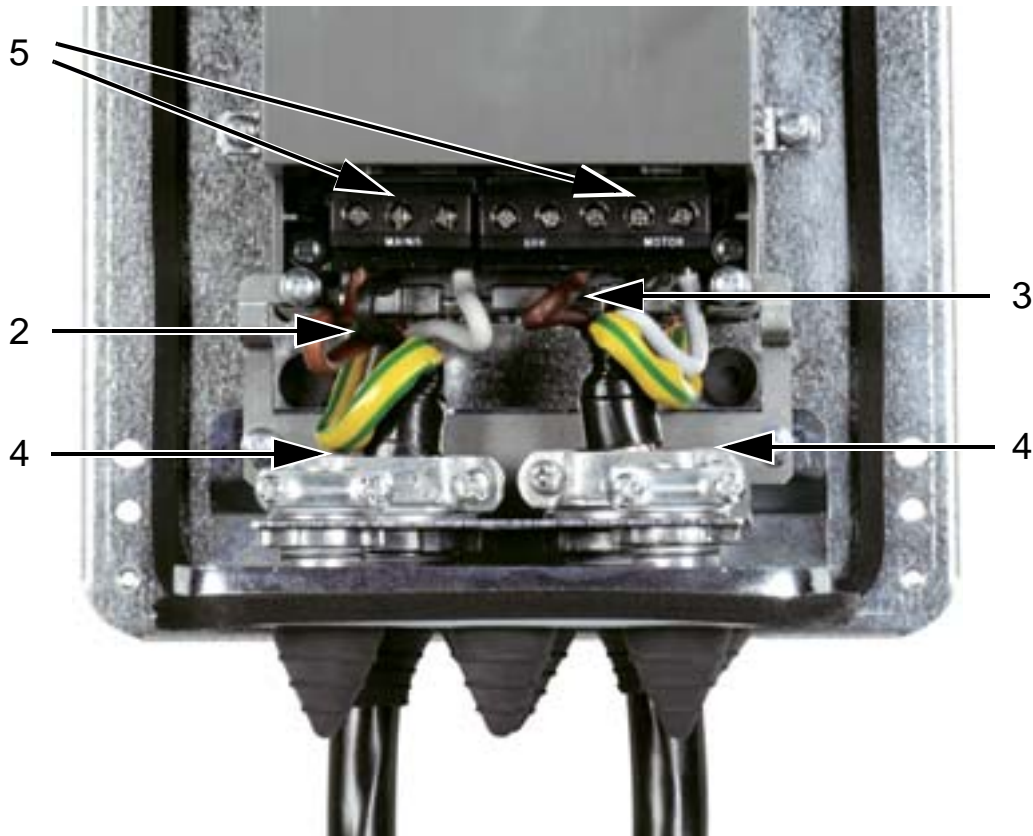

3. On the motor cable, strip the sheathing back far enough to expose the copper wire shield so that the shield can be twisted into a bundle (pigtail). Keep the bundle (pigtail) not longer than five times its width to minimise noise radiation. Also strip the individual wires.  
360° grounding under the clamp is recommended for the motor cable to minimise noise radiation. In this case, remove sheathing at the cable clamp.
4. Route the input power and motor cables through the clamps and tighten the clamps.
5. Connect the input power, motor and the grounding wires to the drive terminals using the torques given in the table on page [49](#). Frame size R6: See the figures about correct lug types on page [49](#).

### Tightening torques

Frame size	U1, V1, W1, U2, V2, W2		Earthing PE	
	Tightening torque		Tightening torque	
	N·m	lb·ft	N·m	lb·ft
R1	1.4	1	1.4	1
R2	1.4	1	1.4	1
R3	2.5	1.8	1.8	1.3
R4	5.6	4	2	1.5
R5	15	11	15	11
R6	40	30	8	6

### Frame size R6 lugs

R6: Crimp-on ring lugs (16...70 mm<sup>2</sup> / 6...2/0 AWG cables)




Remove the screw-on terminal lugs. Attach crimp-on ring lugs to the cables.

Isolate the ends of the ring lugs with insulating tape or shrink tubing.

Attach the ring lugs to the remaining bolts with M10 nuts.

R6: Screw-on terminal lugs (95...185 mm<sup>2</sup> / 3/0...350 AWG cables)

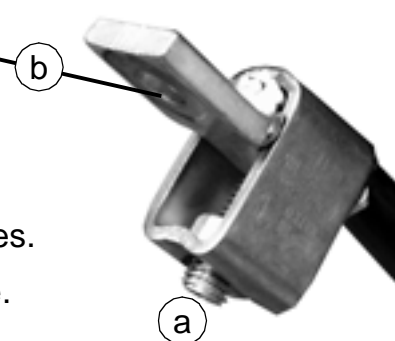

- a. Attach the screw-on lugs to the cables.
- b. Attach the screw-on lugs to the drive.



**WARNING!** If the wire size is less than 95 mm<sup>2</sup> (3/0 AWG), a crimp-on ring lug must be used. A cable of wire size less than 95 mm<sup>2</sup> (3/0 AWG) connected to a screw-on terminal lug will loosen and may damage the drive.


**Note:** Check the cable lengths according to section [Wiring and EMC considerations](#) on page 26.

## Power wiring (R1...R3 IP54, units with main switch option +F278)

This section applies to units with main switch option +F278. The main switch is available for drive types up to ACH550-01-045A-4 (power 22 kW) i.e., frame sizes R1 to R3 with degree of protection of IP54. The main switch option is not UL listed.

The main switch is used for switching off the input power of the drive. In addition to the main contacts, the switch has one normally closed auxiliary contact that indicates the state of the switch.

The main circuit of the drive is shown below.

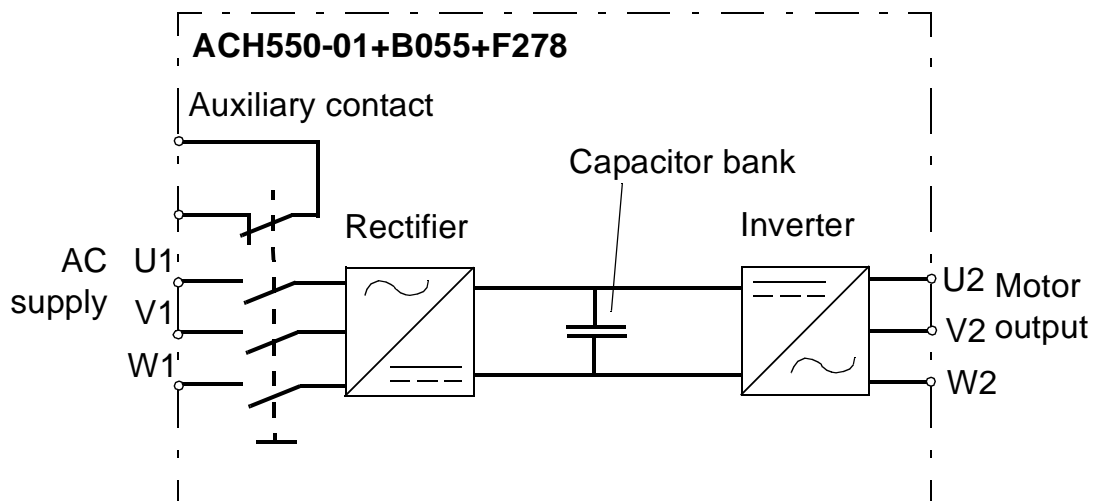

**WARNING!** Before removing the front cover and working on the drive, isolate the input cables from the main supply at the distribution board or by opening the disconnecter of the supply transformer. The main switch (option +F278) does not isolate the input cables and terminals from the main AC supply.


**Note:** The handle of the main switch extends the depth of the drive 50 mm (1.97 in.).

1. Remove the front cover. See [Removing front cover \(IP54\)](#) on page [39](#).


2. Undo the two fastening screws of the switch assembly plate.



3. Turn the switch assembly plate aside.

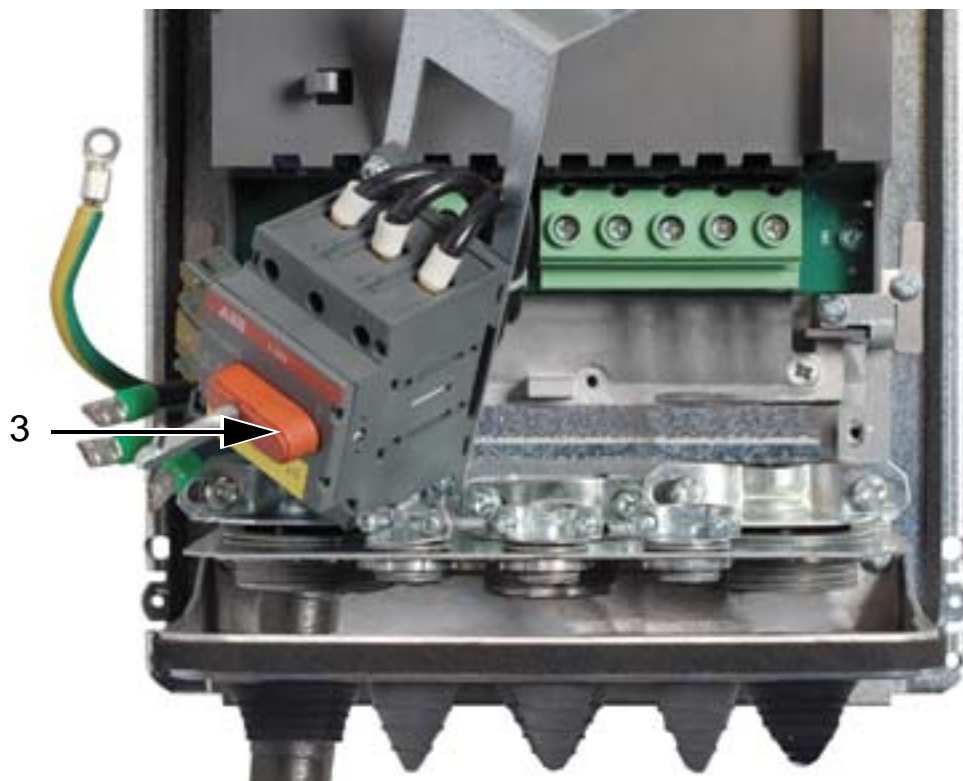


4. Remove the rubber grommets and cut adequate holes into them. Slide the grommets onto the power cables the conical part downwards. Seal the lead-through plate holes with the grommets.
5. Strip off the outer sheathing of the cables under the 360 degrees grounding clamps and fasten the clamps onto the stripped parts of the cables.
6. Twist the shields of the cables into pigtails and connect the pig tails under the grounding screws with cable lugs. Keep the pigtails short to minimize electromagnetic emission. See the following two figures.
7. Connect the motor cable conductors to the U2, V2 and W2 terminals.

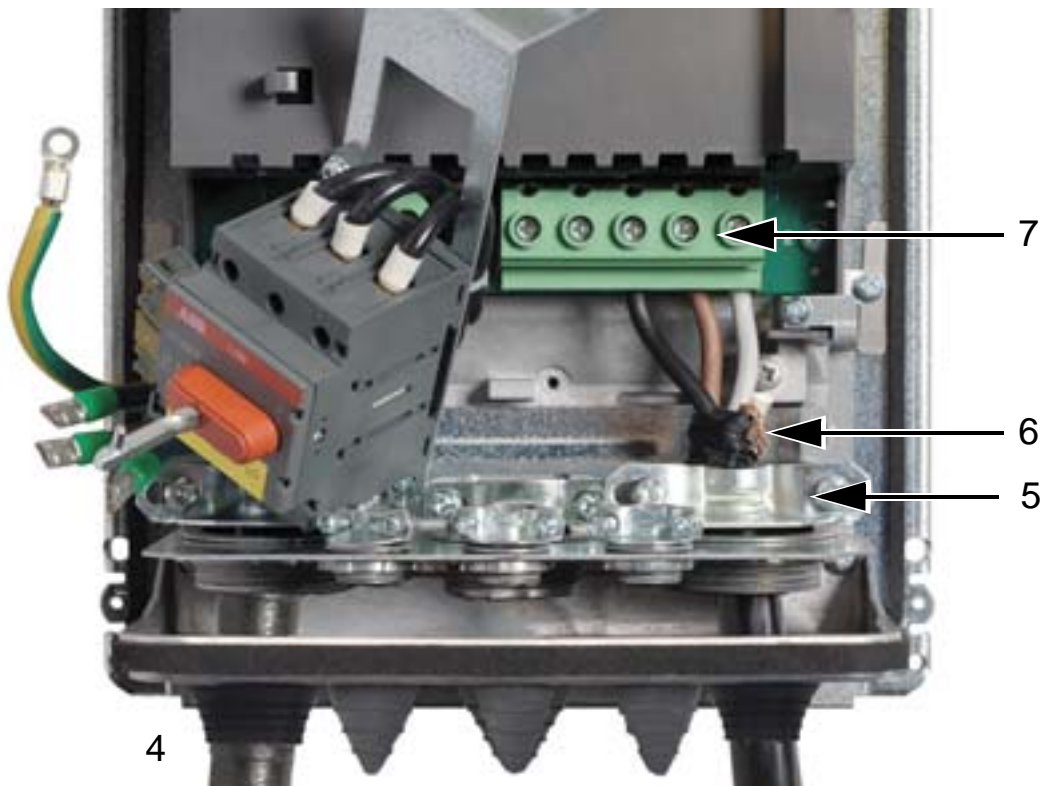




8. Turn the switch assembly plate back to its original position and fasten the two fastening screws.

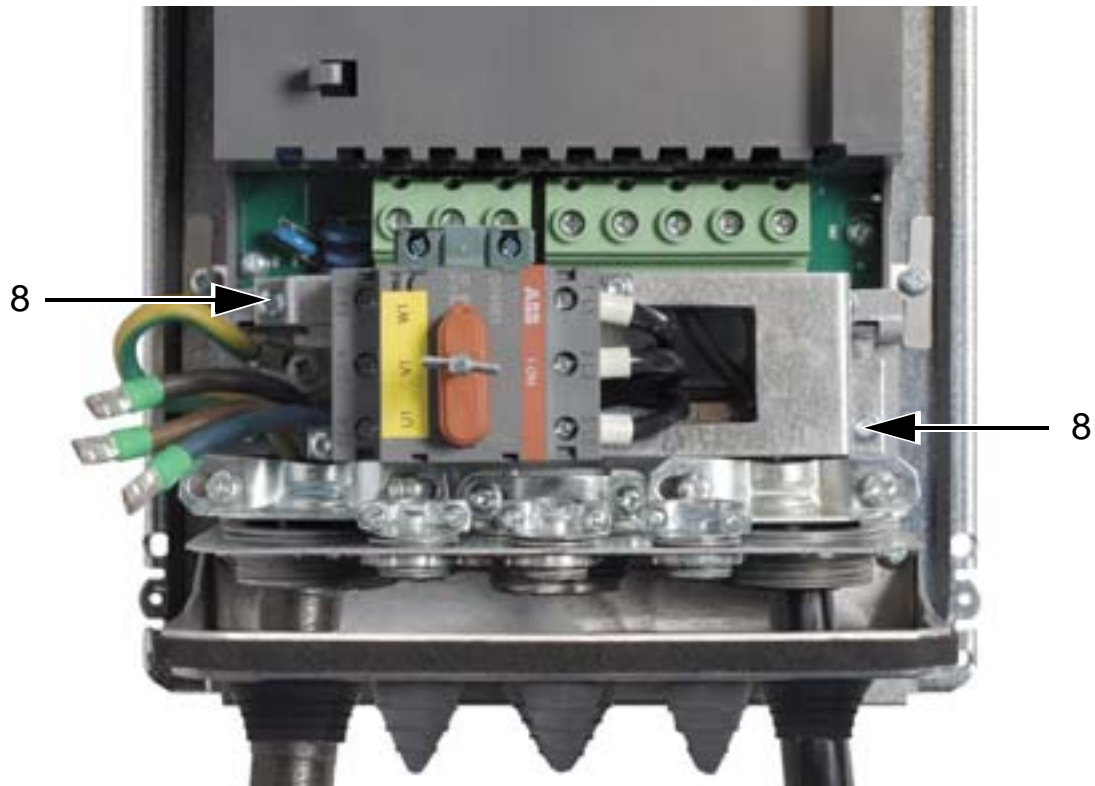

9. Connect the input cable conductors to the main switch terminals U1, V1 and W1.
10. Connect wires to the auxiliary contact (if used).

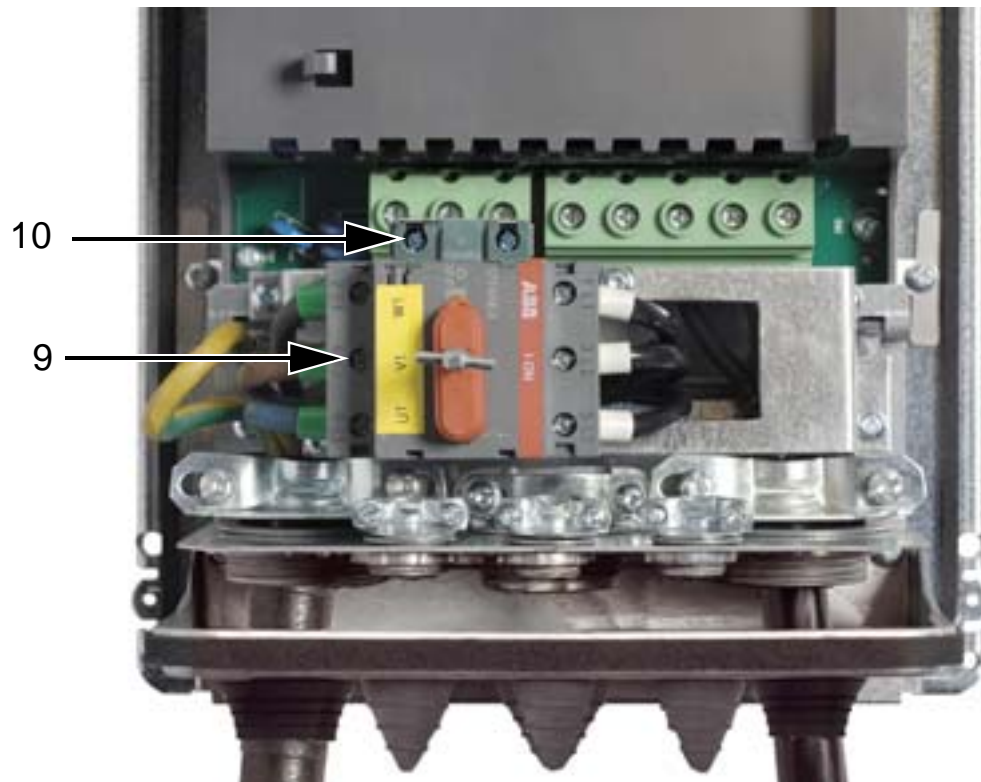


11. Connect the control cables. See [Control wiring \(IP54\)](#) on page 55.
12. Replace the front cover. See [Re-install cover \(IP54\)](#) on page 63.

### Tightening torques

Frame size	Tightening torque			
	U1, V1, W1	U2, V2, W2	Earthing PE	
	N·m (lbf·ft)	N·m (lbf·ft)	N·m	lbf·ft
R1	0.8 (0.6)	1.4 (1.0)	1.4	1
R2	0.8 (0.6)	1.4 (1.0)	1.4	1
R3	2 (1.5)	1.8 (1.3)	1.8	1.3
Auxiliary contact: 0.8 N·m (0.6 lbf·ft)				

## Control wiring (IP54)

1. On each control cable, strip the sheathing back far enough to expose the copper wire shield for the cable clamp. Also strip the individual wires.
2. Clamp the control cables.
3. Connect the control wires to the drive terminals.

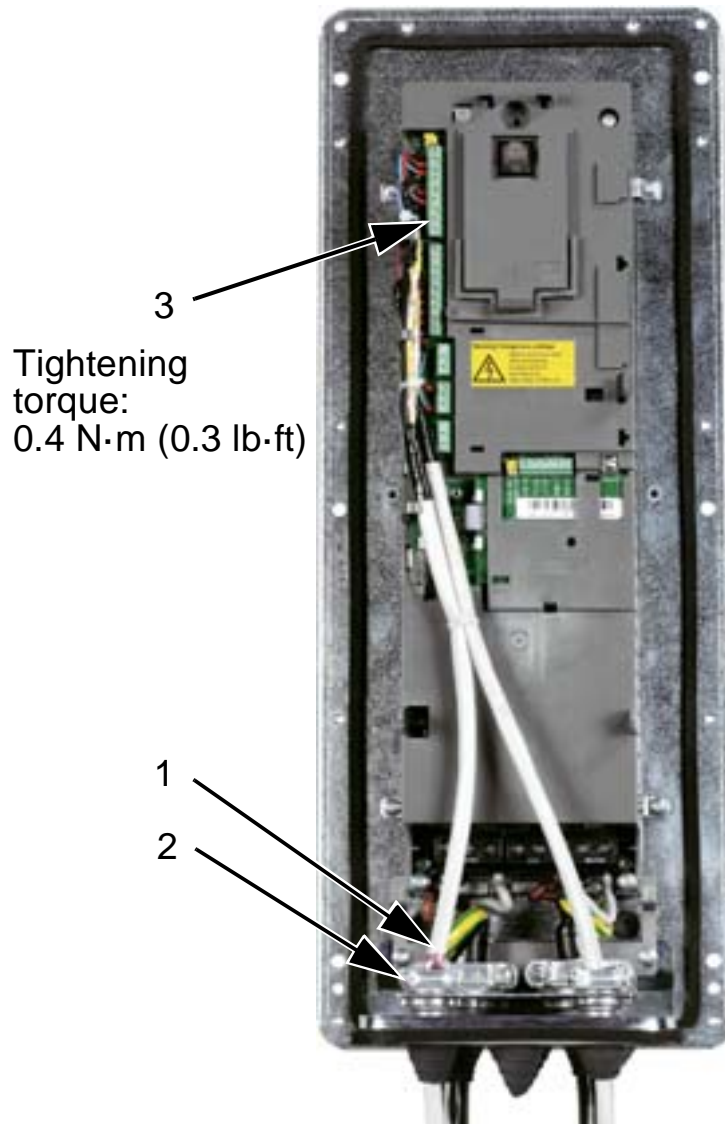

Tightening torque:  
0.4 N·m (0.3 lb·ft)




**WARNING!** All ELV (Extra Low Voltage) circuits connected to the drive must be used within a zone of equipotential bonding, i.e. within a zone where all simultaneously accessible conductive parts are electrically connected to prevent hazardous voltages appearing between them. This is accomplished by a proper factory grounding.

For completing the connections, go to chapter [Application macros and wiring](#).

## Power wiring (IP21)

1. Open the appropriate knockouts in the connection box.

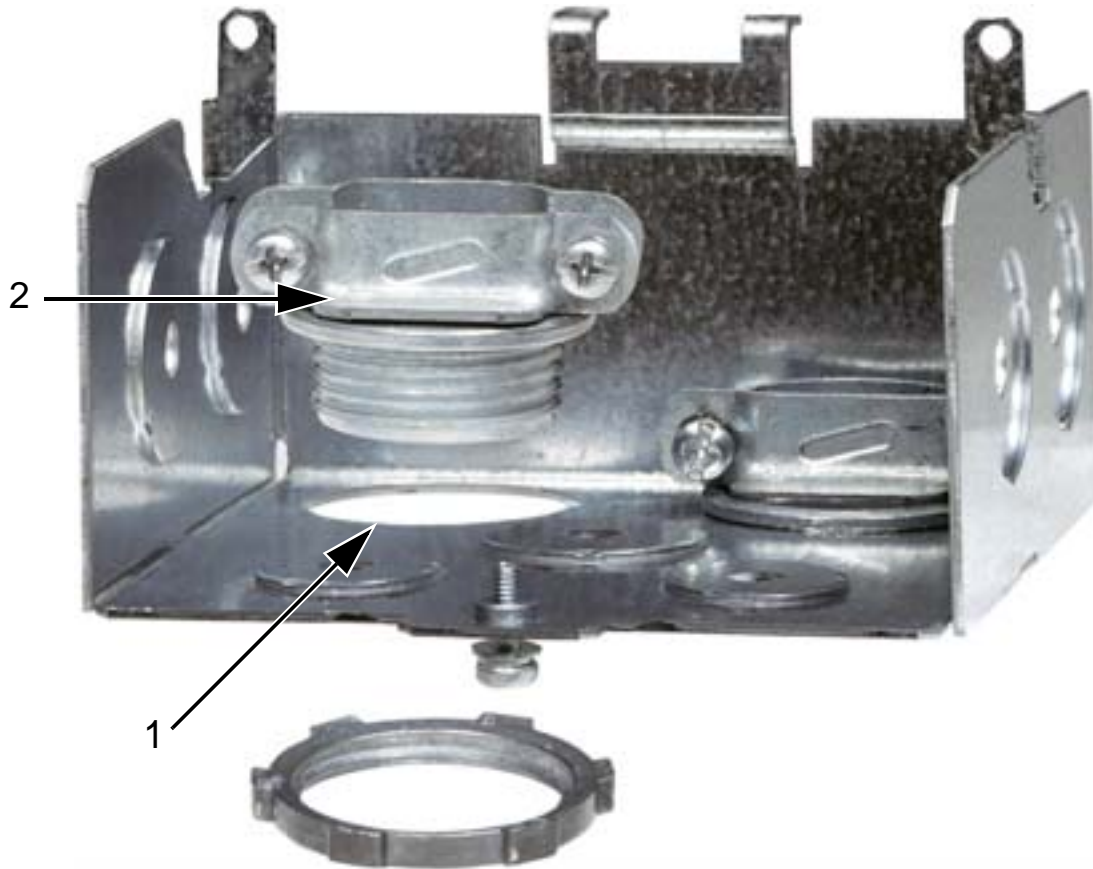

2. Install the cable clamps for the input power and motor cables.

3. Install the connection box and tighten the cable clamps.




---

**Note:** The connection box can be left out in cabinet installations if the cabinet is grounded. Apply 360° grounding of the cable shields at the cable entries of the cabinet.

---

4. On the input power cable, strip the sheathing back far enough to route individual wires.
5. On the motor cable, strip the sheathing back far enough to expose the copper wire shield so that the shield can be twisted into a bundle (pigtail). Keep the bundle (pigtail) not longer than five times its width to minimise noise radiation. 360° grounding under the clamp is recommended for the motor cable to minimise noise radiation. In this case, remove sheathing at the cable clamp.

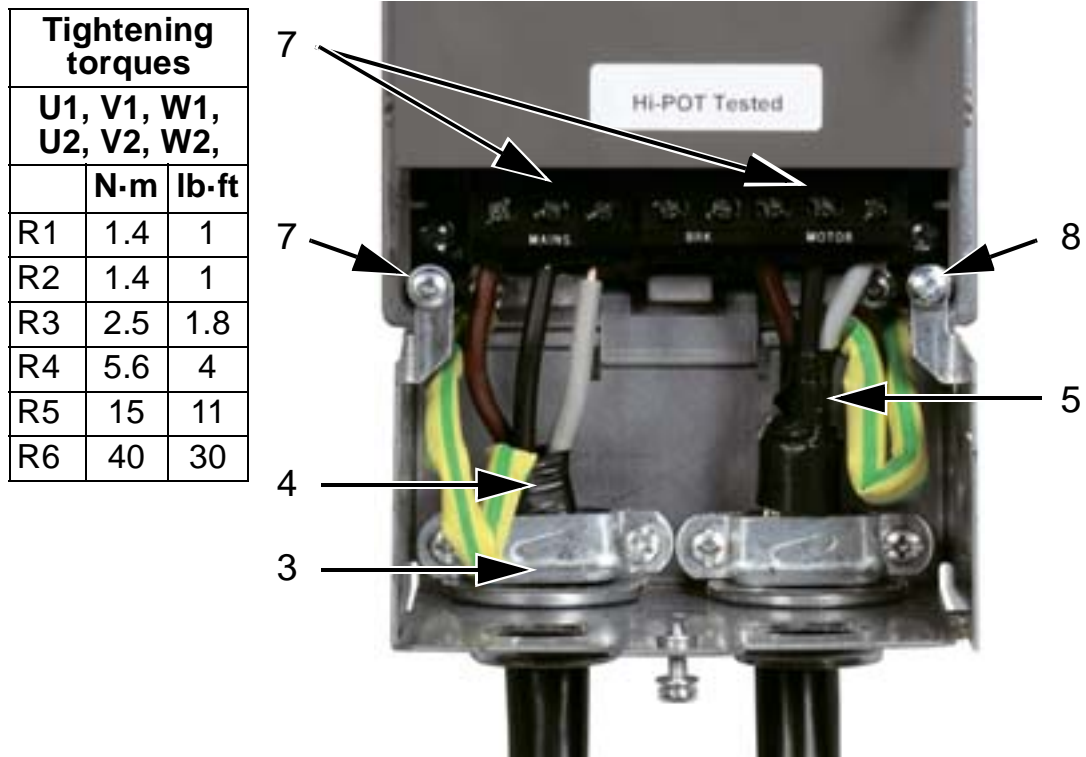

6. Route both cables through the clamps.
7. Strip and connect the input power and motor wires and the input power grounding wire to the drive terminals. Frame size R6: See the figures on page [49](#).
8. Connect the bundle (pigtail) created from the motor cable shield to the ground (earth).

---

**Note:** Check the cable lengths according to section [Wiring and EMC considerations](#) on page [26](#).

---


## Control wiring (IP21)

1. Install the cable clamp(s) for the control cable(s). (Input power and motor cables are not shown in the figure).



2. Strip the control cable sheathing.

3. Route the control cable(s) through the clamp(s) and tighten the clamp(s).
4. Connect the ground (earth) shield for digital and analogue I/O cables at X1:1.
5. Strip and connect the individual control wires to the drive terminals. See chapter [Application macros and wiring](#).
6. Install the connection box cover (one screw).

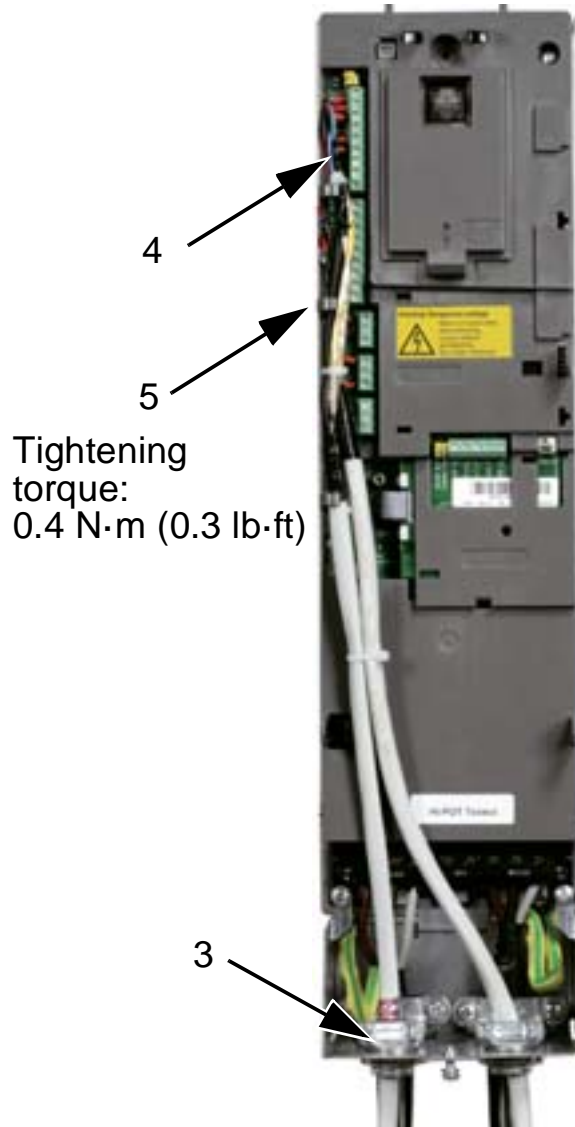

**WARNING!** All ELV (Extra Low Voltage) circuits connected to the drive must be used within a zone of equipotential bonding, i.e. within a zone where all simultaneously accessible conductive parts are electrically connected to prevent hazardous voltages appearing between them. This is accomplished by a proper factory grounding.

For completing the connections, go to chapter [Application macros and wiring](#).



## Check installation

✓	Check
	The installation preparations have been completed according to the installation checklist.
	The drive is mounted securely.
	The space around the drive meets the drive's specifications for cooling ( <a href="#">Suitable mounting location</a> on page 23).
	The motor and driven equipment are ready for start.
	For IT systems, corner-grounded TN systems and residual current circuit breakers: the internal EMC filter is disconnected ( <a href="#">Overview of wiring installation (R1...R4)</a> on page 43, <a href="#">Overview of wiring installation (R5...R6)</a> on page 44).
	The drive is properly grounded.
	The input power (mains) voltage matches the drive's nominal input voltage.
	The input power (mains) connections at U1, V1 and W1 are connected and tightened as specified.
	The input power (mains) fuses and mains switch are installed. ( <a href="#">Input power (mains) cable, fuses and circuit breakers</a> on page 401).
	The motor connections at U2, V2 and W2 are connected and tightened as specified.
	The motor cable is routed away from other cables.
	NO power factor compensation capacitors are in the motor cable.
	The control connections are connected and tightened as specified.

✓	<b>Check</b>
	NO tools or foreign objects (such as drill shavings) are inside the drive.
	NO alternate power source for the motor (such as a bypass connection) is connected - no voltage is applied to the output of the drive.

## Re-install cover (IP54)

1. Align the cover and slide it on.
2. Tighten the captive screws around the edge of the cover.
3. Re-install the control panel.

---

**Note:** The control panel window must be closed to comply with IP54.

---



## Re-install cover (IP21)

1. Align the cover and slide it on.
2. Tighten the captive screw.
3. Re-install the control panel.



## Apply power

---



**WARNING!** Always re-install the front cover before turning power on.

---

---



**WARNING!** The ACH550 will start up automatically at power-up if the external run command is on at I/O.

---

1. Apply input power.
  2. Green LED is lit.
- 

**Note:** Before increasing motor speed, check that the motor is running in the desired direction.


---

---

**Note:** If you want to generate a fault to check the I/O, select HAND mode and remove the control panel.

---

The figure below shows changing the direction of motor rotation, seen from the shaft end of the motor.

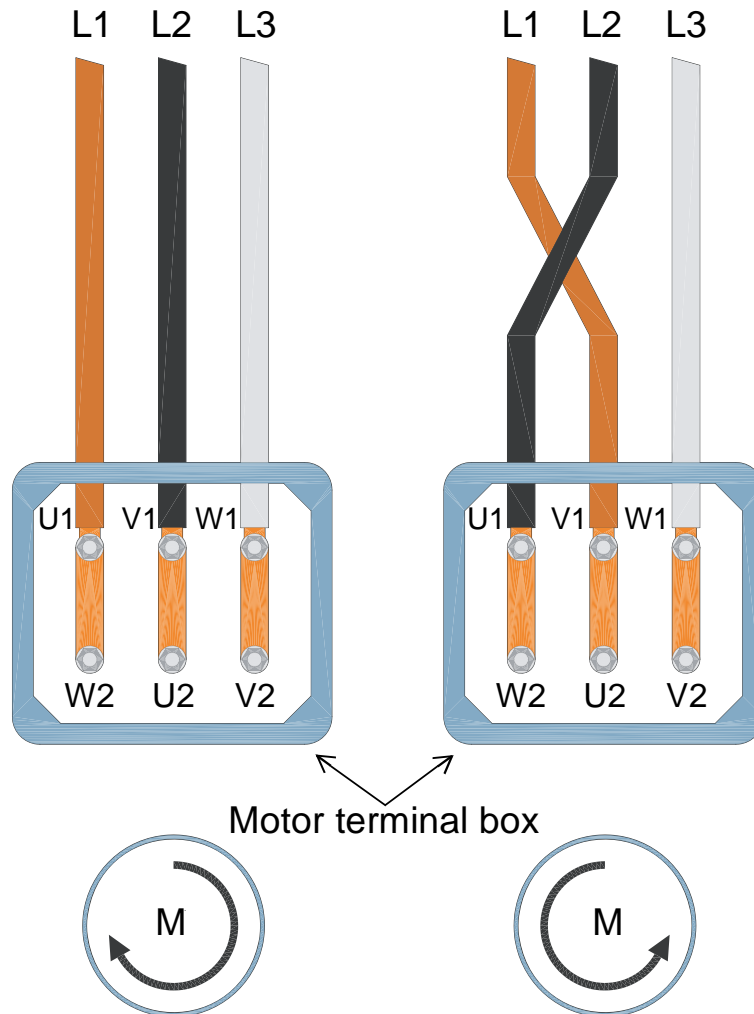


---

**Note:** The direction of rotation can be changed from the drive, but we recommend switching the motor cables to associate the drive forward direction with the clockwise motor rotation.

---



---

**Note:** Now the drive is fully operational for manual operation. If you wish to use I/O connections, refer to chapter [Application macros and wiring](#).

---

# Start-up and control panel

## What this chapter contains


This chapter contains a brief description of the assistant (HVAC) control panel (operator keypad), start-up assistant and application selection.

## Control panel compatibility

The manual is compatible with the HVAC control panel ACH-CP-B Rev X with panel firmware version 2.04 or later.

## HVAC control panel (ACH-CP-B) features

The ACH550 HVAC control panel (operator keypad) ACH-CP-B features:

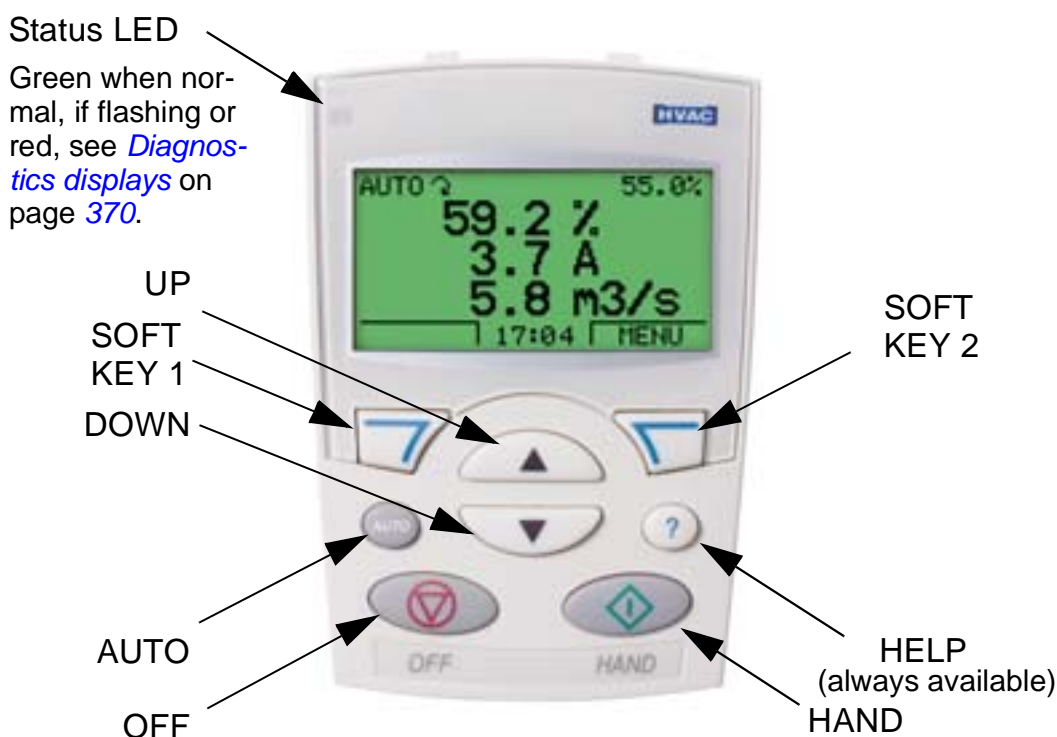

- language selection for the display
- drive connection that can be made or detached at any time
- start-up assistant to facilitate drive commissioning
- copy function for moving parameters to other ACH550 drives
- backup function for saving parameter sets

- context sensitive help
- real-time clock.

## Start-up






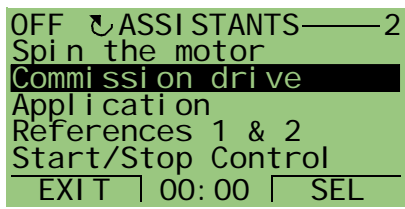

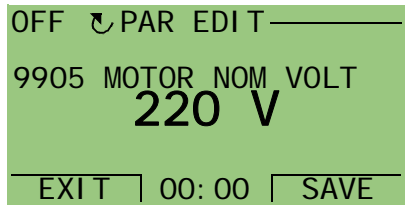
Start-up can be performed in two ways:

1. using the Start-up assistant or
2. changing the parameters individually.


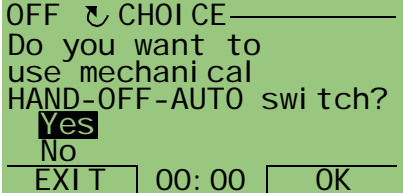

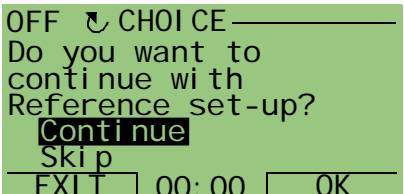
At the first power-up, the drive activates the Start-up assistant. You can restart it and its individual tasks in the Assistants mode as described in section [Assistants mode](#) on page 76.

### 1. Start-up by using the Start-up assistant

To start the Start-up assistant, follow these steps:

1	Press MENU to go to the main menu		
2	Select ASSISTANTS with the UP/DOWN keys and press ENTER.		
3	Scroll to Commission drive with the UP/DOWN keys and press SEL.		
4	Change the values suggested by the Start-up assistant to your preferences and then press SAVE after every change.		


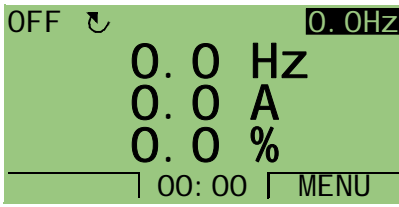



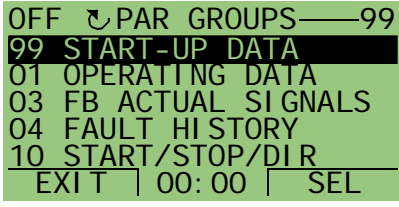

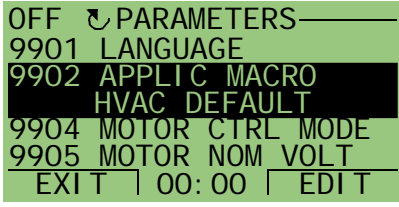

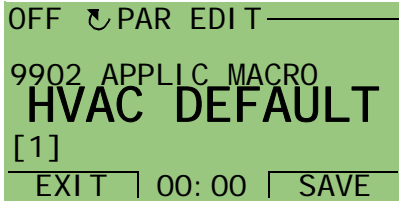








<p>5</p>	<p>After selecting the macro, specify whether you want to use the mechanical HAND-OFF-AUTO switch. To be able to use the switch, EXT1 (HAND) Start command must be connected to DI1 and EXT2 (AUTO) Start command to DI6.</p>		
<p>6</p>	<p>After completing a task, the Start-up assistant asks if you want to continue with the next one. Press OK (when Continue is highlighted) to continue with the next task, select Skip with the UP/DOWN keys and press OK to move to the next task without doing this one or press EXIT to stop the Start-up assistant.</p>		

The Start-up assistant will guide you through the start-up. For more information, see section [Assistants mode](#) on page 76.

## 2. Start-up by changing the parameters individually

To change the parameters, follow these steps:

1	Press MENU to go to the main menu.		
2	Select PARAMETERS with the UP/DOWN keys and press ENTER to go to the Parameters mode.		
3	Select the appropriate parameter group with the UP/DOWN keys and press SEL.		
4	Select the appropriate parameter in a group with the UP/DOWN keys. Press EDIT to change the parameter value.		
5	Press the UP/DOWN keys to change the parameter value.		
6	Press SAVE to store the modified value or press CANCEL to leave the set mode. Any modifications not saved are cancelled.	 	
7	Press EXIT to return to the listing of parameter groups, and again to return to the main menu.	 	

To complete the control connections by manually entering the parameters, see chapter [Parameter listing and descriptions](#).

For detailed hardware description, see chapter [Technical data](#).

---

**Note:** The current parameter value appears below the highlighted parameter.

---

**Note:** To replace the displayed value of a parameter with the default value, press the UP/DOWN keys simultaneously.

---

**Note:** The most typical and necessary parameters to change are the following parameter groups: [Group 99: START-UP DATA](#), [Group 10: START/STOP/DIR](#), [Group 11: REFERENCE SELECT](#), [Group 13: ANALOGUE INPUTS](#), [Group 16: SYSTEM CONTROLS](#), [Group 20: LIMITS](#), [Group 22: ACCEL/DECEL](#), [Group 40: PROCESS PID SET 1](#), [Group 41: PROCESS PID SET 2](#) and [Group 42: EXT / TRIM PID](#).

---

**Note:** To restore the default factory settings, select the HVAC default application macro.

---

## Modes

The HVAC control panel (operator keypad) has several different modes for configuring, operating and diagnosing the drive. The modes are:

- [Output \(Standard display\) mode](#) – Shows drive status information and operates the drive.
- [Parameters mode](#) – Edits parameter values individually.
- [Assistants mode](#) – Guides the start-up and configuration.
- [Changed parameters mode](#) – Shows changed parameters.
- [Drive parameter backup mode](#) – Uploads or downloads the parameters between the drive and the control panel.
- [Time and date mode](#) – Sets the time and date for the drive.
- [I/O settings mode](#) – Checks and edits the I/O settings.
- [Fault logger mode](#) – Shows fault history, details and help text for the fault.

## Output (Standard display) mode

Use the Output (standard display) mode to read information on the drive's status and to operate the drive. To go to the Output mode, press EXIT until the LCD display shows status information as described below.

### Status information


**Top.** The top line of the LCD display shows the basic status information of the drive.

- HAND – Indicates that the drive control is local, i.e., from the control panel (operator keypad).
- AUTO – Indicates that the drive control is remote, such as the basic I/O (X1) or fieldbus.
- OFF – Indicates that the drive control is local and stopped.
- ↻ – Indicates the drive and motor rotation status as follows:

Control panel display	Significance
Rotating arrow (clockwise or counterclockwise)	<ul style="list-style-type: none"> <li>• Drive is running and at setpoint.</li> <li>• Shaft direction is forward or reverse.</li> </ul>
Dotted rotating arrow	Drive is running but not at setpoint.
Stationary arrow	Drive is stopped.
Dotted stationary arrow	Start command is present, but the motor is not running, e.g. because start enable is missing.

- Upper right – shows the active reference.

**Centre.** Using parameter [Group 34: PANEL DISPLAY](#), the centre of the LCD display can be configured to display:




The screenshot shows the LCD display with the following information:
 

- Top left: AUTO ↻
- Top right: 15.0Hz
- Center: 15.0 Hz
- Center: 3.7 A
- Center: 44.0 %
- Bottom left: 00:00
- Bottom right: MENU

- Three signals from [Group 01: OPERATING DATA](#) – The default display shows parameters 0103 (OUTPUT FREQ) in hertz, 0104 (CURRENT) in amperes and 0120 (AI1) as a percentage.
- Two signals from [Group 01: OPERATING DATA](#) – If only two parameters are selected to be indicated, also the names of the parameters are displayed.

- A bar meter instead of each signal value.

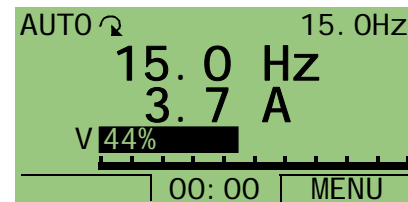

**Bottom.** The bottom of the LCD display shows:

- Lower corners – Show the functions currently assigned to the two soft keys.
- Lower centre – Displays the current time (if configured to show the time).

## Operating the drive

**AUTO/HAND** – The very first time the drive is powered up, it is in the AUTO mode (remote control), and controlled from the Control terminal block X1.

To switch to the HAND mode (local control) and control the drive using the control panel (operator keypad), press the HAND key






or the OFF key



- Pressing the HAND key switches the drive to local control while keeping the drive running.
- Pressing the OFF key switches to local control and stops the drive.

To switch back to the AUTO mode, press the  key.


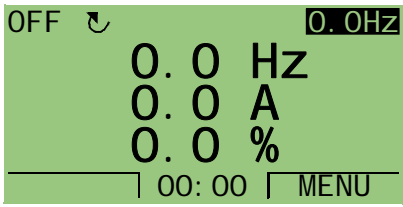





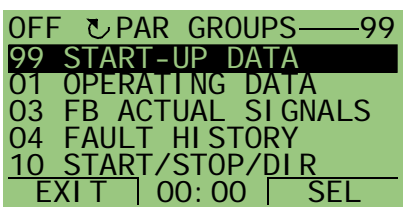




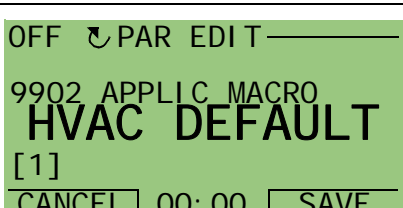




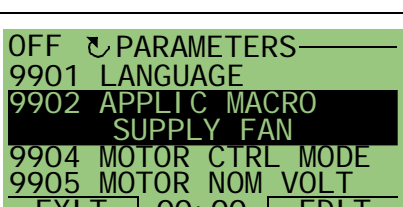
**Start/Stop** – To start the drive, press the HAND () or AUTO key (). To stop the drive press the OFF key (.

**Reference** – To modify the reference (only possible if the display in the upper right corner is highlighted in inverted colour) press the UP or DOWN keys (the reference changes immediately).

The reference can be modified in the HAND mode. It can be parameterized (using [Group 11: REFERENCE SELECT](#)) to also allow modification in the AUTO mode.

## Parameters mode

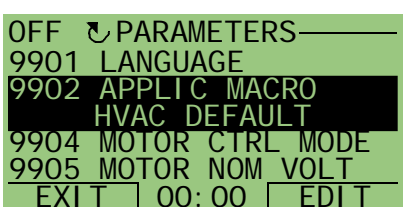To change the parameters, follow these steps:

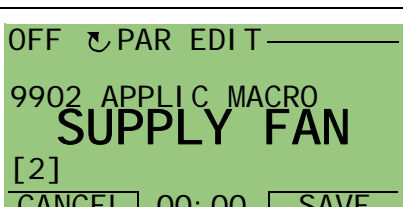1	Press MENU to go to the main menu.		
2	Select PARAMETERS with the UP/DOWN keys and press ENTER to go to the Parameters mode.	 	
3	Select the appropriate parameter group with the UP/DOWN keys and press SEL.	 	
4	Select the appropriate parameter in a group with the UP/DOWN keys. Press EDIT to change the parameter.	 	
5	Press the UP/DOWN keys to change the parameter value.		
6	Press SAVE to store the modified value or press CANCEL to leave the set mode. Any modifications not saved are cancelled.	 	
7	Press EXIT to return to the listing of parameter groups, and again to return to the main menu.		

To complete the control connections by manually entering the parameters, see chapter [Parameter listing and descriptions](#).

For detailed hardware description, see chapter [Technical data](#).

---

**Note:** The current parameter value appears below the highlighted parameter.

---

**Note:** To replace the displayed value of a parameter with the default value, press the UP/DOWN keys simultaneously.

---

**Note:** The most typical and necessary parameters to change are the following parameter groups: [Group 99: START-UP DATA](#), [Group 10: START/STOP/DIR](#), [Group 11: REFERENCE SELECT](#), [Group 13: ANALOGUE INPUTS](#), [Group 16: SYSTEM CONTROLS](#), [Group 20: LIMITS](#), [Group 22: ACCEL/DECEL](#), [Group 40: PROCESS PID SET 1](#), [Group 41: PROCESS PID SET 2](#) and [Group 42: EXT / TRIM PID](#).

---

**Note:** To restore the default factory settings, select the HVAC default application macro.

---

## Assistants mode

The Start-up assistant guides you through the basic programming of a new drive. (You should familiarise yourself with basic control panel operation and follow the steps outlined above.) At the first power-up, the drive automatically suggests first selecting the language. The assistant also checks the values entered to prevent entries that are out of range.


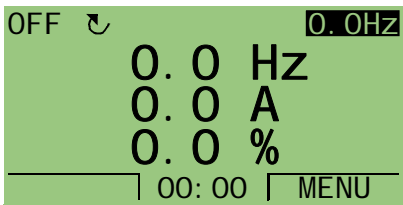





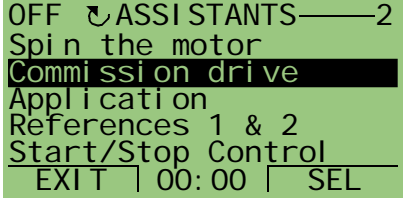



The Start-up assistant is divided into assistants, each of which guides you through the task of specifying a related parameter set, for example References 1 & 2 or PID control. You may activate the assistants (tasks) one after the other, as the Start-up assistant suggests, or independently from a menu.

---




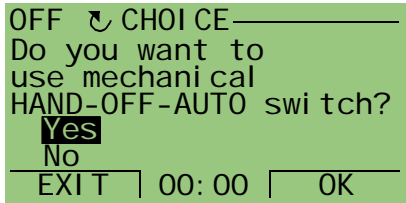


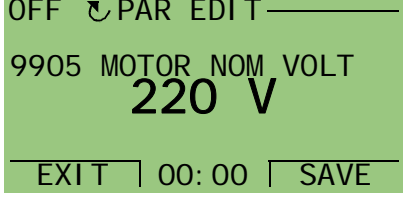


**Note:** If you want to set the parameters independently, use the Parameters mode.

---


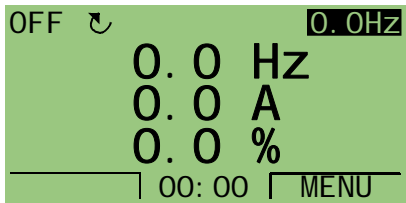




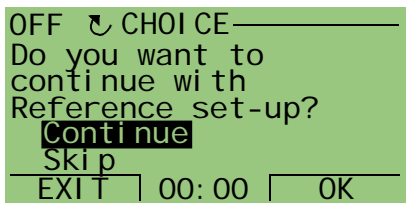


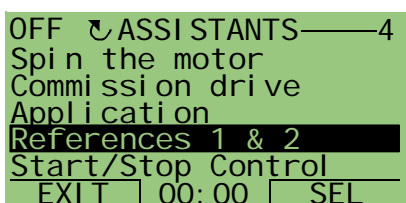
To start the Start-up assistant, follow these steps:


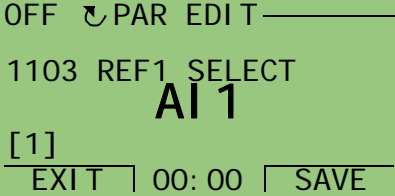

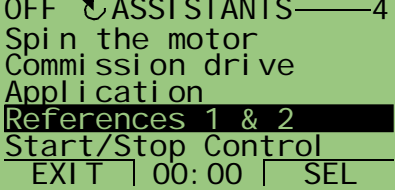
1	Press MENU to go to the main menu.		
2	Select ASSISTANTS with the UP/DOWN keys and press ENTER.	 	
3	Scroll to Commission drive with the UP/DOWN keys and press SEL.	 	
4	Change the values suggested by the assistant to your preferences and then press SAVE after every change.	 	



5	After selecting the macro, specify whether you want to use the mechanical HAND-OFF-AUTO switch.	  	
6	After completing a task, the Start-up assistant asks if you want to continue with the next one. Press OK (when Continue is highlighted) to continue with the next task, select Skip with the UP/DOWN keys and press OK to move to the next task without doing this one or press EXIT to stop the Start-up assistant.	   	

The Start-up assistant will guide you through the start-up. To start an individual assistant from the menu, follow these steps:

1	Press MENU to go to the main menu.		
2	Select ASSISTANTS with the UP/DOWN keys and press ENTER.	  	
3	Scroll to the assistant you want to use (References 1 & 2 is used here as an example) with the UP/DOWN keys and press SEL.	  	

4	Change the values suggested by the assistant to your preferences and then press SAVE after every change. Pressing EXIT stops the assistant.		
5	After the assistant has completed the task, you can select another assistant from the menu or exit the Assistants mode.		

The table below lists the tasks of the assistants. The order of tasks presented by the Start-up assistant depends on your entries. The following task list is typical.


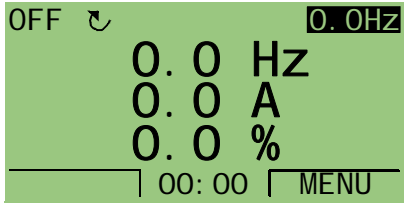





Task name	Description
Spin the motor	<ul style="list-style-type: none"> <li>• Prompts for the control panel display language selection</li> <li>• Prompts for motor data</li> <li>• Guides user through the rotation check</li> </ul>
Commission drive	<ul style="list-style-type: none"> <li>• Prompts for motor data</li> </ul>
Application	<ul style="list-style-type: none"> <li>• Prompts for the application macro selection</li> </ul>
References 1 & 2	<ul style="list-style-type: none"> <li>• Prompts for the source of speed references 1 and 2</li> <li>• Prompts for reference limits</li> <li>• Prompts for frequency (or speed) limits</li> </ul>
Start/Stop Control	<ul style="list-style-type: none"> <li>• Prompts for the source of the start and stop commands</li> <li>• Prompts for the start and stop mode definition</li> <li>• Prompts for acceleration and deceleration times</li> </ul>
Protections	<ul style="list-style-type: none"> <li>• Prompts for current and torque limits</li> <li>• Prompts for the use of Run enable and Start enable signals</li> <li>• Prompts for the use of the emergency stop</li> <li>• Prompts for the Fault function selection</li> <li>• Prompts for the Auto reset functions selection</li> </ul>

Task name	Description
Constant Speeds	<ul style="list-style-type: none"> <li>• Prompts for the use of constant speeds</li> <li>• Prompts for constant speed values</li> </ul>
PID control	<ul style="list-style-type: none"> <li>• Prompts for PID settings</li> <li>• Prompts for the source of the process reference</li> <li>• Prompts for reference limits</li> <li>• Prompts for the source, limits and units of the process actual value</li> <li>• Defines the use of Sleep function</li> </ul>
PID Flow	<ul style="list-style-type: none"> <li>• Prompts for the use of flow calculation.</li> <li>• Prompts for units.</li> <li>• Prompts for maximum flow.</li> <li>• Prompts for transmitter signals.</li> </ul>
Low Noise Set-up	<ul style="list-style-type: none"> <li>• Prompts for the switching frequency</li> <li>• Prompts for the definition of Flux optimization</li> <li>• Prompts for the use of Critical speeds</li> </ul>
Panel Display	<ul style="list-style-type: none"> <li>• Prompts for display variable and unit settings</li> </ul>
Timed Functions	<ul style="list-style-type: none"> <li>• Prompts for the use of Timed functions</li> </ul>
Outputs	<ul style="list-style-type: none"> <li>• Prompts for the signals indicated through the relay outputs</li> <li>• Prompts for the signals indicated through the analogue outputs AO1 and AO2. Sets the minimum, maximum, scaling and inversion values.</li> </ul>
Serial Communication	<ul style="list-style-type: none"> <li>• Prompts for communication settings.</li> <li>• Prompts for control access settings.</li> </ul>

## Changed parameters mode

The Changed parameters mode is used for viewing changed parameters. The mode shows those parameters whose values differ from the default values of the application macro currently in use.

To access the Changed parameters mode, follow these steps:

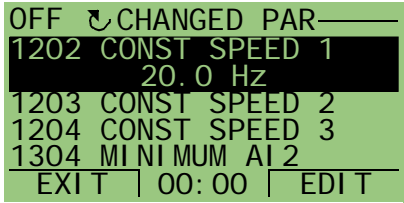1	Press MENU to go to the main menu.		
2	Select CHANGED PAR with the UP/DOWN keys and press ENTER.	 	
3	A list of the changed parameters is displayed. Press EXIT to exit the Changed parameters mode, and again to return to the main menu.		

## Drive parameter backup mode

Parameter backup mode is used to export parameters from one drive to another or to make a backup of the drive parameters. Uploading to panel stores all parameters, including two user sets and an override (see [Group 17: OVERRIDE](#)) set, to the drive control panel (operator keypad). The full set, partial parameter set (application), user sets and override set can then be downloaded from the control panel to another drive or the same drive.

The control panel memory is non-volatile and does not depend on the panel battery.

Depending on the motor and application, the following options are available in the Drive parameter backup mode:

- **UPLOAD TO PANEL** – Copies all parameters from the drive to the control panel. This includes all defined user parameter sets, override parameter set and internal (not adjustable by the user) parameters such as those created by the ID Run).
- **BACKUP INFO** – Shows the following information about the drive whose parameters have been uploaded to the panel: drive type, drive rating and FW (firmware) version.
- **DOWNLOAD FULL SET** – Restores the full parameter set from the control panel to the drive. This writes all parameters, including the internal non-user-adjustable motor parameters, to the drive. It does not include the user parameter sets or the override parameter set.

---

**Note:** Use the Download full set function only to restore a drive from a backup if something has gone wrong or to transfer parameters to systems that are identical to the original system.

---


- **DOWNLOAD APPLICATION** – Copies a partial parameter set (part of the full set) from the control panel to the drive. The partial set does **not** include user sets, override set, internal motor parameters, parameters 9905...9909, 1605, 1607, 5201, nor any [Group 51: EXT COMM MODULE](#) and [Group 53: EFB PROTOCOL](#) parameters. This is recommended when using the same application for drives of different sizes.
- **DOWNLOAD USER SET 1** – Copies the parameters in user set 1 from the control panel to the drive. A user set includes

*Group 99: START-UP DATA* parameters and the internal motor parameters.


User set 1 must be first saved using parameter 9902 APPLIC MACRO and then uploaded to the control panel before downloading is possible.

- DOWNLOAD USER SET 2 – Copies the parameters in user set 2 from the control panel to the drive. As DOWNLOAD USER SET 1 above.
- DOWNLOAD OVERRIDE SET – Copies the parameters in the override set from the control panel to the drive.

The override must be first saved (automatically, as defined by *Group 17: OVERRIDE*) and then uploaded to the control panel before downloading is possible.

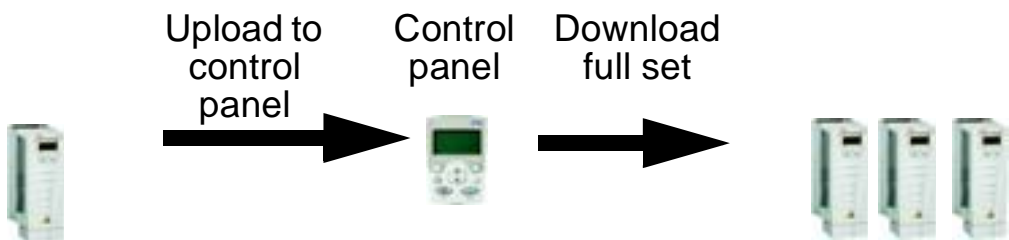


Downloading the full set of parameters from one drive to similar drives using the same application running identical motors

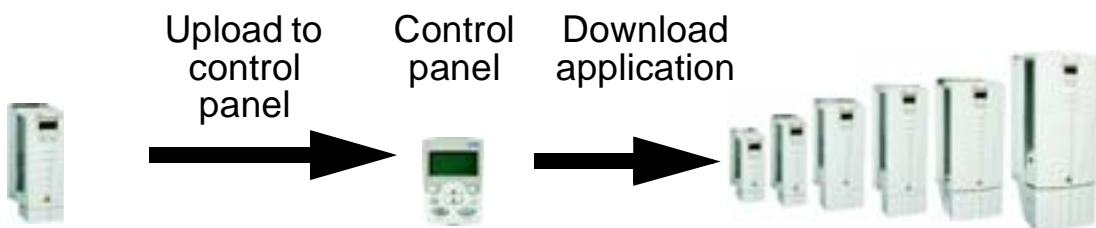


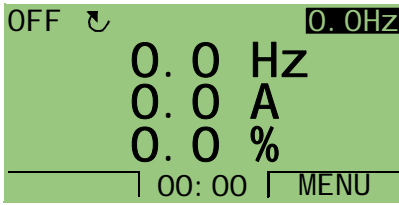



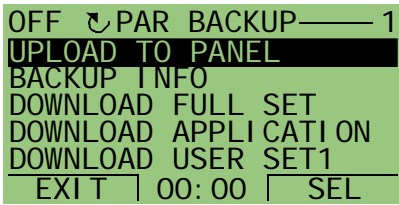

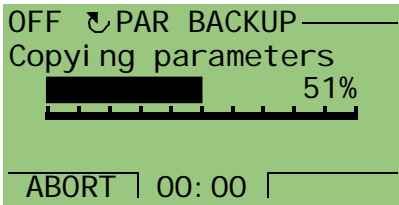

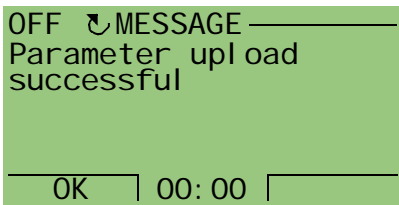
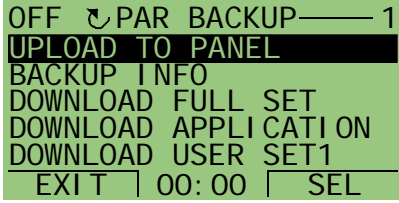
Downloading the same application to different drive sizes using the same application

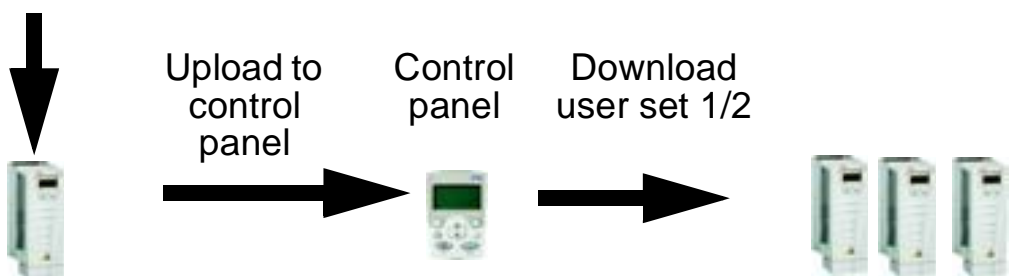Save user set 1/2 (par. 9902) to drive




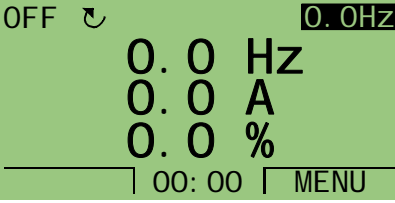





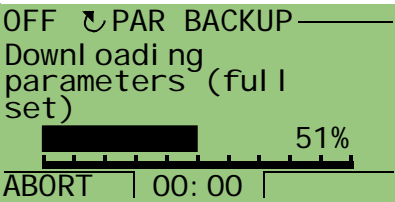

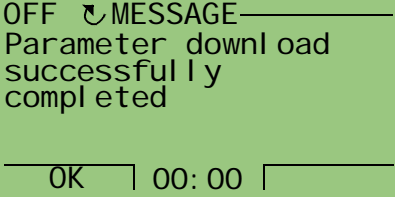
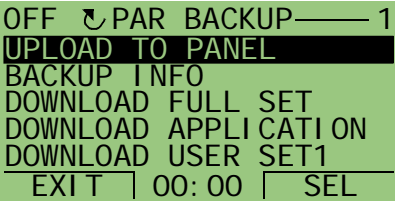
Downloading the parameters in a user set from one drive to similar drives using the same application running identical motors

To upload parameters to the control panel, follow these steps:


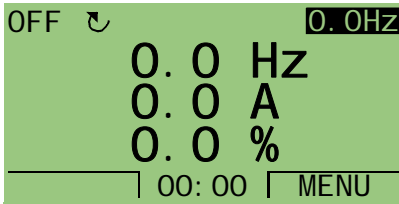



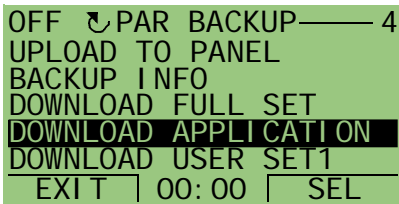

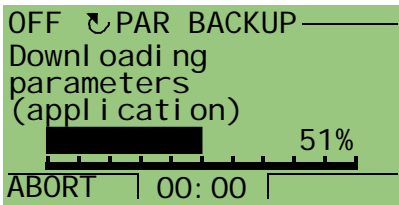

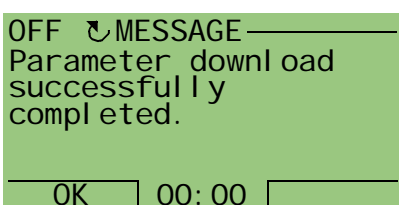
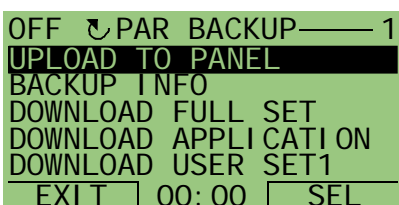
1	Press MENU to go to the main menu.		
2	Select PAR BACKUP with the UP/DOWN keys and press ENTER.		
3	Scroll to UPLOAD TO PANEL and press SEL. Note that the drive has to be in the OFF mode for uploading parameters.		
4	Text “Copying parameters” and a progress diagram are displayed. Press ABORT if you want to stop the process.		
5	Text “Parameter upload successful” is displayed. Press OK to return to the PAR BACKUP menu. Press EXIT twice to go to the main menu. Now you can disconnect the control panel.		 



To download the full set of parameters to a drive, follow these steps:


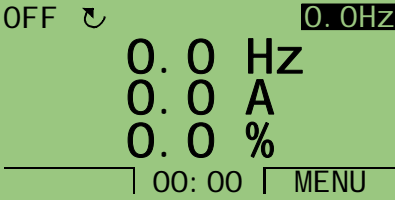



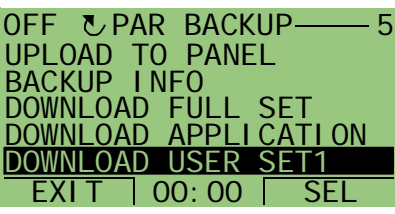

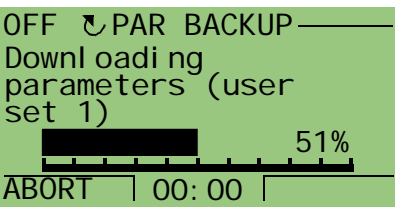

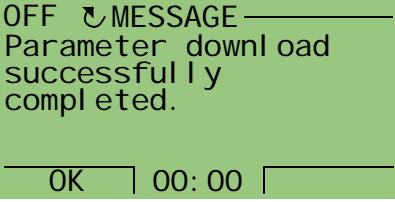
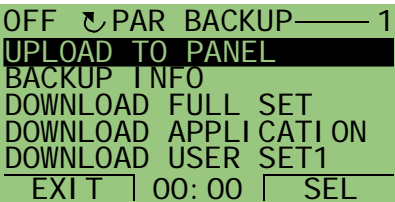
1	Press MENU to go to the main menu.		
2	Select PAR BACKUP with the UP/DOWN keys.		
3	Scroll to DOWNLOAD FULL SET and press SEL. Note that the drive has to be in the OFF mode for downloading parameters.		
4	Text “Downloading parameters (full set)” is displayed. Press ABORT if you want to stop the process.		
5	After the download stops, the message “Parameter download successfully completed.” is displayed. Press OK to return to the PAR BACKUP menu. Press EXIT twice to go to the main menu.		 

To download the application (partial parameter set) to a drive, follow these steps:

1	Press MENU to go to the main menu.		
2	Select PAR BACKUP with the UP/DOWN keys.		
3	Scroll to DOWNLOAD APPLICATION and press SEL. Note that the drive has to be in the OFF mode for downloading applications.		
4	Text “Downloading parameters (application)” is displayed. Press ABORT if you want to stop the process.		
5	Text “Parameter download successfully completed.” Press OK to return to PAR BACKUP menu. Press EXIT twice to go to the main menu.		 

**Note:** If upload or download of parameters is aborted, the partial parameter set is not implemented.


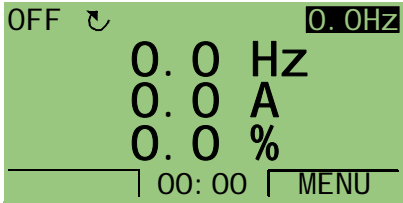





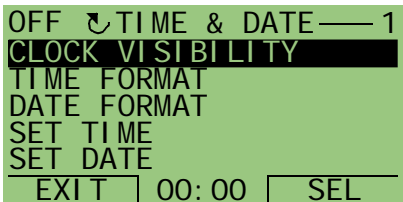









To download the user set 1, user set 2 or override set to a drive, follow these steps:





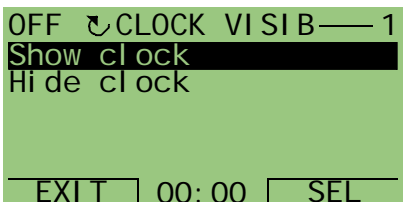

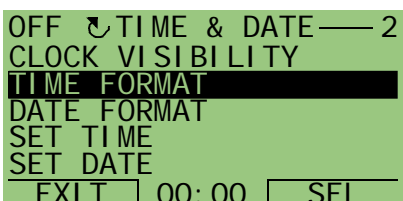

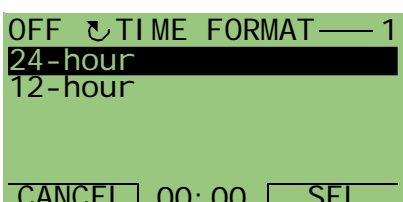










1	Press MENU to go to the main menu.		
2	Select PAR BACKUP with the UP/DOWN keys.		
3	Scroll to DOWNLOAD USER SET1 / USER SET2 / OVERR SET and press SEL. Note that the drive has to be in the OFF mode for downloading user sets.		
4	Text “Downloading parameters (user set 1 / user set 2 / override set)” is displayed. Press ABORT if you want to stop the process.		
5	After the download stops, the message “Parameter download successfully completed.” is displayed. Press OK to return to the PAR BACKUP menu. Press EXIT twice to go to the main menu.		 



## Time and date mode

The Time and date mode is used for setting the time and date for the internal clock of the ACH550. In order to use the timed functions of the ACH550, the internal clock has to be set first. Date is used to determine weekdays. It is shown in Fault logs.

To set the clock, follow these steps:

1	Press MENU to go to the main menu.		
2	Scroll to TIME & DATE with the UP/DOWN keys and press ENTER to go to the Time and date mode.	 	
3	Scroll to CLOCK VISIBILITY with the UP/DOWN keys and press SEL to change the visibility of the clock.	 	
4	Scroll to SHOW CLOCK with the UP/DOWN keys and press SEL to make the clock visible.	 	
5	Scroll to TIME FORMAT with the UP/DOWN keys and press SEL.	 	
6	The time formats are displayed. Select a format with the UP/DOWN keys and press SEL to confirm the selection.	 	

















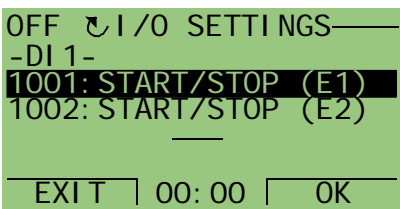
7	Scroll to DATE FORMAT with the UP/DOWN keys and press SEL.	  	OFF ↻ TIME & DATE — 3 CLOCK VISIBILITY TIME FORMAT <b>DATE FORMAT</b> SET TIME SET DATE EXIT   00:00   SEL
8	The date formats are displayed. Select a format with the UP/DOWN keys and press OK to confirm the selection.	  	OFF ↻ DATE FORMAT — 1 <b>dd. mm. yy</b> mm/dd/yy dd. mm. yyyy mm/dd/yyyy CANCEL   00:00   SEL
9	Scroll to SET TIME with the UP/DOWN keys and press SEL.	  	OFF ↻ TIME & DATE — 4 CLOCK VISIBILITY TIME FORMAT DATE FORMAT <b>SET TIME</b> SET DATE EXIT   00:00   SEL
10	Change the hours and minutes with the UP/DOWN keys and press OK to save the values. The active value is highlighted in inverted colour.	  	OFF ↻ SET TIME — <b>00:00</b> CANCEL   OK
11	Scroll to SET DATE with the UP/DOWN keys and press SEL.	  	OFF ↻ TIME & DATE — 5 CLOCK VISIBILITY TIME FORMAT DATE FORMAT SET TIME <b>SET DATE</b> EXIT   00:00   SEL
12	Change the days, months and year with the UP/DOWN keys and press OK to save the values. The active value is highlighted in inverted colour.	  	OFF ↻ SET DATE — <b>01. 01. 08</b> CANCEL   00:00   OK
13	Scroll to DAYLIGHT SAVING with the UP/DOWN keys and press SEL.		OFF ↻ TIME & DATE — 6 TIME FORMAT DATE FORMAT SET TIME SET DATE <b>DAYLIGHT SAVING</b> EXIT   00:00   SEL
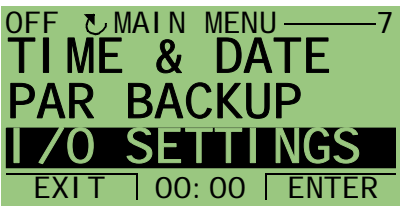
<p>14</p>	<p>To disable automatic clock transitions according to the daylight saving changes, select Off with the UP/DOWN keys and press OK. To enable automatic clock transitions, select the country or area whose daylight saving changes are followed and press OK. (If you press HELP, you can view the beginning and end dates of the period during which daylight saving time is used in each country or area.)</p>		<pre> OFF ↻ DAYLIGHT SAV — 1 Off EU US Australia1: NSW, Vi ct. . Australia2: Tasmani a. . EXIT   00:00   SEL  OFF ↻ HELP————— EU: On: Mar 1ast Sunday Off: Oct 1ast Sunday  US: EXIT   00:00   </pre>
<p>15</p>	<p>Press EXIT twice to return to the main menu.</p>		<pre> OFF ↻ TIME &amp; DATE—— 6 TIME FORMAT DATE FORMAT SET TIME SET DATE DAYLIGHT SAVING EXIT   00:00   SEL </pre>
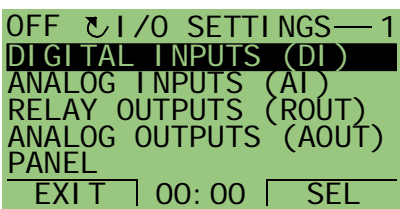
## I/O settings mode

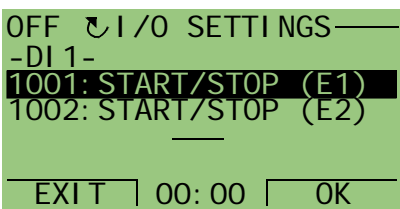The I/O settings mode is used for viewing and editing the I/O settings.

To view and edit the I/O settings, follow these steps:


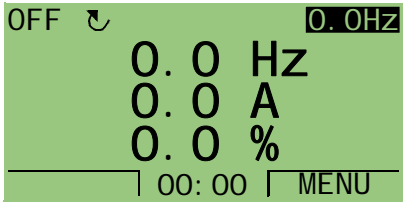



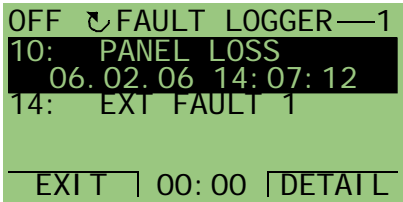

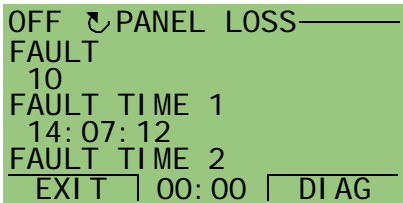
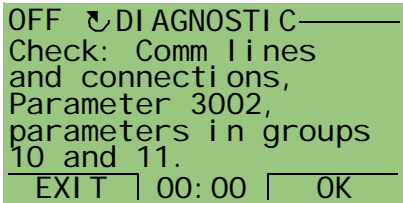
1	Press MENU to go to the main menu.		
2	Scroll to I/O SETTINGS with the UP/DOWN keys and press ENTER.	 	
3	Scroll to the I/O setting you want to view with the UP/DOWN keys and press SEL.	 	
4	Select the setting you want to view with the UP/DOWN keys and press OK.	 	
5	You can change the value with the UP/DOWN keys and save it by pressing SAVE. If you do not want to change the setting, press CANCEL.	  	
6	Press EXIT three times to return to the main menu.		

## Fault logger mode

The Fault logger mode is used for viewing faults. You can:

- view the drive fault history of maximum ten faults (after a power off, only the three latest faults are kept in the memory)
- see the details of the three latest faults (after a power off, the details of only the most recent fault is kept in the memory)
- read the help text for the fault.

To view the faults, follow the steps below. For more information on faults, see section [Correcting faults](#) on page 371.

1	Press MENU to go to the main menu.		
2	Scroll to FAULT LOGGER with the UP/DOWN keys and press ENTER to go to the Fault logger mode.		
3	The display shows the fault log starting with the latest fault. The number on the row is the fault code (see the listing on page 371). To see the details of a fault, select it with the UP/DOWN keys and press DETAIL.		
4	Scroll the details with the UP/DOWN keys. To show the help text, press DIAG. Scroll the help text with the UP/DOWN keys. After reading the help, press OK to go back to the previous display. Press EXIT three times to return to the main menu.		 



# Application macros and wiring

---

## What this chapter contains

This chapter contains the application macros used for defining a group of parameters. Macros change a group of parameters to new, predefined values. Use macros to minimise the need for manual editing of parameters.


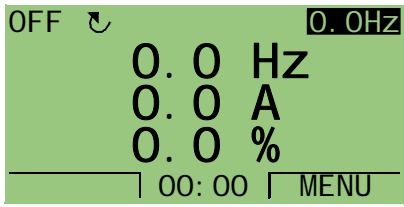



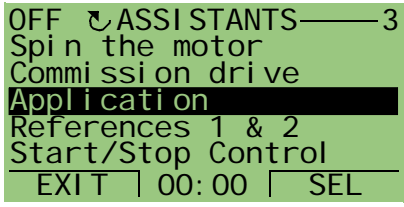

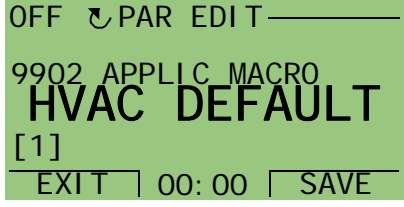

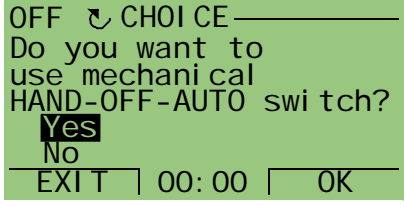
## Applications

The following applications are included in this chapter:

1. HVAC default (for typical BMS [Building Management System] applications)
2. Supply fan
3. Return fan
4. Cooling tower fan
5. Condenser
6. Booster pump
7. Pump alternation
8. Internal timer
9. Internal timer with constant speeds
10. Floating point
11. Dual setpoint PID
12. Dual setpoint PID with constant speeds
13. E-bypass (USA only)
14. Hand control.

## Selecting an application macro

To select an application macro, follow these steps:

1	Press MENU to go to the main menu.		
2	Select ASSISTANTS with the UP/DOWN keys and press ENTER.		
3	Scroll to Application and press SEL.		
4	Select a macro with the UP/DOWN keys and press SAVE.		
5	<p>If you want to use the mechanical HAND-OFF-AUTO switch, press OK. If you do not want to use it, select No with the DOWN key and then press OK.</p> <p>To be able to use the switch, EXT1 (HAND) Start command must be connected to DI1 and EXT2 (AUTO) Start command to DI6.</p>		

## **Restoring defaults**

To restore the default factory settings, select the application macro HVAC default.

## 1. HVAC default

The HVAC default application macro is used e.g. for typical BMS applications.


The factory set configuration of inputs and outputs of the drive is as shown in the figure on page [97](#).

When using a direct speed reference in the AUTO mode, the speed reference must be connected to analogue input 1 (AI1) and the START command is given with digital input 1 (DI1). In the HAND/OFF mode, the speed reference and START command are given through the control panel (operator keypad).

If process PI(D) is used, the feedback signal must be connected to analogue input 2 (AI2). By default, the setpoint is set from the control panel, but it can also be changed to analogue input 1.

Process PI(D) must be commissioned and adjusted with parameters ([Group 40: PROCESS PID SET 1](#)) or using the PID control assistant (recommended).

### HVAC default for typical BMS applications

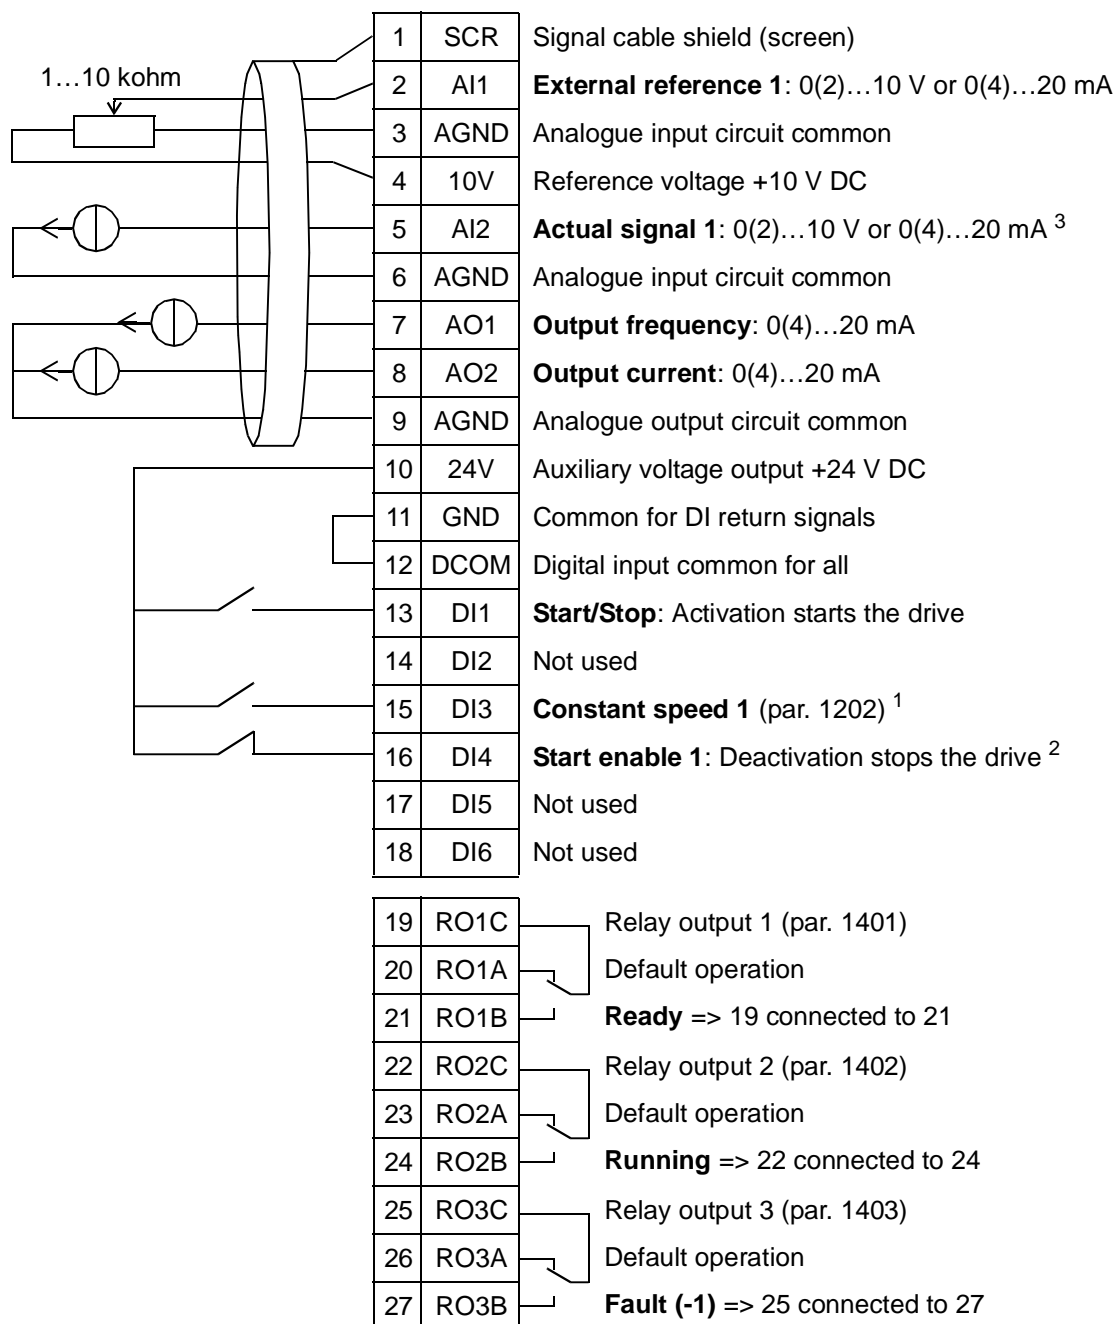

<sup>1</sup> Not available if PID is activated

<sup>2</sup> Disable/enable with parameter 1608


<sup>3</sup> The sensor for AI2 is powered externally (not shown in the figure). See the manufacturer's instructions. To use sensors supplied by the drive auxiliary voltage output, see page 124.

**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.


## 2. Supply fan

This application macro is for supply fan applications where the supply fan brings fresh air into the room according to the signals received from the transducer. See the figure below.

When using a direct speed reference in the AUTO mode, the speed reference must be connected to analogue input 1 (AI1) and the START command is given with digital input 1 (DI1). In the HAND/OFF mode, the speed reference and START command are given through the control panel (operator keypad). If process PI(D) is used, the feedback signal must be connected to analogue input 2 (AI2). By default, the setpoint is set from the control panel, but it can also be changed to analogue input 1. Process PI(D) must be commissioned and adjusted with parameters ([Group 40: PROCESS PID SET 1](#)) or using the PID control assistant (recommended).

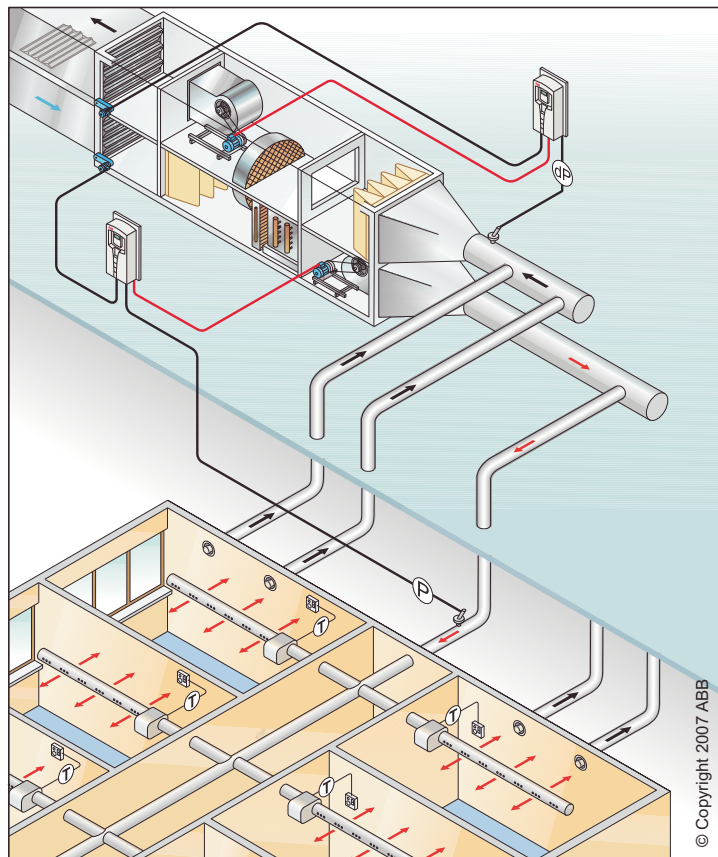

## Supply fan

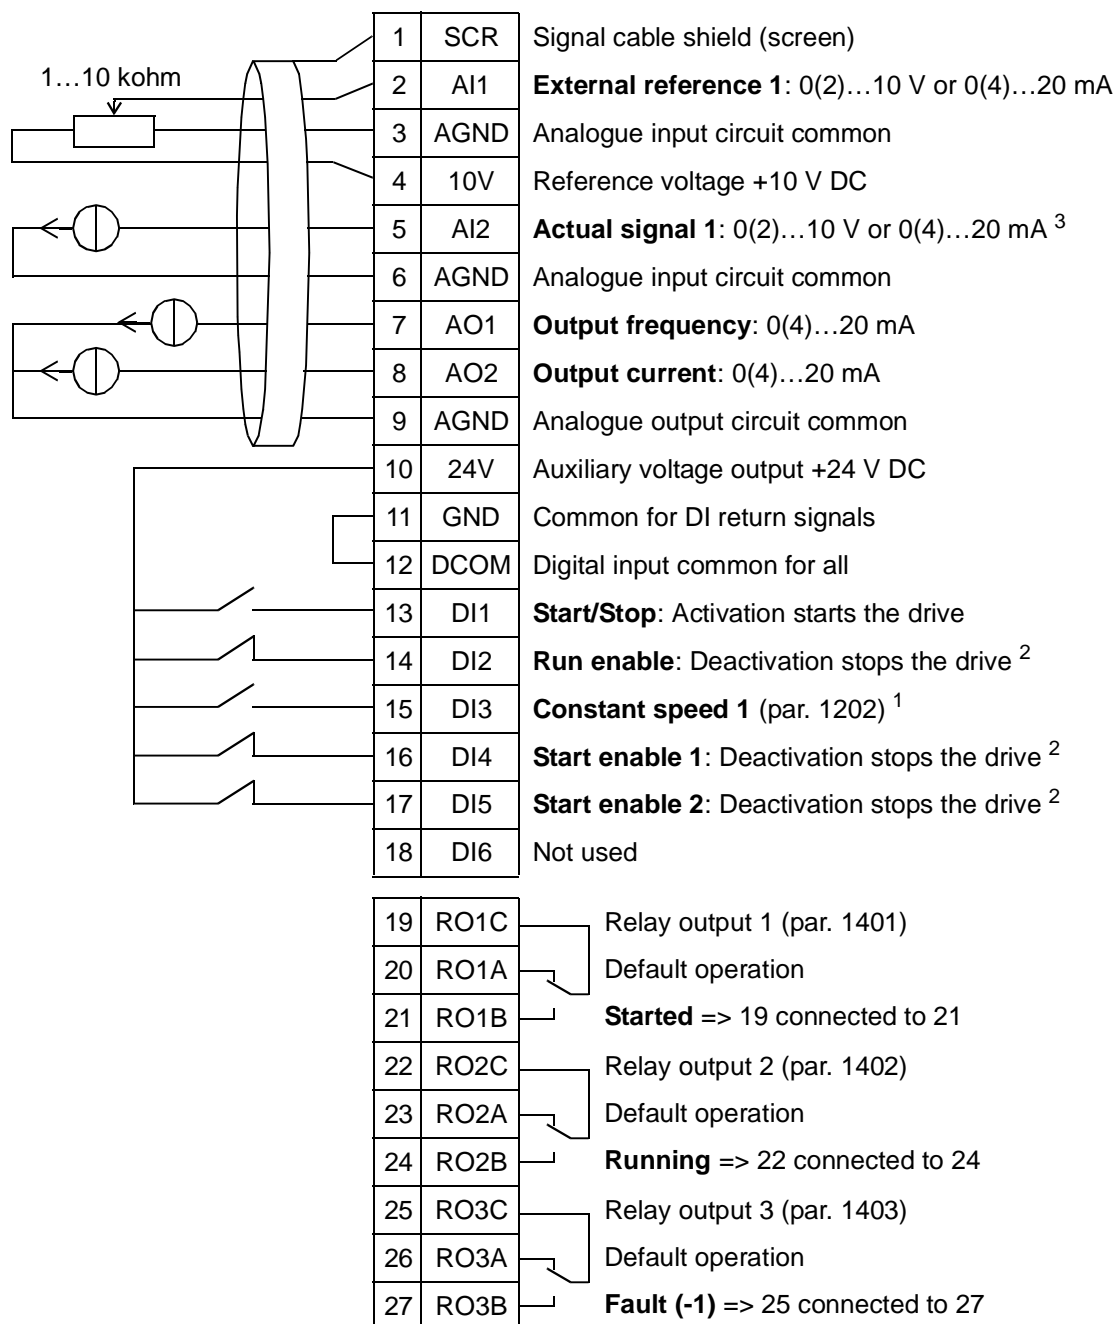

<sup>1</sup> Not available if PID is activated

<sup>2</sup> Disable with parameters 1601, 1608 and 1609


<sup>3</sup> The sensor for AI2 is powered externally (not shown in the figure). See the manufacturer's instructions. To use sensors supplied by the drive auxiliary voltage output, see page 124.

**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.

### 3. Return fan


This application macro is for return fan applications where the return fan takes air out of the room according to the signals received from the transducer. See the figure below.

When using a direct speed reference in the AUTO mode, the speed reference must be connected to analogue input 1 (AI1) and the START command is given with digital input 1 (DI1). In the HAND/OFF mode, the speed reference and START command are given through the control panel (operator keypad). If process PI(D) is used, the feedback signal must be connected to analogue input 2 (AI2). By default, the setpoint is set from the control panel, but it can also be changed to analogue input 1. Process PI(D) must be commissioned and adjusted with parameters ([Group 40: PROCESS PID SET 1](#)) or using the PID control assistant (recommended).

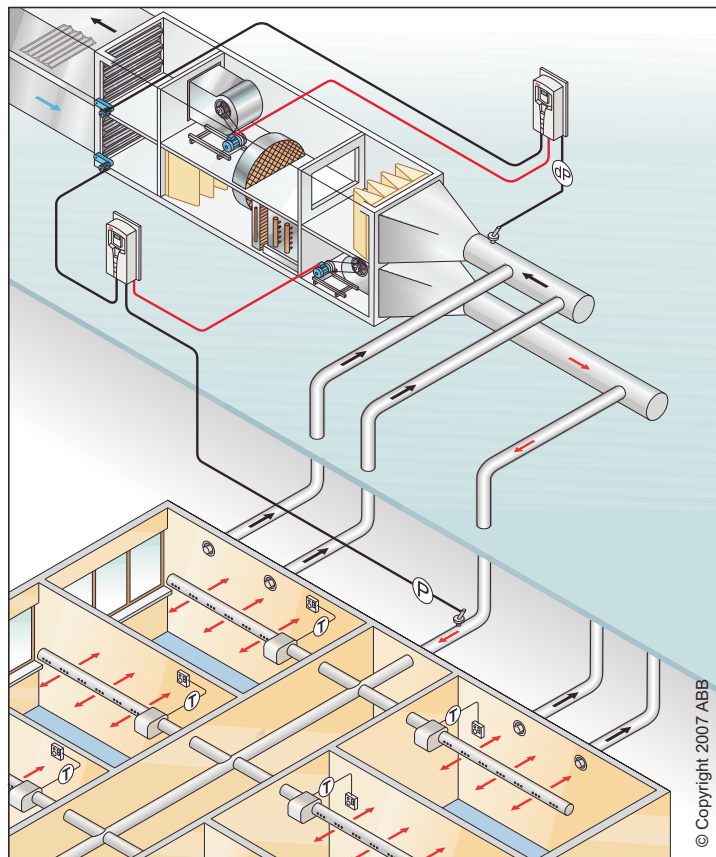



### Return fan

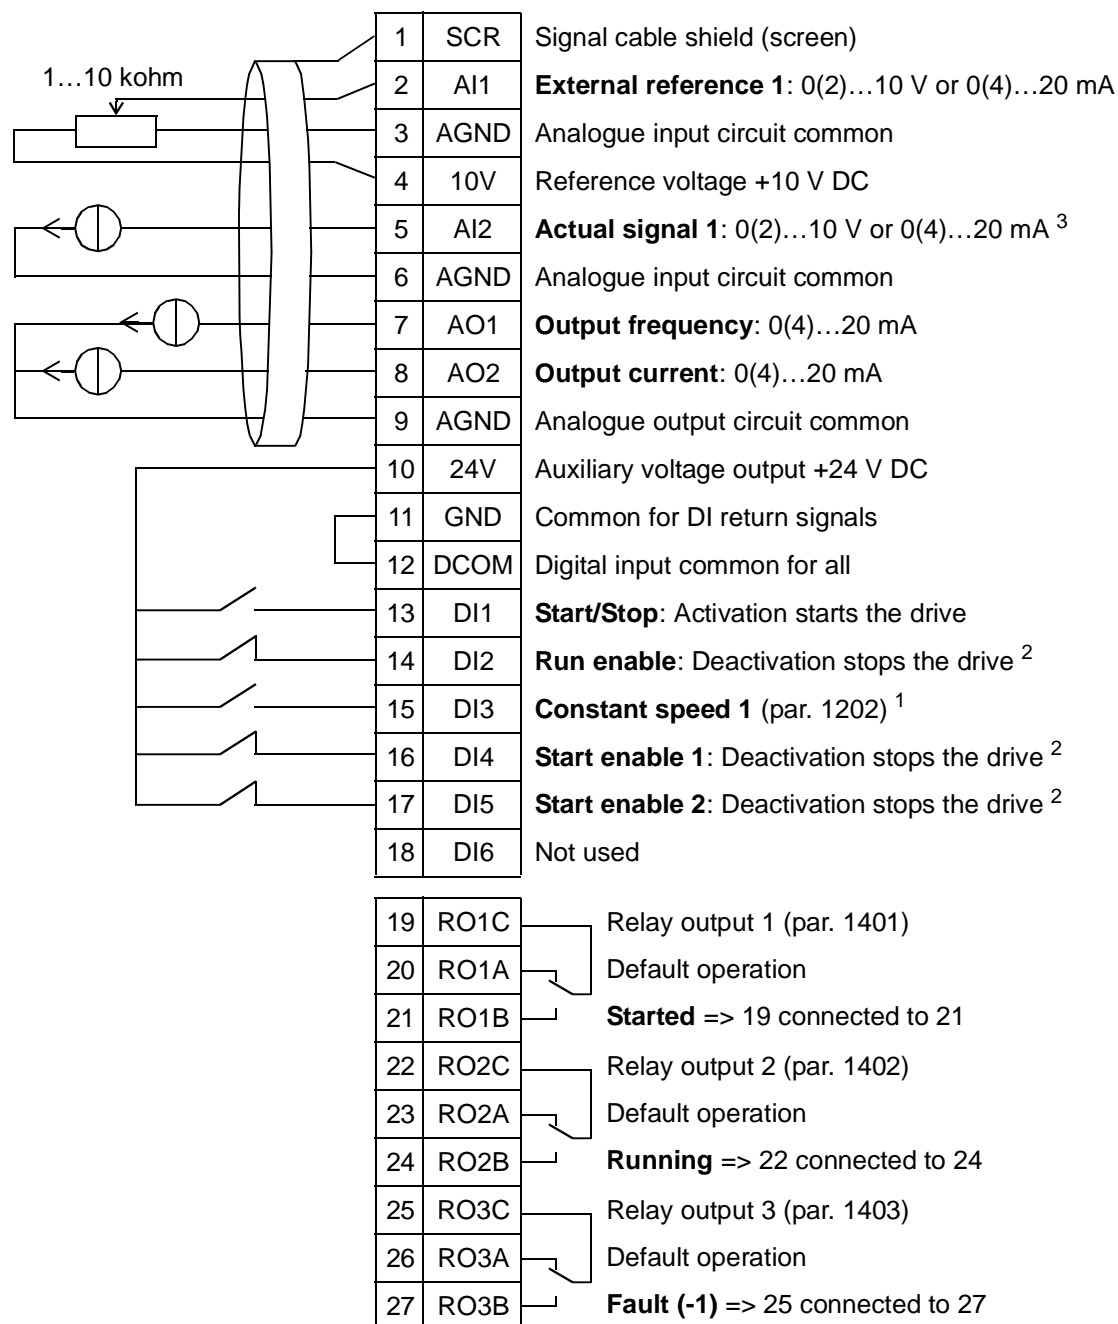

<sup>1</sup> Not available if PID is activated

<sup>2</sup> Disable/enable with parameters 1601, 1608 and 1609


<sup>3</sup> The sensor for AI2 is powered externally (not shown in the figure). See the manufacturer's instructions. To use sensors supplied by the drive auxiliary voltage output, see page 124.

**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.


## 4. Cooling tower fan

This application macro is for cooling tower fan applications where the fan speed is controlled according to the signals received from the transducer. See the figure below.

When using a direct speed reference in the AUTO mode, the speed reference must be connected to analogue input 1 (AI1) and the START command is given with digital input 1 (DI1). In the HAND/OFF mode, the speed reference and START command are given through the control panel (operator keypad). If process PI(D) is used, the feedback signal must be connected to analogue input 2 (AI2). By default, the setpoint is set from the control panel, but it can also be changed to analogue input 1. Process PI(D) must be commissioned and adjusted with parameters ([Group 40: PROCESS PID SET 1](#)) or using the PID control assistant (recommended).

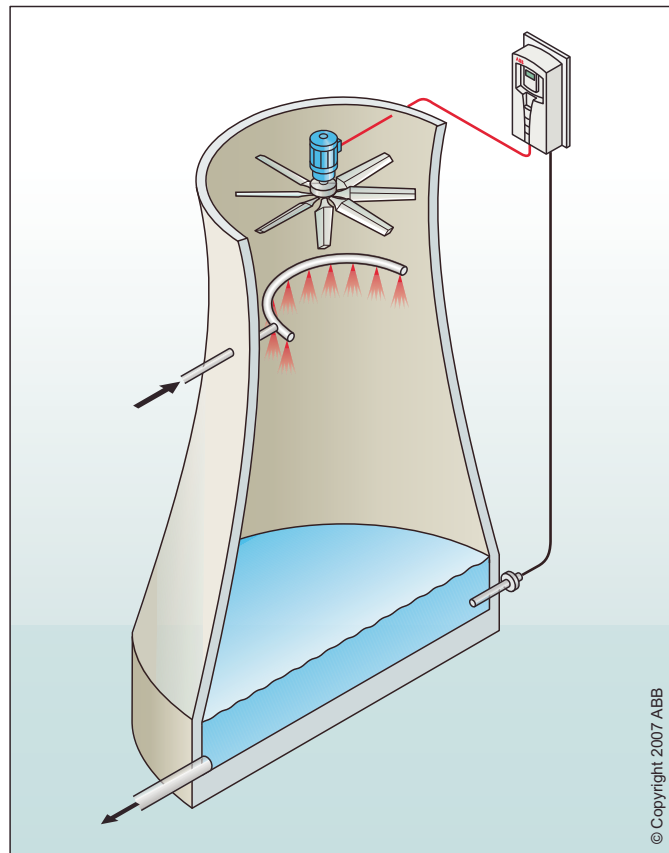

### Cooling tower fan

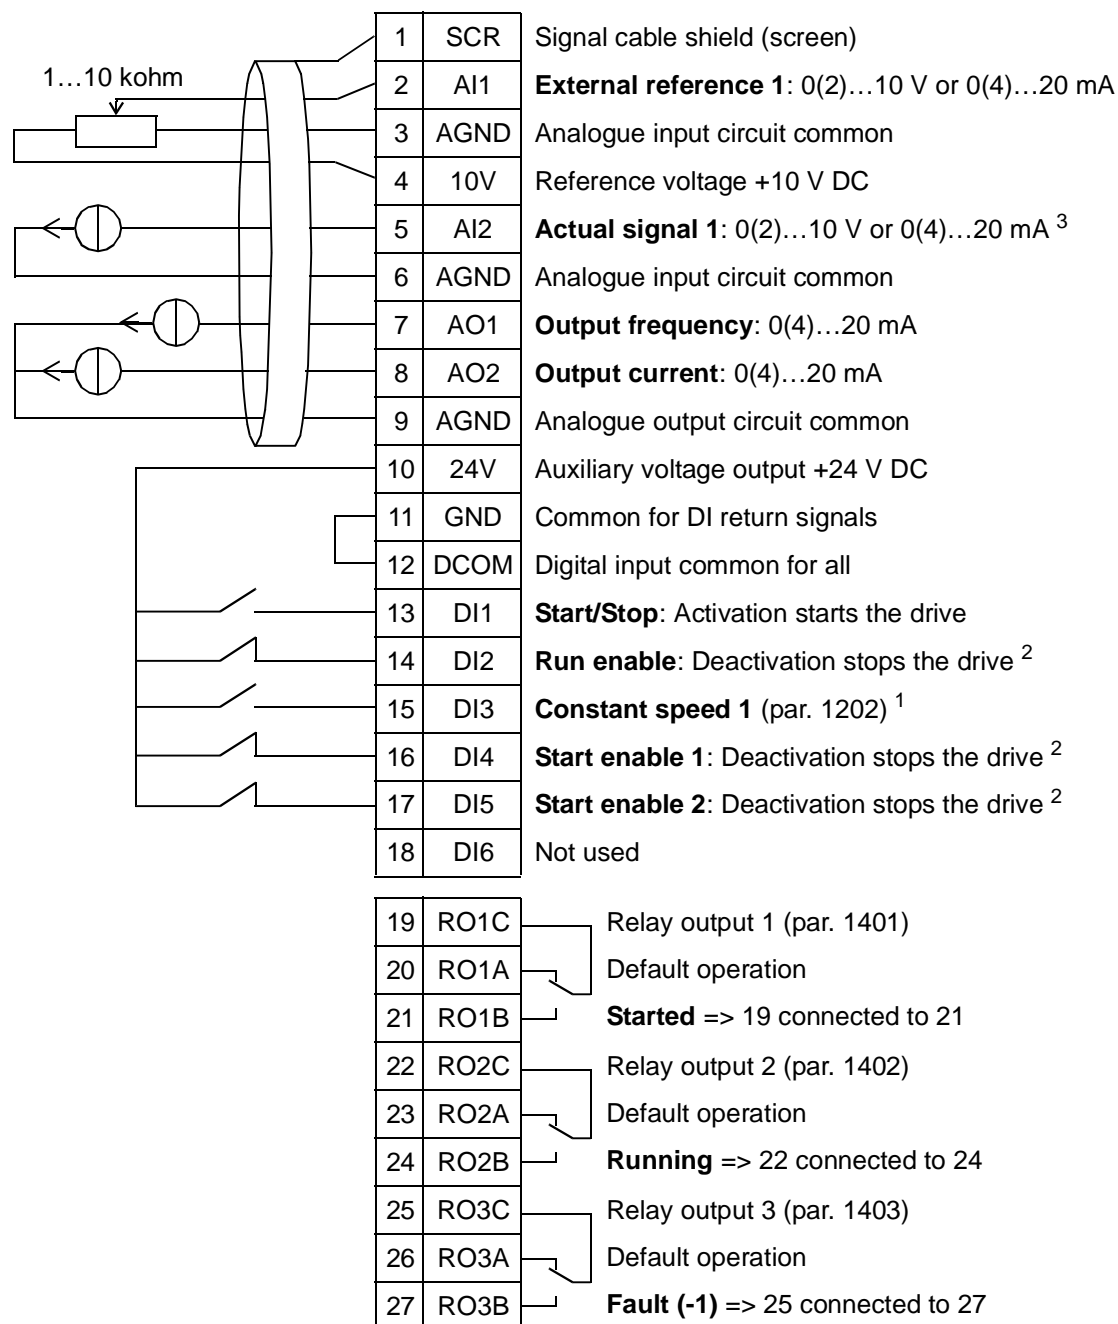

<sup>1</sup> Not available if PID is activated

<sup>2</sup> Disable/enable with parameters 1601, 1608 and 1609

<sup>3</sup> The sensor for AI2 is powered externally (not shown in the figure). See the manufacturer's instructions. To use sensors supplied by the drive auxiliary voltage output, see page 124.

**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.


## 5. Condenser

This application macro is for condenser and liquid cooler applications where the fan speed is controlled according to the signals received from the transducer. See the figure below.


When using a direct speed reference in the AUTO mode, the speed reference must be connected to analogue input 1 (AI1) and the START command is given with digital input 1 (DI1). In the HAND/OFF mode, the speed reference and START command are given through the control panel (operator keypad).

If process PI(D) is used, the feedback signal must be connected to analogue input 2 (AI2). By default, the setpoint is set from the control panel, but it can also be changed to analogue input 1.

Process PI(D) must be commissioned and adjusted with parameters ([Group 40: PROCESS PID SET 1](#)) or using the PID control assistant (recommended).

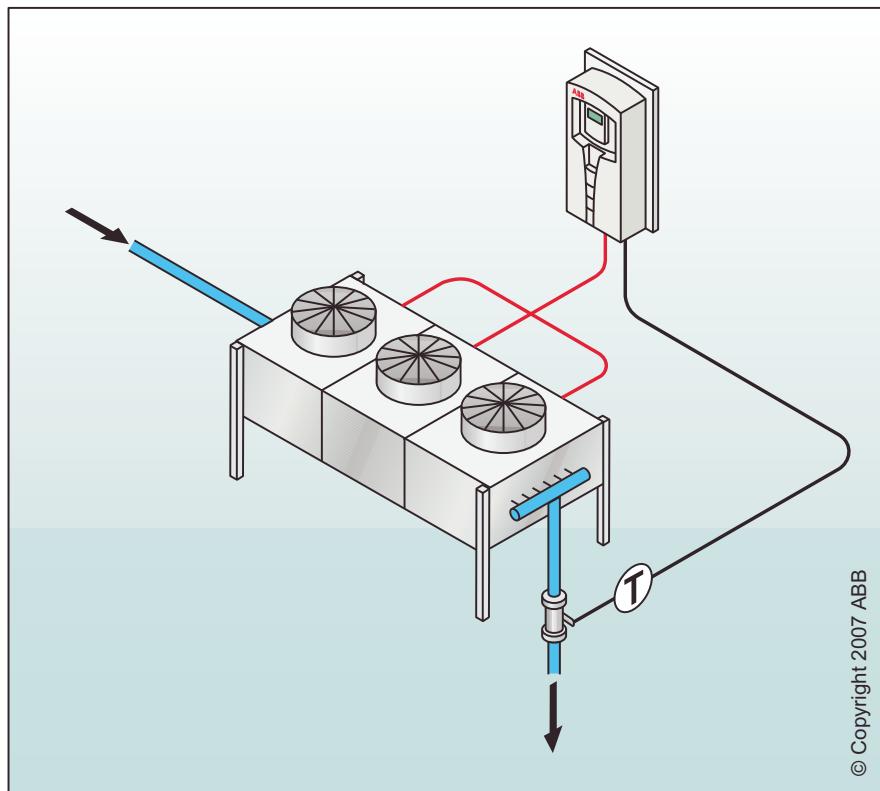

## Condenser

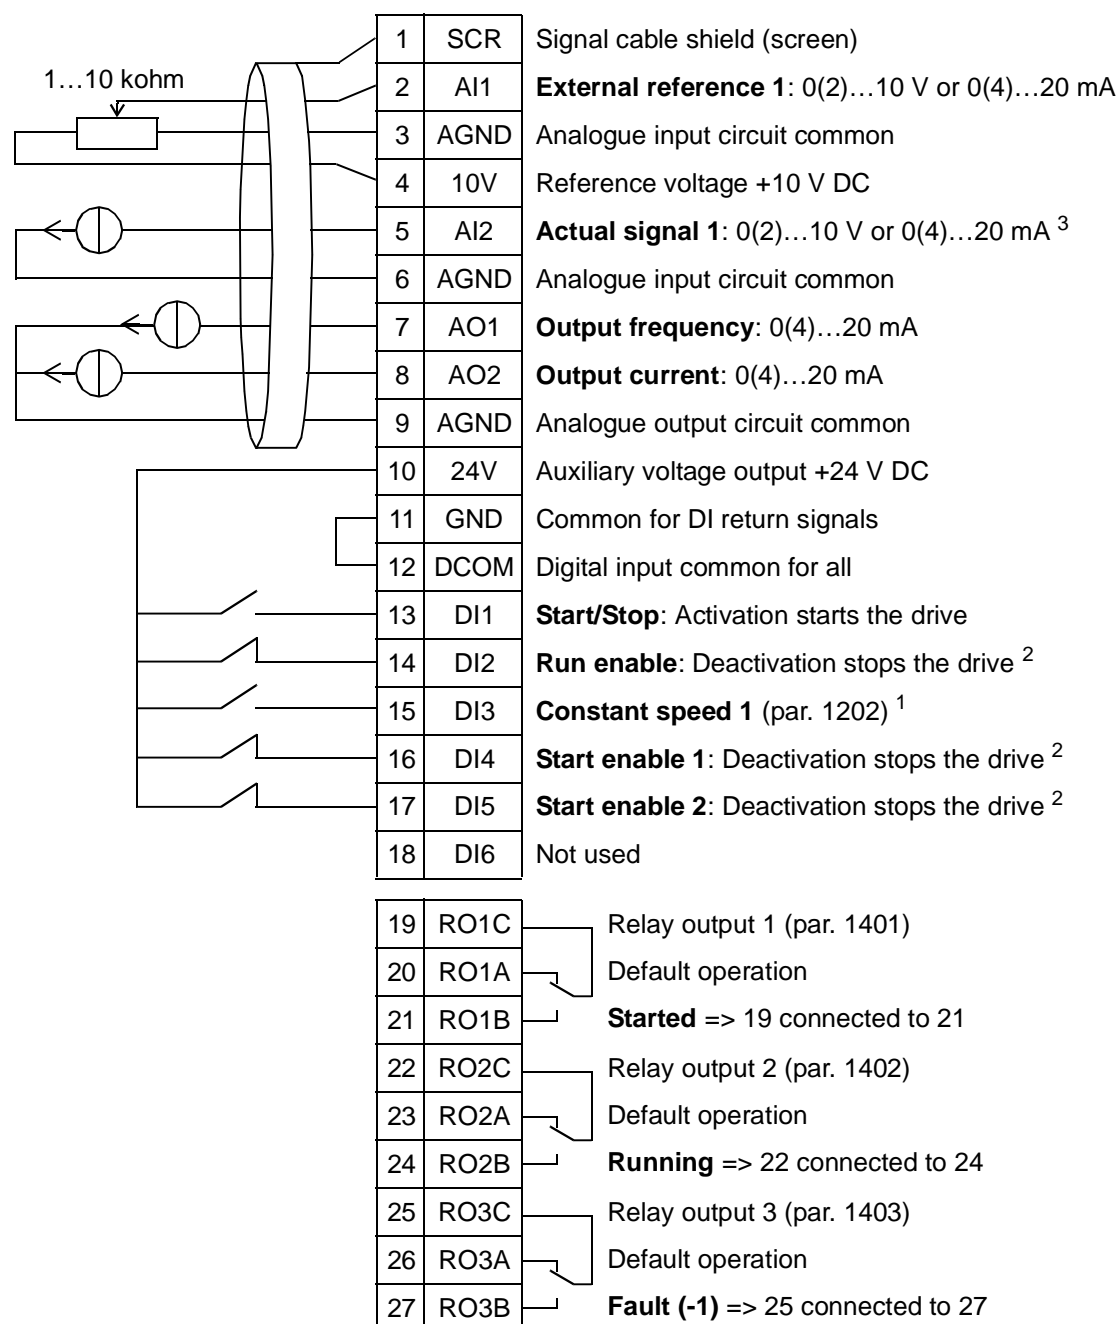

<sup>1</sup> Not available if PID is activated

<sup>2</sup> Disable/enable with parameters 1601, 1608 and 1609


<sup>3</sup> The sensor for AI2 is powered externally (not shown in the figure). See the manufacturer's instructions. To use sensors supplied by the drive auxiliary voltage output, see page 124.

**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.


## 6. Booster pump

This application macro is for booster pump applications where the pump speed is controlled according to the signal received from the transducer. See the figure below.

When using a direct speed reference in the AUTO mode, the speed reference must be connected to analogue input 1 (AI1) and the START command is given with digital input 1 (DI1). In the HAND/OFF mode, the speed reference and START command are given through the control panel (operator keypad). If process PI(D) is used, the feedback signal must be connected to analogue input 2 (AI2). By default, the setpoint is set from the control panel, but it can also be changed to analogue input 1. Process PI(D) must be commissioned and adjusted with parameters ([Group 40: PROCESS PID SET 1](#)) or using the PID control assistant (recommended).

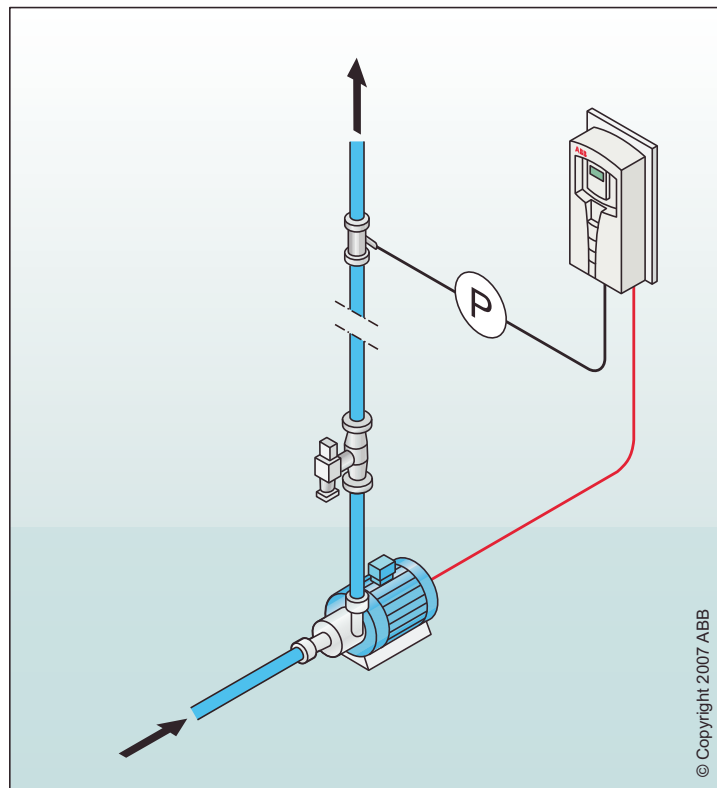

### Booster pump

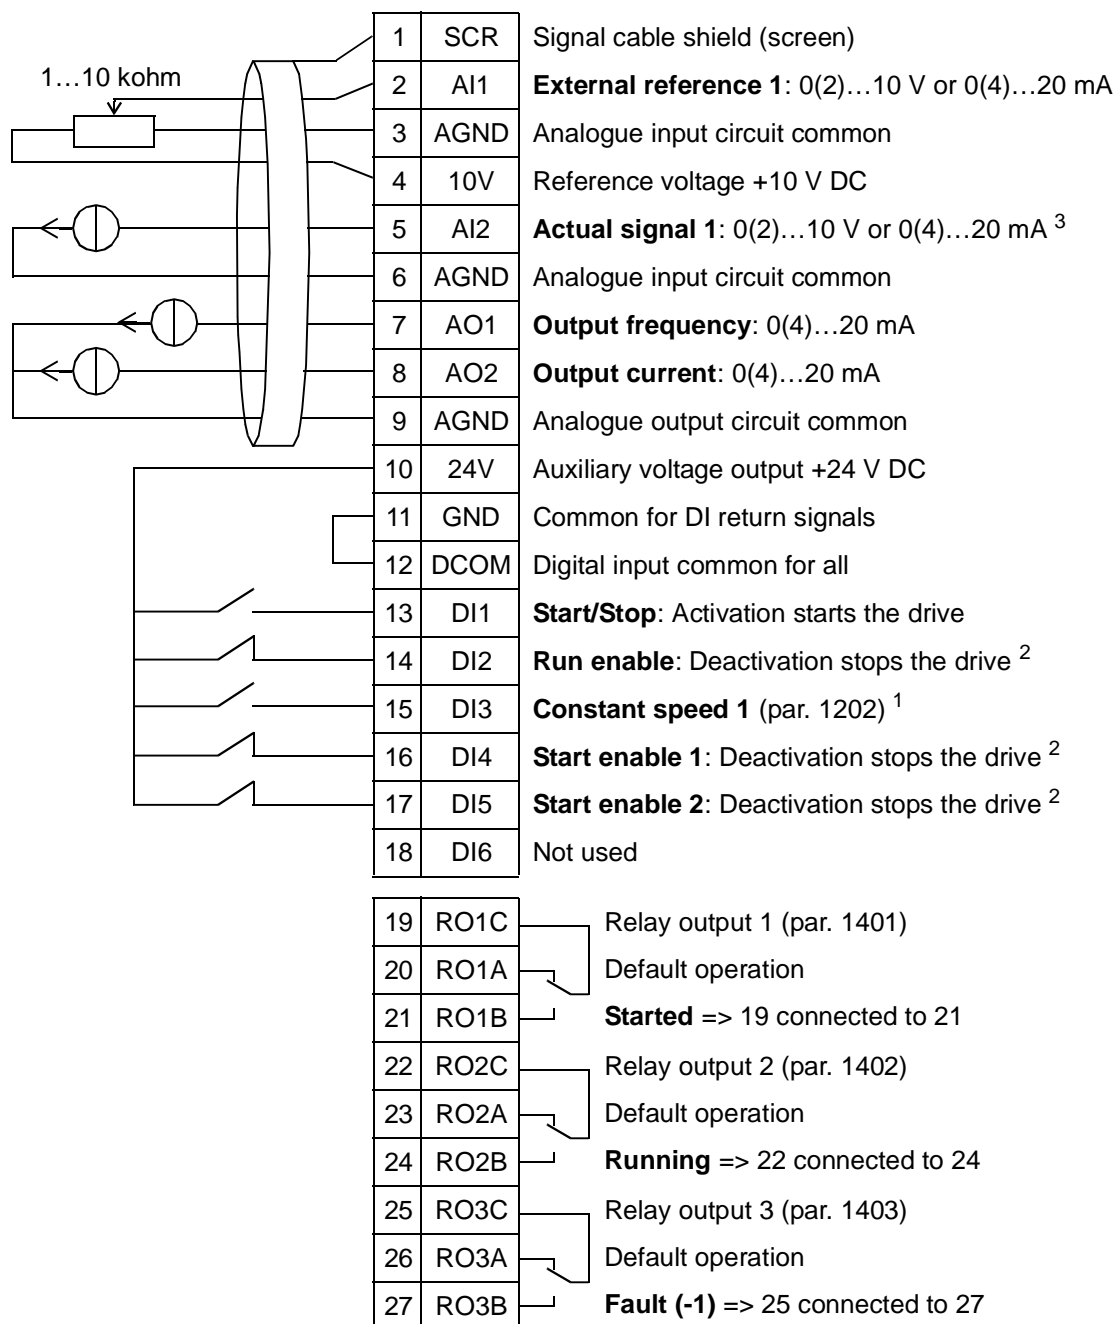

<sup>1</sup> Not available if PID is activated

<sup>2</sup> Disable/enable with parameters 1601, 1608 and 1609


<sup>3</sup> The sensor for AI2 is powered externally (not shown in the figure). See the manufacturer's instructions. To use sensors supplied by the drive auxiliary voltage output, see page 124.

**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.

## 7. Pump alternation


This application macro is intended for pump alternation applications, usually used in booster stations in buildings. The pressure in the network is adjusted by changing the speed of the pump according to the signal received from the pressure transducer and adding auxiliary pumps directly on-line when needed. By default, this macro can use one auxiliary pump. To use more auxiliary pumps, refer to parameter *Group 81: PFA CONTROL*. See the figure below.

When process PI(D) is used in the AUTO mode, the feedback signal must be connected to analogue input 2 (AI2) and the START command is given with digital input 1 (DI1). By default, the setpoint is set from the control panel (operator keypad), but it can also be given through the analogue input 1. Process PI(D) must be commissioned and adjusted with parameters (*Group 40: PROCESS PID SET 1*) or using the PID control assistant (recommended).

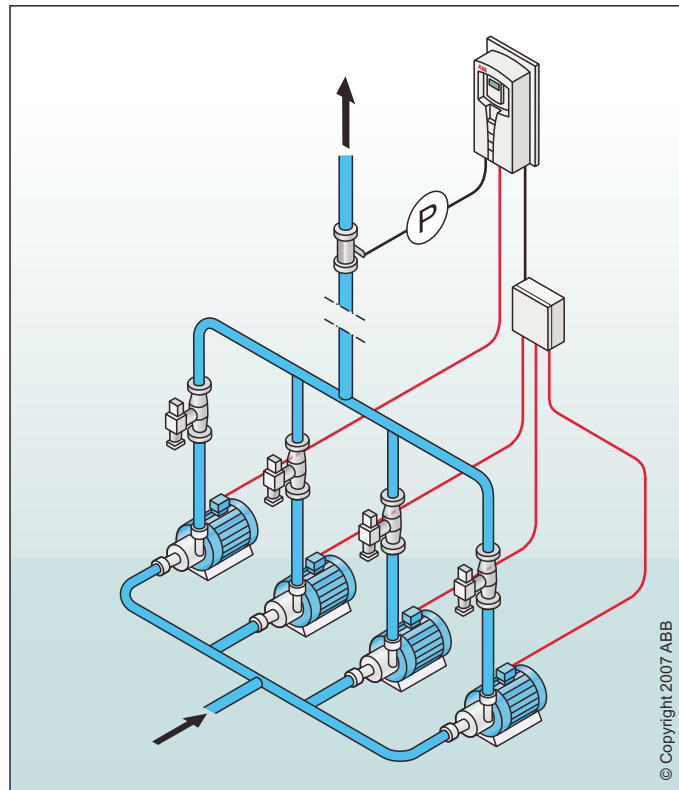



### Pump alternation

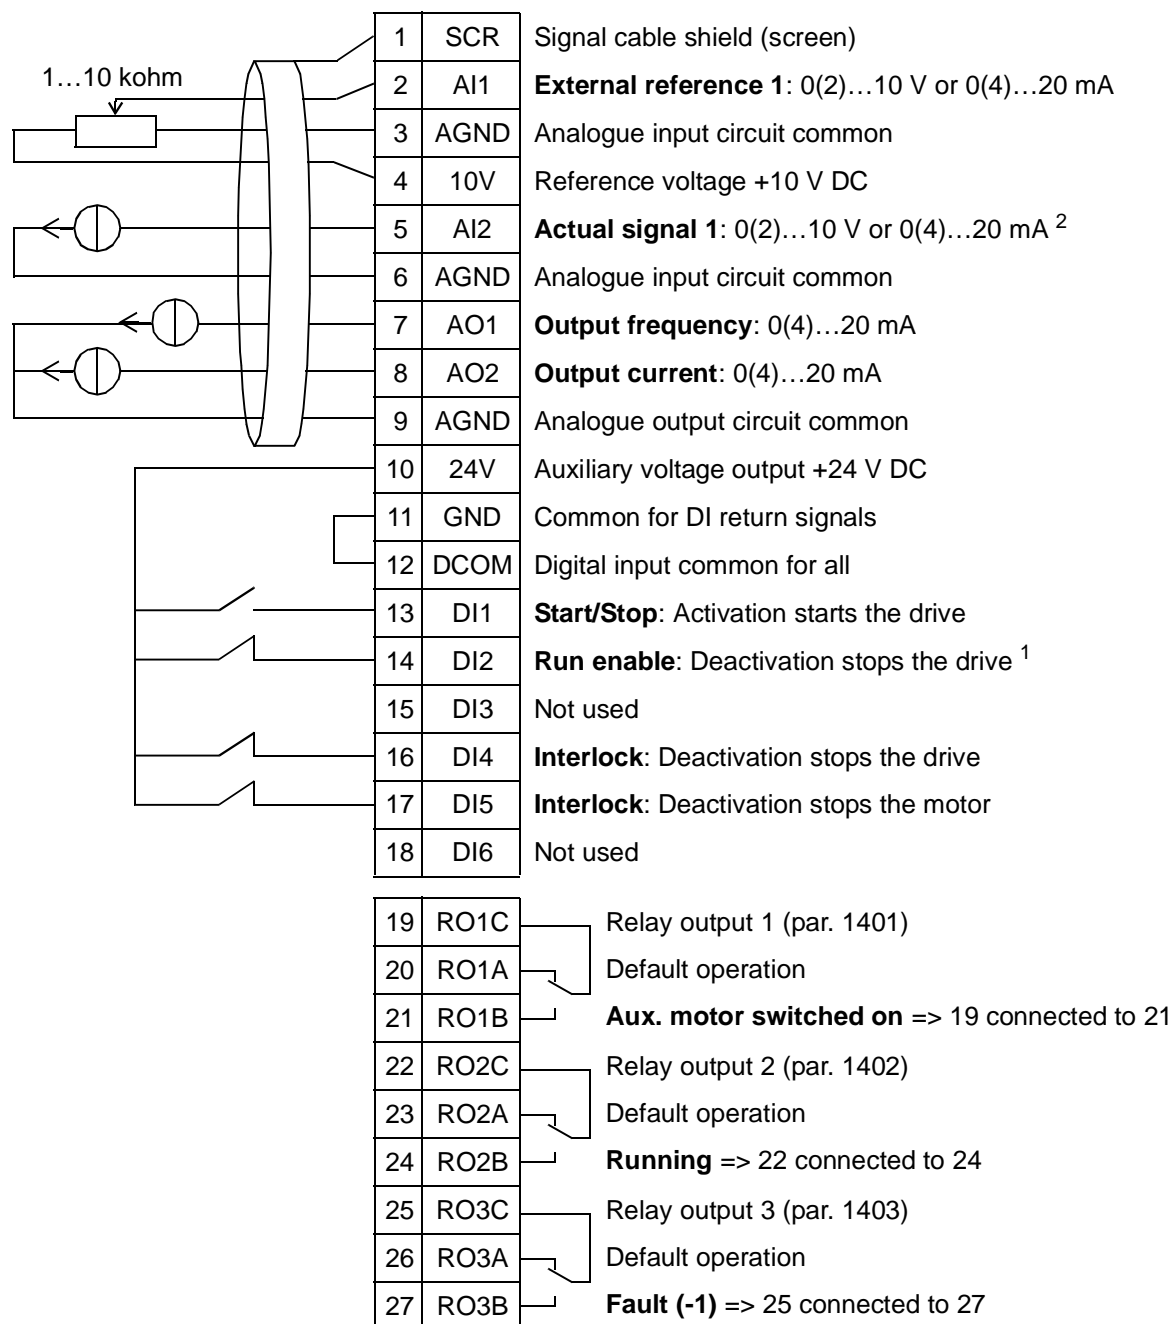

<sup>1</sup> Disable/enable with parameter 1601


<sup>2</sup> The sensor for AI2 is powered externally (not shown in the figure). See the manufacturer's instructions. To use sensors supplied by the drive auxiliary voltage output, see page 124.

**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.


## 8. Internal timer

This application macro is for applications where the motor is started and stopped with a built-in timer. This macro has also a boost function which operates the motor after digital input 3 (DI3) has been momentarily activated. An example of the timer usage is shown below. For further information see chapter [Real-time clock and timed functions](#).

When using a direct speed reference in the AUTO mode, the speed reference must be connected to analogue input 1 (AI1) and the START command is given with digital input 1 (DI1). In the HAND/OFF mode, the speed reference and START command are given through the control panel (operator keypad). If process PI(D) is used, the feedback signal must be connected to analogue input 2 (AI2). By default, the setpoint is set from the control panel, but it can also be changed to analogue input 1. Process PI(D) must be commissioned and adjusted with parameters ([Group 40: PROCESS PID SET 1](#)) or using the PID control assistant (recommended).

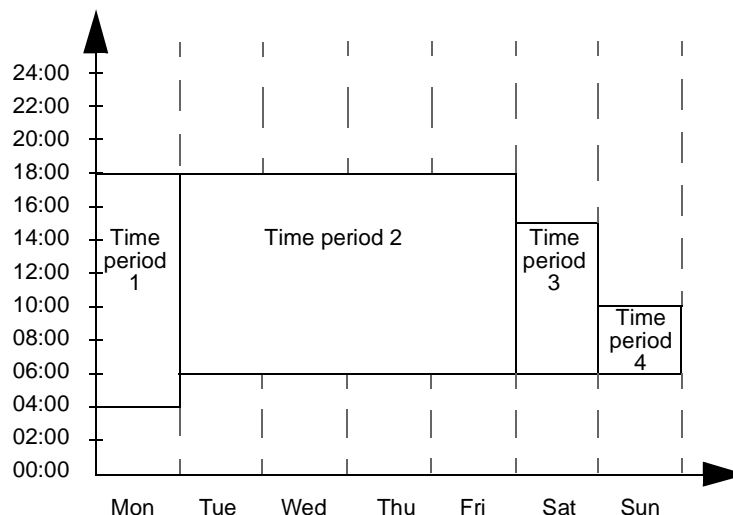

### Internal timer

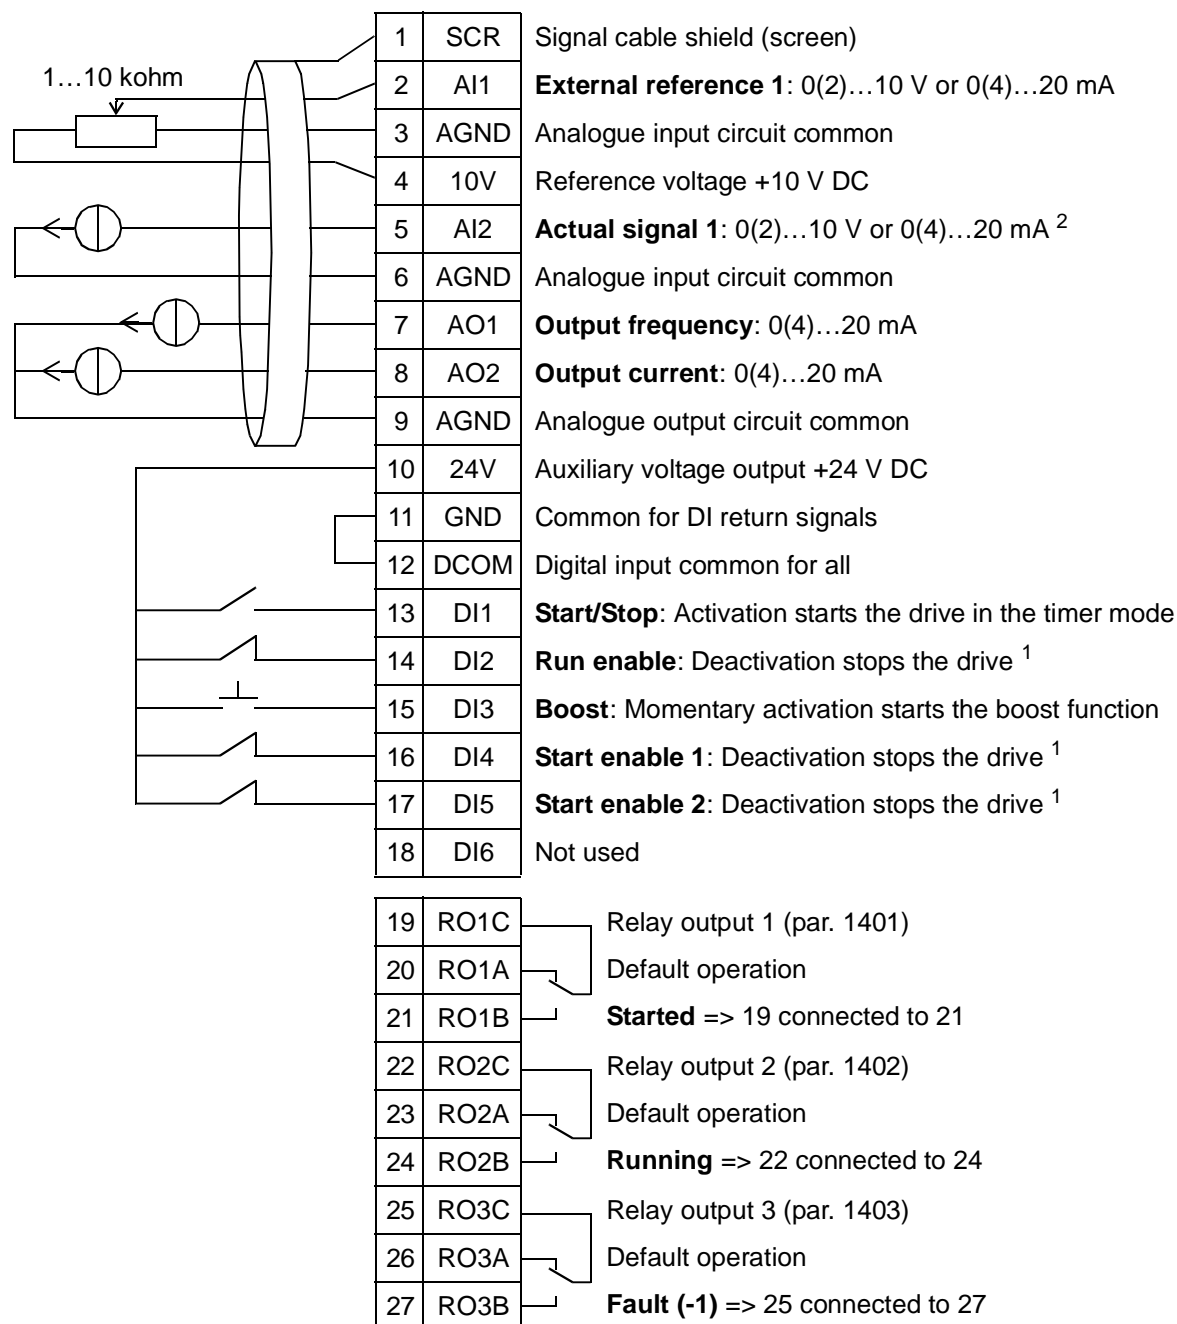


<sup>1</sup> Disable/enable with parameters 1601, 1608 and 1609

<sup>2</sup> The sensor for AI2 is powered externally (not shown in the figure). See the manufacturer's instructions. To use sensors supplied by the drive auxiliary voltage output, see page 124.

**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.



## Internal timer with constant speeds

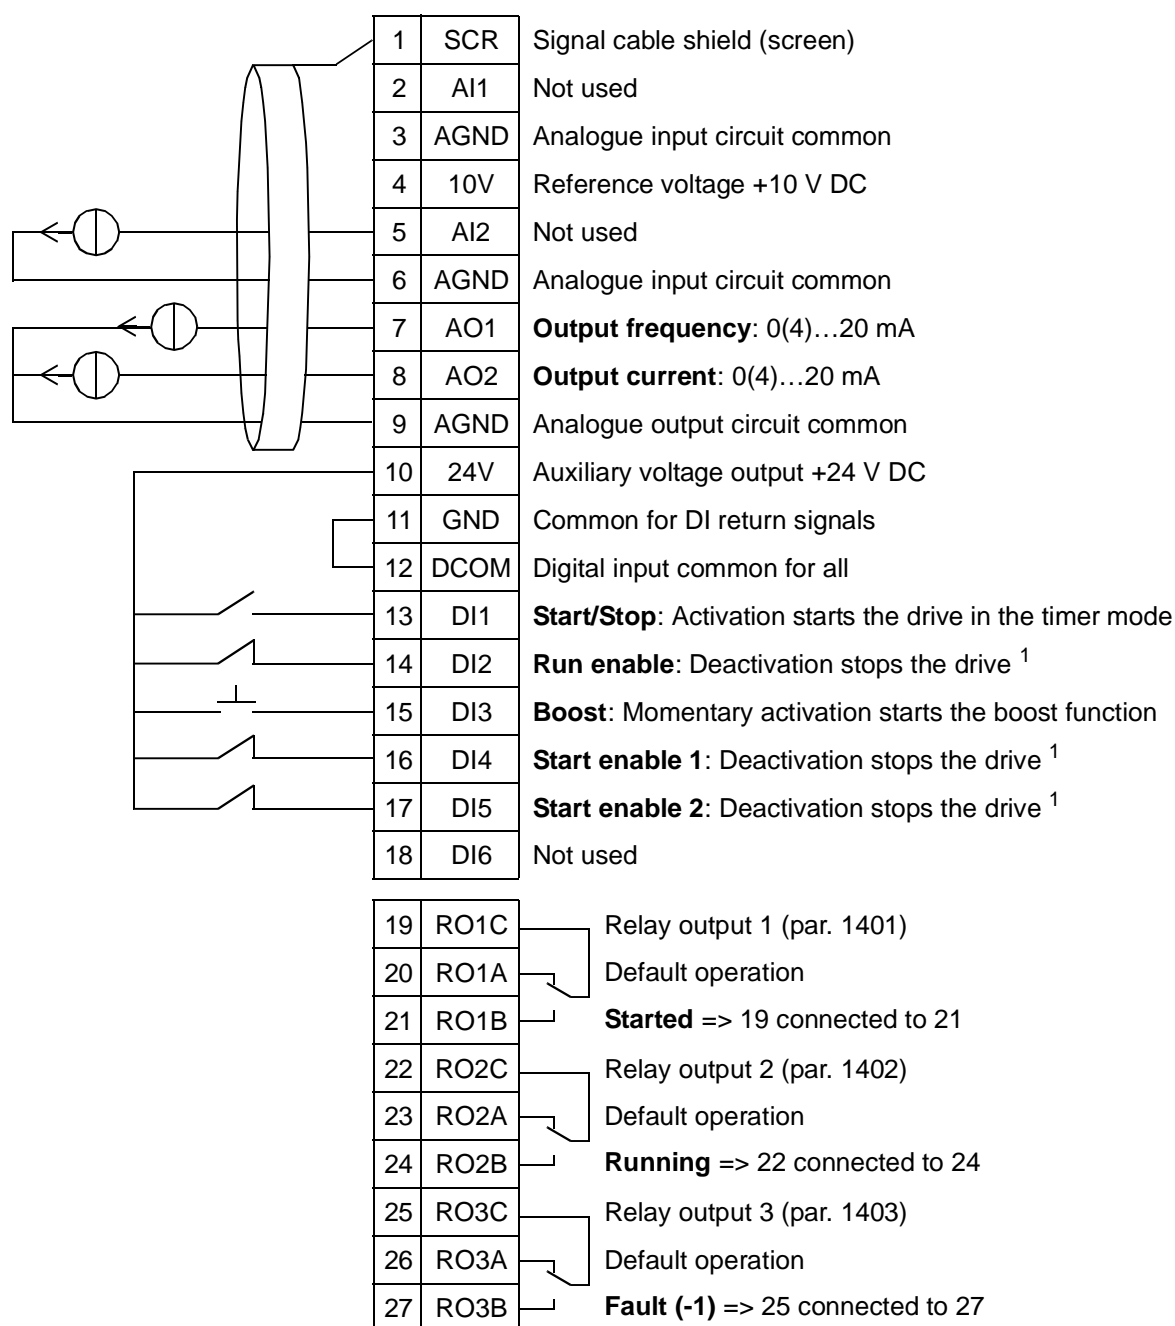

<sup>1</sup> Disable/enable with parameters 1601, 1608 and 1609

**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.

## 10. Floating point


This application macro is for applications where speed reference needs to be controlled through digital inputs (DI5 and DI6). By activating digital input 5, the speed reference increases. By activating digital input 6, the speed reference decreases. If both digital inputs are active or inactive, the reference does not change.

---

**Note:** When constant speed 1 is activated using digital input 3 (DI3), the reference speed is the value of parameter 1202. The value remains as the reference speed when digital input 3 is deactivated.

---

### Floating point

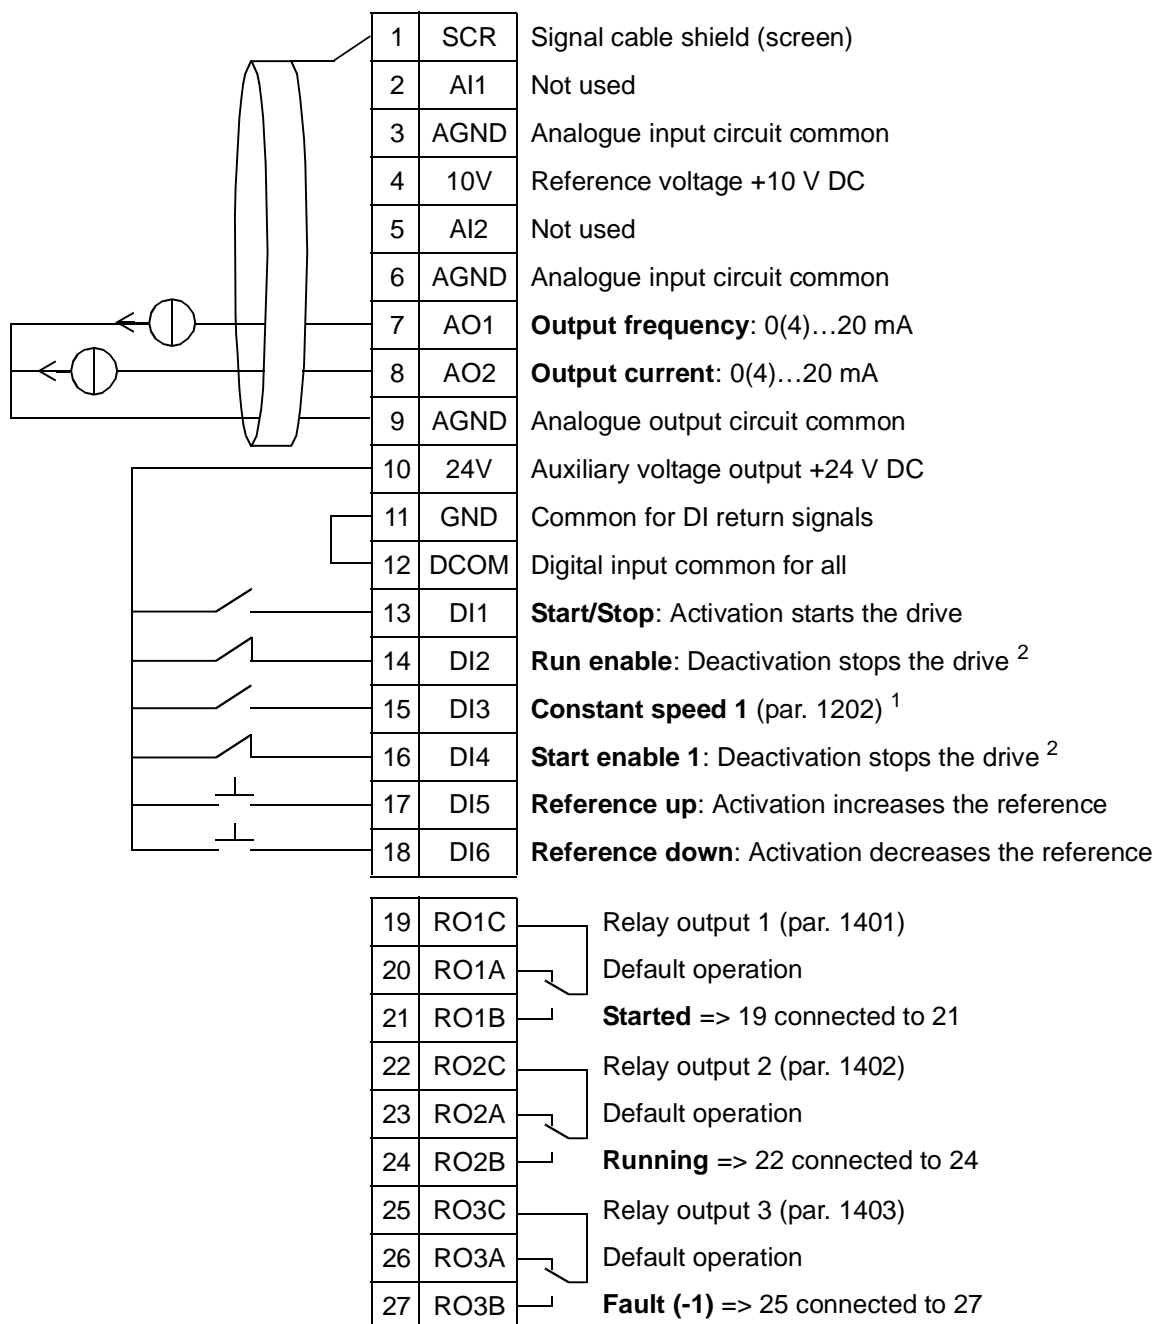

<sup>1</sup> Not available if PID is activated

<sup>2</sup> Disable/enable with parameters 1601 and 1608

**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.


## 11. Dual setpoint PID

This application macro is intended for dual setpoint PI(D) applications where process PI(D) controllers setpoint can be changed to another value by activating digital input 3 (DI3). Process PI(D) setpoints are set to the drive internally with parameters 4011 (set 1) and 4111 (set 2).

When using a direct speed reference in the AUTO mode, the speed reference must be connected to analogue input 1 (AI1) and the START command is given with digital input 1 (DI1). In the HAND/OFF mode, the speed reference and START command are given through the control panel (operator keypad). If process PI(D) is used, the feedback signal must be connected to analogue input 2 (AI2). By default, the setpoint is set from the control panel, but it can also be changed to analogue input 1. Process PI(D) must be commissioned and adjusted with parameters ([Group 40: PROCESS PID SET 1](#)) or using the PID control assistant (recommended).



### Dual setpoint PID

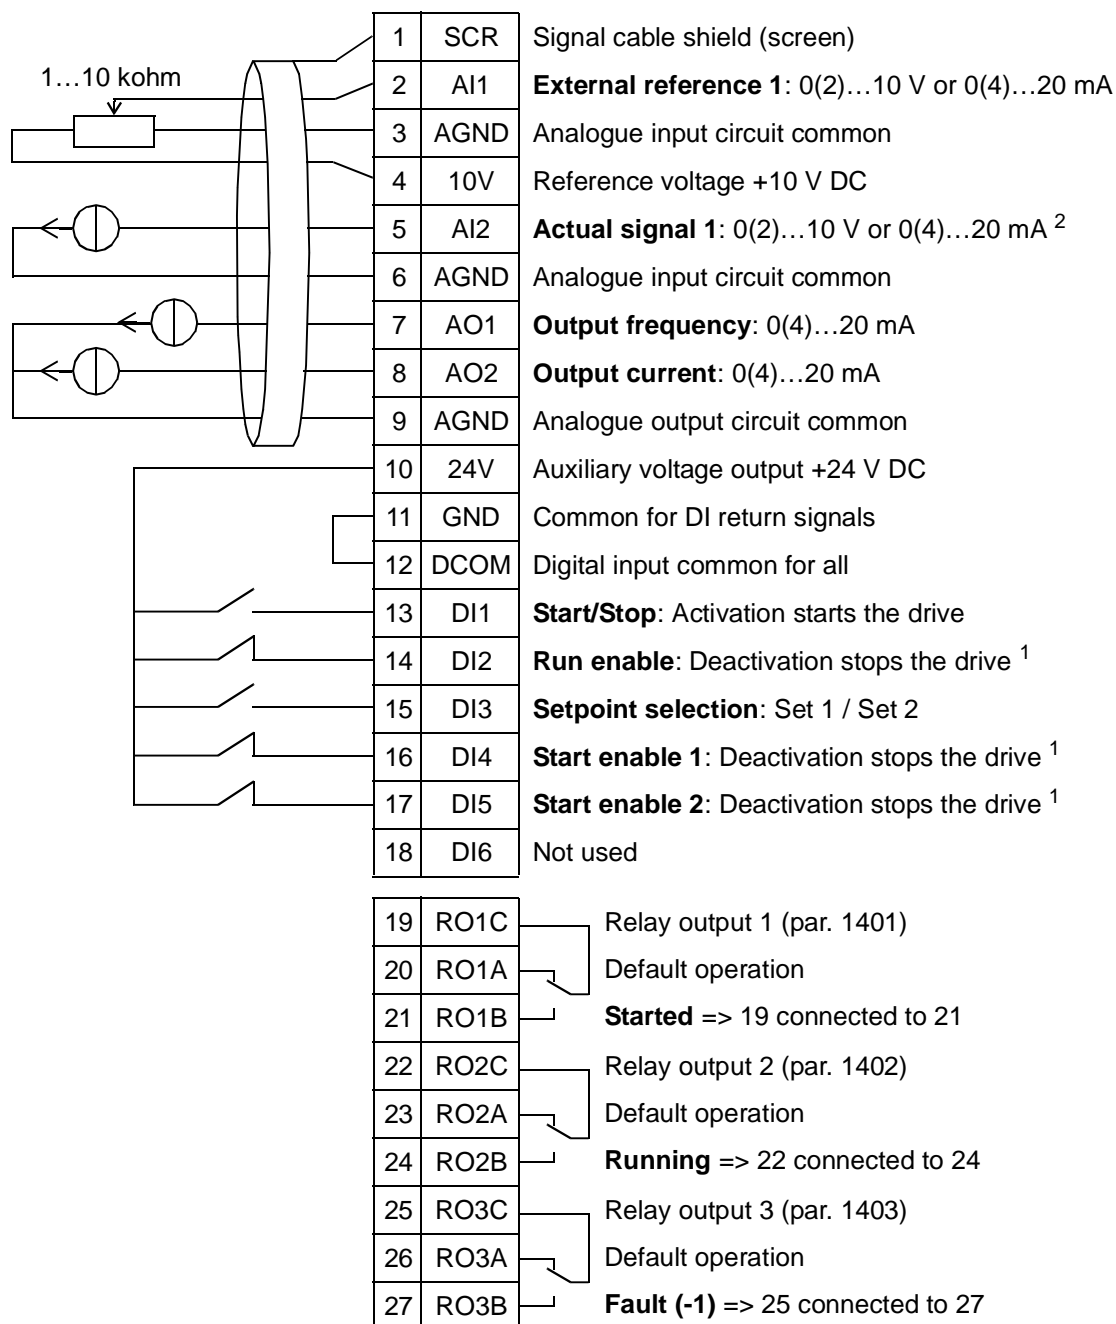

<sup>1</sup> Disable/enable with parameters 1601, 1608 and 1609

<sup>2</sup> The sensor for AI2 is powered externally (not shown in the figure). See the manufacturer's instructions. To use sensors supplied by the drive auxiliary voltage output, see page 124.

**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.

## 12. Dual setpoint PID with constant speeds


This application macro can be used for applications with two constant speeds, active PID and alternating PID between two setpoints using digital inputs. When using a transmitter, the signal can be used as the process actual value for the PID controller (AI2) or as a direct speed reference (AI1).

PID setpoints are set to the drive internally with parameters 4011 (set 1) and 4111 (set 2) and they can be changed with DI3. PID can be commissioned and adjusted with parameters or with the PID assistant (recommended).

Digital input (DI2) has a factory set control location EXT1/EXT2 selection function. When digital input is active, the control location is EXT2 and PID is activated.

Digital inputs 4 (DI4) and 5 (DI5) have factory set constant speed 1 and 2 functions. Constant speed 1 (par. 1202) is selected by activating digital input 4 (DI4) and constant speed 2 (par. 1203) by activating digital input 5 (DI5).

### Dual setpoint PID with constant speeds

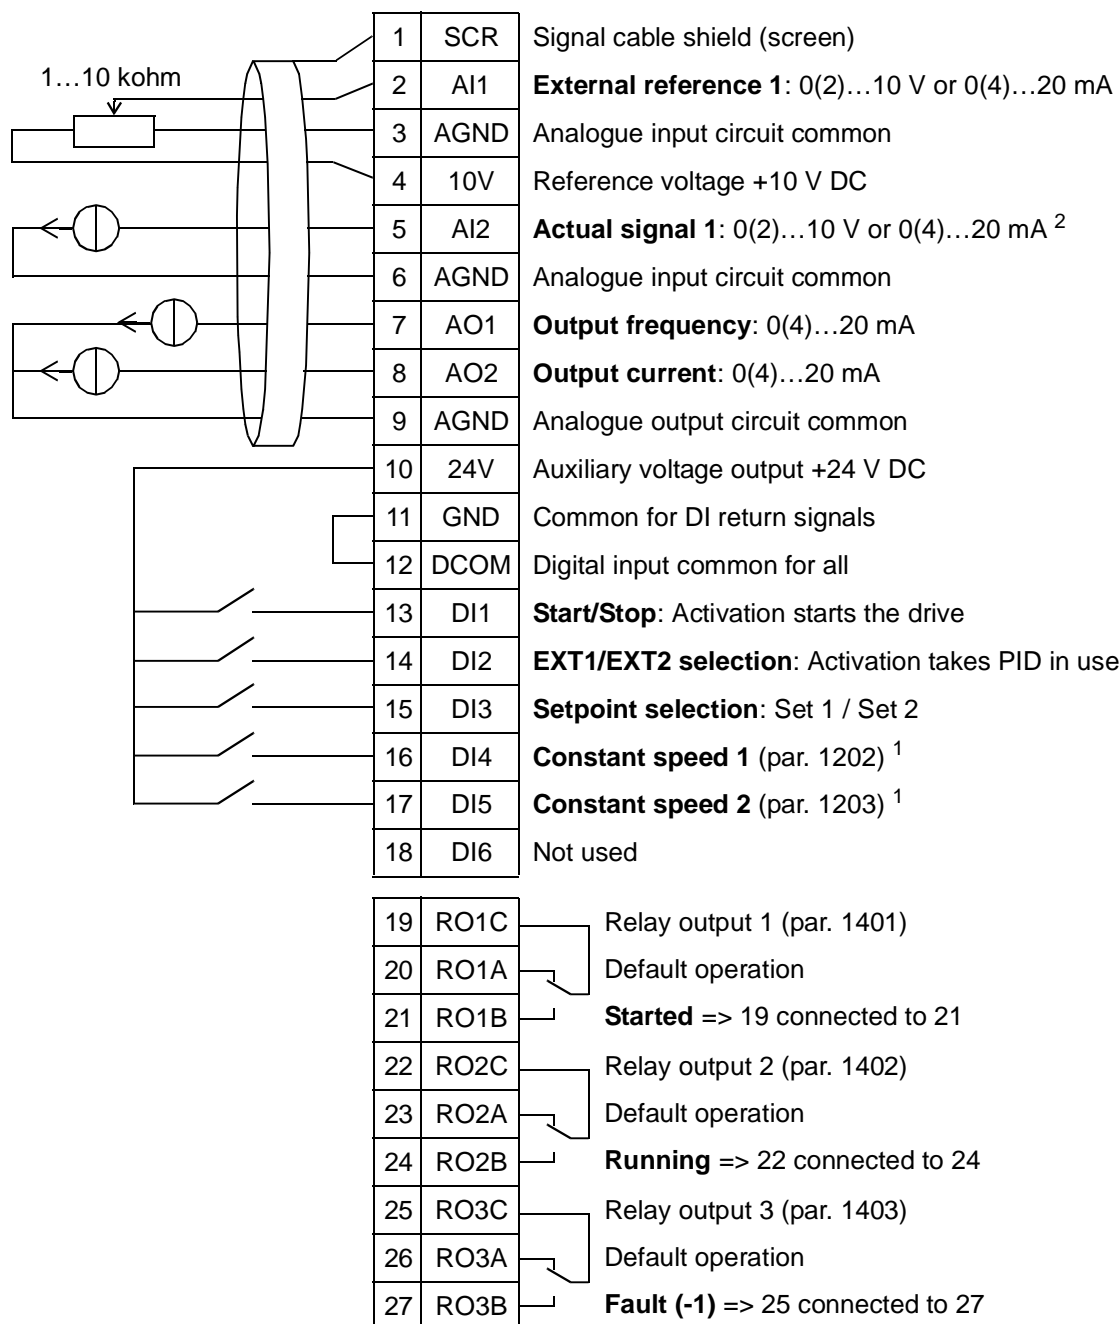

<sup>1</sup> Not available if PID is activated

<sup>2</sup> The sensor for AI2 is powered externally (not shown in the figure). See the manufacturer's instructions. To use sensors supplied by the drive auxiliary voltage output, see page 124.

**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.

### 13. E-bypass (USA only)


This application macro is intended to be used with an electronic bypass device, which can be employed to bypass the drive and connect the motor directly on-line.

When using a direct speed reference in the AUTO mode, the speed reference must be connected to analogue input 1 (AI1) and the START command is given with digital input 1 (DI1). In the HAND/OFF mode, the speed reference and START command are given through the control panel (operator keypad).

If process PI(D) is used, the feedback signal must be connected to analogue input 2 (AI2). By default, the setpoint is set from the control panel, but it can also be changed to analogue input 1.

Process PI(D) must be commissioned and adjusted with parameters ([Group 40: PROCESS PID SET 1](#)) or using the PID control assistant (recommended).

### E-bypass

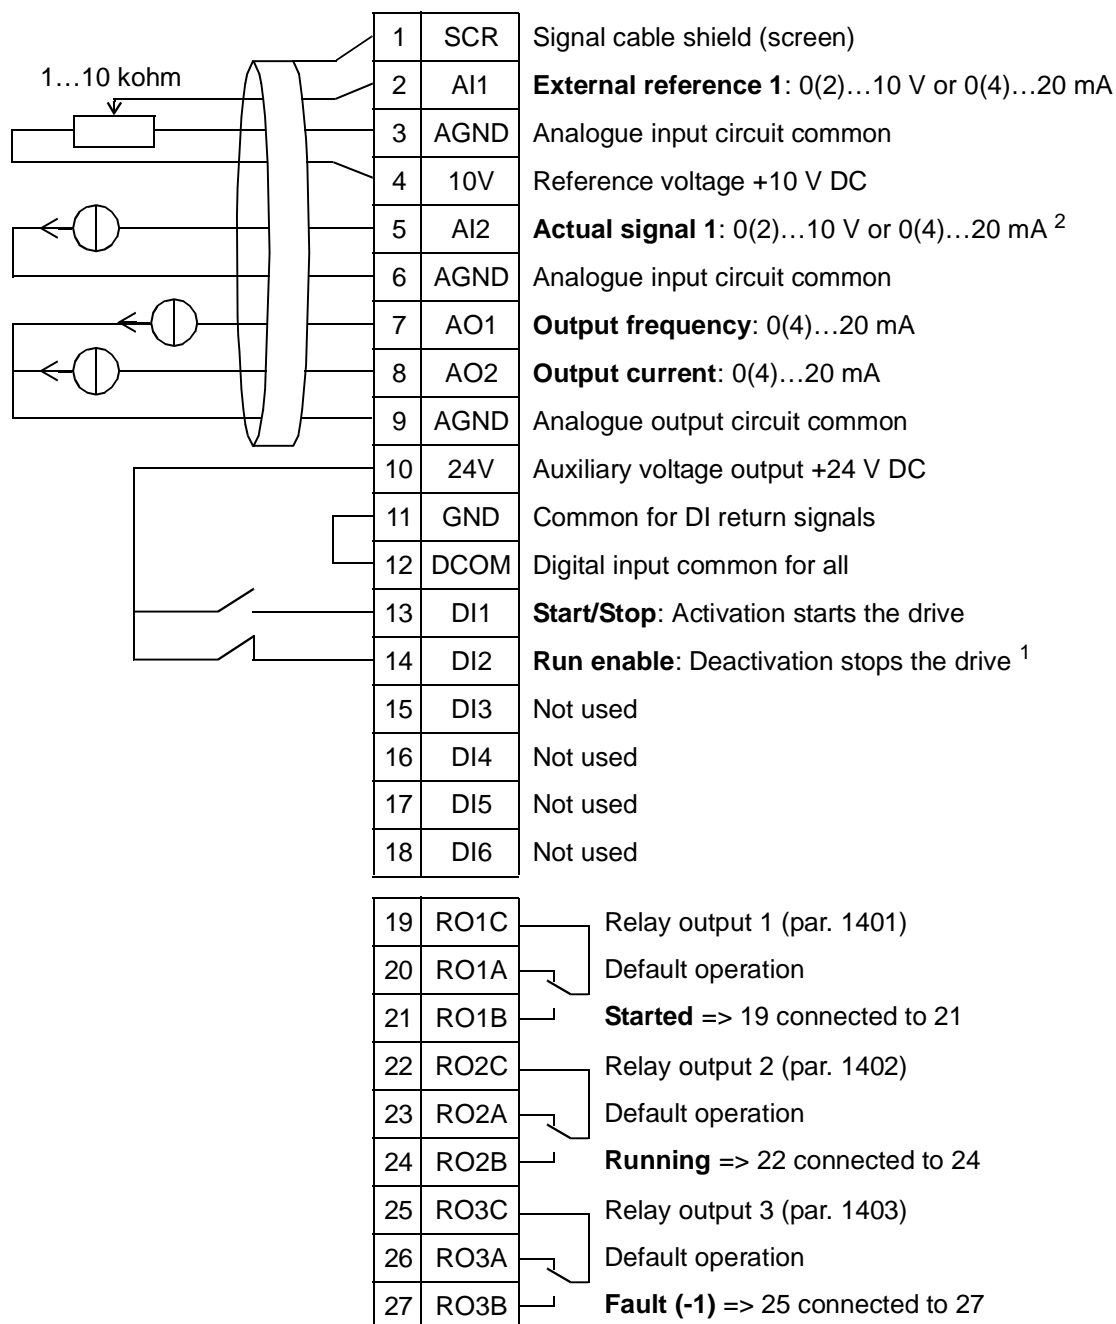

<sup>1</sup> Disable/enable with parameter 1601

<sup>2</sup> The sensor for AI2 is powered externally (not shown in the figure). See the manufacturer's instructions. To use sensors supplied by the drive auxiliary voltage output, see page 124.

**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.

## 14. Hand control

This application macro is intended to be used when commissioning with **Spin the Motor assistant** where all analogue and digital inputs are disabled by default.

The drive is started with the HAND key and giving the speed reference with the arrow keys.

---

**Note:** Starting in the AUTO mode requires configuring the I/O with parameters or the assistant or selecting another macro (recommended).

---

### Hand control

1	SCR	Signal cable shield (screen)
2	AI1	Not used
3	AGND	Analogue input circuit common
4	10V	Reference voltage +10 V DC
5	AI2	Not used
6	AGND	Analogue input circuit common
7	AO1	<b>Output frequency:</b> 0(4)...20 mA
8	AO2	<b>Output current:</b> 0(4)...20 mA
9	AGND	Analogue output circuit common
10	24V	Auxiliary voltage output +24 V DC
11	GND	Common for DI return signals
12	DCOM	Digital input common for all
13	DI1	Not used
14	DI2	Not used
15	DI3	Not used
16	DI4	Not used
17	DI5	Not used
18	DI6	Not used
19	RO1C	Relay output 1 (par. 1401)
20	RO1A	Default operation
21	RO1B	<b>Ready</b> => 19 connected to 21
22	RO2C	Relay output 2 (par. 1402)
23	RO2A	Default operation
24	RO2B	<b>Running</b> => 22 connected to 24
25	RO3C	Relay output 3 (par. 1403)
26	RO3A	Default operation
27	RO3B	<b>Fault (-1)</b> => 25 connected to 27


**Note:** The drive starts only if possible protection functions (Run enable or Start enable 1 and 2) are activated from I/O or disabled with parameters.

## Connection examples of two-wire and three-wire sensors

Many ACH550 applications use process PI(D) and need a feedback signal from the process. The feedback signal is typically connected to analogue input 2 (AI2).


The macro wiring diagrams for each macro earlier in this chapter use an externally powered sensor (connections not shown). The figures below give examples of connections using a two-wire or three-wire sensor/transmitter supplied by the drive auxiliary voltage output.

### Two-wire sensor/transmitter

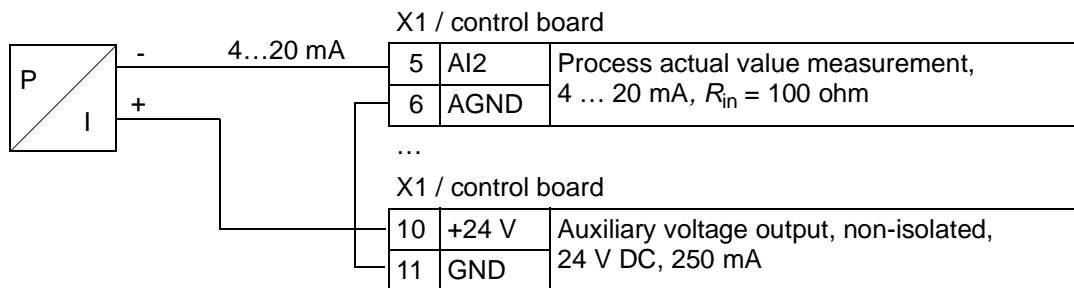

**Note:** The sensor is supplied through its current output and the drive feeds the supply voltage (+24 V). Thus the output signal must be 4...20 mA, not 0...20 mA.


### Three-wire sensor/transmitter

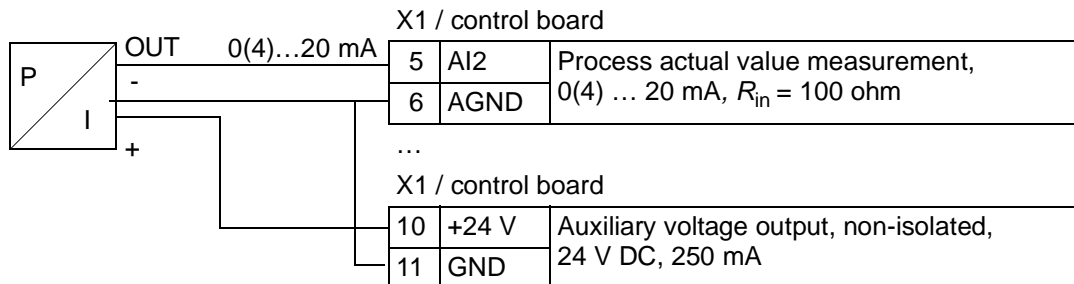



## Connection for obtaining 0...10 V from analogue outputs

To obtain 0...10 V from analogue outputs, connect a 500 ohm resistor (or two 1 kohm resistors in parallel) between the analogue output and analogue output circuit common AGND. Examples for analogue output 2 AO2 are shown in the figure below.

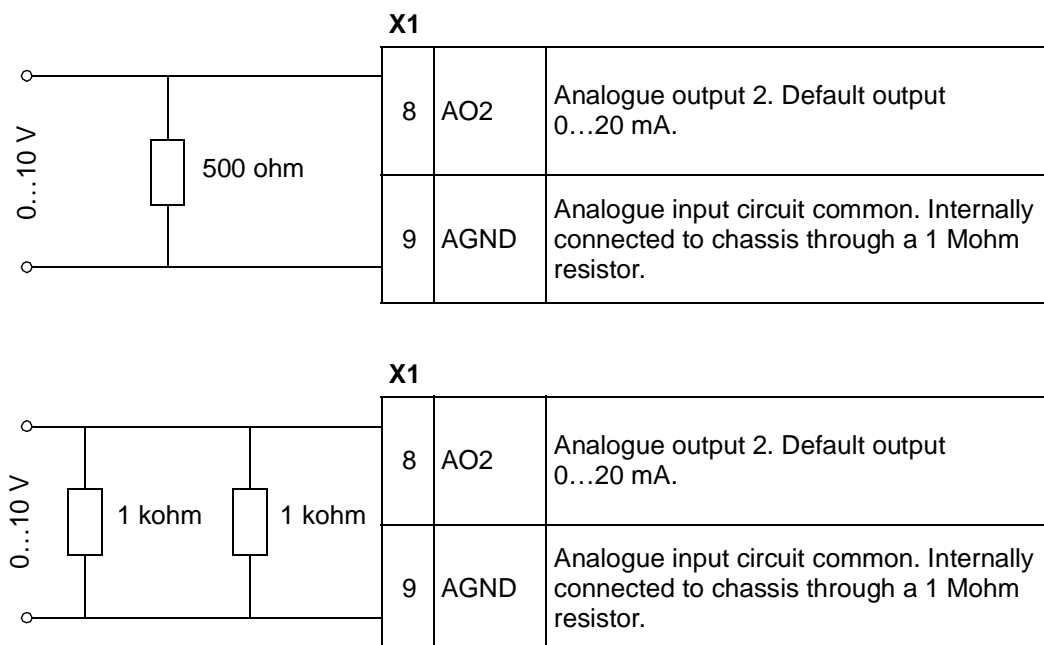



# Real-time clock and timed functions

---

## What this chapter contains

This chapter contains the information for real-time clock and timed functions.

## Real-time clock and timed functions

The real-time clock has the following features:

- four daily times
- four weekly times
- timed boost function, e.g. a set constant speed which is on for a certain pre-programmed time. Activated with a digital input.
- timer enable with digital inputs
- timed constant speed selection
- timed relay activation.

For more information, see [Group 36: TIMED FUNCTIONS](#).

---

**Note:** To be able to use the timed functions, the internal clock has to be set first. For information on the Time and date mode, see chapter [Start-up and control panel](#).

---

**Note:** The timed functions work only when the control panel (operator keypad) is connected to the drive.

---

**Note:** Removing the control panel for upload/download purposes does not affect the clock.

---


**Note:** Daylight saving changeover is automatic if activated.


---

## Using the timer

You can use the Timed Functions Assistant for easy configuring. For more information on the assistants, see page 76. The timer is configured in four stages. They are:

1. Enabling the timer. Configure how the timer is activated. See page 130.
2. Setting the time period. Define the time and day when the timer operates. See page 131.
3. Creating the timer. Assign the selected time period to certain timer(s). See page 132.
4. Connecting the parameters. Connect selected parameters to the timer. See page 133.

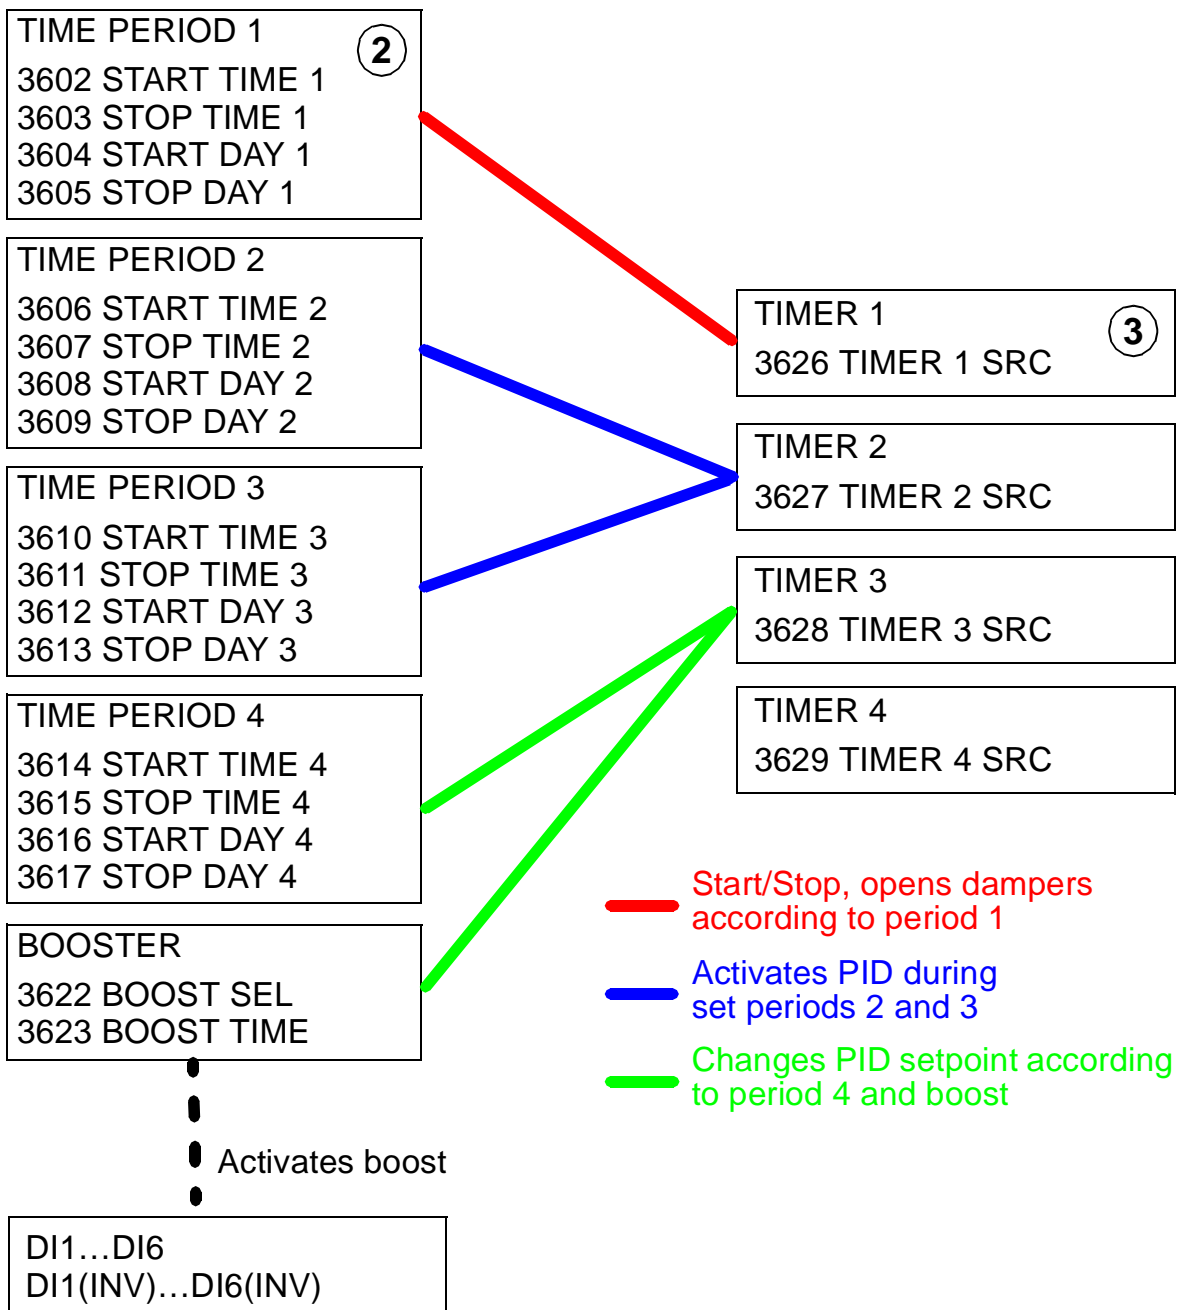

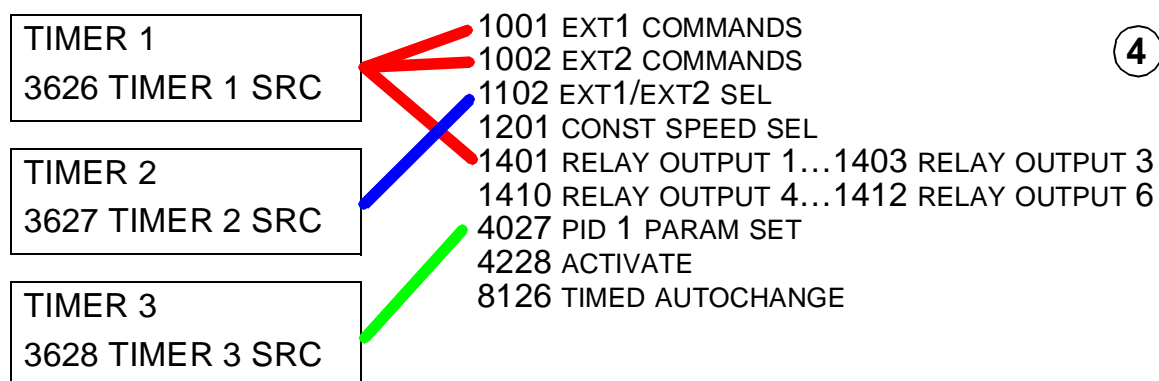

## Parameters connected to a timer












The following parameters can be connected to a timer:

- 1001 EXT1 COMMANDS – External start and stop command. Starts the drive when the timer is activated and stops drive when the timer is deactivated.
- 1002 EXT2 COMMANDS – External start and stop command. Starts the drive when the timer is activated and stops the drive when the timer is deactivated.
- 1102 EXT1/EXT2 SEL – Defines the source for start/stop commands and reference signals. Depending on the selection, either EXT 1 or EXT 2 is used as the source for the commands.
- 1201 CONST SPEED SEL – Selects a constant speed when timer 1 is active.
- 1401 RELAY OUTPUT 1 – Timer energises a relay output.
- 1402 RELAY OUTPUT 2 – Timer energises a relay output.
- 1403 RELAY OUTPUT 3 – Timer energises a relay output.
- 1410 RELAY OUTPUT 4...1412 RELAY OUTPUT 6 – If OREL-01 Relay Output Extension Module is installed, relay outputs 4...6 can be used respectively.
- 4027 PID 1 PARAM SET – Timer selects between two Process PID sets.
- 4228 ACTIVATE – Timer activates EXT PID.
- 8126 TIMED AUTOCHANGE – Timer enables the autochange in PFA operation.

## 1. Enabling the timer

The timer can be enabled from one of the digital inputs or inverted digital inputs.


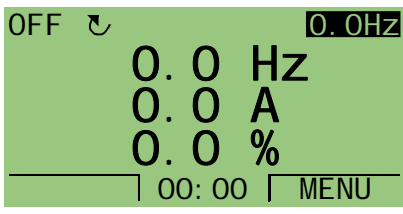





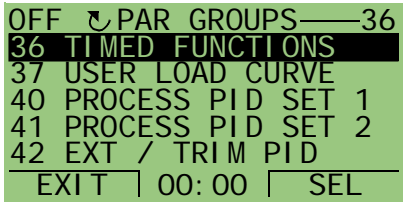







To enable the timer, follow these steps:

1	Press MENU to go to the main menu.		<pre> OFF 0.0 Hz 0.0 A 0.0 %   00:00   MENU </pre>
2	Select PARAMETERS with the UP/DOWN keys. Then press ENTER to go to the Parameters mode.	 	<pre> OFF MAIN MENU — 1 PARAMETERS ASSI STANTS CHANGED PAR   EXIT   00:00   ENTER </pre>
3	Scroll to group 36 TIMED FUNCTIONS with the UP/DOWN keys and press SEL.	 	<pre> OFF PAR GROUPS — 36 36 TIMED FUNCTIONS 37 USER LOAD CURVE 40 PROCESS PID SET 1 41 PROCESS PID SET 2 42 EXT / TRIM PID   EXIT   00:00   SEL </pre>
4	Scroll to TIMERS ENABLE with the UP/DOWN keys and press EDIT.	 	<pre> OFF PARAMETERS — 3601 TIMERS ENABLE NOT SEL 3602 START TIME 1 3603 STOP TIME 1 3604 START DAY 1   EXIT   00:00   EDIT </pre>
5	The current value is displayed. Use the UP/DOWN keys to change the value. If you select ACTIVE [7], timed functions are always enabled.		<pre> OFF PAR EDIT — 3601 TIMERS ENABLE NOT SEL [0]   CANCEL   00:00   SAVE </pre>
6	After selecting the new value, press SAVE to save the value.		<pre> OFF PAR EDIT — 3601 TIMERS ENABLE DI 1 (INV) [-1]   CANCEL   00:00   SAVE </pre>
7	The new value is displayed below the TIMERS ENABLE text. Press EXIT twice to return to the main menu.	 	<pre> OFF PARAMETERS — 3601 TIMERS ENABLE DI 1 (INV) 3602 START TIME 1 3603 STOP TIME 1 3604 START DAY 1   EXIT   00:00   EDIT </pre>

**Note:** Start or Run enable can be assigned to the same digital input.

## 2. Setting the time period

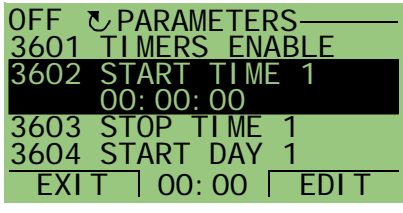The example shows how to set a start time. In addition, the stop time and the start and stop days have to be set in the same manner. These constitute a time period.

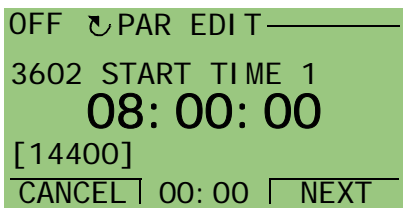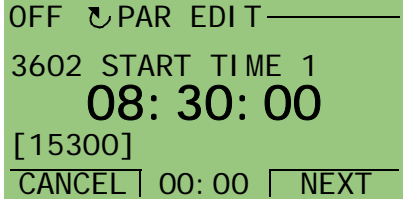







1	Press MENU to go to the main menu.		
2	Select PARAMETERS with the UP/DOWN keys. Then press ENTER to go to the Parameters mode.	 	
3	Scroll to group 36 TIMED FUNCTIONS with the UP/DOWN keys and press SEL.	 	
4	Scroll to START TIME 1 with the UP/DOWN keys and press EDIT.	 	
5	Change the highlighted part of the time with the UP/DOWN keys. Pressing NEXT moves to the next part. Press SAVE to save the time.	 	 

6	The new value is displayed below the START TIME 1 text. Press EXIT to return to the main menu. Continue with STOP TIME 1, START DAY 1 and STOP DAY 1.		<pre> OFF ↻ PARAMETERS—— 3601 TIMERS ENABLE 3602 START TIME 1       08:30:00 3603 STOP TIME 1 3604 START DAY 1 EXIT   00:00   EDIT                     </pre>
---	---	---	---



### 3. Creating a timer

Different time periods can be collected in a timer and connected to parameters. The timer can act as the source of start/stop and change direction commands, constant speed selection and relay activation signals. Time periods can be in multiple timed functions, but a parameter can only be connected to a single timer. It is possible to create up to four timers.

To create a timer, follow these steps:

1	Press MENU to go to the main menu.		<pre> OFF ↻ 0.0 Hz       0.0 A       0.0 %         00:00   MENU                     </pre>
2	Select PARAMETERS with the UP/DOWN keys. Then press ENTER to go to the Parameters mode.	 	<pre> OFF ↻ MAIN MENU——1 PARAMETERS ASSISTANTS CHANGED PAR EXIT   00:00   ENTER                     </pre>
3	Scroll to group 36 TIMED FUNCTIONS with the UP/DOWN keys and press SEL.	 	<pre> OFF ↻ PAR GROUPS——36 36 TIMED FUNCTIONS 37 USER LOAD CURVE 40 PROCESS PID SET 1 41 PROCESS PID SET 2 42 EXT / TRIM PID EXIT   00:00   SEL                     </pre>
4	Scroll to TIMER 1 SRC with the UP/DOWN keys and press EDIT.	 	<pre> OFF ↻ PARAMETERS—— 3622 BOOST SEL 3623 BOOST TIME 3626 TIMER 1 SRC       NOT SEL 3627 TIMER 2 SRC EXIT   00:00   EDIT                     </pre>
5	The current value is displayed. Change the value with the UP/DOWN keys.		<pre> OFF ↻ PAR EDIT—— 3626 TIMER 1 SRC       NOT SEL [0] CANCEL   00:00   SAVE                     </pre>













6	Press SAVE to save the new value.		<pre> OFF ↻ PAR EDIT ——— 3626 TIMER 1 SRC       P1 [1] CANCEL   00:00   SAVE                     </pre>
7	The new value is displayed below the TIMER 1 SRC text. Press EXIT to return to the main menu.		<pre> OFF ↻ PARAMETERS ——— 3622 BOOST SEL 3623 BOOST TIME 3626 TIMER 1 SRC       P1 3627 TIMER 2 SRC EXIT   00:00   EDIT                     </pre>

#### 4. Connecting parameters

The parameter example 1201 CONST SPEED SEL has to be connected to the timer so that the timer acts as the source of constant speed activating. A parameter can only be connected to one timer.

To connect the parameter, follow these steps:


1	Press MENU to go to the main menu.		<pre> OFF ↻ 0.0 Hz 0.0 A 0.0 % 00:00   MENU                     </pre>
2	Select PARAMETERS with the UP/DOWN keys. Then press ENTER to go to the Parameters mode.	 	<pre> OFF ↻ MAIN MENU ———1 PARAMETERS ASSI STANTS CHANGED PAR EXIT   00:00   ENTER                     </pre>
3	Scroll to group 12 CONSTANT SPEEDS and press SEL.	 	<pre> OFF ↻ PAR BACKUP ———12 03 FB ACTUAL SIGNALS 04 FAULT HISTORY 10 START/STOP/DIR 11 REFERENCE SELECT 12 CONSTANT SPEEDS EXIT   00:00   SEL                     </pre>
4	Scroll to parameter 1201 CONSTANT SPEED SEL and press EDIT.	 	<pre> OFF ↻ PARAMETERS ——— 1201 CONST SPEED SEL       DI 3 1202 CONST SPEED 1 1203 CONST SPEED 2 1204 CONST SPEED 3 EXIT   00:00   EDIT                     </pre>

<p>5</p>	<p>Select the created timer with the UP/DOWN keys and press SAVE.</p>	 	<pre> OFF  ↵ PAR EDIT  _____ 1201 CONST SPEED SEL       TIMER 1 [15] CANCEL   00:00   SAVE         </pre>
<p>6</p>	<p>The new value is displayed under CONST SPEED SEL. Press EXIT to return to the main menu.</p>		<pre> OFF  ↵ PARAMETERS  _____ 1201 CONST SPEED SEL       TIMER 1 1202 CONST SPEED 1 1203 CONST SPEED 2 1204 CONST SPEED 3 EXIT    00:00   EDIT         </pre>

## Example of timer use

The following example shows how a timer is used and connected to different parameters. The example uses the same settings as application macro 9 Internal timer with constant speeds. In this example, the timer will be set to function every weekday from 6 AM to 8 AM and 4 PM to 6 PM. On weekends, the timer is activated between 10 AM and 12 AM and 8 PM and 10 PM.

You can use the Timed Functions Assistant for easy configuring. For more information on the assistants, see page [76](#).

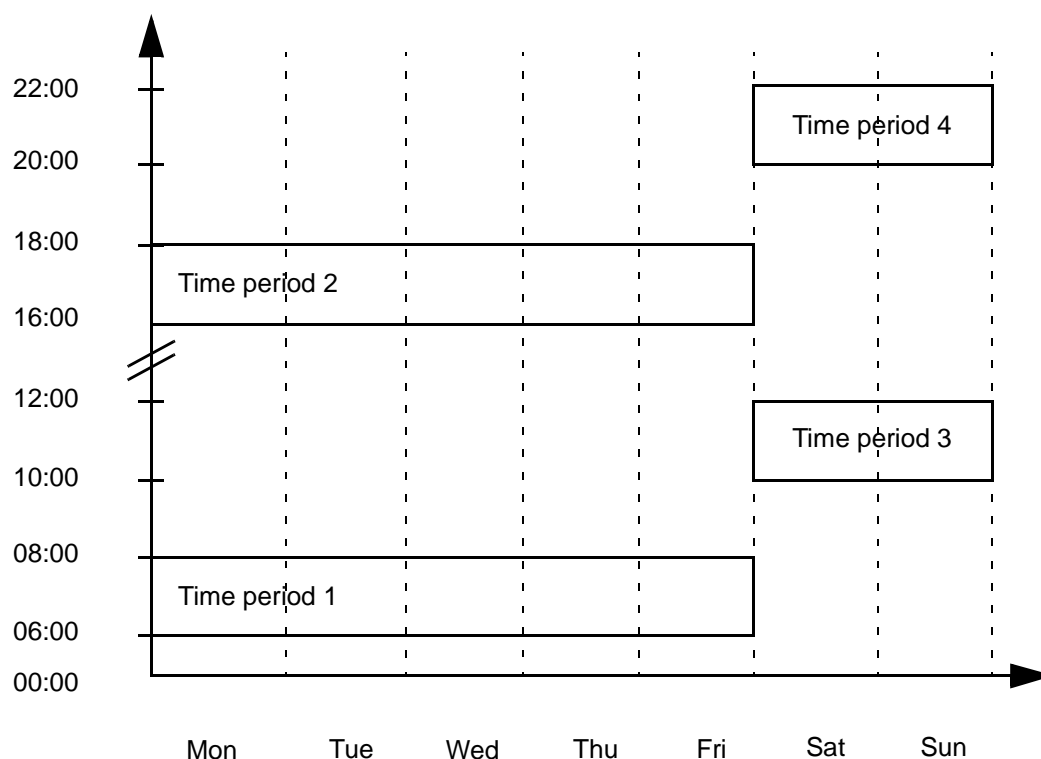

1. Go to parameter [Group 36: TIMED FUNCTIONS](#) and enable the timer. The timer can be enabled directly or through any free digital input.
2. Go to parameters 3602...3605 and set the start time to 6 AM and stop time to 8 AM. Then set the start and stop days to Monday and Friday. Now time period 1 is set.
3. Go to parameters 3606...3609 and set the start time to 4 PM and stop time to 6 PM. Then set the start and stop days to Monday and Friday. Now time period 2 is set.
4. Go to parameters 3610...3613 and set the start time to 10 AM and stop time to 12 AM. Then set the start and stop days to Saturday and Sunday. Now time period 3 is set.

5. Go to parameters 3614...3617 and set the start time to 8 PM and stop time to 10 PM. Then set the start and stop days to Saturday and Sunday. Now time period 4 is set.
6. Create the timer by going to parameter 3626 TIMER 1 SRC and select all the created time periods (P1+P2+P3+P4).
7. Go to [Group 12: CONSTANT SPEEDS](#) and select timer 1 in parameter 1201 CONSTANT SPEED. Now timer 1 acts as the source of constant speed selection.
8. Set the drive to the AUTO mode for the timer to function.


---

**Note:** For more information about the Timed functions, see [Group 36: TIMED FUNCTIONS](#) on page 265.


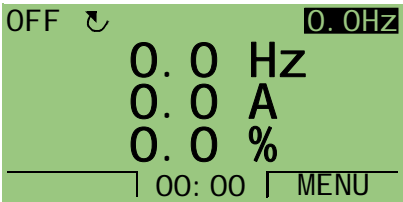





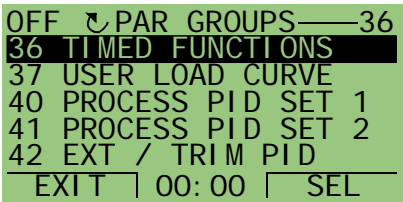


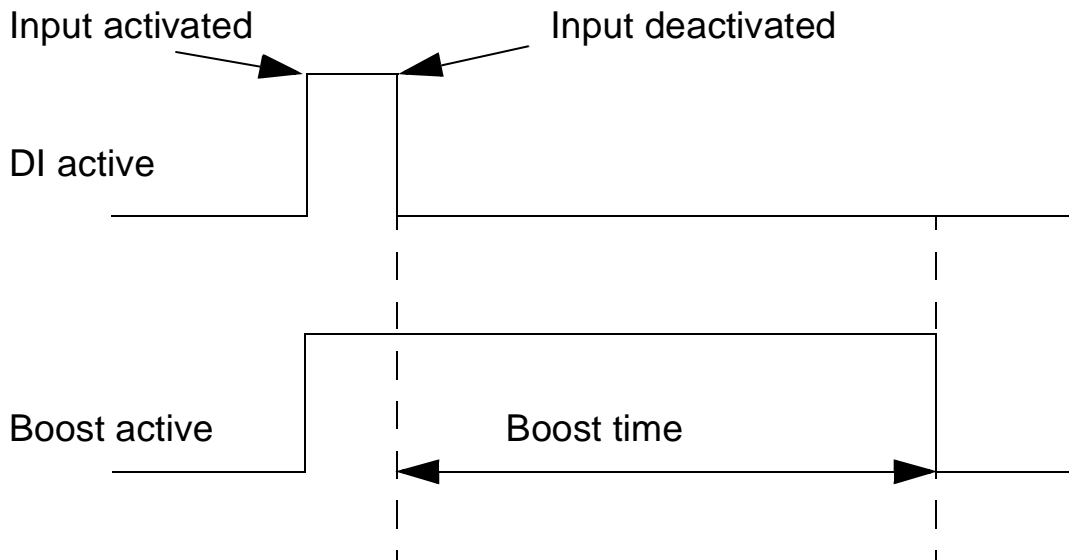






---





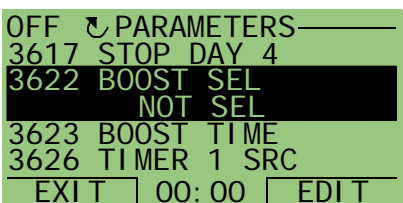

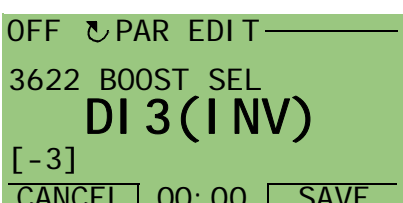
## Boost

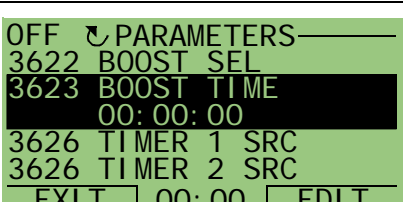The boost function operates the drive for a certain predetermined time. The time is defined with parameters and activated with a selected digital input. The boost time starts running after the digital input has been activated momentarily. Boost must be connected to the timers and selected when a timer is created. Boost is typically used for amplified air ventilation.



To configure the boost, follow these steps:

1	Press MENU to go to the main menu.		
2	Select PARAMETERS with the UP/DOWN keys. Then press ENTER to go to the Parameters mode.	 	
3	Scroll to group 36 TIMED FUNCTIONS with the UP/DOWN keys and press SEL.	 	
4	Scroll to BOOST SEL with the UP/DOWN keys and press EDIT.	 	
5	Select a digital input as the source of the boost signal with the UP/DOWN keys. Then press SAVE.	 	
6	Scroll to BOOST TIME with the UP/DOWN keys and press EDIT.	 	

7	Change the highlighted part of the time with the UP/DOWN keys. Pressing NEXT moves to the next part. Press SAVE to save the time.	 	<pre> OFF  ↵ PAR EDIT ————— 3623 BOOST TIME       00: 00: 00 [0] CANCEL   00:00   NEXT </pre> <pre> OFF  ↵ PAR EDIT ————— 3623 BOOST TIME       00: 30: 00 [900] CANCEL   00:00   NEXT </pre>
8	Scroll to TIMER 1 SRC and press EDIT.	 	<pre> OFF  ↵ PARAMETERS ————— 3622 BOOST SEL 3623 BOOST TIME 3626 TIMER 1 SRC       NOT SEL 3627 TIMER 2 SRC EXIT    00:00   EDIT </pre>
9	Select BOOST with the UP/DOWN keys and press SAVE.	 	<pre> OFF  ↵ PAR EDIT ————— 3626 TIMER 1 SRC       BOOST [16] CANCEL   00:00   SAVE </pre>
10	The new value is displayed under TIMER 1 SRC. Press EXIT to return to the main menu.		<pre> OFF  ↵ PARAMETERS ————— 3622 BOOST SEL 3623 BOOST TIME 3626 TIMER 1 SRC       BOOST 3627 TIMER 2 SRC EXIT    00:00   EDIT </pre>

# Serial communications

---

## What this chapter contains

This chapter contains the information for the serial communications of the ACH550.

## System overview

The drive can be connected to an external control system, usually a fieldbus controller, either:

- via the standard RS485 interface at terminals X1:28...32 on the control board of the drive. The standard RS485 interface provides the following embedded fieldbus (EFB) protocols:
  - Modbus
  - Metasys N2
  - APOGEE FLN
  - BACnet MS/TP.

For more information, refer to manuals *Embedded Fieldbus (EFB) Control* (3AFE68320658 [English]), *BACnet® Protocol* (3AUA0000004591 [English])

- BACnet/IP
- BACnet/Ethernet.

For BACnet/IP and BACnet/Ethernet there is a separate RBIP-01 BACnet/IP Router Module. For more information, refer to manuals *RBIP-01 BACnet/IP Router Module Installation Manual* (3AUA0000040168 [English]) and *RBIP-01 BACnet/IP Router Module User's Manual* (3AUA0000040159 [English])

or

- via a plug-in fieldbus adapter (EXT FBA) module mounted in expansion slot 2 of the drive. EXT FBAs must be ordered separately. EXT FBAs include:
  - LONWORKS
  - Ethernet (Modbus/TCP, EtherNet/IP, EtherCAT, POWERLINK, PROFINET IO)
  - PROFIBUS DP
  - CANopen
  - DeviceNet
  - ControlNet.


For more information, refer to the appropriate adapter module documentation.

Both the embedded fieldbus (EFB) protocol and the plug-in fieldbus adapter (EXT FBA) module are activated with parameter 9802 COMM PROT SEL.

The ACH550 control panel provides a Serial Communication assistant, which helps you in setting up serial communication.



The figure below shows the ACH550 fieldbus control.

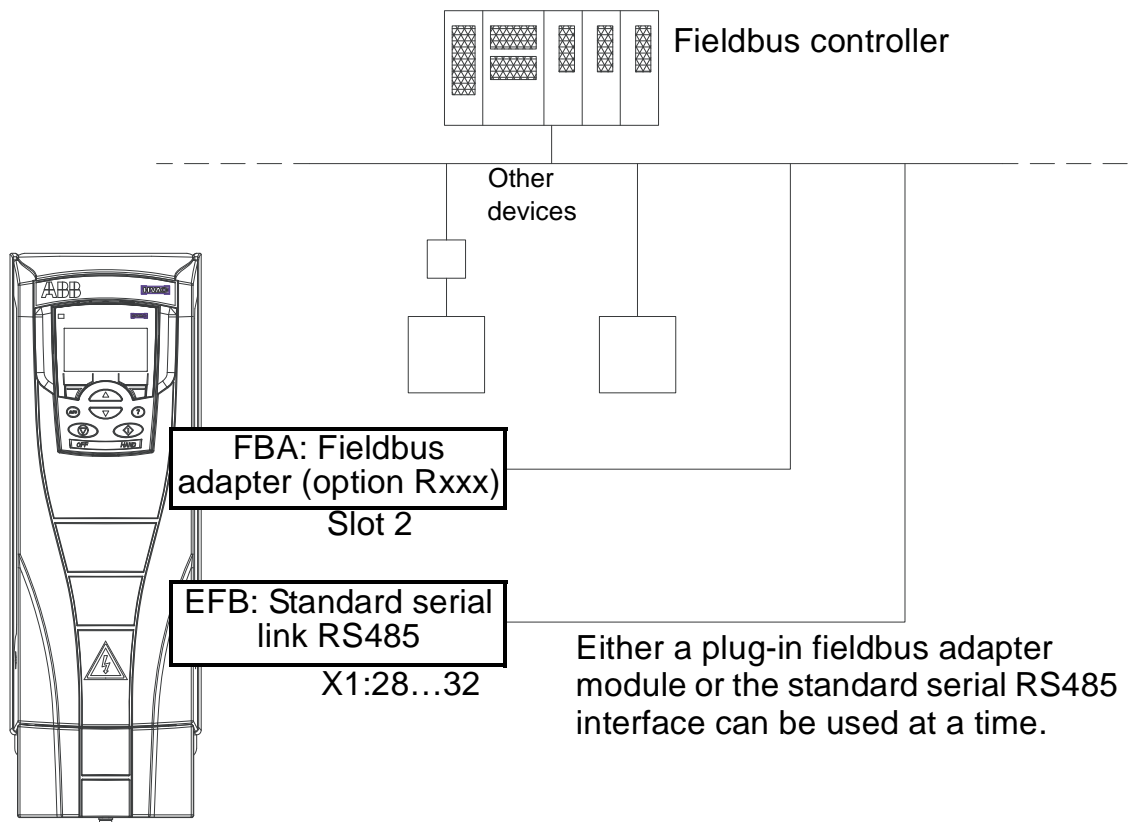


When using serial communication, the ACH550 can:


- receive all of its control information from the fieldbus, or
- be controlled from some combination of fieldbus control and other available control locations, such as digital or analogue inputs, and the control panel (operator keypad), or
- be monitored only (drive signals, status data and I/O).

## Embedded fieldbus (EFB)

To reduce noise on the network, terminate the RS485 network using 120 ohm resistors at both ends of the network. See the diagram below.

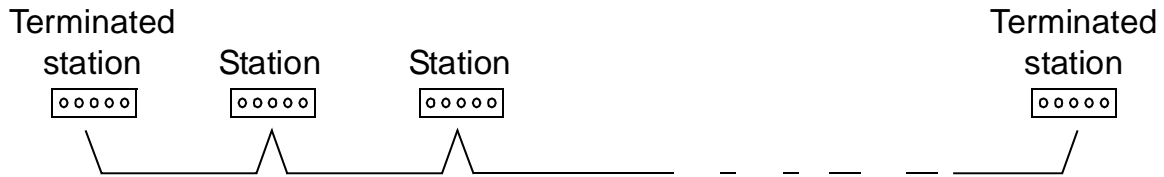

Use preferably three conductors and a shield for the connection.

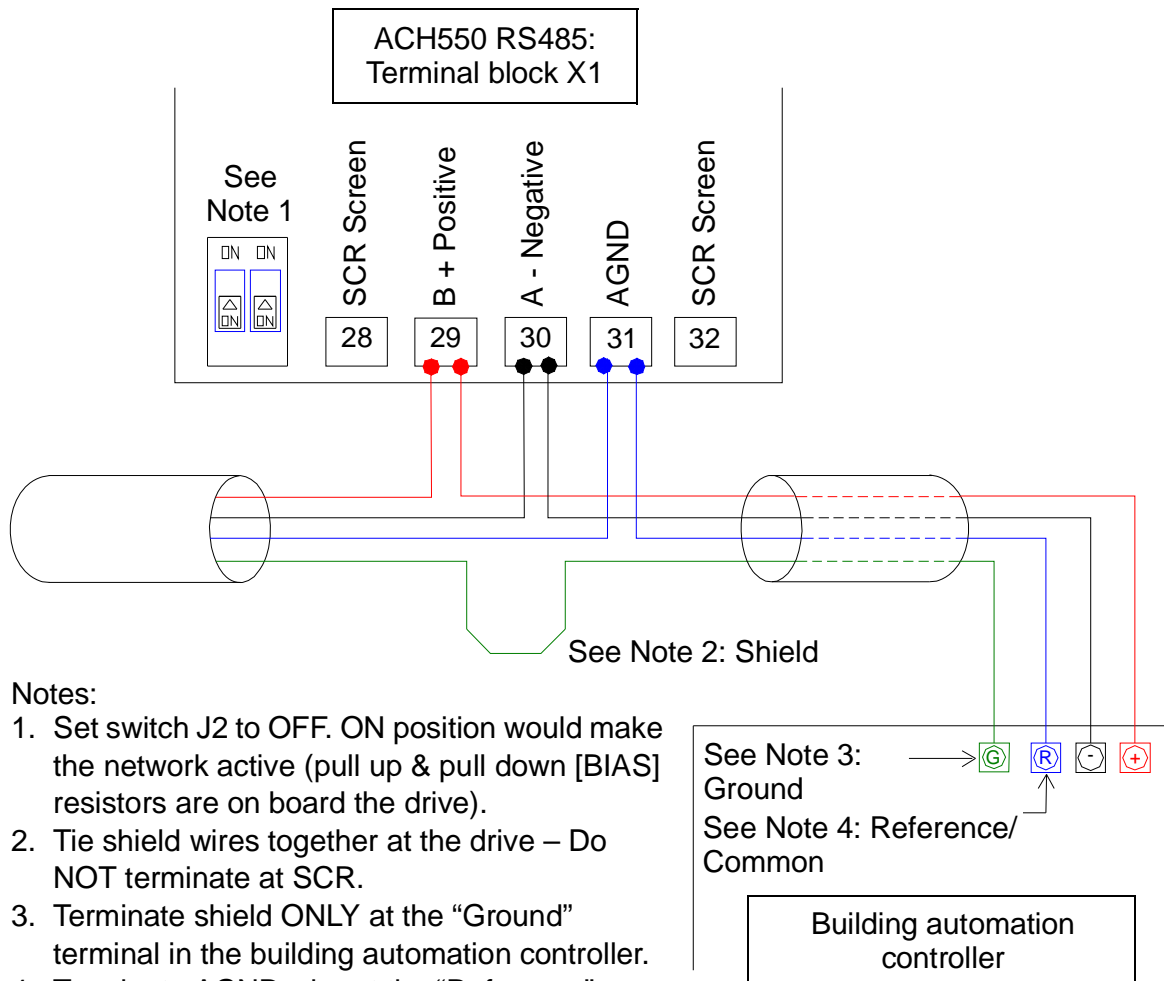

### Notes:

1. Set switch J2 to OFF. ON position would make the network active (pull up & pull down [BIAS] resistors are on board the drive).
2. Tie shield wires together at the drive – Do NOT terminate at SCR.
3. Terminate shield ONLY at the “Ground” terminal in the building automation controller.
4. Terminate AGND wire at the “Reference” terminal in the building automation controller.

## Setting up communication through EFB

Before configuring the drive for fieldbus control, the drive must be connected to the fieldbus according to the instructions given in this manual and manuals *Embedded Fieldbus (EFB) Control*

(3AFE68320658 [English]) and *BACnet® Protocol* (3AUA0000004591 [English]).








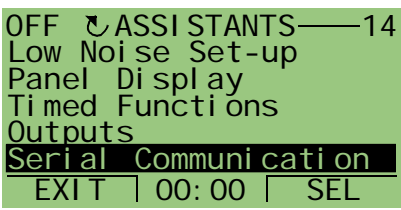



The communication between the drive and the fieldbus is then activated by selecting the appropriate protocol with parameter 9802 COMM PROT SEL. After the communication is initialized, the configuration parameters become available in parameter *Group 53: EFB PROTOCOL* in the drive.

Setting up EFB with the Serial Communication assistant is shown below. The related parameters are described starting from page 144.

For BACnet/IP, follow the instructions in *RBIP-01 BACnet/IP Router Module Installation Manual* (3AUA0000040168 [English]) and *RBIP-01 BACnet/IP Router Module User's Manual* (3AUA0000040159 [English]).

*Setting up EFB with the Serial Communication assistant*

To set up EFB, follow these steps:

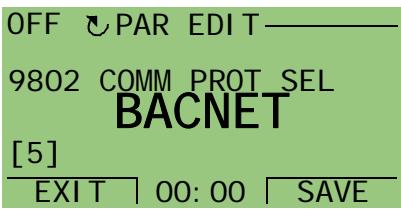1	Press MENU to go to the main menu.		
2	Select ASSISTANTS with the UP/DOWN keys and press ENTER.	 	
3	Scroll to Serial Communication and press SEL.	 	
4	Select the protocol with the UP/DOWN keys and press SAVE.	 	

5	Continue the guided set-up with the assistant.		
---	--	---	--

Changes made to EFB communication parameters (group 53) do not take effect until you perform one of the following:

- Cycle the drive power OFF and ON, or
- Set parameter 5302 to 0, and then back to a unique EFB station ID.

#### *Protocol selection*

Code	Description	Range
9802	<p><b>COMM PROT SEL</b></p> <p>Selects the communication protocol.</p> <p>0 = NOT SEL – No communication protocol selected.</p> <p>1 = STD MODBUS – The drive communicates via a Modbus controller via the RS485 serial link (X1 communications, terminal).</p> <ul style="list-style-type: none"> <li>• See also parameter <a href="#">Group 53: EFB PROTOCOL</a>.</li> </ul> <p>2 = N2 – The drive communicates via an N2 controller via the RS485 serial link (X1 communications, terminal).</p> <ul style="list-style-type: none"> <li>• See also parameter <a href="#">Group 53: EFB PROTOCOL</a>.</li> </ul> <p>3 = FLN – The drive communicates via an FLN controller via the RS485 serial link (X1 communications, terminal).</p> <ul style="list-style-type: none"> <li>• See also parameter <a href="#">Group 53: EFB PROTOCOL</a>.</li> </ul> <p>5 = BACNET – The drive communicates via a BACnet controller via the RS485 serial link (X1 communications, terminal).</p> <ul style="list-style-type: none"> <li>• See also parameter <a href="#">Group 53: EFB PROTOCOL</a>.</li> </ul>	<b>0...5</b>

#### *EFB communication parameters*

Code	Description	Range
5301	<p><b>EFB PROTOCOL ID</b></p> <p>Contains the identification and program revision of the protocol.</p> <ul style="list-style-type: none"> <li>• Format: XXYY, where xx = protocol ID, and YY = program revision.</li> </ul>	<b>0...0xFFFF</b>
5302	<p><b>EFB STATION ID</b></p> <p>Defines the node address of the RS485 link.</p> <ul style="list-style-type: none"> <li>• The node address on each unit must be unique.</li> </ul>	<b>0...65535</b>

Code	Description	Range
5303	<b>EFB BAUD RATE</b> Defines the communication speed of the RS485 link in kbits per second (kb/s). 1.2 kb/s 2.4 kb/s 4.8 kb/s 9.6 kb/s 19.2 kb/s 38.4 kb/s 57.6 kb/s 76.8 kb/s	<b>1.2, 2.4, 4.8, 9.6, 19.2, 38.4, 57.6, 76.8 kb/s</b>
5304	<b>EFB PARITY</b> Defines the data length parity and stop bits to be used with the RS485 link communication. • The same settings must be used in all on-line stations. 0 = 8 NONE 1 – 8 data bits, no parity, one stop bit. 1 = 8 NONE 2 – 8 data bits, no parity, two stop bits. 2 = 8 EVEN 1 – 8 data bits, even parity, one stop bit. 3 = 8 ODD 1 – 8 data bits, odd parity, one stop bit.	<b>0...3</b>
5305	<b>EFB CTRL PROFILE</b> Selects the communication profile used by the EFB protocol. No effect on BACnet behavior. 0 = ABB DRV LIM – Operation of the Control Word and Status Word conforms to ABB Drives Profile, as used in ACS400. 1 = DCU PROFILE – Operation of Control/Status Words conforms to 32-bit DCU Profile. 2 = ABB DRV FULL – Operation of Control/Status Words conforms to ABB Drives Profile, as used in ACS600/800.	<b>0...2</b>
5306	<b>EFB OK MESSAGES</b> Contains a count of valid messages received by the drive. • During normal operation, this counter is increasing constantly.	<b>0...65535</b>
5307	<b>EFB CRC ERRORS</b> Contains a count of the messages with a CRC error received by the drive. For high counts, check: • Ambient electro-magnetic noise levels – high noise levels generate errors. • CRC calculations for possible errors.	<b>0...65535</b>
5308	<b>EFB UART ERRORS</b> Contains a count of the messages with a character error received by the drive.	<b>0...65535</b>

Code	Description	Range
5309	<b>EFB STATUS</b> Contains the status of the EFB protocol. 0 = IDLE – EFB protocol is configured, but not receiving any messages. 1 = EXECUT INIT – EFB protocol is initializing. 2 = TIME OUT – A time-out has occurred in the communication between the network master and the EFB protocol. 3 = CONFIG ERROR – EFB protocol has a configuration error. 4 = OFF-LINE – EFB protocol is receiving messages that are NOT addressed to this drive. 5 = ON-LINE – EFB protocol is receiving messages that are addressed to this drive. 6 = RESET – EFB protocol is performing a hardware reset. 7 = LISTEN ONLY – EFB protocol is in listen-only mode.	<b>0...7</b>
5318	<b>EFB PAR 18</b> For Modbus only: Slave response delay. Sets additional delay in milliseconds before the drive begins transmitting response to the master request.	<b>0...65535</b>

*BACnet-specific communication parameters*

5310	<b>EFB PAR 10</b> Sets the BACnet MS/TP response turn-around time, in milliseconds.	<b>0...65535</b>
5311	<b>EFB PAR 11</b> Sets, together with parameter 5317 EFB PAR 17, BACnet instance IDs: <ul style="list-style-type: none"> <li>For the range 1 to 65535: This parameter sets the ID directly (5317 must be 0). For example, the following values set the ID to 49134: 5311 = 49134 and 5317 = 0.</li> <li>For IDs &gt; 65535: The ID equals parameter 5311's value plus 10000 times parameter 5317's value. For example, the following values set the ID to 71234: 5311 = 1234 and 5317 = 7.</li> </ul>	<b>0...65535</b>
5312	<b>EFB PAR 12</b> Sets the BACnet Device Object Max Info Frames property.	<b>0...65535</b>
5313	<b>EFB PAR 13</b> Sets the BACnet Device Object Max Master property.	<b>0...65535</b>
5316	<b>EFB PAR 16</b> Indicates the count of MS/TP tokens passed to this drive.	<b>0...65535</b>
5317	<b>EFB PAR 17</b> Works with parameter 5311 to set BACnet instance IDs. See parameter 5311.	<b>0...65535</b>

## Fieldbus adapter (EXT FBA)

### Mechanical and electrical installation of the plug-in fieldbus

The plug-in fieldbus adapter (EXT FBA) module is inserted into expansion slot 2 of the drive.


The module is held in place with plastic retaining clips and two screws. The screws also provide the grounding of the cable shield connected to the module and interconnect the GND signals of the module and the control board of the drive.

On installation of the module, the signal and power connection to the drive is automatically established through the 34-pin connector.


Mounting procedure (See the figures on page [148](#)):

1. Insert the module carefully into expansion slot 2 of the drive until the retaining clips lock the module into position.
2. Fasten the two screws (included) to the stand-offs.
3. Open the appropriate knockout in the conduit/gland box and install the cable clamp/gland for the network cable.
4. Route the network cable through the cable clamp/gland.
5. Connect the network cable to the network connector of the module. Detailed configuration is available in the appropriate EXT FBA manual.
6. Tighten the cable clamp/gland.
7. Install the conduit/gland box cover (1 screw).

The figure below shows the mounting of the fieldbus module.

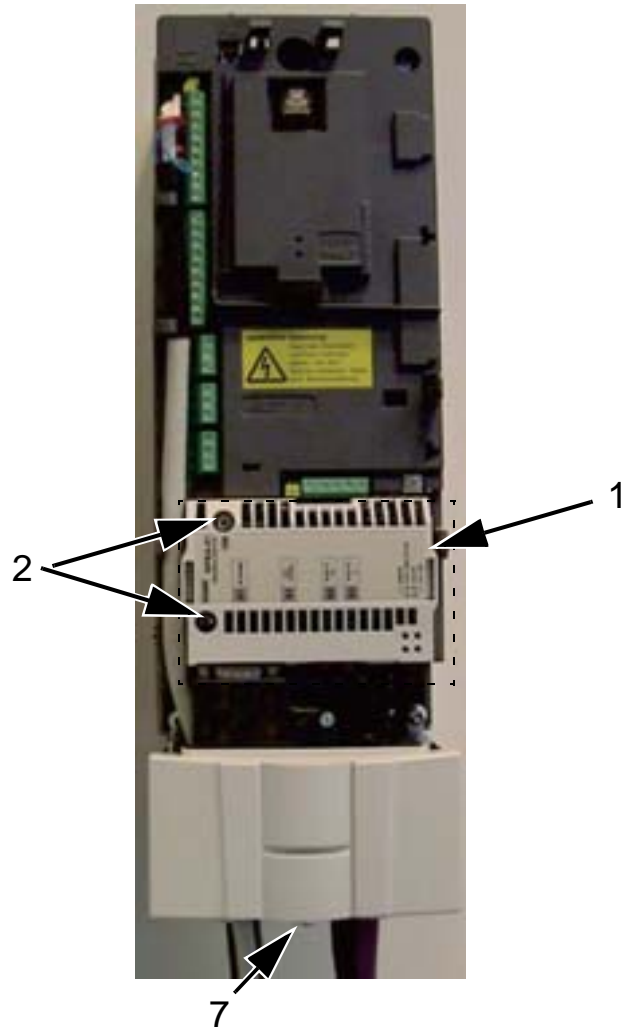

The figure below shows the connecting of the network cable.

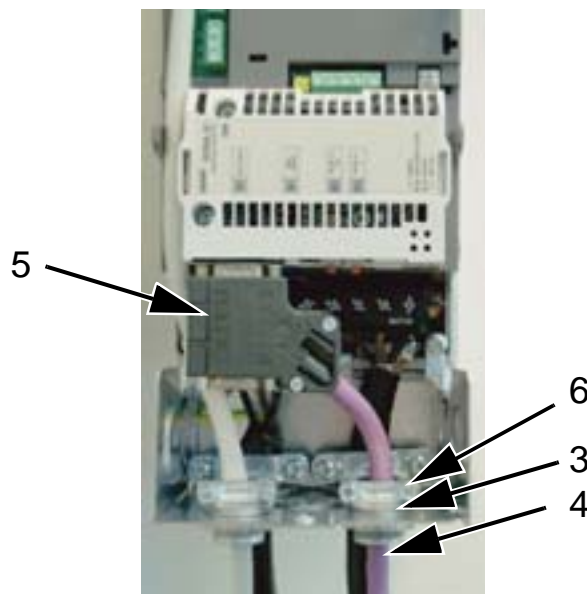



**Note:** Correct installation of the screws is essential for fulfilling the EMC requirements and for proper operation of the module.

**Note:** Install the input power and motor cables first.

## Setting up communication through a plug-in fieldbus adapter (EXT FBA) module


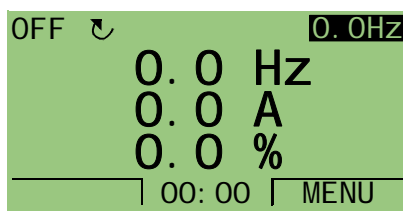





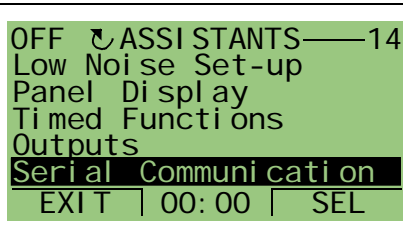
Before configuring the drive for fieldbus control, the fieldbus adapter (EXT FBA) module must be mechanically and electrically installed according to the instructions given in this manual and the fieldbus adapter module manual.




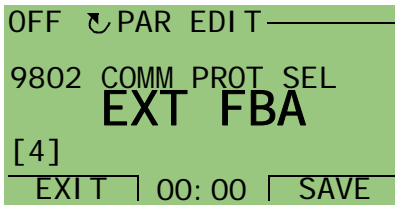



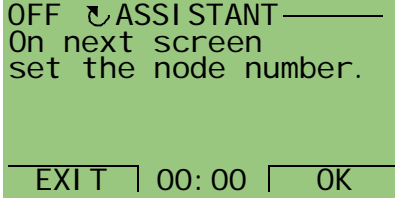
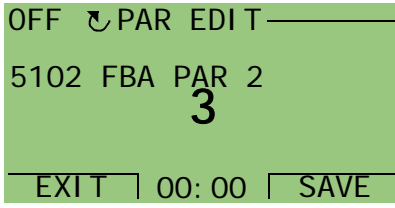
The communication between the drive and the fieldbus adapter module is then activated by setting parameter 9802 COMM PROT SEL to EXT FBA. After the communication is initialized, the configuration parameters of the module become available in parameter *Group 51: EXT COMM MODULE* in the drive.

Setting up FBA with the Serial Communication assistant is shown below. The related parameters are described starting from page 150.

*Setting up FBA with the Serial Communication assistant*

To set up FBA, follow these steps:

1	Press MENU to go to the main menu.		
2	Select ASSISTANTS with the UP/DOWN keys and press ENTER.	 	
3	Scroll to Serial Communication and press SEL.	 	

4	Select EXT FBA with the UP/DOWN keys and press SAVE.	  	
5	<p>The assistant recognises the type of the connected fieldbus adapter module and guides you through the necessary set-up.</p> <p>If the name of FBA parameter is not self-explanatory, the assistant first tells you which information is expected from you.</p>	  	 

The new settings will take effect when the drive is next powered up, or when parameter 5127 is activated.

*Protocol selection*

Code	Description	Range
9802	<p><b>COMM PROT SEL</b></p> <p>Selects the communication protocol.</p> <p>0 = NOT SEL – No communication protocol selected.</p> <p>4 = <b>EXT FBA</b> – The drive communicates via a fieldbus adapter module in option slot 2 of the drive.</p> <ul style="list-style-type: none"> <li>• See also parameter <a href="#">Group 51: EXT COMM MODULE</a>.</li> </ul>	0...5

*FBA communication parameters*

Code	Description	Range
5101	<p><b>FBA TYPE</b></p> <p>Displays the type of the connected fieldbus adapter module.</p> <p>0 = NOT DEFINED – Module not found or not connected. Check chapter <i>Mechanical installation</i> in the fieldbus user's manual and check that parameter 9802 is set to 4 = EXT FBA.</p> <p>1 = Profibus-DP</p> <p>21 = LonWorks</p> <p>32 = CANopen</p> <p>37 = DeviceNet</p> <p>101 = ControlNet</p> <p>128 = Ethernet</p> <p>132 = PROFINET</p> <p>135 = ETHERCAT</p> <p>136 = EPL - Ethernet POWERLINK</p>	

Code	Description	Range
5102 ... 5126	<b>FB PAR 2...FB PAR 26</b> Refer to the communication module documentation for more information on these parameters.	<b>0...65535</b>
5127	<b>FBA PAR REFRESH</b> Validates any changed fieldbus parameter settings. 0 = DONE – Refreshing done. 1 = REFRESH – Refreshing. • After refreshing, the value reverts automatically to DONE.	<b>0=DONE, 1=REFRESH</b>
5128	<b>FILE CPI FW REV</b> Displays the CPI firmware revision of the drive's fieldbus adapter configuration file. Format is xyz, where: • x = major revision number • y = minor revision number • z = correction number. <b>Example:</b> 107 = revision 1.07	<b>0...0xFFFF</b>
5129	<b>FILE CONFIG ID</b> Displays the revision of the drive's fieldbus adapter module's configuration file identification. • File configuration information depends on the drive application program.	<b>0...0xFFFF</b>
5130	<b>FILE CONFIG REV</b> Contains the revision of the drive's fieldbus adapter module configuration file. <b>Example:</b> 1 = revision 1	<b>0...0xFFFF</b>
5131	<b>FBA STATUS</b> Contains the status of the adapter module. 0 = IDLE – Adapter not configured. 1 = EXECUT INIT – Adapter is initializing. 2 = TIME OUT – A time-out has occurred in the communication between the adapter and the drive. 3 = CONFIG ERROR – Adapter configuration error. • The major or minor revision code of the adapter's CPI firmware revision differs from that stated in the drive's configuration file. 4 = OFF-LINE – Adapter is off-line. 5 = ON-LINE – Adapter is on-line. 6 = RESET – Adapter is performing a hardware reset.	<b>0...6</b>
5132	<b>FBA CPI FW REV</b> Contains the revision of the module's CPI program. Format is xyz, where: • x = major revision number • y = minor revision number • z = correction number. <b>Example:</b> 107 = revision 1.07	<b>0...0xFFFF</b>

Code	Description	Range
5133	<b>FBA APPL FW REV</b> Contains the revision of the module's application program. Format is xyz, where: <ul style="list-style-type: none"><li>• x = major revision number</li><li>• y = minor revision number</li><li>• z = correction number.</li></ul> <b>Example:</b> 107 = revision 1.07	<b>0...0xFFFF</b>

## Drive control parameters

After the fieldbus communication has been set up, the drive control parameters listed in the tables below should be checked and adjusted where necessary.

The “Setting for fieldbus control & description” column gives the value to use when the fieldbus interface is the desired source or destination for that particular signal as well as a description of the parameter.

For fieldbus signal routes and message composition, see manuals *Embedded Fieldbus (EFB) Control* (3AFE68320658 [English]) and *BACnet® Protocol* (3AUA0000004591 [English]).

### Control command source selection

Code	Setting for fieldbus control & description	Range
1001	<b>EXT1 COMMANDS</b> Defines external control location 1 (EXT1) – the configuration of start, stop and direction commands. 10 = COMM – Assigns the fieldbus Command Word as the source for the start/stop and direction commands. <ul style="list-style-type: none"> <li>• Bits 0, 1, 2 of Command Word 1 (parameter 0301) activates the start/stop and direction commands.</li> <li>• See the fieldbus user's manual for detailed instructions.</li> </ul>	<b>0...14</b>
1002	<b>EXT2 COMMANDS</b> Defines external control location 2 (EXT2) – the configuration of start, stop and direction commands. 10 = COMM – Assigns the fieldbus Command Word as the source for the start/stop and direction commands. <ul style="list-style-type: none"> <li>• Bits 0, 1, 2 of Command Word 1 (parameter 0301) activates the start/stop and direction commands.</li> <li>• See the fieldbus user's manual for detailed instructions.</li> </ul>	<b>0...14</b>
1003	<b>DIRECTION</b> Defines the control of the motor rotation direction. 1 = FORWARD – Rotation is fixed in the forward direction. 2 = REVERSE – Rotation is fixed in the reverse direction. 3 = REQUEST – Rotation direction can be changed on command.	<b>1...3</b>

## Reference signal source selection

Code	Setting for fieldbus control & description	Range
1102	<b>EXT1/EXT2 SEL</b> Defines the source for selecting between the two external control locations EXT1 or EXT2. Thus, defines the source for Start/Stop/Direction commands and reference signals. 8 = COMM – Assigns control of the drive via external control location EXT1 or EXT2 based on the fieldbus control word. • Bit 5 of Command Word 1 (parameter 0301) defines the active external control location (EXT1 or EXT2). • See the fieldbus user's manual for detailed instructions.	<b>-6...12</b>
1103	<b>REF1 SELECT</b> Selects the signal source for external reference REF1. 8 = COMM – Defines the fieldbus as the reference source. 9 = COMM+AI1 – Defines a fieldbus and analogue input 1 (AI1) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 191. 10 = COMM*AI1 – Defines a fieldbus and analogue input 1 (AI1) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 191.	<b>0...17</b>
1106	<b>REF2 SELECT</b> Selects the signal source for external reference REF2. 8 = COMM – Defines the fieldbus as the reference source. 9 = COMM+AI1 – Defines a fieldbus and analogue input 1 (AI1) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 191. 10 = COMM*AI1 – Defines a fieldbus and analogue input 1 (AI1) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 191.	<b>0...19</b>

## Digital output signal source selection

Code	Setting for fieldbus control & description	Range																																																																																																																																
1401	<p><b>RELAY OUTPUT 1</b></p> <p>Defines the event or condition that activates relay 1 – what relay output 1 means.</p> <p>35 = COMM – Energise the relay based on the input from the fieldbus communication.</p> <ul style="list-style-type: none"> <li>• Fieldbus writes a binary code in parameter 0134 that energises relay 1...relay 6 according to the table below.</li> <li>• 0 = De-energise the relay, 1 = Energise the relay.</li> </ul> <table border="1"> <thead> <tr> <th>Par. 0134</th> <th>Binary</th> <th>RO6</th> <th>RO5</th> <th>RO4</th> <th>RO3</th> <th>RO2</th> <th>RO1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>000000</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>000001</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> </tr> <tr> <td>2</td> <td>000010</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> </tr> <tr> <td>3</td> <td>000011</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>4</td> <td>000100</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>5...62</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> </tr> <tr> <td>63</td> <td>111111</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> </tr> </tbody> </table> <p>36 = COMM(-1) – Energise the relay based on the input from the fieldbus communication.</p> <ul style="list-style-type: none"> <li>• Fieldbus writes a binary code in parameter 0134 that energises relay 1...relay 6 according to the table below.</li> <li>• 0 = De-energise the relay, 1 = Energise the relay.</li> </ul> <table border="1"> <thead> <tr> <th>Par. 0134</th> <th>Binary</th> <th>RO6</th> <th>RO5</th> <th>RO4</th> <th>RO3</th> <th>RO2</th> <th>RO1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>000000</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> </tr> <tr> <td>1</td> <td>000001</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td>2</td> <td>000010</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>3</td> <td>000011</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>4</td> <td>000100</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>5...62</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> </tr> <tr> <td>63</td> <td>111111</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> </tbody> </table>	Par. 0134	Binary	RO6	RO5	RO4	RO3	RO2	RO1	0	000000	0	0	0	0	0	0	1	000001	0	0	0	0	0	1	2	000010	0	0	0	0	1	0	3	000011	0	0	0	0	1	1	4	000100	0	0	0	1	0	0	5...62	...	...	...	...	...	...	...	63	111111	1	1	1	1	1	1	Par. 0134	Binary	RO6	RO5	RO4	RO3	RO2	RO1	0	000000	1	1	1	1	1	1	1	000001	1	1	1	1	1	0	2	000010	1	1	1	1	0	1	3	000011	1	1	1	1	0	0	4	000100	1	1	1	0	1	1	5...62	...	...	...	...	...	...	...	63	111111	0	0	0	0	0	0	0...47
Par. 0134	Binary	RO6	RO5	RO4	RO3	RO2	RO1																																																																																																																											
0	000000	0	0	0	0	0	0																																																																																																																											
1	000001	0	0	0	0	0	1																																																																																																																											
2	000010	0	0	0	0	1	0																																																																																																																											
3	000011	0	0	0	0	1	1																																																																																																																											
4	000100	0	0	0	1	0	0																																																																																																																											
5...62	...	...	...	...	...	...	...																																																																																																																											
63	111111	1	1	1	1	1	1																																																																																																																											
Par. 0134	Binary	RO6	RO5	RO4	RO3	RO2	RO1																																																																																																																											
0	000000	1	1	1	1	1	1																																																																																																																											
1	000001	1	1	1	1	1	0																																																																																																																											
2	000010	1	1	1	1	0	1																																																																																																																											
3	000011	1	1	1	1	0	0																																																																																																																											
4	000100	1	1	1	0	1	1																																																																																																																											
5...62	...	...	...	...	...	...	...																																																																																																																											
63	111111	0	0	0	0	0	0																																																																																																																											
1402	<p><b>RELAY OUTPUT 2</b></p> <p>Defines the event or condition that activates relay 2 – what relay output 2 means.</p> <ul style="list-style-type: none"> <li>• See 1401 RELAY OUTPUT 1.</li> </ul>	0...47																																																																																																																																
1403	<p><b>RELAY OUTPUT 3</b></p> <p>Defines the event or condition that activates relay 3 – what relay output 3 means.</p> <ul style="list-style-type: none"> <li>• See 1401 RELAY OUTPUT 1.</li> </ul>	0...47																																																																																																																																

Code	Setting for fieldbus control & description	Range
1410 ... 1412	<b>RELAY OUTPUT 4...6</b> Defines the event or condition that activates relay 4...6 – what relay outputs 4...6 means. • See 1401 RELAY OUTPUT 1.	<b>0...47</b>

### Analogue output signal source selection

Code	Setting for fieldbus control & description	Range
1501	<b>AO1 CONTENT SEL</b> Defines the content for analogue output AO1. 135 = COMM VALUE 1 – Energise output based on the input from fieldbus communication (parameter 0135). 136 = COMM VALUE 2 – Energise output based on the input from fieldbus communication (parameter 0136).	<b>99...178</b>
1502	<b>AO1 CONTENT MIN</b> Sets the minimum content value. • Content is the parameter selected by parameter 1501. • Minimum value refers to the minimum content value that will be converted to an analogue output. • These parameters (content and current min. and max. settings) provide scale and offset adjustment for the output. See the figure.	-
	<p>The figure consists of two graphs illustrating the relationship between AO (mA) and AO CONTENT. The top graph shows a linear increase in AO (mA) as AO CONTENT increases, starting from a minimum value (P 1504 / P 1510) and reaching a maximum value (P 1505 / P 1511). The transition from the minimum to the maximum occurs at P 1502/1508, and the output saturates at P 1503/1509. The bottom graph shows a linear decrease in AO (mA) as AO CONTENT increases, starting from a maximum value (P 1505 / P 1511) and reaching a minimum value (P 1504 / P 1510). The transition from the maximum to the minimum occurs at P 1503/1509, and the output saturates at P 1502/1508.</p>	
1503	<b>AO1 CONTENT MAX</b> Sets the maximum content value • Content is the parameter selected by parameter 1501. • Maximum value refers to the maximum content value that will be converted to an analogue output.	-
1504	<b>MINIMUM AO1</b> Sets the minimum output current.	<b>0.0...20.0 mA</b>



Code	Setting for fieldbus control & description	Range
1505	<b>MAXIMUM AO1</b> Sets the maximum output current.	<b>0.0...20.0 mA</b>
1506	<b>FILTER AO1</b> Defines the filter time constant for AO1. <ul style="list-style-type: none"> <li>The filtered signal reaches 63% of a step change within the time specified.</li> <li>See the figure for parameter 1303 in chapter <a href="#">Parameter listing and descriptions</a>.</li> </ul>	<b>0.0...10.0 s</b>
1507	<b>AO2 CONTENT SEL</b> Defines the content for analogue output AO2. See AO1 CONTENT SEL above.	<b>99...178</b>
1508	<b>AO2 CONTENT MIN</b> Sets the minimum content value. See AO1CONTENT MIN above.	-
1509	<b>AO2 CONTENT MAX</b> Sets the maximum content value. See AO1 CONTENT MAX above.	-
1510	<b>MINIMUM AO2</b> Sets the minimum output current. See MINIMUM AO1 above.	<b>0...20.0 mA</b>
1511	<b>MAXIMUM AO2</b> Sets the maximum output current. See MAXIMUM AO1 above.	<b>0...20.0 mA</b>
1512	<b>FILTER AO2</b> Defines the filter time constant for AO2. See FILTER AO1 above.	<b>0...10.0 s</b>

## System control inputs


Code	Setting for fieldbus control & description	Range
1601	<b>RUN ENABLE</b> Selects the source of the Run enable signal. See the figure on page <a href="#">214</a> . 7 = COMM – Assigns the fieldbus Command Word as the source for the Run enable signal. <ul style="list-style-type: none"> <li>Bit 6 of Command Word 1 (parameter 0301) activates the Run disable signal.</li> <li>See the fieldbus user's manual for detailed instructions.</li> </ul> <b>Note:</b> Hardware is bypassed if a command word is the source of the Run enable signal.	<b>-6...7</b>
1604	<b>FAULT RESET SEL</b> Selects the source for the fault reset signal. The signal resets the drive after a fault trip if the cause of the fault no longer exists. 8 = COMM – Defines the fieldbus as a fault reset source. <ul style="list-style-type: none"> <li>The Command Word is supplied through fieldbus communication.</li> <li>The bit 4 of Command Word 1 (parameter 0301) resets the drive.</li> </ul>	<b>-6...8</b>

Code	Setting for fieldbus control & description	Range
1606	<b>LOCAL LOCK</b> Defines control for the use of the HAND mode. The HAND mode allows drive control from the control panel (operator keypad). <ul style="list-style-type: none"> <li>When LOCAL LOCK is active, the control panel cannot change from the AUTO mode to the HAND mode.</li> </ul> 8 = COMM – Defines bit 14 of Command Word 1 (parameter 0301) as the control for setting the local lock. <ul style="list-style-type: none"> <li>The Command Word is supplied through fieldbus communication.</li> </ul>	<b>-6...8</b>
1607	<b>PARAM SAVE</b> Saves all altered parameters to the permanent memory. <ul style="list-style-type: none"> <li>Parameters altered through a fieldbus are not automatically saved to the permanent memory. To save, you must use this parameter.</li> <li>If 1602 PARAMETER LOCK = 2 (NOT SAVED), parameters altered from the control panel (operator keypad) are not saved. To save, you must use this parameter.</li> <li>If 1602 PARAMETER LOCK = 1 (OPEN), parameters altered from the control panel are stored immediately to permanent memory.</li> </ul> 0 = DONE – The value changes automatically when all parameters are saved. 1 = SAVE... – Saves altered parameters to the permanent memory.	<b>0=DONE, 1=SAVE</b>
1608	<b>START ENABLE 1</b> Selects the source of the Start enable 1 signal. See the figure on page <a href="#">214</a> . <b>Note:</b> Start enable functionality <b>differs</b> from the Run enable functionality. 7 = COMM – Assigns the fieldbus Command Word as the source for the Start enable 1 signal. <ul style="list-style-type: none"> <li>Bit 2 of Command Word 2 (parameter 0302) activates the Start disable 1 signal.</li> <li>See the fieldbus user's manual for detailed instructions.</li> </ul>	<b>-6...7</b>
1609	<b>START ENABLE 2</b> Selects the source of the Start enable 2 signal. <b>Note:</b> Start enable functionality <b>differs</b> from the Run enable functionality. 7 = COMM – Assigns the fieldbus Command Word as the source for the Start enable 2 signal. <ul style="list-style-type: none"> <li>Bit 3 of Command Word 2 (parameter 0302) activates the Start disable 2 signal.</li> <li>See the fieldbus user's manual for detailed instructions.</li> </ul>	<b>-6...7</b>

## Acceleration/deceleration ramp pair selection

Code	Description	Range
2201	<p><b>ACC/DEC 1/2 SEL</b></p> <p>Defines control for selection of acceleration/deceleration ramps.</p> <ul style="list-style-type: none"> <li>Ramps are defined in pairs, with one ramp for acceleration and one ramp for deceleration.</li> </ul> <p>7 = COMM – Defines bit 10 of Command Word 1 (parameter 0301) as the control for ramp pair selection.</p> <ul style="list-style-type: none"> <li>The command word is supplied through fieldbus communication.</li> </ul>	<b>-6...6</b>
2209	<p><b>RAMP INPUT 0</b></p> <p>Defines control for forcing the speed to 0 with the currently used deceleration ramp (see parameters 2203 DECELER TIME 1 and 2206 DECELER TIME 2).</p> <p>7 = COMM – Defines bit 13 of the Command Word 1 as the control for forcing the speed to 0.</p> <ul style="list-style-type: none"> <li>The command word is supplied through fieldbus communication.</li> </ul>	<b>-6...7</b>

## Communication fault functions

Code	Description	Range
3018	<p><b>COMM FAULT FUNC</b></p> <p>Defines the drive response if the fieldbus communication is lost.</p> <p>0 = NOT SEL – No response</p> <p>1 = FAULT – Displays a fault (28, SERIAL 1 ERR) and the drive coasts to stop.</p> <p>2 = CONST SP 7 – Displays an alarm (2005, IO COMM) and sets the speed using 1208 CONST SPEED 7. This “alarm speed” remains active until the fieldbus writes a new reference value.</p> <p>3 = LAST SPEED – Displays an alarm (2005, IO COMM) and sets the speed using the last operating level. This value is the average speed over the last 10 seconds. This “alarm speed” remains active until the fieldbus writes a new reference value.</p> <p> <b>WARNING!</b> If you select CONST SP 7, or LAST SPEED, make sure that continued operation is safe when the fieldbus communication is lost.</p>	<b>0...3</b>
3019	<p><b>COMM FAULT TIME</b></p> <p>Sets the communication fault time used with 3018 COMM FAULT FUNC.</p> <ul style="list-style-type: none"> <li>Brief interruptions in the fieldbus communication are not treated as faults if they are less than the COMM FAULT TIME value.</li> </ul>	<b>0...600.0 s</b>

## PID control feedback source selection

Code	Description	Range										
4010	<p><b>SET POINT SEL</b></p> <p>Defines the reference signal source for the PID controller.</p> <ul style="list-style-type: none"> <li>Parameter has no significance when the PID regulator is by-passed (see 8121 REG BYPASS CTRL).</li> </ul> <p>8 = COMM – Fieldbus provides reference.</p> <p>9 = COMM+AI1 – Defines a fieldbus and analogue input 1 (AI1) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 160.</p> <p>10 = COMM*AI1 – Defines a fieldbus and analogue input 1 (AI1) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 160.</p> <p><b>Analogue input reference correction</b></p> <p>Parameter values 9, 10, and 14...17 use the formula in the following table.</p> <table border="1"> <thead> <tr> <th>Value setting</th> <th>Calculation of the AI reference</th> </tr> </thead> <tbody> <tr> <td>C + B</td> <td>C value + (B value - 50% of reference value)</td> </tr> <tr> <td>C * B</td> <td>C value * (B value / 50% of reference value)</td> </tr> <tr> <td>C - B</td> <td>(C value + 50% of reference value) - B value</td> </tr> <tr> <td>C / B</td> <td>(C value * 50% of reference value) / B value</td> </tr> </tbody> </table> <p>Where:</p> <ul style="list-style-type: none"> <li>C = Main reference value (= COMM for values 9, 10 and = AI1 for values 14...17)</li> <li>B = Correcting reference (= AI1 for values 9, 10 and = AI2 for values 14...17).</li> </ul> <p><b>Example:</b> The figure shows the reference source curves for value settings 9, 10, and 14...17, where:</p> <ul style="list-style-type: none"> <li>C = 25%.</li> <li>P 4012 SETPOINT MIN = 0.</li> <li>P 4013 SETPOINT MAX = 0.</li> <li>B varies along the horizontal axis.</li> </ul>	Value setting	Calculation of the AI reference	C + B	C value + (B value - 50% of reference value)	C * B	C value * (B value / 50% of reference value)	C - B	(C value + 50% of reference value) - B value	C / B	(C value * 50% of reference value) / B value	0...19
Value setting	Calculation of the AI reference											
C + B	C value + (B value - 50% of reference value)											
C * B	C value * (B value / 50% of reference value)											
C - B	(C value + 50% of reference value) - B value											
C / B	(C value * 50% of reference value) / B value											
4014	<p><b>FBK SEL</b></p> <p>Defines the PID controller feedback (actual signal).</p> <p>11 = COMM FBK 1 – Signal 0158 PID COMM VALUE 1 provides the feedback signal.</p> <p>12 = COMM FBK 2 – Signal 0159 PID COMM VALUE 2 provides the feedback signal.</p>	1...13										

Code	Description	Range
4016	<b>ACT1 INPUT</b> Defines the source for actual value 1 (ACT1). 6 = COMM ACT 1 – Uses value of signal 0158 PID COMM VALUE 1 for ACT1. Value is not scaled. 7 = COMM ACT 2 – Uses value of signal 0159 PID COMM VALUE 2 for ACT1. Value is not scaled.	1...7
4017	<b>ACT2 INPUT</b> Defines the source for actual value 2 (ACT2). 6 = COMM ACT 1 – Uses value of signal 0158 PID COMM VALUE 1 for ACT2. Value is not scaled. 7 = COMM ACT 2 – Uses value of signal 0159 PID COMM VALUE 2 for ACT2. Value is not scaled.	1...7

Code	Description	Range
4110, 4114, 4116, 4117	These parameters belong to PID parameter set 2. The operation is analogous with set 1 parameters 4010, 4014, 4016 and 4017.	

## Fault handling

The ACH550 indicates all faults in clear text and fault number in the control panel (operator keypad) display. Refer to chapter [Diagnostics and maintenance](#). Additionally, a fault code is allocated to each fault name shown in parameters 0401, 0412 and 0413. The fieldbus-specific fault code is indicated as a hexadecimal value coded according to the DRIVECOM specification. Note that not all fieldbuses support the fault code indication. The table below defines the fault codes for each fault name.

Fault name in control panel	Drive fault code	Fieldbus fault code
OVERCURRENT	1	2310h
DC OVERVOLT	2	3210h
DEV OVERTEMP	3	4210h
SHORT CIRC	4	2340h
DC UNDERVOLT	6	3220h
AI1 LOSS	7	8110h
AI2 LOSS	8	8110h
MOT OVERTEMP	9	4310h
PANEL LOSS	10	5300h
ID RUN FAIL	11	FF84h
MOTOR STALL	12	7121h
EXT FAULT 1	14	9000h
EXT FAULT 2	15	9001h
EARTH FAULT	16	2330h
Obsolete	17	FF6Ah
THERM FAIL	18	5210h
OPEX LINK	19	7500h
OPEX PWR	20	5414h
CURR MEAS	21	2211h
SUPPLY PHASE	22	3130h
OVERSPEED	24	7310h
DRIVE ID	26	5400h
CONFIG FILE	27	630Fh
SERIAL 1 ERR	28	7510h

EFB CON FILE	29	6306h
FORCE TRIP	30	FF90h
EFB 1	31	FF92h
EFB 2	32	FF93h
EFB 3	33	FF94h
MOTOR PHASE	34	FF56h
OUTP WIRING	35	FF95h
INCOMPATIBLE SW	36	630Fh
CB OVERTEMP	37	4110h
USER LOAD CURVE	38	FF6Bh
SERF CORRUPT	101	FF55h
SERF MACRO	103	FF55h
DSP T1 OVERLOAD	201	6100h
DSP T2 OVERLOAD	202	6100h
DSP T3 OVERLOAD	203	6100h
DSP STACK ERROR	204	6100h
CB ID ERROR	206	5000h
EFB LOAD ERROR	207	6100h
PAR HZRPM	1000	6320h
PAR PFA REF NEG	1001	6320h
PAR AI SCALE	1003	6320h
PAR AO SCALE	1004	6320h
PAR PCU 2	1005	6320h
PAR EXT RO	1006	6320h
PAR FIELDBUS MISSING	1007	6320h
PAR PFA MODE	1008	6320h
PAR PCU 1	1009	6320h
PAR PFA & OVERRIDE	1010	6320h
PAR OVERRIDE	1011	6320h
PAR PFA IO 1	1012	6320h
PAR PFA IO 2	1013	6320h
PAR PFA IO 3	1014	6320h
Not used	1015	6320h
PAR USER LOAD C	1016	6320h





# Parameter listing and descriptions

---

## What this chapter contains

This chapter contains the parameter listing of predefined application macros and descriptions of individual parameters for the ACH550.

## Parameter groups

The parameters are grouped as follows:

- **Group 99: START-UP DATA** – Defines the data required to set up the drive and enter motor information.
- **Group 01: OPERATING DATA** – Contains the operating data including actual signals.
- **Group 03: FB ACTUAL SIGNALS** – Monitors fieldbus communications.
- **Group 04: FAULT HISTORY** – Stores a recent fault history reported by the drive.
- **Group 10: START/STOP/DIR** – Defines external sources for commands that enable start, stop and direction changes. Locks direction or enables direction control.
- **Group 11: REFERENCE SELECT** – Defines how the drive selects between command sources.
- **Group 12: CONSTANT SPEEDS** – Defines a set of constant speeds.
- **Group 13: ANALOGUE INPUTS** – Defines the limits and filtering for analogue inputs.
- **Group 14: RELAY OUTPUTS** – Defines the conditions which activate relay outputs.
- **Group 15: ANALOGUE OUTPUTS** – Defines the drive's analogue outputs.
- **Group 16: SYSTEM CONTROLS** – Defines system level locks, resets and enables.
- **Group 17: OVERRIDE** – Defines override enabling/disabling, override activation signal, override speed/frequency and pass code.
- **Group 20: LIMITS** – Defines minimum and maximum limits for driving the motor.

- *Group 21: START/STOP* – Defines how the motor starts and stops.
- *Group 22: ACCEL/DECEL* – Defines ramps which control the rate of acceleration and deceleration.
- *Group 23: SPEED CONTROL* – Defines variables for speed control.
- *Group 25: CRITICAL SPEEDS* – Defines critical speeds or speed ranges.
- *Group 26: MOTOR CONTROL* – Defines motor control variables.
- *Group 29: MAINTENANCE TRIG* – Defines usage levels and trigger points.
- *Group 30: FAULT FUNCTIONS* – Defines faults and responses.
- *Group 31: AUTOMATIC RESET* – Defines conditions for automatic resets.
- *Group 32: SUPERVISION* – Defines supervision for signals.
- *Group 33: INFORMATION* – Contains software information.
- *Group 34: PANEL DISPLAY* – Defines the content for control panel display.
- *Group 35: MOTOR TEMP MEAS* – Defines motor overheating detection and reporting.
- *Group 36: TIMED FUNCTIONS* – Defines timed functions.
- *Group 37: USER LOAD CURVE* – Defines user adjustable load curves.
- *Group 40: PROCESS PID SET 1* – Defines a process PID control operation mode for the drive.
- *Group 41: PROCESS PID SET 2* – Defines a process PID control operation mode for the drive.
- *Group 42: EXT / TRIM PID* – Defines parameters for External PID.
- *Group 45: ENERGY SAVING* - Defines the setup of calculation and optimization of energy savings.
- *Group 51: EXT COMM MODULE* – Defines set-up variables for external fieldbus communication module (FBA).
- *Group 52: PANEL COMM* – Defines set-up variables for panel communication.
- *Group 53: EFB PROTOCOL* – Defines set-up variables for embedded fieldbus communication protocol.

- *Group 64: LOAD ANALYZER* - Defines the load analyzer for analyzing the customer's process and sizing the drive and the motor
- *Group 81: PFA CONTROL* – Defines pump and fan alternation mode of operation.
- *Group 98: OPTIONS* – Configures options for drive.

## Group 99: START-UP DATA

This group defines special start-up data required to:

- set up the drive
- enter motor information.

Code	Description	Range
9901	<p><b>LANGUAGE</b></p> <p>Selects the display language.</p> <p>0 = ENGLISH      1 = ENGLISH (AM)      2 = DEUTSCH      3 = ITALIANO  4 = ESPAÑOL      5 = PORTUGUES      6 = NEDERLANDS      7 = FRANCAIS  8 = DANSK      9 = SUOMI      10 = SVENSKA      11 = RUSSKI  12 = POLSKI      13 = TÜRKÇE      14 = CZECH      15 = MAGYAR</p>	0...16
9902	<p><b>APPLIC MACRO</b></p> <p>Selects an application macro, or loads or saves a parameter set. Application macros automatically edit parameters to configure the ACH550 for a particular application.</p> <p>1 = HVAC DEFAULT 2 = SUPPLY FAN 3 = RETURN FAN 4 = COOLING TOWER FAN 5 = CONDENSER 6 = BOOSTER PUMP 7 = PUMP ALTERNATION  8 = INTERNAL TIMER 9 = INTERNAL TIMER WITH CONSTANT SPEEDS  10 = FLOATING POINT 11 = DUAL SETPOINT PID 12 = DUAL SETPOINT PID WITH CONSTANT SPEEDS 13 = E-BYPASS 14 = HAND CONTROL 31 = LOAD FD SET 0 = USER S1 LOAD -1 = USER S1 SAVE -2 = USER S2 LOAD -3 = USER S2 SAVE -4 = OR SET LOAD</p> <p>1...14 – Selects an application macro.</p> <p>31 = LOAD FD SET – Activates FlashDrop parameter values as defined by the downloaded FlashDrop file. Parameter view is selected by parameter 1611 PARAMETER VIEW.</p> <ul style="list-style-type: none"> <li>• FlashDrop is an optional device for fast copying of parameters to unpowered drives. The FlashDrop allows easy customizing of the parameter list, e.g. selected parameters can be hidden. For more information, see <i>MFDT-01 FlashDrop User's Manual</i> (3AFE68591074 [English]).</li> </ul> <p>-1 = USER S1 SAVE, -3 = USER S2 SAVE – Saves a user parameter set into the drive permanent memory for later use.</p> <ul style="list-style-type: none"> <li>• Each set contains parameter settings, including <a href="#">Group 99: START-UP DATA</a>, and the results of the motor identification run.</li> </ul> <p>0 = USER S1 LOAD, -2 = USER S2 LOAD – Takes a user parameter set back in use.</p> <p>-4 = OR SET LOAD – Loads the override parameter set manually.</p> <ul style="list-style-type: none"> <li>• The automatic saving and loading of the override parameter set is defined by <a href="#">Group 17: OVERRIDE</a>.</li> </ul>	1...14, 0...-4

Code	Description	Range
9904	<p><b>MOTOR CTRL MODE</b></p> <p>Selects the motor control mode.</p> <p>1 = VECTOR:SPEED – sensorless vector control mode</p> <ul style="list-style-type: none"> <li>• Reference 1 is speed reference in rpm.</li> <li>• Reference 2 is speed reference in % (100% is absolute maximum speed, equal to the value of parameter 2002 MAXIMUM SPEED, or 2001 MINIMUM SPEED if the absolute value of the minimum speed is greater than the maximum speed).</li> </ul> <p>3 = SCALAR:FREQ – scalar control mode</p> <ul style="list-style-type: none"> <li>• Reference 1 is frequency reference in Hz.</li> <li>• Reference 2 is frequency reference in % (100% is absolute maximum frequency, equal to the value of parameter 2008 MAXIMUM FREQ, or 2007 MINIMUM FREQ if the absolute value of the minimum speed is greater than the maximum speed).</li> </ul>	<p><b>1=VECTOR:SPEED, 3=SCALAR:FREQ</b></p>
9905	<p><b>MOTOR NOM VOLT</b></p> <p>Defines the nominal motor voltage.</p> <ul style="list-style-type: none"> <li>• Must equal the value on the motor rating plate.</li> <li>• Sets the maximum drive output voltage supplied to the motor.</li> <li>• The ACH550 cannot supply the motor with a voltage greater than the mains voltage.</li> </ul> <div style="text-align: center;"> <p>The graph plots Output voltage on the vertical axis and Output frequency on the horizontal axis. A solid line starts at the origin (0,0) and rises linearly to a point where it becomes horizontal. A dashed horizontal line from this point to the vertical axis is labeled 'P 9905'. A dashed vertical line from this point to the horizontal axis is labeled 'P 9907'.</p> </div>	<p><b>200...600 V</b></p>
9906	<p><b>MOTOR NOM CURR</b></p> <p>Defines the nominal motor current.</p> <ul style="list-style-type: none"> <li>• Must equal the value on the motor rating plate.</li> <li>• Range allowed: <math>(0.2...2.0) \cdot I_N</math> (where <math>I_N</math> is drive current).</li> </ul>	<p><b>type dependent</b></p>
9907	<p><b>MOTOR NOM FREQ</b></p> <p>Defines the nominal motor frequency.</p> <ul style="list-style-type: none"> <li>• Range: 10...500 Hz (typically 50 or 60 Hz)</li> <li>• Sets the frequency at which output voltage equals the MOTOR NOM VOLT.</li> <li>• Field weakening point = Nom freq · Supply Volt / Mot Nom Volt</li> </ul>	<p><b>10.0...500 Hz</b></p>
9908	<p><b>MOTOR NOM SPEED</b></p> <p>Defines the nominal motor speed.</p> <ul style="list-style-type: none"> <li>• Must equal the value on the motor rating plate.</li> </ul>	<p><b>50...30000 rpm</b></p>

Code	Description	Range
9909	<b>MOTOR NOM POWER</b> Defines the nominal motor power. <ul style="list-style-type: none"> <li>• Must equal the value on the motor rating plate.</li> </ul>	<b>type dependent</b>
9910	<b>ID RUN</b> This parameter controls a self-calibration process called the Motor Id Run. During this process, the drive operates the motor in order to identify its characteristics, and then optimises control by creating a motor model. This motor model is especially effective when: <ul style="list-style-type: none"> <li>• Operation point is near zero speed.</li> <li>• Operation requires a torque range above the motor nominal torque, over a wide speed range, and without any measured speed feedback (i.e. without a pulse encoder).</li> </ul> If no Motor Id Run is performed, the drive uses a less detailed motor model created when the drive is first run. This “First Start” id magnetisation model is updated automatically* after any motor parameter is changed. To update the model, the drive magnetises the motor for 10 to 15 seconds at zero speed. * Creating the “First Start” model does require that either 9904 = 1 (VECTOR:SPEED), or 9904 = 3 (SCALAR:FREQ) and 2101 = 3 (SCALAR FLYST) or 5 (FLY + BOOST). <b>Note:</b> Motor models work with internal parameters and user-defined motor parameters. In creating a model the drive does not change any user-defined parameters. 0 = OFF/IDMAGN – Disables the Motor Id Run creation process. (Does not disable the operation of a motor model.) 1 = ON – Enables a Motor Id Run at the next start command. After run completion, this value automatically changes to 0. To perform a Motor Id Run: <ol style="list-style-type: none"> <li>1. De-couple load from motor (or otherwise reduce load to near zero).</li> <li>2. Verify that motor operation is safe:               <ul style="list-style-type: none"> <li>• The run automatically operates the motor in the forward direction – confirm that forward rotation is safe.</li> <li>• The run automatically operates the motor at 50...80% of nominal speed – confirm that operation at these speeds is safe.</li> </ul> </li> <li>3. Check following parameters (if changed from factory settings):               <ul style="list-style-type: none"> <li>• 2001 MINIMUM SPEED <math>\leq 0</math></li> <li>• 2002 MAXIMUM SPEED <math>&gt; 80\%</math> of motor rated speed.</li> <li>• 2003 MAX CURRENT <math>\geq 100\%</math> of <math>I_{2N}</math> value</li> <li>• The maximum torque (parameters 2014, 2017 and/or 2018) <math>&gt; 50\%</math>.</li> </ul> </li> <li>4. On the control panel, select:               <ul style="list-style-type: none"> <li>• Select PARAMETERS.</li> <li>• Select group 99.</li> <li>• Select parameter 9910.</li> </ul> </li> </ol>	<b>0=OFF/IDMAGN, 1=ON</b>


Code	Description	Range
9915	<b>MOTOR COSPHI</b> Defines the nominal motor cos phi (power factor). The parameter improves performance especially with high efficiency motors. 0 = IDENTIFIED – Drive identifies the cos phi automatically by estimation. 0.01...0.97 – The user can enter the value used as the cos phi.	<b>0=IDENTIFIED; 0.01...0.97</b>


## Group 01: OPERATING DATA

This group contains drive operating data, including actual signals. The drive sets the values for actual signals, based on measurements or calculations. You cannot set these values.

Code	Description	Range
0101	<b>SPEED &amp; DIR</b> Calculated signed speed of the motor (rpm). The absolute value of 0101 SPEED & DIR is the same as the value of 0102 speed. <ul style="list-style-type: none"> <li>The value of 0101 SPEED &amp; DIR is positive if the motor runs in the forward direction.</li> <li>The value of 0101 SPEED &amp; DIR is negative if the motor runs in the reverse direction.</li> </ul>	<b>-30000...30000 rpm</b>
0102	<b>SPEED</b> Calculated speed of the motor (rpm)	<b>0...30000 rpm</b>
0103	<b>OUTPUT FREQ</b> Frequency (Hz) applied to the motor. (Also shown by default in the OUTPUT display.)	<b>0.0...500.0 Hz</b>
0104	<b>CURRENT</b> Motor current, as measured by the ACH550. (Also shown by default in the OUTPUT display.)	<b>type dependent</b>
0105	<b>TORQUE</b> Output torque. Calculated value of torque on motor shaft in % of the motor nominal torque.	<b>-200...200%</b>
0106	<b>POWER</b> Measured motor power in kW	<b>type dependent</b>
0107	<b>DC BUS VOLTAGE</b> DC bus voltage in V DC, as measured by the ACH550	<b>0...2.5 · V<sub>dN</sub></b>
0109	<b>OUTPUT VOLTAGE</b> Voltage applied to the motor	<b>0...2.0 · V<sub>dN</sub></b>
0110	<b>DRIVE TEMP</b> Temperature of the drive heatsink in Celsius	<b>0...150 °C</b>
0111	<b>EXTERNAL REF 1</b> External reference, REF1, in rpm or Hz – units determined by parameter 9904	<b>0...300000 rpm/ 0...500 Hz</b>
0112	<b>EXTERNAL REF 2</b> External reference, REF2, in %	<b>0...100% (0...600% for torque)</b>

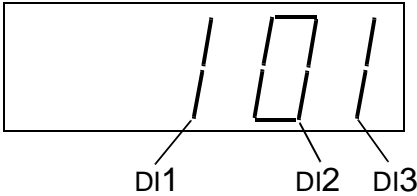

Code	Description	Range
0113	<b>CTRL LOCATION</b> Active control location. Alternatives are: 0 = HAND 1 = EXT1 2 = EXT2	<b>0=HAND, 1=EXT1, 2=EXT2</b>
0114	<b>RUN TIME (R)</b> Drive's accumulated running time in hours (h) • Can be <b>reset</b> by pressing the UP and DOWN keys simultaneously when in the Parameters mode.	<b>0...9999 h</b>
0115	<b>KWH COUNTER (R)</b> Drive's accumulated power consumption in kilowatt hours The counter value is accumulated till it reaches 65535 after which the counter rolls over and starts again from 0. • The counter can be <b>reset</b> by pressing the UP and DOWN keys simultaneously when in the Parameters mode.	<b>0...65535 kWh</b>
0116	<b>APPL BLK OUTPUT</b> Application block output signal. Value is from either: • PFA control, if PFA Control is active, or • parameter 0112 EXTERNAL REF 2.	<b>0...100% (0...600% for torque)</b>
0118	<b>DI 1-3 STATUS</b> Status of the three digital inputs • Status is displayed as a binary number. • 1 indicates that the input is activated. • 0 indicates that the input is deactivated.  	<b>000...111 (0...7 decimal)</b>
0119	<b>DI 4-6 STATUS</b> Status of the three digital inputs • See parameter 0118 DI 1-3 STATUS.	<b>000...111 (0...7 decimal)</b>
0120	<b>AI 1</b> Relative value of analogue input 1 in %	<b>0...100%</b>
0121	<b>AI 2</b> Relative value of analogue input 2 in %	<b>0...100%</b>

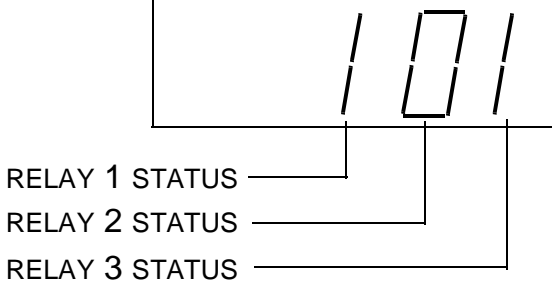Code	Description	Range
0122	<p><b>RO 1-3 STATUS</b></p> <p>Status of the three relay outputs</p> <ul style="list-style-type: none"> <li>• 1 indicates that the relay is energised.</li> <li>• 0 indicates that the relay is de-energised.</li> </ul> 	<b>0...111 (0...7 decimal)</b>
0123	<p><b>RO 4-6 STATUS</b></p> <p>Status of the three relay outputs. See parameter 0122.</p>	<b>0...111 (0...7 decimal)</b>
0124	<p><b>AO 1</b></p> <p>Analogue output 1 value in milliamperes</p>	<b>0...20 mA</b>
0125	<p><b>AO 2</b></p> <p>Analogue output 2 value in milliamperes</p>	<b>0...20 mA</b>
0126	<p><b>PID 1 OUTPUT</b></p> <p>Process PID (PID1) controller output value in %</p>	<b>-1000...1000%</b>
0127	<p><b>PID 2 OUTPUT</b></p> <p>External PID (PID2) controller output value in %</p>	<b>-100...100%</b>
0128	<p><b>PID 1 SETPNT</b></p> <p>PID1 controller setpoint signal</p> <ul style="list-style-type: none"> <li>• Units and scale defined by PID parameters</li> </ul>	<b>unit and scale defined by par. 4006/4106 and 4007/4107</b>
0129	<p><b>PID 2 SETPNT</b></p> <p>PID2 controller setpoint signal</p> <ul style="list-style-type: none"> <li>• Units and scale defined by PID parameters</li> </ul>	<b>unit and scale defined by par. 4206 and 4207</b>
0130	<p><b>PID 1 FBK</b></p> <p>PID1 controller feedback signal</p> <ul style="list-style-type: none"> <li>• Units and scale defined by PID parameters</li> </ul>	<b>unit and scale defined by par. 4006/4106 and 4007/4107</b>
0131	<p><b>PID 2 FBK</b></p> <p>PID2 controller feedback signal</p> <ul style="list-style-type: none"> <li>• Units and scale defined by PID parameters</li> </ul>	<b>unit and scale defined by par. 4206 and 4207</b>
0132	<p><b>PID 1 DEVIATION</b></p> <p>Difference between the PID1 controller reference value and actual value</p> <ul style="list-style-type: none"> <li>• Units and scale defined by PID parameters</li> </ul>	<b>unit and scale defined by par. 4006/4106 and 4007/4107</b>

Code	Description	Range
0133	<b>PID 2 DEVIATION</b> Difference between the PID2 controller reference value and actual value • Units and scale defined by PID parameters	<b>unit and scale defined by par. 4206 and 4207</b>
0134	<b>COMM RO WORD</b> Free data location that can be written from the serial link • Used for relay output control • See parameter 1401.	<b>0...65535</b>
0135	<b>COMM VALUE 1</b> Free data location that can be written from the serial link	<b>-32768...+32767</b>
0136	<b>COMM VALUE 2</b> Free data location that can be written from the serial link	<b>-32768...+32767</b>
0137	<b>PROCESS VAR 1</b> Process variable 1 • Defined by parameters in <a href="#">Group 34: PANEL DISPLAY</a>	-
0138	<b>PROCESS VAR 2</b> Process variable 2 • Defined by parameters in <a href="#">Group 34: PANEL DISPLAY</a>	-
0139	<b>PROCESS VAR 3</b> Process variable 3 • Defined by parameters in <a href="#">Group 34: PANEL DISPLAY</a>	-
0140	<b>RUN TIME</b> Drive's accumulated running time in thousands of hours (kh). • Cannot be reset.	<b>0.00...499.99 kh</b>
0141	<b>MWH COUNTER</b> Drive's accumulated power consumption in megawatt hours. • Cannot be reset.	<b>0...65535 MWh</b>
0142	<b>REVOLUTION CNTR</b> Motor's accumulated revolutions in millions of revolutions. • Can be reset by pressing the UP and DOWN keys simultaneously when in the Parameters mode.	<b>0...65535 Mrev</b>
0143	<b>DRIVE ON TIME HI</b> Drive's accumulated power on-time in days. • Cannot be reset.	<b>0...65535 days</b>
0144	<b>DRIVE ON TIME LO</b> Drive's accumulated power on-time in 2 second ticks (30 ticks = 60 seconds). • Shown in format hh.mm.ss. • Cannot be reset.	<b>00.00.00...23:59:58</b>

Code	Description	Range
0145	<b>MOTOR TEMP</b> Motor temperature in degrees Celsius / PTC resistance in ohms. <ul style="list-style-type: none"> <li>Applies only if motor temperature sensor is set up. See parameter 3501.</li> </ul>	<b>-10...200 °C / 0...5000 ohm</b>
0150	<b>CB TEMP</b> Temperature of the drive control board in degrees Celsius. <b>Note:</b> Some drives have a control board (OMIO) that does not support this feature. These drives always show the constant value of 25.0 °C.	<b>-20.0...150.0 °C</b>
0153	<b>MOT THERM STRESS</b> Estimated rise of the motor temperature. Value equals to the estimated motor thermal stress as a percentage of the motor temperature trip level.	<b>0.0...100.0%</b>
0158	<b>PID COMM VALUE 1</b> Data received from fieldbus for PID control (PID1 and PID2).	<b>-32768...+32767</b>
0159	<b>PID COMM VALUE 2</b> Data received from fieldbus for PID control (PID1 and PID2).	<b>-32768...+32767</b>
0174	<b>SAVED KWH</b> Energy saved in kWh compared to the energy used when the load is connected directly to the supply. See the note on page 293. <ul style="list-style-type: none"> <li>The counter value is accumulated till it reaches 999.9 after which the counter rolls over and starts again from 0.0 and the counter value of signal 0175 is incremented by one.</li> <li>Can be reset with parameter 4509 ENERGY RESET (resets all energy calculators at the same time).</li> <li>See <a href="#">Group 45: ENERGY SAVING</a>.</li> </ul>	<b>0.0...999.9 kWh</b>
0175	<b>SAVED MWH</b> Energy saved in MWh compared to the energy used when the load is connected directly to the supply. See the note on page 293. <ul style="list-style-type: none"> <li>The counter value is accumulated till it reaches 65535 after which the counter rolls over and starts again from 0.</li> <li>Can be reset with parameter 4509 ENERGY RESET (resets all energy calculators at the same time).</li> <li>See <a href="#">Group 45: ENERGY SAVING</a>.</li> </ul>	<b>0...65535 MWh</b>

Code	Description	Range
0176	<p><b>SAVED AMOUNT 1</b></p> <p>Energy saved in local currency (remainder when the total saved energy is divided by 1000). See the note on page <a href="#">293</a>.</p> <ul style="list-style-type: none"> <li>To find out the total saved energy in currency units, add the value of parameter 0177 multiplied by 1000 to the value of parameter 0176.</li> </ul> <p><b>Example:</b></p> <p>0176 SAVED AMOUNT 1 = 123.4</p> <p>0177 SAVED AMOUNT 2 = 5</p> <p>Total saved energy = 5 · 1000 + 123.4 = 5123.4 currency units.</p> <ul style="list-style-type: none"> <li>The counter value is accumulated till it reaches 999.9 after which the counter rolls over and starts again from 0.0 and the counter value of signal 0177 is incremented by one.</li> <li>Can be reset with parameter 4509 ENERGY RESET (resets all energy calculators at the same time).</li> <li>Local energy price is set with parameter 4502 ENERGY PRICE.</li> <li>See <a href="#">Group 45: ENERGY SAVING</a>.</li> </ul>	<b>0.0...999.9</b>
0177	<p><b>SAVED AMOUNT 2</b></p> <p>Energy saved in local currency in thousand currency units. Eg value 5 means 5000 currency units. See the note on page <a href="#">293</a>.</p> <ul style="list-style-type: none"> <li>The counter value is accumulated till it reaches 65535 (the counter does not roll over).</li> <li>See parameter 0176 SAVED AMOUNT 1.</li> </ul>	<b>0...65535</b>
0178	<p><b>SAVED CO2</b></p> <p>Reduction on carbon dioxide emissions in tn. See the note on page <a href="#">293</a>.</p> <ul style="list-style-type: none"> <li>The counter value is accumulated till it reaches 6553.5 (the counter does not roll over).</li> <li>Can be reset with parameter 4509 ENERGY RESET (resets all energy calculators at the same time).</li> <li>CO2 conversion factor is set with parameter 4507 CO2 CONV FACTOR.</li> <li>See <a href="#">Group 45: ENERGY SAVING</a>.</li> </ul>	<b>0...6553.5 tn</b>

## Group 03: FB ACTUAL SIGNALS

This group monitors fieldbus communications. See also chapter [Serial communications](#).

Code	Description	Range																																																			
0301	<p><b>FB CMD WORD 1</b></p> <p>Read-only copy of the Fieldbus Command Word 1</p> <ul style="list-style-type: none"> <li>The fieldbus command is the principal means for controlling the drive from a fieldbus controller. The command consists of two Command Words. Bit-coded instructions in the Command Words switch the drive between states.</li> <li>To control the drive using the Command Words, an external location (EXT1 or EXT2) must be active and set to COMM. (See parameters 1001 and 1002.)</li> <li>The control panel displays the word in hex. For example, all zeros and a 1 in Bit 0 display 0001. All zeros and a 1 in Bit 15 display 8000.</li> </ul> <table border="1"> <thead> <tr> <th>Bit #</th> <th>0301, FB CMD WORD 1</th> <th>0302, FB CMD WORD 2</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>STOP</td> <td>FBLOCAL_CTL</td> </tr> <tr> <td>1</td> <td>START</td> <td>FBLOCAL_REF</td> </tr> <tr> <td>2</td> <td>REVERSE</td> <td>START_DISABLE1</td> </tr> <tr> <td>3</td> <td>LOCAL</td> <td>START_DISABLE2</td> </tr> <tr> <td>4</td> <td>RESET</td> <td>Reserved</td> </tr> <tr> <td>5</td> <td>EXT2</td> <td>Reserved</td> </tr> <tr> <td>6</td> <td>RUN_DISABLE</td> <td>Reserved</td> </tr> <tr> <td>7</td> <td>STPMODE_R</td> <td>Reserved</td> </tr> <tr> <td>8</td> <td>STPMODE_EM</td> <td>Reserved</td> </tr> <tr> <td>9</td> <td>STPMODE_C</td> <td>Reserved</td> </tr> <tr> <td>10</td> <td>RAMP_2</td> <td>Reserved</td> </tr> <tr> <td>11</td> <td>RAMP_OUT_0</td> <td>REF_CONST</td> </tr> <tr> <td>12</td> <td>RAMP_HOLD</td> <td>REF_AVE</td> </tr> <tr> <td>13</td> <td>RAMP_IN_0</td> <td>LINK_ON</td> </tr> <tr> <td>14</td> <td>RREQ_LOCALLOC</td> <td>REQ_STARTINH</td> </tr> <tr> <td>15</td> <td>TORQLIM2</td> <td>OFF_INTERLOCK</td> </tr> </tbody> </table>	Bit #	0301, FB CMD WORD 1	0302, FB CMD WORD 2	0	STOP	FBLOCAL_CTL	1	START	FBLOCAL_REF	2	REVERSE	START_DISABLE1	3	LOCAL	START_DISABLE2	4	RESET	Reserved	5	EXT2	Reserved	6	RUN_DISABLE	Reserved	7	STPMODE_R	Reserved	8	STPMODE_EM	Reserved	9	STPMODE_C	Reserved	10	RAMP_2	Reserved	11	RAMP_OUT_0	REF_CONST	12	RAMP_HOLD	REF_AVE	13	RAMP_IN_0	LINK_ON	14	RREQ_LOCALLOC	REQ_STARTINH	15	TORQLIM2	OFF_INTERLOCK	-
Bit #	0301, FB CMD WORD 1	0302, FB CMD WORD 2																																																			
0	STOP	FBLOCAL_CTL																																																			
1	START	FBLOCAL_REF																																																			
2	REVERSE	START_DISABLE1																																																			
3	LOCAL	START_DISABLE2																																																			
4	RESET	Reserved																																																			
5	EXT2	Reserved																																																			
6	RUN_DISABLE	Reserved																																																			
7	STPMODE_R	Reserved																																																			
8	STPMODE_EM	Reserved																																																			
9	STPMODE_C	Reserved																																																			
10	RAMP_2	Reserved																																																			
11	RAMP_OUT_0	REF_CONST																																																			
12	RAMP_HOLD	REF_AVE																																																			
13	RAMP_IN_0	LINK_ON																																																			
14	RREQ_LOCALLOC	REQ_STARTINH																																																			
15	TORQLIM2	OFF_INTERLOCK																																																			
0302	<p><b>FB CMD WORD 2</b></p> <p>Read-only copy of the Fieldbus Command Word 2</p> <ul style="list-style-type: none"> <li>See parameter 0301.</li> </ul>	-																																																			

Code	Description	Range																																																			
0303	<b>FB STS WORD 1</b> Read-only copy of the Status Word 1 <ul style="list-style-type: none"> <li>The drive sends status information to the fieldbus controller. The status consists of two Status Words.</li> </ul>	-																																																			
	<table border="1"> <thead> <tr> <th>Bit #</th> <th>0303, FB STS WORD 1</th> <th>0304, FB STS WORD 2</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>READY</td> <td>ALARM</td> </tr> <tr> <td>1</td> <td>ENABLED</td> <td>NOTICE</td> </tr> <tr> <td>2</td> <td>STARTED</td> <td>DIRLOCK</td> </tr> <tr> <td>3</td> <td>RUNNING</td> <td>LOCALLOCK</td> </tr> <tr> <td>4</td> <td>ZERO_SPEED</td> <td>CTL_MODE</td> </tr> <tr> <td>5</td> <td>ACCELERATE</td> <td>Reserved</td> </tr> <tr> <td>6</td> <td>DECELERATE</td> <td>Reserved</td> </tr> <tr> <td>7</td> <td>AT_SETPOINT</td> <td>CPY_CTL</td> </tr> <tr> <td>8</td> <td>LIMIT</td> <td>CPY_REF1</td> </tr> <tr> <td>9</td> <td>SUPERVISION</td> <td>CPY_REF2</td> </tr> <tr> <td>10</td> <td>REV_REF</td> <td>REQ_CTL</td> </tr> <tr> <td>11</td> <td>REV_ACT</td> <td>REQ_REF1</td> </tr> <tr> <td>12</td> <td>PANEL_LOCAL</td> <td>REQ_REF2</td> </tr> <tr> <td>13</td> <td>FIELDBUS_LOCAL</td> <td>REQ_REF2EXT</td> </tr> <tr> <td>14</td> <td>EXT2_ACT</td> <td>ACK_STARTINH</td> </tr> <tr> <td>15</td> <td>FAULT</td> <td>ACK_OFF_ILCK</td> </tr> </tbody> </table>	Bit #	0303, FB STS WORD 1	0304, FB STS WORD 2	0	READY	ALARM	1	ENABLED	NOTICE	2	STARTED	DIRLOCK	3	RUNNING	LOCALLOCK	4	ZERO_SPEED	CTL_MODE	5	ACCELERATE	Reserved	6	DECELERATE	Reserved	7	AT_SETPOINT	CPY_CTL	8	LIMIT	CPY_REF1	9	SUPERVISION	CPY_REF2	10	REV_REF	REQ_CTL	11	REV_ACT	REQ_REF1	12	PANEL_LOCAL	REQ_REF2	13	FIELDBUS_LOCAL	REQ_REF2EXT	14	EXT2_ACT	ACK_STARTINH	15	FAULT	ACK_OFF_ILCK	
Bit #	0303, FB STS WORD 1	0304, FB STS WORD 2																																																			
0	READY	ALARM																																																			
1	ENABLED	NOTICE																																																			
2	STARTED	DIRLOCK																																																			
3	RUNNING	LOCALLOCK																																																			
4	ZERO_SPEED	CTL_MODE																																																			
5	ACCELERATE	Reserved																																																			
6	DECELERATE	Reserved																																																			
7	AT_SETPOINT	CPY_CTL																																																			
8	LIMIT	CPY_REF1																																																			
9	SUPERVISION	CPY_REF2																																																			
10	REV_REF	REQ_CTL																																																			
11	REV_ACT	REQ_REF1																																																			
12	PANEL_LOCAL	REQ_REF2																																																			
13	FIELDBUS_LOCAL	REQ_REF2EXT																																																			
14	EXT2_ACT	ACK_STARTINH																																																			
15	FAULT	ACK_OFF_ILCK																																																			
0304	<b>FB STS WORD 2</b> Read-only copy of the Status Word 2 <ul style="list-style-type: none"> <li>See parameter 0303.</li> </ul>	-																																																			

Code	Description	Range																																																																				
0305	<p><b>FAULT WORD 1</b></p> <p>Read-only copy of the Fault Word 1</p> <ul style="list-style-type: none"> <li>When a fault is active, the corresponding bit for the active fault is set in the Fault Words.</li> <li>Each fault has a dedicated bit allocated within Fault Words.</li> <li>See <a href="#">Fault listing</a> on page 371 for a description of the faults.</li> <li>The control panel displays the word in hex. For example, all zeros and a 1 in Bit 0 display 0001. All zeros and a 1 in Bit 15 display 8000.</li> </ul>	-																																																																				
	<table border="1"> <thead> <tr> <th>Bit #</th> <th>0305, FAULT WORD 1</th> <th>0306, FAULT WORD 2</th> <th>0307, FAULT WORD 3</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>OVERCURRENT</td> <td>Obsolete</td> <td>EFB 1</td> </tr> <tr> <td>1</td> <td>DC OVERVOLT</td> <td>THERM FAIL</td> <td>EFB 2</td> </tr> <tr> <td>2</td> <td>DEV OVERTEMP</td> <td>OPEX LINK</td> <td>EFB 3</td> </tr> <tr> <td>3</td> <td>SHORT CIRC</td> <td>OPEX PWR</td> <td>INCOMPATIBLE SW</td> </tr> <tr> <td>4</td> <td>Reserved</td> <td>CURR MEAS</td> <td>USER LOAD CURVE</td> </tr> <tr> <td>5</td> <td>DC UNDERVOLT</td> <td>SUPPLY PHASE</td> <td>Reserved</td> </tr> <tr> <td>6</td> <td>A11 LOSS</td> <td>Reserved</td> <td>Reserved</td> </tr> <tr> <td>7</td> <td>A12 LOSS</td> <td>OVERSPEED</td> <td>Reserved</td> </tr> <tr> <td>8</td> <td>MOT OVERTEMP</td> <td>Reserved</td> <td>Reserved</td> </tr> <tr> <td>9</td> <td>PANEL LOSS</td> <td>DRIVE ID</td> <td>Reserved</td> </tr> <tr> <td>10</td> <td>ID RUN FAIL</td> <td>CONFIG FILE</td> <td>System error</td> </tr> <tr> <td>11</td> <td>MOTOR STALL</td> <td>SERIAL 1 ERR</td> <td>System error</td> </tr> <tr> <td>12</td> <td>CB OVERTEMP</td> <td>EFB CON FILE</td> <td>System error</td> </tr> <tr> <td>13</td> <td>EXT FAULT 1</td> <td>FORCE TRIP</td> <td>System error</td> </tr> <tr> <td>14</td> <td>EXT FAULT 2</td> <td>MOTOR PHASE</td> <td>System error</td> </tr> <tr> <td>15</td> <td>EARTH FAULT</td> <td>OUTP WIRING</td> <td>Param. setting fault</td> </tr> </tbody> </table>	Bit #	0305, FAULT WORD 1	0306, FAULT WORD 2	0307, FAULT WORD 3	0	OVERCURRENT	Obsolete	EFB 1	1	DC OVERVOLT	THERM FAIL	EFB 2	2	DEV OVERTEMP	OPEX LINK	EFB 3	3	SHORT CIRC	OPEX PWR	INCOMPATIBLE SW	4	Reserved	CURR MEAS	USER LOAD CURVE	5	DC UNDERVOLT	SUPPLY PHASE	Reserved	6	A11 LOSS	Reserved	Reserved	7	A12 LOSS	OVERSPEED	Reserved	8	MOT OVERTEMP	Reserved	Reserved	9	PANEL LOSS	DRIVE ID	Reserved	10	ID RUN FAIL	CONFIG FILE	System error	11	MOTOR STALL	SERIAL 1 ERR	System error	12	CB OVERTEMP	EFB CON FILE	System error	13	EXT FAULT 1	FORCE TRIP	System error	14	EXT FAULT 2	MOTOR PHASE	System error	15	EARTH FAULT	OUTP WIRING	Param. setting fault	
Bit #	0305, FAULT WORD 1	0306, FAULT WORD 2	0307, FAULT WORD 3																																																																			
0	OVERCURRENT	Obsolete	EFB 1																																																																			
1	DC OVERVOLT	THERM FAIL	EFB 2																																																																			
2	DEV OVERTEMP	OPEX LINK	EFB 3																																																																			
3	SHORT CIRC	OPEX PWR	INCOMPATIBLE SW																																																																			
4	Reserved	CURR MEAS	USER LOAD CURVE																																																																			
5	DC UNDERVOLT	SUPPLY PHASE	Reserved																																																																			
6	A11 LOSS	Reserved	Reserved																																																																			
7	A12 LOSS	OVERSPEED	Reserved																																																																			
8	MOT OVERTEMP	Reserved	Reserved																																																																			
9	PANEL LOSS	DRIVE ID	Reserved																																																																			
10	ID RUN FAIL	CONFIG FILE	System error																																																																			
11	MOTOR STALL	SERIAL 1 ERR	System error																																																																			
12	CB OVERTEMP	EFB CON FILE	System error																																																																			
13	EXT FAULT 1	FORCE TRIP	System error																																																																			
14	EXT FAULT 2	MOTOR PHASE	System error																																																																			
15	EARTH FAULT	OUTP WIRING	Param. setting fault																																																																			
0306	<p><b>FAULT WORD 2</b></p> <p>Read-only copy of the Fault Word 2</p> <ul style="list-style-type: none"> <li>See parameter 0305.</li> </ul>	-																																																																				
0307	<p><b>FAULT WORD 3</b></p> <p>Read-only copy of the Fault Word 3</p> <ul style="list-style-type: none"> <li>See parameter 0305.</li> </ul>	-																																																																				



Code	Description	Range																																																
0308	<p><b>ALARM WORD 1</b></p> <p>Read-only copy of the ALARM WORD 1</p> <ul style="list-style-type: none"> <li>• When an alarm is active, the corresponding bit for the active alarm is set in the Alarm Words.</li> <li>• Each alarm has a dedicated bit allocated within Alarm Words.</li> <li>• Bits remain set until the whole alarm word is reset. (Reset by writing zero to the word).</li> <li>• The control panel displays the word in hex. For example, all zeros and a 1 in Bit 0 display 0001. All zeros and a 1 in Bit 15 display 8000.</li> </ul> <table border="1"> <thead> <tr> <th>Bit #</th> <th>0308, ALARM WORD 1</th> <th>0309, ALARM WORD 2</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>OVERCURRENT</td> <td>OFF BUTTON</td> </tr> <tr> <td>1</td> <td>OVERVOLTAGE</td> <td>PID SLEEP</td> </tr> <tr> <td>2</td> <td>UNDERVOLTAGE</td> <td>ID RUN</td> </tr> <tr> <td>3</td> <td>DIR LOCK</td> <td>OVERRIDE</td> </tr> <tr> <td>4</td> <td>IO COMM</td> <td>START ENABLE 1 MISSING</td> </tr> <tr> <td>5</td> <td>AI1 LOSS</td> <td>START ENABLE 2 MISSING</td> </tr> <tr> <td>6</td> <td>AI2 LOSS</td> <td>EMERGENCY STOP</td> </tr> <tr> <td>7</td> <td>PANEL LOSS</td> <td>Reserved</td> </tr> <tr> <td>8</td> <td>DEVICE OVERTEMP</td> <td>FIRST START</td> </tr> <tr> <td>9</td> <td>MOTOR TEMP</td> <td>Reserved</td> </tr> <tr> <td>10</td> <td>Reserved</td> <td>USER LOAD CURVE</td> </tr> <tr> <td>11</td> <td>MOTOR STALL</td> <td>START DELAY</td> </tr> <tr> <td>12</td> <td>AUTORESET</td> <td rowspan="4">Reserved</td> </tr> <tr> <td>13</td> <td>AUTOCHANGE</td> </tr> <tr> <td>14</td> <td>PFA I LOCK</td> </tr> <tr> <td>15</td> <td>Reserved</td> </tr> </tbody> </table>	Bit #	0308, ALARM WORD 1	0309, ALARM WORD 2	0	OVERCURRENT	OFF BUTTON	1	OVERVOLTAGE	PID SLEEP	2	UNDERVOLTAGE	ID RUN	3	DIR LOCK	OVERRIDE	4	IO COMM	START ENABLE 1 MISSING	5	AI1 LOSS	START ENABLE 2 MISSING	6	AI2 LOSS	EMERGENCY STOP	7	PANEL LOSS	Reserved	8	DEVICE OVERTEMP	FIRST START	9	MOTOR TEMP	Reserved	10	Reserved	USER LOAD CURVE	11	MOTOR STALL	START DELAY	12	AUTORESET	Reserved	13	AUTOCHANGE	14	PFA I LOCK	15	Reserved	-
Bit #	0308, ALARM WORD 1	0309, ALARM WORD 2																																																
0	OVERCURRENT	OFF BUTTON																																																
1	OVERVOLTAGE	PID SLEEP																																																
2	UNDERVOLTAGE	ID RUN																																																
3	DIR LOCK	OVERRIDE																																																
4	IO COMM	START ENABLE 1 MISSING																																																
5	AI1 LOSS	START ENABLE 2 MISSING																																																
6	AI2 LOSS	EMERGENCY STOP																																																
7	PANEL LOSS	Reserved																																																
8	DEVICE OVERTEMP	FIRST START																																																
9	MOTOR TEMP	Reserved																																																
10	Reserved	USER LOAD CURVE																																																
11	MOTOR STALL	START DELAY																																																
12	AUTORESET	Reserved																																																
13	AUTOCHANGE																																																	
14	PFA I LOCK																																																	
15	Reserved																																																	
0309	<p><b>ALARM WORD 2</b></p> <p>Read-only copy of the ALARM WORD 2</p> <ul style="list-style-type: none"> <li>• See parameter 0308.</li> </ul>	-																																																

## Group 04: FAULT HISTORY

This group stores a recent history of the faults reported by the drive.

Code	Description	Range
0401	<b>LAST FAULT</b>  0 – Clear the fault history (on panel = NO RECORD). n – Fault code of the last recorded fault. <ul style="list-style-type: none"> <li>The fault code is displayed as a name. See section <i>Fault listing</i> on page 371 for the fault codes and names. The fault name shown for this parameter may be shorter than the corresponding name in the fault listing, which shows the names as they are shown in the fault display.</li> </ul>	<b>fault codes (control panel displays as text)</b>
0402	<b>FAULT TIME 1</b>  Day on which the last fault occurred. Either as: <ul style="list-style-type: none"> <li>Date if real time clock is operating.</li> <li>Number of days after power on if real time clock is not used, or was not set.</li> </ul>	<b>date dd.mm.yy/ power-on time in days</b>
0403	<b>FAULT TIME 2</b>  Time at which the last fault occurred. Either as: <ul style="list-style-type: none"> <li>Real time, in format hh:mm:ss, if real time clock is operating.</li> <li>The time since power on (less the whole days reported in 0402), in format hh:mm:ss, if real time clock is not used, or was not set.</li> </ul>	<b>time hh.mm.ss</b>
0404	<b>SPEED AT FLT</b> Motor speed (rpm) at the time the last fault occurred	-
0405	<b>FREQ AT FLT</b> Frequency (Hz) at the time the last fault occurred	-
0406	<b>VOLTAGE AT FLT</b> DC bus voltage (V) at the time the last fault occurred	-
0407	<b>CURRENT AT FLT</b> Motor current (A) at the time the last fault occurred	-
0408	<b>TORQUE AT FLT</b> Motor torque (%) at the time the last fault occurred	-
0409	<b>STATUS AT FLT</b> Drive status (hex code word) at the time the last fault occurred	-
0410	<b>DI 1-3 AT FLT</b> Status of digital inputs 1...3 at the time the last fault occurred	<b>000...111 (binary)</b>
0411	<b>DI 4-6 AT FLT</b> Status of digital inputs 4...6 at the time the last fault occurred	<b>000...111 (binary)</b>

<b>Code</b>	<b>Description</b>	<b>Range</b>
0412	<b>PREVIOUS FAULT 1</b> Fault code of the second last fault. Read-only.	<b>as par. 0401</b>
0413	<b>PREVIOUS FAULT 2</b> Fault code of the third last fault. Read-only.	<b>as par. 0401</b>

## Group 10: START/STOP/DIR

This group:

- defines external sources (EXT1, and EXT2) for commands that enable start, stop and direction changes
- locks direction or enables direction control. To select between the two external locations, use parameter 1102 in the next group.

Code	Description	Range
1001	<p><b>EXT1 COMMANDS</b></p> <p>Defines external control location 1 (EXT1) – the configuration of start, stop and direction commands.</p> <p>0 = NOT SEL – No external start, stop and direction command source</p> <p>1 = DI1 – Two-wire Start/Stop</p> <ul style="list-style-type: none"> <li>• Start/Stop is through digital input DI1 (DI1 activated = Start; DI1 de-activated = Stop).</li> <li>• Parameter 1003 defines the direction. Selecting 1003 = 3 (REQUEST) is the same as 1003 = 1 (FORWARD).</li> </ul> <p>2 = DI1,2 – Two-wire Start/Stop, Direction</p> <ul style="list-style-type: none"> <li>• Start/Stop is through digital input DI1 (DI1 activated = Start; DI1 de-activated = Stop).</li> <li>• Direction control [requires parameter 1003 = 3 (REQUEST)] is through digital input DI2 (DI2 activated = Reverse; DI2 de-activated = Forward).</li> </ul> <p>3 = DI1P,2P – Three-wire Start/Stop</p> <ul style="list-style-type: none"> <li>• Start/Stop commands are through momentary push-buttons (the P stands for “pulse”).</li> <li>• Start is through a normally open push-button connected to digital input DI1. In order to start the drive, the digital input DI2 must be activated prior the pulse in DI1.</li> <li>• Connect multiple Start push-buttons in parallel.</li> <li>• Stop is through a normally closed push-button connected to digital input DI2.</li> <li>• Connect multiple Stop push-buttons in series.</li> <li>• Parameter 1003 defines the direction. Selecting 1003 = 3 (REQUEST) is the same as 1003 = 1 (FORWARD).</li> </ul> <p>4 = DI1P,2P,3 – Three-wire Start/Stop, Direction</p> <ul style="list-style-type: none"> <li>• Start/Stop commands are through momentary push-buttons, as described for DI1P,2P.</li> <li>• Direction control [requires parameter 1003 = 3 (REQUEST)] is through digital input DI3. (DI3 activated = Reverse; DI3 de-activated = Forward).</li> </ul>	0...14


Code	Description	Range
5	<p>DI1P,2P,3P – Start Forward, Start Reverse, and Stop</p> <ul style="list-style-type: none"> <li>• Start and Direction commands are given simultaneously with two separate momentary push-buttons (the P stands for “pulse”).</li> <li>• Start Forward command is through a normally open push-button connected to digital input DI1. In order to start the drive, the digital input DI3 must be activated during the pulse in DI1.</li> <li>• Start Reverse command is through a normally open push-button connected to digital input DI2. In order to start the drive, the digital input DI3 must be activated prior the pulse in DI2.</li> <li>• Connect multiple Start push-buttons in parallel.</li> <li>• Stop is through a normally closed push-button connected to digital input DI3.</li> <li>• Connect multiple Stop push-buttons in series.</li> <li>• Requires parameter 1003 = 3 (REQUEST).</li> </ul>	
6	<p>DI6 – Two-wire Start/Stop</p> <ul style="list-style-type: none"> <li>• Start/Stop is through digital input DI6 (DI6 activated = Start; DI6 de-activated = Stop).</li> <li>• Parameter 1003 defines the direction. Selecting 1003 = 3 (REQUEST) is the same as 1003 = 1 (FORWARD).</li> </ul>	
7	<p>DI6,5 – Two-wire Start/Stop/Direction</p> <ul style="list-style-type: none"> <li>• Start/Stop is through digital input DI6 (DI6 activated = Start; DI6 de-activated = Stop).</li> <li>• Direction control [requires parameter 1003 = 3 (REQUEST)] is through digital input DI5. (DI5 activated = Reverse; DI5 de-activated = Forward).</li> </ul>	
8	<p>KEYPAD – control panel</p> <ul style="list-style-type: none"> <li>• Start/Stop and Direction commands are through the control panel when EXT1 is active.</li> <li>• Direction control requires parameter 1003 = 3 (REQUEST).</li> </ul>	
9	<p>DI1F,2R – Start/Stop/Direction commands through DI1 and DI2 combinations</p> <ul style="list-style-type: none"> <li>• Start forward = DI1 activated and DI2 de-activated.</li> <li>• Start reverse = DI1 de-activated and DI2 activated.</li> <li>• Stop = both DI1 and DI2 activated, or both de-activated.</li> <li>• Requires parameter 1003 = 3 (REQUEST).</li> </ul>	
10	<p>COMM – Assigns the fieldbus Command Word as the source for the start/stop and direction commands.</p> <ul style="list-style-type: none"> <li>• Bits 0, 1, 2 of Command Word 1 (parameter 0301) activates the start/stop and direction commands.</li> <li>• See the fieldbus user's manual for detailed instructions.</li> </ul>	
11	<p>TIMER 1 – Assigns Start/Stop control to timer 1 (Timer activated = START; Timer de-activated = STOP).</p> <ul style="list-style-type: none"> <li>• See <a href="#">Group 36: TIMED FUNCTIONS</a>.</li> </ul>	
12...14	<p>TIMER 2...4 – Assigns Start/Stop control to timer 2...4.</p> <ul style="list-style-type: none"> <li>• See TIMER 1 above.</li> </ul>	

<b>Code</b>	<b>Description</b>	<b>Range</b>
1002	<b>EXT2 COMMANDS</b> Defines external control location 2 (EXT2) – the configuration of start, stop and direction commands. <ul style="list-style-type: none"><li>• See parameter 1001 EXT1 COMMANDS above.</li></ul>	<b>0...14</b>
1003	<b>DIRECTION</b> Defines the control of motor rotation direction. 1 = FORWARD – Rotation is fixed in the forward direction. 2 = REVERSE – Rotation is fixed in the reverse direction. 3 = REQUEST – Rotation direction can be changed on command.	<b>1...3</b>

## Group 11: REFERENCE SELECT

This group defines:


- how the drive selects between command sources
- characteristics and sources for REF1 and REF2.

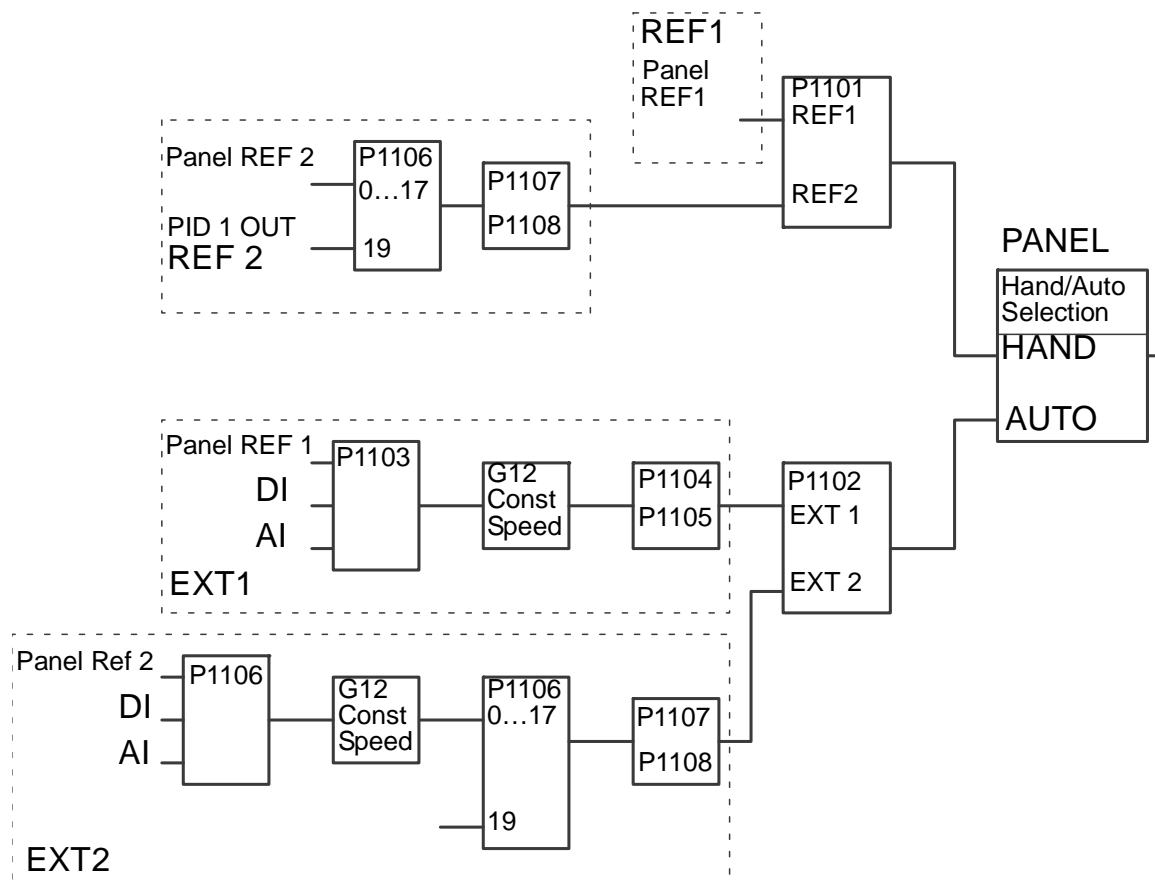


Code	Description	Range
1101	<p><b>KEYPAD REF SEL</b></p> <p>Selects the reference controlled in local control mode.                      1 = REF1(Hz/rpm) – Reference type depends on parameter 9904 MOTOR CTRL MODE:                      • Speed reference (rpm) if 9904 = 1 (VECTOR:SPEED).                      • Frequency reference (Hz) if 9904 = 3 (SCALAR:FREQ).                      2 = REF2(%)</p>	<p><b>1=REF 1(Hz/rpm), 2=REF 2 (%)</b></p>

Code	Description	Range
1102	<p><b>EXT1/EXT2 SEL</b></p> <p>Defines the source for selecting between the two external control locations EXT1 or EXT2. Thus, defines the source for Start/Stop/Direction commands and reference signals.</p> <p>0 = EXT1 – Selects external control location 1 (EXT1).</p> <ul style="list-style-type: none"> <li>• See parameter 1001 EXT1 COMMANDS for EXT1's Start/Stop/Dir definitions.</li> <li>• See parameter 1103 REF1 SELECT for EXT1's reference definitions.</li> </ul> <p>1 = DI1 – Assigns control to EXT1 or EXT2 based on the state of DI1 (DI1 activated = EXT2; DI1 de-activated = EXT1).</p> <p>2...6 = DI2...DI6 – Assigns control to EXT1 or EXT2 based on the state of the selected digital input.</p> <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> <p>7 = EXT2 – Selects external control location 2 (EXT2).</p> <ul style="list-style-type: none"> <li>• See parameter 1002 EXT2 COMMANDS for EXT2's Start/Stop/Dir definitions.</li> <li>• See parameter 1106 REF2 SELECT for EXT2's reference definitions.</li> </ul> <p>8 = COMM – Assigns control of the drive via external control location EXT1 or EXT2 based on the fieldbus control word.</p> <ul style="list-style-type: none"> <li>• Bit 5 of Command Word 1 (parameter 0301) defines the active external control location (EXT1 or EXT2).</li> <li>• See the fieldbus user's manual for detailed instructions.</li> </ul> <p>9 = TIMER 1 – Assigns control to EXT1 or EXT2 based on the state of the timer (Timer activated = EXT2; Timer de-activated = EXT1).</p> <ul style="list-style-type: none"> <li>• See <a href="#">Group 36: TIMED FUNCTIONS</a>.</li> </ul> <p>10...12 = TIMER 2...4 – Assigns control to EXT1 or EXT2 based on the state of the timer.</p> <ul style="list-style-type: none"> <li>• See TIMER 1 above.</li> </ul> <p>-1 = DI1(INV) – Assigns control to EXT1 or EXT2 based on the state of DI1 (DI1 activated = EXT1; DI1 de-activated = EXT2).</p> <p>-2...-6 = DI2(INV)...DI6(INV) – Assigns control to EXT1 or EXT2 based on the state of the selected digital input.</p> <ul style="list-style-type: none"> <li>• See DI1(INV) above.</li> </ul>	<b>-6...12</b>

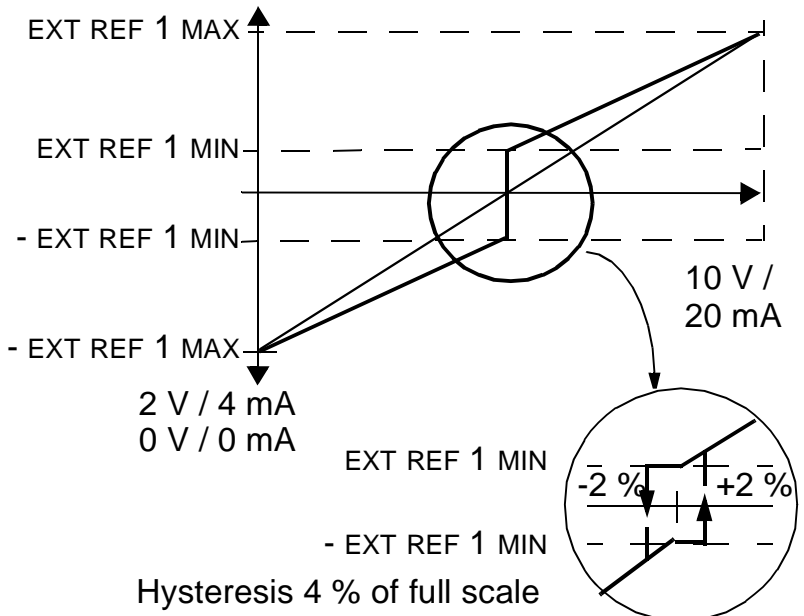

Code	Description	Range
1103	<p><b>REF1 SELECT</b></p> <p>Selects the signal source for external reference REF1.</p> <p>0 = KEYPAD – Defines the control panel as the reference source.</p> <p>1 = AI1 – Defines analogue input 1 (AI1) as the reference source.</p> <p>2 = AI2 – Defines analogue input 2 (AI2) as the reference source.</p> <p>3 = AI1/JOYST – Defines analogue input 1 (AI1), configured for joystick operation, as the reference source.</p> <ul style="list-style-type: none"> <li>• The minimum input signal runs the drive at the maximum reference in the reverse direction. Define the minimum using parameter 1104.</li> <li>• The maximum input signal runs the drive at maximum reference in the forward direction. Define the maximum using parameter 1105.</li> <li>• Requires parameter 1003 = 3 (REQUEST).</li> </ul> <p><b>⚠ WARNING!</b> Because the low end of the reference range commands full reverse operation, do not use 0 V as the lower end of the reference range. Doing so means that if the control signal is lost (which is a 0 V input), the result is full reverse operation. Instead, use the following set-up so that loss of the analogue input triggers a fault, stopping the drive:</p> <ul style="list-style-type: none"> <li>• Set parameter 1301 MINIMUM AI1 (1304 MINIMUM AI2) at 20% (2 V or 4 mA).</li> <li>• Set parameter 3021 AI1 FAULT LIMIT to a value 5% or higher.</li> <li>• Set parameter 3001 AI&lt;MIN FUNCTION to 1 (FAULT).</li> </ul> 	<p><b>0...17</b></p>

Code	Description	Range
	<p>4 = AI2/JOYST – Defines analogue input 2 (AI2), configured for joystick operation, as the reference source.</p> <ul style="list-style-type: none"> <li>• See above (AI1/JOYST) description.</li> </ul> <p>5 = DI3U,4D(R) – Defines digital inputs as the speed reference source (motor potentiometer control).</p> <ul style="list-style-type: none"> <li>• Digital input DI3 increases the speed (the U stands for “up”).</li> <li>• Digital input DI4 decreases the speed (the D stands for “down”).</li> <li>• A Stop command resets the reference to zero (the R stands for “reset”).</li> <li>• Parameter 2205 ACCELER TIME 2 controls the reference signal’s rate of change.</li> </ul> <p>6 = DI3U,4D – Same as above (DI3U,4D(R)), except:</p> <ul style="list-style-type: none"> <li>• A Stop command does not reset the reference to zero. The reference is stored.</li> <li>• When the drive restarts, the motor ramps up (at the selected acceleration rate) to the stored reference.</li> </ul> <p>7 = DI5U,6D – Same as above (DI3U,4D), except that DI5 and DI6 are the digital inputs used.</p> <p>8 = COMM – Defines the fieldbus as the reference source.</p> <p>9 = COMM+AI1 – Defines a fieldbus and analogue input 1 (AI1) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 191.</p> <p>10 = COMM*AI1 – Defines a fieldbus and analogue input 1 (AI1) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 191.</p> <p>11 = DI3U,4D(RNC) – Same as DI3U,4D(R) above, except that:</p> <ul style="list-style-type: none"> <li>• Changing the control source (EXT1 to EXT2, EXT2 to EXT1, LOC to REM) does not copy the reference.</li> </ul> <p>12 = DI3U,4D(NC) – Same as DI3U,4D above, except that:</p> <ul style="list-style-type: none"> <li>• Changing the control source (EXT1 to EXT2, EXT2 to EXT1, LOC to REM) does not copy the reference.</li> <li>• Stop command resets reference to zero.</li> </ul> <p>13 = DI5U,6D(NC) – Same as DI3U,4D above, except that:</p> <ul style="list-style-type: none"> <li>• Changing the control source (EXT1 to EXT2, EXT2 to EXT1, LOC to REM) does not copy the reference.</li> </ul> <p>14 = AI1+AI2 – Defines an analogue input 1 (AI1) and analogue input 2 (AI2) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 191.</p> <p>15 = AI1*AI2 – Defines an analogue input 1 (AI1) and analogue input 2 (AI2) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 191.</p> <p>16 = AI1-AI2 – Defines an analogue input 1 (AI1) and analogue input 2 (AI2) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 191.</p> <p>17 = AI1/AI2 – Defines an analogue input 1 (AI1) and analogue input 2 (AI2) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 191.</p>	

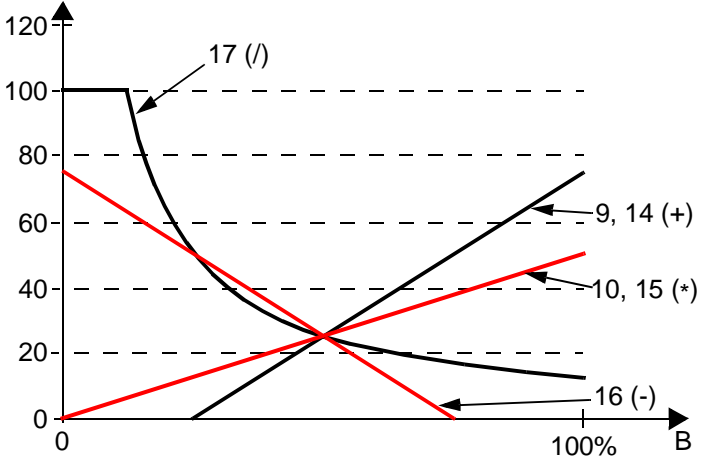Code	Description	Range										
	<p>20 = KEYPAD(RNC) – Defines the control panel as the reference source. A Stop command resets the reference to zero (the R stands for reset.). Changing the control source (EXT1 to EXT2, EXT2 to EXT1) does not copy the reference.</p> <p>21 = KEYPAD(NC) – Defines the control panel as the reference source. A Stop command does not reset the reference to zero. The reference is stored. Changing the control source (EXT1 to EXT2, EXT2 to EXT1) does not copy the reference.</p> <p><b>Analogue input reference correction</b></p> <p>Parameter values 9, 10, and 14...17 use the formula in the following table.</p> <table border="1" data-bbox="304 685 1306 902"> <thead> <tr> <th>Value setting</th> <th>Calculation of the AI reference</th> </tr> </thead> <tbody> <tr> <td>C + B</td> <td>C value + (B value - 50% of reference value)</td> </tr> <tr> <td>C * B</td> <td>C value * (B value / 50% of reference value)</td> </tr> <tr> <td>C - B</td> <td>(C value + 50% of reference value) - B value</td> </tr> <tr> <td>C / B</td> <td>(C value * 50% of reference value) / B value</td> </tr> </tbody> </table> <p>Where:</p> <ul style="list-style-type: none"> <li>C = Main reference value (= COMM for values 9, 10 and = AI1 for values 14...17).</li> <li>B = Correcting reference (= AI1 for values 9, 10 and = AI2 for values 14...17).</li> </ul> <p><b>Example:</b> The figure shows the reference source curves for value settings 9, 10, and 14...17, where:</p> <ul style="list-style-type: none"> <li>C = 25%.</li> <li>P 4012 SETPOINT MIN = 0.</li> <li>P 4013 SETPOINT MAX = 0.</li> <li>B varies along the horizontal axis.</li> </ul> 	Value setting	Calculation of the AI reference	C + B	C value + (B value - 50% of reference value)	C * B	C value * (B value / 50% of reference value)	C - B	(C value + 50% of reference value) - B value	C / B	(C value * 50% of reference value) / B value	
Value setting	Calculation of the AI reference											
C + B	C value + (B value - 50% of reference value)											
C * B	C value * (B value / 50% of reference value)											
C - B	(C value + 50% of reference value) - B value											
C / B	(C value * 50% of reference value) / B value											
1104	<p><b>REF1 MIN</b></p> <p>Sets the minimum for external reference 1.</p> <ul style="list-style-type: none"> <li>The minimum analogue input signal (as a percentage of the full signal in volts or amperes) corresponds to REF1 MIN in Hz/rpm.</li> <li>Parameter 1301 MINIMUM AI1 or 1304 MINIMUM AI2 sets the minimum analogue input signal.</li> <li>These parameters (reference and analogue min. and max. settings) provide scale and offset adjustment for the reference.</li> </ul>	<p><b>0...500 Hz / 0...30000 rpm</b></p>										

Code	Description	Range
1105	<b>REF1 MAX</b> Sets the maximum for external reference 1. <ul style="list-style-type: none"> <li>The maximum analogue input signal (as a percentage of the full signal in volts or amperes) corresponds to REF1 MAX in Hz/rpm.</li> <li>Parameter 1302 MAXIMUM AI1 or 1305 MAXIMUM AI2 sets the maximum analogue input signal.</li> </ul>	<b>0...500 Hz / 0...30000 rpm</b>

The graph plots 'Ext ref' on the vertical axis against 'Analogue input signal' on the horizontal axis. The vertical axis has two marked points: P 1104 (MIN) and P 1105 (MAX). The horizontal axis has two marked points: P 1301 or P 1304, and P 1302 or P 1305. The curve starts at a constant value of P 1104 (MIN) from the origin until the input signal reaches P 1301 or P 1304. From that point, the curve rises linearly until it reaches P 1105 (MAX) at the input signal value of P 1302 or P 1305. Beyond this point, the curve remains constant at the P 1105 (MAX) level.

The graph plots 'Ext ref' on the vertical axis against 'Analogue input signal' on the horizontal axis. The vertical axis has two marked points: P 1104 (MIN) and P 1105 (MAX). The horizontal axis has two marked points: P 1301 or P 1304, and P 1302 or P 1305. The curve starts at a constant value of P 1104 (MIN) from the origin until the input signal reaches P 1301 or P 1304. From that point, the curve decreases linearly until it reaches P 1105 (MAX) at the input signal value of P 1302 or P 1305. Beyond this point, the curve remains constant at the P 1105 (MAX) level.

Code	Description	Range
1106	<p><b>REF2 SELECT</b></p> <p>Selects the signal source for external reference REF2.            0...17 – Same as for parameter 1103 REF1 SELECT            19 = PID1OUT – The reference is taken from the PID1 output. See <a href="#">Group 40: PROCESS PID SET 1</a> and <a href="#">Group 41: PROCESS PID SET 2</a>.            20...21 – Same as for parameter 1103 REF1 SELECT.</p>	<b>0...17, 19...21</b>
1107	<p><b>REF2 MIN</b></p> <p>Sets the minimum for external reference 2.</p> <ul style="list-style-type: none"> <li>• The minimum analogue input signal (in volts or amperes) corresponds to REF2 MIN in %.</li> <li>• Parameter 1301 MINIMUM AI1 or 1304 MINIMUM AI2 sets the minimum analogue input signal.</li> <li>• This parameter sets the minimum frequency reference.</li> <li>• The value is a percentage of the:               <ul style="list-style-type: none"> <li>– maximum frequency or speed</li> <li>– maximum process reference</li> <li>– nominal torque.</li> </ul> </li> </ul>	<b>0...100%</b> <b>(0...600% for torque)</b>
1108	<p><b>REF2 MAX</b></p> <p>Sets the maximum for external reference 2.</p> <ul style="list-style-type: none"> <li>• The maximum analogue input signal (in volts or amperes) corresponds to REF2 MAX in %.</li> <li>• Parameter 1302 MAXIMUM AI1 or 1305 MAXIMUM AI2 sets the maximum analogue input signal.</li> <li>• This parameter sets the maximum frequency reference.</li> <li>• The value is a percentage of the:               <ul style="list-style-type: none"> <li>– maximum frequency or speed</li> <li>– maximum process reference</li> <li>– nominal torque.</li> </ul> </li> </ul>	<b>0...100%</b> <b>(0...600% for torque)</b>

## Group 12: CONSTANT SPEEDS

This group defines a set of constant speeds. In general:

- You can program up to 7 constant speeds, ranging from 0...500 Hz or 0...30000 rpm.
- Values must be positive (no negative speed values for constant speeds).
- Constant speed selections are ignored if:
  - the process PID reference is followed, or
  - the drive is in local control mode, or
  - PFA (Pump and Fan Alternation) is active.

---

**Note:** Parameter 1208 CONST SPEED 7 acts also as a so-called fault speed, which may be activated if the control signal is lost. Refer to parameter 3001 AI<MIN FUNCTION, parameter 3002 PANEL COMM ERR and 3018 COMM FAULT FUNC.

---

Code	Description	Range															
1201	<p><b>CONST SPEED SEL</b></p> <p>Defines the digital inputs used to select constant speeds. See general comments in the introduction.</p> <p>0 = NOT SEL – Disables the constant speed function.</p> <p>1 = DI1 – Selects constant speed 1 with digital input DI1.</p> <ul style="list-style-type: none"> <li>• Digital input activated = constant speed 1 activated.</li> </ul> <p>2...6 = DI2...DI6 – Selects constant speed 1 with digital input DI2...DI6.</p> <ul style="list-style-type: none"> <li>• See above.</li> </ul> <p>7 = DI1,2 – Selects one of three constant speeds (1...3) using DI1 and DI2.</p> <ul style="list-style-type: none"> <li>• Uses two digital inputs, as defined below (0 = DI de-activated, 1 = DI activated):</li> </ul> <table border="1" data-bbox="370 1525 1052 1742"> <thead> <tr> <th>DI1</th> <th>DI2</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>No constant speed</td> </tr> <tr> <td>1</td> <td>0</td> <td>Constant speed 1 (1202)</td> </tr> <tr> <td>0</td> <td>1</td> <td>Constant speed 2 (1203)</td> </tr> <tr> <td>1</td> <td>1</td> <td>Constant speed 3 (1204)</td> </tr> </tbody> </table> <ul style="list-style-type: none"> <li>• Can be set up as a so-called fault speed, which is activated if the control signal is lost. Refer to parameter 3001 AI&lt;MIN function and parameter 3002 PANEL COMM ERR.</li> </ul>	DI1	DI2	Function	0	0	No constant speed	1	0	Constant speed 1 (1202)	0	1	Constant speed 2 (1203)	1	1	Constant speed 3 (1204)	-14...19
DI1	DI2	Function															
0	0	No constant speed															
1	0	Constant speed 1 (1202)															
0	1	Constant speed 2 (1203)															
1	1	Constant speed 3 (1204)															

Code	Description	Range																																				
	<p>8 = DI2,3 – Selects one of three constant speeds (1...3) using DI2 and DI3.</p> <ul style="list-style-type: none"> <li>• See above (DI1,2) for code.</li> </ul> <p>9 = DI3,4 – Selects one of three constant speeds (1...3) using DI3 and DI4.</p> <ul style="list-style-type: none"> <li>• See above (DI1,2) for code.</li> </ul> <p>10 = DI4,5 – Selects one of three constant speeds (1...3) using DI4 and DI5.</p> <ul style="list-style-type: none"> <li>• See above (DI1,2) for code.</li> </ul> <p>11 = DI5,6 – Selects one of three constant speeds (1...3) using DI5 and DI6.</p> <ul style="list-style-type: none"> <li>• See above (DI1,2) for code.</li> </ul> <p>12 = DI1,2,3 – Selects one of seven constant speeds (1...7) using DI1, DI2 and DI3.</p> <ul style="list-style-type: none"> <li>• Uses three digital inputs, as defined below (0 = DI de-activated, 1 = DI activated):</li> </ul> <table border="1" data-bbox="351 817 1094 1205"> <thead> <tr> <th>DI1</th> <th>DI2</th> <th>DI3</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> <td>No constant speed</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>Constant speed 1 (1202)</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>Constant speed 2 (1203)</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> <td>Constant speed 3 (1204)</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>Constant speed 4 (1205)</td> </tr> <tr> <td>1</td> <td>0</td> <td>1</td> <td>Constant speed 5 (1206)</td> </tr> <tr> <td>0</td> <td>1</td> <td>1</td> <td>Constant speed 6 (1207)</td> </tr> <tr> <td>1</td> <td>1</td> <td>1</td> <td>Constant speed 7 (1208)</td> </tr> </tbody> </table>	DI1	DI2	DI3	Function	0	0	0	No constant speed	1	0	0	Constant speed 1 (1202)	0	1	0	Constant speed 2 (1203)	1	1	0	Constant speed 3 (1204)	0	0	1	Constant speed 4 (1205)	1	0	1	Constant speed 5 (1206)	0	1	1	Constant speed 6 (1207)	1	1	1	Constant speed 7 (1208)	
DI1	DI2	DI3	Function																																			
0	0	0	No constant speed																																			
1	0	0	Constant speed 1 (1202)																																			
0	1	0	Constant speed 2 (1203)																																			
1	1	0	Constant speed 3 (1204)																																			
0	0	1	Constant speed 4 (1205)																																			
1	0	1	Constant speed 5 (1206)																																			
0	1	1	Constant speed 6 (1207)																																			
1	1	1	Constant speed 7 (1208)																																			
	<p>13 = DI3,4,5 – Selects one of seven constant speeds (1...7) using DI3, DI4 and DI5.</p> <ul style="list-style-type: none"> <li>• See above (DI1,2,3) for code.</li> </ul> <p>14 = DI4,5,6 – Selects one of seven constant speeds (1...7) using DI4, DI5 and DI6.</p> <ul style="list-style-type: none"> <li>• See above (DI1,2,3) for code.</li> </ul> <p>15...18 = TIMER 1...4 – Selects constant speed 1, constant speed 2 or the external reference depending on the state of eg. timer 1 (if the parameter value is 15 = TIMER 1), timer 3 (if the parameter value is 17 = TIMER 3) etc, and the constant speed mode.</p> <ul style="list-style-type: none"> <li>• See parameter 1209 and <a href="#">Group 36: TIMED FUNCTIONS</a>.</li> </ul> <p>19 = TIMER 1 &amp; 2 – Selects a constant speed or the external reference depending on the state of timers 1 and 2 and the constant speed mode.</p> <ul style="list-style-type: none"> <li>• See parameter 1209 and <a href="#">Group 36: TIMED FUNCTIONS</a>.</li> </ul> <p>-1 = DI1(INV) – Selects constant speed 1 with digital input DI1.</p> <ul style="list-style-type: none"> <li>• Inverse operation: Digital input de-activated = constant speed 1 activated.</li> </ul> <p>-2...- 6 = DI2(INV)...DI6(INV) – Selects constant speed 1 with digital input.</p> <ul style="list-style-type: none"> <li>• See above.</li> </ul>																																					

Code	Description	Range																																				
	<p>-7 = DI1,2(INV) – Selects one of three constant speeds (1...3) using DI1 and DI2.</p> <ul style="list-style-type: none"> <li>• Inverse operation uses two digital inputs, as defined below (0 = DI de-activated, 1 = DI activated):</li> </ul> <table border="1"> <thead> <tr> <th>DI1</th> <th>DI2</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1</td> <td>No constant speed</td> </tr> <tr> <td>0</td> <td>1</td> <td>Constant speed 1 (1202)</td> </tr> <tr> <td>1</td> <td>0</td> <td>Constant speed 2 (1203)</td> </tr> <tr> <td>0</td> <td>0</td> <td>Constant speed 3 (1204)</td> </tr> </tbody> </table>	DI1	DI2	Function	1	1	No constant speed	0	1	Constant speed 1 (1202)	1	0	Constant speed 2 (1203)	0	0	Constant speed 3 (1204)																						
DI1	DI2	Function																																				
1	1	No constant speed																																				
0	1	Constant speed 1 (1202)																																				
1	0	Constant speed 2 (1203)																																				
0	0	Constant speed 3 (1204)																																				
	<p>-8 = DI2,3(INV) – Selects one of three constant speeds (1...3) using DI2 and DI3.</p> <ul style="list-style-type: none"> <li>• See above (DI1,2(INV)) for code.</li> </ul>																																					
	<p>-9 = DI3,4(INV) – Selects one of three constant speeds (1...3) using DI3 and DI4.</p> <ul style="list-style-type: none"> <li>• See above (DI1,2(INV)) for code.</li> </ul>																																					
	<p>-10 = DI4,5(INV) – Selects one of three constant speeds (1...3) using DI4 and DI5.</p> <ul style="list-style-type: none"> <li>• See above (DI1,2(INV)) for code.</li> </ul>																																					
	<p>-11 = DI5,6(INV) – Selects one of three constant speeds (1...3) using DI5 and DI6.</p> <ul style="list-style-type: none"> <li>• See above (DI1,2(INV)) for code.</li> </ul>																																					
	<p>-12 = DI1,2,3(INV) – Selects one of seven constant speeds (1...7) using DI1, DI2 and DI3.</p> <ul style="list-style-type: none"> <li>• Inverse operation uses three digital inputs, as defined below (0 = DI de-activated, 1 = DI activated):</li> </ul> <table border="1"> <thead> <tr> <th>DI1</th> <th>DI2</th> <th>DI3</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1</td> <td>1</td> <td>No constant speed</td> </tr> <tr> <td>0</td> <td>1</td> <td>1</td> <td>Constant speed 1 (1202)</td> </tr> <tr> <td>1</td> <td>0</td> <td>1</td> <td>Constant speed 2 (1203)</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>Constant speed 3 (1204)</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> <td>Constant speed 4 (1205)</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>Constant speed 5 (1206)</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>Constant speed 6 (1207)</td> </tr> <tr> <td>0</td> <td>0</td> <td>0</td> <td>Constant speed 7 (1208)</td> </tr> </tbody> </table>	DI1	DI2	DI3	Function	1	1	1	No constant speed	0	1	1	Constant speed 1 (1202)	1	0	1	Constant speed 2 (1203)	0	0	1	Constant speed 3 (1204)	1	1	0	Constant speed 4 (1205)	0	1	0	Constant speed 5 (1206)	1	0	0	Constant speed 6 (1207)	0	0	0	Constant speed 7 (1208)	
DI1	DI2	DI3	Function																																			
1	1	1	No constant speed																																			
0	1	1	Constant speed 1 (1202)																																			
1	0	1	Constant speed 2 (1203)																																			
0	0	1	Constant speed 3 (1204)																																			
1	1	0	Constant speed 4 (1205)																																			
0	1	0	Constant speed 5 (1206)																																			
1	0	0	Constant speed 6 (1207)																																			
0	0	0	Constant speed 7 (1208)																																			
	<p>-13 = DI3,4,5(INV) – Selects one of seven constant speeds (1...7) using DI3, DI4 and DI5.</p> <ul style="list-style-type: none"> <li>• See above (DI1,2,3(INV)) for code.</li> </ul>																																					
	<p>-14 = DI4,5,6(INV) – Selects one of seven constant speeds (1...7) using DI4, DI5 and DI6.</p> <ul style="list-style-type: none"> <li>• See above (DI1,2,3(INV)) for code.</li> </ul>																																					




Code	Description	Range
1202	<b>CONST SPEED 1</b> Sets value for constant speed 1. <ul style="list-style-type: none"> <li>• The range and units depend on parameter 9904 MOTOR CTRL MODE:</li> <li>• Range: 0...30000 rpm when 9904 = 1 (VECTOR:SPEED).</li> <li>• Range: 0...500 Hz when 9904 = 3 (SCALAR:FREQ).</li> </ul>	<b>0...30000 rpm / 0...500 Hz</b>
1203 ... 1208	<b>CONST SPEED 2...CONST SPEED 7</b> Each sets a value for a constant speed. <ul style="list-style-type: none"> <li>• See CONST SPEED 1 above.</li> </ul>	<b>0...30000 rpm / 0...500 Hz</b>

Code	Description	Range																																										
1209	<p><b>TIMED MODE SEL</b></p> <p>Defines timer-activated constant speed mode. Timers can be used to change between the external reference and constant speeds when parameter 1201 = 15...18 (TIMER 1...4) or 19 (TIMER 1 &amp; 2).</p> <p>1 = EXT/CS1/2/3</p> <ul style="list-style-type: none"> <li>If parameter 1201 = 15...18 (TIMER 1...4), selects an external speed when timer 1...4 is not active and selects constant speed 1 if it is active.</li> </ul> <table border="1"> <thead> <tr> <th>TIMER 1...4</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>External reference</td> </tr> <tr> <td>1</td> <td>Constant speed 1 (1202)</td> </tr> </tbody> </table> <ul style="list-style-type: none"> <li>If parameter 1201 = 19 (TIMER 1 &amp; 2), selects an external speed when no timer is active, selects constant speed 1 when only timer 1 is active, selects constant speed 2 when only timer 2 is active and selects constant speed 3 when both timers 1 and 2 are active.</li> </ul> <table border="1"> <thead> <tr> <th>TIMER 1</th> <th>TIMER 2</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>External reference</td> </tr> <tr> <td>1</td> <td>0</td> <td>Constant speed 1 (1202)</td> </tr> <tr> <td>0</td> <td>1</td> <td>Constant speed 2 (1203)</td> </tr> <tr> <td>1</td> <td>1</td> <td>Constant speed 3 (1204)</td> </tr> </tbody> </table> <p>2 = cs1/2/3/4</p> <ul style="list-style-type: none"> <li>If parameter 1201 = 15...18 (TIMER 1...4), selects constant speed 1 when timer 1...4 is not active and selects constant speed 2 if it is active.</li> </ul> <table border="1"> <thead> <tr> <th>TIMER 1...4</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Constant speed 1 (1202)</td> </tr> <tr> <td>1</td> <td>Constant speed 2 (1203)</td> </tr> </tbody> </table> <ul style="list-style-type: none"> <li>If parameter 1201 = 19 (TIMER 1 &amp; 2), selects constant speed 1 when no timer is active, selects constant speed 2 when only timer 1 is active, selects constant speed 3 when only timer 2 is active and selects constant speed 4 when both timers 1 and 2 are active.</li> </ul> <table border="1"> <thead> <tr> <th>TIMER 1</th> <th>TIMER 2</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>Constant speed 1 (1202)</td> </tr> <tr> <td>1</td> <td>0</td> <td>Constant speed 2 (1203)</td> </tr> <tr> <td>0</td> <td>1</td> <td>Constant speed 3 (1204)</td> </tr> <tr> <td>1</td> <td>1</td> <td>Constant speed 4 (1205)</td> </tr> </tbody> </table>	TIMER 1...4	Function	0	External reference	1	Constant speed 1 (1202)	TIMER 1	TIMER 2	Function	0	0	External reference	1	0	Constant speed 1 (1202)	0	1	Constant speed 2 (1203)	1	1	Constant speed 3 (1204)	TIMER 1...4	Function	0	Constant speed 1 (1202)	1	Constant speed 2 (1203)	TIMER 1	TIMER 2	Function	0	0	Constant speed 1 (1202)	1	0	Constant speed 2 (1203)	0	1	Constant speed 3 (1204)	1	1	Constant speed 4 (1205)	<p><b>1=EXT/CS1/2/3</b> <b>2=CS1/2/3/4</b></p>
TIMER 1...4	Function																																											
0	External reference																																											
1	Constant speed 1 (1202)																																											
TIMER 1	TIMER 2	Function																																										
0	0	External reference																																										
1	0	Constant speed 1 (1202)																																										
0	1	Constant speed 2 (1203)																																										
1	1	Constant speed 3 (1204)																																										
TIMER 1...4	Function																																											
0	Constant speed 1 (1202)																																											
1	Constant speed 2 (1203)																																											
TIMER 1	TIMER 2	Function																																										
0	0	Constant speed 1 (1202)																																										
1	0	Constant speed 2 (1203)																																										
0	1	Constant speed 3 (1204)																																										
1	1	Constant speed 4 (1205)																																										

## Group 13: ANALOGUE INPUTS

This group defines the limits and the filtering for analogue inputs.

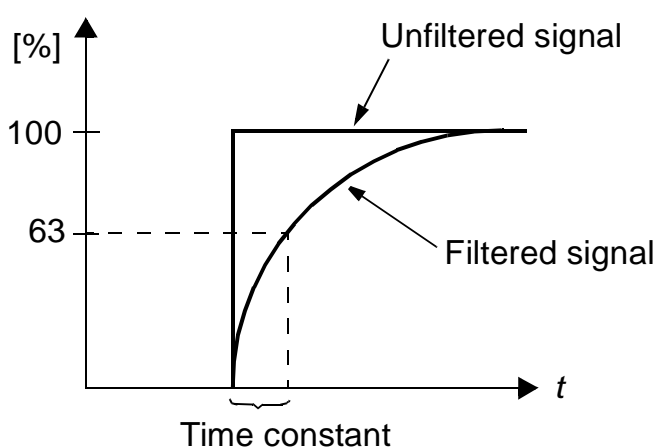Code	Description	Range
1301	<p><b>MINIMUM AI1</b></p> <p>Defines the minimum value of the analogue input.</p> <ul style="list-style-type: none"> <li>Define value as a percentage of the full analogue signal range. See example below.</li> <li>The minimum analogue input signal corresponds to 1104 REF1 MIN or 1107 REF2 MIN.</li> <li>MINIMUM AI cannot be greater than MAXIMUM AI.</li> <li>These parameters (reference and analogue min. and max. settings) provide scale and offset adjustment for the reference.</li> <li>See the figure for parameter 1105.</li> </ul> <p><b>Example.</b> To set the minimum analogue input value to 4 mA:</p> <ul style="list-style-type: none"> <li>Configure the analogue input for 0...20 mA current signal.</li> <li>Calculate the minimum (4 mA) as a percentage of the full range (20 mA) = <math>4 \text{ mA} / 20 \text{ mA} \cdot 100\% = 20\%</math></li> </ul>	<b>0...100%</b>
1302	<p><b>MAXIMUM AI1</b></p> <p>Defines the maximum value of the analogue input.</p> <ul style="list-style-type: none"> <li>Define value as a percentage of the full analogue signal range.</li> <li>The maximum analogue input signal corresponds to 1105 REF1 MAX or 1108 REF2 MAX.</li> <li>See the figure for parameter 1105.</li> </ul>	<b>0...100%</b>
1303	<p><b>FILTER AI1</b></p> <p>Defines the filter time constant for analogue input 1 (AI1).</p> <ul style="list-style-type: none"> <li>The filtered signal reaches 63% of a step change within the time specified.</li> </ul> 	<b>0...10 s</b>
1304	<p><b>MINIMUM AI2</b></p> <p>Defines the minimum value of the analogue input.</p> <ul style="list-style-type: none"> <li>See MINIMUM AI1 above.</li> </ul>	<b>0...100%</b>

<b>Code</b>	<b>Description</b>	<b>Range</b>
1305	<b>MAXIMUM AI2</b> Defines the maximum value of the analogue input. <ul style="list-style-type: none"><li>• See MAXIMUM AI1 above.</li></ul>	<b>0...100%</b>
1306	<b>FILTER AI2</b> Defines the filter time constant for analogue input 2 (AI2). <ul style="list-style-type: none"><li>• See FILTER AI1 above.</li></ul>	<b>0...10 s</b>

## Group 14: RELAY OUTPUTS

This group defines the condition that activates each of the relay outputs.

Code	Description	Range
1401	<p><b>RELAY OUTPUT 1</b></p> <p>Defines the event or condition that activates relay 1 – what relay output 1 means.</p> <p>0 = NOT SEL – Relay is not used and is de-energised.</p> <p>1 = READY – Energise the relay when the drive is ready to function. Requires:</p> <ul style="list-style-type: none"> <li>• Run enable signal is present.</li> <li>• No faults exist.</li> <li>• Supply voltage is within range.</li> <li>• Emergency Stop command is not on.</li> </ul> <p>2 = RUN – Energise the relay when the drive is running.</p> <p>3 = FAULT(-1) – Energise the relay when power is applied. De-energise when a fault occurs.</p> <p>4 = FAULT – Energise the relay when a fault is active.</p> <p>5 = ALARM – Energise the relay when an alarm is active.</p> <p>6 = REVERSED – Energise the relay when the motor rotates in reverse direction.</p> <p>7 = STARTED – Energise the relay when the drive receives a start command (even if Run enable signal is not present). De-energise the relay when the drive receives a stop command or a fault occurs.</p> <p>8 = SUPRV1 OVER – Energise the relay when the first supervised parameter (3201) exceeds the limit (3203). • See <a href="#">Group 32: SUPERVISION</a>.</p> <p>9 = SUPRV1 UNDER – Energise the relay when the first supervised parameter (3201) drops below the limit (3202). • See <a href="#">Group 32: SUPERVISION</a>.</p> <p>10 = SUPRV2 OVER – Energise the relay when the second supervised parameter (3204) exceeds the limit (3206). • See <a href="#">Group 32: SUPERVISION</a>.</p> <p>11 = SUPRV2 UNDER – Energise the relay when the second supervised parameter (3204) drops below the limit (3205). • See <a href="#">Group 32: SUPERVISION</a>.</p> <p>12 = SUPRV3 OVER – Energise the relay when the third supervised parameter (3207) exceeds the limit (3209). • See <a href="#">Group 32: SUPERVISION</a>.</p> <p>13 = SUPRV3 UNDER – Energise the relay when the third supervised parameter (3207) drops below the limit (3208). • See <a href="#">Group 32: SUPERVISION</a>.</p>	0...47

Code	Description	Range
	14 = AT SET POINT – Energise the relay when the output frequency is equal to the reference frequency.	
	15 = FAULT(RST) – Energise the relay when the drive is in a fault condition and will reset after the programmed auto-reset delay.	
	<ul style="list-style-type: none"> <li>• See parameter 3103 DELAY TIME.</li> </ul>	
	16 = FLT/ALARM – Energise the relay when a fault or alarm occurs.	
	17 = EXT CTRL – Energise the relay when external control is selected.	
	18 = REF 2 SEL – Energise the relay when EXT2 is selected.	
	19 = CONST FREQ – Energise the relay when a constant speed is selected.	
	20 = REF LOSS – Energise the relay when the reference or active control location is lost.	
	21 = OVERCURRENT – Energise the relay when an overcurrent alarm or fault occurs.	
	22 = OVERVOLTAGE – Energise the relay when an overvoltage alarm or fault occurs.	
	23 = DRIVE TEMP – Energise the relay when a drive or control board overtemperature alarm or fault occurs.	
	24 = UNDERVOLTAGE – Energise the relay when an undervoltage alarm or fault occurs.	
	25 = AI1 LOSS – Energise the relay when AI1 signal is lost.	
	26 = AI2 LOSS – Energise the relay when AI2 signal is lost.	
	27 = MOTOR TEMP – Energise the relay when a motor overtemperature alarm or fault occurs.	
	28 = STALL – Energise the relay when a stall alarm or fault exists.	
	30 = PID SLEEP – Energise the relay when the PID sleep function is active.	
	31 = PFA – Use the relay to start/stop motor in PFA control (See <a href="#">Group 81: PFA CONTROL</a> ).	
	<ul style="list-style-type: none"> <li>• Use this option only when PFA control is used.</li> </ul>	
	<ul style="list-style-type: none"> <li>• Selection activated / deactivated when the drive is not running.</li> </ul>	
	32 = AUTOCHANGE – Energise the relay when PFA autochange operation is performed.	
	<ul style="list-style-type: none"> <li>• Use this option only when PFA control is used.</li> </ul>	
	33 = FLUX READY – Energise the relay when the motor is magnetised and able to supply nominal torque (the motor has reached nominal magnetising).	
	34 = USER MACRO 2 – Energise the relay when User Parameter Set 2 is active.	

Code	Description	Range																																																																					
35	<p>35 = COMM – Energise the relay based on the input from the fieldbus communication.</p> <ul style="list-style-type: none"> <li>Fieldbus writes a binary code in parameter 0134 that energises relay 1...relay 6 according to the table below.</li> <li>0 = De-energise the relay, 1 = Energise the relay.</li> </ul> <table border="1"> <thead> <tr> <th>Par. 0134</th> <th>Binary</th> <th>RO6</th> <th>RO5</th> <th>RO4</th> <th>RO3</th> <th>RO2</th> <th>RO1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>000000</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>000001</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> </tr> <tr> <td>2</td> <td>000010</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> </tr> <tr> <td>3</td> <td>000011</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>4</td> <td>000100</td> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>5...62</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> </tr> <tr> <td>63</td> <td>111111</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> </tr> </tbody> </table>	Par. 0134	Binary	RO6	RO5	RO4	RO3	RO2	RO1	0	000000	0	0	0	0	0	0	1	000001	0	0	0	0	0	1	2	000010	0	0	0	0	1	0	3	000011	0	0	0	0	1	1	4	000100	0	0	0	1	0	0	5...62	...	...	...	...	...	...	...	63	111111	1	1	1	1	1	1						
Par. 0134	Binary	RO6	RO5	RO4	RO3	RO2	RO1																																																																
0	000000	0	0	0	0	0	0																																																																
1	000001	0	0	0	0	0	1																																																																
2	000010	0	0	0	0	1	0																																																																
3	000011	0	0	0	0	1	1																																																																
4	000100	0	0	0	1	0	0																																																																
5...62	...	...	...	...	...	...	...																																																																
63	111111	1	1	1	1	1	1																																																																
36	<p>36 = COMM(-1) – Energise the relay based on the input from the fieldbus communication.</p> <ul style="list-style-type: none"> <li>Fieldbus writes a binary code in parameter 0134 that energises relay 1...relay 6 according to the table below.</li> <li>0 = De-energise the relay, 1 = Energise the relay.</li> </ul> <table border="1"> <thead> <tr> <th>Par. 0134</th> <th>Binary</th> <th>RO6</th> <th>RO5</th> <th>RO4</th> <th>RO3</th> <th>RO2</th> <th>RO1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>000000</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> </tr> <tr> <td>1</td> <td>000001</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td>2</td> <td>000010</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>3</td> <td>000011</td> <td>1</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>4</td> <td>000100</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>5...62</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> <td>...</td> </tr> <tr> <td>63</td> <td>111111</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> </tbody> </table>	Par. 0134	Binary	RO6	RO5	RO4	RO3	RO2	RO1	0	000000	1	1	1	1	1	1	1	000001	1	1	1	1	1	0	2	000010	1	1	1	1	0	1	3	000011	1	1	1	1	0	0	4	000100	1	1	1	0	1	1	5...62	...	...	...	...	...	...	...	63	111111	0	0	0	0	0	0						
Par. 0134	Binary	RO6	RO5	RO4	RO3	RO2	RO1																																																																
0	000000	1	1	1	1	1	1																																																																
1	000001	1	1	1	1	1	0																																																																
2	000010	1	1	1	1	0	1																																																																
3	000011	1	1	1	1	0	0																																																																
4	000100	1	1	1	0	1	1																																																																
5...62	...	...	...	...	...	...	...																																																																
63	111111	0	0	0	0	0	0																																																																
37	<p>37 = TIMER 1 – Energise the relay when timer 1 is activated.</p> <ul style="list-style-type: none"> <li>See <a href="#">Group 36: TIMED FUNCTIONS</a>.</li> </ul>																																																																						
38...40	<p>38...40 = TIMER 2...4 – Energise the relay when timer 2...4 is active.</p> <ul style="list-style-type: none"> <li>See TIMER 1 above.</li> </ul>																																																																						
41	<p>41 = MNT TRIG FAN – Energise the relay when the cooling fan counter is triggered.</p>																																																																						
42	<p>42 = MNT TRIG REV – Energise the relay when the revolutions counter is triggered.</p>																																																																						
43	<p>43 = MNT TRIG RUN – Energise the relay when the run time counter is triggered.</p>																																																																						
44	<p>44 = MNT TRIG MWH – Energise the relay when the power consumption counter is triggered.</p>																																																																						
45	<p>45 = OVERRIDE – Energise the relay when override is activated.</p>																																																																						
46	<p>46 = START DELAY – Energise relay when a start delay is active.</p>																																																																						
47	<p>47 = USER LOAD C – Energise the relay when a user load curve fault or alarm occurs.</p>																																																																						

Code	Description	Range
1402	<b>RELAY OUTPUT 2</b> Defines the event or condition that activates relay 2 – what relay output 2 means. • See 1401 RELAY OUTPUT 1.	<b>0...47</b>
1403	<b>RELAY OUTPUT 3</b> Defines the event or condition that activates relay 3 – what relay output 3 means. • See 1401 RELAY OUTPUT 1.	<b>0...47</b>
1404	<b>RO 1 ON DELAY</b> Defines the switch-on delay for relay 1. • On/off delays are ignored when relay output 1401 is set to PFA.	<b>0...36</b>
1405	<b>RO 1 OFF DELAY</b> Defines the switch-off delay for relay 1. • On/off delays are ignored when relay output 1401 is set to PFA.	<b>0...3600 s</b>
1406	<b>RO 2 ON DELAY</b> Defines the switch-on delay for relay 2. • See RO 1 ON DELAY.	<b>0...3600 s</b>
1407	<b>RO 2 OFF DELAY</b> Defines the switch-off delay for relay 2. • See RO 1 OFF DELAY.	<b>0...3600 s</b>
1408	<b>RO 3 ON DELAY</b> Defines the switch-on delay for relay 3. • See RO 1 ON DELAY.	<b>0...3600 s</b>
1409	<b>RO 3 OFF DELAY</b> Defines the switch-off delay for relay 3. • See RO 1 OFF DELAY.	<b>0...3600 s</b>
1410 ... 1412	<b>RELAY OUTPUT 4...6</b> Defines the event or condition that activates relay 4...6 – what relay outputs 4...6 means. • See 1401 RELAY OUTPUT 1.	<b>0...47</b>
1413	<b>RO 4 ON DELAY</b> Defines the switch-on delay for relay 4. • See RO 1 ON DELAY.	<b>0...3600 s</b>
1414	<b>RO 4 OFF DELAY</b> Defines the switch-off delay for relay 4. • See RO 1 OFF DELAY.	<b>0...3600 s</b>



<b>Code</b>	<b>Description</b>	<b>Range</b>
1415	<b>RO 5 ON DELAY</b> Defines the switch-on delay for relay 5. <ul style="list-style-type: none"><li>• See RO 1 ON DELAY.</li></ul>	<b>0...3600 s</b>
1416	<b>RO 5 OFF DELAY</b> Defines the switch-off delay for relay 5. <ul style="list-style-type: none"><li>• See RO 1 OFF DELAY.</li></ul>	<b>0...3600 s</b>
1417	<b>RO 6 ON DELAY</b> Defines the switch-on delay for relay 6. <ul style="list-style-type: none"><li>• See RO 1 ON DELAY.</li></ul>	<b>0...3600 s</b>
1418	<b>RO 6 OFF DELAY</b> Defines the switch-off delay for relay 6. <ul style="list-style-type: none"><li>• See RO 1 OFF DELAY.</li></ul>	<b>0...3600 s</b>

## Group 15: ANALOGUE OUTPUTS

This group defines the drive's analogue (current signal) outputs. The drive's analogue outputs can be:

- any parameter of [Group 01: OPERATING DATA](#)
- limited to programmable minimum and maximum values of output current
- scaled (and/or inverted) by defining the minimum and maximum values of the source parameter (or content).  
Defining a maximum value (parameter 1503 or 1509) that is less than the content minimum value (parameter 1502 or 1508) results in an inverted output.
- filtered.

Code	Description	Range
1501	<b>AO1 CONTENT SEL</b> Defines the content for analogue output AO1. 99 = EXCITE PTC – Provides a current source for sensor type PTC. Output = 1.6 mA. See <a href="#">Group 35: MOTOR TEMP MEAS.</a> 100 = EXCITE PT100 – Provides a current source for sensor type PT100. Output = 9.1 mA. See <a href="#">Group 35: MOTOR TEMP MEAS.</a> 101...178 – Output corresponds to a parameter in <a href="#">Group 01: OPERATING DATA</a> . • Parameter defined by value (e.g. value 102 = parameter 0102)	<b>99...178</b>

Code	Description	Range
1502	<p><b>AO1 CONTENT MIN</b></p> <p>Sets the minimum content value.</p> <ul style="list-style-type: none"> <li>Content is the parameter selected by parameter 1501.</li> <li>Minimum value refers to the minimum content value that will be converted to an analogue output.</li> <li>These parameters (content and current min. and max. settings) provide scale and offset adjustment for the output. See the figure.</li> </ul>	-
1503	<p><b>AO1 CONTENT MAX</b></p> <p>Sets the maximum content value</p> <ul style="list-style-type: none"> <li>Content is the parameter selected by parameter 1501.</li> <li>Maximum value refers to the maximum content value that will be converted to an analogue output.</li> </ul>	-
1504	<p><b>MINIMUM AO1</b></p> <p>Sets the minimum output current.</p>	<b>0.0...20.0 mA</b>
1505	<p><b>MAXIMUM AO1</b></p> <p>Sets the maximum output current.</p>	<b>0.0...20.0 mA</b>
1506	<p><b>FILTER AO1</b></p> <p>Defines the filter time constant for AO1.</p> <ul style="list-style-type: none"> <li>The filtered signal reaches 63% of a step change within the time specified.</li> <li>See the figure for parameter 1303.</li> </ul>	<b>0.0...10.0 s</b>
1507	<p><b>AO2 CONTENT SEL</b></p> <p>Defines the content for analogue output AO2. See AO1 CONTENT SEL above.</p>	<b>99...178</b>
1508	<p><b>AO2 CONTENT MIN</b></p> <p>Sets the minimum content value. See AO1CONTENT MIN above.</p>	-

<b>Code</b>	<b>Description</b>	<b>Range</b>
1509	<b>AO2 CONTENT MAX</b> Sets the maximum content value. See AO1 CONTENT MAX above.	-
1510	<b>MINIMUM AO2</b> Sets the minimum output current. See MINIMUM AO1 above.	<b>0...20.0 mA</b>
1511	<b>MAXIMUM AO2</b> Sets the maximum output current. See MAXIMUM AO1 above.	<b>0...20.0 mA</b>
1512	<b>FILTER AO2</b> Defines the filter time constant for AO2. See FILTER AO1 above.	<b>0...10.0 s</b>

## Group 16: SYSTEM CONTROLS

This group defines a variety of system level locks, resets and enables.

Code	Description	Range
1601	<p><b>RUN ENABLE</b></p> <p>Selects the source of the Run enable signal. See the figure on page <a href="#">214</a>.</p> <p>0 = NOT SEL – Allows the drive to start without an external Run enable signal.</p> <p>1 = DI1 – Defines digital input DI1 as the Run enable signal.</p> <ul style="list-style-type: none"> <li>• This digital input must be activated for Run enable.</li> <li>• If the voltage drops and de-activates this digital input, the drive will coast to stop and not start until the Run enable signal resumes.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the Run enable signal.</p> <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> <p>7 = COMM – Assigns the fieldbus Command Word as the source for the Run enable signal.</p> <ul style="list-style-type: none"> <li>• Bit 6 of Command Word 1 (parameter 0301) activates the Run disable signal.</li> <li>• See the fieldbus user's manual for detailed instructions.</li> </ul> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as the Run enable signal.</p> <ul style="list-style-type: none"> <li>• This digital input must be de-activated for Run enable.</li> <li>• If this digital input activates, the drive will coast to stop and not start until the Run enable signal resumes.</li> </ul> <p>-2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the Run enable signal.</p> <ul style="list-style-type: none"> <li>• See DI1(INV) above.</li> </ul>	<b>-6...7</b>
1602	<p><b>PARAMETER LOCK</b></p> <p>Determines if the control panel (operator keypad) can change parameter values.</p> <ul style="list-style-type: none"> <li>• This lock does not limit parameter changes made by macros.</li> <li>• This lock does not limit parameter changes written by fieldbus inputs.</li> <li>• This parameter value can be changed only if the correct pass code is entered. See parameter 1603 PASS CODE.</li> </ul> <p>0 = LOCKED – You cannot use the control panel to change parameter values.</p> <ul style="list-style-type: none"> <li>• The lock can be opened by entering the valid pass code to parameter 1603.</li> </ul> <p>1 = OPEN – You can use the control panel to change parameter values.</p> <p>2 = NOT SAVED – You can use the control panel to change parameter values, but they are not stored in permanent memory.</p> <ul style="list-style-type: none"> <li>• Set parameter 1607 PARAM SAVE to 1 (SAVE) to store changed parameter values to memory.</li> </ul>	<b>0...2</b>


Code	Description	Range
1603	<p><b>PASS CODE</b></p> <p>Entering the correct pass code allows you to change the parameter lock.</p> <ul style="list-style-type: none"> <li>• See parameter 1602 above.</li> <li>• Code 358 allows you to change the value of parameter 1602 once.</li> <li>• This entry reverts back to 0 automatically.</li> </ul>	<b>0...65535</b>
1604	<p><b>FAULT RESET SEL</b></p> <p>Selects the source for the fault reset signal. The signal resets the drive after a fault trip if the cause of the fault no longer exists.</p> <p>0 = KEYPAD – Defines the control panel as the only fault reset source.</p> <ul style="list-style-type: none"> <li>• Fault reset is always possible with control panel.</li> </ul> <p>1 = DI1 – Defines digital input DI1 as a fault reset source.</p> <ul style="list-style-type: none"> <li>• Activating the digital input resets the drive.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as a fault reset source.</p> <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> <p>7 = START/STOP – Defines the Stop command as a fault reset source.</p> <ul style="list-style-type: none"> <li>• Do not use this option when fieldbus communication provides the start, stop and direction commands.</li> </ul> <p>8 = COMM – Defines the fieldbus as a fault reset source.</p> <ul style="list-style-type: none"> <li>• The Command Word is supplied through fieldbus communication.</li> <li>• The bit 4 of Command Word 1 (parameter 0301) resets the drive.</li> </ul> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as a fault reset source.</p> <ul style="list-style-type: none"> <li>• De-activating the digital input resets the drive.</li> </ul> <p>-2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as a fault reset source.</p> <ul style="list-style-type: none"> <li>• See DI1(INV) above.</li> </ul>	<b>-6...8</b>

Code	Description	Range
1605	<p><b>USER PAR SET CHG</b></p> <p>Defines control for changing the User Parameter Set.</p> <ul style="list-style-type: none"> <li>• See parameter 9902 APPLIC MACRO.</li> <li>• The drive must be stopped to change User Parameter Sets.</li> <li>• During a change, the drive will not start.</li> </ul> <p><b>Note:</b> Always save the User Parameter Set after changing any parameter settings or performing a motor identification.</p> <ul style="list-style-type: none"> <li>• Whenever the power is cycled, or parameter 9902 APPLIC MACRO is changed, the drive loads the last settings saved. Any unsaved changes to a user parameter set are lost.</li> </ul> <p><b>Note:</b> The value of this parameter (1605) is not included in the User Parameter Sets, and it does not change if User Parameter Sets change.</p> <p><b>Note:</b> You can use a relay output to supervise the selection of User Parameter Set 2.</p> <ul style="list-style-type: none"> <li>• See parameter 1401.</li> </ul> <p>0 = NOT SEL – Defines the control panel (operator keypad) as the only control for changing User Parameter Sets (using parameter 9902).</p> <p>1 = DI1 – Defines digital input DI1 as a control for changing User Parameter Sets.</p> <ul style="list-style-type: none"> <li>• The drive loads User Parameter Set 1 on the falling edge of the digital input.</li> <li>• The drive loads User Parameter Set 2 on the rising edge of the digital input.</li> <li>• The User Parameter Set changes only when the drive is stopped.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the control for changing User Parameter Sets.</p> <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as a control for changing User Parameter Sets.</p> <ul style="list-style-type: none"> <li>• The drive loads User Parameter Set 1 on the rising edge of the digital input.</li> <li>• The drive loads User Parameter Set 2 on the falling edge of the digital input.</li> <li>• The User Parameter Set changes only when the drive is stopped.</li> </ul> <p>-2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as a control for changing User Parameter Sets.</p> <ul style="list-style-type: none"> <li>• See DI1(INV) above.</li> </ul>	-6...6

Code	Description	Range
1606	<p><b>LOCAL LOCK</b></p> <p>Defines control for the use of the HAND mode. The HAND mode allows drive control from the control panel (operator keypad).</p> <ul style="list-style-type: none"> <li>• When LOCAL LOCK is active, the control panel cannot change from the AUTO mode to the HAND mode.</li> </ul> <p>0 = NOT SEL – Disables the lock. The control panel can select HAND and control the drive.</p> <p><b>Note:</b> The OFF key always stops the drive, regardless of the parameter 1606 LOCAL LOCK value.</p> <p>If LOCAL LOCK is active and the drive is in the AUTO mode when the OFF key is pressed, the drive remains in the AUTO mode but coasts to stop and shows alarm 2017 OFF BUTTON on the control panel display. (This alarm is shown on the control panel only; it is not indicated by relay outputs.) Press the AUTO key to restart the drive.</p> <p><b>Note:</b> If the drive is in the OFF or HAND mode and LOCAL LOCK is activated (e.g. from the control panel or through a digital input), control from the control panel is still possible until the drive is set to the AUTO mode. It is not until then that LOCAL LOCK becomes effective, disabling changing from from the AUTO mode to the OFF or HAND mode by pressing the OFF or HAND key.</p> <p>1 = DI1 – Defines digital input DI1 as the control for setting the local lock.</p> <ul style="list-style-type: none"> <li>• Activating the digital input locks out local control.</li> <li>• De-activating the digital input enables the HAND selection.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the control for setting the local lock.</p> <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> <p>7 = ON – Sets the lock. The control panel cannot select HAND, and cannot control the drive.</p> <p>8 = COMM – Defines bit 14 of Command Word 1 (parameter 0301) as the control for setting the local lock.</p> <ul style="list-style-type: none"> <li>• The Command Word is supplied through fieldbus communication.</li> </ul> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as the control for setting the local lock.</p> <ul style="list-style-type: none"> <li>• De-activating the digital input locks out local control.</li> <li>• Activating the digital input enables the HAND selection.</li> </ul> <p>-2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the control for setting the local lock.</p> <ul style="list-style-type: none"> <li>• See DI1(INV) above.</li> </ul>	-6...8



Code	Description	Range
1607	<p><b>PARAM SAVE</b></p> <p>Saves all altered parameters to permanent memory.</p> <ul style="list-style-type: none"> <li>Parameters altered through a fieldbus are not automatically saved to permanent memory. To save, you must use this parameter.</li> <li>If 1602 PARAMETER LOCK = 2 (NOT SAVED), parameters altered from the control panel (operator keypad) are not saved. To save, you must use this parameter.</li> <li>If 1602 PARAMETER LOCK = 1 (OPEN), parameters altered from the control panel are stored immediately to permanent memory.</li> </ul> <p>0 = DONE – Value changes automatically when all parameters are saved.</p> <p>1 = SAVE... – Saves altered parameters to permanent memory.</p>	<b>0=DONE, 1=SAVE</b>
1608	<p><b>START ENABLE 1</b></p> <p>Selects the source of the Start enable 1 signal. See the figure on page <a href="#">214</a>.</p> <p><b>Note:</b> Start enable functionality <b>differs</b> from the Run enable functionality.</p> <p>0 = NOT SEL – Allows the drive to start without an external Start enable signal.</p> <p>1 = DI1 – Defines digital input DI1 as the Start enable 1 signal.</p> <ul style="list-style-type: none"> <li>This digital input must be activated for Start enable 1 signal.</li> <li>If the voltage drops and de-activates this digital input, the drive will coast to stop and show alarm 2021 on the control panel display. The drive will not start until Start enable 1 signal resumes.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the Start enable 1 signal.</p> <ul style="list-style-type: none"> <li>See DI1 above.</li> </ul> <p>7 = COMM – Assigns the fieldbus Command Word as the source for the Start enable 1 signal.</p> <ul style="list-style-type: none"> <li>Bit 2 of Command Word 2 (parameter 0302) activates the Start disable 1 signal.</li> <li>See the fieldbus user's manual for detailed instructions.</li> </ul> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as the Start enable 1 signal.</p> <p>-2...-6 = DI2 (INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the Start enable 1 signal.</p> <ul style="list-style-type: none"> <li>See DI1 (INV) above.</li> </ul>	<b>-6...7</b>

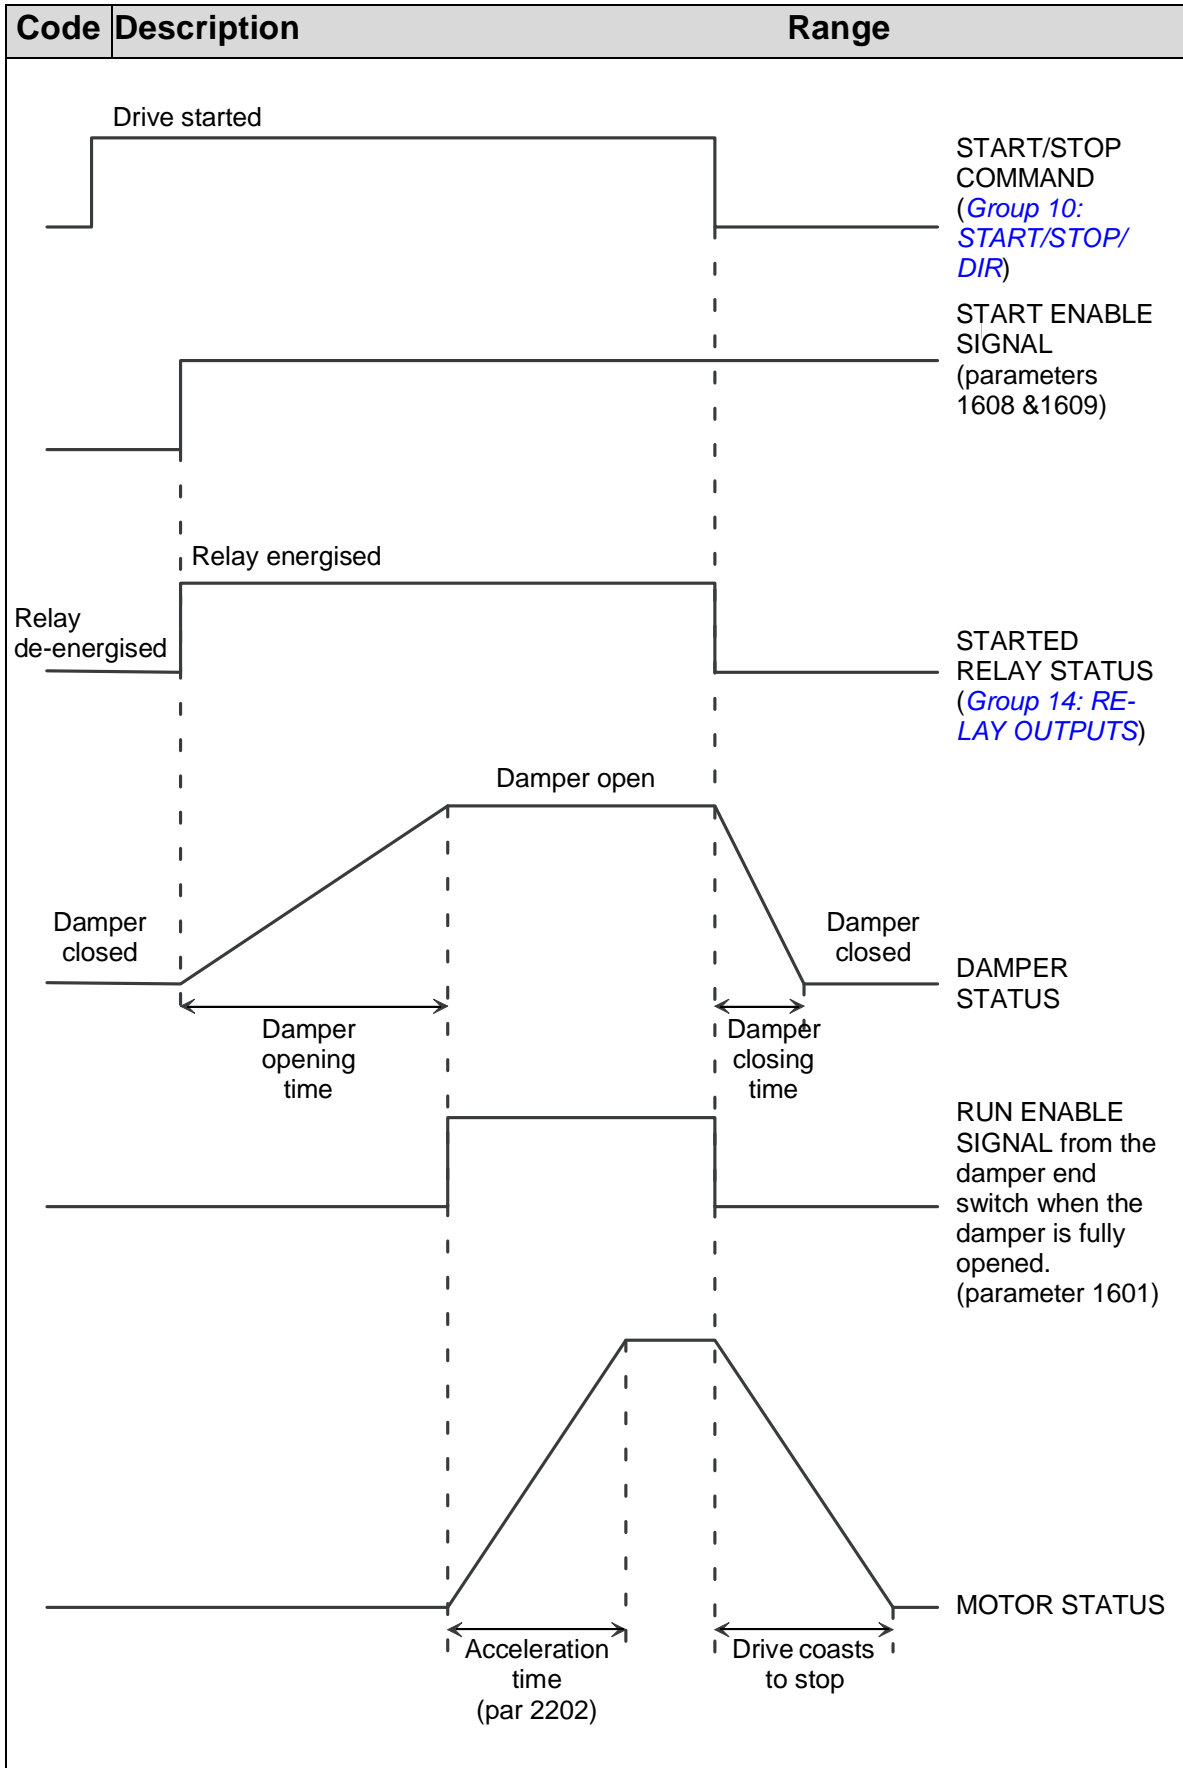

Code	Description	Range
1609	<p><b>START ENABLE 2</b></p> <p>Selects the source of the Start enable 2 signal.</p> <p><b>Note:</b> Start enable functionality <b>differs</b> from the Run enable functionality.</p> <p>0 = NOT SEL – Allows the drive to start without an external Start enable signal.</p> <p>1 = DI1 – Defines digital input DI1 as the Start enable 2 signal.</p> <ul style="list-style-type: none"> <li>• This digital input must be activated for Start enable 2 signal.</li> <li>• If the voltage drops and de-activates this digital input, the drive will coast to stop and show alarm 2022 on the control panel display. The drive will not start until the Start enable 2 signal resumes.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the Start enable 2 signal.</p> <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> <p>7 = COMM – Assigns the fieldbus Command Word as the source for the Start enable 2 signal.</p> <ul style="list-style-type: none"> <li>• Bit 3 of Command Word 2 (parameter 0302) activates the Start disable 2 signal.</li> <li>• See the fieldbus user's manual for detailed instructions.</li> </ul> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as the Start enable 2 signal.</p> <p>-2...-6 = DI2 (INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the Start enable 2 signal.</p> <ul style="list-style-type: none"> <li>• See DI1 (INV) above.</li> </ul>	-6...7
1610	<p><b>DISPLAY ALARMS</b></p> <p>Controls the visibility of the following alarms:</p> <ul style="list-style-type: none"> <li>• 2001 OVERCURRENT</li> <li>• 2002 OVERVOLTAGE</li> <li>• 2003 UNDERVOLTAGE</li> <li>• 2009 DEVICE OVERTEMP</li> </ul> <p>For more information, see section <a href="#">Alarm listing</a> on page 381.</p> <p>0 = NO – The above alarms are suppressed.</p> <p>1 = YES – All of the above alarms are enabled.</p>	0=NO, 1=YES

Code	Description	Range
1611	<p><b>PARAMETER VIEW</b></p> <p>Selects <b>the parameter view, i.e. which parameters are shown.</b></p> <p><b>Note:</b> This parameter is visible only when it is activated by the optional FlashDrop device. The FlashDrop is designed for fast copying of parameters to unpowered drives. It allows easy customizing of the parameter list, e.g. selected parameters can be hidden. For more information, see <i>MFDT-01 FlashDrop User's Manual (3AFE68591074 [English])</i>.</p> <p>FlashDrop parameter values are activated by setting parameter 9902 to 31 (LOAD FD SET).</p> <p>0 = DEFAULT – Complete long and short parameter lists are shown. 1 = FLASHDROP – FlashDrop parameter list is shown. Does not include short parameter list. Parameters that are hidden by the FlashDrop device are not visible.</p>	<p><b>0=DEFAULT, 1=FLASHDROP</b></p>
1612	<p><b>FAN CONTROL</b></p> <p>Selects drive cooling fan control. Can be used to mitigate DC voltage fluctuations.</p> <p>0 = AUTO – Fan is controlled automatically (default). 1 = ON – Fan is always forced on.</p>	<p><b>0=AUTO, 1=ON</b></p>
1613	<p><b>FAULT RESET</b></p> <p>Allows to reset faults with a parameter. Can be used to reset faults from remote monitoring systems that have access to drive parameters.</p> <p>0 = DEFAULT – Fault is not reset (default) 1 = RESET NOW – Resets fault.</p>	<p><b>0=DEFAULT, 1=RESET NOW</b></p>

## Group 17: OVERRIDE

This group defines the source for the override activation signal, the override speed/frequency and pass code and how the override is enabled and disabled.

The override feature can be used e.g. in fire situations.

When the override DI is activated, the drive stops and then accelerates to the preset speed or frequency. When the DI is deactivated, the drive stops and reboots. If the start command, Run enable and Start enable are active in the AUTO mode, the drive starts automatically and continues normally after override mode. In the HAND mode, the drive returns to the OFF mode.

When override is active:

- Drive runs at preset speed.
- Drive ignores all keypad commands.
- Drive ignores all commands from communication links.
- Drive ignores all digital inputs except override activation/deactivation, Run enable and Start enable.
- Drive displays alarm message "2020 OVERRIDE".

The following faults are ignored:

3	DEV OVERTEMP
6	DC UNDERVOLT
7	AI1 LOSS
8	AI2 LOSS
9	MOT OVERTEMP
10	PANEL LOSS
12	MOTOR STALL
14	EXT FAULT 1
15	EXT FAULT 2
18	THERM FAIL
21	CURR MEAS
22	SUPPLY PHASE
24	OVERSPEED
28	SERIAL 1 ERR
29	EFB CON FILE
30	FORCE TRIP
31	EFB 1

32	EFB 2
33	EFB 3
34	MOTOR PHASE
37	CB OVERTEMP
38	USER LOAD CURVE
1000	PAR HZRPM
1001	PAR PFA REF NEG
1003	PAR AI SCALE
1004	PAR AO SCALE
1006	PAR EXT RO
1007	PAR FIELDBUS MISSING
1008	PAR PFA MODE
1016	PAR USER LOAD C

*Commissioning the override mode:*

1. Enter the parameters in all groups as needed, except group 17.
2. Select the digital input that will activate override mode (P 1701).
3. Enter the frequency or speed reference for override mode (P 1702 or P 1703) according to the motor control mode (P 9904).
4. Enter the pass code [P 1704 (358)].
5. Enable the override mode (P 1705).

*Changing the override parameters:*

1. If override mode is already enabled, disable it:
  - Enter the pass code (P 1704).
  - Disable the override mode (P 1705).
2. If needed, load the override parameter set (P 9902).
3. Change the parameters as needed, except group 17.
4. Change the parameters in group 17 as needed:
  - Digital input for override mode (P 1701).
  - Frequency or speed reference (P 1702 or P 1703).
5. Enter the pass code (P 1704).
6. Enable the override mode (P 1705). The drive replaces the override parameter set with new values of all parameters.

Code	Description	Range
1701	<p><b>OVERRIDE SEL</b></p> <p>Selects the source of the override activation signal.</p> <p>0 = NOT SEL – Override activation signal not selected.</p> <p>1 = DI1 – Defines digital input DI1 as the override activation signal.</p> <ul style="list-style-type: none"> <li>• This digital input must be activated for override activation signal.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the override activation signal.</p> <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as the override activation signal.</p> <p>-2...-6 = DI2 (INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the override activation signal.</p> <ul style="list-style-type: none"> <li>• See DI1 (INV) above.</li> </ul>	<b>-6...6</b>
1702	<p><b>OVERRIDE FREQ</b></p> <p>Defines a preset frequency for the override. The direction of rotation is defined by parameter 1003.</p> <p><b>Note:</b> Set this value if motor control mode (parameter 9904) is SCALAR:FREQ (3).</p>	<b>0...500 Hz</b>
1703	<p><b>OVERRIDE SPEED</b></p> <p>Defines a preset speed for the override. The direction of rotation is defined by parameter 1003.</p> <p><b>Note:</b> Set this value if motor control mode (parameter 9904) is VECTOR:SPEED (1).</p>	<b>0...30.000 rpm</b>
1704	<p><b>OVERRIDE PASS CODE</b></p> <p>Entering the correct pass code unlocks parameter 1705 for one change.</p> <ul style="list-style-type: none"> <li>• Enter the pass code always before changing the value of parameter 1705.</li> <li>• See parameter 1705 below.</li> <li>• The pass code is 358.</li> <li>• The entry reverts back to zero automatically.</li> </ul>	<b>0...65535</b>
1705	<p><b>OVERRIDE ENABLE</b></p> <p>Selects whether the override is enabled or disabled.</p> <p>0 = OFF – Override disabled.</p> <p>1 = ON – Override enabled.</p> <ul style="list-style-type: none"> <li>• When enabled, the drive stores the values of all parameters into an override parameter set (see parameter 9902) and the parameters in group 17 will be write protected (except parameter 1704). To change the other parameters in group 17, override has to be disabled.</li> </ul> <p>2 = LOAD – Loads the saved override set into use (as an active parameter set).</p>	<b>0...2</b>

Code	Description	Range
1706	<p><b>OVERRIDE DIR</b></p> <p>Selects the source of the override direction signal.</p> <p>0 = FORWARD – Assigns forward as the override direction.</p> <p>1 = DI1 – Defines digital input DI1 as the override direction signal.</p> <ul style="list-style-type: none"> <li>• De-activating the digital input selects the forward direction.</li> <li>• Activating the digital input selects the reverse direction.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the override direction signal.</p> <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> <p>7 = REVERSE – Assigns reverse as the override direction.</p> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as the override direction signal.</p> <ul style="list-style-type: none"> <li>• Activating the digital input selects the forward direction.</li> <li>• De-activating the digital input selects the reverse direction.</li> </ul> <p>-2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the override direction signal.</p> <ul style="list-style-type: none"> <li>• See DI1(INV) above.</li> </ul>	-6...7
1707	<p><b>OVERRIDE REF</b></p> <p>Selects the source of the override reference.</p> <p>1 = CONSTANT – Selects a preset frequency or speed for the override. The frequency value is defined by parameter 1702 OVERRIDE FREQ and the speed value by parameter 1703 OVERRIDE SPEED.</p> <p>2 = PID – The reference is taken from the PID output, see group 40 PROCESS PID SET 1.</p> <ul style="list-style-type: none"> <li>• <b>Note:</b> The following conditions must be met when using PID in the override mode: <ul style="list-style-type: none"> <li>• PID1 set point (parameter 4010 SET POINT SEL) can be either A1, A2 or INTERNAL.</li> <li>• PID1 parameter set 1 must be active (parameter 4027 PID 1 PARAM SET = SET 1).</li> <li>• Override direction (parameter 1706 OVERRIDE DIR) can be either 0 (FORWARD) or 7 (REVERSE).</li> </ul> </li> </ul>	1=CONSTANT, 2=PID



### Group 20: LIMITS

This group defines minimum and maximum limits to be followed in driving the motor – speed, frequency, current, torque, etc.

Code	Description	Range
2001	<p><b>MINIMUM SPEED</b></p> <p>Defines the minimum speed (rpm) allowed.</p> <ul style="list-style-type: none"> <li>• A positive (or zero) minimum speed value defines two ranges, one positive and one negative.</li> <li>• A negative minimum speed value defines one speed range.</li> <li>• See the figure.</li> </ul>	<b>-30000...30000 rpm</b>
	<p>The figure consists of two graphs. The top graph is titled '2001 value is &lt; 0'. The vertical axis is labeled 'Speed' and has points P 2002, 0, and P 2001 marked. A single shaded rectangular area labeled 'Speed range allowed' is shown between P 2001 and P 2002. The horizontal axis is labeled 'Time'. The bottom graph is titled '2001 value is ≥ 0'. The vertical axis is labeled 'Speed' and has points P 2002, 0, -(P 2001), and -(P 2002) marked. Two shaded rectangular areas labeled 'Speed range allowed' are shown: one between P 2001 and 0, and another between -(P 2001) and -(P 2002). The horizontal axis is labeled 'Time'.</p>	
2002	<p><b>MAXIMUM SPEED</b></p> <p>Defines the maximum speed (rpm) allowed.</p>	<b>0...30000 rpm</b>
2003	<p><b>MAX CURRENT</b></p> <p>Defines the maximum output current (A) supplied by the drive to the motor.</p>	<b>depends on drive type</b>

Code	Description	Range
2006	<p><b>UNDERVOLT CTRL</b></p> <p>Sets the DC undervoltage controller on or off. When on:</p> <ul style="list-style-type: none"> <li>• If the DC bus voltage drops due to loss of input power, the undervoltage controller decreases the motor speed in order to keep the DC bus voltage above the lower limit.</li> <li>• When the motor speed decreases, the inertia of the load causes regeneration back into the drive, keeping the DC bus charged, and preventing an undervoltage trip.</li> <li>• The DC undervoltage controller increases power loss ride-through on systems with a high inertia, such as a centrifuge or a fan.</li> </ul> <p>0 = DISABLE – Disables controller.  1 = ENABLE(TIME) – Enables controller with a 500 ms time limit for the operation.  2 = ENABLE – Enables controller without a maximum time limit for the operation.</p>	<b>0...2</b>
2007	<p><b>MINIMUM FREQ</b></p> <p>Defines the minimum limit for the drive output frequency.</p> <ul style="list-style-type: none"> <li>• A positive or zero minimum speed value defines two ranges, one positive and one negative.</li> <li>• A negative minimum speed value defines one speed range.</li> <li>• See the figure.</li> </ul> <p><b>Note:</b> Keep <math>\text{MINIMUM FREQ} \leq \text{MAXIMUM FREQ}</math>.</p>	<b>-500...500 Hz</b>
2008	<p><b>MAXIMUM FREQ</b></p> <p>Defines the maximum limit for the drive output frequency.</p>	<b>0...500 Hz</b>

Code	Description	Range
2013	<p><b>MIN TORQUE SEL</b></p> <p>Defines control of the selection between two minimum torque limits (2015 MIN TORQUE 1 and 2016 MIN TORQUE 2).</p> <p>0 = MIN TORQUE 1 – Selects 2015 MIN TORQUE 1 as the minimum limit used.</p> <p>1 = DI1 – Defines digital input DI1 as the control for selecting the minimum limit used.</p> <ul style="list-style-type: none"> <li>• Activating the digital input selects MIN TORQUE 2 value.</li> <li>• De-activating the digital input selects MIN TORQUE 1 value.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the control for selecting the minimum limit used.</p> <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> <p>7 = COMM – Defines bit 15 of Command Word 1 (parameter 0301) as the control for selecting the minimum limit used.</p> <ul style="list-style-type: none"> <li>• The Command Word is supplied through fieldbus communication.</li> </ul> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as the control for selecting the minimum limit used.</p> <ul style="list-style-type: none"> <li>• Activating the digital input selects MIN TORQUE 1 value.</li> <li>• De-activating the digital input selects MIN TORQUE 2 value.</li> </ul> <p>-2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the control for selecting the minimum limit used.</p> <ul style="list-style-type: none"> <li>• See DI1(INV) above.</li> </ul>	<b>-6...7</b>
2014	<p><b>MAX TORQUE SEL</b></p> <p>Defines control of the selection between two maximum torque limits (2017 MAX TORQUE 1 and 2018 MAX TORQUE 2).</p> <p>0 = MAX TORQUE 1 – Selects 2017 MAX TORQUE 1 as the maximum limit used.</p> <p>1 = DI1 – Defines digital input DI1 as the control for selecting the maximum limit used.</p> <ul style="list-style-type: none"> <li>• Activating the digital input selects MAX TORQUE 2 value.</li> <li>• De-activating the digital input selects MAX TORQUE 1 value.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the control for selecting the maximum limit used.</p> <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> <p>7 = COMM – Defines bit 15 of Command Word 1 (parameter 0301) as the control for selecting the maximum limit used.</p> <ul style="list-style-type: none"> <li>• The Command Word is supplied through fieldbus communication.</li> </ul> <p>-1 = DI1(INV) – Defines an inverted digital input di1 as the control for selecting the maximum limit used.</p> <ul style="list-style-type: none"> <li>• Activating the digital input selects MAX TORQUE 1 value.</li> <li>• De-activating the digital input selects MAX TORQUE 2 value.</li> </ul> <p>-2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the control for selecting the maximum limit used.</p> <ul style="list-style-type: none"> <li>• See DI1(INV) above.</li> </ul>	<b>-6...7</b>
2015	<p><b>MIN TORQUE 1</b></p> <p>Sets the first minimum limit for torque (%). Value is a percentage of the motor nominal torque.</p>	<b>-600.0...0%</b>

<b>Code</b>	<b>Description</b>	<b>Range</b>
2016	<b>MIN TORQUE 2</b> Sets the second minimum limit for torque (%). Value is a percentage of the motor nominal torque.	<b>-600.0...0%</b>
2017	<b>MAX TORQUE 1</b> Sets the first maximum limit for torque (%). Value is a percentage of the motor nominal torque.	<b>0...600.0%</b>
2018	<b>MAX TORQUE 2</b> Sets the second maximum limit for torque (%). Value is a percentage of the motor nominal torque.	<b>0...600.0%</b>

## Group 21: START/STOP

This group defines how the motor starts and stops. The ACH550 supports several start and stop modes.

Code	Description	Range
2101	<p><b>START FUNCTION</b></p> <p>Selects the motor start method. The valid options depend on the value of parameter 9904 MOTOR CTRL MODE.</p> <p>1 = AUTO – Selects the automatic start mode.</p> <ul style="list-style-type: none"> <li>• VECTOR:SPEED mode: Optimal start in most cases. Flying start function to a rotating axis and start at zero speed.</li> <li>• SCALAR:FREQ mode: Immediate start from zero frequency.</li> </ul> <p>2 = DC MAGN – Selects the DC Magnetising start mode. Identical to selection 8 = RAMP.</p> <p><b>Note:</b> The DC Magnetising start mode cannot start a rotating motor.</p> <p><b>Note:</b> The drive starts when the set pre-magnetising time (parameter 2103 DC MAGN TIME) has passed, even if motor magnetisation is not complete.</p> <ul style="list-style-type: none"> <li>• VECTOR:SPEED mode: Magnetises the motor within the time determined by parameter 2103 DC MAGN TIME using DC current. The normal control is released exactly after the magnetising time. This selection guarantees the highest possible break-away torque.</li> <li>• SCALAR:FREQ mode: Magnetises the motor within the time determined by the parameter 2103 DC MAGN TIME using DC current. The normal control is released exactly after the magnetising time.</li> </ul> <p>3 = SCALAR FLYST – Selects the flying start mode. SCALAR:FREQ mode only.</p> <ul style="list-style-type: none"> <li>• The drive will automatically select the correct output frequency to start a rotating motor. Useful if the motor is already rotating and the drive will start smoothly at the current frequency.</li> <li>• Cannot be used in multimotor systems.</li> </ul> <p>4 = TORQ BOOST – Selects the automatic torque boost mode. SCALAR:FREQ mode only.</p> <ul style="list-style-type: none"> <li>• May be necessary in drives with high starting torque.</li> <li>• Torque boost is only applied at start, ending when the output frequency exceeds 20 Hz or when output frequency is equal to reference.</li> <li>• In the beginning the motor magnetises within the time determined by the parameter 2103 DC MAGN TIME using DC current.</li> <li>• See parameter 2110 TORQ BOOST CURR.</li> </ul> <p>5 = FLY + BOOST – Selects both the flying start and the torque boost mode. SCALAR:FREQ mode only.</p> <ul style="list-style-type: none"> <li>• Flying start routine is performed first and the motor is magnetised. If the speed is found to be zero, the torque boost is done.</li> </ul> <p>8 = RAMP – Immediate start from zero frequency.</p>	1...8

Code	Description	Range
2102	<p><b>STOP FUNCTION</b></p> <p>Selects the motor stop method.</p> <p>1 = COAST – Selects cutting off the motor power as the stop method. The motor coasts to stop.</p> <p>2 = RAMP – Selects using a deceleration ramp.</p> <ul style="list-style-type: none"> <li>Deceleration ramp is defined by 2203 DECELER TIME 1 or 2206 DECELER TIME 2 (whichever is active).</li> </ul>	<b>1=COAST, 2=RAMP</b>
2103	<p><b>DC MAGN TIME</b></p> <p>Defines the pre-magnetising time for the DC Magnetising start mode.</p> <ul style="list-style-type: none"> <li>Use parameter 2101 to select the start mode.</li> <li>After the start command, the drive pre-magnetises the motor for the time defined here, and then starts the motor.</li> <li>Set the pre-magnetising time just long enough to allow full motor magnetisation. Too long a time heats the motor excessively.</li> </ul>	<b>0...10 s</b>
2104	<p><b>DC HOLD CTL</b></p> <p>Selects whether DC current is used for braking.</p> <p>0 = NOT SEL – Disables the DC current operation.</p> <p>2 = DC BRAKING – Enables the DC injection braking.</p> <ul style="list-style-type: none"> <li>Enables DC injection braking after modulation has stopped.</li> <li>If parameter 2102 STOP FUNCTION is 1 (COAST), braking is applied after start is removed.</li> <li>If parameter 2102 STOP FUNCTION is 2 (RAMP), braking is applied after ramp.</li> </ul>	<p><b>0=NOT SEL, 2=DC BRAKING</b></p>
2105	<p><b>DC HOLD SPEED</b></p> <p>Sets the speed for DC Hold. Requires that parameter 2104 DC HOLD CTL = 1 (DC HOLD).</p>	<b>0...360 rpm</b>
2106	<p><b>DC CURR REF</b></p> <p>Defines the DC current control reference as a percentage of parameter 9906 MOTOR NOM CURR.</p>	<b>0...100%</b>
2107	<p><b>DC BRAKE TIME</b></p> <p>Defines the DC brake time after modulation has stopped, if parameter 2104 is 2 (DC BRAKING).</p>	<b>0...250 s</b>

Code	Description	Range
2108	<p><b>START INHIBIT</b></p> <p>Sets the Start inhibit function on or off. The Start inhibit function ignores a pending start command in the following situation (a new start command is required):</p> <ul style="list-style-type: none"> <li>The fault is removed and reset. This can be done manually through control panel, I/O or serial communication, or by automatic reset (<a href="#">Group 31: AUTOMATIC RESET</a>).</li> </ul> <p>0 = OFF – Disables the Start inhibit function. 1 = ON – Enables the Start inhibit function.</p>	<b>0=OFF, 1=ON</b>
2109	<p><b>EMERG STOP SEL</b></p> <p>Defines control of the Emergency stop command. When activated:</p> <ul style="list-style-type: none"> <li>Emergency stop decelerates the motor using the emergency stop ramp (parameter 2208 EMERG DEC TIME).</li> <li>Requires an external stop command and removal of the Emergency stop command before the drive can restart.</li> </ul> <p>0 = NOT SEL – Disables the Emergency stop function through digital inputs. 1 = DI1 – Defines digital input DI1 as the control for the Emergency stop command.</p> <ul style="list-style-type: none"> <li>Activating the digital input issues an Emergency stop command.</li> <li>De-activating the digital input removes the Emergency stop command.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the control for the Emergency stop command.</p> <ul style="list-style-type: none"> <li>See DI1 above.</li> </ul> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as the control for the Emergency stop command.</p> <ul style="list-style-type: none"> <li>De-activating the digital input issues an Emergency stop command.</li> <li>Activating the digital input removes the Emergency stop command.</li> </ul> <p>-2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the control for the Emergency stop command.</p> <ul style="list-style-type: none"> <li>See DI1(INV) above.</li> </ul>	<b>-6...6</b>
2110	<p><b>TORQ BOOST CURR</b></p> <p>Sets the maximum supplied current during the torque boost.</p> <ul style="list-style-type: none"> <li>See parameter 2101 START FUNCTION.</li> </ul>	<b>0...300%</b>
2113	<p><b>START DELAY</b></p> <p>Defines the Start delay. After the conditions for start have been fulfilled, the drive waits until the delay has elapsed and then starts the motor. Start delay can be used with all start modes.</p> <ul style="list-style-type: none"> <li>If START DELAY = zero, the delay is disabled.</li> <li>During the Start delay, alarm 2028 START DELAY is shown.</li> </ul>	<b>0.00...60.00 s</b>

## Group 22: ACCEL/DECEL

This group defines ramps that control the rate of acceleration and deceleration. You define these ramps as a pair, one for acceleration and one for deceleration. You can define two pairs of ramps and use a digital input to select one of these.

Code	Description	Range
2201	<p><b>ACC/DEC 1/2 SEL</b></p> <p>Defines control for selection of acceleration/deceleration ramps.</p> <ul style="list-style-type: none"> <li>Ramps are defined in pairs, with one ramp for acceleration and one ramp for deceleration.</li> <li>See below for the ramp definition parameters.</li> </ul> <p>0 = NOT SEL – Disables selection, the first ramp pair is used.</p> <p>1 = DI1 – Defines digital input DI1 as the control for ramp pair selection.</p> <ul style="list-style-type: none"> <li>Activating the digital input selects ramp pair 2.</li> <li>De-activating the digital input selects ramp pair 1.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the control for ramp pair selection.</p> <ul style="list-style-type: none"> <li>See DI1 above.</li> </ul> <p>7 = COMM – Defines bit 10 of Command Word 1 (parameter 0301) as the control for ramp pair selection.</p> <ul style="list-style-type: none"> <li>The command word is supplied through fieldbus communication.</li> </ul> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as the control for ramp pair selection.</p> <ul style="list-style-type: none"> <li>De-activating the digital input selects ramp pair 2.</li> <li>Activating the digital input selects ramp pair 1.</li> </ul> <p>-2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the control for ramp pair selection.</p> <ul style="list-style-type: none"> <li>See DI1(INV) above.</li> </ul>	-6...6
2202	<p><b>ACCELER TIME 1</b></p> <p>Sets the acceleration time for zero to maximum frequency for ramp pair 1. See A in the figure for parameter 2204.</p> <ul style="list-style-type: none"> <li>Actual acceleration time also depends on 2204 RAMP SHAPE 1.</li> <li>See 2008 MAXIMUM FREQ.</li> </ul>	0.0...1800 s
2203	<p><b>DECELER TIME 1</b></p> <p>Sets the deceleration time for maximum frequency to zero for ramp pair 1.</p> <ul style="list-style-type: none"> <li>Actual deceleration time also depends on 2204 RAMP SHAPE 1.</li> <li>See 2008 MAXIMUM FREQ.</li> </ul>	0.0...1800 s




Code	Description	Range
2204	<p><b>RAMP SHAPE 1</b></p> <p>Selects the shape of the acceleration/ deceleration ramp for ramp pair 1. See B in the figure.</p> <ul style="list-style-type: none"> <li>Shape is defined as a ramp, unless additional time is specified here to reach the maximum frequency. A longer time provides a softer transition at each end of the slope. The shape becomes an s-curve.</li> <li>Rule of thumb: 1/5 is a suitable relation between the ramp shape time and the acceleration ramp time.</li> </ul> <p>0.0 = LINEAR – Specifies linear acceleration/deceleration ramps for ramp pair 1.</p> <p>0.1...1000.0 – Specifies s-curve acceleration/deceleration ramps for ramp pair 1.</p>	<p><b>0=LINEAR, 0.1...1000.0 s</b></p> <p>A = 2202 ACCELERATION TIME B = 2204 RAMP SHAPE</p>
2205	<p><b>ACCELER TIME 2</b></p> <p>Sets the acceleration time for zero to maximum frequency for ramp pair 2.</p> <ul style="list-style-type: none"> <li>See 2202 ACCELER TIME 1.</li> </ul>	<b>0.0...1800 s</b>
2206	<p><b>DECELER TIME 2</b></p> <p>Sets the deceleration time for maximum frequency to zero for ramp pair 2.</p> <ul style="list-style-type: none"> <li>See 2203 DECELER TIME 1.</li> </ul>	<b>20.0...1800 s</b>
2207	<p><b>RAMP SHAPE 2</b></p> <p>Selects the shape of the acceleration/deceleration ramp for ramp pair 2.</p> <ul style="list-style-type: none"> <li>See 2204 RAMP SHAPE 1.</li> </ul>	<b>0=LINEAR, 0.0...1000.0 s</b>
2208	<p><b>EMERG DEC TIME</b></p> <p>Sets the deceleration time for maximum frequency to zero for an emergency.</p> <ul style="list-style-type: none"> <li>See parameter 2109 EMERG STOP SEL.</li> <li>Ramp is linear.</li> </ul>	<b>0.0...1800 s</b>

Code	Description	Range
2209	<p><b>RAMP INPUT 0</b></p> <p>Defines control for forcing the speed to 0 with the currently used deceleration ramp (see parameters 2203 DECELER TIME 1 and 2206 DECELER TIME 2).</p> <p>0 = NOT SEL – Not selected.</p> <p>1 = DI1 – Defines digital input DI1 as the control for forcing the speed to 0.</p> <ul style="list-style-type: none"> <li>• Activating the digital input forces the speed to 0, after which the speed will stay at 0.</li> <li>• De-activating the digital input: speed control resumes normal operation.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the control for forcing the speed to 0.</p> <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> <p>7 = COMM – Defines bit 13 of the Command Word 1 as the control for forcing the speed to 0.</p> <ul style="list-style-type: none"> <li>• The command word is supplied through fieldbus communication.</li> <li>• The Command Word is parameter 0301.</li> </ul> <p>-1 = DI1(INV) – Defines inverted digital input DI1 as the control for forcing the speed to 0.</p> <ul style="list-style-type: none"> <li>• De-activating the digital input forces the speed to 0.</li> <li>• Activating the digital input: speed control resumes normal operation.</li> </ul> <p>-2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the control for forcing the speed to 0.</p> <ul style="list-style-type: none"> <li>• See DI1(INV) above.</li> </ul>	-6...7

### Group 23: SPEED CONTROL

This group defines variables used for speed control operation.

Code	Description	Range
2301	<p><b>PROP GAIN</b></p> <p>Sets the relative gain for the speed controller.</p> <ul style="list-style-type: none"> <li>• Larger values may cause speed oscillation.</li> <li>• The figure shows the speed controller output after an error step (error remains constant).</li> </ul> <p><b>Note:</b> You can use parameter 2305 AUTOTUNE RUN to automatically set the proportional gain.</p> <p><math>K_p = \text{Gain} = 1</math>  <math>T_i = \text{Integration time} = 0</math>  <math>T_D = \text{Derivation time} = 0</math></p>	0.00...200.0

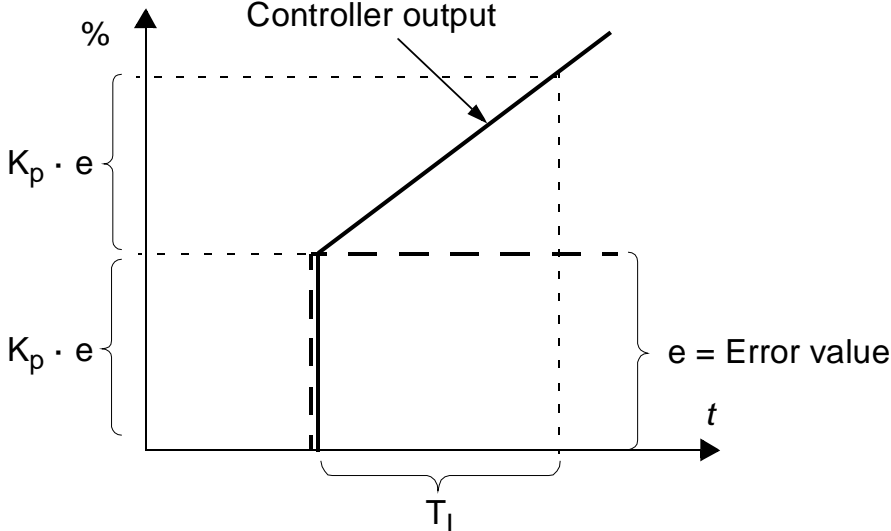Code	Description	Range
2302	<p><b>INTEGRATION TIME</b></p> <p>Sets the integration time for the speed controller.</p> <ul style="list-style-type: none"> <li>• The integration time defines the rate at which the controller output changes for a constant error value.</li> <li>• Shorter integration times correct continuous errors faster.</li> <li>• Control becomes unstable if the integration time is too short.</li> <li>• The figure shows the speed controller output after an error step (error remains constant).</li> </ul> <p><b>Note:</b> You can use parameter 2305 AUTOTUNE RUN to automatically set the integration time.</p> <p><math>K_p = \text{Gain} = 1</math>  <math>T_I = \text{Integration time} &gt; 0</math>  <math>T_D = \text{Derivation time} = 0</math></p> 	0...600.00 s

Code	Description	Range
2303	<p><b>DERIVATION TIME</b></p> <p>Sets the derivation time for the speed controller.</p> <ul style="list-style-type: none"> <li>Derivative action makes the control more responsive to error value changes.</li> <li>The longer the derivation time, the more the speed controller output is boosted during the change.</li> <li>If the derivation time is set to zero, the controller works as a PI controller, otherwise as a PID controller.</li> </ul> <p>The figure below shows the speed controller output after an error step when the error remains constant.</p> <p> <math>K_p = \text{Gain} = 1</math>  <math>T_I = \text{Integration time} &gt; 0</math>  <math>T_D = \text{Derivation time} &gt; 0</math>  <math>T_s = \text{Sample time period} = 2 \text{ ms}</math>  <math>\Delta e = \text{Error value change between two samples}</math> </p>	0...10000 ms

Code	Description	Range
2304	<p><b>ACC COMPENSATION</b></p> <p>Sets the derivation time for acceleration compensation.</p> <ul style="list-style-type: none"> <li>• Adding a derivative of the reference to the output of the speed controller compensates for inertia during acceleration.</li> <li>• 2303 DERIVATION TIME describes the principle of the derivative action.</li> <li>• Rule of thumb: Set this parameter between 50 and 100% of the sum of the mechanical time constants for the motor and the driven machine.</li> <li>• The figure shows the speed responses when a high-inertia load is accelerated along a ramp.</li> </ul>	<b>0...600.00 s</b>

**No acceleration compensation**

**Acceleration compensation**

--- Speed reference

— Actual speed

Code	Description	Range
2305	<p><b>AUTOTUNE RUN</b></p> <p>Starts automatic tuning of the speed controller.</p> <p>0 = OFF – Disables the Autotune creation process. (Does not disable the operation of Autotune settings.)</p> <p>1 = ON – Activates speed controller autotuning. Automatically reverts to OFF.</p> <p><b>Procedure:</b></p> <p><b>Note:</b> The motor load must be connected.</p> <ul style="list-style-type: none"> <li>• Run the motor at a constant speed of 20 to 40% of the rated speed.</li> <li>• Change the autotuning parameter 2305 to ON.</li> </ul> <p>The drive:</p> <ul style="list-style-type: none"> <li>• Accelerates the motor.</li> <li>• Calculates values for proportional gain and integration time.</li> <li>• Changes parameters 2301 and 2302 to these values.</li> <li>• Resets 2305 to OFF.</li> </ul>	<b>0=OFF, 1=ON</b>

## Group 25: CRITICAL SPEEDS

This group defines up to three critical speeds or ranges of speeds that are to be avoided due, for example, to mechanical resonance problems at certain speeds.

Code	Description	Range
2501	<p><b>CRIT SPEED SEL</b></p> <p>Sets the critical speeds function on or off. The critical speed function avoids specific speed ranges.</p> <p>0 = OFF – Disables the critical speeds function.</p> <p>1 = ON – Enables the critical speeds function.</p> <p><b>Example:</b> To avoid speeds at which a fan system vibrates badly:</p> <ul style="list-style-type: none"> <li>• Determine problem speed ranges. Assume they are found to be 18...23 Hz and 46...52 Hz.</li> <li>• Set 2501 CRIT SPEED SEL = 1.</li> <li>• Set 2502 CRIT SPEED 1 LO = 18 Hz.</li> <li>• Set 2503 CRIT SPEED 1 HI = 23 Hz.</li> <li>• Set 2504 CRIT SPEED 2 LO = 46 Hz.</li> <li>• Set 2505 CRIT SPEED 2 HI = 52 Hz.</li> </ul>	<b>0=OFF, 1=ON</b>
	<p>The graph plots <math>f_{output}</math> on the vertical axis against <math>f_{REF}</math> (Hz) on the horizontal axis. A diagonal line represents the linear relationship between the two frequencies. Two horizontal segments are shown where the output frequency is constant, representing critical speed ranges. The first range is between <math>f_{1L} = 18</math> Hz and <math>f_{1H} = 23</math> Hz, with the output frequency constant at 18 Hz. The second range is between <math>f_{2L} = 46</math> Hz and <math>f_{2H} = 52</math> Hz, with the output frequency constant at 46 Hz. Dashed lines connect the critical speed values on the x-axis to the corresponding points on the graph.</p>	
2502	<p><b>CRIT SPEED 1 LO</b></p> <p>Sets the minimum limit for critical speed range 1.</p> <ul style="list-style-type: none"> <li>• The value must be less than or equal to 2503 CRIT SPEED 1 HI.</li> <li>• Units are rpm, unless 9904 MOTOR CTRL MODE = 3 (SCALAR:FREQ), in which case units are Hz.</li> </ul>	<b>0...30000 rpm / 0...500 Hz</b>
2503	<p><b>CRIT SPEED 1 HI</b></p> <p>Sets the maximum limit for critical speed range 1.</p> <ul style="list-style-type: none"> <li>• The value must be greater than or equal to 2502 CRIT SPEED 1 LO.</li> <li>• Units are rpm, unless 9904 MOTOR CTRL MODE = 3 (SCALAR:FREQ), in which case units are Hz.</li> </ul>	<b>0...30000 rpm / 0...500 Hz</b>



Code	Description	Range
2504	<b>CRIT SPEED 2 LO</b>  Sets the minimum limit for critical speed range 2. • See parameter 2502.	<b>0...30000 rpm / 0...500 Hz</b>
2505	<b>CRIT SPEED 2 HI</b>  Sets the maximum limit for critical speed range 2. • See parameter 2503.	<b>0...30000 rpm / 0...500 Hz</b>
2506	<b>CRIT SPEED 3 LO</b>  Sets the minimum limit for critical speed range 3. • See parameter 2502.	<b>0...30000 rpm / 0...500 Hz</b>
2507	<b>CRIT SPEED 3 HI</b>  Sets the maximum limit for critical speed range 3. • See parameter 2503.	<b>0...30000 rpm / 0...500 Hz</b>

## Group 26: MOTOR CONTROL

This group defines variables used for motor control.

Code	Description	Range
2601	<p><b>FLUX OPT ENABLE</b></p> <p>Changes the magnitude of the flux depending on the actual load. Flux Optimization can reduce the total energy consumption and noise, and it should be enabled for drives that usually operate below nominal load.</p> <p>0 = OFF – Disables the feature. 1 = ON – Enables the feature.</p>	<b>0=OFF, 1=ON</b>
2602	<p><b>FLUX BRAKING</b></p> <p>Provides faster deceleration by raising the level of magnetisation in the motor when needed, instead of limiting the deceleration ramp. By increasing the flux in the motor, the energy of the mechanical system is changed to thermal energy in the motor.</p> <ul style="list-style-type: none"> <li>The flux braking works in vector control mode only, i.e. when parameter 9904 MOTOR CTRL MODE = 1 (VECTOR:SPEED).</li> </ul> <p>0 = OFF – Disables the feature. 1 = ON – Enables the feature.</p> <div style="text-align: center;"> <p>Braking torque (%)</p> <p>Rated motor power</p> <ul style="list-style-type: none"> <li>① 2.2 kW</li> <li>② 15 kW</li> <li>③ 37 kW</li> <li>④ 75 kW</li> <li>⑤ 250 kW</li> </ul> <p>f (Hz)</p> </div>	<b>0=OFF, 1=ON</b>

Code	Description	Range																		
2603	<p><b>IR COMP VOLT</b></p> <p>Sets the IR compensation voltage used for 0 Hz.</p> <ul style="list-style-type: none"> <li>Requires parameter 9904 MOTOR CTRL MODE = 3 (SCALAR:FREQ).</li> <li>Keep IR compensation as low as possible to prevent overheating.</li> <li>Typical IR compensation values are:</li> </ul> <table border="1"> <thead> <tr> <th colspan="6">380...480 V drives</th> </tr> <tr> <th><math>P_N</math> (kW)</th> <td>3</td> <td>7.5</td> <td>15</td> <td>37</td> <td>132</td> </tr> <tr> <th>IR comp (V)</th> <td>21</td> <td>18</td> <td>15</td> <td>10</td> <td>4</td> </tr> </thead></table> <ul style="list-style-type: none"> <li>When enabled, IR compensation provides an extra voltage boost to the motor at low speeds. Use IR compensation, for example, in applications that require a high breakaway torque.</li> </ul>	380...480 V drives						$P_N$ (kW)	3	7.5	15	37	132	IR comp (V)	21	18	15	10	4	0...100 V
380...480 V drives																				
$P_N$ (kW)	3	7.5	15	37	132															
IR comp (V)	21	18	15	10	4															
2604	<p><b>IR COMP FREQ</b></p> <p>Sets the frequency at which IR compensation is 0 V (in % of motor frequency).</p>	0...100%																		
2605	<p><b>U/F RATIO</b></p> <p>Selects the form for the <math>U/f</math> (voltage to frequency) ratio below field weakening point.</p> <p>1 = LINEAR – Preferred for constant torque applications.                  2 = SQUARED – Preferred for centrifugal pump and fan applications.                  (SQUARED is more silent for most operating frequencies.)</p>	1=LINEAR, 2=SQUARED																		

Code	Description	Range																								
2606	<p><b>SWITCHING FREQ</b></p> <p>Sets the switching frequency for the drive.</p> <ul style="list-style-type: none"> <li>Higher switching frequencies mean less noise.</li> <li>In multimotor systems, do not change the switching frequency from the default value.</li> <li>12 kHz switching frequency is available in scalar control mode, that is when parameter 9904 MOTOR CTRL MODE = 3 (SCALAR:FREQ).</li> <li>See the availability of switching frequencies for different drive types in the table below:</li> </ul> <table border="1"> <thead> <tr> <th>Power (kW)</th> <th>1 kHz</th> <th>2 kHz</th> <th>4 kHz</th> <th>8 kHz</th> <th>12 kHz*</th> </tr> </thead> <tbody> <tr> <td>0.75...37</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> </tr> <tr> <td>45...110</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>-</td> </tr> <tr> <td>132...160</td> <td>x</td> <td>x</td> <td>x</td> <td>-</td> <td>-</td> </tr> </tbody> </table> <p>* 12 kHz only in scalar control mode</p>	Power (kW)	1 kHz	2 kHz	4 kHz	8 kHz	12 kHz*	0.75...37	x	x	x	x	x	45...110	x	x	x	x	-	132...160	x	x	x	-	-	<p><b>1, 2, 4, 8, 12 kHz</b></p>
Power (kW)	1 kHz	2 kHz	4 kHz	8 kHz	12 kHz*																					
0.75...37	x	x	x	x	x																					
45...110	x	x	x	x	-																					
132...160	x	x	x	-	-																					
2607	<p><b>SWITCH FREQ CTRL</b></p> <p>Activates the switching frequency control. When active, the selection of parameter 2606 SWITCHING FREQ is limited when the drive internal temperature increases. See the figure below. This function allows the highest possible switching frequency at a specific operating point. Higher switching frequency results in lower acoustic noise.</p> <ul style="list-style-type: none"> <li>In multimotor systems, do not disable (set OFF) the function.</li> </ul> <p>0 = OFF – The function is disabled. 1 = ON – The switching frequency is limited according to the figure.</p> <p>The graph plots the switching frequency limit (<math>f_{sw}</math> limit) in kHz on the y-axis against Drive temperature (<math>T</math>) in °C on the x-axis. The y-axis has markers at 4 kHz, 8 kHz, and 12 kHz. The x-axis has markers at 80 °C, 90 °C, and 100 °C. A solid line represents the limit: it is constant at 12 kHz for 0.75...37 kW until 80 °C, then decreases linearly to 4 kHz at 100 °C for 45...110 kW. For 132...160 kW, the limit is constant at 4 kHz. Dashed lines indicate the 8 kHz and 4 kHz levels on the y-axis and the 80 °C, 90 °C, and 100 °C levels on the x-axis.</p>	<p><b>0=OFF, 1=ON</b></p>																								
2608	<p><b>SLIP COMP RATIO</b></p> <p>Sets gain for slip compensation (in %).</p> <ul style="list-style-type: none"> <li>A squirrel-cage motor slips under load. Increasing the frequency as the motor torque increases compensates for the slip.</li> <li>Requires parameter 9904 MOTOR CTRL MODE = 3 (SCALAR:FREQ).</li> </ul> <p>0 – No slip compensation. 1...200 – Increasing slip compensation. 100% means full slip compensation.</p>	<p><b>0...200%</b></p>																								

<b>Code</b>	<b>Description</b>	<b>Range</b>
2609	<b>NOISE SMOOTHING</b> This parameter introduces a random component to the switching frequency. Noise smoothing distributes the acoustic motor noise over a range of frequencies instead of a single tonal frequency resulting in lower peak noise intensity. The random component has an average of 0 Hz. It is added to the switching frequency set by parameter 2606 SWITCHING FREQ. This parameter has no effect if parameter 2606 = 12 kHz. 0 = DISABLE 1 = ENABLE.	<b>0=DISABLE, 1=ENABLE</b>
2619	<b>DC STABILIZER</b> Enables or disables the DC voltage stabilizer. The DC stabilizer is used in scalar control mode to prevent possible voltage oscillations in the drive DC bus caused by motor load or weak supply network. In case of voltage variation the drive tunes the frequency reference to stabilize the DC bus voltage and therefore the load torque oscillation. 0 = DISABLE – Disables DC stabilizer. 1 = ENABLE – Enables DC stabilizer.	<b>0=DISABLE, 1=ENABLE</b>
2625	<b>OVERMODULATION</b> Enables or disables overmodulation. Disabling overmodulation can help in some applications in field weakening area. 0 = DISABLE – Disables overmodulation (default). 1 = ENABLE – Enables overmodulation.	<b>0=DISABLE, 1=ENABLE</b>

## Group 29: MAINTENANCE TRIG



This group defines usage levels and trigger points. When usage reaches the set trigger point, a notice displayed on the control panel (operator keypad) signals that maintenance is due.

Code	Description	Range
2901	<b>COOLING FAN TRIG</b> Sets the trigger point for the drive's cooling fan counter. <ul style="list-style-type: none"> <li>Value is compared to parameter 2902 value.</li> </ul> 0.0 – Disables the trigger.	<b>0.0...6553.5 kh</b>
2902	<b>COOLING FAN ACT</b> Defines the actual value of the drive's cooling fan counter. <ul style="list-style-type: none"> <li>When parameter 2901 has been set to a non-zero value, the counter starts.</li> <li>When the actual value of the counter exceeds the value defined by parameter 2901, a maintenance notice is displayed on the panel.</li> </ul> 0.0 – Resets the parameter.	<b>0.0...6553.5 kh</b>
2903	<b>REVOLUTION TRIG</b> Sets the trigger point for the motor's accumulated revolutions counter. <ul style="list-style-type: none"> <li>Value is compared to parameter 2904 value.</li> </ul> 0 – Disables the trigger.	<b>0...65535 Mrev</b>
2904	<b>REVOLUTION ACT</b> Defines the actual value of the motor's accumulated revolutions counter. <ul style="list-style-type: none"> <li>When parameter 2903 has been set to a non-zero value, the counter starts.</li> <li>When the actual value of the counter exceeds the value defined by parameter 2903, a maintenance notice is displayed on the panel.</li> </ul> 0 – Resets the parameter.	<b>0...6553 Mrev</b>
2905	<b>RUN TIME TRIG</b> Sets the trigger point for the drive's run time counter. <ul style="list-style-type: none"> <li>Value is compared to parameter 2906 value.</li> </ul> 0.0 – Disables the trigger.	<b>0.0...6553.5 kh</b>
2906	<b>RUN TIME ACT</b> <ul style="list-style-type: none"> <li>When parameter 2905 has been set to a non-zero value, the counter starts.</li> <li>When the actual value of the counter exceeds the value defined by parameter 2905, a maintenance notice is displayed on the panel.</li> </ul> Defines the actual value of the drive's run time counter. 0.0 – Resets the parameter.	<b>0.0...6553.5 kh</b>

Code	Description	Range
2907	<p><b>USER MWh TRIG</b></p> <p>Sets the trigger point for the drive's accumulated power consumption (in megawatt hours) counter.</p> <ul style="list-style-type: none"> <li>• Value is compared to parameter 2908 value.</li> </ul> <p>0.0 – Disables the trigger.</p>	<b>0.0...6553.5 MWh</b>
2908	<p><b>USER MWh ACT</b></p> <p>Defines the actual value of the drive's accumulated power consumption (in megawatt hours) counter.</p> <ul style="list-style-type: none"> <li>• When parameter 2907 has been set to a non-zero value, the counter starts.</li> <li>• When the actual value of the counter exceeds the value defined by parameter 2907, a maintenance notice is displayed on the panel.</li> </ul> <p>0.0 – Resets the parameter.</p>	<b>0.0...6553.5 MWh</b>

## Group 30: FAULT FUNCTIONS

This group defines situations that the drive should recognise as potential faults and how the drive should respond if the fault is detected.


Code	Description	Range
3001	<p><b>AI&lt;MIN FUNCTION</b></p> <p>Defines the drive response if the analogue input (AI) signal drops below the fault limits and AI is used:</p> <ul style="list-style-type: none"> <li>• as the active reference source (<i>Group 11: REFERENCE SELECT</i>)</li> <li>• as the Process or External PID controllers' feedback or setpoint source (<i>Group 40: PROCESS PID SET 1</i>, <i>Group 41: PROCESS PID SET 2</i> or <i>Group 42: EXT / TRIM PID</i>) and the corresponding PID controller is active.</li> </ul> <p>3021 AI1 FAULT LIMIT and 3022 AI2 FAULT LIMIT set the minimum limits.            0 = NOT SEL – No response.            1 = FAULT – Displays a fault (7, AI1 LOSS or 8, AI2 LOSS) and the drive coasts to stop.            2 = CONST SP 7 – Displays an alarm (2006, AI1 LOSS or 2007, AI2 LOSS) and sets the speed using 1208 CONST SPEED 7.            3 = LAST SPEED – Displays an alarm (2006, AI1 LOSS or 2007, AI2 LOSS) and sets the speed using the last operating level. This value is the average speed over the last 10 seconds.</p> <p> <b>WARNING!</b> If you select CONST SP 7 or LAST SPEED, make sure that continued operation is safe when the analogue input signal is lost.</p>	0...3
3002	<p><b>PANEL COMM ERR</b></p> <p>Defines the drive response to a control panel (operator keypad) communication error.</p> <p>1 = FAULT – Displays a fault (10, PANEL LOSS) and the drive coasts to stop.            2 = CONST SP 7 – Displays an alarm (2008, PANEL LOSS) and sets the speed using 1208 CONST SPEED 7.            3 = LAST SPEED – Displays an alarm (2008, PANEL LOSS) and sets the speed using the last operating level. This value is the average speed over the last 10 seconds.</p> <p> <b>WARNING!</b> If you select CONST SP 7 or LAST SPEED, make sure that continued operation is safe when the control panel communication is lost.</p>	1...3



Code	Description	Range
3003	<b>EXTERNAL FAULT 1</b> Defines the External Fault 1 signal input and the drive response to an external fault. 0 = NOT SEL – External fault signal is not used. 1 = DI1 – Defines digital input DI1 as the external fault input. • Activating the digital input indicates a fault. The drive displays a fault (14, EXT FAULT 1) and the drive coasts to stop. 2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the external fault input. • See DI1 above. -1 = DI1(INV) – Defines an inverted digital input DI1 as the external fault input. • De-activating the digital input indicates a fault. The drive displays a fault (14, EXT FAULT 1) and the drive coasts to stop. -2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the external fault input. • See DI1(INV) above.	<b>-6...6</b>
3004	<b>EXTERNAL FAULT 2</b> Defines the External Fault 2 signal input and the drive response to an external fault. • See parameter 3003 above.	<b>-6...6</b>
3005	<b>MOT THERM PROT</b> Defines the drive response to motor overheating. 0 = NOT SEL – No response and/or motor thermal protection not set up. 1 = FAULT – Displays an alarm (2010, MOTOR TEMP) when the calculated motor temperature exceeds 90 °C. Displays a fault (9, MOT OVERTEMP) and the drive coasts to stop when the calculated motor temperature exceeds 110 °C. 2 = ALARM – Displays an alarm (2010, MOTOR TEMP) when the calculated motor temperature exceeds 90 °C.	<b>0...2</b>

Code	Description	Range
3006	<p><b>MOT THERM TIME</b></p> <p>Sets the motor thermal time constant for the motor temperature model.</p> <ul style="list-style-type: none"> <li>• This is the time required for the motor to reach 63% of the final temperature with steady load.</li> <li>• For thermal protection according to UL requirements for NEMA class motors, use the rule of thumb: MOTOR THERM TIME equals 35 times <math>t_6</math>, where <math>t_6</math> (in seconds) is specified by the motor manufacturer as the time that the motor can safely operate at six times its rated current.</li> <li>• The thermal time for a Class 10 trip curve is 350 s, for a Class 20 trip curve 700 s, and for a Class 30 trip curve 1050 s.</li> </ul> <div data-bbox="514 584 1204 1003" style="text-align: center;"> <p>The figure consists of two vertically aligned graphs sharing a common horizontal time axis labeled 't'. The top graph shows 'Motor load' on the vertical axis, with a rectangular pulse of constant height. The bottom graph shows 'Temp. rise' on the vertical axis. The temperature rise curve starts at zero, rises to a peak of 100% (indicated by a dashed horizontal line), and then decays back towards zero. A dashed vertical line is drawn from the start of the load pulse down to the 63% mark on the temperature rise curve. A horizontal dashed line is drawn from the 63% mark on the temperature rise curve to the vertical axis. A double-headed arrow on the time axis indicates the time interval from the start of the load pulse to the 63% mark, labeled 'P 3006'.</p> </div>	256...9999 s

Code	Description	Range
3007	<p><b>MOT LOAD CURVE</b></p> <p>Sets the maximum allowable operating load of the motor.</p> <ul style="list-style-type: none"> <li>• With the default value 100%, motor overload protection is functioning when the constant current exceeds 127% of the parameter 9906 MOTOR NOM CURR value.</li> <li>• The default overloadability is at the same level as what motor manufacturers typically allow below 30 °C (86 °F) ambient temperature and below 1000 m (3300 ft) altitude. When the ambient temperature exceeds 30 °C (86 °F) or the installation altitude is over 1000 m (3300 ft), decrease the parameter 3007 value according to the motor manufacturer's recommendation.</li> </ul> <p><b>Example:</b> If the constant protection level needs to be 115% of the motor nominal current, set parameter 3007 value to 91% (= <math>115/127 \cdot 100\%</math>).</p>	50...150%
3008	<p><b>ZERO SPEED LOAD</b></p> <p>Sets the maximum allowable current at zero speed.</p> <ul style="list-style-type: none"> <li>• Value is relative to 9906 MOTOR NOM CURR.</li> </ul>	25...150%
3009	<p><b>BREAK POINT FREQ</b></p> <p>Sets the break point frequency for the motor load curve.</p> <p><b>Example:</b> Thermal protection trip times when parameters 3006 MOT THERM TIME, 3007 MOT LOAD CURVE and 3008 ZERO SPEED LOAD have default values.</p>	1...250 Hz

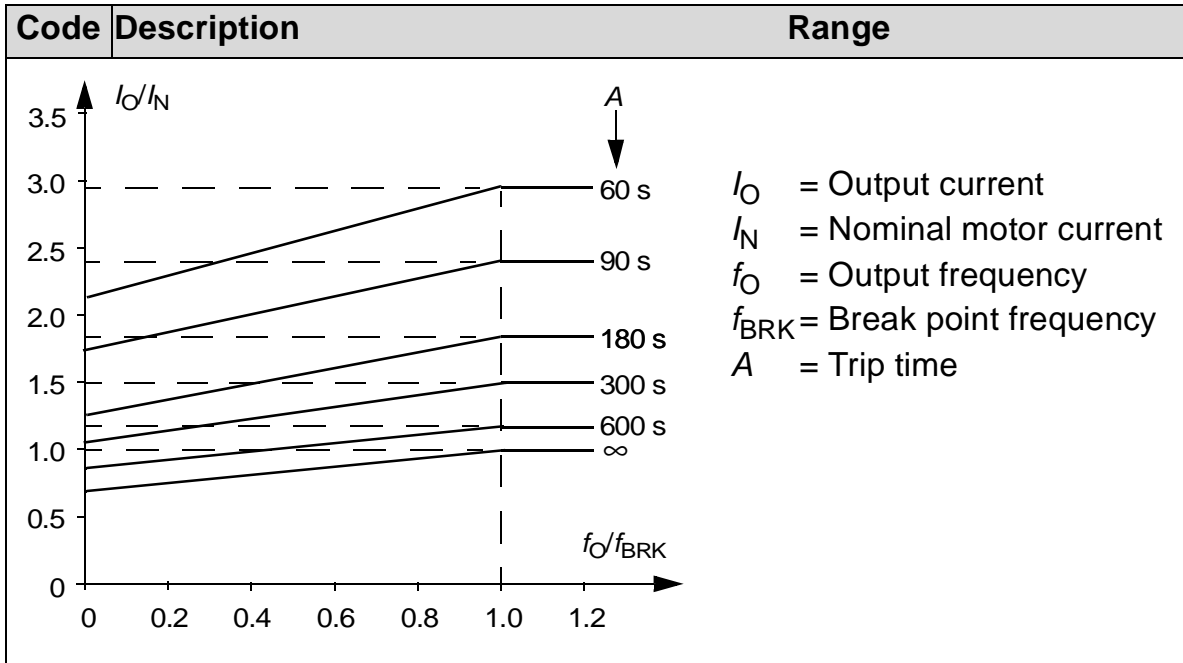

**3010 STALL FUNCTION 0...2**

This parameter defines the operation of the Stall function. This protection is active if the drive operates in the stall region (see the figure) for the time defined by 3012 STALL TIME. The “User limit” is defined in scalar mode by 2003 MAX CURRENT in [Group 20: LIMITS](#), and in vector mode by 2017 MAX TORQUE 1 and 2018 MAX TORQUE 2, or the limit on the COMM input.


0 = NOT SEL – Stall protection is not used.

1 = FAULT – When the drive operates in the stall region for the time set by 3012 STALL TIME:

- The drive coasts to stop.
- A fault indication is displayed.

2 = ALARM – When the drive operates in the stall region for the time set by 3012 STALL TIME:

- An alarm indication is displayed.
- The alarm disappears when the drive is out of the stall region for half the time set by parameter 3012 STALL TIME.


Code	Description	Range
3011	<b>STALL FREQUENCY</b> This parameter sets the frequency value for the Stall function. See the figure for parameter 3010.	<b>0.5...50 Hz</b>
3012	<b>STALL TIME</b> This parameter sets the time value for the Stall function.	<b>10...400 s</b>
3017	<b>EARTH FAULT</b> Defines the drive response if the drive detects an ground (earth) fault in the motor or motor cables. See also parameter 3023 WIRING FAULT and 3028 EARTH FAULT LVL. <b>Note:</b> Disabling earth fault may void the warranty. 0 = DISABLE – No response 1 = ENABLE – Displays a fault (16, EARTH FAULT) and the drive coasts to stop.	<b>0=DISABLE, 1=ENABLE</b>
3018	<b>COMM FAULT FUNC</b> Defines the drive response if the fieldbus communication is lost. 0 = NOT SEL – No response 1 = FAULT – Displays a fault (28, SERIAL 1 ERR) and the drive coasts to stop. 2 = CONST SP 7 – Displays an alarm (2005, IO COMM) and sets the speed using 1208 CONST SPEED 7. This “alarm speed” remains active until the fieldbus writes a new reference value. 3 = LAST SPEED – Displays an alarm (2005, IO COMM) and sets the speed using the last operating level. This value is the average speed over the last 10 seconds. This “alarm speed” remains active until the fieldbus writes a new reference value.  <b>WARNING!</b> If you select CONST SP7, or LAST SPEED, make sure that continued operation is safe when the fieldbus communication is lost.	<b>0...3</b>
3019	<b>COMM FAULT TIME</b> Sets the communication fault time used with 3018 COMM FAULT FUNC. • Brief interruptions in the fieldbus communication are not treated as faults if they are less than the COMM FAULT TIME value.	<b>0...600.0 s</b>
3021	<b>AI1 FAULT LIMIT</b> Sets a fault level for analogue input 1. See 3001 AI<MIN FUNCTION.	<b>0...100%</b>
3022	<b>AI2 FAULT LIMIT</b> Sets a fault level for analogue input 2. See 3001 AI<MIN FUNCTION.	<b>0...100%</b>

Code	Description	Range
3023	<p><b>WIRING FAULT</b></p> <p>Defines the drive response to cross wiring faults and to ground (earth) faults detected when the drive is NOT running. When the drive is not running, it monitors for:</p> <ul style="list-style-type: none"> <li>• Improper connections of input power to the drive output (the drive can display fault 35, OUPW WIRING if improper connections are detected).</li> <li>• Earth faults (the drive can display fault 16, EARTH FAULT if an earth fault is detected). Also, see parameter 3017 EARTH FAULT.</li> </ul> <p><b>Note:</b> Disabling wiring fault (earth fault) may void the warranty.  0 = DISABLE – No response to either of the above monitoring results.  1 = ENABLE – Displays a fault when this monitoring detects problems.</p>	<b>0=DISABLE, 1=ENABLE</b>
3024	<p><b>CB TEMP FAULT</b></p> <p>Defines the drive response to control board overheating. Not for drives with an OMIO control board.</p> <p>0 = DISABLE – No response  1 = ENABLE – Displays a fault (37, CB OVERTEMP) and the drive coasts to stop.</p>	<b>0=DISABLE, 1=ENABLE</b>
3028	<p><b>EARTH FAULT LVL</b></p> <p>Defines detection level for ground (earth) fault. See <a href="#">Correcting faults</a>, fault 16 EARTH FAULT.</p> <p><b>Note:</b> Parameter 3017 EARTH FAULT has to be enabled.</p> <p>1 = LOW – Low level leakage current, high sensitivity. The drive trips to low ground (earth) leakage current (default in the USA software version).  2 = MEDIUM – Medium sensitivity to ground (earth) fault current (default in the European software version).  3 = HIGH – High level leakage current, low sensitivity. The drive trips to higher ground (earth) leakage current.</p>	<b>1=LOW, 2=MEDIUM, 3=HIGH</b>

## Group 31: AUTOMATIC RESET

This group defines conditions for automatic resets. An automatic reset occurs after a particular fault is detected. The drive holds for a set delay time and then restarts automatically. You can limit the number of resets in a specified time period, and you can set up automatic resets for a variety of faults.

Code	Description	Range
3101	<p><b>NUMBER OF TRIALS</b></p> <p>Sets the number of allowed automatic resets within a trial period defined by 3102 TRIAL TIME.</p> <ul style="list-style-type: none"> <li>If the number of automatic resets exceeds this limit (within the trial time), the drive prevents additional automatic resets and remains stopped.</li> <li>Starting then requires a successful reset performed from the control panel (operator keypad) or from a source selected by 1604 FAULT RESET SEL.</li> </ul> <p><b>Example:</b> Three faults have occurred in the trial time. The last is reset only if the value for 3101 NUMBER OF TRIALS is 3 or more.</p> <div style="text-align: center;"> <p>x = Automatic reset</p> </div>	<b>0...5</b>
3102	<p><b>TRIAL TIME</b></p> <p>Sets the time period used for counting and limiting the number of resets.</p> <ul style="list-style-type: none"> <li>See 3101 NUMBER OF TRIALS.</li> </ul>	<b>1.0...600.0 s</b>
3103	<p><b>DELAY TIME</b></p> <p>Sets the delay time between a fault detection and attempted drive restart.</p> <ul style="list-style-type: none"> <li>If DELAY TIME = zero, the drive resets immediately.</li> </ul>	<b>0.0...120.0 s</b>
3104	<p><b>AR OVERCURRENT</b></p> <p>Sets the automatic reset for the overcurrent function on or off.</p> <p>0 = DISABLE – Disables automatic reset. 1 = ENABLE – Enables automatic reset.</p> <ul style="list-style-type: none"> <li>Automatically resets the fault (OVERCURRENT) after the delay set by 3103 DELAY TIME, and the drive resumes normal operation.</li> </ul>	<b>0=DISABLE, 1=ENABLE</b>
3105	<p><b>AR OVERVOLTAGE</b></p> <p>Sets the automatic reset for the overvoltage function on or off.</p> <p>0 = DISABLE – Disables automatic reset. 1 = ENABLE – Enables automatic reset.</p> <ul style="list-style-type: none"> <li>Automatically resets the fault (DC OVERVOLT) after the delay set by 3103 DELAY TIME, and the drive resumes normal operation.</li> </ul>	<b>0=DISABLE, 1=ENABLE</b>



Code	Description	Range
3106	<p><b>AR UNDERVOLTAGE</b></p> <p>Sets the automatic reset for the undervoltage function on or off.</p> <p>0 = DISABLE – Disables automatic reset.</p> <p>1 = ENABLE – Enables automatic reset.</p> <ul style="list-style-type: none"> <li>Automatically resets the fault (DC UNDERVOLT) after the delay set by 3103 DELAY TIME, and the drive resumes normal operation.</li> </ul>	<b>0=DISABLE, 1=ENABLE</b>
3107	<p><b>AR AI&lt;MIN</b></p> <p>Sets the automatic reset for the analogue input less than the minimum value function on or off.</p> <p>0 = DISABLE – Disables automatic reset.</p> <p>1 = ENABLE – Enables automatic reset.</p> <ul style="list-style-type: none"> <li>Automatically resets the fault (AI&lt;MIN) after the delay set by 3103 DELAY TIME, and the drive resumes normal operation.</li> </ul> <p> <b>WARNING!</b> When the analogue input signal is restored, the drive may restart, even after a long stop. Make sure that automatic, long delayed starts will not cause physical injury and/or damage equipment.</p>	<b>0=DISABLE, 1=ENABLE</b>
3108	<p><b>AR EXTERNAL FLT</b></p> <p>Sets the automatic reset for external faults function on or off.</p> <p>0 = DISABLE – Disables automatic reset.</p> <p>1 = ENABLE – Enables automatic reset.</p> <ul style="list-style-type: none"> <li>Automatically resets the fault (EXT FAULT 1 or EXT FAULT 2) after the delay set by 3103 DELAY TIME, and the drive resumes normal operation.</li> </ul>	<b>0=DISABLE, 1=ENABLE</b>



## Group 32: SUPERVISION

This group defines supervision for up to three signals from [Group 01: OPERATING DATA](#). Supervision monitors a specified parameter and energises a relay output if the parameter passes a defined limit. Use [Group 14: RELAY OUTPUTS](#) to define the relay and whether the relay activates when the signal is too low or too high.

Code	Description	Range
3201	<p><b>SUPERV 1 PARAM</b></p> <p>Selects the first supervised parameter.</p> <ul style="list-style-type: none"> <li>• Must be a parameter number from <a href="#">Group 01: OPERATING DATA</a>.</li> <li>• 101...178 – Supervises parameter 0101...0178.</li> <li>• If the supervised parameter passes a limit, a relay output is energised.</li> <li>• The supervision limits are defined in this group.</li> <li>• The relay outputs are defined in <a href="#">Group 14: RELAY OUTPUTS</a> (definition also specifies which supervision limit is monitored).</li> </ul> <p><b>LO ≤ HI</b></p> <p>Operating data supervision using relay outputs, when LO ≤ HI. See the figure on page <a href="#">254</a>.</p> <ul style="list-style-type: none"> <li>• Case A = Parameter 1401 RELAY OUTPUT 1 (or 1402 RELAY OUTPUT 2, etc.) value is SUPRV1 OVER or SUPRV2 OVER. Use for monitoring when/if the supervised signal exceeds a given limit. The relay remains active until the supervised value drops below the low limit.</li> <li>• Case B = Parameter 1401 RELAY OUTPUT 1 (or 1402 RELAY OUTPUT 2, etc.) value is SUPRV1 UNDER or SUPRV2 UNDER. Use for monitoring when/if the supervised signal falls below a given limit. The relay remains active until the supervised value rises above the high limit.</li> </ul> <p><b>LO &gt; HI</b></p> <p>Operating data supervision using relay outputs, when LO &gt; HI. See the figure on page <a href="#">254</a>.</p> <p>The lowest limit (HI 3203) is active initially, and remains active until the supervised parameter goes above the highest limit (LO 3202), making that limit the active limit. That limit remains active until the supervised parameter goes below the lowest limit (HI 3203), making that limit active.</p> <ul style="list-style-type: none"> <li>• Case A = Parameter 1401 RELAY OUTPUT 1 (or 1402 RELAY OUTPUT 2, etc.) value is SUPRV1 OVER or SUPRV2 OVER. Initially the relay is de-energised. It is energised whenever the supervised parameter goes above the active limit.</li> <li>• Case B = Parameter 1401 RELAY OUTPUT 1 (or 1402 RELAY OUTPUT 2, etc.) value is SUPRV1 UNDER or SUPRV2 UNDER. Initially the relay is energised. It is de-energised whenever the supervised parameter goes below the active limit.</li> </ul>	101...178

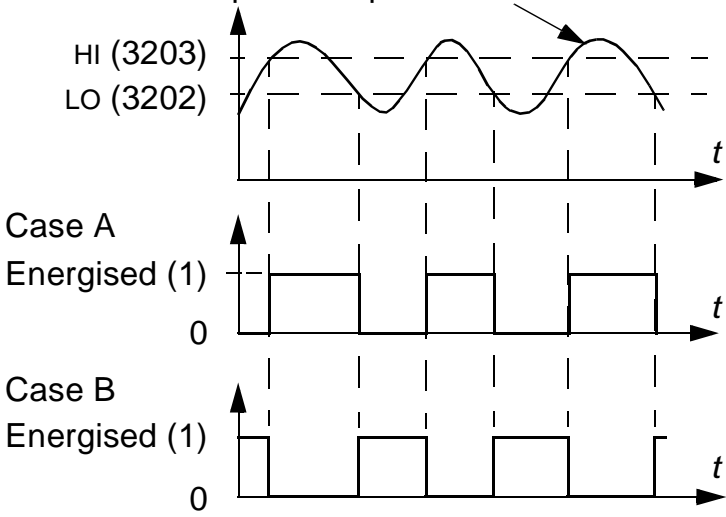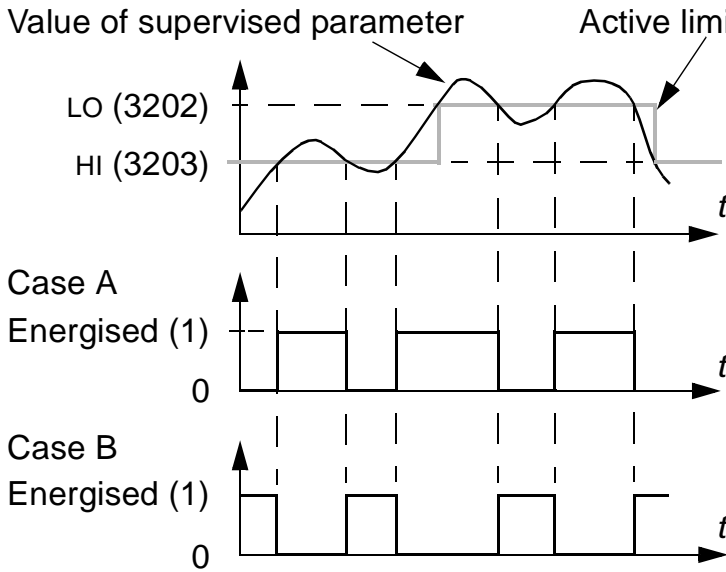Code	Description	Range
	<p><b>LO ≤ HI</b>  <b>Note:</b> Case LO ≤ HI represents a normal hysteresis.</p> <p>Value of supervised parameter</p>  <p>Case A Energised (1) 0</p> <p>Case B Energised (1) 0</p> <p><b>LO &gt; HI</b>  <b>Note:</b> Case LO &gt; HI represents a special hysteresis with two separate supervision limits.</p> <p>Value of supervised parameter      Active limit</p>  <p>Case A Energised (1) 0</p> <p>Case B Energised (1) 0</p>	
3202	<p><b>SUPERV 1 LIM LO</b></p> <p>Sets the low limit for the first supervised parameter. See 3201 SUPERV 1 PARAM above.</p>	-
3203	<p><b>SUPERV 1 LIM HI</b></p> <p>Sets the high limit for the first supervised parameter. See 3201 SUPERV 1 PARAM above.</p>	-
3204	<p><b>SUPERV 2 PARAM</b></p> <p>Selects the second supervised parameter. See 3201 SUPERV 1 PARAM above.</p>	101...178

<b>Code</b>	<b>Description</b>	<b>Range</b>
3205	<b>SUPERV 2 LIM LO</b> Sets the low limit for the second supervised parameter. See 3204 SUPERV 2 PARAM above.	-
3206	<b>SUPERV 2 LIM HI</b> Sets the high limit for the second supervised parameter. See 3204 SUPERV 2 PARAM above.	-
3207	<b>SUPERV 3 PARAM</b> Selects the third supervised parameter. See 3201 SUPERV 1 PARAM above.	<b>101...178</b>
3208	<b>SUPERV 3 LIM LO</b> Sets the low limit for the second supervised parameter. See 3207 SUPERV 3 PARAM above.	-
3209	<b>SUPERV 3 LIM HI</b> Sets the high limit for the third supervised parameter. See 3207 SUPERV 3 PARAM above.	-

### Group 33: INFORMATION

This group provides access to information about the drive's current programs: versions and test date.

Code	Description	Range
3301	<b>FIRMWARE</b> Contains the version of the drive's firmware.	<b>0000...FFFF hex</b>
3302	<b>LOADING PACKAGE</b> Contains the version of the loading package.	<b>0000...FFFF hex</b>
3303	<b>TEST DATE</b> Contains the test date (yy.ww).	<b>yy.ww</b>
3304	<b>DRIVE RATING</b> Indicates the drive's current and voltage rating. The format is XXXY, where: <ul style="list-style-type: none"> <li>• XXX = The nominal current rating of the drive in amperes. If present, an "A" indicates a decimal point in the rating for the current. For example XXX = 8A8 indicates a nominal current rating of 8.8 A.</li> <li>• Y = The voltage rating of the drive, where Y = 2 indicates a 208...240 V rating, and Y = 4 indicates a 380...480 V rating.</li> </ul>	<b>XXXY</b>
3305	<b>PARAMETER TABLE</b> Contains the version of the parameter table used in the drive.	<b>0000...FFFF hex</b>

### Group 34: PANEL DISPLAY

This group defines the content for control panel (operator keypad) display (centre area) when the control panel is in the Output mode.

Code	Description	Range
3401	<p><b>SIGNAL1 PARAM</b></p> <p>Selects the first parameter (by number) displayed on the control panel.</p> <ul style="list-style-type: none"> <li>Definitions in this group define the display content when the control panel is in the output mode.</li> <li>Any parameter number in <i>Group 01: OPERATING DATA</i> can be selected.</li> <li>Using the following parameters, the display value can be scaled, converted to convenient units, and/or displayed as a bar graph.</li> <li>The figure identifies selections made by parameters in this group.</li> </ul> <p>100 = NOT SELECTED – First parameter not displayed.                      101...178 – Displays parameter 0101...0178. If parameter does not exist, the display shows "n.a."</p>	100...178

Code	Description	Range																											
3402	<p><b>SIGNAL1 MIN</b></p> <p>Defines the minimum expected value for the first display parameter.</p> <ul style="list-style-type: none"> <li>Use parameters 3402, 3403, 3406, and 3407, for example to convert a group 01 parameter, such as 0102 SPEED (in rpm) to the speed of a conveyor driven by the motor (in ft/min). For such a conversion, the source values in the figure are the min. and max. motor speed, and the display values are the corresponding min. and max. conveyor speed.</li> <li>Use parameter 3405 to select the proper units for the display.</li> </ul> <p><b>Note:</b> Selecting units does not convert values. Parameter is not effective if parameter 3404 OUTPUT1 DSP FORM = 9 (DIRECT).</p>	-																											
3403	<p><b>SIGNAL1 MAX</b></p> <p>Defines the maximum expected value for the first display parameter.</p> <p><b>Note:</b> Parameter is not effective if parameter 3404 OUTPUT1 DSP FORM = 9 (DIRECT).</p>	-																											
3404	<p><b>OUTPUT1 DSP FORM</b></p> <p>Defines the decimal point location for the first display parameter.</p> <ul style="list-style-type: none"> <li>Enter the number of digits desired to the right of the decimal point.</li> <li>See the table for an example using pi (3.14159).</li> </ul> <table border="1"> <thead> <tr> <th>3404 Value</th> <th>Display</th> <th>Range</th> </tr> </thead> <tbody> <tr> <td>0</td> <td><math>\pm 3</math></td> <td rowspan="4">-32768...+32767 (Signed)</td> </tr> <tr> <td>1</td> <td><math>\pm 3.1</math></td> </tr> <tr> <td>2</td> <td><math>\pm 3.14</math></td> </tr> <tr> <td>3</td> <td><math>\pm 3.142</math></td> </tr> <tr> <td>4</td> <td>3</td> <td rowspan="4">0...65535 (Unsigned)</td> </tr> <tr> <td>5</td> <td>3.1</td> </tr> <tr> <td>6</td> <td>3.14</td> </tr> <tr> <td>7</td> <td>3.142</td> </tr> <tr> <td>8</td> <td colspan="2">Bar meter displayed.</td> </tr> <tr> <td>9</td> <td colspan="2">Direct value. Decimal point location and units of measure are identical to the source signal. <b>Note:</b> Parameters 3402, 3403 and 3405...3407 are not effective.</td> </tr> </tbody> </table>	3404 Value	Display	Range	0	$\pm 3$	-32768...+32767 (Signed)	1	$\pm 3.1$	2	$\pm 3.14$	3	$\pm 3.142$	4	3	0...65535 (Unsigned)	5	3.1	6	3.14	7	3.142	8	Bar meter displayed.		9	Direct value. Decimal point location and units of measure are identical to the source signal. <b>Note:</b> Parameters 3402, 3403 and 3405...3407 are not effective.		0...9
3404 Value	Display	Range																											
0	$\pm 3$	-32768...+32767 (Signed)																											
1	$\pm 3.1$																												
2	$\pm 3.14$																												
3	$\pm 3.142$																												
4	3	0...65535 (Unsigned)																											
5	3.1																												
6	3.14																												
7	3.142																												
8	Bar meter displayed.																												
9	Direct value. Decimal point location and units of measure are identical to the source signal. <b>Note:</b> Parameters 3402, 3403 and 3405...3407 are not effective.																												

Code	Description	Range
3405	<b>OUTPUT1 UNIT</b> Selects the units used for the first display parameter. <b>Note:</b> Parameter is not effective if parameter 3404 OUTPUT1 DSP FORM = 9 (DIRECT).	<b>0...127</b>
	0 = NO UNIT   9 = °C      18 = MWh   27 = ft      36 = l/s    45 = Pa    54 = lb/m   63 = Mrev 1 = A          10 = lb ft   19 = m/s   28 = MGD   37 = l/min   46 = GPS   55 = lb/h   64 = d 2 = V          11 = mA     20 = m <sup>3</sup> /h   29 = inHg   38 = l/h    47 = gal/s   56 = FPS   65 = inWC 3 = Hz        12 = mV     21 = dm <sup>3</sup> /s   30 = FPM   39 = m <sup>3</sup> /s   48 = gal/m   57 = ft/s   66 = m/min 4 = %        13 = kW     22 = bar    31 = kb/s   40 = m <sup>3</sup> /m   49 = gal/h   58 = inH <sub>2</sub> O   67 = Nm 5 = s         14 = W      23 = kPa    32 = kHz    41 = kg/s   50 = ft <sup>3</sup> /s   59 = in wg   68 = Km <sup>3</sup> /h 6 = h         15 = kWh    24 = GPM   33 = ohm    42 = kg/m   51 = ft <sup>3</sup> /m   60 = ft wg 7 = rpm      16 = °F     25 = PSI    34 = ppm    43 = kg/h   52 = ft <sup>3</sup> /h   61 = lbsi 8 = kh        17 = hp     26 = CFM   35 = pps    44 = mbar   53 = lb/s    62 = ms	
	The following units are useful for the bar display 117 = %ref   118 = %act   119 = %dev   120 = % LD   121 = % SP   122 = %FBK   123 = Iout   124 = Vout 125 = Fout   126 = Tout   127 = Vdc	
3406	<b>OUTPUT1 MIN</b> Sets the maximum value displayed for the first display parameter. <b>Note:</b> Parameter is not effective if parameter 3404 OUTPUT1 DSP FORM = 9 (DIRECT).	-
3407	<b>OUTPUT1 MAX</b> Sets the maximum value displayed for the first display parameter. <b>Note:</b> Parameter is not effective if parameter 3404 OUTPUT1 DSP FORM = 9 (DIRECT).	-
3408	<b>SIGNAL2 PARAM</b> Selects the second parameter (by number) displayed on the control panel. • See parameter 3401.	<b>100...178</b>
3409	<b>SIGNAL2 MIN</b> Defines the minimum expected value for the second display parameter. • See parameter 3402.	-
3410	<b>SIGNAL2 MAX</b> Defines the maximum expected value for the second display parameter. • See parameter 3403.	-
3411	<b>OUTPUT2 DSP FORM</b> Defines the decimal point location for the second display parameter. • See parameter 3404.	<b>0...9</b>
3412	<b>OUTPUT2 UNIT</b> Selects the units used for the second display parameter. • See parameter 3405.	<b>0...127</b>


Code	Description	Range
3413	<b>OUTPUT2 MIN</b> Sets the minimum value displayed for the second display parameter. • See parameter 3406.	-
3414	<b>OUTPUT2 MAX</b> Sets the maximum value displayed for the second display parameter. • See parameter 3407.	-
3415	<b>SIGNAL3 PARAM</b> Selects the third parameter (by number) displayed on the control panel. • See parameter 3401.	<b>100...178</b>
3416	<b>SSIGNAL3 MIN</b> • Defines the minimum expected value for the third display parameter. See parameter 3402.	-
3417	<b>SIGNAL3 MAX</b> Defines the maximum expected value for the third display parameter. • See parameter 3403.	-
3418	<b>OUTPUT3 DSP FORM</b> Defines the decimal point location for the third display parameter. • See parameter 3404.	<b>0...9</b>
3419	<b>OUTPUT3 UNIT</b> Selects the units used for the third display parameter. • See parameter 3405.	<b>0...127</b>
3420	<b>OUTPUT3 MIN</b> Sets the minimum value displayed for the third display parameter. • See parameter 3406.	-
3421	<b>OUTPUT3 MAX</b> Sets the maximum value displayed for the third display parameter. • See parameter 3407.	-




### Group 35: MOTOR TEMP MEAS

This group defines the detection and reporting for a particular potential fault – motor overheating, as detected by a temperature sensor. Typical connections are shown below.

One sensor

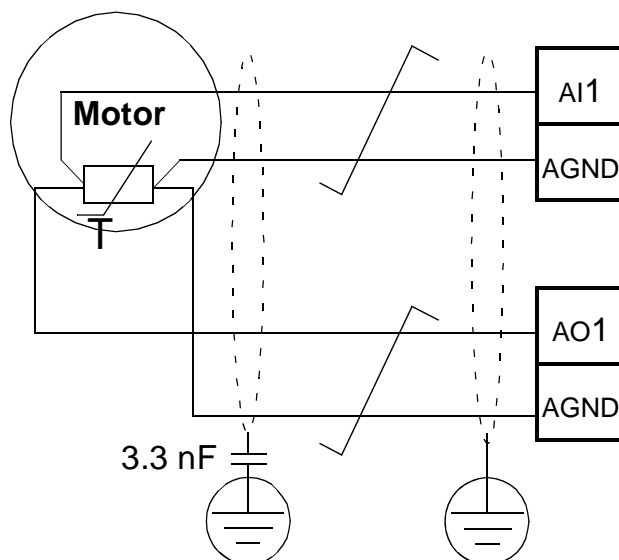

Three sensors

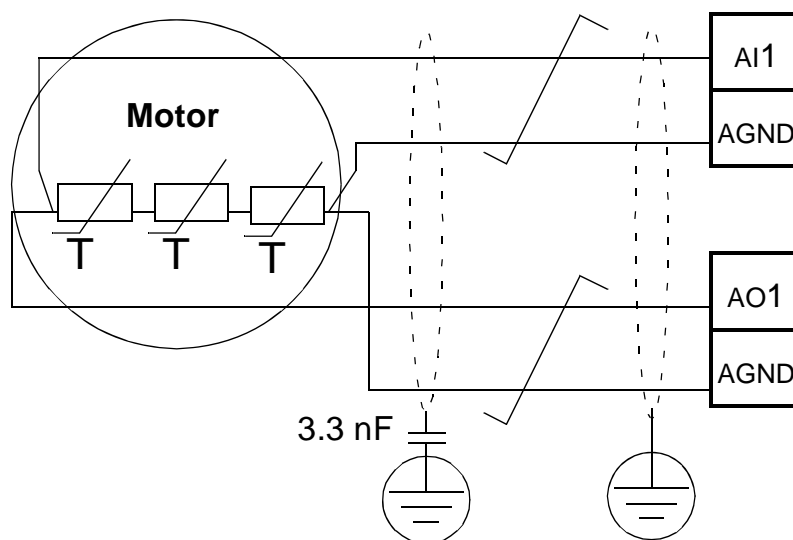


**WARNING!** IEC 60664 requires double or reinforced insulation between live parts and the surface of accessible parts of electrical equipment which are either non-conductive or conductive but not connected to the protective ground (earth).

To fulfil this requirement, connect a thermistor (and other similar components) to the drive's control terminals using any of these alternatives:


- Separate the thermistor from live parts of the motor with double reinforced insulation.
- Protect all circuits connected to the drive's digital and analogue inputs. Protect against contact, and insulate from other low voltage circuits with basic insulation (rated for the same voltage level as the drive's main circuit).
- Use an external thermistor relay. The relay insulation must be rated for the same voltage level as the drive's main circuit.

The figures below show thermistor relay and PTC sensor connections using a digital input. At the motor end, the cable shield should be grounded through, eg. a 3.3 nF capacitor. If this is not possible, leave the shield unconnected.

3501 SENSOR TYPE = 5 (THERM(0)) or 6 (THERM(1)) – Thermistor relay

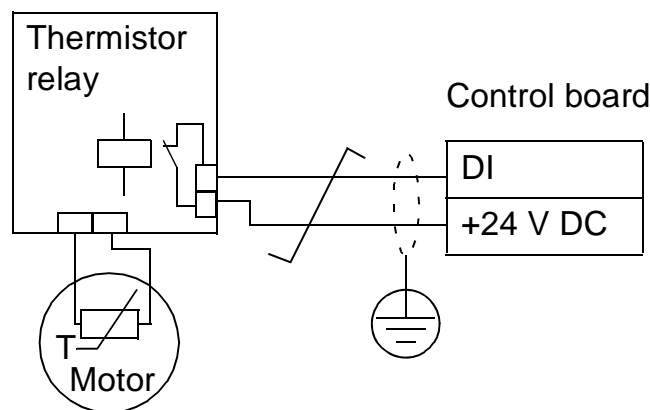

3501 SENSOR TYPE = 5 (THERM(0)) – PTC sensor

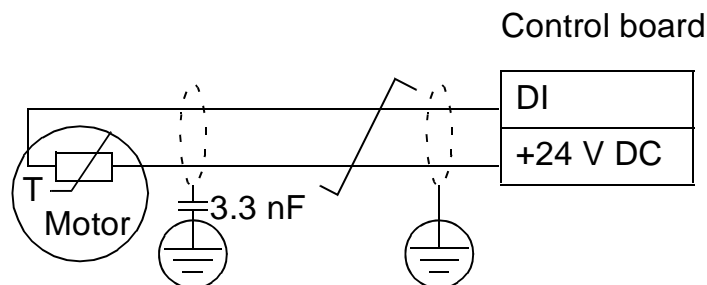

For other faults, or for anticipating motor overheating using a model, see [Group 30: FAULT FUNCTIONS](#).

Code	Description	Range
3501	<p><b>SENSOR TYPE</b></p> <p>Identifies the type of the motor temperature sensor used, PT100 (°C), PTC (ohms) or thermistor.</p> <p>See parameters 1501 AO1 CONTENT SEL and 1507 AO2 CONTENT SEL.</p> <p>0 = NONE</p> <p>1 = 1 x PT100 – Sensor configuration uses one PT100 sensor.</p> <ul style="list-style-type: none"> <li>• Analogue output AO1 or AO2 feeds constant current through the sensor.</li> <li>• The sensor resistance increases as the motor temperature rises, as does the voltage over the sensor.</li> <li>• The temperature measurement function reads the voltage through analogue input AI1 or AI2 and converts it to degrees Celsius.</li> </ul> <p>2 = 2 x PT100 – Sensor configuration uses two PT100 sensors.</p> <ul style="list-style-type: none"> <li>• Operation is the same as for above 1 x PT100.</li> </ul> <p>3 = 3 x PT100 – Sensor configuration uses three PT100 sensors.</p> <ul style="list-style-type: none"> <li>• Operation is the same as for above 1 x PT100.</li> </ul> <p>4 = PTC – Sensor configuration uses one PTC.</p> <ul style="list-style-type: none"> <li>• The analogue output feeds a constant current through the sensor.</li> <li>• The resistance of the sensor increases sharply as the motor temperature rises over the PTC reference temperature (<math>T_{ref}</math>), as does the voltage over the resistor. The temperature measurement function reads the voltage through analogue input AI1 and converts it into ohms.</li> <li>• The table below and the graph above show typical PTC sensor resistance as a function of the motor operating temperature.</li> </ul>	0...6

Excessive

Normal

T

Temperature	Resistance
Normal	< 1.5 kohm
Excessive	> 4 kohm


Code	Description	Range						
	<p>5 = THERM(0) – Sensor configuration uses a thermistor.</p> <ul style="list-style-type: none"> <li>• Motor thermal protection is activated through a digital input. Connect either a normally closed thermistor relay or a PTC sensor to a digital input.</li> <li>• When the digital input is '0', the motor is overheated.</li> <li>• See the connection figures on page 262.</li> <li>• The table below and the graph on page 263 show the resistance requirements for a PTC sensor connected between 24 V and digital input as a function of the motor operating temperature.</li> </ul> <table border="1" data-bbox="374 557 992 689"> <thead> <tr> <th>Temperature</th> <th>Resistance</th> </tr> </thead> <tbody> <tr> <td>Normal</td> <td>&lt; 3 kohm</td> </tr> <tr> <td>Excessive</td> <td>&gt; 28 kohm</td> </tr> </tbody> </table> <p>6 = THERM(1) – Sensor configuration uses a thermistor.</p> <ul style="list-style-type: none"> <li>• Motor thermal protection is activated through a digital input. Connect a normally open thermistor relay to a digital input.</li> <li>• When the digital input is '1', the motor is overheated.</li> <li>• See the connection figures on page 262.</li> </ul>	Temperature	Resistance	Normal	< 3 kohm	Excessive	> 28 kohm	
Temperature	Resistance							
Normal	< 3 kohm							
Excessive	> 28 kohm							
3502	<b>INPUT SELECTION</b>	<b>1...8</b>						
	<p>Defines the input used for the temperature sensor.</p> <p>1 = AI1 – PT100 and PTC  2 = AI2 – PT100 and PTC  3...8 = DI1...DI6 – Thermistor and PTC.</p>							
3503	<b>ALARM LIMIT</b>	<b>-10...200 °C</b>						
	<p>Defines the alarm limit for the motor temperature measurement.</p> <p>• At motor temperatures above this limit, the drive displays an alarm (2010, MOTOR TEMP)</p> <p>For thermistors or PTC connected to digital input:  0 – De-activated.  1 – Activated.</p>	<b>0...5000 ohm</b> <b>0...1</b>						
3504	<b>FAULT LIMIT</b>	<b>-10...200 °C</b>						
	<p>Defines the fault limit for the motor temperature measurement.</p> <p>• At motor temperatures above this limit, the drive displays a fault (9, MOT OVERTEMP) and stops the drive.</p> <p>For thermistors or PTC connected to digital input:  0 – De-activated.  1 – Activated.</p>	<b>0...5000 ohm</b> <b>0...1</b>						

### Group 36: TIMED FUNCTIONS


This group defines the timed functions. The timed functions include:

- four daily starts/stops
- four weekly starts/stops, overrides
- four timers for collecting selected periods together.

A timer can be connected to multiple time periods and a time period can be in multiple timers.

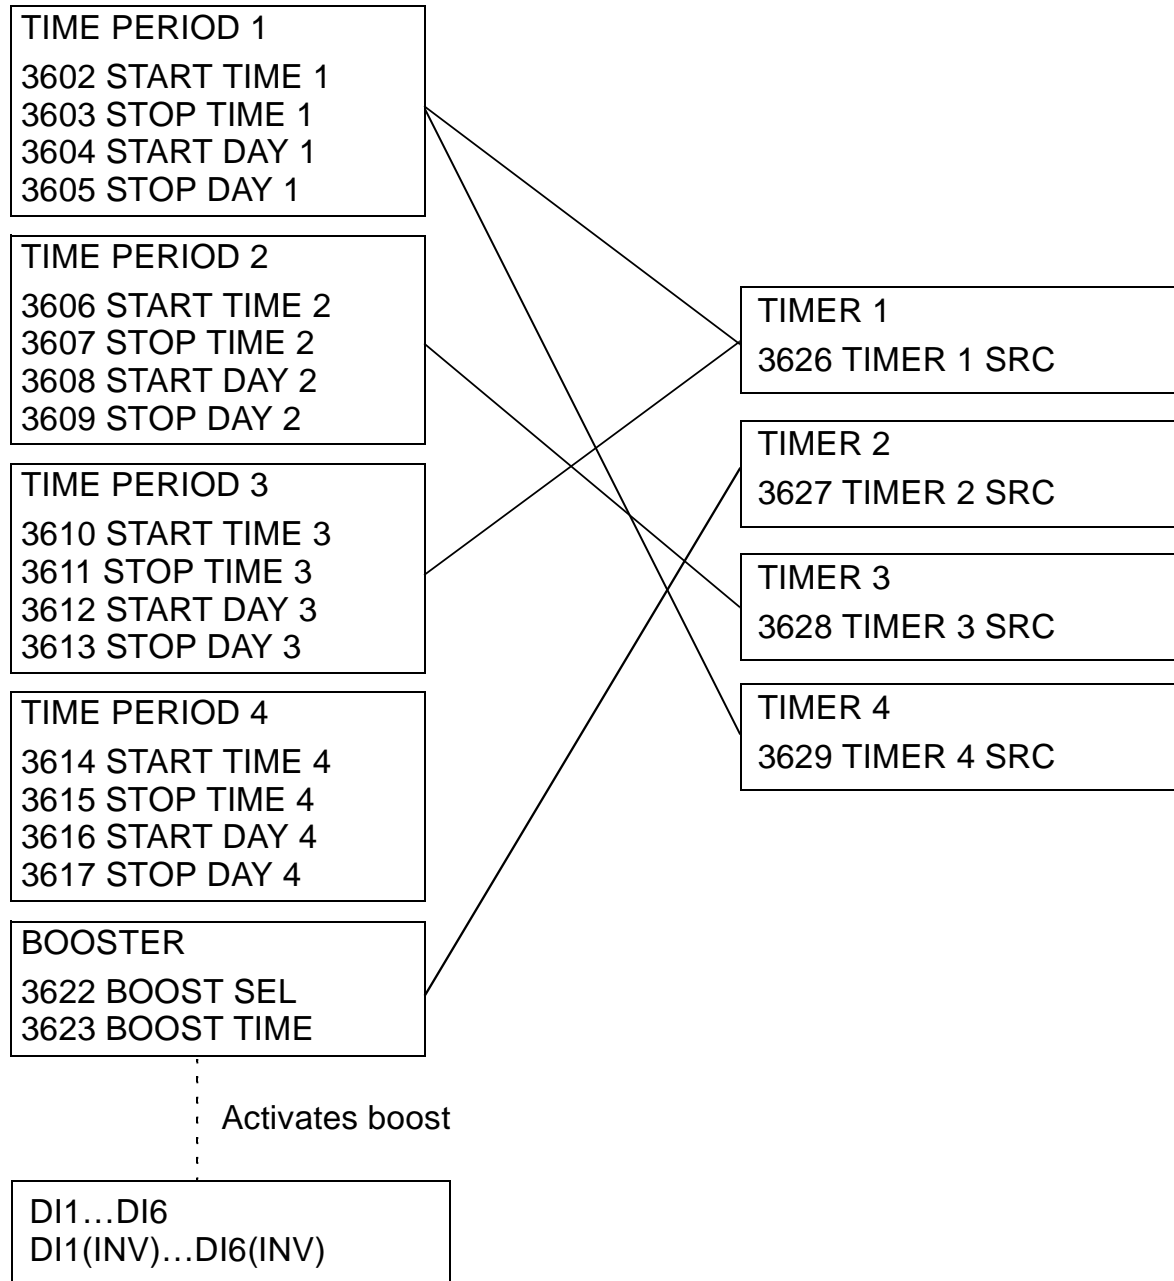

A parameter can be connected to only one timer.

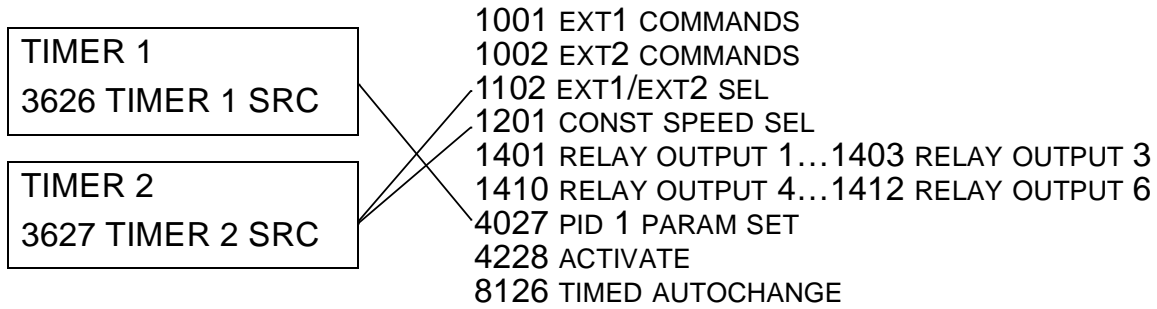

Code	Description	Range
3601	<p><b>TIMERS ENABLE</b></p> <p>Selects the source for the timer enable signal.</p> <p>0 = NOT SEL – Timed functions are disabled.</p> <p>1 = DI1 – Defines digital input DI1 as the timed function enable signal.</p> <ul style="list-style-type: none"> <li>The digital input must be activated for timed functions enable.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the timed function enable signal.</p> <p>7 = ACTIVE – Timed functions are enabled.</p> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as the timed function enable signal.</p> <ul style="list-style-type: none"> <li>This digital input must be de-activated for timed function enable.</li> </ul> <p>-2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the timed function enable signal.</p>	<b>-6...7</b>
3602	<p><b>START TIME 1</b></p> <p>Defines the daily start time.</p> <ul style="list-style-type: none"> <li>The time can be changed in steps of 2 seconds.</li> <li>If parameter value is 07:00:00, the timer will be activated at 7 a.m.</li> <li>The figure shows multiple periods on different weekdays.</li> </ul>	<b>00:00:00...23:59:58</b>

Code	Description	Range
3603	<b>STOP TIME 1</b> Defines the daily stop time. <ul style="list-style-type: none"> <li>The time can be set in steps of 2 seconds.</li> <li>If the parameter value is 09:00:00, the timer will be deactivated at 9 a.m.</li> </ul>	<b>00:00:00...23:59:58</b>
3604	<b>START DAY 1</b> Defines the weekly start day. 1 = MONDAY...7 = SUNDAY. <ul style="list-style-type: none"> <li>If parameter value is 1, timer 1 weekly is active from Monday midnight (00:00:00).</li> </ul>	<b>1...7</b>
3605	<b>STOP DAY 1</b> Defines weekly stop day. 1 = MONDAY...7 = SUNDAY. <ul style="list-style-type: none"> <li>If parameter value is 5, timer 1 weekly will be deactivated on Friday midnight (23:59:58).</li> </ul>	<b>1...7</b>
3606	<b>START TIME 2</b> Defines timer 2 daily start time. <ul style="list-style-type: none"> <li>See parameter 3602.</li> </ul>	
3607	<b>STOP TIME 2</b> Defines timer 2 daily stop time. <ul style="list-style-type: none"> <li>See parameter 3603.</li> </ul>	
3608	<b>START DAY 2</b> Defines timer 2 weekly start day. <ul style="list-style-type: none"> <li>See parameter 3604.</li> </ul>	
3609	<b>STOP DAY 2</b> Defines timer 2 weekly stop day. <ul style="list-style-type: none"> <li>See parameter 3605.</li> </ul>	
3610	<b>START TIME 3</b> Defines timer 3 daily start time. <ul style="list-style-type: none"> <li>See parameter 3602.</li> </ul>	
3611	<b>STOP TIME 3</b> Defines timer 3 daily stop time. <ul style="list-style-type: none"> <li>See parameter 3603.</li> </ul>	
3612	<b>START DAY 3</b> Defines timer 3 weekly start day. <ul style="list-style-type: none"> <li>See parameter 3604.</li> </ul>	
3613	<b>STOP DAY 3</b> Defines timer 3 weekly stop day. <ul style="list-style-type: none"> <li>See parameter 3605.</li> </ul>	
3614	<b>START TIME 4</b> Defines timer 4 daily start time. <ul style="list-style-type: none"> <li>See parameter 3602.</li> </ul>	

Code	Description	Range
3615	<b>STOP TIME 4</b> Defines timer 4 daily start time. • See parameter 3603.	
3616	<b>START DAY 4</b> Defines timer 4 weekly start day. • See parameter 3604.	
3617	<b>STOP DAY 4</b> Defines timer 4 weekly stop day. • See parameter 3605.	
3622	<b>BOOST SEL</b> Selects the source for the boost signal. 0 = NOT SEL – Boost signal is disabled. 1 = DI1 – Defines DI1 as the boost signal. 2...6 = DI2...DI6 – Defines DI2...DI6 as the boost signal. -1 = DI1(INV) – Defines an inverted digital input DI1 as the boost signal. -2...-6 = Defines an inverted digital input DI2...DI6 as the boost signal.	<b>-6...6</b>
3623	<b>BOOST TIME</b> Defines the boost ON time. Time is started when BOOST SEL signal is released. If parameter value is 01:30:00, boost is active for 1 hour and 30 minutes after activation DI is released.	<b>00:00:00...23:59:58</b>



Code	Description	Range
3626	<p><b>TIMER 1 SRC</b></p> <p>Collects all wanted timers to a timed function.</p> <p>0 = NOT SEL – No timers have been selected.</p> <p>1 = P1 – Time Period 1 selected in the timer.</p> <p>2 = P2 – Time Period 2 selected in the timer.</p> <p>3 = P1+P2 – Time Periods 1 and 2 selected in the timer.</p> <p>4 = P3 – Time Period 3 selected in the timer.</p> <p>5 = P1+P3 – Time Periods 1 and 3 selected in the timer.</p> <p>6 = P2+P3 – Time Periods 2 and 3 selected in the timer.</p> <p>7 = P1+P2+P3 – Time Periods 1, 2 and 3 selected in the timer.</p> <p>8 = P4 – Time Period 4 selected in the timer.</p> <p>9 = P1+P4 – Time Periods 1 and 4 selected in the timer.</p> <p>10 = P2+P4 – Time Periods 2 and 4 selected in the timer.</p> <p>11 = P1+P2+P4 – Time Periods 1, 2 and 4 selected in the timer.</p> <p>12 = P3+P4 – Time Periods 3 and 4 selected in the timer.</p> <p>13 = P1+P3+P4 – Time Periods 1, 3 and 4 selected in the timer.</p> <p>14 = P2+P3+P4 – Time Periods 2, 3 and 4 selected in the timer.</p> <p>15 = P1+P2+P3+P4 – Time Periods 1, 2, 3 and 4 selected in the timer.</p> <p>16 = BOOST – Boost (B) selected in the timer.</p> <p>17 = P1+B – Time Period 1 and Boost selected in the timer.</p> <p>18 = P2+B – Time Period 2 and Boost selected in the timer.</p> <p>19 = P1+P2+B – Time Periods 1 and 2 and Boost selected in the timer.</p> <p>20 = P3+B – Time Period 3 and Boost selected in the timer.</p> <p>21 = P1+P3+B – Time Periods 1 and 3 and Boost selected in the timer.</p> <p>22 = P2+P3+B – Time Periods 2 and 3 and Boost selected in the timer.</p> <p>23 = P1+P2+P3+B – Time Periods 1, 2 and 3 and Boost selected in the timer.</p> <p>24 = P4+B – Time Period 4 and Boost selected in the timer.</p> <p>25 = P1+P4+B – Time Periods 1 and 4 and Boost selected in the timer.</p> <p>26 = P2+P4+B – Time Periods 2 and 4 and Boost selected in the timer.</p> <p>27 = P1+P2+P4+B – Time Periods 1, 2 and 4 and Boost selected in the timer.</p> <p>28 = P3+P4+B – Time Periods 3 and 4 and Boost selected in the timer.</p> <p>29 = P1+P3+P4+B – Time Periods 1, 3 and 4 and Boost selected in the timer.</p> <p>30 = P2+P3+P4+B – Time Periods 2, 3 and 4 and Boost selected in the timer.</p> <p>31 = P1+2+3+4+B – Time Periods 1, 2, 3 and 4 and Boost selected in the timer.</p>	0...31
3627	<p><b>TIMER 2 SRC</b></p> <ul style="list-style-type: none"> <li>• See parameter 3626.</li> </ul>	
3628	<p><b>TIMER 3 SRC</b></p> <ul style="list-style-type: none"> <li>• See parameter 3626.</li> </ul>	
3629	<p><b>TIMER 4 SRC</b></p> <ul style="list-style-type: none"> <li>• See parameter 3626.</li> </ul>	

## Group 37: USER LOAD CURVE


This group defines supervision of user adjustable load curves (motor torque as a function of frequency). The curve is defined by five points.

Code	Description	Range
3701	<p><b>USER LOAD C MODE</b></p> <p>Supervision mode for the user adjustable load curves.</p> <p>This functionality replaces the former underload supervision in <a href="#">Group 30: FAULT FUNCTIONS</a>. To emulate it, see section <a href="#">Correspondence with the obsolete underload supervision</a> on page 272.</p> <p>0 = NOT SEL – Supervision is not active.            1 = UNDERLOAD – Supervision for the torque dropping below the underload curve.            2 = OVERLOAD – Supervision for the torque exceeding the overload curve.            3 = BOTH – Supervision for the torque dropping below the underload curve or exceeding the overload curve.</p>	0...3
	<p>The graph plots Motor torque (%) against Output frequency (Hz). It shows an 'Allowed operating area' bounded by an 'Underload area' (below) and an 'Overload area' (above). The underload curve is defined by points P3705, P3708, and P3711. The overload curve is defined by points P3706, P3709, P3712, P3715, P3714, and P3718. Vertical dashed lines are at P3704, P3707, P3710, P3713, and P3716.</p>	
3702	<p><b>USER LOAD C FUNC</b></p> <p>Action wanted during load supervision.</p> <p>1 = FAULT – A fault is generated when the condition defined by 3701 USER LOAD C MODE has been valid longer than the time set by 3703 USER LOAD C TIME.            2 = ALARM – An alarm is generated when the condition defined by 3701 USER LOAD C MODE has been valid longer than half of the time defined by 3703 USER LOAD C TIME.</p>	1=FAULT, 2=ALARM
3703	<p><b>USER LOAD C TIME</b></p> <p>Defines the time limit for generating a fault.</p> <ul style="list-style-type: none"> <li>Half of this time is used as the limit for generating an alarm.</li> </ul>	10...400 s

Code	Description	Range
3704	<b>LOAD FREQ 1</b> Defines the frequency value of the first load curve definition point. • Must be smaller than 3707 LOAD FREQ 2.	<b>0...500 Hz</b>
3705	<b>LOAD TORQ LOW 1</b> Defines the torque value of the first underload curve definition point. • Must be smaller than 3706 LOAD TORQ HIGH 1	<b>0...600%</b>
3706	<b>LOAD TORQ HIGH 1</b> Defines the torque value of the first overload curve definition point.	<b>0...600%</b>
3707	<b>LOAD FREQ 2</b> Defines the frequency value of the second load curve definition point. • Must be smaller than 3710 LOAD FREQ 3.	<b>0...500 Hz</b>
3708	<b>LOAD TORQ LOW 2</b> Defines the torque value of the second underload curve definition point. • Must be smaller than 3709 LOAD TORQ HIGH 2.	<b>0...600%</b>
3709	<b>LOAD TORQ HIGH 2</b> Defines the torque value of the second overload curve definition point.	<b>0...600%</b>
3710	<b>LOAD FREQ 3</b> Defines the frequency value of the third load curve definition point. • Must be smaller than 3713 LOAD FREQ 4.	<b>0...500 Hz</b>
3711	<b>LOAD TORQ LOW 3</b> Defines the torque value of the third underload curve definition point. • Must be smaller than 3712 LOAD TORQ HIGH 3.	<b>0...600%</b>
3712	<b>LOAD TORQ HIGH 3</b> Defines the torque value of the third overload curve definition point.	<b>0...600%</b>
3713	<b>LOAD FREQ 4</b> Defines the frequency value of the fourth load curve definition point. • Must be smaller than 3716 LOAD FREQ 5.	<b>0...500 Hz</b>
3714	<b>LOAD TORQ LOW 4</b> Defines the torque value of the fourth underload curve definition point. • Must be smaller than 3715 LOAD TORQ HIGH 4.	<b>0...600%</b>
3715	<b>LOAD TORQ HIGH 4</b> Defines the torque value of the fourth overload curve definition point.	<b>0...600%</b>
3716	<b>LOAD FREQ 5</b> Defines the frequency value of the fifth load curve definition point.	<b>0...500 Hz</b>
3717	<b>LOAD TORQ LOW 5</b> Defines the torque value of the fifth underload curve definition point. • Must be smaller than 3718 LOAD TORQ HIGH 5.	<b>0...600%</b>
3718	<b>LOAD TORQ HIGH 5</b> Defines the torque value of the fifth overload curve definition point.	<b>0...600%</b>

*Correspondence with the obsolete underload supervision*

The now obsolete parameter 3015 UNDERLOAD CURVE provided five selectable curves shown in the figure below.

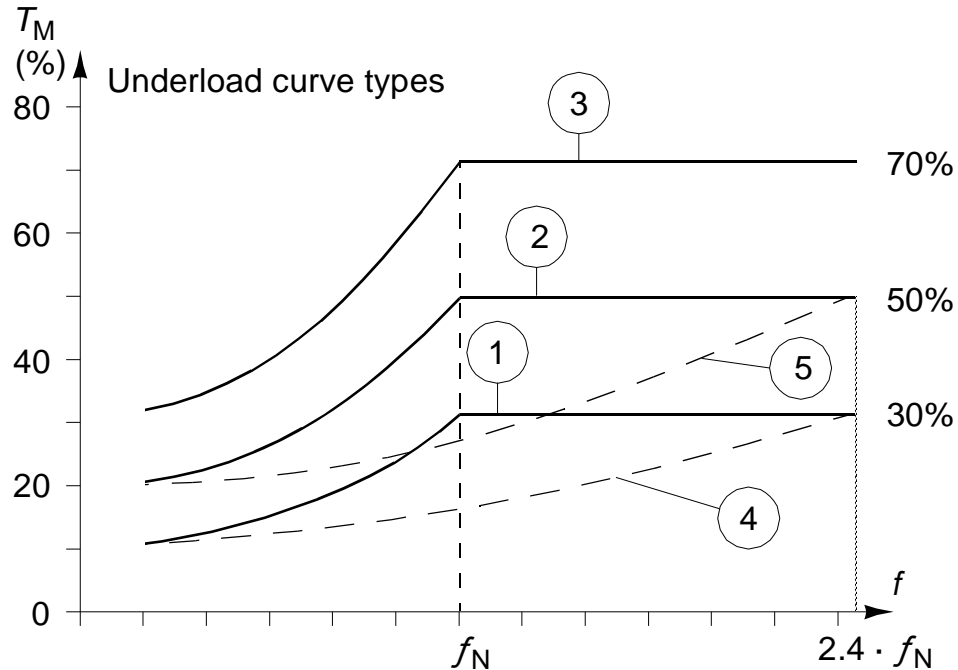

The parameter characteristics were as described below.

- If the load drops below the set curve for longer than the time set by parameter 3014 UNDERLOAD TIME (obsolete), the underload protection is activated.
- Curves 1...3 reach maximum at the motor rated frequency set by parameter 9907 MOTOR NOM FREQ.
- $T_M$  = nominal torque of the motor.
- $f_N$  = nominal frequency of the motor.

If you want to emulate the behaviour of an old underload curve with parameters as in the shaded columns, set the new parameters as in the white columns in the tables.

Underload supervision with parameters 3013...3015 (obsolete)	Obsolete parameters		New parameters		
	3013 UNDERLOAD FUNCTION	3014 UNDERLOAD TIME	3701 USER LOAD C MODE	3702 USER LOAD C FUNC	3703 USER LOAD C TIME
No underload functionality	0	-	0	-	-
Underload curve, fault generated	1	t	1	1	t
Underload curve, alarm generated	2	t	1	2	2 · t

**EU (50 Hz):**

Obs. par.	New parameters									
	3015 UNDER LOAD CURVE	3704 LOAD FREQ 1	3705 LOAD TORQ LOW 1	3707 LOAD FREQ 2	3708 LOAD TORQ LOW 2	3710 LOAD FREQ 3	3711 LOAD TORQ LOW 3	3713 LOAD FREQ 4	3714 LOAD TORQ LOW 4	3716 LOAD FREQ 5
	Hz	%	Hz	%	Hz	%	Hz	%	Hz	%
1	5	10	32	17	41	23	50	30	500	30
2	5	20	31	30	42	40	50	50	500	50
3	5	30	31	43	42	57	50	70	500	70
4	5	10	73	17	98	23	120	30	500	30
5	5	20	71	30	99	40	120	50	500	50

**US (60 Hz):**

Obs. par.	New parameters									
	3015 UNDER LOAD CURVE	3704 LOAD FREQ 1	3705 LOAD TORQ LOW 1	3707 LOAD FREQ 2	3708 LOAD TORQ LOW 2	3710 LOAD FREQ 3	3711 LOAD TORQ LOW 3	3713 LOAD FREQ 4	3714 LOAD TORQ LOW 4	3716 LOAD FREQ 5
	Hz	%	Hz	%	Hz	%	Hz	%	Hz	%
1	6	10	38	17	50	23	60	30	500	30
2	6	20	37	30	50	40	60	50	500	50
3	6	30	37	43	50	57	60	70	500	70
4	6	10	88	17	117	23	144	30	500	30
5	6	20	86	30	119	40	144	50	500	50


## Overview of PID controllers

### *PID controller – Basic set-up*

In PID control mode, the drive compares a reference signal (setpoint) to an actual signal (feedback), and automatically adjusts the speed of the drive to match the two signals. The difference between the two signals is the error (deviation) value.

Typically PID control mode is used when the speed of a fan or pump needs to be controlled based on pressure, flow or temperature. In most cases – when there is only 1 transducer signal wired to the ACH550 – only parameter *Group 40: PROCESS PID SET 1* is needed.

A schematic of setpoint/feedback signal flow using parameter group 40 is presented on page [275](#).

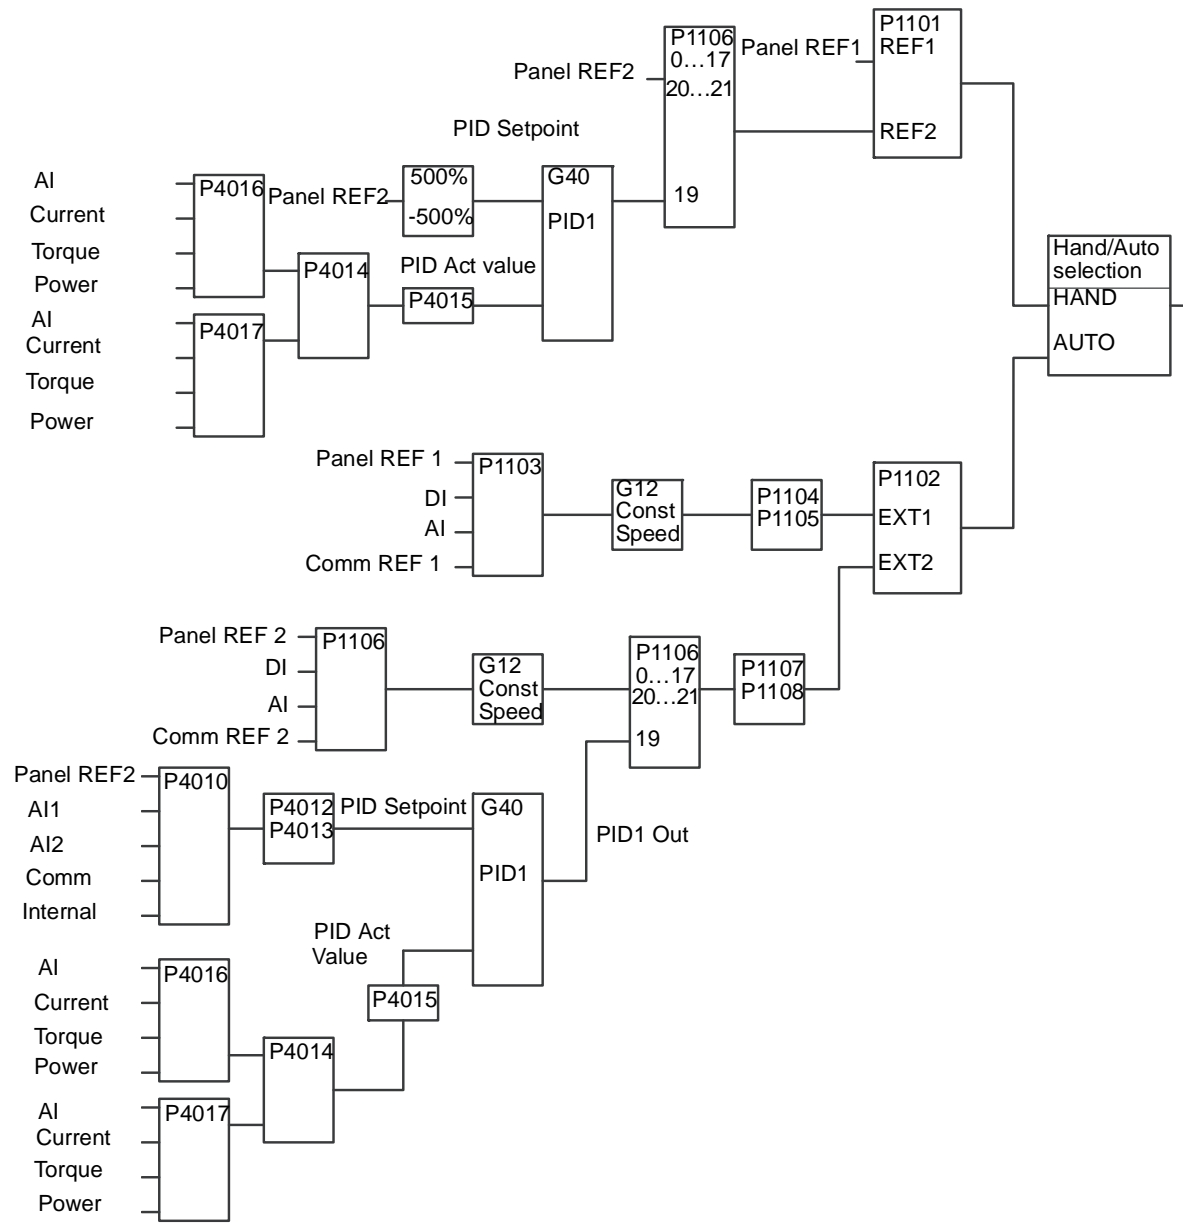


---

**Note:** In order to activate and use the PID controller, parameter 1106 REF2 SELECT must be set to value 19 (PID1OUT).

---

### *PID controller – Advanced*

The ACH550 has two separate PID controllers:

1. Process PID (PID1) and
2. External PID (PID2).

#### **Process PID controller (PID1)**

Process PID (PID1) has two separate sets of parameters:

- Process PID (PID1) set 1, defined in [Group 40: PROCESS PID SET 1](#), and
- Process PID (PID1) set 2, defined in [Group 41: PROCESS PID SET 2](#).

The user can select between the two different sets by using parameter 4027 PID 1 PARAM SET.

Typically two different PID controller sets are being used when the load of the motor changes considerably from one situation to another.

#### **External PID controller (PID2)**

External PID (PID2), which is defined in [Group 42: EXT / TRIM PID](#), can be used in two different ways:

- Instead of using additional PID controller hardware, External PID can be set to control a field instrument like a damper or a valve through outputs of the ACH550. In this case, parameter 4230 TRIM MODE has to be set to value 0 (default value).
- External PID (PID2) can be used as an additional PID controller to Process PID (PID1) to trim or fine-tune the speed of the ACH550.




**Group 40: PROCESS PID SET 1**

This group defines a set of parameters used with the Process PID (PID1) controller.

Typically only parameters in this group are needed.

Code	Description	Range
4001	<p><b>GAIN</b></p> <p>Defines the gain of the PID controller.</p> <ul style="list-style-type: none"> <li>• The setting range is 0.1...100.</li> <li>• At 0.1, the PID controller output changes one-tenth as much as the error value.</li> <li>• At 100, the PID controller output changes one hundred times as much as the error value.</li> </ul> <p>Use the proportional gain and integration time values to adjust the responsiveness of the system.</p> <ul style="list-style-type: none"> <li>• A low value for proportional gain and a high value for integral time ensures stable operation, but provides sluggish response.</li> <li>• If the proportional gain value is too large or the integral time too short, the system can become unstable.</li> </ul> <p><b>Procedure:</b></p> <ul style="list-style-type: none"> <li>• Initially, set: <ul style="list-style-type: none"> <li>• 4001 GAIN = 0.0.</li> <li>• 4002 INTEGRATION TIME = 20 seconds.</li> </ul> </li> <li>• Start the system and see if it reaches the setpoint quickly while maintaining stable operation. If not, increase GAIN (4001) until the actual signal (or drive speed) oscillates constantly. It may be necessary to start and stop the drive to induce this oscillation.</li> <li>• Reduce GAIN (4001) until the oscillation stops.</li> <li>• Set GAIN (4001) to 0.4 to 0.6 times the above value.</li> <li>• Decrease the INTEGRATION TIME (4002) until the feedback signal (or drive speed) oscillates constantly. It may be necessary to start and stop the drive to induce this oscillation.</li> <li>• Increase INTEGRATION TIME (4002) until the oscillation stops.</li> <li>• Set INTEGRATION TIME (4002) to 1.15 to 1.5 times the above value.</li> <li>• If the feedback signal contains high frequency noise, increase the value of parameter 1303 FILTER AI1 or 1306 FILTER AI2 until the noise is filtered from the signal.</li> </ul>	<b>0.1...100</b>

Code	Description	Range
4002	<p><b>INTEGRATION TIME</b></p> <p>Defines the integration time of the PID controller.</p> <p>Integration time is, by definition, the time required to increase the output by the error value:</p> <ul style="list-style-type: none"> <li>• Error value is constant and 100%.</li> <li>• Gain = 1.</li> <li>• Integration time of 1 second denotes that a 100% change is achieved in 1 second.</li> </ul> <p>0.0 = NOT SEL – Disables integration (I-part of the controller).</p> <p>0.1...600.0 = Integration time (seconds).</p> <ul style="list-style-type: none"> <li>• See 4001 for the adjustment procedure.</li> </ul> <div data-bbox="482 667 1199 1205" style="text-align: center;"> <p>A = Error  B = Error value step  C = Controller output with Gain = 1  D = Controller output with Gain = 10</p> </div>	<p><b>0.0 s=NOT SEL, 0.1...600 s</b></p>

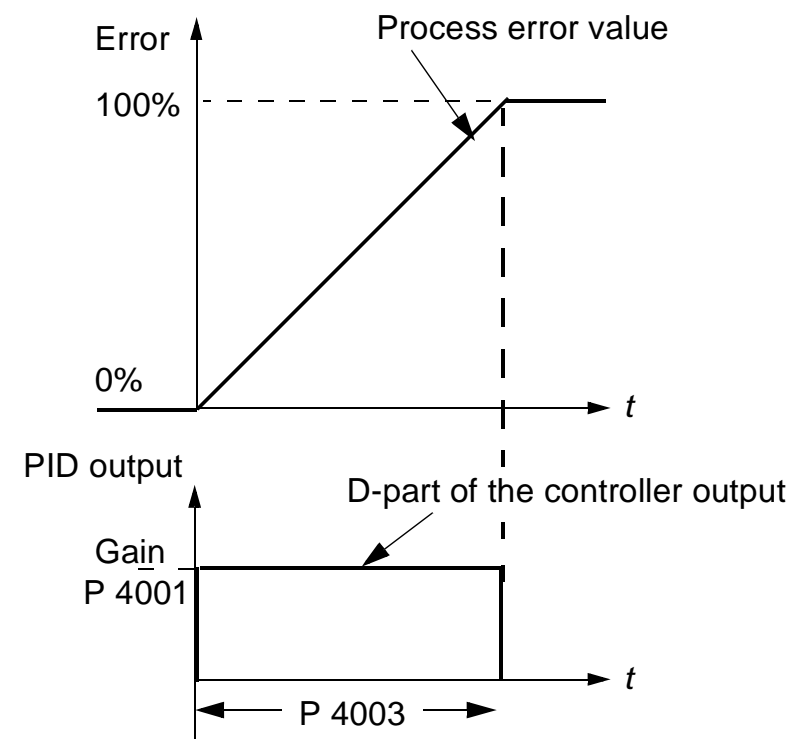Code	Description	Range
4003	<p><b>DERIVATION TIME</b></p> <p>Defines the derivation time of the PID controller.</p> <ul style="list-style-type: none"> <li>You can add the derivative of the error to the PID controller output. The derivative is the error value's rate of change. For example, if the process error value changes linearly, the derivative is a constant added to the PID controller output.</li> <li>The error-derivative is filtered with a 1-pole filter. The time constant of the filter is defined by parameter 4004 PID DERIV FILTER.</li> </ul> <p>0.0 – Disables the error-derivative part of the PID controller output. 0.1...10.0 – Derivation time (seconds).</p> 	<b>0.0...10.0 s</b>
4004	<p><b>PID DERIV FILTER</b></p> <p>Defines the filter time constant for the error-derivative part of the PID controller output.</p> <ul style="list-style-type: none"> <li>Before being added to the PID controller output, the error-derivative is filtered with a 1-pole filter.</li> <li>Increasing the filter time smooths the error-derivative, reducing noise.</li> </ul> <p>0.0 – Disables the error-derivative filter. 0.1...10.0 – Filter time constant (seconds).</p>	<b>0.0...10.0 s</b>
4005	<p><b>ERROR VALUE INV</b></p> <p>Selects either a normal or inverted relationship between the feedback signal and the drive speed.</p> <p>0 = NO – Normal, a decrease in feedback signal increases drive speed. Error = Ref - Fbk.</p> <p>1 = YES – Inverted, a decrease in feedback signal decreases drive speed. Error = Fbk - Ref.</p>	<b>0=NO, 1=YES</b>

Code	Description	Range																		
4006	<b>UNIT</b> Selects the unit for the PID controller actual values. (PID1 parameters 0128, 0130 and 0132). • See parameter 3405 for list of available units.	<b>0...127</b>																		
4007	<b>UNIT SCALE</b> Defines the decimal point location in PID controller actual values. • Enter the decimal point location counting from the right end of the entry. • See the table for an example using pi (3.14159).	<b>0...4</b>																		
	<table border="1"> <thead> <tr> <th>4007 Value</th> <th>Entry</th> <th>Display</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>00003</td> <td>3</td> </tr> <tr> <td>1</td> <td>00031</td> <td>3.1</td> </tr> <tr> <td>2</td> <td>00314</td> <td>3.14</td> </tr> <tr> <td>3</td> <td>03142</td> <td>3.142</td> </tr> <tr> <td>4</td> <td>31416</td> <td>3.1416</td> </tr> </tbody> </table>	4007 Value	Entry	Display	0	00003	3	1	00031	3.1	2	00314	3.14	3	03142	3.142	4	31416	3.1416	
4007 Value	Entry	Display																		
0	00003	3																		
1	00031	3.1																		
2	00314	3.14																		
3	03142	3.142																		
4	31416	3.1416																		
4008	<b>0% VALUE</b> Defines (together with the next parameter) the scaling applied to the actual values of the PID controller (PID1 parameters 0128, 0130 and 0132). • Units and scale are defined by parameters 4006 and 4007.	<b>unit and scale defined by par. 4006 and 4007</b>																		
	<p>Units (P4006) Scale (P4007)</p>																			
4009	<b>100% VALUE</b> Defines (together with the previous parameter) the scaling applied to the actual values of the PID controller. • Units and scale are defined by parameters 4006 and 4007.	<b>unit and scale defined by par. 4006 and 4007</b>																		

Code	Description	Range
4010	<p><b>SET POINT SEL</b></p> <p>Defines the reference signal source for the PID controller.</p> <ul style="list-style-type: none"> <li>Parameter has no significance when the PID regulator is by-passed (see 8121 REG BYPASS CTRL).</li> </ul> <p>0 = KEYPAD – Control panel provides reference.  1 = AI1 – Analogue input 1 provides reference.  2 = AI2 – Analogue input 2 provides reference.  8 = COMM – Fieldbus provides reference.  9 = COMM+AI1 – Defines a fieldbus and analogue input 1 (AI1) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 282.  10 = COMM*AI1 – Defines a fieldbus and analogue input 1 (AI1) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 282.  11 = DI3U,4D(RNC) – Digital inputs, acting as a motor potentiometer control, provide reference.</p> <ul style="list-style-type: none"> <li>DI3 increases the speed (the U stands for “up”)</li> <li>DI4 decreases the reference (the D stands for “down”).</li> <li>Parameter 2205 ACCELER TIME 2 controls the reference signal’s rate of change.</li> <li>R = Stop command resets the reference to zero.</li> <li>NC = Reference value is not copied.</li> </ul> <p>12 = DI3U,4D(NC) – Same as DI3U,4D(RNC) above, except:</p> <ul style="list-style-type: none"> <li>Stop command does not reset reference to zero. At restart the motor ramps up, at the selected acceleration rate, to the stored reference.</li> </ul> <p>13 = DI5U,6D(NC) – Same as DI3U,4D(NC) above, except:</p> <ul style="list-style-type: none"> <li>Uses digital inputs DI5 and DI6.</li> </ul> <p>14 = AI1+AI2 – Defines an analogue input 1 (AI1) and analogue input 2 (AI2) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 282.  15 = AI1*AI2 – Defines an analogue input 1 (AI1) and analogue input 2 (AI2) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 282.  16 = AI1-AI2 – Defines an analogue input 1 (AI1) and analogue input 2 (AI2) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 282.  17 = AI1/AI2 – Defines an analogue input 1 (AI1) and analogue input 2 (AI2) combination as the reference source. See <a href="#">Analogue input reference correction</a> on page 282.  19 = INTERNAL – A constant value set using parameter 4011 provides reference.  20 = PID2OUT – Defines PID controller 2 output (parameter 0127 PID 2 OUTPUT) as the reference source.</p>	0...20

Code	Description	Range										
	<p><b>Analogue input reference correction</b></p> <p>Parameter values 9, 10, and 14...17 use the formula in the following table.</p> <table border="1"> <thead> <tr> <th>Value setting</th> <th>Calculation of the AI reference</th> </tr> </thead> <tbody> <tr> <td>C + B</td> <td>C value + (B value - 50% of reference value)</td> </tr> <tr> <td>C * B</td> <td>C value * (B value / 50% of reference value)</td> </tr> <tr> <td>C - B</td> <td>(C value + 50% of reference value) - B value</td> </tr> <tr> <td>C / B</td> <td>(C value * 50% of reference value) / B value</td> </tr> </tbody> </table> <p>Where:</p> <ul style="list-style-type: none"> <li>• C = Main reference value (= COMM for values 9, 10 and = AI1 for values 14...17)</li> <li>• B = Correcting reference (= AI1 for values 9, 10 and = AI2 for values 14...17).</li> </ul> <p><b>Example:</b> The figure shows the reference source curves for value settings 9, 10, and 14...17, where:</p> <ul style="list-style-type: none"> <li>• C = 25%.</li> <li>• P 4012 SETPOINT MIN = 0.</li> <li>• P 4013 SETPOINT MAX = 0.</li> <li>• B varies along the horizontal axis.</li> </ul>	Value setting	Calculation of the AI reference	C + B	C value + (B value - 50% of reference value)	C * B	C value * (B value / 50% of reference value)	C - B	(C value + 50% of reference value) - B value	C / B	(C value * 50% of reference value) / B value	
Value setting	Calculation of the AI reference											
C + B	C value + (B value - 50% of reference value)											
C * B	C value * (B value / 50% of reference value)											
C - B	(C value + 50% of reference value) - B value											
C / B	(C value * 50% of reference value) / B value											
4011	<p><b>INTERNAL SETPNT</b></p> <p>Sets a constant value used for the process reference.</p> <ul style="list-style-type: none"> <li>• Units and scale are defined by parameters 4006 and 4007.</li> </ul>	<p><b>unit and scale defined by par 4006 and 4007</b></p>										
4012	<p><b>SETPOINT MIN</b></p> <p>Sets the minimum value for the reference signal source. See parameter 4010.</p>	<p><b>-500.0...500.0%</b></p>										
4013	<p><b>SETPOINT MAX</b></p> <p>Sets the maximum value for the reference signal source. See parameter 4010.</p>	<p><b>-500.0...500.0%</b></p>										

Code	Description	Range
4014	<p><b>FBK SEL</b></p> <p>Defines the PID controller feedback (actual signal).</p> <ul style="list-style-type: none"> <li>You can define a combination of two actual values (ACT1 and ACT2) as the feedback signal.</li> <li>Use parameter 4016 to define the source for actual value 1 (ACT1).</li> <li>Use parameter 4017 to define the source for actual value 2 (ACT2).</li> </ul> <p>1 = ACT1 – Actual value 1 (ACT1) provides the feedback signal.  2 = ACT1-ACT2 – ACT1 minus ACT2 provides the feedback signal.  3 = ACT1+ACT2 – ACT1 plus ACT2 provides the feedback signal.  4 = ACT1*ACT2 – ACT1 times ACT2 provides the feedback signal.  5 = ACT1/ACT2 – ACT1 divided by ACT2 provides the feedback signal.  6 = MIN(ACT1,2) – The smaller of ACT1 or ACT2 provides the feedback signal.  7 = MAX(ACT1,2) – The greater of ACT1 or ACT2 provides the feedback signal.  8 = sqrt(ACT1-2) – Square root of the value for ACT1 minus ACT2 provides the feedback signal.  9 = sqA1+sqA2 – Square root of ACT1 plus the square root of ACT2 provides the feedback signal.  10 = sqrt(ACT1) – Square root of the value for ACT1 provides the feedback signal.  11 = COMM FBK 1 – Signal 0158 PID COMM VALUE 1 provides the feedback signal.  12 = COMM FBK 2 – Signal 0159 PID COMM VALUE 2 provides the feedback signal.  13 = AVE(ACT1,2) – The average of ACT1 and ACT2 provides the feedback signal.</p>	1...13
4015	<p><b>FBK MULTIPLIER</b></p> <p>Defines an extra multiplier for the PID feedback value FBK defined by parameter 4014.</p> <ul style="list-style-type: none"> <li>Used mainly in applications where the flow is calculated from the pressure difference.</li> </ul> <p>0.000 = NOT SEL – The parameter has no effect (1.000 used as the multiplier).  -32.768...32.767 – Multiplier applied to the signal defined by parameter 4014 FBK SEL.</p> <p><b>Example:</b> <math>FBK = \text{Multiplier} \times \sqrt{ACT1 - ACT2}</math></p>	-32.768...32.767, 0.000=NOT SEL


Code	Description	Range
4016	<p><b>ACT1 INPUT</b></p> <p>Defines the source for actual value 1 (ACT1). See also parameter 4018 ACT1 MINIMUM.</p> <p>1 = AI1 – Uses analogue input 1 for ACT1.            2 = AI2 – Uses analogue input 2 for ACT1.            3 = CURRENT – Uses current for ACT1.            4 = TORQUE – Uses torque for ACT1.            5 = POWER – Uses power for ACT1.            6 = COMM ACT 1 – Uses value of signal 0158 PID COMM VALUE 1 for ACT1.            7 = COMM ACT 2 – Uses value of signal 0159 PID COMM VALUE 2 for ACT1.</p>	<b>1...7</b>
4017	<p><b>ACT2 INPUT</b></p> <p>Defines the source for actual value 2 (ACT2). See also parameter 4020 ACT2 MINIMUM.</p> <p>1 = AI1 – Uses analogue input 1 for ACT2.            2 = AI2 – Uses analogue input 2 for ACT2.            3 = CURRENT – Uses current for ACT2.            4 = TORQUE – Uses torque for ACT2.            5 = POWER – Uses power for ACT2.            6 = COMM ACT 1 – Uses value of signal 0158 PID COMM VALUE 1 for ACT2.            7 = COMM ACT 2 – Uses value of signal 0159 PID COMM VALUE 2 for ACT2.</p>	<b>1...7</b>



Code	Description	Range																								
4018	<p><b>ACT1 MINIMUM</b></p> <p>Sets the minimum value for ACT1.</p> <ul style="list-style-type: none"> <li>• Scales the source signal used as the actual value ACT1 (defined by parameter 4016 ACT1 INPUT). For parameter 4016 values 6 (COMM ACT 1) and 7 (COMM ACT 2) scaling is not done.</li> </ul>	<b>-1000...1000%</b>																								
	<table border="1"> <thead> <tr> <th>Par 4016</th> <th>Source</th> <th>Source min.</th> <th>Source max.</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Analogue input 1</td> <td>1301 MINIMUM AI1</td> <td>1302 MAXIMUM AI1</td> </tr> <tr> <td>2</td> <td>Analogue input 2</td> <td>1304 MINIMUM AI2</td> <td>1305 MAXIMUM AI2</td> </tr> <tr> <td>3</td> <td>Current</td> <td>0</td> <td>2 · nominal current</td> </tr> <tr> <td>4</td> <td>Torque</td> <td>-2 · nominal torque</td> <td>2 · nominal torque</td> </tr> <tr> <td>5</td> <td>Power</td> <td>-2 · nominal power</td> <td>2 · nominal power</td> </tr> </tbody> </table>	Par 4016	Source	Source min.	Source max.	1	Analogue input 1	1301 MINIMUM AI1	1302 MAXIMUM AI1	2	Analogue input 2	1304 MINIMUM AI2	1305 MAXIMUM AI2	3	Current	0	2 · nominal current	4	Torque	-2 · nominal torque	2 · nominal torque	5	Power	-2 · nominal power	2 · nominal power	
Par 4016	Source	Source min.	Source max.																							
1	Analogue input 1	1301 MINIMUM AI1	1302 MAXIMUM AI1																							
2	Analogue input 2	1304 MINIMUM AI2	1305 MAXIMUM AI2																							
3	Current	0	2 · nominal current																							
4	Torque	-2 · nominal torque	2 · nominal torque																							
5	Power	-2 · nominal power	2 · nominal power																							
	<ul style="list-style-type: none"> <li>• See the figure: A = Normal; B = Inversion (ACT1 MINIMUM &gt; ACT1 MAXIMUM).</li> </ul> <div style="text-align: center;"> <p>The figure contains two graphs, A and B, plotting ACT1 (%) on the y-axis against Source signal on the x-axis. Graph A, labeled 'A', shows a normal response: the signal is constant at P 4018 until P 1301 (Source min.), then increases linearly to P 4019 at P 1302 (Source max.), and remains constant thereafter. Graph B, labeled 'B', shows an inverted response: the signal is constant at P 4018 until P 1301 (Source min.), then decreases linearly to P 4019 at P 1302 (Source max.), and remains constant thereafter.</p> </div>																									
4019	<p><b>ACT1 MAXIMUM</b></p> <p>Sets the maximum value for ACT1.</p> <ul style="list-style-type: none"> <li>• See 4018 ACT1 MINIMUM.</li> </ul>	<b>-1000...1000%</b>																								
4020	<p><b>ACT2 MINIMUM</b></p> <p>Sets the minimum value for ACT2.</p> <ul style="list-style-type: none"> <li>• See 4018 ACT1 MINIMUM.</li> </ul>	<b>-1000...1000%</b>																								

Code	Description	Range
4021	<b>ACT2 MAXIMUM</b> Sets the maximum value for ACT2. <ul style="list-style-type: none"> <li>• See 4018 ACT1 MINIMUM.</li> </ul>	<b>-1000...1000%</b>
4022	<b>SLEEP SELECTION</b> Defines the control for the PID sleep function. 0 = NOT SEL– Disables the PID sleep control function. 1 = DI1 – Defines digital input DI1 as the control for the PID sleep function. <ul style="list-style-type: none"> <li>• Activating the digital input activates the sleep function.</li> <li>• De-activating the digital input restores PID control.</li> </ul> 2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the control for the PID sleep function. <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> 7 = INTERNAL – Defines the output rpm/frequency, process reference, and process actual value as the control for the PID sleep function. <ul style="list-style-type: none"> <li>• Refer to parameters 4025 WAKE-UP DEV and 4023 PID SLEEP LEVEL.</li> </ul> -1 = DI1(INV) – Defines an inverted digital input DI1 as the control for the PID sleep function. <ul style="list-style-type: none"> <li>• De-activating the digital input activates the sleep function.</li> <li>• Activating the digital input restores PID control.</li> </ul> -2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the control for the PID sleep function. <ul style="list-style-type: none"> <li>• See DI1(INV) above.</li> </ul>	<b>-6...7</b>

Code	Description	Range
4023	<p><b>PID SLEEP LEVEL</b></p> <p>Sets the motor speed/frequency that enables the PID sleep function – a motor speed/frequency below this level, for at least the time period 4024 PID SLEEP DELAY, enables the PID sleep function (stopping the drive).</p> <ul style="list-style-type: none"> <li>• Requires 4022 = 7 (INTERNAL).</li> <li>• See the figure: A = PID output level; B = PID process feedback.</li> </ul>	<p><b>0...7200 rpm/ 0.0...120 Hz</b></p>

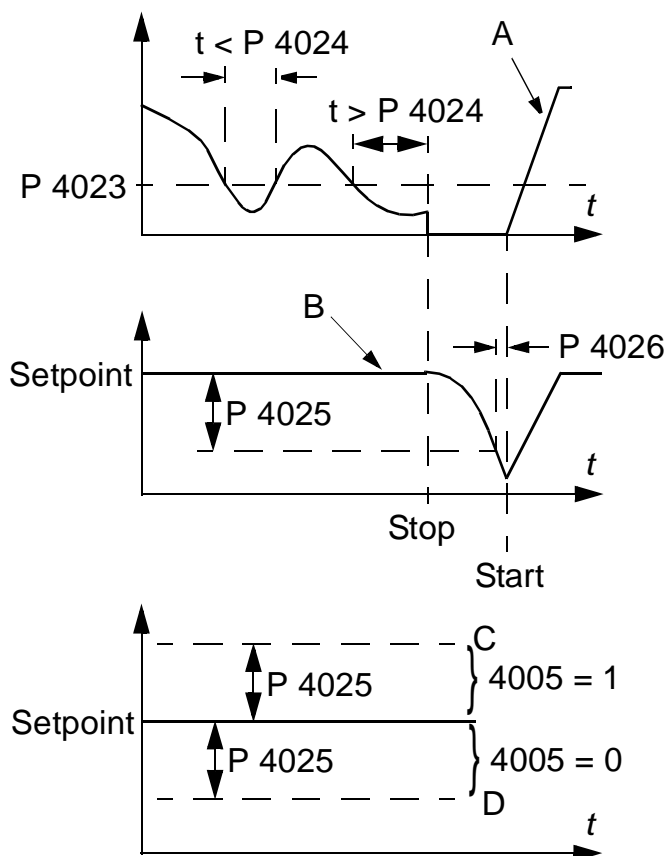

Code	Description	Range
4024	<p><b>PID SLEEP DELAY</b></p> <p>Sets the time delay for the PID sleep function – a motor speed/frequency below 4023 PID SLEEP LEVEL for at least this time period enables the PID sleep function (stopping the drive).</p> <ul style="list-style-type: none"> <li>• See 4023 PID SLEEP LEVEL above.</li> </ul>	<b>0.0...3600 s</b>
4025	<p><b>WAKE-UP DEV</b></p> <p>Defines the wake-up deviation – a deviation from the setpoint greater than this value, for at least the time period 4026 WAKE-UP DELAY, restarts the PID controller.</p> <ul style="list-style-type: none"> <li>• Parameters 4006 and 4007 define the units and scale.</li> <li>• Parameter 4005 = 0, Wake-up level = Setpoint - Wake-up deviation.</li> <li>• Parameter 4005 = 1, Wake-up level = Setpoint + Wake-up deviation.</li> <li>• Wake-up level can be above or below setpoint.</li> </ul> <p>See the figure:</p> <ul style="list-style-type: none"> <li>• C = Wake-up level when parameter 4005 = 1</li> <li>• D = Wake-up level when parameter 4005 = 0</li> <li>• E = Feedback is above wake-up level and lasts longer than 4026 WAKE-UP DELAY – PID function wakes up.</li> <li>• F = Feedback is below wake-up level and lasts longer than 4026 WAKE-UP DELAY – PID function wakes up.</li> </ul>	<b>unit and scale defined by par. 4106 and 4107</b>
4026	<p><b>WAKE-UP DELAY</b></p> <p>Defines the wake-up delay – a deviation from the setpoint greater than 4025 WAKE-UP DEV, for at least this time period, restarts the PID controller.</p> <ul style="list-style-type: none"> <li>• See 4023 PID SLEEP LEVEL above.</li> </ul>	<b>0...60 s</b>

Code	Description	Range
4027	<p><b>PID 1 PARAM SET</b></p> <p>Process PID (PID1) has two separate sets of parameters, PID set 1 and PID set 2. PID 1 PARAM SET defines which set is selected.</p> <ul style="list-style-type: none"> <li>• PID set 1 uses parameters 4001...4026.</li> <li>• PID set 2 uses parameters 4101...4126.</li> </ul> <p>0 = SET 1 – PID set 1 (parameters 4001...4026) is active.</p> <p>1 = DI1 – Defines digital input DI1 as the control for PID set selection.</p> <ul style="list-style-type: none"> <li>• Activating the digital input selects PID set 2.</li> <li>• De-activating the digital input selects PID set 1.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the control for PID set selection.</p> <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> <p>7 = SET 2 – PID set 2 (parameters 4101...4126) is active.</p> <p>8...11 = TIMER 1...4 – Defines the timer as the control for the PID set selection (Timer de-activated = PID set 1; Timer activated = PID set 2)</p> <ul style="list-style-type: none"> <li>• See parameter <a href="#">Group 36: TIMED FUNCTIONS</a>.</li> </ul> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as the control for PID set selection.</p> <ul style="list-style-type: none"> <li>• Activating the digital input selects PID set 1.</li> <li>• De-activating the digital input selects PID set 2.</li> </ul> <p>-2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the control for PID set selection.</p> <ul style="list-style-type: none"> <li>• See DI1(INV) above.</li> </ul> <p>For 2-ZONE selections (12...14), the drive first calculates the difference between PID1 set 1 setpoint and feedback (deviation) as well as the difference between PID1 set 2 setpoint and feedback (deviation).</p> <p>12 = 2-ZONE MIN – The drive will control the zone (and select the set, PID1 set 1 or PID1 set 2) which has a larger deviation.</p> <ul style="list-style-type: none"> <li>• A positive deviation (a setpoint higher than the feedback) is always larger than a negative deviation. This keeps feedback values at or above the setpoint.</li> <li>• Controller does not react to the situation of feedback above setpoint if another zone's feedback is closer to its setpoint.</li> </ul> <p>13 = 2-ZONE MAX – The drive will control the zone (and select the set, PID1 set 1 or PID1 set 2) which has a smaller deviation.</p> <ul style="list-style-type: none"> <li>• A negative deviation (a setpoint lower than the feedback) is always smaller than a positive deviation. This keeps feedback values at or below the setpoint.</li> <li>• Controller does not react to the situation of feedback below setpoint if another zone's feedback is closer to its setpoint.</li> </ul> <p>14 = 2-ZONE AVE – The drive calculates the average of the deviations, and uses it to control zone 1. Therefore one feedback is kept above its setpoint and another is kept as much below its setpoint.</p>	-6...11

**Group 41: PROCESS PID SET 2**

This group defines a second set of parameters used with the Process PID (PID1) controller.

The operation of parameters 4101...4126 is analogous with Process PID set 1 (PID1) parameters 4001...4026.

PID parameter set 2 can be selected by parameter 4027 PID 1 PARAM SET.

Code	Description	Range
4101 ... 4126	See 4001...4026.	


**Group 42: EXT / TRIM PID**

This group defines the parameters used for the External PID controller (PID2) of the ACH550.

The operation of parameters 4201...4221 is analogous with Process PID controller (PID1) set 1 parameters 4001...4021.

Code	Description	Range
4201 ... 4221	See 4001...4021.	
4228	<p><b>ACTIVATE</b></p> <p>Defines the source for enabling the external PID function.</p> <ul style="list-style-type: none"> <li>• Requires 4230 TRIM MODE = 0 (NOT SEL).</li> </ul> <p>0 = NOT SEL – Disables external PID control.</p> <p>1 = DI1 – Defines digital input DI1 as the control for enabling external PID control.</p> <ul style="list-style-type: none"> <li>• Activating the digital input enables external PID control.</li> <li>• De-activating the digital input disables external PID control.</li> </ul> <p>2...6 = DI2...DI6 – Defines digital input DI2...DI6 as the control for enabling external PID control.</p> <ul style="list-style-type: none"> <li>• See DI1 above.</li> </ul> <p>7 = DRIVE RUN – Defines the start command as the control for enabling external PID control.</p> <ul style="list-style-type: none"> <li>• Activating the start command (drive is running) enables external PID control.</li> </ul> <p>8 = ON – Defines the power-on as the control for enabling external PID control.</p> <ul style="list-style-type: none"> <li>• Activating power to the drive enables external PID control.</li> </ul> <p>9...12 = TIMER 1...4 – Defines the timer as the control for enabling external PID control (Timer active enables external PID control).</p> <ul style="list-style-type: none"> <li>• See <a href="#">Group 36: TIMED FUNCTIONS</a>.</li> </ul> <p>-1 = DI1(INV) – Defines an inverted digital input DI1 as the control for enabling external PID control.</p> <ul style="list-style-type: none"> <li>• Activating the digital input disables external PID control.</li> <li>• De-activating the digital input enables external PID control.</li> </ul> <p>-2...-6 = DI2(INV)...DI6(INV) – Defines an inverted digital input DI2...DI6 as the control for enabling external PID control.</p> <ul style="list-style-type: none"> <li>• See DI1(INV) above.</li> </ul>	<b>-6...12</b>
4229	<p><b>OFFSET</b></p> <p>Defines the offset for the PID output.</p> <ul style="list-style-type: none"> <li>• When PID is activated, output starts from this value.</li> <li>• When PID is deactivated, output resets to this value.</li> <li>• Parameter is not active when 4230 TRIM MODE &lt;&gt; 0 (i.e. trim mode is active).</li> </ul>	<b>0.0...100.0%</b>

Code	Description	Range
4230	<b>TRIM MODE</b> Selects the type of trim, if any. With the trim it is possible to combine a corrective factor to the drive reference. 0 = NOT SEL – Disables the trim function. 1 = PROPORTIONAL – Adds a trim factor that is proportional to the rpm/Hz reference. 2 = DIRECT – Adds a trim factor based on the control loop's maximum limit.	<b>0...2</b>
4231	<b>TRIM SCALE</b> Defines the multiplier (as a percentage, plus or minus) used in the trim mode.	<b>-100.0...100.0%</b>
4232	<b>CORRECTION SRC</b> Defines the trimming reference for the correction source. 1 = PID2REF – Uses appropriate REF MAX (Switch A OR B): <ul style="list-style-type: none"> <li>• 1105 REF1 MAX when REF1 is active (A).</li> <li>• 1108 REF2 MAX when REF2 is active (B).</li> </ul> 2 = PID2OUTPUT – Uses the absolute maximum speed or frequency (Switch C): <ul style="list-style-type: none"> <li>• 2002 MAXIMUM SPEED if 9904 MOTOR CTRL MODE = 1 (VECTOR:SPEED).</li> <li>• 2008 MAXIMUM FREQ IF 9904 MOTOR CTRL MODE = 3 (SCALAR:FREQ).</li> </ul>	<b>1=PID2REF, 2=PID2OUTPUT</b>

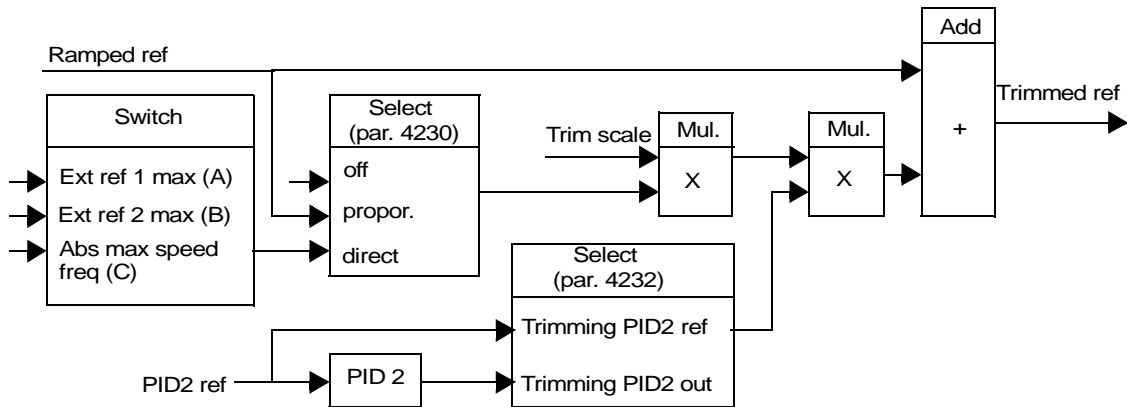



## Group 45: ENERGY SAVING

This group defines the setup of calculation and optimization of energy savings.

**Note:** The values of the saved energy parameters 0174 SAVED KWH, 0175 SAVED MWH, 0176 SAVED AMOUNT 1, 0177 SAVED AMOUNT 2, and 0178 SAVED CO2 are derived from subtracting the drive's energy consumed from the direct-on-line (DOL) consumption calculated on the basis of parameter 4508 PUMP POWER. As such, the accuracy of the values is dependent on the accuracy of the power estimate entered in that parameter.

Code	Description	Range
4502	<b>ENERGY PRICE</b> Price of energy per kWh. <ul style="list-style-type: none"> <li>• Used for reference when energy savings are calculated.</li> <li>• See parameters 0174 SAVED KWH, 0175 SAVED MWH, 0176 SAVED AMOUNT 1, 0177 SAVED AMOUNT 2 and 0178 SAVED CO2 (reduction on carbon dioxide emissions in tn).</li> </ul>	<b>0...655.35</b>
4507	<b>CO2 CONV FACTOR</b> Conversion factor for converting energy into CO2 emissions (kg/kWh or tn/MWh). Used for multiplying the saved energy in MWh to calculate the value of parameter 0178 SAVED CO2 (reduction on carbon dioxide emissions in tn).	<b>0.0...10.0</b>
4508	<b>PUMP POWER</b> Pump power (as a percentage of the nominal motor power) when connected directly to supply (DOL). <ul style="list-style-type: none"> <li>• Used for reference when energy savings are calculated.</li> <li>• See parameters 0174 SAVED KWH, 0175 SAVED MWH, 0176 SAVED AMOUNT 1, 0177 SAVED AMOUNT 2 and 0178 SAVED CO2.</li> <li>• It is possible to use this parameter as the reference power also for other applications than pumps. The reference power can also be some other constant power than a motor connected directly online.</li> </ul>	<b>0.0...1000.0%</b>
4509	<b>ENERGY RESET</b> Resets energy calculators 0174 SAVED KWH, 0175 SAVED MWH, 0176 SAVED AMOUNT 1, 0177 SAVED AMOUNT 2 and 0178 SAVED CO2.	<b>0=DONE, 1=RESET</b>

## Group 51: EXT COMM MODULE

This group defines set-up variables for an external fieldbus communication module. Refer to the communication module documentation for more information on these parameters.

Code	Description	Range
5101	<p><b>FBA TYPE</b></p> <p>Displays the type of the connected fieldbus adapter module.</p> <p>0 = NOT DEFINED – Module not found or not connected. Check chapter <i>Mechanical installation</i> in the fieldbus user's manual and check that parameter 9802 is set to 4 = EXT FBA.</p> <p>1 = Profibus-DP            21 = LonWorks            32 = CANopen            37 = DeviceNet            101 = ControlNet            128 = Ethernet            132 = PROFINET            135 = ETHERCAT            136 = EPL - Ethernet POWERLINK</p>	
5102 ... 5126	<p><b>FB PAR 2...FB PAR 26</b></p> <p>Refer to the communication module documentation for more information on these parameters.</p>	<b>0...65535</b>
5127	<p><b>FBA PAR REFRESH</b></p> <p>Validates any changed fieldbus parameter settings.</p> <p>0 = DONE – Refreshing done.            1 = REFRESH – Refreshing.</p> <ul style="list-style-type: none"> <li>After refreshing, the value reverts automatically to DONE.</li> </ul>	<b>0=DONE, 1=REFRESH</b>
5128	<p><b>FILE CPI FW REV</b></p> <p>Displays the CPI firmware revision of the drive's fieldbus adapter configuration file. Format is xyz, where:</p> <ul style="list-style-type: none"> <li>x = major revision number</li> <li>y = minor revision number</li> <li>z = correction number.</li> </ul> <p><b>Example:</b> 107 = revision 1.07</p>	<b>0...0xFFFF</b>
5129	<p><b>FILE CONFIG ID</b></p> <p>Displays the revision of the drive's fieldbus adapter module's configuration file identification.</p> <ul style="list-style-type: none"> <li>File configuration information depends on the drive application program.</li> </ul>	<b>0...0xFFFF</b>
5130	<p><b>FILE CONFIG REV</b></p> <p>Contains the revision of the drive's fieldbus adapter module configuration file.</p> <p><b>Example:</b> 1 = revision 1</p>	<b>0...0xFFFF</b>

Code	Description	Range
5131	<p><b>FBA STATUS</b></p> <p>Contains the status of the adapter module.</p> <p>0 = IDLE – Adapter not configured.</p> <p>1 = EXECUT INIT – Adapter is initializing.</p> <p>2 = TIME OUT – A time-out has occurred in the communication between the adapter and the drive.</p> <p>3 = CONFIG ERROR – Adapter configuration error.</p> <ul style="list-style-type: none"> <li>• The major or minor revision code of the adapter's CPI firmware revision differs from that stated in the drive's configuration file.</li> </ul> <p>4 = OFF-LINE – Adapter is off-line.</p> <p>5 = ON-LINE – Adapter is on-line.</p> <p>6 = RESET – Adapter is performing a hardware reset.</p>	0...6
5132	<p><b>FBA CPI FW REV</b></p> <p>Contains the revision of the module's CPI program. Format is xyz, where:</p> <ul style="list-style-type: none"> <li>• x = major revision number</li> <li>• y = minor revision number</li> <li>• z = correction number.</li> </ul> <p><b>Example:</b> 107 = revision 1.07</p>	0...0xFFFF
5133	<p><b>FBA APPL FW REV</b></p> <p>Contains the revision of the module's application program. Format is xyz, where:</p> <ul style="list-style-type: none"> <li>• x = major revision number</li> <li>• y = minor revision number</li> <li>• z = correction number.</li> </ul> <p><b>Example:</b> 107 = revision 1.07</p>	0...0xFFFF

## Group 52: PANEL COMM

This group defines the communication settings for the control panel port on the drive. Normally, when using the supplied control panel (operator keypad), there is no need to change settings in this group.

In this group, parameter modifications take effect on the next power-up.

Code	Description	Range
5201	<b>STATION ID</b> Defines the address of the drive. <ul style="list-style-type: none"> <li>Two units with the same address are not allowed on-line.</li> <li>Range: 1...247.</li> </ul>	<b>1...247</b>
5202	<b>BAUD RATE</b> Defines the communication speed of the drive in kbits per second (kb/s). 9.6 kb/s 19.2 kb/s 38.4 kb/s 57.6 kb/s 115.2 kb/s	<b>9.6, 19.2, 38.4, 57.6, 115.2 kb/s</b>
5203	<b>PARITY</b> Sets the character format to be used with the panel communication. 0 = 8 NONE 1 – 8 data bits, no parity, one stop bit. 1 = 8 NONE 2 – 8 data bits, no parity, two stop bits. 2 = 8 EVEN 1 – 8 data bits, even parity, one stop bit. 3 = 8 ODD 1 – 8 data bits, odd parity, one stop bit.	<b>0...3</b>
5204	<b>OK MESSAGES</b> Contains a count of valid messages received by the drive. <ul style="list-style-type: none"> <li>During normal operation, this counter is increasing constantly.</li> </ul>	<b>0...65535</b>
5205	<b>PARITY ERRORS</b> Contains a count of the characters with a parity error that is received from the bus. For high counts, check: <ul style="list-style-type: none"> <li>Parity settings of devices connected on the bus – they must not differ.</li> <li>Ambient electro-magnetic noise levels – high noise levels generate errors.</li> </ul>	<b>0...65535</b>
5206	<b>FRAME ERRORS</b> Contains a count of the characters with a framing error that the bus receives. For high counts, check: <ul style="list-style-type: none"> <li>Communication speed settings of devices connected on the bus – they must not differ.</li> <li>Ambient electro-magnetic noise levels – high noise levels generate errors.</li> </ul>	<b>0...65535</b>

Code	Description	Range
5207	<p><b>BUFFER OVERRUNS</b></p> <p>Contains a count of the characters received that cannot be placed in the buffer.</p> <ul style="list-style-type: none"> <li>• Longest possible message length for the drive is 128 bytes.</li> <li>• Received messages exceeding 128 bytes overflow the buffer. The excess characters are counted.</li> </ul>	<b>0...65535</b>
5208	<p><b>CRC ERRORS</b></p> <p>Contains a count of the messages with a CRC error that the drive receives. For high counts, check:</p> <ul style="list-style-type: none"> <li>• Ambient electro-magnetic noise levels – high noise levels generate errors.</li> <li>• CRC calculations for possible errors.</li> </ul>	<b>0...65535</b>

## Group 53: EFB PROTOCOL

This group defines set-up variables used for an embedded fieldbus (EFB) communication protocol. Refer to the communication protocol documentation for more information on these parameters.

Code	Description	Range
5301	<b>EFB PROTOCOL ID</b> Contains the identification and program revision of the protocol. • Format: XYY, where xx = protocol ID, and YY = program revision.	<b>0...0xFFFF</b>
5302	<b>EFB STATION ID</b> Defines the node address of the RS485 link. • The node address on each unit must be unique.	<b>0...65535</b>
5303	<b>EFB BAUD RATE</b> Defines the communication speed of the RS485 link in kbits per second (kb/s). 1.2 kb/s 2.4 kb/s 4.8 kb/s 9.6 kb/s 19.2 kb/s 38.4 kb/s 57.6 kb/s 76.8 kb/s	<b>1.2, 2.4, 4.8, 9.6, 19.2, 38.4, 57.6, 76.8 kb/s</b>
5304	<b>EFB PARITY</b> Defines the data length parity and stop bits to be used with the RS485 link communication. • The same settings must be used in all on-line stations. 0 = 8 NONE 1 – 8 data bits, no parity, one stop bit. 1 = 8 NONE 2 – 8 data bits, no parity, two stop bits. 2 = 8 EVEN 1 – 8 data bits, even parity, one stop bit. 3 = 8 ODD 1 – 8 data bits, odd parity, one stop bit.	<b>0...3</b>
5305	<b>EFB CTRL PROFILE</b> Selects the communication profile used by the EFB protocol. 0 = ABB DRV LIM – Operation of the Control Word and Status Word conforms to ABB Drives Profile, as used in ACS400. 1 = DCU PROFILE – Operation of Control/Status Words conforms to 32-bit DCU Profile. 2 = ABB DRV FULL – Operation of Control/Status Words conforms to ABB Drives Profile, as used in ACS600/800.	<b>0...2</b>
5306	<b>EFB OK MESSAGES</b> Contains a count of valid messages received by the drive. • During normal operation, this counter is increasing constantly.	<b>0...65535</b>

Code	Description	Range
5307	<b>EFB CRC ERRORS</b> Contains a count of the messages with a CRC error received by the drive. For high counts, check: <ul style="list-style-type: none"> <li>• Ambient electro-magnetic noise levels – high noise levels generate errors.</li> <li>• CRC calculations for possible errors.</li> </ul>	<b>0...65535</b>
5308	<b>EFB UART ERRORS</b> Contains a count of the messages with a character error received by the drive.	<b>0...65535</b>
5309	<b>EFB STATUS</b> Contains the status of the EFB protocol. 0 = IDLE – EFB protocol is configured, but not receiving any messages. 1 = EXECUT INIT – EFB protocol is initializing. 2 = TIME OUT – A time-out has occurred in the communication between the network master and the EFB protocol. 3 = CONFIG ERROR – EFB protocol has a configuration error. 4 = OFF-LINE – EFB protocol is receiving messages that are NOT addressed to this drive. 5 = ON-LINE – EFB protocol is receiving messages that are addressed to this drive. 6 = RESET – EFB protocol is performing a hardware reset. 7 = LISTEN ONLY – EFB protocol is in listen-only mode.	<b>0...7</b>
5310	<b>EFB PAR 10</b> Protocol specific. See manuals <i>Embedded Fieldbus (EFB) Control</i> (3AFE68320658 [English]) and <i>BACnet® Protocol</i> (3AUA0000004591 [English])	<b>0...65535</b>
5311	<b>EFB PAR 11</b> See parameter 5310.	<b>0...65535</b>
5312	<b>EFB PAR 12</b> See parameter 5310.	<b>0...65535</b>
5313	<b>EFB PAR 13</b> See parameter 5310.	<b>0...65535</b>
5314	<b>EFB PAR 14</b> See parameter 5310.	<b>0...65535</b>
5315	<b>EFB PAR 15</b> See parameter 5310.	<b>0...65535</b>
5316	<b>EFB PAR 16</b> See parameter 5310.	<b>0...65535</b>
5317	<b>EFB PAR 17</b> See parameter 5310.	<b>0...65535</b>
5318	<b>EFB PAR 18</b> See parameter 5310.	<b>0...65535</b>

<b>Code</b>	<b>Description</b>	<b>Range</b>
5319	<b>EFB PAR 19...EFB PAR 20</b>	<b>0...65535</b>
...	Reserved.	
5320		



## Group 64: LOAD ANALYZER

This group defines the load analyzer, which can be used for analyzing the customer's process and sizing the drive and the motor.

The peak value is logged at 2 ms level, and the distribution loggers are updated on 0.2 s (200 ms) time level. Three different values can be logged.

1. Amplitude logger 1: The measured current is logged continuously. The distribution as a percentage of the nominal current  $I_{2N}$  is shown in ten classes.
2. Peak value logger: One signal in group 1 can be logged for the peak (maximum) value. The peak value of the signal, peak time (time when the peak value was detected) as well the frequency, current and DC voltage at the peak time are shown.
3. Amplitude logger 2: One signal in group 1 can be logged for amplitude distribution. The base value (100% value) can be set by the user.

The first logger cannot be reset. The other two loggers can be reset by a user-defined method. They are also reset if either of the signals or the peak value filter time is changed.

Code	Description	Range
6401	<b>PVL SIGNAL</b> Defines (by number) the signal logged for peak value. Any parameter number in <a href="#">Group 01: OPERATING DATA</a> can be selected. 100 = NOT SELECTED – No signal (parameter) logged for the peak value. 101...178 – Logs parameter 0101...0178.	<b>100...178</b>
6402	<b>PVL FILTER TIME</b> Defines the filter time in seconds for peak value logging.	<b>0.0...120.0 s</b>
6403	<b>LOGGERS RESET</b> Defines the source for the reset of peak value logger and amplitude logger 2. 0 = NOT SEL – No reset selected. 1 = DI1 – Reset loggers on the rising edge of digital input DI1. 2...6 = DI2...DI6 – Reset loggers on the rising edge of digital input DI2...DI6. 7 = RESET – Reset loggers. Parameter is set to NOT SEL. -1 = DI1(INV)– Reset loggers on the falling edge of digital input DI1. -2...-6 = DI2(INV)...DI6(INV) – Reset loggers on the falling edge of digital input DI2...DI6.	<b>-6...7</b>

Code	Description	Range
6404	<b>AL2 SIGNAL</b> Defines the signal logged for amplitude logger 2. Any parameter number in <i>Group 01: OPERATING DATA</i> can be selected. 100 = NOT SELECTED – No signal (parameter) logged for amplitude distribution. 101...178 – Logs parameter 0101...0178.	<b>100...178</b>
6405	<b>AL2 SIGNAL BASE</b> Defines the base value from which the percentage distribution is calculated. • Representation and default value depends on the signal selected with parameter 6404 AL2 SIGNAL.	
6406	<b>PEAK VALUE</b> Detected peak value of the signal selected with parameter 6401 PLV SIGNAL.	
6407	<b>PEAK TIME 1</b> Date of the peak value detection. • Format: Date if the real time clock is operating (dd.mm.yy). / The number of days elapsed after the power-on if the real time clock is not used, or was not set (xx d).	
6408	<b>PEAK TIME 2</b> Time of the peak value detection. • Format: hours:minutes:seconds.	
6409	<b>CURRENT AT PEAK</b> Current at the moment of the peak value (amperes).	
6410	<b>UDC AT PEAK</b> DC voltage at the moment of the peak value (volts).	
6411	<b>FREQ AT PEAK</b> Output frequency at the moment of the peak value (herzes).	
6412	<b>TIME OF RESET 1</b> Last reset date of the peak logger and amplitude logger 2. • Format: Date if the real time clock is operating (dd.mm.yy). / The number of days elapsed after the power-on if the real time clock is not used, or was not set (xx d).	
6413	<b>TIME OF RESET 2</b> Last reset time of the peak logger and amplitude logger 2. • Format: hours:minutes:seconds.	
6414	<b>AL1RANGE0TO10</b> Amplitude logger 1 (current in percent of nominal current $I_{2N}$ ) 0...10% distribution.	

Code	Description	Range
6415	<b>AL1RANGE10TO20</b> Amplitude logger 1 (current in percent of nominal current $I_{2N}$ ) 10...20% distribution.	
6416	<b>AL1RANGE20TO30</b> Amplitude logger 1 (current in percent of nominal current $I_{2N}$ ) 20...30% distribution.	
6417	<b>AL1RANGE30TO40</b> Amplitude logger 1 (current in percent of nominal current $I_{2N}$ ) 30...40% distribution.	
6418	<b>AL1RANGE40TO50</b> Amplitude logger 1 (current in percent of nominal current $I_{2N}$ ) 40...50% distribution.	
6419	<b>AL1RANGE50TO60</b> Amplitude logger 1 (current in percent of nominal current $I_{2N}$ ) 50...60% distribution.	
6420	<b>AL1RANGE60TO70</b> Amplitude logger 1 (current in percent of nominal current $I_{2N}$ ) 60...70% distribution.	
6421	<b>AL1RANGE70TO80</b> Amplitude logger 1 (current in percent of nominal current $I_{2N}$ ) 70...80% distribution.	
6422	<b>AL1RANGE80TO90</b> Amplitude logger 1 (current in percent of nominal current $I_{2N}$ ) 80...90% distribution.	
6423	<b>AL1RANGE90TO</b> Amplitude logger 1 (current in percent of nominal current $I_{2N}$ ) over 90% distribution.	
6424	<b>AL2RANGE0TO10</b> Amplitude logger 2 (signal selection with parameter 6404) 0...10% distribution.	
6425	<b>AL2RANGE10TO20</b> Amplitude logger 2 (signal selection with parameter 6404) 10...20% distribution.	
6426	<b>AL2RANGE20TO30</b> Amplitude logger 2 (signal selection with parameter 6404) 20...30% distribution.	
6427	<b>AL2RANGE30TO40</b> Amplitude logger 2 (signal selection with parameter 6404) 30...40% distribution.	

<b>Code</b>	<b>Description</b>	<b>Range</b>
6428	<b>AL2RANGE40TO50</b> Amplitude logger 2 (signal selection with parameter 6404) 40...50% distribution.	
6429	<b>AL2RANGE50TO60</b> Amplitude logger 2 (signal selection with parameter 6404) 50...60% distribution.	
6430	<b>AL2RANGE60TO70</b> Amplitude logger 2 (signal selection with parameter 6404) 60...70% distribution.	
6431	<b>AL2RANGE70TO80</b> Amplitude logger 2 (signal selection with parameter 6404) 70...80% distribution.	
6432	<b>AL2RANGE80TO90</b> Amplitude logger 2 (signal selection with parameter 6404) 80...90% distribution.	
6433	<b>AL2RANGE90TO</b> Amplitude logger 2 (signal selection with parameter 6404) over 90% distribution.	

## Group 81: PFA CONTROL

This group defines a Pump and Fan Alternation (PFA) mode of operation. The major features of PFA are:

- The ACH550 controls the motor of pump 1, varying the motor speed to control the pump capacity. This motor is the speed regulated motor.
- Direct line connections power the motor of pump 2 and pump 3, etc. The ACH550 switches pump 2 (and then pump 3, etc.) on and off as needed. These motors are auxiliary motors.
- The ACH550 PID control uses two signals: a process reference and an actual value feedback. The PID controller adjusts the speed (frequency) of the first pump so that the actual value follows the process reference.
- When demand (defined by the process reference) exceeds the first motor's capacity (user defined as a frequency limit), the PFA automatically starts an auxiliary pump. The PFA also reduces the speed of the first pump to account for the auxiliary pump's addition to total output. Then, as before, the PID controller adjusts the speed (frequency) of the first pump so that the actual value follows the process reference. If demand continues to increase, PFA adds additional auxiliary pumps, using the same process.
- When demand drops, so that the first pump speed falls below a minimum limit (user defined by a frequency limit), the PFA automatically stops an auxiliary pump. The PFA also increases the speed of the first pump to account for the auxiliary pump's missing output.
- An Interlock function (when enabled) identifies off-line (out of service) motors, and the PFA skips to the next available motor in the sequence.
- An Autochange function (when enabled and with the appropriate switchgear) equalises duty time between the pump motors. Autochange periodically increments the position of each motor in the rotation – the speed-regulated motor becomes the last auxiliary motor, the first auxiliary motor becomes the speed regulated motor, etc.

Code	Description	Range
8103	<p><b>REFERENCE STEP 1</b></p> <p>Sets a percentage value that is added to the process reference.</p> <ul style="list-style-type: none"> <li>• Applies only when <u>at least one</u> auxiliary (constant speed) motor is running.</li> <li>• Default value is 0%.</li> </ul> <p><b>Example:</b> An ACH550 operates three parallel pumps that maintain water pressure in a pipe.</p> <ul style="list-style-type: none"> <li>• 4011 INTERNAL SETPNT sets a constant pressure reference that controls the pressure in the pipe.</li> <li>• The speed regulated pump operates alone at low water consumption levels.</li> <li>• As water consumption increases, the first auxiliary (constant speed) pump starts to operate, then the second one.</li> <li>• As flow increases, the pressure at the output end of the pipe drops relative to the pressure measured at the input end. As auxiliary motors step in to increase the flow, the adjustments below correct the reference to more closely match the output pressure.</li> <li>• When the first auxiliary pump operates, increase the reference with parameter 8103 REFERENCE STEP 1.</li> <li>• When two auxiliary pumps operate, increase the reference with parameter 8103 REFERENCE STEP 1 + parameter 8104 REFERENCE STEP 2.</li> <li>• When three auxiliary pumps operate, increase the reference with parameter 8103 REFERENCE STEP 1 + parameter 8104 REFERENCE STEP 2 + parameter 8105 REFERENCE STEP 3.</li> </ul>	<b>0.0...100%</b>
8104	<p><b>REFERENCE STEP 2</b></p> <p>Sets a percentage value that is added to the process reference.</p> <ul style="list-style-type: none"> <li>• Applies only when <u>at least two</u> auxiliary (constant speed) motors are running.</li> <li>• See parameter 8103 REFERENCE STEP1.</li> </ul>	<b>0.0...100%</b>
8105	<p><b>REFERENCE STEP 3</b></p> <p>Sets a percentage value that is added to the process reference.</p> <ul style="list-style-type: none"> <li>• Applies only when <u>at least three</u> auxiliary (constant speed) motors are running.</li> <li>• See parameter 8103 REFERENCE STEP1.</li> </ul>	<b>0.0...100%</b>


Code	Description	Range
8109	<p><b>START FREQ 1</b></p> <p>Sets the frequency limit used to start the first auxiliary motor. The first auxiliary motor starts if:</p> <ul style="list-style-type: none"> <li>no auxiliary motors are running.</li> <li>ACH550 output frequency exceeds the limit: <math>8109 + 1</math> Hz.</li> <li>output frequency stays above a relaxed limit <math>(8109 - 1)</math> Hz for at least the time: 8115 AUX MOT START D.</li> </ul> <p>After the first auxiliary motor starts:</p> <ul style="list-style-type: none"> <li>Output frequency decreases by the value <math>(8109 \text{ START FREQ } 1) - (8112 \text{ LOW FREQ } 1)</math>.</li> <li>In effect, the output of the speed regulated motor drops to compensate for the input from the auxiliary motor.</li> </ul> <p>See figure, where:</p> <ul style="list-style-type: none"> <li>A = <math>(8109 \text{ START FREQ } 1) - (8112 \text{ LOW FREQ } 1)</math></li> <li>B = Output frequency increase during the start delay.</li> <li>C = Diagram showing auxiliary motor's run status as frequency increases (1 = On).</li> </ul> <p><b>Note:</b> 8109 START FREQ 1 value must be between:</p> <ul style="list-style-type: none"> <li>8112 LOW FREQ 1</li> <li><math>(2008 \text{ MAXIMUM FREQ}) - 1</math>.</li> </ul>	<p><b>0.0...500 Hz</b></p>
8110	<p><b>START FREQ 2</b></p> <p>Sets the frequency limit used to start the second auxiliary motor.</p> <ul style="list-style-type: none"> <li>See 8109 START FREQ 1 for a complete description of the operation.</li> </ul> <p>The second auxiliary motor starts if:</p> <ul style="list-style-type: none"> <li>one auxiliary motor is running.</li> <li>ACH550 output frequency exceeds the limit <math>8110 + 1</math>.</li> <li>output frequency stays above the relaxed limit <math>(8110 - 1)</math> Hz for at least the time 8115 AUX MOT START D.</li> </ul>	<p><b>0.0...500 Hz</b></p>


Code	Description	Range
8111	<p><b>START FREQ 3</b></p> <p>Sets the frequency limit used to start the third auxiliary motor.</p> <ul style="list-style-type: none"> <li>See 8109 START FREQ 1 for a complete description of the operation.</li> </ul> <p>The third auxiliary motor starts if:</p> <ul style="list-style-type: none"> <li>two auxiliary motors are running.</li> <li>ACH550 output frequency exceeds the limit <math>8111 + 1</math> Hz.</li> <li>output frequency stays above the relaxed limit (<math>8111 - 1</math> Hz) for at least the time 8115 AUX MOT START D.</li> </ul>	<b>0.0...500 Hz</b>
8112	<p><b>LOW FREQ 1</b></p> <p>Sets the frequency limit used to stop the first auxiliary motor. The first auxiliary motor stops if:</p> <ul style="list-style-type: none"> <li>the first auxiliary motor is running alone.</li> <li>ACH550 output frequency drops below the limit: <math>8112 - 1</math>.</li> <li>output frequency stays below the relaxed limit (<math>8112 + 1</math> Hz) for at least the time: 8116 AUX MOT STOP D.</li> </ul> <p>After the first auxiliary motor stops:</p> <ul style="list-style-type: none"> <li>Output frequency increases by the value <math>(8109 \text{ START FREQ } 1) - (8112 \text{ LOW FREQ } 1)</math>.</li> <li>In effect, the output of the speed regulated motor increases to compensate for the loss of the auxiliary motor.</li> </ul> <p>See figure, where:</p> <ul style="list-style-type: none"> <li>A = <math>(8109 \text{ START FREQ } 1) - (8112 \text{ LOW FREQ } 1)</math></li> <li>B = Output frequency decrease during the stop delay.</li> <li>C = Diagram showing auxiliary motor's run status as frequency decreases (1 = On).</li> <li>Grey path = Shows hysteresis – if time is reversed, the path backwards is not the same. For details on the path for starting, see the diagram at 8109 START FREQ 1.</li> </ul> <p><b>Note:</b> 8112 LOW FREQ 1 value must be between:</p> <ul style="list-style-type: none"> <li><math>(2007 \text{ MINIMUM FREQ}) + 1</math> and 8109 START FREQ 1</li> </ul>	




Code	Description	Range
8113	<p><b>LOW FREQ 2</b></p> <p>Sets the frequency limit used to stop the second auxiliary motor.</p> <ul style="list-style-type: none"> <li>• See 8112 LOW FREQ 1 for a complete description of the operation.</li> </ul> <p>The second auxiliary motor stops if:</p> <ul style="list-style-type: none"> <li>• two auxiliary motors are running.</li> <li>• ACH550 output frequency drops below the limit 8113 - 1.</li> <li>• output frequency stays below the relaxed limit (8113 + 1 Hz) for at least the time 8116 AUX MOT STOP D.</li> </ul>	<b>0.0...500 Hz</b>
8114	<p><b>LOW FREQ 3</b></p> <p>Sets the frequency limit used to stop the third auxiliary motor.</p> <ul style="list-style-type: none"> <li>• See 8112 LOW FREQ 1 for a complete description of the operation.</li> </ul> <p>The third auxiliary motor stops if:</p> <ul style="list-style-type: none"> <li>• three auxiliary motors are running.</li> <li>• ACH550 output frequency drops below the limit: 8114 - 1.</li> <li>• output frequency stays below the relaxed limit (8114 + 1 Hz) for at least the time 8116 AUX MOT STOP D.</li> </ul>	<b>0.0...500 Hz</b>
8115	<p><b>AUX MOT START D</b></p> <p>Sets the Start Delay for the auxiliary motors.</p> <ul style="list-style-type: none"> <li>• The output frequency must remain above the start frequency limit (parameter 8109, 8110 or 8111) for this time period before the auxiliary motor starts.</li> <li>• See 8109 START FREQ 1 for a complete description of the operation.</li> </ul>	<b>0.0...3600 s</b>
8116	<p><b>AUX MOT STOP D</b></p> <p>Sets the Stop Delay for the auxiliary motors.</p> <ul style="list-style-type: none"> <li>• The output frequency must remain below the low frequency limit (parameter 8112, 8113 or 8114) for this time period before the auxiliary motor stops.</li> <li>• See 8112 LOW FREQ 1 for a complete description of the operation.</li> </ul>	<b>0.0...3600 s</b>

Code	Description	Range
8117	<p><b>NR OF AUX MOT</b></p> <p>Sets the number of auxiliary motors.</p> <ul style="list-style-type: none"> <li>• Each auxiliary motor requires a relay output, which the drive uses to send start/stop signals.</li> <li>• The Autochange function, if used, requires an additional relay output for the speed regulated motor.</li> </ul> <p>The following describes the set-up of the required relay outputs.</p> <p><b>Relay outputs</b></p> <p>As noted above, each auxiliary motor requires a relay output, which the drive uses to send start/stop signals. The following describes how the drive keeps track of motors and relays.</p> <ul style="list-style-type: none"> <li>• The ACH550 provides relay outputs RO1...RO3.</li> <li>• An external digital output module can be added to provide relay outputs RO4...RO6.</li> <li>• Parameters 1401...1403 and 1410...1412 define, respectively, how relays RO1...RO6 are used – the parameter value 31 (PFA) defines the relay as used for PFA.</li> <li>• The ACH550 assigns auxiliary motors to relays in ascending order. If the Autochange function is disabled, the first auxiliary motor is the one connected to the first relay with a parameter setting = 31 (PFA), and so on. If the Autochange function is used, the assignments rotate. Initially, the speed regulated motor is the one connected to the first relay with the parameter setting = 31 (PFA), the first auxiliary motor is the one connected to the second relay with a parameter setting = 31 (PFA), and so on.</li> <li>• The fourth auxiliary motor uses the same reference step, low frequency and start frequency values as the third auxiliary motor.</li> </ul>	0...4

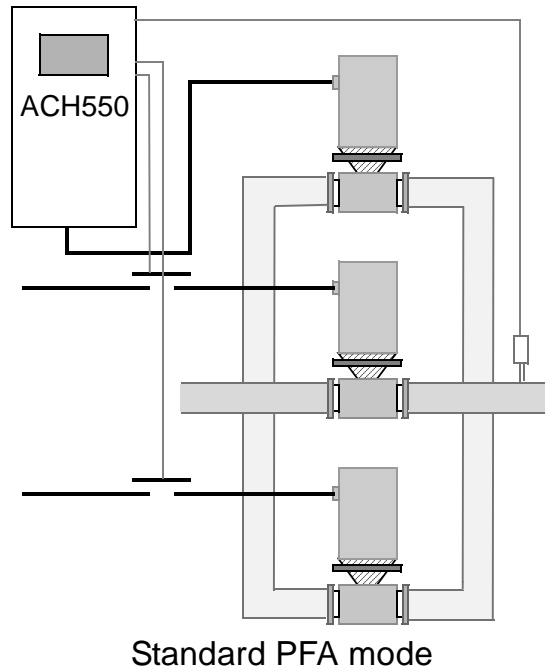


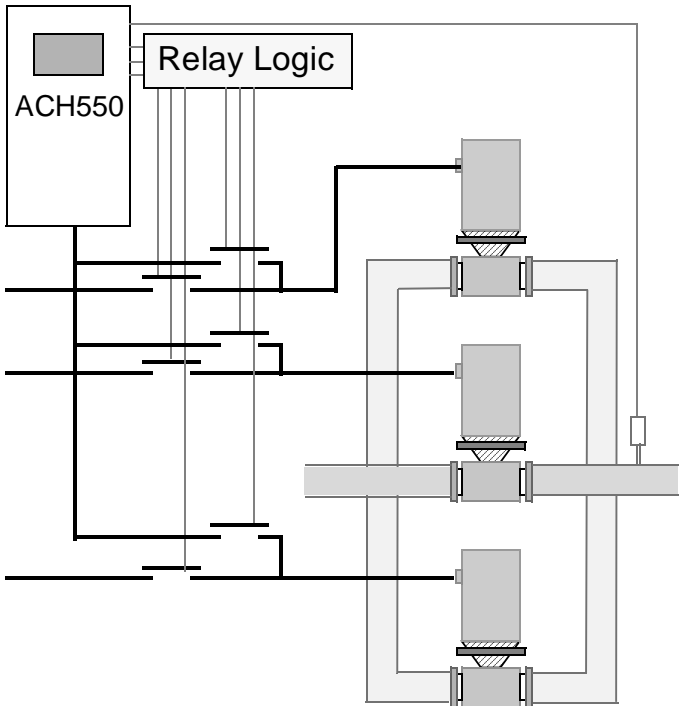
Code	Description	Range																																																																																																																													
	<div style="text-align: center;">  <p>PFA with Autochange mode</p> </div> <p>The table below shows the ACH550 PFA motor assignments for some typical settings in the Relay Output parameters (1401...1403 and 1410...1412), where the settings are either = 31 (PFA), or = X (anything but 31), and where the Autochange function is disabled (8118 AUTOCHNG INTERV = 0.0).</p> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th colspan="7">Parameter setting</th> <th colspan="6">ACH550 relay assignment</th> </tr> <tr> <th>1</th><th>4</th><th>0</th><th>1</th><th>1</th><th>1</th><th>8</th> <th colspan="6">Autochange disabled</th> </tr> <tr> <th>4</th><th>0</th><th>1</th><th>2</th><th>3</th><th>0</th><th>1</th><th>2</th><th>7</th> <th>RO1</th><th>RO2</th><th>RO3</th><th>RO4</th><th>RO5</th><th>RO6</th> </tr> </thead> <tbody> <tr> <td>31</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>1</td><td>Aux.</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td> </tr> <tr> <td>31</td><td>31</td><td>X</td><td>X</td><td>X</td><td>X</td><td>2</td><td>Aux.</td><td>Aux.</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td> </tr> <tr> <td>31</td><td>31</td><td>31</td><td>X</td><td>X</td><td>X</td><td>3</td><td>Aux.</td><td>Aux.</td><td>Aux.</td><td>X</td><td>X</td><td>X</td><td>X</td> </tr> <tr> <td>X</td><td>31</td><td>31</td><td>X</td><td>X</td><td>X</td><td>2</td><td>X</td><td>Aux.</td><td>Aux.</td><td>X</td><td>X</td><td>X</td><td>X</td> </tr> <tr> <td>X</td><td>X</td><td>X</td><td>31</td><td>X</td><td>31</td><td>2</td><td>X</td><td>X</td><td>X</td><td>Aux.</td><td>X</td><td>X</td><td>Aux.</td> </tr> <tr> <td>31</td><td>31</td><td>X</td><td>X</td><td>X</td><td>X</td><td>1*</td><td>Aux.</td><td>Aux.</td><td>X</td><td>X</td><td>X</td><td>X</td><td>X</td> </tr> </tbody> </table> <p>* One additional relay output for the PFA that is in use. One motor is in "sleep" when the other is rotating.</p>	Parameter setting							ACH550 relay assignment						1	4	0	1	1	1	8	Autochange disabled						4	0	1	2	3	0	1	2	7	RO1	RO2	RO3	RO4	RO5	RO6	31	X	X	X	X	X	1	Aux.	X	X	X	X	X	X	31	31	X	X	X	X	2	Aux.	Aux.	X	X	X	X	X	31	31	31	X	X	X	3	Aux.	Aux.	Aux.	X	X	X	X	X	31	31	X	X	X	2	X	Aux.	Aux.	X	X	X	X	X	X	X	31	X	31	2	X	X	X	Aux.	X	X	Aux.	31	31	X	X	X	X	1*	Aux.	Aux.	X	X	X	X	X	
Parameter setting							ACH550 relay assignment																																																																																																																								
1	4	0	1	1	1	8	Autochange disabled																																																																																																																								
4	0	1	2	3	0	1	2	7	RO1	RO2	RO3	RO4	RO5	RO6																																																																																																																	
31	X	X	X	X	X	1	Aux.	X	X	X	X	X	X																																																																																																																		
31	31	X	X	X	X	2	Aux.	Aux.	X	X	X	X	X																																																																																																																		
31	31	31	X	X	X	3	Aux.	Aux.	Aux.	X	X	X	X																																																																																																																		
X	31	31	X	X	X	2	X	Aux.	Aux.	X	X	X	X																																																																																																																		
X	X	X	31	X	31	2	X	X	X	Aux.	X	X	Aux.																																																																																																																		
31	31	X	X	X	X	1*	Aux.	Aux.	X	X	X	X	X																																																																																																																		

Code	Description	Range																																																																																																																																		
	<p>The table below shows the ACH550 PFA motor assignments for some typical settings in the Relay Output parameters (1401...1403 and 1410...1412), where the settings are either = 31 (PFA), or = X (anything but 31), and where the Autochange function is enabled (8118 AUTOCHNG INTERV = value &gt; 0.0).</p> <table border="1"> <thead> <tr> <th colspan="7">Parameter setting</th> <th colspan="6">ACH550 relay assignment</th> </tr> <tr> <th>1</th> <th>1</th> <th>1</th> <th>1</th> <th>1</th> <th>1</th> <th>8</th> <th colspan="6">Autochange enabled</th> </tr> <tr> <th>4</th> <th>4</th> <th>4</th> <th>4</th> <th>4</th> <th>4</th> <th>1</th> <th>RO1</th> <th>RO2</th> <th>RO3</th> <th>RO4</th> <th>RO5</th> <th>RO6</th> </tr> <tr> <th>0</th> <th>0</th> <th>0</th> <th>1</th> <th>1</th> <th>1</th> <th>1</th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> </tr> <tr> <th>1</th> <th>2</th> <th>3</th> <th>0</th> <th>1</th> <th>2</th> <th>7</th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> </tr> </thead> <tbody> <tr> <td>31</td> <td>31</td> <td>X</td> <td>X</td> <td>X</td> <td>X</td> <td>1</td> <td>PFA</td> <td>PFA</td> <td>X</td> <td>X</td> <td>X</td> <td>X</td> </tr> <tr> <td>31</td> <td>31</td> <td>31</td> <td>X</td> <td>X</td> <td>X</td> <td>2</td> <td>PFA</td> <td>PFA</td> <td>PFA</td> <td>X</td> <td>X</td> <td>X</td> </tr> <tr> <td>x</td> <td>31</td> <td>31</td> <td>X</td> <td>X</td> <td>X</td> <td>1</td> <td>X</td> <td>PFA</td> <td>PFA</td> <td>X</td> <td>X</td> <td>X</td> </tr> <tr> <td>X</td> <td>X</td> <td>X</td> <td>31</td> <td>X</td> <td>31</td> <td>1</td> <td>X</td> <td>X</td> <td>X</td> <td>PFA</td> <td>X</td> <td>PFA</td> </tr> <tr> <td>31</td> <td>31</td> <td>X</td> <td>X</td> <td>X</td> <td>X</td> <td>0**</td> <td>PFA</td> <td>PFA</td> <td>X</td> <td>X</td> <td>X</td> <td>X</td> </tr> </tbody> </table> <p>** No auxiliary motors, but the autochange function is in use. Working as standard PID control.</p>		Parameter setting							ACH550 relay assignment						1	1	1	1	1	1	8	Autochange enabled						4	4	4	4	4	4	1	RO1	RO2	RO3	RO4	RO5	RO6	0	0	0	1	1	1	1							1	2	3	0	1	2	7							31	31	X	X	X	X	1	PFA	PFA	X	X	X	X	31	31	31	X	X	X	2	PFA	PFA	PFA	X	X	X	x	31	31	X	X	X	1	X	PFA	PFA	X	X	X	X	X	X	31	X	31	1	X	X	X	PFA	X	PFA	31	31	X	X	X	X	0**	PFA	PFA	X	X	X	X
Parameter setting							ACH550 relay assignment																																																																																																																													
1	1	1	1	1	1	8	Autochange enabled																																																																																																																													
4	4	4	4	4	4	1	RO1	RO2	RO3	RO4	RO5	RO6																																																																																																																								
0	0	0	1	1	1	1																																																																																																																														
1	2	3	0	1	2	7																																																																																																																														
31	31	X	X	X	X	1	PFA	PFA	X	X	X	X																																																																																																																								
31	31	31	X	X	X	2	PFA	PFA	PFA	X	X	X																																																																																																																								
x	31	31	X	X	X	1	X	PFA	PFA	X	X	X																																																																																																																								
X	X	X	31	X	31	1	X	X	X	PFA	X	PFA																																																																																																																								
31	31	X	X	X	X	0**	PFA	PFA	X	X	X	X																																																																																																																								

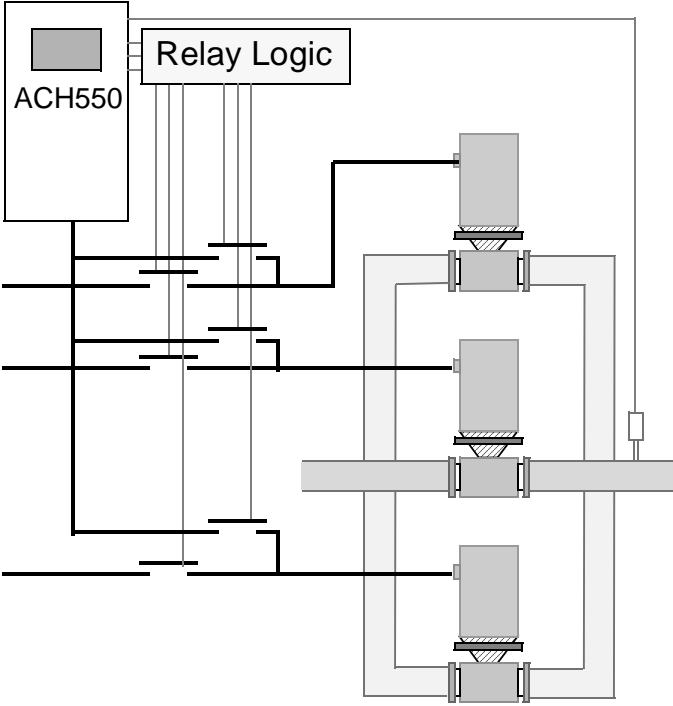Code	Description	Range
8118	<p><b>AUTOCHNG INTERV</b></p> <p>Controls operation of the Autochange function and sets the interval between changes.</p> <ul style="list-style-type: none"> <li>• The Autochange time interval only applies to the time when the speed regulated motor is running.</li> <li>• See parameter 8119 AUTOCHNG LEVEL for an overview of the Autochange function.</li> <li>• The drive always coasts to stop when autochange is performed.</li> <li>• Autochange enabled requires parameter 8120 INTERLOCKS = value &gt; 0.</li> </ul> <p>-0.1 = TEST MODE – Forces the interval to value 36...48 s.  0.0 = NOT SEL – Disables the Autochange function.  0.1...336.0 – The operating time interval (the time when the start signal is on) between automatic motor changes.</p> <p><b>⚠ WARNING!</b> When enabled, the Autochange function requires the interlocks (8120 interlocks = value &gt; 0) enabled. During autochange the power output is interrupted and the drive coasts to stop, preventing damage to the contacts.</p>  <p>PFA with Autochange mode</p>	0.0...336.0 h

Code	Description	Range
8119	<p><b>AUTOCHNG LEVEL</b></p> <p>Sets an upper limit, as a percentage of output capacity, for the autochange logic. When the output from the PID/PFA control block exceeds this limit, autochange is prevented. For example, use this parameter to deny autochange when the Pump-Fan system is operating near maximum capacity.</p> <p><b>Autochange overview</b></p> <p>The purpose of the autochange operation is to equalise duty time between multiple motors used in a system. At each autochange operation:</p> <ul style="list-style-type: none"> <li>• A different motor takes a turn connected to the ACH550 output – the speed regulated motor.</li> <li>• The starting order of the other motors rotates.</li> </ul> <p>The Autochange function requires:</p> <ul style="list-style-type: none"> <li>• external switchgear for changing the drive's output power connections.</li> <li>• parameter 8120 INTERLOCKS = value &gt; 0.</li> </ul> <p>Autochange is performed when:</p> <ul style="list-style-type: none"> <li>• The running time since the previous autochange reaches the time set by parameter 8118 AUTOCHNG INTERV.</li> <li>• the PFA input is below the level set by parameter 8119 AUTOCHNG LEVEL.</li> </ul>	0.0...100.0%

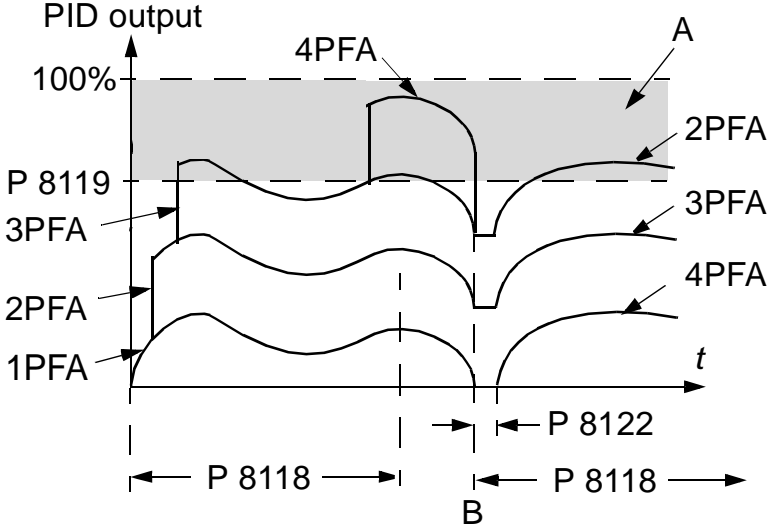Code	Description	Range
	<p><b>Note:</b> The ACH550 always coasts to stop when autochange is performed.</p> <p>In an autochange, the Autochange function does all of the following (see the figure):</p>  <p>A = Area above 8119 AUTOCHNG LEVEL – autochange not allowed.                      B = Autochange occurs.                      1PFA, etc. = PID output associated with each motor.</p>	<ul style="list-style-type: none"> <li>• Initiates a change when the running time, since the last autochange, reaches 8118 AUTOCHNG INTERV and PFA input is below limit 8119 AUTOCHNG LEVEL.</li> <li>• Stops the speed regulated motor.</li> <li>• Switches off the contactor of the speed regulated motor.</li> <li>• Increments the starting order counter, to change the starting order for the motors.</li> <li>• Identifies the next motor in line to be the speed regulated motor.</li> <li>• Switches off the above motor's contactor if the motor was running. Any other running motors are not interrupted.</li> <li>• Switches on the contactor of the new speed regulated motor. The autochange switchgear connects this motor to the ACH550 power output.</li> <li>• Delays motor start for the time 8122 PFA START DELAY.</li> <li>• Starts the speed regulated motor.</li> <li>• Identifies the next constant speed motor in the rotation.</li> <li>• Switches the above motor on, but only if the new speed regulated motor had been running (as a constant speed motor) – This step keeps an equal number of motors running before and after autochange.</li> <li>• Continues with normal PFA operation.</li> </ul>

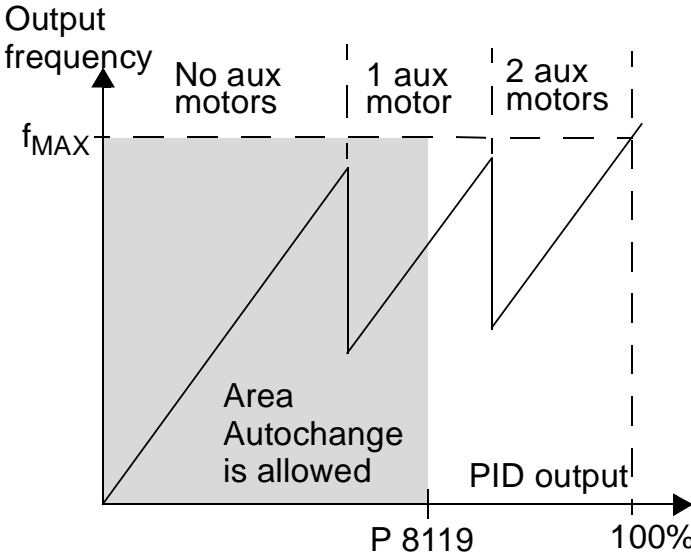Code	Description	Range
	<p><b>Starting order counter</b></p> <p>The operation of the starting order counter:</p> <ul style="list-style-type: none"> <li>The relay output parameter definitions (1401...1403 and 1410...1412) establish the initial motor sequence. (The lowest parameter number with a value 31 (PFA) identifies the relay connected to 1PFA, the first motor, and so on.)</li> <li>Initially, 1PFA = speed regulated motor, 2PFA = 1st auxiliary motor, etc.</li> <li>The first autochange shifts the sequence to: 2PFA = speed regulated motor, 3PFA = 1st auxiliary motor, ..., 1PFA = last auxiliary motor.</li> <li>The next autochange shifts the sequence again, and so on.</li> <li>If the autochange cannot start a needed motor because all inactive motors are interlocked, the drive displays an alarm (2015, PFA I LOCK).</li> <li>When the ACH550 power supply is switched off, the counter preserves the current Autochange rotation positions in permanent memory. When power is restored, the Autochange rotation starts at the position stored in memory.</li> <li>If the PFA relay configuration is changed (or if the PFA enable value is changed), the rotation is reset. (See the first bullet above.)</li> </ul>	 <p>The graph plots Output frequency (y-axis, with <math>f_{MAX}</math> marked) against PID output (x-axis, with 100% marked). The frequency increases linearly with PID output. Vertical dashed lines indicate transitions between motor sequences: 'No aux motors', '1 aux motor', and '2 aux motors'. At the transition to '1 aux motor', the frequency drops to a lower level and then continues to rise. A shaded area between the 'No aux motors' and '1 aux motor' transitions is labeled 'Area Autochange is allowed'. A vertical dashed line at PID output 'P 8119' is also shown.</p>



Code	Description	Range
8120	<p data-bbox="291 192 519 226"><b>INTERLOCKS</b></p> <p data-bbox="291 237 1351 309">Defines operation of the Interlock function. When the Interlock function is enabled:</p> <ul data-bbox="291 315 1351 499" style="list-style-type: none"> <li data-bbox="291 315 1177 349">• An interlock is active when its command signal is absent.</li> <li data-bbox="291 349 1213 383">• An interlock is inactive when its command signal is present.</li> <li data-bbox="291 383 1351 499">• The ACH550 will not start if a start command occurs when the speed regulated motor's interlock is active – the control panel displays an alarm (2015, PFA I LOCK).</li> </ul> <p data-bbox="291 506 848 539">Wire each Interlock circuit as follows:</p> <ul data-bbox="291 546 1351 768" style="list-style-type: none"> <li data-bbox="291 546 1351 656">• Wire a contact of the motor's On/Off switch to the Interlock circuit – the drive's PFA logic can then recognise that the motor is switched off and start the next available motor.</li> <li data-bbox="291 656 1351 768">• Wire a contact of the motor thermal relay (or other protective device in the motor circuit) to the Interlock input – the drive's PFA logic can then recognise that a motor fault is activated and stop the motor.</li> </ul> <p data-bbox="291 775 1268 846">0 = NOT SEL – Disables the Interlock function. All digital inputs are available for other purposes.</p> <ul data-bbox="291 853 1318 922" style="list-style-type: none"> <li data-bbox="291 853 1318 922">• Requires 8118 AUTOCHNG INTERV = 0.0 (The Autochange function must be disabled if Interlock function is disabled.)</li> </ul>	<b>0...6</b>


Code	Description	Range																								
	<p>1 = DI1 – Enables the Interlock function, and assigns a digital input (starting with DI1) to the interlock signal for each PFA relay. These assignments are defined in the following table and depend on:</p> <ul style="list-style-type: none"> <li>• the number of PFA relays [number of parameters 1401...1403 and 1410...1412 with value = 31 (PFA)]</li> <li>• the Autochange function status (disabled if 8118 AUTOCHNG INTERV = 0.0, and otherwise enabled).</li> </ul>																									
	<table border="1"> <thead> <tr> <th>No. PFA relays</th> <th>Autochange disabled (P 8118)</th> <th>Autochange enabled (P 8118)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>DI1: Speed Reg Motor DI2...DI6: Free</td> <td>Not allowed</td> </tr> <tr> <td>1</td> <td>DI1: Speed Reg Motor DI2: First PFA Relay DI3...DI6: Free</td> <td>DI1: First PFA Relay DI2...DI6: Free</td> </tr> <tr> <td>2</td> <td>DI1: Speed Reg Motor DI2: First PFA Relay DI3: Second PFA Relay DI4...DI6: Free</td> <td>DI1: First PFA Relay DI2: Second PFA Relay DI3...DI6: Free</td> </tr> <tr> <td>3</td> <td>DI1: Speed Reg Motor DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5...DI6: Free</td> <td>DI1: First PFA Relay DI2: Second PFA Relay DI3: Third PFA Relay DI4...DI6: Free</td> </tr> <tr> <td>4</td> <td>DI1: Speed Reg Motor DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5: Fourth PFA Relay DI6: Free</td> <td>DI1: First PFA Relay DI2: Second PFA Relay DI3: Third PFA Relay DI4: Fourth PFA Relay DI5...DI6: Free</td> </tr> <tr> <td>5</td> <td>DI1: Speed Reg Motor DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5: Fourth PFA Relay DI6: Fifth PFA Relay</td> <td>DI1: First PFA Relay DI2: Second PFA Relay DI3: Third PFA Relay DI4: Fourth PFA Relay DI5: Fifth PFA Relay DI6: Free</td> </tr> <tr> <td>6</td> <td>Not allowed</td> <td>DI1: First PFA Relay DI2: Second PFA Relay DI3: Third PFA Relay DI4: Fourth PFA Relay DI5: Fifth PFA Relay DI6: Sixth PFA Relay</td> </tr> </tbody> </table>	No. PFA relays	Autochange disabled (P 8118)	Autochange enabled (P 8118)	0	DI1: Speed Reg Motor DI2...DI6: Free	Not allowed	1	DI1: Speed Reg Motor DI2: First PFA Relay DI3...DI6: Free	DI1: First PFA Relay DI2...DI6: Free	2	DI1: Speed Reg Motor DI2: First PFA Relay DI3: Second PFA Relay DI4...DI6: Free	DI1: First PFA Relay DI2: Second PFA Relay DI3...DI6: Free	3	DI1: Speed Reg Motor DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5...DI6: Free	DI1: First PFA Relay DI2: Second PFA Relay DI3: Third PFA Relay DI4...DI6: Free	4	DI1: Speed Reg Motor DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5: Fourth PFA Relay DI6: Free	DI1: First PFA Relay DI2: Second PFA Relay DI3: Third PFA Relay DI4: Fourth PFA Relay DI5...DI6: Free	5	DI1: Speed Reg Motor DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5: Fourth PFA Relay DI6: Fifth PFA Relay	DI1: First PFA Relay DI2: Second PFA Relay DI3: Third PFA Relay DI4: Fourth PFA Relay DI5: Fifth PFA Relay DI6: Free	6	Not allowed	DI1: First PFA Relay DI2: Second PFA Relay DI3: Third PFA Relay DI4: Fourth PFA Relay DI5: Fifth PFA Relay DI6: Sixth PFA Relay	
No. PFA relays	Autochange disabled (P 8118)	Autochange enabled (P 8118)																								
0	DI1: Speed Reg Motor DI2...DI6: Free	Not allowed																								
1	DI1: Speed Reg Motor DI2: First PFA Relay DI3...DI6: Free	DI1: First PFA Relay DI2...DI6: Free																								
2	DI1: Speed Reg Motor DI2: First PFA Relay DI3: Second PFA Relay DI4...DI6: Free	DI1: First PFA Relay DI2: Second PFA Relay DI3...DI6: Free																								
3	DI1: Speed Reg Motor DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5...DI6: Free	DI1: First PFA Relay DI2: Second PFA Relay DI3: Third PFA Relay DI4...DI6: Free																								
4	DI1: Speed Reg Motor DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5: Fourth PFA Relay DI6: Free	DI1: First PFA Relay DI2: Second PFA Relay DI3: Third PFA Relay DI4: Fourth PFA Relay DI5...DI6: Free																								
5	DI1: Speed Reg Motor DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5: Fourth PFA Relay DI6: Fifth PFA Relay	DI1: First PFA Relay DI2: Second PFA Relay DI3: Third PFA Relay DI4: Fourth PFA Relay DI5: Fifth PFA Relay DI6: Free																								
6	Not allowed	DI1: First PFA Relay DI2: Second PFA Relay DI3: Third PFA Relay DI4: Fourth PFA Relay DI5: Fifth PFA Relay DI6: Sixth PFA Relay																								


Code	Description	Range																								
	<p>2 = DI2 – Enables the Interlock function, and assigns a digital input (starting with DI2) to the interlock signal for each PFA relay. These assignments are defined in the following table and depend on:</p> <ul style="list-style-type: none"> <li>• the number of PFA relays [number of parameters 1401...1403 and 1410...1412 with value = 31 (PFA)]</li> <li>• the Autochange function status (disabled if 8118 AUTOCHNG INTERV = 0.0, and otherwise enabled).</li> </ul>																									
	<table border="1"> <thead> <tr> <th>No. PFA relays</th> <th>Autochange disabled (P 8118)</th> <th>Autochange enabled (P 8118)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>DI1: Free DI2: Speed Reg Motor DI3...DI6: Free</td> <td>Not allowed</td> </tr> <tr> <td>1</td> <td>DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4...DI6: Free</td> <td>DI1: Free DI2: First PFA Relay DI3...DI6: Free</td> </tr> <tr> <td>2</td> <td>DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4: Second PFA Relay DI5...DI6: Free</td> <td>DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4...DI6: Free</td> </tr> <tr> <td>3</td> <td>DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay DI6: Free</td> <td>DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5...DI6: Free</td> </tr> <tr> <td>4</td> <td>DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay DI6: Fourth PFA Relay</td> <td>DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5: Fourth PFA Relay DI6: Free</td> </tr> <tr> <td>5</td> <td>Not allowed</td> <td>DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5: Fourth PFA Relay DI6: Fifth PFA Relay</td> </tr> <tr> <td>6</td> <td>Not allowed</td> <td>Not allowed</td> </tr> </tbody> </table>	No. PFA relays	Autochange disabled (P 8118)	Autochange enabled (P 8118)	0	DI1: Free DI2: Speed Reg Motor DI3...DI6: Free	Not allowed	1	DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4...DI6: Free	DI1: Free DI2: First PFA Relay DI3...DI6: Free	2	DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4: Second PFA Relay DI5...DI6: Free	DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4...DI6: Free	3	DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay DI6: Free	DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5...DI6: Free	4	DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay DI6: Fourth PFA Relay	DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5: Fourth PFA Relay DI6: Free	5	Not allowed	DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5: Fourth PFA Relay DI6: Fifth PFA Relay	6	Not allowed	Not allowed	
No. PFA relays	Autochange disabled (P 8118)	Autochange enabled (P 8118)																								
0	DI1: Free DI2: Speed Reg Motor DI3...DI6: Free	Not allowed																								
1	DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4...DI6: Free	DI1: Free DI2: First PFA Relay DI3...DI6: Free																								
2	DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4: Second PFA Relay DI5...DI6: Free	DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4...DI6: Free																								
3	DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay DI6: Free	DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5...DI6: Free																								
4	DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay DI6: Fourth PFA Relay	DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5: Fourth PFA Relay DI6: Free																								
5	Not allowed	DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5: Fourth PFA Relay DI6: Fifth PFA Relay																								
6	Not allowed	Not allowed																								

Code	Description	Range																					
	<p>3 = DI3 – Enables the Interlocks function, and assigns a digital input (starting with DI3) to the interlock signal for each PFA relay. These assignments are defined in the following table and depend on:</p> <ul style="list-style-type: none"> <li>• the number of PFA relays [number of parameters 1401...1403 and 1410...1412 with value = 31 (PFA)]</li> <li>• the Autochange function status (disabled if 8118 AUTOCHNG INTERV = 0.0, and otherwise enabled).</li> </ul>																						
	<table border="1"> <thead> <tr> <th>No. PFA relays</th> <th>Autochange disabled (P 8118)</th> <th>Autochange enabled (P 8118)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>DI1...DI2: Free DI3: Speed Reg Motor DI4...DI6: Free</td> <td>Not allowed</td> </tr> <tr> <td>1</td> <td>DI1...DI2: Free DI3: Speed Reg Motor DI4: First PFA Relay DI5...DI6: Free</td> <td>DI1...DI2: Free DI3: First PFA Relay DI4...DI6: Free</td> </tr> <tr> <td>2</td> <td>DI1...DI2: Free DI3: Speed Reg Motor DI4: First PFA Relay DI5: Second PFA Relay DI6: Free</td> <td>DI1...DI2: Free DI3: First PFA Relay DI4: Second PFA Relay DI5...DI6: Free</td> </tr> <tr> <td>3</td> <td>DI1...DI2: Free DI3: Speed Reg Motor DI4: First PFA Relay DI5: Second PFA Relay DI6: Third PFA Relay</td> <td>DI1...DI2: Free DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay DI6: Free</td> </tr> <tr> <td>4</td> <td>Not allowed</td> <td>DI1...DI2: Free DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay DI6: Fourth PFA Relay</td> </tr> <tr> <td>5...6</td> <td>Not allowed</td> <td>Not allowed</td> </tr> </tbody> </table>	No. PFA relays	Autochange disabled (P 8118)	Autochange enabled (P 8118)	0	DI1...DI2: Free DI3: Speed Reg Motor DI4...DI6: Free	Not allowed	1	DI1...DI2: Free DI3: Speed Reg Motor DI4: First PFA Relay DI5...DI6: Free	DI1...DI2: Free DI3: First PFA Relay DI4...DI6: Free	2	DI1...DI2: Free DI3: Speed Reg Motor DI4: First PFA Relay DI5: Second PFA Relay DI6: Free	DI1...DI2: Free DI3: First PFA Relay DI4: Second PFA Relay DI5...DI6: Free	3	DI1...DI2: Free DI3: Speed Reg Motor DI4: First PFA Relay DI5: Second PFA Relay DI6: Third PFA Relay	DI1...DI2: Free DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay DI6: Free	4	Not allowed	DI1...DI2: Free DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay DI6: Fourth PFA Relay	5...6	Not allowed	Not allowed	
No. PFA relays	Autochange disabled (P 8118)	Autochange enabled (P 8118)																					
0	DI1...DI2: Free DI3: Speed Reg Motor DI4...DI6: Free	Not allowed																					
1	DI1...DI2: Free DI3: Speed Reg Motor DI4: First PFA Relay DI5...DI6: Free	DI1...DI2: Free DI3: First PFA Relay DI4...DI6: Free																					
2	DI1...DI2: Free DI3: Speed Reg Motor DI4: First PFA Relay DI5: Second PFA Relay DI6: Free	DI1...DI2: Free DI3: First PFA Relay DI4: Second PFA Relay DI5...DI6: Free																					
3	DI1...DI2: Free DI3: Speed Reg Motor DI4: First PFA Relay DI5: Second PFA Relay DI6: Third PFA Relay	DI1...DI2: Free DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay DI6: Free																					
4	Not allowed	DI1...DI2: Free DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay DI6: Fourth PFA Relay																					
5...6	Not allowed	Not allowed																					

Code	Description	Range																		
	<p>4 = DI4 – Enables the Interlock function, and assigns a digital input (starting with DI4) to the interlock signal for each PFA relay. These assignments are defined in the following table and depend on:</p> <ul style="list-style-type: none"> <li>• the number of PFA relays [number of parameters 1401...1403 and 1410...1412 with value = 31 (PFA)]</li> <li>• the Autochange function status (disabled if 8118 AUTOCHNG INTERV = 0.0, and otherwise enabled).</li> </ul>																			
	<table border="1"> <thead> <tr> <th>No. PFA relays</th> <th>Autochange disabled (P 8118)</th> <th>Autochange enabled (P 8118)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>DI1...DI3: Free DI4: Speed Reg Motor DI5...DI6: Free</td> <td>Not allowed</td> </tr> <tr> <td>1</td> <td>DI1...DI3: Free DI4: Speed Reg Motor DI5: First PFA Relay DI6: Free</td> <td>DI1...DI3: Free DI4: First PFA Relay DI5...DI6: Free</td> </tr> <tr> <td>2</td> <td>DI1...DI3: Free DI4: Speed Reg Motor DI5: First PFA Relay DI6: Second PFA Relay</td> <td>DI1...DI3: Free DI4: First PFA Relay DI5: Second PFA Relay DI6: Free</td> </tr> <tr> <td>3</td> <td>Not allowed</td> <td>DI1...DI3: Free DI4: First PFA Relay DI5: Second PFA Relay DI6: Third PFA Relay</td> </tr> <tr> <td>4...6</td> <td>Not allowed</td> <td>Not allowed</td> </tr> </tbody> </table>	No. PFA relays	Autochange disabled (P 8118)	Autochange enabled (P 8118)	0	DI1...DI3: Free DI4: Speed Reg Motor DI5...DI6: Free	Not allowed	1	DI1...DI3: Free DI4: Speed Reg Motor DI5: First PFA Relay DI6: Free	DI1...DI3: Free DI4: First PFA Relay DI5...DI6: Free	2	DI1...DI3: Free DI4: Speed Reg Motor DI5: First PFA Relay DI6: Second PFA Relay	DI1...DI3: Free DI4: First PFA Relay DI5: Second PFA Relay DI6: Free	3	Not allowed	DI1...DI3: Free DI4: First PFA Relay DI5: Second PFA Relay DI6: Third PFA Relay	4...6	Not allowed	Not allowed	
No. PFA relays	Autochange disabled (P 8118)	Autochange enabled (P 8118)																		
0	DI1...DI3: Free DI4: Speed Reg Motor DI5...DI6: Free	Not allowed																		
1	DI1...DI3: Free DI4: Speed Reg Motor DI5: First PFA Relay DI6: Free	DI1...DI3: Free DI4: First PFA Relay DI5...DI6: Free																		
2	DI1...DI3: Free DI4: Speed Reg Motor DI5: First PFA Relay DI6: Second PFA Relay	DI1...DI3: Free DI4: First PFA Relay DI5: Second PFA Relay DI6: Free																		
3	Not allowed	DI1...DI3: Free DI4: First PFA Relay DI5: Second PFA Relay DI6: Third PFA Relay																		
4...6	Not allowed	Not allowed																		

Code	Description	Range																											
	<p>5 = DI5 – Enables the Interlock function, and assigns a digital input (starting with DI5) to the interlock signal for each PFA relay. These assignments are defined in the following table and depend on:</p> <ul style="list-style-type: none"> <li>• the number of PFA relays [number of parameters 1401...1403 and 1410...1412 with value = 31 (PFA)]</li> <li>• the Autochange function status (disabled if 8118 AUTOCHNG INTERV = 0.0, and otherwise enabled).</li> </ul> <table border="1"> <thead> <tr> <th>No. PFA relays</th> <th>Autochange disabled (P 8118)</th> <th>Autochange enabled (P 8118)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>DI1...DI4: Free DI5: Speed Reg Motor DI6: Free</td> <td>Not allowed</td> </tr> <tr> <td>1</td> <td>DI1...DI4: Free DI5: Speed Reg Motor DI6: First PFA Relay</td> <td>DI1...DI4: Free DI5: First PFA Relay DI6: Free</td> </tr> <tr> <td>2</td> <td>Not allowed</td> <td>DI1...DI4: Free DI5: First PFA Relay DI6: Second PFA Relay</td> </tr> <tr> <td>3...6</td> <td>Not allowed</td> <td>Not allowed</td> </tr> </tbody> </table> <p>6 = DI6 – Enables the Interlock function, and assigns digital input DI6 to the interlock signal for the speed regulated motor.</p> <ul style="list-style-type: none"> <li>• Requires 8118 AUTOCHNG INTERV = 0.0.</li> </ul> <table border="1"> <thead> <tr> <th>No. PFA relays</th> <th>Autochange disabled</th> <th>Autochange enabled</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>DI1...DI5: Free DI6: Speed Reg Motor</td> <td>Not allowed</td> </tr> <tr> <td>1</td> <td>Not allowed</td> <td>DI1...DI5: Free DI6: First PFA Relay</td> </tr> <tr> <td>2...6</td> <td>Not allowed</td> <td>Not allowed</td> </tr> </tbody> </table>	No. PFA relays	Autochange disabled (P 8118)	Autochange enabled (P 8118)	0	DI1...DI4: Free DI5: Speed Reg Motor DI6: Free	Not allowed	1	DI1...DI4: Free DI5: Speed Reg Motor DI6: First PFA Relay	DI1...DI4: Free DI5: First PFA Relay DI6: Free	2	Not allowed	DI1...DI4: Free DI5: First PFA Relay DI6: Second PFA Relay	3...6	Not allowed	Not allowed	No. PFA relays	Autochange disabled	Autochange enabled	0	DI1...DI5: Free DI6: Speed Reg Motor	Not allowed	1	Not allowed	DI1...DI5: Free DI6: First PFA Relay	2...6	Not allowed	Not allowed	
No. PFA relays	Autochange disabled (P 8118)	Autochange enabled (P 8118)																											
0	DI1...DI4: Free DI5: Speed Reg Motor DI6: Free	Not allowed																											
1	DI1...DI4: Free DI5: Speed Reg Motor DI6: First PFA Relay	DI1...DI4: Free DI5: First PFA Relay DI6: Free																											
2	Not allowed	DI1...DI4: Free DI5: First PFA Relay DI6: Second PFA Relay																											
3...6	Not allowed	Not allowed																											
No. PFA relays	Autochange disabled	Autochange enabled																											
0	DI1...DI5: Free DI6: Speed Reg Motor	Not allowed																											
1	Not allowed	DI1...DI5: Free DI6: First PFA Relay																											
2...6	Not allowed	Not allowed																											

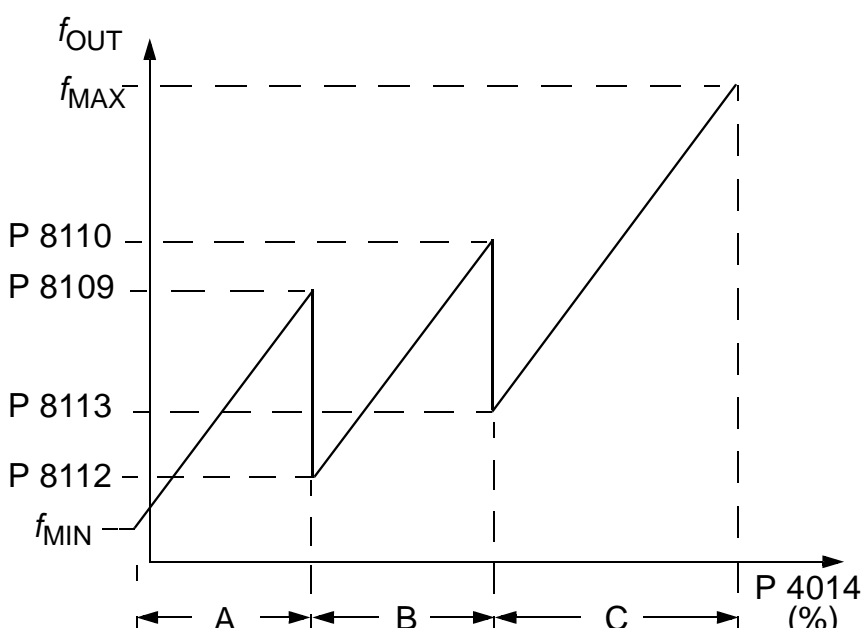Code	Description	Range
8121	<p><b>REG BYPASS CTRL</b></p> <p>Selects Regulator by-pass control. When enabled, Regulator by-pass control provides a simple control mechanism without a PID regulator.</p>  <p>A = No auxiliary motors running                      B = One auxiliary motor running                      C = Two auxiliary motors running</p>	<p><b>0=NO, 1=YES</b></p>
	<ul style="list-style-type: none"> <li>• Use Regulator by-pass control only in special applications.</li> </ul> <p>0 = NO – Disables Regulator by-pass control. The drive uses the normal PFA reference 1106 REF2 SELECT.</p> <p>1 = YES – Enables Regulator by-pass control.</p> <ul style="list-style-type: none"> <li>• The process PID regulator is bypassed. Actual value of PID is used as the PFA reference (input). Normally EXT REF2 is used as the PFA reference.</li> <li>• The drive uses the feedback signal defined by 4014 FBK SEL (or 4114) for the PFA frequency reference.</li> <li>• The figure shows the relation between the control signal 4014 FBK SEL (OR 4114) and the speed regulated motor's frequency in a three-motor system.</li> </ul> <p><b>Example:</b> In the diagram below, the pumping station's outlet flow is controlled by the measured inlet flow (A).</p>	

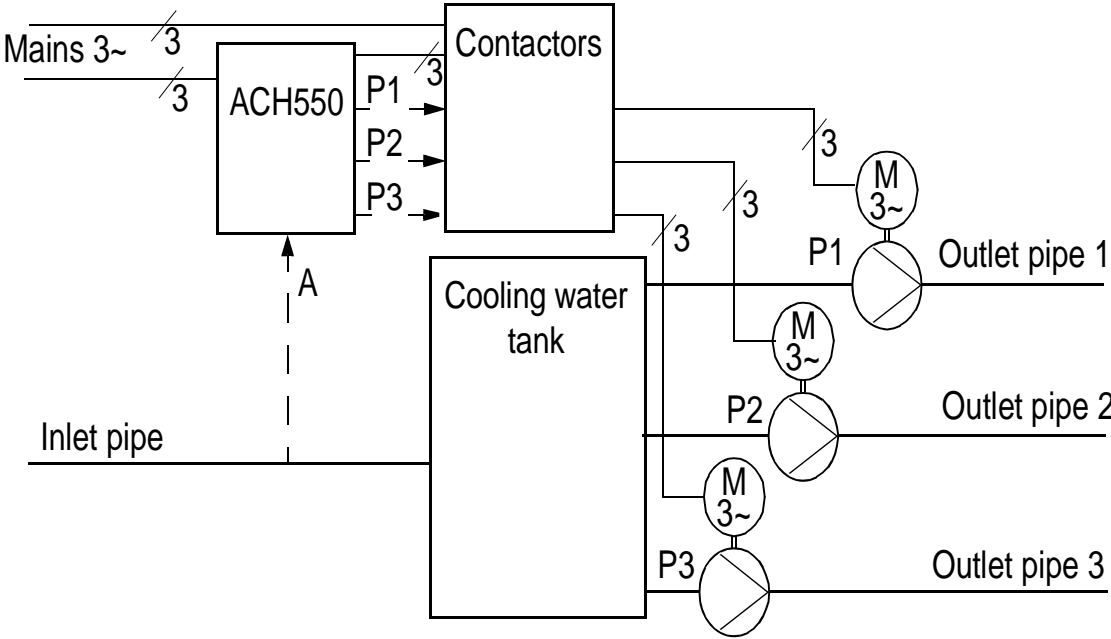Code	Description	Range
		
8122	<p><b>PFA START DELAY</b></p> <p>Sets the start delay for speed regulated motors in the system. Using the delay, the drive works as follows:</p> <ul style="list-style-type: none"> <li>• Switches on the contactor of the speed regulated motor – connecting the motor to the ACH550 power output.</li> <li>• Delays motor start for the time 8122 PFA START DELAY.</li> <li>• Starts the speed regulated motor.</li> <li>• Starts auxiliary motors. See parameter 8115 for delay.</li> </ul> <p><b>⚠ WARNING!</b> Motors equipped with star-delta starters require a PFA Start Delay.</p> <ul style="list-style-type: none"> <li>• After the ACH550 relay output switches a motor On, the star-delta starter must switch to the star-connection and then back to the delta-connection before the drive applies power.</li> <li>• Thus, the PFA Start Delay must be longer than the time setting of the star-delta starter.</li> </ul>	<b>0...10 s</b>



Code	Description	Range
8123	<p><b>PFA ENABLE</b></p> <p>Selects PFA control. When enabled, PFA control:</p> <ul style="list-style-type: none"> <li>• Switches in, or out, auxiliary constant speed motors as output demand increases or decreases. Parameters 8109 START FREQ 1 to 8114 LOW FREQ 3 define the switch points in terms of the drive output frequency.</li> <li>• Adjusts the speed regulated motor output down, as auxiliary motors are added, and adjusts the speed regulated motor output up, as auxiliary motors are taken off line.</li> <li>• Provides Interlock functions, if enabled.</li> <li>• Requires 9904 MOTOR CTRL MODE = 3 (SCALAR:FREQ).</li> </ul> <p>0 = NOT SEL – Disables PFA control. 1 = ACTIVE – Enables PFA control.</p>	<p><b>0=NOT SEL, 1=ACTIVE</b></p>
8124	<p><b>ACC IN AUX STOP</b></p> <p>Sets the PFA acceleration time for a zero-to-maximum frequency ramp. This PFA acceleration ramp:</p> <ul style="list-style-type: none"> <li>• applies to the speed regulated motor, when an auxiliary motor is switched off.</li> <li>• replaces the acceleration ramp defined in <a href="#">Group 22: ACCEL/DECEL</a>.</li> <li>• applies only until the output of the regulated motor increases by an amount equal to the output of the switched off auxiliary motor. Then the acceleration ramp defined in <a href="#">Group 22: ACCEL/DECEL</a> applies.</li> </ul> <p>0 = NOT SEL 0.1...1800 – Activates this function using the value entered as the acceleration time.</p> <div data-bbox="451 1176 1199 1691" data-label="Figure"> </div> <ul style="list-style-type: none"> <li>• A = speed regulated motor accelerating using <a href="#">Group 22: ACCEL/DECEL</a> parameters (2202 or 2205).</li> <li>• B = speed regulated motor decelerating using <a href="#">Group 22: ACCEL/DECEL</a> parameters (2203 or 2206).</li> <li>• At aux. motor start, speed regulated motor decelerates using 8125 DEC IN AUX START.</li> <li>• At aux. motor stop, speed regulated motor accelerates using 8124 ACC IN AUX STOP.</li> </ul>	<p><b>0.0...1800 s</b></p>

Code	Description	Range
8125	<p><b>DEC IN AUX START</b></p> <p>Sets the PFA deceleration time for a maximum-to-zero frequency ramp. This PFA deceleration ramp:</p> <ul style="list-style-type: none"> <li>• applies to the speed regulated motor when an auxiliary motor is switched on.</li> <li>• replaces the deceleration ramp defined in <a href="#">Group 22: ACCEL/DECEL</a>.</li> <li>• applies only until the output of the regulated motor decreases by an amount equal to the output of the auxiliary motor. Then the deceleration ramp defined in <a href="#">Group 22: ACCEL/DECEL</a> applies.</li> </ul> <p>0 = NOT SEL.  0.1...1800 – Activates this function using the value entered as the deceleration time.</p>	<b>0.0...1800 s</b>
8126	<p><b>TIMED AUTOCHANGE</b></p> <p>Sets the autochange with timer. When enables, autochange is controlled with the timed functions.</p> <p>0 = NOT SEL.  1 = TIMER 1 – Enables autochange when timer 1 is active.  2...4 = TIMER 2...4 – Enables autochange when timer 2...4 is active.</p>	<b>0...4</b>
8127	<p><b>MOTORS</b></p> <p>Sets the actual number of PFA controlled motors (maximum 7 motors, 1 speed regulated, 3 connected direct-on-line and 3 spare motors).</p> <ul style="list-style-type: none"> <li>• This value includes also the speed regulated motor.</li> <li>• This value must be compatible with the number of relays allocated to PFA if the Autochange function is used.</li> <li>• If Autochange function is not used, the speed regulated motor does not need to have a relay output allocated to PFA but it needs to be included in this value.</li> </ul>	<b>1...7</b>
8128	<p><b>AUX START ORDER</b></p> <p>Sets the start order of the auxiliary motors.</p> <p>1 = EVEN RUNTIME. Evens out the cumulative run time of the auxiliary motors. The start order depends on the run time: The auxiliary motor whose cumulative run time is shortest is started first, then the motor whose cumulative run time is the second shortest etc. When the demand drops, the first motor to be stopped is the one whose cumulative run time is longest.</p> <p>2 = RELAY ORDER – The start order is fixed to be the order of the relays.</p>	<b>1=EVEN RUNTIME</b> <b>2=RELAY ORDER</b>

**Group 98: OPTIONS**

This group configures for options, in particular, enabling serial communication with the drive.

Code	Description	Range
9802	<p><b>COMM PROT SEL</b></p> <p>Selects the communication protocol.</p> <p>0 = NOT SEL – No communication protocol selected.</p> <p>1 = STD MODBUS – The drive communicates via a Modbus controller via the RS485 serial link (X1 communications, terminal).</p> <ul style="list-style-type: none"> <li>• See also parameter <a href="#">Group 53: EFB PROTOCOL</a>.</li> </ul> <p>2 = N2 – The drive communicates via an N2 controller via the RS485 serial link (X1 communications, terminal).</p> <ul style="list-style-type: none"> <li>• See also parameter <a href="#">Group 53: EFB PROTOCOL</a>.</li> </ul> <p>3 = FLN – The drive communicates via an FLN controller via the RS485 serial link (X1 communications, terminal).</p> <ul style="list-style-type: none"> <li>• See also parameter <a href="#">Group 53: EFB PROTOCOL</a>.</li> </ul> <p>4 = EXT FBA – The drive communicates via a fieldbus adapter module in option slot 2 of the drive.</p> <ul style="list-style-type: none"> <li>• See also parameter <a href="#">Group 51: EXT COMM MODULE</a>.</li> </ul> <p>5 = BACNET – The drive communicates via a BACnet controller via the RS485 serial link (X1 communications, terminal).</p> <ul style="list-style-type: none"> <li>• See also parameter <a href="#">Group 53: EFB PROTOCOL</a>.</li> </ul>	0...5

## Complete parameter list

The following table lists all parameters and their default values for all application macros. The user can enter desired parameter values under the "User" column.

	Parameter name	Par. index	HVAC	Supply fan	Return fan	Cooling tower fan	Condenser	Booster pump
			default	2	3	4	5	6
			1	2	3	4	5	6
99 START-UP DATA	LANGUAGE	9901	ENGLISH	ENGLISH	ENGLISH	ENGLISH	ENGLISH	ENGLISH
	APPLIC MACRO	9902	HVAC DEFAULT	SUPPLY FAN	RETURN FAN	CLNGTWR FAN	CONDENSER	BOOSTER PUMP
	MOTOR CTRL MODE	9904	SCALAR: FREQ	SCALAR: FREQ	SCALAR: FREQ	SCALAR: FREQ	SCALAR: FREQ	SCALAR: FREQ
	MOTOR NOM VOLT	9905	230/400/460 V	230/400/460 V	230/400/460 V	230/400/460 V	230/400/460 V	230/400/460 V
	MOTOR NOM CURR	9906	$1.0 \cdot I_N$	$1.0 \cdot I_N$	$1.0 \cdot I_N$	$1.0 \cdot I_N$	$1.0 \cdot I_N$	$1.0 \cdot I_N$
	MOTOR NOM FREQ	9907	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz
	MOTOR NOM SPEED	9908	1440/1750 rpm	1440/1750 rpm	1440/1750 rpm	1440/1750 rpm	1440/1750 rpm	1440/1750 rpm
	MOTOR NOM POWER	9909	$1.0 \cdot P_N$	$1.0 \cdot P_N$	$1.0 \cdot P_N$	$1.0 \cdot P_N$	$1.0 \cdot P_N$	$1.0 \cdot P_N$
	ID RUN	9910	OFF/IDMAGN	OFF/IDMAGN	OFF/IDMAGN	OFF/IDMAGN	OFF/IDMAGN	OFF/IDMAGN
	MOTOR COSPHI	9915	IDENTIFIED	IDENTIFIED	IDENTIFIED	IDENTIFIED	IDENTIFIED	IDENTIFIED

Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
ENGLISH	ENGLISH	ENGLISH	ENGLISH	ENGLISH	ENGLISH	ENGLISH	ENGLISH	9901	
PUMP ALTERN	INT TIMER	INT TIMER CS	FLOATING PNT	DUAL SETPNT	DUAL SPNT CS	E-BYPASS	HAND CONTROL	9902	
SCALAR: FREQ	SCALAR: FREQ	SCALAR: FREQ	SCALAR: FREQ	SCALAR: FREQ	SCALAR: FREQ	SCALAR: FREQ	SCALAR: FREQ	9904	
230/400/460 V	230/400/460 V	230/400/460 V	230/400/460 V	230/400/460 V	230/400/460 V	230/400/460 V	230/400/460 V	9905	
$1.0 \cdot I_N$	$1.0 \cdot I_N$	$1.0 \cdot I_N$	$1.0 \cdot I_N$	$1.0 \cdot I_N$	$1.0 \cdot I_N$	$1.0 \cdot I_N$	$1.0 \cdot I_N$	9906	
50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	9907	
1440/1750 rpm	1440/1750 rpm	1440/1750 rpm	1440/1750 rpm	1440/1750 rpm	1440/1750 rpm	1440/1750 rpm	1440/1750 rpm	9908	
$1.0 \cdot P_N$	$1.0 \cdot P_N$	$1.0 \cdot P_N$	$1.0 \cdot P_N$	$1.0 \cdot P_N$	$1.0 \cdot P_N$	$1.0 \cdot P_N$	$1.0 \cdot P_N$	9909	
OFF/IDMAGN	OFF/IDMAGN	OFF/IDMAGN	OFF/IDMAGN	OFF/IDMAGN	OFF/IDMAGN	OFF/IDMAGN	OFF/IDMAGN	9910	
IDENTIFIED	IDENTIFIED	IDENTIFIED	IDENTIFIED	IDENTIFIED	IDENTIFIED	IDENTIFIED	IDENTIFIED	9915	

1	OPERATING DATA	SPEED & DIR	0101	-	-	-	-	-	-
		SPEED	0102	-	-	-	-	-	-
		OUTPUT FREQ	0103	-	-	-	-	-	-
		CURRENT	0104	-	-	-	-	-	-
		TORQUE	0105	-	-	-	-	-	-
		POWER	0106	-	-	-	-	-	-
		DC BUS VOLTAGE	0107	-	-	-	-	-	-
		OUTPUT VOLTAGE	0109	-	-	-	-	-	-
		DRIVE TEMP	0110	-	-	-	-	-	-
		EXTERNAL REF 1	0111	-	-	-	-	-	-
		EXTERNAL REF 2	0112	-	-	-	-	-	-
		CTRL LOCATION	0113	-	-	-	-	-	-
		RUN TIME (R)	0114	-	-	-	-	-	-
		KWH COUNTER (R)	0115	-	-	-	-	-	-
		APPL BLK OUTPUT	0116	-	-	-	-	-	-
		DI 1-3 STATUS	0118	-	-	-	-	-	-
		DI 4-6 STATUS	0119	-	-	-	-	-	-
		AI 1	0120	-	-	-	-	-	-
		AI 2	0121	-	-	-	-	-	-
		RO 1-3 STATUS	0122	-	-	-	-	-	-
		RO 4-6 STATUS	0123	-	-	-	-	-	-
		AO 1	0124	-	-	-	-	-	-
		AO 2	0125	-	-	-	-	-	-
		PID 1 OUTPUT	0126	-	-	-	-	-	-
		PID 2 OUTPUT	0127	-	-	-	-	-	-
		PID 1 SETPNT	0128	-	-	-	-	-	-
		PID 2 SETPNT	0129	-	-	-	-	-	-
		PID 1 FBK	0130	-	-	-	-	-	-
		PID 2 FBK	0131	-	-	-	-	-	-
		PID 1 DEVIATION	0132	-	-	-	-	-	-
		PID 2 DEVIATION	0133	-	-	-	-	-	-

-	-	-	-	-	-	-	-	0101	
-	-	-	-	-	-	-	-	0102	
-	-	-	-	-	-	-	-	0103	
-	-	-	-	-	-	-	-	0104	
-	-	-	-	-	-	-	-	0105	
-	-	-	-	-	-	-	-	0106	
-	-	-	-	-	-	-	-	0107	
-	-	-	-	-	-	-	-	0109	
-	-	-	-	-	-	-	-	0110	
-	-	-	-	-	-	-	-	0111	
-	-	-	-	-	-	-	-	0112	
-	-	-	-	-	-	-	-	0113	
-	-	-	-	-	-	-	-	0114	
-	-	-	-	-	-	-	-	0115	
-	-	-	-	-	-	-	-	0116	
-	-	-	-	-	-	-	-	0118	
-	-	-	-	-	-	-	-	0119	
-	-	-	-	-	-	-	-	0120	
-	-	-	-	-	-	-	-	0121	
-	-	-	-	-	-	-	-	0122	
-	-	-	-	-	-	-	-	0123	
-	-	-	-	-	-	-	-	0124	
-	-	-	-	-	-	-	-	0125	
-	-	-	-	-	-	-	-	0126	
-	-	-	-	-	-	-	-	0127	
-	-	-	-	-	-	-	-	0128	
-	-	-	-	-	-	-	-	0129	
-	-	-	-	-	-	-	-	0130	
-	-	-	-	-	-	-	-	0131	
-	-	-	-	-	-	-	-	0132	
-	-	-	-	-	-	-	-	0133	

Parameter name	Par. index	HVAC	Supply fan		Return fan	Cooling tower fan	Condenser	Booster pump
		default	1	2	3	4	5	6
COMM RO WORD	0134	-	-	-	-	-	-	-
COMM VALUE 1	0135	-	-	-	-	-	-	-
COMM VALUE 2	0136	-	-	-	-	-	-	-
PROCESS VAR 1	0137	-	-	-	-	-	-	-
PROCESS VAR 2	0138	-	-	-	-	-	-	-
PROCESS VAR 3	0139	-	-	-	-	-	-	-
RUN TIME	0140	-	-	-	-	-	-	-
MWH COUNTER	0141	-	-	-	-	-	-	-
REVOLUTION CNTR	0142	-	-	-	-	-	-	-
DRIVE ON TIME (HI)	0143	-	-	-	-	-	-	-
DRIVE ON TIME (LO)	0144	-	-	-	-	-	-	-
MOTOR TEMP	0145	-	-	-	-	-	-	-
CB TEMP	0150	-	-	-	-	-	-	-
MOT THERM STRESS	0153	-	-	-	-	-	-	-
PID COMM VALUE 1	0158	-	-	-	-	-	-	-
PID COMM VALUE 2	0159	-	-	-	-	-	-	-
SAVED KWH	0174	-	-	-	-	-	-	-
SAVED MWH	0175	-	-	-	-	-	-	-
SAVED AMOUNT 1	0176	-	-	-	-	-	-	-
SAVED AMOUNT 2	0177	-	-	-	-	-	-	-
SAVED CO2	0178	-	-	-	-	-	-	-



Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
-	-	-	-	-	-	-	-	0134	
-	-	-	-	-	-	-	-	0135	
-	-	-	-	-	-	-	-	0136	
-	-	-	-	-	-	-	-	0137	
-	-	-	-	-	-	-	-	0138	
-	-	-	-	-	-	-	-	0139	
-	-	-	-	-	-	-	-	0140	
-	-	-	-	-	-	-	-	0141	
-	-	-	-	-	-	-	-	0142	
-	-	-	-	-	-	-	-	0143	
-	-	-	-	-	-	-	-	0144	
-	-	-	-	-	-	-	-	0145	
-	-	-	-	-	-	-	-	0150	
-	-	-	-	-	-	-	-	0153	
-	-	-	-	-	-	-	-	0158	
-	-	-	-	-	-	-	-	0159	
-	-	-	-	-	-	-	-	0174	
-	-	-	-	-	-	-	-	0175	
-	-	-	-	-	-	-	-	0176	
-	-	-	-	-	-	-	-	0177	
-	-	-	-	-	-	-	-	0178	

		HVAC default	Supply fan	Return fan	Cooling tower fan	Condenser	Booster pump
Parameter name	Par. index	1	2	3	4	5	6
<b>3 FB ACTUAL SIGNALS</b>	FB CMD WORD 1	0301	-	-	-	-	-
	FB CMD WORD 2	0302	-	-	-	-	-
	FB STS WORD 1	0303	-	-	-	-	-
	FB STS WORD 2	0304	-	-	-	-	-
	FAULT WORD 1	0305	-	-	-	-	-
	FAULT WORD 2	0306	-	-	-	-	-
	FAULT WORD 3	0307	-	-	-	-	-
	ALARM WORD 1	0308	-	-	-	-	-
	ALARM WORD 2	0309	-	-	-	-	-
<b>4 FAULT HISTORY</b>	LAST FAULT	0401	0	0	0	0	0
	FAULT TIME 1	0402	0	0	0	0	0
	FAULT TIME 2	0403	0	0	0	0	0
	SPEED AT FLT	0404	0	0	0	0	0
	FREQ AT FLT	0405	0	0	0	0	0
	VOLTAGE AT FLT	0406	0	0	0	0	0
	CURRENT AT FLT	0407	0	0	0	0	0
	TORQUE AT FLT	0408	0	0	0	0	0
	STATUS AT FLT	0409	0	0	0	0	0
	DI 1-3 AT FLT	0410	0	0	0	0	0
	DI 4-6 AT FLT	0411	0	0	0	0	0
	PREVIOUS FAULT 1	0412	0	0	0	0	0
	PREVIOUS FAULT 2	0413	0	0	0	0	0
<b>10 START/ STOP/DIR</b>	EXT1 COMMANDS	1001	DI1	DI1	DI1	DI1	DI1
	EXT2 COMMANDS	1002	DI1	DI1	DI1	DI1	DI1
	DIRECTION	1003	FORWARD	FORWARD	FORWARD	FORWARD	FORWARD

Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
-	-	-	-	-	-	-	-	0301	
-	-	-	-	-	-	-	-	0302	
-	-	-	-	-	-	-	-	0303	
-	-	-	-	-	-	-	-	0304	
-	-	-	-	-	-	-	-	0305	
-	-	-	-	-	-	-	-	0306	
-	-	-	-	-	-	-	-	0307	
-	-	-	-	-	-	-	-	0308	
-	-	-	-	-	-	-	-	0309	
0	0	0	0	0	0	0	0	0401	
0	0	0	0	0	0	0	0	0402	
0	0	0	0	0	0	0	0	0403	
0	0	0	0	0	0	0	0	0404	
0	0	0	0	0	0	0	0	0405	
0	0	0	0	0	0	0	0	0406	
0	0	0	0	0	0	0	0	0407	
0	0	0	0	0	0	0	0	0408	
0	0	0	0	0	0	0	0	0409	
0	0	0	0	0	0	0	0	0410	
0	0	0	0	0	0	0	0	0411	
0	0	0	0	0	0	0	0	0412	
0	0	0	0	0	0	0	0	0413	
DI1	TIMER 1	DI1	DI1	DI1	DI1	DI1	NOT SEL	1001	
DI1	TIMER 1	DI1,2	DI1	DI1	DI1	DI1	DI1,2	1002	
FORWARD	FORWARD	FORWARD	FORWARD	FORWARD	FORWARD	FORWARD	FORWARD	1003	

	Parameter name	Par. index	HVAC default		Supply fan	Return fan	Cooling tower fan		Condenser	Booster pump
			1	2	3	4	5	6		
<b>11 REFERENCE SELECT</b>	KEYPAD REF SEL	1101	REF 1 (Hz/rpm)	REF 1 (Hz/rpm)	REF 1 (Hz/rpm)	REF 1 (Hz/rpm)	REF 1 (Hz/rpm)	REF 1 (Hz/rpm)	REF 1 (Hz/rpm)	
	EXT1/EXT2 SEL	1102	EXT1	EXT1	EXT1	EXT1	EXT1	EXT1	EXT1	
	REF1 SELECT	1103	AI1	AI1	AI1	AI1	AI1	AI1	AI1	
	REF1 MIN	1104	0.0 Hz / 0 rpm	0.0 Hz / 0 rpm	0.0 Hz / 0 rpm	0.0 Hz / 0 rpm	0.0 Hz / 0 rpm	0.0 Hz / 0 rpm	0.0 Hz / 0 rpm	
	REF1 MAX	1105	50.0 Hz / 1500 rpm	50.0 Hz / 1500 rpm	50.0 Hz / 1500 rpm	50.0 Hz / 1500 rpm	50.0 Hz / 1500 rpm	50.0 Hz / 1500 rpm	50.0 Hz / 1500 rpm	
	REF2 SELECT	1106	PID1 OUT	PID1 OUT	PID1 OUT	PID1 OUT	PID1 OUT	PID1 OUT	PID1 OUT	
	REF2 MIN	1107	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	
	REF2 MAX	1108	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	
<b>12 CONSTANT SPEEDS</b>	CONST SPEED SEL	1201	DI3	DI3	DI3	DI3	DI3	DI3	DI3	
	CONST SPEED 1	1202	5/6 Hz	5/6 Hz	5/6 Hz	5/6 Hz	5/6 Hz	5/6 Hz	5/6 Hz	
	CONST SPEED 2	1203	10/12 Hz	10/12 Hz	10/12 Hz	10/12 Hz	10/12 Hz	10/12 Hz	10/12 Hz	
	CONST SPEED 3	1204	15/18 Hz	15/18 Hz	15/18 Hz	15/18 Hz	15/18 Hz	15/18 Hz	15/18 Hz	
	CONST SPEED 4	1205	20/24 Hz	20/24 Hz	20/24 Hz	20/24 Hz	20/24 Hz	20/24 Hz	20/24 Hz	
	CONST SPEED 5	1206	25/30 Hz	25/30 Hz	25/30 Hz	25/30 Hz	25/30 Hz	25/30 Hz	25/30 Hz	
	CONST SPEED 6	1207	40/48 Hz	40/48 Hz	40/48 Hz	40/48 Hz	40/48 Hz	40/48 Hz	40/48 Hz	
	CONST SPEED 7	1208	50/60 Hz	50/60 Hz	50/60 Hz	50/60 Hz	50/60 Hz	50/60 Hz	50/60 Hz	
	TIMED MODE SEL	1209	CS1/2/3/4	CS1/2/3/4	CS1/2/3/4	CS1/2/3/4	CS1/2/3/4	CS1/2/3/4	CS1/2/3/4	

Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
REF 1 (Hz/rpm)	REF 1 (Hz/rpm)	REF 1 (Hz/rpm)	REF 1 (Hz/rpm)	REF 1 (Hz/rpm)	REF 1 (Hz/rpm)	REF 1 (Hz/rpm)	REF 1 (Hz/rpm)	1101	
EXT1	EXT1	EXT1	EXT1	EXT1	DI2	EXT1	EXT1	1102	
AI1	AI1	KEYPAD	DI5U, 6D	AI1	AI1	AI1	AI1	1103	
0.0 Hz / 0 rpm	0.0 Hz / 0 rpm	0.0 Hz / 0 rpm	0.0 Hz / 0 rpm	0.0 Hz / 0 rpm	0.0 Hz / 0 rpm	0.0 Hz / 0 rpm	0.0 Hz / 0 rpm	1104	
52.0 Hz / 1560 rpm	50.0 Hz / 1500 rpm	50.0 Hz / 1500 rpm	50.0 Hz / 1500 rpm	50.0 Hz / 1500 rpm	50.0 Hz / 1500 rpm	50.0 Hz / 1500 rpm	50.0 Hz / 1500 rpm	1105	
PID1 OUT	PID1 OUT	AI2	PID1 OUT	PID1 OUT	PID1 OUT	PID1 OUT	AI2	1106	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	1107	
100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	1108	
NOT SEL	NOT SEL	TIMER 1	DI3	NOT SEL	DI4, 5	NOT SEL	NOT SEL	1201	
5/6 Hz	5/6 Hz	5/6 Hz	5/6 Hz	5/6 Hz	5/6 Hz	5/6 Hz	5/6 Hz	1202	
10/12 Hz	10/12 Hz	10/12 Hz	10/12 Hz	10/12 Hz	10/12 Hz	10/12 Hz	10/12 Hz	1203	
15/18 Hz	15/18 Hz	15/18 Hz	15/18 Hz	15/18 Hz	15/18 Hz	15/18 Hz	15/18 Hz	1204	
20/24 Hz	20/24 Hz	20/24 Hz	20/24 Hz	20/24 Hz	20/24 Hz	20/24 Hz	20/24 Hz	1205	
25/30 Hz	25/30 Hz	25/30 Hz	25/30 Hz	25/30 Hz	25/30 Hz	25/30 Hz	25/30 Hz	1206	
40/48 Hz	40/48 Hz	40/48 Hz	40/48 Hz	40/48 Hz	40/48 Hz	40/48 Hz	40/48 Hz	1207	
50/60 Hz	50/60 Hz	50/60 Hz	50/60 Hz	50/60 Hz	50/60 Hz	50/60 Hz	50/60 Hz	1208	
CS1/2/3/4	CS1/2/3/4	CS1/2/3/4	CS1/2/3/4	CS1/2/3/4	CS1/2/3/4	CS1/2/3/4	CS1/2/3/4	1209	

	Parameter name	Par. index	HVAC default	Supply fan	Return fan	Cooling tower fan	Condenser	Booster pump
			1	2	3	4	5	6
<b>13 ANALOGUE INPUTS</b>	MINIMUM AI1	1301	20.0%	20.0%	20.0%	20.0%	20.0%	20.0%
	MAXIMUM AI1	1302	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%
	FILTER AI1	1303	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s
	MINIMUM AI2	1304	20.0%	20.0%	20.0%	20.0%	20.0%	20.0%
	MAXIMUM AI2	1305	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%
	FILTER AI2	1306	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s
<b>14 RELAY OUTPUTS</b>	RELAY OUTPUT 1	1401	READY	STARTED	STARTED	STARTED	STARTED	STARTED
	RELAY OUTPUT 2	1402	RUN	RUN	RUN	RUN	RUN	RUN
	RELAY OUTPUT 3	1403	FAULT (-1)	FAULT (-1)	FAULT (-1)	FAULT (-1)	FAULT (-1)	FAULT (-1)
	RO 1 ON DELAY	1404	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	RO 1 OFF DELAY	1405	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	RO 2 ON DELAY	1406	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	RO 2 OFF DELAY	1407	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	RO 3 ON DELAY	1408	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	RO 3 OFF DELAY	1409	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	RELAY OUTPUT 4	1410	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	RELAY OUTPUT 5	1411	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	RELAY OUTPUT 6	1412	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	RO 4 ON DELAY	1413	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	RO 4 OFF DELAY	1414	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	RO 5 ON DELAY	1415	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	RO 5 OFF DELAY	1416	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	RO 6 ON DELAY	1417	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	RO 6 OFF DELAY	1418	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s

Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
20.0%	20.0%	0.0%	20.0%	20.0%	20.0%	20.0%	0.0%	1301	
100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	1302	
0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	1303	
20.0%	20.0%	0.0%	20.0%	20.0%	20.0%	20.0%	0.0%	1304	
100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	1305	
0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	1306	
PFA	STARTED	STARTED	STARTED	STARTED	STARTED	STARTED	READY	1401	
RUN	RUN	RUN	RUN	RUN	RUN	RUN	RUN	1402	
FAULT (-1)	FAULT (-1)	FAULT (-1)	FAULT (-1)	FAULT (-1)	FAULT (-1)	FAULT (-1)	FAULT (-1)	1403	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	1404	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	1405	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	1406	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	1407	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	1408	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	1409	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	1410	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	1411	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	1412	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	1413	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	1414	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	1415	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	1416	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	1417	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	1418	

		HVAC default		Supply fan	Return fan	Cooling tower fan	Condenser	Booster pump
Parameter name	Par. index	1	2	3	4	5	6	
<b>15 ANALOGUE OUTPUTS</b>	AO1 CONTENT SEL	1501	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ
	AO1 CONTENT MIN	1502	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz
	AO1 CONTENT MAX	1503	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz
	MINIMUM AO1	1504	4.0 mA	4.0 mA	4.0 mA	4.0 mA	4.0 mA	4.0 mA
	MAXIMUM AO1	1505	20.0 mA	20.0 mA	20.0 mA	20.0 mA	20.0 mA	20.0 mA
	FILTER AO1	1506	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s
	AO2 CONTENT SEL	1507	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT
	AO2 CONTENT MIN	1508	0.0 A	0.0 A	0.0 A	0.0 A	0.0 A	0.0 A
	AO2 CONTENT MAX	1509	Defined by par. 0104	Defined by par. 0104	Defined by par. 0104	Defined by par. 0104	Defined by par. 0104	Defined by par. 0104
	MINIMUM AO2	1510	4.0 mA	4.0 mA	4.0 mA	4.0 mA	4.0 mA	4.0 mA
	MAXIMUM AO2	1511	20.0 mA	20.0 mA	20.0 mA	20.0 mA	20.0 mA	20.0 mA
	FILTER AO2	1512	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s
<b>16 SYSTEM CONTROLS</b>	RUN ENABLE	1601	NOT SEL	DI2	DI2	DI2	DI2	DI2
	PARAMETER LOCK	1602	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN
	PASS CODE	1603	0	0	0	0	0	0
	FAULT RESET SEL	1604	KEYPAD	KEYPAD	KEYPAD	KEYPAD	KEYPAD	KEYPAD
	USER PAR SET CHG	1605	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	LOCAL LOCK	1606	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	PARAM SAVE	1607	DONE	DONE	DONE	DONE	DONE	DONE
	START ENABLE 1	1608	DI4	DI4	DI4	DI4	DI4	DI4
	START ENABLE 2	1609	NOT SEL	DI5	DI5	DI5	DI5	DI5
	DISPLAY ALARMS	1610	NO	NO	NO	NO	NO	NO
	PARAMETER VIEW	1611	DEFAULT	DEFAULT	DEFAULT	DEFAULT	DEFAULT	DEFAULT
	FAN CONTROL	1612	AUTO	AUTO	AUTO	AUTO	AUTO	AUTO
	FAULT RESET	1613	DEFAULT	DEFAULT	DEFAULT	DEFAULT	DEFAULT	DEFAULT



Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	1501	
0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	1502	
52.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	1503	
4.0 mA	4.0 mA	4.0 mA	4.0 mA	4.0 mA	4.0 mA	4.0 mA	0.0 mA	1504	
20.0 mA	20.0 mA	20.0 mA	20.0 mA	20.0 mA	20.0 mA	20.0 mA	20.0 mA	1505	
0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	1506	
CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	1507	
0.0 A	0.0 A	0.0 A	0.0 A	0.0 A	0.0 A	0.0 A	0.0 A	1508	
Defined by par. 0104	Defined by par. 0104	Defined by par. 0104	Defined by par. 0104	Defined by par. 0104	Defined by par. 0104	Defined by par. 0104	Defined by par. 0104	1509	
4.0 mA	4.0 mA	4.0 mA	4.0 mA	4.0 mA	4.0 mA	4.0 mA	0.0 mA	1510	
20.0 mA	20.0 mA	20.0 mA	20.0 mA	20.0 mA	20.0 mA	20.0 mA	20.0 mA	1511	
0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	1512	
DI2	DI2	DI2	DI2	DI2	NOT SEL	DI2	NOT SEL	1601	
OPEN	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN	1602	
0	0	0	0	0	0	0	0	1603	
KEYPAD	KEYPAD	KEYPAD	KEYPAD	KEYPAD	KEYPAD	KEYPAD	KEYPAD	1604	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	1605	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	1606	
DONE	DONE	DONE	DONE	DONE	DONE	DONE	DONE	1607	
NOT SEL	DI4	DI4	DI4	DI4	NOT SEL	NOT SEL	NOT SEL	1608	
NOT SEL	DI5	DI5	NOT SEL	DI5	NOT SEL	NOT SEL	NOT SEL	1609	
NO	NO	NO	NO	NO	NO	NO	NO	1610	
DEFAULT	DEFAULT	DEFAULT	DEFAULT	DEFAULT	DEFAULT	DEFAULT	DEFAULT	1611	
AUTO	AUTO	AUTO	AUTO	AUTO	AUTO	AUTO	AUTO	1612	
DEFAULT	DEFAULT	DEFAULT	DEFAULT	DEFAULT	DEFAULT	DEFAULT	DEFAULT	1613	

	Parameter name	Par. index	HVAC default	Supply fan	Return fan	Cooling tower fan	Condenser	Booster pump
			1	2	3	4	5	6
<b>17 OVERRIDE</b>	OVERRIDE SEL	1701	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	OVERRIDE FREQ	1702	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz
	OVERRIDE SPEED	1703	0 rpm	0 rpm	0 rpm	0 rpm	0 rpm	0 rpm
	OVERR PASS CODE	1704	0	0	0	0	0	0
	OVERRIDE	1705	OFF	OFF	OFF	OFF	OFF	OFF
	OVERRIDE DIR	1706	FORWARD	FORWARD	FORWARD	FORWARD	FORWARD	FORWARD
	OVERRIDE REF	1707	CONSTANT	CONSTANT	CONSTANT	CONSTANT	CONSTANT	CONSTANT
<b>20 LIMITS</b>	MINIMUM SPEED	2001	0 rpm	0 rpm	0 rpm	0 rpm	0 rpm	0 rpm
	MAXIMUM SPEED	2002	1500 rpm	1500 rpm	1500 rpm	1500 rpm	1500 rpm	1500 rpm
	MAX CURRENT	2003	$1.1 \cdot I_N$	$1.1 \cdot I_N$	$1.1 \cdot I_N$	$1.1 \cdot I_N$	$1.1 \cdot I_N$	$1.1 \cdot I_N$
	UNDERVOLT CTRL	2006	ENABLE (TIME)	ENABLE (TIME)	ENABLE (TIME)	ENABLE (TIME)	ENABLE (TIME)	ENABLE (TIME)
	MINIMUM FREQ	2007	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz
	MAXIMUM FREQ	2008	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz
	MIN TORQUE SEL	2013	MIN TORQUE 1	MIN TORQUE 1	MIN TORQUE 1	MIN TORQUE 1	MIN TORQUE 1	MIN TORQUE 1
	MAX TORQUE SEL	2014	MAX TORQUE 1	MAX TORQUE 1	MAX TORQUE 1	MAX TORQUE 1	MAX TORQUE 1	MAX TORQUE 1
	MIN TORQUE 1	2015	-300.0%	-300.0%	-300.0%	-300.0%	-300.0%	-300.0%
	MIN TORQUE 2	2016	-300.0%	-300.0%	-300.0%	-300.0%	-300.0%	-300.0%
	MAX TORQUE 1	2017	300.0%	300.0%	300.0%	300.0%	300.0%	300.0%
	MAX TORQUE 2	2018	300.0%	300.0%	300.0%	300.0%	300.0%	300.0%
<b>21 START/ STOP</b>	START FUNCTION	2101	RAMP	RAMP	RAMP	RAMP	RAMP	RAMP
	STOP FUNCTION	2102	COAST	COAST	COAST	COAST	COAST	COAST
	DC MAGN TIME	2103	0.30 s	0.30 s	0.30 s	0.30 s	0.30 s	0.30 s
	DC HOLD CTL	2104	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	DC HOLD SPEED	2105	5 rpm	5 rpm	5 rpm	5 rpm	5 rpm	5 rpm
	DC CURR REF	2106	30%	30%	30%	30%	30%	30%
	DC BRAKE TIME	2107	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	START INHIBIT	2108	OFF	OFF	OFF	OFF	OFF	OFF
	EMERG STOP SEL	2109	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	TORQ BOOST CURR	2110	100%	100%	100%	100%	100%	100%
	START DELAY	2113	0.00 s	0.00 s	0.00 s	0.00 s	0.00 s	0.00 s

Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	1701	
0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	1702	
0 rpm	0 rpm	0 rpm	0 rpm	0 rpm	0 rpm	0 rpm	0 rpm	1703	
0	0	0	0	0	0	0	0	1704	
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	1705	
FORWARD	FORWARD	FORWARD	FORWARD	FORWARD	FORWARD	FORWARD	FORWARD	1706	
CONSTANT	CONSTANT	CONSTANT	CONSTANT	CONSTANT	CONSTANT	CONSTANT	CONSTANT	1707	
0 rpm	0 rpm	0 rpm	0 rpm	0 rpm	0 rpm	0 rpm	0 rpm	2001	
1500 rpm	1500 rpm	1500 rpm	1500 rpm	1500 rpm	1500 rpm	1500 rpm	1500 rpm	2002	
$1.1 \cdot I_N$	$1.1 \cdot I_N$	$1.1 \cdot I_N$	$1.1 \cdot I_N$	$1.1 \cdot I_N$	$1.1 \cdot I_N$	$1.1 \cdot I_N$	$1.1 \cdot I_N$	2003	
ENABLE (TIME)	ENABLE (TIME)	ENABLE (TIME)	ENABLE (TIME)	ENABLE (TIME)	ENABLE (TIME)	ENABLE (TIME)	ENABLE (TIME)	2006	
0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	2007	
50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	2008	
MIN TORQUE 1	MIN TORQUE 1	MIN TORQUE 1	MIN TORQUE 1	MIN TORQUE 1	MIN TORQUE 1	MIN TORQUE 1	MIN TORQUE 1	2013	
MAX TORQUE 1	MAX TORQUE 1	MAX TORQUE 1	MAX TORQUE 1	MAX TORQUE 1	MAX TORQUE 1	MAX TORQUE 1	MAX TORQUE 1	2014	
-300.0%	-300.0%	-300.0%	-300.0%	-300.0%	-300.0%	-300.0%	-300.0%	2015	
-300.0%	-300.0%	-300.0%	-300.0%	-300.0%	-300.0%	-300.0%	-300.0%	2016	
300.0%	300.0%	300.0%	300.0%	300.0%	300.0%	300.0%	300.0%	2017	
300.0%	300.0%	300.0%	300.0%	300.0%	300.0%	300.0%	300.0%	2018	
RAMP	RAMP	RAMP	RAMP	RAMP	RAMP	RAMP	RAMP	2101	
COAST	COAST	COAST	COAST	COAST	COAST	COAST	COAST	2102	
0.30 s	0.30 s	0.30 s	0.30 s	0.30 s	0.30 s	0.30 s	0.30 s	2103	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	2104	
5 rpm	5 rpm	5 rpm	5 rpm	5 rpm	5 rpm	5 rpm	5 rpm	2105	
30%	30%	30%	30%	30%	30%	30%	30%	2106	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	2107	
OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	2108	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	2109	
100%	100%	100%	100%	100%	100%	100%	100%	2110	
0.00 s	0.00 s	0.00 s	0.00 s	0.00 s	0.00 s	0.00 s	0.00 s	2113	

	Parameter name	Par. index	HVAC default		Supply fan	Return fan	Cooling tower fan		Condenser	Booster pump
			1	2	3	4	5	6		
<b>22 ACCEL/ DECEL</b>	ACC/DEC 1/2 SEL	2201	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	ACCELER TIME 1	2202	30.0 s	15.0 s	15.0 s	30.0 s	10.0 s	5.0 s		
	DECELER TIME 1	2203	30.0 s	15.0 s	15.0 s	30.0 s	10.0 s	5.0 s		
	RAMP SHAPE 1	2204	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	ACCELER TIME 2	2205	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s
	DECELER TIME 2	2206	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s
	RAMP SHAPE 2	2207	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	EMERG DEC TIME	2208	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s
	RAMP INPUT 0	2209	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
<b>23 SPEED CONTROL</b>	PROP GAIN	2301	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00
	INTEGRATION TIME	2302	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s
	DERIVATION TIME	2303	0 ms	0 ms	0 ms	0 ms	0 ms	0 ms	0 ms	0 ms
	ACC COMPEN- SATION	2304	0.00 s	0.00 s	0.00 s	0.00 s	0.00 s	0.00 s	0.00 s	0.00 s
	AUTOTUNE RUN	2305	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
<b>25 CRITICAL SPEEDS</b>	CRIT SPEED SEL	2501	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	CRIT SPEED 1 LO	2502	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm
	CRIT SPEED 1 HI	2503	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm
	CRIT SPEED 2 LO	2504	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm
	CRIT SPEED 2 HI	2505	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm
	CRIT SPEED 3 LO	2506	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm
	CRIT SPEED 3 HI	2507	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm
<b>26 MOTOR CONTROLS</b>	FLUX OPT ENABLE	2601	ON	ON	ON	ON	ON	ON	ON	ON
	FLUX BRAKING	2602	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
	IR COMP VOLT	2603	0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V
	IR COMP FREQ	2604	80%	80%	80%	80%	80%	80%	80%	80%
	U/F RATIO	2605	SQUARED	SQUARED	SQUARED	SQUARED	SQUARED	SQUARED	SQUARED	SQUARED
	SWITCHING FREQ	2606	4 kHz	4 kHz	4 kHz	4 kHz	4 kHz	4 kHz	4 kHz	4 kHz
	SWITCH FREQ CTRL	2607	ON	ON	ON	ON	ON	ON	ON	ON
	SLIP COMP RATIO	2608	0%	0%	0%	0%	0%	0%	0%	0%
	NOISE SMOOTHING	2609	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE
	DC STABILIZER	2619	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE
	OVERMODUL ATION	2625	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE

Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	2201	
5.0 s	30.0 s	30.0 s	30.0 s	30.0 s	10.0 s	30.0 s	30.0 s	2202	
5.0 s	30.0 s	30.0 s	30.0 s	30.0 s	10.0 s	30.0 s	30.0 s	2203	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	2204	
60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	2205	
60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	2206	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	2207	
1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	2208	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	2209	
5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	2301	
0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	2302	
0 ms	0 ms	0 ms	0 ms	0 ms	0 ms	0 ms	0 ms	2303	
0.00 s	0.00 s	0.00 s	0.00 s	0.00 s	0.00 s	0.00 s	0.00 s	2304	
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	2305	
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	2501	
0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	2502	
0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	2503	
0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	2504	
0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	2505	
0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	2506	
0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	0 Hz / 0 rpm	2507	
ON	ON	ON	ON	ON	ON	ON	ON	2601	
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	2602	
0 V	0 V	0 V	0 V	0 V	0 V	0 V	0 V	2603	
80%	80%	80%	80%	80%	80%	80%	80%	2604	
SQUARED	SQUARED	SQUARED	SQUARED	SQUARED	SQUARED	SQUARED	SQUARED	2605	
4 kHz	4 kHz	4 kHz	4 kHz	4 kHz	4 kHz	4 kHz	4 kHz	2606	
ON	ON	ON	ON	ON	ON	ON	ON	2607	
0%	0%	0%	0%	0%	0%	0%	0%	2608	
DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	2609	
DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	2619	
DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	2625	

		HVAC default		Supply fan	Return fan	Cooling tower fan	Condenser	Booster pump
Parameter name	Par. index	1	2	3	4	5	6	
<b>29 MAINTENANCE TRIG</b>	COOLING FAN TRIG	2901	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh
	COOLING FAN ACT	2902	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh
	REVOLUTION TRIG	2903	0 Mrev	0 Mrev	0 Mrev	0 Mrev	0 Mrev	0 Mrev
	REVOLUTION ACT	2904	0 Mrev	0 Mrev	0 Mrev	0 Mrev	0 Mrev	0 Mrev
	RUN TIME TRIG	2905	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh
	RUN TIME ACT	2906	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh
	USER MWH TRIG	2907	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh
	USER MWH ACT	2908	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh
<b>30 FAULT FUNCTIONS</b>	AI<MIN FUNCTION	3001	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	PANEL COMM ERR	3002	FAULT	FAULT	FAULT	FAULT	FAULT	FAULT
	EXTERNAL FAULT 1	3003	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	EXTERNAL FAULT 2	3004	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	MOT THERM PROT	3005	FAULT	FAULT	FAULT	FAULT	FAULT	FAULT
	MOT THERM TIME	3006	1050 s	1050 s	1050 s	1050 s	1050 s	1050 s
	MOT LOAD CURVE	3007	100%	100%	100%	100%	100%	100%
	ZERO SPEED LOAD	3008	70%	70%	70%	70%	70%	70%
	BREAK POINT FREQ	3009	35 Hz	35 Hz	35 Hz	35 Hz	35 Hz	35 Hz
	STALL FUNCTION	3010	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	STALL FREQUENCY	3011	20.0 Hz	20.0 Hz	20.0 Hz	20.0 Hz	20.0 Hz	20.0 Hz
	STALL TIME	3012	20 s	20 s	20 s	20 s	20 s	20 s
	EARTH FAULT	3017	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE
	COMM FAULT FUNC	3018	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	COMM FAULT TIME	3019	10.0 s	10.0 s	10.0 s	10.0 s	10.0 s	10.0 s
	AI1 FAULT LIMIT	3021	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%
	AI2 FAULT LIMIT	3022	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%
	WIRING FAULT	3023	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE
CB TEMP FAULT	3024	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	
EARTHFAULT LVL	3028	USA: LOW Europe: MEDIUM	USA: LOW Europe: MEDIUM	USA: LOW Europe: MEDIUM	USA: LOW Europe: MEDIUM	USA: LOW Europe: MEDIUM	USA: LOW Europe: MEDIUM	

Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	2901	
0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	2902	
0 Mrev	0 Mrev	0 Mrev	0 Mrev	0 Mrev	0 Mrev	0 Mrev	0 Mrev	2903	
0 Mrev	0 Mrev	0 Mrev	0 Mrev	0 Mrev	0 Mrev	0 Mrev	0 Mrev	2904	
0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	2905	
0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	0.0 kh	2906	
0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	2907	
0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	0.0 MWh	2908	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	3001	
FAULT	FAULT	FAULT	FAULT	FAULT	FAULT	FAULT	FAULT	3002	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	3003	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	3004	
FAULT	FAULT	FAULT	FAULT	FAULT	FAULT	FAULT	FAULT	3005	
1050 s	1050 s	1050 s	1050 s	1050 s	1050 s	1050 s	1050 s	3006	
100%	100%	100%	100%	100%	100%	100%	100%	3007	
70%	70%	70%	70%	70%	70%	70%	70%	3008	
35 Hz	35 Hz	35 Hz	35 Hz	35 Hz	35 Hz	35 Hz	35 Hz	3009	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	3010	
20.0 Hz	20.0 Hz	20.0 Hz	20.0 Hz	20.0 Hz	20.0 Hz	20.0 Hz	20.0 Hz	3011	
20 s	20 s	20 s	20 s	20 s	20 s	20 s	20 s	3012	
ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	3017	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	3018	
10.0 s	10.0 s	10.0 s	10.0 s	10.0 s	10.0 s	10.0 s	10.0 s	3019	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	3021	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	3022	
ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	3023	
ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	3024	
USA: LOW Europe: MEDIUM	USA: LOW Europe: MEDIUM	USA: LOW Europe: MEDIUM	USA: LOW Europe: MEDIUM	USA: LOW Europe: MEDIUM	USA: LOW Europe: MEDIUM	USA: LOW Europe: MEDIUM	USA: LOW Europe: MEDIUM	3028	

	Parameter name	Par. index	HVAC	Supply fan	Return fan	Cooling	Condenser	Booster pump
			default			tower fan		
			1	2	3	4	5	6
<b>31 AUTOMATIC RESET</b>	NUMBER OF TRIALS	3101	5	5	5	5	5	5
	TRIAL TIME	3102	30.0 s	30.0 s	30.0 s	30.0 s	30.0 s	30.0 s
	DELAY TIME	3103	6.0 s	6.0 s	6.0 s	6.0 s	6.0 s	6.0 s
	AR OVER-CURRENT	3104	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE
	AR OVER-VOLTAGE	3105	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE
	AR UNDER-VOLTAGE	3106	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE
	AR AI<MIN	3107	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE
	AR EXTERNAL FLT	3108	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE
<b>32 SUPERVISION</b>	SUPERV 1 PARAM	3201	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ
	SUPERV 1 LIM LO	3202	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz
	SUPERV 1 LIM HI	3203	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz
	SUPERV 2 PARAM	3204	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT
	SUPERV 2 LIM LO	3205	-	-	-	-	-	-
	SUPERV 2 LIM HI	3206	-	-	-	-	-	-
	SUPERV 3 PARAM	3207	TORQUE	TORQUE	TORQUE	TORQUE	TORQUE	TORQUE
	SUPERV 3 LIM LO	3208	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%
	SUPERV 3 LIM HI	3209	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%
<b>33 INFORMATION</b>	FIRMWARE	3301	Firmware version	Firmware version	Firmware version	Firmware version	Firmware version	Firmware version
	LOADING PACKAGE	3302	0	0	0	0	0	0
	TEST DATE	3303	0	0	0	0	0	0
	DRIVE RATING	3304	-	-	-	-	-	-
	PARAMETER TABLE	3305	Par. table version	Par. table version	Par. table version	Par. table version	Par. table version	Par. table version



Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
5	5	5	5	5	5	5	5	3101	
30.0 s	30.0 s	30.0 s	30.0 s	30.0 s	30.0 s	30.0 s	30.0 s	3102	
6.0 s	6.0 s	6.0 s	6.0 s	6.0 s	6.0 s	6.0 s	6.0 s	3103	
DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	DISABLE	3104	
ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	DISABLE	ENABLE	ENABLE	3105	
ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	3106	
ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	DISABLE	ENABLE	ENABLE	3107	
ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	ENABLE	3108	
OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	3201	
50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	3202	
50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	3203	
CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	3204	
-	-	-	-	-	-	-	-	3205	
-	-	-	-	-	-	-	-	3206	
TORQUE	TORQUE	TORQUE	TORQUE	TORQUE	TORQUE	TORQUE	TORQUE	3207	
100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	3208	
100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	3209	
Firmware version	Firmware version	Firmware version	Firmware version	Firmware version	Firmware version	Firmware version	Firmware version	3301	
0	0	0	0	0	0	0	0	3302	
0	0	0	0	0	0	0	0	3303	
-	-	-	-	-	-	-	-	3304	
Par. table version	Par. table version	Par. table version	Par. table version	Par. table version	Par. table version	Par. table version	Par. table version	3305	

		HVAC default	Supply fan	Return fan	Cooling tower fan	Condenser	Booster pump
Parameter name	Par. index	1	2	3	4	5	6
<b>34 PANEL DISPLAY</b>	SIGNAL 1 PARAM	3401	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ
	SIGNAL 1 MIN	3402	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz
	SIGNAL 1 MAX	3403	500.0 Hz	500.0 Hz	500.0 Hz	500.0 Hz	500.0 Hz
	OUTPUT 1 DSP FORM	3404	DIRECT	DIRECT	DIRECT	DIRECT	DIRECT
	OUTPUT 1 UNIT	3405	%	%	%	%	%
	OUTPUT 1 MIN	3406	0.0%	0.0%	0.0%	0.0%	0.0%
	OUTPUT 1 MAX	3407	1000.0%	1000.0%	1000.0%	1000.0%	1000.0%
	SIGNAL 2 PARAM	3408	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT
	SIGNAL 2 MIN	3409	0.0 A	0.0 A	0.0 A	0.0 A	0.0 A
	SIGNAL 2 MAX	3410	-	-	-	-	-
	OUTPUT 2 DSP FORM	3411	DIRECT	DIRECT	DIRECT	DIRECT	DIRECT
	OUTPUT 2 UNIT	3412	A	A	A	A	A
	OUTPUT 2 MIN	3413	0.0 A	0.0 A	0.0 A	0.0 A	0.0 A
	OUTPUT 2 MAX	3414	-	-	-	-	-
	SIGNAL 3 PARAM	3415	AI1	AI1	AI1	AI1	AI1
	SIGNAL 3 MIN	3416	0.0%	0.0%	0.0%	0.0%	0.0%
	SIGNAL 3 MAX	3417	100.0%	100.0%	100.0%	100.0%	100.0%
	OUTPUT 3 DSP FORM	3418	DIRECT	DIRECT	DIRECT	DIRECT	DIRECT
	OUTPUT 3 UNIT	3419	V	V	V	V	V
OUTPUT 3 MIN	3420	0.0 V	0.0 V	0.0 V	0.0 V	0.0 V	
OUTPUT 3 MAX	3421	10.0 V	10.0 V	10.0 V	10.0 V	10.0 V	
<b>35 MOTOR TEMP MEAS</b>	SENSOR TYPE	3501	NONE	NONE	NONE	NONE	NONE
	INPUT SELECTION	3502	AI1	AI1	AI1	AI1	AI1
	ALARM LIMIT	3503	110 °C / 1500 ohm / 0	110 °C / 1500 ohm / 0	110 °C / 1500 ohm / 0	110 °C / 1500 ohm / 0	110 °C / 1500 ohm / 0
	FAULT LIMIT	3504	130 °C / 4000 ohm / 0	130 °C / 4000 ohm / 0	130 °C / 4000 ohm / 0	130 °C / 4000 ohm / 0	130 °C / 4000 ohm / 0

Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	3401	
0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	3402	
500.0 Hz	500.0 Hz	500.0 Hz	500.0 Hz	500.0 Hz	500.0 Hz	500.0 Hz	500.0 Hz	3403	
DIRECT	DIRECT	DIRECT	DIRECT	DIRECT	DIRECT	DIRECT	DIRECT	3404	
%	%	%	%	%	%	%	%	3405	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	3406	
1000.0%	1000.0%	1000.0%	1000.0%	1000.0%	1000.0%	1000.0%	1000.0%	3407	
CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	CURRENT	3408	
0.0 A	0.0 A	0.0 A	0.0 A	0.0 A	0.0 A	0.0 A	0.0 A	3409	
-	-	-	-	-	-	-	-	3410	
DIRECT	DIRECT	DIRECT	DIRECT	DIRECT	DIRECT	DIRECT	DIRECT	3411	
A	A	A	A	A	A	A	A	3412	
0.0 A	0.0 A	0.0 A	0.0 A	0.0 A	0.0 A	0.0 A	0.0 A	3413	
-	-	-	-	-	-	-	-	3414	
AI1	AI1	TORQUE	TORQUE	AI1	AI1	AI1	NOT SEL	3415	
0.0%	0.0%	-200.0%	-200.0%	0.0%	0.0%	0.0%	-	3416	
100.0%	100.0%	200.0%	200.0%	100.0%	100.0%	100.0%	-	3417	
DIRECT	DIRECT	DIRECT	DIRECT	DIRECT	DIRECT	DIRECT	DIRECT	3418	
V	V	%	%	V	V	V	-	3419	
0.0 V	0.0 V	-200.0%	-200.0%	0.0 V	0.0 V	0.0 V	-	3420	
10.0 V	10.0 V	200.0%	200.0%	10.0 V	10.0 V	10.0 V	-	3421	
NONE	NONE	NONE	NONE	NONE	NONE	NONE	NONE	3501	
AI1	AI1	AI1	AI1	AI1	AI1	AI1	AI1	3502	
110 °C / 1500 ohm / 0	110 °C / 1500 ohm / 0	110 °C / 1500 ohm / 0	110 °C / 1500 ohm / 0	110 °C / 1500 ohm / 0	110 °C / 1500 ohm / 0	110 °C / 1500 ohm / 0	110 °C / 1500 ohm / 0	3503	
130 °C / 4000 ohm / 0	130 °C / 4000 ohm / 0	130 °C / 4000 ohm / 0	130 °C / 4000 ohm / 0	130 °C / 4000 ohm / 0	130 °C / 4000 ohm / 0	130 °C / 4000 ohm / 0	130 °C / 4000 ohm / 0	3504	

	Parameter name	Par. index	HVAC	Supply fan	Return fan	Cooling tower fan	Condenser	Booster pump
			default	1	2	3	4	5
<b>36 TIMED FUNCTIONS</b>	TIMERS ENABLE	3601	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	START TIME 1	3602	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00
	STOP TIME 1	3603	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00
	START DAY 1	3604	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY
	STOP DAY 1	3605	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY
	START TIME 2	3606	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00
	STOP TIME 2	3607	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00
	START DAY 2	3608	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY
	STOP DAY 2	3609	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY
	START TIME 3	3610	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00
	STOP TIME 3	3611	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00
	START DAY 3	3612	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY
	STOP DAY 3	3613	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY
	START TIME 4	3614	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00
	STOP TIME 4	3615	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00
	START DAY 4	3616	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY
	STOP DAY 4	3617	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY
	BOOST SEL	3622	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	BOOST TIME	3623	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00
	TIMER 1 SRC	3626	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
TIMER 2 SRC	3627	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	
TIMER 3 SRC	3628	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	
TIMER 4 SRC	3629	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	

Pump alternation	Internal timer	Internal time, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
NOT SEL	D11	D11	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	3601	
0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	3602	
0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	3603	
MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	3604	
MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	3605	
0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	3606	
0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	3607	
MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	3608	
MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	3609	
0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	3610	
0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	3611	
MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	3612	
MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	3613	
0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	3614	
0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	3615	
MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	3616	
MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	MONDAY	3617	
NOT SEL	D13	D13	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	3622	
0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	0:00:00	3623	
NOT SEL	P1+P2+P3 +P4+B	P1+P2+P3 +P4+B	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	3626	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	3627	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	3628	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	3629	

	Parameter name	Par. index	HVAC	Supply fan	Return fan	Cooling	Condenser	Booster
			default			tower fan		pump
			1	2	3	4	5	6
<b>37 USER LOAD CURVE</b>	USER LOAD C MODE	3701	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	USER LOAD C FUNC	3702	FAULT	FAULT	FAULT	FAULT	FAULT	FAULT
	USER LOAD C TIME	3703	20 s	20 s	20 s	20 s	20 s	20 s
	LOAD FREQ 1	3704	5 Hz	5 Hz	5 Hz	5 Hz	5 Hz	5 Hz
	LOAD TORQ LOW 1	3705	10%	10%	10%	10%	10%	10%
	LOAD TORQ HIGH 1	3706	300%	300%	300%	300%	300%	300%
	LOAD FREQ 2	3707	25 Hz	25 Hz	25 Hz	25 Hz	25 Hz	25 Hz
	LOAD TORQ LOW 2	3708	15%	15%	15%	15%	15%	15%
	LOAD TORQ HIGH 2	3709	300%	300%	300%	300%	300%	300%
	LOAD FREQ 3	3710	43 Hz	43 Hz	43 Hz	43 Hz	43 Hz	43 Hz
	LOAD TORQ LOW 3	3711	25%	25%	25%	25%	25%	25%
	LOAD TORQ HIGH 3	3712	300%	300%	300%	300%	300%	300%
	LOAD FREQ 4	3713	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz
	LOAD TORQ LOW 4	3714	30%	30%	30%	30%	30%	30%
	LOAD TORQ HIGH 4	3715	300%	300%	300%	300%	300%	300%
	LOAD FREQ 5	3716	500 Hz	500 Hz	500 Hz	500 Hz	500 Hz	500 Hz
	LOAD TORQ LOW 5	3717	30%	30%	30%	30%	30%	30%
	LOAD TORQ HIGH 5	3718	300%	300%	300%	300%	300%	300%

Pump alternation	Internal timer	Internal time, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	3701	
FAULT	FAULT	FAULT	FAULT	FAULT	FAULT	FAULT	FAULT	3702	
20 s	20 s	20 s	20 s	20 s	20 s	20 s	20 s	3703	
5 Hz	5 Hz	5 Hz	5 Hz	5 Hz	5 Hz	5 Hz	5 Hz	3704	
10%	10%	10%	10%	10%	10%	10%	10%	3705	
300%	300%	300%	300%	300%	300%	300%	300%	3706	
25 Hz	25 Hz	25 Hz	25 Hz	25 Hz	25 Hz	25 Hz	25 Hz	3707	
15%	15%	15%	15%	15%	15%	15%	15%	3708	
300%	300%	300%	300%	300%	300%	300%	300%	3709	
43 Hz	43 Hz	43 Hz	43 Hz	43 Hz	43 Hz	43 Hz	43 Hz	3710	
25%	25%	25%	25%	25%	25%	25%	25%	3711	
300%	300%	300%	300%	300%	300%	300%	300%	3712	
50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	3713	
30%	30%	30%	30%	30%	30%	30%	30%	3714	
300%	300%	300%	300%	300%	300%	300%	300%	3715	
500 Hz	500 Hz	500 Hz	500 Hz	500 Hz	500 Hz	500 Hz	500 Hz	3716	
30%	30%	30%	30%	30%	30%	30%	30%	3717	
300%	300%	300%	300%	300%	300%	300%	300%	3718	

	Parameter name	Par. index	HVAC	Supply fan	Return fan	Cooling	Condenser	Booster pump
			default			tower fan		
			1	2	3	4	5	6
40 PROCESS PID SET 1	GAIN	4001	2.5	0.7	0.7	2.5	2.5	2.5
	INTEGRATION TIME	4002	3.0 s	10.0 s	10.0 s	3.0 s	3.0 s	3.0 s
	DERIVATION TIME	4003	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	PID DERIV FILTER	4004	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s
	ERROR VALUE INV	4005	NO	NO	NO	NO	NO	NO
	UNITS	4006	%	%	%	%	%	%
	UNIT SCALE	4007	1	1	1	1	1	1
	0% VALUE	4008	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%
	100% VALUE	4009	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%
	SET POINT SEL	4010	KEYPAD	KEYPAD	KEYPAD	KEYPAD	KEYPAD	KEYPAD
	INTERNAL SETPNT	4011	40.0%	40.0%	40.0%	40.0%	40.0%	40.0%
	SETPOINT MIN	4012	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%
	SETPOINT MAX	4013	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%
	FBK SEL	4014	ACT1	ACT1	ACT1	ACT1	ACT1	ACT1
	FBK MULTIPLIER	4015	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	ACT1 INPUT	4016	AI2	AI2	AI2	AI2	AI2	AI2
	ACT2 INPUT	4017	AI2	AI2	AI2	AI2	AI2	AI2
	ACT1 MINIMUM	4018	0%	0%	0%	0%	0%	0%
	ACT1 MAXIMUM	4019	100%	100%	100%	100%	100%	100%
	ACT2 MINIMUM	4020	0%	0%	0%	0%	0%	0%
	ACT2 MAXIMUM	4021	100%	100%	100%	100%	100%	100%
	SLEEP SELECTION	4022	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	PID SLEEP LEVEL	4023	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz
	PID SLEEP DELAY	4024	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s
	WAKE-UP DEV	4025	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%
	WAKE-UP DELAY	4026	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s
	PID 1 PARAM SET	4027	SET 1	SET 1	SET 1	SET 1	SET 1	SET 1



Pump alternation	Internal timer	Internal time, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
2.5	2.5	1.0	2.5	2.5	0.7	2.5	1.0	4001	
3.0 s	3.0 s	60.0 s	3.0 s	3.0 s	10.0 s	3.0 s	60.0 s	4002	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	4003	
1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	4004	
NO	NO	NO	NO	NO	NO	NO	NO	4005	
%	%	%	%	%	%	%	%	4006	
1	1	1	1	1	1	1	1	4007	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	4008	
100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	4009	
KEYPAD	KEYPAD	AI1	KEYPAD	INTERNAL	INTERNAL	KEYPAD	AI1	4010	
40.0%	40.0%	40.0%	40.0%	50.0%	50.0%	40.0%	40.0%	4011	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	4012	
100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	4013	
ACT1	ACT1	ACT1	ACT1	ACT1	ACT1	ACT1	ACT1	4014	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	4015	
AI2	AI2	AI2	AI2	AI2	AI2	AI2	AI2	4016	
AI2	AI2	AI2	AI2	AI2	AI2	AI2	AI2	4017	
0%	0%	0%	0%	0%	0%	0%	0%	4018	
100%	100%	100%	100%	100%	100%	100%	100%	4019	
0%	0%	0%	0%	0%	0%	0%	0%	4020	
100%	100%	100%	100%	100%	100%	100%	100%	4021	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	4022	
0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	4023	
60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	4024	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	4025	
0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	4026	
SET 1	SET 1	SET 1	SET 1	DI3	DI3	SET 1	SET 1	4027	

	Parameter name	Par. index	HVAC	Supply fan	Return fan	Cooling	Condenser	Booster pump
			default			tower fan		
			1	2	3	4	5	6
41 PROCESS PID SET 2	GAIN	4101	2.5	1.0	1.0	1.0	1.0	1.0
	INTEGRATION TIME	4102	3.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s
	DERIVATION TIME	4103	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	PID DERIV FILTER	4104	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s
	ERROR VALUE INV	4105	NO	NO	NO	NO	NO	NO
	UNITS	4106	%	%	%	%	%	%
	UNIT SCALE	4107	1	1	1	1	1	1
	0% VALUE	4108	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%
	100% VALUE	4109	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%
	SET POINT SEL	4110	KEYPAD	KEYPAD	KEYPAD	KEYPAD	KEYPAD	KEYPAD
	INTERNAL SETPNT	4111	40.0%	40.0%	40.0%	40.0%	40.0%	40.0%
	SETPOINT MIN	4112	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%
	SETPOINT MAX	4113	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%
	FBK SEL	4114	ACT1	ACT1	ACT1	ACT1	ACT1	ACT1
	FBK MULTIPLIER	4115	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	ACT1 INPUT	4116	AI2	AI2	AI2	AI2	AI2	AI2
	ACT2 INPUT	4117	AI2	AI2	AI2	AI2	AI2	AI2
	ACT1 MINIMUM	4118	0%	0%	0%	0%	0%	0%
	ACT1 MAXIMUM	4119	100%	100%	100%	100%	100%	100%
	ACT2 MINIMUM	4120	0%	0%	0%	0%	0%	0%
	ACT2 MAXIMUM	4121	100%	100%	100%	100%	100%	100%
	SLEEP SELECTION	4122	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
PID SLEEP LEVEL	4123	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	
PID SLEEP DELAY	4124	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	
WAKE-UP DEV	4125	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	
WAKE-UP DELAY	4126	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	

Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
1.0	2.5	1.0	2.5	2.5	0.7	1.0	1.0	4101	
60.0 s	3.0 s	60.0 s	3.0 s	3.0 s	10.0 s	3.0 s	60.0 s	4102	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	4103	
1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	4104	
NO	NO	NO	NO	NO	NO	NO	NO	4105	
%	%	%	%	%	%	%	%	4106	
1	1	1	1	1	1	1	1	4107	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	4108	
100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	4109	
KEYPAD	KEYPAD	AI1	KEYPAD	INTERNAL	INTERNAL	KEYPAD	AI1	4110	
40.0%	40.0%	40.0%	40.0%	100.0%	100.0%	40.0%	40.0%	4111	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	4112	
100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	4113	
ACT1	ACT1	ACT1	ACT1	ACT1	ACT1	ACT1	ACT1	4114	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	4115	
AI2	AI2	AI2	AI2	AI2	AI2	AI2	AI2	4116	
AI2	AI2	AI2	AI2	AI2	AI2	AI2	AI2	4117	
0%	0%	0%	0%	0%	0%	0%	0%	4118	
100%	100%	100%	100%	100%	100%	100%	100%	4119	
0%	0%	0%	0%	0%	0%	0%	0%	4120	
100%	100%	100%	100%	100%	100%	100%	100%	4121	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	4122	
0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	0.0 Hz	4123	
60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	4124	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	4125	
0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	4126	

	Parameter name	Par. index	HVAC	Supply fan	Return fan	Cooling tower fan	Condenser	Booster pump
			default	2	3	4	5	6
<b>42 EXT / TRIM PID</b>	GAIN	4201	1.0	1.0	1.0	1.0	1.0	1.0
	INTEGRATION TIME	4202	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s
	DERIVATION TIME	4203	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s
	PID DERIV FILTER	4204	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s
	ERROR VALUE INV	4205	NO	NO	NO	NO	NO	NO
	UNITS	4206	%	%	%	%	%	%
	UNIT SCALE	4207	1	1	1	1	1	1
	0% VALUE	4208	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%
	100% VALUE	4209	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%
	SET POINT SEL	4210	AI1	AI1	AI1	AI1	AI1	AI1
	INTERNAL SETPNT	4211	40.0%	40.0%	40.0%	40.0%	40.0%	40.0%
	SETPOINT MIN	4212	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%
	SETPOINT MAX	4213	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%
	FBK SEL	4214	ACT1	ACT1	ACT1	ACT1	ACT1	ACT1
	FBK MULTIPLIER	4215	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	ACT1 INPUT	4216	AI2	AI2	AI2	AI2	AI2	AI2
	ACT2 INPUT	4217	AI2	AI2	AI2	AI2	AI2	AI2
	ACT1 MINIMUM	4218	0%	0%	0%	0%	0%	0%
	ACT1 MAXIMUM	4219	100%	100%	100%	100%	100%	100%
	ACT2 MINIMUM	4220	0%	0%	0%	0%	0%	0%
	ACT2 MAXIMUM	4221	100%	100%	100%	100%	100%	100%
	ACTIVATE	4228	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
OFFSET	4229	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	
TRIM MODE	4230	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	
TRIM SCALE	4231	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	
CORRECTION SRC	4232	PID2 REF	PID2 REF	PID2 REF	PID2 REF	PID2 REF	PID2 REF	
<b>45 ENERGY SAVING</b>	ENERGY PRICE	4502	0	0	0	0	0	0
	CO2 CONV FACTOR	4507	0.5	0.5	0.5	0.5	0.5	0.5
	PUMP POWER	4508	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%
	ENERGY RESET	4509	DONE	DONE	DONE	DONE	DONE	DONE

Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	4201	
60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	60.0 s	4202	
0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	0.0 s	4203	
1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	1.0 s	4204	
NO	NO	NO	NO	NO	NO	NO	NO	4205	
%	%	%	%	%	%	%	%	4206	
1	1	1	1	1	1	1	1	4207	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	4208	
100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	4209	
AI1	AI1	AI1	AI1	AI1	AI1	AI1	AI1	4210	
40.0%	40.0%	40.0%	40.0%	40.0%	40.0%	40.0%	40.0%	4211	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	4212	
100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	4213	
ACT1	ACT1	ACT1	ACT1	ACT1	ACT1	ACT1	ACT1	4214	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	4215	
AI2	AI2	AI2	AI2	AI2	AI2	AI2	AI2	4216	
AI2	AI2	AI2	AI2	AI2	AI2	AI2	AI2	4217	
0%	0%	0%	0%	0%	0%	0%	0%	4218	
100%	100%	100%	100%	100%	100%	100%	100%	4219	
0%	0%	0%	0%	0%	0%	0%	0%	4220	
100%	100%	100%	100%	100%	100%	100%	100%	4221	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	4228	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	4229	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	4230	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	4231	
PID2 REF	PID2 REF	PID2 REF	PID2 REF	PID2 REF	PID2 REF	PID2 REF	PID2 REF	4232	
0	0	0	0	0	0	0	0	4502	
0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	4507	
100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	100.0%	4508	
DONE	DONE	DONE	DONE	DONE	DONE	DONE	DONE	4509	

	Parameter name	Par. index	HVAC	Supply fan	Return fan	Cooling tower fan	Condenser	Booster pump
			default					
			1	2	3	4	5	6
51 EXT COMM MODULE	FBA TYPE	5101	NOT DEFINED	NOT DEFINED	NOT DEFINED	NOT DEFINED	NOT DEFINED	NOT DEFINED
	FBA PAR 2...26	5102.. .5126	0	0	0	0	0	0
	FBA PAR REFRESH	5127	DONE	DONE	DONE	DONE	DONE	DONE
	FILE CPI FW REV	5128	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex
	FILE CONFIG ID	5129	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex
	FILE CONFIG REV	2130	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex
	FBA STATUS	5131	-	-	-	-	-	-
	FBA CPI FW REV	5132	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex
	FBA APPL FW REV	5133	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex
52 PANEL COMM	STATION ID	5201	1	1	1	1	1	1
	BAUD RATE	5202	9.6 kb/s	9.6 kb/s	9.6 kb/s	9.6 kb/s	9.6 kb/s	9.6 kb/s
	PARITY	5203	8 NONE 1	8 NONE 1	8 NONE 1	8 NONE 1	8 NONE 1	8 NONE 1
	OK MESSAGES	5204	-	-	-	-	-	-
	PARITY ERRORS	5205	-	-	-	-	-	-
	FRAME ERRORS	5206	-	-	-	-	-	-
	BUFFER OVERRUNS	5207	-	-	-	-	-	-
	CRC ERRORS	5208	-	-	-	-	-	-
53 EFB PROTOCOL	EFB PROTOCOL ID	5301	0	0	0	0	0	0
	EFB STATION ID	5302	1	1	1	1	1	1
	EFB BAUD RATE	5303	9.6 kb/s	9.6kibs/s	9.6kibs/s	9.6kibs/s	9.6kibs/s	9.6kibs/s
	EFB PARITY	5304	0	0	0	0	0	0
	EFB CTRL PROFILE	5305	0	0	0	0	0	0
	EFB OK MESSAGES	5306	0	0	0	0	0	0
	EFB CRC ERRORS	5307	0	0	0	0	0	0
	EFB UART ERRORS	5308	0	0	0	0	0	0
	EFB STATUS	5309	-	-	-	-	-	-
EFB PAR 10...20	5310.. .5320	0	0	0	0	0	0	

Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14	5101	
NOT DEFINED	NOT DEFINED	NOT DEFINED	NOT DEFINED	NOT DEFINED	NOT DEFINED	NOT DEFINED	NOT DEFINED	5102...	
0	0	0	0	0	0	0	0	5126	
DONE	DONE	DONE	DONE	DONE	DONE	DONE	DONE	5127	
0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	5128	
0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	5129	
0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	2130	
-	-	-	-	-	-	-	-	5131	
0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	5132	
0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	0000 hex	5133	
1	1	1	1	1	1	1	1	5201	
9.6 kb/s	9.6 kb/s	9.6 kb/s	9.6 kb/s	9.6 kb/s	9.6 kb/s	9.6 kb/s	9.6 kb/s	5202	
8 NONE 1	8 NONE 1	8 NONE 1	8 NONE 1	8 NONE 1	8 NONE 1	8 NONE 1	8 NONE 1	5203	
-	-	-	-	-	-	-	-	5204	
-	-	-	-	-	-	-	-	5205	
-	-	-	-	-	-	-	-	5206	
-	-	-	-	-	-	-	-	5207	
-	-	-	-	-	-	-	-	5208	
0	0	0	0	0	0	0	0	5301	
1	1	1	1	1	1	1	1	5302	
9.6 kb/s	9.6 kb/s	9.6 kb/s	9.6 kb/s	9.6 kb/s	9.6 kb/s	9.6 kb/s	9.6 kb/s	5303	
0	0	0	0	0	0	0	0	5304	
0	0	0	0	0	0	0	0	5305	
0	0	0	0	0	0	0	0	5306	
0	0	0	0	0	0	0	0	5307	
0	0	0	0	0	0	0	0	5308	
-	-	-	-	-	-	-	-	5309	
0	0	0	0	0	0	0	0	5310...	
								5320	

	Parameter name	Par. index	HVAC	Supply fan	Return fan	Cooling	Condenser	Booster pump
			default			tower fan		
			1	2	3	4	5	6
64 LOAD ANALYZER	PVL SIGNAL	6401	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ
	PVL FILTER TIME	6402	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s
	LOGGERS RESET	6403	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	AL2 SIGNAL	6404	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ
	AL2 SIGNAL BASE	6405	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz
	PEAK VALUE	6406	-	-	-	-	-	-
	PEAK TIME 1	6407	-	-	-	-	-	-
	PEAK TIME 2	6408	-	-	-	-	-	-
	CURRENT AT PEAK	6409	-	-	-	-	-	-
	UDC AT PEAK	6410	-	-	-	-	-	-
	FREQ AT PEAK	6411	-	-	-	-	-	-
	TIME OF RESET 1	6412	-	-	-	-	-	-
	TIME OF RESET 2	6413	-	-	-	-	-	-
	AL1RANGE0 TO10	6414	-	-	-	-	-	-
	AL1RANGE10 TO20	6415	-	-	-	-	-	-
	AL1RANGE20 TO30	6416	-	-	-	-	-	-
	AL1RANGE30 TO40	6417	-	-	-	-	-	-
	AL1RANGE40 TO50	6418	-	-	-	-	-	-
	AL1RANGE50 TO60	6419	-	-	-	-	-	-
	AL1RANGE60 TO70	6420	-	-	-	-	-	-
	AL1RANGE70 TO80	6421	-	-	-	-	-	-
	AL1RANGE80 TO90	6422	-	-	-	-	-	-
	AL1RANGE90 TO	6423	-	-	-	-	-	-
	AL2RANGE0 TO10	6424	-	-	-	-	-	-
	AL2RANGE10 TO20	6425	-	-	-	-	-	-
	AL2RANGE20 TO30	6426	-	-	-	-	-	-
	AL2RANGE30 TO40	6427	-	-	-	-	-	-
	AL2RANGE40 TO50	6428	-	-	-	-	-	-
	AL2RANGE50 TO60	6429	-	-	-	-	-	-
	AL2RANGE60 TO70	6430	-	-	-	-	-	-
	AL2RANGE70 TO80	6431	-	-	-	-	-	-
	AL2RANGE80 TO90	6432	-	-	-	-	-	-
	AL2RANGE90 TO	6433	-	-	-	-	-	-



Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	6401	
0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	0.1 s	6402	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	6403	
OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	OUTPUT FREQ	6404	
50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	50 Hz	6405	
-	-	-	-	-	-	-	-	6406	
-	-	-	-	-	-	-	-	6407	
-	-	-	-	-	-	-	-	6408	
-	-	-	-	-	-	-	-	6409	
-	-	-	-	-	-	-	-	6410	
-	-	-	-	-	-	-	-	6411	
-	-	-	-	-	-	-	-	6412	
-	-	-	-	-	-	-	-	6413	
-	-	-	-	-	-	-	-	6414	
-	-	-	-	-	-	-	-	6415	
-	-	-	-	-	-	-	-	6416	
-	-	-	-	-	-	-	-	6417	
-	-	-	-	-	-	-	-	6418	
-	-	-	-	-	-	-	-	6419	
-	-	-	-	-	-	-	-	6420	
-	-	-	-	-	-	-	-	6421	
-	-	-	-	-	-	-	-	6422	
-	-	-	-	-	-	-	-	6423	
-	-	-	-	-	-	-	-	6424	
-	-	-	-	-	-	-	-	6425	
-	-	-	-	-	-	-	-	6426	
-	-	-	-	-	-	-	-	6427	
-	-	-	-	-	-	-	-	6428	
-	-	-	-	-	-	-	-	6429	
-	-	-	-	-	-	-	-	6430	
-	-	-	-	-	-	-	-	6431	
-	-	-	-	-	-	-	-	6432	
-	-	-	-	-	-	-	-	6433	

	Parameter name	Par. index	HVAC	Supply fan	Return fan	Cooling	Condenser	Booster pump
			default			tower fan		
			1	2	3	4	5	6
<b>81 PFA CONTROL</b>	REFERENCE STEP 1	8103	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%
	REFERENCE STEP 2	8104	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%
	REFERENCE STEP 3	8105	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%
	START FREQ 1	8109	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz
	START FREQ 2	8110	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz
	START FREQ 3	8111	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz
	LOW FREQ 1	8112	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz
	LOW FREQ 2	8113	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz
	LOW FREQ 3	8114	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz
	AUX MOT START D	8115	5.0 s	5.0 s	5.0 s	5.0 s	5.0 s	5.0 s
	AUX MOT STOP D	8116	3.0 s	3.0 s	3.0 s	3.0 s	3.0 s	3.0 s
	NR OF AUX MOT	8117	1	1	1	1	1	1
	AUTOCHNG INTERV	8118	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	AUTOCHNG LEVEL	8119	50.0%	50.0%	50.0%	50.0%	50.0%	50.0%
	INTERLOCKS	8120	DI4	DI4	DI4	DI4	DI4	DI4
	REG BYPASS CTRL	8121	NO	NO	NO	NO	NO	NO
	PFA START DELAY	8122	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s
	PFA ENABLE	8123	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	ACC IN AUX STOP	8124	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
	DEC IN AUX START	8125	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL
TIMED AUTOCHNG	8126	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	
MOTORS	8127	2	2	2	2	2	2	
AUX START ORDER	8128	EVEN RUNTIME	EVEN RUNTIME	EVEN RUNTIME	EVEN RUNTIME	EVEN RUNTIME	EVEN RUNTIME	
<b>98 OPTIONS</b>	COMM PROT SEL	9802	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL

Pump alternation	Internal timer	Internal timer, c. speeds	Floating point	Dual setpoint PID	Dual setpoint PID, c. sp.	E-bypass	Hand control	Par. index	User
7	8	9	10	11	12	13	14		
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	8103	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	8104	
0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	0.0%	8105	
50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	8109	
50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	8110	
50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	50.0 Hz	8111	
25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	8112	
25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	8113	
25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	25.0 Hz	8114	
5.0 s	5.0 s	5.0 s	5.0 s	5.0 s	5.0 s	5.0 s	5.0 s	8115	
3.0 s	3.0 s	3.0 s	3.0 s	3.0 s	3.0 s	3.0 s	3.0 s	8116	
1	1	1	1	1	1	1	1	8117	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	8118	
50.0%	50.0%	50.0%	50.0%	50.0%	50.0%	50.0%	50.0%	8119	
DI4	DI4	DI4	DI4	DI4	DI4	DI4	DI4	8120	
NO	NO	NO	NO	NO	NO	NO	NO	8121	
0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	0.50 s	8122	
ACTIVE	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	8123	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	8124	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	8125	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	8126	
2	2	2	2	2	2	2	2	8127	
EVEN RUNTIME	EVEN RUNTIME	EVEN RUNTIME	EVEN RUNTIME	EVEN RUNTIME	EVEN RUNTIME	EVEN RUNTIME	EVEN RUNTIME	8128	
NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	NOT SEL	9802	



# Diagnostics and maintenance

---

## What this chapter contains

This chapter contains information on fault diagnostics, fault correction, resetting and maintaining the drive.

---



**WARNING!** Do not attempt any measurement, parts replacement or other service procedure not described in this manual. Such action will void the warranty, may endanger correct operation, and increase downtime and expense.

---



**WARNING!** All electrical installation and maintenance work described in this chapter should only be undertaken by qualified service personnel. The safety instructions on page [8](#) must be followed.

## Diagnostics displays

The drive detects error situations and reports them using:

- green and red LED on the body of the drive
- status LED on the control panel (if a HVAC control panel is attached to the drive)
- control panel display (if a HVAC control panel is attached to the drive)
- Fault Word and Alarm Word parameter bits (parameters 0305 to 0309). See [Group 03: FB ACTUAL SIGNALS](#).

The form of the display depends on the severity of the error. You can specify the severity for many errors by directing the drive to:

- ignore the error situation
- report the situation as an alarm
- report the situation as a fault.

### Red – faults

The drive signals that it has detected a severe error, or fault, by:

- enabling the red LED on the drive (LED is either steady or flashing)
- showing the steady red status LED on the control panel (if attached to the drive)
- setting an appropriate bit in a Fault Word parameter (0305 to 0307)
- overriding the control panel display with the display of a fault code
- stopping the motor (if it was on).

The fault code on the control panel display is temporary.

Pressing any of the following removes the fault message:

MENU, ENTER, UP key or DOWN key. The message reappears after a few seconds if the control panel is not touched and the fault is still active.

## Flashing green – alarms

For less severe errors, called alarms, the diagnostic display is advisory. For these situations, the drive is simply reporting that it had detected something “unusual”. In these situations, the drive:

- flashes the green LED on the drive (does not apply to alarms that arise from control panel operation errors)
- flashes the green status LED on the control panel (if attached to the drive)
- sets an appropriate bit in an Alarm Word parameter (0308 or 0309). See [Group 03: FB ACTUAL SIGNALS](#) for bit definitions.
- overrides the control panel display with the display of an alarm code and/or name.

Alarm messages disappear from the control panel display after a few seconds. The message returns periodically as long as the alarm condition exists.

## Correcting faults

The recommended corrective action for faults is:

1. Use the [Fault listing](#) table on page [371](#) to find and address the root cause of the problem.
2. Reset the drive. See section [Fault resetting](#) on page [380](#).

## Fault listing

The following table lists the faults by code number and describes each. The fault name is the long form shown on the control panel display when the fault occurs. The fault names shown in the Fault logger mode (see page [92](#)) and the fault names for parameter 0401 LAST FAULT may be shorter.

Fault code	Fault name in the panel	Description and recommended corrective action
1	OVERCURRENT	Output current is excessive. Check for and correct: <ul style="list-style-type: none"> <li>• excessive motor load</li> <li>• insufficient acceleration time (parameters 2202 ACCELER TIME 1 and 2205 ACCELER TIME 2)</li> <li>• faulty motor, motor cables or connections.</li> </ul>

Fault code	Fault name in the panel	Description and recommended corrective action
2	DC OVERVOLT	<p>Intermediate circuit DC voltage is excessive. Check for and correct:</p> <ul style="list-style-type: none"> <li>• static or transient overvoltages in the input power supply</li> <li>• insufficient deceleration time (parameters 2203 DECELER TIME 1 and 2206 DECELER TIME 2)</li> <li>• undersized brake chopper (if present).</li> </ul>
3	DEV OVERTEMP	<p>Drive heatsink is overheated. Temperature is at or above limit.  R1...R4: 115 °C (239 °F)  R5/R6: 125 °C (257 °F).</p> <p>Check for and correct:</p> <ul style="list-style-type: none"> <li>• fan failure</li> <li>• obstructions in the air flow</li> <li>• dirt or dust coating on the heat sink</li> <li>• excessive ambient temperature</li> <li>• excessive motor load.</li> </ul>
4	SHORT CIRC	<p>Fault current. Check for and correct:</p> <ul style="list-style-type: none"> <li>• a short-circuit in the motor cable(s) or motor</li> <li>• supply disturbances.</li> </ul>
5	RESERVED	Not used.
6	DC UNDERVOLT	<p>Intermediate circuit DC voltage is not sufficient. Check for and correct:</p> <ul style="list-style-type: none"> <li>• missing phase in the input power supply</li> <li>• blown fuse</li> <li>• undervoltage in mains.</li> </ul>
7	AI1 LOSS	<p>Analogue input 1 loss. Analogue input value is less than AI1 FAULT LIMIT (3021). Check for and correct:</p> <ul style="list-style-type: none"> <li>• source and connection for analogue input</li> <li>• parameter settings for AI1 FAULT LIMIT (3021) and 3001 AI&lt;MIN FUNCTION.</li> </ul>



Fault code	Fault name in the panel	Description and recommended corrective action
8	AI2 LOSS	<p>Analogue input 2 loss. Analogue input value is less than AI2 FAULT LIMIT (3022). Check for and correct:</p> <ul style="list-style-type: none"> <li>• source and connection for analogue input</li> <li>• parameter settings for AI2 FAULT LIMIT (3022) and 3001 AI&lt;MIN FUNCTION.</li> </ul>
9	MOT OVERTEMP	<p>Motor is too hot, as estimated by the drive.</p> <ul style="list-style-type: none"> <li>• Check for overloaded motor.</li> <li>• Adjust the parameters used for the estimate (3005...3009).</li> <li>• Check the temperature sensors and <a href="#">Group 35: MOTOR TEMP MEAS</a> parameters.</li> </ul>
10	PANEL LOSS	<p>Panel communication is lost and either:</p> <ul style="list-style-type: none"> <li>• the drive is in local control mode (the control panel displays HAND), or</li> <li>• the drive is in remote control mode (AUTO) and is parameterized to accept start/stop, direction or reference from the control panel.</li> </ul> <p>To correct, check:</p> <ul style="list-style-type: none"> <li>• communication lines and connections</li> <li>• parameter 3002 PANEL COMM ERR</li> <li>• parameters in <a href="#">Group 10: START/STOP/DIR</a> and <a href="#">Group 11: REFERENCE SELECT</a> (if drive operation is AUTO).</li> </ul>
11	ID RUN FAIL	<p>The motor ID run was not completed successfully. Check for and correct:</p> <ul style="list-style-type: none"> <li>• motor connections.</li> </ul>
12	MOTOR STALL	<p>Motor or process stall. Motor is operating in the stall region. Check for and correct:</p> <ul style="list-style-type: none"> <li>• excessive load</li> <li>• insufficient motor power</li> <li>• parameters 3010...3012.</li> </ul>
13	RESERVED	Not used.

Fault code	Fault name in the panel	Description and recommended corrective action
14	EXT FAULT 1	Digital input defined to report the first external fault is active. See parameter 3003 EXTERNAL FAULT 1.
15	EXT FAULT 2	Digital input defined to report the second external fault is active. See parameter 3004 EXTERNAL FAULT 2.
16	EARTH FAULT	<p>The load on the input power system is out of balance.</p> <ul style="list-style-type: none"> <li>• Check for/correct faults in the motor or motor cable.</li> <li>• Verify that motor cable does not exceed max. specified length.</li> <li>• Decrease the detection level for earth fault with parameter 3028 earth fault lvl.</li> </ul> <p><b>Note:</b> Disabling ground (earth fault) may void the warranty.</p>
17	OBSOLETE	Not used.
18	THERM FAIL	Internal fault. The thermistor measuring the internal temperature of the drive is open or shorted. Contact your local ABB representative.
19	OPEX LINK	Internal fault. A communication-related problem has been detected between the control and main circuit boards. Contact your local ABB representative.
20	OPEX PWR	Internal fault. Exceptionally low voltage detected on the main circuit board. Contact your local ABB representative.
21	CURR MEAS	Internal fault. Current measurement is out of range. Contact your local ABB representative.
22	SUPPLY PHASE	<p>Ripple voltage in the DC link is too high. Check for and correct:</p> <ul style="list-style-type: none"> <li>• missing mains phase</li> <li>• blown fuse.</li> </ul>
23	RESERVED	Not used.

Fault code	Fault name in the panel	Description and recommended corrective action
24	OVERSPEED	<p>Motor speed is greater than 120% of the larger (in magnitude) of 2001 MINIMUM SPEED or 2002 MAXIMUM SPEED. Check for and correct:</p> <ul style="list-style-type: none"> <li>• parameter settings for 2001 and 2002</li> <li>• adequacy of motor braking torque</li> <li>• applicability of torque control</li> <li>• brake chopper and resistor.</li> </ul>
25	RESERVED	Not used.
26	DRIVE ID	Internal fault. Configuration block drive ID is not valid. Contact your local ABB representative.
27	CONFIG FILE	Internal configuration file has an error. Contact your local ABB representative.
28	SERIAL 1 ERR	<p>Fieldbus communication has timed out. Check for and correct:</p> <ul style="list-style-type: none"> <li>• fault setup (3018 COMM FAULT FUNC and 3019 COMM FAULT TIME)</li> <li>• communication settings (<a href="#">Group 51: EXT COMM MODULE</a> or <a href="#">Group 53: EFB PROTOCOL</a> as appropriate)</li> <li>• poor connections and/or noise on line.</li> </ul>
29	EFB CON FILE	Error in reading the configuration file for the fieldbus adapter.
30	FORCE TRIP	Fault trip forced by the fieldbus. See the fieldbus user's manual.
31	EFB 1	Fault code reserved for the EFB protocol application. The meaning is protocol dependent.
32	EFB 2	
33	EFB 3	

Fault code	Fault name in the panel	Description and recommended corrective action
34	MOTOR PHASE	Fault in the motor circuit. One of the motor phases is lost. Check for and correct: <ul style="list-style-type: none"> <li>• motor fault</li> <li>• motor cable fault</li> <li>• thermal relay fault (if used)</li> <li>• internal fault.</li> </ul>
35	OUTP WIRING	Incorrect input power and motor cable connection (i.e., input power cable is connected to drive motor connection). The fault can be erroneously declared if the drive is faulty or the input power is a delta grounded system and the motor cable capacitance is large. This fault can be disabled by using parameter 3023 WIRING FAULT. <ul style="list-style-type: none"> <li>• Check input power connections. Check grounding.</li> </ul>
36	INCOMPATIBLE SW	Loaded software is not compatible with the current drive type. Contact your local ABB representative.
37	CB OVERTEMP	Drive control board is overheated. The fault trip limit is 88 °C. Check for and correct: <ul style="list-style-type: none"> <li>• excessive ambient temperature</li> <li>• fan failure</li> <li>• obstructions in the air flow.</li> </ul> Not for drives with an OMIO control board.
38	USER LOAD CURVE	Condition defined by parameter 3701 USER LOAD C MODE has been valid longer than the time defined by 3703 USER LOAD C TIME.
101 ... 199	SYSTEM ERROR	Error internal to the drive. Contact your local ABB representative and report the error number.
201 ... 299	SYSTEM ERROR	Error in the system. Contact your local ABB representative and report the error number.

Fault code	Fault name in the panel	Description and recommended corrective action
1000	PAR HZRPM	Parameter values are inconsistent. Check for any of the following: <ul style="list-style-type: none"> <li>• 2001 MINIMUM SPEED &gt; 2002 MAXIMUM SPEED</li> <li>• 2007 MINIMUM FREQ &gt; 2008 MAXIMUM FREQ</li> <li>• 2001 MINIMUM SPEED / 9908 MOTOR NOM SPEED is outside the range -128...128</li> <li>• 2002 MAXIMUM SPEED / 9908 MOTOR NOM SPEED is outside the range -128...128</li> <li>• 2007 MINIMUM FREQ / 9907 MOTOR NOM FREQ is outside the range -128...128</li> <li>• 2008 MAXIMUM FREQ / 9907 MOTOR NOM FREQ is outside the range -128...128.</li> </ul>
1001	PAR PFA REF NEG	Parameter values are inconsistent. Check for the following: <ul style="list-style-type: none"> <li>• 2007 MINIMUM FREQ is negative, when 8123 PFA ENABLE is active.</li> </ul>
1002	RESERVED	Not used.
1003	PAR AI SCALE	Parameter values are inconsistent. Check for any of the following: <ul style="list-style-type: none"> <li>• 1301 MINIMUM AI1 &gt; 1302 MAXIMUM AI1</li> <li>• 1304 MINIMUM AI2 &gt; 1305 MAXIMUM AI2.</li> </ul>
1004	PAR AO SCALE	Parameter values are inconsistent. Check for any of the following: <ul style="list-style-type: none"> <li>• 1504 MINIMUM AO1 &gt; 1505 MAXIMUM AO1</li> <li>• 1510 MINIMUM AO2 &gt; 1511 MAXIMUM AO2.</li> </ul>
1005	PAR PCU 2	Parameter values for power control are inconsistent: Improper motor nominal kVA or motor nominal power. Check for the following: <ul style="list-style-type: none"> <li>• <math>1.1 \leq (9906 \text{ MOTOR NOM CURR} \cdot 9905 \text{ MOTOR NOM VOLT} \cdot 1.73 / P_N) \leq 2.6</math>,                where: <math>P_N = 1000 \cdot 9909 \text{ MOTOR NOM POWER}</math> (if units are kW)                or <math>P_N = 746 \cdot 9909 \text{ MOTOR NOM POWER}</math> (if units are hp, e.g. in US).</li> </ul>

Fault code	Fault name in the panel	Description and recommended corrective action
1006	PAR EXT RO	Parameter values are inconsistent. Check for the following: <ul style="list-style-type: none"> <li>• extension relay module not connected and</li> <li>• 1410...1412 RELAY OUTPUTS 4...6 have non-zero values.</li> </ul>
1007	PAR FIELD BUS MISSING	Parameter values are inconsistent. Check for and correct the following: <ul style="list-style-type: none"> <li>• A parameter is set for fieldbus control (e.g. 1001 EXT1 COMMANDS = 10 (COMM)), but 9802 COMM PROT SEL = 0.</li> </ul>
1008	PAR PFA MODE	Parameter values are inconsistent – 9904 MOTOR CTRL MODE must be = 3 (SCALAR:FREQ) when 8123 PFA ENABLE is activated.
1009	PAR PCU 1	Parameter values for power control are inconsistent: Improper motor nominal frequency or speed. Check for both of the following: <ul style="list-style-type: none"> <li>• <math>1 \leq (60 \cdot 9907 \text{ MOTOR NOM FREQ} / 9908 \text{ MOTOR NOM SPEED}) \leq 16</math></li> <li>• <math>0.8 \leq 9908 \text{ MOTOR NOM SPEED} / (120 \cdot 9907 \text{ MOTOR NOM FREQ} / \text{Motor poles}) \leq 0.992</math>.</li> </ul>
1010	PAR PFA & OVERRIDE	Override mode is enabled and PFA is activated at the same time. This cannot be done because PFA interlocks cannot be observed in the override mode.
1011	PAR OVERRIDE	Parameter values are inconsistent. All override mode parameters do not have correct values when override mode is enabled (parameter 1705 OVERRIDE ENABLE). Check for any of the following: <ul style="list-style-type: none"> <li>• parameter 1701 OVERRIDE SEL, override activation signal</li> <li>• parameter 1702 OVERRIDE FREQ and 1703 OVERRIDE SPEED both zero.</li> </ul>

Fault code	Fault name in the panel	Description and recommended corrective action
1012	PAR PFA IO 1	IO configuration is not complete – not enough relays are parameterized for PFA. Or, a conflict exists between group 14, parameter 8117 NR OF AUX MOT and parameter 8118 AUTOCHNG INTERV.
1013	PAR PFA IO 2	IO configuration is not complete – the actual number of PFA motors (parameter 8127 MOTORS) does not match the PFA motors in group 14 and parameter 8118 AUTOCHNG INTERV.
1014	PAR PFA IO 3	IO configuration is not complete – the drive is unable to allocate a digital input (interlock) for each PFA motor (parameters 8120 INTERLOCKS and 8127 MOTORS).
1015	RESERVED	Not used.
1016	PAR USER LOAD C	<p>Parameter values for the user load curve are inconsistent. Check that the following conditions are met:</p> <ul style="list-style-type: none"> <li>• 3704 LOAD FREQ 1 <math>\leq</math> 3707 LOAD FREQ 2 <math>\leq</math> 3710 LOAD FREQ 3 <math>\leq</math> 3713 LOAD FREQ 4 <math>\leq</math> 3716 LOAD FREQ 5.</li> <li>• 3705 LOAD TORQ LOW 1 <math>\leq</math> 3706 LOAD TORQ HIGH 1.</li> <li>• 3708 LOAD TORQ LOW 2 <math>\leq</math> 3709 LOAD TORQ HIGH 2.</li> <li>• 3711 LOAD TORQ LOW 3 <math>\leq</math> 3712 LOAD TORQ HIGH 3.</li> <li>• 3714 LOAD TORQ LOW 4 <math>\leq</math> 3715 LOAD TORQ HIGH 4.</li> <li>• 3717 LOAD TORQ LOW 5 <math>\leq</math> 3718 LOAD TORQ HIGH 5.</li> </ul>
-	UNKNOWN DRIVE TYPE: ACH550 SUPPORTED DRIVES: X	Wrong type of panel, i.e. panel that supports drive X but not the ACH550, has been connected to the ACH550.

## Fault resetting

The ACH550 can be configured to automatically reset certain faults. Refer to parameter [Group 31: AUTOMATIC RESET](#).

---



**WARNING!** If an external source, e.g. AUTO key, is selected for start command and it is active, the ACH550 may start immediately after fault reset.

---

### Flashing red LED

To reset the drive for faults indicated by a flashing red LED:

- Turn off the power for 5 minutes.

### Red LED

To reset the drive for faults indicated by a red LED (on, not flashing), correct the problem and do one of the following:

- From the control panel: press RESET.
- Turn the power off for 5 minutes.

Depending on the value of 1604 FAULT RESET SEL the following could also be used to reset the drive:

- digital input
- serial communication.

When the fault has been corrected, the motor can be started.



## History

For reference, the last three fault codes are stored into parameters 0401, 0412 and 0413. For the most recent fault (identified by parameter 0401), the drive stores additional data (in parameters 0402...0411) to aid in troubleshooting a problem. For example, parameter 0404 stores the motor speed at the time of the fault.

To clear the fault history (all of *Group 04: FAULT HISTORY* parameters), follow these steps:

1. In the control panel, Parameters mode, select parameter 0401.
2. Press EDIT.
3. Press the UP and DOWN keys simultaneously.
4. Press SAVE.

## Correcting alarms

The recommended corrective action for alarms is:

- Determine if the alarm requires any corrective action (action is not always required).
- Use *Alarm listing* below to find and address the root cause of the problem.

## Alarm listing

The following table lists the alarms by code number and describes each.

Alarm code	Display	Description
2001	OVERCURRENT	The current limiting controller is active. Check for and correct: <ul style="list-style-type: none"> <li>• excessive motor load</li> <li>• insufficient acceleration time (parameters 2202 ACCELER TIME 1 and 2205 ACCELER TIME 2)</li> <li>• faulty motor, motor cables or connections.</li> </ul>
2002	OVERVOLTAGE	The overvoltage controller is active. Check for and correct: <ul style="list-style-type: none"> <li>• static or transient overvoltages in the input power supply</li> <li>• insufficient deceleration time (parameters 2203 DECELER TIME 1 and 2206 DECELER TIME 2).</li> </ul>

Alarm code	Display	Description
2003	UNDERVOLTAGE	<p>The undervoltage controller is active. Check for and correct:</p> <ul style="list-style-type: none"> <li>• undervoltage on mains.</li> </ul>
2004	DIR LOCK	<p>The change in direction being attempted is not allowed. Either:</p> <ul style="list-style-type: none"> <li>• do not attempt to change the direction of motor rotation, or</li> <li>• change parameter 1003 DIRECTION to allow direction change (if reverse operation is safe).</li> </ul>
2005	IO COMM	<p>Fieldbus communication has timed out. Check for and correct:</p> <ul style="list-style-type: none"> <li>• fault setup (3018 COMM FAULT FUNC and 3019 COMM FAULT TIME)</li> <li>• communication settings (<i>Group 51: EXT COMM MODULE</i> or <i>Group 53: EFB PROTOCOL</i> as appropriate)</li> <li>• poor connections and/or noise on line.</li> </ul>
2006	AI1 LOSS	<p>Analogue input 1 is lost, or value is less than the minimum setting. Check:</p> <ul style="list-style-type: none"> <li>• input source and connections</li> <li>• parameter that sets the minimum (3021)</li> <li>• parameter that sets the alarm/fault operation (3001).</li> </ul>
2007	AI2 LOSS	<p>Analogue input 2 is lost, or value is less than the minimum setting. Check:</p> <ul style="list-style-type: none"> <li>• input source and connections</li> <li>• parameter that sets the minimum (3022)</li> <li>• parameter that sets the alarm/fault operation (3001).</li> </ul>

Alarm code	Display	Description
2008	PANEL LOSS	<p>Panel communication is lost and either:</p> <ul style="list-style-type: none"> <li>the drive is in local control mode (the control panel displays HAND), or</li> <li>the drive is in remote control mode (AUTO) and parameterized to accept start/stop, direction or reference from the control panel.</li> </ul> <p>To correct check:</p> <ul style="list-style-type: none"> <li>communication lines and connections</li> <li>parameter 3002 PANEL COMM ERR</li> <li>parameters in <i>Group 10: START/STOP/DIR</i> and <i>Group 11: REFERENCE SELECT</i> (if drive operation is AUTO).</li> </ul>
2009	DEVICE OVERTEMP	<p>Drive heatsink is hot. This alarm warns that a DEV OVERTEMP fault may be near.</p> <p>R1...R4: 100 °C (212 °F) R5/R6: 110 °C (230 °F)</p> <p>Check for and correct:</p> <ul style="list-style-type: none"> <li>fan failure</li> <li>obstructions in the air flow</li> <li>dirt or dust coating on the heat sink</li> <li>excessive ambient temperature</li> <li>excessive motor load.</li> </ul>
2010	MOTOR TEMP	<p>Motor is hot, based on either the drive's estimate or on temperature feedback. This alarm warns that a MOT OVERTEMP fault trip may be near.</p> <ul style="list-style-type: none"> <li>Check for overloaded motor.</li> <li>Adjust the parameters used for the estimate (3005...3009).</li> <li>Check the temperature sensors and <i>Group 35: MOTOR TEMP MEAS</i> parameters.</li> </ul>
2011	RESERVED	Not used.
2012	MOTOR STALL	<p>Motor is operating in the stall region. This alarm warns that a MOTOR STALL fault trip may be near.</p>
2013 See Note 1	AUTORESET	<p>This alarm warns that the drive is about to perform an automatic fault reset, which may start the motor.</p> <ul style="list-style-type: none"> <li>To control automatic reset, use <i>Group 31: AUTOMATIC RESET</i>.</li> </ul>

Alarm code	Display	Description
2014 See Note 1	AUTOCHANGE	This alarm warns that the PFA autochange function is active. <ul style="list-style-type: none"> <li>To control PFA, use <a href="#">Group 81: PFA CONTROL</a> and see also the Pump alternation macro on page 108.</li> </ul>
2015	PFA I LOCK	This alarm warns that the PFA interlocks are active, which means that the drive cannot start: <ul style="list-style-type: none"> <li>any motor (when Autochange is used),</li> <li>the speed regulated motor (when Autochange is not used).</li> </ul>
2016	RESERVED	Not used.
2017 See Note 1	OFF BUTTON	This alarm warns that the OFF key has been pressed on the control panel when the AUTO mode is active. The drive stops and generates this alarm. <ul style="list-style-type: none"> <li>To restart the drive, press the AUTO key.</li> <li>To disable this alarm, see parameter 1606.</li> </ul>
2018 See Note 1	PID SLEEP	This alarm warns that the PID sleep function is active, which means that the motor could accelerate when the PID sleep function ends. <ul style="list-style-type: none"> <li>To control PID sleep, use parameters 4022...4026 or 4122...4126.</li> </ul>
2019	ID RUN	Performing ID run.
2020	OVERRIDE	Override mode activated.
2021	START ENABLE 1 MISSING	This alarm warns that the Start enable 1 signal is missing. <ul style="list-style-type: none"> <li>To control Start enable 1 function, use parameter 1608.</li> </ul> To correct, check: <ul style="list-style-type: none"> <li>digital input configuration</li> <li>communication settings.</li> </ul>
2022	START ENABLE 2 MISSING	This alarm warns that the Start enable 2 signal is missing. <ul style="list-style-type: none"> <li>To control Start enable 2 function, use parameter 1609.</li> </ul> To correct, check: <ul style="list-style-type: none"> <li>digital input configuration</li> <li>communication settings.</li> </ul>
2023	EMERGENCY STOP	Emergency stop activated.

Alarm code	Display	Description
2024	RESERVED	Not used.
2025	FIRST START	Signals that the drive is performing a First Start evaluation of motor characteristics. This is normal the first time the motor is run after motor parameters are entered or changed. See parameter 9910 ID RUN for a description of motor models.
2026	INPUT PHASE LOSS	The intermediate DC circuit DC voltage is oscillating due to missing input power line phase or blown fuse. The alarm is generated when the DC voltage ripple exceeds 14% of the nominal DC voltage. <ul style="list-style-type: none"> <li>• Check input power line fuses</li> <li>• Check for input power supply imbalance.</li> </ul>
2027	USER LOAD CURVE	This alarm warns that the condition defined by parameter 3701 USER LOAD C MODE has been valid longer than half of the time defined by 3703 USER LOAD C TIME.
2028	START DELAY	Shown during the Start delay. See parameter 2113 START DELAY.

**Note 1.** Even when the relay output is configured to indicate alarm conditions (e.g. parameter 1401 RELAY OUTPUT 1 = 5 (ALARM) or 16 (FLT/ALARM), this alarm is not indicated by a relay output.

## Maintenance intervals



**WARNING!** Read the safety instructions on page 8 before performing any maintenance on the equipment. Ignoring the safety instructions can cause injury or death.

If installed in an appropriate environment, the drive requires very little maintenance. The table lists the routine maintenance intervals recommended by ABB.

Maintenance	Interval	Instruction
Heatsink temperature check and cleaning	Depends on the dustiness of the environment (6...12 months)	See <a href="#">Heatsink</a> on page 387.
Main cooling fan replacement	Every six years	See <a href="#">Main fan replacement</a> on page 387.
Internal enclosure cooling fan replacement (IP54 units)	Every three years	See <a href="#">Internal enclosure fan replacement</a> on page 391.
Capacitor reforming	Every year when stored	See <a href="#">Reforming</a> on page 392.
Capacitor replacement (frame sizes R5 and R6)	Every nine to twelve years, depending on the ambient temperature and duty cycle	See <a href="#">Replacement</a> on page 392.
HVAC control panel battery change.	Every ten years	See <a href="#">Control panel</a> on page 393.

Consult your local ABB representative for more details on the maintenance. On the Internet, go to <http://www.abb.com/drives> and select *Service – Maintenance*.

## Heatsink

The heatsink fins accumulate dust from the cooling air. Since a dusty sink is less efficient at cooling the drive, overtemperature faults become more likely. In a “normal” environment (not dusty, not clean), check the heatsink annually. In a dusty environment, check more often.

Check the heatsink as follows (when necessary):

1. Remove power from the drive.
2. Remove the cooling fan (see [Main fan replacement](#) on page [387](#)).
3. Blow clean compressed air (not humid) from bottom to top and simultaneously use a vacuum cleaner at the air outlet to trap the dust.

---

**Note:** If there a risk of the dust entering adjoining equipment, perform the cleaning in another room.

---

4. Reinstall the cooling fan.
5. Restore power.

## Main fan replacement


Fan failure can be predicted by the increasing noise from fan bearings and the gradual rise in the heatsink temperature in spite of heatsink cleaning. If the drive is operated in a critical part of a process, fan replacement is recommended once these symptoms start appearing. Replacement fans are available from ABB (see page [443](#)). Do not use other than ABB specified spare parts.

## Main fan replacement (frame sizes R1...R4)

To replace the fan:

1. Disconnect the drive from main power.
2. Remove the drive cover.
3. For frame sizes:
  - R1 and R2: Press together the retaining clips on the fan cover and lift.
  - R3 and R4: Press the lever located on the left side of the fan mount and rotate the fan up and out.
4. Disconnect the fan cable.
5. Reinstall the fan in reverse order.
6. Restore power.

Arrows in the fan show the directions of the rotation and air flow.

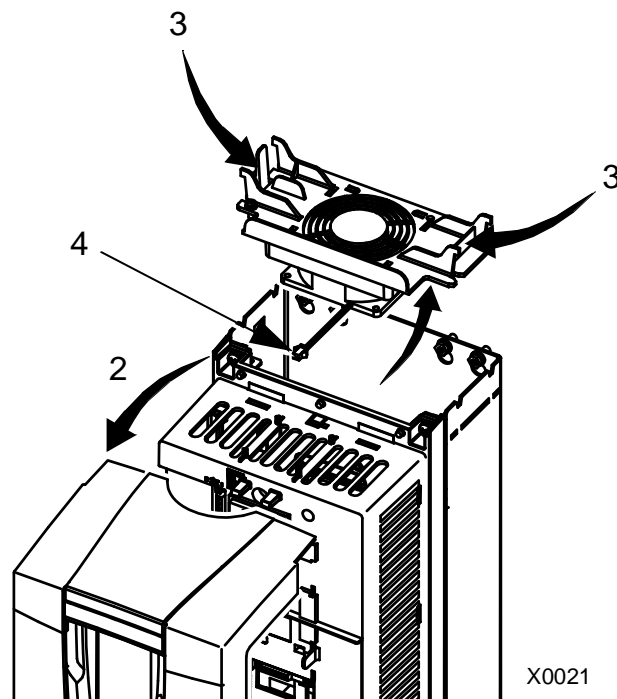




## Main fan replacement (frame size R5)

To replace the fan:

1. Disconnect the drive from main power.
2. Remove the screws attaching the fan.
3. Remove the fan:  
Swing the fan out on its hinges.
4. Disconnect the fan cable.
5. Reinstall the fan in reverse order.
6. Restore power.



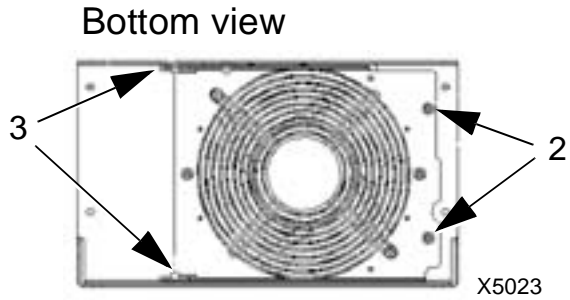


Arrows in the fan show the directions of the rotation and air flow.

## Main fan replacement (frame size R6)

To replace the fan:

1. Disconnect the drive from main power.
2. Remove the screw attaching the fan casing and let the casing lean down against the limiters.
3. Slide out the cable connector and disconnect it.
4. Take off the casing and replace the fan onto the casing's pins.
5. Reinstall the casing in reverse order.
6. Restore the power.

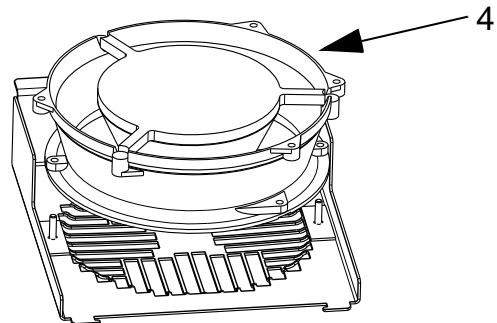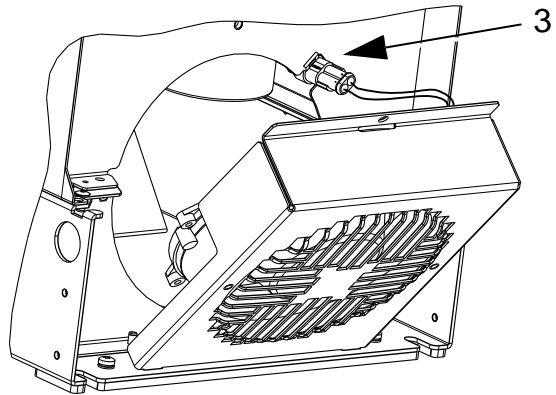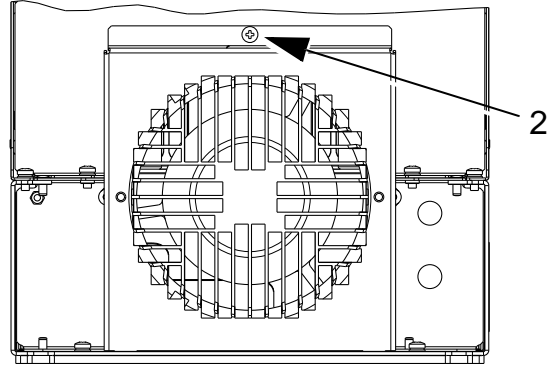

## Internal enclosure fan replacement


IP54 / UL Type 12 enclosures have an additional internal fan to circulate air inside the enclosure.

### Frame sizes R1...R4


To replace the internal enclosure fan in frame sizes R1 to R3 (located at the top of the drive) and R4 (located in front of the drive):

1. Remove power from the drive.
2. Remove the front cover.
3. The housing that holds the fan in place has barbed retaining clips at each corner. Press all four clips toward the centre to release the barbs.
4. When the clips/barbs are free, pull the housing up to remove from the drive.
5. Disconnect the fan cable.
6. Install the fan in reverse order, noting that:
  - the fan air flow is up (refer to the arrow on the fan)
  - the fan wire harness is toward the front
  - the notched housing barb is located in the right-rear corner
  - the fan cable connects just forward of the fan at the top of the drive.

#### R1...R3

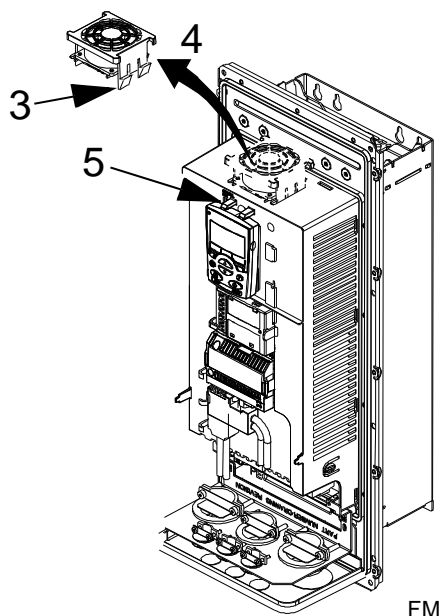

#### R4

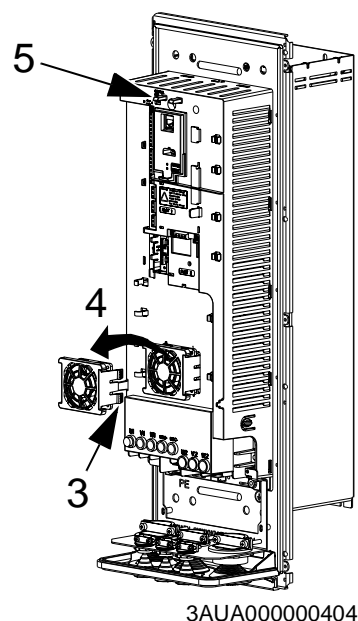

### Frame sizes R5 and R6

To replace the internal enclosure fan in frame sizes R5 or R6:

1. Remove power from the drive.
2. Remove the front cover.
3. Lift the fan out and disconnect the cable.
4. Install the fan in reverse order.
5. Restore power.

## Capacitors

### Reforming

The drive DC link capacitors need to be reformed (re-aged) if the drive has been non-operational for more than one year. Without reforming capacitors may be damaged when the drive starts to operate. It is therefore recommended to reform the capacitors once a year. See page 16 for how to check the date of manufacture from the serial number shown on the drive labels.

For information on reforming the capacitors, refer to *Guide for Capacitor Reforming in ACS50, ACS55, ACS150, ACS310, ACS350, ACS355, ACS550, ACH550 and R1-R4 OINT-/SINTboards* (3AFE68735190 [English]), available on the Internet (go to [www.abb.com](http://www.abb.com) and enter the code in the Search field).

### Replacement

The drive intermediate circuit employs several electrolytic capacitors. Capacitor life can be prolonged by lowering the ambient temperature.

It is not possible to predict a capacitor failure. Capacitor failure is usually followed by an input power fuse failure or a fault trip. Contact your local ABB representative if capacitor failure is suspected. Replacements for frame sizes R5 and R6 are available from ABB. Do not use other than ABB specified spare parts.

## **Control panel**

### **Cleaning**

Use a soft damp cloth to clean the control panel. Avoid harsh cleaners which could scratch the display window.

### **Battery**

The battery keeps the clock operating in memory during power interruptions.

To remove the battery, use a coin to rotate the battery holder on the back of the control panel. Replace the battery with type CR2032.



# Technical data

---

## What this chapter contains

This chapter contains the following information:

- ratings (page [395](#))
- input power cable, fuses and circuit breakers (page [401](#))
- input power and motor connection terminals (page [408](#))
- input power (mains) connection (page [409](#))
- motor connection (page [410](#))
- control connections (page [414](#))
- hardware description (page [415](#))
- efficiency (page [418](#))
- cooling (page [418](#))
- dimensions and weights (page [420](#))
- ambient conditions (page [440](#))
- materials (page [441](#))
- applicable standards (page [442](#))
- valid markings (page [442](#)).

## Ratings

By type designation, the tables below provide ratings for the ACH550 adjustable speed AC drive, including:

- IEC ratings in 40 °C for 400 V and 200 V drives. See the table on page [399](#) for available currents in other temperatures for 400 V drives.
- frame size.

Abbreviated column headers are described in section [Symbols](#) on page [398](#).

## IEC ratings, 380...480 V drives

Type	Valid up to 40 °C			Frame size
	$I_{2N}$ A	$P_N$ kW	Max. current $I_{MAX}$	
Three-phase supply voltage, 380...480 V				
02A4-4	2.4	0.75	3.1	R1
03A3-4	3.3	1.1	4.3	R1
04A1-4	4.1	1.5	5.9	R1
05A4-4	5.4	2.2	7.4	R1
06A9-4	6.9	3.0	9.7	R1
08A8-4	8.8	4.0	12.4	R1
012A-4	11.9	5.5	15.8	R1
015A-4	15.4	7.5	21.4	R2
023A-4	23	11	27.7	R2
031A-4	31	15	41	R3
038A-4	38	18.5	56	R3
045A-4	45	22	68	R3
059A-4	59	30	79	R4
072A-4	72	37	106	R4
087A-4	87	45	139	R4
125A-4	125	55	173	R5
157A-4	157	75	223	R6
180A-4	180	90	281	R6
195A-4	205	110	324	R6
246A-4	246	132	346	R6
290A-4	290	160	441	R6

00467918.xls C

$I_{MAX}$ : Maximum output current allowed for 2 seconds every minute



**IEC ratings, 208...240 V drives**

Type	Valid up to 40 °C			Frame size
ACH550-01-	$I_{2N}$ A	$P_N$ kW	Max. current $I_{MAX}$ A	
Three-phase supply voltage, 208...240 V				
04A6-2	4.6	0.75	6.3	R1
06A6-2	6.6	1.1	8.3	R1
07A5-2	7.5	1.5	11.9	R1
012A-2	11.8	2.2	13.5	R1
017A-2	16.7	4.0	21.2	R1
024A-2	24.2	5.5	30.1	R2
031A-2	30.8	7.5	43.6	R2
046A-2	46	11	55	R3
059A-2	59	15	83	R3
075A-2	75	18.5	107	R4
088A-2	88	22	135	R4
114A-2	114	30	158	R4
143A-2	143	37	205	R6
178A-2	178	45	270	R6
221A-2	221	55	320	R6
248A-2	248	75	346	R6

00467918.xls C

 $I_{MAX}$ : Maximum output current allowed for 2 seconds every minute


## Symbols

### Typical ratings:

#### Nominal rating (10% overload capability)

$I_{2N}$  continuous rms current. 10% overload is allowed for one minute every ten minutes through the whole speed range.

$P_N$  typical motor power. The kilowatt power ratings apply to most IEC, 4-pole motors. The horsepower ratings apply to most 4-pole NEMA motors.

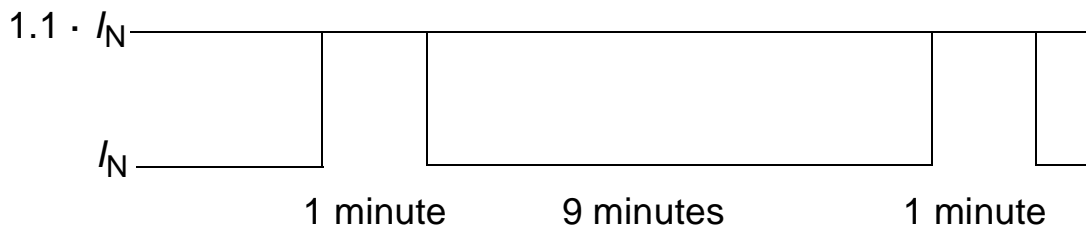

## Sizing

The current ratings are the same regardless of the supply voltage within one voltage range. To achieve the rated motor power given in the table, the rated current of the drive must be higher than or equal to the rated motor current.

In multimotor systems, the output current of the drive must be equal or greater than the calculated sum of the input currents of all motors.

## 400 V drives

400 V drives (IP21 and IP54) can deliver following currents continuously (24 hours a day, 7 days a week and 365 days a year) in different ambient temperatures. These currents are available up to 1000 m (3300 ft).

Type	Frame size	$P_{40}$	$I_{35}$	$I_{40}$	$I_{45}$	$I_{50}$	M2000
ACH550-01-		kW	A	A	A	A	A
02A4-4	R1	0.75	2.5	2.4	2.3	2.2	1.93
03A3-4	R1	1.1	3.4	3.3	3.1	3.0	2.65
04A1-4	R1	1.5	4.2	4.1	3.9	3.7	3.50
05A4-4	R1	2.2	5.5	5.4	5.1	4.9	4.85
06A9-4	R1	3	7.0	6.9	6.6	6.3	6.30
08A8-4	R1	4	9.0	8.8	8.6	8.3	8.29
012A-4	R1	5.5	12.1	11.9	11.4	10.9	10.90
015A-4	R2	7.5	15.7	15.4	14.9	14.4	14.40
023A-4	R2	11	23.5	23.0	22.0	20.9	20.87
031A-4	R3	15	32	31	30	28	27.97
038A-4	R3	18.5	39	38	36	34	34.12
045A-4	R3	22	46	45	43	41	39.44
059A-4	R4	30	60	59	56	53	53
072A-4	R4	37	73	72	70	67	67
087A-4	R4	45	89	87	84	80	80
125A-4	R5	55	128	125	119	113	98
157A-4	R6	75	160	157	149	141	138
180A-4	R6	90	184	180	171	162	162
195A-4	R6	110	208	205	195	185	203
246A-4	R6	132	250	246	234	221	239
290A-4	R6	160	293	290	275	261	286

00467918.xls C

$P_{40}$ : Typical motor power at 40 °C

$I_{xx}$ : Drive output current at xx °C

M2000: ABB M2 motor nominal current (Catalogue BU/General purpose motors EN 12-2005)

### *200 V drives*

For 200 V drives, in the temperature range +40 °C...50 °C (+104 °F...122 °F), the rated output current is decreased by 1% for every 1 °C (1.8 °F) above +40 °C (+104 °F). The output current is calculated by multiplying the current given in the rating table by the derating factor.

**Example:** If the ambient temperature is 50 °C (+122 °F), the derating factor is  $100\% - 1\%/^{\circ}\text{C} = 90\%$  or 0.90.

The output current is then  $0.90 \cdot I_{2N}$ .

### *Altitude derating*

In altitudes from 1000...2000 m (3300...6600 ft) above sea level, the derating is 1% for every 100 m (330 ft). If the installation site is higher than 2000 m (6600 ft) above sea level, please contact your local ABB representative for further information.

### *Single phase supply derating*

For 208...240 V series drives, a single phase supply can be used. In that case, the derating is 50%.

### *Switching frequency derating*

The switching frequency control (see parameter 2607 on page [240](#)) can decrease the switching frequency instead of the current when the drive reaches the internal temperature limit. This function is on by default.

For worst case sizing, the maximum derating values are as follows:

If the 8 kHz switching frequency is used, limit  $P_N$  and  $I_{2N}$  to 80%.

If the 12 kHz switching frequency is used, limit  $P_N$  and  $I_{2N}$  to 65%.

## **Input power (mains) cable, fuses and circuit breakers**

A four conductor cable (three phases and earth/protective earth) is recommended for the input power cabling. Shielding is not necessary. Dimension the cables and fuses in accordance with the input current. Always pay attention to local codes when sizing the cables and fuses.

The input power connectors are at the bottom of the drive. Input power cable routing must be done so that the distance from the sides of the drive is at least 20 cm (8 in) to avoid excessive radiation to the input power cable. In the case of shielded cable, twist the cable shield wires together into a bundle (pigtail) not longer than five times its width and connect to the PE terminal of the drive (or PE terminal of input filter, if present).

### *Line current harmonics*

Standard ACH550 drive without any additional options meets IEC/EN 61000-3-12 limits for harmonic currents. The standard can be met with a transformer short circuit ratio of 120 or higher. The harmonic levels under rated load conditions are available on request.

## **Fuses**

Branch circuit protection must be provided by the end-user, sized in accordance with the NEC and local codes. Recommendations for fuses for short-circuit protection on the mains cable are in the following tables.

## Fuses, 380...480 V drives

ACH550-01-	Input current A	Mains fuses		
		IE 60269 gG A	UL class T A	Busmann type <sup>1</sup>
02A4-4	2.4	10	10	JJS-10
03A3-4	3.3			
04A1-4	4.1			
05A4-4	5.4			
06A9-4	6.9			
08A8-4	8.8			
012A-4	11.9			
015A-4	15.4	16	20	JJS-20
023A-4	23			
031A-4	31	25	30	JJS-30
031A-4	31	35	40	JJS-40
038A-4	38	50	50	JJS-50
045A-4	45		60	JJS-60
059A-4	59	63	80	JJS-80
072A-4	72	80	90	JJS-90
087A-4	87	125	125	JJS-125
125A-4	125	160	175	JJS-175
157A-4	157	200	200	JJS-200
180A-4	180	250	250	JJS-250
195A-4	205			
246A-4	246	315	350	JJS-350
290A-4	290			

00467918.xls C

<sup>1</sup> Example

## Fuses, 208...240 V drives

ACH550-01-	Input current A	Mains fuses		
		IE 60269 gG A	UL class T A	Busmann type <sup>1</sup>
04A6-2	4.6	10	10	JJS-10
06A6-2	6.6			
07A5-2	7.5			
012A-2	11.8	16	15	JJS-15
017A-2	16.7	25	25	JJS-25
024A-2	24.2		30	JJS-30
031A-2	30.8	40	40	JJS-40
046A-2	46	63	60	JJS-60
059A-2	59		80	JJS-80
075A-2	75	80	100	JJS-100
088A-2	88	100	110	JJS-110
114A-2	114	125	150	JJS-150
143A-2	143	200	200	JJS-200
178A-2	178	250	250	JJS-250
221A-2	221	315	300	JJS-300
248A-2	248		350	JJS-350

00467918.xls C

<sup>1</sup> Example

---

**Note:** The use of ultra rapid fuses is recommended, but normal HRC fuses, ABB Tmax moulded case circuit breakers (MCCB) or ABB S200 B/C miniature circuit breakers (MCB) are sufficient. See section [Circuit breakers](#) on page [404](#).

---

## Circuit breakers

The tables below list ABB circuit breakers that can be used instead of fuses (recommended). Depending on the type designation, Tmax moulded case circuit breakers (MCCB) or S200 B/C miniature circuit breakers (MCB) / manual motor starters, or both are given.

*ABB S200 B/C miniature circuit breakers (MCB) and manual motor starters*

Type	Frame size	Input current	Rated current	ABB miniature circuit breakers and manual motor starters				
				Prospective short circuit current				
				S200M B/C	S200P B/C	S200 B/C	MS325	MS495
<b>ACH550-01-</b>		<b>A</b>	<b>A</b>	<b>kA</b>	<b>kA</b>	<b>kA</b>	<b>kA</b>	<b>kA</b>
03A3-4	R1	3.3	10	10	15	6	15	
04A1-4	R1	4.1	10	10	15	6	15	
05A4-4	R1	5.4	10	10	15	6	15	
06A9-4	R1	6.9	16	10	15	6	15	
08A8-4	R1	8.8	16	10	15	6	15	
012A-4	R1	11.9	16	10	15	6	15	
015A-4	R2	15.4	20	10	15	6	15	
023A-4	R2	23.0	32	10	15	6		
031A-4	R3	31.0	40	10	15	6		10
038A-4	R3	38.0	50	10	15	6		10
045A-4	R3	45.0	63	10	15	6		10

00577998.xls A



## ABB Tmax moulded case circuit breakers (MCCB)

Type	Frame size	Input current	ABB Tmax moulded case circuit breaker			
			Tmax frame	Tmax rating	Electronic release	Prospective short circuit current
<b>ACH550-01-</b>		<b>A</b>		<b>A</b>	<b>A</b>	<b>kA</b>
038A-4	R3	38.0	T2	160	63	50
045A-4	R3	45.0	T2	160	63	50
059A-4	R4	59.0	T2	160	100	50
072A-4	R4	72.0	T2	160	100	50
087A-4	R4	87.0	T2	160	160	50
125A-4	R5	125.0	T2	160	160	65
157A-4	R6	157.0	T4	250	250	65
180A-4	R6	180.0	T4	250	250	65
195A-4	R6	205.0	T4	250	250	65
246A-4	R6	246.0	T4	320	320	65
290A-4	R6	290.0	T4	320	320	65

00577998.xls A

## Input power (mains) cable

Dimension the cables according to local safety regulations, appropriate input voltage and the load current of the drive.

**Note:** The cable must be less than the maximum limit defined by the terminal size. Check the maximum wire size according to the table in section [Input power and motor connection terminals](#) on page 408.

The following table gives copper and aluminium cable types for different load currents. These recommendations apply only for the conditions listed at the top of the table.

IEC				NEC	
Based on: <ul style="list-style-type: none"> <li>• EN 60204-1 and IEC 60364-5-2</li> <li>• PVC insulation</li> <li>• 30 °C (86 °F) ambient temperature</li> <li>• 70 °C (158 °F) surface temperature</li> <li>• cables with concentric copper shield</li> <li>• not more than nine cables laid on cable ladder side by side.</li> </ul>				Based on: <ul style="list-style-type: none"> <li>• NEC Table 310-16 for copper wires</li> <li>• 90 °C (194 °F) wire insulation</li> <li>• 40 °C (104 °F) ambient temperature</li> <li>• not more than three current-carrying conductors in raceway or cable, or earth (directly buried)</li> <li>• copper cables with concentric copper shield.</li> </ul>	
Max load current A	Cu cable mm <sup>2</sup>	Max load current A	Al cable mm <sup>2</sup>	Max load current A	Cu wire size AWG/kcmil
14	3x1.5	61	3x25	22.8	14
20	3x2.5	75	3x35	27.3	12
27	3x4	91	3x50	36.4	10
34	3x6	117	3x70	50.1	8
47	3x10	143	3x95	68.3	6
62	3x16	165	3x120	86.5	4
79	3x25	191	3x150	100	3
98	3x35	218	3x185	118	2
119	3x50	257	3x240	137	1
153	3x70	274	3x (3x50) <sup>1</sup>	155	1/0

IEC				NEC	
Based on: <ul style="list-style-type: none"> <li>• EN 60204-1 and IEC 60364-5-2</li> <li>• PVC insulation</li> <li>• 30 °C (86 °F) ambient temperature</li> <li>• 70 °C (158 °F) surface temperature</li> <li>• cables with concentric copper shield</li> <li>• not more than nine cables laid on cable ladder side by side.</li> </ul>				Based on: <ul style="list-style-type: none"> <li>• NEC Table 310-16 for copper wires</li> <li>• 90 °C (194 °F) wire insulation</li> <li>• 40 °C (104 °F) ambient temperature</li> <li>• not more than three current-carrying conductors in raceway or cable, or earth (directly buried)</li> <li>• copper cables with concentric copper shield.</li> </ul>	
Max load current A	Cu cable mm <sup>2</sup>	Max load current A	Al cable mm <sup>2</sup>	Max load current A	Cu wire size AWG/kcmil
186	3x95	285	2x (3x95) <sup>1</sup>	178	2/0
215	3x120			205	3/0
249	3x150			237	4/0
284	3x185			264	250 MCM or 2 x 1
330	3x240			291	300 MCM or 2 x 1/0
				319	350 MCM or 2 x 2/0

**Note:** Mains cable sizing is based on a correction factor of 0.71 (maximum of 4 cables laid on a cable ladder side by side, ambient temperature 30 °C (86 °F), EN 60204-1 and IEC 364-5-523). For other conditions, dimension the cables according to local safety regulations, appropriate input voltage and the load current of the drive. In any case, the cable must be between the minimum limit defined in this table and the maximum limit defined by the terminal size (see section [Input power and motor connection terminals](#) on page 408.)

<sup>1</sup> This cable type cannot be used in this drive because the cable lug is not designed for multiple wires.

## Input power and motor connection terminals

Input power (mains) and motor cable minimum and maximum sizes (per phase) as well as grounding PE cable maximum sizes accepted at the cable terminals, and the tightening torques are listed in the following table.

**Note:** See the recommended cable sizes for different load currents in section [Input power \(mains\) cable](#) on page 406.

Frame size	U1, V1, W1 U2, V2, W2						Earthing PE			
	Minimum wire size		Maximum wire size		Tightening torque		Maximum wire size		Tightening torque	
	mm <sup>2</sup>	AWG	mm <sup>2</sup>	AWG	N-m	lbf-ft	mm <sup>2</sup>	AWG	N-m	lbf-ft
R1	0.75	18	10	8	1.4	1	10	8	1.4	1
R2	0.75	18	10	8	1.4	1	10	8	1.4	1
R3	2.5	14	25	3	2.5	1.8	16	6	1.8	1.3
R4	6	10	50	1/0	5.6	4	25	3	2	1.5
R5	6	10	70	2/0	15	11	70	2/0	15	11
R6	95 <sup>1</sup>	3/0 <sup>1</sup>	240	350 MCM	40	30	95	3/0	8	6

00467918.xls C

<sup>1</sup> See section [Frame size R6 lugs](#) on page 49.

## Input power (mains) connection

Input power (mains) connection specifications	
<b>Voltage (<math>U_1</math>)</b>	208/220/230/240 V AC 3-phase (or 1-phase) -15%...+10% for 230 V AC units 380/400/415/440/460/480 V AC 3-phase -15%...+10% for 400 V AC units
<b>Prospective short-circuit current (IEC 629)</b>	Maximum allowed prospective short-circuit current in the supply is 100 kA in a second providing that the mains cable of the drive is protected with appropriate fuses. US: 100 000 AIC
<b>Frequency</b>	48...63 Hz
<b>Imbalance</b>	Max. $\pm 3\%$ of nominal phase-to-phase input voltage
<b>Fundamental power factor (<math>\cos \phi_1</math>)</b>	0.98 (at nominal load)
<b>Cable temperature rating</b>	90 °C (194 °F) rating minimum

## Motor connection

Motor connection specifications																									
<b>Voltage (<math>U_2</math>)</b>	0... $U_1$ , 3-phase symmetrical, $U_{\max}$ at the field weakening point																								
<b>Frequency</b>	0...500 Hz																								
<b>Frequency resolution</b>	0.01 Hz																								
<b>Current</b>	See section <a href="#">Ratings</a> on page 395.																								
<b>Field weakening point</b>	10...500 Hz																								
<b>Switching frequency</b>	<p>Selectable: 1, 2, 4, 8 or 12 kHz. See the availability according to the drive power in the table below.</p> <table border="1"> <thead> <tr> <th>Power (kW)</th> <th>1 kHz</th> <th>2 kHz</th> <th>4 kHz</th> <th>8 kHz</th> <th>12 kHz*</th> </tr> </thead> <tbody> <tr> <td>0.75...37</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> </tr> <tr> <td>45...110</td> <td>x</td> <td>x</td> <td>x</td> <td>x</td> <td>-</td> </tr> <tr> <td>132...160</td> <td>x</td> <td>x</td> <td>x</td> <td>-</td> <td>-</td> </tr> </tbody> </table> <p>* 12 kHz only in scalar control mode</p>	Power (kW)	1 kHz	2 kHz	4 kHz	8 kHz	12 kHz*	0.75...37	x	x	x	x	x	45...110	x	x	x	x	-	132...160	x	x	x	-	-
Power (kW)	1 kHz	2 kHz	4 kHz	8 kHz	12 kHz*																				
0.75...37	x	x	x	x	x																				
45...110	x	x	x	x	-																				
132...160	x	x	x	-	-																				
<b>Cable temperature rating</b>	90 °C (194 °F) rating minimum																								
<b>Maximum motor cable length</b>	See section <a href="#">Motor cable length</a> below.																								

## Motor cable length

The tables below show the maximum motor cable lengths for 400 V drives with different switching frequencies. Examples for using the table are also given.

Maximum cable lengths (m) for 400 V									
Frame size	EMC limits						Operational limits		
	IEC/EN 61800-3 Second environment (category C3 <sup>1</sup> )			IEC/EN 61800-3 First environment (category C2 <sup>1</sup> )			Basic unit		With du/dt filters
	1 kHz	4 kHz	8 kHz	1 kHz	4 kHz	8 kHz	1/4 kHz	8/12 kHz	
<b>R1</b>	300	300	300	300	300	300	100	100	150
<b>R2</b>	300	300	300	300	100	30	200	100	250
<b>R3</b>	300	300	300	300	75	75	200	100	250
<b>R4</b>	300	300	300	300	75	75	200	100	300
<b>R5</b>	100	100	100	100	100	100	300	150 <sup>2</sup>	300
<b>R6</b>	100	100	<sup>3</sup>	100	100	<sup>3</sup>	300	150 <sup>2</sup>	300

00577999.xls A

<sup>1</sup> See the new terms in section [IEC/EN 61800-3:2004 Definitions](#) on page 444.

<sup>2</sup> 12 kHz switching frequency is not available.

<sup>3</sup> Not tested.

Sine filters further extend the cable lengths.

Maximum cable lengths (ft) for 400 V									
Frame size	EMC limits						Operational limits		
	IEC/EN 61800-3 Second environment (category C3 <sup>1</sup> )			IEC/EN 61800-3 First environment (category C2 <sup>1</sup> )			Basic unit		With du/dt filters
	1 kHz	4 kHz	8 kHz	1 kHz	4 kHz	8 kHz	1/4 kHz	8/12 kHz	
<b>R1</b>	980	980	980	980	980	980	330	330	490
<b>R2</b>	980	980	980	980	330	98	660	330	820
<b>R3</b>	980	980	980	980	245	245	660	330	820
<b>R4</b>	980	980	980	980	245	245	660	330	980
<b>R5</b>	330	330	330	330	330	330	980	490 <sup>2</sup>	980
<b>R6</b>	330	330	<sup>3</sup>	330	330	<sup>3</sup>	980	490 <sup>2</sup>	980

00577999.xls A

<sup>1</sup> See the new terms in section [IEC/EN 61800-3:2004 Definitions](#) on page 444.

<sup>2</sup> 12 kHz switching frequency is not available.

<sup>3</sup> Not tested.

Sine filters further extend the cable lengths.

Under heading “Operational limits”, the “Basic unit” columns define the cable lengths with which the basic drive unit works without problems within the drive specification, without installing

any further options. Column “With du/dt filters” defines the cable lengths when an external du/dt filter is used.

The columns under heading “EMC limits” show the maximum cable lengths with which the units have been tested for EMC emissions. The factory guarantees that these cable lengths meet the EMC standard requirements.

If external sine filters are installed, longer cable lengths can be used. With sine filters the limiting factors are the voltage drop of the cable, which has to be taken into account in engineering, as well as the EMC limits (where applicable).

The default switching frequency is 4 kHz.

In multimotor systems, the calculated sum of all motor cable lengths must not exceed the maximum motor cable length given in the tables above.



**WARNING!** Using a motor cable longer than specified in the table above may cause permanent damage to the drive.

#### *Examples for using the table*

<b>Requirements</b>	<b>Checking and conclusions</b>
R1 frame size, 8 kHz fsw, Category C2, 150 m cable	Check operational limits for R1 and 8 kHz -> for a 150 m cable a du/dt filter is needed.  Check EMC limits -> EMC requirements for Category C2 are met with a 150 m cable.
R3 frame size, 4 kHz fsw, Category C3, 300 m cable	Check operational limits for R3 and 4 kHz -> a 300 m cable cannot be used even with a du/dt filter. A sine filter must be used and the voltage drop of the cable must be taken into account in the installation.  Check EMC limits -> EMC requirements for Category C3 are met with a 300 m cable.



Requirements	Checking and conclusions
R5 frame size, 8 kHz fsw, Category C3, 150 m cable	Check operational limits for R5 and 8 kHz -> for a 150 m cable the basic unit is sufficient.  Check EMC limits -> EMC requirements for Category C3 cannot be met with a 300 m cable. The installation configuration is not possible. An EMC plan is recommended to overcome the situation.
R6 frame size, 4 kHz fsw, EMC limits not applicable, 150 m cable	Check operational limits for R6 and 4 kHz -> for a 150 m cable the basic unit is sufficient.  EMC limits do not need to be checked as there are no EMC requirements.

00577999.xls A

## Motor thermal protection

According to regulations, the motor must be protected against thermal overload and the current must be switched off when overload is detected. The drive includes a motor thermal protection function that protects the motor and switches off the current when necessary. Depending on a drive parameter (see parameter 3501 SENSOR TYPE), the function either monitors a calculated temperature value (based on a motor thermal model, see parameters 3005 MOT THERM PROT ... 3009 BREAK POINT FREQ) or an actual temperature indication given by motor temperature sensors (see [Group 35: MOTOR TEMP MEAS](#)). The user can tune the thermal model further by feeding in additional motor and load data.

The most common temperature sensors are:

- motor sizes IEC180...225: thermal switch (e.g. Klixon)
- motor sizes IEC200...250: and larger: PTC or PT100.

## Control connections



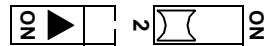

Control connection specifications	
<b>Analogue inputs and outputs</b>	See section <a href="#">Hardware description</a> on page <a href="#">415</a> .
<b>Digital inputs</b>	See the footnote under the table in section <a href="#">Hardware description</a> on page <a href="#">415</a> .
<b>Relays (digital outputs)</b>	<ul style="list-style-type: none"> <li>• Max. contact voltage: 30 V DC, 250 V AC</li> <li>• Max. contact current/power: 6 A, 30 V DC; 1500 VA, 250 V AC</li> <li>• Max. continuous current: 2 A rms (cos phi = 1), 1 A rms (cos phi = 0.4)</li> <li>• Minimum current: 10 mA, 12 V DC</li> <li>• Contact material: Silver-nickel (AgN)</li> <li>• Isolation between relay digital outputs, test voltage: 2.5 kV ms, 1 minute.</li> </ul>
<b>Terminal sizes</b>	See below.
<b>Cable specifications</b>	See section <a href="#">Control cables</a> on page <a href="#">32</a> .




Frame size	Control terminals			
	Max. wire size <sup>1</sup>		Tightening torque	
	mm <sup>2</sup>	AWG	N·m	lbf·ft
R1...R6	1.5	16	0.4	0.3

<sup>1</sup> Values given for solid wires.  
For stranded wires, the maximum size is 1 mm<sup>2</sup>.

00467918.xls C

## Hardware description

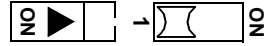	X1		Hardware description
Analogue I/O	1	SCR	Terminal for signal cable shield (connected internally to chassis ground).
	2	AI1	Analogue input channel 1, programmable. Default <sup>2</sup> = frequency reference. Resolution 0.1%, accuracy $\pm 1\%$ .
			Two different DIP switch types can be used.
			J1: AI1 OFF: 0...10 V ( $R_i = 312 \text{ kohm}$ ) 
			J1: AI1 ON: 0...20 mA ( $R_i = 100 \text{ ohm}$ ) 
	3	AGND	Analogue input circuit common (connected internally to the chassis ground through 1 Mohm).
	4	+10 V	10 V/10 mA reference voltage output for analogue input potentiometer (1...10 kohm), accuracy $\pm 2\%$ .
	5	AI2	Analogue input channel 2, programmable. Default <sup>2</sup> = Actual signal 1 (PID1 feedback). Resolution 0.1%, accuracy $\pm 1\%$ .
			Two different DIP switch types can be used.
J1: AI2 OFF: 0...10 V ( $R_i = 312 \text{ kohm}$ ) 			
J1: AI2 ON: 0...20 mA ( $R_i = 100 \text{ ohm}$ ) 			
6	AGND	Analogue input circuit common (connected internally to the chassis ground through 1 Mohm).	
7	AO1	Analogue output, programmable. Default <sup>2</sup> = frequency. 0...20 mA (load < 500 ohm). Accuracy $\pm 3\%$ .	
8	AO2	Analogue output, programmable. Default <sup>2</sup> = current. 0...20 mA (load < 500 ohm). Accuracy $\pm 3\%$ .	
9	AGND	Analogue output circuit common (connected internally to the chassis ground through 1 Mohm).	

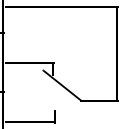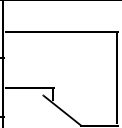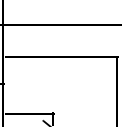	X1		Hardware description
Digital inputs <sup>1</sup>	10	+24V	Auxiliary voltage output 24 V DC / 250 mA (reference to GND). Short circuit protected.
	11	GND	Auxiliary voltage output common (connected internally as floating).
	12	DCOM	Digital input common. To activate a digital input, there must be $\geq +10$ V (or $\leq -10$ V) between the input and DCOM. The 24 V may be provided by the ACH550 (X1:10) or by an external 12...24 V source of either polarity.
	13	DI1	Digital input 1, programmable. Default <sup>2</sup> = start/stop.
	14	DI2	Digital input 2, programmable. Default <sup>2</sup> = not used.
	15	DI3	Digital input 3, programmable. Default <sup>2</sup> = constant speed 1 (parameter 1202).
	16	DI4	Digital input 4, programmable. Default <sup>2</sup> = Start enable 1 (parameter 1608).
	17	DI5	Digital input 5, programmable. Default <sup>2</sup> = not used.
	18	DI6	Digital input 6, programmable. Default <sup>2</sup> = not used.
Relay outputs	19	RO1C	 Relay output 1, programmable Default <sup>2</sup> = Ready Maximum: 250 V AC / 30 V DC, 2 A Minimum: 500 mW (12 V, 10 mA)
	20	RO1A	
	21	RO1B	
	22	RO2C	 Relay output 2, programmable Default <sup>2</sup> = Running Maximum: 250 V AC / 30 V DC, 2 A Minimum: 500 mW (12 V, 10 mA)
	23	RO2A	
	24	RO2B	
	25	RO3C	 Relay output 3, programmable Default <sup>2</sup> = Fault (-1) Maximum: 250 V AC / 30 V DC, 2 A Minimum: 500 mW (12 V, 10 mA)
	26	RO3A	
	27	RO3B	

<sup>1</sup> Digital input impedance 1.5 kohm. Maximum voltage for digital inputs is 30 V.

<sup>2</sup> Default values depend on the macro used. Values specified are for the default macro. See chapter [Application macros and wiring](#).

---

**Note:** Terminals 3, 6, and 9 are at the same potential.

---




---

**Note:** For safety reasons the fault relay signals a “fault” when the ACH550 is powered down.


---

The terminals on the control board as well as on the optional modules attachable to the board fulfil the Protective Extra Low Voltage (PELV) requirements stated in EN 50178, provided that the external circuits connected to the terminals also fulfil the requirements and the installation site is below 2000 m (6562 ft). You can wire the digital input terminals in either a PNP or NPN configuration.

PNP connection (source)

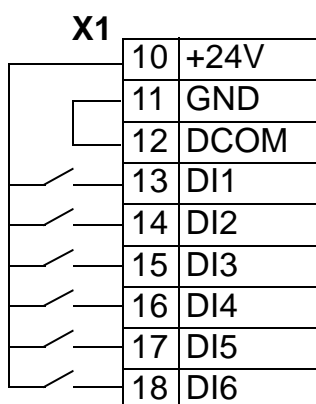


NPN connection (sink)

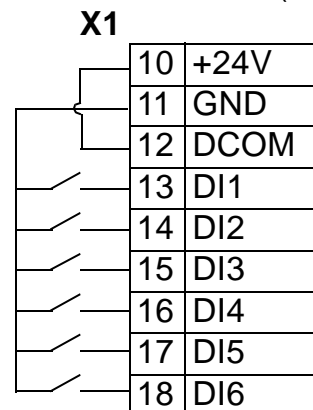


For using an external power supply, see the diagrams below.

PNP connection (source)

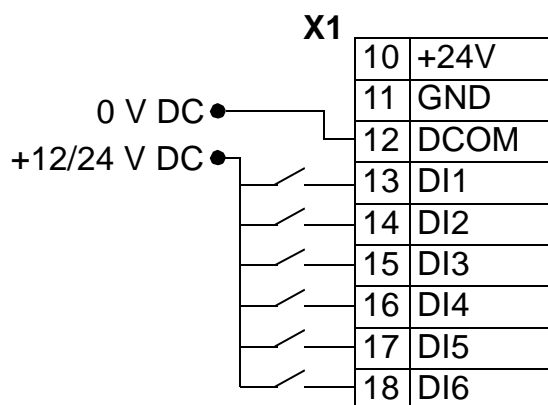

NPN connection (sink)

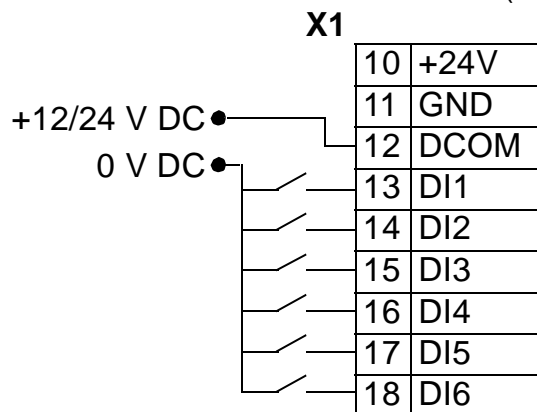

### Communications

Terminals 28...32 are for RS485 communications. Use shielded cables.

<b>X1</b>	<b>Identification</b>	<b>Hardware description</b>
28	SCR Screen	For the connection diagram and additional information, see section <a href="#">Embedded fieldbus (EFB)</a> on page 142.
29	B + Positive	
30	A - Negative	
31	AGND	
32	SCR Screen	

### Efficiency

Approximately 98% at nominal power level.

### Losses, cooling data and noise

<b>Cooling specifications</b>	
<b>Method</b>	Internal fan, flow direction from bottom to top
<b>Free space around the unit</b>	<ul style="list-style-type: none"> <li>• 200 mm (8 in) above and below the unit</li> <li>• 0 mm (0 in) along each side of the unit</li> </ul>

*Air flow, 380...480 V drives*

The following table lists the requirements for the cooling air flow data for 380...480 V drives at full load in all ambient conditions listed in [Ambient conditions](#) on page 440.

Drive		Heat dissipation		Air flow		Noise
ACH550-01-	Frame size	W	BTU/hr	m <sup>3</sup> /h	ft <sup>3</sup> /min	dB
02A4-4	R1	30	101	44	26	52
03A3-4	R1	40	137	44	26	52
04A1-4	R1	52	178	44	26	52
05A4-4	R1	73	249	44	26	52
06A9-4	R1	97	331	44	26	52
08A8-4	R1	127	434	44	26	52
012A-4	R1	172	587	44	26	52
015A-4	R2	232	792	88	52	66
023A-4	R2	337	1151	88	52	66
031A-4	R3	457	1561	134	79	67
038A-4	R3	562	1919	134	79	67
045A-4	R3	667	2278	134	79	67
059A-4	R4	907	3098	280	165	75
072A-4	R4	1120	3825	280	165	75
087A-4	R4	1440	4918	280	165	75
125A-4	R5	1940	6625	350	205	75
157A-4	R6	2310	7889	405	238	77
180A-4	R6	2810	9597	405	238	77
195A-4	R6	3050	10416	405	238	77
246A-4	R6	3260	11133	405	238	77
290A-4	R6	3850	13125	405	238	77

00467918.xls C

*Air flow, 208...240 V drives*

The following table lists the requirements for the cooling air flow data for 208...240 V drives at full load in all ambient conditions listed in [Ambient conditions](#) on page 440.

Drive		Heat dissipation		Air flow		Noise
ACH550-01-	Frame size	W	BTU/hr	m <sup>3</sup> /h	ft <sup>3</sup> /min	dB
04A6-2	R1	55	189	44	26	52
06A6-2	R1	73	249	44	26	52
07A5-2	R1	81	276	44	26	52
012A-2	R1	118	404	44	26	52
017A-2	R1	161	551	44	26	52
024A-2	R2	227	776	88	52	66
031A-2	R2	285	973	88	52	66
046A-2	R3	420	1434	134	79	67
059A-2	R3	536	1829	134	79	67
075A-2	R4	671	2290	280	165	75
088A-2	R4	786	2685	280	165	75
114A-2	R4	1014	3463	280	165	75
143A-2	R6	1268	4431	405	238	77
178A-2	R6	1575	5379	405	238	77
221A-2	R6	1952	6666	405	238	77
248A-2	R6	2189	7474	405	238	77

00467918.xls C


## Dimensions and weights

The dimensions and mass for the ACH550 depend on the frame size and enclosure type. If unsure of frame size, find first the "Type" designation on the drive labels. Then look up this type designation in section [Ratings](#) on page 395 to determine the frame size.

Pages [426...438](#) show the dimensional drawings of the different frame sizes for each degree of protection. A complete set of dimensional drawings for ACH550 drives can be found on the *HVAC Info Guide* (3AFE68338743 [English]).



## Mounting dimensions

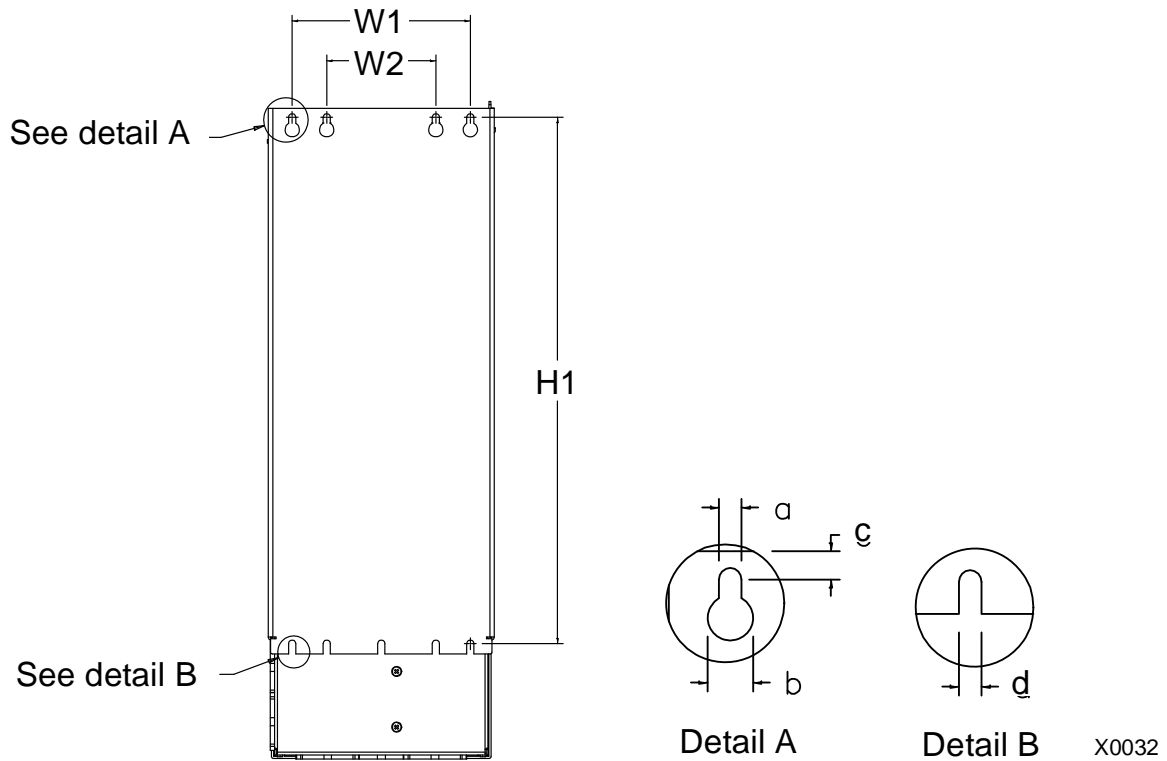

IP54 / UL Type 12 and IP21 / UL Type 1 – Dimensions for each frame size												
Ref.	R1		R2		R3		R4		R5		R6	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
<b>W1*</b>	98.0	3.9	98.0	3.9	160	6.3	160	6.3	238	9.4	263	10.4
<b>W2*</b>	--	--	--	--	98.0	3.9	98.0	3.9	--	--	--	--
<b>H1*</b>	318	12.5	418	16.4	473	18.6	578	22.8	588	23.2	675	26.6
<b>a</b>	5.5	0.2	5.5	0.2	6.5	0.25	6.5	0.25	6.5	0.25	9.0	0.35
<b>b</b>	10.0	0.4	10.0	0.4	13.0	0.5	13.0	0.5	14.0	0.55	18.0	0.71
<b>c</b>	5.5	0.2	5.5	0.2	8.0	0.3	8.0	0.3	8.5	0.3	8.5	0.3
<b>d</b>	5.5	0.2	5.5	0.2	6.5	0.25	6.5	0.25	6.5	0.25	9.0	0.35

\* Centre-to-centre dimension

## Weights and mounting screws

Frame size	Frame weight kg IP21/IP54	Frame weight lb IP21/IP54	Mounting screws Metric units	Mounting screws Imperial units
R1	6.5 / 8	14 / 18	M5	#10
R2	9.0 / 11	20 / 24	M5	#10
R3	16 / 17	35 / 37.5	M5	#10
R4	24 / 26	53 / 57	M5	#10
R5	34 / 42	75 / 93	M6	1/4 in
R6	69 <sup>1</sup> / 86 <sup>2</sup>	152 <sup>1</sup> / 190 <sup>2</sup>	M8	5/16 in

<sup>1</sup> ACH550-01-221A-2, IP21: 70 kg / 154 lb  
 ACH550-01-246A-4, IP21: 70 kg / 154 lb  
 ACH550-01-248A-2, IP21, 80 kg / 176 lb  
 ACH550-01-290A-4, IP21: 80 kg / 176 lb

<sup>2</sup> ACH550-01-246A-4, IP54: 80 kg / 176 lb  
 ACH550-01-290A-4, IP54: 90 kg / 198 lb


## Control panel (operator keypad) dimensions and mounting

The control panel overall dimensions are shown in the table below.

	mm	in
Height	100	3.9
Width	70	2.8
Depth	20	0.8


### IP54 panel mounting kit

Use the panel mounting kit (option) to mount the panel on a cabinet door to maintain the IP54 degree of protection. The kit includes a 3-meter extension cable, gasket, mounting template and mounting screws. The figure below shows how to mount the control panel with the gasket.

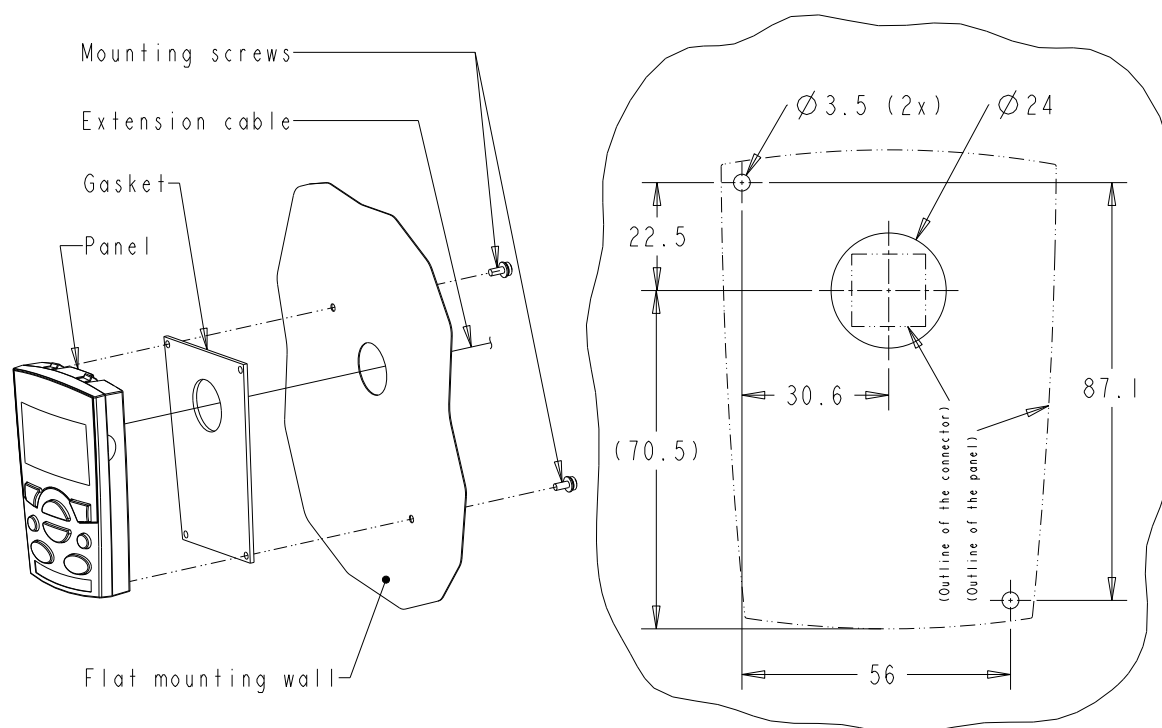

**IP66 panel extension cable kit**

Use the panel extension cable kit (option) to mount the panel on a cabinet door to maintain the IP66 degree of protection. The kit includes a 3-meter extension cable, cap, mounting template, thread inserts and mounting screws. The figure below shows how to mount the control panel with the cap.

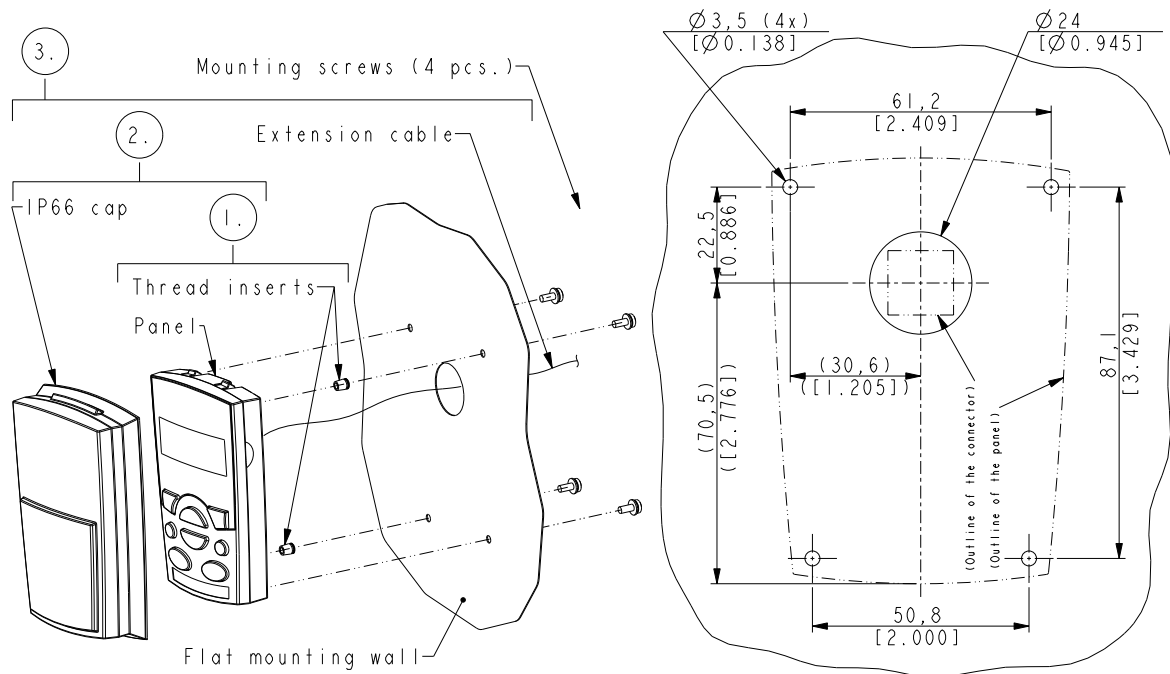


**Note:** IP66 panel extension kit is not meant for outdoor mounting. For more information, contact your local ABB representative.

*OPMP-01 Cabinet panel mounting kit*




Use the cabinet panel mounting kit (option) to mount the panel on a cabinet door to maintain the IP54 / UL Type 12 degree of protection. The kit includes a 3-meter extension cable, mounting template, panel platform (an interface board and two gaskets installed), stainless steel compression bracket, gaskets (for the operator panel) and mounting screws. The figure below shows how to mount the control panel into the panel mounting platform.






### Frame size R1 (IP54 / UL Type 12)

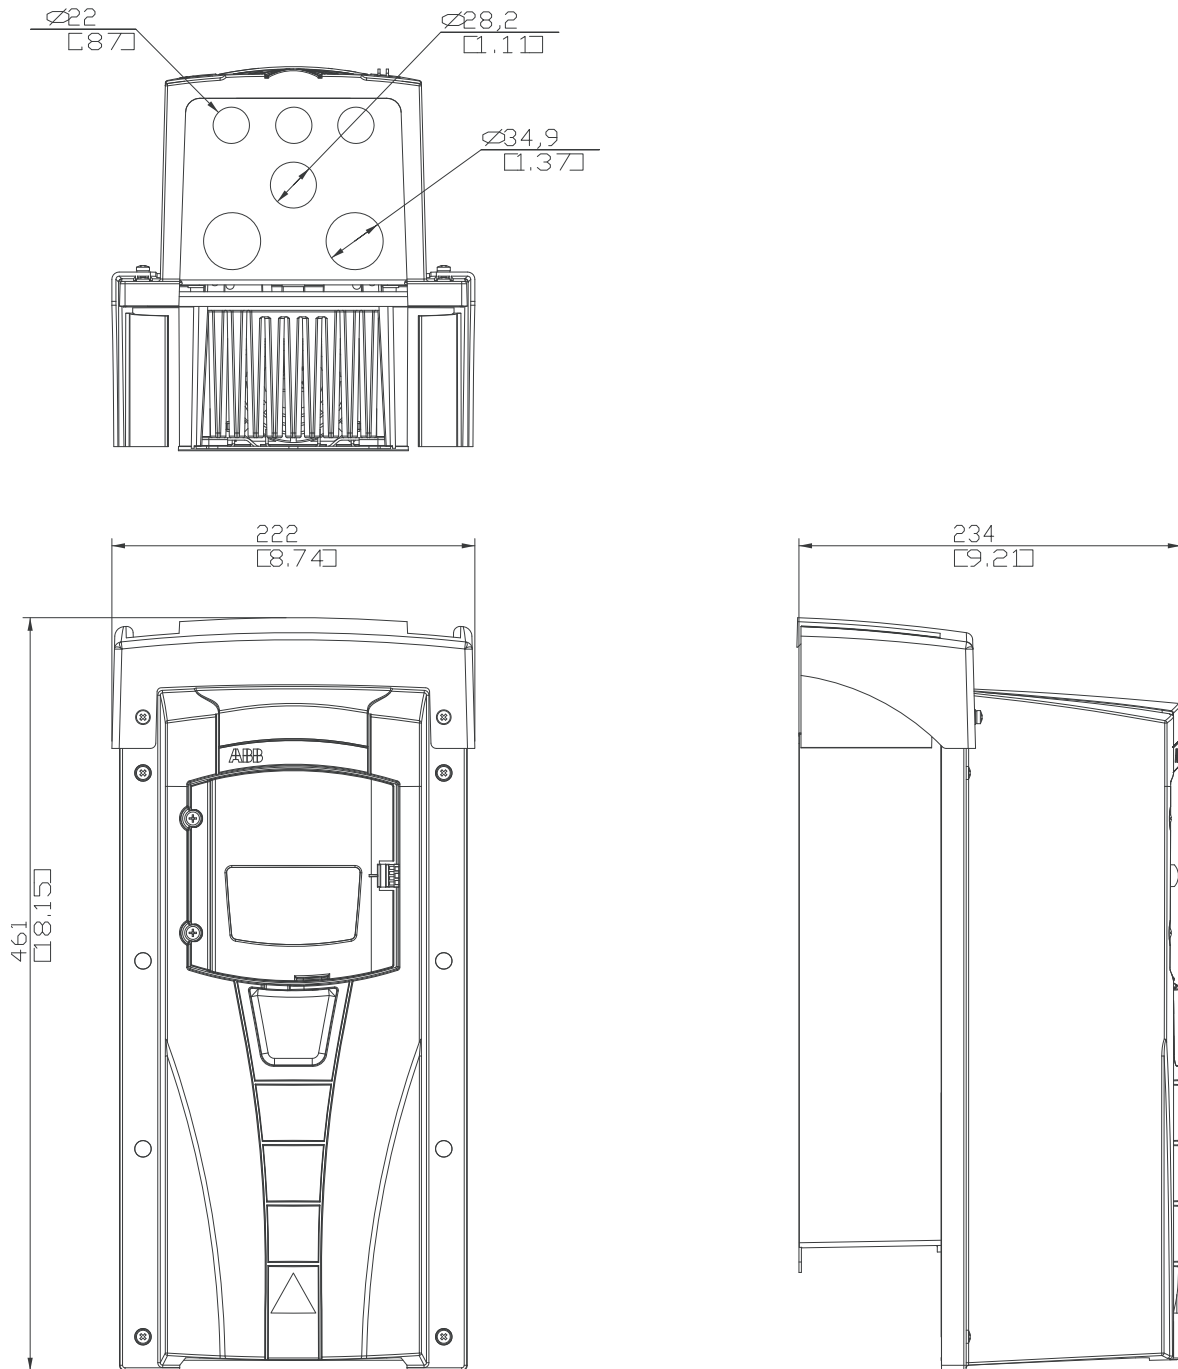

Frame size R2 (IP54 / UL Type 12)

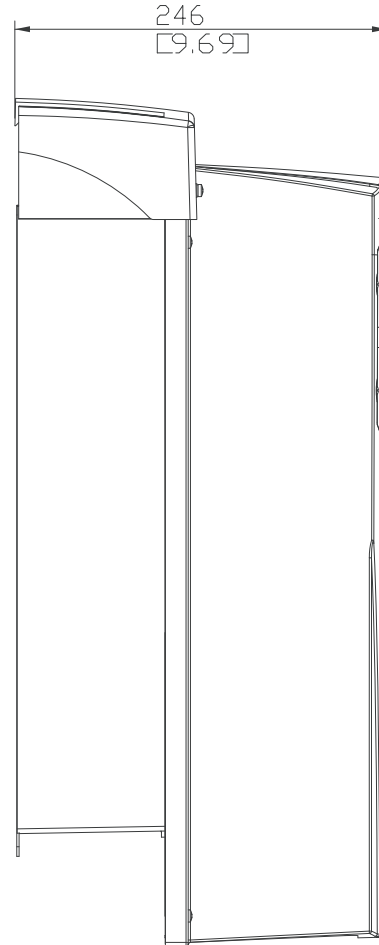
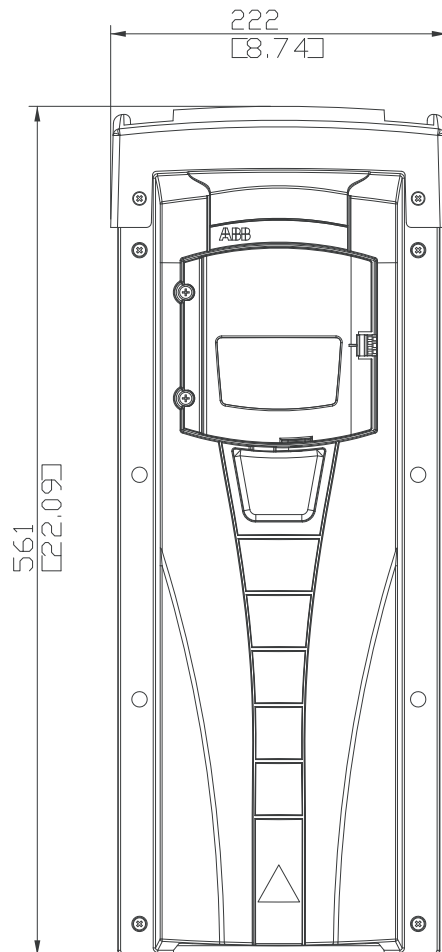
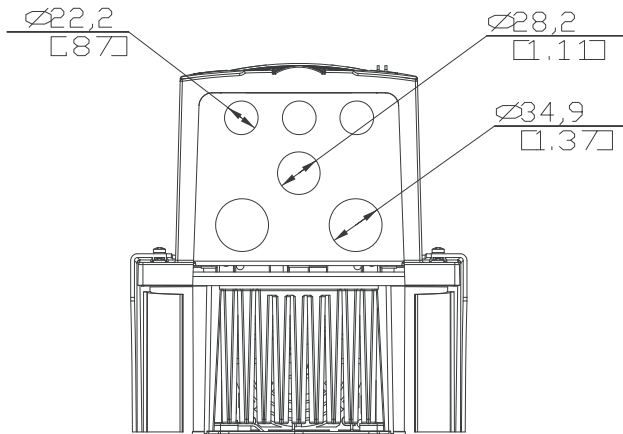


### Frame size R3 (IP54 / UL Type 12)

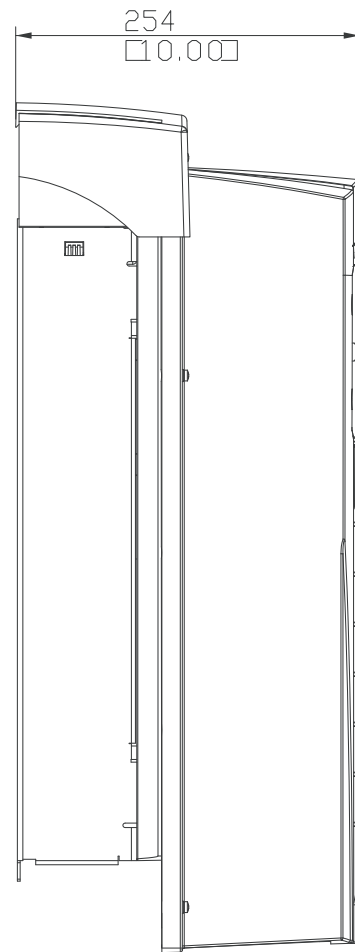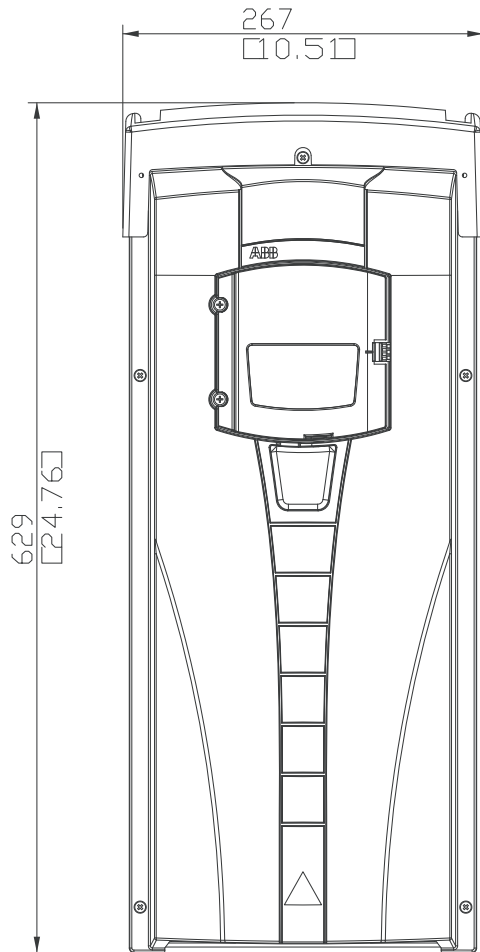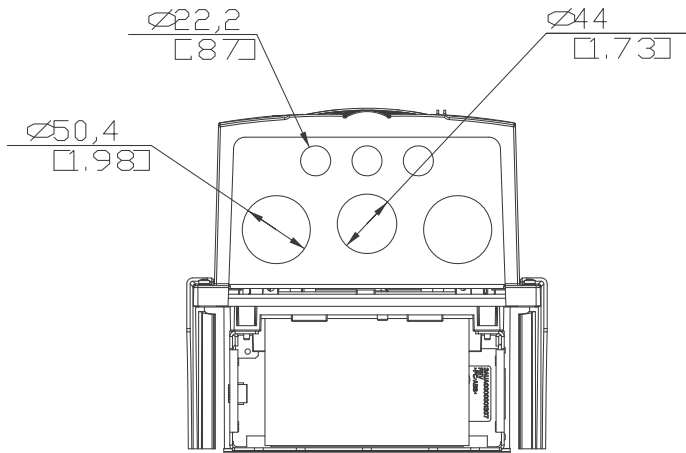





**Frame size R4 (IP54 / UL Type 12)**

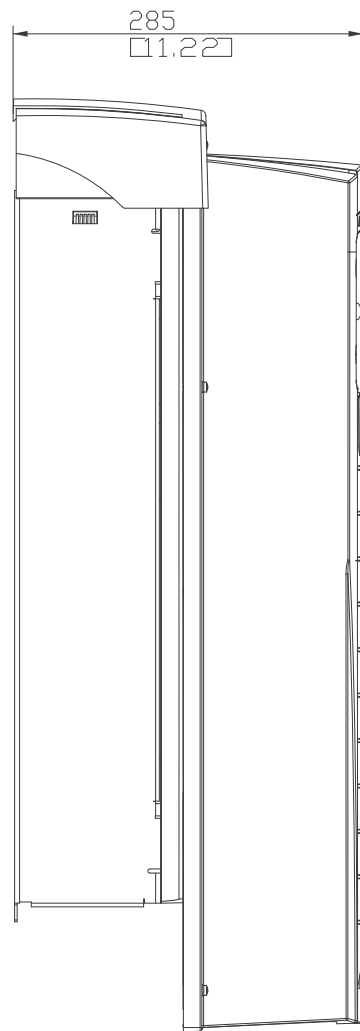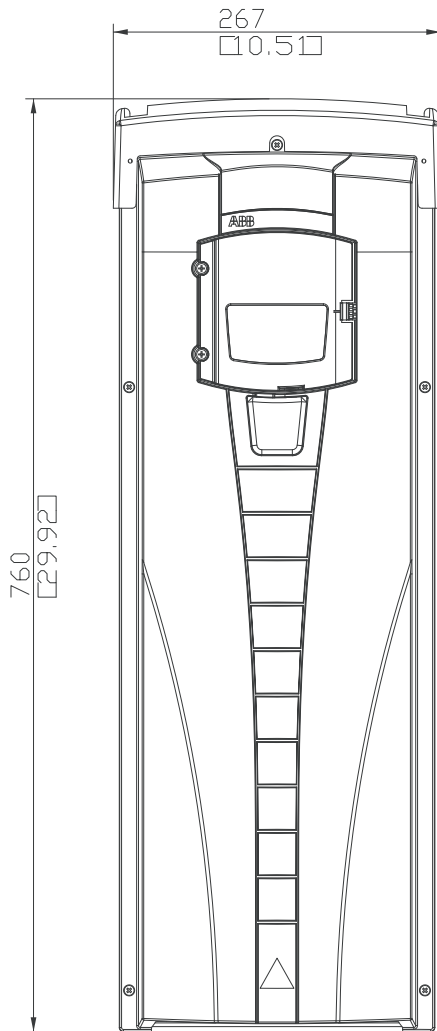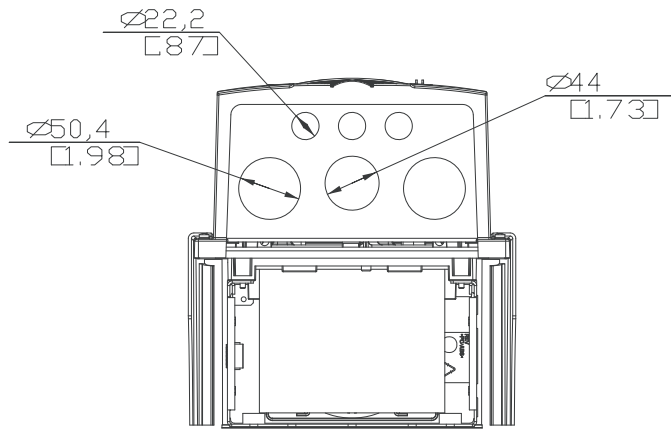


### Frame size R5 (IP54 / UL Type 12)

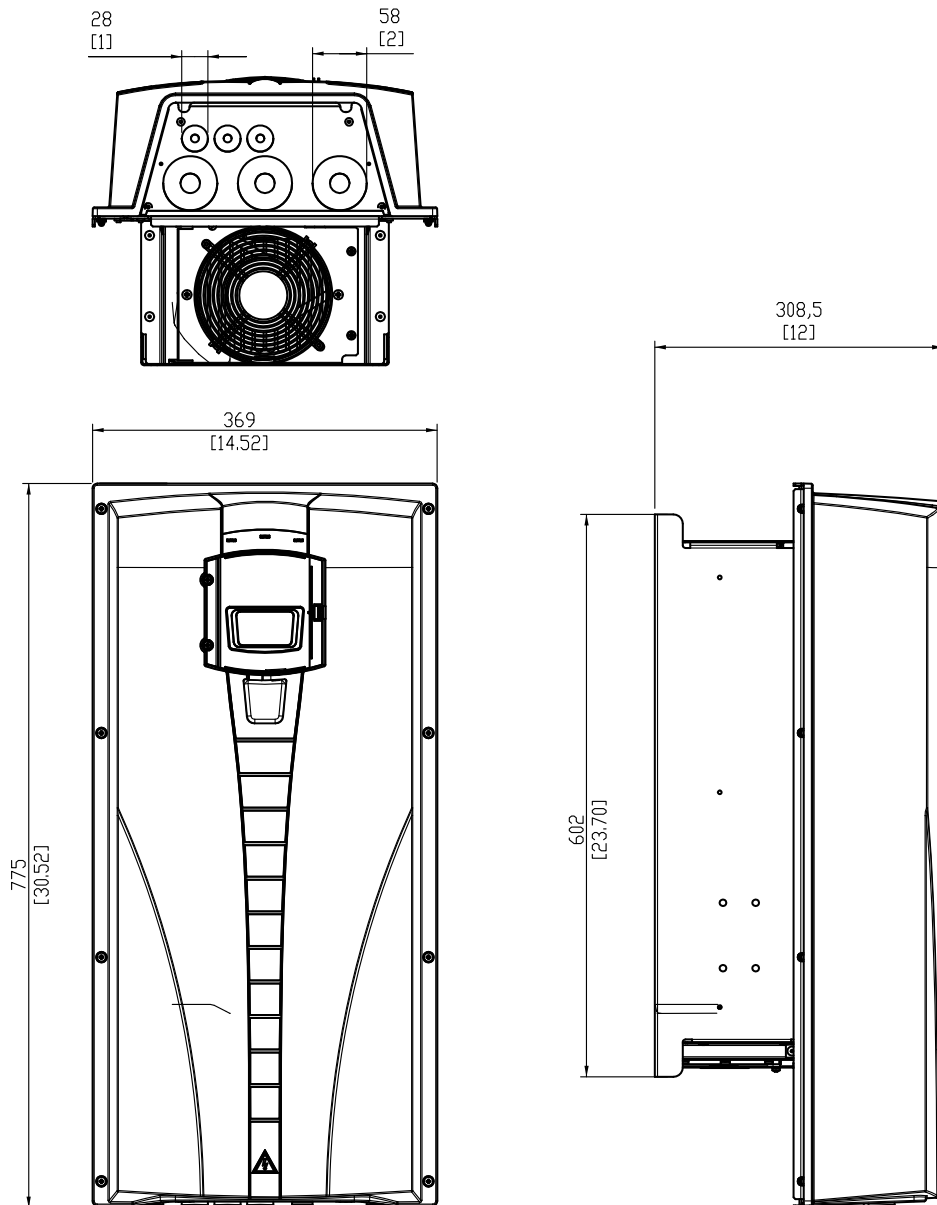


### Frame size R6 (IP54 / UL Type 12)

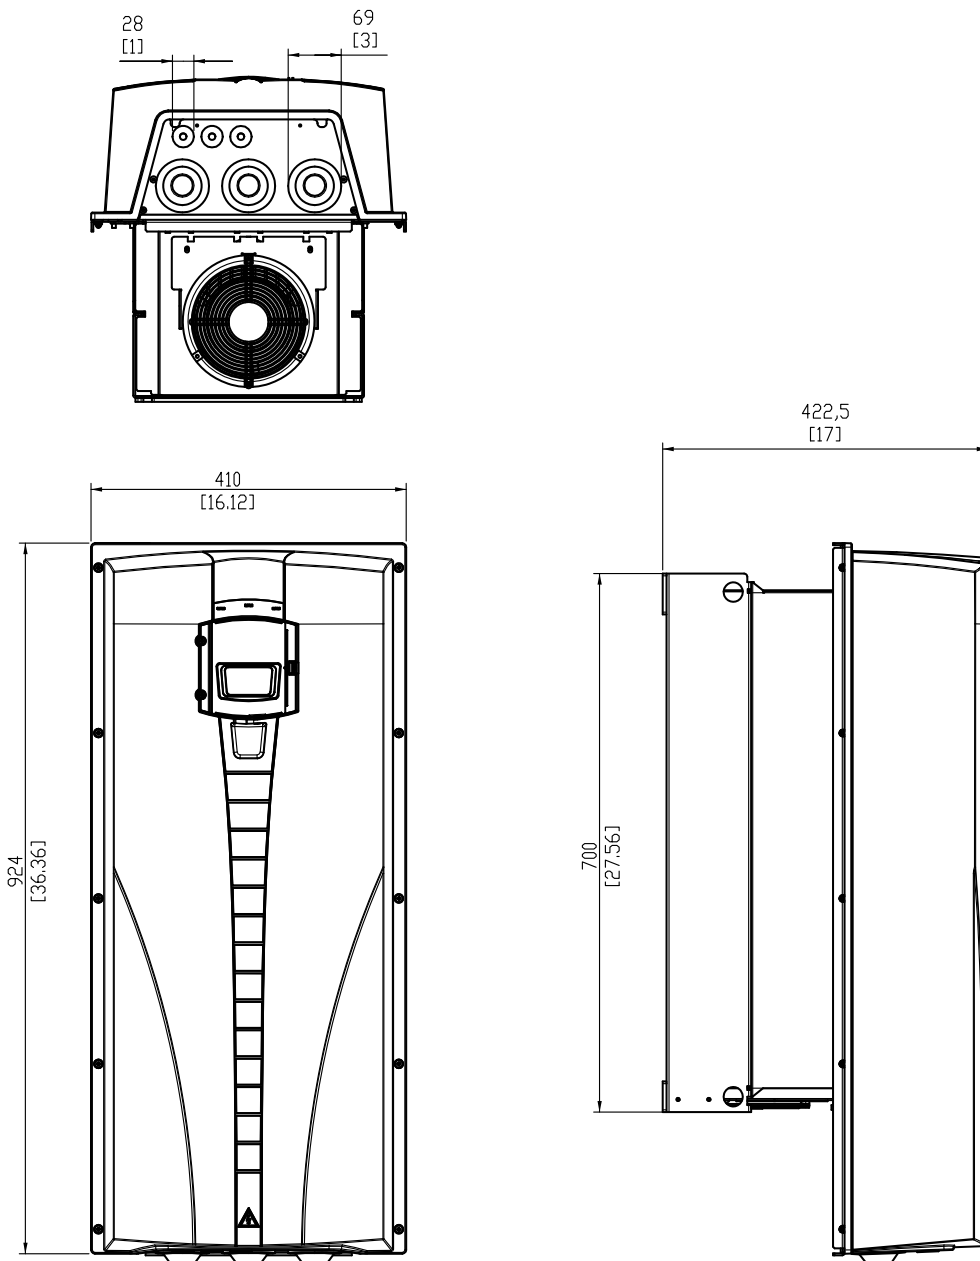


Type ACH550-01-290A-4, frame size R6 (IP54)

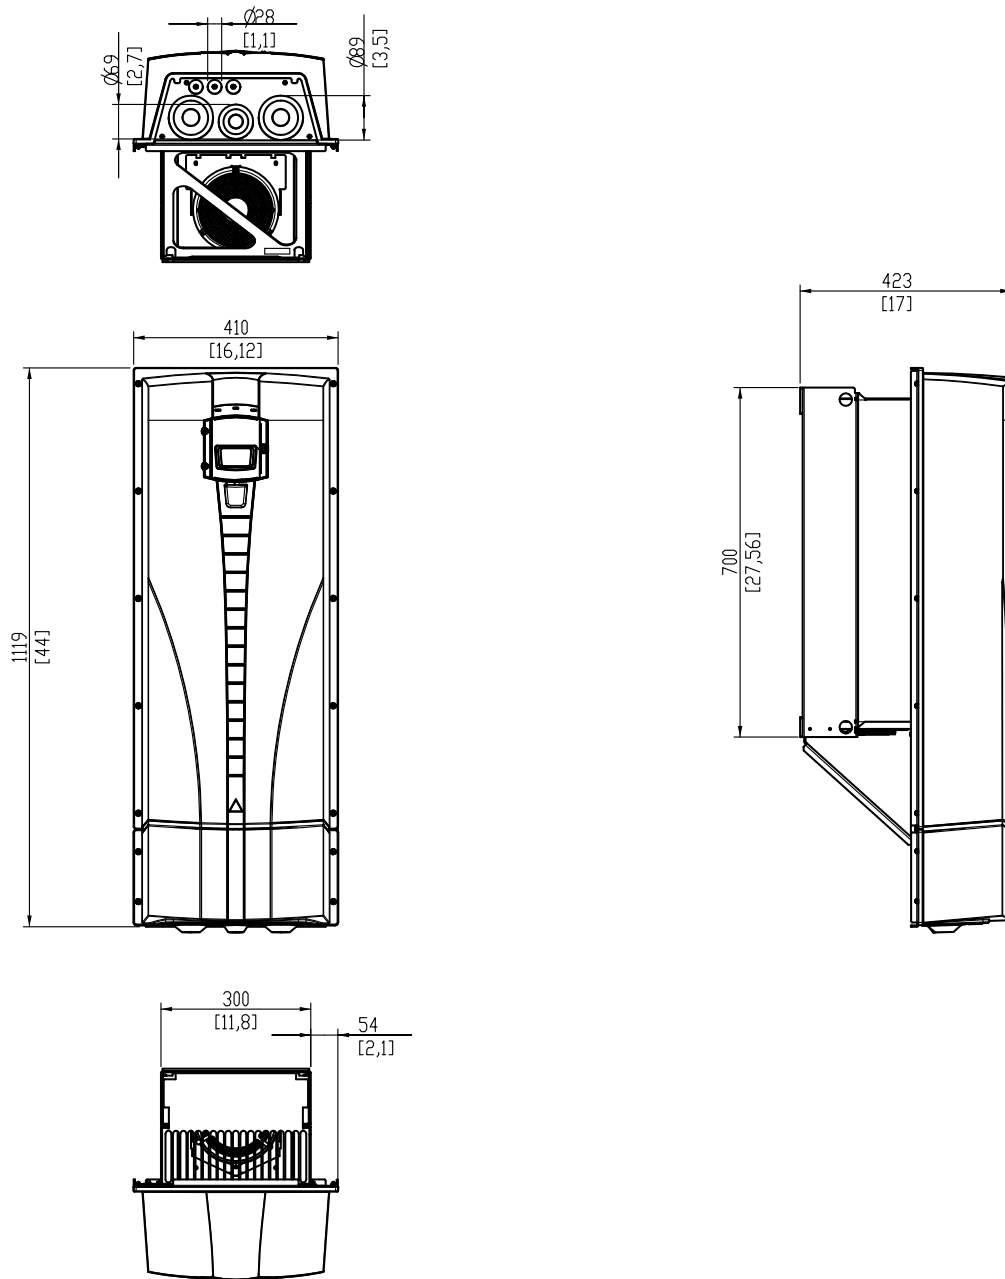


### Frame size R1 (IP21 / UL Type 1)

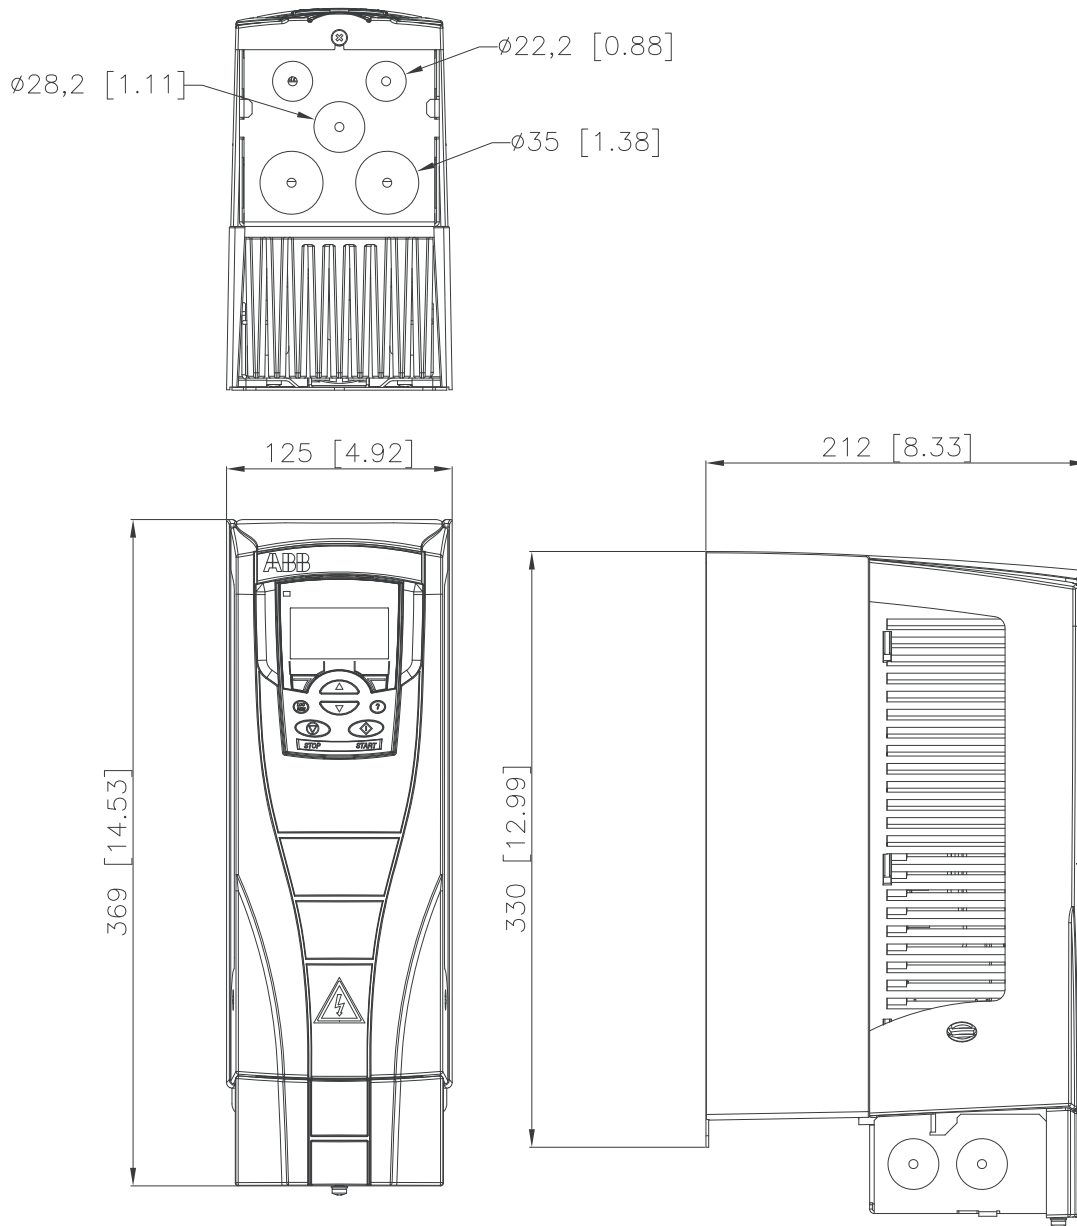


### Frame size R2 (IP21 / UL Type 1)

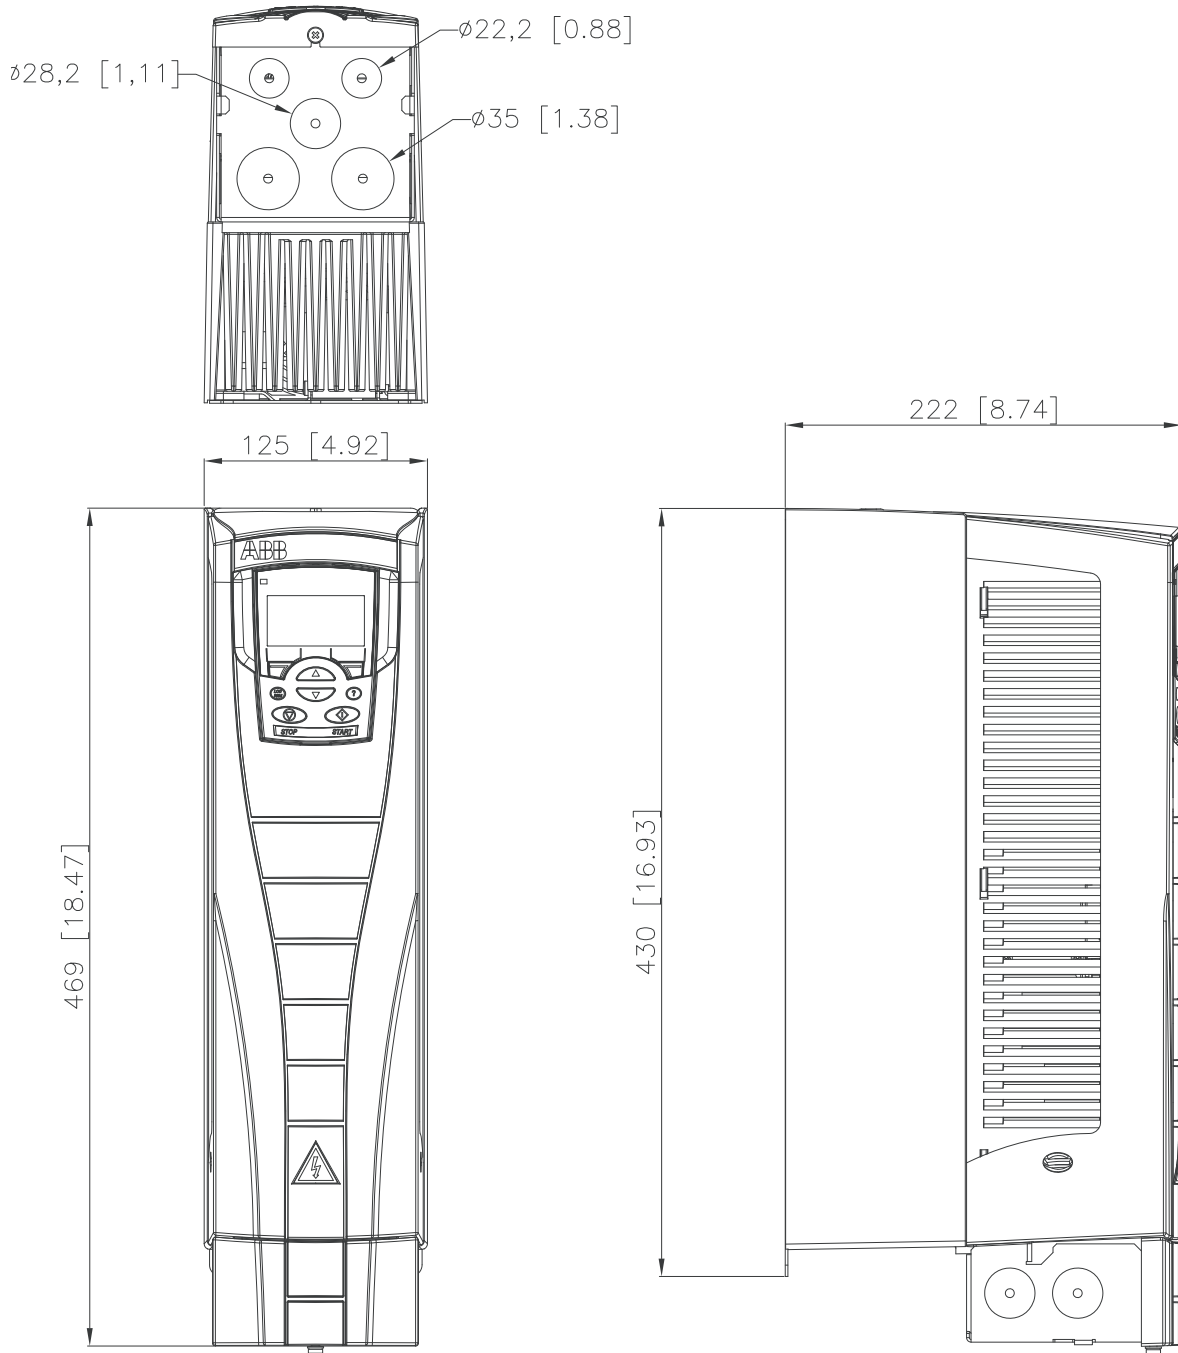

**Frame size R3 (IP21 / UL Type 1)**



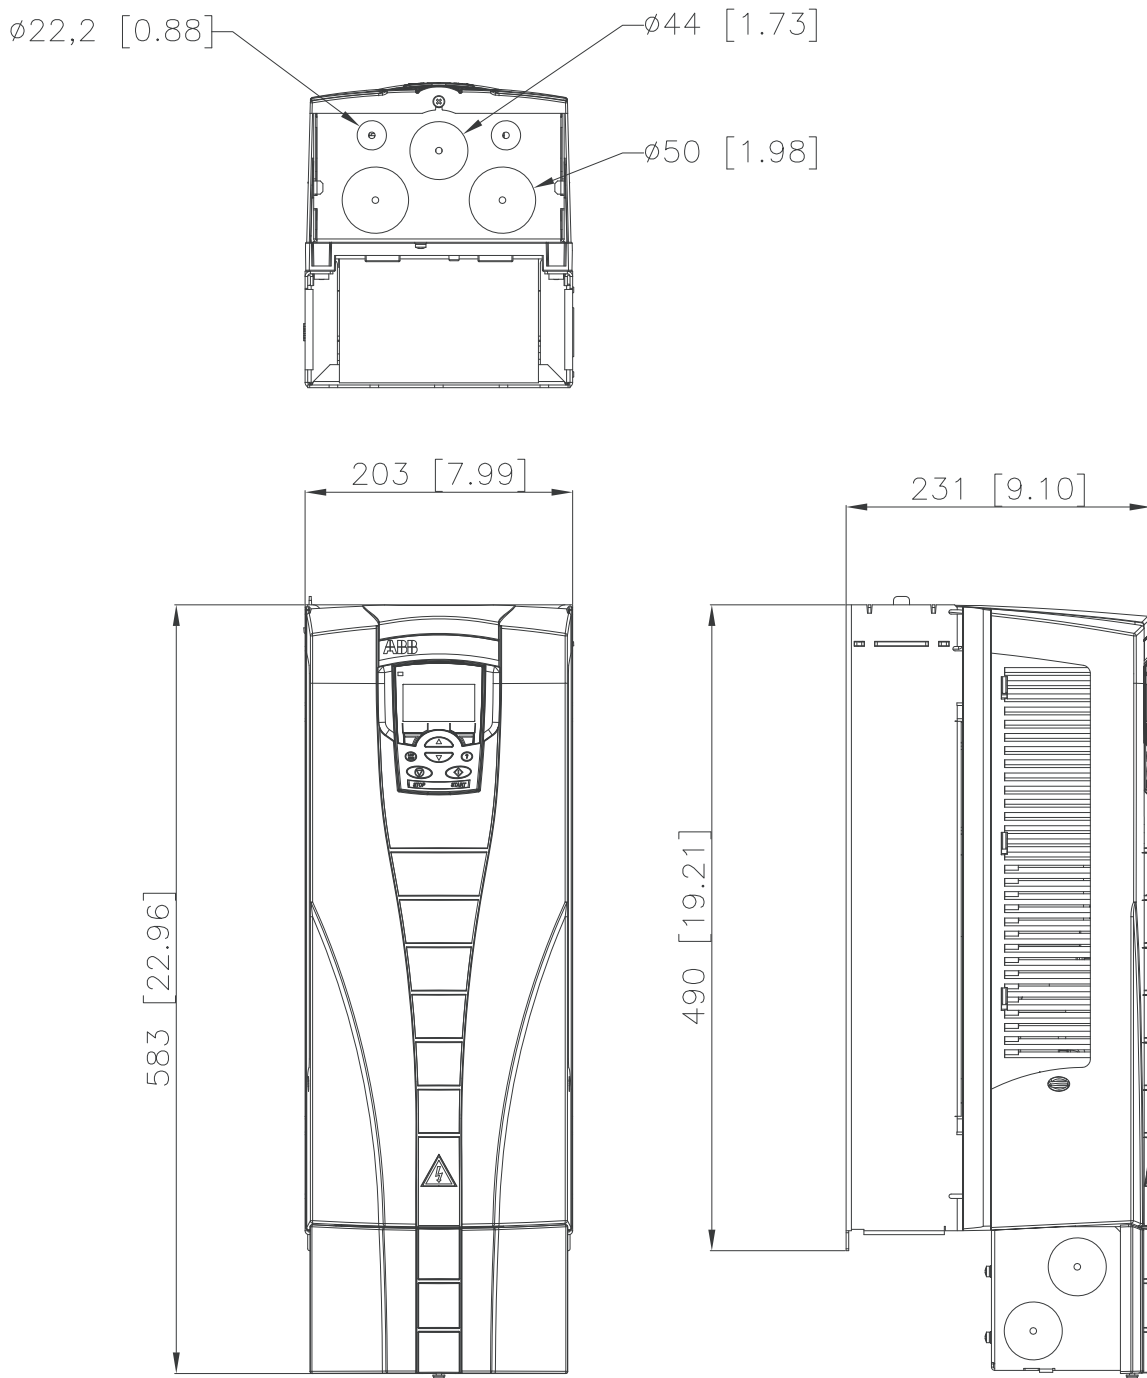


**Frame size R4 (IP21 / UL Type 1)**

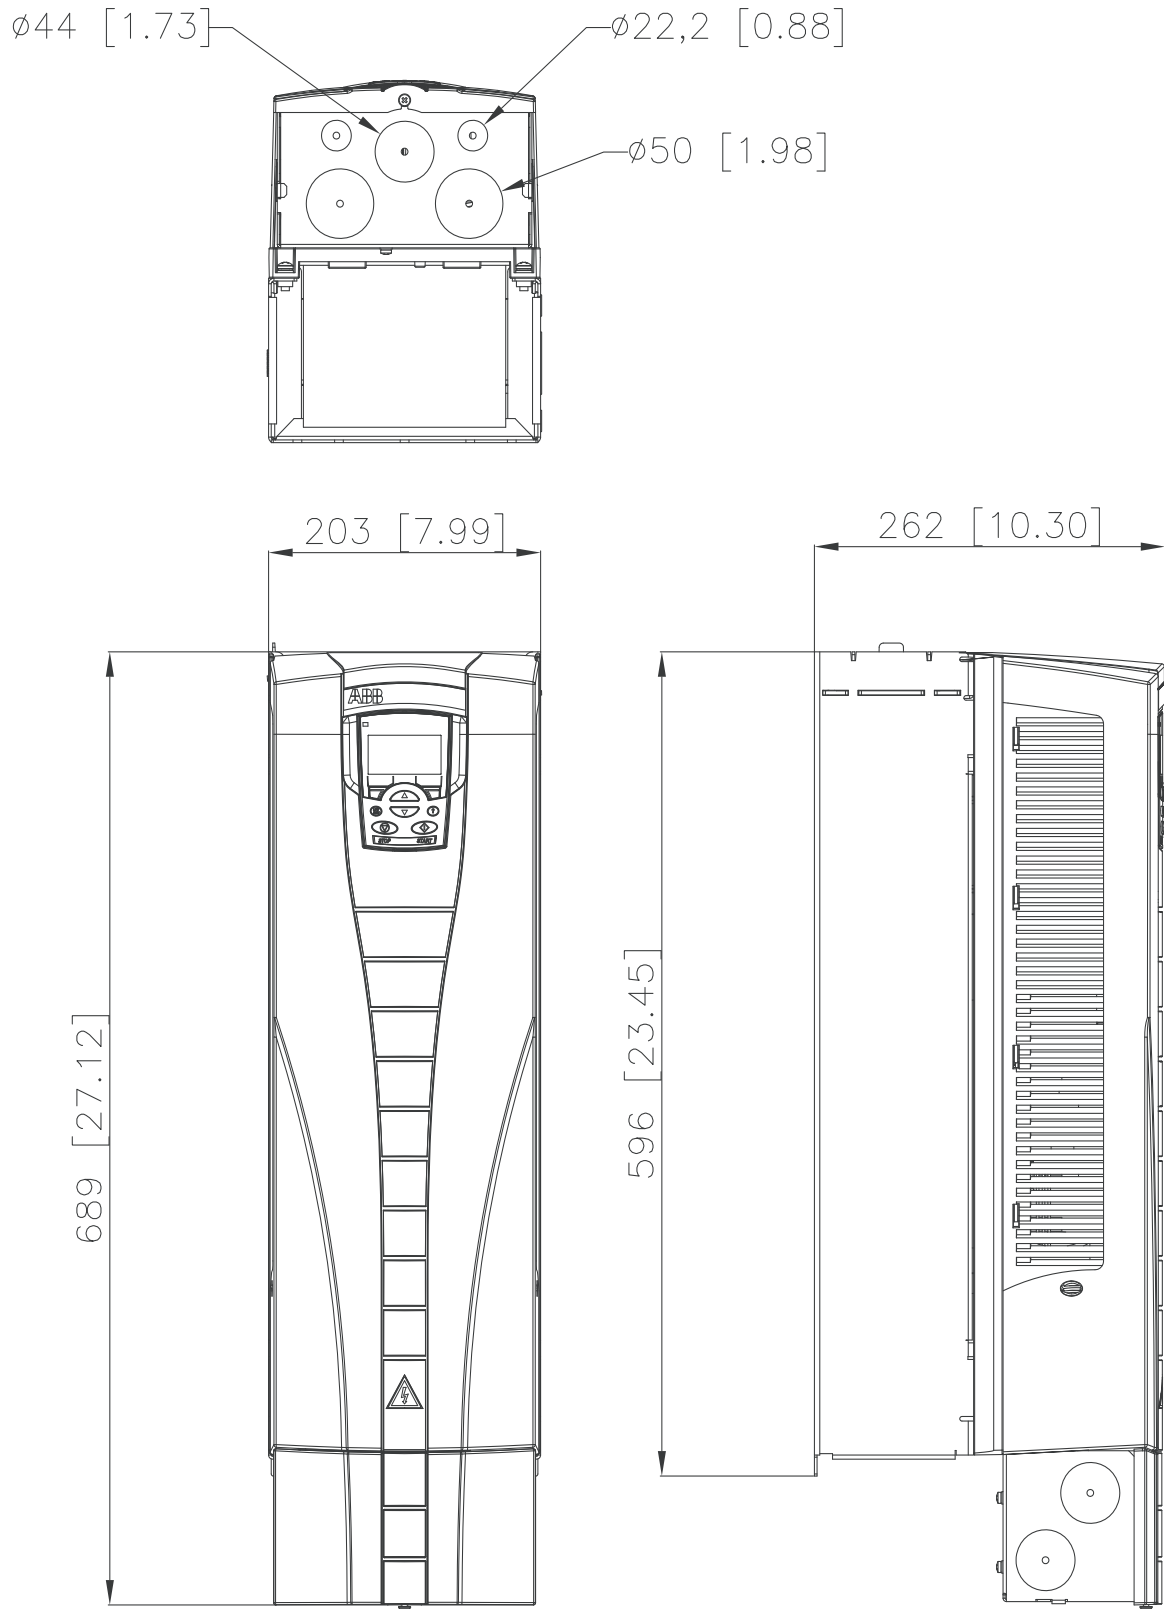





### Frame size R5 (IP21 / UL Type 1)

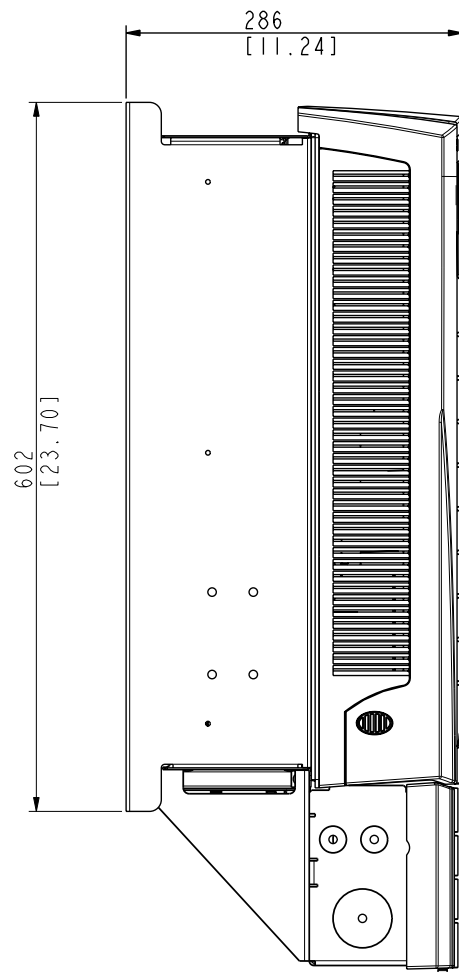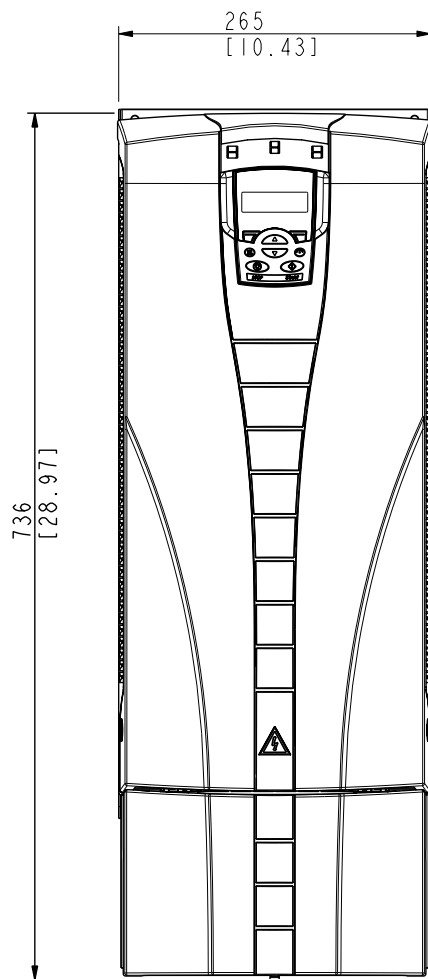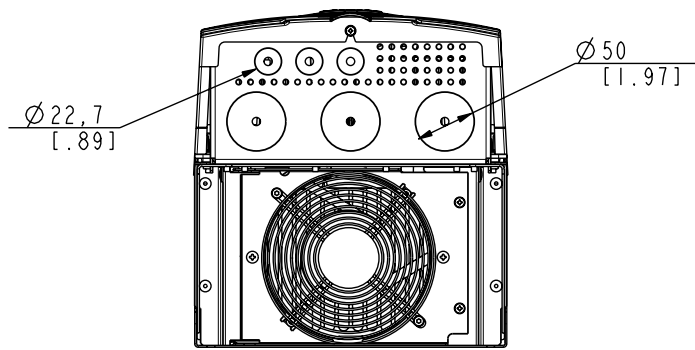

Frame size R6 (IP21 / UL Type 1)

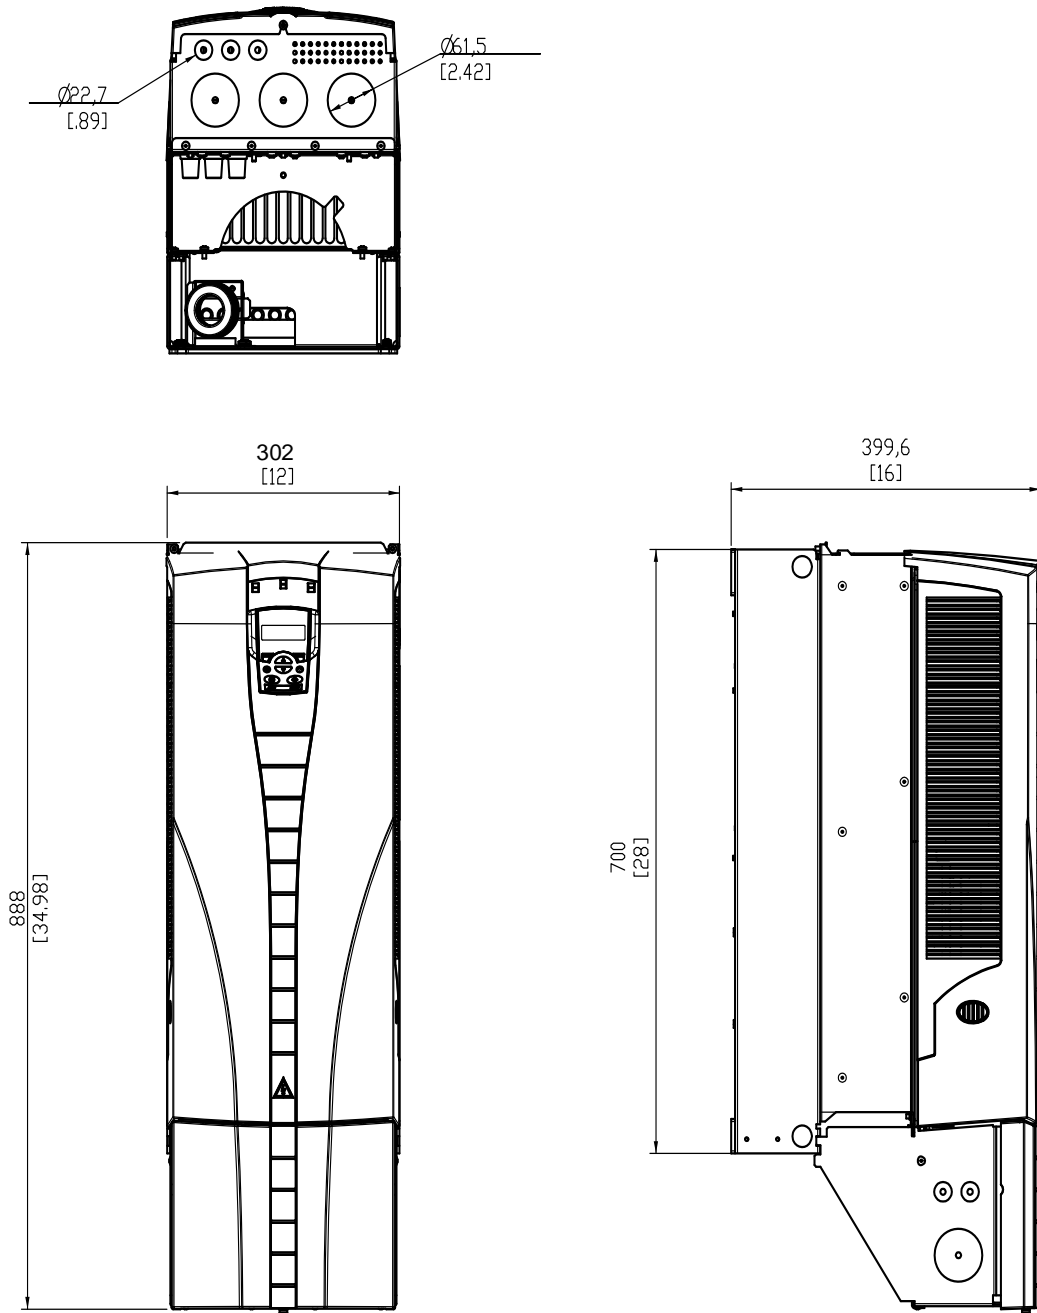

Types ACH550-01-221A-2, ACH550-01-246A-4, ACH550-01-248A-2 and ACH550-01-290A-4, frame size R6 (IP21 / UL Type 1)

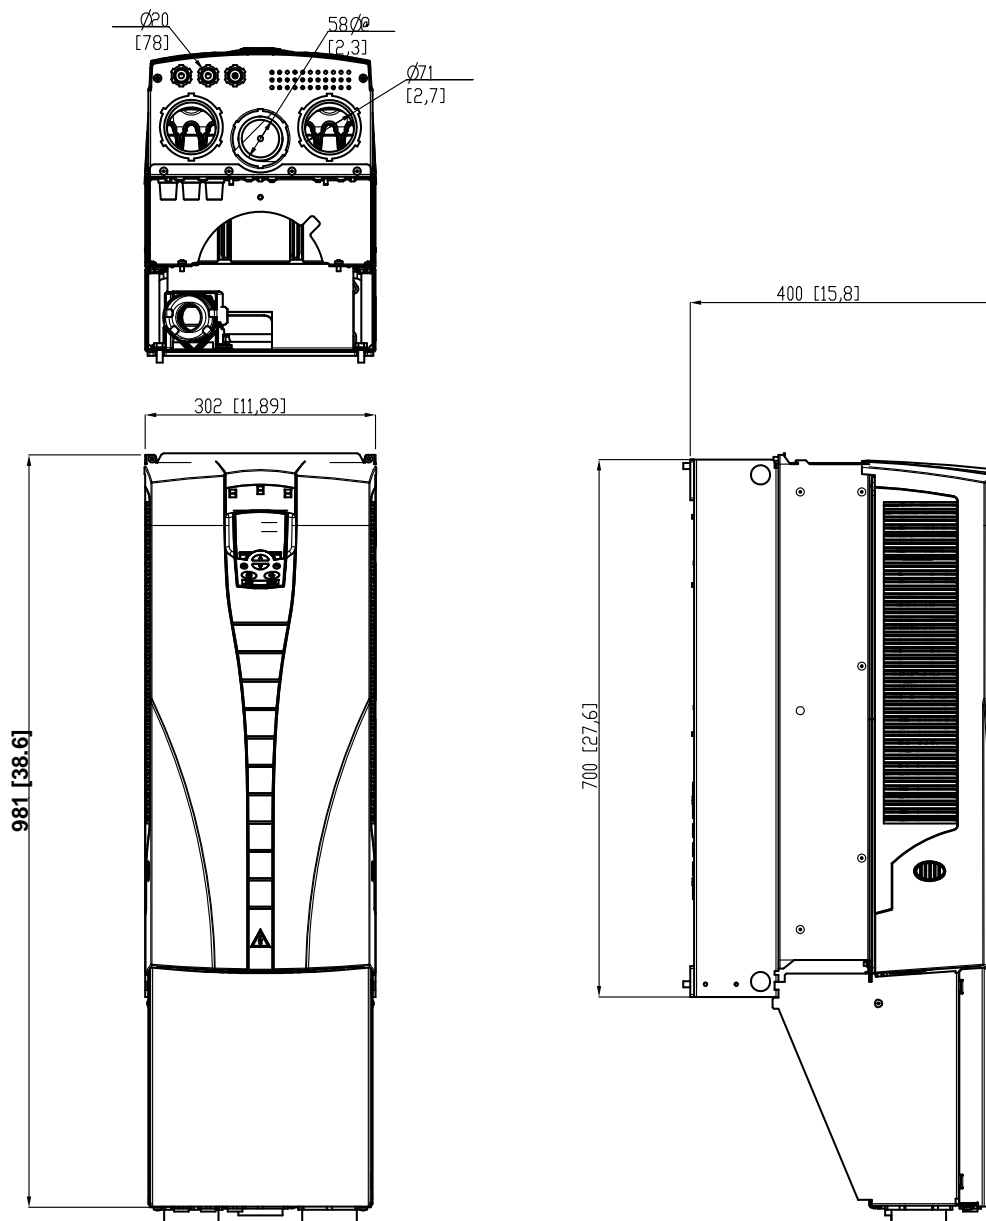

## Ambient conditions

The following table lists the ACH550 environmental requirements.

Ambient environment requirements		
	Installation site	Storage and transportation in the protective package
<b>Altitude</b>	<ul style="list-style-type: none"> <li>0...1000 m (0...3,300 ft)</li> <li>1000...2000 m (3,300...6,600 ft) if <math>P_N</math> and <math>I_{2N}</math> derated 1% for every 100 m above 1000 m (300 ft above 3,300 ft)</li> <li>2000...4000 m (6,600...13,200 ft): Contact your local ABB representative.</li> </ul>	
<b>Ambient temperature</b>	<ul style="list-style-type: none"> <li>No frost allowed</li> <li>400 V drives: See the available currents in -15...50 °C (5...122 °F) in the table on page 399.</li> <li>200 V drives: -15...40 °C (5...104 °F), max. 50 °C (122 °F) if <math>P_N</math> and <math>I_{2N}</math> derated to 90%</li> </ul>	-40...70 °C (-40...158 °F)
<b>Relative humidity</b>	5...95%, no condensation allowed	
<b>Contamination levels (IEC 60721-3-3)</b>	<ul style="list-style-type: none"> <li>No conductive dust allowed</li> <li>The ACH550 should be installed in clean air according to enclosure classification.</li> <li>Cooling air must be clean, free from corrosive materials and free from electrically conductive dust.</li> <li>Chemical gases: Class 3C2</li> <li>Solid particles: Class 3S2</li> </ul>	<b>Storage</b> <ul style="list-style-type: none"> <li>No conductive dust allowed</li> <li>Chemical gases: Class 1C2</li> <li>Solid particles: Class 1S2</li> </ul> <b>Transportation</b> <ul style="list-style-type: none"> <li>No conductive dust allowed</li> <li>Chemical gases: 2C2</li> <li>Solid particles: Class 2S2</li> </ul>
<b>Sinusoidal vibration (IEC 60068-2-6)</b>	<ul style="list-style-type: none"> <li>Mechanical conditions: Class 3M4 (IEC60721-3-3)</li> <li>2...9 Hz 3.0 mm (0.12 in)</li> <li>9...200 Hz 10 m/s<sup>2</sup> (33 ft/s<sup>2</sup>)</li> </ul>	<ul style="list-style-type: none"> <li>In accordance with ISTA 1A and 1B specifications.</li> </ul>
<b>Shock (IEC 68-2-29)</b>	Not allowed	Max. 100 m/s <sup>2</sup> (330 ft/s <sup>2</sup> ), 11 ms
<b>Free fall</b>	Not allowed	<ul style="list-style-type: none"> <li>76 cm (30 in), frame size R1</li> <li>61 cm (24 in), frame size R2</li> <li>46 cm (18 in), frame size R3</li> <li>31 cm (12 in), frame size R4</li> <li>25 cm (10 in), frame size R5</li> <li>15 cm (6 in), frame size R6</li> </ul>

## Materials

<b>Material specifications</b>	
<b>Drive enclosure</b>	<ul style="list-style-type: none"> <li>• PC/ABS 2.5 mm, colour NCS 1502-Y or NCS 7000-N</li> <li>• Hot-dip zinc coated steel sheet 1.5...2 mm, thickness of coating 20 micrometers. If the surface is painted, the total thickness of the coating (zinc and paint) is 80...100 micrometers.</li> <li>• Cast aluminium AlSi</li> <li>• Extruded aluminium AlSi</li> </ul>
<b>Package</b>	Corrugated board (drives and option modules), expanded polystyrene. Plastic covering of the package: PE-LD, bands PP or steel.
<b>Disposal</b>	<p>The drive contains raw materials that should be recycled to preserve energy and natural resources. The package materials are environmentally compatible and recyclable. All metal parts can be recycled. The plastic parts can either be recycled or burned under controlled circumstances, according to local regulations. Most recyclable parts are marked with recycling marks.</p> <p>If recycling is not feasible, all parts excluding electrolytic capacitors and printed circuit boards can be landfilled. The DC capacitors contain electrolyte and, if the drive is not provided with the RoHS marking, the printed circuit boards contain lead, both of which are classified as hazardous waste within the EU. They must be removed and handled according to local regulations.</p> <p>For further information on environmental aspects and more detailed recycling instructions, please contact your local ABB representative.</p>

## Applicable standards

Drive compliance with standards is identified by the standard “marks” on the type designation label. The following standards are applicable to the drive:

Applicable standards	
<b>EN 50178:1997</b>	Electronic equipment for use in power installations.
<b>IEC/EN 60204-1:2005</b>	Safety of machinery. Electrical equipment of machines. Part 1: General requirements. <i>Provisions for compliance:</i> The final assembler of the machine is responsible for installing: <ul style="list-style-type: none"> <li>• an emergency-stop device</li> <li>• a supply disconnecting device.</li> </ul>
<b>IEC/EN 60529:1989 + A1:1999 +A2:2013</b>	Degrees of protection provided by enclosures (IP code)
<b>IEC 60664-1:2002</b>	Insulation coordination for equipment within low-voltage systems. Part 1: Principles, requirements and tests
<b>IEC/EN 61000-3-12:2011</b>	EMC standard limiting harmonic currents produced by equipment connected to public low-voltage systems
<b>IEC/EN 61800-5-1:2007</b>	Adjustable speed electrical power drive systems. Part 5-1: Safety requirements. Electrical, thermal and energy
<b>IEC/EN 61800-3:2004 +A1:2012</b>	Adjustable speed electrical power drive systems. Part 3: EMC requirements and specific test methods
<b>UL 508C</b>	UL Standard for Safety, Power Conversion Equipment, third edition

## Markings

### CE marking



A CE mark is attached to the drive to verify that the drive follows the provisions of the European Low Voltage, EMC and RoHS Directives.

### *Compliance with the European Low Voltage Directive*

The compliance with the European Low Voltage Directive has been verified according to standards IEC/EN 60204-1:2005 and EN 50178:1997.

### *Compliance with the European EMC Directive*

The EMC Directive defines the requirements for immunity and emissions of electrical equipment used within the European Union. The EMC product standard IEC/EN 61800-3:2004 +A1:2012 covers requirements stated for drives.

### *Compliance with IEC/EN 61800-3:2004 +A1:2012*

See page [445](#).

## **C-Tick marking**



The ACH550 carries C-Tick marking. C-Tick marking is required in Australia and New Zealand.

A C-Tick mark is attached to the drive to verify compliance with the relevant standard (IEC 61800-3:2004 – Adjustable speed electrical power drive systems – Part 3: EMC product standard including specific test methods), mandated by the Trans-Tasman Electromagnetic Compatibility Scheme.

The Trans-Tasman Electromagnetic Compatibility Scheme (EMCS) was introduced by the Australian Communication Authority (ACA) and the Radio Spectrum Management Group (RSM) of the New Zealand Ministry of Economic Development (NZMED) in November 2001. The aim of the scheme is to protect the radio frequency spectrum by introducing technical limits for emission from electrical/electronic products.

### *Compliance with IEC/EN 61800-3:2004*

See page [445](#).

## **UL marking**



The ACH550 is suitable for use on a circuit capable of delivering not more than 100,000 rms symmetrical amperes, 600 V maximum. The ACH550 has an electronic motor protection feature that complies with the requirements of UL 508C. When this feature is selected and properly adjusted, additional overload protection is not required unless more than one motor is connected to the drive or unless

additional protection is required by applicable safety regulations. See parameters 3005 (MOT THERM PROT) and 3006 (MOT THERM TIME).

The drives are to be used in a controlled environment. See section [Ambient conditions](#) on page 440 for specific limits.

**Note:** For open type enclosures, i.e. drives without the conduit box and/or cover for IP21 / UL Type 1 drives, or without the conduit plate and/or top cover for IP54 / UL Type 12 drives, the drive must be mounted inside an enclosure in accordance with National Electric Code and local electrical codes.

## EAC marking



The drive has EAC certification. EAC marking is required in Russia, Belarus and Kazakhstan.

## IEC/EN 61800-3:2004 Definitions

EMC stands for **E**lectromagnetic **C**ompatibility. It is the ability of electrical/electronic equipment to operate without problems within an electromagnetic environment. Likewise, the equipment must not disturb or interfere with any other product or system within its locality.

*First environment* includes establishments connected to a low-voltage network which supplies buildings used for domestic purposes.

*Second environment* includes establishments connected to a network not directly supplying domestic premises.

*Drive of category C1:* drive of rated voltage less than 1000 V, intended for use in the first environment.

*Drive of category C2:* drive of rated voltage less than 1000 V and intended to be installed and commissioned only by a professional when used in the first environment.

**Note:** A professional is a person or organisation having necessary skills in installing and/or commissioning power drive systems, including their EMC aspects.

Category C2 has the same EMC emission limits as the earlier class first environment restricted distribution. EMC standard IEC/EN 61800-3 does not any more restrict the distribution of the drive, but the using, installation and commissioning are defined.



*Drive of category C3:* drive of rated voltage less than 1000 V, intended for use in the second environment and not intended for use in the first environment.

Category C3 has the same EMC emission limits as the earlier class second environment unrestricted distribution.

## **Compliance with the IEC/EN 61800-3:2004 +A1:2012**

The immunity performance of the drive complies with the demands of IEC/EN 61800-3, category C2 (see page [444](#) for IEC/EN 61800-3 definitions). The emission limits of IEC/EN 61800-3 comply with the provisions described below.

### **First environment (drives of category C2)**

1. The internal EMC filter is connected.
2. The motor and control cables are selected as specified in this manual.
3. The drive is installed according to the instructions given in this manual.
4. The motor cable length does not exceed the allowed maximum length specified in section [Motor cable length](#) on page [411](#) for the frame size and switching frequency in use.

**WARNING!** In a domestic environment, this product may cause radio interference, in which case supplementary mitigation measures may be required.

### **Second environment (drives of category C3)**

1. The internal EMC filter is connected.
2. The motor and control cables are selected as specified in this manual.
3. The drive is installed according to the instructions given in this manual.
4. The motor cable length does not exceed the allowed maximum length specified in section [Motor cable length](#) on page [411](#) for the frame size and switching frequency in use.

**WARNING!** A drive of category C3 is not intended to be used on a low-voltage public network which supplies domestic premises. Radio frequency interference is expected if the drive is used on such a network.

**Note:** It is not allowed to install a drive with the internal EMC filter connected on IT (ungrounded) systems. The supply network becomes connected to ground (earth) potential through the EMC filter capacitors which may cause danger or damage the drive.

**Note:** It is not allowed to install a drive with the internal EMC filter connected to a corner-grounded TN system as this would damage the drive.

## Index

### A

#### ABB

document library	471
feedback on ABB Drives manuals	471
product and service inquiries	471
product training	471
acceleration	
/deceleration, parameter group	228
at aux. stop (PFA), parameter	325
compensation, parameter	234
ramp select, parameter	159, 228
ramp shape, parameter	229
ramp time (PFA), parameter	325
ramp zero select, parameter	159, 230
time, parameter	228
activate (external PID), parameter	291
actual input (PID), parameters	161, 284
actual max. (PID), parameters	285
actual min. (PID), parameters	285
actual signals, parameter group	178
ai loss	
alarm codes	382
fault codes	372
air flow	
208...240 V drives	420
380...480 V drives	419
alarm	
codes	381
correcting	381
enable display, parameter	215
indication	371
words, data parameters	181
ambient conditions	440
analogue I/O	
connections	415
spec	415
analogue input	
connections	415
data parameter	173
fault limit, parameters	249
filter, parameters	199
less than min. auto. reset, parameter	252
less than min., fault parameter	244
loss, alarm codes	382
loss, fault codes	372
maximum, parameters	199

minimum, parameters . . . . .	199
parameter group . . . . .	199
ref. correction formula . . . . .	191
analogue output	
connections . . . . .	415
content max., parameters . . . . .	156, 207
content min., parameters . . . . .	156, 207
current max., parameters . . . . .	157, 207
current min., parameters . . . . .	156, 207
data content, parameters . . . . .	156, 206
data parameter . . . . .	174
filter, parameters . . . . .	157, 207
obtaining 0...10 V from AO . . . . .	125
parameter group . . . . .	206
application block output, data parameter . . . . .	173
application macro, parameter . . . . .	168
applications (macros) . . . . .	93
booster pump . . . . .	106
condenser . . . . .	104
cooling tower fan . . . . .	102
dual setpoint PID . . . . .	116
dual setpoint PID with constant speeds . . . . .	118
e-bypass . . . . .	120
floating point . . . . .	114
hand control . . . . .	122
HVAC default . . . . .	96
internal timer . . . . .	110
internal timer with constant speeds . . . . .	112
powered roof ventilator . . . . .	112
pump alternation . . . . .	108
return fan . . . . .	100
supply fan . . . . .	98
arrow . . . . .	72
assistants . . . . .	76
auto control	
see AUTO mode	
AUTO mode . . . . .	72, 73
autochange	
alarm code . . . . .	384
interval, parameter . . . . .	313
level, parameter . . . . .	314
overview . . . . .	314
starting order counter . . . . .	316
timed, parameter . . . . .	326
automatic reset	
see reset, automatic	
autoreset, alarm code . . . . .	383
auxiliary motor	
see motor, auxiliary	

**B**

backup . . . . .	81
BACnet . . . . .	140
parameters . . . . .	146
see also EFB (embedded fieldbus)	
battery	
replacement . . . . .	393
replacement interval . . . . .	386
baud rate (RS-232), parameter . . . . .	296
BMS, Building Management System . . . . .	93
boost . . . . .	136
select, parameter . . . . .	268
time, parameter . . . . .	268
booster pump application macro . . . . .	106
break point frequency, fault parameter . . . . .	247
breakers, circuit . . . . .	404
buffer overruns (count), parameter . . . . .	297
bus termination . . . . .	418

**C**

cable	
checking motor cable insulation . . . . .	46
motor . . . . .	46
supply cable insulation . . . . .	46
cable terminals . . . . .	408
cable, control panel (operator keypad) . . . . .	34
cables	
control . . . . .	32, 55, 59
input power (mains) . . . . .	47, 50, 56, 401, 406
motor . . . . .	28, 47, 56, 411
cabling instructions . . . . .	28, 47, 50
capacitors	
maintenance intervals . . . . .	386
reforming . . . . .	392
replacement . . . . .	392
category	
C1 . . . . .	444
C2 . . . . .	444
C3 . . . . .	445
CB	
see control board	
CE marking . . . . .	442
changed parameters mode . . . . .	80
circuit breakers . . . . .	404
ABB S200 B/C miniature (MCB) . . . . .	403, 404
ABB Tmax moulded case (MCCB) . . . . .	403, 405
clock . . . . .	88, 127

comm	
fault function, parameter . . . . .	159, 249
fault time, parameter . . . . .	159, 249
protocol select, parameter . . . . .	144, 150, 327
relay output word, data parameter . . . . .	175
values, data parameter . . . . .	175
compatibility	
manual	
with control panel (operator keypad) . . . . .	67
with drive firmware . . . . .	7
motor . . . . .	21
condenser application macro . . . . .	104
config file	
CPI firmware revision, parameter . . . . .	151, 294
fault code . . . . .	375
id revision, parameter . . . . .	151, 294
revision, parameter . . . . .	151, 294
connections	
communications . . . . .	418
control . . . . .	414
analogue I/O . . . . .	415
digital inputs . . . . .	415
relay outputs . . . . .	415
input power (mains) . . . . .	409
motor . . . . .	410
constant speed	
see speed, constant	
contact information . . . . .	472
control	
connections . . . . .	414
location . . . . .	72, 73
location, data parameter . . . . .	173
control board	
overtemperature, fault code . . . . .	376
overtemperature, fault parameter . . . . .	250
temperature, data parameter . . . . .	176
control panel (operator keypad) . . . . .	67
comm error, fault parameter . . . . .	244
dimensions . . . . .	423
display decimal point (format), parameters . . . . .	258
display max., parameters . . . . .	259
display min., parameters . . . . .	259
display process variables, parameter group . . . . .	257
display selection, parameters . . . . .	257
display units, parameters . . . . .	259
modes . . . . .	71
mounting . . . . .	423
parameter lock, parameter . . . . .	209
pass code, parameter . . . . .	210
reference control, parameter . . . . .	187

signal max., parameters . . . . .	258
signal min., parameters . . . . .	258
cooling . . . . .	418
fan maintenance trigger, parameter . . . . .	242
fan run time (counter), parameter . . . . .	242
fan run time trigger, parameter . . . . .	242
cooling tower fan application macro . . . . .	102
corner-grounded TN system	
EMC filter . . . . .	45
warning about EMC filters . . . . .	9
correction source (PID), parameter . . . . .	292
counter	
cooling fan run time, parameter . . . . .	242
drive power consumption, parameter . . . . .	243
drive run time, parameter . . . . .	242
motor revolutions, parameter . . . . .	242
CRC errors (count), parameter . . . . .	297
critical speeds (avoiding)	
high, parameters . . . . .	236
low, parameters . . . . .	236
parameter group . . . . .	236
select, parameter . . . . .	236
C-Tick marking . . . . .	443
current	
at fault, history parameter . . . . .	182
data parameter . . . . .	172
max. limit, parameter . . . . .	221
measurement, fault code . . . . .	374
<b>D</b>	
DC	
brake time, parameter . . . . .	226
bus voltage, data parameter . . . . .	172
current braking selection, parameter . . . . .	226
current ref., parameter . . . . .	226
magnetising time, parameter . . . . .	226
overvoltage, fault code . . . . .	372
stabilizer, parameter . . . . .	241
undervoltage, fault code . . . . .	372
deceleration	
at aux. start (PFA), parameter . . . . .	326
emergency time, parameter . . . . .	229
parameter group . . . . .	228
ramp select, parameter . . . . .	159, 228
ramp shape, parameter . . . . .	229
ramp time (PFA), parameter . . . . .	326
ramp zero select, parameter . . . . .	159, 230
time, parameter . . . . .	228
default factory settings . . . . .	71

degree of protection (IP code) . . . . .	22
derating . . . . .	399, 400
derivation time (PID), parameter . . . . .	279
derivation time, parameter . . . . .	233
device overtemperature	
alarm code . . . . .	383
fault code . . . . .	372
diagnostics . . . . .	369
displays . . . . .	370
digital input	
at fault, history parameters . . . . .	182
connections . . . . .	415
specifications . . . . .	416
status, data parameter . . . . .	173
dimensional drawings . . . . .	420
frame size R1 (IP21 / UL Type 1) . . . . .	433
frame size R1 (IP54 / UL Type 12) . . . . .	426
frame size R2 (IP21 / UL Type 1) . . . . .	434
frame size R2 (IP54 / UL Type 12) . . . . .	427
frame size R3 (IP21 / UL Type 1) . . . . .	435
frame size R3 (IP54 / UL Type 12) . . . . .	428
frame size R4 (IP21 / UL Type 1) . . . . .	436
frame size R4 (IP54 / UL Type 12) . . . . .	429
frame size R5 (IP21 / UL Type 1) . . . . .	437
frame size R5 (IP54 / UL Type 12) . . . . .	430
frame size R6 (IP21 / UL Type 1) . . . . .	438
frame size R6 (IP21/UL Type 1) . . . . .	439
frame size R6 (IP54 / UL Type 12) . . . . .	431
frame size R6 (IP54) . . . . .	432
dimensions . . . . .	420
control panel (operator keypad) . . . . .	423
mounting . . . . .	421
direction	
control, parameter . . . . .	153, 186
lock, alarm code . . . . .	382
display	
alarms, parameter . . . . .	215
see also panel display	
document library . . . . .	471
downloading parameters . . . . .	81
drive	
id, fault code . . . . .	375
insulation . . . . .	46
maintenance trigger, parameter . . . . .	242, 243
on time, data parameters . . . . .	175
operating . . . . .	73
parameter backup mode . . . . .	81
power consumption (counter), parameter . . . . .	243
power consumption trigger, parameter . . . . .	243



rating, parameter . . . . .	256
run time (counter), parameter . . . . .	242
run time trigger, parameter . . . . .	242
starting . . . . .	73
status information . . . . .	72
stopping . . . . .	73
temperature, data parameter . . . . .	172
dual setpoint PID application macro . . . . .	116
dual setpoint PID with constant speeds appl. macro . . . . .	118

## E

earth fault	
earth fault level parameter . . . . .	250
fault code . . . . .	374
parameter . . . . .	249
e-bypass application macro . . . . .	120
EFB (embedded fieldbus) . . . . .	140, 142
additional delay (Modbus only), parameter . . . . .	146
BACnet specific communication parameters . . . . .	146
baud rate, parameter . . . . .	145, 298
communication parameters . . . . .	144
config file, fault code . . . . .	375
connection . . . . .	142
control . . . . .	141
control profile, parameter . . . . .	145, 298
CRC errors (count), parameter . . . . .	145, 299
drive control parameters . . . . .	153
fault codes . . . . .	162, 375
OK messages (count), parameter . . . . .	145, 298
parameters . . . . .	146, 299, 300
parity, parameter . . . . .	145, 298
protocol id, parameter . . . . .	144, 298
protocol select, parameter . . . . .	144, 327
protocol selection . . . . .	144
protocol, parameter group . . . . .	298
protocols . . . . .	140
RS485 network termination . . . . .	142
serial communication assistant . . . . .	143
setting up communication . . . . .	142
station id, parameter . . . . .	144, 298
status, parameter . . . . .	146, 299
UART errors (count), parameter . . . . .	145, 299
efficiency . . . . .	418
ELV (Extra Low Voltage) . . . . .	55, 60
embedded fieldbus	
see EFB	
EMC	
considerations . . . . .	26

filter	
disconnecting the EMC filter	45
warning for corner-grounded TN systems	9, 43
warning for IT systems	9, 43, 44
warning for RCD systems	9, 43, 44
limits for motor cable length	412
product standard (IEC/EN 61800-3) compliance	445
emergency	
deceleration time, parameter	229
stop select, parameter	227
stop, alarm code	384
enclosure (IP code)	22
energy saved	
in local currency, saved amount 1 parameter	177
in local currency, saved amount 2 parameter	177
saved CO2 parameter	177
saved kWh parameter	176
saved MWh parameter	176
energy saving, parameter group	293
environment	22
error value inversion (PID), parameter	279
external	
commands selection, parameters	153, 184
control selection, parameter	154, 188
fault	
automatic reset, parameter	252
fault codes	374
parameters	245
power supply	417
reference, data parameter	172
<b>F</b>	
fan	
fan control parameter	216
internal enclosure, replacement	391
main, replacement	387
replacement intervals	386
fault	
codes	371
correcting	371
current at, history parameter	182
digital input status at, history parameter	182
frequency at, history parameter	182
functions, parameter group	244
history	381
history, parameter group	182
indication	370
last, history parameter	182
logger mode	92

previous, history parameter . . . . .	183
reset select, parameter . . . . .	157, 210
reset with parameter . . . . .	216
resetting . . . . .	380
speed at, history parameter . . . . .	182
status at, history parameter . . . . .	182
time of, history parameters . . . . .	182
torque at, history parameter . . . . .	182
voltage at, history parameter . . . . .	182
words, data parameters . . . . .	180
fault display	
fault names . . . . .	371
FBA (fieldbus adapter) . . . . .	140, 147
communication parameters . . . . .	150
config file CPI firmware revision, parameter . . . . .	151, 294
config file id revision, parameter . . . . .	151, 294
config file revision, parameter . . . . .	151, 294
control . . . . .	141
drive control parameters . . . . .	153
fault codes . . . . .	162
fieldbus CPI firmware revision, parameter . . . . .	151, 295
fieldbus module's appl. program rev., parameter . . . . .	152, 295
fieldbus parameter refresh, parameter . . . . .	151, 294
fieldbus parameters . . . . .	151, 294
fieldbus status, parameter . . . . .	151, 295
fieldbus type, parameter . . . . .	150, 294
protocol select, parameter . . . . .	150, 327
protocol selection . . . . .	150
serial communication assistant . . . . .	149
setting up communication . . . . .	149
feedback	
multiplier (PID), parameter . . . . .	283
on ABB Drives manuals . . . . .	471
select (PID), parameter . . . . .	160, 283
fieldbus	
command words, data parameters . . . . .	178
control . . . . .	141
embedded fieldbus (EFB) comm protocol, par. group . . . . .	298
external comm module (FBA), par group . . . . .	293, 294, 301
fault codes . . . . .	162
protocol select, parameter . . . . .	327
status words, data parameters . . . . .	179
see also EFB (embedded fieldbus)	
see also FBA (fieldbus adapter)	
firmware	
test date parameter . . . . .	256
version of the drive's firmware, parameter . . . . .	256
first environment . . . . .	444
first power-up	
AUTO mode (remote control) . . . . .	73

language selection . . . . .	76
Start-up assistant . . . . .	68
first start, alarm code. . . . .	385
flange mounting. . . . .	37
FlashDrop	
application macro, parameter . . . . .	168
connection . . . . .	43
parameter view, parameter. . . . .	216
floating point application macro. . . . .	114
flux braking, parameter . . . . .	238
flux optimization enable, parameter . . . . .	238
force trip, fault code. . . . .	375
frame errors (count), parameter . . . . .	296
frame size . . . . .	17
frequency	
at fault, history parameter. . . . .	182
max. limit, parameter . . . . .	222
min. limit, parameter . . . . .	222
switching, parameter . . . . .	240
fuses, input power (mains) . . . . .	401
208...240 V drives. . . . .	403
380...480 V drives. . . . .	402

## G

gain (PID), parameter . . . . .	277
---------------------------------	-----

## H

hand control	
see HAND mode	
hand control application macro . . . . .	122
HAND mode . . . . .	72, 73
hardware description. . . . .	415
harmonics . . . . .	401
heatsink	
maintenance . . . . .	387
maintenance interval . . . . .	386
HVAC default application macro . . . . .	96

## I

I/O settings mode . . . . .	91
id run	
alarm code . . . . .	384
fail, fault code . . . . .	373
parameter . . . . .	170
identification	
drive . . . . .	14
motor . . . . .	19

incompatible sw, fault code . . . . .	376
information, parameter group . . . . .	256
input phase loss, alarm code . . . . .	385
installation . . . . .	37
checklist . . . . .	61
preparing for . . . . .	13
checklist . . . . .	36
see also mounting	
Insulation	
Checking insulation of assembly . . . . .	46
integration time (PID), parameter . . . . .	278
integration time, parameter . . . . .	232
interlock function . . . . .	305
interlocks, parameter . . . . .	317
internal setpoint (PID), parameter . . . . .	282
internal timer application macro . . . . .	110
internal timer with constant speeds application macro . . . . .	112
IO communication, alarm code . . . . .	382
IP code . . . . .	22
IR compensation	
frequency, parameter . . . . .	239
parameters . . . . .	239
voltage, parameter . . . . .	239
IT system	
EMC filter . . . . .	45
warning about EMC filters . . . . .	9
<b>K</b>	
keypad	
reference select, parameter . . . . .	187
see also control panel	
kWh	
counter, data parameter . . . . .	173
<b>L</b>	
labels . . . . .	14, 15
language, parameter . . . . .	168
LED . . . . .	67, 370
green . . . . .	371
red . . . . .	370, 380
library, document . . . . .	471
lifting the drive . . . . .	12
limits, parameter group . . . . .	221
load analyzer, parameter group . . . . .	301
load curve	
see user load curve	
load frequency	

see user load curve	
load torque	
see user load curve	
loading package version, data parameter . . . . .	256
local control	
see HAND mode	
local control (HAND mode) lock, parameter . . . . .	158, 212
low frequency (PFA), parameters . . . . .	308

## M

macros . . . . .	93
booster pump . . . . .	106
condenser . . . . .	104
cooling tower fan . . . . .	102
dual setpoint PID . . . . .	116
dual setpoint PID with constant speeds . . . . .	118
e-bypass . . . . .	120
floating point . . . . .	114
hand control . . . . .	122
HVAC default . . . . .	96
internal timer . . . . .	110
internal timer with constant speeds . . . . .	112
powered roof ventilator . . . . .	112
pump alternation . . . . .	108
return fan . . . . .	100
supply fan . . . . .	98
maintenance . . . . .	369
battery . . . . .	393
capacitors . . . . .	392
heatsink . . . . .	387
internal enclosure fan . . . . .	391
intervals . . . . .	386
main fan . . . . .	387
triggers, parameter group . . . . .	242
manual compatibility	
with control panel (operator keypad) . . . . .	67
with drive firmware . . . . .	7
manual motor starter . . . . .	404
manuals	
list . . . . .	2
providing feedback . . . . .	471
materials . . . . .	441
maximum	
frequency, parameter . . . . .	222
torque limit, parameters . . . . .	224
torque select, parameter . . . . .	223
MCB (miniature circuit breaker) . . . . .	403, 404
MCCB (moulded case circuit breaker) . . . . .	403, 404, 405
minimum	

frequency, parameter . . . . .	222
torque limit, parameters . . . . .	223
torque select, parameter . . . . .	223
mode (control panel operation) . . . . .	71
assistants . . . . .	76
changed parameters . . . . .	80
drive parameter backup . . . . .	81
fault logger . . . . .	92
I/O settings . . . . .	91
output (standard display) . . . . .	72
parameters . . . . .	74
time and date . . . . .	88
mode (drive control location)	
AUTO . . . . .	72, 73
HAND . . . . .	72, 73
motor	
aux. start delay (PFA), parameter . . . . .	309
aux. stop delay (PFA), parameter . . . . .	309
checking the insulation . . . . .	46
compatibility . . . . .	21
control mode, parameter . . . . .	169
cos phi (power factor) parameter . . . . .	171
id run, parameter . . . . .	170
identification . . . . .	19
load curve break point frequency . . . . .	247
load curve max., fault parameter . . . . .	247
load curve zero speed load . . . . .	247
maintenance trigger, parameter . . . . .	242
nominal current, parameter . . . . .	169
nominal frequency, parameter . . . . .	169
nominal power, parameter . . . . .	170
nominal speed, parameter . . . . .	169
nominal voltage, parameter . . . . .	169
number of aux., parameter . . . . .	310
overtemperature, alarm code . . . . .	383
overtemperature, fault code . . . . .	373
phase, fault code . . . . .	376
revolution (counter), parameter . . . . .	242
revolution counter, data parameter . . . . .	175
revolution trigger, parameter . . . . .	242
stall, alarm code . . . . .	383
stall, fault code . . . . .	373
starter, manual . . . . .	404
temperature alarm limit, parameter . . . . .	264
temperature fault limit, parameter . . . . .	264
temperature measurement, parameter group . . . . .	261
temperature sensor selection, parameter . . . . .	264
temperature sensor type, parameter . . . . .	263
temperature thermal stress, data parameter . . . . .	176
temperature, data parameter . . . . .	176

thermal protection . . . . .	413
thermal protection, fault parameter . . . . .	245
thermal time, fault parameter . . . . .	246
motor control	
IR compensation, parameters . . . . .	239
parameter group . . . . .	238
motors	
(PFA) parameter . . . . .	326
several . . . . .	398, 412
mounting control panel (operator keypad) . . . . .	423
IP54 panel mounting kit . . . . .	423
IP66 panel extension cable kit . . . . .	424
mounting drive . . . . .	37
dimensions . . . . .	421
in a cooling air duct . . . . .	37
IP21 . . . . .	42
IP54 . . . . .	41
location, preparing . . . . .	38
screws . . . . .	422
suitable location . . . . .	23
template . . . . .	11, 38
multimotor systems . . . . .	225, 240, 398, 412
MWh	
counter, data parameter . . . . .	175
drive power consumption (counter), parameter . . . . .	243
drive power consumption trigger, parameter . . . . .	243
<b>N</b>	
noise smoothing, parameter . . . . .	241
NPN . . . . .	417
<b>O</b>	
off button, alarm code . . . . .	384
offset (PID), parameter . . . . .	291
OK messages (count), parameter . . . . .	296
operating data, parameter group . . . . .	172
operating drive . . . . .	73
operator keypad . . . . .	67
see control panel	
OPEX	
link, fault code . . . . .	374
power, fault code . . . . .	374
options, parameter group . . . . .	327
output frequency, data parameter . . . . .	172
output mode . . . . .	72
output voltage, data parameter . . . . .	172
output wiring, fault code . . . . .	376
overcurrent	



alarm code . . . . .	381
automatic reset, parameter . . . . .	251
fault code . . . . .	371
overload curve	
see user load curve	
overmodulation	
parameter . . . . .	241
override	
alarm code . . . . .	384
direction, parameter . . . . .	220
enable, parameter . . . . .	219
frequency, parameter . . . . .	219
mode. . . . .	218
parameter group . . . . .	217
parameter set . . . . .	82, 168
pass code, parameter . . . . .	219
reference, parameter . . . . .	220
selection, parameter . . . . .	219
speed, parameter . . . . .	219
overspeed, fault code . . . . .	375
overvoltage	
alarm code . . . . .	381
automatic reset, parameter . . . . .	251
 <b>P</b>	
package. . . . .	11
panel	
display variables, parameter group . . . . .	257
see also control panel	
panel loss	
alarm code . . . . .	383
fault code . . . . .	373
parameter	
analogue input scale, fault code . . . . .	377
analogue output scale, fault code . . . . .	377
change lock . . . . .	209
external relay output, fault code . . . . .	378
fieldbus miss, fault code . . . . .	378
groups. . . . .	165
hz rpm, fault code . . . . .	377
override, fault code . . . . .	378
PCU 1 (power control unit), fault code . . . . .	378
PCU 2 (power control unit), fault code . . . . .	377
PFA and override, fault code . . . . .	378
PFA IO, fault code . . . . .	379
PFA mode, fault code . . . . .	378
PFA ref. neg., fault code. . . . .	377
save changes, parameter . . . . .	158, 213
sets . . . . .	81

table version, parameter . . . . .	256
user load curve, fault code . . . . .	379
view, parameter . . . . .	216
parameters	
complete list . . . . .	328
list and descriptions . . . . .	165
mode. . . . .	74
parity (RS-232), parameter . . . . .	296
parity errors (count), parameter . . . . .	296
PE	
earth fault, parameter . . . . .	249
see cables, input power	
see cable terminals	
PELV (Protective Extra Low Voltage) . . . . .	417
PFA	
acceleration time, parameter . . . . .	325
aux. motor start delay, parameter. . . . .	309
aux. motor stop delay, parameter. . . . .	309
aux. start order, parameter . . . . .	326
control, parameter group . . . . .	305
deceleration time, parameter . . . . .	326
enable, parameter . . . . .	325
interlock, alarm code . . . . .	384
low frequency, parameters . . . . .	308
motors, parameter . . . . .	326
number of aux. motors, parameter . . . . .	310
reference step, parameters . . . . .	306
start delay, parameter. . . . .	324
start frequency, parameters . . . . .	307
PID	
0% (actual signal), parameter. . . . .	280
100% (actual signal), parameter. . . . .	280
actual input select, parameters. . . . .	161, 284
actual value max., parameters . . . . .	285
actual value min., parameters . . . . .	285
adjustment procedure. . . . .	277
comm value 1, data parameter. . . . .	176
controllers, overview. . . . .	274
correction source, parameter . . . . .	292
decimal point (actual signal), parameter. . . . .	280
derivation filter, parameter . . . . .	279
derivation time, parameter . . . . .	279
deviation, data parameter. . . . .	174
error feedback inversion, parameter. . . . .	279
external source activate, parameter . . . . .	291
external/trimming, parameter group . . . . .	291
feedback multiplier, parameter . . . . .	283
feedback select, parameter . . . . .	160, 283
feedback, data parameters. . . . .	174
gain, parameter . . . . .	277

integration time, parameter . . . . .	278
internal setpoint, parameter . . . . .	282
offset, parameter . . . . .	291
output, data parameters . . . . .	174
parameter set select, parameter . . . . .	289
process sets, parameter groups . . . . .	277, 290
scaling (0%...100%), parameters . . . . .	280
setpoint maximum, parameter . . . . .	282
setpoint minimum, parameter . . . . .	282
setpoint select, parameter . . . . .	160, 281
setpoint, data parameters . . . . .	174
sleep delay, parameter . . . . .	288
sleep level, parameter . . . . .	287
sleep selection, parameter . . . . .	286
sleep, alarm code . . . . .	384
trim mode, parameter . . . . .	292
trim scale, parameter . . . . .	292
units (actual signal), parameter . . . . .	280
wake-up delay, parameter . . . . .	288
wake-up deviation, parameter . . . . .	288
PNP . . . . .	417
power	
data parameter . . . . .	172
drive consumption (counter), parameter . . . . .	243
drive MWh consumption trigger, parameter . . . . .	243
supply, external . . . . .	417
powered roof ventilator application macro . . . . .	112
previous faults, history parameters . . . . .	183
process PID sets, parameter groups . . . . .	277, 290
process variables, data parameters . . . . .	175
product	
inquiries . . . . .	471
training . . . . .	471
proportional gain, parameter . . . . .	231
protection, degree of (IP code) . . . . .	22
PT100 temperature sensor . . . . .	263
PTC temperature sensor . . . . .	263
pump alternation application macro . . . . .	108
<b>R</b>	
ramp pair (accel/decel), parameter . . . . .	159, 228
ratings . . . . .	395
ratings, IEC	
208...240 V drives . . . . .	397
380...480 V drives . . . . .	396
RCD system	
EMC filter . . . . .	45
warning about EMC filters . . . . .	9

real-time clock . . . . .	88, 127
reference	
analogue input corrections . . . . .	191
corrections for parameter values . . . . .	191
keypad control, parameter . . . . .	187
maximum, parameters . . . . .	192
minimum, parameters . . . . .	191
select source, parameters . . . . .	154, 189
select, parameter group . . . . .	187
reference step (PFA), parameters . . . . .	306
reforming capacitors . . . . .	392
regulator by-pass control, parameter . . . . .	323
relay output	
activation condition parameters . . . . .	155, 201
connections . . . . .	415
off-delay, parameters . . . . .	204
on-delay, parameters . . . . .	204
parameter group . . . . .	201
status, data parameters . . . . .	174
remote control	
see AUTO mode	
replacement	
battery . . . . .	393
capacitors . . . . .	392
internal enclosure fan . . . . .	391
intervals . . . . .	386
main fan . . . . .	387
reset, automatic	
analogue input less than min., parameter . . . . .	252
delay time, parameter . . . . .	251
external fault, parameter . . . . .	252
number of trials, parameter . . . . .	251
overcurrent, parameter . . . . .	251
overvoltage, parameter . . . . .	251
parameter group . . . . .	251
trial time, parameter . . . . .	251
undervoltage, parameter . . . . .	252
resonance (avoiding)	
select, parameter . . . . .	236
restore the default factory setting . . . . .	71
return fan application macro . . . . .	100
revolution, motor	
(counter), parameter . . . . .	242
counter, data parameter . . . . .	175
trigger, parameter . . . . .	242
RS-232	
baud rate, parameter . . . . .	296
panel, parameter group . . . . .	296
parity, parameter . . . . .	296

station id, parameter . . . . .	296
RS-232 counts	
buffer overruns, parameter . . . . .	297
CRC errors, parameter . . . . .	297
frame errors, parameter . . . . .	296
OK messages, parameter . . . . .	296
parity errors, parameter . . . . .	296
RS485 . . . . .	418
termination for EFB. . . . .	142
run enable	
source select, parameter . . . . .	157, 209
run time	
cooling fan (counter), parameter . . . . .	242
cooling fan trigger, parameter . . . . .	242
drive (counter), parameter . . . . .	242
drive trigger, parameter . . . . .	242
run time, data parameter . . . . .	173, 175
 <b>S</b>	
S200 B/C circuit breaker . . . . .	403, 404
safety instructions . . . . .	7, 8
saving energy	
parameter group . . . . .	293
scalar control mode . . . . .	169
screws, mounting . . . . .	422
s-curve ramp, parameter . . . . .	229
second environment . . . . .	444
sensor	
three-wire sensor/transmitter . . . . .	124
two-wire sensor/transmitter . . . . .	124
sensor type, parameter . . . . .	263
sensorless vector control mode . . . . .	169
serial 1 error, fault code . . . . .	375
serial communication . . . . .	139
assistant . . . . .	140, 143, 149
serial number . . . . .	16
service . . . . .	471
setpoint maximum (PID), parameter . . . . .	282
setpoint minimum (PID), parameter . . . . .	282
setpoint select (PID), parameter . . . . .	160, 281
sets . . . . .	81
short circuit, fault code . . . . .	372
sleep selection (PID), parameter . . . . .	286
slip compensation ratio, parameter . . . . .	240
speed	
at fault, history parameter . . . . .	182
data parameter . . . . .	172

max. limit, parameter . . . . .	221
min. limit, parameter . . . . .	221
signed, data parameter . . . . .	172
speed control	
acceleration compensation, parameter . . . . .	234
automatic tuning, parameter . . . . .	235
derivation time, parameter . . . . .	233
integration time, parameter . . . . .	232
parameter group . . . . .	231
proportional gain, parameter . . . . .	231
speed, constant	
digital input selection parameter . . . . .	194
parameter . . . . .	197
parameter group . . . . .	194
timer-activated mode selection, parameter . . . . .	198
stall	
frequency, fault parameter . . . . .	249
function, fault parameter . . . . .	248
region . . . . .	248
time, fault parameter . . . . .	249
standard display mode	
see output mode	
standards . . . . .	442
start	
aux order (PFA), parameter . . . . .	326
aux. motor (PFA), parameters . . . . .	307
aux. motor delay (PFA), parameter . . . . .	309
day, parameters . . . . .	267
DC magnetising time, parameter . . . . .	226
delay (PFA), parameter . . . . .	324
delay, alarm code . . . . .	385
delay, parameter . . . . .	227
frequency (PFA), parameters . . . . .	307
function, parameter . . . . .	225
inhibit, parameter . . . . .	227
parameter group . . . . .	225
time, parameters . . . . .	266
torque boost current, parameter . . . . .	227
start enable	
missing, alarm codes . . . . .	384
source select, parameters . . . . .	158, 213
start mode	
automatic . . . . .	225
automatic torque boost . . . . .	225
DC magnetising . . . . .	225
flying start . . . . .	225
start/stop, parameter group . . . . .	225
start/stop/dir, parameter group . . . . .	184
starting drive . . . . .	73

starting order counter . . . . .	316
start-up . . . . .	68
assistant . . . . .	76
by changing the parameters individually . . . . .	70
by using the start-up assistant . . . . .	68
start-up data, parameter group . . . . .	168
station id (RS-232), parameter . . . . .	296
status at fault, history parameter . . . . .	182
status information of drive . . . . .	72
stop	
aux. motor (PFA), parameters . . . . .	308
aux. motor delay (PFA), parameter . . . . .	309
day, parameters . . . . .	267
DC brake time, parameter . . . . .	226
DC current braking selection, parameter . . . . .	226
DC current ref., parameter . . . . .	226
emergency select, parameter . . . . .	227
emergency, alarm code . . . . .	384
flux braking, parameter . . . . .	238
function, parameter . . . . .	226
parameter group . . . . .	225
time, parameters . . . . .	267
stopping drive . . . . .	73
supervision	
parameter group . . . . .	253
parameter high limit, parameters . . . . .	254
parameter low limit, parameters . . . . .	254
parameter selection, parameters . . . . .	253
supply fan application macro . . . . .	98
supply phase, fault code . . . . .	374
switching frequency control, parameter . . . . .	240
switching frequency, parameter . . . . .	240
Symmetrically grounded TN system	
EMC filter . . . . .	45
system controls, parameter group . . . . .	209

## T

tasks	
see assistants	
technical data . . . . .	395
template	
control panel (operator keypad) mounting, IP54 . . . . .	423
control panel (operator keypad) mounting, IP66 . . . . .	424, 425
drive mounting . . . . .	11, 38
terminal layout	
R1...R4 . . . . .	43
R5...R6 . . . . .	44
terminals	

cable . . . . .	408
I/O . . . . .	415
input power . . . . .	408
motor connection . . . . .	408
test date, parameter . . . . .	256
thermal fail, fault code . . . . .	374
Three . . . . .	124
three-wire sensor, connection example . . . . .	124
tightening torque	
control terminals . . . . .	414
earthing PE terminals . . . . .	408
power terminals . . . . .	408
time and date mode . . . . .	88
time period	
start day, parameters . . . . .	267
start time, parameters . . . . .	266
stop day, parameters . . . . .	267
stop time, parameters . . . . .	267
timed	
autochange, parameter . . . . .	326
timed functions . . . . .	127
boost select, parameter . . . . .	268
boost time, parameter . . . . .	268
parameter group . . . . .	265
start day, parameters . . . . .	267
start time, parameters . . . . .	266
stop day, parameters . . . . .	267
stop time, parameters . . . . .	267
timer source, parameters . . . . .	269
timers enable, parameter . . . . .	266
timer . . . . .	128
enable, parameter . . . . .	266
example . . . . .	135
source, parameters . . . . .	269
Tmax circuit breaker . . . . .	403, 404, 405
TN system	
EMC filter . . . . .	45
warning about EMC filters . . . . .	9
top cover . . . . .	444
torque	
at fault, history parameter . . . . .	182
boost current, parameter . . . . .	227
data parameter . . . . .	172
max. limit select, parameter . . . . .	223
max. limit, parameters . . . . .	224
min. limit select, parameter . . . . .	223
min. limit, parameters . . . . .	223



tightening	
control terminals . . . . .	414
earthing PE terminals . . . . .	408
power terminals . . . . .	408
trim mode (PID), parameter . . . . .	292
trim scale (PID), parameter . . . . .	292
Two . . . . .	124
two-wire sensor, connection example . . . . .	124
type designation . . . . .	16

## U

U/f ratio, parameter . . . . .	239
UL marking . . . . .	443
underload curve	
see user load curve	
undervoltage	
alarm code . . . . .	382
automatic reset, parameter . . . . .	252
control enable, parameter . . . . .	222
units (PID), parameter . . . . .	280
unknown drive type, fault . . . . .	379
uploading parameters . . . . .	81
user load curve	
parameter group . . . . .	270
alarm code . . . . .	385
fault code . . . . .	376
frequency, parameters . . . . .	271
function, parameter . . . . .	270
mode, parameter . . . . .	270
time, parameter . . . . .	270
torque, parameters . . . . .	271
user parameter set	
change control, parameter . . . . .	211

## V

voltage	
at fault, history parameter . . . . .	182
voltage/frequency ratio, parameter . . . . .	239

## W

wake-up delay (PID), parameter . . . . .	288
wake-up deviation (PID), parameter . . . . .	288
weights . . . . .	420, 422
wiring . . . . .	26
control . . . . .	55, 59
fault, parameter . . . . .	250
power . . . . .	47, 56

power, units with main switch . . . . . 50  
terminals . . . . . 43, 44

**XYZ**

zero speed load, fault parameter . . . . . 247

## **Further information**

### **Product and service inquiries**

Address any inquiries about the product to your local ABB representative, quoting the type designation and serial number of the unit in question. A listing of ABB sales, support and service contacts can be found by navigating to [www.abb.com/searchchannels](http://www.abb.com/searchchannels).

### **Product training**

For information on ABB product training, navigate to [www.abb.com/drives](http://www.abb.com/drives) and select *Training courses*.

### **Providing feedback on ABB Drives manuals**

Your comments on our manuals are welcome. Go to [www.abb.com/drives](http://www.abb.com/drives) and select *Document Library – Manuals feedback form (LV AC drives)*.

### **Document library on the Internet**

You can find manuals and other product documents in PDF format on the Internet. Go to [www.abb.com/drives](http://www.abb.com/drives) and select *Document Library*. You can browse the library or enter selection criteria, for example a document code, in the search field.

# Contact us

[www.abb.com/drives](http://www.abb.com/drives)

[www.abb.com/drivespartners](http://www.abb.com/drivespartners)

3AFE68258537 Rev G (EN) 2014-07-03

