



# AC30 series Variable Speed Drive

HA501718U002 Issue 8 Product Manual

aerospace  
climate control  
**electromechanical**  
filtration  
fluid & gas handling  
hydraulics  
pneumatics  
process control  
sealing & shielding



ENGINEERING YOUR SUCCESS.

**FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS DESCRIBED HEREIN OR RELATED ITEMS  
CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.**

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product or system options for further investigation by users having technical expertise.

The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalogue and in any other materials provided from Parker Hannifin Corporation or its subsidiaries or authorized distributors.

To the extent that Parker Hannifin Corporation or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the components or systems.


The above disclaimer is being specifically brought to the user's attention and is in addition to and not in substitution to the Exclusions and Limitations on Liability which are set out in the terms and conditions of sale.

# AC30 series User's Manual

Frames D, E, F, G, H, J, K including AC30P & AC30D

HA501718U002 Issue 8

Compatible with Firmware Version 1.13 for AC30V, and Versions 2.13 & 3.13 for AC30P / AC30D, onwards

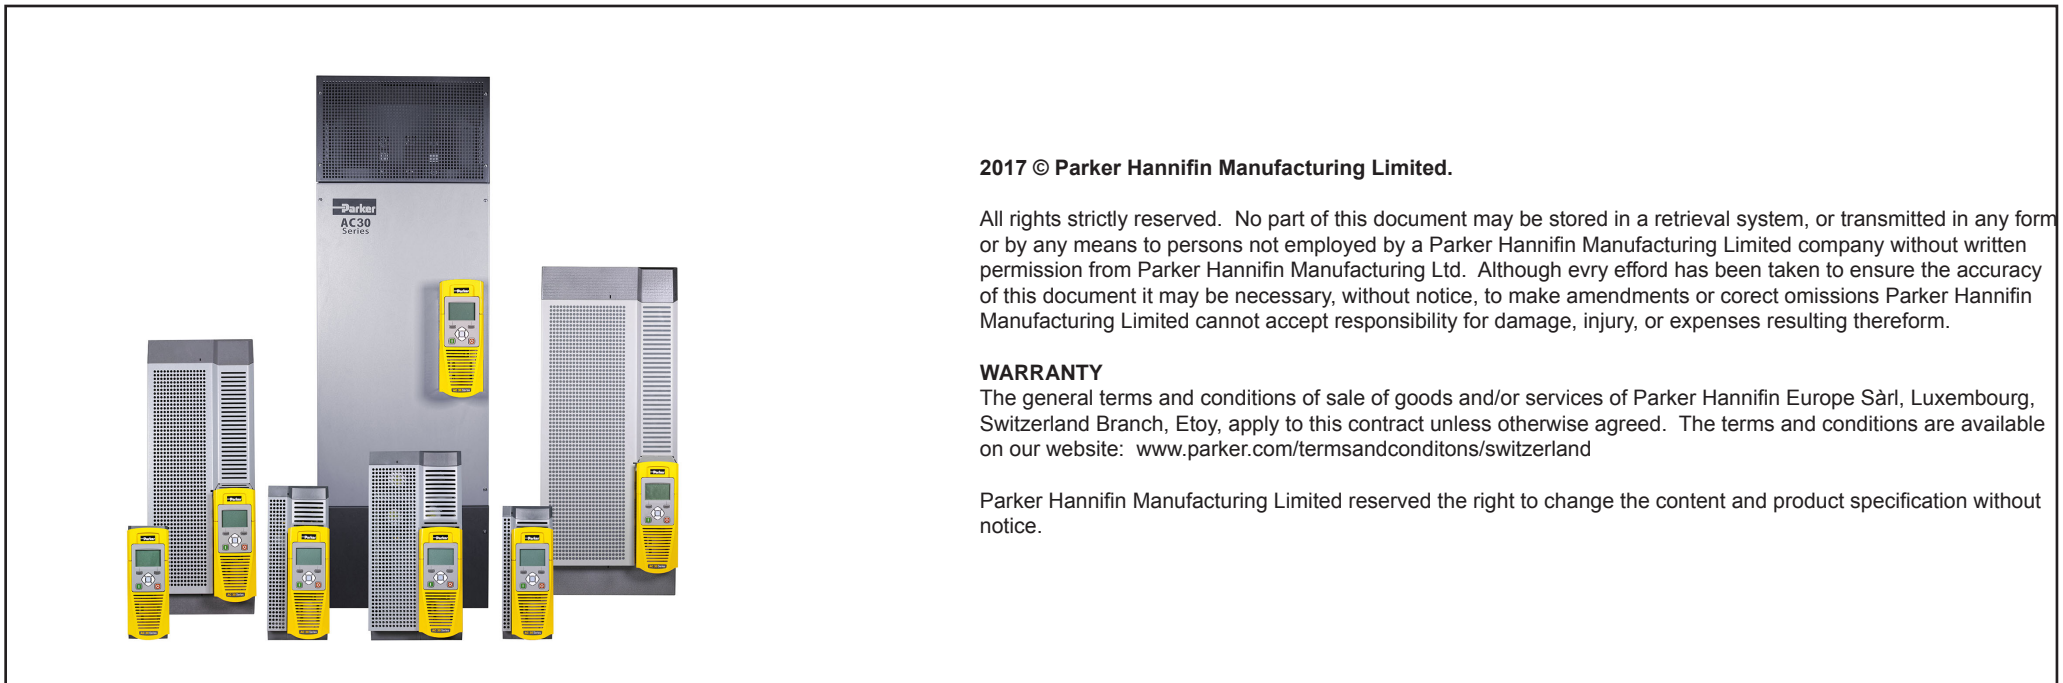

2017 © Parker Hannifin Manufacturing Limited.

All rights strictly reserved. No part of this document may be stored in a retrieval system, or transmitted in any form or by any means to persons not employed by a Parker Hannifin Manufacturing Limited company without written permission from Parker Hannifin Manufacturing Ltd. Although every effort has been taken to ensure the accuracy of this document it may be necessary, without notice, to make amendments or correct omissions. Parker Hannifin Manufacturing Limited cannot accept responsibility for damage, injury, or expenses resulting therefrom.

#### WARRANTY

The general terms and conditions of sale of goods and/or services of Parker Hannifin Europe Sàrl, Luxembourg, Switzerland Branch, Etoy, apply to this contract unless otherwise agreed. The terms and conditions are available on our website: [www.parker.com/termsandconditions/switzerland](http://www.parker.com/termsandconditions/switzerland)

Parker Hannifin Manufacturing Limited reserves the right to change the content and product specification without notice.

# Contents 1

Contents .....	Page No.
<b>Chapter 1: Safety .....</b>	<b>1-1</b>
<b>Chapter 2: Introduction .....</b>	<b>2-1</b>
About this Manual .....	2-1
Packaging and Lifting Details .....	2-3
<b>Chapter 3: Product Overview .....</b>	<b>3-1</b>
Product Range .....	3-1
Control Features .....	3-2
Functional Overview .....	3-3
<b>Chapter 4: Installation .....</b>	<b>4-1</b>
Cubicle Mount .....	4-1
Dimensions for Cubicle Mount Installation .....	4-1
Dimensions for Cubicle Mount Installation – Frame K .....	4-2
Mounting the Inverter .....	4-3
Ventilation .....	4-3
Cubicle Mounting Details .....	4-4
Through Panel Mount Frames D to J only .....	4-5
Dimensions for Through Panel Installation .....	4-5
Frames D, E .....	4-5
Frames F, G .....	4-6
Frame H .....	4-7
Frame J .....	4-8
Mounting the INVERTER .....	4-9
Ventilation .....	4-9
Through Panel Mounting Detail (frames D – J only) .....	4-10
Cover Removal Instructions – All Frames .....	4-10
Cabling Bracket for Control & Main Cable .....	4-13
Cabling Bracket for AC30D System Terminals .....	4-14
Electrical Installation .....	4-15
Wiring Instructions .....	4-15
AC fed power Wiring Connections .....	4-16
DC FED Power Wiring Connections (Frames D – J only) .....	4-17
Control Module Cover Removal .....	4-18
Control Module Removal .....	4-19
Control Module Terminal Cable Specification .....	4-20
AC30V Control Wiring Connections .....	4-21
AC30D-P Control Wiring Connections .....	4-22
System Board Control Wiring Connections – AC30D ONLY .....	4-23
.....	4-23
Wiring Diagrams .....	4-24

Contents .....	Page No.
The Default Application .....	4-24
Application Description .....	4-24
Application 0: Basic Speed Control .....	4-26
Application 1: Auto/Manual Control .....	4-28
Application 2: Raise / Lower Trim .....	4-30
Application 3: Presets Speeds .....	4-32
Application 4: PID Control .....	4-34
Application 5: Active Front-End .....	4-36
Terminal Block Wire Range .....	4-38
Terminal Tightening Torques .....	4-39
Optional Equipment .....	4-39
Brake Wiring .....	4-39
Fitting a Remote GKP .....	4-40
Getting Started .....	4-41
GKP Setup Wizard .....	4-41
Ethernet Communications .....	4-42
Firmware Update .....	4-45
Updating the inverter firmware .....	4-45
<b>Chapter 5: Associated Equipment .....</b>	<b>5-1</b>
Main Points .....	5-1
AC Motor Chokes .....	5-4
Dynamic Braking Resistors .....	5-5
Wiring Details .....	5-5
Dynamic Braking Resistors .....	5-6
Resistor Selection .....	5-6
Circuit Breakers .....	5-8
External EMC Filters .....	5-8
Input Chokes .....	5-9
Gasket Kits .....	5-9
Cabling Bracket for Control, System Option & Power Stack .....	5-9
Option Cards .....	5-10
SD Cards .....	5-10
Installation Details .....	5-11
<b>Chapter 6 Safe Torque Off SIL3/PLe .....</b>	<b>6-1</b>
General Information .....	6-1
STO Functional Description .....	6-2
Alignment to European Standards .....	6-3
EN ISO13849-1:2008 .....	6-3
EN61800-5-2:2007 and EN61508 .....	6-4
Safety Specification .....	6-5
EMC Specification .....	6-6

Contents .....	Page No.
<b>User Connections .....</b>	<b>6-7</b>
<b>STO Technical Specification .....</b>	<b>6-9</b>
Inputs Specification .....	6-9
Output Specification .....	6-10
Truth Table.....	6-11
<b>STO Input Timing Diagrams .....</b>	<b>6-12</b>
Ideal Operation .....	6-12
Typical Operation.....	6-13
Fault Operation.....	6-14
Pulsed Inputs.....	6-15
<b>STO State Transition Diagram.....</b>	<b>6-16</b>
<b>STO Trip Annunciation .....</b>	<b>6-17</b>
<b>Safety Warnings and Limitations.....</b>	<b>6-18</b>
Example User Wiring .....	6-20
Applications that do not require STO function.....	6-20
Minimum STO Implementation.....	6-21
STO Implementation with Safety Control Unit.....	6-22
SS1 Implementation using Safety Control Unit.....	6-24
<b>STO Function Checking.....</b>	<b>6-26</b>
<b>Comprehensive Check.....</b>	<b>6-27</b>
The following test steps must be performed:.....	6-28
Regular Check.....	6-32
<b>Troubleshooting .....</b>	<b>6-33</b>
<b>Chapter 7: The Graphical Keypad .....</b>	<b>7-1</b>
Overview.....	7-2
Keypad.....	7-3
The Display.....	7-4
Inverter Status Summary.....	7-4
Soft key action indication.....	7-5
LEDS .....	7-6
The Menu System .....	7-7
Navigating the Menu System .....	7-7
Changing a Parameter Value.....	7-7
Trips and other information displays .....	7-8
Setting the display language.....	7-8
Setting the display language to Custom.....	7-8
<b>Chapter 8: Menu Organisation.....</b>	<b>8-1</b>
Menu Map .....	8-1
Menu Map Summary .....	8-1
Menu Descriptions .....	8-2
Control Screen .....	8-2

Contents .....	Page No.
Setup.....	8-2
Monitor.....	8-2
Favourites.....	8-2
Parameters .....	8-2
<b>Parameter Map.....</b>	<b>8-3</b>
<b>Chapter 9: Setup Wizard.....</b>	<b>9-1</b>
GKP Setup Wizard .....	9-1
Set Up PMAC Motor Control - Sensorless .....	9-9
Set Up PMAC Motor Control – Encoder Feedback.....	9-10
Set Up PMAC Motor Control – Pos Alignment after Power-up..	9-12
Parker Drive Quicktool (PDQ) PC Software .....	9-13
Installation.....	9-13
Starting the Wizard .....	9-15
Task selection .....	9-16
Find drive.....	9-17
Select Macro.....	9-19
Setup I/O.....	9-20
Select motor .....	9-21
Setup the Drive Control.....	9-24
Setup Communications.....	9-25
Commission the Drive .....	9-26
Monitor the Drive .....	9-27
<b>Chapter 10: Trips &amp; Fault Finding.....</b>	<b>10-1</b>
Trips and Fault Finding.....	10-1
What Happens when a Trip Occurs.....	10-1
Resetting a Trip Condition .....	10-1
Using the Keypad to Manage Trips .....	10-2
Hexadecimal Representation of Trips.....	10-7
Runtime Alerts .....	10-9
Autotune Alerts.....	10-11
Other Alerts.....	10-13
Fault Finding .....	10-16
Black Box Feature .....	10-17
Black Box File Format .....	10-17
Diagnostic LEDs .....	10-19
<b>Chapter 11: Routine Maintenance &amp; Repair.....</b>	<b>11-1</b>
Routine Maintenance .....	11-1
Preventative Maintenance .....	11-1
Fan Cassette (Frames D – J only).....	11-1
DC Link Capacitors.....	11-2

# Contents 3

Contents .....	Page No.
Repair.....	11-2
Saving Your Application Data .....	11-2
Returning the Unit to Parker .....	11-2
<b>Chapter 12: Ethernet.....</b>	<b>12-1</b>
<b>Connecting to the Inverter.....</b>	<b>12-1</b>
Recommended Cable.....	12-1
AC30V.....	12-1
AC30P or AC30D .....	12-2
<b>Ethernet Setup .....</b>	<b>12-3</b>
Configuration.....	12-3
Advanced Configuration.....	12-3
Typical Wiring Configurations .....	12-6
Ethernet Parameter Summary.....	12-8
Troubleshooting the Ethernet .....	12-11
<b>Web (HTTP) Server .....</b>	<b>12-14</b>
Web Pages .....	12-14
Web Server Parameter Summary.....	12-16
Troubleshooting the Web Server .....	12-17
<b>Precision Time Protocol (PTP).....</b>	<b>12-18</b>
Configuration.....	12-18
Advanced Configuration.....	12-18
PTP Parameter Summary .....	12-21
<b>Peer to Peer.....</b>	<b>12-24</b>
Configuration.....	12-24
Peer to Peer Parameter Summary .....	12-25
<b>Chapter 13: Fire Mode .....</b>	<b>13-1</b>
<b>Configuration .....</b>	<b>13-2</b>
Functional Description .....	13-3
Trips and Auto Restart.....	13-4
<b>Appendix B: Sequencing Logic.....</b>	<b>B-1</b>
<b>Drive State Machine .....</b>	<b>B-1</b>
DS402 .....	B-1
Sequencing State .....	B-1
Sequencing Diagram.....	B-2
State Transitions .....	B-3
Control Word .....	B-5
Status Word .....	B-6
<b>Appendix C: Compliance .....</b>	<b>C-1</b>
Applicable Standards.....	C-1
<b>EUROPEAN COMPLIANCE .....</b>	<b>C-2</b>

Contents .....	Page No.
CE Marking .....	C-2
EMC Compliance.....	C-3
<b>EMC Standards Comparison .....</b>	<b>C-4</b>
Radiated.....	C-4
Conducted Emission .....	C-5
EMC Compliance (4kHz).....	C-6
<b>EMC Installation Guidance .....</b>	<b>C-11</b>
Protective Earth (PE) Connections.....	C-11
Mitigating Radiated Emissions .....	C-12
Cabling Requirements.....	C-14
<b>Harmonic Information – AC Supplied Inverters .....</b>	<b>C-30</b>
<b>Requirements for North American and Canadian Compliance .....</b>	<b>C-37</b>
North American Compliance.....	C-37
Canadian Compliance .....	C-38
North American and Canadian Compliance Information.....	C-38
<b>Environmental.....</b>	<b>C-44</b>
Restriction, Evaluation, Authorisation and Restriction of Chemicals (REACH) .....	C-44
Restriction of Hazardous Substances (RoHS) .....	C-44
Waste Electrical and Electronic Equipment (WEEE) .....	C-45
Declarations .....	C-46
<b>Appendix D: Parameter Reference .....</b>	<b>D-1</b>
<b>Parameter Descriptions .....</b>	<b>D-1</b>
Active Front End (AFE).....	D-2
App Info .....	D-14
Auto Restart .....	D-16
Autotune .....	D-21
BACnet IP Option.....	D-25
BACnet MSTP Option .....	D-26
Black Box .....	D-27
Braking .....	D-28
CANopen Option .....	D-30
Clone.....	D-31
Communications Options .....	D-35
Configure, (Phase Control) .....	D-36
Control Mode.....	D-39
ControlNet Option.....	D-41
Current Limit .....	D-42
Current Loop .....	D-43
Current Sensor Trip .....	D-44
Data Logger .....	D-45
DC Link Volts Limit.....	D-48
Device Commands.....	D-50

Contents .....	Page No.
Device State.....	D-51
DeviceNet Option .....	D-53
Drive info.....	D-54
Encoder.....	D-58
Encoder Slot 1 .....	D-60
Encoder Slot 2 .....	D-62
Energy Meter .....	D-63
EtherCAT Option .....	D-65
Ethernet.....	D-66
EtherNet IP Adapter .....	D-66
EtherNet IP Option .....	D-66
Feedbacks.....	D-67
Fieldbus Mapping.....	D-71
Filter On Torque Dmd .....	D-72
Flash File System.....	D-75
Fluxing VHz.....	D-76
Flycatching .....	D-82
General Purpose IO.....	D-84
Graphical Keypad.....	D-86
Induction Motor Data .....	D-89
Inj Braking.....	D-90
IO Configure .....	D-92
IO Option Common .....	D-96
IO Values.....	D-98
Local Control .....	D-101
Minimum Speed.....	D-102
Modbus .....	D-103
Modbus RTU Option.....	D-104
Modbus TCP Option.....	D-105
Motor Load.....	D-106
Motor Nameplate .....	D-109
Motor Sequencer.....	D-111
MRAS.....	D-112
Pattern Generator.....	D-114
Peer to Peer .....	D-116
PID.....	D-117
PMAC Flycatching.....	D-119
PMAC Motor Data.....	D-121
PMAC SVC .....	D-125
Pos Fbk Alignment.....	D-133
Power Loss Ride Thru .....	D-141
Precision Time Protocol (PTP).....	D-144
Preset Speeds .....	D-145
Profibus DP-V1 Option.....	D-147
PROFINET IO Option.....	D-148

Contents .....	Page No.
Raise Lower.....	D-149
Ramp.....	D-151
Real Time Clock .....	D-157
Resolver.....	D-158
Runtime Statistics.....	D-163
Scale Setpoint .....	D-165
SD Card.....	D-166
Sequencing .....	D-167
Setup Wizard .....	D-171
Skip Frequencies .....	D-172
Slew Rate.....	D-175
Slip Compensation .....	D-176
Soft Menus .....	D-177
Spd Direct Input .....	D-179
Spd Loop Diagnostics .....	D-180
Spd Loop Settings .....	D-181
Speed Error Trip.....	D-185
Speed Ref .....	D-186
Stabilisation .....	D-187
Stack Inv Time.....	D-188
Stall Trip .....	D-191
System Board IO .....	D-192
System Board Option .....	D-194
Torque Limit .....	D-195
Thermistor .....	D-198
Tr Adaptation .....	D-199
Trips History.....	D-200
Trips Status .....	D-201
VDC Ripple .....	D-206
Voltage Control .....	D-207
Web Server .....	D-208
<b>Parameter Table.....</b>	<b>D-209</b>
<b>Table of Parameters in Alphabetical Order.....</b>	<b>D-241</b>
<b>Power Dependent Parameter Defaults .....</b>	<b>D-249</b>
<b>Appendix E: E Plan Library .....</b>	<b>E-1</b>
<b>E Plan Library.....</b>	<b>E-1</b>
<b>Appendix F: Technical Specifications.....</b>	<b>F-1</b>
<b>Understanding the Product Code .....</b>	<b>F-1</b>
Model Number .....	F-1
Environmental Details .....	F-5
Earthing/Safety Details.....	F-6
Cooling Fans .....	F-6

# Contents 5

## Contents .....Page No.

AC FED Electrical Ratings (400V Build Variant).....	F-7
DC FED Electrical Ratings (400V Build Variant).....	F-14
<b>LINE Input Fuse Ratings (Europe)</b> .....	<b>F-20</b>
<b>DC Input Fuse Ratings (Europe)</b> .....	<b>F-21</b>
<b>LINE Input Fuse Ratings (North America and Canada)</b> .....	<b>F-22</b>
Internal Dynamic Brake Switch.....	F-23
Supply Short Circuit Rating .....	F-24
Analog Inputs/Outputs.....	F-25
Reference Outputs .....	F-25
Digital Inputs .....	F-26
Digital Outputs .....	F-26
User 24v Supply OUTPUT (X12/05).....	F-27
Auxiliary 24V Input– AC30V and Ac30P only.....	F-27
RelayS - AC30V ONLY.....	F-27
SYSTEM Auxiliary 24V Input – AC30D ONLY.....	F-28
DIGITAL INPUTs – AC30D ONLY .....	F-28
Encoder Power Supply Output – AC30D ONLY.....	F-29
Encoder Inputs – AC30D ONLY .....	F-30
Encoder Transmit Outputs – AC30D ONLY .....	F-31

## Contents ..... Page No.



# Chapter 1: Safety

## Safety Information

**IMPORTANT** Please read these important Safety notes before installing and operating this equipment

### CAUTION

CAUTION notes in the manual warn of danger to equipment.

### WARNING

NOTES IN THE MANUAL WARN OF DANGER TO PERSONEL

## Requirements

### Intended Users

This manual is to be made available to all persons who are required to install, configure or service equipment described herein, or any other associated operation.

The information given is intended to highlight safety issues, and to enable the user to obtain maximum benefit from the equipment. Complete the following table for future reference detailing how the unit is to be installed and used.

INSTALLATION DETAILS			
<b>Model Number</b> <i>(see product label)</i>		<b>Where installed</b> <i>(for your own information)</i>	
<b>Unit used as a:</b> <i>(refer to Certification)</i>	<input type="checkbox"/> Component <input type="checkbox"/> Relevant Apparatus	<b>Unit fitted:</b>	<input type="checkbox"/> Cubicle mounted <input type="checkbox"/> Through Panel Mounted

### Application Area

The equipment described is intended for industrial motor speed control utilising AC induction motors or AC permanent magnet synchronous machines.

# 1-2 Safety

## Personnel

Installation, operation and maintenance of the equipment should be carried out by competent personnel. A competent person is someone who is technically qualified and familiar with all safety information and established safety practices; with the installation process, operation and maintenance of this equipment; and with all the hazards involved.

 <b>DANGER</b> Risk of electric shock	 <b>WARNING</b> Hot surfaces	 <b>Caution</b> Refer to documentation	 <b>Earth/Ground</b> Protective Conductor Terminal
---	--	--	--

## Hazards

### **DANGER! - Ignoring the following may result in injury**

1. This equipment can endanger life by exposure to rotating machinery and high voltages.
2. The equipment must be permanently earthed due to the high earth leakage current, and the inverter motor must be connected to an appropriate safety earth.
3. Ensure all incoming supplies are isolated before working on the equipment. Be aware that there may be more than one supply connection to the inverter.
4. There may still be dangerous voltages present at power terminals (motor output, supply input phases, DC bus and the brake, where fitted) when the motor is at standstill or is stopped.
5. For measurements use only a meter to IEC 61010 (CAT III or higher). Always begin using the highest range. CAT I and CAT II meters must not be used on this product.
6. Allow at least 5 minutes for the inverter's capacitors to discharge to safe voltage levels (<50V). Use the specified meter capable of measuring up to 1000V dc & ac rms to confirm that less than 50V is present between all power terminals and between power terminals and earth.
7. Unless otherwise stated, this product must NOT be dismantled. In the event of a fault the inverter must be returned. Refer to "Routine Maintenance and Repair".

**WARNING! - Ignoring the following may result in injury or damage to equipment**

#### SAFETY

**Where there is conflict between EMC and Safety requirements, personnel safety shall always take precedence.**

- Never perform high voltage resistance checks on the wiring without first disconnecting the inverter from the circuit being tested.
- Whilst ensuring ventilation is sufficient, provide guarding and /or additional safety systems to prevent injury or damage to equipment.
- When replacing an inverter in an application and before returning to use, it is essential that all user defined parameters for the product's operation are correctly installed.
- All control and signal terminals are SELV, i.e. protected by double insulation. Ensure all external wiring is rated for the highest system voltage.
- Thermal sensors contained within the motor must have at least basic insulation.
- All exposed metalwork in the Inverter is protected by basic insulation and bonded to a safety earth.
- RCDs are not recommended for use with this product but, where their use is mandatory, only Type B RCDs should be used.

#### EMC

- In a domestic environment this product may cause radio interference in which case supplementary mitigation measures may be required.
- This equipment contains electrostatic discharge (ESD) sensitive parts. Observe static control precautions when handling, installing and servicing this product.
- This is a product of the restricted sales distribution class according to IEC 61800-3. It is designated as "professional equipment" as defined in EN61000-3-2. Permission of the supply authority shall be obtained before connection to the low voltage supply.

**WARNING! – Control Unit Removal / Fitting**

Isolate supply before plugging or unplugging control unit to the power stack.

## CAUTION!

### APPLICATION RISK

- The specifications, processes and circuitry described herein are for guidance only and may need to be adapted to the user's specific application. We can not guarantee the suitability of the equipment described in this Manual for individual applications.

### RISK ASSESSMENT

Under fault conditions, power loss or unintended operating conditions, the inverter may not operate as intended. In particular:

- Stored energy might not discharge to safe levels as quickly as suggested, and can still be present even though the inverter appears to be switched off
- The motor's direction of rotation might not be controlled
- The motor speed might not be controlled
- The motor might be energised

An inverter is a component within an inverter system that may influence its operation or effects under a fault condition. Consideration must be given to:

- Stored energy
- Supply disconnects
- Sequencing logic
- Unintended operation

## Chapter 2: Introduction

### About this Manual

**IMPORTANT** *Motors used must be suitable for Inverter duty.*

**NOTE** Do not attempt to control motors whose rated current is less than 25% of the inverter rated current. Poor motor control or Autotune problems may occur if you do.

This manual is intended for use by the installer, user and programmer of the AC30 series of inverters. It assumes a reasonable level of understanding in these three disciplines.

**NOTE** Please read all Safety information before proceeding with the installation and operation of this unit.

It is important that you pass this manual on to any new user of this unit.

#### How the Manual is Organised

This Engineering Reference manual is organised into chapters, indicated by the numbering on the edge of each page. If the manual is to be printed it is designed so that it should be printed double-sided using the short-edge for binding.

Information for all AC30 units is included (AC30V frames D, E, F, G, H, J & K, AC30P & AC30D), which are collectively referred to as “the Inverter” or “drive” throughout the manual.

Product coding: Any “x” within a product code indicates there are variants, see page F-1 Understanding the Product Code.

AC30P  
AC30D

Any text placed in a highlighted area as this sample shows, only refers to the AC30P and AC30D.

Parker Hannifin Manufacturing Limited is referred to as “Parker” throughout the manual.

The manual is more detailed than the relevant QuickStart manual, and so is of use to the unfamiliar as well as the high-end user.

#### Initial Steps

Use the manual to help you plan the following:

##### *Installation*

Know your requirements:

- certification requirements, CE/UL/CUL conformance
- conformance with local installation requirements
- supply and cabling requirements

## 2-2 Introduction

### Operation

Know your operator:

- how is it to be operated, local and/or remote?
- what level of user is going to operate the unit?
- decide on the best menu level for the Keypad (where supplied)

### *Programming (Parker Drive Quicktool) – pc programming tool*

Know your application:

- Install the Parker Drive Quicktool (PDQ) after downloading it from [www.parker.com/ssd/pdq](http://www.parker.com/ssd/pdq)
- Connect your pc to your Inverter via Ethernet
- Commission your Inverter with the Parker Drive Quicktool wizard
- Go to Appendix D Parameter Reference for more information

## PC Requirements

Minimum system requirements:

- 1GB RAM
- 1GHz Pentium
- 1GB free Hard Disk space
- 1024x768 screen resolution

Operating Systems:

- Windows XP
- Windows Vista (32 bit)
- Windows 7 (32 & 64 bit)
- Windows 8 (32 & 64 bit)

## Equipment Inspection

- ◆ Check for signs of transit damage
- ◆ Check the product code on the rating label conforms to your requirement.

If the unit is not being installed immediately, store the unit in a well-ventilated place away from high temperatures, humidity, dust, or metal particles.

Storage and Shipping Temperatures			
Storage Temperature :	-25°C to +55°C	Shipping Temperature :	-25°C to +70°C

## Packaging and Lifting Details

---

### Caution

The packaging is combustible. Igniting it may lead to the generation of lethal toxic fumes.

---

- ◆ Save the packaging in case of return. Improper packaging can result in transit damage.
- ◆ Use a safe and suitable lifting procedure when moving the unit. Never lift the unit by its terminal connections.
- ◆ Prepare a clear, flat surface to receive the inverter before attempting to move it. Do not damage any terminal connections when putting the unit down.

# Chapter 3: Product Overview

## Product Range

AC30V Frame D, E, F, G, H, J, K  
AC30P & AC30D

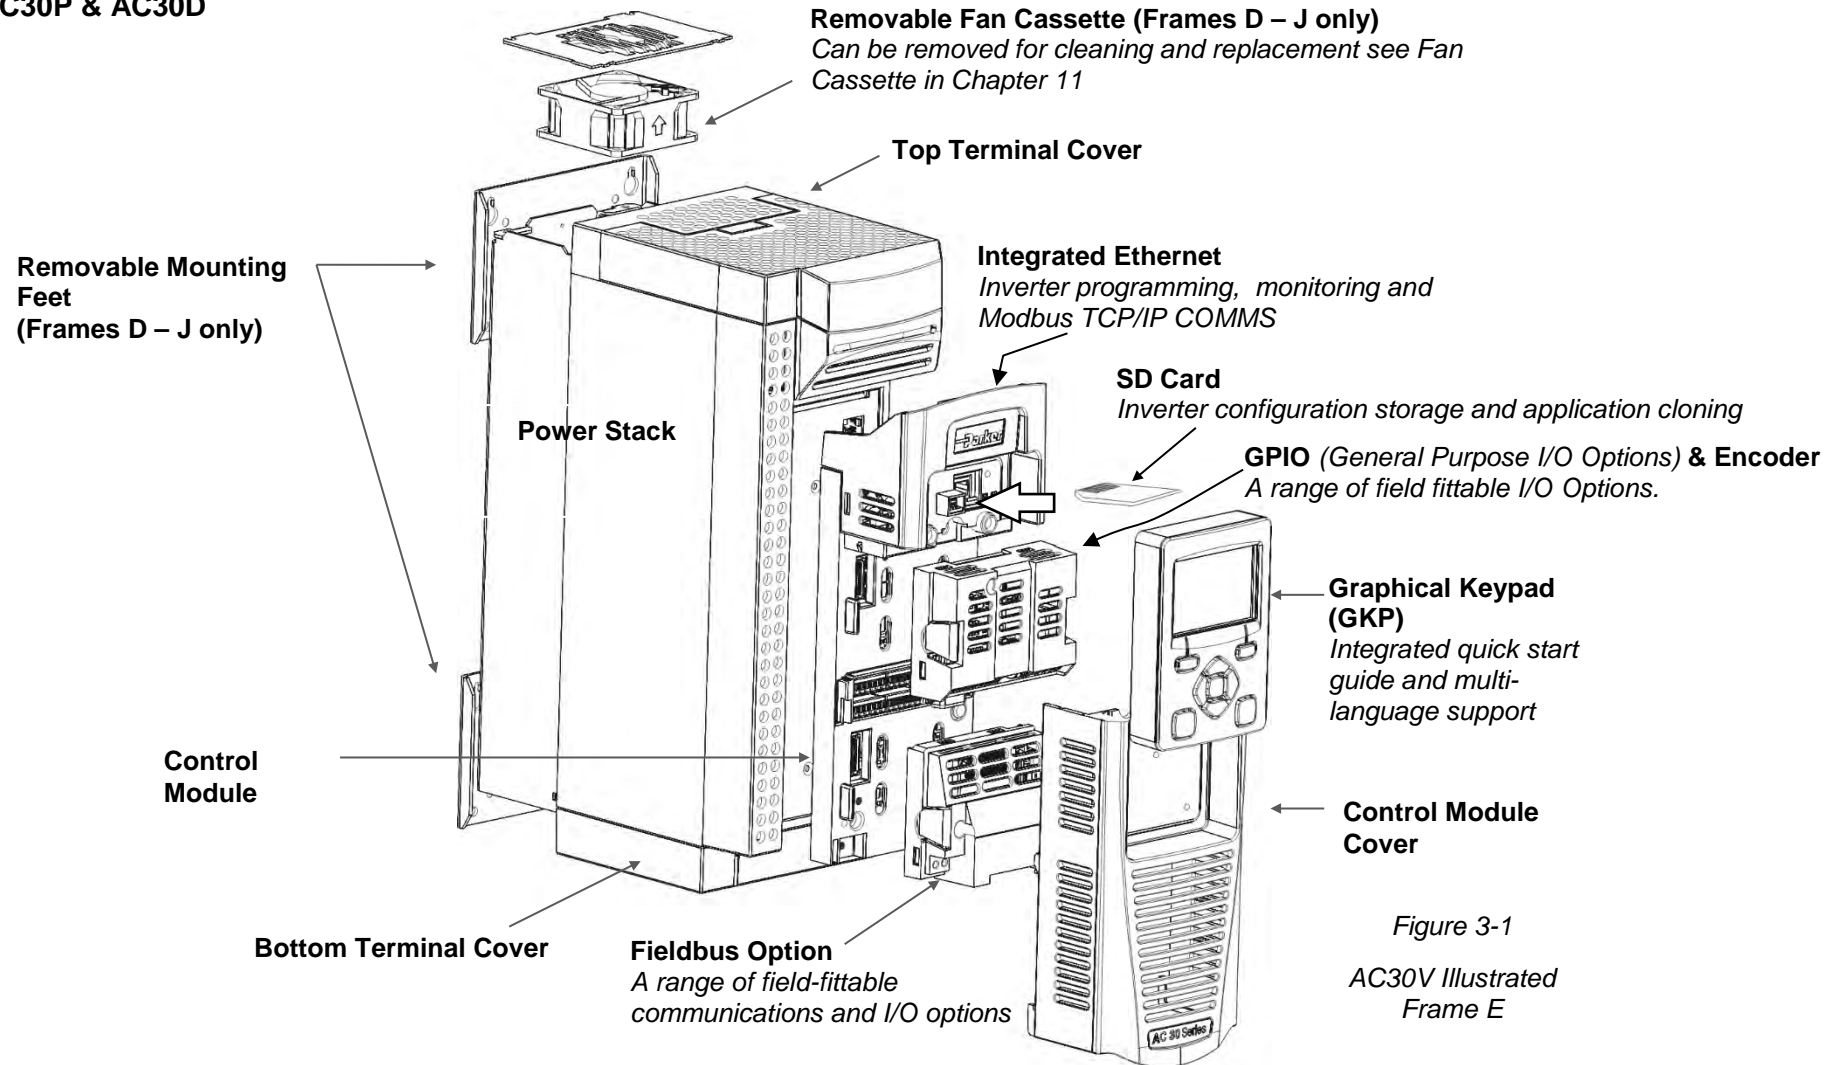


Figure 3-1  
AC30V Illustrated Frame E



## 3-2 Product Overview

### Control Features


The inverter is fully featured when controlled using the optional Keypad (or a suitable pc programming tool).

The 'General' control features below are not user-selectable when the unit is controlled using the analog and digital inputs and outputs.

<b>General</b>	Output Frequency	Limited to Switching Frequency divided by 8, with a maximum of 590Hz. e.g. for 4kHz switching frequency it is $4000/8 = 500\text{Hz}$ , for 16kHz switching frequency it is 590Hz. Refer to Parker SSD for higher output frequency. Derating of output current may apply, refer to Appendix F Technical Specifications.	
	Switching Frequency	Minimum 2kHz. Maximum 8kHz – 16kHz dependent on frame size and motor type (Induction or PMAC)	
	Voltage Boost for V/F control	0-25%	
	Motor Control Modes	Induction motor: VHz control, Sensorless Vector Control, or Closed Loop Vector Control (with encoder). Sensorless and Closed Loop Vector require autotune for IM. Induction motor : Closed Loop Vector Control (with Resolver) PMAC motor: Sensorless Vector Control PMAC motor: Sensorless Vector Control or Closed Loop Vector Control (with resolver and encoder (with power on constraints))	
	Skip Frequencies	Skip frequencies with adjustable skip band width	
	Preset Speeds	User selectable preset speeds	
	Stopping Modes	Ramp, Coast, DC Injection, Quickstop	
	S Ramp and Linear Ramp	Symmetric or asymmetric ramp up and down rates	
	Raise/Lower	Programmable MOP function	
	Jog	Programmable jog speed	
	Diagnostics	Full diagnostic and monitoring facilities	
	<b>Protection</b>	Trip Conditions	Output short line to line, and line to earth Overcurrent > 220% HD current Stall Heatsink overtemperature Motor Thermistor overtemperature (using optional GPIO) Overvoltage and undervoltage
		Current Limit	Adjustable 110% (Normal Duty) or 150% (Heavy Duty) 180% shock load limit (Heavy Duty) Inverse Time
		Dual Rating	Normal duty (110% overload for 60s) Heavy duty (150% overload for 60s)
<b>Inputs/ Outputs</b>	Analog Inputs	2 configurable inputs; voltage or current	
	Analog Outputs	2 configurable outputs; voltage or current	
	Digital Inputs	3 configurable 24V dc inputs	
	Digital I/O	4 configurable 24V dc open collector outputs/digital inputs	
	Relay Outputs	2 configurable relay output	


Table 3-1 Control Features

# Functional Overview

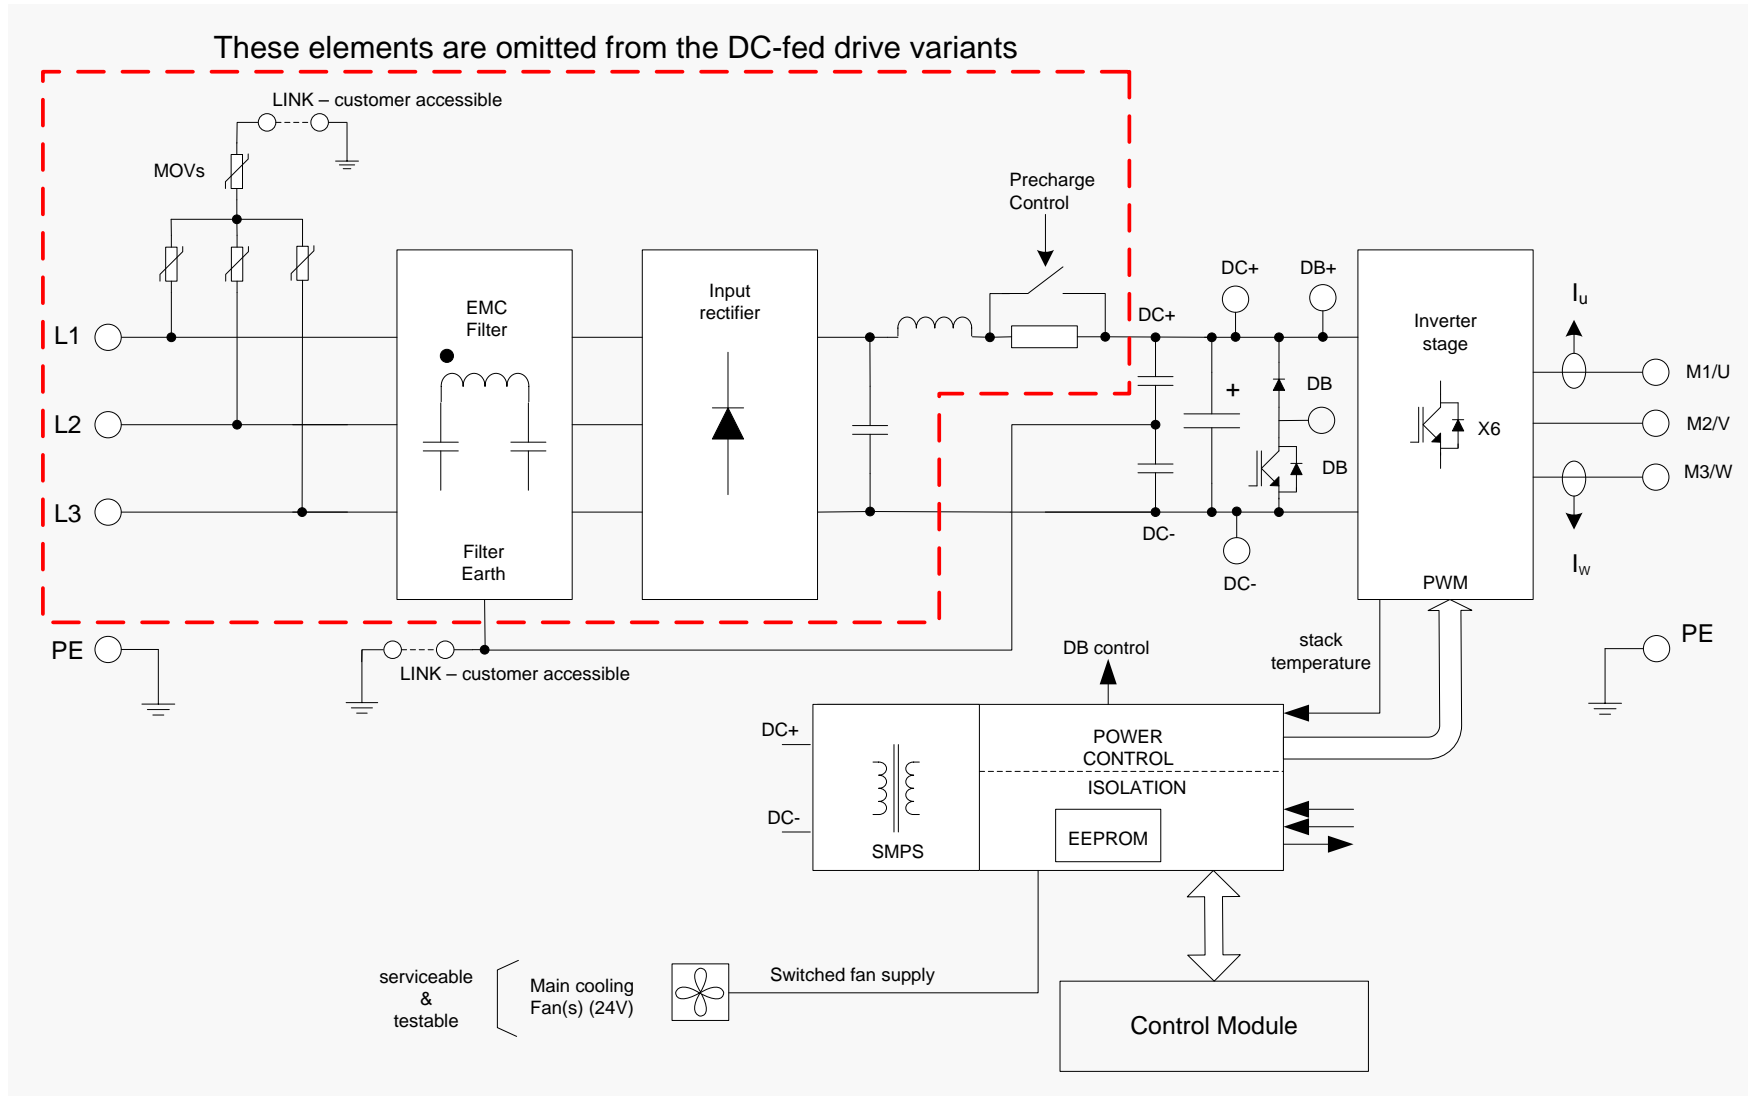


Block Diagram for Frames D, E, F

# 3-4 Product Overview

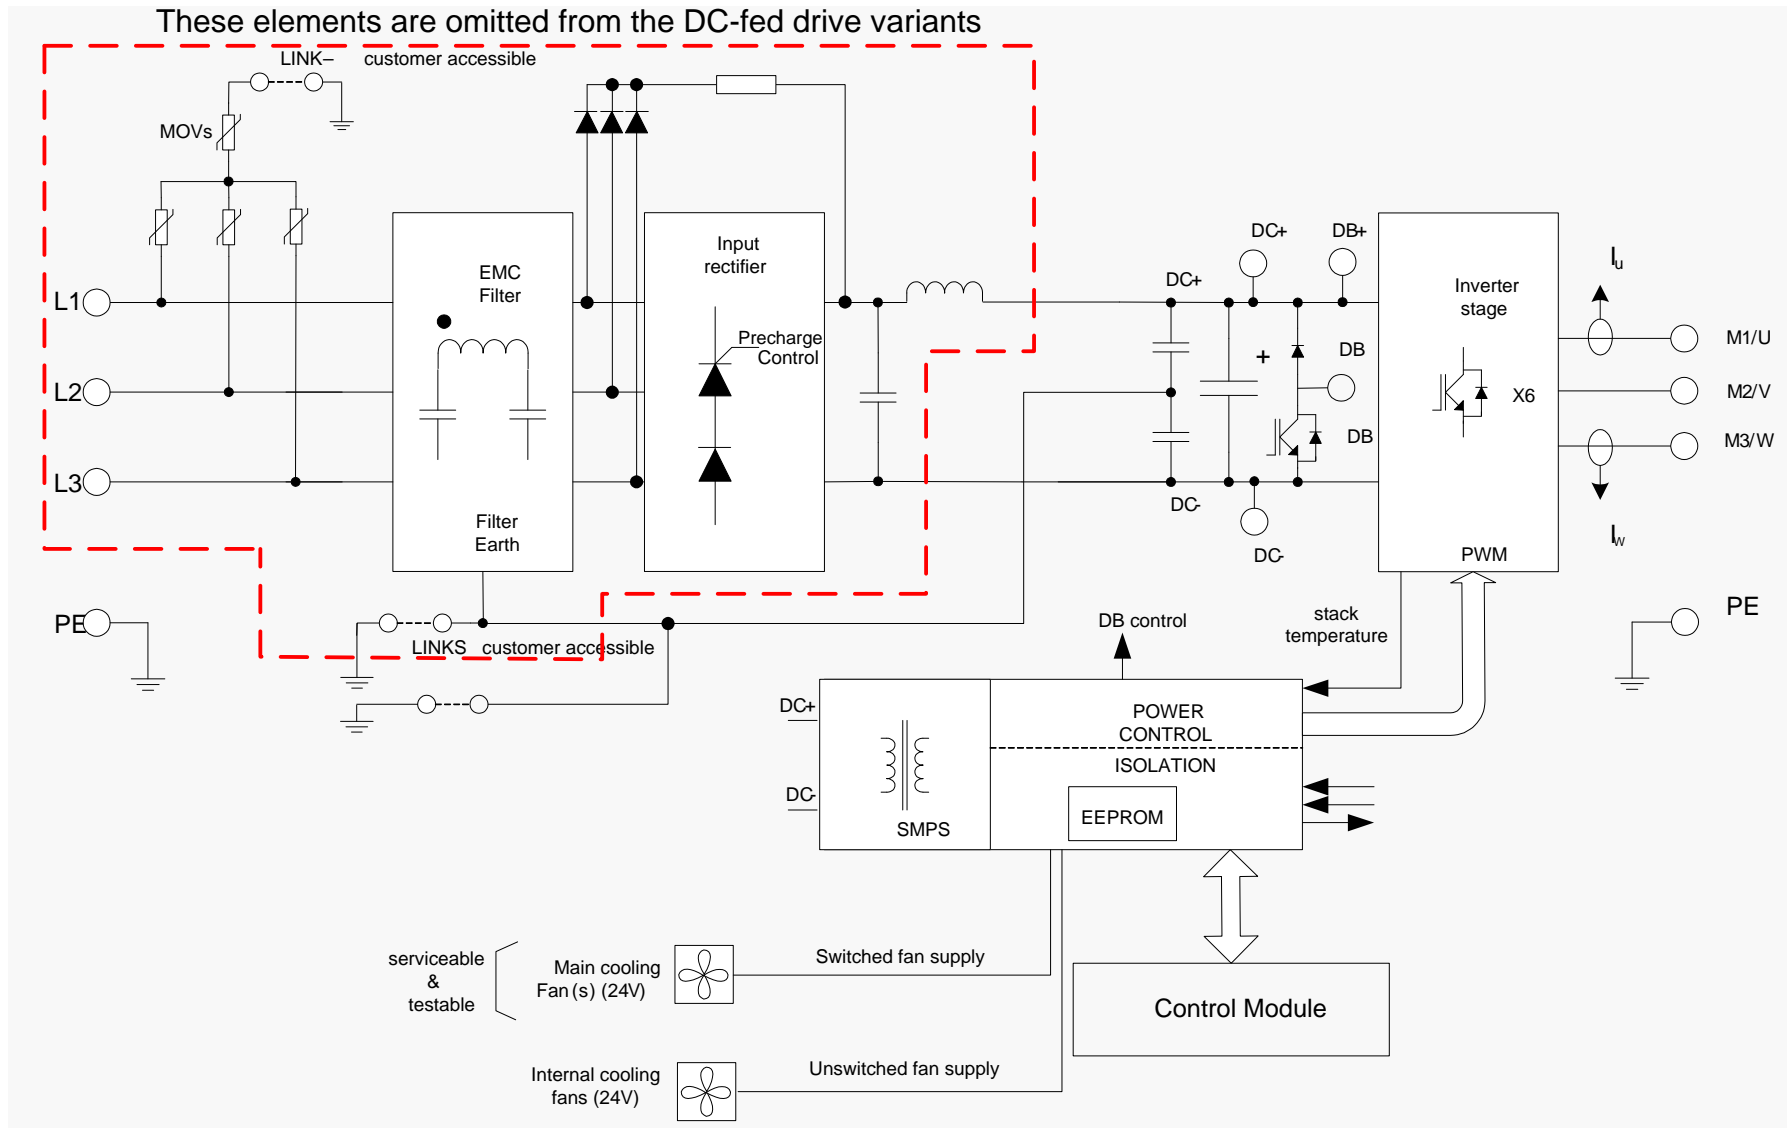

Block Diagram for Frames G, H, J

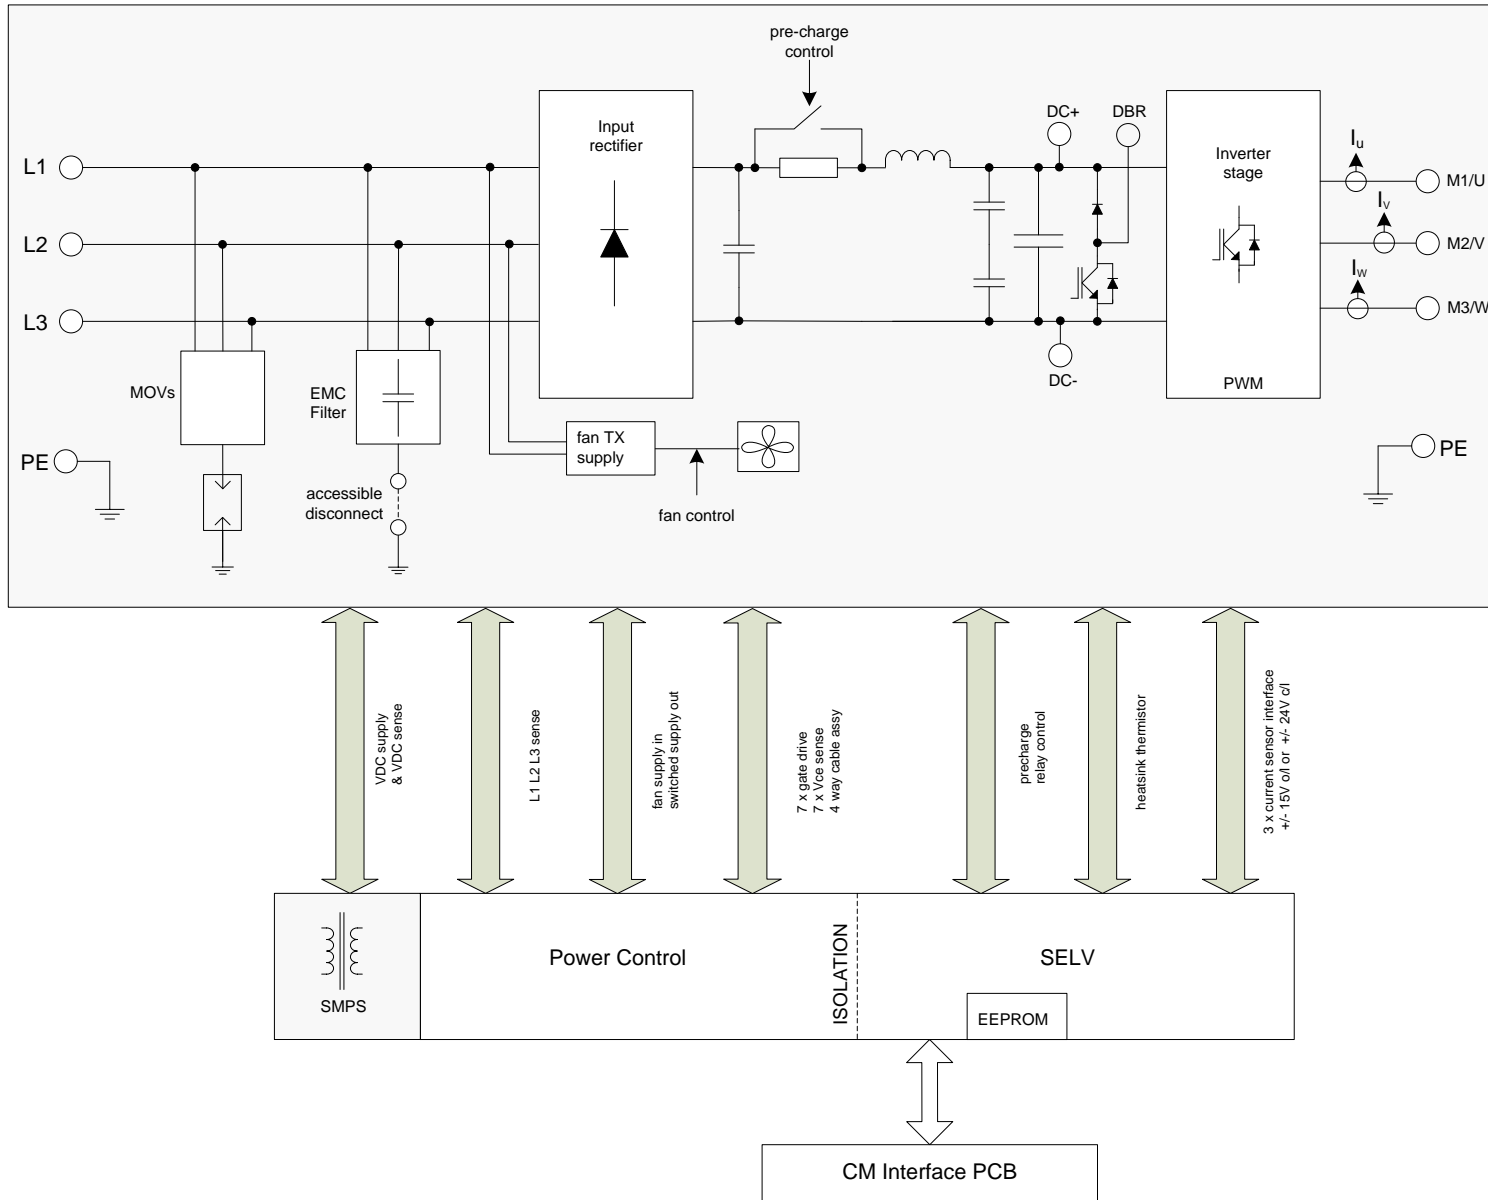

Block Diagram for Frames K


# 4-1 Installation

## Chapter 4: Installation

**IMPORTANT** Read Appendix C: “Compliance” before installing this unit.

### Cubicle Mount

#### DIMENSIONS FOR CUBICLE MOUNT INSTALLATION

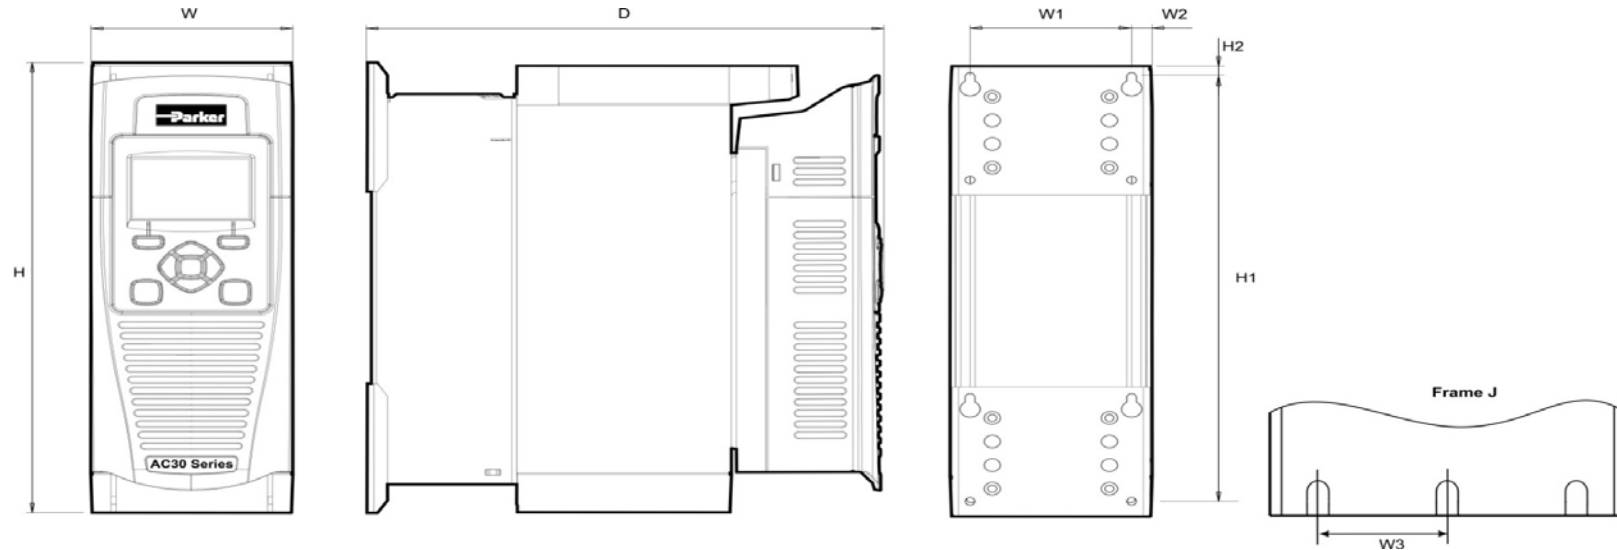

Inverters	Max. Weight	H – AC30V/P	H – AC30D	H1	H2	W	W1	W2	W3	D – AC30V/P	D – AC30D	Fixings
Frame D	4.5kg (10 lbs)	286.0 (11.26)	298.0 (11.73)	270.0 (10.6)	6.5 (0.25)	100.0 (3.93)	80.0 (3.15)	10.0 (0.39)		255.0 (10.0)	273.0 (10.75)	4.5mm slots & holes, M4 fixings
Frame E	6.8kg (15 lbs)	333.0 (13.11)	333.0 (13.11)	320.0 (12.6)	6.5 (0.25)	125.0 (4.92)	100.0 (3.93)	12.5 (0.49)		255.0 (10.0)	273.0 (10.75)	
Frame F	10.0kg (22 lbs)	383.0 (15.07)	383.0 (15.07)	370.0 (14.5)	6.5 (0.25)	150.0 (5.90)	125.0 (4.92)	12.5 (0.49)		255.0 (10.0)	273.0 (10.75)	
Frame G	22.3kg (49.2 lbs)	480.0 (18.90)	480.0 (18.90)	465.0 (18.31)	7.25 (0.29)	220.0 (8.66)	190.0 (7.48)	13.0 (0.51)		287.0 (11.30)	305.0 (12.01)	5.5mm slots & holes, M5 fixings
Frame H	42.8kg (94.6 lbs)	670.0 (26.38)	670.0 (26.38)	650.0 (25.59)	10.0 (0.39)	260.0(10.24)	220.0 (8.66)	20.0 (0.79)		316.0 (12.44)	334.0 (13.15)	6.8mm slots & holes, M6 fixings
Frame J	89.0kg(196.2 lbs)	800.0 (31.50)	800.0 (31.50)	780.0 (30.71)	10.0 (0.39)	330.0(12.99)	285.0(11.22)	23.0(0.91)	142.5(5.61)	374.0(14.72)	392.0(15.43)	9.0mm slots & holes, M8 fixings
Frame K	125kg (275.57 lbs)	See over page for dimensions and fixings										

Figure 4-1 Mechanical Dimensions - Frame D Illustrated (All dimensions are in millimetres (inches))

DIMENSIONS FOR CUBICLE MOUNT INSTALLATION – FRAME K

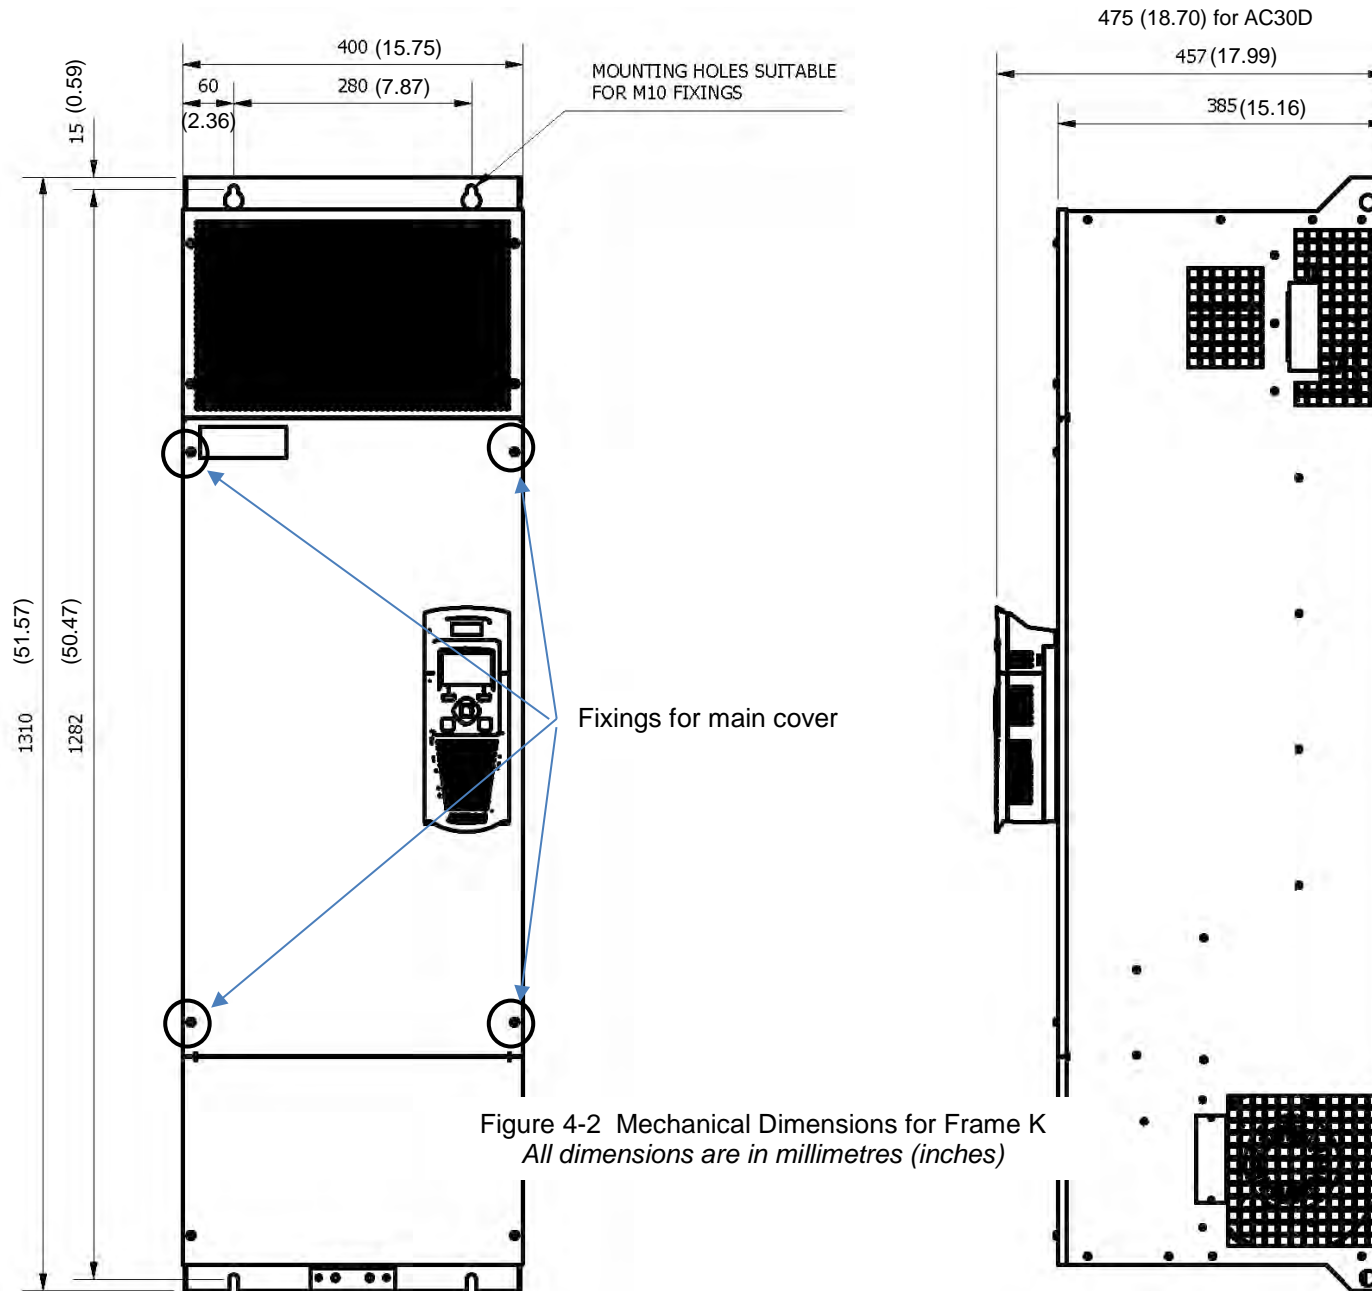


Figure 4-2 Mechanical Dimensions for Frame K  
 All dimensions are in millimetres (inches)

## 4-3 Installation

### MOUNTING THE INVERTER

These units are not suitable for wall mounting. They must be mounted vertically inside an additional enclosure. Depending on required level of EMC compliance refer to Appendix C "Compliance".

**Note: Frame H, J & K only**

These models are heavy and will require two people to lift, or the use of a fork lift to install it. The product will stand vertically on flat surfaces.

### VENTILATION


The inverter gives off heat in normal operation and must therefore be mounted to allow the free flow of air through the ventilation slots and heatsink. Maintain minimum clearances for ventilation as given in the tables below to ensure adequate cooling of the inverter, and that heat generated by other adjacent equipment is not transmitted to the inverter. Be aware that other equipment may have its own clearance requirements. When mounting two or more inverters together, these clearances are additive. Ensure that the mounting surface is normally cool.

#### Minimum Air Clearance

##### Cubicle-Mount Product/Application

(Europe: IP2x, USA/Canada: Open Type).

The inverter must be mounted in a suitable cubicle.

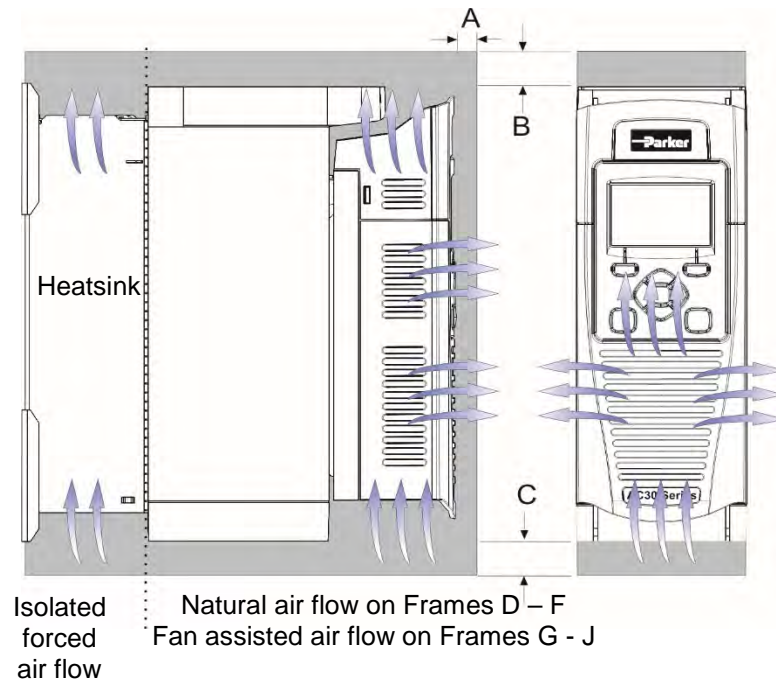


**Clearances for IP20 Product (mm)**

	A	B	C
Frames D – H	10	75	75 minimum (excludes cabling requirements)
Frame J	10	100	100 minimum (excludes cabling requirements)
Frame K	10	200	200


Frame K: 75mm clearance from adjacent vertical surfaces

Figure 4-3 Air Clearance for a Cubicle Mount Product/Application, Frame D Illustrated.

## CUBICLE MOUNTING DETAILS

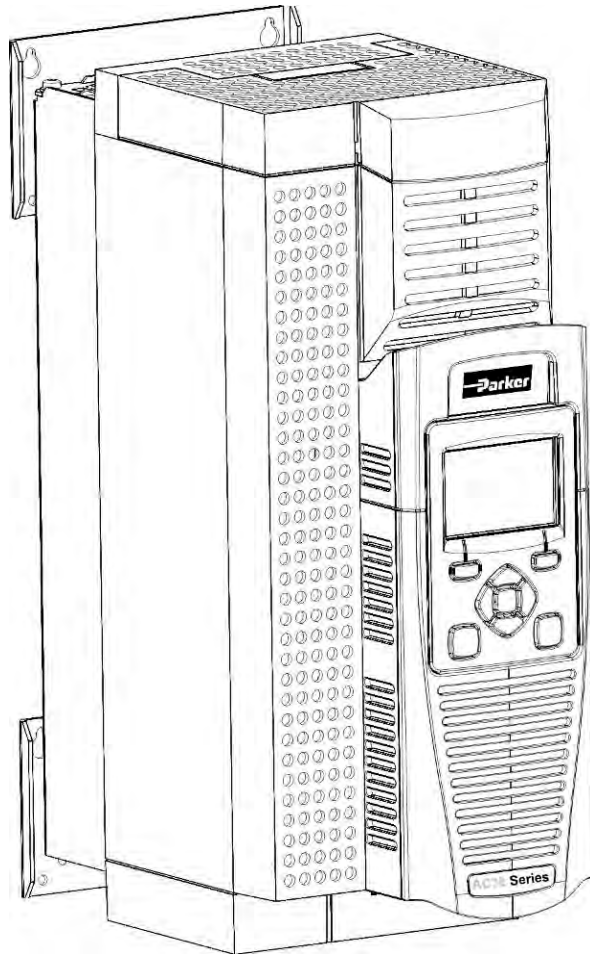

Rear view showing fixing holes for cubicle mount

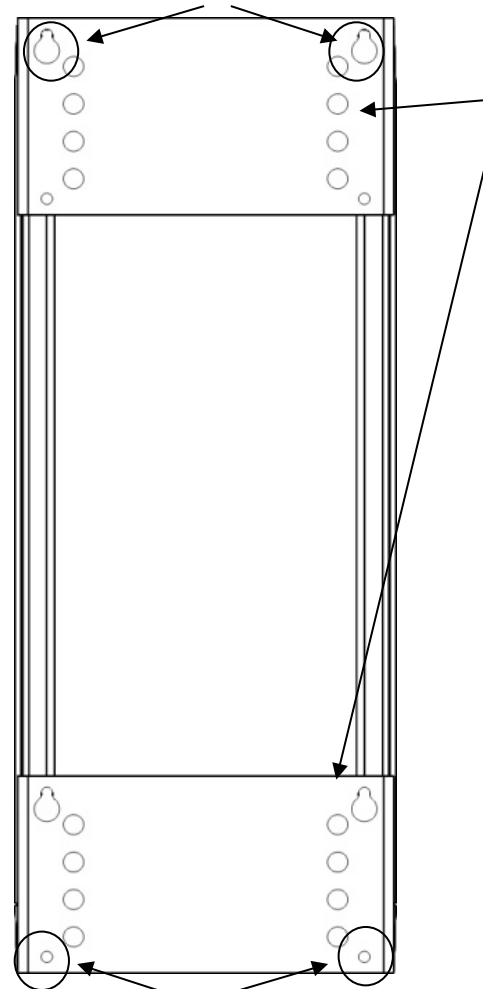

Fixing holes

### Mounting Brackets

Frames D, E, F & G

The brackets can be moved up/down by using the alternative holes, which are set at 15mm intervals.

Frames H, J & K

Have a single mounting plate which cannot be moved.

For hole and fixing dimensions see previous pages.

For top and bottom cover removal see page 4-10.



## 4-5 Installation

### Through Panel Mount Frames D to J only

#### DIMENSIONS FOR THROUGH PANEL INSTALLATION

##### FRAMES D, E

Through panel mounting an inverter in a cubicle allows you to use a smaller cubicle because much of the heat generated by the inverter is dissipated outside the cubicle.

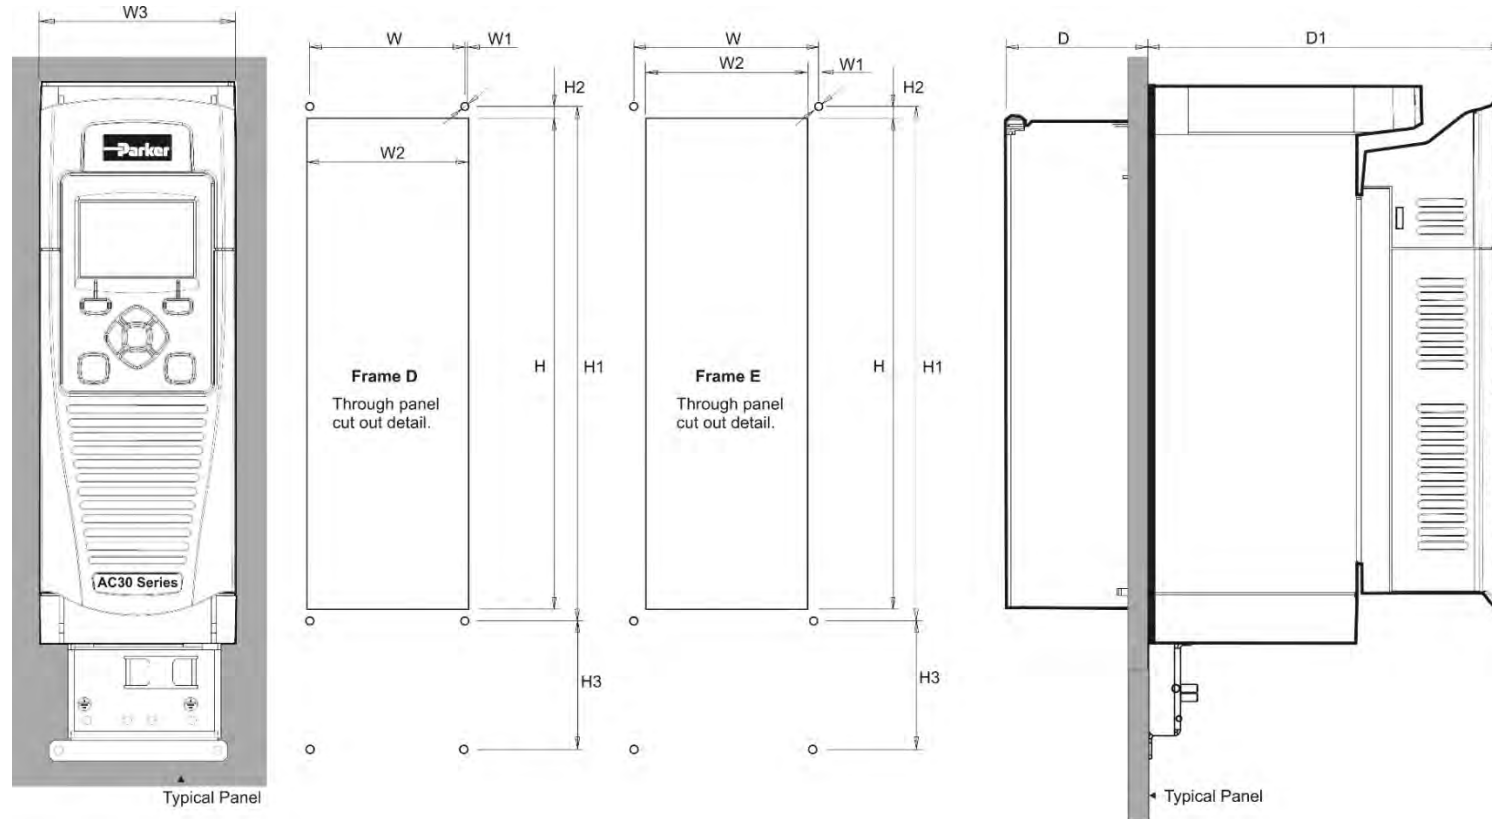


Figure 4-4 Mechanical Dimensions for Through Panel - Frames D & E Inverters

Inverters	H	H1	H2	H3 *	W	W1	W2	W3	D	D1 AC30V/ AC30P	Fixings	Mounting Kits
<b>Frame D</b>	250 (9.8)	262 (10.3)	6 (0.2)	64 (2.51)	79 (3.1)	1.5 (0.06)	82 (3.2)	100 (3.93)	72 (2.8)	181 (7.1) AC30D - 199 (7.83)	Use M4 fixings	LA502668
<b>Frame E</b>	297 (11.7)	309 (12.1)	6 (0.2)	80 (3.14)	104 (4.1)	1 (0.04)	102 (4)	125 (4.9)	72 (2.8)	181 (7.1) AC30D - 199 (7.83)		LA502669

(\* H3 only for wiring brackets)

All dimensions are in millimetres (inches)

## FRAMES F, G

Through panel mounting an inverter in a cubicle allows you to use a smaller cubicle because much of the heat generated by the inverter is dissipated outside the cubicle.

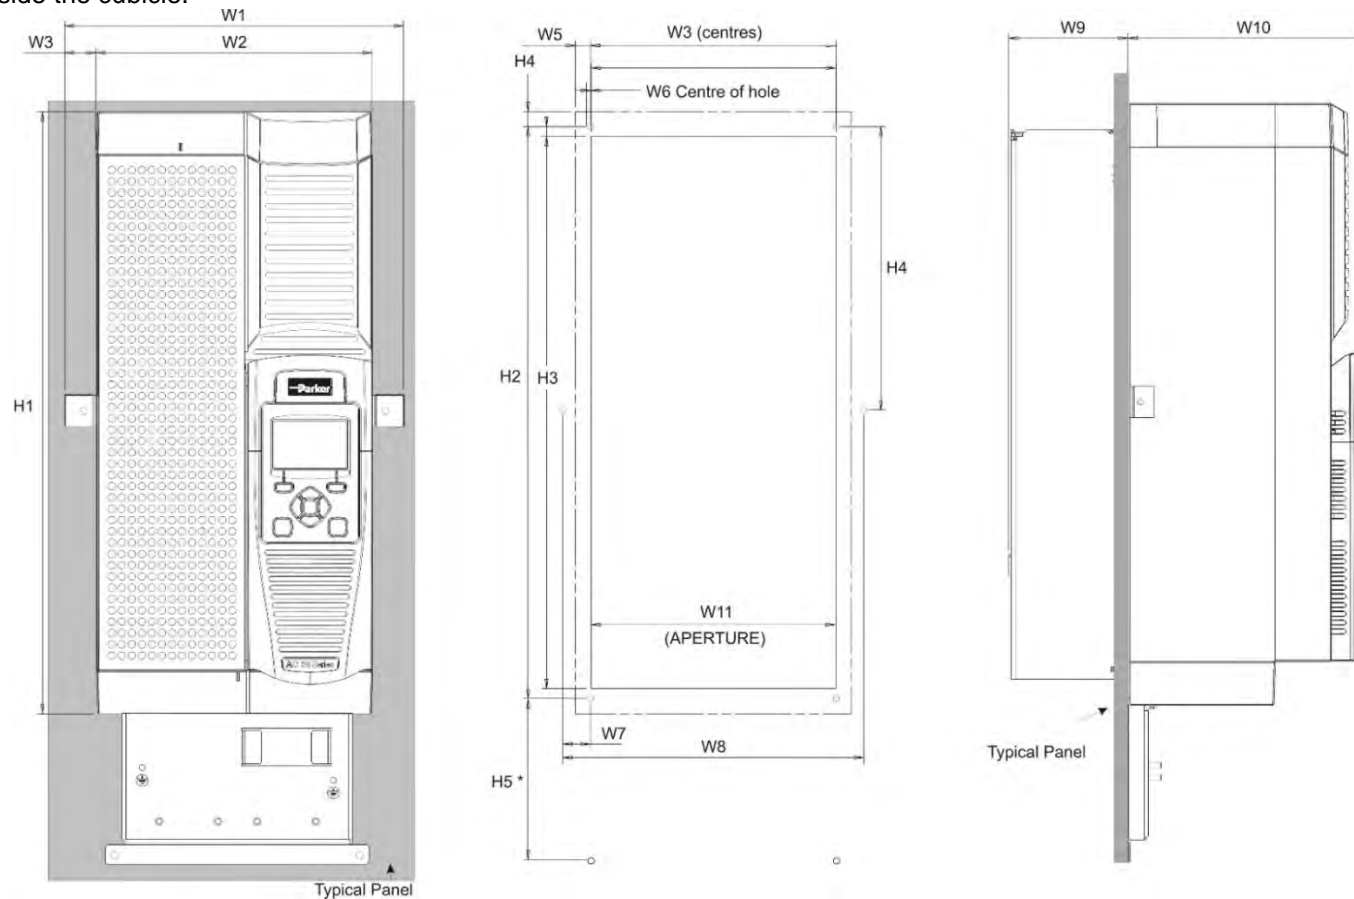


Figure 4-5 Mechanical Dimensions for Through Panel Frames F & G

Inverters	W1	W2	W3	W4	W5	W6	W7	W8	W9	W10 AC30VAC30P	W11	H1	H2	H3	H4	H5*	Fixings	Mounting Kits
<b>Frame F</b>	200 (7.87)	150 (5.90)	25 (0.98)	129 (5.07)	12 (0.47)	0.1 (0.003)	20.5 (0.80)	170 (6.7)	72 (2.83)	181 (7.12) AC30D 199 (7.83)	127 (5.0)	381 (15.0)	359 (14.13)	347 (13.66)	147.5 (5.80)	90 (3.54)	6 x 4.5mm holes M4 fixings	LA502670
<b>Frame G</b>	270 (10.63)	220 (8.66)	25 (0.98)	195.8 (7.70)	12.1 (0.47)	0.4 (0.015)	22 (0.86)	240 (9.44)	95 (3.74)	192 (7.55) AC30D 210 (8.27)	195 (7.67)	480 (18.89)	455.8 (17.94)	440 (17.32)	225.8 (8.88)	130 (5.11)	6 x 5.5mm holes M5 fixings	LA502471

All dimensions are in millimetres (inches)

(\* H5 only for wiring brackets)

# 4-7 Installation

## FRAME H

Through panel mounting an inverter in a cubicle allows you to use a smaller cubicle because much of the heat generated by the inverter is dissipated outside the cubicle.

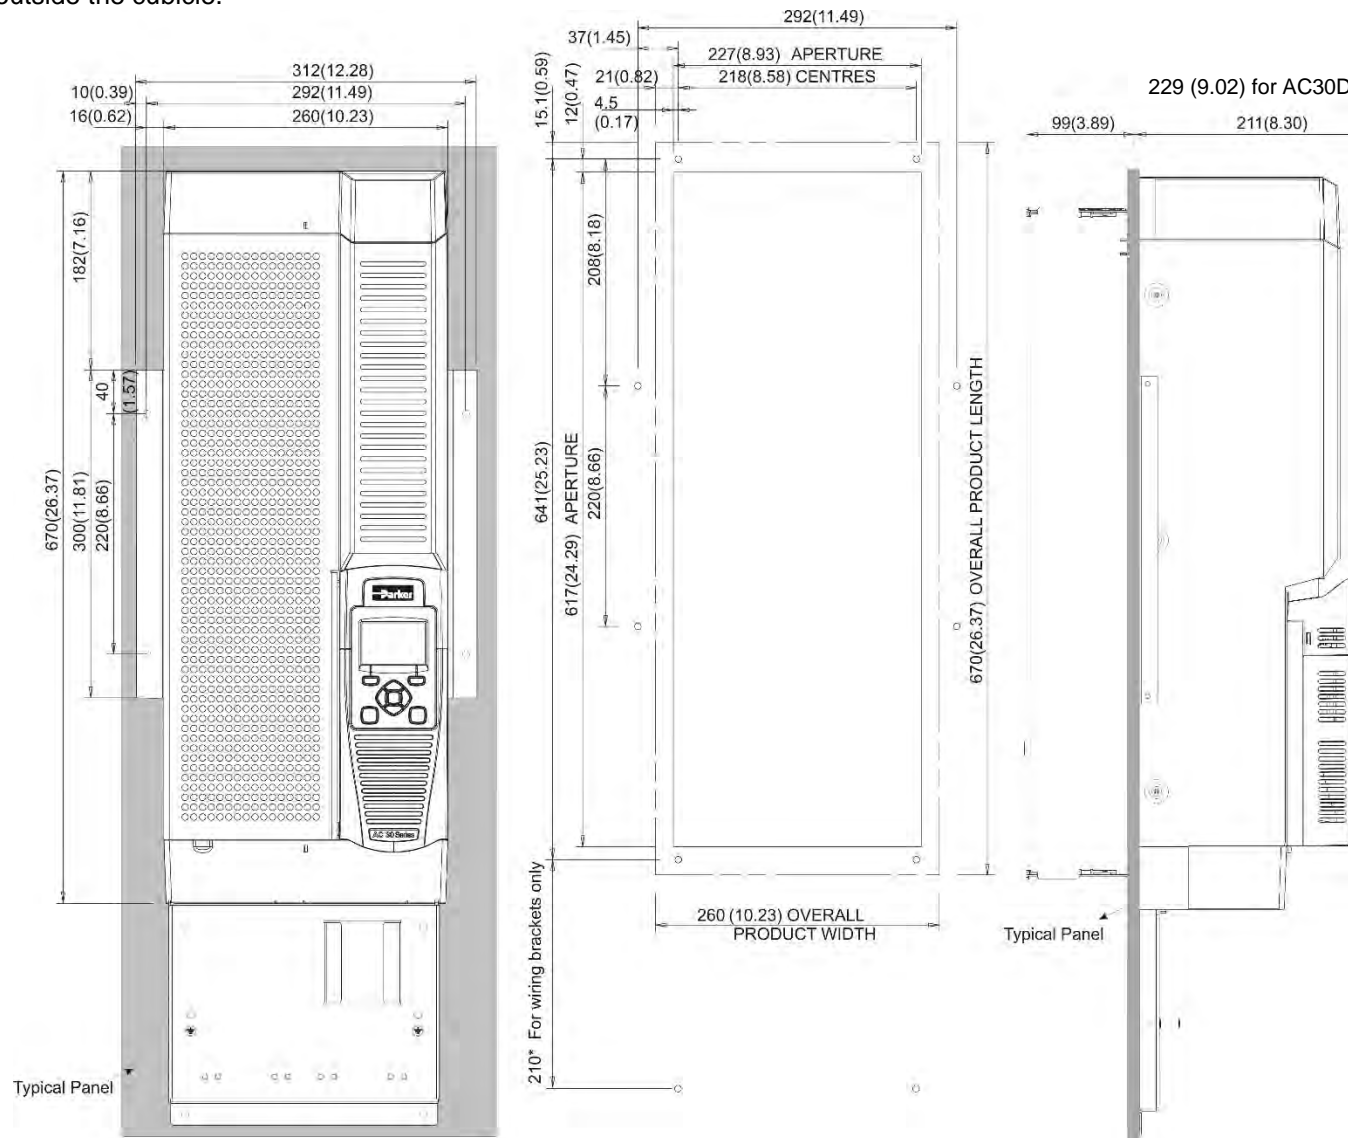


Figure 4-6 Mechanical Dimensions for Through Panel Frame H

All dimensions are in millimetres (inches) - Fixings: 8 x 6.5mm holes M6 fixings, refer to panel mounting kit part number LA502472

## FRAME J

Through panel mounting an inverter in a cubicle allows you to use a smaller cubicle because much of the heat generated by the inverter is dissipated outside the cubicle.

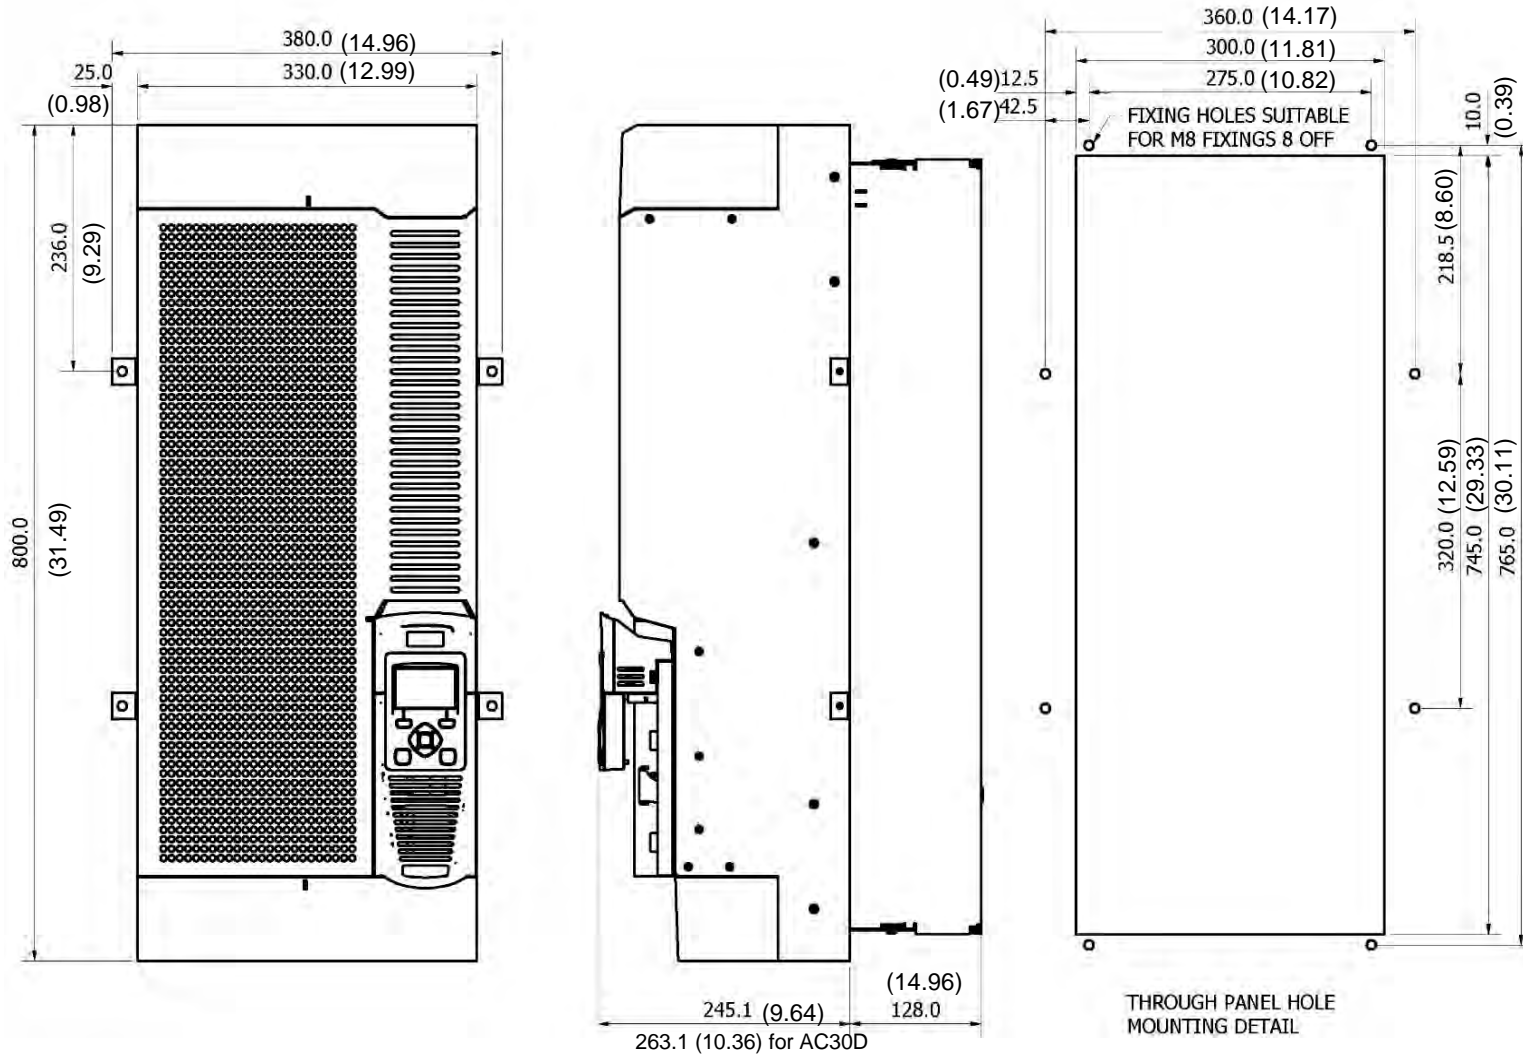


Figure 4-7 Mechanical Dimensions for Through Panel Frame J - All dimensions are in millimetres (inches)  
 Fixings: 8 x 9.0mm holes M8 fixings, refer to panel mounting kit part number LA502793

# 4-9 Installation

## MOUNTING THE INVERTER

These units are not suitable for wall mounting. They must be mounted vertically inside an additional enclosure. Depending on required level of EMC compliance refer to Appendix C "Compliance".

### Note: Frame H & J only

These models are heavy and will require two people to lift, or the use of a fork lift to install it. The product will stand vertically on flat surfaces, but will need secondary restraining to keep upright when through panel mounting (after the panel mounting foot has been removed).


## VENTILATION

The inverter gives off heat in normal operation and must therefore be mounted to allow the free flow of air through the ventilation slots and heatsink. Maintain minimum clearances for ventilation as given in the tables below to ensure adequate cooling of the inverter, and that heat generated by other adjacent equipment is not transmitted to the inverter. Be aware that other equipment may have its own clearance requirements. When mounting two or more units together, these clearances are additive. Ensure that the mounting surface is normally cool.

### Through-Panel Mount Product/Application (Frames D, E, F, G, H & J)

(Europe: IP2x, USA/Canada: Open Type).

The inverter can be mounted in a suitable cubicle.

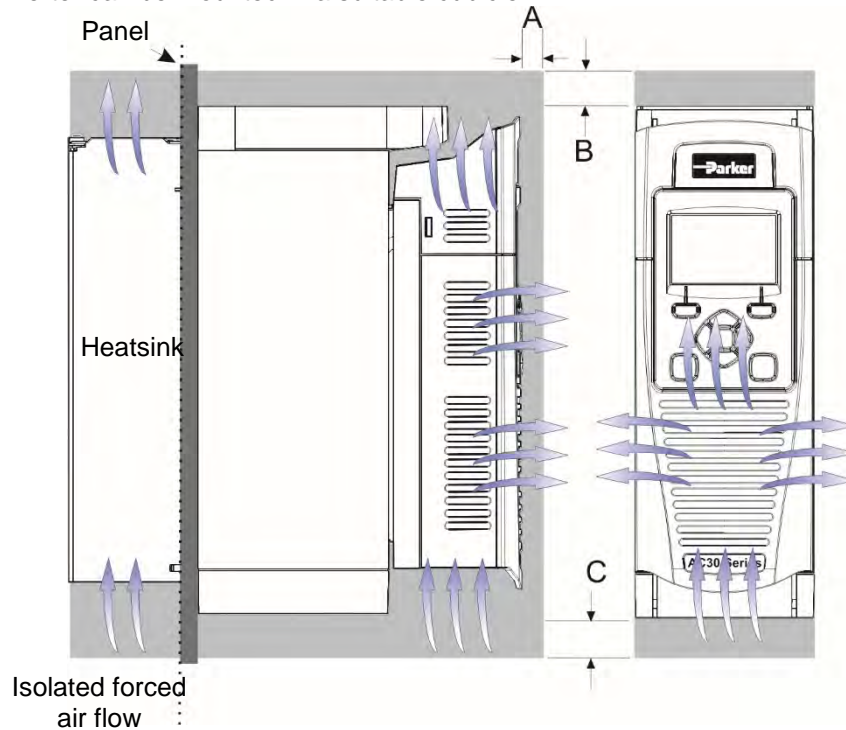

Natural air flow on Frames D - F  
Fan assisted air flow on Frames G - J


Clearances for Through-Panel Mount IP20 Product (mm)			
	A	B	C
Frames D – H	10	75	75 minimum (excludes cabling requirements)
Frame J	10	100	100 minimum (excludes cabling requirements)

Figure 4-8 Air Clearance for a Through-Panel Mount Product/Application, Frame D Illustrated.

## THROUGH PANEL MOUNTING DETAIL (FRAMES D – J ONLY)

To allow mounting; first disassemble the inverter by following instructions 1 to 4 and then instructions 5 to 7 for mounting:-

1. Unscrew and remove mounting bracket(s).

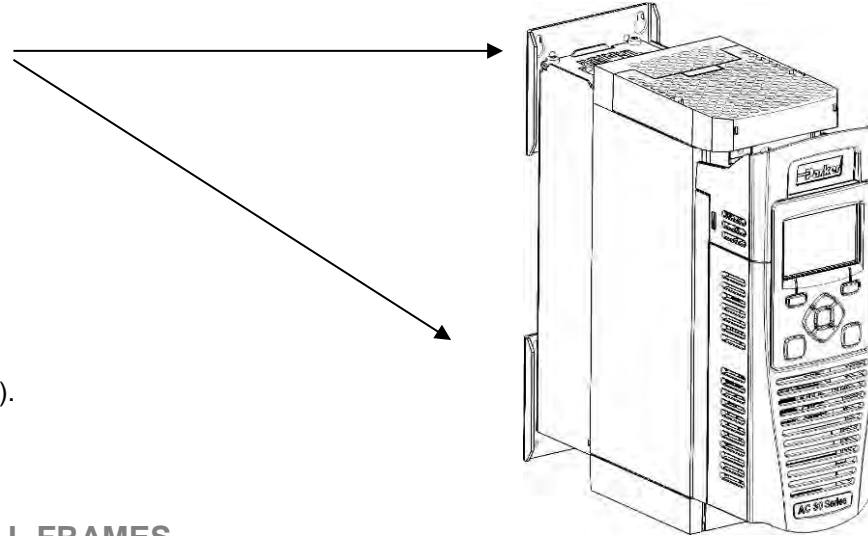

2. Remove Control Module Cover (see page 4-18).
3. Remove Control Module (see page 4-19).



## COVER REMOVAL INSTRUCTIONS – ALL FRAMES

4. Top & Bottom Cover Removal Instructions

### Frame D

**Top Cover:** Squeeze together the bracket under the top cover and lift off cover.

**Bottom Cover:** After inserting a screwdriver into the slot **slightly push to the left** to release the catch.

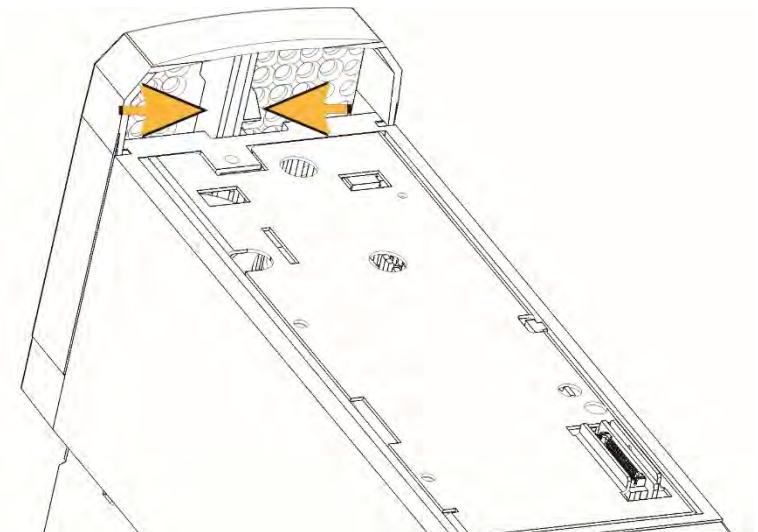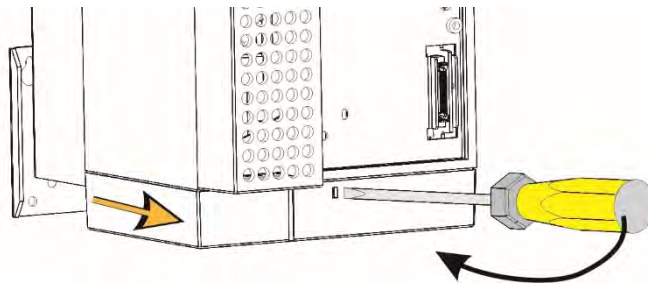


# 4-11 Installation

## Frames E, F, G, H & J


### Top Cover:

To remove insert a screwdriver into the slot and **move to the right** to release the catch, and then **slide off** cover.

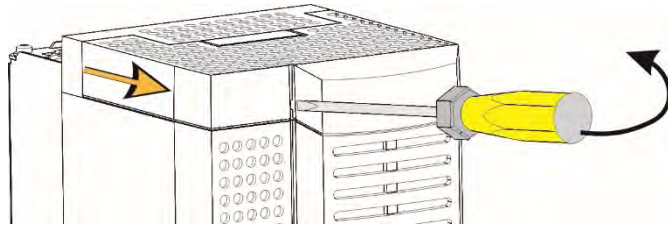

### Bottom Cover:


To remove bottom cover insert a screwdriver into the slot and **move to the left** to release the catch, and then **slide off** cover.

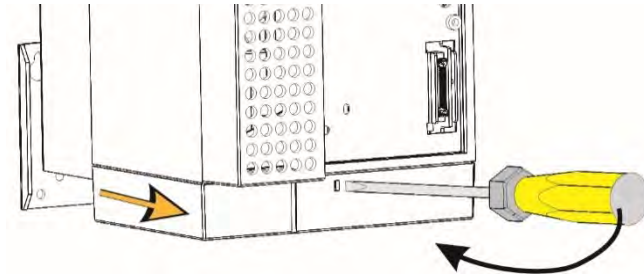

## Frame K


### Top Cover:


To remove unscrew 4 x screws and then remove cover.

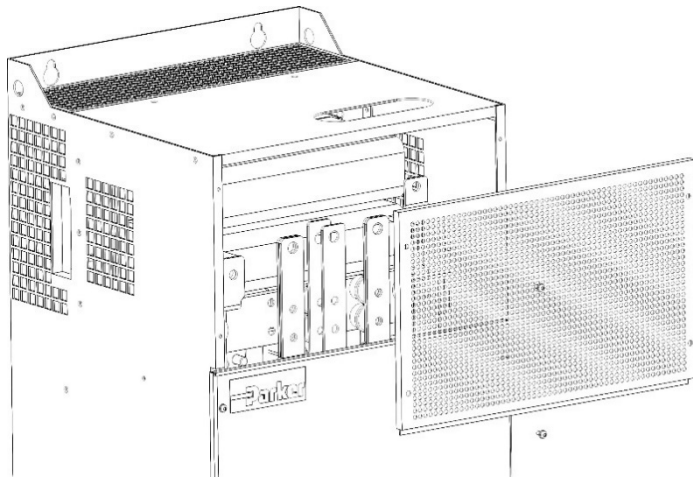

### Bottom Cover:

To remove unscrew 2 x screws and then **slide off** cover.

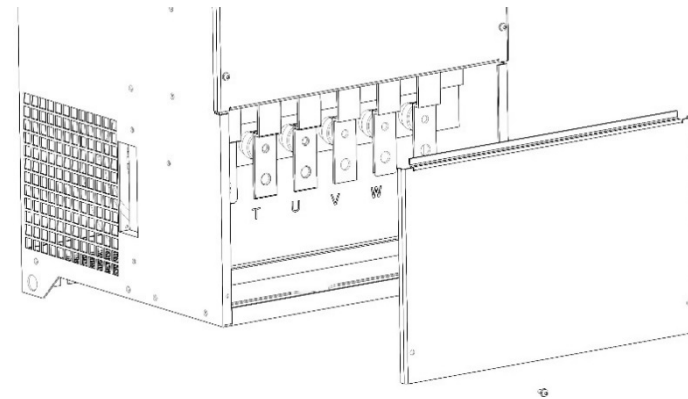

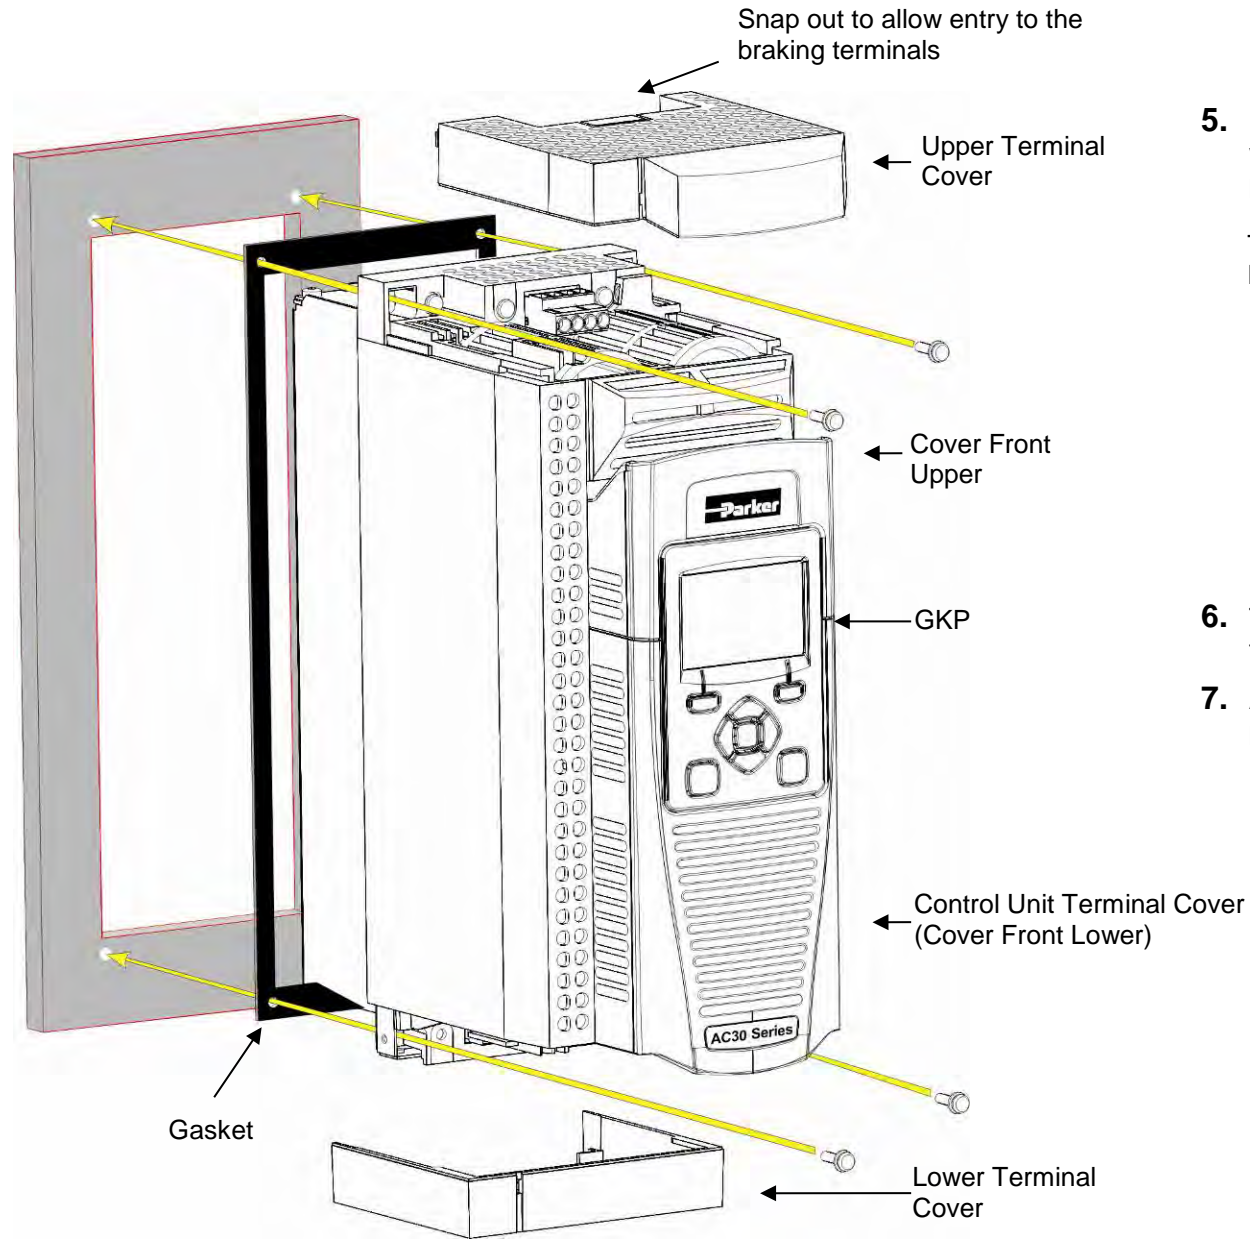

5. Fit gasket to the inverter so that an air-tight seal will be made between the inverter and the panel.

Through Panel Kits, can be purchased from Parker using the following part numbers:

- Frame D – LA502668
- Frame E – LA502669
- Frame F – LA502670
- Frame G – LA502471
- Frame H – LA502472
- Frame J – LA502793
- Frame K – not applicable

6. Tighten all screws in place as shown, according to panel insert requirements.
7. At this stage you can wire the power cables, see page 4-16.



## 4-13 Installation

### Cabling Bracket for Control & Main Cable


With the bottom cover off you can screw the cabling brackets in place, if required.

The cabling brackets are standard with C2 filtering products and can also be obtained from Parker using the following part numbers.

#### Frame E Illustrated


The part numbers for the cabling bracket kits are:

<u>Mount</u>	<u>Wall/Panel Mount</u>	<u>Through Panel</u>
<b>Frame D</b>	LA501935U001	LA503117U001
<b>Frame E</b>	LA501935U002	LA503117U002
<b>Frame F</b>	LA501935U003	LA503117U003
<b>Frame G</b>	LA501935U004	LA503117U004
<b>Frame H</b>	LA501935U005	LA503117U005
<b>Frame J</b>	LA501935U006	not applicable
<b>Frame K</b>	not applicable	not applicable

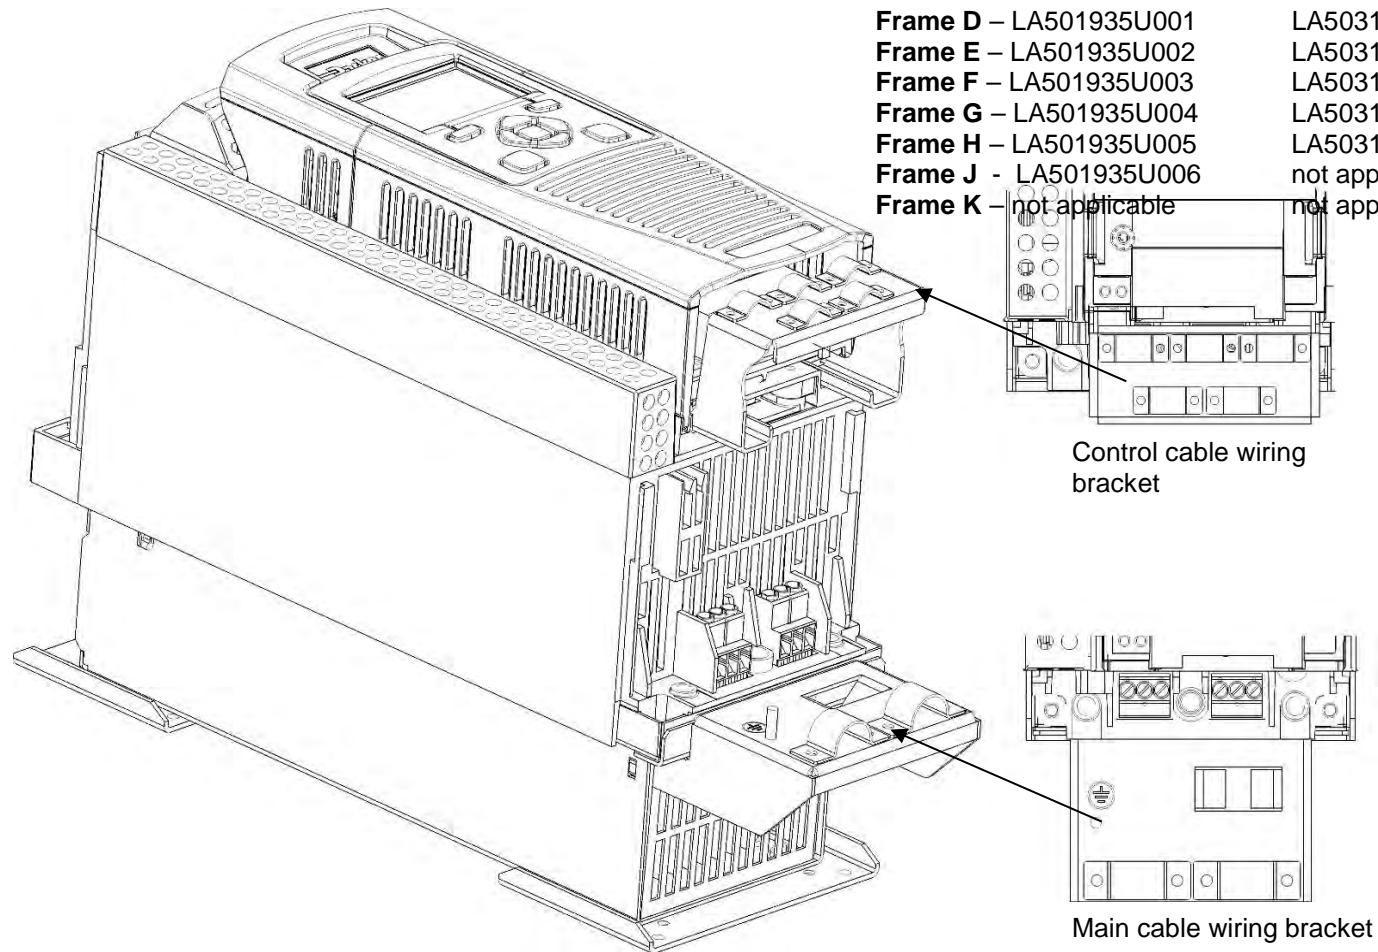


## Cabling Bracket for AC30D System Terminals

Frame E Illustrated

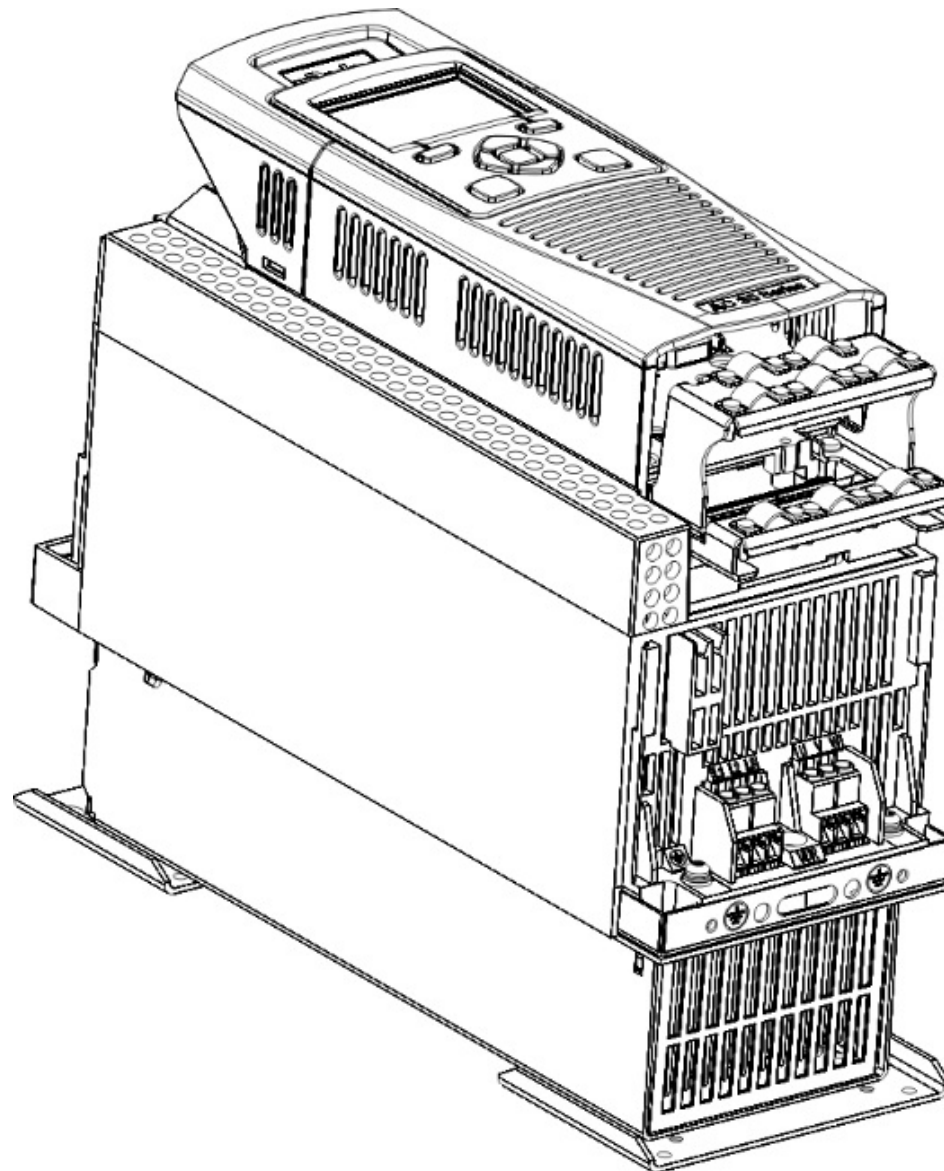

The part number for the AC30D control and system terminal cable brackets kit is: LA501935U007

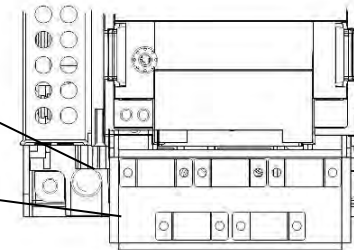

Control cable wiring bracket

## 4-15 Installation

### Electrical Installation

**IMPORTANT** Please read the Safety Information in “Chapter :1 Safety” before proceeding.

Also refer to Appendix C: Compliance

#### WIRING INSTRUCTIONS

**IMPORTANT:** *The control board 0V must be connected to protective earth outside of the product to meet EMC and safety requirements.*

#### Power Wiring Connections

##### Protective Earth (PE) Connections

The unit must be **permanently earthed** according to EN 61800-5-1 - see below. Protect the incoming mains supply using a suitable fuse or circuit breaker (circuit breaker types RCD, ELCB, GFCI are not recommended).

**IMPORTANT:** *The inverter is only suitable for earth referenced supplies (TN) when fitted with an internal filter. External filters are available for use on TN and IT (non-earth referenced) supplies.*

For installations to EN 61800-5-1 in Europe:

- For permanent earthing, two individual incoming protective earth conductors (<10mm<sup>2</sup> cross-section) or one conductor (>10mm<sup>2</sup> cross-section) are required. Each earth conductor must be suitable for the fault current according to EN 60204.


Refer to Appendix C: “Compliance” - EMC Installation Options.

#### NOTE


STO always overrides any attempt to start the inverter. If one or both STO control inputs is requesting the STO function, the inverter will not start, even if for example, the inverter’s software malfunctions and tries to cause the motor to turn. Refer to Chapter 6 Safe Torque Off.

## AC FED POWER WIRING CONNECTIONS

Feed the power supply and motor cables into the inverter under the cable clamps using the correct cable entries, and connect to the power terminals. Tighten all terminals to the correct tightening torque; refer to the Terminal Tightening Torques table (page 4-39).

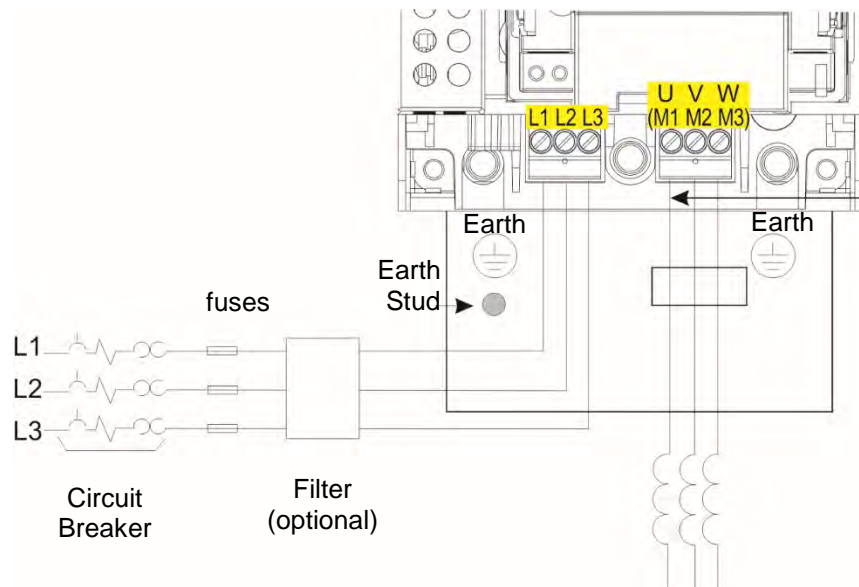

AC Motor Chokes.  
Only on long cable runs >50m

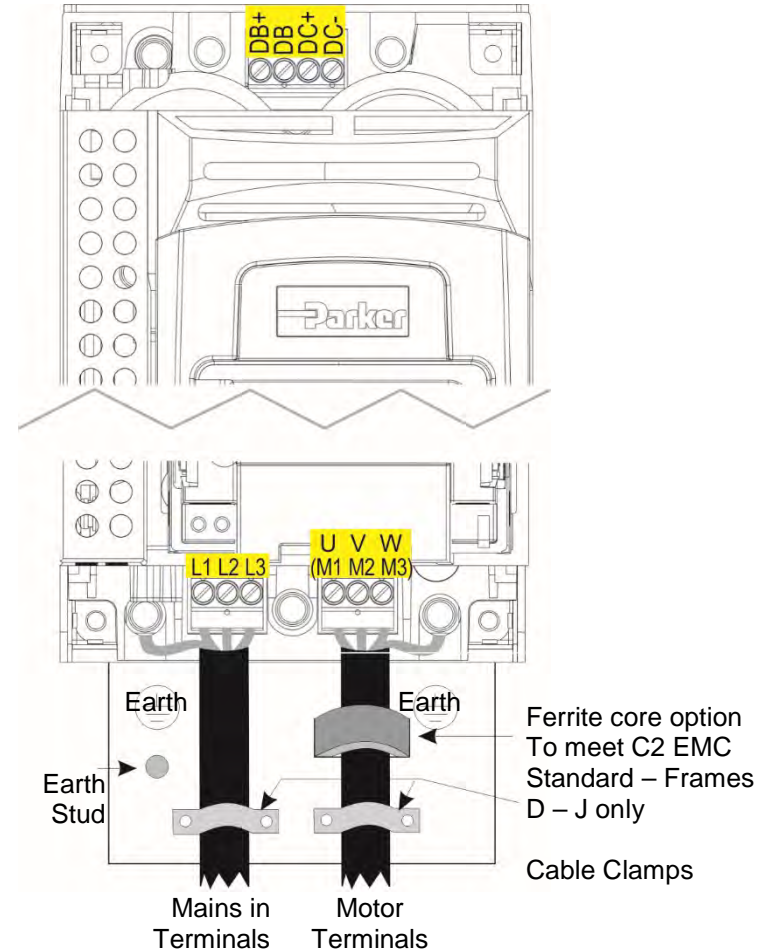


Frame K - no DB+ connect resistor between DC+ & DB)

**Note:** Cable clamps and earthing brackets are only supplied with a C2 EMC Filter kit (page 4-13 for part numbers), see page C-11 for motor termination details.

# 4-17 Installation

## DC FED POWER WIRING CONNECTIONS (FRAMES D – J ONLY)


Feed the power supply and motor cables into the inverter under the cable clamps using the correct cable entries, and connect to the power terminals. Tighten all terminals to the correct tightening torque; refer to the Terminal Tightening Torques table (page 4-39).

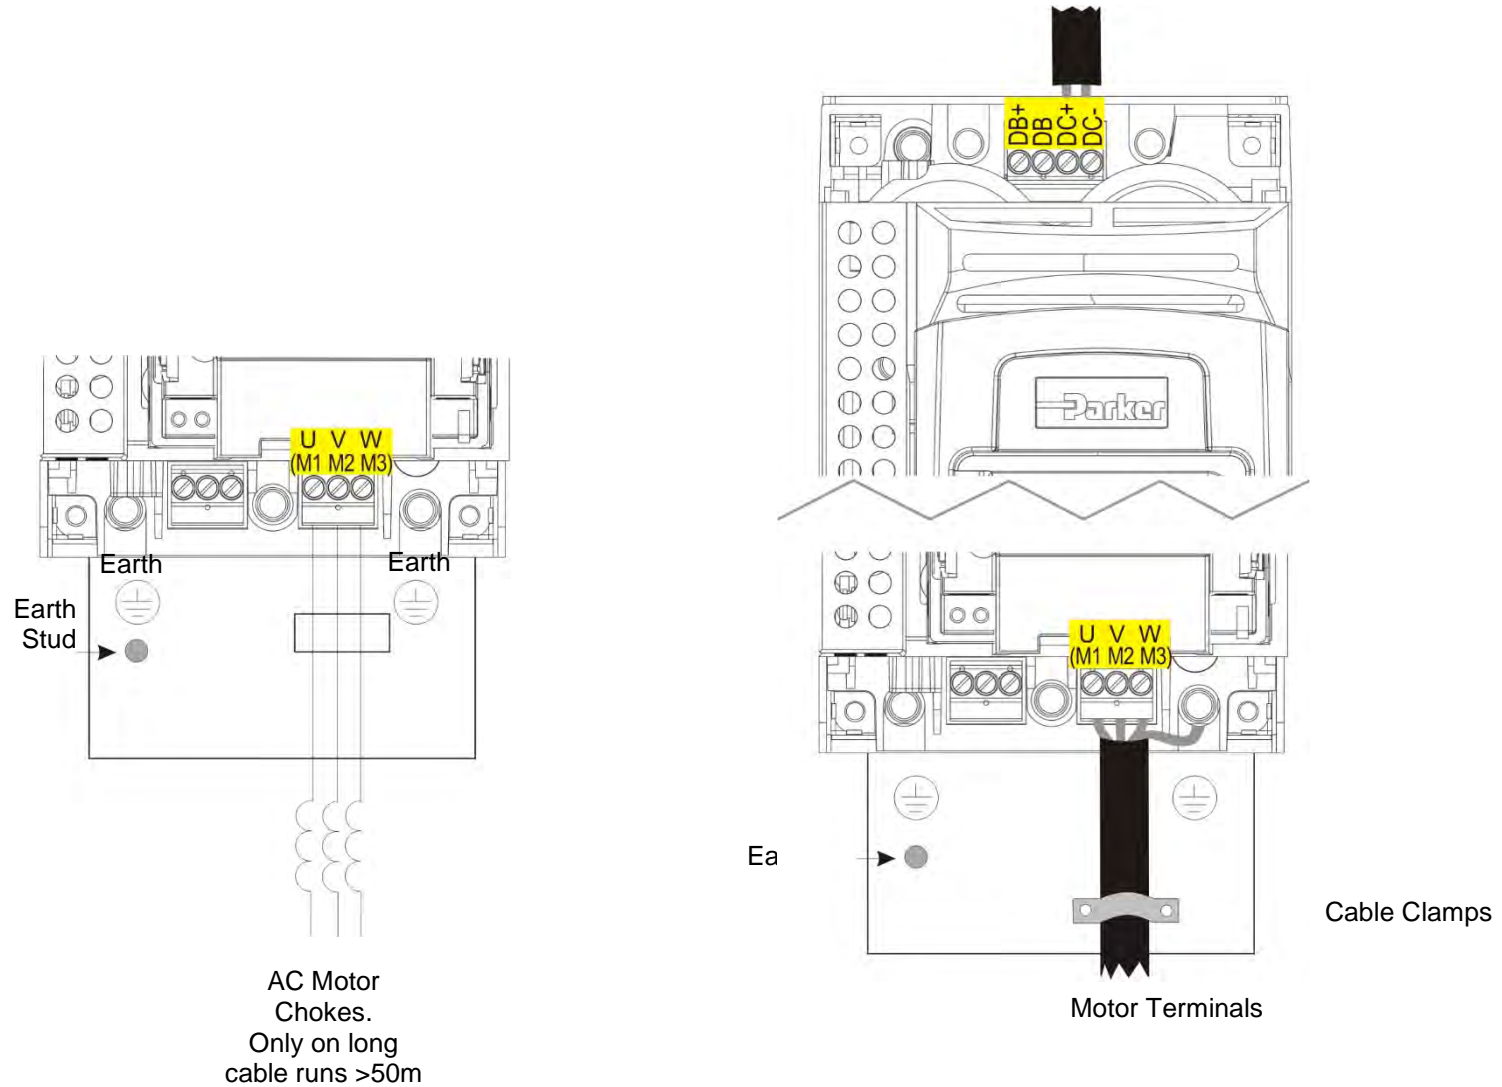


## Control Module Cover Removal

To gain access to the control wiring and for inserting the SD card first remove the control module cover as follows:

1. First remove the GKP by pulling from the top down, and remove.

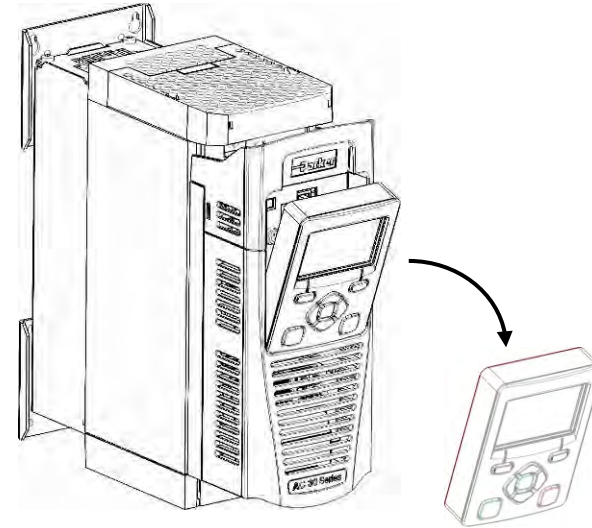


2. Undo the screw and slide the control module cover down slightly, then remove.

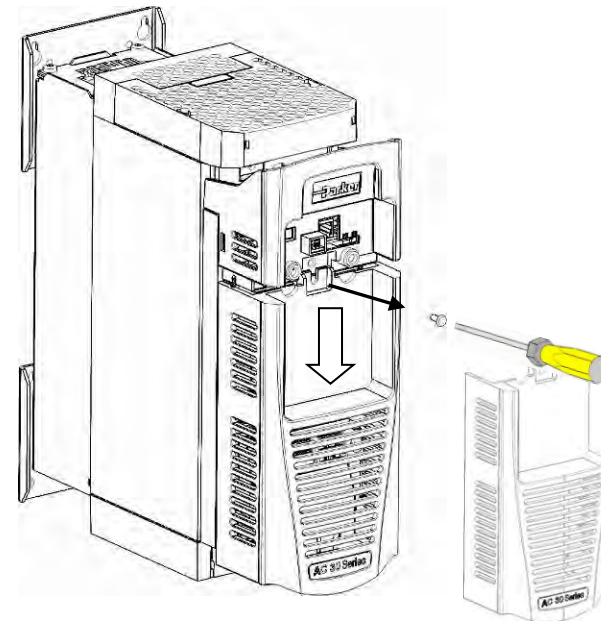



## 4-19 Installation

# Control Module Removal

**WARNING** Isolate supply before plugging or unplugging control unit to the power stack.

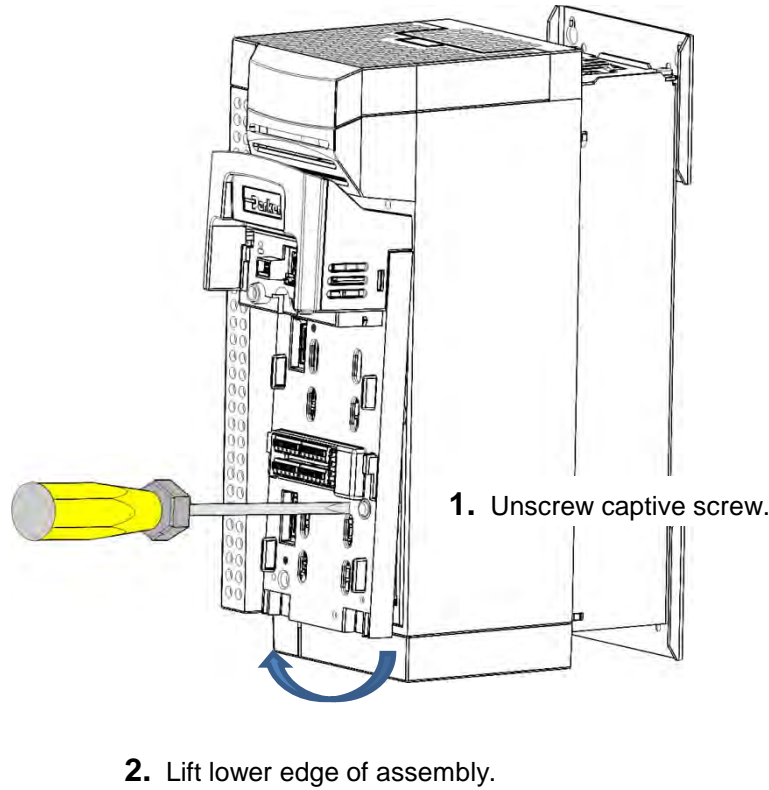

*Note that there are two screws used to retain the AC30D control module. The communications option, if fitted, should be temporarily removed to access one of the two screws.*

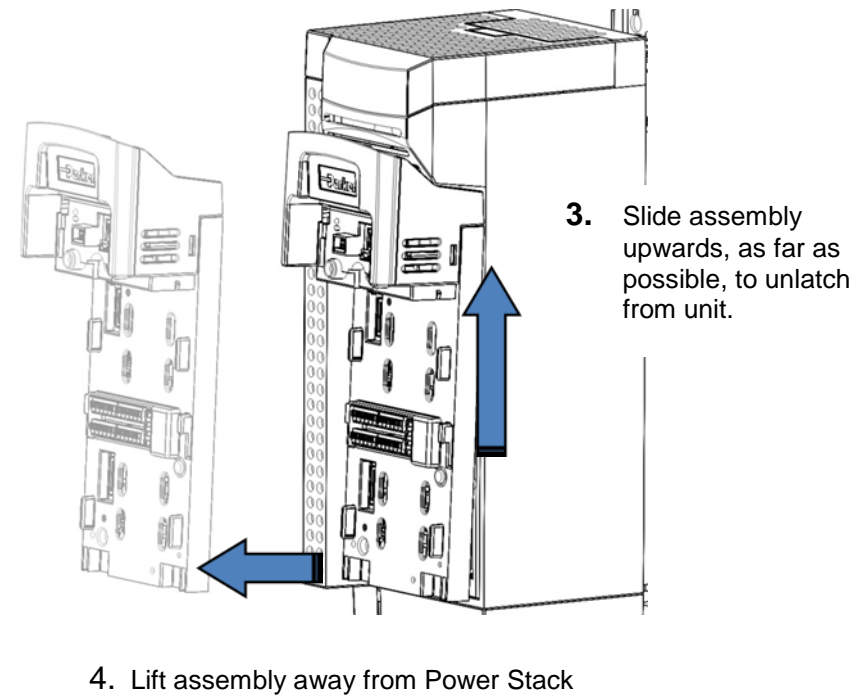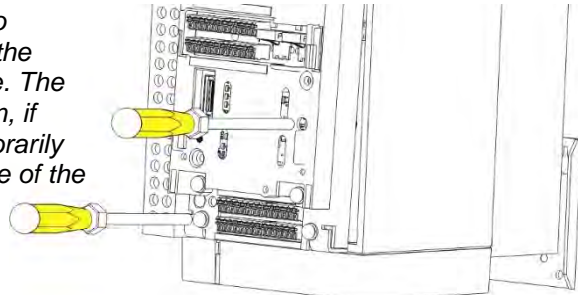

**CONTROL MODULE TERMINAL CABLE SPECIFICATION**

Solid minimum H05(07)V-U 0.2sqmm.

Solid maximum H05(07)V-U 1.5 sqmm.

Flexible minimum H05(07)V-K 0.2 sqmm.

Flexible maximum H05(07)V-K 1.5 sqmm.

W.wire end Ferrule DIN462228 Pt 1 minimum 0.25 sqmm.

W.wire end Ferrule DIN462228 Pt 1 maximum 1.5 sqmm.

W.plastic collar Ferrule DIN462228 Pt4 minimum 0.25 sqmm (see note 1)

W.plastic collar Ferrule DIN462228 Pt4 maximum 0.75 sqmm (see note 2).

*Note 1: Parker part number CI053612U001 (Davico part No. PET0505)*


*Note 2: Parker part number CI053612U002 (Davico part No. PET7575).*



# 4-21 Installation

## AC30V CONTROL WIRING CONNECTIONS



Terminal ID	Function
X10/01	STO A Input
X10/02	STO Common
X10/03	STO B Input
X10/04	STO Common
X10/05	STO Status A
X10/06	STO Status B
X11/01	ANIN 01 (+10V, 0-10V, 0-20mA, 4-20mA)
X11/02	ANIN 02 (+10V, 0-10V)
X11/03	ANOUT 01 (+10V, 0-10V)
X11/04	ANOUT 02 (0-10V, 0-20mA, 4-20mA)
X11/05	+10V reference
X11/06	-10V reference
X12/01 (LH)	DIGIN 04 / DIGOUT 01
X12/02	DIGIN 05 / DIGOUT 02
X12/03	DIGIN 06 / DIGOUT 03
X12/04	DIGIN 07 / DIGOUT 04
X12/05	User +24V output
X12/06	0V
X13/01 (LH)	0V
X13/02	DIGIN 1
X13/03	DIGIN 2
X13/04	DIGIN 3
X13/05	+24V AUX input – AC30V and AC30P only
X13/06	0V AUX input – AC30V and AC30P only
X14/01 (BOT)	Relay 01 (contact A) – AC30V only
X14/02	Relay 01 (contact B) – AC30V only
X14/03	Relay 02 (contact A) – AC30V only
X14/04	Relay 02 (contact B) – AC30V only

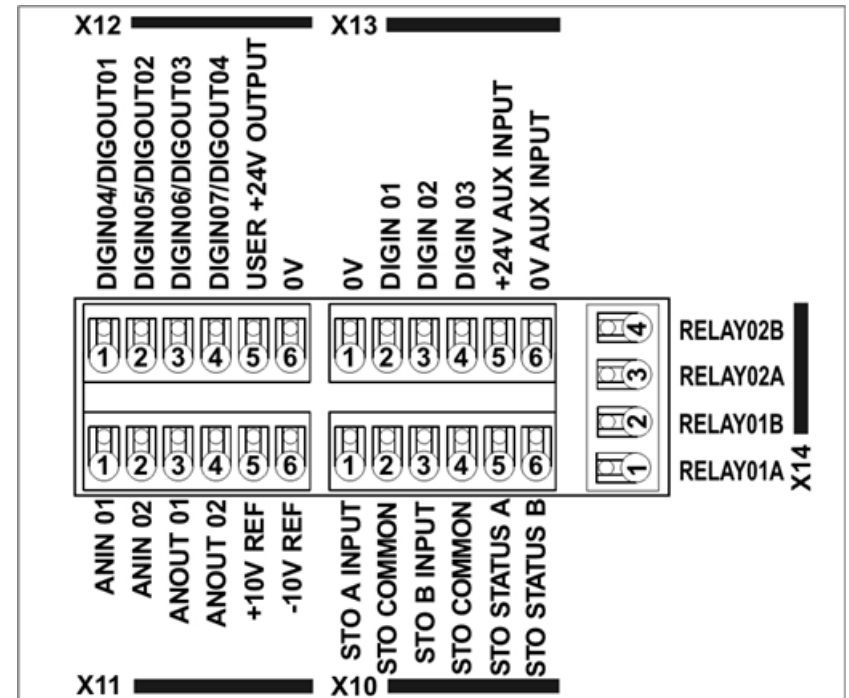

Control Wiring Layout Diagram

**AC30D-P CONTROL WIRING CONNECTIONS**



Terminal ID	Function
X10/01	STO A Input
X10/02	STO Common
X10/03	STO B Input
X10/04	STO Common
X10/05	STO Status A
X10/06	STO Status B
X11/01	ANIN 01 (+10V, 0-10V, 0-20mA, 4-20mA)
X11/02	ANIN 02 (+10V, 0-10V)
X11/03	ANOUT 01 (+10V, 0-10V)
X11/04	ANOUT 02 (0-10V, 0-20mA, 4-20mA)
X11/05	+10V reference
X11/06	-10V reference
X12/01 (LH)	DIGIN 04 / DIGOUT 01
X12/02	DIGIN 05 / DIGOUT 02
X12/03	DIGIN 06 / DIGOUT 03
X12/04	DIGIN 07 / DIGOUT 04
X12/05	User +24V output
X12/06	0V
X13/01 (LH)	0V
X13/02	DIGIN 1
X13/03	DIGIN 2
X13/04	DIGIN 3
X13/05	+24V AUX input – AC30V and AC30P only
X13/06	0V AUX input – AC30V and AC30P only
Ethernet Port 1 – AC30P and AC30D only	
Ethernet Port 2 – AC30P and AC30D only	

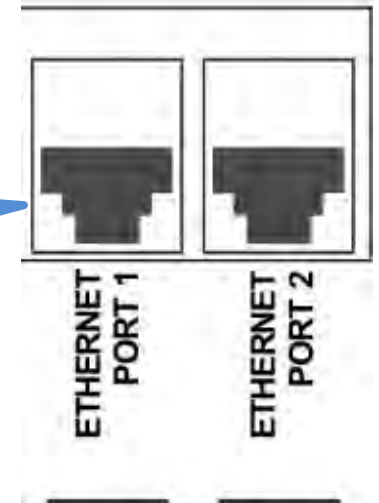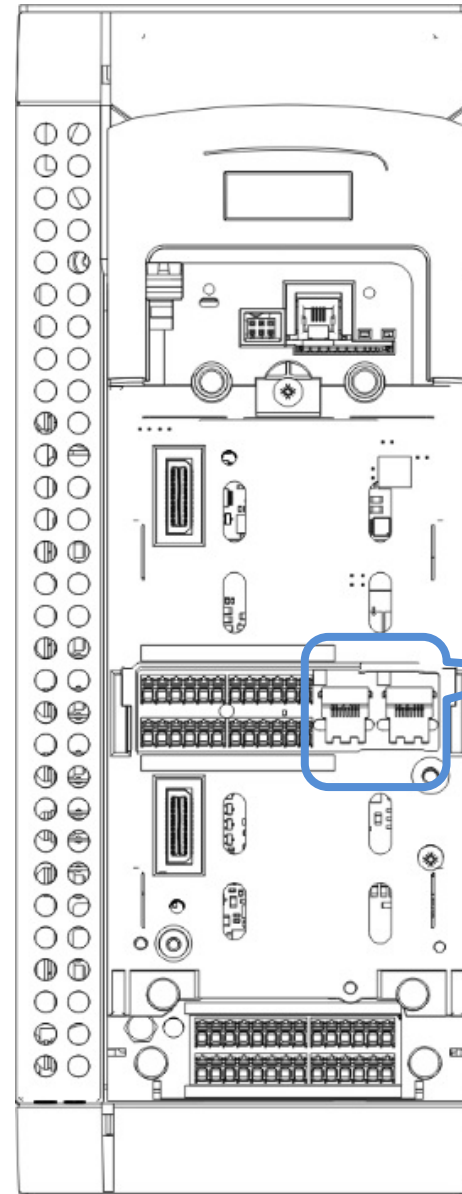

# 4-23 Installation

## SYSTEM BOARD CONTROL WIRING CONNECTIONS – AC30D ONLY

Terminal ID	Function
X30/01	DIGIN 1
X30/02	DIGIN 2
X30/03	DIGIN 3
X30/04	DIGIN 0V
X30/05	+24V System Aux. Input
X30/06	0V System Aux. Input
X31/01	Encoder 2 – A input
X31/02	Encoder 2 – /A input
X31/03	Encoder 2 – B input
X31/04	Encoder 2 – /B input
X31/05	Encoder 2 – Z input
X31/06	Encoder 2 – /Z input
X31/07	Encoder PSU Output – Positive terminal (internally connected to X32/07)
X31/08	Encoder PSU Output – 0V terminal (internally connected to X32/08)
X32/01	Encoder 1 – A input
X32/02	Encoder 1 – /A input
X32/03	Encoder 1 – B input
X32/04	Encoder 1 – /B input
X32/05	Encoder 1 – Z input
X32/06	Encoder 1 – /Z input
X32/07	Encoder PSU Output – Positive terminal (internally connected to X31/07)
X32/08	Encoder PSU Output – 0V terminal (internally connected to X31/08)
X33/01	Encoder Transmit – A output
X33/02	Encoder Transmit – /A output
X33/03	Encoder Transmit – B output
X33/04	Encoder Transmit – /B output
X33/05	Encoder Transmit – Z output
X33/06	Encoder Transmit – /Z output

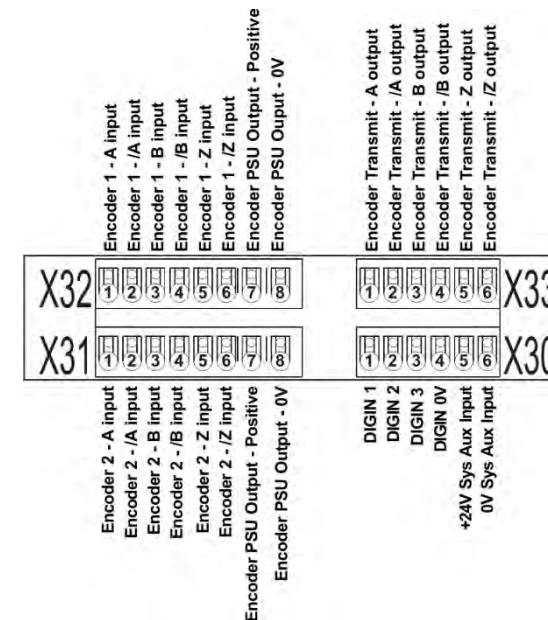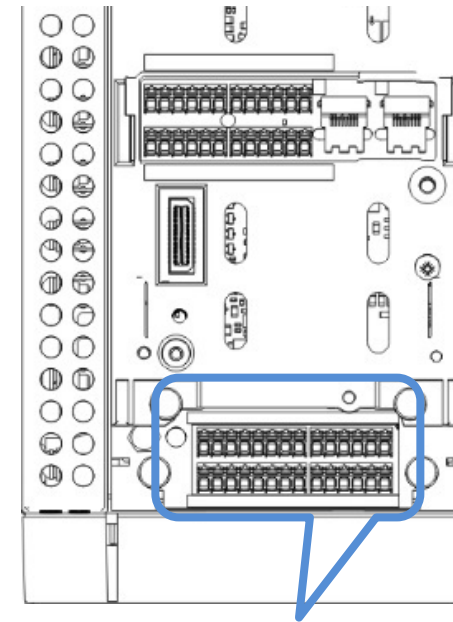

## Wiring Diagrams

### THE DEFAULT APPLICATION

The AC30V inverter is supplied with 5 Applications, Application 0 to Application 4. Each Application recalls a pre-programmed structure of internal links when it is loaded.

- Application 0 is the factory default application, providing for basic speed control
- Application 1 supplies speed control using a manual or auto setpoint
- Application 2 is a set-up providing speed control with Raise/Lower Trim
- Application 3 supplies speed control using preset speeds
- Application 4 PID control

The AC30P and AC30D inverters are supplied with 2 Applications, Application 0 and Application 5. Each Application recalls a pre-programmed structure of internal links when it is loaded.

Application 0 is the factory default application, providing for basic speed control.

Application 5 supports the use of the inverter as an Active Front-End for regenerative applications.

**IMPORTANT:** *Refer to Chapter 9: Setup Wizard – to reset the inverter to factory default values which are suitable for most applications.*

### APPLICATION DESCRIPTION

#### Control Wiring for Applications

The large Application Diagrams on the following pages show the full wiring for push-button starting. The other diagrams show the full wiring for single wire starting.

When you load an Application, the input and output parameters shown in these diagrams default to the settings shown. For alternative user-settings refer to the Chapter 9 "Setup Wizard".

#### Local Control Wiring


This is the simplest installation. Every new inverter will operate in Local Control when first powered-up. The keypad is used to start and stop the inverter.

Refer to the Connection Diagram and install the:

- STO (factory fitted)
- Motor cable
- Supply cable
- Follow the earthing/grounding and screening advice

Refer to Chapter 9 "Setup Wizard".

Minimum Connections

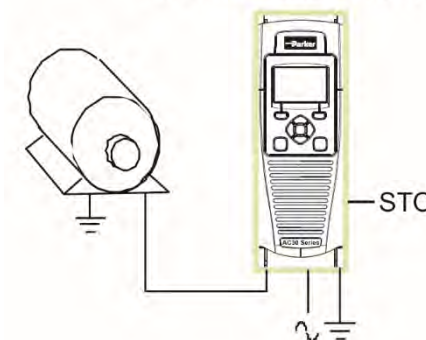

# 4-25 Installation

## Remote Control Wiring

If operating in Remote Control you will use your control panel to start and stop the inverter, via a speed potentiometer and switches or push-buttons.

Your wiring of the control terminals will be governed by the Application you use: refer to the various Applications you can select and the appropriate control wiring. Application 0 is the default Application.

The diagram below shows the **minimum** connections to operate the inverter for single-wire (switch) starting, and push-button starting. Other control connections for your Application, can be made to suit your system.


Referring to the Connection Diagram:

- Follow the instructions for Local Control Wiring, as detailed above
- Install using minimum connections (suitable for Application 0 only), or refer to the appropriate control wiring for your system.


**Note:** You can still operate the inverter in Local mode, if necessary, with any Application selected.

This application is ideal for general purpose applications. It provides push-button or switched start/stop control. The setpoint is the sum of the two analogue inputs AIN1 and AIN2, providing Speed Setpoint + Speed Trim capability.


### Minimum Connections for Application 0:

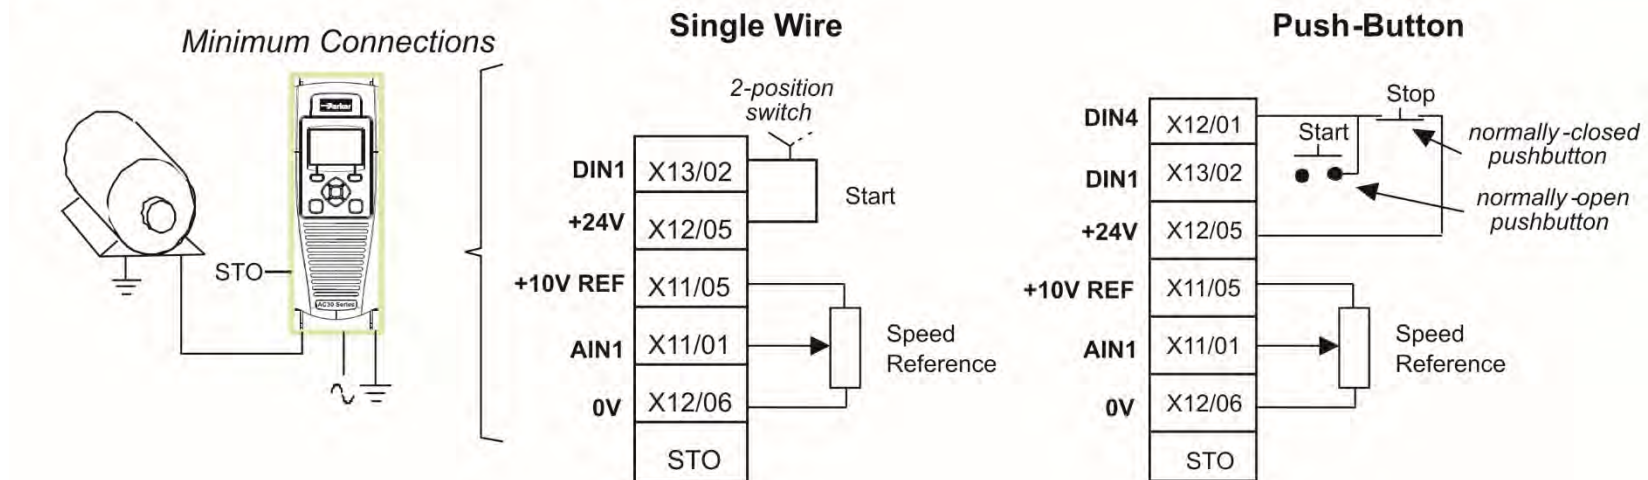

APPLICATION 0: BASIC SPEED CONTROL

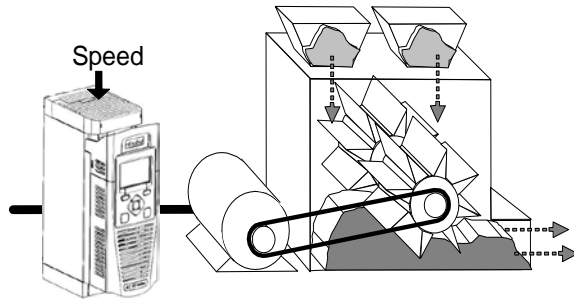


Application 0:  
 "Basic Speed Control"  
 IDEAL FOR GENERAL PURPOSE APPLICATIONS,  
 NORMAL DUTY AND HEAVY DUTY

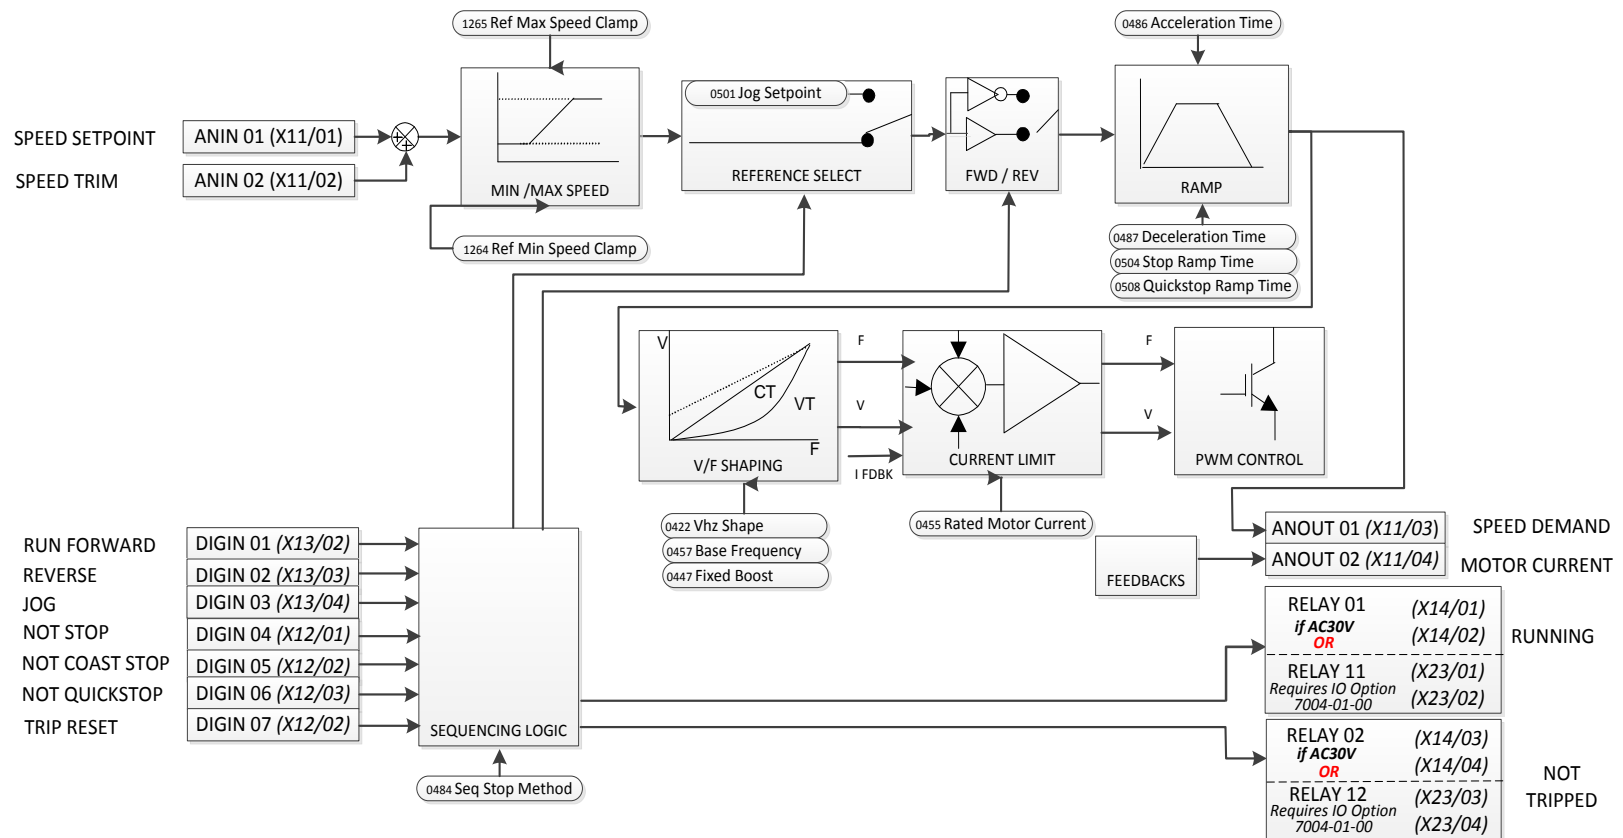


# 4-27 Installation


## Basic Speed Control Wiring

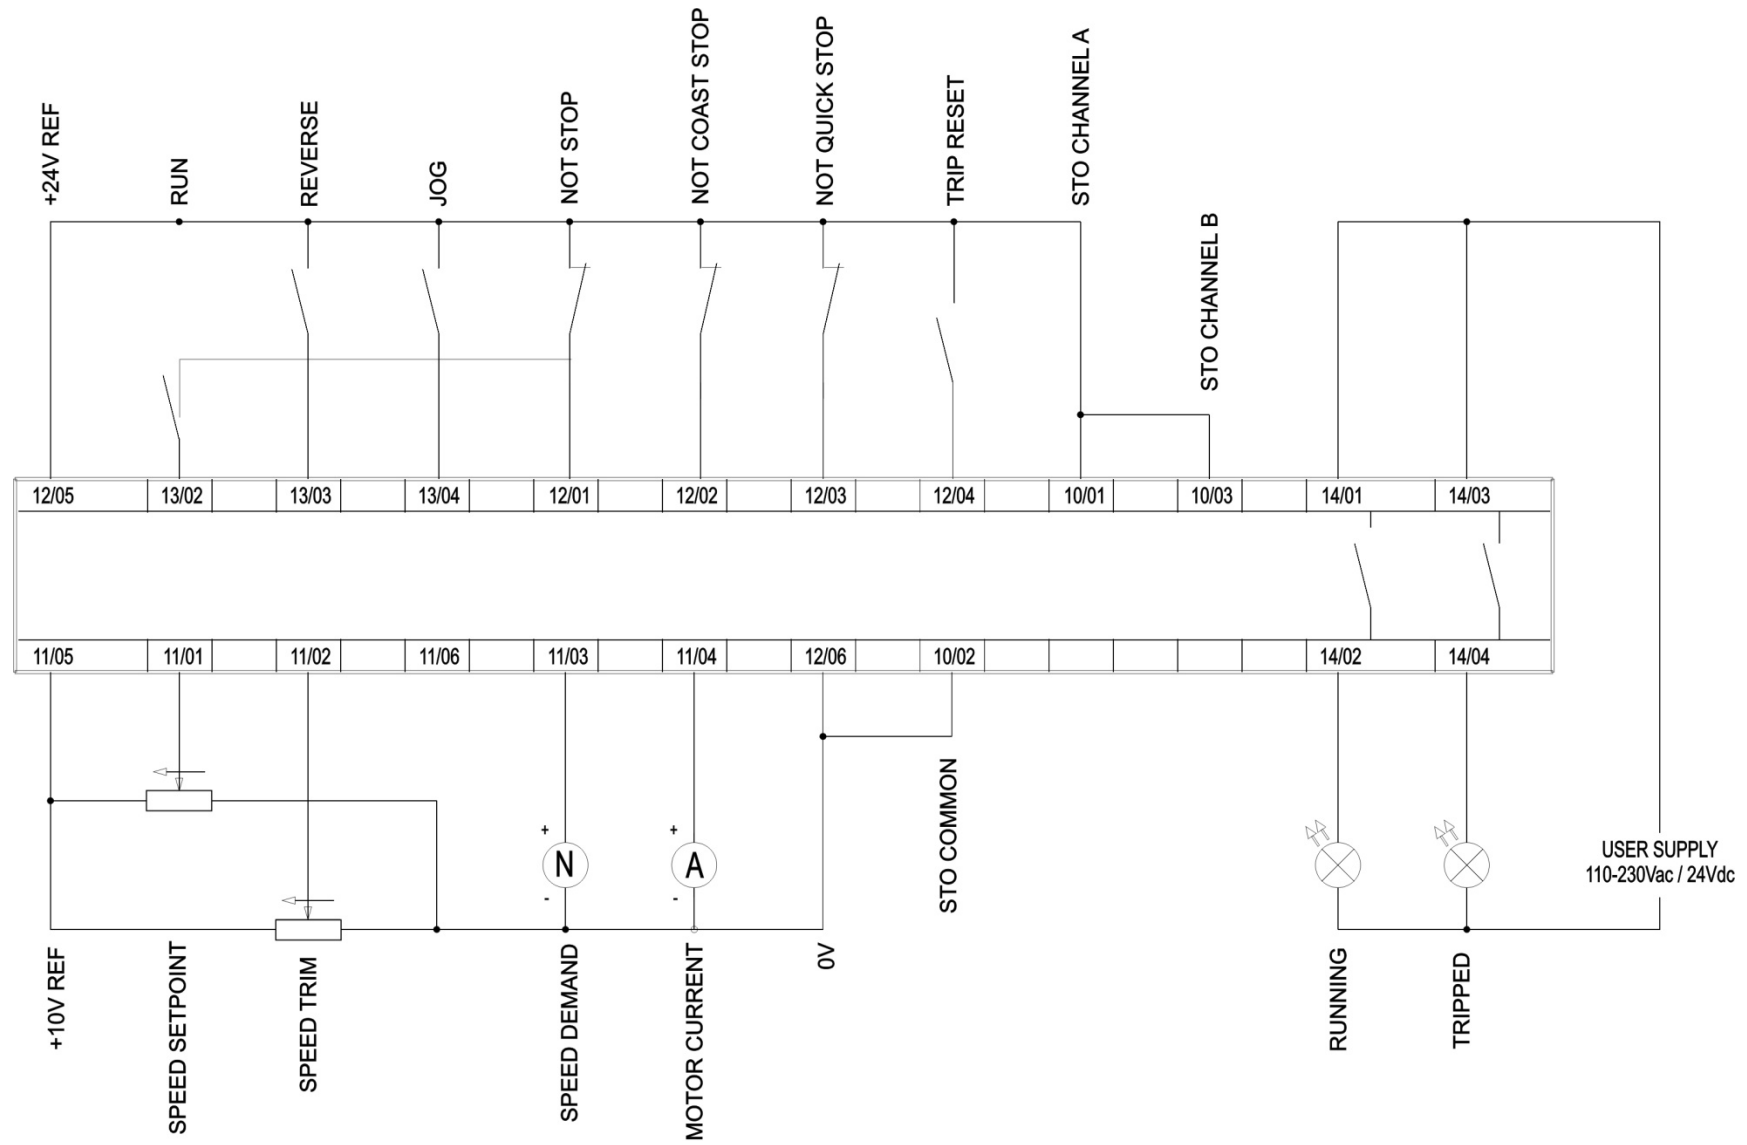

**APPLICATION 1: AUTO/MANUAL CONTROL**

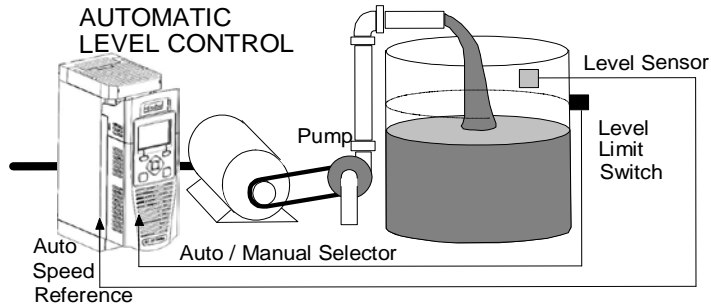

Application 1:  
 "Auto/Manual Control"  
 IDEAL FOR AUTOMATIC CONTROL  
 APPLICATIONS WITH LIMIT SWITCHES OR  
 PROXIMITY TRANSDUCERS

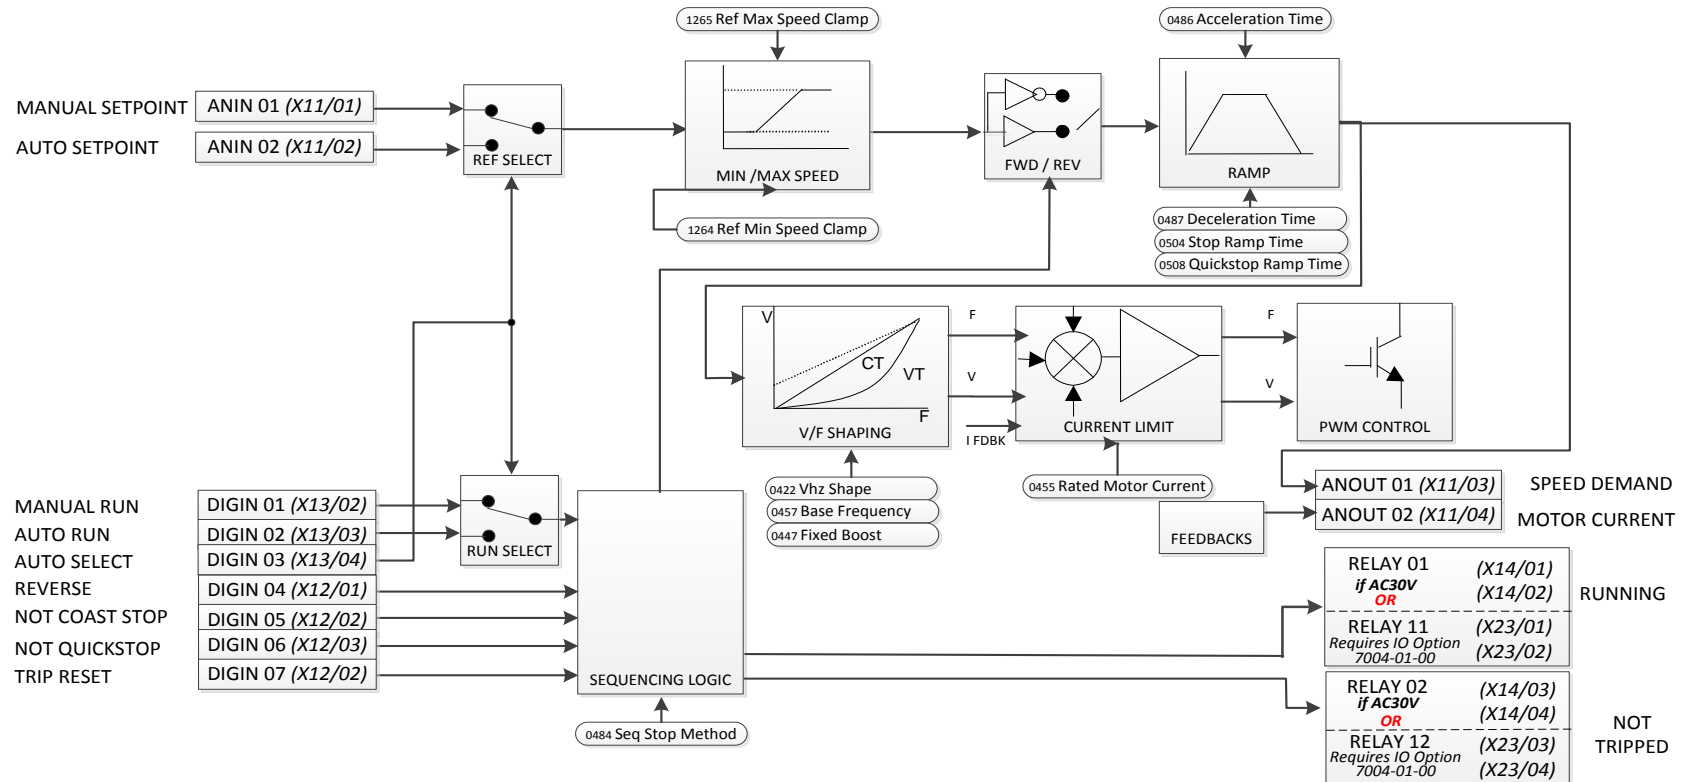


**Auto/Manual Control Application**

Two Run inputs and two Setpoint inputs are provided. The Auto/Manual switch selects which pair of inputs is active. The Application is sometimes referred to as Local/Remote.




# 4-29 Installation


## Auto/Manual Control Wiring

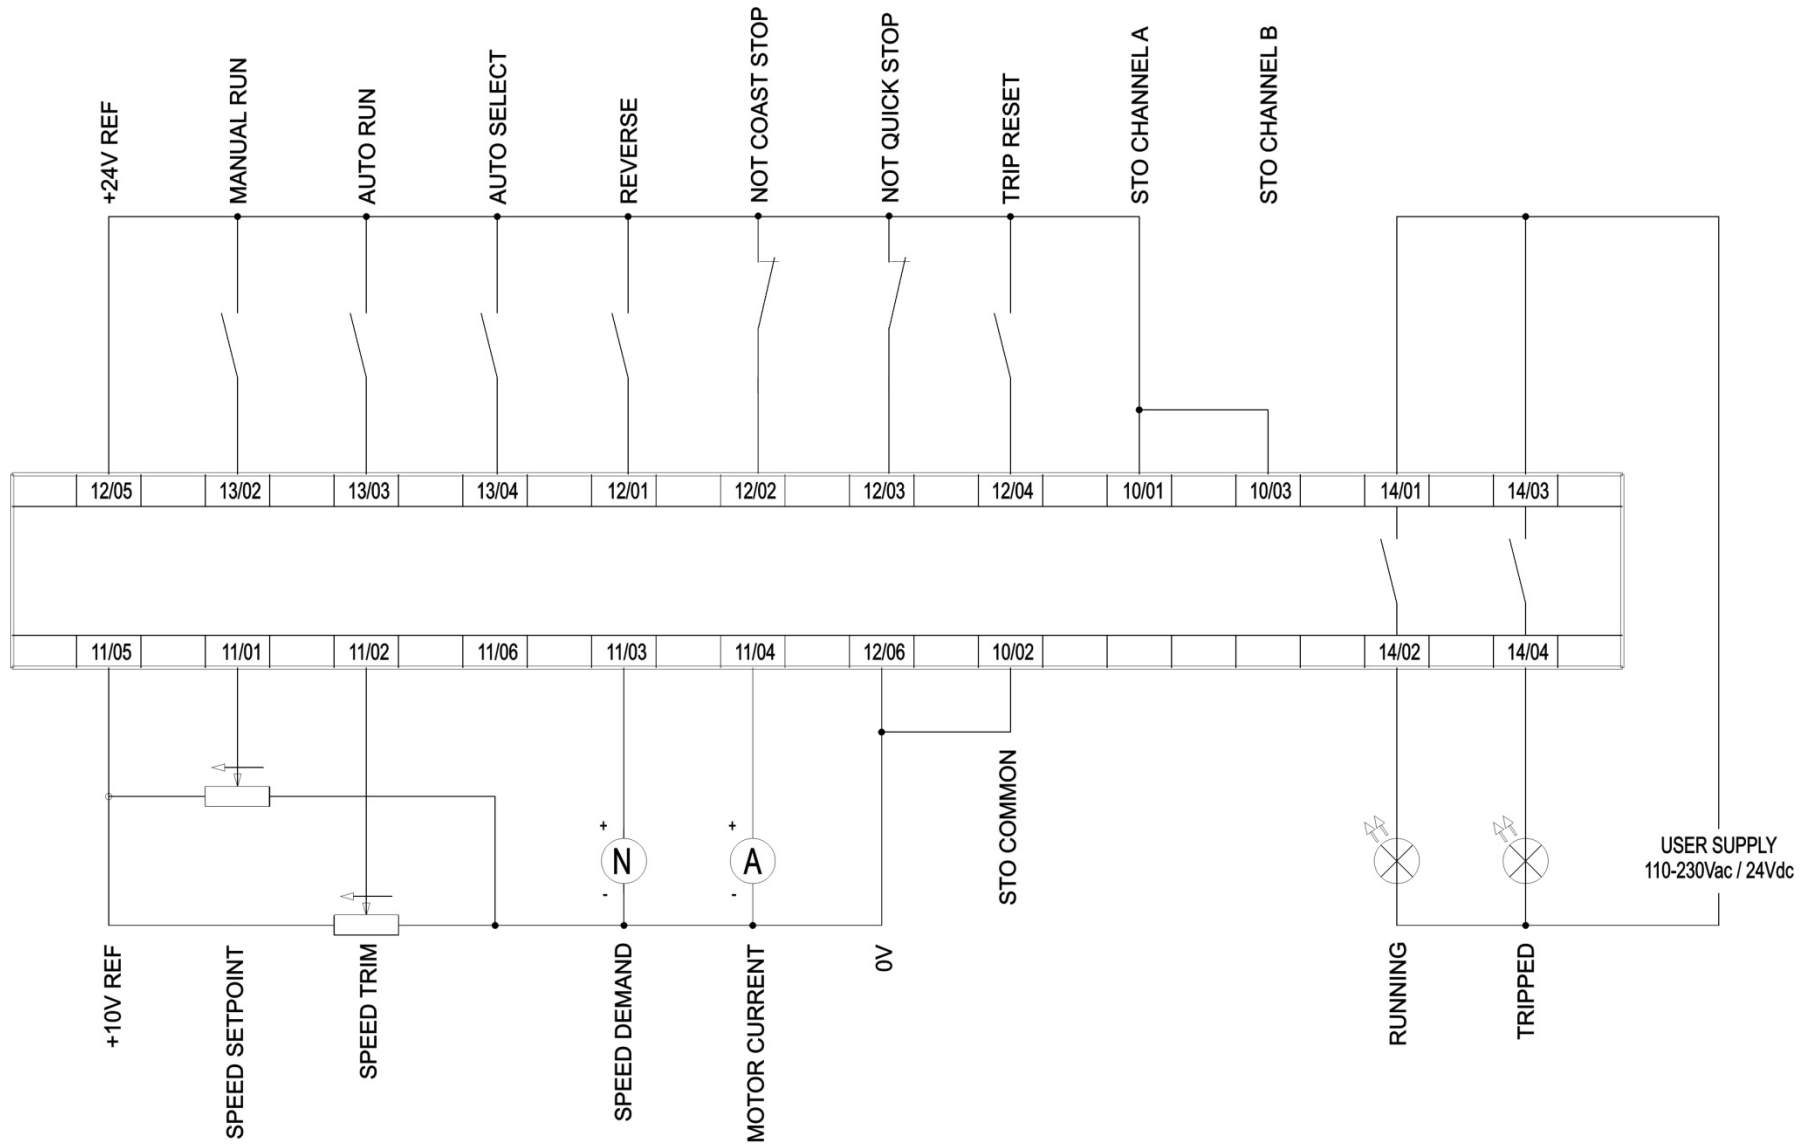

**APPLICATION 2: RAISE / LOWER TRIM**

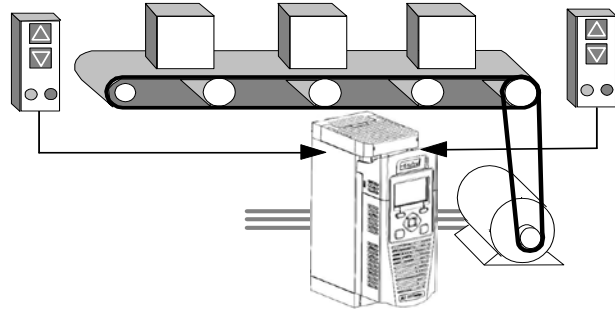

Application 2:  
 "Speed Raise/Lower"  
 IDEAL FOR APPLICATIONS REQUIRING SPEED  
 CONTROL FROM MULTIPLE LOCATIONS

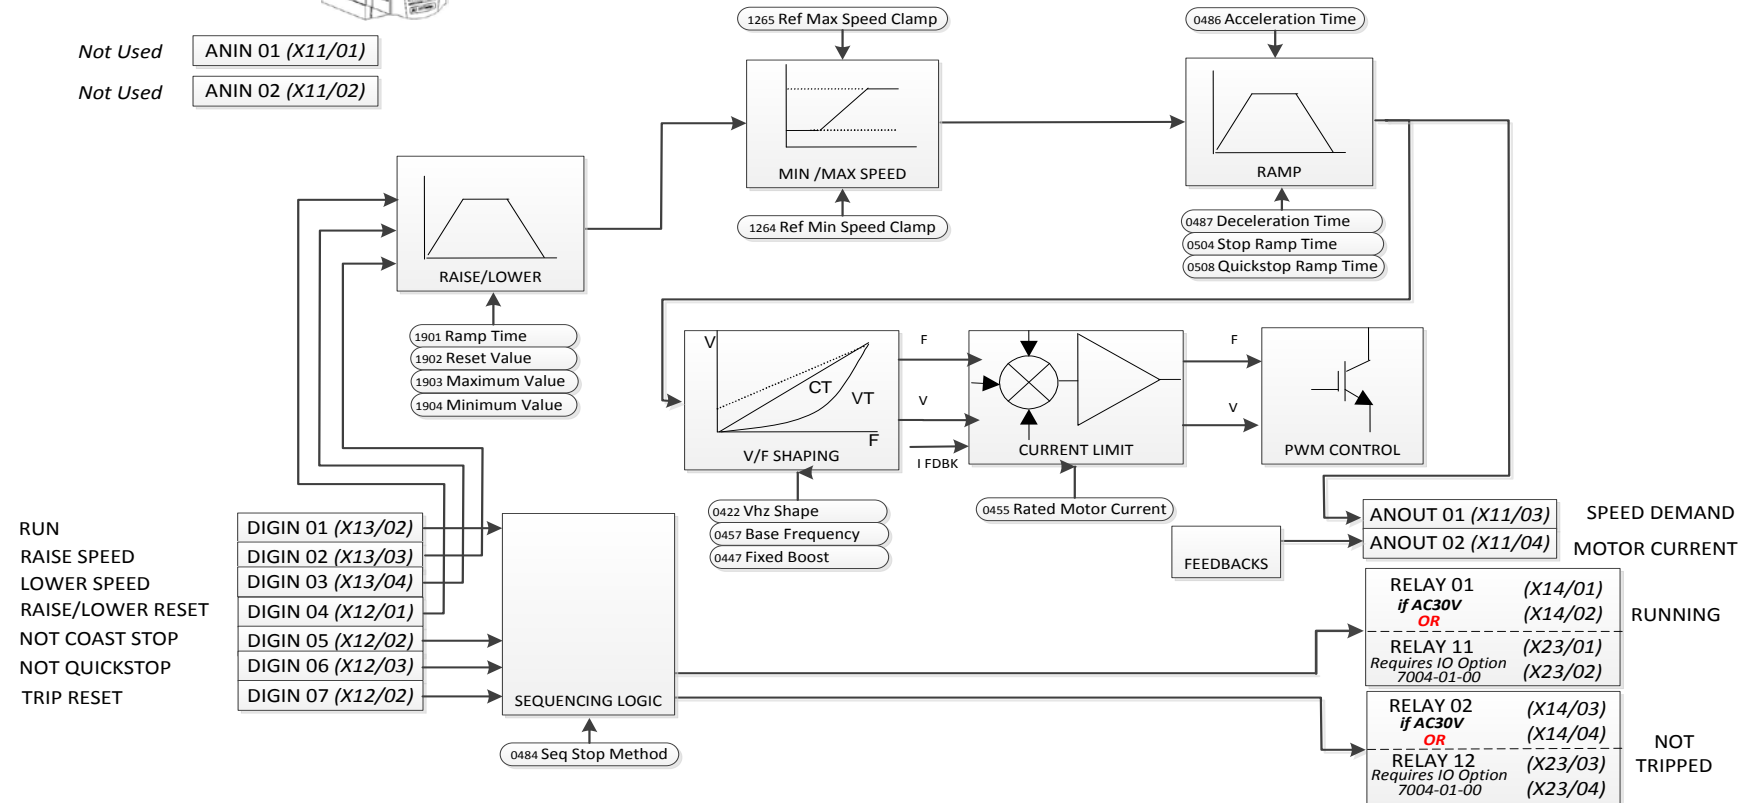


**Raise/Lower Trim Application**


This Application mimics the operation of a motorised potentiometer. Digital inputs allow the setpoint to be increased and decreased between limits. The limits and ramp rate can be set using the keypad. The Application is sometimes referred to as Motorised Potentiometer.

# 4-31 Installation


## Raise/Lower Trim Wiring

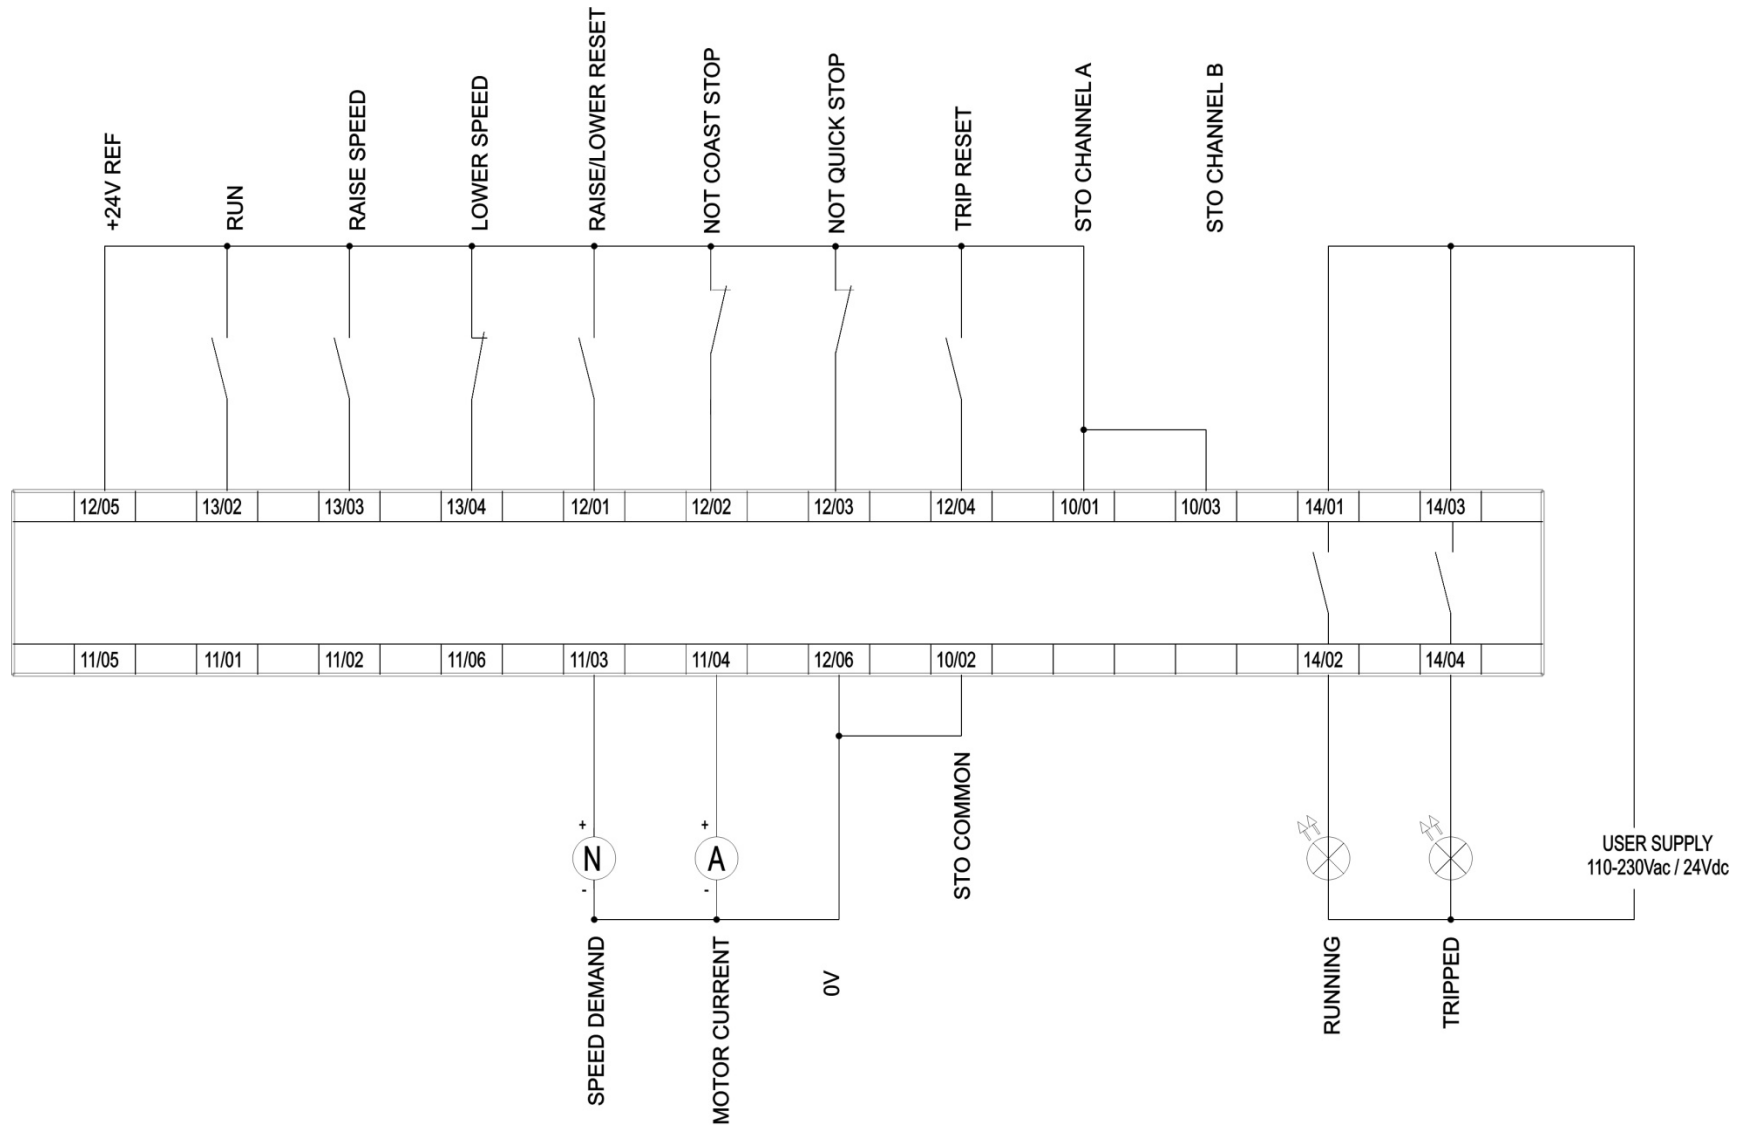

APPLICATION 3: PRESETS SPEEDS

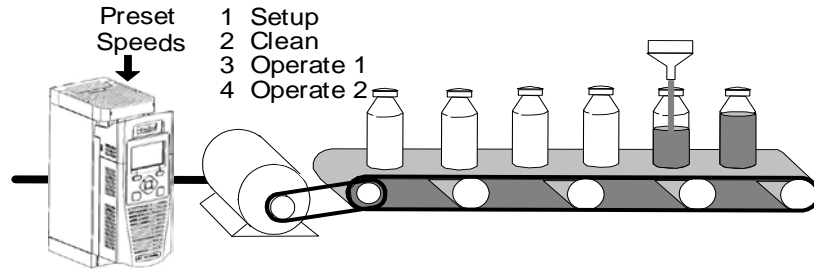

Application 3:  
 "Speed Presets"  
 IDEAL FOR GENERAL PURPOSE APPLICATIONS  
 REQUIRING MULTIPLE DISCRETE SPEED LEVELS

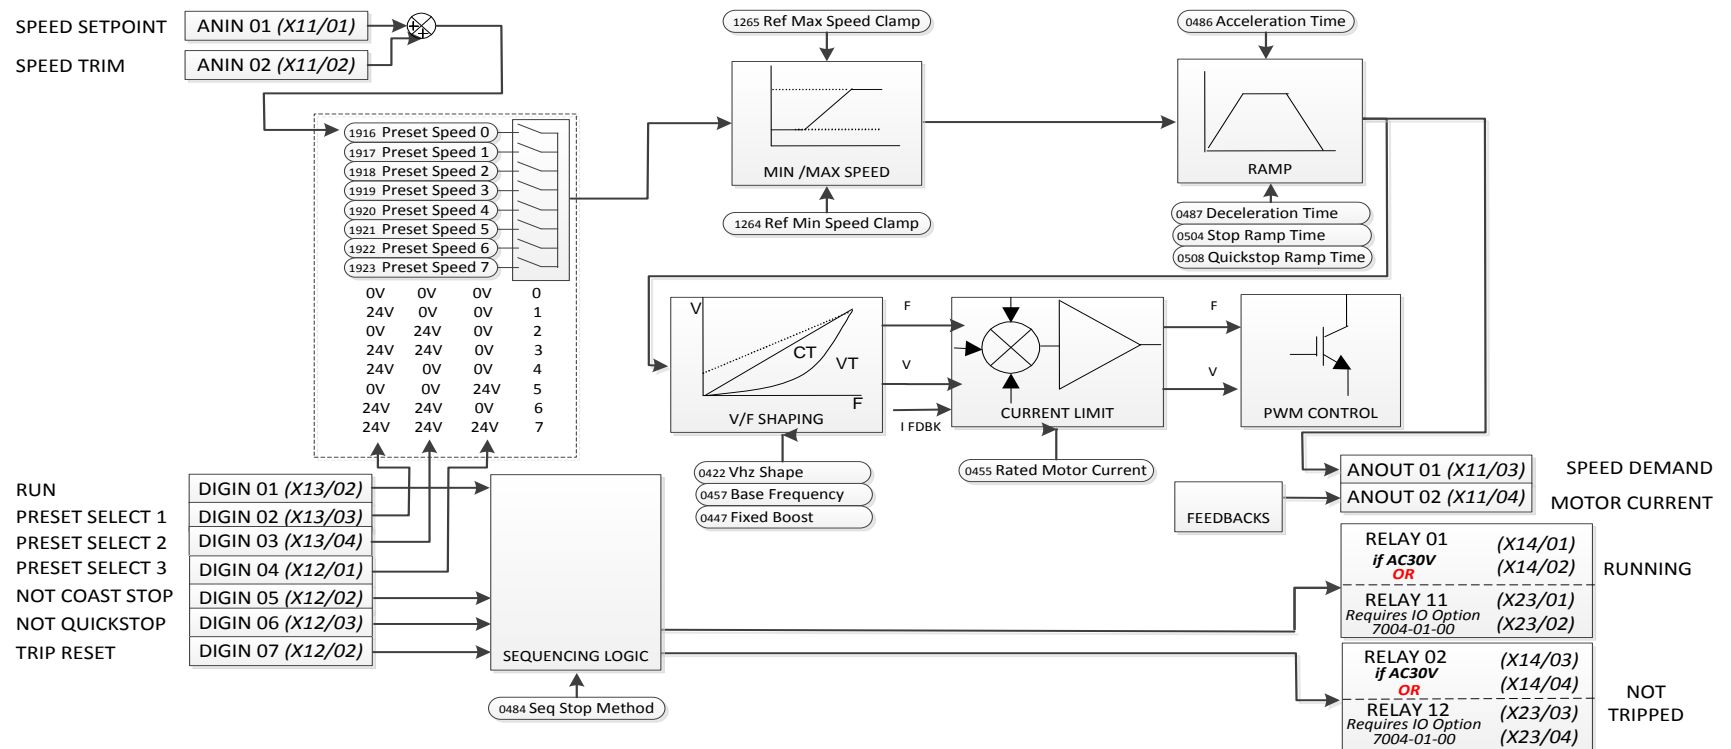

Presets Speeds Application


This is ideal for applications requiring multiple discrete speed levels.

The setpoint is selected from either the sum of the analogue inputs, (as in Application 1 and known here as PRESET 0), or as one of up to seven other pre-defined speed levels. These are selected using DIN2, DIN3 and DIN4, refer to the Truth Table above.


Edit parameters P1917 to P1923 on the keypad to re-define the speed levels of PRESET 1 to PRESET 7. Reverse direction is achieved by entering a negative speed setpoint.

# 4-33 Installation

## Presets Speeds Wiring

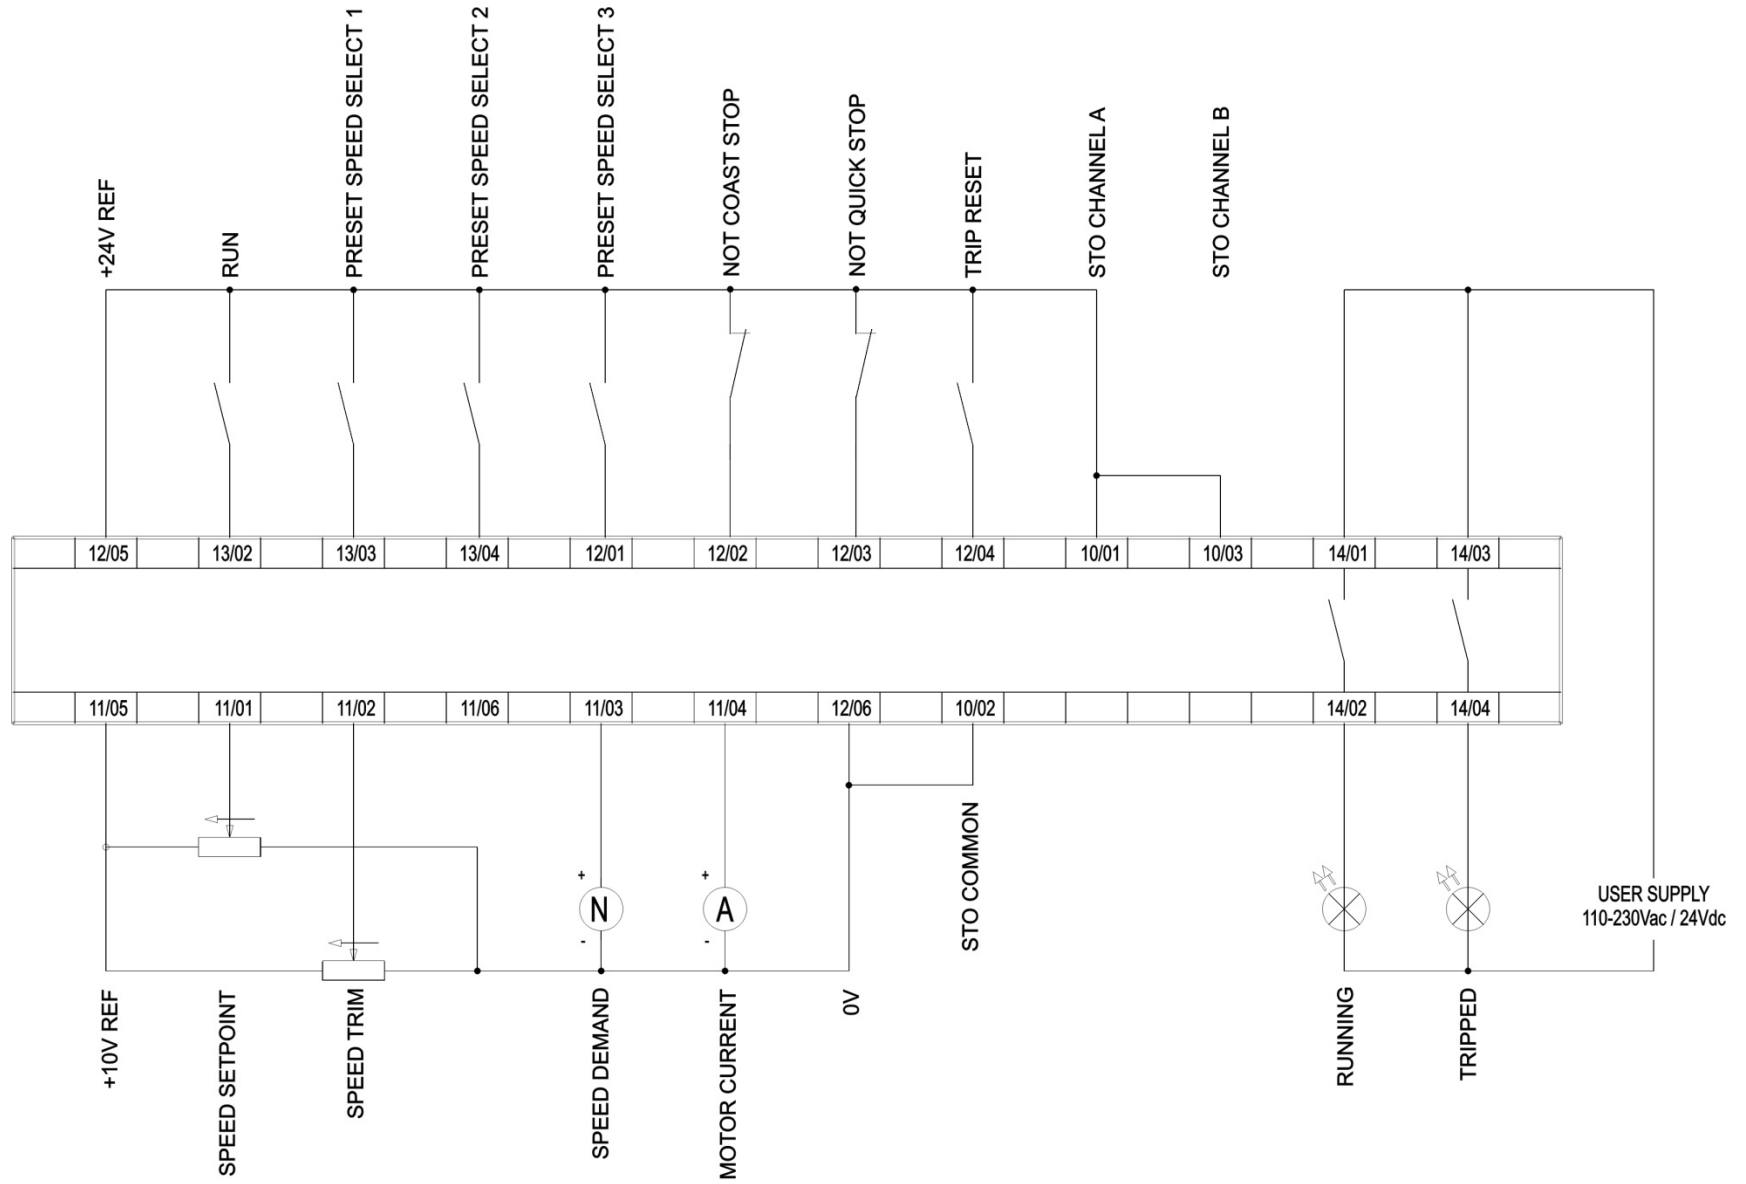


APPLICATION 4: PID CONTROL

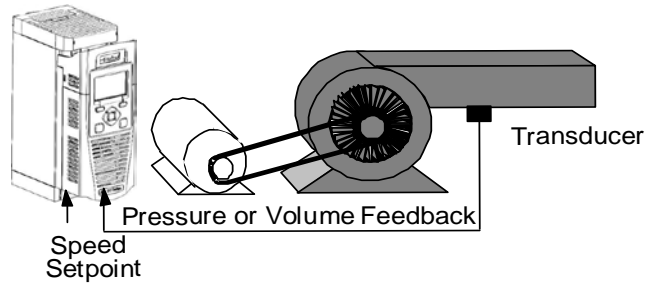

Application 4:  
"Process PID"

EASY TUNING FOR SETPOINT/FEEDBACK CONTROL APPLICATIONS REGULATING VOLUME OR PRESSURE, SUCH AS AIR HANDLING OR PUMPING

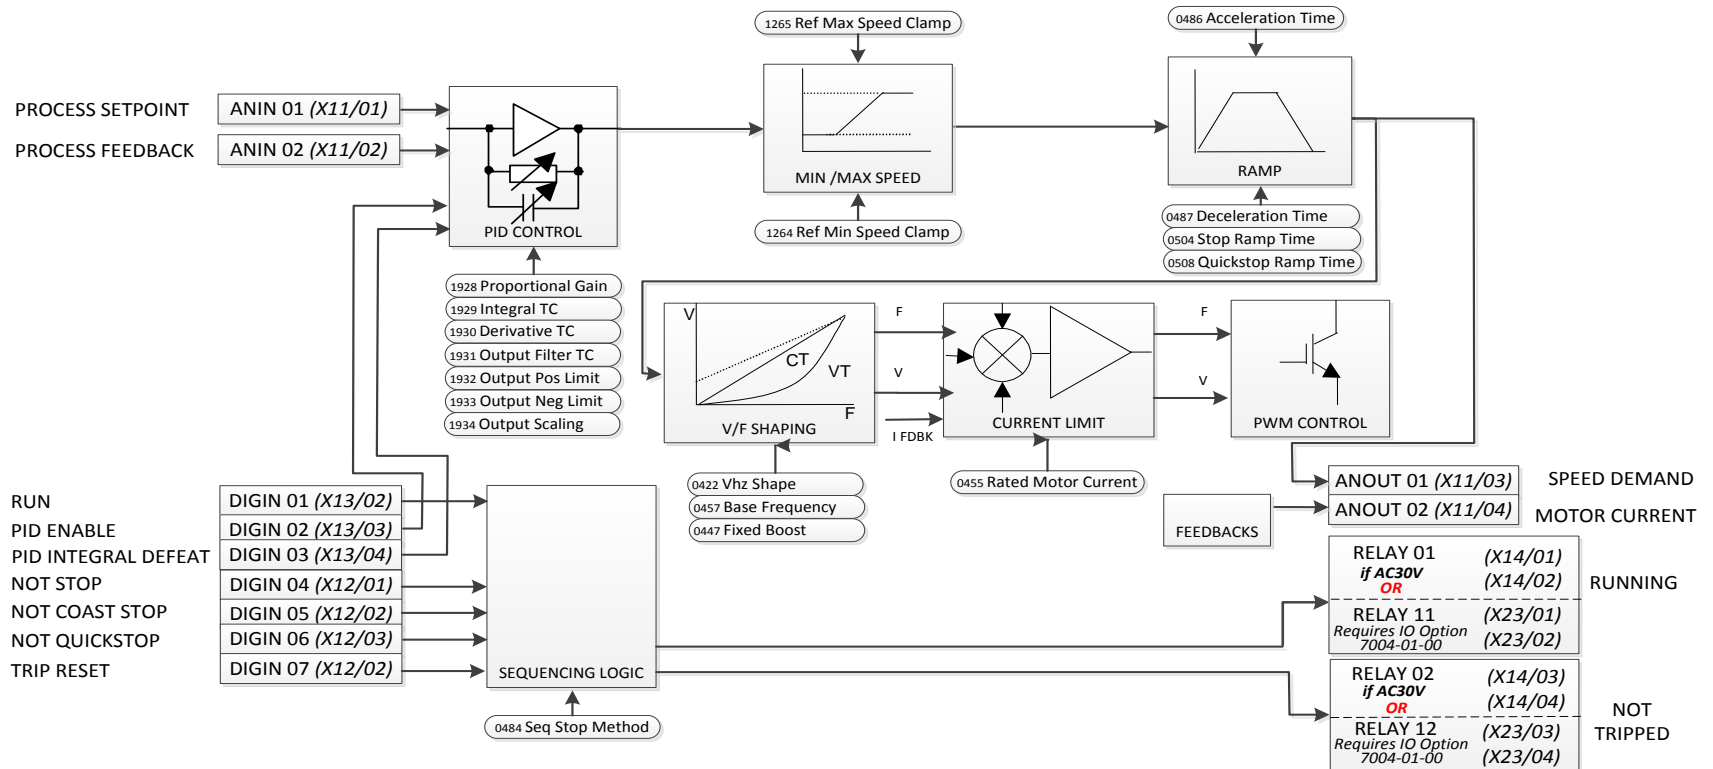


PID Control Application


A simple application using a Proportional-Integral-Derivative 3-term controller. By default the setpoint is taken from AIN1, with feedback signal from the process on AIN2, scaling parameter 1939 swaps the routing of AIN1 & 2. The scale and offset features of the analogue input blocks may be used to correctly scale these signals. The difference between these two signals is taken as the PID error. The output of the PID block is then used as the inverter setpoint.

# 4-35 Installation

## PID Control Wiring

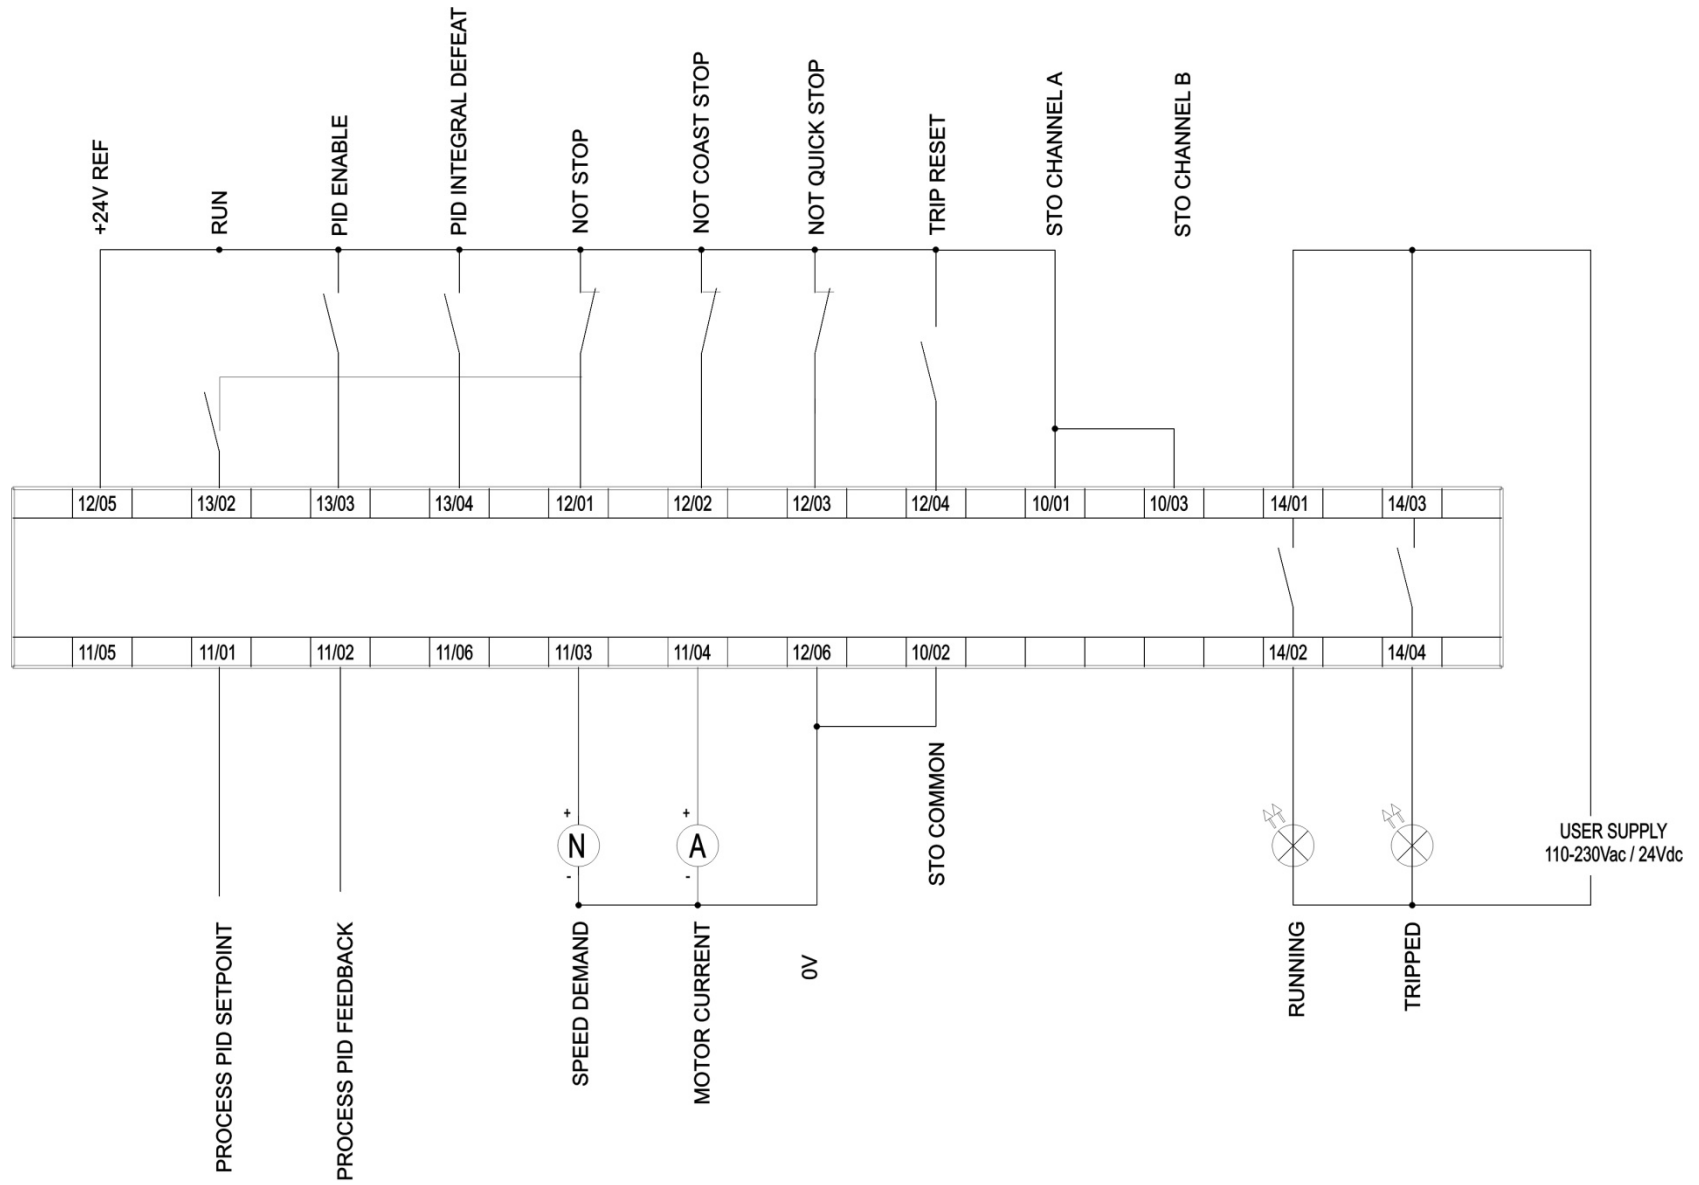


**APPLICATION 5: ACTIVE FRONT-END**

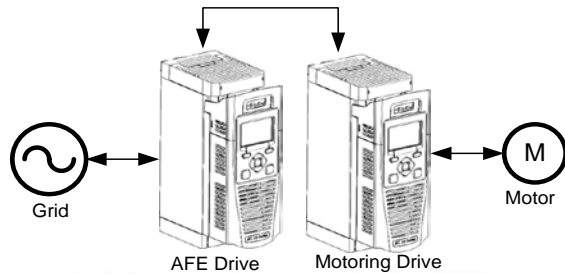

**Application 5:  
"AFE"**

ACTIVE FRONT END APPLICATION THAT ALLOWS THE DRIVE TO PERFORM REGENERATION OF ENERGY BACK INTO THE GRID, AND EXECUTES CONTROL OF EXTERNAL PRECHARGE SWITCHES AND CONTACTORS

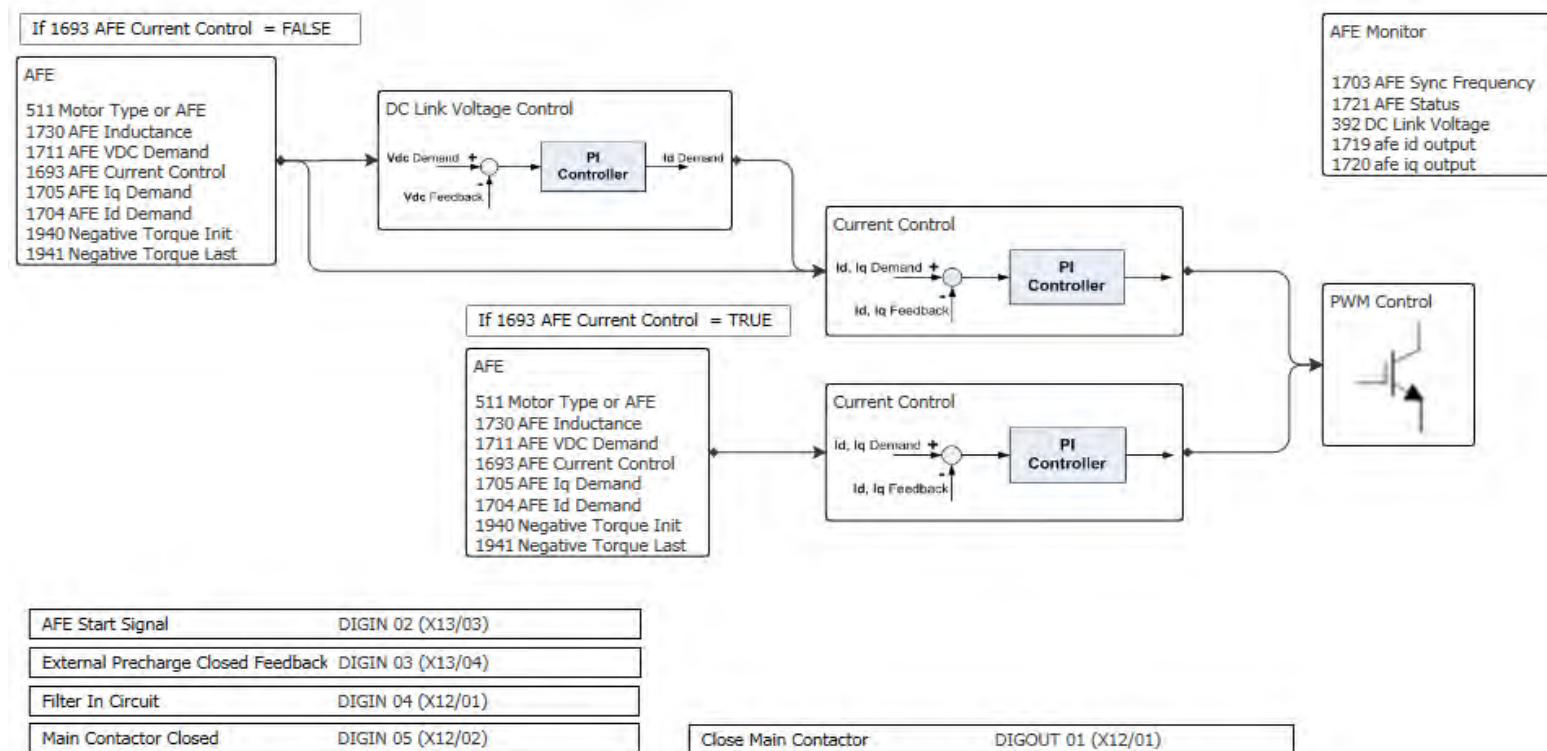


**AFE Control Application**

A simple application that controls external precharge relays and contactors, and ensures that all pre-requisites for regenerative operation of the drive are satisfied. If the drive is used as an active front end this application **MUST** be loaded and enabled. If the shown control wiring to the control card terminals is correct no further modification to the application is needed to be able to run in AFE mode. (The line sync card needs to be wired to the encoder option too.)



# 4-37 Installation

## AFE Control Wiring – Excludes 7004-04-00 Wiring

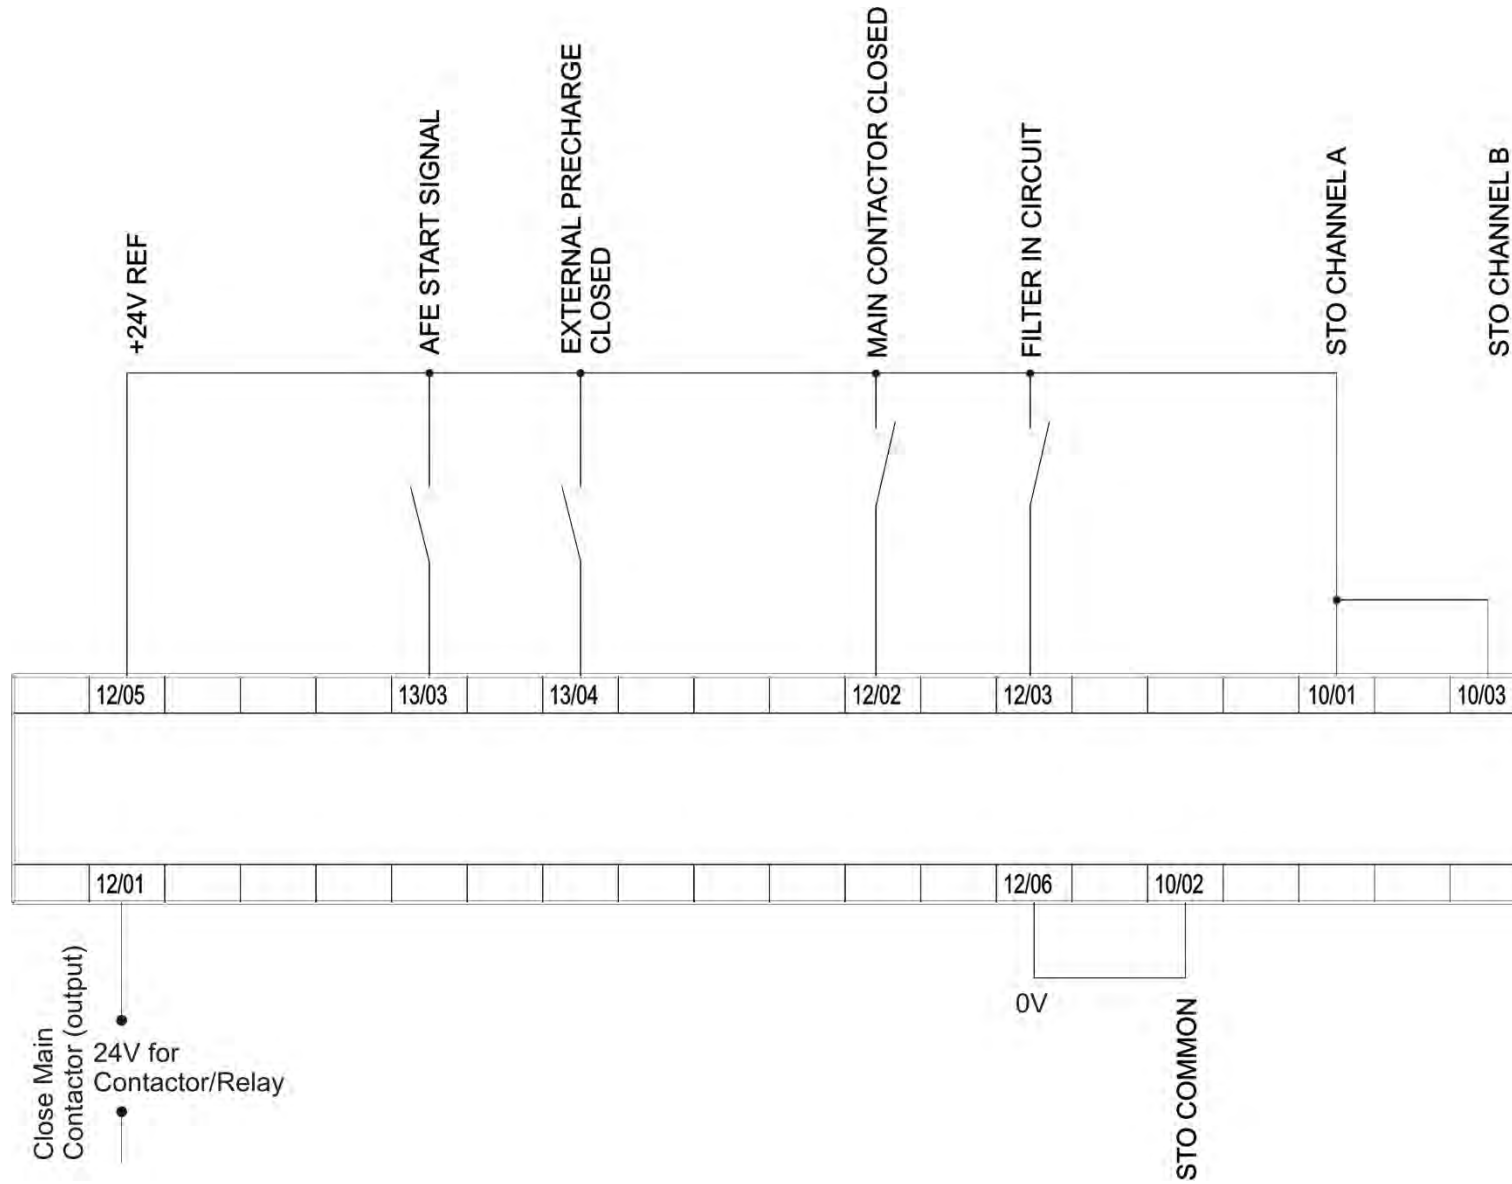

## TERMINAL BLOCK WIRE RANGE

Wire sizes for Europe should be chosen with respect to the operating conditions and your local National Electrical Safety Installation Requirements. Local wiring regulations always take precedence. For North American UL wire sizes refer to Appendix C: "Compliance" - Requirements for UL Compliance.

Frame Size	Power Terminals (minimum/maximum acceptance for aperture)	Earth Connections	Control Terminals
Frame D	0.05 - 6 mm <sup>2</sup>	M4 ring crimp	0.229 - 2.5 mm <sup>2</sup>
Frame E	0.05 - 6 mm <sup>2</sup>	M4 ring crimp	0.229 - 2.5 mm <sup>2</sup>
Frame F	1 - 10 mm <sup>2</sup> (*16 mm <sup>2</sup> )	M4 ring crimp	0.229 - 2.5 mm <sup>2</sup>
Frame G	1.3 - 25 mm <sup>2</sup>	M5 ring crimp	0.229 - 2.5 mm <sup>2</sup>
Frame H	M8 post, accepting crimps or lugs up to width 26.5mm (minimum 25mm <sup>2</sup> wire size)	M8 ring crimp	0.229 - 2.5 mm <sup>2</sup>
Frame J	M8 post, accepting crimps or lugs up to width 32mm (minimum 25mm <sup>2</sup> wire size)	M8 ring crimp Up to width 26.5mm	0.229 - 2.5 mm <sup>2</sup>
Frame K	M12 post, accepting crimps or lugs up to width 38mm	M8 ring crimp	0.229 - 2.5 mm <sup>2</sup>
*The larger wire size can be used provided a crimp is fitted to the wire			

# 4-39 Installation

## TERMINAL TIGHTENING TORQUES

Frame Size	Power Terminals	DC Bus Terminals	Brake Terminals	Ground Stud
Frame D	0.56-0.8Nm (5-7 lb-in)	0.56-0.8Nm (5-7 lb-in)	0.56-0.8Nm (5-7 lb-in)	1.8Nm (16 lb-in)
Frame E	0.56-0.8Nm (5-7 lb-in)	0.56-0.8Nm (5-7 lb-in)	0.56-0.8Nm (5-7 lb-in)	1.8Nm (16 lb-in)
Frame F	1.35Nm (12 lb-in)	1.35Nm (12 lb-in)	1.35Nm (12 lb-in)	1.8Nm (16 lb-in)
Frame G	2.0Nm (18 lb-in)	<sup>1</sup> 2.0Nm or 2.5Nm (18 lb-in or 22 lb-in)	2.0Nm (18 lb-in)	3.6Nm (32 lb-in)
Frame H	20Nm Max. (177 lb-in)	20Nm Max. (177 lb-in)	2.0Nm (18 lb-in)	20Nm Max. (177 lb-in)
Frame J	20Nm Max. (177 lb-in)	20Nm Max. (177 lb-in)	20Nm Max. (177 lb-in)	20Nm Max. (177 lb-in)
Frame K	38Nm Max. (336 lb-in)	38Nm Max. (336 lb-in)	38Nm Max. (336 lb-in)	20Nm Max. (177 lb-in)

<sup>1</sup> Cream or black coloured power terminals 2.0Nm (18 lb-in)  
Green coloured power terminals 2.5Nm (22 lb-in)

### OPTIONAL EQUIPMENT

Refer to Chapter 5 Associated Equipment.

### BRAKE WIRING

Refer to Chapter 5 Associated Equipment on wiring details.

## Fitting a Remote GKP

When fitting the GKP remotely to either a cubicle or panel mount it **must** be fitted to a flat surface. Maximum cable length < 3 meters.

- 7001-00-00 – includes the GKP only
- 7001-00-01 - includes the GKP, 3m connection lead and screws.
  - If ordered and supplied with the inverter the connection lead is **NOT** supplied, to order the lead the part number is LA501991U300.

### Cut out details:


#### GKP – Reverse side

The yellow dotted line is the cutout detail to allow remote fitting the connection lead, also shows screw hole details.

Use M3 x 10 self tapping screws.

Connection lead RS232/REM OP STA with a Steward 28A2025-OAO connector.

All measurements in millimeter.

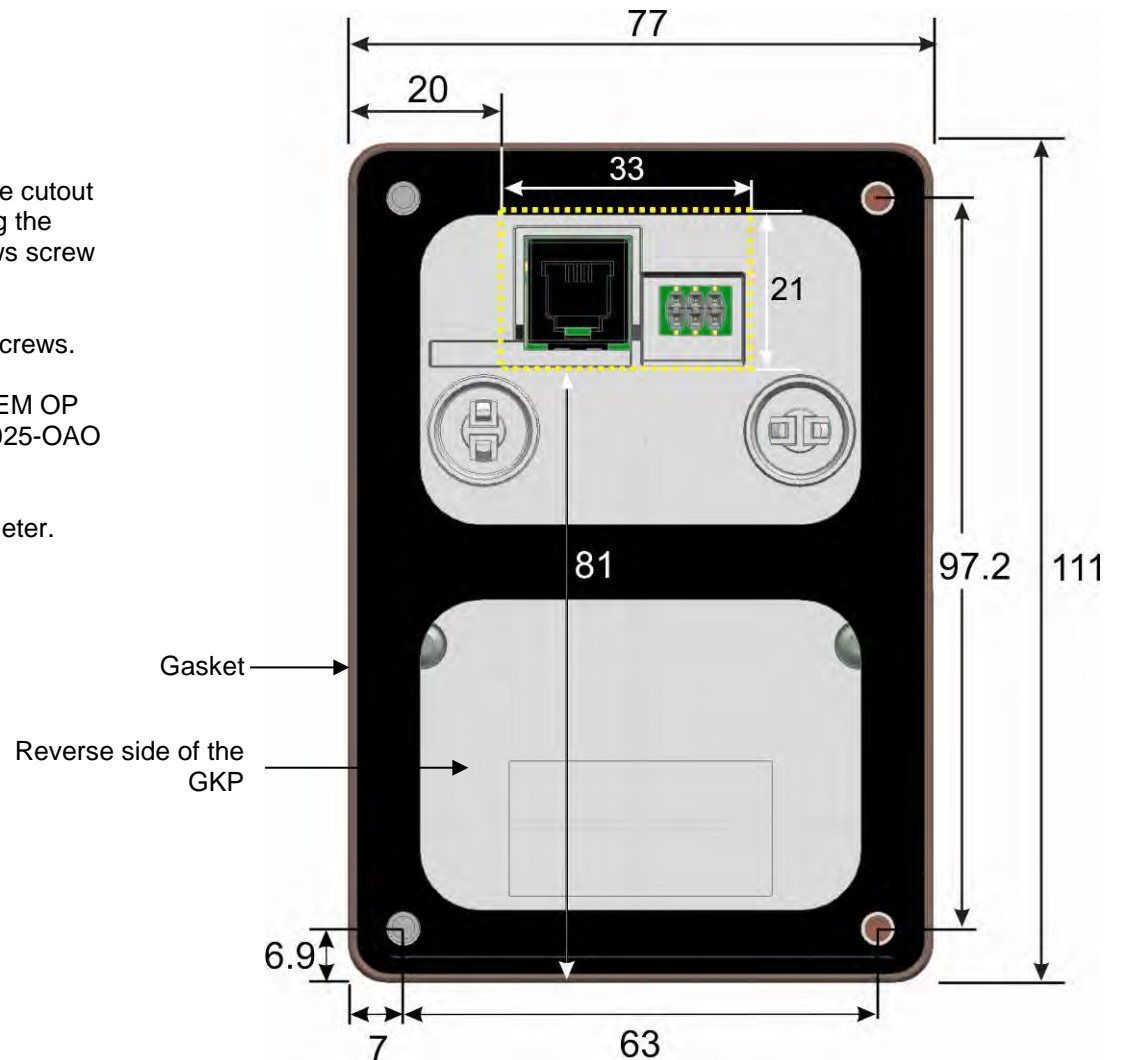

## 4-41 Installation

# Getting Started


### GKP SETUP WIZARD

#### Purpose of the Setup Wizard

The purpose of the setup wizard is to configure the inverter in a clear and concise manner.

First familiarize yourself with Chapter 7 Graphical Keypad, for the keypad functions.

#### Starting the Setup Wizard

The Setup Wizard is automatically invoked when the inverter is reset to factory default settings. The setup wizard may be invoked at any other time by navigating to the Welcome Screen at the “top” of the menu tree the pressing the  key, Soft Key 1.

#### Running the Setup Wizard

At each point in the wizard pressing the OK key selects the displayed value and moves on to the next step. Pressing **Soft Key 1** moves back a step. Pressing the UP and DOWN keys modifies the selected value.

#### Setup Wizard Stages

After selecting the required view level and language, the next option is “Set Factory Defaults”. Changing this parameter to TRUE then pressing OK resets all parameters back to the default value determined by the inverters hardware configuration. If this choice is left FALSE the setup wizard starts with all parameters with their previously set values. Accepting each choice without change by pressing OK will result in no change to the inverter’s configuration.

The rest of the Setup Wizard consists of a several sections. Each section corresponds to a functional component of the inverter, for example:

- Application selection
- IO Option, (includes the Encoder)
- Analog input and output ranges.
- Motor Data
- Motor Control
- Fieldbus options
- On-board Ethernet
- Auto tune


If not required, any section may be skipped.

The default setting for all parameters depends on earlier answers and on the physical configuration of the inverter. All data entered is automatically saved without the need for any additional commands.

#### Finalising Setup

Once the Setup Wizard has been run to completion the feature is automatically disabled. Re-starting the inverter will not cause the Setup Wizard to be run again. (If it is desired to re-run the Setup Wizard, this can be achieved as detailed above in “Starting the Setup Wizard”).



For complete details go to “Chapter 9 Setup Wizards”.

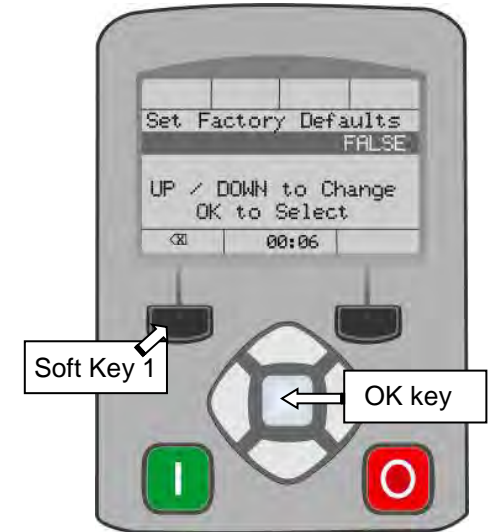

## ETHERNET COMMUNICATIONS

The inverter comes with built-in Ethernet providing communications with the PC programming tools PDQ and PDD, a Modbus TCP server and a web server. See Chapter 12 - Ethernet for recommended cable information.

### Connecting the Ethernet Cable – AC30V

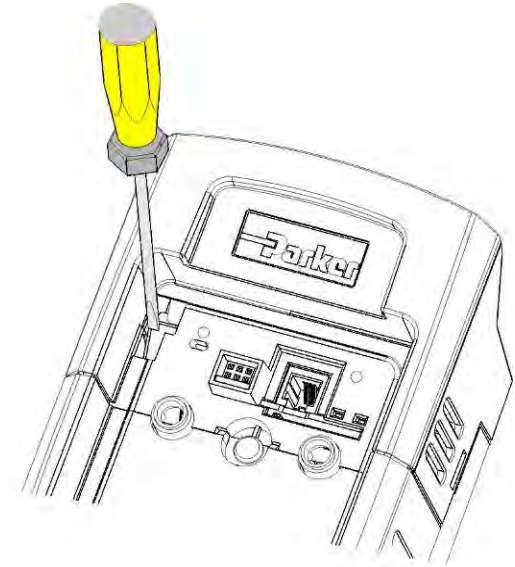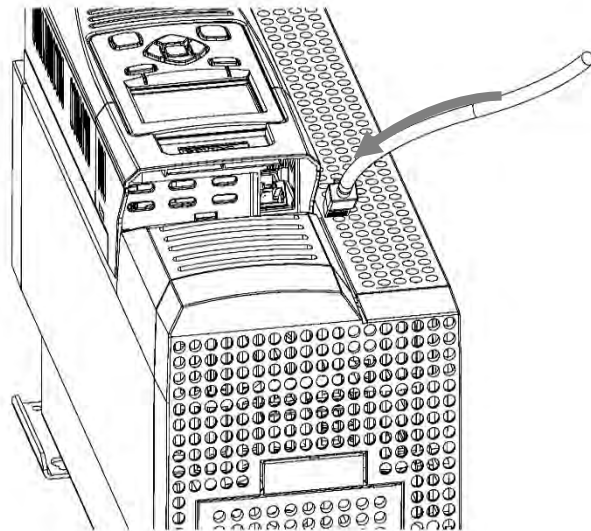


### Disconnecting the Ethernet Cable – AC30V


To remove the cable first remove the GKP and then insert a screwdriver to release the catch on the Ethernet clip.

## 4-43 Installation

### Connecting the Ethernet Cables – AC30P and AC30D

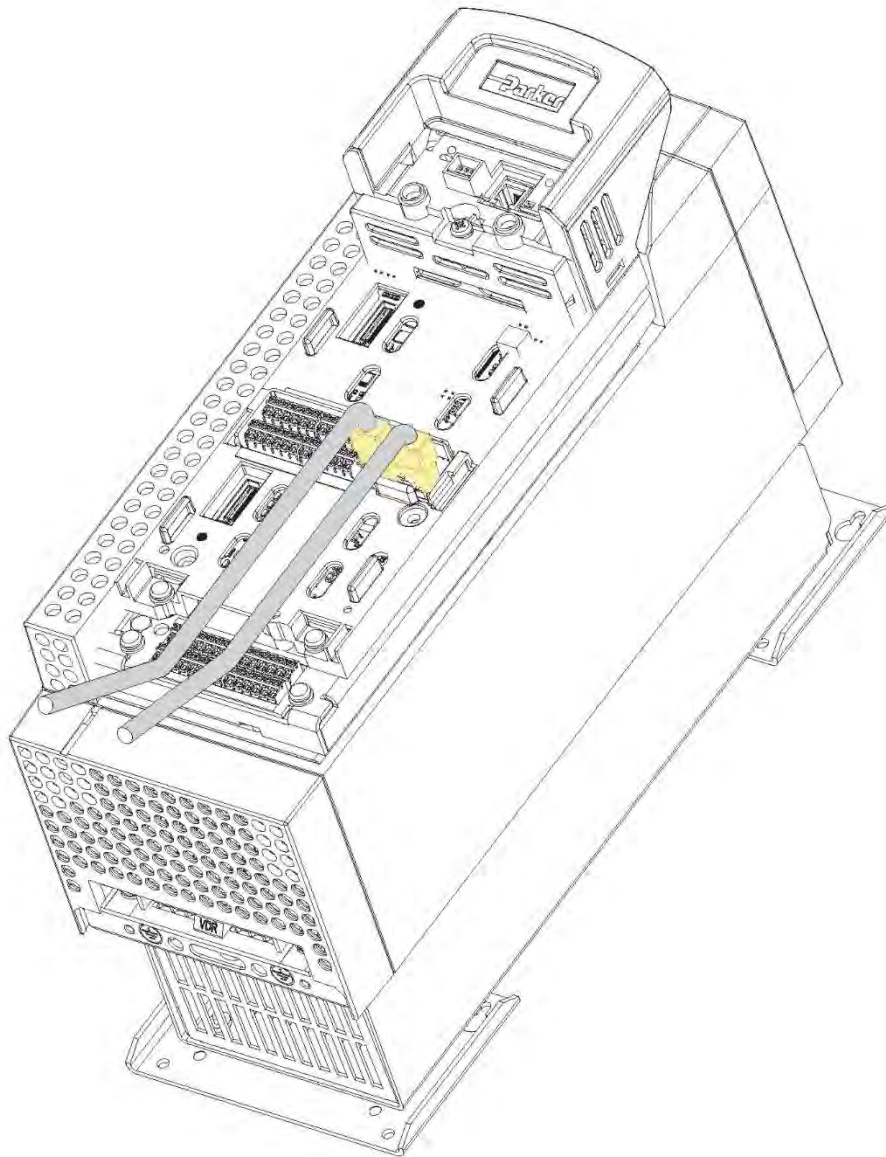

**DO NOT TOUCH**

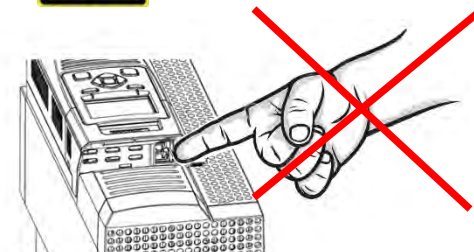

**DO NOT touch the board surface via the aperture shown**

### Setting the IP Address

The inverter's Ethernet requires an IP address to participate in communications. The factory default is set so that an IP address is selected automatically depending on the network on which it is connected. It may obtain an IP address using DHCP or Auto-IP.

#### DHCP

If the network has a DHCP (Dynamic Host Communications Protocol) server, then the inverter will obtain an address from this.

#### Auto-IP

If the network has no DHCP server or if connecting the inverter directly to a PC then the IP address will be chosen randomly by the inverter from the link-local address range 169.254.\*.\*. Note that when connecting the inverter directly to a PC it may take 1 – 2 minutes for the PC to obtain a link-local address.

#### Manual

The IP address may be fixed if required. The DHCP and Auto-IP must both be disabled.

The current IP address of the inverter may be monitored using the following parameters **0926 IP Address, 0927 Subnet Mask, 0928 Gateway Address**, found in menu: **Parameters::Base Comms::Ethernet**

The state of the Ethernet may be monitored using the parameter **0919 Ethernet State** and from the Ethernet icon on the GKP status bar. 

### More Information

For more information on customizing and troubleshooting the inverter's Ethernet see Chapter 12 – Ethernet.

Accessing the inverter's web page is also described in Chapter 12 and information on using the Modbus TCP server can be found in Appendix A - Modbus TCP.



## 4-45 Installation

# Firmware Update

### UPDATING THE INVERTER FIRMWARE


#### Prepare SD card

Copy the new firmware to an SD card, ensure the file is named firmware.30x for the AC30V or firmware.30p for the AC30P and AC30D.


New firmware is available at [www.parker.com/ssd/pdg](http://www.parker.com/ssd/pdg) or can be copied from the Parker Drive Quicktool "Drive Maintenance" task.

#### Perform the upgrade

**CAUTION: DO NOT REMOVE POWER FROM THE INVERTER DURING THE FIRMWARE UPDATE.**

Insert the SD in the inverter's SD slot. Replace the GKP if necessary. The "Update Firmware" will now be visible in the wizard menu. This is accessed from the top menu by pressing the  key, (Soft Key 1).


To start the update, change the value from FALSE to TRUE. The inverter will restart once the process is complete.

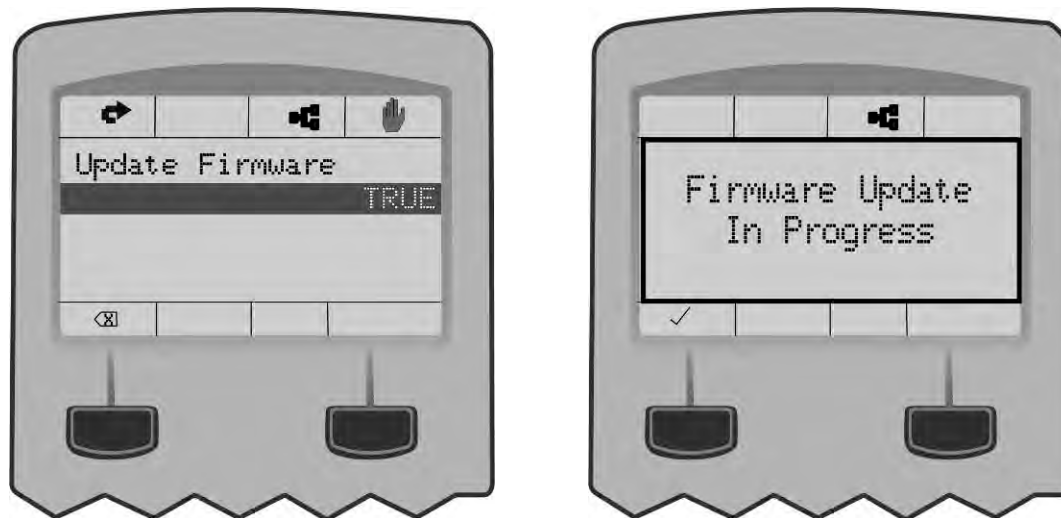

# Chapter 5: Associated Equipment

## MAIN POINTS


Connect the associated equipment to an AC Fed AC30 in the following order:

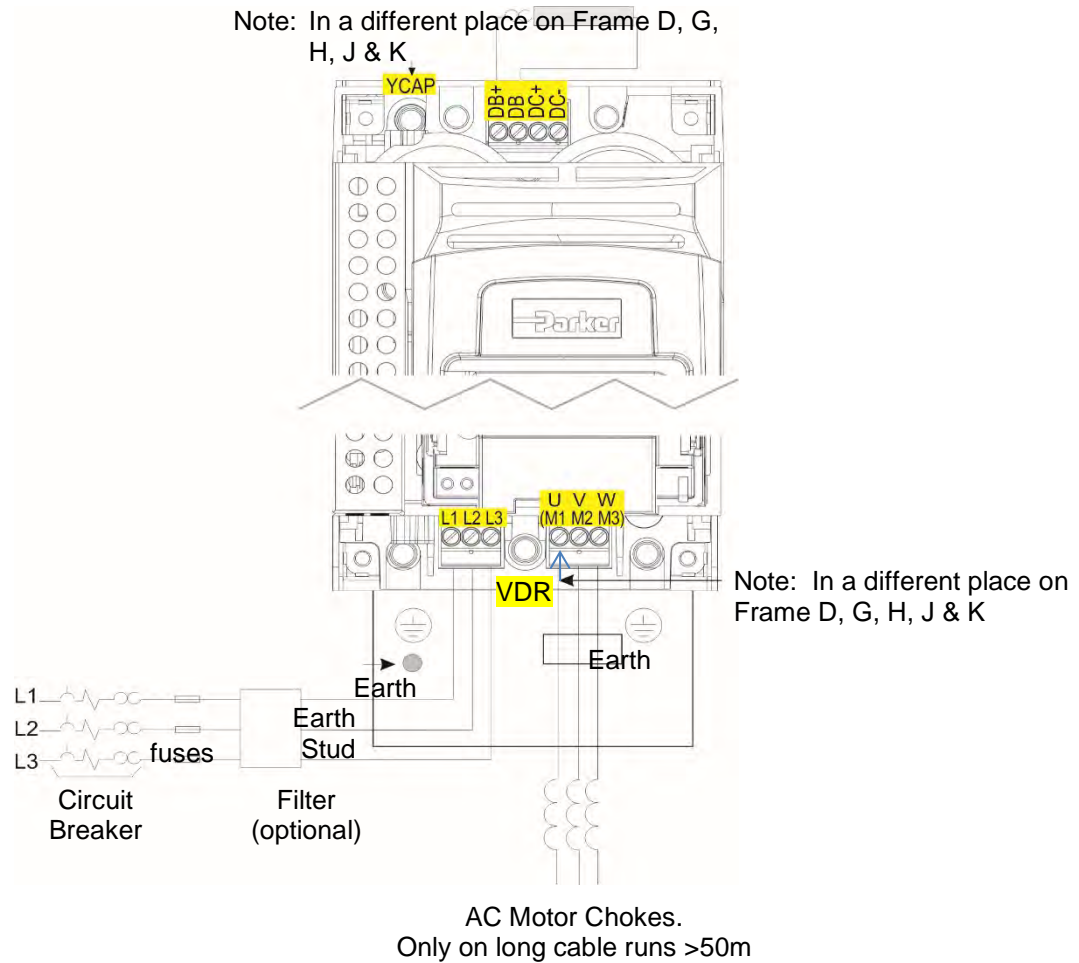

Frame E Illustrated

## 5-2 Associated Equipment

Connect the associated equipment to a DC Fed AC30 in the following order:

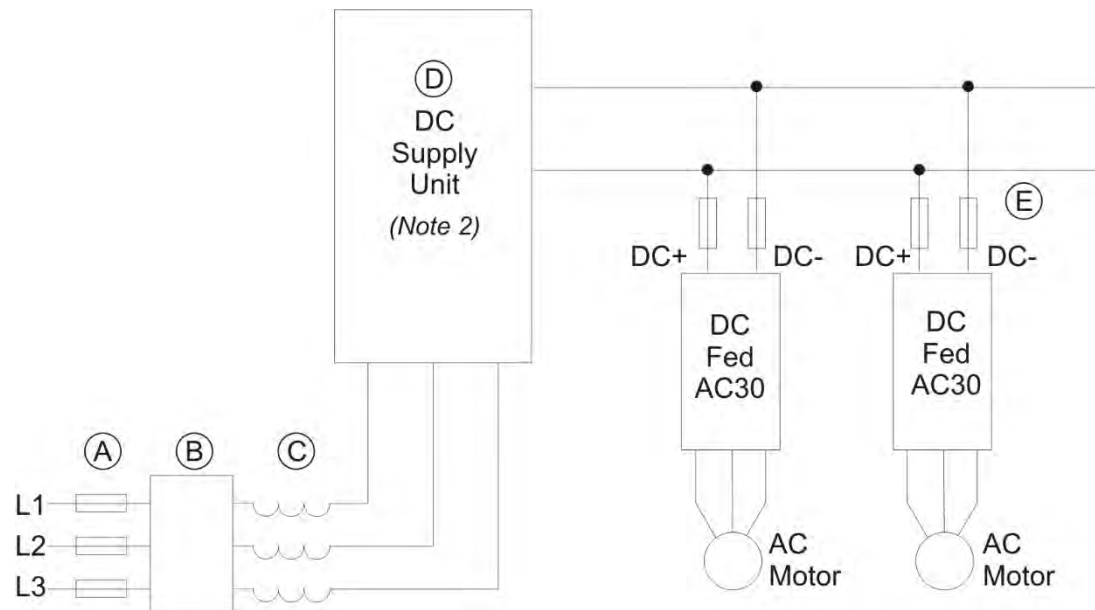

A – Semiconductor fuses, rated to protect the dc supply unit and dc bus installation at maximum power.

B – Optional EMC filter.

C – AC line choke, see Note 1.

D – DC supply unit, for example 890CS, AC30 supply unit 380-x. (Refer to separate product manuals).

E – Semiconductor fuses, rated to protect the individual dc fed AC30 and its dc wiring.

### NOTES:

1. The required AC line choke inductance value is determined by the total dc bus capacitance (dc bus) as:

$$L_{ac}(\mu H) \text{ per phase} = (1.05 \times 10^6) / C_{dcbus} (\mu F)$$

The dc supply unit may also have minimum inductance requirements (see table over page) to satisfy (e.g., 3% for 890CS) or may include an internal line choke (e.g., AC30 input unit 380-x).

2. The dc supply unit may be required to precharge the dc bus at power up. If so, the precharge circuitry should be rated (in terms of peak power and impulse energy) to charge the total dc bus capacitance, and should be rated to carry 45W to the internal power supply of each drive, without dropping more than 40V.

Frame Size	Product Code	Internal Capacitance	Frame Size	Product Code	Internal Capacitance
D	7x0-4D0004	340 $\mu$ F	G	7x0-4G0045	1800 $\mu$ F
	7x0-4D0005	340 $\mu$ F		7x0-4G0060	2800 $\mu$ F
	7x0-4D0006	340 $\mu$ F		7x0-4G0073	2800 $\mu$ F
	7x0-4D0008	340 $\mu$ F	H	7x0-4H0087	3600 $\mu$ F
	7x0-4D0010	340 $\mu$ F		7x0-4H0105	4200 $\mu$ F
	7x0-4D0012	340 $\mu$ F		7x0-4H0145	5600 $\mu$ F
E	7x0-4E0016	500 $\mu$ F	J	7x0-4J0180	6600 $\mu$ F
	7x0-4E0023	700 $\mu$ F		7x0-4J0205	8400 $\mu$ F
F	7x0-4F0032	1400 $\mu$ F		7x0-4J0260	9900 $\mu$ F
	7x0-4F0038	1400 $\mu$ F			
	7x0-4F0045	1400 $\mu$ F			

## 5-4 Associated Equipment

### AC Motor Chokes

The maximum rate of rise of Volts (dv/dt) present on the motor terminals of the inverter, can be as high as 10,000V/ $\mu$ s. This can be reduced by adding a motor choke in series with the motor.

Installations with long cable runs may suffer from nuisance overcurrent trips, refer to Appendix C Compliance - Cabling Requirements for maximum cable lengths. An output choke may be fitted in the inverter output to limit parasitic capacitive current to earth. Screened cable has a higher parasitic capacitance to earth and may cause problems in shorter runs. Contact Parker for recommended choke values.

Motor Power (kW)	Choke Inductance	RMS Current Rating	Parker Part No.
0.75	2mH	7.5A	CO055931
1.1			
1.5			
2.2			
4.0	0.9mH	22A	CO057283
5.5			
7.5			
11	0.45mH	33A	CO057284
15			
18	0.3mH	44A	CO057285
22	50 $\mu$ H	70A	CO055193
30			
37	50 $\mu$ H	99A	CO055253
45	50 $\mu$ H	99A	CO055253
55	50 $\mu$ H	243A	CO057960
75	50 $\mu$ H	360A	CO387886
90	Contact Parker Hannifin Manufacturing Limited for further information		
110			
132			

## Dynamic Braking Resistors

We can supply suitable braking resistors, found on the following pages. Alternatively, you can use the calculation on page 5-7 to help you select alternative resistors.

**IMPORTANT** *We recommend using a thermal overload switch to protect the braking circuit. Refer to page 5-6.*

- ◆ The inverter must be fitted with external braking resistors if braking is required.
- ◆ The power stack must be fitted with external braking resistors, or used with an AFE or regenerative DC supply unit, if braking is required.

### WIRING DETAILS

#### WARNING

Do not apply external voltage sources (mains supply or otherwise) to either of the braking terminals: DB+, DB. This can lead to damage to the inverter and installation, and risk to personnel.

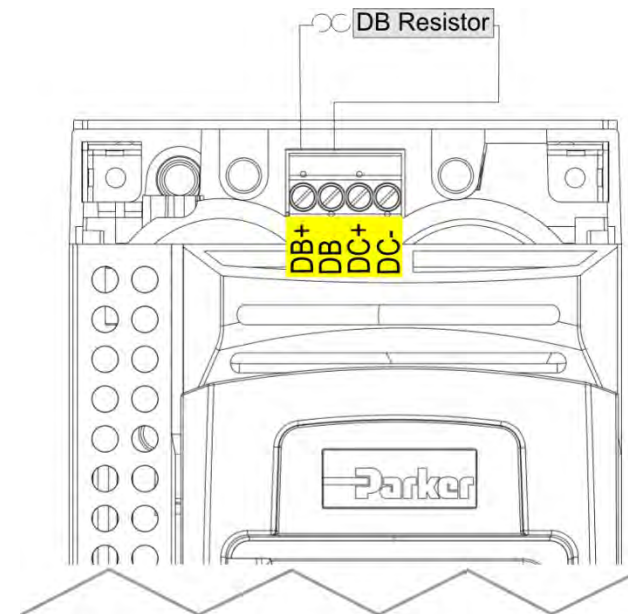


Figure 5.1 External Braking Resistor

## 5-6 Associated Equipment

### Dynamic Braking Resistors


These resistor sets are designed for stopping the system at rated power. They are rated for 10 seconds in a 100 seconds duty cycle.

See Appendix F for Minimum Brake Resistor value for each individual inverter size.

#### RESISTOR SELECTION

These small, metal-clad resistors should be mounted on a heatsink (back panel) and covered to prevent injury from burning.

There are four resistor values available.

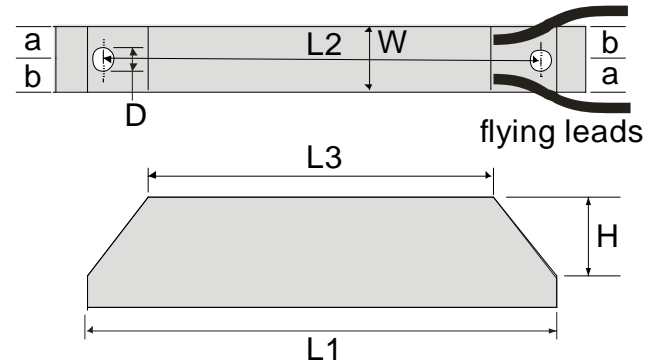

#### IMPORTANT

*The resistor can dissipate 10 x power rating for 5s, but the continuous rating should not be exceeded under repetitive loading.*

	Flying Lead Length	L1	L2	L3	a	b	D	W	H
<b>500W</b>	500	335	316	295	13	17	5.3	60	30
<b>200W</b>	500	165	146	125	13	17	5.3	60	30

*Dimensions are in millimetres*

Parker Part Number	Power Rating (W)	Resistance ( $\Omega$ )	Continuous Current Rating (A)
CZ467717	200	100	1.4
CZ463068	200	56	1.9
CZ467716	500	56	3.0
CZ388396	500	36	3.7

**Calculation**

Brake resistor assemblies must be rated to absorb both peak braking power during deceleration and the average power over the complete cycle.

$$\text{Peak braking power } P_{pk} = \frac{0.0055 \times J \times (n_1^2 - n_2^2)}{t_b} \quad (\text{W})$$


$$\text{Average braking power } P_{av} = \frac{P_{pk}}{t_c} \times t_b$$

- J - total inertia (kgm<sup>2</sup>)
- n<sub>1</sub> - initial speed (rpm)
- n<sub>2</sub> - final speed (rpm)
- t<sub>b</sub> - braking time (s)
- t<sub>c</sub> - cycle time (s)

Obtain information on the peak power rating and the average power rating of the resistors from the resistor manufacturer. If this information is not available, a large safety margin must be incorporated to ensure that the resistors are not overloaded.

By connecting these resistors in series and in parallel the required braking capacity can be selected for the application.

**IMPORTANT** *The minimum resistance of the combination and maximum dc link voltage must be as specified in Appendix F: “Technical Specifications” - Internal Dynamic Brake Switch.*

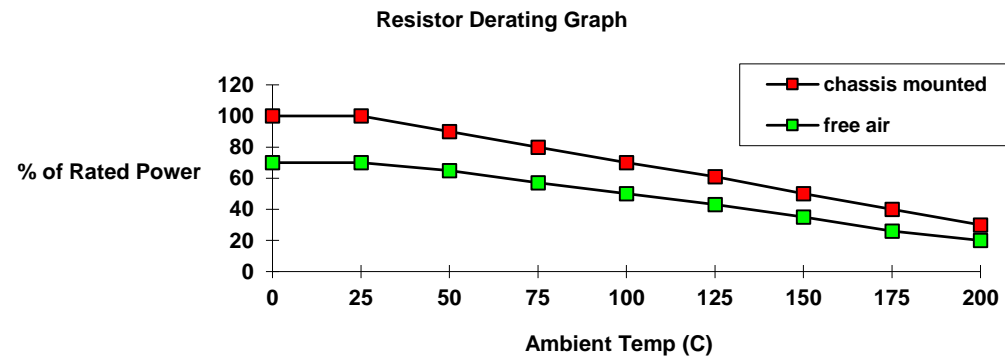

**Figure 5.2 Braking Resistor Derating Graph (Metal Clad Resistors)**



## 5-8 Associated Equipment

### Circuit Breakers

We do not recommend the use of circuit breakers (e.g. RCD, ELCB, GFCI), but where their use is mandatory, they should:

- Operate correctly with dc and ac protective earth currents (i.e. type B RCDs as in Amendment 2 of IEC755).
- Have adjustable trip amplitude and time characteristics to prevent nuisance tripping on switch-on.

When the ac supply is switched on, a pulse of current flows to earth to charge the internal/external ac supply EMC filter's internal capacitors which are connected between phase and earth. This has been minimised in Parker inverter filters, but may still trip out any circuit breaker in the earth system. In addition, high frequency and dc components of earth leakage currents will flow under normal operating conditions. Under certain fault conditions larger dc protective earth currents may flow. The protective function of some circuit breakers cannot be guaranteed under such operating conditions.

#### WARNING

Circuit breakers used with VSDs and other similar equipment are not suitable for personnel protection.  
Use another means to provide personal safety. Refer to EN50178 / VDE0160 / EN60204-1

### External EMC Filters

Refer to Appendix C Compliance - Filters for complete information.

Filter Description	Filter Part Number
<b>AC50 &amp; Frame D &amp; E</b>	
500V IT/TN	CO501894
<b>Frame F</b>	
500V IT/TN	CO501895
<b>Frame G</b> - Please contact Parker Hannifin Manufacturing Ltd., Automation Group,	
<b>Frame H</b>	
500V IT/TN	CO502672U150
<b>Frame J</b>	
500V IT/TN	CO502672U320
<b>Frame K – Not applicable</b>	

## Input Chokes

For further information refer to Appendix F Technical Specifications “Supply Short Circuit Rating”.

## Gasket Kits

Gasket Kits can be purchased from Parker using the following part numbers.

Frame Size	Gasket Kit Part Number	
	IP20 Through Panel Kit (without IP55 fan)	IP55 Through Panel Kit (with IP55 fan included)
Frame D	LA502668	LA503104U001
Frame E	LA502669	LA503104U002
Frame F	LA502670	LA503104U003
Frame G	LA502471	LA503104U004
Frame H	LA502472	LA503104U005
Frame J	LA502793	LA503104U006
Frame K	Not applicable	

For installation information see Chapter 4 ‘Installation’

## Cabling Bracket for Control, System Option & Power Stack

Part numbers for the cabling brackets are:

Frame Size	Control & Power Stack Cabling Bracket Kit Part Number	Control & System Option Cabling Bracket Kit Part Number
Frame D	LA501935U001	LA501935U007
Frame E	LA501935U002	LA501935U007
Frame F	LA501935U003	LA501935U007
Frame G	LA501935U004	LA501935U007
Frame H	LA501935U005	LA501935U007
Frame J	LA501935U006	LA501935U007
Frame K	Not applicable	LA501935U007

For further information see Chapter 4 ‘Installation’

## 5-10 Associated Equipment

### Option Cards

There are a range of Option Cards that may come factory-fitted to the inverter, or are available for customer fitting.


Refer to the Technical Manual supplied with each Option Card for detailed instructions.

Product Code	Description	Manual Part Number
7004-01-00	General Purpose I/O Option, referred to as GPIO - Digital Inputs or Outputs, Analogue Inputs, Motor Thermistor Input, Volt-free Relay Outputs, Real-Time Clock	HA501836U001
7004-02-00	GPIO - Motor Thermistor Input	HA501836U001
7004-03-00	GPIO - Motor Thermistor plus Real-Time Clock	HA501836U001
7004-04-00	Pulse Encoder plus Thermistor input	HA502217U001
7004-05-00	Resolver plus Thermistor input	HA503540U001
7003-PB-00	Profibus DP-V1	HA501837U001
7003-PN-00	PROFINET IO	HA501838U001
7003-DN-00	DeviceNet	HA501840U001
7003-CN-00	ControlNet	HA501936U001
7003-CB-00	CANopen	HA501841U001
7003-IP-00	EtherNet IP	HA501842U001
7003-EC-00	EtherCAT	HA501938U001
7003-BI-00	BACnet IP	HA501939U001
7003-BN-00	BACnet MSTP	HA501940U001
7003-RS-00	Modbus RTU	HA501839U001
7003-IM-00	Modbus TCP	HA501937U001

### SD CARDS

The AC30 control modules have only been qualified with certain brands and types of SD memory card. Some brands do not support all operating modes of the SD standard. We recommend that SD cards be purchased from Parker by using part number IF502785.

INSTALLATION DETAILS

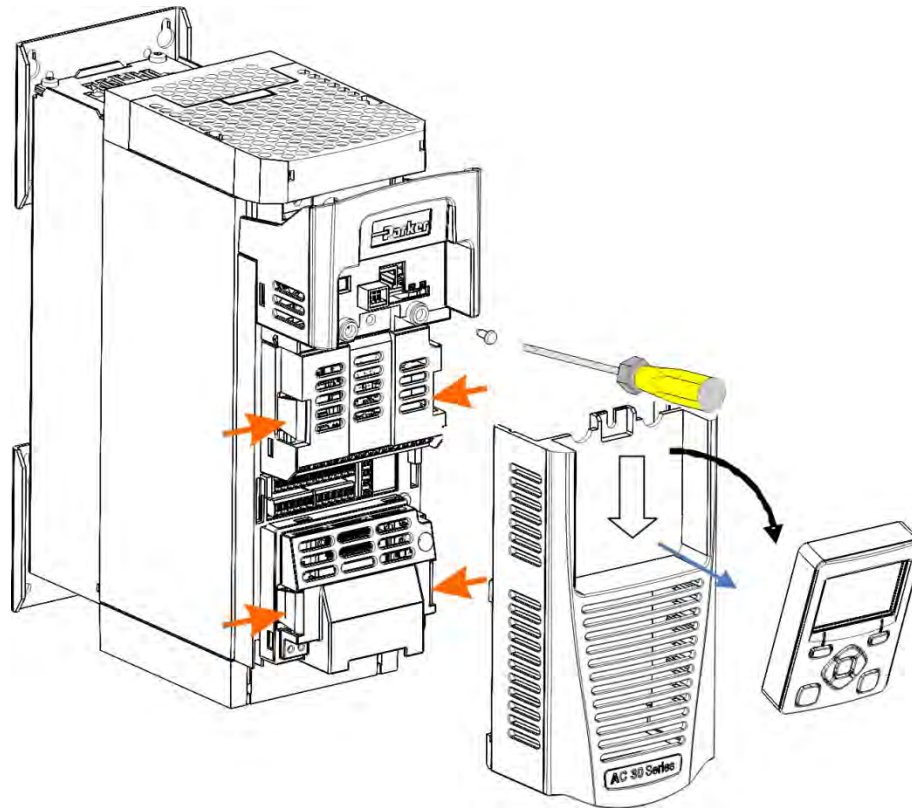

Control Terminal Cover

Control Terminal Cover Removal

First remove the GKP by pulling from the top down and remove.


Undo the screw and slide the control terminal cover down, then remove



HAZARDOUS VOLTAGES may be present on GPIO module motor thermistor user relays, please refer to the option technical manual or main product manual for safety information

## 5-12 Associated Equipment

Click the Option into place and tighten the retaining screw (as shown below).

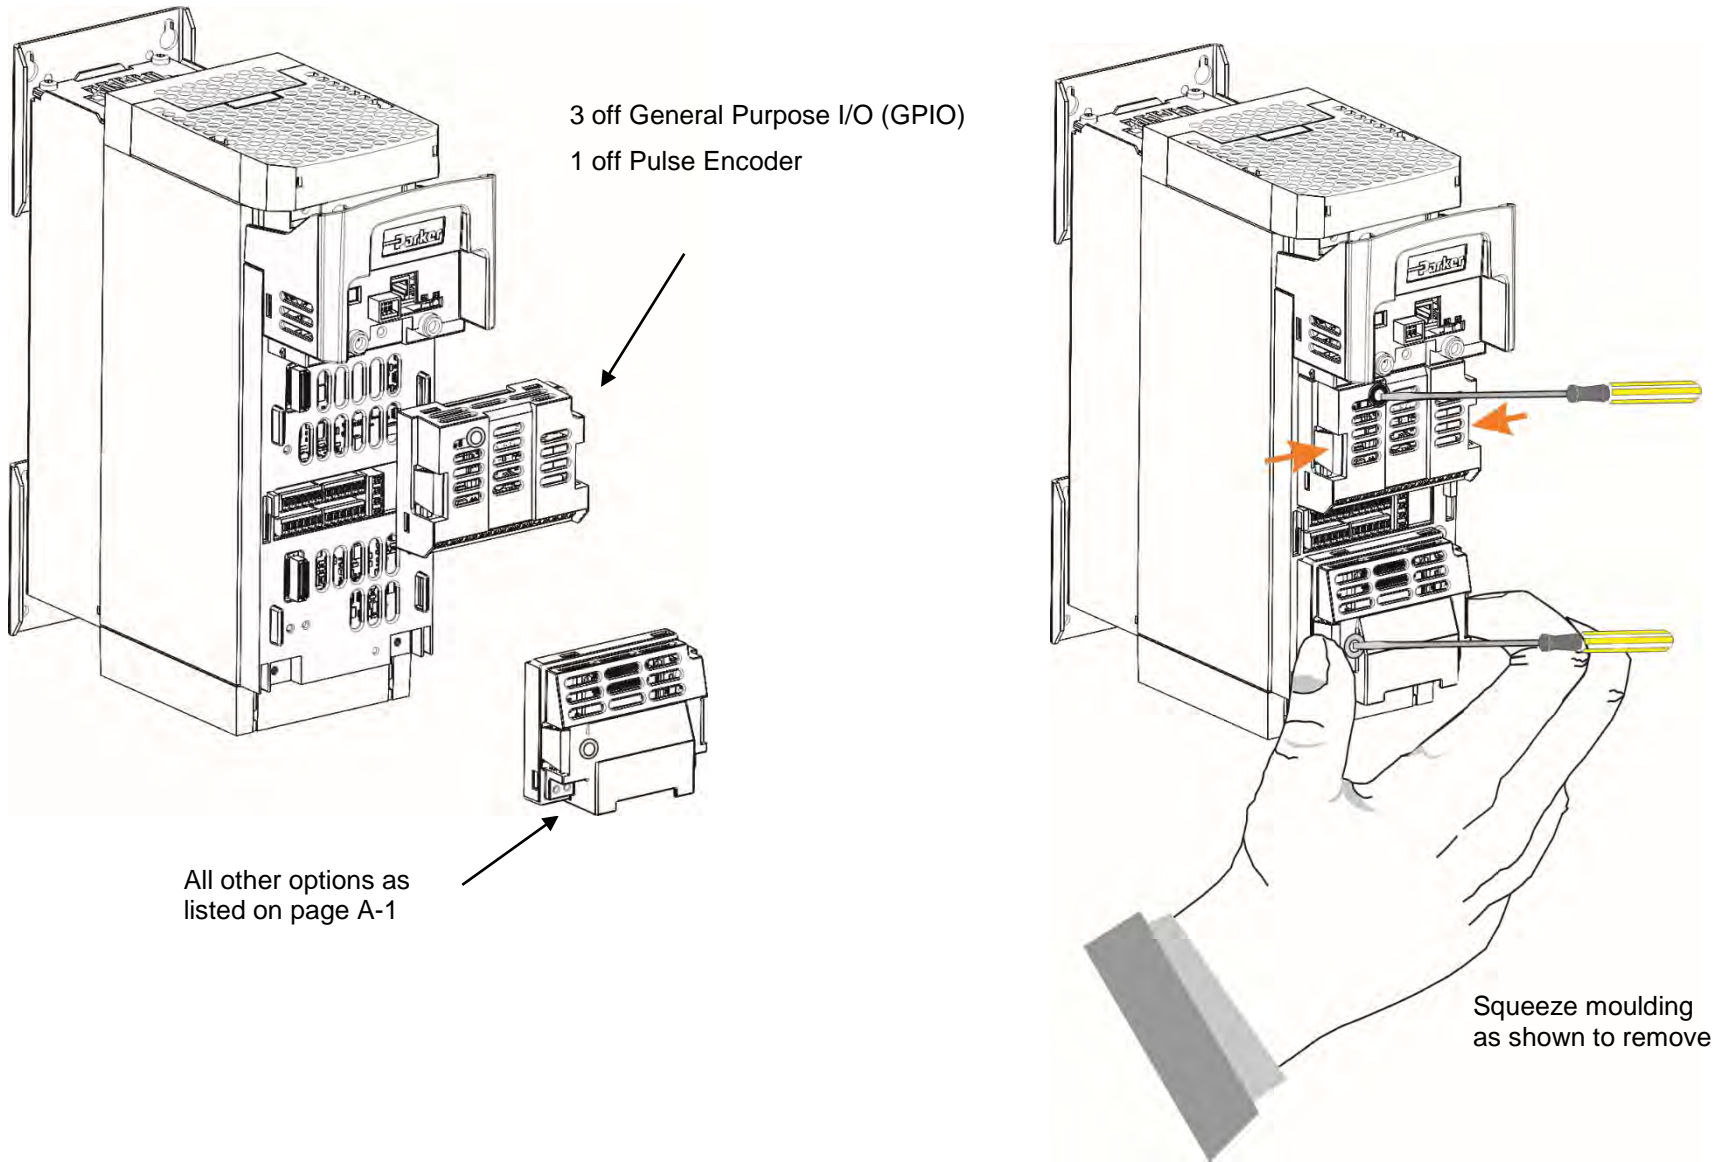

## Chapter 6 **Safe Torque Off SIL3/PLe**

### General Information



**THIS EQUIPMENT IF USED INCORRECTLY IS POTENTIALLY DANGEROUS. THEREFORE UNDER NO CIRCUMSTANCES SHOULD IT BE USED BEFORE THESE INSTRUCTIONS HAVE BEEN READ AND UNDERSTOOD BY THE END USER WHO SHOULD BE APPROPRIATELY QUALIFIED TO OPERATE THE EQUIPMENT.**

This section provides general information about Safe Torque Off (STO).

Two safety functions can be implemented with the inverter: STO and Safe Stop 1 (SS1). In order to meet all aspects of STO and SS1, an external safety control unit should be used.

To implement Safe Stop 1 (SS1), the external safety control unit causes the drive to decelerate to rest. Once at rest, it invokes STO in the inverter. Please refer to EN61800-5-2:2007 para 4.2.2.3 for the formal definitions.

It is the user's responsibility to:

- 1) Risk assess the machine.
- 2) Design, implement and assess an appropriate solution for each application to meet all relevant safety requirements.

Note: STO is an electronic inhibit intended for use during normal operation of the machine. It is not intended for use during machine maintenance, repair, replacement or other similar activities. For these activities recognised electrical power isolation devices and lock-off procedures should be used.

The inverter STO function is a factory-fitted and factory-tested feature. See the section "Safety Warnings and Limitations" on page 6-18.

## 6-2 Safe Torque Off

### STO FUNCTIONAL DESCRIPTION

STO is a means of preventing an inverter from delivering rotational force to its connected electric motor. Please refer to EN61800-5-2:2007 para 4.2.2.2 for the formal definition.

To ensure a high degree of safety, two independent STO control channels are implemented in hardware. The STO circuit in the inverter is designed such that a fault in one control channel will not affect the other channel's ability to prevent the drive from starting, i.e. the STO function of the inverter is tolerant to any single fault. It may not be tolerant to an accumulation of faults. This is in keeping with its declared safety ratings.

STO always overrides any attempt to start the drive. If one or both STO control inputs is requesting the STO function, the drive will not start, even if for example, the drive's software malfunctions and tries to cause the motor to turn.

The STO function is implemented in hardware; it overrides all software activities. The only software involvement is to report STO status to the user via a Graphical Keypad (GKP), serial communications link or user terminal as defined by the drive configuration.



### WARNING

THE DECLARED SIL/PL CAPABILITY OF THIS STO PRODUCT CAN BE ACHIEVED ONLY WHEN THE TWO STO USER INPUTS ARE DRIVEN INDEPENDENTLY. THEY MUST NOT BOTH BE DRIVEN FROM A COMMON SOURCE; OTHERWISE THE SINGLE FAULT DETECTION WILL BE COMPLETELY INOPERATIVE.

USE OF THE PRODUCT IN THIS "COMMON SOURCE" CONDITION INVALIDATES THE STO PRODUCT SPECIFICATION AND IS ENTIRELY AT THE USER'S OWN RISK.


## Alignment to European Standards

EN ISO13849-1:2008

*(Safety of machinery – Safety-related parts of control systems)*

STO aligns internally to the following aspects of this standard:

- Architecture according to Category 3:

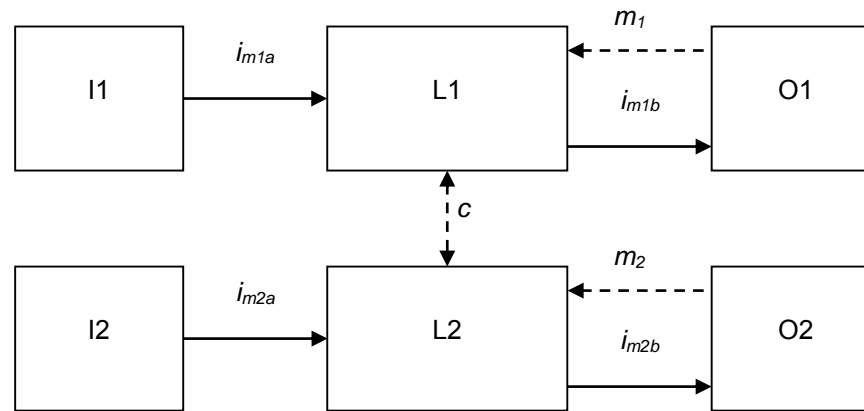

Solid lines represent the STO control paths.

Dashed lines represent reasonably practicable fault detection.

Key:

- I1, I2 = user terminal
- L1, L2 = logic
- O1, O2 = methods of enabling or disabling output power devices
- $i_{mxy}$  = interconnecting means
- $m_x$  = monitoring
- $c$  = cross monitoring

- Category 3 general requirements are:

A single failure, and any consequential failures, will not lead to loss of the STO safety function.

Failure of more than one component can lead to the loss of the STO safety function.



## 6-4 Safe Torque Off

Most but not all single component failures will be detected. Diagnostic Coverage (DC) is required to be at least 60% (i.e. the minimum required for 'low' diagnostic coverage).

Detected component failures will result in the STO function being applied without intervention from the user.

The risk associated with the loss of STO safety function caused by multiple failures must be understood and accepted by the user.

The user must undertake a risk analysis and specify suitable components that, when connected together, meet the risk assessment requirements.

Mean Time To Failure (dangerous) (MTTFd) of each STO channel must be  $\geq 30$  years.

Common Cause Failure (CCF) score must be  $\geq 65$  according to Annex F of the standard.

- Performance Level (PL) e:

Average probability of dangerous failure per hour (PFH) must be  $\leq 10^{-7}$

### **EN61800-5-2:2007 AND EN61508**

**(Adjustable speed electrical power drive systems) and**

**(Functional safety of electrical/electronic/programmable electronic safety-related systems)**

STO aligns to the following aspects of this standard:

- Safety Integrity Level (SIL) 3

Probability of dangerous random hardware failures per hour (PFH) must be  $\leq 10^{-7}$

Subsystems type A according to EN61508-2:2001 para 7.4.3.1.2

Hardware Fault Tolerance (HFT) = 1

Safe Failure Fraction (SFF) must be  $\geq 90\%$

## Safety Specification

As assessed to EN ISO13849-1 and EN61800-5-2 the inverter has the following related safety values:-

Criterion	Requirement	Value achieved
SIL3	For type A subsystems, HFT = 1: SFF $\geq$ 60%	SFF = 99%
SIL3	$10^{-7} \geq$ PFH $\geq$ $10^{-8}$	PFH = $2.3 \times 10^{-9}$
SIL Capability	-	3
PLe	Category 3; PFH $\leq$ $4,29 \times 10^{-8}$	PFH = $2.3 \times 10^{-9}$
PLe	30 years $\leq$ MTTFd $\leq$ 100 years	MTTFd = 100 years <sup>1</sup>
PLe	DC = medium	DC = Medium
Mission Time	20 years	20 years
Fault Reaction Function	-	Latched STO <sup>2</sup>

**Note:** all values quoted in this table are valid only when the two STO user inputs are driven independently. This is as required by EN ISO 13849-1 category 3. See the Alignment to European Standards section in this chapter for the required architecture which must be used throughout the machine design relevant to the drive under consideration.

<sup>1</sup> EN ISO13849 limits MTTFd to 100 years.

<sup>2</sup> A detected fault in the STO circuit causes STO to become active, and remain active until after a power cycle.

## 6-6 Safe Torque Off

### **EMC Specification**

In addition to the mandatory requirements of EN61800, the STO functionality has been subjected to testing for immunity at higher levels. In particular the STO function (only) has been tested for radiated immunity according to EN62061:2005 Annex E up to 2.7GHz which includes frequencies used by mobile telephones and walkie-talkies.

## User Connections

The STO terminals are on a 6-way terminal block X10. This is mounted on the inverter control housing. Terminal designations are:


Terminal Number	Terminal Name	Description
X10/01	STO A Input	0V or not connected = drive will not run, STO is active on channel A. 24V = drive is enabled to run if X10/03 is also 24V. This input is optically isolated from all other inverter terminals except X10/02, X10/03 and X10/04.
X10/02	STO Common <sup>3</sup>	Signal return for STO A Input and STO B Input. Connected internally to X10/04. This terminal or X10/04 must be connected to earth at one common point in the drive system.
X10/03	STO B Input	0V or not connected = drive will not run, STO is active on channel B. 24V = drive is enabled to run if X10/01 is also 24V. This input is optically isolated from all other inverter terminals except X10/01, X10/02 and X10/04.
X10/04	STO Common <sup>2</sup>	Signal return for STO A Input and STO B Input. Connected internally to X10/02. This terminal or X10/02 must be connected to earth at one common point in the drive system.
X10/05	STO Status A	Together with X10/06, this terminal forms an isolated solid-state relay output. This output is ON (equivalent to closed relay contacts) when the STO circuit is in the 'safe' state, i.e. the drive will not cause its motor to produce torque. However, this output should be used primarily as an indication. In the unlikely event of a fault in the STO circuit, this output could turn on erroneously to give a false indication of the STO status. It must not be used as a guarantee that the motor will not produce torque. The solid-state relay is protected by a self-resetting fuse.
X10/06	STO Status B	Together with X10/05, this terminal forms an isolated solid-state relay output. See the description for X10/05.

<sup>3</sup> Do not connect both X10/02 and X10/4 to earth, otherwise an earth loop could be created.

## 6-8 Safe Torque Off


Examples of wiring to X10/05 and X10/06.

Active high output:

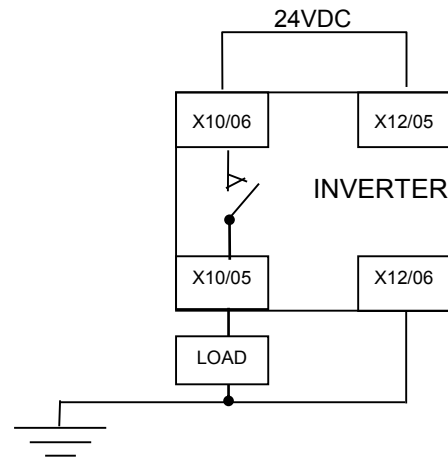

The load is energised and X10/05 is high when STO is in the intended safe STO state.

Active low output:

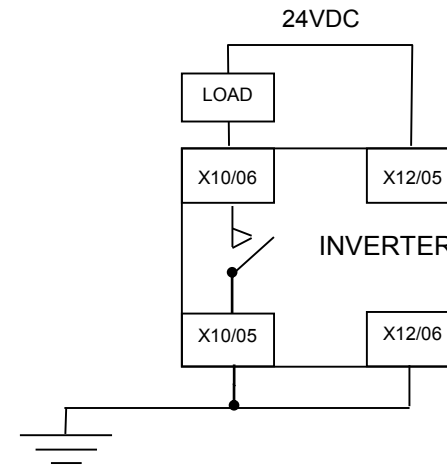

The load is energised and X10/06 is low when STO is in the intended safe STO state.

The examples show the use of the 24V supply provided on X12/05 (+24V) and X12/06 (0V) as source of power to a load. Alternatively an external 24V supply could be used.

**Note:** If a drive is powered from 24V only, i.e., 24V is applied to terminals X12/05 or X12/06 and the 3 phase power is off, the STO user output will still reflect the status of the two STO user inputs.

# STO Technical Specification

## INPUTS SPECIFICATION

STO A Input and STO B Input comply with IEC61131-2. Note: inputs do not have hysteresis.

Recommended input voltage for low level:	0V to +5V
Recommended input voltage for high level:	+21.6V to +26.4V
Typical input threshold voltage:	+10.5V
Indeterminate input range:	+5V to +15V. Function is undefined.
Absolute maximum input voltage:	-30V to +30V
Typical input current @ 24V	9mA
Fault detection time <sup>4</sup> :	2.3sec typical; < 1.6sec will not generate a fault > 3.0sec will generate a fault.
Response time <sup>5</sup>	> 2ms 6ms typical < 10ms
Conditions in which the STO inputs are operative:	All, i.e. STO cannot be disabled in any condition

---

<sup>4</sup> A fault is defined in this context as STO A Input and STO B Input being sensed in opposite logic states.

<sup>5</sup> Response time is the time from the first STO input becoming active (voltage level is low) until torque production has ceased

## 6-10 Safe Torque Off

### OUTPUT SPECIFICATION

OFF state:

Maximum applied voltage:	±30V (X10/06 relative to X10/05)
Leakage current:	Less than 0.1mA.

ON state:

Maximum output current:	150mA
Overcurrent protection:	Included
Resistance between output terminals:	Less than 6Ω.



### WARNING

WIRED CONNECTIONS TO TERMINALS X10/01, X10/03, X10/05 AND X10/06 MUST BE LESS THAN 25 METRES IN LENGTH AND REMAIN WITHIN THE CUBICLE OR DRIVE ENCLOSURE. PARKER IS NOT LIABLE FOR ANY CONSEQUENCES IF EITHER CONDITION IS NOT MET.

## TRUTH TABLE

Overview	STO Input A X10/01	STO Input B X10/03	Drive Function	STO Status Output X10/05, X10/06
<b>STO Active</b>	0V	0V	Drive cannot start or supply power to its motor. STO trip reported. <b>This is the intended safe state of the product with correct dual-channel operation.</b>	ON
<b>Abnormal one-channel operation detection</b>	24V	0V	Drive cannot start or supply power to its motor. STO trip reported. If either of these conditions persists for more than 3.0 seconds (the maximum fault detection time), the STO function will lock into a fault state. The drive cannot start until the fault is rectified; all power is removed and reapplied (both mains and any auxiliary 24V dc power).	OFF
	0V	24V	<b>This is single channel operation and thus deemed not as intended for category 3 / PLe / SIL3 structure implementation.</b>	
<b>STO Inactive</b>	24V	24V	Drive is enabled to run under software control. The drive can supply power to its motor.	OFF
<b>Drive unpowered</b>	Don't care	Don't care	Drive cannot start or supply power to its motor.	OFF




## 6-12 Safe Torque Off

### STO Input Timing Diagrams

#### IDEAL OPERATION

In ideal operation, both inputs X10/01 and X10/03 should change state simultaneously reflecting true dual-channel operation as intended.

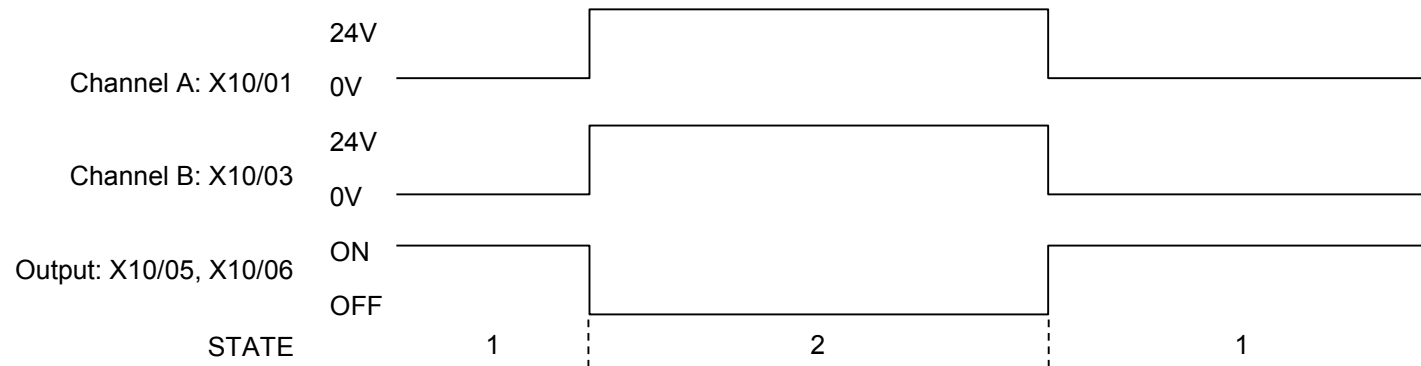


States:

- 1 Both inputs are low. Drive is tripped and STO prevents the drive from starting. User output is ON. This is the “safe torque off” state of the drive.
- 2 Both inputs are high. Drive is able to run under software control. User output is OFF.

## TYPICAL OPERATION

In typical operation, there can be a small time difference between changes of state on X10/01 and X10/03, due to different delays in the operation of two sets of relay contacts.

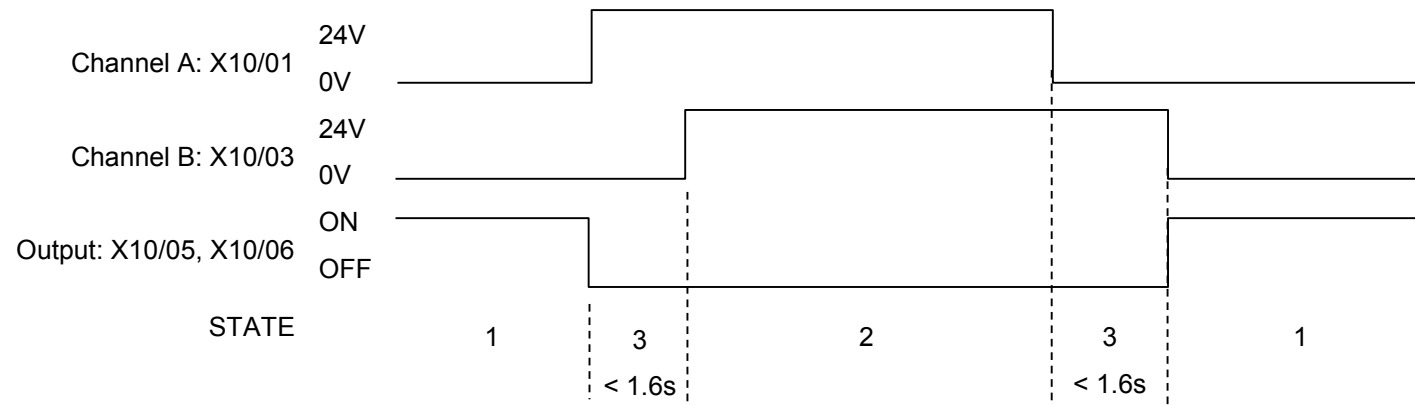


### States:

- 1 Both inputs are low. Drive is tripped and STO prevents the drive from starting. User output is ON. This is the “safe torque off” state of the drive.
- 2 Both inputs are high. Drive is able to run under software control. User output is OFF.
- 3 One input is high and the other input is low. Drive is tripped and cannot start due to STO action. User output is OFF. Normal operation allows this state to persist for up to 1.6 seconds which is the minimum fault detection time required to generate a fault (3.0 seconds is the maximum). These tolerable time differences are normally caused by switches or relays; they should be kept as short as possible.

## 6-14 Safe Torque Off

### FAULT OPERATION

A fault is always detected when X10/01 and X10/03 are in opposite states for more than 3.0 seconds.

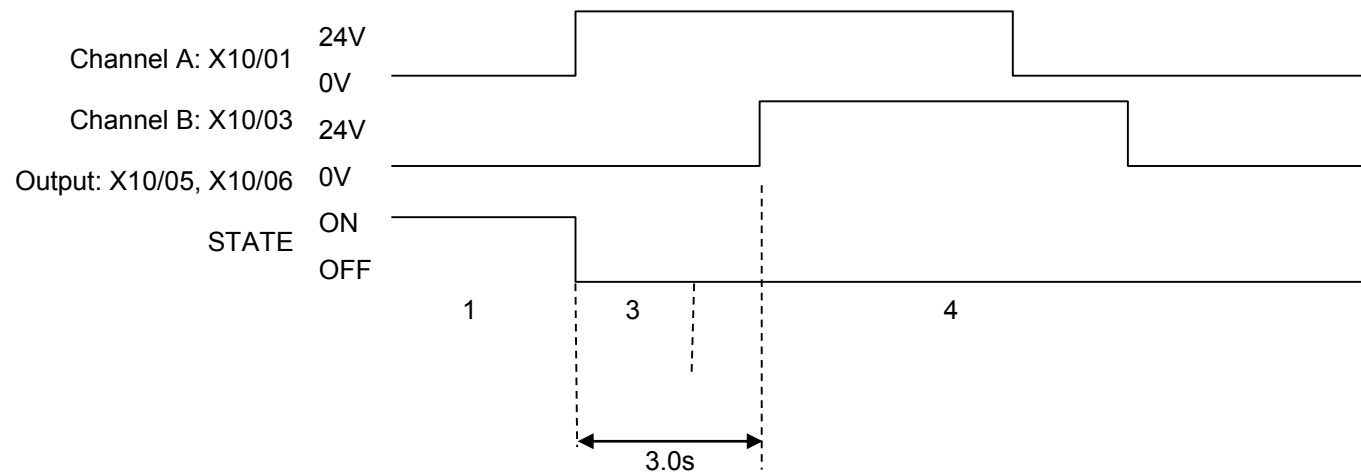

#### States:

- 1 Both inputs are low. Drive is tripped and STO prevents the drive from starting. User output is ON. This is the “safe torque off” state of the drive.
- 3 One input is high and the other input is low. Drive is tripped and STO prevents the drive from starting. In this example, this state persists for more than 3.0 seconds (being the maximum fault detection time), after which time the STO logic transitions to state 4 without further changes in input state. The inverter has detected a fault or single-channel operation.
- 4 The fault state (one input high, the other input low) has persisted for longer than 3.0 seconds (being the maximum fault detection time). The STO hardware logic locks into state 4. The drive is tripped and the STO function prevents the drive from starting. User output is OFF. To exit from state 4, the drive must be powered off (all power removed including any auxiliary 24Vdc) and back on.



### DANGER

OPERATION OF THE INVERTER UNIT SHOULD CEASE IMMEDIATELY AND THE UNIT SHOULD BE RETURNED TO A PARKER AUTHORIZED REPAIR CENTRE FOR INVESTIGATION AND REPAIR.


FAILURE TO DO SO COULD RESULT IN INJURY, DEATH OR DAMAGE.

FURTHER OPERATION OF THE INVERTER WITHOUT RESOLVING THIS FAILURE IS ENTIRELY AT THE USER'S OWN RISK.

SEE SAFETY CATEGORY DEFINITIONS AND LIMITATIONS, REFER TO EN ISO 13849-1:2008.

## PULSED INPUTS

Some safety equipment, e.g. safety PLCs, regularly pulse the two STO inputs independently in order to detect a short circuit between them. This is commonly known as OSSD (Output Signal Switch Device). The inverter STO inputs are immune to such pulses when they are less than 2ms in width. The product will not react to such pulses and therefore will not inadvertently invoke the STO function.

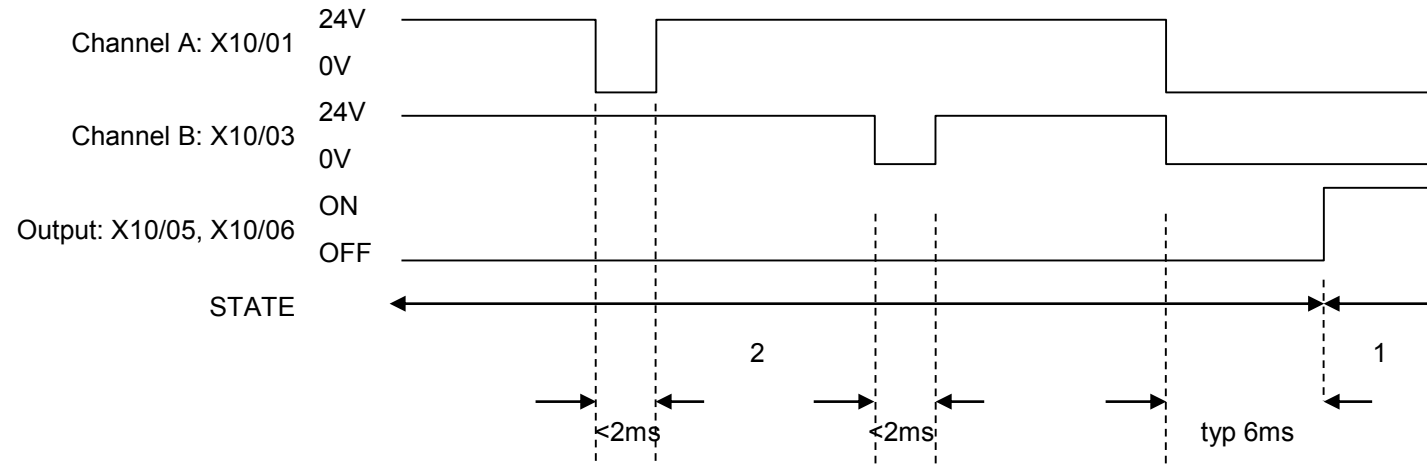


### States:

- 1 Both inputs are low. Drive is tripped and STO prevents the drive from starting. User output is ON. This is the “safe torque off” state of the drive.
- 2 Both inputs are high, but regularly pulse low independently. External equipment can thus detect a short circuit between the two STO user inputs. Each input must remain low for 6ms (typical) before the inverter reacts to it.

# 6-16 Safe Torque Off

## STO State Transition Diagram

The flow chart below shows how the drive responds to STO inputs, start and stop commands.

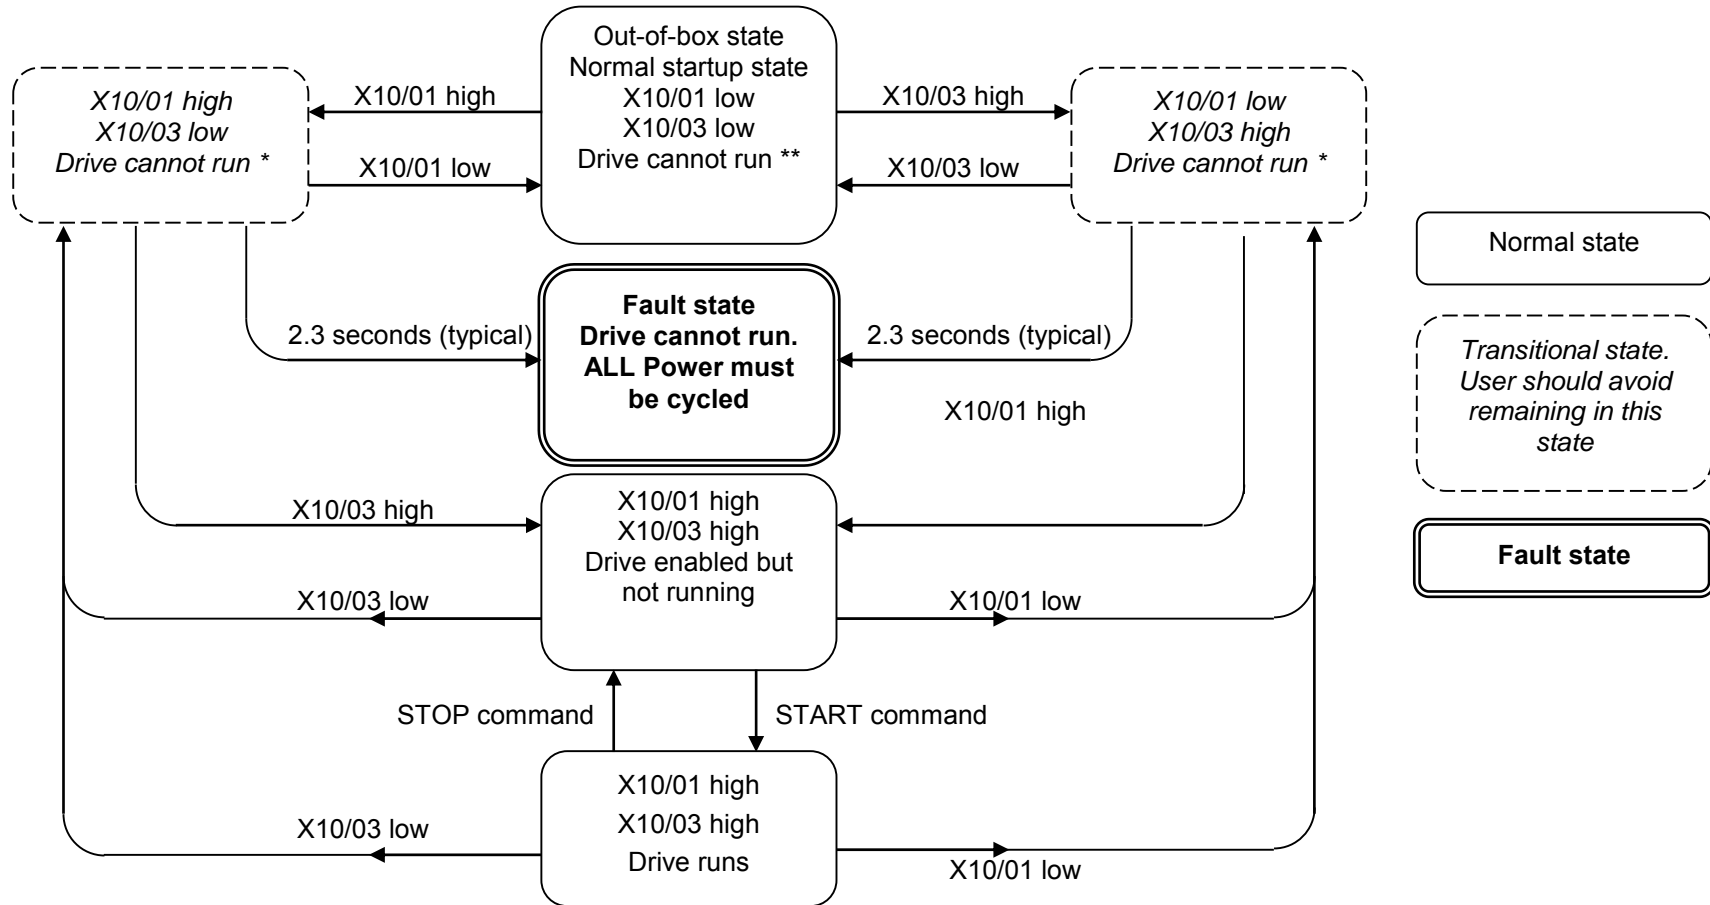

Key:

\* = One channel operation

\*\* = Two channel operation

## STO Trip Annunciation

The GKP will display a STO trip message when STO becomes active, i.e. STO prevents the drive from starting, thus:



**GKP Display**

This message is displayed immediately if, on starting the drive or whilst the drive is running:

- One or both STO user inputs X10/01 or X10/03 is low when the user attempts to start the drive, or
- One or both STO user inputs X10/01 or X10/03 goes low while the drive is running, or
- The inverter has detected a fault in the STO circuit.

**Note:** an out-of-box inverter will report this trip if the drive, as supplied, has no connections to X10 when it is first started. Appropriate connections must be made to X10 to prevent this trip from occurring, as described elsewhere in this chapter. The user must decide if STO is to be permanently inactive, or to make use of the STO feature. If the STO feature is not required, see the “Applications that do not require STO function” section on page 6-20.

STO is inserted into the trips history buffer (see Chapter 10 Trips & Fault Finding) if STO is active when the drive is commanded to start or if STO becomes active while the drive is running, indicating an abnormal condition. The trips history buffer is not updated if STO becomes active while the drive is not running.

**Note:** The normal method of operation is for STO to become active while the drive is not running and the motor is stationary.

Appropriate, application specific risk assessment is necessary when STO is activated on rotating motors, moving loads or when external forces such as gravitation or inertial loads act on the motor.



### Safety Warnings and Limitations



- Only competent personnel are permitted to install the STO function and commission it. They must disseminate and make available all appropriate instructions and documentation to all personnel who may come into contact with or operate the STO and provide suitable training on the inverter to ensure it is operated in the correct manner and to avoid damage, injury or loss of life.
- The inverter STO function is a factory-fitted and factory-tested feature. Repairs to the inverter STO featured-product are to be carried out only by Parker authorized repair centres. Any unauthorised attempt to repair or disassemble the product will render any warranty null and void, and STO integrity could be impaired. **PARKER WILL NOT ACCEPT ANY LIABILITY FOR FAILURE TO OBEY THESE INSTRUCTIONS OR FOR ANY CONSEQUENTIAL INJURY, DEATH, LOSS OR DAMAGE.**
- It is important that the inverter product environment including all aspects of its CE conformance and IP etc., specified elsewhere in this manual, is maintained to ensure the safety integrity of the STO function.
- Should synchronous motors be operated in the field weakening range, operation of the STO function may lead to overspeed and destructive overvoltages as well as explosions in the drive. Therefore, the STO function must NEVER be used with synchronous drives in the field-weakening range. The user must ensure this condition is prevented.
- When using synchronous permanent magnet motors, shaft movement over a small angle is possible if two faults occur simultaneously in the power section of the drive. This depends on the number of motor poles. The maximum angle is:
  - Rotary motors:  $360^\circ / \text{number of poles}$ .
  - Linear motors:  $180^\circ$  electrically.It is the user's responsibility to assess, validate and safeguard as necessary against this potential hazard.
- If external forces can act on the motor and/or load to cause it to move, additional measures must be taken by the user to restrain it, for example a mechanical brake. Examples of external forces are suspended loads (effect of gravity), and other web-tensioning devices.
- The inverter STO feature does not provide or guarantee any galvanic isolation in accordance with EN 60204-1:2006 A1:2009 Section 5.5. This means that the entire system must be isolated from the mains power supply with a suitable electrical isolation device before any drive or motor maintenance or replacement procedures are attempted. Note that even after the power has been isolated, dangerous electrical voltages may still be present in the inverter. Safe discharge times and details are specified in Chapter 1 Safety of this manual.
- The STO function must not be used for electrical isolation of the inverter and power. Whenever any personnel require to work on the drive, associated motor or other power items, they must always use recognised and suitable electrical isolation devices.
- Terminal X10/02 or X10/04 must be connected to earth at one common point in the drive system. For multi-drive systems this can be a shared earth point.
- The STO user output, serial communications or GKP messages relating to accessing or viewing any safety monitoring statuses are for information only and should not be relied on. They are not part of the drive module safety system and its associated PL/SIL declared ratings. Any customer use of these must be appropriately risk assessed in accordance with the relevant standards or regulations.
- The STO safety function must be tested regularly. The frequency should be determined by the machinery builder. An initial minimum frequency of once per week is suggested. Refer to page 6-26 and following pages.
- When using an external safety control unit with adjustable time delay, for example when implementing an SS1 function, the time delay must be protected to prevent unauthorized adjustment. The adjustable time delay on the safety control unit must be set to a value greater

than the duration of the braking ramp controlled by the inverter with maximum load inertia and from maximum speed. Any external forces must also be considered, e.g. effects due to gravity.

- When implementing a SS1 function with the inverter, the user is responsible for ensuring the drive's configuration will allow a controlled braking ramp to be initiated by the external safety device. This is particularly important when using serial link communications for normal control of the drive.
- During the active braking phase of SS1 or Stop category 1 (controlled stop with safely monitored time delay according to EN60204-1:2006), faulty operation of the drive must be allowed for. If a fault in the drive system occurs during the active braking phase, the load may coast to a stop or might even actively accelerate until expiration of the defined time delay. It is not the remit of this document to specify these measures. This is for the user to assess.
- When the inverter detects either an internal STO fault or an external single-channel user fault, the user must immediately fully resolve the fault. The user must ensure dual-channel operation has been fully restored before attempting to use the inverter STO safety feature.



### **DANGER**

FAILURE TO DO SO COULD RESULT IN STO NOT BEING ACHIEVABLE, AND THUS THE MOTOR MAY ROTATE UNEXPECTEDLY AND COULD RESULT IN INJURY, DEATH OR DAMAGE. FURTHER OPERATION OF THE INVERTER WITHOUT RESOLVING THIS FAILURE IS ENTIRELY AT THE USER'S OWN RISK. SEE SAFETY CATEGORY DEFINITIONS AND LIMITATIONS, REFER TO EN ISO 13849-1:2008.

- It is the user's responsibility to ensure that their overall control implementation recovers safely from supply loss or dips.
- In all instances it is the user's responsibility formally to perform suitable risk assessments, and invoke and fully validate the necessary risk reduction measures after having thoroughly understood the application, the drive product and its features. Of special relevance is to assess the risk of the two STO user inputs shorting together.



## 6-20 Safe Torque Off

### EXAMPLE USER WIRING




### WARNING

THE WIRING EXAMPLES SHOWN IN THIS SECTION ARE FOR ILLUSTRATION ONLY. THEY ARE NOT TO BE CONSIDERED FINAL DESIGNS, NOR AS AN ATTEMPT TO CREATE A DESIGN FOR SPECIFIC SOLUTIONS.

THE USER / INSTALLER IS RESPONSIBLE FOR DESIGNING A SUITABLE SYSTEM TO MEET ALL REQUIREMENTS OF THE APPLICATION INCLUDING ASSESSING AND VALIDATING IT. PARKER WILL NOT ACCEPT ANY LIABILITY FOR FAILURE TO DO THIS OR FOR ANY CONSEQUENTIAL LOSS OR DAMAGE.

### APPLICATIONS THAT DO NOT REQUIRE STO FUNCTION

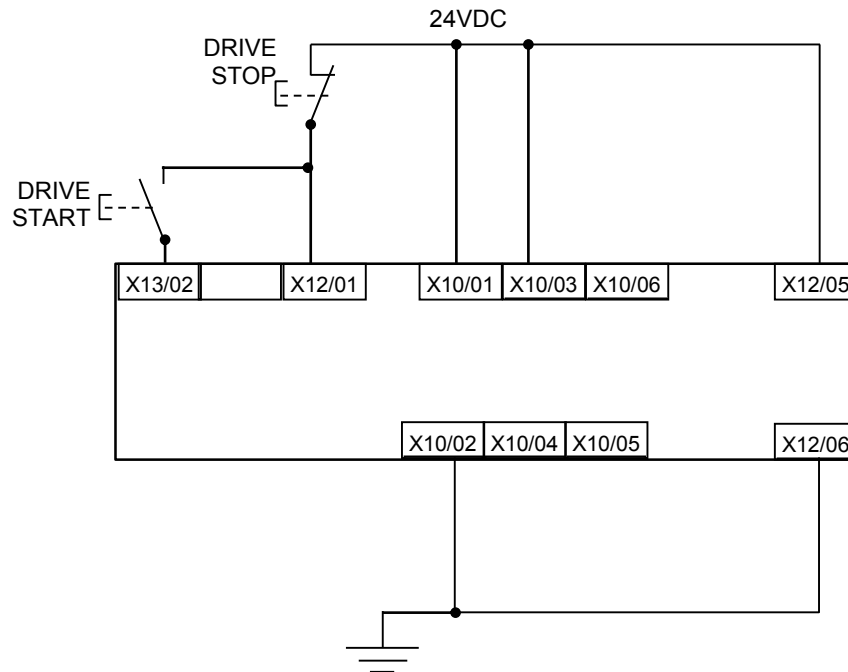

STO inputs X10/01 and X10/03 must be connected to 24VDC with respect to terminals X10/02 or X10/04.

STO Status output on X10/05 and X10/06 may be left disconnected.


All wiring shown is within the control cubicle.

Here the STO inputs X10/01 and X10/03 have been set to the inactive state (tied to +24V). Drive control is performed solely through software with no inherent safety function. The drive is controlled with its own start and stop pushbuttons.

*Note:* Only X10/02 or X10/04 must be earthed, i.e. they should not both be earthed otherwise it is possible to create an earth loop.

## MINIMUM STO IMPLEMENTATION

This example shows the minimum connections required. To reset from STO requires that STO Request contacts are closed to permit normal drive operation. The user must do a risk assessment to ensure that all safety requirements are met. The user must select and assess appropriate equipment.

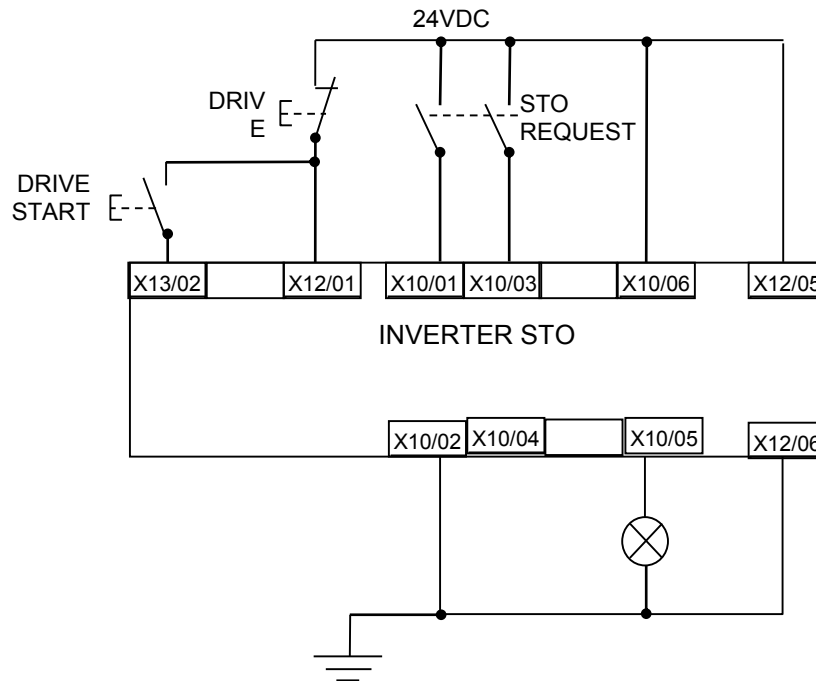

### To run the drive:

Ensure the STO Request contacts are closed.

Press the DRIVE START button.

### To perform operational (not STO) stop:

Press the DRIVE STOP button.

Wait for the motor to come to rest.

### To invoke STO:

Press the DRIVE STOP button.

Wait for the motor to come to rest.

Open the STO Request contacts simultaneously. The contacts must remain open for the entire duration that STO is required: they must not be momentary action switches. The drive will confirm via X10/05 that STO has been invoked by the lamp being ON.

If the lamp is OFF, do not access the machine as a fault may be present.


**Note:** if the STO Request contacts open while the motor is rotating, the motor will coast to rest (unless external forces act on it).

**Note:** all wiring shown is within the control cubicle.

## 6-22 Safe Torque Off

### STO IMPLEMENTATION WITH SAFETY CONTROL UNIT

This example improves on the previous one by showing the resetting from a STO stop. The example shows wiring and terminal numbering for a Siemens 3TK2827, but similar products are available from other vendors. Use of this Siemens part does not imply it is suitable for the user's application. The user must select and assess appropriate equipment.

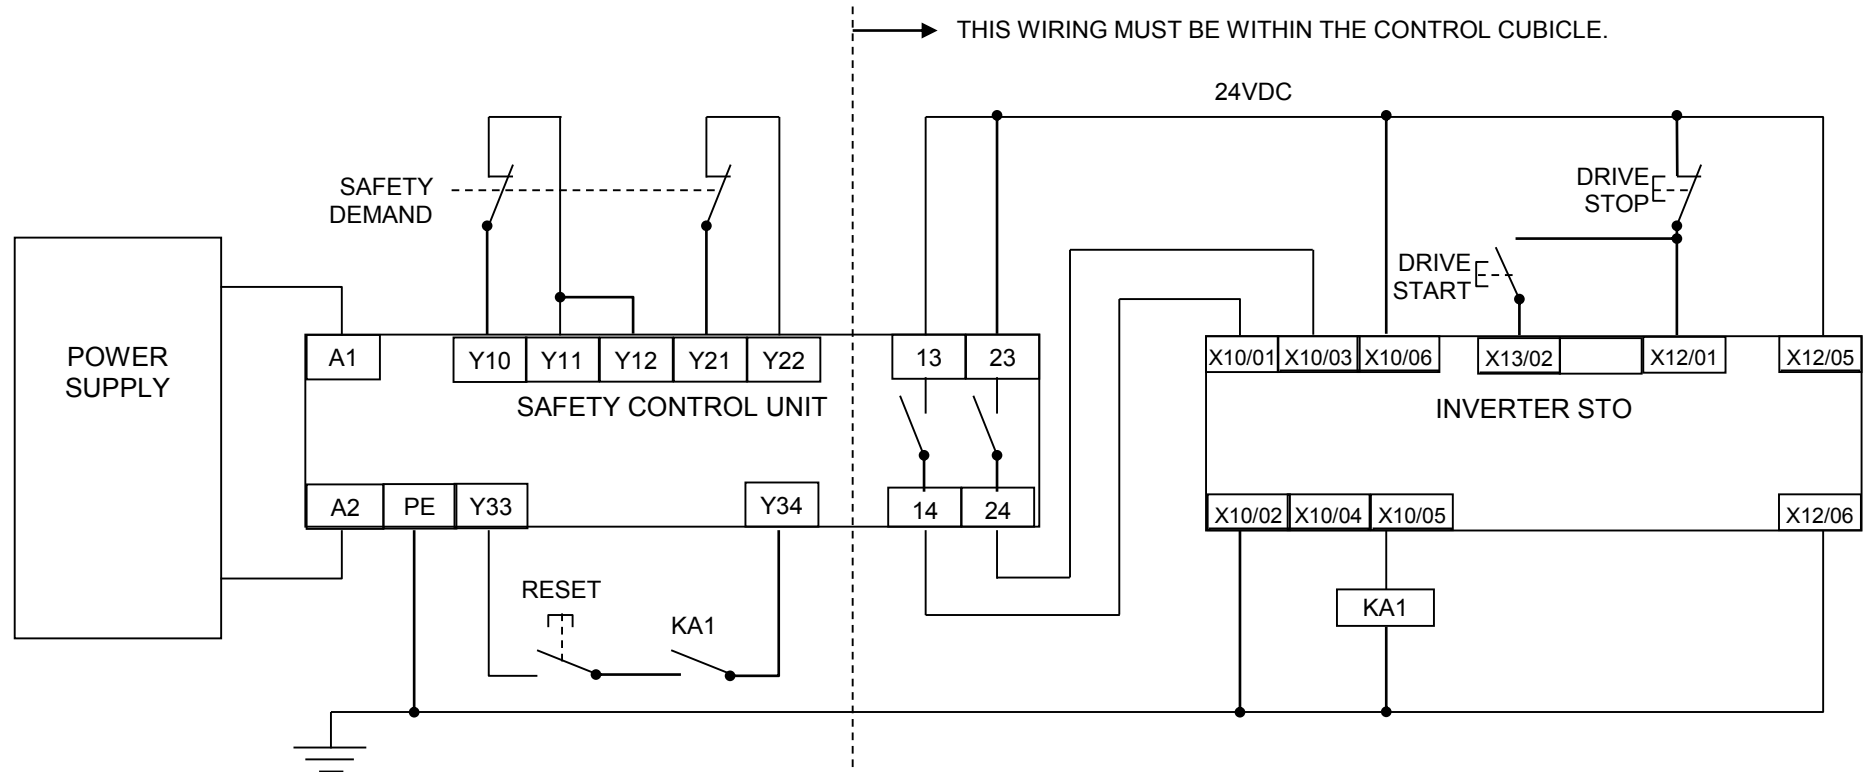

**Note:** On power-up, the safety control unit outputs are OPEN; thus the STO state is requested of the inverter. The latter responds by energising KA1 if both channels are active and healthy. KA1 is used as a self-check for the reset cycle of the safety control unit. If a reset cannot be achieved due to KA1 being de-energised, a fault may be present and must be resolved by the user before relying on the STO function. See Fault Operation on page 6-14.

**To start the drive:**

Ensure the Safety Demand switch is reset (contacts closed). Press the RESET button to ensure the Safety Control Unit is reset; its contacts to the inverter should close making the STO function inactive. The inverter STO output should then turn OFF. Then press the DRIVE START button.

**To perform operational stop (non STO):**

Press the DRIVE STOP button.

Wait for the motor to come to rest.

**To invoke STO:**

Press the DRIVE STOP button.

Wait for the motor to come to rest.

Operate the Safety Demand switch (contacts open) that causes the safety control unit to open its output contacts together. In response, the drive will confirm, by energising KA1 via X10/05, that STO has been invoked. The user may wish / require that this is verified by mechanisms not shown on this drawing.



## DANGER

IF KA1 IS DE-ENERGISED, DO NOT ACCESS THE MACHINE AS A FAULT MAY BE PRESENT.


THE USER MUST RESOLVE THE DETECTED FAULT BEFORE USING THE STO FEATURE. FAILURE TO DO SO COULD RESULT IN STO NOT BEING ACHIEVABLE, AND THUS THE MOTOR MAY ROTATE UNEXPECTEDLY AND COULD RESULT IN INJURY, DEATH OR DAMAGE. PARKER WILL NOT ACCEPT ANY LIABILITY FOR FAILURE TO DO THIS OR FOR ANY CONSEQUENTIAL LOSS OR DAMAGE.

**Note:** if either channel of the Safety Demand is requested while the motor is rotating, the motor will coast to rest unless external forces act on it.

## 6-24 Safe Torque Off

### SS1 IMPLEMENTATION USING SAFETY CONTROL UNIT

This Safe Stop 1 (SS1) implementation causes the drive to come to rest in a controlled manner, and STO is actioned after a time delay determined by the safety delay relay. This conforms to SS1 defined in EN61800-5-2:2007 para 4.2.2.3 c). The example shows wiring and terminal numbering for a Siemens 3TK2827, but similar products are available from other vendors. Use of this Siemens part does not imply it is suitable for the user's application. The user must select and assess appropriate equipment.

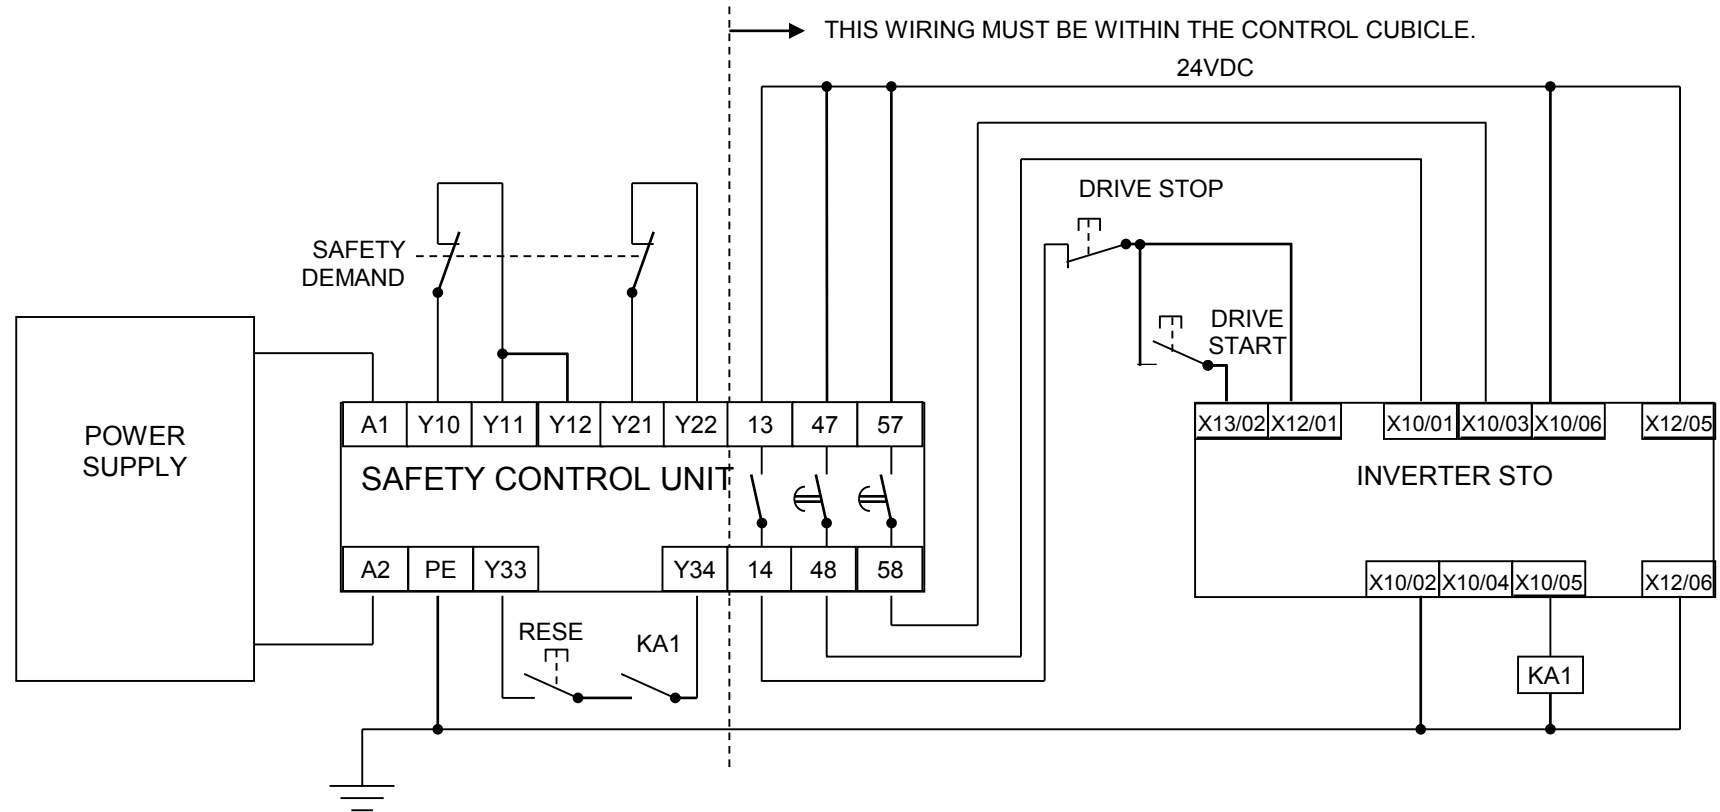

**Note:** On power-up, the Safety Control Unit outputs are OPEN; thus STO is requested of the inverter. This responds by energising KA1 if both channels are active and healthy. KA1 is used as a self-check for the reset cycle of the Safety Control Unit. If a reset cannot be achieved due to KA1 being de-energised, a fault may be present and must be resolved by the user before relying on the STO function. See Fault Operation on page 6-14.

**To start the drive:**

Ensure the Safety Demand switch is reset (contacts closed). Press the RESET button to ensure the Safety Control Unit is reset; its contacts to the inverter should close making the STO function inactive. The inverter STO output should then turn OFF. Then press the DRIVE START button.

**To perform operational stop (non STO):**

Press the DRIVE STOP button.

Wait for the motor to come to rest.

**To invoke SS1:**

Operate the Safety Demand switch (contacts open). This should cause the Safety Control Unit to open its instantaneous output, shown here as a single channel. This causes the drive to decelerate to rest using its own software which is not safety critical in this instance. Note: the drive's block diagram must be configured to provide this ramp to rest functionality.

After a time delay set in the Safety Control Unit, the pair of delayed OFF output contacts open together. This time delay must be set longer than the worst case time for the motor to come to rest.

In response, the drive will confirm, by energising KA1 via X10/05, that STO has been invoked. The user may wish / require that this is verified by mechanisms not shown on this drawing.



## DANGER

IF KA1 IS DE-ENERGISED, DO NOT ACCESS THE MACHINE AS A FAULT MAY BE PRESENT.

THE USER MUST RESOLVE THE DETECTED FAULT BEFORE RELYING FURTHER ON THE STO FEATURE. FAILURE TO DO SO COULD RESULT IN STO NOT BEING ACHIEVABLE, AND THUS THE MOTOR MAY ROTATE UNEXPECTEDLY AND COULD RESULT IN INJURY, DEATH OR DAMAGE. PARKER WILL NOT ACCEPT ANY LIABILITY FOR FAILURE TO DO THIS OR FOR ANY CONSEQUENTIAL LOSS OR DAMAGE.

**Note:** if either of the delayed OFF output contacts in the Safety Control Unit open while the motor is rotating, the motor will coast to rest (unless external forces act on it).

## 6-26 Safe Torque Off

### STO Function Checking

Two levels of checking are required: a comprehensive check and a regular check.

The user / machine builder must determine the frequency of these checks based on their knowledge, use of the machine, appropriate standards and any legal requirements.



#### **DANGER**

ALL TESTS MUST PASS. IF ANY TEST FAILS, IT MUST BE INVESTIGATED AND RECTIFIED BEFORE ATTEMPTING TO PUT THE EQUIPMENT INTO SERVICE.

FURTHER OPERATION OF THE INVERTER WITHOUT RESOLVING THIS FAILURE IS ENTIRELY AT THE USER'S OWN RISK. FAILURE TO DO SO COULD RESULT IN INJURY, DEATH OR DAMAGE. PARKER WILL NOT ACCEPT ANY LIABILITY FOR FAILURE TO DO THIS OR FOR ANY CONSEQUENTIAL LOSS OR DAMAGE.

SEE SAFETY CATEGORY DEFINITIONS AND LIMITATIONS, REFER TO EN ISO 13849-1:2008.

When STO becomes active during any test, power to the motor must be seen by the user to be quenched instantaneously. Note: the drive should respond in less than 10 milliseconds.

All STO checks should be performed after the inverter has been commissioned for speed control.

## Comprehensive Check

A comprehensive check of the STO function ensures the overall integrity of the STO functionality. It proves the independent operation of each channel individually (including during the normal dual channel operation), the STO user feedback operation, and the essential single fault detection.

It must always be performed:

- During factory test
- During commissioning activities
- After repair or replacement of the inverter
- After any hardware or software design changes which may affect the inverter concerned.
- After each intervention into the system and control wiring.
- At defined maintenance intervals as determined by the machine builder and /or user risk assessments and associated verification assessments.
- If the machine has been idle for more than a period of time determined by the machinery builder and user risk assessments.

The check must be made by suitably qualified professional personnel following all necessary safety precautions. They must be fully conversant with all equipment concerned.

**NOTE:** In the following text where it is required that “all power” is removed. Remove power and wait 5 minutes.

The performance of the individual test steps of the STO function should be logged.



### WARNING

DURING THIS TEST, THE SAFETY FUNCTION MUST NOT BE RELIED ON BECAUSE AT TIMES ONLY ONE CHANNEL WILL BE ACTIVATED AND THEREFORE THE INTENDED SAFETY FUNCTION MAY NOT BE AVAILABLE.

ALSO STO WILL BE ACTIVATED WHILE THE MOTOR IS ROTATING, WHICH IS NOT THE NORMAL OPERATION.

THEREFORE THE USER MUST ENSURE IT IS SAFE TO DO THIS TEST BY USING AN APPROPRIATE RISK ASSESSMENT AND TAKING ANY ADDITIONAL RISK REDUCTION MEASURES.



## 6-28 Safe Torque Off

THE FOLLOWING TEST STEPS MUST BE PERFORMED:

### Initial Check:

STO test	Comprehensive Check, Activity	Expected reaction and effect
1	Ensure that no harm can come to personnel or equipment if the motor turns.	
2	Apply +24V DC to terminals X10/01 and X10/03.	
3	Switch on power to the drive.	No error must be present in the drive system. X10/05 and /06 must be OFF.
4	Configure the drive and associated equipment if necessary so that it can be started and stopped, and a speed setpoint provided.	No error must be present in the drive system. X10/05 and /06 must be OFF.
5	Try to start the drive with a non-zero setpoint. This setpoint value will be referred to as SPT1 for brevity in these tests. Leave this set throughout all tests.	Drive must start and motor must turn at SPT1. X10/05 and /06 must be OFF.

**Channel A Check:**

STO test	Comprehensive Check, Activity	Expected reaction and effect
6	With drive running and motor turning at SPT1, momentarily disconnect terminal X10/01 (maximum duration of disconnect = 1 second), while retaining +24V at terminal X10/03.	Motor must immediately coast to rest. Drive must report STO trip immediately. X10/05 and /06 must remain OFF.
7	Ensure terminals X10/01 and X10/03 are both 24V. Try to restart the drive.	Drive must restart at SPT1. STO trip must clear. X10/05 and /06 must remain OFF.

**Channel B Check:**

STO test	Comprehensive Check, Activity	Expected reaction and effect
8	With drive running and motor turning at SPT1, momentarily disconnect terminal X10/03 (maximum duration of disconnect = 1 second), while retaining +24V at terminal X10/01.	Motor must immediately coast to rest. Drive must report STO trip immediately. X10/05 and /06 must remain OFF.
9	Ensure terminals X10/01 and X10/03 are both 24V. Try to restart the drive.	Drive must restart at SPT1. STO trip must clear. X10/05 and /06 must remain OFF.

## 6-30 Safe Torque Off

### Channel A Fault Check:

STO test	Comprehensive Check, Activity	Expected reaction and effect
10	Ensure the drive is running and the motor is turning at SPT1. Disconnect terminal X10/01 for approximately 5 seconds (must exceed 3 seconds).	Motor must immediately coast to rest. Drive must report STO trip immediately. X10/05 and /06 must remain OFF.
11	The STO function has latched in hardware to disable the drive. Re-apply 24V to terminal X10/01, and then try to restart drive.	Drive must not start. Drive must continue to report STO trip. X10/05 and /06 must remain OFF.
12	Remove and re-apply all power to the drive	X10/05 and /06 must be OFF.
13	Try to restart drive at SPT1.	Drive must start at SPT1. X10/05 and /06 must remain OFF.

### Channel B Fault Check:

STO test	Comprehensive Check, Activity	Expected reaction and effect
14	Ensure the drive is running and the motor is turning at SPT1. Disconnect terminal X10/03 for approximately 5 seconds (must exceed 3 seconds).	Motor must immediately coast to rest. Drive must report STO trip immediately. X10/05 and /06 must remain OFF.
15	The STO function has latched in hardware to disable the drive. Re-apply 24V to terminal X10/03, and then try to restart drive.	Drive must not start. Drive must continue to report STO trip. X10/05 and /06 must remain OFF.
16	Remove and re-apply all power to the drive	X10/05 and /06 must be OFF.
17	Try to restart drive at SPT1.	Drive must start at SPT1. X10/05 and /06 must remain OFF.
18	Stop the drive.	Drive must decelerate to rest. X10/05 and /06 must remain OFF.

**User Output Check:**

STO test	Comprehensive Check, Activity	Expected reaction and effect
19	Remove connections to X10/01 and X10/03 within 1 second of each other.	X10/05 and /06 must be ON.
20	Try to restart the drive. Wait for at least 10 seconds with the run command active, then remove it.	Drive must not start while run command is given. Drive must report STO trip immediately. X10/05 and /06 must remain ON.
21	Reconnect X10/01 and X10/03 to 24V.	X10/05 and /06 must turn OFF immediately.
22	Try to restart the drive at SPT1.	STO trip must clear. The drive must restart at SPT1.
23	Stop the drive. Test is complete.	Drive must stop.

The tests specified above are the minimum set; further test steps may be required depending on the application, for example a controlled stop should be verified in a SS1 application.

## 6-32 Safe Torque Off

### REGULAR CHECK

A comprehensive check must take precedence if it coincides with a regular check.

A regular check is intended only to demonstrate the STO is functional. It will not always detect the loss of a single channel. It is therefore important for the user and / or machinery builder to determine the frequency of the comprehensive checks based on their knowledge and application of the machine.

**The following tests should be performed:-**

STO test	Regular Check, Activity	Expected reaction and effect
1	Ensure that no harm can come to personnel or equipment if the motor turns.	
2	Apply +24V DC to terminals X10/01 and X10/03.	No error must be present in the drive system
3	Apply power to the drive.	X10/05 and /06 must be OFF. No error must be present in the drive system.
4	Try to start the drive with a non-zero setpoint. This setpoint value will be referred to as SPT1 for brevity in these tests. Leave this set throughout all tests.	The drive should start and the motor should turn at SPT1. X10/05 and /06 must remain OFF.
5	Disconnect X10/01 and X10/03 within 1 second of each other and leave disconnected for approximately 5 seconds (must exceed 3 seconds)..	Drive must stop immediately, and report STO trip. X10/05 and /06 must be ON.
6	Re-apply 24V to X10/01 and X10/03.	STO trip indication must remain. X10/05 and /06 must turn OFF.
7	Try to restart drive.	STO trip indication should clear. Drive must restart at SPT1.
8	Stop the drive. Test is complete.	Drive must stop.

## Troubleshooting

Symptom	Examine:			Probable cause	Remedy
	GKP display	User output <sup>6</sup>	User inputs <sup>7</sup>		
Drive won't start when given a start command	*** TRIPPED *** SAFE TORQUE OFF	On	Both < 15V	STO is invoked.	When safe to do so, connect X10/01 and X10/03 to 24V ± 10%
	*** TRIPPED *** SAFE TORQUE OFF	Off	Both >15V and < 30V	Fault latch might have tripped	Remove all power from drive and re-apply. If symptom persists, immediately return the inverter for repair. See the DANGER box below.
	Any other trip message, e.g. overvoltage	Off	Both >15V and < 30V	Drive is tripped, but not due to STO.	Reset the trip, and remove its cause. If symptom persists, return the inverter for repair.
	Any other message	Off	Both >15V and < 30V	Faulty hardware	Return for repair
Drives starts unexpectedly	Don't care	Don't care	Both < 5V	Faulty hardware	Immediately return the inverter for repair. See the DANGER box below.
	Don't care	Off	Both > 5V	STO not invoked by the user.	Use STO according to instructions elsewhere in this chapter.
Drive fails comprehensive or regular STO test	Don't care	Don't care	Don't care	Faulty hardware	Immediately return the inverter for repair. See the DANGER box below.

The table above is only a guide. It may not be a comprehensive list of all possible symptoms relating to STO. Parker will not accept responsibility for any consequences arising from its incompleteness or inaccuracy.

### Important note:

- There are no user-serviceable parts in the inverter drive. Refer to the Safety Warnings and Limitations section on page 6-18 of this chapter.

<sup>6</sup> Continuity through X10/05 and X10/06

<sup>7</sup> Measure X10/01 and X10/03 relative to X10/02 or X10/04

## 6-34 Safe Torque Off



### **DANGER**

IF ANY FAULTY OPERATION OF THE STO FUNCTION IS OBSERVED OR SUSPECTED, OPERATION OF THE INVERTER SHOULD CEASE IMMEDIATELY AND THE UNIT SHOULD BE RETURNED TO PARKER FOR INVESTIGATION AND REPAIR. FAILURE TO DO SO COULD RESULT IN INJURY, DEATH OR DAMAGE.

FURTHER OPERATION OF THE INVERTER WITHOUT RESOLVING THIS FAILURE IS ENTIRELY AT THE USER'S OWN RISK.

SEE SAFETY CATEGORY DEFINITIONS AND LIMITATIONS. REFER TO EN ISO 13849-1:2008

## Chapter 7: The Graphical Keypad



The inverter is fitted with a Graphical Keypad referred to throughout as GKP.

It provides for local control of the inverter, monitoring, and complete access for application programming.

Insert the Keypad into the front of the inverter (replacing the blank cover); or if supplied separately to be used remotely, up to 3 meters away, use the mounting kit with connection lead, see Chapter 4 for full details.

For remote installation refer to page 4-14 Fitting a Remote GKP.



## 7-2 The Graphical Keypad


### Overview



- The top line of the display is used to show the inverter status
- The central region of the display shows the selected parameters or navigation menu
- The bottom line of the display indicates the action associated with the soft keys
- The actions of the soft keys are context dependent
- The central navigation and editing keys are referred to as UP, DOWN, LEFT, RIGHT and OK
- The Run, (green), and Stop, (red), keys are used to start and stop the motor when the inverter is in local control mode.

# Keypad

The nine keys of the Graphical Keypad are divided into three groups. These are the Run and Stop keys, the soft keys and the central navigation and editing keys

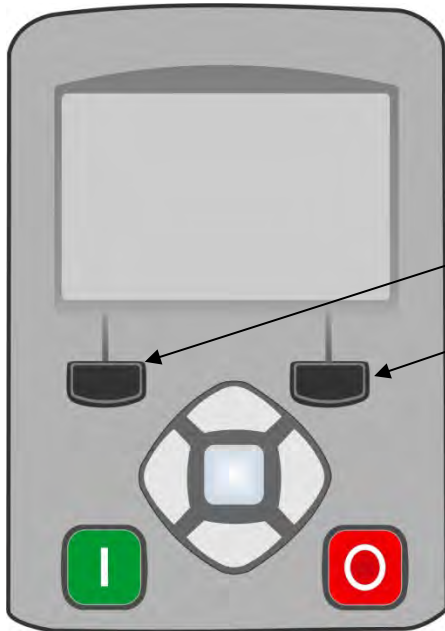

Key	Operation	Description
	RUN	Only operates when Local start / stop control mode is active <i>Control</i> Runs the motor
	STOP	<i>Control</i> <i>Trip reset</i> Stops the motor when local start / stop control mode is active. Resets any trips.
Soft Key 1		<i>Navigation</i> <i>Edit</i> Displays the previous level's menu Aborts the edit, leaving the value unchanged
Soft Key 2		Welcome <i>Navigation</i> <i>Attributes</i> Lock password and / or Save changes Use selected by 1794 Soft Key 2 Mode. Used to add or remove a parameter from the Favorites menu
	OK	<i>Navigation</i> <i>Edit</i> Long Press, (greater than 1s): Displays information about the selected parameter. Displays the next menu level or parameter. Changes to edit mode when a parameter is selected. Accepts the value of the displayed parameter
	UP	<i>Navigation</i> <i>Edit</i> Moves up through the list of parameters Increments the value of the displayed parameter
	DOWN	<i>Navigation</i> <i>Edit</i> Moves down through the list of parameters Decrements the value of the displayed parameter
	LEFT	<i>Navigation</i> <i>Edit</i> Displays the previous level's menu Selects the digit to be changed
	RIGHT	<i>Navigation</i> <i>Edit</i> Displays the next menu level or parameter Selects the digit to be changed


# 7-4 The Graphical Keypad

## The Display

The display is divided into three areas. The top line shows a summary of the inverter status, the centre region is the main work area and the bottom line is used to indicate the action associated with the soft keys.




### INVERTER STATUS SUMMARY

The top line of the display shows a summary of the inverter status. This is divided into four regions. Each region is dedicated to a particular status indication, as shown.





The individual status conditions are indicated pictorially:



#### **Run, Stop and Direction**

Running in the positive direction	
Running in the negative direction	
Stopped, (ready to run in the positive direction)	
Stopped, (ready to run in the negative direction)	




#### **Trip**


Inverter tripped, (indication flashing)	
Warning	

#### **Ethernet**

IP Address missing, (indication flashing)	
IP Address configured	

#### **Control source**

Start / stop control from the keypad	
Start / stop control from the terminals	
Start / stop control from a communications master	

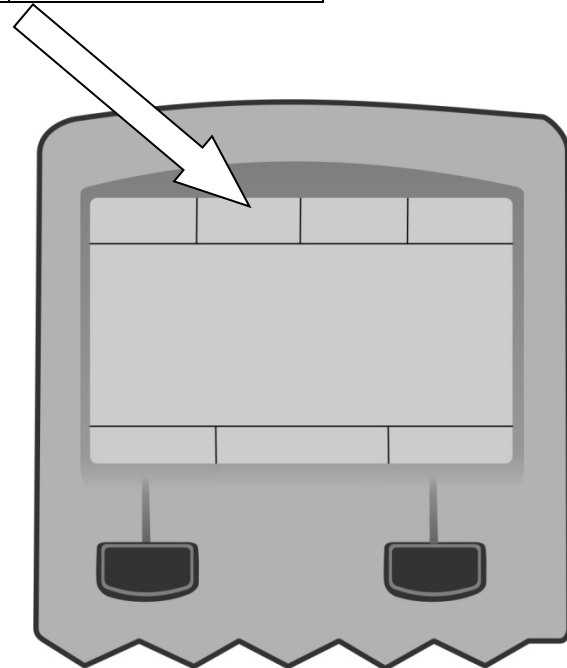

## SOFT KEY ACTION INDICATION

The use of Soft Key 1 and Soft Key 2 is indicated on the bottom line of the display by the icon shown above the key.

### Soft Key 1

Return:	
Abort	
Set-up	

When navigating around the menu tree, the return function navigates to the previous level. In this case the return is the opposite of the OK key.


When changing a parameter value the Abort key discards any modifications and leaves the parameter unchanged.

The Set-up icon is shown on the Welcome page of the GKP. Pressing this starts the set-up wizard, (Chapter 9)

### Soft Key 2

Description	Notes	Icon
Reset GKP entered password, (lock parameters)	1	
Save parameters	1	
Toggle between Local and Remote modes	2	
Change direction, (Local Sequencing only)	2	
Toggle parameter "Soft Key 2 Value", present value 0	2	
Toggle parameter "Soft Key 2 Value", present value 1	2	
Add parameter to favorites menu	3	
Remove parameter from favorites menu	3	

1. Feature available in the "Welcome" screen.
2. Feature available while navigating menus or parameters, (not while editing parameters).
3. Feature available while viewing parameter attributes

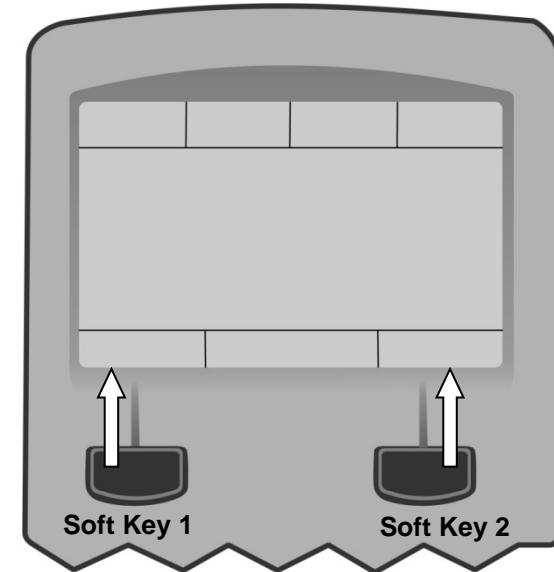

## 7-6 The Graphical Keypad

### LEDS

The Graphical Display has two light emitting diodes, one illuminates the green run key, and one illuminates the red stop key. Each LED may be independently off, on or flashing.

Run key LED	Stop key LED	Description
OFF	Flashing	Stopping
OFF	ON	Stopped
ON	OFF	Running
Flashing	OFF	Auto Restart pending
Both flashing		The inverter is not in its OPERATIONAL state
Flashing Green then Red		The inverter is in a FAULT state



## The Menu System

### NAVIGATING THE MENU SYSTEM

The Menu System can be thought of as a map which is navigated using the direction keys.

- Use the left and right keys to navigate through the menu levels.
- Use the up and down keys to scroll through the Menu and Parameter lists

Menus can contain other menus at a lower level in the tree structure, parameters or a mixture of both.

The keys can be used as above to select a parameter. A parameter has a selection, (ie: TRUE / FALSE), or a value displayed below the parameter name.

**HINT:** Remember that because the Menu and Parameter lists are looped, the UP key can quickly move you to the last Menu or Parameter in the loop. The keys will repeat if you hold them down. This is an easy way to step through and view a menu's contents.

### CHANGING A PARAMETER VALUE

With the parameter you want to change selected, press the center OK key to change to Edit mode. In this mode the arrow keys now perform different functions.


- Change a selection, (i.e. TRUE / FALSE) using the UP and DOWN keys.
- Change a value as follows:
  - The UP and DOWN keys increment / decrement the selected digit.
  - The LEFT and RIGHT keys move the digit selection.
  - The selected digit is indicated by the cursor.

The UP and DOWN keys will repeat if you hold them down.

When changing a value, if the abort icon (  ) is shown over Soft Key 1, pressing this key will abort the edit, leaving the value unchanged.

To accept the edited value, press the center OK key.

Refer to Chapter 8 for a description of the menu items.

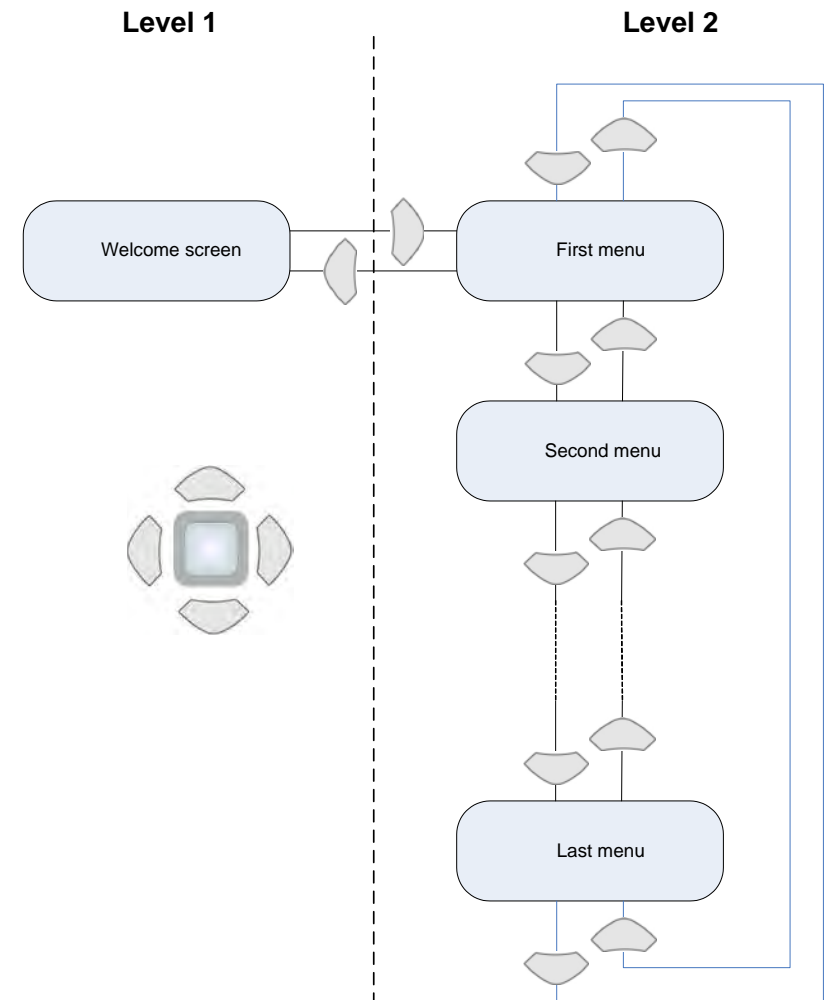

## 7-8 The Graphical Keypad

### Trips and other information displays

An information message will be displayed when the unit is tripped. To clear the message from the display, press Soft key 1.

To reset the trip, allowing the inverter to respond to a start command, press the STOP key. See Chapter 10 Trips & Fault Finding.

### Setting the display language

The GKP supports multiple languages. The language to be used may be selected as the second entry in the GKP Wizard, (see chapter 9). The language is also available as a parameter **1005 Language**.

When changing language, there may will be a short delay while the updated text is transferred to the GKP. During this period the GKP will be unresponsive. An information message “UPDATING LANGUAGE” is displayed during this process.

The GKP has the following language files built in as standard:

- English
- French
- German
- Spanish
- Italian

#### SETTING THE DISPLAY LANGUAGE TO CUSTOM

In addition to the built in languages, the GKP supports a Custom language. This selection may be used to modify one of the built in languages or to provide the translations for an otherwise unsupported language. To load the custom language into the GKP, place the file called “custom.lang”, in the root directory of an SD card. Insert the SD card into the inverter then set **1005 Language** to CUSTOM.

#### Usage Note:

When **1005 LANGUAGE** is set to CUSTOM the GKP will always attempt to update its text from the SD card. This can result in the GKP taking longer to become active when the inverter is powered on, and whenever the GKP is reconnected to the inverter. To prevent this delay, once the GKP has loaded the custom language file, remove the SD card from the inverter, or remove the file “custom.lang” from the SD card. The GKP retains the most recently loaded copy of the custom language file in its non-volatile memory.


# 8-1 Menu Organisation

## Chapter 8: Menu Organisation

### Menu Map

The Menu System consists of a series of menus and sub-menus organised into a “tree” structure. Navigate around the tree on the GKP using the UP, DOWN, LEFT and RIGHT keys. Individual parameters may be present in the menu tree at more than one location. Parameters and/or menus that are not required or are empty are automatically hidden on the GKP and web page.

#### MENU MAP SUMMARY

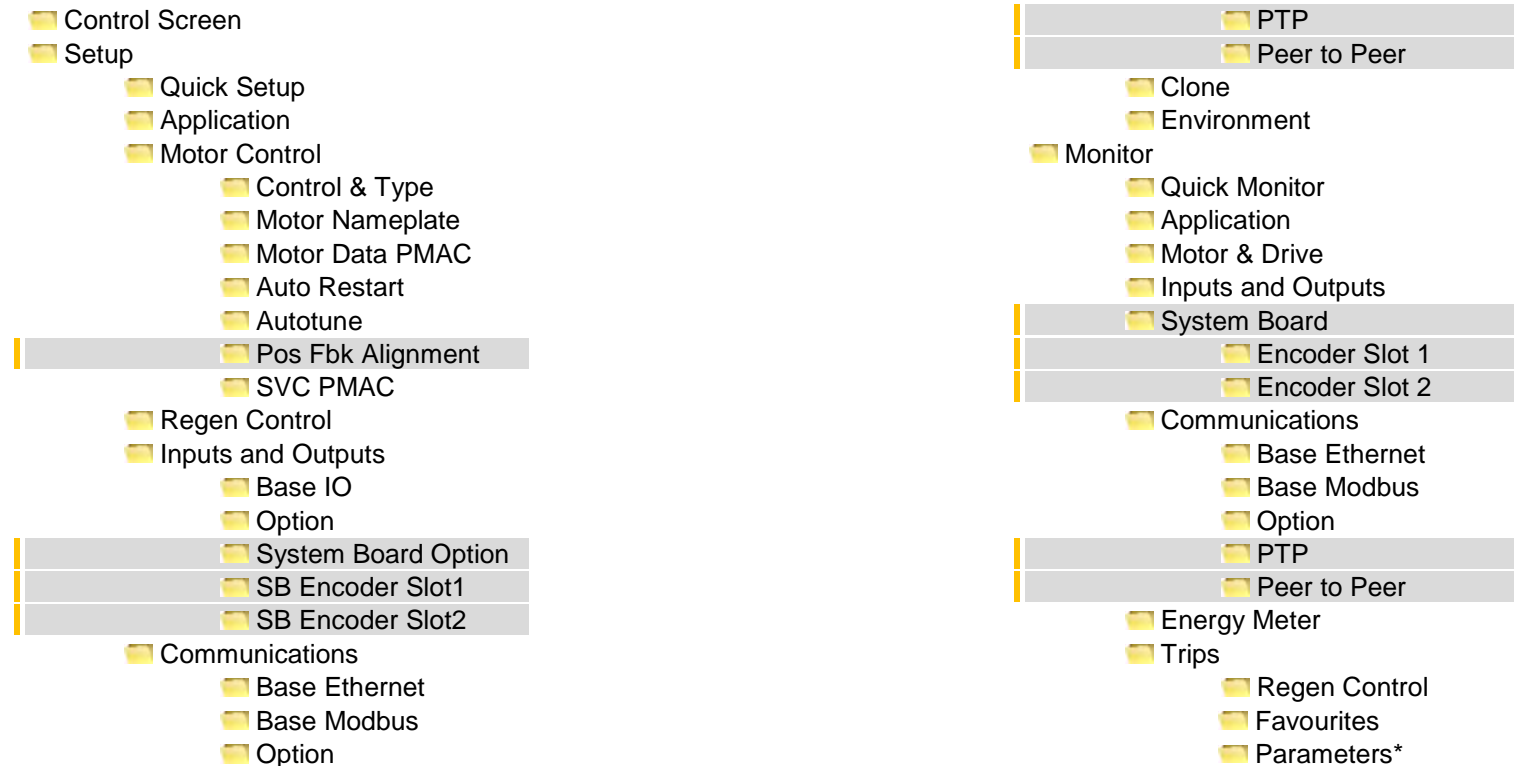

\* The “Parameters” menu is intended for expert use only, see Appendix D



## Menu Descriptions

### CONTROL SCREEN

In local sequencing mode the Control Screen menu shows the Local Setpoint, the Seed Feedback and configuration of the action of the Run key and direction. When the inverter is not in local sequencing mode this menu shows the operating speed. The contents of the Control Screen can be modified by the configuration.

### SETUP

Parameters that may require modification once the Setup Wizard is complete.

### MONITOR


This menu contains parameters commonly used to verify the correct operation of the inverter and the process.

### FAVOURITES

The Favourites menu contains up to 20 parameters selected for ease of access.

#### To Add a Parameter to the Favourites Menu


Using the GKP, navigate to the parameter of interest.


Press and hold the OK key until the Attributes screen is shown, (hold for about 2s) then this appears  + and press the “Add to Favourites” soft key.

#### To Remove a Parameter From the Favourites Menu

Using the GKP navigate to the parameter of interest in the Favourites menu.

Press and hold the OK key until the Attributes screen is shown, (hold for about 2s).

Press the “Remove from Favourites” soft key,  - .

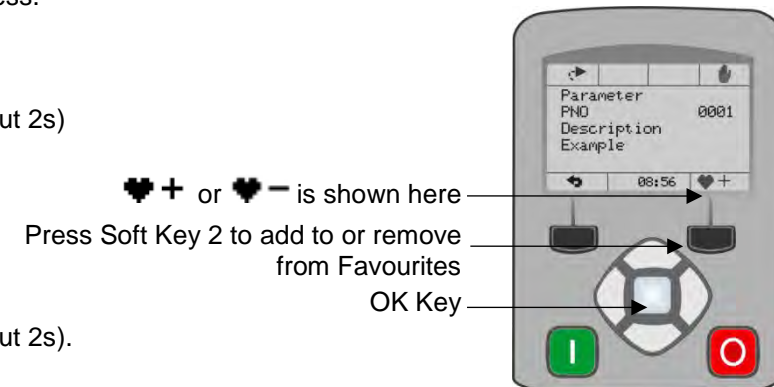

### PARAMETERS

A complete collection of all the parameters in the inverter. This menu is intended for expert use.

## 8-3 Menu Organisation

### Parameter Map

The following table shows the parameters as they appear in order on the Web page and GKP. Also shown is the Parameter Number, PNO. This is a unique reference for each parameter. For more details about each parameter refer to Appendix D.

<ul style="list-style-type: none"> <li>Control Screen</li> <li>Setup <ul style="list-style-type: none"> <li>Quick Setup</li> <li>Application</li> <li>Motor Control <ul style="list-style-type: none"> <li>Control and Type <ul style="list-style-type: none"> <li>Motor Type or AFE 0511</li> <li>Control Strategy 0512</li> <li>Control Type 1533</li> <li>Encoder Feedback 1743</li> <li>100% Speed in RPM 0464</li> <li>Acceleration Time 0486</li> <li>Deceleration Time 0487</li> <li>Current Limit 0305</li> <li>Main Torque Lim 0417</li> <li>Seq Stop Method SVC 1257</li> <li>Seq Stop Method VHz 0484</li> <li>Stop Ramp Time 0504</li> <li>VHz Shape 0422</li> <li>Fixed Boost 0447</li> <li>Duty Selection 0390</li> </ul> </li> <li>Motor Nameplate <ul style="list-style-type: none"> <li>Base Frequency 0457</li> <li>Rated Motor Current 0455</li> <li>Motor Poles 0458</li> <li>Base Voltage 0456</li> <li>Nameplate Speed 0459</li> <li>Power Factor 0461</li> <li>Motor Power 0460</li> </ul> </li> <li>Motor Data PMAC <ul style="list-style-type: none"> <li>PMAC Max Speed 0555</li> <li>PMAC Max Current 0556</li> <li>PMAC Rated Current 0557</li> <li>PMAC Rated Torque 0558</li> <li>PMAC Motor Poles 0559</li> <li>PMAC Back Emf Const KE 0560</li> <li>PMAC Base Volt 1387</li> </ul> </li> </ul> </li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>PMAC Winding 1809</li> <li>PMAC Therm Time Const 0565</li> <li>PMAC Motor Inertia 0564</li> <li>Auto Restart <ul style="list-style-type: none"> <li>AR Enable 1469</li> <li>AR Mode 1470</li> <li>AR Max Restarts 1471</li> <li>AR Trip Mask 1472</li> <li>AR Trip Mask 2 0796</li> <li>AR Initial Delay 1505</li> <li>AR Repeat Delay 1506</li> </ul> </li> <li>Autotune <ul style="list-style-type: none"> <li>Autotune Enable 0255</li> <li>Autotune Mode 0256</li> <li>Nameplate Mag Current 1550</li> <li>Autotune Test Disable 0257</li> <li>Autotune Ramp Time 0274</li> <li>ATN PMAC Test Disable 1388</li> <li>ATN PMAC Ls Test Freq 1405</li> </ul> </li> <li>SVC PMAC <ul style="list-style-type: none"> <li>PMAC SVC Start Cur 0478</li> <li>PMAC SVC Start Speed 0479</li> </ul> </li> <li>Pos Fbk Alignment <ul style="list-style-type: none"> <li>Alignment Enable 1798</li> <li>Alignment On Power On 1796</li> <li>Alignment Method 1797</li> <li>Alignment Level 1799</li> <li>Alignment Ramp Time 1800</li> <li>Alignment On Motor 1801</li> </ul> </li> <li>Regen Control <ul style="list-style-type: none"> <li>Motor Type or AFE 0511</li> <li>AFE Inductance 1730</li> <li>AFE VDC Demand 1711</li> <li>AFE Current Control 1693</li> <li>AFE Iq Demand 1705</li> <li>AFE Id Demand 1704</li> </ul> </li> <li>Inputs and Outputs <ul style="list-style-type: none"> <li>Base IO <ul style="list-style-type: none"> <li>Anin 01 Type 0001</li> <li>Anin 01 Offset 0957</li> <li>Anin 01 Scale 0958</li> <li>Anin 02 Type 0002</li> </ul> </li> </ul> </li> </ul>
--	---

# Menu Organisation 8-4

Anin 02 Offset	0959
Anin 02 Scale	0960
Anout 01 Type	0003
Anout 01 Scale	0686
Anout 01 Offset	1108
Anout 01 ABS	1441
Anout 02 Type	0004
Anout 02 Scale	1460
Anout 02 Offset	1467
Anout 02 ABS	1468
Option	
Option IO Required	1178
Thermistor Type	1184
Encoder Supply	1511
Encoder Lines	1512
Encoder Invert	1513
Encoder Type	1514
Encoder Single Ended	1515
Encoder Count Reset	1517
Resolver Frequency	1791
Resolver Voltage	1790
Resolver Ratio	1792
Resolver Max Speed	1825
Resolver Poles	1793
Resolver Built-In Gear	1822
Resolver Invert	1810
Resolver Speed Filter	1815
Resolver Min Filter	1851
Resolver Resolution	1816
Anin 11 Offset	1461
Anin 11 Scale	1462
Anin 12 Offset	1463
Anin 12 Scale	1464
Anin 13 Offset	1465
Anin 13 Scale	1466
System Board Option	
System Board Required	1739
Output Enable	1678
Output Source	1679
Output Voltage	1680
Output A	1756
Output B	1757
Output Z	1758
Synth Encoder Lines	1696
Synth Encoder Speed	1698
Synth Encoder Invert	1702
SB Encoder Slot1	
Encoder Supply	1663

Encoder Lines	1664
Encoder Invert	1665
Encoder Type	1666
High Input Threshold	1667
Encoder Count Reset	1669
SB Encoder Slot2	
Encoder Lines	1671
Encoder Invert	1672
Encoder Type	1673
High Input Threshold	1674
Encoder Count Reset	1676
Communications	
Base Ethernet	
DHCP	0929
Auto IP	0930
User IP Address	0933
User Subnet Mask	0934
User Gateway Address	0935
Web Access	0944
Base Modbus	
Maximum Connections	0939
High Word First	0940
Modbus Timeout	0941
Modbus Trip Enable	0942
Modbus Mapping[16]	1567
Modbus TCP Password	1659
Option	
Comms Required	0044
BACnet MAC Address	1091
BACnet MSTP Device ID	1092
BACnet Baud Rate	1093
BACnet MSTP Timeout	1094
BACnet IP Device ID	0209
BACnet IP Timeout	0210
CANopen Node Address	0212
CANopen Baud Rate	0213
ControlNet MAC ID	0215
DeviceNet MAC ID	0219
DeviceNet Baud Rate	0220
Modbus Device Address	0229
Modbus RTU Baud Rate	0230
Parity And Stop Bits	0231
High Word First RTU	0232
Modbus RTU Timeout	0233
High Word First TCP	0235
Profibus Node Address	0238
Modbus TCP Timeout	0236
Address Assignment	0199

# 8-5 Menu Organisation

Fixed IP Address	0200
Fixed Subnet Mask	0201
Fixed Gateway Address	0202
Option Web Enable	0203
Web Parameters Enable	0204
Option FTP Enable	0205
Option FTP Admin Mode	0206
IPConfig Enable	0207
Comms Trip Enable	0048
Comms Reset Allow	1853
BACnet Max Master	1095
BACnet Max Info Frames	1096
DNet Producing Inst	0222
DNet Consuming Inst	0223
CNet Producing Inst	0216
CNet Consuming Inst	0217
ENet Producing Inst	0226
ENet Consuming Inst	0227
Modbus Password	1640
Read Mapping[32]	0055
Write Mapping[32]	0120
PTP	
PTP Enable	1661
PTP Clock Type	1684
PTP Clock Mode	1683
PTP Domain Number	1787
PTP Log Sync Interval	1681
PTP Priority2	1686
PTP Lock Threshold	1685
Peer to Peer	
Peer to Peer Enable	1725
Destination IP Address	1726
Destination Port	1727
Local Port	1728
Clone	
Clone Filename	1534
Clone Direction	1537
Full Restore	1538
Application	1539
Power Parameters	1541
Other Parameters	1540
Clone Start	1542
Clone Status	1543
Environment	
Drive Name	0961
GKP Password	1142
Web Access	0944
Display Timeout	0983

Startup Page	0982
Monitor	
Quick Monitor	
Application	
Motor and Drive	
Actual Speed RPM	0393
DC Link Voltage	0392
Actual Speed rps	0394
Actual Speed Percent	0395
DC Link Volt Filtered	0396
Actual Torque	0399
Actual Field Current	0400
Motor Current Percent	0401
Motor Current	0402
Motor Terminal Volts	0405
Actual Pos Torque Lim	0420
Actual Neg Torque Lim	0421
Heatsink Temperature	0407
CM Temperature	0406
PMAC Wiring	1809
Inputs and Outputs	
Digout Value	0022
Digin Value	0005
Anout 01 Value	0042
Anout 02 Value	0043
Anin 01 Value	0039
Anin 01 Break	0040
Anin 02 Value	0041
Anin 11 Value	1181
Anin 12 Value	1182
Anin 13 Value	1183
Encoder Speed	1516
Encoder Count	1518
SB Digital Input 1	1759
SB Digital Input 2	1722
SB Digital Input 3	1723
Resolver Speed %	1814
resolver position	1824
Resolver Turns	1811
Resolver Fraction Turns	1812
System Board	
Encoder Slot 1	
Encoder Speed	1668
Encoder Count	1670
Encoder Slot 1	
Encoder Speed	1675
Encoder Count	1677
Communications	

# Menu Organisation 8-6

■ Base Ethernet	
Ethernet State	0919
MAC Address	0920
IP Address	0926
Subnet Mask	0927
Gateway Address	0928
■ Base Modbus	
Open Connections	1241
Process Active	0943
Mapping Valid	1632
■ Option	
Comms Fitted	0045
BACnet MSTP State	1089
BACnet IP State	0208
Profibus State	0237
EtherNet IP State	0225
Modbus TCP State	0234
Modbus RTU State	0228
EtherCAT State	0224
PROFINET State	0239
PROFINET Device Name	0240
CANopen State	0211
ControlNet State	0214
DeviceNet State	0218
CANopen Actual Baud	1251
DeviceNet Actual Baud	0221
Comms Supervised	0047
Comms Event Active	0186
Option MAC Address	0189
Option IP Address	0195
Option Subnet Mask	0196
Option Gateway	0197
Option DHCP Enabled	0198
Comms Module Version	0049

Comms Module Serial	0050
Comms Diagnostic	0051
Comms Diagnostic Code	0052
Comms Exception	0053
Comms Net Exception	0054

## ■ PTP

PTP State	1689
PTP Clock	1699
PTP Offset	1687
PTP Locked	1688

## ■ Peer to Peer

Peer to Peer State	1729
--------------------	------

## ■ Energy Meter

Energy kWh	0383
Power kW	0380
Power HP	0381
Reactive Power	0382
Power Factor Est	0385

## ■ Trips

First Trip	0696
Active 1 - 32	0763
Active 33 - 64	0513
Warnings 1 - 32	0829
Warnings 33 - 64	0514
RTA Code	0998
RTA Data	0999

## ■ Regen Control

AFE Sync Frequency	1703
AFE Status	1721
DC Link Voltage	0392

Favourites

## 9-1 Setup Wizard

# Chapter 9: Setup Wizard

## GKP Setup Wizard

### Purpose of the Setup Wizard

The purpose of the setup wizard is to configure the inverter in a clear and concise manner.

First familiarize yourself with Chapter 7 Graphical Keypad, for the keypad functions.

### Starting the Setup Wizard

The Setup Wizard is automatically invoked when first powered up. The setup wizard may be invoked at any other time by pressing the set-up key ( ≡ ). This is shown on the Welcome Screen, (at the “top” of the MMI menu structure). The Setup Wizard is also invoked by changing the parameter “Run Wizard?” to YES (you will find this under the “Parameters: Device Manager: Setup Wizard” menu).

### Running the Setup Wizard


At each point in the wizard pressing the **OK key** selects the displayed value and moves on to the next step.

Pressing **Soft key 1** moves back a step. Pressing the UP and DOWN keys modifies the selected value.

The default setting for all parameters depends on earlier answers and on the physical configuration of the inverter so pressing OK repeatedly will result in no parameter values being altered. All data entered is automatically saved without the need for any additional commands.

### Information that you will need in order to set up the motor control

When you run the setup wizard you will be asked for various items of information in order to set up the motor control.

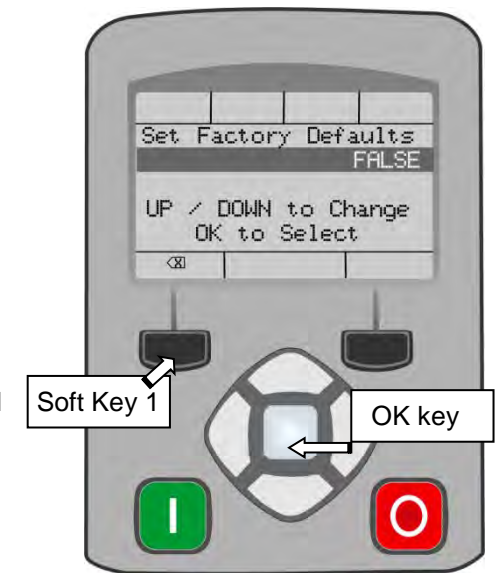

**Setup Wizard Stages**

The Setup Wizard is divided into sections. With the exception of the first group of parameters, each section may be skipped. The first group of parameters sets the inverter operating environment.

PNO	Parameter	Comment
1141	View Level	Select the view level, Operator, Technician or Engineer.
1005	Language	Select the required language to be used on the GKP. There may be a slight pause while the inverter adopts the selected language.
1002	Update Firmware	Select YES to update the inverter's firmware. Only visible in Engineering view mode with a firmware file on the SD Card.
1006	Run Wizard	Select YES to continue. Select NO to exit with the new settings for View Level and Language
1000	Reset to Defaults	Changing this parameter to TRUE then pressing OK resets all parameters back to the default value determined by the inverters hardware configuration. If this choice is left FALSE all parameters retain their previously set values.
1186	Time and Date	Only shown if an IO option with RTC hardware is fitted.
0944	Web Access	Set to FULL to allow access to parameter values via the web page.
1738	Enable Auto Save	Set to TRUE to automatically save parameter values as they are entered on the GKP and Web page. Set to FALSE to enable the manual save feature. All parameters are saved on completion of the GKP wizard regardless of the setting of this parameter. Also, this parameter is always saved when changed.
0961	Drive Name	Defaults to show the Ethernet MAC address

## 9-3 Setup Wizard

### Application selection

Selection of the specific Macro and associated parameters.

PNO	Parameter	Validity						Comment
	Setup Application?							Select YES to configure the application parameters, NO to skip this section
1900	Selected Application	BASIC SPEED CONTROL	AUTO/MANUAL CONTROL	SPEED RAISE/LOWER	SPEED PRESETS	PROCESS PID	AFE	
1937	Disable Coast Stop	•	•	•	•	•		
1938	Disable Quickstop	•	•	•	•	•		
1901	RL Ramp Time			•				Sets the rate of change of the output of the Raise/Lower ramp.
1902	RL Reset Value			•				The value of the Raise/Lower ramp output when reset.
1903	RL Maximum Value			•				The upper limit of the Raise/Lower ramp output.
1904	RL Minimum Value			•				The lower limit of the Raise/Lower ramp output
1916	Preset Speed 0				•			The preset speed output when the selected preset is 0.
1917	Preset Speed 1				•			The preset speed output when the selected preset is 1.
1918	Preset Speed 2				•			The preset speed output when the selected preset is 2.
1919	Preset Speed 3				•			The preset speed output when the selected preset is 3.
1920	Preset Speed 4				•			The preset speed output when the selected preset is 4.
1921	Preset Speed 5				•			The preset speed output when the selected preset is 5.
1922	Preset Speed 6				•			The preset speed output when the selected preset is 6.
1923	Preset Speed 7				•			The preset speed output when the selected preset is 7.
1926	PID Setpoint Negate					•		Changes the sign of the setpoint input.
1927	PID Feedback Negate					•		Changes the sign of the feedback input.
1928	PID Prop Gain					•		The proportional gain of the PID controller.
1929	PID Integral TC					•		The integral time constant of the PID controller.
1930	PID Derivative TC					•		The derivative time constant of the PID controller.
1931	PID Output Filter TC					•		The time constant of the first order filter used to filter the PID output.
1932	PID Output Pos Limit					•		The maximum positive excursion, (limit), of the PID controller.
1933	PID Output Neg Limit					•		The maximum negative excursion, (limit), of the PID controller.
1934	PID Output Scaling					•		The overall scaling factor which is applied after the positive and negative limit clamps



**Input and Output Option**

Configuration of the type and settings for the available IO options.

PNO	Parameter	Comment
	Setup Option IO?	Select TRUE to configure the IO Option. Set to FALSE to skip this section Only shown if an IO option is fitted, or if one has been previously configured.
1178	Option IO Required	Select the required IO Option type.
1184	Thermistor Type	Select the required thermistor type.
1511	Encoder Supply	For the Pulse Encoder option, configures the encoder supply output.
1512	Encoder Lines	For the Pulse Encoder option, configures the number of pulses per revolution
1514	Encoder Type	For the Pulse Encoder option, configures the encoder type
1515	Encoder Single Ended	For the Pulse Encoder option, configures whether the input is single ended or differential.
1791	Resolver Frequency	Frequency of the Resolver excitation in kHz
1790	Resolver Voltage	Voltage supply of the Resolver excitation in Vrms
1792	Resolver Ratio	Resolver Ratio, corresponding to the ratio between excitation voltage and max sin and cos voltages
1825	Resolver Max Speed	Mechanical Resolver max speed in rpm
1793	Resolver Poles	Resolver poles number -Should be an even number
1822	Resolver Built-In Gear	Number of shaft mechanical turns for 1 Resolver turn
1810	Resolver Invert	To change the count direction of the Resolver
1815	Resolver Speed Filter	Speed filter action, in % of the actual speed value in Hz
1851	Resolver Min Filter	Minimum filter value applied to the speed information. The filter value is at least equal to this value
1816	Resolver Resolution	Resolver resolution selection, in bits per electrical turns (eg: 16 bits is 65536 counts per electrical resolver turn)

**Analog Input and Output**

Configuration of the ranges for the analog inputs and outputs. Also selects the thermistor type if an IO option is fitted.

PNO	Parameter	Comment
	Setup Input/Output?	Select TRUE to configure the analog input and output ranges. Set to FALSE to skip this section
0001	Anin 01 Type	Select the hardware range for analog input 1
0002	Anin 02 Type	Select the hardware range for analog input 2
0003	Anout 01 Type	Select the hardware range for analog output 1
0004	Anout 02 Type	Select the hardware range for analog output 2

## 9-5 Setup Wizard

### Motor Data

Selection of the motor type, control mode and setting the motor control and process control parameters. The Validity column indicates which parameters are shown, dependent on the control mode.

PNO	Parameter	Validity				Comment
		IM VHz	IM VECT	PMAC	AFE	
	Setup Motor?					Select TRUE to configure the motor parameters, FALSE to skip this section
0511	Motor Type or AFE	•	•	•	•	Selects the motor type.
0512	Control Strategy	•	•			Selects between Volts/Hz and Vector Control.
1533	Control Type		•	•		Only visible if Vector Control is selected. Selects between Sensorless Control, and Closed Loop Control (with encoder).
1743	Encoder Feedback		•	•		
0976	Nominal Supply	•	•			Defines the default value for the motor frequency parameters.
0457	Base Frequency	•	•			The base frequency on the motor name plate
0456	Base Voltage	•	•			The rated voltage on the motor name plate
0458	Motor Poles	•	•			The number of motor poles. Always enter an even number.
0455	Rated Motor Current	•	•			Current rating from the motor name plate.
0460	Motor Power	•	•			Power rating from the motor name plate.
0459	Nameplate Speed	•	•			Nominal speed from the motor name plate.
0461	Power Factor	•				Power factor from the motor name plate, (often shown as $\phi$ ). If this is not available then leave this at the default value.
0555	PMAC Max Speed			•		The motor's maximum speed.
0556	PMAC Max Current			•		The motor's maximum current
0557	PMAC Rated Current			•		The motor's rated current.
0558	PMAC Rated Torque			•		The motor's rated torque
0559	PMAC Motor Poles			•		The number of motor poles. Always enter an even number.
0560	PMAC Back EMF Const KE			•		The motor's Back EMF line to line, rms value (Ke, Volts rms per 1000 rpm)
1387	PMAC Base Volt			•		Rated motor rated voltage in Volt rms
0561	PMAC Winding Resistance			•		The motor's resistance, line to line at 25 °C.
0562	PMAC Winding Inductance			•		The motor's inductance line to line at maximum current
0563	PMAC Torque Const KT			•		Torque constant (Kt, Nm/A rms).
1808	PMAC Encoder Offset			•		
1809	PMAC Wiring			•		
0565	PMAC Therm Time Const			•		The motor's thermal time constant
0564	PMAC Motor Inertia			•		The motor's inertia

PNO	Parameter	Validity				Comment
		IM VHz	IM VECT	PMAC	AFE	
0478	PMAC SVC Start Cur			•		The current level during the startup procedure.
0479	PMAC SVC Start Speed			•		The speed setpoint at which the speed control is switched from an open loop mode to a closed loop mode during the startup procedure
0464	100% Speed in RPM	•	•	•		This is the speed in rpm at which the motor will turn when given a speed demand of 100%.
0486	Acceleration Time	•	•	•		The time that the inverter will take to ramp the setpoint from 0.00% to 100.00% when Ramp Type is LINEAR.
0487	Deceleration Time	•	•	•		The time that the inverter will take to ramp the setpoint from 100.00% to 0.00% when Ramp Type is LINEAR.
1257	Seq Stop Method VHz	•				Selects stopping mode that the controller will use once the run command has been removed when in Volts/Hertz control mode,
0484	Seq Stop Method SVC		•			Selects stopping mode that the controller will use once the run command has been removed when in Sensorless Vector or Closed Loop Vector control mode.
0422	VHz Shape	•				Selects the Volts to Frequency curve.
0390	Duty Selection	•	•	•		Selects the inverter rating. Affects the ratio of nominal current compared with maximum overload current.
1730	AFE Inductance				•	Total inductance (3% + 5%) in the AFE configuration.
1711	AFE VDC Demand				•	DC Link level demand in voltage control mode.
1693	AFE Current Control				•	Sets AFE in current control mode.
1705	AFE Iq Demand				•	Reactive power current demand.
1704	AFE Id Demand				•	Active power current demand.

### Fieldbus Options

This section is only shown if a communications option is fitted.

PNO	Parameter	Comment
0044	Comms Required	This defaults to match the communications option that is fitted. If no option is required select NONE. Selecting a different option will result in a configuration error.

These parameters are shown when the CANopen option is fitted.

PNO	Parameter	Comment
0044	Comms Required	CANOPEN <i>Refer to CANopen Technical Manual HA501841U001</i>
0212	CANopen Node Address	•
0213	CANopen Baud Rate	•
0048	Comms Trip Enable	•

## 9-7 Setup Wizard

These parameters are shown when the DeviceNet option is fitted.

PNO	Parameter		Comment
0044	Comms Required	DEVICENET	<i>Refer to DeviceNet Technical Manual HA501840U001</i>
0219	DeviceNet MAC ID	•	
0220	DeviceNet Baud Rate	•	
0048	Comms Trip Enable	•	

These parameters are shown when the Ethernet IP option is fitted.

PNO	Parameter		Comment
0044	Comms Required	ETHERNET IP	<i>Refer to EtherNet IP Technical Manual HA501842U001</i>
0199	Address Assignment	•	
0200	Fixed IP Address	•	
0201	Fixed Subnet Mask	•	
0202	Fixed Gateway Address	•	
0203	Option Web Enable	•	
0048	Comms Trip Enable	•	

These parameters are shown when the Modbus RTU option is fitted.

PNO	Parameter		Comment
0044	Comms Required	MODBUS RTU	<i>Refer to Modbus RTU Technical Manual HA501839U001</i>
0229	Modbus Device Address	•	
0230	Modbus RTU Baud Rate	•	
0231	Parity And Stop Bits	•	
0232	High Word First RTU	•	
0233	Modbus RTU Timeout	•	
0048	Comms Trip Enable	•	

These parameters are shown when the Profibus DPV1 option is fitted.

PNO	Parameter		Comment
0044	Comms Required	PROFIBUS DPV1	<i>Refer to Profibus DP-V1 Technical Manual HA501837U001</i>
0238	Profibus Node Address	•	
0048	Comms Trip Enable	•	

These parameters are shown when the Profinet IO option is fitted.

PNO	Parameter		Comment
0044	Comms Required	PROFINET IO	<i>Refer to Profinet IO Technical Manual HA501838U001</i>
0199	Address Assignment	•	
0200	Fixed IP Address	•	
0201	Fixed Subnet Mask	•	
0202	Fixed Gateway Address	•	
0203	Option Web Enable	•	

PNO	Parameter		Comment
0048	Comms Trip Enable	•	

### On-board Ethernet

Configuration of the on board Ethernet.

PNO	Parameter	Comment
	Setup Base Ethernet?	Select TRUE to configure the on board Ethernet port. Select FALSE to skip this section
0929	DHCP	
0930	Auto IP	
0933	User IP Address	Only visible if DHCP and Auto IP are both FALSE.
0934	User Subnet Mask	Only visible if DHCP and Auto IP are both FALSE.
0935	User Gateway Address	Only visible if DHCP and Auto IP are both FALSE.
	Setup Base Modbus?	Select TRUE to configure the on board Ethernet port to also act as a Modbus IP client. Select FALSE to skip the following parameters
0939	Maximum Connections	Sets the maximum number of Modbus clients allowed. If set to zero, then no connections will be allowed.
0942	Modbus Trip Enable	Set TRUE to enable the Modbus Trip. The parameter Modbus Timeout must be set to a value other than zero
0940	High Word First	If set to TRUE, the most significant word of a 32-bit parameter will be mapped to the first register, and the least significant word to the next register.
0941	Modbus Timeout	Sets the process active timeout
	Setup Base Ethernet IP?	
3128	EtherNet IP Enable	Enables EtherNet/IP
3129	EtherNet IP Trip	Trip method for the built-in EtherNet/IP

### Autotune Parameters

Autotune enable and autotune mode. To run the autotune process, complete the wizard then run the inverter.

PNO	Parameter	Comment
0255	Autotune Enable	Select TRUE to enable a motor autotune next time the motor is started. (Only visible for induction motor sensorless and feedback vector control mode). Refer to Appendix D Parameter Reference, section D6, for more details.


### Finalising Setup

Once the Setup Wizard has been run to completion the feature is automatically disabled. Re-starting the inverter will not cause the Setup Wizard to be run again. (If it is desired to re-run the Setup Wizard, this can be achieved as detailed above in "Starting the Setup Wizard").

# 9-9 Setup Wizard


## Set Up PMAC Motor Control - Sensorless

Minimum steps ( and list of parameters ) for setting a PMAC motor control in Sensorless mode are given below :

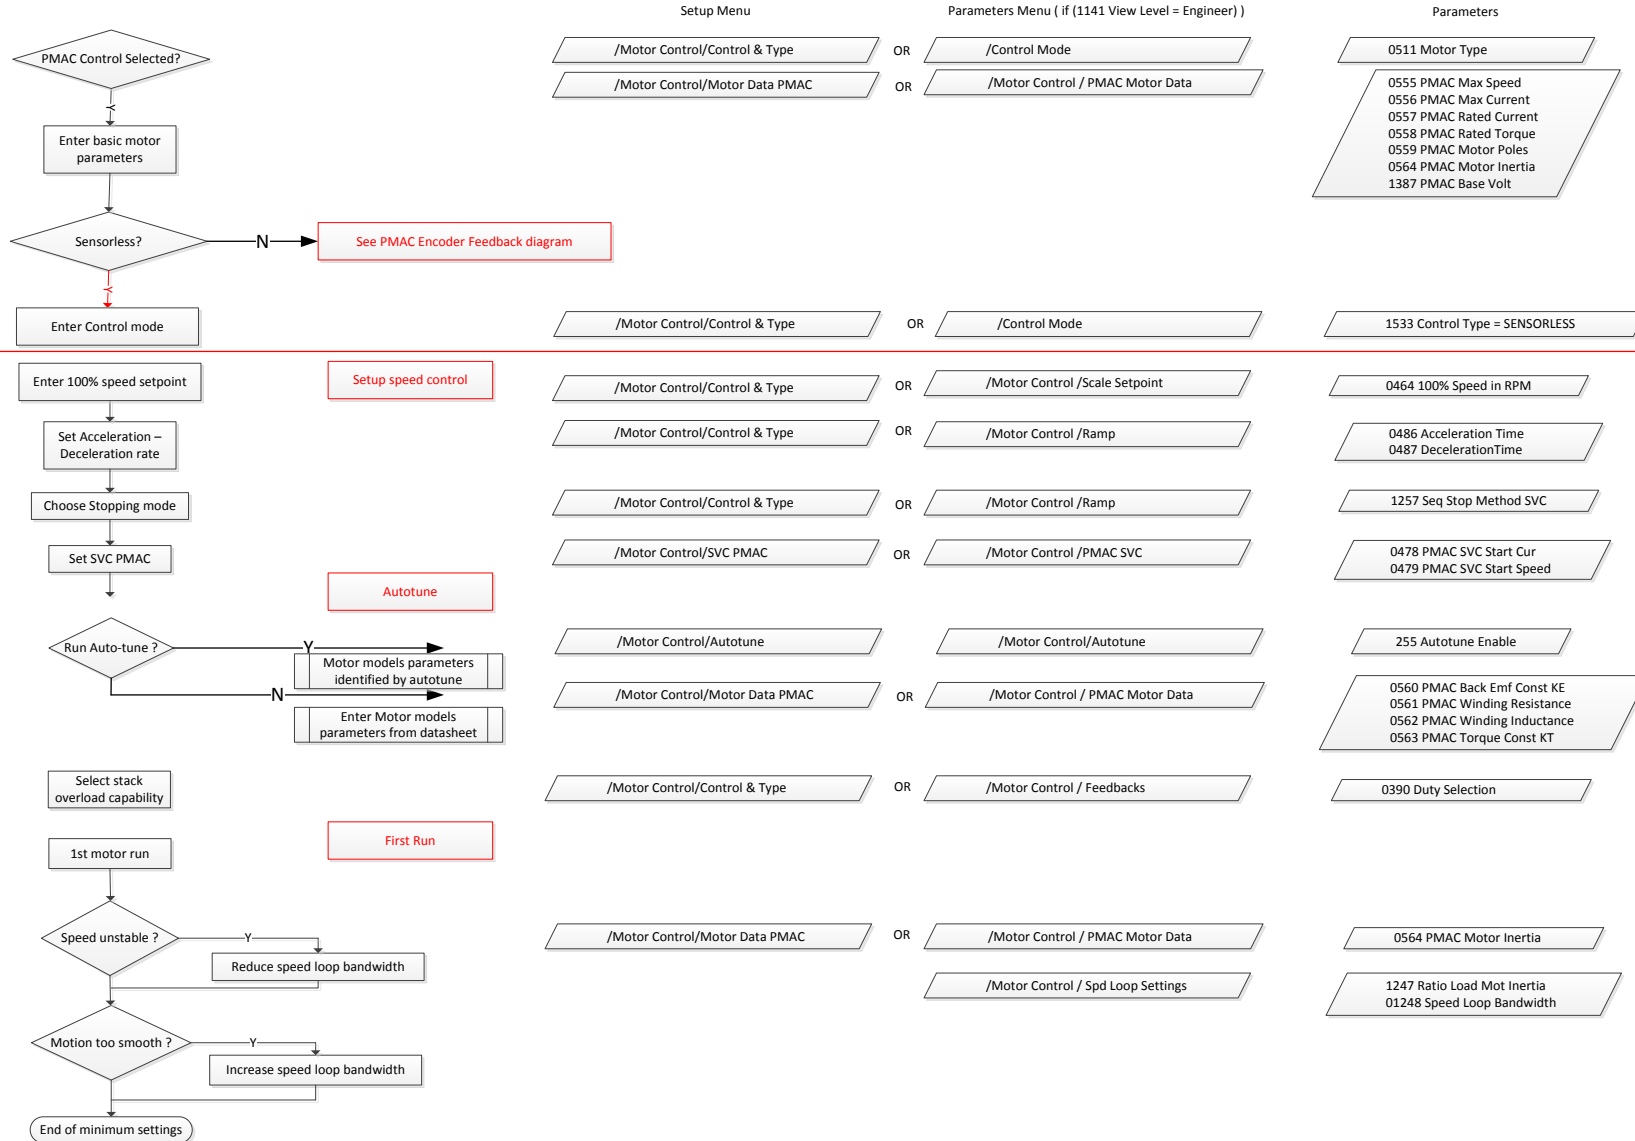


# Set Up PMAC Motor Control – Encoder Feedback

Minimum steps ( and list of parameters ) for setting a PMAC motor control in Closed Loop mode are given below :

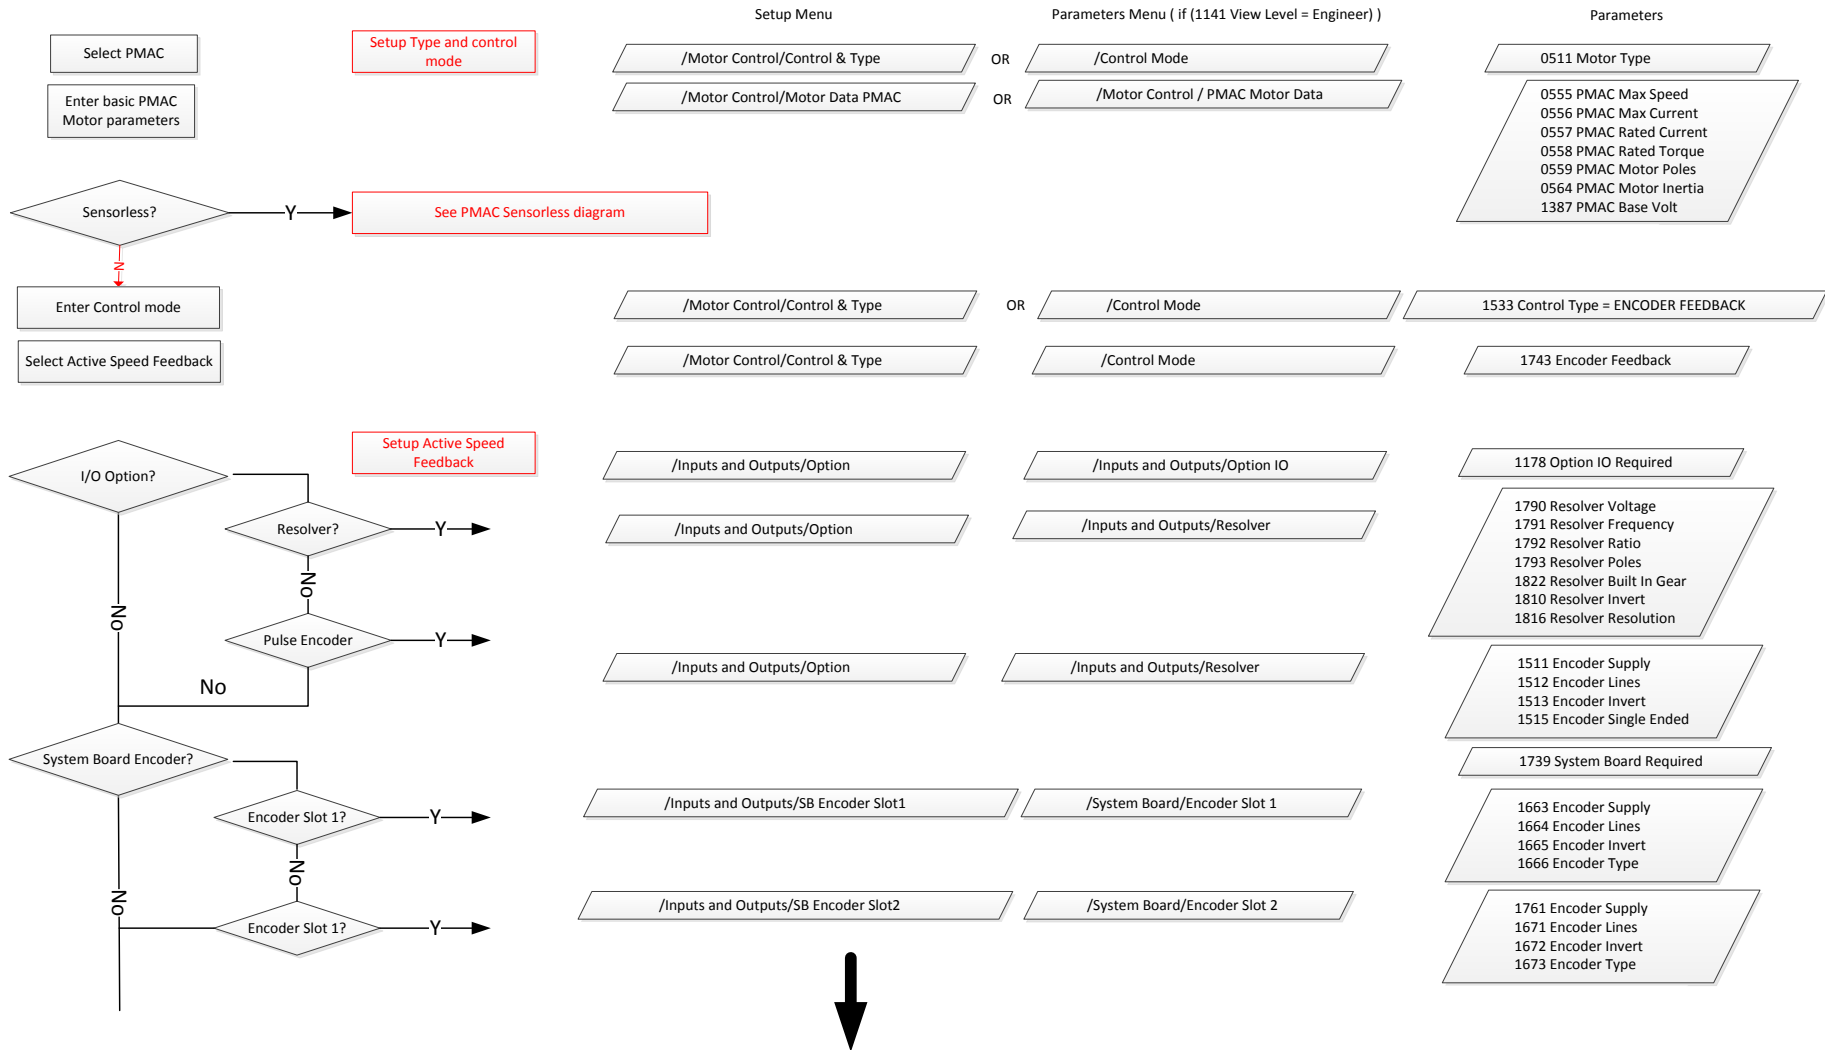

# 9-11 Setup Wizard

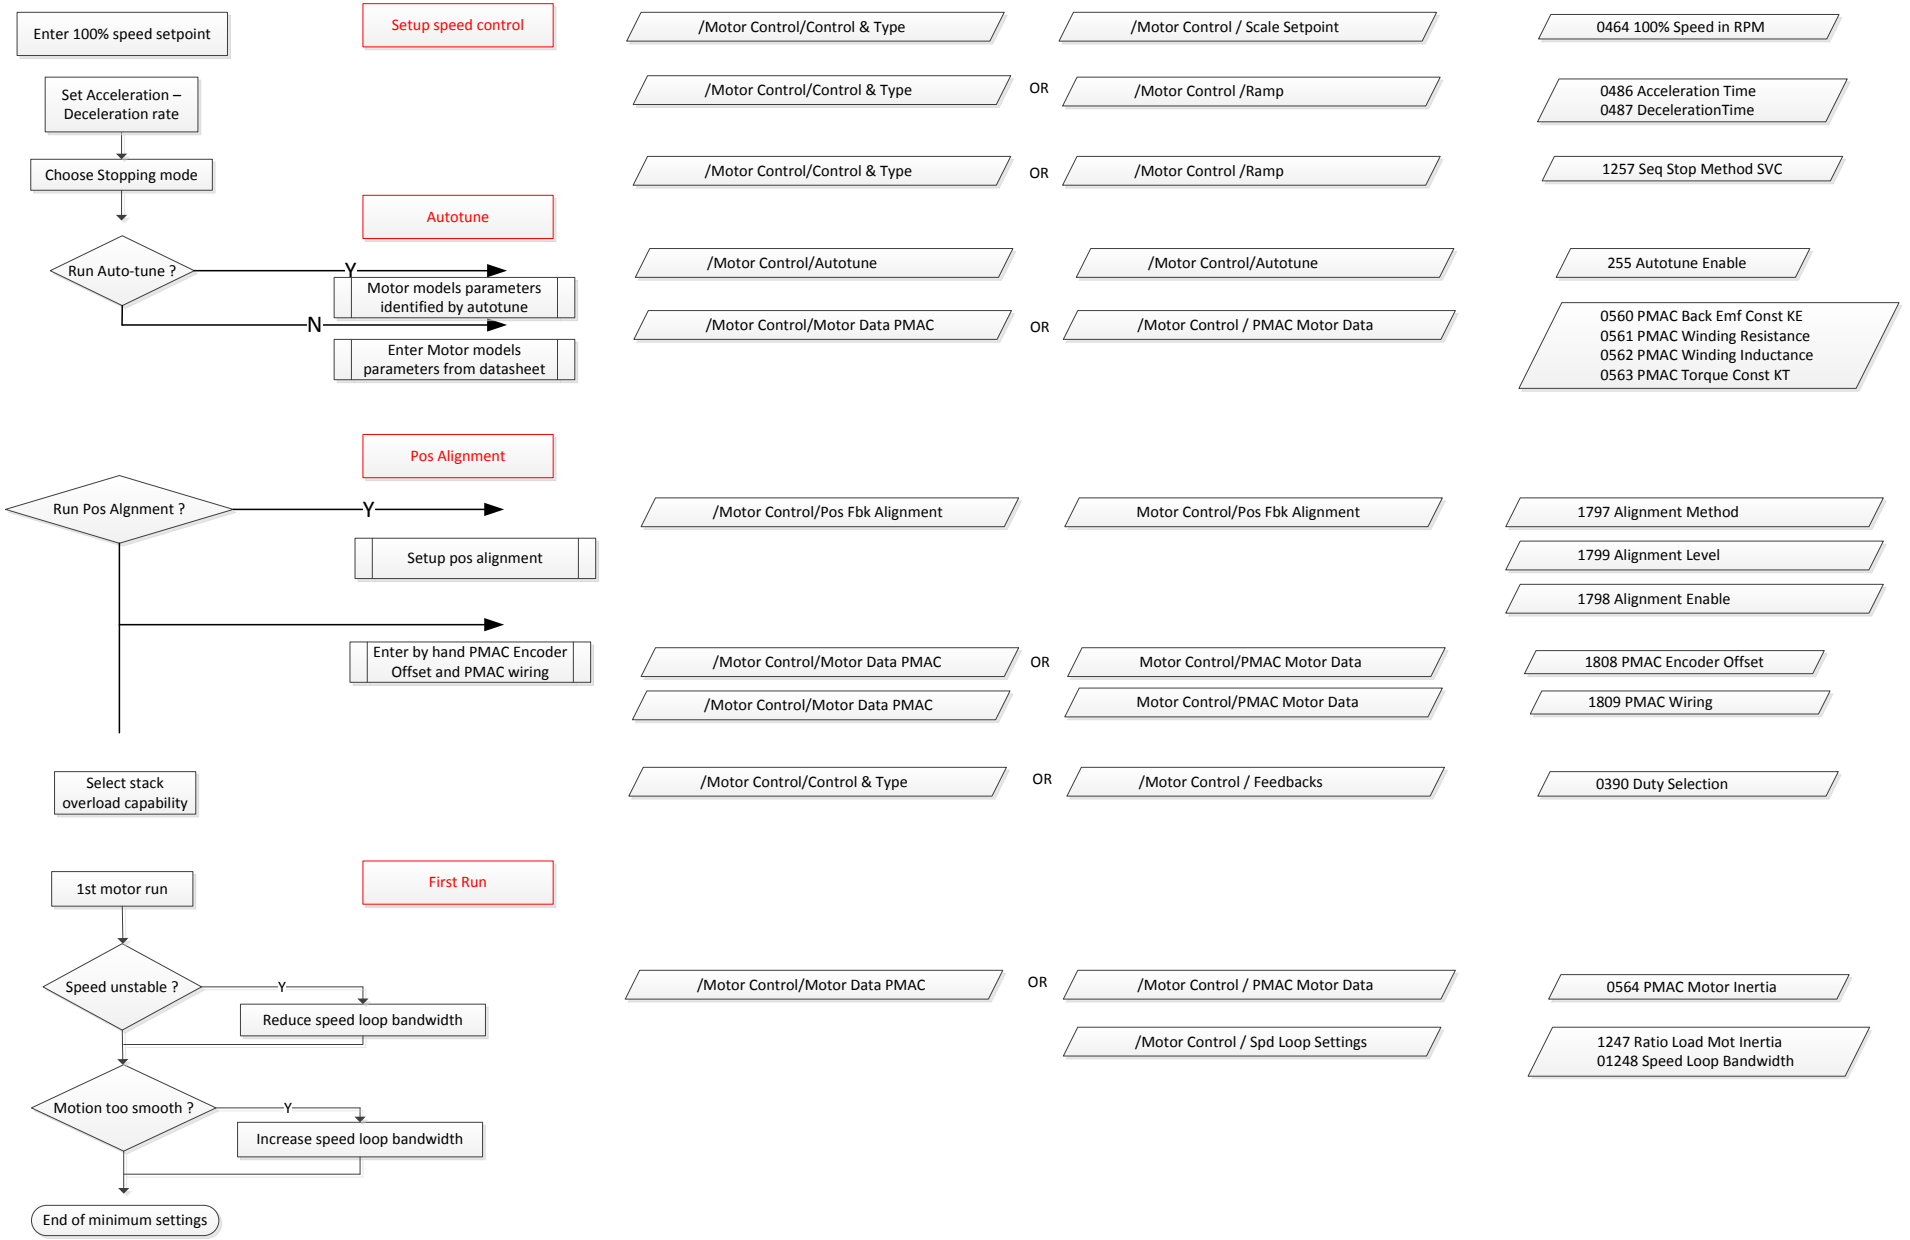



## Set Up PMAC Motor Control – Pos Alignment after Power-up

Vector Control of a PMAC motor needs to know the relative position between the rotor and the stator.

Pos Alignment sequence allows to synchronise encoder position to Motor Back EMF.


This feature is used to automatically calculate any offset between the encoder absolute position and the motor back EMF, as well as selecting the correct wiring of the motor ( U, V, W sequence ) with the encoder position.

**The feature needs to be run after each power cycle with a PMAC motor associated to a non absolute encoder type ( pulse encoder )**

The feature is run on a motor free of rotation, no load attached to the motor shaft.

Depending of the Alignment Method selected, the motor is moving during the sequence.

Below is a simple example on how to force the system to run a Pos Alignment sequence on the first start after power\_up :

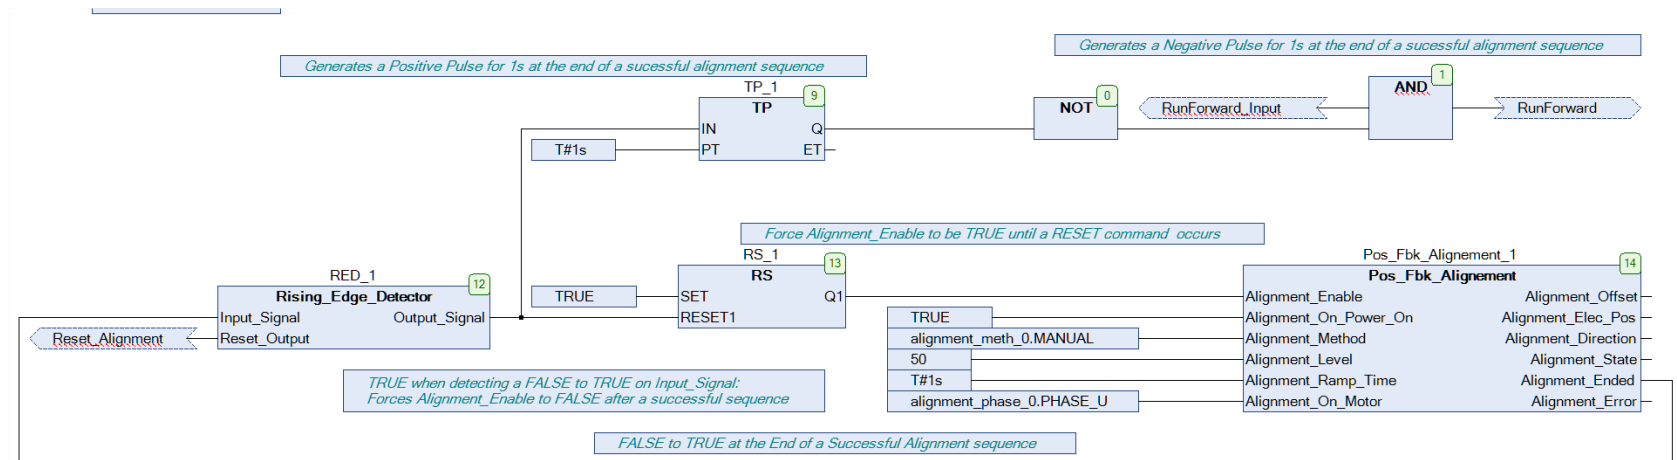

Alignment Method is set to Manual ( It could have been set to AUTOMATIC ).

Alignment Enable is TRUE from Start-up.

The first start command will run the Pos Alignment sequence.


A running and successfully sequence resets Alignment\_Enable to FALSE.

A 1s negative pulse is generated at the end of the sequence. This information can be used to toggle any command to start the system.

## 9-13 Setup Wizard

# Parker Drive Quicktool (PDQ) PC Software

### INSTALLATION

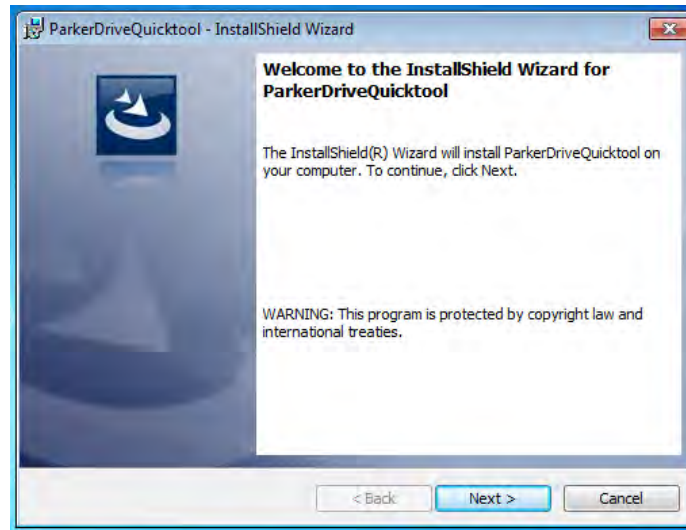

Launch the installer, setup.exe, from the latest version from [www.parker.com/ssd/pdq](http://www.parker.com/ssd/pdq)

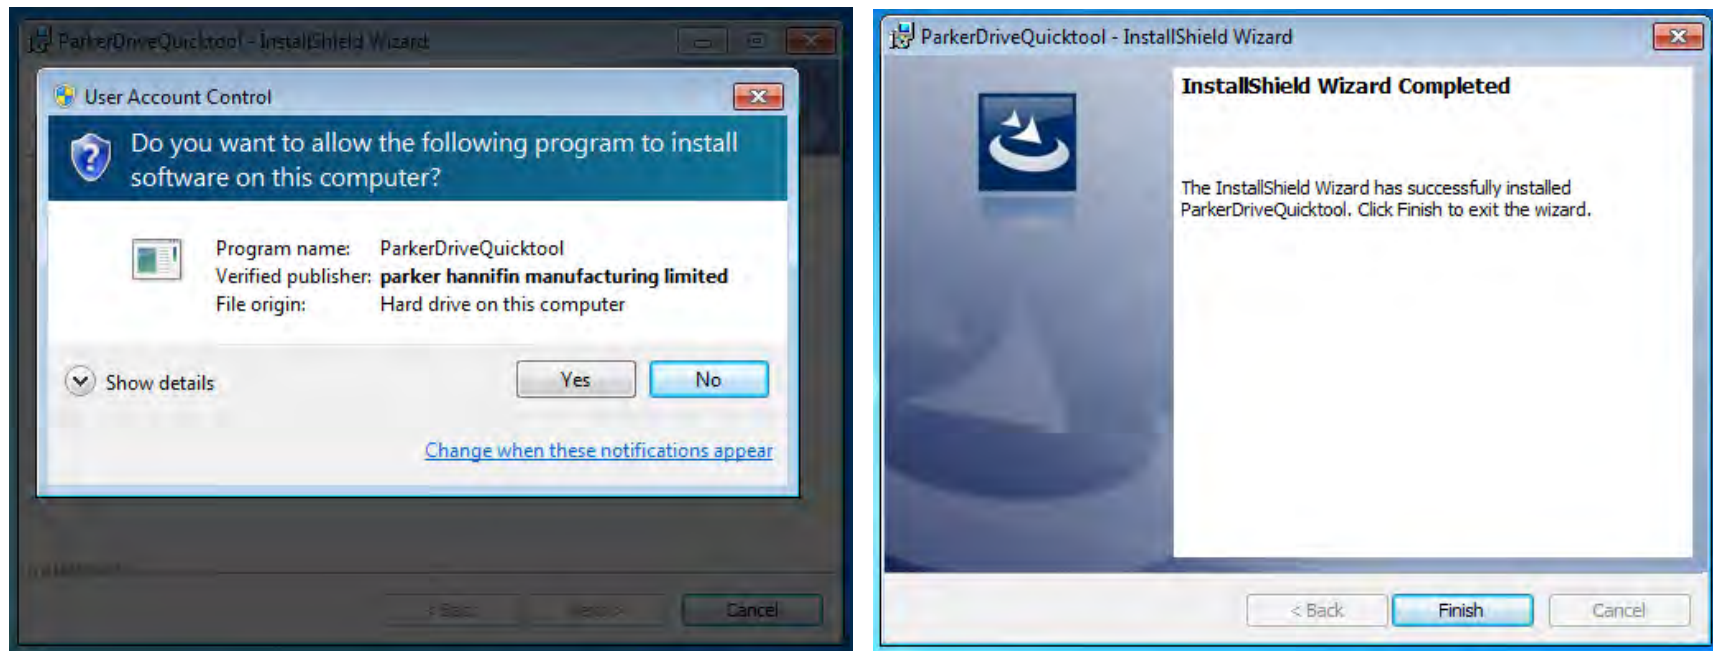


Figure 9-1 InstallShield

Follow the steps of the InstallShield Wizard.

# 9-15 Setup Wizard

## STARTING THE WIZARD

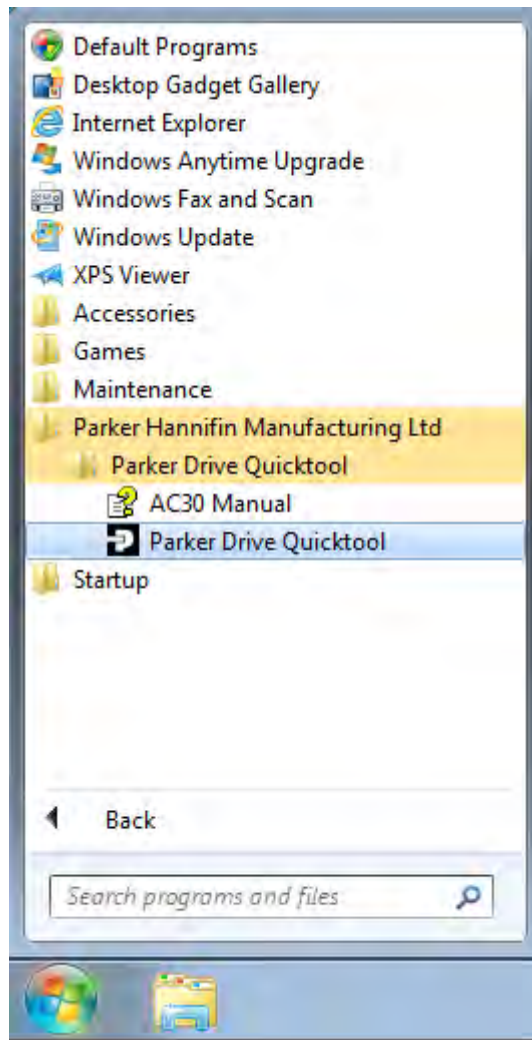


Figure 9-3 Start the Wizard



Figure 9-2 Desktop shortcut

Once the InstallShield completes, run the PDQ from the “Start” menu as shown or from the desktop shortcut as shown in Figure 9-2

## TASK SELECTION

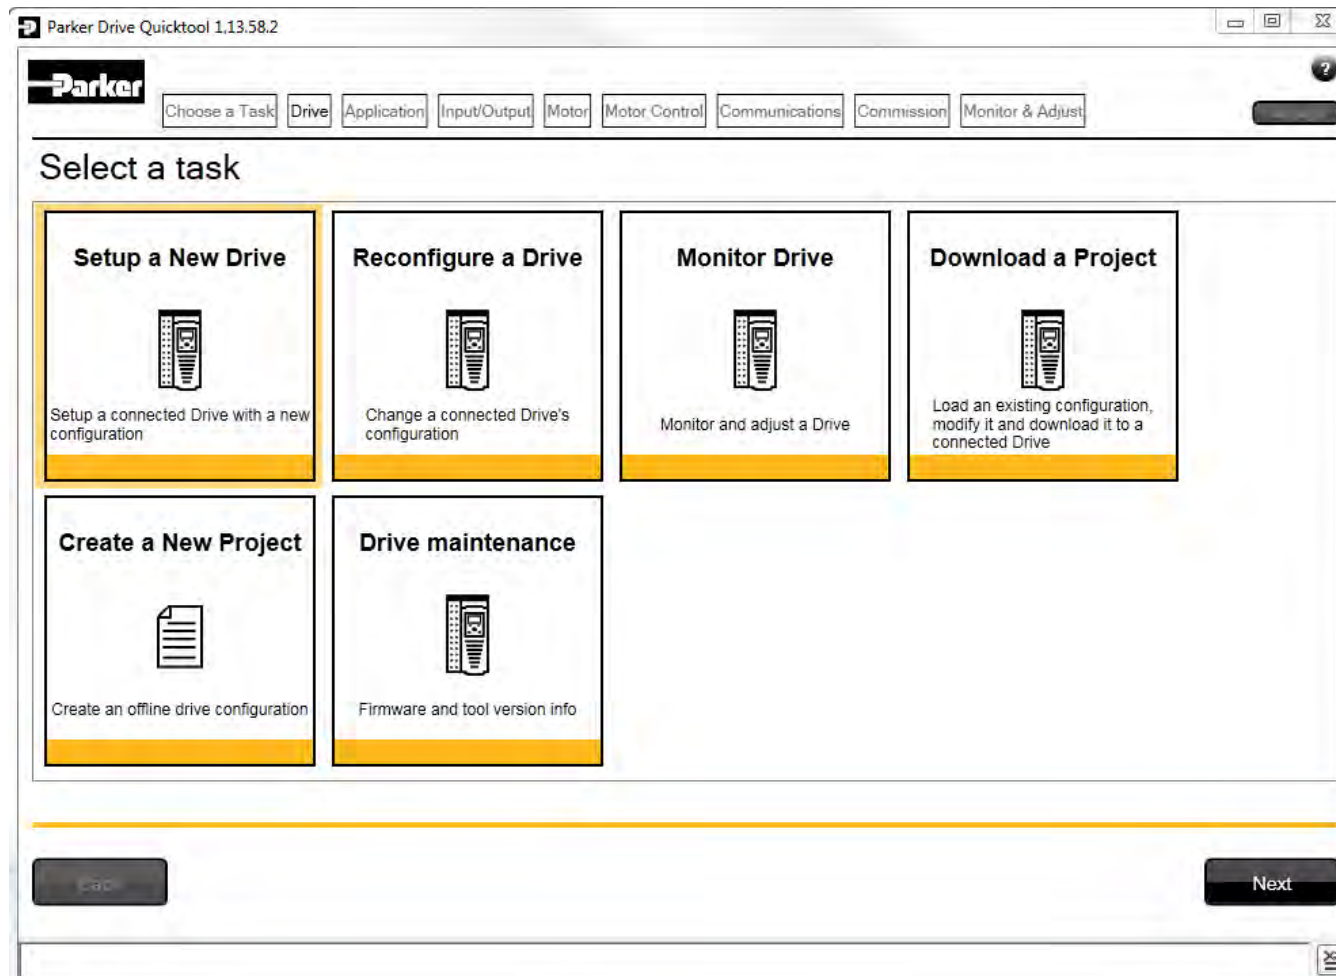


Figure 9-4 Task selection

The first page of the PDQ wizard allows you to choose the task you wish to perform. Figure 9-4 shows the default selection, “Setup a New Drive”. To start this wizard task, click on the “Next” button or the “Drive” page in the title bar.

Note: No data or settings will be changed in the Drive until the “Commission” page is reached and download is confirmed by the Engineer.

# 9-17 Setup Wizard

## FIND DRIVE

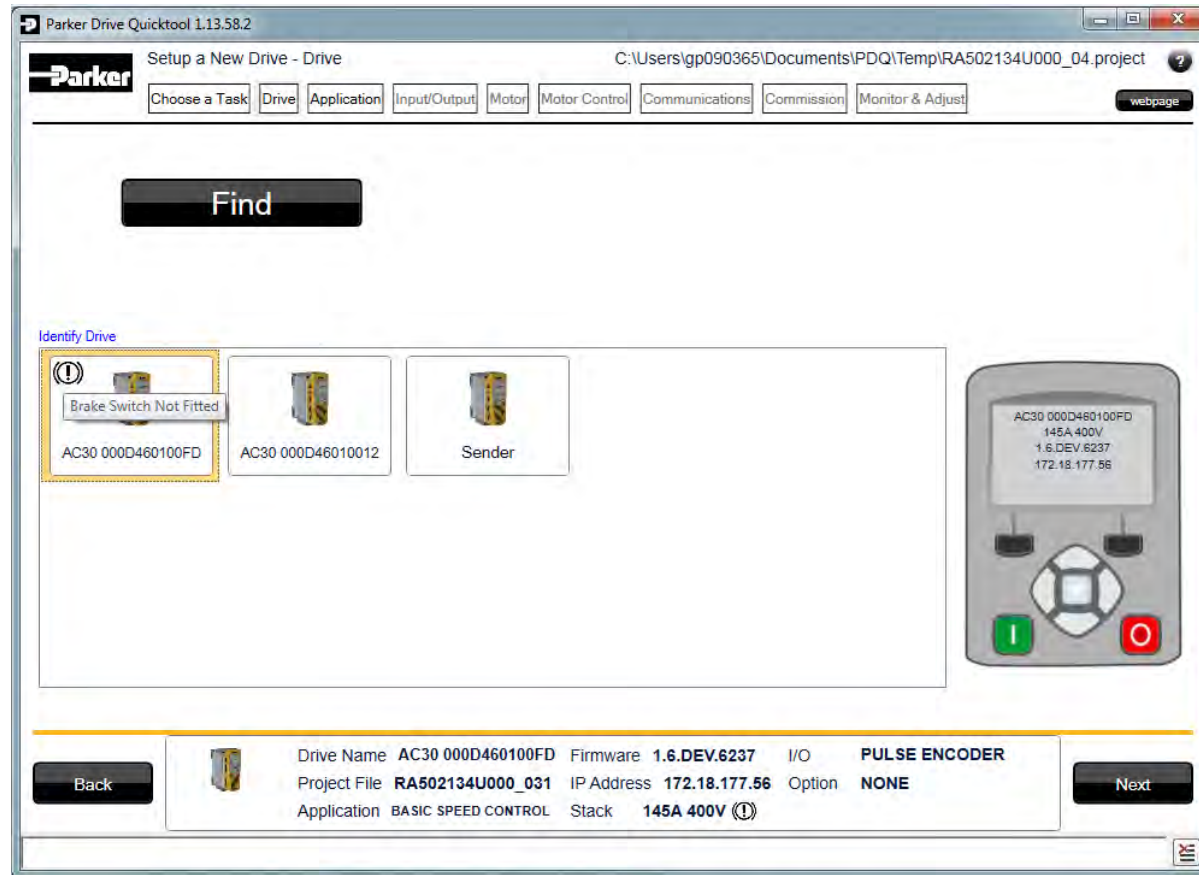


Figure 9-5 Automatic Drive detection

The wizard will automatically detect all the inverters that are visible to the PC via its Ethernet connections. This normally takes 10 seconds, during which time the user interface will go grey and will not respond to you. Once the inverter detection is complete, find your inverter in the list and click on it with the mouse. Information about the selected Drive will be displayed in the status area at the bottom of the screen. Ensure you have selected the correct Drive before continuing. If Drive Brake Switch is not fitted it will be indicated by the symbol as shown in Figure 9-5.

Note: The selected drive's name will match that shown on the GKP home screen.

Click on the "Next" button to begin Commissioning this Drive.

***Troubleshooting Drive Detection***

<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
Drive not found	Drive not connected to the same physical Ethernet network as the PC	Connect Drive and PC to the same network or directly to each other
Drive found but no information displayed	Another person has their PC connected to the Drive	Disconnect the other PC

# 9-19 Setup Wizard

## SELECT MACRO

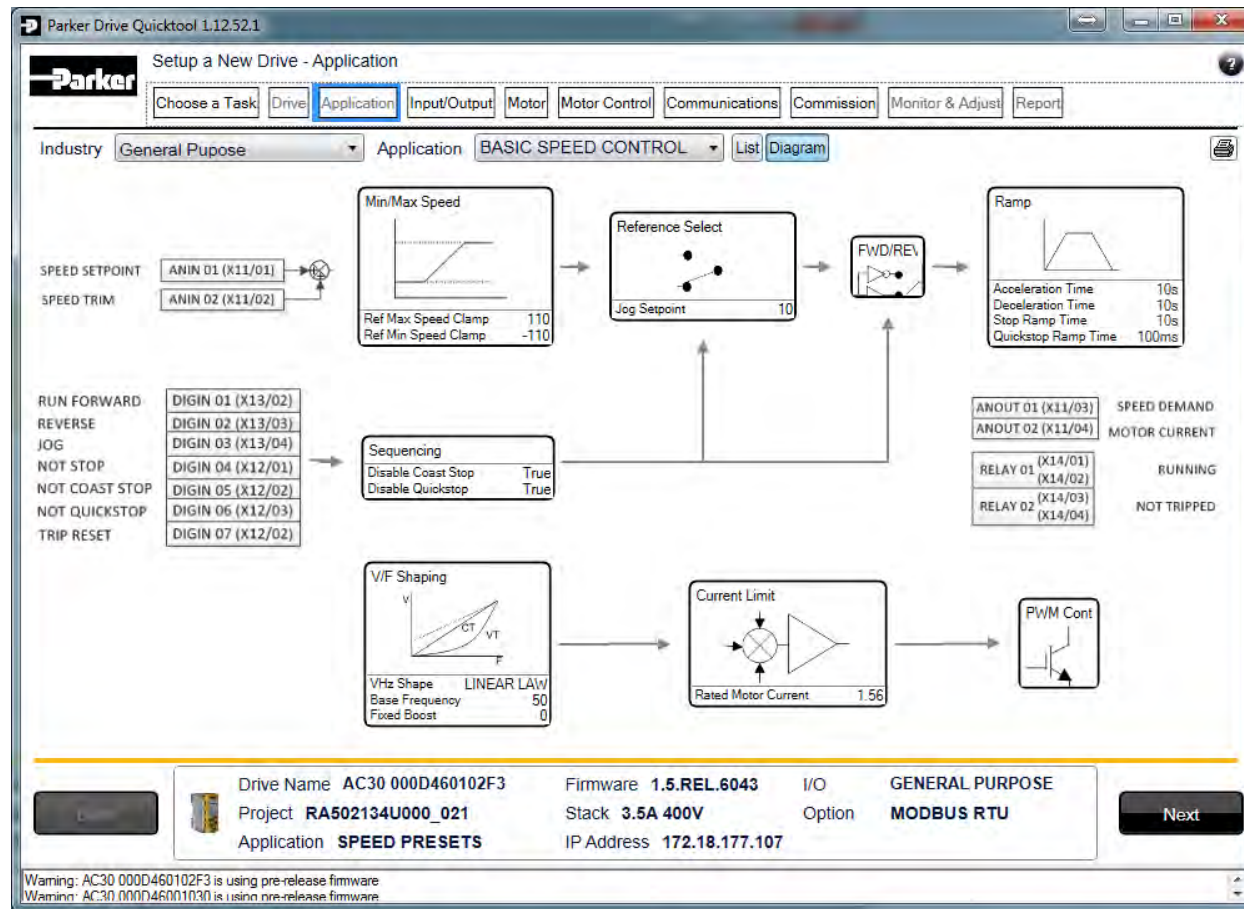


Figure 9-6 Macro selection

Select the desired Application Macro from the drop down list. Adjust any parameters that are needed for your specific application.



SETUP I/O

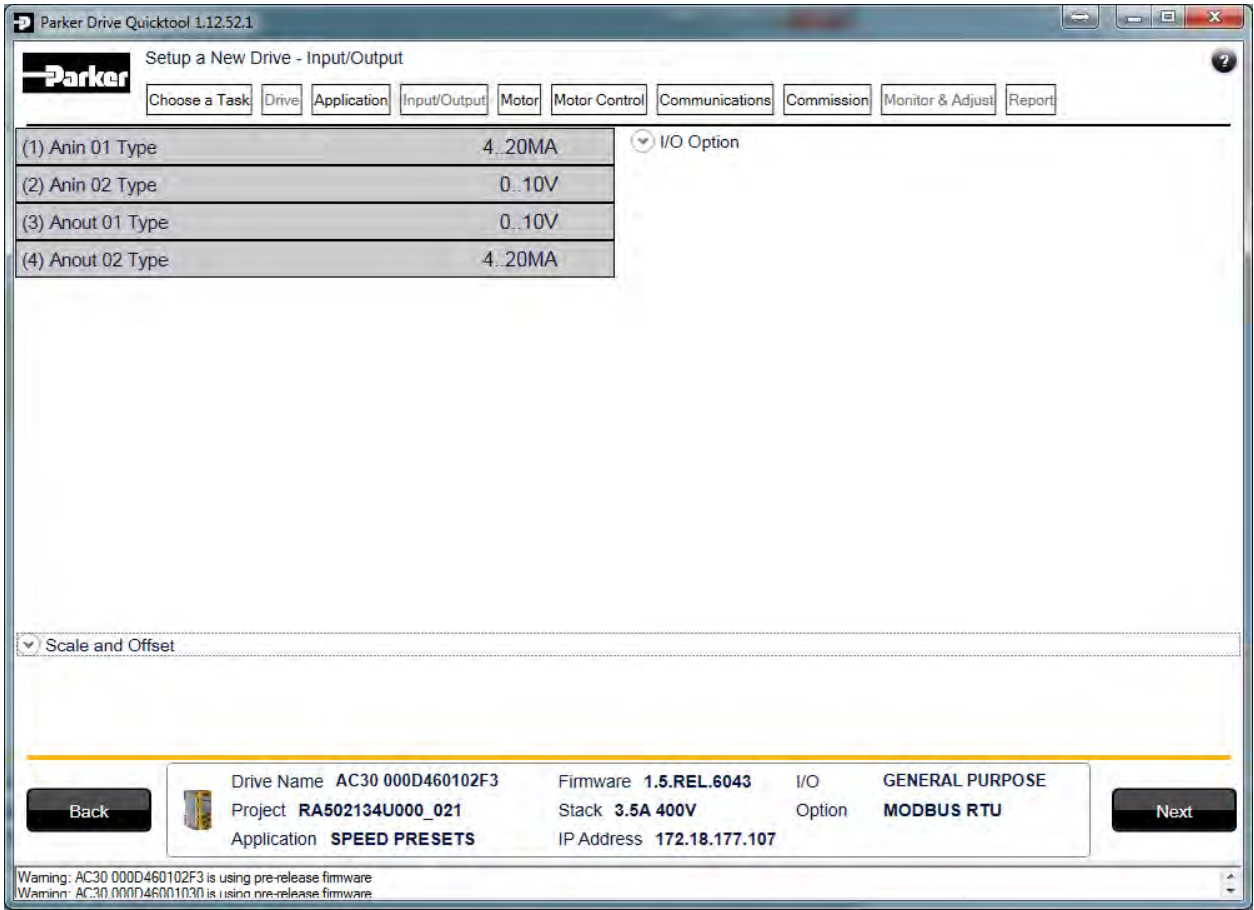


Figure 9-7 Drive I/O setup

On this screen the mode of the programmable I/O can be changed. If an I/O option card is fitted it can be configured in the "I/O Option" drop down.

# 9-21 Setup Wizard

## SELECT MOTOR

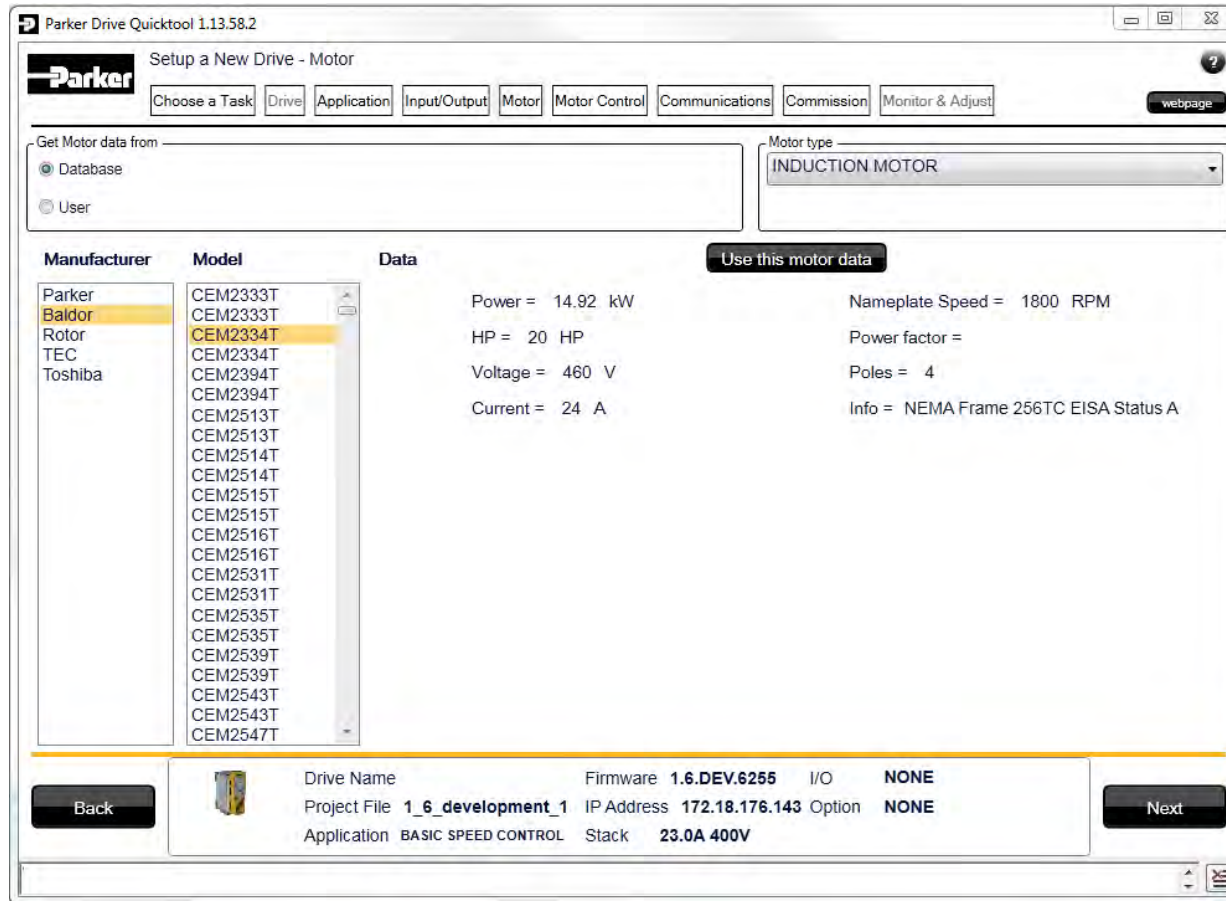


Figure 9-8 Motor selection from database

Motor data may either be selected from the built in motor database or entered by the engineer as a custom motor. The Motor page has two options at the top of the page that need to be selected.


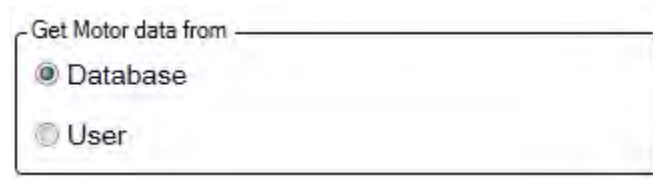


Figure 9-9 Motor data selection

“Database” is selected by default and the screen will show the motor database selector.

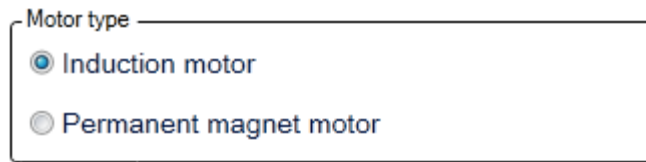

Motor type

Induction motor

Permanent magnet motor

*Figure 9-10 Motor type selection*

“Induction Motor” is selected by default. This selection will filter the motor database to the selected type. It also displays only the appropriate “User” settings if a custom motor is required.

### ***Motor database***

At the left hand side is a list of manufacturers whose motors are in the database. Select the appropriate manufacturer from the list. If your motor’s manufacturer is not shown in the list then you will need to provide custom “User” data instead.

Once the manufacturer is selected, the list of motor models will be displayed. The model list is sorted by the manufacturers part number. Select your motor from the list. The motors data and image will then be displayed so you can ensure you have the correct one selected.

## 9-23 Setup Wizard

Parker Drive Quicktool 1.12.52.1

Setup a New Drive - Motor

Choose a Task | Drive | Application | Input/Output | Motor | Motor Control | Communications | Commission | Monitor & Adjust | Report

Get Motor data from:  Database  User

Motor type: INDUCTION MOTOR

**Basic**

(455) Rated Motor Current	1.56	A
(456) Base Voltage	400	V
(457) Base Frequency	50	Hz

**Advanced**

(458) Motor Poles	4
(459) Nameplate Speed	1400 RPM
(460) Motor Power	1.1 kW
(461) Power Factor	0.71

Back | Drive Name AC30 000D460102F3 | Firmware 1.5.REL.6043 | I/O GENERAL PURPOSE | Next

Project RA502134U000\_021 | Stack 3.5A 400V | Option MODBUS RTU

Application SPEED PRESETS | IP Address 172.18.177.107

Warning: AC30 000D460102F3 is using pre-release firmware  
Warning: AC30 000D4601030 is using pre-release firmware

Figure 9-11 Custom Motor configuration

### Custom Motor

Custom motor data is entered in this page. The page is split into two parts. On the top are “Basic” motor parameters and below are more advanced ones. Nominal defaults will have been set, depending on the size of inverter being configured. The Engineer should adjust these default values with data from the motor nameplate or technical specification.

## SETUP THE DRIVE CONTROL

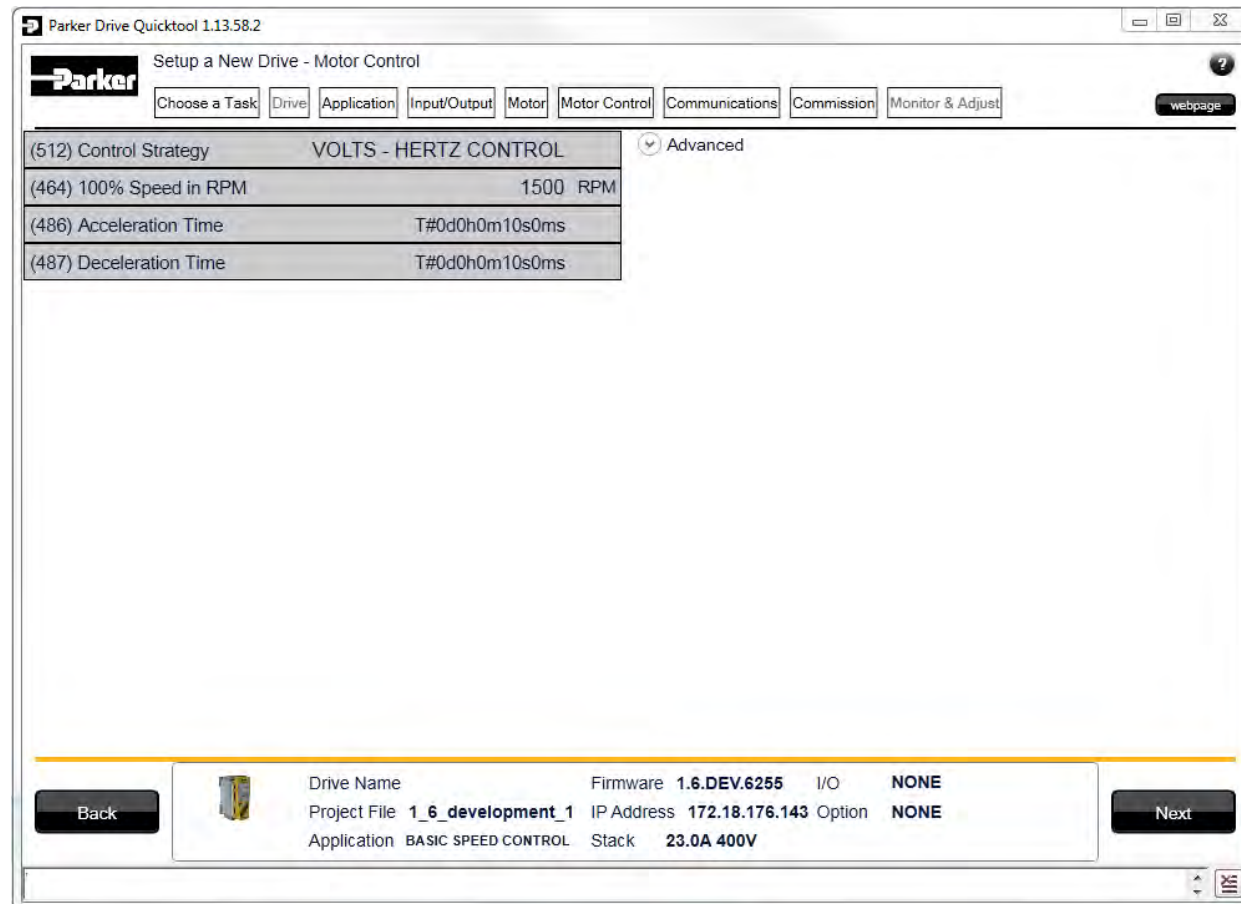


Figure 9-12 Drive Control setup

The “Control” page allows configuration of the Drive control. The basic control parameters are shown on the left hand side. Expand the “Advanced” dropdown to see more advanced parameters. The exact parameters show will depend on the motor type previously selected.

# 9-25 Setup Wizard

## SETUP COMMUNICATIONS

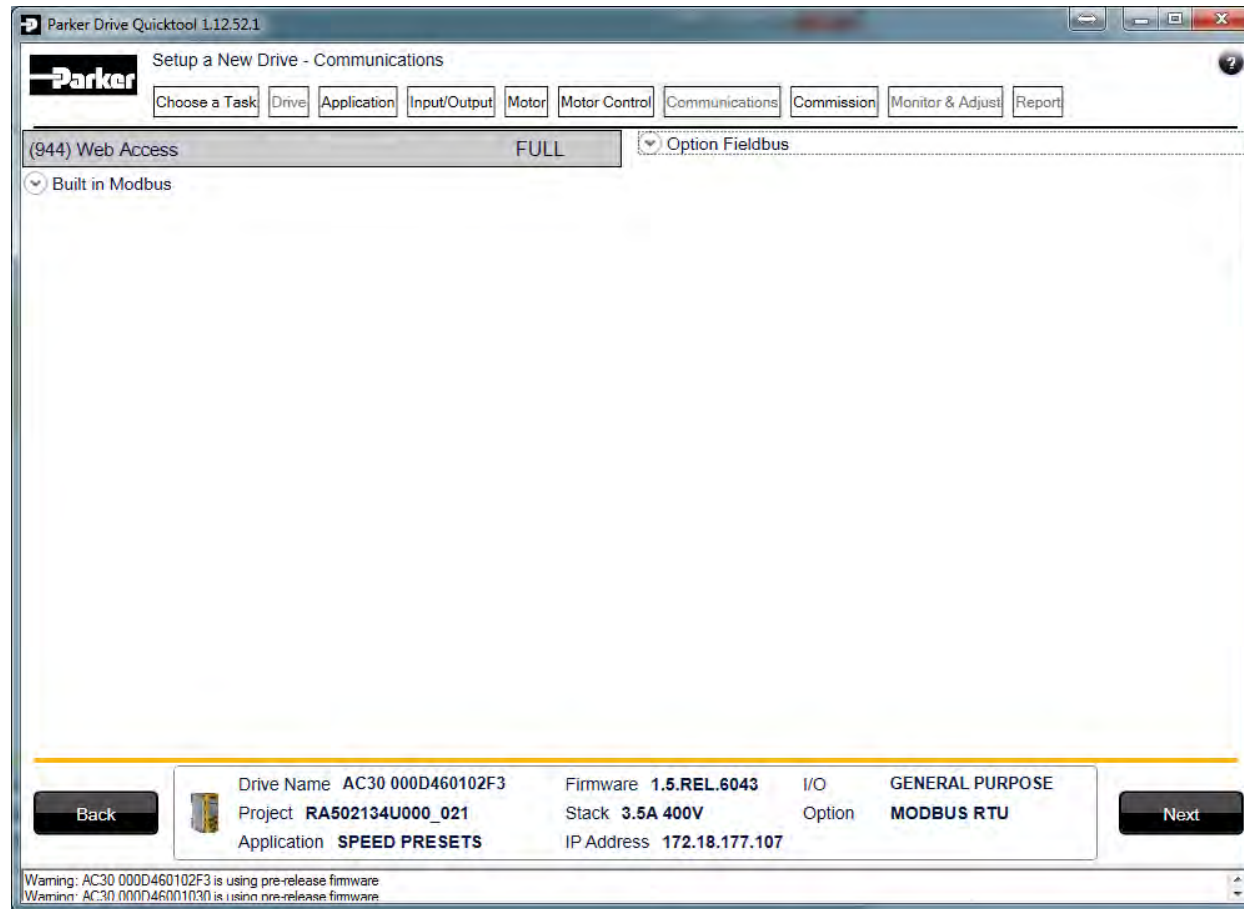


Figure 9-13 Drive Communications setup

The built in web browser can be enabled/disabled from this screen.

If required, the built in Modbus can be setup from, the “Built in Modbus” dropdown.

If an optional Fieldbus is fitted, it can be configured from the “Option Fieldbus” dropdown.

## COMMISSION THE DRIVE

Step 1	Step 2	Step 3
Project File RA502134U000_03_3 Saved to Documents ✓	Program Drive ✓	SD Card Not Detected
Project Name AC30 Default Application		
Application BASIC SPEED CONTROL		
Drive Name AC30 Lab 1		
Drive Display Language ENGLISH		
GKP View Level ENGINEER	Web Access FULL	

Drive Name	AC30 Lab 1	Firmware	1.6.DEV.6255	I/O	NONE
Project File	RA502134U000_03_3	IP Address	172.18.176.143	Option	NONE
Application	BASIC SPEED CONTROL	Stack	23.0A 400V		

Figure 9-14 Programming the Drive

The “Commission” page is used to commission the Drive with the Selected macro and motor settings chosen during the Wizard.

There are two steps that are performed to finalise the Commissioning of the Drive.

1. Enter the Project File name and the Drive’s name in the left of the screen.
2. “Program Drive”. This step writes your settings to the Drive and overwrites any existing configuration in the Drive.

After these steps, the Drive is ready to use.

# 9-27 Setup Wizard

## MONITOR THE DRIVE

Parker Drive Quicktool 1.13.58.2

Setup a New Drive - Monitor & Adjust

Choose a Task: Drive | Application | Input/Output | Motor | Motor Control | Communications | Commission | Monitor & Adjust

Parameter Menu

- Control Screen
- Setup
  - Quick Setup
  - Motor Control
    - Control and Type
    - Motor Nameplate
    - Auto Restart
  - Inputs and Outputs
    - Base IO
    - Option
  - Communications
    - Base Ethernet
    - Base Modbus
    - Option
  - Clone
  - Environment
  - Monitor
    - Quick Monitor
    - Motor and Drive
    - Inputs and Outputs
    - Communications
      - Base Ethernet
      - Base Modbus
      - Option
    - Energy Meter
    - Trips
  - Favorites

Tag	Name	Value	Current Value	Chart
393	Actual Speed RPM		0.00 RPM	
392	DC Link Voltage		594 V	
394	Actual Speed rps		0.00 rev/s	
395	Actual Speed Percent		0.00 %	
396	DC Link Volt Filtered		593 V	
399	Actual Torque		0.0 %	
400	Actual Field Current		0.0 %	
401	Motor Current Percent		0.0 %	
402	Motor Current		0.0 A	
405	Motor Terminal Volts		0 V	
420	Actual Pos Torque Lim		144.0 %	
421	Actual Neg Torque Lim		-144.0 %	
407	Heatsink Temperature		30.5 C	
406	CM Temperature		41.5 C	

Chart  Channel 1 Enable  Use Left Axis  Channel 2 Enable  Use Left Axis

Back **OPERATIONAL** Drive Name **AC30 Lab 1** Firmware **1.6.DEV.6255** I/O **NONE** Project File **RA502134U000\_03\_3** IP Address **172.18.176.143** Option **NONE** Application **BASIC SPEED CONTROL** Stack **23.0A 400V** First Trip **NONE** Next

Figure 9-15 Monitor the Drive and fine tune



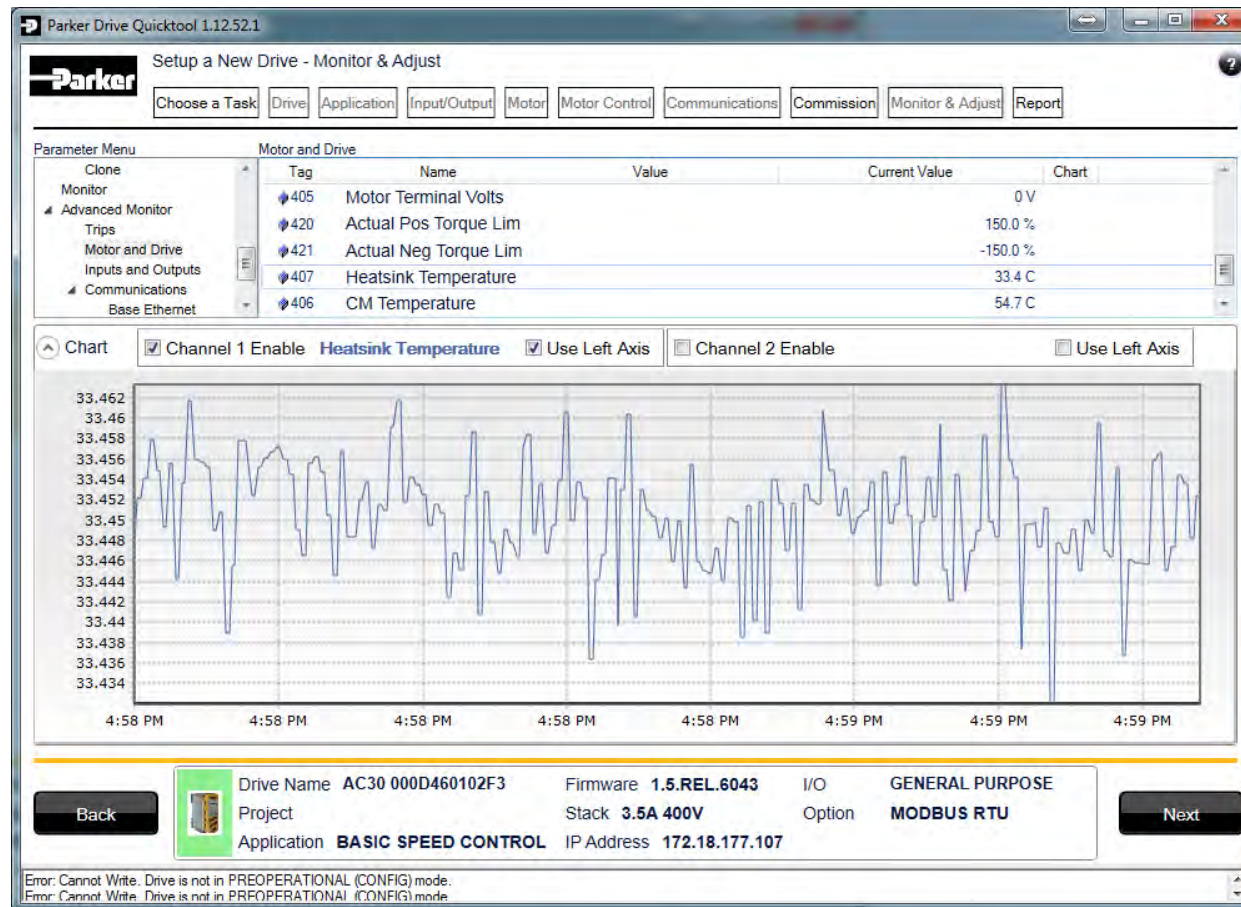


Figure 9-16 Charting Drive Parameters

## Chapter 10: Trips & Fault Finding

### Trips and Fault Finding

#### WHAT HAPPENS WHEN A TRIP OCCURS

When a trip occurs, the drive's power stage is immediately disabled causing the motor and load to coast to a stop. The trip is latched until action is taken to reset it. This ensures that trips due to transient conditions are captured and the drive is disabled, even when the original cause of the trip is no longer present.


#### **Keypad Indications**

If a trip condition is detected the activated alarm is displayed on the GKP display.

#### RESETTING A TRIP CONDITION

All trips must be reset before the drive can be re-enabled. A trip can only be reset once the trip condition is no longer active, i.e. a trip due to a heatsink over-temperature will not reset until the temperature is below the trip level.

You can reset the trip as follows:

1. Press the  (STOP) key to reset the trip and clear the alarm from the display.
2. In remote terminal sequencing mode, create a 0 to 1 transition on the RESET TRIP bit, (bit 7), in the App Control Word parameter.
3. In remote communications sequencing mode, create a 0 to 1 transition on the RESET TRIP bit, (bit 7), in the Comms Control Word parameter.

# 10-2 Trips & Fault Finding

## USING THE KEYPAD TO MANAGE TRIPS

### Trip Messages

If the drive trips, then the display immediately shows a message indicating the reason for the trip. The possible trip messages are given in the table below.

ID	Trip Name	Possible Reason for Trip	Criteria for Warning
1	OVER VOLTAGE	<p><i>The drive internal dc link voltage is too high:</i></p> <ul style="list-style-type: none"> <li>The supply voltage is too high</li> <li>Trying to decelerate a large inertia load too quickly; DECEL TIME time too short</li> <li>The brake resistor is open circuit</li> </ul> <p>To help prevent this trip, enable the DC Link Volts Limit feature</p>	<p><i>Internal dc link voltage has reached midway between the over voltage trip level and the dynamic braking resistor control voltage.</i></p>
2	UNDER VOLTAGE	<p><i>DC link low trip:</i></p> <ul style="list-style-type: none"> <li>Supply is too low/power down</li> </ul>	<p><i>Internal dc link voltage has reached midway between the lowest expected instantaneous voltage and the under voltage trip level.</i></p>
3	OVER CURRENT	<p><i>The motor current being drawn from the drive is too high:</i></p> <ul style="list-style-type: none"> <li>Trying to accelerate a large inertia load too quickly; ACCEL TIME time too short</li> <li>Trying to decelerate a large inertia load too quickly; DECEL TIME time too short</li> <li>Application of shock load to motor</li> <li>Short circuit between motor phases</li> <li>Short circuit between motor phase and earth</li> <li>Motor output cables too long or too many parallel motors connected to the drive</li> <li>FIXED BOOST level set too high</li> </ul>	<p><i>The over current trip makes up of a multiple-attempt strategy. The warning is triggered if two or more consecutive overcurrent events are encountered (whereas five consecutive events are required for a Trip to occur).</i></p>
4	STACK FAULT	<p><i>Stack self protection</i></p> <ul style="list-style-type: none"> <li>Instantaneous overcurrent detected by the power stack. Refer to OVERCURRENT in this table.</li> <li>Instantaneous over voltage event. Refer to OVER VOLTAGE in this table</li> </ul>	<p><i>Not applicable.</i></p>
5	STACK OVER CURRENT	<p><i>The motor current exceeded the capabilities of the power stack.</i></p> <ul style="list-style-type: none"> <li>Instantaneous overcurrent detected by the power stack. Refer to OVERCURRENT in this table.</li> </ul>	<p><i>Not applicable.</i></p>
6	CURRENT LIMIT	<p>V/Hz mode only: If the current exceeds 200% of stack rated current for a period of 1 second, the drive will trip. This is caused by shock loads</p>	<p><i>Not applicable.</i></p>

## Trips & Fault Finding 10-3

ID	Trip Name	Possible Reason for Trip	Criteria for Warning
7	MOTOR STALL	<p><i>The motor has stalled (not rotating) Drive in current limit &gt;200 seconds:</i></p> <ul style="list-style-type: none"> <li>• Motor loading too great</li> <li>• FIXED BOOST level set too high</li> </ul>	<i>The stall condition has been detected for more than one tenth of the configured Stall Time.</i>
8	INVERSE TIME	<p><i>A prolonged overload condition, exceeding the Inverse Time allowance, has caused the trip:</i></p> <ul style="list-style-type: none"> <li>• Remove the overload condition</li> </ul>	<i>An overload condition has exceeded one half of the Inverse Time allowance.</i>
9	MOTOR I2T	Only for PMAC Motor: A prolonged load condition, exceeding the motor rated current, has caused the trip. The estimated motor load has reached a value of 105%	<i>An overload condition has exceeded one half of the motor Inverse Time allowance.</i>
10	LOW SPEED I	<p><i>The motor is drawing too much current (&gt;100%) at zero output frequency:</i></p> <ul style="list-style-type: none"> <li>• FIXED BOOST level set too high</li> </ul>	<i>Not applicable.</i>
11	HEATSINK OVERTEMP	<p><i>Drive heatsink temperature too high</i></p> <ul style="list-style-type: none"> <li>• The ambient air temperature is too high</li> <li>• Poor ventilation or spacing between drives</li> <li>• Check heatsink fan is rotating</li> </ul>	<i>The drive heatsink has exceeded the warning temperature level (which is approx. 10 °C below the trip temperature).</i>
12	INTERNAL OVERTEMP	<p><i>Processor temperature or ambient temperature within the power stage too high</i></p> <ul style="list-style-type: none"> <li>• The ambient temperature in the drive is too high</li> </ul>	<i>The drive processor temperature has exceeded the warning temperature level (which is approx. 10 °C below the trip temperature).</i>
13	MOTOR OVERTEMP	<p><i>The motor temperature is too high, (required IO Option card)</i></p> <ul style="list-style-type: none"> <li>• Excessive load</li> <li>• Motor voltage rating incorrect</li> <li>• FIXED BOOST level set too high</li> <li>• Prolonged operation of the motor at low speed without forced cooling</li> <li>• Break in motor thermistor connection</li> </ul>	<i>The motor has been over temperature for 7.5 seconds.</i>
14	EXTERNAL TRIP	<p><i>The external (application) trip input is high:</i></p> <ul style="list-style-type: none"> <li>• Refer to the application description to identify the source of the signal</li> </ul>	<i>Not applicable.</i>
15	BRAKE SHORT CCT	<p><i>External dynamic brake resistor has been overloaded:</i></p> <ul style="list-style-type: none"> <li>• The external dynamic brake has developed a short circuit.</li> <li>• Wiring fault</li> </ul>	<i>Not applicable.</i>

## 10-4 Trips & Fault Finding

ID	Trip Name	Possible Reason for Trip	Criteria for Warning
16	BRAKE RESISTOR	<p><i>External dynamic brake resistor has been overloaded:</i></p> <ul style="list-style-type: none"> <li>Trying to decelerate a large inertia too quickly or too often</li> </ul>	<i>The power calculation for the external resistor has exceeded one half of the Brake Overtating allowance.</i>
17	BRAKE SWITCH	<p><i>Internal dynamic braking switch has been overloaded:</i></p> <ul style="list-style-type: none"> <li>Trying to decelerate a large inertia too quickly or too often</li> </ul>	<i>The power calculation for the internal dynamic braking switch has exceeded one half of the its overtating allowance.</i>
18	LOCAL CONTROL	<p><i>Keypad has been disconnected from drive whilst drive is running in Local Control:</i></p> <ul style="list-style-type: none"> <li>GKP accidentally disconnected from drive</li> </ul>	<i>Not applicable.</i>
19	COMMS BREAK	<p><i>Lost option communications:</i></p> <ul style="list-style-type: none"> <li>A break in option communications has been detected. Refer to option communications manual.</li> </ul>	<i>Not applicable.</i>
20	LINE CONTACTOR	<p><i>DC Link failed to reach the undervoltage trip level within the contactor feedback time.</i></p> <ul style="list-style-type: none"> <li>The Line contactor failed to connect.</li> <li>Missing 3-phase line supply</li> </ul>	<i>Not applicable.</i>
21	PHASE FAIL	<ul style="list-style-type: none"> <li>Indicates a missing input phase, for Frame K drives.</li> </ul>	<i>Not applicable.</i>
22	VDC RIPPLE	<p><i>The DC link ripple voltage is too high:</i></p> <ul style="list-style-type: none"> <li>Check for a missing input phase</li> <li>Repetitive start / stop or forward reverse action.</li> </ul>	<i>The dc link ripple has exceeded 75% of the trip level.</i>
23	BASE MODBUS BREAK	<p><i>Lost Base Modbus communications:</i></p> <ul style="list-style-type: none"> <li>A break in the Base Modbus communications has been detected. Refer to "Appendix A Modbus TCP".</li> </ul>	<i>Not applicable.</i>
24	24V OVERLOAD	<p><i>24V rail is low</i></p> <ul style="list-style-type: none"> <li>Output overload due to excess current being drawn from the 24v terminal.</li> </ul>	<i>Not applicable.</i>
25	PMAC SPEED ERROR	<p><i>Only for PMAC motor : When using the Start feature in Sensorless Vector Control, the real speed hasn't reached the speed setpoint after 5 seconds to move from open to closed loop control or to move from closed to open loop</i></p>	<i>Not applicable.</i>
26	OVERSPEED	<p><i>Overspeed:</i></p> <ul style="list-style-type: none"> <li>&gt;150% base speed when in Sensorless Vector mode</li> </ul>	<i>Not applicable.</i>

ID	Trip Name	Possible Reason for Trip	Criteria for Warning
27	STO ACTIVE	<p>Attempt to run the motor with the Safe Torque Off active</p> <ul style="list-style-type: none"> <li>Check the STO wiring. It may be necessary to power the drive off and on to completely clear this event.</li> </ul>	Not applicable.
28	FEEDBACK MISSING	<p>The drive has been configured to run in Closed Loop Vector control mode with a Pulse Encoder IO Option, but the IO Option has not been correctly configured.</p> <p>The drive has been configured to run in Closed Loop Vector control mode with a System Board and/or a Pulse Encoder IO Option (using one of the 3 possible encoder inputs), but the system board or the IO option has not been declared as required.</p>	Not applicable.
29	INTERNAL FAN FAIL	<p>An internal cooling fan has failed. This will reduce the lifetime of the power electronics.</p> <ul style="list-style-type: none"> <li>Return the power stack to a Parker Hannifin repair centre.</li> </ul>	Not applicable.
30	CURRENT SENSOR	<p>Current feedback phase missing</p> <ul style="list-style-type: none"> <li>Check motor phase connections</li> </ul>	Not applicable.
31	POWER LOSS STOP	A Power Loss Ride Through sequence has occurred and either <b>1650 Pwrl Time Limit</b> has been exceeded or the motor speed has reached a zero speed during the sequence.	Not applicable.
32	SPEED SENSOR FAULT	Not applicable.	Encoder has failed whilst operating in vector control of induction motor. The drive switches to sensorless operation automatically (if this feature is enabled), and provides a warning to the user.
33	A1	Application trip 1. The application trips are controlled by the Application_Trips block in the configuration. The text associated with each trip can be re-defined by the Application_Trips_Text block in the configuration.	Application warning 1.
34	A2	Application trip 2	Application warning 2.
35	A3	Application trip 3	Application warning 3.
36	A4	Application trip 4	Application warning 4.
37	A5	Application trip 5	Application warning 5.
38	A6	Application trip 6	Application warning 6.
39	A7	Application trip 7	Application warning 7.

## 10-6 Trips & Fault Finding

ID	Trip Name	Possible Reason for Trip	Criteria for Warning
40	A8	Application trip 8	Application warning 8.
41	SPEED ERROR FAULT	Difference between actual motor speed and the speed setpoint is greater than a threshold for a period of time.	Difference between actual motor speed and the speed setpoint has been greater than the trip threshold for more than half the trip delay time.
42	PEER TO PEER OVERRUN	Configuration error on Master and/or Slave(s) side PTP or Peer to Peer are OFF on one drive Destination IP or Destination Port incompatible between Master and Slave(s) Peer to Peer is not useable	Multiple delayed Peer To Peer messages have occurred. This may cause incorrect phase alignment if phase control is being used.
43	PHASE CONFIG	Something is wrong in the phase configuration : one or more of the encoders set up for speed control, master and/or slave are wrongly declared. See Phase Ctrl Config : Error Number for a detailed description of the error (Only applicable if phase control is enabled)	Not applicable.
44	ETHERNET IP BREAK	Lost Base EtherNet IP communications: A break in the Base EtherNet IP communications has been detected. Refer to "Appendix A EtherNet IP Adapter".	Not applicable.
45	RESOLVER ERROR	An error has been detected on the resolver signals Error type is available by looking at <b>1820 Resolver Trip Type</b>	Not applicable
46	PMAC ALIGN ERROR	If <b>1796 Alignment on Power On</b> has been set to TRUE, the drive should run a successful Pos Alignment sequence, at power up before being run safely. or Something wrong occurred during the last Pos Alignment sequence. Error type is available by looking at <b>1807 Alignment error</b>	Not applicable

HEXADECIMAL REPRESENTATION OF TRIPS

Each trip has a unique, eight-digit hexadecimal number as shown in the tables below. This number is referred to as the trip mask. The trip masks are used in the Enable, Active and Warnings parameters in the Trips module.

ID	Trip Name	Mask	User Disable
1	OVER VOLTAGE	00000001	
2	UNDER VOLTAGE	00000002	
3	OVER CURRENT	00000004	
4	STACK FAULT	00000008	
5	STACK OVER CURRENT	00000010	
6	CURRENT LIMIT	00000020	✓
7	MOTOR STALL	00000040	✓
8	INVERSE TIME	00000080	✓
9	MOTOR I2T	00000100	✓
10	LOW SPEED I	00000200	✓
11	HEATSINK OVERTEMP	00000400	
12	AMBIENT OVERTEMP	00000800	✓
13	MOTOR OVERTEMP	00001000	✓
14	EXTERNAL TRIP	00002000	✓
15	BRAKE SHORT CCT	00004000	✓
16	BRAKE RESISTOR	00008000	✓
17	BRAKE SWITCH	00010000	✓
18	LOCAL CONTROL	00020000	✓
19	COMMS BREAK	00040000	✓
20	LINE CONTACTOR	00080000	✓
21	PHASE FAIL	00100000	✓
22	VDC RIPPLE	00200000	✓
23	BASE MODBUS BREAK	00400000	✓

ID	Trip Name	Mask	User Disable
24	24V OVERLOAD	00800000	✓
25	PMAC SPEED ERROR	01000000	✓
26	OVERSPEED	02000000	✓
27	SAFE TORQUE OFF	04000000	
28	FEEDBACK MISSING	08000000	
31	POWER LOSS STOP	40000000	✓
32	SPEED SENSOR FAULT	80000000	✓
33	A1	00000001*	✓
34	A2	00000002*	✓
35	A3	00000004*	✓
36	A4	00000008*	✓
37	A5	00000010*	✓
38	A6	00000020*	✓
39	A7	00000040*	✓
40	A8	00000080*	✓
41	SPEED ERROR FAULT	00000100*	✓
42	PEER TO PEER OVERRUN	00000200*	✓
43	PHASE CONFIG	00000400*	✓
44	ETHERNET IP BREAK	00000800*	✓
45	RESOLVER ERROR	00001000*	
46	PMAC ALIGN ERROR	00002000*	

\* These masks apply to parameter words "33 – 64"



## 10-8 Trips & Fault Finding

## Runtime Alerts

A Runtime Alert is a fault that indicates a permanent hardware error. The Runtime Alert display is of the form

RUNTIME ALERT CODE 00000000 xx
-----------------------------------

CODE is a number in the range 0 to 65000. The following value is used to provide additional information to assist Parker Hannifin Technical Support personnel.

CODE	ERROR	Possible Reason for Error
1 to 255	Internal exception	<ul style="list-style-type: none"> <li>VCM not secured to power stack</li> <li>Option not secured correctly to VCM control card</li> <li>Earth bonding failure.</li> <li>Fault during firmware upgrade</li> </ul>
12	Memory access	<ul style="list-style-type: none"> <li>Attempt to read or write to protected memory. Most likely this will be due to a configuration error. Press OK several times until the drive resets correctly, then replace the configuration using PDQ.</li> <li>Record the error message and contact Technical Support</li> </ul>
1001 to 1003	Processor overload	<ul style="list-style-type: none"> <li>Select a lower switching frequency, (Parameters::Motor Control::Pattern Generator::Stack Frequency)</li> <li>Record the error message and contact Technical Support</li> </ul>
1006	Memory overflow	<ul style="list-style-type: none"> <li>Reduce the complexity of the application</li> <li>Reduce the number of parameters being accessed via the on board Modbus TCP protocol</li> <li>Reduce the number of parameters being accessed by the fieldbus communications option.</li> </ul>
1007	Uninitialized pointer	<ul style="list-style-type: none"> <li>Record the error message and contact Technical Support</li> </ul>
1010, 1101 to 1113	Initialization error	<ul style="list-style-type: none"> <li>Record the error message and contact Technical Support</li> </ul>
1200 to 1299	Communications option error	<ul style="list-style-type: none"> <li>Ensure the communications option is correctly fitted</li> <li>Update the firmware in the inverter.</li> <li>Replace the communications option</li> </ul>

## 10-10 Trips & Fault Finding

CODE	ERROR	Possible Reason for Error
1300	Ethernet fault	<ul style="list-style-type: none"> <li>Record the error message and contact Technical Support</li> </ul>
1301	Modbus server	<ul style="list-style-type: none"> <li>Record the error message and contact Technical Support</li> </ul>
1302	HTTP server fault	<ul style="list-style-type: none"> <li>Record the error message and contact Technical Support</li> </ul>
1303	DCT server fault	<ul style="list-style-type: none"> <li>Record the error message and contact Technical Support</li> </ul>
1311	Ethernet PHY	<ul style="list-style-type: none"> <li>Record the error message and contact Technical Support</li> </ul>
1312	Precision Time Protocol	<ul style="list-style-type: none"> <li>Record the error message and contact Technical Support</li> </ul>
1313	EtherNet IP	<ul style="list-style-type: none"> <li>Record the error message and contact Technical Support</li> </ul>
1401 1402	Control Module test	<ul style="list-style-type: none"> <li>Control module self-test error</li> </ul>
1403 1404	Power stack test	<ul style="list-style-type: none"> <li>VCM not secured to power stack</li> <li>Power stack self-test error</li> </ul>
1501 1502 1503	IO Option identity IO Option processor Unknown IO Option	<ul style="list-style-type: none"> <li>Ensure the IO option is correctly fitted</li> <li>Update the firmware in the inverter.</li> <li>Replace the IO option</li> </ul>
1504	IO Option watchdog	<ul style="list-style-type: none"> <li>The IO Option has become disconnected</li> <li>Option reset problem. Upgrade drive firmware to 1.11 or greater to improve the option reset control.</li> </ul>
1601	Stack internal fault	<ul style="list-style-type: none"> <li>Return the power stack to Parker Hannifin repair center.</li> </ul>
1602	Incompatible stack	<ul style="list-style-type: none"> <li>Return the power stack to Parker Hannifin repair center.</li> </ul>
1801	Heatsink thermistor unplugged	<ul style="list-style-type: none"> <li>Return the power stack to Parker Hannifin repair center.</li> </ul>
1901	System Board Data	<ul style="list-style-type: none"> <li>The identifying data on the system board is corrupt</li> </ul>
1902	System Board Type	<ul style="list-style-type: none"> <li>The system board type is not recognized by this version of drive firmware. Update the firmware to the latest version.</li> </ul>
2002	Memory allocation error	<ul style="list-style-type: none"> <li>Record the error message and contact Technical Support</li> </ul>

## Autotune Alerts

If the autotune fails to complete for any reason, an alert will be displayed and the autotune abandoned. Alerts are as follows:

Alert message	Possible Cause	Remedy
LEAKAGE L TIMEOUT	The autotune has attempted to determine the leakage inductance of the motor, but cannot make the required test current.	Problem with motor connection.
MOTOR TURNING ERROR	The autotune is trying to find the encoder direction by spinning the motor, but the motor is already spinning.	Wait till the motor stops.
NEGATIVE SLIP FREQ	Autotune has calculated a negative slip frequency, which is not valid. Nameplate rpm may have been set to a value higher than the base speed of the motor.	Check nameplate rpm, base frequency, and pole pairs are correct.
TR TOO LARGE	The calculated value of rotor time constant is too large.	Check the values of Nameplate Speed and Base Frequency.
TR TOO SMALL	The calculated value of rotor time constant is too small.	Check the values of Nameplate Speed and Base Frequency.
MAX SPEED TOO LOW	During Autotune the motor is required to run at the nameplate speed of the motor. If 100% Speed in RPM parameter limits the speed to less than this value, an error will be reported.	Increase the value of 100% Speed in RPM parameter up to the nameplate rpm of the motor (as a minimum). It may be reduced, if required, after the Autotune is complete.
SUPPLY VOLTS LOW	The autotune will compensate for low supply volts, down to 70% of motor rated volts. Below this value it will stop the autotune and raise an alert.	Re-try when mains volts are within specification.
NOT AT SPEED	The motor was unable to reach the required speed to carry out the Autotune.	Possible reasons include: motor shaft not free to turn; the motor data is incorrect.

## 10-12 Trips & Fault Finding

Alert message	Possible Cause	Remedy
MAG CURRENT ERROR	It was not possible to find a suitable value of magnetising current to achieve the required operating condition for the motor.	Check the motor data is correct, especially nameplate rpm and motor volts. Also check that the motor is correctly rated for the drive.
KE TOO LARGE	Ke value calculated during the autotune (stationary) is too large (the max value is 840V)	Check the motor data is correct, especially nameplate rpm, rated amps and motor volts. If low speed motor with a Ke value higher than 840V, enter by hand the corresponding value after the autotune completion.
KE TOO SMALL	Ke value calculated during the autotune (stationary) is too small (the min value is 1V)	Check the motor data is correct, especially nameplate rpm, rated amps and motor volts.
ALL TESTS DISABLED	All auto tune tests are disabled	Check parameter 0257: Autotune Test Disable

## Other Alerts

Alert message	Possible Cause	Remedy
** ALERT ** DEFAULTS LOADED	First power up with new control module	Initialise all parameters using the GKP setup wizard or PDQ
** ALERT ** APPLICATION MISSING	Fault during application download. Application deleted by the drive	Re-install the application from PDQ or PDD Custom applications only: check the application for any delays or loops that may cause the application task to "hang".
** ALERT ** POWER STACK MISMATCH	Parameter 0987 "Power Stack Required" does not equal the ID of the stack.	Change "Power Stack Required" to match "Power Stack Fitted". After doing this it may be necessary to restore parameters to default and reconfigure the drive. This is to ensure that all parameters have appropriate values.
** ALERT ** APPLICATION DELETED	Application deleted by the drive	Custom applications only: check the application for any delays or loops that may cause the application task to "hang".
** ALERT ** FIRE MODE	Fire Mode has been activated	If this message is not expected, use PDD to check if the Fire Mode block is in the configuration.
COAST TO STOP	Attempting to start the drive in local mode with Coast To Stop active.	The Coast To Stop input is active low. This input needs to be driven high. The input may be ignored in the standard application by setting "Disable Coast Stop".
ENABLE VOLTAGE	Attempting to start the drive in local mode with the Enable input is inactive	The Enable input needs to be driven high. This is done in the default application.
QUICKSTOP ACTIVE	Attempting to start the drive in local mode with Quick Stop active.	The Quick Stop input is active low. This input needs to be driven high. The input may be ignored in the standard application by setting "Disable Quick Stop".
OPERATION ENABLED	Attempting to change from Local control to Remote control with the Run signal true	To change to Remote control, (terminals), ensure that the Run input is false.
MAX SPD GT ATN SPD	Parameter 0464 "100% Speed in RPM" has been increased since auto-tune.	Check the value of "100% Speed in RPM". It may be necessary to repeat the auto tune with the higher value of max speed.

## 10-14 Trips & Fault Finding

Alert message	Possible Cause	Remedy
** ALERT ** UNKNOWN STACK	The stack is understood by the firmware	Upgraded the drive firmware.
** ALERT ** APPLICATION LOAD FAILED	Fault during application download. Application deleted by the drive	Re-install the application from PDQ or PDD Custom applications only: check the application for any delays or loops that may cause the application task to "hang".
COMMS OPTION HARDWARE MISMATCH	Parameter 0044 "Comms Required" is not compatible with the fitted communications option	Fit the correct communications option. Change the application to be compatible with the fitted option, (setting "Comms Required" to NONE will avoid this alert).
COMMS OPTION CONFIGURATION ERROR	The configuration settings are not compatible with the selected option	Refer to the communications option manual, "Troubleshooting".
IO OPTION HARDWARE MISMATCH	Parameter 1178 "Option IO Required" is not compatible with the fitted IO option	Fit the correct IO option. Change the application to be compatible with the fitted option, (setting "Option IO Required" to NONE will avoid this alert).
** ALERT ** FEEDBACK MISSING	Attempt to run in Encoder Feedback control mode with no feedback device fitted, (or configured).	Change the control mode to VHz or Sensorless Fit the correct feedback option Check parameter 1178 "Option IO Required"
** ALERT ** IO OPTION CHANGED	The IO Option has been changed.	IO Option removed, IO Option attached or different IO Option fitted. This alert is for information only and occurs just once following the change.
** ALERT ** COMMS OPTION CHANGED	The Communications Option has been changed.	Comms Option removed, Comms Option attached or different Comms Option fitted. This alert is for information only and occurs just once following the change.
** ALERT ** UPDATING LANGUAGE	Updating the translations held in the GKP. This may happen the first time a language is selected.	No action required. The language update should complete within one minute.
PCR NOT CLOSED	The pre-charge relay is not closed, (probably due to low DC Link volts)	Check the 3-phase input or common supply.
SYSTEM BOARD HARDWARE MISMATCH	Parameter 1739 "System Board Required" not correctly set.	This indicates that the drive has never been commissioned. It is advised to reset all parameters to their default values.

Alert message	Possible Cause	Remedy
** ALERT ** SYSTEM BOARD CHANGED	Unreliable connection to the system board	Power off / on then verify that the system board is functioning correctly. If this message occurs more than once contact the service department for assistance.



# 10-16 Trips & Fault Finding

## Fault Finding

Problem	Possible Cause	Remedy
Drive will not power-up	Fuse blown	Check supply details, fit correct fuse. Check Product Code against Model No.
	Faulty cabling	Check all connections are correct/secure. Check cable continuity
Drive fuse keeps blowing	Faulty cabling or connections wrong	Check for problem and rectify before replacing with correct fuse
	Faulty drive	Contact Parker
Cannot obtain power-on state	Incorrect or no supply available	Check supply details
Motor will not run at switch-on	Motor jammed	Stop the drive and clear the jam Safe Torque Off circuit active. Check the STO connections then power the drive off and on to clear any latched STO fault.
Motor runs and stops	Motor becomes jammed	Stop the drive and clear the jam
	Open circuit speed reference potentiometer	Check terminal

## Black Box Feature

The Black Box feature can be used to help find the source of a trip. Data is saved automatically whenever a trip occurs that causes the drive to stop running. The data records the moments leading up to the trip and the state of the drive when the trip occurs. This may then be transferred to an SD card for off line analysis.

### BLACK BOX FILE FORMAT

When copied to an SD card, the black box feature creates one file for each trip event, or record. The files are called "blackbox\_xxxx.csv" where xxxx is replaced with a decimal number that is incremented automatically by the drive every time a trip occurs.

The data recorded in the lead up to the trip is:

- Up to four user defined parameters
- Output Current in phases U and V expressed as a percent of motor rating
- The rotor electrical frequency in Hz.
- The demanded electrical frequency in Hz
- The DC Link volts, (parameter **0392 DC Link Voltage**)
- The temperature of the control card PCB in centigrade, (parameter **0406 CM Temperature**)
- The temperature of the heatsink in centigrade, (parameter **0407 Heatsink Temperature**)
- The sequencing control word, (parameter **0644 Control Word**)
- The sequencing status word, (parameter **0641 Status Word**)
- The input and output digital signals on the stack, words 1 and 2.
- The control card digital output and input latches.
- Various digital inputs to the micro-controller.
- Trip latch state
- Motor sequencer state
- Motor sequencer start and stop states.
- Main sequencer state, (parameter **0678 Sequencing State**)
- High current limit activity
- Stall trip torque limit state
- Stall trip current limit state























## 10-18 Trips & Fault Finding

The data recorded at the instant of the trip is output at the end of the file. This consists of:

- Control module serial number, (parameter **0977 Control Module Serial**)
- Time of the trip. This is either the control board age, or the time from the optional Real Time Clock if fitted.
- State of all other trips, active or warning.
- Count of total motor starts, (parameter **1732 Motor Start Count**)
- Count of total times the 3-phase has been powered
- For each trip, a count of the total times that trip has been activated.
- A record of near trip events for Over Current, Over Voltage and Under Voltage.
- The product code of the drive, expressed as a number in internal format.
- The IO Option fitted, (parameter **1179 Option IO Fitted**)
- The Communications Option fitted, (parameter **0045 Comms Fitted**)
- The System board type, (parameter **1740 System Board Fitted**)
- The motor control type, (parameter **0511 Motor Type or AFE**)
- The control strategy, (parameter **0512 Control Stragegy**)
- The control type, (parameter **1533 Control Type**)
- The firmware version
- The version of CoDeSys used to create the application.

## Diagnostic LEDs

There are two diagnostic LEDs fitted next to the SD Card slot. The Health LED is on the left, closest to the connector for the GKP. The flash period is 1s when the drive firmware is active and 2s in the Firmware Update mode

HEALTH LED	RUN LED	
		STOPPED
		RUNNING
		STOPPING, (NORMAL)
		QUICKSTOPPING
		FAULTED
		INITIALISING
		CONFIGURATION MODE
		CONFIGURATION FAULT
		FIRMWARE UPDATE – Idle
		FIRMWARE UPDATE - Erasing firmware
		FIRMWARE UPDATE – Writing firmware

# 11-1 Routine Maintenance & Repair

## Chapter 11: Routine Maintenance & Repair

### Routine Maintenance

Periodically inspect the drive for build-up of dust or obstructions that may affect ventilation of the unit. Remove this using dry air.

### Preventative Maintenance


#### FAN CASSETTE (FRAMES D – J ONLY)

The power stack cooling fan is designed to be field replaceable by a competent person. For preventative maintenance replace the fan cassette every 5 years operation, or whenever the drive trips on 'heatsink overtemperature' under normal operation. Spare fan cassettes are available to order from your local Parker sales office.


#### Fan Cassette Removal Instructions

1. Remove the two retaining screws and lift off fan guard.
2. Lift out the fan(s) and then disconnect wiring before replacing with the new fan(s) assembly:  
AC50 & Frame D - LA501683  
Frame E - LA501684  
Frame F - LA501683  
Frame G - LA502287 (x 2)  
Frame H - 2 types: 45kw LA502429 (x 2)  
55kw-75kw LA502287 (x 2)  
Frame J - LA502560 (x 3)

making sure the fan is correct way up.

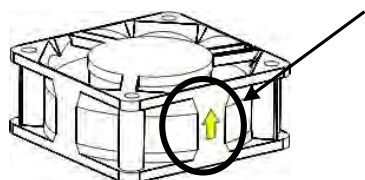

3. Replace the fan guard and tighten the screws to 1.3Nm.

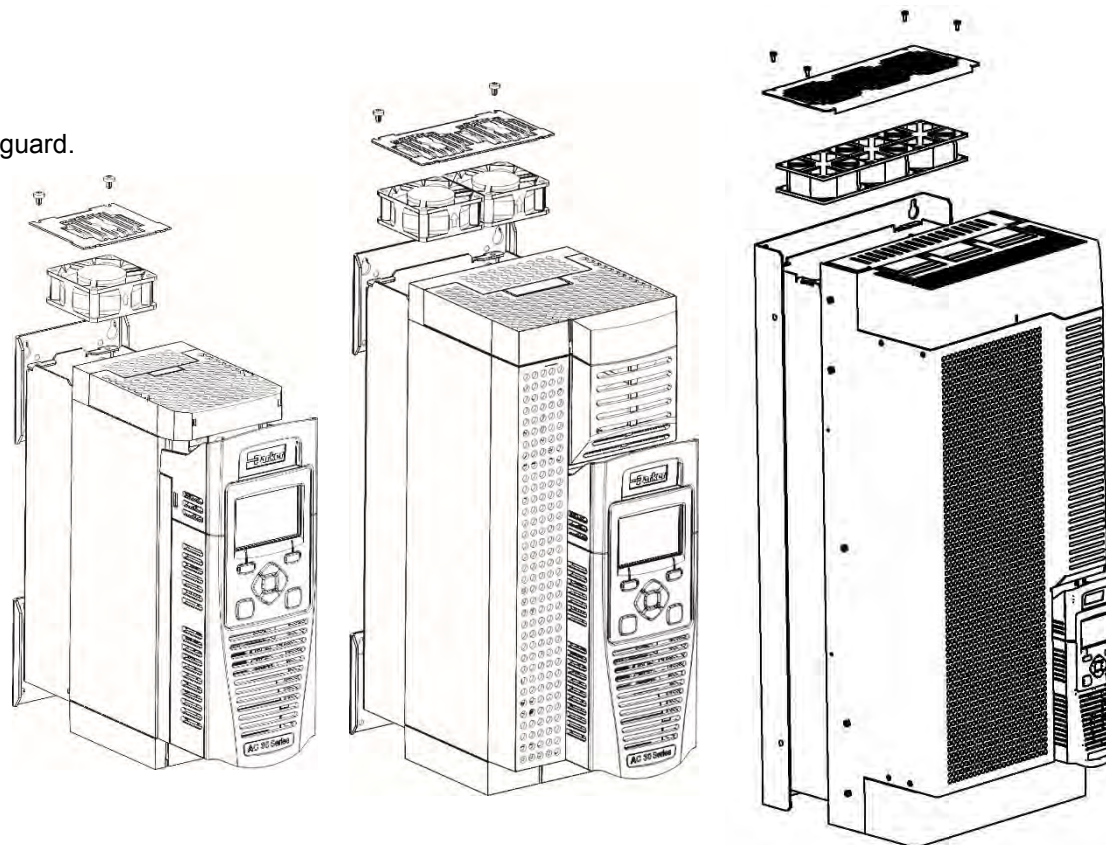

Frame D, E

Frame F, G, H

Frame J

## DC LINK CAPACITORS

For preventative maintenance the DC link capacitors must be replaced every 10 years operation, or when the drive trips on 'DC link ripple' under normal operating conditions. The unit must be returned to your local Parker sales office for replacement.

## Repair

There are no user-serviceable components. Only Parker trained personnel are permitted to repair this product to maintain certifications, reliability and quality levels.

**IMPORTANT      *MAKE NO ATTEMPT TO REPAIR THE UNIT - RETURN IT TO PARKER***

### SAVING YOUR APPLICATION DATA

In the event of a repair, application data will be saved whenever possible. However, we advise you to backup your application settings before returning the unit.

### RETURNING THE UNIT TO PARKER

Please have the following information available:

- The model and serial number - see the unit's rating label
- Detailed information on the nature of the fault as well as a full description of the application and history. This is important to ensure Parker can diagnose to root cause before return.

Contact your nearest please contact your local Parker Service Center to arrange return of the item and to be given a Authorisation To Return (ATR) number. Use this as a reference on all paperwork you return with the faulty item. Pack and despatch the item in the original packing materials; or at least an anti-static enclosure. Do not allow packaging chips to enter the unit. Please include the fault information described above.

# 12-1 Ethernet

## Chapter 12: Ethernet

Communications to the inverter is via Ethernet on the Control Module. This allows access to:

- The PDQ and PDD PC programming tools
- The Modbus TCP server (see Appendix A - Modbus TCP)
- The HTTP server (see section below)
- Application access to the Ethernet including peer-to-peer communications
- IEEE 1588v2 Precision Time Protocol

The Ethernet operates at 10/100 MHz, half/full duplex. Internet Protocol version 4 (IPv4) is supported.

The AC30P or AC30D has a built-in Ethernet switch with two external Ethernet ports allowing for daisy chaining of inverters.


## Connecting to the Inverter

### RECOMMENDED CABLE

CAT5e screened or CAT6 screened Ethernet cable is recommended.


### AC30V

Insert the Ethernet cable as shown below on an AC30V. Connection is recommended via an Ethernet switch.

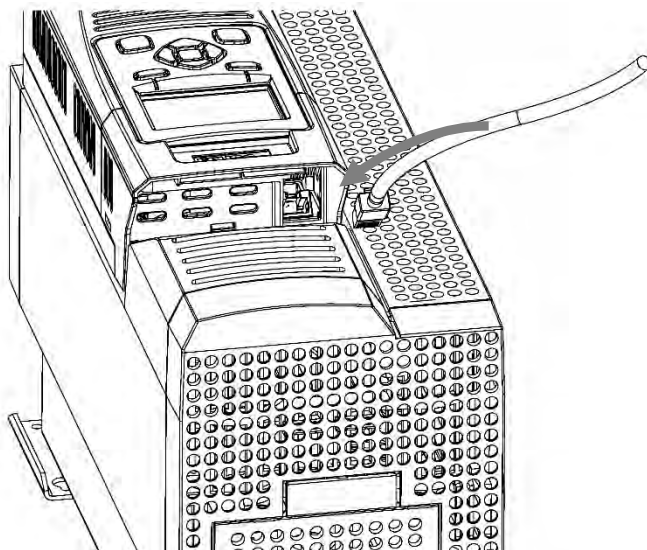

To remove the cable first remove the GKP and then insert a screwdriver to release the catch on the Ethernet clip.


**Ethernet LEDs**  
Activity Link

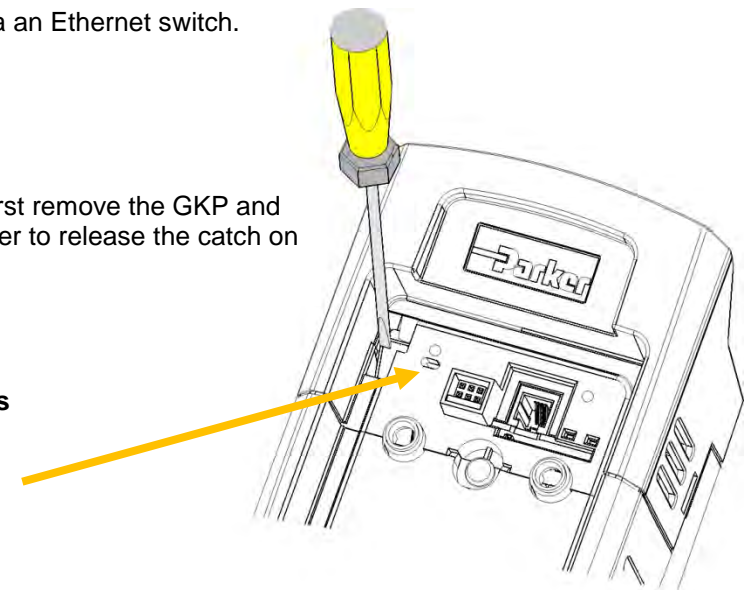

AC30P OR AC30D

Insert the Ethernet cable on an AC30P or AC30D as shown below.

Port 1 LEDs


Activity 

Link 


Port 2 LEDs

Activity 

Link 

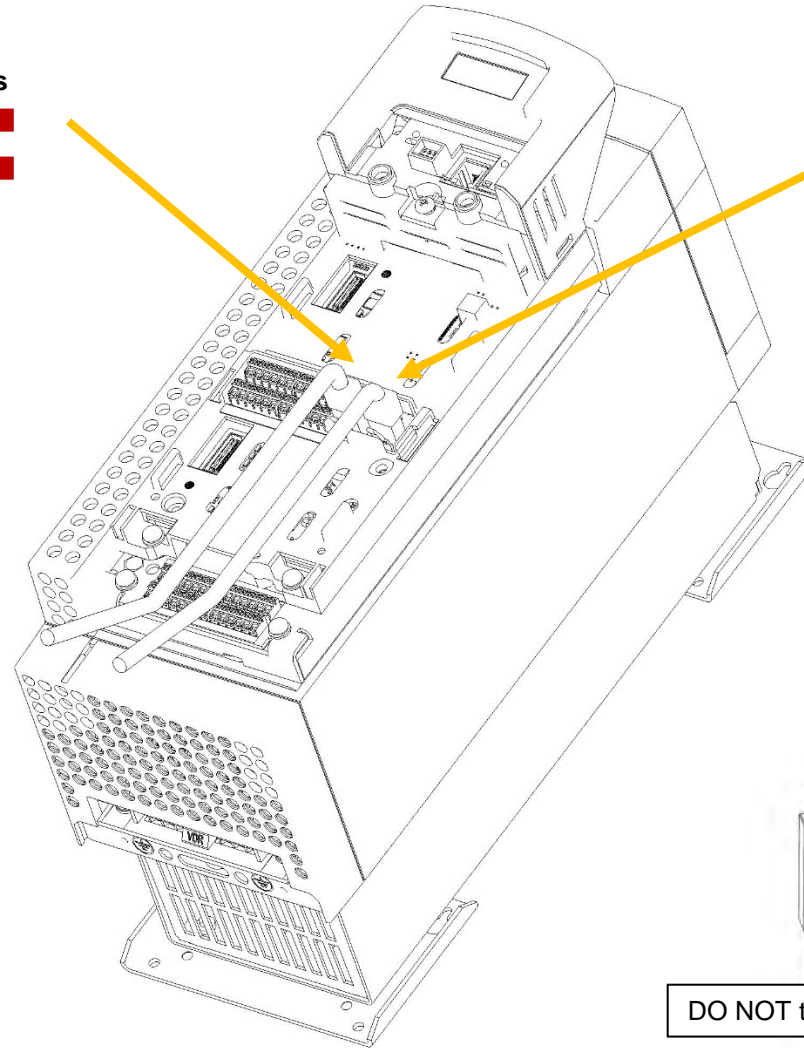

DO NOT TOUCH

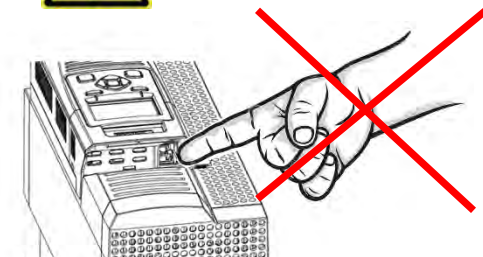

DO NOT touch the board surface via the aperture shown



## 12-3 Ethernet

# Ethernet Setup

### CONFIGURATION

To enable communications over the Ethernet an IP address must be set. With the default setting, an attempt at automatically obtaining an IP address will be made.

Note: The IP address will be obtained or modified when an Ethernet cable is connected or the inverter is powered-up.

For the AC30P or AC30D if one port is already connected to a network, the IP address of the inverter will not be modified when the other port is connected to a network.

The state of the Ethernet can be monitored using the parameter **0919 Ethernet State** and from the Ethernet icon  on the GKP status bar.

The current IP settings of the inverter can be monitored using the following parameters:

**0926 IP Address**

**0927 Subnet Mask**

**0928 Gateway Address**

The MAC address of the Ethernet port is fixed at the factory and can be read using the parameter **0945 MAC Address**

### ADVANCED CONFIGURATION

The IP address on the inverter may be set using the following methods:

- Manually to a fixed address
- Automatically by a DHCP server connected on the network
- Automatically by the inverter to a link-local address using Auto-IP (also known as Automatic Private IP Addressing)

The parameters **0929 DHCP** and **0930 Auto IP** are used to determine how the IP address is set. The default of these two parameters is TRUE.

The parameter **0936 Setting Lock**, when set to TRUE, prevents a configuration tool from modifying the IP settings.

**Manually Setting the IP Address**

Parameter	Setting
0929 DHCP	FALSE
0930 Auto IP	FALSE
0933 User IP Address	<i>Preferred IP Address</i>
0934 User Subnet Mask	<i>Preferred Subnet Mask</i>
0935 User Gateway Address	<i>Preferred Gateway Address</i>

To set the IP address manually both the DHCP and Auto-IP must be disabled. The IP address, subnet mask and gateway address will be set from the values in the parameters **0933 User IP Address**, **0934 User Subnet Mask**, **0935 User Gateway Address**.

If the network does not have a gateway to another network then the gateway address may be set to 0.0.0.0

**Automatically Assigning an IP Address using DHCP**

Parameter	Setting
0929 DHCP	TRUE
0930 Auto IP	FALSE

If the network on which the inverter is connected has a DHCP (Dynamic Host Configuration Protocol) server then the IP address may be assigned by this server. The DHCP must be enabled. The inverter will then request an IP address, subnet mask and gateway address from the DHCP server.

Note: There is no guarantee that the DHCP server will provide the same IP address each time. The IP address is requested by the inverter when the Ethernet port is connected to a network or when the inverter is powered up.

**Automatically Assigning an IP Address using Auto-IP**

Parameter	Setting
0929 DHCP	FALSE
0930 Auto IP	TRUE

The inverter may assign itself a link-local address automatically using Auto-IP. This would be used where an automatic address is required but where no DHCP server is available, such as a small local network or when connecting an inverter directly to a PC (point to point). The Auto-IP must be enabled.

The inverter will choose an IP address randomly from the link-local range **169.254.\*.\***. The AC30 checks that no other Ethernet device on the network is using the address before allocating it. The Inverter will store this IP address (in parameter **0931 Last Auto IP Address**) and attempt to use it next time Auto-IP is used. The gateway address is fixed to 0.0.0.0

## 12-5 Ethernet

### *Using Both DHCP and Auto-IP*

Parameter	Setting
0929 DHCP	TRUE
0930 Auto IP	TRUE

If both the DHCP and Auto-IP are enabled then an IP address will be obtained automatically depending on the network. This is the default setting.

The inverter will take a link-local address in the range 169.254.\*.\* if no DHCP server is discovered on the network. If a DHCP server is available (or becomes subsequently available) then the inverter will take the IP address from the server. Note that the DHCP has precedence.

## TYPICAL WIRING CONFIGURATIONS

On the AC30P or AC30D either Ethernet port may be used.

**Point to Point Connection**

When connecting a PC directly to an inverter either:

- Both sides use local-link addresses 169.254.\*.\* (recommended) , or
- Both sides are set with a fixed IP address (each must be different and on the same subnet)


When using local-link addresses the parameter **0930 Auto IP** must be set to TRUE (see the section *Automatically Assigning an IP Address using Auto-IP*). Normally the PC is already configured to allow for an Automatic Private IP address. However if problems are encountered check the PC's network settings (see the section *Troubleshooting the Ethernet – Changing the Ethernet settings on the PC*).

Note: It may take some PCs up to 2 minutes to obtain an Automatic private IP address when the Ethernet cable is plugged in.

## 12-7 Ethernet

### **Local Network with a DHCP Server**


For the inverter, the parameter **0929 DHCP** must be set to TRUE (see the section *Automatically Assigning an IP Address using DHCP*).

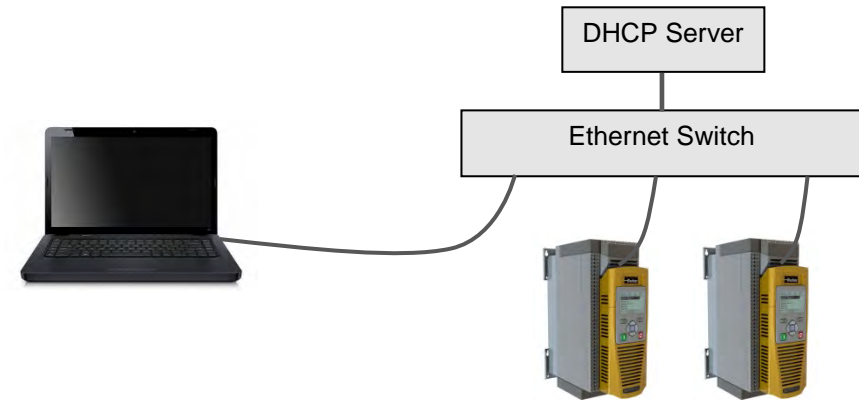

### **Local Network without a DHCP Server**

Devices on the network either:

- Use fixed addresses, in which case the parameters **0929 DHCP** and **0930 Auto IP** must be set to FALSE (see the section *Advanced Configuration - Manually Setting the IP Address*), or
- Use link-local addresses, in which case the parameter **0930 Auto IP** must be set to TRUE (see the section *Advanced Configuration - Automatically Assigning an IP Address using Auto-IP*).

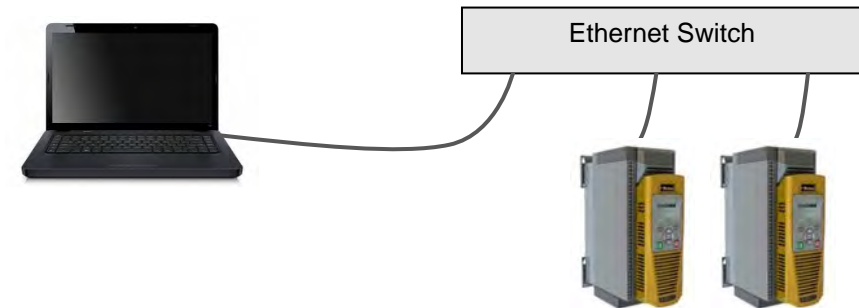

### **Ethernet Daisy Chaining**

The Ethernet on the AC30P or AC30D may be daisy-chained. The order of the ports is not important, but it is recommended to follow the order of, for example, Port 2 on the left-hand side inverter to Port 1 on the right-hand side inverter. However, an Ethernet loop MUST be avoided.



## ETHERNET PARAMETER SUMMARY

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Ethernet State</b>	0919	Monitor::Communications::Base Ethernet Parameters::Base Comms:: Ethernet	0:INITIALISING	0:INITIALISING 1:NO LINK 2:RESOLVING IP 3:RESOLVING DHCP 4:RESOLVING AUTO-IP 5:RESOLVED IP 6:STOPPING DHCP 7:DUPLICATE IP 8:FAULT		NEVER

Ethernet parameter.

Provides the state of the inverter Ethernet link.

Enumerated values:

0: INITIALISING	- Driver initialising
1 :NO LINK	- Ethernet not connected to a network
2: RESOLVING IP	- Waiting for an IP address to be set manually
3: RESOLVING DHCP	- Waiting for a DHCP server to provide an IP address
4: RESOLVING AUTO-IP	- Waiting to Auto-IP to provide an IP address
5: RESOLVED IP	- IP address is set – communication is possible
6: STOPPING DHCP	- Inverter is stopping the DHCP service
7: DUPLICATE IP	- Another device on the network has the same IP address
8: FAULT	- Fault detected

<b>MAC Address</b>	0920	Monitor::Communications::Base Ethernet Parameters::Base Comms:: Ethernet	00-00-00-00-00-00	xx-xx-xx-xx-xx-xx		NEVER
--------------------	------	---	-------------------	-------------------	--	-------

Ethernet parameter.

Provides the Ethernet MAC address.

<b>IP Address</b>	0926	Monitor::Communications::Base Ethernet Parameters::Base Comms:: Ethernet	0.0.0.0	0.0.0.0 to 255.255.255.255		NEVER
-------------------	------	---	---------	-------------------------------	--	-------

Ethernet parameter.

Provides the current IP address of the Ethernet

## 12-9 Ethernet

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Subnet Mask</b>	0927	Monitor::Communications::Base Ethernet Parameters::Base Comms:: Ethernet	0.0.0.0	0.0.0.0 to 255.255.255.255		NEVER
<p>Ethernet parameter. Provides the current subnet mask of the Ethernet.</p>						
<b>Gateway Address</b>	0928	Monitor::Communications::Base Ethernet Parameters::Base Comms:: Ethernet	0.0.0.0	0.0.0.0 to 255.255.255.255		NEVER
<p>Ethernet parameter. Provides the current gateway address of the Ethernet.</p>						
<b>Last Auto IP Address</b>	0931	Parameters::Base Comms:: Ethernet	0.0.0.0	0.0.0.0 to 255.255.255.255		NEVER
<p>Ethernet parameter. Provides the last Auto-IP IP address used.</p>						
<b>Ethernet Diagnostic</b>	0937	Parameters::Base Comms:: Ethernet	0000 0000h	0000 0000h to FFFF FFFFh		NEVER
<p>Ethernet parameter. Diagnostic for the Ethernet.</p>						
<b>DHCP State</b>	1269	Parameters::Base Comms:: Ethernet	0000 0000h	0000 0000h to FFFF FFFFh		NEVER
<p>Ethernet parameter. Diagnostic for the Ethernet DHCP client.</p>						
<b>Free Packets</b>	0938	Parameters::Base Comms:: Ethernet	0	0 to 100		NEVER
<p>Ethernet parameter. Diagnostic providing the remaining number of Ethernet packets</p>						
<b>Free Sockets</b>	1782	Parameters::Base Comms:: Ethernet	0	0 to 255		NEVER
<p>Ethernet parameter. Diagnostic providing the remaining number of BSD sockets.</p>						

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>DHCP</b>	0929	Setup::Communications::Base Ethernet Parameters::Base Comms:: Ethernet	TRUE	FALSE TRUE		ALWAYS
Ethernet parameter. DHCP enable. Set to TRUE to obtain an IP address from the connected DHCP server.						
<b>Auto IP</b>	0930	Setup::Communications::Base Ethernet Parameters::Base Comms:: Ethernet	TRUE	FALSE TRUE		ALWAYS
Ethernet parameter. DHCP enable. Set to TRUE to obtain an IP address using Auto-IP.						
<b>User IP Address</b>	0933	Setup::Communications::Base Ethernet Parameters::Base Comms:: Ethernet	0.0.0.0	0.0.0.0 to 255.255.255.255		ALWAYS
Ethernet parameter. The preferred fixed IP address of the Ethernet. For the Ethernet to take on this address both DHCP and Auto-IP must be disabled.						
<b>User Subnet Mask</b>	0934	Setup::Communications::Base Ethernet Parameters::Base Comms:: Ethernet	0.0.0.0	0.0.0.0 to 255.255.255.255		ALWAYS
Ethernet parameter. The preferred fixed subnet mask of the Ethernet. For the Ethernet to take on this address both DHCP and Auto-IP must be disabled.						
<b>User Gateway Address</b>	0935	Setup::Communications::Base Ethernet Parameters::Base Comms:: Ethernet	0.0.0.0	0.0.0.0 to 255.255.255.255		ALWAYS
Ethernet parameter. The preferred fixed gateway address of the Ethernet. For the Ethernet to take on this address both DHCP and Auto-IP must be disabled.						
<b>Lock</b>	0936	Parameters::Base Comms:: Ethernet	FALSE	FALSE TRUE		ALWAYS
Ethernet parameter. When set to TRUE, this prevents the IP settings being changed via an IP configuration tool. The IP settings may still be modified from the GKP and the inverter web Parameters page.						



# 12-11 Ethernet

## TROUBLESHOOTING THE ETHERNET

The following parameters are useful for monitoring the IP settings:

**0929 IP Address**

**0928 Subnet Mask**

**0931 Gateway Address**

The state of the Ethernet can be monitored using the parameter **944 Ethernet State**, normal operation is when the state is **RESOLVED IP**, and

from the GKP icon 

### ***No IP address - flashing GKP icon***

Normally, once the inverter is connected to a network, the GKP Ethernet icon will flash for a short period as the IP address is being resolved, and then will become a solid icon indicating an IP address has been set. If the icon continues to flash for more than 1 – 2 minutes this can indicate a problem. Check the parameter **0919 Ethernet State**.

### ***Resolving IP***

The inverter is waiting for a valid IP address to be set automatically, or manually using the parameters:

**0933 User IP Address**

**0934 User Subnet Mask**

**0935 User Gateway Address**

Note that the IP address must be set to a non-zero value.

### ***Resolving DHCP***

The inverter is waiting for a DHCP server to provide an IP address. If there is no DHCP server detected on the network then the Ethernet will stay in this state. If there is no DHCP server the IP address may be obtained using Auto-IP or set manually.

### ***Duplicate IP***

Another device on the network with the same IP address has been detected. This will cause communication issues. The Duplicate IP warning will clear after approximately 1 minute once the conflicting device has been removed or the IP address changed.

### ***An IP address is set but there is no communication***

If there is an IP address set but there are problems communicating with other devices (say a PC) then the IP address may not match the subnet on which it is connected. The range of the IP address permitted on a network depends upon the particular network. Normally if the IP address is obtained automatically then the settings will be correct for the network.

If connecting to a PC, the PC settings should also be checked – see the section *Changing the Ethernet settings on the PC*.

The administrator of a network should be aware of what IP settings are required.

### ***Link detection***

When the inverter Ethernet is connected to a network or other device, the Ethernet Link LED will be on and the Ethernet Activity LED will be flickering.

When first connected, the inverter will attempt to determine the speed and duplex of the Ethernet link. This is done using a method call auto-negotiation.

Some older devices or hubs do not support auto-negotiation, in which case the inverter will use parallel detection. As parallel detection will only provide the link speed, the inverter will default to half-duplex.

# 12-13 Ethernet

## **Changing the Ethernet settings on the PC**

Normally the PC Ethernet adapter is set to obtain an IP address automatically either from a DHCP server or using an automatic private IP address (Auto-IP). The adapter settings may be checked / modified as follows:


For **Windows XP** under Control Panel → Network Connections

For **Windows 7** under Control Panel → Network And Sharing Center → Change adapter settings

Right-click on the required network adapter and choose Properties, then double-click on **Internet Protocol (TCP/IP)** (Windows XP) or **Internet Protocol Version 4 (TCP/IPv4)** (Windows 7).

To use a fixed IP address make sure **Use the following IP address** under the **General** tab is chosen and enter the required IP address, subnet mask and default gateway.

To use DHCP or Auto-IP make sure **Obtain IP address automatically** under the **General** tab is selected and under the **Alternate Configuration** tab that **Automatic private IP** address is selected.

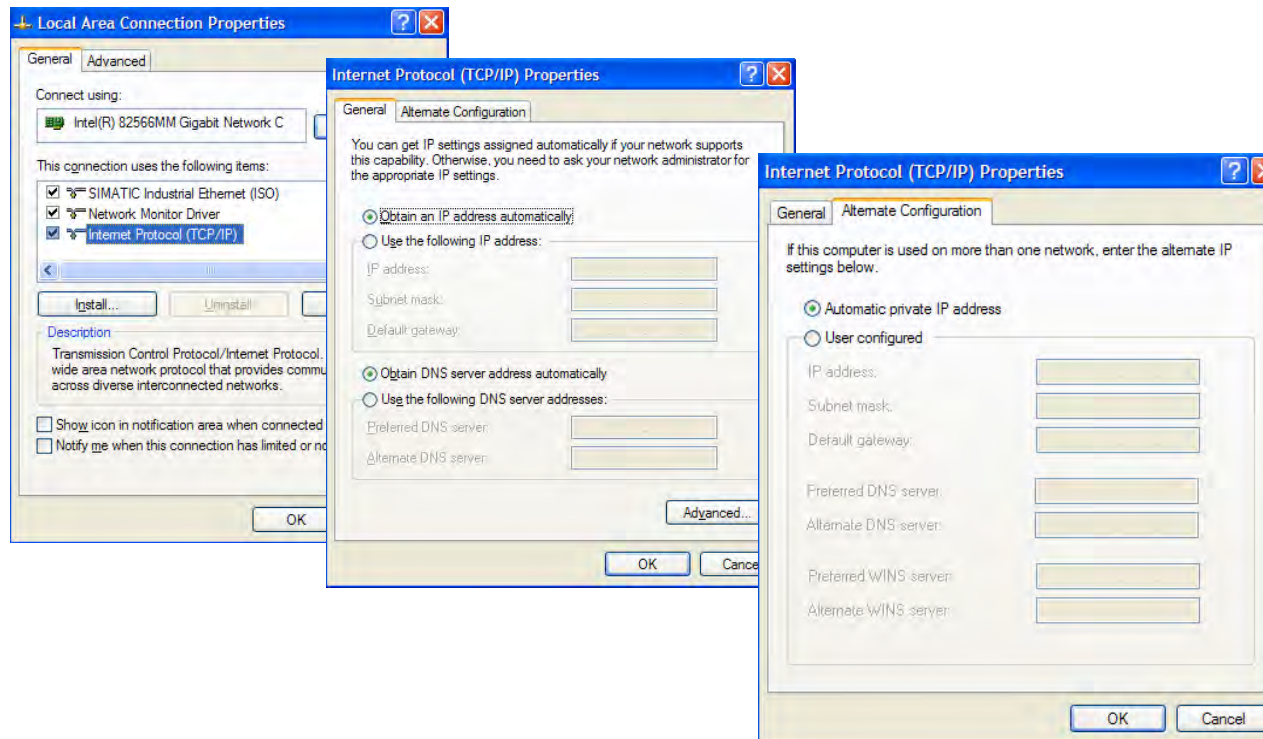

## Web (HTTP) Server

The inverter has a built-in web server. To access the web server the parameter **0944 Web Access** must be set to **LIMITED** (default) or **FULL**.

To access the inverter, enter the IP address into a web browser. The following browsers are suitable:

- Internet Explorer 10 or above - recommended
- Mozilla Firefox 33 or above
- Google Chrome 48 or above

### WEB PAGES

A number of built-in web pages can be accessed from the inverter.

#### **Summary Page**

The Summary page displays a summary of the inverter.

#### **Parameters Page**

The Parameters page provides access to the inverter parameters similar to the GKP. This page may only be accessed when the parameter **0944 Web Access** is set to **FULL**. The view level of the parameters may be modified using the parameter **0945 Web View Level**.

Parameters may be modified from this web page. If a parameter is successfully modified, and supports save, it will be saved if the parameter **1738 Enable Auto Save** is set to TRUE. If Enable Auto Save is set to FALSE then the Save button will appear in the parameter menu navigation bar. Pressing the Save button will save all parameters.

Some parameters may only be modified when in configuration mode, in which case the parameter number will be highlighted **orange**.  
Some parameters may only be modified when the motor is stopped, in which case the parameter number will be highlighted **purple**.

It is recommended to use the refresh button provided on the parameter menu navigation bar, rather than on the browser itself, to view the latest parameter values.

Parameters may be continuously monitored by clicking on the “monitoring” button on the parameter menu navigation bar.

## 12-15 Ethernet

The screenshot shows the Parker inverter web interface. The top navigation bar includes 'Summary', 'Parameters', and 'Services'. The 'Parameters' page is active, showing a dropdown menu set to 'ENGINEER' and a 'STATUS: OPERATIONAL' indicator. Below this is a breadcrumb trail: 'Home > Setup > Inputs and Outputs > Base IO'. A 'Refresh' button is visible next to the breadcrumb. The main content area displays a list of parameters with their current values and 'Set' buttons. Callouts point to various elements: 'Change parameter web view level' points to the 'ENGINEER' dropdown; 'Puts the inverter into operational or configuration mode' points to the play and stop buttons; 'Inverter status' points to the 'STATUS: OPERATIONAL' text; 'Parameter menu navigation bar' points to the top navigation bar; 'Enable / disable continual monitoring of parameters' points to the monitor icon; and 'Refresh parameter values' points to the 'Refresh' button.

Parameter ID	Parameter Name	Value	Action
0001	Anin 01 Type	-10..10 V	Set
0957	Anin 01 Offset	0.00 %	Set
0958	Anin 01 Scale	1.0000	Set
0002	Anin 02 Type	-10..10 V	Set
0959	Anin 02 Offset	0.00 %	Set

### Services Page

The Services page provides a means of restricting access to the web pages with a password using Basic Authentication. This page may only be accessed when the parameter **0944 Web Access** is set to **FULL**.

If the web access password is set then access to the Parameters Page and Services Page will be restricted. The default has the password cleared providing unrestricted access.

The username is fixed to "ac30".

**Note 1.** Basic Authenticate is a very low level of defence against unauthorized access. It is the responsibility of the system administrator to assess the network security and provide adequate protection.

**Note 2.** The username and password are case sensitive.

**Note 3.** If passwords are lost, they may only be cleared by a return to defaults of all the parameters.

## WEB SERVER PARAMETER SUMMARY

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Web Access</b>	0944	Setup::Communications::Base Ethernet Parameters::Base Comms::Web Server	1:LIMITED	0:DISABLED 1:LIMITED 2:FULL		ALWAYS
<p>Web Server parameter. Enables access to the inverter web server.</p> <p>Enumerated values:</p> <p>0: DISABLED – a web browser is prevented from accessing the inverter web server. 1: LIMITED – a web browser may access a limited set of pages on the inverter web server. 2: FULL – a web browser has full access to the pages on the inverter web server, however authentication will be required if a password has been set.</p>						
<b>Web View Level</b>	0945	Parameters::Base Comms::Web Server	1:TECHNICIAN	0:OPERATOR 1:TECHNICIAN 2:ENGINEER		ALWAYS
<p>Web Server parameter. Sets the view level when accessing parameters via the web server.</p> <p>Enumerated values:</p> <p>0: OPERATOR 1: TECHNICIAN 2: ENGINEER</p>						
<b>Web Password</b>	0946	Parameters::Base Comms::Web Server	<i>none</i>	-		ALWAYS
<p>Web Server parameter. Sets the password for access to restricted inverter web pages such as the Parameters Page. This may only be changed on the web Services page.</p>						


# 12-17 Ethernet

## TROUBLESHOOTING THE WEB SERVER

Troubleshooting of the Ethernet in general is described in the section Troubleshooting below.

If the inverter web page still cannot be accessed then this may be due to the browser's **proxy server** settings, especially if the PC has been used on a corporate network. To check the settings, access the **Internet Options** dialog from within the browser and click on the **Connections** tab, then click on **LAN settings**. Make sure the **Proxy server** checkbox is cleared, alternatively click on **Advanced** and add the IP address of the inverter to the **Exceptions** list.

Contact your network administrator before making any changes to your browser settings.

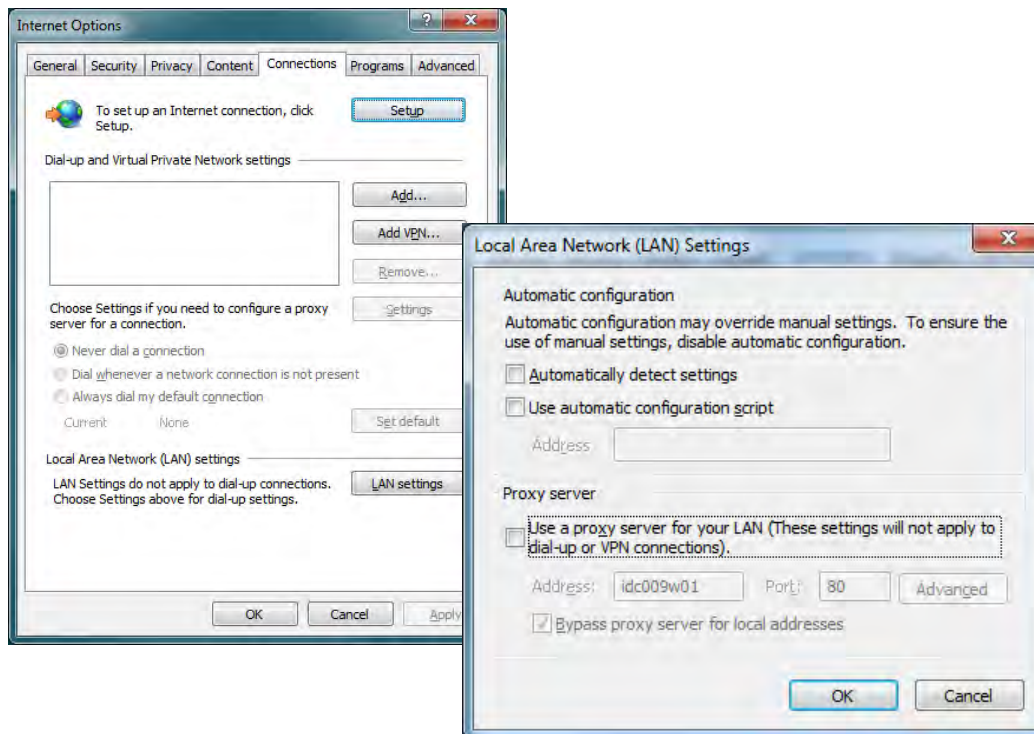

## Precision Time Protocol (PTP)

The Precision Time Protocol (IEEE 1588v2 or IEEE 1588-2008) is implemented in the AC30P and AC30D inverters.

The PTP will synchronize the internal clocks over the Ethernet to better than 1 microsecond. No external master is required for the PTP network; any of the inverters may become a PTP master.

The initial use of the PTP is for shaft locking applications using the Virtual Master or Real Master control.



Note: Currently up to 16 inverters are supported on a PTP network.

### CONFIGURATION

The two Ethernet ports provide a means of daisy chaining the inverters. The port order is not important, but an Ethernet loop must be avoided. An external Ethernet switch should not be used, unless it is an IEEE 1588v2 transparent switch, as this will reduce the synchronization accuracy by an indeterminate amount. Ethernet cables should be kept to a minimum length possible.

To enable the PTP set the parameter **1661 PTP Enable** to TRUE on all inverters participating.

In a PTP network, one device will be a master clock and the others will be slave clocks. On the AC30P or AC30D any inverter can become a master or a slave clock. The decision on which inverter becomes the master is automatic when using the default parameter configuration. However, it is possible to influence which becomes a master or slave by changing the PTP parameters.

Whilst the inverter is synchronising the icon on the GKP status bar  will flash. Once an inverter has become synchronised to the master clock or has become the master clock, the diagnostic parameter **1688 PTP Locked** will be set to TRUE and the GKP icon  will stop flashing.

### ADVANCED CONFIGURATION

#### PTP Modes

**One-Step and Two-Step modes:** In one-step mode the hardware timestamping directly modifies the network packets, in two-step mode the timestamps are stored and sent in a second step.

**End-to-End (E2E) and Peer-to-Peer (P2P) Delay modes:** In E2E mode the slaves determine the delay between them and the master over the whole network from end to end. In P2P mode each device only determines the delay to their nearest neighbour and adds this to the packets. Standard Ethernet switches may be used with the E2E mode but is not recommended as it can add an indeterminate delay between clocks.

#### Address and ports

The PTP protocol uses the multicast IP address 224.0.1.129 and UDP ports 319 (event) and 320 (general).



# 12-19 Ethernet

## PTP Profile

Each PTP device has a set of attributes as define by IEEE1588-2008. On the inverter the default attributes values are set as follows. Note that some may be modified by a parameter.

Attribute	Description	Inverter default value	Modified by parameter
domainNumber	A domain consists of one or more PTP devices communicating with each other. Devices on the same domain will have the same domain number.	0	1787 PTP Domain Number
slaveOnly	When <b>slaveOnly</b> is TRUE the PTP device may only be a slave and not become a master clock.	FALSE	1684 PTP Clock Type
logAnnounceInterval	A port in the MASTER state will periodically transmit an Announce message. Announce messages will be transmitted such that the logarithm to the base 2 of the mean value of the interval in seconds between message transmissions is the value of the <b>logAnnounceInterval</b> .	1 (2 seconds)	-
logSyncInterval	A port in the MASTER state will periodically transmit a Sync message. Sync messages will be transmitted such that the logarithm to the base 2 of the mean value of the interval in seconds between message transmissions is the value of the <b>logSyncInterval</b> .	-1 (0.5 seconds)	1681 PTP Log Sync Interval
logMinDelayReqInterval	The <b>logMinDelayReqInterval</b> will specify the minimum permitted mean time interval between successive Delay_Req messages. This value is determined and advertised by a master clock based on the ability of the master clock to process the Delay_Req message traffic.	0	-
announceReceiptTimeout	The value of <b>announceReceiptTimeout</b> will specify the number of announceInterval that has to pass without receipt of an Announce message	3	-

The following attributes are used to determine the best master clock. They are listed in order of precedence.

Attribute	Description	Inverter Default Value	Modified by parameter
priority1	Lower values of <b>Priority1</b> take precedence.	128	-
clockClass	Used to define a clock's TAI traceability.	248 or 255 (slave only)	-
clockAccuracy	Indicates the expected accuracy of a clock. Given as an enumerated value.	FEh	-
offsetScaledLogVariance	This defines the stability of the clock.	FFFFh (not computed)	-
priority2	Lower values of <b>Priority2</b> take precedence.	128	1686 PTP Priority2
clockIdentity	<p>The <b>clockIdentity</b> identifies a clock. The clockIdentity is an 8-octet identifier created from the Ethernet MAC address in the format:</p> <p>First 3 octets – most significant octets of MAC address            Next 2 octets – have values FFh and FEh respectively            Last 3 octets – least significant octets of MAC address</p> <p>The clockIdentity is used as a tie-breaker for the master clock.</p>	-	0920 MAC Address

# 12-21 Ethernet

## PTP PARAMETER SUMMARY

Note: The value of the PTP configuration parameters only become active when the PTP module initialises, i.e. on inverter power-up, on transition of the parameter 1661 PTP Enable to TRUE or connection of one or more Ethernet cables.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>PTP Enable</b>	1661	Setup::Communications::PTP Parameters::Base Comms::PTP	FALSE	FALSE TRUE		ALWAYS
<p>PTP parameter. Enables the precision time protocol.</p>						
<b>PTP Clock Type</b>	1684	Setup::Communications::PTP Parameters::Base Comms::PTP	0: MASTER OR SLAVE	0:MASTER OR SLAVE 1:SLAVE ONLY		ALWAYS
<p>PTP parameter. Sets if the inverter can become a master or slave clock, or a slave clock only.</p> <p>Enumerated values:</p> <p>0: MASTER OR SLAVE      - the device clock will become a Master if it is determined to be the best master in a network, otherwise it will become a Slave</p> <p>1: SLAVE ONLY            - the device clock can only become a Slave</p>						
<b>PTP Clock Mode</b>	1683	Setup::Communications::PTP Parameters::Base Comms::PTP	0:E2E	0:E2E		ALWAYS
<p>PTP parameter. Sets the PTP clock mode to either end-to-end (E2E) or peer-to-peer (P2P). See description in section <i>Advanced Users</i> for more details. Note that currently E2E is only available.</p> <p>Enumerated values:</p> <p>0: E2E</p>						
<b>PTP Domain Number</b>	1787	Setup::Communications::PTP Parameters::Base Comms::PTP	0	0 to 127		ALWAYS
<p>PTP parameter. Sets the Domain Number of the inverter. A PTP device will only communicate with other PTP devices that have the same domain number even if it is on the same physical network.</p>						

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>PTP Log Sync Interval</b>	1681	Setup::Communications::PTP Parameters::Base Comms::PTP	-1	-1 to 0		ALWAYS
<p>PTP parameter.</p> <p>Sets the Log Sync Interval. See description in section <i>Advanced Configuration</i> for more details. This parameter should be set to the same value on all inverters using PTP.</p>						
<b>PTP Priority2</b>	1686	Setup::Communications::PTP Parameters::Base Comms::PTP	128	0 to 255		ALWAYS
<p>PTP parameter.</p> <p>Sets the Priority 2 used as part of the process in determining which PTP device becomes the master clock. See description in section <i>Advanced Configuration</i> for more details.</p>						
<b>PTP Lock Threshold</b>	1685	Setup::Communications::PTP Parameters::Base Comms::PTP	0.5 us	0.1 us to 100 us	us	ALWAYS
<p>PTP parameter.</p> <p>Sets the Lock Threshold when the inverter is a slave clock. When the average offset between the slave clock and the master clock falls below the Lock Threshold then the slave clock is deemed to be synchronised as indicated by the parameter 1688 PTP Locked. Note that it will take longer for a slave clock to be deemed synchronised when a smaller threshold is set.</p>						
<b>PTP State</b>	1689	Monitor::Communications::PTP Parameters::Base Comms::PTP	NONE	0:NONE 1:INITIALISNG 2:FAULTY 3:DISABLED 4:LISTENING 5:PRE-MASTER 6:MASTER 7:PASSIVE 8:UNCALIBRATED 9:SLAVE		NEVER
<p>PTP parameter.</p> <p>A diagnostic parameter indicating the state of the internal PTP state machine.</p> <p>Enumerated values:</p> <p>0: NONE - the PTP module is disabled or the Ethernet cables are removed</p> <p>1: INITIALISNG - the PTP is initialising the data sets and communications</p> <p>2: FAULTY - the PTP module failed to initialise</p>						

# 12-23 Ethernet

Parameter Name	No.	Path	Default	Range	Units	Writable
3: DISABLED						
4: LISTENING						
5: PRE-MASTER						
6: MASTER						
7: PASSIVE						
8: UNCALIBRATED						
9: SLAVE						
<b>PTP Clock</b>	1699	Monitor::Communications::PTP Parameters::Base Comms::PTP	1970/01/01 00:00:00	-		NEVER
<p>PTP parameter. Diagnostic parameter giving the current value of the PTP clock to 1 second accuracy. Note this is not intended to represent the actual date and time.</p>						
<b>PTP Offset</b>	1687	Monitor::Communications::PTP Parameters::Base Comms::PTP	0 ns	-2000000000 to 2000000000		NEVER
<p>PTP parameter. Diagnostic parameter giving the average offset in nanoseconds between the PTP clock and the master clock.</p>						
<b>PTP Locked</b>	1688	Monitor::Communications::PTP Parameters::Base Comms::PTP	FALSE	FALSE TRUE		NEVER
<p>PTP parameter. Diagnostic parameter indicating when the inverter is a slave that the PTP clock has synchronised to a master clock determined by parameter 1685 PTP Locked Threshold. If the inverter is a master then this parameter will be set to TRUE.</p>						

## Peer to Peer

The Peer to Peer module is implemented in the AC30P and AC30D inverters and provides Ethernet communications between inverters.

The data sent is not accessible to the user. The initial use of the Peer to Peer module is for shaft locking applications using the Virtual Master or Real Master control and used in conjunction with the Precision Time Protocol (PTP).

Note: The Peer to Peer module broadcasts data at a high rate, as such, when the Peer to Peer module is enabled it is recommended not to connect the inverters to a corporate or other sensitive network.

### CONFIGURATION

To enable the Peer to Peer module set the parameter **1725 Peer to Peer Enable** to TRUE on all inverters participating. For most applications the default settings may be used. For further configuration of the module see the section *Peer to Peer Parameter Summary*.

# 12-25 Ethernet

## PEER TO PEER PARAMETER SUMMARY

Note: The value of the Peer to Peer configuration parameters only become active when the Peer to Peer module initialises, i.e. on inverter power-up or transition of the parameter 1725 Peer to Peer Enable to TRUE.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Peer to Peer Enable</b>	1725	Setup::Communications::Peer to Peer Parameters::Base Comms::Peer to Peer	FALSE	FALSE TRUE		ALWAYS
Peer to Peer Parameter. Enables the Peer to Peer module.						
<b>Destination IP Address</b>	1726	Setup::Communications::Peer to Peer Parameters::Base Comms::Peer to Peer	255.255.255.255	0.0.0.0 to 255.255.255.255		ALWAYS
Peer to Peer Parameter. Sets the destination IP address of the data when the Peer to Peer module is sending. If the Destination IP Address is set to 255.255.255.255 then the sent data is broadcast and all listening inverters will receive the data.						
<b>Destination Port</b>	1727	Setup::Communications::Peer to Peer Parameters::Base Comms::Peer to Peer	1250	1 to 65535		ALWAYS
Peer to Peer Parameter. Sets the UDP port number the Peer to Peer module sends data to. Normally this will be set the same as the Local Port.						
<b>Local Port</b>	1728	Setup::Communications::Peer to Peer Parameters::Base Comms::Peer to Peer	1250	1 to 65535		ALWAYS
Peer to Peer Parameter. Sets the UDP port number the Peer to Peer module receives the data on. Normally this will be set the same as the Destination Port.						
<b>Peer to Peer State</b>	1729	Monitor::Communications::Peer to Peer Parameters::Base Comms::Peer to Peer	DISABLED	DISABLED ACTIVE ERROR		NEVER
Peer to Peer Parameter. A diagnostic parameter indicating the state of the Peer to Peer module.						
Enumerated values:						
0: DISABLED - the Peer to Peer module is disabled.						
1: ACTIVE - the Peer to Peer module is enabled and ready for communications.						
2: ERROR - the Peer to Peer module is in an error state and communications could not be established.						

## Chapter 13: Fire Mode



### Caution

When Fire Mode is active the Drive and Motor protection trips are disabled. The use of Fire Mode itself increases the risk of causing a fire by overloading the drive or motor, so it must only be used after assessing the risks.

### Intended Use

Fire mode is intended for use in critical situations where it is imperative for the motor to be kept running if at all possible. In such a situation it may be reasonable to override the drive's normal protective functions. An example of a critical situation may be a ventilation fan in a stairwell, where continued operation in the event of a fire may assist the safe evacuation of personnel.

### Summary

When Fire Mode is enabled the drive firmware attempts to keep the drive running wherever possible. If the drive was running when Fire Mode was activated it will continue to run. If the drive was stopped when Fire Mode was activated then the Fire Mode firmware will attempt to start it. While Fire Mode is enabled the majority of trips will be ignored, (possibly leading to damage to the drive, motor or attached equipment). If one of the remaining enabled trips does occur then the Fire Mode firmware will wait until the trip source has become inactive and will then restart the drive.

When Fire Mode is deactivated the drive will return to its previous sequencing mode. If the drive was running in Local mode the motor will be stopped. If the drive was running in remote terminals or remote communications mode the drive will continue running according to the relevant control word, (refer to Appendix B).



## 13-2 Fire Mode

### Configuration

The parameters used to configure Fire Mode are detailed in Appendix D. This description is partially duplicated here for convenience.

PNO*	Parameter Descriptions
	<b>Activate</b> A Boolean input. Set to TRUE to enable Fire Mode according to the Fire Mode parameter. This input parameter may only be set by connection to a digital input. Default value FALSE
1961*	<b>Setpoint</b> A reference value to be used when Fire Mode is active. Setting a negative setpoint will cause the drive to rotate in reverse direction. Default value 0.0%. Range -100% to 100%
1962*	<b>Level</b> An enumerated input parameter. Selects the mode of operation when Fire Mode is enabled 0. DISABLED 1. PARTIAL 2. FULL Default value is DISABLED.
1963*	<b>Restart Delay</b> Specifies the time to wait before attempting to reset a trip.
1964*	<b>Activated</b> A Boolean output that indicates when Fire Mode is active. This is TRUE when <b>Level</b> is either PARTIAL or FULL, the <b>Setpoint</b> is not 0.0% and <b>Activate</b> is TRUE.
1965*	<b>Enabled</b> A Boolean output that indicates when Fire Mode will be activated if <b>Activate</b> is set TRUE. This is TRUE when <b>Level</b> is either PARTIAL or FULL and the <b>Setpoint</b> is not 0.0%.
1966*	<b>Last Activated</b> A Data and Time output parameter that records the last time that the fire mode became active. This may be used to validate that the fire mode has been tested. This value is recorded in non-volatile memory. The value will be reset if an application is loaded that does not implement Fire Mode.
1967*	<b>Activation Count</b> An integer output parameter that records the number of times the fire mode has become active. This value is saved in non-volatile memory. The activation count will be reset if an application is loaded that does not implement Fire Mode.

\* These PNO values are correct for the Fan Application. Custom configurations may assign the Fire Mode parameter to different PNOs.

## Functional Description

When Fire Mode is enabled the normal speed reference and start / stop control of the drive are modified.

### Sequencing

Sequencing is the term given to controlling when the drive runs. When Fire Mode is enabled the normal sequencing control signals are over-ridden. The parameters that control this are

	<b>Activate</b>
	<b>Setpoint</b>
	<b>Level</b>
PNO 0610	Sequencing::App Control Word bit 0, Switch On, (refer to Appendix B:Sequencing Logic). In typical applications bit 0 of the App Control Word is driven from a digital input, used as a Coast Stop signal.

If **Level** is set to DISABLED or **Setpoint** is zero then setting **Activate** to TRUE will have no effect.

If **Level** is set to either PARTIAL or FULL and **Setpoint** is not zero then setting **Activate** to TRUE will activate Fire Mode. When Fire Mode is active the drive will run, (turn the motor).

The only reasons that the drive will not run are:

- **Level** is changed back to DISABLED
- **Activate** is changed back to FALSE
- **Setpoint** is change to zero
- The Coast Stop input is activated.
- The STO circuit is activated.
- An enabled trip source becomes active.
- A hardware fault

### Reference

The Fire Mode **Setpoint** parameter is selected automatically whenever Fire Mode is **Activated**. The Setpoint is passed through the System Ramp, (see Appendix D).



**Caution** Fire Mode does not override the standard Ramp features. Specifically **0497 Ramp Hold** can prevent the setpoint changing to the Fire Mode **Setpoint** value.

## 13-4 Fire Mode

### TRIPS AND AUTO RESTART

The following table summarizes which trips are disabled in the two modes of operation. Also shown are those trips which are designed to protect the drive.



**Caution** Disabling the Drive Protection trips will invalidate the drive's warranty. Selecting PARTIAL mode leaves the drive protection features enabled. Selecting FULL mode disables some of the drive protection features.



**Caution** Regardless of the setting of **Level**, activating Fire Mode may cause damage to the motor or attached equipment.

ID	Trip Name	Disabled in Partial mode	Disabled in Full mode	Drive Protection
1	OVER VOLTAGE			✓
2	UNDER VOLTAGE <sup>(1)</sup>	Note 1	Note 1	
3	OVER CURRENT			✓
4	STACK FAULT			✓
5	STACK OVER CURRENT			✓
6	CURRENT LIMIT	✓	✓	
7	MOTOR STALL	✓	✓	
8	INVERSE TIME		✓	✓
9	MOTOR I2T	✓	✓	
10	LOW SPEED I	✓	✓	
11	HEATSINK OVERTEMP		✓	✓
12	AMBIENT OVERTEMP		✓	✓
13	MOTOR OVERTEMP	✓	✓	
14	EXTERNAL TRIP	✓	✓	
15	BRAKE SHORT CCT		✓	✓
16	BRAKE RESISTOR	✓	✓	
17	BRAKE SWITCH		✓	✓
18	LOCAL CONTROL	✓	✓	
19	COMMS BREAK	✓	✓	
20	LINE CONTACTOR	✓	✓	
21	PHASE FAIL	✓	✓	
22	VDC RIPPLE		✓	✓

ID	Trip Name	Disabled in Partial mode	Disabled in Full mode	Drive Protection
23	BASE MODBUS BREAK	✓	✓	
24	24V OVERLOAD	✓	✓	
25	PMAC SPEED ERROR	✓	✓	
26	OVERSPEED	✓	✓	
27	SAFE TORQUE OFF			

*Note 1. The Under Voltage trip is enabled when Fire Mode is active, but the trip level is reduced by 50%.*

If a trip source becomes active when the associated trip is disabled the drive will continue to run. This is also the normal behavior of the drive, (when Fire Mode is not active). If the associated trip is designed for drive protection, this will be recorded in non-volatile memory. The recorded values are available to view in the Trips History parameter block, (refer to Appendix D).

When Fire Mode is activated and a trip source becomes active and the associated trip is enabled, the drive will trip, causing the motor to stop. This is similar to the normal behavior of the drive, (when Fire Mode is not active). However, when Fire Mode is active the drive firmware continues to monitor the trip source, once the trip source has become inactive the drive automatically resets the trip condition and restarts the drive.

The Fly catching feature can be used to allow the drive to smoothly resume control of a moving load on restart.

### **Motor Control Modes**

The operation of Fire Mode is independent of the motor type motor and the control mode, (Open Loop or Sensorless Vector control).

## Appendix A: Fieldbuses

### Modbus TCP

#### INTRODUCTION

The inverters built-in Ethernet includes a Modbus TCP server. The Modbus registers are mapped to the inverters parameters. Up to 3 simultaneous connections to Modbus clients are possible. TCP port 502 is used.

Making a connection to the Ethernet and setting an IP address on the inverter is described in Chapter 12 (Ethernet). If the Modbus TCP is used as part of a process control it is recommended a dedicated network be used with fixed IP addresses for the inverter.

To allow Modbus TCP connections to the inverter, the parameter **0939 Maximum Connections** must be set to a value greater than zero.

#### *Modbus Register Mapping Summary*

The inverter parameters are mapped to the Holding Registers and Input Registers, either as a fixed mapping or as a user-defined mapping. There is no mapping to Coils or Discrete Inputs.

Holding Register Address	Input Register Address	Description
00001 - 00256	00001 - 00256	User-defined mapping to the inverter parameter values.
00257 - 00528	00257 - 00528	Reserved area. Do not write into this register range.
00529 - onwards	00529 - onwards	Fixed mapping to the inverter parameter values.

## FIXED PARAMETER MAPPING

Each parameter number is mapped onto **two** consecutive Modbus registers regardless of the parameter data type. The relationship between the Holding Register or Input Register is given as:

$$\text{Register number} = (\text{parameter number} - 1) * 2 + 529$$

- If the parameter has a data type that uses one byte then it will occupy the low byte of the first register and the high byte will be zero, i.e. the register will not be sign extended.
- If the parameter has a data type that uses two bytes then it will occupy the first register.
- Unused register locations will read zero; writing to that location will have no effect.
- The word order of 32-bit parameters is determined by the inverter parameter **0940 High Word First**.
- Writable 32-bit parameters will only accept a change in value if *both* registers mapped to the parameter are written to in the same request.

### Fixed Parameter Mapping - Arrays

Some parameters have multiple elements and are classified as parameter arrays. A parameter array has a parameter number that represents the *whole* of the array, but also has parameter numbers that represent each *element* of the array. An example is given below.

#### Array Example

A parameter array called **Recent Trips** has 10 elements.

Parameter Number	Parameter – Recent Trips
895	Whole array
896	index 0
897	index 1
...	...
905	index 9

If the parameter number of the whole array is 895, then the parameter number of the element index 0 of the array will be 896, the parameter number of the element index 1 will be 897, etc.

Note: *String* array parameters access their elements via parameter numbers that are calculated in a different way (see [Fixed Parameter Mapping - Strings](#)).

Accessing the parameter arrays via the parameter number that represents the whole array is not recommended. This will access only the first four bytes (2 registers) of the array. The array should rather be accessed via its elements.

## A-3 Fieldbuses

### **Fixed Parameter Mapping - Strings**

Strings parameters have a parameter number that represents the whole string. This parameter number is mapped to two registers so limits access to the first four characters. Additional contiguous parameter numbers are set aside so that the whole string can be accessed: one additional parameter number for each four characters. The strings are packed into the registers **low byte first**.

#### **String Example**

A string parameter called **My String** has a string length of 12 characters (plus the null terminator). This will have one parameter number allocated for the whole string (in this example 161) and 3 further parameter numbers for the string fragments (162-164).

If the value of the string is "0123456789AB":

Parameter Number	Represents	Register Number	Register Value	
			hi-byte	lo-byte
0161	whole string "0123456789AB"	00849	'1'	'0'
		00850	'3'	'2'
0162	Fragment "0123"	00851	'1'	'0'
		00852	'3'	'2'
0163	fragment "4567"	00853	'5'	'4'
		00854	'7'	'6'
0164	fragment "89AB"	00855	'9'	'8'
		00856	'B'	'A'

Note: This example is not a real parameter.

As each inverter parameter maps to two registers, if the registers that represent the whole string are accessed then only the first four characters will appear. To access the whole string over Modbus use the registers that map to the parameter number of the whole array plus one, in this example **0162** (register **00851**). A multiple read or write of registers will then provide access to the whole string.

**String Array Example**

A string array parameter called **My String Array** has 2 elements of string length 5 characters (plus the null terminator) each. In this example the parameter number of the whole array is 175.

If the values of the array elements are “12345” and “abc”:

Parameter Number	Represents		Register Number	Register Value	
				hi-byte	lo-byte
0175	whole array [“12345”, “abc”]		00877	‘2’	‘1’
			00878	‘4’	‘3’
0176	1 <sup>st</sup> element “12345”		00879	‘2’	‘1’
			00880	‘4’	‘3’
0177	fragment “1234”	00881	‘2’	‘1’	
0178			00882	‘4’	‘3’
		00883		<i>null</i>	‘5’
00884			<i>undefined</i>	<i>undefined</i>	
	0179	2 <sup>nd</sup> element “abc”		00885	‘b’
0180		fragment “abc”	00886	<i>null</i>	‘c’
	00887			‘b’	‘a’
0181		fragment “”	00888	<i>null</i>	‘c’
	00889			<i>undefined</i>	<i>undefined</i>
00890		<i>undefined</i>	<i>undefined</i>		

Note: This example is not a real parameter.

To access the first element of the array over Modbus then parameter number **0177** (register **00881**) would be used. To access the second element then parameter number **0180** (register **00887**) would be used.



## A-5 Fieldbuses

### USER-DEFINED PARAMETER MAPPING

The inverter parameters may be mapped to the user-defined register area (00001 – 00256). This allows parameters to be grouped together so that they may be accessed through a single Modbus request.

To map parameters add the required parameter numbers to the user mapping table using parameter **1567 Modbus Mapping**. The following applies:

- The mapping starts at register 00001.
- Any valid fixed or application parameter may be added excluding password parameters and parameter arrays - individual elements of the array may be added however.
- Parameter strings may be added.
- The mapping ends on the first mapping entry of zero or when the mapping table is full.

**Note:** The mapping may be modified at any time. However no Modbus requests should be made when the mapping is being modified to avoid indeterminate response data.

Unlike the fixed mapping, the user-defined parameter mapping will only use as many registers as necessary to accommodate the parameter. An example is given below:

Mapping Table	Parameter Name	Data Type	No. of Registers	Start Register	End Register
0	0627 Comms Control Word	WORD	1	00001	00001
1	0681 Comms Reference	REAL	2	00002	00003
2	0696 First Trip	USINT	1	00004	00004
3	0661 Status Word	WORD	1	00005	00005
4	0395 Actual Speed Percent	REAL	2	00006	00007
5	0961 Drive Name	23-character STRING	12	00008	00019
6	0000				

The mapping table is continually checked for valid entries. The diagnostic parameter **1632 Mapping Valid** will be TRUE if all entries in the table are valid parameters. If the diagnostic parameter is FALSE, meaning there are invalid entries, then Modbus requests are still accepted but the invalid entries will be skipped over and will occupy no registers in the mapping.

The following applies to user-mapped parameters:

- If the parameter has a data type that uses one byte then it will occupy the low byte of the Modbus register and the high byte will be zero, i.e. the register will not be sign extended.
- The word order of 32-bit parameters is determined by the inverter parameter **0940 High Word First**.
- Writable 32-bit parameters will only accept a change in value if *both* registers mapped to the parameter are written to in the same request.
- String parameters are packed into the registers **low byte first**.
- Writable string parameters will only accept a change if the first register is included in the request. If the string is not null terminated, then a null termination will be added automatically.

## PASSWORD PROTECTION

Write access to parameters via the fixed mapping registers may be restricted by setting the parameter **1659 Modbus TCP Password**.

Note that there is no restriction to parameters via the user-defined mapping registers.

*When this password is set to a value other than zero, writing to parameters will only be possible when the password is unlocked. If the password is not unlocked then writes will be ignored.*

To unlock the password write to the Modbus register **00518** the value set in the parameter 1659 Modbus TCP Password. Write access will be available until a subsequent write to the Modbus register 00518 of value 0000.

Note the following:

- A read of Modbus register 00518 will always respond with a value of 0000 regardless of the password being locked or unlocked.
- Locking and unlocking the password will apply to all Modbus connections.
- When all Modbus connections are closed, write access will returned back to the locked state if a password is set.

## A-7 Fieldbuses

### SUPPORTED MODBUS FUNCTIONS

Four Modbus functions are supported:

#### ***Read Holding Registers (#3)***

This function allows multiple Input registers to be read. Up to 125 registers may be read. As the Holding registers and Input registers map to the same inverter parameters this will return the same values as the Read Input Registers function.

#### ***Read Input Registers (#4)***

This function allows multiple Holding registers to be read. Up to 125 registers may be read. As the Holding registers and Input registers map to the same inverter parameters this will return the same values as the Read Holding Registers function.

#### ***Write Single Register (#6)***

This function allows a single Holding register to be written to. Note that this function may only be used on registers that map to 1-byte or 2-byte inverter parameters. An attempt to write to a register that maps to a 4-byte parameter will have no effect on the parameter.

#### ***Write Multiple Registers (#16)***

This function allows a contiguous block of Holding registers to be written to. Up to 120 registers may be written. Note that when writing to registers that map to 4-byte inverter parameters both registers must be written to. Writing to one-half of a 4-byte parameter will have no effect on the parameter.

## MODBUS EXCEPTION CODES

Three Modbus exception codes are supported:

### ***Illegal Function (01)***

The Modbus function is not supported by the slave.

### ***Illegal Data Address (02)***

If the register data address contained in the Modbus request maps to an inverter parameter that is outside the range of parameter numbers then this exception will occur.

### ***Illegal Data Value (03)***

If the number of bytes or words contained in the Modbus request field is out of range then this exception will occur.

## PROCESS ACTIVE AND LOST COMMUNICATIONS TRIP

### ***Process Active Flag***

The Process Active flag is represented by the inverter parameter **0943 Process Active**. This parameter changes to TRUE on the first valid Modbus request.

If the parameter **0941 Modbus Timeout** is set to a non-zero value then the **Process Active** parameter will subsequently change to FALSE if a Modbus request is not received within the timeout period.

### ***Trip***

If enabled, a break in the Modbus communications can be used to generate a trip. The **0943 Process Active** parameter is used to generate the trip. If this parameter transitions from TRUE to FALSE then a trip will event will be generated.

To enable the base communications Modbus trip, the parameter **0942 Modbus Trip Enable** must be set to TRUE *and* the **BASE MODBUS BREAK** bit set in the parameter **0697 Enable 1-32**. The parameter **0941 Modbus Timeout** must be set to a value other than zero.

For information on enabling trips see Chapter 10 Trips & Fault Finding.

### ***Connection Timeout***

The parameter **1241 Open Connections** indicates the number of open connections to the inverter Modbus TCP server.

A connection receive timeout may be set using the parameter **1458 Modbus Conn Timeout**. If this is set to a value other than zero, then the connection will be closed by the server if no data has been received within the timeout period. This is useful, for example, if the link between the server and client is lost, otherwise the connection may remain open indefinitely.

# A-9 Fieldbuses

## PARAMETER SUMMARY

The following parameters are relevant to the Modbus TCP.

Parameter Name	No.	Path	Default	Range	Writable
<b>Maximum Connections</b>	0939	Setup::Communications::Base Modbus Parameters::Base Comms::Modbus	0	0 - 3	ALWAYS
<p>Modbus TCP parameter.</p> <p>Sets the maximum number of Modbus clients allowed. If set to zero, then no connections will be allowed.</p>					
<b>High Word First</b>	0940	Setup::Communications::Base Modbus Parameters::Base Comms::Modbus	FALSE	FALSE TRUE	ALWAYS
<p>Modbus TCP parameter.</p> <p>If set to TRUE, the most significant word of a 32-bit parameter will be mapped to the first register, and the least significant word to the next register.</p>					
<b>Modbus Timeout</b>	0941	Setup::Communications::Base Modbus Parameters::Base Comms::Modbus	3.0 seconds	0.0 – 65.0 seconds	ALWAYS
<p>Modbus TCP parameter.</p> <p>Sets the process active timeout.</p>					
<b>Modbus Trip Enable</b>	0942	Setup::Communications::Base Modbus Parameters::Base Comms::Modbus	TRUE	FALSE TRUE	ALWAYS
<p>Modbus TCP parameter.</p> <p>Set TRUE to enable the Modbus Trip. The parameter Modbus Timeout must be set to a value other than zero</p>					
<b>Open Connections</b>	1241	Monitor::Communications::Base Modbus Parameters::Base Comms::Modbus	0	0 - 3	NEVER
<p>Modbus TCP parameter.</p> <p>Indicates the number of open connections to the inverter Modbus TCP server.</p>					
<b>Process Active</b>	0943	Monitor::Communications::Base Modbus Parameters::Base Comms::Modbus	FALSE	FALSE TRUE	NEVER
<p>Modbus TCP parameter.</p> <p>Indicates that a Modbus request addressed to this node has been received within the period set by the parameter Modbus Timeout, or if no timeout is specified, this parameter will stay active after the first received Modbus request.</p>					

Parameter Name	No.	Path	Default	Range	Writable
<b>Modbus Conn Timeout</b>	1458	Setup::Communications::Base Modbus Parameters::Base Comms::Modbus	66 seconds	0 – 100,000 seconds	ALWAYS
<p>Modbus TCP parameter.</p> <p>Sets the Modbus connection timeout. If this parameter is set to zero then the connection will not timeout.</p>					
<b>Modbus Mapping</b>	1567	Setup::Communications::Base Modbus Parameters::Base Comms::Modbus	<i>none</i>	0 Last parameter number	ALWAYS
<p>Modbus TCP parameter.</p> <p>User-defined Modbus parameter mapping table. Each entry in the table represents the required parameter number.</p>					
<b>Mapping Valid</b>	1632	Monitor::Communications::Base Modbus Parameters::Base Comms::Modbus	TRUE	FALSE TRUE	NEVER
<p>Modbus TCP parameter.</p> <p>Status of the user defined mapping area. This will be set to TRUE if all entries in the mapping table are valid.</p>					
<b>Modbus TCP Password</b>	1659	Setup::Communications::Base Modbus Parameters::Base Comms::Modbus	0000	0000 FFFF	ALWAYS
<p>Modbus TCP parameter.</p> <p>Modbus password. When set to a value other than zero, write access to parameters via the fixed mapping registers will be restricted. To unlock the password, write to the Modbus register 00518 the value set in this password. A subsequent write of value 0000 to Modbus register 00518 will lock the password.</p>					

# A-11 Fieldbuses

## EtherNet/IP Adapter

### INTRODUCTION

The built-in EtherNet/IP adapter (slave/server) is implemented in the AC30P and AC30D inverters.

To make use of this feature, firmware version V3.x.x needs to be installed in the inverter. The firmware may be updated by downloading the firmware file from the Parker website (see section *Firmware Update* in Chapter 4) or installed from the latest version of PDQ. With version V3.x.x firmware installed, the **AC30EIPS** CoDeSys (PDQ/PDD) device is required.

Note: V3.x.x firmware has no AFE support and an application size of 128Kbytes (rather than 192Kbytes).

### Features

The following EtherNet/IP features are implemented:

- Class 1 and Class 3 connections
- One input assembly instance of up to 500 bytes
- One output assembly instance of up to 496 bytes
- Input mapping of up to 32 inverter parameters
- Output mapping of up to 32 inverter parameters
- Unicast or multicast communications
- Requested Packet Interval (RPI) down to 2ms
- Explicit access of inverter parameters (read and write)

### Identity

The EtherNet/IP adapter has the following identity:

Vendor ID     **4** (Parker-Hannifin)

Product Code **306** (Parker AC30 Drive)

## INVERTER CONFIGURATION

### *Enabling*

To enable the EtherNet/IP adapter set the parameter **3128 EtherNet IP Enable** to TRUE.

The current state of the EtherNet/IP adapter is given by the parameter **3130 EtherNet IP State**.

Note the EtherNet/IP adapter is only active when the inverter is in the Operational state.

### *IP Settings*

The IP settings are set up from the inverter using the Ethernet parameters described in Chapter 12. The IP settings of the inverter cannot be set via the PLC.

The current IP settings are monitored using the parameters:

**0926 IP Address**

**0927 Subnet Mask**

**0928 Gateway Address**

If parameter **0929 DHCP** is set to TRUE, then the IP address will be set from the DHCP server on the network, if one is available.

If parameter **0930 Auto IP** is set to TRUE, then the IP address will be automatically be assigned a link-local address.

If both parameters **0929 DHCP** and **0930 Auto IP** are FALSE, then the IP address, subnet mask and gateway address will be set from the values in the parameters:

**0933 User IP Address**

**0934 User Subnet Mask**

**0935 User Gateway Address**



# A-13 Fieldbuses

## Parameter Mapping

The input and output assembly mappings of the inverter parameters are set in the parameters **3000 Input Mapping** (PLC->inverter) and **3064 Output Mapping** (inverter->PLC). Parameters created in the application may be added into the mapping. The mapping of each table ends on the first zero entry.

The total number of input and output bytes mapped depends on the type of parameters added to the mapping tables. The number of bytes used by each data type is summarized in the table.

AC30 Data Type	Bytes
BOOL	1
SINT	1
INT	2
DINT	4
USINT (incl enumerated)	1
UINT	2
UDINT	4
REAL	4
TIME	4
DATE	4
TIME_OF_DAY	4
DATE_AND_TIME	4
BYTE	1
WORD	2
DWORD	4

For the **input mapping** each parameter must be read-writable. Parameter arrays are permitted. Configuration type parameters, string parameters, password parameters and reserved parameters are not permitted. The default input mapping is given in the table.

Input Mapping Table		Data Type	Bytes
000	0627 Comms Control Word	WORD	2
001	0681 Comms Reference	REAL	4
002	0000		

For the **output mapping** each parameter may be read-only or read-writable. Parameter arrays are permitted. String parameters and password parameters are not permitted. The default input mapping is given in the table.

Output Mapping Table		Data Type	Bytes
000	0661 Status Word	WORD	2
001	0395 Actual Speed Percent	REAL	4
002	0000		

If the input and output mappings have invalid entries then the parameter **3130 EtherNet IP State** will report **ERROR** and the inverter will not go into the Operational state.

**Assembly Instances**

The assembly instance numbers are:

Assembly Instance	Number
Input (T2O)	100
Output (O2T)	150
Input only	198
Listen Only	199

**Electronic Data Sheet (EDS) File**

The latest EtherNet/IP EDS file for the inverter may be downloaded from [www.parker.com](http://www.parker.com)

The EDS file may also be downloaded directly from the drive via a web browser. To access this make sure the parameter **0944 Web Access** is set to LIMITED or FULL. Type the following into the browser address bar (replacing **ip\_address** with the inverter's IP address):  
**ip\_address/eds/eips.zip**

# A-15 Fieldbuses

## EXAMPLE PLC CONFIGURATIONS

### Using RSLogix 5000

The example in this section uses the default parameter mapping of the inverter described under Parameter Mapping in the Inverter Configuration section above:

Input Mapping Table		Data Type	Bytes
000	0627 Comms Control Word	WORD	2
001	0681 Comms Reference	REAL	4
002	0000		


Output Mapping Table		Data Type	Bytes
000	0661 Status Word	WORD	2
001	0395 Actual Speed Percent	REAL	4
002	0000		

A CompactLogix L32E controller is used.


1. Start a new project from within RSLogix 5000 and select the required controller.



- Open the **Ethernet Port** properties and enter the IP address of the Controller.

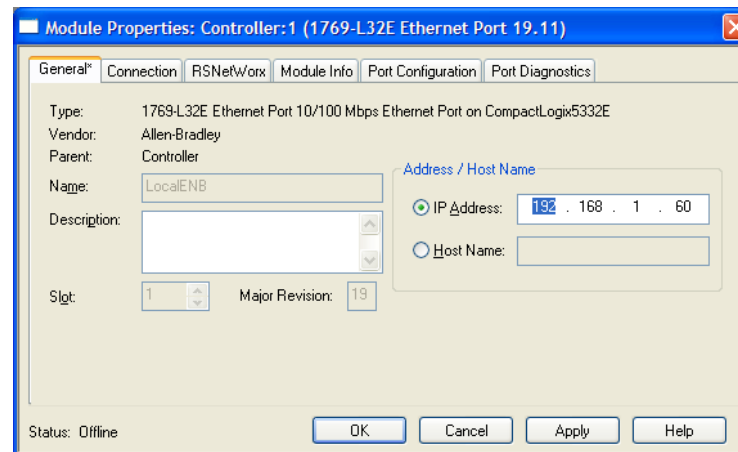


- Right-click on the **Ethernet Port** and select **New Module**. Under **Communications** select the **Generic Ethernet Module**.

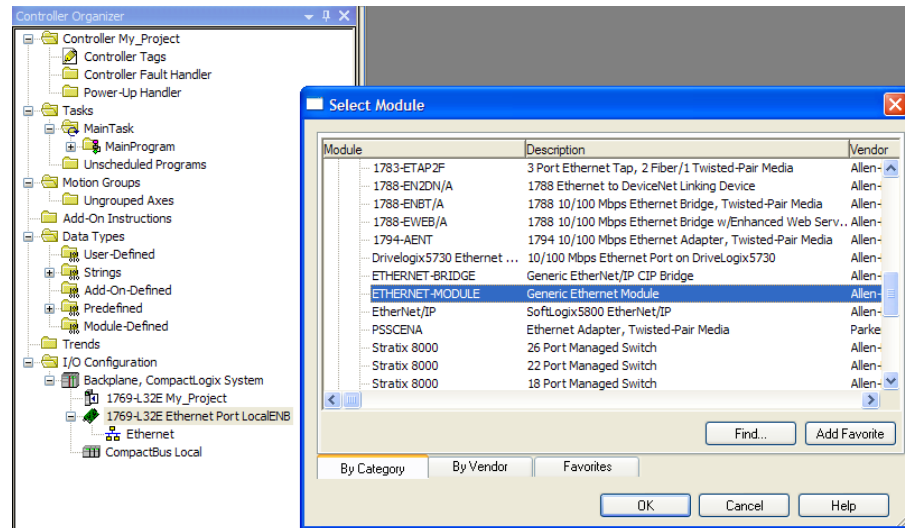


# A-17 Fieldbuses


- Enter the Name and IP address of the inverter. Set the **Comm Format** as **Data – SINT**. The **Input Assembly Instance** is **100** and in this example the data size is a total of 6 bytes. The **Output Assembly Instance** is **150** and in this example the data size is a total of 6 bytes. The mapping sizes on the inverter **MUST** match that on the PLC. Set the Configuration Assembly Instance to 128 size 0.

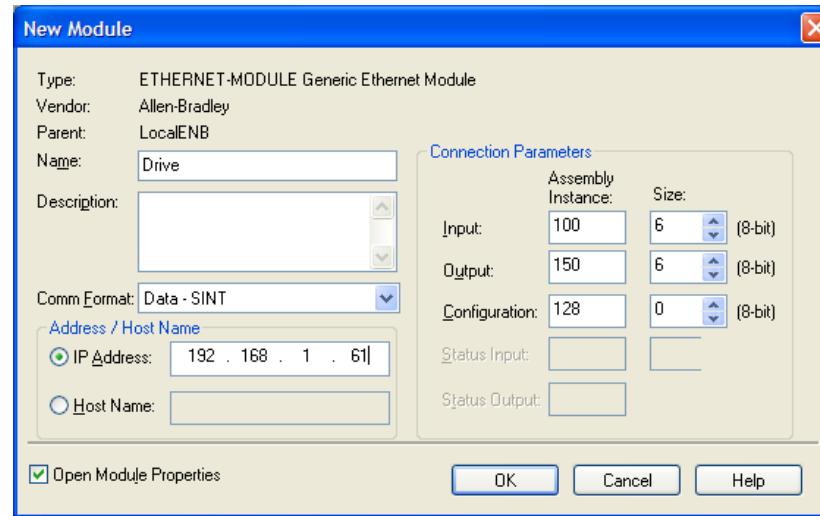


- Within the **Controller Tags** the communications data arrays are automatically created:

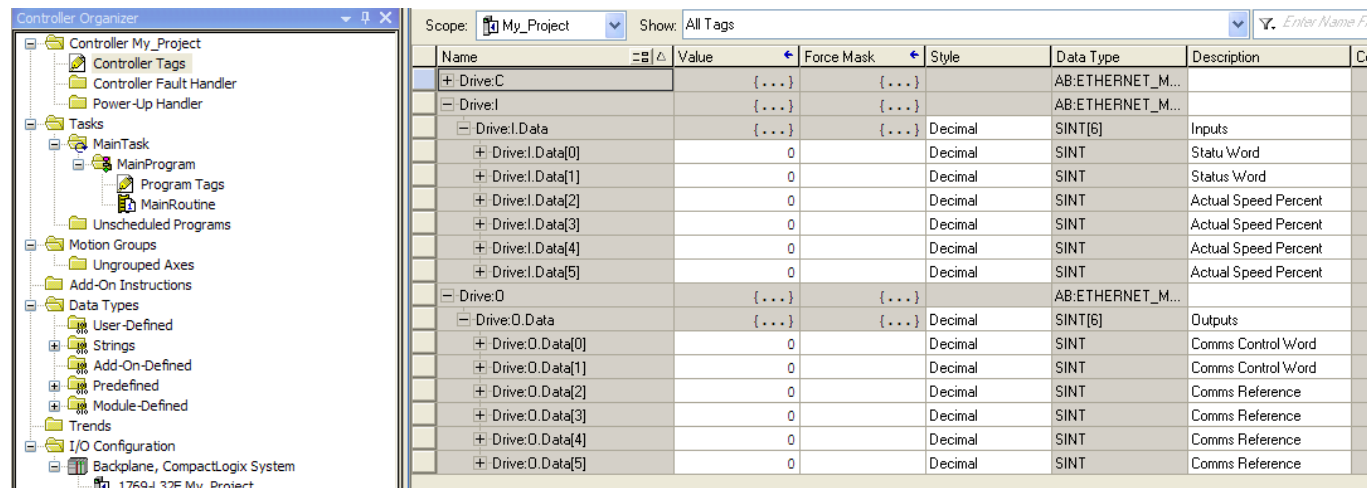

6. Additional tags can be created to represent the actual data on the AC30.

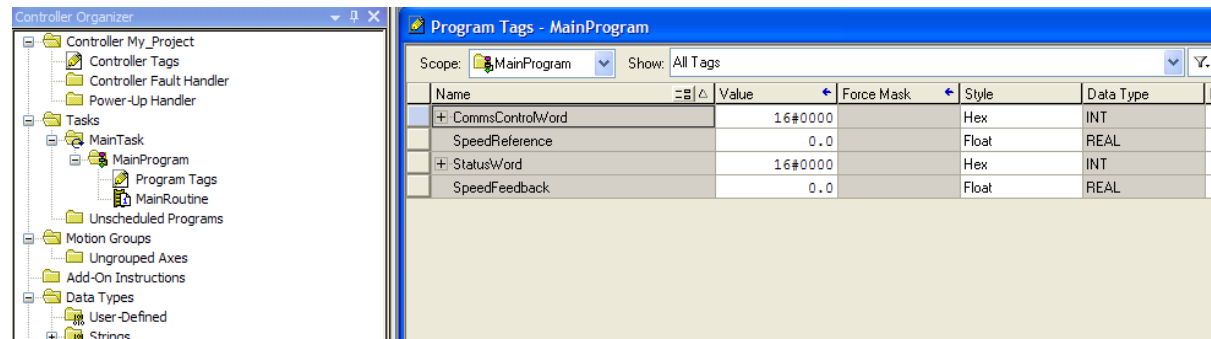

7. The data can be transferred between the communication data arrays and the program data using the Synchronous Copy File (CPS) copy instruction as shown in the ladder diagram. Note that the CPS function is not interrupted until the copy is done.

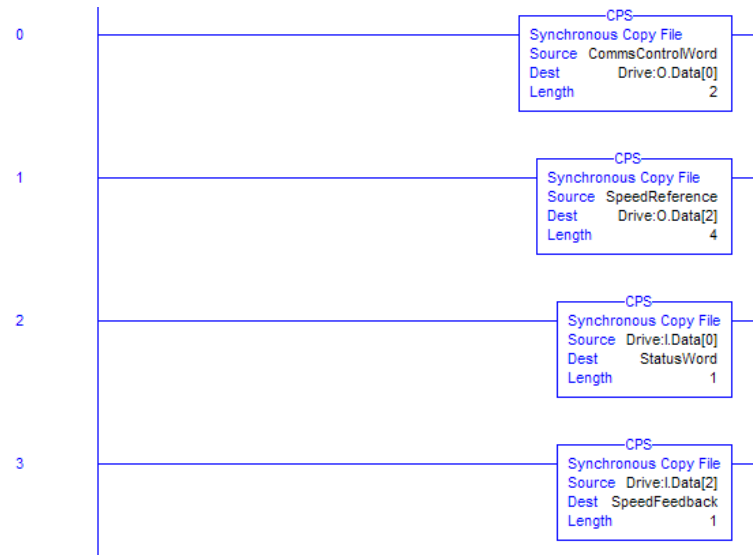

# A-19 Fieldbuses

## Using a CoDeSys Based PLC


The example in this section uses the default parameter mapping of the inverter described under Parameter Mapping in the Inverter Configuration section above:

Input Mapping Table		Data Type	Bytes
000	0627 Comms Control Word	WORD	2
001	0681 Comms Reference	REAL	4
002	0000		


Output Mapping Table		Data Type	Bytes
000	0661 Status Word	WORD	2
001	0395 Actual Speed Percent	REAL	4
002	0000		

A CoDeSys (V3.5 SP10) soft PLC running on a PC is used.


1. Start a new project from CoDeSys using a **CODESYS Control Win V3** device.
2. From the CoDeSys menu select **Tools->Device Repository...** and install the AC30 EDS file. The device will appear under Fieldbuses as shown.

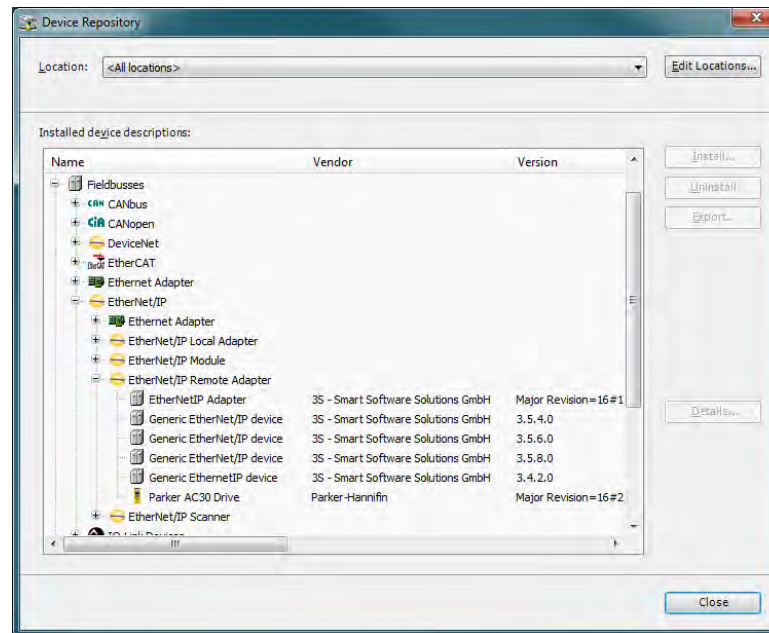

- Under Devices, select the **CODESYS Control Win 3** device, right click and select **Add Device...**, then add an **Ethernet Adapter**. Under the Ethernet device add an **EtherNet/IP Scanner**. Under the EtherNet/IP Scanner add a **Parker AC30 Drive**.

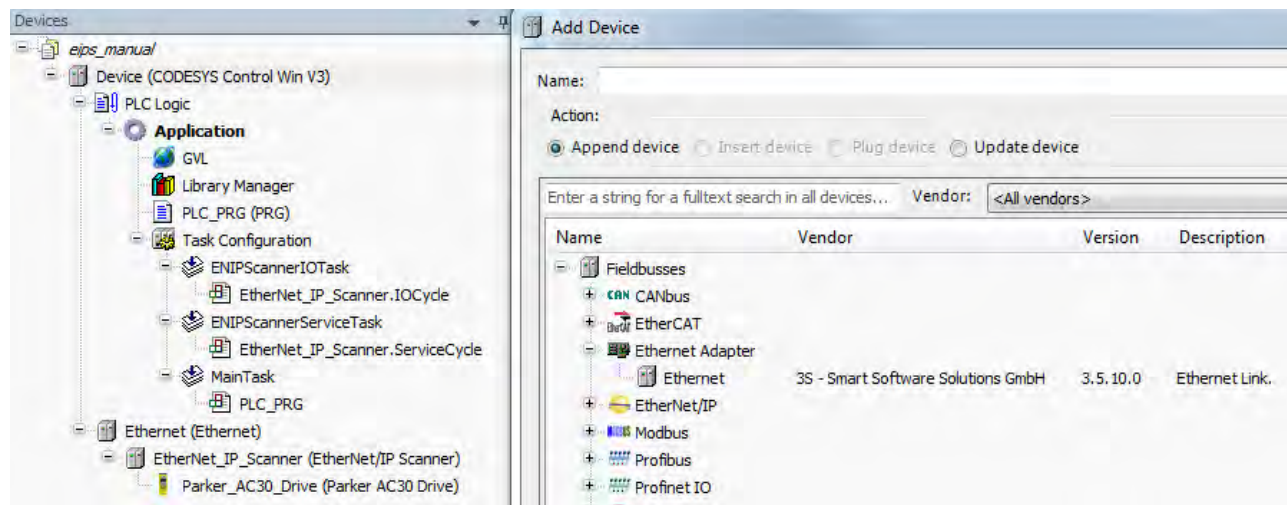


- Double-click on **CODESYS Control Win 3** and under **Communications Settings** tab select **Scan Network...** and select the required PC (note the softPLC on the PC must be started).

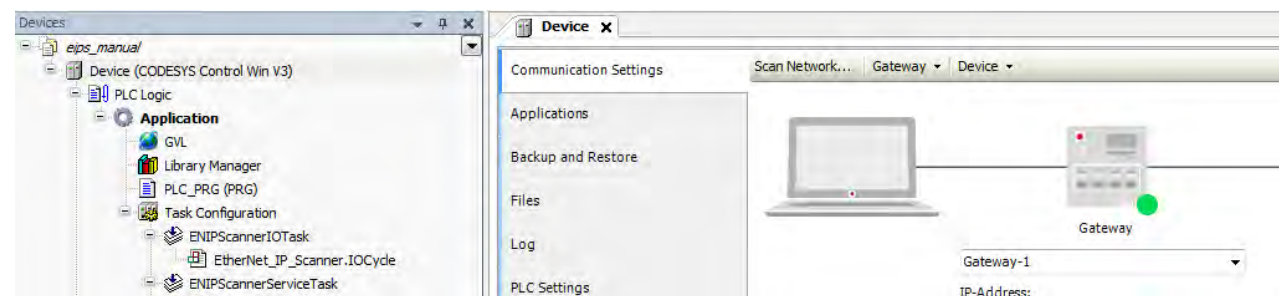




# A-21 Fieldbuses


5. Double-click on **Ethernet** and under the **General** tab select the required interface.

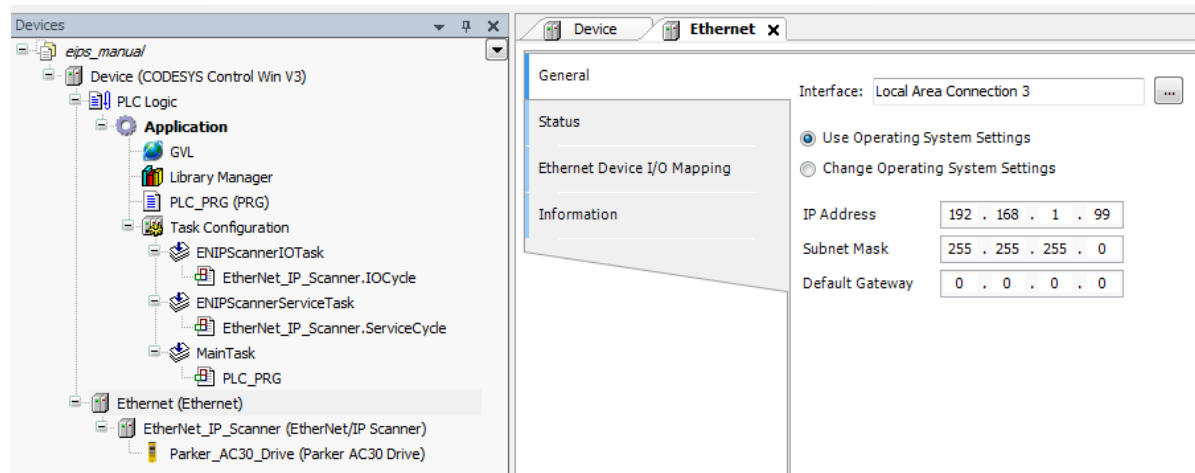

6. Double-click on **Parker AC30 Drive** and under the **General** tab set the IP address to that of the inverter.

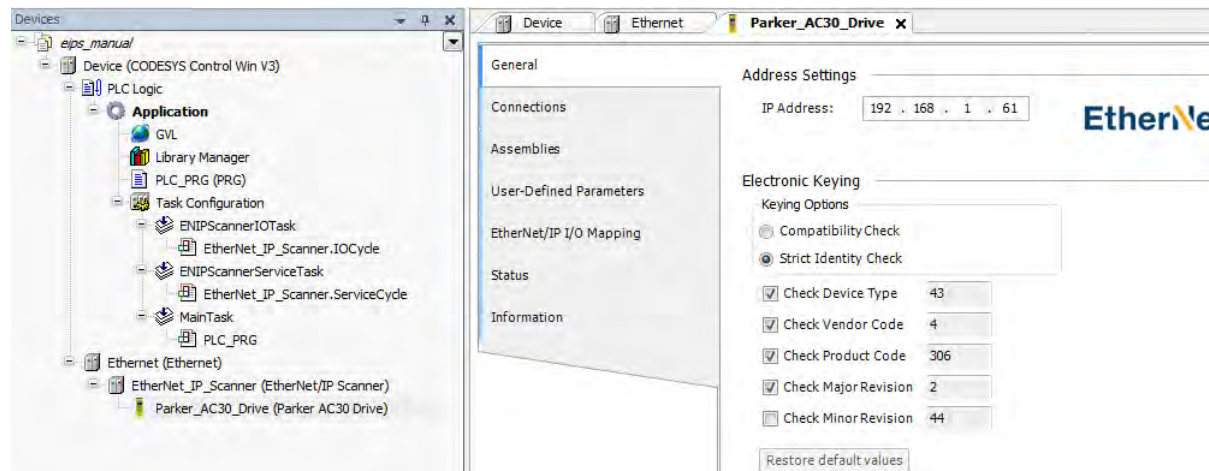

- Under the **Connections** tab edit the connection if necessary. The input mapping uses a total of 6 bytes (O->T) and the output mapping also uses a total of 6 bytes (T->O). The mapping sizes on the inverter MUST match that on the PLC. The RPI (Requested Packet Interval) may also be changed.

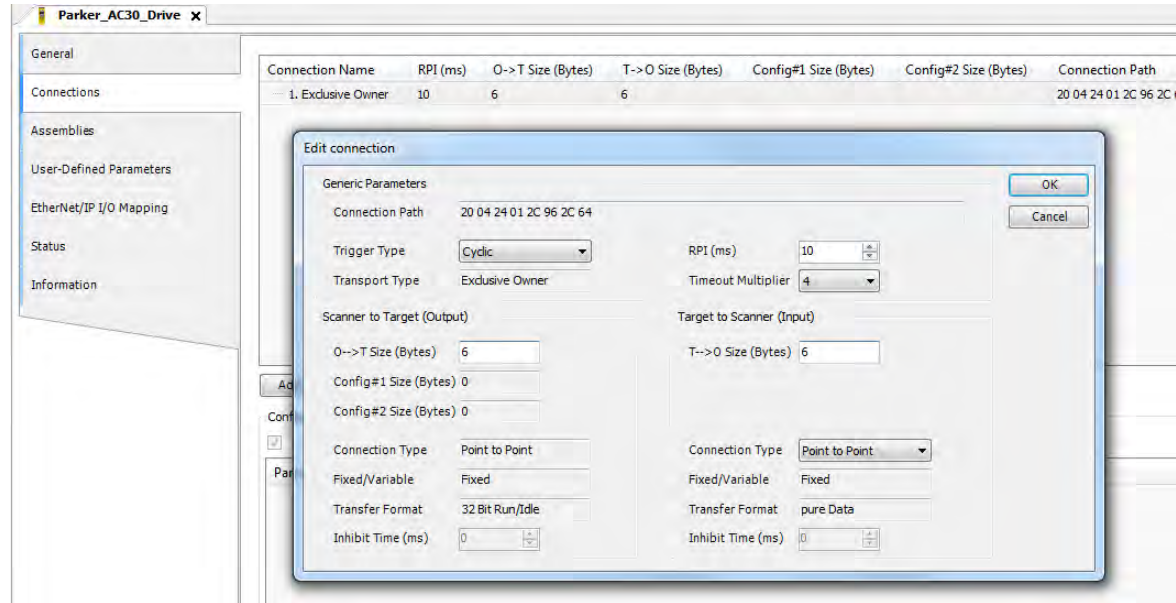


## A-23 Fieldbuses

8. Under the EtherNet/IP IO Mapping tab the mappings can be seen.


**%IB0** will be the first byte of the **Status Word** and **%IB2** will be the first byte of the **Actual Speed Percent**

**%QB0** will be the first byte of the **Comms Control Word** and **%QB2** will be the first byte of the **Comms Reference**

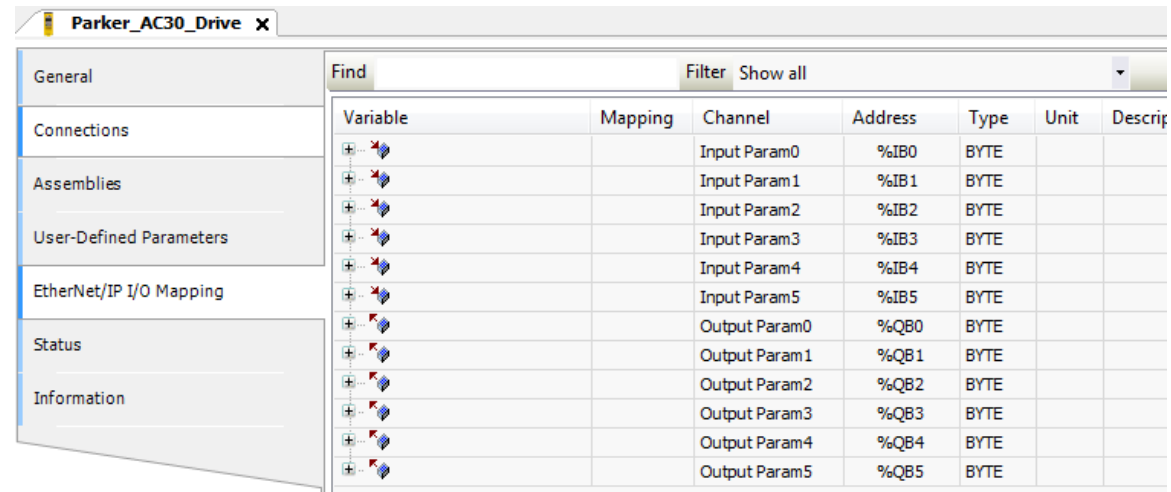

Variable	Mapping	Channel	Address	Type	Unit	Descrip
+		Input Param0	%IB0	BYTE		
+		Input Param1	%IB1	BYTE		
+		Input Param2	%IB2	BYTE		
+		Input Param3	%IB3	BYTE		
+		Input Param4	%IB4	BYTE		
+		Input Param5	%IB5	BYTE		
+		Output Param0	%QB0	BYTE		
+		Output Param1	%QB1	BYTE		
+		Output Param2	%QB2	BYTE		
+		Output Param3	%QB3	BYTE		
+		Output Param4	%QB4	BYTE		
+		Output Param5	%QB5	BYTE		

9. In the application program the IO mappings can be accessed as variables as shown in this example.

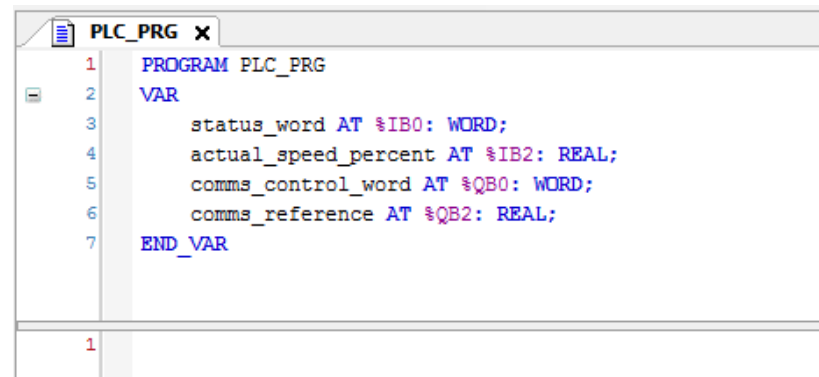

```
1 PROGRAM PLC_PRG
2 VAR
3     status_word AT %IB0: WORD;
4     actual_speed_percent AT %IB2: REAL;
5     comms_control_word AT %QB0: WORD;
6     comms_reference AT %QB2: REAL;
7 END_VAR
```

## EXPLICIT ACCESS OF PARAMETERS

Explicit access of the AC30 parameters is possible via the vendor specific object. Details of this are given in the section CIP Objects – Vendor Specific Object.

A parameter value may be read or written via Class **64h**, Attribute **5h**. The instance number is the same as the parameter number (PNO). The supported services are **Get Attribute Single** and **Set Attribute Single**.

Strings parameters use the SHORT\_STRING format – the string is preceded by a single byte that specifies the length of the string.

### ***Parameter Arrays***

Parameter arrays may be accessed either as a whole or as a single element.

Using the parameter number (instance number) that represents the whole array with attribute 5h will return or modify the contents of all parameters.

Using the parameter number that represents a single element will return or modify only that element.

String arrays may not be accessed as a whole array, but may be accessed via each element.

### ***Using a CoDeSys Based PLC***

CoDeSys based PLCs can access parameters explicitly using the function blocks **Get\_Attribute\_Single** and **Set\_Attribute\_Single** from the library **EtherNetIP Services**.

## LOST COMMUNICATIONS TRIP

A trip may be issued by the inverter on the loss of all Class1 connections of the EtherNet/IP adapter. To enable this, set the parameter **3129 EtherNet IP Trip** to **LOSS OF CONNECTION** and set the **ETHERNET IP BREAK** bit in the parameter **0730 ENABLE 33 – 64**.

## A-25 Fieldbuses

### TROUBLESHOOTING AND TIPS

#### ***The inverter fails to come out of configuration mode***

The input or output mapping tables have invalid parameter mappings. The parameter **3130 EtherNet IP State** will report **ERROR**. Check the parameter **3131 EtherNet IP Diag** to determine which mapping table has the incorrect mapping. Note the input mapping table may only contain read-writable parameters.

#### ***Failure to make a connection***

A connection between scanner and the adapter will not be made if:

- the input and output assembly data sizes of the scanner do not match the input and output mapping data sizes of the inverter
- the Requested Packet Interval (RPI) of the scanner is set to less than 2ms

#### ***Requested Packet Interval (RPI)***

When mapping a large amount of data use an RPI of at least 10ms.

**CIP OBJECTS**

The following CIP objects are supported:

- 01h Identity
- 02h Message Router
- 04h Assembly
- 06h Connection Manager
- 64h Vendor Specific
- F5h TCP/IP Interface
- F6h Ethernet Link

**Class Attributes**

Each object has the following class attributes.

Attribute	Description	Type	Access
1	Revision	UINT	Get
2	Maximum Instance	UINT	Get
3	Number of Instances	UINT	Get
4	Optional Attribute List	UINT	Get
5	Optional Service List	UINT	Get
6	Maximum Class Attribute	UINT	Get
7	Maximum Instance Attribute	UINT	Get
<b>Supported Service Code</b>		<b>Service Name</b>	
0Eh		Get_Attribute_Single	

**Identity Object – 01h**

Instance	Attribute	Description	Type	Value	Access
1	1	Vendor	UINT	0004h (Parker Hannifin)	Get
	2	Device Type	UINT	002Bh (Generic)	Get
	3	Product Code	UINT	306	Get
	4	Product Revision	UINT	02C02h (minor/major)	Get
	5	Status	WORD	0	Get
	6	Serial Number	UDINT	Last 4 bytes of inverter MAC address	Get
	7	Product Name	SHORT STRING	“Parker AC30 Drive”	Get
<b>Supported Service Code</b>		<b>Service Name</b>			
01h		Get_Attribute_All			
05h		Reset - Type 0 and Type 1 Reset are supported <sup>1</sup>			
0Eh		Get_Attribute_Single			

1. Both Type 0 and Type 1 Reset will restart DHCP if enabled.

## A-27 Fieldbuses

### **Message Router Object – 02h**

Instance	Attribute	Description	Type	Value	Access
1	1	Object List	-	-	Get
	2	Total connections	UINT	-	Get
	3	Active connections	UINT	-	Get
Supported Service Code			Service Name		
01h			Get_Attribute_All		
0Eh			Get_Attribute_Single		

### **Assembly Object – 04h**

Instance	Attribute	Description	Type	Value	Access
100	3	Input	USINT[500]	Parameter mapped values	Get
150	3	Output	USINT[496]	Parameter mapped values	Get/Set
Supported Service Code			Service Name		
0Eh			Get_Attribute_Single		
10h			Set_Attribute_Single		

### **Connection manager – 06h**

There are no attributes for the Connection Manager.

**TCP/IP Interface Object – F5h**

Instance	Attribute	Description	Type	Value	Access
1	1	Status	UINT	0 – Interface Configuration not configured 1 – Interface Configuration comes from DHCP 2 – Interface Configuration comes from non-CIP settings	Get
	2	Configuration capability	DWORD	Bit 2 – DHCP capable (1) Bit 5 – non-CIP setting capable (1)	Get
	3	Configuration control	DWORD	- If DHCP is disabled then writing a value of 0 is allowed - If DHCP is enabled then writing a value is 2 is allowed	Get/Set
	4	Physical Link Object Structure of: Path Size Path	UINT Array of WORD	2 20F6h 2401h	Get
	5	Interface Configuration Structure of: IP Address Network Address Gateway Address Name Server Name Server 2 Domain Server Size Domain Name	UDINT UDINT UDINT UDINT UDINT UINT STRING	Inverter IP address Inverter network mask Inverter gateway address 0 0 Returns the Domain Name if DHCP is enabled and the DHCP server has provided it.	Get
	6	Host Name Structure of: Size Host Name	UINT STRING	If DHCP is enabled and bound, returns the Host Name if the DHCP server has provided it, otherwise returns the default Host Name derived from the AC30 MAC address.	Get
	13	Encap TMO	UINT	Inactivity TMO seconds. On Type 1 Reset this value will revert to a value of 120.	Get/Set
<b>Supported Service Code</b>			<b>Service Name</b>		
01h			Get_Attribute_All		
0Eh			Get_Attribute_Single		
10h			Set_Attribute_Single		



## A-29 Fieldbuses

### Ethernet Link Object – F6h

Instance	Attribute	Description	Type	Value	Access
1 2	1	Interface Speed	UDINT	10 or 100	Get
	2	Interface Flags	DWORD	Link status	Get
	3	Physical address	USINT[6]	MAC address	Get
	10	Interface label	SHORT STRING	“Port 1” or “Port 2”	Get
	11	Interface capability Structure of: Capability bits Speed/duplex array count	DWORD USINT	Auto-negotiation and MDIX supported (6) 0	Get
Supported Service Code			Service Name		
01h			Get_Attribute_All		
0Eh			Get_Attribute_Single		

### Vendor Specific Object – 64h

The vendor specific object allows explicit access to AC30 parameters, including string parameters but excluding string arrays.

Instance	Attribute	Description	Type	Access
PNO	1	Parameter Name	SHORT STRING	Get
	2	CIP data type <sup>1</sup>	USINT	Get
	3	Number of parameter elements <sup>2</sup>	USINT	Get
	4	Parameter qualifier Bit 0: Gettable Bit 1: Settable	BYTE	Get
	5	Parameter value	<i>Depends on parameter</i>	Get/Set
	6	Parameter min value	<i>Depends on parameter</i>	Get
	7	Parameter max value	<i>Depends on parameter</i>	Get
Supported Service Code			Service Name	
01h			Get_Attribute_All	
0Eh			Get_Attribute_Single	

1. Equivalent CIP data types – Volume 1 CIP Specification, Chapter 5A 14.2.1.2

2. For a standard parameter the number of elements will be 1, for a parameter array it will be the number elements in the array, and for a string parameter it will be the maximum number of characters.

**PARAMETER SUMMARY**

The following parameters are relevant to the EtherNet/IP adapter.

Parameter Name	No.	Path	Default	Range	Writable
<b>EtherNet IP Enable</b>	3128	Setup::Communications::Base EtherNet IP Parameters::Base Comms::EtherNet IP Adapter	FALSE	FALSE TRUE	CONFIG
EtherNet/IP adapter parameter. Enables the built-in EtherNet/IP adapter.					
<b>EtherNet IP Trip</b>	3129	Setup::Communications::Base EtherNet IP Parameters::Base Comms::EtherNet IP Adapter	LOSS OF CONNECTION	0: DISABLED 1: LOSS OF CONNECTION	CONFIG
EtherNet/IP adapter parameter. Enables the EtherNet/IP trip on loss of connection. <b>Enumerated values:</b> 0: DISABLED - the trip is disabled 1: LOSS OF CONNECTION - the inverter will trip on the loss of all Class 1 connections					
<b>EtherNet IP State</b>	3130	Monitor::Communications::Base EtherNet IP Parameters::Base Comms::EtherNet IP Adapter	SETUP	0: SETUP 1: NW_INIT 2: WAITING TO CONNECT 3: CONNECTION IDLE 4: CONNECTION ACTIVE 5: ERROR 6, 7: <i>Reserved</i> 8: NONE	NEVER
EtherNet/IP adapter parameter. Diagnostic indicating the state of the EtherNet/IP adapter. <b>Enumerated values:</b> 0: SETUP - EtherNet/IP adapter enabled – the inverter is in the configuration state 1: NW_INIT - network initialization 2: WAITING TO CONNECT - waiting for a Class 1 connection 3: CONNECTION IDLE - Class 1 connection made with scanner in Idle mode 4: CONNECTION ACTIVE - Class 1 connection made with scanner in Run mode 5: ERROR - configuration error 8: NONE - EtherNet/IP adapter disabled					

# A-31 Fieldbuses

Parameter Name	No.	Path	Default	Range	Writable
<b>EtherNet IP Diag</b>	3131	Monitor::Communications::Base EtherNet IP Parameters::Base Comms::EtherNet IP Adapter	NONE	0: NONE 1: INPUT MAPPING FAILED 2: OUTPUT MAPPING FAILED	NEVER
<p>EtherNet/IP adapter parameter. Diagnostic indicating if there is a configuration error.</p> <p><b>Enumerated Values:</b></p> <p>0: NONE - no configuration error 1: INPUT MAPPING FAILED - invalid input mapping 2: OUTPUT MAPPING FAILED - invalid output mapping</p>					
<b>Input Mapping</b>	3000	Setup::Communications::Base EtherNet IP Parameters::Base Comms::Fieldbus Mapping	0627 0681 0000 ...	0000 Maximum parameter number	NEVER
<p>EtherNet/IP adapter parameter. List of PNOs for the built-in fieldbus input parameter mapping.</p>					
<b>Output Mapping</b>	3064	Setup::Communications::Base EtherNet IP Parameters::Base Comms::Fieldbus Mapping	0661 0395 0000 ...	0000 Maximum parameter number	NEVER
<p>EtherNet/IP adapter parameter. List of PNOs for the built-in fieldbus output parameter mapping.</p>					

## B-1 Sequencing Logic

# Appendix B: Sequencing Logic

## Drive State Machine

### DS402


The sequencing of the inverter is based on the DS402 / DriveCOM / IEC 61800-7 standard as used by most industrial fieldbuses. This allows it to be easily controlled and monitored by a PLC using the standards' Control Word and Status Word.

### SEQUENCING STATE

The sequencing state of the unit is indicated by an enumerated value given by the **0678 Sequencing State** parameter.


Value	DS402 Sequencing State	Description
0	NOT READY TO SWITCH ON	Not ready to switch on. The drive is initialising or being configured.
1	SWITCH ON DISABLED	The Drive will not accept a switch on command
2	READY TO SWITCH ON	The Drive will accept a switch on command.
3	SWITCHED ON	The Drive will accept an Operation Enable (Run or Jog) command. - Power stage of the Drive is ready to operate. - Voltage has not yet been applied to the motor terminals.
4	OPERATIONAL ENABLED	Normal operational state of the drive. This state includes Running, Jogging, Stopping (Disabling Operation) and Shutting Down (Switching Off). - Voltage applied to the motor terminals.
5	QUICKSTOP ACTIVE	Emergency stop (Fast stop) is active
6	FAULT REACTION ACTIVE	The Drive is processing a trip event
7	FAULTED	The Drive is tripped awaiting trip reset

SEQUENCING DIAGRAM

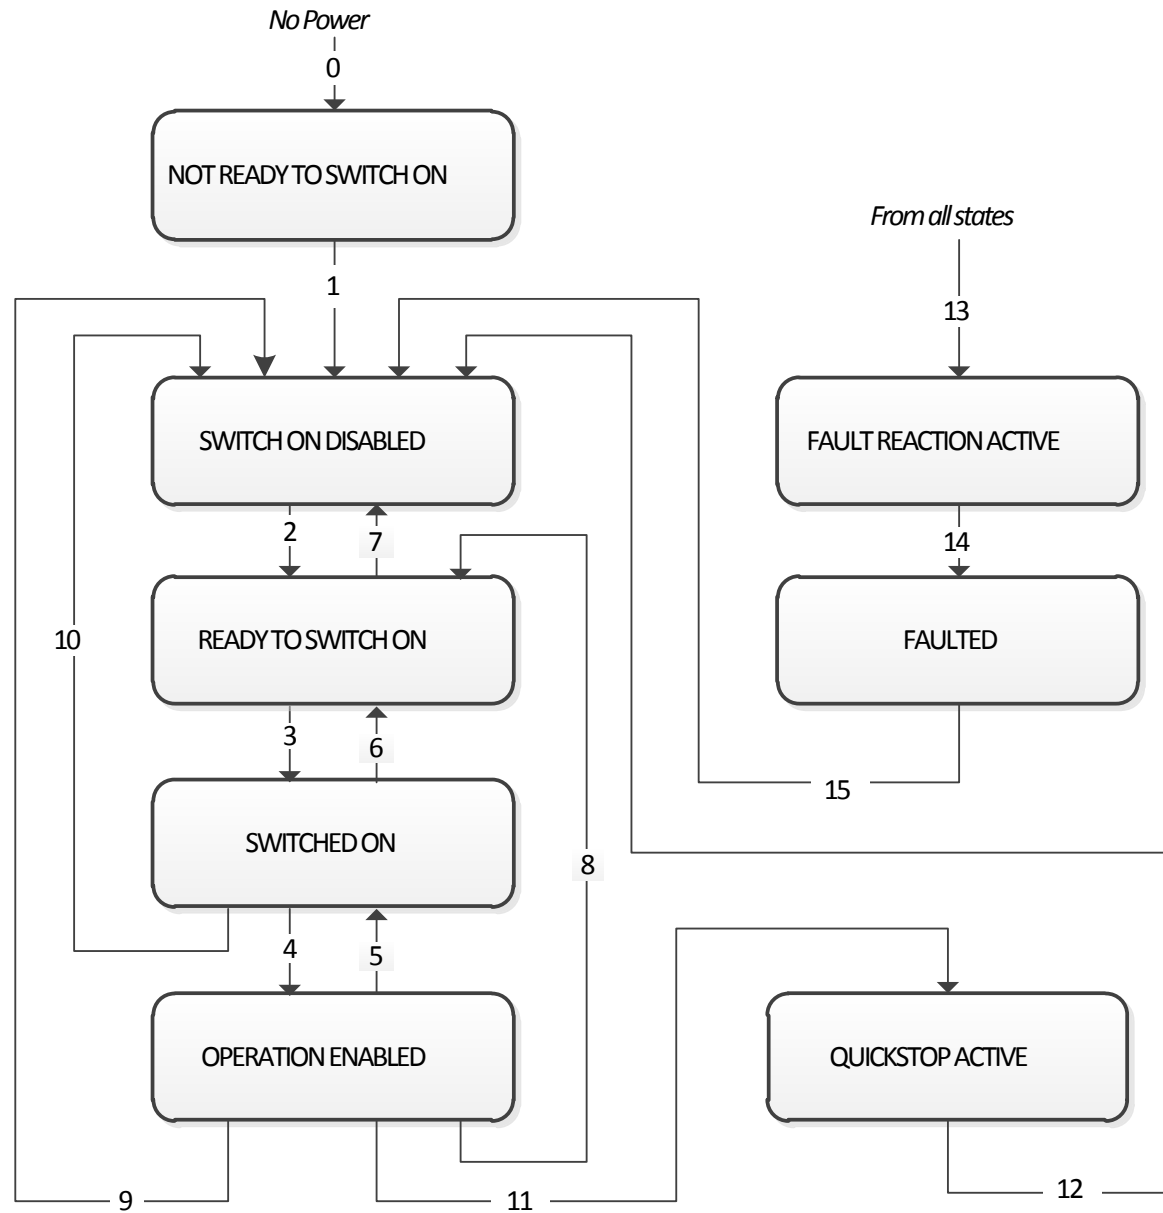

## B-3 Sequencing Logic

The OPERATION ENABLED state is the normal operation state of the Drive. In this state the Reference Ramp is active, generating a Speed Demand. Sub-states and allowed transitions are shown below. Note – the RUNNING sub-state also includes JOGGING.

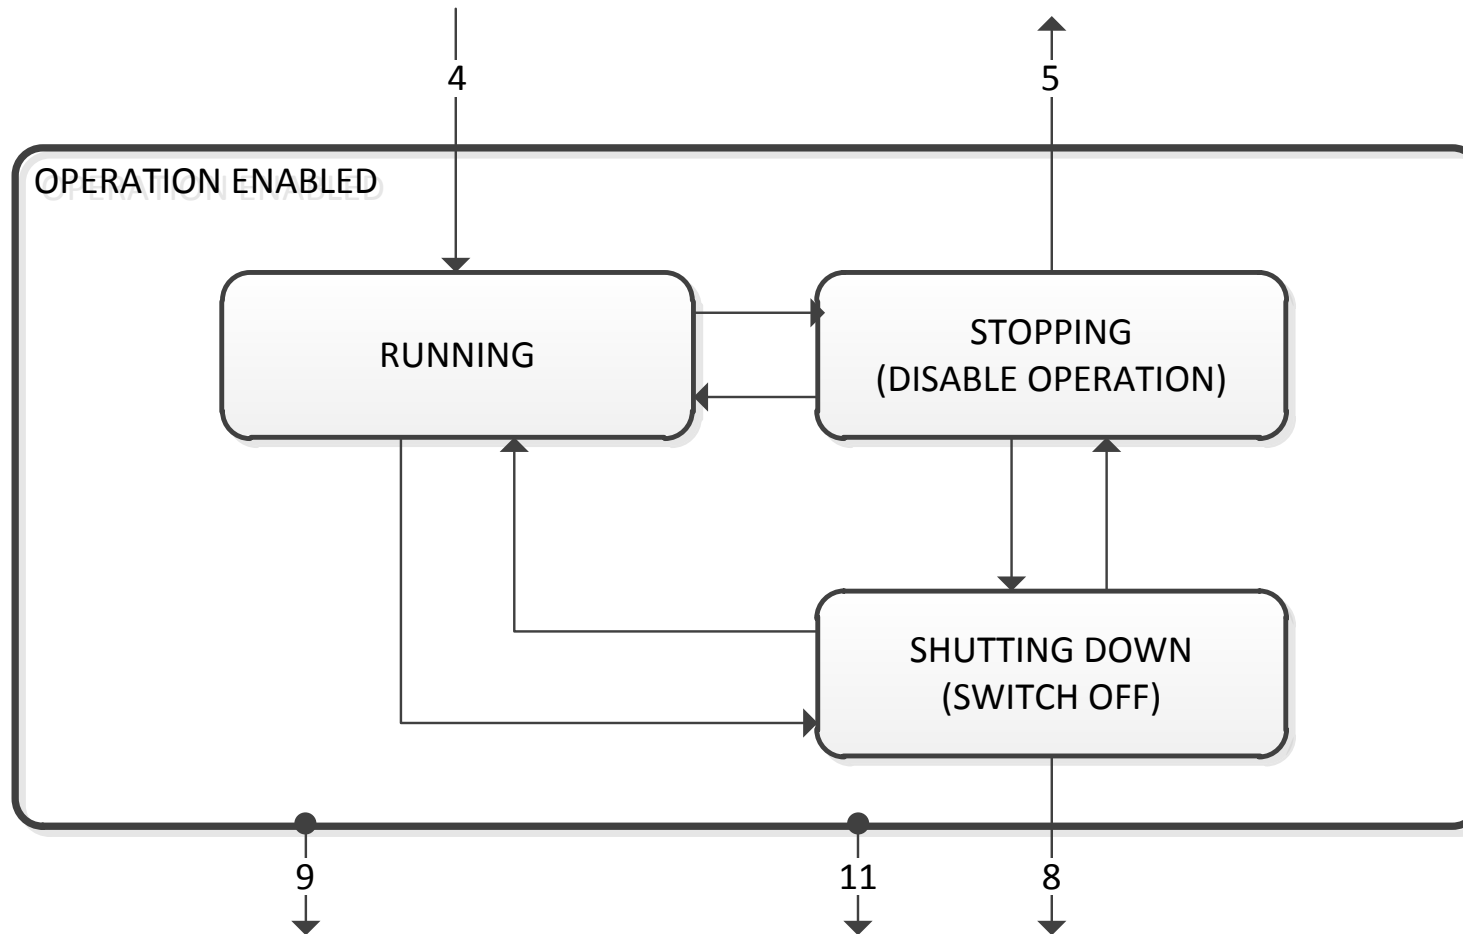

### STATE TRANSITIONS

State transitions are caused by internal events in the Drive or external commands via the Control Word. The transition numbers below relate to those on the Sequence Diagram.

**Transition 0: No Power to NOT READY TO SWITCH ON**

Power has been applied to the control electronics of the drive.

**Transition 1: NOT READY TO SWITCH ON to SWITCH ON DISABLED**

Automatic transition when initialisation has been completed and application has been loaded.

**Transition 2: SWITCH ON DISABLED to READY TO SWITCH ON**

Shutdown command received from control device or local signal.

**Transition 3: READY TO SWITCH ON to SWITCHED ON**

Switch On command received from control device or local signal.

**Transition 4: SWITCHED ON to OPERATION ENABLED**

Enable Operation (Run Forward, Run Reverse or Jog) command received from control device or local signal.

**Transition 5: OPERATION ENABLED to SWITCHED ON**

Disable Operation (Stop) command received from control device or local signal and Disabling (Stopping) function completed.

**Transition 6: SWITCHED ON to READY TO SWITCH ON**

Shutdown command received from control device or local signal.

**Transition 7: READY TO SWITCH ON to SWITCH ON DISABLED**

Quick Stop or Disable Voltage command received from control device or local signal.

**Transition 8: OPERATION ENABLED to READY TO SWITCH ON**

Shutdown command received from control device or local signal and Shutdown function completed.

**Transition 9: OPERATION ENABLED to SWITCH ON DISABLED**

Disable Voltage command received from control device or local signal.

**Transition 10: SWITCHED ON to SWITCH ON DISABLED**

Disable Voltage or Quick Stop command received from control device or local signal.

**Transition 11: OPERATION ENABLED to QUICKSTOP ACTIVE**

Quick Stop command received from control device or local signal.

**Transition 12: OPERATION ENABLED to QUICKSTOP ACTIVE**

Automatic transition when the Quick Stop function is completed or Disable Voltage command received.

**Transition 13: any state to FAULT REACTION ACTIVE**

Fault (Trip) occurred.

**Transition 14: FAULT REACTION ACTIVE to FAULT**

Automatic transition when Fault Reaction function completed or Disable Voltage command received.

**Transition 15: FAULT to SWITCH ON DISABLED**

Fault Reset command received from control device or local signal and there are no active faults.

## B-5 Sequencing Logic

### CONTROL WORD

The commands that request a change in sequencer state are received via the Control Word. The current value is given by **0644 Control Word**. This is a read-only parameter which is updated from a source depending on the selected sequencing control channel. The sources available are COMMS, APP and LOCAL.

If COMMS is selected, the value will be taken from **0627 Comms Control Word**. This will normally be written to over either the Fieldbus interface or built-in Ethernet Modbus TCP. The Not Quickstop, Enable Voltage and Switch On bits are ANDed with **0610 App Control Word**. The External Fault is ORed with the **0610 App Control Word**.

If APP is selected, the value will be taken from **0610 App Control Word**. This will normally be written to by the loaded application which is responsible for routing the control signals from Digital Input terminals.

If LOCAL is selected, the value will be written to by the GKP with the Not Quickstop, Enable Voltage, External Fault and Switch On bits from **0610 App Control Word**.

Bit	Name	Description
0	Switch On	OFF1 = 1 to switch on
1	Enable Voltage	OFF2 = 0 to coast stop
2	Not Quickstop	OFF3 = 0 to emergency stop
3	Enable Operation	1 = Run
4	Enable Ramp Output	=0 to set ramp output to zero <i>Not implemented, See note below</i>
5	Enable Ramp	=0 to hold ramp <i>Not implemented, See note below</i>
6	Enable Ramp Input	=0 to set ramp input to zero <i>Not implemented, See note below</i>
7	Reset Fault	Reset trips on 0 to 1 transition
8	External Fault	1 = External (Application) trip active
9		<i>unused</i>
10	Use Comms Control	1 = Use <b>0627 Comms Control Word</b> as the Control Word source for sequencing
11	Use Comms Reference	1 = Use <b>0681 Comms Reference</b> as the Reference source
12	Use Jog Reference	1 = Run using <b>0501 Jog Setpoint</b> when Enable Operation = 1
13	Reverse Direction	1 = Run in reverse direction when Enable Operation = 1
14	Auto Initialise	1 = Allow SWITCH ON DISABLED to READY TO SWITCH ON transition regardless of bit 0 (Switch On)
15	Event Triggered OP	1 = Rising-edge of Enable Operation required for SWITCHED ON to OPERATION ENABLED transition Setting "Event Triggered OP" to 0 could cause the motor to start unexpectedly.



Note – bits 4, 5, 6 must be set (= 1) to allow the ramp control feature to be added in the future.



Example Comms Control Words (hexadecimal):

CC77 STOP (Normal) or go to SWITCHED ON state  
 CC7F RUN  
 CC7B QUICKSTOP  
 CC7D COAST STOP  
 CCF0 FAULT RESET

## STATUS WORD

The Status Word provides the detailed status of the sequencer. Regardless of the source of the Control Word, this is always available as **0661 Status Word**.

Bit	Name	Description
0	Ready To Switch On	Drive initialised and not in Configuration mode
1	Switched On	Drive in SWITCHED ON or OPERATION ENABLED state
2	Operation Enabled	Running (or stopping)
3	Faulted	Unacknowledged fault present
4	Voltage Enabled	Line supply present
5	Quickstop Inactive	= 0 when reacting to a Quickstop request
6	Switch On Disabled	Drive in SWITCH ON DISABLED state
7		<i>unused</i>
8		<i>unused</i>
9	Control From Comms	Using <b>0627 Comms Control Word</b> as the Control Word source
10		<i>unused</i>
11		<i>unused</i>
12	Jog Operation	Using Jog Reference or will use Jog Reference when Operation Enabled
13	Reverse Operation	Running backwards or will run backward when Operation Enabled
14	Reference From Comms	Using <b>0681 Comms Reference</b> as the Reference source
15	Stopping	Operation Enable command removed or Quickstop active

# C-1 Compliance

## Appendix C: Compliance

This Chapter outlines the compliance requirements and product certifications.

	<b>Attention</b> – hot surfaces		<b>DANGER</b> Risk of electric shock		<b>Caution</b> Refer to documentation		<b>Earth/Ground</b> Protective Conductor Terminal
---	---------------------------------	---	---	---	--	---	--

### APPLICABLE STANDARDS

EN 61800-3:2004	Adjustable speed electrical power drive systems – Part 3: EMC requirements and specific test methods.
EN 61800-5-1:2007	Adjustable speed electrical power drive systems – Part 5-1: Safety requirements – Electrical, thermal and energy.
EN 61800-5-2:2007	Adjustable speed electrical power drive systems – Part 5-2: Safety requirements – Functional.
EN ISO 13849-1:2008	Safety of machinery – Safety-related parts of control systems – Part 1: General principles for design.
EN 60204-1:2006	Safety of machinery – Electrical equipment of machines – Part 1: General requirements.
EN 61000-3-2:2006	Electromagnetic Compatibility (EMC) - Part 3-2: Limits – Limits for harmonic current emissions (equipment input current up to and including 16A per phase).
EN62061:2005 Annex E	Safety of machinery – Functional safety of safety related electrical, electronic and programmable electronic control systems
IEC 61000-3-12:2011	Electromagnetic compatibility (EMC) – Part 3-12: Limits – Limits for harmonic currents produced by equipment connected to public low-voltage systems with input currents >16A and ≤75A per phase.
EN 61000-6-2:2007	Electromagnetic compatibility (EMC) – Part 6-2: General standards – Immunity for industrial environments.
EN 61000-6-3:2007	Electromagnetic compatibility (EMC) – Part 6-3: General standards - Emission standard for residential, commercial and light-industrial environments.
EN 61000-6-4:2007	Electromagnetic compatibility (EMC) – Part 6-4: General standards – Emission standard for residential, commercial and light-industrial environments.
UL508C	Standard for Safety, Power Conversion Equipment, third edition.
CSA 22.2 No.14-10	Industrial Control Equipment.
NFPA	National Electrical Code, National Fire Protection Agency, Part 70.

## EUROPEAN COMPLIANCE

### CE MARKING



The CE marking is placed upon the product by Parker Hannifin Manufacturing Ltd to facilitate its free movement within the European Economic Area (EEA). The CE marking provides a presumption of conformity to all applicable directives. Harmonized standards are used to demonstrate compliance with the essential requirements laid down in those relevant directives.

It must be remembered that there is no guarantee that combinations of compliant components will result in a compliant system. This means that compliance to harmonised standards will have to be demonstrated for the system as a whole to ensure compliance with the directive.



Local wiring regulations always take precedence. Where there are any conflicts between regulatory standards for example earthing requirements for electromagnetic compatibility, safety shall always take precedence.

### **Low Voltage Directive**

When installed in accordance with this manual the product will comply with the low voltage directive 2014/35/EU.



#### Protective Earth (PE) Connections

Only one protective earth  conductor is permitted at each protective earth terminal contacting point.

The product requires a protective earth conductor cross section of at least 10mm<sup>2</sup>, where this is not possible a second protective earth terminal provided on the VSD (Variable Speed Drive) shall be used. The second conductor should be independent but electrically in parallel.

### **EMC Directive**

When installed in accordance with this manual the product will comply with the electromagnetic compatibility directive 2014/30/EU.

The following information is provided to maximise the Electro Magnetic Compatibility (EMC) of VSDs and systems in their intended operating environment, by minimising their emissions and maximising their immunity.

## C-3 Compliance

### *Machinery Directive*



When installed in accordance with this manual the product will comply with the machinery directive 2006/42/EC. This product is classified under category 21 of annex IV as 'logic units to ensure safety functions'. All instructions, warnings and safety information can be found in Chapter 6.

This product is a component to be incorporated into machinery and may not be operated alone. The complete machinery or installation using this equipment may only be put into service when all safety considerations of the Directive are fully implemented. Particular reference should be made to EN60204-1 (Safety of Machinery - Electrical Equipment of Machines).

### EMC COMPLIANCE



**WARNING**

In a domestic environment, this product may cause radio interference, in which case supplementary mitigation measures may be required.

#### **Definitions**

##### **Category C1**

PDS (Power Drive System) of rated voltage less than 1000V, intended for use in the first environment

##### **Category C2**

PDS (Power Drive System) of rated voltage less than 1000V, which is neither a plug in device nor a movable device and, when used in the first environment, is intended to be installed and commissioned only by a professional.

*Note: A professional is a person or an organisation having necessary skills in installing and/or commissioning power drive systems, including their EMC aspects.*

##### **Category C3**

PDS (Power Drive System) of rated voltage less than 1000V, intended for use in the second environment and not intended for use in the first environment.

##### **Category C4**

PDS (Power Drive System) of rated voltage equal to or above 1000V, or rated current equal to or above 400A, or intended for use in complex systems in the second environment.

##### **First Environment**

Environment that include domestic premises, it also includes establishments directly connected without transformers to a low-voltage power supply network which supplies buildings used for domestic purposes.

*Note: Houses, apartments, commercial premises or offices in a residential building are examples of first environment locations.*

##### **Second Environment**

Environment that includes all establishments other than those directly connected to a low-voltage power supply network which supplies buildings used for domestic purposes.

*Note: Industrial areas, technical areas of any building fed from a dedicated transformer are examples of second environment locations.*

## EMC Standards Comparison

The standards are concerned with two types of emission

- Radiated**      Those in the band 30MHz – 1000MHz which radiate into the environment
- Conducted**    Those in the band 150kHz – 30MHz which are injected into the supply.

### RADIATED

The standards have common roots (CISPR 11 & CISPR14) so there is some commonality in the test levels applied in different environments.

#### Relationship Between Standards

Standards			Limits*
Product Specific	Generic		
EN 61800-3	EN61000-6-3	EN61000-6-4	
Category C1	Equivalent	Not applicable	30 – 230MHz 30dB(μV/m) 230 - 1000MHz 37dB(μV/m)
Category C2	Not applicable	Equivalent	30 – 230MHz 40dB(μV/m) 230 - 1000MHz 47dB(μV/m)
Category C3	These limits have no relationships with the generic standards.		30 – 230MHz 50dB(μV/m) 230 - 1000MHz 60dB(μV/m)

\*Adjusted for 10m

# C-5 Compliance

## CONDUCTED EMISSION

The various standards have common roots (CISPR 11 & CISPR14) so there is some commonality in the test levels applied in different standards and environments.

### Relationship Between Standards

Standards			Limits			
Product Specific	Generic		Frequency (MHz)	dB( $\mu$ V)		
EN 61800-3	EN61000-6-3	EN61000-6-4		Quasi Peak	Average	
Category C1	Equivalent	Not applicable	0.15 - 0.5	66 <i>decreasing with log of frequency to:</i>	56 <i>decreasing with log of frequency to:</i>	
			0.5 - 5.0	56	46	
			5.0 - 30.0	60	50	
Category C2	Not applicable	Equivalent	0.15 - 0.5	79	66	
			0.5 - 5.0	73	60	
			5.0 - 30.0	73	60	
Category C3	These limits have no relationships with the generic standards.		$I \leq 100A$	0.15 - 0.5	100	90
				0.5 - 5.0	86	76
			5.0 - 30.0	90	80	
				<i>decreasing with log of frequency to:</i>	<i>decreasing with log of frequency to:</i>	
				70	60	
			$I \geq 100A$	0.15 - 0.5	130	120
				0.5 - 5.0	125	115
				5.0 - 30.0	115	105

EMC COMPLIANCE (4KHZ)

Standard EN 61800-3		Frame D < 2.2kW	Frame D ≥ 2.2kW	Frame E	Frame F	
Conducted Emissions	AC Supported Inverters	Category C1	When fitted with the specified external filter & EMC filter kit, refer to C16-17 Maximum cable length 5 m	When fitted with the specified external filter & EMC filter kit, refer to C16-17 Maximum cable length 5 m	Refer to C-9 for the use of a suitable external filter with the required characteristics	Refer to C-10 for the use of a suitable external filter with the required characteristics
		Category C2	Product supplied as a component, a suitable external filter is required	When fitted with an EMC filter kit (internal filter, clamping bracket and ferrite), refer to C-17 Maximum cable length 10 m	When fitted with an EMC filter kit (internal filter, clamping bracket and ferrite), refer to C-17 Maximum cable length 10 m	When fitted with an EMC filter kit (internal filter, clamping bracket and ferrite), refer to C-18 Maximum cable length 10 m
		Category C3 Where $I_k \leq 100A$			When fitted with the specified external filter & EMC filter kit, refer to C17 Maximum cable length 25 m	When fitted with the specified external filter & EMC filter kit, refer to C18 Maximum cable length 25 m
	DC Supplied System	Category C3	When supplied by AC to DC full bridge and required line choke. Maximum cable length 50 m.			
Radiated Emissions	When mounted inside a cubicle with the required attenuation between:					
	Category C1	35-100MHz at 15dB		35-100MHz at 5dB	30-150MHz at 20dB	
	Category C2	35-100MHz at 5dB		No specific enclosure required	30-150MHz at 10dB	
Category C3	No specific enclosure required		No specific enclosure required	No specific enclosure required		
Cable Requirements	Power Supply	Cable Type	Unscreened			
		Segregation	From all other wiring (clean)			
		Length Limit	Unlimited			
	Motor Cable	Cable Type	Screened/Armoured			
		Segregation	From all other wiring (noisy)			
		Screen to Earth	Both ends			
		Output Choke	300 meters maximum			
	External Filter to Drive	Cable Type	Screened/Armoured			
		Segregation	From all other wiring (noisy)			
		Length Limit	0.3 meters			
		Screen to Earth	Both ends			
	Brake Resistor	Cable Type	Screened/Armoured			
		Segregation	From all other wiring (noisy)			
		Length Limit	25 meters			
		Screen to Earth	Both ends			
	Signal/Control	Cable Type	Screened			
Segregation		From all other wiring (sensitive)				
Length Limit		25 meters				
Screen to Earth		Drive end only				

8, 12, 16kHz will require extra filtering.

# C-7 Compliance

Standard EN 61800-3			Frame G	Frame H 45kW	Frame H 55kW & 75kW	Frame J 132kW	Frame K 250kW
Conducted Emissions	AC Supported Inverters	Category C1	Not suitable for use in this environment				
		Category C2	When fitted with an EMC filter kit (internal filter, clamping bracket and ferrite) Maximum cable length 10 m			When fitted with the specified external filter & EMC filter kit, refer to C17 Maximum cable length 25 m	Please contact Parker for more information
		Category C3 <i>Where I<sub>c</sub> ≤ 100A</i>	When fitted with an internal filter Maximum cable length 50 m		n/a		
		Category C3 <i>Where I<sub>c</sub> &gt; 100A</i>	n/a		When fitted with an internal filter Maximum cable length 50 m	Standard build Maximum cable length 50 m	
	DC Supplied System	Category C3	When supplied by AC to DC full bridge and required line choke. Maximum cable length 50 m.				Not applicable
Radiated Emissions			When mounted inside a cubicle with the required attenuation between:				
	Category C1		Not Applicable				
	Category C2		30-1000MHz at 10dB				
	Category C3		No specific enclosure required				
Cable Requirements	Power Supply	Cable Type	Unscreened				
		Segregation	From all other wiring (clean)				
		Length Limit	Unlimited				
	Motor Cable	Cable Type	Screened/Armoured				
		Segregation	From all other wiring (noisy)				
		Screen to Earth	Both ends				
		Output Choke	300 meters maximum				
	External Filter to Drive	Cable Type	Screened/Armoured				
		Segregation	From all other wiring (noisy)				
		Length Limit	0.3 meters				
		Screen to Earth	Both ends				
	Brake Resistor	Cable Type	Screened/Armoured				
		Segregation	From all other wiring (noisy)				
		Length Limit	25 meters				
		Screen to Earth	Both ends				
	Signal/Control	Cable Type	Screened				
Segregation		From all other wiring (sensitive)					
Length Limit		25 meters					
Screen to Earth		Drive end only					



**Radiated Emissions Profile**

EN61800-3 - Limits for electromagnetic radiation disturbance in the frequency band 30 MHz to 1000 MHz

Frequency band MHz	Category C1	Category C2
	Electric field strength component Quasi-peak dB( $\mu$ V/m)	Electric field strength component Quasi-peak dB( $\mu$ V/m)
$30 \leq f \leq 230$	30	40
$230 < f \leq 1\ 000$	37	47

NOTE: Measurement distance 10 m.


For category C1, if the field strength measurement at 10 m cannot be made because of high ambient noise levels or for other reasons, measurement may be made at 3 m. If the 3 m distance is used, the measurement result obtained shall be normalised to 10 m by subtracting 10 dB from the result. In this case, care should be taken to avoid near field effects, particularly when the PDS (Power Drive System) is not of an appropriately small size, and at frequencies near 30 MHz.

*When multiple drives are used 3dB attenuation per drive needs to be added.*


# C-9 Compliance

## Conducted Emissions Profile (AC Supplied Unfiltered Product)


**Frame D**

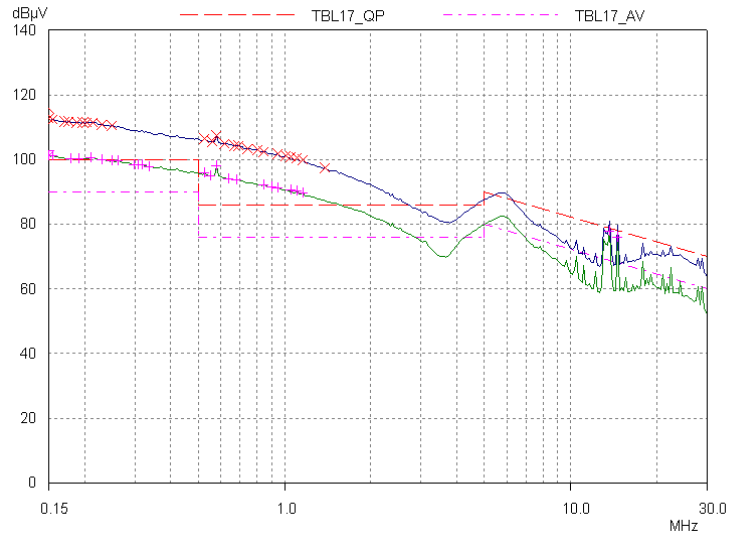


**Frame E**

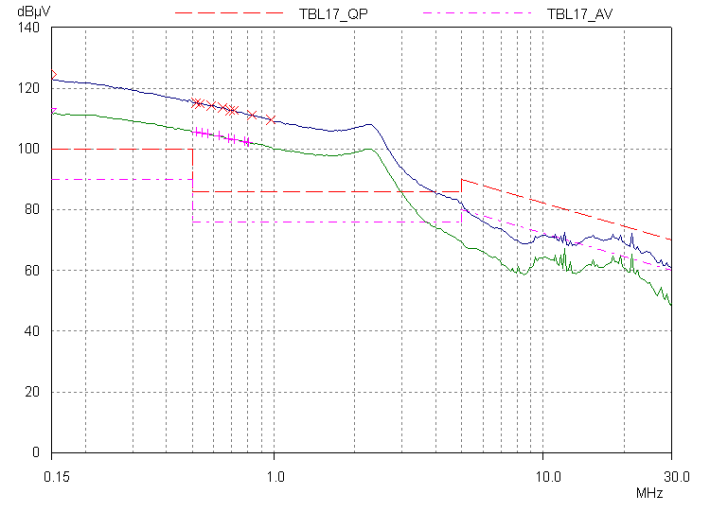


**Frame F**

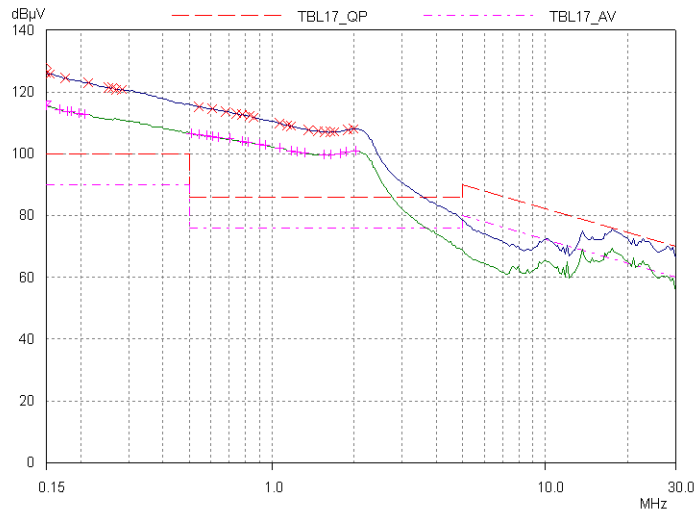


**Frame G**

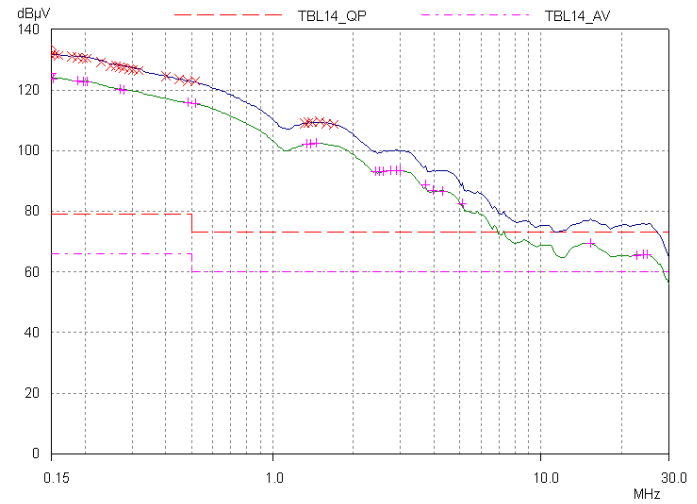


**Frame H**

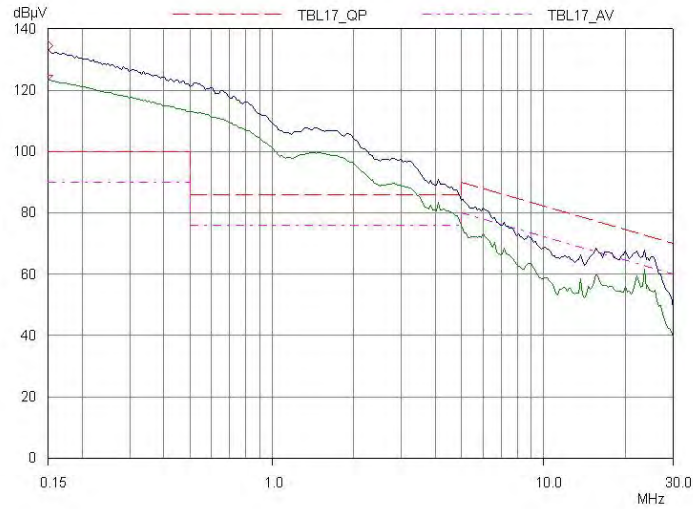


**Frame J**

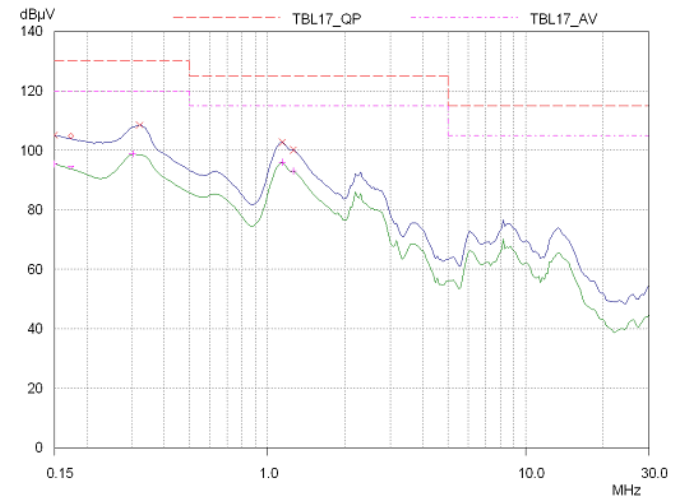

**Frame K**

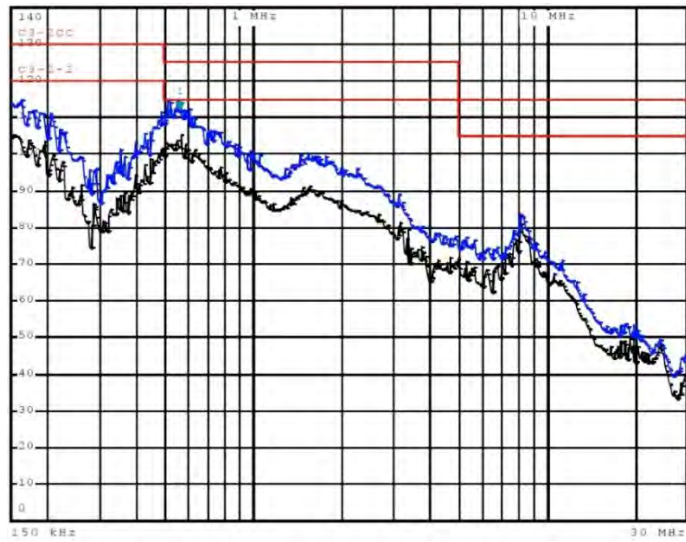

*Typical common d.c. bus system emissions, for reference (800uH a.c. choke + 890CS supplying 740-4D0012 + 740-4E0023) (Actual system emissions will depend on the details of the specific application.)*

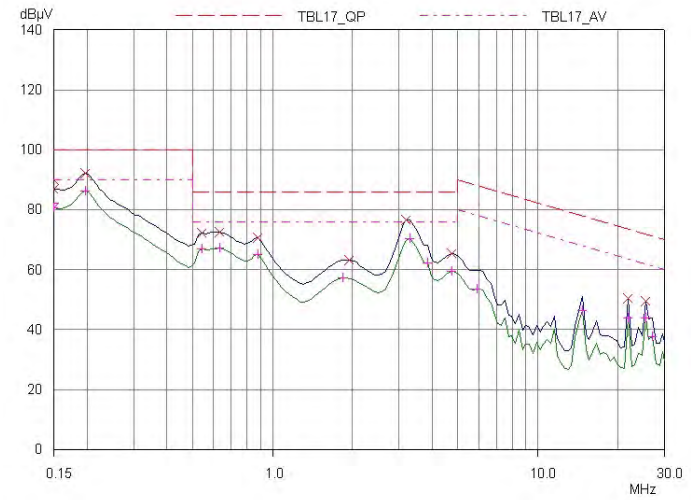

## EMC Installation Guidance

### PROTECTIVE EARTH (PE) CONNECTIONS



Local wiring regulations take precedence and may require the protective earth connection of the motor to be connected locally, i.e. not as specified in these instructions. This will not cause shielding problems because of the relatively high RF impedance of the local earth connection.


#### Earthing

A star-point earthing policy separates 'noisy' and 'clean' earths. Four separate earth bus bars (three are insulated from the mounting panel) connect to a single earth point (star point) near the incoming safety earth from the main supply. Flexible, large cross-section cable is used to ensure low HF impedance. Bus bars are arranged so that connection to the single earth point is as short as possible.

#### 1. 0V/Signal Grounding

The "0V/signal ground" is required to be separately earthed, for multiple products these terminals should be connected together at a single, local earthing point.

#### 2. Control/Signal and Encoder Cables

Control/signal and encoder cables, all analogue inputs, and communications require screening with the screen connected only at the VSD end. However, if high frequency noise is still a problem, earth the screen at the non-VSD end via a 0.1 $\mu$ F capacitor. Connect the screen (at the VSD end) to the VSD protective earth point  and not to the control board terminals.

#### 3. Clean Earth Busbar (insulated from the mounting panel)

Used as a reference point for all signal and control cabling. This may be further subdivided into an analog and a digital reference busbar, each separately connected to the star earthing point. The digital reference is also used for any 24V control.

#### 4. Dirty Earth Busbar (insulated from the mounting panel)

Used for all power earths, i.e. protective earth connection. It is also used as a reference for any 110 or 220V control used, and for the control transformer screen.

#### 5. Metal Work Earth Busbar

The back panel is used as this earth busbar, and should provide earthing points for all parts of the cubicle including panels and doors. This busbar is also used for power screened cables which terminate near to (10cm) or directly into a VSD- such as motor cables, braking choppers and their resistors, or between VSDs - refer to the appropriate product manual to identify these. Use U-clips to clamp the screened cables to the back panel to ensure optimum HF connection.

#### 6. Signal/Control Screen Earth Busbar (insulated from the mounting panel)

Used for signal/control screened cables which **do not** go directly to the VSD. Place this busbar as close as possible to the point of cable entry. 'U' clamp the screened cables to the busbar to ensure an optimum HF connection.

## MITIGATING RADIATED EMISSIONS

### Equipment Placement

Do not place magnetic/electric field sensitive equipment within 0.25 meters of the following parts of the VSD system:

- *Variable Speed Drive (VSD)*
- *EMC output filters*
- *Input or output chokes/transformers*
- *The cable between VSD and motor (even when screened/armored)*
- *Connections to external braking chopper and resistor (even when screened/armored)*
- *AC/DC brushed motors (due to commutation)*
- *DC link connections (even when screened/armored)*
- *Relays and contactors (even when suppressed)*

Emissions from individual components tend to be additive. To reduce the emissions:


- The equipment must be mounted in a metal cubicle. Refer to EMC Compliance Table on page C-6.
- The cubicle should be as free of openings as is practical. Vent systems suitable for EMC applications are available from cubicle vendors and should be used.

Radiated magnetic and electric fields inside the cubicle will be high and any components fitted inside must be sufficiently immune.

- All cable entry and exits (power, control, and communication) should use screened cable
- Earth screen at both ends connecting to the motor frame and cubicle.
- Use of screened/armored cable between VSD/cubicle and motor containing the motor protective earth (PE) connection is most important. If shielded cable is not available, lay unshielded motor cables in a metal conduit which will act as a shield. The conduit must be continuous with a direct electrical contact to the VSD and motor housing. If links are necessary, use **braid** with a minimum cross sectional area of 10mm<sup>2</sup>.

## C-13 Compliance

- Use 360° screen terminations.

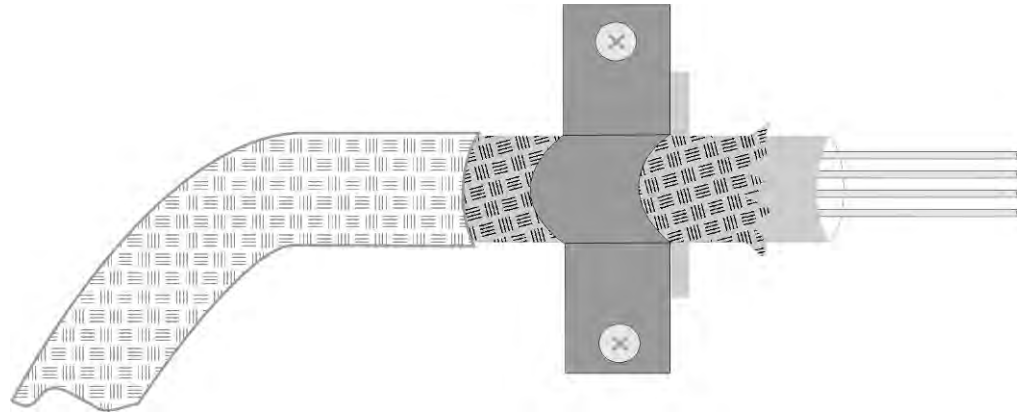

**Figure C-1 360 Degree Screened Connection (Motor)**

Some hazardous area installations may preclude direct earthing at both ends of the screen, in this case earth one end via a  $1\mu\text{F}$  50Vac capacitor, and the other as normal.

- Keep unshielded cable as short as possible inside the cubicle.
- Always maintain the integrity of the shield. If the cable is interrupted to insert contactors etc., re-connect the screen using the shortest possible route. Some motor gland boxes and conduit glands are made of plastic, if this is the case, then braid must be connected between the screen and the chassis. In addition at the motor end, ensure that the screen is electrically connected to the motor frame since some terminal boxes are insulated from the frame by gasket/paint.
- Keep the length of screen stripped-back as short as possible when making screen connections.

## CABLING REQUIREMENTS

Refer to "Recommended Wire Size" page C-39 for calculating wire sizes.

### Cable Routing

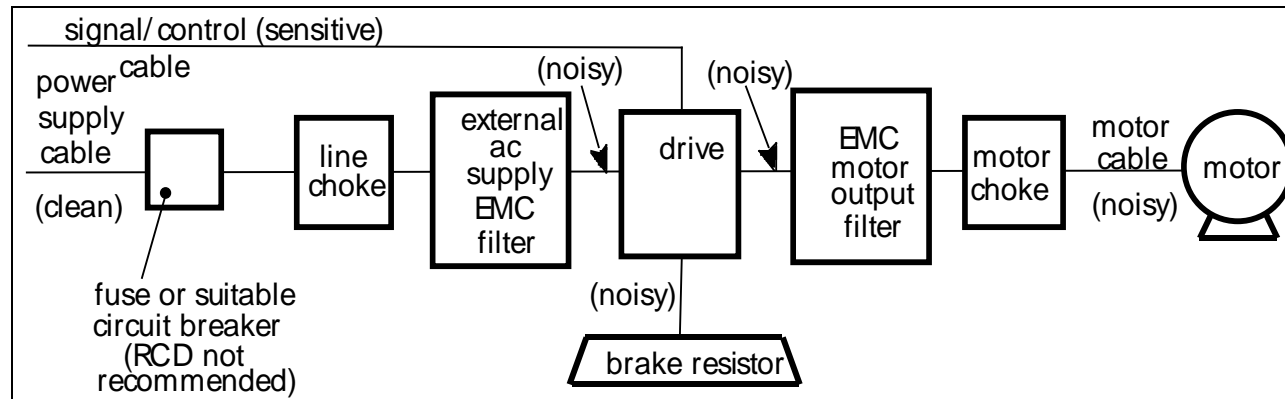


Figure C-2 Cabling Requirements

Cables are considered to be electrically *sensitive*, *clean* or *noisy*. You should already have planned your cable routes with respect to segregating these cables for EMC compliance.

- Use the shortest possible motor cable lengths.
- When connecting multiple motors to a single VSD, use a star junction point for motor cable connections. Use a metal box with entry and exit cable glands to maintain shield integrity.
- Keep electrically noisy and sensitive cables apart.
- Keep electrically noisy and sensitive parallel cable runs to a minimum. Separate parallel cable runs by at least 0.25 metres. For runs longer than 10 metres, separation should be increased proportionally. For example if the parallel runs were 50m, then the separation would be  $(50/10) \times 0.25\text{m} = 1.25\text{m}$ .
- Sensitive cables should cross noisy cables at 90°.
- Never run sensitive cables close or parallel to the motor, dc link and braking chopper circuit for any distance.
- Never run supply, dc link or motor cables in the same bundle as the signal/control and feedback cables, even if they are screened.
- Ensure EMC filter input and output cables are separately routed and do not couple across the filter.

## C-15 Compliance

### ***Increasing Motor Cable Length***

Because cable capacitance and hence conducted emissions increase with motor cable length, conformance to EMC limits is only guaranteed with the specified AC supply filter option up to a maximum cable length as specified in the Cabling Requirements for EMC Compliance C-17.

This maximum cable length can be improved using the specified external input or output filters.

Screened/armored cable has significant capacitance between the conductors and screen, which increases linearly with cable length (typically 200pF/m but varies with cable type and current rating).

Long cable lengths may have the following undesirable effects:

- Tripping on 'overcurrent' as the cable capacitance is charged and discharged at the switching frequency.
- Producing increased conducted emissions that degrade the performance of the EMC filter due to saturation.
- Causing RCDs (Residual Current Devices) to trip due to increased high frequency earth current.
- Producing increased heating inside the EMC ac supply filter from the increased conducted emissions.
- These effects can be overcome by adding chokes or output filters at the output of the VSD.



#### **WARNING**

**Ensure that all wiring is electrically isolated and cannot be made "live" unintentionally by other personnel.  
The drive is suitable for use with IT and TN supplies when fitted with an internal ac supply EMC filter. When used on a IT supply the filter efficiency is reduced resulting in only achieving Category C2 limits.**

### ***EMC Motor Output Filter***

This can help the drive achieve EMC and filter thermal requirements. It also ensures longer motor life by reducing the high voltage slew rate and overvoltage stresses. Mount the filter as close to the VSD as possible.

### ***Output Contactors***



Output contactors can be used, although we recommend that this type of operation is limited to emergency use only, or in a system where the drive can be inhibited before closing or opening this contactor.



**Cable Screening Bracket Kits**

Frame		Cable Screening Bracket Kit & Contents			
		Control Bracket	System Bracket	Power Terminal Bracket	C2 Ferrite Core
Frame D	LA501935U001	✓		✓	✓
Frame E	LA501935U002	✓		✓	✓
Frame F	LA501935U003	✓		✓	✓
Frame G	LA501935U004	✓		✓	
Frame H	LA501935U005	✓		✓	
Frame J	LA501935U006	✓		✓	
Frame K	n/a				
AC30D	LA501935U007	✓	✓		

**NOTE:** The addition of a cable screening bracket kit to frames D, E and F drive (only) will reduce emissions from Category C3 and C2.

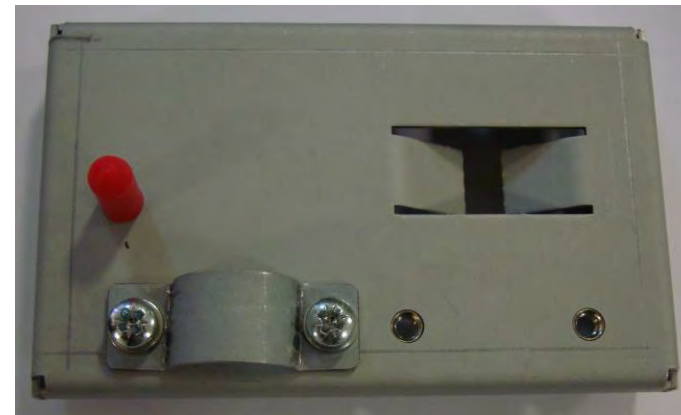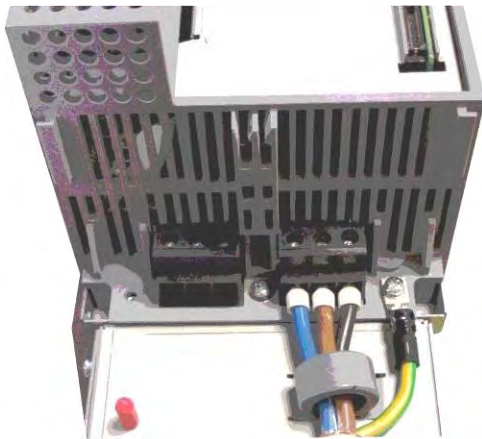

# C-17 Compliance

## External AC Supply EMC Filter



### WARNING

External filters are available for use with TN and IT supplies. When used on a IT supply the filter performance reduces from category C1 to Category C2. Please check for suitability on following page for External AC Supply (RFI) Filters.

Do not touch filter terminals or cabling for at least 3 minutes after removing the ac supply.





Mount the filter as close as possible to the drive.

### External Filters for (Frame D, E, F, H & J)

They are suitable for wall or cubicle mount, but the filter must be fitted with the appropriate gland box when wall mounted.

Filter Description	Filter Part Number	Terminal Block	Earth Terminal	Dimensions	Fixing Centres	Weight
<b>Frame D &amp; E</b>						
500V IT/TN	CO501894	10mm <sup>2</sup>	M6 Stud	272 x 74 x 161mm	258 x 60mm	2.7kg
<b>Frame F</b>						
500V IT/TN	CO501895	50mm <sup>2</sup>	M8 Stud	312 x 93 x 190mm	298 x 79mm	3.7kg
<b>Frame H</b>						
500V IT/TN	CO502672U150	70mm <sup>2</sup>	M10 Stud	320 x 126 x 212mm	298 x 112mm	5.2kg
<b>Frame J</b>						
500V IT/TN	CO50272U320	M10 Busbar	M10 Stud	268 x 186 x 77mm	170 x 90mm	4.4kg

**Frame D & E Filter Dimensions**

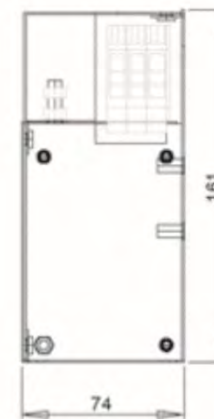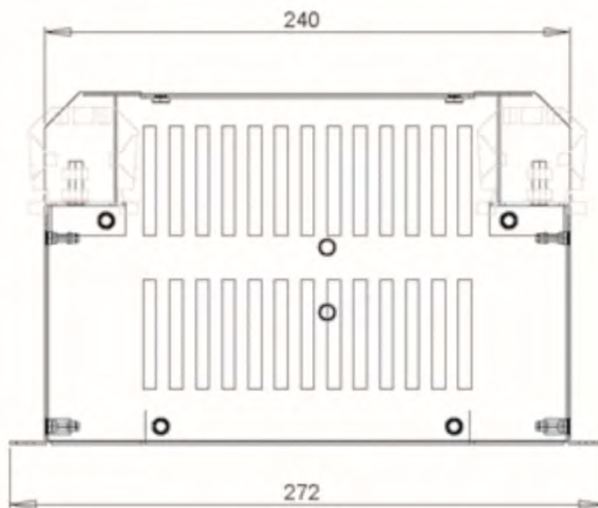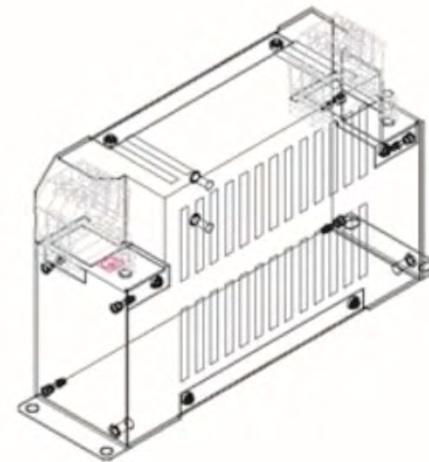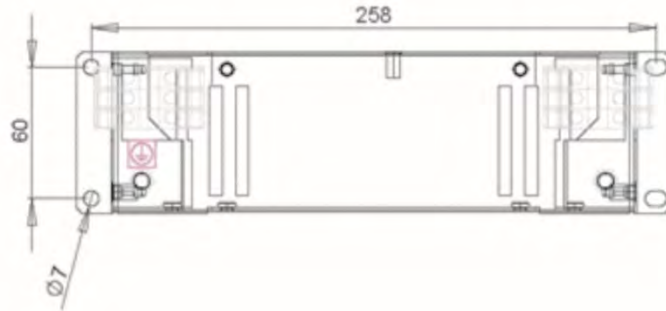



**SPECIFICATIONS**

VOLTAGE 500Vac  
 FREQUENCY 50/60Hz  
 CURRENT 36A @ 40°C  
 TEMPERATURE - 25 to 100°C  
 LEAKAGE CURRENT 81mA @ 500V 50Hz  
 HUMIDITY 90% RH (NON-CONDENSING)  
 VIBRATION 10-200Hz 1.8G  
 ELECTRIC STRENGTH 2250Vac/1min.  
 POWER DISSIPATION 16W  
 MASS 2.7kg  
 TERMINALS 10sq mm TERMINAL BLOCK  
 EARTH TERMINALS M6 STUD  
 FLANGE MOUNTING 4x M6




# C-19 Compliance

## Frame F

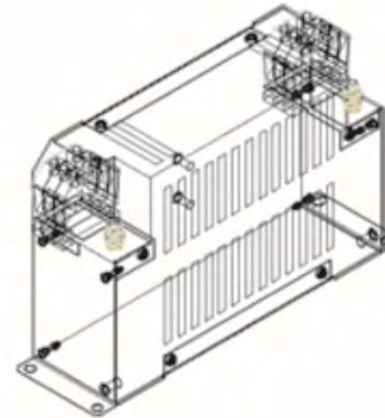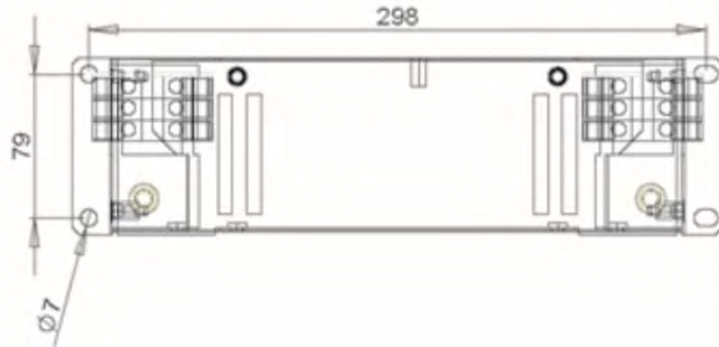





### SPECIFICATIONS

VOLTAGE 500Vac  
FREQUENCY 50/60Hz  
CURRENT 50A @ 40°C  
TEMPERATURE - 25 to 100°C  
LEAKAGE CURRENT 114mA @ 500V 50Hz  
HUMIDITY 90% RH (NON-CONDENSING)  
VIBRATION 10-200Hz 1.8G  
ELECTRIC STRENGTH 2500Vac/1min.  
POWER DISSIPATION 16W  
MASS 3.7kg  
TERMINALS 50sq mm TERMINAL BLOCK  
EARTH TERMINALS M8 STUD  
FLANGE MOUNTING 4x M6

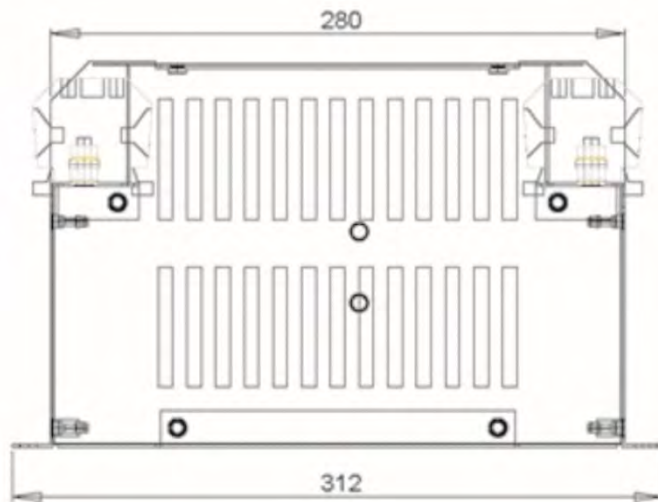

RoHS  
2002/95/EC  
Compliant

**Frame H**

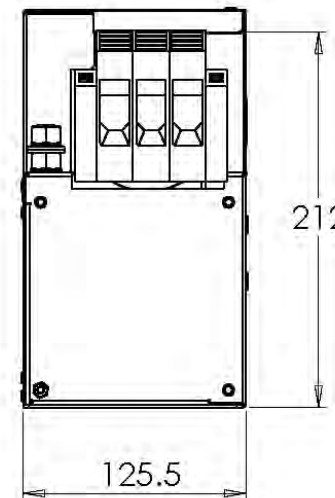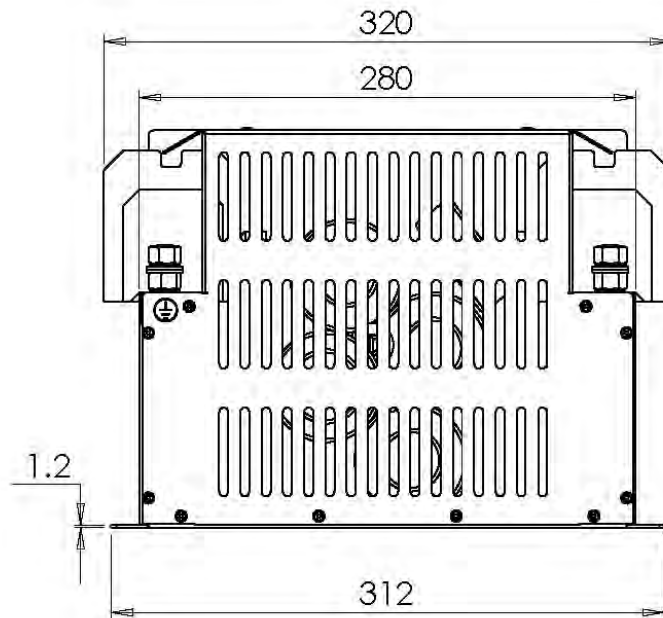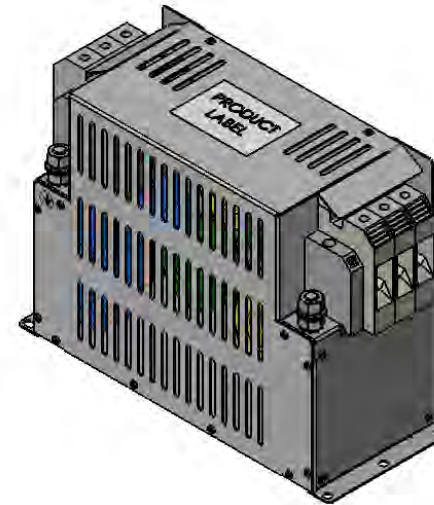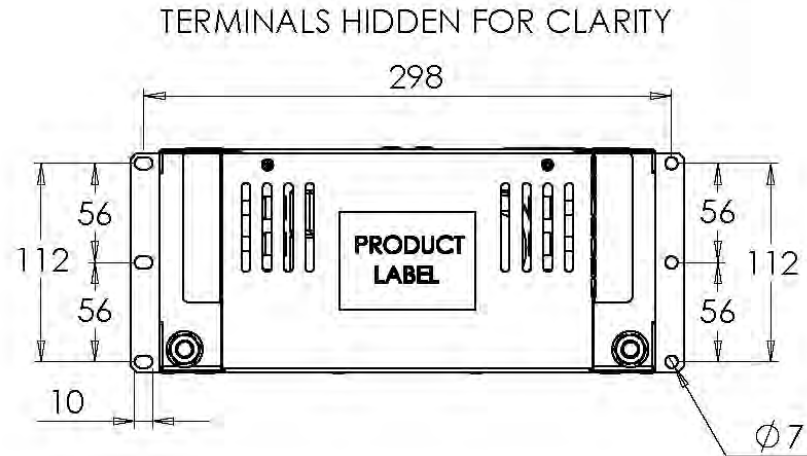

**SPECIFICATIONS**

VOLTAGE 500Vac  
 FREQUENCY 50/60Hz  
 CURRENT 150A @ 40°C  
 TEMPERATURE -25 TO 100°C  
 OPERATING LEAKAGE CURRENT 47.1mA  
 HUMIDITY 90% RH (NON-CONDENSING)  
 VIBRATION 10-200Hz 1.8G  
 ELECTRIC STRENGTH 2250Vac/1min.  
 POWER DISSIPATION 25W

**MECHANICAL**

ingress protection IP20  
 mass unpackaged 5.2kg  
 material enclosure 1.2mm ALU  
 mounting centres See Drawing  
 terminal connection 70mm<sup>2</sup>  
 terminal earthing M10x25mm

**ENVIRONMENT**

humidity 90% RH (non-condensing)  
 pollution class II  
 temperature -25-90°C  
 vibration 10-200Hz 1.8G


**STANDARDS**

EN60950 / EN50178 / UL1283

# C-21 Compliance

## Frame J

M4 blind nuts for terminal covers

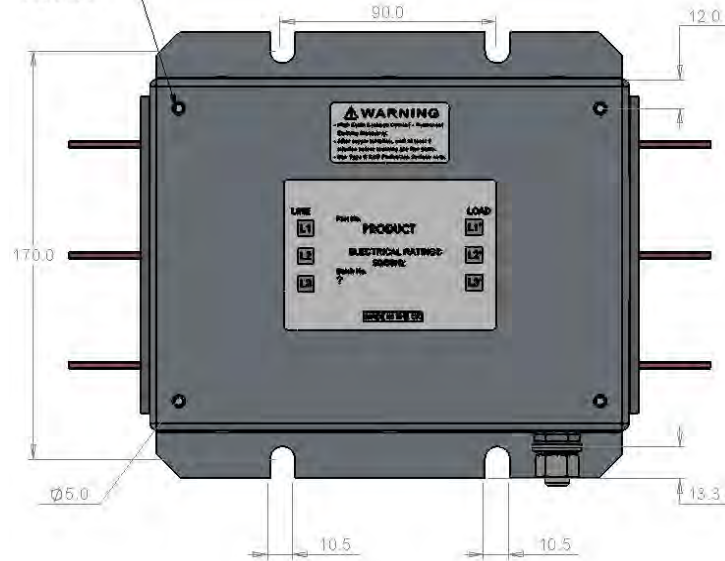

### ELECTRICAL

3P RFI Filter

current 320A (50°C)  
voltage 480V (+10%)

operating leakage current 40.5mA  
operating frequency 50/60Hz  
residual voltage (538V@5s, 0V@120s)  
resistance dc 0.11mR/ph (50°C)  
short circuit 18kA (200kA)  
voltage withstand 2.9kVdc  
watts loss 33.8W (50°C)

### MECHANICAL

busbar holes M10x20mm 30Nm  
earth stud M10x25mm 25Nm  
fixing slots M10 170x90mm 30Nm  
mass unpackaged 4.4kg  
material enclosure Al  
material busbars Cu  
material fixings SS

### OPTIONS



IP0 terminal covers  
IP20 terminal covers

### ENVIRONMENT

humidity 90% RH (non-condensing)  
pollution class II  
temperature -25 to +90°C  
vibration 5-500Hz 1.5G

### STANDARDS

EN60939-1 / EN61010-1  
EN60950 / EN50178  
UL1283 / UL508C / CSA C22.2 No.8

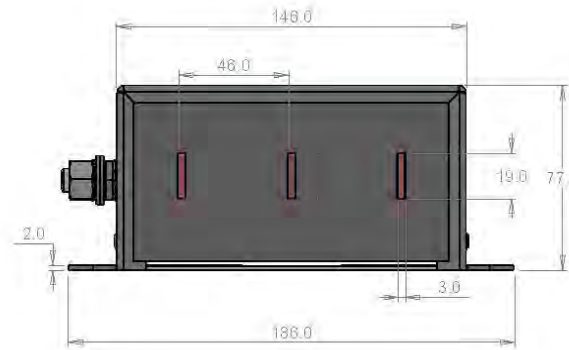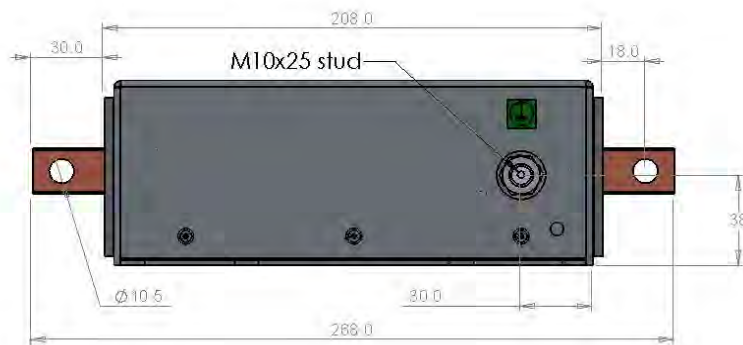

**Internal Filter Disconnection**


**Disconnection of the EMC filter invalidates the CE EMC Declaration, the product becomes a component for incorporation and the conformity of the complete equipment or installation becomes the responsibility of the installer.**

There are separate disconnects for the internal overvoltage suppressors to earth (identified by the label 'VDR') and the internal filter capacitors to earth (identified by the label 'YCAP').

DC supplied inverters do not have overvoltage suppressors to earth.

**Frame D**

To access the filter disconnect the top and bottom covers, as these need to be removed, then the Control Module, refer to Chapter 4 for removal information. Remove the highlighted screws shown below.

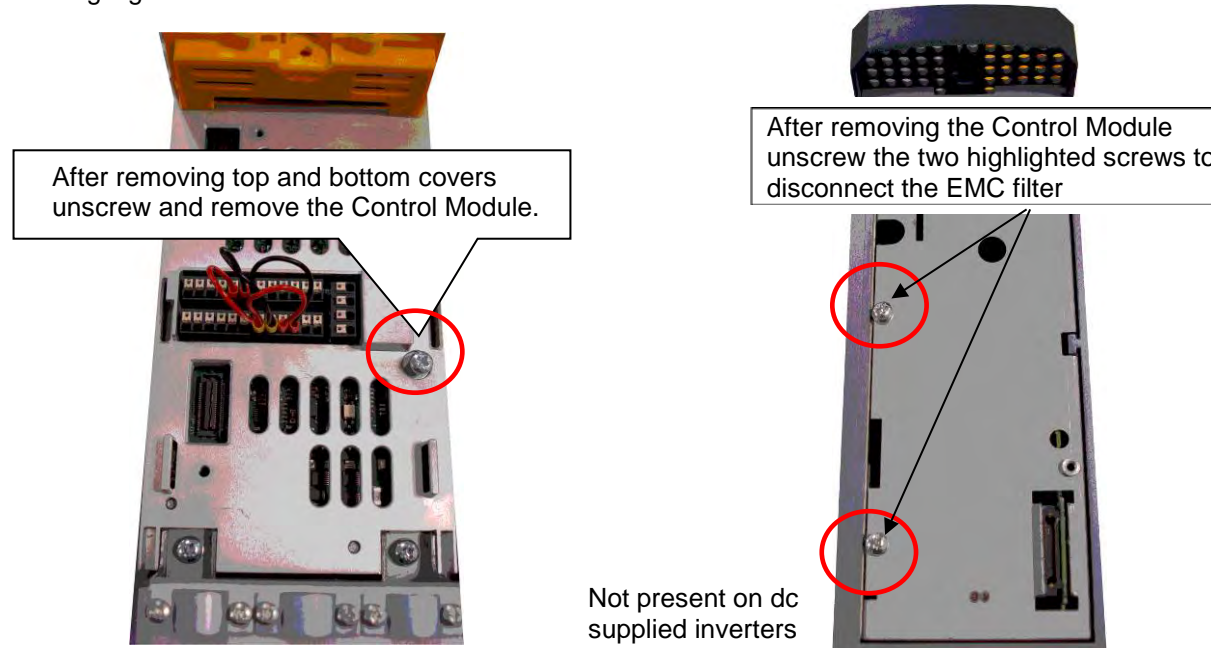



**The screw should only be removed once the supply has been disconnected and the residual energy has been discharged.**

**The product should never be powered or operated without the covers, the EMC filter disconnect will become live once the screw is removed.**

## C-23 Compliance

### **Frame E:**

To access the filter disconnect the top and bottom covers, as these need to be removed, refer to Chapter 4 for removal information. Remove the highlighted screws shown below.

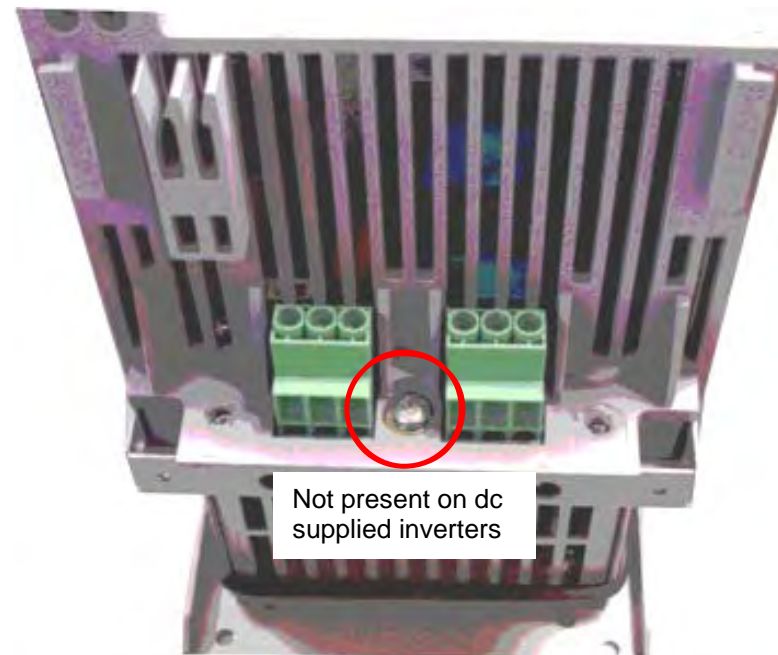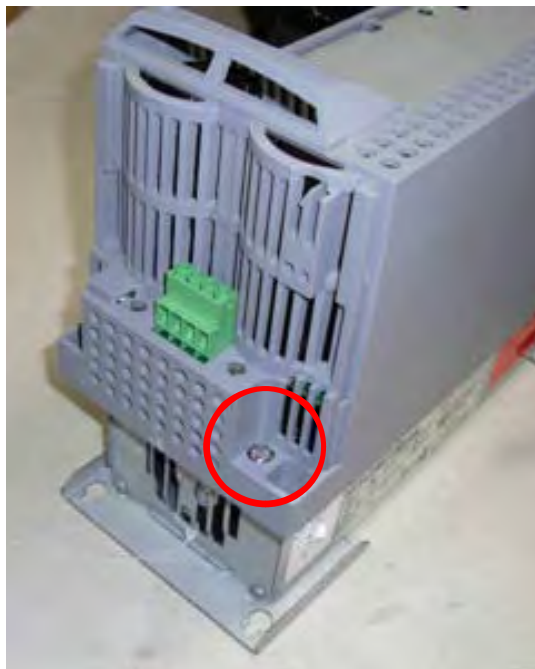


**The screw should only be removed once the supply has been disconnected and the residual energy has been discharged.**

**The product should never be powered or operated without the covers, the EMC filter disconnect will become live once the screw is removed.**



**Frame F:**

To access the filter disconnect the top and bottom covers, as these need to be removed, refer to Chapter 4 for removal information. Remove the highlighted screws shown below.

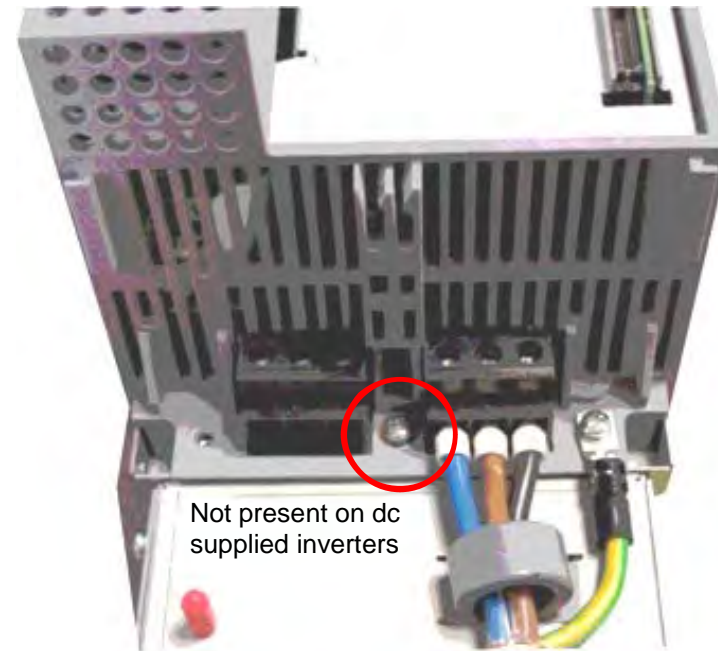

The screw should only be removed once the supply has been disconnected and the residual energy has been discharged.


The product should never be powered or operated without the covers, the EMC filter disconnect will become live once the screw is removed.

# C-25 Compliance


## Frame G:

To access the filter disconnects the top and bottom covers will need to be removed, refer to Chapter 4 for removal information. Remove the highlighted screws shown below. It is essential that all three 'YCAP' disconnect screws are in place, or all three are removed, do NOT remove some of the disconnect screws.

Top

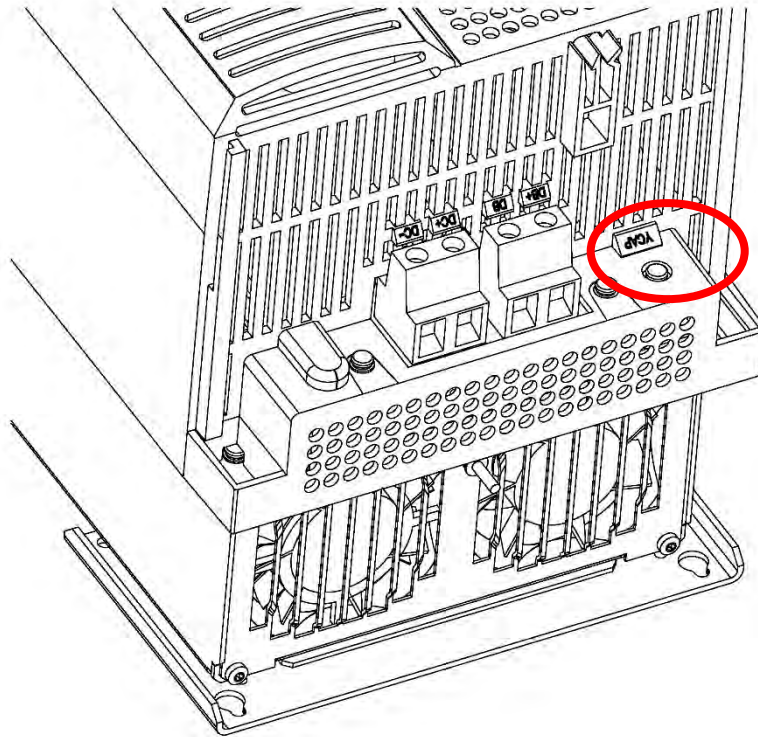

Bottom

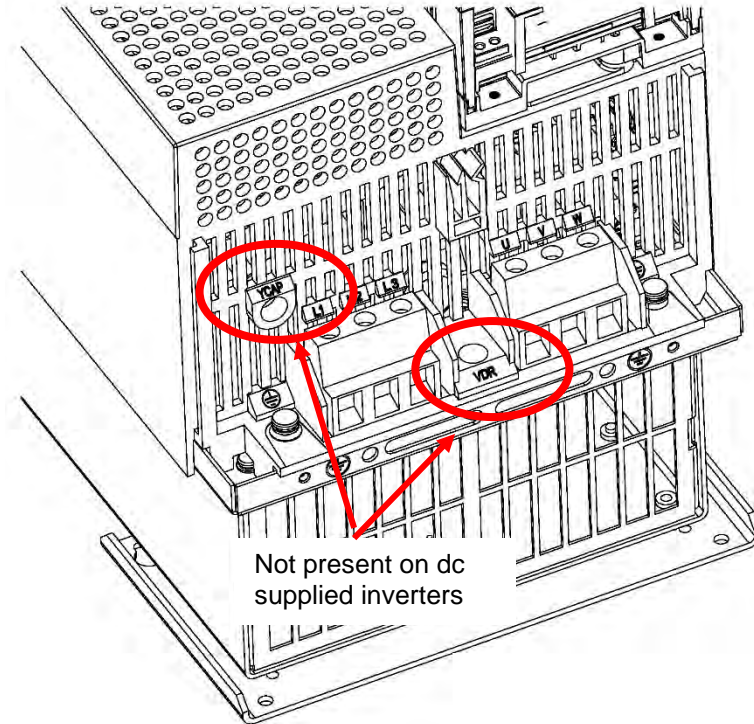


The screw should only be removed once the supply has been disconnected and the residual energy has been discharged.


The product should never be powered or operated without the covers, the EMC filter disconnect will become live once the screw is removed.

**Frame H:**

To access the filter disconnects the top and bottom covers will need to be removed, refer to Chapter 4 for removal information. Remove the highlighted screws shown below. It is essential that all three 'YCAP' disconnect screws are in place, or all three are removed, do NOT remove some of the disconnect screws.

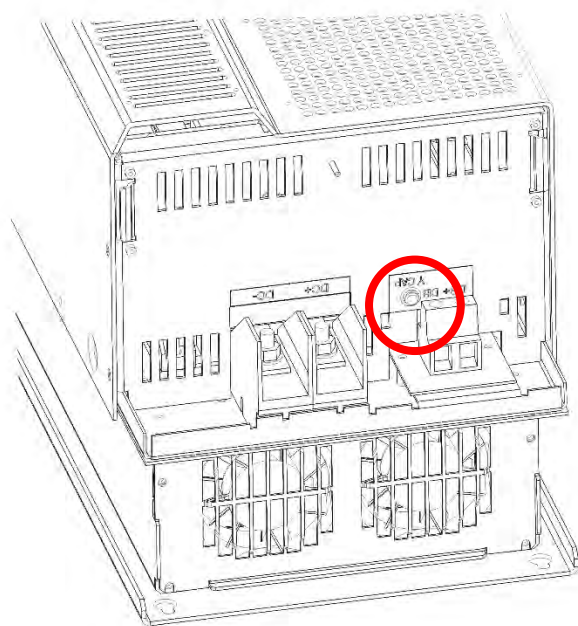

Top

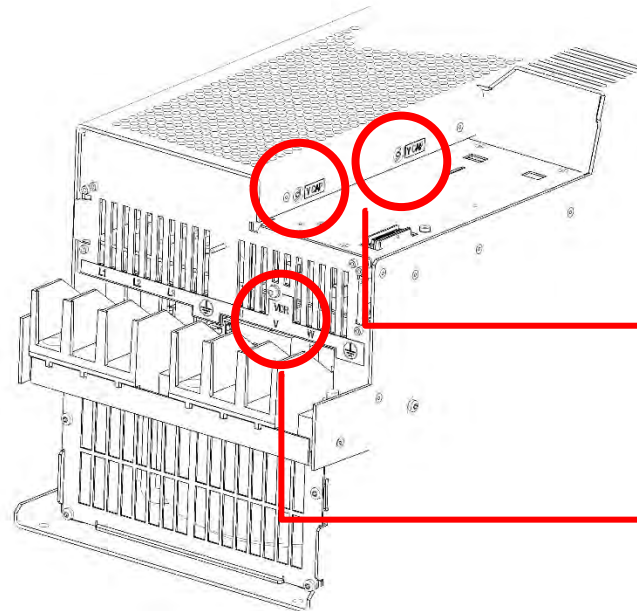

Bottom

**Not present on dc supplied inverters**  
 Note: AC supplied inverters first remove control module see page 4-18.

C2 Products - 2 x YCAP Disconnects

C3 Products - 1 x YCAP disconnect

Non-filtered products – no YCAP disconnects

1 x VDR Disconnect (bottom edge)





The screws should only be removed once the supply has been disconnected and the residual energy has been discharged.

“DANGER” – Risk of electric shock. Cover and cover screws must remain in place while drive is energised”, the EMC filter disconnect will become live once cover and cover screws are removed.

## C-27 Compliance

### Frame J:

To access the filter disconnects the top and bottom covers will need to be removed, refer to Chapter 4 for removal information. Remove the highlighted screws shown below. It is essential that both 'YCAP' disconnect screws are in place, or both are removed, do NOT remove only one of the disconnect screws.

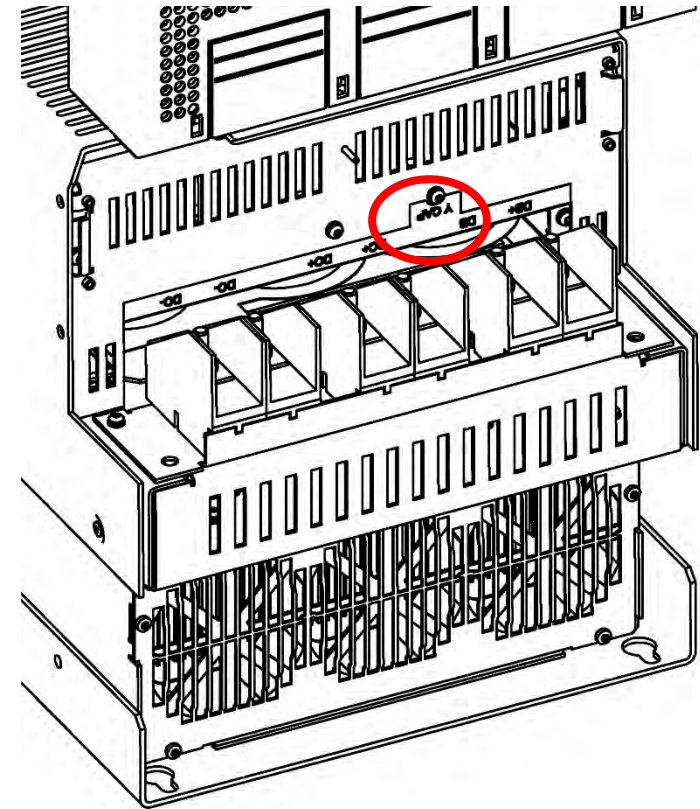
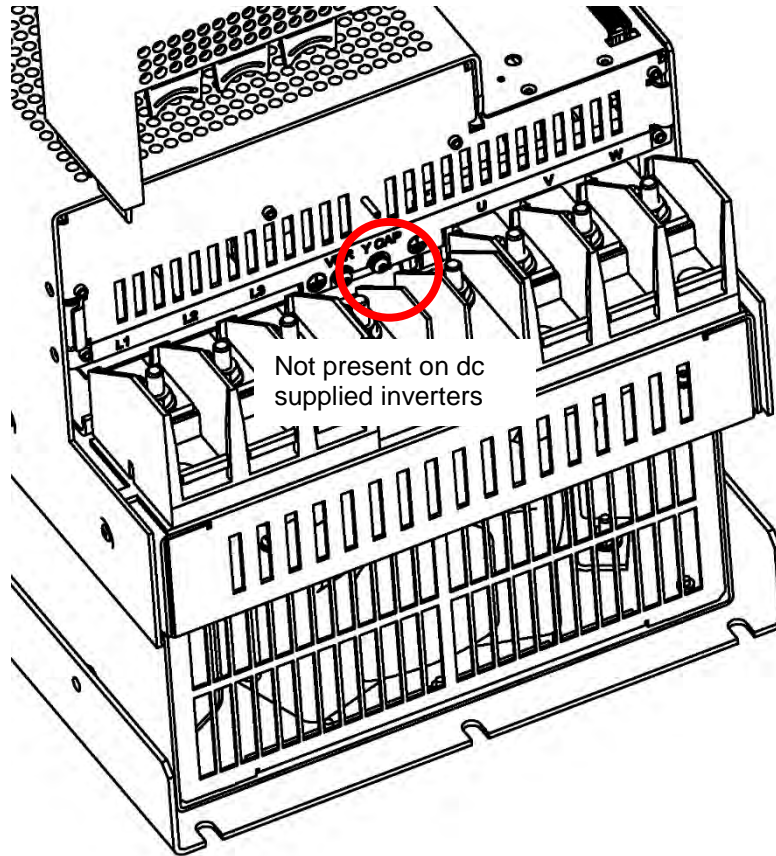


The screws should only be removed once the supply has been disconnected and the residual energy has been discharged.

“DANGER” – Risk of electric shock. Cover and cover screws must remain in place while drive is energised”, the EMC filter disconnect will become live once cover and cover screws are removed.

**Frame H & J**

In order to retain IP20 protection when connecting to the DC Bus terminals, only remove part of the upper terminal cover breakouts (see below), or provide suitable external guarding.

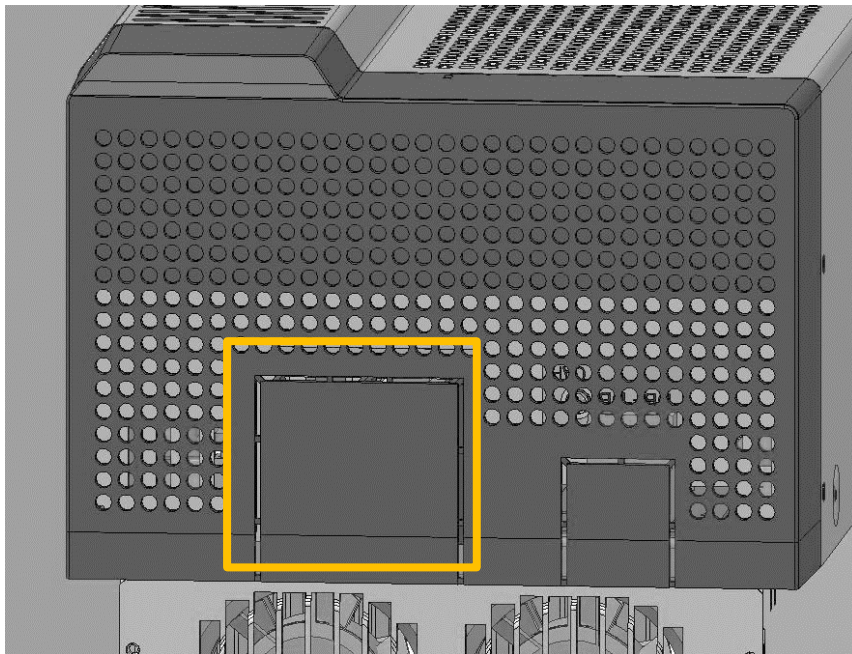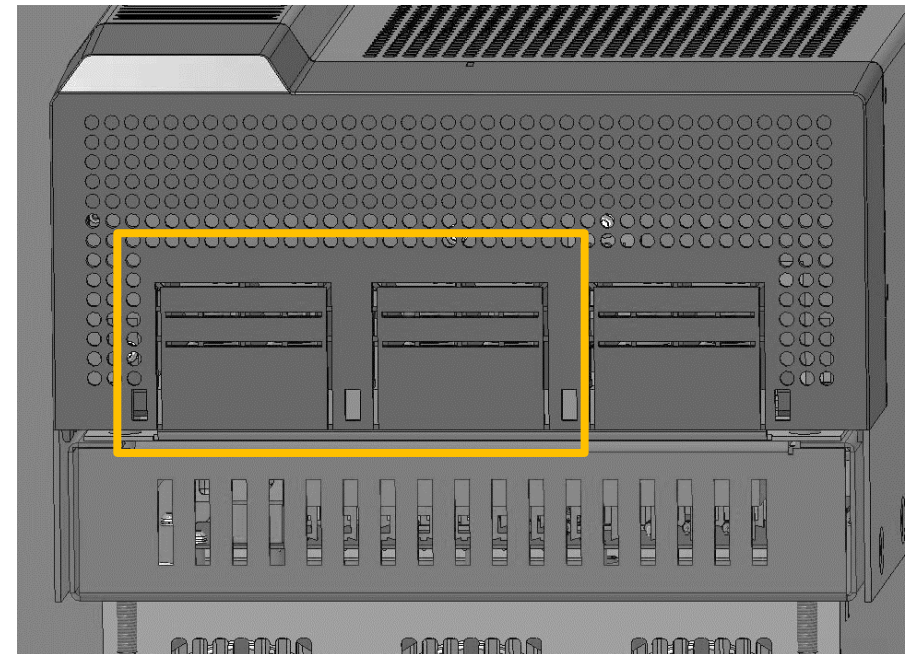
**Top Cover End View****Frame H****Frame J**

# C-29 Compliance

## Frame K:

To access the filter disconnect, first remove the VCM, refer to Chapter 4 for removal instructions. Remove the main cover by unscrewing its 4 fixings (shown on page 4-2), you can then remove the link connection, as highlighted below.

Link CN1 is the Y-CAP disconnect.  
Link CN2 is the VDR disconnect.

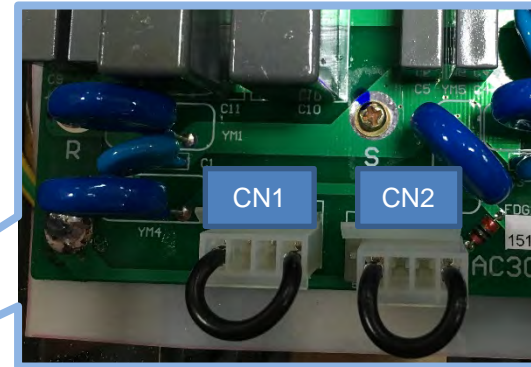

Note: When links are fitted they should be across pins 1 and 4 on the connectors, as shown above.



The main cover fixings should only be removed once the supply has been disconnected and the residual energy has been discharged.

“DANGER” – Risk of electric shock. Cover and cover screws must remain in place while drive is energised”, the EMC filter disconnect will become live once cover and cover screws are removed.

## Harmonic Information – AC Supplied Inverters

### Supply Harmonic Analysis (Frame D - Normal Duty)

Assumptions: Rsce = 120 at 400V where Q <sub>1n</sub> is the rated rms value of the fundamental voltage of the supply transformer. The results conform to IEC61000-3-12:2011.													
Fundamental Voltage (V)		400											
Drive Type		Three Phase											
Motor Power (kW)	1.1	1.5	2.2	3.0	4.0	5.5		1.1	1.5	2.2	3.0	4.0	5.5
Typical Motor Efficiency %	83	83	83	83	83	83		83	83	83	83	83	83
Harmonic No.	RMS Current (A)						Harmonic No.	RMS Current (A)					
1	1.943	2.653	3.946	5.335	7.078	9.694	25	0.064	0.085	0.107	0.140	0.184	0.253
3	0.000	0.000	0.000	0.001	0.001	0.001	27	0.000	0.000	0.000	0.000	0.000	0.000
5	1.479	2.037	2.376	2.573	2.852	3.313	29	0.047	0.067	0.097	0.132	0.175	0.233
7	1.106	1.537	1.636	1.646	1.673	1.745	31	0.037	0.051	0.079	0.107	0.142	0.193
9	0.000	0.000	0.000	0.000	0.000	0.000	33	0.000	0.000	0.000	0.000	0.000	0.000
11	0.406	0.584	0.327	0.446	0.594	0.814	35	0.034	0.046	0.076	0.103	0.135	0.176
13	0.204	0.291	0.354	0.386	0.445	0.558	37	0.030	0.042	0.063	0.086	0.114	0.151
15	0.000	0.000	0.000	0.000	0.000	0.000	39	0.000	0.000	0.000	0.000	0.000	0.000
17	0.153	0.205	0.190	0.259	0.345	0.472	40	0.000	0.000	0.000	0.000	0.000	0.000
19	0.126	0.176	0.167	0.203	0.257	0.349	Total RMS Current (A)	2.73	3.75	4.92	6.19	7.87	10.47
21	0.000	0.000	0.000	0.000	0.000	0.000	* THD (I) %	70.2	70.7	59.8	50.8	43.7	37.8
23	0.065	0.088	0.130	0.178	0.236	0.32							

\* (Total Harmonic Distortion)

# C-31 Compliance

## Supply Harmonic Analysis (Frame E - Normal Duty)

<p>Assumptions: R<sub>sce</sub> = 120 at 400V where Q<sub>1n</sub> is the rated rms value of the fundamental voltage of the supply transformer. The results conform to IEC61000-3-12:2011.</p>						$THD(V) \times 100 = \frac{\sqrt{\sum_{h=2}^{h=40} Q_{h^2}}}{Q_{1n}} \%$	
Fundamental Voltage (V)		400					
Drive Type		Three Phase					
Motor Power (kW)	7.5	11		7.5	11		
Typical Motor Efficiency %	83	86		83	86		
Harmonic No.	RMS Current (A)		Harmonic No.	RMS Current (A)			
1	12.801	18.703	25	0.306	0.484		
3	0.002	0.002	27	0.000	0.000		
5	5.284	6.467	29	0.295	0.448		
7	3.010	3.425	31	0.234	0.370		
9	0.000	0.000	33	0.000	0.000		
11	1.065	1.571	35	0.224	0.338		
13	0.769	1.078	37	0.185	0.290		
15	0.000	0.000	39	0.000	0.000		
17	0.604	0.909	40	0.000	0.000		
19	0.433	0.669	Total RMS Current (A)	14.27	20.24		
21	0.000	0.000	* THD (I)%	44.2	38.2		
23	0.406	0.616					

\* (Total Harmonic Distortion)



**Supply Harmonic Analysis (Frame F - Normal Duty)**

Assumptions: $R_{sce} \geq 120$ at 400V where $Q_{1n}$ is the rated rms value of the fundamental voltage of the supply transformer. The results conform to IEC61000-3-12:2011.							
$THD(V) \times 100 = \frac{\sqrt{\sum_{h=2}^{h=40} Q_{h^2}}}{Q_{1n}} \%$							
Fundamental Voltage (V)		400					
Drive Type		Three Phase					
Motor Power (kW)	15	18.5	22		15	18.5	22
Typical Motor Efficiency %	86	86	90		86	86	90
Harmonic No.	RMS Current (A)			Harmonic No.	RMS Current (A)		
1	25.833	30.954	36.635	25	0.644	0.803	0.948
3	0.006	0.005	0.013	27	0.000	0.000	0.000
5	9.512	10.517	12.777	29	0.608	0.743	0.878
7	5.147	5.527	6.832	31	0.493	0.613	0.724
9	0.001	0.000	0.001	33	0.000	0.000	0.000
11	2.177	2.618	3.085	35	0.459	0.560	0.664
13	1.494	1.781	2.121	37	0.388	0.480	0.566
15	0.001	0.000	0.001	39	0.000	0.000	0.000
17	1.244	1.513	1.784	40	0.000	0.000	0.001
19	0.896	1.110	1.310	Total RMS Current (A)	28.21	33.41	39.7
21	0.000	0.000	0.000	* THD (I) %	40.2	37.6	38.5
23	0.838	1.024	1.207				

\* (Total Harmonic Distortion)

# C-33 Compliance

## Supply Harmonic Analysis (Frame G - Normal Duty)

Assumptions: $R_{sce} \geq 120$ at 400V where $Q_{1n}$ is the rated rms value of the fundamental voltage of the supply transformer. The results conform to IEC61000-3-12:2011. $THD(V) \times 100 = \frac{\sqrt{\sum_{h=40}^{h=2} Q_{h^2}}}{Q_{1n}} \%$							
Fundamental Voltage (V)		400					
Drive Type		Three Phase					
Motor Power (kW)	22	30	37		22	30	37
Typical Motor Efficiency %	83	83	83		83	83	83
Harmonic No.	RMS Current (A)			Harmonic No.	RMS Current (A)		
1	36.282	49.540	60.995	25	0.930	1.225	1.583
3	0.003	0.001	0.005	27	0.001	0.000	0.000
5	12.848	18.710	20.966	29	0.869	1.162	1.468
7	6.908	10.274	11.144	31	0.712	0.940	1.211
9	0.000	0.000	0.001	33	0.001	0.001	0.001
11	3.072	4.174	5.167	35	0.657	0.882	1.110
13	2.108	2.893	3.533	37	0.557	0.739	0.946
15	0.000	0.000	0.000	39	0.001	0.001	0.001
17	1.769	2.382	2.987	40	0.000	0.000	0.000
19	1.288	1.712	2.188	Total RMS Current (A)	39.473	54.33	65.95
21	0.000	0.000	0.000	* THD (I) %	45.72	47.43	43.22
23	1.196	1.604	2.020				

\*(Total Harmonic Distortion)

**Supply Harmonic Analysis (Frame H - Normal Duty)**

Assumptions: $R_{sce} \geq 120$ at 400V where $Q_{1n}$ is the rated rms value of the fundamental voltage of the supply transformer. The results conform to IEC61000-3-12:2011.							
$THD(V) \times 100 = \frac{\sqrt{\sum_{h=2}^{h=40} Q_{h^2}}}{Q_{1n}} \%$							
Fundamental Voltage (V)		400					
Drive Type		Three Phase					
Motor Power (kW)	45	55	75		45	55	75
Typical Motor Efficiency %	90	90	90		90	90	90
Harmonic No.	RMS Current (A)			Harmonic No.	RMS Current (A)		
1	74.18	90.65	123.60	25	1.91	2.35	3.21
3	0.00	0.00	0.00	27	0.00	0.00	0.00
5	26.01	31.14	42.31	29	1.78	2.18	2.98
7	13.92	16.54	22.41	31	1.46	1.80	2.46
9	0.00	0.00	0.00	33	0.00	0.00	0.00
11	6.28	7.68	10.47	35	1.34	1.65	2.25
13	4.30	5.25	7.16	37	1.14	1.41	1.92
15	0.00	0.00	0.00	39	0.00	0.00	0.00
17	3.62	4.44	6.05	40	0.00	0.00	0.00
19	2.64	3.25	4.44	Total RMS Current (A)	80.43	98.00	133.56
21	0.00	0.00	0.00	* THD (I) %	41.89	41.08	40.93
23	2.45	3.01	4.10				

\* (Total Harmonic Distortion)

# C-35 Compliance

## Supply Harmonic Analysis (Frame J - Normal Duty)

Assumptions: $R_{sce} \geq 120$ at 400V where $Q_{1n}$ is the rated rms value of the fundamental voltage of the supply transformer. The results conform to IEC61000-3-12:2011. $THD(V) \times 100 = \sqrt{\frac{\sum_{h=40}^{h=2} Q_{h^2}}{Q_{1n}}} \%$							
Fundamental Voltage (V)		400					
Drive Type		Three Phase					
Motor Power (kW)	90	110	132		90	110	132
Typical Motor Efficiency %	92	92	92		92	92	92
Harmonic No.	RMS Current (A)			Harmonic No.	RMS Current (A)		
1	145	180.9	217.0	25	3.7	3.9	4.4
3	0.0	0.0	0.0	27	0.0	0.0	0.0
5	51.0	59.5	70.4	29	3.5	3.4	3.8
7	27.1	26.4	29.7	31	2.8	2.8	3.1
9	0.0	0.0	0.0	33	0.0	0.0	0.0
11	12.2	14.8	17.5	35	2.6	2.4	2.5
13	8.4	8.9	10.2	37	2.2	2.1	2.2
15	0.0	0.0	0.0	39	0.0	0.0	0.0
17	7.0	8.0	9.3	40	0.0	0.0	0.0
19	5.1	5.5	6.4	Total RMS Current (A)	157.5	193.4	231.4
21	0.0	0.0	0.0	* THD (I) %	41.9	37.89	37.06
23	4.8	5.1	5.8				

\*(Total Harmonic Distortion)

**Supply Harmonic Analysis (Frame K - Normal Duty)**

Assumptions: $R_{sce} \geq 120$ at 400V where $Q_{1n}$ is the rated rms value of the fundamental voltage of the supply transformer. The results conform to IEC61000-3-12:2011.							
$THD(V) \times 100 = \frac{\sqrt{\sum_{h=40}^{h=2} Q_{h^2}}}{Q_{1n}} \%$							
Fundamental Voltage (V)		400					
Drive Type		Three Phase					
Motor Power (kW)	160	200	250		160	200	250
Typical Motor Efficiency %	93	93	93		93	93	93
Harmonic No.	RMS Current (A)			Harmonic No.	RMS Current (A)		
1	255	318	397	25	7.0	9.0	11.6
3	0	0	0	27	0	0	0
5	76.7	88.5	103	29	6.3	8.0	10.1
7	39.0	44.9	53.0	31	5.3	6.8	8.7
9	0	0	0	33	0	0	0
11	21.9	27.4	34.4	35	4.7	6.0	7.6
13	14.9	19.1	24.5	37	4.1	5.3	6.7
15	0	0	0	39	0	0	0
17	12.8	16.2	20.5	40	0	0	0
19	9.6	12.5	16.1	Total RMS Current (A)	278	342	418
21	0	0	0	* THD (I) %	36.5	34.1	32.3
23	8.7	11.0	14.0				


\*(Total Harmonic Distortion)

# C-37 Compliance

## Requirements for North American and Canadian Compliance

### NORTH AMERICAN COMPLIANCE

This product is certified under the US governments Occupational Safety and Health Administration's (OSHA), Nationally Recognised Testing Laboratory (NRTL) program. An NRTL is a private third party organisation accredited by OSHA to test and certify products to national standards for compliance with North American requirements.

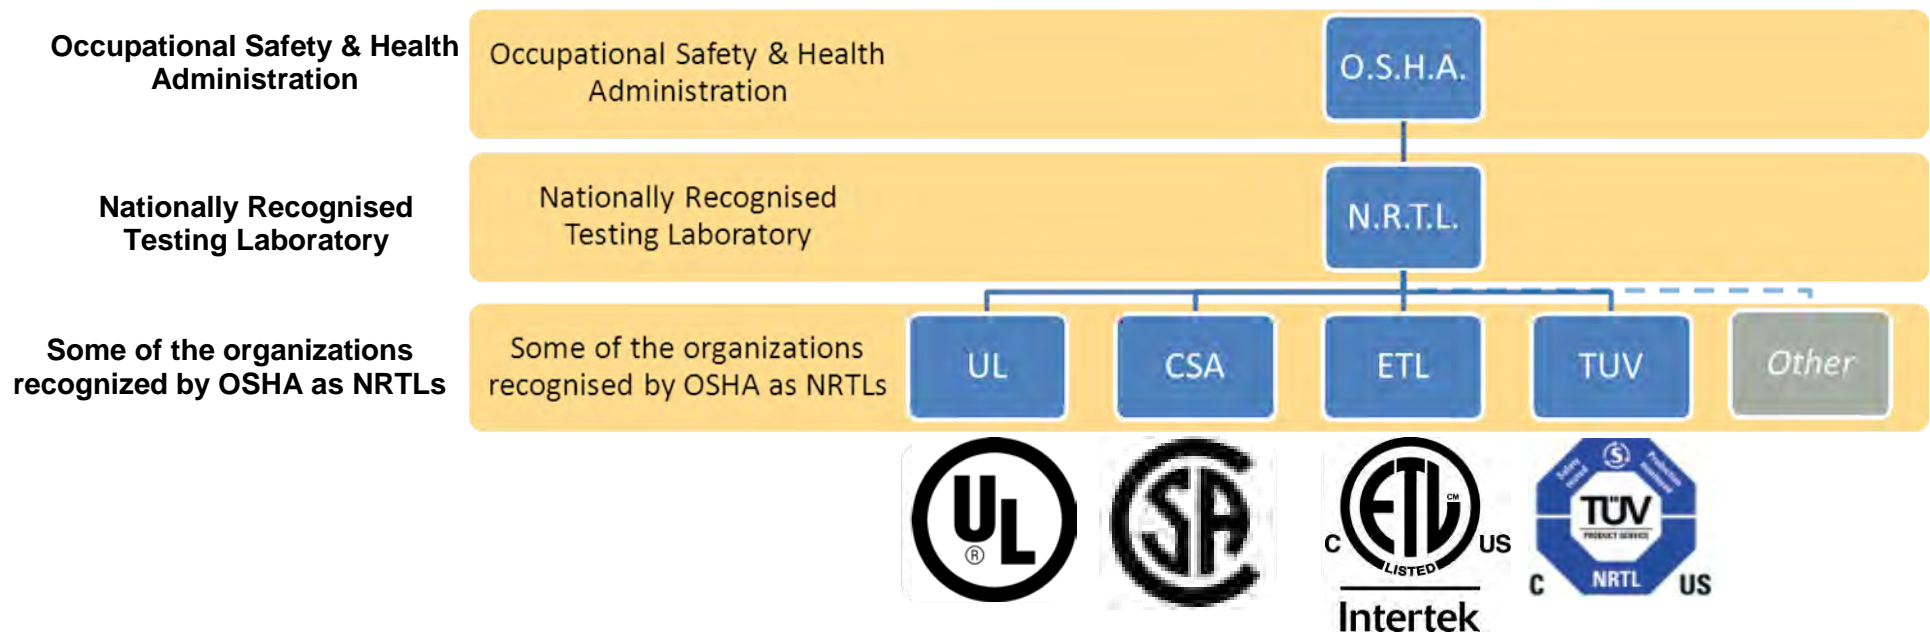

Only AC fed products have been approved by Intertek Testing and Certification Ltd (ETL) to American Standard UL508C, Standard for Safety, Power Conversion Equipment.

## CANADIAN COMPLIANCE

Only AC fed products have been approved by Intertek Testing and Certification Ltd (ETL) to Canadian Standard CSA 22.2 No. 14, Standard for Industrial Control Equipment and Canadian Standard CSA 22.2 No. 14, Industrial control Equipment.

## NORTH AMERICAN AND CANADIAN COMPLIANCE INFORMATION

### **Motor Base Frequency**

PMAC and Induction motor modes are identical.

Drive Switching Frequency	Maximum Output Frequency
4 kHz	500Hz
8 kHz	590Hz (1000Hz subject EU Export Control Annex I to Council Regulation (EC) No. 428/2009)
12 kHz	590Hz (1500Hz subject EU Export Control Annex I to Council Regulation (EC) No. 428/2009)
16 kHz	590Hz (1500Hz subject EU Export Control Annex I to Council Regulation (EC) No. 428/2009)

### **Drive Protection**

#### **Branch Circuit Protection**

It is recommended that UL Listed non-renewable cartridge fuses (JDDZ) or UL Listed renewable cartridge fuses (JDRX) are installed upstream of the drive. Refer to Appendix F: "Technical Specifications" - Power Details for recommended fuse ratings.

#### **Solid-State Motor Overload Protection**

This product provides Class 10 motor overload protection. The maximum internal overload protection level (current limit) is 180% for 3 seconds, in addition Heavy Duty mode is 150% for 60 seconds and Normal Duty mode is 110% for 60s in. Refer to Appendix D Programming – **Current Limit** for user current limit adjustment information.

An external motor overload protective device must be provided by the installer where the motor has a full-load Ampere rating of less than 50% of the drive output rating or when the **Disable Stall** trip is enabled; or when the **Stall time** parameter is increased above 480 seconds (refer to Appendix D Programming : **Stall Trip**).

Motor over temperature sensing is not provided by the product unless the external temperature sensor is connected to the motor thermistor input on the GPIO option. When the GPIO option is not fitted an external motor over temperature device is required.

## C-39 Compliance

### ***Solid-State Short-Circuit Protection***

These devices are provided with integral Solid-State Short-Circuit (output) Protection. Branch circuit protection must be provided in accordance with the latest edition of the National Electrical Code NEC/NFPA-70.

The following drives when fitted with UL Listed fuses are suitable for use on a circuit capable of delivering not more than:

- Frame D: 5,000 RMS Symmetrical Amperes, 480V maximum
- Frame E: 5,000 RMS Symmetrical Amperes, 480V maximum
- Frame F: 5,000 RMS Symmetrical Amperes, 480V maximum
- Frame G: 5,000 RMS Symmetrical Amperes, 480V maximum
- Frame H: 10,000 RMS Symmetrical Amperes, 480V maximum
- Frame J: 10,000 RMS Symmetrical Amperes, 480V maximum
- Frame K: 18,000 RMS Symmetrical Amperes, 480V maximum

When fitted with UL listed, Ferraz Shawmut / Mersen, Class J, AJT type fuses, frame D, E and F sizes may be used on a supply delivering not more 100,000 RMS Symmetrical amperes, 480V maximum.

When fitted with UL listed, Ferraz Shawmut / Mersen, Class J, AJT type fuses these may be used on frame G, for frame H & J use UL recognized, Ferraz Shawmut/Mersen Type A50QS fuses, sizes may be used on a supply rating delivering not more than 100,000 RMS Symmetrical amperes, 480V maximum.

When group installed with the specified line reactor frame D, E, F, G, H, J and K sizes may be used on a supply rating delivering not more than 50,000 RMS Symmetrical amperes, 480V maximum. Refer to Appendix F: "Technical Specifications" – Supply short circuit rating.

### ***Field Wiring Temperature Rating***

Use minimum 75°C Copper conductors.

### ***Listed Accessories / Options***

- Control Module (AC30 Series)
- Graphical Key pad (GKP)
- Profibus DP-V1
- PROFINET IO
- Modbus RTU
- DeviceNet
- CANopen
- EtherNet IP
- General Purpose I/O (GPIO) x 3
- Encoder Option x 1
- Earth bracket kit for C2 filtering

### ***Recommended Wire Sizes***

North American wire sizes (AWG) are based on NEC/NFPA-70 for ampacities of thermoplastic-insulated (75°C) copper conductors.



The wire sizes allow for an ampacity of 125% of the rated input and output amperes for motor branch-circuit conductors as specified in NEC/NFPA-70.

<b>FRAME D</b> Terminal acceptance range: 30-10 AWG					
	Model Number	Power Input AWG		Power Output AWG	Brake Output / DC AWG
		AC Supplied	DC Supplied		
AC Variant: 380-480V ±10% - DC Variant 510-650V					
<b>NORMAL DUTY</b>	7x0-4D0004-..	14	14	14	14
	7x0-4D0005-..	14	14	14	14
	7x0-4D0006-..	14	14	14	14
	7x0-4D0008-..	14	14	14	14
	7x0-4D0010-..	14	14	14	14
	7x0-4D0012-..	14	14	14	14
<b>HEAVY DUTY</b>	7x0-4D0004-..	14	14	14	14
	7x0-4D0005-..	14	14	14	14
	7x0-4D0006-..	14	14	14	14
	7x0-4D0008-..	14	14	14	14
	7x0-4D0010-..	14	14	14	14
	7x0-4D0012-..	14	14	14	14

<b>FRAME E</b> Terminal acceptance range: 30-10 AWG					
	Model Number	Power Input AWG		Power Output AWG	Brake Output / DC AWG
		AC Supplied	DC Supplied		
AC Variant: 380-480V ±10% - DC Variant 510-650V					
<b>NORMAL DUTY</b>	7x0-4E0016-..	12	12	12	14
	7x0-4E0023-..	10	10	10	14
<b>HEAVY DUTY</b>	7x0-4E0016-..	14	14	14	14
	7x0-4E0023-..	12	14	12	14

# C-41 Compliance

FRAME F Terminal acceptance range: 18-6 AWG					
	Model Number	Power Input AWG		Power Output AWG	Brake Output / DC AWG
		AC Supplied	DC Supplied		
AC Variant: 380-480V ±10% - DC Variant 510-650V					
NORMAL DUTY	7x0-4F0032-..	8	8	8	12
	7x0-4F0038-..	8	8	8	10
	7x0-4F0045-..	6	6	6	8
HEAVY DUTY	7x0-4F0032-..	10	10	10	12
	7x0-4F0038-..	8	8	8	10
	7x0-4F0045-..	8	8	8	8

FRAME G Terminal acceptance range: 16-4 AWG					
	Model Number	Power Input AWG		Power Output AWG	Brake Output / DC AWG
		AC Supplied	DC Supplied		
400V Build Variant: 380-480V ±10%					
NORMAL DUTY	7x0-4G0045-..	6	6	6	8
	7x0-4G0060-..	4	4	4	6
	7x0-4G0073-..	3	3	3	4
HEAVY DUTY	7x0-4G0045-..	8	8	8	8
	7x0-4G0060-..	6	6	6	6
	7x0-4G0073-..	4	4	4	4

FRAME H					
	Model Number	Power Input AWG		Power Output AWG	Brake Output / DC AWG
		AC Supplied	DC Supplied		
<b>400V Build Variant: 380-480V ±10%</b>					
<b>NORMAL DUTY</b>	7x0-4H0087-..	3	2	2	3
	7x0-4H0105-..	2	1	1/0	2
	7x0-4H0145-..	1/0	2/0	3/0	1/0
<b>HEAVY DUTY</b>	7x0-4H0087-..	4	3	3	3
	7x0-4H0105-..	3	2	2	2
	7x0-4H0145-..	2	1/0	1/0	1/0

FRAME J					
	Model Number	Power Input AWG		Power Output AWG	Brake Output / DC AWG
		AC Supplied	DC Supplied		
<b>400V Build Variant: 380-480V ±10%</b>					
<b>NORMAL DUTY</b>	7x0-4J0180-..	3/0	4/0	4/0	3/0
	7x0-4J0205-..	4/0	300kcmil	250kcmil	4/0
	7x0-4J0260-..	350kcmil	500kcmils	350 kcmil	300 kcmil
<b>HEAVY DUTY</b>	7x0-4J0180-..	1/0	3/0	4/0	3/0
	7x0-4J0502-.	3/0	4/0	300 kcmil	4/0
	7x0-4J0260..	250 kcmil	300kcmil	400 kcmil	300kcmil

# C-43 Compliance

FRAME K				
	Model Number	Power Input AWG	Power Output AWG	Brake Output / DC AWG
<b>400V Build Variant: 380-480V ±10%</b>				
<b>NORMAL DUTY</b>	7x0-4K0315-..	500kcmil	600 kcmil	400kcmil
	7x0-4K0380-..	700kcmil	750 kcmil	600 kcmil
	7x0-4K0440-..	800kcmil	1250kcmil	750kcmil
<b>HEAVY DUTY</b>	7x0-4K0315-..	350kcmil	400kcmil	400kcmil
	7x0-4K0380-..	500kcmil	600kcmil	600kcmil
	7x0-4K0440-..	600kcmil	750kcmil	750kcmil

## Environmental

### RESTRICTION, EVALUATION, AUTHORISATION AND RESTRICTION OF CHEMICALS (REACH)

The Regulation (EC) No 1907/2006 of the European Parliament and of the Council of 18 December 2006 concerning the Registration, Evaluation, Authorization, and Restriction of Chemicals (REACH) entered into force on June 1, 2007. Parker agrees with the purpose of REACH which is to ensure a high level of protection of human health and the environment. Parker is compliant with all applicable requirements of REACH.

The registration requirements do not apply to Parker since it is neither a manufacturer nor an importer of preparations into Europe.

However, product (article) manufacturers or importers into Europe are obligated under Article 33 of REACH to inform recipients of any articles that contain chemicals on the Substances of Very High Concern (SVHC) candidate list above a 0.1% concentration (by weight per article). As of 19<sup>th</sup> December 2011 VSD products manufactured and marketed by Parker do not contain substances on the REACH SVHC candidate list in concentrations greater than 0.1% by weight per article. Parker will continue to monitor the developments of the REACH legislation and will communicate with our customers according to the requirement above.

### RESTRICTION OF HAZARDOUS SUBSTANCES (RoHS)

This product is in full compliance with RoHS Directive 2011/65/EU, with respect to the following substances:

- 1) Lead (Pb),
- 2) Mercury (Hg),
- 3) Cadmium (Cd),
- 4) Hexavalent chromium (Cr (VI)),
- 5) Polybrominated biphenyls (PBB),
- 6) Polybrominated diphenyl ethers (PBDE).

## C-45 Compliance

### WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)



Waste Electrical and Electronic Equipment - must not be disposed of with domestic waste.

It must be separately collected according to local legislation and applicable laws.



Parker Hannifin Company, together with local distributors and in accordance with EU directive 2002/96/EC, undertakes to withdraw and dispose of its products, fully respecting environmental considerations.

For more information about how to recycle your Parker supplied waste equipment, please contact your local Parker Service Centre.

#### ***Packaging***

During transport our products are protected by suitable packaging. This is entirely environmentally compatible and should be taken for central disposal as secondary raw material.

## DECLARATIONS

## AC30V, AC30P, AC30D AND AC30R FRAMES D, E, F, G, H, J AND K VARIABLE SPEED DRIVES



### MANUFACTURERS EU DECLARATIONS OF CONFORMITY

Date CE marked first applied: 01/10/12

EMC Directive	Low Voltage Directive	Machinery Directive
<p>In accordance with the EU Directive 2014/30/EU</p> <p>We Parker Hannifin Manufacturing Limited, address as below, declare under our sole responsibility that the above Electronic Products when installed and operated with reference to the instructions in the Product Manual (provided with each piece of equipment) is in accordance with the relevant clauses from the following standards:-</p> <p style="text-align: center;">EN 61800-3 (2004)(+A1:2012)</p> <p><i>Note: Filtered versions</i></p>	<p>In accordance with the EU Directive 2014/35/EU</p> <p>We Parker Hannifin Manufacturing Limited, address as below, declare under our sole responsibility that the above Electronic Products when installed and operated with reference to the instructions in the Product Manual (provided with each piece of equipment), is in accordance with the following standard :-</p> <p style="text-align: center;">EN 61800-5-1 (2007)</p>	<p>In accordance with the EU Directive 2006/42/EC</p> <p>We Parker Hannifin Manufacturing Limited, address as below, declare under our sole responsibility that the above Electronic Products when installed and operated with reference to the instructions in the Product Manual (provided with each piece of equipment), is in accordance with the following standards :-</p> <p>EN 61800-5-2 (2007)      Safe Torque Off (STO) EN ISO 13849-1 (2008)    PLe/SIL3</p>

### MANUFACTURERS DECLARATIONS OF CONFORMITY

EMC DECLARATION	Low Voltage and MACHINERY DIRECTIVES
<p>We Parker Hannifin Manufacturing Limited, address as below, declare under our sole responsibility that the above Electronic Products when installed and operated with reference to the instructions in the Product Manual (provided with each piece of equipment) is in accordance with the relevant clauses from the following standards:-</p> <p style="text-align: center;">BSEN61800-3 (2004)(+A1:2012)</p> <p><i>Notes:</i></p> <p>i.    <i>Non-filtered versions</i> ii.   <i>This is provided to aid justification for EMC Compliance when the unit is used as a component.</i></p>	<p>The above Electronic Products are components to be incorporated into machinery and may not be operated alone.</p> <p>The complete machinery or installation using this equipment may only be put into service when all safety considerations of the Directive 2006/42/EC are fully implemented.</p> <p style="text-align: center;">Particular reference should be made to EN60204-1 (Safety of Machinery - Electrical Equipment of Machines).</p> <p>All instructions, warnings and safety information of the Product Manual must be implemented.</p>

Dr. Martin Payn  
EME Division Engineering Manager  
01 June 2016

**Parker Hannifin Manufacturing Limited, Automation Group,**  
ELECTROMECHANICAL DRIVES BUSINESS UNIT, NEW COURTWICK LANE, LITTLEHAMPTON, WEST SUSSEX BN17 7RZ  
TELEPHONE: +44 (0) 1903 737000, FAX: +44 (0)1903 737100  
Registered Number 4806503 England. Registered Office: 55 Maylands Avenue, Hemel Hempstead, Herts HP2 4SJ

**AC30 FRAME D, E, F, G, H, J AND K VARIABLE SPEED DRIVES**



**MANUFACTURERS EC DECLARATIONS OF CONFORMITY**

Date CE marked first applied: 01/10/12

**Restriction of Hazardous Substances (RoHS)**

We Parker Hannifin Manufacturing Limited, address as below, declare under our sole responsibility that the above Electronic Products comply with the RoHS substance restrictions in EC Directive 2011/65/EU.

Products are produced in accordance with the relevant clauses of the harmonized standard EN50581:2012

*“Technical documentation for the evaluation of electrical and electronic products with respect to restriction of hazardous substances”.*

Dr. Martin Payn  
(EME Division Engineering Manager)

**Parker Hannifin Manufacturing Limited, Automation Group,**

ELECTROMECHANICAL DRIVES BUSINESS UNIT, NEW COURTWICK LANE, LITTLEHAMPTON, WEST SUSSEX BN17 7RZ

TELEPHONE: +44 (0) 1903 737000, FAX: +44 (0) 1903 737100

Registered Number 4806503 England. Registered Office: 55 +Maylands Avenue, Hemel Hempstead, Herts HP2 4SJ



# Appendix D: **Parameter Reference**

## Parameter Descriptions

The parameter descriptions in this section are arranged alphabetically; however, they are also listed below by Category. Engineer view level must be selected to see all the parameters listed under the Parameters menu.

<b>Motor Control</b>		Sequencing	D-167	Fieldbus Mapping	D-71	Graphical Keypad	D-86
AFE	D-2	Slew Rate	D-175	<b>Option Comms</b>		Local Control	D-101
Auto Restart	D-16	Slip Compensation	D-176	Communications	D-35	<b>Application</b>	
Autotune	D-21	Spd Direct Input	D-179	Options		App Info	D-14
Braking	D-28	Spd Loop Diagnostics	D-180	BACnet IP Option	D-25	Minimum Speed	D-102
Control Mode	D-39	Spd Loop Settings	D-181	BACnet MSTP Option	D-26	PID	D-117
Current Limit	D-42	Speed Ref	D-186	CANopen Option	D-30	Preset Speeds	D-145
Current Loop	D-43	Stabilisation	D-187	ControlNet Option	D-41	Raise Lower	D-149
DC Link Volts Limit	D-45	Stack Inv Time	D-188	DeviceNet Option	D-53	Skip Frequencies	D-172
Energy Meter	D-63	Torque Limit	D-195	EtherCAT Option	D-65	<b>System Board</b>	
Feedbacks	D-67	Tr Adaptation	D-199	EtherNet IP Option	D-66	System Board Option	D-192
Filter On Torque Dmd	D-71	Voltage Control	D-207	Modbus RTU Option	D-104	Encoder Slot 1	D-60
Fluxing VHz	D-76	<b>Inputs And Outputs</b>		Modbus TCP Option	D-105	Encoder Slot 2	D-62
Flycatching	D-82	IO Configure	D-92	Profibus DP-V1	D-147	System Board IO	D-192
Induction Motor Data	D-89	IO Values	D-98	Option		<b>Phase Control</b>	
Inj Braking	D-90	<b>Option IO</b>		Profinet IO Option	D-148	Configure	D-36
Motor Load	D-106	IO Option Common	D-96	Read Process	D-35	<b>Device Manager</b>	
Motor Nameplate	D-109	General Purpose IO	D-84	Write Process	D-35	Clone	D-31
Motor Sequencer	D-111	Encoder	D-58	Event	D-35	Device State	D-51
MRAS	D-112	Thermistor	D-198	Option Ethernet	D-35	Device Commands	D-50
Pattern Generator	D-114	Resolver	D-158	<b>Trips</b>		Drive info	D-54
PMAC Flycatching	D-119	<b>Base Comms</b>		Trips Status	D-201	Real Time Clock	D-157
PMAC Motor Data	D-121	Ethernet	D-66	Trips History	D-200	Runtime Statistics	D-163
PMAC SVC	D-125	Modbus	D-103	Stall Trip	D-191	Setup Wizard	D-171
Pos Fbk Alignment	D-133	Precision Time	D-144	VDC Ripple	D-206	SD Card	D-166
Power Loss Ride	D-141	Protocol		Current Sensor Trip	D-44	Data Logger	D-45
Thru		Peer to Peer	D-116	Speed Error Trip	D-185	Soft Menus	D-177
Ramp	D-151	Web Server	D-208	Black Box Recorder	D-27	Flash File System	D-75
Scale Setpoint	D-165	EtherNet IP Adapter	D-66	<b>Keypad</b>			

For additional parameter details refer to the Parameter Table at the end of this appendix. The Parameter Number, (PNO), provided next to each parameter description may be used to find the corresponding entry in the Parameter Table.

## D-2 Parameter Reference

### Active Front End (AFE)

#### **Control Screen**

**Setup:: Regen Control**


**Monitor:: Regen Control**

Active Front End (AFE) is a mode of operation of the drive required for full 4-Q regeneration capabilities. AFE control mode allows a single AC30P/AC30D drive to act as a 4-Q power supply unit that is capable of drawing (motoring) and supplying (regenerating) sinusoidal, near-unity power factor current from the supply. The output from the 4-Q Regen drive acts as a DC supply which is used to power other drives on a common DC Bus system.

AFE Control Mode is available as a standard option in the AC30P/AC30D firmware, however set-up and installation requirements need to be adhered to in order to use a drive as 4-Q regen unit. These requirements are described in more detail in the paragraphs that follow.

#### **Hardware Requirements**

The figure below shows the typical installation configuration of the drive operating in AFE control mode.

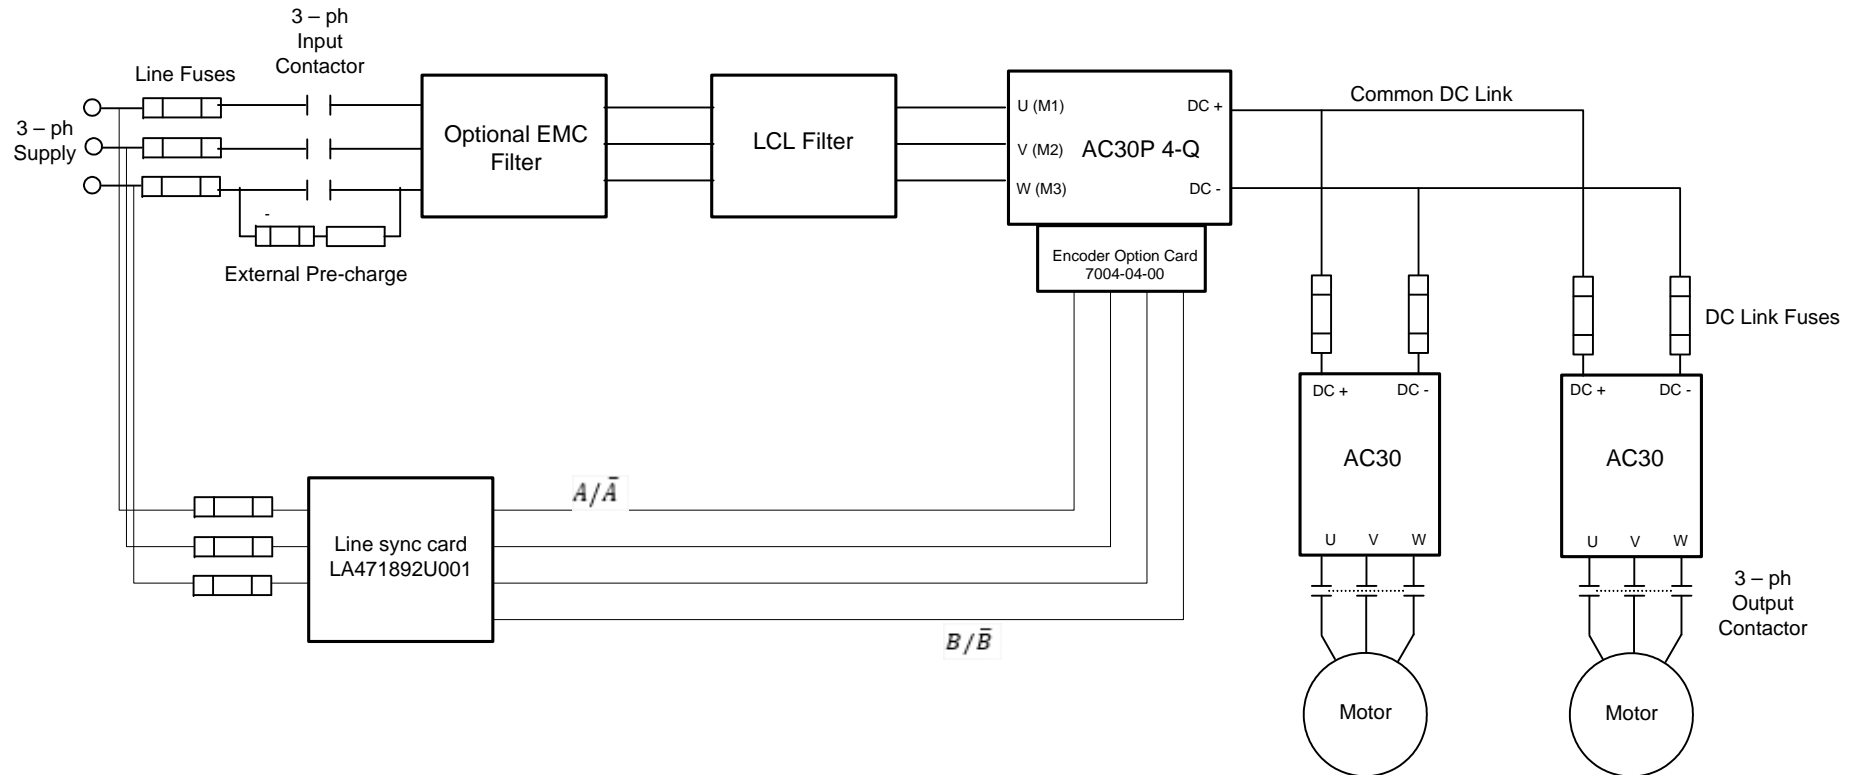

The correct installation requires the following components:

- LCL filter
  - o 3% and 5% chokes (as part of an LCL filter, custom designed )
  - o Capacitor panel (as part of an LCL filter, custom designed)
- Pre-charge resistor with external pre charge control
- Three phase contactors
- EMC filter (optional)
- AC Line fuses
- DC Link fuses
- Line sync card (LA471892U001)
- Encoder option card (7004-04-00)

### **Drive Set-up**

Typically the system will contain an AC30P/AC30D regen drive providing 4-Q power supply, and one or more drives on the common DC bus.

## D-4 Parameter Reference

**ALL** drives in the system **MUST** have their internal EMC “Y” caps to earth disconnected.

A 4-Q regen drive is set into AFE control mode by setting the **Control Mode “Motor Type or AFE”** parameter to AFE as shown in picture below.

Home ▶ Parameters ▶ Control Mode ▶ Control Mode

0511: Motor Type or AFE AFE Set

This setting must be accompanied by selection of an appropriate AFE macro from the default application:

Home ▶ Setup ▶ Application ▶ Application Setup ▶ App Selection

1900: Selected Application AFE Set

If the “Motor Type or AFE” and “Selected Application” do not match, it would not be possible to operate the drive correctly. Both these settings are necessary for proper configuration of the drive to work as an active front end.

When drive is in AFE mode, its current rating is limited to 85% of the equivalent set up current rating when in one of the motor modes.

The standard set of AFE parameters required to finalise the drive AFE configuration are located within **Setup/Regen Control** menu. Based on the “AFE Current Control” bit, AFE would operate in voltage control mode (left), or current control mode (right):

Home ▶ Setup ▶ Regen Control		Home ▶ Setup ▶ Regen Control	
0511: Motor Type or AFE	AFE Set	0511: Motor Type or AFE	AFE Set
1730: AFE Inductance	6.70 mH Set	1730: AFE Inductance	6.70 mH Set
1711: AFE VDC Demand	720 V Set	1693: AFE Current Control	<input checked="" type="checkbox"/> Set
1693: AFE Current Control	<input type="checkbox"/> Set	1705: AFE Iq Demand	0.00 Set
1705: AFE Iq Demand	0.00 Set	1704: AFE Id Demand	0.00 Set

AFE inductance parameter must be set to the value of the total line choke inductance.

AFE VDC Demand parameter sets the required DC link voltage for the common DC link bus. Recommended level for nominal drive voltage rating of 400V (with 820V overvoltage trip level and 410V undervoltage trip level) is 720V.

AFE VDC Min Level parameter defines the level of DC link voltage at which external precharge closure is instigated. By default it is equal to undervoltage trip level.

For any additional adjustments (if required) the full set of the AFE related parameters can be found in the **Parameters::Regen Control::AFE** menu.

Home ► Parameters ► Regen Control ► AFE

Other (*non-AFE*) drives, supplied through common DC bus **MUST** have the following set-up:

*DC Link volts limit feature disabled*

Home ► Parameters ► Motor Control ► DC Link Volts Limit

1641: VDC Lim Enable  Set

*If in V/Hz mode the Terminal Voltage Mode parameter set to FIXED*



Home ► Parameters ► Motor Control ► Voltage Control

0371: Terminal Voltage Mode FIXED ▼ Set

### ***AFE Application***

A standard AFE macro (App\_5\_AFE\_Control) is included as part of the default application. It provides necessary application layer logic to operate in AFE control mode. This macro can be modified (if necessary) using standard AC30 PDQ or PDD tools. It enables the user immediate operation without any additional diagram logic wiring, providing that electrical connections to digital inputs and outputs are the same as in default AFE macro.

# D-6 Parameter Reference

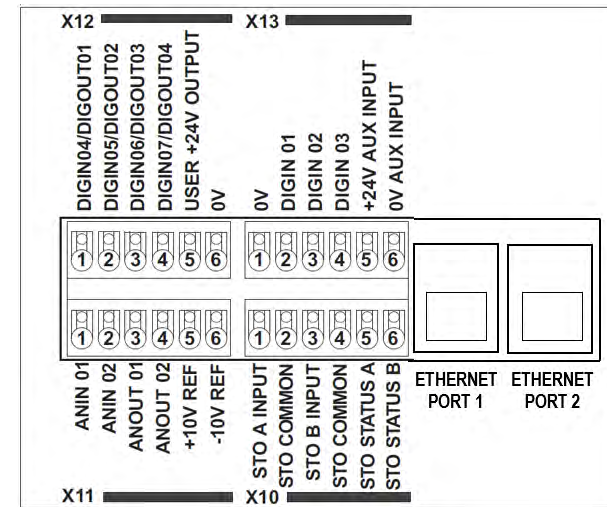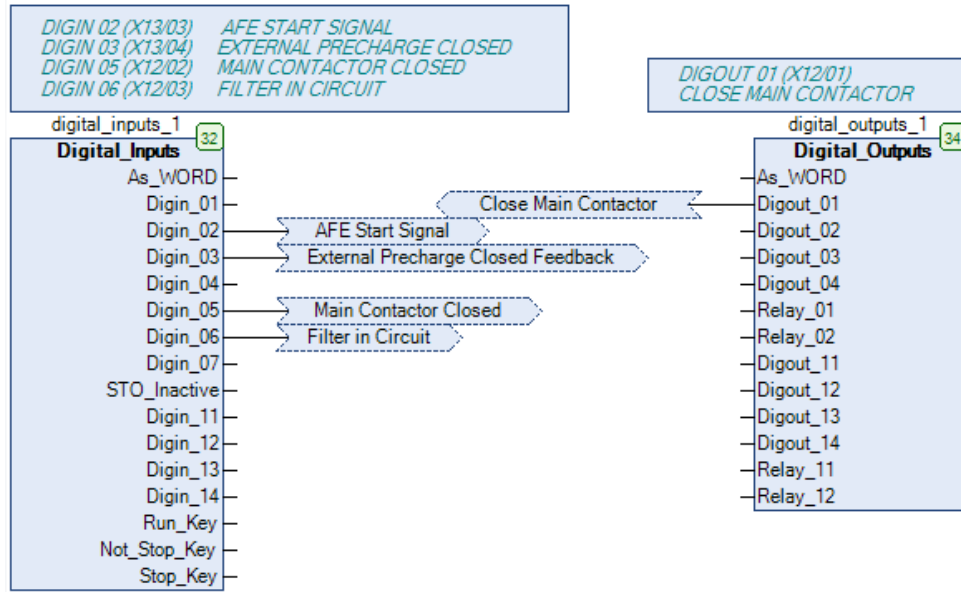


The default macro requires the following electrical wiring diagram for AC30P/AC30D control board. Use of different inputs will need to be accompanied by the appropriate change in the application.




Application 5: AFE CONTROL

**PRECHARGE CLOSED LOGIC**  
 Assume "PCR closed" signal TRUE if:  
 - digital input high (from external precharge)  
 - DC Link above 400V  
 - Encoder option fitted

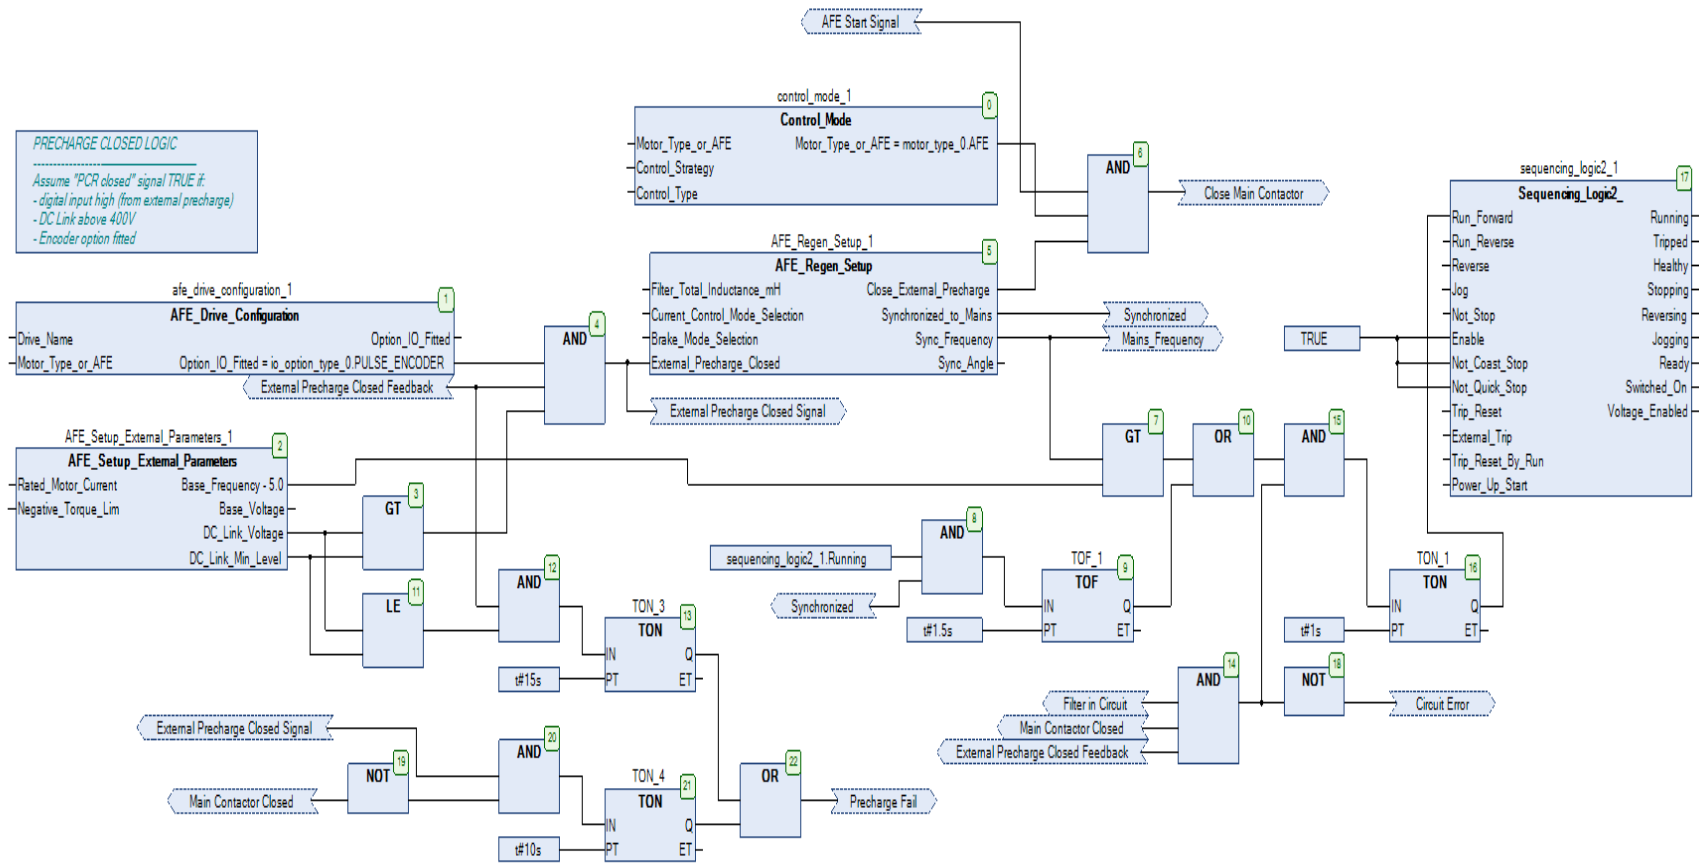

# D-8 Parameter Reference

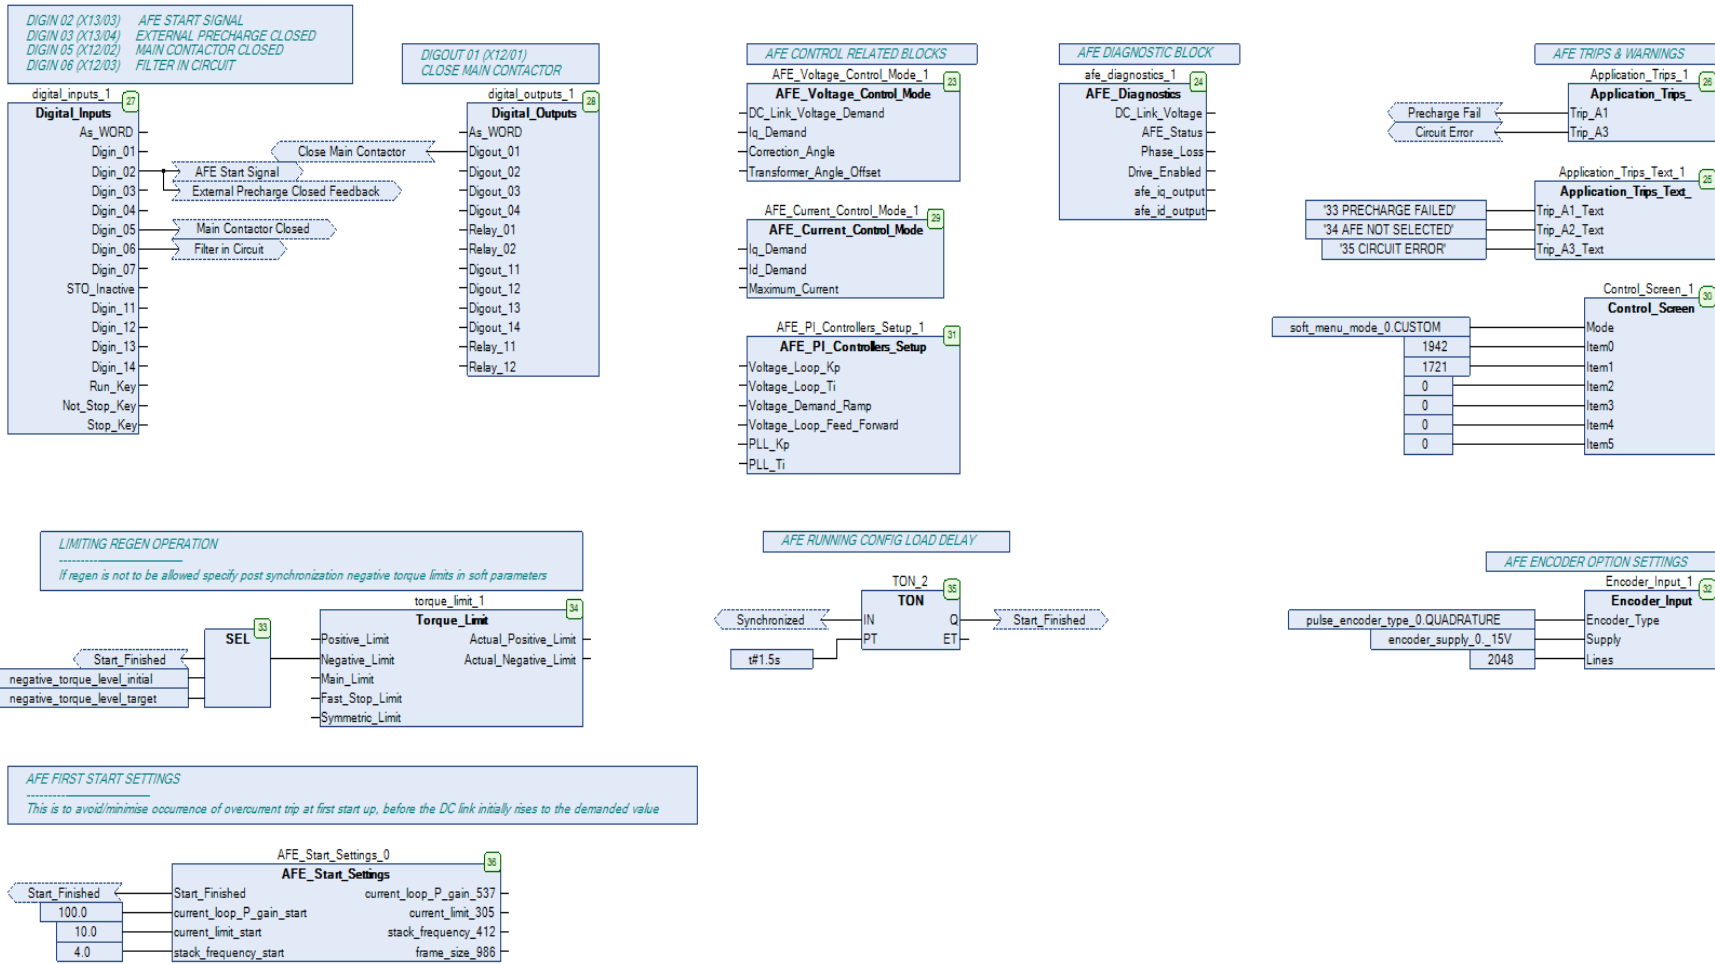



**AFE Start Up Sequence**

In order to minimise the potential occurrence of initial current transients when AFE is switched on, an “AFE Start Settings” block was included in the default macro. It works in conjunction with the following four soft parameters:

- 1943 AFE Current Limit
- 1944 AFE Current Loop P Gain
- 1945 AFE Stack Frequency
- 1946 AFE Default Stack Frequency

**AFE Default Macro Setup Parameters**

Home ▶ Setup ▶ Application ▶ Application Setup ▶ AFE		
0511: Motor Type or AFE	AFE	Set
1730: AFE Inductance	6.70 mH	Set
1711: AFE VDC Demand	720 V	Set
1693: AFE Current Control	<input type="checkbox"/>	Set
1705: AFE Iq Demand	0.00	Set
1940: Negative Torque Init	-150.0 %	Set
1941: Negative Torque Last	-100.0 %	Set
1943: AFE Current Limit	100.00 %	Set
1944: AFE Curr Loop P Gain	70.00 %	Set
1945: AFE Stack Frequency	2.0	Set
1946: AFE Default Stack Frq	<input type="checkbox"/>	Set

These soft parameters have to be populated with the values that are required for operation in normal running mode, before first start of AFE mode is attempted!

Start up values are set as constants within the macro, and can only be changed by reprogramming AFE application into the drive. Soft parameter 1946 AFE Default Stack Frequency allows the user to specify if drive should operate (post start up) with its default switching frequency, or with a different one, as specified in soft parameter 1945.

It is, by default, set that start up is finished after 1.5 seconds since the run command has taken effect.

# D-10 Parameter Reference

## Line Synchronisation

Typically the system will contain an AC30P/AC30D regen drive providing 4-Q power supply, and one or more drives on the common DC bus. However, in order for the AFE control procedures to operate correctly, a synchronization of the IGBT firing sequence to the three phase mains supply voltage frequency, angle, and direction of rotation need to be performed. This is achieved by using a line sync card (LA471892U001), connected to a standard AC30 encoder option board (7004-04-00). Failure to successfully synchronise could cause significant supply distortion, poor power factor, or even catastrophic failure.

## AFE Parameter List

The full set of AFE related parameters are given in a table below:

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>AFE Inductance</b>	1730	Setup::Regen Control Parameters::Regen Control::AFE	0.00	0.00 to 1000.00	mH	ALWAYS
Total inductance (3% + 5%) from the LCL filter in the AFE configuration.						
<b>AFE PF Angle Demand</b>	1693	Parameters::Regen Control::AFE	0.00	-90.00 to 90.00	deg	ALWAYS
Sets AFE in current control mode (TRUE) or leaves it in voltage control mode (FALSE).						
<b>AFE Id Demand</b>	1705	Same as PNO 1693	0.10	-1.50 to 1.50		ALWAYS
Iq current demand. Set directly in both current control mode, or voltage control mode.						
<b>AFE Id Demand</b>	1704	Same as PNO 1693	0.10	-1.50 to 1.50		ALWAYS
Id current demand. Set directly only in current control mode. In voltage control mode set by dc link voltage loop.						
<b>AFE Max Current</b>	1706	Parameters::Regen Control::AFE	1.50	0.00 to 1.50		ALWAYS
Maximum allowed current in AFE mode.						
<b>AFE Close Ext PCR</b>	1690	Parameters::Regen Control::AFE	FALSE			ALWAYS

Parameter Name	No.	Path	Default	Range	Units	Writable
Link to digital output to send command to close external pre charge						
<b>AFE Ext PCR Closed</b>	1691	Parameters::Regen Control::AFE	FALSE			ALWAYS
Link to digital input to provide information if external pcr is closed.						
<b>AFE Sync Frequency</b>	1703	Monitor::Regen Control Parameters::Regen Control::AFE			Hz	NEVER
Mains frequency as measured by the AFE module.						
<b>AFE Sync Angle</b>	1718	Parameters::Regen Control::AFE			deg	NEVER
Mains angle as measured by the AFE module.						
<b>AFE PLL Kp</b>	1694	Parameters::Regen Control::AFE	5.48	0.00 to 30.00		ALWAYS
PLL proportional gain.						
<b>AFE PLL Ti</b>	1695	Parameters::Regen Control::AFE	0.0318	0.0000 to 3.0000		ALWAYS
PLL integral term.						
<b>AFE VDC Kp</b>	1707	Parameters::Regen Control::AFE	8.27	0.00 to 300.00		ALWAYS
DC link voltage loop proportional gain.						
<b>AFE VDC Ti</b>	1708	Parameters::Regen Control::AFE	0.03	0.00 to 3.00		ALWAYS
DC link voltage loop integral term.						
<b>AFE VDC Demand</b>	1711	Same as PNO 1693	720	340 to 820	V	ALWAYS

## D-12 Parameter Reference

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
DC link voltage demand, setpoint for voltage control loop.						
<b>AFE VDC Ramp</b>	1709	Parameters::Regen Control::AFE	0.05	0.01 to 100.00	%	ALWAYS
DC link voltage ramp rate.						
<b>AFE VDC Feed Forward</b>	1710	Parameters::Regen Control::AFE	0.0000	-1.5000 to 1.5000		ALWAYS
DC link voltage loop feed forward term.						
<b>AFE VDC Min Level</b>	1697	Parameters::Regen Control::AFE	400.00	340.00 to 5000.00		ALWAYS
AFE healthy DC link level, for precharge control, if necessary to be set lower than undervoltage trip level.						
<b>AFE Correction Angle</b>	1717	Parameters::Regen Control::AFE	0.00	-90.00 to 90.00		ALWAYS
Angle correction offset.						
<b>AFE Transf Angle Offset</b>	1731	Parameters::Regen Control::AFE	0.00	0.00 to 360.00	deg	ALWAYS
Angular offset necessary due to (potential) transformer delta/star connections.						
<b>AFE Synchronizing</b>	1712	Parameters::Regen Control::AFE				NEVER
TRUE if AFE in synchronizing state.						
<b>AFE Synchronized</b>	1713	Parameters::Regen Control::AFE				NEVER
TRUE if AFE has synchronized to mains frequency.						
<b>AFE Enable Drive</b>	1714	Parameters::Regen Control::AFE				NEVER

Parameter Name	No.	Path	Default	Range	Units	Writable
Drive enabled to do AFE.						
<b>AFE PF Angle Demand</b>	1692	Parameters::Regen Control::AFE	0.00	-90.00 to 90.00	deg	ALWAYS
Power factor angle demand.						
<b>AFE Phase Loss</b>	1715	Parameters::Regen Control::AFE				NEVER
Indicates if phase loss occurred.						
<b>AFE Brake Mode</b>	1716	Parameters::Regen Control::AFE	FALSE			ALWAYS
Sets AFE control into brake mode.						
<b>AFE Status</b>	1721	Same as PNO 1703		0:INACTIVE 1:SYNCHRONIZING 2:SYNCHRONIZED 3:SUPPLY FREQ HIGH 4:SUPPLY FREQ LOW 5:SYNC FAILED		NEVER
AFE module status reporting.						

**NOTES**

1 – To correctly set up AFE mode for frame K

- phase fail trip needs to be disable in AFE mode
- parameter 1707 needs to be set at 0.75
- parameter 1708 needs to be set at 0.02

# D-14 Parameter Reference

## App Info

### **Parameters::Application::App Info**

Details of the Application loaded in the Drive. An Application is built as part of a project using a suitable programming tool. When downloaded into the Drive an Application within the Project can be selected to run. Some Projects only contain a single Application, so in this case will always be selected.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Project File Name</b>	1040	Parameters::Application::App Info				NEVER
The name of the file on the programming PC used to store the application. (This does not include the project or projectarchive file name extension.)						
<b>Archive Flags</b>	0410	Parameters::Application::App Info				NEVER
Indicates if the source code corresponding to the loaded configuration is saved in the drive as an archive. For the AC30V this archive must be saved on the SD Card. On the AC30P the archive can be saved internally or on the SD Card.						
Bit 0 Indicates that the project archive file on the SD card matches the loaded application						
Bit 8 Indicates that the project archive file stored internally matches the loaded application						
<b>Last Modification</b>	1047	Parameters::Application::App Info		1970/01/01 to 2106/02/07		NEVER
Timestamp of when the loaded Project was last modified. (Note - the RTC option is not required for this.)						
<b>IDE Version</b>	1048	Parameters::Application::App Info				NEVER
The version of programming tool (Interactive Development Environment) used to create the loaded Project.						
<b>Project Author</b>	1054	Parameters::Application::App Info				NEVER
<i>The Author of the loaded Project as entered in the programming tool when it was created</i>						
<b>Project Version</b>	1061	Parameters::Application::App Info				NEVER
<i>The Project version of the loaded Project as entered by the programmer when creating the Project.</i>						

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Project Description</b>	1068	Parameters::Application::App Info				NEVER
<i>A description of up to 80 characters entered by the programmer when creating the Project.</i>						
<b>Application Name</b>	1554	Parameters::Application::App Info				NEVER
<i>The name of the selected Application within the loaded Project.</i>						

# D-16 Parameter Reference

## Auto Restart

**Setup:: Motor Control::Auto Restart**

**Parameters::Motor Control::Auto Restart**

The Auto Restart feature provides the facility to automatically reset a choice of trip events and restart the drive with a programmed number of attempts. The number of attempted restarts is monitored. A manual or remote trip reset is required if the drive is not successfully restarted within the maximum number of restarts. The purpose of this feature is to allow automatic recovery from trip conditions. This is especially useful on remote or unmonitored sites.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>AR Enable</b>	1469	Setup::Motor Control::Auto Restart Parameters::Motor Control::Auto Restart	FALSE			ALWAYS
Enables the auto restart function.						
<b>AR Mode</b>	1470	Same as PNO 1469	1	0:TRIP RESET 1:AUTO RESTART 2:AUTO START		ALWAYS
Defines the action that the AR function will take following a trip.						
0. TRIP RESET                      Trips will be reset when the trip sources are inactive. The drive will not be restarted.						
1. AUTO RESTART                    If it was running the drive will be restarted when the trip sources are inactive and run is active.						
2. AUTO START                      The drive will be started when the trip sources are inactive if the run signal is high						
Refer to the Functional Description below for more details.						
<b>AR Max Restarts</b>	1471	Same as PNO 1469	10	1 to 20		ALWAYS
Defines the maximum number of restart attempts permitted before the AR function disables itself.						



Parameter Name	No.	Path	Default	Range	Units	Writable
<b>AR Trip Mask</b>	1472	Same as PNO 1469	00000000	0:01 OVER VOLTAGE		ALWAYS
				1:02 UNDER VOLTAGE		
				2:03 OVER CURRENT		
				3:04 STACK FAULT		
				4:05 STACK OVER CURRENT		
				5:06 CURRENT LIMIT		
				6:07 MOTOR STALL		
				7:08 INVERSE TIME		
				8:09 MOTOR I2T		
				9:10 LOW SPEED I		
				10:11 HEATSINK OVERTEMP		
				11:12 INTERNAL OVERTEMP		
				12:13 MOTOR OVERTEMP		
				13:14 EXTERNAL TRIP		
				14:15 BRAKE SHORT CCT		
				15:16 BRAKE RESISTOR		
				16:17 BRAKE SWITCH		
				17:18 LOCAL CONTROL		
				18:19 COMMS BREAK		
				19:20 LINE CONTACTOR		
				20:21 PHASE FAIL		
				21:22 VDC RIPPLE		
				22:23 BASE MODBUS BREAK		
				23:24 24 V OVERLOAD		
				24:25 PMAC SPEED ERROR		
				25:26 OVERSPEED		
				26:27 STO ACTIVE		
				27:28 FEEDBACK MISSING		
				28:29 INTERNAL FAN FAIL		
				29:30 CURRENT SENSOR		
				30:31 POWER LOSS STOP		
				31:32 SPEED SENSOR		
<b>AR Trip Mask 2</b>	0796	Setup::Motor Control::Auto Restart Parameters::Motor Control::Auto Restart	FFFFFFFF	0:33 A1		ALWAYS
				1:34 A2		
				2:35 A3		
				3:36 A4		
				4:37 A5		
				5:38 A6		
				6:39 A7		
				7:40 A8		

Defines the trip causes that the AR feature will attempt to automatically reset, followed by an attempt to restart the drive if appropriate. Refer to Chapter 10 “Trips and Fault Finding” for details of the value corresponding to each trip.

# D-18 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>AR Initial Delay</b>	1505	Same as PNO 1502	10.000	0.000 to 3600.000	s	ALWAYS
<p>The time in seconds for which the AR feature will wait before attempting to restart the drive for the first restart attempt, (<b>1509 AR Restarts Remaining</b> equals <b>1471 AR Max Restarts</b>). The delay time is started once all trips have become inactive.</p> <p>The delay time is ignored if the AR feature is configured to simply reset the trip without attempting to restart the motor.</p>						
<b>AR Repeat Delay</b>	1506	Same as PNO 1502	60.000	0.000 to 3600.000	s	ALWAYS
<p>The time in seconds for which the AR feature will wait before attempting to restart the drive for the second and subsequent restart attempts, (<b>1509 AR Restarts Remaining</b> is not equal to <b>1471 AR Max Restarts</b>). The delay time is started once all trips have become inactive.</p> <p>The delay time is ignored if the AR feature is configured to simply reset the trip without attempting to restart the motor.</p>						
<b>AR Trip Mask B</b>	1734	Parameters::Motor Control::Auto Restart	00000000			ALWAYS
<b>AR Trip Mask 2 B</b>	1735	Parameters::Motor Control::Auto Restart	00000000			ALWAYS
<b>AR Initial Delay B</b>	1736	Parameters::Motor Control::Auto Restart	60.000	0.000 to 3600.000	s	ALWAYS
<b>AR Repeat Delay B</b>	1737	Parameters::Motor Control::Auto Restart	120.000	0.000 to 3600.000	s	ALWAYS
<p>The 'B' parameters define a second set of trips and associated restart delays. This set operates in parallel with the primary set. If a trip is enabled in both sets, the restart time associated with the primary set, (A), will apply.</p> <p>Typically use of the 'B' set of trips will be to configure some trips to cause a delayed restart action, while the primary set of trips may be acted on with a shorter delay.</p>						
<b>AR Active</b>	1507	Parameters::Motor Control::Auto Restart				NEVER
<p>Indicates that the AR feature will reset the trip source once all trips have become inactive, (following a delay time if the AR feature has been configured to also restart the motor).</p>						

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>AR Restart Pending</b>	1508	Parameters::Motor Control::Auto Restart				NEVER
Indicates that the AR feature will reset the trip source and attempt to restart the motor once all trips have become inactive and the relevant delay timer has expired.						
<b>AR Restarts Remaining</b>	1509	Parameters::Motor Control::Auto Restart		0 to 20		NEVER
Indicates the number of restart attempts remaining before the AR feature disables itself. This count is reset to <b>1471 AR Max Restarts</b> after a successful manual or remote trip reset. The count is also reset after a period of trip free operation. This period is the longer of 5 minutes, or 5 * AR Repeat Delay B.						
<b>AR Time Remaining</b>	1510	Parameters::Motor Control::Auto Restart		0.000 to 3600.000	s	NEVER
Indicates the time remaining before a restart attempt will be made. This value starts to count down once all trip sources are inactive.						

### Functional Description

The AR feature can be configured to operate in one of three modes via the parameter **1470 AR Mode**.

In all modes the AR feature becomes active when the drive trips on one of the trips selected by parameter **1472 AR Trip Mask**. If the drive trips due to a trip not selected in **1472 AR Trip Mask** the AR feature will remain in the idle state.

Setting parameter **1469 AR Enable** to FALSE will disable the AR feature regardless of its current state.

#### **1470 AR Mode 0: Trip Reset**

In Trip Reset mode, once the AR feature becomes active it monitors all possible trip sources. Once all trip sources are inactive the AR feature will attempt to reset the trip event, moving the Sequencing State from the FAULTED state, (see Appendix B: Sequencing Logic). The AR feature resets the trip as soon as possible, it does not wait for either **1505 Initial Delay** or **1506 AR Repeat Delay**.

In this mode the AR feature will not attempt to restart the motor.

This mode may be used when an external supervisory system is monitoring the Faulted bit in **0661 Status Word**. This bit will be cleared once all trip sources are inactive and the trip has been successfully cleared, indicating that the drive may be started.

## D-20 Parameter Reference



### **1470 AR Mode 1:**      *Auto Restart*

Caution: when Auto Restart is selected the motor may run unexpectedly.

In Auto Restart mode, once the AR feature becomes active it monitors all possible trip sources. Once all trip sources are inactive the AR feature starts the programmed delay. Once the delay timer expires the AR feature attempts to reset the trip and to restart the motor.

The AR feature will not restart the motor if it was not running at the time of the trip, nor will it restart the motor if the run signal has been removed at any time since the trip, (even if it is subsequently re-applied). When a motor restart will not be attempted the AR feature will act as if it had been configured for **Trip Reset** only. If a motor restart will be attempted the parameter **1508 AR Restart Pending** is set TRUE.

Each time a restart is attempted the value in **1509 Restarts Remaining** is decremented. Once this value reaches zero, any further trip selected for auto restart will cause the AR feature to disable itself.



### **1470 AR Mode 2:**      *Auto Start*

Caution: when Auto Start is selected the motor may run unexpectedly.

In Auto Start mode, once the AR feature becomes active it monitors all possible trip sources. Once all trip sources are inactive the AR feature starts the programmed delay. Once the delay timer expires the AR feature attempts to reset the trip and to restart the motor.

The AR feature will attempt to start the motor even if it was not running at the time of the trip, as long as the Sequencing Logic parameter **0644 Control Word** is configured to run, (typically bits 0, 1, 2 and 3 all set), see Appendix B: Sequencing Logic.

In this mode the parameter **1508 AR Restart Pending** is set TRUE. Each time a restart is attempted the value in **1509 Restarts Remaining** is decremented. Once this value reaches zero, any further trip selected for auto restart will cause the AR feature to disable itself.

### *Recovery from Self Disabled state*

The AR feature will remain in the Self Disabled state indefinitely. It may be re-activated by the trip condition being reset by some other means, (ie. Manually by pressing the stop key on the GKP, or remotely using trip reset). Alternatively the AR feature may be re-enabled by setting **1469 AR Enable** to FALSE then back to TRUE.

### *Indication*

When the AR feature is activated the parameter **1507 AR Active** is set TRUE.

While a restart is pending the parameter **1508 AR Restart Pending** is set TRUE. In addition the green LED illuminating the run key on the GKP will flash.

All indicators are reset once the restart, (or trip reset), attempt has been completed or if the AR feature is disabled.

**Autotune****Setup:: Motor Control::Autotune****Parameters::Motor Control::Autotune**

The autotune is an automatic test sequence performed by the Drive to identify motor model parameters. The motor model is used by the Vector control modes.

If an induction motor is used, and the control mode is set to vector control, you **MUST** perform an autotune before operating the Drive. If the control mode is set to Open Loop (V/Hz) mode an autotune is not necessary. Whether the drive is in Vector Control mode or in Open Loop mode is determined by the parameter 0512 Control Strategy in menu Control Mode (see page D-40). Induction motor nameplate parameters must be entered before running the autotune procedures in order for them to correctly measure motor model parameters.

The motor must be allowed to spin freely. It is acceptable for the motor to be connected to a load during autotune, provided that the load is purely inertia, with negligible friction, and does not require the motor to produce torque in order to turn.

Sometimes it is not possible to spin the motor freely, for example it has already been connected to a machine and it is not convenient to uncouple it. In this case a stationary autotune must be carried out. Select Autotune Mode = STATIONARY. If you select stationary autotune, a parameter Nameplate Mag Current will appear. You must enter the motor magnetising current into this parameter before proceeding with the stationary autotune. Stationary autotune should be avoided if possible: first, because the magnetising current may not be accurate; second, because operation above base speed requires the rotating autotune to map the motor characteristics in the field weakening region, and if this is not done, operation may not be possible above base speed.

If a permanent magnet motor is used and there is no datasheet available from your motor provider, You **MUST** perform an autotune before operating the Drive in the Vector control mode . Before running the autotune, some PMAC Motor parameters should be set. Some are available on the motor nameplate :

- **0555 PMAC Max Speed** :motor rated speed
- **0557 PMAC Rated Current** : motor rated current
- **0558 PMAC Rated Torque** : motor rated torque
- **1387 PMAC Base Volts** : motor voltage
- **0556 PMAC Max Current** : motor max current ( if not known, set it to the same value as **0557 PMAC Rated Current**)
- **0559 PMAC Motor Poles** : motor number of poles ( should be an even number )
- **0564 PMAC Motor Inertia** : motor inertia : try to set good estimated value, the speed loop will use it for setting correct control parameters

If a permanent magnet motor is used and there is datasheet available from your motor provider, You must either perform an autotune before operating the Drive in the Vector control mode or enter the required motor parameters from the datasheet.

If a permanent magnet motor is used, setting the **0412 Stack Frequency** to 4kHz or less will help to better estimate the motor resistance ( **0562 PMAC Winding Resistance** ).

For best results it is better to carry out the autotune at the maximum speed that is likely to be required. If you run the autotune at a particular speed, the motor characteristics will be measured up to this speed, and estimated above this speed. If you later discover that you need to run the motor faster than this, you can do this up to twice the speed at which the autotune is carried out, but the values will not be so accurate, and the control may not be as good in this region. It is better to run another autotune at the higher speed. If you wish to run the motor at more than twice the speed at which the autotune was carried out, this will not be allowed. If in doubt, the autotune speed is recorded in the parameter Max Spd When Autotuned, described below.

## D-22 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Autotune Enable</b>	0255	Setup::Motor Control::Autotune Parameters::Motor Control::Autotune	FALSE			STOPPED
<p>Puts the autotune feature into a state where it will carry out the autotune when the drive is started.</p>						
<b>Autotune Mode</b>	0256	Same as PNO 255	1	0:STATIONARY 1:ROTATING		STOPPED
<p>Selects whether the autotune is carried out on a rotating motor, or whether it just calculates from nameplate data (not the preferred method). It may be necessary to carry out a stationary autotune if the motor is not free to rotate, for example if it is already connected to a machine. Leakage inductance (to tune the current loop) and stator resistance may be measured when the motor is stationary, but other parameters can only be inferred from nameplate data. Use the rotating autotune where possible.</p>						
<b>Nameplate Mag Current</b>	1550	Setup::Motor Control::Autotune Parameters::Motor Control::Autotune	1.00	0.01 to 1000.00	A	STOPPED
<p>This parameter will only become visible if Autotune Mode = STATIONARY is selected.</p> <p>If you select stationary autotune, you must enter the motor magnetising current into this parameter before proceeding with the stationary autotune. If this is not known, it can be approximated from the motor rated current and the power factor, as motor current times <math>\sqrt{1 - PF^2}</math>.</p> <p>The value of mag current entered here will be copied into the magnetising current parameter in the Induction Motor Data menu. If a rotating autotune is run at a later date, it will be replaced with the more accurate value, and this parameter will be irrelevant.</p>						
<b>Autotune Test Disable</b>	0257	Same as PNO 255	0000	0:Stator Resistance 1:Leakage Inductance 2:Magnetising Current 3:Rotor Time Constant 4:Encoder Direction		STOPPED
<p>This is only valid for induction motor autotune</p> <p>Allows selected tests to be disabled (default all tests are carried out).</p> <p>Each test can be individually disabled by setting to TRUE.</p>						

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>ATN PMAC Test Disable</b>	1388	Setup::Motor Control::Autotune Parameters::Motor Control::Autotune	0000	0:Stator Resistance 1:Leakage Inductance 2:KE Constant		STOPPED

This is only valid for Permanent magnet motor control  
 Allows selected tests to be disabled (default all tests are carried out).  
 Each test can be individually disabled by setting to TRUE.  
*Bitfield Value : Test*

<b>Autotune Ramp Time</b>	0274	Same as PNO 255	10.000	1.000 to 1000.000	s	STOPPED
---------------------------	------	-----------------	--------	-------------------	---	---------

Sets the ramp up time to motor base speed during autotune.

<b>ATN PMAC Ls Test Freq</b>	1405	Same as PNO 1388	100.0	0.0 to 500.0	Hz	STOPPED
------------------------------	------	------------------	-------	--------------	----	---------

This is only valid for Permanent magnet motor control  
 Set up the test frequency for the leakage inductance autotune of the permanent magnet motor control  
 0255 Autotune Ramp Time

<b>Max Spd when Autotuned</b>	1459	Parameters::Motor Control::Autotune	x.	-1 to 100000	RPM	NEVER
-------------------------------	------	-------------------------------------	----	--------------	-----	-------

This parameter records the value of the "100% speed in rpm" parameter at the time the autotune was carried out.  
 "100% speed in rpm" determines the max speed at which the motor can be commanded to run. When the autotune is carried out, it can only measure the motor characteristics up to this speed. Beyond this speed, the motor characteristics are filled in according to the best possible estimate, but are not necessarily accurate.  
 If at a later date the "100% speed in rpm" parameter is increased, then that will allow the motor to run in the region where the motor characteristics have been estimated, not measured. The further into this region the motor is allowed to run, the less accurate will be the motor characteristics and hence the control.  
 The user is allowed to increase "100% speed in rpm" up to 2 times the value stored in "Max Spd when Autotuned". Beyond this it is considered that the resulting control inaccuracy may be unacceptable. In this case, an error will be generated. If the user wishes to run the motor more than 2 times the value at which it was autotuned, then he must carry out a new autotune at the higher speed.

# D-24 Parameter Reference

## Functional Description

**IMPORTANT** *You MUST carry out an Autotune if you intend to use the drive in vector control mode. If you are using it in Volts/Hz control an Autotune is not necessary.*

Autotune can only be initiated from the “stopped” condition. When the test is complete, the stack is disabled and Autotune Enable is set to FALSE.

**Note** Refer to the Chapter 9: Setup Wizard for details on how to perform an Autotune.

### **Standard Autotune**

If an induction motor is fitted, the autotune will identify parameters as follows.

Parameter	Description	Note
MAG CURRENT	Magnetising current	Not measured by Stationary Autotune
STATOR RES	Per phase stator resistance	
LEAKAGE INDUC	Per phase stator leakage inductance	
MUTUAL INDUC	Per phase mutual inductance	
ROTOR TIME CONST	Rotor time constant	This will be identified while the motor is spinning, while measuring the magnetising current. If stationary autotune is selected, it will be identified from magnetising current and motor nameplate rpm

- ◆ The Rotating autotune sequence rotates the motor up to the user-programmed MAX SPEED (**Scale Setpoint** function) in order to identify these parameters. (A rotating autotune is required if the motor is to be operated above base speed).
- ◆ The Stationary autotune sequence does not rotate the motor and requires the correct value of MAG CURRENT to be entered. (Stationary Autotune should only be considered if rotating autotune is not possible to execute).

If a permanent magnet motor is fitted, the autotune will identify parameters as follows.

Parameter	Description	Note
STATOR RES	Phase to phase stator resistance	
LEAKAGE INDUC	Phase to phase stator leakage inductance	
KE CONSTANT	Back-emf constant	This will be identified while the motor is spinning. If stationary autotune is selected, it will be identified from motor nameplate parameters

- ◆ The Stationary autotune sequence does not rotate the motor and requires the correct permanent magnet nameplate value to be entered.
- ◆ The Rotating autotune sequence rotates the motor up to the half of the rated motor speed in order to identify these parameters.



**BACnet IP Option**

*Monitor::Communications::Option*

*Setup::Communications::Option*

*Parameters::Option Comms::Comms*

*Parameters::Option Comms::Write Process*

*Parameters::Option Comms::Option Ethernet*

*Parameters::Option Comms::BACnet IP*

[Refer to BACnet IP Technical Manual HA501939U001](#)

## D-26 Parameter Reference

### **BACnet MSTP Option**

*Monitor::Communications::Option*

*Setup::Communications::Option*

*Parameters::Option Comms::Comms*

*Parameters::Option Comms::Write Process*

*Parameters::Option Comms::BACnet MSTP*

[Refer to BACnet MSTP Technical Manual HA501940U001](#)

**Black Box****Parameters::Trips::Black Box Recorder**

The Black Box Recorder feature captures the state of the drive in the moments leading up to a trip, and at the moment of the trip. This data is saved in the drive's internal memory. The captured data may be transferred to an SD card for investigation.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Black Box PNOs[0]</b>	1831	Parameters::Trips::Black Box Recorder	0829	0000 to 3131		ALWAYS
<b>Black Box PNOs[1]</b>	1832	Parameters::Trips::Black Box Recorder	0514	0000 to 3131		ALWAYS
<b>Black Box PNOs[2]</b>	1833	Parameters::Trips::Black Box Recorder	1022	0000 to 3131		ALWAYS
<b>Black Box PNOs[3]</b>	1834	Parameters::Trips::Black Box Recorder	0393	0000 to 3131		ALWAYS

Select up to four parameters that are recorded leading up to a trip along with the fixed set of data.

<b>Copy to SD Card</b>	1829	Parameters::Trips::Black Box Recorder	FALSE			ALWAYS
------------------------	------	---------------------------------------	-------	--	--	--------

When a usable SD Card is inserted in the drive, changing this parameter from FALSE to TRUE will start the process of copying the black box records from internal memory to the SD card. Each record is created as a separate file on the SD card.

Once started, the copy process will continue until all the records have been transferred, this can take up to a minute. To ensure that the ERROR status is correctly displayed, it is recommended that this value is left at TRUE until the copy has completed.

This parameter is not saved. It is initialised to FALSE when the drive powers on.

<b>Copy Status</b>	1852	Parameters::Trips::Black Box Recorder		0:IDLE 1:ACTIVE 2:ERROR		NEVER
--------------------	------	---------------------------------------	--	-------------------------------	--	-------

Indicates the status of the copy process. Once the copy is complete the status will return to IDLE. The ERROR status is cleared on changing the parameter "Clone to SD Card" back to FALSE.

**Functional Description**

Refer to chapter 10 "Trips and Fault Finding" for further information.

# D-28 Parameter Reference

## Braking

### *Parameters::Motor Control::Braking*

The braking function controls the rate at which energy from a regenerating motor is dumped into a resistive load. This dumping prevents the dc link voltage reaching levels which would cause an Overvoltage trip.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Braking Enable</b>	0249	Parameters::Motor Control::Braking	TRUE			ALWAYS
Enables operation of the dynamic braking feature.						
<b>Brake Resistance</b>	0251	Parameters::Motor Control::Braking	100.00	0.01 to 1000.00	Ohm	STOPPED
The value of the dynamic braking load resistance.						
<b>Brake Rated Power</b>	0252	Parameters::Motor Control::Braking	0.10	0.10 to 510.00	kW	STOPPED
The power that the load resistance may continually dissipate.						
<b>Brake Overrating</b>	0253	Parameters::Motor Control::Braking	25.00	1.00 to 40.00		STOPPED
Multiplier that may be applied to <b>Brake Power</b> for power overloads lasting no more than 1 second.						
<b>Braking Active</b>	0254	Parameters::Motor Control::Braking				NEVER
A read-only parameter indicating the state of the brake switch.						


#### Functional Description

When enabled, the **Braking** feature monitors the internal dc link voltage every millisecond and sets the state of the brake switch accordingly. When using braking, the brake resistor information must be entered it ordered for the resistor protection to operate.

The **Braking** feature operates even when the motor output is not enabled. This allows the function to continually monitor the energy dumped into the braking resistor, and the energy dissipated across the brake switch. With this information the Drive is able to deduce the loading on the brake resistor.

If the instantaneous braking power is greater than the Brake Rated Power parameter then this overload is accumulated. If the overload area (power excess x time) reaches the level set in the Brake Overrating parameter then the brake switch is automatically disabled. This can then lead to an overvoltage trip protecting the inverter.

The voltage level at which braking occurs is nominally 764V, but rises linearly to 773V as the overload area rises to the Brake Overrating limit. This improves the brake energy sharing in a multi-brake common d.c. bus system, which can be effected by variation in the exact braking voltage level in each inverter.

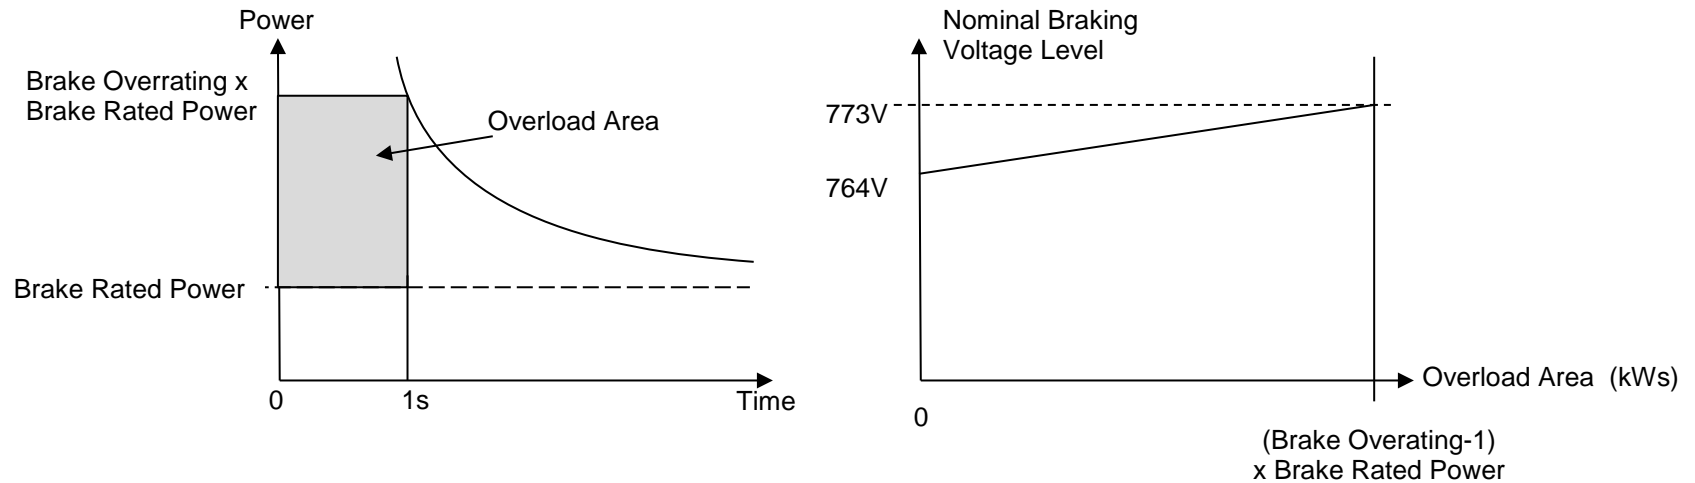

The **Braking** feature also provides a control signal that is used by the **Slew Rate** limit feature. This causes the setpoint to be temporarily frozen whenever the brake is operating because the dc link voltage exceeds the internal comparison level. This allows the stop rate to be automatically tuned to the characteristics of the load, motor, Drive and brake resistor.

## D-30 Parameter Reference

### CANopen Option

*Monitor::Communications::Option*

*Setup::Communications::Option*

*Parameters::Option Comms::Comms*

*Parameters::Option Comms::Read Process*

*Parameters::Option Comms::Write Process*

*Parameters::Option Comms::Event*

*Parameters::Option Comms::CANopen*

[Refer to CANopen Technical Manual HA501841U001](#)

**Clone****Setup::Clone****Parameters::Device Manager::Clone**

The clone feature allows the drive configuration (application and parameters) to be saved to an SD card and subsequently loaded to the same or a different drive.

All parameters fall into one of the following cloning categories listed in the parameter table at the end of this appendix:

- **Never:** This type of parameter would never be copied to a new drive. This category includes parameters that are not saved and parameters that contain information such as runtime statistics.
- **Drive Unique:** This type of parameter is normally unique to the drive, such as the drive name.
- **Power:** This type of parameter is related to the power stack of the drive or to the motor connected to the drive.
- **Other:** Any saved parameter that is not in the other cloning categories. This category is the majority of the parameters including the application parameters.

The visibility of the following cloning parameters on the GKP may depend on the selection of other cloning parameters and whether an SD card is fitted.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Clone Filename</b>	1534	Setup::Clone Parameters::Device Manager::Clone	clone			ALWAYS

The filename used for saving or loading the clone file. The file extension for clone files is “.cln” and will be added to the filename if it is not provided by the user.

A single file contains the information for the parameters and the application.

<b>Clone Direction</b>	1537	Same as PNO 1534	0	0:SAVE TO FILE 1:LOAD FROM FILE		ALWAYS
------------------------	------	------------------	---	------------------------------------	--	--------

Sets whether a clone save or a clone load should be performed.

## D-32 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Full Restore</b>	1538	Same as PNO 1534	0	0:YES 1:PARTIAL		ALWAYS

If the parameter **1537 Clone Direction** is set to LOAD FROM FILE, then the parameter **Full Restore** determines if a full restore or a partial restore is required from the file specified.

If YES is chosen then all the saved parameters and the saved application will be loaded including 'drive unique' parameters.

If PARTIAL is chosen then the user has the choice of what to restore, however 'drive unique' parameters will keep their current values. The following clone parameters apply:

### **1539 Application**

### **1541 Power Parameters**

### **1540 Other parameters**

*Notes:*

*If the power stack of the drive is different to the power stack from which the clone file was saved and the user chooses YES then the clone load will not be permitted. However the clone load will be permitted if the control module on which the user is restoring is not attached to a power stack, or if PARTIAL is chosen instead.*

*The power parameters cannot be restored from a clone file that was saved on a control module with the parameter **0989 Power Stack Required** set to NONE.*

---

<b>Application</b>	1539	Same as PNO 1534	0	0:LOAD FROM FILE 1:LEAVE CURRENT APP		ALWAYS
--------------------	------	------------------	---	---	--	--------

If the parameter **1538 Full Restore** is set to PARTIAL, then the parameter **Application** allows the user to either load the application from the file or to leave the currently installed application.

---

<b>Power Parameters</b>	1541	Same as PNO 1534	0	Same as PNO 1540		ALWAYS
-------------------------	------	------------------	---	------------------	--	--------

If the parameter **1538 Full Restore** is set to PARTIAL, then the parameter **Power Parameters** allows the user to load the 'power' parameters from the file, leave the current values or set the values to the defaults.

*Notes:*

*If the power stack of the drive is different to the power stack from which the clone file was saved **and** the user chooses LOAD FROM FILE then the clone load will not be permitted. However the clone load will be permitted if the control module on which the user is restoring is not attached to a power stack, or if LEAVE CURRENT VALUES or SET TO DEFAULT VALUES is chosen instead.*



Parameter Name	No.	Path	Default	Range	Units	Writable
----------------	-----	------	---------	-------	-------	----------

The power parameters cannot be restored from a clone file that was saved on a control module with the parameter **0989 Power Stack Required** set to NONE.

Enumerated Value : Power Parameters

- 0 : LOAD FROM FILE
- 1: LEAVE CURRENT VALUES
- 2 : SET TO DEFAULT VALUES

<b>Other Parameters</b>	1540	Same as PNO 1534	0	0:LOAD FROM FILE 1:LEAVE CURRENT VALUES 2:SET TO DEFAULT VALUES		ALWAYS
-------------------------	------	------------------	---	---	--	--------

If the parameter **1538 Full Restore** is set to PARTIAL, then the parameter **Other Parameters** allows the user to load the 'other' parameters from the file, leave the current values or set the values to the defaults.

Enumerated Value : Power Parameters

<b>Clone Start</b>	1542	Same as PNO 1534	FALSE			ALWAYS
--------------------	------	------------------	-------	--	--	--------

When TRUE this parameter starts the cloning process, either saving or loading depending on the parameter **1537 Clone Direction**.

The cloning process will only start if the parameter **1543 Clone Status** is IDLE.

Once the cloning has completed the parameter **1543 Clone Status** will be DONE. Set the Clone Start parameter back to FALSE to return to the IDLE state.

## D-34 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
Clone Status	1543	Same as PNO 1534		0:IDLE 1:SAVING 2:RESTORING 3:VERIFYING 4:DONE 5:CANNOT START 6:FAILED 7:NO SD CARD 8:VERIFY FAILED 9:FILE NOT OPENED 10:FILE INCOMPATIBLE 11:FILE FAILURE 12:POWER MISMATCH 13:APPLICATION FAILURE 14:PARAMETERS FAILURE		NEVER

This parameter indicates the status of the cloning process.

*Enumerated Value : Power Parameters*

- |                  |   |
|------------------|---|
| 0 : IDLE         | - waiting for the user to start the cloning process.  |
| 1 : SAVING       | - in the process of saving the drive configuration to file.                                   |
| 2 : RESTORING    | - in the process of loading the configuration from file.                                      |
| 3 : VERIFYING    | - in the process of verifying the clone file either before a load or after a save.            |
| 4 : DONE         | - the cloning process has completed successfully either for a load or a save.                 |
| 5 : CANNOT START | - the cloning process cannot start. When restoring a configuration the drive must be stopped. |
| 6 : FAILED       | - general failure of the cloning process.   |
| 7 : NO SD CARD   | - no SD card is fitted.   |
| 8 :RS FAILURE    | - could not restore the parameters. E.g. the parameters are missing from the clone file.      |

Notes:

- 1) The clone file only contains the parameters that were stored in non-volatile memory on the drive when a clone save was performed. When performing a clone load and a full restore is performed or a LOAD FROM FILE is used for the parameters, then any parameter not previously saved in the file will be set to its defaults.
- 2) Each application parameter is restored only if the parameter definition on the target drive matches the saved parameter.
- 3) The clone saving process will take between 3 – 15 seconds depending on the type of SD card used.
- 4) When saving a file with the same filename as an existing file on the SD card, the existing file will be overwritten. To prevent this, use a PC to set the read-only attribute of the file.
- 5) During the clone loading process the GKP screen may blank momentarily.

**Communications Options**

**Monitor::Communications::Option**  
**Setup::Communications::Option**  
**Parameters::Option Comms::Comms**  
**Parameters::Option Comms::Event**  
**Parameters::Option Comms::Read Process**  
**Parameters::Option Comms::Write Process**  
**Parameters::Option Comms::Option Ethernet \***

Refer to any of the following Technical Manuals:

Product Code	Description	Part Number
7003-PB-00	Profibus DP-V1	HA501837U001
7003-PN-00	PROFINET IO *	HA501838U001
7003-DN-00	DeviceNet	HA501840U001
7003-CN-00	ControlNet	HA501936U001
7003-CB-00	CANopen	HA501841U001
7003-IP-00	EtherNet IP *	HA501842U001
7003-EC-00	EtherCAT	HA501938U001
7003-BI-00	BACnet IP *	HA501939U001
7003-BN-00	BACnet MSTP	HA501940U001
7003-RS-00	Modbus RTU	HA501839U001
7003-IM-00	Modbus TCP *	HA501937U001

# D-36 Parameter Reference

## Configure, (Phase Control)

### Parameters::Phase Control::Configure

Used to select Master and slave encoder source.

Gives a diagnostics of the configuration related to the encoder selection for the motor control, the Master ( Reference ) and the Slave.

Parameter Name	No.	Path	Default	Range	Units	Writable
Master Position Src	1745	Parameters::Phase Control::Configure	3	0:MAIN SPD FEEDBACK 1:SYSTEM BOARD SLOT 1 2:SYSTEM BOARD SLOT 2 3:NONE		STOPPED
Specifies the encoder to be used as the Master, (Reference) input :						
<ul style="list-style-type: none"><li>MAIN SPEED FEEDBACK: corresponds to the I/O feedback option</li><li>SYSTEM BOARD SLOT 1: corresponds to the Slot 1 of the system board option</li><li>SYSTEM BOARD SLOT 2: corresponds to the Slot 2 of the system board option</li><li>NONE : no Master selected</li></ul>						
Slave Position Src	1744	Parameters::Phase Control::Configure	0	0:SAME AS MOTOR FBK 1:MAIN SPD FEEDBACK 2:SYSTEM BOARD SLOT 1 3:SYSTEM BOARD SLOT 2		STOPPED
Specifies the encoder to be used as the Slave input. Normally this will be the same as the speed feedback.						
<ul style="list-style-type: none"><li>SAME AS MOTOT FBK : the Slave encoder is the encoder used as the motor feedback.</li><li>MAIN SPEED FEEDBACK : corresponds to the I/O feedback option</li><li>SYSTEM BOARD SLOT 1 : corresponds to the Slot 1 of the system board option</li><li>SYSTEM BOARD SLOT 2 : corresponds to the Slot 2 of the system board option</li></ul>						
By default, the value SAME AS MOTOT FBK is selected.						
<b><i>If the Slave and the Motor Feedback are the same encoder, use SAME AS MOTOT FBK, otherwise, an error 301 or 302 or 303 will occur : Motor speed feedback and position feedback ( slave ) cannot be the same.</i></b>						
Setup Successful	1749	Parameters::Phase Control::Configure				NEVER
The configuration of the master, slave and Speed loop encoders is correct						

Parameter Name	No.	Path	Default	Range	Units	Writable
Error Number	1750	Parameters::Phase Control::Configure		-32768 to 32767		NEVER
<p>Indicates the nature of the fault giving an error</p> <ol style="list-style-type: none"> <li>0. No error. SetUpSuccessful is TRUE</li> <li>1. Feedback vector mode selected, but speed feedback source set to NONE</li> <li>2. Encoder feedback requested via the I/O option encoder board, but no hardware is fitted.</li> <li>3. Encoder feedback requested via System Board Encoder Slot1, but no system board is fitted.</li> <li>4. Encoder feedback requested via System Board Encoder Slot2, but no system board is fitted.</li> <li>5. Reference encoder requested via the I/O option encoder board, but no hardware is fitted.</li> <li>6. Reference encoder requested via System Board Encoder Slot1, but no hardware is fitted.</li> <li>7. Reference encoder requested via System Board Encoder Slot2, but no system board is fitted.</li> <li>8. Position loop feedback requested via the I/O option encoder board, but no hardware is fitted.</li> <li>9. Position loop feedback requested via System Board Encoder Slot1, but no system board is fitted.</li> <li>10. Position loop feedback requested via System Board Encoder Slot2, but no system board is fitted.</li> <li>101. Conflict between selected motor speed feedback and position reference (cannot be the same!) : I/O option encoder board</li> <li>102. Conflict between selected motor speed feedback and position reference (cannot be the same!) : System Board Encoder Slot1</li> <li>103. Conflict between selected motor speed feedback and position reference (cannot be the same!) : System Board Encoder Slot2</li> <li>201. Conflict between selected position reference and position feedback (cannot be the same!) : I/O option encoder board</li> <li>202. Conflict between selected position reference and position feedback (cannot be the same!) : System Board Encoder Slot1</li> <li>203. Conflict between selected position reference and position feedback (cannot be the same!) : System Board Encoder Slot2</li> <li>301. Conflict between selected motor speed feedback and position feedback (cannot be the same!) : I/O option encoder board</li> <li>302. Conflict between selected motor speed feedback and position feedback (cannot be the same!) : System Board Encoder Slot1</li> <li>303. Conflict between selected motor speed feedback and position feedback (cannot be the same!) : System Board Encoder Slot2</li> </ol>						
Master Encoder	1751	Parameters::Phase Control::Configure		0:EMPTY FUNC 1:ESTIMATOR 2:PRIMARY 3:SYSTEM BOARD SLOT 1 4:SYSTEM BOARD SLOT 2 5:OTHER		NEVER
<p>Diagnostic giving the encoder set up as the master encoder</p> <ul style="list-style-type: none"> <li>• SB SLOT1</li> <li>• SB SLOT2</li> <li>• PRIMARY ( I/O option encoder board )</li> </ul>						
Slave Encoder	1752	Parameters::Phase Control::Configure		Same as PNO 1751		NEVER
<p>Diagnostic giving the encoder set up as the slave encoder</p> <ul style="list-style-type: none"> <li>• SB SLOT1</li> <li>• SB SLOT2</li> <li>• PRIMARY (I/O option encoder board)</li> </ul>						

## D-38 Parameter Reference

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
Spd Loop Encoder	1753	Parameters::Phase Control::Configure		Same as PNO 1751		NEVER

Diagnostic giving the encoder set up for the speed loop control

- SB SLOT1
  - SB SLOT2
  - PRIMARY (I/O option encoder board)
-

**Control Mode****Setup:: Motor Control::Control & Type:: Control Strategy****Parameters::Motor Control::Control & Type::Control Strategy**

The control mode block provides the means for selecting the type of motor and the desired method of controlling the motor.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Motor Type</b> or AFE	0511	Setup::Motor Control::Control and Type Setup::Regen Control Parameters::Control Mode::Control Mode	0	0:INDUCTION MOTOR 1:PMAC MOTOR 2:AFE		STOPPED
<p>Motor type selection parameter</p> <p>Allows the user to select the type of motor.</p>						
<b>Control Strategy</b>	0512	Setup::Motor Control::Control and Type Parameters::Control Mode::Control Mode	0	0:VOLTS - HERTZ CONTROL 1:VECTOR CONTROL		STOPPED
<p>This parameter will only become visible if an induction motor is selected. If a PMAC motor is selected, the Control Strategy will automatically be set to Vector Control.</p> <p>Select control strategy selection parameter.</p> <p>Allows the user to select the method of controlling the motor.</p>						
<b>Control Type</b>	1533	Setup::Motor Control::Control and Type Parameters::Control Mode::Control Mode	0	0:SENSORLESS 1:ENCODER FEEDBACK		STOPPED
<p>AC30V : This parameter will only become visible if an induction motor is selected, Control Strategy is set to Vector Control, and the encoder option is fitted. If the encoder option is not fitted, the control strategy is forced to be sensorless.</p> <p>AC30P/D: This parameter will only become visible if Control Strategy is set to Vector Control. If the encoder option is not fitted, selecting ENCODER FEEDBACK will give a trip.</p> <p>This parameter allows selects between sensorless control, and control using encoder feedback.</p> <p>If an encoder feedback is available, it would normally be the preferred choice as it gives better speed control and higher performance.</p>						

## D-40 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Control Type</b>	1533	Setup::Motor Control::Control and Type	0	0:MAIN SPD FEEDBACK		STOPPED
	1743	Parameters::Control Mode::Control Mode		1:SYSTEM BOARD SLOT 1 2:SYSTEM BOARD SLOT 2 3:NONE		

This parameter will only become visible if Control Strategy is set to Vector Control and Control Type is set to Encoder Feedback, and the drive is an AC30P/D

The parameter selects between encoder inputs :

MAIN SPD FEEDBACK : encoder option fitted or resolver option fitted. It corresponds to the option fitted in the I/O options. If selected, the I/O option has to be set up in the corresponding option ( Resolver or Encoder )

SYSTEM BOARD SLOT 1 : encoder connected on SLOT1 if AC30D

SYSTEM BOARD SLOT 2 : encoder connected on SLOT 2 if AC30D

NONE : no encoder connected – corresponds to SENSORLESS control selected

If an encoder is available, encoder feedback control would normally be the preferred choice as it gives better speed control and higher performance.

### Functional Description

The motor selection is the first step in setting the control mode.

The selection of control strategy comes next, with the permitted settings as follows:

- Induction motors can be run in either volts hertz mode or vector mode
- Permanent magnet motors can only be run in vector control mode

If vector control is selected, and an encoder option or a resolver option is fitted, it is then necessary to choose whether to select vector control with encoder feedback for improved performance.



**ControlNet Option**

*Monitor::Communications::Option*

*Setup::Communications::Option*

*Parameters::Option Comms::Comms*

*Parameters::Option Comms::Read Process*

*Parameters::Option Comms::Write Process*

*Parameters::Option Comms::Event*

*Parameters::Option Comms::ControlNet*

[Refer to ControlNet Technical Manual HA501936U001](#)

# D-42 Parameter Reference

## Current Limit

### Parameters::Motor Control::Current Limit

Designed for all Motor Control Modes

This function allows you to set the maximum level of motor rated current (as a % of the user-set **Motor Current**) which is allowed to flow before current limit action occurs. If the measured motor current exceeds the current limit value with a motoring load, the motor speed is reduced to control the excess load. If the measured motor current exceeds the current limit value with a regenerating load, the motor speed is increased up to a maximum of **100% Speed in RPM (Scale Setpoint)**.

The maximum value of current limit for a particular motor is limited by the AC30V current rating.

If a motor of larger rating than the AC30V is connected, then the current limit max value is limited by the AC30V current rating.

If a motor of lower rating than the AC30V is connected, then the current limit max value is limited to 300% (if compatible with the AC30V current rating) for an induction motor (IM) and to the ratio **PMAC Max Current** to **PMAC Rated Current** for a PMAC motor.

% are always expressed as % of the user set **Motor Current** (rated current of PMAC or IM Motor).

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Current Limit</b>	0305	Setup::Motor Control::Control and Type Parameters::Motor Control::Current Limit	150.0	0.0 to 600.0	%	ALWAYS

This parameter sets the level of motor current, as a % of **Motor Current** (refer to the relevant MOTOR definition , PMAC or IM function) at which the Drive begins to take current limit action.


<b>Regen Limit Enable</b>	0307	Parameters::Motor Control::Current Limit	TRUE			ALWAYS
---------------------------	------	--	------	--	--	--------

This parameter enables or disables regenerative current limit action.

*Note that this parameter only works in open-loop VOLTS / Hz motor control mode.*

### Functional Description

Internal limit : output of the Stack Inv Time module + reduction as a function of electrical low speed (< 3Hz ) and as function of heatsink temperature

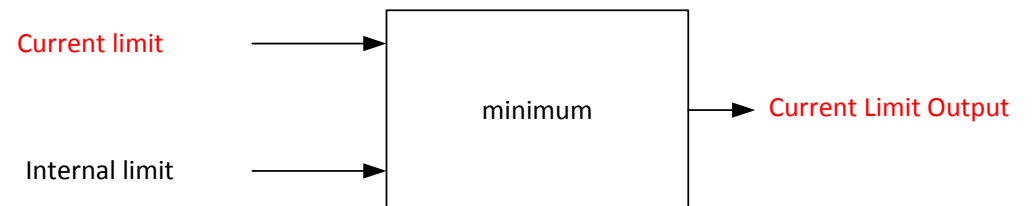

## Current Loop

**Setup:: Motor Control::Control & Type:: Motor Type**

**Parameters::Motor Control::Control Loop**

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Enable Predict Term</b>	0955	Parameters::Motor Control::Current Loop	TRUE			ALWAYS

To enable the predictive term of the current loop.

---

### Functional Description

This is to add the predictive term into the voltage demand formulated by the current regulator so to increase the dynamic performance of motor drive. It is recommended to enable this parameter if the permanent magnet motor is used.

# D-44 Parameter Reference

## Current Sensor Trip

### *Parameters::Trips::Current Sensor Trip*

This function contains parameters associated to the missing current sensor detection and trip condition

<i>Parameter Name</i>	<i>No.</i>	<i>Path</i>	<i>Default</i>	<i>Range</i>	<i>Units</i>	<i>Writable</i>
<b>Current Diff Level</b>	1658	Parameters::Trips::Current Sensor Trip	25.00	0.00 to 100.00	%	ALWAYS

The percentage of motor rated current which, if exceeded by difference between RMS values of two current sensor measurements, causes this trip to become active. This trip detects missing, or broken connections in the current sensing circuitry that result in loss of measurement of one sensor. Enabled in V/Hz mode of operation only.

---

**Data Logger****Parameters::Device Manager::Data Logger**

Regularly log the value of the selected parameters to the SD Card

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Log Enable</b>	1835	Parameters::Device Manager::Data Logger	FALSE			ALWAYS
Set to TRUE to enable the data logger						
<b>Log Period</b>	1836	Parameters::Device Manager::Data Logger	1.000	0.500 to 86400.000	s	ALWAYS
Defines the period between each set of data. The maximum value is equivalent to 24 hours.						
<b>Log File Name</b>	1837	Parameters::Device Manager::Data Logger	logfile_			ALWAYS
Defines the first characters of the log file name. The Data Logger automatically appends this name with a 4 digit sequence number and the extension “.csv”.						
<b>Log to New File</b>	1838	Parameters::Device Manager::Data Logger	FALSE			ALWAYS
On a change from FALSE to TRUE the Data Logger creates a new log file and starts saving data to this. The log file sequence number is automatically incremented each time a new file is created.						
<b>Log New File On Reset</b>	1839	Parameters::Device Manager::Data Logger	FALSE			ALWAYS
If TRUE the Data Logger will create a new log file each time the drive is powered up.						
<b>Limit Log File Size</b>	1840	Parameters::Device Manager::Data Logger	FALSE			ALWAYS
When TRUE the data logger limits the maximum log file size to 10 M Bytes. When this size is reached the Data Logger creates a new log file and starts saving data to this. The log file sequence number is automatically incremented each time a new file is created.						

# D-46 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
Log Parameters[0] to Log Parameters[7]	1843 to 1850	Parameters::Device Manager::Data Logger	0000	0000 to 3131		ALWAYS

Defines up to 8 parameters to log.

Log File Size	1841	Parameters::Device Manager::Data Logger				NEVER
---------------	------	---	--	--	--	-------

The size of the currently active log file. This may be used in the application together with “1836 Log to new File” to force the Data Logger to create a new log file when the current file reaches an arbitrary size. This value is zero when **1835 Log Enable** is FALSE.

## Functional Description

The Log file is designed to be easy to read in either a text editor or a spreadsheet application, such as Microsoft Excel. The file format has the extension “csv” which stands for Comma Separated Variables.

Once each period, the drive records the nominated parameter values and writes these to a line in the log file. The data values are separated by columns, and the line is terminated with a carriage return line feed.

Below is an example configuration for the Data Logger.

Home ► Parameters ► Device Manager ► Data Logger Refresh

1835: Log Enable  Set

1836: Log Period 1.0 s Set

1837: Log File Name logfile\_ Set

1838: Log to New File  Set

1839: Log New File On Reset  Set

1840: Limit Log File Size  Set

1842: Log Parameters -

000: 0392 DC Link Voltage Set

001: 0393 Actual Speed RPM Set

002: 0406 CM Temperature Set

003: 0407 Heatsink Temperature Set

004: 0000 Set

005: 0000 Set

006: 0000 Set

007: 0000 Set

1841: Log File Size 0

The first few rows of the log file corresponding to this setting would be:

```
Serial Number,123456789012345
Date and Time,Notes,392 DC Link Voltage,393 Actual Speed RPM,406 CM Temperature,407 Heatsink Temperature,,,,,
2016/02/20 10:19:20.279,Continuation,643.6444,0.0000,31.0000,60.0364,,,,,
2016/02/20 10:19:21.274,,643.6700,0.0000,31.0000,60.0397,,,,,
2016/02/20 10:19:22.274,,643.7726,0.0000,31.0000,60.0397,,,,,
2016/02/20 10:19:23.274,,643.6445,0.0000,31.0000,60.0429,,,,,
2016/02/20 10:19:24.279,,643.6444,0.0000,31.0000,60.0405,,,,,
```

When viewed in Excel the data is organized into columns:

	A	B	C	D	E	F
1	Serial Number	123456789012345				
2	Date and Time	Notes	392 DC Link Voltage	393 Actual Speed RPM	406 CM Temperature	407 Heatsink Temperature
3	20/02/2016 10:19:20.279	Continuation	643.6444	0	31	60.0364
4	20/02/2016 10:19:21.274		643.67	0	31	60.0397
5	20/02/2016 10:19:22.274		643.7726	0	31	60.0397
6	20/02/2016 10:19:23.274		643.6445	0	31	60.0429
7	20/02/2016 10:19:24.279		643.6444	0	31	60.0405

- Row 1            The control module serial number
- Row 2            column headings
- Row 3...        Time stamp, Notes and the data points.

**Time stamp**

The Time stamp format depends whether the parameter **1186 Time and Date** is valid and updating. This will typically be the case if an option with a Real Time Clock is fitted. It is also possible to keep this parameter valid over Ethernet. If the time and date is valid the time stamp will be in the format illustrated above. To display this format correctly in Excel it may be necessary to force the format of this column to be Custom, using this format string: "dd/mm/yyyy hh:mm:ss.000".

If the time and date value is not valid, the time stamp will be the age of the control card, expressed as a value in seconds with three decimal places, (giving resolution to one milli-second).

**Notes**

The notes column indicates a log event. The notes are:

Note	Description
Power On	Power has been applied to the control module.
Log Start	Log Enable changed from FALSE to TRUE.
Continuation	A new log file has been created due to: <ul style="list-style-type: none"> <li>• changing <b>1838: Log to New File</b> from FALSE to TRUE</li> <li>• file size exceeding 10 MB and <b>1840: Limit Log File Size</b> is TRUE.</li> </ul>
Changed setup	A change to one or more of the selected parameters to log. This also causes a new log file to be created.
New file name	A change to the file name, causing a new log file to be created.

**Data values**

The output data values are organized into columns with a header in row 2 indicating the parameter number and name. The values are output in a formate determined by the parameter data type. String data types are not supported. Enumerated data types are output as integers, with 0 corresponding to the first enumeration in the list.

# D-48 Parameter Reference

## DC Link Volts Limit

### Parameters::Motor Control::DC Link Volts Limit

This function prevents over-voltage faults occurring due to a rapidly changing setpoint.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>VDC Lim Enable</b>	1641	Parameters::Motor Control::DC Link Volts Limit	FALSE			STOPPED
Enable <b>DC Link Volts Limit</b> during a fast deceleration to prevent overvoltage trip						
<b>VDC Lim Level</b>	1642	Parameters::Motor Control::DC Link Volts Limit	91.0	78.0 to 100.0	%	STOPPED
Determines the dc link volts at which the <b>DC Link Volts Limit</b> sequence is started. Entered as a percentage of the max DC link voltage (drive overvoltage level = 100%).						
<b>VDC Lim Active</b>	1643	Parameters::Motor Control::DC Link Volts Limit				NEVER
Set True when the deceleration ramp is paused in order to limit the DC link voltage						
<b>VDC Lim Output</b>	1644	Parameters::Motor Control::DC Link Volts Limit	x.x	Min to Max	Hz	NEVER
This diagnostic represents the speed setpoint output of the <b>DC Link Volts limit</b> Feature in Electrical Hz						




**Functional Description**

During a fast deceleration, the kinetic energy of the motor load is regenerated to the drive, charging the DC link capacitors. When the **VDC Lim Level** is reached, the speed setpoint is held, waiting for the DC link to go below **VDC Lim Level**. When the DC link falls below this level, the speed setpoint is released and is ramped down using system ramp deceleration. This sequence is run until the speed setpoint reaches the user speed demand.

By Default, **VDC Lim Level** is set to the same value as the braking threshold.

This feature is run at a rate of 1 milli-second.

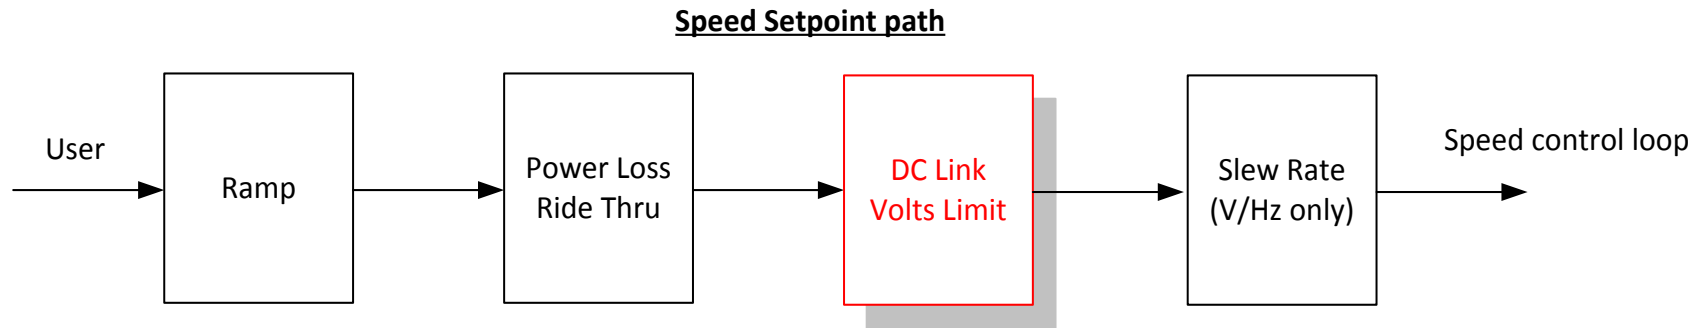

# D-50 Parameter Reference

## Device Commands

### Parameters::Device Manager::Device Commands

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Update Firmware</b>	1002	Parameters::Device Manager::Device Commands	FALSE			STOPPED

This parameter is only visible when an SD card with a firmware update file is inserted into the drive. Changing this parameter to TRUE will start the firmware update procedure.

Following a firmware update it is advisable to power re-run the Setup Wizard, D-61

---

<b>Save All Parameters</b>	1001	Parameters::Device Manager::Device Commands	FALSE			ALWAYS
----------------------------	------	---	-------	--	--	--------

When a parameter is modified via the GKP or via the built-in web page the parameter value is saved automatically. When a parameter is modified via another source, (for example via the Modbus TCP/IP communications protocol), the value will not be saved automatically. In this case a save may be instigated by changing this parameter from FALSE to TRUE.

---

**Device State****Parameters::Device Manager::Device State**

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Target State</b>	0988	Parameters::Device Manager::Device State		3:PREOPERATIONAL 7:OPERATIONAL		STOPPED
The requested operating state. This may be set from the Web Page or GKP. The PDQ configuration tool changes the operating state of the drive using a different mechanism.						
<b>Actual State</b>	0989	Parameters::Device Manager::Device State		0:INITIALISING 1:INITIALISED 2:PREPARING PREOP 3:PREOPERATIONAL 4:PREPARING OP 5:FAILED TO READY 6:READY FOR OP 7:OPERATIONAL 8:FAULTED 9:FATAL ERROR RECOVER		NEVER
Reports the actual operating state of the drive.						
<b>Application FE State</b>	0990	Parameters::Device Manager::Device State		Same as PNO 989		NEVER
<b>Base IO FE State</b>	0991	Parameters::Device Manager::Device State		Same as PNO 989		NEVER
<b>Basic Drive FE State</b>	0992	Parameters::Device Manager::Device State		Same as PNO 989		NEVER
<b>Ethernet FE State</b>	0993	Parameters::Device Manager::Device State		Same as PNO 989		NEVER
<b>Keypad FE State</b>	0994	Parameters::Device Manager::Device State		Same as PNO 989		NEVER
<b>Comms Option FE State</b>	0995	Parameters::Device Manager::Device State		Same as PNO 989		NEVER

## D-52 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>IO Option FE State</b>	0996	Parameters::Device Manager::Device State		Same as PNO 989		NEVER
<b>System Board FE State</b>	1742	Parameters::Device Manager::Device State		Same as PNO 989		NEVER

The parameters above indicate the state of individual components, (or Functional Elements), within the drive. They may help with fault finding if the drive ever fails to enter the normal Operational state.

<b>Config Fault Area</b>	0997	Parameters::Device Manager::Device State		0:NONE 1:POWER STACK 2:OPTION IO 3:OPTION COMMS 4:APPLICATION 5:MOTOR CONTROL 6:KEYPAD 7:BASE COMMS 8:BASE IO 9:FEEDBACK MISSING 10:SYSTEM BOARD		NEVER
--------------------------	------	--	--	--	--	-------

Indicates which component within the drive is preventing the drive from entering the normal Operational state.

<b>RTA Code</b>	0998	Monitor::Trips Parameters::Device Manager::Device State				NEVER
-----------------	------	--	--	--	--	-------

Run Time Alert fault code, indicates a fault in the hardware or configuration, typically detected during power on initialization. Refer to chapter 10, Trips and Fault Finding.

<b>RTA Data</b>	0999	Same as PNO 998				NEVER
-----------------	------	-----------------	--	--	--	-------

Data associated with a Run Time Alert.

**DeviceNet Option**

*Monitor::Communications::Option*  
*Setup::Communications::Option*  
*Parameters::Option Comms::Comms*  
*Parameters::Option Comms::Read Process*  
*Parameters::Option Comms::Write Process*  
*Parameters::Option Comms::Event*  
*Parameters::Option Comms::ControlNet*

[Refer to DeviceNet Technical Manual HA501840U001](#)

# D-54 Parameter Reference

## Drive info

**Setup::Environment**

**Parameters::Device Manager::Drive info**

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Drive Name</b>	0961	Setup::Environment Parameters::Device Manager::Drive info				ALWAYS
A string value that may be used to identify this drive in a system.						
<b>Firmware Version</b>	1100	Parameters::Device Manager::Drive info				NEVER
The version of the firmware running in the Control Module.						
<b>Boot Version</b>	0951	Parameters::Device Manager::Drive info				NEVER
The version of the boot loader firmware running in the Control Module, presented as a text string.						
<b>Boot Version Number</b>	0687	Parameters::Device Manager::Drive info				NEVER
The version of the boot loader firmware running in the Control Module.						
<b>Power Stack Required</b>	0987	Parameters::Device Manager::Drive info	0	Same as PNO 543		CONFIG
The rating of the power electronics for the configuration loaded in the drive. If 0987 Power Stack Required is different from 0543 Power Stack Fitted the drive will be prevented from operating normally until the configuration is corrected.						
<b>Power Stack Fitted</b>	0543	Parameters::Device Manager::Drive info		0:NONE 1:3.5 A 400 V 2:4.5 A 400 V 3:5.5 A 400 V 4:7.5 A 400 V 5:10.0 A 400 V 6:12.0 A 400 V 7:16.0 A 400 V 8:23.0 A 400 V 9:32.0 A 400 V 10:38.0 A 400 V		NEVER

Parameter Name	No.	Path	Default	Range	Units	Writable
				11:45.0 A	400 V	R1
				12:60.0 A	400 V	R1
				13:73.0 A	400 V	R1
				14:87.0 A	400 V	
				15:105 A	400 V	
				16:145 A	400 V	
				17:180 A	400 V	
				18:205 A	400 V	
				19:260 A	400 V	
				20:45.0 A	400 V	
				21:60.0 A	400 V	
				22:73.0 A	400 V	
				23:315 A	400 V	
				24:380 A	400 V	
				25:440 A	400 V	
				26:530 A	400 V	
				27:590 A	400 V	
				28:650 A	400 V	
				29:730 A	400 V	
				30:840 A	400 V	

The rating of the power stack that the Control Module is fitted to. When the Control Module not attached to a stack this parameter is not visible and is ignored.

The Power Stack names ending in "R1" are for the initial release of Frame G stacks with ventilation holes in the casing. Later revisions of the Frame G stacks have no ventilation holes but have an internal cooling fan.

---

<b>Attached to Stack</b>	0695	Parameters::Device Manager::Drive info	NEVER
--------------------------	------	--	-------

A Boolean parameter that indicates that the Control Module is attached to a power stack. When the Control Module is not attached to a stack but is powered using the auxiliary 24v input this parameter will indicate FALSE.

---

<b>Stack Pcode</b>	1109	Parameters::Device Manager::Drive info	NEVER
--------------------	------	--	-------

The product code string that may be used to order an equivalent Power Stack.

---

<b>Stack Serial No</b>	1258	Parameters::Device Manager::Drive info	NEVER
------------------------	------	--	-------

The serial number of the Power Control Card, (part of the Power Stack assembly).

---

# D-56 Parameter Reference

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Control Module Pcode</b>	1116	Parameters::Device Manager::Drive info				NEVER
The product code string that may be used to order an equivalent Control Module, excluding options.						
<b>Control Module Serial</b>	0977	Parameters::Device Manager::Drive info				NEVER
The serial number of the Control Module.						
<b>Comms Option Pcode</b>	1121	Parameters::Device Manager::Drive info				NEVER
The product code string that may be used to order an equivalent Communications Option, (only visible when a Communications Option is selected).						
<b>Comms Option Serial</b>	1129	Parameters::Device Manager::Drive info				NEVER
The serial number of the fitted Communications Option, (only visible when a Communications Option is selected).						
<b>IO Option Pcode</b>	1125	Parameters::Device Manager::Drive info				NEVER
The product code string that may be used to order an equivalent IO Option, (only visible when an IO Option is selected).						
<b>IO Option Serial No</b>	1134	Parameters::Device Manager::Drive info				NEVER
The serial number of the fitted IO Option, (only visible when an IO Option is selected).						
<b>IO Option SW Version</b>	1254	Parameters::Device Manager::Drive info				NEVER
For intelligent IO options this parameter shows the version of the firmware running in the option.						



Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Drive Diagnostic</b>	0688	Parameters::Device Manager::Drive info		0:OK 1:STACK NOT CONNECTED 2:STACK DATA CORRUPT 3:UNKNOWN STACK 4:STACK MISMATCH		NEVER
<p>Indicates the health of the drive configuration. When the drive configuration includes a mutually conflicting requirement, this parameter indicates the problem; for example, it attempting to run in Closed Loop Vector control mode when no feedback option is configured.</p>						
<b>Product Code Flags</b>	1551	Parameters::Device Manager::Drive info				NEVER
<p>Manufacturing flags byte read from the power electronics stack.</p> <p>Bit 0      When set, indicates that the dynamic brake switch power electronics is fitted. On larger frame sizes the brake switch is a factory fit option. On frames C,D,E,F and G this bit is ignored.</p> <p>Bit 1 – 7    Reserved</p>						
<b>Manufacturing Flags</b>	1636	Parameters::Device Manager::Drive info				NEVER
<p>Manufacturing flags word read from the control module.</p> <p>Bit 0      When set, indicates that the drive is a special build.</p> <p>Bits 1 – 15    Reserved</p>						
<b>OEM ID</b>	1256	Parameters::Device Manager::Drive info				NEVER
<p>A 16-bit integer set in the factory, that identifies the equipment manufacturer. This may be used to lock or tailor an application to a given manufacturer. To obtain a unique ID apply to Parker Hannifin Electromechanical Drives Business Unit.</p>						

# D-58 Parameter Reference

## Encoder

**Setup::Inputs and Outputs::Option  
Monitor::Inputs and Outputs  
Parameters::Option IO::Encoder**

This feature allows you to setup and monitor the operation of the **Encoder**.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Encoder Supply</b>	1511	Setup::Inputs and Outputs::Option Parameters::Option IO::Encoder	0	0:5 V 1:12 V 2:15 V 3:24 V		STOPPED
Allows the user to select the correct supply voltage for the pulse encoder.						
<b>Encoder Lines</b>	1512	Same as PNO 1511	2048	1 to 100000		STOPPED
The number of lines per one encoder revolution, as required by the encoder in use. Incorrect setting of this parameter will result in an erroneous speed measurement.						
<b>Encoder Invert</b>	1513	Same as PNO 1511	FALSE			STOPPED
Reverses the encoder direction if set to TRUE. The encoder direction needs to be correct if encoder feedback is used to control the motor in vector mode. The autotune identifies whether the parameter is in the correct state required to control the motor, and changes it if necessary. It is possible to do this manually, by attempting to run the motor, and changing the parameter if necessary until the motor is controlled correctly.						
<b>Encoder Type</b>	1514	Same as PNO 1511	0	0:QUADRATURE 1:CLOCK/DIRECTION		STOPPED
Normally the encoder type will be quadrature. Exceptionally, e.g. if a proximity sensor or other pulse train is used, it needs to be clock / direction type.						
<b>Encoder Single Ended</b>	1515	Same as PNO 1511	FALSE			STOPPED

Parameter Name	No.	Path	Default	Range	Units	Writable
If set to TRUE this parameter informs the encoder option card to expect just A and B from the encoder, not differential /A and /B.						
<b>Encoder Speed</b>	1516	Monitor::Inputs and Outputs Parameters::Option IO::Encoder	x.	Min to Max	RPM	NEVER
The speed measured by the encoder, in revolutions per minute.						
<b>Encoder Count Reset</b>	1517	Same as PNO 1511	FALSE			ALWAYS
If set to TRUE resets the encoder count.						
<b>Encoder Count Init</b>	1783	Parameters::Option IO::Encoder	TRUE			ALWAYS
If set to TRUE the encoder count is reset to zero when the drive powers up.						
<b>Encoder Count</b>	1518	Same as PNO 1516		Min to Max		NEVER
This parameter shows the encoder count, which is a 32 bit counter that will increment and decrement with the encoder pulses, up to $2^{31}$ or down to $-2^{31}$ .						

# D-60 Parameter Reference

## Encoder Slot 1

### ***Parameters::System Board::Encoder Slot 1***

This feature allows you to setup and monitor the operation of the encoder attached to slot 1 of the system board.

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Encoder Supply</b>	1663	Setup::Inputs and Outputs::SB Encoder Slot1 Parameters::System Board::Encoder Slot 1	0	0:5 V 1:12 V 2:15 V 3:20 V		STOPPED
Configures the encoder supply for both Encoder 1 <i>and Encoder 2</i>						
<b>Encoder Lines</b>	1664	Same as PNO 1663	2048	1 to 100000		STOPPED
The number of lines per encoder revolution						
<b>Encoder Invert</b>	1665	Same as PNO 1663	FALSE			STOPPED
Reverses the encoder direction if TRUE.						
<b>Encoder Type</b>	1666	Same as PNO 1663	0	0:QUADRATURE 1:CLOCK/DIRECTION		
Normally the encoder will be quadrature. Exceptionally, eg if a proximity sensor or other pulse train is used, it needs to be clock / direction.						
<b>High Input Threshold</b>	1667	Same as PNO 1663	FALSE			STOPPED
Changes the threshold level for the encoder pulses between 1.8 V and 6.5 V typical. For encoders powered from 5 V the low threshold should be used. For other supply voltages the high threshold will provide greater noise immunity.						
<b>Encoder Speed</b>	1668	Monitor::System Board::Encoder Slot 1 Parameters::System Board::Encoder Slot 1			RPM	NEVER
The speed measured by the encoder, in revolutions per minute.						

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Encoder Count Reset</b>	1669	Same as PNO 1663	FALSE			ALWAYS
Resets the encoder count.						
<b>Encoder Count</b>	1670	Same as PNO 1668		Min to Max		NEVER
The encoder count is a 32 bit count which will increment and decrement with the encoder pulses, up to (or down to) $2^{31}$ .						

# D-62 Parameter Reference

## Encoder Slot 2

### Parameters::System Board::Encoder Slot 2

This feature allows you to setup and monitor the operation of the encoder attached to slot 2 of the system board.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Encoder Lines</b>	1671	Setup::Inputs and Outputs::SB Encoder Slot2 Parameters::System Board::Encoder Slot 2	2048	1 to 100000		STOPPED
The number of lines per encoder revolution						
<b>Encoder Invert</b>	1672	Same as PNO 1671	FALSE			STOPPED
Reverses the encoder direction if TRUE.						
<b>Encoder Type</b>	1673	Same as PNO 1671	0	0:QUADRATURE 1:CLOCK/DIRECTION		STOPPED
Normally the encoder will be quadrature. Exceptionally, eg if a proximity sensor or other pulse train is used, it needs to be clock / direction.						
<b>High Input Threshold</b>	1674	Same as PNO 1671	FALSE			STOPPED
Changes the threshold level for the encoder pulses between 1.8 V and 6.5 V typical. For encoders powered from 5 V the low threshold should be used. For other supply voltages the high threshold will provide greater noise immunity.						
<b>Encoder Speed</b>	1675	Monitor::System Board::Encoder Slot 2 Parameters::System Board::Encoder Slot 2			RPM	NEVER
The speed measured by the encoder, in revolutions per minute.						
<b>Encoder Count Reset</b>	1676	Same as PNO 1671	FALSE			ALWAYS
Resets the encoder count.						
<b>Encoder Count</b>	1677	Same as PNO 1675		Min to Max		NEVER
The encoder count is a 32 bit count which will increment and decrement with the encoder pulses, up to (or down to) 2 <sup>31</sup> .						

**Energy Meter****Monitor::Energy Meter****Parameters::Motor Control::Energy Meter**

This feature measures the electrical energy used by the motor.

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Power kW</b>	0380	Monitor::Energy Meter Parameters::Motor Control::Energy Meter	x.xx	0.00 to 1000000.00	kW	NEVER
This diagnostic shows the power being delivered to the load in kilowatts.						
<b>Power HP</b>	0381	Same as PNO 380	x.xx	0.00 to 1000000.00	HP	NEVER
This diagnostic shows the power being delivered to the load in horsepower.						
<b>Reactive Power</b>	0382	Same as PNO 380	x.xx	0.00 to 1000000.00	kVAr	NEVER
This diagnostic shows the reactive power being delivered to the load in kilo volt-amperes reactive.						
<b>Energy kWh</b>	0383	Same as PNO 380	x.xx	0.00 to 10000000.00	kWh	NEVER
This diagnostic shows the total energy consumed by the load in kilowatt hours.						
<b>Power Factor Est</b>	0385	Same as PNO 380	x.xx	0.00 to 1.00		NEVER
This diagnostic shows the power factor estimate (between 0 and 1).						
<b>Power Factor Angle Est</b>	0386	Parameters::Motor Control::Energy Meter	x.xx	0.00 to 90.00	deg	NEVER
This diagnostic shows the power factor angle estimate.						

## D-64 Parameter Reference

<i>Parameter Name</i>	<i>No.</i>	<i>Path</i>	<i>Default</i>	<i>Range</i>	<i>Units</i>	<i>Writable</i>
<b>Reset Energy Meter</b>	0389	Parameters::Motor Control::Energy Meter	FALSE			ALWAYS

When **Reset Energy Meter** is set to TRUE, the **Energy KWh** parameter is reset to zero automatically when the maximum value is reached.

When **Reset Energy Meter** is set to FALSE, the **Energy KWh** parameter is held at the maximum value when the maximum value has been reached

Changing this from FALSE to TRUE at anytime will cause the **Energy KWh** parameter to be reset to zero.

---



### **EtherCAT Option**

*Monitor::Communications::Option*

*Setup::Communications::Option*

*Parameters::Option Comms::Comms*

*Parameters::Option Comms::Read Process*

*Parameters::Option Comms::Write Process*

*Parameters::Option Comms::Event*

*Parameters::Option Comms::EtherCAT*

[Refer to EtherCAT Technical Manual HA501938U001](#)

## D-66 Parameter Reference

### Ethernet

*Monitor::Communications::Base Ethernet*

*Setup::Communications::Base Ethernet*

*Parameters::Base Comms::Ethernet*

[Refer to Chapter 12 Ethernet](#)

### EtherNet IP Adapter

*Setup::Communications:: Base EtherNet IP*

*Monitor::Communications::Base Ethernet IP*

*Parameters::Base Comms::Ethernet IP Adapter*

[Refer to Appendix A](#)

### EtherNet IP Option

*Monitor::Communications::Option*

*Setup::Communications::Option*

*Parameters::Option Comms::Comms*

*Parameters::Option Comms::Read Process*

*Parameters::Option Comms::Write Process*

*Parameters::Option Comms::Event*

*Parameters::Option Comms::Option Ethernet*

*Parameters::Option Comms::EtherNet IP*

[Refer to EtherNet IP Technical Manual HA501842U001](#)

**Feedbacks****Parameters::Motor Control::Feedbacks**

The **Feedbacks** feature allows you to view speed feedback and motor current related diagnostics.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Duty Selection</b>	0390	Setup::Motor Control::Control and Type Parameters::Motor Control::Feedbacks	1	0:HEAVY DUTY 1:NORMAL DUTY		STOPPED

**Heavy Duty** ( typically 150%, 60s).

**Normal Duty** allowing higher continuous ratings with less overload capability ( typically 110%, 60s).

% are related to the Drive/stack ratings.

For example, a 12A drive ( @4kHz ) under Normal Duty becomes a 10A drive ( @4kHz) under Heavy Duty

<b>DC Link Voltage</b>	0392	Monitor::Motor and Drive Monitor::Regen Control Parameters::Motor Control::Feedbacks	x.	0 to 1000	V	NEVER
------------------------	------	--	----	-----------	---	-------

This shows the voltage across the dc link capacitors.

<b>Actual Speed RPM</b>	0393	Monitor::Motor and Drive Parameters::Motor Control::Feedbacks	x.xx	-100000.00 to 100000.00	RPM	NEVER
-------------------------	------	---	------	-------------------------	-----	-------

This parameter changes according to the **Control Strategy**:

- In Vector Control mode the parameter shows the calculated mechanical speed of the motor shaft in rpm.
- In Volts-Hertz Control mode the parameter shows motor synchronous speed in rpm.

## D-68 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Actual Speed rps</b>	0394	Same as PNO 393	x.xx	-1500.00 to 1500.00	rev/s	NEVER
<p>This parameter changes according to the <b>Control Strategy</b>:</p> <ul style="list-style-type: none"> <li>In Vector Control mode the parameter shows the calculated mechanical speed of the motor shaft in revolutions per second.</li> <li>In Volts-Hertz Control mode, the parameter shows the motor synchronous speed in revolutions per second.</li> </ul>						
<b>Actual Speed Percent</b>	0395	Same as PNO 393	x.xx	-200.00 to 200.00	%	NEVER
<p>This parameter changes according to the <b>Control Strategy</b></p> <ul style="list-style-type: none"> <li>In Vector Control mode the parameter shows the calculated mechanical speed of the motor shaft as a percentage of the user maximum speed setting (<b>100% Speed in RPM</b> in the <b>Scale Setpoint</b> function).</li> <li>In Volts-Hertz Control mode, the parameter shows the electrical drive output frequency as a percentage of the user maximum speed setting (<b>100% Speed in RPM</b> in the <b>Scale Setpoint</b> function).</li> </ul>						
<b>DC Link Volt Filtered</b>	0396	Same as PNO 393	x.	0 to 1000	V	NEVER
<p>This shows the filtered voltage across the dc link capacitors.</p>						
<b>id</b>	0397	Parameters::Motor Control::Feedbacks	x.x	-600.0 to 600.0	%	NEVER
<p>Current in the flux axis (Vector Control)</p>						
<b>iq</b>	0398	Parameters::Motor Control::Feedbacks	x.x	-600.0 to 600.0	%	NEVER
<p>Current in the torque axis (Vector Control)</p>						
<b>Actual Torque</b>	0399	Same as PNO 393	x.x	-600.0 to 600.0	%	NEVER
<p>Calculated torque, based on the Iq current.</p>						

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Actual Field Current</b>	0400	Same as PNO 393	x.x	-200.0 to 200.0	%	NEVER
Calculated field, based on the Id current.						
<b>Motor Current Percent</b>	0401	Same as PNO 393	x.x	0.0 to 600.0	%	NEVER
This diagnostic shows the level of rms line current being drawn from the drive as a percentage of the rated current of the relevant motor definition.						
<b>Motor Current</b>	0402	Same as PNO 393	x.x	0.0 to 2000.0	A	NEVER
This diagnostic shows the level of rms line current in Amps being drawn from the Drive.						
<b>100% Stack Current A</b>	0403	Parameters::Motor Control::Feedbacks	x.x	0.0 to 2000.0	A	NEVER
This diagnostic indicates the stack rating in Amps. This reduces as a function of pwm switching frequency.						
<b>Stack Current (%)</b>	0404	Parameters::Motor Control::Feedbacks	x.	0 to 500	%	NEVER
Stack current percentage.						
<b>Motor Terminal Volts</b>	0405	Same as PNO 393	x.	0 to 1000	V	NEVER
Volts between motor phases in Vrms.						
<b>CM Temperature</b>	0406	Same as PNO 393	x.x	-25.0 to 200.0	°C	NEVER
Temperature of Control Module in °Centigrade.						

## D-70 Parameter Reference

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Heatsink Temperature</b>	0407	Same as PNO 393	x.x	-25.0 to 200.0	°C	NEVER
Power stack heatsink temperature in °Centigrade.						
<b>Elec Rotor Speed</b>	0408	Parameters::Motor Control::Feedbacks	x.x	-1500.0 to 1500.0	Hz	NEVER
Mechanical speed (shaft speed in <sup>rev</sup> / <sub>s</sub> ) x number of motor pole pairs. This parameter is not filtered.						

## **Fieldbus Mapping**

***Parameters::Base Comms::Fieldbus Mapping***

[Refer to Appendix A](#)


# D-72 Parameter Reference

## Filter On Torque Dmd


### Parameters::Motor Control::Filter On Torque Dmd

This feature allows to select the type of filter applied to the Torque setpoint:

- Either the output of the speed loop PI corrector if the speed loop is active
- Or the torque Setpoint .

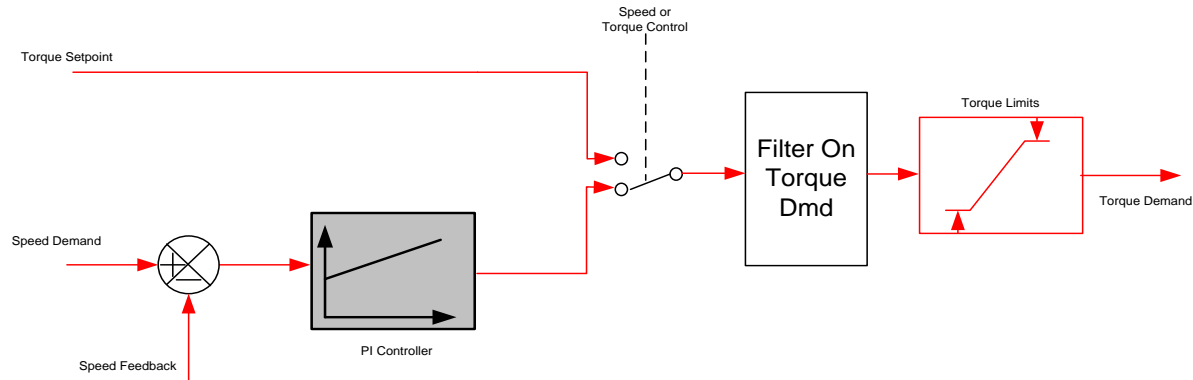

The general structure of the filter is given below :

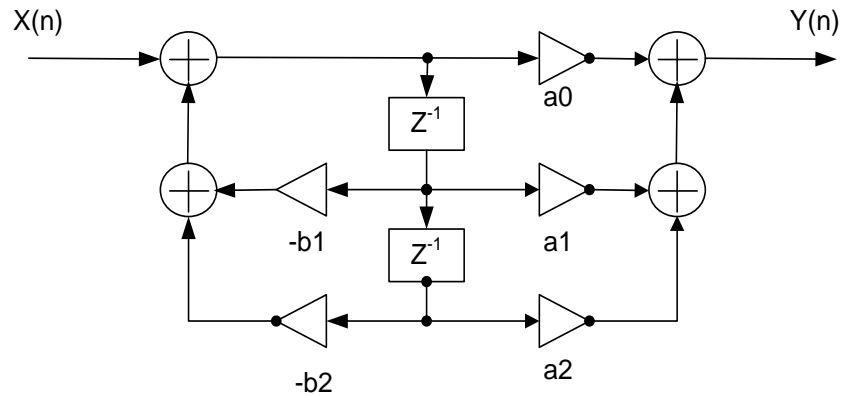

$$H(z) = \frac{a_0 + a_1 \cdot z^{-1} + a_2 \cdot z^{-2}}{1 + b_1 \cdot z^{-1} + b_2 \cdot z^{-2}} \quad \text{or} \quad y_n = a_0 \cdot x_n + a_1 \cdot x_{n-1} + a_2 \cdot x_{n-2} - b_1 \cdot y_{n-1} - b_2 \cdot y_{n-2}$$



Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Filter Type</b>	1544	Parameters::Motor Control::Filter On Torque Dmd	0	0:NONE 1:MAX ATTENUATION 2:MINIMUM PHASE 3:PHASE ADVANCE 4:NOTCH		ALWAYS

**NONE** : no filter applied – no parameter selection

**MAX ATTENUATION** : First Order Low Pass Filter (Butterworth form). 3dB attenuation frequency given by **Cut Off Frequency**.

$$H(s) = \frac{1}{1 + \tau \cdot s} \quad H(z^{-1}) = \frac{a_0 + a_1 z^{-1}}{1 + b_1 \cdot z^{-1}}$$

**MINIMUM PHASE** : First Order Low Pass Filter (similar to preceding, but with less phase shift and less efficient roll off characteristics). 3dB attenuation frequency given by **Cut Off Frequency**.

$$H(s) = \frac{1}{1 + \tau \cdot s} \quad H(z^{-1}) = \frac{a_0}{1 + b_1 \cdot z^{-1}}$$

**PHASE ADVANCE** : Gives a phase advance between **Frequency 1** and **Frequency 2**.

$$H(s) = \frac{1 + \tau_1 \cdot s}{1 + \tau_2 \cdot s} \quad H(z^{-1}) = \frac{a_0 + a_1 z^{-1}}{1 + b_1 \cdot z^{-1}}$$

**NOTCH** : Zero transmission notch at a frequency given by **Cut Off Frequency**. The damping factor is given by **Factor**.

$$H(s) = 1 \cdot \frac{s^2 + \omega^2}{s^2 + 2\xi\omega s + \omega^2} = \frac{1 + \frac{s^2}{\omega^2}}{1 + 2\xi \frac{s}{\omega} + \frac{s^2}{\omega^2}} \quad H(z^{-1}) = \frac{a_0 + a_1 z^{-1} + a_2 \cdot z^{-2}}{1 + b_1 \cdot z^{-1} + b_2 \cdot z^{-2}}$$

<b>Cut Off Frequency</b>	1545	Parameters::Motor Control::Filter On Torque Dmd	2000	20 to 6000	Hz	ALWAYS
--------------------------	------	---	------	------------	----	--------

3dB attenuation frequency if Filter Type is MAX ATTENUATION or MINIMUM PHASE

Frequency of Zero transmission if Filter Type is NOTCH

## D-74 Parameter Reference

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Frequency 1</b>	1546	Parameters::Motor Control::Filter On Torque Dmd	2000	20 to 6000	Hz	ALWAYS
Frequency 1 if <b>Filter Type</b> is <b>PHASE ADVANCE</b>						
<b>Frequency 2</b>	1547	Parameters::Motor Control::Filter On Torque Dmd	2000	20 to 6000	Hz	ALWAYS
Frequency 2 if <b>Filter Type</b> is <b>PHASE ADVANCE</b>						
<b>Factor</b>	1548	Parameters::Motor Control::Filter On Torque Dmd	0.20	0.10 to 1.00		ALWAYS
Damping factor if <b>Filter Type</b> is <b>NOTCH</b>						

**Flash File System*****Parameters::Device Manager::Flash File System***

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
Free Space (kBytes)	1754	Parameters::Device Manager::Flash File System				NEVER

Indicates the remaining space available in the internal file system, (not on AC30V).

---

**Functional Description**

The internal file system on the AC30P / AC30D is primarily used to store the source code for applications. The total space available is 12MB.

# D-76 Parameter Reference

## Fluxing VHz

### Parameters::Motor Control::Fluxing VHz

Designed for VOLTS/Hz motor Control Mode.

This function allows user parameterisation of the conventional (volts/hertz) fluxing strategy of the Drive. This is achieved through three flexible Volts-to-frequency templates. Starting torque performance can also be tailored through the **Fixed Boost**, **Acceleration Boost** and **Auto Boost** parameters.

Parameter Name	No.	Path	Default	Range	Units	Writable
VHz Shape	0422	Setup::Motor Control::Control and Type Parameters::Motor Control::Fluxing VHz	0	0:LINEAR LAW 1:FAN LAW 2:USER DEFINED 3:APPLICATION DEFINED		STOPPED

Type of volts to frequency template to flux the motor. The choices for this parameter are:

*Enumerated Value : VHz Shape*


0 : LINEAR LAW This gives a constant flux characteristic up to the **Base Frequency** (see **Motor Nameplate** function).

1 : FAN LAW This gives a quadratic flux characteristic up to the **Base Frequency**. This matches the load requirement for fan and most pump applications

2 : USER DEFINED This gives a user defined flux characteristic up to the **Base Frequency**.


3 : APPLICATION DEFINED This gives a user the ability to set up and apply fluxing law from the application layer.

### V/F SHAPE

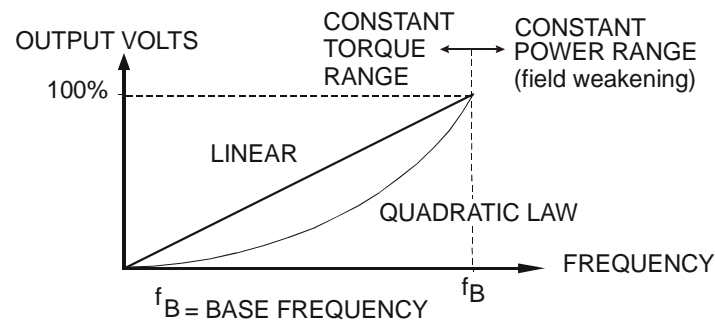

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Fixed Boost</b>	0447	Same as PNO 422	0.0	0.0 to 25.0	%	ALWAYS

This parameter allows for no-load stator resistance voltage drop compensation. This correctly fluxes the motor (under no-load conditions) at low output frequencies, thereby increasing available motor torque. Fixed boost can be set in addition to auto boost and acceleration boost.

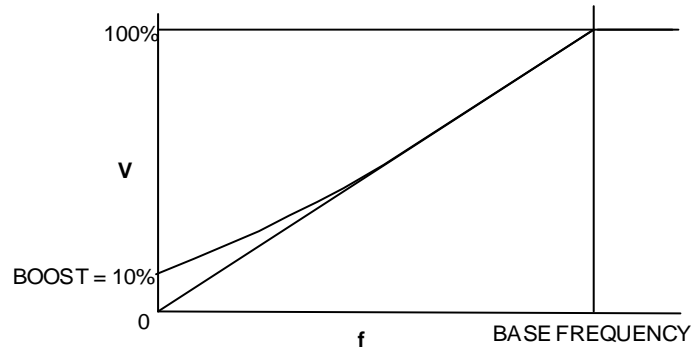


---

<b>Auto Boost</b>	0448	Parameters::Motor Control::Fluxing VHz	0.0	0.0 to 25.0	%	ALWAYS
-------------------	------	--	-----	-------------	---	--------

This parameter allows for load dependent stator resistance voltage drop compensation. This correctly fluxes the motor (under load conditions) at low output frequencies, thereby increasing available motor torque. **Auto Boost** can be set in addition to **Fixed Boost**.

The value of the **Auto Boost** parameter determines level of additional volts supplied to the motor for 100% load.

Setting the value of auto boost too high can cause the Drive to enter current limit. If this occurs, the Drive will be unable to ramp up in speed. Reducing the value of auto boost will eliminate this problem.

---

<b>Acceleration Boost</b>	0450	Parameters::Motor Control::Fluxing VHz	0.0	0.0 to 25.0	%	ALWAYS
---------------------------	------	--	-----	-------------	---	--------

Additional amount of fixed boost when the drive is accelerating.

---


<b>Energy Saving Enable</b>	0451	Parameters::Motor Control::Fluxing VHz	FALSE			ALWAYS
-----------------------------	------	--	-------	--	--	--------

Enable/Disable energy saving mode to minimize energy consumption.

# D-78 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>VHz User Freq</b>	0423	Parameters::Motor Control::Fluxing VHz			%	STOPPED
Array of user defined frequency for V/f control						
<b>VHz User Volts</b>	0435	Parameters::Motor Control::Fluxing VHz		0.0 to 100.0	%	STOPPED
Array of VHz User Volts for V/f control						
<b>Application User Boost</b>	1633	Parameters::Motor Control::Fluxing VHz	0.00	0.00 to 25.00	%	ALWAYS
User boost for V/Hz control from application						
<b>Application Volts</b>	1549	Parameters::Motor Control::Fluxing VHz	0.00	0.00 to 150.00	%	ALWAYS
Volts for V/Hz control, if fluxing law is done in the application						
<b>Energy Saving Lower Lim</b>	1526	Parameters::Motor Control::Fluxing VHz	0.00	0.00 to 1.00		ALWAYS
Energy Saving Lower Limit for application defined fluxing						
<b>Vsd Demand</b>	0453	Parameters::Motor Control::Fluxing VHz	x.x		%	NEVER
The amount of voltage applied in the direct or flux axis						
<b>Vsq Demand</b>	0454	Parameters::Motor Control::Fluxing VHz	x.x		%	NEVER
The amount of voltage applied in the quadrature or torque axis						

Functional Description

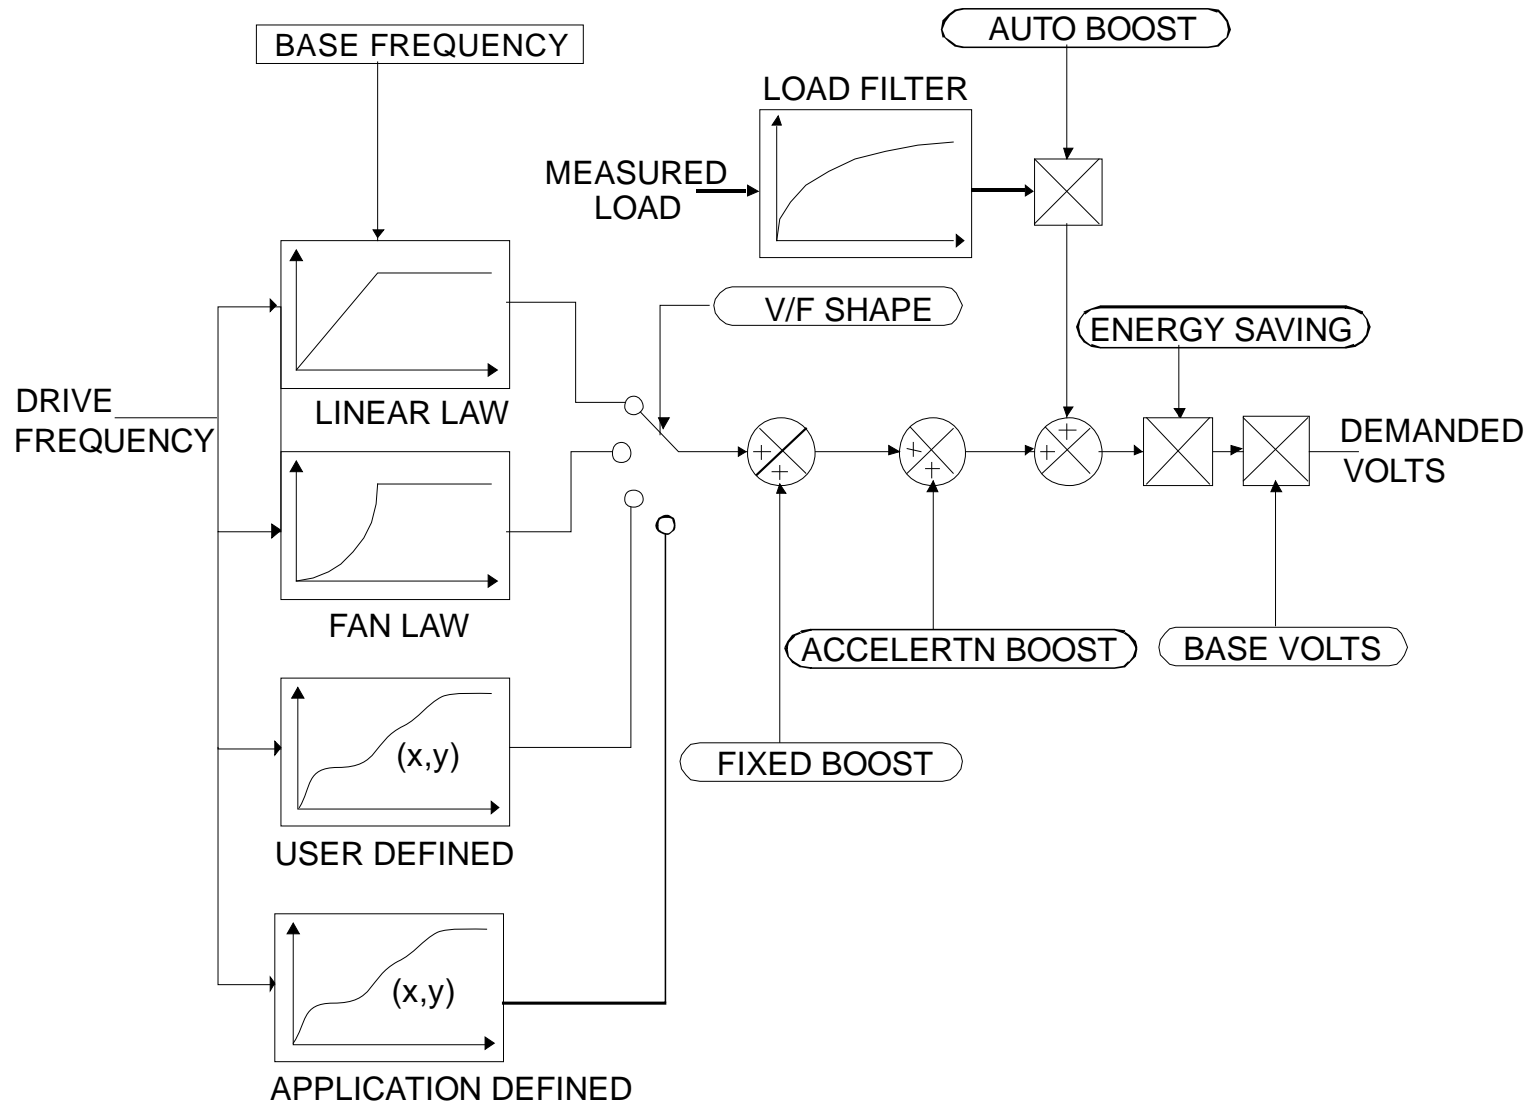

# D-80 Parameter Reference

## V/F Shape

The function allows the user to parameterise the Drive's conventional V/F motor fluxing scheme. Four V/F shapes are available, LINEAR LAW, FAN LAW, USER DEFINED, and APPLICATION DEFINED:

- ◆ Linear Law V/F shape should be used in applications requiring constant motor torque though out the speed range (e.g. machine tools or hoists).
- ◆ Fan Law V/F shape provides less torque capabilities for lower speeds, which means some energy savings can be achieved for fan or pump applications when they operate at lower speed/load setpoints. When choosing fan law shape the user should carefully consider if such profile is suitable for the overall load cycle of their application.
- ◆ User Defined V/F shape provides a method for the user to define any profile. 10 user definable (x,y) points are provided. Linear interpolation is used between each point. The drive also assumes the following points - (0%,0%) and (100%,100%) - though these may be overridden. For example, (USER FREQ 1 = 0%, USER VOLTAGE 1 = 5%) takes precedence over (0%, 0%).
- ◆ Application Defined V/F shape provides a method for the user to define any fluxing profile within the application layer. In the application the user can set desired voltage level for any operating frequency, and the application will dynamically provide that value to the firmware, via the "Application Volts" parameter. If this mode is used, it is recommended that such application is executed in 1ms time frame.

For any of these V/F shapes the **Base Frequency** parameter (in the **Motor Nameplate** function) which is the value of Drive output frequency at which maximum output volts is provided, can be set by the user.

## Boost Parameters

- ◆ Correct no-load motor fluxing at low Drive output frequencies can be achieved by setting the **Fixed Boost** parameter.
- ◆ Correct motor fluxing under load conditions is achieved by setting the **Auto Boost** parameter. The motor is correctly fluxed when the **Actual Field Current** diagnostic in the **Feedbacks** function reads 100.0% .
- ◆ Additional **Fixed Boost** can be applied during acceleration by setting the **Acceleration Boost** parameter. This can be useful for starting heavy/high stiction loads.

## Saving Energy

An **Energy Saving** mode is provided to allow the user to choose to optimize energy consumption under low load conditions in steady state. As soon as the load is increased or acceleration is required, the drive suspends energy saving mode, and returns to it only if the load conditions are such that it is allowed to do so. If enabled, energy saving mode is reducing the voltage of the motor to a level required to maintain specific setpoint speed at a particular low load. For sustained low load conditions it is not necessary to keep the motor fluxed for rated torque capabilities, so the motor voltage is



reduced to a level that will still provide required torque, but not much more torque. This operation on the cusp of required torque is also the biggest weakness of energy saving mode. Energy saving procedure does monitor torque demand and as soon as it detects its rise the drive switches from energy saving mode to normal mode of operation. However, sudden increases in load may be too quick to be dealt with by energy saving mode, and may lead to stall or trip conditions. This will occur if the time to correctly re-flux the motor takes longer than the time of load increase, when there can be a window of time when the motor is simply not able to generate sufficient torque necessary for the new, increased load conditions. For this reason the user has to be very careful when choosing to utilize energy saving mode.

Energy saving mode should ideally be used in applications where there are prolonged periods of low load operation, with no fast excursions towards rated torque. The user always has to be certain that the overall load cycle for their application would still be correctly serviced if the energy saving mode is enabled, and that energy saving mode is not being incorrectly used at the expense of required performance.

# D-82 Parameter Reference

## Flycatching

### Parameters::Motor Control::Flycatching

Only available if IM MOTOR selected in **Control Mode**

This feature performs a directional speed search. It allows the Drive to seamlessly catch a spinning motor before controlling the motor to the desired setpoint. This is especially useful for large inertia fan loads, where drafts in building air ducts can cause a fan to 'windmill'.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>VHz Flying Start Enable</b>	0310	Parameters::Motor Control::Flycatching	FALSE			ALWAYS
Enable flycatching in V/Hz control mode when TRUE						
<b>VC Flying Start Enable</b>	0311	Parameters::Motor Control::Flycatching	FALSE			ALWAYS
Enable flycatching in Vector control mode when TRUE						
<b>Flying Start Mode</b>	0312	Parameters::Motor Control::Flycatching	0	0:ALWAYS 1:TRIP OR POWER UP 2:TRIP		ALWAYS
Mode of operation - V/Hz control						
<b>Search Mode</b>	0313	Parameters::Motor Control::Flycatching	0	0:BIDIRECTIONAL 1:UNIDIRECTION		ALWAYS
The type of speed search carried out by the flycatching sequence.						
<b>Search Volts</b>	0314	Parameters::Motor Control::Flycatching	9.0	0.0 to 100.0	%	ALWAYS
Only under VHz control The percentage level of the search volts applied to the motor during the speed search phase of the flycatching sequence. Increasing this parameter improves the accuracy of the discovered motor speed but increases the braking influence of the speed search on the rotating motor.						
<b>Search Boost</b>	0315	Parameters::Motor Control::Flycatching	40.0	0.0 to 50.0	%	ALWAYS
Only under VHz control						

Parameter Name	No.	Path	Default	Range	Units	Writable
The level of search boost applied to the motor during the speed search phase of the flycatching sequence.						
<b>Search Time</b>	0316	Parameters::Motor Control::Flycatching	3.000	0.100 to 60.000	s	ALWAYS
<p>Only under VHz Control</p> <p>The search rate during the speed search phase of the flycatching sequence. Performing the flycatching speed search too quickly can cause the drive to inaccurately identify the motor speed. Refluxing at an inaccurate motor speed can cause the drive to trip on overvoltage. If this occurs, increasing this parameter will reduce the risk of tripping.</p>						
<b>Min Search Speed</b>	0317	Parameters::Motor Control::Flycatching	5	0 to 500	Hz	ALWAYS
<p>Only under VHz Control</p> <p>The lowest search speed before the speed search phase of the flycatching sequence is considered to have failed.</p>						
<b>Flying Reflux Time</b>	0318	Parameters::Motor Control::Flycatching	2.000	0.100 to 10.000	s	ALWAYS
<p>Only under VHz Control</p> <p>The rate of rise of volts from the search level to the working level after a successful speed search. Refluxing the motor too quickly can cause the Drive to trip on either overvoltage or overcurrent. In either case, increasing this parameter will reduce the risk of tripping.</p>						

### Functional Description

The flycatching function enables the drive to be restarted smoothly into a spinning motor. It applies small search voltages to the motor whilst ramping the Drive frequency from maximum speed to zero. When the motor load goes from motoring to regenerating, the speed search has succeeded and is terminated. If the search frequency falls below the minimum search speed, the speed search has failed and the Drive will ramp to the speed setpoint from zero.

The flycatching sequence can be triggered by different starting conditions:

ALWAYS:	All starts (after controlled or uncontrolled stop, or after a power-up)
TRIP or POWER-UP:	After uncontrolled stop, i.e. trip or coast, or after a power-up
TRIP:	After uncontrolled stop, i.e. trip or coast

The type of speed sequence may be Bi-directional or Unidirectional:

#### Bi-directional

Initially, the search is performed in the direction of the speed setpoint. If the drive fails to identify the motor speed in this direction, a second speed search is performed in the reverse direction.

#### Unidirectional

The search is performed only in the direction of the speed setpoint.

# D-84 Parameter Reference

## General Purpose IO

### Monitor::Inputs and Outputs

#### Parameters::Option IO::General Purpose IO

The General Purpose IO parameters configure the use of the four IO Options. This group of parameters is only visible when an IO Option is selected.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Anin 11 Value</b>	1181	Monitor::Inputs and Outputs Parameters::Option IO::General Purpose IO	x.xx	-100.00 to 100.00	%	NEVER
(Terminal X21.2) - The input value expressed as a percentage of range, (+/- 100%), following Offset and Scale.						
<b>Anin 12 Value</b>	1182	Same as PNO 1181	x.xx	-100.00 to 100.00	%	NEVER
(Terminal X21.3) - The input value expressed as a percentage of range, (+/- 100%), following Offset and Scale.						
<b>Anin 13 Value</b>	1183	Same as PNO 1181	x.xx	-100.00 to 100.00	%	NEVER
(Terminal X21.4) - The input value expressed as a percentage of range, (+/- 100%), following Offset and Scale.						
<b>Anin 11 Offset</b>	1461	Setup::Inputs and Outputs::Option Parameters::Option IO::General Purpose IO	0.00	Min to Max	%	ALWAYS
The offset is expressed as a percentage of the hardware range. For example an offset of 10% is equivalent to 1V on the input. The offset is added to the measured value.						
<b>Anin 11 Scale</b>	1462	Same as PNO 1461	1.0000	Min to Max		ALWAYS
The scale is a simple multiplication factor. The input voltage is converted to a percentage value. <b>1461 Anin 11 Offset</b> is added and the result is multiplied by Scale. The result is presented in parameter <b>1181 Anin 11 Value</b> .						
<b>Anin 12 Offset</b>	1463	Same as PNO 1461	0.00	Min to Max	%	ALWAYS
The offset is expressed as a percentage of the hardware range. For example an offset of 10% is equivalent to 1V on the input. The offset is added to the measured value.						

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Anin 12 Scale</b>	1464	Same as PNO 1461	1.0000	Min to Max		ALWAYS

The scale is a simple multiplication factor. The input voltage is converted to a percentage value. **1463 Anin 12 Offset** is added and the result is multiplied by Scale. The result is presented in parameter **1182 Anin 12 Value**.

<b>Anin 13 Offset</b>	1465	Same as PNO 1461	0.00	Min to Max	%	ALWAYS
-----------------------	------	------------------	------	------------	---	--------

The offset is expressed as a percentage of the hardware range. For example an offset of 10% is equivalent to 1V on the input. The offset is added to the measured value.

<b>Anin 13 Scale</b>	1466	Same as PNO 1461	1.0000	Min to Max		ALWAYS
----------------------	------	------------------	--------	------------	--	--------

The scale is a simple multiplication factor. The input voltage is converted to a percentage value. **1465 Anin 13 Offset** is added and the result is multiplied by Scale. The result is presented in parameter **1183 Anin 13 Value**.


<b>RTC Trim</b>	1187	Parameters::Option IO::General Purpose IO	0	-40 to 40		ALWAYS
-----------------	------	---	---	-----------	--	--------

A trim value that may be used to speed up or slow down the Real Time Clock on the IO option. A positive trim value will cause the RTC to run faster, an negative value causes the RTC to run slower. Refer to the AC30V General Purpose I/O Option manual for more details.

Once programmed, the RTC trim affects the operation of the RTC both in battery backed up mode and normal running mode.

### Analog input Scale and Offset

The input signal is converted to a percentage of the hardware range, that is -10V...10V is represented as -100 to 100%. The Offset is then added to this input and the result of this is multiplied by the Scale factor. The result is presented in the Value parameter.

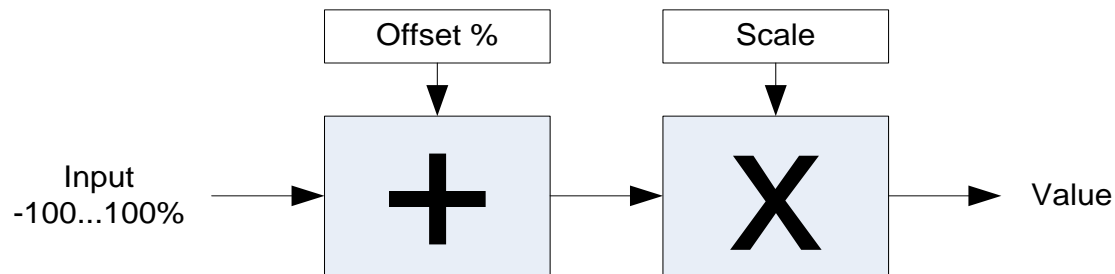

# D-86 Parameter Reference

## Graphical Keypad

### Setup::Environment

### Parameters::Keypad::Graphical Keypad

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>View Level</b>	1141	Parameters::Keypad::Graphical Keypad	1	Same as PNO 945		ALWAYS

The view level may be used as a convenient method to hide menus and parameters not currently required. The view levels are:

0. Operator – only the “Control Screen”, “Favourites”, “Setup” and “Monitor” menus are visible.
1. Technician – additional menus are visible in the “Setup” and “Monitor” menus
2. Engineer – the “Parameters” menu is visible in addition to the above.

---

<b>Startup Page</b>	0982	Setup::Environment Parameters::Keypad::Graphical Keypad	0	0:DEFAULT 1:CONTROL SCREEN 2:FAVOURITES 3:MONITOR		ALWAYS
---------------------	------	--	---	--	--	--------

On power-up the GKP briefly displays the drive name, rating and software version. After a short timeout the display automatically changes to the menu defined here

0. Default
1. Control Screen
2. Favourites
3. Monitor

When Startup Page is set to “Default” the first menu will be:

The “Control Screen” menu if the drive is in local sequencing mode, otherwise

The “Favourites” menu if the Favourites menu is not empty, otherwise

The “Monitor” menu.

---

<b>Display Timeout</b>	0983	Same as PNO 982	0.000	0.000 to 86400.000	s	ALWAYS
------------------------	------	-----------------	-------	--------------------	---	--------

When the GKP is idle, (no keys pressed), for a period longer than the Display Timeout, the display will automatically revert to the menu defined in the Startup Page parameter.

Setting the Display Timeout to zero defeats this feature.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>GKP Password</b>	1142	Setup::Environment Parameters::Keypad::Graphical Keypad	0000			ALWAYS
<p>Defines the password to be entered to allow modification to parameters using the GKP. This password does not affect access via the web page. A value of 0000, (the default value), inhibits the password feature. Entering a value other than 0000 causes the GKP to prompt for the password before proceeding to the parameter edit mode.</p> <p>Once a password has been entered the GKP remains unlocked. To re-lock the password return to the top of the menu tree then press Soft Key 1.</p>						
<b>Password in Favourite</b>	1097	Parameters::Keypad::Graphical Keypad	FALSE			ALWAYS
<p>When the GKP Password is active this parameter may be used to selectively defeat the password feature in the Favourites menu. By default this parameter is FALSE, meaning that the password is ignored when modifying Favourites parameters.</p>						
<b>Password in Local</b>	1098	Parameters::Keypad::Graphical Keypad	FALSE			ALWAYS
<p>When the GKP Password is active this parameter may be used to selectively defeat the password feature in the Control Screen menu. By default this parameter is FALSE, meaning that the password is ignored when modifying the Local Setpoint and other related parameters.</p>						
<b>Technician Password</b>	1099	Parameters::Keypad::Graphical Keypad	0000			ALWAYS
<p>The password required to change from Operator View level to Technician View Level. If this is zero then no password is required.</p>						
<b>Engineer Password</b>	1637	Parameters::Keypad::Graphical Keypad	0000			ALWAYS
<p>The password required to change from Operator or Technician View level to Engineer View Level. If this is zero then no password is required.</p>						
<b>Version</b>	1143	Parameters::Keypad::Graphical Keypad				NEVER
<p>Indicates the firmware version of the attached GKP.</p>						

## D-88 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Soft Key 2 Mode</b>	1794	Parameters::Keypad::Graphical Keypad	0	0:LOCAL / REMOTE 1:FORWARD / REVERSE 2:CUSTOM		ALWAYS

Configures the use of Soft Key 2 when the GKP is being used to navigate through menus or parameters. When the GKP is being used to edit a parameter, or is showing the Welcome page the use of Soft Key 2 is pre-defined, as detailed in section 7.

- **LOCAL / REMOTE:** The key may be used to change the sequencing mode of the drive. When 1253 Local/Rem Key Active is FALSE this feature is disabled.
- **FORWARD / REVERSE:** The key may be used to change the direction of rotation of the drive. The icon shown above the icon indicates the direction that will be selected on pressing the key. This setting only applies in Local sequencing mode and when 1255 Local Dir Key Active is TRUE.
- **CUSTOM:** The key may be used to toggle 1795 Soft Key 2 Value. The icon shown above the soft key indicates the present state of this parameter.

---

<b>Soft Key 2 Value</b>	1795	Parameters::Keypad::Graphical Keypad	FALSE			ALWAYS
-------------------------	------	--------------------------------------	-------	--	--	--------

A parameter that is driven by Soft Key 2 when 1794 Soft Key 2 Mode is set to CUSTOM. This may be used within the configuration to allow keypad driven functionality.

---



**Induction Motor Data****Setup::Motor Control::Induction Motor Data****Parameters::Motor Control::Induction Motor Data**Only available if IM MOTOR selected in **Control Mode**

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Magnetising Current</b>	0568	Parameters::Motor Control::Induction Motor Data	1.00	0.00 to 10000.00	A	ALWAYS
The no load current of the induction motor, defined as rotor flux / magnetising inductance, usually given the title "imr".						
<b>Rotor Time Constant</b>	0569	Parameters::Motor Control::Induction Motor Data	0.100	0.005 to 100.000	s	ALWAYS
Induction Motor rotor time constant.						
<b>Leakage Inductance</b>	0570	Parameters::Motor Control::Induction Motor Data	1.000	0.000 to 1000.000	mH	ALWAYS
Induction motor leakage inductance. Displayed as star or delta equivalent value according to "Per Phase Parameters" setting.						
<b>Stator Resistance</b>	0571	Parameters::Motor Control::Induction Motor Data	0.0000	0.0000 to 100.0000	Ohm	ALWAYS
Induction motor stator resistance. Displayed as star or delta equivalent value according to "Per Phase Parameters" setting.						
<b>Mutual Inductance</b>	0572	Parameters::Motor Control::Induction Motor Data	100.00	0.00 to 10000.00	mH	ALWAYS
Induction motor mutual inductance. Displayed as star or delta equivalent value according to "Per Phase Parameters" setting.						

# D-90 Parameter Reference

## Inj Braking

### Parameters::Motor Control::Inj Braking

Designed for VOLTS/Hz Motor Control Mode.

The injection braking feature provides a method of stopping spinning induction motors without returning the kinetic energy of the motor and load back in to the dc link of the Drive. This is achieved by running the motor highly inefficiently so that all the energy stored in the load is dissipated in the motor. Thus, high inertia loads can be stopped without the need for an external dynamic braking resistor.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>DC Inj Deflux Time</b>	0324	Parameters::Motor Control::Inj Braking	0.500	0.100 to 20.000	s	ALWAYS
Motor defluxed duration before starting injection braking						
<b>DC Inj Frequency</b>	0325	Parameters::Motor Control::Inj Braking	9	1 to 500	Hz	ALWAYS
Max frequency applied to the motor						
<b>DC Inj Current Limit</b>	0326	Parameters::Motor Control::Inj Braking	100.0	50.0 to 150.0	%	ALWAYS
Motor current value						
<b>DC Pulse Time</b>	0327	Parameters::Motor Control::Inj Braking	2.000	0.000 to 100.000	s	ALWAYS
Duration of dc pulse for motor speed below 20% of base speed						
<b>Final DC Pulse Time</b>	0328	Parameters::Motor Control::Inj Braking	1.000	0.000 to 10.000	s	ALWAYS
Duration of the final dc holding pulse						
<b>DC Current Level</b>	0329	Parameters::Motor Control::Inj Braking	3.0	0.0 to 25.0	%	ALWAYS
Level of dc pulse applied						

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>DC Inj Timeout</b>	0330	Parameters::Motor Control::Inj Braking	90.000	0.000 to 600.000	s	ALWAYS
Maximum time in the low frequency injection braking state						
<b>DC Inj Base Volts</b>	0331	Parameters::Motor Control::Inj Braking	100.00	0.00 to 115.47	%	ALWAYS
Maximum volts applied at base speed						

*Note: DC injection braking procedure has higher percentage of successful stoppages for the lower power range (frames D-G), than at higher power range (frames H-K).*

# D-92 Parameter Reference

## IO Configure

### Setup::Inputs and Outputs

### Parameters::Inputs And Outputs::IO Configure

These parameters are used to configure the input signal processing.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Anin 01 Type</b>	0001	Setup::Inputs and Outputs::Base IO Parameters::Inputs And Outputs::IO Configure	0	0:-10..10 V 1:0..10 V 2:0..20 mA 3:4..20 mA		ALWAYS

Analog input 1 is associated with terminal X11.1

The signal processing electronics for analog input 1 supports four input ranges.

<b>Anin 01 Offset</b>	0957	Setup::Inputs and Outputs::Base IO Parameters::Inputs And Outputs::IO Configure	0.00	Min to Max	%	ALWAYS
-----------------------	------	---	------	------------	---	--------

The offset is expressed as a percentage of the hardware range selected by **0001 Anin 01 Type**. For example, with the 4..20mA range an offset of 10% is equivalent to 1.6mA on the input.

The offset is added to the measured value.

<b>Anin 01 Scale</b>	0958	Same as PNO 957	1.0000	Min to Max		ALWAYS
----------------------	------	-----------------	--------	------------	--	--------

The scale is a simple multiplication factor. The input voltage or current is converted to a percentage value. **0957 Anin 01 Offset** is added and the result is multiplied by **0958 Anin 01 Scale**. The result is presented in parameter **0039 Anin 01 Value**.

<b>Anin 02 Type</b>	0002	Same as PNO 1	0	0:-10..10 V 1:0..10 V		ALWAYS
---------------------	------	---------------	---	--------------------------	--	--------

Analog input 2 is associated with terminal X11.2

The signal processing electronics for analog input 2 supports two input ranges.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Anin 02 Offset</b>	0959	Same as PNO 957	0.00	Min to Max	%	ALWAYS

The offset is expressed as a percentage of the hardware range selected by **0002 Anin 02 Type**. For example, with the -10..10V range an offset of 10% is equivalent to 1v on the input.

The offset is added to the measured value.

<b>Anin 02 Scale</b>	0960	Same as PNO 957	1.0000	Min to Max		ALWAYS
----------------------	------	-----------------	--------	------------	--	--------

The scale is a simple multiplication factor. The input voltage is converted to a percentage value. **0959 Anin 02 Offset** is added and the result is multiplied by **0960 Anin 02 Scale**. The result is presented in parameter **0041 Anin 02 Value**.

<b>Anout 01 Type</b>	0003	Same as PNO 1	0	Same as PNO 2		ALWAYS
----------------------	------	---------------	---	---------------	--	--------

Analog output 1 is associated with terminal X11.3

The signal processing electronics for analog output 1 supports two output ranges:

- 0. -10..10V
- 1. 0..10V

<b>Anout 01 Scale</b>	0686	Setup::Inputs and Outputs::Base IO Parameters::Inputs And Outputs::IO Configure	1.0000	Min to Max		ALWAYS
-----------------------	------	---	--------	------------	--	--------

The scale is a simple multiplication factor applied to **0042 Anout 01 Value**.

<b>Anout 01 Offset</b>	1108	Setup::Inputs and Outputs::Base IO Parameters::Inputs And Outputs::IO Configure	0.00	Min to Max	%	ALWAYS
------------------------	------	---	------	------------	---	--------

The offset is expressed as a percentage of the hardware range selected by **0003 Anout 01 Type**. For example, with the -10..10V range an offset of 10% is equivalent to 1v on the output.

The demand value **0042 Anout 01 Value** is multiplied by **0686 Anout 01 Scale** then added to the Offset. The resultant value is then limited to -100 to 100%, (for the -10..10V type) or 0..100%, (for the 0..10V range).

## D-94 Parameter Reference


Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Anout 01 ABS</b>	1441	Setup::Inputs and Outputs::Base IO Parameters::Inputs And Outputs::IO Configure	FALSE			ALWAYS
<p>When ABS is set TRUE, the absolute value of the result of combining <b>0042 Anout 01 Value</b>, <b>0686 Anout 01 Scale</b> and <b>1108 Anout 01 Offset</b> is used to drive the output electronics.</p>						
<b>Anout 02 Type</b>	0004	Same as PNO 1	1	1:0..10 V 2:0..20 mA 3:4..20 mA		ALWAYS
<p>Analog output 1 is associated with terminal X11.4 The signal processing electronics for analog output 2 supports the three output ranges</p>						
<b>Anout 02 Scale</b>	1460	Same as PNO 1441	1.0000	Min to Max		ALWAYS
<p>The scale is a simple multiplication factor applied to <b>0043 Anout 02 Value</b>.</p>						
<b>Anout 02 Offset</b>	1467	Same as PNO 1441	0.00	Min to Max	%	ALWAYS
<p>The offset is expressed as a percentage of the hardware range selected by <b>0004 Anout 02 Type</b>. For example, with the 4..20mA range an offset of 10% is equivalent to 1.6mA on the output. The demand value <b>0043 Anout 02 Value</b> is multiplied by <b>1460 Anout 02 Scale</b> then added to the Offset. The resultant value is then limited to 0..100%.</p>						
<b>Anout 02 ABS</b>	1468	Same as PNO 1441	FALSE			ALWAYS
<p>When ABS is set TRUE, the absolute value of the result of combining <b>0043 Anout 02 Value</b>, <b>1460 Anout 02 Scale</b> and <b>1467 Anout 02 Offset</b> is used to drive the output electronics.</p>						

**Functional Description**

The values associated with each terminal are shown in the **IO Values** parameter (D-61).


**Analog input**

The input signal is converted to a percentage of the selected hardware range. For the -10V...10V range the input is represented as -100 to 100%, for all other ranges the input is represented as 0 to 100%. The Offset value is then added to this input and the result of this is multiplied by the scale factor. The result is presented in the Value parameter.

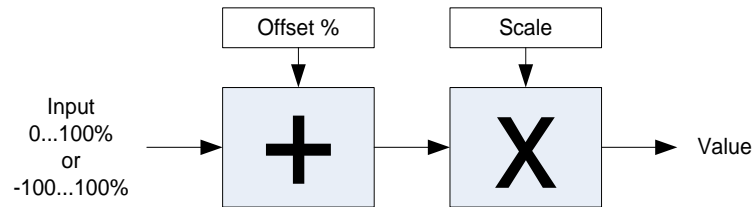

**Analog output**

The output demand value is multiplied by Scale before being added to the Offset. If ABS is TRUE the absolute value of this result is used. The output demand value is expressed as a percentage of the selected range.

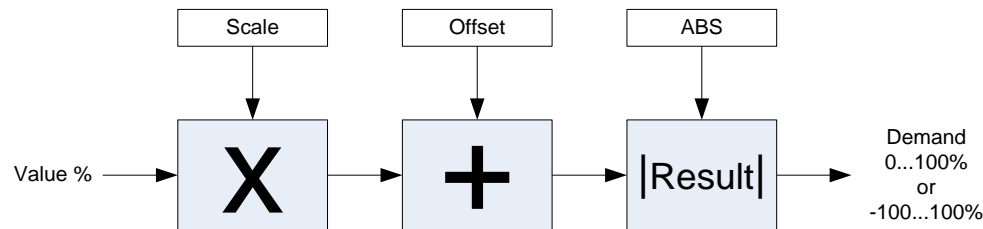

# D-96 Parameter Reference

## IO Option Common

### Parameters::Option IO:: Option IO

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Option IO Required</b>	1178	Setup::Inputs and Outputs::Option Parameters::Option IO::Option IO	0	0:NONE 1:GENERAL PURPOSE 2:THERMISTOR 3:RTC AND THERMISTOR 4:PULSE ENCODER 5:RESOLVER AND THERMIST		CONFIG
Defines the type of IO option required by the configuration.						
<b>Option IO Fitted</b>	1179	Parameters::Option IO::Option IO		0:NONE 1:GENERAL PURPOSE 2:THERMISTOR 3:RTC AND THERMISTOR 4:PULSE ENCODER 5:RESOLVER AND THERMIST		NEVER
Indicates the type of IO option that is currently fitted						
<b>Option IO Diagnostic</b>	1180	Parameters::Option IO::Option IO		0:OK 1:OPTION NOT FITTED 2:TYPE MISMATCH 3:TYPE UNKNOWN 4:HARDWARE FAULT		NEVER
Indicates the status of the IO option						



**Functional Description**

These parameters are used to set and verify the **IO Option** configuration. If the status parameter is not OK then the drive will not enter the Operational state.

<b>Status</b>	<b>Description</b>
OK	The configuration is valid. The status will always be OK if no IO option is required, even if one is fitted. Alternatively, if the IO option fitted is working correctly and supports the required functionality then the status will be OK For example, if the required type is THERMISTOR and the actual type is GENERAL PURPOSE then the status will be OK as the General Purpose option supports the thermistor functionality.
OPTION NOT FITTED	An option was required and none was detected
TYPE MISMATCH	The fitted option does not support the required features
TYPE UNKNOWN	The firmware in the drive does not recognise the fitted option
HARDWARE FAULT	The fitted option is not working as expected.

# D-98 Parameter Reference

## IO Values

### Monitor::Inputs and Outputs

### Parameters::Inputs and Outputs::IO Values

These parameters present the Input and Output values in a form suitable for processing by the application and fieldbus.

Parameter Name	No.	Path	Default	Range	Units	Writable
Digout Value	0022	Monitor::Inputs and Outputs Parameters::Inputs And Outputs::IO Values	0000	0:Digout 01 1:Digout 02 2:Digout 03 3:Digout 04 4:Relay 01 5:Relay 02 8:Digout 11 9:Digout 12 10:Digout 13 11:Digout 14 14:Relay 11 15:Relay 12		ALWAYS

Presents all the digital outputs from the drive as a 16-bit word. The bits within the word may be accessed individually, or the entire word may be accessed as a group.

Bit	Signal Name	Terminal	Comment	PNO for individual bit access
0	Digital Output 01	X12.1	Common terminal with digital input 4	0023
1	Digital Output 02	X12.2	Common terminal with digital input 5	0024
2	Digital Output 03	X12.3	Common terminal with digital input 6	0025
3	Digital Output 04	X12.4	Common terminal with digital input 7	0026
4	Relay 01	X14.1&2		0027
5	Relay 02	X14.3&4		0028
8	Digital Output 11	X20.1	GPIO option	0031
9	Digital Output 12	X20.2	GPIO option	0032
10	Digital Output 13	X20.3	GPIO option	0033
11	Digital Output 14	X20.4	GPIO option	0034
14	Relay 11	X23.1 & 2	GPIO option	0037
15	Relay 12	X23.3 & 4	GPIO option	0038

Parameter Name	No.	Path	Default	Range	Units	Writable
Digin Value	0005	Monitor::Inputs and Outputs Parameters::Inputs And Outputs::IO Values		0:Digin 01 1:Digin 02 2:Digin 03 3:Digin 04 4:Digin 05 5:Digin 06 6:Digin 07 7:STO Inactive 8:Digin 11 9:Digin 12 10:Digin 13 11:Digin 14 12:Run Key 13:Not Stop Key 14:Stop Key		NEVER

Presents all the digital inputs to the drive as a 16-bit word. The bits within the word may be accessed individually, or the entire word may be accessed as a group.

Bit	Signal name	Terminal	Comment	PNO for individual bit access
0	Digital Input 01	X13.2		0006
1	Digital Input 02	X13.3		0007
2	Digital Input 03	X13.4		0008
3	Digital Input 04	X12.1	Common terminal with digital output 1	0009
4	Digital Input 05	X12.2	Common terminal with digital output 2	0010
5	Digital Input 06	X12.3	Common terminal with digital output 3	0011
6	Digital Input 07	X12.4	Common terminal with digital output 4	0012
7	STO Inactive	X10		0013
8	Digital Input 11	X20.1	GPIO option	0014
9	Digital Input 12	X20.2	GPIO option	0015
10	Digital Input 13	X20.3	GPIO option	0016
11	Digital Input 14	X20.4	GPIO option	0017
12	Run Key	-	GKP Run key pressed*	0018
13	Not Stop Key	-	GKP Stop key not pressed*	0019
14	Stop Key	-	GKP Stop key pressed*	0020

\* If the GKP is not fitted then both "Not Stop Key" and "Stop Key" will be 0. This condition may be used to detect a disconnected GKP.

# D-100 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable								
<b>Anin 01 Value</b>	0039	Same as PNO 38	x.x	-100.0 to 100.0	%	NEVER								
Terminal X11.1 The value returned by the signal processing electronics. For unipolar ranges, (all except -10..10V), the value is expressed as a percentage of the hardware range. For the -10..10V range the full range signal is expressed as -100% to +100%.														
<b>Anin 01 Break</b>	0040	Same as PNO 38				NEVER								
When the input range is set to 4..20mA a break is defined as an input signal less than 3mA. Otherwise this parameter is set to FALSE.														
<b>Anin 02 Value</b>	0041	Same as PNO 38	x.x	-100.0 to 100.0	%	NEVER								
Terminal X11.2 The value returned by the signal processing electronics. For the 0..10V range the value is expressed as a percentage of the hardware range, (0 to 100%). For the -10..10V range the full range signal is expressed as -100% to +100%.														
<b>Anout 01 Value</b>	0042	Same as PNO 38	0.00	Min to Max	%	ALWAYS								
Terminal X11.3 The desired output value expressed as a percentage of the output range. <table border="1"> <thead> <tr> <th>Range</th> <th>Mapping</th> </tr> </thead> <tbody> <tr> <td>0..10V</td> <td>0% gives 0V, 100% gives 10V</td> </tr> <tr> <td>0..20mA</td> <td>0% gives 0mA, 100% gives 20mA</td> </tr> <tr> <td>4..20mA</td> <td>0% gives 4mA, 100% gives 20mA</td> </tr> </tbody> </table>							Range	Mapping	0..10V	0% gives 0V, 100% gives 10V	0..20mA	0% gives 0mA, 100% gives 20mA	4..20mA	0% gives 4mA, 100% gives 20mA
Range	Mapping													
0..10V	0% gives 0V, 100% gives 10V													
0..20mA	0% gives 0mA, 100% gives 20mA													
4..20mA	0% gives 4mA, 100% gives 20mA													
<b>Anout 02 Value</b>	0043	Same as PNO 38	0.00	Min to Max	%	ALWAYS								
Terminal X11.4 The desired output value expressed as a percentage of the output range. <table border="1"> <thead> <tr> <th>Range</th> <th>Mapping</th> </tr> </thead> <tbody> <tr> <td>-10..10V</td> <td>-100% gives -10V, 100% gives 10V</td> </tr> <tr> <td>0..10V</td> <td>0% gives 0V, 100% gives 10V</td> </tr> </tbody> </table>							Range	Mapping	-10..10V	-100% gives -10V, 100% gives 10V	0..10V	0% gives 0V, 100% gives 10V		
Range	Mapping													
-10..10V	-100% gives -10V, 100% gives 10V													
0..10V	0% gives 0V, 100% gives 10V													

**Local Control****Parameters::Keypad::Local Control**

These parameters configure the use of the GKP keys for local start / stop control of the drive.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Run Key Action</b>	1140	Parameters::Keypad::Local Control	0	0:RUN 1:JOG		STOPPED
<p>Defines the use of the green run key in local mode.</p> <p>When RUN is selected, pressing the green Run key will start the drive using Local Reference as the active setpoint. To stop the drive press the RED Stop key.</p> <p>When JOG is selected, pressing the green Run key will start the drive running using the Jog Setpoint as the active setpoint. The drive will stop when the key is released.</p>						
<b>Local/Rem Key Active</b>	1253	Parameters::Keypad::Local Control	TRUE			ALWAYS
<p>Enables the L/R soft key function. This is used to change between Local and Remote sequencing modes from the GKP.</p>						
<b>Local Dir Key Active</b>	1255	Parameters::Keypad::Local Control	TRUE			ALWAYS
<p>Enables the ability to change the direction from the GKP when running in local sequencing mode. When FALSE the direction will always be positive.</p>						
<b>Local Run Key Active</b>	1239	Parameters::Keypad::Local Control	TRUE			ALWAYS
<p>Enables the green Run key function when in local sequencing mode. When FALSE the Run key is ignored, (for both RUN and JOG modes).</p>						
<b>Local Reverse</b>	1240	Parameters::Keypad::Local Control	FALSE			ALWAYS
<p>Used to change the direction the motor will rotate when in local sequencing mode. When FALSE the direction will be "Forwards". When TRUE the direction will be reverse.</p>						

# D-102 Parameter Reference

## Minimum Speed

### Setup::Application::Minimum Speed

Function availability depends on macro selected.

The minimum speed function is used to determine how the AC30V will follow a reference.


Parameter Name	No.	Path	Default	Range	Units	Writable
Minimum Speed Value	1906	Setup::Application::Minimum Speed	-100.0	-100.0 to 100.0	%	ALWAYS

Specifies the minimum output value.

Minimum Speed Mode	1907	Setup::Application::Minimum Speed	0	0:PROP WITH MINIMUM 1:LINEAR		ALWAYS
--------------------	------	-----------------------------------	---	---------------------------------	--	--------

There are two modes of operation.

### Functional Description

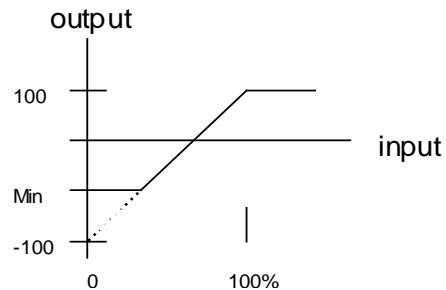

There are two operating modes for the **MINIMUM SPEED** function:

#### **PROP WITH MINIMUM (proportional with minimum)**

In this mode the **MINIMUM SPEED** function behaves like a simple clamp. The **Minimum Speed Value** has the valid range -100% to 100% and the output is always greater than or equal to the **Minimum Speed Value**.

#### **LINEAR**

In this mode the **MINIMUM SPEED** function first clamps the input to zero then rescales the input such that the output goes linearly between minimum and 100% for an input that goes from 0 to 100%.

Note the constraints:-

- min  $\geq$  0
- input  $\geq$  0
- max = 100%

**Modbus**

*Monitor::Communications::Base Modbus  
Setup::Communications::Base Modbus  
Parameters::Base Comms::Modbus*

Refer to [Appendix A Modbus TCP](#)

# D-104 Parameter Reference

## Modbus RTU Option

*Monitor::Communications::Option*  
*Setup::Communications::Option*  
*Parameters::Option Comms::Comms*  
*Parameters::Option Comms::Read Process*  
*Parameters::Option Comms::Write Process*  
*Parameters::Option Comms::Event*  
*Parameters::Option Comms::Modbus RTU*

Refer to [Modbus RTU Technical Manual HA501839U001](#)



### **Modbus TCP Option**

***Monitor::Communications::Option***  
***Setup::Communications::Option***  
***Parameters::Option Comms::Comms***  
***Parameters::Option Comms::Read Process***  
***Parameters::Option Comms::Write Process***  
***Parameters::Option Comms::Event***  
***Parameters::Option Comms::Option Ethernet***  
***Parameters::Option Comms::Modbus TCP***

[Refer to Modbus TCP Technical Manual HA501937U001](#)

# D-106 Parameter Reference

## Motor Load

### **Parameters::Motor Control::Motor Load**

Motor Protection, function of the motor type.

The **Motor Load** parameters determines the allowed level of motor overload. This can be especially useful when operating with motors smaller than the drive rating.

For an IM, an IxT protection is used and provides a current reduction if the max overload level is reached.

The max overload level is calculated based on a 150% for 60s.

For a PMAC motor, the motor load is calculated using the rated motor current and the thermal time constant (2 parameters of the PMAC motor module). The Thermal time constant is used as the constant time of a simple 1<sup>st</sup> order low pass filter.

% Are all related to rated motor current.

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>100% Mot Current</b>	0332	Parameters::Motor Control::Motor Load	x.x	0.0 to 10000.0		NEVER
Motor current in Amps rms corresponding to 100%						
<b>Mot Inv Time Overload</b>	0333	Parameters::Motor Control::Motor Load	x.	0 to 500	%	NEVER
Only available for IM motor						
Overload % of the motor inverse time protection						
<b>Mot Inv Time Delay</b>	0334	Parameters::Motor Control::Motor Load		6.000 to 60.000	s	ALWAYS
Only available for IM motor						
Overload time of the motor inverse time protection from cold state						

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Mot Inv Time Warning</b>	0335	Parameters::Motor Control::Motor Load				NEVER
<p>Only available for IM motor</p> <p>Output information. Becomes TRUE when the overload is 5% of the maximum value before reducing the current</p>						
<b>Mot Inv Time Active</b>	0336	Parameters::Motor Control::Motor Load				NEVER
<p>Only available for IM motor</p> <p>Output information. Becomes TRUE when overload reaches 100% of the overload limit</p>						
<b>Mot Inv Time Output %</b>	0337	Parameters::Motor Control::Motor Load	x.x	0.0 to 600.0	%	NEVER
<p>Only available for IM motor</p> <p>Actual output limit of the inverse time motor protection.</p> <p>This value is compared to the Stack Inv Time current limit output to provide the internal limit to the current limit module.</p>						
<b>Mot I2T TC</b>	0338	Parameters::Motor Control::Motor Load		0.000 to 1000000.000	s	NEVER
<p>Only available for PMAC motor</p> <p>Time constant of the motor, define in the PMAC Motor Data module</p>						
<b>Mot I2T Active</b>	0340	Parameters::Motor Control::Motor Load				NEVER
<p>Only available for PMAC motor</p> <p>Motor load has reached 105%</p>						
<b>Mot I2T Warning</b>	0341	Parameters::Motor Control::Motor Load				NEVER
<p>Only available for PMAC motor</p> <p>Motor load has reached 95%</p>						


# D-108 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
Mot I2T Enable	0342	Parameters::Motor Control::Motor Load				NEVER

Only available for PMAC motor

Output information : Motor I2T protection is active.

## Functional Description

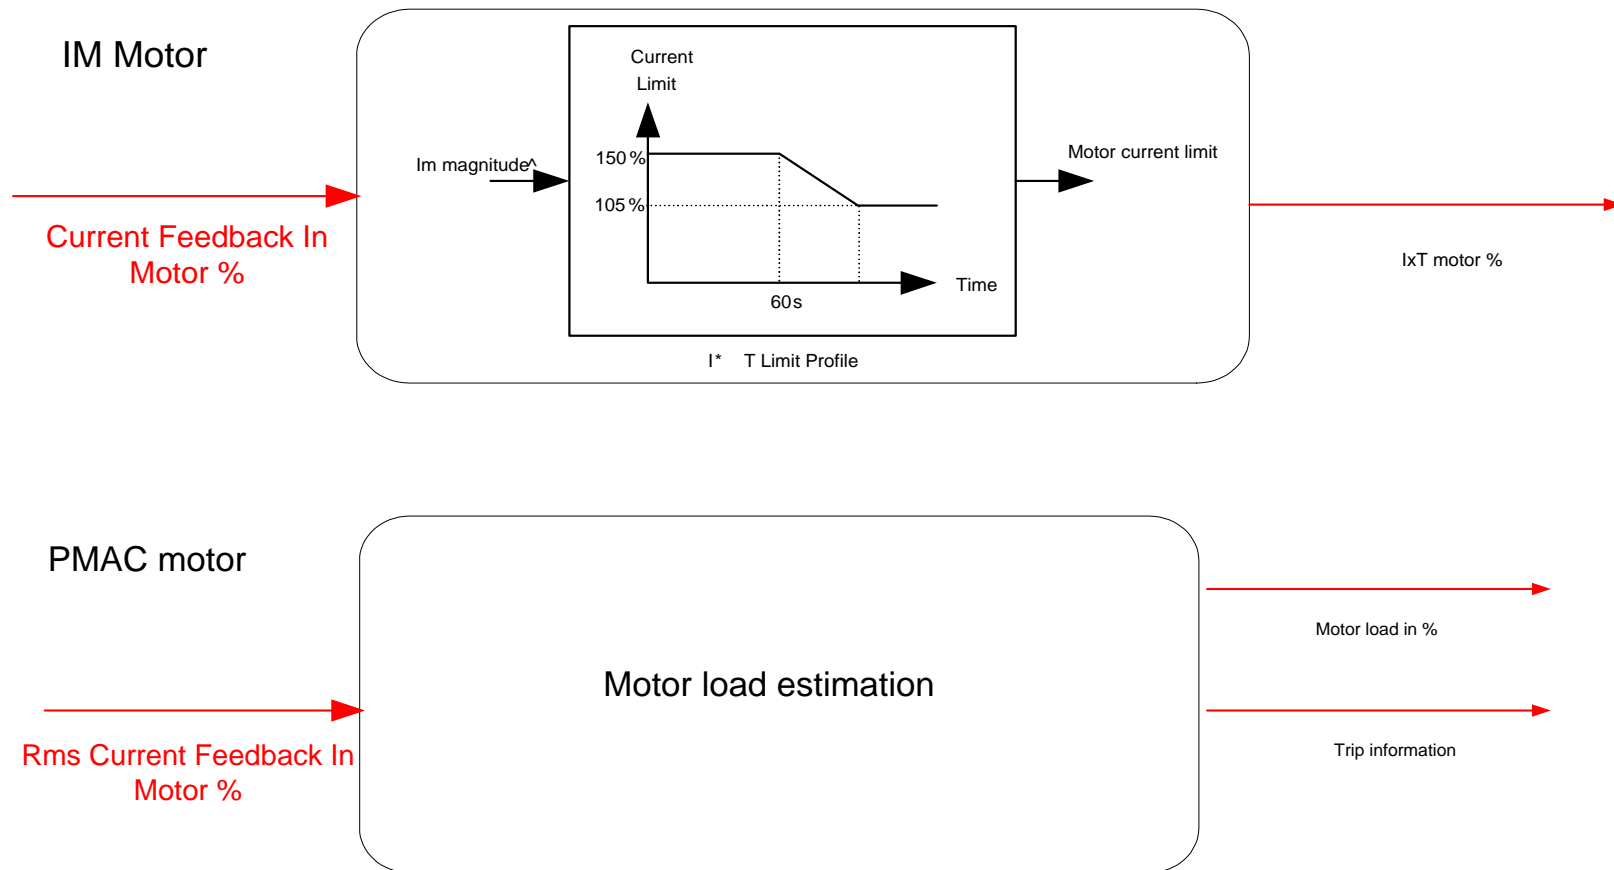

**Motor Nameplate****Setup::Motor Control::Motor Nameplate****Parameters::Motor Control::Motor Nameplate**Only available if IM MOTOR selected in **Control Mode**.

In this function you enter the details of the motor under control and any available motor nameplate information.

Refer to Induction Motor Data parameters which are determined by the Auto Tune feature for example the **Magnetising Current, Stator Resistance, Leakage Inductance, Mutual Inductance and Rotor time Constant** for model parameters.

**Note** Do not attempt to control motors whose rated current is less than 25% of the drive rated current. Poor motor control or Autotune problems may occur if you do.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Rated Motor Current</b>	0455	Setup::Motor Control::Motor Nameplate Parameters::Motor Control::Motor Nameplate	1.00	0.00 to 10000.00	A	STOPPED
Rated motor current on the name plate						
<b>Base Voltage</b>	0456	Same as PNO 455	400.00	0.00 to 1000.00	V	STOPPED
The rated motor voltage on the name plate						
<b>Base Frequency</b>	0457	Same as PNO 455	50.00	0.00 to 1000.00	Hz	STOPPED
The base motor frequency on the name plate						
<b>Motor Poles</b>	0458	Same as PNO 455	4,	2 to 1000		STOPPED
Motor poles on the nameplate						
<b>Nameplate Speed</b>	0459	Same as PNO 455	1420.00	0.00 to 100000.00	RPM	STOPPED
Rated motor speed on the name plate						

# D-110 Parameter Reference

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Motor Power</b>	0460	Same as PNO 455	2.20	0.00 to 3000.00	kW	STOPPED
Motor power rating						
<b>Power Factor</b>	0461	Same as PNO 455	0.79	0.00 to 1.00		STOPPED
Only under VHz Control						
Motor power factor on the name plate						

**Motor Sequencer****Parameters::Motor Control::Motor Sequencer**

These parameters are associated to the internal motor sequencer states machine to start and stop the motor control.

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Start Delay Enable</b>	1560	Parameters::Motor Control::Motor Sequencer	FALSE			STOPPED
Enable the delay to action “ramping to Setpoint” from the Run Command. This can allow a period for motor flux to establish ( AC induction motor ) before the ramp to setpoint						
<b>Start Delay</b>	1634	Parameters::Motor Control::Motor Sequencer	0.000	0.000 to 30.000	s	STOPPED
Time to delay the action of “ramping to Setpoint” from the Run Command in seconds.						
<b>Delay To Start</b>	1635	Parameters::Motor Control::Motor Sequencer		0.000 to Max	s	NEVER
Remaining time of the delay before “ ramping to Setpoint” after the Run Command occurs.						

# D-112 Parameter Reference

## MRAS

### Parameters::Motor Control::MRAS

These parameters are associated to the internal induction motor speed estimator (MRAS) module.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>MRAS Speed Percent</b>	286	Parameters::Motor Control::MRAS	x.xx	Min to Max	%	NEVER
Diagnostic parameter that displays speed calculated by the estimator as percent.						
<b>MRAS Speed RPM</b>	1634	Parameters::Motor Control::MRAS	x.xx	0.000 to 30.000	s	NEVER
Diagnostic parameter that displays speed calculated by the estimator as RPM.						
<b>MRAS Field Frequency</b>	1635	Parameters::Motor Control::MRAS	x.xx	0.000 to 30.000	Hz	NEVER
Diagnostic parameter that displays field frequency (electrical frequency) that the estimator provides for vector rotation.						
<b>MRAS Torque Percent</b>	1560	Parameters::Motor Control::MRAS	x.xx	Min to Max	%	NEVER
Diagnostic parameter that displays torque calculated by the estimator as percent.						
<b>MRAS Torque</b>	1634	Parameters::Motor Control::MRAS	x.xx	0.000 to 30.000	Nm	NEVER
Diagnostic parameter that displays torque calculated by the estimator as Nm.						
<b>Switchover Enable</b>	1635	Parameters::Motor Control::MRAS				ALWAYS
A boolean that enables or disables the ability to automatically switch into sensorless operation in the case of an encoder failure.						



**Functional Description**

The Switchover Enable parameter (1701) provides the user with the option to automatically, and as seamlessly as possible, continue operating in sensorless mode in case of an encoder failure. The MRAS estimator tracks the speed of the motor even if the drive uses encoder as its primary feedback for control. If the discrepancy between the speed measured by encoder and the estimated speed is greater than 300 RPM it is assumed that the encoder has malfunctioned and the control will automatically be transferred to use estimated speed as its feedback signal. The drive will continue to work in sensorless mode until the next stop cycle. There will be no attempt to 'reconnect' encoder on the fly even if its signal recovers. Upon the move to sensorless operation a warning will be issued that this has taken place.

The switchover will not be performed, even if enabled, during autotune sequence, if the flycatching is enabled, until the estimator converges to correct speed (typically within first 50-100ms after starting the drive), and until the motor has accelerated to 95% of its initial speed setpoint. The switchover will also not be performed if the setpoint speed is lower than the switchover threshold of 300 RPM.

# D-114 Parameter Reference

## Pattern Generator

### Parameters::Motor Control::Pattern Generator

The pattern generator function allows you to configure the Drive' PWM (Pulse Width Modulator) operation.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Stack Frequency</b>	0412	Parameters::Motor Control::Pattern Generator	4.00	2.00 to 16.00	kHz	ALWAYS
<p>This parameter selects the PWM switching frequency of the output power stack.</p> <p>The higher the switching frequency, the lower the level of motor audible noise. However, this is only achieved at the expense of increased drive losses and reduced stack current rating.</p> <p>Max value is <b>Control Mode</b> dependant :</p> <p>12 kHz for PMAC SVC 14kHz for IM SVC 16 kHz for V/Hz</p> <p>If the Peer To Peer feature is enabled, then the switching frequency is limited to 8kHz</p>						
<b>Random Pattern IM</b>	0413	Parameters::Motor Control::Pattern Generator	TRUE			ALWAYS
<p>This parameter selects between random pattern (quiet motor noise) or the more conventional fixed carrier PWM strategies, for induction motor only. When TRUE, random pattern is enabled. For Induction Motor Control, random pattern is only suitable for Stack Frequency &lt;=12kHz.Default value for induction motors is TRUE.</p> <p>If the Peer To Peer feature is enabled, random pattern is only suitable for Stack Frequency &lt;= 6 kHz</p>						
<b>Random Pattern PMAC</b>	1268	Parameters::Motor Control::Pattern Generator	FALSE			ALWAYS
<p>This parameter selects between random pattern (quiet motor noise) or the more conventional fixed carrier PWM strategies, for PMAC motor only. When TRUE, random pattern is enabled. For PMAC SVC control random pattern is only suitable for Stack Frequency &lt;=8kHz. Default value for PMAC motors is FALSE.</p>						
<b>Deflux Delay</b>	0414	Parameters::Motor Control::Pattern Generator	1.000	0.000 to 10.000	s	STOPPED
<p>Sets the minimum allowed delay between disabling and then re-enabling PWM production (i.e. stopping and starting the drive).</p>						

**Functional Description**

The Drive provides a unique quiet pattern PWM strategy in order to reduce audible motor noise. The user is able to select between the quiet pattern or the more conventional fixed carrier frequency method. With the quiet pattern strategy selected (RANDOM PATTERN enabled), audible motor noise is reduced to a dull hiss.

In addition, the user is able to select the PWM carrier frequency. This is the main switching frequency of the power output stage of the Drive. A high setting of carrier frequency (e.g. 6kHz) reduces audible motor noise but only at the expense of higher Drive losses and smooth motor rotation at low output frequencies. A low setting of carrier frequency (e.g. 3kHz), reduces Drive losses but increases audible motor noise.

# D-116 Parameter Reference

## Peer to Peer

***Setup::Communications::Peer to Peer  
Monitor:: Communications::Peer to Peer  
Parameters::Base Comms::Peer to Peer***

Refer to Chapter 12 "Ethernet".


**PID****Setup::Application::PID****Monitor::Application::PID\***

This function allows the AC30V to be used in applications requiring a trim to the reference, depending on feedback from an external measurement device. Typically this will be used for process control, i.e. pressure or flow.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Setpoint</b>						
This is connected to an Analog Input as part of the selected macro.						
<b>Feedback</b>						
This is connected to an Analog Input as part of the selected macro.						
<b>Enable</b>						
This is connected to a Digital Input as part of the selected macro. It globally resets the PID output and integral term when FALSE. <b>Enable</b> must be TRUE for the PID to operate.						
<b>Integral Defeat</b>						
This may be connected to a Digital Input as part of the selected macro. It resets the p integral term when FALSE.						
<b>PID Setpoint Negate</b>	1926	Monitor::Application::Preset Speeds	REAL	-100.0 to 100.0	%	NEVER
Changes the sign of the Setpoint input						
<b>PID Feedback Negate</b>	1927	Setup::Application::PID	BOOL			ALWAYS
Changes the sign of the Negate input						
<b>PID Proportional Gain</b>	1928	Setup::Application::PID	REAL			ALWAYS
This is the true proportional gain of the PID controller. When set to zero the PID Output is zero.						

# D-118 Parameter Reference

## Functional Description

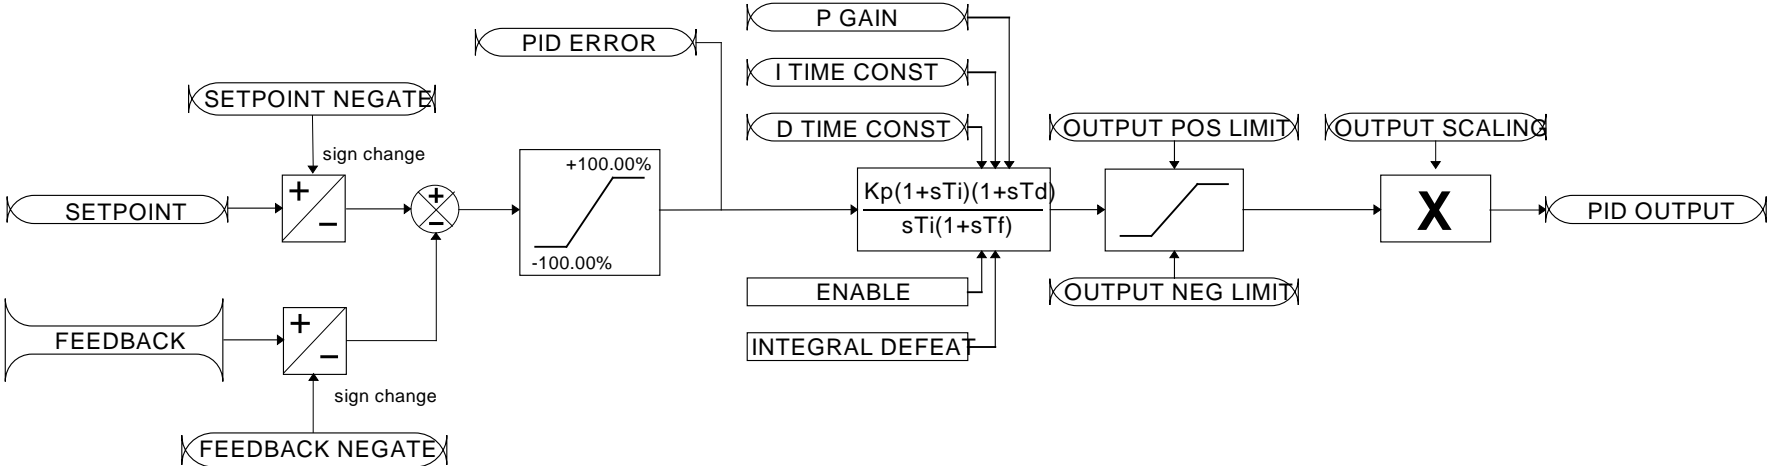

**PMAC Flycatching****Parameters::Motor Control::PMAC Flycatching**

Only available if PMAC MOTOR selected in **Control Mode**.

This block performs a directional speed search. It allows the Drive to seamlessly catch a spinning motor before controlling the motor to the desired setpoint. This is especially useful for large inertia fan loads, where drafts in building air ducts can cause a fan to 'windmill'.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>PMAC Flycatching Enable</b>	0689	Parameters::Motor Control::PMAC Flycatching	FALSE			ALWAYS

Enable the flycatching for PMAC motor

<b>PMAC Fly Search Mode</b>	0690	Parameters::Motor Control::PMAC Flycatching	0	Same as PNO 312		ALWAYS
-----------------------------	------	---	---	-----------------	--	--------

The PMAC Flycatching sequence can be triggered by different starting conditions:

ALWAYS: All starts (after controlled or uncontrolled stop, or after a power-up)

TRIP or POWER-UP: After uncontrolled stop, i.e. trip or coast, or after a power-up

TRIP: After uncontrolled stop, i.e. trip or coast

<b>PMAC Fly Search Time</b>	0691	Parameters::Motor Control::PMAC Flycatching	0.200	0.100 to 60.000	s	ALWAYS
-----------------------------	------	---	-------	-----------------	---	--------

PMAC Fly Search Time to catch the right speed

<b>PMAC Fly Load Level</b>	0692	Parameters::Motor Control::PMAC Flycatching	5.0	-50.0 to 50.0	%	ALWAYS
----------------------------	------	---	-----	---------------	---	--------

PMAC Fly Load Level during fly catching

<b>PMAC Fly Active</b>	0693	Parameters::Motor Control::PMAC Flycatching				NEVER
------------------------	------	---	--	--	--	-------

Diagnostic to show if the PMAC fly catching is active or inactive

# D-120 Parameter Reference

<i>Parameter Name</i>	<i>No.</i>	<i>Path</i>	<i>Default</i>	<i>Range</i>	<i>Units</i>	<i>Writable</i>
<b>PMAC Fly Setpoint</b>	0694	Parameters::Motor Control::PMAC Flycatching	x.	-1000 to 1000	Hz	NEVER

PMAC Fly Setpoint

---

## Functional Description

The flycatching function enables the drive to be restarted smoothly into a spinning motor.



**PMAC Motor Data****Setup::Motor Control::MotorData PMAC****Parameters::Motor Control::PMAC Motor Data**Only available if PMAC Motor selected in **Control Mode**.

The PMAC Motor Data contains the parameters needed to run and control of a PMAC motor. A PMAC motor is a Permanent Magnet AC Motor with sinusoidal back EMF.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>PMAC Max Speed</b>	0555	Setup::Motor Control::Motor Data PMAC Parameters::Motor Control::PMAC Motor Data	3000	0 to 100000	RPM	ALWAYS
Set the motor's rated speed in rpm.						
<b>PMAC Max Current</b>	0556	Same as PNO 555	4.50	0.00 to 5000.00	A	ALWAYS
Set the motor's maximum current ( Amps rms ).						
<b>PMAC Rated Current</b>	0557	Same as PNO 555	4.50	0.00 to 5000.00	A	ALWAYS
Set the motor's rated current ( Amps rms ).						
Refer to <b>Motor Current Percent</b> in the <b>Feedbacks</b> function. A value of 100% = PMAC rated Current.						
<b>PMAC Rated Torque</b>	0558	Same as PNO 555	4.50	0.00 to 30000.00	Nm	ALWAYS
Set the motor's rated torque.						
Refer to <b>Actual Torque</b> in the <b>Feedbacks</b> function. A value of 100% = PMAC Rated Torque.						
<b>PMAC Motor Poles</b>	0559	Same as PNO 555	10	0 to 400		ALWAYS
Set the number of motor poles, e.g. for a 4 poles motor enter "4".						

# D-122 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>PMAC Back Emf Const KE</b>	0560	Same as PNO 555	60.0	0.0 to 30000.0	V	ALWAYS
Set the motor's Back EMF line to line, rms value (Ke, Volts rms per 1000 rpm)						
<b>PMAC Winding Resistance</b>	0561	Same as PNO 555	6.580	0.000 to 50.000	Ohm	ALWAYS
Set the motor's resistance, line to line at 25 °C.						
<b>PMAC Winding Inductance</b>	0562	Same as PNO 555	20.00	0.00 to 1000.00	mH	ALWAYS
Set the motor's inductance line to line at maximum current. This parameter is used within the current loop and is related to the overall proportional gain.						
<b>PMAC Torque Const KT</b>	0563	Same as PNO 555	1.00	0.00 to 10000.00	Nm/A	ALWAYS
Torque constant (Kt, Nm/A rms). This parameter is used to compute the current demand given a torque demand : Torque demand = KT x Current demand						
<b>PMAC Motor Inertia</b>	0564	Same as PNO 555	0.00100	0.00000 to 100.00000	kgm <sup>2</sup>	ALWAYS
Rotor inertia of motor.						
<b>PMAC Therm Time Const</b>	0565	Same as PNO 555	62.000	0.000 to 10000.000	s	ALWAYS
Copper Thermal Time constant(s). If not known set to 300s. This parameter is used for the motor thermal protection : Refer to Motor Load module. It represents the time needed to reach 63% of the rated load of the motor if 100% of the rated current is applied to the motor (typical time constant of a first order low pass filter).						

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>PMAC Base Volt</b>	1387	Setup::Motor Control::Motor Data PMAC Parameters::Motor Control::PMAC Motor Data	400.00	0.00 to 1000.00	V	ALWAYS

Rated motor rated voltage in Volt rms

<b>PMAC Encoder Offset</b>	1808	Setup::Motor Control::Motor Data PMAC Parameters::Motor Control::PMAC Motor Data	0.0	-180.0 to 180.0	deg	ALWAYS
----------------------------	------	--	-----	-----------------	-----	--------

Only available if **1533 Control Type** = ENCODER FEEDBACK

Electrical position Offset between encoder Zero position and motor Back EMF

Automatically set up if Alignment sequence runs and completed

<b>PMAC Wiring</b>	1809	Setup::Motor Control::Motor Data PMAC Monitor::Motor and Drive Parameters::Motor Control::PMAC Motor Data	0	Same as PNO 1804		ALWAYS
--------------------	------	---	---	------------------	--	--------

Only available if **1533 Control Type** = ENCODER FEEDBACK

Wiring direction of the motor phase :

- STANDARD : U V W
- REVERSE : U W V

Allow to change connection of phase V and W internally to the drive. No external action required.


Automatically set up if Alignment sequence runs and completed.

**Changing this parameter will change the direction of motor rotation. Please verify if the new direction is compatible with your application.**

# D-124 Parameter Reference

## Functional Description

By definition, the motor Vector Control is based on the assumption that the back EMF is crossing the 0V line in a positive direction when the electrical position is also crossing the 0° line in a positive way. Another requirement is to insure a positive 'encoder/resolver' rotation with a positive electrical motor rotation ( U, V, W ).

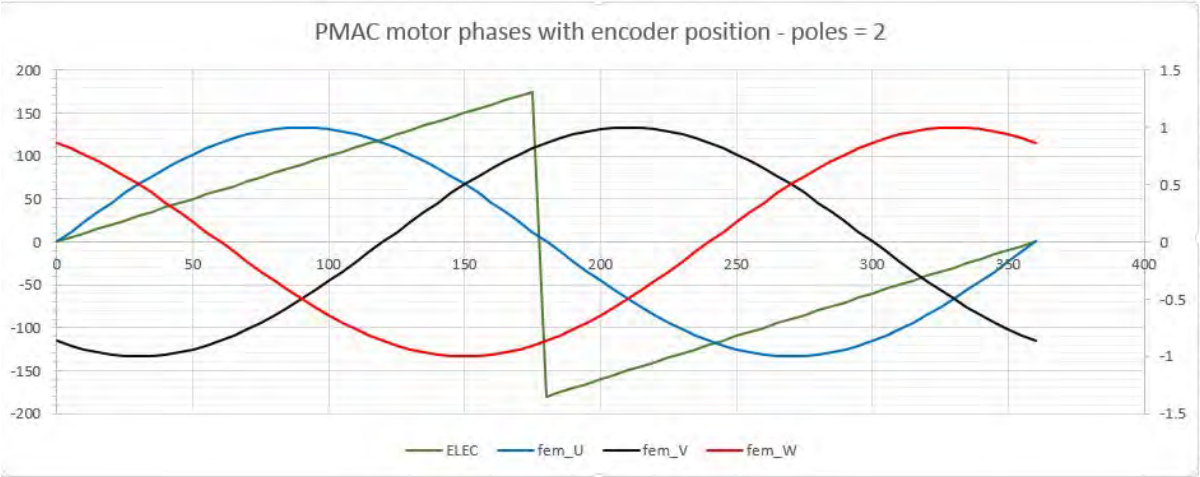

**PMAC SVC****Parameters::Motor Control::PMAC SVC**

Only available if PMAC MOTOR selected in **Control Mode**.

Parameters related to the **SVC Control mode** of a PMAC Motor

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>PMAC SVC Auto Values</b>	0467	Parameters::Motor Control::PMAC SVC	TRUE			ALWAYS
<p>Selection of pre-calculated values</p> <p>When selected, do some pre-calculations of the following PMAC SVC parameters:</p> <p><b>PMAC SVC LPF Speed Hz</b></p> <p><b>PMAC SVC P Gain</b></p> <p><b>PMAC SVC I Gain Hz</b></p>						
<b>PMAC SVC LPF Speed Hz</b>	0468	Parameters::Motor Control::PMAC SVC	60.00	0.00 to 10000.00	Hz	ALWAYS
<p>Set the Low Pass Filter frequency of the estimated speed.</p>						
<b>PMAC SVC P Gain</b>	0469	Parameters::Motor Control::PMAC SVC	1.00	0.00 to 10000.00		ALWAYS
<p>Set the Proportional gain of the PI corrector used for extracting speed and position.</p>						
<b>PMAC SVC I Gain Hz</b>	0470	Parameters::Motor Control::PMAC SVC	20.00	0.00 to 10000.00	Hz	ALWAYS
<p>Set the Integral frequency of the PI corrector used for extracting speed and position.</p>						
<b>PMAC SVC Open Loop Strt</b>	0476	Parameters::Motor Control::PMAC SVC	TRUE			ALWAYS
<p>This parameter is used to enable/disable a specific startup procedure when the motor/drive is switched ON (starting rotation). This parameter is also used to work in up – down motion, where we need to go down to zero speed or crossing the zero speed point.</p>						

## D-126 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
----------------	-----	------	---------	-------	-------	----------

When set TRUE, the following procedure is applied each time the motor is switched on and before closing the speed loop, based on the external speed setpoint.

The drive must be used in speed loop mode.

When the drive is switched ON, the system is placed in open loop control.

### Step 1:

For a time equal to the 'PMAC SVC Start Time' parameter, the current is ramped to the **PMAC SVC Start Cur** value. The sign is dependent upon the speed loop setpoint. A normal value is between 0.5 to 1s.


### Step 2:

Once Step 1 is complete, the position is ramped in such a way as to follow the speed setpoint generated, based on the configuration (ramp, etc...), until the **PMAC SVC Start Speed** value is reached. The speed loop is then closed.

The ramp value must be kept low to ensure the motor follows the speed setpoint.

---


For a positive speed setpoint when the drive is switched ON :

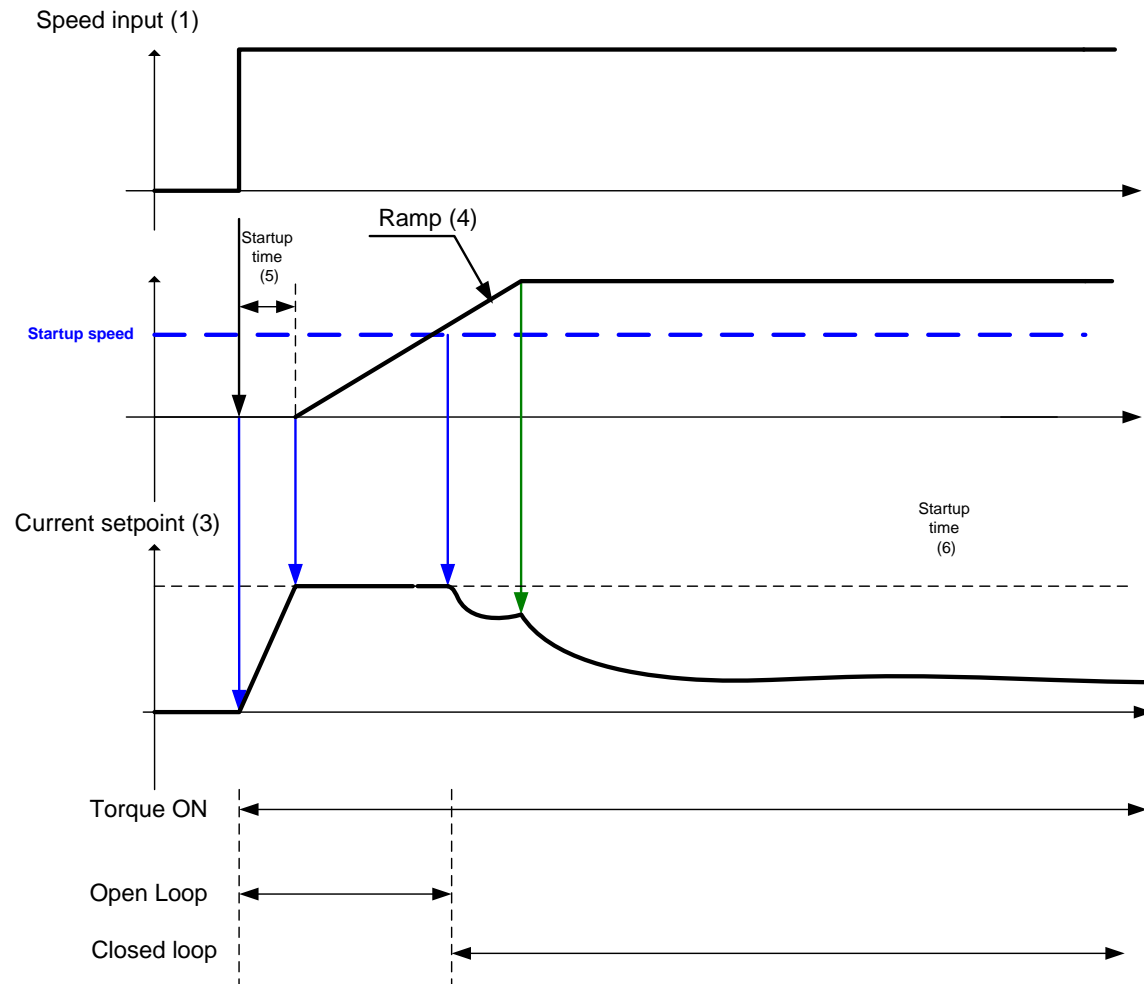

- (1) : User speed setpoint
- (2) : Internal speed setpoint
- (3) : Internal current setpoint
- (4) : ramps are generated based on ramp parameters
- (5) : startup procedure : a current is smoothly installed into the motor
- (6) : startup procedure : the motor is rotated for one electrical turn

# D-128 Parameter Reference

For a negative speed setpoint when the drive is switched ON :

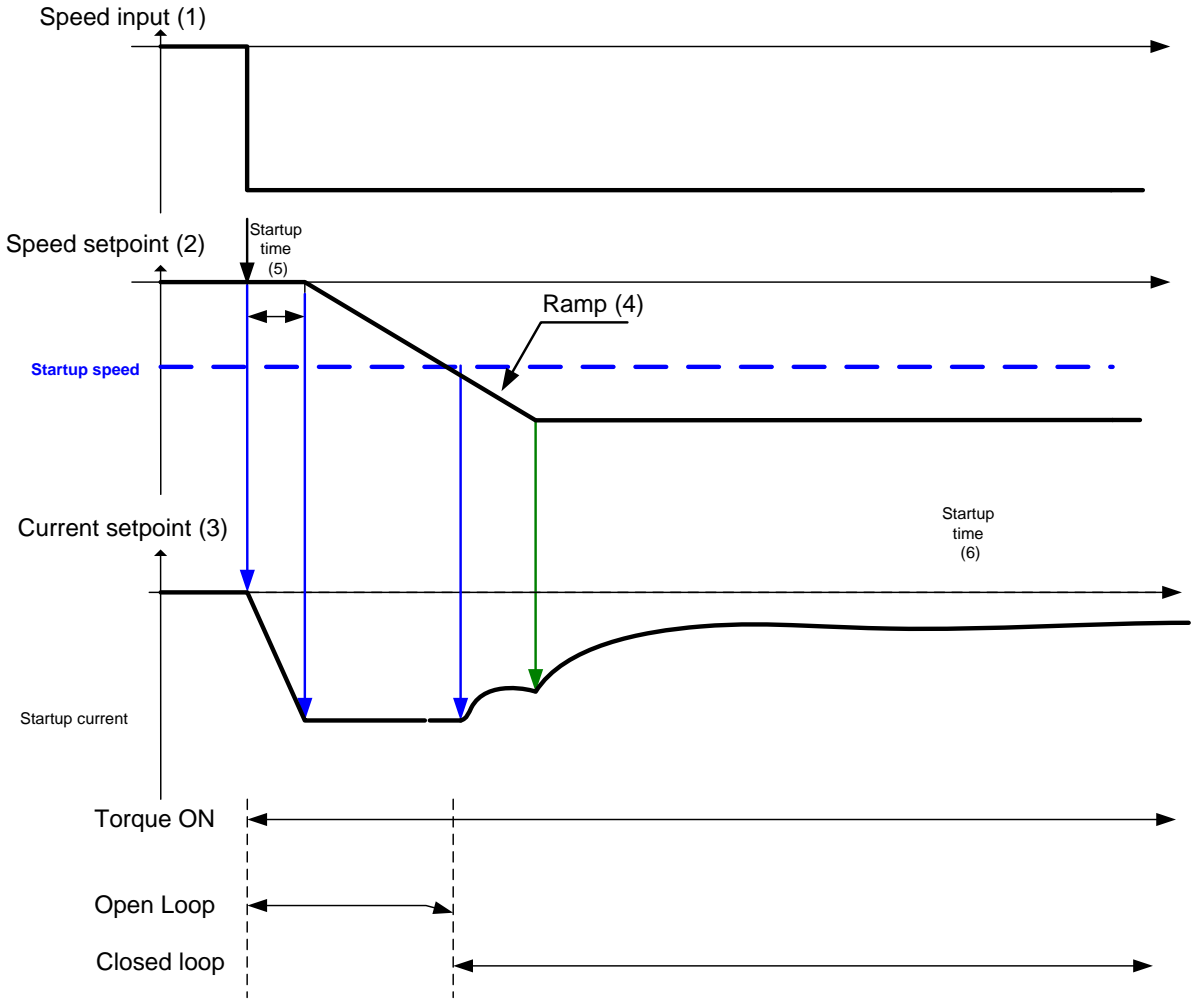

- (1) : User speed setpoint
- (2) : Internal speed setpoint
- (3) : Internal current setpoint
- (4) : ramps are generated based on ramp parameters
- (5) : startup procedure : a current is smoothly installed into the motor
- (6) : startup procedure : the motor is rotated for one electrical turn



Parameter Name	No.	Path	Default	Range	Units	Writable
----------------	-----	------	---------	-------	-------	----------

<b>PMAC SVC Start Time</b>	0477	Parameters::Motor Control::PMAC SVC	0.500	0.000 to 1000.000	s	ALWAYS
----------------------------	------	-------------------------------------	-------	-------------------	---	--------

This parameter is used in conjunction with the **PMAC SVC Open Loop Strt** parameter. It selects the duration of Step 1 in the startup procedure used for starting motors:

The value should be set up relatively to the motor inertia + load inertia.

<b>PMAC SVC Start Cur</b>	0478	Setup::Motor Control::SVC PMAC Parameters::Motor Control::PMAC SVC	10.0	0.0 to 600.0	%	ALWAYS
---------------------------	------	---	------	--------------	---	--------

This parameter is used in conjunction with the **PMAC SVC Open Loop Strt** parameter. It selects the current level during the startup procedure used for starting motors.

The percentage value is a percentage of the nominal motor current (**PMAC Rated Current** of the **PMAC Motor Data** functions).

The default value of 10% is considered appropriate for most applications with light load, very low friction and low acceleration.

The value should be adapted to the starting conditions.

<b>PMAC SVC Start Speed</b>	0479	Same as PNO 478	5	0 to 200	%	ALWAYS
-----------------------------	------	-----------------	---	----------	---	--------

This parameter is used in conjunction with the **PMAC SVC Open Loop Strt** parameter. It selects the speed setpoint at which the speed control is switched from an open loop mode to a closed loop mode during the startup procedure used for starting motors.


The percentage value is a percentage of the maximum application speed (**100% Speed in RPM** of the **Scale Setpoint** functions). It should be set to an equivalent of 5% of the **PMAC Max Speed** of **PMAC Motor Data** function.

In open loop mode, the system is not controlled in speed mode. It must only be used to 'start' the motor under heavy conditions, or to transitorily reach the zero speed or crossing the zero speed setpoint. It is not intended to be used to control accurately a motion.

# D-130 Parameter Reference


Parameter Name	No.	Path	Default	Range	Units	Writable
----------------	-----	------	---------	-------	-------	----------

## Up and Down Motion - Positive speed

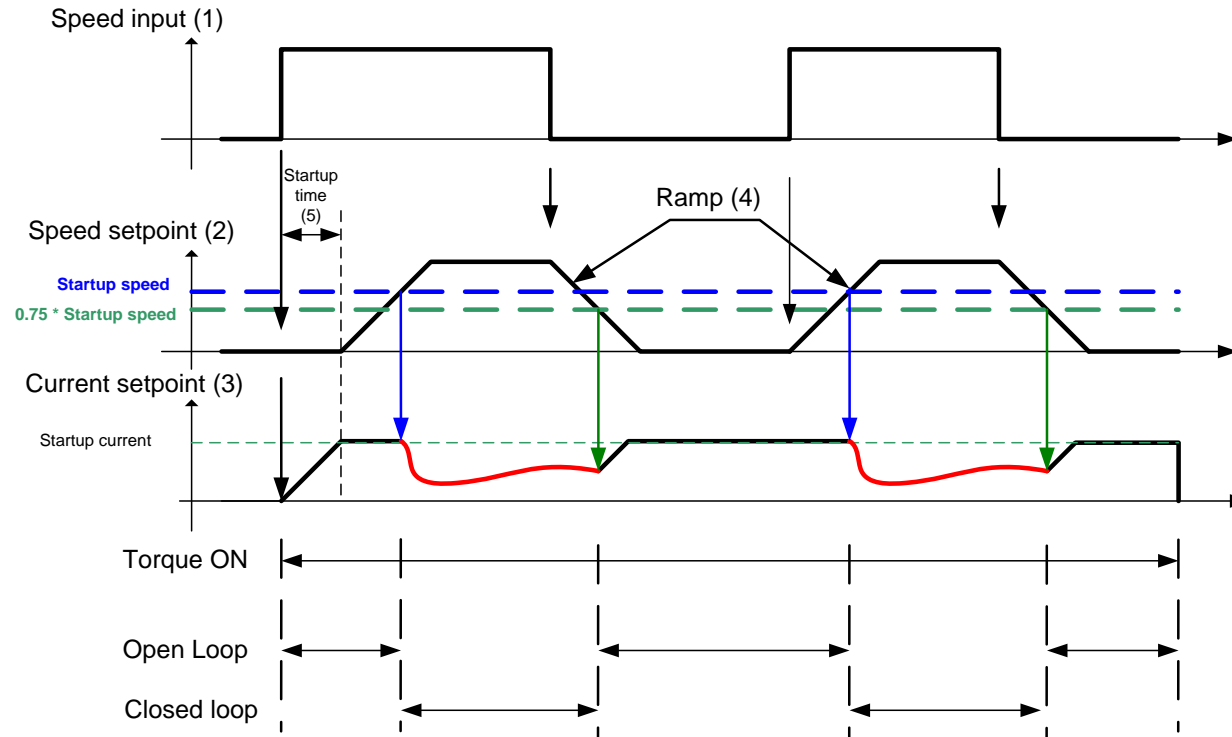

- (1) : User speed setpoint
- (2) : Internal speed setpoint
- (3) : Internal current setpoint
- (4) : ramps are generated based on ramp parameters
- (5) : startup procedure : a current is smoothly installed into the motor

**Negative Speed**

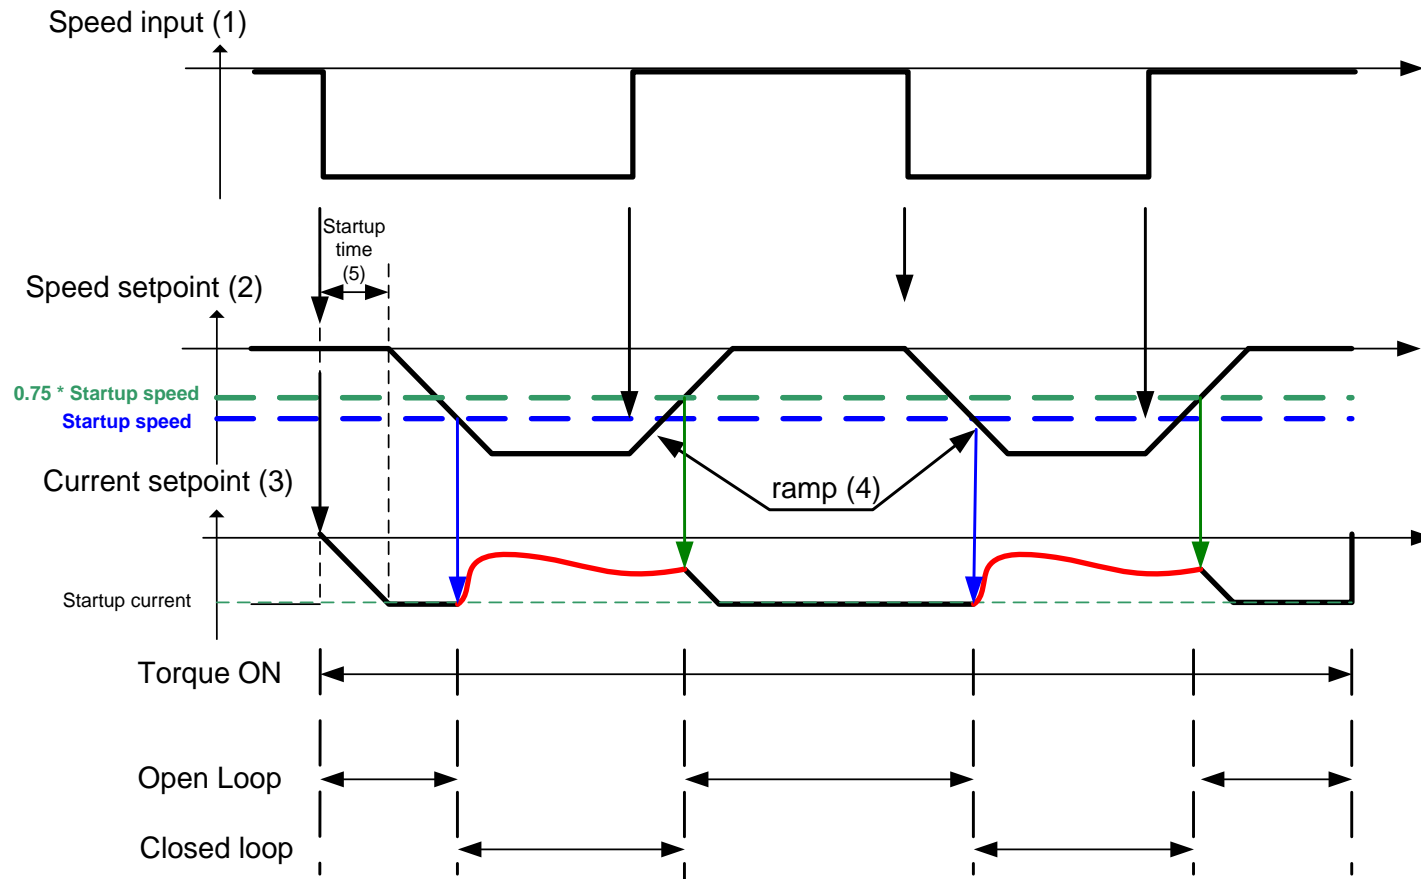


- (1) : User speed setpoint
- (2) : Internal speed setpoint
- (3) : Internal current setpoint
- (4) : ramps are generated based on ramp parameters
- (5) : startup procedure : a current is smoothly installed into the motor

# D-132 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
----------------	-----	------	---------	-------	-------	----------

## Crossing zero speed

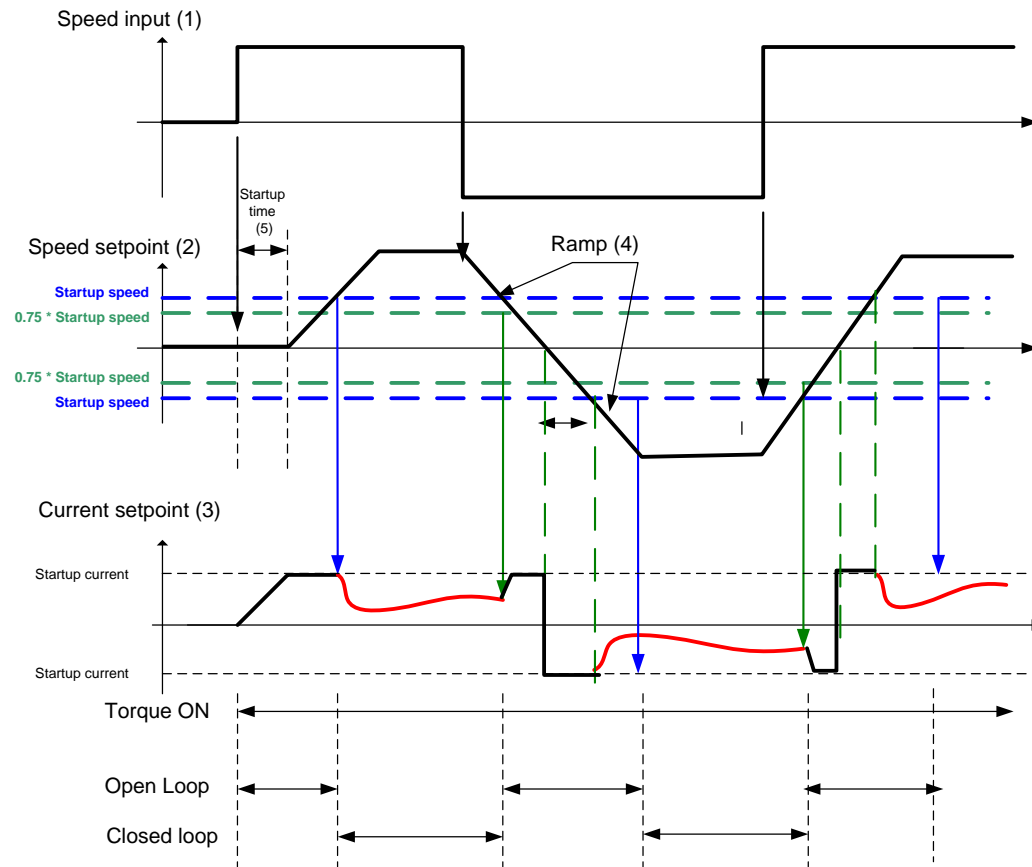

- (1) : User speed setpoint
- (2) : Internal speed setpoint
- (3) : Internal current setpoint
- (4) : ramps are generated based on ramp parameters
- (5) : startup procedure : a current is smoothly installed into the motor
- (6) : zero crossing for the speed input : the current must be inverted into the motor

**Pos Fbk Alignment****Parameters::Motor Control::Pos Fbk Alignment**

Only available if PMAC MOTOR selected in **Control Mode** and **Control Type** set to ENCODER FEEDBACK .

Vector Control of a PMAC motor needs to know the relative position between the rotor and the stator.

By definition, the AC30 Vector Control for a PMAC Motor is based on the assumption that the motor back EMF is crossing the 0V line in a positive direction when the electrical position is also crossing the 0° line in a positive way. Another requirement is to insure a positive 'encoder/resolver' rotation with a positive electrical motor rotation ( U, V, W ).

This feature is used to automatically calculate any offset between the encoder absolute position and the motor back EMF, as well as selecting the correct wiring of the motor ( U, V, W sequence ) with the encoder position.

The feature needs to be run at least once with a PMAC motor associated to an absolute encoder type.

The feature needs to be run after each power cycle with a PMAC motor associated to a relative encoder type ( pulse encoder for example )

The feature is run on a motor free to rotate, no load attached to the motor shaft.

Regardless of the Alignment Method selected, the motor should move during the sequence.

**If Alignment Method is set to AUTOMATIC, it is possible that the direction of motor rotation for a positive setpoint could be reversed. The parameter 1809 PMAC Wiring can be changed and overwritten by the sequence if an incompatibility of direction between the encoder and the motor phases wiring is found.**

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Alignment Enable</b>	1798	Setup::Motor Control::Pos Fbk Alignment Parameters::Motor Control::Pos Fbk Alignment	FALSE			STOPPED
Enable the Alignment sequence.						
<b>Alignment On Power On</b>	1796	Setup::Motor Control::Pos Fbk Alignment Parameters::Motor Control::Pos Fbk Alignment	FALSE			STOPPED

# D-134 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<p>Set to TRUE, this parameter automatically trips the drive after a power up on a Start command until an Alignment sequence is run and completed successfully.</p> <p>This is useful when the PMAC motor is associated to a relative encoder type and the position synchronism between encoder and motor is lost due to power off.</p>						
<b>Alignment On Power On</b>	1797	Setup::Motor Control::Pos Fbk Alignment Parameters::Motor Control::Pos Fbk Alignment	FALSE	0 : MANUAL 1 : AUTOMATIC 2 : DIRECTION TEST		STOPPED

Each Method is extensively described in the [Functionnal Description](#).

**MANUAL** :

allows to place the motor in the selected position defined by the parameter "Alignment On Motor". This method should be selected for multi poles resolver with non integer value.

**AUTOMATIC**:

Sequence runs automatically by the drive, on a start command from the user.

Allows to set up correctly the 'encoder/resolver' and the motor by :

- Changing the motor phase connection of phase V and W internally to the drive if a mismatch is found between 'encoder/resolver' positive direction and positive motor electrical position
- Automatically calculate the offset of position to align zero 'encoder/resolver' to U motor phase.

**DIRECTION TEST** :

Allows to verify the direction of positive electrical position by slowly rotating the motor. A correct wiring of the motor phases should turn the motor in a clockwise direction looking at the front shaft of the motor

<b>Alignment Level</b>	1799	Same as PNO 1796	50	0 to 150	%	ALWAYS
<p>Level of current applied to the motor. Motor amps% of rated motor amps, limited to rated drive amps</p>						

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Alignment Ramp Time</b>	1800	Same as PNO 1796	1.000	0.000 to 30.000	s	ALWAYS
Time to install the amps into the motor phase with a linear ramp.						
<b>Alignment On Motor</b>	1801	Same as PNO 1796	0	0:PHASE U 1:PHASE V 2:PHASE W		ALWAYS
Selection of the motor phase when MANUAL method is selected. Can be <u><b>PHASE U</b></u> : "Alignment Elec Pos" should be 90° - <u><b>PHASE V</b></u> : "Alignment Elec Pos" should be 210° or -150° <u><b>PHASE W</b></u> : "Alignment Elec Pos" should be 330° or -30°						
<b>Alignment Offset</b>	1802	Parameters::Motor Control::Pos Fbk Alignment	x.x	-180.0 to 180.0	deg	NEVER
Represents the offset value needed to align Zero position to motor Back EMF <u><b>MANUAL</b></u> : Value is calculated and passed back to <b>1808 PMAC Encoder Offset</b> . <u><b>AUTOMATIC</b></u> : Value that has been applied to align the 'encoder/resolver' to the motor phase U with controls on position and motor phases. If the Alignment is completed, then this parameter is written back to <b>1808 PMAC Encoder Offset</b>						
<b>Alignment Elec Pos</b>	1803	Parameters::Motor Control::Pos Fbk Alignment	x.x	-180.0 to 180.0	deg	NEVER
Actual electrical position						
<b>Alignment Direction</b>	1804	Parameters::Motor Control::Pos Fbk Alignment		0:STANDARD 1:REVERSE		NEVER

# D-136 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
----------------	-----	------	---------	-------	-------	----------

Wiring direction of the motor phase :

- STANDARD : U V W : position and phase U V W are rotating in the same direction
- REVERSE : U W V : position and phase U V W are not rotating in the same direction. V and W have been inverted internally to the drive.

If the Alignment is completed, then this parameter is written back to **1809 PMAC Wiring**

<b>Alignment State</b>	1805	Parameters::Motor Control::Pos Fbk Alignment		0:OFF 1:ON MANUAL 2:ON AUTO 3:ERROR 4:ENDED		NEVER
------------------------	------	---	--	---	--	-------

State of Alignment sequence :

OFF : No Alignment sequence

ON MANUAL : **Alignment Method** = MANUAL or DIRECTION TEST + **Alignment Enable** = TRUE.

ON AUTO : **Alignment Method** = AUTOMATIC + **Alignment Enable** = TRUE.

ERROR : An error occurred during the Alignment. See Alignment error for possible diagnostics

ENDED : When Alignment sequence is run and successfully completed

<b>Alignment Ended</b>	1806	Parameters::Motor Control::Pos Fbk Alignment				NEVER
------------------------	------	---	--	--	--	-------

TRUE : Alignment sequence ended successfully.

FALSE : No Alignment sequence or Alignment sequence in progress



Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Alignment Error</b>	1807	Parameters::Motor Control::Pos Fbk Alignment		0:NO ERROR 1:SHAFT LOCKED 2:AMPS 3:LOAD 4:POLES 5:MOTOR UNCONNECTED 6:ENCODER 7:INIT NEEDED		NEVER

Details of the last error recorded.

Reset to NO ERROR by running a new Alignment sequence.

NO ERROR : Everything ok. Alignment sequence is running

SHAFT LOCKED : the drive is locked in position.

AMPS : Not enough Amps to move the motor. **Alignment Level too small**

LOAD : Not enough Amps to move the motor. Is the motor free to rotate? Is there a load on the motor?

POLES : Bad motor poles number.

MOTOR UNCONNECTED : Motor phases disconnected. Verify the motor wiring

ENCODER : Something wrong detected on encoder speed and/or position.

INIT NEEDED : When **Alignment On Power On** = TRUE and a Start command has been detected. The drive should have tripped on **46 PMAC ALIGN ERROR**

# D-138 Parameter Reference

## Functional Description

The feature needs to be run after each power cycle with a PMAC motor associated to a relative encoder type ( pulse encoder for example ).

The feature is run on a motor free to rotate, no load attached to the motor shaft.  
Regardless of the Alignment Method selected, the motor should move during the sequence.

The sequence is validated by **Alignment Enable** input.  
The drive waits for a START condition to start the cycle.  
The sequence can be stopped by a STOP command anywhere during the cycle.  
A successful sequence sets **Alignment Ended = TRUE**.

A TORQUE OFF command is needed to stop the sequence.

**If Alignment Method is set to AUTOMATIC, it is possible that the direction of motor rotation for a positive setpoint could be reversed. The parameter PMAC Wiring can be changed by the sequence if an incompatibility of direction between the encoder and the motor phases wiring is found.**

### Alignment Method = MANUAL

The motor is moved to an electrical position corresponding to the motor phase selected by **Alignment On Motor** parameter.  
**This electrical position depends on the PMAC Wiring** type selected and on the real motor phase wiring.

**PMAC Encoder Offset** is calculated by looking at real position from the active encoder compared to theoretical position where the motor is.  
So, it depends also on the encoder settings ( inverted or not ).

For standard connections ( correct U, V, W motor wiring sequence and position from encoder varying in a positive way looking at the motor front shaft ), position offset is extracted and written back into PMAC Encoder Offset.  
Correct connection of the encoder means that a clockwise rotation of the motor front shaft equals a positive position variation.  
Correct motor wiring means phase U, V, W rotating in a correct sequence for a clock wise rotation of the motor front shaft.

Considering a standard connection, the following table gives possible encoder and **PMAC Wiring** settings and results on speed control :

1809 PMAC Wiring	Active Encoder Invert*	Correct speed control	Positive Speed setpoint **
STANDARD	FALSE	YES	Clockwise direction
STANDARD	TRUE	NO***	
REVERSE	FALSE	NO***	
REVERSE	TRUE	YES	Counter clockwise direction

\* Active Encoder Invert refers to the active speed feedback invert parameter.

\*\* Looking the front shaft of the motor

\*\*\* **The motor is uncontrolled. It could overspeed, be stalled, or running at constant speed without any control.**

**Alignment Method = DIRECTION TEST**

The motor is slowly rotates with the following sequence U, V, W, U, V, W.....  
 It allows to verify the rotation direction and detect any wiring inversion on the motor phases.  
 Active encoder Invert parameter has no effect during this test.  
 Looking at the position form the active encoder may help to know if the active encoder is correctly wired.


Considering a correct connection of the motor phases :

1809 PMAC Wiring	Motor Rotation direction
STANDARD	Clockwise
REVERSE	Counter Clockwise

When running this Method, either set **1257 Seq Stop Method** to DISABLE VOLTAGE or **0505 Zero Speed Threshold** to 1% otherwise you may end up with a motor rotating at slow speed for 60s without any possibility to stop it.

**Alignment Method = AUTOMATIC**


In case of a correct wiring of encoder and/or motor phases, the sequence is as follows :

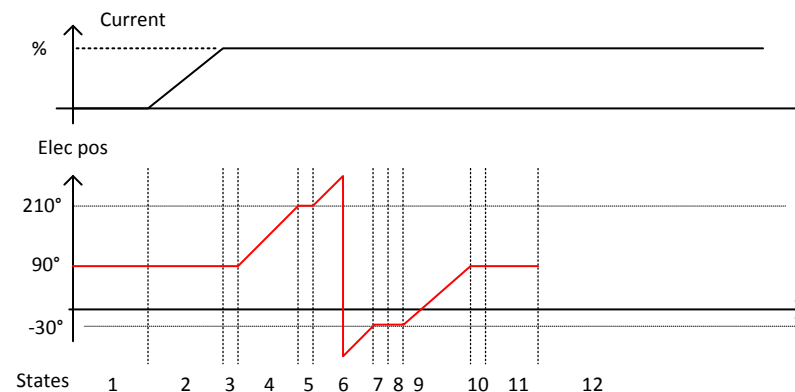

During the final state ( 11 ) , the Alignment Offset is automatically calculated and is passed back to **1808 PMAC Encoder Offset**  
 Also **1809 PMAC Wiring** is set to STANDARD

# D-140 Parameter Reference

In the case of a wrong wiring of encoder and/or motor phases, the sequence is as follows :

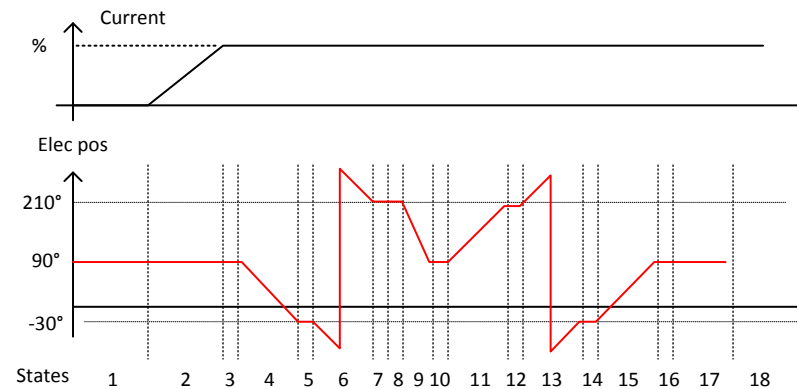

From State 4 to 9, a wrong direction as been detected, and the direction should be reverted. **Alignment Direction** is set to REVERSE. During the final state ( 17 ), the Alignment Offset is automatically calculated and is passed back to **1808 PMAC Encoder Offset** Also **1809 PMAC Wiring** is set to REVERSE.

**In that case, the direction of motor rotation has been changed during the Pos Alignment sequence. Please verify if the new direction is compatible with your application.**  
**If you want to change it, please change the Invert parameter of the active encoder used to control the motor and run again the Pos alignment sequence.**

## Drive settings during Pos Alignment :

Some errors may occur during the Alignment sequence which are related to the setting of the drive. Please be aware of the following

- It's better to run it with a speed setpoint at 0% ( Speed Error could end up the sequence before end )
- When running **Alignment Method = DIRECTION TEST**, either set **1257 Seq Stop Method** to DISABLE VOLTAGE or **0505 Zero Speed Threshold** to 1%
- When a resolver is used, the filter on the speed should be left at default values or set to good known values.

**Power Loss Ride Thru****Parameters::Motor Control::Power Loss Ride Thru**

The block controls the behaviour of the drive during a power outage.

When enabled, the drive attempts to keep the dc link high by regeneratively recovering the kinetic energy in the motor load in the event of a main power supply loss.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Pwrl Enable</b>	1645	Parameters::Motor Control::Power Loss Ride Thru	FALSE			STOPPED
Enable the Power Loss Ride Through feature.						
<b>Pwrl Trip Threshold</b>	1646	Parameters::Motor Control::Power Loss Ride Thru	52.0	20.0 to 60.0	%	STOPPED
Determines the dc link volts at which the Power Loss Ride Through sequence is triggered. % of the max dc link voltage ( drive overvoltage level = 100% )						
<b>Pwrl Control Band</b>	1647	Parameters::Motor Control::Power Loss Ride Thru	2.0	0.0 to 20.0	%	STOPPED
Determines the band while the speed setpoint is ramped down. % of the max dc link voltage ( drive overvoltage level = 100% ) Once the dclink falls down below <b>Pwrl TripThreshold</b> , the speed sepoint is ramped to zero until the dc link rises above <b>Pwrl trip Threshold + Pwrl Control Band</b> . Then the speed sepoint is hold, waiting either to continue ramping down if the dc link is still moving down or ramped back to the speed sepoint if the supply returns.						
<b>Pwrl Accel Rate</b>	1648	Parameters::Motor Control::Power Loss Ride Thru	100	1 to 500	Hz/s	STOPPED
Rate in Hz/s ( electrical frequency/ second) at which the speed sepoint is ramped back to the speed demand						

# D-142 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Pwrl Decel Rate</b>	1649	Parameters::Motor Control::Power Loss Ride Thru	100	1 to 500	Hz/s	STOPPED
<p>Rate in Hz/s ( electrical frequency/ second) at which the speed septoint is ramped to Zero</p> <p>If this value is set too low, then the deceleration will may be not enough high for having regenerative condition to maintain the dc link.</p>						
<b>Pwrl Time Limit</b>	1650	Parameters::Motor Control::Power Loss Ride Thru	30.000	0.000 to 300.000	s	STOPPED
<p>Maximum allowed time in second of the Power Loss Ride Through sequence</p> <p>If this value is reached, the the drive will trip on POWER LOSS STOP.</p>						
<b>Pwrl Active</b>	1651	Parameters::Motor Control::Power Loss Ride Thru				NEVER
<p>This diagnostic is TRUE while the Power Loss Ride Through is active</p>						

## Functional Description

When **Pwrl Enable** is set to TRUE, the block controls the behaviour of the drive during a power outage.

This is achieved by ramping the speed setpoint to zero( **Pwrl Decel Rate** ).

The dc link fall detection is triggered by **Pwrl Trip Threshold**. **Pwrl Control Band** determines the band of dc link ( between by **Pwrl Trip Threshold** and **Pwrl trip Threshold + Pwrl Control Band** ) while the speed septoint is ramped down to zero using **Pwrl Decel Rate** to try recovering the kinetic energy.

If during the outage the supply returns, the speed is automatically ramped back ( **Pwrl Accel Rate** ) to the speed setpoint.

The condition to validate the supply returns is met if the dc link is kept higher than ( **Pwrl trip Threshold + Pwrl Control Band** ) for more than 500ms. During this time, the speed setpoint is hold.


**Pwrl Time Limit** determines the maximum time of the Power Loss Ride Through sequence. If this time is exceeded, the drive will trip on POWER LOSS STOP.

During the Power Loss Ride Through sequence, **Pwrl Active** becomes TRUE.

When **Pwrl Enable** is set to FALSE, the drive will trip on UNDERVOLTS if the main supply is removed.

This feature is run at a rate of 1 milli-second.

**IMPORTANT:** If **DC Link Volts Limit** feature enabled, **Pwrl Accel Rate** and **Pwrl Decel Rate** really applied to the speed setpoint are limited by **Acceleration Time** and **Deceleration Time** of the Ramp.

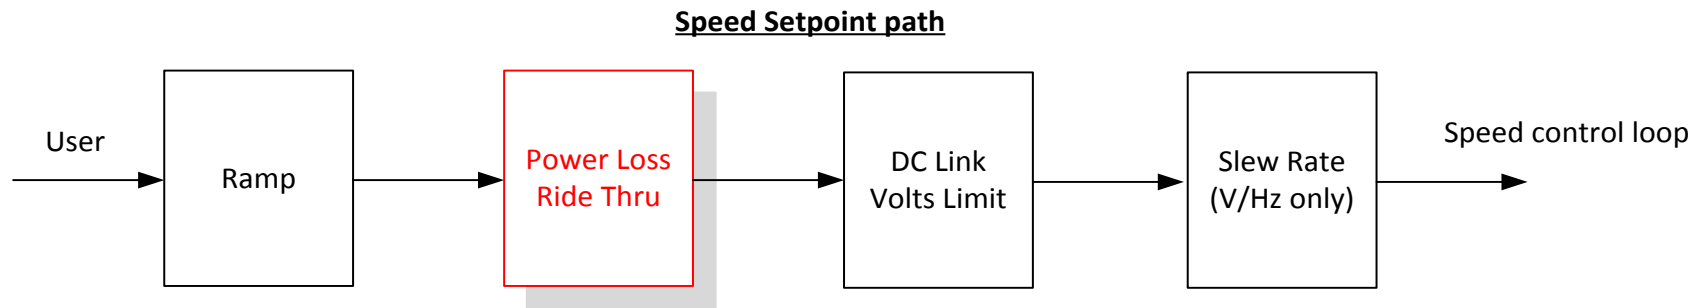

## D-144 Parameter Reference

### Precision Time Protocol (PTP)

*Setup::Communications::PTP*

*Monitor:: Communications::PTP*

*Parameters::Base Comms::PTP*

Refer to Chapter 12 "Ethernet".



**Preset Speeds**

**Setup::Application::Preset Speeds**  
**Monitor::Application::Preset Speeds\***

This function is available when the **Presets** macro is selected.

The **Presets** function selects 1 of 8 values to be used as a reference.

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Preset Speed 0</b> Preset Speed Output when Selected Preset equals 0	1916	Setup::Application::Preset Speeds	0.0	-100.0 to 100.0	%	ALWAYS
<b>Preset Speed 1</b> Preset Speed Output when Selected Preset equals 1	1917	Setup::Application::Preset Speeds	0.0	-100.0 to 100.0	%	ALWAYS
<b>Preset Speed 2</b> Preset Speed Output when Selected Preset equals 2	1918	Setup::Application::Preset Speeds	0.0	-100.0 to 100.0	%	ALWAYS
<b>Preset Speed 3</b> Preset Speed Output when Selected Preset equals 3	1919	Setup::Application::Preset Speeds	0.0	-100.0 to 100.0	%	ALWAYS
<b>Preset Speed 4</b> Preset Speed Output when Selected Preset equals 4	1920	Setup::Application::Preset Speeds	0.0	-100.0 to 100.0	%	ALWAYS
<b>Preset Speed 5</b> Preset Speed Output when Selected Preset equals 5	1921	Setup::Application::Preset Speeds	0.0	-100.0 to 100.0	%	ALWAYS
<b>Preset Speed 6</b> Preset Speed Output when Selected Preset equals 6	1922	Setup::Application::Preset Speeds	0.0	-100.0 to 100.0	%	ALWAYS
<b>Preset Speed 7</b> Preset Speed Output when Selected Preset equals 7	1923	Setup::Application::Preset Speeds	0.0	-100.0 to 100.0	%	ALWAYS
<b>Selected Preset*</b> Monitor showing selected preset number	1924	Monitor::Application::Preset Speeds		0 to 7		NEVER
<b>Preset Speed Output</b> Monitor showing selected preset value	1925	Monitor::Application::Preset Speeds		-100.0 to 100.0	%	NEVER

**Select 0**

This is connected to a Digital Input as part of the selected macro. It provides bit 0 of the Selected Preset number.

**Select 1**

This is connected to a Digital Input as part of the selected macro. It provides bit 1 of the Selected Preset number.


**Select 2**

This is connected to a Digital Input as part of the selected macro. It provides bit 2 of the Selected Preset number.

# D-146 Parameter Reference

## Functional Description

Select 2	Select 1	Select 0	Selected Preset
<i>FALSE</i>	<i>FALSE</i>	<i>FALSE</i>	<b>Preset Speed 0</b>
<i>FALSE</i>	<i>FALSE</i>	<i>TRUE</i>	<b>Preset Speed 1</b>
<i>FALSE</i>	<i>TRUE</i>	<i>FALSE</i>	<b>Preset Speed 2</b>
<i>FALSE</i>	<i>TRUE</i>	<i>TRUE</i>	<b>Preset Speed 3</b>
<i>TRUE</i>	<i>FALSE</i>	<i>TRUE</i>	<b>Preset Speed 4</b>
<i>TRUE</i>	<i>TRUE</i>	<i>FALSE</i>	<b>Preset Speed 5</b>
<i>TRUE</i>	<i>FALSE</i>	<i>FALSE</i>	<b>Preset Speed 6</b>
<i>TRUE</i>	<i>FALSE</i>	<i>FALSE</i>	<b>Preset Speed 7</b>

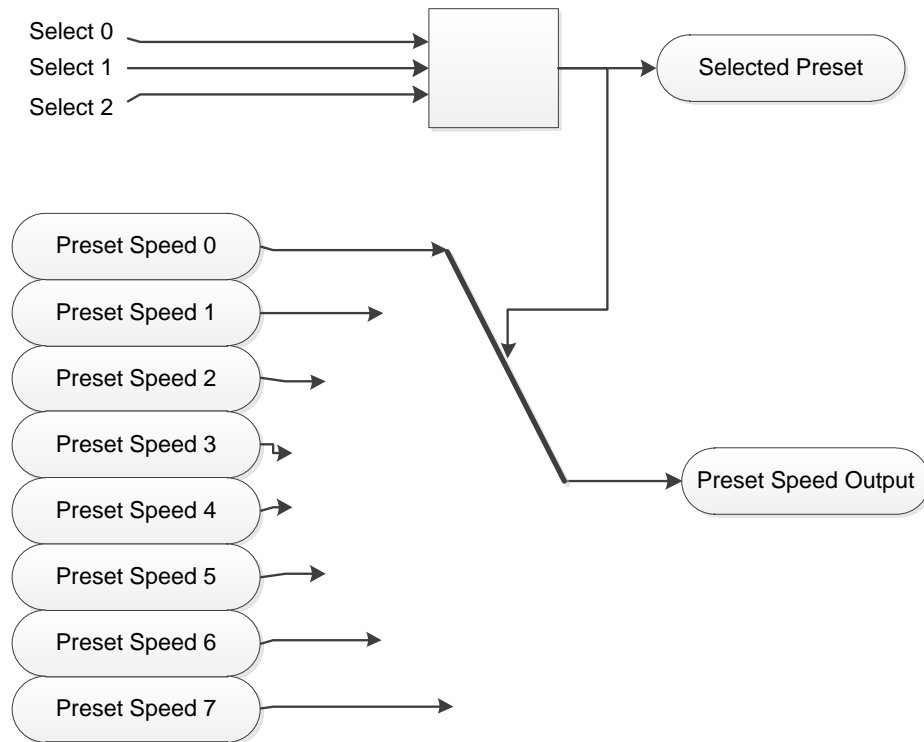

### **Profibus DP-V1 Option**

***Monitor::Communications::Option***

***Setup::Communications::Option***

***Parameters::Option Comms::Comms***

***Parameters::Option Comms::Read Process***

***Parameters::Option Comms::Write Process***

***Parameters::Option Comms::Event***

***Parameters::Option Comms::Profibus***

[Refer to Profibus DP-V1 Technical Manual HA501837U001](#)

## D-148 Parameter Reference

### **PROFINET IO Option**

*Monitor::Communications::Option*

*Setup::Communications::Option*

*Parameters::Option Comms::Comms*

*Parameters::Option Comms::Read Process*

*Parameters::Option Comms::Write Process*

*Parameters::Option Comms::Event*

*Parameters::Option Comms::Option Ethernet*

*Parameters::Option Comms::PROFINET IO*

[Refer to Profinet IO Technical Manual HA501838U001](#)

## Raise Lower

**Setup::Application::Raise Lower**  
**Monitor::Application::Raise Lower\***

Appears when the **Raise/Lower** macro is selected.

The **Raise/Lower** function acts as an internal motorised potentiometer (MOP) used as a reference source.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>RL Ramp Time</b>	1901	Setup::Application::Raise Lower	10.0	0.0 to 600.0	s	ALWAYS

Rate of change of the **Output**. Defined as the time to change from 0.00% to 100.00% . Note that the raise and lower rates are always the same.

<b>L Reset Value</b>	1902	Setup::Application::Raise Lower	0.0	-500.0 to 500.0	%	ALWAYS
----------------------	------	---------------------------------	-----	-----------------	---	--------

The value Output is set to when the Reset Input is TRUE.

<b>RL Maximum Value</b>	1903	Setup::Application::Raise Lower	100.0	-500.0 to 500.0	%	ALWAYS
-------------------------	------	---------------------------------	-------	-----------------	---	--------

The maximum value to which **Output** will ramp up to.

<b>RL Minimum Value</b>	1904	Setup::Application::Raise Lower	-100.0	-500.0 to 500.0	%	ALWAYS
-------------------------	------	---------------------------------	--------	-----------------	---	--------

The minimum value to which **Output** will ramp down to.

### Reset Input

This is connected to a Digital Input as part of the selected Macro. When TRUE forces **Output** to track **Reset Value**.

### Raise Input

This is connected to a Digital Input as part of the selected Macro. When TRUE causes **Output** to ramp up.

# D-150 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
----------------	-----	------	---------	-------	-------	----------

## Lower Input

This is connected to a Digital Input as part of the selected Macro. When TRUE causes **Output** to ramp down.

<b>Raise Lower Output</b>	1905	Monitor::Application::Raise Lower	0.0	-500.0 to 500.0		NEVER
---------------------------	------	-----------------------------------	-----	-----------------	--	-------

The ramp output monitor. **Output** is preserved during the power-down of the Drive.

## Functional Description

The table below describes how **Output** is controlled by **Raise Input**, **Lower Input** and **Reset Input**.

Reset	Raise Input	Raise Output	Action
TRUE	Any	Any	<b>Output</b> tracks <b>Reset Value</b>
FALSE	TRUE	FALSE	<b>Output</b> ramps up to <b>Maximum Value</b> at <b>Ramp Time</b>
FALSE	FALSE	TRUE	<b>Output</b> ramps down to <b>Minimum Value</b> at <b>Ramp Time</b>
FALSE	FALSE	FALSE	<b>Output</b> not changed. *
FALSE	TRUE	TRUE	<b>Output</b> not changed. *

\* If **Output** is greater than **Maximum Value** the **Output** will ramp down to **Maximum Value** at **Ramp Time**. If **Output** is less than **Minimum Value** the **Output** will ramp up to **Minimum Value** at **Ramp Time**.

**IMPORTANT:** *If **Maximum Value** is less than or equal to **Minimum Value**, then **Output** is set to **Maximum Value**.*

**Ramp****Parameters::Motor Control::Ramp**

This function forms part of the reference generation. It provides the facility to control the rate at which the Drive will respond to a changing setpoint demand.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Seq Stop Method VHz</b>	0484	Setup::Motor Control::Control and Type Parameters::Motor Control::Ramp	1	0:DISABLED VOLTAGE 1:RAMP 2:STOP RAMP 3:DC INJECTION		ALWAYS

Volts/Hz control mode only

Selects stopping mode that the controller will use once the run command has been removed. The choices are:

*Enumerated Value : Stopping Mode*

<b>Seq Stop Method SVC</b>	1257	Setup::Motor Control::Control and Type Parameters::Motor Control::Ramp	1	0:DISABLED VOLTAGE 1:RAMP 2:STOP RAMP		ALWAYS
----------------------------	------	---	---	---	--	--------

All Control modes except Volts/Hz

Selects stopping mode that the controller will use once the run command has been removed. The choices are:

Enumerated Value : Stopping Mode

When DISABLED VOLTAGE ( COAST ) is selected the motor will free-wheel. When RAMP is selected the Drive will decelerate using the reference ramp deceleration time, provided it is non-zero. When STOP RAMP is selected the motor will decelerate in **Stop Ramp Time**.

<b>Acceleration Time</b>	0486	Same as PNO 484	10.000	0.000 to 3000.000	s	ALWAYS
--------------------------	------	-----------------	--------	-------------------	---	--------

The time that the Drive will take to ramp the setpoint from 0.00% to 100.00% when **Ramp Type** is LINEAR.

<b>Deceleration Time</b>	0487	Same as PNO 484	10.000	0.000 to 3000.000	s	ALWAYS
--------------------------	------	-----------------	--------	-------------------	---	--------

The time that the Drive will take to ramp the setpoint from 100.00% to 0.00% when **Ramp Type** is LINEAR.

# D-152 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Symmetric Mode</b>	0488	Parameters::Motor Control::Ramp	FALSE			ALWAYS
<p>Select whether to use <b>Acceleration Time</b> and <b>Deceleration Time</b> pair of ramp rates, or to use <b>Symmetric Time</b> to define the ramp rate for the Drive.</p>						
<b>Ramp Type</b>	0485	Parameters::Motor Control::Ramp	0	0:LINEAR 1:S RAMP		ALWAYS
<p>Selects the ramp type</p>						
<b>Symmetric Mode</b>	0488	Parameters::Motor Control::Ramp	FALSE			ALWAYS
<b>Symmetric Time</b>	0489	Parameters::Motor Control::Ramp	10.000	0.000 to 3000.000	s	ALWAYS
<p>The time that the Drive will take to ramp from 0.00% to 100.00% and from 100.00% to 0.00% when <b>Symmetric Mode</b> is TRUE.</p>						
<b>Sramp Continuous</b>	0490	Parameters::Motor Control::Ramp	FALSE			ALWAYS
<p>When TRUE, and S ramp is selected in <b>Ramp Type</b>, forces a smooth transition if the speed setpoint is changed when ramping. The curve is controlled by the <b>Sramp Acceleration</b> and <b>Sramp Jerk1</b> to <b>Sramp Jerk 4</b> parameters. When FALSE, there is an immediate transition from the old curve to the new curve.</p>						
<b>Sramp Acceleration</b>	0491	Parameters::Motor Control::Ramp	10.0	0.0 to 100.0	%/s <sup>2</sup>	ALWAYS
<p>Sets the acceleration rate in units of percent per second<sup>2</sup>, i.e. if the full speed of the machine is 1.25m/s then the acceleration will be:  <math>1.25 \times 75.00\% = 0.9375\text{m/s}^2</math></p>						
<b>Sramp Deceleration</b>	0492	Parameters::Motor Control::Ramp	10.0	0.0 to 100.0	%/s <sup>2</sup>	ALWAYS
<p>This functions in the same way as <b>Sramp Acceleration</b> above.</p>						



Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Sramp Jerk 1</b>	0493	Parameters::Motor Control::Ramp	10.0	0.0 to 100.0	%/s <sup>3</sup>	ALWAYS
Rate of change of acceleration for the first segment of the curve in units of percent per second <sup>3</sup> , i.e. if the full speed of the machine is 1.25m/s then the jerk will be: $1.25 \times 50.00\% = 0.625\text{m/s}^3$						
<b>Sramp Jerk 2</b>	0494	Parameters::Motor Control::Ramp	10.0	0.0 to 100.0	%/s <sup>3</sup>	ALWAYS
Rate of change of acceleration in units of percent per second <sup>3</sup> for segment 2						
<b>Sramp Jerk 3</b>	0495	Parameters::Motor Control::Ramp	10.0	0.0 to 100.0	%/s <sup>3</sup>	ALWAYS
Rate of change of acceleration in units of percent per second <sup>3</sup> for segment 3						
<b>Sramp Jerk 4</b>	0496	Parameters::Motor Control::Ramp	10.0	0.0 to 100.0	%/s <sup>3</sup>	ALWAYS
Rate of change of acceleration in units of percent per second <sup>3</sup> for segment 4						
<b>Ramp Hold</b>	0497	Parameters::Motor Control::Ramp	FALSE			ALWAYS
When TRUE the output of the ramp is held at its last value						
<b>Ramping Active</b>	0498	Parameters::Motor Control::Ramp				NEVER
Set TRUE when ramping.						
<b>Ramp Spd Setpoint Input</b>	0499	Parameters::Motor Control::Ramp	x.x	-200.0 to 200.0	%	NEVER
Input speed setpoint to the ramp						

# D-154 Parameter Reference


Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Ramp Speed Output</b>	0500	Parameters::Motor Control::Ramp	x.x	-200.0 to 200.0	%	NEVER
Output speed						
<b>Jog Setpoint</b>	0501	Parameters::Motor Control::Ramp	10.0	0.0 to 100.0	%	ALWAYS
The setpoint is the target reference that the Drive will ramp to						
<b>Jog Acceleration Time</b>	0502	Parameters::Motor Control::Ramp	1.000	0.000 to 3000.000	s	ALWAYS
The time that the Drive will take to ramp the jog setpoint from 0.00% to 100.00%.						
<b>Jog Deceleration Time</b>	0503	Parameters::Motor Control::Ramp	1.000	0.000 to 3000.000	s	ALWAYS
The time that the Drive will take to ramp the jog setpoint from 100.00% to 0.00%.						
<b>Stop Ramp Time</b>	0504	Same as PNO 484	10.000	0.000 to 600.000	s	ALWAYS
Rate at which the demand is ramped to zero after the ramp has been quenched						
<b>Zero Speed Threshold</b>	0505	Parameters::Motor Control::Ramp	0.1	0.0 to 100.0	%	ALWAYS
Hold for zero speed detection used by stop sequences						
<b>Zero Speed Stop Delay</b>	0506	Parameters::Motor Control::Ramp	0.500	0.000 to 30.000	s	ALWAYS
Sets the time at which the Drive holds zero speed before quenching after a normal stop or a jog stop. This may be particularly useful if a mechanical brake requires time to operate at zero speed, or for jogging a machine to position						

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Quickstop Time Limit</b>	0507	Parameters::Motor Control::Ramp	30.000	0.000 to 3000.000	s	ALWAYS
Maximum time that the Drive will try to Quickstop, before quenching						
<b>Quickstop Ramp Time</b>	0508	Parameters::Motor Control::Ramp	0.100	0.000 to 600.000	s	ALWAYS
Rate at which the <b>Speed Demand</b> is ramped to zero when Quickstop is active						
<b>Final Stop Rate</b>	0509	Parameters::Motor Control::Ramp	1200	1 to 4800	Hz/s	ALWAYS
Rate at which any internally generated setpoint trims are removed. For example, the trim due to the slip compensation in Volts/Hz control mode.						

# D-156 Parameter Reference

## Functional Description

The s-ramp output takes the form shown below.

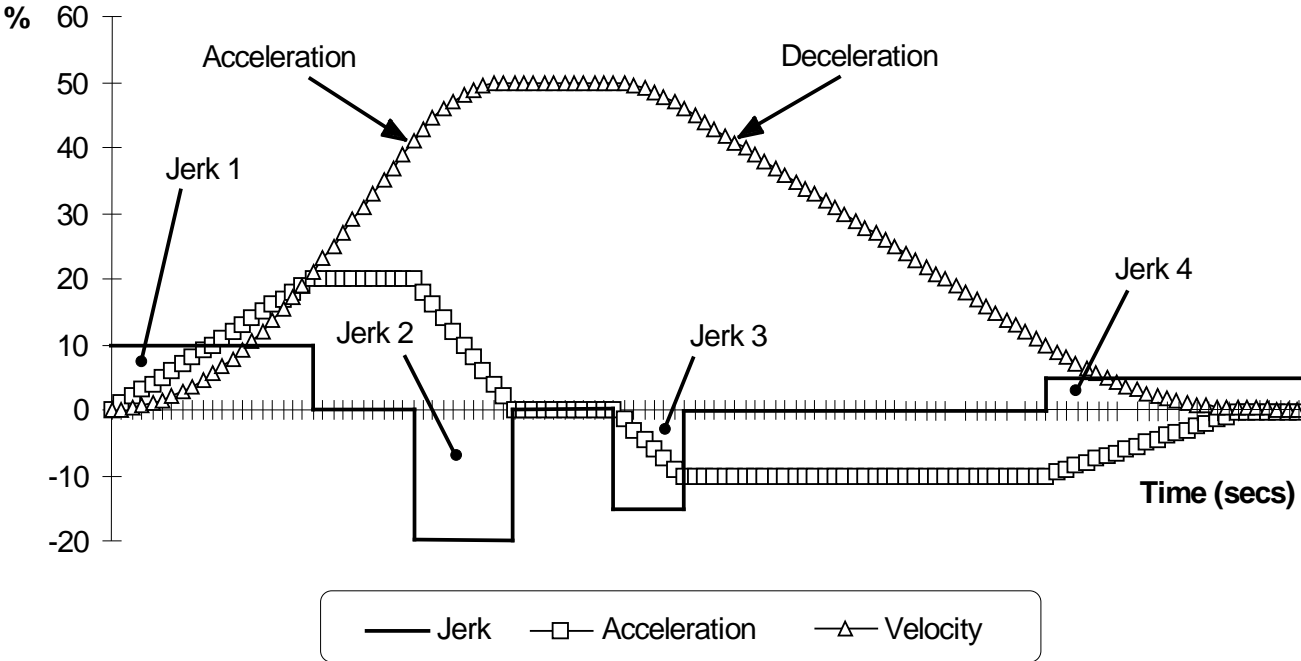

**Real Time Clock****Parameters::Device Manager::Real Time Clock**

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Time and Date</b>	1186	Parameters::Device Manager::Real Time Clock	1970/01/01	1970/01/01 to 2106/02/07		ALWAYS

Time and Date in the format yyyy/mm/dd hh:mm:ss

**Functional Description****IO Option Fitted with Real Time Clock**

When an IO Option is fitted, (part number 7004-01-00 or 7004-02-00), this parameter reports the time from the associated Real Time Clock hardware. On receiving an IO Option from the factory the time is not set and the value will be fixed at 1970/01/01 00:00:00. To set the correct time write to parameter 1186. Once set the RTC hardware on the IO option will maintain the time even when power to the drive is removed.

**No IO Option**

When no IO Option is fitted this parameter may be used as the destination of a broadcast time from a communications master.

# D-158 Parameter Reference

## Resolver

**Setup::Inputs and Outputs::Option  
Parameters::Option IO::Resolver**

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Resolver Voltage</b>	1790	Setup::Inputs and Outputs::Option Parameters::Option IO::Resolver	4	0:0V 1:4V 2:5V 3:6V 4:7V 5:8V 6:9V 7:10V 8:11V 9:12V		STOPPED

The r.m.s. amplitude of the sinusoidal excitation voltage output.  
This is set to the resolver's requirement.  
Setting 0V will disable the excitation output.

---

<b>Resolver Frequency</b>	1791	Same as PNO 1790	8.0	2.0 to 20.0	kHz	STOPPED
The frequency of the sinusoidal excitation voltage output. This is set to the resolver's requirement.						

---

<b>Resolver Ratio</b>	1792	Same as PNO 1790	0.50	0.15 to 3.00		STOPPED
The ratio of the amplitudes of the sine / cosine feedbacks to the excitation voltage output. This is set to the resolver's characteristic.						

---

<b>Resolver Max Speed</b>	1825	Setup::Inputs and Outputs::Option Parameters::Option IO::Resolver	20000	0 to 120000	RPM	STOPPED
---------------------------	------	--	-------	-------------	-----	---------

Parameter Name	No.	Path	Default	Range	Units	Writable
<p>The maximum operating resolver shaft speed required.                      This is set to the application requirements, which must be no greater than the resolver rating.                      If the resolver is not the active feedback, this is used to auto-select the best possible speed / position resolution.</p>						
<b>Resolver Poles</b>	1793	Same as PNO 1790	2,	2 to 100		STOPPED
<p>The number of poles in the resolver.                      This is set to the resolver's characteristic                      A 2-pole resolver has one sine / cosine amplitude cycle for each mechanical rotation of the shaft.</p>						
<b>Resolver Speed Hz</b>	1822	Parameters::Option IO::Resolver	x.x		Hz	NEVER
<p>The mechanical gearing of the resolver, reflecting resolver shaft turns per resolver coil turn.                      This is set to the resolver's characteristic.                      For example, a multi-turn 2-pole resolver, that requires 10 resolver shaft rotations for each sine / cosine amplitude cycle, would use value 10.0.</p>						
<b>Resolver Invert</b>	1810	Same as PNO 1790	FALSE			STOPPED
<p>Used to set the direction of rotation which results in the position increasing positively, and the speed reporting as positive.</p>						
resolver position	1824	Same as PNO 1811				NEVER
<p>(ENGINEER view level only.)                      Actual resolver coil position, expressed as a count value, where one complete amplitude cycle is 65536 counts.</p>						
<b>Resolver Turns</b>	1811	Monitor::Inputs and Outputs Parameters::Option IO::Resolver				NEVER
<p>The integer number of completed resolver shaft mechanical turns.</p>						
<b>Resolver Fraction Turns</b>	1812	Same as PNO 1811				NEVER
<p>The fractional part of the number of resolver shaft mechanical turns.</p>						
<b>Resolver Speed Filter</b>	1815	Same as PNO 1790	1000	10 to 10000	%	ALWAYS
<p>The corner frequency of the speed-tracking, single-order filter applied to the raw resolver speed, before it is reported in the Resolver Speed parameters or used as speed feedback.                      Expressed in terms of the ratio of filter corner frequency to raw resolver cycle frequency.                      Used to remove speed ripple caused by the resolver measurement, particularly when the option is used as a reference speed input.</p>						

# D-160 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Resolver Min Filter</b>	1851	Same as PNO 1825	100	10 to 1000	Hz	ALWAYS
Limit applied as the minimum corner frequency of the speed-tracking, single-order filter applied to the raw resolver speed. Used to prevent the speed-tracking filter from causing control instabilities at low speed.						
<b>Resolver Actual Filter</b>	1826	Parameters::Option IO::Resolver	x.	20 to 8000	Hz	NEVER
The actual corner frequency being used for the speed-tracking, single-order filter applied to the raw resolver speed. The actual filter corner frequency is limited to 8000Hz maximum.						
<b>Resolver speed RPM</b>	1813	Parameters::Option IO::Resolver	x.x		RPM	NEVER
Resolver mechanical speed diagnostic / output.						
<b>Resolver Speed %</b>	1814	Same as PNO 1811	x.x		%	NEVER
Resolver mechanical speed diagnostic / output.						
<b>Resolver Speed Hz</b>	1821	Parameters::Option IO::Resolver	x.x		Hz	NEVER
Resolver mechanical speed diagnostic / output.						
<b>Resolver Speed Ripple</b>	1823	Parameters::Option IO::Resolver	x.xx	0.00 to 1000.00	%	NEVER
The peak-to-peak ripple in resolver speed samples. Used to assist the trimming process which gain matches the sine to cosine inputs. Calculated from max. speed – min. speed over last 128 samples on a 1ms sampling interval. % is scaled by <b>464 100% Speed in RPM</b>						
<b>Resolver Resolution</b>	1816	Same as PNO 1790	0	0:AUTO 1:12 BITS 2:14 BITS 3:16 BITS		STOPPED
The target resolution setting for the speed / position feedback. See 'Specifications' for limitations, prior to changing this parameter. The 'AUTO' setting is used to automatically select the best, allowable resolution, given other parameter settings. The resolution setting affects the dynamic performance of the feedback. In 'AUTO' mode, the actual resolution in use may be different from the target resolution, depending on other parameter settings Only change this parameter when motor is stopped / torque is off.						



Parameter Name	No.	Path	Default	Range	Units	Writable
<b>resolver active resol</b>	1827	Parameters::Option IO::Resolver		Same as PNO 1816		NEVER

The actual resolution setting for the speed / position feedback.  
 The resolution setting affects the dynamic performance of the feedback.  
 In 'AUTO' mode, the actual resolution in use may be different from the target resolution, depending on other parameter settings :

**12 BITS**

only use for excitation between 6kHz and 20kHz.

**14 BITS**

only use for excitation between 3kHz and 12kHz, and *max. speed parameter* set < 30000rpm.

Max speed\* set up < 30000RPM

**16 BITS**

only use for excitation between 2kHz and 10kHz, and *max. speed parameter* set < 7500rpm.

Max speed\* set up < 7500RPM

(\*) : if the option is the active feedback, then Max speed = **464 100% Speed in RPM**  
 If the option is not the active feedback, then Max speed = **1825 Resolver Max Speed**

<b>Resolver State</b>	1817	Parameters::Option IO::Resolver		0:POWER_ON 1:RESET 2:ACTIVE 3:TRIPPED 4:RESTART		NEVER
-----------------------	------	---------------------------------	--	---	--	-------

The state of the Resolver Feedback Option.  
 ACTIVE = Operating  
 TRIPPED = Not-Operating due to a detected fault (see parameter Resolver Trip Type).  
<sup>1</sup>A fault detected when the option is being used as the active feedback will cause a drive trip, stopping the motor.

<b>Resolver Turns Reset</b>	1818	Parameters::Option IO::Resolver	FALSE			STOPPED
-----------------------------	------	---------------------------------	-------	--	--	---------

Used to reset both the Resolver Turns and Fraction Turns to zero, and Resolver Trip Type.  
 The turns count parameters are held at zero whilst this parameter is held TRUE.  
 The state of this parameter does not affect the operation of the resolver as a speed / position feedback, it only affects the turn count diagnostics.

<b>Resolver Reset Power On</b>	1819	Parameters::Option IO::Resolver	FALSE			STOPPED
--------------------------------	------	---------------------------------	-------	--	--	---------

When TRUE the Resolver Turns and Resolver Fraction Turns parameters are reset to zero on drive power-on.  
 When FALSE the Resolver Turns and Resolver Fraction Turns parameters will persist through power cycling. The absolute shaft position will be retained, provided that no more than 180° of resolver coil rotation has occurred during the power-off state.

# D-162 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
Resolver Trip Type	1820	Parameters::Option IO::Resolver		0:NONE 1:PARITY 2:PHASE ERROR 3:MAX VELOCITY 4:TRACKING ERROR 5:SIN COS MISMATCH 6:SIN COS OVERRANGE 7:SIN COS BELOW LOS 8:SIN COS CLIPPED		NEVER

Diagnostic that indicates the current (or most recent) trip type on the resolver option.

May be reset to NONE by using parameter 'Resolver Turns Reset'.

Value meanings:

**PARITY** : Parity error in the configuration register of the option. Contact Parker for assistance.

**PHASE ERROR** : Phase lag from excitation output to sin / cos inputs exceeds operating limit. Check resolver specification.

**MAX VELOCITY** : Velocity exceeds maximum tracking rate. Select resolver with built-in gearing to reduce resolver velocity.

**TRACKING ERROR** : Position tracking phase locked loop has exceeded its maximum error limit. Use a lower acceleration rate or select a lower target resolution.

**SIN COS MISMATCH** : The amplitudes of the sine and cosine inputs differ excessively. Check input connections, and gain matching potentiometer setting.

**SIN COS OVERRANGE** : One or both of the sine / cosine input signals is overrange. Check that the Resolver Ratio parameter is set correctly, and that the input signals do not exceed 12.5Vrms.

**SIN COS BELOW LOS** : One or both of the sine / cosine input signals is underrange. Check that the Resolver Ratio parameter is set correctly, and that the input signals are at least 1.6Vrms.

**SIN COS CLIPPED** : One or both of the sine / cosine input signals is overrange and being clipped. Check that the Resolver Ratio parameter is set correctly, and that the input signals do not exceed 12.5Vrms.

## Functional Description

**Runtime Statistics****Parameters::Device Manager::Runtime Statistics**

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Control Board Up Time</b>	1139	Parameters::Device Manager::Runtime Statistics		0 to Max	s	NEVER
The total time in seconds for which the control module has been powered, either by 24v or from the 3-phase supply. Set to zero during manufacture.						
<b>Time Since Power-On</b>	1733	Parameters::Device Manager::Runtime Statistics		0.000 to Max	s	NEVER
The time in seconds since power was applied to the control module, either by 24v or from the 3-phase supply.						
<b>HV SMPS Up Time</b>	1252	Parameters::Device Manager::Runtime Statistics		0 to Max	s	NEVER
The time in seconds for which the drive has been powered from the 3-phase supply.						
<b>HV Power On Count</b>	1406	Parameters::Device Manager::Runtime Statistics		0 to 65535		NEVER
The number of times that the drive has been powered up from the 3-phase supply						
<b>Motor Run Time</b>	1407	Parameters::Device Manager::Runtime Statistics		0 to Max	s	NEVER
The time in seconds for which the drive has been controlling a motor						
<b>Motor Start Count</b>	1732	Parameters::Device Manager::Runtime Statistics		0 to Max		NEVER
The total number of motor starts, (from when the control card was manufactured).						

# D-164 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
Time Since Power-On	1733	Parameters::Device Manager::Runtime Statistics		0.000 to Max	s	NEVER

The time in seconds since power was applied to the control module, (either 24v or 3-phase power).

---

## Functional Description

The Runtime Statistics group of parameters indicate the working age of the drive. The Control Board Up Time value is used as a reference when recording the time at which a trip occurs. Similarly, the HV SMPS Up Time is used as a reference when recording the time at which a disabled trip event occurs when the drive is operating in Fire Mode, (see *Chapter 13: Fire Mode*, and HA502134U002 “Fan Control Application” manual).

## Scale Setpoint

### **Parameters::Motor Control::Scale Setpoint**

This function defines 100% speed in RPM.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>100% Speed in RPM</b>	0464	Setup::Motor Control::Control and Type Parameters::Motor Control::Scale Setpoint	1500.0	0.0 to 100000.0	RPM	ALWAYS

### Functional Description

The Drive is commanded to run the motor at a certain speed, which is derived from various sources, such as comms, analog inputs, commands from the keypad, etc. All these speed commands are expressed as a percentage. The percentage is referenced to this parameter. So, for example, if this parameter is set to 3000 rpm, and the user commands 100% speed, then the motor should turn at 3000rpm.

However, the user must be aware of what this parameter means for different control options:

- For vector control (both for PMAC and IM) for 100% demand the motor will provide the actual shaft speed of the value that is set in this parameter.
- For V/Hz control (IM only) for 100% demand the actual shaft speed will be the value set in this parameter less than the slip of the motor. So, in order to achieve rated speed at rated torque in V/Hz mode, the user should put in this parameter an RPM value that is corresponding to the base frequency of the motor with the number of pole pairs taken into account, or in other words, '100% Speed in RPM' should be set to synchronous speed. *(For example, a 50Hz, 4 pole induction motor, with rated speed of 1450RPM, should have its '100% Speed in RPM' value set to 1500. This will ensure that in V/Hz mode when the motor is loaded with rated load the actual speed of the shaft will be 1450 RPM!)*

This parameter also represents the maximum speed available, since (apart from a small allowance for process trims) the speed commands are not allowed to exceed 100%.

# D-166 Parameter Reference

## SD Card

### *Parameters::Device Manager::SD Card*

Details of the SD Card fitted in the Drive.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Card State</b>	1033	Parameters::Device Manager::SD Card		0:NO CARD 1:INITIALISING 2:READY 3:CARD FAULT		NEVER

The state of the SD Card will either be:

- 0: NO CARD                    no card detected in slot
- 1: INITIALISING            a card has been detected but is still preparing for use
- 2: READY                    the card inserted can be used
- 3: CARD FAULT              the card inserted is faulty and cannot be used

---

<b>Card Name</b>	1034	Parameters::Device Manager::SD Card				NEVER
------------------	------	-------------------------------------	--	--	--	-------

The Volume Label read from the card. This is normally entered when formatting the card. It may be left blank.

---

<b>Firmware</b>	1038	Parameters::Device Manager::SD Card				NEVER
-----------------	------	-------------------------------------	--	--	--	-------

TRUE indicates that the firmware upgrade file (firmware.30x) is present on the inserted SD Card.

---

<b>Application Archive</b>	1039	Parameters::Device Manager::SD Card				NEVER
----------------------------	------	-------------------------------------	--	--	--	-------

TRUE indicates that the project archive file (archive.prj) is present on the inserted SD Card and that the contents of this file matches the loaded Project.  
FALSE indicates that either the project archive file is not on the SD Card or that the archive file does not contain the archive of the loaded Project.

**Sequencing****Parameters::Motor Control::Sequencing**

These parameters allow the user of the AC30V to monitor the status and affect the behaviour of the DS402 drive state machine as described in detail in Appendix B “Sequencing Logic”.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Local</b>	0591	Parameters::Motor Control::Sequencing	FALSE			STOPPED
Local (GKP) of Control and Reference.						
<b>Local Power Up Mode</b>	1565	Parameters::Motor Control::Sequencing	0	0:AS WHEN POWERED DOWN 1:LOCAL 2:REMOTE		ALWAYS
The initial value of <b>0591 Local</b> can be selected by the User using this enumerated parameter.						
0: AS WHEN POWERED DOWN                      the state when the Drive was powered down (default)						
1: LOCAL    always powers up with <b>0591 Local</b> set to TRUE						
2: REMOTE     always powers up with <b>0591 Local</b> set to FALSE						
<b>Local Reference</b>	0592	Parameters::Motor Control::Sequencing	0.00	0.00 to 100.00	%	ALWAYS
Local Reference from GKP.						
<b>App Control Word</b>	0610	Parameters::Motor Control::Sequencing	0000	0:SWITCH ON 1:ENABLE VOLTAGE 2:NOT QUICKSTOP 3:ENABLE OPERATION 7:RESET FAULT 8:EXTERNAL FAULT 12:USE JOG REFERENCE 13:REVERSE DIRECTION 14:AUTO INITIALISE 15:EVENT TRIGGERED OP		ALWAYS
Control Word from Application (Terminals).						

# D-168 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Comms Control Word</b>	0627	Parameters::Motor Control::Sequencing	0000	0:SWITCH ON 1:ENABLE VOLTAGE 2:NOT QUICKSTOP 3:ENABLE OPERATION 7:RESET FAULT 8:EXTERNAL FAULT 10:USE COMMS CONTROL 11:USE COMMS REFERENCE 12:USE JOG REFERENCE 13:REVERSE DIRECTION 14:AUTO INITIALISE 15:EVENT TRIGGERED OP		ALWAYS

Control Word from Fieldbus.

<b>Control Word</b>	0644	Parameters::Motor Control::Sequencing		0:SWITCH ON 1:ENABLE VOLTAGE 2:NOT QUICKSTOP 3:ENABLE OPERATION 7:RESET FAULT 8:EXTERNAL FAULT 10:USE COMMS CONTROL 11:USE COMMS REFERENCE 12:USE JOG REFERENCE 13:REVERSE DIRECTION 14:AUTO INITIALISE 15:EVENT TRIGGERED OP		NEVER
---------------------	------	---------------------------------------	--	--	--	-------

Monitor (read-only) Control Word updated from the active source.



Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Status Word</b>	0661	Parameters::Motor Control::Sequencing		0:READY TO SWITCH ON 1:SWITCHED ON 2:OPERATION ENABLED 3:FAULTED 4:VOLTAGE ENABLED 5:QUICKSTOP INACTIVE 6:SWITCH ON DISABLED 9:CONTROL FROM COMMS 12:JOG OPERATION 13:REVERSE OPERATION 14:REFERENCE FROM COMMS 15:STOPPING		NEVER

This is the DS402 Status Word

<b>Sequencing State</b>	0678	Parameters::Motor Control::Sequencing		0:NOT READY TO SWITCH ON 1:SWITCH ON DISABLED 2:READY TO SWITCH ON 3:SWITCHED ON 4:OPERATION ENABLED 5:QUICKSTOP ACTIVE 6:FAULT REACTION ACTIVE 7:FAULTED	s	NEVER
-------------------------	------	---------------------------------------	--	--	---	-------

Drive DS402 Sequencing State.

<b>Switch On Timeout</b>	0679	Parameters::Motor Control::Sequencing	0.000	0.000 to 100.000	s	ALWAYS
--------------------------	------	---------------------------------------	-------	------------------	---	--------

Time allowed for line contactor to close when entering the Switched On state from Switched Off state. If this time is non-zero, a Line Contactor trip will occur if the DC Link Voltage remains low until the timeout expires. If the timeout is set to zero, an Under Voltage trip will occur immediately.

<b>App Reference</b>	0680	Parameters::Motor Control::Sequencing	0.00	-110.00 to 110.00	%	ALWAYS
----------------------	------	---------------------------------------	------	-------------------	---	--------

Reference from terminals (via. the application)

## D-170 Parameter Reference

<i>Parameter Name</i>	<i>No.</i>	<i>Path</i>	<i>Default</i>	<i>Range</i>	<i>Units</i>	<i>Writable</i>
<b>Comms Reference</b>	0681	Parameters::Motor Control::Sequencing	0.00	-110.00 to 110.00	%	ALWAYS

Reference from Fieldbus

---


<b>Reference</b>	0682	Parameters::Motor Control::Sequencing	x.xx	-110.00 to 110.00	%	NEVER
------------------	------	---------------------------------------	------	-------------------	---	-------

Monitor (read-only) Reference updated from the active source. This will either be the value of the **0592 Local Reference**, **0680 App Reference** (terminals) or **0681 Comms Reference** depending on which source is currently selected.

---

**Setup Wizard****Parameters::Device Manager::Setup Wizard**

These parameters configure the operation of the **Setup Wizard**.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Enable Auto Save</b>	1738	Parameters::Device Manager::Setup Wizard	TRUE			ALWAYS
<p>Control how parameter values are saved when modified via the GKP or the Web Page.</p> <p>TRUE: Parameter values are saved automatically when they are entered.</p> <p>FALSE: Parameter values are not saved automatically. To save parameters using the GKP navigate to the Welcome page by pressing the soft left key repeatedly, then press the save icon  for approximately 1s. (Note: If the GKP password is active and unlocked it will be necessary to lock the GKP password before the save icon is presented).</p>						
<b>Auto Hide</b>	1779	Parameters::Device Manager::Setup Wizard	TRUE			ALWAYS
<p>In normal operation, parameters that are not relevant to the configuration are saved. For example, parameters relating to the Thermistor IO option are only visible when that option is enabled. Clearing "Parameter Auto Hide" shows all parameters in the drive at ENGINEER view level. At other view levels the Auto Hide feature is always enabled.</p>						
<b>Language</b>	1005	Parameters::Device Manager::Setup Wizard	0	0:ENGLISH 1:FRANCAIS 2:DEUTSCH 3:ESPANOL 4:ITALIANO 5:CHINESE 6:L 6 7:L 7 8:L 8 9:CUSTOM		ALWAYS
<p>Identifies the currently selected language, refer to chapter 7, Graphical Keypad, for details on changing the selected language.</p>						
<b>Run Wizard?</b>	1006	Parameters::Device Manager::Setup Wizard	1	0:NO 1:YES		ALWAYS
<p>Changing this parameter to TRUE will cause the GKP to re-start the Setup Wizard. This parameter is automatically reset to FALSE on exiting the Setup Wizard.</p>						

**Functional Description**

The operation of the Setup Wizard is described in Chapter 9.

# D-172 Parameter Reference

## Skip Frequencies

### Setup::Application::Skip Frequencies

Function availability depends on macro selected.

This function is used to prevent the Drive operating at frequencies that cause mechanical resonance in the load.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Skip Band 1</b>	1908	Setup::Application::Skip Frequencies	0.0	0.0 to 1000.0	Hz	ALWAYS
The width of skip band 1 in Hz.						
<b>Skip Frequency 1</b>	1909	Setup::Application::Skip Frequencies	0.0	0.0 to 1000.0	Hz	ALWAYS
The centre frequency of skip band 1 in Hz.						
<b>Skip Band 2</b>	1910	Setup::Application::Skip Frequencies	0.0	0.0 to 1000.0	Hz	ALWAYS
The width of skip band 2 in Hz.						
<b>Skip Frequency 2</b>	1911	Setup::Application::Skip Frequencies	0.0	0.0 to 1000.0	Hz	ALWAYS
The centre frequency of skip band 2 in Hz.						
<b>Skip Band 3</b>	1912	Setup::Application::Skip Frequencies	0.0	0.0 to 1000.0	Hz	ALWAYS
The width of skip band 3 in Hz.						
<b>Skip Frequency 3</b>	1913	Setup::Application::Skip Frequencies	0.0	0.0 to 1000.0	Hz	ALWAYS
The centre frequency of skip band 3 in Hz.						
<b>Skip Band 4</b>	1914	Setup::Application::Skip Frequencies	0.0	0.0 to 1000.0	Hz	ALWAYS
The width of skip band 4 in Hz.						


Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Skip Frequency 4</b>	1915	Setup::Application::Skip Frequencies	0.0	0.0 to 1000.0	Hz	ALWAYS

The centre frequency of skip band 4 in Hz.

### Functional Description



Four programmable skip frequencies are available to avoid resonances within the mechanical system. Enter the value of frequency that causes the resonance using a **Frequency** parameter and then program the width of the skip band using its **Band** parameter. The Drive will then avoid sustained operation within the forbidden band as shown in the diagram. The skip frequencies are symmetrical and thus work in forward and reverse.

Setting a **Frequency** to 0 disables the corresponding band. Setting a **Band** to 0 causes the value of **Band 1** to be used for this band.

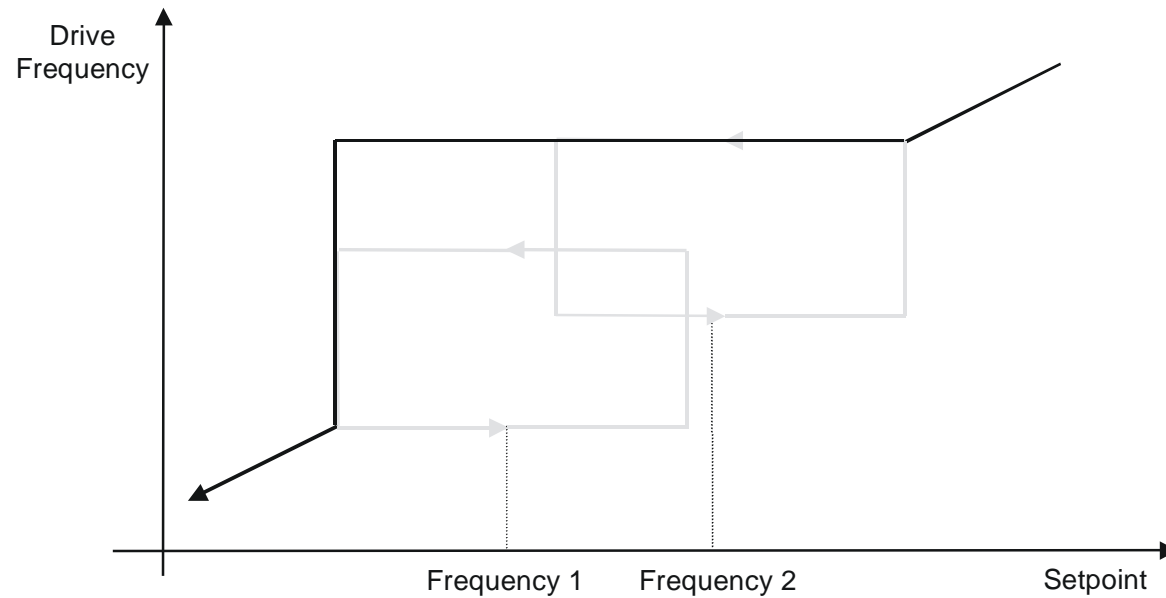

# D-174 Parameter Reference

The behaviour of this function is illustrated below.

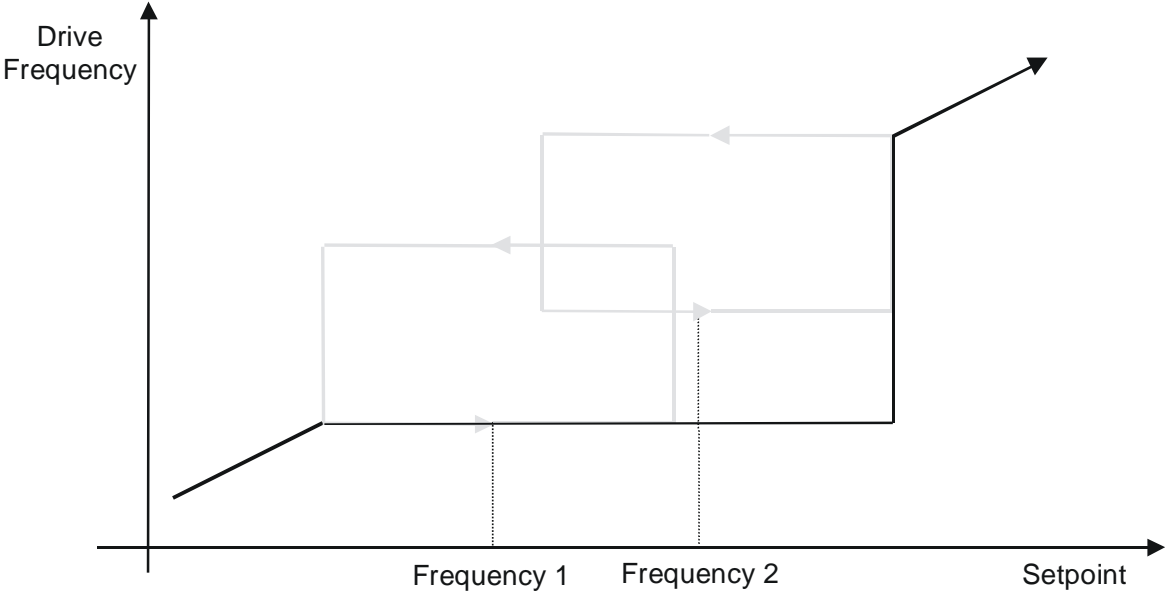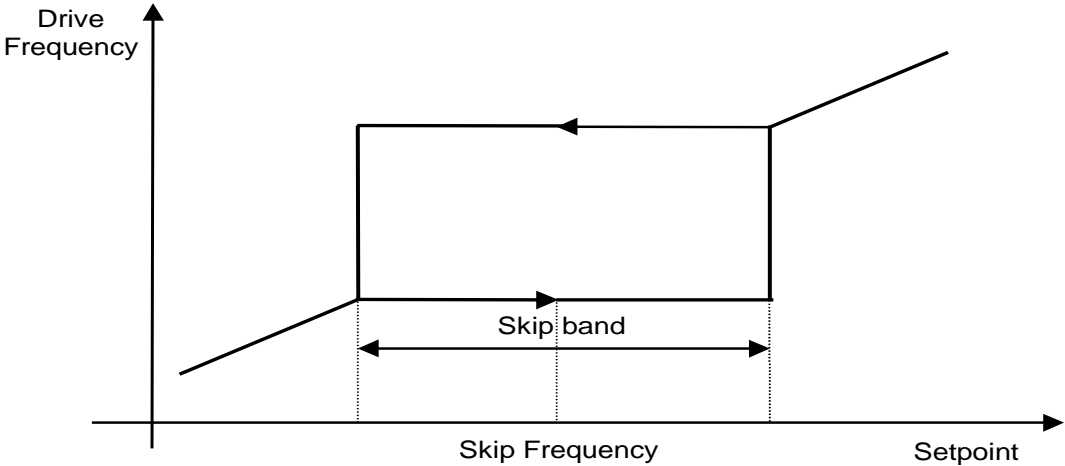

**Slew Rate****Parameters::Motor Control::Slew Rate**

Designed for VOLTS/Hz motor Control Mode.


This function prevents over-current and over-voltage faults occurring due to a rapidly changing setpoint.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Slew Rate Enable</b>	0360	Parameters::Motor Control::Slew Rate	TRUE			ALWAYS
Enable/Disable slew rate limit						
<b>Slew Rate Accel Limit</b>	0361	Parameters::Motor Control::Slew Rate	500	1 to 1200	Hz/s	ALWAYS
Maximum rate at which the setpoint can be changed away from zero						
<b>Slew Rate Decel Limit</b>	0362	Parameters::Motor Control::Slew Rate	500	1 to 1200	Hz/s	ALWAYS
Maximum rate at which the setpoint can be changed towards zero						

**Functional Description**

The **Slew Rate** limit obtains the setpoint from the output of the application, correctly scaled by the **Reference** feature and already processed by the Power Loss Ride Thru and the **DC Link Volts Limit** features ( if enabled ). The rate of change limits are applied and the setpoint is then passed on for further processing.

When the braking feature determines that the internal dc link voltage is too high it issues a Hold signal. This causes the **Slew Rate** limit function to hold the setpoint at its current value. This typically lasts for only 1ms, time for the excess energy to be dumped into the dynamic braking resistor.

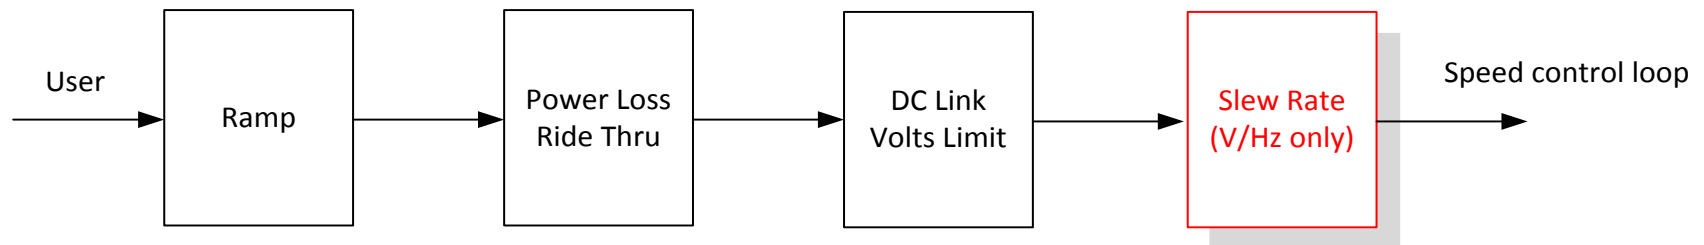**Speed Setpoint path**

# D-176 Parameter Reference

## Slip Compensation

### **Parameters::Motor Control::Slip Compensation**

Designed for VOLTS/Hz motor Control Mode.

The slip compensation function allows the Drive to maintain motor speed in the presence of increased load.

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Slip Compensatn Enable</b>	0354	Parameters::Motor Control::Slip Compensation	FALSE			ALWAYS
Enable/Disable slip compensation						
<b>SLP Motoring Limit</b>	0356	Parameters::Motor Control::Slip Compensation	150	0 to 600	RPM	ALWAYS
Maximum compensated speed in motor control						
<b>SLP Regen Limit</b>	0357	Parameters::Motor Control::Slip Compensation	150	0 to 600	RPM	ALWAYS
Maximum compensated speed in regen mode						

### Functional Description

Based on the rated speed, the no load speed and the rated load of the motor, the **Slip Compensation** feature adjusts the demand frequency to compensate for any speed reduction resulting from the load.



**Soft Menus****Parameters::Device Manager::Soft Menus**

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Control Screen Mode</b>	0908	Parameters::Device Manager::Soft Menus	1	0:DISABLED 1:AUTO 2:CUSTOM		STOPPED

Defines the operation of the Control Screen

0. DISABLED
1. AUTO
2. CUSTOM

When set to DISABLED, the Control Screen menu is hidden.

When set to AUTO, the contents of the Control Screen menu depends on the sequencing mode of the drive, (local, remote or communications).

When set to CUSTOM, the contents of the Control Screen may be defined by writing parameter numbers to the elements of the **1352 Control Screen** array. Note that the contents of the **1352 Control Screen** array are not saved in non-volatile memory, so the values need to be initialised following a power-on reset.

---

<b>Control Screen</b>	1352	Parameters::Device Manager::Soft Menus				ALWAYS
-----------------------	------	--	--	--	--	--------

An array of PNOs that identifies the parameters to be shown in the Control Screen. The contents of this screen are set automatically by the AC30 firmware when the control mode is changed.

---

<b>Favourites</b>	1188	Parameters::Device Manager::Soft Menus				ALWAYS
-------------------	------	--	--	--	--	--------

An array of PNOs that identifies the parameters to be shown in the Favourites menu

---

<b>Setup</b>	1311	Parameters::Device Manager::Soft Menus				ALWAYS
--------------	------	--	--	--	--	--------

An array of PNOs that identifies the parameters to be shown in the Setup menu

---



# D-178 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Monitor</b>	1270	Parameters::Device Manager::Soft Menus				ALWAYS

An array of PNOs that identifies the parameters to be shown in the Monitor menu

---

## Functional Description

The Soft Menus group of parameters are used to populate the associated menus depending on the associated application, (Control Screen, Setup and Monitor) or the requirements of the location, (Favourites). The contents of the Setup and Monitor menus may only be set by the application itself. The contents of the Favourites menu may be set by writing to the parameters in the Favourites array. Alternatively parameters may be added to or removed from the Favourites menu by use of the GKP. Navigate to the parameter of interest and hold the OK key until the attributes screen is shown. If the parameter is not already in the Favourites menu a pressing Soft Key 2 adds the parameter to Favourites. This operation is indicated by the icon  . Similarly, to remove a parameter from Favourites, navigate to the parameter in the Favourites menu then press OK until the parameter attributes are shown. Remove the parameter from Favourites by pressing Soft Key 2. This operation is indicated by the icon  .

**Spd Direct Input****Parameters::Motor Control::Spd Direct Input**

Only apply to SVC control mode, IM or PMAC.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Direct Input Select</b>	0528	Parameters::Motor Control::Spd Direct Input	0	0:NONE 1:ANIN1 2:ANIN2		ALWAYS

The direct input to the speed loop is an analog input which is sampled synchronously with the speed loop. This ensures that the speed loop always has the most up-to-date value of the input, allowing it to respond faster. Either of the two analog inputs can be selected as the direct input. If NONE is selected, the input is set to zero. When not in use, it should be disabled by selecting NONE.

<b>Direct Input Ratio</b>	0529	Parameters::Motor Control::Spd Direct Input	1.0000	-10.0000 to 10.0000		ALWAYS
---------------------------	------	---	--------	---------------------	--	--------

The Direct Input is multiplied by this parameter.

<b>Direct Input Pos Lim</b>	0530	Parameters::Motor Control::Spd Direct Input	110.00	-600.00 to 600.00	%	ALWAYS
-----------------------------	------	---	--------	-------------------	---	--------

This limits the upper value of the Direct Input.

<b>Direct Input Neg Lim</b>	0531	Parameters::Motor Control::Spd Direct Input	-110.00	-600.00 to 600.00	%	ALWAYS
-----------------------------	------	---	---------	-------------------	---	--------

This limits the lower value of the Direct Input.

**Functional Description**

The Drive is commanded to run the motor at a certain speed, which is derived from various sources, such as comms, analog inputs, commands from the keypad, etc. Most of these are derived from sources which respond relatively slowly, eg every 1ms. For processes which require a faster response, the direct input is provided. This is an analog input which is sampled synchronously with the speed loop, as described above. It is added on to the other sources of speed command to give a total speed command.

# D-180 Parameter Reference

## Spd Loop Diagnostics

### Parameters::Motor Control::Spd Loop Diagnostics

Refer to the diagram in **Spd Loop Settings** function.

Only applies to SVC control mode, IM or PMAC.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Total Spd Demand RPM</b>	0533	Parameters::Motor Control::Spd Loop Diagnostics	x.xx	-100000.00 to 100000.00	RPM	NEVER
This diagnostic shows the final values of the speed demand in rpm obtained after summing all sources. This is the value which is presented to the speed loop						
<b>Total Spd Demand %</b>	0534	Parameters::Motor Control::Spd Loop Diagnostics	x.xx	-200.00 to 200.00	%	NEVER
This diagnostic shows the final values of the speed demand as a % of <b>100% Speed in RPM</b> of the <b>Scale Setpoint</b> obtained after summing all sources. This is the value which is presented to the speed loop.						
<b>Speed Loop Error</b>	0535	Parameters::Motor Control::Spd Loop Diagnostics	x.xx	-600.00 to 600.00	%	NEVER
This diagnostic shows the difference between the total speed demand and the speed feedback						
<b>Speed PI Output</b>	0536	Parameters::Motor Control::Spd Loop Diagnostics	x.xx	-600.00 to 600.00	%	NEVER
This diagnostic shows the difference between the total speed demand and the speed feedback						
<b>Speed Limiter Active</b>	0536	Parameters::Motor Control::Spd Loop Diagnostics	x.xx	-600.00 to 600.00	%	NEVER
This diagnostic is TRUE if the drive is in Torque Control mode ( i.e. Sel Torq Ctrl Only is TRUE ), the speed limiter validated ( i.e. Spd Limiter Torq Ctrl is TRUE ) and the drive is in speed limit condition.						

**Spd Loop Settings****Parameters::Motor Control::Spd Loop Settings**

This function block controls the speed of the motor by comparing the actual speed to the demanded speed, and applying more or less torque in response to the error.

Only applies to SVC control mode, IM or PMAC.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Speed Loop Auto Set</b>	1246	Parameters::Motor Control::Spd Loop Settings	TRUE			ALWAYS
<p>Only for PMAC Motor</p> <p>TRUE : Allows to automatically calculate speed loop control parameters : Speed Loop Pgain and Speed Loop I Time.</p> <p>To do a correct estimation, Ratio Load Mot Inert should be correctly filled in.</p> <p>FALSE : no automatic calculation</p>						
<b>Ratio Load Mot Inert</b>	1247	Parameters::Motor Control::Spd Loop Settings	1.0	0.1 to 100.0		ALWAYS
<p>Only for PMAC Motor</p> <p>Enter the correct inertia ratio between the load and the motor (For a no load condition, a value of 0.1 should be used).</p> <p>This is used to automatically estimate the correct Speed Loop Pgain and Speed Loop I Time.</p>						
<b>Speed Loop Bandwidth</b>	1248	Parameters::Motor Control::Spd Loop Settings	1	0:LOW 1:MEDIUM 2:HIG		ALWAYS
<p>Only for PMAC Motor</p> <p>When Speed Loop Auto Set is TRUE, allows to select the speed loop bandwidth level :</p> <p>Low :provides a low speed loop bandwidth</p> <p>Medium : provides a medium speed loop bandwidth</p> <p>High : provides a high speed loop bandwidth</p>						

# D-182 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Speed Loop Pgain</b>	0515	Parameters::Motor Control::Spd Loop Settings	20.00	0.00 to 3000.00		ALWAYS
<p>Sets the proportional gain of the loop.</p> <p>Speed error x proportional gain = torque percent.</p>						
<b>Speed Loop I Time</b>	0516	Parameters::Motor Control::Spd Loop Settings	0.100	0.001 to 1.500	s	ALWAYS
<p>This is the integral time constant of the speed loop. A speed error which causes the proportional term to produce a torque demand T, will cause the integral term to also ramp up to a torque demand T after a time equal to <b>Speed Loop I Time</b>.</p>						
<b>Speed Loop Int Defeat</b>	0517	Parameters::Motor Control::Spd Loop Settings	FALSE			ALWAYS
<p>When TRUE, the integral term does not operate.</p>						
<b>Speed Loop Int Preset</b>	0518	Parameters::Motor Control::Spd Loop Settings	0	-600 to 600		ALWAYS
<p>The integral term will be preset to this value when the drive starts.</p>						
<b>Spd Loop Dmd Filt TC</b>	0519	Parameters::Motor Control::Spd Loop Settings	0.0	0.0 to 15.0	ms	ALWAYS
<p>The speed demand is filtered to reduce ripple. The filter is first order with time constant equal to the value of this parameter.</p>						
<b>Spd Loop Fbk Filt TC</b>	0520	Parameters::Motor Control::Spd Loop Settings	1.0	0.0 to 15.0	ms	ALWAYS
<p>The speed feedback is filtered to reduce ripple. The filter is first order with time constant equal to the value of this parameter.</p>						

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Spd Loop Aux Torq Dmd</b>	0521	Parameters::Motor Control::Spd Loop Settings	0.00	-600.00 to 600.00	%	ALWAYS
<p>When the drive is operating in speed control mode, the value of this parameter is added on to the torque demand produced by the speed loop PI. When the drive is operating in torque control mode (i.e. <b>Set Torq Ctrl Only</b> is TRUE) the speed loop PI does not operate, and the torque demand becomes the sum of this parameter plus the DIRECT INPUT (if selected).</p>						
<b>Spd Loop Adapt Thres</b>	0523	Parameters::Motor Control::Spd Loop Settings	0.00	0.00 to 10.00	%	ALWAYS
<p>If the speed demand is less than the <b>Spd Loop Adapt Thres</b>, the speed loop proportional gain is the <b>Spd Loop Adapt Pgain</b>.</p>						
<b>Spd Loop Adapt Pgain</b>	0524	Parameters::Motor Control::Spd Loop Settings	20.00	0.00 to 300.00		ALWAYS
<p>Proportional gain used if speed demand &lt; <b>Spd Loop Adapt Thres</b>.</p>						
<b>Spd Demand Pos Lim</b>	0525	Parameters::Motor Control::Spd Loop Settings	110.00	-110.00 to 110.00	%	ALWAYS
<p>This sets the upper limit of the speed demand.</p>						
<b>Spd Demand Neg Lim</b>	0526	Parameters::Motor Control::Spd Loop Settings	-110.00	-110.00 to 110.00	%	ALWAYS
<p>This sets the lower limit of the speed demand.</p>						
<b>Sel Torq Ctrl Only</b>	0527	Parameters::Motor Control::Spd Loop Settings	FALSE			ALWAYS
<p>Selects between Speed Control mode and Torque Control mode. When TRUE, (Torque Control mode) the torque demand output from the speed loop feature is the sum of the Direct Input plus the Spd Loop Aux Torq Dmd parameter.</p>						

# D-184 Parameter Reference


Parameter Name	No.	Path	Default	Range	Units	Writable
Spd Limiter Torq Ctrl	1781	Parameters::Motor Control::Spd Loop Settings	FALSE			ALWAYS

When set to TRUE, and the drive is in Torque Control mode, this parameter prevents operation outside the speed limits defined in Spd Demand Pos Lim and Spd Demand Neg Lim. The torque setpoint is compensated if the motor speed reaches these speed limits.

## Functional Description

The speed error (speed demand minus speed feedback) is calculated and processed via a proportional + integral (PI) controller. The output of the PI controller is a torque demand, which is passed directly to the torque control feature.

When the drive is in SENSORLESS VEC mode, the speed feedback is calculated from the voltages and currents flowing in the motor, and the motor model.

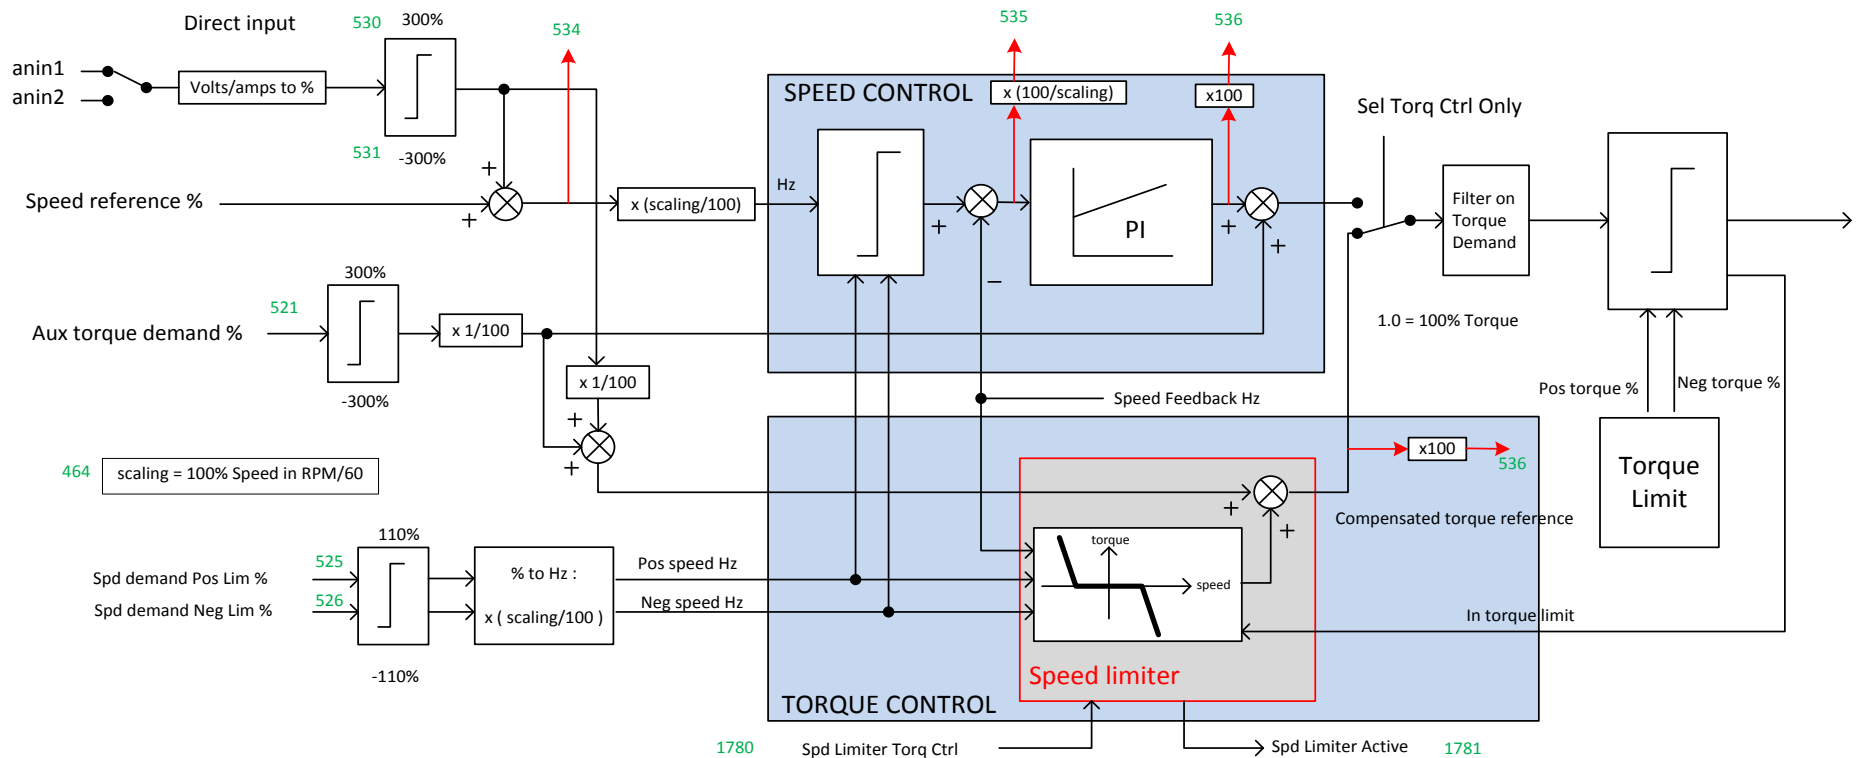



**Speed Error Trip****Parameters::Trips::Speed Error Trip**

This function allows the user to program the response of the drive in a situation where persistent speed error (as a difference between setpoint and actual measured or estimated speed) occurs.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Speed Error Trip Enable</b>	1746	Parameters::Trips::Speed Error Trip	TRUE			ALWAYS
A boolean that enables the speed error trip.						
<b>Speed Error Threshold</b>	1747	Parameters::Trips::Speed Error Trip	50.00	0.00 to 100.00	%	ALWAYS
Level of speed error required to trigger the trip.						
<b>Speed Error Trip Delay</b>	1748	Parameters::Trips::Speed Error Trip	10.000	0.000 to 2000.000	s	ALWAYS
Time period after which the drive trips. After half of this time a warning is issued.						

**Functional Description**

If the difference between the setpoint and the actual motor speed is greater than a level defined in parameter 1747 (**Speed Error Threshold**) for a period longer than time defined in parameter 1748 (**Speed Error Trip Delay**), the drive will trip. After half of that period a warning will be produced. This is only operational if enabled via parameter 1746 (**Speed Error Trip Enable**).

# D-186 Parameter Reference

## Speed Ref

### Parameters::Motor control::Speed Ref

This function holds all the parameters concerning the generation of the setpoint reference (reference ramp, speed trim, setpoint reverse, etc.).

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Ref Min Speed Clamp</b>	1264	Parameters::Motor Control::Speed Ref	-110.00	-110.00 to 0.00	%	ALWAYS
Minimum value for <b>Ramp Speed Output</b>						
<b>Ref Max Speed Clamp</b>	1265	Parameters::Motor Control::Speed Ref	110.00	0.00 to 110.00	%	ALWAYS
Maximum value for <b>Ramp Speed Output</b>						
<b>Ref Speed Trim</b>	1266	Parameters::Motor Control::Speed Ref	0.00	-300.00 to 300.00	%	ALWAYS
The trim is added to the ramp output to form the <b>Ramp Speed Output</b> (unconditionally in remote mode). In local mode, it is added is the <b>Ref Trim Local</b> parameter is set to TRUE						
<b>Ref Trim Local</b>	1267	Parameters::Motor Control::Speed Ref	FALSE			ALWAYS
When TRUE, the trim is added to the ramp output in local mode. When FALSE, the trim is not added to the ramp output in local mode.						

## Stabilisation

### **Parameters::Motor Control::Stabilisation**

Designed for VOLTS/Hz motor Control Mode.

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Stabilisation Enable</b>	0364	Parameters::Motor Control::Stabilisation	TRUE			ALWAYS

Enable/Disable stabilisation

---

### Functional Description

Enabling this function reduces the problem of unstable running in induction motors. This can be experienced at approximately half full speed, and under low load conditions.

# D-188 Parameter Reference

## Stack Inv Time

### Parameters::Motor Control::Stack Inv Time

The purpose of the inverse time is to automatically reduce the drive current limit in response to prolonged overload conditions.

For a short time given by Short Overload Time, the drive is able to provide the Short Overload Level  
 For a long time given by Long Overload Time, the drive is able to provide the Long Overload Level

These 2 protections work in parallel, the output limit current is the maximum value if **Inv Time Active** = False. If **Inv Time Active** = True, the current limit is determined by Long Overload Level  
*the current limit is not yet ramped down. If already ramped down, the current limit is due to the long overload.*

When the maximum overload value is reached, the inverse time current limit is ramped down. The rate at which the inverse time current limit is ramped to the Inv Aiming Point is defined by **Inv Time Down Rate**. When the overload condition disappears, the inverse time current limit is ramped up. The rate at which the inverse time current limit is ramped to the maximum value is defined by **Inv Time Up Rate**.

% Are all referring to drive/stack ratings.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>100% Stk Current</b>	0343	Parameters::Motor Control::Stack Inv Time	x.x	0.0 to 10000.0	A	NEVER
Stack rating in rms amps corresponding to 100% stack current						
<b>Long Overload Level</b>	0344	Parameters::Motor Control::Stack Inv Time	x.	0 to 200	%	NEVER
Overload value in % of the stack amps for long overload condition(*)						
<b>Long Overload Time</b>	0345	Parameters::Motor Control::Stack Inv Time		0.000 to 100000.000	s	NEVER
Maximum duration under long overload condition (typically 60s)						

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Short Overload Level</b>	0346	Parameters::Motor Control::Stack Inv Time	x.	0 to 200	%	NEVER
Overload value in % of the stack amps for short overload condition(*)						
<b>Short Overload Time</b>	0347	Parameters::Motor Control::Stack Inv Time		0.000 to 10000.000	s	NEVER
Maximum duration under short overload condition (typically 3s)						
<b>Inv Time Aiming Point</b>	0348	Parameters::Motor Control::Stack Inv Time	105.00	0.00 to 125.00	%	ALWAYS
Current in % where the power stack can undertake the load current permanently						
<b>Inv Time Output</b>	0349	Parameters::Motor Control::Stack Inv Time	x.	0 to 600	%	NEVER
Actual output current limit as a % of the stack current						
<b>Inv Time Up Rate</b>	0350	Parameters::Motor Control::Stack Inv Time	5.000	0.000 to 120.000	s	STOPPED
Ramp value to ramp up current when overload condition disappears						
<b>Inv Time Down Rate</b>	0351	Parameters::Motor Control::Stack Inv Time	5.000	0.000 to 120.000	s	STOPPED
Ramp value to reach the aiming point under prolonged overload condition						
<b>Inv Time Warning</b>	0352	Parameters::Motor Control::Stack Inv Time				NEVER
The protection starts to integrate overload conditions						

# D-190 Parameter Reference


Parameter Name	No.	Path	Default	Range	Units	Writable
Inv Time Active	0353	Parameters::Motor Control::Stack Inv Time				NEVER

The drive protection is limiting the output current

(\*) : Depending on the frame size, overload capabilities are reduced when the electrical speed is below 3Hz and with the heatsink temperature. Refer to Parker Hannifin Manufacturing for detailed values.

Above 3Hz electrical speed, overload capabilities are those defined by the **0390 Duty Selection**.

## Functional Description

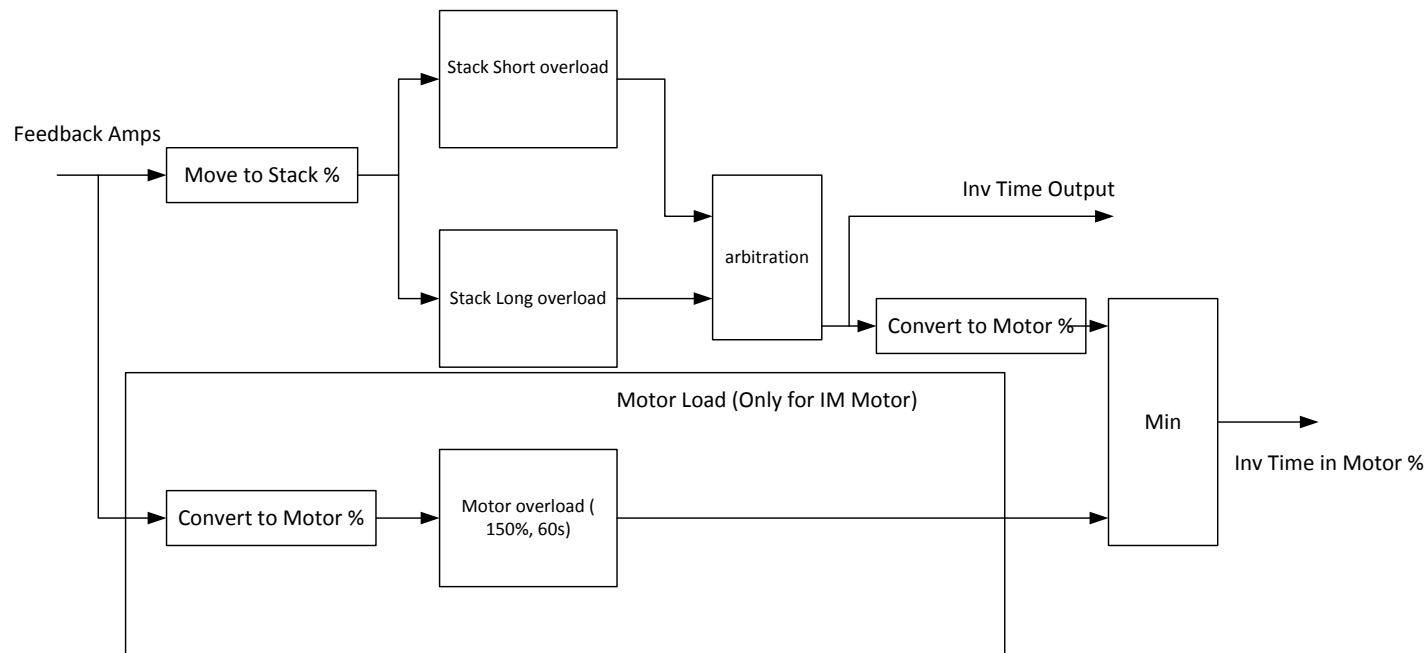

Short Overload : is using 180% of the Heavy Duty rating, for 3s.

Long Overload : is using the overload mode selected in **0390 Duty Selection**.

**Inv Time in Motor %** is used to limit the current. It is one of the inputs of the **Current Limit** Function features

**Stall Trip*****Parameters::Trips::Stall Trip***

The function protects the motor from damage that may be caused by continuous operation beyond specification.

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Stall Limit Type</b>	0906	Parameters::Trips::Stall Trip	2	0:TORQUE 1:CURRENT 2:TORQUE OR CURRENT		ALWAYS
This parameter determines whether the stall trip operates on motor torque, on motor current, on motor torque or motor current.						
<b>Stall Time</b>	0907	Parameters::Trips::Stall Trip	120.000	0.100 to 2000.000	s	ALWAYS
The time after which a stall condition will cause a trip.						
<b>Stall Torque Active</b>	0909	Parameters::Trips::Stall Trip				NEVER
TRUE if tripped under torque trip operation						
<b>Stall Current Active</b>	0910	Parameters::Trips::Stall Trip				NEVER
TRUE is tripped under current trip operation						
<b>Stall Speed Feedback</b>	0911	Parameters::Trips::Stall Trip	x.	-200 to 200	%	NEVER
A copy of the speed Feedback in Hz						

**Functional Description**

If Stall Limit Type is set to TORQUE and the estimated load exceeds the active TORQUE LIMIT for a time greater than **Stall Time**, then the stall trip will become active.

If the Stall Limit Type is set to CURRENT and the measured current exceeds the active Current Limit for a time greater than **Stall Time**, then the stall trip will become active.

# D-192 Parameter Reference

## System Board IO

### Parameters::System Board::System Board IO

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Output Enable</b>	1678	Setup::Inputs and Outputs::System Board Option Parameters::System Board::System Board IO	FALSE			ALWAYS
Turns on the system board A, B and Z outputs.						
<b>Output Source</b>	1679	Same as PNO 1678	0	0:SYSTEM BOARD SLOT 1 1:SYSTEM BOARD SLOT 2 2:SYNTHETIC ENCDR 3:DIGITAL OUTPUTS		STOPPED
Selects the source of the retransmit output. i.e. Slot 1, Slot 2, or synthetic encoder.						
<b>Output Voltage</b>	1680	Same as PNO 1678	0	0:5 V 1:12 V 2:15 V 3:20 V		ALWAYS
Sets the voltage output of the system board encoder retransmit.						
<b>Synth Encoder Lines</b>	1696	Same as PNO 1678	2048	1 to 15000000		ALWAYS
Number of lines per revolution to be simulated by the synthetic encoder function. This affects the Z output pulse.						
<b>Synth Encoder Speed</b>	1698	Same as PNO 1678	0	0 to 15000000	RPM	ALWAYS
Simulated speed to output when the synthetic encoder mode is selected.						
<b>Synth Encoder Invert</b>	1702	Same as PNO 1678	FALSE			ALWAYS
Sets the direction of the synthetic encoder rotation.						



Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Output A</b>	1756	Setup::Inputs and Outputs::System Board Option Parameters::System Board::System Board IO	FALSE			ALWAYS
Value presented on terminal TB2.1 when "1679 Output Source" is set to DIGITAL OUTPUTS						
<b>Output B</b>	1757	Same as PNO 1756	FALSE			ALWAYS
Value presented on terminal TB2.3 when "1679 Output Source" is set to DIGITAL OUTPUTS						
<b>Output Z</b>	1758	Same as PNO 1756	FALSE			ALWAYS
Value presented on terminal TB2.5 when "1679 Output Source" is set to DIGITAL OUTPUTS						
<b>SB Digital Input 1</b>	1759	Monitor::Inputs and Outputs Parameters::System Board::System Board IO				NEVER
Digital input from TB4.1, TRUE for a high voltage and FALSE for a low voltage.						
<b>SB Digital Input 2</b>	1722	Monitor::Inputs and Outputs Parameters::System Board::System Board IO				NEVER
Digital input from TB4.2, TRUE for a high voltage and FALSE for a low voltage.						
<b>SB Digital Input 3</b>	1723	Same as PNO 1722				NEVER
Digital input from TB4.3, TRUE for a high voltage and FALSE for a low voltage.						

### Functional Description

These parameters are used to configure the system board outputs and to monitor the system board inputs.

# D-194 Parameter Reference

## System Board Option

### Parameters::System Board::System Board Option

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>System Board Required</b>	1739	Setup::Inputs and Outputs::System Board Option Parameters::System Board::System Board Option		0:NONE 1:DUAL ENCODER		CONFIG
Identifies whether the system board is required by the configuration.						
<b>System Board Fitted</b>	1740	Parameters::System Board::System Board Option		Same as PNO 1739		NEVER
Indicates whether the system board is attached. The system board is a factory fit option.						
<b>System Board Status</b>	1741	Parameters::System Board::System Board Option		0:OK 1:OPTION NOT FITTED 2:TYPE MISMATCH 3:TYPE UNKNOWN 4:HARDWARE FAULT		NEVER
Indicates the health of the system board, if attached.						

### Functional Description

These parameters are used to set and verify the **System Board Option** configuration. If the status parameter is not OK then the drive will not enter the Operational state.

Status	Description
OK	The configuration is valid. The status will always be OK if no System Board option is required, even if one is fitted.
OPTION NOT FITTED	An option was required and none was detected
TYPE MISMATCH	The fitted option does not support the required features
TYPE UNKNOWN	The firmware in the drive does not recognise the fitted option
HARDWARE FAULT	The fitted option is not working as expected.

**Torque Limit****Parameters::Motor Control::Torque Limit**

This function allows you to set the maximum level of motor rated torque which is allowed before torque limit action occurs.

If the estimated motor torque is greater than the **Actual Pos Torque Lim** value, the motor speed is controlled to maintain the torque at this level. A similar situation occurs if the estimated motor torque is less than the **Actual Neg Torque Lim** value.

The torque limit function has separate positive and negative torque limits. In addition, a symmetric main torque limit is also provided.

The lowest positive and negative torque limits (including any current limit or inverse time current limit action) is indicated in the **Actual Pos Torque Lim** and **Actual Neg Torque Lim** diagnostic. These values determine the absolute motor torque limits.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Positive Torque Lim</b>	0415	Parameters::Motor Control::Torque Limit	150.0	-600.0 to 600.0	%	ALWAYS
This parameter sets the maximum allowed level of positive motor torque.						
<b>Negative Torque Lim</b>	0416	Parameters::Motor Control::Torque Limit	-150.0	-600.0 to 600.0	%	ALWAYS
This parameter sets the maximum allowed level of negative motor torque						
<b>Main Torque Lim</b>	0417	Setup::Motor Control::Control and Type Parameters::Motor Control::Torque Limit	150.0	0.0 to 600.0	%	ALWAYS
This parameter sets the symmetric limit on the maximum allowed motor torque.						
<b>Fast Stop Torque Lim</b>	0418	Parameters::Motor Control::Torque Limit	150.0	0.0 to 600.0	%	ALWAYS
This parameter sets the torque limit used during a Quickstop.						
<b>Symmetric Torque Lim</b>	0419	Parameters::Motor Control::Torque Limit	FALSE			ALWAYS
When TRUE, the <b>Negative Torque Lim</b> is forced to reflect the <b>Positive Torque Lim</b> parameter.						

## D-196 Parameter Reference

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Actual Pos Torque Lim</b>	0420	Monitor::Motor and Drive Parameters::Motor Control::Torque Limit	x.x	-600.0 to 600.0	%	NEVER

This diagnostic indicates the final actual positive torque limit including any current limit or inverse time current limit action.


---

<b>Actual Neg Torque Lim</b>	0421	Same as PNO 420	x.x	-600.0 to 600.0	%	NEVER
------------------------------	------	-----------------	-----	-----------------	---	-------

This diagnostic indicates the final actual negative torque limit including any current limit or inverse time current limit action.

---

Functional Description

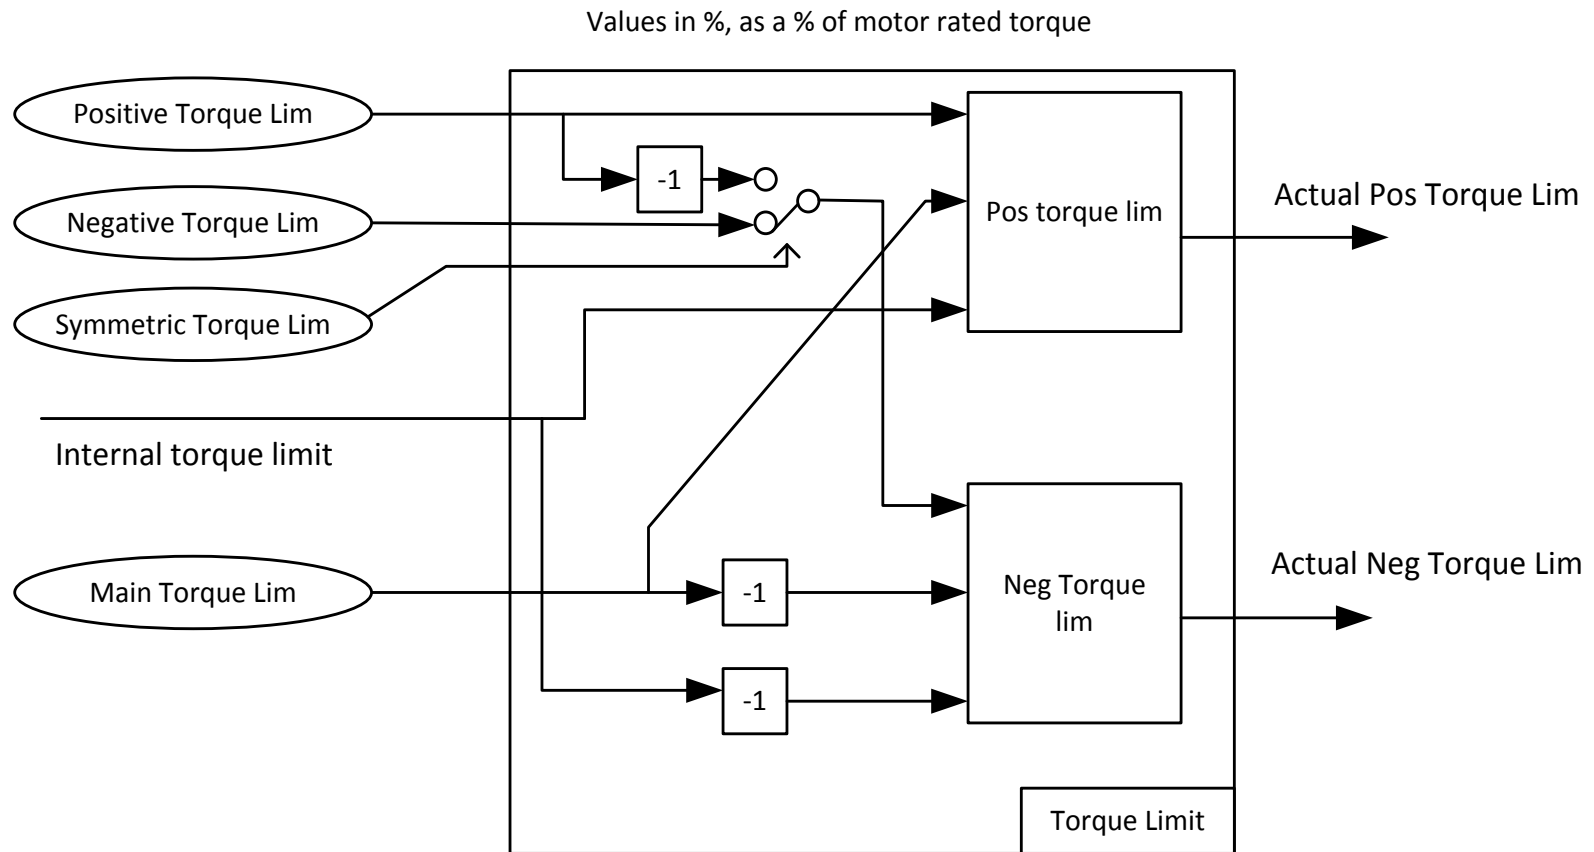

# D-198 Parameter Reference

## Thermistor

**Setup::Inputs and Outputs::Option**

**Parameters::Option IO::Thermistor**

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Thermistor Type</b>	1184	Setup::Inputs and Outputs::Option Parameters::Option IO::Thermistor	1	0:NTC 1:PTC 2:KTY		ALWAYS
Defines the thermistor type. This is used when generating the MOTOR OVERTEMP trip. NTC, (Negative Temperature Co-efficient) PTC, (Positive Temperature Co-efficient) KTY, (a linear temperature measuring device).						
<b>Thermistor Resistance</b>	1185	Parameters::Option IO::Thermistor	x.	0 to 5000	Ohm	NEVER
The resistance measured across the thermistor terminals.						
<b>Thermistor Trip Level</b>	1004	Parameters::Option IO::Thermistor	1000	0 to 4500	Ohm	ALWAYS
Defines the level at which a Motor Over Temperature trip will be generated. The default value is appropriate for PTC and NTC thermistor types.						
<b>Thermistor Warn Delta</b>	1762	Parameters::Option IO::Thermistor	100	0 to 4500	Ohm	ALWAYS
Defines the level at which a Motor Over Temperature warning will be generated. This is an offset from the trip level. For PTC and KTY thermistors, the warning level is the result of subtracting the Warning Delta value from the Trip Level. For NTC thermistors the warning level is the sum of Warning Delta and the Trip Level.						

**Tr Adaptation****Parameters::Motor Control::Tr Adaptation**

When the motor control strategy is set to Closed Loop vector, i.e. using encoder feedback, it is important to know the actual value of the rotor time constant. This value is measured by the autotune, but it will change as the motor temperature changes. The purpose of this module is to track the changing value of the rotor time constant, and to use all available feedback information to make the best possible estimate of its actual value at any given time.

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Actual Rotor T Const</b>	1520	Parameters::Motor Control::Tr Adaptation	x.	1 to 100000	ms	NEVER
This diagnostic shows the actual value of rotor time constant used by the motor control. This value is the nominal value stored in the Induction Motor Data, modified by this module to give a value as close as possible to the real value.						
<b>Tr Adaptation Output</b>	1521	Parameters::Motor Control::Tr Adaptation	x.	1 to 500	%	NEVER
This diagnostic shows the factor by which the nominal rotor time constant is multiplied, in order to give the actual rotor time constant passed to the motor control.						
<b>Demanded Terminal Volts</b>	1528	Parameters::Motor Control::Tr Adaptation	x.	0 to 1000	V	NEVER
In order to maintain constant flux for a given load, the motor terminal volts must be controlled. This diagnostic gives the terminal volts demand used by the control loop.						
<b>Terminal Volts</b>	1529	Parameters::Motor Control::Tr Adaptation	x.	0 to 1000	V	NEVER
This diagnostic shows motor terminal volts. It is included here for convenience, to compare with the demanded terminal volts to make sure that the terminal volts control loop is able to close the loop to the demanded value.						
<b>Max Available Volts</b>	1527	Parameters::Motor Control::Tr Adaptation	x.	0 to 10000	V	NEVER
This diagnostic shows the maximum achievable value of motor terminal volts. So for example, when running at rated load, the required motor terminal volts may be 400v. But if the mains is low, the maximum achievable volts may only be 390v. This diagnostic shows what is achievable at any particular time, and may be useful to explain why the motor volts may be lower than expected.						

# D-200 Parameter Reference

## Trips History

### Parameters::Trips::Trips History

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Recent Trips</b>	0895	Parameters::Trips::Trips History				NEVER
The Recent Trips array is a record of the last 10 faults that caused the drive to disable the stack. Each entry has the same format as the First Trip parameter, (see <a href="#">Trips Status</a> ). The most recent fault is the first entry in the array, (Recent Trips[0]).						
<b>Recent Trip Times</b>	1442	Parameters::Trips::Trips History				NEVER
The time of each of the recent trips. The time saved is a snapshot of the Control Board Up Time, see Runtime Statistics.						
<b>Warranty Trips</b>	0968	Parameters::Trips::Trips History				NEVER
The Warranty Trips array is a record of the last 3 drive protection trips that were ignored due to the trip being disabled. This will usually be because Fire Mode (see Chapter 13) is enabled. Each entry has the same format as the First Trip parameter, (see <a href="#">Trips Status</a> ). The most recent fault is the first entry in the array, (Warranty Trips[0]).						
<b>Warranty Trip Time</b>	0972	Parameters::Trips::Trips History				NEVER
The time of each of the Warranty Trips. The time saved is a shapshot of the HV SMPS Up Time, see Runtime Statistics.						
<b>Warranty Trips Record</b>	1408	Parameters::Trips::Trips History		0:01 OVER VOLTAGE 2:03 OVER CURRENT 3:04 STACK FAULT 4:05 STACK OVER CURRENT 7:08 INVERSE TIME 10:11 HEATSINK OVERTEMP 11:12 INTERNAL OVERTEMP 14:15 BRAKE SHORT CCT 16:17 BRAKE SWITCH 21:22 VDC RIPPLE		NEVER
Records all drive protection trip event that have been ignored due to the trip being disabled. This will usually be because Fire Mode is enabled. Each entry has the same format as the Active 1 – 32 parameter, (see <a href="#">Trips Status</a> ).						

### Functional Description

These parameters indicate the fault history of the drive. They are preserved through a power failure.

The Warranty Trip parameters are also saved on the power stack. If the Control Module is attached to a power stack when it is powered on then the Warranty Trip parameter values are loaded from non-volatile memory on the power stack.



**Trips Status****Parameters::Trips::Trips Status**

Parameter Name	No.	Path	Default	Range	Units	Writable
First Trip	0696	Monitor::Trips Parameters::Trips::Trips Status		0:NONE 1:01 OVER VOLTAGE 2:02 UNDER VOLTAGE 3:03 OVER CURRENT 4:04 STACK FAULT 5:05 STACK OVER CURRENT 6:06 CURRENT LIMIT 7:07 MOTOR STALL 8:08 INVERSE TIME 9:09 MOTOR I2T 10:10 LOW SPEED I 11:11 HEATSINK OVERTEMP 12:12 INTERNAL OVERTEMP 13:13 MOTOR OVERTEMP 14:14 EXTERNAL TRIP 15:15 BRAKE SHORT CCT 16:16 BRAKE RESISTOR 17:17 BRAKE SWITCH 18:18 LOCAL CONTROL 19:19 COMMS BREAK 20:20 LINE CONTACTOR 21:21 PHASE FAIL 22:22 VDC RIPPLE 23:23 BASE MODBUS BREAK 24:24 24 V OVERLOAD 25:25 PMAC SPEED ERROR 26:26 OVERSPEED 27:27 STO ACTIVE 28:28 FEEDBACK MISSING 29:29 INTERNAL FAN FAIL 30:30 CURRENT SENSOR 31:31 POWER LOSS STOP 32:32 SPEED SENSOR 33:33 A1 34:34 A2 35:35 A3 36:36 A4 37:37 A5 38:38 A6 39:39 A7 40:40 A8 41:41 SPEED ERROR 42:42 PEERTOPEER OVERRUN 43:43 PHASE CONFIG 44:44 ETHERNET IP BREAK 45:45 RESOLVER ERROR 46:46 PMAC ALIGN ERROR 47:47 CURRENT IMBALANCE		NEVER

An enumerated value that shows the trip that caused the AC30 to disable the stack. When multiple trips are active at the same time, (for example Over Current followed by Over Temperature), this parameters shows the first trip that the AC30 detected. Refer to Chapter 10 "Trips and Fault Finding", for details of each trip source.

## D-202 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Enable 1 - 32</b>	0697	Parameters::Trips::Trips Status	FFFFFF7F	5:06 CURRENT LIMIT		ALWAYS
				6:07 MOTOR STALL		
				7:08 INVERSE TIME		
				8:09 MOTOR I2T		
				9:10 LOW SPEED I		
				11:12 INTERNAL OVERTEMP		
				12:13 MOTOR OVERTEMP		
				13:14 EXTERNAL TRIP		
				14:15 BRAKE SHORT CCT		
				15:16 BRAKE RESISTOR		
				16:17 BRAKE SWITCH		
				17:18 LOCAL CONTROL		
				18:19 COMMS BREAK		
				19:20 LINE CONTACTOR		
				20:21 PHASE FAIL		
				21:22 VDC RIPPLE		
				22:23 BASE MODBUS BREAK		
23:24 24 V OVERLOAD						
24:25 PMAC SPEED ERROR						
25:26 OVERSPEED						
28:29 INTERNAL FAN FAIL						
29:30 CURRENT SENSOR						
30:31 POWER LOSS STOP						
31:32 SPEED SENSOR						

A 32-bit word that can be used to enable, (or disable), individual trips. Refer to Chapter 10 “Trips and Fault Finding” for details of the value corresponding to each trip.

<b>Enable 33 - 64</b>	0730	Parameters::Trips::Trips Status	FFFFFFF	0:33 A1		ALWAYS
				1:34 A2		
				2:35 A3		
				3:36 A4		
				4:37 A5		
				5:38 A6		
				6:39 A7		
				7:40 A8		
				8:41 SPEED ERROR		
				9:42 PEERTOPEER OVERRUN		
				10:43 PHASE CONFIG		
				11:44 ETHERNET IP BREAK		
				14:47 CURRENT IMBALANCE		

Parameter Name	No.	Path	Default	Range	Units	Writable
----------------	-----	------	---------	-------	-------	----------

A 32-bit word that can be used to enable, (or disable), individual trips. Bit 0 of this word corresponds to trip 33, up to bit 31 of this word which corresponds to trip 64.

Refer to Chapter 10 “Trips and Fault Finding” for details of the value corresponding to each trip.

<b>Active 1 - 32</b>	0763	Monitor::Trips Parameters::Trips::Trips Status		0:01 OVER VOLTAGE		
				1:02 UNDER VOLTAGE		NEVER
				2:03 OVER CURRENT		
				3:04 STACK FAULT		
				4:05 STACK OVER CURRENT		
				5:06 CURRENT LIMIT		
				6:07 MOTOR STALL		
				7:08 INVERSE TIME		
				8:09 MOTOR I2T		
				9:10 LOW SPEED I		
				10:11 HEATSINK OVERTEMP		
				11:12 INTERNAL OVERTEMP		
				12:13 MOTOR OVERTEMP		
				13:14 EXTERNAL TRIP		
				14:15 BRAKE SHORT CCT		
				15:16 BRAKE RESISTOR		
				16:17 BRAKE SWITCH		
				17:18 LOCAL CONTROL		
				18:19 COMMS BREAK		
				19:20 LINE CONTACTOR		
				20:21 PHASE FAIL		
				21:22 VDC RIPPLE		
				22:23 BASE MODBUS BREAK		
				23:24 24 V OVERLOAD		
				24:25 PMAC SPEED ERROR		
				25:26 OVERSPEED		
				26:27 STO ACTIVE		
				27:28 FEEDBACK MISSING		
				28:29 INTERNAL FAN FAIL		
				29:30 CURRENT SENSOR		
				30:31 POWER LOSS STOP		
				31:32 SPEED SENSOR		

A 32-bit word that indicates which trip sources are active. For example, the HEATSINK OVERTEMP may remain true for some time after the initial fault is reported.

The Active value shows active trip sources even if the corresponding trip is not enabled in “Enabled 1-32”.

Refer to Chapter 10 “Trips and Fault Finding” for details of the value corresponding to each trip.

# D-204 Parameter Reference

Parameter Name	No.	Path	Default	Range	Units	Writable
<b>Active 33 - 64</b>	0513	Monitor::Trips Parameters::Trips::Trips Status				NEVER
<p>A 32-bit word that indicates trip sources that are active. Bit 0 of this word corresponds to trip 33, up to bit 31 of this word which corresponds to trip 64.</p>						
<b>Warnings 1 - 32</b>	0829	Monitor::Trips Parameters::Trips::Trips Status		0:01 OVER VOLTAGE 1:02 UNDER VOLTAGE 2:03 OVER CURRENT 3:04 STACK FAULT 4:05 STACK OVER CURRENT 5:06 CURRENT LIMIT 6:07 MOTOR STALL 7:08 INVERSE TIME 8:09 MOTOR I2T 9:10 LOW SPEED I 10:11 HEATSINK OVERTEMP 11:12 INTERNAL OVERTEMP 12:13 MOTOR OVERTEMP 13:14 EXTERNAL TRIP 14:15 BRAKE SHORT CCT 15:16 BRAKE RESISTOR 16:17 BRAKE SWITCH 17:18 LOCAL CONTROL 18:19 COMMS BREAK 19:20 LINE CONTACTOR 20:21 PHASE FAIL 21:22 VDC RIPPLE 22:23 BASE MODBUS BREAK 23:24 24 V OVERLOAD 24:25 PMAC SPEED ERROR 25:26 OVERSPEED 26:27 STO ACTIVE 27:28 FEEDBACK MISSING 28:29 INTERNAL FAN FAIL 29:30 CURRENT SENSOR 30:31 POWER LOSS STOP 31:32 SPEED SENSOR		NEVER
<p>A 32-bit word that indicates trip sources that are close to a fault condition. For example, the heat sink fault monitoring firmware reports a HEATSINK OVERTEMP warning when the heat sink temperature gets close to the heat sink fault level.</p> <p>The Warnings value is not affected by the trip enable mask, "Enabled 1-32".</p> <p>Refer to Chapter 10 "Trips and Fault Finding" for details of the value corresponding to each trip.</p>						

<i>Parameter Name</i>	<i>No.</i>	<i>Path</i>	<i>Default</i>	<i>Range</i>	<i>Units</i>	<i>Writable</i>
<b>Warnings 33 - 64</b>	0514	Same as PNO 513				NEVER

A 32-bit word that indicates trip sources that are close to a fault condition. Bit 0 of this word corresponds to trip 33, up to bit 31 of this word which corresponds to trip 64.

The Warnings value is not affected by the corresponding trip enable mask, "Enabled 33-64".

Refer to Chapter 10 "Trips and Fault Finding" for details of the value corresponding to each trip.

---

<b>Display Warnings</b>	1760	Parameters::Trips::Trips Status	TRUE			ALWAYS
-------------------------	------	---------------------------------	------	--	--	--------

When this parameter is TRUE, warnings are reported on the GKP as a message that hides any parameter display, (until the message is manually acknowledged). Set this parameter to FALSE to prevent warning messages being shown on the GKP.

---

# D-206 Parameter Reference

## VDC Ripple

### *Parameters::Trips::VDC Ripple*

This function contains parameters and data associated to the VDC ripple detection and trip condition

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>VDC Ripple Filter TC</b>	0912	Parameters::Trips::VDC Ripple	1.000	0.100 to 100.000	s	ALWAYS
Time constant of the First order Low pass filter applied to the raw VDC Ripple						
<b>VDC Ripple Trip Hyst</b>	0915	Parameters::Trips::VDC Ripple	10	0 to 50	V	ALWAYS
Hysteresis on the VDC ripple level for trip condition.						
<b>VDC Ripple Sample</b>	0916	Parameters::Trips::VDC Ripple	0.009	0.001 to 0.100	s	ALWAYS
Time Windows for peak to peak VDC voltage capture and ripple calculation						
<b>Max VDC Ripple</b>	0913	Parameters::Trips::VDC Ripple	x.	0 to 500	V	NEVER
Voltage ripple trigger value associated to the VDC ripple trip						
<b>VDC Ripple Trip Delay</b>	0914	Parameters::Trips::VDC Ripple		0.000 to 300.000	s	NEVER
Delay to trip if trip condition detected						
<b>VDC Ripple Level</b>	917	Parameters::Trips::VDC Ripple		0 to 500	V	NEVER
Actual raw VDC ripple level						
<b>Filtered VDC Ripple</b>	0918	Parameters::Trips::VDC Ripple	x.	0 to 500	V	NEVER
Actual filtered VDC ripple level						

**Voltage Control*****Parameters::Motor Control::Voltage Control***

Designed for VOLTS/Hz motor Control Mode.

This function allows the motor output volts to be controlled in the presence of dc link voltage variations. This is achieved by controlling the level of PWM modulation as a function of measured dc link volts. The dc link volts may vary either due to supply variations or regenerative braking by the motor.

Three control modes are available, None, Fixed and Automatic.

<b>Parameter Name</b>	<b>No.</b>	<b>Path</b>	<b>Default</b>	<b>Range</b>	<b>Units</b>	<b>Writable</b>
<b>Terminal Voltage Mode</b>	0371	Parameters::Motor Control::Voltage Control	0	0:NONE 1:FIXED 2:AUTOMATIC		ALWAYS
Selection of voltage control mode						
<b>Motor Base Volts</b>	0374	Parameters::Motor Control::Voltage Control	100.00	0.00 to 115.47	%	ALWAYS
Scale of the output voltage						

## D-208 Parameter Reference

### Web Server

***Setup::Communications::Base Ethernet***

***Setup::Environment***

***Parameters::Base Comms::Web Server***

Refer to Chapter 12 "Ethernet".



## Parameter Table

This table is a complete list of all the parameters in the AC30V.

**PNO:** The parameter number, a unique identifier for this parameter.

**Name:** The parameter's name as it appears on the GKP and web page.

**Path(s):** The navigation path(s) to this parameter on the GKP and web page.

**Type:** The data type of the parameter.

Data Type	Description
BOOL	A Boolean quantity representing FALSE or TRUE. (A zero value is FALSE).
SINT	A signed integer with a maximum range of -128 to +127.
INT	A signed integer with a maximum range of -32768 to +32767
DINT	A signed integer with a maximum range of -2147483648 to +2147483647
USINT <sup>(1)</sup>	An unsigned integer with a maximum range of 0 to 255
UINT	An unsigned integer with a maximum range of 0 to 65535
UDINT	An unsigned integer with a maximum range of 0 to 4294967295
REAL	A 32-bit floating point conforming to IEEE-754
TIME	A duration with a resolution of 1 ms and a maximum range of 0.000s to 4294967.295s, (about 50 days)
DATE	Date with a maximum range of 1 <sup>st</sup> Jan 1970 to 2037.
TIME_OF_DAY	Time of day
DATE_AND_TIME	Date and time of day with a maximum range of 1 <sup>st</sup> Jan 1970 to 2037
STRING	String
BYTE	Bit string length 8
WORD <sup>(2)</sup>	Bit string length 16
DWORD <sup>(2)</sup>	Bit string length 32

- (1) Some parameters of type USINT use discrete integer values to enumerate given states. For example; PNO 0001, the analog input hardware configuration may be set to 0, 1, 2 or 3 corresponding to the supported ranges. Such parameters have the available selections shown in the Range column.
- (2) Some Bit string parameters have the individual bits within the word assigned independently to separate functionality. For example PNO 0005 presents the state of all digital inputs in one 16-bit word. The bits may be individually accessed on the GKP and webpage by expanding the parameter. Each individual feature may be accessed as a Boolean via any fieldbus communications link by referencing the dedicated PNO.

**Default:** The default value of the parameter.

**Range:** The minimum and maximum values for this parameter. This column is also used to detail the available selection for enumerated integer types and named bits in bit string data types.

**Units:** The units text displayed with this parameter value.

## D-210 Parameter Reference

WQ: The write qualifier.

ALWAYS	The parameter has no write restrictions
STOPPED	The parameter is only writable when the motor is not being controlled
CONFIG	The parameter may only be written when the drive is in CONFIGURATION mode (NOT READY TO SWITCH ON)
NEVER	The parameter is monitor only

View: Indicates when the parameter is visible on the GKP or the Web page.

***Parameters that are not relevant to the current drive's configuration may be hidden regardless of the View level.***

OPERATOR	The parameter is always visible.
TECHNICIAN	The parameter is visible when the view level is set to OPERATOR or TECHNICIAN
ENGINEER	The parameter is visible when the view level is set to OPERATOR, TECHNICIAN or ENGINEER

Mbus: The Modbus register number corresponding to this PNO.

Notes:

1. The parameter is automatically saved before power down
2. Input parameter is not saved.
3. Output parameter is saved.
4. Parameter is hidden depending on the drive configuration.
5. Parameter is cloned as part of the "Other Parameters" group.
6. Parameter is cloned as part of the "Power Parameters" group.
7. Parameter is cloned as part of the "Drive Unique" group.
8. Parameter availability depends on the application selected.

# Parameter Reference D-211

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
0001	Anin 01 Type	Setup::Inputs and Outputs::Base IO Parameters::Inputs And Outputs::IO Configure	USINT (enum)	0	0:-10..10 V 1:0..10 V 2:0..20 mA 3:4..20 mA		ALWAYS	OPERATOR		00529
0002	Anin 02 Type	Same as PNO 1	USINT (enum)	0	0:-10..10 V 1:0..10 V		ALWAYS	OPERATOR		00531
0003	Anout 01 Type	Same as PNO 1	USINT (enum)	0	Same as PNO 2		ALWAYS	OPERATOR		00533
0004	Anout 02 Type	Same as PNO 1	USINT (enum)	1	1:0..10 V 2:0..20 mA 3:4..20 mA		ALWAYS	OPERATOR		00535
0005	Digin Value	Monitor::Inputs and Outputs Parameters::Inputs And Outputs::IO Values	WORD (bitfield)		0:Digin 01 1:Digin 02 2:Digin 03 3:Digin 04 4:Digin 05 5:Digin 06 6:Digin 07 7:STO Inactive 8:Digin 11 9:Digin 12 10:Digin 13 11:Digin 14 12:Run Key 13:Not Stop Key 14:Stop Key		NEVER	OPERATOR		00537
0006	Digin Value.Digin 01	Same as PNO 5	BOOL				NEVER	OPERATOR		00539
0007	Digin Value.Digin 02	Same as PNO 5	BOOL				NEVER	OPERATOR		00541
0008	Digin Value.Digin 03	Same as PNO 5	BOOL				NEVER	OPERATOR		00543
0009	Digin Value.Digin 04	Same as PNO 5	BOOL				NEVER	OPERATOR		00545
0010	Digin Value.Digin 05	Same as PNO 5	BOOL				NEVER	OPERATOR		00547
0011	Digin Value.Digin 06	Same as PNO 5	BOOL				NEVER	OPERATOR		00549
0012	Digin Value.Digin 07	Same as PNO 5	BOOL				NEVER	OPERATOR		00551
0013	Digin Value.STO Inactive	Same as PNO 5	BOOL				NEVER	OPERATOR		00553
0014	Digin Value.Digin 11	Same as PNO 5	BOOL				NEVER	OPERATOR		00555
0015	Digin Value.Digin 12	Same as PNO 5	BOOL				NEVER	OPERATOR		00557
0016	Digin Value.Digin 13	Same as PNO 5	BOOL				NEVER	OPERATOR		00559
0017	Digin Value.Digin 14	Same as PNO 5	BOOL				NEVER	OPERATOR		00561
0018	Digin Value.Run Key	Same as PNO 5	BOOL				NEVER	OPERATOR		00563
0019	Digin Value.Not Stop Key	Same as PNO 5	BOOL				NEVER	OPERATOR		00565
0020	Digin Value.Stop Key	Same as PNO 5	BOOL				NEVER	OPERATOR		00567
0022	Digout Value	Same as PNO 5	WORD (bitfield)	0000	0:Digout 01 1:Digout 02 2:Digout 03 3:Digout 04 4:Relay 01 5:Relay 02 8:Digout 11 9:Digout 12 10:Digout 13 11:Digout 14 14:Relay 11 15:Relay 12		ALWAYS	OPERATOR	2	00571
0023	Digout Value.Digout 01	Same as PNO 5	BOOL	FALSE			ALWAYS	OPERATOR	2	00573
0024	Digout Value.Digout 02	Same as PNO 5	BOOL	FALSE			ALWAYS	OPERATOR	2	00575
0025	Digout Value.Digout 03	Same as PNO 5	BOOL	FALSE			ALWAYS	OPERATOR	2	00577
0026	Digout Value.Digout 04	Same as PNO 5	BOOL	FALSE			ALWAYS	OPERATOR	2	00579
0027	Digout Value.Relay 01	Same as PNO 5	BOOL	FALSE			ALWAYS	OPERATOR	2	00581
0028	Digout Value.Relay 02	Same as PNO 5	BOOL	FALSE			ALWAYS	OPERATOR	2	00583
0031	Digout Value.Digout 11	Same as PNO 5	BOOL	FALSE			ALWAYS	OPERATOR	2	00589
0032	Digout Value.Digout 12	Same as PNO 5	BOOL	FALSE			ALWAYS	OPERATOR	2	00591
0033	Digout Value.Digout 13	Same as PNO 5	BOOL	FALSE			ALWAYS	OPERATOR	2	00593
0034	Digout Value.Digout 14	Same as PNO 5	BOOL	FALSE			ALWAYS	OPERATOR	2	00595
0037	Digout Value.Relay 11	Same as PNO 5	BOOL	FALSE			ALWAYS	OPERATOR	2	00601
0038	Digout Value.Relay 12	Monitor::Inputs and Outputs Parameters::Inputs And Outputs::IO Values	BOOL	FALSE			ALWAYS	OPERATOR	2	00603
0039	Anin 01 Value	Same as PNO 38	REAL	x.x	-100.0 to 100.0	%	NEVER	OPERATOR		00605

# D-212 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
0040	Anin 01 Break	Same as PNO 38	BOOL				NEVER	OPERATOR		00607
0041	Anin 02 Value	Same as PNO 38	REAL	x.x	-100.0 to 100.0	%	NEVER	OPERATOR		00609
0042	Anout 01 Value	Same as PNO 38	REAL	0.00	Min to Max	%	ALWAYS	OPERATOR	2	00611
0043	Anout 02 Value	Same as PNO 38	REAL	0.00	Min to Max	%	ALWAYS	OPERATOR	2	00613
0044	Comms Required	Setup::Communications::Option Parameters::Option Comms::Comms	USINT (enum)	1	1:NONE 2:BACNET IP 3:BACNET MSTP 4:CANOPEN 6:CONTROLNET 7:DEVICENET 8:ETHERCAT 9:ETHERNET IP 10:MODBUS RTU 11:MODBUS TCP 12:PROFIBUS DPV1 13:PROFINET IO 14:PASSIVE SERIAL 15:BC OPTION		CONFIG	TECHNICIAN		00615
0045	Comms Fitted	Monitor::Communications::Option Parameters::Option Comms::Comms	USINT (enum)		0:UNKNOWN 1:NONE 2:BACNET IP 3:BACNET MSTP 4:CANOPEN 5:CC LINK 6:CONTROLNET 7:DEVICENET 8:ETHERCAT 9:ETHERNET IP 10:MODBUS RTU 11:MODBUS TCP 12:PROFIBUS DPV1 13:PROFINET IO 14:PASSIVE SERIAL 15:BC OPTION 16:POWERLINK		NEVER	OPERATOR	1	00617
0046	Comms State	Parameters::Option Comms::Comms	USINT (enum)		0:SETUP 1:NW INIT 2:WAIT PROCESS 3:IDLE 4:PROCESS ACTIVE 5:ERROR 6:RESERVED 7:EXCEPTION 8:NONE		NEVER	ENGINEER		00619
0047	Comms Supervised	Same as PNO 45	BOOL				NEVER	OPERATOR		00621
0048	Comms Trip Enable	Same as PNO 44	BOOL	TRUE			ALWAYS	TECHNICIAN		00623
0049	Comms Module Version	Same as PNO 45	DWORD				NEVER	TECHNICIAN		00625
0050	Comms Module Serial	Same as PNO 45	DWORD				NEVER	TECHNICIAN		00627
0051	Comms Diagnostic	Same as PNO 45	USINT (enum)		0:OK 1:HARDWARE MISMATCH 2:INVALID CONFIGURATION 3:MAPPING FAILED 4:EXCEPTION 5:UNSUPPORTED OPTION		NEVER	OPERATOR		00629
0052	Comms Diagnostic Code	Same as PNO 45	DWORD				NEVER	OPERATOR		00631
0053	Comms Exception	Same as PNO 45	BYTE				NEVER	TECHNICIAN		00633
0054	Comms Net Exception	Same as PNO 45	BYTE				NEVER	TECHNICIAN		00635
0055	Read Mapping	Setup::Communications::Option Parameters::Option Comms::Read Process	ARRAY[0..31]				CONFIG	TECHNICIAN		00637
0056	Read Mapping[0]	Same as PNO 55	UINT	0627	0000 to 3131		CONFIG	TECHNICIAN		00639
0057	Read Mapping[1]	Same as PNO 55	UINT	0681	0000 to 3131		CONFIG	TECHNICIAN		00641
0058	Read Mapping[2]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00643
0059	Read Mapping[3]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00645
0060	Read Mapping[4]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00647
0061	Read Mapping[5]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00649
0062	Read Mapping[6]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00651
0063	Read Mapping[7]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00653

# Parameter Reference D-213

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	MBus
0064	Read Mapping[8]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00655
0065	Read Mapping[9]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00657
0066	Read Mapping[10]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00659
0067	Read Mapping[11]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00661
0068	Read Mapping[12]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00663
0069	Read Mapping[13]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00665
0070	Read Mapping[14]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00667
0071	Read Mapping[15]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00669
0072	Read Mapping[16]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00671
0073	Read Mapping[17]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00673
0074	Read Mapping[18]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00675
0075	Read Mapping[19]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00677
0076	Read Mapping[20]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00679
0077	Read Mapping[21]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00681
0078	Read Mapping[22]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00683
0079	Read Mapping[23]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00685
0080	Read Mapping[24]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00687
0081	Read Mapping[25]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00689
0082	Read Mapping[26]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00691
0083	Read Mapping[27]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00693
0084	Read Mapping[28]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00695
0085	Read Mapping[29]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00697
0086	Read Mapping[30]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00699
0087	Read Mapping[31]	Same as PNO 55	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00701
0120	Write Mapping	Setup::Communications::Option Parameters::Option Comms::Write Process	ARRAY[0..31]				CONFIG	TECHNICIAN		00767
0121	Write Mapping[0]	Same as PNO 120	UINT	0661	0000 to 3131		CONFIG	TECHNICIAN		00769
0122	Write Mapping[1]	Same as PNO 120	UINT	0395	0000 to 3131		CONFIG	TECHNICIAN		00771
0123	Write Mapping[2]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00773
0124	Write Mapping[3]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00775
0125	Write Mapping[4]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00777
0126	Write Mapping[5]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00779
0127	Write Mapping[6]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00781
0128	Write Mapping[7]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00783
0129	Write Mapping[8]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00785
0130	Write Mapping[9]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00787
0131	Write Mapping[10]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00789
0132	Write Mapping[11]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00791
0133	Write Mapping[12]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00793
0134	Write Mapping[13]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00795
0135	Write Mapping[14]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00797
0136	Write Mapping[15]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00799
0137	Write Mapping[16]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00801
0138	Write Mapping[17]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00803
0139	Write Mapping[18]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00805
0140	Write Mapping[19]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00807
0141	Write Mapping[20]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00809
0142	Write Mapping[21]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00811
0143	Write Mapping[22]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00813
0144	Write Mapping[23]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00815
0145	Write Mapping[24]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00817
0146	Write Mapping[25]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00819
0147	Write Mapping[26]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00821
0148	Write Mapping[27]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00823
0149	Write Mapping[28]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00825
0150	Write Mapping[29]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00827
0151	Write Mapping[30]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00829
0152	Write Mapping[31]	Same as PNO 120	UINT	0000	0000 to 3131		CONFIG	TECHNICIAN		00831
0185	Comms Event Code	Parameters::Option Comms::Event	BYTE	00			ALWAYS	ENGINEER	2	00897
0186	Comms Event Active	Monitor::Communications::Option Parameters::Option Comms::Event	BOOL				NEVER	OPERATOR		00899
0187	Comms Event Set	Parameters::Option Comms::Event	BOOL	FALSE			ALWAYS	ENGINEER	2	00901
0188	Comms Event Clear	Parameters::Option Comms::Event	BOOL	FALSE			ALWAYS	ENGINEER	2	00903
0189	Option MAC Address	Monitor::Communications::Option Parameters::Option Comms::Option Ethernet	STRING[18]				NEVER	TECHNICIAN		00905

# D-214 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
0195	Option IP Address	Same as PNO 189	DWORD (IP addr)				NEVER	OPERATOR		00917
0196	Option Subnet Mask	Same as PNO 189	DWORD (IP addr)				NEVER	OPERATOR		00919
0197	Option Gateway	Same as PNO 189	DWORD (IP addr)				NEVER	OPERATOR		00921
0198	Option DHCP Enabled	Same as PNO 189	BOOL				NEVER	TECHNICIAN		00923
0199	Address Assignment	Setup::Communications::Option Parameters::Option Comms::Option Ethernet	USINT (enum)	0	0:FIXED 1:EXTERNAL 2:DHCP		CONFIG	TECHNICIAN		00925
0200	Fixed IP Address	Same as PNO 199	DWORD (IP addr)	000.000.000.000			CONFIG	TECHNICIAN	7	00927
0201	Fixed Subnet Mask	Same as PNO 199	DWORD (IP addr)	000.000.000.000			CONFIG	TECHNICIAN	7	00929
0202	Fixed Gateway Address	Same as PNO 199	DWORD (IP addr)	000.000.000.000			CONFIG	TECHNICIAN	7	00931
0203	Option Web Enable	Same as PNO 199	BOOL	TRUE			CONFIG	TECHNICIAN		00933
0204	Web Parameters Enable	Same as PNO 199	BOOL	TRUE			CONFIG	TECHNICIAN		00935
0205	Option FTP Enable	Same as PNO 199	BOOL	TRUE			CONFIG	ENGINEER		00937
0206	Option FTP Admin Mode	Same as PNO 199	BOOL	TRUE			CONFIG	ENGINEER		00939
0207	IPConfig Enable	Same as PNO 199	BOOL	TRUE			CONFIG	ENGINEER		00941
0208	BACnet IP State	Monitor::Communications::Option Parameters::Option Comms::BACnet IP	USINT (enum)		Same as PNO 46		NEVER	OPERATOR		00943
0209	BACnet IP Device ID	Setup::Communications::Option Parameters::Option Comms::BACnet IP	UDINT	0	0 to 4194302		CONFIG	TECHNICIAN	7	00945
0210	BACnet IP Timeout	Same as PNO 209	TIME	3.000	0.000 to 65.000	s	CONFIG	TECHNICIAN		00947
0211	CANopen State	Monitor::Communications::Option Parameters::Option Comms::CANopen	USINT (enum)		0:SETUP 1:NW INIT 2:PRE-OPERATIONAL 3:STOP 4:OPERATIONAL 5:BUS OFF 6:RESERVED 7:EXCEPTION 8:NONE		NEVER	OPERATOR		00949
0212	CANopen Node Address	Setup::Communications::Option Parameters::Option Comms::CANopen	USINT	1	1 to 127		CONFIG	TECHNICIAN	7	00951
0213	CANopen Baud Rate	Same as PNO 212	USINT (enum)	9	0:10 KBPS 1:20 KBPS 2:50 KBPS 3:100 KBPS 4:125 KBPS 5:250 KBPS 6:500 KBPS 7:800 KBPS 8:1000 KBPS 9:AUTO		CONFIG	TECHNICIAN		00953
0214	ControlNet State	Monitor::Communications::Option Parameters::Option Comms::ControlNet	USINT (enum)		0:SETUP 1:NW INIT 2:WAITING TO CONNECT 3:CONNECTION IDLE 4:CONNECTION ACTIVE 5:ERROR 6:RESERVED 7:EXCEPTION 8:NONE		NEVER	OPERATOR		00955
0215	ControlNet MAC ID	Setup::Communications::Option Parameters::Option Comms::ControlNet	USINT	0	0 to 99		CONFIG	TECHNICIAN	7	00957
0216	CNet Producing Inst	Same as PNO 215	WORD	0064			CONFIG	TECHNICIAN		00959
0217	CNet Consuming Inst	Same as PNO 215	WORD	0096			CONFIG	TECHNICIAN		00961
0218	DeviceNet State	Monitor::Communications::Option Parameters::Option Comms::DeviceNet	USINT (enum)		Same as PNO 214		NEVER	OPERATOR		00963
0219	DeviceNet MAC ID	Setup::Communications::Option Parameters::Option Comms::DeviceNet	USINT	0	0 to 63		CONFIG	TECHNICIAN	7	00965
0220	DeviceNet Baud Rate	Same as PNO 219	USINT (enum)	3	0:125 KBPS 1:250 KBPS		CONFIG	TECHNICIAN		00967

# Parameter Reference D-215

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	MBus
					2:500 KBPS 3:AUTO					
0221	DeviceNet Actual Baud	Same as PNO 218	USINT (enum)		Same as PNO 220		NEVER	OPERATOR		00969
0222	DNet Producing Inst	Same as PNO 219	WORD	0064			CONFIG	TECHNICIAN		00971
0223	DNet Consuming Inst	Same as PNO 219	WORD	0096			CONFIG	TECHNICIAN		00973
0224	EtherCAT State	Monitor::Communications::Option Parameters::Option Comms::EtherCAT	USINT (enum)		0:SETUP 1:NW INIT 2:INIT OR PREOP 3:SAFE OPERATIONAL 4:OPERATIONAL 5:ERROR 6:RESERVED 7:EXCEPTION 8:NONE		NEVER	OPERATOR		00975
0225	EtherNet IP State	Monitor::Communications::Option Parameters::Option Comms::EtherNet IP	USINT (enum)		Same as PNO 214		NEVER	OPERATOR		00977
0226	ENet Producing Inst	Setup::Communications::Option Parameters::Option Comms::EtherNet IP	WORD	0064			CONFIG	TECHNICIAN		00979
0227	ENet Consuming Inst	Same as PNO 226	WORD	0096			CONFIG	TECHNICIAN		00981
0228	Modbus RTU State	Monitor::Communications::Option Parameters::Option Comms::Modbus RTU	USINT (enum)		Same as PNO 46		NEVER	OPERATOR		00983
0229	Modbus Device Address	Setup::Communications::Option Parameters::Option Comms::Modbus RTU	USINT	1	1 to 247		CONFIG	TECHNICIAN	7	00985
0230	Modbus RTU Baud Rate	Same as PNO 229	USINT (enum)	4	0:1200 BPS 1:2400 BPS 2:4800 BPS 3:9600 BPS 4:19200 BPS 5:38400 BPS 6:57600 BPS 7:76800 BPS 8:115200 BPS		CONFIG	TECHNICIAN		00987
0231	Parity And Stop Bits	Same as PNO 229	USINT (enum)	0	0:EVEN, 1 STOP 1:ODD, 1 STOP 2:NONE, 2 STOP 3:NONE, 1 STOP		CONFIG	TECHNICIAN		00989
0232	High Word First RTU	Same as PNO 229	BOOL	FALSE			CONFIG	TECHNICIAN		00991
0233	Modbus RTU Timeout	Same as PNO 229	TIME	3.000	0.000 to 65.000	s	CONFIG	TECHNICIAN		00993
0234	Modbus TCP State	Monitor::Communications::Option Parameters::Option Comms::Modbus TCP	USINT (enum)		Same as PNO 46		NEVER	OPERATOR		00995
0235	High Word First TCP	Setup::Communications::Option Parameters::Option Comms::Modbus TCP	BOOL	FALSE			CONFIG	TECHNICIAN		00997
0236	Modbus TCP Timeout	Same as PNO 235	TIME	3.000	0.000 to 65.000	s	CONFIG	TECHNICIAN		00999
0237	Profibus State	Monitor::Communications::Option Parameters::Option Comms::Profibus	USINT (enum)		Same as PNO 46		NEVER	OPERATOR		01001
0238	Profibus Node Address	Setup::Communications::Option Parameters::Option Comms::Profibus	USINT	0	0 to 126		CONFIG	TECHNICIAN	7	01003
0239	PROFINET State	Monitor::Communications::Option Parameters::Option Comms::PROFINET IO	USINT (enum)		0:SETUP 1:NW INIT 2:WAITING TO CONNECT 3:STOP MODE 4:CONNECTED 5:ERROR 6:RESERVED 7:EXCEPTION 8:NONE		NEVER	OPERATOR		01005
0240	PROFINET Device Name	Same as PNO 239	STRING[32]				NEVER	OPERATOR		01007
0249	Braking Enable	Parameters::Motor Control::Braking	BOOL	TRUE			ALWAYS	TECHNICIAN	6	01025
0251	Brake Resistance	Parameters::Motor Control::Braking	REAL	100.00	0.01 to 1000.00	Ohm	STOPPED	TECHNICIAN	6	01029
0252	Brake Rated Power	Parameters::Motor Control::Braking	REAL	0.10	0.10 to 510.00	kW	STOPPED	TECHNICIAN	6	01031
0253	Brake Overrating	Parameters::Motor Control::Braking	REAL	25.00	1.00 to 40.00		STOPPED	ENGINEER	6	01033
0254	Braking Active	Parameters::Motor Control::Braking	BOOL				NEVER	TECHNICIAN		01035
0255	Autotune Enable	Setup::Motor Control::Autotune Parameters::Motor Control::Autotune	BOOL	FALSE			STOPPED	TECHNICIAN	2	01037
0256	Autotune Mode	Same as PNO 255	USINT (enum)	1	0:STATIONARY 1:ROTATING		STOPPED	TECHNICIAN	6	01039

# D-216 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	MBus
0257	Autotune Test Disable	Same as PNO 255	WORD (bitfield)	0000	0:Stator Resistance 1:Leakage Inductance 2:Magnetising Current 3:Rotor Time Constant 4:Encoder Direction		STOPPED	TECHNICIAN	6	01041
0258	Autotune Test Disable.Stator Resistance	Same as PNO 255	BOOL	FALSE			STOPPED	TECHNICIAN	6	01043
0259	Autotune Test Disable.Leakage Inductance	Same as PNO 255	BOOL	FALSE			STOPPED	TECHNICIAN	6	01045
0260	Autotune Test Disable.Magnetising Current	Same as PNO 255	BOOL	FALSE			STOPPED	TECHNICIAN	6	01047
0261	Autotune Test Disable.Rotor Time Constant	Same as PNO 255	BOOL	FALSE			STOPPED	TECHNICIAN	6	01049
0262	Autotune Test Disable.Encoder Direction	Same as PNO 255	BOOL	FALSE			STOPPED	TECHNICIAN	6	01051
0274	Autotune Ramp Time	Same as PNO 255	TIME	10.000	1.000 to 1000.000	s	STOPPED	TECHNICIAN	6	01075
0286	MRAS Speed Percent	Parameters::Motor Control::MRAS	REAL	x.xx	Min to Max	%	NEVER	ENGINEER		01099
0287	MRAS Speed RPM	Parameters::Motor Control::MRAS	REAL	x.xx	Min to Max	RPM	NEVER	ENGINEER		01101
0289	MRAS Field Frequency	Parameters::Motor Control::MRAS	REAL	x.xx	Min to Max	Hz	NEVER	ENGINEER		01105
0290	MRAS Torque Percent	Parameters::Motor Control::MRAS	REAL	x.xx	Min to Max	%	NEVER	ENGINEER		01107
0291	MRAS Torque	Parameters::Motor Control::MRAS	REAL	x.xx	Min to Max	Nm	NEVER	ENGINEER		01109
0305	Current Limit	Setup::Motor Control::Control and Type Parameters::Motor Control::Current Limit	REAL	150.0	0.0 to 600.0	%	ALWAYS	TECHNICIAN		01137
0307	Regen Limit Enable	Parameters::Motor Control::Current Limit	BOOL	TRUE			ALWAYS	ENGINEER		01141
0310	VHz Flying Start Enable	Parameters::Motor Control::Flycatching	BOOL	FALSE			ALWAYS	TECHNICIAN		01147
0311	VC Flying Start Enable	Parameters::Motor Control::Flycatching	BOOL	FALSE			ALWAYS	TECHNICIAN		01149
0312	Flying Start Mode	Parameters::Motor Control::Flycatching	USINT (enum)	0	0:ALWAYS 1:TRIP OR POWER UP 2:TRIP		ALWAYS	TECHNICIAN		01151
0313	Search Mode	Parameters::Motor Control::Flycatching	USINT (enum)	0	0:BIDIRECTIONAL 1:UNIDIRECTION		ALWAYS	TECHNICIAN		01153
0314	Search Volts	Parameters::Motor Control::Flycatching	REAL	9.0	0.0 to 100.0	%	ALWAYS	TECHNICIAN	6	01155
0315	Search Boost	Parameters::Motor Control::Flycatching	REAL	40.0	0.0 to 50.0	%	ALWAYS	TECHNICIAN	6	01157
0316	Search Time	Parameters::Motor Control::Flycatching	TIME	3.000	0.100 to 60.000	s	ALWAYS	TECHNICIAN	6	01159
0317	Min Search Speed	Parameters::Motor Control::Flycatching	REAL	5	0 to 500	Hz	ALWAYS	TECHNICIAN		01161
0318	Flying Reflux Time	Parameters::Motor Control::Flycatching	TIME	2.000	0.100 to 10.000	s	ALWAYS	TECHNICIAN	6	01163
0324	DC Inj Deflux Time	Parameters::Motor Control::Inj Braking	TIME	0.500	0.100 to 20.000	s	ALWAYS	TECHNICIAN	6	01175
0325	DC Inj Frequency	Parameters::Motor Control::Inj Braking	REAL	9	1 to 500	Hz	ALWAYS	TECHNICIAN	6	01177
0326	DC Inj Current Limit	Parameters::Motor Control::Inj Braking	REAL	100.0	50.0 to 150.0	%	ALWAYS	TECHNICIAN	6	01179
0327	DC Pulse Time	Parameters::Motor Control::Inj Braking	TIME	2.000	0.000 to 100.000	s	ALWAYS	TECHNICIAN	6	01181
0328	Final DC Pulse Time	Parameters::Motor Control::Inj Braking	TIME	1.000	0.000 to 10.000	s	ALWAYS	TECHNICIAN	6	01183
0329	DC Current Level	Parameters::Motor Control::Inj Braking	REAL	3.0	0.0 to 25.0	%	ALWAYS	TECHNICIAN	6	01185
0330	DC Inj Timeout	Parameters::Motor Control::Inj Braking	TIME	90.000	0.000 to 600.000	s	ALWAYS	TECHNICIAN	6	01187
0331	DC Inj Base Volts	Parameters::Motor Control::Inj Braking	REAL	100.00	0.00 to 115.47	%	ALWAYS	TECHNICIAN	6	01189
0332	100% Mot Current	Parameters::Motor Control::Motor Load	REAL	x.x	0.0 to 10000.0		NEVER	TECHNICIAN		01191
0333	Mot Inv Time Overload	Parameters::Motor Control::Motor Load	REAL	x.	0 to 500	%	NEVER	TECHNICIAN		01193
0334	Mot Inv Time Delay	Parameters::Motor Control::Motor Load	TIME	60.000	6.000 to 60.000	s	ALWAYS	TECHNICIAN		01195
0335	Mot Inv Time Warning	Parameters::Motor Control::Motor Load	BOOL				NEVER	TECHNICIAN		01197
0336	Mot Inv Time Active	Parameters::Motor Control::Motor Load	BOOL				NEVER	TECHNICIAN		01199
0337	Mot Inv Time Output %	Parameters::Motor Control::Motor Load	REAL	x.x	0.0 to 600.0	%	NEVER	TECHNICIAN		01201
0338	Mot I2T TC	Parameters::Motor Control::Motor Load	TIME		0.000 to 1000000.000	s	NEVER	TECHNICIAN		01203
0339	Actual Mot I2T Output	Parameters::Motor Control::Motor Load	REAL	x.x	0.0 to 600.0	%	NEVER	TECHNICIAN		01205
0340	Mot I2T Active	Parameters::Motor Control::Motor Load	BOOL				NEVER	OPERATOR		01207
0341	Mot I2T Warning	Parameters::Motor Control::Motor Load	BOOL				NEVER	TECHNICIAN		01209
0342	Mot I2T Enable	Parameters::Motor Control::Motor Load	BOOL				NEVER	TECHNICIAN		01211
0343	100% Stk Current	Parameters::Motor Control::Stack Inv Time	REAL	x.x	0.0 to 10000.0	A	NEVER	TECHNICIAN		01213
0344	Long Overload Level	Parameters::Motor Control::Stack Inv Time	REAL	x.	0 to 200	%	NEVER	TECHNICIAN		01215
0345	Long Overload Time	Parameters::Motor Control::Stack Inv Time	TIME		0.000 to 100000.000	s	NEVER	TECHNICIAN		01217
0346	Short Overload Level	Parameters::Motor Control::Stack Inv Time	REAL	x.	0 to 200	%	NEVER	TECHNICIAN		01219
0347	Short Overload Time	Parameters::Motor Control::Stack Inv Time	TIME		0.000 to 10000.000	s	NEVER	TECHNICIAN		01221
0348	Inv Time Aiming Point	Parameters::Motor Control::Stack Inv Time	REAL	105.00	0.00 to 125.00	%	ALWAYS	TECHNICIAN		01223
0349	Inv Time Output	Parameters::Motor Control::Stack Inv Time	REAL	x.	0 to 600	%	NEVER	TECHNICIAN		01225
0350	Inv Time Up Rate	Parameters::Motor Control::Stack Inv Time	TIME	5.000	0.000 to 120.000	s	STOPPED	ENGINEER		01227
0351	Inv Time Down Rate	Parameters::Motor Control::Stack Inv Time	TIME	5.000	0.000 to 120.000	s	STOPPED	ENGINEER		01229
0352	Inv Time Warning	Parameters::Motor Control::Stack Inv Time	BOOL				NEVER	TECHNICIAN		01231
0353	Inv Time Active	Parameters::Motor Control::Stack Inv Time	BOOL				NEVER	TECHNICIAN		01233
0354	Slip Compensatn Enable	Parameters::Motor Control::Slip Compensation	BOOL	FALSE			ALWAYS	TECHNICIAN		01235
0356	SLP Motoring Limit	Parameters::Motor Control::Slip Compensation	REAL	150	0 to 600	RPM	ALWAYS	TECHNICIAN	6	01239
0357	SLP Regen Limit	Parameters::Motor Control::Slip Compensation	REAL	150	0 to 600	RPM	ALWAYS	TECHNICIAN	6	01241
0360	Slew Rate Enable	Parameters::Motor Control::Slew Rate	BOOL	TRUE			ALWAYS	TECHNICIAN		01247



# Parameter Reference D-217

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	MBus
0361	Slew Rate Accel Limit	Parameters::Motor Control::Slew Rate	REAL	500	1 to 1200	Hz/s	ALWAYS	TECHNICIAN		01249
0362	Slew Rate Decel Limit	Parameters::Motor Control::Slew Rate	REAL	500	1 to 1200	Hz/s	ALWAYS	TECHNICIAN		01251
0364	Stabilisation Enable	Parameters::Motor Control::Stabilisation	BOOL	TRUE			ALWAYS	TECHNICIAN		01255
0371	Terminal Voltage Mode	Parameters::Motor Control::Voltage Control	USINT (enum)	0	0:NONE 1:FIXED 2:AUTOMATIC		ALWAYS	TECHNICIAN		01269
0374	Motor Base Volts	Parameters::Motor Control::Voltage Control	REAL	100.00	0.00 to 115.47	%	ALWAYS	TECHNICIAN		01275
0380	Power kW	Monitor::Energy Meter Parameters::Motor Control::Energy Meter	REAL	x.xx	0.00 to 1000000.00	kW	NEVER	TECHNICIAN		01287
0381	Power HP	Same as PNO 380	REAL	x.xx	0.00 to 1000000.00	HP	NEVER	TECHNICIAN		01289
0382	Reactive Power	Same as PNO 380	REAL	x.xx	0.00 to 1000000.00	kVA <sub>r</sub>	NEVER	TECHNICIAN		01291
0383	Energy kWh	Same as PNO 380	REAL	x.xx	0.00 to 10000000.00	kWh	NEVER	TECHNICIAN	1	01293
0385	Power Factor Est	Same as PNO 380	REAL	x.xx	0.00 to 1.00		NEVER	TECHNICIAN		01297
0386	Power Factor Angle Est	Parameters::Motor Control::Energy Meter	REAL	x.xx	0.00 to 90.00	deg	NEVER	TECHNICIAN		01299
0389	Reset Energy Meter	Parameters::Motor Control::Energy Meter	BOOL	FALSE			ALWAYS	TECHNICIAN	2	01305
0390	Duty Selection	Setup::Motor Control::Control and Type Parameters::Motor Control::Feedbacks	USINT (enum)	1	0:HEAVY DUTY 1:NORMAL DUTY		STOPPED	TECHNICIAN		01307
0392	DC Link Voltage	Monitor::Motor and Drive Monitor::Regen Control Parameters::Motor Control::Feedbacks	REAL	x.	0 to 1000	V	NEVER	TECHNICIAN		01311
0393	Actual Speed RPM	Monitor::Motor and Drive Parameters::Motor Control::Feedbacks	REAL	x.xx	-100000.00 to 100000.00	RPM	NEVER	TECHNICIAN		01313
0394	Actual Speed rps	Same as PNO 393	REAL	x.xx	-1500.00 to 1500.00	rev/s	NEVER	TECHNICIAN		01315
0395	Actual Speed Percent	Same as PNO 393	REAL	x.xx	-200.00 to 200.00	%	NEVER	OPERATOR		01317
0396	DC Link Volt Filtered	Same as PNO 393	REAL	x.	0 to 1000	V	NEVER	TECHNICIAN		01319
0397	id	Parameters::Motor Control::Feedbacks	REAL	x.x	-600.0 to 600.0	%	NEVER	TECHNICIAN		01321
0398	iq	Parameters::Motor Control::Feedbacks	REAL	x.x	-600.0 to 600.0	%	NEVER	TECHNICIAN		01323
0399	Actual Torque	Same as PNO 393	REAL	x.x	-600.0 to 600.0	%	NEVER	TECHNICIAN		01325
0400	Actual Field Current	Same as PNO 393	REAL	x.x	-200.0 to 200.0	%	NEVER	TECHNICIAN		01327
0401	Motor Current Percent	Same as PNO 393	REAL	x.x	0.0 to 600.0	%	NEVER	TECHNICIAN		01329
0402	Motor Current	Same as PNO 393	REAL	x.x	0.0 to 2000.0	A	NEVER	TECHNICIAN		01331
0403	100% Stack Current A	Parameters::Motor Control::Feedbacks	REAL	x.x	0.0 to 2000.0	A	NEVER	TECHNICIAN		01333
0404	Stack Current (%)	Parameters::Motor Control::Feedbacks	REAL	x.	0 to 500	%	NEVER	TECHNICIAN		01335
0405	Motor Terminal Volts	Same as PNO 393	REAL	x.	0 to 1000	V	NEVER	TECHNICIAN		01337
0406	CM Temperature	Same as PNO 393	REAL	x.x	-25.0 to 200.0	°C	NEVER	TECHNICIAN		01339
0407	Heatsink Temperature	Same as PNO 393	REAL	x.x	-25.0 to 200.0	°C	NEVER	TECHNICIAN		01341
0408	Elec Rotor Speed	Parameters::Motor Control::Feedbacks	REAL	x.x	-1500.0 to 1500.0	Hz	NEVER	OPERATOR		01343
0410	Archive Flags	Parameters::Application::App Info	WORD				NEVER	OPERATOR		01347
0412	Stack Frequency	Parameters::Motor Control::Pattern Generator	REAL	4.00	2.00 to 16.00	kHz	ALWAYS	ENGINEER	6	01351
0413	Random Pattern IM	Parameters::Motor Control::Pattern Generator	BOOL	TRUE			ALWAYS	ENGINEER		01353
0414	Deflux Delay	Parameters::Motor Control::Pattern Generator	TIME	1.000	0.000 to 10.000	s	STOPPED	ENGINEER	6	01355
0415	Positive Torque Lim	Parameters::Motor Control::Torque Limit	REAL	150.0	-600.0 to 600.0	%	ALWAYS	TECHNICIAN		01357
0416	Negative Torque Lim	Parameters::Motor Control::Torque Limit	REAL	-150.0	-600.0 to 600.0	%	ALWAYS	TECHNICIAN		01359
0417	Main Torque Lim	Setup::Motor Control::Control and Type Parameters::Motor Control::Torque Limit	REAL	150.0	0.0 to 600.0	%	ALWAYS	TECHNICIAN		01361
0418	Fast Stop Torque Lim	Parameters::Motor Control::Torque Limit	REAL	150.0	0.0 to 600.0	%	ALWAYS	TECHNICIAN		01363
0419	Symmetric Torque Lim	Parameters::Motor Control::Torque Limit	BOOL	FALSE			ALWAYS	TECHNICIAN		01365
0420	Actual Pos Torque Lim	Monitor::Motor and Drive Parameters::Motor Control::Torque Limit	REAL	x.x	-600.0 to 600.0	%	NEVER	TECHNICIAN		01367
0421	Actual Neg Torque Lim	Same as PNO 420	REAL	x.x	-600.0 to 600.0	%	NEVER	TECHNICIAN		01369
0422	VHz Shape	Setup::Motor Control::Control and Type Parameters::Motor Control::Fluxing VHz	USINT (enum)	0	0:LINEAR LAW 1:FAN LAW 2:USER DEFINED 3:APPLICATION DEFINED		STOPPED	TECHNICIAN		01371
0423	VHz User Freq	Parameters::Motor Control::Fluxing VHz	ARRAY[0..10]				STOPPED	ENGINEER		01373
0424	VHz User Freq[0]	Parameters::Motor Control::Fluxing VHz	REAL	0.0	0.0 to 100.0	%	STOPPED	ENGINEER		01375
0425	VHz User Freq[1]	Parameters::Motor Control::Fluxing VHz	REAL	10.0	0.0 to 100.0	%	STOPPED	ENGINEER		01377
0426	VHz User Freq[2]	Parameters::Motor Control::Fluxing VHz	REAL	20.0	0.0 to 100.0	%	STOPPED	ENGINEER		01379
0427	VHz User Freq[3]	Parameters::Motor Control::Fluxing VHz	REAL	30.0	0.0 to 100.0	%	STOPPED	ENGINEER		01381
0428	VHz User Freq[4]	Parameters::Motor Control::Fluxing VHz	REAL	40.0	0.0 to 100.0	%	STOPPED	ENGINEER		01383
0429	VHz User Freq[5]	Parameters::Motor Control::Fluxing VHz	REAL	50.0	0.0 to 100.0	%	STOPPED	ENGINEER		01385
0430	VHz User Freq[6]	Parameters::Motor Control::Fluxing VHz	REAL	60.0	0.0 to 100.0	%	STOPPED	ENGINEER		01387
0431	VHz User Freq[7]	Parameters::Motor Control::Fluxing VHz	REAL	70.0	0.0 to 100.0	%	STOPPED	ENGINEER		01389
0432	VHz User Freq[8]	Parameters::Motor Control::Fluxing VHz	REAL	80.0	0.0 to 100.0	%	STOPPED	ENGINEER		01391
0433	VHz User Freq[9]	Parameters::Motor Control::Fluxing VHz	REAL	90.0	0.0 to 100.0	%	STOPPED	ENGINEER		01393
0434	VHz User Freq[10]	Parameters::Motor Control::Fluxing VHz	REAL	100.0	0.0 to 100.0	%	STOPPED	ENGINEER		01395

# D-218 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
0435	VHz User Volts	Parameters::Motor Control::Fluxing VHz	ARRAY[0..10]				STOPPED	ENGINEER		01397
0436	VHz User Volts[0]	Parameters::Motor Control::Fluxing VHz	REAL	0.0	0.0 to 100.0	%	STOPPED	ENGINEER		01399
0437	VHz User Volts[1]	Parameters::Motor Control::Fluxing VHz	REAL	10.0	0.0 to 100.0	%	STOPPED	ENGINEER		01401
0438	VHz User Volts[2]	Parameters::Motor Control::Fluxing VHz	REAL	20.0	0.0 to 100.0	%	STOPPED	ENGINEER		01403
0439	VHz User Volts[3]	Parameters::Motor Control::Fluxing VHz	REAL	30.0	0.0 to 100.0	%	STOPPED	ENGINEER		01405
0440	VHz User Volts[4]	Parameters::Motor Control::Fluxing VHz	REAL	40.0	0.0 to 100.0	%	STOPPED	ENGINEER		01407
0441	VHz User Volts[5]	Parameters::Motor Control::Fluxing VHz	REAL	50.0	0.0 to 100.0	%	STOPPED	ENGINEER		01409
0442	VHz User Volts[6]	Parameters::Motor Control::Fluxing VHz	REAL	60.0	0.0 to 100.0	%	STOPPED	ENGINEER		01411
0443	VHz User Volts[7]	Parameters::Motor Control::Fluxing VHz	REAL	70.0	0.0 to 100.0	%	STOPPED	ENGINEER		01413
0444	VHz User Volts[8]	Parameters::Motor Control::Fluxing VHz	REAL	80.0	0.0 to 100.0	%	STOPPED	ENGINEER		01415
0445	VHz User Volts[9]	Parameters::Motor Control::Fluxing VHz	REAL	90.0	0.0 to 100.0	%	STOPPED	ENGINEER		01417
0446	VHz User Volts[10]	Parameters::Motor Control::Fluxing VHz	REAL	100.0	0.0 to 100.0	%	STOPPED	ENGINEER		01419
0447	Fixed Boost	Same as PNO 422	REAL	0.0	0.0 to 25.0	%	ALWAYS	TECHNICIAN	6	01421
0448	Auto Boost	Parameters::Motor Control::Fluxing VHz	REAL	0.0	0.0 to 25.0	%	ALWAYS	TECHNICIAN	6	01423
0450	Acceleration Boost	Parameters::Motor Control::Fluxing VHz	REAL	0.0	0.0 to 25.0	%	ALWAYS	TECHNICIAN		01427
0451	Energy Saving Enable	Parameters::Motor Control::Fluxing VHz	BOOL	FALSE			ALWAYS	TECHNICIAN		01429
0453	Vsd Demand	Parameters::Motor Control::Fluxing VHz	REAL	x.x	Min to Max	%	NEVER	TECHNICIAN		01433
0454	Vsq Demand	Parameters::Motor Control::Fluxing VHz	REAL	x.x	Min to Max	%	NEVER	TECHNICIAN		01435
0455	Rated Motor Current	Setup::Motor Control::Motor Nameplate Parameters::Motor Control::Motor Nameplate	REAL	1.00	0.00 to 10000.00	A	STOPPED	TECHNICIAN	6	01437
0456	Base Voltage	Same as PNO 455	REAL	400.00	0.00 to 1000.00	V	STOPPED	TECHNICIAN	6	01439
0457	Base Frequency	Same as PNO 455	REAL	50.00	0.00 to 1000.00	Hz	STOPPED	TECHNICIAN	6	01441
0458	Motor Poles	Same as PNO 455	INT	4	2 to 1000		STOPPED	TECHNICIAN	6	01443
0459	Nameplate Speed	Same as PNO 455	REAL	1420.00	0.00 to 100000.00	RPM	STOPPED	TECHNICIAN	6	01445
0460	Motor Power	Same as PNO 455	REAL	2.20	0.00 to 3000.00	kW	STOPPED	TECHNICIAN	6	01447
0461	Power Factor	Same as PNO 455	REAL	0.79	0.00 to 1.00		STOPPED	TECHNICIAN	6	01449
0464	100% Speed in RPM	Setup::Motor Control::Control and Type Parameters::Motor Control::Scale Setpoint	REAL	1500.0	0.0 to 100000.0	RPM	ALWAYS	TECHNICIAN		01455
0467	PMAC SVC Auto Values	Parameters::Motor Control::PMAC SVC	BOOL	TRUE			ALWAYS	TECHNICIAN	6	01461
0468	PMAC SVC LPF Speed Hz	Parameters::Motor Control::PMAC SVC	REAL	60.00	0.00 to 10000.00	Hz	ALWAYS	TECHNICIAN	6	01463
0469	PMAC SVC P Gain	Parameters::Motor Control::PMAC SVC	REAL	1.00	0.00 to 10000.00		ALWAYS	TECHNICIAN	6	01465
0470	PMAC SVC I Gain Hz	Parameters::Motor Control::PMAC SVC	REAL	20.00	0.00 to 10000.00	Hz	ALWAYS	TECHNICIAN	6	01467
0476	PMAC SVC Open Loop Strt	Parameters::Motor Control::PMAC SVC	BOOL	TRUE			ALWAYS	TECHNICIAN		01479
0477	PMAC SVC Start Time	Parameters::Motor Control::PMAC SVC	TIME	0.500	0.000 to 1000.000	s	ALWAYS	TECHNICIAN		01481
0478	PMAC SVC Start Cur	Setup::Motor Control::SVC PMAC Parameters::Motor Control::PMAC SVC	REAL	10.0	0.0 to 600.0	%	ALWAYS	TECHNICIAN		01483
0479	PMAC SVC Start Speed	Same as PNO 478	REAL	5	0 to 200	%	ALWAYS	TECHNICIAN		01485
0484	Seq Stop Method VHz	Setup::Motor Control::Control and Type Parameters::Motor Control::Ramp	USINT (enum)	1	0:DISABLED VOLTAGE 1:RAMP 2:STOP RAMP 3:DC INJECTION		ALWAYS	TECHNICIAN		01495
0485	Ramp Type	Parameters::Motor Control::Ramp	USINT (enum)	0	0:LINEAR 1:S RAMP		ALWAYS	TECHNICIAN		01497
0486	Acceleration Time	Same as PNO 484	TIME	10.000	0.000 to 3000.000	s	ALWAYS	TECHNICIAN		01499
0487	Deceleration Time	Same as PNO 484	TIME	10.000	0.000 to 3000.000	s	ALWAYS	TECHNICIAN		01501
0488	Symmetric Mode	Parameters::Motor Control::Ramp	BOOL	FALSE			ALWAYS	TECHNICIAN		01503
0489	Symmetric Time	Parameters::Motor Control::Ramp	TIME	10.000	0.000 to 3000.000	s	ALWAYS	TECHNICIAN		01505
0490	Sramp Continuous	Parameters::Motor Control::Ramp	BOOL	FALSE			ALWAYS	TECHNICIAN		01507
0491	Sramp Acceleration	Parameters::Motor Control::Ramp	REAL	10.0	0.0 to 100.0	%/s <sup>2</sup>	ALWAYS	OPERATOR		01509
0492	Sramp Deceleration	Parameters::Motor Control::Ramp	REAL	10.0	0.0 to 100.0	%/s <sup>2</sup>	ALWAYS	TECHNICIAN		01511
0493	Sramp Jerk 1	Parameters::Motor Control::Ramp	REAL	10.0	0.0 to 100.0	%/s <sup>3</sup>	ALWAYS	TECHNICIAN		01513
0494	Sramp Jerk 2	Parameters::Motor Control::Ramp	REAL	10.0	0.0 to 100.0	%/s <sup>3</sup>	ALWAYS	TECHNICIAN		01515
0495	Sramp Jerk 3	Parameters::Motor Control::Ramp	REAL	10.0	0.0 to 100.0	%/s <sup>3</sup>	ALWAYS	TECHNICIAN		01517
0496	Sramp Jerk 4	Parameters::Motor Control::Ramp	REAL	10.0	0.0 to 100.0	%/s <sup>3</sup>	ALWAYS	TECHNICIAN		01519
0497	Ramp Hold	Parameters::Motor Control::Ramp	BOOL	FALSE			ALWAYS	TECHNICIAN		01521
0498	Ramping Active	Parameters::Motor Control::Ramp	BOOL				NEVER	TECHNICIAN		01523
0499	Ramp Spd Setpoint Input	Parameters::Motor Control::Ramp	REAL	x.x	-200.0 to 200.0	%	NEVER	TECHNICIAN		01525
0500	Ramp Speed Output	Parameters::Motor Control::Ramp	REAL	x.x	-200.0 to 200.0	%	NEVER	TECHNICIAN		01527
0501	Jog Setpoint	Parameters::Motor Control::Ramp	REAL	10.0	0.0 to 100.0	%	ALWAYS	TECHNICIAN		01529
0502	Jog Acceleration Time	Parameters::Motor Control::Ramp	TIME	1.000	0.000 to 3000.000	s	ALWAYS	TECHNICIAN		01531
0503	Jog Deceleration Time	Parameters::Motor Control::Ramp	TIME	1.000	0.000 to 3000.000	s	ALWAYS	TECHNICIAN		01533
0504	Stop Ramp Time	Same as PNO 484	TIME	10.000	0.000 to 600.000	s	ALWAYS	TECHNICIAN		01535
0505	Zero Speed Threshold	Parameters::Motor Control::Ramp	REAL	0.1	0.0 to 100.0	%	ALWAYS	TECHNICIAN		01537
0506	Zero Speed Stop Delay	Parameters::Motor Control::Ramp	TIME	0.500	0.000 to 30.000	s	ALWAYS	TECHNICIAN		01539
0507	Quickstop Time Limit	Parameters::Motor Control::Ramp	TIME	30.000	0.000 to 3000.000	s	ALWAYS	TECHNICIAN		01541

# Parameter Reference D-219

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
0508	Quickstop Ramp Time	Parameters::Motor Control::Ramp	TIME	0.100	0.000 to 600.000	s	ALWAYS	TECHNICIAN		01543
0509	Final Stop Rate	Parameters::Motor Control::Ramp	REAL	1200	1 to 4800	Hz/s	ALWAYS	TECHNICIAN		01545
0511	Motor Type or AFE	Setup::Motor Control::Control and Type Setup::Regen Control Parameters::Control Mode::Control Mode	USINT (enum)	0	0:INDUCTION MOTOR 1:PMAC MOTOR 2:AFE		STOPPED	TECHNICIAN	6	01549
0512	Control Strategy	Setup::Motor Control::Control and Type Parameters::Control Mode::Control Mode	USINT (enum)	0	0:VOLTS - HERTZ CONTROL 1:VECTOR CONTROL		STOPPED	TECHNICIAN	6	01551
0513	Active 33 - 64	Monitor::Trips Parameters::Trips::Trips Status	DWORD				NEVER	OPERATOR		01553
0514	Warnings 33 - 64	Same as PNO 513	DWORD				NEVER	OPERATOR		01555
0515	Speed Loop Pgain	Parameters::Motor Control::Spd Loop Settings	REAL	20.00	0.00 to 3000.00		ALWAYS	TECHNICIAN		01557
0516	Speed Loop I Time	Parameters::Motor Control::Spd Loop Settings	TIME	0.100	0.001 to 1.500	s	ALWAYS	TECHNICIAN		01559
0517	Speed Loop Int Defeat	Parameters::Motor Control::Spd Loop Settings	BOOL	FALSE			ALWAYS	TECHNICIAN		01561
0518	Speed Loop Int Preset	Parameters::Motor Control::Spd Loop Settings	REAL	0	-600 to 600		ALWAYS	TECHNICIAN		01563
0519	Spd Loop Dmd Filt TC	Parameters::Motor Control::Spd Loop Settings	REAL	0.0	0.0 to 15.0	ms	ALWAYS	TECHNICIAN		01565
0520	Spd Loop Fbk Filt TC	Parameters::Motor Control::Spd Loop Settings	REAL	1.0	0.0 to 15.0	ms	ALWAYS	TECHNICIAN		01567
0521	Spd Loop Aux Torq Dmd	Parameters::Motor Control::Spd Loop Settings	REAL	0.00	-600.00 to 600.00	%	ALWAYS	TECHNICIAN		01569
0523	Spd Loop Adapt Thres	Parameters::Motor Control::Spd Loop Settings	REAL	0.00	0.00 to 10.00	%	ALWAYS	TECHNICIAN		01573
0524	Spd Loop Adapt Pgain	Parameters::Motor Control::Spd Loop Settings	REAL	20.00	0.00 to 300.00		ALWAYS	TECHNICIAN		01575
0525	Spd Demand Pos Lim	Parameters::Motor Control::Spd Loop Settings	REAL	110.00	-110.00 to 110.00	%	ALWAYS	TECHNICIAN		01577
0526	Spd Demand Neg Lim	Parameters::Motor Control::Spd Loop Settings	REAL	-110.00	-110.00 to 110.00	%	ALWAYS	TECHNICIAN		01579
0527	Sel Torq Ctrl Only	Parameters::Motor Control::Spd Loop Settings	BOOL	FALSE			ALWAYS	TECHNICIAN		01581
0528	Direct Input Select	Parameters::Motor Control::Spd Direct Input	USINT (enum)	0	0:NONE 1:ANIN1 2:ANIN2		ALWAYS	TECHNICIAN		01583
0529	Direct Input Ratio	Parameters::Motor Control::Spd Direct Input	REAL	1.0000	-10.0000 to 10.0000		ALWAYS	TECHNICIAN		01585
0530	Direct Input Pos Lim	Parameters::Motor Control::Spd Direct Input	REAL	110.00	-600.00 to 600.00	%	ALWAYS	TECHNICIAN		01587
0531	Direct Input Neg Lim	Parameters::Motor Control::Spd Direct Input	REAL	-110.00	-600.00 to 600.00	%	ALWAYS	TECHNICIAN		01589
0533	Total Spd Demand RPM	Parameters::Motor Control::Spd Loop Diagnostics	REAL	x.xx	-100000.00 to 100000.00	RPM	NEVER	TECHNICIAN		01593
0534	Total Spd Demand %	Parameters::Motor Control::Spd Loop Diagnostics	REAL	x.xx	-200.00 to 200.00	%	NEVER	TECHNICIAN		01595
0535	Speed Loop Error	Parameters::Motor Control::Spd Loop Diagnostics	REAL	x.xx	-600.00 to 600.00	%	NEVER	TECHNICIAN		01597
0536	Speed PI Output	Parameters::Motor Control::Spd Loop Diagnostics	REAL	x.xx	-600.00 to 600.00	%	NEVER	TECHNICIAN		01599
0543	Power Stack Fitted	Parameters::Device Manager::Drive Info	USINT (enum)		0:NONE 1:3.5 A 400 V 2:4.5 A 400 V 3:5.5 A 400 V 4:7.5 A 400 V 5:10.0 A 400 V 6:12.0 A 400 V 7:16.0 A 400 V 8:23.0 A 400 V 9:32.0 A 400 V 10:38.0 A 400 V 11:45.0 A 400 V R1 12:60.0 A 400 V R1 13:73.0 A 400 V R1 14:87.0 A 400 V 15:105 A 400 V 16:145 A 400 V 17:180 A 400 V 18:205 A 400 V 19:260 A 400 V 20:45.0 A 400 V 21:60.0 A 400 V 22:73.0 A 400 V 23:315 A 400 V 24:380 A 400 V 25:440 A 400 V 26:530 A 400 V 27:590 A 400 V 28:650 A 400 V 29:730 A 400 V 30:840 A 400 V		NEVER	TECHNICIAN		01613
0555	PMAC Max Speed	Setup::Motor Control::Motor Data PMAC Parameters::Motor Control::PMAC Motor Data	REAL	3000	0 to 100000	RPM	ALWAYS	TECHNICIAN	6	01637
0556	PMAC Max Current	Same as PNO 555	REAL	4.50	0.00 to 5000.00	A	ALWAYS	TECHNICIAN	6	01639
0557	PMAC Rated Current	Same as PNO 555	REAL	4.50	0.00 to 5000.00	A	ALWAYS	TECHNICIAN	6	01641

# D-220 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
0558	PMAC Rated Torque	Same as PNO 555	REAL	4.50	0.00 to 30000.00	Nm	ALWAYS	TECHNICIAN	6	01643
0559	PMAC Motor Poles	Same as PNO 555	UINT	10	0 to 400		ALWAYS	TECHNICIAN	6	01645
0560	PMAC Back Emf Const KE	Same as PNO 555	REAL	60.0	0.0 to 30000.0	V	ALWAYS	TECHNICIAN	6	01647
0561	PMAC Winding Resistance	Same as PNO 555	REAL	6.580	0.000 to 50.000	Ohm	ALWAYS	TECHNICIAN	6	01649
0562	PMAC Winding Inductance	Same as PNO 555	REAL	20.00	0.00 to 1000.00	mH	ALWAYS	TECHNICIAN	6	01651
0563	PMAC Torque Const KT	Same as PNO 555	REAL	1.00	0.00 to 10000.00	Nm/A	ALWAYS	TECHNICIAN	6	01653
0564	PMAC Motor Inertia	Same as PNO 555	REAL	0.00100	0.00000 to 100.00000	kgm <sup>2</sup>	ALWAYS	TECHNICIAN	6	01655
0565	PMAC Therm Time Const	Same as PNO 555	TIME	62.000	0.000 to 10000.000	s	ALWAYS	TECHNICIAN	6	01657
0568	Magnetising Current	Parameters::Motor Control::Induction Motor Data	REAL	1.00	0.00 to 10000.00	A	ALWAYS	ENGINEER	6	01663
0569	Rotor Time Constant	Parameters::Motor Control::Induction Motor Data	TIME	0.100	0.005 to 100.000	s	ALWAYS	ENGINEER	6	01665
0570	Leakage Inductance	Parameters::Motor Control::Induction Motor Data	REAL	1.000	0.000 to 1000.000	mH	ALWAYS	ENGINEER	6	01667
0571	Stator Resistance	Parameters::Motor Control::Induction Motor Data	REAL	0.0000	0.0000 to 100.0000	Ohm	ALWAYS	ENGINEER	6	01669
0572	Mutual Inductance	Parameters::Motor Control::Induction Motor Data	REAL	100.00	0.00 to 10000.00	mH	ALWAYS	ENGINEER	6	01671
0591	Local	Parameters::Motor Control::Sequencing	BOOL	FALSE			STOPPED	TECHNICIAN		01709
0592	Local Reference	Parameters::Motor Control::Sequencing	REAL	0.00	0.00 to 100.00	%	ALWAYS	OPERATOR		01711
0610	App Control Word	Parameters::Motor Control::Sequencing	WORD (bitfield)	0000	0:SWITCH ON 1:ENABLE VOLTAGE 2:NOT QUICKSTOP 3:ENABLE OPERATION 7:RESET FAULT 8:EXTERNAL FAULT 12:USE JOG REFERENCE 13:REVERSE DIRECTION 14:AUTO INITIALISE 15:EVENT TRIGGERED OP		ALWAYS	ENGINEER	2	01747
0611	App Control Word.SWITCH ON	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	ENGINEER	2	01749
0612	App Control Word.ENABLE VOLTAGE	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	ENGINEER	2	01751
0613	App Control Word.NOT QUICKSTOP	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	ENGINEER	2	01753
0614	App Control Word.ENABLE OPERATION	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	ENGINEER	2	01755
0618	App Control Word.RESET FAULT	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	ENGINEER	2	01763
0619	App Control Word.EXTERNAL FAULT	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	ENGINEER	2	01765
0623	App Control Word.USE JOG REFERENCE	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	ENGINEER	2	01773
0624	App Control Word.REVERSE DIRECTION	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	ENGINEER	2	01775
0625	App Control Word.AUTO INITIALISE	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	ENGINEER	2	01777
0626	App Control Word.EVENT TRIGGERED OP	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	ENGINEER	2	01779
0627	Comms Control Word	Parameters::Motor Control::Sequencing	WORD (bitfield)	0000	0:SWITCH ON 1:ENABLE VOLTAGE 2:NOT QUICKSTOP 3:ENABLE OPERATION 7:RESET FAULT 8:EXTERNAL FAULT 10:USE COMMS CONTROL 11:USE COMMS REFERENCE 12:USE JOG REFERENCE 13:REVERSE DIRECTION 14:AUTO INITIALISE 15:EVENT TRIGGERED OP		ALWAYS	TECHNICIAN	2	01781
0628	Comms Control Word.SWITCH ON	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	TECHNICIAN	2	01783
0629	Comms Control Word.ENABLE VOLTAGE	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	TECHNICIAN	2	01785
0630	Comms Control Word.NOT QUICKSTOP	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	TECHNICIAN	2	01787
0631	Comms Control Word.ENABLE OPERATION	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	TECHNICIAN	2	01789
0635	Comms Control Word.RESET FAULT	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	TECHNICIAN	2	01797
0636	Comms Control Word.EXTERNAL FAULT	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	TECHNICIAN	2	01799
0638	Comms Control Word.USE COMMS CONTROL	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	TECHNICIAN	2	01803
0639	Comms Control Word.USE COMMS REFERENCE	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	TECHNICIAN	2	01805
0640	Comms Control Word.USE JOG REFERENCE	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	TECHNICIAN	2	01807
0641	Comms Control Word.REVERSE DIRECTION	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	TECHNICIAN	2	01809
0642	Comms Control Word.AUTO INITIALISE	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	TECHNICIAN	2	01811
0643	Comms Control Word.EVENT TRIGGERED OP	Parameters::Motor Control::Sequencing	BOOL	FALSE			ALWAYS	TECHNICIAN	2	01813
0644	Control Word	Parameters::Motor Control::Sequencing	WORD (bitfield)		0:SWITCH ON 1:ENABLE VOLTAGE 2:NOT QUICKSTOP 3:ENABLE OPERATION 7:RESET FAULT 8:EXTERNAL FAULT 10:USE COMMS CONTROL		NEVER	TECHNICIAN		01815

# Parameter Reference D-221

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	MBus
					11:USE COMMS REFERENCE 12:USE JOG REFERENCE 13:REVERSE DIRECTION 14:AUTO INITIALISE 15:EVENT TRIGGERED OP					
0645	Control Word.SWITCH ON	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01817
0646	Control Word.ENABLE VOLTAGE	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01819
0647	Control Word.NOT QUICKSTOP	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01821
0648	Control Word.ENABLE OPERATION	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01823
0652	Control Word.RESET FAULT	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01831
0653	Control Word.EXTERNAL FAULT	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01833
0655	Control Word.USE COMMS CONTROL	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01837
0656	Control Word.USE COMMS REFERENCE	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01839
0657	Control Word.USE JOG REFERENCE	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01841
0658	Control Word.REVERSE DIRECTION	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01843
0659	Control Word.AUTO INITIALISE	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01845
0660	Control Word.EVENT TRIGGERED OP	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01847
0661	Status Word	Parameters::Motor Control::Sequencing	WORD (bitfield)		0:READY TO SWITCH ON 1:SWITCHED ON 2:OPERATION ENABLED 3:FAULTED 4:VOLTAGE ENABLED 5:QUICKSTOP INACTIVE 6:SWITCH ON DISABLED 9:CONTROL FROM COMMS 12:JOG OPERATION 13:REVERSE OPERATION 14:REFERENCE FROM COMMS 15:STOPPING		NEVER	TECHNICIAN		01849
0662	Status Word.READY TO SWITCH ON	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01851
0663	Status Word.SWITCHED ON	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01853
0664	Status Word.OPERATION ENABLED	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01855
0665	Status Word.FAULTED	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01857
0666	Status Word.VOLTAGE ENABLED	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01859
0667	Status Word.QUICKSTOP INACTIVE	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01861
0668	Status Word.SWITCH ON DISABLED	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01863
0671	Status Word.CONTROL FROM COMMS	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01869
0674	Status Word.JOG OPERATION	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01875
0675	Status Word.REVERSE OPERATION	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01877
0676	Status Word.REFERENCE FROM COMMS	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01879
0677	Status Word.STOPPING	Parameters::Motor Control::Sequencing	BOOL				NEVER	TECHNICIAN		01881
0678	Sequencing State	Parameters::Motor Control::Sequencing	USINT (enum)		0:NOT READY TO SWITCH ON 1:SWITCH ON DISABLED 2:READY TO SWITCH ON 3:SWITCHED ON 4:OPERATION ENABLED 5:QUICKSTOP ACTIVE 6:FAULT REACTION ACTIVE 7:FAULTED		NEVER	TECHNICIAN		01883
0679	Switch On Timeout	Parameters::Motor Control::Sequencing	TIME	0.000	0.000 to 100.000	s	ALWAYS	TECHNICIAN		01885
0680	App Reference	Parameters::Motor Control::Sequencing	REAL	0.00	-110.00 to 110.00	%	ALWAYS	TECHNICIAN		01887
0681	Comms Reference	Parameters::Motor Control::Sequencing	REAL	0.00	-110.00 to 110.00	%	ALWAYS	TECHNICIAN		01889
0682	Reference	Parameters::Motor Control::Sequencing	REAL	x.xx	-110.00 to 110.00	%	NEVER	OPERATOR		01891
0686	Anout 01 Scale	Setup::Inputs and Outputs::Base IO Parameters::Inputs And Outputs::IO Configure	REAL	1.0000	Min to Max		ALWAYS	OPERATOR		01899
0687	Boot Version Number	Parameters::Device Manager::Drive info	WORD				NEVER	ENGINEER		01901
0688	Drive Diagnostic	Parameters::Device Manager::Drive info	USINT (enum)		0:OK 1:STACK NOT CONNECTED 2:STACK DATA CORRUPT 3:UNKNOWN STACK 4:STACK MISMATCH		NEVER	OPERATOR		01903
0689	PMAC Flycatching Enable	Parameters::Motor Control::PMAC Flycatching	BOOL	FALSE			ALWAYS	TECHNICIAN		01905
0690	PMAC Fly Search Mode	Parameters::Motor Control::PMAC Flycatching	USINT (enum)	0	Same as PNO 312		ALWAYS	TECHNICIAN		01907
0691	PMAC Fly Search Time	Parameters::Motor Control::PMAC Flycatching	TIME	0.200	0.100 to 60.000	s	ALWAYS	TECHNICIAN		01909
0692	PMAC Fly Load Level	Parameters::Motor Control::PMAC Flycatching	REAL	5.0	-50.0 to 50.0	%	ALWAYS	TECHNICIAN		01911
0693	PMAC Fly Active	Parameters::Motor Control::PMAC Flycatching	BOOL				NEVER	TECHNICIAN		01913

# D-222 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
0694	PMAC Fly Setpoint	Parameters::Motor Control::PMAC Flycatching	REAL	x.	-1000 to 1000	Hz	NEVER	TECHNICIAN		01915
0695	Attached to Stack	Parameters::Device Manager::Drive info	BOOL				NEVER	ENGINEER		01917
0696	First Trip	Monitor::Trips Parameters::Trips::Trips Status	USINT (enum)		0:NONE 1:01 OVER VOLTAGE 2:02 UNDER VOLTAGE 3:03 OVER CURRENT 4:04 STACK FAULT 5:05 STACK OVER CURRENT 6:06 CURRENT LIMIT 7:07 MOTOR STALL 8:08 INVERSE TIME 9:09 MOTOR I2T 10:10 LOW SPEED I 11:11 HEATSINK OVERTEMP 12:12 INTERNAL OVERTEMP 13:13 MOTOR OVERTEMP 14:14 EXTERNAL TRIP 15:15 BRAKE SHORT CCT 16:16 BRAKE RESISTOR 17:17 BRAKE SWITCH 18:18 LOCAL CONTROL 19:19 COMMS BREAK 20:20 LINE CONTACTOR 21:21 PHASE FAIL 22:22 VDC RIPPLE 23:23 BASE MODBUS BREAK 24:24 24 V OVERLOAD 25:25 PMAC SPEED ERROR 26:26 OVERSPEED 27:27 STO ACTIVE 28:28 FEEDBACK MISSING 29:29 INTERNAL FAN FAIL 30:30 CURRENT SENSOR 31:31 POWER LOSS STOP 32:32 SPEED SENSOR 33:33 A1 34:34 A2 35:35 A3 36:36 A4 37:37 A5 38:38 A6 39:39 A7 40:40 A8 41:41 SPEED ERROR 42:42 PEERTOPEER OVERRUN 43:43 PHASE CONFIG 44:44 ETHERNET IP BREAK 45:45 RESOLVER ERROR 46:46 PMAC ALIGN ERROR 47:47 CURRENT IMBALANCE		NEVER	OPERATOR		01919
0697	Enable 1 - 32	Parameters::Trips::Trips Status	DWORD (bitfield)	FFFFFFF7F	5:06 CURRENT LIMIT 6:07 MOTOR STALL 7:08 INVERSE TIME 8:09 MOTOR I2T 9:10 LOW SPEED I 11:12 INTERNAL OVERTEMP 12:13 MOTOR OVERTEMP 13:14 EXTERNAL TRIP 14:15 BRAKE SHORT CCT 15:16 BRAKE RESISTOR 16:17 BRAKE SWITCH 17:18 LOCAL CONTROL 18:19 COMMS BREAK 19:20 LINE CONTACTOR 20:21 PHASE FAIL 21:22 VDC RIPPLE 22:23 BASE MODBUS BREAK 23:24 24 V OVERLOAD 24:25 PMAC SPEED ERROR		ALWAYS	TECHNICIAN		01921

# Parameter Reference D-223

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	MBus
					25:26 OVERSPEED 28:29 INTERNAL FAN FAIL 29:30 CURRENT SENSOR 30:31 POWER LOSS STOP 31:32 SPEED SENSOR					
0703	Enable 1 - 32.06 CURRENT LIMIT	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01933
0704	Enable 1 - 32.07 MOTOR STALL	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01935
0705	Enable 1 - 32.08 INVERSE TIME	Parameters::Trips::Trips Status	BOOL	FALSE			ALWAYS	TECHNICIAN		01937
0706	Enable 1 - 32.09 MOTOR I2T	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01939
0707	Enable 1 - 32.10 LOW SPEED I	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01941
0709	Enable 1 - 32.12 INTERNAL OVERTEMP	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01945
0710	Enable 1 - 32.13 MOTOR OVERTEMP	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01947
0711	Enable 1 - 32.14 EXTERNAL TRIP	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01949
0712	Enable 1 - 32.15 BRAKE SHORT CCT	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01951
0713	Enable 1 - 32.16 BRAKE RESISTOR	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01953
0714	Enable 1 - 32.17 BRAKE SWITCH	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01955
0715	Enable 1 - 32.18 LOCAL CONTROL	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01957
0716	Enable 1 - 32.19 COMMS BREAK	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01959
0717	Enable 1 - 32.20 LINE CONTACTOR	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01961
0718	Enable 1 - 32.21 PHASE FAIL	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01963
0719	Enable 1 - 32.22 VDC RIPPLE	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01965
0720	Enable 1 - 32.23 BASE MODBUS BREAK	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01967
0721	Enable 1 - 32.24 24 V OVERLOAD	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01969
0722	Enable 1 - 32.25 PMAC SPEED ERROR	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01971
0723	Enable 1 - 32.26 OVERSPEED	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01973
0726	Enable 1 - 32.29 INTERNAL FAN FAIL	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01979
0727	Enable 1 - 32.30 CURRENT SENSOR	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01981
0728	Enable 1 - 32.31 POWER LOSS STOP	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01983
0729	Enable 1 - 32.32 SPEED SENSOR	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01985
0730	Enable 33 - 64	Parameters::Trips::Trips Status	DWORD (bitfield)	FFFFFFFF	0:33 A1 1:34 A2 2:35 A3 3:36 A4 4:37 A5 5:38 A6 6:39 A7 7:40 A8 8:41 SPEED ERROR 9:42 PEERTOPEER OVERRUN 10:43 PHASE CONFIG 11:44 ETHERNET IP BREAK 14:47 CURRENT IMBALANCE		ALWAYS	TECHNICIAN		01987
0731	Enable 33 - 64.33 A1	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01989
0732	Enable 33 - 64.34 A2	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01991
0733	Enable 33 - 64.35 A3	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01993
0734	Enable 33 - 64.36 A4	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01995
0735	Enable 33 - 64.37 A5	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01997
0736	Enable 33 - 64.38 A6	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		01999
0737	Enable 33 - 64.39 A7	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		02001
0738	Enable 33 - 64.40 A8	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		02003
0739	Enable 33 - 64.41 SPEED ERROR	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		02005
0740	Enable 33 - 64.42 PEERTOPEER OVERRUN	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		02007
0741	Enable 33 - 64.43 PHASE CONFIG	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		02009
0742	Enable 33 - 64.44 ETHERNET IP BREAK	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		02011
0745	Enable 33 - 64.47 CURRENT IMBALANCE	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	TECHNICIAN		02017
0763	Active 1 - 32	Monitor::Trips Parameters::Trips::Trips Status	DWORD (bitfield)		0:01 OVER VOLTAGE 1:02 UNDER VOLTAGE 2:03 OVER CURRENT 3:04 STACK FAULT 4:05 STACK OVER CURRENT 5:06 CURRENT LIMIT 6:07 MOTOR STALL 7:08 INVERSE TIME 8:09 MOTOR I2T 9:10 LOW SPEED I 10:11 HEATSINK OVERTEMP 11:12 INTERNAL OVERTEMP		NEVER	OPERATOR		02053

# D-224 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	MBus
					12:13 MOTOR OVERTEMP 13:14 EXTERNAL TRIP 14:15 BRAKE SHORT CCT 15:16 BRAKE RESISTOR 16:17 BRAKE SWITCH 17:18 LOCAL CONTROL 18:19 COMMS BREAK 19:20 LINE CONTACTOR 20:21 PHASE FAIL 21:22 VDC RIPPLE 22:23 BASE MODBUS BREAK 23:24 24 V OVERLOAD 24:25 PMAC SPEED ERROR 25:26 OVERSPEED 26:27 STO ACTIVE 27:28 FEEDBACK MISSING 28:29 INTERNAL FAN FAIL 29:30 CURRENT SENSOR 30:31 POWER LOSS STOP 31:32 SPEED SENSOR					
0764	Active 1 - 32.01 OVER VOLTAGE	Same as PNO 763	BOOL				NEVER	OPERATOR		02055
0765	Active 1 - 32.02 UNDER VOLTAGE	Same as PNO 763	BOOL				NEVER	OPERATOR		02057
0766	Active 1 - 32.03 OVER CURRENT	Same as PNO 763	BOOL				NEVER	OPERATOR		02059
0767	Active 1 - 32.04 STACK FAULT	Same as PNO 763	BOOL				NEVER	OPERATOR		02061
0768	Active 1 - 32.05 STACK OVER CURRENT	Same as PNO 763	BOOL				NEVER	OPERATOR		02063
0769	Active 1 - 32.06 CURRENT LIMIT	Same as PNO 763	BOOL				NEVER	OPERATOR		02065
0770	Active 1 - 32.07 MOTOR STALL	Same as PNO 763	BOOL				NEVER	OPERATOR		02067
0771	Active 1 - 32.08 INVERSE TIME	Same as PNO 763	BOOL				NEVER	OPERATOR		02069
0772	Active 1 - 32.09 MOTOR I2T	Same as PNO 763	BOOL				NEVER	OPERATOR		02071
0773	Active 1 - 32.10 LOW SPEED I	Same as PNO 763	BOOL				NEVER	OPERATOR		02073
0774	Active 1 - 32.11 HEATSINK OVERTEMP	Same as PNO 763	BOOL				NEVER	OPERATOR		02075
0775	Active 1 - 32.12 INTERNAL OVERTEMP	Same as PNO 763	BOOL				NEVER	OPERATOR		02077
0776	Active 1 - 32.13 MOTOR OVERTEMP	Same as PNO 763	BOOL				NEVER	OPERATOR		02079
0777	Active 1 - 32.14 EXTERNAL TRIP	Same as PNO 763	BOOL				NEVER	OPERATOR		02081
0778	Active 1 - 32.15 BRAKE SHORT CCT	Same as PNO 763	BOOL				NEVER	OPERATOR		02083
0779	Active 1 - 32.16 BRAKE RESISTOR	Same as PNO 763	BOOL				NEVER	OPERATOR		02085
0780	Active 1 - 32.17 BRAKE SWITCH	Same as PNO 763	BOOL				NEVER	OPERATOR		02087
0781	Active 1 - 32.18 LOCAL CONTROL	Same as PNO 763	BOOL				NEVER	OPERATOR		02089
0782	Active 1 - 32.19 COMMS BREAK	Same as PNO 763	BOOL				NEVER	OPERATOR		02091
0783	Active 1 - 32.20 LINE CONTACTOR	Same as PNO 763	BOOL				NEVER	OPERATOR		02093
0784	Active 1 - 32.21 PHASE FAIL	Same as PNO 763	BOOL				NEVER	OPERATOR		02095
0785	Active 1 - 32.22 VDC RIPPLE	Same as PNO 763	BOOL				NEVER	OPERATOR		02097
0786	Active 1 - 32.23 BASE MODBUS BREAK	Same as PNO 763	BOOL				NEVER	OPERATOR		02099
0787	Active 1 - 32.24 24 V OVERLOAD	Same as PNO 763	BOOL				NEVER	OPERATOR		02101
0788	Active 1 - 32.25 PMAC SPEED ERROR	Same as PNO 763	BOOL				NEVER	OPERATOR		02103
0789	Active 1 - 32.26 OVERSPEED	Same as PNO 763	BOOL				NEVER	OPERATOR		02105
0790	Active 1 - 32.27 STO ACTIVE	Same as PNO 763	BOOL				NEVER	OPERATOR		02107
0791	Active 1 - 32.28 FEEDBACK MISSING	Same as PNO 763	BOOL				NEVER	OPERATOR		02109
0792	Active 1 - 32.29 INTERNAL FAN FAIL	Same as PNO 763	BOOL				NEVER	OPERATOR		02111
0793	Active 1 - 32.30 CURRENT SENSOR	Same as PNO 763	BOOL				NEVER	OPERATOR		02113
0794	Active 1 - 32.31 POWER LOSS STOP	Same as PNO 763	BOOL				NEVER	OPERATOR		02115
0795	Active 1 - 32.32 SPEED SENSOR	Same as PNO 763	BOOL				NEVER	OPERATOR		02117
0796	AR Trip Mask 2	Setup::Motor Control::Auto Restart Parameters::Motor Control::Auto Restart	DWORD (bitfield)	FFFFFFFF	0:33 A1 1:34 A2 2:35 A3 3:36 A4 4:37 A5 5:38 A6 6:39 A7 7:40 A8 8:41 SPEED ERROR 9:42 PEERTOPEER OVERRUN 10:43 PHASE CONFIG 11:44 ETHERNET IP BREAK		ALWAYS	TECHNICIAN		02119
0797	AR Trip Mask 2.33 A1	Same as PNO 796	BOOL	TRUE			ALWAYS	TECHNICIAN		02121
0798	AR Trip Mask 2.34 A2	Same as PNO 796	BOOL	TRUE			ALWAYS	TECHNICIAN		02123



# Parameter Reference D-225

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	MBus
0799	AR Trip Mask 2.35 A3	Same as PNO 796	BOOL	TRUE			ALWAYS	TECHNICIAN		02125
0800	AR Trip Mask 2.36 A4	Same as PNO 796	BOOL	TRUE			ALWAYS	TECHNICIAN		02127
0801	AR Trip Mask 2.37 A5	Same as PNO 796	BOOL	TRUE			ALWAYS	TECHNICIAN		02129
0802	AR Trip Mask 2.38 A6	Same as PNO 796	BOOL	TRUE			ALWAYS	TECHNICIAN		02131
0803	AR Trip Mask 2.39 A7	Same as PNO 796	BOOL	TRUE			ALWAYS	TECHNICIAN		02133
0804	AR Trip Mask 2.40 A8	Same as PNO 796	BOOL	TRUE			ALWAYS	TECHNICIAN		02135
0805	AR Trip Mask 2.41 SPEED ERROR	Same as PNO 796	BOOL	TRUE			ALWAYS	TECHNICIAN		02137
0806	AR Trip Mask 2.42 PEERTOPEER OVERRUN	Same as PNO 796	BOOL	TRUE			ALWAYS	TECHNICIAN		02139
0807	AR Trip Mask 2.43 PHASE CONFIG	Same as PNO 796	BOOL	TRUE			ALWAYS	TECHNICIAN		02141
0808	AR Trip Mask 2.44 ETHERNET IP BREAK	Same as PNO 796	BOOL	TRUE			ALWAYS	TECHNICIAN		02143
0829	Warnings 1 - 32	Monitor::Trips Parameters::Trips::Trips Status	DWORD (bitfield)				NEVER	OPERATOR		02185
0830	Warnings 1 - 32.01 OVER VOLTAGE	Same as PNO 829	BOOL				NEVER	OPERATOR		02187
0831	Warnings 1 - 32.02 UNDER VOLTAGE	Same as PNO 829	BOOL				NEVER	OPERATOR		02189
0832	Warnings 1 - 32.03 OVER CURRENT	Same as PNO 829	BOOL				NEVER	OPERATOR		02191
0833	Warnings 1 - 32.04 STACK FAULT	Same as PNO 829	BOOL				NEVER	OPERATOR		02193
0834	Warnings 1 - 32.05 STACK OVER CURRENT	Same as PNO 829	BOOL				NEVER	OPERATOR		02195
0835	Warnings 1 - 32.06 CURRENT LIMIT	Same as PNO 829	BOOL				NEVER	OPERATOR		02197
0836	Warnings 1 - 32.07 MOTOR STALL	Same as PNO 829	BOOL				NEVER	OPERATOR		02199
0837	Warnings 1 - 32.08 INVERSE TIME	Same as PNO 829	BOOL				NEVER	OPERATOR		02201
0838	Warnings 1 - 32.09 MOTOR I2T	Same as PNO 829	BOOL				NEVER	OPERATOR		02203
0839	Warnings 1 - 32.10 LOW SPEED I	Same as PNO 829	BOOL				NEVER	OPERATOR		02205
0840	Warnings 1 - 32.11 HEATSINK OVERTEMP	Same as PNO 829	BOOL				NEVER	OPERATOR		02207
0841	Warnings 1 - 32.12 INTERNAL OVERTEMP	Same as PNO 829	BOOL				NEVER	OPERATOR		02209
0842	Warnings 1 - 32.13 MOTOR OVERTEMP	Same as PNO 829	BOOL				NEVER	OPERATOR		02211
0843	Warnings 1 - 32.14 EXTERNAL TRIP	Same as PNO 829	BOOL				NEVER	OPERATOR		02213
0844	Warnings 1 - 32.15 BRAKE SHORT CCT	Same as PNO 829	BOOL				NEVER	OPERATOR		02215
0845	Warnings 1 - 32.16 BRAKE RESISTOR	Same as PNO 829	BOOL				NEVER	OPERATOR		02217
0846	Warnings 1 - 32.17 BRAKE SWITCH	Same as PNO 829	BOOL				NEVER	OPERATOR		02219
0847	Warnings 1 - 32.18 LOCAL CONTROL	Same as PNO 829	BOOL				NEVER	OPERATOR		02221
0848	Warnings 1 - 32.19 COMMS BREAK	Same as PNO 829	BOOL				NEVER	OPERATOR		02223
0849	Warnings 1 - 32.20 LINE CONTACTOR	Same as PNO 829	BOOL				NEVER	OPERATOR		02225
0850	Warnings 1 - 32.21 PHASE FAIL	Same as PNO 829	BOOL				NEVER	OPERATOR		02227
0851	Warnings 1 - 32.22 VDC RIPPLE	Same as PNO 829	BOOL				NEVER	OPERATOR		02229
0852	Warnings 1 - 32.23 BASE MODBUS BREAK	Same as PNO 829	BOOL				NEVER	OPERATOR		02231
0853	Warnings 1 - 32.24 24 V OVERLOAD	Same as PNO 829	BOOL				NEVER	OPERATOR		02233
0854	Warnings 1 - 32.25 PMAC SPEED ERROR	Same as PNO 829	BOOL				NEVER	OPERATOR		02235

# D-226 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
0855	Warnings 1 - 32.26 OVERSPEED	Same as PNO 829	BOOL				NEVER	OPERATOR		02237
0856	Warnings 1 - 32.27 STO ACTIVE	Same as PNO 829	BOOL				NEVER	OPERATOR		02239
0857	Warnings 1 - 32.28 FEEDBACK MISSING	Same as PNO 829	BOOL				NEVER	OPERATOR		02241
0858	Warnings 1 - 32.29 INTERNAL FAN FAIL	Same as PNO 829	BOOL				NEVER	OPERATOR		02243
0859	Warnings 1 - 32.30 CURRENT SENSOR	Same as PNO 829	BOOL				NEVER	OPERATOR		02245
0860	Warnings 1 - 32.31 POWER LOSS STOP	Same as PNO 829	BOOL				NEVER	OPERATOR		02247
0861	Warnings 1 - 32.32 SPEED SENSOR	Same as PNO 829	BOOL				NEVER	OPERATOR		02249
0895	Recent Trips	Parameters::Trips::Trips History	ARRAY[0..9]				NEVER	OPERATOR		02317
0896	Recent Trips[0]	Parameters::Trips::Trips History	USINT (enum)		Same as PNO 696		NEVER	OPERATOR	1	02319
0897	Recent Trips[1]	Parameters::Trips::Trips History	USINT (enum)		Same as PNO 696		NEVER	OPERATOR	1	02321
0898	Recent Trips[2]	Parameters::Trips::Trips History	USINT (enum)		Same as PNO 696		NEVER	OPERATOR	1	02323
0899	Recent Trips[3]	Parameters::Trips::Trips History	USINT (enum)		Same as PNO 696		NEVER	OPERATOR	1	02325
0900	Recent Trips[4]	Parameters::Trips::Trips History	USINT (enum)		Same as PNO 696		NEVER	OPERATOR	1	02327
0901	Recent Trips[5]	Parameters::Trips::Trips History	USINT (enum)		Same as PNO 696		NEVER	OPERATOR	1	02329
0902	Recent Trips[6]	Parameters::Trips::Trips History	USINT (enum)		Same as PNO 696		NEVER	OPERATOR	1	02331
0903	Recent Trips[7]	Parameters::Trips::Trips History	USINT (enum)		Same as PNO 696		NEVER	OPERATOR	1	02333
0904	Recent Trips[8]	Parameters::Trips::Trips History	USINT (enum)		Same as PNO 696		NEVER	OPERATOR	1	02335
0905	Recent Trips[9]	Parameters::Trips::Trips History	USINT (enum)		Same as PNO 696		NEVER	OPERATOR	1	02337
0906	Stall Limit Type	Parameters::Trips::Stall Trip	USINT (enum)	2	0:TORQUE 1:CURRENT 2:TORQUE OR CURRENT		ALWAYS	TECHNICIAN		02339
0907	Stall Time	Parameters::Trips::Stall Trip	TIME	120.000	0.100 to 2000.000	s	ALWAYS	TECHNICIAN	6	02341
0908	Control Screen Mode	Parameters::Device Manager::Soft Menus	USINT (enum)	1	0:DISABLED 1:AUTO 2:CUSTOM		STOPPED	ENGINEER		02343
0909	Stall Torque Active	Parameters::Trips::Stall Trip	BOOL				NEVER	TECHNICIAN		02345
0910	Stall Current Active	Parameters::Trips::Stall Trip	BOOL				NEVER	TECHNICIAN		02347
0911	Stall Speed Feedback	Parameters::Trips::Stall Trip	REAL	x.	-200 to 200	%	NEVER	ENGINEER		02349
0912	VDC Ripple Filter TC	Parameters::Trips::VDC Ripple	TIME	1.000	0.100 to 100.000	s	ALWAYS	ENGINEER		02351
0913	Max VDC Ripple	Parameters::Trips::VDC Ripple	REAL	x.	0 to 500	V	NEVER	ENGINEER		02353
0914	VDC Ripple Trip Delay	Parameters::Trips::VDC Ripple	TIME		0.000 to 300.000	s	NEVER	ENGINEER		02355
0915	VDC Ripple Trip Hyst	Parameters::Trips::VDC Ripple	REAL	10	0 to 50	V	ALWAYS	ENGINEER		02357
0916	VDC Ripple Sample	Parameters::Trips::VDC Ripple	TIME	0.009	0.001 to 0.100	s	ALWAYS	ENGINEER		02359
0917	VDC Ripple Level	Parameters::Trips::VDC Ripple	REAL	x.	0 to 500	V	NEVER	ENGINEER		02361
0918	Filtered VDC Ripple	Parameters::Trips::VDC Ripple	REAL	x.	0 to 500	V	NEVER	ENGINEER		02363
0919	Ethernet State	Monitor::Communications::Base Ethernet Parameters::Base Comms::Ethernet	USINT (enum)		0:INITIALISING 1:NO LINK 2:RESOLVING IP 3:RESOLVING DHCP 4:RESOLVING AUTO 5:RESOLVED IP 6:STOPPING DHCP 7:DUPLICATE IP 8:FAULT		NEVER	OPERATOR		02365
0920	MAC Address	Same as PNO 919	STRING[17]				NEVER	OPERATOR		02367
0926	IP Address	Same as PNO 919	DWORD (IP addr)				NEVER	OPERATOR		02379
0927	Subnet Mask	Same as PNO 919	DWORD (IP addr)				NEVER	OPERATOR		02381
0928	Gateway Address	Same as PNO 919	DWORD (IP addr)				NEVER	OPERATOR		02383
0929	DHCP	Setup::Communications::Base Ethernet Parameters::Base Comms::Ethernet	BOOL	TRUE			ALWAYS	TECHNICIAN		02385
0930	Auto IP	Same as PNO 929	BOOL	TRUE			ALWAYS	TECHNICIAN		02387
0931	Last Auto IP Address	Parameters::Base Comms::Ethernet	DWORD (IP addr)				NEVER	ENGINEER	3	02389

# Parameter Reference D-227

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
0933	User IP Address	Same as PNO 929	DWORD (IP addr)	000.000.000.000			ALWAYS	TECHNICIAN	7	02393
0934	User Subnet Mask	Same as PNO 929	DWORD (IP addr)	000.000.000.000			ALWAYS	TECHNICIAN	7	02395
0935	User Gateway Address	Same as PNO 929	DWORD (IP addr)	000.000.000.000			ALWAYS	TECHNICIAN	7	02397
0936	Lock	Parameters::Base Comms::Ethernet	BOOL	FALSE			ALWAYS	ENGINEER		02399
0937	Ethernet Diagnostic	Parameters::Base Comms::Ethernet	DWORD				NEVER	ENGINEER		02401
0938	Free Packets	Parameters::Base Comms::Ethernet	UDINT		0 to 100		NEVER	ENGINEER		02403
0939	Maximum Connections	Setup::Communications::Base Modbus Parameters::Base Comms::Modbus	USINT	0	0 to 3		ALWAYS	TECHNICIAN		02405
0940	High Word First	Same as PNO 939	BOOL	FALSE			ALWAYS	TECHNICIAN		02407
0941	Modbus Timeout	Same as PNO 939	TIME	3.000	0.000 to 65.000	s	ALWAYS	TECHNICIAN		02409
0942	Modbus Trip Enable	Same as PNO 939	BOOL	TRUE			ALWAYS	TECHNICIAN		02411
0943	Process Active	Monitor::Communications::Base Modbus Parameters::Base Comms::Modbus	BOOL				NEVER	OPERATOR		02413
0944	Web Access	Setup::Communications::Base Ethernet Setup::Environment Parameters::Base Comms::Web Server	USINT (enum)	1	0:DISABLED 1:LIMITED 2:FULL		ALWAYS	TECHNICIAN		02415
0945	Web View Level	Parameters::Base Comms::Web Server	USINT (enum)	1	0:OPERATOR 1:TECHNICIAN 2:ENGINEER		ALWAYS	OPERATOR		02417
0946	Web Password	Parameters::Base Comms::Web Server	STRING[16]				ALWAYS	ENGINEER		02419
0951	Boot Version	Parameters::Device Manager::Drive info	STRING[7]				NEVER	ENGINEER		02429
0955	Enable Predict Term	Parameters::Motor Control::Current Loop	BOOL	TRUE			ALWAYS	ENGINEER		02437
0957	Anin 01 Offset	Setup::Inputs and Outputs::Base IO Parameters::Inputs And Outputs::IO Configure	REAL	0.00	Min to Max	%	ALWAYS	OPERATOR		02441
0958	Anin 01 Scale	Same as PNO 957	REAL	1.0000	Min to Max		ALWAYS	OPERATOR		02443
0959	Anin 02 Offset	Same as PNO 957	REAL	0.00	Min to Max	%	ALWAYS	OPERATOR		02445
0960	Anin 02 Scale	Same as PNO 957	REAL	1.0000	Min to Max		ALWAYS	OPERATOR		02447
0961	Drive Name	Setup::Environment Parameters::Device Manager::Drive info	STRING[23]				ALWAYS	TECHNICIAN	7	02449
0968	Warranty Trips	Parameters::Trips::Trips History	ARRAY[0..2]				NEVER	ENGINEER		02463
0969	Warranty Trips[0]	Parameters::Trips::Trips History	USINT (enum)		Same as PNO 696		NEVER	ENGINEER	1	02465
0970	Warranty Trips[1]	Parameters::Trips::Trips History	USINT (enum)		Same as PNO 696		NEVER	ENGINEER	1	02467
0971	Warranty Trips[2]	Parameters::Trips::Trips History	USINT (enum)		Same as PNO 696		NEVER	ENGINEER	1	02469
0972	Warranty Trip Time	Parameters::Trips::Trips History	ARRAY[0..2]				NEVER	ENGINEER		02471
0973	Warranty Trip Time[0]	Parameters::Trips::Trips History	UDINT		0 to Max	s	NEVER	ENGINEER	1	02473
0974	Warranty Trip Time[1]	Parameters::Trips::Trips History	UDINT		0 to Max	s	NEVER	ENGINEER	1	02475
0975	Warranty Trip Time[2]	Parameters::Trips::Trips History	UDINT		0 to Max	s	NEVER	ENGINEER	1	02477
0977	Control Module Serial	Parameters::Device Manager::Drive info	STRING[15]				NEVER	OPERATOR		02481
0982	Startup Page	Setup::Environment Parameters::Keypad::Graphical Keypad	USINT (enum)	0	0:DEFAULT 1:CONTROL SCREEN 2:FAVOURITES 3:MONITOR		ALWAYS	TECHNICIAN		02491
0983	Display Timeout	Same as PNO 982	TIME	0.000	0.000 to 86400.000	s	ALWAYS	TECHNICIAN		02493
0987	Power Stack Required	Parameters::Device Manager::Drive info	USINT (enum)	0	Same as PNO 543		CONFIG	ENGINEER	6	02501
0988	Target State	Parameters::Device Manager::Device State	USINT (enum)	3	3:PREOPERATIONAL 7:OPERATIONAL		STOPPED	OPERATOR	2	02503
0989	Actual State	Parameters::Device Manager::Device State	USINT (enum)		0:INITIALISING 1:INITIALISED 2:PREPARING PREOP 3:PREOPERATIONAL 4:PREPARING OP 5:FAILED TO READY 6:READY FOR OP 7:OPERATIONAL 8:FAULTED 9:FATAL ERROR RECOVER		NEVER	OPERATOR		02505
0990	Application FE State	Parameters::Device Manager::Device State	USINT (enum)		Same as PNO 989		NEVER	OPERATOR		02507
0991	Base IO FE State	Parameters::Device Manager::Device State	USINT (enum)		Same as PNO 989		NEVER	OPERATOR		02509

# D-228 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
0992	Basic Drive FE State	Parameters::Device Manager::Device State	USINT (enum)		Same as PNO 989		NEVER	OPERATOR		02511
0993	Ethernet FE State	Parameters::Device Manager::Device State	USINT (enum)		Same as PNO 989		NEVER	OPERATOR		02513
0994	Keypad FE State	Parameters::Device Manager::Device State	USINT (enum)		Same as PNO 989		NEVER	OPERATOR		02515
0995	Comms Option FE State	Parameters::Device Manager::Device State	USINT (enum)		Same as PNO 989		NEVER	OPERATOR		02517
0996	IO Option FE State	Parameters::Device Manager::Device State	USINT (enum)		Same as PNO 989		NEVER	OPERATOR		02519
0997	Config Fault Area	Parameters::Device Manager::Device State	USINT (enum)		0:NONE 1:POWER STACK 2:OPTION IO 3:OPTION COMMS 4:APPLICATION 5:MOTOR CONTROL 6:KEYPAD 7:BASE COMMS 8:BASE IO 9:FEEDBACK MISSING 10:SYSTEM BOARD		NEVER	OPERATOR		02521
0998	RTA Code	Monitor::Trips Parameters::Device Manager::Device State	UINT		0 to 65535		NEVER	OPERATOR		02523
0999	RTA Data	Same as PNO 998	DWORD				NEVER	OPERATOR		02525
1001	Save All Parameters	Parameters::Device Manager::Device Commands	BOOL	FALSE			ALWAYS	OPERATOR	2	02529
1002	Update Firmware	Parameters::Device Manager::Device Commands	BOOL	FALSE			STOPPED	ENGINEER	2	02531
1003	RTA Thread Priority	Parameters::Device Manager::Device State	SINT		-128 to 127		NEVER	OPERATOR		02533
1004	Thermistor Trip Level	Parameters::Option IO::Thermistor	REAL	1000	0 to 4500	Ohm	ALWAYS	TECHNICIAN		02535
1005	Language	Parameters::Device Manager::Setup Wizard	USINT (enum)	0	0:ENGLISH 1:FRANCAIS 2:DEUTSCH 3:ESPANOL 4:ITALIANO 5:CHINESE 6:L 6 7:L 7 8:L 8 9:CUSTOM		ALWAYS	TECHNICIAN		02537
1006	Run Wizard?	Parameters::Device Manager::Setup Wizard	USINT (enum)	1	0:NO 1:YES		ALWAYS	ENGINEER		02539
1033	Card State	Parameters::Device Manager::SD Card	USINT (enum)		0:NO CARD 1:INITIALISING 2:READY 3:CARD FAULT		NEVER	OPERATOR		02593
1034	Card Name	Parameters::Device Manager::SD Card	STRING[11]				NEVER	OPERATOR		02595
1038	Firmware	Parameters::Device Manager::SD Card	BOOL				NEVER	OPERATOR		02603
1039	Application Archive	Parameters::Device Manager::SD Card	BOOL				NEVER	OPERATOR		02605
1040	Project File Name	Parameters::Application::App Info	STRING[23]				NEVER	TECHNICIAN		02607
1047	Last Modification	Parameters::Application::App Info	DT		1970/01/01 to 2106/02/07		NEVER	TECHNICIAN		02621
1048	IDE Version	Parameters::Application::App Info	STRING[20]				NEVER	TECHNICIAN		02623
1054	Project Author	Parameters::Application::App Info	STRING[23]				NEVER	TECHNICIAN		02635
1061	Project Version	Parameters::Application::App Info	STRING[23]				NEVER	TECHNICIAN		02649
1068	Project Description	Parameters::Application::App Info	STRING[80]				NEVER	TECHNICIAN		02663
1089	BACnet MSTP State	Monitor::Communications::Option Parameters::Option Comms::BACnet MSTP	USINT (enum)		Same as PNO 46		NEVER	OPERATOR		02705
1091	BACnet MAC Address	Setup::Communications::Option Parameters::Option Comms::BACnet MSTP	USINT	0	0 to 127		CONFIG	TECHNICIAN	7	02709
1092	BACnet MSTP Device ID	Same as PNO 1091	UDINT	0	0 to 4194302		CONFIG	TECHNICIAN	7	02711
1093	BACnet Baud Rate	Same as PNO 1091	USINT (enum)	0	0:9600 BPS 1:19200 BPS 2:38400 BPS 3:76800 BPS		CONFIG	TECHNICIAN		02713
1094	BACnet MSTP Timeout	Same as PNO 1091	TIME	3.000	0.000 to 65.000	s	CONFIG	TECHNICIAN		02715
1095	BACnet Max Master	Same as PNO 1091	USINT	127	1 to 127		CONFIG	ENGINEER		02717
1096	BACnet Max Info Frames	Same as PNO 1091	USINT	1	1 to 255		CONFIG	ENGINEER		02719
1097	Password in Favourite	Parameters::Keypad::Graphical Keypad	BOOL	FALSE			ALWAYS	TECHNICIAN		02721

# Parameter Reference D-229

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
1098	Password in Local	Parameters::Keypad::Graphical Keypad	BOOL	FALSE			ALWAYS	TECHNICIAN		02723
1099	Technician Password	Parameters::Keypad::Graphical Keypad	WORD	0000			ALWAYS	OPERATOR		02725
1100	Firmware Version	Parameters::Device Manager::Drive info	STRING[21]				NEVER	OPERATOR		02727
1108	Anout 01 Offset	Setup::Inputs and Outputs::Base IO Parameters::Inputs And Outputs::IO Configure	REAL	0.00	Min to Max	%	ALWAYS	OPERATOR		02743
1109	Stack Pcode	Parameters::Device Manager::Drive info	STRING[23]				NEVER	OPERATOR		02745
1116	Control Module Pcode	Parameters::Device Manager::Drive info	STRING[15]				NEVER	OPERATOR		02759
1121	Comms Option Pcode	Parameters::Device Manager::Drive info	STRING[11]				NEVER	OPERATOR		02769
1125	IO Option Pcode	Parameters::Device Manager::Drive info	STRING[11]				NEVER	OPERATOR		02777
1129	Comms Option Serial	Parameters::Device Manager::Drive info	STRING[15]				NEVER	OPERATOR		02785
1134	IO Option Serial No	Parameters::Device Manager::Drive info	STRING[15]				NEVER	OPERATOR		02795
1139	Control Board Up Time	Parameters::Device Manager::Runtime Statistics	UDINT		0 to Max	s	NEVER	OPERATOR	1	02805
1140	Run Key Action	Parameters::Keypad::Local Control	USINT (enum)	0	0:RUN 1:JOG		STOPPED	OPERATOR		02807
1141	View Level	Parameters::Keypad::Graphical Keypad	USINT (enum)	1	Same as PNO 945		ALWAYS	OPERATOR		02809
1142	GKP Password	Setup::Environment Parameters::Keypad::Graphical Keypad	WORD	0000			ALWAYS	TECHNICIAN		02811
1143	Version	Parameters::Keypad::Graphical Keypad	WORD				NEVER	OPERATOR		02813
1178	Option IO Required	Setup::Inputs and Outputs::Option Parameters::Option IO::Option IO	USINT (enum)	0	0:NONE 1:GENERAL PURPOSE 2:THERMISTOR 3:RTC AND THERMISTOR 4:PULSE ENCODER 5:RESOLVER AND THERMIST		CONFIG	TECHNICIAN		02883
1179	Option IO Fitted	Parameters::Option IO::Option IO	USINT (enum)		Same as PNO 1178		NEVER	OPERATOR	1	02885
1180	Option IO Diagnostic	Parameters::Option IO::Option IO	USINT (enum)		0:OK 1:OPTION NOT FITTED 2:TYPE MISMATCH 3:TYPE UNKNOWN 4:HARDWARE FAULT		NEVER	OPERATOR		02887
1181	Anin 11 Value	Monitor::Inputs and Outputs Parameters::Option IO::General Purpose IO	REAL	x.xx	-100.00 to 100.00	%	NEVER	OPERATOR		02889
1182	Anin 12 Value	Same as PNO 1181	REAL	x.xx	-100.00 to 100.00	%	NEVER	OPERATOR		02891
1183	Anin 13 Value	Same as PNO 1181	REAL	x.xx	-100.00 to 100.00	%	NEVER	OPERATOR		02893
1184	Thermistor Type	Setup::Inputs and Outputs::Option Parameters::Option IO::Thermistor	USINT (enum)	1	0:NTC 1:PTC 2:KTY		ALWAYS	TECHNICIAN		02895
1185	Thermistor Resistance	Parameters::Option IO::Thermistor	REAL	x.	0 to 5000	Ohm	NEVER	TECHNICIAN		02897
1186	Time and Date	Parameters::Device Manager::Real Time Clock	DT	1970/01/01	1970/01/01 to 2106/02/07		ALWAYS	OPERATOR	2	02899
1187	RTC Trim	Parameters::Option IO::General Purpose IO	SINT	0	-40 to 40		ALWAYS	ENGINEER	2	02901
1188	Favourites	Parameters::Device Manager::Soft Menus	ARRAY[0..19]				ALWAYS	OPERATOR		02903
1189	Favourites[0]	Favourites Parameters::Device Manager::Soft Menus	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02905
1190	Favourites[1]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02907
1191	Favourites[2]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02909
1192	Favourites[3]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02911
1193	Favourites[4]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02913
1194	Favourites[5]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02915
1195	Favourites[6]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02917
1196	Favourites[7]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02919
1197	Favourites[8]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02921
1198	Favourites[9]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02923
1199	Favourites[10]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02925
1200	Favourites[11]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02927
1201	Favourites[12]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02929
1202	Favourites[13]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02931
1203	Favourites[14]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02933
1204	Favourites[15]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02935
1205	Favourites[16]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02937
1206	Favourites[17]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02939
1207	Favourites[18]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02941
1208	Favourites[19]	Same as PNO 1189	UINT	0000	0000 to 3131		ALWAYS	OPERATOR		02943
1239	Local Run Key Active	Parameters::Keypad::Local Control	BOOL	TRUE			ALWAYS	TECHNICIAN		03005
1240	Local Reverse	Parameters::Keypad::Local Control	BOOL	FALSE			ALWAYS	OPERATOR	1	03007

# D-230 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	MBus
1241	Open Connections	Monitor::Communications::Base Modbus Parameters::Base Comms::Modbus	USINT		0 to 255		NEVER	OPERATOR		03009
1246	Speed Loop Auto Set	Parameters::Motor Control::Spd Loop Settings	BOOL	TRUE			ALWAYS	TECHNICIAN		03019
1247	Ratio Load Mot Inert	Parameters::Motor Control::Spd Loop Settings	REAL	1.0	0.1 to 100.0		ALWAYS	TECHNICIAN		03021
1248	Speed Loop Bandwidth	Parameters::Motor Control::Spd Loop Settings	USINT (enum)	1	0:LOW 1:MEDIUM 2:HIGH		ALWAYS	TECHNICIAN		03023
1251	CANopen Actual Baud	Monitor::Communications::Option Parameters::Option Comms::CANopen	USINT (enum)		Same as PNO 213		NEVER	OPERATOR		03029
1252	HV SMPS Up Time	Parameters::Device Manager::Runtime Statistics	UDINT		0 to Max	s	NEVER	TECHNICIAN	1	03031
1253	Local/Rem Key Active	Parameters::Keypad::Local Control	BOOL	TRUE			ALWAYS	TECHNICIAN		03033
1254	IO Option SW Version	Parameters::Device Manager::Drive info	WORD				NEVER	OPERATOR		03035
1255	Local Dir Key Active	Parameters::Keypad::Local Control	BOOL	TRUE			ALWAYS	TECHNICIAN		03037
1256	OEM ID	Parameters::Device Manager::Drive info	UINT		0 to 65535		NEVER	ENGINEER		03039
1257	Seq Stop Method SVC	Setup::Motor Control::Control and Type Parameters::Motor Control::Ramp	USINT (enum)	1	0:DISABLED VOLTAGE 1:RAMP 2:STOP RAMP		ALWAYS	TECHNICIAN		03041
1258	Stack Serial No	Parameters::Device Manager::Drive info	STRING[15]				NEVER	OPERATOR		03043
1264	Ref Min Speed Clamp	Parameters::Motor Control::Speed Ref	REAL	-110.00	-110.00 to 0.00	%	ALWAYS	OPERATOR		03055
1265	Ref Max Speed Clamp	Parameters::Motor Control::Speed Ref	REAL	110.00	0.00 to 110.00	%	ALWAYS	OPERATOR		03057
1266	Ref Speed Trim	Parameters::Motor Control::Speed Ref	REAL	0.00	-300.00 to 300.00	%	ALWAYS	OPERATOR		03059
1267	Ref Trim Local	Parameters::Motor Control::Speed Ref	BOOL	FALSE			ALWAYS	OPERATOR		03061
1268	Random Pattern PMAC	Parameters::Motor Control::Pattern Generator	BOOL	FALSE			ALWAYS	ENGINEER		03063
1269	DHCP State	Parameters::Base Comms::Ethernet	DWORD				NEVER	ENGINEER		03065
1270	Monitor	Parameters::Device Manager::Soft Menus	ARRAY[0..19]				ALWAYS	OPERATOR		03067
1271	Monitor[0]	Monitor::Quick Monitor Parameters::Device Manager::Soft Menus	UINT	0383	0000 to 3131		ALWAYS	OPERATOR	2	03069
1272	Monitor[1]	Same as PNO 1271	UINT	0393	0000 to 3131		ALWAYS	OPERATOR	2	03071
1273	Monitor[2]	Same as PNO 1271	UINT	0395	0000 to 3131		ALWAYS	OPERATOR	2	03073
1274	Monitor[3]	Same as PNO 1271	UINT	0696	0000 to 3131		ALWAYS	OPERATOR	2	03075
1275	Monitor[4]	Same as PNO 1271	UINT	0895	0000 to 3131		ALWAYS	OPERATOR	2	03077
1276	Monitor[5]	Same as PNO 1271	UINT	0926	0000 to 3131		ALWAYS	OPERATOR	2	03079
1277	Monitor[6]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03081
1278	Monitor[7]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03083
1279	Monitor[8]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03085
1280	Monitor[9]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03087
1281	Monitor[10]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03089
1282	Monitor[11]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03091
1283	Monitor[12]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03093
1284	Monitor[13]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03095
1285	Monitor[14]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03097
1286	Monitor[15]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03099
1287	Monitor[16]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03101
1288	Monitor[17]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03103
1289	Monitor[18]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03105
1290	Monitor[19]	Same as PNO 1271	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03107
1311	Setup	Parameters::Device Manager::Soft Menus	ARRAY[0..19]				ALWAYS	OPERATOR		03149
1312	Setup[0]	Setup::Quick Setup Parameters::Device Manager::Soft Menus	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03151
1313	Setup[1]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03153
1314	Setup[2]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03155
1315	Setup[3]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03157
1316	Setup[4]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03159
1317	Setup[5]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03161
1318	Setup[6]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03163
1319	Setup[7]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03165
1320	Setup[8]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03167
1321	Setup[9]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03169
1322	Setup[10]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03171
1323	Setup[11]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03173
1324	Setup[12]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03175
1325	Setup[13]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03177
1326	Setup[14]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03179
1327	Setup[15]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03181
1328	Setup[16]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03183

# Parameter Reference D-231

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	MBus
1329	Setup[17]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03185
1330	Setup[18]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03187
1331	Setup[19]	Same as PNO 1312	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03189
1352	Control Screen	Parameters::Device Manager::Soft Menus	ARRAY[0..5]				ALWAYS	OPERATOR		03231
1353	Control Screen[0]	Control Screen Parameters::Device Manager::Soft Menus	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03233
1354	Control Screen[1]	Same as PNO 1353	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03235
1355	Control Screen[2]	Same as PNO 1353	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03237
1356	Control Screen[3]	Same as PNO 1353	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03239
1357	Control Screen[4]	Same as PNO 1353	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03241
1358	Control Screen[5]	Same as PNO 1353	UINT	0000	0000 to 3131		ALWAYS	OPERATOR	2	03243
1387	PMAC Base Volt	Setup::Motor Control::Motor Data PMAC Parameters::Motor Control::PMAC Motor Data	REAL	400.00	0.00 to 1000.00	V	ALWAYS	TECHNICIAN	6	03301
1388	ATN PMAC Test Disable	Setup::Motor Control::Autotune Parameters::Motor Control::Autotune	WORD (bitfield)	0000	0:Stator Resistance 1:Leakage Inductance 2:KE Constant		STOPPED	TECHNICIAN	6	03303
1389	ATN PMAC Test Disable.Stator Resistance	Same as PNO 1388	BOOL	FALSE			STOPPED	TECHNICIAN	6	03305
1390	ATN PMAC Test Disable.Leakage Inductance	Same as PNO 1388	BOOL	FALSE			STOPPED	TECHNICIAN	6	03307
1391	ATN PMAC Test Disable.KE Constant	Same as PNO 1388	BOOL	FALSE			STOPPED	TECHNICIAN	6	03309
1405	ATN PMAC Ls Test Freq	Same as PNO 1388	REAL	100.0	0.0 to 500.0	Hz	STOPPED	ENGINEER	6	03337
1406	HV Power On Count	Parameters::Device Manager::Runtime Statistics	UINT		0 to 65535		NEVER	TECHNICIAN	1	03339
1407	Motor Run Time	Parameters::Device Manager::Runtime Statistics	UDINT		0 to Max	s	NEVER	TECHNICIAN	1	03341
1408	Warranty Trips Record	Parameters::Trips::Trips History	DWORD (bitfield)		0:01 OVER VOLTAGE 2:03 OVER CURRENT 3:04 STACK FAULT 4:05 STACK OVER CURRENT 7:08 INVERSE TIME 10:11 HEATSINK OVERTEMP 11:12 INTERNAL OVERTEMP 14:15 BRAKE SHORT CCT 16:17 BRAKE SWITCH 21:22 VDC RIPPLE		NEVER	ENGINEER	1	03343
1409	Warranty Trips Record.01 OVER VOLTAGE	Parameters::Trips::Trips History	BOOL				NEVER	ENGINEER	1	03345
1411	Warranty Trips Record.03 OVER CURRENT	Parameters::Trips::Trips History	BOOL				NEVER	ENGINEER	1	03349
1412	Warranty Trips Record.04 STACK FAULT	Parameters::Trips::Trips History	BOOL				NEVER	ENGINEER	1	03351
1413	Warranty Trips Record.05 STACK OVER CURRENT	Parameters::Trips::Trips History	BOOL				NEVER	ENGINEER	1	03353
1416	Warranty Trips Record.08 INVERSE TIME	Parameters::Trips::Trips History	BOOL				NEVER	ENGINEER	1	03359
1419	Warranty Trips Record.11 HEATSINK OVERTEMP	Parameters::Trips::Trips History	BOOL				NEVER	ENGINEER	1	03365
1420	Warranty Trips Record.12 INTERNAL OVERTEMP	Parameters::Trips::Trips History	BOOL				NEVER	ENGINEER	1	03367
1423	Warranty Trips Record.15 BRAKE SHORT CCT	Parameters::Trips::Trips History	BOOL				NEVER	ENGINEER	1	03373
1425	Warranty Trips Record.17 BRAKE SWITCH	Parameters::Trips::Trips History	BOOL				NEVER	ENGINEER	1	03377
1430	Warranty Trips Record.22 VDC RIPPLE	Parameters::Trips::Trips History	BOOL				NEVER	ENGINEER	1	03387
1441	Anout 01 ABS	Setup::Inputs and Outputs::Base IO Parameters::Inputs And Outputs::IO Configure	BOOL	FALSE			ALWAYS	OPERATOR		03409
1442	Recent Trip Times	Parameters::Trips::Trips History	ARRAY[0..9]				NEVER	OPERATOR		03411
1443	Recent Trip Times[0]	Parameters::Trips::Trips History	UDINT		0 to Max	s	NEVER	OPERATOR	1	03413
1444	Recent Trip Times[1]	Parameters::Trips::Trips History	UDINT		0 to Max	s	NEVER	OPERATOR	1	03415
1445	Recent Trip Times[2]	Parameters::Trips::Trips History	UDINT		0 to Max	s	NEVER	OPERATOR	1	03417
1446	Recent Trip Times[3]	Parameters::Trips::Trips History	UDINT		0 to Max	s	NEVER	OPERATOR	1	03419
1447	Recent Trip Times[4]	Parameters::Trips::Trips History	UDINT		0 to Max	s	NEVER	OPERATOR	1	03421
1448	Recent Trip Times[5]	Parameters::Trips::Trips History	UDINT		0 to Max	s	NEVER	OPERATOR	1	03423
1449	Recent Trip Times[6]	Parameters::Trips::Trips History	UDINT		0 to Max	s	NEVER	OPERATOR	1	03425
1450	Recent Trip Times[7]	Parameters::Trips::Trips History	UDINT		0 to Max	s	NEVER	OPERATOR	1	03427
1451	Recent Trip Times[8]	Parameters::Trips::Trips History	UDINT		0 to Max	s	NEVER	OPERATOR	1	03429
1452	Recent Trip Times[9]	Parameters::Trips::Trips History	UDINT		0 to Max	s	NEVER	OPERATOR	1	03431
1458	Modbus Conn Timeout	Parameters::Base Comms::Modbus	TIME	66.000	0.000 to 100000.000	s	ALWAYS	TECHNICIAN		03443
1459	Max Spd when Autotuned	Parameters::Motor Control::Autotune	REAL	x.	-1 to 100000	RPM	NEVER	ENGINEER	3.6	03445
1460	Anout 02 Scale	Same as PNO 1441	REAL	1.0000	Min to Max		ALWAYS	OPERATOR		03447
1461	Anin 11 Offset	Setup::Inputs and Outputs::Option Parameters::Option IO::General Purpose IO	REAL	0.00	Min to Max	%	ALWAYS	OPERATOR		03449
1462	Anin 11 Scale	Same as PNO 1461	REAL	1.0000	Min to Max		ALWAYS	OPERATOR		03451
1463	Anin 12 Offset	Same as PNO 1461	REAL	0.00	Min to Max	%	ALWAYS	OPERATOR		03453
1464	Anin 12 Scale	Same as PNO 1461	REAL	1.0000	Min to Max		ALWAYS	OPERATOR		03455
1465	Anin 13 Offset	Same as PNO 1461	REAL	0.00	Min to Max	%	ALWAYS	OPERATOR		03457
1466	Anin 13 Scale	Same as PNO 1461	REAL	1.0000	Min to Max	%	ALWAYS	OPERATOR		03459
1467	Anout 02 Offset	Same as PNO 1441	REAL	0.00	Min to Max	%	ALWAYS	OPERATOR		03461

# D-232 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
1468	Anout 02 ABS	Same as PNO 1441	BOOL	FALSE			ALWAYS	OPERATOR		03463
1469	AR Enable	Setup::Motor Control::Auto Restart Parameters::Motor Control::Auto Restart	BOOL	FALSE			ALWAYS	OPERATOR		03465
1470	AR Mode	Same as PNO 1469	USINT (enum)	1	0:TRIP RESET 1:AUTO RESTART 2:AUTO START		ALWAYS	OPERATOR		03467
1471	AR Max Restarts	Same as PNO 1469	USINT	10	1 to 20		ALWAYS	OPERATOR		03469
1472	AR Trip Mask	Same as PNO 1469	DWORD (bitfield)	00000000	0:01 OVER VOLTAGE 1:02 UNDER VOLTAGE 2:03 OVER CURRENT 3:04 STACK FAULT 4:05 STACK OVER CURRENT 5:06 CURRENT LIMIT 6:07 MOTOR STALL 7:08 INVERSE TIME 8:09 MOTOR I2T 9:10 LOW SPEED I 10:11 HEATSINK OVERTEMP 11:12 INTERNAL OVERTEMP 12:13 MOTOR OVERTEMP 13:14 EXTERNAL TRIP 14:15 BRAKE SHORT CCT 15:16 BRAKE RESISTOR 16:17 BRAKE SWITCH 17:18 LOCAL CONTROL 18:19 COMMS BREAK 19:20 LINE CONTACTOR 20:21 PHASE FAIL 21:22 VDC RIPPLE 22:23 BASE MODBUS BREAK 23:24 24 V OVERLOAD 24:25 PMAC SPEED ERROR 25:26 OVERSPEED 26:27 STO ACTIVE 27:28 FEEDBACK MISSING 28:29 INTERNAL FAN FAIL 29:30 CURRENT SENSOR 30:31 POWER LOSS STOP 31:32 SPEED SENSOR		ALWAYS	TECHNICIAN		03471
1473	AR Trip Mask.01 OVER VOLTAGE	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03473
1474	AR Trip Mask.02 UNDER VOLTAGE	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03475
1475	AR Trip Mask.03 OVER CURRENT	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03477
1476	AR Trip Mask.04 STACK FAULT	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03479
1477	AR Trip Mask.05 STACK OVER CURRENT	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03481
1478	AR Trip Mask.06 CURRENT LIMIT	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03483
1479	AR Trip Mask.07 MOTOR STALL	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03485
1480	AR Trip Mask.08 INVERSE TIME	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03487
1481	AR Trip Mask.09 MOTOR I2T	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03489
1482	AR Trip Mask.10 LOW SPEED I	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03491
1483	AR Trip Mask.11 HEATSINK OVERTEMP	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03493
1484	AR Trip Mask.12 INTERNAL OVERTEMP	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03495
1485	AR Trip Mask.13 MOTOR OVERTEMP	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03497
1486	AR Trip Mask.14 EXTERNAL TRIP	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03499
1487	AR Trip Mask.15 BRAKE SHORT CCT	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03501
1488	AR Trip Mask.16 BRAKE RESISTOR	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03503
1489	AR Trip Mask.17 BRAKE SWITCH	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03505
1490	AR Trip Mask.18 LOCAL CONTROL	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03507
1491	AR Trip Mask.19 COMMS BREAK	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03509
1492	AR Trip Mask.20 LINE CONTACTOR	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03511
1493	AR Trip Mask.21 PHASE FAIL	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03513
1494	AR Trip Mask.22 VDC RIPPLE	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03515
1495	AR Trip Mask.23 BASE MODBUS BREAK	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03517
1496	AR Trip Mask.24 24 V OVERLOAD	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03519
1497	AR Trip Mask.25 PMAC SPEED ERROR	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03521
1498	AR Trip Mask.26 OVERSPEED	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03523
1499	AR Trip Mask.27 STO ACTIVE	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03525



# Parameter Reference D-233

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
1500	AR Trip Mask.28 FEEDBACK MISSING	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03527
1501	AR Trip Mask.29 INTERNAL FAN FAIL	Same as PNO 1469	BOOL	TRUE			ALWAYS	TECHNICIAN		03529
1502	AR Trip Mask.30 CURRENT SENSOR	Setup::Motor Control::Auto Restart Parameters::Motor Control::Auto Restart	BOOL	TRUE			ALWAYS	TECHNICIAN		03531
1503	AR Trip Mask.31 POWER LOSS STOP	Same as PNO 1502	BOOL	TRUE			ALWAYS	TECHNICIAN		03533
1504	AR Trip Mask.32 SPEED SENSOR	Same as PNO 1502	BOOL	TRUE			ALWAYS	TECHNICIAN		03535
1505	AR Initial Delay	Same as PNO 1502	TIME	10.000	0.000 to 3600.000	s	ALWAYS	OPERATOR		03537
1506	AR Repeat Delay	Same as PNO 1502	TIME	60.000	0.000 to 3600.000	s	ALWAYS	OPERATOR		03539
1507	AR Active	Parameters::Motor Control::Auto Restart	BOOL				NEVER	OPERATOR		03541
1508	AR Restart Pending	Parameters::Motor Control::Auto Restart	BOOL				NEVER	OPERATOR		03543
1509	AR Restarts Remaining	Parameters::Motor Control::Auto Restart	USINT		0 to 20		NEVER	OPERATOR		03545
1510	AR Time Remaining	Parameters::Motor Control::Auto Restart	TIME		0.000 to 3600.000	s	NEVER	OPERATOR		03547
1511	Encoder Supply	Setup::Inputs and Outputs::Option Parameters::Option IO::Encoder	USINT (enum)	0	0:5 V 1:12 V 2:15 V 3:24 V		STOPPED	TECHNICIAN		03549
1512	Encoder Lines	Same as PNO 1511	DINT	2048	1 to 100000		STOPPED	TECHNICIAN		03551
1513	Encoder Invert	Same as PNO 1511	BOOL	FALSE			STOPPED	TECHNICIAN		03553
1514	Encoder Type	Same as PNO 1511	USINT (enum)	0	0:QUADRATURE 1:CLOCK/DIRECTION		STOPPED	TECHNICIAN		03555
1515	Encoder Single Ended	Same as PNO 1511	BOOL	FALSE			STOPPED	TECHNICIAN		03557
1516	Encoder Speed	Monitor::Inputs and Outputs Parameters::Option IO::Encoder	REAL	x.	Min to Max	RPM	NEVER	OPERATOR		03559
1517	Encoder Count Reset	Same as PNO 1511	BOOL	FALSE			ALWAYS	TECHNICIAN	2	03561
1518	Encoder Count	Same as PNO 1516	DINT		Min to Max		NEVER	TECHNICIAN	1	03563
1520	Actual Rotor T Const	Parameters::Motor Control::Tr Adaptation	REAL	x.	1 to 100000	ms	NEVER	ENGINEER		03567
1521	Tr Adaptation Output	Parameters::Motor Control::Tr Adaptation	REAL	x.	1 to 500	%	NEVER	ENGINEER		03569
1526	Energy Saving Lower Lim	Parameters::Motor Control::Fluxing VHz	REAL	0.00	0.00 to 1.00		ALWAYS	OPERATOR		03579
1527	Max Available Volts	Parameters::Motor Control::Tr Adaptation	REAL	x.	0 to 10000	V	NEVER	ENGINEER		03581
1528	Demanded Terminal Volts	Parameters::Motor Control::Tr Adaptation	REAL	x.	0 to 1000	V	NEVER	ENGINEER		03583
1529	Terminal Volts	Parameters::Motor Control::Tr Adaptation	REAL	x.	0 to 1000	V	NEVER	ENGINEER		03585
1533	Control Type	Setup::Motor Control::Control and Type Parameters::Control Mode::Control Mode	USINT (enum)	0	0:SENSORLESS 1:ENCODER FEEDBACK		STOPPED	TECHNICIAN	6	03593
1534	Clone Filename	Setup::Clone Parameters::Device Manager::Clone	STRING[24]	clone			ALWAYS	TECHNICIAN	2	03595
1537	Clone Direction	Same as PNO 1534	USINT (enum)	0	0:SAVE TO FILE 1:LOAD FROM FILE		ALWAYS	TECHNICIAN	2	03601
1538	Full Restore	Same as PNO 1534	USINT (enum)	0	0:YES 1:PARTIAL		ALWAYS	TECHNICIAN	2	03603
1539	Application	Same as PNO 1534	USINT (enum)	0	0:LOAD FROM FILE 1:LEAVE CURRENT APP		ALWAYS	TECHNICIAN	2	03605
1540	Other Parameters	Same as PNO 1534	USINT (enum)	0	0:LOAD FROM FILE 1:LEAVE CURRENT VALUES 2:SET TO DEFAULT VALUES		ALWAYS	TECHNICIAN	2	03607
1541	Power Parameters	Same as PNO 1534	USINT (enum)	0	Same as PNO 1540		ALWAYS	TECHNICIAN	2	03609
1542	Clone Start	Same as PNO 1534	BOOL	FALSE			ALWAYS	TECHNICIAN	2	03611
1543	Clone Status	Same as PNO 1534	USINT (enum)		0:IDLE 1:SAVING 2:RESTORING 3:VERIFYING 4:DONE 5:CANNOT START 6:FAILED 7:NO SD CARD 8:VERIFY FAILED 9:FILE NOT OPENED 10:FILE INCOMPATIBLE 11:FILE FAILURE 12:POWER MISMATCH 13:APPLICATION FAILURE 14:PARAMETERS FAILURE		NEVER	TECHNICIAN		03613
1544	Filter Type	Parameters::Motor Control::Filter On Torque Dmd	USINT (enum)	0	0:NONE 1:MAX ATTENUATION 2:MINIMUM PHASE 3:PHASE ADVANCE 4:NOTCH		ALWAYS	TECHNICIAN		03615

# D-234 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
1545	Cut Off Frequency	Parameters::Motor Control::Filter On Torque Dmd	REAL	2000	20 to 6000	Hz	ALWAYS	TECHNICIAN		03617
1546	Frequency 1	Parameters::Motor Control::Filter On Torque Dmd	REAL	2000	20 to 6000	Hz	ALWAYS	TECHNICIAN		03619
1547	Frequency 2	Parameters::Motor Control::Filter On Torque Dmd	REAL	2000	20 to 6000	Hz	ALWAYS	TECHNICIAN		03621
1548	Factor	Parameters::Motor Control::Filter On Torque Dmd	REAL	0.20	0.10 to 1.00		ALWAYS	TECHNICIAN		03623
1549	Application Volts	Parameters::Motor Control::Fluxing VHz	REAL	0.00	0.00 to 150.00	%	ALWAYS	OPERATOR		03625
1550	Nameplate Mag Current	Setup::Motor Control::Autotune Parameters::Motor Control::Autotune	REAL	1.00	0.01 to 1000.00	A	STOPPED	TECHNICIAN	6	03627
1551	Product Code Flags	Parameters::Device Manager::Drive info	BYTE				NEVER	ENGINEER		03629
1554	Application Name	Parameters::Application::App Info	STRING[20]				NEVER	TECHNICIAN		03635
1560	Start Delay Enable	Parameters::Motor Control::Motor Sequencer	BOOL	FALSE			STOPPED	TECHNICIAN		03647
1565	Local Power Up Mode	Parameters::Motor Control::Sequencing	USINT (enum)	0	0:AS WHEN POWERED DOWN 1:LOCAL 2:REMOTE		ALWAYS	TECHNICIAN		03657
1567	Modbus Mapping	Setup::Communications::Base Modbus Parameters::Base Comms::Modbus	ARRAY[0..15]				ALWAYS	ENGINEER		03661
1568	Modbus Mapping[0]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03663
1569	Modbus Mapping[1]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03665
1570	Modbus Mapping[2]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03667
1571	Modbus Mapping[3]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03669
1572	Modbus Mapping[4]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03671
1573	Modbus Mapping[5]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03673
1574	Modbus Mapping[6]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03675
1575	Modbus Mapping[7]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03677
1576	Modbus Mapping[8]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03679
1577	Modbus Mapping[9]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03681
1578	Modbus Mapping[10]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03683
1579	Modbus Mapping[11]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03685
1580	Modbus Mapping[12]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03687
1581	Modbus Mapping[13]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03689
1582	Modbus Mapping[14]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03691
1583	Modbus Mapping[15]	Same as PNO 1567	UINT	0000	0000 to 3131		ALWAYS	ENGINEER		03693
1632	Mapping Valid	Monitor::Communications::Base Modbus Parameters::Base Comms::Modbus	BOOL				NEVER	OPERATOR		03791
1633	Application User Boost	Parameters::Motor Control::Fluxing VHz	REAL	0.00	0.00 to 25.00	%	ALWAYS	OPERATOR		03793
1634	Start Delay	Parameters::Motor Control::Motor Sequencer	TIME	0.000	0.000 to 30.000	s	STOPPED	TECHNICIAN		03795
1635	Delay To Start	Parameters::Motor Control::Motor Sequencer	TIME		0.000 to Max	s	NEVER	TECHNICIAN		03797
1636	Manufacturing Flags	Parameters::Device Manager::Drive info	WORD				NEVER	ENGINEER		03799
1637	Engineer Password	Parameters::Keypad::Graphical Keypad	WORD	0000			ALWAYS	TECHNICIAN		03801
1640	Modbus Password	Setup::Communications::Option Parameters::Option Comms::Modbus RTU	WORD	0000			ALWAYS	TECHNICIAN		03807
1641	VDC Lim Enable	Parameters::Motor Control::DC Link Volts Limit	BOOL	FALSE			STOPPED	TECHNICIAN		03809
1642	VDC Lim Level	Parameters::Motor Control::DC Link Volts Limit	REAL	91.0	78.0 to 100.0	%	STOPPED	TECHNICIAN		03811
1643	VDC Lim Active	Parameters::Motor Control::DC Link Volts Limit	BOOL				NEVER	TECHNICIAN		03813
1644	VDC Lim Output	Parameters::Motor Control::DC Link Volts Limit	REAL	x.x	Min to Max	Hz	NEVER	ENGINEER		03815
1645	Pwrl Enable	Parameters::Motor Control::Power Loss Ride Thru	BOOL	FALSE			STOPPED	TECHNICIAN		03817
1646	Pwrl Trip Threshold	Parameters::Motor Control::Power Loss Ride Thru	REAL	52.0	20.0 to 60.0	%	STOPPED	TECHNICIAN		03819
1647	Pwrl Control Band	Parameters::Motor Control::Power Loss Ride Thru	REAL	2.0	0.0 to 20.0	%	STOPPED	TECHNICIAN		03821
1648	Pwrl Accel Rate	Parameters::Motor Control::Power Loss Ride Thru	REAL	100	1 to 500	Hz/s	STOPPED	TECHNICIAN		03823
1649	Pwrl Decel Rate	Parameters::Motor Control::Power Loss Ride Thru	REAL	100	1 to 500	Hz/s	STOPPED	TECHNICIAN		03825
1650	Pwrl Time Limit	Parameters::Motor Control::Power Loss Ride Thru	TIME	30.000	0.000 to 300.000	s	STOPPED	TECHNICIAN		03827
1651	Pwrl Active	Parameters::Motor Control::Power Loss Ride Thru	BOOL				NEVER	TECHNICIAN		03829
1658	Current Diff Level	Parameters::Trips::Current Sensor Trip	REAL	25.00	0.00 to 100.00	%	ALWAYS	OPERATOR		03843
1659	Modbus TCP Password	Setup::Communications::Base Modbus Parameters::Base Comms::Modbus	WORD	0000			ALWAYS	TECHNICIAN		03845
1661	PTP Enable	Setup::Communications::PTP Parameters::Base Comms::PTP	BOOL	FALSE			ALWAYS	TECHNICIAN		03849
1663	Encoder Supply	Setup::Inputs and Outputs::SB Encoder Slot1 Parameters::System Board::Encoder Slot 1	USINT (enum)	0	0:5 V 1:12 V 2:15 V 3:20 V		STOPPED	TECHNICIAN		03853
1664	Encoder Lines	Same as PNO 1663	DINT	2048	1 to 100000		STOPPED	TECHNICIAN		03855
1665	Encoder Invert	Same as PNO 1663	BOOL	FALSE			STOPPED	TECHNICIAN		03857
1666	Encoder Type	Same as PNO 1663	USINT (enum)	0	Same as PNO 1514		STOPPED	TECHNICIAN		03859
1667	High Input Threshold	Same as PNO 1663	BOOL	FALSE			STOPPED	TECHNICIAN		03861

# Parameter Reference D-235

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
1668	Encoder Speed	Monitor::System Board::Encoder Slot 1 Parameters::System Board::Encoder Slot 1	REAL	x.	Min to Max	RPM	NEVER	TECHNICIAN		03863
1669	Encoder Count Reset	Same as PNO 1663	BOOL	FALSE			ALWAYS	TECHNICIAN	2	03865
1670	Encoder Count	Same as PNO 1668	DINT		Min to Max		NEVER	TECHNICIAN	1	03867
1671	Encoder Lines	Setup::Inputs and Outputs::SB Encoder Slot2 Parameters::System Board::Encoder Slot 2	DINT	2048	1 to 100000		STOPPED	TECHNICIAN		03869
1672	Encoder Invert	Same as PNO 1671	BOOL	FALSE			STOPPED	TECHNICIAN		03871
1673	Encoder Type	Same as PNO 1671	USINT (enum)	0	Same as PNO 1514		STOPPED	TECHNICIAN		03873
1674	High Input Threshold	Same as PNO 1671	BOOL	FALSE			STOPPED	TECHNICIAN		03875
1675	Encoder Speed	Monitor::System Board::Encoder Slot 2 Parameters::System Board::Encoder Slot 2	REAL	x.	Min to Max	RPM	NEVER	OPERATOR		03877
1676	Encoder Count Reset	Same as PNO 1671	BOOL	FALSE			ALWAYS	TECHNICIAN	2	03879
1677	Encoder Count	Same as PNO 1675	DINT		Min to Max		NEVER	TECHNICIAN	1	03881
1678	Output Enable	Setup::Inputs and Outputs::System Board Option Parameters::System Board::System Board IO	BOOL	FALSE			ALWAYS	ENGINEER		03883
1679	Output Source	Same as PNO 1678	USINT (enum)	0	0:SYSTEM BOARD SLOT 1 1:SYSTEM BOARD SLOT 2 2:SYNTHETIC ENCDR 3:DIGITAL OUTPUTS		STOPPED	ENGINEER		03885
1680	Output Voltage	Same as PNO 1678	USINT (enum)	0	Same as PNO 1663		ALWAYS	ENGINEER		03887
1681	PTP Log Sync Interval	Same as PNO 1661	SINT	-1	-1 to 0		ALWAYS	ENGINEER		03889
1682	Random Pattern AFE	Parameters::Motor Control::Pattern Generator	BOOL	FALSE			ALWAYS	ENGINEER		03891
1683	PTP Clock Mode	Same as PNO 1661	USINT (enum)	0	0:E2E		ALWAYS	ENGINEER		03893
1684	PTP Clock Type	Same as PNO 1661	USINT (enum)	0	0:MASTER OR SLAVE 1:SLAVE ONLY		ALWAYS	ENGINEER		03895
1685	PTP Lock Threshold	Same as PNO 1661	REAL	0.5	0.1 to 100.0	us	ALWAYS	ENGINEER		03897
1686	PTP Priority2	Same as PNO 1661	USINT	128	0 to 255		ALWAYS	ENGINEER		03899
1687	PTP Offset	Monitor::Communications::PTP Parameters::Base Comms::PTP	DINT		Min to Max	ns	NEVER	OPERATOR		03901
1688	PTP Locked	Same as PNO 1687	BOOL				NEVER	OPERATOR		03903
1689	PTP State	Same as PNO 1687	USINT (enum)		0:NONE 1:INITIALISNG 2:FAULTY 3:DISABLED 4:LISTENING 5:PRE_MASTER 6:MASTER 7:PASSIVE 8:UNCALIBRATED 9:SLAVE		NEVER	OPERATOR		03905
1690	AFE Close Ext PCR	Parameters::Regen Control::AFE	BOOL	FALSE			ALWAYS	OPERATOR		03907
1691	AFE Ext PCR Closed	Parameters::Regen Control::AFE	BOOL	FALSE			ALWAYS	OPERATOR		03909
1692	AFE PF Angle Demand	Parameters::Regen Control::AFE	REAL	0.00	-90.00 to 90.00	deg	ALWAYS	OPERATOR		03911
1693	AFE Current Control	Setup::Regen Control Parameters::Regen Control::AFE	BOOL	FALSE			ALWAYS	OPERATOR		03913
1694	AFE PLL Kp	Parameters::Regen Control::AFE	REAL	5.48	0.00 to 30.00		ALWAYS	OPERATOR		03915
1695	AFE PLL Ti	Parameters::Regen Control::AFE	REAL	0.0318	0.0000 to 3.0000		ALWAYS	OPERATOR		03917
1696	Synth Encoder Lines	Same as PNO 1678	DINT	2048	1 to 1500000		ALWAYS	TECHNICIAN		03919
1697	AFE VDC Min Level	Parameters::Regen Control::AFE	REAL	400.00	340.00 to 5000.00		ALWAYS	OPERATOR		03921
1698	Synth Encoder Speed	Same as PNO 1678	REAL	0	0 to 15000000	RPM	ALWAYS	TECHNICIAN		03923
1699	PTP Clock	Same as PNO 1687	DT		1970/01/01 to 2106/02/07		NEVER	OPERATOR		03925
1701	Switchover Enable	Parameters::Motor Control::MRAS	BOOL	FALSE			ALWAYS	ENGINEER		03929
1702	Synth Encoder Invert	Same as PNO 1678	BOOL	FALSE			ALWAYS	TECHNICIAN		03931
1703	AFE Sync Frequency	Monitor::Regen Control Parameters::Regen Control::AFE	REAL	x.xx	Min to Max	Hz	NEVER	OPERATOR	3	03933
1704	AFE Id Demand	Same as PNO 1693	REAL	0.10	-1.50 to 1.50		ALWAYS	OPERATOR		03935
1705	AFE Iq Demand	Same as PNO 1693	REAL	0.00	-1.50 to 1.50		ALWAYS	OPERATOR		03937
1706	AFE Max Current	Parameters::Regen Control::AFE	REAL	1.50	0.00 to 1.50		ALWAYS	OPERATOR		03939
1707	AFE VDC Kp	Parameters::Regen Control::AFE	REAL	8.27	0.00 to 300.00		ALWAYS	OPERATOR		03941
1708	AFE VDC Ti	Parameters::Regen Control::AFE	REAL	0.03	0.00 to 3.00		ALWAYS	OPERATOR		03943
1709	AFE VDC Ramp	Parameters::Regen Control::AFE	REAL	0.05	0.01 to 100.00	%	ALWAYS	OPERATOR		03945
1710	AFE VDC Feed Forward	Parameters::Regen Control::AFE	REAL	0.0000	-1.5000 to 1.5000		ALWAYS	OPERATOR		03947
1711	AFE VDC Demand	Same as PNO 1693	REAL	720	340 to 820	V	ALWAYS	OPERATOR		03949

# D-236 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	MBus
1712	AFE Synchronizing	Parameters::Regen Control::AFE	BOOL				NEVER	OPERATOR	3	03951
1713	AFE Synchronized	Parameters::Regen Control::AFE	BOOL				NEVER	OPERATOR	3	03953
1714	AFE Enable Drive	Parameters::Regen Control::AFE	BOOL				NEVER	OPERATOR	3	03955
1715	AFE Phase Loss	Parameters::Regen Control::AFE	BOOL				NEVER	OPERATOR	3	03957
1716	AFE Brake Mode	Parameters::Regen Control::AFE	BOOL	FALSE			ALWAYS	OPERATOR		03959
1717	AFE Correction Angle	Parameters::Regen Control::AFE	REAL	0.00	-90.00 to 90.00		ALWAYS	OPERATOR		03961
1718	AFE Sync Angle	Parameters::Regen Control::AFE	REAL	x.xx	Min to Max	deg	NEVER	OPERATOR	3	03963
1721	AFE Status	Same as PNO 1703	USINT (enum)		0:INACTIVE 1:SYNCHRONIZING 2:SYNCHRONIZED 3:SUPPLY FREQ HIGH 4:SUPPLY FREQ LOW 5:SYNC FAILED		NEVER	OPERATOR	3	03969
1722	SB Digital Input 2	Monitor::Inputs and Outputs Parameters::System Board::System Board IO	BOOL				NEVER	OPERATOR		03971
1723	SB Digital Input 3	Same as PNO 1722	BOOL				NEVER	OPERATOR		03973
1725	Peer to Peer Enable	Setup::Communications::Peer to Peer Parameters::Base Comms::Peer to Peer	BOOL	FALSE			ALWAYS	TECHNICIAN		03977
1726	Destination IP Address	Same as PNO 1725	DWORD (IP addr)	255.255.255.255			ALWAYS	ENGINEER		03979
1727	Destination Port	Same as PNO 1725	UINT	1250	1 to 65535		ALWAYS	ENGINEER		03981
1728	Local Port	Same as PNO 1725	UINT	1250	1 to 65535		ALWAYS	ENGINEER		03983
1729	Peer to Peer State	Monitor::Communications::Peer to Peer Parameters::Base Comms::Peer to Peer	USINT (enum)		0:DISABLED 1:ACTIVE 2:ERROR		NEVER	OPERATOR		03985
1730	AFE Inductance	Setup::Regen Control Parameters::Regen Control::AFE	REAL	0.00	0.00 to 1000.00	mH	ALWAYS	OPERATOR		03987
1731	AFE Transf Angle Offset	Parameters::Regen Control::AFE	REAL	0.00	0.00 to 360.00	deg	ALWAYS	OPERATOR		03989
1732	Motor Start Count	Parameters::Device Manager::Runtime Statistics	UDINT		0 to Max		NEVER	TECHNICIAN	1	03991
1733	Time Since Power-On	Parameters::Device Manager::Runtime Statistics	TIME		0.000 to Max	s	NEVER	TECHNICIAN		03993
1734	AR Trip Mask B	Parameters::Motor Control::Auto Restart	DWORD	00000000			ALWAYS	TECHNICIAN		03995
1735	AR Trip Mask 2 B	Parameters::Motor Control::Auto Restart	DWORD	00000000			ALWAYS	TECHNICIAN		03997
1736	AR Initial Delay B	Parameters::Motor Control::Auto Restart	TIME	60.000	0.000 to 3600.000	s	ALWAYS	OPERATOR		03999
1737	AR Repeat Delay B	Parameters::Motor Control::Auto Restart	TIME	120.000	0.000 to 3600.000	s	ALWAYS	OPERATOR		04001
1738	Enable Auto Save	Parameters::Device Manager::Setup Wizard	BOOL	TRUE			ALWAYS	ENGINEER		04003
1739	System Board Required	Setup::Inputs and Outputs::System Board Option Parameters::System Board::System Board Option	USINT (enum)	0	0:NONE 1:DUAL ENCODER		CONFIG	TECHNICIAN		04005
1740	System Board Fitted	Parameters::System Board::System Board Option	USINT (enum)		Same as PNO 1739		NEVER	OPERATOR	1	04007
1741	System Board Status	Parameters::System Board::System Board Option	USINT (enum)		Same as PNO 1180		NEVER	OPERATOR		04009
1742	System Board FE State	Parameters::Device Manager::Device State	USINT (enum)		Same as PNO 989		NEVER	OPERATOR		04011
1743	Encoder Feedback	Setup::Motor Control::Control and Type Parameters::Control Mode::Control Mode	USINT (enum)	0	0:MAIN SPD FEEDBACK 1:SYSTEM BOARD SLOT 1 2:SYSTEM BOARD SLOT 2 3:NONE		STOPPED	TECHNICIAN	6	04013
1744	Slave Position Src	Parameters::Phase Control::Configure	USINT (enum)	0	0:SAME AS MOTOR FBK 1:MAIN SPD FEEDBACK 2:SYSTEM BOARD SLOT 1 3:SYSTEM BOARD SLOT 2		STOPPED	TECHNICIAN	6	04015
1745	Master Position Src	Parameters::Phase Control::Configure	USINT (enum)	3	Same as PNO 1743		STOPPED	TECHNICIAN	6	04017
1746	Speed Error Trip Enable	Parameters::Trips::Speed Error Trip	BOOL	TRUE			ALWAYS	TECHNICIAN		04019
1747	Speed Error Threshold	Parameters::Trips::Speed Error Trip	REAL	50.00	0.00 to 100.00	%	ALWAYS	TECHNICIAN		04021
1748	Speed Error Trip Delay	Parameters::Trips::Speed Error Trip	TIME	10.000	0.000 to 2000.000	s	ALWAYS	TECHNICIAN		04023
1749	Setup Successful	Parameters::Phase Control::Configure	BOOL				NEVER	TECHNICIAN		04025
1750	Error Number	Parameters::Phase Control::Configure	INT		-32768 to 32767		NEVER	TECHNICIAN		04027
1751	Master Encoder	Parameters::Phase Control::Configure	USINT (enum)		0:EMPTY FUNC 1:ESTIMATOR 2:PRIMARY 3:SYSTEM BOARD SLOT 1 4:SYSTEM BOARD SLOT 2 5:OTHER		NEVER	TECHNICIAN		04029
1752	Slave Encoder	Parameters::Phase Control::Configure	USINT (enum)		Same as PNO 1751		NEVER	TECHNICIAN		04031

# Parameter Reference D-237

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
1753	Spd Loop Encoder	Parameters::Phase Control::Configure	USINT (enum)		Same as PNO 1751		NEVER	TECHNICIAN		04033
1754	Free Space (kBytes)	Parameters::Device Manager::Flash File System	UDINT		0 to Max		NEVER	ENGINEER		04035
1756	Output A	Setup::Inputs and Outputs::System Board Option Parameters::System Board::System Board IO	BOOL	FALSE			ALWAYS	OPERATOR		04039
1757	Output B	Same as PNO 1756	BOOL	FALSE			ALWAYS	OPERATOR		04041
1758	Output Z	Same as PNO 1756	BOOL	FALSE			ALWAYS	OPERATOR		04043
1759	SB Digital Input 1	Monitor::Inputs and Outputs Parameters::System Board::System Board IO	BOOL				NEVER	OPERATOR		04045
1760	Display Warnings	Parameters::Trips::Trips Status	BOOL	TRUE			ALWAYS	OPERATOR		04047
1762	Thermistor Warn Delta	Parameters::Option IO::Thermistor	REAL	100	0 to 4500	Ohm	ALWAYS	TECHNICIAN		04051
1779	Auto Hide	Parameters::Device Manager::Setup Wizard	BOOL	TRUE			ALWAYS	ENGINEER		04085
1780	Spd Limiter Torq Ctrl	Parameters::Motor Control::Spd Loop Settings	BOOL	FALSE			ALWAYS	TECHNICIAN		04087
1781	Speed Limiter Active	Parameters::Motor Control::Spd Loop Diagnostics	BOOL				NEVER	TECHNICIAN		04089
1782	Free Sockets	Parameters::Base Comms::Ethernet	UINT		0 to 65535		NEVER	ENGINEER		04091
1783	Encoder Count Init	Parameters::Option IO::Encoder	BOOL	TRUE			ALWAYS	TECHNICIAN		04093
1784	Encoder Count Init	Parameters::System Board::Encoder Slot 1	BOOL	TRUE			ALWAYS	TECHNICIAN		04095
1785	Encoder Count Init	Parameters::System Board::Encoder Slot 2	BOOL	TRUE			ALWAYS	TECHNICIAN		04097
1787	PTP Domain Number	Setup::Communications::PTP Parameters::Base Comms::PTP	USINT	0	0 to 127		ALWAYS	ENGINEER		04101
1790	Resolver Voltage	Setup::Inputs and Outputs::Option Parameters::Option IO::Resolver	USINT (enum)	4	0:0V 1:4V 2:5V 3:6V 4:7V 5:8V 6:9V 7:10V 8:11V 9:12V		STOPPED	TECHNICIAN		04107
1791	Resolver Frequency	Same as PNO 1790	REAL	8.0	2.0 to 20.0	kHz	STOPPED	TECHNICIAN		04109
1792	Resolver Ratio	Same as PNO 1790	REAL	0.50	0.15 to 3.00		STOPPED	TECHNICIAN		04111
1793	Resolver Poles	Same as PNO 1790	INT	2	2 to 100		STOPPED	TECHNICIAN		04113
1794	Soft Key 2 Mode	Parameters::Keypad::Graphical Keypad	USINT (enum)	0	0:LOCAL / REMOTE 1:FORWARD / REVERSE 2:CUSTOM		ALWAYS	OPERATOR		04115
1795	Soft Key 2 Value	Parameters::Keypad::Graphical Keypad	BOOL	FALSE			ALWAYS	OPERATOR	2	04117
1796	Alignment On Power On	Setup::Motor Control::Pos Fbk Alignment Parameters::Motor Control::Pos Fbk Alignment	BOOL	FALSE			STOPPED	TECHNICIAN	6	04119
1797	Alignment Method	Same as PNO 1796	USINT (enum)	0	0:MANUAL 1:AUTOMATIC 2:DIRECTION TEST		STOPPED	TECHNICIAN	6	04121
1798	Alignment Enable	Same as PNO 1796	BOOL	FALSE			STOPPED	TECHNICIAN	2	04123
1799	Alignment Level	Same as PNO 1796	REAL	50	0 to 150	%	ALWAYS	TECHNICIAN	6	04125
1800	Alignment Ramp Time	Same as PNO 1796	TIME	1.000	0.000 to 30.000	s	ALWAYS	TECHNICIAN	6	04127
1801	Alignment On Motor	Same as PNO 1796	USINT (enum)	0	0:PHASE U 1:PHASE V 2:PHASE W		ALWAYS	TECHNICIAN	6	04129
1802	Alignment Offset	Parameters::Motor Control::Pos Fbk Alignment	REAL	x.x	-180.0 to 180.0	deg	NEVER	TECHNICIAN		04131
1803	Alignment Elec Pos	Parameters::Motor Control::Pos Fbk Alignment	REAL	x.x	-180.0 to 180.0	deg	NEVER	TECHNICIAN		04133
1804	Alignment Direction	Parameters::Motor Control::Pos Fbk Alignment	USINT (enum)		0:STANDARD 1:REVERSE		NEVER	TECHNICIAN		04135
1805	Alignment State	Parameters::Motor Control::Pos Fbk Alignment	USINT (enum)		0:OFF 1:ON MANUAL 2:ON AUTO 3:ERROR 4:ENDED		NEVER	TECHNICIAN		04137
1806	Alignment Ended	Parameters::Motor Control::Pos Fbk Alignment	BOOL				NEVER	TECHNICIAN		04139
1807	Alignment Error	Parameters::Motor Control::Pos Fbk Alignment	USINT (enum)		0:NO ERROR 1:SHAFT LOCKED 2:AMPS 3:LOAD 4:POLES 5:MOTOR UNCONNECTED 6:ENCODER 7:INIT NEEDED		NEVER	TECHNICIAN		04141

# D-238 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
1808	PMAC Encoder Offset	Setup::Motor Control::Motor Data PMAC Parameters::Motor Control::PMAC Motor Data	REAL	0.0	-180.0 to 180.0	deg	ALWAYS	TECHNICIAN	6	04143
1809	PMAC Wiring	Setup::Motor Control::Motor Data PMAC Monitor::Motor and Drive Parameters::Motor Control::PMAC Motor Data	USINT (enum)	0	Same as PNO 1804		ALWAYS	TECHNICIAN	6	04145
1810	Resolver Invert	Same as PNO 1790	BOOL	FALSE			STOPPED	TECHNICIAN		04147
1811	Resolver Turns	Monitor::Inputs and Outputs Parameters::Option IO::Resolver	DINT		Min to Max		NEVER	TECHNICIAN	1	04149
1812	Resolver Fraction Turns	Same as PNO 1811	DINT		Min to Max		NEVER	TECHNICIAN	1	04151
1813	Resolver speed RPM	Parameters::Option IO::Resolver	REAL	x.x	Min to Max	RPM	NEVER	TECHNICIAN		04153
1814	Resolver Speed %	Same as PNO 1811	REAL	x.x	Min to Max	%	NEVER	TECHNICIAN		04155
1815	Resolver Speed Filter	Same as PNO 1790	REAL	1000	10 to 10000	%	ALWAYS	TECHNICIAN		04157
1816	Resolver Resolution	Same as PNO 1790	USINT (enum)	0	0:AUTO 1:12 BITS 2:14 BITS 3:16 BITS		STOPPED	TECHNICIAN		04159
1817	Resolver State	Parameters::Option IO::Resolver	USINT (enum)		0:POWER_ON 1:RESET 2:ACTIVE 3:TRIPPED 4:RESTART		NEVER	TECHNICIAN		04161
1818	Resolver Turns Reset	Parameters::Option IO::Resolver	BOOL	FALSE			STOPPED	TECHNICIAN	2	04163
1819	Resolver Reset Power On	Parameters::Option IO::Resolver	BOOL	FALSE			STOPPED	TECHNICIAN		04165
1820	Resolver Trip Type	Parameters::Option IO::Resolver	USINT (enum)		0:NONE 1:PARITY 2:PHASE ERROR 3:MAX VELOCITY 4:TRACKING ERROR 5:SIN COS MISMATCH 6:SIN COS OVERRANGE 7:SIN COS BELOW LOS 8:SIN COS CLIPPED		NEVER	TECHNICIAN		04167
1821	Resolver Speed Hz	Parameters::Option IO::Resolver	REAL	x.x	Min to Max	Hz	NEVER	TECHNICIAN		04169
1822	Resolver Built-In Gear	Same as PNO 1790	REAL	1.0	0.1 to 1000.0		STOPPED	TECHNICIAN		04171
1823	Resolver Speed Ripple	Parameters::Option IO::Resolver	REAL	x.xx	0.00 to 1000.00	%	NEVER	TECHNICIAN		04173
1824	resolver position	Same as PNO 1811	INT		-32768 to 32767		NEVER	ENGINEER	1	04175
1825	Resolver Max Speed	Setup::Inputs and Outputs::Option Parameters::Option IO::Resolver	REAL	20000	0 to 120000	RPM	STOPPED	TECHNICIAN		04177
1826	Resolver Actual Filter	Parameters::Option IO::Resolver	REAL	x.	20 to 8000	Hz	NEVER	TECHNICIAN		04179
1827	resolver active resol	Parameters::Option IO::Resolver	USINT (enum)		Same as PNO 1816		NEVER	ENGINEER		04181
1829	Copy to SD Card	Parameters::Trips::Black Box Recorder	BOOL	FALSE			ALWAYS	TECHNICIAN	2	04185
1830	Black Box PNOs	Parameters::Trips::Black Box Recorder	ARRAY[0..3]				ALWAYS	TECHNICIAN		04187
1831	Black Box PNOs[0]	Parameters::Trips::Black Box Recorder	UINT	0829	0000 to 3131		ALWAYS	TECHNICIAN	2	04189
1832	Black Box PNOs[1]	Parameters::Trips::Black Box Recorder	UINT	0514	0000 to 3131		ALWAYS	TECHNICIAN	2	04191
1833	Black Box PNOs[2]	Parameters::Trips::Black Box Recorder	UINT	1022	0000 to 3131		ALWAYS	TECHNICIAN	2	04193
1834	Black Box PNOs[3]	Parameters::Trips::Black Box Recorder	UINT	0393	0000 to 3131		ALWAYS	TECHNICIAN	2	04195
1835	Log Enable	Parameters::Device Manager::Data Logger	BOOL	FALSE			ALWAYS	TECHNICIAN		04197
1836	Log Period	Parameters::Device Manager::Data Logger	TIME	1.000	0.500 to 86400.000	s	ALWAYS	TECHNICIAN		04199
1837	Log File Name	Parameters::Device Manager::Data Logger	STRING[10]	logfile_			ALWAYS	TECHNICIAN		04201
1838	Log to New File	Parameters::Device Manager::Data Logger	BOOL	FALSE			ALWAYS	TECHNICIAN	2	04203
1839	Log New File On Reset	Parameters::Device Manager::Data Logger	BOOL	FALSE			ALWAYS	TECHNICIAN		04205
1840	Limit Log File Size	Parameters::Device Manager::Data Logger	BOOL	FALSE			ALWAYS	TECHNICIAN		04207
1841	Log File Size	Parameters::Device Manager::Data Logger	UDINT		0 to Max		NEVER	TECHNICIAN		04209
1842	Log Parameters	Parameters::Device Manager::Data Logger	ARRAY[0..7]				ALWAYS	TECHNICIAN		04211
1843	Log Parameters[0]	Parameters::Device Manager::Data Logger	UINT	0000	0000 to 3131		ALWAYS	TECHNICIAN		04213
1844	Log Parameters[1]	Parameters::Device Manager::Data Logger	UINT	0000	0000 to 3131		ALWAYS	TECHNICIAN		04215
1845	Log Parameters[2]	Parameters::Device Manager::Data Logger	UINT	0000	0000 to 3131		ALWAYS	TECHNICIAN		04217
1846	Log Parameters[3]	Parameters::Device Manager::Data Logger	UINT	0000	0000 to 3131		ALWAYS	TECHNICIAN		04219
1847	Log Parameters[4]	Parameters::Device Manager::Data Logger	UINT	0000	0000 to 3131		ALWAYS	TECHNICIAN		04221
1848	Log Parameters[5]	Parameters::Device Manager::Data Logger	UINT	0000	0000 to 3131		ALWAYS	TECHNICIAN		04223
1849	Log Parameters[6]	Parameters::Device Manager::Data Logger	UINT	0000	0000 to 3131		ALWAYS	TECHNICIAN		04225
1850	Log Parameters[7]	Parameters::Device Manager::Data Logger	UINT	0000	0000 to 3131		ALWAYS	TECHNICIAN		04227
1851	Resolver Min Filter	Same as PNO 1825	REAL	100	10 to 1000	Hz	ALWAYS	TECHNICIAN		04229

# Parameter Reference D-239

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
1852	Copy Status	Parameters::Trips::Black Box Recorder	USINT (enum)		0:IDLE 1:ACTIVE 2:ERROR		NEVER	OPERATOR		04231
1853	Comms Reset Allow	Setup::Communications::Option Parameters::Option Comms::Comms	BOOL	FALSE			ALWAYS	TECHNICIAN		04233
3000	Input Mapping	Setup::Communications::Base EtherNet IP Parameters::Base Comms::Fieldbus Mapping	ARRAY[0..31]				CONFIG	ENGINEER		06527
3001	Input Mapping[0]	Same as PNO 3000	UINT	0627	0000 to 3131		CONFIG	ENGINEER		06529
3002	Input Mapping[1]	Same as PNO 3000	UINT	0681	0000 to 3131		CONFIG	ENGINEER		06531
3003	Input Mapping[2]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06533
3004	Input Mapping[3]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06535
3005	Input Mapping[4]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06537
3006	Input Mapping[5]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06539
3007	Input Mapping[6]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06541
3008	Input Mapping[7]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06543
3009	Input Mapping[8]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06545
3010	Input Mapping[9]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06547
3011	Input Mapping[10]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06549
3012	Input Mapping[11]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06551
3013	Input Mapping[12]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06553
3014	Input Mapping[13]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06555
3015	Input Mapping[14]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06557
3016	Input Mapping[15]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06559
3017	Input Mapping[16]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06561
3018	Input Mapping[17]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06563
3019	Input Mapping[18]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06565
3020	Input Mapping[19]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06567
3021	Input Mapping[20]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06569
3022	Input Mapping[21]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06571
3023	Input Mapping[22]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06573
3024	Input Mapping[23]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06575
3025	Input Mapping[24]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06577
3026	Input Mapping[25]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06579
3027	Input Mapping[26]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06581
3028	Input Mapping[27]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06583
3029	Input Mapping[28]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06585
3030	Input Mapping[29]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06587
3031	Input Mapping[30]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06589
3032	Input Mapping[31]	Same as PNO 3000	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06591
3064	Output Mapping	Setup::Communications::Base EtherNet IP Parameters::Base Comms::Fieldbus Mapping	ARRAY[0..31]				CONFIG	ENGINEER		06655
3065	Output Mapping[0]	Same as PNO 3064	UINT	0661	0000 to 3131		CONFIG	ENGINEER		06657
3066	Output Mapping[1]	Same as PNO 3064	UINT	0395	0000 to 3131		CONFIG	ENGINEER		06659
3067	Output Mapping[2]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06661
3068	Output Mapping[3]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06663
3069	Output Mapping[4]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06665
3070	Output Mapping[5]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06667
3071	Output Mapping[6]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06669
3072	Output Mapping[7]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06671
3073	Output Mapping[8]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06673
3074	Output Mapping[9]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06675
3075	Output Mapping[10]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06677
3076	Output Mapping[11]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06679
3077	Output Mapping[12]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06681
3078	Output Mapping[13]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06683
3079	Output Mapping[14]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06685
3080	Output Mapping[15]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06687
3081	Output Mapping[16]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06689
3082	Output Mapping[17]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06691
3083	Output Mapping[18]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06693
3084	Output Mapping[19]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06695
3085	Output Mapping[20]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06697
3086	Output Mapping[21]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06699
3087	Output Mapping[22]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06701
3088	Output Mapping[23]	Same as PNO 3064	UINT	0000	0000 to 3131		CONFIG	ENGINEER		06703

# D-240 Parameter Reference

PNO	Name	Path	Type	Default	Range	Units	WQ	View	Notes	Mbus
3089	Output Mapping[24]	Same as PNO 3064	UINT	0000	0000 to 3131			CONFIG	ENGINEER	06705
3090	Output Mapping[25]	Same as PNO 3064	UINT	0000	0000 to 3131			CONFIG	ENGINEER	06707
3091	Output Mapping[26]	Same as PNO 3064	UINT	0000	0000 to 3131			CONFIG	ENGINEER	06709
3092	Output Mapping[27]	Same as PNO 3064	UINT	0000	0000 to 3131			CONFIG	ENGINEER	06711
3093	Output Mapping[28]	Same as PNO 3064	UINT	0000	0000 to 3131			CONFIG	ENGINEER	06713
3094	Output Mapping[29]	Same as PNO 3064	UINT	0000	0000 to 3131			CONFIG	ENGINEER	06715
3095	Output Mapping[30]	Same as PNO 3064	UINT	0000	0000 to 3131			CONFIG	ENGINEER	06717
3096	Output Mapping[31]	Same as PNO 3064	UINT	0000	0000 to 3131			CONFIG	ENGINEER	06719
3128	EtherNet IP Enable	Setup::Communications::Base EtherNet IP Parameters::Base Comms::EtherNet IP Adapter	BOOL	FALSE				CONFIG	TECHNICIAN	06783
3129	EtherNet IP Trip	Same as PNO 3128	USINT (enum)	1	0:DISABLED 1:LOSS OF CONNECTION			CONFIG	ENGINEER	06785
3130	EtherNet IP State	Monitor::Communications::Base EtherNet IP Parameters::Base Comms::EtherNet IP Adapter	USINT (enum)		Same as PNO 214			NEVER	OPERATOR	06787
3131	EtherNet IP Diag	Same as PNO 3130	USINT (enum)		0:NONE 1:INPUT MAPPING FAILED 2:OUTPUT MAPPING FAILED			NEVER	OPERATOR	06789



## Table of Parameters in Alphabetical Order

This table is a list of all the parameters in the AC30V showing the parameter name, number and the section in this appendix in which the parameter is described.

PNO	Name	Path
0332	100% Mot Current	Motor Load
0464	100% Speed in RPM	Scale Setpoint
0403	100% Stack Current A	Feedbacks
0343	100% Stk Current	Stack Inv Time
0450	Acceleration Boost	Fluxing VHz
0486	Acceleration Time	Ramp
0763	Active 1 - 32	Trips Status
0513	Active 33 - 64	Trips Status
0400	Actual Field Current	Feedbacks
0339	Actual Mot I2T Output	Motor Load
0421	Actual Neg Torque Lim	Torque Limit
1013	actual period	Tasks
1014	actual period[0]	Tasks
1015	actual period[1]	Tasks
1016	actual period[2]	Tasks
0420	Actual Pos Torque Lim	Torque Limit
1520	Actual Rotor T Const	Tr Adaptation
0395	Actual Speed Percent	Feedbacks
0393	Actual Speed RPM	Feedbacks
0394	Actual Speed rps	Feedbacks
0989	Actual State	Device State
0399	Actual Torque	Feedbacks
0199	Address Assignment	Option Ethernet
1716	AFE Brake Mode	AFE
1690	AFE Close Ext PCR	AFE
1717	AFE Correcion Angle	AFE
1693	AFE Current Control	AFE
1714	AFE Enable Drive	AFE
1691	AFE Ext PCR Closed	AFE
1704	AFE Id Demand	AFE
1719	afe id output	AFE
1730	AFE Inductance	AFE
1705	AFE Iq Demand	AFE
1720	afe iq output	AFE
1706	AFE Max Current	AFE
1692	AFE PF Angle Demand	AFE
1715	AFE Phase Loss	AFE
1694	AFE PLL Kp	AFE
1695	AFE PLL Ti	AFE
1721	AFE Status	AFE
1718	AFE Sync Angle	AFE
1703	AFE Sync Frequency	AFE
1713	AFE Synchronized	AFE
1712	AFE Synchronizing	AFE
1724	afe torque mode	AFE
1731	AFE Transf Angle Offset	AFE
1711	AFE VDC Demand	AFE
1710	AFE VDC Feed Forward	AFE
1707	AFE VDC Kp	AFE
1697	AFE VDC Min Level	AFE

PNO	Name	Path
1709	AFE VDC Ramp	AFE
1708	AFE VDC Ti	AFE
1804	Alignment Direction	Pos Fbk Alignment
1803	Alignment Elec Pos	Pos Fbk Alignment
1798	Alignment Enable	Pos Fbk Alignment
1806	Alignment Ended	Pos Fbk Alignment
1807	Alignment Error	Pos Fbk Alignment
1799	Alignment Level	Pos Fbk Alignment
1797	Alignment Method	Pos Fbk Alignment
1802	Alignment Offset	Pos Fbk Alignment
1801	Alignment On Motor	Pos Fbk Alignment
1796	Alignment On Power On	Pos Fbk Alignment
1800	Alignment Ramp Time	Pos Fbk Alignment
1805	Alignment State	Pos Fbk Alignment
0040	Anin 01 Break	IO Values
0957	Anin 01 Offset	IO Configure
0958	Anin 01 Scale	IO Configure
0001	Anin 01 Type	IO Configure
0039	Anin 01 Value	IO Values
0959	Anin 02 Offset	IO Configure
0960	Anin 02 Scale	IO Configure
0002	Anin 02 Type	IO Configure
0041	Anin 02 Value	IO Values
1461	Anin 11 Offset	General Purpose IO
1462	Anin 11 Scale	General Purpose IO
1181	Anin 11 Value	General Purpose IO
1463	Anin 12 Offset	General Purpose IO
1464	Anin 12 Scale	General Purpose IO
1182	Anin 12 Value	General Purpose IO
1465	Anin 13 Offset	General Purpose IO
1466	Anin 13 Scale	General Purpose IO
1183	Anin 13 Value	General Purpose IO
1441	Anout 01 ABS	IO Configure
1108	Anout 01 Offset	IO Configure
0686	Anout 01 Scale	IO Configure
0003	Anout 01 Type	IO Configure
0042	Anout 01 Value	IO Values
1468	Anout 02 ABS	IO Configure
1467	Anout 02 Offset	IO Configure
1460	Anout 02 Scale	IO Configure
0004	Anout 02 Type	IO Configure
0043	Anout 02 Value	IO Values
0610	App Control Word	Sequencing
0680	App Reference	Sequencing
1539	Application	Clone
1039	Application Archive	SD Card
0990	Application FE State	Device State
1554	Application Name	App Info
1633	Application User Boost	Fluxing VHz
1549	Application Volts	Fluxing VHz

PNO	Name	Path
1507	AR Active	Auto Restart
1469	AR Enable	Auto Restart
1505	AR Initial Delay	Auto Restart
1736	AR Initial Delay B	Auto Restart
1471	AR Max Restarts	Auto Restart
1470	AR Mode	Auto Restart
1506	AR Repeat Delay	Auto Restart
1737	AR Repeat Delay B	Auto Restart
1508	AR Restart Pending	Auto Restart
1509	AR Restarts Remaining	Auto Restart
1510	AR Time Remaining	Auto Restart
1472	AR Trip Mask	Auto Restart
0796	AR Trip Mask 2	Auto Restart
1735	AR Trip Mask 2 B	Auto Restart
1734	AR Trip Mask B	Auto Restart
0410	Archive Flags	App Info
0275	atn imr loop i gain	Autotune
0276	atn leakage l test curr	Autotune
0277	atn leakage l test freq	Autotune
1405	ATN PMAC Ls Test Freq	Autotune
1388	ATN PMAC Test Disable	Autotune
0695	Attached to Stack	Drive info
0448	Auto Boost	Fluxing VHz
0449	auto boost tc	Fluxing VHz
1779	Auto Hide	Setup Wizard
0930	Auto IP	Ethernet
0375	automatic mode tc	Voltage Control
0255	Autotune Enable	Autotune
0256	Autotune Mode	Autotune
0274	Autotune Ramp Time	Autotune
0257	Autotune Test Disable	Autotune
1093	BACnet Baud Rate	BACnet MSTP
0209	BACnet IP Device ID	BACnet IP
0208	BACnet IP State	BACnet IP
0210	BACnet IP Timeout	BACnet IP
1091	BACnet MAC Address	BACnet MSTP
1096	BACnet Max Info Frames	BACnet MSTP
1095	BACnet Max Master	BACnet MSTP
1092	BACnet MSTP Device ID	BACnet MSTP
1089	BACnet MSTP State	BACnet MSTP
1094	BACnet MSTP Timeout	BACnet MSTP
0457	Base Frequency	Motor Nameplate
0991	Base IO FE State	Device State
0456	Base Voltage	Motor Nameplate
0992	Basic Drive FE State	Device State
1830	Black Box PNOs	Black Box Recorder
1831	Black Box PNOs[0]	Black Box Recorder
1832	Black Box PNOs[1]	Black Box Recorder
1833	Black Box PNOs[2]	Black Box Recorder
1834	Black Box PNOs[3]	Black Box Recorder

# D-242 Parameter Reference

PNO	Name	Path
0951	Boot Version	Drive info
0687	Boot Version Number	Drive info
0253	Brake Overrating	Braking
0252	Brake Rated Power	Braking
0251	Brake Resistance	Braking
0254	Braking Active	Braking
0249	Braking Enable	Braking
1251	CANopen Actual Baud	CANopen
0213	CANopen Baud Rate	CANopen
0212	CANopen Node Address	CANopen
0211	CANopen State	CANopen
1034	Card Name	SD Card
1033	Card State	SD Card
1147	channel	Fast Trace Config
1156	channel address	Fast Trace Config
1157	channel address[0]	Fast Trace Config
1158	channel address[1]	Fast Trace Config
1159	channel address[2]	Fast Trace Config
1160	channel address[3]	Fast Trace Config
1161	channel address[4]	Fast Trace Config
1162	channel address[5]	Fast Trace Config
1163	channel address[6]	Fast Trace Config
1164	channel address[7]	Fast Trace Config
1148	channel[0]	Fast Trace Config
1149	channel[1]	Fast Trace Config
1150	channel[2]	Fast Trace Config
1151	channel[3]	Fast Trace Config
1152	channel[4]	Fast Trace Config
1153	channel[5]	Fast Trace Config
1154	channel[6]	Fast Trace Config
1155	channel[7]	Fast Trace Config
1537	Clone Direction	Clone
1534	Clone Filename	Clone
1542	Clone Start	Clone
1543	Clone Status	Clone
0406	CM Temperature	Feedbacks
0217	CNet Consuming Inst	ControlNet
0216	CNet Producing Inst	ControlNet
0627	Comms Control Word	Sequencing
0051	Comms Diagnostic	Comms
0052	Comms Diagnostic Code	Comms
0186	Comms Event Active	Event
0188	Comms Event Clear	Event
0185	Comms Event Code	Event
0187	Comms Event Set	Event
0053	Comms Exception	Comms
0045	Comms Fitted	Comms
0050	Comms Module Serial	Comms
0049	Comms Module Version	Comms
0054	Comms Net Exception	Comms
0995	Comms Option FE State	Device State
1121	Comms Option Pcode	Drive info
1129	Comms Option Serial	Drive info
0681	Comms Reference	Sequencing
0044	Comms Required	Comms

PNO	Name	Path
1853	Comms Reset Allow	Comms
0046	Comms State	Comms
0047	Comms Supervised	Comms
0048	Comms Trip Enable	Comms
0997	Config Fault Area	Device State
1139	Control Board Up Time	Runtime Statistics
1116	Control Module Pcode	Drive info
0977	Control Module Serial	Drive info
1352	Control Screen	Soft Menus
0908	Control Screen Mode	Soft Menus
1353	Control Screen[0]	Control Screen;Soft Menus
1354	Control Screen[1]	Control Screen;Soft Menus
1355	Control Screen[2]	Control Screen;Soft Menus
1356	Control Screen[3]	Control Screen;Soft Menus
1357	Control Screen[4]	Control Screen;Soft Menus
1358	Control Screen[5]	Control Screen;Soft Menus
0512	Control Strategy	Control Mode
1533	Control Type	Control Mode
0644	Control Word	Sequencing
0215	ControlNet MAC ID	ControlNet
0214	ControlNet State	ControlNet
1852	Copy Status	Black Box Recorder
1829	Copy to SD Card	Black Box Recorder
1658	Current Diff Level	Current Sensor Trip
0305	Current Limit	Current Limit
0306	current limit output	Current Limit
0541	current loop i gain	Current Loop
0538	current loop p gain	Current Loop
0546	current loop saturated	Current Loop
1545	Cut Off Frequency	Filter On Torque Dmd
1177	data points captured	Fast Trace Status
0329	DC Current Level	Inj Braking
0331	DC Inj Base Volts	Inj Braking
0326	DC Inj Current Limit	Inj Braking
0324	DC Inj Deflux Time	Inj Braking
0325	DC Inj Frequency	Inj Braking
0330	DC Inj Timeout	Inj Braking
0396	DC Link Volt Filtered	Feedbacks
0392	DC Link Voltage	Feedbacks
0327	DC Pulse Time	Inj Braking
0487	Deceleration Time	Ramp
0414	Deflux Delay	Pattern Generator
1635	Delay To Start	Motor Sequencer
1528	Demanded Terminal Volts	Tr Adaptation
1726	Destination IP Address	Peer to Peer
1727	Destination Port	Peer to Peer
0221	DeviceNet Actual Baud	DeviceNet
0220	DeviceNet Baud Rate	DeviceNet
0219	DeviceNet MAC ID	DeviceNet
0218	DeviceNet State	DeviceNet
0929	DHCP	Ethernet
1269	DHCP State	Ethernet
0005	Digin Value	IO Values
0022	Digout Value	IO Values
0532	direct input filt tc	Spd Direct Input

PNO	Name	Path
0531	Direct Input Neg Lim	Spd Direct Input
0530	Direct Input Pos Lim	Spd Direct Input
0529	Direct Input Ratio	Spd Direct Input
0528	Direct Input Select	Spd Direct Input
0983	Display Timeout	Graphical Keypad
1760	Display Warnings	Trips Status
0223	DNet Consuming Inst	DeviceNet
0222	DNet Producing Inst	DeviceNet
0688	Drive Diagnostic	Drive info
0961	Drive Name	Drive info
0390	Duty Selection	Feedbacks
1021	elapsed time	Tasks
1025	elapsed time max	Tasks
1026	elapsed time max[0]	Tasks
1027	elapsed time max[1]	Tasks
1028	elapsed time max[2]	Tasks
1022	elapsed time[0]	Tasks
1023	elapsed time[1]	Tasks
1024	elapsed time[2]	Tasks
0408	Elec Rotor Speed	Feedbacks
1144	enable	Fast Trace Config
0697	Enable 1 - 32	Trips Status
0730	Enable 33 - 64	Trips Status
1738	Enable Auto Save	Setup Wizard
0548	enable cur test	Stimulus
0540	enable decoupling term	Current Loop
0542	enable integral term	Current Loop
1530	enable kvar compn	Tr Adaptation
0955	Enable Predict Term	Current Loop
1518	Encoder Count	Encoder
1670	Encoder Count	Encoder Slot 1
1677	Encoder Count	Encoder Slot 2
1783	Encoder Count Init	Encoder
1784	Encoder Count Init	Encoder Slot 1
1785	Encoder Count Init	Encoder Slot 2
1517	Encoder Count Reset	Encoder
1669	Encoder Count Reset	Encoder Slot 1
1676	Encoder Count Reset	Encoder Slot 2
1743	Encoder Feedback	Control Mode
1513	Encoder Invert	Encoder
1665	Encoder Invert	Encoder Slot 1
1672	Encoder Invert	Encoder Slot 2
1512	Encoder Lines	Encoder
1664	Encoder Lines	Encoder Slot 1
1671	Encoder Lines	Encoder Slot 2
1515	Encoder Single Ended	Encoder
1516	Encoder Speed	Encoder
1668	Encoder Speed	Encoder Slot 1
1675	Encoder Speed	Encoder Slot 2
1511	Encoder Supply	Encoder
1663	Encoder Supply	Encoder Slot 1
1761	Encoder Supply	Encoder Slot 2
1514	Encoder Type	Encoder
1666	Encoder Type	Encoder Slot 1
1673	Encoder Type	Encoder Slot 2

PNO	Name	Path
0383	Energy kWh	Energy Meter
0379	energy meter enable	Energy Meter
0451	Energy Saving Enable	Fluxing VHz
1526	Energy Saving Lower Lim	Fluxing VHz
0227	ENet Consuming Inst	EtherNet IP
0226	ENet Producing Inst	EtherNet IP
1637	Engineer Password	Graphical Keypad
1750	Error Number	Configure
0322	error scaler	Flycatching
0224	EtherCAT State	EtherCAT
0937	Ethernet Diagnostic	Ethernet
0993	Ethernet FE State	Device State
3131	EtherNet IP Diag	EtherNet IP Adapter
3128	EtherNet IP Enable	EtherNet IP Adapter
0225	EtherNet IP State	EtherNet IP
3130	EtherNet IP State	EtherNet IP Adapter
3129	EtherNet IP Trip	EtherNet IP Adapter
0919	Ethernet State	Ethernet
1548	Factor	Filter On Torque Dmd
0418	Fast Stop Torque Lim	Torque Limit
1188	Favourites	Soft Menus
1189	Favourites[0]	Favourites;Soft Menus
1190	Favourites[1]	Favourites;Soft Menus
1199	Favourites[10]	Favourites;Soft Menus
1200	Favourites[11]	Favourites;Soft Menus
1201	Favourites[12]	Favourites;Soft Menus
1202	Favourites[13]	Favourites;Soft Menus
1203	Favourites[14]	Favourites;Soft Menus
1204	Favourites[15]	Favourites;Soft Menus
1205	Favourites[16]	Favourites;Soft Menus
1206	Favourites[17]	Favourites;Soft Menus
1207	Favourites[18]	Favourites;Soft Menus
1208	Favourites[19]	Favourites;Soft Menus
1191	Favourites[2]	Favourites;Soft Menus
1192	Favourites[3]	Favourites;Soft Menus
1193	Favourites[4]	Favourites;Soft Menus
1194	Favourites[5]	Favourites;Soft Menus
1195	Favourites[6]	Favourites;Soft Menus
1196	Favourites[7]	Favourites;Soft Menus
1197	Favourites[8]	Favourites;Soft Menus
1198	Favourites[9]	Favourites;Soft Menus
1544	Filter Type	Filter On Torque Dmd
0918	Filtered VDC Ripple	VDC Ripple
0328	Final DC Pulse Time	Inj Braking
0509	Final Stop Rate	Ramp
0954	fire mode desel time	Runtime Statistics
1038	Firmware	SD Card
0683	Firmware File Name	SD Card
1100	Firmware Version	Drive info
0696	First Trip	Trips Status
0447	Fixed Boost	Fluxing VHz
0202	Fixed Gateway Address	Option Ethernet
0200	Fixed IP Address	Option Ethernet
0201	Fixed Subnet Mask	Option Ethernet
0323	flying filter tc	Flycatching
0319	flying load level	Flycatching

PNO	Name	Path
0318	Flying Reflux Time	Flycatching
0312	Flying Start Mode	Flycatching
0986	frame size	Drive info
0938	Free Packets	Ethernet
1782	Free Sockets	Ethernet
1754	Free Space (kBytes)	Flash File System
1546	Frequency 1	Filter On Torque Dmd
1547	Frequency 2	Filter On Torque Dmd
1538	Full Restore	Clone
0928	Gateway Address	Ethernet
1142	GKP Password	Graphical Keypad
1755	half buffer full	Fast Trace Config
0407	Heatsink Temperature	Feedbacks
1667	High Input Threshold	Encoder Slot 1
1674	High Input Threshold	Encoder Slot 2
1828	high res i sampling	Feedbacks
0940	High Word First	Modbus
0232	High Word First RTU	Modbus RTU
0235	High Word First TCP	Modbus TCP
1145	hold	Fast Trace Config
1406	HV Power On Count	Runtime Statistics
1252	HV SMPS Up Time	Runtime Statistics
1563	hw underlap comp	Pattern Generator
0539	i gain adjustment	Current Loop
0309	i lim vhz i gain	Cur Lim VHz
0308	i lim vhz p gain	Cur Lim VHz
0397	id	Feedbacks
1048	IDE Version	App Info
1652	ilim slw on	Cur Lim VHz
0567	imr from feedback	IM Flux
0566	imr p gain	IM Flux
3000	Input Mapping	Fieldbus Mapping
3001	Input Mapping[0]	Fieldbus Mapping
3002	Input Mapping[1]	Fieldbus Mapping
3011	Input Mapping[10]	Fieldbus Mapping
3012	Input Mapping[11]	Fieldbus Mapping
3013	Input Mapping[12]	Fieldbus Mapping
3014	Input Mapping[13]	Fieldbus Mapping
3015	Input Mapping[14]	Fieldbus Mapping
3016	Input Mapping[15]	Fieldbus Mapping
3017	Input Mapping[16]	Fieldbus Mapping
3018	Input Mapping[17]	Fieldbus Mapping
3019	Input Mapping[18]	Fieldbus Mapping
3020	Input Mapping[19]	Fieldbus Mapping
3003	Input Mapping[2]	Fieldbus Mapping
3021	Input Mapping[20]	Fieldbus Mapping
3022	Input Mapping[21]	Fieldbus Mapping
3023	Input Mapping[22]	Fieldbus Mapping
3024	Input Mapping[23]	Fieldbus Mapping
3025	Input Mapping[24]	Fieldbus Mapping
3026	Input Mapping[25]	Fieldbus Mapping
3027	Input Mapping[26]	Fieldbus Mapping
3028	Input Mapping[27]	Fieldbus Mapping
3029	Input Mapping[28]	Fieldbus Mapping
3030	Input Mapping[29]	Fieldbus Mapping
3004	Input Mapping[3]	Fieldbus Mapping

PNO	Name	Path
3031	Input Mapping[30]	Fieldbus Mapping
3032	Input Mapping[31]	Fieldbus Mapping
3005	Input Mapping[4]	Fieldbus Mapping
3006	Input Mapping[5]	Fieldbus Mapping
3007	Input Mapping[6]	Fieldbus Mapping
3008	Input Mapping[7]	Fieldbus Mapping
3009	Input Mapping[8]	Fieldbus Mapping
3010	Input Mapping[9]	Fieldbus Mapping
0353	Inv Time Active	Stack Inv Time
0348	Inv Time Aiming Point	Stack Inv Time
0351	Inv Time Down Rate	Stack Inv Time
0349	Inv Time Output	Stack Inv Time
0350	Inv Time Up Rate	Stack Inv Time
0352	Inv Time Warning	Stack Inv Time
0996	IO Option FE State	Device State
1125	IO Option Pcode	Drive info
1134	IO Option Serial No	Drive info
1254	IO Option SW Version	Drive info
0926	IP Address	Ethernet
0207	IPConfig Enable	Option Ethernet
0398	iq	Feedbacks
1523	iq maximum ratio	Tr Adaptation
1522	iq minimum ratio	Tr Adaptation
0502	Jog Acceleration Time	Ramp
0503	Jog Deceleration Time	Ramp
0501	Jog Setpoint	Ramp
0994	Keypad FE State	Device State
1532	kvar compn i gain	Tr Adaptation
1531	kvar compn p gain	Tr Adaptation
0384	kwmin	Energy Meter
1263	i0 vs imr 0_4	Induction Motor Data
0589	i0 vs imr 0_5	Induction Motor Data
0588	i0 vs imr 0_6	Induction Motor Data
0587	i0 vs imr 0_7	Induction Motor Data
0586	i0 vs imr 0_8	Induction Motor Data
0585	i0 vs imr 0_9	Induction Motor Data
0584	i0 vs imr 1_0	Induction Motor Data
1005	Language	Setup Wizard
0931	Last Auto IP Address	Ethernet
1047	Last Modification	App Info
0570	Leakage Inductance	Induction Motor Data
1840	Limit Log File Size	Data Logger
1561	load at 2x nmplate rpm	Induction Motor Data
1562	load at nameplate rpm	Induction Motor Data
0591	Local	Sequencing
0593	local control word	Sequencing
1255	Local Dir Key Active	Local Control
1728	Local Port	Peer to Peer
1565	Local Power Up Mode	Sequencing
0592	Local Reference	Sequencing
1240	Local Reverse	Local Control
1239	Local Run Key Active	Local Control
1253	Local/Rem Key Active	Local Control
0936	Lock	Ethernet
1835	Log Enable	Data Logger
1837	Log File Name	Data Logger

# D-244 Parameter Reference

PNO	Name	Path
1841	Log File Size	Data Logger
1839	Log New File On Reset	Data Logger
1842	Log Parameters	Data Logger
1843	Log Parameters[0]	Data Logger
1844	Log Parameters[1]	Data Logger
1845	Log Parameters[2]	Data Logger
1846	Log Parameters[3]	Data Logger
1847	Log Parameters[4]	Data Logger
1848	Log Parameters[5]	Data Logger
1849	Log Parameters[6]	Data Logger
1850	Log Parameters[7]	Data Logger
1836	Log Period	Data Logger
1838	Log to New File	Data Logger
0344	Long Overload Level	Stack Inv Time
0345	Long Overload Time	Stack Inv Time
1524	loop response n * Tr	Tr Adaptation
0920	MAC Address	Ethernet
1090	macro id	Macro
0568	Magnetising Current	Induction Motor Data
0417	Main Torque Lim	Torque Limit
1636	Manufacturing Flags	Drive info
1632	Mapping Valid	Modbus
1751	Master Encoder	Configure
1745	Master Position Src	Configure
1527	Max Available Volts	Tr Adaptation
1017	max period	Tasks
1018	max period[0]	Tasks
1019	max period[1]	Tasks
1020	max period[2]	Tasks
1459	Max Spd when Autotuned	Autotune
0913	Max VDC Ripple	VDC Ripple
0939	Maximum Connections	Modbus
0376	measured dc link tc	Voltage Control
0317	Min Search Speed	Flycatching
1458	Modbus Conn Timeout	Modbus
0229	Modbus Device Address	Modbus RTU
1567	Modbus Mapping	Modbus
1568	Modbus Mapping[0]	Modbus
1569	Modbus Mapping[1]	Modbus
1578	Modbus Mapping[10]	Modbus
1579	Modbus Mapping[11]	Modbus
1580	Modbus Mapping[12]	Modbus
1581	Modbus Mapping[13]	Modbus
1582	Modbus Mapping[14]	Modbus
1583	Modbus Mapping[15]	Modbus
1570	Modbus Mapping[2]	Modbus
1571	Modbus Mapping[3]	Modbus
1572	Modbus Mapping[4]	Modbus
1573	Modbus Mapping[5]	Modbus
1574	Modbus Mapping[6]	Modbus
1575	Modbus Mapping[7]	Modbus
1576	Modbus Mapping[8]	Modbus
1577	Modbus Mapping[9]	Modbus
1640	Modbus Password	Modbus RTU
0230	Modbus RTU Baud Rate	Modbus RTU

PNO	Name	Path
0228	Modbus RTU State	Modbus RTU
0233	Modbus RTU Timeout	Modbus RTU
1659	Modbus TCP Password	Modbus
0234	Modbus TCP State	Modbus TCP
0236	Modbus TCP Timeout	Modbus TCP
0941	Modbus Timeout	Modbus
0942	Modbus Trip Enable	Modbus
1165	mode	Fast Trace Config
1270	Monitor	Soft Menus
1271	Monitor[0]	Soft Menus
1272	Monitor[1]	Soft Menus
1281	Monitor[10]	Soft Menus
1282	Monitor[11]	Soft Menus
1283	Monitor[12]	Soft Menus
1284	Monitor[13]	Soft Menus
1285	Monitor[14]	Soft Menus
1286	Monitor[15]	Soft Menus
1287	Monitor[16]	Soft Menus
1288	Monitor[17]	Soft Menus
1289	Monitor[18]	Soft Menus
1290	Monitor[19]	Soft Menus
1273	Monitor[2]	Soft Menus
1274	Monitor[3]	Soft Menus
1275	Monitor[4]	Soft Menus
1276	Monitor[5]	Soft Menus
1277	Monitor[6]	Soft Menus
1278	Monitor[7]	Soft Menus
1279	Monitor[8]	Soft Menus
1280	Monitor[9]	Soft Menus
0340	Mot I2T Active	Motor Load
0342	Mot I2T Enable	Motor Load
0338	Mot I2T TC	Motor Load
0341	Mot I2T Warning	Motor Load
0336	Mot Inv Time Active	Motor Load
0334	Mot Inv Time Delay	Motor Load
0337	Mot Inv Time Output %	Motor Load
0333	Mot Inv Time Overload	Motor Load
0335	Mot Inv Time Warning	Motor Load
0374	Motor Base Volts	Voltage Control
0402	Motor Current	Feedbacks
0401	Motor Current Percent	Feedbacks
0583	motor flux 0_1	Induction Motor Data
0582	motor flux 0_2	Induction Motor Data
0581	motor flux 0_3	Induction Motor Data
0580	motor flux 0_4	Induction Motor Data
0579	motor flux 0_5	Induction Motor Data
0578	motor flux 0_6	Induction Motor Data
0577	motor flux 0_7	Induction Motor Data
0576	motor flux 0_8	Induction Motor Data
0575	motor flux 0_9	Induction Motor Data
0574	motor flux 1_0	Induction Motor Data
0458	Motor Poles	Motor Nameplate
0460	Motor Power	Motor Nameplate
1407	Motor Run Time	Runtime Statistics
1732	Motor Start Count	Runtime Statistics

PNO	Name	Path
0405	Motor Terminal Volts	Feedbacks
0511	Motor Type or AFE	Control Mode
0373	motor volts	Voltage Control
1655	mras acc threshold	MRAS
0285	mras active	MRAS
0280	mras adaptive kc	MRAS
0300	mras adaptive loop bwtd	MRAS
0282	mras adaptive td	MRAS
0281	mras adaptive ti	MRAS
0303	mras blend high freq	MRAS
0302	mras blend low freq	MRAS
0278	mras coupling kc	MRAS
0304	mras coupling loop bwtd	MRAS
0279	mras coupling ti	MRAS
0288	mras field angle	MRAS
0289	MRAS Field Frequency	MRAS
0298	mras flux correction kc	MRAS
0297	mras force encoder fbk	MRAS
0293	mras high speed active	MRAS
1654	mras iq corr level	MRAS
1653	mras La corr limit	MRAS
0292	mras low speed active	MRAS
0301	mras ls blend mode	MRAS
0295	mras ls high threshold	MRAS
0294	mras ls low threshold	MRAS
0296	mras ls mag i scale	MRAS
1249	mras motor inertia	MRAS
1657	mras speed loop factor	MRAS
0286	MRAS Speed Percent	MRAS
0287	MRAS Speed RPM	MRAS
1656	mras start up current	MRAS
0291	MRAS Torque	MRAS
0290	MRAS Torque Percent	MRAS
1250	mras viscous friction	MRAS
0284	mras wmr slw lim at 2bs	MRAS
0283	mras wmr slw lim at bs	MRAS
0483	mseq deflux state	Motor Sequencer
0480	mseq main state	Motor Sequencer
0481	mseq post running state	Motor Sequencer
0482	mseq pre running state	Motor Sequencer
0572	Mutual Inductance	Induction Motor Data
1550	Nameplate Mag Current	Autotune
0459	Nameplate Speed	Motor Nameplate
0416	Negative Torque Lim	Torque Limit
1146	no of channels	Fast Trace Config
0976	Nominal Supply	Drive info
0573	nplate rpm when autotn	Induction Motor Data
1256	OEM ID	Drive info
1241	Open Connections	Modbus
0198	Option DHCP Enabled	Option Ethernet
0206	Option FTP Admin Mode	Option Ethernet
0205	Option FTP Enable	Option Ethernet
0197	Option Gateway	Option Ethernet
1180	Option IO Diagnostic	Option IO
1179	Option IO Fitted	Option IO

# Parameter Reference D-245

PNO	Name	Path
1178	Option IO Required	Option IO
0195	Option IP Address	Option Ethernet
0189	Option MAC Address	Option Ethernet
0196	Option Subnet Mask	Option Ethernet
0203	Option Web Enable	Option Ethernet
1540	Other Parameters	Clone
1756	Output A	System Board IO
1757	Output B	System Board IO
1678	Output Enable	System Board IO
3064	Output Mapping	Fieldbus Mapping
3065	Output Mapping[0]	Fieldbus Mapping
3066	Output Mapping[1]	Fieldbus Mapping
3075	Output Mapping[10]	Fieldbus Mapping
3076	Output Mapping[11]	Fieldbus Mapping
3077	Output Mapping[12]	Fieldbus Mapping
3078	Output Mapping[13]	Fieldbus Mapping
3079	Output Mapping[14]	Fieldbus Mapping
3080	Output Mapping[15]	Fieldbus Mapping
3081	Output Mapping[16]	Fieldbus Mapping
3082	Output Mapping[17]	Fieldbus Mapping
3083	Output Mapping[18]	Fieldbus Mapping
3084	Output Mapping[19]	Fieldbus Mapping
3067	Output Mapping[2]	Fieldbus Mapping
3085	Output Mapping[20]	Fieldbus Mapping
3086	Output Mapping[21]	Fieldbus Mapping
3087	Output Mapping[22]	Fieldbus Mapping
3088	Output Mapping[23]	Fieldbus Mapping
3089	Output Mapping[24]	Fieldbus Mapping
3090	Output Mapping[25]	Fieldbus Mapping
3091	Output Mapping[26]	Fieldbus Mapping
3092	Output Mapping[27]	Fieldbus Mapping
3093	Output Mapping[28]	Fieldbus Mapping
3094	Output Mapping[29]	Fieldbus Mapping
3068	Output Mapping[3]	Fieldbus Mapping
3095	Output Mapping[30]	Fieldbus Mapping
3096	Output Mapping[31]	Fieldbus Mapping
3069	Output Mapping[4]	Fieldbus Mapping
3070	Output Mapping[5]	Fieldbus Mapping
3071	Output Mapping[6]	Fieldbus Mapping
3072	Output Mapping[7]	Fieldbus Mapping
3073	Output Mapping[8]	Fieldbus Mapping
3074	Output Mapping[9]	Fieldbus Mapping
1679	Output Source	System Board IO
1680	Output Voltage	System Board IO
1758	Output Z	System Board IO
1029	overrun count	Tasks
1030	overrun count[0]	Tasks
1031	overrun count[1]	Tasks
1032	overrun count[2]	Tasks
0537	p gain adjustment	Current Loop
0231	Parity And Stop Bits	Modbus RTU
1097	Password in Favourite	Graphical Keypad
1098	Password in Local	Graphical Keypad
1725	Peer to Peer Enable	Peer to Peer
1729	Peer to Peer State	Peer to Peer
0560	PMAC Back Emf Const KE	PMAC Motor Data

PNO	Name	Path
1387	PMAC Base Volt	PMAC Motor Data
1808	PMAC Encoder Offset	PMAC Motor Data
0693	PMAC Fly Active	PMAC Flycatching
0692	PMAC Fly Load Level	PMAC Flycatching
0690	PMAC Fly Search Mode	PMAC Flycatching
0691	PMAC Fly Search Time	PMAC Flycatching
0694	PMAC Fly Setpoint	PMAC Flycatching
0689	PMAC Flycatching Enable	PMAC Flycatching
0556	PMAC Max Current	PMAC Motor Data
0555	PMAC Max Speed	PMAC Motor Data
0564	PMAC Motor Inertia	PMAC Motor Data
0559	PMAC Motor Poles	PMAC Motor Data
0557	PMAC Rated Current	PMAC Motor Data
0558	PMAC Rated Torque	PMAC Motor Data
0467	PMAC SVC Auto Values	PMAC SVC
0470	PMAC SVC I Gain Hz	PMAC SVC
0475	pmac svc ke end grd	PMAC SVC
0474	pmac svc ke speed	PMAC SVC
0473	pmac svc ke strt grd	PMAC SVC
0468	PMAC SVC LPF Speed Hz	PMAC SVC
0476	PMAC SVC Open Loop Strt	PMAC SVC
0469	PMAC SVC P Gain	PMAC SVC
0463	pmac svc spd end grd	PMAC SVC
0462	pmac svc spd strt grd	PMAC SVC
0471	pmac svc spd thres	PMAC SVC
0472	pmac svc speed grd	PMAC SVC
0478	PMAC SVC Start Cur	PMAC SVC
0479	PMAC SVC Start Speed	PMAC SVC
0477	PMAC SVC Start Time	PMAC SVC
0565	PMAC Therm Time Const	PMAC Motor Data
0563	PMAC Torque Const KT	PMAC Motor Data
0562	PMAC Winding Inductance	PMAC Motor Data
0561	PMAC Winding Resistance	PMAC Motor Data
1809	PMAC Wiring	PMAC Motor Data
0415	Positive Torque Lim	Torque Limit
0461	Power Factor	Motor Nameplate
0386	Power Factor Angle Est	Energy Meter
0385	Power Factor Est	Energy Meter
0381	Power HP	Energy Meter
0380	Power kW	Energy Meter
1541	Power Parameters	Clone
0543	Power Stack Fitted	Drive info
0987	Power Stack Required	Drive info
0943	Process Active	Modbus
1551	Product Code Flags	Drive info
0238	Profibus Node Address	Profibus
0237	Profibus State	Profibus
0240	PROFINET Device Name	PROFINET IO
0239	PROFINET State	PROFINET IO
1054	Project Author	App Info
1068	Project Description	App Info
1040	Project File Name	App Info
1061	Project Version	App Info
1699	PTP Clock	PTP
1683	PTP Clock Mode	PTP
1684	PTP Clock Type	PTP

PNO	Name	Path
1787	PTP Domain Number	PTP
1661	PTP Enable	PTP
1685	PTP Lock Threshold	PTP
1688	PTP Locked	PTP
1681	PTP Log Sync Interval	PTP
1687	PTP Offset	PTP
1686	PTP Priority2	PTP
1689	PTP State	PTP
0391	PWM ISR Overhead	Pattern Generator
1648	Pwrl Accel Rate	Power Loss Ride Thru
1651	Pwrl Active	Power Loss Ride Thru
1647	Pwrl Control Band	Power Loss Ride Thru
1649	Pwrl Decel Rate	Power Loss Ride Thru
1645	Pwrl Enable	Power Loss Ride Thru
1650	Pwrl Time Limit	Power Loss Ride Thru
1646	Pwrl Trip Threshold	Power Loss Ride Thru
0508	Quickstop Ramp Time	Ramp
0507	Quickstop Time Limit	Ramp
0497	Ramp Hold	Ramp
0499	Ramp Spd Setpoint Input	Ramp
0500	Ramp Speed Output	Ramp
0510	ramp time step	Ramp
0485	Ramp Type	Ramp
0498	Ramping Active	Ramp
1682	Random Pattern AFE	Pattern Generator
0413	Random Pattern IM	Pattern Generator
1268	Random Pattern PMAC	Pattern Generator
0455	Rated Motor Current	Motor Nameplate
1247	Ratio Load Mot Inert	Spd Loop Settings
0388	raw kvar	Energy Meter
0387	raw kw	Energy Meter
0382	Reactive Power	Energy Meter
0055	Read Mapping	Read Process
0056	Read Mapping[0]	Read Process
0057	Read Mapping[1]	Read Process
0066	Read Mapping[10]	Read Process
0067	Read Mapping[11]	Read Process
0068	Read Mapping[12]	Read Process
0069	Read Mapping[13]	Read Process
0070	Read Mapping[14]	Read Process
0071	Read Mapping[15]	Read Process
0072	Read Mapping[16]	Read Process
0073	Read Mapping[17]	Read Process
0074	Read Mapping[18]	Read Process
0075	Read Mapping[19]	Read Process
0058	Read Mapping[2]	Read Process
0076	Read Mapping[20]	Read Process
0077	Read Mapping[21]	Read Process
0078	Read Mapping[22]	Read Process
0079	Read Mapping[23]	Read Process
0080	Read Mapping[24]	Read Process
0081	Read Mapping[25]	Read Process
0082	Read Mapping[26]	Read Process
0083	Read Mapping[27]	Read Process
0084	Read Mapping[28]	Read Process
0085	Read Mapping[29]	Read Process

# D-246 Parameter Reference

PNO	Name	Path
0059	Read Mapping[3]	Read Process
0086	Read Mapping[30]	Read Process
0087	Read Mapping[31]	Read Process
0060	Read Mapping[4]	Read Process
0061	Read Mapping[5]	Read Process
0062	Read Mapping[6]	Read Process
0063	Read Mapping[7]	Read Process
0064	Read Mapping[8]	Read Process
0065	Read Mapping[9]	Read Process
1442	Recent Trip Times	Trips History
1443	Recent Trip Times[0]	Trips History
1444	Recent Trip Times[1]	Trips History
1445	Recent Trip Times[2]	Trips History
1446	Recent Trip Times[3]	Trips History
1447	Recent Trip Times[4]	Trips History
1448	Recent Trip Times[5]	Trips History
1449	Recent Trip Times[6]	Trips History
1450	Recent Trip Times[7]	Trips History
1451	Recent Trip Times[8]	Trips History
1452	Recent Trip Times[9]	Trips History
0895	Recent Trips	Trips History
0896	Recent Trips[0]	Trips History
0897	Recent Trips[1]	Trips History
0898	Recent Trips[2]	Trips History
0899	Recent Trips[3]	Trips History
0900	Recent Trips[4]	Trips History
0901	Recent Trips[5]	Trips History
0902	Recent Trips[6]	Trips History
0903	Recent Trips[7]	Trips History
0904	Recent Trips[8]	Trips History
0905	Recent Trips[9]	Trips History
1265	Ref Max Speed Clamp	Speed Ref
1264	Ref Min Speed Clamp	Speed Ref
1266	Ref Speed Trim	Speed Ref
1267	Ref Trim Local	Speed Ref
0682	Reference	Sequencing
0321	regen hold	Flycatching
0307	Regen Limit Enable	Current Limit
0389	Reset Energy Meter	Energy Meter
1012	reset task timers	Tasks
1000	Reset to Defaults	Device Commands
1827	resolver active resol	Resolver
1826	Resolver Actual Filter	Resolver
1822	Resolver Built-In Gear	Resolver
1812	Resolver Fraction Turns	Resolver
1791	Resolver Frequency	Resolver
1810	Resolver Invert	Resolver
1825	Resolver Max Speed	Resolver
1851	Resolver Min Filter	Resolver
1793	Resolver Poles	Resolver
1824	resolver position	Resolver
1792	Resolver Ratio	Resolver
1819	Resolver Reset Power On	Resolver
1816	Resolver Resolution	Resolver
1814	Resolver Speed %	Resolver

PNO	Name	Path
1815	Resolver Speed Filter	Resolver
1821	Resolver Speed Hz	Resolver
1823	Resolver Speed Ripple	Resolver
1813	Resolver speed RPM	Resolver
1817	Resolver State	Resolver
1820	Resolver Trip Type	Resolver
1811	Resolver Turns	Resolver
1818	Resolver Turns Reset	Resolver
1790	Resolver Voltage	Resolver
0569	Rotor Time Constant	Induction Motor Data
0998	RTA Code	Device State
0999	RTA Data	Device State
1003	RTA Thread Priority	Device State
1187	RTC Trim	General Purpose IO
1140	Run Key Action	Local Control
1006	Run Wizard?	Setup Wizard
1171	sample numbers	Fast Trace Config
1172	sampling number	Fast Trace Config
1001	Save All Parameters	Device Commands
0411	Save is Required	Setup Wizard
1759	SB Digital Input 1	System Board IO
1722	SB Digital Input 2	System Board IO
1723	SB Digital Input 3	System Board IO
0466	scaled setpoint hz	Scale Setpoint
0465	scaled setpoint rpm	Scale Setpoint
1175	scope max length hex	Fast Trace Status
1176	scope offset hex	Fast Trace Status
1174	scope start addr hex	Fast Trace Status
1173	scope status	Fast Trace Status
0315	Search Boost	Flycatching
0313	Search Mode	Flycatching
0316	Search Time	Flycatching
0314	Search Volts	Flycatching
0527	Sel Torq Ctrl Only	Spd Loop Settings
1257	Seq Stop Method SVC	Ramp
0484	Seq Stop Method VHz	Ramp
0678	Sequencing State	Sequencing
1311	Setup	Soft Menus
1008	Setup Application?	Setup Wizard
1011	Setup Base Ethernet?	Setup Wizard
1107	Setup Base Modbus?	Setup Wizard
1786	Setup EtherNet IP?	Setup Wizard
1010	Setup Fieldbus?	Setup Wizard
1009	Setup Input/Output?	Setup Wizard
1007	Setup Motor or AFE?	Setup Wizard
1564	Setup Option IO?	Setup Wizard
1749	Setup Successful	Configure
1312	Setup[0]	Soft Menus
1313	Setup[1]	Soft Menus
1322	Setup[10]	Soft Menus
1323	Setup[11]	Soft Menus
1324	Setup[12]	Soft Menus
1325	Setup[13]	Soft Menus
1326	Setup[14]	Soft Menus
1327	Setup[15]	Soft Menus

PNO	Name	Path
1328	Setup[16]	Soft Menus
1329	Setup[17]	Soft Menus
1330	Setup[18]	Soft Menus
1331	Setup[19]	Soft Menus
1314	Setup[2]	Soft Menus
1315	Setup[3]	Soft Menus
1316	Setup[4]	Soft Menus
1317	Setup[5]	Soft Menus
1318	Setup[6]	Soft Menus
1319	Setup[7]	Soft Menus
1320	Setup[8]	Soft Menus
1321	Setup[9]	Soft Menus
0346	Short Overload Level	Stack Inv Time
0347	Short Overload Time	Stack Inv Time
1752	Slave Encoder	Configure
1744	Slave Position Src	Configure
0320	slew delta	Flycatching
0361	Slew Rate Accel Limit	Slew Rate
0362	Slew Rate Decel Limit	Slew Rate
0360	Slew Rate Enable	Slew Rate
0363	slew rate setpoint	Slew Rate
0355	slip compensation trim	Slip Compensation
0354	Slip Compensatn Enable	Slip Compensation
0358	slp filter tc	Slip Compensation
0356	SLP Motoring Limit	Slip Compensation
0357	SLP Regen Limit	Slip Compensation
0359	slp setpoint	Slip Compensation
1794	Soft Key 2 Mode	Graphical Keypad
1795	Soft Key 2 Value	Graphical Keypad
0522	spd aux torq filt tc	Spd Loop Settings
0526	Spd Demand Neg Lim	Spd Loop Settings
0525	Spd Demand Pos Lim	Spd Loop Settings
1780	Spd Limiter Torq Ctrl	Spd Loop Settings
0524	Spd Loop Adapt Pgain	Spd Loop Settings
0523	Spd Loop Adapt Thres	Spd Loop Settings
0521	Spd Loop Aux Torq Dmd	Spd Loop Settings
0519	Spd Loop Dmd Filt TC	Spd Loop Settings
1753	Spd Loop Encoder	Configure
0520	Spd Loop Fbk Filt TC	Spd Loop Settings
1525	speed at int range =0	Tr Adaptation
1747	Speed Error Threshold	Speed Error Trip
1748	Speed Error Trip Delay	Speed Error Trip
1746	Speed Error Trip Enable	Speed Error Trip
1781	Speed Limiter Active	Spd Loop Diagnostics
1246	Speed Loop Auto Set	Spd Loop Settings
1248	Speed Loop Bandwidth	Spd Loop Settings
0535	Speed Loop Error	Spd Loop Diagnostics
0516	Speed Loop I Time	Spd Loop Settings
0517	Speed Loop Int Defeat	Spd Loop Settings
0518	Speed Loop Int Preset	Spd Loop Settings
0515	Speed Loop Pgain	Spd Loop Settings
0536	Speed PI Output	Spd Loop Diagnostics
0491	Sramp Acceleration	Ramp
0490	Sramp Continuous	Ramp
0492	Sramp Deceleration	Ramp

# Parameter Reference D-247

PNO	Name	Path
0493	Sramp Jerk 1	Ramp
0494	Sramp Jerk 2	Ramp
0495	Sramp Jerk 3	Ramp
0496	Sramp Jerk 4	Ramp
0364	Stabilisation Enable	Stabilisation
0404	Stack Current (%)	Feedbacks
0412	Stack Frequency	Pattern Generator
0984	stack id	Drive info
1109	Stack Pcode	Drive info
1258	Stack Serial No	Drive info
0985	stack voltage	Drive info
0910	Stall Current Active	Stall Trip
0906	Stall Limit Type	Stall Trip
0911	Stall Speed Feedback	Stall Trip
0907	Stall Time	Stall Trip
0909	Stall Torque Active	Stall Trip
1634	Start Delay	Motor Sequencer
1560	Start Delay Enable	Motor Sequencer
0982	Startup Page	Graphical Keypad
0571	Stator Resistance	Induction Motor Data
0661	Status Word	Sequencing
0367	stb filter tc	Stabilisation
0366	stb gain	Stabilisation
0369	stb setpoint	Stabilisation
0365	stb slew rate limit	Stabilisation
0370	stb trim	Stabilisation
0368	stb trim limit	Stabilisation
1242	stimulus cur amplitude	Stimulus
1243	stimulus cur offset	Stimulus
1245	stimulus cur output	Stimulus
1244	stimulus cur period	Stimulus
0550	stimulus spd amplitude	Stimulus
0547	stimulus spd enable	Stimulus
0552	stimulus spd freq	Stimulus
0551	stimulus spd offset	Stimulus
0554	stimulus spd output	Stimulus
0549	stimulus spd type	Stimulus
0553	stimulus test angle	Stimulus
0504	Stop Ramp Time	Ramp
0927	Subnet Mask	Ethernet
1638	svc start adjustment	Current Loop
1639	svc start freq limit	Current Loop
0679	Switch On Timeout	Sequencing
0250	switching level	Braking
1701	Switchover Enable	MRAS
1700	switchover speed level	MRAS
0488	Symmetric Mode	Ramp
0489	Symmetric Time	Ramp
0419	Symmetric Torque Lim	Torque Limit
1702	Synth Encoder Invert	System Board IO
1696	Synth Encoder Lines	System Board IO
1698	Synth Encoder Speed	System Board IO
1742	System Board FE State	Device State
1740	System Board Fitted	System Board Option
1739	System Board Required	System Board Option
1741	System Board Status	System Board Option

PNO	Name	Path
0988	Target State	Device State
1099	Technician Password	Graphical Keypad
1519	term v integral range	Tr Adaptation
0371	Terminal Voltage Mode	Voltage Control
1529	Terminal Volts	Tr Adaptation
1185	Thermistor Resistance	Thermistor
1004	Thermistor Trip Level	Thermistor
1184	Thermistor Type	Thermistor
1762	Thermistor Warn Delta	Thermistor
1186	Time and Date	Real Time Clock
1733	Time Since Power-On	Runtime Statistics
1170	time tick	Fast Trace Config
0590	total inertia	Induction Motor Data
0534	Total Spd Demand %	Spd Loop Diagnostics
0533	Total Spd Demand RPM	Spd Loop Diagnostics
1521	Tr Adaptation Output	Tr Adaptation
1662	transferring	Fast Trace Config
1167	trigger direction	Fast Trace Config
1168	trigger level	Fast Trace Config
1169	trigger offset	Fast Trace Config
1166	trigger source	Fast Trace Config
1660	underlap comp off	Pattern Generator
1002	Update Firmware	Device Commands
0935	User Gateway Address	Ethernet
0933	User IP Address	Ethernet
0934	User Subnet Mask	Ethernet
0311	VC Flying Start Enable	Flycatching
1643	VDC Lim Active	DC Link Volts Limit
1641	VDC Lim Enable	DC Link Volts Limit
1642	VDC Lim Level	DC Link Volts Limit
1644	VDC Lim Output	DC Link Volts Limit
0912	VDC Ripple Filter TC	VDC Ripple
0917	VDC Ripple Level	VDC Ripple
0916	VDC Ripple Sample	VDC Ripple
0914	VDC Ripple Trip Delay	VDC Ripple
0915	VDC Ripple Trip Hyst	VDC Ripple
1143	Version	Graphical Keypad
0310	VHz Flying Start Enable	Flycatching
0422	VHz Shape	Fluxing VHz
0423	VHz User Freq	Fluxing VHz
0424	VHz User Freq[0]	Fluxing VHz
0425	VHz User Freq[1]	Fluxing VHz
0434	VHz User Freq[10]	Fluxing VHz
0426	VHz User Freq[2]	Fluxing VHz
0427	VHz User Freq[3]	Fluxing VHz
0428	VHz User Freq[4]	Fluxing VHz
0429	VHz User Freq[5]	Fluxing VHz
0430	VHz User Freq[6]	Fluxing VHz
0431	VHz User Freq[7]	Fluxing VHz
0432	VHz User Freq[8]	Fluxing VHz
0433	VHz User Freq[9]	Fluxing VHz
0435	VHz User Volts	Fluxing VHz
0436	VHz User Volts[0]	Fluxing VHz
0437	VHz User Volts[1]	Fluxing VHz
0446	VHz User Volts[10]	Fluxing VHz
0438	VHz User Volts[2]	Fluxing VHz

PNO	Name	Path
0439	VHz User Volts[3]	Fluxing VHz
0440	VHz User Volts[4]	Fluxing VHz
0441	VHz User Volts[5]	Fluxing VHz
0442	VHz User Volts[6]	Fluxing VHz
0443	VHz User Volts[7]	Fluxing VHz
0444	VHz User Volts[8]	Fluxing VHz
0445	VHz User Volts[9]	Fluxing VHz
1141	View Level	Graphical Keypad
0452	volt boost i limit	Fluxing VHz
0372	voltage control enable	Voltage Control
0378	voltage control vsd	Voltage Control
0377	voltage control vsq	Voltage Control
0453	Vsd Demand	Fluxing VHz
0545	Vsd Demand	Current Loop
0454	Vsq Demand	Fluxing VHz
0544	Vsq Demand	Current Loop
0829	Warnings 1 - 32	Trips Status
0514	Warnings 33 - 64	Trips Status
0972	Warranty Trip Time	Trips History
0973	Warranty Trip Time[0]	Trips History
0974	Warranty Trip Time[1]	Trips History
0975	Warranty Trip Time[2]	Trips History
0968	Warranty Trips	Trips History
1408	Warranty Trips Record	Trips History
0969	Warranty Trips[0]	Trips History
0970	Warranty Trips[1]	Trips History
0971	Warranty Trips[2]	Trips History
0944	Web Access	Web Server
0204	Web Parameters Enable	Option Ethernet
0946	Web Password	Web Server
0945	Web View Level	Web Server
0120	Write Mapping	Write Process
0121	Write Mapping[0]	Write Process
0122	Write Mapping[1]	Write Process
0131	Write Mapping[10]	Write Process
0132	Write Mapping[11]	Write Process
0133	Write Mapping[12]	Write Process
0134	Write Mapping[13]	Write Process
0135	Write Mapping[14]	Write Process
0136	Write Mapping[15]	Write Process
0137	Write Mapping[16]	Write Process
0138	Write Mapping[17]	Write Process
0139	Write Mapping[18]	Write Process
0140	Write Mapping[19]	Write Process
0123	Write Mapping[2]	Write Process
0141	Write Mapping[20]	Write Process
0142	Write Mapping[21]	Write Process
0143	Write Mapping[22]	Write Process
0144	Write Mapping[23]	Write Process
0145	Write Mapping[24]	Write Process
0146	Write Mapping[25]	Write Process
0147	Write Mapping[26]	Write Process
0148	Write Mapping[27]	Write Process
0149	Write Mapping[28]	Write Process
0150	Write Mapping[29]	Write Process
0124	Write Mapping[3]	Write Process

## D-248 Parameter Reference

PNO	Name	Path
0151	Write Mapping[30]	Write Process
0152	Write Mapping[31]	Write Process
0125	Write Mapping[4]	Write Process
0126	Write Mapping[5]	Write Process

PNO	Name	Path
0127	Write Mapping[6]	Write Process
0128	Write Mapping[7]	Write Process
0129	Write Mapping[8]	Write Process
0130	Write Mapping[9]	Write Process

PNO	Name	Path
0506	Zero Speed Stop Delay	Ramp
0505	Zero Speed Threshold	Ramp



# Power Dependent Parameter Defaults

The tables below shows the parameters whose default value is dependent on the Power Stack.

		PNO	NONE	3.5 A 400 V	4.5 A 400 V	5.5 A 400 V	7.5 A 400 V	10.0 A 400 V	12.0 A 400 V	16.0 A 400 V	23.0 A 400 V	32.0 A 400 V	38.0 A 400 V	45.0 A 400 V R1 45.0 A 400 V
Brake Resistance	Ohm	251	100	100	100	100	100	100	100	52	52	26	26	17
Brake Rated Power	kW	252	0.1	0.11	0.15	0.22	0.3	0.4	0.55	0.75	1.1	1.5	1.8	2.2
Autotune Ramp Time		274	10	10	10	10	10	10	10	10	10	10	10	10
mras coupling kc		278	14.9874	14.9874	11.5288	6.2448	2.9363	1.7128	2.6526	2.6526	1.314	0.9592	0.7105	0.7105
mras coupling ti	s	279	0.45	0.45	0.45	0.45	0.45	0.45	0.45	0.45	0.45	0.45	0.45	0.45
mras adaptive kc		280	4.3851	4.3851	2.6283	1.5279	0.7514	0.5727	0.6854	0.6854	0.3198	0.3484	0.1792	0.1792
mras adaptive ti	s	281	0.112	0.112	0.112	0.112	0.112	0.112	0.112	0.112	0.112	0.112	0.112	0.112
mras adaptive td	s	282	0.1094	0.1094	0.1094	0.1367	0.1367	0.1367	0.276	0.276	0.3036	0.3795	0.506	0.506
mras ls low threshold	Hz	294	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5
mras ls high threshold	Hz	295	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5
mras adaptive loop bwtd	Hz	300	4	4	4	4	4	4	4	3	3	2	2	2
i lim vhz p gain		308	2	2	2	2	2	2	2	2	2	2	2	2
i lim vhz i gain		309	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.3	0.3	0.3
Search Volts	%	314	9	9	9	9	9	9	9	9	9	9	9	10
Search Boost	%	315	40	40	40	40	40	40	40	40	40	15	15	15
Search Time		316	5	5	5	5	5	5	5	10	10	15	15	25
Flying Reflux Time		318	3	3	3	3	3	3	3	3	3	4	4	5
error scaler	%	322	200	200	200	200	200	200	200	200	200	175	175	150
DC Inj Deflux Time		324	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	1	1	1.5
DC Inj Frequency	Hz	325	9	9	9	9	9	9	9	9	9	9	9	6
DC Pulse Time		327	2	2	2	2	2	2	2	2	2	2	2	2
Final DC Pulse Time		328	1	1	1	1	1	1	1	1	1	3	3	3
DC Current Level	%	329	3	3	3	3	3	3	3	2.5	2.5	1.75	1.75	1.25
DC Inj Base Volts	%	331	100	100	100	100	100	100	100	100	100	100	100	75
stb gain		366	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1
stb trim limit	Hz	368	1	1	1	1	1	1	1	1	1	0.75	0.75	0.5
Stack Frequency	kHz	412	4	4	4	4	4	4	4	4	4	4	4	3
Deflux Delay		414	1	1	1	1	1	1	1	1	1	1	1	2
Fixed Boost	%	447	0	0	0	0	0	0	0	0	0	0	0	0
auto boost tc		449	0.25	0.25	0.25	0.25	0.25	0.25	0.25	0.25	0.25	0.3	0.3	0.3
Rated Motor Current	A	455	1.56	1.56	2.88	4.9	6.5	8.4	9.04	14.6	20	27	26.4	38
Base Voltage	V	456	400	400	400	400	400	400	400	400	400	400	400	400
Base Frequency	Hz	457	50	50	50	50	50	50	50	50	50	50	50	50
Nameplate Speed	RPM	459	1400	1400	1420	1420	1420	1420	1445	1450	1460	1470	1460	1460
Motor Power	kW	460	1.1	1.1	1.5	2.2	3	4	5.5	7.5	11	15	18	22
Power Factor		461	0.71	0.71	0.7	0.78	0.8	0.8	0.8	0.83	0.86	0.87	0.88	0.88
100% Speed in RPM	RPM	464	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500
Acceleration Time		486	10	10	10	10	10	10	10	10	10	10	10	20
Deceleration Time		487	10	10	10	10	10	10	10	10	10	10	10	20
Symmetric Time		489	10	10	10	10	10	10	10	10	10	10	10	20
total inertia	kgm <sup>2</sup>	590	0.0014	0.0014	0.0014	0.0035	0.05	0.0112	0.0176	0.0176	0.0236	0.0603	0.0754	0.0754
Stall Time		907	90	90	90	90	90	90	90	90	90	90	90	90
Max VDC Ripple	V	913	50	50	50	70	70	80	80	85	85	80	80	80
VDC Ripple Trip Delay		914	90	60	60	60	60	60	60	60	60	60	60	30
stack voltage		985	1	1	1	1	1	1	1	1	1	1	1	1
frame size		986	4	4	4	4	4	4	4	5	5	6	6	7
mras motor inertia	kgm <sup>2</sup>	1249	0.0014	0.0014	0.0014	0.0035	0.05	0.0112	0.0176	0.0176	0.0236	0.0603	0.0754	0.0754
Nameplate Mag Current	A	1550	0.88	0.88	1.65	2.45	3.12	4.03	4.34	6.51	8.16	10.65	10.03	14.44

# D-250 Parameter Reference

		PNO	60.0 A 400 V R1 60.0 A 400 V	73.0 A 400 V R1 73.0 A 400 V	87.0 A 400 V	105 A 400 V	145 A 400 V	180 A 400 V	205 A 400 V	260 A 400 V	315 A 400 V	380 A 400 V	440 A 400 V
Brake Resistance	Ohm	251	17	17	8	8	8	4	4	4	3	3	3
Brake Rated Power	kW	252	3	3.7	4.5	5.5	7.5	9	11	13.2	16	20	25
Autotune Ramp Time		274	10	10	10	10	10	20	20	20	30	30	30
mras coupling kc		278	0.5048	0.3553	0.2907	0.2428	0.1798	0.1453	0.127	0.1043	0.0888	0.0783	0.0648
mras coupling ti	s	279	0.45	0.45	0.45	0.45	0.45	0.45	0.45	0.45	0.45	0.45	0.45
mras adaptive kc		280	0.305	0.2823	0.2974	0.2472	0.2226	0.1427	0.1343	0.1228	0.1021	0.0895	0.0692
mras adaptive ti	s	281	0.112	0.112	0.112	0.112	0.112	0.112	0.112	0.112	0.112	0.112	0.112
mras adaptive td	s	282	0.3795	0.506	0.506	0.506	0.6073	0.6073	0.7591	1.5182	2.0243	2.0243	2.0243
mras ls low threshold	Hz	294	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5
mras ls high threshold	Hz	295	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5
mras adaptive loop bwtd	Hz	300	2	2	2	2	2	2	2	2	2	2	2
i lim vhz p gain		308	2	2	2	2	2	2	2	2	1	1	1
i lim vhz i gain		309	0.3	0.3	0.3	0.3	0.3	0.2	0.2	0.2	0.2	0.2	0.2
Search Volts	%	314	10	10	10	10	10	10	10	10	8	8	8
Search Boost	%	315	15	15	15	15	15	10	10	10	10	10	10
Search Time		316	25	25	30	30	30	40	40	40	45	45	45
Flying Reflux Time		318	5	5	6	6	6	6	6	6	6	6	6
error scaler	%	322	150	150	150	150	150	150	150	150	150	150	150
DC Inj Deflux Time		324	1.5	1.5	3	3	3	3	3	3	3	3	3
DC Inj Frequency	Hz	325	6	6	6	6	6	4	4	4	4	4	4
DC Pulse Time		327	2	2	2	2	2	3	3	3	3	3	3
Final DC Pulse Time		328	3	3	3	3	3	5	5	5	5	5	5
DC Current Level	%	329	1.25	1.25	1.25	1.25	1.25	1	1	1	1	1	1
DC Inj Base Volts	%	331	75	75	75	75	75	50	50	50	50	50	50
stb gain		366	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1
stb trim limit	Hz	368	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
Stack Frequency	kHz	412	3	3	2.5	2.5	2.5	2.5	2.5	2.5	2	2	2
Deflux Delay		414	2	2	3	3	3	3.5	3.5	3.5	6	6	6
Fixed Boost	%	447	0	0	0	0	0	0	0	0	0	0	0
auto boost tc		449	0.3	0.3	0.3	0.3	0.3	0.5	0.5	0.5	0.5	0.5	0.5
Rated Motor Current	A	455	54	66	79	97	132	164	186	236	287	346	401
Base Voltage	V	456	400	400	400	400	400	400	400	400	400	400	400
Base Frequency	Hz	457	50	50	50	50	50	50	50	50	50	50	50
Nameplate Speed	RPM	459	1470	1470	1470	1475	1475	1475	1480	1480	1480	1480	1485
Motor Power	kW	460	30	37	45	55	75	90	110	132	160	200	250
Power Factor		461	0.86	0.85	0.87	0.86	0.87	0.87	0.9	0.9	0.91	0.92	0.93
100% Speed in RPM	RPM	464	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500
Acceleration Time		486	20	20	30	30	30	50	50	50	50	50	50
Deceleration Time		487	20	20	30	30	30	50	50	50	50	50	50
Symmetric Time		489	20	20	30	30	30	50	50	50	50	50	50
total inertia	kgm <sup>2</sup>	590	0.1906	0.475	0.7476	0.8904	1.45	1.722	2.65	3.6	5.5	6.2	7
Stall Time		907	90	90	90	90	90	60	60	60	60	60	60
Max VDC Ripple	V	913	80	80	80	80	80	80	80	80	65	80	65
VDC Ripple Trip Delay		914	30	30	30	30	30	30	30	30	30	30	30
stack voltage		985	1	1	1	1	1	1	1	1	1	1	1
frame size		986	7	7	8	8	8	9	9	9	10	10	10
mras motor inertia	kgm <sup>2</sup>	1249	0.1906	0.475	0.7476	0.8904	1.45	1.722	2.65	3.6	5.5	6.2	7
Nameplate Mag Current	A	1550	22.04	27.81	31.16	39.6	52.07	64	74	93	110	131	152


# E-1 E Plan Library

## Appendix E: E Plan Library

### E Plan Library

For information on the E Plan library go to [www.eplan.co.uk](http://www.eplan.co.uk) web site.

To obtain layout diagrams from our E Plan Library go to [www.parker.com/ssd](http://www.parker.com/ssd) and then click on “Support” then EPLAN Macro Downloads.

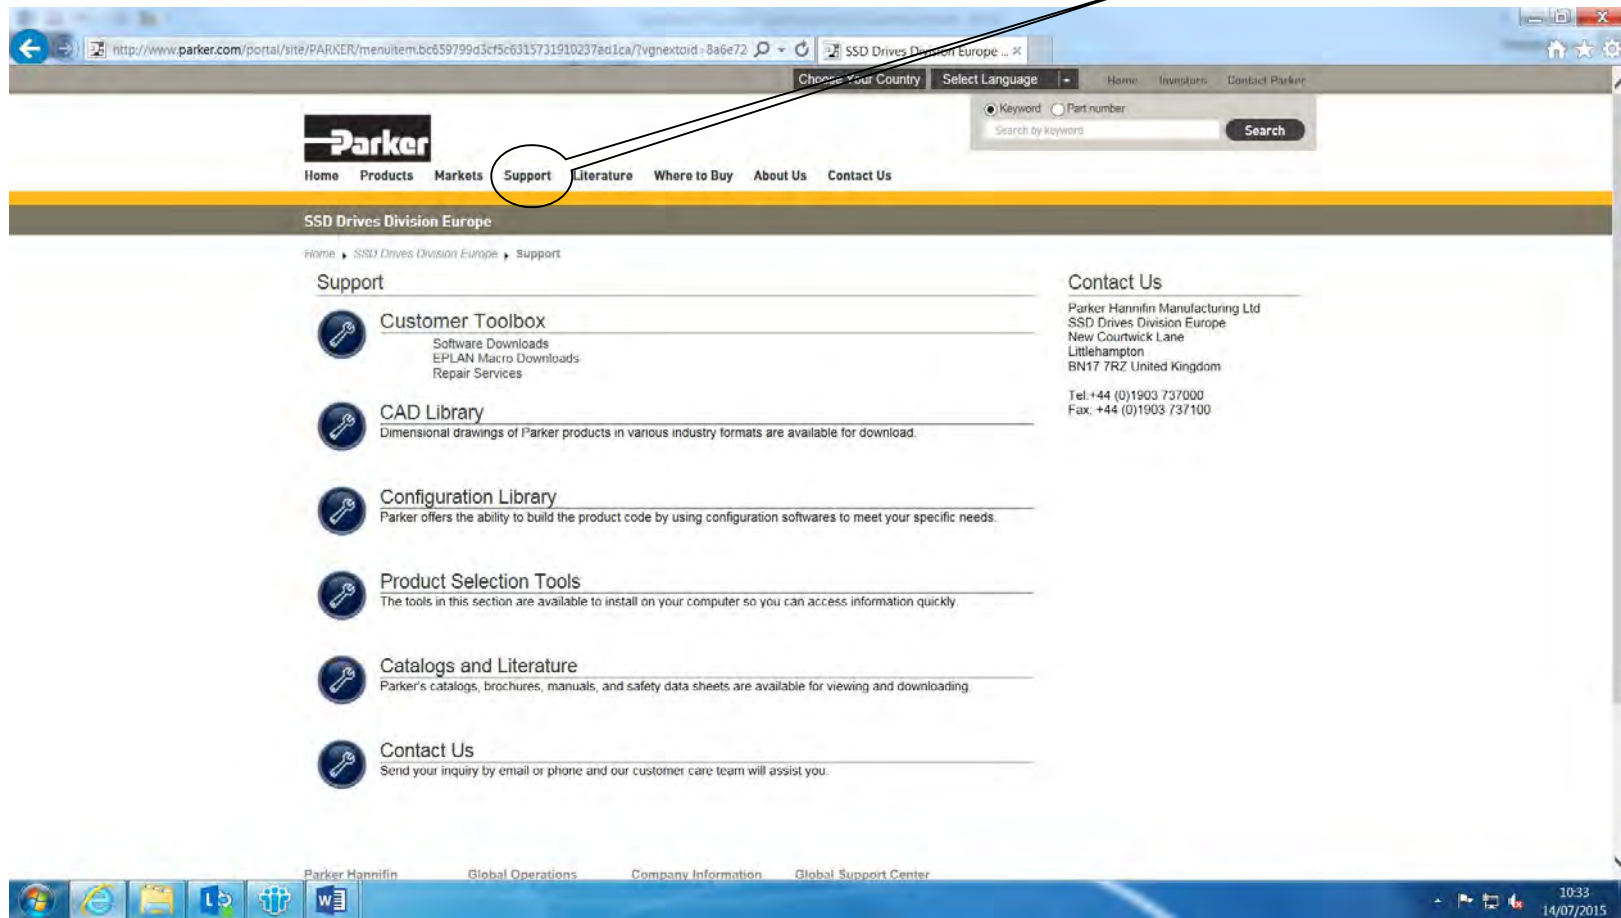

Which then brings up the E Plan page.

The screenshot shows a web browser window displaying the Parker SSD Drives Division Europe website. The browser's address bar shows the URL: <http://www.parker.com/portal/site/PARKER/menuitem.338f315e827b2c6315731910237ad1ca/?vgnextoid=c2dd72>. The website header includes the Parker logo, navigation links (Home, Products, Markets, Support, Literature, Where to Buy, About Us, Contact Us), and a search bar with options for Keyword and Part number. Below the header, the page title is "EPLAN MACROS". The main content area features the ePLAN electric8 logo and a paragraph stating: "Parker SSD Europe offer a number of P8 EPLAN macros to help support our range of AC and DC drives and related accessories - please contact us for further details or assistance." Below this, there is a list of drive series with corresponding EPLAN Macro Download (ZIP) links:

AC10 AC Variable Speed Micro Drives:	EPLAN Macro Download (ZIP)
AC30V Series Variable Speed AC Drives:	EPLAN Macro Download (ZIP)
AC650 Series General Purpose AC Drives:	EPLAN Macro Download (ZIP)
AC650G Series Variable Frequency AC Drives:	EPLAN Macro Download (ZIP)
AC650S Series Sensorless AC Drives:	EPLAN Macro Download (ZIP)
AC650V Series AC Drives:	EPLAN Macro Download (ZIP)
AC690P Series High Performance AC Drives:	EPLAN Macro Download (ZIP)

The Windows taskbar at the bottom shows the time as 10:36 on 14/07/2015.

# F-1 Technical Specifications

## Appendix F: **Technical Specifications** **Understanding the Product Code**

### MODEL NUMBER

The unit is fully identified using a four block alphanumeric code which records how the drive was calibrated, and its various settings when dispatched from the factory. This can also be referred to as the Product Code.

### AC30 Series Control Module Product Order Code

	1	2		3	4		5
Order example	30	V	-	2	S	-	0000

<b>1</b>	<b>Device Family</b>
30	AC30 series control module only (no power stack)
<b>2</b>	<b>Industry</b>
V	Standard controller
P	Advanced controller
D	Advanced controller with dual encoder system option
<b>3</b>	<b>Graphical Keypad</b>
0	No keypad fitted
1	Blanking cover fitted
2	Graphical keypad fitted
<b>4</b>	<b>Environmental Coating</b>
S	Standard 3C3 coating
E	Enhanced coating
<b>5</b>	<b>Special Options</b>
0000	No special options

Typical example: 30V-2S-0000 (as shown in the "Order example" above).

This shows the product is an AC30 series versatile controller, with Graphical Keypad fitted, standard 3C3 conformal coating and no special options.

**Note: This product code is for the control module only. The power stack must be ordered in addition to this (see next page).**

## AC30 Series Power Stack Product Order Code

	1		2		3		4		5		6		7		8
Order example	710	-	4	D	0004	-	B	F	-	0	S	-	0000		

<b>1</b>	<b>Device Family <sup>(1)</sup></b>
710	AC Power stack only (no control module)
740	DC Power stack only (no control module)
<b>2</b>	<b>Voltage</b>
4	400 V nominal supply system (AC line)
<b>3</b>	<b>Frame Size and Current Rating</b>
	(normal / heavy duty)
D0004	1.1 kW / 0.75 kW
D0005	1.5 kW / 1.1 kW
D0006	2.2 kW / 1.5 kW
D0008	3 kW / 2.2 kW
D0010	4 kW / 3 kW
D0012	5.5 kW / 4 kW
E0016	7.5 kW / 5.5 kW
E0023	11 kW / 7.5 kW
F0032	15 kW / 11 kW
F0038	18.5 kW / 15 kW
F0045	22 kW / 18.5 kW
G0045	22 kW / 18.5 kW
G0060	30 kW / 22 kW
G0073	37 kW / 30 kW
H0087	45 kW / 37 kW
H0105	55 kW / 45 kW
H0145	75 kW / 55 kW
J0180	90 kW / 75 kW
J0205	110 kW / 90 kW
J0260	132 kW / 110 kW
K0300	160 kW / 132 kW
K0380	200 kW / 160 kW
K0440	250 kW / 200 kW

<b>4</b>	<b>Brake Switch</b>
N	Without brake switch
B	Brake switch fitted (standard)
<b>5</b>	<b>EMC Filter <sup>(2)</sup></b>
N	No filter fitted
E	Category C3 filter fitted (standard)
F	Category C2 filter fitted
<b>6</b>	<b>Graphical Keypad</b>
0	No keypad fitted
<b>7</b>	<b>Environmental Coating</b>
S	Standard 3C3 coating
E	Enhanced coating
<b>8</b>	<b>Special Options</b>
0000	No special options

(1) Frame size K products are available in AC line fed options only (710 family).

(2) 1. Only EMC filter option N is valid on DC fed stacks (740 family).

2. Only EMC filter option E is valid on Frame size K products.

3. EMC filter option F is not valid on Frame size J products.

Typical example: 710-4D004-BF-0S-0000 (as shown in the “Order example” above).

This shows the product is an AC30 series AC line fed Frame D drive, IP21 standard, rated at 400-480 volts supply, 1.1kW (normal duty), with brake switch fitted, Category C2 EMC filter, no Graphical Keypad fitted, standard 3C3 conformal coating and no special options.

**Note: This product code is for the power stack only. The control module must be ordered in addition to this (see previous page).**

# F-3 Technical Specifications

## AC30V Series Configured Product Order Code

	1		2	3		4	5		6	7		8	
Order example	31V	-	4	D	0004	-	B	F	-	2	S	-	0000

<b>1</b>	<b>Device Family</b>
31V	AC30V series complete line fed drive
<b>2</b>	<b>Voltage</b>
4	400 V nominal supply system (AC line)
<b>3</b>	<b>Frame Size and Current Rating</b>
	(normal / heavy duty)
D0004	1.1 kW / 0.75 kW
D0005	1.5 kW / 1.1 kW
D0006	2.2 kW / 1.5 kW
D0008	3 kW / 2.2 kW
D0010	4 kW / 3 kW
D0012	5.5 kW / 4 kW
E0016	7.5 kW / 5.5 kW
E0023	11 kW / 7.5 kW
F0032	15 kW / 11 kW
F0038	18.5 kW / 15 kW
F0045	22 kW / 18.5 kW
G0045	22 kW / 18.5 kW
G0060	30 kW / 22 kW
G0073	37 kW / 30 kW
H0087	45 kW / 37 kW
H0105	55 kW / 45 kW
H0145	75 kW / 55 kW
J0180	90 kW / 75 kW
J0205	110 kW / 90 kW
J0260	132 kW / 110 kW
K0300	160 kW / 132 kW
K0380	200 kW / 160 kW
K0440	250 kW / 200 kW

<b>4</b>	<b>Brake Switch</b>
N	Without brake switch
B	Brake switch fitted (standard)
<b>5</b>	<b>EMC Filter <sup>(1)</sup></b>
N	No filter fitted
E	Category C3 filter fitted (standard)
F	Category C2 filter fitted
<b>6</b>	<b>Graphical Keypad</b>
0	No keypad fitted
1	Blanking cover fitted
2	Graphical keypad fitted
<b>7</b>	<b>Environmental Coating</b>
S	Standard 3C3 coating
E	Enhanced coating
<b>8</b>	<b>Special Options</b>
0000	No special options

(1) 1. Only EMC filter option E is valid on Frame size K products.

2. EMC filter option F is not valid on Frame size J products.

Typical example: 31V-4D004-BF-2S-0000 (as shown in the "Order example" above).

This shows the product is an AC30V Frame D drive, IP21 standard suitable for fan and pump industry, rated at 400-480 volts supply, 1.1kW (normal duty), with brake switch fitted, Category C2 EMC filter, with Graphical Keypad fitted, standard 3C3 conformal coating and no special options.

**Note: This product code is for a complete AC30V series drive (includes both control module and power stack).**

## AC30 Series DC Supply Unit Product Order Code

	1		2		3		4		5		6
Order example	380	-	5	R	0094	-	N	E	-	0000	

<b>1</b>	<b>Device Family</b>	<b>380</b>	AC30 series regenerative supply unit
<b>2</b>	<b>Voltage</b>	<b>5</b>	400 V - 500 V nominal
<b>3</b>	<b>Frame Size and Current Rating</b>	Output drive current rating / Nominal driving power @ 500V	
	<b>R0094</b>	94 A / 60 kW	
	<b>R0157</b>	157 A / 100 kW	
	<b>S0251</b>	251 A / 160 kW	
	<b>S0394</b>	394 A / 250 kW	
	<b>S0536</b>	536 A / 340 kW	

<b>4</b>	<b>Brake Switch</b>	<b>N</b>	Without brake switch (standard)
<b>5</b>	<b>EMC Filter</b>	<b>E</b>	Category C3 compliant (standard)
<b>6</b>	<b>Special Options</b>	<b>0000</b>	No special options

Typical example: 380-5R0094-NE-0000 (as shown in the "Order example" above).

This shows the product is an AC30 series regenerative supply unit, rated at 400-500 volts supply, 94A output current rating – 60kW @ 500V, without a brake switch fitted, Category C3 compliant and no special options.



# F-5 Technical Specifications

ENVIRONMENTAL DETAILS							
<b>Operating Temperature</b>  NORMAL DUTY HEAVY DUTY	<p>Operating temperature is defined as the surrounding air temperature of the drive, when the drive and other equipment adjacent to it is operating at worst case conditions.</p> <p>0°C to 40°C, derate up to a maximum of 50°C 0°C to 45°C, derate up to a maximum of 50°C</p> <p>Output power is derated linearly at 2% per degree centigrade for temperature exceeding the maximum rating for the drive.</p> <p>Maximum operating temperature of the AC30D in the 24V dc supplied operating mode, without power applied to the stack, is 45°C.</p>						
<b>Storage Temperature</b>	-25°C to +55°C						
<b>Shipping Temperature</b>	-25°C to +70 °C						
<b>Product Enclosure Rating</b>	<p>IP20 – remainder of surfaces (Europe) With frame sizes H &amp; J, in order to retain the IP20 rating when making use of the DC-bus terminals, only partly remove DC-bus terminal cover breakouts or use additional external guarding.</p> <p>UL (c-UL) Open Type (North America/Canada)</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 40%;">Cubicle Mounted</td> <td>IP20 UL (c-UL) Open Type (North America/Canada)</td> </tr> <tr> <td>Through-panel Mounted</td> <td>IP20 UL (c-UL) Open Type (North America/Canada)</td> </tr> </table>	Cubicle Mounted	IP20 UL (c-UL) Open Type (North America/Canada)	Through-panel Mounted	IP20 UL (c-UL) Open Type (North America/Canada)		
Cubicle Mounted	IP20 UL (c-UL) Open Type (North America/Canada)						
Through-panel Mounted	IP20 UL (c-UL) Open Type (North America/Canada)						
<b>Altitude</b>	If greater than 1000m above sea level, derate by 1% per 100m to a maximum of 2000m						
<b>Humidity</b>	Maximum 85% relative humidity at 40°C non-condensing						
<b>Atmosphere</b>	Non flammable, non corrosive and dust free						
<b>Climatic Conditions</b>	Class 3k3, as defined by EN60721-3-3						
<b>Chemically Active Substances</b>	<p>For the standard product (which inherently includes our optimal level of conformal coating) compliance with EN60721-3-3 is as follows –</p> <p>a) Both classes 3C3 and 3C4 for hydrogen sulphide gas (H<sub>2</sub>S) at a gas concentration of 25ppm for 1200 hours.</p> <p>b) Both classes 3C1 (rural) and 3C2 (urban) for all nine defined substances as defined in table 4.</p> <p>Classes 3C1 and 3C2 are valid for both storage and transportation purposes.</p> <p>Note - Product was tested and validated with a hydrogen sulphide environment of 25ppm for a continuous period of 1200 hours and validated throughout the test period without failure.</p>						
<b>Vibration</b>	<p>Test Fc of EN60068-2-6</p> <p>10Hz&lt;=f&lt;=57Hz sinusoidal 0.075mm amplitude</p> <p>57Hz&lt;=f&lt;=150Hz sinusoidal 1g</p> <p>10 sweep cycles per axis on each of three mutually perpendicular axis</p>						
<b>Safety</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">Overvoltage Category</td> <td>Overvoltage Category III (numeral defining an impulse withstand level)</td> </tr> <tr> <td>Pollution Degree</td> <td>Pollution Degree II (non-conductive pollution, except for temporary condensation) for control electronics Pollution Degree III (dirty air rating) for through-panel mounted parts</td> </tr> <tr> <td>North America/Canada</td> <td>Complies with the requirements of UL508C as an open-type drive.</td> </tr> </table>	Overvoltage Category	Overvoltage Category III (numeral defining an impulse withstand level)	Pollution Degree	Pollution Degree II (non-conductive pollution, except for temporary condensation) for control electronics Pollution Degree III (dirty air rating) for through-panel mounted parts	North America/Canada	Complies with the requirements of UL508C as an open-type drive.
Overvoltage Category	Overvoltage Category III (numeral defining an impulse withstand level)						
Pollution Degree	Pollution Degree II (non-conductive pollution, except for temporary condensation) for control electronics Pollution Degree III (dirty air rating) for through-panel mounted parts						
North America/Canada	Complies with the requirements of UL508C as an open-type drive.						

## EARTHING/SAFETY DETAILS

<b>Earthing</b>	<p>Permanent earthing is mandatory on all units.</p> <ul style="list-style-type: none"> <li>Use a copper protective earth conductor 10mm<sup>2</sup> minimum cross-section, or install a second conductor in parallel with the protective conductor to a separate protective earth terminal</li> <li>The conductor itself must meet local requirements for a protective earth conductor</li> </ul>
<b>Input Supply Details (TN) and (IT)</b>	<p>Drives without filters are suitable for earth referenced (TN) or non-earth referenced (IT) supplies. The drive is only suitable for earth referenced supplies (TN) when fitted with an internal filter. External filters are available for use on TN and IT (non-earth referenced) supplies.</p>
<b>Prospective Short Circuit Current (PSCC)</b>	<p>Refer to the appropriate Electrical Ratings table.</p>
<b>Earth Leakage Current</b>	<p>&gt;10mA (all models)</p>

## COOLING FANS

The forced-vent cooling of the drive is achieved by 1, 2 or in some cases 3 fans. The Fan Rating gives the volume of air venting from the drive per fan.

Product		Main Cooling Fan Ratings	Internal Cooling Fan Ratings
<b>FRAME D</b>	3kW, 4kW & 5.5kW models only	1 off 27 cfm (45m <sup>3</sup> /hr)	N/A
<b>FRAME E</b>	All models	1 off 33 cfm (56m <sup>3</sup> /hr)	N/A
<b>FRAME F</b>	15kW & 18.5kW models 22kW model	2 off 27 cfm (45m <sup>3</sup> /hr) 2 off 33 cfm (56m <sup>3</sup> /hr)	N/A 1 off 5 cfm (8.5 m <sup>3</sup> /hr)
<b>FRAME G</b>	All models	2 off 53 cfm (89 m <sup>3</sup> /hr)	1 off 27 cfm (45 m <sup>3</sup> /hr)
<b>FRAME H</b>	45kW model 55kW & 75kW models	2 off 27 cfm (45 m <sup>3</sup> /hr) 2 off 53 cfm (89 m <sup>3</sup> /hr)	1 off 27 cfm (45 m <sup>3</sup> /hr) 1 off 27 cfm (45 m <sup>3</sup> /hr)
<b>FRAME J</b>	All Models	3 off 80 cfm (133 m <sup>3</sup> /hr)	2 off 27 cfm (45 m <sup>3</sup> /hr)
<b>FRAME K</b>	All models	1 off 518 cfm (880 m <sup>3</sup> /hr)	N/A

# F-7 Technical Specifications

## AC FED ELECTRICAL RATINGS (400V BUILD VARIANT)

<b>Power Supply = 380-480V ±10%, 50/60Hz ±5%</b> Motor power, output current and input current must not be exceeded under steady state operating conditions. Minimum repetitive power up / power down cycle time = 10 mins						
Product Code	Motor Power	Output Current (A)	Input Current (A)	Estimated Efficiency	Switching Frequency (kHz) nominal / maximum	Output Current Derate %/kHz (applied above nominal switching frequency)
<b>FRAME D :</b> Input currents for kW ratings are at 400V 50Hz ac input and for Hp ratings at 460V 60Hz ac input. Prospective short circuit current 5kA.						
<b>Normal Duty</b> (Output Overload Motoring 110% for 60s)						
710-4D0004...	<b>1.1kW</b>	<b>3.5</b>	<b>4</b>	95%	4 / 16	2.4%
	1.5Hp	3.0	3.5			
710-4D0005...	<b>1.5kW</b>	<b>4.5</b>	<b>5.3</b>	96%	4 / 16	3.7%
	2Hp	3.4	4.5			
710-4D0006...	<b>2.2kW</b>	<b>5.5</b>	<b>7.6</b>	97%	4 / 16	4.5%
	3Hp	4.8	6.4			
710-4D0008...	<b>3kW</b>	<b>7.5</b>	<b>6.5</b>	97%	4 / 16	4.0%
710-4D0010...	<b>4kW</b>	<b>10.0</b>	<b>8.0</b>	97%	4 / 16	3.9%
	5Hp	7.6	6.6			
710-4D0012...	<b>5.5kW</b>	<b>12.0</b>	<b>10.6</b>	97%	4 / 16	3.5%
	7.5Hp	11	9.4			
<b>Heavy Duty</b> (Output Overload Motoring 150% for 60s, 180% for 3s short term rating)						
710-4D0004...	<b>0.75kW</b>	<b>2.5</b>	<b>2.9</b>	95%	4 / 16	1.0%
	1Hp	2.1	2.4			
710-4D0005...	<b>1.1kW</b>	<b>3.5</b>	<b>4.0</b>	95%	4 / 16	3.1%
	1.5Hp	3.0	3.5			
710-4D0006...	<b>1.5kW</b>	<b>4.5</b>	<b>5.3</b>	96%	4 / 16	4.3%
	2Hp	3.4	4.5			
710-4D0008...	<b>2.2kW</b>	<b>5.5</b>	<b>5.2</b>	97%	4 / 16	3.8%
	3Hp	4.8	4.6			
710-4D0010...	<b>3kW</b>	<b>7.5</b>	<b>6.5</b>	97%	4 / 16	3.8%
710-4D0012...	<b>4kW</b>	<b>10.0</b>	<b>8.0</b>	97%	4 / 16	3.3%
	5Hp	7.6	6.6			

<b>Power Supply = 380-480V ±10%, 50/60Hz ±5%</b> Motor power, output current and input current must not be exceeded under steady state operating conditions. Minimum repetitive power up / power down cycle time = 10 mins						
Product Code	Motor Power	Output Current (A)	Input Current (A)	Estimated Efficiency	Switching Frequency (kHz) nominal / maximum	Output Current Derate %/kHz (applied above nominal switching frequency)
<b>FRAME E:</b> Input currents for kW ratings are at 400V 50Hz ac input and for Hp ratings at 460V 60Hz ac input. Prospective short circuit current 5kA.						
<b>Normal Duty</b> (Output Overload Motoring 110% for 60s)						
710-4E0016...	<b>7.5kW</b>	<b>16</b>	<b>14.5</b>	97%	4 / 16	5.5%
	10Hp	14	12.1			
710-4E0023...	<b>11kW</b>	<b>23</b>	<b>20.4</b>	97%	4 / 16	5.1%
	15Hp	21	18.0			
<b>Heavy Duty</b> (Output Overload Motoring 150% for 60s, 180% for 3s short term rating)						
710-4E0016...	<b>5.5kW</b>	<b>12</b>	<b>10.7</b>	97%	4 / 16	4.9%
	7.5Hp	11	9.5			
710-4E0023...	<b>7.5kW</b>	<b>16</b>	<b>14.5</b>	97%	4 / 16	4.9%
	10Hp	14	12.7			

# F-9 Technical Specifications

<b>Power Supply = 380-480V ±10%, 50/60Hz ±5%</b> Motor power, output current and input current must not be exceeded under steady state operating conditions. Minimum repetitive power up / power down cycle time = 10 mins						
Product Code	Motor Power	Output Current (A)	Input Current (A)	Estimated Efficiency	Switching Frequency (kHz) nominal / maximum	Output Current Derate %/kHz (applied above nominal switching frequency)
<b>FRAME F :</b> Input currents for kW ratings are at 400V 50Hz ac input and for Hp ratings at 460V 60Hz ac input. Prospective short circuit current 5kA.						
<b>Normal Duty</b> (Output Overload Motoring 110% for 60s)						
710-4F0032...	<b>15kW</b>	<b>32</b>	<b>28.5</b>	97%	4 / 12	6.3%
	20Hp	27	24.5			
710-4F0038...	<b>18.5kW</b>	<b>38</b>	<b>33.5</b>	97%	4 / 12	6.7%
	25Hp	36	30.2			
710-4F0045...	<b>22kW</b>	<b>45</b>	<b>40</b>	97%	3 / 12	6.7%
	30Hp	40	35.7			
<b>Heavy Duty</b> (Output Overload Motoring 150% for 60s, 180% for 3s short term rating)						
710-4F0032...	<b>11kW</b>	<b>23</b>	<b>21.7</b>	97%	4 / 12	6.0%
	15Hp	21	19.1			
710-4F0038...	<b>15kW</b>	<b>32</b>	<b>28.5</b>	97%	4 / 12	6.1%
	20Hp	27	24.5			
710-4F0045...	<b>18.5kW</b>	<b>38</b>	<b>34.3</b>	97%	3 / 12	6.1%
	25Hp	36	30.5			

<b>Power Supply = 380-480V ±10%, 50/60Hz ±5%</b> Motor power, output current and input current must not be exceeded under steady state operating conditions. Minimum repetitive power up / power down cycle time = 10 mins						
Product Code	Motor Power	Output Current (A)	Input Current (A)	Estimated Efficiency	Switching Frequency (kHz) nominal / maximum	Output Current Derate %/kHz (applied above nominal switching frequency)
<b>FRAME G :</b> Input currents for kW ratings are at 400V 50Hz ac input and for Hp ratings at 460V 60Hz ac input. Prospective short circuit current 10kA.						
<b>Normal Duty</b> (Output Overload Motoring 110% for 60s)						
710-4G0045...	<b>22kW</b>	<b>45</b>	<b>40</b>	98%	3 / 12	5.7%
	30Hp	40	35.7			
710-4G0060...	<b>30kW</b>	<b>60</b>	<b>54.7</b>	98%	3 / 12	5.9%
	40Hp	52	48			
710-4G0073...	<b>37kW</b>	<b>73</b>	<b>66.2</b>	98%	3 / 12	5.6%
	50Hp	65	58.5			
<b>Heavy Duty</b> (Output Overload Motoring 150% for 60s, 180% for 3s short term rating)						
710-4G0045...	<b>18kW</b>	<b>38</b>	<b>34.3</b>	98%	3 / 12	5.3%
	25Hp	36	30.5			
710-4G0060...	<b>22kW</b>	<b>45</b>	<b>41.8</b>	98%	3 / 12	5.7%
	30Hp	40	37.5			
710-4G0073...	<b>30kW</b>	<b>60</b>	<b>54.7</b>	98%	3 / 12	5.2%
	40Hp	52	48			

# F-11 Technical Specifications

<b>Power Supply = 380-480V ±10%, 50/60Hz ±5%</b> Motor power, output current and input current must not be exceeded under steady state operating conditions. Minimum repetitive power up / power down cycle time = 10 mins						
Product Code	Motor Power	Output Current (A)	Input Current (A)	Estimated Efficiency	Switching Frequency (kHz) nominal / maximum	Output Current Derate %/kHz (applied above nominal switching frequency)
<b>FRAME H :</b> Input currents for kW ratings are at 400V 50Hz ac input and for Hp ratings at 460V 60Hz ac input. Prospective short circuit current 10kA.						
<b>Normal Duty</b> (Output Overload Motoring 110% for 60s)						
710-4H0087...	<b>45kW</b>	<b>87</b>	<b>78.8</b>	98%	2.5 / 8	8.5%
	60Hp	77	69			
710-4H0105...	<b>55kW</b>	<b>105</b>	<b>95.8</b>	98%	2.5 / 8	7.8%
	75Hp	96	84.5			
710-4H0145...	<b>75kW</b>	<b>145</b>	<b>130</b>	98%	2.5 / 8	9.1%
	100Hp	124	113.5			
<b>Heavy Duty</b> (Output Overload Motoring 150% for 60s, 180% for 3s short term rating)						
710-4H0087...	<b>37kW</b>	<b>73</b>	<b>66</b>	98%	2.5 / 8	7.7%
	50Hp	65	58.5			
710-4H0105...	<b>45kW</b>	<b>87</b>	<b>79.5</b>	98%	2.5 / 8	6.9%
	60Hp	77	70			
710-4H0145...	<b>55kW</b>	<b>105</b>	<b>97.4</b>	98%	2.5 / 8	8.6%
	75Hp	96	87			

<b>Power Supply = 380-480V ±10%, 50/60Hz ±5%</b> Motor power, output current and input current must not be exceeded under steady state operating conditions. Minimum repetitive power up / power down cycle time = 10 mins						
Product Code	Motor Power	Output Current (A)	Input Current (A)	Estimated Efficiency	Switching Frequency (kHz) nominal / maximum	Output Current Derate %/kHz (applied above nominal switching frequency)
<b>FRAME J :</b> Input currents for kW ratings are at 400V 50Hz ac input and for Hp ratings at 460V 60Hz ac input. Prospective short circuit current 10kA.						
<b>Normal Duty</b> (Output Overload Motoring 110% for 60s)						
710-4J0180...	<b>90kW</b>	<b>180</b>	<b>160</b>	98%	2.5 / 8	8.1%
	125Hp	156	147			
710-4J0205...	<b>110kW</b>	<b>205</b>	<b>198</b>	98%	2.5 / 8	8.4%
	150Hp	180	175			
710-4J0260...	<b>132kW</b>	<b>260</b>	<b>236</b>	98%	2.5 / 8	8.7%
	200Hp	240	231			
<b>Heavy Duty</b> (Output Overload Motoring 150% for 60s, 180% for 3s short term rating)						
710-4J0180...	<b>75kW</b>	<b>145</b>	<b>137</b>	98%	2.5 / 8	7.5%
	100Hp	124	119			
710-4J0205...	<b>90kW</b>	<b>180</b>	<b>164</b>	98%	2.5 / 8	8.6%
	125Hp	156	148			
710-4J0260...	<b>110kW</b>	<b>205</b>	<b>199</b>	98%	2.5 / 8	8.0%
	150Hp	180	177			



# F-13 Technical Specifications

<b>Power Supply = 380-480V ±10%, 50/60Hz ±5%</b> Motor power, output current and input current must not be exceeded under steady state operating conditions. Minimum repetitive power up / power down cycle time = 10 mins						
Product Code	Motor Power	Output Current (A)	Input Current (A)	Estimated Efficiency	Switching Frequency (kHz) nominal / maximum	Output Current Derate %/kHz (applied above nominal switching frequency)
<b>FRAME K</b> : Input currents for kW ratings are at 400V 50Hz ac input and for Hp ratings at 460V 60Hz ac input. Prospective short circuit current 18kA.						
<b>Normal Duty</b> (Output Overload Motoring 110% for 60s)						
710-4K0315...	<b>160kW</b>	<b>315</b>	<b>276</b>	98%	2 / 8	8.5%
	250Hp	302	279			
710-4K0380...	<b>200kW</b>	<b>380</b>	<b>343</b>	98%	2 / 8	7.7%
	300Hp	361	333			
710-4K0440...	<b>250kW</b>	<b>440</b>	<b>428</b>	98%	2 / 8	8.3%
	350Hp	414	389			
<b>Heavy Duty</b> (Output Overload Motoring 150% for 60s, 180% for 3s short term rating)						
710-4K0315...	<b>132kW</b>	<b>260</b>	<b>229</b>	98%	2 / 8	7.7%
	200Hp	240	225			
710-4K0380...	<b>160kW</b>	<b>315</b>	<b>276</b>	98%	2 / 8	6.9%
	250Hp	302	279			
710-4K0440...	<b>200kW</b>	<b>380</b>	<b>344</b>	98%	2 / 8	7.5%
	300Hp	361	334			

**DC FED ELECTRICAL RATINGS (400V BUILD VARIANT)**

Power Supply = 510V - 650V DC Average						
Motor power, output current and input current must not be exceeded under steady state operating conditions.						
Product Code	Motor Power	Output Current (A)	Input Current (A)	Estimated Efficiency	Switching Frequency (kHz) nominal / maximum	Output Current Derate %/kHz (applied above nominal switching frequency)
<b>FRAME D :</b> Input currents for kW ratings are at 530V DC input and for Hp ratings at 620V DC input, with AC line choke equivalent to 4%						
<b>Normal Duty</b> (Output Overload Motoring 110% for 60s)						
740-4D0004...	<b>1.1kW</b>	<b>3.5</b>	<b>3.5</b>	95%	4 / 16	2.4%
	1.5Hp	3.0	3.1			
740-4D0005...	<b>1.5kW</b>	<b>4.5</b>	<b>4.6</b>	96%	4 / 16	3.7%
	2Hp	3.4	3.9			
740-4D0006...	<b>2.2kW</b>	<b>5.5</b>	<b>6.3</b>	97%	4 / 16	4.5%
	3Hp	4.8	5.6			
740-4D0008...	<b>3kW</b>	<b>7.5</b>	<b>8.0</b>	97%	4 / 16	4.0%
740-4D0010...	<b>4kW</b>	<b>10.0</b>	<b>9.8</b>	97%	4 / 16	3.9%
	5Hp	7.6	8.1			
740-4D0012...	<b>5.5kW</b>	<b>12.0</b>	<b>13.0</b>	97%	4 / 16	3.5%
	7.5Hp	11	11.5			
<b>Heavy Duty</b> (Output Overload Motoring 150% for 60s, 180% for 3s short term rating)						
740-4D0004...	<b>0.75kW</b>	<b>2.5</b>	<b>2.5</b>	95%	4 / 16	1.0%
	1Hp	2.1	2.2			
740-4D0005...	<b>1.1kW</b>	<b>3.5</b>	<b>3.5</b>	95%	4 / 16	3.1%
	1.5Hp	3.0	3.1			
740-4D0006...	<b>1.5kW</b>	<b>4.5</b>	<b>4.6</b>	96%	4 / 16	4.3%
	2Hp	3.4	3.9			
740-4D0008...	<b>2.2kW</b>	<b>5.5</b>	<b>6.4</b>	97%	4 / 16	3.8%
	3Hp	4.8	5.6			
740-4D0010...	<b>3kW</b>	<b>7.5</b>	<b>7.7</b>	97%	4 / 16	3.8%
740-4D0012...	<b>4kW</b>	<b>10.0</b>	<b>9.8</b>	97%	4 / 16	3.3%
	5Hp	7.6	8.1			

# F-15 Technical Specifications

Power Supply = 510V - 650V DC Average						
Motor power, output current and input current must not be exceeded under steady state operating conditions.						
Product Code	Motor Power	Output Current (A)	Input Current (A)	Estimated Efficiency	Switching Frequency (kHz) nominal / maximum	Output Current Derate %/kHz (applied above nominal switching frequency)
<b>FRAME E:</b> Input currents for kW ratings are at 530V DC input and for Hp ratings at 620V DC input, with AC line choke equivalent to 4%						
<b>Normal Duty</b> (Output Overload Motoring 110% for 60s)						
740-4E0016...	<b>7.5kW</b>	<b>16</b>	<b>18</b>	97%	4 / 16	5.5%
	10Hp	14	15			
740-4E0023...	<b>11kW</b>	<b>23</b>	<b>25</b>	97%	4 / 16	5.1%
	15Hp	21	22			
<b>Heavy Duty</b> (Output Overload Motoring 150% for 60s, 180% for 3s short term rating)						
740-4E0016...	<b>5.5kW</b>	<b>12</b>	<b>13</b>	97%	4 / 16	4.9%
	7.5Hp	11	12			
740-4E0023...	<b>7.5kW</b>	<b>16</b>	<b>18</b>	97%	4 / 16	4.9%
	10Hp	14	16			

Power Supply = 510V - 650V DC Average						
Motor power, output current and input current must not be exceeded under steady state operating conditions.						
Product Code	Motor Power	Output Current (A)	Input Current (A)	Estimated Efficiency	Switching Frequency (kHz) nominal / maximum	Output Current Derate %/kHz (applied above nominal switching frequency)
<b>FRAME F :</b> Input currents for kW ratings are at 530V DC input and for Hp ratings at 620V DC input, with AC line choke equivalent to 4%						
<b>Normal Duty</b> (Output Overload Motoring 110% for 60s)						
740-4F0032...	<b>15kW</b>	<b>32</b>	<b>35</b>	97%	4 / 12	6.3%
	20Hp	27	30			
740-4F0038...	<b>18.5kW</b>	<b>38</b>	<b>41</b>	97%	4 / 12	6.7%
	25Hp	36	37			
740-4F0045...	<b>22kW</b>	<b>45</b>	<b>49</b>	97%	3 / 12	6.7%
	30Hp	40	46			
<b>Heavy Duty</b> (Output Overload Motoring 150% for 60s, 180% for 0.3s short term rating)						
740-4F0032...	<b>11kW</b>	<b>23</b>	<b>27</b>	97%	4 / 12	6.0%
	15Hp	21	23			
740-4F0038...	<b>15kW</b>	<b>32</b>	<b>35</b>	97%	4 / 12	6.1%
	20Hp	27	30			
740-4F0045...	<b>18.5kW</b>	<b>38</b>	<b>41</b>	97%	3 / 12	6.1%
	25Hp	36	37			

# F-17 Technical Specifications

Power Supply = 510V - 650V DC Average						
Motor power, output current and input current must not be exceeded under steady state operating conditions.						
Product Code	Motor Power	Output Current (A)	Input Current (A)	Estimated Efficiency	Switching Frequency (kHz) nominal / maximum	Output Current Derate %/kHz (applied above nominal switching frequency)
<b>FRAME G :</b> Input currents for kW ratings are at 530V DC input and for Hp ratings at 620V DC input, with AC line choke equivalent to 4%.						
<b>Normal Duty</b> (Output Overload Motoring 110% for 60s)						
740-4G0045...	<b>22kW</b>	<b>45</b>	<b>49</b>	98%	3 / 12	5.7%
	30Hp	40	46			
740-4G0060...	<b>30kW</b>	<b>60</b>	<b>67</b>	98%	3 / 12	5.9%
	40Hp	52	59			
740-4G0073...	<b>37kW</b>	<b>73</b>	<b>81</b>	98%	3 / 12	5.6%
	50Hp	65	72			
<b>Heavy Duty</b> (Output Overload Motoring 150% for 60s, 180% for 3s short term rating)						
740-4G0045...	<b>18kW</b>	<b>38</b>	<b>42</b>	98%	3 / 12	5.3%
	25Hp	36	37			
740-4G0060...	<b>22kW</b>	<b>45</b>	<b>51</b>	98%	3 / 12	5.7%
	30Hp	40	46			
740-4G0073...	<b>30kW</b>	<b>60</b>	<b>67</b>	98%	3 / 12	5.2%
	40Hp	52	59			

Power Supply = 510V - 650V DC Average						
Motor power, output current and input current must not be exceeded under steady state operating conditions.						
Product Code	Motor Power	Output Current (A)	Input Current (A)	Estimated Efficiency	Switching Frequency (kHz) nominal / maximum	Output Current Derate %/kHz (applied above nominal switching frequency)
<b>FRAME H :</b> Input currents for kW ratings are at 530V DC input and for Hp ratings at 620V DC input, with AC line choke equivalent to 4%.						
<b>Normal Duty</b> (Output Overload Motoring 110% for 60s)						
740-4H0087...	<b>45kW</b>	<b>87</b>	<b>97</b>	98%	2.5 / 8	8.5%
	60Hp	77	85			
740-4H0105...	<b>55kW</b>	<b>105</b>	<b>117</b>	98%	2.5 / 8	7.8%
	75Hp	96	104			
740-4H0145...	<b>75kW</b>	<b>145</b>	<b>159</b>	98%	2.5 / 8	9.1%
	100Hp	124	139			
<b>Heavy Duty</b> (Output Overload Motoring 150% for 60s, 180% for 3s short term rating)						
740-4H0087...	<b>37kW</b>	<b>73</b>	<b>81</b>	98%	2.5 / 8	7.7%
	50Hp	65	72			
740-4H0105...	<b>45kW</b>	<b>87</b>	<b>97</b>	98%	2.5 / 8	6.9%
	60Hp	77	86			
740-4H0145...	<b>55kW</b>	<b>105</b>	<b>119</b>	98%	2.5 / 8	8.6%
	75Hp	96	107			

# F-19 Technical Specifications

Power Supply = 510V - 650V DC Average						
Motor power, output current and input current must not be exceeded under steady state operating conditions.						
Product Code	Motor Power	Output Current (A)	Input Current (A)	Estimated Efficiency	Switching Frequency (kHz) nominal / maximum	Output Current Derate %/kHz (applied above nominal switching frequency)
<b>FRAME J :</b> Input currents for kW ratings are at 530V DC input and for Hp ratings at 620V DC input, with AC line choke equivalent to 4%						
<b>Normal Duty</b> (Output Overload Motoring 110% for 60s)						
740-4J0180...	<b>90kW</b>	<b>180</b>	<b>198</b>	98%	2.5 / 8	8.1%
	125Hp	156	180			
740-4J0205...	<b>110kW</b>	<b>205</b>	<b>243</b>	98%	2.5 / 8	8.4%
	150Hp	180	214			
740-4J0260...	<b>132kW</b>	<b>260</b>	<b>289</b>	98%	2.5 / 8	8.7%
	200Hp	240	283			
<b>Heavy Duty</b> (Output Overload Motoring 150% for 60s, 180% for 3s short term rating)						
740-4J0180...	<b>75kW</b>	<b>145</b>	<b>168</b>	98%	2.5 / 8	7.5%
	100Hp	124	146			
740-4J0205...	<b>90kW</b>	<b>180</b>	<b>201</b>	98%	2.5 / 8	8.6%
	125Hp	156	181			
740-4J0260...	<b>110kW</b>	<b>205</b>	<b>244</b>	98%	2.5 / 8	8.0%
	150Hp	180	217			
	40Hp	52	59			
	75Hp	96	107			
	150Hp	180	217			

**LINE INPUT FUSE RATINGS (EUROPE)**

Product Code	Input Fuse Rating (A)	Product Code	Input Fuse Rating (A)
	NORMAL DUTY		NORMAL DUTY
<b>400V BUILD VARIANT 380-480V ±10%, 50/60Hz ±5%*</b>			
<b>Frame D</b>		<b>Frame G</b>	
710-4D0004...	10A	710-4G0045...	63A
710-4D0005...	10A	710-4G0060...	80A
710-4D0006...	10A	710-4G0073...	100A
710-4D0008...	10A	<b>Frame H</b>	
710-4D0010...	12A	710-4H0087...	125A
710-4D0012...	16A	710-4H0105...	150A
<b>Frame E</b>		710-4H0145...	200A
710-4E0016...	20A	<b>Frame J</b>	
710-4E0023...	25A	710-4J0180...	250A
<b>Frame F</b>		710-4J0205...	315A
710-4F0032...	32A	710-4J0260...	400A
710-4F0038...	40A	<b>Frame K</b>	
710-4F0045...	63A	710-4K0315...	400A
		710-4K0380...	500A
		710-4K0440...	630A

Type: Semiconductor protection fuses 500V AC, Mersen type A50Qsx or equivalent.



# F-21 Technical Specifications

## DC INPUT FUSE RATINGS (EUROPE)

Product Code	Input Fuse Rating (A)	Product Code	Input Fuse Rating (A)
	NORMAL DUTY		NORMAL DUTY
<b>400V BUILD VARIANT 380-480V ±10%, 50/60Hz ±5%*</b>			
<b>Frame D</b>		<b>Frame G</b>	
740-4D0004...	10A	740-4G0045...	70A
740-4D0005...	10A	740-4G0060...	100A
740-4D0006...	16A	740-4G0073...	100A
740-4D0008...	16A	<b>Frame H</b>	
740-4D0010...	20A	740-4H0087...	150A
740-4D0012...	20A	740-4H0105...	175A
<b>Frame E</b>		740-4H0145...	200A
740-4E0016...	32A	<b>Frame J</b>	
740-4E0023...	40A	740-4J0180...	300A
<b>Frame F</b>		740-4J0205...	350A
740-4F0032...	50A	740-4J0260...	400A
740-4F0038...	50A		
740-4F0045...	70A		

Type: Semiconductor protection fuses 700V DC, Mersen type A70Q SX or equivalent.

**LINE INPUT FUSE RATINGS (NORTH AMERICA AND CANADA)**

Product Code	Input Fuse Rating (A)		Product Code	Input Fuse Rating (A)	
<b>400V BUILD VARIANT 380-480V ±10%, 50/60HZ *</b>					
<b>Frame D</b>			<b>Frame G</b>		
710-4D0004...	6A	Class J Fuse	710-4G0045...	60A	Class J Fuse
710-4D0005...	10A	Class J Fuse	710-4G0060...	80A	Class J Fuse
710-4D0006...	10A	Class J Fuse	710-4G0073...	100A	Class J Fuse
710-4D0008...	10A	Class J Fuse	<b>Frame H</b>		
710-4D0010...	15A	Class J Fuse	710-4H0087...	125A	A50QS-120-4
710-4D0012...	20A	Class J Fuse	710-4H0105...	150A	A50QS-150-4
<b>Frame E</b>			710-4H0145...	200A	A50QS-200-4
710-4E0016...	25A	Class J Fuse	<b>Frame J</b>		
710-4E0023...	30A	Class J Fuse	710-4J0180...	250A	A50QS-250-4
<b>Frame F</b>			710-4J0205...	300A	A50QS-300-4
710-4F0032...	40A	Class J Fuse	710-4J0260...	350A	A50QS-350-4
710-4F0038...	50A	Class J Fuse	<b>Frame K</b>		
710-4F0045...	60A	Class J Fuse	710-4K0315...	400A	A50QS-400-4
			710-4K0380...	500A	A50QS-500-4
			710-4K0440...	600A	A50QS-600-4

# F-23 Technical Specifications

## INTERNAL DYNAMIC BRAKE SWITCH

Model	Product Code	Motor Power (kW/HP)	Brake Switch Peak Current (A)	Peak Brake Dissipation (kW/HP)	Brake Switch Continuous Current (A)	Continuous Brake Dissipation (kW/HP)	Minimum Brake Resistor Value ( $\Omega$ )
			20s maximum, 30% duty				
<b>400V Build Variant: 380-480V <math>\pm 10\%</math>, 50/60Hz <math>\pm 5\%</math> DC link brake voltage: 765V</b>							
<b>D</b>	7x0-4D0004...	1.1/1.5	1.5A	1.1/1.5	1	0.75/1	520
	7x0-4D0005...	1.5/2	2.2A	1.7/2.3	1.4	1.1/1.5	355
	7x0-4D0006...	2.2/3	2.9A	2.3/3	2	1.5/2	260
	7x0-4D0008...	3/	4.3A	3.3/4.5	2.9	2.2/3	177
	7x0-4D0010...	4/5	5.9A	4.5/	3.9	3/	130
	7x0-4D0012...	5.5/7.5	7.8A	6/7.5	5.2	4/5	98
<b>E</b>	7x0-4E0016...	7.5/10	10.8A	8.25/11.25	7.2	5.5/7.5	71
	7x0-4E0023...	11/15	14.7A	11.25/15	9.8	7.5/10	52
<b>F</b>	7x0-4F0032...	15/20	21.5A	16.5/22.5	14.4	11/15	35
	7x0-4F0038...	18/25	29.4A	22.5/30	19.6	15/20	26
	7x0-4F0045...	22/30	36A	27/37.5	24	18/25	21
<b>G</b>	7x0-4G0045...	22/30	36A	27/37.5	24	18/25	21
	7x0-4G0060...	30/40	43A	33/45	29	22/30	17.7
	7x0-4G0073...	37/50	59A	45/60	39	30/40	13
<b>H</b>	7x0-4H0087...	45/60	73	55.5/75	49	37	10.5
	7x0-4H0105...	55/75	88	67.5/90	59	45	8.7
	7x0-4H0145...	75/100	108	82.5/112.5	72	55	7
<b>J</b>	7x0-4J0180...	90/125	147	112.5/150	98	75/100	5.2
	7x0-4J0205...	110/150	176	135/187.5	118	90/125	4.3
	7x0-4J0260...	132/200	216	165/225	144	110/150	3.55
<b>K</b>	7x0-4K0315...	160/250	173A	132/200	173A	132/200	4.4
	7x0-4K0380...	200/300	209A	160/250	209A	160/250	3.6
	7x0-4K0440...	250/350	262A	200/300	262A	200/300	2.9

## SUPPLY SHORT CIRCUIT RATING

The following drives when fitted with UL Listed fuses are suitable for use on a circuit capable of delivering not more than:

Frames D, E, F, G: 5,000 RMS Symmetrical Amperes, 480V maximum

Frame H & J: 10,000 RMS Symmetrical Amperes, 480V maximum

Frame K: 18,000 RMS Symmetrical Amperes, 480V maximum

Refer to Appendix C: "Compliance" – Solid –State Short Circuit Protection

When group installed with the specified line reactor frame D, E, F, G, H, J & K sizes may be used on a supply rating delivering not more than 50,000 RMS Symmetrical amperes, 480V maximum, see table below for further information:

380-480V	Frame Size	Motor Power	Parker Part Number	MTE Part Number	Inductance mH	Rated amps
D		1.1kW / 1.5Hp	CO470651	RL-00402	6.5	4
		1.5kW / 2Hp	CO470651	RL-00402	6.5	4
		2.2kW / 3Hp	CO352782	RL-00803	5	8
		3kW	CO352782	RL-00803	5	8
		4kW / 5Hp	CO470652	RL-00802	3	8
		5.5kW / 7.5Hp	CO352783	RL-01202	2.5	12
E		7.5kW / 10Hp	CO352785	RL-01802	1.5	18
		11kW / 15Hp	CO352786	RL-02502	1.2	25
F		15kW / 20Hp	CO352901	RL-03502	0.8	35
		18.5kW / 25Hp	CO352901	RL-03502	0.8	35
		22kW / 30Hp	CO352902	RL-04502	0.7	45
G		22kW / 30Hp	CO352902	RL-04502	0.7	45
		30kW / 40Hp	CO352903	RL-05502	0.5	55
		37kW / 50Hp	CO352904	RL-08002	0.4	80
H		45kW / 60Hp	CO352904	RL-08002	0.4	80
		55kW / 75Hp	CO352905	RL-10002	0.3	100
		75kW / 100Hp	CO352906	RL-13002	0.2	130
J		90kW / 125Hp	CO470057	RL-16002	0.15	160
		110kW / 150Hp	CO470045	RL-20002	0.11	200
		132kW / 200Hp	CO470046	RL-25002	0.09	250
K		160kW / 250Hp	CO470047	RL-32002	0.075	320
		200kW / 300Hp	CO470048	RL-40002	0.06	400
		250kW / 350Hp	CO470049	RL-50002	0.05	500

# F-25 Technical Specifications

## ANALOG INPUTS/OUTPUTS

**AIN1 (X11/01), AIN2 (X11/02), AOUT1 (X11/03), AOUT2 (X11/04)**

Conforming to EN61131-2

	Inputs	Output
<b>Range</b>	AIN1: Range selected by parameter 0001 from: 0 to 10V, -10V to +10V, 0 to 20mA, 4 to 20mA  AIN2: Range selected by parameter 0002 from: 0 to 10V, -10V to +10V  Absolute maximum input current 25mA in current mode (AIN1 only)  Absolute maximum input voltage $\pm 24V$ dc in voltage mode	AOUT1: Range selected by parameter 0003 from: 0 to 10V, -10V to +10V  AOUT2: Range selected by parameter 0004 from: 0 to 10V, 0 to 20mA, 4 to 20mA  Maximum rated output current in voltage mode 10mA, with short circuit protection
<b>Impedance</b>	Input impedance: Voltage range = 22k $\Omega$ Current range = 120R	Load impedance : Voltage range $\geq 1k\Omega$ Current range $\leq 600\Omega$
<b>Resolution</b>	12 bits (1 in 4096) over full range	11 bits (1 in 2048)
<b>Accuracy</b>	Better than $\pm 1\%$	Better than $\pm 1\%$
<b>Sample / Update Rate</b>	1ms	1ms

## REFERENCE OUTPUTS


**+10VREF (X11/05), -10VREF (X11/06)**

<b>Output Voltage</b>	+10V and -10V
<b>Accuracy</b>	Better than $\pm 0.5\%$
<b>Output Current</b>	$\leq 10mA$
<b>Overload / Short Circuit Protection</b>	Indefinite

**DIGITAL INPUTS**

***DIN1 (X13/02) – DIN3 (X13/04), DIO1 (X12/01) – DIO4 (X12/04)***

Conforming to EN61131-2
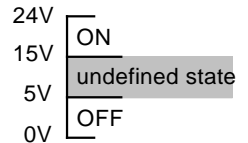
<b>Nominal Rated Voltage</b>	24V
<b>Operating Range</b>	<p>DIN1, DIN2, DIN3, DIO1, DIO2, DIO3, DIO4:                      0-5V dc = OFF, 15-24V dc = ON                      (absolute maximum input voltage <math>\pm 30V</math> dc)</p> 
<b>Input Threshold</b>	Typically 10V
<b>Input Impedance</b>	3.3k $\Omega$
<b>Input Current</b>	7.3mA $\pm$ 10% @ 24V
<b>Sample Interval</b>	1ms

**DIGITAL OUTPUTS**

***DIO1 (X12/01) – DIO4 (X12/04), conforming to EN61131-2***

<b>Nominal Open Circuit Output Voltage</b>	24V (minimum 21V)
<b>Rated Output Current</b>	140mA : The total current available is 140mA, either individually or as the sum of all digital outputs and User +24V Supply.
<b>Overload / Short Circuit Protection</b>	Indefinite

## F-27 Technical Specifications

### USER 24V SUPPLY OUTPUT (X12/05)

<b>Nominal Open Circuit Output Voltage</b>	24V (minimum 21V)
<b>Rated Output Current</b>	140mA : The total current available is 140mA, either individually or as the sum of all digital outputs and User +24V Supply.

### AUXILIARY 24V INPUT– AC30V AND AC30P ONLY

#### **+24V AUX input (X13/05), 0V AUX input (X13/06)**

<b>Operating Voltage</b>	24V $\pm$ 10%  This is an optional auxiliary power input. It will keep the control module, digital I/O, options and GKP powered when the main power is off. It will not power any analog I/O.  AC30V: A separate non-earthed SELV supply is required for each drive on which these inputs are used.  AC30P: A common non-earthed SELV supply can be used to power more than one control module, by connecting the positive supply to the terminal +24V AUX input (X13/05) on each drive and connecting the negative supply to the common system 0V star-point (to which each drives 0V terminal X12/06 and X13/01 are connected).
<b>Current</b>	0.5A minimum supply required, per control module  The supply to these inputs should be suitably externally fused at 2A, at each individual drive, to protect the control module and supply wiring.

### RELAYS - AC30V ONLY

#### **RL1 (X14/01 – X14/02), RL2 (X14/03 – X14/04)**

These are volt-free relay contacts

<b>Maximum Voltage</b>	250V ac or 30V dc  Protection against inductive or capacitive loads must be provided externally.
<b>Maximum Current</b>	3A resistive load

**SYSTEM AUXILIARY 24V INPUT – AC30D ONLY**

**+24V AUX input (X30/05), 0V AUX input (X30/06)**

<b>Operating Voltage</b>	<p>24V <math>\pm</math>10%</p> <p>This is the system auxiliary power input. It is used to power the isolated encoder power supply output (X31/07-08 and X32/07-08) and the encoder transmit output (X33/01-06).</p> <p>It will also keep the entire control module (digital I/O, analog I/O, options and GKP) powered when the main stack power is off.</p> <p>A common SELV supply can be used to power more than one control module, by bussing the supply to the +24V system aux. input terminal (X30/05) and to the 0V system aux. input terminal (X30/06), on each drive. Tie the 0V of this supply to earth at one point in the system only.</p>
<b>Input Current</b>	<p>1.5A minimum supply required, per control module.</p> <p>2.0A peak current on power-up, per control module.</p> <p>The supply to these inputs should be suitably externally fused at 2A, at each individual drive, to protect the control module and supply wiring.</p>
<b>Input Capacitance</b>	150uF nominal.

**DIGITAL INPUTS – AC30D ONLY**

**DIN1 (X30/01) – DIN3 (X30/03), DIN0V (X30/04)**

Conforming to EN61131-2

<b>Nominal Rated Voltage</b>	24V	
<b>Operating Range</b>	<p>DIN1, DIN2, DIN3:</p> <p>0-5V dc = OFF, 15-24V dc = ON</p> <p>(absolute maximum input voltage <math>\pm</math>30V dc)</p>	
<b>Input Threshold</b>	Typically 10V	
<b>Input Impedance</b>	2.6k $\Omega$	
<b>Input Current</b>	9.2mA $\pm$ 10% @ 24V	
<b>Sample Interval</b>	1ms	



## F-29 Technical Specifications

### ENCODER POWER SUPPLY OUTPUT – AC30D ONLY

**ENCPSU+ (X31/07, X32/07), ENCPSU-0V (X31/08, X32/08)**

<b>Output Voltage</b>	Programmable: 5V, 12V, 15V or 20V
<b>Rated Output Current</b>	Limited to 500mA and 5W: 500mA @ 5V 417mA @ 12V 333mA @ 15V 250mA @ 20V
<b>Isolation</b>	Galvanic isolation from control 0V. Power supply output has two terminals for each connection, for ease of use in supplying two encoders.
<b>Protection</b>	Short-circuit protected.

**ENCODER INPUTS – AC30D ONLY**
***ENC1-A (X32/01), ENC1-/A (X32/02), ENC1-B (X32/03), ENC1-/B (X32/04), ENC1-Z (X32/05), ENC1-/Z (X32/06)***
***ENC2-A (X31/01), ENC2-/A (X31/02), ENC2-B (X31/03), ENC2-/B (X31/04), ENC2-Z (X31/05), ENC2-/Z (X31/06)***

<b>Signalling Level</b>	5V (TTL, RS422, RS485) to 24V (HTL).
<b>Logic Threshold</b>	Selectable: Low level – nominally 1.8V (suitable for 5V signaling). High level – nominally 6.5V.
<b>Input Current</b>	Typ. 7mA @ 24V input.
<b>Absolute maximum input voltage</b>	+/- 30V
<b>Counting Modes</b>	Selectable: Quadrature Clock + Direction (Clock on channel A, direction on channel B)
<b>Maximum Count Frequency</b>	250kHz pulse rate
<b>Maximum Speed of Rotation (count frequency/number of lines)</b>	30000 rpm
<b>Quadrature Requirements</b>	Duty cycle – 40% to 60% Displacement (A to B) – 90° +/- 45°
<b>Isolation</b>	Individually isolated A, B and Z input channels. Galvanic isolation.

# F-31 Technical Specifications

## ENCODER TRANSMIT OUTPUTS – AC30D ONLY

*ENCT-A (X33/01), ENCT-/A (X33/02), ENCT-B (X33/03), ENCT-/B (X33/04), ENCT-Z (X33/05), ENCT-/Z (X33/06)*

<b>Signalling Type</b>	Differential: A to /A, B to /B and Z to /Z
<b>Output Voltage Levels</b>	Selectable: Off-load nominal output (differential) voltages: 5V, 12V, 15V or 20V Rated-load nominal output (differential) voltages: 4.0V, 10.8V, 13.9V or 18.9V (respectively)
<b>Rated Output Current</b>	33mA (100mA total for all three outputs combined)
<b>Maximum Count Frequency</b>	250kHz pulse rate
<b>Resolution of Output Period</b>	7ns (0.18% @ 250kHz)
<b>Operating Modes</b>	Selectable: Repeat of Encoder Input 1 Repeat of Encoder Input 2 Synthetic encoder output Digital outputs (general purpose)
<b>Propagation Delay in Repeat Mode</b>	< 1 $\mu$ s
<b>Protection</b>	Short-circuit protected.

# Parker Worldwide

**AE – UAE, Dubai**

Tel: +971 4 8127100

parker.me@parker.com

**AR – Argentina, Buenos Aires**

Tel: +54 3327 44 4129

**AT – Austria, Wiener Neustadt**

Tel: +43 (0)2622 23501-0

parker.austria@parker.com

**AT – Eastern Europe, Wiener Neustadt**

Tel: +43 (0)2622 23501 900

parker.easteurope@parker.com

**AU – Australia, Castle Hill**

Tel: +61 (0)2-9634 7777

**AZ – Azerbaijan, Baku**

Tel: +994 50 2233 458

parker.azerbaijan@parker.com

**BE/LU – Belgium, Nivelles**

Tel: +32 (0)67 280 900

parker.belgium@parker.com

**BR – Brazil, Cachoeirinha RS**

Tel: +55 51 3470 9144

**BY – Belarus, Minsk**

Tel: +375 17 209 9399

parker.belarus@parker.com

**CA – Canada, Milton, Ontario**

Tel: +1 905 693 3000

**CH – Switzerland, Etoy**

Tel: +41 (0)21 821 87 00

parker.switzerland@parker.com

**CL – Chile, Santiago**

Tel: +56 2 623 1216

**CN – China, Shanghai**

Tel: +86 21 2899 5000

**CZ – Czech Republic, Klecany**

Tel: +420 284 083 111

parker.czechrepublic@parker.com

**DE – Germany, Kaarst**

Tel: +49 (0)2131 4016 0

parker.germany@parker.com

**DK – Denmark, Ballerup**

Tel: +45 43 56 04 00

parker.denmark@parker.com

**ES – Spain, Madrid**

Tel: +34 902 330 001

parker.spain@parker.com

**FI – Finland, Vantaa**

Tel: +358 (0)20 753 2500

parker.finland@parker.com

**FR – France, Contamine s/Arve**

Tel: +33 (0)4 50 25 80 25

parker.france@parker.com

**GR – Greece, Athens**

Tel: +30 210 933 6450

parker.greece@parker.com

**HK – Hong Kong**

Tel: +852 2428 8008

**HU – Hungary, Budapest**

Tel: +36 1 220 4155

parker.hungary@parker.com

**IE – Ireland, Dublin**

Tel: +353 (0)1 466 6370

parker.ireland@parker.com

**IN – India, Mumbai**

Tel: +91 22 6513 7081-85

**IT – Italy, Corsico (MI)**

Tel: +39 02 45 19 21

parker.italy@parker.com

**JP – Japan, Tokyo**

Tel: +81 (0)3 6408 3901

**KR – South Korea, Seoul**

Tel: +82 2 559 0400

**KZ – Kazakhstan, Almaty**

Tel: +7 7272 505 800

parker.easteurope@parker.com

**MX – Mexico, Apodaca**

Tel: +52 81 8156 6000

**MY – Malaysia, Shah Alam**

Tel: +60 3 7849 0800

**NL – The Netherlands, Oldenzaal**

Tel: +31 (0)541 585 000

parker.nl@parker.com

**NO – Norway, Asker**

Tel: +47 66 75 34 00

parker.norway@parker.com

**NZ – New Zealand, Mt Wellington**

Tel: +64 9 574 1744

**PL – Poland, Warsaw**

Tel: +48 (0)22 573 24 00

parker.poland@parker.com

**PT – Portugal, Leca da Palmeira**

Tel: +351 22 999 7360

parker.portugal@parker.com

**RO – Romania, Bucharest**

Tel: +40 21 252 1382

parker.romania@parker.com

**RU – Russia, Moscow**

Tel: +7 495 645-2156

parker.russia@parker.com

**SE – Sweden, Spånga**

Tel: +46 (0)8 59 79 50 00

parker.sweden@parker.com

**SG – Singapore**

Tel: +65 6887 6300

**SK – Slovakia, Banská Bystrica**

Tel: +421 484 162 252

parker.slovakia@parker.com

**SL – Slovenia, Novo Mesto**

Tel: +386 7 337 6650

parker.slovenia@parker.com

**TH – Thailand, Bangkok**

Tel: +662 717 8140

**TR – Turkey, Istanbul**

Tel: +90 216 4997081

parker.turkey@parker.com

**TW – Taiwan, Taipei**

Tel: +886 2 2298 8987

**UA – Ukraine, Kiev**

Tel: +380 44 494 2731

parker.ukraine@parker.com

**UK – United Kingdom, Warwick**

Tel: +44 (0)1926 317 878

parker.uk@parker.com

**US – USA, Cleveland**

Tel: +1 216 896 3000

**VE – Venezuela, Caracas**

Tel: +58 212 238 5422

**ZA – South Africa, Kempton Park**

Tel: +27 (0)11 961 0700

parker.southafrica@parker.com

**European Product Information Centre**

Free phone: 00 800 27 27 5374

(from AT, BE, CH, CZ, DE, EE, ES, FI, FR, IE, IL, IS, IT, LU, MT, NL, NO, PT, SE, SK, UK)

**Parker Hannifin Manufacturing Limited  
Automation Group, Electromechanical Drives Business Unit,**

New Courtwick Lane,  
Littlehampton, West Sussex. BN17 7RZ

Office: +44 (0)1903 737000

Fax: +44 (0)1903 737100

www.parker.com/ssd