MITSUBISHI ELECTRIC

INVERTER

FR-A800

INSTRUCTION MANUAL (DETAILED)

FR-A820-00046(0.4K) to 04750(90K)
FR-A840-00023(0.4K) to 06830(280K)
FR-A846-00250(7.5K) to 00470(18.5K)

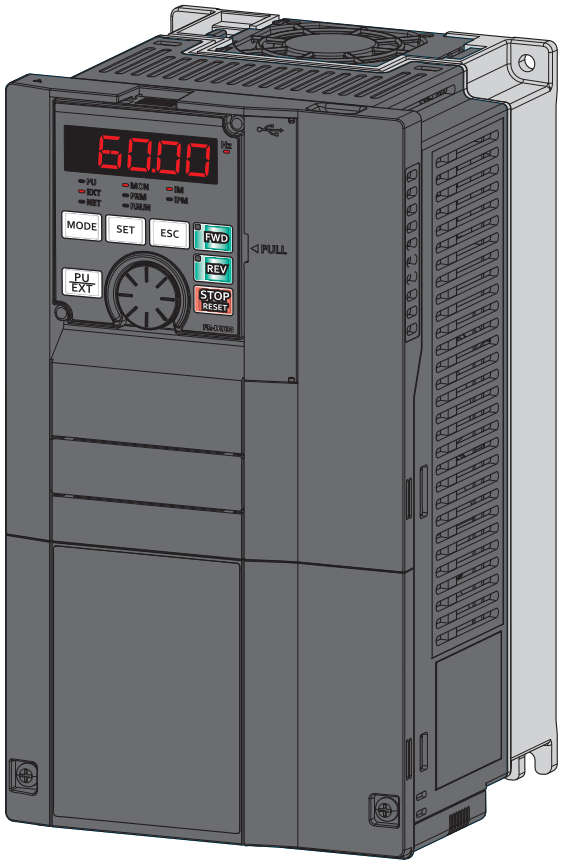

INTRODUCTION 1
INSTALLATION AND WIRING 2
PRECAUTIONS FOR USE OF THE INVERTER 3
BASIC OPERATION 4
PARAMETERS 5
PROTECTIVE FUNCTIONS 6
PRECAUTIONS FOR MAINTENANCE AND INSPECTION 7
SPECIFICATIONS 8

MITSUBISHI ELECTRIC CORPORATION
HEAD OFFICE: TOKYO BUILDING 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

Model	FR-A800 Instruction Manual (Detailed)
Model code	1A2-P52

IB(NA)-0600503ENG-B(1312)MEE Printed in Japan

Specifications subject to change without notice.