



Design Guide

VLT[®] AQUA Drive FC 202

0.25–90 kW



Contents

1 Introduction	8
1.1 Purpose of the Design Guide	8
1.2 Organization	8
1.3 Additional Resources	8
1.4 Abbreviations, Symbols and Conventions	9
1.5 Definitions	10
1.6 Document and Software Version	11
1.7 Approvals and Certifications	11
1.7.1 CE Mark	11
1.7.1.1 Low Voltage Directive	11
1.7.1.2 EMC Directive	11
1.7.1.3 Machinery Directive	12
1.7.1.4 ErP Directive	12
1.7.2 C-Tick Compliance	12
1.7.3 UL Compliance	12
1.7.4 Marine Compliance	12
1.8 Safety	12
1.8.1 General Safety Principles	12
2 Product Overview	15
2.1 Introduction	15
2.2 Description of Operation	19
2.3 Sequence of Operation	20
2.3.1 Rectifier Section	20
2.3.2 Intermediate Section	20
2.3.3 Inverter Section	20
2.3.4 Brake Option	20
2.3.5 Load Sharing	21
2.4 Control Structures	21
2.4.1 Control Structure Open-loop	21
2.4.2 Control Structure Closed-loop	22
2.4.3 Local (Hand On) and Remote (Auto On) Control	22
2.4.4 Reference Handling	23
2.4.5 Feedback Handling	25
2.5 Automated Operational Functions	26
2.5.1 Short Circuit Protection	26
2.5.2 Overvoltage Protection	26

2.5.3 Missing Motor Phase Detection	27
2.5.4 Line Phase Imbalance Detection	27
2.5.5 Switching on the Output	27
2.5.6 Overload Protection	27
2.5.7 Automatic Derating	27
2.5.8 Automatic Energy Optimization	28
2.5.9 Automatic Switching Frequency Modulation	28
2.5.10 Automatic Derating for High Switching Frequency	28
2.5.11 Automatic Derating for Overtemperature	28
2.5.12 Auto Ramping	28
2.5.13 Current Limit Circuit	28
2.5.14 Power Fluctuation Performance	28
2.5.15 Motor Soft Start	29
2.5.16 Resonance Damping	29
2.5.17 Temperature-controlled Fans	29
2.5.18 EMC Compliance	29
2.5.19 Current Measurement on All Three Motor Phases	29
2.5.20 Galvanic Isolation of Control Terminals	29
2.6 Custom Application Functions	29
2.6.1 Automatic Motor Adaptation	29
2.6.2 Motor Thermal Protection	29
2.6.3 Line Drop-out	30
2.6.4 Built-in PID Controllers	30
2.6.5 Automatic Restart	31
2.6.6 Flying Start	31
2.6.7 Full Torque at Reduced Speed	31
2.6.8 Frequency Bypass	31
2.6.9 Motor Preheat	31
2.6.10 Four Programmable Set-ups	31
2.6.11 Dynamic Braking	31
2.6.12 DC Braking	31
2.6.13 Sleep Mode	31
2.6.14 Run Permissive	31
2.6.15 Smart Logic Control (SLC)	32
2.6.16 STO Function	33
2.7 Fault, Warning and Alarm Functions	33
2.7.1 Operation at Overtemperature	33
2.7.2 High and Low Reference Warning	34

2.7.3 High and Low Feedback Warning	34
2.7.4 Phase Imbalance or Phase Loss	34
2.7.5 High Frequency Warning	34
2.7.6 Low Frequency Warning	34
2.7.7 High Current Warning	34
2.7.8 Low Current Warning	34
2.7.9 No Load/Broken Belt Warning	34
2.7.10 Lost Serial Interface	34
2.8 User Interfaces and Programming	34
2.8.1 Local Control Panel	35
2.8.2 PC Software	35
2.8.2.1 MCT 10 Set-up Software	36
2.8.2.2 VLT® Harmonics Calculation Software MCT 31	36
2.8.2.3 Harmonic Calculation Software (HCS)	36
2.9 Maintenance	36
2.9.1 Storage	37
3 System Integration	38
3.1 Ambient Operating Conditions	38
3.1.1 Humidity	38
3.1.2 Temperature	38
3.1.3 Cooling	39
3.1.4 Motor-generated Overvoltage	40
3.1.5 Acoustic Noise	40
3.1.6 Vibration and Shock	40
3.1.7 Aggressive Atmospheres	40
3.1.8 IP Rating Definitions	42
3.1.9 Radio Frequency Interference	42
3.1.10 PELV and Galvanic Isolation Compliance	43
3.1.11 Storage	43
3.2 EMC, Harmonics and Ground Leakage Protection	44
3.2.1 General Aspects of EMC Emissions	44
3.2.2 EMC Test Results	45
3.2.3 Emission Requirements	48
3.2.4 Immunity Requirements	48
3.2.5 Motor Insulation	49
3.2.6 Motor Bearing Currents	49
3.2.7 Harmonics	50
3.2.8 Ground Leakage Current	52

3.3 Line Power Integration	54
3.3.1 Line Power Configurations and EMC Effects	54
3.3.2 Low-frequency Line Interference	54
3.3.3 Analyzing Line Interference	55
3.3.4 Options for Reducing Line Interference	55
3.3.5 Radio Frequency Interference	55
3.3.6 Classification of the Operating Site	56
3.3.7 Use with Isolated Input Source	56
3.3.8 Power Factor Correction	56
3.3.9 Input Power Delay	56
3.3.10 Electrical Transients	57
3.3.11 Operation with a Standby Generator	57
3.4 Motor Integration	58
3.4.1 Motor Selection Considerations	58
3.4.2 Sine-wave and dU/dt Filters	58
3.4.3 Proper Motor Grounding	58
3.4.4 Motor Cables	58
3.4.5 Motor Cable Shielding	58
3.4.6 Connection of Multiple Motors	59
3.4.7 Control Wire Isolation	60
3.4.8 Motor Thermal Protection	61
3.4.9 Output Contactor	61
3.4.10 Brake Functions	61
3.4.11 Dynamic Braking	61
3.4.12 Brake Resistor Calculation	61
3.4.13 Brake Resistor Cabling	63
3.4.14 Brake Resistor and Brake IGBT	63
3.4.15 Energy Efficiency	63
3.5 Additional Inputs and Outputs	64
3.5.1 Wiring Schematic	64
3.5.2 Relay Connections	65
3.5.3 EMC-compliant Electrical Connection	66
3.6 Mechanical Planning	67
3.6.1 Clearance	67
3.6.2 Wall Mounting	67
3.6.3 Access	68
3.7 Options and Accessories	68
3.7.1 Communication Options	72

3.7.2 Input/Output, Feedback and Safety Options	72
3.7.3 Cascade Control Options	72
3.7.4 Brake Resistors	74
3.7.5 Sine-wave Filters	74
3.7.6 dU/dt Filters	74
3.7.7 Common-mode Filters	74
3.7.8 Harmonic Filters	75
3.7.9 IP21/NEMA Type 1 Enclosure Kit	75
3.7.10 Remote Mounting Kit for LCP	77
3.7.11 Mounting Bracket for Enclosure Sizes A5, B1, B2, C1 and C2	78
3.8 Serial Interface RS485	80
3.8.1 Overview	80
3.8.2 Network Connection	81
3.8.3 RS485 Bus Termination	81
3.8.4 EMC Precautions	81
3.8.5 FC Protocol Overview	82
3.8.6 Network Configuration	82
3.8.7 FC Protocol Message Framing Structure	82
3.8.8 FC Protocol Examples	86
3.8.9 Modbus RTU Protocol	87
3.8.10 Modbus RTU Message Framing Structure	88
3.8.11 Access to Parameters	91
3.8.12 FC Drive Control Profile	92
3.9 System Design Checklist	98
4 Application Examples	100
4.1 Application Feature Overview	100
4.2 Selected Application Features	100
4.2.1 SmartStart	100
4.2.2 Quick Menu Water and Pumps	101
4.2.3 29-1* Deragging Function	101
4.2.4 Pre/post Lube	102
4.2.5 29-5* Flow Confirmation	103
4.3 Application Set-up Examples	104
4.3.1 Submersible Pump Application	106
4.3.2 BASIC Cascade Controller	108
4.3.3 Pump Staging with Lead Pump Alternation	109
4.3.4 System Status and Operation	109
4.3.5 Cascade Controller Wiring Diagram	110

4.3.6 Fixed Variable-speed Pump Wiring Diagram	111
4.3.7 Lead Pump Alternation Wiring Diagram	111
5 Special Conditions	115
5.1 Manual Derating	115
5.2 Derating for Long Motor Cables or Cables with Larger Cross-Section	116
5.3 Derating for Ambient Temperature	116
6 Type code and Selection	121
6.1 Ordering	121
6.1.1 Type Code	121
6.1.2 Software Language	123
6.2 Options, Accessories, and Spare Parts	123
6.2.1 Options and Accessories	123
6.2.2 Spare Parts	125
6.2.3 Accessory Bags	125
6.2.4 Brake Resistor Selection	126
6.2.5 Recommended Brake Resistors	127
6.2.6 Alternative Brake Resistors, T2 and T4	139
6.2.7 Harmonic Filters	141
6.2.8 Sine-Wave Filters	144
6.2.9 dU/dt Filters	146
6.2.10 Common Mode Filters	147
7 Specifications	148
7.1 Electrical Data	148
7.1.1 Line Power Supply 1x200–240 V AC	148
7.1.2 Line Power Supply 3x200–240 V AC	149
7.1.3 Line Power Supply 1x380–480 V AC	153
7.1.4 Line Power Supply 3x380–480 V AC	154
7.1.5 Line Power Supply 3x525–600 V AC	158
7.1.6 Line Power Supply 3x525–690 V AC	162
7.2 Line Power Supply	165
7.3 Motor Output and Motor Data	165
7.4 Ambient Conditions	166
7.5 Cable Specifications	166
7.6 Control Input/Output and Control Data	167
7.7 Fuses and Circuit Breakers	170
7.8 Power Ratings, Weight and Dimensions	179

7.9 dU/dt Testing	182
7.10 Acoustic Noise Ratings	185
7.11 Selected Options	185
7.11.1 VLT [®] General Purpose I/O Module MCB 101	185
7.11.2 VLT [®] Relay Card MCB 105	185
7.11.3 VLT [®] PTC Thermistor Card MCB 112	187
7.11.4 VLT [®] Extended Relay Card MCB 113	189
7.11.5 VLT [®] Sensor Input Option MCB 114	190
7.11.6 VLT [®] Extended Cascade Controller MCO 101	191
7.11.7 VLT [®] Advanced Cascade Controller MCO 102	192
8 Appendix - Selected Drawings	195
8.1 AC Line Input Connection Drawings (3-phases)	195
8.2 Motor Connection Drawings	198
8.3 Relay Terminal Drawings	200
8.4 Cable Entry Holes	201
Index	205

1 Introduction

1.1 Purpose of the Design Guide

This design guide for Danfoss VLT® AQUA Drive adjustable frequency drives is intended for:

- Project and systems engineers
- Design consultants
- Application and product specialists

The design guide provides technical information to understand the capabilities of the adjustable frequency drive for integration into motor control and monitoring systems.

The purpose of the design guide is to provide design considerations and planning data for integration of the adjustable frequency drive into a system. The design guide caters for selection of adjustable frequency drives and options for a diversity of applications and installations.

Reviewing the detailed product information in the design stage enables the development of a well-conceived system with optimal functionality and efficiency.

VLT® is a registered trademark.

1.2 Organization

Chapter 1 Introduction: The general purpose of the design guide and compliance with international directives.

Chapter 2 Product Overview: The internal structure and functionality of the adjustable frequency drive and operational features.

Chapter 3 System Integration: Environmental conditions; EMC, harmonics, and ground leakage; line power input; motors and motor connections; other connections; mechanical planning; and descriptions of options and accessories available.

Chapter 4 Application Examples: Samples of product applications and guidelines for use.

Chapter 5 Special Conditions: Details on unusual operational environments.

Chapter 6 Type code and Selection: Procedures for ordering equipment and options to meet the intended use of the system.

Chapter 7 Specifications: A compilation of technical data in table and graphics format.

Chapter 8 Appendix - Selected Drawings: A compilation of graphics illustrating line power and motor connections, relay terminals, and cable entries.

1.3 Additional Resources

Resources available to understand advanced adjustable frequency drive operation, programming, and directives compliance:

- The *VLT® AQUA Drive FC 202 Instruction Manual* (referenced as *Instruction Manual* in this manual) provide detailed information for the installation and start-up of the adjustable frequency drive.
- The *VLT® AQUA Drive FC 202 Design Guide* provides information required for design and planning for integration of the adjustable frequency drive into a system.
- The *VLT® AQUA Drive FC 202 Programming Guide* (referenced as *Programming Guide* in this manual) provides greater detail about how to work with parameters and many application examples.
- The *VLT® Safe Torque Off Instruction Manual* describes how to use Danfoss adjustable frequency drives in functional safety applications. This manual is supplied with the adjustable frequency drive when the STO option is present.
- The *VLT® Brake Resistor Design Guide* explains optimal brake resistor selection.

Supplemental publications and manuals are available for download from danfoss.com/Product/Literature/Technical+Documentation.htm.

NOTICE!

Optional equipment is available that may change some of the information described in these publications. Be sure to see the instructions supplied with the options for specific requirements.

Contact a Danfoss supplier or visit www.danfoss.com for additional information.

1.4 Abbreviations, Symbols and Conventions

60° AVM	60° asynchronous vector modulation
A	Ampere/AMP
AC	Alternating current
AD	Air discharge
AEO	Automatic energy optimization
AI	Analog input
AMA	Automatic motor adaptation
AWG	American wire gauge
°C	Degrees celsius
CD	Constant discharge
CM	Common mode
CT	Constant torque
DC	Direct current
DI	Digital input
DM	Differential mode
D-TYPE	Drive dependent
EMC	Electromagnetic compatibility
EMF	Electromotive force
ETR	Electronic thermal relay
f _{JOG}	Motor frequency when jog function is activated.
f _M	Motor frequency
f _{MAX}	The maximum output frequency the adjustable frequency drive applies on its output.
f _{MIN}	The minimum motor frequency from adjustable frequency drive.
f _{M,N}	Nominal motor frequency
FC	Adjustable frequency drive
g	Gram
Hiperface®	Hiperface® is a registered trademark by Stegmann
hp	Horse power
HTL	HTL encoder (10–30 V) pulses - High-voltage transistor logic
Hz	Hertz
I _{INV}	Rated inverter output current
I _{LIM}	Current limit
I _{M,N}	Nominal motor current
I _{VLT,MAX}	The maximum output current
I _{VLT,N}	The rated output current supplied by the adjustable frequency drive
kHz	Kilohertz
LCP	Local control panel
lsb	Least significant bit
m	Meter
mA	Milliampere
MCM	Mille circular mil
MCT	Motion control tool
mH	Inductance in millihenry

min	Minute
ms	Millisecond
msb	Most significant bit
η _{VLT}	Efficiency of the adjustable frequency drive defined as the ratio between power output and power input.
nF	Capacitance in nano Farad
NLCP	Numerical local control panel
Nm	Newton meter
n _s	Synchronous motor speed
Online/Offline Parameters	Changes to online parameters are activated immediately after the data value is changed.
P _{br,cont.}	Rated power of the brake resistor (average power during continuous braking).
PCB	Printed circuit board
PCD	Process data
PELV	Protective extra low voltage
P _m	Adjustable frequency drive nominal output power as high overload (HO).
P _{M,N}	Nominal motor power
PM motor	Permanent magnet motor
Process PID	The PID regulator maintains the desired speed, pressure, temperature, and so on.
R _{br,nom}	The nominal resistor value that ensures a brake power on the motor shaft of 150/160% for 1 minute
RCD	Residual current device
Regen	Regenerative terminals
R _{min}	Minimum permissible brake resistor value by adjustable frequency drive
RMS	Root mean square
RPM	Revolutions per minute
R _{rec}	Recommended brake resistor resistance of Danfoss brake resistors
s	Second
SFAVM	Stator flux-oriented asynchronous vector modulation
STW	Status word
SMPS	Switch mode power supply
THD	Total harmonic distortion
T _{LIM}	Torque limit
TTL	TTL encoder (5 V) pulses - transistor transistor logic
U _{M,N}	Nominal motor voltage
V	Volts
VT	Variable torque
VVC+	Voltage vector control

Table 1.1 Abbreviations

Conventions

Numbered lists indicate procedures.

Bullet lists indicate other information and descriptions of figures.

Italicized text indicates:

- Cross reference
- Link
- Footnote
- Parameter name, parameter group name, parameter option

All dimensions are in inch (mm).

* indicates a default setting of a parameter.

The following symbols are used in this document:



Indicates a potentially hazardous situation that could result in death or serious injury.



Indicates a potentially hazardous situation that could result in minor or moderate injury. It can also be used to alert against unsafe practices.

NOTICE

Indicates important information, including situations that can result in damage to equipment or property.

1.5 Definitions**Brake resistor**

The brake resistor is a module capable of absorbing the braking energy generated in regenerative braking. This regenerative braking energy increases the intermediate circuit voltage and a brake chopper ensures that the power is transmitted to the brake resistor.

Coast

The motor shaft is in free mode. No torque on the motor.

CT characteristics

Constant torque characteristics used for all applications such as conveyor belts, displacement pumps and cranes.

Initializing

If initialization is carried out (14-22 *Operation Mode*), the adjustable frequency drive returns to the default setting.

Intermittent duty cycle

An intermittent duty rating refers to a sequence of duty cycles. Each cycle consists of an on-load and an off-load period. The operation can be either periodic duty or non-periodic duty.

Power factor

The true power factor (λ) takes all the harmonics into consideration and is always smaller than the power factor ($\cos\phi$) that only considers the 1st harmonics of current and voltage.

$$\cos\phi = \frac{P \text{ (kW)}}{P \text{ (kVA)}} = \frac{U\lambda \times I\lambda \times \cos\phi}{U\lambda \times I\lambda}$$

Cos-phi is also known as displacement power factor.

Both λ and $\cos\phi$ are stated for Danfoss VLT® adjustable frequency drives in *chapter 7.2 Line Power Supply*.

The power factor indicates to which extent the adjustable frequency drive imposes a load on the line power supply. The lower the power factor, the higher the I_{RMS} for the same kW performance.

In addition, a high power factor indicates that the harmonic currents are low.

All Danfoss adjustable frequency drives have built-in DC coils in the DC link to have a high power factor and reduce the THD on the main supply.

Set-up

Save parameter settings in four set-ups. Change between the four parameter set-ups and edit one set-up while another set-up is active.

Slip compensation

The adjustable frequency drive compensates for the motor slip by giving the frequency a supplement that follows the measured motor load, keeping the motor speed almost constant.

Smart logic Control (SLC)

The SLC is a sequence of user-defined actions executed when the associated user-defined events are evaluated as true by the SLC. (Parameter group 13-** *Smart Logic*).

FC Standard bus

Includes RS485 bus with FC protocol or MC protocol. See 8-30 *Protocol*.

Thermistor

A temperature-dependent resistor placed where the temperature is to be monitored (adjustable frequency drive or motor).

Trip

A state entered in fault situations, such as when the adjustable frequency drive is subject to an overtemperature or when it protects the motor, process or mechanism. Restart is prevented until the cause of the fault has disappeared and the trip state is cancelled. Cancel the trip state by:

- activating reset or
- programming the adjustable frequency drive to reset automatically

Do not use trip for personal safety.

Trip locked

A state entered in fault situations when the adjustable frequency drive is protecting itself and requires physical intervention, for example, if the adjustable frequency drive is subject to a short circuit on the output. A locked trip can only be canceled by cutting off line power, removing the cause of the fault, and reconnecting the adjustable frequency drive. Restart is prevented until the trip state is canceled by activating reset or, in some cases, by being programmed to reset automatically. Do not use trip for personal safety.

VT Characteristics

Variable torque characteristics for pumps and fans.

1.6 Document and Software Version

This manual is regularly reviewed and updated. All suggestions for improvement are welcome.

Table 1.2 shows the document version and the corresponding software version.

Edition	Remarks	Software version
MG20N6xx	Replaces MG20N5xx	2.20 and later

Table 1.2 Document and Software Version

1.7 Approvals and Certifications

Adjustable frequency drives are designed in compliance with the directives described in this section.

For more information on approvals and certificates, go to the download area at <http://www.danfoss.com/BusinessAreas/DrivesSolutions/Documentations/>.

1.7.1 CE Mark



Figure 1.1 CE

The CE mark (Communauté Européenne) indicates that the product manufacturer conforms to all applicable EU directives. The EU directives applicable to the design and manufacture of adjustable frequency drives are listed in Table 1.3.

NOTICE!

The CE mark does not regulate the quality of the product. Technical specifications cannot be deduced from the CE mark.

NOTICE!

Adjustable frequency drives with an integrated safety function must comply with the machinery directive.

EU directive	Version
Low voltage directive	2006/95/EC
EMC directive	2004/108/EC
Machinery directive ¹⁾	2006/42/EC
ErP directive	2009/125/EC
ATEX directive	94/9/EC
RoHS directive	2002/95/EC

Table 1.3 EU Directives Applicable to Adjustable Frequency Drives

¹⁾ Machinery directive conformance is only required for adjustable frequency drives with an integrated safety function.

Declarations of conformity are available on request.

1.7.1.1 Low Voltage Directive

The low voltage directive applies to all electrical equipment in the 50–1000 V AC and the 75–1600 V DC voltage ranges.

The aim of the directive is to ensure personal safety and avoid property damage when operating electrical equipment that is installed and maintained correctly and in its intended application.

1.7.1.2 EMC Directive

The purpose of the EMC (electromagnetic compatibility) directive is to reduce electromagnetic interference and enhance the immunity of electrical equipment and installations. The basic protection requirement of the EMC Directive 2004/108/EC states that devices that generate electromagnetic interference (EMI), or whose operation could be affected by EMI, must be designed to limit the generation of electromagnetic interference and shall have a suitable degree of immunity to EMI when properly installed, maintained, and used as intended.

Electrical equipment devices used alone or as part of a system must bear the CE mark. Systems do not require the CE mark, but must comply with the basic protection requirements of the EMC directive.

1.7.1.3 Machinery Directive

The aim of the machinery directive is to ensure personal safety and avoid property damage for mechanical equipment used in its intended application. The machinery directive applies to a machine consisting of an aggregate of interconnected components or devices of which at least one is capable of mechanical movement.

Adjustable frequency drives with an integrated safety function must comply with the machinery directive. Adjustable frequency drives without the safety function do not fall under the machinery directive. If an adjustable frequency drive is integrated into a machinery system, Danfoss can provide information on safety aspects relating to the adjustable frequency drive.

When adjustable frequency drives are used in machines with at least one moving part, the machine manufacturer must provide a declaration stating compliance with all relevant statutes and safety measures.

1.7.1.4 ErP Directive

The ErP directive is the European Ecodesign Directive for energy-related products. The directive sets eco design requirements for energy-related products, including adjustable frequency drives. The aim of the directive is to increase energy efficiency and the level of protection of the environment, while increasing the security of the energy supply. Environmental impact of energy-related products includes energy consumption throughout the entire product life cycle.

1.7.2 C-Tick Compliance



Figure 1.2 C-Tick

The C-Tick label indicates compliance with the applicable technical standards for Electromagnetic Compatibility (EMC). C-Tick compliance is required for placing electrical and electronic devices on the market in Australia and New Zealand.

The C-Tick regulatory is about conducted and radiated emission. For adjustable frequency drives, apply the emission limits specified in EN/IEC 61800-3.

A declaration of conformity can be provided on request.

1.7.3 UL Compliance

UL-listed



Figure 1.3 UL

NOTICE!

525–690 V adjustable frequency drives are not certified for UL.

The adjustable frequency drive complies with UL508C thermal memory retention requirements. For more information, refer to *chapter 2.6.2 Motor Thermal Protection*.

1.7.4 Marine Compliance

1.8 Safety

1.8.1 General Safety Principles

If handled improperly, adjustable frequency drives contain high-voltage components and have the potential for fatal injury. Only qualified personnel should install and operate the equipment. Do not attempt repair work without first removing power from the adjustable frequency drive and waiting the designated amount of time for stored electrical energy to dissipate.

Strict adherence to safety precautions and notices is mandatory for safe operation of the adjustable frequency drive.

1.8.2 Qualified Personnel

Correct and reliable transport, storage, installation, operation, and maintenance are required for the trouble-free and safe operation of the adjustable frequency drive. Only qualified personnel are allowed to install or operate this equipment.

Qualified personnel are defined as trained staff, who are authorized to install, commission, and maintain equipment, systems, and circuits in accordance with pertinent laws and regulations. Additionally, the qualified personnel must be familiar with the instructions and safety measures described in this instruction manual.

⚠ WARNING

HIGH VOLTAGE

Adjustable frequency drives contain high voltage when connected to AC line power input, DC power supply, or load sharing. Failure to perform installation, start-up, and maintenance by qualified personnel can result in death or serious injury.

- Installation, start-up, and maintenance must be performed by qualified personnel only.

⚠ WARNING

UNINTENDED START

When the adjustable frequency drive is connected to AC line power, DC power supply, or load sharing, the motor may start at any time. Unintended start during programming, service, or repair work can result in death, serious injury, or property damage. The motor can start via an external switch, a serial bus command, an input reference signal from the LCP, or after a cleared fault condition.

To prevent unintended motor start:

- Disconnect the adjustable frequency drive from line power.
- Press [Off/Reset] on the LCP before programming parameters.
- The adjustable frequency drive, motor, and any driven equipment must be fully wired and assembled when the adjustable frequency drive is connected to AC line power, DC power supply, or load sharing.

⚠ WARNING

DISCHARGE TIME

The adjustable frequency drive contains DC link capacitors that can remain charged even when the adjustable frequency drive is not powered. Failure to wait the specified time after power has been removed before performing service or repair work can result in death or serious injury.

- Stop the motor.
- Disconnect AC line power and remote DC link power supplies, including battery backups, UPS, and DC link connections to other adjustable frequency drives.
- Disconnect or lock any PM motor.
- Wait for the capacitors to discharge fully before performing any service or repair work. The duration of waiting time is specified in *Table 1.4*.

Voltage [V]	Minimum waiting time (minutes)		
	4	7	15
200–240	0.25–3.7 kW (0.34–5 hp)	-	5.5–45 kW (7.5–60 hp)
380–480	0.37–7.5 kW (0.5–10 hp)	-	11–90 kW (15–125 hp)
525–600	0.75–7.5 kW (1–10 hp)	-	11–90 kW (15–125 hp)
525–690	-	1.1–7.5 kW (1.5–10 hp)	11–90 kW (15–125 hp)

High voltage may be present even when the warning LED indicator lights are off.

Table 1.4 Discharge Time

⚠ WARNING

LEAKAGE CURRENT HAZARD

Leakage currents exceed 3.5 mA. Failure to ground the adjustable frequency drive properly can result in death or serious injury.

- Ensure the correct grounding of the equipment by a certified electrical installer.

⚠ WARNING**EQUIPMENT HAZARD**

Contact with rotating shafts and electrical equipment can result in death or serious injury.

- Ensure that only trained and qualified personnel perform installation, start-up, and maintenance.
- Ensure that electrical work conforms to national and local electrical codes.
- Follow the procedures in these document.

⚠ WARNING**UNINTENDED MOTOR ROTATION****WINDMILLING**

Unintended rotation of permanent magnet motors creates voltage and can charge the unit, resulting in death, serious injury, or equipment damage.

- Ensure that permanent magnet motors are blocked to prevent unintended rotation.

⚠ CAUTION**INTERNAL FAILURE HAZARD**

An internal failure in the adjustable frequency drive can result in serious injury when the adjustable frequency drive is not properly closed.

- Ensure that all safety covers are in place and securely fastened before applying power.

2 Product Overview

2.1 Introduction

This chapter provides an overview of the adjustable frequency drive's primary assemblies and circuitry. It describes the internal electrical and signal processing functions. A description of the internal control structure is also included.

Also described are automated and optional adjustable frequency drive functions available for designing robust operating systems with sophisticated control and status reporting performance.

2.1.1 Product Dedication to Water and Wastewater Applications

The VLT® AQUA Drive FC 202 is designed for water and wastewater applications. The integrated SmartStart wizard and the quick menu *Water and Pumps* guide the user through the commissioning process. The range of standard and optional features includes:

- Cascade control
- Dry-run detection
- End of curve detection
- Motor alternation
- Deragging
- Initial and final ramp
- Check valve ramp
- STO
- Low-flow detection
- Pre-lube
- Flow confirmation
- Pipe fill mode
- Sleep mode
- Real time clock
- Password protection
- Overload protection
- Smart logic control
- Minimum speed monitor
- Free programmable texts for information, warnings and alerts

2.1.2 Energy Savings

Compared to alternative control systems and technologies, an adjustable frequency drive is the optimum energy control system for controlling fan and pump systems.

By using an adjustable frequency drive to control the flow, a pump speed reduction of 20% leads to energy savings of about 50% in typical applications.

Figure 2.1 shows an example of the achievable energy reduction.

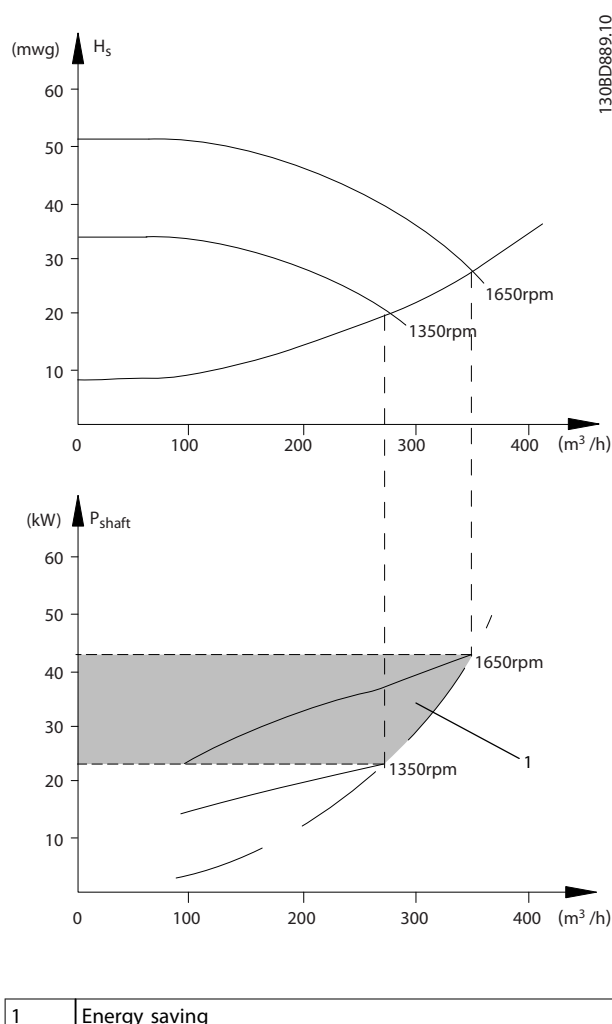


Figure 2.1 Example: Energy Saving

2.1.3 Example of Energy Savings

As shown in *Figure 2.2*, the flow is controlled by changing the pump speed, measured in RPM. By reducing the rated speed by only 20%, the flow is also reduced by 20%. This is because the flow is directly proportional to the speed. The consumption of electricity, however, is reduced by up to almost 50%.

If the system only has to supply a flow that corresponds to 100% a few days in a year, while the average is below 80% of the rated flow for the remainder of the year, the energy savings are even greater than 50%.

Figure 2.2 describes the dependence of flow, pressure, and power consumption on pump speed in RPM for centrifugal pumps.

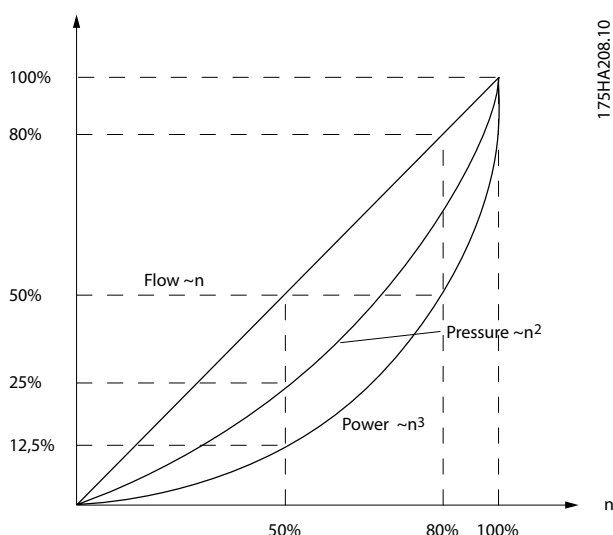


Figure 2.2 Affinity Laws for Centrifugal Pumps

$$\text{Flow : } \frac{Q_1}{Q_2} = \frac{n_1}{n_2}$$

$$\text{Pressure : } \frac{H_1}{H_2} = \left(\frac{n_1}{n_2}\right)^2$$

$$\text{Power : } \frac{P_1}{P_2} = \left(\frac{n_1}{n_2}\right)^3$$

Assuming an equal efficiency in the speed range.

Q=Flow	P=Power
Q ₁ =Flow 1	P ₁ =Power 1
Q ₂ =Reduced flow	P ₂ =Reduced power
H=Pressure	n=Speed regulation
H ₁ =Pressure 1	n ₁ =Speed 1
H ₂ =Reduced pressure	n ₂ =Reduced speed

Table 2.1 Affinity Laws



2.1.4 Valve Control versus Speed Control of Centrifugal Pumps

Valve control

As the demand for process requirements in water systems varies, the flow has to be adjusted accordingly. Frequently used methods for flow adaptation are throttling or recycling using valves.

A recycle valve that is opened too wide can cause the pump to run at the end of the pump curve, with a high flow rate at a low pump head. These conditions do not only cause a waste of energy due to the high speed of the pump, but can also lead to pump cavitation with resultant pump damage.

Throttling the flow with a valve adds a pressure drop across the valve (HP-HS). This can be compared with accelerating and pulling the brake at the same time in an attempt to reduce car speed. *Figure 2.3* shows that throttling makes the system curve turn from point (2) on the pump curve to a point with significantly reduced efficiency (1).

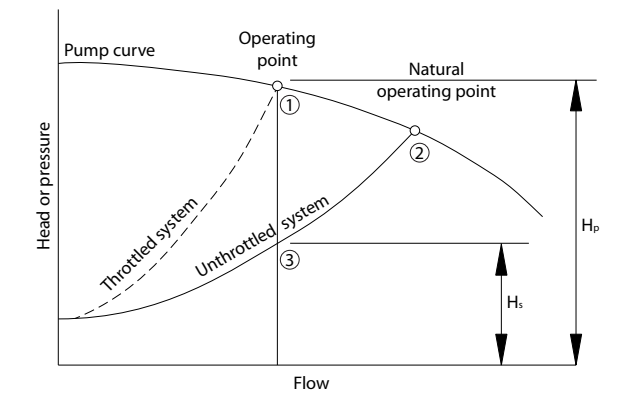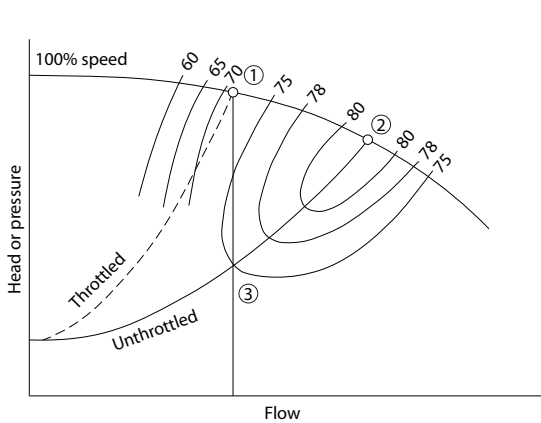


1	Operating point using a throttle valve
2	Natural operating point
3	Operating point using speed control

Figure 2.3 Flow Reduction by Valve Control (Throttling)

Speed control

The same flow can be adjusted by reducing the speed of the pump, as shown in Figure 2.4. Reducing the speed moves the pump curve down. The point of operation is the new intersection point of the pump curve and the system curve (3). The energy savings can be calculated by applying the affinity laws as described in chapter 2.1.3 Example of Energy Savings.

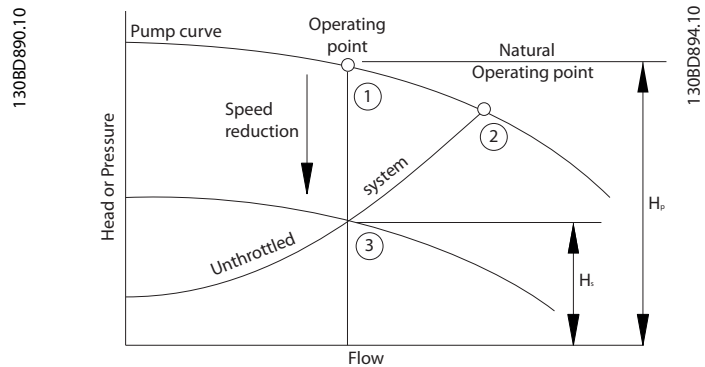

1	Operating point using a throttle valve
2	Natural operating point
3	Operating point using speed control

Figure 2.4 Flow Reduction by Speed Control


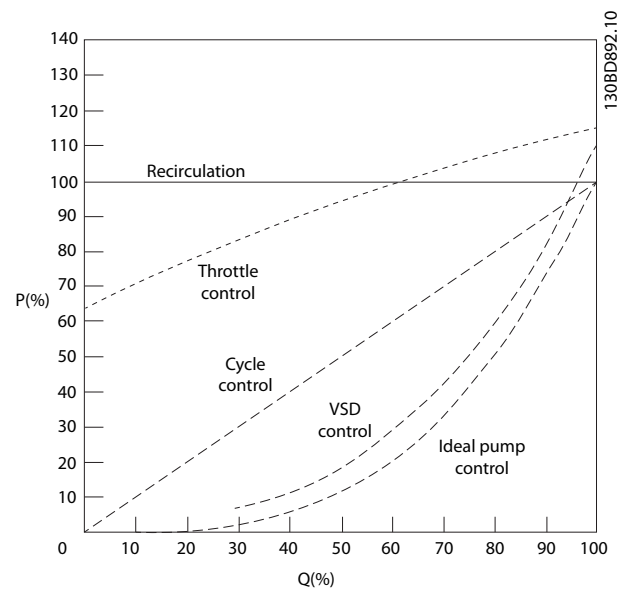


Figure 2.5 Comparative Flow Control Curves

2.1.5 Example with Varying Flow over 1 Year

This example is calculated based on pump characteristics obtained from a pump datasheet, shown in Figure 2.7.

The result obtained shows energy savings in excess of 50% at the given flow distribution over a year, see Figure 2.6. The payback period depends on the price of electricity and the price of the adjustable frequency drive. In this example, payback is less than a year, when compared with valves and constant speed.

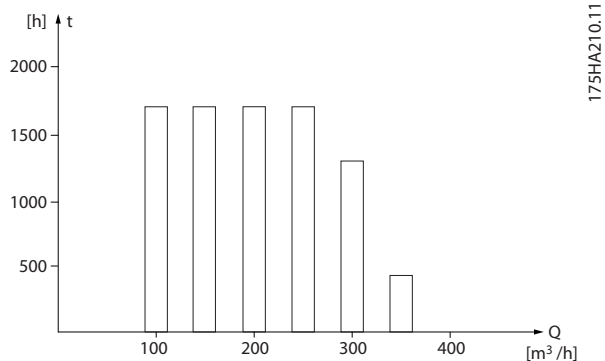

175HA210.11

t [h]	Duration of flow. See also Table 2.2.
Q [m³/h]	Flow rate

Figure 2.6 Flow Distribution over 1 Year (Duration versus Flow Rate)

Flow rate	Distribution		Valve regulation		Adjustable frequency drive control	
	%	Duration	Power	Consumption	Power	Consumption
[m³/h]		[h]	[kW (hp)]	[kWh]	[kW (hp)]	[kWh]
350	5	438	42.5 (57) ¹⁾	18.615	42.5 (57) ¹⁾	18.615
300	15	1314	38.5 (52)	50.589	29.0 (39)	38.106
250	20	1752	35.0 (47)	61.320	25 (18.5)	32.412
200	20	1752	42 (31.5)	55.188	11.5 (15.5)	20.148
150	20	1752	28.0 (37.5)	49.056	6.5 (8.7)	11.388
100	20	1752	23.0 (31) ²⁾	40.296	3.5 (4.7) ³⁾	6.132
Σ	10	8760	-	275.064	-	26.801
	0					

Table 2.2 Result

- 1) Power reading at point A1
- 2) Power reading at point B1
- 3) Power reading at point C1

2.1.6 Improved Control

Using an adjustable frequency drive to control the flow or pressure of a system improves control.

An adjustable frequency drive can vary the speed of the fan or pump, obtaining variable control of flow and pressure.


Furthermore, an adjustable frequency drive can quickly adapt the speed of the fan or pump to new flow or pressure conditions in the system.

Obtain simple control of process (flow, level, or pressure) utilizing the built-in PI control.

2.1.7 Star/Delta Starter or Soft Starter


When large motors are started, it is necessary in many countries to use equipment that limits the start-up current. In more traditional systems, a star/delta starter or soft starter is widely used. Such motor starters are not required if an adjustable frequency drive is used.

As illustrated in Figure 2.8, an adjustable frequency drive does not consume more than rated current.

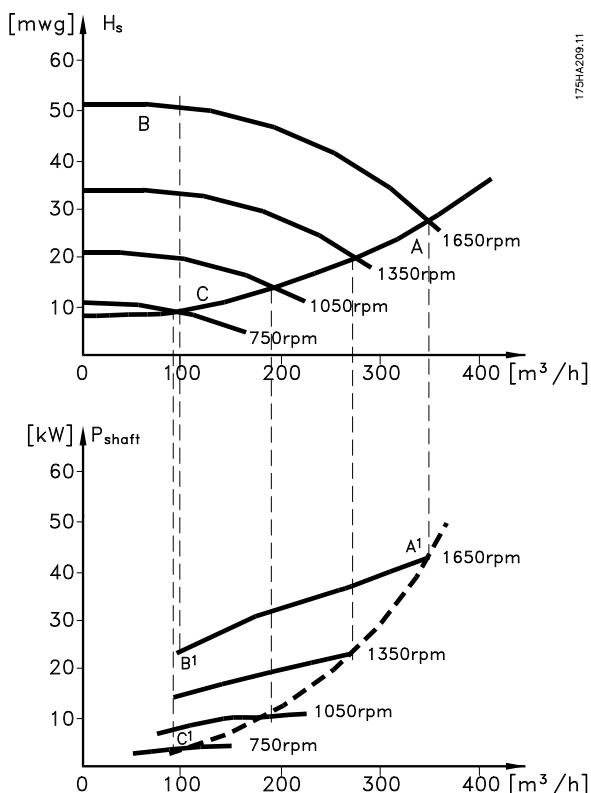

175HA208.11

Figure 2.7 Energy Consumption at Different Speeds

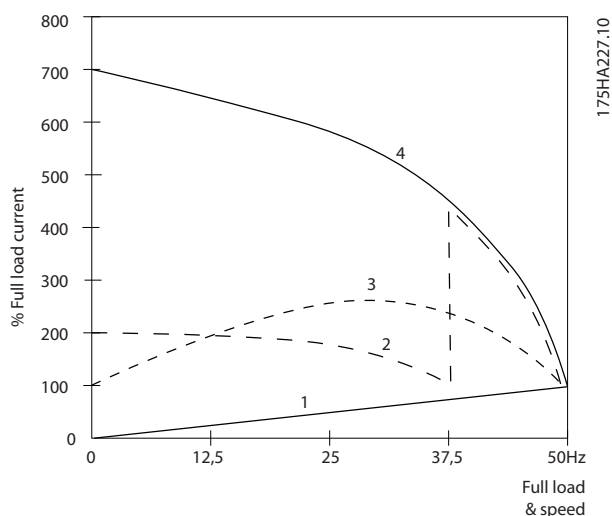

1	VLT® AQUA Drive FC 202
2	Star/delta starter
3	Soft starter
4	Start directly on line power

Figure 2.8 Start-up Current

2.2 Description of Operation

The adjustable frequency drive supplies a regulated amount of AC line power to the motor to control its speed. The adjustable frequency drive supplies variable frequency and voltage to the motor.

The adjustable frequency drive is divided into four main modules:

- Rectifier
- Intermediate DC bus circuit
- Inverter
- Control and regulation

Figure 2.9 is a block diagram of the internal components of the adjustable frequency drive. See Table 2.3 for their functions.

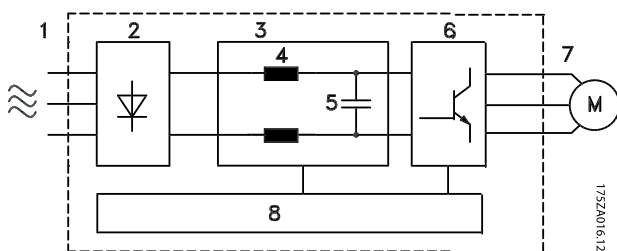


Figure 2.9 Adjustable Frequency Drive Block Diagram

Area	Title	Functions
1	Line power input	<ul style="list-style-type: none"> • 3-phase AC line power supply to the adjustable frequency drive.
2	Rectifier	<ul style="list-style-type: none"> • The rectifier bridge converts the AC input to DC current to supply inverter power.
3	DC bus	<ul style="list-style-type: none"> • Intermediate DC bus circuit handles the DC current.
4	DC reactors	<ul style="list-style-type: none"> • Filter the intermediate DC circuit voltage. • Provide electrical transient protection. • Reduce RMS current. • Raise the power factor reflected back to the line. • Reduce harmonics on the AC input.
5	Capacitor bank	<ul style="list-style-type: none"> • Stores the DC power. • Provides ride-through protection for short power losses.
6	Inverter	<ul style="list-style-type: none"> • Converts the DC into a controlled PWM AC waveform for a controlled variable output to the motor.
7	Output to motor	<ul style="list-style-type: none"> • Regulated 3-phase output power to the motor.
8	Control circuitry	<ul style="list-style-type: none"> • Input power, internal processing, output, and motor current are monitored to provide efficient operation and control. • User interface and external commands are monitored and performed. • Status output and control can be provided.


Table 2.3 Legend to Figure 2.9

1. The adjustable frequency drive rectifies AC voltage from line power into DC voltage.
2. The DC voltage is converted into an AC current with a variable amplitude and frequency.

The adjustable frequency drive supplies the motor with variable voltage/current and frequency, which enables variable speed control of 3-phased, standard asynchronous motors and non-salient PM motors.

The adjustable frequency drive manages various motor control principles such as U/f special motor mode and VVC[†]. Short-circuit behavior of the adjustable frequency drive

depends on the three current transducers in the motor phases.

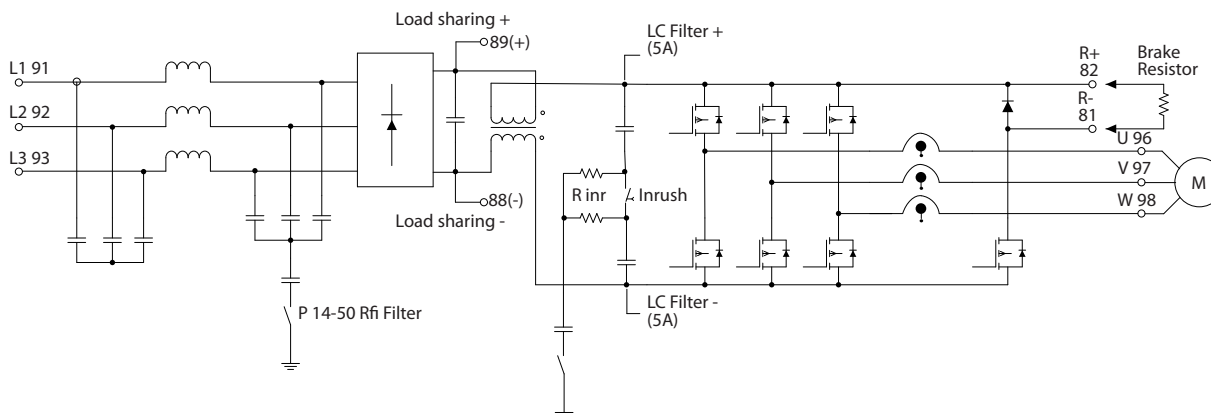

130BA193.14

Figure 2.10 Adjustable Frequency Drive Structure

2.3 Sequence of Operation

2.3.1 Rectifier Section

When power is applied to the adjustable frequency drive, it enters through the line power terminals (L1, L2, and L3) and on to the disconnect and/or RFI filter option, depending on the unit configuration.

2.3.2 Intermediate Section

Following the rectifier section, voltage passes to the intermediate section. A sine-wave filter circuit consisting of the DC bus inductor and the DC bus capacitor bank smoothes the rectified voltage.

The DC bus inductor provides series impedance to changing current. This aids the filtering process while reducing harmonic distortion to the input AC current waveform normally inherent in rectifier circuits.

2.3.3 Inverter Section

In the inverter section, once a run command and speed reference are present, the IGBTs begin switching to create the output waveform. This waveform, as generated by the Danfoss VVC[†] PWM principle at the control card, provides optimal performance and minimal losses in the motor.

2.3.4 Brake Option

For adjustable frequency drives equipped with the dynamic brake option, a brake IGBT along with terminals 81(R-) and 82(R+) are included for connecting an external brake resistor.

The function of the brake IGBT is to limit the voltage in the intermediate circuit whenever the maximum voltage limit is exceeded. It does this by switching the externally mounted resistor across the DC bus to remove excess DC voltage present on the bus capacitors.

External brake resistor placement has the advantages of selecting the resistor based on application need, dissipating the energy outside of the control panel, and protecting the drive from overheating if the brake resistor is overloaded.

The brake IGBT gate signal originates on the control card and is delivered to the brake IGBT via the power card and gate drive card. Additionally, the power and control cards monitor the brake IGBT and brake resistor connection for short circuits and overloads. For pre-fuse specifications, refer to *chapter 7.1 Electrical Data*. See also *chapter 7.7 Fuses and Circuit Breakers*.

2.3.5 Load Sharing

Units with the built-in load sharing option contain terminals (+) 89 DC and (-) 88 DC. Within the adjustable frequency drive, these terminals connect to the DC bus in front of the DC link reactor and bus capacitors.

For more information, contact Danfoss.

The load sharing terminals can connect in two different configurations.

1. In the first method, the terminals tie the DC bus circuits of multiple adjustable frequency drives together. This allows a unit that is in a regenerative mode to share its excess bus voltage with another unit that is running a motor. Load sharing in this manner can reduce the need for external dynamic brake resistors, while also saving energy. The number of units that can be connected in this way is infinite, as long as each unit has the same voltage rating. In addition, depending on the size and number of units, it may be necessary to install DC reactors and DC fuses in the DC link connections, and AC reactors on line power. Attempting such a configuration requires specific considerations. Contact Danfoss for assistance.

2. In the second method, the adjustable frequency drive is powered exclusively from a DC source. This requires:

- 2a A DC source.
- 2b A means to soft charge the DC bus at power-up.

Again, attempting such a configuration requires specific considerations. Contact Danfoss for assistance.

2.4 Control Structures

2.4.1 Control Structure Open-loop

When operating in open-loop mode, the adjustable frequency drive responds to input commands manually via the LCP keys or remotely via the analog/digital inputs or serial bus.

In the configuration shown in *Figure 2.11*, the adjustable frequency drive operates in open-loop mode. It receives input from either the LCP (*Hand mode*) or via a remote signal (*Auto mode*). The signal (speed reference) is received and conditioned with programmed minimum and maximum motor speed limits (in RPM and Hz), ramp-up and ramp-down times, and the motor rotation direction. The reference is then passed on to control the motor.


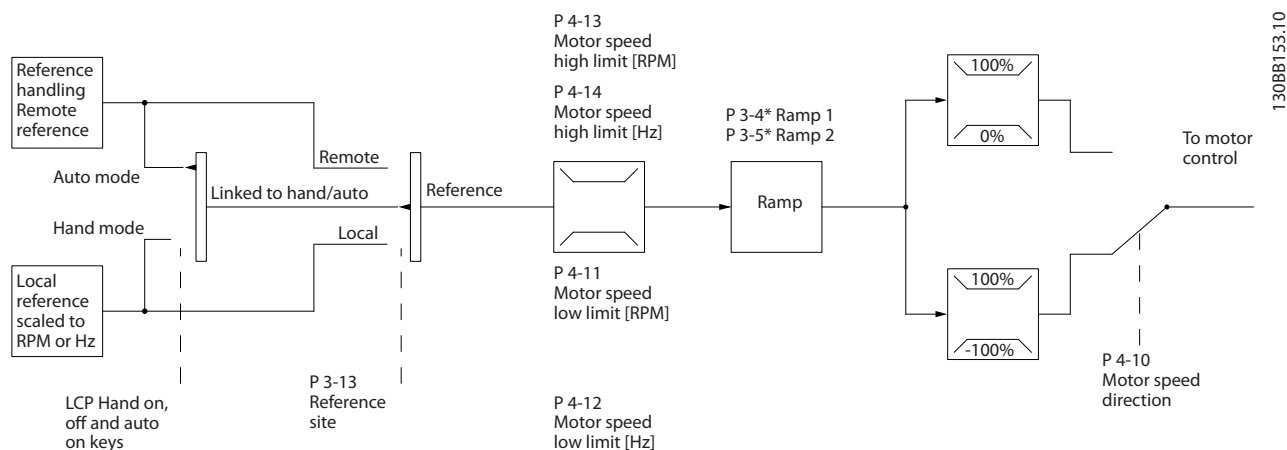


Figure 2.11 Open-loop Mode Block Diagram

2.4.2 Control Structure Closed-loop

In closed-loop mode, an internal PID controller allows the adjustable frequency drive to process system reference and feedback signals to act as an independent control unit. The drive can provide status and alarm messages, along with

many other programmable options, for external system monitoring while operating independently in closed-loop.

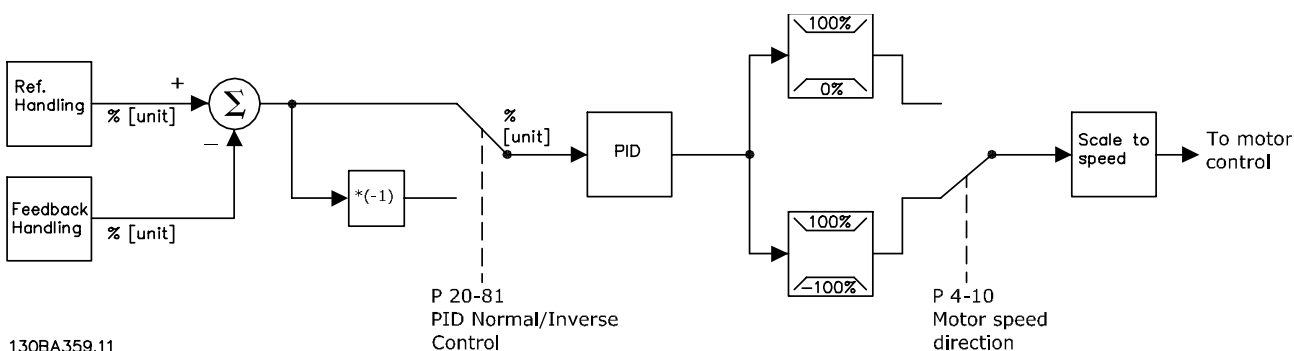

130BA359.11

Figure 2.12 Block Diagram of Closed-loop Controller

For example, consider a pump application in which the speed of a pump is controlled so that the static pressure in a pipe is constant (see *Figure 2.12*). The adjustable frequency drive receives a feedback signal from a sensor in the system. It compares this feedback to a setpoint reference value and determines the error, if any, between these two signals. It then adjusts the speed of the motor to correct this error.

The desired static pressure setpoint is the reference signal to the adjustable frequency drive. A static pressure sensor measures the actual static pressure in the pipe and provides this information to the adjustable frequency drive as a feedback signal. If the feedback signal is greater than the setpoint reference, the adjustable frequency drive ramps down to reduce the pressure. Similarly, if the pipe pressure is lower than the setpoint reference, the adjustable frequency drive ramps up to increase the pump pressure.

While the default values for the adjustable frequency drive in closed-loop often provide satisfactory performance, system control can often be optimized by tuning the PID parameters. *Auto tuning* is provided for this optimization.

Other programmable features include:

- Inverse regulation - motor speed increases when a feedback signal is high.
- Start-up frequency - lets the system quickly reach an operating status before the PID controller takes over.

- Built-in low-pass filter - reduces feedback signal noise.

2.4.3 Local (Hand On) and Remote (Auto On) Control

The adjustable frequency drive can be operated manually via the LCP, or remotely via analog and digital inputs and serial bus.

Active reference and configuration mode

The active reference is either a local reference or a remote reference. Remote reference is the default setting.

- To use the local reference, configure in *Hand* mode. To enable *Hand* mode, adapt parameter settings in parameter group *0-4* LCP Keypad*. For more information, refer to the *programming guide*.
- To use the remote reference, configure in *Auto* mode, which is the default mode. In *Auto* mode, it is possible to control the adjustable frequency drive via the digital inputs and various serial interfaces (RS485, USB, or an optional serial communication bus).
- *Figure 2.13* illustrates the configuration mode resulting from active reference selection, either local or remote.
- *Figure 2.14* illustrates manual configuration mode for local reference.

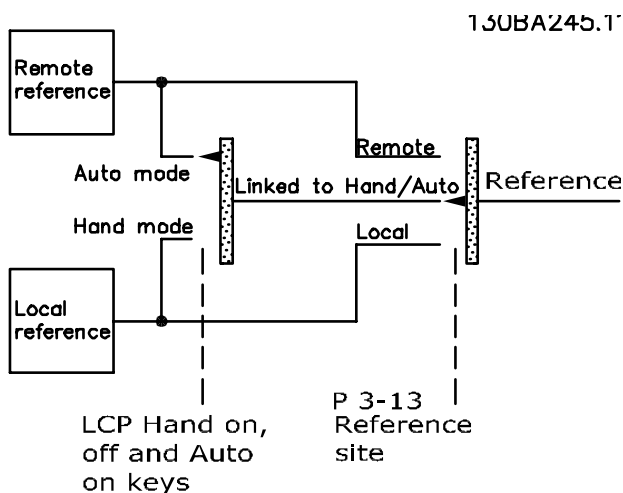


Figure 2.13 Active Reference

[Hand On] [Auto On] LCP Keys	Reference Site 3-13 Reference Site	Active Reference
Hand	Linked to Hand/Auto	Local
Hand⇒Off	Linked to Hand/Auto	Local
Auto	Linked to Hand/Auto	Remote
Auto ⇒Off	Linked to Hand/Auto	Remote
All keys	Local	Local
All keys	Remote	Remote

Table 2.4 Local and Remote Reference Configurations

2.4.4 Reference Handling

Reference handling is applicable in both open-loop and closed-loop operation.

Internal and external references

Up to eight internal preset references can be programmed into the adjustable frequency drive. The active internal preset reference can be selected externally through digital control inputs or the serial communications bus.

External references can also be supplied to the drive, most commonly through an analog control input. All reference sources and the bus reference are added to produce the total external reference. The external reference, the preset reference, the setpoint, or the sum of all three can be selected as the active reference. This reference can be scaled.

The scaled reference is calculated as follows:

$$Reference = X + X \times \left(\frac{Y}{100} \right)$$

Where X is the external reference, the preset reference, or the sum of these references and Y is 3-14 Preset Relative Reference in [%].

If Y, 3-14 Preset Relative Reference, is set to 0%, the scaling does not affect the reference.

Remote reference

A remote reference is comprised of the following (see Figure 2.15).

- Preset references
- External references:
 - Analog inputs
 - Pulse frequency inputs
 - Digital potentiometer inputs
 - Serial communication bus references
- A preset relative reference
- A feedback controlled setpoint

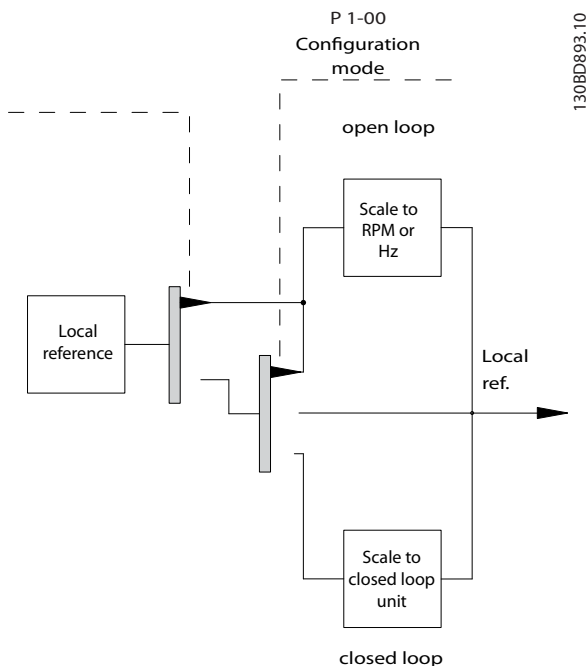


Figure 2.14 Configuration Mode

Application control principle

Either the remote reference or the local reference is active at any time. Both cannot be active simultaneously. Set the application control principle (that is, open-loop or closed-loop) in 1-00 Configuration Mode, as shown in Table 2.4.

When the local reference is active, set the application control principle in 1-05 Local Mode Configuration.

Set the reference site in 3-13 Reference Site, as shown in Table 2.4.

For more information, refer to the Programming Guide.

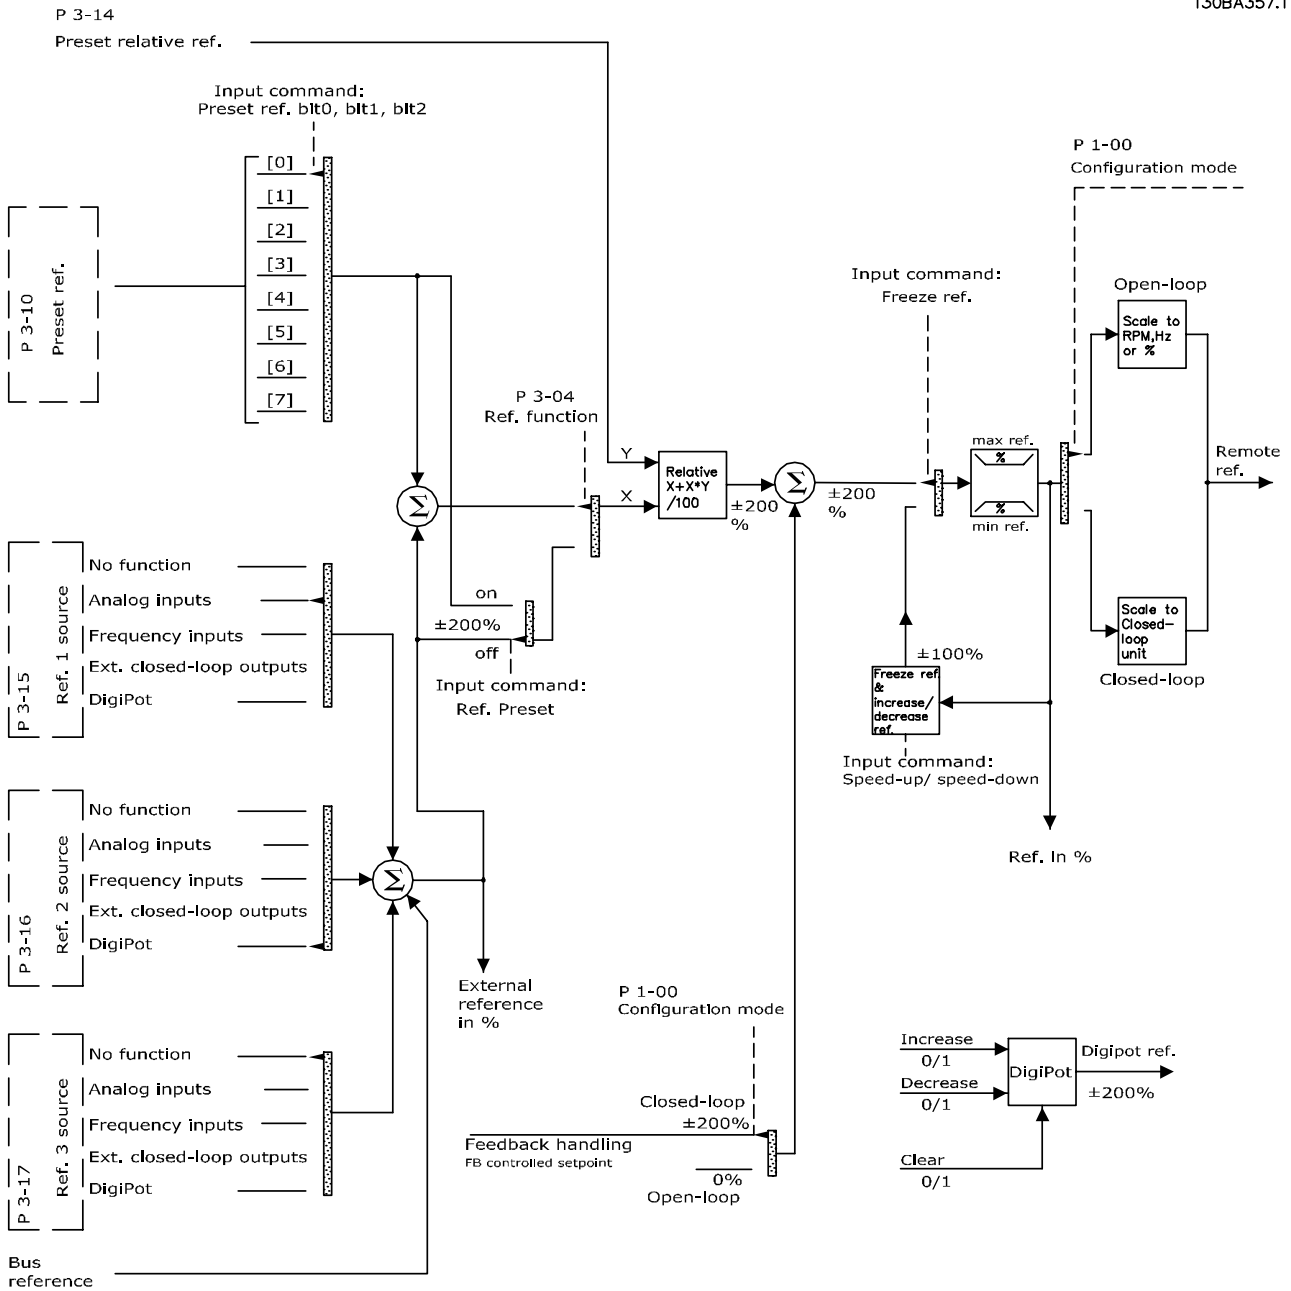


Figure 2.15 Block Diagram Showing Remote Reference Handling

2.4.5 Feedback Handling

Feedback handling can be configured to work with applications requiring advanced control, such as multiple setpoints and multiple types of feedback (see *Figure 2.16*). Three types of control are common:

Single zone, single setpoint

This control type is a basic feedback configuration. Setpoint 1 is added to any other reference (if any) and the feedback signal is selected.

Multi-zone, single setpoint

This control type uses two or three feedback sensors but only one setpoint. The feedback can be added, subtracted, or averaged. In addition, the maximum or minimum value can be used. Setpoint 1 is used exclusively in this configuration.

Multi-zone, setpoint/feedback

The setpoint/feedback pair with the largest difference controls the speed of the adjustable frequency drive. The maximum attempts to keep all zones at or below their respective setpoints, while minimum attempts to keep all zones at or above their respective setpoints.

Example

A 2-zone, 2-setpoint application. Zone 1 setpoint is 15 bar and the feedback is 5.5 bar. Zone 2 setpoint is 4.4 bar and the feedback is 4.6 bar. If maximum is selected, the zone 1 setpoint and feedback are sent to the PID controller, since it has the smaller difference (feedback is higher than setpoint, resulting in a negative difference). If minimum is selected, the zone 2 setpoint and feedback is sent to the PID controller, since it has the larger difference (feedback is lower than setpoint, resulting in a positive difference).


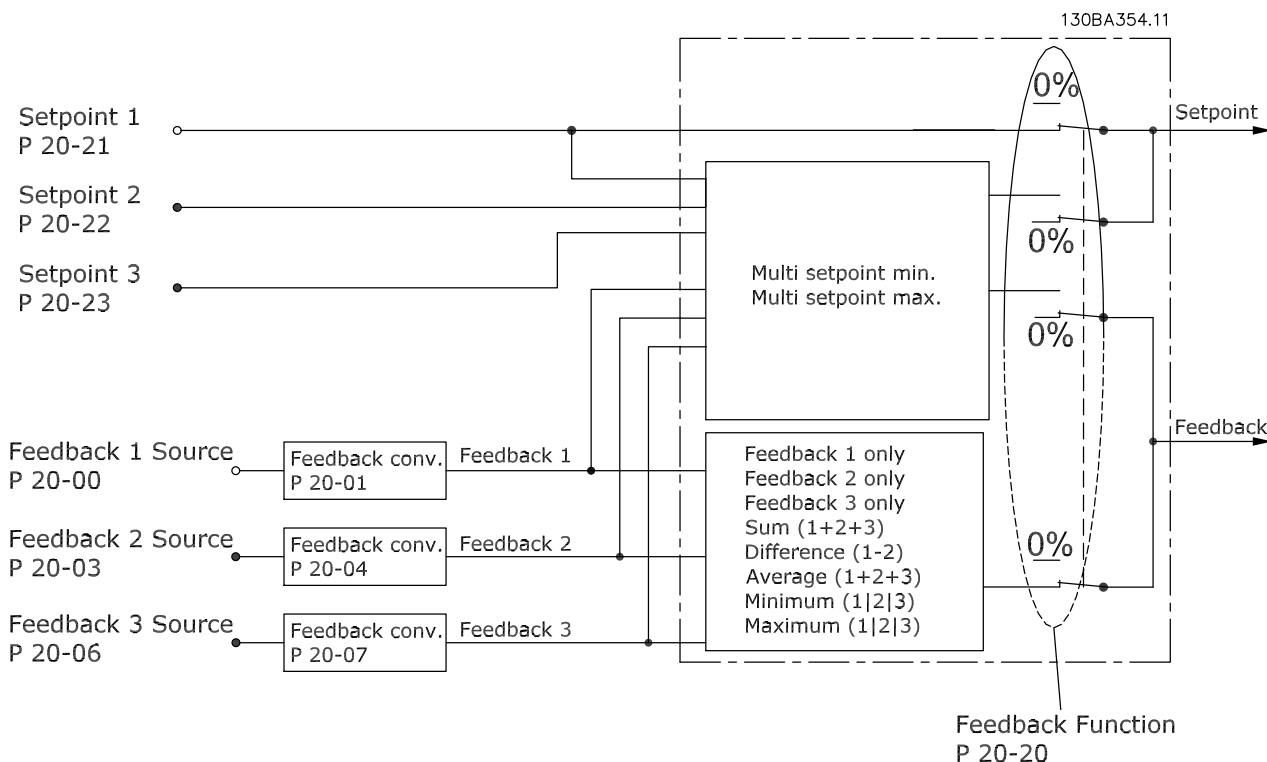


Figure 2.16 Block Diagram of Feedback Signal Processing

Feedback conversion

In some applications, it is useful to convert the feedback signal. One example is using a pressure signal to provide flow feedback. Since the square root of pressure is proportional to flow, the square root of the pressure signal yields a value proportional to the flow, see *Figure 2.17*.

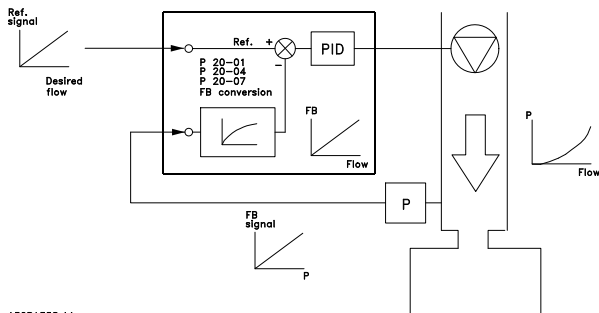

130BA358.11

Figure 2.17 Feedback Conversion

2.5 Automated Operational Functions

Automated operational features are active as soon as the adjustable frequency drive is operating. Most of them require no programming or set-up. Understanding that these features are present can optimize a system design and possibly avoid introducing redundant components or functionality.

For details of any set-up required, in particular motor parameters, refer to the *Programming Guide*.

The adjustable frequency drive has a range of built-in protection functions to protect itself and the motor it is running.

2.5.1 Short Circuit Protection

Motor (phase-phase)

The adjustable frequency drive is protected against short circuits on the motor side by current measurement in each of the three motor phases or in the DC link. A short circuit between two output phases causes an overcurrent in the inverter. The inverter is turned off when the short circuit current exceeds the permitted value (Alarm 16 Trip Lock).

Line power side

An adjustable frequency drive that works correctly limits the current it can draw from the supply. Still, it is recommended to use fuses and/or circuit breakers on the supply side as protection in case of component breakdown inside the adjustable frequency drive (first fault). See *chapter 7.7 Fuses and Circuit Breakers* for more information.

NOTICE!

To ensure compliance with IEC 60364 for CE or NEC 2009 for UL, it is mandatory to use fuses and/or circuit breakers.

Brake resistor

The adjustable frequency drive is protected from a short circuit in the brake resistor.

Load sharing

To protect the DC bus against short circuits and the adjustable frequency drives from overload, install DC fuses in series with the load sharing terminals of all connected units. See *chapter 2.3.5 Load Sharing* for more information.

2.5.2 Overvoltage Protection

Motor-generated overvoltage

The voltage in the intermediate circuit is increased when the motor acts as a generator. This occurs in the following cases:

- The load drives the motor (at constant output frequency from the adjustable frequency drive), for example, the load generates energy.
- During deceleration (ramp-down) if the moment of inertia is high, the friction is low and the ramp-down time is too short for the energy to be dissipated as a loss in the adjustable frequency drive, the motor, and the installation.
- Incorrect slip compensation setting may cause higher DC link voltage.
- Back EMF from PM motor operation. If coasted at high RPM, the PM motor back EMF may potentially exceed the maximum voltage tolerance of the adjustable frequency drive and cause damage. To help prevent this, the value of 4-19 Max Output Frequency is automatically limited via an internal calculation based on the value of 1-40 Back EMF at 1000 RPM, 1-25 Motor Nominal Speed, and 1-39 Motor Poles.

NOTICE!

To avoid motor overspeeding (for example, due to excessive windmilling effects or uncontrolled water flow), equip the adjustable frequency drive with a brake resistor.

The overvoltage can be handled by either using a brake function (2-10 Brake Function) or using overvoltage control (2-17 Over-voltage Control).

Overvoltage control (OVC)

OVC reduces the risk of the adjustable frequency drive tripping due to an overvoltage on the DC link. This is managed by automatically extending the ramp-down time.

NOTICE!

OVC can be activated for PM motors (PM VVC+).

Brake functions

Connect a brake resistor for dissipation of surplus brake energy. Connecting a brake resistor prevents excessively high DC link voltage during braking.

An AC brake is an alternative to improve braking without using a brake resistor. This function controls an overmagnetization of the motor when running as a generator creating extra energy. This function can improve the OVC. Increasing the electrical losses in the motor allows the OVC function to increase the braking torque without exceeding the overvoltage limit.

NOTICE!

AC braking is not as effective as dynamic braking with a resistor.

2.5.3 Missing Motor Phase Detection

The *missing motor phase* function (4-58 *Missing Motor Phase Function*) is enabled by default to avoid motor damage in the case that a motor phase is missing. The default setting is 1000 ms, but it can be adjusted for a faster detection.

2.5.4 Line Phase Imbalance Detection

Operation under severe line power imbalance conditions reduces the lifetime of the motor. Conditions are considered severe if the motor is operated continuously near nominal load. The default setting trips the adjustable frequency drive in case of line imbalance (14-12 *Function at Mains Imbalance*).

2.5.5 Switching on the Output

Adding a switch to the output between the motor and the adjustable frequency drive is permitted. Fault messages may appear. To catch a spinning motor, enable flying start.

2.5.6 Overload Protection**Torque limit**

The torque limit feature protects the motor against overload, independent of the speed. Torque limit is controlled in 4-16 *Torque Limit Motor Mode* or 4-17 *Torque Limit Generator Mode* and the time before the torque limit

warning trips is controlled in 14-25 *Trip Delay at Torque Limit*.

Current limit

The current limit is controlled in 4-18 *Current Limit*.

Speed limit

Define lower and upper limits for the operating speed range using the following parameters:

- 4-11 *Motor Speed Low Limit [RPM]* or
- 4-12 *Motor Speed Low Limit [Hz]* and 4-13 *Motor Speed High Limit [RPM]*, or
- 4-14 *Motor Speed High Limit [Hz]*

For example, the operating speed range can be defined as between 30 and 50/60 Hz.

4-19 *Max Output Frequency* limits the maximum output speed the adjustable frequency drive can provide.

ETR

ETR is an electronic feature that simulates a bimetal relay based on internal measurements. The characteristic is shown in *Figure 2.18*.

Voltage limit

The adjustable frequency drive turns off to protect the transistors and the DC link capacitors when a certain hard-coded voltage level is reached.

Overtemperature

The adjustable frequency drive has built-in temperature sensors and reacts immediately to critical values via hard-coded limits.

2.5.7 Automatic Derating

The adjustable frequency drive constantly checks for critical levels:

- High temperature on the control card or heatsink
- High motor load
- High DC link voltage
- Low motor speed

As a response to a critical level, the adjustable frequency drive adjusts the switching frequency. For high internal temperatures and low motor speed, the adjustable frequency drives can also force the PWM pattern to SFAVM.

NOTICE!

The automatic derating is different when 14-55 *Output Filter* is set to [2] *Sine-Wave Filter Fixed*.

2.5.8 Automatic Energy Optimization

Automatic energy optimization (AEO) directs the adjustable frequency drive to monitor the load on the motor continuously and adjust the output voltage to maximize efficiency. Under light load, the voltage is reduced and the motor current is minimized. The motor benefits from increased efficiency, reduced heating, and quieter operation. There is no need to select a V/Hz curve because the adjustable frequency drive automatically adjusts motor voltage.

2.5.9 Automatic Switching Frequency Modulation

The adjustable frequency drive generates short electrical pulses to form an AC wave pattern. The switching frequency is the rate of these pulses. A low switching frequency (slow pulsing rate) causes audible noise in the motor, making a higher switching frequency preferable. A high switching frequency, however, generates heat in the adjustable frequency drive which can limit the amount of current available to the motor.

Automatic switching frequency modulation regulates these conditions automatically to provide the highest switching frequency without overheating the adjustable frequency drive. By providing a regulated high switching frequency, it quiets motor operating noise at slow speeds, when audible noise control is critical, and produces full output power to the motor when required.

2.5.10 Automatic Derating for High Switching Frequency

The adjustable frequency drive is designed for continuous, full-load operation at switching frequencies between 3.0 and 4.5 kHz (this frequency range depends on power size). A switching frequency which exceeds the maximum permissible range generates increased heat in the adjustable frequency drive and requires the output current to be derated.

An automatic feature of the adjustable frequency drive is load-dependent switching frequency control. This feature allows the motor to benefit from as high a switching frequency as the load permits.

2.5.11 Automatic Derating for Overtemperature

Automatic overtemperature derating works to prevent tripping the adjustable frequency drive at high temperature. Internal temperature sensors measure conditions to protect the power components from overheating. The drive can automatically reduce its switching frequency to maintain its operating temperature within safe limits. After reducing the switching frequency, the drive can also reduce the output frequency and current by as much as 30% to avoid an overtemperature trip.

2.5.12 Auto Ramping

A motor trying to accelerate a load too quickly for the current available can cause the drive to trip. The same is true for too quick a deceleration. Auto ramping protects against these situations by extending the motor ramping rate (acceleration or deceleration) to match the available current.

2.5.13 Current Limit Circuit

When a load exceeds the current capability of the adjustable frequency drive normal operation (from an undersized converter or motor), current limit reduces the output frequency to ramp down the motor and reduce the load. An adjustable timer is available to limit operation in this condition for 60 s or less. The factory default limit is 110% of the rated motor current to minimize overcurrent stress.

2.5.14 Power Fluctuation Performance

The adjustable frequency drive withstands line power fluctuations such as:

- Transients
- Momentary drop-outs
- Short voltage drops
- Surges

The adjustable frequency drive automatically compensates for input voltages $\pm 10\%$ from the nominal to provide full rated motor voltage and torque. With auto restart selected, the adjustable frequency drive automatically powers up after a voltage trip. With flying start, the adjustable frequency drive synchronizes to motor rotation before start.

2.5.15 Motor Soft Start

The adjustable frequency drive supplies the right amount of current to the motor to overcome load inertia and bring the motor up to speed. This avoids full AC line voltage being applied to a stationary or slow-turning motor, which generates high current and heat. This inherent soft start feature reduces thermal load and mechanical stress, extends motor life, and provides quieter system operation.

2.5.16 Resonance Damping

High frequency motor resonance noise can be eliminated through resonance damping. Automatic or manually selected frequency damping is available.

2.5.17 Temperature-controlled Fans

The internal cooling fans are temperature controlled by sensors in the adjustable frequency drive. The cooling fan often is not running during low load operation or when in sleep mode or standby. This reduces noise, increases efficiency, and extends the operating life of the fan.

2.5.18 EMC Compliance

Electromagnetic interference (EMI) or radio frequency interference (RFI, in case of radio frequency) is disturbance that can affect an electrical circuit due to electromagnetic induction or radiation from an external source. The adjustable frequency drive is designed to comply with the EMC product standard for drives IEC 61800-3 as well as the European standard EN 55011. To comply with the emission levels in EN 55011, the motor cable must be shielded and properly terminated. For more information regarding EMC performance, see *chapter 3.2.2 EMC Test Results*.

2.5.19 Current Measurement on All Three Motor Phases

Output current to the motor is continuously measured on all three phases to protect the adjustable frequency drive and motor against short circuits, ground faults, and phase loss. Output ground faults are instantly detected. If a motor phase is lost, the adjustable frequency drive stops immediately and reports which phase is missing.

2.5.20 Galvanic Isolation of Control Terminals

All control terminals and output relay terminals are galvanically isolated from line power. This means the controller circuitry is completely protected from the input current. The output relay terminals require their own grounding. This isolation meets the stringent protective extra-low voltage (PELV) requirements for isolation.

The components that make up the galvanic isolation are:

- Power supply, including signal isolation.
- Gate drive for the IGBTs, trigger transformers, and optocouplers.
- The output current Hall effect transducers.

2.6 Custom Application Functions

Custom application features are the most common features programmed in the adjustable frequency drive for enhanced system performance. They require minimum programming or set-up. Understanding that these features are available can optimize the system design and possibly avoid introducing redundant components or functionality. See the *programming guide* for instructions on activating these functions.

2.6.1 Automatic Motor Adaptation

Automatic motor adaptation (AMA) is an automated test procedure used to measure the electrical characteristics of the motor. AMA provides an accurate electronic model of the motor. It allows the adjustable frequency drive to calculate optimal performance and efficiency with the motor. Running the AMA procedure also maximizes the automatic energy optimization feature of the adjustable frequency drive. AMA is performed without the motor rotating and without uncoupling the load from the motor.

2.6.2 Motor Thermal Protection

Motor thermal protection can be provided in three ways:

- Via direct temperature sensing via one of the following:
 - PTC sensor in the motor windings and connected on a standard AI or DI.
 - PT100 or PT1000 in the motor windings and motor bearings, connected on VLT® Sensor Input Card MCB 114.

- PTC thermistor input on VLT® PTC Thermistor Card MCB 112 (ATEX approved).

- Mechanical thermal switch (Klixon type) on a DI.
- Via the built-in electronic thermal relay (ETR) for asynchronous motors.

ETR calculates motor temperature by measuring current, frequency, and operating time. The adjustable frequency drive displays the thermal load on the motor in percentage and can issue a warning at a programmable overload setpoint.

Programmable options at the overload allow the adjustable frequency drive to stop the motor, reduce output, or ignore the condition. Even at low speeds, the adjustable frequency drive meets I2t Class 20 electronic motor overload standards.

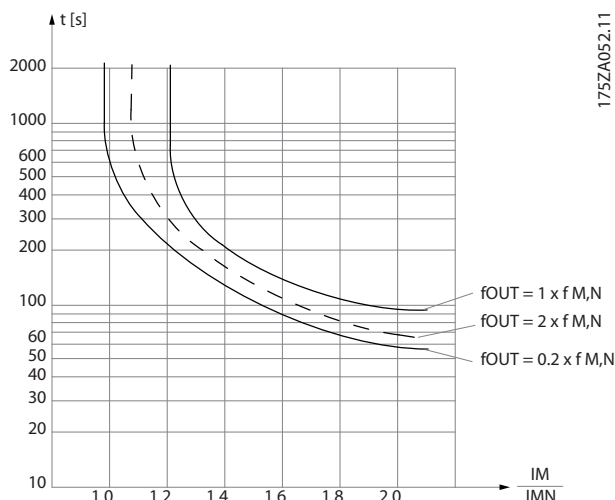


Figure 2.18 ETR Characteristics

The X-axis in Figure 2.18 shows the ratio between I_{motor} and I_{motor} nominal. The Y-axis shows the time in seconds before the ETR cuts off and trips the adjustable frequency drive. The curves show the characteristic nominal speed, at twice the nominal speed and at 0.2 x the nominal speed. At lower speed, the ETR cuts off at lower heat due to less cooling of the motor. In that way, the motor is protected from being overheated even at low speed. The ETR feature calculates the motor temperature based on actual current and speed. The calculated temperature is visible as a readout parameter in 16-18 Motor Thermal.

2.6.3 Line Drop-out

During a line drop-out, the adjustable frequency drive keeps running until the intermediate circuit voltage drops below the minimum stop level, which is typically 15% below the lowest rated supply voltage. The AC line voltage before the drop-out and the motor load determines how long it takes for the adjustable frequency drive to coast.

The adjustable frequency drive can be configured (14-10 Line Failure) to different types of behavior during line drop-out,

- Trip Lock once the DC link is exhausted.
- Coast with flying start whenever line power return (1-73 Flying Start).
- Kinetic backup.
- Controlled ramp-down.

Flying start

This selection makes it possible to catch a motor that is spinning freely due to a line drop-out. This option is relevant for centrifuges and fans.

Kinetic backup

This selection ensures that the adjustable frequency drive runs as long as there is energy in the system. For short line power drop-out, the operation is restored upon line return, without bringing the application to a stop or losing control at any time. Several variants of kinetic backup can be selected.

Configure the behavior of the adjustable frequency drive at line drop-out, in 14-10 Line Failure and 1-73 Flying Start.

2.6.4 Built-in PID Controllers

The four built-in proportional, integral, derivative (PID) controllers eliminate the need for auxiliary control devices.

One of the PID controllers maintains constant control of closed-loop systems where regulated pressure, flow, temperature, or other system requirements must be maintained. The adjustable frequency drive can provide self-reliant control of the motor speed in response to feedback signals from remote sensors. The adjustable frequency drive accommodates two feedback signals from two different devices. This feature allows regulating a system with different feedback requirements. The adjustable frequency drive makes control decisions by comparing the two signals to optimize system performance.

Use the three additional and independent controllers for controlling other process equipment, such as chemical feed pumps, valve control or for aeration with different levels.

2.6.5 Automatic Restart

The adjustable frequency drive can be programmed to automatically restart the motor after a minor trip, such as momentary power loss or fluctuation. This feature eliminates the need for manual resetting and enhances automated operation for remotely controlled systems. The number of restart attempts as well as the duration between attempts can be limited.

2.6.6 Flying Start

Flying start allows the adjustable frequency drive to synchronize with an operating motor rotating at up to full speed, in either direction. This prevents trips due to overcurrent draw. It minimizes mechanical stress to the system since the motor receives no abrupt change in speed when the adjustable frequency drive starts.

2.6.7 Full Torque at Reduced Speed

The adjustable frequency drive follows a variable V/Hz curve to provide full motor torque even at reduced speeds. Full output torque can coincide with the maximum designed operating speed of the motor. This is unlike variable torque drives that provide reduced motor torque at low speed, or constant torque drives that provide excess voltage, heat, and motor noise at less than full speed.

2.6.8 Frequency Bypass

In some applications, the system may have operational speeds that create a mechanical resonance. This can generate excessive noise and possibly damage mechanical components in the system. The adjustable frequency drive has four programmable bypass-frequency bandwidths. These allow the motor to step over speeds that induce system resonance.

2.6.9 Motor Preheat

To preheat a motor in a cold or damp environment, a small amount of DC current can be trickled continuously into the motor to protect it from condensation and a cold start. This can eliminate the need for a space heater.

2.6.10 Four Programmable Set-ups

The adjustable frequency drive has four set-ups that can be independently programmed. Using multi-setup, it is possible to switch between independently programmed functions activated by digital inputs or a serial command. Independent set-ups are used, for example, to change references, or for day/night or summer/winter operation, or to control multiple motors. The active set-up is displayed on the LCP.

Set-up data can be copied from adjustable frequency drive to adjustable frequency drive by downloading the information from the removable LCP.

2.6.11 Dynamic Braking

Dynamic Brake is established by:

- **Resistor brake**
A brake IGBT keeps the overvoltage under a certain threshold by directing the brake energy from the motor to the connected brake resistor (*2-10 Brake Function = [1]*).
- **AC brake**
The brake energy is distributed in the motor by changing the loss conditions in the motor. The AC brake function cannot be used in applications with high cycling frequency since this overheats the motor (*2-10 Brake Function = [2]*).

2.6.12 DC Braking

Some applications may require braking a motor to slow or stop it. Applying DC current to the motor brakes the motor and can eliminate the need for a separate motor brake. DC braking can be set to activate at a predetermined frequency or upon receiving a signal. The rate of braking can also be programmed.

2.6.13 Sleep Mode

Sleep mode automatically stops the motor when demand is low for a specified period of time. When the system demand increases, the drive restarts the motor. Sleep mode provides energy savings and reduces motor wear. Unlike a setback clock, the drive is always available to run when the preset wake-up demand is reached.

2.6.14 Run Permissive

The drive can wait for a remote system ready signal before starting. When this feature is active, the drive remains stopped until receiving permission to start. Run permissive

ensures that the system or auxiliary equipment is in the proper state before the drive is allowed to start the motor.

2.6.15 Smart Logic Control (SLC)

Smart logic control (SLC) is a sequence of user-defined actions (see 13-52 *SL Controller Action [x]*) executed by the SLC when the associated user-defined event (see 13-51 *SL Controller Event [x]*) is evaluated as TRUE by the SLC. The condition for an event can be a particular status or that the output from a logic rule or a comparator operand becomes TRUE. That leads to an associated action as shown in Figure 2.19.

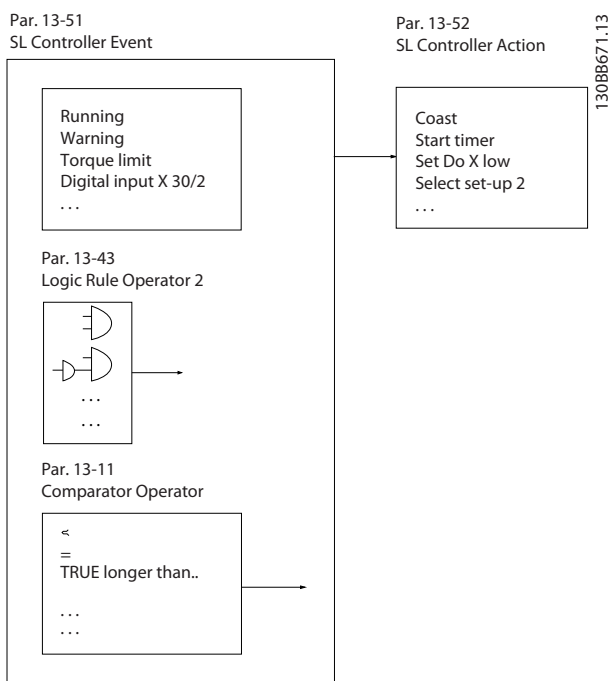


Figure 2.19 SCL Event and Action

Events and actions are each numbered and linked in pairs (states). This means that when event [0] is fulfilled (attains the value TRUE), action [0] is executed. After this, the conditions of event [1] is evaluated and if evaluated TRUE, action [1] is executed and so on. Only one event is evaluated at any time. If an event is evaluated as FALSE, nothing happens (in the SLC) during the current scan interval and no other events are evaluated. This means that when the SLC starts, it evaluates event [0] (and only event [0]) each scan interval. Only when event [0] is evaluated TRUE, the SLC executes action [0] and starts evaluating event [1]. It is possible to program from 1 to 20 events and actions.

When the last event/action has been executed, the sequence starts over again from event [0]/action [0]. Figure 2.20 shows an example with four event/actions:

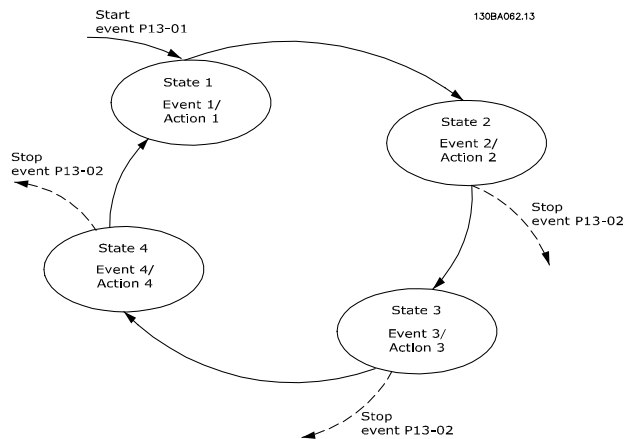


Figure 2.20 Order of Execution when Four Events/Actions are Programmed

Comparators

Comparators are used for comparing continuous variables (output frequency, output current, analog input etc.) to fixed preset values.

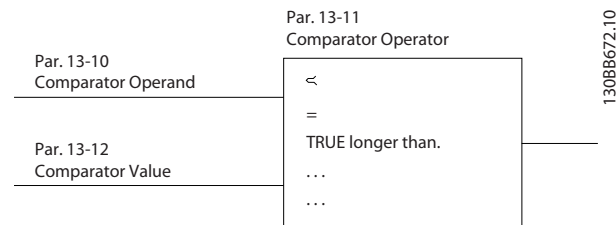


Figure 2.21 Comparators

Logic Rules

Combine up to three Boolean inputs (TRUE/FALSE inputs) from timers, comparators, digital inputs, status bits and events using the logical operators AND, OR, and NOT.

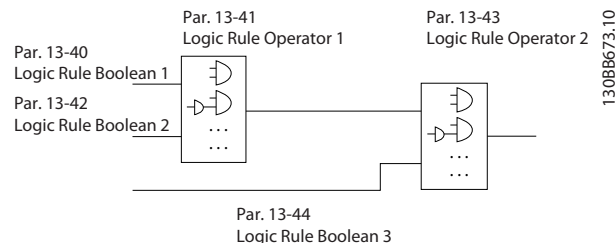


Figure 2.22 Logic Rules

The logic rules, timers, and comparators are also available for use outside of the SLC sequence.

For an example of SLC, refer to *chapter 4.3 Application Set-up Examples.3*

2.6.16 STO Function

The adjustable frequency drive is available with STO functionality via control terminal 37. STO disables the control voltage of the power semiconductors of the adjustable frequency drive output stage. This in turn prevents generating the voltage required to rotate the motor. When the STO (terminal 37) is activated, the adjustable frequency drive issues an alarm, trips the unit, and coasts the motor to a stop. Manual restart is required. The STO function can be used as an emergency stop for the adjustable frequency drive. In the normal operating mode when STO is not required, use the regular stop function. When using automatic restart, ensure the requirements of ISO 12100-2 paragraph 5.3.2.5 are fulfilled.

Liability conditions

It is the responsibility of the user to ensure personnel installing and operating the STO function:

- Read and understand the safety regulations concerning health, safety, and accident prevention.
- Have a good knowledge of the generic and safety standards applicable to the specific application.

A user is defined as:

- Integrator
- Operator
- Service technician
- Maintenance technician

Standards

Use of STO on terminal 37 requires that the user satisfies all provisions for safety including relevant laws, regulations and guidelines. The optional STO function complies with the following standards:

- EN 954-1: 1996 Category 3
- IEC 60204-1: 2005 category 0 – uncontrolled stop
- IEC 61508: 1998 SIL2
- IEC 61800-5-2: 2007 – STO function
- IEC 62061: 2005 SIL CL2
- ISO 13849-1: 2006 Category 3 PL d
- ISO 14118: 2000 (EN 1037) – prevention of unexpected startup

The information and instructions here are not sufficient for a proper and safe use of the STO functionality. For full information about STO, refer to the *VLT® Safe Torque Off Instruction Manual*.

Protective measures

- Qualified and skilled personnel are required for installation and commissioning of safety engineering systems.
- The unit must be installed in an IP54 cabinet or in an equivalent environment. In special applications, a higher IP degree is required.
- The cable between terminal 37 and the external safety device must be short-circuit protected according to ISO 13849-2 table D.4.
- When external forces influence the motor axis (for example, suspended loads), to eliminate potential hazards, additional measures are required (for example, a safety holding brake).

2.7 Fault, Warning and Alarm Functions

The adjustable frequency drive monitors many aspects of system operation including line power conditions, motor load and performance, as well as drive status. An alarm or warning does not necessarily indicate a problem with the adjustable frequency drive itself. It may be a condition outside of the drive that is being monitored for performance limits. The drive has various pre-programmed fault, warning and alarm responses. Select additional alarm and warning features to enhance or modify system performance.

This section describes common alarm and warning features. Understanding that these features are available can optimize a system design and possibly avoid introducing redundant components or functionality.

2.7.1 Operation at Overtemperature

By default, the adjustable frequency drive issues an alarm and trip at overtemperature. If *Autoderate and Warning* is selected, the adjustable frequency drive will warn of the condition but continue to run and attempt to cool itself by first reducing its switching frequency. Then, if necessary, it reduces the output frequency.

Autoderating does not replace the user settings for derating for ambient temperature (see *chapter 5.3 Derating for Ambient Temperature*).

2.7.2 High and Low Reference Warning

In open-loop operation, the reference signal directly determines the speed of the drive. The display shows a flashing reference high or low warning when the programmed maximum or minimum is reached.

2.7.3 High and Low Feedback Warning

In closed-loop operation, the selected high and low feedback values are monitored by the drive. The display shows a flashing high or flashing low warning when appropriate. The drive can also monitor feedback signals in open-loop operation. While the signals do not affect the operation of the drive in open-loop, they can be useful for system status indication locally or via serial communication. The adjustable frequency drive handles 39 different units of measure.

2.7.4 Phase Imbalance or Phase Loss

Excessive ripple current in the DC bus indicates either a line phase imbalance or phase loss. When a power phase to the drive is lost, the default action is to issue an alarm and trip the unit to protect the DC bus capacitors. Other options are to issue a warning and reduce output current to 30% of full current or to issue a warning and continue normal operation. Operating a unit connected to an imbalanced line may be desirable until the imbalance is corrected.

2.7.5 High Frequency Warning

Useful in staging on additional equipment such as pumps or cooling fans, the drive can warn when the motor speed is high. A specific high frequency setting can be entered into the drive. If the output exceeds the set warning frequency, the unit displays a high frequency warning. A digital output from the drive can signal external devices to stage on.

2.7.6 Low Frequency Warning

Useful in staging off equipment, the drive can warn when the motor speed is low. A specific low frequency setting can be selected for warning and to stage off external devices. The unit will not issue a low frequency warning when it is stopped nor upon start up until after the operating frequency has been reached.

2.7.7 High Current Warning

This function is similar to high frequency warning, except a high current setting is used to issue a warning and stage on additional equipment. The function is not active when stopped or at start up until the set operating current has been reached.

2.7.8 Low Current Warning

This function is similar to low frequency warning (see *chapter 2.7.6 Low Frequency Warning*), except a low current setting is used to issue a warning and stage off equipment. The function is not active when stopped or at start up until the set operating current has been reached.

2.7.9 No Load/Broken Belt Warning

This feature can be used for monitoring a no-load condition, for example a V-belt. After a low current limit has been stored in the converter, if loss of the load is detected, the drive can be programmed to issue an alarm and trip or to continue operation and issue a warning.

2.7.10 Lost Serial Interface

The adjustable frequency drive can detect loss of serial communication. A time delay of up to 99 s is selectable to avoid a response due to interruptions on the serial communications bus. When the delay is exceeded, options available include for the unit to:

- Maintain its last speed.
- Go to maximum speed.
- Go to a preset speed.
- Stop and issue a warning.

2.8 User Interfaces and Programming

The adjustable frequency drive uses parameters for programming its application functions. Parameters provide a description of a function and a menu of options to either select from or for entering numeric values. A sample programming menu is shown in *Figure 2.23*.

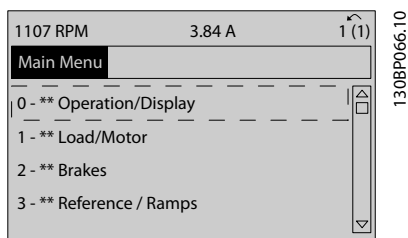


Figure 2.23 Sample Programming Menu

Local user interface

For local programming, parameters are accessible by pressing either [Quick Menu] or [Main Menu] on the LCP.

The Quick Menu is intended for initial start up and motor characteristics. The Main Menu accesses all parameters and allows for advanced applications programming.

Remote user interface

For remote programming, Danfoss offers a software program for developing, storing, and transferring programming information. MCT 10 Set-up Software allows the user to connect a PC to the adjustable frequency drive and perform live programming rather than using the LCP keypad. Or programming can be done offline and simply downloaded to the unit. The entire drive profile can be loaded onto the PC for backup storage or analysis. A USB connector and RS485 terminal are available for connecting to the adjustable frequency drive.

MCT 10 Set-up Software is available for free download at www.VLT-software.com. A CD is also available by requesting part number 130B1000. A user's manual provides detailed operation instructions. See also *chapter 2.8.2 PC Software*.

Programming control terminals

- Each control terminal has specified functions it is capable of performing.
- Parameters associated with the terminal enable the function selections.
- For proper drive functioning using control terminals, the terminals must be:
 - Wired properly.
 - Programmed for the intended function.

2.8.1 Local Control Panel

The local control panel (LCP) is a graphic display on the front of the unit, which provides the user interface through push-button controls and displays status messages, warnings and alarms, programming parameters, and more. A numeric display is also available with limited display options. *Figure 2.24* shows the LCP.

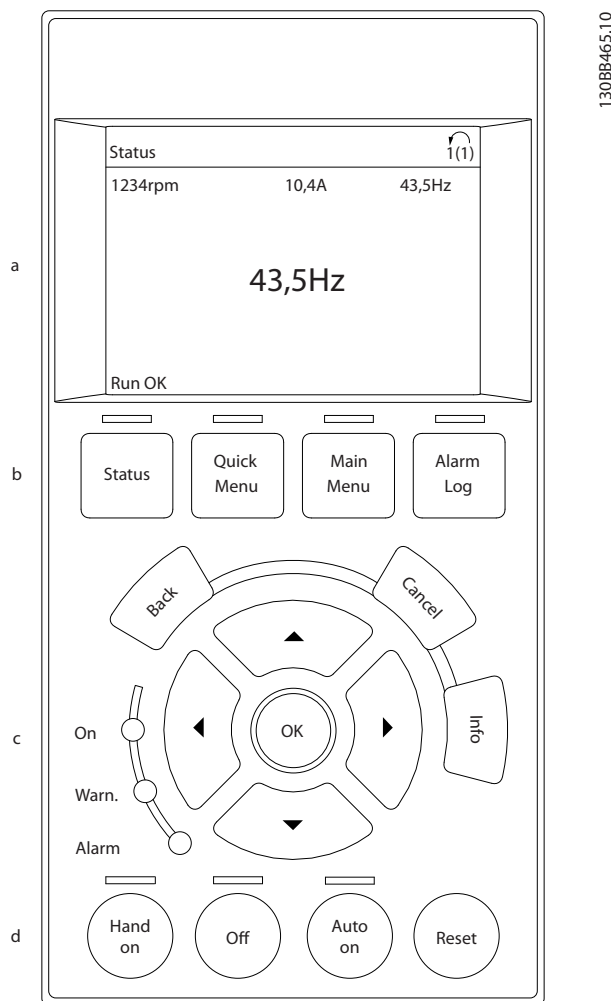


Figure 2.24 Local Control Panel

2.8.2 PC Software

The PC is connected via a standard (host/device) USB cable, or via the RS485 interface.

USB is a serial bus utilizing four shielded wires with Ground pin 4 connected to the shield in the PC USB port. When connecting the PC to an adjustable frequency drive through the USB cable, there is a potential risk of damaging the PC USB host controller. All standard PCs are manufactured without galvanic isolation in the USB port. Any ground potential difference caused by not following the recommendations described in the *instruction manual*, can damage the USB host controller through the shield of the USB cable.

It is recommended to use a USB isolator with galvanic isolation to protect the PC USB host controller from ground potential differences when connecting the PC to an adjustable frequency drive through a USB cable.

Do not to use a PC power cable with a ground plug when the PC is connected to the adjustable frequency drive through a USB cable. It reduces the ground potential difference, but does not eliminate all potential differences due to the ground and shield connected in the PC USB port.

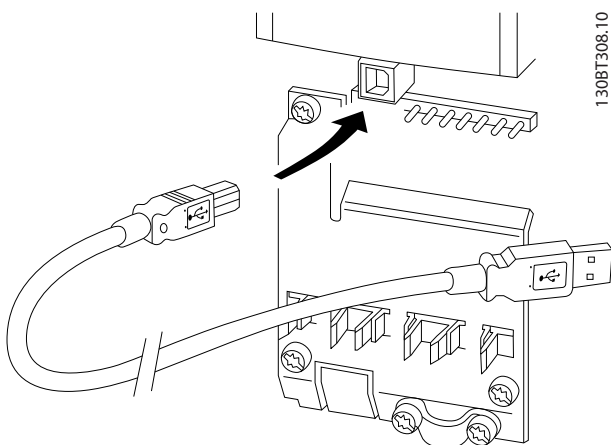


Figure 2.25 USB Connection

2.8.2.1 MCT 10 Set-up Software

The MCT 10 Set-up Software is designed for commissioning and servicing the adjustable frequency drive including guided programming of cascade controller, real time clock, smart logic controller, and preventive maintenance.

This software provides easy control of details as well as a general overview of systems, large or small. The tool handles all adjustable frequency drive series, VLT® advanced active filters and VLT® soft starter related data.

Example 1: Data storage in PC via MCT 10 Set-up Software

1. Connect a PC to the unit via USB or via the RS485 interface.
2. Open MCT 10 Set-up Software.
3. Select the USB port or the RS485 interface.
4. Select *copy*.
5. Select the *project* section.
6. Select *paste*.
7. Select *Save as*.

All parameters are now stored.

Example 2: Data transfer from PC to adjustable frequency drive via MCT 10 Set-up Software

1. Connect a PC to the unit via USB port or via the RS485 interface.
2. Open MCT 10 Set-up Software.
3. Select *Open* – stored files are shown.
4. Open the appropriate file.
5. Select *Write to drive*.

All parameters are now transferred to the adjustable frequency drive.

A separate manual for MCT 10 Set-up Software is available. Download the software and the manual from www.danfoss.com/BusinessAreas/DrivesSolutions/Software-download/.

2.8.2.2 VLT® Harmonics Calculation Software MCT 31

The MCT 31 harmonic calculation PC tool enables easy estimation of the harmonic distortion in a given application. Both the harmonic distortion of Danfoss adjustable frequency drives as well as non-Danfoss adjustable frequency drives with additional harmonic reduction devices, such as Danfoss AHF filters and 12-18-pulse rectifiers, can be calculated.

MCT 31 can also be downloaded from www.danfoss.com/BusinessAreas/DrivesSolutions/Software-download/.

2.8.2.3 Harmonic Calculation Software (HCS)

HCS is an advanced version of the harmonic calculation tool. The calculated results are compared to relevant norms and can be printed afterwards.

For more information, see www.danfoss-hcs.com/Default.asp?LEVEL=START

2.9 Maintenance

Danfoss adjustable frequency drive models up to 90 kW are maintenance-free. High power adjustable frequency drives (rated at 110 kW or higher) have built-in filter mats which require periodic cleaning by the operator depending on the exposure to dust and contaminants. Maintenance intervals for the cooling fans (approximately 3 years) and capacitors (approximately 5 years) are recommended in most environments.

2.9.1 Storage

Like all electronic equipment, adjustable frequency drives must be stored in a dry location. Periodic forming (capacitor charging) is not necessary during storage.

It is recommended to keep the equipment sealed in its packaging until installation.

3 System Integration

3

This chapter describes the considerations necessary to integrate the adjustable frequency drive into a system design. The chapter is divided into these sections:

- *Chapter 3.1 Ambient Operating Conditions*
Ambient operating conditions for the adjustable frequency drive including environment, enclosures, temperature, derating, and other considerations.
- *Chapter 3.3 Line Power Integration*
Input into the adjustable frequency drive from the line power side including power, harmonics, monitoring, cabling, fusing, and other considerations.
- *Chapter 3.2 EMC, Harmonics and Ground Leakage Protection*
Input (regeneration) from the adjustable frequency drive to the power grid including power, harmonics, monitoring, and other considerations.
- *Chapter 3.4 Motor Integration*
Output from the adjustable frequency drive to the motor including motor types, load, monitoring, cabling, and other considerations.
- *Chapter 3.5 Additional Inputs and Outputs, Chapter 3.6 Mechanical Planning*
Integration of the adjustable frequency drive input and output for optimal system design including adjustable frequency drive/motor matching, system characteristics, and other considerations.

A comprehensive system design anticipates potential problem areas while implementing the most effective combination of drive features. The information that follows provides guidelines for planning and specifying a motor-control system incorporating adjustable frequency drives.

Operational features provide a range of design concepts, from simple motor speed control to a fully integrated automation system with feedback handling, operational status reporting, automated fault responses, remote programming, and more.

A complete design concept includes detailed specification of needs and use.

- Adjustable frequency drive types
- Motors

- Line power requirements
- Control structure and programming
- Serial communication
- Equipment size, shape, weight
- Power and control cabling requirements; type and length
- Fuses
- Auxiliary equipment
- Transportation and storage

See *chapter 3.9 System Design Checklist* for a practical guide for selection and design.

Understanding features and strategy options can optimize a system design and possibly avoid introducing redundant components or functionality.

3.1 Ambient Operating Conditions

3.1.1 Humidity

Although the adjustable frequency drive can operate properly at high humidity (up to 95% relative humidity), avoid condensation. There is a specific risk of condensation when the adjustable frequency drive is colder than moist ambient air. Moisture in the air can also condense on the electronic components and cause short circuits. Condensation occurs in units without power. It is advisable to install a cabinet heater when condensation is possible due to ambient conditions. Avoid installation in areas subject to frost.

Alternatively, operating the adjustable frequency drive in stand-by mode (with the unit connected to line power) reduces the risk of condensation. Ensure the power dissipation is sufficient to keep the adjustable frequency drive circuitry free of moisture.

3.1.2 Temperature

Minimum and maximum ambient temperature limits are specified for all adjustable frequency drives. Avoiding extreme ambient temperatures prolongs the life of the equipment and maximizes overall system reliability. Follow the recommendations listed for maximum performance and equipment longevity.

- Although the adjustable frequency drive can operate at temperatures down to -10 °C (14 °F), proper operation at rated load is only guaranteed at 0 °C (32 °F) or higher.
- Do not exceed the maximum temperature limit.
- The lifetime of electronic components decreases by 50% for every 10 °C (18 °F) when operated above the design temperature.
- Even devices with IP54, IP55, or IP66 protection ratings must adhere to the specified ambient temperature ranges.
- Additional air conditioning of the cabinet or installation site may be required.

3.1.3 Cooling

Adjustable frequency drives dissipate power in the form of heat. The following recommendations are necessary for effective cooling of the units.

- Maximum air temperature to enter enclosure must never exceed 40 °C (104 °F).
- Day/night average temperature must not exceed 35 °C (95 °F).
- Mount the unit to allow for free cooling airflow through the cooling fins. See *chapter 3.6.1 Clearance* for correct mounting clearances.
- Provide minimum front and rear clearance requirements for cooling airflow. See the *instruction manual* for proper installation requirements.

3.1.3.1 Fans

The adjustable frequency drive has built-in fans to ensure optimum cooling. The main fan forces the air flow along the cooling fins on the heatsink, ensuring a cooling of the internal air. Some power sizes have a small secondary fan close to the control card ensuring that the internal air is circulated to avoid hot spots.

The main fan is controlled by the internal temperature in the adjustable frequency drive and the speed gradually increases along with temperature, reducing noise and energy consumption when the need is low, and ensuring maximum cooling when the need is there. The fan control can be adapted via *14-52 Fan Control* to accommodate any application, also to protect against negative effects of cooling in cold climates. In case of overtemperature inside the adjustable frequency drive, it derates the switching frequency and pattern. See *chapter 5.1 Derating* for more info.

3.1.3.2 Calculation of Airflow Required for Cooling the Adjustable Frequency Drive

The airflow required to cool an adjustable frequency drive, or multiple adjustable frequency drives in one enclosure, can be calculated as follows:

1. Determine the power loss at maximum output for all adjustable frequency drives from data tables in *chapter 7 Specifications*.
2. Add power loss values of all adjustable frequency drives that can operate at same time. The resultant sum is the heat Q to be transferred. Multiply the result with the factor f, read from *Table 3.1*. For example, f = 3.1 m³ x K/Wh at sea level.
3. Determine the highest temperature of the air entering the enclosure. Subtract this temperature from the required temperature inside the enclosure, for example 45 °C (113 °F).
4. Divide the total from step 2 by the total from step 3.

The calculation is expressed by the formula:

$$V = \frac{f \times Q}{T_i - T_A}$$

where

V = airflow in m³/h

f = factor in m³ x K/Wh

Q = heat to be transferred in W

T_i = temperature inside the enclosure in °C

T_A = ambient temperature in °C

f = cp x ρ (specific heat of air x density of air)

NOTICE!

Specific heat of air (cp) and density of air (ρ) are not constants, but depend on temperature, humidity, and atmospheric pressure. Therefore, they depend on the altitude above sea level.

Table 3.1 shows typical values of the factor f , calculated for different altitudes.

Altitude	Specific heat of air c_p	Density of air ρ	Factor f
[m]	[kJ/kgK]	[kg/m ³]	[m ³ ·K/Wh]
0	0.9480	1.225	3.1
500	0.9348	1.167	3.3
1000	0.9250	1.112	3.5
1500	0.8954	1.058	3.8
2000	0.8728	1.006	4.1
2500	0.8551	0.9568	4.4
3000	0.8302	0.9091	4.8
3500	0.8065	0.8633	5.2

Table 3.1 Factor f , Calculated for Different Altitudes

Example

What is the airflow required to cool two adjustable frequency drives (heat losses 295 W and 1430 W) running simultaneously, mounted in an enclosure with an ambient temperature peak of 37 °C (98.6 °F)?

1. The sum of the heat losses of both adjustable frequency drives is 1725 W.
2. Multiplying 1725 W by 3.3 m³ x K/Wh gives 5693 m x K/h.
3. Subtracting 37 °C from 45 °C gives 8 °C (=8 K).
4. Dividing 5693 m x K/h by 8 K gives: 711.6 m³/h.

If the airflow is required in CFM, use the conversion 1 m³/h = 0.589 CFM.

For the example above, 711.6 m³/h = 418.85 CFM.

3.1.4 Motor-generated Overvoltage

The DC voltage in the intermediate circuit (DC bus) increases when the motor acts as a generator. This can occur in two ways:

- The load drives the motor when the adjustable frequency drive is operated at a constant output frequency. This is generally referred to as an overhauling load.
- During deceleration, if the inertia of the load is high and the deceleration time of the drive is set to a short value.

The adjustable frequency drive cannot regenerate energy back to the input. Therefore, it limits the energy accepted from the motor when set to enable autoramping. The adjustable frequency drive attempts to do this by automatically lengthening the ramp-down time if the overvoltage occurs during deceleration. If this is unsuccessful, or if the

load drives the motor when operating at a constant frequency, the drive shuts down and displays a fault when a critical DC bus voltage level is reached.

3.1.5 Acoustic Noise

Acoustic noise from the adjustable frequency drive comes from three sources:

- DC link (intermediate circuit) coils
- RFI filter choke
- Internal fans

See Table 7.60 for acoustic noise ratings.

3.1.6 Vibration and Shock

The adjustable frequency drive is tested according to a procedure based on the IEC 68-2-6/34/35 and 36. These tests subject the unit to 0.7 g forces, over the range of 18 to 1000 Hz randomly, in three directions, for two hours. All Danfoss adjustable frequency drives comply with requirements that correspond to these conditions when the unit is wall- or floor-mounted, as well as when mounted within panels, or bolted to walls or floors.

3.1.7 Aggressive Atmospheres

3.1.7.1 Gases

Aggressive gases, such as hydrogen sulfide, chlorine, or ammonia can damage adjustable frequency drive electrical and mechanical components. Contamination of the cooling air can also cause the gradual decomposition of PCB tracks and door seals. Aggressive contaminants are often present in sewage treatment plants or swimming pools. A clear sign of an aggressive atmosphere is corroded copper.

In aggressive atmospheres, restricted IP enclosures are recommended along with conformal-coated circuit boards. See Table 3.2 for conformal-coating values.

NOTICE!

The adjustable frequency drive comes standard with class 3C2 coating of circuit boards. On request, class 3C3 coating is available.

Gas type	Unit	Class				
		3C1	3C2		3C3	
			Average value	Max. value ¹⁾	Average value	Max. value ¹⁾
Sea salt	n/a	None	Salt mist		Salt mist	
Sulfur oxides	mg/m ³	0.1	0.3	1.0	5.0	10
Hydrogen sulfide	mg/m ³	0.01	0.1	0.5	3.0	10
Chlorine	mg/m ³	0.01	0.1	0.03	0.3	1.0
Hydrogen chloride	mg/m ³	0.01	0.1	0.5	1.0	5.0
Hydrogen fluoride	mg/m ³	0.003	0.01	0.03	0.1	3.0
Ammonia	mg/m ³	0.3	1.0	3.0	10	35
Ozone	mg/m ³	0.01	0.05	0.1	0.1	0.3
Nitrogen	mg/m ³	0.1	0.5	1.0	3.0	9.0

Table 3.2 Conformal-coating Class Ratings

¹⁾ Maximum values are transient peak values not to exceed 30 minutes per day.

3.1.7.2 Dust Exposure

Installation of adjustable frequency drives in environments with high dust exposure is often unavoidable. Dust affects wall- or frame-mounted units with IP55 or IP66 protection ratings, and also cabinet-mounted devices with IP21 or IP20 protection ratings. Consider the three aspects described in this section when adjustable frequency drives are installed in such environments.

Reduced cooling

Dust forms deposits on the surface of the device and inside on circuit boards and the electronic components. These deposits act as insulation layers and hamper heat transfer to the ambient air, reducing the cooling capacity. The components become warmer. This causes accelerated aging of the electronic components, and the service life of the unit decreases. Dust deposits on the heatsink in the back of the unit also decrease the service life of the unit.

Cooling fans

The airflow for cooling the unit is produced by cooling fans, usually located on the back of the device. The fan rotors have small bearings into which dust can penetrate and act as an abrasive. This leads to bearing damage and fan failure.

Filters

High-power adjustable frequency drives are equipped with cooling fans that expel hot air from the interior of the device. Above a certain size, these fans are fitted with filter mats. These filters can become quickly clogged when used in dusty environments. Preventive measures are necessary under these conditions.

Periodic maintenance

Under the conditions described above, it is advisable to clean the adjustable frequency drive during periodic maintenance. Remove dust off the heatsink and fans and clean the filter mats.

3.1.7.3 Potentially Explosive Atmospheres

Systems operated in potentially explosive atmospheres must fulfill special conditions. EU Directive 94/9/EC describes the operation of electronic devices in potentially explosive atmospheres.

Motors controlled by adjustable frequency drives in potentially explosive atmospheres must be monitored for temperature using a PTC temperature sensor. Motors with ignition protection class d or e are approved for this environment.

- d classification consists of ensuring that if a spark occurs, it is contained in a protected area. While not requiring approval, special wiring and containment are required.
- d/e combination is the most often used in potentially explosive atmospheres. The motor itself has an e ignition protection class, while the motor cabling and connection environment is in compliance with the e classification. The restriction on the e connection space consists of the maximum voltage allowed in this space. The output voltage of an adjustable frequency drive is usually limited to the AC line voltage. The modulation of the output voltage may generate unallowable high peak voltage for e classification. In practice, using a sine-wave filter at the adjustable frequency drive output has proven to be an effective means to attenuate the high peak voltage.

NOTICE!

Do not install an adjustable frequency drive in a potentially explosive atmosphere. Install the adjustable frequency drive in a cabinet outside of this area. Using a sine-wave filter at the output of the adjustable frequency drive is also recommended to attenuate the dU/dt voltage rise and peak voltage. Keep the motor cables as short as possible.

NOTICE

Adjustable frequency drives with the MCB 112 option have PTB-certified motor thermistor sensor monitoring capability for potentially explosive atmospheres. Shielded motor cables are not necessary when adjustable frequency drives are operated with sine-wave output filters.

3.1.8 IP Rating Definitions

		Against penetration by solid foreign objects	Against access to hazardous parts by
First digit	0	(not protected)	(not protected)
	1	≥50 mm diameter	Back of hand
	2	12.5 mm diameter	Finger
	3	2.5 mm diameter	Tool
	4	≥1.0 mm diameter	Wire
	5	Dust protected	Wire
	6	Dust-tight	Wire
		Against water penetration with harmful effect	
Second digit	0	(not protected)	
	1	Drops falling vertically	
	2	Drops at 15° angle	
	3	Spraying water	
	4	Splashing water	
	5	Water jets	
	6	Powerful water jets	
	7	Temporary immersion	
		Additional information specifically for	
First letter	A		Back of hand
	B		Finger
	C		Tool
	D		Wire
		Additional information specifically for	
Additional letter	H	High-voltage device	
	M	Device moving during water test	
	S	Device stationary during water test	
	W	Weather conditions	

Table 3.3 IEC 60529 Definitions for IP Ratings

3.1.8.1 Cabinet Options and Ratings

Danfoss adjustable frequency drives are available with three different protection ratings:

- IP00 or IP20 for cabinet installation.
- IP54 or IP55 for local mounting.
- IP66 for critical ambient conditions such as extremely high (air) humidity or high concentrations of dust or aggressive gases.

3.1.9 Radio Frequency Interference

The main objective in practice is to obtain systems that operate stably without radio frequency interference between components. To achieve a high level of immunity, it is recommended to use adjustable frequency drives with high-quality RFI filters.

Use Category C1 filters specified in the EN 61800-3 which conform to the Class B limits of the general standard EN 55011.

Place warning notices on the adjustable frequency drive if RFI filters do not correspond to Category C1 (Category C2 or lower). The responsibility for proper labeling rests with the operator.

In practice, there are two approaches to RFI filters:

- Built into the equipment
 - Built-in filters take up space in the cabinet but eliminate additional costs for fitting, wiring, and material. However, the most important advantage is the perfect EMC conformance and cabling of integrated filters.
- External options
 - Optional external RFI filters that are installed on the input of the adjustable frequency drive cause a voltage drop. In practice, this means that the full AC line voltage is not present at the adjustable frequency drive input and a higher-rated drive may be necessary. The maximum length of the motor cable for compliance with EMC limits ranges from 1–50 m (3.3–164 ft). Costs are incurred for material, cabling, and assembly. EMC conformance is not tested.

NOTICE!

To ensure interference-free operation of the adjustable frequency drive/motor system, always use a category C1 RFI filter.

NOTICE!

VLT® AQUA Drive units are supplied as standard with built-in RFI filters conforming to category C1 (EN 61800-3) for use with 400 V line power systems and power ratings up to 90 kW (125 hp) or category C2 for power ratings of 110 to 630 kW (150 to 850 hp). VLT® AQUA Drive units conform to C1 with shielded motor cables up to 50 m (164 ft) or C2 with shielded motor cables up to 150 m (500 ft). Refer to *Table 3.4* for details.


3.1.10 PELV and Galvanic Isolation Compliance

Ensure the protection against electric shock, when the electrical supply is of the protective extra-low voltage (PELV) type and the installation complies with local and national PELV regulations.

To maintain PELV at the control terminals, all connections must be PELV, such as thermistors being reinforced/double insulated. All Danfoss adjustable frequency drive control and relay terminals comply with PELV (excluding grounded Delta leg above 400 V).

Galvanic (ensured) isolation is obtained by fulfilling requirements for higher isolation and by providing the relevant creepage/clearance distances. These requirements are described in the EN 61800-5-1 standard.

Electrical isolation is provided as shown in *Figure 3.1*. The components described comply with both PELV and the galvanic isolation requirements.

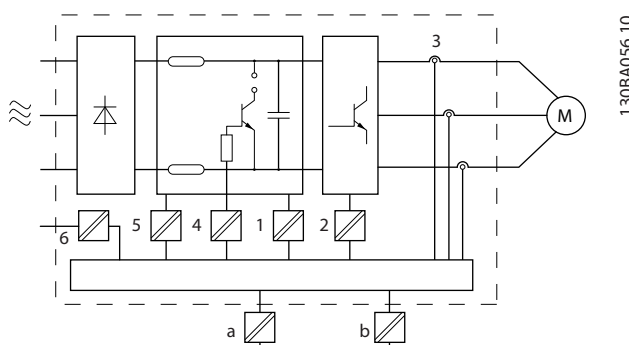

1	Power supply (SMPS) including signal isolation of V DC, indicating the intermediate current voltage
2	Gate drive for the IGBTs
3	Current transducers
4	Opto-coupler, brake module
5	Internal soft-charge, RFI and temperature measurement circuits.
6	Custom relays
a	Galvanic isolation for the 24 V backup option
b	Galvanic isolation for the RS485 standard bus interface

Figure 3.1 Galvanic Isolation

Installation at high altitude

Installations exceeding high altitude limits may not comply with PELV requirements. The isolation between components and critical parts could be insufficient. There is a risk for overvoltage. Reduce the risk for overvoltage using external protective devices or galvanic isolation.

For installations at high altitude, contact Danfoss regarding PELV compliance.

- 380–500 V (enclosure A, B and C): above 2000 m (6500 ft)
- 380–500 V (enclosure D, E, and F): above 3000 m (9800 ft)
- 525–690 V: above 2000 m (6500 ft)

3.1.11 Storage

Like all electronic equipment, adjustable frequency drives must be stored in a dry location. Periodic forming (capacitor charging) is not necessary during storage.

It is recommended to keep the equipment sealed in its packaging until installation.

3.2 EMC, Harmonics and Ground Leakage Protection

3.2.1 General Aspects of EMC Emissions

Adjustable frequency drives (and other electrical devices) generate electronic or magnetic fields that may interfere with their environment. The electromagnetic compatibility (EMC) of these effects depends on the power and the harmonic characteristics of the devices.

Uncontrolled interaction between electrical devices in a system can degrade compatibility and impair reliable operation. Interference may take the form of line harmonics distortion, electrostatic discharges, rapid voltage fluctuations, or high-frequency interference. Electrical devices generate interference along with being affected by interference from other generated sources.

Electrical interference usually arises at frequencies in the range 150 kHz to 30 MHz. Airborne interference from the adjustable frequency drive system in the range 30 MHz to 1 GHz is generated from the inverter, motor cable, and the motor.

Capacitive currents in the motor cable coupled with a high dU/dt from the motor voltage generate leakage currents, as shown in *Figure 3.2*.

The use of a shielded motor cable increases the leakage current (see *Figure 3.2*) because shielded cables have higher capacitance to ground than non-shielded cables. If the leakage current is not filtered, it causes greater interference on the line power in the radio frequency range below approximately 5 MHz. Since the leakage current (I_1) is carried back to the unit through the shield

(I_3), there is, in principle, only a small electro-magnetic field (I_4) from the shielded motor cable according to *Figure 3.2*.


The shield reduces the radiated interference, but increases the low-frequency interference in the line power supply. Connect the motor cable shield to the adjustable frequency drive enclosure as well as on the motor enclosure. This is best done by using integrated shield clamps so as to avoid twisted shield ends (pigtails). Pigtails increase the shield impedance at higher frequencies, which reduces the shield effect and increases the leakage current (I_4).

If a shielded cable is used for relay, control cable, signal interface and brake, mount the shield on the enclosure at both ends. In some situations, however, it is necessary to break the shield to avoid current loops.

If the shield is to be placed on a mounting plate for the adjustable frequency drive, the mounting plate must be made of metal, to convey the shield currents back to the unit. Moreover, ensure good electrical contact from the mounting plate through the mounting screws to the adjustable frequency driver chassis.

When using non-shielded cables, some emission requirements are not complied with, although most immunity requirements are observed.

To reduce the interference level from the entire system (unit+installation), make motor and brake cables as short as possible. Avoid placing cables with a sensitive signal level alongside motor and brake cables. Radio interference higher than 50 MHz (airborne) is especially generated by the control electronics.

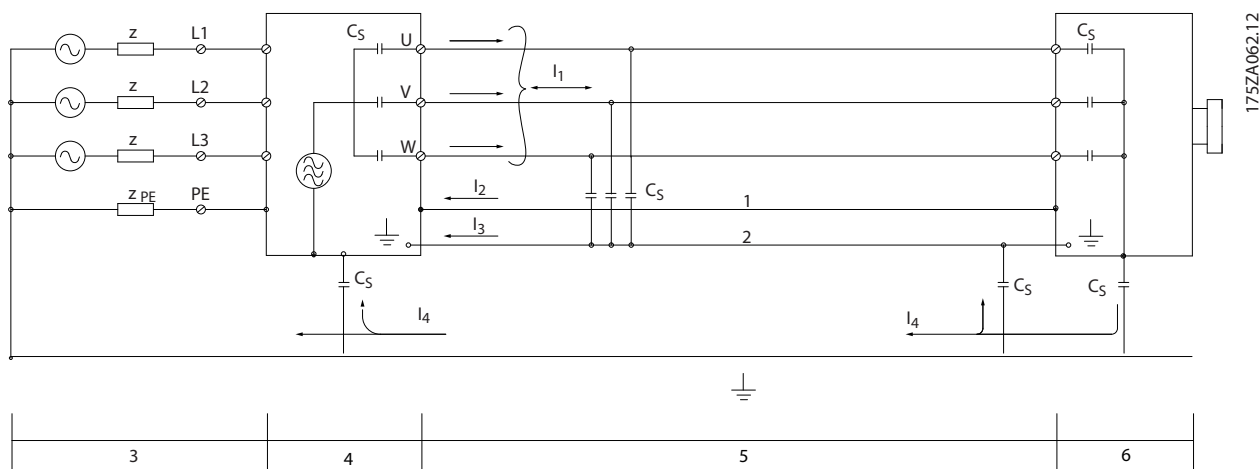

175ZA062.12

3

1	Ground wire	3	AC line power supply	5	Shielded motor cable
2	Shield	4	Adjustable frequency drive	6	Motor

Figure 3.2 Generation of Leakage Currents

3.2.2 EMC Test Results

The following test results have been obtained using a system with an adjustable frequency drive, a shielded control cable, a control box with potentiometer, as well as a single motor and shielded motor cable (Öflex Classic 100 CY) at nominal switching frequency. *Table 3.4* states the maximum motor cable lengths for compliance.

NOTICE!

Conditions may change significantly for other set-ups.

NOTICE!

Consult *Table 3.17* for parallel motor cables.

RFI filter type			Conducted emission			Radiated emission		
			Cable length [m (ft)]			Cable length [m (ft)]		
Standards and requirements	EN 55011		Class B	Class A Group 1	Class A Group 2	Class B	Class A Group 1	Class A Group 2
			Housing, trades and light industries	Industrial environment	Industrial environment	Housing, trades and light industries	Industrial environment	Industrial environment
	EN/IEC 61800-3		Category C1	Category C2	Category C3	Category C1	Category C2	Category C3
			First environment Home and office	First environment Home and office	Second environment Industrial	First environment Home and office	First environment Home and office	Second environment Industrial
H1								
FC 202	0.25–45 kW (0.34–60 hp) 200–240 V	T2	50 (164)	150 (500)	150 (500)	No	Yes	Yes
	1.1–7.5 kW (2–10 hp) 200–240 V	S2	50 (164)	100/150 (330/500) ⁵⁾	100/150 (330/500) ⁵⁾	No	Yes	Yes
	0.37–90 kW (0.5–125 hp) 380–480 V	T4	50 (164)	150 (500)	150 (500)	No	Yes	Yes
	7.5 kW (10 hp) 380–480 V	S4	50 (164)	100/150 (330/500) ⁵⁾	100/150 (330/500) ⁵⁾	No	Yes	Yes
H2								
FC 202	0.25–3.7 kW (0.34–5 hp) 200–240 V	T2	No	No	5 (16.4)	No	No	No
	5.5–45 kW (7.5–60 hp) 200–240 V	T2	No	No	25 (82)	No	No	No
	1.1–7.5 kW (2–10 hp) 200–240 V	S2	No	No	25 (82)	No	No	No
	0.37–7.5 kW (0.5–10 hp) 380–480 V	T4	No	No	5 (16.4)	No	No	No
	11–90 kW (15–125 hp) 380–380 V ⁴⁾	T4	No	No	25 (82)	No	No	No
	7.5 kW (10 hp) 380–480 V	S4	No	No	25 (82)	No	No	No
	11–30 kW (15–40 hp) 525–690 V ^{1, 4)}	T7	No	No	25 (82)	No	No	No
	37–90 kW (50–125 hp) 525–690 V ^{2, 4)}	T7	No	No	25 (82)	No	No	No
H3								
FC 202	0.25–45 kW (0.34–60 hp) 200–240 V	T2	10 (33)	50 (164)	50 (164)	No	Yes	Yes
	0.37–90 kW (0.5–125 hp) 380–480 V	T4	10 (33)	50 (164)	50 (164)	No	Yes	Yes
H4								
FC 202	1.1–30 kW (1.5–40 hp) 525–690 V ¹⁾	T7	No	100 (330)	100 (330)	No	Yes	Yes
	37–90 kW (50–125 hp) 525–690 V ²⁾	T7	No	150 (500)	150 (500)	No	Yes	Yes
Hx¹⁾								

RFI filter type		Conducted emission			Radiated emission		
		Cable length [m (ft)]			Cable length [m (ft)]		
Standards and requirements	EN 55011	Class B	Class A Group 1	Class A Group 2	Class B	Class A Group 1	Class A Group 2
		Housing, trades and light industries	Industrial environment	Industrial environment	Housing, trades and light industries	Industrial environment	Industrial environment
	EN/IEC 61800-3	Category C1	Category C2	Category C3	Category C1	Category C2	Category C3
		First environment Home and office	First environment Home and office	Second environment Industrial	First environment Home and office	First environment Home and office	Second environment Industrial
FC 202	1.1–90 kW (1.5–125 hp) 525–600 V	T6	No	No	No	No	No
	15–22 kW (20–30 hp) 200–240 V	S2	No	No	No	No	No
	11–37 kW (15–50 hp) 380–480 V	S4	No	No	No	No	No

Table 3.4 EMC Test Results (Emission) Maximum Motor Cable Length

- 1) Enclosure size B2.
 - 2) Enclosure size C2.
 - 3) Hx versions can be used according to EN/IEC 61800-3 category C4.
 - 4) T7, 37–90 kW (50–125 hp) complies with class A group 1 with 25 m (82 ft) motor cable. Some restrictions for the installation apply (contact Danfoss for details).
 - 5) 100 m (330 ft) for phase-neutral, 150 m (500 ft) for phase-phase (but not from TT or TN). Single-phase adjustable frequency drives are not intended for 2-phase supply from a TT or TN network.
- Hx, H1, H2, H3, H4 or H5 is defined in the type code pos. 16–17 for EMC filters.
- Hx – No EMC filters built in the adjustable frequency drive.
- H1 – Integrated EMC filter. Fulfill EN 55011 Class A1/B and EN/IEC 61800-3 Category 1/2.
- H2 – A limited RFI filter only containing capacitors and without a common-mode coil. Fulfill EN 55011 Class A2 and EN/IEC 61800-3 Category 3.
- H3 – Integrated EMC filter. Fulfill EN 55011 class A1/B and EN/IEC 61800-3 Category 1/2.
- H4 – Integrated EMC filter. Fulfill EN 55011 class A1 and EN/IEC 61800-3 Category 2.
- H5 – Marine versions. Ruggedized version, fulfills same emissions levels as H2 versions.

3.2.3 Emission Requirements

The EMC product standard for adjustable frequency drives defines four categories (C1, C2, C3 and C4) with specified requirements for emission and immunity. *Table 3.5* states the definition of the four categories and the equivalent classification from EN 55011.

Category	Definition	Equivalent emission class in EN 55011
C1	Adjustable frequency drives installed in the first environment (home and office) with a supply voltage less than 1000 V.	Class B
C2	Adjustable frequency drives installed in the first environment (home and office) with a supply voltage less than 1000 V, which are neither plug-in nor movable and are intended to be installed and commissioned by a professional.	Class A Group 1
C3	Adjustable frequency drives installed in the second environment (industrial) with a supply voltage lower than 1000 V.	Class A Group 2
C4	Adjustable frequency drives installed in the second environment with a supply voltage equal to or above 1000 V or rated current equal to or above 400 A or intended for use in complex systems.	No limit line. Make an EMC plan.

Table 3.5 Correlation between IEC 61800-3 and EN 55011

When the generic (conducted) emission standards are used, the adjustable frequency drives are required to comply with the limits in *Table 3.6*.

Environment	Generic emission standard	Equivalent emission class in EN 55011
First environment (home and office)	EN/IEC 61000-6-3 Emission standard for residential, commercial and light industrial environments.	Class B
Second environment (industrial environment)	EN/IEC 61000-6-4 Emission standard for industrial environments.	Class A Group 1

Table 3.6 Correlation between Generic Emission Standards and EN 55011

3.2.4 Immunity Requirements

The immunity requirements for adjustable frequency drives depend on the environment where they are installed. The requirements for the industrial environment are higher than the requirements for the home and office environment. All Danfoss adjustable frequency drives comply with the requirements for the industrial environment and consequently comply also with the lower requirements for home and office environment with a large safety margin.

To document immunity against electrical interference, the following immunity tests have been made in accordance with following basic standards:

- **EN 61000-4-2 (IEC 61000-4-2):** Electrostatic discharges (ESD): Simulation of electrostatic discharges from human beings.
- **EN 61000-4-3 (IEC 61000-4-3):** Incoming electromagnetic field radiation, amplitude modulated simulation of the effects of radar and radio communication equipment as well as mobile communications equipment.
- **EN 61000-4-4 (IEC 61000-4-4):** Electrical interference: Simulation of interference brought about by switching a contactor, relay or similar devices.
- **EN 61000-4-5 (IEC 61000-4-5):** Surge transients: Simulation of transients brought about, for example, by lightning that strikes near installations.
- **EN 61000-4-6 (IEC 61000-4-6):** RF Common mode: Simulation of the effect from radio-transmission equipment joined by connection cables.

See *Table 3.7*.

Basic standard	Burst ²⁾ IEC 61000-4-42)	Surge ²⁾ IEC 61000-4-5	ESD ²⁾ IEC 61000-4-2	Radiated electromagnetic field IEC 61000-4-3	RF common mode voltage IEC 61000-4-6
Acceptance criterion	B	B	B	A	A
Voltage range: 200–240 V, 380–500 V, 525–600 V, 525–690 V					
Line	4 kV CM	2 kV/2 Ω DM 4 kV/12 Ω CM	—	—	10 V _{RMS}
Motor	4 kV CM	4 kV/2 Ω ¹⁾	—	—	10 V _{RMS}
Brake	4 kV CM	4 kV/2 Ω ¹⁾	—	—	10 V _{RMS}
Load sharing	4 kV CM	4 kV/2 Ω ¹⁾	—	—	10 V _{RMS}
Control wires	2 kV CM	2 kV/2 Ω ¹⁾	—	—	10 V _{RMS}
Standard bus	2 kV CM	2 kV/2 Ω ¹⁾	—	—	10 V _{RMS}
Relay wires	2 kV CM	2 kV/2 Ω ¹⁾	—	—	10 V _{RMS}
Application and serial communication options	2 kV CM	2 kV/2 Ω ¹⁾	—	—	10 V _{RMS}
LCP cable	2 kV CM	2 kV/2 Ω ¹⁾	—	—	10 V _{RMS}
External 24 V DC	2 V CM	0.5 kV/2 Ω DM 1 kV/12 Ω CM	—	—	10 V _{RMS}
Enclosure	—	—	8 kV AD 6 kV CD	10 V/m	—

Table 3.7 EMC Immunity Form

1) Injection on cable shield

2) Values typically obtained by testing

3.2.5 Motor Insulation

Modern motors for use with adjustable frequency drives have a high degree of insulation to account for new generation high-efficiency IGBTs with high dU/dt. For retrofit in old motors, confirm the motor insulation or mitigate with dU/dt filter or, if necessary, a sine-wave filter.

For motor cable lengths ≤ the maximum cable length listed in *chapter 7.5 Cable Specifications*, the motor insulation ratings listed in *Table 3.8* are recommended. If a motor has lower insulation rating, it is recommended to use a dU/dt or sine-wave filter.

Nominal AC line voltage [V]	Motor insulation [V]
U _N ≤ 420	Standard U _{LI} = 1300
420 V < U _N ≤ 500	Reinforced U _{LI} = 1600
500 V < U _N ≤ 600	Reinforced U _{LI} = 1800
600 V < U _N ≤ 690	Reinforced U _{LI} = 2000

Table 3.8 Motor Insulation

3.2.6 Motor Bearing Currents

To minimize bearing and shaft currents, ground the following to the driven machine:

- Adjustable frequency drive
- Motor
- Driven machine

Standard mitigation strategies

1. Use an insulated bearing.
2. Apply rigorous installation procedures:
 - 2a Ensure that the motor and load motor are aligned.
 - 2b Strictly follow the EMC Installation guideline.
 - 2c Reinforce the PE so the high frequency impedance is lower in the PE than the input power leads.
 - 2d Provide a good high frequency connection between the motor and the adjustable frequency drive, for instance, by a shielded cable which has a 360° connection in the motor and the adjustable frequency drive.

- 2e Make sure that the impedance from adjustable frequency drive to building ground is lower than the grounding impedance of the machine. This can be difficult for pumps.
- 2f Make a direct ground connection between the motor and load motor.
- 3. Lower the IGBT switching frequency.
- 4. Modify the inverter waveform, 60° AVM vs. SFAVM.
- 5. Install a shaft grounding system or use an isolating coupling.
- 6. Apply conductive lubrication.
- 7. Use minimum speed settings if possible.
- 8. Try to ensure the line voltage is balanced to ground. This can be difficult for IT, TT, TN-CS or Grounded leg systems.
- 9. Use a dU/dt or sine-wave filter.

3.2.7 Harmonics

Electrical devices with diode rectifiers, such as fluorescent lights, computers, copiers, fax machines, various laboratory equipment and telecommunications systems, can add harmonic distortion to a line power supply. Adjustable frequency drives use a diode bridge input, which can also contribute to harmonic distortion.

The adjustable frequency drive does not draw current uniformly from the power line. This non-sinusoidal current has components that are multiples of the fundamental current frequency. These components are referred to as harmonics. It is important to control the total harmonic distortion on the line power supply. Although the harmonic currents do not directly affect electrical energy consumption, they generate heat in wiring and transformers and can affect other devices on the same power line.

3.2.7.1 Harmonic Analysis

Various characteristics of a building's electrical system determine the exact harmonic contribution of the drive to the THD of a facility and its ability to meet IEEE standards. Generalizations about the harmonic contribution of adjustable frequency drives on a specific facility is difficult. When necessary, perform an analysis of the system harmonics to determine equipment effects.

An adjustable frequency drive takes up a non-sinusoidal current from the line power, which increases the input

current I_{RMS} . A non-sinusoidal current is transformed by means of a Fourier series analysis and split up into sine-wave currents with different frequencies, i.e., different harmonic currents I_n with 50 Hz or 60 Hz as the fundamental frequency.

The harmonics do not affect the power consumption directly, but increase the heat losses in the installation (transformer, inductors, cables). Consequently, in power plants with a high percentage of rectifier load, harmonic currents should be kept at a low level to avoid overload of the transformer, inductors, and cables.

Abbreviation	Description
f_1	fundamental frequency
I_1	fundamental current
U_1	fundamental voltage
I_n	harmonic currents
U_n	harmonic voltage
n	harmonic order

Table 3.9 Harmonics-related Abbreviations

	Fundamental current (I_1)	Harmonic current (I_n)		
		I_5	I_7	I_{11}
Current	I_1			
Frequency [Hz]	50	250	350	550

Table 3.10 Transformed Non-sinusoidal Current

Current	Harmonic current				
	I_{RMS}	I_1	I_5	I_7	I_{11-49}
Input current	1.0	0.9	0.4	0.2	< 0.1

Table 3.11 Harmonic Currents Compared to the RMS Input Current

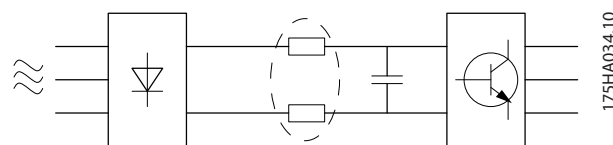


Figure 3.3 Intermediate Circuit Coils

NOTICE!

Some of the harmonic currents can disturb communication equipment connected to the same transformer or cause resonance in connection with power-factor correction capacitors.

To ensure low harmonic currents, the adjustable frequency drive is equipped with passive filters. DC coils reduce the total harmonic distortion (THD) to 40%.

The voltage distortion on the line power supply voltage depends on the size of the harmonic currents multiplied by the line power impedance for the frequency in question. The total voltage distortion (THD) is calculated on the basis of the individual voltage harmonics using this formula:

$$THD = \frac{\sqrt{U_5^2 + U_7^2 + \dots + U_N^2}}{U_1}$$

3.2.7.2 Harmonics Emission Requirements

Equipment connected to the public supply network

Option	Definition
1	IEC/EN 61000-3-2 Class A for 3-phase balanced equipment (for professional equipment only up to 1 kW (1.4 hp) total power).
2	IEC/EN 61000-3-12 Equipment 16 A-75 A and professional equipment as from 1 kW (1.4 hp) up to 16 A phase current.

Table 3.12 Harmonics Emission Standards

3.2.7.3 Harmonics Test Results (Emission)

Power sizes up to PK75 in T2 and T4 complies with IEC/EN 61000-3-2 Class A. Power sizes from P1K1 and up to P18K in T2 and up to P90K in T4 complies with IEC/EN 61000-3-12, Table 4. Power sizes P110–P450 in T4 also complies with IEC/EN 61000-3-12 even though not required because currents are above 75 A.

Table 3.13 describes that the short-circuit power of the supply S_{sc} at the interface point between the user's supply and the public system (R_{scc}) is greater than or equal to:

$$S_{sc} = \sqrt{3} \times R_{scc} \times U_{line\ power} \times I_{equ} = \sqrt{3} \times 120 \times 400 \times I_{equ}$$

	Individual harmonic current I_n/I_1 (%)			
	I_5	I_7	I_{11}	I_{13}
Actual (typical)	40	20	10	8
Limit for $R_{scc} \geq 120$	40	25	15	10
	Harmonic current distortion factor (%)			
	THD	PWHD		
Actual (typical)	46	45		
Limit for $R_{scc} \geq 120$	48	46		

Table 3.13 Harmonics Test Results (Emission)

It is the responsibility of the installer or user of the equipment to ensure, by consultation with the distribution network operator if necessary, that the equipment is connected only to a supply with a short-circuit power S_{sc} greater than or equal to that specified in the equation.

Consult the distribution network operator to connect other power sizes to the public supply network.

Compliance with various system level guidelines: The harmonic current data in Table 3.13 are provided in accordance with IEC/EN61000-3-12 with reference to the power drive systems product standard. They may be used as the basis for calculation of the influence harmonic currents have on the power supply system and for the documentation of compliance with relevant regional guidelines: IEEE 519 -1992; G5/4.

3.2.7.4 Effect of Harmonics in a Power Distribution System

In Figure 3.4, a transformer is connected on the primary side to a point of common coupling PCC1, on the medium voltage supply. The transformer has an impedance of Z_{xfr} and feeds a number of loads. The point of common coupling where all loads are connected together is PCC2. Each load is connected through cables that have an impedance of Z_1, Z_2, Z_3 .

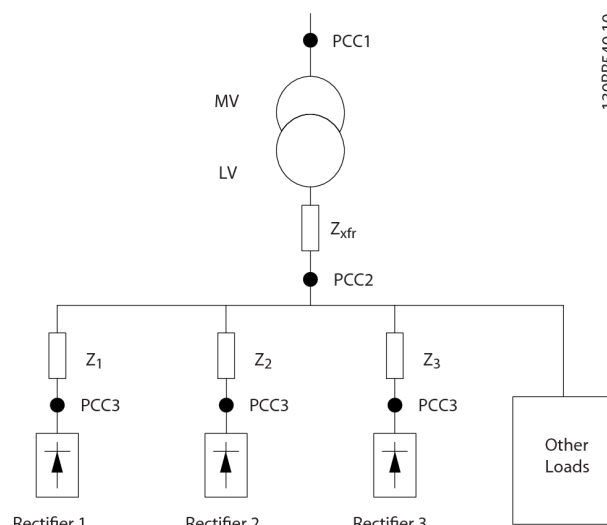


Figure 3.4 Small Distribution System

Harmonic currents drawn by non-linear loads cause distortion of the voltage because of the voltage drop in the impedances of the distribution system. Higher impedances result in higher levels of voltage distortion.

Current distortion relates to apparatus performance, which in turn relates to the individual load. Voltage distortion relates to system performance. It is not possible to determine the voltage distortion in the PCC knowing only the load's harmonic performance. To predict the distortion in the PCC, the configuration of the distribution system and relevant impedances must be known.

130BB540.10

A commonly used term for describing the impedance of a grid is the short-circuit ratio R_{sce} , defined as the ratio between the short circuit apparent power of the supply at the PCC (S_{sc}) and the rated apparent power of the load (S_{equ}).

$$R_{sce} = \frac{S_{sc}}{S_{equ}}$$

where $S_{sc} = \frac{U^2}{Z_{supply}}$ and $S_{equ} = U \times I_{equ}$

The negative effect of harmonics is two-fold

- Harmonic currents contribute to system losses (in cabling, transformer).
- Harmonic voltage distortion causes disturbance to other loads and increase losses in other loads.

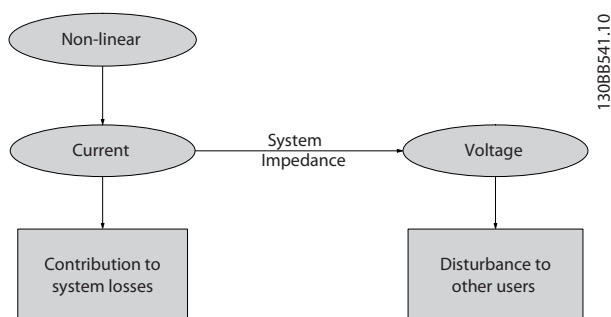


Figure 3.5 Negative Effects of Harmonics

3.2.7.5 Harmonic Limitation Standards and Requirements

The requirements for harmonic limitation can be:

- Application-specific requirements.
- Standards that must be observed.

The application-specific requirements are related to a specific installation where there are technical reasons for limiting the harmonics.

Example

A 250 kVA transformer with two 110 kW (150 hp) motors connected is sufficient if one of the motors is connected directly online and the other is supplied through an adjustable frequency drive. However, the transformer is undersized if both motors are supplied by the adjustable frequency drive. Using additional means of harmonic reduction within the installation or selecting low harmonic drive variants makes it possible for both motors to run with adjustable frequency drives.

There are various harmonic mitigation standards, regulations, and recommendations. Different standards apply in different geographical areas and industries. The following standards are the most common:

- IEC61000-3-2
- IEC61000-3-12
- IEC61000-3-4
- IEEE 519
- G5/4

See the *AHF 005/010 Design Guide* for specific details on each standard.

In Europe, the maximum THVD is 8% if the plant is connected via the public grid. If the plant has its own transformer, the limit is 10% THVD. The VLT® AQUA Drive is designed to withstand 10% THVD.

3.2.7.6 Harmonic Mitigation

In cases where additional harmonic suppression is required, Danfoss offers a wide range of mitigation equipment. These are:

- 12-pulse drives
- AHF filters
- Low Harmonic Drives
- Active Filters

The choice of the right solution depends on several factors:

- The grid (background distortion, line power unbalance, resonance and type of supply (transformer/generator).
- Application (load profile, number of loads and load size).
- Local/national requirements/regulations (IEEE519, IEC, G5/4, etc.).
- Total cost of ownership (initial cost, efficiency, maintenance, etc.).

Always consider harmonic mitigation if the transformer load has a non-linear contribution of 40% or more.

Danfoss offers tools for calculation of harmonics, see *chapter 2.8.2 PC Software*.

3.2.8 Ground Leakage Current

Follow national and local codes regarding protective grounding of equipment where leakage current exceeds 3.5 mA.

Adjustable frequency drive technology implies high frequency switching at high power. This generates a leakage current in the ground connection.

The ground leakage current is made up of several contributions and depends on various system configurations, including:

- RFI filtering
- Motor cable length
- Motor cable shielding
- Adjustable frequency drive power

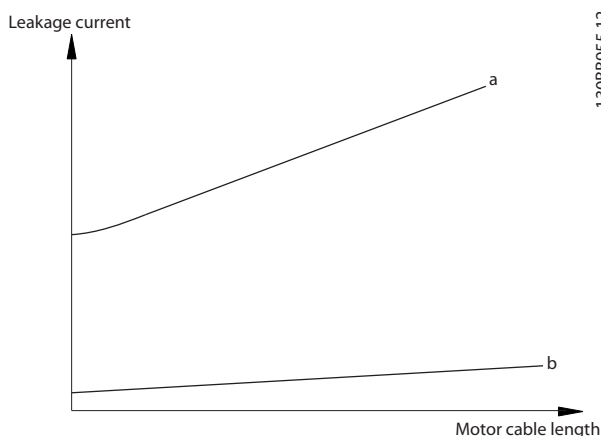


Figure 3.6 Motor Cable Length and Power Size Influence on Leakage Current. Powersize a > Powersize b

The leakage current also depends on the line distortion.

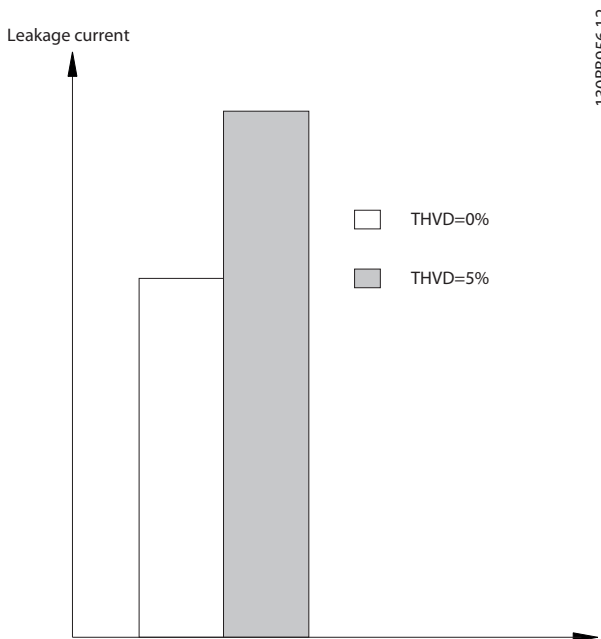


Figure 3.7 Line Distortion Influences Leakage Current

Compliance with EN/IEC61800-5-1 (power drive system product standard) requires special care if the leakage current exceeds 3.5 mA. Reinforce grounding with the following protective ground connection requirements:

- Ground wire (terminal 95) of at least 10 mm² (7 AWG) cross-section.
- Two separate ground wires both complying with the dimensioning rules

See EN/IEC61800-5-1 and EN50178 for further information.

Using RCDs

Where residual current devices (RCDs), also known as ground leakage circuit breakers (GLCBs), are used, comply with the following:

- Use RCDs of type B only as they are capable of detecting AC and DC currents.
- Use RCDs with a delay to prevent faults due to transient ground currents.
- Dimension RCDs according to the system configuration and environmental considerations.

The leakage current includes several frequencies originating from both the line power frequency and the switching frequency. Whether the switching frequency is detected depends on the type of RCD used.

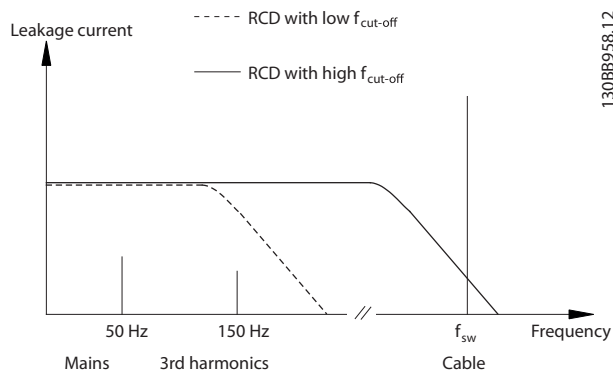


Figure 3.8 Main Contributions to Leakage Current

3

The amount of leakage current detected by the RCD depends on the cut-off frequency of the RCD.

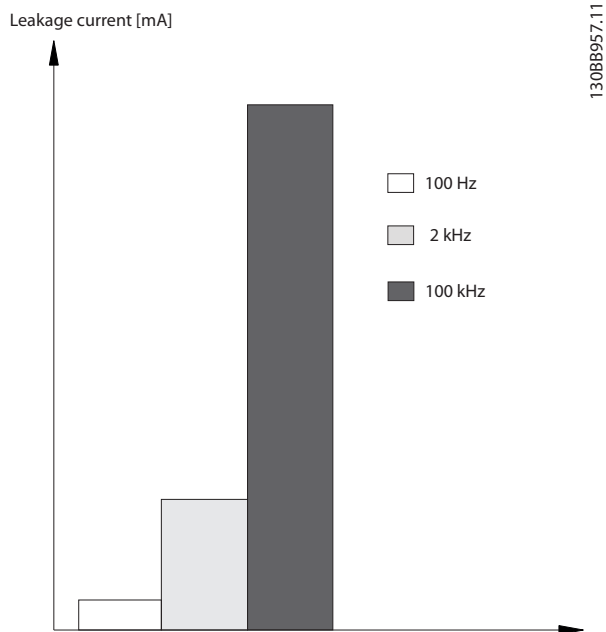


Figure 3.9 Influence of the RCD Cut-off Frequency on Leakage Current

3.3 Line Power Integration

3.3.1 Line Power Configurations and EMC Effects

There are several types of AC line power systems for supplying power to adjustable frequency drives. Each affects the EMC characteristics of the system. The 5-wire TN-S systems are regarded as best for EMC, while the isolated IT system is the least desirable.

System type	Description
TN Line Power Systems	There are two types of TN line power distribution systems: TN-S and TN-C.
TN-S	A 5-wire system with separate neutral (N) and protective ground (PE) conductors. It provides the best EMC properties and avoids transmitting interference.
TN-C	A 4-wire system with a common neutral and protective ground (PE) conductor throughout the system. The combined neutral and protective ground conductor results in poor EMC characteristics.

System type	Description
TT Line Power Systems	A 4-wire system with a grounded neutral conductor and individual grounding of the drive units. It has good EMC characteristics when grounded properly.
IT Line Power System	An isolated 4-wire system with the neutral conductor either not grounded or grounded via an impedance.

Table 3.14 AC Line Power System Types

3.3.2 Low-frequency Line Interference

3.3.2.1 Non-sinusoidal Line Power Supply

The AC line voltage is rarely a uniform sinusoidal voltage with constant amplitude and frequency. This is partly due to loads that draw non-sinusoidal currents from line power or have non-linear characteristics, such as computers, television sets, switching power supplies, energy-efficient lamps, and adjustable frequency drives. Deviations are unavoidable and permissible within certain limits.

3.3.2.2 EMC Directives Compliance

In most of Europe, the basis for the objective assessment of the quality of line power is the Electromagnetic Compatibility of Devices Act (EMVG). Compliance with this regulation ensures that all devices and networks connected to electrical distribution systems fulfill their intended purpose without generating problems.

Standard	Definition
EN 61000-2-2, EN 61000-2-4, EN 50160	Defines the AC line voltage limits to observe in public and industrial power grids.
EN 61000-3-2, 61000-3-12	Regulates line interference generated by connected devices.
EN 50178	Monitors electronic equipment for use in power installations.

Table 3.15 EN Design Standards for Line Power Quality

3.3.2.3 Interference-free Adjustable Frequency Drives

Every adjustable frequency drive generates line interference. Present standards only define frequency ranges up to 2 kHz. Some drives shift the line interference in the region above 2 kHz, which is not addressed by the standard, and label them as interference-free. Limits for this region are currently being studied. Adjustable frequency drives do not shift line interference.

3.3.2.4 How Line Interference Occurs

Line interference distortion of the sinusoidal waveform caused by the pulsating input currents is referred to generally as harmonics. Derived from Fourier analysis, it is assessed up to 2.5 kHz, corresponding to the 50th harmonic of the line power frequency.

The input rectifiers of adjustable frequency drives generate this typical form of harmonic interference on line power. When adjustable frequency drives are connected to 50 Hz line power systems, the 3rd harmonic (150 Hz), 5th harmonic (250 Hz) or 7th harmonic (350 Hz) show the strongest effects. The overall harmonic content is called the total harmonic distortion (THD).

3.3.2.5 Effects of Line Interference

Harmonics and voltage fluctuations are two forms of low-frequency line interference. They have a different appearance at their origin than at any other point in the line power system when a load is connected. Consequently, a range of influences must be determined collectively when assessing the effects of line interference. These include the line power feed, structure, and loads.

Undervoltage warnings and higher functional losses can occur as a result of line interference.

Undervoltage warnings

- Incorrect voltage measurements due to distortion of the sinusoidal AC line voltage.
- Cause incorrect power measurements because only RMS-true measuring takes harmonic content into account.

Higher losses

- Harmonics reduce the active power, apparent power, and reactive power.
- Distort electrical loads resulting in audible interference in other devices, or, in worst case, even destruction.
- Shorten the lifetime of devices as a result of heating.

NOTICE!

Excessive harmonic content puts a load on power factor correction equipment and may even cause its destruction. For this reason, provide chokes for power factor correction equipment when excessive harmonic content is present.

3.3.3 Analyzing Line Interference

To avoid impairment of line power quality, a variety of methods are available for analyzing systems or devices that generate harmonic currents. Line power analysis programs, such as harmonic calculation software (HCS), analyze system designs for harmonics. Specific countermeasures can be tested beforehand and ensure subsequent system compatibility.

For analyzing line power systems, go to <http://www.danfoss-hcs.com/Default.asp?LEVEL=START> for software download.

NOTICE!

Danfoss has a very high level of EMC expertise and provides EMC analyses with detailed evaluation or line power calculations to customers in addition to training courses, seminars, and workshops.

3.3.4 Options for Reducing Line Interference

Generally speaking, line interference from drives is reduced by limiting the amplitude of pulsed currents. This improves the power factor λ (lambda).

Several methods are recommended to avoid line harmonics:

- Input chokes or DC link chokes in the adjustable frequency drives.
- Passive filters.
- Active filters.
- Slim DC links.
- Active front end and low harmonic drives.
- Rectifiers with 12, 18 or 24 pulses per cycle.

3.3.5 Radio Frequency Interference

Adjustable frequency drives generate radio frequency interference (RFI) due to their variable-width current pulses. Drives and motor cables radiate these components and conduct them into the line power system.

RFI filters are used to reduce this interference on line power. They provide noise immunity to protect devices against high-frequency conducted interference. They also reduce interference emitted to the line cable or radiation from the line cable. The filters are intended to limit interference to a specified level. Built-in filters are often standard equipment rated for specific immunity.

NOTICE

All VLT® AQUA Drive adjustable frequency drives are equipped with integrated line interference chokes as standard.

3.3.6 Classification of the Operating Site

Knowing the requirements for the environment the adjustable frequency drive is intended to operate in is the most important factor regarding EMC compliance.

3.3.6.1 Environment 1/Class B: Residential

Operating sites connected to the public low-voltage power grid, including light industrial areas, are classified as Environment 1/Class B. They do not have their own high-voltage or medium-voltage distribution transformers for a separate line power system. The environment classifications apply both inside and outside buildings. Some general examples are business areas, residential buildings, restaurants, car parks, and entertainment facilities.

3.3.6.2 Environment 2/Class A: Industrial

Industrial environments are not connected to the public power grid. Instead, they have their own high-voltage or medium-voltage distribution transformers. The environment classifications apply both inside and outside the buildings.

They are defined as industrial and are characterized by specific electromagnetic conditions:

- The presence of scientific, medical or industrial devices.
- Switching of large inductive and capacitive loads.
- The occurrence of strong magnetic fields (for example, due to high currents).

3.3.6.3 Special Environments

In areas with medium-voltage transformers clearly demarcated from other areas, the user decides which type of environment to classify their facility. The user is responsible for ensuring the electromagnetic compatibility necessary to enable the trouble-free operation of all devices within specified conditions. Some examples of special environments are shopping centers, supermarkets, gas stations, office buildings, and warehouses.

3.3.6.4 Warning Labels

When an adjustable frequency drive does not conform to Category C1, provide a warning notice. This is the responsibility of the user. Interference elimination are based on classes A1, A2, and B in EN 55011. The user is ultimately responsible for the appropriate classification of devices and the cost of remedying EMC problems.

3.3.7 Use with Isolated Input Source

Most utility power in the United States is referenced to ground. Although not in common use in the United States, the input power may be an isolated source. All Danfoss adjustable frequency drives may be used with isolated input source as well as with ground reference power lines.

3.3.8 Power Factor Correction

Power factor correction equipment serves to reduce the phase shift (φ) between the voltage and the current to move the power factor closer to unity ($\cos \varphi$). This is necessary when a large number of inductive loads, such as motors or lamp ballasts, are used in an electrical distribution system. Adjustable frequency drives with an isolated DC link do not draw any reactive power from the line power system or generate any phase power-factor correction shifts. They have a $\cos \varphi$ of approximately 1.

For this reason, speed-controlled motors do not have to take into account when dimensioning power factor correction equipment. However, the current drawn by the phase-correction equipment rises because adjustable frequency drives generate harmonics. The load and heat factor on the capacitors increases as the number of harmonic generators increases. As a result, fit chokes in the power-factor correction equipment. The chokes also prevent resonance between load inductances and the capacitance. Drives with $\cos \varphi < 1$ also require chokes in the power factor correction equipment. Also consider the higher reactive power level, for cable dimensions.

3.3.9 Input Power Delay

To ensure that the input surge suppression circuitry performs correctly, observe a time delay between successive applications of input power.

Table 3.16 shows the minimum time that must be allowed between applications of input power.

Input voltage [V]	380	415	460	600
Waiting time [s]	48	65	83	133

Table 3.16 Input Power Delay

3.3.10 Electrical Transients

Transients are brief voltage peaks in the range of a few thousand volts. They can occur in all types of power distribution systems, including industrial and residential environments.

Lightning strikes are a common cause of transients. However, they are also caused by switching large loads on line or off, or switching other electrical transients equipment, such as power factor correction equipment. Transients can also be caused by short-circuits, tripping of circuit breakers in power distribution systems, and inductive coupling between parallel cables.

EN 61000-4-1 standard describes the forms of these transients and how much energy they contain. Their harmful effects can be limited by various methods. Gas-filled surge arresters and spark gaps provide first-level protection against high-energy transients. For second-level protection, most electronic devices, including adjustable frequency drives, use voltage-dependent resistors (varistors) to attenuate transients.

3.3.11 Operation with a Standby Generator

Use backup power systems when the continued operation is necessary in the event of line failure. They are also used in parallel with the public power grid to achieve higher line power. This is common practice for combined heat and power units, taking advantage of the high efficiency achieved with this form of energy conversion. When backup power is provided by a generator, the line impedance is usually higher than when power is taken from the public grid. This causes the total harmonic distortion to increase. With proper design, generators can operate in a system containing devices that induce harmonics.

System design consideration with a stand-by generator is recommended.

- When the system is switched from line power operation to generator, the harmonic load usually increases.
- Designers must calculate or measure the increase in the harmonic load to ensure that the power quality conforms to regulations to prevent harmonic problems and equipment failure.
- Avoid asymmetric loading of the generator must be avoided since it causes increased losses and may increase total harmonic distortion.
- A 5/6 stagger of the generator winding attenuates the 5th and 7th harmonics, but it allows the 3rd harmonic to increase. A 2/3 stagger reduces the 3rd harmonic.
- When possible, the operator should disconnect power factor correction equipment because it causes resonance in the system.
- Chokes or active absorption filters can attenuate harmonics as well as resistive loads operated in parallel.
- Capacitive loads operated in parallel create an additional load due to unpredictable resonance effects.

A more precise analysis is possible using line power analysis software, such as HCS. For analyzing line power systems, go to <http://www.danfoss-hcs.com/Default.asp?LEVEL=START> for software download.

When operating with harmonic-inducing devices, the maximum loads based on trouble-free facility operation are shown in the harmonic limits table.

Harmonic limits

- B2 and B6 rectifiers⇒maximum 20% of rated generator load.
- B6 rectifier with choke⇒maximum 20–35% of rated generator load, depending on the composition.
- Controlled B6 rectifier⇒maximum 10% of rated generator load.

3

3.4 Motor Integration

3.4.1 Motor Selection Considerations

The adjustable frequency drive can induce electrical stress on a motor. Consider, therefore, the following effects on the motor when matching motor with adjustable frequency drive:

- Insulation stress
- Bearing stress
- Thermal stress

3.4.2 Sine-wave and dU/dt Filters

Output filters provide benefits to some motors to reduce electrical stress and allow for longer cable length. Output options include sine-wave filters (also called LC filters) and dU/dt filters. The dU/dt filters reduce the sharp rise rate of the pulse. Sine-wave filters smooth the voltage pulses to convert them into a nearly sinusoidal output voltage. With some adjustable frequency drives, sine-wave filters comply with EN 61800-3 RFI category C2 for non-shielded motor cables, see *chapter 3.7.5 Sine-wave Filters*.

For more information on sine-wave and dU/dt filter options, refer to *chapter 3.7.5 Sine-wave Filters* and *chapter 3.7.6 dU/dt Filters*.

For more information on sine-wave and dU/dt filter ordering numbers, refer to and *chapter 6.2.9 dU/dt Filters*.

3.4.3 Proper Motor Grounding

Proper grounding of the motor is imperative for personal safety and to meet EMC electrical requirements for low voltage equipment. Proper grounding is necessary for the effective use of shielding and filters. Design details must be verified for proper EMC implementation.

3.4.4 Motor Cables

Motor cable recommendations and specifications are provided in *chapter 7.5 Cable Specifications*.

All types of three-phase asynchronous standard motors can be used with an adjustable frequency drive unit. The factory setting is for clockwise rotation with the adjustable frequency drive output connected as follows:

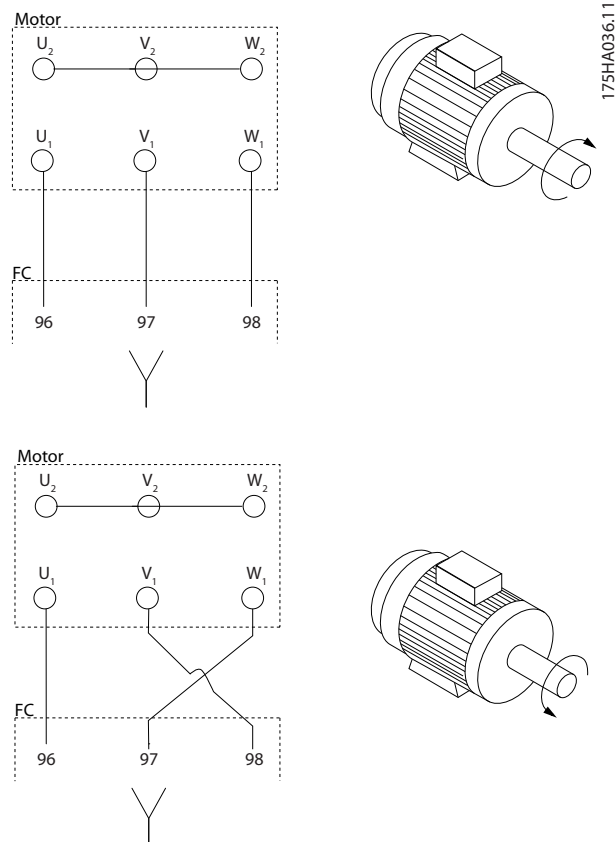


Figure 3.10 Terminal Connection for Clockwise and Counter-clockwise Rotation

Change the direction of rotation by switching two phases in the motor cable or by changing the setting of 4-10 Motor Speed Direction.

3.4.5 Motor Cable Shielding

Adjustable frequency drives generate steep-edged pulses on their outputs. These pulses contain high-frequency components (extending into the gigahertz range), which cause undesirable radiation from the motor cable. Shielded motor cables reduce this radiation.

The purposes of shielding are to:

- Reduce the magnitude of radiated interference.
- Improve the interference immunity of individual devices.

The shield captures the high-frequency components and conducts them back to the interference source, in this case the adjustable frequency drive. Shielded motor cables also provide immunity to interference from nearby external sources.

Even good shielding does not fully eliminate the radiation. System components located in radiation environments must operate without degradation.

3.4.6 Connection of Multiple Motors

NOTICE!

Problems may arise at start and at low RPM values if motor sizes are widely different because small motors' relatively high ohmic resistance in the stator calls for a higher voltage at start and at low RPM values.

The adjustable frequency drive can control several motors connected in parallel. When using parallel motor connection, observe the following:

- VCC+ mode may be used in some applications.
- The total current consumption of the motors must not exceed the rated output current I_{INV} for the adjustable frequency drive.
- Do not use common joint connection for long cable lengths, see Figure 3.12.
- The total motor cable length specified in Table 3.4, is valid as long as the parallel cables are kept short (less than 10 m (33 ft) each), see Figure 3.14 and Figure 3.15.
- Consider voltage drop across the motor cable, see Figure 3.15.
- For long parallel cables, use an LC filter, see Figure 3.15.
- For long cables without parallel connection, see Figure 3.16.

NOTICE!

When motors are connected in parallel, set 1-01 Motor Control Principle to [0] U/f.

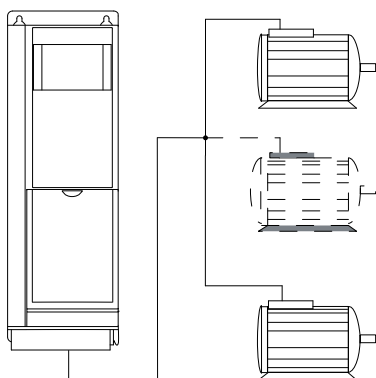


Figure 3.11 Common Joint Connection for Short Cable Lengths

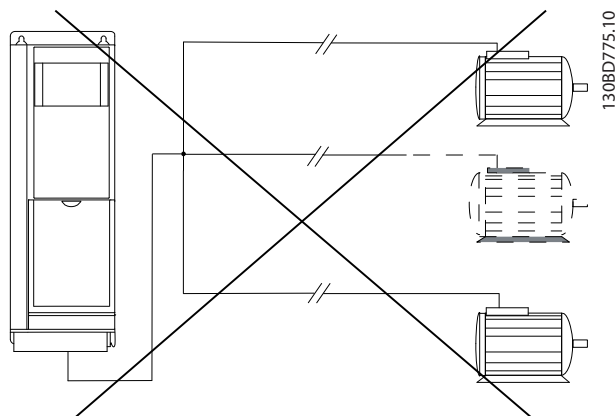


Figure 3.12 Common Joint Connection for Long Cable Lengths

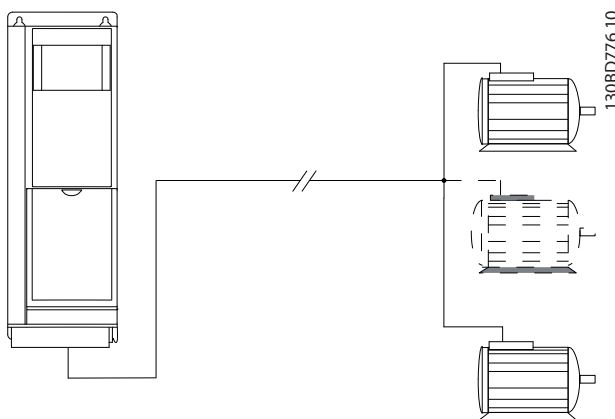


Figure 3.13 Parallel Cables without Load

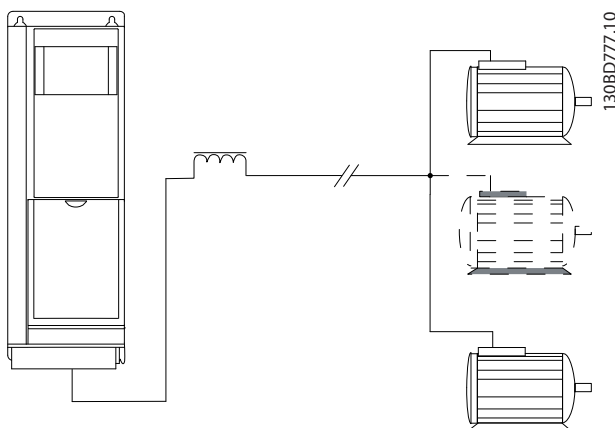


Figure 3.14 Parallel Cables with Load

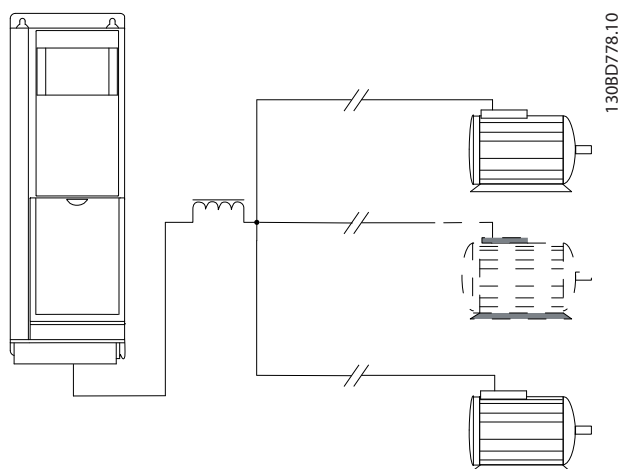


Figure 3.15 LC Filter for Long Parallel Cables

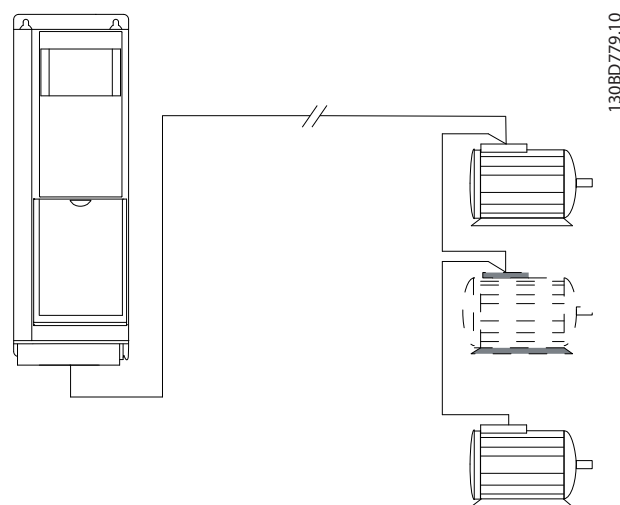


Figure 3.16 Long Cables in Series Connection

Enclosure sizes	Power Size [kW (hp)]	Voltage [V]	1 cable [m (ft)]	2 cables [m (ft)]	3 cables [m (ft)]	4 cables [m (ft)]
A1, A2, A4, A5	0.37–0.75 (0.5–1)	400	150 (500)	45 (148)	8 (26.3)	6 (20)
		500	150 (500)	7 (23)	4 (13)	3 (10)
A2, A4, A5	1.1–1.5 (1.5–2)	400	150 (500)	45 (148)	20 (66)	8 (26.3)
		500	150 (500)	45 (148)	5 (16.4)	4 (13)
A2, A4, A5	2.2–4 (3–5)	400	150 (500)	45 (148)	20 (66)	11 (36)
		500	150 (500)	45 (148)	20 (66)	6 (20)
A3, A4, A5	5.5–7.5 (7.5–10)	400	150 (500)	45 (148)	20 (66)	11 (36)
		500	150 (500)	45 (148)	20 (66)	11 (36)
B1, B2, B3, B4, C1, C2, C3, C4	11–90 (15–125)	400	150 (500)	75 (250)	50 (164)	37 (123)
		500	150 (500)	75 (250)	50 (164)	37 (123)
A3	1.1–7.5 (1.5–10)	525–690	100 (330)	50 (164)	33 (108.3)	25 (82)
B4	11–30 (15–40)	525–690	150 (500)	75 (250)	50 (164)	37 (123)
C3	37–45 (50–60)	525–690	150 (500)	75 (250)	50 (164)	37 (123)

Table 3.17 Maximum Cable Length for Each Parallel Cable

3.4.7 Control Wire Isolation

Harmonic interference generated by motor cabling can degrade control signals in the drive control wiring and result in control faults. Motor cables and control wiring should be separate. Interference effects decrease significantly with separation.

- The distance between control wiring and motor cables should be more than 200 mm (11.8 in).
- Divider strips are essential with smaller separations or interference may be coupled in or transferred.
- Control cable shields must be connected at both ends in the same way as motor cable shields.

- Shielded cables with twisted conductors provide highest attenuation. The attenuation of the magnetic field increases from around 30 dB with a single shield to 60 dB with a double shield and to approximately 75 dB if the conductors are also twisted.

3.4.8 Motor Thermal Protection

The adjustable frequency drive provides motor thermal protection in several ways:

- Torque limit protects the motor from overload independent of the speed.
- Minimum speed limits the minimum operating speed range, for instance between 30 and 50/60 Hz.
- Maximum speed limits the maximum output speed.
- Input is available for an external thermistor.
- Electronic thermal relay (ETR) for asynchronous motors simulates a bi-metal relay based on internal measurements. The ETR measures actual current, speed and time to calculate motor temperature and protect the motor from being overheated by issuing a warning or cutting power to the motor. The characteristics of the ETR are shown in *Figure 3.17*.

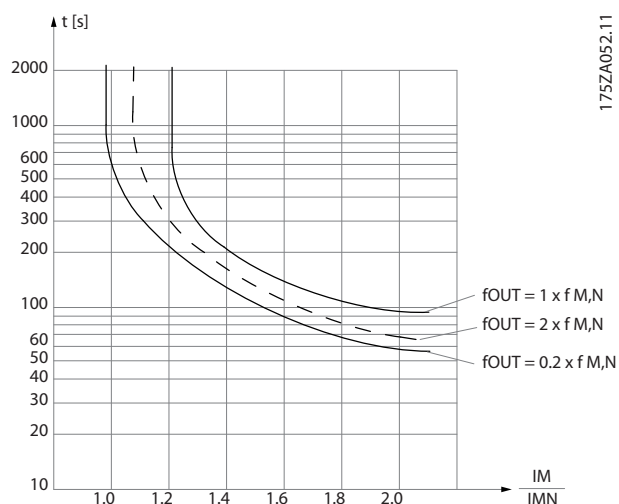


Figure 3.17 Electronic Thermal Relay Characteristics

The X-axis shows the ratio between I_{motor} and I_{motor} nominal. The Y-axis shows the time in seconds before the ETR cut-off and trip. The curves show the characteristic nominal speed, at twice the nominal speed and at 0.2 x the nominal speed.

At lower speed, the ETR cuts off at lower heat due to less cooling of the motor. In that way, the motor is protected from overheating even at low speed. The ETR feature calculates the motor temperature based on actual current and speed.

3.4.9 Output Contactor

Although not generally a recommended practice, operating an output contactor between the motor and the adjustable frequency drive does not cause damage to the adjustable frequency drive. Closing a previously opened output contactor may connect a running adjustable frequency drive to a stopped motor. This may cause the adjustable frequency drive to trip and display a fault.

3.4.10 Brake Functions

To brake the load on the motor shaft, use either a static (mechanical) or dynamic brake.

3.4.11 Dynamic Braking

Dynamic brake is established by the following:

- Resistor brake: A brake IGBT keeps the overvoltage below a prescribed threshold by directing brake energy from the motor to the brake resistor.
- AC brake: The brake energy is distributed in the motor by changing the loss conditions in the motor. The AC brake function cannot be used in applications with high cycling frequency since this will overheat the motor.
- DC brake: An over-modulated DC current added to the AC current works as an eddy-current brake.

3.4.12 Brake Resistor Calculation

A brake resistor is required to manage heat dissipation and DC link voltage increase during electrically-generated braking. Using a brake resistor ensures that the energy is absorbed in the brake resistor and not in the adjustable frequency drive. For more information, see the *Brake Resistor Design Guide*.

Duty cycle calculation

When the amount of kinetic energy transferred to the resistor in each braking period is unknown, calculate the average power on the basis of the cycle time and braking time (known as the intermittent duty cycle). The resistor intermittent duty cycle is an indication of the cycle when the resistor is active (see *Figure 3.18*). Motor suppliers often use S5 when stating the permissible load, which is an expression of intermittent duty cycle.

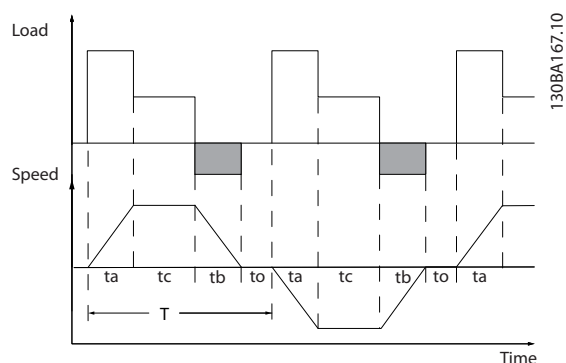


Figure 3.18 Brake Resistor Duty Cycle

Calculate the intermittent duty cycle for the resistor as follows:

$$\text{Duty cycle} = t_b / T$$

T = cycle time in seconds

t_b is the braking time in seconds (of the cycle time)

Danfoss offers brake resistors with duty cycles of 5%, 10%, and 40%. When a 10% duty cycle is applied, the brake resistors absorb braking energy for 10% of the cycle time. The remaining 90% of the cycle time is used to dissipate excess heat.

Ensure the brake resistor is dimensioned for the required braking time.

Brake resistance calculation

To prevent the adjustable frequency drive from cutting out for protection when the motor brakes, select resistor values on the basis of the peak braking energy and the intermediate circuit voltage. Calculate resistance of the brake resistor as follows:

$$R_{br} = \frac{U_{dc}^2}{P_{peak}} [\Omega]$$

The brake resistor performance depends on the DC link voltage (U_{dc}).

U_{dc} is the voltage at which the brake is activated. The FC-series brake function is settled depending on the line power supply.

line power supply input [V AC]	Brake active [V DC]	High voltage warning [V DC]	Over voltage alarm [V DC]
FC 202 3x200-240	390	405	410
FC 202 3x380-480	778	810	820
FC 202 3x525-600 ¹⁾	943	965	975
FC 202 3x525-600 ²⁾	1099	1109	1130
FC 202 3x525-690	1099	1109	1130

 Table 3.18 DC link Voltage (U_{dc})

1) Enclosure sizes A, B, C

2) Enclosure sizes D, E, F

Use the brake resistance R_{rec} , to ensure that the adjustable frequency drive is able to brake at the highest braking torque ($M_{br(\%)}$) of 160%. The formula can be written as:

$$R_{rec} [\Omega] = \frac{U_{dc}^2 \times 100}{P_{motor} \times M_{br(\%)} \times \eta_{VLT} \times \eta_{motor}}$$

η_{motor} is typically at 0.90

η_{VLT} is typically at 0.98.

When a higher brake resistor resistance is selected, 160%/150%/110% braking torque cannot be obtained, and there is a risk that the adjustable frequency drive cuts out of DC Link overvoltage for protection.

For braking at lower torque, for example 80% torque, it is possible to install a brake resistor with lower power rating. Calculate size using the formula for calculating R_{rec} .

Adjustable frequency drive D and F enclosure sizes contain more than one brake chopper. Use a brake resistor for each chopper for those enclosure sizes.

The *VLT® Brake Resistor MCE 101 Design Guide* contains the most up-to-date selection data, and describes the calculation steps in more detail, including:

- Calculation of braking energy
- Calculation of brake resistor peak power
- Calculation of brake resistor average power
- Braking of inertia

3.4.13 Brake Resistor Cabling

EMC (twisted cables/shielding)

To meet the specified EMC performance of the adjustable frequency drive, use shielded cables/wires. If non-shielded wires are used, it is recommended to twist the wires to reduce the electrical noise from the wires between the brake resistor and the adjustable frequency drive.

For enhanced EMC performance, use a metal shield.

3.4.14 Brake Resistor and Brake IGBT

Brake resistor power monitor

In addition, the braking energy monitor function makes it possible to read out the momentary power and the mean power for a selected time period. The brake can also monitor the power energizing and make sure it does not exceed a limit selected in *2-12 Brake Power Limit (kW)*. In *2-13 Brake Power Monitoring*, select the function to carry out when the power transmitted to the brake resistor exceeds the limit set in *2-12 Brake Power Limit (kW)*.

NOTICE!

Monitoring the braking energy does not fulfill a safety function. The brake resistor circuit is not ground leakage protected.

The brake is protected against short-circuiting of the brake resistor, and the brake transistor is monitored to ensure that short-circuiting of the transistor is detected. Use a relay or digital output to protect the brake resistor against overloading in the event of a fault in the adjustable frequency drive.

Overvoltage control (OVC) can be selected as an alternative brake function in *2-17 Over-voltage Control*. If the DC link voltage increases, this function is active for all units. The function ensures that a trip can be avoided. This is done by increasing the output frequency to limit the voltage from the DC link. It is a useful function, e.g., if the ramp-down time is too short since tripping of the adjustable frequency drive is avoided. In this situation, the ramp-down time is extended.

3.4.15 Energy Efficiency

Efficiency of the adjustable frequency drive

The load on the adjustable frequency drive has little effect on its efficiency.

This also means that the adjustable frequency drive efficiency does not change when other U/f characteristics are selected. However, the U/f characteristics do influence the efficiency of the motor.

The efficiency declines a little when the switching frequency is set to a value above 5 kHz. The efficiency is also slightly reduced when the motor cable is longer than 30 m (100 ft).

Efficiency calculation

Calculate the efficiency of the adjustable frequency drive at different loads based on *Figure 3.19*. Multiply the factor in this graph with the specific efficiency factor listed in *chapter 7.1 Electrical Data*.

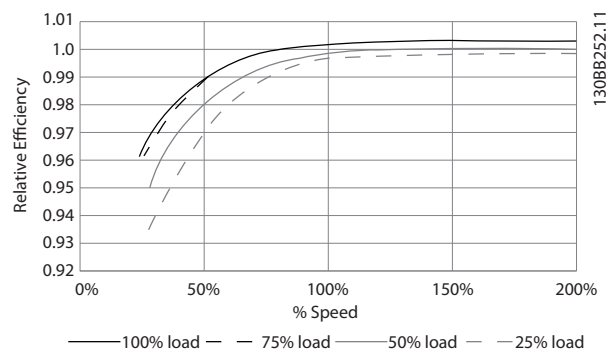


Figure 3.19 Typical Efficiency Curves

Example: Assume a 55 kW (75 hp), 380–480 V AC adjustable frequency drive with 25% load at 50% speed. The graph is showing 0.97 rated efficiency for a 55 kW (75 hp) adjustable frequency drive is 0.98. The actual efficiency is then: $0.97 \times 0.98 = 0.95$.

Motor efficiency

The efficiency of a motor connected to the adjustable frequency drive depends on magnetizing level. The efficiency of the motor depends on the type of motor.

- In the range of 75–100% of the rated torque, the efficiency of the motor is practically constant, both when it is controlled by the adjustable frequency drive, and when it runs directly on line power.
- The influence from the U/f characteristic on small motors is marginal. However, in motors from 11 kW (15 hp) and up, the efficiency advantage is significant.
- The switching frequency does not affect the efficiency of small motors. Motors from 11 kW (15 hp) and up have their efficiency improved 1–2%. This is because the sine-shape of the motor current is almost perfect at high switching frequency.

System efficiency

To calculate the system efficiency, multiply the efficiency of the adjustable frequency drive by the efficiency of the motor.

3.5 Additional Inputs and Outputs

3.5.1 Wiring Schematic

3

When wired and properly programmed, the control terminals provide:

- Feedback, reference, and other input signals to the adjustable frequency drive.
- Output status and fault conditions from the adjustable frequency drive.
- Relays to operate auxiliary equipment.
- A serial communication interface.
- 24 V common.

Control terminals are programmable for various functions by selecting parameter options through the local control panel (LCP) on the front of the unit or external sources. Most control wiring is customer-supplied, unless specified in the factory order.

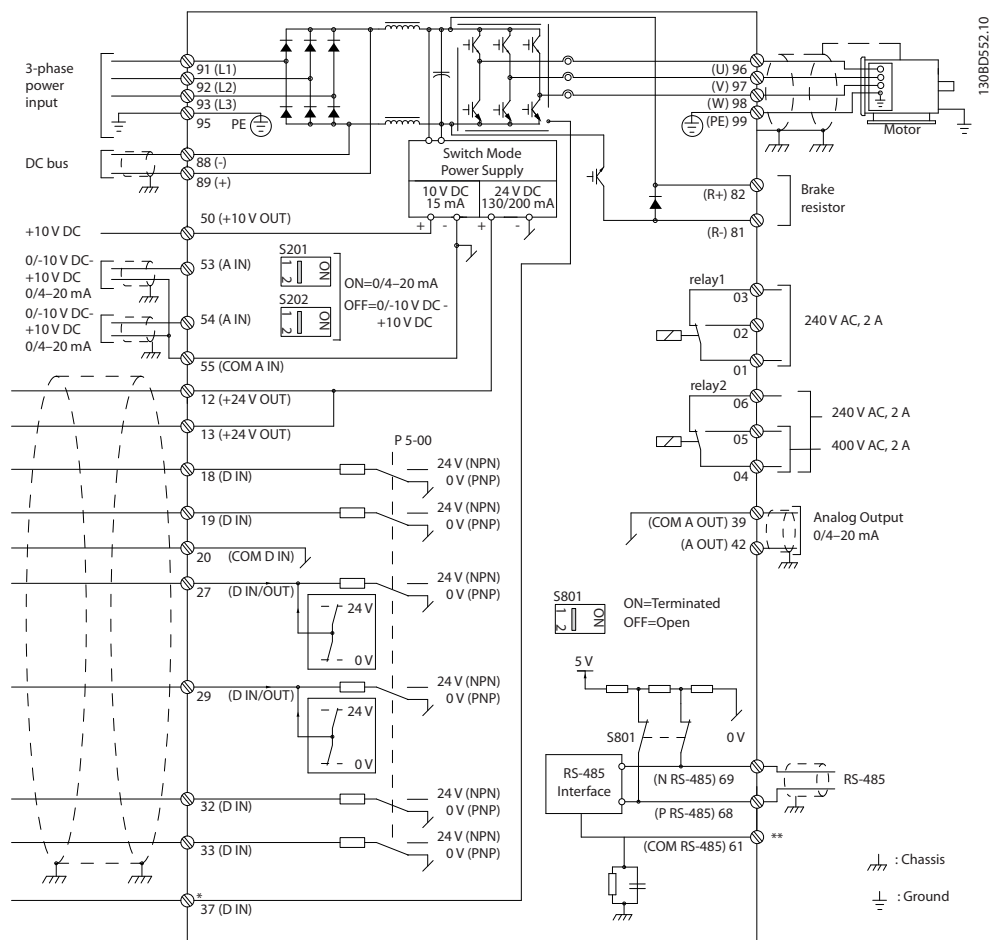



Figure 3.20 Basic Wiring Schematic

A=Analog, D=Digital

*Terminal 37 (optional) is used for STO. For STO installation instructions, refer to the VLT® Safe Torque Off Instruction Manual.

**Do not connect cable shield.

3.5.2 Relay Connections

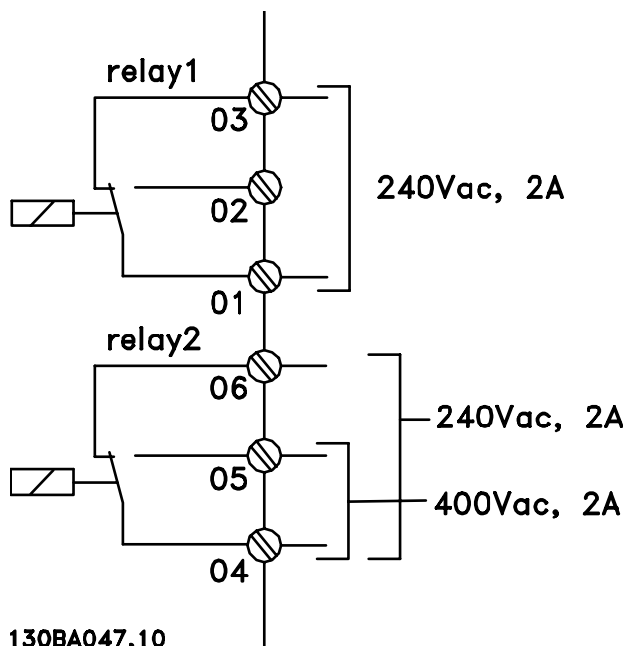

Relay	Terminal ¹⁾	Description
1	1	common
	2	normally open maximum 240 V
	3	normally closed maximum 240 V
2	4	common
	5	normally closed maximum 240 V
	6	normally closed maximum 240 V
1	01-02	make (normally open)
	01-03	break (normally closed)
2	04-05	make (normally open)
	04-06	break (normally closed)

Figure 3.21 Relay Outputs 1 and 2, Maximum Voltages

1) To add more relay outputs, install VLT[®] Relay Option Module MCB 105 or VLT[®] Relay Option Module MCB 113.


For more information about relays, refer to chapter 7 Specifications and chapter 8.3 Relay Terminal Drawings.

For more information about relay options, refer to chapter 3.7 Options and Accessories.

3.5.3 EMC-compliant Electrical Connection

3

1308D529;12

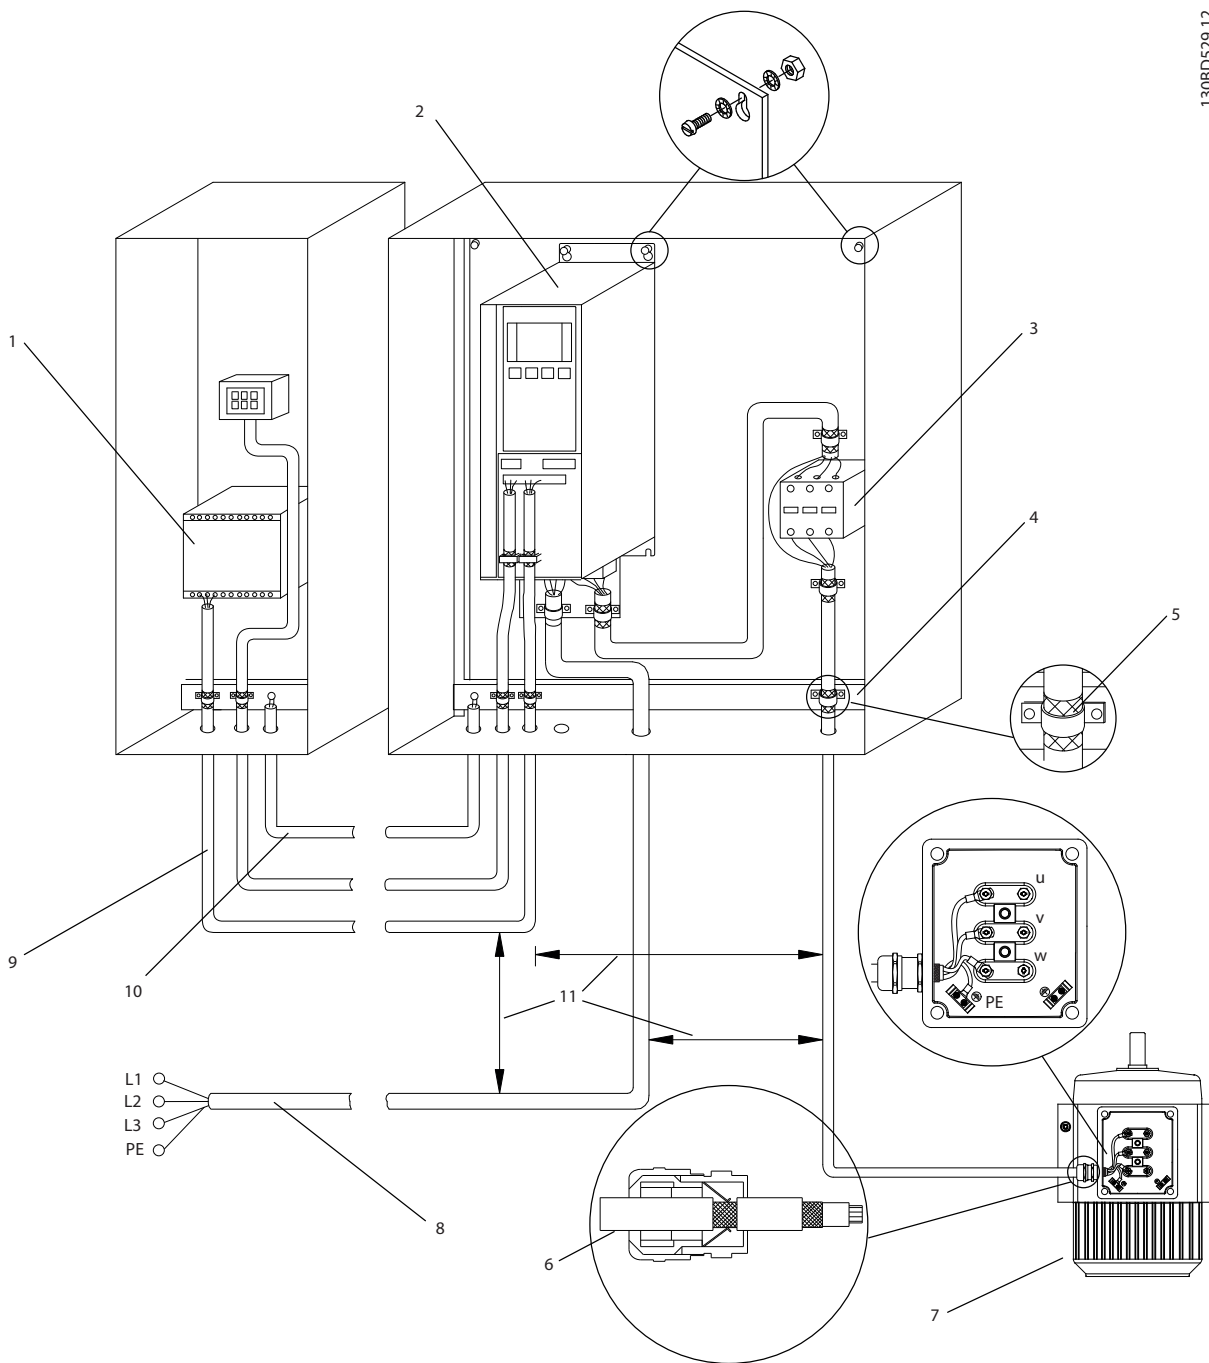

1	PLC	7	Motor, 3--phase and PE (shielded)
2	Adjustable frequency drive	8	Line power, 3--phase and reinforced PE (non-shielded)
3	Output contactor	9	Control wiring (shielded)
4	Cable clamp	10	Potential equalization min. 16 mm ² (0.025 in ² /AWG 6)
5	Cable insulation (stripped)	11	Clearance between control cable, motor cable and line cable: Minimum 200 mm (7.9 in)
6	Cable connector		

Figure 3.22 EMC-compliant Electrical Connection

For more information about EMC, see *chapter 2.5.18 EMC Compliance* and *chapter 3.2 EMC, Harmonics and Ground Leakage Protection*.

NOTICE!

EMC INTERFERENCE

Run cables for input power, motor wiring and control wiring in three separate metallic conduits. Failure to isolate power, motor, and control cables can result in unintended behavior or reduced performance. Minimum 200 mm (7.9 in) clearance between power, motor, and control cables is required.

3.6 Mechanical Planning

3.6.1 Clearance

Side-by-side installation is suitable for all enclosure sizes, except when an IP21/IP4X/TYPE 1 enclosure kit is used (see *chapter 3.7 Options and Accessories*).

Horizontal clearance, IP20

IP20 A and B enclosure sizes can be arranged side-by-side with no clearance. However, the correct mounting order is important. *Figure 3.23* shows how to mount correctly.

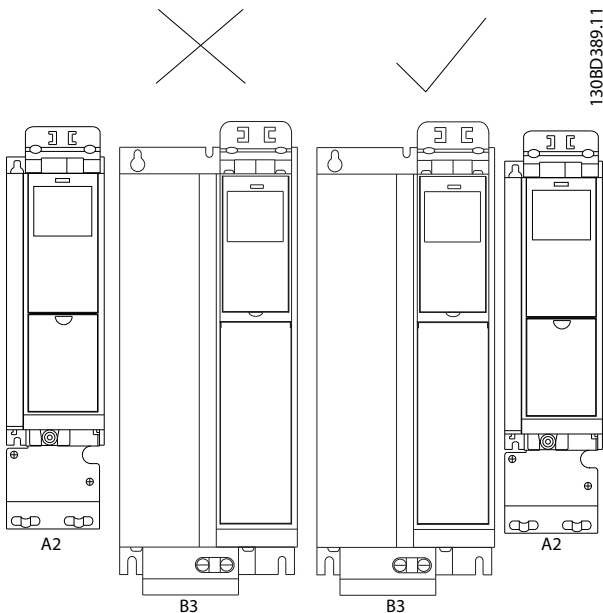



Figure 3.23 Correct Side-by-side Mounting with no Clearance

Horizontal clearance, IP21 enclosure kit

When the IP21 enclosure kit is used on enclosure sizes A1, A2 or A3, ensure a clearance between the adjustable frequency drives of minimum 50 mm (2 in).

Vertical clearance

For optimal cooling conditions, ensure vertical clearance for free air passage above and below the adjustable frequency drive. See *Figure 3.24*.

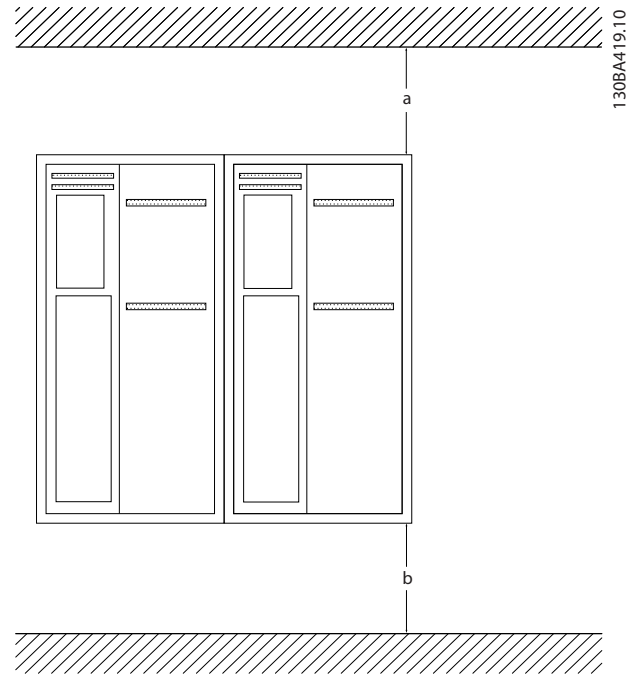


Enclosure size	A1*/A2/A3/A4/ A5/B1	B2/B3/B4/ C1/C3	C2/C4
a [mm (in)]	100 (3.94)	200 (7.87)	225 (8.86)
b [mm (in)]	100 (3.94)	200 (7.87)	225 (8.86)

Figure 3.24 Vertical Clearance

3.6.2 Wall Mounting

When mounting on a flat wall, no backplate is required.


When mounting on an uneven wall, use a backplate to ensure sufficient cooling air over the heatsink. Use the backplate with enclosures A4, A5, B1, B2, C1 and C2 only.

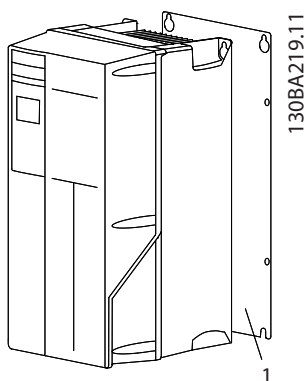

1	Backplate
---	-----------

Figure 3.25 Mounting with Backplate

For adjustable frequency drives with protection rating IP66, use a fibre or nylon washer to protect the epoxy coating.

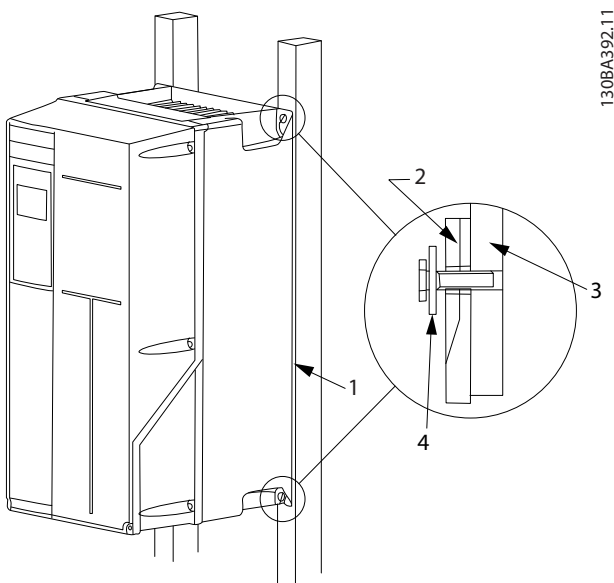

1	Backplate
2	Adjustable frequency drive with IP66 enclosure
3	Backplate
4	Fiber washer

Figure 3.26 Mounting with Backplate for Protection Rating IP66

3.6.3 Access

To plan accessibility for cabling before mounting, refer to the drawings in *chapter 8.1 AC Line Input Connection Drawings (3-phases)* and *chapter 8.2 Motor Connection Drawings*.

3.7 Options and Accessories

Options

For ordering numbers, see *chapter 6 Type code and Selection*

Line power shielding

- Lexan® shielding mounted in front of incoming power terminals and input plate to protect from accidental contact when the enclosure door is open.
- Space heaters and thermostat: Mounted on the cabinet interior of F frames, space heaters controlled via automatic thermostat prevents condensation inside the enclosure. The thermostat default settings turn on the heaters at 10 °C (50 °F) and turn them off at 15.6 °C (60 °F).

RFI filters

- Adjustable frequency drive feature integrated Class A2 RFI filters as standard. If additional levels of RFI/EMC protection are required, they can be obtained using optional Class A1 RFI filters, which provide suppression of radio frequency interference and electromagnetic radiation in accordance with EN 55011.

Residual current device (RCD)

Uses the core balance method to monitor ground fault currents in grounded and high-resistance grounded systems (TN and TT systems in IEC terminology). There is a pre-warning (50% of main alarm setpoint) and a main alarm setpoint. Associated with each setpoint is an SPDT alarm relay for external use, which requires an external *window-type* current transformer (supplied and installed by the customer).

- Integrated into the adjustable frequency drive's safe torque off circuit
- IEC 60755 Type B device monitors, pulsed DC, and pure DC ground fault currents
- LED bar graph indicator of the ground fault current level from 10–100% of the setpoint
- Fault memory
- TEST/RESET key

Insulation resistance monitor (IRM)

Monitors the insulation resistance in ungrounded systems (IT systems in IEC terminology) between the system phase conductors and ground. There is an ohmic pre-warning and a main alarm setpoint for the insulation level.

Associated with each setpoint is an SPDT alarm relay for external use. Note: Only one insulation resistance monitor can be connected to each ungrounded (IT) system.

- Integrated into the adjustable frequency drive's safe-stop circuit
- LCD display of insulation resistance
- Fault memory
- INFO, TEST, and RESET keys

Brake chopper (IGBTs)

- Brake terminals with an IGBT brake chopper circuit allow for the connection of external brake resistors. For more information on brake resistors, refer to *chapter 3.4.12 Brake Resistor Calculation* and .

Regeneration terminals

- These terminals allow connection of regeneration units to the DC bus on the capacitor bank side of the DC link reactors for regenerative braking. The F-frame regeneration terminals are sized for approximately ½ the power rating of the adjustable frequency drive. Consult the factory for regeneration power limits based on the specific adjustable frequency drive size and voltage

Load sharing terminals

- These terminals connect to the DC bus on the rectifier side of the DC link reactor and allow for the sharing of DC bus power among multiple drives. The F-frame load sharing terminals are sized for approximately 1/3 the power rating of the adjustable frequency drive. Consult the factory for load sharing limits based on the specific adjustable frequency drive size and voltage.

Fuses

- Fuses are recommended for fast-acting current overload protection of the adjustable frequency drive. Fuse protection limits adjustable frequency drive damage and minimizes service time in the event of a failure. Fuses are required to meet marine certification.

Disconnect

- A door-mounted handle allows for the manual operation of a power disconnect switch to enable and disable power to the adjustable frequency drive, increasing safety during servicing. The disconnect is interlocked with the enclosure

doors to prevent them from being opened while power is still applied.

Circuit breakers

- A circuit breaker can be remotely tripped but must be manually reset. Circuit breakers are interlocked with the enclosure doors to prevent them from being opened while power is still applied. When a circuit breaker is ordered as an option, fuses are also included for fast-acting current overload protection of the adjustable frequency drive.

Contactors

- An electrically controlled contactor switch allows for the remote enabling and disabling of power to the adjustable frequency drive. If the IEC emergency stop option is ordered, the Pilz Safety monitors an auxiliary contact on the contactor.

Manual motor starters

Provide 3-phase power for electric cooling blowers often required for larger motors. Power for the starters is provided from the load side of any supplied contactor, circuit breaker, or disconnect switch and from the input side of the Class 1 RFI filter (optional). Power is fused before each motor starter, and is off when the incoming power to the adjustable frequency drive is off. Up to two starters are allowed (one if a 30-amp, fuse-protected circuit is ordered). Integrated into the adjustable frequency drive's safe torque off circuit.

Unit features include:

- Operation switch (on/off).
- Short-circuit and overload protection with test function.
- Manual reset function.

30 Amp, fuse-protected terminals

- 3-phase power matching incoming AC line voltage for powering auxiliary customer equipment.
- Not available if two manual motor starters are selected.
- Terminals are off when the incoming power to the adjustable frequency drive is off.
- Power for the fused-protected terminals is provided from the load side of any supplied contactor, circuit breaker, or disconnect switch and from the input side of the Class 1 RFI filter (optional).

24 V DC power supply

- 5 Amp, 120 W, 24 V DC.
- Protected against output overcurrent, overload, short circuits, and overtemperature.

- For powering customer-supplied accessory devices such as sensors, PLC I/O, contactors, temperature probes, indicator lights, and/or other electronic hardware.
- Diagnostics include a dry DC-ok contact, a green DC-ok LED, and a red overload LED.

External temperature monitoring

- Designed for monitoring temperatures of external system components, such as the motor windings and/or bearings. Includes eight universal input modules plus two dedicated thermistor input modules. All 10 modules are integrated into the adjustable frequency drive's safe torque off circuit and can be monitored via a serial communication bus network (requires the purchase of a separate module/bus coupler). Order a safe torque off brake option to select external temperature monitoring.

Serial communications

PROFIBUS DP V1 MCA 101

- PROFIBUS DP V1 gives wide compatibility, a high level of availability, support for all major PLC vendors, and compatibility with future versions.
- Fast, efficient communication, transparent installation, advanced diagnosis and parameterization and auto-configuration of process data via GSD-file.
- A-cyclic parameterization using PROFIBUS DP V1, PROFIdrive or Danfoss FC profile state machines, PROFIBUS DP V1, Master Class 1 and 2 Ordering number 130B1100 uncoated – 130B1200 coated (Class G3/ISA S71.04-1985).

DeviceNet MCA 104

- This modern communications model offers key capabilities that allow operators effectively determine what information is needed and when.
- It benefits from ODVA's strong conformance testing policies, which ensure that products are interoperable. Ordering number 130B1102 uncoated 130B1202 coated (Class G3/ISA S71.04-1985).

PROFINET RT MCA 120

The PROFINET option offers connectivity to PROFINET-based networks via the PROFINET protocol. The option is able to handle a single connection with an actual packet interval down to 1 ms in both directions.

- Built-in web server for remote diagnosis and reading out of basic adjustable frequency drive parameters.
- An e-mail notification can be configured for sending an e-mail message to one or several

receivers, if certain warnings or alarms occur, or have cleared again.

- TCP/IP for easy access to adjustable frequency drive configuration data from MCT 10 Set-up Software.
- FTP (File Transfer Protocol) file uploaded and download.
- Support of DCP (discovery and configuration protocol).

EtherNet IP MCA 121

EtherNet becomes the future standard for communication on the factory floor. The EtherNet option is based on the newest technology available for the Industrial use and handles even the most demanding requirements. EtherNet/IP extends commercial off the-shelf EtherNet to the common industrial protocol (CIP™) the same upper-layer protocol and object model found in DeviceNet. The MCA 121 offers advanced features as:

- Built-in high performance switch enabling line-topology, and eliminating the need for external switches.
- Advanced switch and diagnosis functions.
- A built-in web server.
- An e-mail client for service notification.

Modbus TCP MCA 122

The Modbus option offers connectivity to Modbus TCP-based networks, such as Groupe Schneider PLC system via the Modbus TCP Protocol. The option is able to handle a single connection with an actual packet interval down to 5 ms in both directions.

- Built-in web-server for remote diagnosis and reading out basic adjustable frequency drive parameters.
- An e-mail notification can be configured for sending an e-mail message to one or several receivers, if certain warnings or alarms occur, or have cleared again.
- 2 Ethernet ports with built-in switch.
- FTP (file transfer protocol) file uploaded and download.
- Protocol automatic IP address configuration.

More Options

General purpose I/O MCB 101

The I/O option offers an extended number of control inputs and outputs.

- 3 digital inputs 0–24 V: Logic 0<5 V; Logic 1>10 V
- 2 analog inputs 0–10 V: Resolution 10 bit plus sign

- 2 digital outputs NPN/PNP push pull
- 1 analog output 0/4–20 mA
- Spring-loaded connection
- Separate parameter settings Ordering number 130B1125 uncoated – 130B1212 coated (Class G3/ISA S71.04-1985)

Relay option MCB 105

Enables to extend relay functions with three additional relay outputs.

- Maximum terminal load: AC-1 resistive load: 240 V AC 2 A AC-15
- Inductive load @cos ϕ 0.4: 240 V AC 0.2 A DC-1
- Resistive load: 24 V DC 1 A DC-13
- Inductive load: @cos ϕ 0.4: 24 V DC 0.1 A
- Minimum terminal load: DC 5 V: 10 mA
- Maximum switch rate at rated load/min. load: 6 min-1/20 s-1
- Ordering number 130B1110 uncoated–130B1210 coated (Class G3/ISA S71.04-1985)

Analog I/O option MCB 109

This analog input/output option is easily fitted in the adjustable frequency drive for upgrading to advanced performance and control using the additional inputs/ outputs. This option also upgrades the adjustable frequency drive with a battery backup supply for the clock built into the adjustable frequency drive. This provides stable use of all adjustable frequency drive clock functions as timed actions.

- Three analog inputs, each configurable as both voltage and temperature input.
- Connection of 0–10 V analog signals as well as PT1000 and NI1000 temperature inputs.
- 3 analog outputs each configurable as 0–10 V outputs.
- Included backup supply for the standard clock function in the adjustable frequency drive. The backup battery typically lasts for 10 years, depending on environment. Ordering number 130B1143 uncoated – 130B1243 coated (Class G3/ISA S71.04-1985).

PTC thermistor card MCB 112

With the MCB 112 PTC thermistor card, all Danfoss adjustable frequency drives with STO can be used to supervise motors in potentially explosive atmospheres. MCB 112 offers superior performance compared to the built-in ETR function and thermistor terminal.

- Protects the motor from overheating.
- ATEX-approved for use with EX d and EX e motors.
- Uses the safe torque off function of Danfoss adjustable frequency drives to stop the motor in case of overtemperature.
- Certified for use to protect motors in zones 1, 2, 21, and 22.
- Certified up to SIL2.

Sensor input card MCB 114

The option protects the motor from being overheated by monitoring the bearings and windings temperature in the motor. The limits, as well as the action, are adjustable and the individual sensor temperature is visible as a read out in the display or by serial communication bus.

- Protects the motor from overheating.
- Three self-detecting sensor inputs for two or three wire PT100/PT1000 sensors.
- One additional analog input 4–20 mA.

Extended cascade controller MCO 101

Easily fitted and upgrades the built-in cascade controller to operate more pumps and more advanced pump control in master/slave mode.

- Up to six pumps in standard cascade set-up
- Up to six pumps in master/slave set-up
- Technical specification: See MCB 105 relay option

Extended relay card MCB 113

The extended relay card MCB 113 adds inputs/outputs to VLT® AQUA Drive for increased flexibility.

- 7 digital inputs: 0–24 V
- 2 analog outputs: 0/4–20 mA
- 4 SPDT relays
- Rating of load relays: 240 V AC/2 A (Ohm)
- Meets NAMUR recommendations
- Galvanic isolation capability Ordering number 130B1164 uncoated – 130B1264 coated (Class G3/ISA S71.04-1985)

MCO 102 advanced cascade controller

Extends the capabilities of the standard cascade controller built into adjustable frequency drives.

- Provides eight additional relays for staging of additional motors.
- Provides accurate flow, pressure, and level control for optimizing the efficiency of systems that use multiple pumps or blowers.

- Master/slave mode runs all blowers/pumps at the same speed, potentially reducing the energy consumption to less than half that of valve throttling or traditional, across-the-line on/off cycling.
- Lead-pump alternation assures that multiple pumps or blowers are used equally.

24 V DC supply option MCB 107

The option is used to connect an external DC supply to keep the control section and any installed option active when line power is down.

- Input voltage range: 24 V DC +/- 15% (max. 37 V in 10 s).
- Maximum input current: 2.2 A.
- Maximum cable length: 75 m (250).
- Input capacitance load: <10 uF.
- Power-up delay: <0.6 s.
- Easy to install in adjustable frequency drives in existing machines.
- Keeps the control board and options active during power cuts.
- Keeps serial communication busses active during power cuts Ordering number 130B1108 uncoated – 130B1208 coated (Class G3/ISA S71.04-1985).

3.7.1 Communication Options

- VLT® PROFIBUS DP V1 MCA 101
- VLT® DeviceNet MCA 104
- VLT® PROFINET MCA 120
- VLT® EtherNet/IP MCA 121
- VLT® Modbus TCP MCA 122

For further information, refer to *chapter 7 Specifications*.

3.7.2 Input/Output, Feedback and Safety Options

- VLT® General Purpose I/O Module MCB 101
- VLT® Relay Card MCB 105
- VLT® PTC Thermistor Card MCB 112
- VLT® Extended Relay Card MCB 113
- VLT® Sensor Input Option MCB 114

For further information, refer to *chapter 7 Specifications*.

3.7.3 Cascade Control Options

The cascade controller options extend the number of available relays. Once one of the options is installed, the parameters needed to support the cascade controller functions will be available through the control panel.

MCO 101 and 102 are add-on options extending the supported number of pumps and the functionalities of the built-in cascade controller in the VLT® AQUA Drive.

The following options for cascade control are available for the VLT® AQUA Drive:

- Built-in basic cascade controller (standard cascade controller)
- MCO 101 (extended cascade controller)
- MCO 102 (advanced cascade controller)

For further information, see *chapter 7 Specifications*.

The extended cascade controller can be used in two different modes:

- With the extended features controlled by parameter group 27-**. *Cascade CTL Option*.
- To extend the number of available relays for the basic cascade controlled by parameter group 25-**. *Cascade Controller*.

MCO 101 allows using a total of five relays for cascade control. MCO 102 allows controlling a total of eight pumps. The options are able to alternate the lead pump with two relays per pump.

NOTICE!

If the MCO 102 is installed, the relay option MCB 105 can extend the number of relays to 13.

Application

Cascade control is a common control system used to control parallel pumps or fans in an energy-efficient way.

The cascade controller option enables control of multiple pumps configured in parallel by:

- Automatically turning individual pumps on/off.
- Controlling the speed of the pumps.

When using cascade controllers, the individual pumps are automatically turned on (staged) and turned off (de-staged) as needed in order to satisfy the required system output for flow or pressure. The speed of pumps

connected to the VLT® AQUA Drive is also controlled to provide a continuous range of system output.

Designated use

The cascade controller options are designed for pump applications; however, it is also possible to use cascade controllers in any application requiring multiple motors configured in parallel.

Operating principle


The cascade controller software runs from a single adjustable frequency drive with the cascade controller option. It controls a set of pumps, each controlled by an adjustable frequency drive or connected to a contactor or a soft starter.

Additional adjustable frequency drives in the system (slave adjustable frequency drives) do not need any cascade controller option card. They are operated in open-loop mode and receive their speed reference from the master adjustable frequency drive. Pumps connected to slave adjustable frequency drives are referred to as variable-speed pumps.

Pumps connected to line power through a contactor or soft starter are referred to as fixed-speed pumps.


Each pump, variable-speed or fixed-speed, is controlled by a relay in the master adjustable frequency drive.

The cascade controller options can control a mix of variable-speed and fixed-speed pumps.

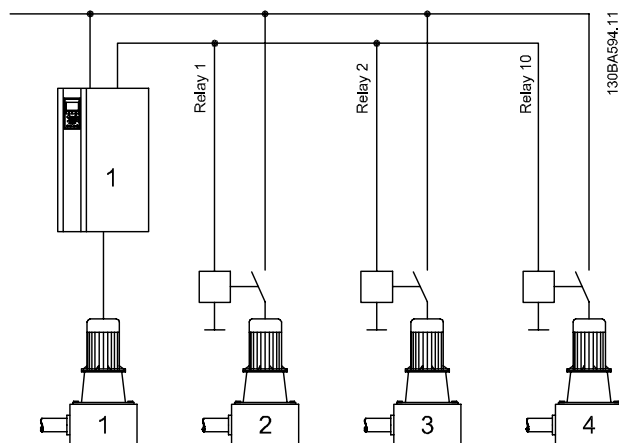


Built-in	1 VSP + 2 FSP parameter group 25-*** Cascade Controller
MCO 101	1 VSP + 5 FSP parameter group 25-*** Cascade Controller
MCO 102	1 VSP + 8 FSP parameter group 25-*** Cascade Controller

Figure 3.27 Application Overview

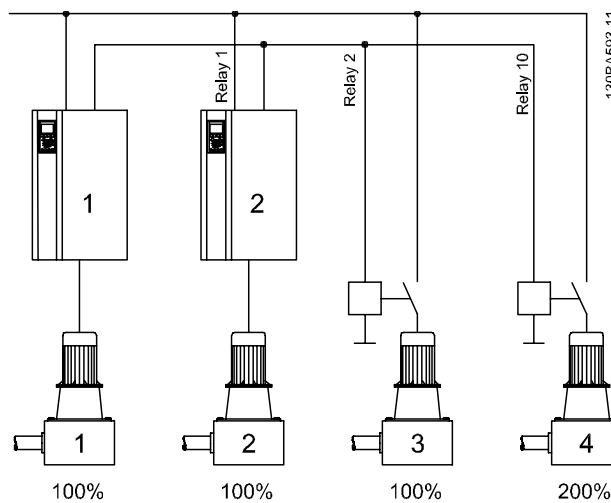

Built-in	-
MCO 101	1 to 6 VSP + 1 to 5 FSP (maximum 6 pumps) parameter group 27-*** Cascade CTL Option
MCO 102	1 to 8 VSP + 1 to 7 FSP (maximum 8 pumps) parameter group 27-*** Cascade CTL Option

Figure 3.28 Application Overview

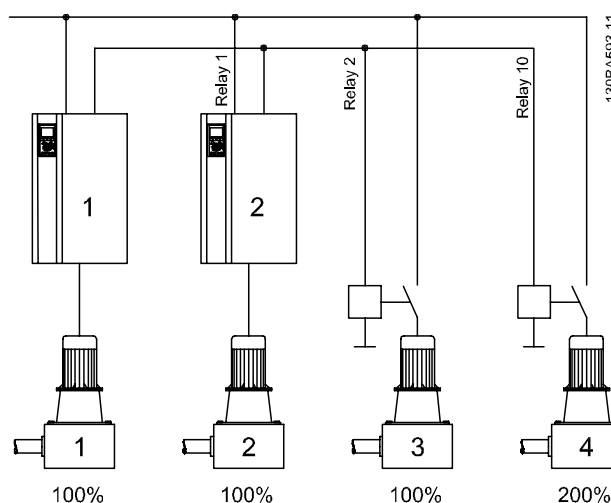

Built-in	-
MCO 101	6 VSP parameter group 27-*** Cascade CTL Option
MCO 102	8 VSP parameter group 27-*** Cascade CTL Option

Figure 3.29 Application Overview

VSP = Variable-speed pump (directly connected to the adjustable frequency drive)

FSP = Fixed-speed pump (the motor could be connected via contactor, soft starter or star/delta starter)

3.7.4 Brake Resistors

In applications where the motor is used as a brake, energy is generated in the motor and sent back into the adjustable frequency drive. If the energy cannot be transported back to the motor, it increases the voltage in the adjustable frequency drive DC line. In applications with frequent braking and/or high inertia loads, this increase may lead to an overvoltage trip in the adjustable frequency drive and, finally, a shutdown. Brake resistors are used to dissipate the excess energy resulting from the regenerative braking. The resistor is selected based on its ohmic value, its power dissipation rate and its physical size. Danfoss offers a wide variety of different resistors that are specially designed to Danfoss adjustable frequency drives. See *chapter 3.4.12 Brake Resistor Calculation* for dimensioning of brake resistors. For ordering numbers, refer to *chapter 6.2 Options, Accessories, and Spare Parts*.

3.7.5 Sine-wave Filters

When a motor is controlled by an adjustable frequency drive, resonance noise is heard from the motor. This noise, which is the result of the motor design, arises every time an inverter switch in the adjustable frequency drive is activated. The frequency of the resonance noise thus corresponds to the switching frequency of the adjustable frequency drive.

Danfoss supplies a sine-wave filter to dampen the acoustic motor noise.

The filter reduces the ramp-up time of the voltage, the peak load voltage U_{PEAK} and the ripple current ΔI to the motor, which means that current and voltage become almost sinusoidal. The acoustic motor noise is thus reduced to a minimum.

The ripple current in the sine-wave filter coils also causes some noise. Solve the problem by integrating the filter in a cabinet or similar.

3.7.6 dU/dt Filters

Danfoss supplies dU/dt filters which are differential-mode, low-pass filters that reduce motor terminal phase-to-phase peak voltages and reduce the rise time to a level that lowers the stress on the insulation at the motor windings. This is especially an issue with short motor cables.

Compared to sine-wave filters (see *chapter 3.7.5 Sine-wave Filters*), the dU/dt filters have a cut off frequency above the switching frequency.

3.7.7 Common-mode Filters

High-frequency common-mode cores (HF-CM cores) reduce electromagnetic interference and eliminate bearing damage by electrical discharge. They are special nanocrystalline magnetic cores, which have superior filtering performance compared to regular ferrite cores. The HF-CM core acts like a common-mode inductor between phases and ground.

Installed around the three motor phases (U, V, W), the common mode filters reduce high-frequency common-mode currents. As a result, high frequency electromagnetic interference from the motor cable is reduced.

The number of cores required is dependent on motor cable length and adjustable frequency drive voltage. Each kit consists of two cores. Refer to *Table 3.19* to determine the number of cores required.

Cable length ¹⁾	Enclosure size				
	A and B		C		D
	T2/T4	T7	T2/T4	T7	T7
50 (164)	2	4	2	2	4
100 (330)	4	4	2	4	4
150 (500)	4	6	4	4	4
300 (1000)	4	6	4	4	6

Table 3.19 Number of Cores

¹⁾ Where longer cables are required, stack additional HF-CM cores.

Install the HF-CM cores by passing the three motor phase cables (U, V, W) through each core, as shown in *Figure 3.30*.

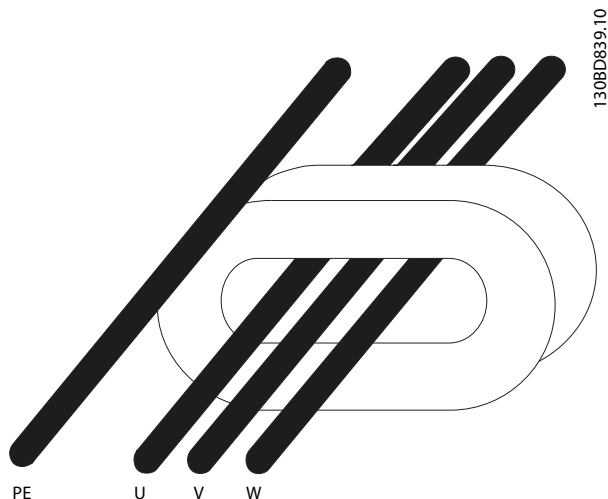


Figure 3.30 HF-CM Core with Motor Phases

3.7.8 Harmonic Filters

The Danfoss AHF 005 and AHF 010 are advanced harmonic filters, not to be compared with traditional harmonic trap filters. The Danfoss harmonic filters have been specially designed to match the Danfoss adjustable frequency drives.

By connecting the Danfoss harmonic filters AHF 005 or AHF 010 in front of a Danfoss adjustable frequency drive, the total harmonic current distortion generated back to line power is reduced to 5% and 10%.

3.7.9 IP21/NEMA Type 1 Enclosure Kit

IP20/IP4X top/NEMA TYPE 1 is an optional enclosure element available for IP20 compact units. If the enclosure kit is used, an IP20 unit is upgraded to comply with enclosure IP21/4X top/TYPE 1.

The IP4X top can be applied to all standard IP20 FC 202 variants.


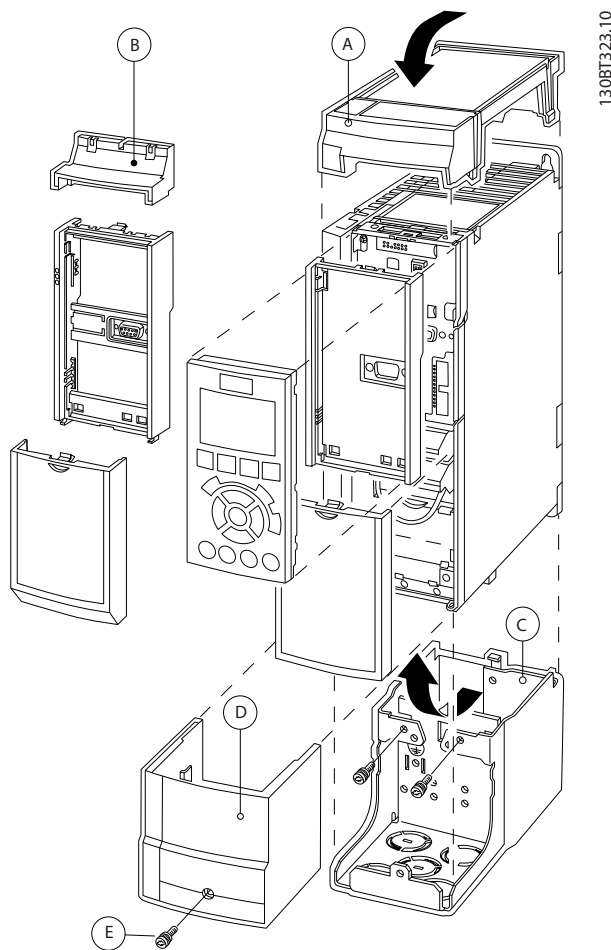


Figure 3.31 Enclosure Size A2

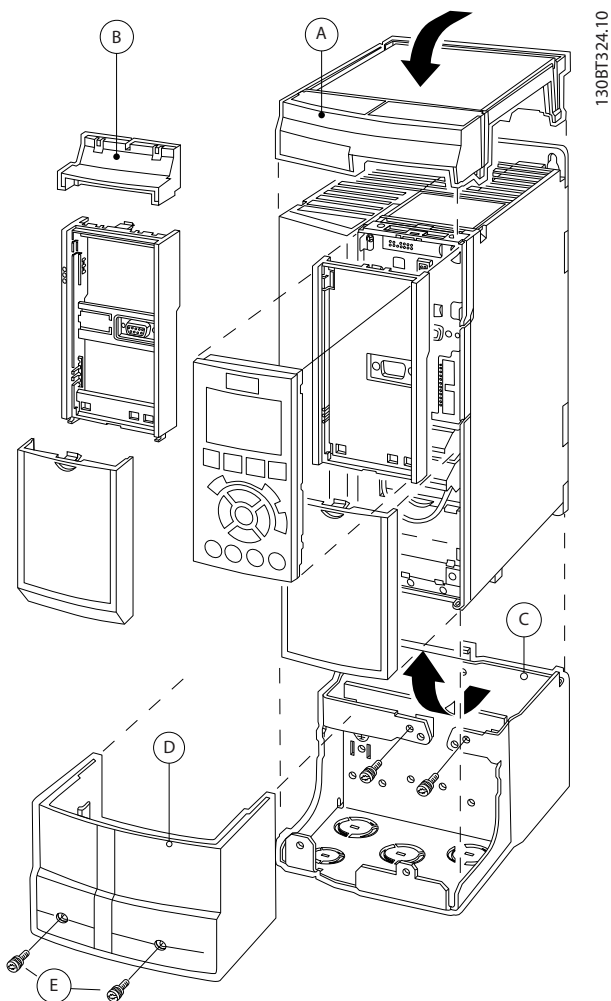

130BT324.10

A	Top cover
B	Brim
C	Base part
D	Base cover
E	Screw(s)

Figure 3.32 Enclosure Size A3

Place the top cover as shown. If an A or B option is used, the brim must be fitted to cover the top inlet. Place the base part C at the bottom of the adjustable frequency drive and use the clamps from the accessory bag to fasten the cables correctly.


Holes for cable connectors:

- Size A2: 2x M25 and 3xM32
- Size A3: 3xM25 and 3xM32

Enclosure type	Height A [mm (in)]	Width B [mm (in)]	Depth C ¹⁾ [mm (in)]
A2	372 (14.65)	90 (3.54)	205 (8.07)
A3	372 (14.65)	130 (5.12)	205 (8.07)
B3	475 (18.7)	165 (6.5)	249 (9.8)
B4	670 (26.38)	255 (10.04)	246 (9.69)
C3	755 (29.72)	329 (12.95)	337 (13.27)
C4	950 (37.4)	391 (15.39)	337 (13.27)

Table 3.20 Dimensions

1) If option A/B is used, the depth increases (see chapter 7.8 Power Ratings, Weight and Dimensions for details)

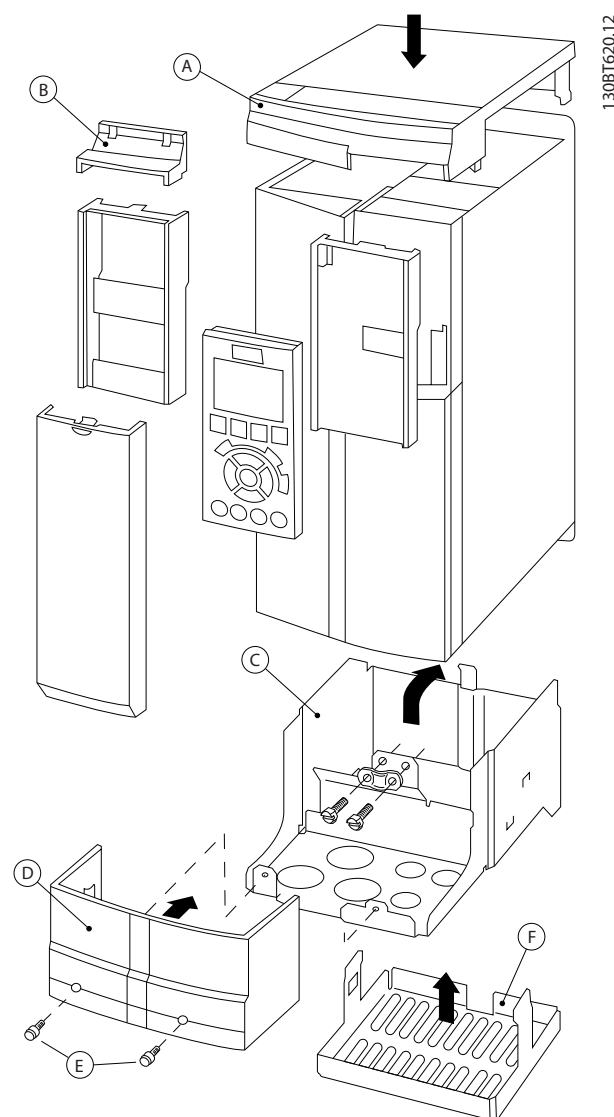

130BT620.12

Figure 3.33 Enclosure Size B3

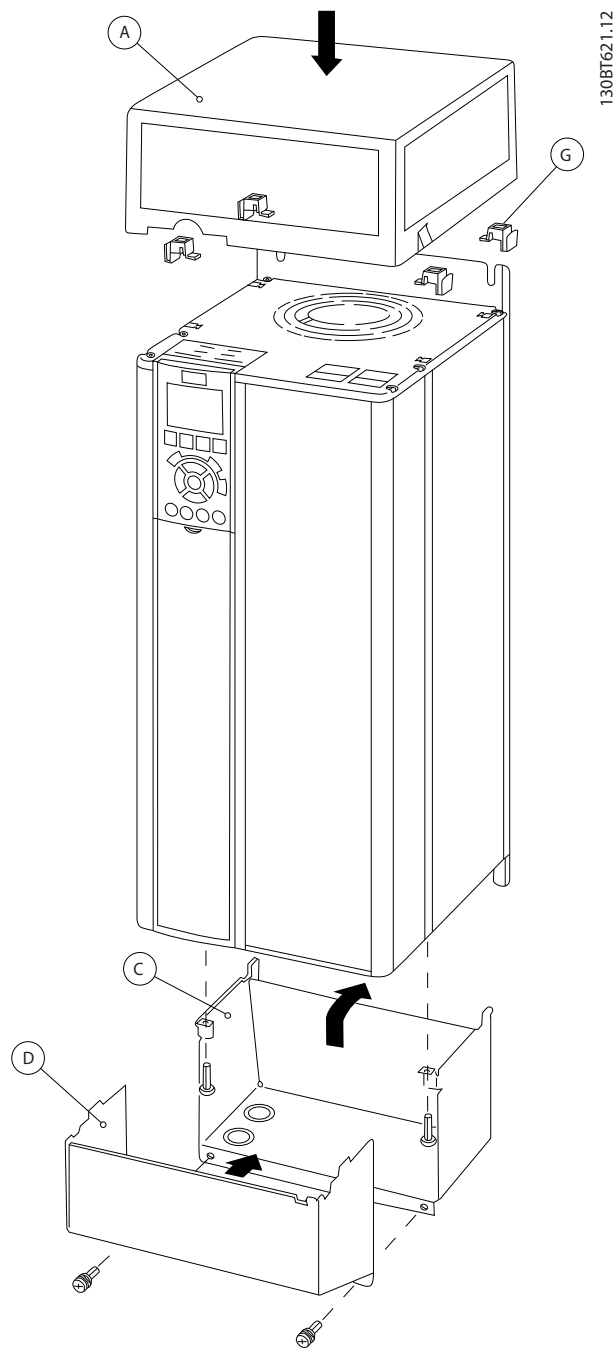


Figure 3.34 Enclosure Sizes B4, C3, and C4

A	Top cover
B	Brim
C	Base part
D	Base cover
E	Screw(s)
F	Fan cover
G	Top clip

Table 3.21 Legend to Figure 3.33 and Figure 3.34

When option module A and/or option module B is/are used, fit the brim (B) to the top cover (A).

NOTICE!

Side-by-side installation is not possible when using the IP21/IP4X/TYPE 1 Enclosure Kit

3.7.10 Remote Mounting Kit for LCP

The LCP can be moved to the front of an enclosure by using the remote built-in kit. The fastening screws must be tightened with a torque of maximum 1 Nm.

The LCP enclosure is rated IP66.

Enclosure	IP66 front
Maximum cable length between LCP and unit	3 m (10 ft)
Communication standard	RS485

Table 3.22 Technical Data

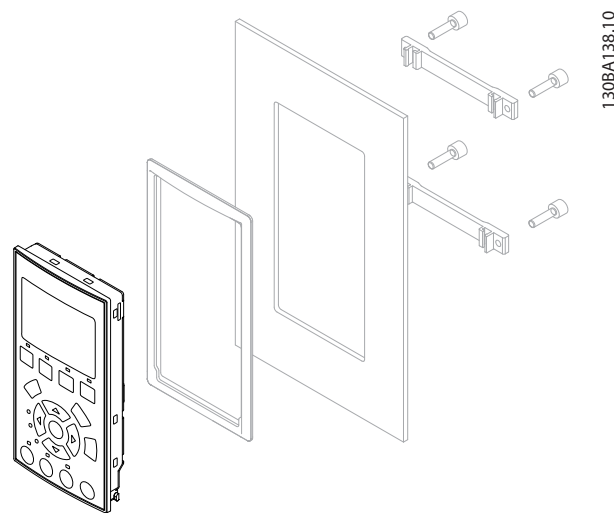


Figure 3.35 LCP Kit with Graphical LCP, Fasteners, 3 m (10 ft) Cable and Gasket
Ordering Number 130B1113

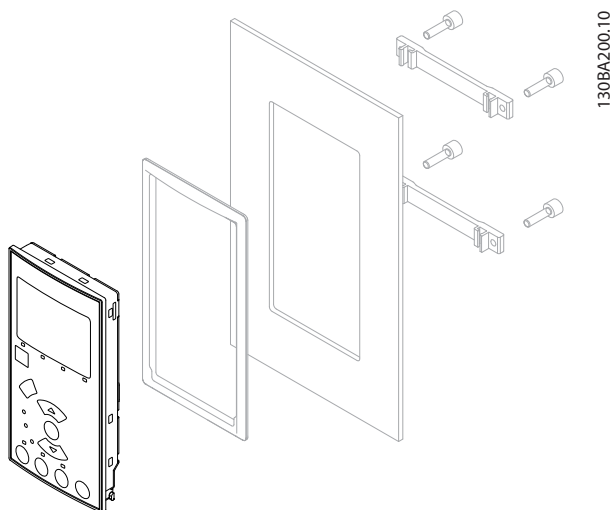


Figure 3.36 LCP Kit with Numerical LCP, Fasteners and Gasket
Ordering Number 130B1114

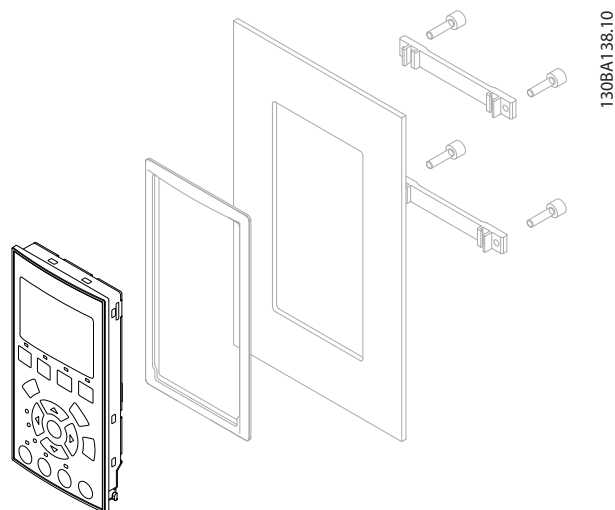


Figure 3.38 LCP Kit with Graphical LCP, Fasteners, 3 m (10 ft) Cable and Gasket, for US only

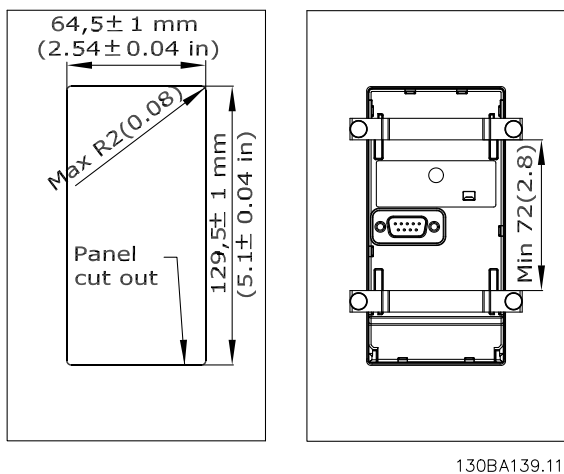


Figure 3.37 Dimensions of LCP Kit

3.7.11 Mounting Bracket for Enclosure Sizes A5, B1, B2, C1 and C2

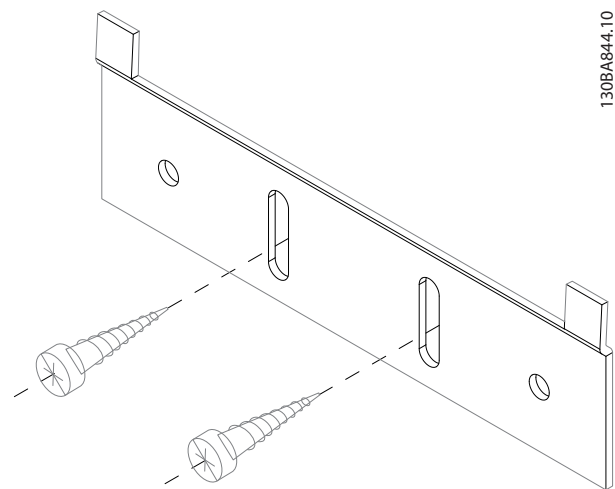


Figure 3.39 Lower Bracket

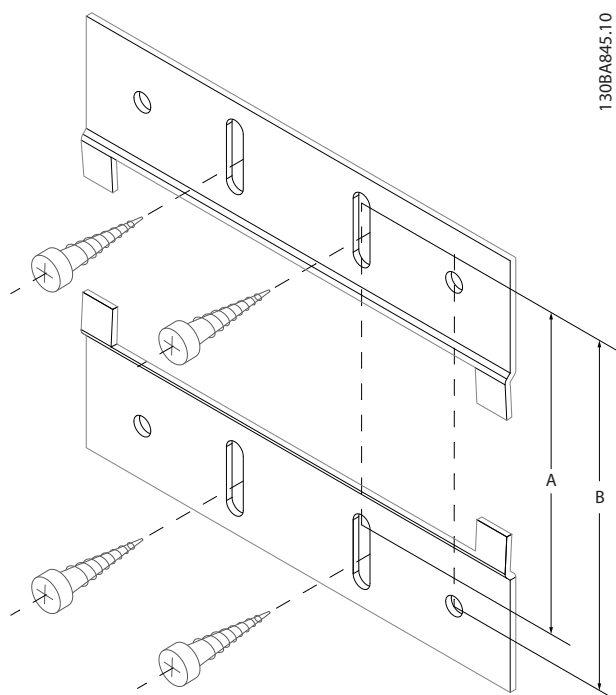


Figure 3.40 Upper Bracket

See dimensions in *Table 3.23*.

Enclosure Size	IP	A [mm (in)]	B [mm (in)]	Ordering number
A5	55/66	480 (18.9)	495 (19.49)	130B1080
B1	21/55/66	535 (21.06)	550 (21.65)	130B1081
B2	21/55/66	705 (27.76)	720 (28.35)	130B1082
B3	21/55/66	730 (28.74)	745 (29.33)	130B1083
B4	21/55/66	820 (32.28)	835 (32.87)	130B1084

Table 3.23 Details of Mounting Brackets

3.8 Serial Interface RS485

3.8.1 Overview

RS485 is a 2-wire bus interface compatible with multi-drop network topology, that is, nodes can be connected as a bus, or via drop cables from a common trunk line. A total of 32 nodes can be connected to one network segment. Repeaters divide network segments, see *Figure 3.41*.

NOTICE!

Each repeater functions as a node within the segment in which it is installed. Each node connected within a given network must have a unique node address across all segments.

Terminate each segment at both ends using either the termination switch (S801) of the adjustable frequency drives or a biased termination resistor network. Always use shielded twisted pair (STP) cable for bus cabling and follow good common installation practice.

Low-impedance ground connection of the shield at every node is important, including at high frequencies. Thus, connect a large surface of the shield to ground, for example, with a cable clamp or a conductive cable connector. It may be necessary to apply potential-equalizing cables to maintain the same ground potential throughout the network, particularly in installations with long cables.

To prevent impedance mismatch, always use the same type of cable throughout the entire network. When connecting a motor to the adjustable frequency drive, always use shielded motor cable.

Cable	Shielded twisted pair (STP)
Impedance [Ω]	120
Cable length [m (ft)]	Maximum 1200 (4000) (including drop lines) Maximum 500 (1650) station-to-station

Table 3.24 Cable Specifications

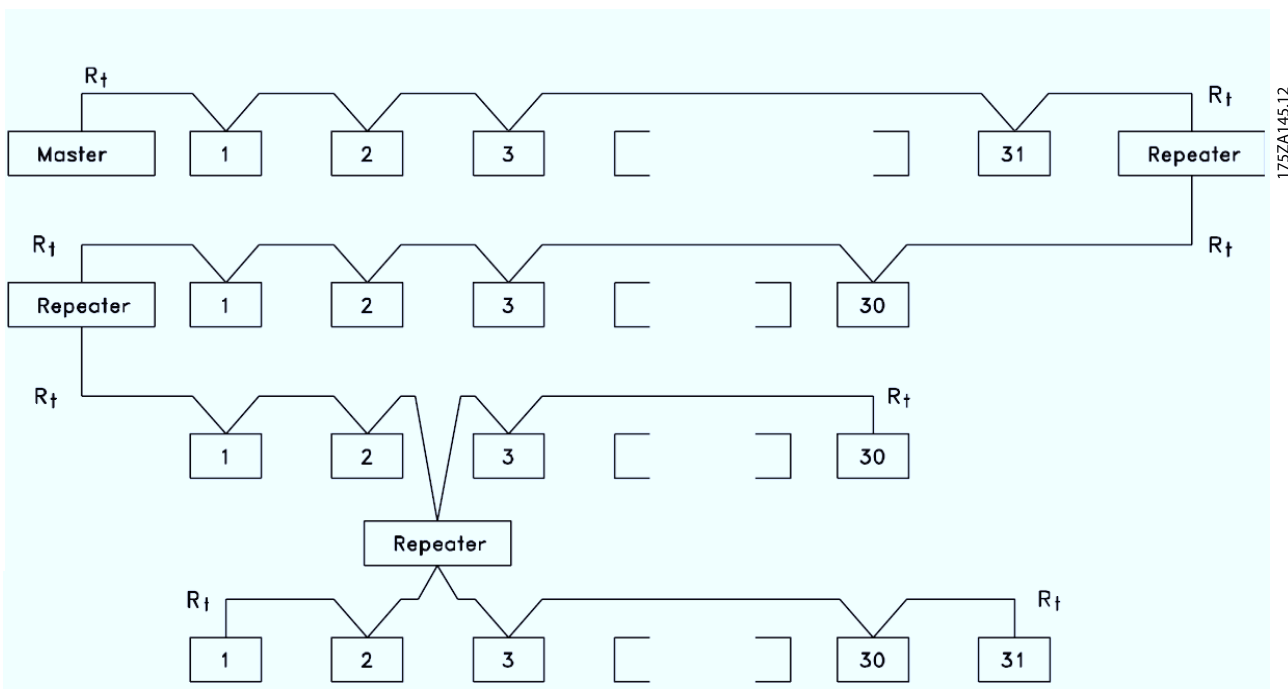


Figure 3.41 RS485 Bus Interface

		Parameters	
FC		Function	Setting
+24 V	12	8-30 Protocol	FC*
+24 V	13	8-31 Address	1*
D IN	18	8-32 Baud Rate	9600*
D IN	19	* = Default value	
COM	20	Notes/comments:	
D IN	27	Select protocol, address and baud rate in the above-mentioned parameters.	
D IN	29	D IN 37 is an option.	
D IN	32		
D IN	33		
D IN	37		
+10 V	50		
A IN	53		
A IN	54		
COM	55		
A OUT	42		
COM	39		
	01		
	02		
	03		
	04		
	05		
	06		
	61		
	68		
	69		

Table 3.25 RS485 Network Connection

3.8.2 Network Connection

One or more adjustable frequency drives can be connected to a control (or master) using the RS485 standardized interface. Terminal 68 is connected to the P signal (TX+, RX+), while terminal 69 is connected to the N signal (TX-, RX-). See drawings in *chapter 3.5.1 Wiring Schematic*.

If more than one adjustable frequency drive is connected to a master, use parallel connections.

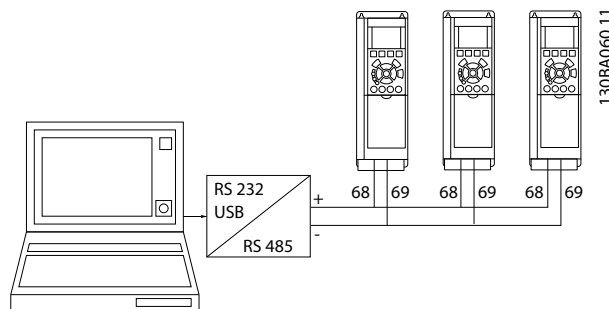


Figure 3.42 Parallel Connections

To avoid potential equalizing currents in the shield, wire according to *Figure 3.20*.

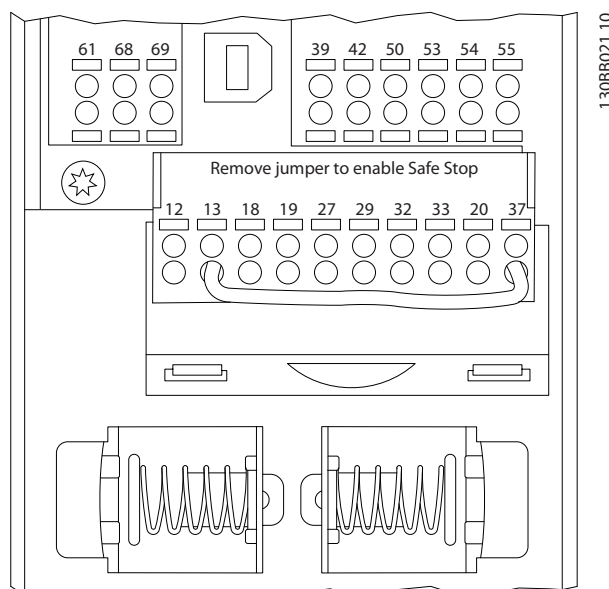


Figure 3.43 Control Card Terminals

3.8.3 RS485 Bus Termination

Terminate RS485 bus with a resistor network at both ends. For this purpose, set switch S801 on the control card to ON.

Set the communication protocol to *8-30 Protocol*.

3.8.4 EMC Precautions

The following EMC precautions are recommended to achieve interference-free operation of the RS485 network.

Observe relevant national and local regulations, for example, regarding protective ground connection. Keep

the RS485 communication cable away from motor and brake resistor cables to avoid coupling of high frequency noise from one cable to another. Normally a distance of 200 mm (8 in) is sufficient, but keeping the greatest possible distance between the cables is recommended, especially where cables run in parallel over long distances. When crossing is unavoidable, the RS485 cable must cross motor and brake resistor cables at an angle of 90°.

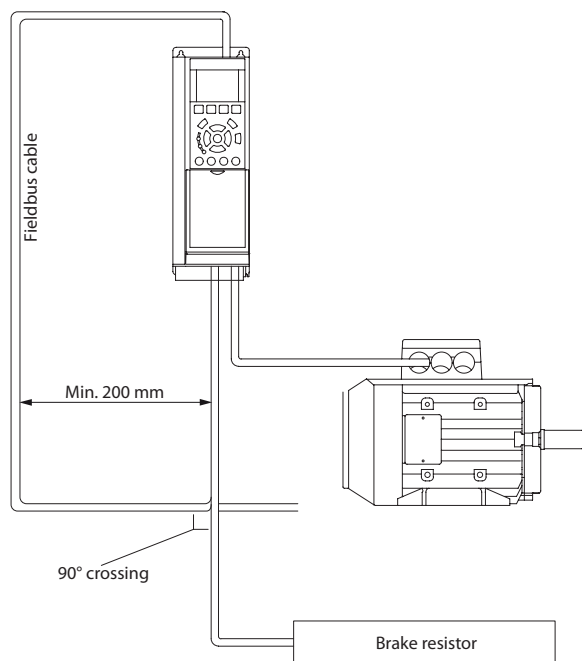


Figure 3.44 Cable Routing

3.8.5 FC Protocol Overview

The FC protocol, also referred to as FC bus or standard bus, is the Danfoss standard serial communication bus. It defines an access technique according to the master-slave principle for communications via a serial bus. One master and a maximum of 126 slaves can be connected to the bus. The master selects the individual slaves via an address character in the message. A slave itself can never transmit without first being requested to do so, and direct message transfer between the individual slaves is not possible. Communications occur in the half-duplex mode. The master function cannot be transferred to another node (single-master system).

The physical layer is RS485, thus utilizing the RS485 port built into the adjustable frequency drive. The FC protocol supports different message formats:

- A short format of 8 bytes for process data.
- A long format of 16 bytes that also includes a parameter channel.
- A format used for texts.

3.8.6 Network Configuration

Set the following parameters to enable the FC protocol for the adjustable frequency drive:

Parameter number	Setting
8-30 Protocol	FC
8-31 Address	1-126
8-32 FC Port Baud Rate	2400-115200
8-33 Parity / Stop Bits	Even parity, 1 stop bit (default)

Table 3.26 FC Protocol Parameters

3.8.7 FC Protocol Message Framing Structure

3.8.7.1 Content of a Character (byte)

Each character transferred begins with a start bit. Then 8 data bits are transferred, corresponding to a byte. Each character is secured via a parity bit. This bit is set at 1 when it reaches parity. Parity is when there is an equal number of 1s in the 8 data bits and the parity bit in total. A stop bit completes a character, thus consisting of 11 bits in all.

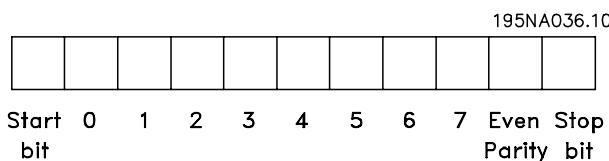


Figure 3.45 Content of a Character

3.8.7.2 Message Structure

Each message has the following structure:

- Start character (STX)=02 hex.
- A byte denoting the message length (LGE).
- A byte denoting the adjustable frequency drive address (ADR).

A number of data bytes (variable, depending on the type of message) follows.

A data control byte (BCC) completes the message.



Figure 3.46 Message Structure

3.8.7.3 Message Length (LGE)

The message length is the number of data bytes plus the address byte ADR and the data control byte BCC.

4 data bytes	LGE=4+1+1=6 bytes
12 data bytes	LGE=12+1+1=14 bytes
Messages containing texts	10 ¹ +n bytes

Table 3.27 Length of Messages

1) The 10 represents the fixed characters, while n is variable (depending on the length of the text).

3.8.7.4 Adjustable Frequency Drive Address (ADR)

Two different address formats are used.

The address range of the adjustable frequency drive is either 1-31 or 1-126.

- Address format 1-31
 - Bit 7=0 (address format 1-31 active).
 - Bit 6 is not used.
 - Bit 5=1: Broadcast, address bits (0-4) are not used.
 - Bit 5=0: No Broadcast.
 - Bit 0-4=adjustable frequency drive address 1-31.
- Address format 1-126
 - Bit 7=1 (address format 1-126 active).
 - Bit 0-6=adjustable frequency drive address 1-126.
 - Bit 0-6 =0 Broadcast.

The slave returns the address byte unchanged to the master in the response message.

3.8.7.5 Data Control Byte (BCC)

The checksum is calculated as an XOR-function. Before the first byte in the message is received, the calculated checksum is 0.

3.8.7.6 The Data Field

The structure of data blocks depends on the type of message. There are three message types, and the type applies for both control messages (master⇒slave) and response messages (slave⇒master).

The three types of message are:

Process block (PCD)

The PCD is made up of a data block of four bytes (two words) and contains:

- Control word and reference value (from master to slave).
- Status word and present output frequency (from slave to master).




130BA269.10

Figure 3.47 Process Block

Parameter block

The parameter block is used to transfer parameters between master and slave. The data block is made up of 12 bytes (six words) and also contains the process block.




130BA271.10

Figure 3.48 Parameter Block

Text block

The text block is used to read or write texts via the data block.



130BA270.10

Figure 3.49 Text Block

3.8.7.7 The PKE Field

The PKE field contains two subfields:

- Parameter command and response AK.
- Parameter number PNU.

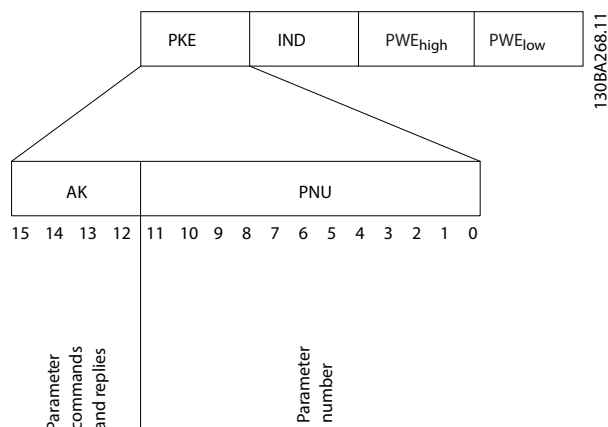


Figure 3.50 PKE Field

Bits number 12-15 transfer parameter commands from master to slave and return processed slave responses to the master.

Bit number				Parameter command
15	14	13	12	
0	0	0	0	No command
0	0	0	1	Read parameter value
0	0	1	0	Write parameter value in RAM (word)
0	0	1	1	Write parameter value in RAM (double word)
1	1	0	1	Write parameter value in RAM and EEPROM (double word)
1	1	1	0	Write parameter value in RAM and EEPROM (word)
1	1	1	1	Read/write text

Table 3.28 Parameter Commands Master⇒Slave

Bit number				Response
15	14	13	12	
0	0	0	0	No response
0	0	0	1	Parameter value transferred (word)
0	0	1	0	Parameter value transferred (double word)
0	1	1	1	Command cannot be performed
1	1	1	1	text transferred

Table 3.29 Response Slave⇒Master

If the command cannot be performed, the slave sends this response:

0111 Command cannot be performed

- and issues a fault report (see *Table 3.30*) in the parameter value (PWE):

PWE low (hex)	Fault report
0	The parameter number used does not exist.
1	There is no write access to the defined parameter.
2	Data value exceeds the parameter's limits.
3	The sub index used does not exist.
4	The parameter is not the array type.
5	The data type does not match the defined parameter.
11	Data change in the defined parameter is not possible in the adjustable frequency drive's present mode. Certain parameters can only be changed when the motor is turned off.
82	There is no bus access to the defined parameter.
83	Data change is not possible because factory set-up is selected

Table 3.30 Parameter Value Fault Report

3.8.7.8 Parameter Number (PNU)

Bits number 0-11 transfer parameter numbers. The function of the relevant parameter is defined in the parameter description in the *Programming Guide*.

3.8.7.9 Index (IND)

The index is used together with the parameter number to read/write-access parameters with an index, e.g., *15-30 Alarm Log: Error Code*. The index consists of two bytes, a low byte and a high byte.

Only the low byte is used as an index.

3.8.7.10 Parameter Value (PWE)

The parameter value block consists of two words (four bytes), and the value depends on the defined command (AK). The master prompts for a parameter value when the PWE block contains no value. To change a parameter value (write), write the new value in the PWE block and send from the master to the slave.

When a slave responds to a parameter request (read command), the present parameter value in the PWE block is transferred and returned to the master. If a parameter does not contain a numerical value, but several data options, e.g., *0-01 Language* where [0] is English, and [4] is Danish, select the data value by entering the value in the

PWE block. Serial communication is only capable of reading parameters containing data type 9 (text string).

15-40 FC Type to 15-53 Power Card Serial Number contain data type 9.

For example, read the unit size and AC line voltage range in 15-40 FC Type. When a text string is transferred (read), the length of the message is variable, and the texts are of different lengths. The message length is defined in the second byte of the message, LGE. When using text transfer, the index character indicates whether it is a read or a write command.

To read a text via the PWE block, set the parameter command (AK) to F hex. The index character high-byte must be 4.

Some parameters contain text that can be written to via the serial bus. To write a text via the PWE block, set the parameter command (AK) to F hex. The index characters high-byte must be 5.

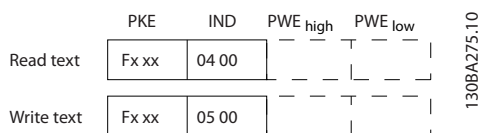


Figure 3.51 Text via PWE Block

3.8.7.11 Supported Data Types

Unsigned means that there is no operational sign in the message.

Data types	Description
3	Integer 16
4	Integer 32
5	Unsigned 8
6	Unsigned 16
7	Unsigned 32
9	Text string
10	Byte string
13	Time difference
33	Reserved
35	Bit sequence

Table 3.31 Supported Data Types

3.8.7.12 Conversion

The various attributes of each parameter are displayed in factory setting. Parameter values are transferred as whole numbers only. Conversion factors are therefore used to transfer decimals.

4-12 Motor Speed Low Limit [Hz] has a conversion factor of 0.1. To preset the minimum frequency to 10 Hz, transfer

the value 100. A conversion factor of 0.1 means that the value transferred is multiplied by 0.1. The value 100 is therefore read as 10.0.

Examples:

- 0 s⇒conversion index 0
- 0.00 s⇒conversion index -2
- 0 ms⇒conversion index -3
- 0.00 ms⇒conversion index -5

3.8.7.13 Process Words (PCD)

The block of process words is divided into two blocks of 16 bits, which always occur in the defined sequence.

PCD 1	PCD 2
Control message (master⇒slave control word)	Reference value
Control message (slave⇒master) status word	Present output frequency

Table 3.32 Process Words (PCD)

3.8.8 FC Protocol Examples

3.8.8.1 Writing a Parameter Value

Change 4-14 Motor Speed High Limit [Hz] to 100 Hz. Write the data in EEPROM.

PKE=E19E hex - Write single word in 4-14 Motor Speed High Limit [Hz].

IND=0000 hex

PWEHIGH=0000 hex

PWELOW=03E8 hex - Data value 1000, corresponding to 100 Hz, see chapter 3.8.7.12 Conversion.

The message looks like this:




Figure 3.52 Write Data in EEPROM

NOTICE!

4-14 Motor Speed High Limit [Hz] is a single word, and the parameter command for write in EEPROM is E. Parameter number 4-14 is 19E in hexadecimal.

The response from the slave to the master is:

119E	H	0000	H	0000	H	03E8	H
PKE		IND		PWE _{high}		PWE _{low}	

130BA093.10

Figure 3.53 Response from Slave

3.8.8.2 Reading a Parameter Value

Read the value in 3-41 Ramp 1 Ramp-up Time.

PKE=1155 hex - Read parameter value in 3-41 Ramp 1 Ramp-up Time.
 IND=0000 hex
 PWEHIGH=0000 hex
 PWELOW=0000 hex

1155	H	0000	H	0000	H	0000	H
PKE		IND		PWE _{high}		PWE _{low}	

130BA094.10

Figure 3.54 Parameter Value

If the value in 3-41 Ramp 1 Ramp-up Time is 10 s, the response from the slave to the master is

1155	H	0000	H	0000	H	03E8	H
PKE		IND		PWE _{high}		PWE _{low}	

130BA267.10

Figure 3.55 Response from Slave

3E8 hex corresponds to 1000 decimal. The conversion index for 3-41 Ramp 1 Ramp-up Time is -2, i.e., 0.01. 3-41 Ramp 1 Ramp-up Time is of the type Unsigned 32.

3.8.9 Modbus RTU Protocol

3.8.9.1 Assumptions

Danfoss assumes that the installed controller supports the interfaces in this document, and strictly observes all requirements and limitations stipulated in the controller and adjustable frequency drive.

The built-in Modbus RTU (Remote Terminal Unit) is designed to communicate with any controller that supports the interfaces defined in this document. It is assumed that the user has full knowledge of the capabilities and limitations of the controller.

3.8.9.2 Modbus RTU Overview

Regardless of the type of physical communication networks, the Modbus RTU overview describes the process a controller uses to request access to another device. This process includes how the Modbus RTU responds to requests from another device, and how errors are detected and reported. It also establishes a common format for the layout and contents of message fields.

During communications over a Modbus RTU network, the protocol:

- Determines how each controller learns its device address.
- Recognizes a message addressed to it.
- Determines which actions to take.
- Extracts any data or other information contained in the message.

If a reply is required, the controller constructs the reply message and sends it.

Controllers communicate using a master-slave technique in which only the master can initiate transactions (called queries). Slaves respond by supplying the requested data to the master, or by taking the action requested in the query.

The master can address individual slaves, or initiate a broadcast message to all slaves. Slaves return a response to queries that are addressed to them individually. No responses are returned to broadcast queries from the master. The Modbus RTU protocol establishes the format for the master's query by providing:

- The device (or broadcast) address.
- A function code defining the requested action.
- Any data to be sent.
- An error-checking field.

The slave's response message is also constructed using Modbus protocol. It contains fields confirming the action taken, any data to be returned and an error-checking field. If an error occurs in receipt of the message, or if the slave is unable to perform the requested action, the slave constructs an error message and sends it in response or a timeout occurs.

3.8.9.3 Adjustable Frequency Drive with Modbus RTU

The adjustable frequency drive communicates in Modbus RTU format over the built-in RS485 interface. Modbus RTU provides access to the control word and bus reference of the adjustable frequency drive.

The control word allows the Modbus master to control several important functions of the adjustable frequency drive:

- Start
- Stop of the adjustable frequency drive in various ways:
 - Coast stop
 - Quick stop
 - DC brake stop
 - Normal (ramp) stop
- Reset after a fault trip
- Run at a variety of preset speeds
- Run in reverse
- Change the active set-up
- Control the adjustable frequency drive's built-in relay

The bus reference is commonly used for speed control. It is also possible to access the parameters, read their values, and, where possible, write values to them. This permits a range of control options, including controlling the setpoint of the adjustable frequency drive when its internal PI controller is used.

3.8.9.4 Network Configuration

To enable Modbus RTU on the adjustable frequency drive, set the following parameters:

Parameter	Setting
8-30 Protocol	Modbus RTU
8-31 Address	1-247
8-32 Baud Rate	2400-115200
8-33 Parity / Stop Bits	Even parity, 1 stop bit (default)

Table 3.33 Modbus RTU Parameters

3.8.10 Modbus RTU Message Framing Structure

3.8.10.1 Adjustable Frequency Drive with Modbus RTU

The controllers are set up to communicate on the Modbus network using RTU mode, with each byte in a message containing 2 4-bit hexadecimal characters. The format for each byte is shown in *Table 3.34*.

Start bit	Data byte								Stop/parity	Stop

Table 3.34 Format for Each Byte

Coding system	8-bit binary, hexadecimal 0-9, A-F. Two hexadecimal characters contained in each 8-bit field of the message.
Bits per byte	1 start bit. 8 data bits, least significant bit sent first; 1 bit for even/odd parity; no bit for no parity. 1 stop bit if parity is used; 2 bits if no parity.
Error check field	Cyclical redundancy check (CRC).

3.8.10.2 Modbus RTU Message Structure

The transmitting device places a Modbus RTU message into a frame with a known beginning and ending point. This allows receiving devices to begin at the start of the message, read the address portion, determine which device is addressed (or all devices, if the message is broadcast), and to recognize when the message is completed. Partial messages are detected, and errors are set as a result. Characters for transmission must be in hexadecimal 00 to FF format in each field. The adjustable frequency drive continuously monitors the network bus, also during silent intervals. When the first field (the address field) is received, each adjustable frequency drive or device decodes it to determine which device is being addressed. Modbus RTU messages addressed to zero are broadcast messages. No response is permitted for broadcast messages. A typical message frame is shown in *Table 3.35*.

Start	Address	Function	Data	CRC check	End
T1-T2-T3-T4	8 bits	8 bits	N x 8 bits	16 bits	T1-T2-T3-T4

Table 3.35 Typical Modbus RTU Message Structure

3.8.10.3 Start/Stop Field

Messages start with a silent period of at least 3.5 character intervals. This is implemented as a multiple of character intervals at the selected network baud rate (shown as Start T1-T2-T3-T4). The first field to be transmitted is the device address. Following the last transmitted character, a similar period of at least 3.5 character intervals marks the end of the message. A new message can begin after this period. The entire message frame must be transmitted as a continuous stream. If a silent period of more than 1.5 character intervals occurs before completion of the frame, the receiving device flushes the incomplete message and assumes that the next byte is the address field of a new message. Similarly, if a new message begins before 3.5 character intervals after a previous message, the receiving device considers it a continuation of the previous message. This causes a timeout (no response from the slave), since the value in the final CRC field is not valid for the combined messages.

3.8.10.4 Address Field

The address field of a message frame contains 8 bits. Valid slave device addresses are in the range of 0–247 decimal. The individual slave devices are assigned addresses in the range of 1–247. (0 is reserved for broadcast mode, which all slaves recognize.) A master addresses a slave by placing the slave address in the address field of the message. When the slave sends its response, it places its own address in this address field to let the master know which slave is responding.

3.8.10.5 Function Field

The function field of a message frame contains 8 bits. Valid codes are in the range of 1–FF. Function fields are used to send messages between master and slave. When a message is sent from a master to a slave device, the function code field tells the slave what kind of action to perform. When the slave responds to the master, it uses the function code field to indicate either a normal (error-free) response, or that some kind of error occurred (called an exception response). For a normal response, the slave simply echoes the original function code. For an exception response, the slave returns a code that is equivalent to the original function code with its most significant bit set to logic 1. In addition, the slave places a unique code into the data field of the response message. This tells the master what kind of error occurred, or the reason for the exception. Also refer to *chapter 3.8.10.10 Function Codes Supported by Modbus RTU* and *chapter 3.8.10.11 Modbus Exception Codes*.

3.8.10.6 Data Field

The data field is constructed using sets of two hexadecimal digits, in the range of 00–FF hexadecimal. These are made up of one RTU character. The data field of messages sent from a master to slave device contains additional information that the slave must use to take the action defined by the function code. This can include items such as coil or register addresses, the quantity of items to be handled and the count of actual data bytes in the field.

3.8.10.7 CRC Check Field

Messages include an error-checking field, operating based on a cyclical redundancy check (CRC) method. The CRC field checks the contents of the entire message. It is applied regardless of any parity check method used for the individual characters of the message. The CRC value is calculated by the transmitting device, which appends the CRC as the last field in the message. The receiving device recalculates a CRC during receipt of the message and compares the calculated value to the actual value received in the CRC field. If the two values are unequal, a bus timeout results. The error-checking field contains a 16-bit binary value implemented as two 8-bit bytes. When this is done, the low-order byte of the field is appended first, followed by the high-order byte. The CRC high-order byte is the last byte sent in the message.

3.8.10.8 Coil Register Addressing

In Modbus, all data is organized in coils and holding registers. Coils hold a single bit, whereas holding registers hold a 2-byte word (16 bits). All data addresses in Modbus messages are referenced to zero. The first occurrence of a data item is addressed as item number 0. For example: The coil known as *coil 1* in a programmable controller is addressed as the data address field of a Modbus message. *Coil 127 decimal* is addressed as *coil 007EHEX (126 decimal)*. *Holding register 40001* is addressed as *register 0000* in the data address field of the message. The function code field already specifies a holding-register operation. Therefore, the 4XXXX reference is implicit. *Holding register 40108* is addressed as *register 006BHEX (107 decimal)*.

Coil number	Description	Signal direction
1–16	Adjustable frequency drive control word.	Master to slave
17–32	Adjustable frequency drive speed or setpoint reference range 0x0–0xFFFF (-200% ... ~200%).	Master to slave
33–48	Adjustable frequency drive status word (see <i>Table 3.38</i>)	Slave to master
49–64	Open-loop mode: Adjustable frequency drive output frequency. Closed-loop mode: Adjustable frequency drive feedback signal.	Slave to master
65	Parameter write control (master to slave)	Master to slave
	0 = Parameter changes are written to the RAM of the adjustable frequency drive.	
	1 = Parameter changes are written to the RAM and EEPROM of the adjustable frequency drive.	
66-65536	Reserved	

Table 3.36 Coil Descriptions

Coil	0	1
01	Preset reference LSB	
02	Preset reference MSB	
03	DC brake	No DC brake
04	Coast stop	No coast stop
05	Quick stop	No quick stop
06	Freeze freq.	No freeze freq.
07	Ramp stop	Start
08	No reset	Reset
09	No jog	Jog
10	Ramp 1	Ramp 2
11	Data not valid	Data valid
12	Relay 1 off	Relay 1 on
13	Relay 2 off	Relay 2 on
14	Set up LSB	
15	Set up MSB	
16	No reversing	Reversing

Table 3.37 Adjustable Frequency Drive Control Word (FC Profile)

Coil	0	1
33	Control not ready	Control ready
34	Adjustable frequency drive not ready	Adjustable frequency drive ready
35	Coasting stop	Safety closed
36	No alarm	Alarm
37	Not used	Not used
38	Not used	Not used
39	Not used	Not used
40	No warning	Warning
41	Not at reference	At reference
42	Hand mode	Auto mode
43	Out of frequency range	In frequency range
44	Stopped	Running
45	Not used	Not used
46	No voltage warning	Voltage warning
47	Not in current limit	Current limit
48	No thermal warning	Thermal warning

Table 3.38 Adjustable Frequency Drive Status Word (FC Profile)

Register number	Description
00001-00006	Reserved
00007	Last error code from an FC data object interface
00008	Reserved
00009	Parameter index ¹⁾
00010-00990	000 parameter group (parameters 0-01 through 0-99)
01000-01990	100 parameter group (parameters 1-00 through 1-99)
02000-02990	200 parameter group (parameters 2-00 through 2-99)
03000-03990	300 parameter group (parameters 3-00 through 3-99)
04000-04990	400 parameter group (parameters 4-00 through 4-99)
...	...
49000-49990	4900 parameter group (parameters 49-00 through 49-99)
50000	Input data: Adjustable frequency drive control word register (CTW).
50010	Input data: Bus reference register (REF).
...	...
50200	Output data: Adjustable frequency drive status word register (STW).
50210	Output data: Adjustable frequency drive main actual value register (MAV).

Table 3.39 Holding Registers

1) Used to specify the index number to be used when accessing an indexed parameter.

3.8.10.9 How to Control the Adjustable Frequency Drive

Codes available for use in the function and data fields of a Modbus RTU message are listed in *chapter 3.8.10.10 Function Codes Supported by Modbus RTU* and *chapter 3.8.10.11 Modbus Exception Codes*.

3.8.10.10 Function Codes Supported by Modbus RTU

Modbus RTU supports use of the function codes (see *Table 3.40*) in the function field of a message.

Function	Function code (hex)
Read coils	1
Read holding registers	3
Write single coil	5
Write single register	6
Write multiple coils	F
Write multiple registers	10
Get communication event counter	B
Report slave ID	11

Table 3.40 Function Codes

Function	Function code	Sub-function code	Sub-function
Diagnostics	8	1	Restart communication
		2	Return diagnostic register
		10	Clear counters and diagnostic register
		11	Return bus message count
		12	Return bus communication error count
		13	Return slave error count
		14	Return slave message count

Table 3.41 Function Codes and Sub-function Codes

3.8.10.11 Modbus Exception Codes

For a full explanation of the structure of an exception code response, refer to *chapter 3.8.10.5 Function Field*.

Code	Name	Meaning
1	Illegal function	The function code received in the query is not an allowable action for the server (or slave). This may be because the function code is only applicable to newer devices and was not implemented in the unit selected. It could also indicate that the server (or slave) is in the wrong state to process a request of this type, for example because it is not configured and is being asked to return register values.
2	Illegal data address	The data address received in the query is not an allowable address for the server (or slave). More specifically, the combination of reference number and transfer length is invalid. For a controller with 100 registers, a request with offset 96 and length 4 would succeed, a request with offset 96 and length 5 generates exception 02.
3	Illegal data value	A value contained in the query data field is not an allowable value for server (or slave). This indicates a fault in the structure of the remainder of a complex request, such as that the implied length is incorrect. It specifically does NOT mean that a data item submitted for storage in a register has a value outside the expectation of the application program, since the Modbus protocol is unaware of the significance of any particular value of any particular register.
4	Slave device failure	An unrecoverable error occurred while the server (or slave) was attempting to perform the requested action.

Table 3.42 Modbus Exception Codes

3.8.11 Access to Parameters

3.8.11.1 Parameter Handling

The PNU (parameter number) is translated from the register address contained in the Modbus read or write message. The parameter number is translated to Modbus as (10 x parameter number) decimal. Example: Reading *3-12 Catch up/slow-down Value* (16 bit): The holding register 3120 holds the parameter's value. A value of 1352 (Decimal) means that the parameter is set to 12.52%

Reading *3-14 Preset Relative Reference* (32 bit): The holding registers 3410 and 3411 hold the parameter's value. A value of 11300 (decimal), means that the parameter is set to 1113.00.

For information on the parameters, size and converting index, consult the *Programming Guide*.

3.8.11.2 Storage of Data

The coil 65 decimal determines whether data written to the adjustable frequency drive is stored in EEPROM and RAM (coil 65=1) or only in RAM (coil 65=0).

3.8.11.3 IND (Index)

Some parameters in the adjustable frequency drive are array parameters, for example, *3-10 Preset Reference*. Since the Modbus does not support arrays in the holding registers, the adjustable frequency drive has reserved the holding register 9 as pointer to the array. Before reading or writing an array parameter, set the holding register 9. Setting the holding register to the value of 2 causes all following read/write to array parameters to be to the index 2.

3.8.11.4 Text Blocks

Parameters stored as text strings are accessed in the same way as the other parameters. The maximum text block size is 20 characters. If a read request for a parameter is for more characters than the parameter stores, the response is truncated. If the read request for a parameter is for fewer characters than the parameter stores, the response is padded with spaces.

3.8.11.5 Conversion Factor

Since a parameter value can only be transferred as a whole number, a conversion factor must be used to transfer decimals.

3.8.11.6 Parameter Values

Standard data types

Standard data types are int 16, int 32, uint 8, uint 16 and uint 32. They are stored as 4x registers (40001–4FFFF). The parameters are read using function 03 hex *Read Holding Registers*. Parameters are written using the function 6 hex *Preset Single Register* for 1 register (16 bits), and the function 10 hex *Preset Multiple Registers* for two registers (32 bits). Readable sizes range from one register (16 bits) up to ten registers (20 characters).

Non-standard data types

Non-standard data types are text strings and are stored as 4x registers (40001–4FFFF). The parameters are read using function 03 hex *Read Holding Registers* and written using function 10 hex *Preset Multiple Registers*. Readable sizes range from one register (two characters) up to ten registers (20 characters).

3.8.12 FC Drive Control Profile

3.8.12.1 Control Word According to FC Profile (8-10 Control Profile=FC profile)

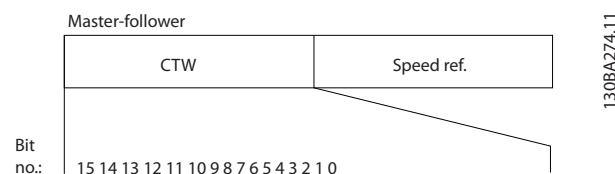


Figure 3.56 Control Word

Bit	Bit value=0	Bit value=1
00	Reference value	External selection lsb
01	Reference value	External selection msb
02	DC brake	Ramp
03	Coasting	No coasting
04	Quick stop	Ramp
05	Hold output frequency	Use ramp
06	Ramp stop	Start
07	No function	Reset
08	No function	Jog
09	Ramp 1	Ramp 2
10	Data invalid	Data valid
11	No function	Relay 01 active
12	No function	Relay 02 active
13	Parameter set-up	Selection lsb
14	Parameter set-up	Selection msb
15	No function	Reverse

Table 3.43 Control Word Bits

Explanation of the Control Bits

Bits 00/01

Bits 00 and 01 are used to select between the four reference values, which are pre-programmed in *3-10 Preset Reference* according to Table 3.44.

Programmed ref. value	Parameter	Bit 01	Bit 00
1	3-10 Preset Reference [0]	0	0
2	3-10 Preset Reference [1]	0	1
3	3-10 Preset Reference [2]	1	0
4	3-10 Preset Reference [3]	1	1

Table 3.44 Reference Values

NOTICE!

Make a selection in *8-56 Preset Reference Select* to define how bit 00/01 gates with the corresponding function on the digital inputs.

Bit 02, DC brake

Bit 02=0 leads to DC braking and stop. Set braking current and duration in *2-01 DC Brake Current* and *2-02 DC Braking Time*.

Bit 02=1 leads to ramping.

Bit 03, Coasting

Bit 03=0: The adjustable frequency drive immediately releases the motor (the output transistors are shut off), and it coasts to a standstill.

Bit 03=1: The adjustable frequency drive starts the motor if the other starting conditions are met.

Make a selection in *8-50 Coasting Select* to define how bit 03 gates with the corresponding function on a digital input.

Bit 04, Quick stop

Bit 04=0: Makes the motor speed ramp down to stop (set in *3-81 Quick Stop Ramp Time*).

Bit 05, Hold output frequency

Bit 05=0: The present output frequency (in Hz) freezes. Change the frozen output frequency only with the digital inputs (*5-10 Terminal 18 Digital Input* to *5-15 Terminal 33 Digital Input*) programmed to *Speed up* and *Slow-down*.

NOTICE!

If freeze output is active, the adjustable frequency drive can only be stopped by the following:

- Bit 03 coasting stop
- Bit 02 DC braking
- Digital input (*5-10 Terminal 18 Digital Input* to *5-15 Terminal 33 Digital Input*) programmed to *DC braking*, *Coasting stop*, or *Reset and coasting stop*.

Bit 06, Ramp stop/start

Bit 06=0: Causes a stop and makes the motor speed ramp down to stop via the selected ramp-down parameter.

Bit 06=1: Permits the adjustable frequency drive to start the motor if the other starting conditions are met.

Make a selection in *8-53 Start Select* to define how bit 06 Ramp stop/start gates with the corresponding function on a digital input.

Bit 07, Reset

Bit 07=0: No reset.

Bit 07=1: Resets a trip. Reset is activated on the signal's leading edge, for example, when changing from logic 0 to logic 1.

Bit 08, Jog

Bit 08=1: The output frequency is determined by *3-19 Jog Speed [RPM]*.

Bit 09, Selection of ramp 1/2

Bit 09=0: Ramp 1 is active (*3-41 Ramp 1 Ramp-up Time* to *3-42 Ramp 1 Ramp-down Time*).

Bit 09=1: Ramp 2 (*3-51 Ramp 2 Ramp-up Time* to *3-52 Ramp 2 Ramp-down Time*) is active.

Bit 10, Data not valid/Data valid

Tell the adjustable frequency drive whether to use or ignore the control word.

Bit 10=0: The control word is ignored.

Bit 10=1: The control word is used. This function is relevant because the message always contains the control word, regardless of the message type. Turn off the control word if it should not be used when updating or reading parameters.

Bit 11, Relay 01

Bit 11=0: Relay not activated.

Bit 11=1: Relay 01 activated provided that *Control word bit 11* is selected in *5-40 Function Relay*.

Bit 12, Relay 04

Bit 12=0: Relay 04 is not activated.

Bit 12=1: Relay 04 is activated provided that *Control word bit 12* is selected in *5-40 Function Relay*.

Bit 13/14, Selection of set-up

Use bits 13 and 14 to select from the four menu set-ups according to *Table 3.45*.

Set-up	Bit 14	Bit 13
1	0	0
2	0	1
3	1	0
4	1	1

Table 3.45 Specification of Menu Set-ups

The function is only possible when *[9] Multi Set-Ups* is selected in *0-10 Active Set-up*.

Make a selection in *8-55 Set-up Select* to define how bit 13/14 gates with the corresponding function on the digital inputs.

Bit 15 Reverse

Bit 15=0: No reversing.

Bit 15=1: Reversing. In the default setting, reversing is set to digital in *8-54 Reverse Select*. Bit 15 causes reversing only when *Ser. communication*, *Logic* or *Logic and* is selected.

3.8.12.2 Status Word According to FC Profile (STW) (8-10 Control Profile=FC profile)

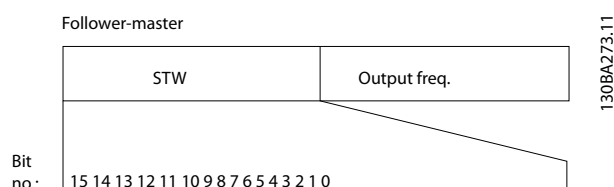


Figure 3.57 Status Word

Bit	Bit=0	Bit=1
00	Control not ready	Control ready
01	Drive not ready	Drive ready
02	Coasting	Enable
03	No error	Trip
04	No error	Error (no trip)
05	Reserved	-
06	No error	Trip lock
07	No warning	Warning
08	Speed \neq reference	Speed = reference
09	Local operation	Bus control
10	Out of frequency limit	Frequency limit OK
11	No operation	In operation
12	Drive OK	Stopped, auto-start
13	Voltage OK	Voltage exceeded
14	Torque OK	Torque exceeded
15	Timer OK	Timer exceeded

Table 3.46 Status Word Bits

Explanation of the status bits

Bit 00, Control not ready/ready

Bit 00=0: The adjustable frequency drive trips.

Bit 00=1: The adjustable frequency drive controls are ready, but the power component does not necessarily receive any power supply (in case of external 24 V supply to controls).

Bit 01, Drive ready

Bit 01=1: The adjustable frequency drive is ready for operation, but the coasting command is active via the digital inputs or via serial communication.

Bit 02, Coasting stop

Bit 02=0: The adjustable frequency drive releases the motor.

Bit 02=1: The adjustable frequency drive starts the motor with a start command.

Bit 03, No error/trip

Bit 03=0: The adjustable frequency drive is not in fault mode.

Bit 03=1: The adjustable frequency drive trips. To re-establish operation, enter [Reset].

Bit 04, No error/error (no trip)

Bit 04=0: The adjustable frequency drive is not in fault mode.

Bit 04=1: The adjustable frequency drive shows an error but does not trip.

Bit 05, Not used

Bit 05 is not used in the status word.

Bit 06, No error/triplock

Bit 06=0: The adjustable frequency drive is not in fault mode.

Bit 06=1: The adjustable frequency drive is tripped and locked.

Bit 07, No warning/warning

Bit 07=0: There are no warnings.

Bit 07=1: A warning has occurred.

Bit 08, Speed \neq reference/speed=reference

Bit 08=0: The motor is running, but the present speed is different from the preset speed reference. It might, for example, be the case when the speed ramps up/down during start/stop.

Bit 08=1: The motor speed matches the preset speed reference.

Bit 09, Local operation/bus control

Bit 09=0: [Stop/Reset] is activated on the control unit or *Local control* in 3-13 Reference Site is selected. Control via serial communication is not possible.

Bit 09=1 It is possible to control the adjustable frequency drive via the serial communication bus/serial communication.

Bit 10, Out of frequency limit

Bit 10=0: The output frequency has reached the value in 4-11 Motor Speed Low Limit [RPM] or 4-13 Motor Speed High Limit [RPM].

Bit 10=1: The output frequency is within the defined limits.

Bit 11, No operation/in operation

Bit 11=0: The motor is not running.

Bit 11=1: The adjustable frequency drive has a start signal, or the output frequency is greater than 0 Hz.

Bit 12, Drive OK/stopped, autostart

Bit 12=0: There is no temporary overtemperature on the inverter.

Bit 12=1: The inverter stops because of overtemperature, but the unit does not trip and resumes operation once the overtemperature stops.

Bit 13, Voltage OK/limit exceeded

Bit 13=0: There are no voltage warnings.

Bit 13=1: The DC voltage in the adjustable frequency drive's intermediate circuit is too low or too high.

Bit 14, Torque OK/limit exceeded

Bit 14=0: The motor current is lower than the torque limit selected in *4-18 Current Limit*.
 Bit 14=1: The torque limit in *4-18 Current Limit* is exceeded.

Bit 15, Timer OK/limit exceeded

Bit 15=0: The timers for motor thermal protection and thermal protection are not exceeded 100%.
 Bit 15=1: One of the timers exceeds 100%.

All bits in the STW are set to 0 if the connection between the interbus option and the adjustable frequency drive is lost, or an internal communication problem has occurred.

3.8.12.3 Bus Speed Reference Value

Speed reference value is transmitted to the adjustable frequency drive in a relative value expressed as %. The value is transmitted in the form of a 16-bit word; in integers (0-32767) the value 16384 (4000 hex) corresponds to 100%. Negative figures are formatted by means of 2's complement. The actual output frequency (MAV) is scaled in the same way as the bus reference.

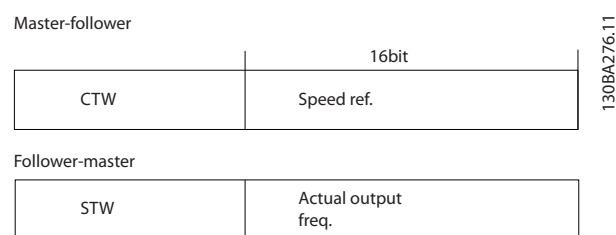


Figure 3.58 Actual Output Frequency (MAV)

The reference and MAV are scaled as follows:

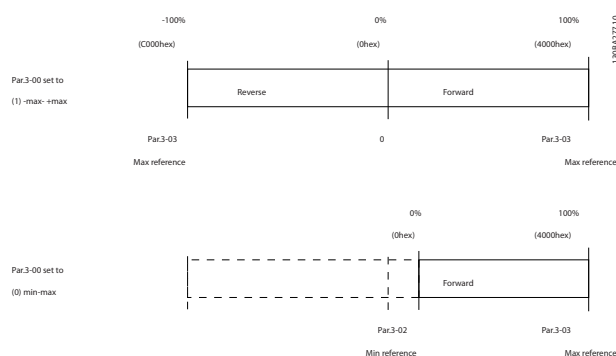


Figure 3.59 Reference and MAV

3.8.12.4 Control Word according to PROFIdrive Profile (CTW)

The control word is used to send commands from a master (for example, a PC) to a slave.

Bit	Bit=0	Bit=1
00	Off 1	On 1
01	Off 2	On 2
02	Off 3	On 3
03	Coasting	No coasting
04	Quick stop	Ramp
05	Hold frequency output	Use ramp
06	Ramp stop	Start
07	No function	Reset
08	Jog 1 Off	Jog 1 On
09	Jog 2 Off	Jog 2 On
10	Data invalid	Data valid
11	No function	Slow-down
12	No function	Catch up
13	Parameter set-up	Selection lsb
14	Parameter set-up	Selection msb
15	No function	Reverse

Table 3.47 Control Word Bits

Explanation of the control bits

Bit 00, OFF 1/ON 1

Normal ramp stops using the ramp times of the actual selected ramp.

Bit 00=0 leads to the stop and activation of the output relay 1 or 2 if the output frequency is 0 Hz and if [Relay 123] has been selected in *5-40 Function Relay*.

When bit 0=1, the adjustable frequency drive is in State 1: *Switching on inhibited*.

Bit 01, Off 2/On 2

Coasting stop

When bit 01=0, a coasting stop and activation of the output relay 1 or 2 occurs if the output frequency is 0 Hz and if [Relay 123] has been selected in *5-40 Function Relay*.

Bit 02, Off 3/On 3

Quick stop using the ramp time of *3-81 Quick Stop Ramp Time*. When bit 02=0, a quick stop and activation of the output relay 1 or 2 occurs if the output frequency is 0 Hz and if [Relay 123] has been selected in *5-40 Function Relay*. When bit 02=1, the adjustable frequency drive is in State 1: *Switching on inhibited*.

Bit 03, Coasting/No coasting

Coasting stop bit 03=0 leads to a stop.

When bit 03=1, the adjustable frequency drive can start if the other start conditions are satisfied.

NOTICE!

The selection in 8-50 *Coasting Select* determines how bit 03 is linked with the corresponding function of the digital inputs.

Bit 04, Quick stop/Ramp

Quick stop using the ramp time of 3-81 *Quick Stop Ramp Time*.

When bit 04=0, a quick stop occurs.

When bit 04=1, the adjustable frequency drive can start if the other start conditions are satisfied.

NOTICE!

The selection in 8-51 *Quick Stop Select* determines how bit 04 is linked with the corresponding function of the digital inputs.

Bit 05, Hold frequency output/Use ramp

When bit 05=0, the current output frequency is being maintained even if the reference value is modified.

When bit 05=1, the adjustable frequency drive can perform its regulating function again; operation occurs according to the respective reference value.

Bit 06, Ramp stop/Start

Normal ramp stop using the ramp times of the actual ramp as selected. In addition, activation of the output relay 01 or 04 if the output frequency is 0 Hz and if relay 123 has been selected in 5-40 *Function Relay*.

Bit 06=0 leads to a stop.

When bit 06=1, the adjustable frequency drive can start if the other start conditions are fulfilled.

NOTICE!

The selection in 8-53 *Start Select* determines how bit 06 is linked with the corresponding function of the digital inputs.

Bit 07, No function/Reset

Reset after switching off.

Acknowledges event in fault buffer.

When bit 07=0, no reset occurs.

When there is a slope change of bit 07 to 1, a reset occurs after switching off.

Bit 08, Jog 1 Off/On

Activation of the pre-programmed speed in 8-90 *Bus Jog 1 Speed*. JOG 1 is only possible if bit 04=0 and bit 00-03=1.

Bit 09, Jog 2 Off/On

Activation of the pre-programmed speed in 8-91 *Bus Jog 2 Speed*. Jog 2 is only possible if bit 04=0 and bit 00-03=1.

Bit 10, Data invalid/valid

Is used to tell the adjustable frequency drive whether the control word is to be used or ignored.

Bit 10=0 causes the control word to be ignored, Bit 10=1 causes the control word to be used. This function is relevant because the control word is always contained in the message, regardless of which type of message is used. It is possible to turn off the control word if it should not be used for updating or reading parameters.

Bit 11, No function/Slow-down

Is used to reduce the speed reference value by the amount given in 3-12 *Catch up/slow-down Value*.

When bit 11=0, no modification of the reference value occurs.

When bit 11=1, the reference value is reduced.

Bit 12, No function/Catch up

Is used to increase the speed reference value by the amount given in 3-12 *Catch up/slow-down Value*.

When bit 12=0, no modification of the reference value occurs.

When bit 12=1, the reference value is increased.

If both slowing down and accelerating are activated (bit 11 and 12=1), slowing down has priority, that is, the speed reference value is reduced.

Bits 13/14, Set-up selection

Bits 13 and 14 are used to select between the four parameter set-ups according to *Table 3.48*.

The function is only possible if [9] *Multi Set-up* has been selected in 0-10 *Active Set-up*. The selection in 8-55 *Set-up Select* determines how bits 13 and 14 are linked with the corresponding function of the digital inputs. Changing set-up while running is only possible if the set-ups have been linked in 0-12 *This Set-up Linked to*.

Set-up	Bit 13	Bit 14
1	0	0
2	1	0
3	0	1
4	1	1

Table 3.48 Set-up Selection

Bit 15, No function/Reverse

Bit 15=0 causes no reversing.

Bit 15=1 causes reversing.

NOTICE!

In the factory settings, reversing is set to *digital* in 8-54 *Reverse Select*.

NOTICE!

Bit 15 causes reversing only when *Ser. communication, Logic or or Logic and* is selected.

3.8.12.5 Status Word according to PROFIdrive Profile (STW)

The status word is used to notify a master (for example, a PC) about the status of a slave.

Bit	Bit=0	Bit=1
00	Control not ready	Control ready
01	Drive not ready	Drive ready
02	Coasting	Enable
03	No error	Trip
04	Off 2	On 2
05	Off 3	On 3
06	Start possible	Start not possible
07	No warning	Warning
08	Speed≠reference	Speed=reference
09	Local operation	Bus control
10	Out of frequency limit	Frequency limit OK
11	No operation	In operation
12	Drive OK	Stopped, autostart
13	Voltage OK	Voltage exceeded
14	Torque OK	Torque exceeded
15	Timer OK	Timer exceeded

Table 3.49 Status Word Bits

Explanation of the status bits

Bit 00, Control not ready/ready

When bit 00=0, bit 00, 01 or 02 of the control word is 0 (OFF 1, OFF 2 or OFF 3) – or the adjustable frequency drive is switched off (trip).

When bit 00=1, the adjustable frequency drive control is ready, but there is not necessarily power supply to the unit present (in the event of external 24 V supply of the control system).

Bit 01, Drive not ready/ready

Same significance as bit 00, however, there is a supply from the power unit. The adjustable frequency drive is ready when it receives the necessary start signals.

Bit 02, Coasting/Enable

When bit 02=0, bit 00, 01 or 02 of the control word is 0 (Off 1, Off 2 or Off 3 or coasting) – or the adjustable frequency drive is switched off (trip).

When bit 02=1, bit 00, 01 or 02 of the control word is 1; the adjustable frequency drive has not tripped.

Bit 03, No error/Trip

When bit 03=0, no error condition of the adjustable frequency drive exists.

When bit 03=1, the adjustable frequency drive has tripped and requires a reset signal before it can start.

Bit 04, On 2/Off 2

When bit 01 of the control word is 0, then bit 04=0.

When bit 01 of the control word is 1, then bit 04=1.

Bit 05, On 3/Off 3

When bit 02 of the control word is 0, then bit 05=0.

When bit 02 of the control word is 1, then bit 05=1.

Bit 06, Start possible/Start not possible

If [1] PROFIdrive has been selected in 8-10 Control Word Profile, bit 06 is 1 after a switch-off acknowledgment, after activation of Off2 or Off3, and after switching on the AC line voltage, *Start not possible* is reset, with bit 00 of the control word is set to 0 and bits 01, 02 and 10 are set to 1.

Bit 07, No warning/Warning

Bit 07=0 means that there are no warnings.

Bit 07=1 means that a warning has occurred.

Bit 08, Speed≠reference/Speed=reference

When bit 08=0, the current speed of the motor deviates from the set speed reference value. This may occur, for example, when the speed is being changed during start/stop through ramp up/down.

When bit 08=1, the current speed of the motor corresponds to the set speed reference value.

Bit 09, Local operation/Bus control

Bit 09=0 indicates that the adjustable frequency drive has been stopped with [Stop] on the LCP, or that [Linked to hand] or [Local] has been selected in 3-13 Reference Site.

When bit 09=1, the adjustable frequency drive can be controlled through the serial interface.

Bit 10, Out of frequency limit/Frequency limit OK

When bit 10=0, the output frequency is outside the limits set in 4-52 Warning Speed Low and 4-53 Warning Speed High.

When bit 10=1, the output frequency is within the indicated limits.

Bit 11, No operation/Operation

When bit 11=0, the motor does not turn.

When bit 11=1, the adjustable frequency drive has a start signal, or the output frequency is higher than 0 Hz.

Bit 12, Drive OK/Stopped, autostart

When bit 12=0, there is no temporary overloading of the inverter.

When bit 12=1, the inverter has stopped due to overloading. However, the adjustable frequency drive has not switched off (trip) and starts again after the overloading has ended.

Bit 13, Voltage OK/Voltage exceeded

When bit 13=0, the voltage limits of the adjustable frequency drive are not exceeded.

When bit 13=1, the direct voltage in the intermediate circuit of the adjustable frequency drive is too low or too high.

Bit 14, Torque OK/Torque exceeded

When bit 14=0, the motor torque is below the limit selected in 4-16 Torque Limit Motor Mode and 4-17 Torque Limit Generator Mode.

When bit 14=1, the limit selected in 4-16 *Torque Limit Motor Mode* or 4-17 *Torque Limit Generator Mode* is exceeded.

Bit 15, Timer OK/Timer exceeded

When bit 15=0, the timers for the thermal motor protection and thermal adjustable frequency drive protection have not exceeded 100%.

When bit 15=1, one of the timers has exceeded 100%.

3.9 System Design Checklist

Table 3.50 provides a checklist for integrating an adjustable frequency drive into a motor control system. The list is intended as a reminder of the general categories and options necessary for specifying the system requirements.

Category	Details	Notes	<input checked="" type="checkbox"/>
FC Model			
Power			
	Volts		
	Current		
Physical			
	Dimensions		
	Weight		
Ambient operating conditions			
	Temperature		
	Altitude		
	Humidity		
	Air quality/dust		
	Derating requirements		
Enclosure size			
Input			
Cables			
	Type		
	Length		
Fuses			
	Type		
	Size		
	Rating		
Options			
	Connectors		
	Contacts		
	Filters		
Output			
Cables			
	Type		
	Length		
Fuses			
	Type		
	Size		
	Rating		
Options			
	Filters		
Control			
Wiring			
	Type		
	Length		

Category	Details	Notes	<input type="checkbox"/>
	Terminal connections		<input type="checkbox"/>
Communication			
	Protocol		<input type="checkbox"/>
	Connection		<input type="checkbox"/>
	Wiring		<input type="checkbox"/>
Options			
	Connectors		<input type="checkbox"/>
	Contacts		<input type="checkbox"/>
	Filters		<input type="checkbox"/>
Motor			
	Type		<input type="checkbox"/>
	Rating		<input type="checkbox"/>
	Voltage		<input type="checkbox"/>
	Options		<input type="checkbox"/>
Special tools and equipment			
	Moving and storage		<input type="checkbox"/>
	Mounting		<input type="checkbox"/>
	Electrical connection		<input type="checkbox"/>

Table 3.50 System Design Checklist

4 Application Examples

4

4.1 Application Feature Overview

The VLT® AQUA Drive FC 202 is designed for water and wastewater applications. The wide range of standard and optional features includes optimized SmartStart and quick menu with a focus on water and wastewater applications:

- **Cascade control**
Basic cascade control is built-in as standard, with a capacity of up to three pumps. Cascade control provides speed control of a single pump in a multi-pump system. This is a cost attractive solution, for example for booster sets. Systems with multiple variable-speed pumps require the extended cascade controller (MCO 101) or the advanced cascade controller (MCO 102).
- **Motor alternation**
The motor alternation functionality is suitable for applications with two motors or two pumps sharing one adjustable frequency drive.
- **Flow compensation**
Flow compensation adapts the setpoint according to the flow and enables mounting of the pressure sensor close to the pump.
- **Dry-run detection**
The feature prevents damage of the pump by avoiding dry-running and pump overheat
- **End-of-curve detection**
The feature detects when the pump is running at maximum speed and the setpoint cannot be reached for a user-defined time period.
- **Deragging**
This preventive or reactive cleaning feature is designed for pumps in wastewater applications. See *chapter 4.2.3 29-1* Deragging Function* for details.
- **Initial/final ramps**
Programming of short ramp times to/from minimum speed protects bearings, and ensures sufficient cooling in applications with submersible pumps.
- **Check valve protection**
A slow ramp-down rate protects check valves and prevents water hammering
- **STO**
STO enables safe stop (coast) when a critical situation arises.
- **Low-flow detection**
This feature detects no-flow or low-flow conditions of the system.
- **Sleep mode**
The sleep mode feature saves energy by stopping the pump when there is no demand.
- **Pipe fill mode**
Pipe fill mode comprises functionalities to fill pipes smoothly and avoid water hammering. This feature provides different modes for horizontal and vertical pipes.
- **Real time clock**
- **Smart logic control (SLC)**
SLC comprises programming of a sequence consisting of events and actions. SLC offers a wide range of PLC functions using comparators, logic rules and timers.
- **Pre/post Lube**
See *chapter 4.2.4 Pre/post Lube* for details.
- **Flow confirmation**
See *chapter 4.2.5 29-5* Flow Confirmation* for details.
- **Advanced minimum speed monitoring for submersible pumps**
See *chapter 4.2.6 Advanced Minimum Speed Monitoring for Submersible Pumps* for details.
- **Preventive maintenance**
The preventive maintenance feature enables programming of scheduled service intervals into the adjustable frequency drive.

4.2 Selected Application Features

4.2.1 SmartStart

With the SmartStart wizard, it is now easier and more cost-efficient to commission the adjustable frequency drive. SmartStart is activated at the first power-up or after a factory reset and guides users through a series of easy steps to ensure the correct and most efficient motor control. The SmartStart can also be started directly via the Quick Menu. Select settings on the 28-language graphical control panel.

- Single pump/motor in open-loop or closed-loop
- Motor alternation: When two motors share one adjustable frequency drive.

- Basic cascade control: Speed control of a single pump in a multi-pump system. This is a cost-attractive solution in, for example, booster sets.
- Master-follower: Control up to eight adjustable frequency drives and pumps to ensure smooth operation of the overall pump system.

4.2.2 Quick Menu Water and Pumps

The quick menu entry water and pumps provides quick access to the most common water and pump features of the VLT® AQUA Drive:

- Special ramps (initial/final ramp, check valve ramp)
- Sleep mode
- Deragging
- Dry-run detection
- End of curve detection
- Flow compensation
- Pipe fill mode for horizontal, vertical and mixed pipe systems
- Control performance
- Minimum speed monitor

4.2.3 29-1* Deragging Function

The purpose of the deragging feature is to free the pump blade of debris in waste water applications so that the pump operates normally.

A deragging event is defined as the time when the adjustable frequency drive starts to derag to when the deragging finishes. When a derag is started, the adjustable frequency drive ramps first to a stop and then an off delay expires before the first cycle begins.

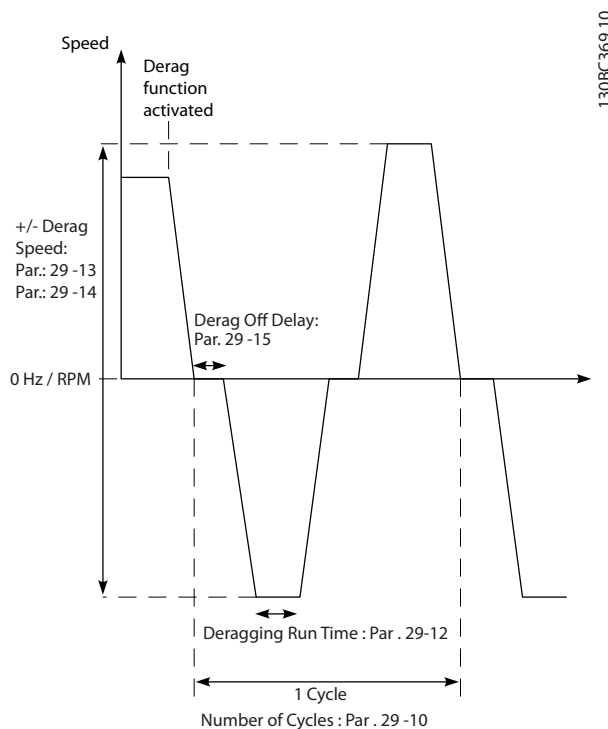


Figure 4.1 Derag Function

If a derag is triggered from an adjustable frequency drive-stopped state, the first off delay is skipped. The deragging event may consist of several cycles. One cycle consisting of one pulse in the reverse direction followed by one pulse in the forward direction. Deragging is considered finished after the specified number of cycles has completed. More specifically, on the last pulse (it will always be forward) of the last cycle, the derag is considered finished after the deragging run time expires (the adjustable frequency drive is running at derag speed). In between pulses, the adjustable frequency drive output coasts for a specified off delay time to let debris in the pump settle.

NOTICE!

Do not enable deragging if the pump cannot operate in reverse direction.

There are three different notifications for an ongoing deragging event:

- Status in the LCP: *Auto Remote Derag*.
- A bit in the extended status word (Bit 23, 80 0000 hex).
- A digital output can be configured to reflect the active deragging status.

Depending on the application and the purpose of using it, this feature can be used as a preventive or reactive measure and can be triggered/started in the following ways:


- On each start command (29-11 *Derag at Start/Stop*)
- On each stop command (29-11 *Derag at Start/Stop*)
- On each start/stop command (29-11 *Derag at Start/Stop*)
- On digital input (parameter group 5-1* *Digital Inputs*)
- On drive action with the smart logic controller (13-52 *SL Controller Action*)
- As timed action (parameter group 23-** *Time-based Functions*)
- On high power (parameter group 29-2* *Derag Power Tuning*)

4.2.4 Pre/post Lube

Certain motors require lubrication of their mechanical parts before and during running to prevent damage/wear. This is especially the case when the motor has not been running for extended periods of time. Pre-lube also supports applications that may require certain exhaust fans to be running. The Pre-lube feature signals an external device to start performing a specific action for a user-defined period of time beginning at the rising edge of a run command (for example, start request). Furthermore, a start delay (1-71 *Start Delay*) can be entered such that the pre-lube only occurs while the adjustable frequency drive is stopped and the pre-lube completes just before the adjustable frequency drive starts to ramp up. Pre-lube can also be configured such that the external device remains signaled at all times when the adjustable frequency drive is in a running state or such that the signal stays on after the motor has stopped (29-42 *Post Lube Time*). Application examples include a device to lubricate the mechanical parts of a motor/pump or some type of exhaust fan unit.

An example use case for a lubrication device would be to start lubrication at the rising edge of a start request. Delay the start for a period of time and stop lubrication when the delay expires and the adjustable frequency drive starts.

Figure 4.2 shows a different usage of the feature. In this case, the delay expires while the adjustable frequency drive is already ramping up. See the related parameters in Table 4.1.

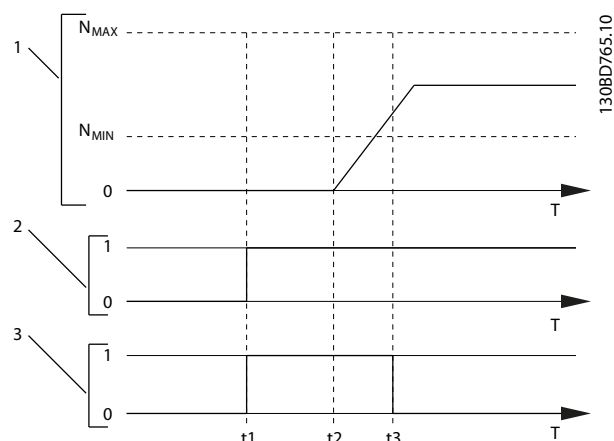

1	Speed curve
2	Start command (for example, terminal 18)
3	Pre lube output signal
t ₁	Start command issued (for example, terminal 18 is set active). The start delay timer (1-71 <i>Start Delay</i>) and the pre lube timer (29-41 <i>Pre Lube Time</i>).
t ₂	The start delay timer expires. The adjustable frequency drive starts to ramp up.
t ₃	The pre-lube timer (29-41 <i>Pre Lube Time</i>) expires.

Figure 4.2 Pre/post Lube Function Example


Parameter and Name	Description	Settings	Unit
29-40 <i>Pre/Post Lube Function</i>	Select the pre/post lube function. Use 1-71 <i>Start Delay</i> to set the delay before the motor will start ramping.	[0]*Disabled [1] Pre-lube only [2] Pre & running [3] Pre & running & post	-
29-41 <i>Pre Lube Time</i>	Enter the duration of the signal after the start signal. Used only when [1] <i>Pre lube Only</i> is selected in 29-40 <i>Pre/Post Lube Function</i> .	0-600 (*10)	s
29-42 <i>Post Lube Time</i>	Select the duration of the signal after the motor has stopped. Used only when [3] <i>Pre & running & post</i> is selected in 29-40 <i>Pre/Post Lube Function</i> .	0-600 (*10)	s

Table 4.1 Pre/Post Lube Parameters

4.2.5 29-5* Flow Confirmation

The flow confirmation feature is designed for applications where there is a need for the motor/pump to run while waiting for an external event. The flow confirmation monitor expects to get a digital input from a sensor on a gate valve, flow switch, or a similar external device indicating that the device is in the open position and flow is possible. In *29-50 Validation Time*, a user defines how long the VLT® AQUA Drive FC 202 waits for the digital input signal from the external device to confirm the flow. After the flow is confirmed, the adjustable frequency drive checks the signal again after the flow verification time and then runs normally. The LCP status reads "Verifying flow" while the flow monitor is active.

The adjustable frequency drive trips with the alarm *Flow Not Confirmed*, if the expected digital input signal becomes inactive before either the flow validation time or the flow verification time expires.

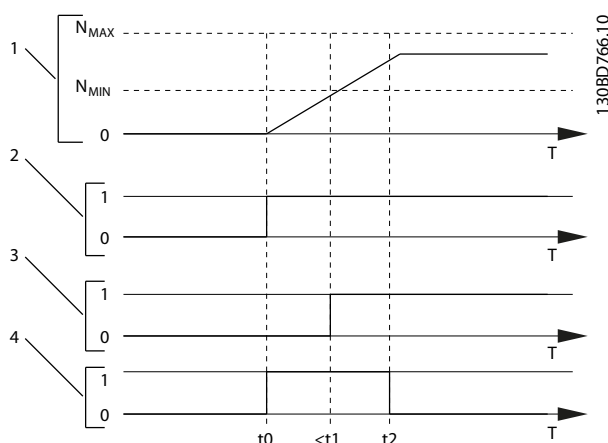

1	Speed curve
2	Start command (for example, terminal 18)
3	Digital signal from an external device that confirms that the flow is possible.
4	Flow verification
t_0	Start command issued (for example, terminal 18 is set active)
t_1	Digital signal from an external device becomes active before <i>29-50 Validation Time</i> expires.
t_2	When <i>29-51 Verification Time</i> passes, the adjustable frequency drive checks the signal from the external device again and then runs normally.

Figure 4.3 Flow Confirmation

Parameter and Name	Description	Settings	Unit
<i>29-50 Validation Time</i>	The digital input must be active during the validation time.	0.1–999.0 (*size dependent)	s
<i>29-51 Verification Time</i>	Flow will be confirmed if, at the end of the verification time, the digital input is still active.	0.1–255.0 (*15)	s

Table 4.2 Flow Confirmation Parameters

NOTICE!


The parameters are only visible on the LCP when a digital input is configured as flow confirmation.

4.2.6 Advanced Minimum Speed Monitoring for Submersible Pumps

Some pumps are very sensitive to operating at low speed. Typical reasons for this are insufficient cooling or lubrication at low speed.

Under overload conditions, the adjustable frequency drive protects itself using its integral protection features, which include lowering the speed. For example, the current limit controller can lower the speed. This means that, in some cases, the speed may go lower than the speed specified in *4-11 Motor Speed Low Limit [RPM]* and *4-12 Motor Speed Low Limit [Hz]*.

The advanced minimum-speed monitoring feature trips the adjustable frequency drive if the speed drops below a certain value. If the pump motor of the pump does not reach the speed specified in *1-86 Trip Speed Low [RPM]* within the time specified in *1-79 Pump Start Max Time to Trip* (ramping up takes too long), the adjustable frequency drive trips. Timers for *1-71 Start Delay* and *1-79 Pump Start Max Time to Trip* start at the same time when the start command is issued. For instance, this means that if the value in *1-71 Start Delay* is more than or equal to the value in *1-79 Pump Start Max Time to Trip*, the adjustable frequency drive never starts.

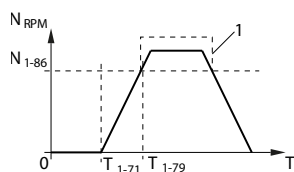

T ₁₋₇₁	1-71 Start Delay.
T ₁₋₇₉	1-79 Pump Start Max Time to Trip. This time includes the time in T ₁₋₇₁ .
N ₁₋₈₆	1-86 Trip Speed Low [RPM]. If the speed drops below this value during normal operation, the adjustable frequency drive trips.
1	Normal operation.

Figure 4.4 Advanced Minimum Speed Monitoring

4.3 Application Set-up Examples

The examples in this section are intended as a quick reference for common applications.

- Parameter settings are the regional default values unless otherwise indicated (selected in *0-03 Regional Settings*).
- Parameters associated with the terminals and their settings are shown next to the drawings.
- Required switch settings for analog terminals A53 or A54 are also shown.


NOTICE!

When the optional STO feature is used, a jumper wire may be required between terminal 12 (or 13) and terminal 37 for the adjustable frequency drive to operate when using factory default programming values.

SLC Application Example

One sequence 1:

1. Start.
2. Ramp-up.
3. Run at reference speed 2 s.
4. Ramp-down.
5. Hold shaft until stop.

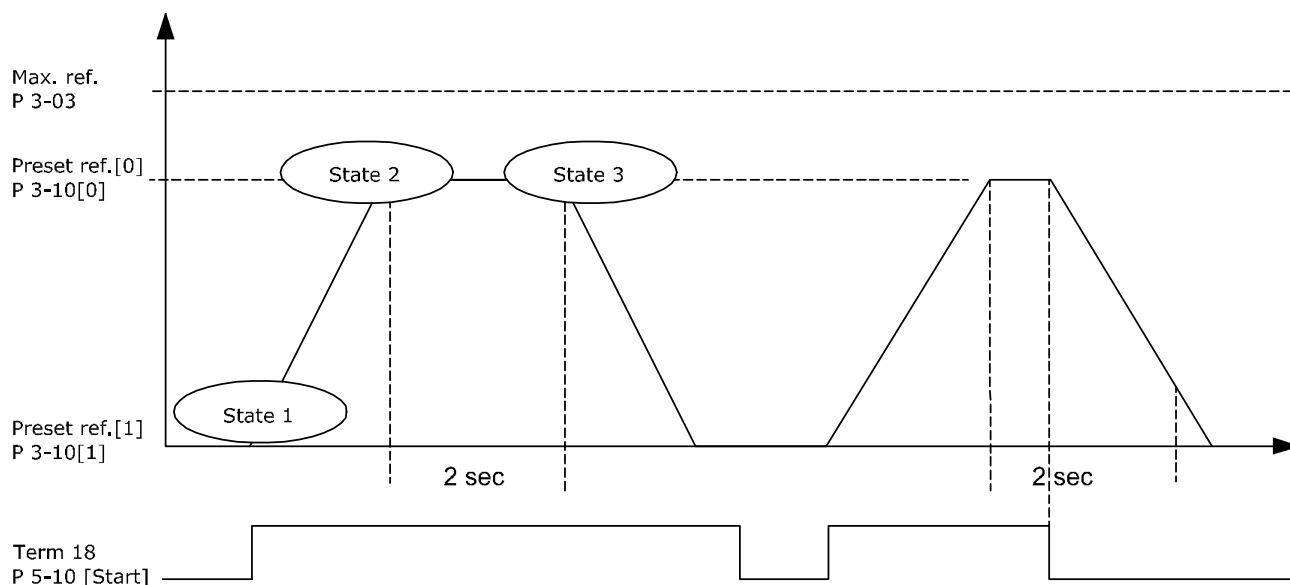

130BA157.11

Figure 4.5 Ramp-up/Ramp-down

Set the ramping times in 3-41 Ramp 1 Ramp-up Time and 3-42 Ramp 1 Ramp-down Time to the desired times

$$t_{ramp} = \frac{t_{acc} \times n_{norm} (var. 1 - 25)}{ref [RPM]}$$

Set terminal 27 to [0] No Operation (5-12 Terminal 27 Digital Input)

Set preset reference 0 to first preset speed (3-10 Preset Reference [0]) in percentage of maximum reference speed (3-03 Maximum Reference). Example: 60%

Set preset reference 1 to second preset speed (3-10 Preset Reference [1] Example: 0% (zero).

Set the timer 0 for constant running speed in 13-20 SL Controller Timer [0]. Example: 2 s

Set Event 1 in 13-51 SL Controller Event [1] to [1] True.

Set Event 2 in 13-51 SL Controller Event [2] to [4] On Reference.

Set Event 3 in 13-51 SL Controller Event [3] to [30] Time Out 0.

Set Event 4 in 13-51 SL Controller Event [4] to [0] False.

Set Action 1 in 13-52 SL Controller Action [1] to [10] Select preset 0.


Set Action 2 in 13-52 SL Controller Action [2] to [29] Start Timer 0.

Set Action 3 in 13-52 SL Controller Action [3] to [11] Select preset 1.

Set Action 4 in 13-52 SL Controller Action [4] to [1] No Action.

Set the in 13-00 SL Controller Mode to ON.

Start/stop command is applied on terminal 18. If the stop signal is applied, the adjustable frequency drive ramps down and goes into free mode.

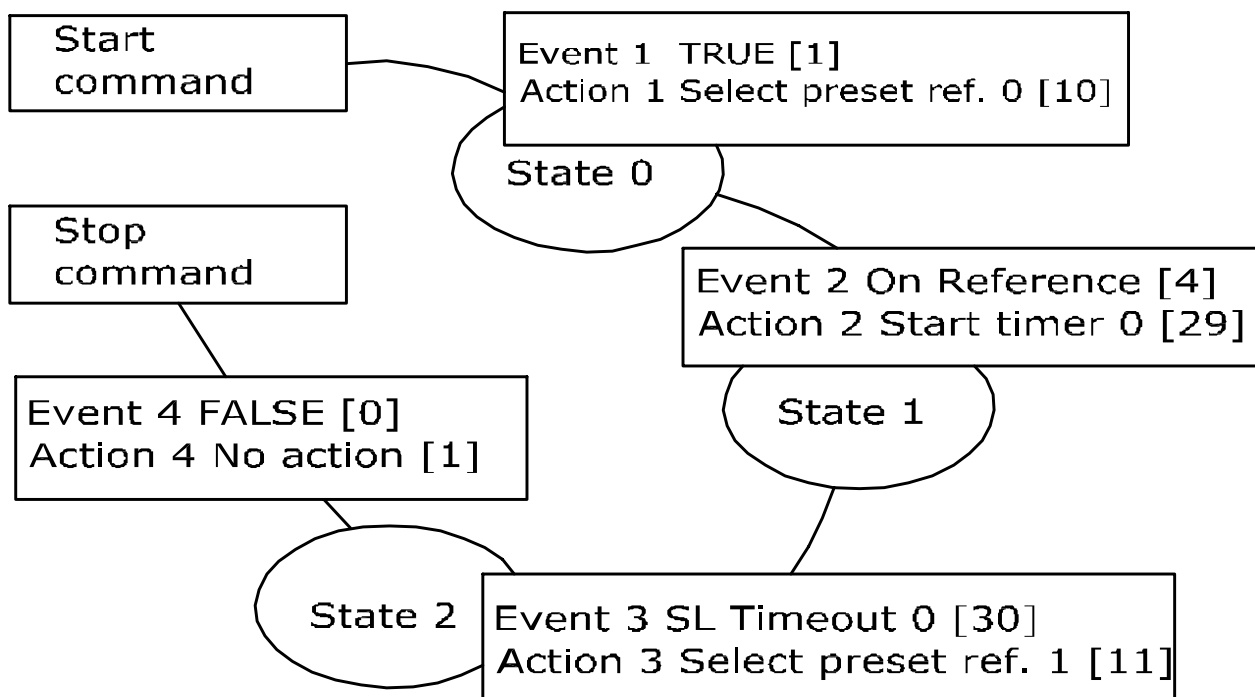

130BA148.11

Figure 4.6 SLC Application Example

4.3.1 Submersible Pump Application

The system consists of a submersible pump controlled by a Danfoss VLT® AQUA Drive and a pressure transmitter. The transmitter gives a 4-20 mA feedback signal to the adjustable frequency drive, which keeps a constant pressure by controlling the speed of the pump. To design an adjustable frequency drive for a submersible pump application, there are a few important issues to consider. Select the adjustable frequency drive according to motor current.

1. The motor is a so-called *CAN motor* with a stainless steel can between the rotor and stator. There is a larger and a more magnetic resistant air-gap than on a normal motor, hence a weaker field, which results in the motors being designed with a higher rated current than a normal motor with similar rated power.
2. The pump contains thrust bearings that are damaged when running below minimum speed, which is normally 30 Hz.
3. The motor reactance is nonlinear in submersible pump motors and, therefore, automatic motor adaption (AMA) may not be possible. Normally, submersible pumps are operated with long motor

cables that might eliminate the nonlinear motor reactance and enable the adjustable frequency drive to perform AMA. If AMA fails, the motor data can be set from parameter group 1-3* *Adv. Motor Data* (see the motor datasheet). Be aware that, if AMA has succeeded, the adjustable frequency drive will compensate for the voltage drop in the long motor cables. This means that if the advanced motor data are set manually, the length of the motor cable must be considered to optimize system performance.

4. It is important that the system be operated with a minimum of wear and tear on the pump and motor. A Danfoss sine-wave filter can lower the motor insulation stress and increase lifetime (check actual motor insulation and the adjustable frequency drive dU/dt specification). Note that most manufacturers of submersible pumps require the use of output filters.
5. EMC performance can be difficult to achieve due to the fact that the special pump cable, which is able to withstand the wet conditions in the well is normally non-shielded. A solution could be to use a shielded cable above the well and fix the shield to the well pipe if it is made of steel. A sine-wave filter also reduces the EMI from non-shielded motor cables.

The special CAN motor is used due to the wet installation conditions. The adjustable frequency drive needs to be designed for the system according to output current to be able to run the motor at nominal power.

To prevent damage to the thrust bearings of the pump, and to ensure sufficient motor cooling as quickly as possible, it is important to ramp the pump from stop to minimum speed as quick as possible. Well-known manufacturers of submersible pumps recommend that the pump is ramped to min. speed (30 Hz) in max. 2–3 s. The VLT® AQUA Drive FC 202 is designed with initial and final ramp for these applications. The initial and final ramps are two individual ramps, where initial ramp, if enabled, ramps the motor from stop to minimum speed and automatically switches to normal ramp, when minimum speed is reached. Final ramp will do the opposite from minimum speed to stop in a stop situation. Consider also enabling advanced minimum speed monitoring as described in chapter 4.2 Selected Application Features.

To achieve additional pump protection, use the dry-run detection function. Refer to the *Programming Guide* for further information.

Pipe-fill mode can be enabled to prevent water hammering. The Danfoss adjustable frequency drive is capable of filling vertical pipes using the PID controller to ramp up the pressure slowly with a user specified rate (units/second). If enabled, the adjustable frequency drive enters pipe-fill mode when it reaches minimum speed after start-up. The pressure is slowly ramped up until it reaches a user-specified filled set point, where the adjustable frequency drive automatically disables pipe fill mode and continues in normal closed-loop operation.

Electrical Wiring

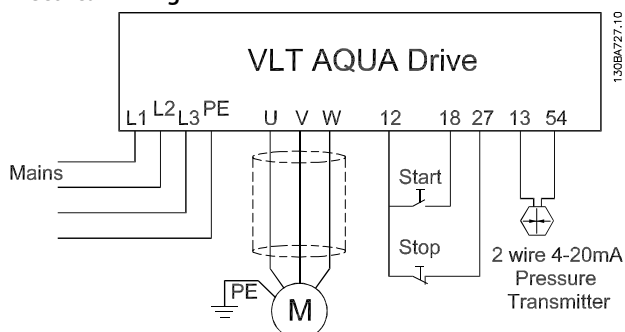


Figure 4.7 Wiring for Submersible Pump Application

NOTICE!

Set the analog input 2, (terminal 54) format to mA. (switch 202).

Parameter Settings

Parameter
1-20 Motor Power [kW]/1-21 Motor Power [HP]
1-22 Motor Voltage
1-24 Motor Current
1-28 Motor Rotation Check
Enable reduced automatic motor adaptation in 1-29 Automatic Motor Adaptation (AMA)

Table 4.3 Relevant Parameters for Submersible Pump Application

Parameter	Setting
3-02 Minimum Reference	The minimum reference unit matches the unit in 20-12 Reference/Feedback Unit
3-03 Maximum Reference	The maximum reference unit matches the unit in 20-12 Reference/Feedback Unit
3-84 Initial Ramp Time	(2 s)
3-88 Final Ramp Time	(2 s)
3-41 Ramp 1 Ramp-up Time	(8 s depending on size)
3-42 Ramp 1 Ramp-down Time	(8 s depending on size)
4-11 Motor Speed Low Limit [RPM]	(30 Hz)
4-13 Motor Speed High Limit [RPM]	(50/60 Hz)
Use the Closed-loop wizard under Quick Menu_Function_Set-up, to easily set up the feedback settings in the PID controller.	

Table 4.4 Example of Settings for Submersible Pump Application

Parameter	Setting
29-00 Pipe Fill Enable	
29-04 Pipe Fill Rate	(Feedback units/s)
29-05 Filled Setpoint	(Feedback units)

Table 4.5 Example of Settings for Pipe-Fill Mode

Performance

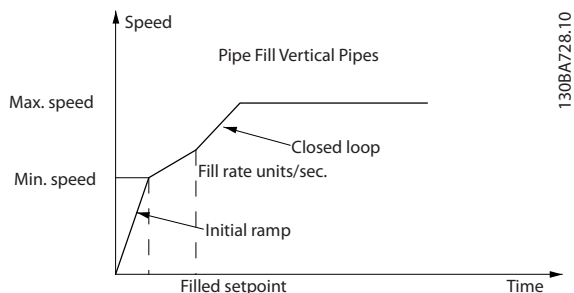


Figure 4.8 Pipe Fill-Mode, Performance Curve

4.3.2 BASIC Cascade Controller

The BASIC cascade controller is used for pump applications where a certain pressure (head) or level must be maintained over a wide dynamic range. Running a large pump at variable speeds over a wide range is not an ideal solution because of low pump efficiency at lower speeds. In a practical way, the limit is 25% of the rated full-load speed for the pump.

In the BASIC cascade controller, the adjustable frequency drive controls a variable-speed (lead) motor as the variable-speed pump and can stage up to two additional constant-speed pumps on and off. Connect the additional constant-speed pumps directly to line power or via soft starters. By varying the speed of the initial pump, variable-speed control of the entire system is provided. The variable-speed maintains constant pressure, which results in reduced system stress and quieter operation in pumping systems.

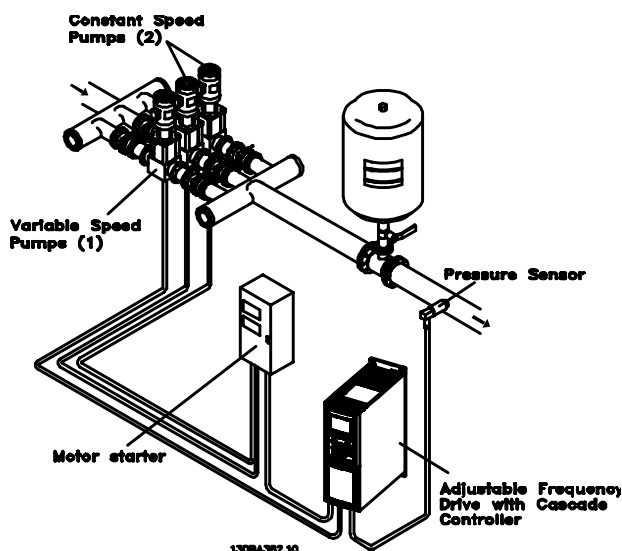


Figure 4.9 BASIC Cascade Controller

Fixed-lead pump

The motors must be of equal size. The BASIC cascade controller allows the adjustable frequency drive to control up to three equal pumps using the adjustable frequency drive's two built-in relays. When the variable-pump (lead) is connected directly to the adjustable frequency drive, the two built-in relays control the other two pumps. When lead pump alternations are enabled, pumps are connected to the built-in relays and the adjustable frequency drive can operate two pumps.

Lead pump alternation

The motors must be of equal size. This function makes it possible to cycle the adjustable frequency drive between the pumps in the system (maximum of 2 pumps). In this operation, the run time between pumps is equalized, reducing the required pump maintenance and increasing reliability and lifetime of the system. The alternation of the lead pump can take place at a command signal or at staging (adding another pump).

The command can be a manual alternation or an alternation event signal. If the alternation event is selected, the lead pump alternation takes place every time the event occurs. Selections include:

- Whenever an alternation timer expires;
- at a predefined time of day;
- or when the lead pump goes into sleep mode.

The actual system load determines staging.

A separate parameter limits alternation only to take place if total capacity required is >50%. Total pump capacity is determined as lead pump plus fixed-speed pumps capacities.

Bandwidth management

In cascade control systems, to avoid frequent switching of fixed-speed pumps, the desired system pressure is kept within a bandwidth rather than at a constant level. The staging bandwidth provides the required bandwidth for operation. When a large and quick change in system pressure occurs, the override bandwidth overrides the staging bandwidth to prevent immediate response to a short duration pressure change. An override bandwidth timer can be programmed to prevent staging until the system pressure has stabilized and normal control is established.

When the cascade controller is enabled and the adjustable frequency drive issues a trip alarm, the system head is maintained by staging and destaging fixed-speed pumps. To prevent frequent staging and destaging and minimize pressure fluctuations, a wider fixed-speed bandwidth is used instead of the staging bandwidth.

4.3.3 Pump Staging with Lead Pump Alternation

With lead pump alternation enabled, a maximum of two pumps are controlled. At an alternation command, the PID stops, the lead pump ramps to minimum frequency (f_{\min}) and, after a delay, it ramps to maximum frequency (f_{\max}). When the speed of the lead pump reaches the de-staging frequency, the fixed-speed pump is cut out (de-staged). The lead pump continues to ramp up and then ramps down to a stop and the two relays are cut out.

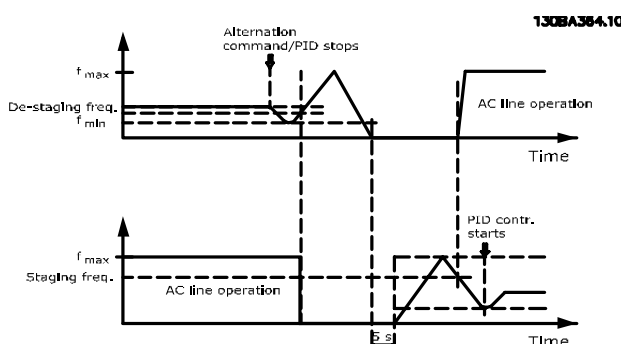


Figure 4.10 Lead Pump Alternation

After a time delay, the relay for the fixed-speed pump cuts in (staged) and this pump becomes the new lead pump. The new lead pump ramps up to maximum speed and then down to minimum speed. When ramping down and reaching the staging frequency, the old lead pump is now cut in (staged) on line power as the new fixed-speed pump.

If the lead pump has been running at minimum frequency (f_{\min}) for a programmed amount of time, with a fixed-speed pump running, the lead pump contributes little to the system. When programmed value of the timer expires, the lead pump is removed, avoiding water heating problems.

4.3.4 System Status and Operation

If the lead pump goes into sleep mode, the function is displayed on the LCP. It is possible to alternate the lead pump into a sleep mode condition.

When the cascade controller is enabled, the operation status for each pump and the cascade controller is displayed on the LCP. Information displayed includes:

- Pumps status is a readout of the status for the relays assigned to each pump. The display shows pumps that are disabled, off, running on the adjustable frequency drive, or running on the line power/motor starter.
- Cascade status is a readout of the status for the cascade controller. The display shows that the cascade controller is disabled, all pumps are off, and emergency has stopped all pumps, all pumps are running, fixed-speed pumps are being staged/de-staged and lead pump alternation is occurring.
- De-stage at no-flow ensures that all fixed-speed pumps are stopped individually until the no-flow status disappears.

4.3.5 Cascade Controller Wiring Diagram

Figure 4.11 shows an example with the built-in BASIC cascade controller with one variable-speed pump (lead) and two fixed-speed pumps, a 4–20 mA transmitter and system safety interlock.

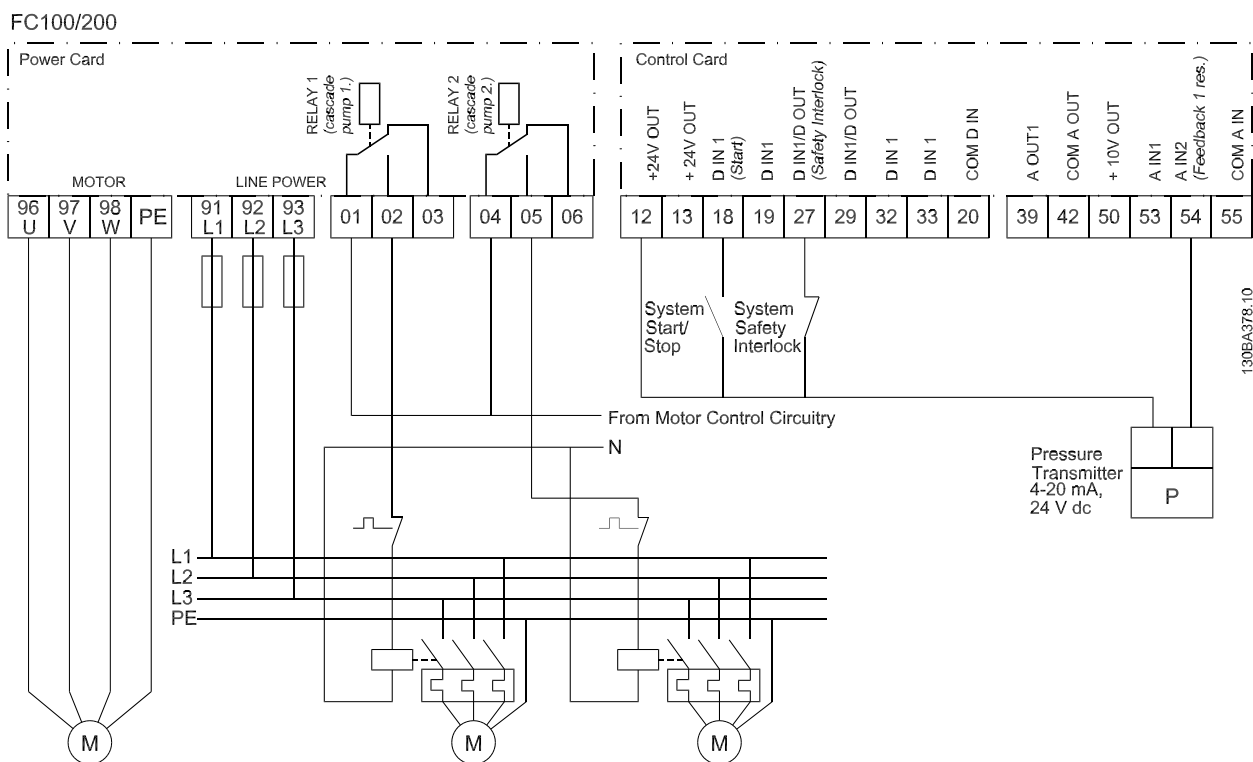


Figure 4.11 Cascade Controller Wiring Diagram

4.3.6 Fixed Variable-speed Pump Wiring Diagram

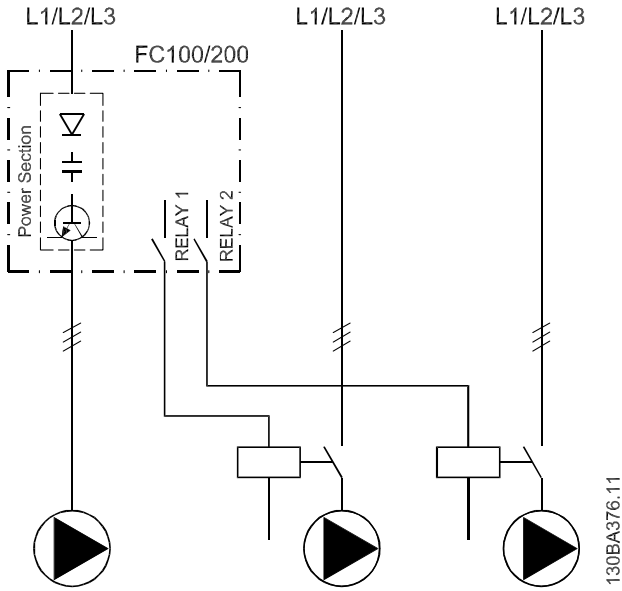


Figure 4.12 Fixed Variable-speed Pump Wiring Diagram

- Relay 1 (R1) and Relay 2 (R2) are the built-in relays in the adjustable frequency drive.
- When all relays are de-energized, the first built-in relay that is energized cuts in the contactor corresponding to the pump controlled by the relay. For example, Relay 1 cuts in contactor K1, which becomes the lead pump.
- K1 blocks for K2 via the mechanical interlock, preventing line power from being connected to the output of the adjustable frequency drive (via K1).
- Auxiliary break contact on K1 prevents K3 from cutting in.
- Relay 2 controls contactor K4 for on/off control of the fixed-speed pump.
- At alternation, both relays de-energize and now Relay 2 is energized as the first relay.

For a detailed description of commissioning for mixed-pump and master/slave applications, refer to *VLT® Cascade Controller Options MCO 101/102 Instruction Manual*.

4.3.7 Lead Pump Alternation Wiring Diagram

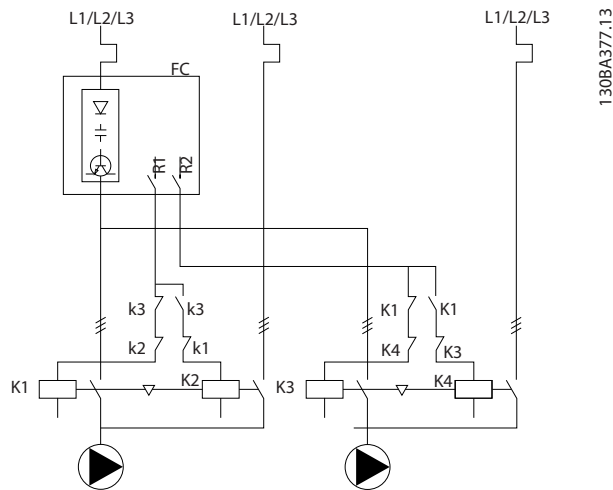


Figure 4.13 Lead Pump Alternation Wiring Diagram

Every pump must be connected to two contactors (K1/K2 and K3/K4) with a mechanical interlock. Thermal relays or other motor protection devices must be applied according to local regulation and/or individual demands.

4.3.8 External Alarm Reset

		Parameters	
		Function	Setting
FC			
+24 V	12	5-11 Terminal 19	[1] Reset
+24 V	13	Digital Input	
* = Default value			
Notes/comments:			
D IN 37 is an option.			
D IN	18		
D IN	19		
COM	20		
D IN	27		
D IN	29		
D IN	32		
D IN	33		
D IN	37		
+10 V	50		
A IN	53		
A IN	54		
COM	55		
A OUT	42		
COM	39		

Table 4.6 External Alarm Reset

4.3.9 Feedback

Parameters	
Function	Setting
6-22 Terminal 54 Low Current	4 mA*
6-23 Terminal 54 High Current	20 mA*
6-24 Terminal 54 Low Ref./Feedb. Value	0*
6-25 Terminal 54 High Ref./Feedb. Value	50*
* = Default value	
Notes/comments: D IN 37 is an option.	

Table 4.7 Analog Current Feedback Transducer

Parameters	
Function	Setting
6-20 Terminal 54 Low Voltage	0.07 V*
6-21 Terminal 54 High Voltage	10 V*
6-24 Terminal 54 Low Ref./Feedb. Value	0*
6-25 Terminal 54 High Ref./Feedb. Value	50*
* = Default value	
Notes/comments: D IN 37 is an option.	

Table 4.8 Analog Voltage Feedback Transducer (3-wire)

Parameters	
Function	Setting
6-20 Terminal 54 Low Voltage	0.07 V*
6-21 Terminal 54 High Voltage	10 V*
6-24 Terminal 54 Low Ref./Feedb. Value	0*
6-25 Terminal 54 High Ref./Feedb. Value	50*
* = Default value	
Notes/comments: D IN 37 is an option.	

Table 4.9 Analog Voltage Feedback Transducer (4-wire)

4.3.10 Speed

Parameters	
Function	Setting
6-10 Terminal 53 Low Voltage	0.07 V*
6-11 Terminal 53 High Voltage	10 V*
6-14 Terminal 53 Low Ref./Feedb. Value	0 RPM
6-15 Terminal 53 High Ref./Feedb. Value	1500 RPM
* = Default value	
Notes/comments: D IN 37 is an option.	

Table 4.10 Analog Speed Reference (Voltage)

		Parameters	
FC		Function	Setting
+24 V	12	6-12 Terminal 53	4 mA*
+24 V	13	Low Current	
D IN	18	6-13 Terminal 53	20 mA*
D IN	19	High Current	
COM	20	6-14 Terminal 53	0 RPM
D IN	27	Low Ref./Feedb. Value	
D IN	29	6-15 Terminal 53	1500 RPM
D IN	32	High Ref./Feedb. Value	
D IN	33	* = Default value	
D IN	37	Notes/comments:	D IN 37 is an option.
+10 V	50		
A IN	53		
A IN	54		
COM	55		
A OUT	42		
COM	39		

Table 4.11 Analog Speed Reference (Current)

4.3.11 Run/Stop

		Parameters	
FC		Function	Setting
+24 V	12	5-10 Terminal 18	[8] Start*
+24 V	13	Digital Input	
D IN	18	5-12 Terminal 27	[7] External interlock
D IN	19	Digital Input	
COM	20	* = Default value	
D IN	27	Notes/comments:	D IN 37 is an option.
D IN	29		
D IN	32		
D IN	33		
D IN	37		
+10 V	50		
A IN	53		
A IN	54		
COM	55		
A OUT	42		
COM	39		

Table 4.13 Run/Stop Command with External Interlock

		Parameters	
FC		Function	Setting
+24 V	12	6-10 Terminal 53	0.07 V*
+24 V	13	Low Voltage	
D IN	18	6-11 Terminal 53	10 V*
D IN	19	High Voltage	
COM	20	6-14 Terminal 53	0 RPM
D IN	27	Low Ref./Feedb. Value	
D IN	29	6-15 Terminal 53	1500 RPM
D IN	32	High Ref./Feedb. Value	
D IN	33	* = Default value	
D IN	37	Notes/comments:	D IN 37 is an option.
+10 V	50		
A IN	53		
A IN	54		
COM	55		
A OUT	42		
COM	39		

Table 4.12 Speed Reference (using a Manual Potentiometer)

		Parameters	
FC		Function	Setting
+24 V	12	5-10 Terminal 18	[8] Start*
+24 V	13	Digital Input	
D IN	18	5-12 Terminal 27	[7] External interlock
D IN	19	Digital Input	
COM	20	* = Default value	
D IN	27	Notes/comments:	If parameter 5-12 Terminal 27 Digital Input is set to [0] no operation, a jumper wire to terminal 27 is not needed.
D IN	29		D IN 37 is an option.
D IN	32		
D IN	33		
D IN	37		
+10 V	50		
A IN	53		
A IN	54		
COM	55		
A OUT	42		
COM	39		

Table 4.14 Run/Stop Command without External Interlock

4

		Parameters	
		Function	Setting
FC +24 V 120 +24 V 130 D IN 180 D IN 190 COM 200 D IN 270 D IN 290 D IN 320 D IN 330 D IN 370 +10 V 500 A IN 530 A IN 540 COM 550 A OUT 420 COM 390 R1 010 020 030 R2 040 050 060	1308B684.10	5-10 Terminal 18 <i>Digital Input</i>	[8] Start*
		5-11 Terminal 19 <i>Digital Input</i>	[52] Run Permissive
		5-12 Terminal 27 <i>Digital Input</i>	[7] External interlock
		5-40 Function <i>Relay</i>	[167] Start command act.
		* = Default value	
		Notes/comments: D IN 37 is an option.	

Table 4.15 Run Permissive

		Parameters	
		Function	Setting
VLT +24 V 120 +24 V 130 D IN 180 D IN 190 COM 200 D IN 270 D IN 290 D IN 320 D IN 330 D IN 370 +10 V 500 A IN 530 A IN 540 COM 550 A OUT 420 COM 390 U-I A53	1308B686.12	1-90 Motor Thermal Protection	[2] Thermistor trip
		1-93 Thermistor Source	[1] Analog input 53
		* = Default Value	
		Notes/comments: If only a warning is desired, parameter 1-90 Motor Thermal Protection should be set to [1] Thermistor warning. D IN 37 is an option.	

Table 4.16 Motor Thermistor

4.3.12 Motor Thermistor



THERMISTOR INSULATION

Risk of personal injury or equipment damage.

- Use only thermistors with reinforced or double insulation to meet PELV insulation requirements.

5 Special Conditions

This section provides detailed data regarding the operating of the adjustable frequency drive in conditions that require derating. In some conditions, derating is performed manually. In other conditions, the adjustable frequency drive performs a degree of automatic derating when necessary. Derating ensures proper performance at critical stages where the alternative can be a trip.

5.1 Manual Derating

5.1.1 When to Consider Derating

Consider derating when any of the following conditions are present:

- Operating above 1000 m (3,300 ft) (low air pressure)
- Low-speed operation
- Long motor cables
- Cables with a large cross-section
- High ambient temperature

For more information, refer to *chapter 5.3 Derating for Ambient Temperature*.

5.1.2 Derating for Running at Low Speed

When a motor is connected to an adjustable frequency drive, it is necessary to make sure that the cooling of the motor is adequate.

The level of heating depends on the load on the motor as well as the operating speed and time.

Constant torque applications (CT mode)

A problem may occur at low RPM values in constant torque applications. In a constant torque application, a motor may overheat at low speeds due to less cooling air from the motor integral fan.

Therefore, if the motor is to be run continuously at an RPM value lower than half the rated value, the motor must be supplied with additional air cooling (or a motor designed for this type of operation may be used).

An alternative is to reduce the load level of the motor by selecting a larger motor. However, the design of the adjustable frequency drive puts a limit on the motor size.

Variable (quadratic) torque applications (VT)

In VT applications such as centrifugal pumps and fans, where the torque is proportional to the square of the speed and the power is proportional to the cube of the speed, there is no need for additional cooling or derating of the motor.

5.1.3 Derating for Low Air Pressure

The cooling capability of air is decreased at a lower air pressure.

Below 1000 m (3,300 ft) altitude, no derating is necessary. At altitudes above 1000 m (3,300 ft), derate the maximum output current (I_{out}) at ambient temperature (T_{AMB}) in accordance with *Figure 5.1*. At altitudes above 2000 m (6,600 ft), contact Danfoss regarding PELV.

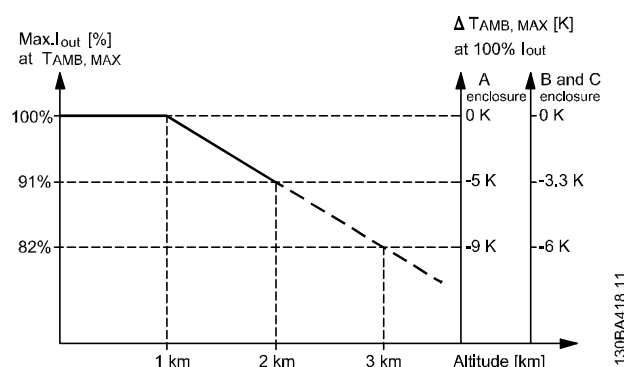


Figure 5.1 Derating of Output Current versus Altitude at $T_{AMB, MAX}$ for Enclosure Sizes A, B and C.

An alternative is to lower the ambient temperature at high altitudes and thereby ensure 100% output current at high altitudes. As an example of how to read the graph, the situation at 2000 m (6,600 ft) is elaborated for an enclosure size B with $T_{AMB, MAX} = 50\text{ }^{\circ}\text{C}$ (122 $^{\circ}\text{F}$). At a temperature of 45 $^{\circ}\text{C}$ (113 $^{\circ}\text{F}$) ($T_{AMB, MAX} - 3.3\text{ K}$), 91% of the rated output current is available. At a temperature of 41.7 $^{\circ}\text{C}$ (107 $^{\circ}\text{F}$), 100% of the rated output current is available.

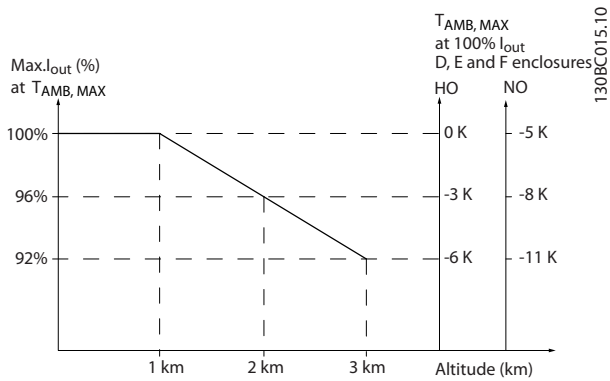


Figure 5.2 Derating of Output Current versus Altitude at $T_{AMB, MAX}$ for Enclosure Sizes D3h.

5.2 Derating for Long Motor Cables or Cables with Larger Cross-Section

NOTICE!

Applicable for adjustable frequency drives up to 90 kW (125 hp) only.
 The maximum cable length for this adjustable frequency drive is 300 m (984 ft) for non-shielded cable, and 150 m (492 ft) for shielded cable.
 The adjustable frequency drive has been designed to work using a motor cable with a rated cross-section. If a cable with a larger cross-section is used, reduce the output current by 5% for every step the cross-section is increased.
 Increased cable cross-section leads to increased capacity to ground, and thus an increased ground leakage current.

5.3 Derating for Ambient Temperature

The average temperature ($T_{AMB, AVG}$) measured over 24 hours must be at least 5 °C (9 °F) lower than the maximum permitted ambient temperature ($T_{AMB, MAX}$). If the adjustable frequency drive operates at high ambient temperatures, then decrease the continuous output current. Derating depends on the switching pattern, which can be set to 60° AVM or SFAVM in 14-00 Switching Pattern.

5.3.1 Derating for Ambient Temperature, Enclosure Size A

60° AVM – Pulse Width Modulation

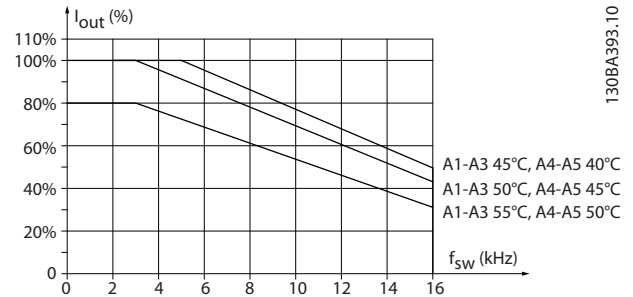


Figure 5.3 Derating of I_{out} for Different $T_{AMB, MAX}$ for Enclosure Size A, using 60° AVM

SFAVM – Stator Frequency Asynchronous Vector Modulation

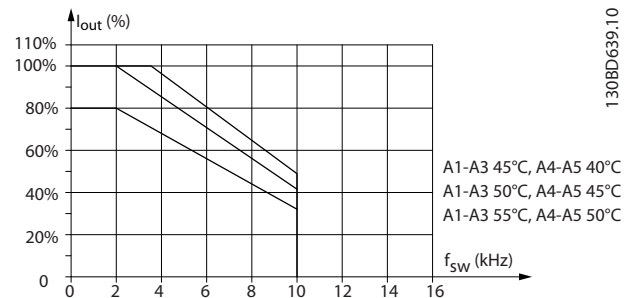


Figure 5.4 Derating of I_{out} for Different $T_{AMB, MAX}$ for Enclosures Type A, using SFAVM

When using only 10 m (33 ft) motor cable or less in enclosure size A, less derating is necessary. This is due to the fact that the length of the motor cable has a relatively high impact on the recommended derating.

60° AVM

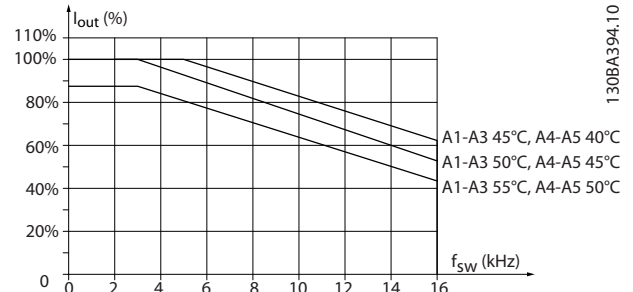


Figure 5.5 Derating of I_{out} for Different $T_{AMB, MAX}$ for Enclosures Type A, using 60° AVM and Maximum 10 m (33 ft) Motor Cable

SFAVM

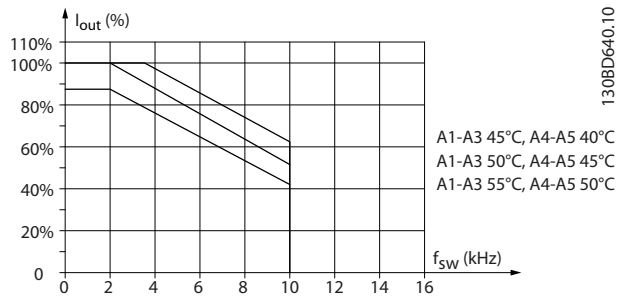


Figure 5.6 Derating of I_{out} for Different $T_{AMB, MAX}$ for Enclosures Type A, using SFAVM and Maximum 10 m (33 ft) Motor Cable

SFAVM – Stator Frequency Asynchronous Vector Modulation

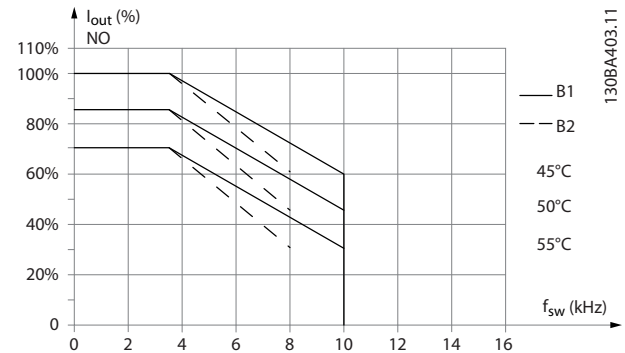


Figure 5.9 Derating of I_{out} for different $T_{AMB, MAX}$ for Enclosure Sizes B1 and B2, using SFAVM in Normal Overload Mode (110% Overtorque)

5.3.2 Derating for Ambient Temperature, Enclosure Size B

Enclosure B, T2, and T4

60° AVM – Pulse Width Modulation

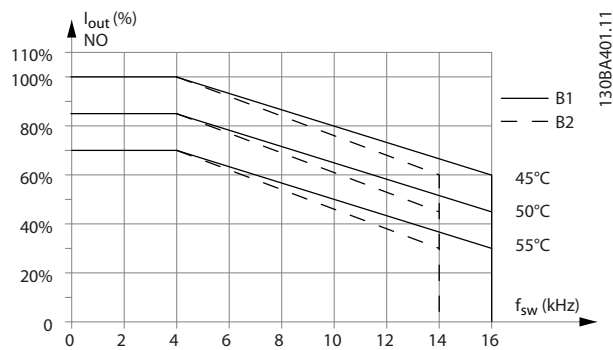


Figure 5.7 Derating of I_{out} for different $T_{AMB, MAX}$ for Enclosure Sizes B1 and B2, using 60° AVM in Normal Overload Mode (110% Overtorque)

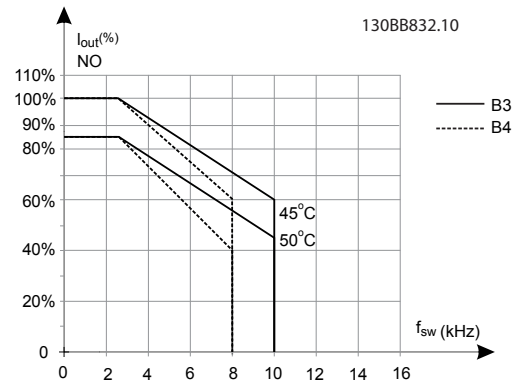


Figure 5.10 Derating of I_{out} for different $T_{AMB, MAX}$ for Enclosure Sizes B3 and B4, using SFAVM in Normal Overload Mode (110% Overtorque)

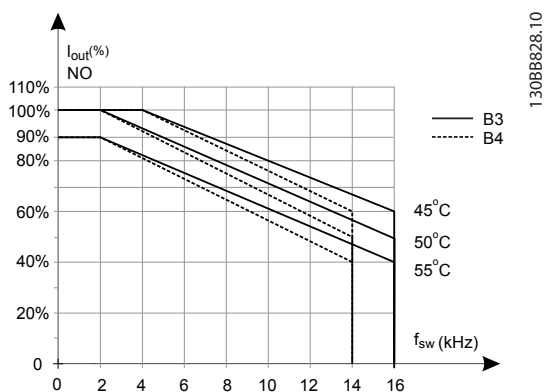


Figure 5.8 Derating of I_{out} for Different $T_{AMB, MAX}$ for Enclosure Sizes B3 and B4, using 60° AVM in Normal Overload Mode (110% Overtorque)

5

Enclosures B, T6
60° AVM – Pulse Width Modulation

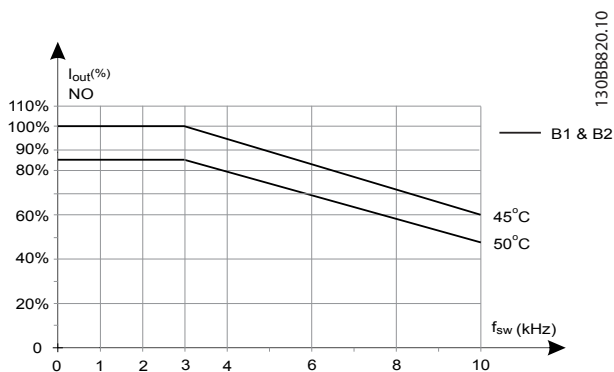


Figure 5.11 Output Current Derating with Switching Frequency and Ambient Temperature for 600 V Adjustable Frequency Drives, Enclosure Sizes B, 60 AVM, NO

Enclosures B, T7
Enclosures B2 and B4, 525–690 V
60° AVM – Pulse Width Modulation

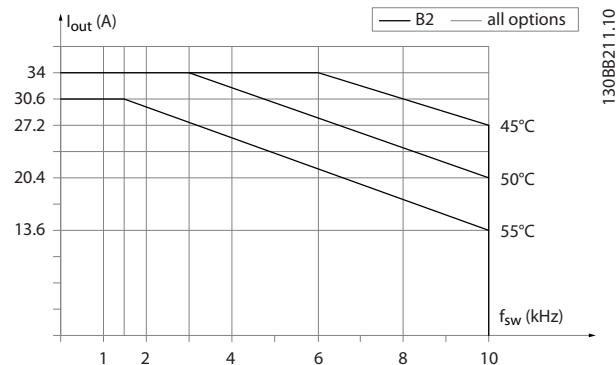


Figure 5.13 Output Current Derating with Switching Frequency and Ambient Temperature for Enclosure Sizes B2 and B4, 60° AVM.

SFAVM – Stator Frequency Asynchronous Vector Modulation

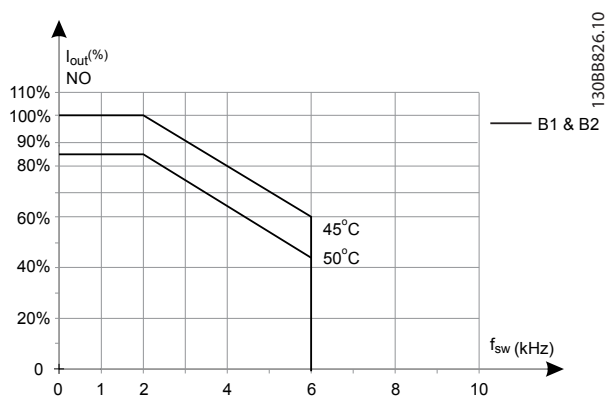


Figure 5.12 Output Current Derating with Switching Frequency and Ambient Temperature for 600 V Adjustable Frequency Drives, Enclosure Size B; SFAVM, NO

SFAVM – Stator Frequency Asynchronous Vector Modulation

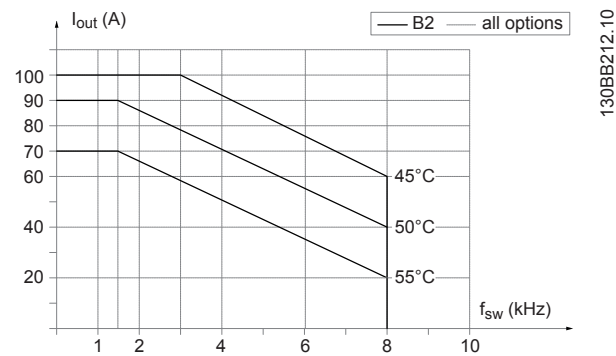


Figure 5.14 Output Current Derating with Switching Frequency and Ambient Temperature for Enclosure Sizes B2 and B4, SFAVM.

5.3.3 Derating for Ambient Temperature, Enclosure Size C

Enclosures C, T2, and T4

60° AVM – Pulse Width Modulation

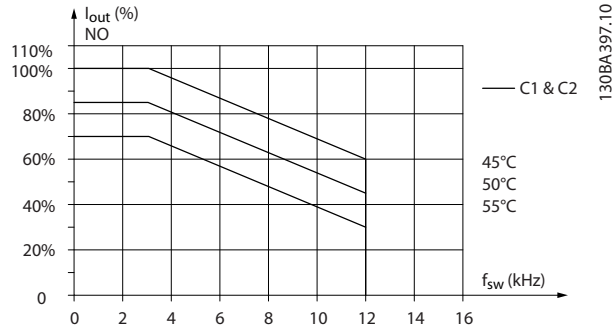


Figure 5.15 Derating of I_{out} for Different $T_{AMB, MAX}$ for Enclosure Sizes C1 and C2, using 60° AVM in Normal Overload Mode (110% Over Torque)

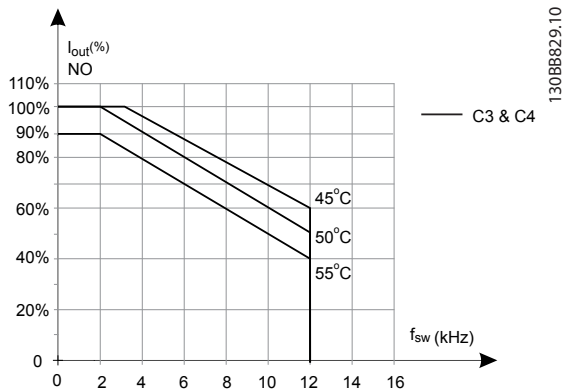


Figure 5.16 Derating of I_{out} for Different $T_{AMB, MAX}$ for Enclosure Sizes C3 and C4, using 60° AVM in Normal Overload Mode (110% Over Torque)

SFAVM – Stator Frequency Asynchronous Vector Modulation

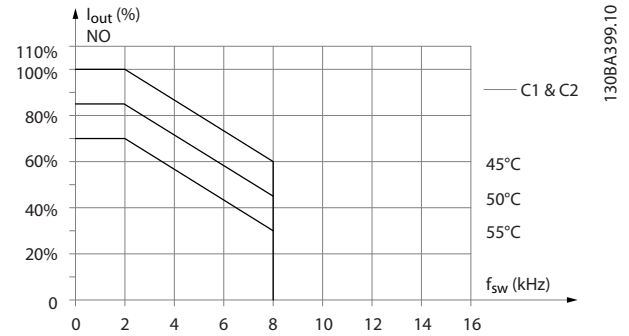


Figure 5.17 Derating of I_{out} for Different $T_{AMB, MAX}$ for Enclosure Sizes C1 and C2, using SFAVM in Normal Overload Mode (110% Over Torque)

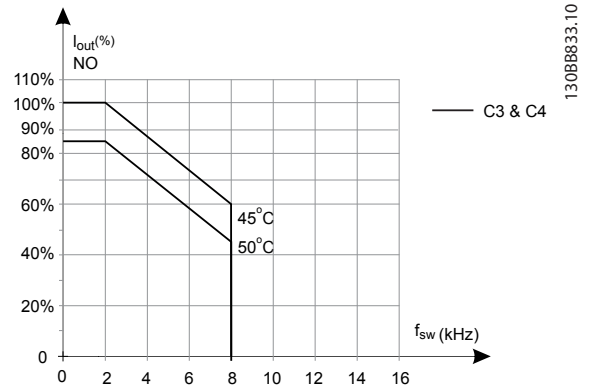


Figure 5.18 Derating of I_{out} for Different $T_{AMB, MAX}$ for Enclosure Sizes C3 and C4, using SFAVM in Normal Overload Mode (110% Over Torque)

5

Enclosure Sizes C, T6
60° AVM – Pulse Width Modulation

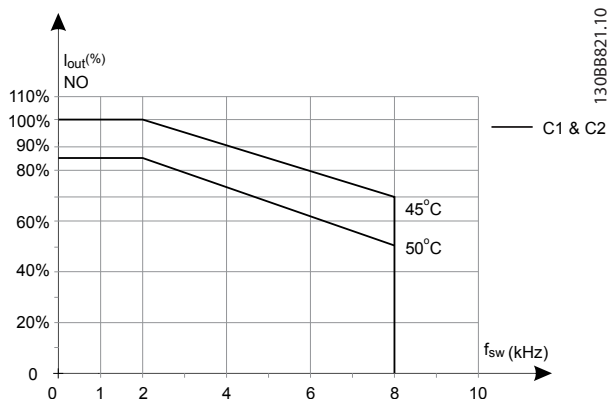


Figure 5.19 Output Current Derating with Switching Frequency and Ambient Temperature for 600 V Adjustable Frequency Drives, Enclosure Sizes C, 60 AVM, NO

Enclosure Size C, T7
60° AVM – Pulse Width Modulation

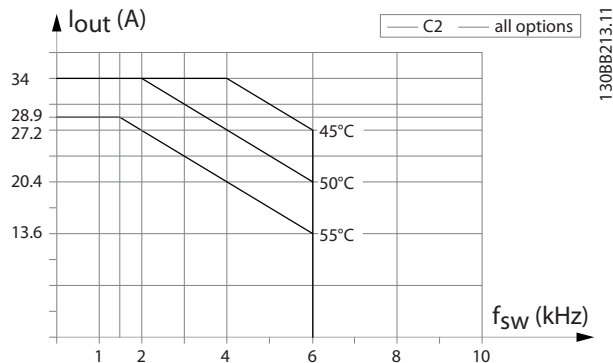


Figure 5.21 Output Current Derating with Switching Frequency and Ambient Temperature for Enclosure Size C2, 60° AVM.

SFAVM – Stator Frequency Asynchronous Vector Modulation

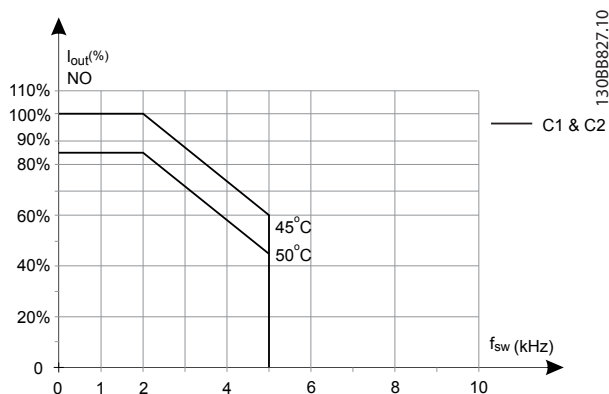


Figure 5.20 Output Current Derating with Switching Frequency and Ambient Temperature for 600 V Adjustable Frequency Drives, Enclosure Sizes C; SFAVM, NO

SFAVM – Stator Frequency Asynchronous Vector Modulation

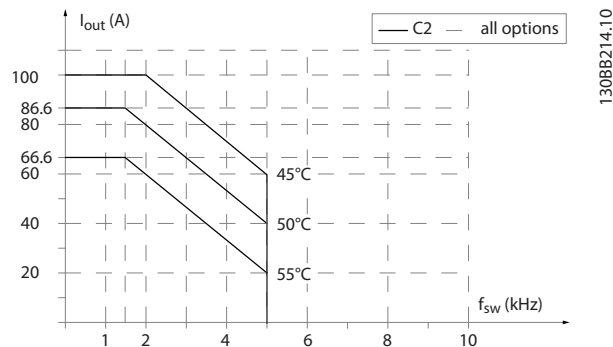


Figure 5.22 Output Current Derating with Switching Frequency and Ambient Temperature for Enclosure Size C2, SFAVM.

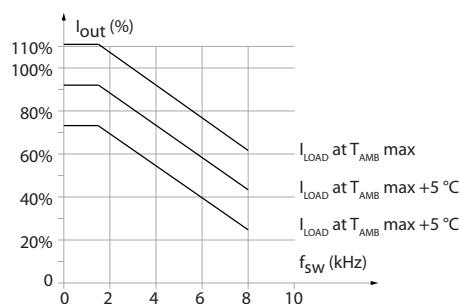


Figure 5.23 Output Current Derating with Switching Frequency and Ambient Temperature for Enclosure Size C3

6 Type code and Selection

6.1 Ordering

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39
F	C	-				P					T										X	X	S	X	X	X	X	A		B		C						D

130B836.10

Figure 6.1 Type Code Example

Configure the right adjustable frequency drive for the right application from the internet-based drive configurator and generate the type code string. The drive configurator automatically generates an 8-digit ordering number for delivery to the local sales office. The drive configurator can also establish a project list with several products and send it to a Danfoss sales representative.

Access the drive configurator on the global Internet site: www.danfoss.com/drives.

6.1.1 Type Code

An example of the type code is:

FC-202PK75T4E20H1BGCXXSXSSXXA0BXCXXXD0

The meaning of the characters in the string can be found in *Table 6.1* and *Table 6.2*. In the example above, a PROFIBUS DP V1 and a 24 V backup option are built-in.

Description	Position	Possible choices ¹⁾
Product group	1-2	FC
Drive series	4-6	202: FC 202
Power rating	8-10	0.25–90 kW (0.34–125 hp)
Phases	11	S: Single phase T: Three phases
AC line voltage	12	2: 200–240 V 4: 380–480 V 6: 525–600 V 7: 525–690 V

Description	Position	Possible choices ¹⁾
Enclosure	13-15	E20: IP20 E55: IP 55/NEMA Type 12 P20: IP20 (with backplate) P21: IP21/NEMA Type 1 (with backplate) P55: IP55/NEMA Type 12 (with backplate) Z20: IP 20 ¹⁾ E66: IP 66
RFI filter	16-17	Hx: No EMC filters built into the adjustable frequency drive H1: Integrated EMC filter. Fulfill EN 55011 Class A1/B and EN/IEC 61800-3 Category 1/2 H2: No additional EMC filter. Fulfill EN 55011 Class A2 and EN/IEC 61800-3 Category 3 H3: Integrated EMC filter. Fulfill EN 55011 class A1/B and EN/IEC 61800-3 Category 1/2 H4: Integrated EMC filter. Fulfill EN 55011 class A1 and EN/IEC 61800-3 Category 2 H5: Marine versions. Fulfill same emissions levels as H2 versions
Brake	18	B: Brake chopper included X: No brake chopper included T: Safe torque off No brake ¹⁾ U: Safe torque off brake chopper ¹⁾
Display	19	G: Graphical local control panel (LCP) N: Numerical local control panel (LCP) X: No local control panel
Coating PCB	20	C: Coated PCB R: Coated PCB + Ruggedized X: No coated PCB

Description	Position	Possible choices ¹⁾
Line power option	21	X: No line power option 1: Line power disconnect 3: Line power disconnect and fuse 5: Line power disconnect, fuse and load sharing 7: Fuse 8: Line power disconnect and load sharing A: Fuse and load sharing D: Load sharing
Adaptation	22	X: Standard cable entries O: European metric thread in cable entries S: Imperial cable entries
Adaptation	23	X: No adaptation
Software release	24-27	SXXX: Latest release – standard software
Software language	28	X: Not used

Table 6.1 Ordering Type Code

- 1) Some of the available choices depend on the enclosure size.
 2) Only available for adjustable frequency drives ≥ 75 kW (100 hp).
 3) Only available for adjustable frequency drives ≥ 355 kW (475 hp).

Description	Position	Possible choices
A options	29-30	AX: No A option A0: MCA 101 PROFIBUS DP V1 (standard) A4: MCA 104 DeviceNet (standard) AN: MCA 121 Ethernet IP AL: MCA 120 ProfiNet AQ: MCA 122 Modbus TCP
B options	31-32	BX: No option BY: MCO 101 extended cascade control BK: MCB 101 general purpose I/O option BP: MCB 105 relay option B0: MCB 109 I/O option with RTC backup B2: MCB 112 PTC thermistor card B4: MCB 114 VLT sensor input
C0 options	33-34	CX: No option
C1 options	35	X: No option R: MCB 113 Ext. relay card 5: MCO 102 Advanced cascade control

Description	Position	Possible choices
C option software	36-37	XX: Standard controller
D options	38-39	DX: No option D0: Extended 24 V DC backup

Table 6.2 Ordering Type Code, Options
NOTICE!

For power sizes over 90 kW (125 hp), see the *VLT® AQUA Drive FC 202 110–1400 kW Design Guide*.

6.1.2 Software Language

The adjustable frequency drive is automatically delivered with a software language package relevant to the region from which it is ordered. The regional language packages are listed in *Table 6.3*.

Language package 1			Language package 2
Brazilian Portuguese	Finnish	Russian	Bahasa Indonesian
Bulgarian	French	Spanish	Chinese
Croatian	German	Serbian	Chinese, traditional
Czech	Greek	Slovenian	German
Danish	Hungarian	Spanish	Japanese
Dutch	Italian	Swedish	Korean
English	Polish	Turkish	Russian
English, US	Romanian	-	Thai

Table 6.3 Software Language Packages

To order adjustable frequency drives with a different language package, contact the local sales office.

6.2 Options, Accessories, and Spare Parts

6.2.1 Options and Accessories

Description	Ordering no.	
	Uncoated	Coated
Miscellaneous hardware		
VLT® Panel through kit enclosure size A5	130B1028	
VLT® Panel through kit enclosure size B1	130B1046	
VLT® Panel through kit enclosure size B2	130B1047	
VLT® Panel through kit enclosure size C1	130B1048	
VLT® Panel through kit enclosure size C2	130B1049	
VLT® Mounting brackets for enclosure size A5	130B1080	
VLT® Mounting brackets for enclosure size B1	130B1081	
VLT® Mounting brackets for enclosure size B2	130B1082	
VLT® Mounting brackets for enclosure size C1	130B1083	
VLT® Mounting brackets for enclosure size C2	130B1084	
VLT® IP 21/NEMA Type 1 kit, enclosure size A1	130B1121	
VLT® IP 21/NEMA Type 1 kit, enclosure size A2	130B1122	
VLT® IP 21/NEMA Type 1 kit, enclosure size A3	130B1123	
VLT® IP 21/NEMA Type 1 Top kit, enclosure size A2	130B1132	
VLT® IP 21/NEMA Type 1 Top kit, enclosure size A3	130B1133	
VLT® Backplate IP55/NEMA Type12, enclosure size A5	130B1098	
VLT® Backplate IP21/NEMA Type 1, IP55/NEMA Type 12, enclosure size B1	130B3383	
VLT® Backplate IP21/NEMA Type 1, IP55/NEMA Type 12, enclosure size B2	130B3397	
VLT® Backplate IP20/Type 1, enclosure size B4	130B4172	
VLT® Backplate IP21/NEMA Type 1, IP55/NEMA Type 12, enclosure size C1	130B3910	
VLT® Backplate IP21/NEMA Type 1, IP55/NEMA Type 12, enclosure size C2	130B3911	
VLT® Backplate IP20/NEMA Type 1, enclosure size C3	130B4170	
VLT® Backplate IP20/NEMA Type 1, enclosure size C4	130B4171	
VLT® Backplate IP66/NEMA Type 4X, enclosure size A5	130B3242	
VLT® Backplate in stainless steel IP66/NEMA Type 4X, enclosure size B1	130B3434	

Description	Ordering no.	
	Uncoated	Coated
VLT® Backplate in stainless steel IP66/NEMA Type 4X, enclosure size B2	130B3465	
VLT® Backplate in stainless steel IP66/NEMA Type 4X, enclosure size C1	130B3468	
VLT® Backplate in stainless steel IP66/NEMA Type 4X, enclosure size C2	130B3491	
VLT® Profibus adapter Sub-D9 connector	130B1112	
Profibus shield plate kit for IP20, enclosure sizes A1, A2 and A3	130B0524	
Terminal block for DC link connection on enclosure sizes A2/A3	130B1064	
VLT® Screw terminals	130B1116	
VLT® USB extension, 350 mm (13 in) cable	130B1155	
VLT® USB extension, 650 mm (25 in) cable	130B1156	
VLT® Back frame A2 for 1 brake resistor	175U0085	
VLT® Back frame A3 for 1 brake resistor	175U0088	
VLT® Back frame A2 for 2 brake resistors	175U0087	
VLT® Back A3 for 2 brake resistors	175U0086	
Local Control Panel		
VLT® LCP 101 Numeric local control pad	130B1124	
VLT® LCP 102 Graphical local control pad	130B1107	
VLT® Cable for LCP 2, 3 m (10 ft)	175Z0929	
VLT® Panel mounting kit for all LCP types	130B1170	
VLT® Panel mounting kit, graphical LCP	130B1113	
VLT® Panel mounting kit, numerical LCP	130B1114	
VLT® LCP mounting kit, no LCP	130B1117	
VLT® LCP mounting kit blind cover IP55/66, 8 m (26 ft)	130B1129	
VLT® Control Panel LCP 102, graphical	130B1078	
VLT® Blindcover, with Danfoss logo, IP55/66	130B1077	
Options for slot A		
VLT® PROFIBUS DP V1 MCA 101	130B1100	130B1200
VLT® DeviceNet MCA 104	130B1102	130B1202
VLT® Profinet MCA 120	130B1135	130B1235
VLT® Ethernet/IP MCA 121	130B1119	130B1219
VLT® Modbus TCP MCA 122	130B1196	130B1296
Options for slot B		
VLT® General purpose I/O MCB 101	130B1125	130B1212
VLT® Relay option MCB 105	130B1110	130B1210
VLT® PTC thermistor card MCB 112		130B1137
VLT® Extended cascade controller MCO 101	130B1118	130B1218
VLT® Sensor input option MCB 114	130B1172	130B1272
VLT® Analog I/O option with RTC MCB 109	130B1143	130B1243
Mounting kits for C options		
VLT® Mounting kit for C option, 40 mm (1.6 in), enclosure sizes A2/A3	130B7530	
VLT® Mounting kit for C option, 60 mm (2.4 in), enclosure sizes A2/A3	130B7531	
VLT® Mounting kit for C option, enclosure size A5	130B7532	
VLT® Mounting kit for C option, enclosure sizes B/C/D/E/F (except B3)	130B7533	
VLT® Mounting kit for C option, 40 mm (1.6 in), enclosure size B3	130B1413	
VLT® Mounting kit for C option, 60 mm (2.4 in), enclosure size B3	130B1414	
Options for slot C		
VLT® Advanced cascade controller MCO102	130B1154	130B1254

Description	Ordering no.	
	Uncoated	Coated
VLT® Extended relay card MCB 113	130B1164	130B1264
Option for slot D		
VLT® 24 V DC supply MCB 107	130B1108	130B1208
Leakage current monitor kits		
VLT® Leakage current monitor kit, enclosure sizes A2/A3	130B5645	
VLT® Leakage current monitor kit, enclosure size B3	130B5764	
VLT® Leakage current monitor kit, enclosure size B4	130B5765	
VLT® Leakage current monitor kit, enclosure size C3	130B6226	
VLT® Leakage current monitor kit, enclosure size C4	130B5647	
PC Software		
MCT 10 Set-up Software, 1 license	130B1000	
MCT 10 Set-up Software, 5 licenses	130B1001	
MCT 10 Set-up Software, 10 licenses	130B1002	
MCT 10 Set-up Software, 25 licenses	130B1003	
MCT 10 Set-up Software, 50 licenses	130B1004	
MCT 10 Set-up Software, 100 licenses	130B1005	
MCT 10 Set-up Software, >100 licenses	130B1006	
Options can be ordered as factory built-in options, see ordering information, <i>chapter 6.1 Ordering</i> .		

Table 6.4 Ordering Numbers for Options and Accessories

6.2.2 Spare Parts

Consult the VLT shop or the configurator for spare parts available for your specification, VLTShop.danfoss.com.

6.2.3 Accessory Bags

Type	Description	Ordering no.
Accessory bags		
Accessory bag A1	Accessory bag, enclosure size A1	130B1021
Accessory bag A2/A3	Accessory bag, enclosure size A2/A3	130B1022
Accessory bag A5	Accessory bag, enclosure size A5	130B1023
Accessory bag A1–A5	Accessory bag, enclosure size A1-A5 Brake and load sharing connector	130B0633
Accessory bag B1	Accessory bag, enclosure size B1	130B2060
Accessory bag B2	Accessory bag, enclosure size B2	130B2061
Accessory bag B3	Accessory bag, enclosure size B3	130B0980
Accessory bag B4	Accessory bag, enclosure size B4, 18.5–22 kW (25–30 hp)	130B1300
Accessory bag B4	Accessory bag, enclosure size B4, 30 kW (40 hp)	130B1301
Accessory bag C1	Accessory bag, enclosure size C1	130B0046
Accessory bag C2	Accessory bag, enclosure size C2	130B0047
Accessory bag C3	Accessory bag, enclosure size C3	130B0981
Accessory bag C4	Accessory bag, enclosure size C4, 55 kW (75 hp)	130B0982
Accessory bag C4	Accessory bag, enclosure size C4, 75 kW (100 hp)	130B0983

Table 6.5 Ordering Numbers for Accessory Bags

6.2.4 Brake Resistor Selection

When the speed reference of an adjustable frequency drive is reduced, the motor acts as a generator and the adjustable frequency drive brakes. When a motor acts as a generator, it supplies energy to the adjustable frequency drive which is collected in the DC link. The function of the brake resistor is to provide a load on the DC link during braking, thereby ensuring that the braking energy is absorbed by the brake resistor.

If a brake resistor is not used, the DC link voltage of the adjustable frequency drive continues to increase until it disconnects for protection. The advantage of using a brake resistor is that it enables braking of a heavy load quickly, e.g., on a conveyor belt.

The brake resistors in this series are all external components. Therefore, the brake resistor does not form an integral part of the adjustable frequency drive. The external brake resistor provides the following advantages:

- The resistor time cycle can be selected as required.
- The heat developed during braking can be conveyed beyond the panel cabinet to allow the energy to be used.
- The electronic components do not overheat, even when the brake resistor is overloaded.

Recommended brake resistors are listed in *chapter 6.2.5 Recommended Brake Resistors* and *chapter 6.2.6 Alternative Brake Resistors, T2 and T4*. For more information, see the *VLT® Brake Resistor MCE 101 Design Guide*.

Horizontal and Vertical Loads

The Danfoss brake resistor range consists of two groups:

- Brake resistors for horizontal loads (conveyors, trolleys, gantry cranes, etc.), see *Figure 6.2*;
- Brake resistors for vertical loads (cranes, hoists, elevators), see *Figure 6.3*.

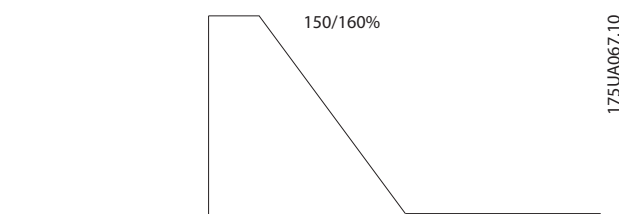


Figure 6.2 Horizontal Loads



Figure 6.3 Vertical Loads

The brake resistor range is intended to cover the general braking requirements for horizontal and vertical brake applications.

To cater for both the horizontal and vertical ranges, three types of brake resistors are available:

- Aluminum-housed flat pack brake resistors
- Aluminum-housed compact brake resistors
- Steel grid brake resistors

See *chapter 6.2.5 Recommended Brake Resistors* and *chapter 6.2.6 Alternative Brake Resistors, T2 and T4* for ordering information.

6.2.5 Recommended Brake Resistors

Line power	Voltage class
P_m	Rated motor size for adjustable frequency drive type
R_{min}	Minimum permissible brake resistor by adjustable frequency drive
R_{rec}	Recommended brake resistor resistance of Danfoss brake resistors
Thermo relay	Brake current setting of external thermo relay
Part number	Danfoss brake resistor order numbers
Cable cross-section	Recommended minimum value based upon PVC insulated copper cable. 30 °C (86 °F) ambient temperature with normal heat dissipation
$P_{br,cont.}$	Brake resistor average rated power. The temperature switch enables at approximate 90% of continuous rated power at brake resistors with IP54, IP21 and IP65 enclosure protection
$R_{br,nom}$	The nominal (calculated) resistor value to ensure a braking energy on motor shaft of 150/160/110% for 1 minute

Table 6.6 Abbreviations used in Table 6.7 to Table 6.14

10% duty cycle, horizontal braking, T2

FC 202				Horizontal braking 10% duty cycle							
Adjustable frequency drive data				Brake resistor data						Installation	
				R _{rec} [Ω]	P _{br,cont.} [kW (hp)]	Danfoss part number				Cable cross-section [mm ² (AWG)]	Thermo relay [A]
Line power type	P _m [kW (hp)]	R _{min} [Ω]	R _{br,nom} [Ω]			Wire IP54	Screw terminal IP21	Screw terminal IP65	Bolt connection IP20		
T2	0.25 (0.34)	380	691.3	630	0.100 (0.134)	175u3002	-	-	-	1.5 (16)	0.4
T2	0.37 (0.5)	380	466.7	410	0.100 (0.134)	175u3004	-	-	-	1.5 (16)	0.5
T2	0.55 (0.75)	275	313.7	300	0.100 (0.134)	175u3006	-	-	-	1.5 (16)	0.6
T2	0.75 (1.0)	188	230.0	200	0.100 (0.134)	175u3011	-	-	-	1.5 (16)	0.7
T2	1.1 (1.5)	130	152.9	145	0.100 (0.134)	175u3016	-	-	-	1.5 (16)	0.8
T2	1.5 (2)	81.0	110.5	100	0.100 (0.134)	175u3021	-	-	-	1.5 (16)	0.9
T2	2.2 (3)	58.5	74.1	70	0.200 (0.268)	175u3026	-	-	-	1.5 (16)	1.6
T2	3 (4)	45.0	53.7	48	0.200 (0.268)	175u3031	-	-	-	1.5 (16)	1.9
T2	3.7 (5)	31.5	39.9	35	0.300 (0.402)	175u3325	-	-	-	1.5 (16)	2.7
T2	5.5 (7.5)	22.5	28.7	27	0.360 (0.483)	175u3326	175u3477	175u3478	-	1.5 (16)	3.5
T2	7.5 (10)	17.7	20.8	18	0.570 (0.764)	175u3327	175u3442	175u3441	-	1.5 (16)	5.3
T2	11 (15)	12.6	14.0	13	0.680 (0.912)	175u3328	175u3059	175u3060	-	1.5 (16)	6.8
T2	15 (20)	8.7	10.2	9.0	1.130 (1.515)	175u3329	175u3068	175u3069	-	2.5 (14)	10.5
T2	25 (18.5)	5.3	8.2	5.7	1.400 (1.877)	175u3330	175u3073	175u3074	-	4 (12)	15
T2	22 (30)	5.1	6.9	5.7	1.700 (2.279)	175u3331	175u3483	175u3484	-	4 (12)	16
T2	30 (40)	3.2	5.0	3.5	2.200 (2.949)	175u3332	175u3080	175u3081	-	6 (10)	24
T2	37 (50)	3.0	4.1	3.5	2.800 (3.753)	175u3333	175u3448	175u3447	-	10 (8)	27
T2	45 (60)	2.4	3.3	2.8	3.200 (4.289)	175u3334	175u3086	175u3087	-	16 (6)	32

Table 6.7 T2, Horizontal Braking 10% Duty Cycle, Recommended Brake Resistors

40% duty cycle, vertical braking, T2

FC 202				Vertical braking 40% duty cycle							
Adjustable frequency drive data				Brake resistor data						Installation	
				R _{rec} [Ω]	P _{br,cont.} [kW (hp)]	Danfoss part number				Cable cross-section [mm ² (AWG)]	Thermo relay [A]
Line power type	P _m [kW (hp)]	R _{min} [Ω]	R _{br,nom} [Ω]			Wire IP54	Screw terminal IP21	Screw terminal IP65	Bolt connection IP20		
T2	0.25 (0.34)	380	691.3	630	0.100 (0.134)	175u3002	-	-	-	1.5 (16)	0.4
T2	0.37 (0.5)	380	466.7	410	0.100 (0.134)	175u3004	-	-	-	1.5 (16)	0.5
T2	0.55 (0.75)	275	313.7	300	0.200 (0.268)	175u3096	-	-	-	1.5 (16)	0.8
T2	0.75 (1.0)	188	230.0	200	0.200 (0.268)	175u3008	-	-	-	1.5 (16)	0.9
T2	1.1 (1.5)	130	152.9	145	0.300 (0.402)	175u3300	-	-	-	1.5 (16)	1.3
T2	1.5 (2)	81.0	110.5	100	0.450 (6.032)	175u3301	175u3402	175u3401	-	1.5 (16)	2
T2	2.2 (3)	58.5	74.1	70	0.570 (0.764)	175u3302	175u3404	175u3403	-	1.5 (16)	2.7
T2	3 (4)	45.0	53.7	48	0.960 (12.869)	175u3303	175u3406	175u3405	-	1.5 (16)	4.2
T2	3.7 (5)	31.5	39.9	35	1.130 (1.515)	175u3304	175u3408	175u3407	-	1.5 (16)	5.4
T2	5.5 (7.5)	22.5	28.7	27	1.400 (1.877)	175u3305	175u3410	175u3409	-	1.5 (16)	6.8
T2	7.5 (10)	17.7	20.8	18	2.200 (2.949)	175u3306	175u3412	175u3411	-	1.5 (16)	10.4
T2	11 (15)	12.6	14.0	13	3.200 (4.289)	175u3307	175u3414	175u3413	-	2.5 (14)	14.7
T2	15 (20)	8.7	10.2	9.0	5.500 (7.373)	-	175u3176	175u3177	-	4 (12)	23
T2	25 (18.5)	5.3	8.2	5.7	6.000 (8.043)	-	-	-	175u3233	10 (8)	33
T2	22 (30)	5.1	6.9	5.7	8.000 (10.724)	-	-	-	175u3234	10 (8)	38
T2	30 (40)	3.2	5.0	3.5	9.000 (12.064)	-	-	-	175u3235	16 (6)	51
T2	37 (50)	3.0	4.1	3.5	14.000 (18.767)	-	-	-	175u3224	25 (4)	63
T2	45 (60)	2.4	3.3	2.8	17.000 (22.788)	-	-	-	175u3227	35 (2)	78

Table 6.8 T2, Vertical Braking 40% Duty Cycle, Recommended Brake Resistors

10% duty cycle, horizontal braking, T4

FC 202				Horizontal braking 10% duty cycle							
Adjustable frequency drive data				Brake resistor data						Installation	
				R _{rec} [Ω]	P _{br,cont.} [kW (hp)]	Danfoss part number				Cable cross-section [mm ² (AWG)]	Thermo relay [A]
Line power type	P _m [kW (hp)]	R _{min} [Ω]	R _{br,nom} [Ω]			Wire IP54	Screw terminal IP21	Screw terminal IP65	Bolt connection IP20		
T4	0.37 (0.5)	1000	1864.2	1200	0.100 (0.134)	175u3000	-	-	-	1.5 (16)	0.3
T4	0.55 (0.75)	1000	1246.3	1200	0.100 (0.134)	175u3000	-	-	-	1.5 (16)	0.3
T4	0.75 (1.0)	620	910.2	850	0.100 (0.134)	175u3001	-	-	-	1.5 (16)	0.4
T4	1.1 (1.5)	546	607.3	630	0.100 (0.134)	175u3002	-	-	-	1.5 (16)	0.4
T4	1.5 (2)	382	437.3	410	0.100 (0.134)	175u3004	-	-	-	1.5 (16)	0.5
T4	2.2 (3)	260	293.3	270	0.200 (0.268)	175u3007	-	-	-	1.5 (16)	0.8
T4	3 (4)	189	212.7	200	0.200 (0.268)	175u3008	-	-	-	1.5 (16)	0.9
T4	4 (5)	135	157.3	145	0.300 (0.402)	175u3300	-	-	-	1.5 (16)	1.3
T4	5.5 (7.5)	99.0	113.3	110	0.450 (6.032)	175u3335	175u3450	175u3449	-	1.5 (16)	1.9
T4	7.5 (10)	72.0	82.4	80	0.570 (0.764)	175u3336	175u3452	175u3451	-	1.5 (16)	2.5
T4	11 (15)	50.0	55.3	56	0.680 (0.912)	175u3337	175u3027	175u3028	-	1.5 (16)	3.3
T4	15 (20)	36.0	40.3	38	1.130 (1.515)	175u3338	175u3034	175u3035	-	1.5 (16)	5.2
T4	25 (18.5)	27.0	32.5	28	1.400 (1.877)	175u3339	175u3039	175u3040	-	1.5 (16)	6.7
T4	22 (30)	20.3	27.2	22	1.700 (2.279)	175u3340	175u3047	175u3048	-	1.5 (16)	8.3
T4	30 (40)	18.0	19.8	19	2.200 (2.949)	175u3357	175u3049	175u3050	-	1.5 (16)	10.1
T4	37 (50)	13.4	16.0	14	2.800 (3.753)	175u3341	175u3055	175u3056	-	2.5 (14)	13.3
T4	45 (60)	10.8	13.1	12	3.200 (4.289)	175u3359	175u3061	175u3062	-	2.5 (14)	15.3
T4	55 (75)	8.8	10.7	9.5	4.200 (5.630)	-	175u3065	175u3066	-	4 (12)	20
T4	75 (100)	6.5	7.8	7.0	5.500 (7.373)	-	175u3070	175u3071	-	6 (10)	26
T4	90 (125)	4.2	6.5	5.5	7.000 (9.383)	-	-	-	175u3231	10 (8)	36
T4	110 (150)	3.6	5.3	4.7	9.000 (12.064)	-	-	-	175u3079	16 (6)	44
T4	132 (175)	3.0	4.4	3.7	11.000 (14.745)	-	-	-	175u3083	25 (4)	55

FC 202				Horizontal braking 10% duty cycle							
Adjustable frequency drive data				Brake resistor data						Installation	
				R _{rec} [Ω]	P _{br,cont.} [kW (hp)]	Danfoss part number				Cable cross-section [mm ² (AWG)]	Thermo relay [A]
Line power type	P _m [kW (hp)]	R _{min} [Ω]	R _{br,nom} [Ω]			Wire IP54	Screw terminal IP21	Screw terminal IP65	Bolt connection IP20		
T4	160 (225)	2.5	3.6	3.3	13.000 (17.426)	-	-	-	175u3084	35 (2)	63
T4	200 (275)	2.0	2.9	2.7	16.000 (21.448)	-	-	-	175u3088	50 (1/0)	77
T4	250 (350)	1.6	2.3	2.1	20.000 (26.809)	-	-	-	175u3091	70 (3/0)	98
T4	315 (425)	1.2	1.8	1.7	26.000 (34.853)	-	-	-	175u3093	2 x 35 (2 x 1)	124
T4	355 (475)	1.2	1.6	1.3	32.000 (42.895)	-	-	-	175u3097	2 x 35 (2 x 1)	157
T4	400 (550)	1.2	1.4	1.2	36.000 (48.257)	-	-	-	175u3098	2 x 50 (2x1)	173
T4	450 (600)	1.1 (1.5)	1.3	1.1 (1.5)	42.000 (56.300)	-	-	-	175u3099	2 x 50 (2x1)	196
T4	500 (670)	0.9	1.1 (1.5)	2 x 1.9	-	-	-	-	-	-	-
T4	560 (750)	0.9	1.0	2 x 1.7	-	-	-	-	-	-	-
T4	630 (850)	0.8	0.9	2 x 1.5	-	-	-	-	-	-	-
T4	710 (950)	0.7	0.8	2 x 1.3	-	-	-	-	-	-	-
T4	800 (1075)	0.6	0.7	3 x 1.8	-	-	-	-	-	-	-
T4	1000 (1350)	0.5	0.6	3 x 1.6	-	-	-	-	-	-	-

Table 6.9 T4, Horizontal Braking 10% Duty Cycle, Recommended Brake Resistors

40% duty cycle, vertical braking, T4

FC 202				Vertical braking 40% duty cycle							
Adjustable frequency drive data				Brake resistor data						Installation	
				R _{rec} [Ω]	P _{br,cont.} [kW (hp)]	Danfoss part number				Cable cross-section [mm ² (AWG)]	Thermo relay [A]
Line power type	P _m [kW (hp)]	R _{min} [Ω]	R _{br,nom} [Ω]			Wire IP54	Screw terminal IP21	Screw terminal IP65	Bolt connection IP20		
T4	0.37 (0.5)	1000	1864.2	1200	0.200 (0.268)	175u3101	-	-	-	1.5 (16)	0.4
T4	0.55 (0.75)	1000	1246.3	1200	0.200 (0.268)	175u3101	-	-	-	1.5 (16)	0.4
T4	0.75 (1.0)	620	910.2	850	0.200 (0.268)	175u3308	-	-	-	1.5 (16)	0.5
T4	1.1 (1.5)	546	607.3	630	0.300 (0.402)	175u3309	-	-	-	1.5 (16)	0.7
T4	1.5 (2)	382	437.3	410	0.450 (6.032)	175u3310	175u3416	175u3415	-	1.5 (16)	1
T4	2.2 (3)	260	293.3	270	0.570 (0.764)	175u3311	175u3418	175u3417	-	1.5 (16)	1.4
T4	3 (4)	189	212.7	200	0.960 (12.869)	175u3312	175u3420	175u3419	-	1.5 (16)	2.1
T4	4 (5)	135	157.3	145	1.130 (1.515)	175u3313	175u3422	175u3421	-	1.5 (16)	2.7
T4	5.5 (7.5)	99.0	113.3	110	1.700 (2.279)	175u3314	175u3424	175u3423	-	1.5 (16)	3.7
T4	7.5 (10)	72.0	82.4	80	2.200 (2.949)	175u3315	175u3138	175u3139	-	1.5 (16)	5
T4	11 (15)	50.0	55.3	56	3.200 (4.289)	175u3316	175u3428	175u3427	-	1.5 (16)	7.1
T4	15 (20)	36.0	40.3	38	5.000 (6.702)	-	-	-	175u3236	1.5 (16)	11.5
T4	25 (18.5)	27.0	32.5	28	6.000 (8.043)	-	-	-	175u3237	2.5 (14)	14.7
T4	22 (30)	20.3	27.2	22	8.000 (10.724)	-	-	-	175u3238	4 (12)	19
T4	30 (40)	18.0	19.8	19	10.000 (13.405)	-	-	-	175u3203	4 (12)	23
T4	37 (50)	13.4	16.0	14	14.000 (18.767)	-	-	-	175u3206	10 (8)	32
T4	45 (60)	10.8	13.1	12	17.000 (22.788)	-	-	-	175u3210	10 (8)	38
T4	55 (75)	8.8	10.7	9.5	21.000 (28.150)	-	-	-	175u3213	16 (6)	47
T4	75 (100)	6.5	7.8	7.0	26.000 (34.853)	-	-	-	175u3216	25 (4)	61
T4	90 (125)	4.2	6.5	5.5	36.000 (48.257)	-	-	-	175u3219	35 (2)	81
T4	110 (150)	3.6	5.3	4.7	42.000 (56.300)	-	-	-	175u3221	50 (1/0)	95
T4	132 (175)	3.0	4.4	3.7	52.000 (69.705)	-	-	-	175u3223	70 (3/0)	119

FC 202				Vertical braking 40% duty cycle							
Adjustable frequency drive data				Brake resistor data						Installation	
				R _{rec} [Ω]	P _{br,cont.} [kW (hp)]	Danfoss part number				Cable cross-section [mm ² (AWG)]	Thermo relay [A]
Line power type	P _m [kW (hp)]	R _{min} [Ω]	R _{br,nom} [Ω]			Wire IP54	Screw terminal IP21	Screw terminal IP65	Bolt connection IP20		
T4	160 (225)	2.5	3.6	3.3	60.000 (80.429)	-	-	-	175u3225	2 x 35 (2 x 1)	135
T4	200 (275)	2.0	2.9	2.7	78.000 (104.558)	-	-	-	175u3228	2 x 50 (2x1)	170
T4	250 (350)	1.6	2.3	2.1	90.000 (120.643)	-	-	-	175u3230	2 x 70 (2 x 3/0)	207
T4	315 (425)	1.2	1.8	1.7	-	-	-	-	-	-	-
T4	355 (475)	1.2	1.6	1.3	-	-	-	-	-	-	-
T4	400 (550)	1.2	1.4	1.2	-	-	-	-	-	-	-
T4	450 (600)	1.1 (1.5)	1.3	1.1 (1.5)	-	-	-	-	-	-	-
T4	500 (650)	0.9	1.1 (1.5)	2 x 1.9	-	-	-	-	-	-	-
T4	560 (750)	0.9	1.0	2 x 1.7	-	-	-	-	-	-	-
T4	630 (850)	0.8	0.9	2 x 1.5	-	-	-	-	-	-	-
T4	710 (950)	0.7	0.8	2 x 1.3	-	-	-	-	-	-	-
T4	800 (1075)	0.6	0.7	3 x 1.8	-	-	-	-	-	-	-
T4	1000 (1350)	0.5	0.6	3 x 1.6	-	-	-	-	-	-	-

Table 6.10 T4, Vertical Braking 40% Duty Cycle, Recommended Brake Resistors

10% duty cycle, horizontal braking, T6

FC 202				Horizontal braking 10% duty cycle							
Adjustable frequency drive data				Brake resistor data						Installation	
				R _{rec} [Ω]	P _{br,cont.} [kW (hp)]	Danfoss part number				Cable cross-section [mm ² (AWG)]	Thermo relay [A]
Line power type	P _m [kW (hp)]	R _{min} [Ω]	R _{br,nom} [Ω]			Wire IP54	Screw terminal IP21	Screw terminal IP65	Bolt connection IP20		
T6	0.75 (1.0)	620	1329.7	1200	0.100 (0.134)	175u3000	-	-	-	1.5 (16)	0.3
T6	1.1 (1.5)	620	889.1	850	0.100 (0.134)	175u3001	-	-	-	1.5 (16)	0.4
T6	1.5 (2)	550	642.7	570	0.100 (0.134)	175u3003	-	-	-	1.5 (16)	0.4
T6	2.2 (3)	380	431.1	415	0.200 (0.268)	175u3005	-	-	-	1.5 (16)	0.7
T6	3 (4)	260	312.5	270	0.200 (0.268)	175u3007	-	-	-	1.5 (16)	0.8
T6	4 (5)	189	231.6	200	0.300 (0.402)	175u3342	-	-	-	1.5 (16)	1.1 (1.5)
T6	5.5 (7.5)	135	166.6	145	0.450 (6.032)	175u3343	175u3012	175u3013	-	1.5 (16)	1.7
T6	7.5 (10)	99.0	121.1	100	0.570 (0.764)	175u3344	175u3136	175u3137	-	1.5 (16)	2.3
T6	11 (15)	69.0	81.6	72	0.680 (0.912)	175u3345	175u3456	175u3455	-	1.5 (16)	2.9
T6	15 (20)	48.6	59.4	52	1.130 (1.515)	175u3346	175u3458	175u3457	-	1.5 (16)	4.4
T6	25 (18.5)	35.1	47.9	38	1.400 (1.877)	175u3347	175u3460	175u3459	-	1.5 (16)	5.7
T6	22 (30)	27.0	40.1	31	1.700 (2.279)	175u3348	175u3037	175u3038	-	1.5 (16)	7
T6	30 (40)	22.5	29.2	27	2.200 (2.949)	175u3349	175u3043	175u3044	-	1.5 (16)	8.5
T6	37 (50)	17.1	23.6	19	2.800 (3.753)	175u3350	175u3462	175u3461	-	2.5 (14)	11.4
T6	45 (60)	13.5	19.4	14	3.200 (4.289)	175u3358	175u3464	175u3463	-	2.5 (14)	14.2
T6	55 (75)	11.7	15.8	13.5	4.200 (5.630)	-	175u3057	175u3058	-	4 (12)	17
T6	75 (100)	9.9	11.5	11	5.500 (7.373)	-	175u3063	175u3064	-	6	21
T6	90 (125)	8.6	9.6	7.0	7.000 (9.383)	-	-	-	175u3245	10 (8)	32

Table 6.11 T6, Horizontal Braking 10% Duty Cycle, Recommended Brake Resistors

40% duty cycle, vertical braking, T6

FC 202				Vertical braking 40% duty cycle							
Adjustable frequency drive data				Brake resistor data						Installation	
				R _{rec} [Ω]	P _{br,cont.} [kW (hp)]	Danfoss part number				Cable cross-section [mm ² (AWG)]	Thermo relay [A]
Line power type	P _m [kW (hp)]	R _{min} [Ω]	R _{br,nom} [Ω]			Wire IP54	Screw terminal IP21	Screw terminal IP65	Bolt connection IP20		
T6	0.75 (1.0)	620	1329.7	1200	0.360 (0.483)	-	175u3102	175u3103	-	1.5 (16)	0.6
T6	1.1 (1.5)	620	889.1	850	0.280 (0.375)	175u3317	175u3104	175u3105	-	1.5 (2)	0.6
T6	1.5 (16)	550	642.7	570	0.450 (6.032)	175u3318	175u3430	175u3429	-	1.5 (16)	0.9
T6	2.2 (3)	380	431.1	415	0.570 (0.764)	175u3319	175u3432	175u3431	-	1.5 (16)	1.1 (1.5)
T6	3 (4)	260	312.5	270	0.960 (12.869)	175u3320	175u3434	175u3433	-	1.5 (16)	1.8
T6	4 (5)	189	231.6	200	1.130 (1.515)	175u3321	175u3436	175u3435	-	1.5 (16)	2.3
T6	5.5 (7.5)	135	166.6	145	1.700 (2.279)	175u3322	175u3126	175u3127	-	1.5 (16)	3.3
T6	7.5 (10)	99.0	121.1	100	2.200 (2.949)	175u3323	175u3438	175u3437	-	1.5 (16)	4.4
T6	11 (15)	69.0	81.6	72	3.200 (4.289)	175u3324	175u3440	175u3439	-	1.5 (16)	6.3
T6	15 (20)	48.6	59.4	52	5.500 (7.373)	-	175u3148	175u3149	-	1.5 (16)	9.7
T6	25 (18.5)	35.1	47.9	38	6.000 (8.043)	-	-	-	175u3239	2.5 (14)	12.6
T6	22 (30)	27.0	40.1	31	8.000 (10.724)	-	-	-	175u3240	4 (12)	16
T6	30 (40)	22.5	29.2	27	10.000 (13.405)	-	-	-	175u3200	4 (12)	19
T6	37 (50)	17.1	23.6	19	14.000 (18.767)	-	-	-	175u3204	10	27
T6	45 (60)	13.5	19.4	14	17.000 (22.788)	-	-	-	175u3207	10 (8)	35
T6	55 (75)	11.7	15.8	13.5	21.000 (28.150)	-	-	-	175u3208	16 (6)	40
T6	75 (100)	9.9	11.5	11	26.000 (34.853)	-	-	-	175u3211	25 (4)	49
T6	90 (125)	8.6	9.6	7.0	30.000 (40)	-	-	-	175u3241	35	66

Table 6.12 T6, Vertical Braking 40% Duty Cycle, Recommended Brake Resistors

10% duty cycle, horizontal braking, T7

FC 202				Horizontal braking 10% duty cycle							
Adjustable frequency drive data				Brake resistor data						Installation	
				R _{rec} [Ω]	P _{br,cont.} [kW (hp)]	Danfoss part number				Cable cross-section [mm ² (AWG)]	Thermo relay [A]
Line power type	P _m [kW (hp)]	R _{min} [Ω]	R _{br,nom} [Ω]			Wire IP54	Screw terminal IP21	Screw terminal IP65	Bolt connection IP20		
T7	1.1 (1.5)	620	830	630	0.100 (0.134)	175u3002	-	-	-	1.5 (16)	0.4
T7	1.5 (2)	513	600	570	0.100 (0.134)	175u3003	-	-	-	1.5 (16)	0.4
T7	2.2 (3)	340	403	415	0.200 (0.268)	175u3005	-	-	-	1.5 (16)	0.7
T7	3 (4)	243	292	270	0.300 (0.402)	175u3361	-	-	-	1.5 (16)	1
T7	4 (5)	180	216	200	0.360 (0.483)	-	175u3009	175u3010	-	1.5 (16)	1.3
T7	5.5 (7.5)	130	156	145	0.450 (6.032)	-	175u3012	175u3013	-	1.5 (16)	1.7
T7	7.5 (10)	94	113	105	0.790 (1.059)	-	175u3481	175u3482	-	1.5 (16)	2.6
T7	11 (15)	94.5	110.9	105	0.790 (1.059)	175u3360	175u3481	175u3482	-	1.5 (16)	2.7
T7	15 (2)	69.7	80.7	72	1.130 (1.515)	175u3351	175u3466	175u3465	-	1.5 (16)	3.8
T7	25 (18.5)	46.8	65.1	52	1.400 (1.877)	175u3352	175u3468	175u3467	-	1.5 (16)	4.9
T7	22 (30)	36.0	54.5	42	1.700 (2.279)	175u3353	175u3032	175u3033	-	1.5 (16)	6
T7	30 (40)	29.0	39.7	31	2.200 (2.949)	175u3354	175u3470	175u3469	-	1.5 (16)	7.9
T7	37 (50)	22.5	32.1	27	2.800 (3.753)	175u3355	175u3472	175u3471	-	2.5 (14)	9.6
T7	45 (60)	18.0	26.3	22	3.200 (4.289)	175u3356	175u3479	175u3480	-	2.5 (14)	11.3
T7	55 (75)	13.5	21.4	15.5	4.200 (5.630)	-	175u3474	175u3473	-	4 (12)	15
T7	75 (100)	13.5	15.6	13.5	5.500 (7.373)	-	175u3476	175u3475	-	6 (10)	19
T7	90 (125)	8.8	13.0	11	7.000 (9.383)	-	-	-	175u3232	10 (8)	25
T7	110 (150)	8.8	10.6	9.1	9.000 (12.064)	-	-	-	175u3067	16 (6)	32
T7	132 (175)	6.6	8.8	7.4	11.000 (14.745)	-	-	-	175u3072	16 (6)	39
T7	160 (225)	4.2	7.2	6.1	13.000 (17.426)	-	-	-	175u3075	16 (6)	46
T7	200 (275)	4.2	5.8	5.0	16.000 (21.448)	-	-	-	175u3078	25 (4)	57
T7	250 (350)	3.4	4.6	4.0	20.000 (26.809)	-	-	-	175u3082	35 (2)	71

FC 202				Horizontal braking 10% duty cycle							
Adjustable frequency drive data				Brake resistor data						Installation	
				R _{rec} [Ω]	P _{br,cont.} [kW (hp)]	Danfoss part number				Cable cross-section [mm ² (AWG)]	Thermo relay [A]
Line power type	P _m [kW (hp)]	R _{min} [Ω]	R _{br,nom} [Ω]			Wire IP54	Screw terminal IP21	Screw terminal IP65	Bolt connection IP20		
T7	315 (425)	2.3	3.7	3.2	26.000 (34.853)	-	-	-	175u3085	50 (1/0)	90
T7	400 (550)	2.3	2.9	2.5	32.000 (42.895)	-	-	-	175u3089	70 (3/0)	113
T7	450 (600)	2.0	2.6	2.3	36.000 (48.257)	-	-	-	175u3090	2 x 35 (2 x 1)	125
T7	500 (650)	1.9	2.3	2.0	42.000 (56.300)	-	-	-	175u3092	2 x 35 (2 x 1)	145
T7	560 (750)	1.5	2.1	1.6	52.000 (69.705)	-	-	-	175u3094	2 x 50 (2x1)	180
T7	630 (850)	1.4	1.8	1.4	60.000 (80.429)	-	-	-	175u3095	2 x 50 (2x1)	207
T7	710 (950)	1.2	1.6	2 x 2.6	-	-	-	-	-	-	-
T7	800 (1075)	1.1 (1.5)	1.4	2 x 2.2	-	-	-	-	-	-	-
T7	900 (1200)	1.0	1.3	2 x 2.0	-	-	-	-	-	-	-
T7	1000 (1350)	0.9	1.1 (1.5)	3 x 2.6	-	-	-	-	-	-	-
T7	1200 (1600)	0.8	1.0	3 x 2.4	-	-	-	-	-	-	-
T7	1400 (1875)	0.6	0.8	3 x 2.0	-	-	-	-	-	-	-

Table 6.13 T7, Horizontal Braking 10% Duty Cycle, Recommended Brake Resistors

40% duty cycle, vertical braking, T7

FC 202				Vertical braking 40% duty cycle							
Adjustable frequency drive data				Brake resistor data						Installation	
				R _{rec} [Ω]	P _{br,cont.} [kW (hp)]	Danfoss part number				Cable cross-section [mm ² (AWG)]	Thermo relay [A]
Line power type	P _m [kW (hp)]	R _{min} [Ω]	R _{br,nom} [Ω]			Wire IP54	Screw terminal IP21	Screw terminal IP65	Bolt connection IP20		
T7	1.1 (1.5)	620	830	630	0.360 (0.483)	-	175u3108	175u3109	-	1.5 (16)	0.8
T7	1.5 (2)	513	600	570	0.570 (0.764)	-	175u3110	175u3111	-	1.5 (16)	1
T7	2.2 (3)	340	403	415	0.790 (1.059)	-	175u3112	175u3113	-	1.5 (16)	1.3
T7	3 (4)	243	292	270	1.130 (1.515)	-	175u3118	175u3119	-	1.5 (16)	2
T7	4 (5)	180	216	200	1.700 (2.279)	-	175u3122	175u3123	-	1.5 (16)	2.8
T7	5.5 (7.5)	130	156	145	2.200 (2.949)	-	175u3106	175u3107	-	1.5 (16)	3.7
T7	7.5 (10)	94	113	105	3.200 (4.289)	-	175u3132	175u3133	-	1.5 (16)	5.2
T7	11 (15)	94.5	110.9	105	4.200 (5.630)	-	175u3134	175u3135	-	1.5 (16)	6
T7	15 (20)	69.7	80.7	72	4.200 (5.630)	-	175u3142	175u3143	-	1.5 (16)	7.2
T7	25 (18.5)	46.8	65.1	52	6.000 (8.043)	-	-	-	175u3242	2.5 (14)	10.8
T7	22 (30)	36.0	54.5	42	8.000 (10.724)	-	-	-	175u3243	2.5 (14)	13.9
T7	30 (40)	29.0	39.7	31	10.000 (13.405)	-	-	-	175u3244	4 (12)	18
T7	37 (50)	22.5	32.1	27	14.000 (18.767)	-	-	-	175u3201	10 (8)	23
T7	45 (60)	18.0	26.3	22	17.000 (22.788)	-	-	-	175u3202	10 (8)	28
T7	55 (75)	13.5	21.4	15.5	21.000 (28.150)	-	-	-	175u3205	16 (6)	37 (50)
T7	75 (100)	13.5	15.6	13.5	26.000 (34.853)	-	-	-	175u3209	16 (6)	44
T7	90 (125)	8.8	13.0	11	36.000 (48.257)	-	-	-	175u3212	25 (4)	57
T7	110 (150)	8.8	10.6	9.1	42.000 (56.300)	-	-	-	175u3214	35 (2)	68
T7	132 (175)	6.6	8.8	7.4	52.000 (69.705)	-	-	-	175u3215	50 (1/0)	84
T7	160 (225)	4.2	7.2	6.1	60.000 (80.429)	-	-	-	175u3218	70 (3/0)	99
T7	200 (275)	4.2	5.8	5.0	78.000 (104.558)	-	-	-	175u3220	2 x 35 (2 x 1)	125
T7	250 (350)	3.4	4.6	4.0	90.000 (120.643)	-	-	-	175u3222	2 x 35 (2 x 1)	150

FC 202				Vertical braking 40% duty cycle							
Adjustable frequency drive data				Brake resistor data						Installation	
				R _{rec} [Ω]	P _{br,cont.} [kW (hp)]	Danfoss part number				Cable cross-section [mm ² (AWG)]	Thermo relay [A]
Line power type	P _m [kW (hp)]	R _{min} [Ω]	R _{br,nom} [Ω]			Wire IP54	Screw terminal IP21	Screw terminal IP65	Bolt connection IP20		
T7	315 (425)	2.3	3.7	3.2	-	-	-	-	-	-	-
T7	400 (550)	2.3	2.9	2.5	-	-	-	-	-	-	-
T7	450 (600)	2.0	2.6	2.3	-	-	-	-	-	-	-
T7	500 (650)	1.9	2.3	2.0	-	-	-	-	-	-	-
T7	560 (750)	1.5	2.1	1.6	-	-	-	-	-	-	-
T7	630 (850)	1.4	1.8	1.4	-	-	-	-	-	-	-
T7	710 (950)	1.2	1.6	2 x 2.6	-	-	-	-	-	-	-
T7	800 (1075)	1.1 (1.5)	1.4	2 x 2.2	-	-	-	-	-	-	-
T7	900 (1200)	1.0	1.3	2 x 2.0	-	-	-	-	-	-	-
T7	1000 (1350)	0.9	1.1 (1.5)	3 x 2.6	-	-	-	-	-	-	-
T7	1200 (1600)	0.8	1.0	3 x 2.4	-	-	-	-	-	-	-
T7	1400 (1875)	0.6	0.8	3 x 2.0	-	-	-	-	-	-	-

Table 6.14 T7, Vertical Braking 40% Duty Cycle, Recommended Brake Resistors

6.2.6 Alternative Brake Resistors, T2 and T4

Line power	Voltage class
P _m	Rated motor size for adjustable frequency drive type
R _{min}	Minimum permissible brake resistor - by adjustable frequency drive
R _{rec}	Recommended brake resistor resistance of Danfoss brake resistors
Duty cycle	P _{br,cont.} × 100 / P _m
Part number	Danfoss brake resistor order numbers
P _{br,cont.}	Brake resistor average rated power.
R _{br,nom}	The nominal (calculated) resistor value to ensure a braking energy on the motor shaft of 150/160/110% for 1 minute

Table 6.15 Abbreviations used in Table 6.16 to Table 6.17

Line power: 200–240 V, T2

FC 202	P _m	R _{min}	R _{br,nom}	Flat-pack IP65		
				R _{rec} per item/P _{br,cont.}	Duty cycle	Danfoss part number
T2	[kW (hp)]	[Ω]	[Ω]	[Ω/W]	%	175Uxxxx
PK25	0.25 (0.34)	380	691.3	430/100	40	1002
PK37	0.37 (0.5)	380	466.7	430/100	27	1002
PK55	0.55 (0.75)	275	313.7	330/100	18	1003
PK55	0.55 (0.75)	275	313.7	310/200	36	0984
PK75	0.75 (1.0)	188	230.0	220/100	13	1004
PK75	0.75 (1.0)	188	230.0	210/200	26	0987
P1K1	1.1 (1.5)	130	152.9	150/100	9	1005
P1K1	1.1 (1.5)	130	152.9	150/200	18	0989
P1K5	1.5 (2)	81.0	110.5	100/100	7	1006
P1K5	1.5 (2)	81.0	110.5	100/200	14	0991
P2K2	2.2 (3)	58.5	74.1	72/200	9	0992
P3K0	3 (4)	45.0	53.7	50/200	7	0993
P3K7	3.7 (5)	31.5	39.9	35/200	6	0994
P3K7	3.7 (5)	31.5	39.9	72/200	11	2 x 0992
P5K5	5.5 (7.5)	22.5	28.7	40/200	7	2 x 0996

Table 6.16 Line power: 200–240 V (T2), Alternative Brake Resistors

Line power: 380–480 V, T4

FC 202	P _m	R _{min}	R _{br,nom}	Flat-pack IP65		
				R _{rec} per item/P _{br,cont.}	Duty cycle	Danfoss part number
T4	[kW (hp)]	[Ω]	[Ω]	[Ω/W]	%	175Uxxxx
PK75	0.75 (1.0)	620	910.2	830/100	13	1000
P1K1	1.1 (1.5)	546	607.3	620/100	9	1001
P1K1	1.1 (1.5)	546	607.3	620/200	18	0982
P1K5	1.5 (2)	382	437.3	430/100	7	1002
P1K5	1.5 (2)	382	437.3	430/200	14	0983
P2K2	2.2 (3)	260	293.3	310/200	9	0984
P3K0	3 (4)	189	212.7	210/200	7	0987
P4K0	4 (5)	135	157.3	150/200	5	0989
P4K0	4 (5)	135	157.3	300/200	10	2 x 0985
P5K5	5.5 (7.5)	99.0	113.3	130/200	7	2 x 0990
P7K5	7.5 (10)	72.0	82.4	80/240	6	2 x 0090

Table 6.17 Line power: 380–480 V (T4), Alternative Brake Resistors

6.2.7 Harmonic Filters

Harmonic filters are used to reduce line harmonics.

- AHF 010: 10% current distortion
- AHF 005: 5% current distortion

Cooling and ventilation

IP20: Cooled by natural convection or with built-in fans.

IP00: Additional forced cooling is required. Secure sufficient airflow through the filter during installation to prevent overheating of the filter. Airflow of minimum 2 m/s is required through the filter.

Power and current ratings ¹⁾		Typical motor	Filter current rating	Ordering number AHF 005		Ordering number AHF 010	
			50 Hz	IP00	IP20	IP00	IP20
[kW (hp)]	[A]	[kW (hp)]	[A]				
0.37–4.0 (5–5.4)	1.2-9	3 (4)	10	130B1392	130B1229	130B1262	130B1027
5.5–7.5 (7.5–10)	14.4	7.5 (10)	14	130B1393	130B1231	130B1263	130B1058
11.0 (15)	22	11 (15)	22	130B1394	130B1232	130B1268	130B1059
15.0 (20)	29	15 (20)	29	130B1395	130B1233	130B1270	130B1089
18.0 (24)	34	18.5 (25)	34	130B1396	130B1238	130B1273	130B1094
22.0 (30)	40	22 (30)	40	130B1397	130B1239	130B1274	130B1111
30.0 (40)	55	30 (40)	55	130B1398	130B1240	130B1275	130B1176
37.0 (50)	66	37 (50)	66	130B1399	130B1241	130B1281	130B1180
45.0 (60)	82	45 (60)	82	130B1442	130B1247	130B1291	130B1201
55.0 (75)	96	55 (75)	96	130B1443	130B1248	130B1292	130B1204
75.0 (100)	133	75 (100)	133	130B1444	130B1249	130B1293	130B1207
90.0 (125)	171	90 (125)	171	130B1445	130B1250	130B1294	130B1213

Table 6.18 Harmonic Filters for 380–415 V, 50 Hz

Power and current ratings ¹⁾		Typical motor	Filter current rating	Ordering number AHF 005		Ordering number AHF 010	
			60 Hz	IP00	IP20	IP00	IP20
[kW (hp)]	[A]	[kW (hp)]	[A]				
0.37–4.0 (5–5.4)	1.2-9	3 (4)	10	130B3095	130B2857	130B2874	130B2262
5.5–7.5 (7.5–10)	14.4	7.5 (10)	14	130B3096	130B2858	130B2875	130B2265
11.0 (15)	22	11 (15)	22	130B3097	130B2859	130B2876	130B2268
15.0 (20)	29	15 (20)	29	130B3098	130B2860	130B2877	130B2294
18.0 (24)	34	18.5 (25)	34	130B3099	130B2861	130B3000	130B2297
22.0 (30)	40	22 (30)	40	130B3124	130B2862	130B3083	130B2303
30.0 (40)	55	30 (40)	55	130B3125	130B2863	130B3084	130B2445
37.0 (50)	66	37 (50)	66	130B3026	130B2864	130B3085	130B2459
45.0 (60)	82	45 (60)	82	130B3127	130B2865	130B3086	130B2488
55.0 (75)	96	55 (75)	96	130B3128	130B2866	130B3087	130B2489
75.0 (100)	133	75 (100)	133	130B3129	130B2867	130B3088	130B2498
90.0 (125)	171	90 (125)	171	130B3130	130B2868	130B3089	130B2499

Table 6.19 Harmonic Filters for 380–415 V, 60 Hz

Power and current ratings ¹⁾		Typical motor	Filter current rating	Ordering number AHF 005		Ordering number AHF 010	
			60 Hz	IP00	IP20	IP00	IP20
[kW (hp)]	[A]	[kW (hp)]	[A]				
0.37–4.0 (5–5.4)	1–7.4	3 (4)	10	130B1787	130B1752	130B1770	130B1482
5.5–7.5 (7.5–10)	9.9–13	7.5 (10)	14	130B1788	130B1753	130B1771	130B1483
11.0 (15)	19	11 (15)	19	130B1789	130B1754	130B1772	130B1484
15.0 (20)	25	15 (20)	25	130B1790	130B1755	130B1773	130B1485
18.0 (24)	31	18.5 (25)	31	130B1791	130B1756	130B1774	130B1486
22.0 (30)	36	22 (30)	36	130B1792	130B1757	130B1775	130B1487
30.0 (40)	47	30 (40)	48	130B1793	130B1758	130B1776	130B1488
37.0 (50)	59	37 (50)	60	130B1794	130B1759	130B1777	130B1491
45.0 (60)	73	45 (60)	73	130B1795	130B1760	130B1778	130B1492
55.0 (75)	95	55 (75)	95	130B1796	130B1761	130B1779	130B1493
75.0 (100)	118	75 (100)	118	130B1797	130B1762	130B1780	130B1494
90 (125)	154	90 (125)	154	130B1798	130B1763	130B1781	130B1495

Table 6.20 Harmonic Filters for 440–480 V, 60 Hz

1) Adjustable frequency drive power and current ratings according to actual operating conditions

Power and current ratings ¹⁾		Typical motor	Filter current rating	Ordering number AHF 005		Ordering number AHF 010	
			60 Hz	IP00	IP20	IP00	IP20
[kW (hp)]	[A]	[kW (hp)]	[A]				
11.0 (15)	15	10 (13)	15	130B5261	130B5246	130B5229	130B5212
15.0 (20)	19	16.4 (22)	20	130B5262	130B5247	130B5230	130B5213
18.0 (24)	24	20 (27)	24	130B5263	130B5248	130B5231	130B5214
22.0 (30)	29	24 (32)	29	130B5263	130B5248	130B5231	130B5214
30.0 (40)	36	33 (44)	36	130B5265	130B5250	130B5233	130B5216
37.0 (50)	49	40 (54)	50	130B5266	130B5251	130B5234	130B5217
45.0 (60)	58	50 (65)	58	130B5267	130B5252	130B5235	130B5218
55.0 (75)	74	60 (80)	77	130B5268	130B5253	130B5236	130B5219
75.0 (100)	85	75 (100)	87	130B5269	130B5254	130B5237	130B5220
90 (125)	106	90 (125)	109	130B5270	130B5255	130B5238	130B5221

Table 6.21 Harmonic Filters for 600 V, 60 Hz

Power and current ratings ¹⁾		Typical motor	Power and Current Ratings		Typical motor	Filter current rating	Ordering number AHF 005		Ordering number AHF 010	
500–550 V			551–690 V				50 Hz	IP00	IP20	IP00
[kW (hp)]	[A]	[kW (hp)]	[kW (hp)]	[A]	[kW (hp)]	[A]				
11.0 (15)	15	7.5 (10)	P15K	16	15 (20)	15	130B5000	130B5088	130B5297	130B5280
15.0 (20)	19.5	11 (15)	P18K	20	25 (18.5)	20	130B5017	130B5089	130B5298	130B5281
18.0 (24)	24	15 (20)	P22K	25	22 (30)	24	130B5018	130B5090	130B5299	130B5282
22.0 (30)	29	25 (18.5)	P30K	31	30 (40)	29	130B5019	130B5092	130B5302	130B5283
30.0 (40)	36	22 (30)	P37K	38	37 (50)	36	130B5021	130B5125	130B5404	130B5284
37.0 (50)	49	30 (40)	P45K	48	45 (60)	50	130B5022	130B5144	130B5310	130B5285
45.0 (60)	59	37 (50)	P55K	57	55 (75)	58	130B5023	130B5168	130B5324	130B5286
55.0 (75)	71	45 (60)	P75K	76	75 (100)	77	130B5024	130B5169	130B5325	130B5287
75.0 (100)	89	55 (75)				87	130B5025	130B5170	130B5326	130B5288
90.0 (125)	110	90 (125)				109	130B5026	130B5172	130B5327	130B5289

Table 6.22 Harmonic Filters for 500–690 V, 50 Hz

1) Adjustable frequency drive power and current ratings according to actual operating conditions

6.2.8 Sine-Wave Filters

Adjustable frequency drive power and current ratings						Filter current rating			Switching frequency	Ordering number	
200–240 V		380–440 V		441–500 V		50 Hz	60 Hz	100 Hz		IP00	IP20/23 ¹⁾
[kW (hp)]	[A]	[kW (hp)]	[A]	[kW (hp)]	[A]	[A]	[A]	[A]	[kHz]		
-	-	0.37 (0.5)	1.3	0.37 (0.5)	1.1 (1.5)	2.5	2.5	2	5	130B2404	130B2439
0.25 (0.34)	1.8	0.55 (0.75)	1.8	0.55 (0.75)	1.6						
0.37 (0.5)	2.4	0.75 (1.0)	2.4	0.75 (1.0)	2.1						
		1.1 (1.5)	3	1.1 (1.5)	3	4.5	4	3.5	5	130B2406	130B2441
0.55 (0.75)	3.5	1.5 (16)	4.1	1.5 (16)	3.4						
0.75 (1.0)	4.6	2.2 (3)	5.6	2.2 (3)	4.8	8	7.5	5.5	5	130B2408	130B2443
1.1 (1.5)	6.6	3 (4)	7.2	3 (4)	6.3						
1.5 (2)	7.5	-	-	-	-						
-	-	4 (5)	10	4 (5)	8.2	10	9.5	7.5	5	130B2409	130B2444
2.2 (3)	10.6	5.5 (7.5)	13	5.5 (7.5)	11	17	16	13	5	130B2411	130B2446
3 (4)	12.5	7.5 (10)	16	7.5 (10)	14.5						
3.7 (5)	16.7	-	-	-	-						
5.5 (7.5)	24.2	11 (15)	24	11 (15)	21	24	23	18	4	130B2412	130B2447
7.5 (10)	30.8	15 (2)	32	15 (20)	27	38	36	28.5	4	130B2413	130B2448
		25 (18.5)	37.5	25 (18.5)	34						
11 (15)	46.2	22 (30)	44	22 (30)	40	48	45.5	36	4	130B2281	130B2307
15 (20)	59.4	30 (40)	61	30 (40)	52	62	59	46.5	3	130B2282	130B2308
25 (18.5)	74.8	37 (50)	73	37 (50)	65	75	71	56	3	130B2283	130B2309
22 (30)	88	45 (60)	90	55 (75)	80	115	109	86	3	130B3179	130B3181*
30 (40)	115	55 (75)	106	75 (100)	105						
37 (50)	143	75 (100)	147	90 (125)	130						
45 (60)	170	90 (125)	177								

Table 6.23 Sine-wave Filters for Adjustable Frequency Drives with 380–500 V

1) Ordering numbers marked with * are IP23.

Adjustable frequency drive power and current ratings						Filter current rating @690 V			Switching frequency	Ordering number	
525–600 V		551–690 V		525–550 V		50 Hz	60 Hz	100 Hz		IP00	IP20/23 ¹⁾
[kW (hp)]	[A]	[kW (hp)]	[A]	[kW (hp)]	[A]	[A]	[A]	[A]	kHz		
0.75 (1.0)	1.7	1.1 (1.5)	1.6	1.1 (1.5)	2.1	4.5	4	3	4	130B7335	130B7356
1.1 (1.5)	2.4	1.5 (2)	2.2	1.5 (2)	2.7						
1.5 (2)	2.7	2.2 (3)	3.2	2.2 (3)	3.9						
2.2 (3)	3.9	3.0 (4)	4.5	3.0 (4)	4.9	10	9	7	4	130B7289	130B7324
3 (4)	4.9	4.0 (5)	5.5	4.0 (5)	6.1						
4 (5)	6.1	5.5 (7.5)	7.5	5.5 (7.5)	9.0						
5.5 (7.5)	9	7.5 (10)	10	7.5 (10)	11	13	12	9	3	130B3195	130B3196
7.5 (10)	11	11 (15)	13	7.5 (10)	14						
11 (15)	18	15 (2)	18	11 (15)	19						
15 (20)	22	25 (18.5)	22	15 (20)	23	28	26	21	3	130B4112	130B4113
25 (18.5)	27	22 (30)	27	18 (24)	28						
22 (30)	34	30 (40)	34	22 (30)	36						
30 (40)	41	37 (50)	41	30 (40)	48	45	42	33	3	130B4114	130B4115
37 (50)	52	45 (60)	52	37 (50)	54						
45 (60)	62	55 (75)	62	45 (60)	65						
55 (75)	83	75 (100)	83	55 (75)	87	76	72	57	3	130B4116	130B4117*
75 (100)	100	90 (125)	100	75 (100)	105						
90 (125)	131	-	-	90 (125)	137						
						115	109	86	3	130B4118	130B4119*
						165	156	124	2	130B4121	130B4124*

Table 6.24 Sine-wave Filters for Adjustable Frequency Drives with 525–600 V and 525–690 V

1) Ordering numbers marked with * are IP23.

Parameter	Setting
14-00 Switching Pattern	[1] SFAVM
14-01 Switching Frequency	Set according the individual filter. Listed at filter product label and in output filter manual. Sine-wave filters do not allow lower switching frequency than specified by the individual filter.
14-55 Output Filter	[2] Sine-wave filter fixed

Table 6.25 Parameter Settings for Sine-Wave Filter Operation

6.2.9 dU/dt Filters

Adjustable frequency drive ratings [V]										Filter current rating [V]				Ordering number		
200-240		380-440		441-500		525-550		551-690		380 @60 Hz 200-400/ 440@50 Hz	460/480 @60 Hz 500/525 @50 Hz	575/600 @60 Hz	690 @50 Hz	IP00	IP20	IP54
[kW (hp)]	[A]	[kW (hp)]	[A]	[kW (hp)]	[A]	[kW (hp)]	[A]	[kW (hp)]	[A]	[A]	[A]	[A]	[A]			
3 (4)	12.5	5.5 (7.5)	13	5.5 (7.5)	11	5.5 (7.5)	9.5	1.1 (1.5)	1.6	17	15	13	10	N/A	130B7367 ¹⁾	N/A
3.7 (5)	16	7.5 (10)	16	7.5 (10)	14.5	7.5 (10)	11.5	1.5 (2)	2.2							
-	-	-	-	-	-	-	-	2.2 (3)	3.2							
-	-	-	-	-	-	-	-	3 (4)	4.5							
-	-	-	-	-	-	-	-	4 (5)	5.5							
-	-	-	-	-	-	-	-	5.5 (7.5)	7.5							
-	-	-	-	-	-	-	-	7.5 (10)	10							
5.5 (7.5)	24.2	11 (15)	24	11 (15)	21	7.5 (10)	14	11 (15)	13	44	40	32	27	130B2835	130B2836*	130B2837
7.5 (10)	30.8	15 (20)	32	15 (20)	27	11 (15)	19	15 (20)	18							
-	-	25 (18.5)	37.5	25 (18.5)	34	15 (20)	23	25 (18.5)	22							
-	-	22 (30)	44	22 (30)	40	18.5 (25)	28	22 (30)	27							
11 (15)	46.2	30 (40)	61	30 (40)	52	30 (40)	43	30 (40)	34	90	80	58	54	130B2838	130B2839*	130B2840
15 (20)	59.4	37 (50)	73	37 (50)	65	37 (50)	54	37 (50)	41							
25 (18.5)	74.8	45 (60)	90	55 (75)	80	45 (60)	65	45 (60)	52							
22 (30)	88	-	-	-	-	-	-	-	-							
-	-	55 (75)	106	75 (100)	105	55 (75)	87	55 (75)	62	106	105	94	86	130B2841	130B2842*	130B2843
-	-	-	-	-	-	-	-	75 (100)	83							
30 (40)	115	75 (100)	147	90 (125)	130	75 (100)	113	90 (125)	108	177	160	131	108	130B2844	130B2845*	130B2846
37 (50)	143	90 (125)	177	-	-	90 (125)	137	-	-							
45 (60)	170	-	-	-	-	-	-	-	-							

Table 6.26 dU/dt Filters for 200-690 V

1) Dedicated A3 enclosure sizes supporting foot print mounting and book style mounting. Fixed shielded cable connection to adjustable frequency drive.

Parameter	Setting
14-01 Switching Frequency	Higher operating switching frequency than specified by the individual filter is not recommended.
14-55 Output Filter	[0] No filter
14-56 Capacitance Output Filter	Not used
14-57 Inductance Output Filter	Not used

Table 6.27 Parameter Settings for dU/dt Filter Operation

6.2.10 Common Mode Filters

Enclosure size	Order number	Core dimension					Weight	
		W [mm (in)]	w [mm (in)]	H [mm (in)]	h [mm (in)]	d [mm (in)]	[kg (lb)]	
A and B	130B3257	60 (2.36)	43 (1.69)	40 (1.58)	25 (0.98)	22.3 (0.88)	0.25 (0.55)	
C1	130B7679	82.8 (3.26)	57.5 (2.26)	45.5 (1.79)	20.6 (0.81)	33 (1.3)		
C2, C3, C4	130B3258	102 (4.02)	69 (2.72)	61 (2.4)	28 (1.1)	37 (1.46)	1.6 (3.53)	
D	130B3259	189 (7.44)	143 (5.63)	126 (4.96)	80 (3.15)	37 (1.46)	2.45 (5.4)	

Table 6.28 Common Mode Filters, Ordering Numbers

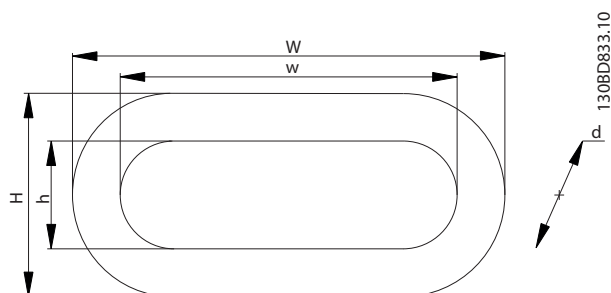


Figure 6.4 HF-CM Core

7 Specifications

7.1 Electrical Data

7.1.1 Line Power Supply 1x200–240 V AC

Type designation	P1K1	P1K5	P2K2	P3K0	P3K7	P5K5	P7K5	P15K	P22K
Typical shaft output [kW]	1.1	1.5	2.2	3.0	3.7	5.5	7.5	15	22
Typical shaft output at 240 V [hp]	1.5	2.0	2.9	4.0	4.9	7.5	10	20	30
Protection rating IP20/Chassis	A3	-	-	-	-	-	-	-	-
Protection rating IP21/Type 1	-	B1	B1	B1	B1	B1	B2	C1	C2
Protection rating IP55/Type 12	A5	B1	B1	B1	B1	B1	B2	C1	C2
Protection rating IP66/NEMA 4X	A5	B1	B1	B1	B1	B1	B2	C1	C2
Output current									
Continuous (3x200–240 V) [A]	6.6	7.5	10.6	12.5	16.7	24.2	30.8	59.4	88
Intermittent (3x200–240 V) [A]	7.3	8.3	11.7	13.8	18.4	26.6	33.4	65.3	96.8
Continuous kVA at 208 V [kVA]	2.4	2.7	3.8	4.5	6.0	8.7	11.1	21.4	31.7
Maximum input current									
Continuous (1x200–240 V) [A]	12.5	15	20.5	24	32	46	59	111	172
Intermittent (1x200–240 V) [A]	13.8	16.5	22.6	26.4	35.2	50.6	64.9	122.1	189.2
Maximum pre-fuses [A]	20	30	40	40	60	80	100	150	200
Additional specifications									
Maximum cable cross-section (line power, motor, brake) [mm ²] ([AWG])	0.2-4 (4-10)					10 (7)	35 (2)	50 (1/0)	95 (4/0)
Maximum cable cross-section ²⁾ for line power with disconnect switch [mm ²] ([AWG])	16 (6)	16 (6)	16 (6)	16 (6)	16 (6)	16 (6)	25 (3)	50 (1/0)	2 x 50 (2 x 1/0) ⁹⁾ 10)
Maximum cable cross-section ²⁾ for line power without disconnect switch [mm ²] ([AWG])	16 (6)	16 (6)	16 (6)	16 (6)	16 (6)	16 (6)	25 (3)	50 (1/0)	95 (4/0)
Cable insulation temperature rating [°C (°F)]	75 (167)	75 (167)	75 (167)	75 (167)	75 (167)	75 (167)	75 (167)	75 (167)	75 (167)
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	44	30	44	60	74	110	150	300	440
Efficiency ⁵⁾	0.98	0.98	0.98	0.98	0.98	0.98	0.98	0.98	0.98

Table 7.1 Line Power Supply 1x200–240 V AC, Normal Overload 110% for 1 Minute, P1K1–P22K

7.1.2 Line Power Supply 3x200–240 V AC

Type designation	PK25		PK37		PK55		PK75	
	HO	NO	HO	NO	HO	NO	HO	NO
High/normal overload ¹⁾								
Typical shaft output [kW]	0.25		0.37		0.55		0.75	
Typical shaft output at 208 V [hp]	0.34		0.5		0.75		1	
Protection rating IP20/Chassis ⁶⁾	A2		A2		A2		A2	
Protection rating IP21/Type 1								
Protection rating IP55/Type 12	A4/A5		A4/A5		A4/A5		A4/A5	
Protection rating IP66/NEMA 4X								
Output current								
Continuous (3x200–240 V) [A]	1.8		2.4		3.5		4.6	
Intermittent (3x200–240 V) [A]	2.7	2.0	3.6	2.6	5.3	3.9	6.9	5.1
Continuous kVA at 208 V [kVA]	0.65		0.86		1.26		1.66	
Maximum input current								
Continuous (3x200–240 V) [A]	1.6		2.2		3.2		4.1	
Intermittent (3x200–240 V) [A]	2.4	1.8	3.3	2.4	4.8	3.5	6.2	4.5
Maximum pre-fuses [A]	10		10		10		10	
Additional specifications								
Maximum cable cross-section ²⁾ for line power, motor, brake, and load sharing [mm ²] ([AWG])	4, 4, 4 (12, 12, 12) (minimum 0.2 (24))							
Maximum cable cross-section ²⁾ for line power disconnect [mm ²] ([AWG])	6, 4, 4 (10, 12, 12)							
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	21		29		42		54	
Efficiency ⁵⁾	0.94		0.94		0.95		0.95	

Table 7.2 Line Power Supply 3x200–240 V AC, PK25–PK75

Type designation	P1K1		P1K5		P2K2		P3K0		P3K7	
	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO
High/normal overload ¹⁾										
Typical shaft output [kW]	1.1		1.5		2.2		3.0		3.7	
Typical shaft output at 208 V [hp]	1.5		2		3		4		5	
Protection rating IP20/Chassis ⁶⁾	A2		A2		A2		A3		A3	
Protection rating IP21/Type 1	A2		A2		A2		A3		A3	
Protection rating IP55/Type 12	A4/A5		A4/A5		A4/A5		A5		A5	
Protection rating IP66/NEMA 4X	A4/A5		A4/A5		A4/A5		A5		A5	
Output current										
Continuous (3x200–240 V) [A]	6.6		7.5		10.6		12.5		16.7	
Intermittent (3x200–240 V) [A]	9.9	7.3	11.3	8.3	15.9	11.7	18.8	13.8	25	18.4
Continuous kVA at 208 V [kVA]	2.38		2.70		3.82		4.50		6.00	
Maximum input current										
Continuous (3x200–240 V) [A]	5.9		6.8		9.5		11.3		15.0	
Intermittent (3x200–240 V) [A]	8.9	6.5	10.2	7.5	14.3	10.5	17.0	12.4	22.5	16.5
Maximum pre-fuses [A]	20		20		20		32		32	
Additional specifications										
Maximum cable cross-section ²⁾ for line power, motor, brake, and load sharing [mm ²] [(AWG)]	4, 4, 4 (12, 12, 12) (minimum 0.2 (24))									
Maximum cable cross-section ²⁾ for line power disconnect [mm ²] [(AWG)]	6, 4, 4 (10, 12, 12)									
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	63		82		116		155		185	
Efficiency ⁵⁾	0.96		0.96		0.96		0.96		0.96	

Table 7.3 Line Power Supply 3x200–240 V AC, P1K1–P3K7

Type designation	P5K5		P7K5		P11K		P15K	
	HO	NO	HO	NO	HO	NO	HO	NO
High/normal overload ¹⁾	HO	NO	HO	NO	HO	NO	HO	NO
Typical shaft output [kW]	3.7	5.5	5.5	7.5	7.5	11	11	15
Typical shaft output at 208 V [hp]	5.0	7.5	7.5	10	10	15	15	20
IP20/Chassis ⁷⁾	B3		B3		B3		B4	
Protection rating IP21/Type 1 Protection rating IP55/Type 12 Protection rating IP66/NEMA 4X	B1		B1		B1		B2	
Output current								
Continuous (3x200–240 V) [A]	16.7	24.2	24.2	30.8	30.8	46.2	46.2	59.4
Intermittent (3x200–240 V) [A]	26.7	26.6	38.7	33.9	49.3	50.8	73.9	65.3
Continuous kVA at 208 V [kVA]	6.0	8.7	8.7	11.1	11.1	16.6	16.6	21.4
Maximum input current								
Continuous (3x200–240 V) [A]	15.0	22.0	22.0	28.0	28.0	42.0	42.0	54.0
Intermittent (3x200–240 V) [A]	24.0	24.2	35.2	30.8	44.8	46.2	67.2	59.4
Maximum pre-fuses [A]	63		63		63		80	
Additional specifications								
IP20 maximum cable cross-section ²⁾ for line power, brake, motor, and load sharing [mm ²] ([AWG])	10, 10, - (8, 8, -)		10, 10, - (8, 8, -)		10, 10, - (8, 8, -)		35, -, - (2, -, -)	
Protection rating IP21 maximum cable cross-section ²⁾ for line power, brake, and load sharing [mm ²] ([AWG])	16, 10, 16 (6, 8, 6)		16, 10, 16 (6, 8, 6)		16, 10, 16 (6, 8, 6)		35, -, - (2, -, -)	
Protection rating IP21 maximum cable cross-section ²⁾ for motor [mm ²] ([AWG])	10, 10, - (8, 8, -)		10, 10, - (8, 8, -)		10, 10, - (8, 8, -)		35, 25, 25 (2, 4, 4)	
Maximum cable cross-section ²⁾ for line power disconnect [mm ²] ([AWG])	16, 10, 10 (6, 8, 8)						35 (2)	
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	239	310	239	310	371	514	463	602
Efficiency ⁵⁾	0.96		0.96		0.96		0.96	

Table 7.4 Line Power Supply 3x200–240 V AC, P5K5–P15K
7

Specifications
VLT® AQUA Drive FC 202

Type designation	P18K		P22K		P30K		P37K		P45K	
High/normal overload ¹⁾	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO
Typical shaft output [kW]	15	18.5	18.5	22	22	30	30	37	37	45
Typical shaft output at 208 V [hp]	20	25	25	30	30	40	40	50	50	60
Protection rating IP20/Chassis ⁷⁾	B4		C3		C3		C4		C4	
Protection rating IP21/Type 1	C1		C1		C1		C2		C2	
Protection rating IP55/Type 12	C1		C1		C1		C2		C2	
Protection rating IP66/NEMA 4X	C1		C1		C1		C2		C2	
Output current										
Continuous (3x200–240 V) [A]	59.4	74.8	74.8	88.0	88.0	115	115	143	143	170
Intermittent (3x200–240 V) [A]	89.1	82.3	112	96.8	132	127	173	157	215	187
Continuous kVA at 208 V [kVA]	21.4	26.9	26.9	31.7	31.7	41.4	41.4	51.5	51.5	61.2
Maximum input current										
Continuous (3x200–240 V) [A]	54.0	68.0	68.0	80.0	80.0	104	104	130	130	154.0
Intermittent (3x200–240 V) [A]	81.0	74.8	102	88.0	120	114	156	143	195	169.0
Maximum pre-fuses [A]	125		125		160		200		250	
Additional specifications										
Protection rating IP20 maximum cable cross-section for line power, brake, motor, and load sharing [mm ²] ([AWG])	35 (2)		50 (1)		50 (1)		150 (300 MCM)		150 (300 MCM)	
Protection ratings IP21, IP55, IP66 maximum cable cross-section for line power and motor [mm ²] ([AWG])	50 (1)		50 (1)		50 (1)		150 (300 MCM)		150 (300 MCM)	
Protection ratings IP21, IP55, IP66 maximum cable cross-section for brake, and load sharing [mm ²] ([AWG])	50 (1)		50 (1)		50 (1)		95 (3/0)		95 (3/0)	
Maximum cable cross-section ²⁾ for disconnect [mm ²] ([AWG])			50, 35, 35 (1, 2, 2)				95, 70, 70 (3/0, 2/0, 2/0)		185, 150, 120 (350 MCM, 300 MCM, 4/0)	
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	624	737	740	845	874	1140	1143	1353	1400	1636
Efficiency ⁵⁾	0.96		0.97		0.97		0.97		0.97	

Table 7.5 Line Power Supply 3x200–240 V AC, P18K–P45K

7.1.3 Line Power Supply 1x380–480 V AC

Type designation	P7K5	P11K	P18K	P37K
Typical shaft output [kW]	7.5	11	18.5	37
Typical shaft output at 240 V [hp]	10	15	25	50
Protection rating IP21/Type 1	B1	B2	C1	C2
Protection rating IP55/Type 12	B1	B2	C1	C2
Protection rating IP66/NEMA 4X	B1	B2	C1	C2
Output current				
Continuous (3x380–440 V) [A]	16	24	37.5	73
Intermittent (3x380–440 V) [A]	17.6	26.4	41.2	80.3
Continuous (3x441–480 V) [A]	14.5	21	34	65
Intermittent (3x441–480 V) [A]	15.4	23.1	37.4	71.5
Continuous kVA at 400 V [kVA]	11.0	16.6	26	50.6
Continuous kVA at 460 V [kVA]	11.6	16.7	27.1	51.8
Maximum input current				
Continuous (1x380–440 V) [A]	33	48	78	151
Intermittent (1x380–440 V) [A]	36	53	85.5	166
Continuous (1x441–480 V) [A]	30	41	72	135
Intermittent (1x441–480 V) [A]	33	46	79.2	148
Maximum pre-fuses [A]	63	80	160	250
Additional specifications				
Maximum cable cross-section for line power, motor, and brake [mm ²] ([AWG])	10 (7)	35 (2)	50 (1/0)	120 (4/0)
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	300	440	740	1480
Efficiency ⁵⁾	0.96	0.96	0.96	0.96

Table 7.6 Line Power Supply 1x380–480 V AC, Normal Overload 110% for 1 Minute, P7K5–P37K

7.1.4 Line Power Supply 3x380–480 V AC

Type designation	PK37		PK55		PK75		P1K1		P1K5	
	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO
High/normal overload ¹⁾										
Typical shaft output [kW]	0.37		0.55		0.75		1.1		1.5	
Typical shaft output at 460 V [hp]	0.5		0.75		1.0		1.5		2.0	
Protection rating IP20/Chassis ⁶⁾	A2		A2		A2		A2		A2	
Protection rating IP55/Type 12 Protection rating IP66/NEMA 4X	A4/A5		A4/A5		A4/A5		A4/A5		A4/A5	
Output current										
Continuous (3x380–440 V) [A]	1.3		1.8		2.4		3.0		4.1	
Intermittent (3x380–440 V) [A]	2.0	1.4	2.7	2.0	3.6	2.6	4.5	3.3	6.2	4.5
Continuous (3x441–480 V) [A]	1.2		1.6		2.1		2.7		3.4	
Intermittent (3x441–480 V) [A]	1.8	1.3	2.4	1.8	3.2	2.3	4.1	3.0	5.1	3.7
Continuous kVA at 400 V [kVA]	0.9		1.3		1.7		2.1		2.8	
Continuous kVA at 460 V [kVA]	0.9		1.3		1.7		2.4		2.7	
Maximum input current										
Continuous (3x380–440 V) [A]	1.2		1.6		2.2		2.7		3.7	
Intermittent (3x380–440 V) [A]	1.8	1.3	2.4	1.8	3.3	2.4	4.1	3.0	5.6	4.1
Continuous (3x441–480 V) [A]	1.0		1.4		1.9		2.7		3.1	
Intermittent (3x441–480 V) [A]	1.5	1.1	2.1	1.5	2.9	2.1	4.1	3.0	4.7	3.4
Maximum pre-fuses [A]	10		10		10		10		10	
Additional specifications										
Protection ratings IP20, IP21 maximum cable cross-section ²⁾ for line power, motor, brake, and load sharing [mm ²] ([AWG])	4, 4, 4 (12, 12, 12) (minimum 0.2 (24))									
Protection ratings IP55, IP66 maximum cable cross-section ²⁾ for line power, motor, brake, and load sharing [mm ²] ([AWG])	4, 4, 4 (12, 12, 12)									
Maximum cable cross-section ²⁾ for disconnect [mm ²] ([AWG])	6, 4, 4 (10, 12, 12)									
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	35		42		46		58		62	
Efficiency ⁵⁾	0.93		0.95		0.96		0.96		0.97	

Table 7.7 Line Power Supply 3x380–480 V AC, PK37–P1K5

Type designation	P2K2		P3K0		P4K0		P5K5		P7K5	
	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO
High/normal overload ¹⁾										
Typical shaft output [kW]	2.2		3.0		4.0		5.5		7.5	
Typical shaft output at 460 V [hp]	2.9		4.0		5.3		7.5		10	
Protection rating IP20/Chassis ⁶⁾	A2		A2		A2		A3		A3	
Protection rating IP55/Type 12	A4/A5		A4/A5		A4/A5		A5		A5	
Protection rating IP66/NEMA 4X	A4/A5		A4/A5		A4/A5		A5		A5	
Output current										
Continuous (3x380–440 V) [A]	5.6		7.2		10		13		16	
Intermittent (3x380–440 V) [A]	8.4	6.2	10.8	7.9	15.0	11.0	19.5	14.3	24.0	17.6
Continuous (3x441–480 V) [A]	4.8		6.3		8.2		11		14.5	
Intermittent (3x441–480 V) [A]	7.2	5.3	9.5	6.9	12.3	9.0	16.5	12.1	21.8	16.0
Continuous kVA at 400 V [kVA]	3.9		5.0		6.9		9.0		11.0	
Continuous kVA at 460 V [kVA]	3.8		5.0		6.5		8.8		11.6	
Maximum input current										
Continuous (3x380–440 V) [A]	5.0		6.5		9.0		11.7		14.4	
Intermittent (3x380–440 V) [A]	7.5	5.5	9.8	7.2	13.5	9.9	17.6	12.9	21.6	15.8
Continuous(3x441–480 V) [A]	4.3		5.7		7.4		9.9		13.0	
Intermittent (3x441–480 V) [A]	6.5	4.7	8.6	6.3	11.1	8.1	14.9	10.9	19.5	14.3
Maximum pre-fuses [A]	20		20		20		30		30	
Additional specifications										
Protection ratings IP20, IP21 maximum cable cross-section ²⁾ for line power, motor, brake, and load sharing [mm ²] ([AWG])	4, 4, 4 (12, 12, 12) (minimum 0.2 (24))									
Protection ratings IP55, IP66 maximum cable cross-section ²⁾ for line power, motor, brake, and load sharing [mm ²] ([AWG])	4, 4, 4 (12, 12, 12)									
Maximum cable cross-section ²⁾ for disconnect [mm ²] ([AWG])	6, 4, 4 (10, 12, 12)									
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	88		116		124		187		225	
Efficiency ⁵⁾	0.97		0.97		0.97		0.97		0.97	

7
Table 7.8 Line Power Supply 3x380–480 V AC, P2K2–P7K5

Specifications
VLT® AQUA Drive FC 202

Type designation	P11K		P15K		P18K		P22K		P30K	
High/normal overload ¹⁾	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO
Typical shaft output [kW]	7.5	11	11	15	15	18.5	22.0	22.0	22.0	30
Typical shaft output at 460 V [hp]	10	15	15	20	20	25	30	30	30	40
Protection rating IP20/Chassis ⁷⁾	B3		B3		B3		B4			B4
Protection rating IP21/Type 1	B1		B1		B1		B2		B2	
Protection rating IP55/Type 12	B1		B1		B1		B2		B2	
Protection rating IP66/NEMA 4X	B1		B1		B1		B2		B2	
Output current										
Continuous (3x380–440 V) [A]	-	24	24	32	32	37.5	37.5	44	44	61
Intermittent (60 s overload) (3x380–440 V) [A]	-	26.4	38.4	35.2	51.2	41.3	60	48.4	70.4	67.1
Continuous (3x441–480 V) [A]	-	21	21	27	27	34	34	40	40	52
Intermittent (60 s overload) (3x441–480 V) [A]	-	23.1	33.6	29.7	43.2	37.4	54.4	44	64	61.6
Continuous kVA at 400 V [kVA]	-	16.6	16.6	22.2	22.2	26	26	30.5	30.5	42.3
Continuous kVA at 460 V [kVA]	-	16.7	16.7	21.5	21.5	27.1	27.1	31.9	31.9	41.4
Maximum input current										
Continuous (3x380–440 V) [A]	-	22	22	29	29	34	34	40	40	55
Intermittent (60 s overload) (3x380–440 V) [A]	-	24.2	35.2	31.9	46.4	37.4	54.4	44	64	60.5
Continuous (3x441–480 V) [A]	-	19	19	25	25	31	31	36	36	47
Intermittent (60 s overload) (3x441–480 V) [A]	-	20.9	30.4	27.5	40	34.1	49.6	39.6	57.6	51.7
Maximum pre-fuses [A]	-	63		63		63		63		80
Additional specifications										
Protection ratings IP21, IP55, IP66 maximum cable cross-section ²⁾ for line power, brake, and load sharing [mm ²] ([AWG])	16, 10, 16 (6, 8, 6)						35, -, - (2, -, -)			
Protection ratings IP21, IP55, IP66 maximum cable cross-section ²⁾ for motor [mm ²] ([AWG])	10, 10,- (8, 8,-)						35, 25, 25 (2, 4, 4)			
Protection rating IP20 maximum cable cross-section ²⁾ for line power, brake, motor, and load sharing [mm ²] ([AWG])	10, 10,- (8, 8,-)						35, -, - (2, -, -)			
Maximum cable cross-section ²⁾ for disconnect [mm ²] ([AWG])	16, 10, 10 (6, 8, 8)									
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	291	392	291	392	379	465	444	525	547	739
Efficiency ⁵⁾	0.98		0.98		0.98		0.98		0.98	

Table 7.9 Line Power Supply 3x380–480 V AC, P11K–P30K

Type designation	P37K		P45K		P55K		P75K		P90K	
High/normal overload ¹⁾	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO
Typical shaft output [kW]	30	37	37	45	45	55	55	75	75	90
Typical shaft output at 460 V [hp]	40	50	50	60	60	75	75	100	100	125
Protection rating IP20/Chassis ⁶⁾	B4		C3		C3		C4		C4	
Protection rating IP21/Type 1	C1		C1		C1		C2		C2	
Protection rating IP55/Type 12	C1		C1		C1		C2		C2	
Protection rating IP66/NEMA 4X	C1		C1		C1		C2		C2	
Output current										
Continuous (3x380–440 V) [A]	61	73	73	90	90	106	106	147	147	177
Intermittent (60 s overload) (3x380–440 V) [A]	91.5	80.3	110	99	135	117	159	162	221	195
Continuous (3x441–480 V) [A]	52	65	65	80	80	105	105	130	130	160
Intermittent (60 s overload) (3x441–480 V) [A]	78	71.5	97.5	88	120	116	158	143	195	176
Continuous kVA at 400 V [kVA]	42.3	50.6	50.6	62.4	62.4	73.4	73.4	102	102	123
Continuous kVA at 460 V [kVA]	41.4	51.8	51.8	63.7	63.7	83.7	83.7	104	103.6	128
Maximum input current										
Continuous (3x380–440 V) [A]	55	66	66	82	82	96	96	133	133	161
Intermittent (60 s overload) (3x380–440 V) [A]	82.5	72.6	99	90.2	123	106	144	146	200	177
Continuous (3x441–480 V) [A]	47	59	59	73	73	95	95	118	118	145
Intermittent (60 s overload) (3x441–480 V) [A]	70.5	64.9	88.5	80.3	110	105	143	130	177	160
Maximum pre-fuses [A]	100		125		160		250		250	
Additional specifications										
Protection rating IP20 maximum cable cross-section for line power and motor [mm ²] ([AWG])	35 (2)		50 (1)		50 (1)		150 (300 MCM)		150 (300 MCM)	
Protection rating IP20 maximum cable cross-section for brake and load sharing [mm ²] ([AWG])	35 (2)		50 (1)		50 (1)		95 (4/0)		95 (4/0)	
Protection ratings IP21, IP55, IP66 maximum cable cross-section for line power and motor [mm ²] ([AWG])	50 (1)		50 (1)		50 (1)		150 (300 MCM)		150 (300 MCM)	
Protection ratings IP21, IP55, IP66 maximum cable cross-section for brake and load sharing [mm ²] ([AWG])	50 (1)		50 (1)		50 (1)		95 (3/0)		95 (3/0)	
Maximum cable cross-section ²⁾ for line power disconnect [mm ²] ([AWG])			50, 35, 35 (1, 2, 2)				95, 70, 70 (3/0, 2/0, 2/0)		185, 150, 120 (350 MCM, 300 MCM, 4/0)	
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	570	698	697	843	891	1083	1022	1384	1232	1474
Efficiency ⁵⁾	0.98		0.98		0.98		0.98		0.99	

Table 7.10 Line Power Supply 3x380–480 V AC, P37K–P90K

7.1.5 Line Power Supply 3x525–600 V AC

Type designation	PK75		P1K1		P1K5		P2K2	
	HO	NO	HO	NO	HO	NO	HO	NO
High/normal overload ¹⁾								
Typical shaft output [kW]	0.75		1.1		1.5		2.2	
Typical shaft output [hp]	1		1.5		2		3	
Protection rating IP20/Chassis	A3		A3		A3		A3	
Protection rating IP21/Type 1	A3		A3		A3		A3	
Protection rating IP55/Type 12	A5		A5		A5		A5	
Output current								
Continuous (3x525–550 V) [A]	1.8		2.6		2.9		4.1	
Intermittent (3x525–550 V) [A]	2.7	2.0	3.9	2.9	4.4	3.2	6.2	4.5
Continuous (3x551–600 V) [A]	1.7		2.4		2.7		3.9	
Intermittent (3x551–600 V) [A]	2.6	1.9	3.6	2.6	4.1	3.0	5.9	4.3
Continuous kVA at 550 V [kVA]	1.7		2.5		2.8		3.9	
Continuous kVA at 550 V [kVA]	1.7		2.4		2.7		3.9	
Maximum input current								
Continuous (3x525–600 V) [A]	1.7		2.4		2.7		4.1	
Intermittent (3x525–600 V) [A]	2.6	1.9	3.6	2.6	4.1	3.0	6.2	4.5
Maximum pre-fuses [A]	10		10		10		20	
Additional specifications								
Maximum cable cross-section ²⁾ for line power, motor, brake, and load sharing [mm ²] ([AWG])	4,4,4 (12,12,12) (minimum 0.2 (24))							
Maximum cable cross-section ²⁾ for line power disconnect [mm ²] ([AWG])	6,4,4 (10,12,12)							
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	35		50		65		92	
Efficiency ⁵⁾	0.97		0.97		0.97		0.97	

Table 7.11 Line Power Supply 3x525–600 V AC, PK75–P2K2

Type designation	P3K0		P4K0		P5K5		P7K5	
	HO	NO	HO	NO	HO	NO	HO	NO
High/normal overload ¹⁾								
Typical shaft output [kW]	3.0		4.0		5.5		7.5	
Typical shaft output [hp]	4		5		7.5		10	
Protection rating IP20/Chassis Protection rating IP21/Type 1	A2		A2		A3		A3	
IP55/Type 12	A5		A5		A5		A5	
Output current								
Continuous (3x525–550 V) [A]	5.2		6.4		9.5		11.5	
Intermittent (3x525–550 V) [A]	7.8	5.7	9.6	7.0	14.3	10.5	17.3	12.7
Continuous (3x551–600 V) [A]	4.9		6.1		9.0		11.0	
Intermittent (3x551–600 V) [A]	7.4	5.4	9.2	6.7	13.5	9.9	16.5	12.1
Continuous kVA at 550 V [kVA]	5.0		6.1		9.0		11.0	
Continuous kVA at 550 V [kVA]	4.9		6.1		9.0		11.0	
Maximum input current								
Continuous (3x525–600 V) [A]	5.2		5.8		8.6		10.4	
Intermittent (3x525–600 V) [A]	7.8	5.7	8.7	6.4	12.9	9.5	15.6	11.4
Maximum pre-fuses [A]	20		20		32		32	
Additional specifications								
Maximum cable cross-section ²⁾ for line power, motor, brake, and load sharing [mm ²] ([AWG])	4,4,4 (12,12,12) (minimum 0.2 (24))							
Maximum cable cross-section ²⁾ for line power disconnect [mm ²] ([AWG])	6,4,4 (10,12,12)							
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	122		145		195		261	
Efficiency ⁵⁾	0.97		0.97		0.97		0.97	

7
Table 7.12 Line Power Supply 3x525–600 V AC, P3K0–P7K5

Specifications
VLT® AQUA Drive FC 202

Type designation	P11K		P15K		P18K		P22K		P30K		P37K	
High/normal overload ¹⁾	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO
Typical shaft output [kW]	7.5	11	11	15	15	18.5	18.5	22	22	30	30	37
Typical shaft output [hp]	10	15	15	20	20	25	25	30	30	40	40	50
Protection rating IP20/Chassis	B3		B3		B3		B4		B4		B4	
Protection rating IP21/Type 1	B1		B1		B1		B2		B2		C1	
Protection rating IP55/Type 12												
Protection rating IP66/NEMA 4X												
Output current												
Continuous (3x525–550 V) [A]	11.5	19	19	23	23	28	28	36	36	43	43	54
Intermittent (3x525–550 V) [A]	18.4	21	30	25	37	31	45	40	58	47	65	59
Continuous (3x551–600 V) [A]	11	18	18	22	22	27	27	34	34	41	41	52
Intermittent (3x551–600 V) [A]	17.6	20	29	24	35	30	43	37	54	45	62	57
Continuous kVA at 550 V [kVA]	11	18.1	18.1	21.9	21.9	26.7	26.7	34.3	34.3	41.0	41.0	51.4
Continuous kVA at 575 V [kVA]	11	17.9	17.9	21.9	21.9	26.9	26.9	33.9	33.9	40.8	40.8	51.8
Maximum input current												
Continuous at 550 V [A]	10.4	17.2	17.2	20.9	20.9	25.4	25.4	32.7	32.7	39	39	49
Intermittent at 550 V [A]	16.6	19	28	23	33	28	41	36	52	43	59	54
Continuous at 575 V [A]	9.8	16	16	20	20	24	24	31	31	37	37	47
Intermittent at 575 V [A]	15.5	17.6	26	22	32	27	39	34	50	41	56	52
Maximum pre-fuses [A]	40		40		50		60		80		100	
Additional specifications												
Protection rating IP20, maximum cable cross-section ²⁾ for line power, brake, motor, and load sharing [mm ²] ([AWG])	10, 10,- (8, 8,-)						35,-,- (2,-,-)					
Protection ratings IP21, IP55, IP66 maximum cable cross-section ²⁾ for line power, brake, and load sharing [mm ²] ([AWG])	16, 10, 10 (6, 8, 8)						35,-,- (2,-,-)					
Protection ratings IP21, IP55, IP66 maximum cable cross-section ²⁾ for motor [mm ²] ([AWG])	10, 10,- (8, 8,-)						35, 25, 25 (2, 4, 4)					
Maximum cable cross-section ²⁾ for line power disconnect [mm ²] ([AWG])	16, 10, 10 (6, 8, 8)						50, 35, 35 (1, 2, 2)					
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	220	300	220	300	300	370	370	440	440	600	600	740
Efficiency ⁵⁾	0.98		0.98		0.98		0.98		0.98		0.98	

Table 7.13 Line Power supply 3x525-600 V AC, P11K-P37K

Type designation	P45K		P55K		P75K		P90K	
High/normal overload ¹⁾	HO	NO	HO	NO	HO	NO	HO	NO
Typical shaft output [kW]	37	45	45	55	55	75	75	90
Typical shaft output [hp]	50	60	60	75	75	100	100	125
Protection rating IP20/Chassis	C3		C3		C4		C4	
Protection rating IP21/Type 1	C1		C1		C2		C2	
Protection rating IP55/Type 12								
Protection rating IP66/NEMA 4X								
Output current								
Continuous (3x525–550 V) [A]	54	65	65	87	87	105	105	137
Intermittent (3x525–550 V) [A]	81	72	98	96	131	116	158	151
Continuous (3x525–600 V) [A]	52	62	62	83	83	100	100	131
Intermittent (3x525–600 V) [A]	78	68	93	91	125	110	150	144
Continuous kVA at 525 V [kVA]	51.4	61.9	61.9	82.9	82.9	100	100.0	130.5
Continuous kVA at 575 V [kVA]	51.8	61.7	61.7	82.7	82.7	99.6	99.6	130.5
Maximum input current								
Continuous at 550 V [A]	49	59	59	78.9	78.9	95.3	95.3	124.3
Intermittent at 550 V [A]	74	65	89	87	118	105	143	137
Continuous at 575 V [A]	47	56	56	75	75	91	91	119
Intermittent at 575 V [A]	70	62	85	83	113	100	137	131
Maximum pre-fuses [A]	150		160		225		250	
Additional specifications								
Protection rating IP20 maximum cable cross-section for line power and motor [mm ²] ([AWG])	50 (1)				150 (300 MCM)			
Protection rating IP20 maximum cable cross-section for brake and load sharing [mm ²] ([AWG])	50 (1)				95 (4/0)			
Protection ratings IP21, IP55, IP66 maximum cable cross-section for line power and motor [mm ²] ([AWG])	50 (1)				150 (300 MCM)			
Protection ratings IP21, IP55, IP66 maximum cable cross-section for brake and load sharing [mm ²] ([AWG])	50 (1)				95 (4/0)			
Maximum cable cross-section ²⁾ for line power disconnect [mm ²] ([AWG])	50, 35, 35 (1, 2, 2)				95, 70, 70 (3/0, 2/0, 2/0)		185, 150, 120 (350 MCM, 300 MCM, 4/0)	
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	740	900	900	1100	1100	1500	1500	1800
Efficiency ⁵⁾	0.98		0.98		0.98		0.98	

Table 7.14 Line Power supply 3x525–600 V AC, P45K–P90K

7.1.6 Line Power Supply 3x525–690 V AC

Type designation	P1K1		P1K5		P2K2		P3K0		P4K0		P5K5		P7K5	
	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO
High/normal overload ¹⁾														
Typical shaft output [kW]	1.1		1.5		2.2		3.0		4.0		5.5		7.5	
Typical shaft output [hp]	1.5		2		3		4		5		7.5		10	
Protection rating IP20/Chassis	A3		A3		A3		A3		A3		A3		A3	
Output current														
Continuous (3x525–550 V) [A]	2.1		2.7		3.9		4.9		6.1		9.0		11.0	
Intermittent (3x525–550 V) [A]	3.2	2.3	4.1	3.0	5.9	4.3	7.4	5.4	9.2	6.7	13.5	9.9	16.5	12.1
Continuous (3x551–690 V) [A]	1.6		2.2		3.2		4.5		5.5		7.5		10.0	
Intermittent (3x551–690 V) [A]	2.4	1.8	3.3	2.4	4.8	3.5	6.8	5.0	8.3	6.1	11.3	8.3	15.0	11.0
Continuous kVA at 525 V [kVA]	1.9		2.5		3.5		4.5		5.5		8.2		10.0	
Continuous kVA at 690 V [kVA]	1.9		2.6		3.8		5.4		6.6		9.0		12.0	
Maximum input current														
Continuous (3x525–550 V) [A]	1.9		2.4		3.5		4.4		5.5		8.1		9.9	
Intermittent (3x525–550 V) [A]	2.9	2.1	3.6	2.6	5.3	3.9	6.6	4.8	8.3	6.1	12.2	8.9	14.9	10.9
Continuous (3x551–690 V) [A]	1.4		2.0		2.9		4.0		4.9		6.7		9.0	
Intermittent (3x551–690 V) [A]	2.1	1.5	3.0	2.2	4.4	3.2	6.0	4.4	7.4	5.4	10.1	7.4	13.5	9.9
Additional specifications														
Maximum cable cross-section ²⁾ for line power, motor, brake, and load sharing [mm ²] ([AWG])	4, 4, 4 (12, 12, 12) (minimum 0.2 (24))													
Maximum cable cross-section ²⁾ for line power disconnect [mm ²] ([AWG])	6, 4, 4 (10, 12, 12)													
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	44		60		88		120		160		220		300	
Efficiency ⁵⁾	0.96		0.96		0.96		0.96		0.96		0.96		0.96	

Table 7.15 A3 Enclosure, Line Power Supply 3x525–690 V AC IP20/Protected Chassis, P1K1–P7K5

Type designation	P11K		P15K		P18K		P22K		P30K	
High/normal overload ¹⁾	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO
Typical shaft output at 550 V [kW]	5.9	7.5	7.5	11	11	15	15	18.5	18.5	22
Typical shaft output at 550 V [hp]	7.5	10	10	15	15	20	20	25	25	30
Typical shaft output at 690 V [kW]	7.5	11	11	15	15	18.5	18.5	22	22	30
Typical shaft output at 690 V [hp]	10	15	15	20	20	25	25	30	30	40
Protection rating IP20/Chassis	B4		B4		B4		B4		B4	
Protection rating IP21/Type 1	B2		B2		B2		B2		B2	
Protection rating IP55/Type 12	B2		B2		B2		B2		B2	
Output current										
Continuous (3x525–550 V) [A]	11	14	14.0	19.0	19.0	23.0	23.0	28.0	28.0	36.0
Intermittent (60 s overload) (3x525–550 V) [A]	17.6	15.4	22.4	20.9	30.4	25.3	36.8	30.8	44.8	39.6
Continuous (3x551–690 V) [A]	10	13	13.0	18.0	18.0	22.0	22.0	27.0	27.0	34.0
Intermittent (60 s overload) (3x551–690 V) [A]	16	14.3	20.8	19.8	28.8	24.2	35.2	29.7	43.2	37.4
Continuous kVA at 550 V [kVA]	10	13.3	13.3	18.1	18.1	21.9	21.9	26.7	26.7	34.3
Continuous kVA at 690 V [kVA]	12	15.5	15.5	21.5	21.5	26.3	26.3	32.3	32.3	40.6
Maximum input current										
Continuous at 550 V [A]	9.9	15	15.0	19.5	19.5	24.0	24.0	29.0	29.0	36.0
Intermittent (60 s overload) at 550 V [A]	15.8	16.5	23.2	21.5	31.2	26.4	38.4	31.9	46.4	39.6
Continuous (at 690 V) [A]	9	14.5	14.5	19.5	19.5	24.0	24.0	29.0	29.0	36.0
Intermittent (60 s overload) at 690 V [A]	14.4	16	23.2	21.5	31.2	26.4	38.4	31.9	46.4	39.6
Additional specifications										
Maximum cable cross-section ²⁾ for line power, motor, brake, and load sharing [mm ²] ([AWG])	35, 25, 25 (2, 4, 4)									
Maximum cable cross-section ²⁾ for line power disconnect [mm ²] ([AWG])	16,10,10 (6, 8, 8)									
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	150	220	150	220	220	300	300	370	370	440
Efficiency ⁵⁾	0.98		0.98		0.98		0.98		0.98	

7

Table 7.16 B2/B4 Enclosure, Line Power Supply 3x525–690 V AC IP20/IP21/IP55, Chassis/NEMA 1/NEMA 12, P11K–P22K

Type Designation	P37K		P45K		P55K		P75K/N75K ⁸⁾		P90K/N90K ⁸⁾	
	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO
High/normal overload ¹⁾										
Typical shaft output at 550 V [kW]	22	30	30	37	37	45	45	55	55	75
Typical shaft output at 550 V [hp]	30	40	40	50	50	60	60	75	75	100
Typical shaft output at 690 V [kW]	30	37	37	45	45	55	55	75	75	90
Typical shaft output at 690 V [hp]	40	50	50	60	60	75	75	100	199	125
Protection rating IP20/Chassis	B4		C3		C3		D3h		D3h	
Protection rating IP21/Type 1										
Protection rating IP55/Type 12	C2		C2		C2		C2		C2	
Output current										
Continuous (3x525–550 V) [A]	36.0	43.0	43.0	54.0	54.0	65.0	65.0	87.0	87.0	105
Intermittent (60 s overload) (3x525–550 V) [A]	54.0	47.3	64.5	59.4	81.0	71.5	97.5	95.7	130.5	115.5
Continuous (3x551–690 V) [A]	34.0	41.0	41.0	52.0	52.0	62.0	62.0	83.0	83.0	100
Intermittent (60 s overload) (3x551–690 V) [A]	51.0	45.1	61.5	57.2	78.0	68.2	93.0	91.3	124.5	110
Continuous kVA at 550 V [kVA]	34.3	41.0	41.0	51.4	51.4	61.9	61.9	82.9	82.9	100
Continuous kVA at 690 V [kVA]	40.6	49.0	49.0	62.1	62.1	74.1	74.1	99.2	99.2	119.5
Maximum input current										
Continuous at 550 V [A]	36.0	49.0	49.0	59.0	59.0	71.0	71.0	87.0	87.0	99.0
Intermittent (60 s overload) at 550 V [A]	54.0	53.9	72.0	64.9	87.0	78.1	105.0	95.7	129	108.9
Continuous at 690 V [A]	36.0	48.0	48.0	58.0	58.0	70.0	70.0	86.0	-	-
Intermittent (60 s overload) at 690 V [A]	54.0	52.8	72.0	63.8	87.0	77.0	105	94.6	-	-
Additional specifications										
Maximum cable cross-section for line power and motor [mm ²] ([AWG])	150 (300 MCM)									
Maximum cable cross-section for brake and load sharing [mm ²] ([AWG])	95 (3/0)									
Maximum cable cross-section ²⁾ for line power disconnect [mm ²] ([AWG])	95 (3/0)						185, 150, 120 (350 MCM, 300 MCM, 4/0)		-	
Estimated power loss ³⁾ at rated maximum load [W] ⁴⁾	600	740	740	900	900	1100	1100	1500	1500	1800
Efficiency ⁵⁾	0.98		0.98		0.98		0.98		0.98	

Table 7.17 B4, C2, C3 Enclosure, Line Power Supply 3x525–690 V AC IP20/IP21/IP55, Chassis/NEMA1/NEMA 12, P30K–P75K

For fuse ratings, see chapter 7.7 Fuses and Circuit Breakers.

1) High overload=150% or 160% torque for a duration of 60 s. Normal overload=110% torque for a duration of 60 s.

2) The three values for the maximum cable cross-section are for single core, flexible wire and flexible wire with sleeve, respectively.

3) Applies for dimensioning of adjustable frequency drive cooling. If the switching frequency is higher than the default setting, the power losses may increase. LCP and typical control card power consumptions are included. For power loss data according to EN 50598-2, refer to www.danfoss.com/vltenergyefficiency.

4) Efficiency measured at nominal current. For energy efficiency class, see chapter 7.4 Ambient Conditions. For part load losses, see www.danfoss.com/vltenergyefficiency.

5) Measured using 5 m (10 ft) shielded motor cables at rated load and rated frequency.

6) Enclosure sizes A2+A3 can be converted to IP21 using a conversion kit. See also chapter 3.6 Mechanical Planning.

7) Enclosure sizes B3+B4 and C3+C4 can be converted to IP21 using a conversion kit. See also chapter 3.6 Mechanical Planning.

8) Enclosure sizes for N75K, N90K are D3h for IP20/Chassis, and D5h for IP54/Type 12.

9) 2 wires are required.

10) Variant not available in IP21.

7.2 Line Power Supply

Line power supply (L1, L2, L3)

Supply voltage	200–240 V ±10%
Supply voltage	380–480 V ±10%
Supply voltage	525–600 V ±10%
Supply voltage	525–690 V ±10%

AC line voltage low/line drop-out:

During low AC line voltage or a line drop-out, the adjustable frequency drive continues until the intermediate circuit voltage drops below the minimum stop level. Typically, this corresponds to 15% below the lowest rated supply voltage of the adjustable frequency drive. Power-up and full torque cannot be expected at AC line voltage <10% below the lowest rated supply voltage of the adjustable frequency drive.

Supply frequency	50/60 Hz +4/-6%
------------------	-----------------

The adjustable frequency drive power supply is tested in accordance with IEC61000-4-28, 50 Hz +4/-6%.

Maximum imbalance temporary between line power phases	3.0% of rated supply voltage
True power factor (λ)	≥ 0.9 nominal at rated load
Displacement power factor ($\cos\phi$) near unity	(>0.98)
Switching on input supply L1, L2, L3 (power-ups) ≤ 7.5 kW	maximum 2 times/min.
Switching on input supply L1, L2, L3 (power-ups) 11–90 kW	maximum 1 time/min.
Environment according to EN 60664-1	Overvoltage category III/pollution degree 2

The unit is suitable for use on a circuit capable of delivering not more than 100000 RMS symmetrical Amperes, 240/480/600/690 V maximum.

7.3 Motor Output and Motor Data

Motor output (U, V, W)

Output voltage	0–100% of supply voltage
Output frequency	0–590 Hz ¹⁾
Switching on output	Unlimited
Ramp times	1–3600 s

1) Dependent on power size.

Torque characteristics, normal overload

Starting torque (constant torque)	maximum 110% for 1 minute, once in 10 minutes ²⁾
Overload torque (constant torque)	maximum 110% for 1 minute, once in 10 minutes ²⁾

Torque characteristics, high overload

Starting torque (constant torque)	maximum 150/160% for 1 minute, once in 10 minutes ²⁾
Overload torque (constant torque)	maximum 150/160% for 1 minute, once in 10 minutes ²⁾

2) Percentage relates to the nominal torque of the adjustable frequency drive, dependent on power size.

7.4 Ambient Conditions

Environment

Enclosure size A, protection ratings	IP20/Chassis, IP21/Type 1, IP55/Type 12, IP66/Type 4X
Enclosure size B1/B2, protection ratings	IP21/Type 1, IP55/Type 12, IP66/Type 4X
Enclosure size B3/B4, protection ratings	IP20/Chassis
Enclosure size C1/C2, protection ratings	IP21/Type 1, IP55/Type 12, IP66/Type 4X
Enclosure size C3/C4, protection ratings	IP20/Chassis
Enclosure kit available ≤ enclosure size A	IP21/TYPE 1/IP4X top
Vibration test enclosure A/B/C	1.0 g
Maximum relative humidity	5–95% (IEC 721-3-3; Class 3K3 (non-condensing) during operation)
Aggressive environment (IEC 721-3-3), uncoated	class 3C2
Aggressive environment (IEC 721-3-3), coated	class 3C3
Test method according to IEC 60068-2-43 H2S (10 days)	
Ambient temperature	Maximum 50 °C (122 °F)

Derating for high ambient temperature, see chapter 5 Special Conditions.

Minimum ambient temperature during full-scale operation	0 °C (32 °F)
Minimum ambient temperature at reduced performance	-10 °C (14 °F)
Temperature during storage/transport	-25 to +65/70 °C (-13 to +149/158 °F)
Maximum altitude above sea level without derating	1000 m (3300 ft)
Maximum altitude above sea level with derating	3000 m (10,000 ft)

Derating for high altitude, see chapter 5 Special Conditions.

EMC standards, Emission	EN 61800-3
EMC standards, Immunity	EN 61800-3
Energy efficiency class ¹⁾	IE2

1) Determined according to EN50598-2 at:

- Rated load
- 90% rated frequency
- Switching frequency factory setting
- Switching pattern factory setting

7.5 Cable Specifications

Maximum motor cable length, shielded/armored	150 m (492 ft)
Maximum motor cable length, non-shielded/unarmored	300 m (984 ft)
Maximum cross-section to motor, line power, load sharing and brake ¹⁾	
Maximum cross-section to control terminals, rigid wire	1.5 mm ² /16 AWG (2 x 0.75 mm ²)
Maximum cross-section to control terminals, flexible cable	1 mm ² /18 AWG
Maximum cross-section to control terminals, cable with enclosed core	0.5 mm ² /20 AWG
Minimum cross-section to control terminals	0.25 mm ² /24 AWG

1) See electrical data tables in chapter 7.1 Electrical Data for more information.

It is mandatory to ground the AC line input connection properly using T95 (PE) of the adjustable frequency drive. The ground connection cable cross-section must be at least 10 mm² or 2 rated line power wires terminated separately according to EN 50178. See also chapter 3.2.8 Ground Leakage Current. Use non-shielded cable.

7.5.1 Cable Lengths for Multiple Parallel Motor Connections

Enclosure sizes	Power Size [kW (hp)]	Voltage [V]	1 cable [m (ft)]	2 cables [m (ft)]	3 cables [m (ft)]	4 cables [m (ft)]
A1, A2, A4, A5	0.37–0.75 (0.5–1)	400	150 (492)	45 (147)	8 (26)	6 (20)
		500	150 (492)	7 (23)	4 (13)	3 (10)
A2, A4, A5	1.1–1.5 (1.5–2)	400	150 (492)	45 (147)	20 (65)	8 (26)
		500	150 (492)	45 (147)	5 (16)	4 (13)
A2, A4, A5	2.2–4 (3–5)	400	150 (492)	45 (147)	20 (65)	11 (36)
		500	150 (492)	45 (147)	20 (65)	6 (20)
A3, A4, A5	5.5–7.5 (7.5–10)	400	150 (492)	45 (147)	20 (65)	11 (36)
		500	150 (492)	45 (147)	20 (65)	11 (36)
B1, B2, B3, B4, C1, C2, C3, C4	11–75 (15–100)	400	150 (147)	75 (246)	50 (164)	37 (123)
		500	150 (147)	75 (246)	50 (164)	37 (123)
A3	1.1–7.5 (1.5–10)	525–690	100 (328)	50 (164)	33 (108)	25 (82)
B4	11–30 (15–40)	525–690	150 (492)	75 (246)	50 (164)	37 (123)
C3	37–45 (50–60)	525–690	150 (492)	75 (246)	50 (164)	37 (123)

Table 7.18 Maximum Cable Length for Each Parallel Cable¹⁾

1) For more information, refer to chapter 3.4.6 Connection of Multiple Motors.

7.6 Control Input/Output and Control Data

Control card, RS485 serial communication

Terminal number	68 (PTX+, RX+), 69 (NTX-, RX-)
Terminal number 61	common for terminals 68 and 69

The RS485 serial communication circuit is functionally separated from other central circuits and galvanically isolated from the supply voltage (PELV).

Analog inputs

Number of analog inputs	2
Terminal number	53, 54
Modes	voltage or current
Mode select	switches S201 and S202
Voltage mode	switch S201/S202 = OFF (U)
Voltage level	0–10 V (scaleable)
Input resistance, R_i	approx. 10 k Ω
Maximum voltage	± 20 V
Current mode	switch S201/S202=On (I)
Current level	0/4–20 mA (scaleable)
Input resistance, R_i	approx. 200 Ω
Maximum current	30 mA
Resolution for analog inputs	10 bit (+ sign)
Accuracy of analog inputs	maximum error 0.5% of full scale
Bandwidth	200 Hz

The analog inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

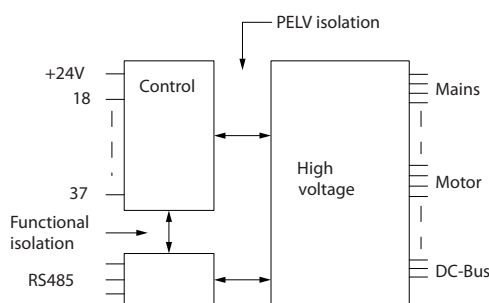


Figure 7.1 PELV Isolation of Analog Inputs

Analog output

Number of programmable analog outputs	1
Terminal number	42
Current range at analog output	0/4–20 mA
Maximum resistor load to common at analog output	500 Ω
Accuracy on analog output	maximum error 0.8% of full scale
Resolution on analog output	8 bit

The analog output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Digital inputs

Programmable digital inputs	4 (6)
Terminal number	18, 19, 27 ¹⁾ , 29 ¹⁾ , 32, 33,
Logic	PNP or NPN
Voltage level	0–24 V DC
Voltage level, logic 0 PNP	<5 V DC
Voltage level, logic 1 PNP	>10 V DC
Voltage level, logic 0 NPN	>19 V DC
Voltage level, logic '1' NPN	<14 V DC
Maximum voltage on input	28 V DC
Input resistance, R _i	approx. 4 kΩ

All digital inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

1) Terminals 27 and 29 can also be programmed as output.

Digital output

Programmable digital/pulse outputs	2
Terminal number	27, 29 ¹⁾
Voltage level at digital/frequency output	0–24 V
Maximum output current (sink or source)	40 mA
Maximum load at frequency output	1 kΩ
Maximum capacitive load at frequency output	10 nF
Minimum output frequency at frequency output	0 Hz
Maximum output frequency at frequency output	32 kHz
Accuracy of frequency output	maximum error 0.1% of full scale
Resolution of frequency outputs	12 bit

1) Terminal 27 and 29 can also be programmed as input.

The digital output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Pulse inputs

Programmable pulse inputs	2
Terminal number pulse	29, 33
Maximum frequency at terminal 29, 33	110 kHz (push-pull driven)
Maximum frequency at terminal 29, 33	5 kHz (open collector)
Minimum frequency at terminal 29, 33	4 Hz
Voltage level	see <i>Digital inputs</i>
Maximum voltage on input	28 V DC
Input resistance, R_i	approx. 4 k Ω
Pulse input accuracy (0.1–1 kHz)	maximum error 0.1% of full scale

Control card, 24 V DC output

Terminal number	12, 13
Maximum load	200 mA

The 24 V DC supply is galvanically isolated from the supply voltage (PELV), but has the same potential as the analog and digital inputs and outputs.

Relay outputs

Programmable relay outputs	2
Relay 01 terminal number	1-3 (break), 1-2 (make)
Maximum terminal load (AC-1) ¹⁾ on 1-3 (NC), 1-2 (NO) (resistive load)	240 V AC, 2 A
Maximum terminal load (AC-15) ¹⁾ (inductive load @ $\cos\phi$ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) ¹⁾ on 1-2 (NO), 1-3 (NC) (resistive load)	60 V DC, 1 A
Maximum terminal load (DC-13) ¹⁾ (inductive load)	24 V DC, 0.1 A
Relay 02 terminal number	4-6 (break), 4-5 (make)
Maximum terminal load (AC-1) ¹⁾ on 4-5 (NO) (resistive load) ^{2) 3)}	400 V AC, 2 A
Maximum terminal load (AC-15) ¹⁾ on 4-5 (NO) (inductive load @ $\cos\phi$ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) ¹⁾ on 4-5 (NO) (resistive load)	80 V DC, 2 A
Maximum terminal load (DC-13) ¹⁾ on 4-5 (NO) (inductive load)	24 V DC, 0.1 A
Maximum terminal load (AC-1) ¹⁾ on 4-6 (NC) (resistive load)	240 V AC, 2 A
Maximum terminal load (AC-15) ¹⁾ on 4-6 (NC) (inductive load @ $\cos\phi$ 0.4)	240 V AC, 0.2 A
Maximum terminal load (DC-1) ¹⁾ on 4-6 (NC) (resistive load)	50 V DC, 2 A
Maximum terminal load (DC-13) ¹⁾ on 4-6 (NC) (inductive load)	24 V DC, 0.1 A
Minimum terminal load on 1-3 (NC), 1-2 (NO), 4-6 (NC), 4-5 (NO)	24 V DC, 10 mA, 24 V AC, 20 mA
Environment according to EN 60664-1	Overvoltage category III/pollution degree 2

1) IEC 60947 parts 4 and 5.

The relay contacts are galvanically isolated from the rest of the circuit by reinforced isolation (PELV).

2) Overvoltage category II.

3) UL applications 300 V AC 2 A.

Control card, 10 V DC output

Terminal number	50
Output voltage	10.5 V \pm 0.5 V
Maximum load	25 mA

The 10 V DC supply is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Control characteristics

Resolution of output frequency at 0–590 Hz	\pm 0.003 Hz
System response time (terminals 18, 19, 27, 29, 32, 33)	\leq 2 ms
Speed control range (open-loop)	1:100 of synchronous speed
Speed accuracy (open-loop)	30–4000 RPM: maximum error of \pm 8 RPM

All control characteristics are based on a 4-pole asynchronous motor.

Control card performance

Scan interval	5 ms
---------------	------

Control card, USB serial communication

USB standard	1.1 (full speed)
--------------	------------------

USB plug	USB type B "device" plug
----------	--------------------------

⚠ CAUTION

Connection to a PC is carried out via a standard host/device USB cable.

The USB connection is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

The USB connection is not galvanically isolated from protective ground. Use only an isolated laptop/PC as a connection to the USB connector on the adjustable frequency drive, or an isolated USB cable/drive.

7.7 Fuses and Circuit Breakers

Use recommended fuses and/or circuit breakers on the supply side as protection in case of component breakdown inside the adjustable frequency drive (first fault).

NOTICE!

Use of fuses on the supply side is mandatory for IEC 60364 (CE) and NEC 2009 (UL) compliant installations.

Recommendations:

- gG type fuses.
- Moeller type circuit breakers. For other circuit breaker types, ensure that the energy into the adjustable frequency drive is equal to or lower than the energy provided by Moeller types.

Use of recommended fuses and circuit breakers ensures that possible damage to the adjustable frequency drive is limited to damages inside the unit. For further information, see *Application Note Fuses and Circuit Breakers*.

The fuses below are suitable for use on a circuit capable of delivering 100000 A_{rms} (symmetrical), depending on the adjustable frequency drive voltage rating. With the proper fusing, the adjustable frequency drive short-circuit current rating (SCCR) is 100000 A_{rms}.

7.7.1 CE Compliance

200–240 V, Enclosure sizes A, B, and C

Enclosure	Power [kW (hp)]	Recommended fuse size	Recommended maximum fuse	Recommended circuit breaker Moeller	Maximum trip level [A]
A2	0.25–2.2 (0.34–3)	gG-10 (0.25–1.5) gG-16 (2.2)	gG-25	PKZM0-25	25
A3	3.0–3.7 (4–5)	gG-16 (3) gG-20 (3.7)	gG-32	PKZM0-25	25
A4	0.25–2.2 (0.34–3)	gG-10 (0.25–1.5) gG-16 (2.2)	gG-32	PKZM0-25	25
A5	0.25–3.7 (0.34–5)	gG-10 (0.25–1.5) gG-16 (2.2–3) gG-20 (3.7)	gG-32	PKZM0-25	25
B1	5.5–11 (7.5–15)	gG-25 (5.5) gG-32 (7.5)	gG-80	PKZM4-63	63
B2	15 (20)	gG-50	gG-100	NZMB1-A100	100
B3	5.5–11 (7.5–15)	gG-25	gG-63	PKZM4-50	50
B4	15–18	gG-32 (7.5) gG-50 (11) gG-63 (15)	gG-125	NZMB1-A100	100
C1	18.5–30 (25–40)	gG-63 (15) gG-80 (18.5) gG-100 (22)	gG-160 (15–18.5) aR-160 (22)	NZMB2-A200	160
C2	37–45 (50–60)	aR-160 (30) aR-200 (37)	aR-200 (30) aR-250 (37)	NZMB2-A250	250
C3	22–30 (30–40)	gG-80 (18.5) aR-125 (22)	gG-150 (18.5) aR-160 (22)	NZMB2-A200	150
C4	37–45 (50–60)	aR-160 (30) aR-200 (37)	aR-200 (30) aR-250 (37)	NZMB2-A250	250

Table 7.19 200–240 V, Enclosure Sizes A, B, and C

38–480 V, Enclosure Sizes A, B, and C

Enclosure	Power [kW (hp)]	Recommended fuse size	Recommended maximum fuse	Recommended circuit breaker Moeller	Maximum trip level [A]
A2	1.1–4.0 (1.5–5)	gG-10 (0.37–3) gG-16 (4)	gG-25	PKZM0-25	25
A3	5.5–7.5 (7.5–10)	gG-16	gG-32	PKZM0-25	25
A4	1.1–4.0 (1.5–5)	gG-10 (0.37–3) gG-16 (4)	gG-32	PKZM0-25	25
A5	1.1–7.5 (1.5–10)	gG-10 (0.37–3) gG-16 (4–7.5)	gG-32	PKZM0-25	25
B1	11–18.5 (15–25)	gG-40	gG-80	PKZM4-63	63
B2	22–30 (30–40)	gG-50 (18.5) gG-63 (22)	gG-100	NZMB1-A100	100
B3	11–18 (15–24)	gG-40	gG-63	PKZM4-50	50
B4	22–37 (30–50)	gG-50 (18.5) gG-63 (22) gG-80 (30)	gG-125	NZMB1-A100	100
C1	37–55 (50–65)	gG-80 (30) gG-100 (37) gG-160 (45)	gG-160	NZMB2-A200	160
C2	75–90 (100–125)	aR-200 (55) aR-250 (75)	aR-250	NZMB2-A250	250
C3	45–55 (60–75)	gG-100 (37) gG-160 (45)	gG-150 (37) gG-160 (45)	NZMB2-A200	150
C4	75–90 (100–125)	aR-200 (55) aR-250 (75)	aR-250	NZMB2-A250	250

Table 7.20 380–480 V, Enclosure Sizes A, B, and C

525–600 V, Enclosure Sizes A, B, and C

Enclosure	Power [kW (hp)]	Recommended fuse size	Recommended maximum fuse	Recommended circuit breaker Moeller	Maximum trip level [A]
A2	1.1–4.0 (1.5–5)	gG-10	gG-25	PKZM0-25	25 (82)
A3	5.5–7.5 (7.5–10)	gG-10 (5.5) gG-16 (7.5)	gG-32	PKZM0-25	25
A5	1.1–7.5 (1.5–10)	gG-10 (0.75–5.5) gG-16 (7.5)	gG-32	PKZM0-25	25
B1	11–18 (15–24)	gG-25 (11) gG-32 (15) gG-40 (18.5)	gG-80	PKZM4-63	63
B2	22–30 (30–40)	gG-50 (22) gG-63 (30)	gG-100	NZMB1-A100	100
B3	11–18.5 (15–25)	gG-25 (11) gG-32 (15)	gG-63	PKZM4-50	50
B4	22–37 (30–50)	gG-40 (18.5) gG-50 (22) gG-63 (30)	gG-125	NZMB1-A100	100
C1	37–55 (50–65)	gG-63 (37) gG-100 (45) aR-160 (55)	gG-160 (37–45) aR-250 (55)	NZMB2-A200	160
C2	75–90 (100–125)	aR-200 (75)	aR-250	NZMB2-A250	250
C3	45–55 (60–75)	gG-63 (37) gG-100 (45)	gG-150	NZMB2-A200	150
C4	75–90 (100–125)	aR-160 (55) aR-200 (75)	aR-250	NZMB2-A250	250

Table 7.21 52–600 V, Enclosure Sizes A, B, and C

525–690 V, Enclosure Sizes A, B, and C

Enclosure	Power [kW (hp)]	Recommended fuse size	Recommended maximum fuse	Recommended circuit breaker Danfoss	Maximum trip level [A]
A3	1.1 (1.5)	gG-6	gG-25	CTI25M 10-16	16
	1.5 (2)	gG-6	gG-25	CTI25M 10-16	16
	2.2 (3)	gG-6	gG-25	CTI25M 10-16	16
	3 (4)	gG-10	gG-25	CTI25M 10-16	16
	4 (5)	gG-10	gG-25	CTI25M 10-16	16
	5.5 (7.5)	gG-16	gG-25	CTI25M 10-16	16
	7.5 (10)	gG-16	gG-25	CTI25M 10-16	16
B2	11 (15)	gG-25	gG-63		
	15 (20)	gG-25	gG-63		
	18 (24)	gG-32			
	22 (30)	gG-32			
C2	30 (40)	gG-40			
	37 (50)	gG-63	gG-80		
	45 (60)	gG-63	gG-100		
	55 (75)	gG-80	gG-125		
	75 (100)	gG-100	gG-160		
C3	37 (50)	gG-100	gG-125		
	45 (60)	gG-125	gG-160		

Table 7.22 525–690 V, Enclosure Sizes A, B, and C

7

7.7.2 UL Compliance

1x200–240 V, Enclosure Sizes A, B, and C

Recommended maximum fuse													
Power [kW (hp)]	Max. pre-fuse size [A]	Bussmann JFHR2	Bussmann RK1	Bussmann J	Bussmann T	Bussmann CC	Bussmann CC	Bussmann CC	SIBA RK1	Littelfuse RK1	Ferraz-Shawmut CC	Ferraz-Shawmut RK1	Ferraz-Shawmut J
1.1 (1.5)	15	FWX-15	KTN-R15	JKS-15	JJN-15	FNQ-R-15	KTK-R-15	LP-CC-15	5017906-016	KLN-R15	ATM-R15	A2K-15R	HSJ15
1.5 (2)	20	FWX-20	KTN-R20	JKS-20	JJN-20	FNQ-R-20	KTK-R-20	LP-CC-20	5017906-020	KLN-R20	ATM-R20	A2K-20R	HSJ20
2.2 (3)	30 ¹⁾	FWX-30	KTN-R30	JKS-30	JJN-30	FNQ-R-30	KTK-R-30	LP-CC-30	5012406-032	KLN-R30	ATM-R30	A2K-30R	HSJ30
3.0 (4)	35	FWX-35	KTN-R35	JKS-35	JJN-35	---	---	---	---	KLN-R35	---	A2K-35R	HSJ35
3.7 (5)	50	FWX-50	KTN-R50	JKS-50	JJN-50	---	---	---	5014006-050	KLN-R50	---	A2K-50R	HSJ50
5.5 (7.5)	60 ²⁾	FWX-60	KTN-R60	JKS-60	JJN-60	---	---	---	5014006-063	KLN-R60	---	A2K-60R	HSJ60
7.5 (10)	80	FWX-80	KTN-R80	JKS-80	JJN-80	---	---	---	5014006-080	KLN-R80	---	A2K-80R	HSJ80
15 (20)	150	FWX-150	KTN-R150	JKS-150	JJN-150	---	---	---	2028220-150	KLN-R150	---	A2K-150R	HSJ150
22 (30)	200	FWX-200	KTN-R200	JKS-200	JJN-200	---	---	---	2028220-200	KLN-R200	---	A2K-200R	HSJ200

Table 7.23 1x200–240 V, Enclosure Sizes A, B, and C

1) Siba allowed up to 32 A.

2) Siba allowed up to 63 A.

1x380–500 V, Enclosure Sizes B and C

Recommended maximum fuse													
Power [kW (hp)]	Max. pre-fuse size [A]	Bussmann JFHR2	Bussmann RK1	Bussmann J	Bussmann T	Bussmann CC	Bussmann CC	Bussmann CC	SIBA RK1	Littelfuse RK1	Ferraz-Shawmut CC	Ferraz-Shawmut RK1	Ferraz-Shawmut J
7.5 (10)	60	FWH-60	KTS-R60	JKS-60	JJS-60				5014006-063	KLS-R60	-	A6K-60R	HSJ60
11 (15)	80	FWH-80	KTS-R80	JKS-80	JJS-80				2028220-100	KLS-R80	-	A6K-80R	HSJ80
22 (30)	150	FWH-150	KTS-R150	JKS-150	JJS-150				2028220-160	KLS-R150	-	A6K-150R	HSJ150
37 (50)	200	FWH-200	KTS-R200	JKS-200	JJS-200				2028220-200	KLS-200		A6K-200R	HSJ200

Table 7.24 1x380–500 V, Enclosure Sizes B and C

- KTS fuses from Bussmann may substitute KTN for 240 V adjustable frequency drives.
- FWH fuses from Bussmann may substitute FWX for 240 V adjustable frequency drives.
- JJS fuses from Bussmann may substitute JJN for 240 V adjustable frequency drives
- KLSR fuses from Littelfuse may substitute KLNR fuses for 240 V adjustable frequency drives.

- A6KR fuses from Ferraz-Shawmut may substitute A2KR for 240 V adjustable frequency drives.

3x200–240 V, Enclosure Sizes A, B, and C

Power [kW (hp)]	Recommended maximum fuse					
	Bussmann Type RK1 ¹⁾	Bussmann Type J	Bussmann Type T	Bussmann Type CC	Bussmann	Bussmann Type CC
0.25–0.37 (0.34–0.5)	KTN-R-05	JKS-05	JJN-05	FNQ-R-5	KTK-R-5	LP-CC-5
0.55–1.1 (0.75–1.5)	KTN-R-10	JKS-10	JJN-10	FNQ-R-10	KTK-R-10	LP-CC-10
1.5 (2)	KTN-R-15	JKS-15	JJN-15	FNQ-R-15	KTK-R-15	LP-CC-15
2.2 (3)	KTN-R-20	JKS-20	JJN-20	FNQ-R-20	KTK-R-20	LP-CC-20
3.0 (4)	KTN-R-25	JKS-25	JJN-25	FNQ-R-25	KTK-R-25	LP-CC-25
3.7 (5)	KTN-R-30	JKS-30	JJN-30	FNQ-R-30	KTK-R-30	LP-CC-30
5.5–7.5 (7.5– 10)	KTN-R-50	JKS-50	JJN-50	-	-	-
11 (15)	KTN-R-60	JKS-60	JJN-60	-	-	-
15 (20)	KTN-R-80	JKS-80	JJN-80	-	-	-
18.5–22	KTN-R-125	JKS-125	JJN-125	-	-	-
30 (40)	KTN-R-150	JKS-150	JJN-150	-	-	-
37 (50)	KTN-R-200	JKS-200	JJN-200	-	-	-
45 (60)	KTN-R-250	JKS-250	JJN-250	-	-	-

Table 7.25 3x200–240 V, Enclosure Sizes A, B, and C

Power [kW (hp)]	Recommended maximum fuse							
	SIBA Type RK1	Littelfuse Type RK1	Ferraz- Shawmut Type CC	Ferraz- Shawmut Type RK1 ²⁾	Bussmann Type JFHR2 ³⁾	Littelfuse JFHR2	Ferraz- Shawmut JFHR2 ⁴⁾	Ferraz- Shawmut J
0.25–0.37 (0.34–0.5)	5017906-005	KLN-R-05	ATM-R-05	A2K-05-R	FWX-5	-	-	HSJ-6
0.55–1.1 (0.75–1.5)	5017906-010	KLN-R-10	ATM-R-10	A2K-10-R	FWX-10	-	-	HSJ-10
1.5 (2)	5017906-016	KLN-R-15	ATM-R-15	A2K-15-R	FWX-15	-	-	HSJ-15
2.2 (3)	5017906-020	KLN-R-20	ATM-R-20	A2K-20-R	FWX-20	-	-	HSJ-20
3.0 (4)	5017906-025	KLN-R-25	ATM-R-25	A2K-25-R	FWX-25	-	-	HSJ-25
3.7 (5)	5012406-032	KLN-R-30	ATM-R-30	A2K-30-R	FWX-30	-	-	HSJ-30
5.5–7.5 (7.5–10)	5014006-050	KLN-R-50	-	A2K-50-R	FWX-50	-	-	HSJ-50
11 (15)	5014006-063	KLN-R-60	-	A2K-60-R	FWX-60	-	-	HSJ-60
15 (20)	5014006-080	KLN-R-80	-	A2K-80-R	FWX-80	-	-	HSJ-80
18.5–22 (25–30)	2028220-125	KLN-R-125	-	A2K-125-R	FWX-125	-	-	HSJ-125
30 (40)	2028220-150	KLN-R-150	-	A2K-150-R	FWX-150	L25S-150	A25X-150	HSJ-150
37 (50)	2028220-200	KLN-R-200	-	A2K-200-R	FWX-200	L25S-200	A25X-200	HSJ-200
45 (60)	2028220-250	KLN-R-250	-	A2K-250-R	FWX-250	L25S-250	A25X-250	HSJ-250

Table 7.26 3x200–240 V, Enclosure Sizes A, B, and C

- 1) KTS fuses from Bussmann may substitute KTN for 240 V adjustable frequency drives.
- 2) A6KR fuses from Ferraz-Shawmut may substitute A2KR for 240 V adjustable frequency drives.
- 3) FWH fuses from Bussmann may substitute FWX for 240 V adjustable frequency drives.
- 4) A50X fuses from Ferraz-Shawmut may substitute A25X for 240 V adjustable frequency drives.

3x380–480 V, Enclosure Sizes A, B, and C

Power [kW (hp)]	Recommended maximum fuse					
	Bussmann Type RK1	Bussmann Type J	Bussmann Type T	Bussmann Type CC	Bussmann Type CC	Bussmann Type CC
-	KTS-R-6	JKS-6	JJS-6	FNQ-R-6	KTK-R-6	LP-CC-6
1.1–2.2 (1.5–3)	KTS-R-10	JKS-10	JJS-10	FNQ-R-10	KTK-R-10	LP-CC-10
3 (4)	KTS-R-15	JKS-15	JJS-15	FNQ-R-15	KTK-R-15	LP-CC-15
4 (5)	KTS-R-20	JKS-20	JJS-20	FNQ-R-20	KTK-R-20	LP-CC-20
5.5 (7.5)	KTS-R-25	JKS-25	JJS-25	FNQ-R-25	KTK-R-25	LP-CC-25
7.5 (10)	KTS-R-30	JKS-30	JJS-30	FNQ-R-30	KTK-R-30	LP-CC-30
11 (15)	KTS-R-40	JKS-40	JJS-40	-	-	-
15 (20)	KTS-R-50	JKS-50	JJS-50	-	-	-
22 (30)	KTS-R-60	JKS-60	JJS-60	-	-	-
30 (40)	KTS-R-80	JKS-80	JJS-80	-	-	-
37 (50)	KTS-R-100	JKS-100	JJS-100	-	-	-
45 (60)	KTS-R-125	JKS-125	JJS-125	-	-	-
55 (75)	KTS-R-150	JKS-150	JJS-150	-	-	-
75 (100)	KTS-R-200	JKS-200	JJS-200	-	-	-
90 (125)	KTS-R-250	JKS-250	JJS-250	-	-	-

7

Table 7.27 3x380–480 V, Enclosure Sizes A, B, and C

Power [kW (hp)]	Recommended maximum fuse							
	SIBA Type RK1	Littelfuse Type RK1	Ferraz-Shawmut Type CC	Ferraz-Shawmut Type RK1	Bussmann JFHR2	Ferraz-Shawmut J	Ferraz-Shawmut JFHR2 ¹⁾	Littelfuse JFHR2
-	5017906-006	KLS-R-6	ATM-R-6	A6K-6-R	FWH-6	HSJ-6	-	-
1.1–2.2 (1.5–3)	5017906-010	KLS-R-10	ATM-R-10	A6K-10-R	FWH-10	HSJ-10	-	-
3 (4)	5017906-016	KLS-R-15	ATM-R-15	A6K-15-R	FWH-15	HSJ-15	-	-
4 (5)	5017906-020	KLS-R-20	ATM-R-20	A6K-20-R	FWH-20	HSJ-20	-	-
5.5 (7.5)	5017906-025	KLS-R-25	ATM-R-25	A6K-25-R	FWH-25	HSJ-25	-	-
7.5 (10)	5012406-032	KLS-R-30	ATM-R-30	A6K-30-R	FWH-30	HSJ-30	-	-
11 (15)	5014006-040	KLS-R-40	-	A6K-40-R	FWH-40	HSJ-40	-	-
15 (20)	5014006-050	KLS-R-50	-	A6K-50-R	FWH-50	HSJ-50	-	-
22 (30)	5014006-063	KLS-R-60	-	A6K-60-R	FWH-60	HSJ-60	-	-
30 (40)	2028220-100	KLS-R-80	-	A6K-80-R	FWH-80	HSJ-80	-	-
37 (50)	2028220-125	KLS-R-100	-	A6K-100-R	FWH-100	HSJ-100	-	-
45 (60)	2028220-125	KLS-R-125	-	A6K-125-R	FWH-125	HSJ-125	-	-
55 (75)	2028220-160	KLS-R-150	-	A6K-150-R	FWH-150	HSJ-150	-	-
75 (100)	2028220-200	KLS-R-200	-	A6K-200-R	FWH-200	HSJ-200	A50-P-225	L50-S-225
90 (125)	2028220-250	KLS-R-250	-	A6K-250-R	FWH-250	HSJ-250	A50-P-250	L50-S-250

Table 7.28 3x380–480 V, Enclosure Sizes A, B, and C

1) Ferraz-Shawmut A50QS fuses may substitute A50P fuses.

3x525–600 V, Enclosure Sizes A, B, and C

Power [kW (hp)]	Recommended maximum fuse									
	Bussmann Type RK1	Bussman n Type J	Bussmann Type T	Bussmann Type CC	Bussman n Type CC	Bussman n Type CC	SIBA Type RK1	Littelfuse Type RK1	Ferraz- Shawmut Type RK1	Ferraz- Shawmut J
0.75– 1.1 (1– 1.5)	KTS-R-5	JKS-5	JJS-6	FNQ-R-5	KTK-R-5	LP-CC-5	5017906-005	KLS-R-005	A6K-5-R	HSJ-6
1.5–2.2 (2–3)	KTS-R-10	JKS-10	JJS-10	FNQ-R-10	KTK-R-10	LP-CC-10	5017906-010	KLS-R-010	A6K-10-R	HSJ-10
3 (4)	KTS-R-15	JKS-15	JJS-15	FNQ-R-15	KTK-R-15	LP-CC-15	5017906-016	KLS-R-015	A6K-15-R	HSJ-15
4 (5)	KTS-R-20	JKS-20	JJS-20	FNQ-R-20	KTK-R-20	LP-CC-20	5017906-020	KLS-R-020	A6K-20-R	HSJ-20
5.5 (7.5)	KTS-R-25	JKS-25	JJS-25	FNQ-R-25	KTK-R-25	LP-CC-25	5017906-025	KLS-R-025	A6K-25-R	HSJ-25
7.5 (10)	KTS-R-30	JKS-30	JJS-30	FNQ-R-30	KTK-R-30	LP-CC-30	5017906-030	KLS-R-030	A6K-30-R	HSJ-30
11–15	KTS-R-35	JKS-35	JJS-35	-	-	-	5014006-040	KLS-R-035	A6K-35-R	HSJ-35
18 (24)	KTS-R-45	JKS-45	JJS-45	-	-	-	5014006-050	KLS-R-045	A6K-45-R	HSJ-45
22 (30)	KTS-R-50	JKS-50	JJS-50	-	-	-	5014006-050	KLS-R-050	A6K-50-R	HSJ-50
30 (40)	KTS-R-60	JKS-60	JJS-60	-	-	-	5014006-063	KLS-R-060	A6K-60-R	HSJ-60
37 (50)	KTS-R-80	JKS-80	JJS-80	-	-	-	5014006-080	KLS-R-075	A6K-80-R	HSJ-80
45 (60)	KTS-R-100	JKS-100	JJS-100	-	-	-	5014006-100	KLS-R-100	A6K-100-R	HSJ-100
55 (75)	KTS-R-125	JKS-125	JJS-125	-	-	-	2028220-125	KLS-R-125	A6K-125-R	HSJ-125
75 (100)	KTS-R-150	JKS-150	JJS-150	-	-	-	2028220-150	KLS-R-150	A6K-150-R	HSJ-150
90 (125)	KTS-R-175	JKS-175	JJS-175	-	-	-	2028220-200	KLS-R-175	A6K-175-R	HSJ-175

Table 7.29 3x525–600 V, Enclosure Sizes A, B, and C
3x525–690 V, Enclosure Sizes B and C

Power [kW (hp)]	Recommended maximum fuse							
	Maximum pre-fuse [A]	Bussmann E52273 RK1/JDDZ	Bussmann E4273 J/JDDZ	Bussmann E4273 T/JDDZ	SIBA E180276 RK1/JDDZ	Littelfuse E81895 RK1/JDDZ	Ferraz- Shawmut E163267/E2137 RK1/JDDZ	Ferraz- Shawmut E2137 J/HSJ
11–15 (15–20)	30	KTS-R-30	JKS-30	JJS-30	5017906-030	KLS-R-030	A6K-30-R	HST-30
22 (30)	45	KTS-R-45	JKS-45	JJS-45	5014006-050	KLS-R-045	A6K-45-R	HST-45
30 (40)	60	KTS-R-60	JKS-60	JJS-60	5014006-063	KLS-R-060	A6K-60-R	HST-60
37 (50)	80	KTS-R-80	JKS-80	JJS-80	5014006-080	KLS-R-075	A6K-80-R	HST-80
45 (60)	90	KTS-R-90	JKS-90	JJS-90	5014006-100	KLS-R-090	A6K-90-R	HST-90
55 (75)	100	KTS-R-100	JKS-100	JJS-100	5014006-100	KLS-R-100	A6K-100-R	HST-100
75 (100)	125	KTS-R-125	JKS-125	JJS-125	2028220-125	KLS-150	A6K-125-R	HST-125
90 (125)	150	KTS-R-150	JKS-150	JJS-150	2028220-150	KLS-175	A6K-150-R	HST-150

Table 7.30 3x525–690 V, Enclosure Sizes B and C

7.8 Power Ratings, Weight and Dimensions

Enclosure size [kW (hp)]	A2	A3	A4	A5	B1	B2	B3	B4	C1	C2	C3	C4
1x200-240 V	-	1.1 (1.5)	1.1-2.2 (1.5-3)	1.1 (1.5)	1.5-3.7 (2-5)	7.5 (10)	-	-	15 (20)	22 (30)	-	-
3x200-240 V	0.25-3.0 (0.34-4)	3.7 (5)	0.25-2.2 (0.34-3)	0.25-3.7 (0.34-5)	5.5-11 (7.5-15)	15 (20)	5.5-11 (7.5-15)	15-18.5 (20-25)	18.5-30 (25-40)	37-45 (50-60)	22-30 (30-40)	37-45 (50-60)
1x380-480 V	-	-	1.1-4.0 (1.5-5)	-	7.5 (10)	11 (15)	-	-	18 (24)	37 (50)	-	-
3x380-480 V	0.37-4.0 (5-5.4)	5.5-7.5 (7.5-10)	0.37-4.0 (5-5.4)	0.37-7.5 (0.5-10)	11-18.5 (15-25)	22-30 (30-40)	11-18.5 (15-25)	22-37 (30-50)	37-55 (50-65)	75-90 (100-125)	45-55 (60-75)	75-90 (100-125)
3x525-600 V	-	0.75-7.5 (1-10)	-	0.75-7.5 (1-10)	11-18.5 (15-25)	22-30 (30-40)	11-18.5 (15-25)	22-37 (30-50)	37-55 (50-65)	75-90 (100-125)	45-55 (60-75)	75-90 (100-125)
3x525-690 V	-	-	-	-	-	11-30 (15-40)	-	-	-	37-90 (50-125)	-	-
IP NEMA	20 Chassis 21 Type 1	20 Chassis 21 Type 1	55/66 Type 12/4X	55/66 Type 12/4X	21/55/66 Type 1/12/4X	21/55/66 Type 1/12/4X	20 Chassis	20 Chassis	21/55/66 Type 1/12/4X	21/55/66 Type 1/12/4X	20 Chassis	20 Chassis
Height [mm (in)]												
Height of backplate	268 (10.55)	268 (10.55)	390 (15.35)	420 (16.54)	480 (18.9)	650 (25.59)	399 (15.71)	520 (20.47)	680 (26.77)	770 (30.32)	550 (21.65)	660 (25.98)
Height with de-coupling plate for serial communication bus cables	374 (14.72)	374 (14.72)	-	-	-	-	419 (16.5)	595 (23.43)	-	-	630 (24.8)	800 (31.5)
Distance between mounting holes	257 (10.12)	350 (13.78)	401 (15.79)	402 (15.83)	454 (17.87)	624 (24.57)	380 (14.96)	495 (19.49)	648 (25.5)	739 (29.1)	521 (20.51)	631 (24.84)
Width [mm (in)]												
Width of backplate	90 (3.54)	130 (5.12)	200 (7.87)	242 (9.53)	242 (9.53)	242 (9.53)	165 (6.5)	231 (9.1)	308 (12.13)	370 (14.57)	308 (12.13)	370 (14.57)
Width of backplate with 1 C option	130 (5.12)	170 (6.69)	-	242 (9.53)	242 (9.53)	242 (9.53)	205 (8.07)	231 (9.1)	308 (12.13)	370 (14.57)	308 (12.13)	370 (14.57)
Width of backplate with two C options	90 (3.54)	130 (5.12)	-	242 (9.53)	242 (9.53)	242 (9.53)	165 (6.5)	231 (9.1)	308 (12.13)	370 (14.57)	308 (12.13)	370 (14.57)

Enclosure size [kW (hp)]	A2	A3	A4	A5	B1	B2	B3	B4	C1	C2	C3	C4
1x200-240 V	-	1.1 (1.5)	1.1-2.2 (1.5-3)	1.1 (1.5)	1.5-3.7 (2-5)	7.5 (10)	-	-	15 (20)	22 (30)	-	-
3x200-240 V	0.25-3.0 (0.34-4)	3.7 (5)	0.25-2.2 (0.34-3)	0.25-3.7 (0.34-5)	5.5-11 (7.5-15)	15 (20)	5.5-11 (7.5-15)	15-18.5 (20-25)	18.5-30 (25-40)	37-45 (50-60)	22-30 (30-40)	37-45 (50-60)
1x380-480 V	-	-	1.1-4.0 (1.5-5)	-	7.5 (10)	11 (15)	-	-	18 (24)	37 (50)	-	-
3x380-480 V	0.37-4.0 (5-5.4)	5.5-7.5 (7.5-10)	0.37-4.0 (5-5.4)	0.37-7.5 (0.5-10)	11-18.5 (15-25)	22-30 (30-40)	11-18.5 (15-25)	22-37 (30-50)	37-55 (50-65)	75-90 (100-125)	45-55 (60-75)	75-90 (100-125)
3x525-600 V	-	0.75-7.5 (1-10)	-	0.75-7.5 (1-10)	11-18.5 (15-25)	22-30 (30-40)	11-18.5 (15-25)	22-37 (30-50)	37-55 (50-65)	75-90 (100-125)	45-55 (60-75)	75-90 (100-125)
3x525-690 V	-	-	-	-	-	11-30 (15-40)	-	-	-	37-90 (50-125)	-	-
Distance between mounting holes	70 (2.76)	110 (4.33)	171 (6.73)	215 (8.47)	210 (8.27)	210 (8.27)	140 (5.51)	200 (7.87)	272 (10.71)	334 (13.15)	270 (10.63)	330 (13)
Depth ¹⁾ [mm (in)]												
Without option A/B	205 (8.07)	205 (8.07)	175 (6.89)	200 (7.87)	260 (10.24)	260 (10.24)	248 (9.76)	242 (9.53)	310 (12.21)	335 (13.19)	333 (13.11)	333 (13.11)
With option A/B	220 (8.66)	220 (8.66)	175 (6.89)	200 (7.87)	260 (10.24)	260 (10.24)	262 (10.32)	242 (9.53)	310 (12.21)	335 (13.19)	333 (13.11)	333 (13.11)
Screw holes [mm (in)]												
c	8.0 (0.315)	8.0 (0.315)	8.0 (0.315)	8.2 (0.323)	12 (0.47)	12 (0.47)	8 (0.315)	-	12 (0.47)	12 (0.47)	-	-
d	ø11 (0.43)	ø11 (0.43)	ø12 (0.47)	ø12 (0.47)	ø19 (0.75)	ø19 (0.75)	12 (0.47)	-	ø19 (0.75)	ø19 (0.75)	-	-
e	ø5.5 (0.217)	ø5.5 (0.217)	ø6.5 (0.256)	ø6.5 (0.256)	ø9 (0.354)	ø9 (0.354)	6.8 (0.267)	8.5 (0.335)	ø9.0 (0.354)	ø9.0 (0.354)	8.5 (0.335)	8.5 (0.335)
f	9 (0.354)	9 (0.354)	6 (0.236)	9 (0.354)	9 (0.354)	9 (0.354)	7.9 (0.311)	15 (0.59)	9.8 (0.386)	9.8 (0.386)	17 (0.67)	17 (0.67)

Enclosure size [kW (hp)]	A2	A3	A4	A5	B1	B2	B3	B4	C1	C2	C3	C4
1x200-240 V	-	1.1 (1.5)	1.1-2.2 (1.5-3)	1.1 (1.5)	1.5-3.7 (2-5)	7.5 (10)	-	-	15 (20)	22 (30)	-	-
3x200-240 V	0.25-3.0 (0.34-4)	3.7 (5)	0.25-2.2 (0.34-3)	0.25-3.7 (0.34-5)	5.5-11 (7.5-15)	15 (20)	5.5-11 (7.5-15)	15-18.5 (20-25)	18.5-30 (25-40)	37-45 (50-60)	22-30 (30-40)	37-45 (50-60)
1x380-480 V	-	-	1.1-4.0 (1.5-5)	-	7.5 (10)	11 (15)	-	-	18 (24)	37 (50)	-	-
3x380-480 V	0.37-4.0 (5-5.4)	5.5-7.5 (7.5-10)	0.37-4.0 (5-5.4)	0.37-7.5 (0.5-10)	11-18.5 (15-25)	22-30 (30-40)	11-18.5 (15-25)	22-37 (30-50)	37-55 (50-65)	75-90 (100-125)	45-55 (60-75)	75-90 (100-125)
3x525-600 V	-	0.75-7.5 (1-10)	-	0.75-7.5 (1-10)	11-18.5 (15-25)	22-30 (30-40)	11-18.5 (15-25)	22-37 (30-50)	37-55 (50-65)	75-90 (100-125)	45-55 (60-75)	75-90 (100-125)
3x525-690 V	-	-	-	-	-	11-30 (15-40)	-	-	-	37-90 (50-125)	-	-
Maximum weight [kg (lb)]	4.9 (11)	6.6 (15)	9.7 (22)	14 (31)	23 (51)	27 (60)	12 (27)	23.5 (52)	45 (99)	65 (143)	35 (77)	50 (110)

1) Depth of enclosure will vary with different options installed.

Table 7.31 Power Ratings, Weight, and Dimensions

7.9 dU/dt Testing

To avoid damage to motors without phase insulation paper or other insulation reinforcement designed for operation of the adjustable frequency drive, installation of a dU/dt filter or LC filter on the output of the adjustable frequency drive is recommended.

When a transistor in the inverter bridge switches, the voltage across the motor increases by a dU/dt ratio depending on:

- Motor inductance
- Motor cable (type, cross-section, length, shielded, or non-shielded)

The natural induction causes an overshoot voltage peak in the motor voltage before it stabilizes. The level depends on the voltage in the DC link.

Peak voltage on the motor terminals is caused by the switching of the IGBTs. The rise time and the peak voltage affects the service life of the motor. If the peak voltage is too high, motors without phase coil insulation can be adversely affected over time.

With short motor cables (several feet or meters), the rise time and peak voltage are lower. The rise time and peak voltage increase with cable length.

The adjustable frequency drive complies with IEC 60034-25 and IEC 60034-17 for motor design.

7.9.1 Peak Voltage on Motor

To obtain approximate values for cable lengths and voltages not mentioned below, use the following "Rules of Thumb":

1. Rise time increases/decreases proportionally with cable length.
2. $U_{PEAK} = \text{DC link voltage} \times 1.9$
(DC link voltage = AC line voltage \times 1.35).
3. $dU/dt = \frac{0.8 \times U_{PEAK}}{\text{Rise time}}$

Data is measured according to IEC 60034-17.

Cable lengths are in meters.

200–240 V (T2)

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
36	240	0.226	0.616	2.142
50	240	0.262	0.626	1.908
100	240	0.650	0.614	0.757
150	240	0.745	0.612	0.655

Table 7.32 Adjustable Frequency Drive, P5K5, T2

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
5	230	0.13	0.510	3.090
50	230	0.23	0.590	2.034
100	230	0.54	0.580	0.865
150	230	0.66	0.560	0.674

Table 7.33 Adjustable Frequency Drive, P7K5, T2

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
36	240	0.264	0.624	1.894
136	240	0.536	0.596	0.896
150	240	0.568	0.568	0.806

Table 7.34 Adjustable Frequency Drive, P11K, T2

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
30	240	0.556	0.650	0.935
100	240	0.592	0.594	0.807
150	240	0.708	0.575	0.669

Table 7.35 Adjustable Frequency Drive, P15K, T2

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
36	240	0.244	0.608	1.993
136	240	0.568	0.580	0.832
150	240	0.720	0.574	0.661

Table 7.36 Adjustable Frequency Drive, P18K, T2

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
36	240	0.244	0.608	1.993
136	240	0.560	0.580	0.832
150	240	0.720	0.574	0.661

Table 7.37 Adjustable Frequency Drive, P22K, T2

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
15	240	0.194	0.626	2.581
50	240	0.252	0.574	1.929
150	240	0.444	0.538	0.977

Table 7.38 Adjustable Frequency Drive, P30K, T2

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
30	240	0.300	0.598	1.593
100	240	0.536	0.566	0.843
150	240	0.776	0.546	0.559

Table 7.39 Adjustable Frequency Drive, P37K, T2

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
30	240	0.300	0.598	1.593
100	240	0.536	0.566	0.843
150	240	0.776	0.546	0.559

Table 7.40 Adjustable Frequency Drive, P45K, T2

380–480 V (T4)

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
5	400	0.640	0.690	0.862
50	400	0.470	0.985	0.985
150	400	0.760	1.045	0.947

Table 7.41 Adjustable Frequency Drive, P1K5, T4

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
5	400	0.172	0.890	4.156
50	400	0.310		2.564
150	400	0.370	1.190	1.770

Table 7.42 Adjustable Frequency Drive, P4K0, T4

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
5	400	0.04755	0.739	8.035
50	400	0.207	1.040	4.548
150	400	0.6742	1.030	2.828

Table 7.43 Adjustable Frequency Drive, P7K5, T4

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
15	400	0.408	0.718	1.402
100	400	0.364	1.050	2.376
150	400	0.400	0.980	2.000

Table 7.44 Adjustable Frequency Drive, P11K, T4

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
36	400	0.422	1.060	2.014
100	400	0.464	0.900	1.616
150	400	0.896	1.000	0.915

Table 7.45 Adjustable Frequency Drive, P15K, T4

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
36	400	0.344	1.040	2.442
100	400	1.000	1.190	0.950
150	400	1.400	1.040	0.596

Table 7.46 Adjustable Frequency Drive, P18K, T4

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
36	400	0.232	0.950	3.534
100	400	0.410	0.980	1.927
150	400	0.430	0.970	1.860

Table 7.47 Adjustable Frequency Drive, P22K, T4

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
15	400	0.271	1.000	3.100
100	400	0.440	1.000	1.818
150	400	0.520	0.990	1.510

Table 7.48 Adjustable Frequency Drive, P30K, T4

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
5	480	0.270	1.276	3.781
50	480	0.435	1.184	2.177
100	480	0.840	1.188	1.131
150	480	0.940	1.212	1.031

Table 7.49 Adjustable Frequency Drive, P37K, T4

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
36	400	0.254	1.056	3.326
50	400	0.465	1.048	1.803
100	400	0.815	1.032	1.013
150	400	0.890	1.016	0.913

Table 7.50 Adjustable Frequency Drive, P45K, T4

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
10	400	0.350	0.932	2.130

Table 7.51 Adjustable Frequency Drive, P55K, T4

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
5	480	0.371	1.170	2.466

Table 7.52 Adjustable Frequency Drive, P75K, T4

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
5	400	0.364	1.030	2.264

Table 7.53 Adjustable Frequency Drive, P90K, T4

525–600 V (T6)

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
36	600	0.304	1.560	4.105
50	600	0.300	1.550	4.133
100	600	0.536	1.640	2.448
150	600	0.576	1.640	2.278

Table 7.54 Adjustable frequency drive, P11K, T6

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
36	600	0.084	1.560	7.962
50	600	0.120	1.540	5.467
100	600	0.165	1.472	3.976
150	600	0.190	1.530	3.432

Table 7.55 Adjustable frequency drive, P22K, T6

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
15	600	0.276	1.184	4.290

Table 7.56 Adjustable frequency drive, P55K, T6

525–690 V (T7)

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
80	690	0.580	1.728	2.369
130	690	0.930	1.824	1.569
180	690	0.925	1.818	1.570

Table 7.57 Adjustable frequency drive, P7K5, T6

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
5	690	0.250	1.440	4.608
105	690	0.570	1.800	2.526
180	690	0.982	1.840	1.499

Table 7.58 Adjustable frequency drive, P45K, T7

Cable length [m]	AC line voltage [V]	Rise time [μsec]	U _{PEAK} [kV]	dU/dt [kV/μsec]
6	690	0.238	1.416	4.739
50	690	0.358	1.764	3.922
150	690	0.465	1.872	3.252

Table 7.59 Adjustable frequency drive, P55K, T7

7.10 Acoustic Noise Ratings

Enclosure size	50% fan speed [dBA]	Full fan speed [dBA]
A1	51	60
A2	51	60
A3	51	60
A4	51	60
A5	54	63
B1	61	67
B2	58	70
B4	52	62
C1	52	62
C2	55	65
C4	56	71
D3h	58	71

Table 7.60 Acoustic Noise Ratings

Values are measured 1 m (3.3 ft) from the unit.

7.11 Selected Options

7.11.1 VLT® General Purpose I/O Module MCB 101

MCB 101 is used for extension of digital and analog inputs and outputs.

7.11.2 VLT® Relay Card MCB 105

The relay option MCB 105 includes three pieces of SPDT contacts and must be fitted into option slot B.

Electrical Data

Maximum terminal load (AC-1) ¹⁾ (resistive load)	240 V AC 2 A
Maximum terminal load (AC-15) ¹⁾ (inductive load @ cosφ 0.4)	240 V AC 0.2 A
Maximum terminal load (DC-1) ¹⁾ (resistive load)	24 V DC 1 A
Maximum terminal load (DC-13) ¹⁾ (inductive load)	24 V DC 0.1 A
Minimum terminal load (DC)	5 V 10 mA
Maximum switching rate at rated load/min load	6 minimum ⁻¹ /20 s ⁻¹

1) IEC 947 part 4 and 5

When the relay option kit is ordered separately, the kit includes

- Relay module MCB 105
- Enlarged LCP fixture and enlarged terminal cover
- Label for covering access to switches S201, S202 and S801
- Cable strips for fastening cables to relay module

Fit MCB 101 into slot B of the adjustable frequency drive.

Contents:

- MCB 101 option module
- Extended fixture for LCP
- Terminal cover


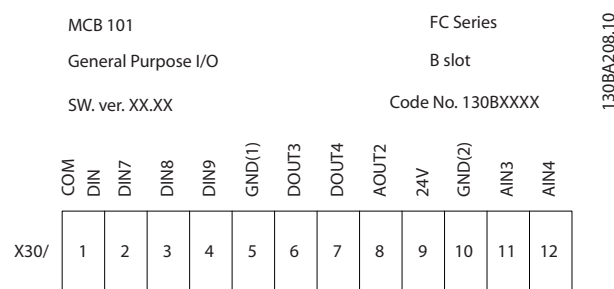



Figure 7.2 MCB 101 Option

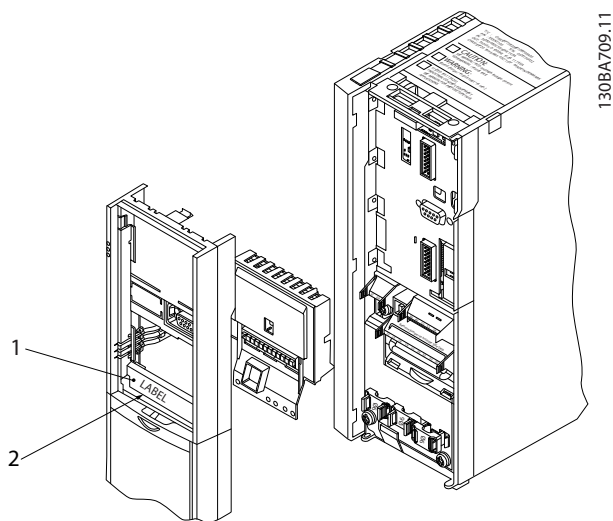

130BA709.11

1	WARNING! The label MUST be placed on the LCP frame as shown (UL-approved).
2	Relay card

Figure 7.3 Enclosure Sizes A2-A3-B3

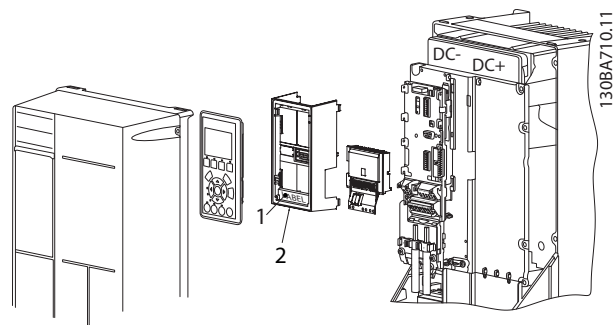

130BA710.11

1	WARNING! The label MUST be placed on the LCP frame as shown (UL-approved).
2	Relay card

Figure 7.4 Enclosure Sizes A5-B1-B2-B4-C1-C2-C3-C4

WARNING

Warning Dual Supply

130BE040.10

Figure 7.5 Warning Label Placed on Option

How to add the Relay card MCB 105 option:

1. Disconnect power to the adjustable frequency drive.
2. Disconnect power to the live part connections on relay terminals.


3. Remove the LCP, the terminal cover, and the LCP fixture from the adjustable frequency drive.
4. Fit the MCB 105 option in slot B.
5. Connect the control cables and fasten the cables with the enclosed cable strips.
6. Make sure the length of the stripped wire is correct (see Figure 7.7).
7. Do not mix live parts (high voltage) with control signals (PELV).
8. Fit the enlarged LCP fixture and enlarged terminal cover.
9. Replace the LCP.
10. Connect power to the adjustable frequency drive.
11. Select the relay functions in 5-40 Function Relay [6-8], 5-41 On Delay, Relay [6-8] and 5-42 Off Delay, Relay [6-8].

NOTICE!

Array [6] is relay 7, array [7] is relay 8, and array [8] is relay 9


NOTICE!

To access RS485 termination, switch S801 or current/voltage switches S201/S202, dismantle the relay card (see Figure 7.3 and Figure 7.4, position 2).

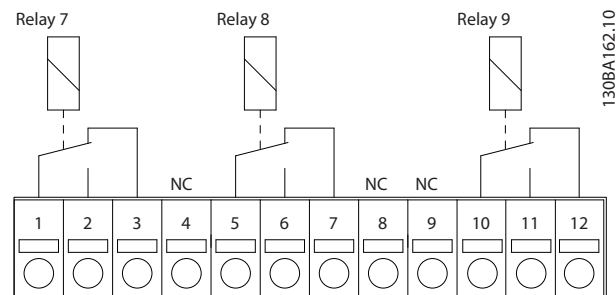


130BA162.10

Figure 7.6 Relays

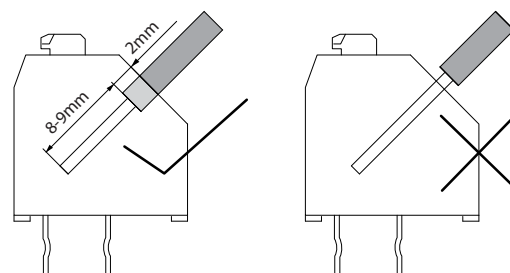

130BA177.10

Figure 7.7 Correct Wire Inserting

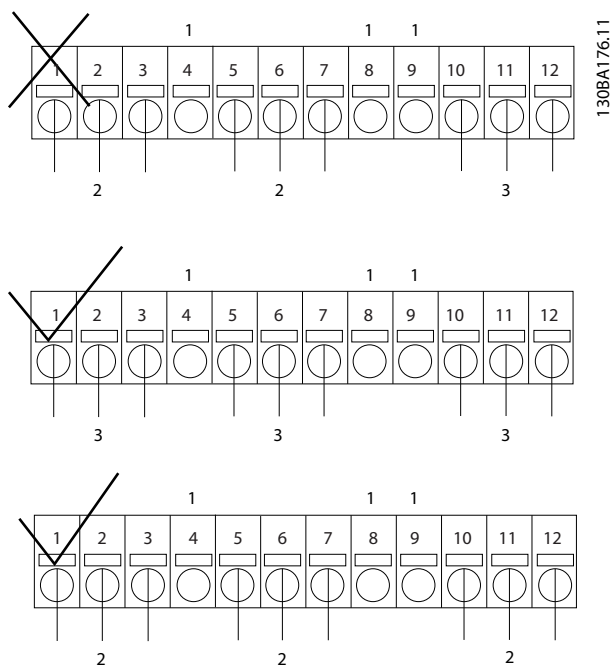

1	NC
2	Live part
3	PELV

Figure 7.8 Correct Relay Wiring

NOTICE!

Do not combine 24/48 V systems with high-voltage systems.

7.11.3 VLT[®] PTC Thermistor Card MCB 112

The MCB 112 option makes it possible to monitor the temperature of an electrical motor through a galvanically-isolated PTC thermistor input. It is a B option for adjustable frequency drives with STO.

For different application possibilities, see chapter 4 Application Examples.

X44/1 and X44/2 are the thermistor inputs. X44/12 enables STO of the adjustable frequency drive (T37), if the thermistor values make it necessary, and X44/10 informs the adjustable frequency drive that a request for STO came from the MCB 112 to ensure suitable alarm handling. One of the digital input parameters (or a digital input of a mounted option) must be set to [80] PTC Card 1 to use the information from X44/10. Configure 5-19 Terminal 37 Safe Stop to the desired STO functionality (default is safe stop alarm).

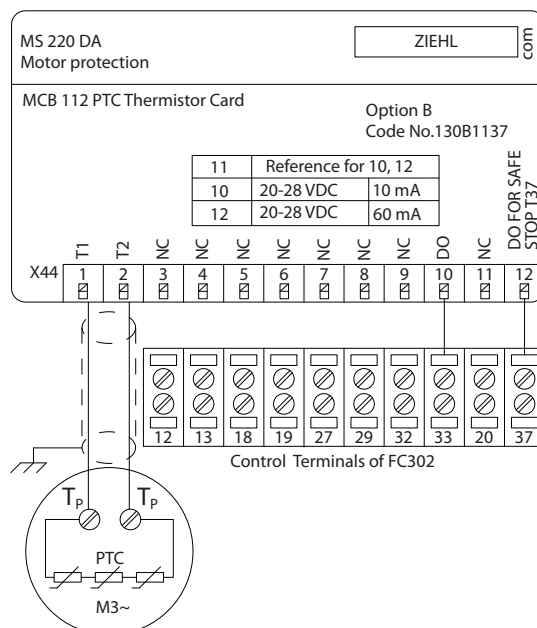


Figure 7.9 Installation of MCB 112

ATEX Certification with FC 102, FC 103, FC 202, and FC 302

The MCB 112 has been certified for ATEX, which means that the adjustable frequency drive with the MCB 112 can be used with motors in potentially explosive atmospheres. See the VLT[®] PTC Thermistor Card MCB 112 Instruction Manual for more information.

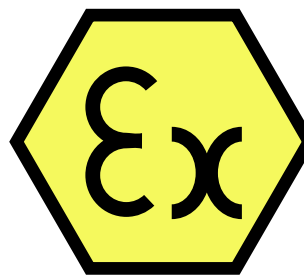


Figure 7.10 ATMosphere EXplosive (ATEX)

Electrical Data
Resistor connection

PTC compliant with DIN 44081 and DIN 44082.

Number	1..6 resistors in series
Shut-off value	3.3 Ω... 3.65 Ω... 3.85 Ω
Reset value	1.7 Ω... 1.8 Ω... 1.95 Ω
Trigger tolerance	± 6 °C (±11 °F)
Collective resistance of the sensor loop	< 1.65 Ω
Terminal voltage	≤ 2.5 V for R ≤ 3.65 Ω, ≤ 9 V for R = ∞
Sensor current	≤ 1 mA
Short-circuit	20 Ω ≤ R ≤ 40 Ω
Power consumption	60 mA

Testing conditions

EN 60 947-8

Measurement voltage surge resistance	6000 V
Overvoltage category	III
Pollution degree	2
Measurement isolation voltage Vbis	690 V
Reliable galvanic isolation until Vi	500 V
Rated ambient temperature range	-20 °C to +60 °C (-4 to +140 °F)
	EN 60068-2-1 dry heat
Moisture	5–95%, no condensation permissible
Vibration resistance	10 to 1000 Hz 1.14 g
Shock resistance	50 g

Safety system values

EN 61508 for Tu=75 °C (167 °F) ongoing

SIL	2 for maintenance cycle of 2 years 1 for maintenance cycle of 3 years
HFT	0
PFD (for yearly functional test)	4.10x10 ⁻³
SFF	78%
λ _s + λ _{DD}	8494 FIT
λ _{DU}	934 FIT
Ordering number 130B1137	

7.11.4 VLT® Extended Relay Card MCB 113

The MCB 113 extends the I/O of the adjustable frequency drive by seven digital inputs, two analog outputs, and four SPDT relays. The extended I/O increases flexibility and enables compliance with the German NAMUR NE37 recommendations.

The MCB 113 is a standard C1 option and is automatically detected after mounting.

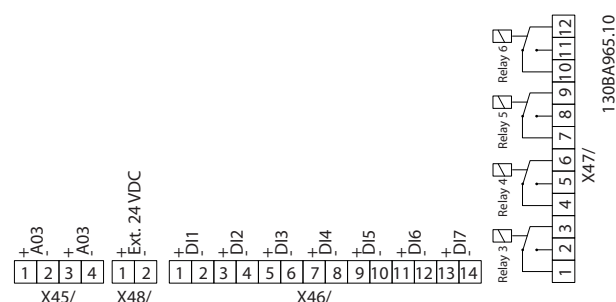


Figure 7.11 Electrical Connections of MCB 113

To ensure galvanic isolation between the adjustable frequency drive and the option card, connect MCB 113 to an external 24 V on X48. When galvanic isolation is not required, the option card can be supplied through internal 24 V from the adjustable frequency drive.

Electrical Data

Relays	
Numbers	4 SPDT
Load at 250 V AC/30 V DC	8 A
Load at 250 V AC/30 V DC with $\cos\phi = 0.4$	3.5 A
Overvoltage category (contact - ground)	III
Overvoltage category (contact - contact)	II
Combination of 250 V and 24 V signals	Possible with one unused relay between
Maximum throughput delay	10 ms
Isolated from ground/chassis for use on IT line power systems	
Digital Inputs	
Numbers	7
Range	0–24 V
Mode	PNP/NPN
Input impedance	4 kW
Low trigger level	6.4 V
High trigger level	17 V
Maximum throughput delay	10 ms
Analog outputs	
Numbers	2
Range	0/4–20 mA
Resolution	11 bit
Linearity	<0.2%

NOTICE!

To connect both 24 V signals and high-voltage signals in the relays, ensure that there is one unused relay between the 24 V signal and the high-voltage signal.

To set up MCB 113, use parameter groups:

- 5-1* Digital input
- 6-7* Analog output 3
- 6-8* Analog output 4
- 14-8* Options
- 5-4* Relays
- 16-6* Inputs and outputs

NOTICE!

In parameter group 5-4* Relay,

- Array [2] is relay 3.
- Array [3] is relay 4.
- Array [4] is relay 5.
- Array [5] is relay 6.

7.11.5 VLT® Sensor Input Option MCB 114

The sensor input option card MCB 114 can be used in the following cases:

- Sensor input for temperature transmitters PT100 and PT1000 for monitoring bearing temperatures.
- As general extension of analog inputs with one additional input for multi-zone control or differential pressure measurements.
- Support extended PID controllers with I/Os for setpoint, transmitter/sensor inputs.

Typical motors, designed with temperature sensors to protect bearings from being overloaded, are fitted with three PT100/1000 temperature sensors; One in front, one in the back-end bearing, and one in the motor windings. The VLT® Sensor Input Option MCB 114 supports 2- or 3-wire sensors with individual temperature limits for under-/overtemperature. An auto-detection of sensor type PT100 or PT1000 takes place at power-up.

7

If the measured temperature is either below the specified low limit, or above the specified high limit, the option generates an alarm. The individual measured temperature on each sensor input can be read out in the display or by readout parameters. If an alarm occurs, the relays or digital outputs can be programmed to be active high by selecting [21] *Thermal Warning* in parameter group 5-** *Digital In/Out*.

A fault condition has a common warning/alarm number associated with it, which is *Alarm/Warning 20, Temp. input error*. Any present output can be programmed to be active in case the warning or alarm appears.

7.11.5.1 Electrical and Mechanical Specifications

Analog Input

Number of analog inputs	1
Format	0–20 mA or 4–20 mA
Wires	2
Input impedance	<200 Ω
Sample rate	1 kHz
Third order filter	100 Hz at 3 dB

The option is able to supply the analog sensor with 24 V DC (terminal 1).

Temperature Sensor Input

Number of analog inputs supporting PT100/1000	3
Signal type	PT100/1000
Connection	PT 100 2 or 3 wire/PT1000 2 or 3 wire
Frequency PT100 and PT1000 input	1 Hz for each channel
Resolution	10 bit
Temperature range	-50–204 °C -58–399 °F


Galvanic Isolation

The sensors to be connected are expected to be galvanically isolated from the AC line voltage level. IEC 61800-5-1 and UL508C

Cabling

Maximum signal cable length	500 m (1640 ft)
-----------------------------	-----------------

7.11.5.2 Electrical Wiring

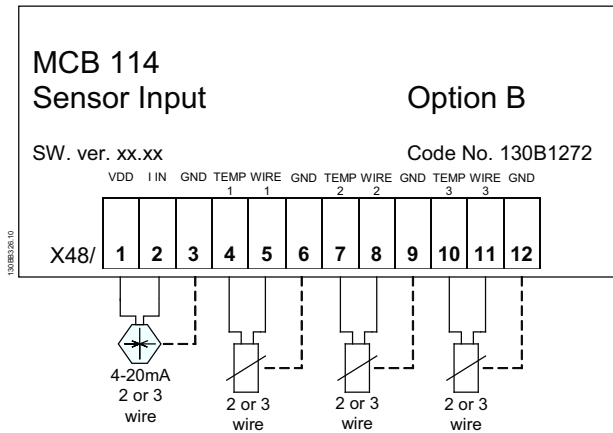

Terminal	Name	Function
1	VDD	24 V DC to supply 4–20 mA sensor
2	I in	4–20 mA input
3	GND	Analog input GND
4, 7, 10	Temp 1, 2, 3	Temperature input
5, 8, 11	Wire 1, 2, 3	Third wire input if three wire sensors are used
6, 9, 12	GND	Temperature input GND


Figure 7.12 MCB 114 Electrical Wiring

7.11.6 VLT[®] Extended Cascade Controller MCO 101

The MCO 101 option includes three change-over contacts and can be inserted into option slot B.

Max terminal load (AC)	240 V AC 2 A
Max terminal load (DC)	24 V DC 1 A
Min terminal load (DC)	5 V 10 mA
Max switching rate at rated load/min load	6 min ⁻¹ /20 s ⁻¹

Table 7.61 MCO 101 Electrical Data

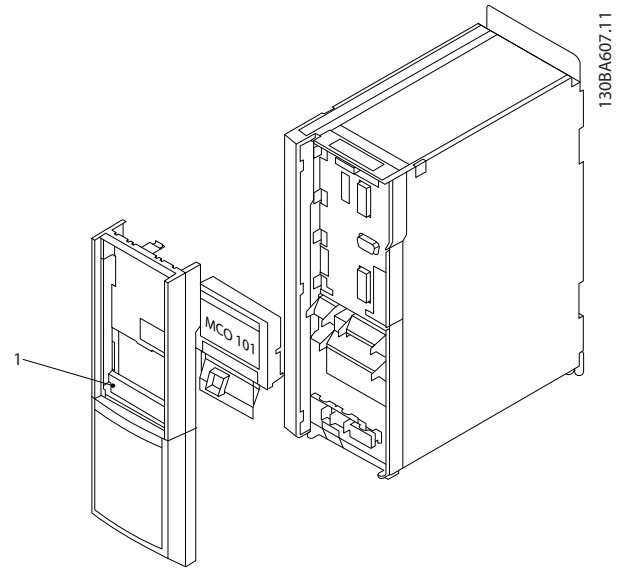


- 1 Dismount MCO 101 option to access RS485 termination (S801) or current/voltage switches (S201, S202)

Figure 7.13 Mounting of B Option

How to add the MCO 101 option:

1. Disconnect power to the adjustable frequency drive.
2. Disconnect power to the live part connections on relay terminals.
3. Remove the LCP, the terminal cover and the cradle from the FC 202.
4. Fit the MCO 101 option in slot B.
5. Connect the control cables and relieve the cables by the enclosed cable strips.
6. Fit the extended cradle and terminal cover.
7. Remount the LCP.
8. Connect power to the adjustable frequency drive.

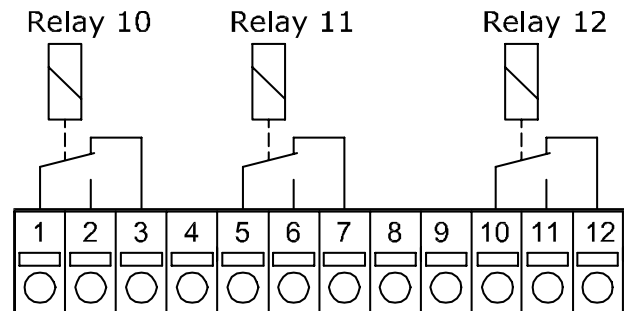

130BA606.10

Figure 7.14 Usage of Connections

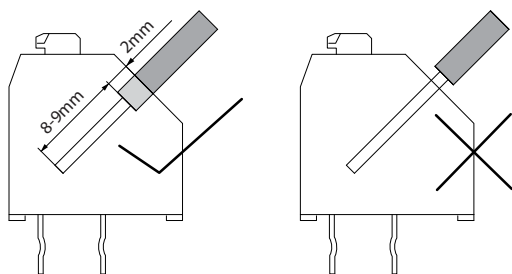


Figure 7.15 Mounting of Cables

130BA177.10

7.11.7 VLT® Advanced Cascade Controller MCO 102

The VLT advanced cascade control card MCO 102 option is exclusively intended for use in option slot C1. The mounting position of C1 options is shown in Figure 7.17.


Max terminal load (AC)	240 V AC 2 A
Max terminal load (DC)	24 V DC 1 A
Min terminal load (DC)	5 V 10 mA
Max switching rate at rated load/minimum load	6 min ⁻¹ /20 s ⁻¹

Table 7.62 Electrical Data, MCO 102

WARNING

Do not combine low voltage parts and PELV systems (see Figure 7.16).

7

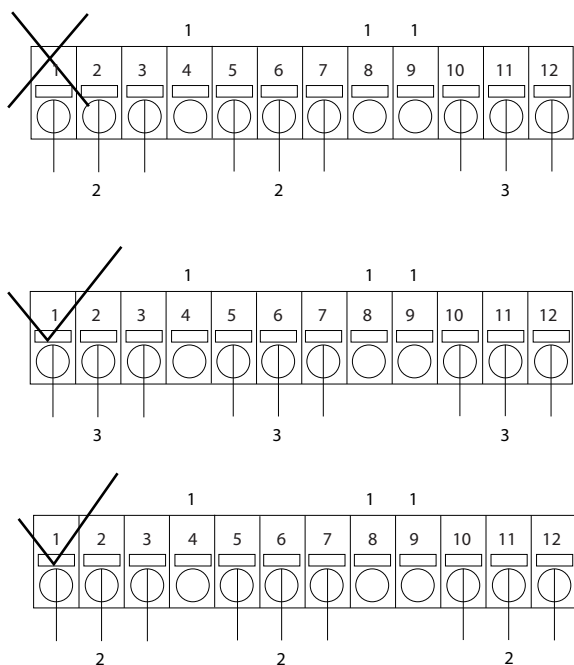

130BA176.11

1	NC
2	Live part
3	PELV

Figure 7.16 Incorrect and Correct Relay Wiring

Tools required

Some items are needed for the installation of a C option mounting kit (depending on the enclosure):

Type	Description	Ordering number
Options		
MCF 105	Mounting Kit frame size A2 and A3 (40 mm (1.57 in) for one C Option)	130B7530
MCF 105	Mounting Kit Frame size A5	130B7532
MCF 105	Mounting Kit Frame size B, C, D, E, F1 and F3 (Except B3)	130B7533
MCF 105	Mounting Kit frame size B3 (40 mm (1.57 in) for one C Option)	130B1413
Accessory bag		
MCO 102	Accessory Bag	130B0152

Table 7.63 Ordering Numbers for Mounting Kits and Accessory Bag


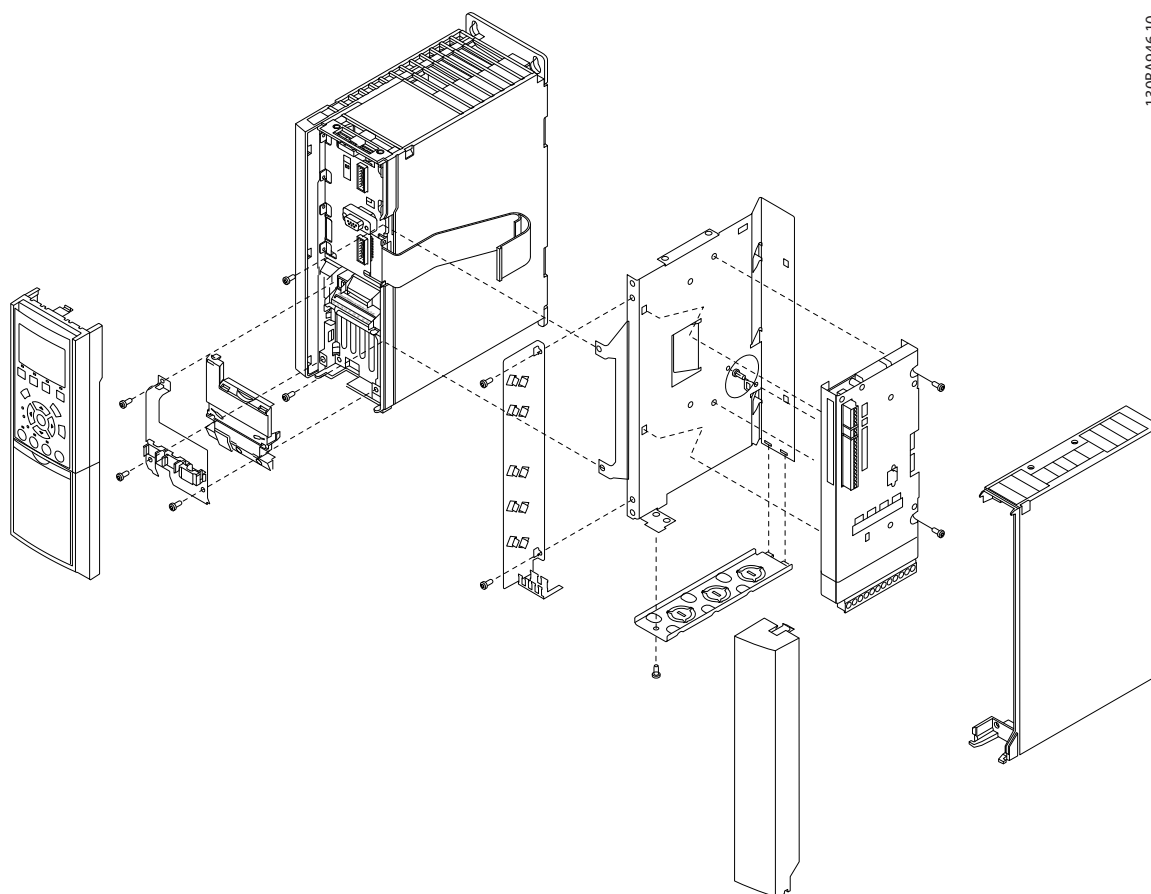


Figure 7.17 Enclosure A2, A3 (and B3) 40 mm (1.57 in) (only one C option)

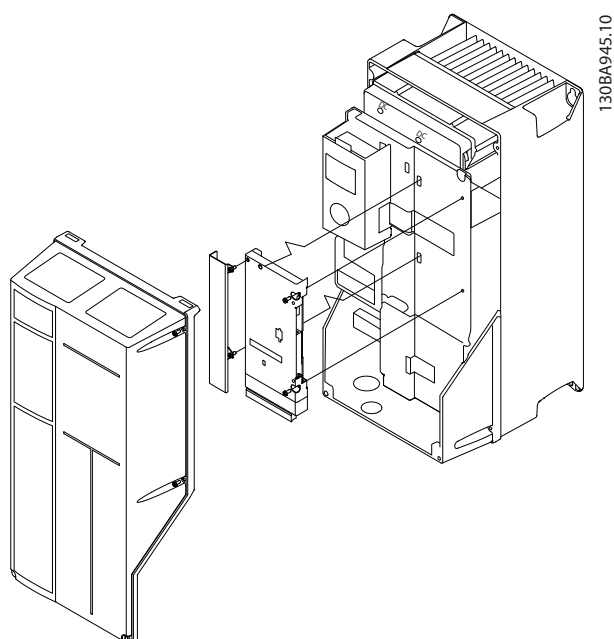

How to add the MCO 102 option

1. Disconnect power.
2. Disconnect power to the live part connections on relay terminals.
3. Remove the LCP, the terminal cover and the cradle from the FC 202.
4. Fit the MCO 102 option in slot C1.
5. Connect the control cables and relieve the cables by the enclosed cable strips.
6. Fit the extended cradle and terminal cover.
7. Remount the LCP.
8. Connect power to the adjustable frequency drive.

Figure 7.18 Enclosures B (except B3) and C

Wiring the Terminals

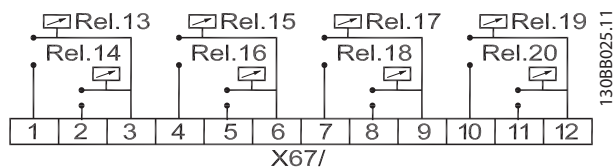


Figure 7.19 Advanced Cascade Controller MCO 102 Terminal Connections, 8 Relays

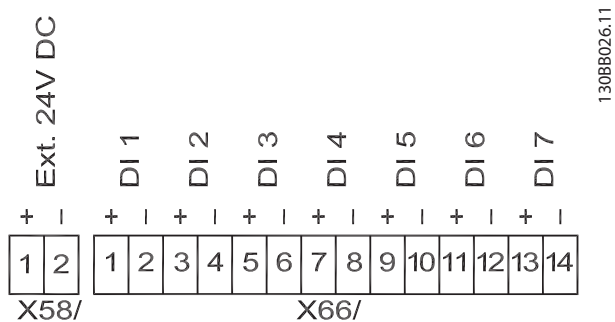


Figure 7.20 Advanced Cascade Controller MCO 102 Terminal Connections to the Seven Digital Inputs and Access to the Internal 24 V DC

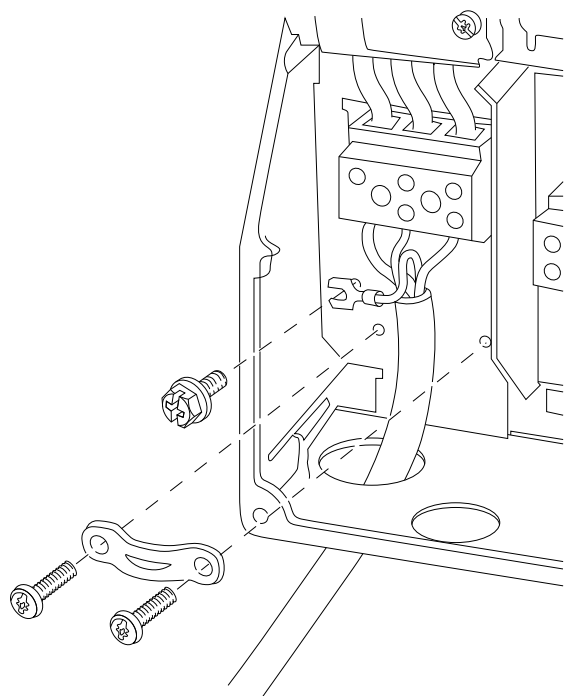


Figure 8.4 AC Line Input Connection Enclosures B1 and B2

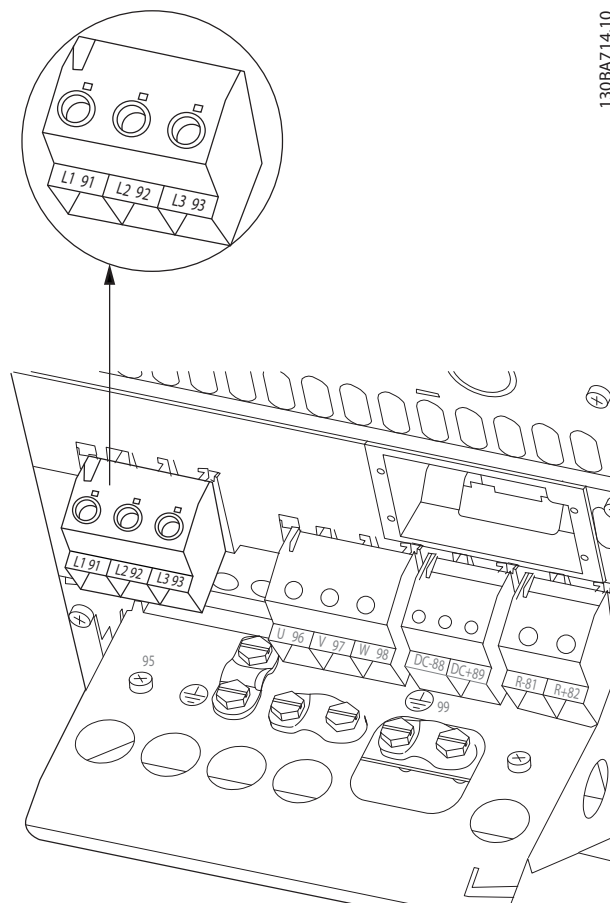


Figure 8.6 AC Line Input Connection Enclosure B4



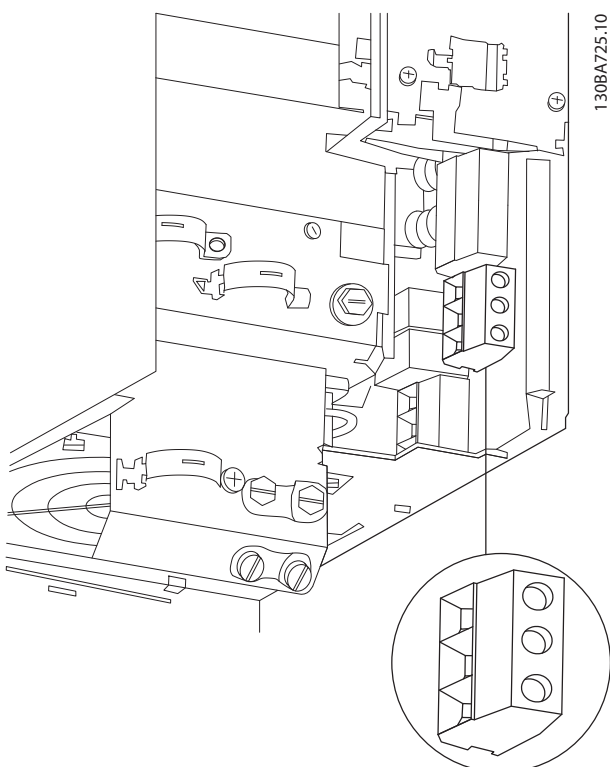


Figure 8.5 AC Line Input Connection Enclosure B3

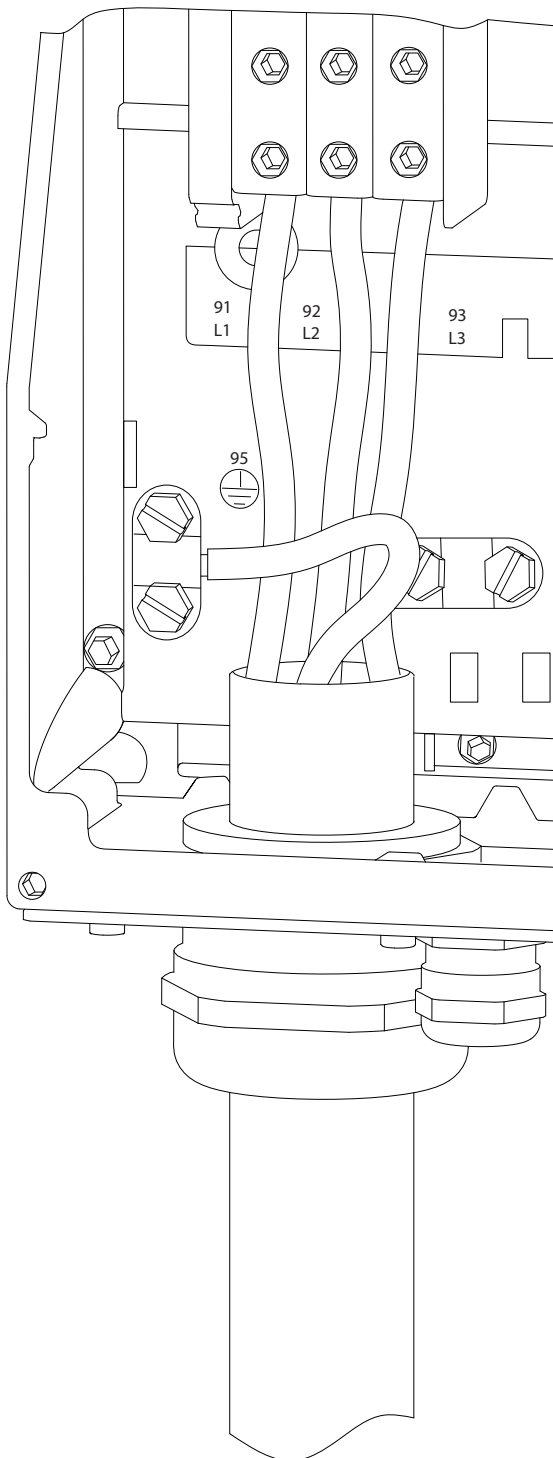


130BA389.10

Figure 8.7 AC Line Input Connection Enclosures C1 and C2 (IP21/NEMA Type 1 and IP55/66/NEMA Type 12).

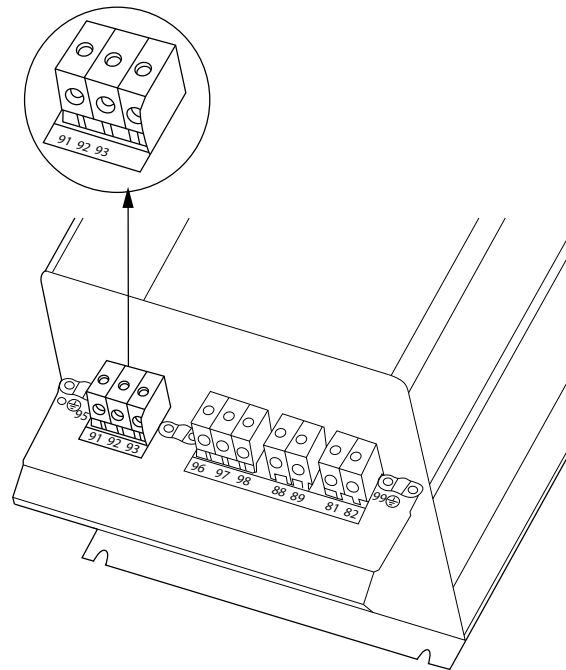

130BA718.10

Figure 8.8 AC Line Input Connection Enclosures C3 (IP20).

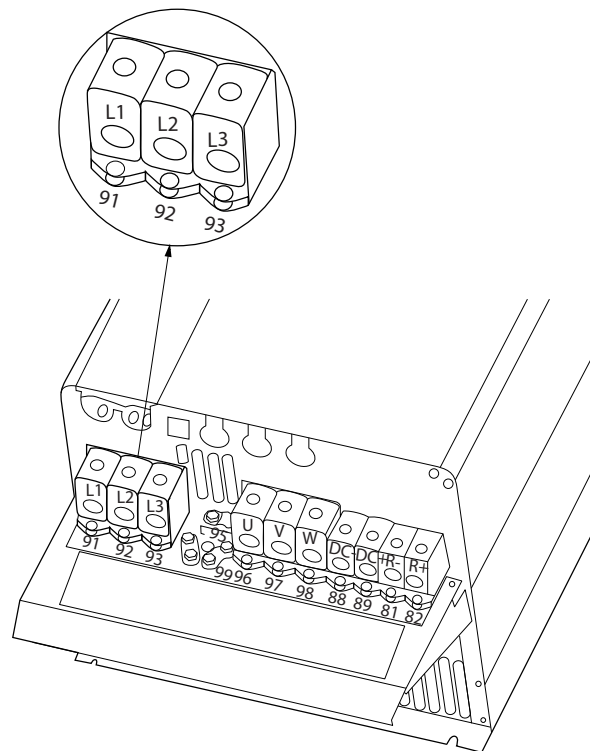

130BA719.10

Figure 8.9 AC Line Input Connection Enclosures C4 (IP20).

8.2 Motor Connection Drawings

Motor connection

This collection of drawings is intended to aid planning for access in the design phase.

Refer to the *instruction manual* for installation procedures including:

- Safety requirements.
- Step-by-step installation procedures.
- Terminal descriptions.
- Alternative configurations.
- Additional drawings.

Terminal number	96	97	98	99	
	U	V	W	PE ¹⁾	Motor voltage 0–100% of AC line voltage. 3 wires out of motor
	U1	V1	W1	PE ¹⁾	Delta-connected
	W2	U2	V2		6 wires out of motor
	U1	V1	W1	PE ¹⁾	Star-connected U2, V2, W2 U2, V2 and W2 to be interconnected separately.

Table 8.1 Terminal Descriptions

1) Protected Ground Connection

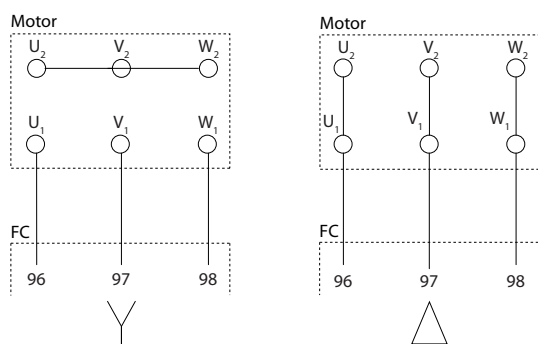


Figure 8.10 Star and Delta Connections

All types of three-phase asynchronous standard motors can be connected to the adjustable frequency drive. Normally, small motors are star-connected (230/400 V, Y). Large motors are normally delta-connected (400/690 V, Δ). Refer to the motor nameplate for correct connection mode and voltage.

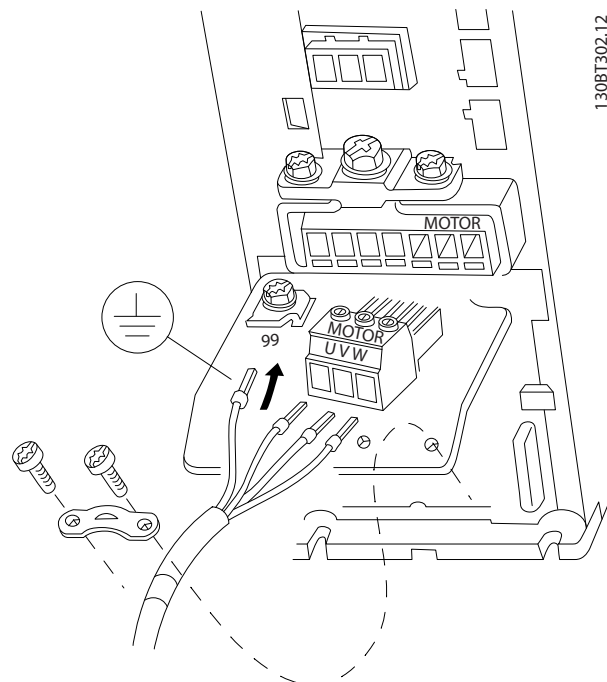


Figure 8.11 Motor Connection for Enclosures A1, A2 and A3



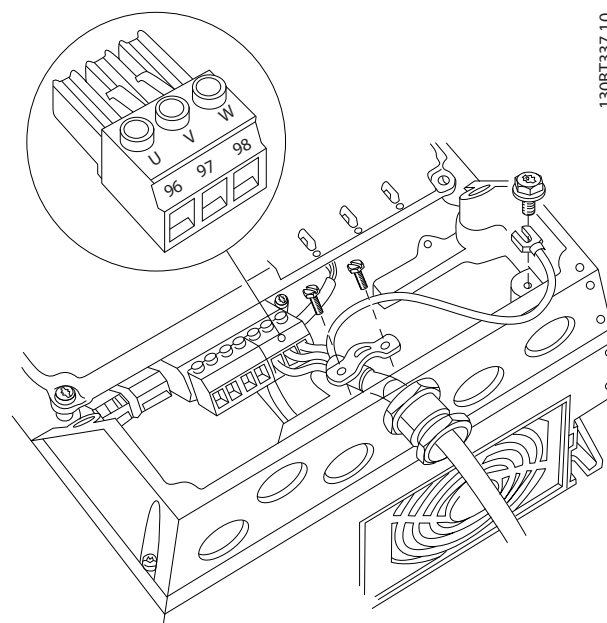


Figure 8.12 Motor Connection for Enclosures A4/A5

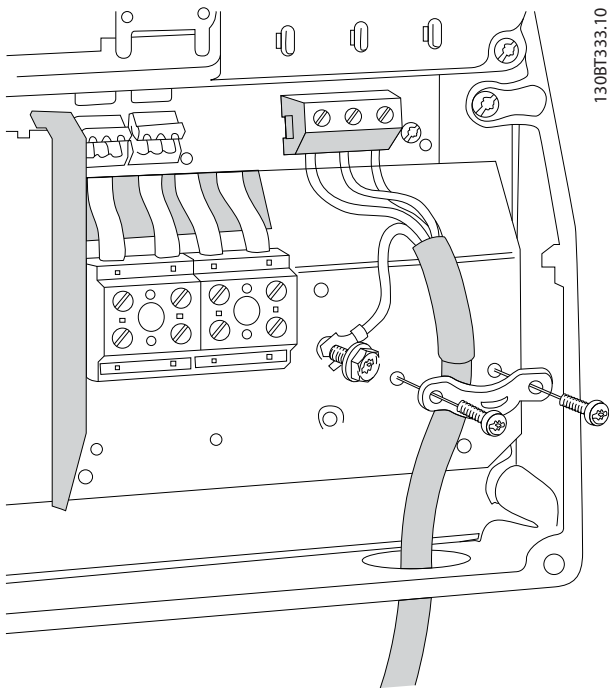


130BT333.10

Figure 8.13 Motor Connection for Enclosures B1 and B2

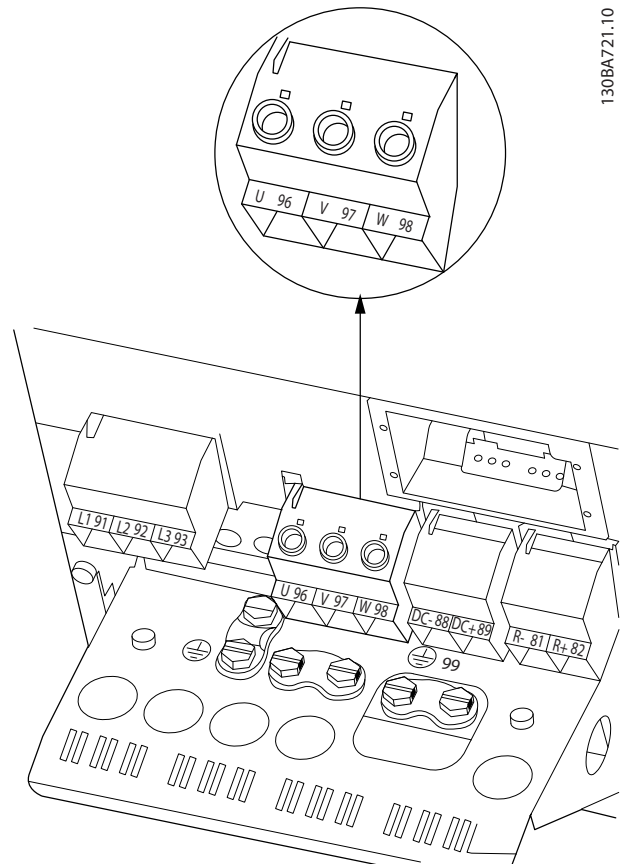


130BA721.10

Figure 8.15 Motor Connection for Enclosure B4

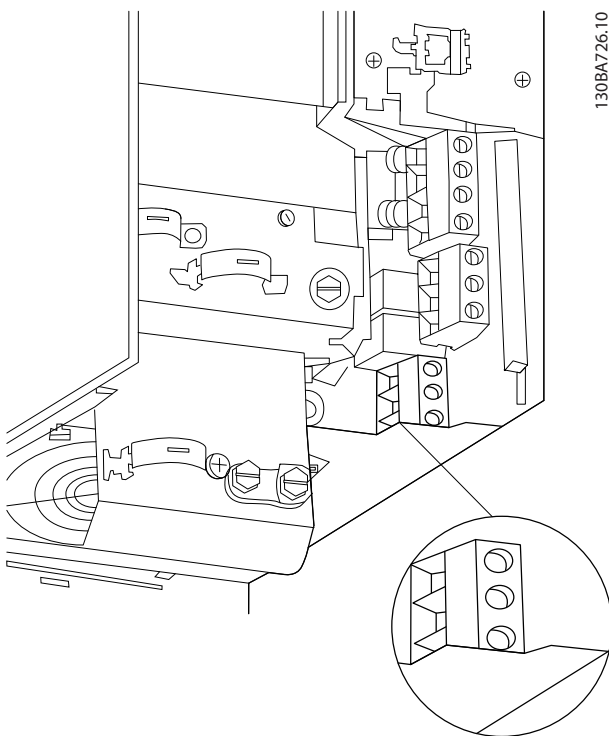


130BA726.10

Figure 8.14 Motor Connection for Enclosure B3

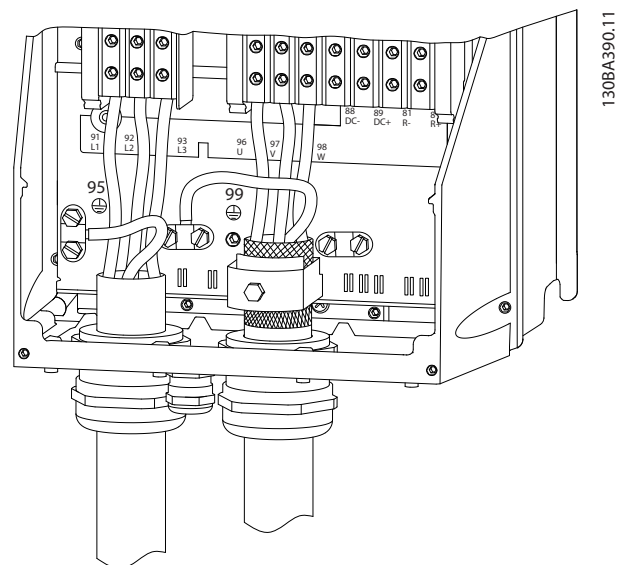


130BA390.11

Figure 8.16 Motor Connection Enclosures C1 and C2 (IP21/ NEMA Type 1 and IP55/66/NEMA Type 12)

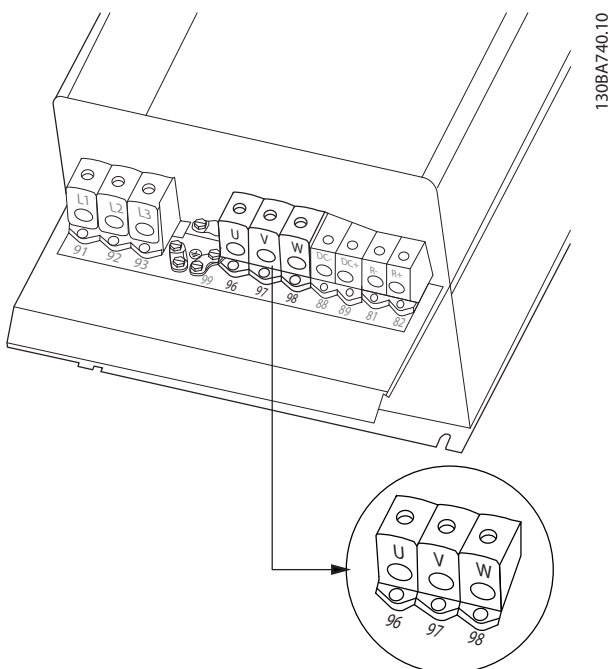

130BA740.10


Figure 8.17 Motor Connection for Enclosures C3 and C4

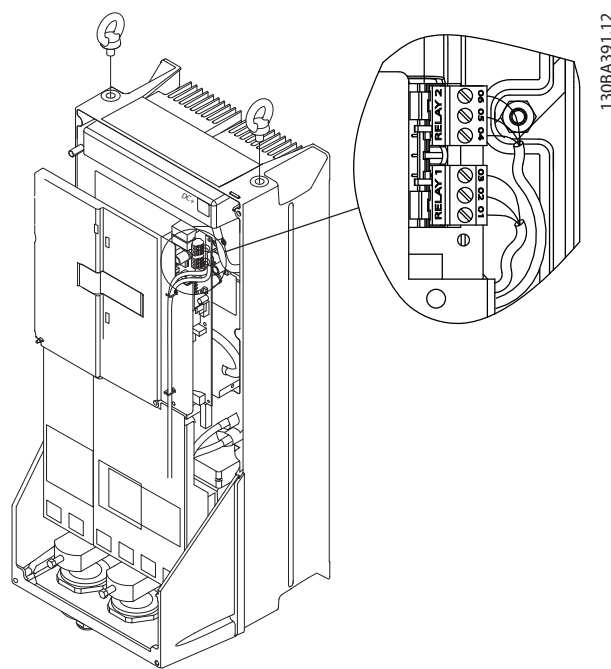

130BA391.12


Figure 8.19 Terminals for Relay Connection (Enclosure Sizes C1 and C2).

8.3 Relay Terminal Drawings

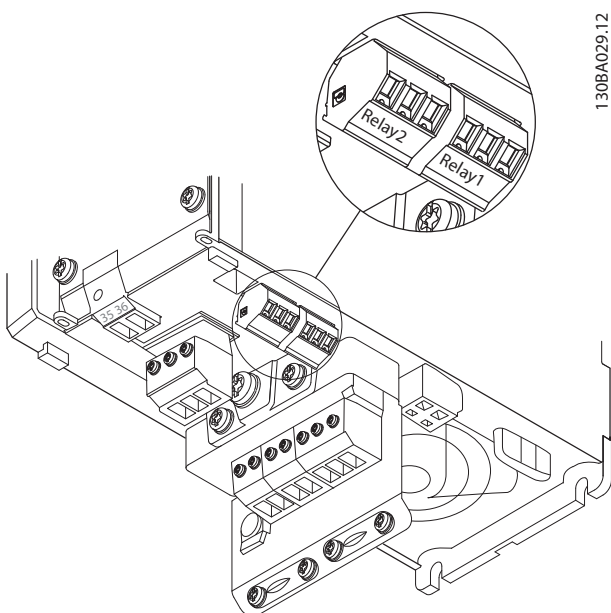

130BA029.12


Figure 8.18 Terminals for Relay Connection (Enclosure Sizes A1, A2 and A3).

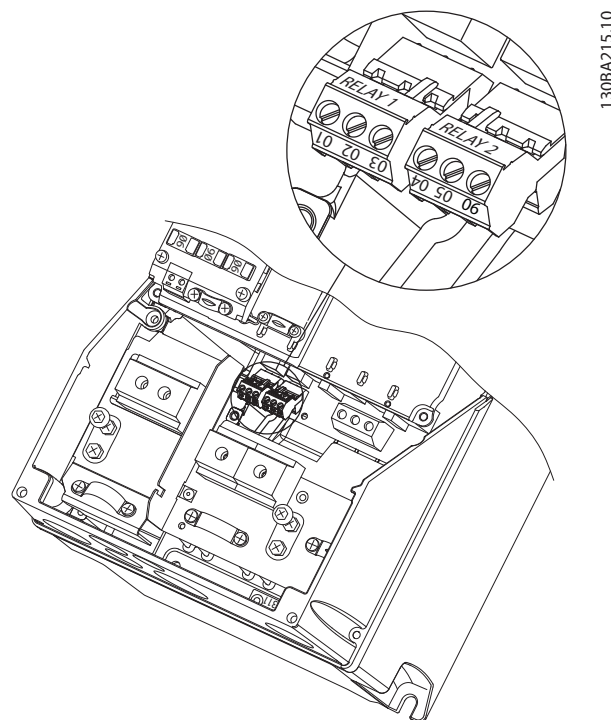

130BA215.10


Figure 8.20 Terminals for Relay Connection (Enclosure Sizes A5, B1 and B2).

8.4 Cable Entry Holes

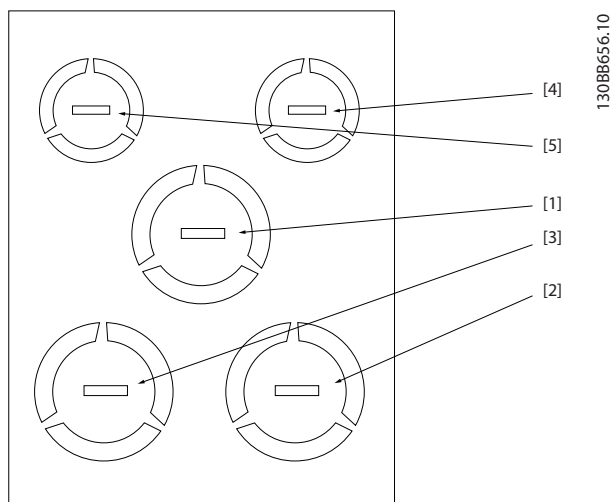


Hole number and recommended use	Dimensions ¹⁾		Nearest metric
	UL [in]	[mm]	
1 Line power	3/4	28.4	M25
2 Motor	3/4	28.4	M25
3 Brake/load sharing	3/4	28.4	M25
4 Control cable	1/2	22.5	M20
5 Control cable	1/2	22.5	M20
1) Tolerance ±0.2 mm			

Figure 8.21 Enclosure Size A2, IP21

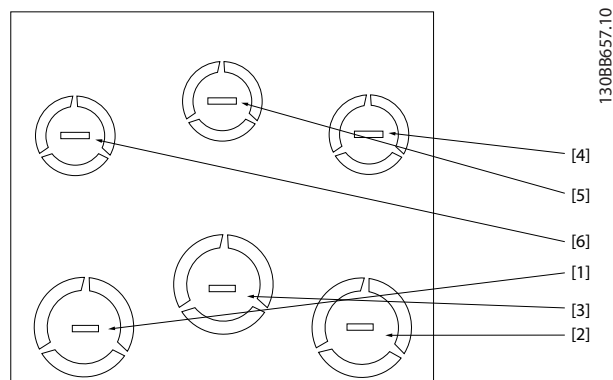


Hole number and recommended use	Dimensions ¹⁾		Nearest metric
	UL [in]	[mm]	
1 Line power	3/4	28.4	M25
2 Motor	3/4	28.4	M25
3 Brake/load sharing	3/4	28.4	M25
4 Control cable	1/2	22.5	M20
5 Control cable	1/2	22.5	M20
6 Control cable	1/2	22.5	M20
1) Tolerance ±0.2 mm			

Figure 8.22 Enclosure Size A3, IP21

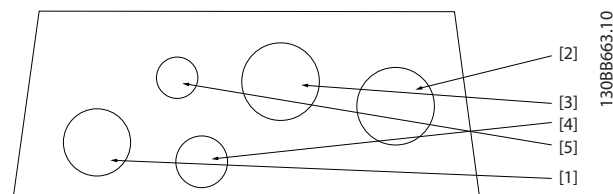


Hole number and recommended use	Dimensions ¹⁾		Nearest metric
	UL [in]	[mm]	
1 Line power	3/4	28.4	M25
2 Motor	3/4	28.4	M25
3 Brake/load sharing	3/4	28.4	M25
4 Control cable	1/2	22.5	M20
5 Removed	-	-	-
1) Tolerance ±0.2 mm			

Figure 8.23 Enclosure Size A4, IP55

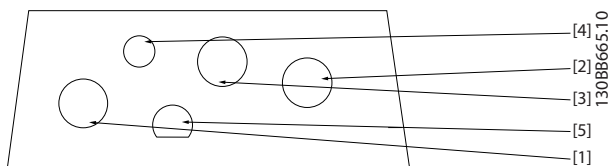


Hole number and recommended use	Nearest metric
1 Line power	M25
2 Motor	M25
3 Brake/load sharing	M25
4 Control cable	M16
5 Control cable	M20

Figure 8.24 Enclosure Size A4, IP55 Threaded Connector Holes

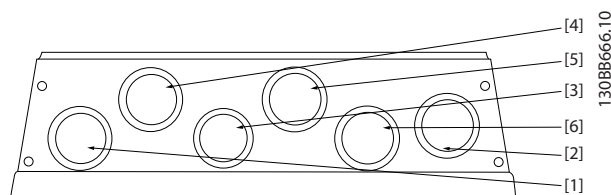


Hole number and recommended use	Nearest metric
1 Line power	M25
2 Motor	M25
3 Brake/load sharing	28.4 mm (3/4 in UL) ¹⁾
4 Control cable	M25
5 Control cable	M25
6 Control cable	M25
1) Knockout hole	

Figure 8.26 Enclosure Size A5, IP55 Threaded Connector Holes

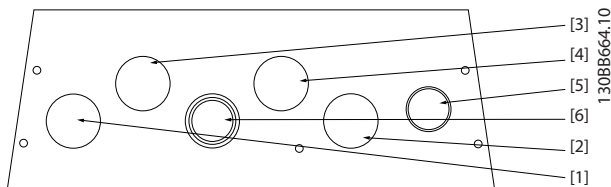


Hole number and recommended use	Dimensions ¹⁾		Nearest metric
	UL [in]	[mm]	
1 Line power	3/4	28.4	M25
2 Motor	3/4	28.4	M25
3 Brake/load sharing	3/4	28.4	M25
4 Control cable	3/4	28.4	M25
5 Control cable ²⁾	3/4	28.4	M25
6 Control cable ²⁾	3/4	28.4	M25
1) Tolerance ±0.2 mm			
2) Knockout hole			

Figure 8.25 Enclosure Size A5, IP55

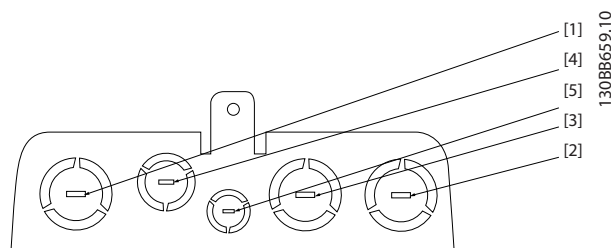

Hole number and recommended use	Dimensions ¹⁾		Nearest metric
	UL [in]	[mm]	
1 Line power	1	34.7	M32
2 Motor	1	34.7	M32
3 Brake/load sharing	1	34.7	M32
4 Control cable	1	34.7	M32
5 Control cable	1/2	22.5	M20
1) Tolerance ±0.2 mm			


Figure 8.27 Enclosure Size B1, IP21

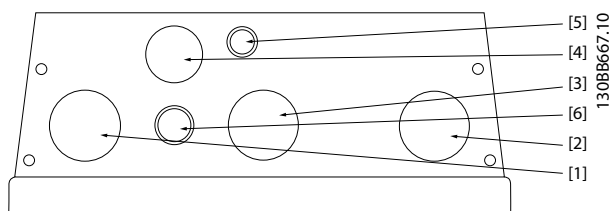

Hole number and recommended use	Dimensions ¹⁾		Nearest metric
	UL [in]	[mm]	
1 Line power	1	34.7	M32
2 Motor	1	34.7	M32
3 Brake/load sharing	1	34.7	M32
4 Control cable	3/4	28.4	M25
5 Control cable	1/2	22.5	M20
5 Control cable ²⁾	1/2	22.5	M20

1) Tolerance ±0.2 mm
2) Knockout hole


Figure 8.28 Enclosure Size B1, IP55

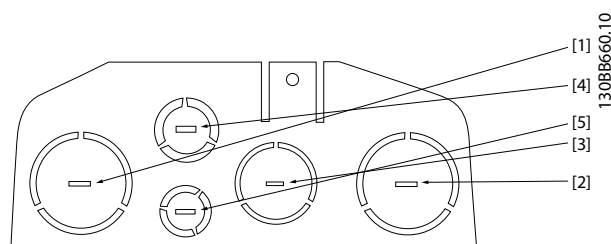

Hole number and recommended use	Dimensions ¹⁾		Nearest metric
	UL [in]	[mm]	
1 Line power	1 1/4	44.2	M40
2 Motor	1 1/4	44.2	M40
3 Brake/load sharing ²⁾	1	34.7	M32
4 Control cable	3/4	28.4	M25
5 Control cable	1/2	22.5	M20

1) Tolerance ±0.2 mm
2) Line power for S2 variants with Line Power Disconnect.


Figure 8.30 Enclosure Size B2, IP21

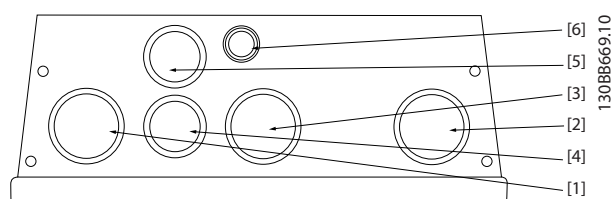

Hole number and recommended use	Nearest metric
1 Line power	M32
2 Motor	M32
3 Brake/load sharing	M32
4 Control cable	M25
5 Control cable	M25
6 Control cable	22.5 mm (1/2 in UL) ¹⁾

1) Knockout hole


Figure 8.29 Enclosure Size B1, IP55 Threaded Connector Holes

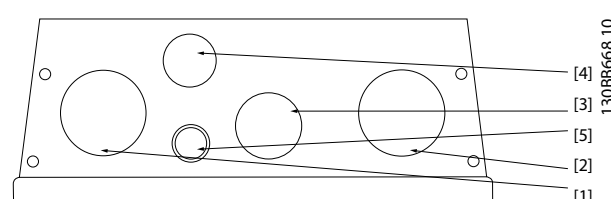

Hole number and recommended use	Dimensions ¹⁾		Nearest metric
	UL [in]	[mm]	
1 Line power	1 1/4	44.2	M40
2 Motor	1 1/4	44.2	M40
3 Brake/load sharing ³⁾	1	34.7	M32
4 Control cable	3/4	28.4	M25
5 Control cable ²⁾	1/2	22.5	M20

1) Tolerance ±0.2 mm
2) Knockout hole
3) Line power for S2 variants with Line Power Disconnect.


Figure 8.31 Enclosure Size B2, IP55

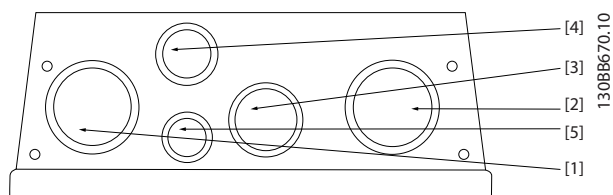

Hole number and recommended use	Nearest metric
1) Line power	M40
2) Motor	M40
3) Brake/load sharing ¹⁾	M32
4) Control cable	M25
5) Control cable	M20

1) Line power for S2 variants with Line Power Disconnect.


Figure 8.32 Enclosure Size B2, IP55 Threaded Connector Holes

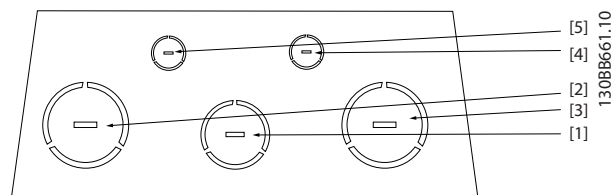

Hole number and recommended use	Dimensions ¹⁾		Nearest metric
	UL [in]	[mm]	
1 Line power	2	63.3	M63
2 Motor	2	63.3	M63
3 Brake/load sharing	1 1/2	50.2	M50
4 Control cable	3/4	28.4	M25
5 Control cable	1/2	22.5	M20

1) Tolerance ±0.2 mm


Figure 8.34 Enclosure Size C1, IP21

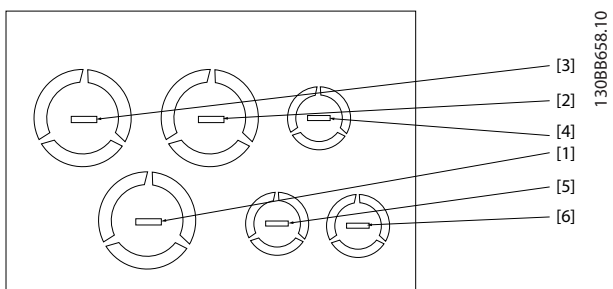

Hole number and recommended use	Dimensions ¹⁾		Nearest metric
	UL [in]	[mm]	
1 Line power	1	34.7	M32
2 Motor	1	34.7	M32
3 Brake/load sharing	1	34.7	M32
4 Control cable	1/2	22.5	M20
5 Control cable	1/2	22.5	M20
6 Control cable	1/2	22.5	M20

1) Tolerance ±0.2 mm

Figure 8.33 Enclosure Size B3, IP21

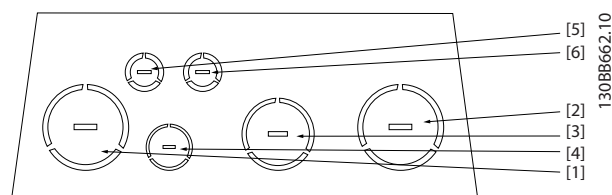

Hole number and recommended use	Dimensions ¹⁾		Nearest metric
	UL [in]	[mm]	
1 Line power	2	63.3	M63
2 Motor	2	63.3	M63
3 Brake/load sharing	1 1/2	50.2	M50
4 Control cable	3/4	28.4	M25
5 Control cable	1/2	22.5	M20
6 Control cable	1/2	22.5	M20

1) Tolerance ±0.2 mm

Figure 8.35 Enclosure Size C2, IP21

Index

A

Abbreviations..... 9, 50

AC

- brake..... 27, 31, 61
- current..... 19, 20
- input..... 19
- line power..... 19
- waveform..... 19

Acoustic noise..... 40

Address field..... 89

Adjustable frequency drive address..... 82, 83

Advanced minimum speed monitoring..... 100, 103, 104, 107

AEO..... 9
see also *Automatic energy optimization*

Affinity laws..... 16

Airflow..... 39, 40, 41, 141

Airflow calculation..... 39

Aluminum-housed compact brake resistor..... 126

Aluminum-housed flat pack brake resistor..... 126

AMA..... 9, 29, 106, 107
see also *Automatic motor adaptation*

Ambient conditions..... 166

Analog I/O..... 71

Analog input..... 167

Analog output..... 168

Analog speed reference..... 112

Application

- set-up example..... 104
- Cascade control..... 100
- Check valve protection..... 100
- Deragging..... 100, 101
- Dry-run detection..... 100, 101, 107
- End-of-curve detection..... 100
- Flow compensation..... 100, 101
- Flow confirmation..... 100, 103
- Lead pump alternation..... 108, 109
- Low-flow detection..... 100
- Real time clock..... 100
- Submersible pump..... 100, 103, 106, 107
- Wastewater..... 100

ATEX..... 30, 71, 187

Auto on..... 22, 23

Automatic energy optimization..... 9, 28, 29
see also *AEO*

Automatic motor adaptation..... 9, 29, 107
see also *AMA*

Autoramping..... 40

B

Backplate..... 67

Backup power system..... 57

Brake

- chopper..... 62, 69, 121
- current..... 127
- IGBT..... 20
- option..... 20, 70
- system..... 126

Braking..... 31

- Braking current..... 93
- Braking energy..... 10
- Braking torque..... 62
- Dynamic brake..... 20, 21, 31, 61
- Resistor brake..... 31, 61

Brake resistor

- Abbreviations..... 127, 139
- Brake resistor..... 9, 10, 20, 21, 26, 31, 61, 62, 69, 74, 82, 124, 127, 128, 129, 131, 133, 134, 135, 137, 139, 140
- Brake resistor duty cycle..... 62
- Cable cross-section..... 127
- Cabling..... 63

Braking energy..... 63

C

Cabinet heater..... 38

Cabinet options..... 42

Cable

- entry..... 201
- Entry holes..... 201
- Length..... 167
- Motor cable... 29, 41, 42, 44, 45, 47, 53, 58, 59, 60, 63, 66, 74, 80, 106, 115, 116, 164, 182
- Motor cable length..... 45, 49, 53, 59, 74, 166
- Parallel motor cable..... 45
- Shielded cable..... 67
- Specifications..... 166
- Unshielded motor cable..... 58

CFM..... 40

Circuit breaker..... 26, 53, 57, 69, 170, 171, 172, 173, 174

Clearance..... 39, 43, 66, 67

Closed-loop..... 22, 23, 31, 34, 90, 100, 107

Closed-loop wizard..... 107

Coast..... 10, 30, 33, 88, 90, 92, 93, 94, 95, 97, 100, 101

Coating..... 40, 68, 121

Coil register..... 89

Comparator..... 32, 33, 100

Compliance	
CE.....	11
CE mark.....	11
C-Tick.....	12
Galvanic isolation.....	29, 35, 43, 71, 188, 189, 190
UL-listed.....	12
Condensation.....	38
Contactors.....	69, 73, 74, 111
Control	
bit.....	92, 95
characteristic.....	169
input/output.....	167
logic.....	19
wire isolation.....	60
wiring.....	67
word bit.....	92
Control card	
Control card performance.....	170
Control card, 10 V DC output.....	169
Control card, 24 V DC output.....	169
Control card, RS485 serial communication.....	167
USB serial communication.....	170
Control word bit.....	95
Conventions.....	10
Conversion factor.....	86, 92
Conversion index.....	86, 87
Cooling.....	29, 30, 34, 36, 39, 40, 41, 61, 67, 69, 100, 115, 141, 164
Cooling conditions.....	67
Cos ϕ	56, 71, 165, 169, 185, 189
CRC check field.....	89
Current	
Current.....	50
distortion.....	51, 141
level.....	167
limit.....	9, 27, 28
loops.....	44
measurement.....	29
mode.....	167
range.....	168
DC current.....	19
Fundamental current.....	50
Harmonic current.....	50
Harmonic current distortion.....	75
High current.....	34
Individual harmonic current.....	51
Input current.....	50
Intermediate current voltage.....	43
Leakage current.....	44, 52, 53
Low current.....	34
Output current.....	28, 29, 59, 107, 115, 116, 118
Overcurrent.....	31
Rated current.....	48, 106
Rated output current.....	9
Ripple current.....	34, 74
D	
Data	
control byte.....	83
field.....	89
type.....	86, 92
DC	
brake.....	61, 88, 90, 92, 93
current.....	31, 61
DC link voltage.....	126
Definition.....	10, 48, 51, 54
Delta connection.....	198
Deragging.....	15
Derating	
Ambient temperature.....	116
Automatic.....	27
Constant torque applications (CT mode).....	115
Cooling.....	115
Derating.....	28, 33, 38, 98, 115, 116, 118, 119, 166
Large cross-section.....	116
Low air pressure.....	115
Manual.....	115
Running at low speed.....	115
Variable (quadratic) torque applications (VT).....	115
Digital input.....	168
Digital output.....	168
Dimensions.....	76, 78, 79, 98, 179, 201, 202, 203, 204
Directive	
EMC.....	11
EMC directive.....	11
ErP.....	12
Low voltage directive.....	11
Low-voltage.....	11
Machinery.....	11, 12
Discharge time.....	13
Disconnect.....	20, 69, 122
Displacement power factor.....	165
Dry-run detection.....	15
DU/dt testing.....	182
Dust.....	36, 41, 42
Duty cycle	
Duty cycle.....	10, 128, 129, 131, 133, 134, 135, 137, 139, 140
Duty cycle calculation.....	61
E	
Efficiency	
Efficiency.....	9
Motor efficiency.....	63
Efficiency.....	16, 28, 29, 63, 72, 108, 164, 166
Electronic thermal relay.....	61
see also <i>ETR</i>	

EMC	
Conducted emission.....	46
EMC.....	8, 44, 47, 48, 49, 67
characteristic.....	54
effect.....	54
filter.....	47, 121
immunity.....	49
implementation.....	58
plan.....	48
property.....	54
Emission requirements.....	44, 48
Emissions.....	44
Immunity requirements.....	44, 48
Interference.....	67
Radiated emission.....	46
Test results.....	45
Energy savings.....	15, 16, 17, 31
Environment	
Industrial.....	46, 48, 56, 57
Residential.....	48, 56, 57
Environment.....	166
Equipment optional.....	8
ETR.....	9, 27, 30, 61, 71
see also <i>Electronic thermal relay</i>	
Explosive atmosphere.....	41, 71, 187
External alarm reset.....	111
External command.....	19
External interlock.....	113
Extreme running conditions.....	26
F	
Fan....	11, 15, 18, 29, 30, 34, 36, 39, 40, 41, 72, 77, 102, 115, 141
FC profile	
Control word.....	92
Message length (LGE).....	83
Protocol overview.....	82
Status word.....	94
Feedback	
Feedback.....	23, 25, 64, 72, 90, 106, 112
conversion.....	26
handling.....	25, 38
setting.....	107
signal.....	22, 31
Filter	
AHF 005.....	141
AHF 010.....	141
Common mode.....	147
Common-mode filter.....	74
DU/dt.....	49, 58, 74, 146, 147, 182
Filter.....	41
Harmonic filter.....	75, 141, 142, 143
LC.....	58, 59, 60, 182
Radio frequency interference.....	42
see also <i>RFI</i>	
Sine-wave.....	20, 58, 74, 106
Fixed-speed pump.....	73
Flow confirmation.....	15
Flying start.....	27, 28, 30, 31
Frequency bypass.....	31
Function field.....	89
Fuse.....	21, 26, 69, 98, 122, 170, 171, 172, 173, 174, 175, 176, 177, 178
G	
Generator.....	26, 40, 52, 57
Ground leakage protection.....	44
Grounding.....	29, 50, 53, 54, 195
H	
Hand on.....	22, 23
Harmonics	
Analysis.....	50
Calculation of harmonics.....	36, 52
Emission requirements.....	51
Harmonic mitigation.....	52
Harmonics.....	8, 19, 38, 50, 51, 52, 55, 56, 57
distortion.....	10, 44, 50
emission standard.....	51
Test result.....	51
Total harmonic distortion.....	50
Voltage harmonics.....	51
High altitude.....	43, 115, 166
High voltage.....	13
High-frequency common-mode core.....	74
Horizontal clearance.....	67
Horizontal load.....	126
Humidity.....	38, 39, 42, 98, 166
I	
I/O.....	70, 72, 122, 7, 189, 190
Improved control.....	18
Index (IND).....	85, 92
Initializing.....	10
Input power.....	19, 67
Insulation resistance monitor.....	69
Interlock.....	113
Intermediate circuit.....	19, 26, 182
Intermediate section.....	20
Inverter.....	19
Inverter section.....	20
IP rating definition.....	42
IP21/NEMA Type 1 enclosure kit.....	75

J		Motor	
Jog.....	93	Bearing current.....	49
K		Bearing stress.....	58
Kinetic backup.....	30	CAN motor.....	106, 107
L		Grounding.....	58
Lambda.....	10, 55	Insulation.....	49
Laws of Proportionality.....	16	Insulation stress.....	58, 106
LCP.....	9, 35, 64, 77, 78, 97, 103, 109, 121	Missing motor phase.....	27
see also <i>Local control panel</i>		alternation.....	15, 100
Leakage current.....	13	connection.....	198
Line power		current.....	19, 28, 63, 95
AC line input connections.....	195	output.....	165
Line drop-out.....	30	phases.....	26
Line power shielding.....	68	Starter.....	18, 69, 109
Line power supply.....	10, 50	thermal protection.....	12, 29, 61, 95
Transient.....	19, 57	thermistor.....	42, 114
Load sharing... 13, 21, 26, 49, 122, 125, 149, 150, 151, 152, 154,		torque.....	98
155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 201, 202, 203,		voltage.....	182
204		wiring.....	67
Load sharing terminal.....	69	Output performance (U, V, W).....	165
Local control panel.....	9, 35, 64, 121, 124	Thermal stress.....	58
see also <i>LCP</i>		Thermistor.....	114
Logic rule.....	32, 100	Motor thermal protection.....	114
Low-flow detection.....	15	Mounting bracket.....	78
M		O	
Maintenance.....	41	Open-loop.....	21
Master adjustable frequency drive.....	73	Open-loop mode.....	73
Mechanical mounting.....	67	Option	
Message length.....	82, 86	Advanced cascade controller.....	71, 100
Message structure.....	82	Basic cascade controller.....	108
Modbus RTU		Basic Cascade Controller.....	72
Exception code.....	91	Cascade controller.....	36, 71, 108, 109, 110
Function code.....	91	Cascade controller option.....	72, 73
Message framing structure.....	88	DeviceNet.....	70, 72, 122
Message structure.....	88	EtherNet IP.....	70, 72, 122
Network configuration.....	88	Extended Relay Card MCB 113.....	72
Overview.....	87	Modbus TCP.....	70, 72, 122
Protocol.....	87	PROFIBUS.....	70, 72, 121, 122
RS485 interface.....	88	PROFINET.....	70, 72, 122
Modulation.....	9, 28, 41, 116, 117, 118, 120	PTC thermistor card.....	30, 71, 72, 122, 124, 187
Moment of inertia.....	26	Relay Card.....	71, 72, 122, 125, 185, 186, 189
		Sensor Input Option MCB 114.....	72
		Options	
		Advanced cascade controller.....	192, 194
		Extended cascade controller.....	191
		MCB 114.....	190
		MCO 101.....	191
		MCO 102.....	192
		Sensor input.....	190

Ordering		Power factor.....	10, 19, 55, 56, 57, 165
Accessory.....	125	Pre/post lube.....	100, 102
Accessory bag.....	125	Precautions.....	12
Advanced cascade controller.....	124	Preheat.....	31
Common mode filter.....	147	Preventive maintenance.....	36, 100
DeviceNet.....	124	Process block.....	84
DU/dt filter.....	146	Process word.....	86
Ethernet/IP.....	124	PROFIdrive profile	
From type code.....	121	Control word.....	95
Modbus TCP.....	124	Status word.....	97
Mounting bracket.....	123	PT100.....	29, 71, 190
Number.....	121	PT1000.....	29, 71, 190
Option.....	125	PTC sensor.....	29
PC software.....	125	Public supply network.....	51
PROFIBUS.....	124	Pulse input.....	169
Profinet.....	124	Pulse width modulation.....	20
Sine-wave filter.....	144	Pump staging.....	109
Spare parts.....	125		
Output contactor.....	61, 66	Q	
OVC.....	27	Qualified personnel.....	12
see also <i>Overvoltage control</i>		Quick Menu.....	15, 35, 100, 101, 107
Overload		R	
High overload.....	164, 165	Radio frequency interference.....	29, 55, 68
Normal overload.....	148, 153, 165	see also <i>RFI</i>	
Normal overload mode.....	117, 119	Ramp	
Overload.....	30, 50, 61, 69, 103	Final ramp.....	15, 100, 101, 107
LED.....	70	Initial ramp.....	107
protection.....	15, 27, 69	RCD.....	9, 53, 68
setpoint.....	30	Real time clock.....	15, 36
torque.....	165	Rectifier.....	19, 20
Overtemperature.....	11, 27, 28, 33, 69, 94	Rectifier diode.....	50
Overvoltage		Rectifier section.....	20
Motor-generated overvoltage.....	26	Reference	
Overvoltage.....	26, 27, 31, 40, 61, 74, 165, 169, 188	Reference.....	104, 112
control.....	26, 27	external.....	23
Overvoltage.....	62	handling.....	23, 24
		preset.....	23
P		Remote reference.....	22, 23
Parameter block.....	84	Regeneration terminal.....	69
Parameter number (PNU).....	85		
Parameter value (PWE).....	85		
Payback period.....	17		
PC software.....	35		
PCD.....	84, 86		
Peak Voltage on Motor.....	182		
PELV.....	9, 29, 43, 114, 115, 167, 168, 169, 170, 186, 192		
Phase imbalance.....	27, 34		
PID controller.....	22, 25, 31, 107, 190		
Pilz.....	69		
Pipe fill mode.....	15, 100, 101, 107		
PKE field.....	85		
Point of common coupling.....	51		

Relay	
Built-in relay.....	88, 108
Load relay.....	71
Output relay.....	29, 95, 96
Relay.....	27, 43, 64, 71, 72, 73, 109, 186, 189, 190
04.....	93
1.....	90, 92, 93, 111, 169
2.....	90, 92, 111, 169
7.....	186
8.....	186
9.....	186
connection.....	65
option.....	65, 71
output.....	65, 169
terminal.....	43, 186, 191, 193, 200
SPDT alarm relay.....	68, 69
SPDT relay.....	71, 189
Remote mounting kit.....	77
Resistor time cycle.....	126
Resonance damping.....	29
RFI	
RFI.....	20, 29, 40, 43, 55, 58
filter.....	20, 40, 42, 43, 46, 53, 55, 68, 69, 121
Rise time.....	182
RMS current.....	19
RS485	
Bus termination.....	81
EMC precautions.....	81
Installation and set-up.....	80
Network connection.....	81
RS485.....	10, 22, 35, 36, 43, 77, 80, 81, 82, 186, 191
Serial interface RS485.....	80
Run permissive.....	32, 114
Run/Stop command.....	113
S	
Safety.....	12, 14, 33, 72, 195, 198
Sensor current.....	20
Sensor thermal.....	20
Setpoint.....	23
Shielding.....	58, 63
Shock.....	40
Short-circuit	
Short-circuit.....	11, 20, 29, 33, 38, 57, 69, 188
(motor phase – phase).....	26
protection.....	26
ratio.....	52
Side-by-side installation.....	67
Slave adjustable frequency drive.....	73
Sleep mode.....	15, 29, 31, 100, 101, 108, 109
Slip compensation.....	10, 26
Smart logic control.....	10, 15, 32, 36, 100, 102, 104, 105
SmartStart.....	15, 100
Soft starter.....	18, 74
Software	
Harmonic calculation software (HCS).....	36, 55
HCS.....	57
see also <i>Harmonic Calculation Software</i>	
Language package.....	123
MCT 10 Set-up Software.....	36
MCT 31.....	36
language.....	122, 123
version.....	125
Speed limit.....	21, 27, 61
Speed reference.....	112
Staging bandwidth.....	108
Star connection.....	198
Star/Delta starter.....	74
Star/Delta Starter.....	18
Start/stop field.....	89
Status word.....	84, 86, 90, 94, 101
Steel grid brake resistor.....	126
STO.....	8, 15, 33, 64, 71, 100, 187
Storage.....	35, 36, 37, 38, 43, 91, 92, 99, 166
Switching	
frequency.....	27, 28, 33, 39, 45, 50, 53, 63, 74, 118, 120, 144, 145, 147
on the output.....	27
System	
Operation.....	109
Status.....	109
System design checklist.....	98
T	
Temperature	
Temperature.....	38
ambient.....	38
average.....	39
maximum.....	38, 39
Temperature sensor.....	190
Terminal 37.....	33, 64, 187
Text block.....	84, 92
Thermal protection.....	12
Thermistor.....	10, 43, 61, 70, 187
Thrust bearing.....	106, 107

Torque		Wiring	
Braking torque.....	27	Electrical wiring.....	107
Constant torque.....	9	Relay wiring.....	187, 192
CT characteristics.....	10	Wiring.....	64, 66, 110, 191, 194
Full torque.....	31	schematic.....	64
Rated torque.....	63	Wiring diagram	
Starting torque.....	165	Fixed variable-speed pump.....	111
Starting torque.....	165	Lead pump alternation.....	111
limit.....	9, 27, 61, 95	Wizard.....	15, 100
Variable torque.....	9		
VT Characteristics.....	11		
Transformer.....	50		
Transient.....	41, 53		
Transient protection.....	19		
Trip			
Trip.....	11, 27, 28, 30, 31, 33, 34, 57, 61, 69, 74, 88, 93, 94, 97, 103, 108, 115		
level.....	171, 172, 173, 174		
locked.....	11, 26		
Trip.....	114		
True power factor.....	165		
U			
U/f.....	63		
UL compliance.....	175		
Undervoltage.....	55		
Unintended motor rotation.....	14		
Unintended start.....	13		
UPEAK.....	182		
V			
Valve control.....	31		
Variable control of flow and pressure.....	18		
Variable-speed pump.....	73		
Varying flow over 1 year.....	17		
Ventilation.....	141		
Vertical clearance.....	67		
Vertical load.....	126		
Vibration.....	40		
Voltage level.....	168		
VVC+.....	9, 20		
W			
Wall mounting.....	67		
Weight.....	38, 98, 147, 179		
Windmilling.....	14		
Wiring.....	41, 42, 50, 60, 98		



Danfoss Drives

4401 N. Bell School Rd.
Loves Park IL 61111 USA
Phone: 1-800-432-6367
1-815-639-8600
Fax: 1-815-639-8000
www.danfossdrives.com

Danfoss Drives

8800 W. Bradley Rd.
Milwaukee, WI 53224 USA
Phone: 1-800-621-8806
1-414-355-8800
Fax: 1-414-355-6117
www.danfossdrives.com

.....
Danfoss shall not be responsible for any errors in catalogs, brochures or other printed material. Danfoss reserves the right to alter its products at any time without notice, provided that alterations to products already on order shall not require material changes in specifications previously agreed upon by Danfoss and the Purchaser. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.
.....

Danfoss A/S
Ulsnaes 1
DK-6300 Graasten
vlt-drives.danfoss.com

