

Safety Information

Read and follow all safety instructions in this manual precisely to avoid unsafe operating conditions, property damage, personal injury, or death.

Safety symbols in this manual

Danger

Indicates an imminently hazardous situation which, if not avoided, will result in severe injury or death.

Warning

Indicates a potentially hazardous situation which, if not avoided, could result in injury or death.

Caution

Indicates a potentially hazardous situation that, if not avoided, could result in minor injury or property damage.

Safety information

Danger

- Do not open the cover of the equipment while it is on or operating. Likewise, do not operate the inverter while the cover is open. Exposure of high voltage terminals or charging area to the external environment may result in an electric shock. Do not remove any covers or touch the internal circuit boards (PCBs) or electrical contacts on the product when the power is on or during operation. Doing so may result in serious injury, death, or serious property damage.
- Do not open the cover of the equipment even when the power supply to the inverter has been turned off unless it is necessary for maintenance or regular inspection. Opening the cover may result in an electric shock even when the power supply is off.
- The equipment may hold charge long after the power supply has been turned off. Use a multi-meter to make sure that there is no voltage before working on the inverter, motor or motor cable.

⚠ Warning

- This equipment must be grounded for safe and proper operation.
- Do not supply power to a faulty inverter. If you find that the inverter is faulty, disconnect the power supply and have the inverter professionally repaired.
- The inverter becomes hot during operation. Avoid touching the inverter until it has cooled to avoid burns.
- Do not allow foreign objects, such as screws, metal chips, debris, water, or oil to get inside the inverter. Allowing foreign objects inside the inverter may cause the inverter to malfunction or result in a fire.
- Do not operate the inverter with wet hands. Doing so may result in electric shock.
- Check the information about the protection level for the circuits and devices.

The following connection terminals and devices are the Electrical Protection level 0. It means that the circuit protection level depends on the basic insulation. If there is no basic insulation is failed, it may cause electric shock accident. When installing or wiring the connection terminals and devices, take the same protective action as with the power wire.

- Multi-function Input: P1-P7, CM
- Analog Frequency Input: VR, V1, I2, TI
- Safety Function: SA, SB, SC
- Analog Output: AO1, AO2, TO
- Contact: Q1, EG, 24, A1, B1, C1, A2, C2, S+, S-, SG
- Fan

The protection level of this equipment (inverter) is the Electrical Protection level I.

⚠ Caution

- Do not modify the interior workings of the inverter. Doing so will void the warranty.
- The inverter is designed for 3-phase motor operation. Do not use the inverter to operate a single phase motor.
- Do not place heavy objects on top of electric cables. Doing so may damage the cable and result in an electric shock.

Quick Reference Table

The following table contains situations frequently encountered by users while working with inverters. Refer to the typical and practical situations in the table to quickly and easily locate answers to your questions.

Situation	Reference
I want to run a slightly higher rated motor than the inverter's rated capacity.	p. 185
I want to configure the inverter to start operating as soon as the power source is applied.	p. 74
I want to configure the motor's parameters.	p.130
I want to set up sensorless vector control.	p.133
Something seems to be wrong with the inverter or the motor.	p. 204 , p.303
What is auto tuning?	p.130
What are the recommended wiring lengths?	p. 204 , p.303
The motor is too noisy.	p. 149
I want to apply PID control on my system.	p. 122
What are the factory default settings for P1–P7 multi-function terminals?	p. 20
I want to view all of the parameters I have modified.	p. 159
I want to review recent fault trip and warning histories.	p. 271
I want to install a frequency meter using an analog terminal.	p. 21
I want to operate the inverter using a multi-step speed configuration.	p. 68
The motor runs too hot.	p. 183
The inverter is too hot.	p. 193
The cooling fan does not work.	p. 308
I want to change the items that are monitored on the keypad.	p. 179

Table of Contents

1	Preparing the Installation	1
1.1	Product Identification	1
1.2	Part Names	2
1.3	Installation Considerations	3
1.4	Selecting and Preparing a Site for Installation	4
1.5	Cable Selection	6
2	Installing the Inverter	8
2.1	Mounting the Inverter	10
2.2	Cable Wiring	13
2.3	Post-Installation Checklist	26
2.4	Test Run	28
3	Learning to Perform Basic Operations	30
3.1	About the Keypad	30
3.1.1	Operation Keys	30
3.1.2	About the Display	32
3.1.3	Display Modes	35
3.2	Learning to Use the Keypad	38
3.2.1	Display Mode Selection	38
3.2.2	Switching Groups	41
3.2.3	Navigating through the Codes (Functions)	43
3.2.4	Navigating Directly to Different Codes	45
3.2.5	Parameter settings	46
3.2.6	Monitoring the Operation	48
3.3	Fault Monitoring	51
3.3.1	Monitoring Faults during Inverter Operation	51
3.3.2	Monitoring Multiple Fault Trips	52
3.4	Parameter Initialization	54
4	Learning Basic Features	55
4.1	Setting Frequency Reference	58
4.1.1	Keypad as the Source (KeyPad-1 setting)	58
4.1.2	Keypad as the Source (KeyPad-2 setting)	58
4.1.3	V1 Terminal as the Source	59
4.1.4	Setting a Frequency Reference with Input Voltage (Terminal I2)	65

4.1.5	Setting a Frequency with TI Pulse Input	65
4.1.6	Setting a Frequency Reference via RS-485 Communication	67
4.2	Frequency Hold by Analog Input	67
4.3	Changing the Displayed Units (Hz↔Rpm)	68
4.4	Setting Multi-step Frequency	68
4.5	Command Source Configuration	70
4.5.1	The Keypad as a Command Input Device	70
4.5.2	Terminal Block as a Command Input Device (Fwd/Rev Run Commands)	70
4.5.3	Terminal Block as a Command Input Device (Run and Rotation Direction Commands)	71
4.5.4	RS-485 Communication as a Command Input Device	71
4.6	Local/Remote Mode Switching	72
4.7	Forward or Reverse Run Prevention	73
4.8	Power-on Run	74
4.9	Reset and Restart	75
4.10	Setting Acceleration and Deceleration Times	76
4.10.1	Acc/Dec Time Based on Maximum Frequency	76
4.10.2	Acc/Dec Time Based on Operation Frequency	77
4.10.3	Multi-step Acc/Dec Time Configuration	78
4.10.4	Configuring Acc/Dec Time Switch Frequency	79
4.11	Acc/Dec Pattern Configuration	80
4.12	Stopping the Acc/Dec Operation	83
4.13	V/F (Voltage/Frequency) Control	83
4.13.1	Linear V/F Pattern Operation	83
4.13.2	Square Reduction V/F pattern Operation	84
4.13.3	User V/F Pattern Operation	85
4.14	Torque Boost	86
4.14.1	Manual Torque Boost	86
4.14.2	Auto Torque Boost	87
4.15	Output Voltage Setting	87
4.16	Start Mode Setting	88
4.16.1	Acceleration Start	88
4.16.2	Start After DC Braking	88
4.17	Stop Mode Setting	89
4.17.1	Deceleration Stop	89

4.17.2	Stop After DC Braking	89
4.17.3	Free Run Stop.....	91
4.17.4	Power Braking.....	91
4.18	Frequency Limit.....	92
4.18.1	Frequency Limit Using Maximum Frequency and Start Frequency ..	92
4.18.2	Frequency Limit Using Upper and Lower Limit Frequency Values.....	92
4.18.3	Frequency Jump	93
4.19	2 nd Operation Mode Setting	94
4.20	Multi-function Input Terminal Control.....	95
4.21	P2P Setting.....	96
4.22	Multi-keypad Setting.....	97
4.23	User Sequence Setting	98
4.24	Fire Mode Operation	104
5	Learning Advanced Features	106
5.1	Operating with Auxiliary References	108
5.2	Jog operation.....	112
5.2.1	Jog Operation 1-Forward Jog by Multi-function Terminal.....	112
5.2.2	Jog Operation 2-Fwd/Rev Jog by Multi-function Terminal.....	114
5.2.3	Jog Operation by Keypad.....	115
5.3	Up-down Operation	115
5.4	3-Wire Operation	117
5.5	Safe Operation Mode.....	118
5.6	Dwell Operation	119
5.7	Slip Compensation Operation.....	121
5.8	PID Control	122
5.8.1	PID Basic Operation	122
5.8.2	Pre-PID Operation	128
5.8.3	PID Operation Sleep Mode	129
5.8.4	PID Switching (PID Openloop).....	129
5.9	Auto Tuning.....	130
5.10	Sensorless Vector Control	133
5.10.1	Sensorless Vector Control Operation Setting.....	135
5.10.2	Sensorless Vector Control Operation Guide	139
5.11	Kinetic Energy Buffering Operation	140
5.12	Torque Control	141

5.13	Energy Saving Operation.....	144
5.13.1	Manual Energy Saving Operation.....	144
5.13.2	Automatic Energy Saving Operation	144
5.14	Speed Search Operation	145
5.15	Auto Restart Settings	148
5.16	Operational Noise Settings (carrier frequency settings).....	149
5.17	2 nd Motor Operation.....	151
5.18	Supply Power Transition	152
5.19	Cooling Fan Control	153
5.20	Input Power Frequency and Voltage Settings	154
5.21	Read, Write, and Save Parameters	155
5.22	Parameter Initialization.....	156
5.23	Parameter View Lock	157
5.24	Parameter Lock	158
5.25	Changed Parameter Display	159
5.26	User Group	159
5.27	Easy Start On	162
5.28	Config (CNF) Mode.....	163
5.29	Timer Settings.....	164
5.30	Brake Control.....	165
5.31	Multi-Function Output On/Off Control.....	166
5.32	Press Regeneration Prevention.....	167
5.33	Analog Output.....	168
5.33.1	Voltage and Current Analog Output.....	168
5.33.2	Analog Pulse Output.....	171
5.34	Digital Output	172
5.34.1	Multi-function Output Terminal and Relay Settings.....	172
5.34.2	Fault Trip Output using Multi-Function Output Terminal and Relay ..	177
5.34.3	Multi-function Output Terminal Delay Time Settings	178
5.35	Keypad Language Settings	179
5.36	Operation State Monitor.....	179
5.37	Operation Time Monitor	182
6	Learning Protection Features	183
6.1	Motor Protection	183
6.1.1	Electronic Thermal Motor Overheating Prevention (ETH).....	183

6.1.2	Overload Early Warning and Trip	185
6.1.3	Stall Prevention and Flux Braking	187
6.2	Inverter and Sequence Protection	191
6.2.1	Open-phase Protection	191
6.2.2	External Trip Signal	192
6.2.3	Inverter Overload Protection	193
6.2.4	Speed Command Loss	193
6.2.5	Dynamic Braking (DB) Resistor Configuration	196
6.3	Underload Fault Trip and Warning	198
6.3.1	Fan Fault Detection	199
6.3.2	Lifetime diagnosis of components	200
6.3.3	Low Voltage Fault Trip	202
6.3.4	Output Block by Multi-Function Terminal	202
6.3.5	Trip Status Reset	203
6.3.6	Inverter Diagnosis State	203
6.3.7	Operation Mode on Option Card Trip	203
6.3.8	No Motor Trip	204
6.3.9	Low voltage trip 2	204
6.4	Fault/Warning List	205
7	RS-485 Communication Features	206
7.1	Communication Standards	206
7.2	Communication System Configuration	207
7.2.1	Communication Line Connection	207
7.2.2	Setting Communication Parameters	208
7.2.3	Setting Operation Command and Frequency	209
7.2.4	Command Loss Protective Operation	210
7.2.5	Setting Virtual Multi-Function Input	211
7.2.6	Saving Parameters Defined by Communication	212
7.2.7	Total Memory Map for Communication	212
7.2.8	Parameter Group for Data Transmission	212
7.3	Communication Protocol	214
7.3.1	Modbus-RTU Protocol	214
7.4	Compatible Common Area Parameter	217
7.5	SX2000 Expansion Common Area Parameter	220
7.5.1	Monitoring Area Parameter (Read Only)	220

7.5.2	Control Area Parameter (Read/ Write)	226
7.5.3	Inverter Memory Control Area Parameter (Read and Write)	228
8	Table of Functions	230
8.1	Drive group (PAR→DRV)	230
8.2	Basic Function group (PAR→BAS)	235
8.3	Advanced Function group (PAR→ADV)	240
8.4	Control Function group (PAR→CON)	245
8.5	Input Terminal Block Function group (PAR→IN)	251
8.6	Output Terminal Block Function group (PAR→OUT)	256
8.7	Communication Function group (PAR→COM)	260
8.8	Application Function group (PAR→APP)	264
8.9	Protection Function group (PAR→PRT)	266
8.10	2nd Motor Function group (PAR→M2)	271
8.11	User Sequence group (USS)	273
8.12	User Sequence Function group(USF)	276
8.13	Groups for LCD Keypad Only	295
8.13.1	Trip Mode (TRP Last-x)	295
8.13.2	Config Mode (CNF)	295
9	Troubleshooting	299
9.1	Trips and Warnings	299
9.1.1	Fault Trips	299
9.1.2	Warning Messages	302
9.2	Troubleshooting Fault Trips	303
9.3	Troubleshooting Other Faults	305
10	Maintenance	309
10.1	Regular Inspection Lists	309
10.1.1	Daily Inspections	309
10.1.2	Annual Inspections	311
10.1.3	Bi-annual Inspections	313
10.2	Replacing Major Components	313
10.2.1	Exchange Cycle for Major Components	313
10.2.2	How to Replace the Cooling Fans	314
10.3	Storage and Disposal	315
10.3.1	Storage	315
10.3.2	Disposal	315

11	Technical Specification	316
11.1	Input and Output Specification.....	316
11.2	Product Specification Details	316
11.3	External Dimensions (IP 20 Type).....	319
11.4	Peripheral Devices	321
11.5	Fuse and Reactor Specifications.....	321
11.6	Terminal Screw Specification	322
11.7	Braking Resistor Specification	323
11.8	Continuous Rated Current Derating.....	323
11.9	Heat Emmission	325
	Index.....	326

1 Preparing the Installation

This chapter provides details on product identification, part names, correct installation and cable specifications. To install the inverter correctly and safely, carefully read and follow the instructions.

1.1 Product Identification

The SX2000 Inverter is manufactured in a range of product groups based on drive capacity and power source specifications. Product name and specifications are detailed on the rating plate. The illustration on the next page shows the location of the rating plate. Check the rating plate before installing the product and make sure that the product meets your requirements. For more detailed product specifications, refer to [11.1 Input and Output Specification](#) on page [319](#).


Note

Check the product name, open the packaging, and then confirm that the product is free from defects. Contact your supplier if you have any issues or questions about your product.

Example of a nameplate on the right side of the product :


Model Name	MODEL : LTVF-S40010BAA	QR Code	Normal Duty Amps/ Heavy Duty Amps
Power source specification	APPLICABLE MOTOR : 5.5kW (ND) / 4.0kW (HD)		
Output specification	INPUT : 380-480V 3 Phase 50/60Hz 14.7A/11.0A	RoHS	Software Version
	OUTPUT : 0-Input V 3 Phase 0.01-400Hz 16A/12A		
Serial Number	MASS : 4 kg S/w Ver : 1.06	CE	
Enclosure Type	S/N : 550390700DC		
	Enclosure : IP20	UL LISTED	
	LARSEN & TOUBRO		

Part Number Description :

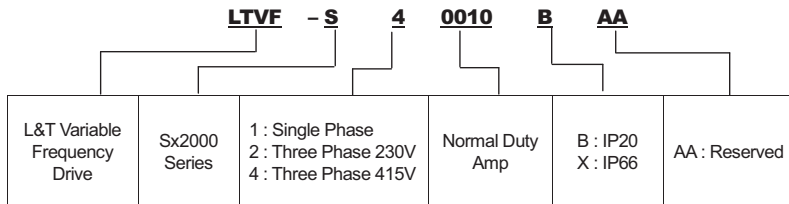

1.2 Part Names

The illustration below displays part names. Details may vary between product groups.

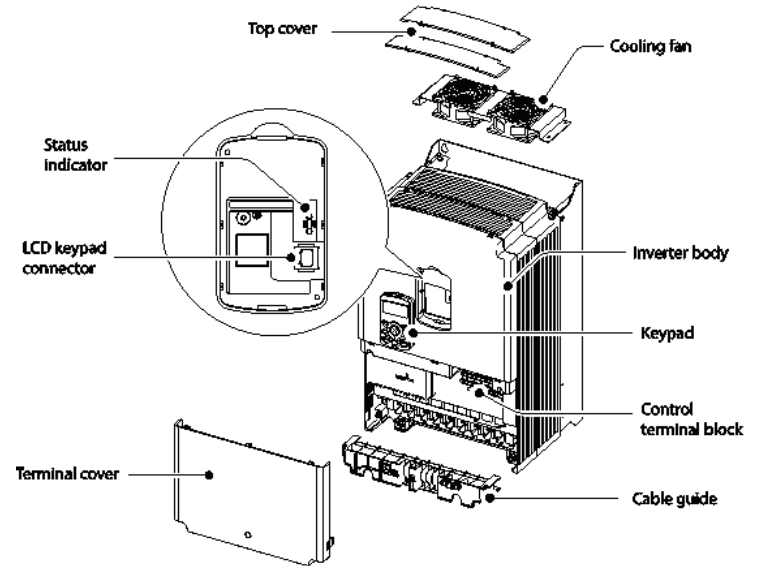


1.3 Installation Considerations

Inverters are composed of various precision, electronic devices, and therefore the installation environment can significantly impact the lifespan and reliability of the product. The table below details the ideal operation and installation conditions for the inverter.

Items	Description
Ambient Temperature*	Heavy Duty: 14–104°F (-10–50°C) Normal Duty: 14–122°F (-10–40°C)
Ambient Humidity	90% relative humidity (no condensation)
Storage Temperature	- 4–149°F (-20–65°C)
Environmental Factors	An environment free from corrosive or flammable gases, oil residue or dust
Altitude/Vibration	Lower than 3,280 ft (1,000 m) above sea level/less than 9.8m/sec ² (1G)
Air Pressure	70 –106kPa

* The ambient temperature is the temperature measured at a point 2" (5 cm) from the surface of the inverter.

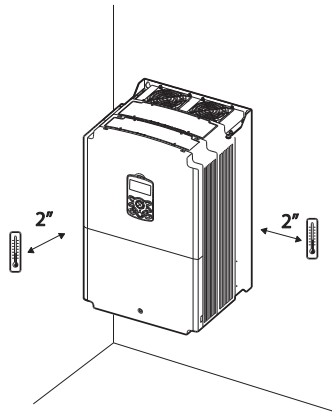


⚠ Caution

Do not allow the ambient temperature to exceed the allowable range while operating the inverter.

1.4 Selecting and Preparing a Site for Installation

When selecting an installation location consider the following points:


- The inverter must be installed on a wall that can support the inverter's weight.
- The location must be free from vibration. Vibration can adversely affect the operation of the inverter.
- The inverter can become very hot during operation. Install the inverter on a surface that is fire-resistant or flame-retardant and with sufficient clearance around the inverter to allow air to circulate. The illustrations below detail the required installation clearances.

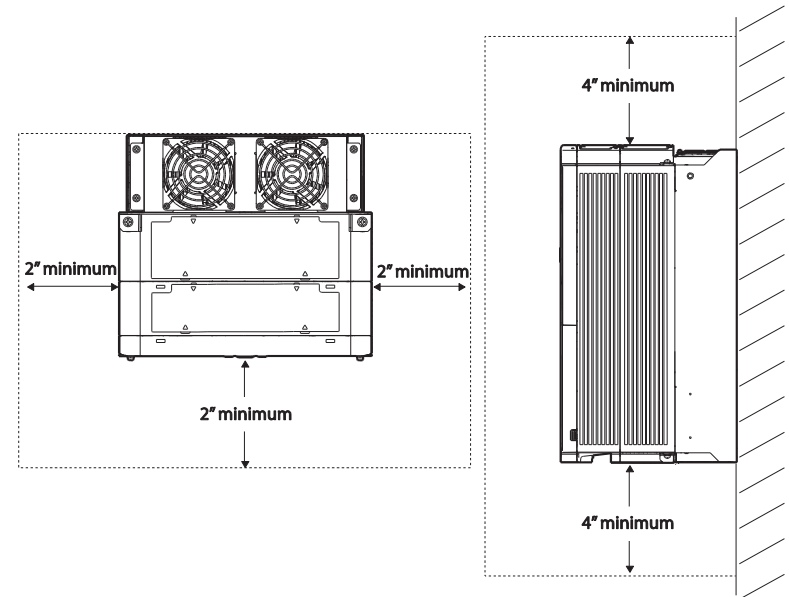


Preparing the Installation

Preparation

- Ensure sufficient air circulation is provided around the inverter when it is installed. If the inverter is to be installed inside a panel, enclosure, or cabinet rack, carefully consider the position of the inverter's cooling fan and the ventilation louver. The cooling fan must be positioned to efficiently transfer the heat generated by the operation of the inverter.

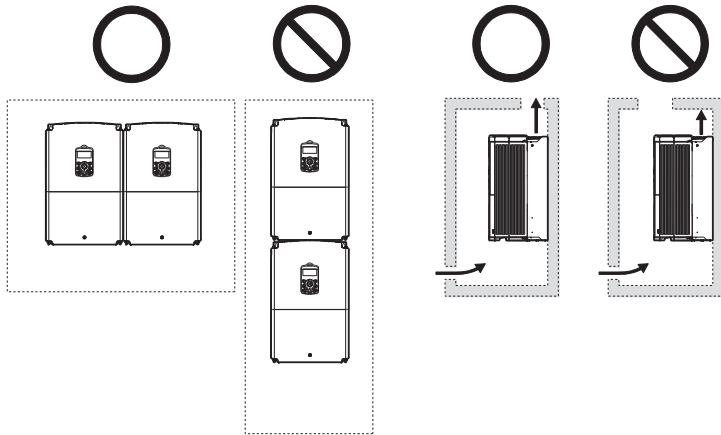

- If you are installing multiple inverters, of different ratings, provide sufficient clearance to meet the clearance specifications of the larger inverter.

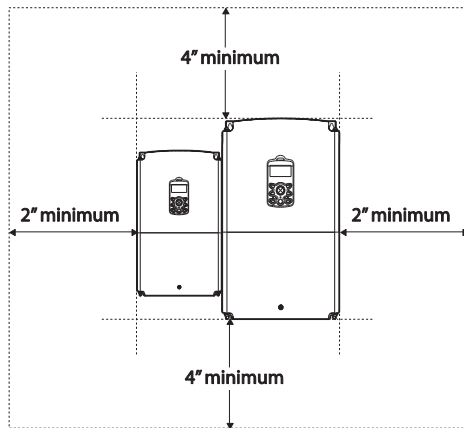

Preparing the Installation

1.5 Cable Selection

When you install power and signal cables in the terminal blocks, only use cables that meet the required specification for the safe and reliable operation of the product. Refer to the following information to assist you with cable selection.

ⓘ Caution

- Wherever possible use cables with the largest cross-sectional area for mains power wiring, to ensure that voltage drop does not exceed 2%.
- Use copper cables rated for 600 V, 90°C for power terminal wiring.
- Use copper cables rated for 300 V, 75°C for control terminal wiring.

Signal (Control) Cable Specifications

Terminal	Recommended wire thickness mm ² (AWG)		Terminal screw	Torque [Nm]	Electrical Specifications
	Without Crimp Terminal Connections (Bare wire)	With Crimp Terminal Connectors (Bootlace Ferrule)			
P1–P7, CM	1.0 (17)	1.5 (15)	M2-6	0.4	-
VR					Output current/voltage: 12 V, 20 mA volume resistance: 1–5 kΩ
V1					Maximum input voltage: -12V – +12 V
I2					0–24 mA input (internal resistance: 249 Ω)
AO1, AO2					Maximum output current/voltage: 12 V, 24 mA
Q1					Less than DC 26 V, 100 mA
EG					-
24					Maximum output current: 100 mA
TI					0–32 kHz, 0–12 V
TO					0–32 kHz, 0–12 V
SA, SB, SC					Less than DC 24 V, 25 mA
S+, S-, SG					Less than AC 250 V, 1 A Less than DC 30 V, 1 A
A1, B1, C1					Less than AC 250 V, 5 A
A2, C2					Less than DC 30 V, 5 A

Ground Cable and Power Cable Specifications


Load (kW)	Ground		Power I/O				
	mm ²	AWG	mm ²		AWG		
			R/S/T	U/V/W	R/S/T	U/V/W	
3-Phase 400 V	30	16	5	25	25	4	4
	37						
	45						
	55	35	3	70	70	1/0	1/0
	75						

2 Installing the Inverter

This chapter describes the physical and electrical installation methods, including mounting and wiring of the product. Refer to the flowchart and basic configuration diagram provided below to understand the procedures and installation methods to be followed to install the product correctly.

Installation Flowchart


The flowchart lists the sequence to be followed during installation. The steps cover equipment installation and testing of the product. More information on each step is referenced in the steps.

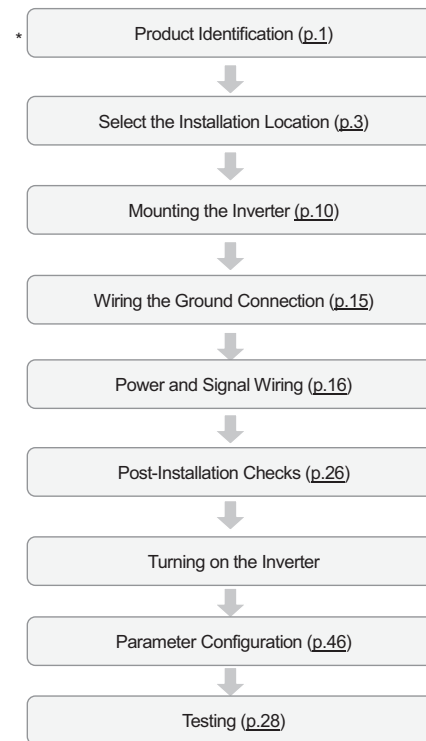

Basic Configuration Diagram

The reference diagram below shows a typical system configuration showing the inverter and peripheral devices.

Prior to installing the inverter, ensure that the product is suitable for the application (power rating, capacity, etc). Ensure that all of the required peripherals and optional devices (resistor brakes, contactors, noise filters, etc.) are available. For more details on peripheral devices, refer to [11.4 Peripheral Devices on page 321](#).

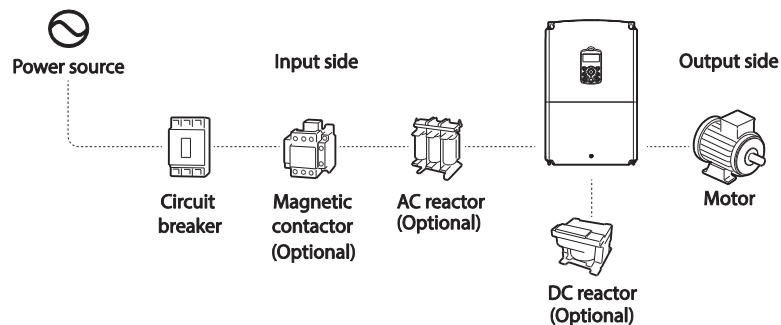

⚠ Caution


- Figures in this manual are shown with covers or circuit breakers removed to show a more detailed view of the installation arrangements. Install covers and circuit breakers before operating the inverter. Operate the product according to the instructions in this manual.
- Do not start or stop the inverter using a magnetic contactor, installed on the input power supply.
- If the inverter is damaged and loses control, the machine may cause a dangerous situation. Install an additional safety device such as an emergency brake to prevent these situations.
- High levels of current draw during power-on can affect the system. Ensure that correctly rated circuit breakers are installed to operate safely during power-on situations.
- Reactors can be installed to improve the power factor. Note that reactors may be installed within 30 ft (9.14 m) from the power source if the input power exceeds 1000KVA. Refer to [11.5 Fuse and Reactor Specifications on page 321](#) and carefully select a reactor that meets the requirements.

2.1 Mounting the Inverter


Mount the inverter on a wall or inside a panel following the procedures provided below. Before installation, ensure that there is sufficient space to meet the clearance specifications, and that there are no obstacles impeding the cooling fan's air flow.

Select a wall or panel suitable to support the installation. Refer to [11.3 External Dimensions \(IP 20 Type\)](#) on page [319](#) and check the inverter's mounting bracket dimensions.

- Use a level to draw a horizontal line on the mounting surface, and then carefully mark the fixing points.
- Drill the two upper mounting bolt holes, and then install the mounting bolts. Do not fully tighten the bolts at this time. Fully tighten the mounting bolts after the inverter has been mounted.

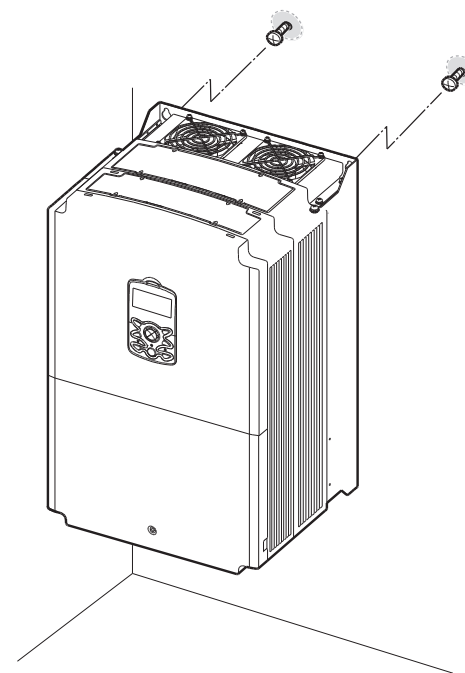


- 3 Mount the inverter on the wall or inside a panel using the two upper bolts, and then fully tighten the mounting bolts. Ensure that the inverter is placed flat on the mounting surface, and that the installation surface can securely support the weight of the inverter.

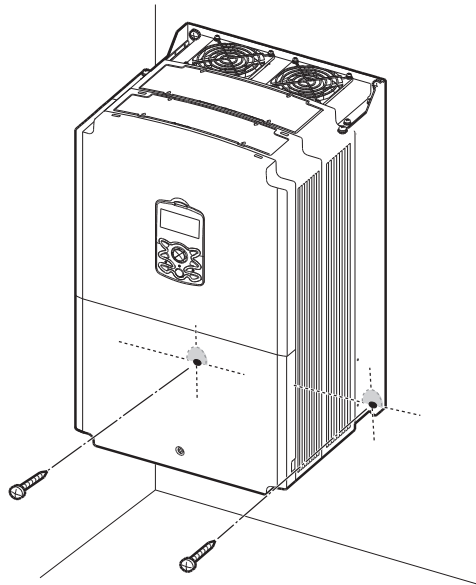

Installation

⚠ Caution

- Do not transport the inverter by lifting with the inverter's covers or plastic surfaces. The inverter may tip over if covers break, causing injuries or damage to the product. Always support the inverter using the metal frames when moving it.
- Hi-capacity inverters are very heavy and bulky. Use an appropriate transport method that is suitable for the weight.
- Do not install the inverter on the floor or mount it sideways against a wall. The inverter **MUST** be installed vertically, on a wall or inside a panel, with its rear flat on the mounting surface.

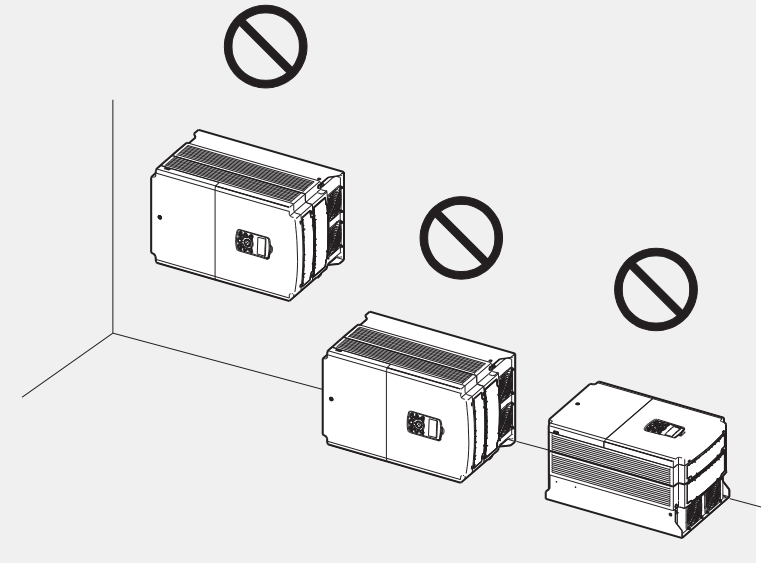

2.2 Cable Wiring

Open the front cover, remove the cable guides and control terminal cover, and then install the ground connection as specified. Complete the cable connections by connecting an appropriately rated cable to the terminals on the power and control terminal blocks.

Read the following information carefully before carrying out wiring connections to the inverter. All warning instructions must be followed.


⚠ Caution

- Install the inverter before carrying out wiring connections.
- Ensure that no small metal debris, such as wire cut-offs, remain inside the inverter. Metal debris in the inverter may cause inverter failure.
- Tighten terminal screws to their specified torque. Loose terminal block screws may allow the cables to disconnect and cause short circuit or inverter failure. Refer to [11.6 Terminal Screw Specification](#) on page [321](#) for torque specifications.
- Do not place heavy objects on top of electric cables. Heavy objects may damage the cable and result in electric shock.
- The power supply system for this equipment (inverter) is a grounded system. Only use a grounded power supply system for this equipment (inverter). Do not use a TT, TN, IT, or corner grounded system with the inverter.
- The equipment may generate direct current in the protective ground wire. When installing the residual current device (RCD) or residual current monitoring (RCM), only Type B RCDs and RCMs can be used.
- Use cables with the largest cross-sectional area, appropriate for power terminal wiring, to ensure that voltage drop does not exceed 2%.
- Use copper cables rated at 600 V, 90°C for power terminal wiring.
- Use copper cables rated at 300 V, 75°C for control terminal wiring.
- Check for short circuits or wiring failure in the control circuit. They could cause system failure or device malfunction.
- Use shielded cables when wiring the control circuit. Failure to do so may cause malfunction due to interference. If a ground is needed, use STP (Shielded Twisted Pair) cables.
- If you need to re-wire the terminals due to wiring-related faults, ensure that the inverter keypad display is turned off and the charge lamp under the front cover is off before working on wiring connections. The inverter may hold a high voltage electric charge long after the power supply has been turned off.

Step 1 Front Cover, Control Terminal Cover and Cable Guide

The front cover, control terminal cover and cable guide must be removed to install cables. Refer to the following procedures to remove the covers and cable guide. The steps to remove these parts may vary depending on the inverter model.

- 1 Loosen the bolt that secures the terminal cover (❶). Push and hold the latch on the right side of the cover (❷). Then remove the cover by lifting it from the bottom and moving it away from the front of the inverter.

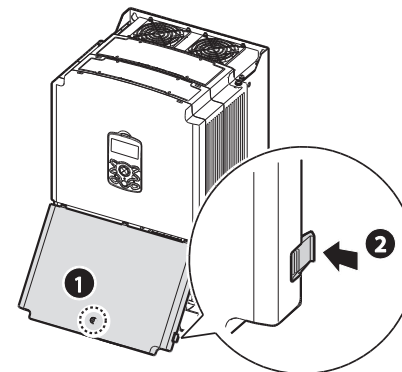


- 2 Connect the cables to the power terminals and the control terminals. For cable specifications, refer to [1.5 Cable Selection](#) on page [6](#).

Step 2 Ground Connection

Remove the front cover, cable guide, and the control terminal cover. Then follow the instructions below to install the ground connection for the inverter.

- 1 Locate the ground terminal and connect an appropriately rated ground cable to the terminals. Refer to [1.5 Cable Selection](#) on page 6 to find the appropriate cable specification for your installation.

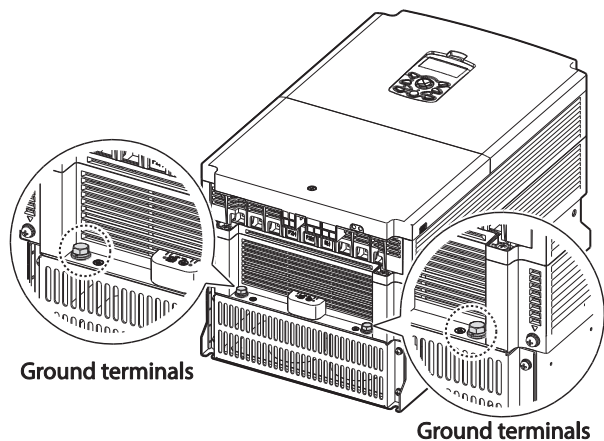

- 2 Connect the other ends of the ground cables to the supply earth (ground) terminal.

Note

400 V products require Special Class 3 grounding. Resistance to ground must be < 10 Ω.

Warning


Install ground connections for the inverter and the motor by following the correct specifications to ensure safe and accurate operation. Using the inverter and the motor without the specified grounding connections may result in electric shock.

Step 3 Power Terminal Wiring

The following illustration shows the terminal layout on the power terminal block. Refer to the detailed descriptions to understand the function and location of each terminal before making wiring connections. Ensure that the cables selected meet or exceed the specifications in [1.5 Cable Selection](#) on page 6 before installing them.

Caution

- Tighten terminal screws to their specified torque. Loose terminal screws may allow the cables to disconnect and cause short circuit or inverter failure. Over tightening terminal screws may damage the terminals and cause short circuits and malfunctions.
- Use copper cables rated for 600 V, 90°C for power terminal wiring.
- Use copper cables rated for 300 V, 75°C for control terminal wiring.
- Do not connect two wires in a single terminal for power cable connections.
- Power supply cables must be connected to the R, S, and T terminals. Connecting power cables to the U, V, and W terminals will cause internal damage to the inverter. Connect motors to the U, V, and W terminals. Phase sequence arrangement is not necessary.

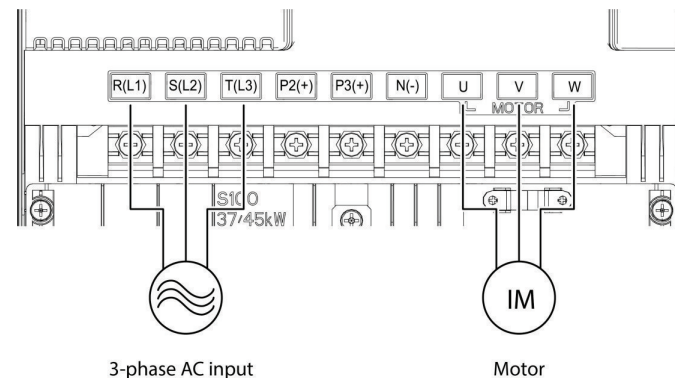

3-phase AC input

Motor

Power Terminal Labels and Descriptions

Terminal Labels	Name	Description
R(L1)/S(L2)/T(L3)	AC power input terminal	Mains supply AC power connections.
P2+	+ DC link terminal	DC voltage output terminals.
N-	- DC link terminal	
P3+	Brake resistor terminals	Brake resistor wiring connection.
U/V/W	Motor output terminals	3-phase induction motor wiring connections.

Note

- Use STP (Shielded Twisted Pair) cables to connect a remotely located motor with the inverter. Do not use 3 core cables.
- Make sure that the total cable length does not exceed 665ft (202m).
- Long cable runs can cause reduced motor torque in low frequency applications due to voltage drop. Long cable runs also increase a circuit's susceptibility to stray capacitance and may trigger over-current protection devices or result in malfunction of equipment connected to the inverter.
- Voltage drop is calculated by using the following formula:

$$\text{Voltage Drop (V)} = [\sqrt{3} \times \text{cable resistance (m}\Omega\text{/m)} \times \text{cable length (m)} \times \text{current(A)}] / 1000$$

- Use cables with the largest possible cross-sectional area to ensure that voltage drop is minimized over long cable runs. Lowering the carrier frequency and installing a micro surge filter may also help to reduce voltage drop.

Distance	< 330ft (100m)	> 330ft (100m)
Allowed Carrier Frequency	< 5 kHz	< 2.5 kHz

Warning


Do not connect power to the inverter until installation has been fully completed and the inverter is ready to be operated. Doing so may result in electric shock.

Caution

- Power supply cables must be connected to the R, S, and T terminals. Connecting power cables to other terminals will damage the inverter.
- Use insulated ring lugs when connecting cables to R/S/T and U/V/W terminals.
- The inverter's power terminal connections can cause harmonics that may interfere with other communication devices located near to the inverter. To reduce interference the installation of noise filters or line filters may be required.
- To avoid circuit interruption or damaging connected equipment, do not install phase-advanced condensers, surge protection, or electronic noise filters on the output side of the inverter.
- To avoid circuit interruption or damaging connected equipment, do not install magnetic contactors on the output side of the inverter.


Step 4 Control Terminal Wiring

The illustrations below show the detailed layout of control wiring terminals, and control board switches. Refer to the detailed information provided below and [1.5 Cable Selection](#) on page 6 before installing control terminal wiring and ensure that the cables used meet the required specifications.

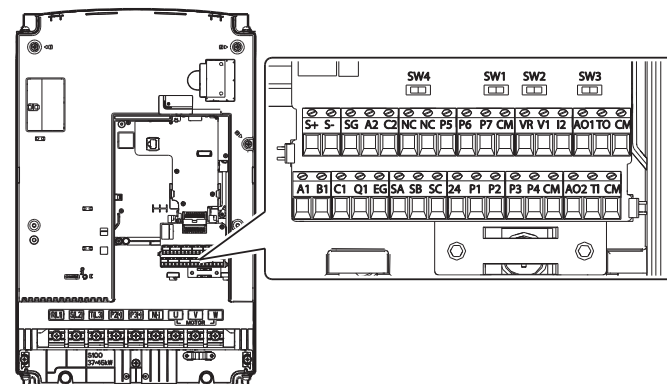

Control Board Switches

Switch	Description
SW	PNP/NPN mode selection switch
SW2	analog voltage/current input terminal selection switch
SW3	analog voltage/current output terminal selection switch
SW4	Terminal resistor DIP switch

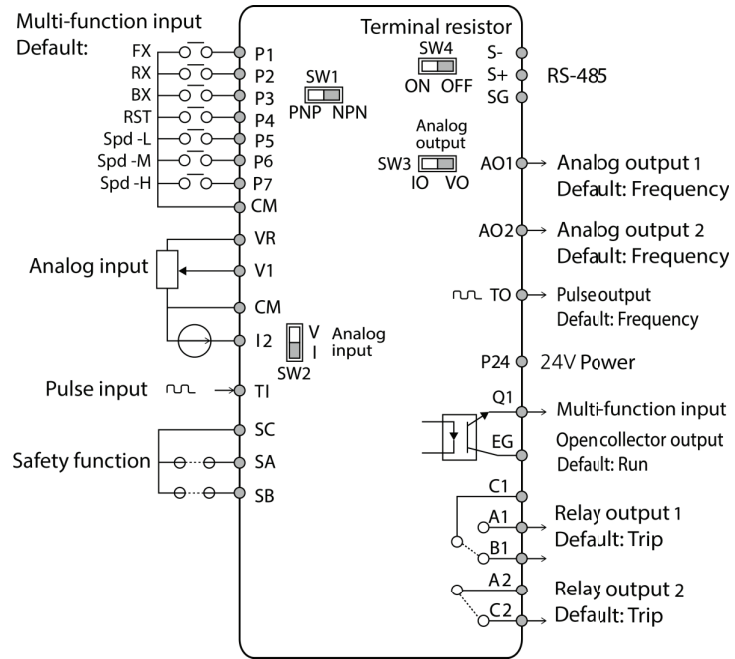

Installation

Input Terminal Labels and Descriptions


Function	Label	Name	Description
Multi-function terminal configuration	P1-P7	Multi-function Input 1-7	Configurable for multi-function input terminals.
	CM	Common Sequence	Common terminal for analog terminal inputs and outputs.
Analog input configuration	VR	Potentiometer frequency reference input	Used to setup or modify a frequency reference via analog voltage or current input. • Maximum Voltage Output: 12 V • Maximum Current Output: 100 mA, • Potentiometer: 1-5 kΩ
	V1	Voltage input for frequency reference input	Used to setup or modify a frequency reference via analog voltage input terminal. • Unipolar: 0-10 V (12 V Max.) • Bipolar: -10-10 V (±12 V Max.)
	V2/I2	Voltage/current input for frequency reference input	Used to setup or modify a frequency reference via analog voltage or current input terminals. Switch between voltage (V2) and current (I2) modes using a control board switch (SW2). V2 Mode: • Unipolar: 0-10 V (12 V Max.) • Bipolar: -10-10 V (±12 V Max.) I2 Mode • Input current: 4-20 mA • Maximum Input current: 24 mA • Input resistance: 249 Ω
	T1	Pulse input for frequency reference input (pulse train)	Setup or modify frequency references using pulse inputs from 0 to 32 kHz. • Low Level: 0-0.8 V • High Level: 3.5-12 V
Safety functionality configuration	SA	Safety input A	Used to block the output from the inverter in an emergency. Conditions: • Normal Operation: Both the SA and SB terminals are connected to the SC terminal. • Output Block: One or both of the SA and SB terminals lose connection with the SC terminal.
	SB	Safety input B	
	SC	Safety input power source	DC 24 V, < 25 mA

Output/Communication Terminal Labels and Descriptions

Function	Label	Name	Description
Analog output	AO1	Voltage/Current Output	Used to send inverter output information to external devices: output frequency, output current, output voltage, or a DC voltage. Operate switch (SW2) to select the signal output type (voltage or current) at the AO terminal. Output Signal Specifications: <ul style="list-style-type: none"> Output voltage: 0–10 V Maximum output voltage/current: 12 V/10 mA Output current: 0–20 mA (Load resistance: Less than 500 Ω) Maximum output current: 24 mA
	AO2	Analog voltage output terminal	Use to send inverter output information, such as output frequency, output current, output voltage, or DC voltage to external devices. <ul style="list-style-type: none"> Output voltage: 0–10 V Maximum output voltage/current: 12V/10 mA
	TO	Pulse Output	Sends pulse signals to external devices to provide a single output value from the inverter of either: output frequency, output current, output voltage, or DC voltage. Output Signal Specifications: <ul style="list-style-type: none"> Output frequency: 0–32 kHz Output voltage: 0–12V
Terminal contacts	Q1	Multi-functional (open collector)	DC 26V, 100 mA or less
	EG	Common	Common ground contact for an open collector (with external power source)
	24	External 24V power source	Maximum output current: 150 mA
	A1/C1/B1	Fault signal output	Sends out alarm signals when the inverter's safety features are activated (AC 250 V <1A, DC 30 V < 1A). <ul style="list-style-type: none"> Fault condition: A1 and C1 contacts are connected (B1 and C1 open connection) Normal operation: B1 and C1 contacts are connected (A1 and C1 open connection)
	A2, C2	Multi-functional relay output terminal	The signal is generated while operating. Define and use the multi-functional relay output terminal (Less than AC250 V 5A, Less than DC30 V 5A).
	S+/S-/SG	RS-485 signal line	Used to send or receive RS-485 signals. Refer to 7 RS-485 Communication Features on page 206 for more details.
NC	NC	Not in use.	

Preinsulated Crimp Terminal Connectors (Bootlace Ferrule) .


Use preinsulated crimp terminal connectors to increase reliability of the control terminal wiring. Refer to the specifications below to determine the crimp terminals to fit various cable sizes.

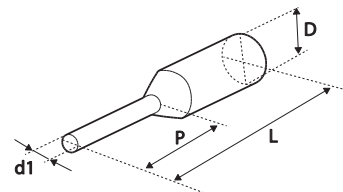

P/N	Cable Spec.		Dimensions (inches/mm)				Manufacturer
	AWG	mm ²	L*	P	d1	D	
CE002506	26	0.25	10.4	0.4 / 6.0	0.04 / 1.1	0.1 / 2.5	JEONO (Jeono Electric, http://www.jeono.com/)
CE002508			12.4	0.5 / 8.0			
CE005006	22	0.50	12.0	0.45 / 6.0	0.05 / 1.3	0.125 / 3.2	
CE007506	20	0.75	12.0	0.45 / 6.0	0.06 / 1.5	0.13 / 3.4	


* If the length (L) of the crimp terminals exceeds 0.5" (12.7mm) after wiring, the control terminal cover may not close fully.

To connect cables to the control terminals without using crimp terminals, refer to the following illustration detailing the correct length of exposed conductor at the end of the control cable.

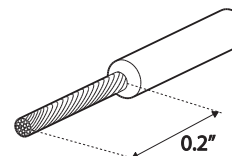

Note

- While making wiring connections at the control terminals, ensure that the total cable length does not exceed 165ft (50m).
- Ensure that the length of any safety related wiring does not exceed 100ft (30m).
- Ensure that the cable length between an LCD keypad and the inverter does not exceed 10ft (3.04m). Cable connections longer than 10ft (3.04m) may cause signal errors.
- Use ferrite material to protect signal cables from electro-magnetic interference.
- Take care when supporting cables using cable ties, to apply the cable ties no closer than 6 inches from the inverter. This provides sufficient access to fully close the front cover.
- When making control terminal cable connections, use a small flat-tip screw driver (0.1in wide (2.5mm) and 0.015in thick (0.4mm) at the tip).

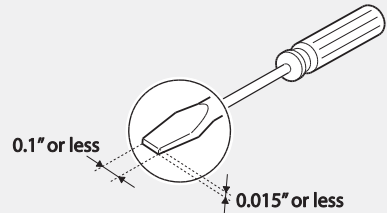

Step 5 PNP/NPN Mode Selection



The SX2000 inverter supports both PNP (Source) and NPN (Sink) modes for sequence inputs at the terminal. Select an appropriate mode to suit requirements using the PNP/NPN selection switch (SW1) on the control board. Refer to the following information for detailed applications.

PNP Mode (Source)

Select PNP using the PNP/NPN selection switch (SW1). Note that the factory default setting is NPN mode. CM is the common ground terminal for all analog inputs at the terminal, and P24 is 24V internal source. If you are using an external 24V source, build a circuit that connects the external source (-) and the CM terminal.

NPN Mode (Sink)


Select NPN using the PNP/NPN selection switch (SW1). Note that the factory default setting is NPN mode. CM is the common ground terminal for all analog inputs at the terminal, and P24 is 24V internal source.

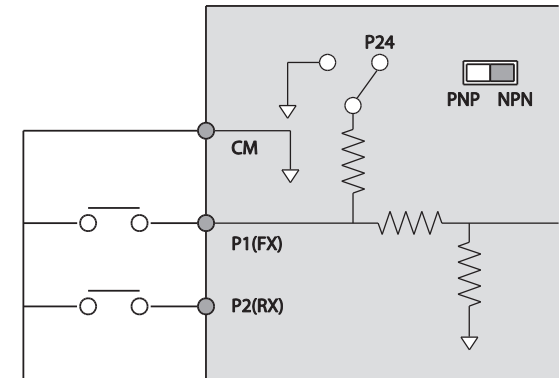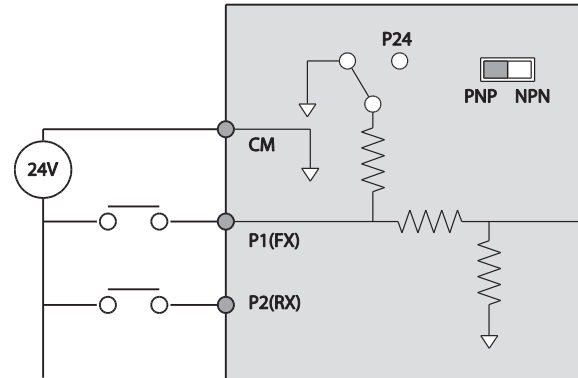

Step 7 Selecting the braking unit

Select the braking unit as following:

Applicable motor capacity	Braking unit
30-37 kW	LTDBU-0370
45-55 kW	LTDBU-0550
75 kW	LTDBU-0750

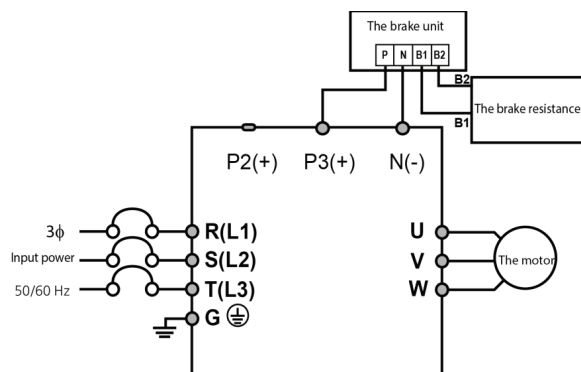

Step 8 Re-assembling the Covers and Routing Bracket

Re-assemble the cable routing bracket and the covers after completing the wiring and basic configurations. Note that the assembly procedure may vary according to the product group or frame size of the product.

2.3 Post-Installation Checklist

After completing the installation, check the items in the following table to make sure that the inverter has been safely and correctly installed.

Items	Check Point	Ref.	Result
Installation Location/Power I/O Verification	Is the installation location appropriate?	p.3	
	Does the environment meet the inverter's operating conditions?	p.4	
	Does the power source match the inverter's rated input? Is the inverter's rated output sufficient to supply the equipment? (Degraded performance will result in certain circumstances. Refer to 11.8 Continuous Rated Current Derating on page 323 for details.)	p.316	
Power Terminal Wiring	Is a circuit breaker installed on the input side of the inverter?	p.9	
	Is the circuit breaker correctly rated?	p.316	
	Are the power source cables correctly connected to the R/S/T terminals of the inverter? (Caution: connecting the power source to the U/V/W terminals may damage the inverter.)	p.16	
	Are the motor output cables connected in the correct phase rotation (U/V/W)? (Caution: motors will rotate in reverse direction if three phase cables are not wired in the correct rotation.)	p.16	
	Are the cables used in the power terminal connections correctly rated?	p.6	
	Is the inverter grounded correctly?	p.15	
	Are the power terminal screws and the ground terminal screws tightened to their specified torques?	p.16	
	Are the overload protection circuits installed correctly on the motors (if multiple motors are run using one inverter)?	-	
	Is the inverter separated from the power source by a magnetic contactor (if a braking resistor is in use)?	p.9	
	Are advanced-phase capacitors, surge protection and electromagnetic interference filters installed correctly? (These devices MUST not be installed on the output side of the inverter.)	p.16	
Control Terminal Wiring	Are STP (shielded twisted pair) cables used for control terminal wiring?	-	
	Is the shielding of the STP wiring properly grounded?	-	
	If 3-wire operation is required, are the multi-function input terminals defined prior to the installation of the control wiring connections?	p.18	
	Are the control cables properly wired?	p.18	
	Are the control terminal screws tightened to their specified torques?	p.13	

Items	Check Point	Ref.	Result
	Is the total cable length of all control wiring < 165ft (100m)?	<u>p.23</u>	
	Is the total length of safety wiring < 100ft (30m)?	<u>p.23</u>	
Miscellaneous	Are optional cards connected correctly?	-	
	Is there any debris left inside the inverter?	<u>p.13</u>	
	Are any cables contacting adjacent terminals, creating a potential short circuit risk?	-	
	Are the control terminal connections separated from the power terminal connections?	-	
	If capacitors have been in use for more than two years, have they been replaced?	-	
	Has a fuse been installed for the power source?	<u>p.321</u>	
	Are the connections to the motor separated from other connections?	-	
	If the fans have been in operation for more than three years, have they been replaced?	<u>p.314</u>	

Note

STP (Shielded Twisted Pair) cable has a highly conductive, shielded screen around twisted cable pairs. STP cables protect conductors from electromagnetic interference.

2.4 Test Run

After the post-installation checklist has been completed, follow the instructions below to test the inverter.

- 1 Before starting a test drive, check the wiring conditions.
- 2 Turn on the power supply to the inverter. Ensure that the keypad display light is on.
- 3 Select the command source (Set the DRV code).
- 4 Set a frequency reference, and then check the following:
 - If V1 is selected as the frequency reference source, does the reference change according to the input voltage at VR?
 - If V2 is selected as the frequency reference source, is the voltage/current selector switch (SW2) set to voltage, and does the reference change according to the input voltage?
 - If I2 is selected as the frequency reference source, is the voltage/current selector switch (SW2) set to current, and does the reference change according to the input current?
- 5 Set the acceleration (ACC) time and deceleration (Dec) time.
- 6 Start the motor and check the following:
 - Ensure that the motor rotates in the correct direction (refer to the note below).
 - Ensure that the motor accelerates and decelerates according to the set times, and that the motor speed reaches the frequency reference.


Note

If the forward command (Fx) is on, the motor should rotate counterclockwise when viewed from the load side of the motor. If the motor rotates in the reverse direction, switch the cables at the U and V terminals.

Verifying the Motor Rotation

- 1 On the keypad, set the DRV-06 (Frequency reference source) code to 0(Keypad).
- 2 Set a frequency reference.
- 3 Press the [RUN] key. Motor starts forward operation.
- 4 Observe the motor's rotation from the load side and ensure that the motor rotates counterclockwise (forward).

If the motor rotates in the reverse direction, two of the U/V/W terminals need to be switched.

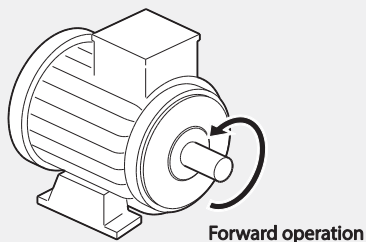**⚠ Caution**

- Check the parameter settings before running the inverter. Parameter settings may have to be adjusted depending on the load.
- To avoid damaging the inverter, do not supply the inverter with an input voltage that exceeds the rated voltage for the equipment.
- Before running the motor at maximum speed, confirm the motor's rated capacity. As inverters can be used to easily increase motor speed, use caution to ensure that motor speeds do not accidentally exceed the motor's rated capacity.

3 Learning to Perform Basic Operations


This chapter describes the keypad layout and functions. It also introduces parameter groups and codes required to perform basic operations. The chapter also outlines the correct operation of the inverter before advancing to more complex applications. Examples are provided to demonstrate how the inverter actually operates.







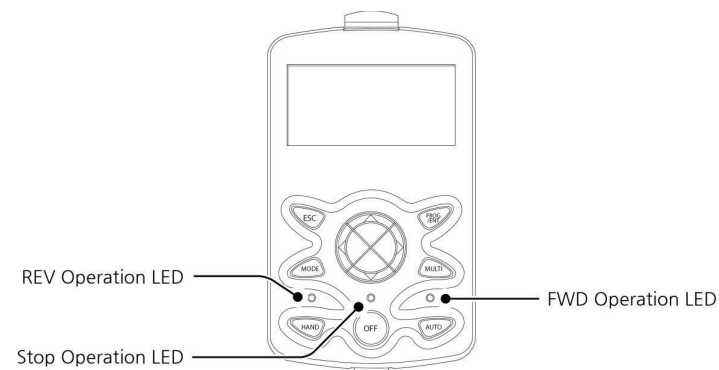


3.1 About the Keypad

The keypad is composed of two main components – the display and the operation (input) keys. Refer to the following illustration to identify part names and functions.

3.1.1 Operation Keys


The following table lists the names and functions of the keypad's operation keys.




Key	Name	Description
	[MODE] Key	Used to switch between modes.
	[PROG / Ent] Key	Used to select, confirm, or save a parameter value.
	[UP] key	Switch between codes or increase or decrease parameter values.
	[DOWN] key	
	[LEFT] key	Switch between groups or move the cursor during parameter setup or modification.
	[RIGHT] key	
	[MULTI] Key	Used to perform special functions, such as user code registration.
	[ESC] Key	Used to cancel an input during parameter setup. <ul style="list-style-type: none"> Pressing the [ESC] key before pressing the [PROG / ENT] key reverts the parameter value to the previously set value. Pressing the [ESC] key while editing the codes in any function group makes the keypad display the first code of the function group. Pressing the [ESC] key while moving through the modes makes the keypad display Monitor mode.
	[FWD] Key	Used to operate the motor in the forward direction.
	[REV] Key	Used to operate the motor in the reversed direction.
	[STOP/RESET] Key	Used to stop motor operation. Used to reset the inverter following fault or failure condition.

3.1.2 About the Display

Monitor mode display

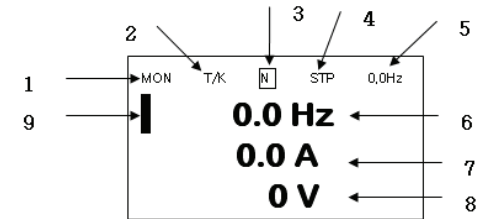

Parameter settings display

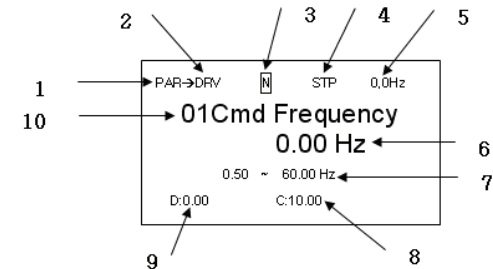

Names displayed in monitor mode and parameter settings

No.	Names displayed in monitor mode	No.	Names displayed in parameter settings
1	Mode	1	Mode
2	Operating/frequency command	2	Group
3	Multi-functional key settings	3	Multi-functional key settings
4	Inverter operation status	4	Inverter operation status
5	Items displayed in the status window	5	Items displayed in the status window
6	Monitor mode display 1	6	Display parameters
7	Monitor mode display 2	7	Available settings range
8	Monitor mode display 3	8	Existing setting values
9	Monitor mode cursor	9	Factory default values
		10	Code numbers and names


Display details

No.	Name	Display	Description
1	Mode	MON	Monitor Mode
		PAR	Parameter Mode
		TRP	Trip Mode
		CNF	Config Mode
2	Operation commands	K	Keypad operation command
		O	Field Bus communication option operation command
		A	Application option operation command
		R	Internal 485 operation command
		T	Terminal operation command
	Frequency commands	K	Keypad frequency command
		V	V1 input frequency command
		P	Pulse input frequency command
		U	Frequency command for UP operation (Up - Down operation)
		D	Frequency command for DOWN operation (Up - Down operation)
S	Frequency command for STOP operation (Up - Down operation)		
O	FBus Option frequency command		

No.	Name	Display	Description
3	Multi-functional key settings	J	Jog frequency command
		R	Int 485 frequency command
		1 ~9, A~F	Multi-step frequency command
		JOG Key	Keypad JOG operation mode
		Local/Remote	Able to select either local or remote operation
		UserGrpSelKey	Register or delete user group parameters in parameter mode
4	Inverter operation status	STP	Motor stopped
		FWD	Operating in forward direction
		REV	Operating in reverse direction
		DC	DC output
		WAN	Warning
		STL	Stall
		SPS	Speed Search
		OSS	S/W overcurrent protective function is on
OSH	H/W overcurrent protective function is on		
TUN	Auto Tuning		

3.1.3 Display Modes

The SX2000 inverter uses 5 modes to monitor or configure different functions. The parameters in Parameter mode are divided into smaller groups of relevant functions. Press the [Mode] key to change to Parameter mode.

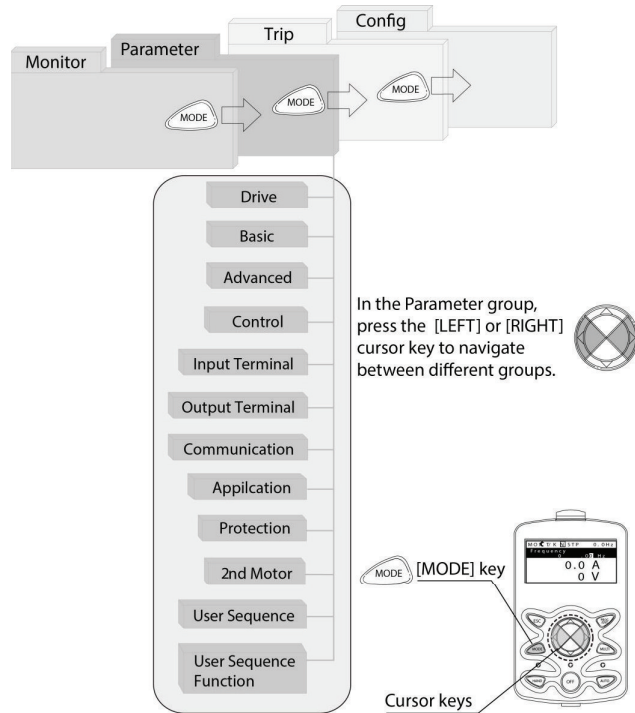

Basic Ops.

Table of Display Modes

The following table lists the 5 display modes used to control the inverter functions.

Mode Name	Keypad Display	Description
Monitor mode	MON	Displays the inverter's operation status information. In this mode, information including the inverter's frequency reference, operation frequency, output current, and voltage may be monitored.
Parameter mode	PAR	Used to configure the functions required to operate the inverter. These functions are divided into 14 groups based on purpose and complexity.
Trip mode	TRP	Used to monitor the inverter's fault trip information, including the previous fault trip history. When a fault trip occurs during inverter operation, the operation frequency, output current, and output voltage of the inverter at the time of the fault may be monitored. This mode is not displayed if the inverter is not at fault and fault trip history does not exist.
Config mode	CNF	Used to configure the inverter features that are not directly related to the operation of the inverter. The settings you can configure in the Config mode include keypad display language options, monitor mode environment settings, communication module display settings, and parameter duplication and initialization.

Parameter Setting Mode

The following table lists the functions groups under Parameter mode.

Function Group Name	Keypad Display	Description
Drive	DRV	Configures basic operation parameters. These include ACC/Dec time settings, operation command settings, and functions necessary for operation.
Basic	BAS	Configures basic operation parameters. These parameters include motor parameters and multi-step frequency parameters.
Advanced	ADV	Configures acceleration or deceleration patterns, frequency limits, energy saving features, and, regeneration prevention features.
Control	CON	Configures the features related to speed search and KEB (kinetic energy buffering).
Input Terminal	IN	Configures input terminal-related features, including digital multi-functional inputs and analog inputs.
Output Terminal	OUT	Configures output terminal-related features, including digital multi-functional outputs and analog outputs.
Communication	COM	Configures the USB-related features and communication features for the RS-485, Modbus-RTU, Metasys N2, and BACnet. Optional communication module related features may be configured as well, if one is installed.
Application	APP	Configures functions related to auto sequence operation and PID control.
Protection	PRT	Configures motor and inverter protection features.
Motor 2 (Secondary motor)	M2	Configures the secondary motor-related features.
User Sequence	USS	Used to implement simple sequences with various function blocks.
User Sequence Function	USF	

Basic Ops.


3.2 Learning to Use the Keypad

The keypad enables movement between groups and codes. It also enables users to select and configure functions. At code level, you can set parameter values to turn specific functions on or off or decide how the functions will be used. For detailed information on the codes in each function group, refer to 8. *Table of Functions* on page 230. Confirm the correct values (or the correct range of the values), then follow the examples below to configure the inverter with the keypad.

3.2.1 Display Mode Selection

The following figure illustrates how the display modes change when you press the [Mode] button on the keypad. You can continue to press the [Mode] key until you get to the desired mode.

User mode and Trip mode are not displayed when all the inverter settings are set to the factory default (User mode must be configured before it is displayed on the keypad, and Trip mode is displayed only when the inverter is at fault, or has previous trip fault history).

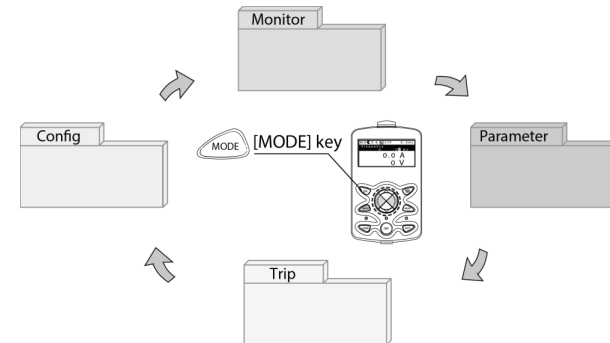

Mode selection in factory default condition

<p>MON T/K N STP 0,0Hz 0.0 Hz 0.0 A 0 V</p>	<ul style="list-style-type: none"> When the power is turned on, Monitor mode is displayed. Press the [MODE] key.
<p>PAR → DRV N STP 0,0Hz 00 Jump Code 9 CODE 01 Cmd Frequency 0,00 Hz 02 Cmd Torque 0,0 %</p>	<ul style="list-style-type: none"> Parameter mode Press the [MODE] key.
<p>CNF N STP 0,0Hz 00 Jump Code 40 CODE 01 Language Sel English 02 LCD Contrast □□□□□□□□□□□□</p>	<ul style="list-style-type: none"> Config (CNF) mode Press the [MODE] key.
<p>MON T/K N STP 0,0Hz 0.0 Hz 0.0 A 0 V</p>	<ul style="list-style-type: none"> Monitor mode is displayed again.

Switching between groups when Trip mode is added


Trip mode is accessible only when the inverter has trip fault history. Refer to 4. [Learning Basic Features](#) on page 55 for information about monitoring faults.

<p>MON T/K N STP 0,0Hz 0.0 Hz 0.0 A 0 V</p>	<ul style="list-style-type: none"> When the power is turned on, Monitor mode is displayed. Press the [MODE] key.
--	--

<p>PAR → DRV N STP 0,0Hz 00 Jump Code 9 CODE 01 Cmd Frequency 0,00 Hz 02 Cmd Torque 0,0 %</p>	<ul style="list-style-type: none"> Parameter mode Press the [MODE] key.
<p>TRP Last-1 00 Trip Name (1) External Trip 01 Output Freq 0,00 Hz 02 Output Current 0,0 A</p>	<ul style="list-style-type: none"> Trip mode Press the [MODE] key.
<p>CNF N STP 0,0Hz 00 Jump Code 40 CODE 01 Language Sel English 02 LCD Contrast □□□□□□□□□□□□</p>	<ul style="list-style-type: none"> CNF mode Press the [MODE] key.
<p>MON T/K N STP 0,0Hz 0.0 Hz 0.0 A 0 V</p>	<ul style="list-style-type: none"> Monitor mode is displayed again.

3.2.2 Switching Groups

Press the [MODE] key to display a specific mode. Modes displayed change in the following order:

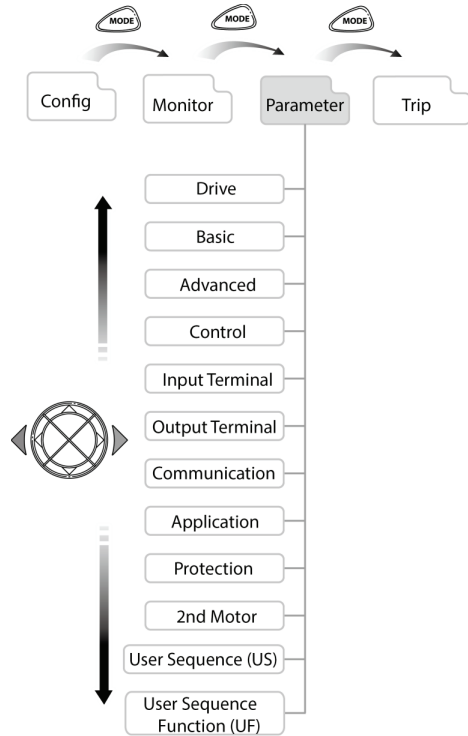

Basic Ops.

Switching between Groups in Parameter Display Mode

After entering Parameter mode from Monitor mode, press the [►] key to change the display as shown below. Press the [◄] key to return to the previous mode.

<pre>MON T/K [N] STP 0.0Hz █ 0.0 Hz 0.0 A 0 V</pre>	<ul style="list-style-type: none"> When the power is turned on, Monitor mode is displayed. Press the [MODE] key.
<pre>PAR → DRV [N] STP 0.0Hz 00 Jump Code 9 CODE 01 Cmd Frequency 0.00 Hz 02 Cmd Torque 0.0 %</pre>	<ul style="list-style-type: none"> Parameter mode Drive group is displayed. Press the [►] key.
<pre>PAR → BAS [N] STP 0.0Hz 00 Jump Code 20 CODE 01 Aux Ref Src None 02 Cmd 2nd Src Fx/Rx-1</pre>	<ul style="list-style-type: none"> Basic group (BAS) Press the [►] key.
<pre>PAR → ADV [N] STP 0.0Hz 00 Jump Code 24 CODE 01 Acc Pattern Linear 02 Dec Pattern Linear</pre>	<ul style="list-style-type: none"> Advanced group (ADV) Press the [►] key seven times.
<pre>PAR → PRT [N] STP 0.0Hz 00 Jump Code 40 CODE 04 Load Duty Heavy Duty 05 Phase Loss Chk █ █</pre>	<ul style="list-style-type: none"> Protection group (PRT) Press the [►] key.
<pre>PAR → DRV [N] STP 0.0Hz 00 Jump Code 9 CODE 01 Cmd Frequency 0.00 Hz 02 Cmd Torque 0.0 %</pre>	<ul style="list-style-type: none"> Parameter mode Drive group (DRV) is displayed again.

3.2.3 Navigating through the Codes (Functions)

Code Navigation in Monitor mode

In monitor mode, press the [▲], [▼] key to display frequency, the output current, or voltage according to the cursor position.

	<ul style="list-style-type: none"> When the power is turned on, Monitor mode is displayed. The cursor appears to the left of the frequency information. Press the [▼] key.
	<ul style="list-style-type: none"> Information about the second item in Monitor mode (Output Current) is displayed. Wait for 2 seconds until the information on the display disappears.
	<ul style="list-style-type: none"> Information about the second item in Monitor mode (Output Current) disappears and the cursor reappears to the left of the second item. Press the [▼] key.
	<ul style="list-style-type: none"> Information about the third item in Monitor mode (Output Voltage) is displayed. Wait for 2 seconds until the information on the display disappears.
	<ul style="list-style-type: none"> Information about the third item in Monitor mode (Output Voltage) disappears and the cursor appears to the left of the third item. Press the [▼] key twice.

	<ul style="list-style-type: none"> Information about the first item in Monitor mode (Frequency) is displayed.
	<ul style="list-style-type: none"> Information about the first item in Monitor mode (Frequency) disappears and the cursor appears to the left of the first item.

Code Navigation in Parameter mode

The following examples show you how to move through codes in different function groups (Drive group and Basic group) in Parameter mode. In parameter mode, press the [▲] or [▼] key to move to the desired functions.

	<ul style="list-style-type: none"> When the power is on, monitor mode is displayed. Press the [MODE] key.
	<ul style="list-style-type: none"> Drive group (DRV) in Parameter mode is displayed. If any other group is displayed, press the [MODE] key until the Drive group is displayed, or press the [ESC] key.
	<ul style="list-style-type: none"> Press the [▼] key to move to the second code (DRV-01) of Drive group. Press the [▶] key
	<ul style="list-style-type: none"> Basic group is displayed. Press the [▲] or [▼] key to move to the desired codes and configure the inverter functions.

3.2.4 Navigating Directly to Different Codes

Parameter mode and Config mode allow direct jumps to specific codes. The code used for this feature is called the Jump Code. The Jump Code is the first code of each mode. The Jump Code feature is convenient when navigating for a code in a function group that has many codes.

The following example shows how to navigate directly to code DRV-09 from the initial code (DRV-00 Jump Code) in the Drive group.

<p>PAR → DRV [N] STP 0.0Hz 00 Jump Code 9 CODE 01 Cmd Frequency 0.00 Hz 02 Acc Time 20.0 sec</p>	<ul style="list-style-type: none"> The Drive group (DRV) is displayed in Parameter mode. Make sure that the first code in the Drive group (DRV 00 Jump Code) is currently selected. Press the [PROG/ENT] key.
<p>PAR → DRV [N] STP 0.0Hz 00 Jump Code 9 CODE 01 Cmd Frequency 0.00 Hz 02 Acc Time 20.0 sec</p>	<ul style="list-style-type: none"> The Code input screen is displayed and the cursor flashes. A flashing cursor indicates that it is waiting for user input.
<p>PAR → DRV [N] STP 0.0Hz 00 Jump Code 9 CODE 1~99 CODE D:9 C:9</p>	<ul style="list-style-type: none"> Press the [▲] key to increase the number to 9, and then press the [PROG/ENT] key.
<p>PAR → DRV [N] STP 0.0Hz 09 Control Mode V/F 10 Torque Control ---No--- 11 JOG Frequency 10.00 Hz</p>	<ul style="list-style-type: none"> DRV-09 (Control Mode) is displayed.
<p>PAR → DRV [N] STP 0.0Hz 00 Jump Code 9 CODE 01 Cmd Frequency 0.00 Hz 02 Acc Time 20.0 sec</p>	<ul style="list-style-type: none"> Press the [ESC] key to go back to the initial code of the Drive group.

Basic Ops.

3.2.5 Parameter settings

Parameter settings available in Monitor mode

The SX2000 inverter allows basic parameters to be modified in Monitor mode. The following example shows how to set the frequency.

<p>MON T/K [N] STP 0.0Hz 0.0 Hz 0.0 A 0 V</p>	<ul style="list-style-type: none"> Make sure that the cursor is at the frequency reference item and that the frequency setting is set to 'Keypad' in DRV-09. Press the [PROG/ENT] key.
<p>MON T/K [N] STP 0.0Hz Frequency 0.00 Hz 0.0 A 0 V</p>	<ul style="list-style-type: none"> When the cursor is on the frequency reference item, detailed information is displayed and the cursor flashes on the input line. Press the shift key to go to the desired frequency.
<p>MON T/K [N] STP 0.0Hz Frequency 10.00 Hz 0.0 A 0 V</p>	<ul style="list-style-type: none"> Press the [▲] key to set the frequency to 10 Hz. Press the [PROG/ENT] key.
<p>MON T/K [N] STP 0.0Hz 10.0 Hz 0.0 A 0 V</p>	<ul style="list-style-type: none"> The frequency is set to 10 Hz.

Parameter settings in other modes and groups

The following example shows how to change the frequency in the Drive group. This example can also be applied to other modes and groups.

<pre> PAR → DRV [N] STP 0.0Hz 00 Jump Code 01 Cmd Frequency 0.00 Hz 02 Cmd Torque 0.0 % </pre>	<ul style="list-style-type: none"> This is the initial display for Parameter mode. Press the [▼] key.
<pre> PAR → DRV [N] STP 0.0Hz 00 Jump Code 01 Cmd Frequency 0.00 Hz 02 Cmd Torque 0.0 % </pre>	<ul style="list-style-type: none"> DRV-01 code is selected. Press the [PROG/ENT] key.
<pre> PAR → DRV [N] STP 0.0Hz 01Cmd Frequency 0.00 Hz 0.50 ~ 60.00 Hz D:0.00 C:10.00 </pre>	<ul style="list-style-type: none"> The frequency can be changed at the flashing digit. Press the [←/→] key to move the cursor to the desired digit.
<pre> PAR → DRV [N] STP 0.0Hz 01Cmd Frequency 10.00 Hz 0.50 ~ 60.00 Hz D:0.00 C:10.00 </pre>	<ul style="list-style-type: none"> Press the [▲] key to enter 10 Hz, and then press the [PROG/ENT] key.
<pre> PAR → DRV [N] STP 0.0Hz 00 Jump Code 01 Cmd Frequency 10.00 Hz 02 Cmd Torque 0.0 % </pre>	<ul style="list-style-type: none"> The frequency is changed to 10 Hz.

3.2.6 Monitoring the Operation

How to use Monitor mode

There are 3 types of items that may be monitored in Monitor mode. Some items, including frequency, may be modified. Users can select the items to be displayed in Config mode (CNF).

<pre> MON T/K [N] STP 0.0Hz 10.0 Hz 0.0 A 0.0 V </pre>	<ul style="list-style-type: none"> Monitor mode Frequency, current, and voltage are set as the default monitored items. The target frequency is displayed when the inverter is stopped. The operation frequency is displayed while operating.
<pre> CNF [N] STP 0.0Hz 21 Monitor Line-1 Frequency 22 Monitor Line-2 Output Current 23 Monitor Line-3 Output Voltage </pre>	<ul style="list-style-type: none"> Configure the items to be displayed in Config mode (CNF) 21~23. Press the [▼] key to go to 23.
<pre> CNF [N] STP 0.0Hz 21 Monitor Line-1 Frequency 22 Monitor Line-2 Output Current 23 Monitor Line-3 Output Voltage </pre>	<ul style="list-style-type: none"> Press the [PROG/ENT] key to change 23 to output power.
<pre> MON T/K [N] STP 0.0Hz 0.0 Hz 0.0 A 0.0 kW </pre>	<ul style="list-style-type: none"> Press the [ESC] key to ensure that the third item in Monitor mode is changed to output power.

Basic Ops.

Items available for monitoring

Mode	Number	Display	Setting Range	Initial value	
CNF	20	Anytime Para	0 Frequency	0: Frequency	
	21	Monitor Line-1	1 Speed	0: Frequency	
	22	Monitor Line-2	2 Output Current	2:Output Current	
				3 Output Voltage	
				4 Output Power	
				5 WHour Counter	
				6 DCLink Voltage	
				7 DI State	
				8 DO State	
				9 V1 Monitor[V]	
				10 V1 Monitor[%]	
				13 V2 Monitor[V]	
				14 V2 Monitor[%]	
				15 I2 Monitor[mA]	
	16 I2 Monitor[%]				
	17 PID Output				
	18 PID ref Value				
	19 PID Fbk Value				
	20 Torque				
	21 Torque Limit				
	22 Trq Bias Ref				
	23 Speed Limit				

How to use the status bar

On the top-right corner of the display, there is a display item. This item is displayed as long as the inverter is on, regardless of the mode the inverter is operating in.

<p>MON T/AK N STP 0.0Hz 0.0 Hz 0.0 A 0 V</p>	<ul style="list-style-type: none"> • Monitor mode • In the top-right corner of the display, the frequency reference is displayed (factory default).
<p>CNF N STP 0.0Hz 20 Anytime Para 21 Monitor Line-1 22 Monitor Line-2</p>	<ul style="list-style-type: none"> • Enter Config mode and go to CNF-20 to select the item to display. • Press the [PROG/ENT] key to change the item to 'Output Current.' • On the top-right corner of the display, the unit changes from 'Frequency' to 'Current.'
<p>MON T/AK N STP 0.0A 0.0 Hz 0.0 A 0 V</p>	<ul style="list-style-type: none"> • In monitor mode, the status bar item is changes to 'Current.'

3.3 Fault Monitoring

3.3.1 Monitoring Faults during Inverter Operation

The following example shows how to monitor faults that occurred during inverter operation.

<p>TRP current</p> <p>Over Voltage (01)</p> <p>01 Output Freq 48.30 Hz</p> <p>02 Output Current 33.3 A</p>	<ul style="list-style-type: none"> If a fault trip occurs during inverter operation, the inverter enters Trip mode automatically and displays the type of fault trip that occurred.
<p>TRP Last-1</p> <p>01 Output Freq 48.30 Hz</p> <p>02 Output Current 33.3 A</p> <p>03 Inverter State Stop</p>	<ul style="list-style-type: none"> Press the [▼] key to view the information on the inverter at the time of fault, including the output frequency, output current, and operation type.
<p>MON T/K N STP 0.0A</p> <p>0.0 Hz</p> <p>0.0 A</p> <p>0 V</p>	<ul style="list-style-type: none"> When the inverter is reset and the fault trip is released, the keypad display returns to the screen it was at when the fault trip occurred.

3.3.2 Monitoring Multiple Fault Trips

The following example shows how to monitor multiple faults that occur at the same time.

<p>TRP current</p> <p>Over Voltage (02)</p> <p>01 Output Freq 48.30 Hz</p> <p>02 Output Current 33.3 A</p>	<ul style="list-style-type: none"> If multiple fault trips occur at the same time, the number of fault trips occurred is displayed on the right side of the fault trip type. Press the [PROG/ENT] key.
<p>TRP current</p> <p>00 Trip Name (02)</p> <p>0 Over Voltage</p> <p>1 External Trip</p>	<ul style="list-style-type: none"> The types of fault trips that occurred are displayed. Press the [PROG/ENT] key.
<p>TRP current</p> <p>Over Voltage (02)</p> <p>01 Output Freq 48.30 Hz</p> <p>02 Output Current 33.3 A</p>	<ul style="list-style-type: none"> The display returns to the screen it was at when the fault trip occurred.



Fault trip history saving and monitoring

When fault trips occur, the trip mode saves the content. Up to five fault trips are saved in the history. Trip mode saves when the inverter is reset, and when a Low Voltage fault trip occurs due to power outages. If a trip occurs more than five times, the information for the five previous trips are automatically deleted.

<p>TRP current</p> <p>Over Voltage (02)</p> <p>01 Output Freq 48.30 Hz</p> <p>02 Output Current 33.3 A</p>	<ul style="list-style-type: none"> If a fault trip occurs during inverter operation, the inverter enters Trip mode automatically and displays the type of fault trip that occurred.
<p>MON T/K <input checked="" type="checkbox"/> STP 0,0A</p> <p>0.0 Hz</p> <p>0.0 A</p> <p>0 V</p>	<ul style="list-style-type: none"> After the [RESET] key or terminal is pressed, the fault trip is saved automatically and returns to the screen it was on before the fault trip occurred. Press the [MODE] key to enter Trip mode.
<p>TRP current</p> <p>00 Trip Name (02) Over Voltage</p> <p>01 Output Freq 48.30 Hz</p> <p>02 Output Current 33.3 A</p>	<ul style="list-style-type: none"> The most recent fault trip is saved in Last-1 code. Press the [▶] key.
<p>TRP current</p> <p>00 Trip Name (01) External Trip</p> <p>01 Output Freq 48.30 Hz</p> <p>02 Output Current 33.3 A</p>	<ul style="list-style-type: none"> The fault trip changes position and is saved in Last-2 code. When a fault trip occurs again, the content in Last-2 is moved to Last-3.

Basic Ops.

3.4 Parameter Initialization

The following example demonstrates how to revert all the parameter settings back to the factory default (Parameter Initialization). Parameter initialization may be performed for separate groups in Parameter mode as well.

<p>MON T/K <input checked="" type="checkbox"/> STP 0,0A</p> <p>0.0 Hz</p> <p>0.0 A</p> <p>0 V</p>	<ul style="list-style-type: none"> Monitor mode is displayed.
<p>CNF <input checked="" type="checkbox"/> STP 0,0A</p> <p>00 Jump Code 9 CODE</p> <p>01 Language Sel English</p> <p>02 Inv SW Ver Version 1.00</p>	<ul style="list-style-type: none"> Press the [MODE] key to move to the Config (CNF) mode.
<p>CNF <input checked="" type="checkbox"/> STP 0,0A</p> <p>31 Option-2 Type None</p> <p>32 Option-3 Type None</p> <p>40 Parameter Init</p> <p>----NO----</p>	<ul style="list-style-type: none"> Press the [▼] key to go to CNF-40 (Parameter Init). Press the [PROG/ENT] key.
<p>CNF <input checked="" type="checkbox"/> STP 0,0A</p> <p>40 Parameter Init</p> <p>0 ----No----</p> <p>1 All Groups</p> <p>2 DRV</p>	<ul style="list-style-type: none"> In the list of options, select All Groups, and then press the [PROG/ENT] key.
<p>CNF <input checked="" type="checkbox"/> STP 0,0A</p> <p>31 Option-2 Type None</p> <p>32 Option-3 Type None</p> <p>40 Parameter Init</p> <p>----NO----</p>	<ul style="list-style-type: none"> The parameter initialization option is displayed again when the initialization is complete.

4 Learning Basic Features

This chapter describes the basic features of the SX2000 inverter. Check the reference page in the table to see the detailed description for each of the advanced features.

Basic Tasks	Description	Ref.
Frequency reference source configuration for the keypad	Configures the inverter to allow you to setup or modify frequency reference using the Keypad.	p.58
Frequency reference source configuration for the terminal block (input voltage)	Configures the inverter to allow input voltages at the terminal block (V1, V2) and to setup or modify a frequency reference.	p.59 , p.65
Frequency reference source configuration for the terminal block (input current)	Configures the inverter to allow input currents at the terminal block (I2) and to setup or modify a frequency reference.	p.63
Frequency reference source configuration for the terminal block (input pulse)	Configures the inverter to allow input pulse at the terminal block (TI) and to setup or modify a frequency reference.	p.65
Frequency reference source configuration for RS-485 communication	Configures the inverter to allow communication signals from upper level controllers, such as PLCs or PCs, and to setup or modify a frequency reference.	p.67
Frequency control using analog inputs	Enables the user to hold a frequency using analog inputs at terminals.	p.67
Motor operation display options	Configures the display of motor operation values. Motor operation is displayed either in frequency (Hz) or speed (rpm).	p.68
Multi-step speed (frequency) configuration	Configures multi-step frequency operations by receiving an input at the terminals defined for each step frequency.	p.68
Command source configuration for keypad buttons	Configures the inverter to allow the manual operation of the [FWD], [REV] and [Stop] keys.	p.70
Command source configuration for terminal block inputs	Configures the inverter to accept inputs at the FX/RX terminals.	p.70
Command source configuration for RS-485 communication	Configures the inverter to accept communication signals from upper level controllers, such as PLCs or PCs.	p.71
Local/remote switching via the [ESC] key	Configures the inverter to switch between local and remote operation modes when the [ESC] key is pressed. When the inverter is operated using remote inputs (any input other than one from the keypad), this configuration can be used to perform maintenance on the inverter, without losing or altering saved parameter settings. It can also be used to override remotes and use the keypad immediately in emergencies.	p.72
Motor rotation control	Configures the inverter to limit a motor's rotation direction.	p.73
Automatic start-up at power-	Configures the inverter to start operating at power-on. With	p.74

Basic Features

Basic Tasks	Description	Ref.
on	this configuration, the inverter begins to run and the motor accelerates as soon as power is supplied to the inverter. To use automatic start-up configuration, the operation command terminals at the terminal block must be turned on.	
Automatic restart after reset of a fault trip condition	Configures the inverter to start operating when the inverter is reset following a fault trip. In this configuration, the inverter starts to run and the motor accelerates as soon as the inverter is reset following a fault trip condition. For automatic start-up configuration to work, the operation command terminals at the terminal block must be turned on.	p.75
Acc/Dec time configuration based on the Max. Frequency	Configures the acceleration and deceleration times for a motor based on a defined maximum frequency.	p.76
Acc/Dec time configuration based on the frequency reference	Configures acceleration and deceleration times for a motor based on a defined frequency reference.	p.77
Multi-stage Acc/Dec time configuration using the multi-function terminal	Configures multi-stage acceleration and deceleration times for a motor based on defined parameters for the multi-function terminals.	p.78
Acc/Dec time transition speed (frequency) configuration	Enables modification of acceleration and deceleration gradients without configuring the multi-functional terminals.	p.79
Acc/Dec pattern configuration	Enables modification of the acceleration and deceleration gradient patterns. Basic patterns to choose from include linear and S-curve patterns.	p.80
Acc/Dec stop command	Stops the current acceleration or deceleration and controls motor operation at a constant speed. Multi-function terminals must be configured for this command .	p.83
Linear V/F pattern operation	Configures the inverter to run a motor at a constant torque. To maintain the required torque, the operating frequency may vary during operation.	p.83
Square reduction V/F pattern operation	Configures the inverter to run the motor at a square reduction V/F pattern. Fans and pumps are appropriate loads for square reduction V/F operation.	p.84
User V/F pattern configuration	Enables the user to configure a V/F pattern to match the characteristics of a motor. This configuration is for special-purpose motor applications to achieve optimal performance.	p.85
Manual torque boost	Manual configuration of the inverter to produce a momentary torque boost. This configuration is for loads that require a large amount of starting torque, such as elevators or lifts.	p.86
Automatic torque boost	Automatic configuration of the inverter that provides "auto tuning" that produces a momentary torque boost. This configuration is for loads that require a large amount of starting torque, such as elevators or lifts.	p.87
Output voltage adjustment	Adjusts the output voltage to the motor when the power supply to the inverter differs from the motor's rated input voltage.	p.87

Basic Tasks	Description	Ref.
Accelerating start	Accelerating start is the general way to start motor operation. The typical application configures the motor to accelerate to a target frequency in response to a run command, however there may be other start or acceleration conditions defined.	p.88
Start after DC braking	Configures the inverter to perform DC braking before the motor starts rotating again. This configuration is used when the motor will be rotating before the voltage is supplied from the inverter.	p.88
Deceleration stop	Deceleration stop is the typical method used to stop a motor. The motor decelerates to 0 Hz and stops on a stop command, however there may be other stop or deceleration conditions defined.	p.89
Stopping by DC braking	Configures the inverter to apply DC braking during motor deceleration. The frequency at which DC braking occurs must be defined and during deceleration, when the motor reaches the defined frequency, DC braking is applied.	p.89
Free-run stop	Configures the inverter to stop output to the motor using a stop command. The motor will free-run until it slows down and stops.	p.91
Power braking	Configures the inverter to provide optimal, motor deceleration, without tripping over-voltage protection.	p.91
Start/maximum frequency configuration	Configures the frequency reference limits by defining a start frequency and a maximum frequency.	p.92
Upper/lower frequency limit configuration	Configures the frequency reference limits by defining an upper limit and a lower limit.	p.92
Frequency jump	Configures the inverter to avoid running a motor in mechanically resonating frequencies.	p.93
2 nd Operation Configuration	Used to configure the 2 nd operation mode and switch between the operation modes according to your requirements.	p.94
Multi-function input terminal control configuration	Enables the user to improve the responsiveness of the multi-function input terminals.	p.95
P2P communication configuration	Configures the inverter to share input and output devices with other inverters.	p.96
Multi-keypad configuration	Enables the user to monitor multiple inverters with one monitoring device.	p.96
User sequence configuration	Enables the user to implement simple sequences using various function blocks.	p.98

4.1 Setting Frequency Reference

The SX2000 inverter provides several methods to setup and modify a frequency reference for an operation. The keypad, analog inputs [for example voltage (V1, V2) and current (I2) signals], or RS-485 (digital signals from higher-level controllers, such as PC or PLC) can be used.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
DRV	07	Frequency reference source	Ref Freq Src	0	KeyPad-1	0–12	-
				1	KeyPad-2		
				2	V1		
				4	V2		
				5	I2		
				6	Int 485		
				8	Field Bus		
				12	Pulse		

4.1.1 Keypad as the Source (KeyPad-1 setting)

You can modify frequency reference by using the keypad and apply changes by pressing the [ENT] key. To use the keypad as a frequency reference input source, go to 07 (Frequency reference source) code in the DRV group and change the parameter value to 0 (Keypad-1). Input the frequency reference for an operation.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	07	Frequency reference source	Freq Ref Src	0	KeyPad-1	0–12

*You cannot set a frequency reference that exceeds the Max. Frequency, as configured with DRV-20.

4.1.2 Keypad as the Source (KeyPad-2 setting)

You can use the [▲] and [▼] keys to modify a frequency reference. To use this as a second option, set the keypad as the source of the frequency reference, by going to 07 (Frequency reference source) code in the DRV group and change the parameter value to 1 (Keypad-2). This allows frequency reference values to be increased or decreased by pressing the [▲] and [▼] keys.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	07	Frequency reference source	Freq Ref Src	1	KeyPad-2	0–12


*You cannot set a frequency reference that exceeds the Max. Frequency, as configured with DRV-20.

4.1.3 V1 Terminal as the Source

You can set and modify a frequency reference by setting voltage inputs when using the V1 terminal. Use voltage inputs ranging from 0 to 10 V (unipolar) for forward only operation. Use voltage inputs ranging from -10 to +10 V (bipolar) for both directions, where negative voltage inputs are used reverse operations.

4.1.3.1 Setting a Frequency Reference for 0–10 V Input

Set code 06 (V1 Polarity) to 0 (unipolar) in the Input Terminal group (IN). Use a voltage output from an external source or use the voltage output from the VR terminal to provide inputs to V1. Refer to the diagrams below for the wiring required for each application.



[External source application] [Internal source (VR) application]


Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	07	Frequency reference source	Freq Ref Src	2 V1	0–12	-
In	01	Frequency at maximum analog input	Freq at 100%	Maximum frequency	0.00–Max. Frequency	Hz
	05	V1 input monitor	V1 Monitor [V]	0.00	0.00–12.00	V
	06	V1 polarity options	V1 Polarity	0 Unipolar	0–1	-
	07	V1 input filter time constant	V1 Filter	10	0–10000	ms
	08	V1 minimum input voltage	V1 volt x1	0.00	0.00–10.00	V
	09	V1 output at minimum voltage (%)	V1 Perc y1	0.00	0.00–100.00	%
	10	V1 maximum input voltage	V1 Volt x2	10.00	0.00–12.00	V
	11	V1 output at maximum voltage (%)	V1 Perc y2	100.00	0–100	%
	16	Rotation direction options	V1 Inverting	0 No	0–1	-
17	V1 Quantizing level	V1 Quantizing	0.04	0.00*, 0.04–10.00	%	

* Quantizing is disabled if '0' is selected.

0–10 V Input Voltage Setting Details

Code	Description
IN-01 Freq at 100%	<p>Configures the frequency reference at the maximum input voltage when a potentiometer is connected to the control terminal block. A frequency set with code IN-01 becomes the maximum frequency only if the value set in code IN-11 (or IN-15) is 100%.</p> <ul style="list-style-type: none"> Set code IN-01 to 40.00 and use default values for codes IN-02–IN-16. Motor will run at 40.00 Hz when a 10 V input is provided at V1. Set code IN-11 to 50.00 and use default values for codes IN-01–IN-16. Motor will run at 30.00 Hz (50% of the default maximum frequency–60 Hz) when a 10 V input is provided at V1.
IN-05 V1 Monitor[V]	<p>Configures the inverter to monitor the input voltage at V1.</p> <p>V1 Filter may be used when there are large variations between reference frequencies. Variations can be mitigated by increasing the time constant, but this will require an increased response time. The value t (time) indicates the time required for the frequency to reach 63% of the reference, when external input voltages are provided in multiple steps.</p>
IN-07 V1 Filter	<p>V1 input from external source</p>

These parameters are used to configure the gradient level and offset values of the Output Frequency, based on the Input Voltage.

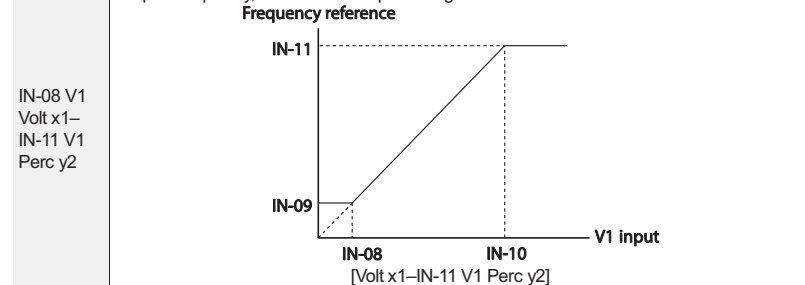

IN-08 V1 Volt x1–IN-11 V1 Perc y2

Code	Description
IN-16 V1 Inverting	Inverts the direction of rotation. Set this code to 1 (Yes) if you need the motor to run in the opposite direction from the current rotation.


Quantizing may be used when the noise level is high in the analog input (V1 terminal) signal. Quantizing is useful when you are operating a noise-sensitive system, because it suppresses any signal noise. However, quantizing will diminish system sensitivity (resultant power of the output frequency will decrease based on the analog input). You can also turn on the low-pass filter using code IN-07 to reduce the noise, but increasing the value will reduce responsiveness and may cause pulsations (ripples) in the output frequency.

Parameter values for quantizing refer to a percentage based on the maximum input. Therefore, if the value is set to 1% of the analog maximum input (60 Hz), the output frequency will increase or decrease by 0.6 Hz per 0.1V difference.

When the analog input is increased, an increase to the input equal to 75% of the set value will change the output frequency, and then the frequency will increase according to the set value. Likewise, when the analog input decreases, a decrease in the input equal to 75% of the set value will make an initial change to the output frequency.

As a result, the output frequency will be different at acceleration and deceleration, mitigating the effect of analog input changes over the output frequency.


IN-17 V1 Quantizing

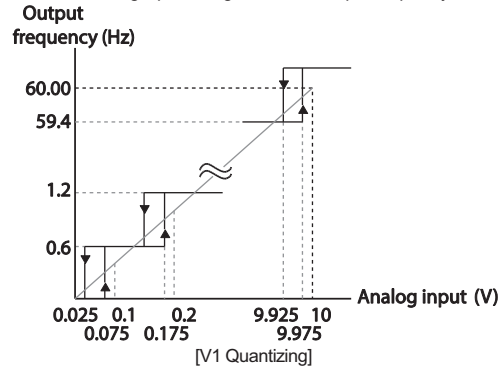


Basic Features

4.1.3.2 Setting a Frequency Reference for -10~10 V Input

Set the 07 (Frequency reference source) code in the DRV group to 2 (V1), and then set code 06 (V1 Polarity) to 1 (bipolar) in the Input Terminal group (IN). Use the output voltage from an external source to provide input to V1.



[V1 terminal wiring]

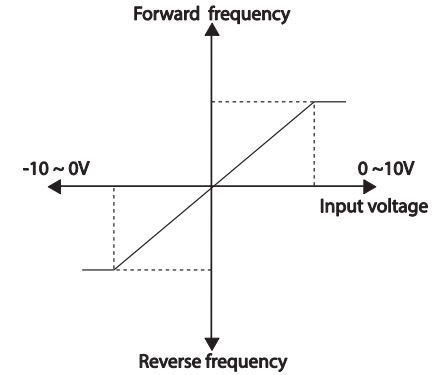

[Bipolar input voltage and output frequency]

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	07	Frequency reference source	Freq Ref Src	2 V1	0-12	-
In	01	Frequency at maximum analog input	Freq at 100%	60.00	0- Max Frequency	Hz
	05	V1 input monitor	V1 Monitor	0.00	0.00-12.00 V	V
	06	V1 polarity options	V1 Polarity	1 Bipolar	0-1	-
	12	V1 minimum input voltage	V1- volt x1	0.00	10.00-0.00 V	V
	13	V1 output at minimum voltage (%)	V1- Perc y1	0.00	-100.00-0.00%	%
	14	V1 maximum input voltage	V1- Volt x2	-10.00	-12.00-0.00 V	V
15	V1 output at maximum voltage (%)	V1- Perc y2	-100.00	-100.00-0.00%	%	

Rotational Directions for Different Voltage Inputs

Command / Voltage	Input voltage	
Input	0-10 V	-10-0 V
FWD	Forward	Reverse
REV	Reverse	Forward

-10-10 V Voltage Input Setting Details

Code	Description
IN-12 V1- volt x1- IN-15 V1- Perc y2	<p>Sets the gradient level and off-set value of the output frequency in relation to the input voltage. These codes are displayed only when IN-06 is set to 1 (bipolar). As an example, if the minimum input voltage (at V1) is set to -2 (V) with 10% output ratio, and the maximum voltage is set to -8 (V) with 80% output ratio respectively, the output frequency will vary within the range of 6 - 48 Hz.</p> <p style="text-align: center;">[IN-12 V1-volt X1-IN-15 V1 Perc y]</p> <p>For details about the 0 to +10 V analog inputs, refer to the code descriptions IN-08 V1 volt x1-IN-11 V1 Perc y2 on page 60.</p>

Basic Features

4.1.3.3 Setting a Reference Frequency using Input Current (I2)

You can set and modify a frequency reference using input current at the I2 terminal after selecting current input at SW 2. Set the 07 (Frequency reference source) code in the DRV group to 5 (I2) and apply 4-20 mA input current to I2.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	07	Frequency reference source	Freq Ref Src	5 I2	0-12	-
IN	01	Frequency at maximum analog input	Freq at 100%	60.00	0- Maximum Frequency	Hz

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
IN	50	I2 input monitor	I2 Monitor	0.00	0.00-24.00	mA
	52	I2 input filter time constant	I2 Filter	10	0-10000	ms
	53	I2 minimum input current	I2 Curr x1	4.00	0.00-20.00	mA
	54	I2 output at minimum current (%)	I2 Perc y1	0.00	0-100	%
	55	I2 maximum input current	I2 Curr x2	20.00	0.00-24.00	mA
	56	I2 output at maximum current (%)	I2 Perc y2	100.00	0.00-100.00	%
	61	I2 rotation direction options	I2 Inverting	0 No	0-1	-
	62	I2 Quantizing level	I2 Quantizing	0.04	0*, 0.04-10.00	%

* Quantizing is disabled if '0' is selected.

Input Current (I2) Setting Details

Code	Description
IN-01 Freq at 100%	<p>Configures the frequency reference for operation at the maximum current (when IN-56 is set to 100%).</p> <ul style="list-style-type: none"> If IN-01 is set to 40.00 Hz, and default settings are used for IN-53-56, 20 mA input current (max) to I2 will produce a frequency reference of 40.00 Hz. If IN-56 is set to 50.00 (%), and default settings are used for IN-01 (60 Hz) and IN-53-55, 20 mA input current (max) to I2 will produce a frequency reference of 30.00 Hz (50% of 60 Hz).
IN-50 I2 Monitor	Used to monitor input current at I2.
IN-52 I2 Filter	Configures the time for the operation frequency to reach 63% of target frequency based on the input current at I2.
IN-53 I2 Curr x1- IN-56 I2 Perc y2	<p>Configures the gradient level and off-set value of the output frequency.</p> <p style="text-align: center;">[Gradient and off-set configuration based on output frequency]</p>

4.1.4 Setting a Frequency Reference with Input Voltage (Terminal I2)

Set and modify a frequency reference using input voltage at I2 (V2) terminal by setting SW2 to V2. Set the Frq (Frequency reference source) code in the DRV group to 4 (V2) and apply 0–12V input voltage to I2 (=V2, Analog current/voltage input terminal). Codes IN-35–47 will not be displayed when I2 is set to receive current input (07 code parameter is set to 5).

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
DRV	07	Frequency reference source	Freq Ref Src	4	V2	0–12	-
IN	35	V2 input display	V2 Monitor	0.00		0.00–12.00	V
	37	V2 input filter time constant	V2 Filter	10		0–10000	ms
	38	Minimum V2 input voltage	V2 Volt x1	0.00		0.00–10.00	V
	39	Output% at minimum V2 voltage	V2 Perc y1	0.00		0.00–100.00	%
	40	Maximum V2 input voltage	V2 Volt x2	10.00		0.00–10.00	V
	41	Output% at maximum V2 voltage	V2 Perc y2	100.00		0.00–100.00	%
	46	Invert V2 rotational direction	V2 Inverting	0	No	0–1	-
47	V2 quantizing level	V2 Quantizing	0.04		0.00*, 0.04–10.00	%	

* Quantizing is disabled if '0' is selected.

4.1.5 Setting a Frequency with TI Pulse Input

Set a frequency reference by setting the 07 (Frequency reference source) code in the DRV group to 12 (Pulse) and providing 0–32.00 kHz pulse frequency to TI.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
DRV	07	Frequency reference source	Freq Ref Src	12	Pulse	0–12	-
IN	01	Frequency at maximum analog input	Freq at 100%	60.00		0.00–Maximum frequency	Hz
	91	Pulse input display	Pulse Monitor	0.00		0.00–50.00	kHz
	92	TI input filter time constant	TI Filter	10		0–9999	ms
	93	TI input minimum pulse	TI Pls x1	0.00		0.00–32.00	kHz
	94	Output% at TI minimum pulse	TI Perc y1	0.00		0.00–100.00	%
	95	TI Input maximum	TI Pls x2	32.00		0.00–32.00	kHz

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
		pulse					
	96	Output% at TI maximum pulse	TI Perc y2	100.00	0.00–100.00	%	
	97	Invert TI direction of rotation	TI Inverting	0	No	0–1	-
	98	TI quantizing level	TI Quantizing	0.04		0.00*, 0.04–10.00	%

*Quantizing is disabled if '0' is selected.

TI Pulse Input Setting Details

Code	Description
IN-01 Freq at 100%	Configures the frequency reference at the maximum pulse input. The frequency reference is based on 100% of the value set with IN-96. <ul style="list-style-type: none"> If IN-01 is set to 40.00 and codes IN-93–96 are set at default, 32 kHz input to TI yields a frequency reference of 40.00 Hz. If IN-96 is set to 50.00 and codes IN-01, IN-93–95 are set at default, 32 kHz input to the TI terminal yields a frequency reference of 30.00 Hz.
IN-91 Pulse Monitor	Displays the pulse frequency supplied at TI.
IN-92 TI Filter	Sets the time for the pulse input at TI to reach 63% of its nominal frequency (when the pulse frequency is supplied in multiple steps).
IN-93 TI Pls x1–IN-96 TI Perc y2	Configures the gradient level and offset values for the output frequency. <div style="text-align: center;"> <p>Frequency reference</p> </div>
IN-97 TI Inverting–IN-98 TI Quantizing	Identical to IN-16–17 (refer to IN-16 V1 Inverting/IN-17. V1 Quantizing on page 60).

4.1.6 Setting a Frequency Reference via RS-485 Communication

Control the inverter with upper-level controllers, such as PCs or PLCs, via RS-485 communication. Set 07 code in the DRV group to 6 (Int 485) and use the RS-485 signal input terminals (S+/S-/SG) for communication. Refer to 7 RS-485 Communication Features on page 206.


Group	Code	Name	LCD Display	Parameter Setting		Setting Range	Unit
DRV	07	Frequency reference source	Freq Ref Src	6	Int 485	0-12	-
COM	01	Integrated RS-485 communication inverter ID	Int485 St ID	-	1	1-250	-
	02	Integrated communication protocol	Int485 Proto	0	ModBus RTU	0	-
				1	Reserved		
	03	Integrated communication speed	Int485 BaudR	3	9600 bps	0-7	-
	04	Integrated communication frame configuration	Int485 Mode	0	D8/PN/S1	0-3	-
				1	D8/PN/S2		
				2	D8/PE/S1		
				3	D8/PO/S1		

Basic Features

4.2 Frequency Hold by Analog Input

If you set a frequency reference via analog input at the control terminal block, you can hold the operation frequency of the inverter by assigning a multi-function input as the analog frequency hold terminal. The operation frequency will be fixed upon an analog input signal.

Group	Code	Name	LCD Display	Parameter Setting		Setting Range	Unit
DRV	07	Frequency reference source	Freq Ref Src	0	Keypad-1	0-12	-
				1	Keypad-2		
				2	V1		
				4	V2		
				5	I2		
				6	Int 485		
				8	Field Bus		
				12	Pulse		
IN	65-71	Px terminal configuration	Px Define(Px: P1-P7)	21	Analog Hold	0-54	-

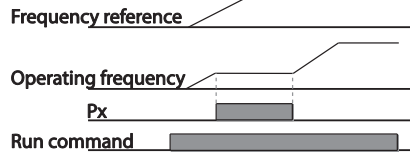

4.3 Changing the Displayed Units (Hz↔Rpm)

You can change the units used to display the operational speed of the inverter by setting Dr. 21 (Speed unit selection) to 0 (Hz) or 1 (Rpm). This function is available only with the LCD keypad.

Group	Code	Name	LCD Display	Parameter Setting		Setting Range	Unit
DRV	21	Speed unit selection	Hz/Rpm Sel	0	Hz Display	0-1	-
				1	Rpm Display		

4.4 Setting Multi-step Frequency


Multi-step operations can be carried out by assigning different speeds (or frequencies) to the Px terminals. Step 0 uses the frequency reference source set with the 07 code in the DRV group. Px terminal parameter values 7 (Speed-L), 8 (Speed-M) and 9 (Speed-H) are recognized as binary commands and work in combination with Fx or Rx run commands. Select the frequency set in the BAS-50-BAS-60 (Multi-step frequency 1-7) code to operate the system.

Group	Code	Name	LCD Display	Parameter Setting		Setting Range	Unit
BAS	50-56	Multi-step frequency	Step Freq - 1-7	-		0-Maximum frequency	Hz
IN	65-71	Px terminal configuration	Px Define (Px: P1-P7)	7	Speed-L	0-54	-
				8	Speed-M		-
				9	Speed-H		-
	89	Multi-step command delay time	InCheck Time	1		1-5000	ms

Multi-step Frequency Setting Details

Code	Description
BAS-50-56 Step Freq - 1-7	Configure multi-step frequency 1-7.

Choose the terminals to setup as multi-step inputs, and then set the relevant codes (IN-65-71) to 7(Speed-L), 8(Speed-M), or 9(Speed-H).
 Provided that terminals P3, P4 and P5 have been set to Speed-L, Speed-M and Speed-H respectively, the following multi-step operation will be available.

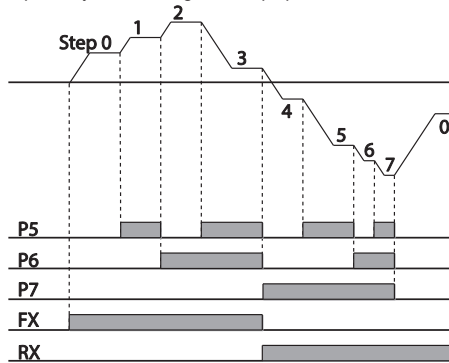

[An example of a multi-step operation]

Speed	Fx/Rx	P7	P6	P5
0	✓	-	-	-
1	✓	-	-	✓
2	✓	-	✓	-
3	✓	-	✓	✓
4	✓	✓	-	-
5	✓	✓	-	✓
6	✓	✓	✓	-
7	✓	✓	✓	✓

IN-89 InCheck Time

Set a time interval for the inverter to check for additional terminal block inputs after receiving an input signal.
 After adjusting IN-89 to 100ms and an input signal is received at P6, the inverter will search for inputs at other terminals for 100ms, before proceeding to accelerate or decelerate based on P6's configuration.

Basic Features

4.5 Command Source Configuration

Various devices can be selected as command source for SX2000 inverter. Input devices available to select include keypad, multi-function input terminal, RS-485 communication and field bus adapter.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
DRV	06	Command Source	Cmd Source*	0	0-4	-	
				1			Keypad
				2			Fx/Rx-1
				3			Int 485
4	Field Bus						

4.5.1 The Keypad as a Command Input Device

The keypad can be selected as a command input device to send command signals to the inverter. This is configured by setting the drv (command source) code to 0 (Keypad). Press the [RUN] key on the keypad to start an operation, and the [STOP/RESET] key to end it.

group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	06	Command source	Cmd Source*	0 Keypad	0-4	-


4.5.2 Terminal Block as a Command Input Device (Fwd/Rev Run Commands)

Multi-function terminals can be selected as a command input device. This is configured by setting the 06 (command source) code in the DRV group to 1(Fx/Rx). Select 2 terminals for the forward and reverse operations, and then set the relevant codes (2 of the 7 multi-function terminal codes, IN-65-71 for P1-P7) to 1(Fx) and 2(Rx) respectively. This application enables both terminals to be turned on or off at the same time, constituting a stop command that will cause the inverter to stop operation.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	06	Command source	Cmd Source*	1 Fx/Rx-1	0-4	-
IN	65-71	Px terminal configuration	Px Define(Px: P1- P7)	1 Fx	0-54	-
				2 Rx		

Fwd/Rev Command by Multi-function Terminal – Setting Details

Code	Description
DRV-06 Cmd Source	Set to 1(Fx/Rx-1).
IN-65-71 Px Define	Assign a terminal for forward (Fx) operation.
	Assign a terminal for reverse (Rx) operation.

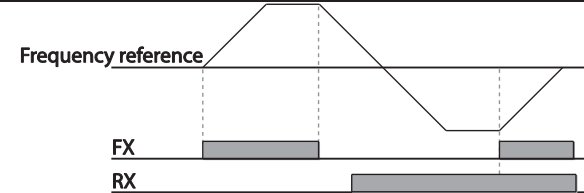

4.5.3 Terminal Block as a Command Input Device (Run and Rotation Direction Commands)

Multi-function terminals can be selected as a command input device. This is configured by setting the 06 (command source) code in the DRV group to 2 (Fx/Rx-2). Select 2 terminals for run and rotation direction commands, and then select the relevant codes (2 of the 7 multi-function terminal codes, IN-65~71 for P1~P7) to 1(Fx) and 2(Rx) respectively. This application uses an Fx input as a run command, and an Rx input to change a motor's rotation direction (On-Rx, Off-Fx).


Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	06	Command source	Cmd Source*	2	Fx/Rx-2	0-4
IN	65-71	Px terminal configuration	Px Define (Px: P1 - P7)	1	Fx	0-54
				2	Rx	

Run Command and Fwd/ Rev Change Command Using Multi-function Terminal

Setting Details

Code	Description
DRV-06 Cmd Source	Set to 2 (Fx/Rx-2).
IN-65-71 Px Define	Assign a terminal for run command (Fx). Assign a terminal for changing rotation direction (Rx).

Frequency

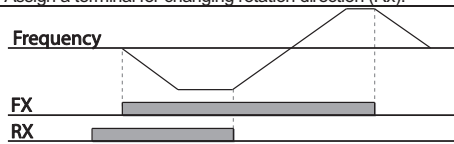

4.5.4 RS-485 Communication as a Command Input Device

Internal RS-485 communication can be selected as a command input device by setting the 06 (command source) code in the DRV group to 3(Int485). This configuration uses upper level controllers such as PCs or PLCs to control the inverter by transmitting and receiving signals via the S+, S-, and Sg terminals at the terminal block. For more details, refer to [7 RS-485 Communication Features](#) on page 206.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	06	Command source	Cmd Source*	3 Int 485	0-4	-
COM	01	Integrated communication inverter ID	Int485 St ID	1	1-250	-
	02	Integrated communication protocol	Int485 Proto	0 ModBus RTU	0	-
	03	Integrated communication speed	Int485 BaudR	3 9600 bps	0-7	-
	04	Integrated communication frame Setup	Int485 Mode	0 D8 / PN / S1	0-3	-

4.6 Local/Remote Mode Switching

Local/remote switching is useful for checking the operation of an inverter or to perform an inspection while retaining all parameter values. Also, in an emergency, it can also be used to override control and operate the system manually using the keypad.

The [ESC] key is a programmable key that can be configured to carry out multiple functions.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	90	[ESC] key functions	-	2 Local/Remote	0-2	-
DRV	06	Command source	Cmd Source*	1 Fx/Rx-1	0-4	-

Local/Remote Mode Switching Setting Details

Code	Description
DRV-90 [ESC] key functions	Set DRV-90 to 2(Local/Remote) to perform local/remote switching using the [ESC] key. Once the value is set, the inverter will automatically begin operating in remote mode. Changing from local to remote will not alter any previously configured parameter values and the operation of the inverter will not change. Press the [ESC] key to switch the operation mode back to "local." The SET light will flash, and the inverter will operate using the [RUN] key on the keypad. Press the [ESC] key again to switch the operation mode back to "remote." The SET light will turn off and the inverter will operate according to the previous drv code configuration.

Note

Local/Remote Operation

- Full control of the inverter is available with the keypad during local operation (local operation).
- During local operation, jog commands will only work if one of the P1~P7 multi-function terminals (codes IN-65~71) is set to 13(RUN Enable) and the relevant terminal is turned on.
- During remote operation (remote operation), the inverter will operate according to the previously set frequency reference source and the command received from the input device.
- If ADV-10 (power-on run) is set to 0(No), the inverter will NOT operate on power-on even when the following terminals are turned on:

- Fwd/Rev run (Fx/Rx) terminal
- Fwd/Rev jog terminal (Fwd jog/Rev Jog)
- Pre-Excitation terminal

To operate the inverter manually with the keypad, switch to local mode. Use caution when switching back to remote operation mode as the inverter will stop operating. If ADV-10 (power-on run) is set to 0(No), a command through the input terminals will work ONLY AFTER all the terminals listed above have been turned off and then turned on again.

- If the inverter has been reset to clear a fault trip during an operation, the inverter will switch to local operation mode at power-on, and full control of the inverter will be with the keypad. The inverter will stop operating when operation mode is switched from "local" to "remote". In this case, a run command through an input terminal will work ONLY AFTER all the input terminals have been turned off.

Inverter Operation During Local/Remote Switching

Switching operation mode from "remote" to "local" while the inverter is running will cause the inverter to stop operating. Switching operation mode from "local" to "remote" however, will cause the inverter to operate based on the command source:

- Analog commands via terminal input: the inverter will continue to run without interruption based on the command at the terminal block. If a reverse operation (Rx) signal is ON at the terminal block at startup, the inverter will operate in the reverse direction even if it was running in the forward direction in local operation mode before the reset.
- Digital source commands: all command sources except terminal block command sources (which are analog sources) are digital command sources that include the keypad, LCD keypad, and communication sources. The inverter stops operation when switching to remote operation mode, and then starts operation when the next command is given.

ⓘ Caution

Use local/remote operation mode switching only when it is necessary. Improper mode switching may result in interruption of the inverter's operation.

4.7 Forward or Reverse Run Prevention

The rotation direction of motors can be configured to prevent motors to only run in one direction. Pressing the [REV] key on the LCD keypad when direction prevention is configured, will cause the motor to decelerate to 0 Hz and stop. The inverter will remain on.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
ADV	09	Run prevention options	Run Prevent	0	None	0-2	-
				1	Forward Prev		
				2	Reverse Prev		


Forward/Reverse Run Prevention Setting Details

Code	Description		
ADV-09 Run Prevent	Choose a direction to prevent.		
	Setting	Description	
	0	None	Do not set run prevention.
	1	Forward Prev	Set forward run prevention.
	2	Reverse Prev	Set reverse run prevention.

4.8 Power-on Run

A power-on command can be setup to start an inverter operation after powering up, based on terminal block operation commands (if they have been configured). To enable power-on run set the drv (command source) code to 1(Fx/Rx-1) or 2 (Fx/Rx-2) in the DRV group.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
DRV	06	Command source	Cmd Source*	1, 2	Fx/Rx-1 or Fx/Rx-2	0-4	-
ADV	10	Power-on run	Power-on Run	1	Yes	0-1	-

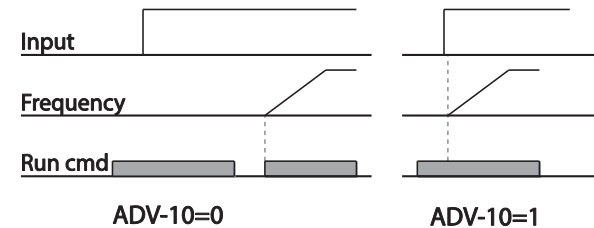

Note

- A fault trip may be triggered if the inverter starts operation while a motor's load (fan-type load) is in free-run state. To prevent this from happening, set bit4 to 1 in CON- 71 (speed search options) of the Control group. The inverter will perform a speed search at the beginning of the operation.
- If the speed search is not enabled, the inverter will begin its operation in a normal V/F pattern and accelerate the motor. If the inverter has been turned on without power-on run enabled, the terminal block command must first be turned off, and then turned on again to begin the inverter's operation.

ⓘ Caution


Use caution when operating the inverter with Power-on Run enabled as the motor will begin rotating when the inverter starts up.

4.9 Reset and Restart

Reset and restart operations can be setup for inverter operation following a fault trip, based on the terminal block operation command (if it is configured). When a fault trip occurs, the inverter cuts off the output and the motor will free-run. Another fault trip may be triggered if the inverter begins its operation while motor load is in a free-run state.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	06	Command source	Cmd Source*	1 Fx/Rx-1 or 2 Fx/Rx-2	0-4	-
	08	Reset restart setup	RST Restart	1 Yes	0-1	
PRT	09	No. of auto restart	Retry Number	0	0-10	
	10	Auto restart delay time	Retry Delay	1.0	0-60	sec

Basic Features

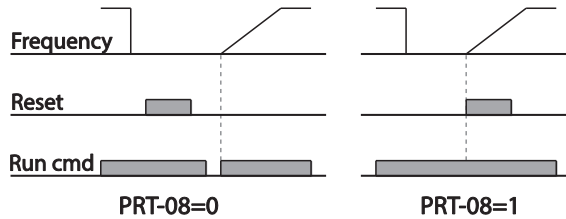

Note

- To prevent a repeat fault trip from occurring, set CON-71 (speed search options) bit 2 equal to 1. The inverter will perform a speed search at the beginning of the operation.
- If the speed search is not enabled, the inverter will start its operation in a normal V/F pattern and accelerate the motor. If the inverter has been turned on without 'reset and restart' enabled, the terminal block command must be first turned off, and then turned on again to begin the inverter's operation.

Caution

Use caution when operating the inverter with Power-on Run enabled as the motor will begin rotating when the inverter starts up.

4.10 Setting Acceleration and Deceleration Times

4.10.1 Acc/Dec Time Based on Maximum Frequency

Acc/Dec time values can be set based on maximum frequency, not on inverter operation frequency. To set Acc/Dec time values based on maximum frequency, set BAS- 08 (Acc/Dec reference) in the Basic group to 0 (Max Freq).

Acceleration time set at the ACC (Acceleration time) code in the DRV group (DRV-03 in an LCD keypad) refers to the time required for the inverter to reach the maximum frequency from a stopped (0 Hz) state. Likewise, the value set at the Dec (deceleration time) code in the DRV group (DRV-04 in an LCD keypad) refers to the time required to return to a stopped state (0 Hz) from the maximum frequency.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	03	Acceleration time	Acc Time	20.0	0.0-600.0	sec
	04	Deceleration time	Dec Time	30.0	0.0-600.0	sec
	20	Maximum frequency	Max Freq	60.00	40.00-400.00	Hz
BAS	08	Acc/Dec reference frequency	Ramp T Mode	0 Max Freq	0-1	-
	09	Time scale	Time scale	1 0.1sec	0-2	-

Acc/Dec Time Based on Maximum Frequency – Setting Details

Code	Description									
	Set the parameter value to 0 (Max Freq) to setup Acc/Dec time based on maximum frequency.									
	<table border="1"> <thead> <tr> <th colspan="2">Configuration</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Max Freq</td> <td>Set the Acc/Dec time based on maximum frequency.</td> </tr> <tr> <td>1</td> <td>Delta Freq</td> <td>Set the Acc/Dec time based on operating frequency.</td> </tr> </tbody> </table>	Configuration		Description	0	Max Freq	Set the Acc/Dec time based on maximum frequency.	1	Delta Freq	Set the Acc/Dec time based on operating frequency.
Configuration		Description								
0	Max Freq	Set the Acc/Dec time based on maximum frequency.								
1	Delta Freq	Set the Acc/Dec time based on operating frequency.								
BAS-08 Ramp T Mode	<p>If, for example, maximum frequency is 60.00 Hz, the Acc/Dec times are set to 5 seconds, and the frequency reference for operation is set at 30 Hz (half of 60 Hz), the time required to reach 30 Hz therefore is 2.5 seconds (half of 5 seconds).</p>									

Code	Description		
BAS-09 Time scale	Use the time scale for all time-related values. It is particularly useful when a more accurate Acc/Dec times are required because of load characteristics, or when the maximum time range needs to be extended.		
	Configuration		Description
	0	0.01sec	Sets 0.01 second as the minimum unit.
	1	0.1sec	Sets 0.1 second as the minimum unit.
2	1sec	Sets 1 second as the minimum unit.	

ⓘ Caution

Note that the range of maximum time values may change automatically when the units are changed. If for example, the acceleration time is set at 6000 seconds, a time scale change from 1 second to 0.01 second will result in a modified acceleration time of 60.00 seconds.

Basic Features

4.10.2 Acc/Dec Time Based on Operation Frequency


Acc/Dec times can be set based on the time required to reach the next step frequency from the existing operation frequency. To set the Acc/Dec time values based on the existing operation frequency, set BAS- 08 (acc/dec reference) in the Basic group to 1 (Delta Freq).

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	03	Acceleration time	Acc Time	20.0	0.0–600.0	sec
	04	Deceleration time	Dec Time	30.0	0.0–600.0	sec
BAS	08	Acc/Dec reference	Ramp T Mode	1 Delta Freq	0–1	-

Acc/Dec Time Based on Operation Frequency – Setting Details

Code	Description	
BAS-08 Ramp T Mode	Set the parameter value to 1 (Delta Freq) to set Acc/Dec times based on Maximum frequency.	
	Configuration	Description
	0 Max Freq	Set the Acc/Dec time based on Maximum frequency.
1 Delta Freq	Set the Acc/Dec time based on Operation frequency.	

If Acc/Dec times are set to 5 seconds, and multiple frequency references are used in the operation in 2 steps, at 10 Hz and 30 Hz, each acceleration stage will take 5 seconds (refer to the graph below).

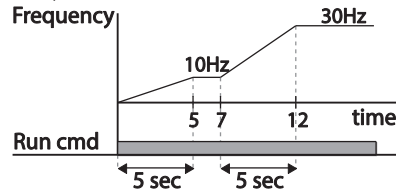

4.10.3 Multi-step Acc/Dec Time Configuration

Acc/Dec times can be configured via a multi-function terminal by setting the DRV-03 (Acceleration time) and DRV-04 (Deceleration time) codes in the DRV group.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	03	Acceleration time	Acc Time	20.0	0.0–600.0	sec
	04	Deceleration time	Dec Time	30.0	0.0–600.0	sec
BAS	70–82	Multi-step acceleration time1–7	Acc Time 1–7	x.xx	0.0–600.0	sec
	71–83	Multi-step deceleration time1–7	Dec Time 1–7	x.xx	0.0–600.0	sec
IN	65–71	Px terminal configuration	Px Define (Px: P1–P7)	11 XCEL-L	0–54	-
				12 XCEL-M		
				49 XCEL-H		
89	Multi-step command delay time	In Check Time	1	1–5000	ms	

Acc/Dec Time Setup via Multi-function Terminals – Setting Details

Code	Description	
BAS- 70–82 Acc Time 1–7	Set multi-step acceleration time1–7.	
BAS-71–83 Dec Time 1–7	Set multi-step deceleration time1–7.	
IN-65–71 Px Define (P1–P7)	Choose and configure the terminals to use for multi-step Acc/Dec time inputs.	
	Configuration	Description
	11 XCEL-L	Acc/Dec command-L
	12 XCEL-M	Acc/Dec command-M
	49 XCEL-H	Acc/Dec command-H
Acc/Dec commands are recognized as binary code inputs and will control the acceleration and deceleration based on parameter values set with BAS-70–82 and BAS-71–83. If, for example, the P6 and P7 terminals are set as XCEL-L and XCEL respectively, the following operation will be available.		

Code	Description															
	<table border="1"> <thead> <tr> <th>Acc/Dec time</th> <th>P7</th> <th>P6</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>-</td> <td>-</td> </tr> <tr> <td>1</td> <td>-</td> <td>✓</td> </tr> <tr> <td>2</td> <td>✓</td> <td>-</td> </tr> <tr> <td>3</td> <td>✓</td> <td>✓</td> </tr> </tbody> </table>	Acc/Dec time	P7	P6	0	-	-	1	-	✓	2	✓	-	3	✓	✓
Acc/Dec time	P7	P6														
0	-	-														
1	-	✓														
2	✓	-														
3	✓	✓														
IN-89 In Check Time	Set the time for the inverter to check for other terminal block inputs. If IN-89 is set to 100ms and a signal is supplied to the P6 terminal, the inverter searches for other inputs over the next 100ms. When the time expires, the Acc/Dec time will be set based on the input received at P6.															

Basic Features


4.10.4 Configuring Acc/Dec Time Switch Frequency

You can switch between two different sets of Acc/Dec times (Acc/Dec gradients) by configuring the switch frequency without configuring the multi-function terminals.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	03	Acceleration time	Acc Time	10.0	0.0–600.0	sec
	04	Deceleration time	Dec Time	10.0	0.0–600.0	sec
BAS	70	Multi-step acceleration time1	Acc Time-1	20.0	0.0–600.0	sec
	71	Multi-step deceleration time1	Dec Time-1	20.0	0.0–600.0	sec
ADV	60	Acc/Dec time switch frequency	Xcel Change Frq	30.00	0–Maximum frequency	Hz

Acc/Dec Time Switch Frequency Setting Details

Code	Description
ADV-60 Xcel Change Fr	After the Acc/Dec switch frequency has been set, Acc/Dec gradients configured at BAS-70 and 71 will be used when the inverter's operation frequency is at or below the switch frequency. If the operation frequency exceeds the switch frequency, the configured gradient level, configured for the ACC and Dec codes, will be used. If you configure the P1–P7 multi-function input terminals for multi-step Acc/Dec gradients (XCEL-L, XCEL-M, XCEL-H), the inverter will operate based on the Acc/Dec inputs at the terminals instead of the Acc/Dec switch frequency configurations.

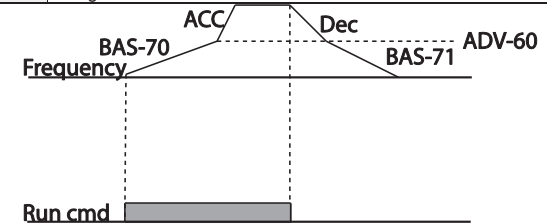



4.11 Acc/Dec Pattern Configuration

Acc/Dec gradient level patterns can be configured to enhance and smooth the inverter's acceleration and deceleration curves. Linear pattern features a linear increase or decrease to the output frequency, at a fixed rate. For an S-curve pattern a smoother and more gradual increase or decrease of output frequency, ideal for lift-type loads or elevator doors, etc. S-curve gradient level can be adjusted using codes ADV- 03–06 in the Advanced group.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
BAS	08	Acc/Dec reference	Ramp T mode	0 Max Freq	0–1	-
ADV	01	Acceleration pattern	Acc Pattern	0 Linear	0–1	-
	02	Deceleration pattern	Dec Pattern	1 S-curve		-
	03	S-curve Acc start gradient	Acc S Start	40	1–100	%
	04	S-curve Acc end gradient	Acc S End	40	1–100	%
	05	S-curve Dec start gradient	Dec S Start	40	1–100	%
	06	S-curve Dec end gradient	Dec S End	40	1–100	%

Acc/Dec Pattern Setting Details

Code	Description
ADV-03 Acc S Start	Sets the gradient level as acceleration starts when using an S-curve, Acc/Dec pattern. ADV- 03 defines S-curve gradient level as a percentage, up to half of total acceleration. If the frequency reference and maximum frequency are set at 60 Hz and ADV-03 is set to 50%, ADV- 03 configures acceleration up to 30 Hz (half of 60 Hz).The inverter will operate S-curve acceleration in the 0-15 Hz frequency range (50% of 30 Hz). Linear acceleration will be applied to the remaining acceleration within the 15–30 Hz frequency range.
ADV-04 Acc S End	Sets the gradient level as acceleration ends when using an S-curve Acc/Dec pattern. ADV- 03 defines S-curve gradient level as a percentage, above half of total acceleration. If the frequency reference and the maximum frequency are set at 60 Hz and ADV-04 is set to 50%, setting ADV- 04 configures acceleration to increase from 30 Hz (half of 60 Hz) to 60 Hz (end of acceleration). Linear acceleration will be applied within the 30-45 Hz frequency range. The inverter will perform an S-curve acceleration for the remaining acceleration in the 45–60 Hz frequency range.
ADV-05 Dec S Start – ADV-06 Dec S End	Sets the rate of S-curve deceleration. Configuration for codes ADV-05 and ADV-06 may be performed the same way as configuring codes ADV-03 and ADV-04.

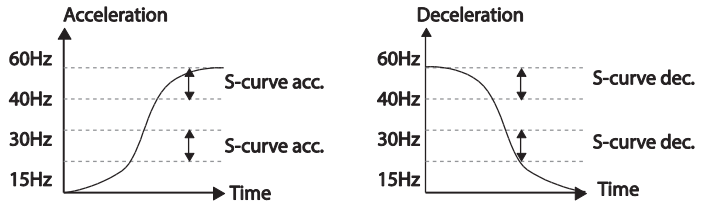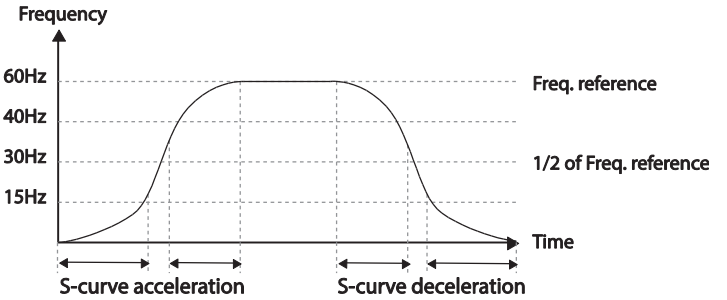

[Acceleration / deceleration S-curve pattern configuration]

Note


The Actual Acc/Dec time during an S-curve application

Actual acceleration time = user-configured acceleration time + user-configured acceleration time x starting gradient level/2 + user-configured acceleration time x ending gradient level/2.

Actual deceleration time = user-configured deceleration time + user-configured deceleration time x starting gradient level/2 + user-configured deceleration time x ending gradient level/2.

⚠ Caution

Note that actual Acc/Dec times become greater than user defined Acc/Dec times when S-curve Acc/Dec patterns are in use.

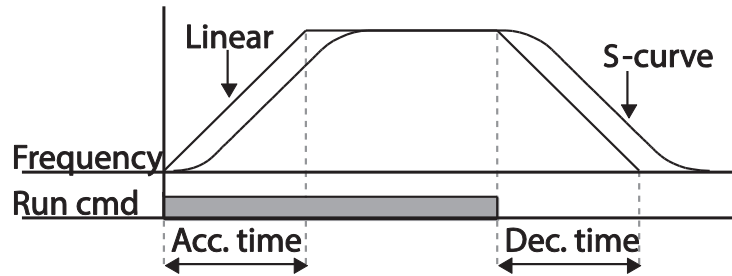


[Acceleration / deceleration pattern configuration]

4.12 Stopping the Acc/Dec Operation

Configure the multi-function input terminals to stop acceleration or deceleration and operate the inverter at a fixed frequency.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
IN	65-71	Px terminal configuration	Px Define(Px: P1-P7)	25 XCEL Stop	0-54	-

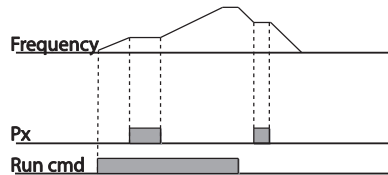

4.13 V/F(Voltage/Frequency) Control

Configure the inverter's output voltages, gradient levels and output patterns to achieve a target output frequency with V/F control. The amount of torque boost used during low frequency operations can also be adjusted.


4.13.1 Linear V/F Pattern Operation

A linear V/F pattern configures the inverter to increase or decrease the output voltage at a fixed rate for different operation frequencies based on V/F characteristics. A linear V/F pattern is particularly useful when a constant torque load is applied.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	09	Control mode	Control Mode	0	V/F	0-4
	18	Base frequency	Base Freq	50.00	30.00-400.00	Hz
	19	Start frequency	Start Freq	0.50	0.01-10.00	Hz
BAS	07	V/F pattern	V/F Pattern	0	Linear	0-3

Linear V/F Pattern Setting Details

Code	Description
DRV-18 Base Freq	Sets the base frequency. A base frequency is the inverter's output frequency when running at its rated voltage. Refer to the motor's rating plate to set this parameter value.
DRV-19 Start Freq	Sets the start frequency. A start frequency is a frequency at which the inverter

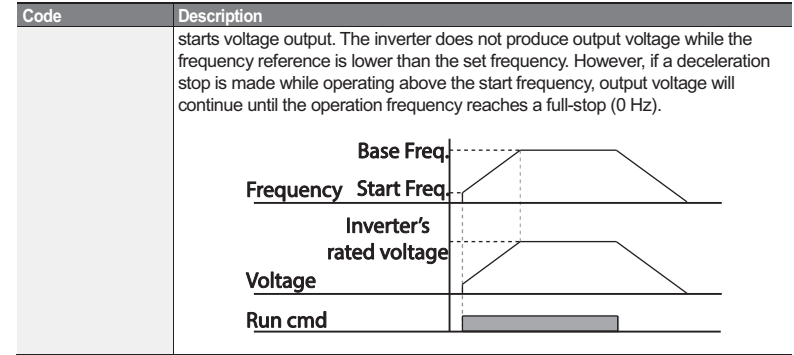


4.13.2 Square Reduction V/F pattern Operation

Square reduction V/F pattern is ideal for loads such as fans and pumps. It provides non-linear acceleration and deceleration patterns to sustain torque throughout the whole frequency range.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
BAS	07	V/F pattern	V/F Pattern	1	Square	0-3
				3	Square2	

Square Reduction V/F pattern Operation - Setting Details

Code	Description	
BAS-07 V/F Pattern	Sets the parameter value to 1(Square) or 3(Square2) according to the load's start characteristics.	
	Setting	Function
	1	Square
3	Square2	The inverter produces output voltage proportional to 2 square of the operation frequency. This setup is ideal for variable torque loads such as fans or pumps.

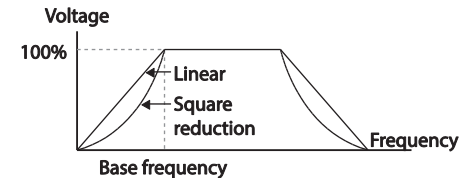

4.13.3 User V/F Pattern Operation

The SX2000 inverter allows the configuration of user-defined V/F patterns to suit the load characteristics of special motors.


Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
BAS	07	V/F pattern	V/F Pattern	2	User V/F	0-3	-
	41	User Frequency1	User Freq 1	12.50		0-Maximum frequency	Hz
	42	User Voltage1	User Volt 1	25		0-100	%
	43	User Frequency2	User Freq 2	25.00		0-Maximum frequency	Hz
	44	User Voltage2	User Volt 2	50		0-100	%
	45	User Frequency3	User Freq 3	37.50		0-Maximum frequency	Hz
	46	User Voltage3	User Volt 3	75		0-100	%
	47	User Frequency4	User Freq 4	50.00		0-Maximum frequency	Hz
	48	User Voltage4	User Volt 4	100		0-100%	%

Basic Features

User V/F pattern Setting Details

Code	Description
BAS-41 User Freq 1- BAS-48 User Volt 4	Set the parameter values to assign arbitrary frequencies (User Freq 1-4) for start and maximum frequencies. Voltages can also be set to correspond with each frequency, and for each user voltage (User Volt 1-4).

The 100% output voltage in the figure below is based on the parameter settings of BAS-15 (motor rated voltage). If BAS-15 is set to 0 it will be based on the input voltage.

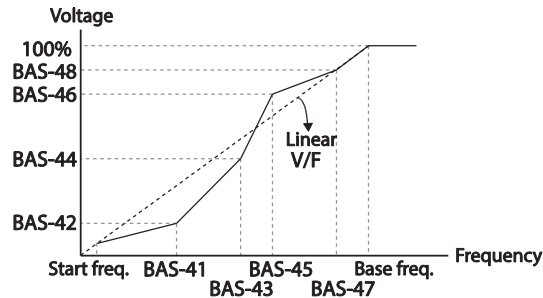

⚠ Caution

- When a normal induction motor is in use, care must be taken not to configure the output pattern away from a linear V/F pattern. Non-linear V/F patterns may cause insufficient motor torque or motor overheating due to over-excitation.
- When a user V/F pattern is in use, forward torque boost (DRV-16) and reverse torque boost (DRV-17) do not operate.

4.14 Torque Boost


4.14.1 Manual Torque Boost

Manual torque boost enables users to adjust output voltage during low speed operation or motor start. Increase low speed torque or improve motor starting properties by manually increasing output voltage. Configure manual torque boost while running loads that require high starting torque, such as lift-type loads.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
DRV	15	Torque boost options	Torque Boost	0	Manual	0-1	-
	16	Forward torque boost	Fwd Boost	2.0		0.0-15.0	%
	17	Reverse torque boost	Rev Boost	2.0		0.0-15.0	%

Manual Torque Boost Setting Details

Code	Description
DRV-16 Fwd Boost	Set torque boost for forward operation.
DRV-17 Rev Boost	Set torque boost for reverse operation.

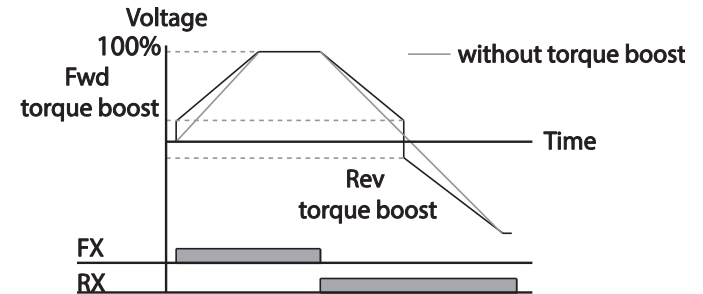

⚠ Caution

Excessive torque boost will result in over-excitation and motor overheating .

4.14.2 Auto Torque Boost

Auto torque boost enables the inverter to automatically calculate the amount of output voltage required for torque boost based on the entered motor parameters. Because auto torque boost requires motor-related parameters such as stator resistance, inductance, and no-load current, auto tuning (BAS-20) has to be performed before auto torque boost can be configured [Refer to [5.9 Auto Tuning](#) on page 130]. Similarly to manual torque boost, configure auto torque boost while running a load that requires high starting torque, such as lift-type loads.


Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
DRV	15	torque boost mode	Torque Boost	1	Auto	0-1	-
BAS	20	auto tuning	Auto Tuning	3	Rs+Lsigma	0-6	-

4.15 Output Voltage Setting

Output voltage settings are required when a motor's rated voltage differs from the input voltage to the inverter. Set BAS-15 to configure the motor's rated operating voltage. The set voltage becomes the output voltage of the inverter's base frequency. When the inverter operates above the base frequency, and when the motor's voltage rating is lower than the input voltage at the inverter, the inverter adjusts the voltage and supplies the motor with the voltage set at BAS-15 (motor rated voltage). If the motor's rated voltage is higher than the input voltage at the inverter, the inverter will supply the inverter input voltage to the motor.

If BAS-15 (motor rated voltage) is set to 0, the inverter corrects the output voltage based on the input voltage in the stopped condition. If the frequency is higher than the base frequency, when the input voltage is lower than the parameter setting, the input voltage will be the inverter output voltage.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
BAS	15	Motor rated voltage	Rated Volt	0	0, 170-480	V

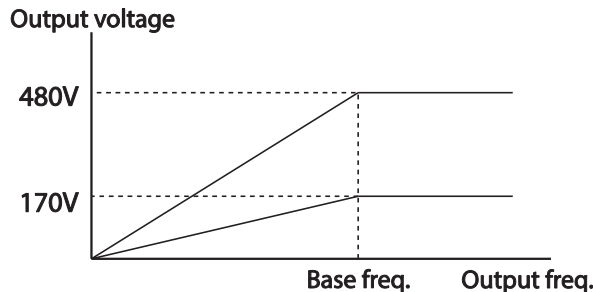

Basic Features

4.16 Start Mode Setting

Select the start mode to use when the operation command is input with the motor in the stopped condition.

4.16.1 Acceleration Start


Acceleration start is a general acceleration mode. If there are no extra settings applied, the motor accelerates directly to the frequency reference when the command is input.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
ADV	07	Start mode	Start mode	0	Acc	0-1	-

4.16.2 Start After DC Braking

This start mode supplies a DC voltage for a set amount of time to provide DC braking before an inverter starts to accelerate a motor. If the motor continues to rotate due to its inertia, DC braking will stop the motor, allowing the motor to accelerate from a stopped condition. DC braking can also be used with a mechanical brake connected to a motor shaft when a constant torque load is applied, if a constant torque is required after the the mechanical brake is released.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
ADV	07	Start mode	Start Mode	1	DC-Start	0-1	-
	12	Start DC braking time	DC-Start Time	0.00	0.00-60.00	sec	
	13	DC Injection Level	DC Inj Level	50	0-200	%	

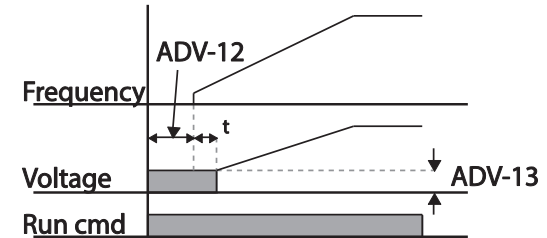

ⓘ Caution

The amount of DC braking required is based on the motor's rated current. Do not use DC braking resistance values that can cause current draw to exceed the rated current of the inverter. If the DC braking resistance is too high or brake time is too long, the motor may overheat or be damaged.


4.17 Stop Mode Setting

Select a stop mode to stop the inverter operation.

4.17.1 Deceleration Stop

Deceleration stop is a general stop mode. If there are no extra settings applied, the motor decelerates down to 0 Hz and stops, as shown in the figure below.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
ADV	08	Stop mode	Stop Mode	0	Dec	0-4

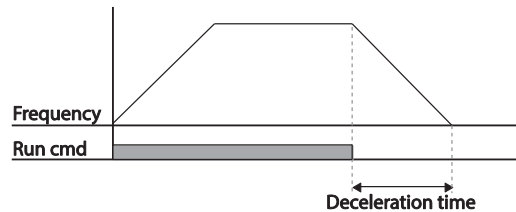


4.17.2 Stop After DC Braking

When the operation frequency reaches the set value during deceleration (DC braking frequency), the inverter stops the motor by supplying DC power to the motor. With a stop command input, the inverter begins decelerating the motor. When the frequency reaches the DC braking frequency set at ADV-17, the inverter supplies DC voltage to the motor and stops it.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
ADV	08	Stop mode	Stop Mode	0	Dec	0-4
	14	Output block time before braking	DC-Block Time	0.10	0.00-60.00	sec
	15	DC braking time	DC-Brake Time	1.00	0-60	sec
	16	DC braking amount	DC-Brake Level	50	0-200	%
	17	DC braking frequency	DC-Brake Freq	0.5	0.00-60.00	Hz

DC Braking After Stop Setting Details

Code	Description
ADV-14 DC-Block Time	Set the time to block the inverter output before DC braking. If the inertia of the load is great, or if DC braking frequency (ADV-17) is set too high, a fault trip may occur due to overcurrent conditions when the inverter supplies DC voltage to the motor. Prevent overcurrent fault trips by adjusting the output block time before DC braking.
ADV-15 DC-Brake Time	Set the time duration for the DC voltage supply to the motor.
ADV-16 DC-Brake Level	Set the amount of DC braking to apply. The parameter setting is based on the rated current of the motor.
ADV-17 DC-Brake Freq	Set the frequency to start DC braking. When the frequency is reached, the inverter starts deceleration. If the dwell frequency is set lower than the DC braking frequency, dwell operation will not work and DC braking will start instead.

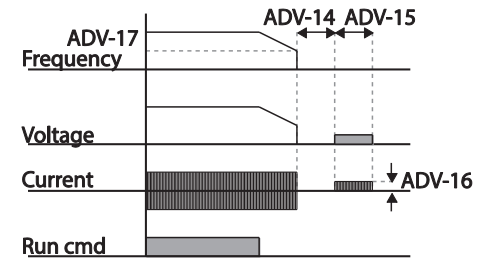


⚠ Caution

- Note that the motor can overheat or be damaged if excessive amount of DC braking is applied to the motor, or DC braking time is set too long.
- DC braking is configured based on the motor's rated current. To prevent overheating or damaging motors, do not set the current value higher than the inverter's rated current.

4.17.3 Free Run Stop

When the Operation command is off, the inverter output turns off, and the load stops due to residual inertia.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
ADV	08	Stop Method	Stop Mode	2	Free-Run	0-4

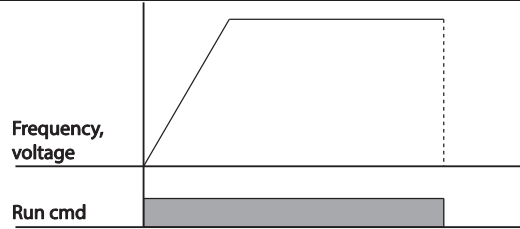

Basic Features

⚠ Caution

Note that when there is high inertia on the output side and the motor is operating at high speed, the load's inertia will cause the motor to continue rotating even if the inverter output is blocked.

4.17.4 Power Braking

When the inverter's DC voltage rises above a specified level due to motor regenerated energy, a control is made to either adjust the deceleration gradient level or reaccelerate the motor in order to reduce the regenerated energy. Power braking can be used when short deceleration times are needed without brake resistors, or when optimum deceleration is needed without causing an over voltage fault trip.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
ADV	08	Stop mode	Stop Mode	4	Power Braking	0-4

⚠ Caution

- To prevent overheating or damaging the motor, do not apply power braking to the loads that require frequent deceleration.
- Stall prevention and power braking only operate during deceleration, and power braking takes priority over stall prevention. In other words, when both PRT-50 (stall prevention and flux braking) and ADV-08 (power braking) are set, power braking will take precedence and operate.
- Note that if deceleration time is too short or inertia of the load is too great, an overvoltage fault trip may occur.
- Note that if a free run stop is used, the actual deceleration time can be longer than the pre-set deceleration time.

4.18 Frequency Limit

Operation frequency can be limited by setting maximum frequency, start frequency, upper limit frequency and lower limit frequency.

4.18.1 Frequency Limit Using Maximum Frequency and Start Frequency

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	19	Start frequency	Start Freq	0.50	0.01-10.00	Hz
	20	Maximum frequency	Max Freq	50.00	40.00-400.00	Hz

Frequency Limit Using Maximum Frequency and Start Frequency - Setting Details


Code	Description
DRV-19 Start Freq	Set the lower limit value for speed unit parameters that are expressed in Hz or rpm. If an input frequency is lower than the start frequency, the parameter value will be 0.00.
DRV-20 Max Freq	Set upper and lower frequency limits. All frequency selections are restricted to frequencies from within the upper and lower limits. This restriction also applies when you input a frequency reference using the keypad.

4.18.2 Frequency Limit Using Upper and Lower Limit Frequency Values

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
ADV	24	Frequency limit	Freq Limit	0	No	0-1
	25	Frequency lower limit value	Freq Limit Lo	0.50		0.0-maximum frequency
	26	Frequency upper limit value	Freq Limit Hi	Maximum frequency		minimum-maximum frequency

Frequency Limit Using Upper and Lower Limit Frequencies - Setting Details

Code	Description
ADV-24 Freq Limit	The initial setting is 0 (No). Changing the setting to 1 (Yes) allows the setting of frequencies between the lower limit frequency (ADV-25) and the upper limit frequency (ADV-26). When the setting is 0 (No), codes ADV-25 and ADV-26 are not visible.
ADV-25 Freq Limit Lo	Set an upper limit frequency to all speed unit parameters that are expressed in Hz or rpm, except for the base frequency (DRV-18). Frequency cannot be set higher than the upper limit frequency.
ADV-26 Freq Limit Hi	Set a lower limit frequency to all speed unit parameters that are expressed in Hz or rpm, except for the base frequency (DRV-18). Frequency cannot be set lower than the lower limit frequency.

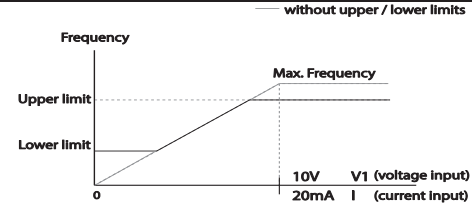


4.18.3 Frequency Jump

Use frequency jump to avoid mechanical resonance frequencies. Jump through frequency bands when a motor accelerates and decelerates. Operation frequencies cannot be set within the pre-set frequency jump band.

When a frequency setting is increased, while the frequency parameter setting value (voltage, current, RS-485 communication, keypad setting, etc.) is within a jump frequency band, the frequency will be maintained at the lower limit value of the frequency band. Then, the frequency will increase when the frequency parameter setting exceeds the range of frequencies used by the frequency jump band.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
ADV	27	Frequency jump	Jump Freq	0 No	0-1	-
	28	Jump frequency lower limit1	Jump Lo 1	10.00	0.00-Jump frequency upper limit 1	Hz
	29	Jump frequency upper limit1	Jump Hi 1	15.00	Jump frequency lower limit 1-Maximum frequency	Hz
	30	Jump frequency lower limit 2	Jump Lo 2	20.00	0.00-Jump frequency upper limit 2	Hz
	31	Jump frequency upper limit 2	Jump Hi 2	25.00	Jump frequency lower limit 2-Maximum frequency	Hz
	32	Jump frequency lower limit 3	Jump Lo 3	30.00	0.00-Jump frequency upper limit 3	Hz
	33	Jump frequency upper limit 3	Jump Hi 3	35.00	Jump frequency lower limit 3-Maximum frequency	Hz

Basic Features

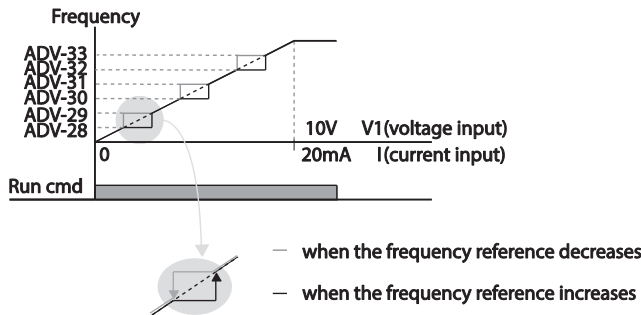

4.19 2nd Operation Mode Setting

Apply two types of operation modes and switch between them as required. For both the first and second command source, set the frequency after shifting operation commands to the multi-function input terminal. Mode switching can be used to stop remote control during an operation using the communication option and to switch operation mode to operate via the local panel, or to operate the inverter from another remote control location.

Select one of the multi-function terminals from codes IN- 65-71 and set the parameter value to 15 (2nd Source).

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	06	Command source	Cmd Source*	1 Fx/Rx-1	0-4	-
	07	Frequency reference source	Freq Ref Src	2 V1	0-12	-
BAS	04	2 nd Command source	Cmd 2nd Src	0 Keypad	0-4	-
	05	2 nd Frequency reference source	Freq 2nd Src	0 KeyPad-1	0-12	-
IN	65-71	Px terminal configuration	Px Define (Px: P1-P7)	15 2nd Source	0-54	-

2nd Operation Mode Setting Details

Code	Description
BAS-04 Cmd 2nd Src	If signals are provided to the multi-function terminal set as the 2 nd command source (2nd Source), the operation can be performed using the set values from BAS-04-05 instead of the set values from the 06 and 07 codes in the DRV group. The 2nd command source settings cannot be changed while operating with the 1 st command source (Main Source).
BAS-05 Freq 2nd Src	

⚠ Caution

- When setting the multi-function terminal to the 2nd command source (2nd Source) and input (On) the signal, operation state is changed because the frequency setting and the Operation command will be changed to the 2nd command. Before shifting input to the multi-function terminal, ensure that the 2nd command is correctly set. Note that if the deceleration time is too short or inertia of the load is too high, an overvoltage fault trip may occur.
- Depending on the parameter settings, the inverter may stop operating when you switch the command modes.

4.20 Multi-function Input Terminal Control

Filter time constants and the type of multi-function input terminals can be configured to improve the response of input terminals

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
IN	85	Multi-function input terminal On filter	DI On Delay	10	0–10000	ms
	86	Multi-function input terminal Off filter	DI Off Delay	3	0–10000	ms
	87	Multi-function input terminal selection	DI NC/NO Sel	000 0000*	-	-
	90	Multi-function input terminal status	DI Status	000 0000*	-	-

Multi-function Input Terminal Control Setting Details

Code	Description						
IN-85 DI On Delay, IN-86 DI Off Delay	If the input terminal's state is not changed during the set time, when the terminal receives an input, it is recognized as On or Off.						
IN-87 DI NC/NO Sel	Select terminal contact types for each input terminal. The position of the indicator light corresponds to the segment that is on as shown in the table below. With the bottom segment on, it indicates that the terminal is configured as a A terminal (Normally Open) contact. With the top segment on, it indicates that the terminal is configured as a B terminal (Normally Closed) contact. Terminals are numbered P1–P7, from right to left. <table border="1" data-bbox="255 817 865 919"> <thead> <tr> <th>Type</th> <th>B terminal status (Normally Closed)</th> <th>A terminal status (Normally Open)</th> </tr> </thead> <tbody> <tr> <td>LCD keypad</td> <td></td> <td></td> </tr> </tbody> </table>	Type	B terminal status (Normally Closed)	A terminal status (Normally Open)	LCD keypad		
Type	B terminal status (Normally Closed)	A terminal status (Normally Open)					
LCD keypad							
IN-90 DI Status	Display the configuration of each contact. When a segment is configured as A terminal using DRV-87, the On condition is indicated by the top segment turning on. The Off condition is indicated when the bottom segment is turned on. When contacts are configured as B terminals, the segment lights behave conversely. Terminals are numbered P1–P7, from right to left. <table border="1" data-bbox="255 1075 865 1157"> <thead> <tr> <th>Type</th> <th>A terminal setting (On)</th> <th>A terminal setting (Off)</th> </tr> </thead> <tbody> <tr> <td>LCD keypad</td> <td></td> <td></td> </tr> </tbody> </table>	Type	A terminal setting (On)	A terminal setting (Off)	LCD keypad		
Type	A terminal setting (On)	A terminal setting (Off)					
LCD keypad							

Basic Features

4.21 P2P Setting

The P2P function is used to share input and output devices between multiple inverters. To enable P2P setting, RS-485 communication must be turned on .

Inverters connected through P2P communication are designated as either a master or slaves . The Master inverter controls the input and output of slave inverters. Slave inverters provide input and output actions. When using the multi-function output, a slave inverter can select to use either the master inverter's output or its own output. When using P2P communication, first designate the slave inverter and then the master inverter. If the master inverter is designated first, connected inverters may interpret the condition as a loss of communication.

Master Parameter

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
COM	95	P2P Communication selection	Int 485 Func	1 P2P Master	0–3	-
USS	80	Analog input1	P2P In V1	0	0–12,000	%
	81	Analog input2	P2P In I2	0	-12,000–12,000	%
	82	Digital input	P2P In DI	0	0–0x7F	bit
	85	Analog output	P2P Out AO1	0	0–10,000	%
88	Digital output	P2P Out DO	0	0–0x03	bit	

Slave Parameter

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
COM	95	P2P Communication selection	Int 485 Func	2 P2P Slave	0–3	-
	96	P2P DO setting selection	P2P OUT Sel	0 No	0–2	bit

P2P Setting Details

Code	Description
COM-95 Int 485 Func	Set master inverter to 1(P2P Master), slave inverter to 2(P2P Slave).
USS-80–82 P2P Input Data	Input data sent from the slave inverter.
USS-85, 88 P2P Output Data	Output data transmitted to the slave inverter.

⚠ Caution

- P2P features work only with code version 1.00, IO SW version 0.11, and keypad SW version 1.07 or higher versions.
- Set the user sequence functions to use P2P features.

4.22 Multi-keypad Setting

Use multi-keypad settings to control more than one inverter with one keypad. To use this function, first configure RS-485 communication.

The group of inverters to be controlled by the keypad will include a master inverter. The master inverter monitors the other inverters, and slave inverter responds to the master inverter's input. When using multi-function output, a slave inverter can select to use either the master inverter's output or its own output. When using the multi keypad, first designate the slave inverter and then the master inverter. If the master inverter is designated first, connected inverters may interpret the condition as a loss of communication.

Master Parameter

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
COM	95	P2P Communication selection	Int 485 Func	3	KPD-Ready	0-3	-
CNF	03	Multi-keypad ID	Multi KPD ID	3		3-99	-
	42	Multi-function key selection	Multi Key Sel	4	Multi KPD	0-4	-

Slave Parameter

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
COM	01	Station ID	Int485 St ID	3		3-99	-
	95	P2P communication options	Int 485 Func	3	KPD-Ready	0-3	-

Multi-keypad Setting Details

Code	Description
COM-01 Int485 St ID	Prevents conflict by designating a unique identification value to an inverter. Values can be selected from numbers between 3-99.
COM-95 Int 485 Func	Set the value to 3 (KPD-Ready) for both master and slave inverter
CNF-03 Multi KPD ID	Select an inverter to monitor from the group of inverters.
CNF-42 Multi key Sel	Select a multi-function key type 4 (Multi KPD) .

ⓘ Caution

- Multi-keypad (Multi-KPD) features work only with code version 1.00, IO S/W version 0.11, and keypad S/W version 1.07 or higher versions.
- The multi-keypad feature will not work when the multi-keypad ID (CNF-03 Multi-KPD ID) setting is identical to the RS-485 communication station ID (CM-01 Int485 st ID) setting.
- The master/slave setting cannot be changed while the inverter is operating in slave mode.

4.23 User Sequence Setting

User Sequence creates a simple sequence from a combination of different function blocks. The sequence can comprise of a maximum of 18 steps using 29 function blocks and 30 void parameters.

1 Loop refers to a single execution of a user configured sequence that contains a maximum of 18 steps. Users can select a Loop Time of between 10-1,000 ms.

The codes for user sequences configuration can be found in the USS group (for user sequence settings) and the USF group (for function block settings).

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
APP	02	User sequence activation	User Seq En	0	0-1	-
USS	01	User sequence operation command	User Seq Con	0	0-2	-
	02	User sequence operation time	User Loop Time	0	0-5	-
	11-28	Output address link1-18	Link UserOut1-18	0	0-0xFFFF	-
	31-60	Input value setting1-30	Void Para1-30	0	-9999-9999	-
	80	Analog input 1	P2P In V1(-10-10 V)	0	0-12,000	%
	81	Analog input 2	P2P In I2	0	-12,000	%
	82	Digital input	P2P In D	0	-12,000	bit
	85	Analog output	P2P Out AO1	0	0-0x7F	%
	88	Digital output	P2P Out DO	0	0-0x03	bit
USF	01	User function 1	User Func1	0	0-28	-
	02	User function input 1-A	User Input 1-A	0	0-0xFFFF	-
	03	User function input 1-B	User Input 1-B	0	0-0xFFFF	-
	04	User function input 1-C	User Input 1-C	0	0-0xFFFF	-
	05	User function output 1	User Output 1	0	-32767-32767	-
	06	User function 2	User Func2	0	0-28	-
	07	User function input 2-A	User Input 2-A	0	0-0xFFFF	-
	08	User function input 2-B	User Input 2-B	0	0-0xFFFF	-
	09	User function input 2-C	User Input 2-C	0	0-0xFFFF	-
	10	User function output 2	User Output 2	0	-32767-32767	-
	11	User function 3	User Func3	0	0-28	-
	12	User function input 3-A	User Input 3-A	0	0-0xFFFF	-
	13	User function input 3-B	User Input 3-B	0	0-0xFFFF	-
	14	User function input 3-C	User Input 3-C	0	0-0xFFFF	-
	15	User function output 3	User Output 3	0	-32767-32767	-
	16	User function 4	User Func4	0	0-28	-
	17	User function input 4-A	User Input 4-A	0	0-0xFFFF	-
	18	User function input 4-B	User Input 4-B	0	0-0xFFFF	-
	19	User function input 4-C	User Input 4-C	0	0-0xFFFF	-

Learning Basic Features

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
	20	User function output 4	User Output 4	0	-32767~32767	-
	21	User function 5	User Func5	0	0~28	-
	22	User function input 5-A	User Input 5-A	0	0~0xFFFF	-
	23	User function input 5-B	User Input 5-B	0	0~0xFFFF	-
	24	User function input 5-C	User Input 5-C	0	0~0xFFFF	-
	25	User function output 5	User Output 5	0	-32767~32767	-
	26	User function 6	User Func6	0	0~28	-
	27	User function input 6-A	User Input 6-A	0	0~0xFFFF	-
	28	User function input 6-B	User Input 6-B	0	0~0xFFFF	-
	29	User function input 6-C	User Input 6-C	0	0~0xFFFF	-
	30	User function output 6	User Output 6	0	-32767~32767	-
	31	User function 7	User Func7	0	0~28	-
	32	User function input 7-A	User Input 7-A	0	0~0xFFFF	-
	33	User function input 7-B	User Input 7-B	0	0~0xFFFF	-
	34	User function input 7-C	User Input 7-C	0	0~0xFFFF	-
	35	User function output 7	User Output 7	0	-32767~32767	-
	36	User function 8	User Func8	0	0~28	-
	37	User function input 8-A	User Input 8-A	0	0~0xFFFF	-
	38	User function input 8-B	User Input 8-B	0	0~0xFFFF	-
	39	User function input 8-C	User Input 8-C	0	0~0xFFFF	-
	40	User function output 8	User Output 8	0	-32767~32767	-
	41	User function 9	User Func9	0	0~28	-
	42	User function input 9-A	User Input 9-A	0	0~0xFFFF	-
	43	User function input 9-B	User Input 9-B	0	0~0xFFFF	-
	44	User function input 9-C	User Input 9-C	0	0~0xFFFF	-
	45	User function output 9	User Output 9	0	-32767~32767	-
	46	User function 10	User Func10	0	0~28	-
	47	User function input 10-A	User Input 10-A	0	0~0xFFFF	-
	48	User function input 10-B	User Input 10-B	0	0~0xFFFF	-
	49	User function input 10-C	User Input 10-C	0	0~0xFFFF	-
	50	User function output 10	User Output 10	0	-32767~32767	-
	51	User function 11	User Func11	0	0~28	-
	52	User function input 11-A	User Input 11-A	0	0~0xFFFF	-
	53	User function input 11-B	User Input 11-B	0	0~0xFFFF	-
	54	User function input 11-C	User Input 11-C	0	0~0xFFFF	-
	55	User function output 11	User Output 11	0	-32767~32767	-
	56	User function 12	User Func12	0	0~28	-

Basic Features

Learning Basic Features

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
	57	User function input 12-A	User Input 12-A	0	0~0xFFFF	-
	58	User function input 12-B	User Input 12-B	0	0~0xFFFF	-
	59	User function input 12-C	User Input 12-C	0	0~0xFFFF	-
	60	User function output 12	User Output 12	0	-32767~32767	-
	61	User function 13	User Func13	0	0~28	-
	62	User function input 13-A	User Input 13-A	0	0~0xFFFF	-
	63	User function input 13-B	User Input 13-B	0	0~0xFFFF	-
	64	User function input 13-C	User Input 13-C	0	0~0xFFFF	-
	65	User function output 13	User Output 13	0	-32767~32767	-
	66	User function 14	User Func14	0	0~28	-
	67	User function input 14-A	User Input 14-A	0	0~0xFFFF	-
	68	User function input 14-B	User Input 14-B	0	0~0xFFFF	-
	69	User function input 14-C	User Input 14-C	0	0~0xFFFF	-
	70	User function output 14	User Output 14	0	-32767~32767	-
	71	User function 15	User Func15	0	0~28	-
	72	User function input 15-A	User Input 15-A	0	0~0xFFFF	-
	73	User function input 15-B	User Input 15-B	0	0~0xFFFF	-
	74	User function input 15-C	User Input 15-C	0	0~0xFFFF	-
	75	User function output 15	User Output 15	0	-32767~32767	-
	76	User function 16	User Func16	0	0~28	-
	77	User function input 16-A	User Input 16-A	0	0~0xFFFF	-
	78	User function input 16-B	User Input 16-B	0	0~0xFFFF	-
	79	User function input 16-C	User Input 16-C	0	0~0xFFFF	-
	80	User function output 16	User Output 16	0	-32767~32767	-
	81	User function 17	User Func17	0	0~28	-
	82	User function input 17-A	User Input 17-A	0	0~0xFFFF	-
	83	User function input 17-B	User Input 17-B	0	0~0xFFFF	-
	84	User function input 17-C	User Input 17-C	0	0~0xFFFF	-
	85	User function output 17	User Output 17	0	-32767~32767	-
	86	User function 18	User Func18	0	0~28	-
	87	User function input 18-A	User Input 18-A	0	0~0xFFFF	-
	88	User function input 18-B	User Input 18-B	0	0~0xFFFF	-
	89	User function input 18-C	User Input 18-C	0	0~0xFFFF	-
	90	User function output 18	User Output 18	0	-32767~32767	-

User Sequence Setting Details

Code	Description
APP-02 User Seq En	Display the parameter groups related to a user sequence. Set Sequence Run and Sequence Stop with the keypad.
USS-01 User Seq Con	Parameters cannot be adjusted during an operation. To adjust parameters, the operation must be stopped.
USS-02 User Loop Time	Set the user sequence Loop Time. User sequence loop time can be set to 0.01s/0.02s/ 0.05s/0.1s/0.5s/1s.
USS-11-28 Link UserOut1-18	Set parameters to connect 18 Function Blocks. If the input value is 0x0000, an output value cannot be used. To use the output value in step 1 for the frequency reference (Cmd Frequency), input the communication address (0x1101) of the Cmd frequency as the Link UserOut1 parameter.
USS-31-60 Void Para1-30	Set 30 void parameters. Use when constant (Const) parameter input is needed in the user function block.
USF-01-90	Set user defined functions for the 18 function blocks. If the function block setting is invalid, the output of the User Output@ is -1. All the outputs from the User Output@ are read only, and can be used with the user output link@ (Link UserOut@) of the USS group.

Basic Features

Function Block Parameter Structure

Type	Description
User Func @*	Choose the function to perform in the function block.
User Input @-A	Communication address of the function's first input parameter.
User Input @-B	Communication address of the function's second input parameter.
User Input @-C	Communication address of the function's third input parameter.
User Output @	Output value (Read Only) after performing the function block.

* @ is the step number (1-18).

User Function Operation Condition

Number	Type	Description
0	NOP	No Operation.
1	ADD	Addition operation, (A + B) + C If the C parameter is 0x0000, it will be recognized as 0.
2	SUB	Subtraction operation, (A - B) - C If the C parameter is 0x0000, it will be recognized as 0.
3	ADDSUB	Addition and subtraction compound operation, (A + B) - C If the C parameter is 0x0000, it will be recognized as 0.
4	MIN	Output the smallest value of the input values, MIN(A, B, C). If the C parameter is 0x0000, operate only with A, B.
5	MAX	Output the largest value of the input values, MAX(A, B, C). If the C parameter is 0x0000, operate only with A, B.
6	ABS	Output the absolute value of the A parameter, A . This operation does not use the B, or C parameter.
7	NEGATE	Output the negative value of the A parameter, -(A). This operation does not use the B, or C parameter.

Number	Type	Description
8	REMAINDER	Remainder operation of A and B, A % B This operation does not use the C parameter.
9	MPYDIV	Multiplication, division compound operation, (A x B)/C. If the C parameter is 0x0000, output the multiplication operation of (A x B).
10	COMPARE-GT (greater than)	Comparison operation: if (A > B) the output is C; if (A <=B) the output is 0. If the condition is met, the output parameter is C. If the condition is not met, the output is 0(False). If the C parameter is 0x0000 and if the condition is met, the output is 1(True).
11	COMPARE-GTEQ (great than or equal to)	Comparison operation; if (A >= B) output is C; if (A<B) the output is 0. If the condition is met, the output parameter is C. If the condition is not met, the output is 0(False). If the C parameter is 0x0000 and if the condition is met, the output is 1(True).
12	COMPARE-EQUAL	Comparison operation, if(A == B) then the output is C. For all other values the output is 0. If the condition is met, the output parameter is C. if the condition is not met, the output is 0(False). If the C parameter is 0x0000 and if the condition is met, the output is 1(True).
13	COMPARE-NEQUAL	Comparison operation, if(A != B) then the output is C. For all other values the output is 0. If the condition is met, the output parameter is C. If the condition is not met, the output is 0(False). If the C parameter is 0x0000 and if the condition is met, the output is 1(True).
14	TIMER	Adds 1 each time a user sequence completes a loop. A: Max Loop, B: Timer Run/Stop, C: Choose output mode. If input of B is 1, timer stops (output is 0). If input is 0, timer runs. If input of C is 1, output the current timer value. If input of C is 0, output 1 when timer value exceeds A(Max) value. If the C parameter is 0x0000, C will be recognized as 0. Timer overflow initializes the timer value to 0.
15	LIMIT	Sets a limit for the A parameter. If input to A is between B and C, output the input to A. If input to A is larger than B, output B. If input of A is smaller than C, output C. B parameter must be greater than or equal to the C parameter.
16	AND	Output the AND operation, (A and B) and C. If the C parameter is 0x0000, operate only with A, B.
17	OR	Output the OR operation, (A B) C. If the C parameter is 0x0000, operate only with A, B.
18	XOR	Output the XOR operation, (A ^ B) ^ C. If the C parameter is 0x0000, operate only with A, B.
19	AND/OR	Output the AND/OR operation, (A and B) C. If the C parameter is 0x0000, operate only with A, B.
20	SWITCH	Output a value after selecting one of two inputs, if (A) then B otherwise C. If the input at A is 1, the output will be B. If the input at A is 0, the output parameter will be C.
21	BITTEST	Test the B bit of the A parameter, BITTEST(A, B). If the B bit of the A input is 1, the output is 1. If it is 0, then the output is 0.

Number	Type	Description
		The input value of B must be between 0–16. If the value is higher than 16, it will be recognized as 16. If input at B is 0, the output is always 0.
22	BITSET	Set the B bit of the A parameter, BITSET(A, B). Output the changed value after setting the B bit to input at A. The input value of B must be between 0–16. If the value is higher than 16, it will be recognized as 16. If the input at B is 0, the output is always 0. This operation does not use the C parameter.
23	BITCLEAR	Output the input at A as the B filter gain time constant, B x US-02 (US Loop Time). In the above formula, set the time when the output of A reaches 62.2% of the B parameter = an input greater than 0. C stands for the filter operation. If it is 0, the operation is started.
24	LOWPASSFILTER	Output the input at A as the B filter gains time constant, B x US-02 (US Loop Time). In the above formula, set the time when the output of A reaches 62.2% C stands for the filter operation. If it is 0, the operation is started.
25	PI_CONTROL	P, I gain = A, B parameter input, then output as C. Conditions for PI_PROCESS output: C = 0: Const PI, C = 1: PI_PROCESS-B >= PI_PROCESS-OUT >= 0, C = 2: PI_PROCESS-B >= PI_PROCESS-OUT >= -(PI_PROCESS-B), P gain = A/100, I gain = 1/(Bx Loop Time), If there is an error with PI settings, output -1.
26	PI_PROCESS	A is an input error, B is an output limit, C is the value of Const PI output. Range of C is 0–32,767.
27	UPCOUNT	Upcounts the pulses and then output the value- UPCOUNT(A, B, C). After receiving a trigger input (A), outputs are upcounted by C conditions. If the B inputs is 1, do not operate and display 0. If the B inputs is 0, operate. If the C parameter is 0, upcount when the input at A changes from 0 to 1. If the C parameter is 1, upcount when the input at A is changed from 1 to 0. If the C parameter is 2, upcount whenever the input at A changes. Output range is: 0–32767
28	DOWNCOUNT	Downcounts the pulses and then output the value-DOWNCOUNT(A, B, C). After receiving a trigger input (A), outputs are downcounted by C conditions. If the B input is 1, do not operate and display the initial value of C. If the B input is 0, operate. Downcounts when the A parameter changes from 0 to 1.

Note

The PI process block (PI_PROCESS Block) must be used after the PI control block (PI_CONTROL Block) for proper PI control operation. PI control operation cannot be performed if there is another block between the two blocks, or if the blocks are placed in an incorrect order.

ⓘ Caution

User sequence features work only with code version 1.00, IO SW version 0.11, and keypad SW version 1.07 or higher versions.

4.24 Fire Mode Operation

This function is used to allow the inverter to ignore minor faults during emergency situations, such as fire, and provides continuous operation to fire pumps.

When turned on, Fire mode forces the inverter to ignore all minor fault trips and repeat a Reset and Restart for major fault trips, regardless of the restart trial count limit. The retry delay time set at PRT-10 (Retry Delay) still applies while the inverter performs a Reset and Restart.

Fire Mode Parameter Settings

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
ADV	80	Fire Mode selection	Fire Mode Sel	2	Fire Mode	0–3	-
	81	Fire Mode frequency	Fire Mode Freq	0-60			0–60
	82	Fire Mode run direction	Fire Mode Dir	0–1			0–1
	83	Fire Mode operation count	Fire Mode Cnt	Not configurable	0–3		-
IN	65–71	Px terminal configuration	Px Define (Px: P1–P7)	51	Fire Mode	0–54	-

The inverter runs in Fire mode when ADV-80 (Fire Mode Sel) is set to '2 (Fire Mode)', and the multi-function terminal (IN-65–71) configured for Fire mode (51: Fire Mode) is turned on. The Fire mode count increases by 1 at ADV-83 (Fire Mode Count) each time a Fire mode operation is run.

ⓘ Caution

Fire mode operation may result in inverter malfunction. Note that Fire mode operation voids the product warranty – the inverter is covered by the product warranty only when the Fire mode count is '0'.

Fire Mode Function Setting Details

Code	Description	Details
ADV-81 Fire Mode frequency	Fire mode frequency reference	The frequency set at ADV-81 (Fire mode frequency) is used for the inverter operation in Fire mode. The Fire mode frequency takes priority over the Jog frequency, Multi-step frequencies, and the keypad input frequency.
DRV-03 Acc Time / DRV-04 Dec Time	Fire mode Acc/Dec times	When Fire mode operation is turned on, the inverter accelerates for the time set at DRV-03 (Acc Time), and then decelerates based on the deceleration time set at DRV-04 (Dec Time). It stops when the Px terminal input is turned off (Fire mode operation is turned off).
PRT-10 Retry Delay	Fault trip process	Some fault trips are ignored during Fire mode operation. The fault trip history is saved, but trip outputs are disabled even when they are configured at the multi-function output terminals.
		Fault trips that are ignored in Fire mode BX, External Trip, Low Voltage Trip, Inverter Overheat, Inverter Overload, Overload, Electrical Thermal Trip, Input/Output Open Phase, Motor Overload, Fan Trip, No Motor Trips, and other minor fault trips.
		For the following fault trips, the inverter performs a Reset and Restart until the trip conditions are released. The retry delay time set at PRT-10 (Retry Delay) applies while the inverter performs a Reset and Restart.
		Fault trips that force a Reset Restart in Fire mode Over Voltage, Over Current1(OC1), Ground Fault Trip
		The inverter stops operating when the following fault trips occur: Fault trips that stop inverter operation in Fire mode H/W Diag, Over Current 2 (Arm-Short)

Basic Features

5 Learning Advanced Features

This chapter describes the advanced features of the SX2000 inverter. Check the reference page in the table to see the detailed description for each of the advanced features.

Advanced Tasks	Description	Ref.
Auxiliary frequency operation	Use the main and auxiliary frequencies in the predefined formulas to create various operating conditions. Auxiliary frequency operation is ideal for Draw Operation* as this feature enables fine-tuning of operation speeds.	p.108
Jog operation	Jog operation is a kind of a manual operation. The inverter operates to a set of parameter settings predefined for Jog operation, while the Jog command button is pressed.	p.112
Up-down operation	Uses the upper and lower limit value switch output signals (i.e. signals from a flow meter) as Acc/Dec commands to motors.	p.115
3-wire operation	3-wire operation is used to latch an input signal. This configuration is used to operate the inverter by a push button.	p.117
Safety operation mode	This safety feature allows the inverter's operation only after a signal is input to the multi-function terminal designated for the safety operation mode. This feature is useful when extra care is needed in operating the inverter using the multi-purpose terminals.	p.118
Dwell operation	Use this feature for the lift-type loads such as elevators, when the torque needs to be maintained while the brakes are applied or released.	p.119
Slip compensation	This feature ensures that the motor rotates at a constant speed, by compensating for the motor slip as a load increases.	p.121
PID control	PID control provides constant automated control of flow, pressure, and temperature by adjusting the output frequency of the inverter.	p.122
Auto-tuning	Used to automatically measure the motor control parameters to optimize the inverter's control mode performance.	p.130
Sensorless vector control	An efficient mode to control magnetic flux and torque without special sensors. Efficiency is achieved through the high torque characteristics at low current when compared with the V/F control mode.	p.133
Energy buffering operation	Used to maintain the DC link voltage for as long as possible by controlling the inverter output frequency during power interruptions, thus to delay a low voltage fault trip.	p.140
Energy saving operation	Used to save energy by reducing the voltage supplied to motors during low-load and no-load conditions.	p.141
Speed search operation	Used to prevent fault trips when the inverter voltage is output while the motor is idling or free-running.	p.144
Auto restart operation	Auto restart configuration is used to automatically restart the inverter when a trip condition is released, after the inverter stops operating due to activation of protective devices (fault trips).	p.147
Second motor operation	Used to switch equipment operation by connecting two motors to one inverter. Configure and operate the second motor using the terminal input defined for the second motor operation.	p.151

Advanced Tasks	Description	Ref.
Commercial power source switch operation	Used to switch the power source to the motor from the inverter output to a commercial power source, or vice versa.	p.152
Cooling fan control	Used to control the cooling fan of the inverter.	p.153
Timer settings	Set the timer value and control the On/Off state of the multi-function output and relay.	p.164
Brake control	Used to control the On/Off operation of the load's electronic braking system.	p.165
Multi-function output On/Off control	Set standard values and turn On/Off the output relays or multi-function output terminals according to the analog input value.	p.166
Regeneration prevention for press operation.	Used during a press operation to avoid motor regeneration, by increasing the motor operation speed.	p.167

* Draw operation is an openloop tension control. This feature allows a constant tension to be applied to the material that is drawn by a motor-driven device, by fine-tuning the motor speed using operation frequencies that are proportional to a ratio of the main frequency reference.

5.1 Operating with Auxiliary References

Frequency references can be configured with various calculated conditions that use the main and auxiliary frequency references simultaneously. The main frequency reference is used as the operating frequency, while auxiliary references are used to modify and fine-tune the main reference.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	07	Frequency reference source	Freq Ref Src	0 Keypad-1	0–12	-
BAS	01	Auxiliary frequency reference source	Aux Ref Src	1 V1	0–4	-
	02	Auxiliary frequency reference calculation type	Aux Calc Type	0 M+(G*A)	0–7	-
	03	Auxiliary frequency reference gain	Aux Ref Gain	0.0	-200.0–200.0	%
IN	65– 71	Px terminal configuration	Px Define	40 dis Aux Ref	-	-


The table above lists the available calculated conditions for the main and auxiliary frequency references. Refer to the table to see how the calculations apply to an example where the 07 code has been set to 0(Keypad-1), and the inverter is operating at a main reference frequency of 30.00 Hz. Signals at -10 – +10 V are received at terminal V1, with the reference gain set at 5%. In this example, the resulting frequency reference is fine-tuned within the range of 27.00–33.00 Hz [Codes IN-01–16 must be set to the default values, and IN-06 (V1 Polarity), set to 1 (Bipolar)].

Auxiliary Reference Setting Details

Code	Description												
BAS-01 Aux Ref Src	Set the input type to be used for the auxiliary frequency reference.												
	<table border="1"> <thead> <tr> <th>Configuration</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>None Auxiliary frequency reference is disabled.</td> </tr> <tr> <td>1</td> <td>V1 Sets the V1 (voltage) terminal at the control terminal block as the source of auxiliary frequency reference.</td> </tr> <tr> <td>3</td> <td>V2 Sets the V2 (voltage) terminal at the control terminal block as the source of auxiliary frequency reference (SW2 must be set to "voltage").</td> </tr> <tr> <td>4</td> <td>I2 Sets the I2 (current) terminal at the control terminal block as the source of auxiliary frequency reference (SW2 must be set to "current").</td> </tr> <tr> <td>5</td> <td>Pulse Sets the T1 (pulse) terminal at the control terminal block as the source of auxiliary frequency reference.</td> </tr> </tbody> </table>	Configuration	Description	0	None Auxiliary frequency reference is disabled.	1	V1 Sets the V1 (voltage) terminal at the control terminal block as the source of auxiliary frequency reference.	3	V2 Sets the V2 (voltage) terminal at the control terminal block as the source of auxiliary frequency reference (SW2 must be set to "voltage").	4	I2 Sets the I2 (current) terminal at the control terminal block as the source of auxiliary frequency reference (SW2 must be set to "current").	5	Pulse Sets the T1 (pulse) terminal at the control terminal block as the source of auxiliary frequency reference.
	Configuration	Description											
	0	None Auxiliary frequency reference is disabled.											
	1	V1 Sets the V1 (voltage) terminal at the control terminal block as the source of auxiliary frequency reference.											
	3	V2 Sets the V2 (voltage) terminal at the control terminal block as the source of auxiliary frequency reference (SW2 must be set to "voltage").											
4	I2 Sets the I2 (current) terminal at the control terminal block as the source of auxiliary frequency reference (SW2 must be set to "current").												
5	Pulse Sets the T1 (pulse) terminal at the control terminal block as the source of auxiliary frequency reference.												

Code	Description																		
BAS-02 Aux Calc Type	Set the auxiliary reference gain with BAS-03 (Aux Ref Gain) to configure the auxiliary reference and set the percentage to be reflected when calculating the main reference. Note that items 4–7 below may result in either plus (+) or minus (-) references (forward or reverse operation) even when unipolar analog inputs are used.																		
	<table border="1"> <thead> <tr> <th>Configuration</th> <th>Formula for frequency reference</th> </tr> </thead> <tbody> <tr> <td>0 M+(G*A)</td> <td>Main reference+(BAS-03xBAS-01xIN-01)</td> </tr> <tr> <td>1 M*(G*A)</td> <td>x(BAS-03xBAS-01)</td> </tr> <tr> <td>2 M/(G*A)</td> <td>Main reference/(BAS-03xBAS-01)</td> </tr> <tr> <td>3 M+{M*(G*A)}</td> <td>Main reference+{Main reference x(BAS-03xBAS-01)}</td> </tr> <tr> <td>4 M+G*2*(A-50)</td> <td>Main reference+BAS-03x2x(BAS-01-50)x IN-01</td> </tr> <tr> <td>5 M*(G*2*(A-50))</td> <td>Main reference x{BAS-03x2x(BAS-01-50)}</td> </tr> <tr> <td>6 M/(G*2*(A-50))</td> <td>Main reference/(BAS-03x2x(BAS-01-50))</td> </tr> <tr> <td>7 M+M*G*2*(A-50)</td> <td>Main reference+Main reference x BAS-03x2x(BAS-01-50)</td> </tr> </tbody> </table>	Configuration	Formula for frequency reference	0 M+(G*A)	Main reference+(BAS-03xBAS-01xIN-01)	1 M*(G*A)	x(BAS-03xBAS-01)	2 M/(G*A)	Main reference/(BAS-03xBAS-01)	3 M+{M*(G*A)}	Main reference+{Main reference x(BAS-03xBAS-01)}	4 M+G*2*(A-50)	Main reference+BAS-03x2x(BAS-01-50)x IN-01	5 M*(G*2*(A-50))	Main reference x{BAS-03x2x(BAS-01-50)}	6 M/(G*2*(A-50))	Main reference/(BAS-03x2x(BAS-01-50))	7 M+M*G*2*(A-50)	Main reference+Main reference x BAS-03x2x(BAS-01-50)
	Configuration	Formula for frequency reference																	
	0 M+(G*A)	Main reference+(BAS-03xBAS-01xIN-01)																	
	1 M*(G*A)	x(BAS-03xBAS-01)																	
	2 M/(G*A)	Main reference/(BAS-03xBAS-01)																	
	3 M+{M*(G*A)}	Main reference+{Main reference x(BAS-03xBAS-01)}																	
	4 M+G*2*(A-50)	Main reference+BAS-03x2x(BAS-01-50)x IN-01																	
5 M*(G*2*(A-50))	Main reference x{BAS-03x2x(BAS-01-50)}																		
6 M/(G*2*(A-50))	Main reference/(BAS-03x2x(BAS-01-50))																		
7 M+M*G*2*(A-50)	Main reference+Main reference x BAS-03x2x(BAS-01-50)																		
M: Main frequency reference (Hz or rpm) G: Auxiliary reference gain (%) A: Auxiliary frequency reference (Hz or rpm) or gain (%)																			
BAS-03 Aux Ref Gain	Adjust the size of the input (BAS-01 Aux Ref Src) configured for auxiliary frequency.																		
IN-65–71 Px Define	Set one of the multi-function input terminals to 40(dis Aux Ref) and turn it on to disable the auxiliary frequency reference. The inverter will operate using the main frequency reference only.																		

Frequency command by BAS-01 Setting

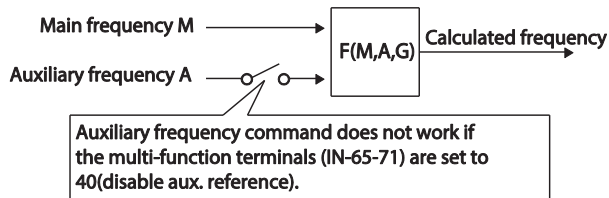

Auxiliary Reference Operation Ex #1

Keypad Frequency Setting is Main Frequency and V1 Analog Voltage is Auxiliary Frequency

- Main frequency: Keypad (operation frequency 30 Hz)
- Maximum frequency setting (DRV-20): 400 Hz
- Auxiliary frequency setting (BAS-01): V1[Display by percentage(%) or auxiliary frequency (Hz) depending on the operation setting condition]
- Auxiliary reference gain setting (BAS-03): 50%
- IN-01–32: Factory default

Example: an input voltage of 6V is supplied to V1, and the frequency corresponding to 10 V is 60 Hz. The table below shows the auxiliary frequency A as 36 Hz=[60 Hz X (6V/10 V)] or 60%=[100% X (6V/10 V)].

Setting*	Calculating final command frequency**
0 M[Hz]+(G[%]*A[Hz])	30 Hz(M)+(50%(G)x36 Hz(A))=48 Hz
1 M[Hz]*(G[%]*A[%])	30 Hz(M)x(50%(G)x60%(A))=9 Hz
2 M[Hz]/(G[%]*A[%])	30 Hz(M)/(50%(G)x60%(A))=100 Hz
3 M[Hz]+{M[Hz]*(G[%]*A[%])}	30 Hz(M)+{30[Hz]x(50%(G)x60%(A))}=39 Hz
4 M[Hz]+G[%]*2*(A[%]-50[%])[Hz]	30 Hz(M)+50%(G)x2x(60%(A)-50%)x60 Hz=36 Hz
5 M[Hz]*(G[%]*2*(A[%]-50[%]))	30 Hz(M)x(50%(G)x2x(60%(A)-50%))=3 Hz
6 M[Hz]/(G[%]*2*(A[%]-50[%]))	30 Hz(M)/(50%(G)x2x(60%-50%))=300 Hz
7 M[Hz]+M[Hz]*G[%]*2*(A[%]-50[%])	30 Hz(M)+30 Hz(M)x50%(G)x2x(60%(A)-50%)=33 Hz

*M: main frequency reference (Hz or rpm)/G: auxiliary reference gain (%)/A: auxiliary frequency reference (Hz or rpm) or gain (%).

**If the frequency setting is changed to rpm, it is converted to rpm instead of Hz.

Auxiliary Reference Operation Ex #2

Keypad Frequency Setting is Main Frequency and I2 Analog Voltage is Auxiliary Frequency

- Main frequency: Keypad (Operation frequency 30 Hz)
- Maximum frequency setting (DRV-20): 400 Hz
- Auxiliary frequency setting (BAS-01): I2 [Display by percentage(%) or auxiliary frequency(Hz) depending on the operation setting condition]
- Auxiliary reference gain setting (BAS-03): 50%
- IN-01–32: Factory default

Example: an input current of 10.4 mA is applied to I2, with the frequency corresponding to 20 mA of 60 Hz. The table below shows auxiliary frequency A as 24 Hz=(60[Hz] X {(10.4[mA]-4[mA])/(20[mA] - 4[mA])}) or 40%=(100[%] X {(10.4[mA] - 4[mA])/(20[mA] - 4[mA])}).

Setting*	Calculating final command frequency**
0	$M[\text{Hz}] + (G[\%] \times A[\text{Hz}])$ 30 Hz(M) + (50%(G) x 24 Hz(A)) = 42 Hz
1	$M[\text{Hz}] \times (G[\%] \times A[\%])$ 30 Hz(M) x (50%(G) x 40%(A)) = 6 Hz
2	$M[\text{Hz}] / (G[\%] \times A[\%])$ 30 Hz(M) / (50%(G) x 40%(A)) = 150 Hz
3	$M[\text{Hz}] + (M[\text{Hz}] \times (G[\%] \times A[\%]))$ 30 Hz(M) + (30 Hz x (50%(G) x 40%(A))) = 36 Hz
4	$M[\text{Hz}] + G[\%] \times 2 \times (A[\%] - 50[\%]) \times \text{Hz}$ 30 Hz(M) + 50%(G) x 2 x (40%(A) - 50%) x 60 Hz = 24 Hz
5	$M[\text{Hz}] \times (G[\%] \times 2 \times (A[\%] - 50[\%]))$ 30 Hz(M) x (50%(G) x 2 x (40%(A) - 50%)) = -3 Hz(Reverse)
6	$M[\text{Hz}] / (G[\%] \times 2 \times (A[\%] - 50[\%]))$ 30 Hz(M) / (50%(G) x 2 x (60% - 40%)) = -300 Hz(Reverse)
7	$M[\text{Hz}] + M[\text{Hz}] \times G[\%] \times 2 \times (A[\%] - 50[\%])$ 30 Hz(M) + 30 Hz(M) x 50%(G) x 2 x (40%(A) - 50%) = 27 Hz

*M: main frequency reference (Hz or rpm)/G: auxiliary reference gain (%)/A: auxiliary frequency reference Hz or rpm or gain (%).

**If the frequency setting is changed to rpm, it is converted to rpm instead of Hz.

Auxiliary Reference Operation Ex #3

V1 is Main Frequency and I2 is Auxiliary Frequency

- Main frequency: V1 (frequency command setting to 5V and is set to 30 Hz)
- Maximum frequency setting (DRV-20): 400 Hz
- Auxiliary frequency (BAS-01): I2[Display by percentage (%) or auxiliary frequency (Hz) depending on the operation setting condition]
- Auxiliary reference gain (BAS-03): 50%
- IN-01-32: Factory default

Example: an input current of 10.4 mA is applied to I2, with the frequency corresponding to 20 mA of 60 Hz. The table below shows auxiliary frequency Aas 24 Hz(=60[Hz] x ((10.4[mA] - 4[mA]) / (20[mA] - 4[mA])) or 40%(=100[%] x ((10.4[mA] - 4[mA]) / (20 [mA] - 4[mA]))).

Setting*	Calculating final command frequency**
0	$M[\text{Hz}] + (G[\%] \times A[\text{Hz}])$ 30 Hz(M) + (50%(G) x 24 Hz(A)) = 42 Hz
1	$M[\text{Hz}] \times (G[\%] \times A[\%])$ 30 Hz(M) x (50%(G) x 40%(A)) = 6 Hz
2	$M[\text{Hz}] / (G[\%] \times A[\%])$ 30 Hz(M) / (50%(G) x 40%(A)) = 150 Hz
3	$M[\text{Hz}] + (M[\text{Hz}] \times (G[\%] \times A[\%]))$ 30 Hz(M) + (30 Hz x (50%(G) x 40%(A))) = 36 Hz
4	$M[\text{Hz}] + G[\%] \times 2 \times (A[\%] - 50[\%]) \times \text{Hz}$ 30 Hz(M) + 50%(G) x 2 x (40%(A) - 50%) x 60 Hz = 24 Hz
5	$M[\text{Hz}] \times (G[\%] \times 2 \times (A[\%] - 50[\%]))$ 30 Hz(M) x (50%(G) x 2 x (40%(A) - 50%)) = -3 Hz(Reverse)
6	$M[\text{Hz}] / (G[\%] \times 2 \times (A[\%] - 50[\%]))$ 30 Hz(M) / (50%(G) x 2 x (60% - 40%)) = -300 Hz(Reverse)
7	$M[\text{Hz}] + M[\text{Hz}] \times G[\%] \times 2 \times (A[\%] - 50[\%])$ 30 Hz(M) + 30 Hz(M) x 50%(G) x 2 x (40%(A) - 50%) = 27 Hz

*M: main frequency reference (Hz or rpm)/G: auxiliary reference gain (%)/A: auxiliary frequency reference (Hz or rpm) or gain (%).

**If the frequency setting is changed to rpm, it is converted to rpm instead of Hz.

Note

When the maximum frequency value is high, output frequency deviation may result due to analog input variation and deviations in the calculations.

5.2 Jog operation

The jog operation allows for a temporary control of the inverter. You can enter a jog operation command using the multi-function terminals or by using the [ESC] key on the keypad.


The jog operation is the second highest priority operation, after the dwell operation. If a jog operation is requested while operating the multi-step, up-down, or 3-wire operation modes, the jog operation overrides all other operation modes.

5.2.1 Jog Operation 1-Forward Jog by Multi-function Terminal


The jog operation is available in either forward or reverse direction, using the keypad or multi-function terminal inputs. The table below lists parameter setting for a forward jog operation using the multi-function terminal inputs.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	11	Jog frequency	JOG Frequency	10.00	0.50- Maximum frequency	Hz
	12	Jog operation acceleration time	JOG Acc Time	20.00	0.00-600.00	sec
	13	Jog operation deceleration time	JOG Dec Time	30.00	0.00-600.00	sec
IN	65-71	Px terminal configuration	Px Define(Px: P1-P7)	6 JOG	0-54	-

Forward Jog Description Details

Code	Description
IN-65-71 Px Define	Select the jog frequency from P1- P7 and then select 6. Jog from IN-65-71.  <p>[Terminal settings for jog operation]</p>
DRV-11 JOG Frequency	Set the operation frequency.
DRV-12 JOG Acc Time	Set the acceleration speed.
DRV-13 JOG Dec Time	Set the deceleration speed.

If a signal is entered at the jog terminal while an FX operation command is on, the operation frequency changes to the jog frequency and the jog operation begins.

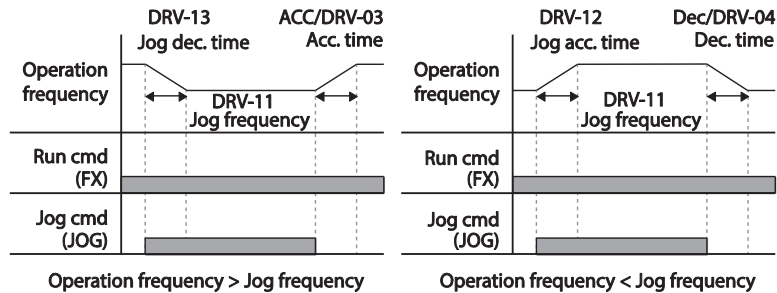


Advanced Features

5.2.2 Jog Operation 2-Fwd/Rev Jog by Multi-function Terminal

For jog operation 1, an operation command must be entered to start operation, but while using jog operation 2, a terminal that is set for a forward or reverse jog also starts an operation. The priorities for frequency, Acc/Dec time and terminal block input during operation in relation to other operating modes (Dwell, 3-wire, up/down, etc.) are identical to jog operation 1. If a different operation command is entered during a jog operation, it is ignored and the operation maintains the jog frequency.

Group	Code	Name	LCD Display	Parameter setting	Setting Range	Unit
DRV	11	Jog frequency	JOG Frequency	10.00	0.50-Maximum frequency	Hz
	12	Jog operation acceleration time	JOG Acc Time	20.00	0.00-600.00	sec
	13	Operation deceleration time	JOG Dec Time	30.00	0.00-600.00	sec
IN	65-71	Px terminal configuration	Px Define(Px: P1-P7)	46 FWD JOG	0-54	-
				47 REV JOG		

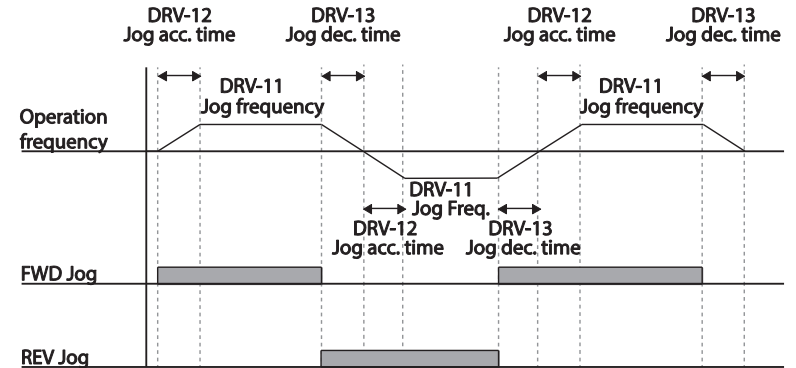


5.2.3 Jog Operation by Keypad

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	90	[ESC] key functions	-	1	JOG Key	-
	06	Command source	Cmd Source*	0	Keypad	-

* Displayed under DRV-06 on the LCD keypad.

Set DRV-90 to 1(JOG Key) and set the DRV-06 code to 0(Keypad). When the [ESC] key is pressed, the SET display light flashes and the jog operation is ready to start. Pressing the [RUN] key starts the operation and the inverter accelerates or decelerates to the designated jog frequency. Releasing the [RUN] key stops the jog operation. Set the Acc/Dec time for the jog operation frequency at DRV-12 and DRV-13.

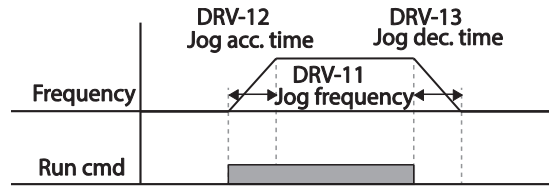

5.3 Up-down Operation

The Acc/Dec time can be controlled through input at the multi-function terminal block. Similar to a flowmeter, the up-down operation can be applied easily to a system that uses the upper-lower limit switch signals for Acc/Dec commands.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
ADV	65	Up-down operation frequency save	U/D Save Mode	1	Yes	0-1
IN	65-71	Px terminal configuration	Px Define(Px: P1-P7)	17	Up	0-54
				18	Down	
				20	U/D Clear	

Advanced Features

Up-down Operation Setting Details


Code	Description
	Select two terminals for up-down operation and set them to 17 (Up) and 18 (Down), respectively. With the operation command input, acceleration begins when the Up terminal signal is on. Acceleration stops and constant speed operation begins when the signal is off.
	During operation, deceleration begins when the Down signal is on. Deceleration stops and constant speed operation begins when both Up and Down signals are entered at the same time.
IN-65-71 Px Define	
	During a constant speed operation, the operating frequency is saved automatically in the following conditions: the operation command (Fx or Rx) is off, a fault trip occurs, or the power is off.
	When the operation command is turned on again, or when the inverter regains the power source or resumes to a normal operation from a fault trip, it resumes operation at the saved frequency. To delete the saved frequency, use the multi-function terminal block. Set one of the multi-function terminals to 20 (U/D Clear) and apply signals to it during constant speed operation. The saved frequency and the up-down operation configuration will be deleted.
ADV-65 U/D Save Mode	

5.4 3-Wire Operation


The 3-wire operation latches the signal input (the signal stays on after the button is released), and is used when operating the inverter with a push button.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	06	Command source	Cmd Source*	1	Fx/Rx - 1	-
IN	65-71	Px terminal configuration	Px Define(Px: P1-P7)	14	3-Wire	0-54

To enable the 3-wire operation, the following circuit sequence is necessary. The minimum input time (t) for 3-wire operation is 1ms, and the operation stops when both forward and reverse operation commands are entered at the same time.

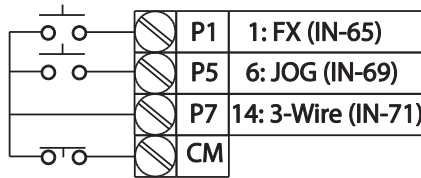

[Terminal connections for 3-wire operation]

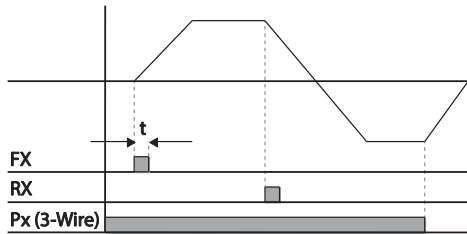

[3-wire operation]

Advanced Features


5.5 Safe Operation Mode

When the multi-function terminals are configured to operate in safe mode, operation commands can be entered in the Safe operation mode only. Safe operation mode is used to safely and carefully control the inverter through the multi-function terminals.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
ADV	70	Safe operation selection	Run En Mode	1	DI Dependent	-
	71	Safe operation stop mode	Run Dis Stop	0	Free-Run	0-2
	72	Safe operation deceleration time	Q-Stop Time	5.0		0.0-600.0 sec
IN	65-71	Px terminal configuration	Px Define(Px: P1-P7)	13	RUN Enable	0-54

Safe Operation Mode Setting Details

Code	Description		
IN-65-71 Px Define	From the multi-function terminals, select a terminal to operate in safe operation mode and set it to 13 (RUN Enable).		
ADV-70 Run En Mode	Setting	Function	
	0	Always Enable	Enables safe operation mode.
	1	DI Dependent	Recognizes the operation command from a multi-function input terminal.
Set the operation of the inverter when the multi-function input terminal in safe operation mode is off.			
ADV-71 Run Dis Stop	Setting	Function	
	1	Free-Run	Blocks the inverter output when the multi-function terminal is off.
	2	Q-Stop	The deceleration time (Q-Stop Time) used in safe operation mode. It stops after deceleration and then the operation can resume only when the operation command is entered again. The operation will not begin if only the multi-function terminal is on.
	3	Q-Stop Resume	The inverter decelerates to the deceleration time (Q-Stop Time) in safe operation mode. It stops after deceleration. Then if the multi-function terminal is on, the operation resumes as soon as the operation command is entered again.
ADV-72 Q-Stop Time	Sets the deceleration time when ADV-71 (Run Dis Stop) is set to 1 (Q-Stop) or 2 (Q-Stop Resume).		

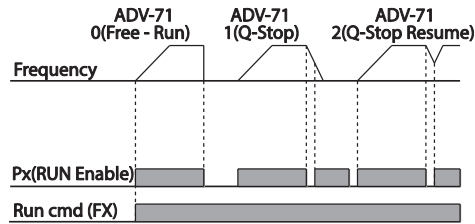


5.6 Dwell Operation

The dwell operation is used to maintain torque during the application and release of the brakes on lift-type loads. Inverter dwell operation is based on the Acc/Dec dwell frequency and the dwell time set by the user. The following points also affect dwell operation:

- Acceleration Dwell Operation:** When an operation command runs, acceleration continues until the acceleration dwell frequency and constant speed is reached within the acceleration dwell operation time (Acc Dwell Time). After the Acc Dwell Time has passed, acceleration is carried out based on the acceleration time and the operation speed that was originally set.
- Deceleration Dwell Operation:** When a stop command is run, deceleration continues until the deceleration dwell frequency and constant speed is reached within the deceleration dwell operation time (Dec Dwell Freq). After the set time has passed, deceleration is carried out based on the deceleration time that was originally set, then the operation stops.

When DRV-09 (Control Mode) is set to 0 (V/F), the inverter can be used for operations with dwell frequency before opening the mechanical brake of lift-type loads, such as an elevator.


Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
ADV	20	Dwell frequency during acceleration	Acc Dwell Freq	5.00	Start frequency – Maximum frequency	Hz
	21	Operation time during acceleration	Acc Dwell Time	0.0	0.0–10.0	s
	22	Dwell frequency during deceleration	Dec Dwell Freq	5.00	Start frequency – Maximum frequency	Hz
	23	Operation time during deceleration	Dec Dwell Time	0.0	0.0–60.0	s

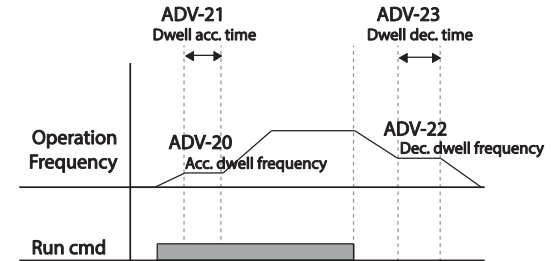


Note

Dwell operation does not work when:

- Dwell operation time is set to 0 sec or dwell frequency is set to 0 Hz. Re-acceleration is attempted from stop or during deceleration, as only the first acceleration dwell operation command is valid.

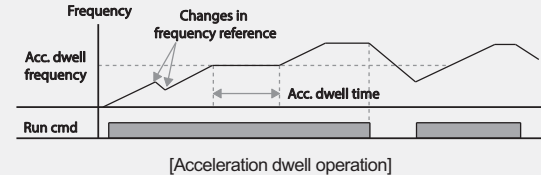

Although deceleration dwell operation is carried out whenever stop commands are entered and the deceleration dwell frequency is passed through, it does not work during a deceleration by simple frequency change (which is not a deceleration due to a stop operation), or during external brake control applications.

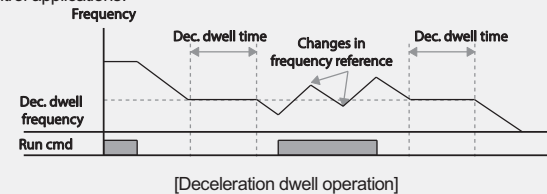

⚠ Caution

When a dwell operation is carried out for a lift-type load before its mechanical brake is released, motors can be damaged or their lifecycle reduced due to overflow current in the motor.

5.7 Slip Compensation Operation

Slip refers to the variation between the setting frequency (synchronous speed) and motor rotation speed. As the load increases there can be variations between the setting frequency and motor rotation speed. Slip compensation is used for loads that require compensation of these speed variations.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	09	Control mode	Control Mode	2	Slip Compen	-
	14	Motor capacity	Motor Capacity	2	0.75 kW (0.75 kW based)	0-15
BAS	11	Number of motor poles	Pole Number	4		2-48
	12	Rated slip speed	Rated Slip	90 (0.75 kW based)		0-3000 rpm
	13	Rated motor current	Rated Curr	3.6 (0.75 kW based)		1.0-1000.0 A
	14	Motor no-load current	Noload Curr	1.6 (0.75 kW based)		0.5-1000.0 A
	16	Motor efficiency	Efficiency	72 (0.75 kW based)		70-100 %
	17	Load inertia rate	Inertia Rate	0 (0.75 kW based)		0-8 -

Advanced Features

Slip Compensation Operation Setting Details

Code	Description	
DRV-09 Control Mode	Set DRV-09 to 2 (Slip Compen) to carry out the slip compensation operation.	
DRV-14 Motor Capacity	Set the capacity of the motor connected to the inverter.	
BAS-11 Pole Number	Enter the number of poles from the motor rating plate.	
BAS-12 Rated Slip	Enter the number of rated rotations from the motor rating plate.	
BAS-13 Rated Curr	Enter the rated current from the motor rating plate.	
BAS-14 Noload Curr	Enter the measured current when the load on the motor axis is removed and when the motor is operated at the rated frequency. If no-load current is difficult to measure, enter a current equivalent to 30-50% of the rated motor current.	
BAS-16 Efficiency	Enter the efficiency from the motor rating place.	
BAS-17 Inertia Rate	Select load inertia based on motor inertia.	
	Setting	Function
	0	Less than 10 times motor inertia
	1	10 times motor inertia
	2-8	More than 10 times motor inertia
	$f_s = f_r - \frac{rpm \times P}{120}$ $f_s = \text{Rated slip frequency}$ $f_r = \text{Rated frequency}$ $rpm = \text{Number of the rated motor rotations}$ $P = \text{Number of motor poles}$	

5.8 PID Control

PID control is one of the most common auto-control methods. It uses a combination of proportional, integral, and differential (PID) control that provides more effective control for automated systems. The functions of PID control that can be applied to the inverter operation are as follows:

Purpose	Function
Speed control	Controls speed by using feedback about the existing speed level of the equipment or machinery to be controlled. Control maintains consistent speed or operates at the target speed.
Pressure control	Controls pressure by using feedback about the existing pressure level of the equipment or machinery to be controlled. Control maintains consistent pressure or operates at the target pressure.
Flow control	Controls flow by using feedback about the amount of existing flow in the equipment or machinery to be controlled. Control maintains consistent flow or operates at a target flow.
Temperature control	Controls temperature by using feedback about the existing temperature level of the equipment or machinery to be controlled. Control maintains a consistent temperature or operates at a target temperature.

5.8.1 PID Basic Operation

PID operates by controlling the output frequency of the inverter, through automated system process control to maintain speed, pressure, flow, temperature and tension.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
APP	01	Application function selection	App Mode	2	Proc PID	0-2
	16	PID output monitor	PID Output	-		-
	17	PID reference monitor	PID Ref Value	-		-
	18	PID feedback monitor	PID Fdb Value	-		-
	19	PID reference setting	PID Ref Set	50.00		-100.00-100.00 %
	20	PID reference source	PID Ref Source	0	Keypad	0-11
	21	PID feedback source	PID F/B Source	0	V1	0-10
	22	PID controller proportional gain	PID P-Gain	50.0		0.0-1000.0 %
	23	PID controller integral time	PID I-Time	10.0		0.0-200.0 sec
	24	PID controller differential time	PID D-Time	0		0-1000 msec
	25	PID controller feed-forward compensation gain	PID F-Gain	0.0		0-1000 %

Learning Advanced Features

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
	26	Proportional gain scale	P Gain Scale	100.0	0.0-100.0	%
	27	PID output filter	PID Out LPF	0	0-10000	ms
	29	PID maximum frequency	PID Limit Hi	60.00	-300.00-300.00	Hz
	30	PID minimum frequency	PID Limit Lo	0.5	-300.00-300.00	Hz
	31	PID output reverse	PID Out Inv	0 No	0-1	-
	32	PID output scale	PID Out Scale	100.0	0.1-1000.0	%
	34	PID controller motion frequency	Pre-PID Freq	0.00	0–Maximum frequency	Hz
	35	PID controller motion level	Pre-PID Exit	0.0	0.0-100.0	%
	36	PID controller motion delay time	Pre-PID Delay	600	0-9999	sec
	37	PID sleep mode delay time	PID Sleep DT	60.0	0-999.9	sec
	38	PID sleep mode frequency	PID Sleep Freq	0.00	0–Maximum frequency	Hz
	39	PID wake-up level	PID WakeUp Lev	35	0-100	%
	40	PID wake-up mode selection	PID WakeUp Mod	0 Below Level	0-2	-
	42	PID controller unit selection	PID Unit Sel	0 %	0-12	-
	43	PID unit gain	PID Unit Gain	100.0	0-300	%
	44	PID unit scale	PID Unit Scale	2 x 1	0-4	-
	45	PID 2 nd proportional gain	PID P2-Gain	100.00	0-1000	%
IN	65-71	Px terminal configuration	Px Define (Px: P1-P7)	22 I-Term Clear	0-54	-
				23 PID Openloop		
				24 P Gain2		

Advanced Features

Learning Advanced Features

PID Basic Operation Setting Details

Code	Description																
APP-01 App Mode	Set the code to 2 (Proc PID) to select functions for the process PID.																
APP-16 PID Output	Displays the existing output value of the PID controller. The unit, gain, and scale that were set at APP- 42-44 are applied on the display.																
APP-17 PID Ref Value	Displays the existing reference value set for the PID controller. The unit, gain, and scale that were set at APP- 42-44 are applied on the display.																
APP-18 PID Fdb Value	Displays the input value of the PID controller that is included in the latest feedback. The unit, gain, and scale that were set at APP- 42-44 are applied on the display.																
APP-19 PID Ref Set	When APP-20 (PID control reference source) is set to 0 (Keypad), the reference value can be entered. If the reference source is set to any other value, the setting values for APP-19 are void.																
APP-20 PID Ref Source	<p>Selects the reference input for the PID control. If the V1 terminal is set to PID feedback source (PID F/B Source), the V1 terminal cannot be set to the PID reference source (PID Ref Source). To set V1 as a reference source, change the feedback source.</p> <table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0 Keypad</td> <td>Keypad</td> </tr> <tr> <td>1 V1</td> <td>-10-10 V input voltage terminal</td> </tr> <tr> <td>3 V2</td> <td>I2 analog input terminal</td> </tr> <tr> <td>4 I2</td> <td>[When analog voltage/current input terminal selection switch (SW2) at the terminal block is set to I (current), input 4-20 mA current. If it is set to V (voltage), input 0–10 V voltage]</td> </tr> <tr> <td>5 Int. 485</td> <td>RS-485 input terminal</td> </tr> <tr> <td>7 FieldBus</td> <td>Communication command via a communication option card</td> </tr> <tr> <td>11 Pulse</td> <td>TI Pulse input terminal (0-32 kHz Pulse input)</td> </tr> </tbody> </table> <p>When using the keypad, the PID reference setting can be displayed at APP-17. When using the LDC keypad, the PID reference setting can be monitored from the config mode (CNF) -06-08, set to 17 (PID Ref Value).</p>	Setting	Function	0 Keypad	Keypad	1 V1	-10-10 V input voltage terminal	3 V2	I2 analog input terminal	4 I2	[When analog voltage/current input terminal selection switch (SW2) at the terminal block is set to I (current), input 4-20 mA current. If it is set to V (voltage), input 0–10 V voltage]	5 Int. 485	RS-485 input terminal	7 FieldBus	Communication command via a communication option card	11 Pulse	TI Pulse input terminal (0-32 kHz Pulse input)
Setting	Function																
0 Keypad	Keypad																
1 V1	-10-10 V input voltage terminal																
3 V2	I2 analog input terminal																
4 I2	[When analog voltage/current input terminal selection switch (SW2) at the terminal block is set to I (current), input 4-20 mA current. If it is set to V (voltage), input 0–10 V voltage]																
5 Int. 485	RS-485 input terminal																
7 FieldBus	Communication command via a communication option card																
11 Pulse	TI Pulse input terminal (0-32 kHz Pulse input)																
APP-21 PID F/B Source	Selects feedback input for PID control. Items can be selected as reference input, except the keypad input (Keypad-1 and Keypad-2). Feedback cannot be set to an input item that is identical to the item selected as the reference. For example, when Ap.20 (Ref Source) is set to 1 (V1), for APP- 21 (PID F/B Source), an input other than the V1 terminal must be selected. When using the LCD keypad, the volume of feedback can be monitored using a code from the config mode (CNF) -06-08, by setting it to 18 (PID Fbk Value).																

Learning Advanced Features

Code	Description																												
APP-22 PID P-Gain, APP-26 P Gain Scale	Sets the output ratio for differences (errors) between reference and feedback. If the Pgain is set to 50%, then 50% of the error is output. The setting range for Pgain is 0.0-1,000%. For ratios below 0.1%, use APP-26 (P Gain Scale).																												
APP-23 PID I- Time	Sets the time to output accumulated errors. When the error is 100%, the time taken for 100% output is set. When the integral time (PID I-Time) is set to 1 second, 100% output occurs after 1 second of the error remaining at 100%. Differences in a normal state can be reduced by PID I Time. When the multi-function terminal block is set to 21(I-Term Clear) and is turned on, all of the accumulated errors are deleted.																												
APP-24 PID D-Time	Sets the output volume for the rate of change in errors. If the differential time (PID D-Time) is set to 1ms and the rate of change in errors per sec is 100%, output occurs at 1% per 10ms.																												
APP-25 PID F-Gain	Sets the ratio that adds the target to the PID output. Adjusting this value leads to a faster response.																												
APP-27 PID Out LPF	Used when the output of the PID controller changes too fast or the entire system is unstable, due to severe oscillation. In general, a lower value (default value=0) is used to speed up response time, but in some cases a higher value increases stability. The higher the value, the more stable the PID controller output is, but the slower the response time.																												
APP-29 PID Limit Hi, APP-30 PID Limit Lo	Limits the output of the controller.																												
APP-32 PID Out Scale	Adjusts the volume of the controller output.																												
APP-42 PID Unit Sel	Sets the unit of the control variable (available only on the LCD keypad).																												
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>%</td> </tr> <tr> <td>1</td> <td>Bar</td> </tr> <tr> <td>2</td> <td>mBar</td> </tr> <tr> <td>3</td> <td>Pa</td> </tr> <tr> <td>4</td> <td>kPa</td> </tr> <tr> <td>5</td> <td>Hz</td> </tr> <tr> <td>6</td> <td>rpm</td> </tr> <tr> <td>7</td> <td>V</td> </tr> <tr> <td>8</td> <td>I</td> </tr> <tr> <td>9</td> <td>kW</td> </tr> <tr> <td>10</td> <td>HP</td> </tr> <tr> <td>11</td> <td>°C</td> </tr> <tr> <td>12</td> <td>°F</td> </tr> </tbody> </table>	Setting	Function	0	%	1	Bar	2	mBar	3	Pa	4	kPa	5	Hz	6	rpm	7	V	8	I	9	kW	10	HP	11	°C	12	°F
	Setting	Function																											
	0	%																											
	1	Bar																											
	2	mBar																											
	3	Pa																											
	4	kPa																											
	5	Hz																											
	6	rpm																											
	7	V																											
	8	I																											
	9	kW																											
10	HP																												
11	°C																												
12	°F																												
APP-43 PID Unit Gain, APP-44 PID Unit	Adjusts the size to fit the unit selected at APP-41 PID Unit Sel.																												

Advanced Features


Learning Advanced Features

Code	Description
Scale	
APP-45 PID P2-Gain	The PID controller's gain can be adjusted using the multi-function terminal. When a terminal is selected from IN-65-71 and set to 24 (P Gain2), and if the selected terminal is entered, the gain set in APP-22 and APP-23 can be switched to the gain set in APP-45.

Note

When the PID switch operation (switching from PID operation to general operation) enters the multi-function input, [%] values are converted to [Hz] values. The normal PID output, PID OUT, is unipolar, and is limited by APP-29 (PID Limit Hi) and APP-30 (PID Limit Lo). A calculation of 100.0% is based on the DRV-20 (Max Freq) parameter setting.

[PID control block diagram]

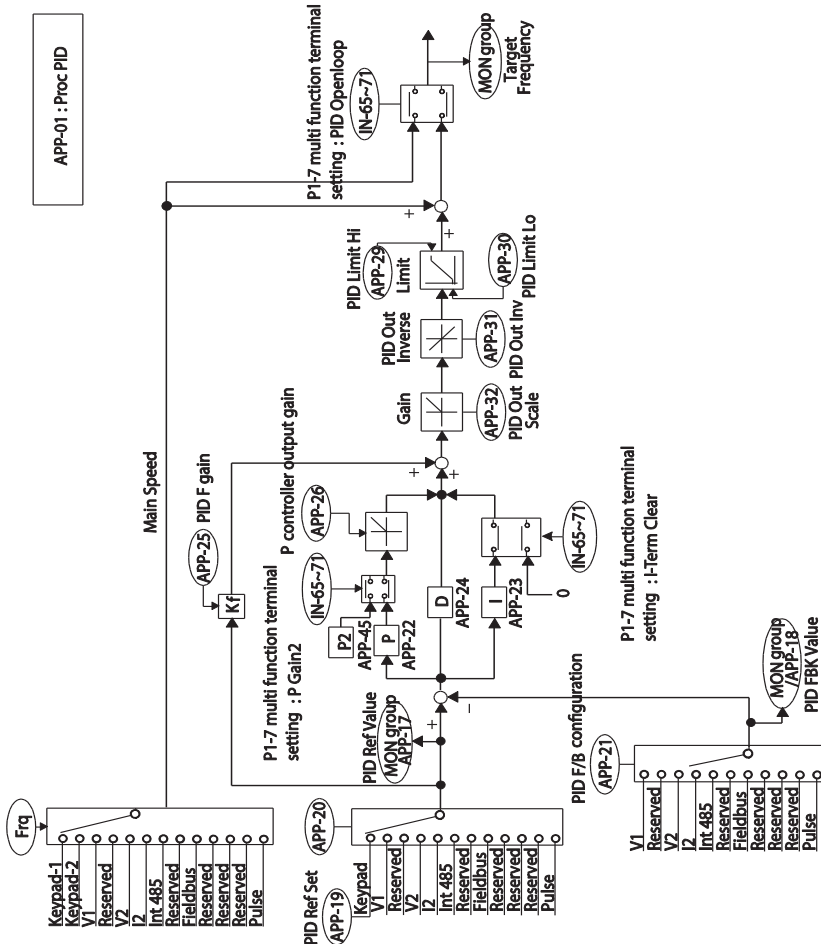


Advanced Features

5.8.2 Pre-PID Operation

When an operation command is entered that does not include PID control, general acceleration occurs until the set frequency is reached. When the controlled variables increase to a particular point, the PID operation begins.

Pre-PID Operation Setting Details

Code	Description
APP-34 Pre-PID Freq	When general acceleration is required, the frequency up to general acceleration is entered. If Pre-PID Freq is set to 30 Hz, the general operation continues until the control variable (PID feedback variable) set at APP- 35 is exceeded.
APP-35 Pre-PID Exit, APP-36 Pre-PID Delay	When the feedback variable of the PID controller is higher than the value set at APP- 35, the PID control operation begins. However, when a value is set for APP-36 (Pre-PID Delay) and a feedback variable less than the value set at APP-35 is maintained for a set amount of time, the "pre-PID Fail" fault trip will occur and the output will be blocked.

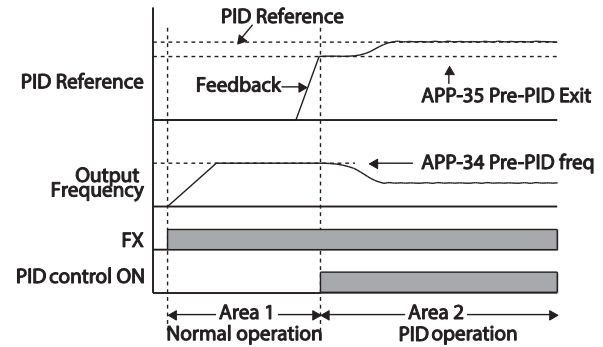


5.8.3 PID Operation Sleep Mode

If the operation continues at a frequency lower than the set condition for PID operation, the PID operation sleep mode starts. When PID operation sleep mode starts, the operation will stop until the feedback exceeds the parameter value set at APP-39 (PID WakeUp Lev).


PID Operation Sleep Mode Setting Details

Code	Description
APP-37 PID Sleep DT, APP-38 PID Sleep Freq	If an operation frequency lower than the value set at APP-38 is maintained for the time set at APP-37, the operation stops and the PID operation sleep mode starts.
APP-39 PID WakeUp Lev, APP-40 PID WakeUp Mod	Starts the PID operation when in PID operation sleep mode. If APP- 40 is set to 0 (Below Level), the PID operation starts when the feedback variable is less than the value set as the APP- 39 parameter setting. If APP- 40 is set to 1 (Above Level), the operation starts when the feedback variable is higher than the value set at APP- 39. If APP- 40 is set to 2 (Beyond Level), the operation starts when the difference between the reference value and the feedback variable is greater than the value set at APP- 39.

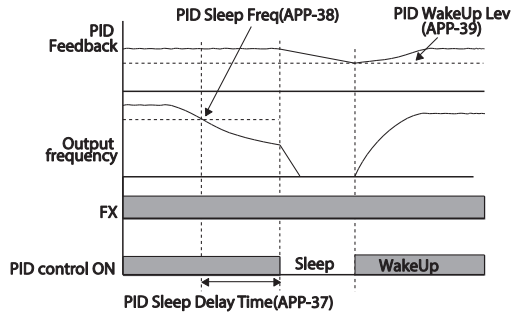

5.8.4 PID Switching (PID Openloop)

When one of the multi-function terminals (IN-65-71) is set to 23 (PID Openloop) and is turned on, the PID operation stops and is switched to general operation. When the terminal turns off, the PID operation starts again.

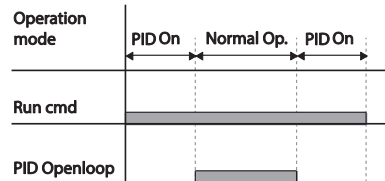

5.9 Auto Tuning

The motor parameters can be measured automatically and can be used for auto torque boost or sensorless vector control.

Example - Auto Tuning Based on 0.75 kW, 200 V Motor

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	14	Motor capacity	Motor Capacity	1 0.75 kW	0-15	-
BAS	11	Motor pole number	Pole Number	4	2-48	-
	12	Rated slip speed	Rated Slip	40	0-3000	rpm
	13	Rated motor current	Rated Curr	3.6	1.0-1000.0	A
	14	Motor no-load current	Noload curr	1.6	0.5-1000.0	A
	15	Motor rated voltage	Rated Volt	220	170-480	V
	16	Motor efficiency	Efficiency	72	70-100	%
	20	Auto tuning	Auto Tuning	0 None	-	-
	21	Stator resistor	Rs	26.00	Depends on the motor setting	Ω
	22	Leakage inductance	Lsigma	179.4	Depends on the motor setting	mH
	23	Stator inductance	Ls	1544	Depends on the motor setting	mH
24	Rotor time constant	Tr	145	25-5000	ms	

Auto Tuning Default Parameter Setting

Motor Capacity (kW)	Rated Current (A)	No-load Current (A)	Rated Slip Frequency(Hz)	Stator Resistor (Ω)	Leakage Inductance (mH)	
200 V	0.2	1.1	0.8	3.33	14.0	40.4
	0.4	2.4	1.4	3.33	6.70	26.9
	0.75	3.4	1.7	3.00	2.600	17.94
	1.5	6.4	2.6	2.67	1.170	9.29
	2.2	8.6	3.3	2.33	0.840	6.63
	3.7	13.8	5.0	2.33	0.500	4.48
	5.5	21.0	7.1	1.50	0.314	3.19
	7.5	28.2	9.3	1.33	0.169	2.844
	11	40.0	12.4	1.00	0.120	1.488
	15	53.6	15.5	1.00	0.084	1.118
	18.5	65.6	19.0	1.00	0.068	0.819
22	76.8	21.5	1.00	0.056	0.948	

Learning Advanced Features

Motor Capacity (kW)	Rated Current (A)	No-load Current (A)	Rated Slip Frequency(Hz)	Stator Resistor (Ω)	Leakage Inductance (mH)	
400 V	0.2	0.7	0.5	3.33	28.00	121.2
	0.4	1.4	0.8	3.33	14.0	80.8
	0.75	2.0	1.0	3.00	7.81	53.9
	1.5	3.7	1.5	2.67	3.52	27.9
	2.2	5.0	1.9	2.33	2.520	19.95
	3.7	8.0	2.9	2.33	1.500	13.45
	5.5	12.1	4.1	1.50	0.940	9.62
	7.5	16.3	5.4	1.33	0.520	8.53
	11	23.2	7.2	1.00	0.360	4.48
	15	31.0	9.0	1.00	0.250	3.38
	18.5	38.0	11.0	1.00	0.168	2.457
	22	44.5	12.5	1.00	0.168	2.844
	30	60.5	16.9	1.00	1.266	2.133
	37	74.4	20.1	1.00	1.014	1.704
	45	90.3	24.4	1.00	0.843	1.422
	55	106.6	28.8	1.00	0.693	1.167
75	141.6	35.4	1.00	0.507	0.852	

Auto Tuning Parameter Setting Details

Code	Description								
BAS-20 Auto Tuning	Select an auto tuning type and run it. Select one of the options and then press the [ENT] key to run the auto tuning.								
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0 None</td> <td>Auto tuning function is not enabled. Also, if you select one of the auto tuning options and run it, the parameter value will revert back to "0" when the auto tuning is complete.</td> </tr> <tr> <td>1 All (rotating type)</td> <td>Measures all motor parameters, including stator resistance (Rs), stator inductance (Lsigma), no-load current (Noload Curr), rotor time constant (Tr), etc., while the motor is rotating. As the motor is rotating while the parameters are being measured, if the load is connected to the motor spindle, the parameters may not be measured accurately. For accurate measurements, remove the load attached to the motor spindle. However, note that the rotor time constant (Tr) must be measured in a stopped position.</td> </tr> <tr> <td>2 All (static type)</td> <td>Measures all parameters while the motor is in the stopped position. Measures stator resistance (Rs), stator inductance (Lsigma), no-load current (Noload Curr), rotor time constant (Tr), etc., while the motor is in the stopped position. As the motor is not rotating while the parameters are measured, the measurements are not affected when the load is connected to the motor spindle. However, when measuring parameters,</td> </tr> </tbody> </table>	Setting	Function	0 None	Auto tuning function is not enabled. Also, if you select one of the auto tuning options and run it, the parameter value will revert back to "0" when the auto tuning is complete.	1 All (rotating type)	Measures all motor parameters, including stator resistance (Rs), stator inductance (Lsigma), no-load current (Noload Curr), rotor time constant (Tr), etc., while the motor is rotating. As the motor is rotating while the parameters are being measured, if the load is connected to the motor spindle, the parameters may not be measured accurately. For accurate measurements, remove the load attached to the motor spindle. However, note that the rotor time constant (Tr) must be measured in a stopped position.	2 All (static type)	Measures all parameters while the motor is in the stopped position. Measures stator resistance (Rs), stator inductance (Lsigma), no-load current (Noload Curr), rotor time constant (Tr), etc., while the motor is in the stopped position. As the motor is not rotating while the parameters are measured, the measurements are not affected when the load is connected to the motor spindle. However, when measuring parameters,
	Setting	Function							
0 None	Auto tuning function is not enabled. Also, if you select one of the auto tuning options and run it, the parameter value will revert back to "0" when the auto tuning is complete.								
1 All (rotating type)	Measures all motor parameters, including stator resistance (Rs), stator inductance (Lsigma), no-load current (Noload Curr), rotor time constant (Tr), etc., while the motor is rotating. As the motor is rotating while the parameters are being measured, if the load is connected to the motor spindle, the parameters may not be measured accurately. For accurate measurements, remove the load attached to the motor spindle. However, note that the rotor time constant (Tr) must be measured in a stopped position.								
2 All (static type)	Measures all parameters while the motor is in the stopped position. Measures stator resistance (Rs), stator inductance (Lsigma), no-load current (Noload Curr), rotor time constant (Tr), etc., while the motor is in the stopped position. As the motor is not rotating while the parameters are measured, the measurements are not affected when the load is connected to the motor spindle. However, when measuring parameters,								

Learning Advanced Features

Code	Description
	do not rotate the motor spindle on the load side.
3	Rs+Lsigma (rotating type) Measures parameters while the motor is rotating. The measured motor parameters are used for auto torque boost or sensorless vector control.
6	Tr (static type) Measures the rotor time constant (Tr) with the motor in the stopped position and Control Mode (DRV-09) is set to IM Sensorless.
BAS-14 Noload Curr, BAS-21 Rs-BAS-24 Tr	Displays motor parameters measured by auto tuning. For parameters that are not included in the auto tuning measurement list, the default setting will be displayed.

⚠ Caution

- Perform auto tuning ONLY after the motor has completely stopped running.
- Before you run auto tuning, check the motor pole number, rated slip, rated current, rated voltage and efficiency on the motor's rating plate and enter the data. The default parameter setting is used for values that are not entered.
- When measuring all parameters after selecting 2 (All - static type) at BAS-20: compared with rotation type auto tuning where parameters are measured while the motor is rotating, parameter values measured with static auto tuning may be less accurate. Inaccuracy of the measured parameters may degrade the performance of sensorless operation. Therefore, run static type auto tuning by selecting 2 (All) only when the motor cannot be rotated (when gearing and belts cannot be separated easily, or when the motor cannot be separated mechanically from the load).

5.10 Sensorless Vector Control

Sensorless vector control is an operation to carry out vector control without the rotation speed feedback from the motor but with an estimation of the motor rotation speed calculated by the inverter. Compared to V/F control, sensorless vector control can generate greater torque at a lower level of current.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	09	Control mode	Control Mode	4 IM Sensorless	-	-
	14	Motor capacity	Motor Capacity	Depends on the motor capacity	0-15	-
	18	Base frequency	Base Freq	50	30-400	Hz
BAS	11	Motor pole number	Pole Number	4	2-48	-
	12	Rated slip speed	Rated Slip	Depends on the motor capacity	0-3000	Hz
	13	Rated motor current	Rated Curr	Depends on the motor capacity	1-1000	A
	14	Motor no-load current	Noload curr	Depends on the motor capacity	0.5-1000	A
	15	Rated motor voltage	Rated Volt	220/380/440/480	170-480	V
	16	Motor efficiency	Efficiency	Depends on the motor capacity	70-100	%
	20	Auto tuning	Auto Tuning	1 All	-	-
CON	09	Pre-Excite time	PreExTime	1.0	0.0-60.0	s
	10	Pre-Excite amount	Flux Force	100.0	100.0-300.0	%
	20	Sensorless second gain display setting	SL2 G View Sel	1 Yes	0-1	-
	21	Sensorless speed controller proportional gain1	ASR-SL P Gain1	Depends on the motor capacity	0-5000	%
	22	Sensorless speed controller integral gain 1	ASR-SL I Gain1	Depends on the motor capacity	10-9999	ms
	23*	Sensorless speed controller proportional gain 2	ASR-SL P Gain2	Depends on the motor capacity	1-1000	%
	24*	Sensorless speed controller integral gain 2	ASR-SL I Gain2	Depends on the motor capacity	1-1000	%
	26*	Flux estimator proportional gain	Flux P Gain	Depends on the motor capacity	10-200	%
	27*	Flux estimator integral gain	Flux I Gain	Depends on the motor capacity	10-200	%
	28*	Speed estimator proportional gain	S-Est P Gain1	Depends on the motor capacity	0-32767	-
	29*	Speed estimator integral gain1	S-Est I Gain1	Depends on the motor capacity	100-1000	-
	30*	Speed estimator integral gain2	S-Est I Gain2	Depends on the motor capacity	100-10000	-

Advanced Features

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
	31*	Sensorless current controller proportional gain	ACR SL P Gain	75	10-1000	-
	32*	Sensorless current controller integral gain	ACR SL I Gain	120	10-1000	-
	52	Torque controller output filter	Torque Out LPF	0	0-2000	ms
	53	Torque limit setting	Torque Lmt Src	0 Keypad-1	0-12	-
	54	Forward direction retrograde torque limit	FWD +Trq Lmt	180.0	0.0-200.0	%
	55	Forward direction regenerative torque limit	FWD -Trq Lmt	180.0	0.0-200.0	%
	56	Reverse direction retrograde torque limit	REV +Trq Lmt	180.0	0.0-200.0	%
	57	Reverse direction regenerative torque limit	REV -Trq Lmt	180.0	0.0-200.0	%
	85*	Flux estimator proportional gain 1	Flux P Gain1	370	100-700	-
	86*	Flux estimator proportional gain 2	Flux P Gain2	0	0-100	-
	87*	Flux estimator proportional gain 3	Flux P Gain3	100	0-500	-
	88*	Flux estimator integral gain 1	Flux I Gain1	50	0-200	-
	89*	Flux estimator integral gain2	Flux I Gain2	50	0-200	-
	90*	Flux estimator integral gain 3	Flux I Gain3	50	0-200	-
	91*	Sensorless voltage compensation 1	SL Volt Comp1	30	0-60	-
	92*	Sensorless voltage compensation 2	SL Volt Comp2	20	0-60	-
	93*	Sensorless voltage compensation 3	SL Volt Comp3	20	0-60	-
	94*	Sensorless field weakening start frequency	SL FW Freq	95.0	80.0-110.0	%
	95*	Sensorless gain switching frequency	SL Fc Freq	2.00	0.00-8.00	Hz

*CON-23-32 and CON-85-95 can be displayed only when CON-20 is set to 1 (Yes).

⚠ Caution

For high-performance operation, the parameters of the motor connected to the inverter output must be measured. Use auto tuning (BAS-20 Auto Tuning) to measure the parameters before you run sensorless vector operation. To run high-performance sensorless vector control, the inverter and the motor must have the same capacity. If the motor capacity is smaller than the inverter capacity by more than two levels, control may be inaccurate. In that case, change the control mode to V/F control. When operating with sensorless vector control, do not connect multiple motors to the inverter output.

5.10.1 Sensorless Vector Control Operation Setting

To run sensorless vector control operation, set DRV-09 (Control Mode) to 4 (IM sensorless), select the capacity of the motor you will use at DRV-14 (Motor Capacity), and select the appropriate codes to enter the rating plate information of the motor.

Code	Input (Motor Rating Plate Information)
DRV-18 Base Freq	Base frequency
BAS-11 Pole Number	Motor pole number
BAS-12 Rated Slip	Rated slip
BAS-13 Rated Curr	Rated current
BAS-15 Rated Volt	Rated voltage
BAS-16 Efficiency	Efficiency (when no information is on the rating plate, default values are used.)

After setting each code, set BAS-20 (Auto tuning) to 1 (All - rotation type) or 2 (All - static type) and run auto tuning. Because rotation type auto tuning is more accurate than static type auto tuning, select 1 (All - rotation type) and run auto tuning if you can rotate the motor.

Note

Excitation Current

A motor can be operated only after magnetic flux is generated by current flowing through a coil. The power supply used to generate the magnetic flux is called the excitation current. The stator coil that is used with the inverter does not have a permanent magnetic flux, so the magnetic flux must be generated by supplying an excitation current to the coil before operating the motor.

Sensorless Vector Control Operation Setting Details

Code	Description						
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>No</td> </tr> <tr> <td>1</td> <td>Yes</td> </tr> </tbody> </table>	Setting	Function	0	No	1	Yes
Setting	Function						
0	No						
1	Yes						
CON-20 SL2 G View Sel	<p>Does not display sensorless (II) vector control gain code.</p> <p>Allows the user to set various gains applied when the motor rotates faster than medium speed (approx. 1/2 of the base frequency) through sensorless (II) vector control.</p>						
CON-09 PreExTime	<p>Codes available when setting to 1 (Yes): CON-23 ASR-SL P Gain2/CON-24 ASR-SL I Gain2/CON-26 Flux P Gain/CON-27 Flux I Gain Gain3/CON-28 S-Est P Gain1/CON-29 S-Est I Gain1/CON-30 S-Est I Gain1/CON-31 ACR SL P Gain/CON-32 ACR SL I Gain</p> <p>Sets pre-excitation time. Pre-excitation is used to start the operation after performing excitation up to the motor's rated flux.</p> <p>Allows for the reduction of the pre-excitation time. The motor flux increases up to the rated flux with the time constant as shown in the following figure. To reduce the time taken to reach the rated flux, a higher motor flux base value than the rated flux must be provided. When the magnetic flux reaches the rated flux, the provided motor flux base value is reduced.</p>						
CON-10 Flux Force	<p>Sets the zero-speed control time (hold time) in the stopped position. The output is blocked after zero-speed operation for a set period when the motor decelerates and is stopped by a stop command.</p>						
CON-21 ASR-SL P	Changes the speed PI controller gain during sensorless vector control. For						

Code	Description								
Gain1, CON-22 ASR-SL I Gain1	a PI speed controller, P gain is a proportional gain for the speed deviation. If speed deviation becomes higher than the torque the output command increases accordingly. As the value increases, the faster the speed deviation decreases. The speed controller I gain is the integral gain for speed deviation. It is the time taken for the gain to reach the rated torque output command while a constant speed deviation continues. The lower the value becomes, the faster the speed deviation decreases.								
CON-23 ASR-SL P Gain2, CON-24 ASR-SL I Gain2	Appears only when 1 (Yes) is selected for CON-20 (SL2 G view Sel). The speed controller gain can be increased to more than the medium speed for sensorless vector control. CON-23 ASR-SL P Gain2 is set as a percentage of the low speed gain CON-21 ASR-SL P Gain1 - if P Gain 2 is less than 100.0%, the responsiveness decreases. For example, if CON-21 ASR-SL P Gain1 is 50.0% and CON-23 ASR-SL P Gain2 is 50.0%, the actual middle speed or faster speed controller P gain is 25.0%. CON-24 ASR-SL I Gain2 is also set as a percentage of the CON-22 ASR-SL I Gain1. For I gain, the smaller the I gain 2 becomes, the slower the response time becomes. For example, if CON-22 ASR-SL I Gain1 is 100ms and CON-24 ASR-SL I Gain2 is 50.0%, the middle speed or faster speed controller I gain is 200 ms. The controller gain is set according to the default motor parameters and Acc/Dec time.								
CON-26 Flux P Gain, CON-27 Flux I Gain, CON-85-87 Flux P Gain13, CON-88-90 Flux I Gain1-3	Sensorless vector control requires the rotor flux estimator. For the adjustment of flux estimator gain, refer to <u>Sensorless Vector Control Operation Guide to on page 139.</u>								
CON-28 S-Est P Gain1, CON-29 S-Est I Gain1, CON-30 S-Est I Gain2	Speed estimator gain for sensorless vector control can be adjusted. To adjust speed estimator gain, refer to <u>Sensorless Vector Control Operation Guide to on page 139.</u>								
CON-31 ACR SL P Gain, CON-32 ACR SL I Gain	Adjusts the P and I gains of the sensorless current controller. For the adjustment of sensorless current controller gain, refer to <u>Sensorless Vector Control Operation Guide to on page 139.</u>								
CON-53 Torque Lmt Src	Select a type of torque limit setting, using the keypad, terminal block analog input (V1 and I2) or communication power. When setting torque limit, adjust the torque size by limiting the speed controller output. Set the retrograde and regenerative limits for forward and reverse operation. <table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>KeyPad-1 Sets the torque limit with the keypad.</td> </tr> <tr> <td>1</td> <td>KeyPad-2</td> </tr> <tr> <td>2</td> <td>V1 Sets the torque limit with the analog input terminal</td> </tr> </tbody> </table>	Setting	Function	0	KeyPad-1 Sets the torque limit with the keypad.	1	KeyPad-2	2	V1 Sets the torque limit with the analog input terminal
Setting	Function								
0	KeyPad-1 Sets the torque limit with the keypad.								
1	KeyPad-2								
2	V1 Sets the torque limit with the analog input terminal								

Advanced Features

Code	Description									
	<table border="1"> <tr> <td>4</td> <td>V2</td> <td>of the terminal block.</td> </tr> <tr> <td>5</td> <td>I2</td> <td></td> </tr> <tr> <td>6</td> <td>Int 485</td> <td>Sets the torque limit with the communication terminal of the terminal block.</td> </tr> </table> <p>The torque limit can be set up to 200% of the rated motor torque.</p>	4	V2	of the terminal block.	5	I2		6	Int 485	Sets the torque limit with the communication terminal of the terminal block.
4	V2	of the terminal block.								
5	I2									
6	Int 485	Sets the torque limit with the communication terminal of the terminal block.								
CON-54 FWD +Trq Lmt	Sets the torque limit for forward retrograde (motoring) operation.									
CON-55 FWD -Trq Lmt	Sets the torque limit for forward regenerative operation.									
CON-56 REV +Trq Lmt	Sets the torque limit for reverse retrograde (motoring) operation.									
CON-57 REV -Trq Lmt	Sets the torque limit for reverse regenerative operation.									
IN-02 Torque at 100%	Sets the maximum torque. For example, if IN-02 is set to 200% and an input voltage (V1) is used, the torque limit is 200% when 10 V is entered. However, when the V1 terminal is set up with the factory default setting and the torque limit setup uses a method other than the keypad, check the parameter settings in the monitor mode. In the Config Mode CNF.21-23 (only displayed when using LCD keypad), select 21(Torque limit).									
CON-91-93 SL Volt Comp1-3	Adjust output voltage compensation values for sensorless vector control. For output voltage compensation, refer to <u>Sensorless Vector Control Operation Guide to on page 139.</u>									
CON-52 Torque Out LPF	Sets the time constant for torque command by setting the torque controller output filter.									

⚠ Caution

Adjust the controller gain according to the load's characteristics. However, the motor can overheat or the system may become unstable depending on the controller gain settings.

Note

Speed controller gain can improve the speed control waveform while monitoring the changes in speed. If speed deviation does not decrease quickly, increase the speed controller P gain or decrease I gain (time in ms). However, if the P gain is increased too high or I gain is decreased too low, severe vibration may occur. If oscillation occurs in the speed waveform, try to increase I gain (ms) or reduce P gain to adjust the waveform.

5.10.2 Sensorless Vector Control Operation Guide

Problem	Relevant function code	Troubleshooting
The amount of starting torque is insufficient.	BAS-24 Tr CON-09 PreExTime CON-10 Flux Force CON-31 ACR SL P Gain CON-54-57 Trq Lmt CON-93 SL Volt Comp3	Set the value of CON- 90 to be more than 3 times the value of BAS-24 or increase the value of CON-10 by increments of 50%. If the value of CON-10 is high, an overcurrent trip at start can occur. In this case, reduce the value of CON-31 by decrements of 10.
		Increase the value of Trg Lmt (CON-54-57) by increments of 10%. Increase the value of CON-93 by increments of 5.
The output frequency is higher than the base frequency during no-load operation at low speed (10 Hz or lower).	CON-91 SL Volt Comp1	Decrease the value of CON-91 by decrements of 5.
The motor hunts or the amount of torque is not sufficient while the load is increasing at low speed (10 Hz or lower).	CON-04 Carrier Freq CON-21 ASR-SL P Gain1 CON-22 ASR-SL I Gain1 CON-93 SL Volt Comp3	If the motor hunts at low speed, increase the value of CON-22 by increments of 50m/s, and if hunting does not occur, increase the value of CON-21 to find the optimal operating condition. If the amount of torque is insufficient, increase the value of CON-93 by increments of 5. If the motor hunts or the amount of torque is insufficient in the 5-10 Hz range, decrease the value of CON-04 by increments of 1 kHz (if CON-04 is set to exceed 3 kHz).
The motor hunts or overcurrent trip occurs in regenerative load at low speed (10 Hz or lower).	CON-92 SL Volt Comp2 CON-93 SL Volt Comp3	Increase the value of CON-92-93 by increments of 5 at the same time.
Over voltage trip occurs due to sudden acceleration/deceleration or sudden load fluctuation (with no brake resistor installed) at mid speed (30 Hz or higher).	CON-24 ASR-SL I Gain2	Decrease the value of CON-2 by decrements of 5%.
Over current trip occurs due to sudden load fluctuation at high speed (50 Hz or higher).	CON-54-57 Trq Lmt CON-94 SL FW Freq	Decrease the value of CON-54-57 by decrements of 10% (if the parameter setting is 150% or higher). Increase/decrease the value of CON-94 by increments/decrements of 5% (set below 100%).
The motor hunts when the load increases from the	CON-22 ASR-SL I Gain1	Increase the value of CON-22 by increments of 50m/s or decrease the value of CON-24 by

Advanced Features

Problem	Relevant function code	Troubleshooting
base frequency or higher.	CON-23 ASR-SL I Gain2	decrements of 5%.
The motor hunts as the load increases.	CON-28 S-Est P Gain1 CON-29 S-Est I Gain1	At low speed (10 Hz or lower), increase the value of CON-29 by increments of 5. At mid speed (30 Hz or higher), increase the value of CON-28 by increments of 500. If the parameter setting is too extreme, over current trip may occur at low speed.
The motor speed level decreases.	BAS-20 Auto Tuning	Select 6. Tr (static type) from BAS- 24 and run BAS-24 Rotor time constant tuning.

*Hunting: Symptom of irregular vibration of the equipment.

5.11 Kinetic Energy Buffering Operation

When the input power supply is disconnected, the inverter's DC link voltage decreases, and a low voltage trip occurs blocking the output. A kinetic energy buffering operation uses regenerative energy generated by the motor during the blackout to maintain the DC link voltage. This extends the time for a low voltage trip to occur, after an instantaneous power interruption.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
CON	77	Kinetic energy buffering selection	KEB Select	1 Yes	-	-
	78	Kinetic energy buffering start level	KEB Start Lev	130	110-140	%
	79	Kinetic energy buffering stop level	KEB Stop Lev	135	125-145	%
	80	Kinetic energy buffering gain	KEB Gain	1000	1-20000	-

Kinetic Energy Buffering Operation Setting Details

Code	Description						
CON-77 KEB Select	Select the kinetic energy buffering operation when the input power is disconnected.						
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0 No</td> <td>General deceleration is carried out until a low voltage trip occurs.</td> </tr> <tr> <td>1 Yes</td> <td>The inverter power frequency is controlled and the regeneration energy from the motor is charged by the inverter.</td> </tr> </tbody> </table>	Setting	Function	0 No	General deceleration is carried out until a low voltage trip occurs.	1 Yes	The inverter power frequency is controlled and the regeneration energy from the motor is charged by the inverter.
	Setting	Function					
0 No	General deceleration is carried out until a low voltage trip occurs.						
1 Yes	The inverter power frequency is controlled and the regeneration energy from the motor is charged by the inverter.						
CON-78 KEB Start Lev, CON-79 KEB Stop Lev	Sets the start and stop points of the kinetic energy buffering operation. The set values must be based on the low voltage trip level as 100% and the stop level (CON- 79) must be set higher than the start level (CON-78).						

Code	Description
CON-80 KEB Gain	This is the gain used to control the kinetic energy buffering operation using the amount of load-side inertia moment. If the load inertia is high, use a lower gain value, and if the load inertia is low, use a higher gain value. If input power is disconnected and the motor vibrates severely while the kinetic energy buffering operation is carried out, set the gain (CON-80: KEB Gain) at half the previously set value. If the gain is lowered too much, a low voltage trip may occur during the kinetic energy buffering operation (KEB).

⚠ Caution

Depending on the duration of Instantaneous power interruptions and the amount of load inertia, a low voltage trip may occur even during a kinetic energy buffering operation. Motors may vibrate during kinetic energy buffering operation for some loads except variable torque load (for example, fan or pump loads).

5.12 Torque Control

When the motor output torque is greater than the load, the speed of motor becomes too fast. To prevent this, set the speed limit. (The torque control function cannot be used while the speed limit function is running.)

The torque control function controls the motor to maintain the preset torque value. The motor rotation speed maintains the speed constantly when the output torque and load torque of the motor keep a balance. Therefore, the motor rotation speed is decided by the load when controlling the torque.

Torque control setting option

Group	Code	Name	LCD Display	Parameter Setting	Unit
DRV	09	Control mode	Control Mode	4 IM Sensorless	-
DRV	10	Torque control	Torque Control	1 Yes	-

Torque control setting option details

Group	Code	Name	Parameter Setting	Unit
DRV	02	Cmd Torque	- 0.0	%
DRV	08	Trq Ref Src	0 Keypad-1	-
DRV	09	Control Mode	4 IM Sensorless	-
DRV	10	Torque Control	1 Yes	-
DRV	22	(+) Trq Gain	- 50-150	%
DRV	23	(-) Trq Gain	- 50-150	%
BAS	20	Auto Tuning	1 Yes	-
CON	62	Speed LmtSrc	0 Keypad-1	-

Group	Code	Name	Parameter Setting	Unit
CON	63	FWD Speed Lmt	- 60.00	Hz
CON	64	REV Speed Lmt	- 60.00	Hz
CON	65	Speed Lmt Gain	- 100	%
IN	65-71	Px Define	35 Speed/Torque	-
OUT	31-33	Relay x or Q1	27 Torque Dect	-
OUT	59	TD Level	- 100	%
OUT	60	TD Band	- 5.0	%

Note

- To operate in torque control mode, basic operation conditions must be set. For more information, refer to
-
- *Sensorless Vector* Control Operation Guide to on page [139](#).
- The torque control cannot be used in a low speed regeneration area or low load conditions.
- If you change the rotation direction while operating, an over current trip or low speed reverse direction error will be generated.

Torque reference setting option

The torque reference can be set using the same method as the target frequency setting. If Torque Control Mode is selected, the target frequency is not used.

Group	Code	Name	LCD Display	Parameter Setting	Unit
DRV	08	Torque reference setting	Trq Ref Src	0 Keypad-1	-
				1 Keypad-2	
				2 V1	
				6 Int 485	
CON	02	Torque command	Cmd Torque	-180-180	%
				0 Keypad-1	
	62	Speed limit setting	Speed LmtSrc	1 Keypad-2	-
				2 V1	
				4 V2	
				5 I2	
				6 Int 485	
				63	
	64	Negative-direction speed limit	REV Speed Lmt	0-Maximum frequency	Hz

Group	Code	Name	LCD Display	Parameter Setting	Unit
	65	Speed limit operation gain	Speed Lmt Gain	100-5000	%
IN	02	Torque at maximum analog input	Torque at 100%	-12.00-12.00	mA
CNF	21	Monitor mode display 1	Monitor Line-1	1	Speed
	22	Monitor mode display 2	Monitor Line-2	2	Output Current
	23	Monitor mode display 3	Monitor Line-3	3	Output Voltage

Torque reference setting details

Code	Description									
DRV-08	Select an input method to use as the torque reference. <table border="1"> <thead> <tr> <th>Parameter Setting</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0 Keypad-1</td> <td rowspan="2">Sets the torque reference with the keypad.</td> </tr> <tr> <td>1 Keypad-2</td> </tr> <tr> <td>2 V1</td> <td>Sets the torque reference using the voltage or current input terminal of the terminal block.</td> </tr> <tr> <td>6 Int 485</td> <td>Sets the torque reference with the communication terminal of the terminal block.</td> </tr> </tbody> </table>	Parameter Setting	Description	0 Keypad-1	Sets the torque reference with the keypad.	1 Keypad-2	2 V1	Sets the torque reference using the voltage or current input terminal of the terminal block.	6 Int 485	Sets the torque reference with the communication terminal of the terminal block.
	Parameter Setting	Description								
	0 Keypad-1	Sets the torque reference with the keypad.								
	1 Keypad-2									
	2 V1	Sets the torque reference using the voltage or current input terminal of the terminal block.								
6 Int 485	Sets the torque reference with the communication terminal of the terminal block.									
CON-02	The torque reference can be set up to 180% of the maximum rated motor torque.									
IN-02	Sets the maximum torque. You can check the set maximum torque in Monitor (MON) mode.									
CNF-21~23	Select a parameter from the Config(CNF) mode and then select(19 Torque Ref).									

Advanced Features

Speed limit details


Code	Description								
CON-62	Select a method for setting the speed limit value. <table border="1"> <thead> <tr> <th>Parameter Setting</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0 Keypad-1</td> <td rowspan="2">Sets the speed limit value with the keypad.</td> </tr> <tr> <td>1 Keypad-2</td> </tr> <tr> <td>2 V1</td> <td rowspan="2">Sets the speed limit value using the same method as the frequency command. You can check the setting in Monitor (MON) mode.</td> </tr> <tr> <td>6 Int 485</td> </tr> </tbody> </table>	Parameter Setting	Description	0 Keypad-1	Sets the speed limit value with the keypad.	1 Keypad-2	2 V1	Sets the speed limit value using the same method as the frequency command. You can check the setting in Monitor (MON) mode.	6 Int 485
	Parameter Setting	Description							
	0 Keypad-1	Sets the speed limit value with the keypad.							
	1 Keypad-2								
	2 V1	Sets the speed limit value using the same method as the frequency command. You can check the setting in Monitor (MON) mode.							
6 Int 485									
CON-63	Sets the positive-direction speed limit value.								
CON-64	Sets the negative-direction speed limit value.								
CON-65	Sets the decrease rate of the torque reference when the motor speed exceeds the speed limit value.								
CNF-21~23	Select a parameter from the Config (CNF) mode and then select21 Torque Bias.								
IN 65-71	Select a multi-functional input terminal to set as the (35 Speed/Torque). If you turn on the terminal while the operation is stopped, it operates in vector control (speed limit) mode.								

5.13 Energy Saving Operation

5.13.1 Manual Energy Saving Operation

If the inverter output current is lower than the current which is set at BAS-14 (Noload Curr), the output voltage must be reduced as low as the level set at ADV-51 (Energy Save). The voltage before the energy saving operation starts will become the base value of the percentage. Manual energy saving operation will not be carried out during acceleration and deceleration.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
ADV	50	Energy saving operation	E-Save Mode	1	Manual	-
	51	Energy saving amount	Energy Save	30		0~30

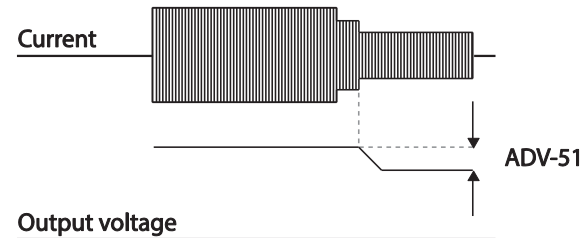

5.13.2 Automatic Energy Saving Operation

The amount of energy saving can be automatically calculated based on the rated motor current (BAS-13) and the no-load current (BAS-14). From the calculations, the output voltage can be adjusted.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
ADV	50	Energy saving operation	E-Save Mode	2	Auto	-

ⓘ Caution

If operation frequency is changed or acceleration and /deceleration is carried out by a stop command during the energy saving operation, the actual Acc/Dec time may take longer than the set Acc/Dec time due to the time required to return to the general operation from the energy saving operation.

5.14 Speed Search Operation

This operation is used to prevent fault trips that can occur while the inverter output voltage is disconnected and the motor is idling. Because this feature estimates the motor rotation speed based on the inverter output current, it does not give the exact speed.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
CON	70	Speed search mode selection	SS Mode	0 Flying Start-1	-	-
	71	Speed search operation selection	Speed Search	0000*	-	bit
	72	Speed search reference current	SS Sup-Current	- Below 75 kW	80–200	%
	73	Speed search proportional gain	SS P-Gain	100	0–9999	-
	74	Speed search integral gain	SS I-Gain	200	0–9999	-
OUT	75	Output block time before speed search	SS Block Time	1.0	0–60	sec
	31	Multi-function relay 1 item	Relay 1	1 Speed	-	-
	33	Multi-function output 1 item	Q1 Define	9 Search	-	-

Advanced Features

Speed Search Operation Setting Details

Code	Description	
CON-70 SS Mode	Select a speed search type.	
	Setting	Function
	0 Flying Start-1	The speed search is carried out as it controls the inverter output current during idling below the CON-72 (SS Sup-Current) parameter setting. If the direction of the idling motor and the direction of operation command at restart are the same, a stable speed search function can be performed at about 10 Hz or lower. However, if the direction of the idling motor and the direction of operation command at restart are different, the speed search does not produce a satisfactory result because the direction of idling cannot be established.
1 Flying Start-2	The speed search is carried out as it PI controls the ripple current which is generated by the counter electromotive force during no-load rotation. Because this mode establishes the direction of the idling motor (forward/reverse), the speed search function is stable regardless of the direction of the idling motor and direction of operation command. However because the ripple current is used which is generated by the counter electromotive force at idle (the counter electromotive force is proportional to the idle speed), the idle frequency is not determined accurately and re-acceleration may	

Code	Description
	start from zero speed when the speed search is performed for the idling motor at low speed (about 10 - 15 Hz, though it depends on motor characteristics).

Speed search can be selected from the following 4 options. If the top display segment is on it is enabled (On), and if the bottom segment is on it is disabled (Off).

Item	Bit Setting On Status	Bit setting Off Status
LCD keypad		

Type and Functions of Speed Search Setting


Setting				Function
bit4	bit3	bit2	bit1	
			✓	Speed search for general acceleration
		✓		Initialization after a fault trip
	✓			Restart after instantaneous power interruption
✓				Starting with power-on

CON-71
Speed
Search

- **Speed search for general acceleration:** If bit 1 is set to 1 and the inverter operation command runs, acceleration starts with speed search operation. When the motor is rotating underload, a fault trip may occur if the operation command is run for the inverter to provide output voltage. The speed search function prevents such fault trip from occurring.
- **Initialization after a fault trip:** If Bit 2 is set to 1 and PRT-08 (RST Restart) is set to 1 (Yes), the speed search operation automatically accelerates the motor to the operation frequency used before the fault trip, when the [Reset] key is pressed (or the terminal block is initialized) after a fault trip.
- **Automatic restart after reset of a fault trip:** If bit 3 is set to 1, and if a low voltage trip occurs due to a power interruption but the power is restored before the internal power shuts down, the speed search operation accelerates the motor back to its frequency reference before the low voltage trip.

If an instantaneous power interruption occurs and the input power is disconnected, the inverter generates a low voltage trip and blocks the output. When the input power returns, the operation frequency before the low voltage trip and the voltage is increased by the inverter's inner PI control.

If the current increases above the value set at CON-72, the voltage stops increasing and the frequency decreases (t1 zone). If the current decreases below the value set at CON-27, the voltage increases again and the frequency stops decelerating (t2 zone). When the normal frequency and voltage are resumed, the speed search

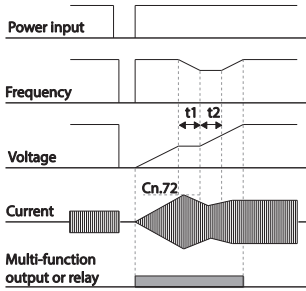Code	Description
	<p>operation accelerates the motor back to its frequency reference before the fault trip.</p> 
	<ul style="list-style-type: none"> • Starting with power-on: Set bit 4 to 1 and ADV-10 (Power-on Run) to 1 (Yes). If inverter input power is supplied while the inverter operation command is on, the speed search operation will accelerate the motor up to the frequency reference.
CON-72 SS Sup-Current	The amount of current flow is controlled during speed search operation based on the motor's rated current. If CON-70 (SS mode) is set to 1 (Flying Start-2), this code is not visible.
CON-73 SS P/I-Gain, CON-75 SS Block Time	The P/I gain of the speed search controller can be adjusted. If CON-70 (SS Mode) is set to 1 (Flying Start-2), different factory defaults based on motor capacity are used and defined in DRV-14 (Motor Capacity).

Advanced Features

Note

- If operated within the rated output, the SX2000 series inverter is designed to withstand instantaneous power interruptions within 15 ms and maintain normal operation. Based on the rated heavy load current, safe operation during an instantaneous power interruption is guaranteed for 200 V and 400 V inverters (whose rated input voltages are 200-230 VAC and 380-460 VAC respectively).
- The DC voltage inside the inverter may vary depending on the output load. If the power interruption time is longer than 15 ms, a low voltage trip may occur.

ⓘ Caution

When operating in sensorless II mode while the starting load is in free-run, the speed search function (for general acceleration) must be set for smooth operation. If the speed search function is not set, an overcurrent trip or overload trip may occur.


5.15 Auto Restart Settings

When inverter operation stops due to a fault and a fault trip is activated, the inverter automatically restarts based on the parameter settings.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
PRT	08	Select start at trip reset	RST Restart	0 No	0-1	-
	09	Auto restart count	Retry Number	0	0-10	-
	10	Auto restart delay time	Retry Delay	1.0	0.0-60.0	s
BAS	71	Select speed search operation	Speed Search	-	0000*-1111	bit
	72	Speed search startup current	SS Sup-Current	150	80-200	%
	73	Speed search proportional gain	SS P-Gain	100	0-9999	
	74	Speed search integral gain	SS I-Gain	200	0-9999	
	75	Output block time before speed search.	SS Block Time	1.0	0.0-60.0	s

Auto Restart Setting Details

Code	Description
PRT-08 RST Restart, PRT-09 Retry Number, PRT-10 Retry Delay	<p>Only operates when PRT-08 (RST Restart) is set to 1(Yes). The number of attempts to try the auto restart is set at PRT-09 (Auto Restart Count). If a fault trip occurs during operation, the inverter automatically restarts after the set time programmed at PRT-10 (Retry Delay). At each restart, the inverter counts the number of tries and subtracts it from the number set at PRT-09 until the retry number count reaches 0.</p> <p>After an auto restart, if a fault trip does not occur within 60 sec, it will increase the restart count number. The maximum count number is limited by the number set at PRT-09 (Auto Restart Count).</p> <p>If the inverter stops due to low voltage, emergency stop (Bx), inverter overheating, or hardware diagnosis, an auto restart is not activated. At auto restart, the acceleration options are identical to those of speed search operation. Codes CON-72-75 can be set based on the load. Information about the speed search function can be found on page 144.</p>
	<p>ⓘ Caution</p> <p>If operation frequency is changed or acceleration and /deceleration is carried out by a stop command during the energy saving operation, the actual Acc/Dec time may take longer than the set Acc/Dec time due to the time required to return to the general operation from the energy saving operation.</p>

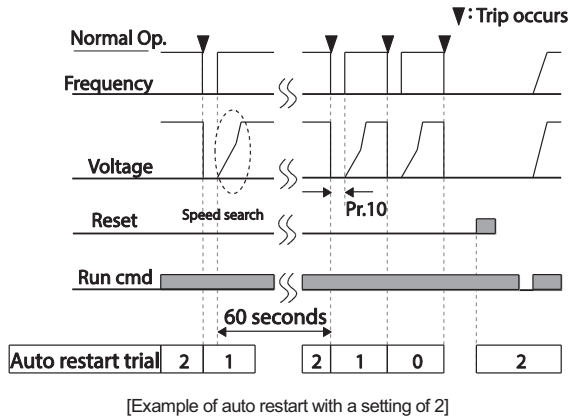

Advanced Features

ⓘ Caution

If the auto restart number is set, be careful when the inverter resets from a fault trip. The motor may automatically start to rotate.

5.16 Operational Noise Settings (carrier frequency settings)

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
CON	04	Carrier Frequency	Carrier Freq	3.0	1.0–15.0	kHz
	05	Switching Mode	PWM* Mode	0	Normal PWM	0–1

* PWM: Pulse width modulation

Operational Noise Setting Details

Code	Description
CON-04 Carrier Freq	Adjust motor operational noise by changing carrier frequency settings. Power transistors (IGBT) in the inverter generate and supply high frequency switching voltage to the motor. The switching speed in this process refers to the carrier frequency. If the carrier frequency is set high, it reduces operational noise from the motor, and if the carrier frequency is set low, it increases operational noise from the motor.

Code	Description																	
CON-05 PWM Mode	<p>The heat loss and leakage current from the inverter can be reduced by changing the load rate option at CON-05 (PWM Mode). Selecting 1 (LowLeakage PWM) reduces heat loss and leakage current, compared to when 0 (Normal PWM) is selected. However, it increases the motor noise. Low leakage PWM uses 2 phase PWM modulation mode, which helps minimize degradation and reduces switching loss by approximately 30%.</p> <table border="1"> <thead> <tr> <th rowspan="2">Item</th> <th colspan="2">Carrier frequency</th> </tr> <tr> <th>1.0 kHz Low Leakage PWM</th> <th>15 kHz Normal PWM</th> </tr> </thead> <tbody> <tr> <td>Motor noise</td> <td>↑</td> <td>↓</td> </tr> <tr> <td>Heat generation</td> <td>↓</td> <td>↑</td> </tr> <tr> <td>Noise generation</td> <td>↓</td> <td>↑</td> </tr> <tr> <td>Leakage current</td> <td>↓</td> <td>↑</td> </tr> </tbody> </table>	Item	Carrier frequency		1.0 kHz Low Leakage PWM	15 kHz Normal PWM	Motor noise	↑	↓	Heat generation	↓	↑	Noise generation	↓	↑	Leakage current	↓	↑
Item	Carrier frequency																	
	1.0 kHz Low Leakage PWM	15 kHz Normal PWM																
Motor noise	↑	↓																
Heat generation	↓	↑																
Noise generation	↓	↑																
Leakage current	↓	↑																


Note

Carrier Frequency at Factory Default Settings (0.4–22 kW)

- Normal load: 2 kHz (Max 5 kHz)
- Heavy load: 3 kHz (Max 15 kHz)

SX2000 Series Inverter Derating Standard

- SX2000 inverter is designed to respond to two types of load rates. Heavy load (heavy duty) and normal load (normal duty). The overload rate represents an acceptable load amount that exceeds rated load, and is expressed in a ratio based on the rated load and the duration. The overload capacity on the SX2000 series inverter is 150%/1min for heavy loads, and 120%/1min for normal loads.
- The current rating differs from the load rating, as it also has an ambient temperature limit. For derating specifications, refer to [11.8 Continuous Rated Current Derating](#) on page 323.
- Current rating for ambient temperature at normal load operation.

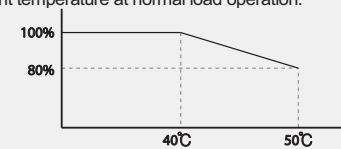

[Ambient temperature versus current rating at normal load]

- Guaranteed carrier frequency for current rating by load.

Inverter capacity	Normal load	Heavy load
30–45 kW	2 kHz	6 kHz
55–75 kW	2 kHz	4 kHz

5.17 2nd Motor Operation

The 2nd motor operation is used when a single inverter switch operates two motors. Using the 2nd motor operation, a parameter for the 2nd motor is set. The 2nd motor is operated when a multi-function terminal input defined as a 2nd motor function is turned on.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
IN	65-71	Px terminal configuration	Px Define(Px: P1-P7)	26	2nd Motor	-

2nd Motor Operation Setting Details


Code	Description
IN-65-71 Px Define	Set one of the the multi-function input terminals (P1-P7) to 26 (2 nd Motor) to display M2 (2 nd motor group) group. An input signal to a multi-function terminal set to 2 nd motor will operate the motor according to the code settings listed below. However, if the inverter is in operation, input signals to the multi-function terminals will not read as a 2 nd motor parameter. PRT-50 (Stall Prevent) must be set first, before M2-28 (Stall Lev) settings can be used. Also, PRT-40 (ETH Trip Sel) must be set first, before M2-29 (ETH 1min) and M2-30 (ETH Cont) settings.

Parameter Setting at Multi-function Terminal Input on a 2nd Motor

Code	Description	Code	Description
M2-04 Acc Time	Acceleration time	M2-16 Inertia Rt	Load inertia rate
M2-05 Dec Time	Deceleration time	M2-17 Rs	Stator resistor
M2-06 Capacity	Motor capacity	M2-18 Lsigma	Leakage inductance
M2-07 Base Freq	Motor base frequency	M2-19 Ls	Stator inductance
M2-08 Ctrl Mode	Control mode	M2-20 Tr	Rotor time constant
M2-10 Pole Num	Pole number	M2-25 V/F Patt	V/F pattern
M2-11 Rate Slip	Rated slip	M2-26 Fwd Boost	Forward torque boost
M2-12 Rated Curr	Rated current	M2-27 Rev Boost	Reverse torque boost
M2-13 Noload Curr	No-load current	M2-28 Stall Lev	Stall prevention level
M2-14 Rated Volt	Motor rated voltage	M2-29 ETH 1min	Motor heat protection 1min rating
M2-15 Efficiency	Motor efficiency	M2-30 ETH Cont	Motor heat protection cont. rating

Use the 2nd motor operation when switching operation between a 75 kW motor and a secondary 37 kW motor connected to terminal P3. Refer to the following settings.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
IN	67	Terminal P3 configuration	P3 Define	26	2nd Motor	-
M2	06	Motor capacity	M2-Capacity	-	37 kW	-
	08	Control mode	M2-Ctrl Mode	0	V/F	-




5.18 Supply Power Transition

Supply power transition is used to switch the power source for the motor connected to the inverter from the inverter output power to the main supply power source (commercial power source), or vice versa.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
IN	65-71	Px terminal configuration	Px Define(Px: P1-P7)	16	Exchange	0-54
OUT	31	Multi-function relay1 items	Relay1	17	Inverter Line	-
	33	Multi-function output1 items	Q1 Define	18	Comm Line	-

Supply Power Transition Setting Details

Code	Description
IN-65-71 Px Define	When the motor power source changes from inverter output to main supply power, select a terminal to use and set the code value to 16 (Exchange). Power will be switched when the selected terminal is on. To reverse the transition, switch off the terminal.
OUT-31 Realy 1 Define, OUT-33 Q1 Define	Set multi-function relay or multi-function output to 17 (Inverter Line) or 18 (COMM line). Relay operation sequence is as follows.

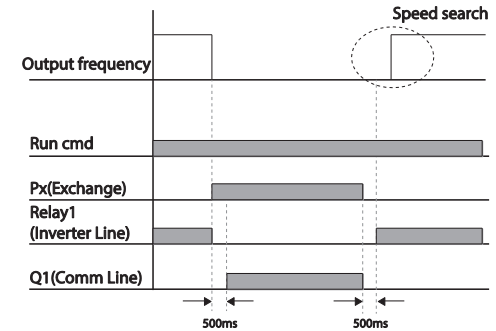

5.19 Cooling Fan Control

This function turns the inverter's heat-sink cooling fan on and off. It is used in situations where the load stops and starts frequently, or noise free environment is required. The correct use of cooling fan control can extend the cooling fan's life.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
ADV	64	Cooling fan control	FAN Control	0	During Run	0-2	-

Cooling Fan Control Detail Settings

Code	Description	
ADV-64 Fan Control	Settings	
	0	During Run
	1	Always On
	2	Temp Control
		Description
		Cooling fan runs when the power is supplied to the inverter and the operation command is on. The cooling fan stops when the power is supplied to the inverter and the operation command is off. When the inverter heat sink temperature is higher than its set value, the cooling fan operates automatically regardless of its operation status.
		Cooling fan runs constantly if the power is supplied to the inverter.
		With power connected and the run operation command on, if the setting is in Temp Control, the cooling fan will not operate unless the temperature in the heat sink reaches the set temperature.

Advanced Features

Note

Despite setting ADV-64 to 0(During Run), if the heat sink temperature reaches a set level by current input harmonic wave or noise, the cooling fan may run as a protection function.

5.20 Input Power Frequency and Voltage Settings

Select the frequency for inverter input power. If the frequency changes from 60 Hz to 50 Hz, all other frequency (or RPM) settings including the maximum frequency, base frequency etc., will change to 50 Hz. Likewise, changing the input power frequency setting from 50 Hz to 60 Hz will change all related function item settings from 50 Hz to 60 Hz.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
BAS	10	Input power frequency	60/50 Hz Sel	0	50 Hz	0-1	-

Set Inverter input power voltage at BAS-19. Low voltage fault trip level changes automatically to the set voltage standard.

Group	Code	Name	LCD Display	Parameter Setting		Setting Range	Unit
BAS	19	Input power voltage	AC Input Volt	220 V	220	170-240	V
				400 V	380		

5.21 Read, Write, and Save Parameters

Use read, write and save function parameters on the inverter to copy parameters from the inverter to the keypad or from the keypad to the inverter.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
CNF*	46	Parameter read	Parameter Read	1	Yes	-
	47	Parameter write	Parameter Write	1	Yes	-
	48	Parameter save	Parameter Save	1	Yes	-

Read, Write, and Save Parameter Setting Details

Code	Description
CNF-46 Parameter Read	Copies saved parameters from the inverter to the keypad. Saved parameters on the keypad will be deleted and replaced with copied parameters.
CNF-47 Parameter Write	Copies saved parameters from the keypad to the inverter. Saved parameters on the inverter will be deleted and replaced with copied parameters. If an error occurs during parameter writing, previous saved data will be used. If there is no saved data on the Keypad, 'EEP Rom Empty' message will be displayed.
CNF-48 Parameter Save	As parameters set during communication transmission are saved to RAM, the setting values will be lost if the power goes off and on. When setting parameters during communication transmission, select 1 (Yes) from CNF-48 code to save the set parameter.

Advanced Features

5.22 Parameter Initialization

User changes to parameters can be initialized (reset) to factory default settings on all or selected groups. However, during a fault trip situation or operation, parameters cannot be initialized.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
CNF	40	Parameter initialization	Parameter Init	0	No	0-13

Parameter Initialization Setting Details

Code	Description			
DRV-93, CNF-40 Parameter Init	Setting		LCD Display	Function
	0	No	No	-
	1	Initialize all groups	All Grp	Initialize all data. Select 1(All Grp) and press [PROG/ENT] key to start initialization. On completion, 0(No) will be displayed.
	2	Initialize DRV group	DRV Grp	Initialize data by groups. Select initialize group and press [PROG/ENT] key to start initialization. On completion, 0(No) will be displayed.
	3	Initialize BAS group	BAS Grp	
	4	Initialize ADV group	ADV Grp	
	5	Initialize CON group	CON Grp	
	6	Initialize IN group	IN Grp	
	7	Initialize OUT group	OUT Grp	
	8	Initialize COM group	COM Grp	
	9	Initialize APP group	APP Grp	
	12	Initialize PRT group	PRT Grp	
	13	Initialize M2 group	M2 Grp	

5.23 Parameter View Lock

Use parameter view lock to hide parameters after registering and entering a user password.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
CNF	50	Parameter view lock	View Lock Set	Unlocked	0–9999	
	51	Parameter view lock password	View Lock Pw	Password	0–9999	

Parameter View Lock Setting Details

Code	Description												
CNF-51 View Lock Pw	Register a password to allow access to parameter view lock. Follow the steps below to register a password.												
	<table border="1"> <thead> <tr> <th>No</th> <th>Procedure</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>[PROG/ENT] key on CNF-51 code will show the previous password input window. If registration is made for the first time, enter 0. It is the factory default.</td> </tr> <tr> <td>2</td> <td>If a password had been set, enter the saved password.</td> </tr> <tr> <td>3</td> <td>If the entered password matches the saved password, a new window prompting the user to enter a new password will be displayed (the process will not progress to the next stage until the user enters a valid password).</td> </tr> <tr> <td>4</td> <td>Register a new password.</td> </tr> <tr> <td>5</td> <td>After registration, code CNF-51 will be displayed.</td> </tr> </tbody> </table>	No	Procedure	1	[PROG/ENT] key on CNF-51 code will show the previous password input window. If registration is made for the first time, enter 0. It is the factory default.	2	If a password had been set, enter the saved password.	3	If the entered password matches the saved password, a new window prompting the user to enter a new password will be displayed (the process will not progress to the next stage until the user enters a valid password).	4	Register a new password.	5	After registration, code CNF-51 will be displayed.
	No	Procedure											
	1	[PROG/ENT] key on CNF-51 code will show the previous password input window. If registration is made for the first time, enter 0. It is the factory default.											
	2	If a password had been set, enter the saved password.											
	3	If the entered password matches the saved password, a new window prompting the user to enter a new password will be displayed (the process will not progress to the next stage until the user enters a valid password).											
4	Register a new password.												
5	After registration, code CNF-51 will be displayed.												
CNF-50 View Lock Set	To enable parameter view lock, enter a registered password. [Locked] sign will be displayed on the screen to indicate that parameter view lock is enabled. To disable parameter view lock, re-enter the password. The [locked] sign will disappear.												

Advanced Features

5.24 Parameter Lock

Use parameter lock to prevent unauthorized modification of parameter settings. To enable parameter lock, register and enter a user password first.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	94	Password registration	-	-	0–9999	-
	95	Parameter lock password	-	-	0–9999	-
CNF	52	Parameter lock	Key Lock Set	Unlocked	0–9999	-
	53	Parameter lock password	Key Lock PW	Password	0–9999	-

Parameter Lock Setting Details

Code	Description												
CNF-53 Key Lock Pw	Register a password to prohibit parameter modifications. Follow the procedures below to register a password.												
	<table border="1"> <thead> <tr> <th>No</th> <th>Procedures</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Press the [PROG/ENT] key on CNF-53 code and the saved password input window will be displayed. If password registration is being made for the first time, enter 0. It is the factory default.</td> </tr> <tr> <td>2</td> <td>If a saved password has been set, enter the saved password.</td> </tr> <tr> <td>3</td> <td>If the entered password matches the saved password, then a new window to enter a new password will be displayed. (The process will not move to next stage until the user enters a valid password).</td> </tr> <tr> <td>4</td> <td>Register a new password.</td> </tr> <tr> <td>5</td> <td>After registration, Code CNF-51 will be displayed.</td> </tr> </tbody> </table>	No	Procedures	1	Press the [PROG/ENT] key on CNF-53 code and the saved password input window will be displayed. If password registration is being made for the first time, enter 0. It is the factory default.	2	If a saved password has been set, enter the saved password.	3	If the entered password matches the saved password, then a new window to enter a new password will be displayed. (The process will not move to next stage until the user enters a valid password).	4	Register a new password.	5	After registration, Code CNF-51 will be displayed.
	No	Procedures											
	1	Press the [PROG/ENT] key on CNF-53 code and the saved password input window will be displayed. If password registration is being made for the first time, enter 0. It is the factory default.											
	2	If a saved password has been set, enter the saved password.											
	3	If the entered password matches the saved password, then a new window to enter a new password will be displayed. (The process will not move to next stage until the user enters a valid password).											
4	Register a new password.												
5	After registration, Code CNF-51 will be displayed.												
CNF-52 Key Lock Set	To enable parameter lock, enter the registered password. [Locked] sign will be displayed on the screen to indicate that prohibition is enabled. Once enabled, Pressing the [PROG/ENT] key on function code will not allow the display edit mode to run. To disable parameter modification prohibition, re-enter the password. The [Locked] sign will disappear.												

⚠ Caution

If parameter view lock and parameter lock functions are enabled, no inverter operation related function changes can be made. It is very important that you memorize the password.

5.25 Changed Parameter Display

This feature displays all the parameters that are different from the factory defaults. Use this feature to track changed parameters.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
CNF	41	Changed parameter display	Changed Para	0	View All	-

Changed Parameter Display Setting Details

Code	Description		
CNF-41 Changed Para	Setting		Function
	0	View All	Display all parameters
	1	View Changed	Display changed parameters only


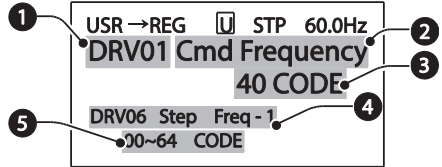


5.26 User Group

Create a user defined group and register user-selected parameters from the existing function groups. The user group can carry up to a maximum of 64 parameter registrations.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
CNF	42	Multi-function key settings	Multi Key Sel	3	UserGrp SelKey	-
	45	Delete all user registered codes	UserGrp AllDel	0	No	-

Advanced Features

User Group Setting Details

Code	Description						
CNF-42 Multi-Key Sel	Select 3 (UserGrp SelKey) from the multi-function key setting options. If user group parameters are not registered, setting the multi-function key to the user group select key (UserGrp SelKey) will not display user group (USR Grp) item on the Keypad.						
	Follow the procedures below to register parameters to a user group.						
	<table border="1"> <thead> <tr> <th>No</th> <th>Procedure</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Set CNF- 42 to 3(UserGrp SelKey). A  icon will be displayed at the top of the LCD display.</td> </tr> <tr> <td>2</td> <td>In the parameter mode (PAR Mode), move to the parameter you need to register and press the [MULTI] key. For example, if the [MULTI] key is pressed in the frequency reference in DRV 01 (Cmd Frequency), the screen below will be displayed.</td> </tr> </tbody> </table> 	No	Procedure	1	Set CNF- 42 to 3(UserGrp SelKey). A  icon will be displayed at the top of the LCD display.	2	In the parameter mode (PAR Mode), move to the parameter you need to register and press the [MULTI] key. For example, if the [MULTI] key is pressed in the frequency reference in DRV 01 (Cmd Frequency), the screen below will be displayed.
	No	Procedure					
	1	Set CNF- 42 to 3(UserGrp SelKey). A  icon will be displayed at the top of the LCD display.					
2	In the parameter mode (PAR Mode), move to the parameter you need to register and press the [MULTI] key. For example, if the [MULTI] key is pressed in the frequency reference in DRV 01 (Cmd Frequency), the screen below will be displayed.						
<ol style="list-style-type: none"> Group name and code number of the parameter Name of the parameter Code number to be used in the user group. Pressing the [PROG/ENT] key on the code number (40 Code) will register DRV-01 as code 40 in the user group. Existing parameter registered as the user group code 40 Setting range of the user group code. Entering 0 cancels the settings. 							
<ol style="list-style-type: none"> Set a code number (3) to use to register the parameter in the user group. Select code number and press [PROG/ENT] key. Changing the value in 3 will also change the value in 4. If no code is registered, 'Empty Code' will be displayed. Entering 0 cancels the settings. The registered parameters are listed in the user group in User mode. You can register one parameter multiple times if necessary. For example, a parameter can be registered as code 2, code 11, and more in the user group. 							

Code	Description												
CNF-25 UserGrp AllDel	Follow the procedures below to delete parameters in the user group.												
	<table border="1"> <thead> <tr> <th>No.</th> <th>Settings</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Set CNF- 42 to 3(UserGrp SelKey). A U icon will be displayed at the top of the LCD display.</td> </tr> <tr> <td>2</td> <td>In User mode, move the cursor to the code that is to be deleted.</td> </tr> <tr> <td>3</td> <td>Press the [MULTI] key.</td> </tr> <tr> <td>4</td> <td>Move to YES on the deletion confirmation screen, and press the [PROG/ENT] key.</td> </tr> <tr> <td>5</td> <td>Deletion completed.</td> </tr> </tbody> </table>	No.	Settings	1	Set CNF- 42 to 3(UserGrp SelKey). A U icon will be displayed at the top of the LCD display.	2	In User mode, move the cursor to the code that is to be deleted.	3	Press the [MULTI] key.	4	Move to YES on the deletion confirmation screen, and press the [PROG/ENT] key.	5	Deletion completed.
	No.	Settings											
	1	Set CNF- 42 to 3(UserGrp SelKey). A U icon will be displayed at the top of the LCD display.											
	2	In User mode, move the cursor to the code that is to be deleted.											
	3	Press the [MULTI] key.											
4	Move to YES on the deletion confirmation screen, and press the [PROG/ENT] key.												
5	Deletion completed.												
Set to 1(Yes) to delete all registered parameters in the user group.													

5.27 Easy Start On

Run Easy Start On to easily setup the basic motor parameters required to operate a motor in a batch. Set CNF-61(Easy Start On) to 1(Yes) to activate the feature, initialize all parameters by setting CNF-40 (Parameter Init) to 1 (All Grp), and restart the inverter to activate Easy Start On.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
CNF	61	Parameter easy start settings	Easy Start On	1	Yes	-

Easy Start On Setting Details

Code	Description								
CNF-61 Easy Start On	Follow the procedures listed below to set parameter easy start.								
	<table border="1"> <thead> <tr> <th>No</th> <th>Procedures</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Set CNF-61 (Easy Start On) to 1(Yes).</td> </tr> <tr> <td>2</td> <td>Select 1(All Grp) in CNF-40 (Parameter Init) to initialize all parameters in the inverter.</td> </tr> <tr> <td>3</td> <td>Restarting the inverter will activate the Easy Start On. Set the values in the following screens on the LCD keypad. To escape from the Easy Start On, press the [ESC] key. <ul style="list-style-type: none"> • Start Easy Set: Select Yes. • DRV-14 Motor Capacity: Set motor capacity. • BAS-11 Pole Number: Set motor pole number. • BAS-15 Rated Volt: Set motor rated voltage. • BAS-10 60/50 Hz Sel: Set motor rated frequency. • BAS-19 AC Input Volt: Set input voltage. • DRV-06 Cmd Source: Set command source. • DRV-01 Cmd Frequency: Set operation frequency. </td> </tr> </tbody> </table>	No	Procedures	1	Set CNF-61 (Easy Start On) to 1(Yes).	2	Select 1(All Grp) in CNF-40 (Parameter Init) to initialize all parameters in the inverter.	3	Restarting the inverter will activate the Easy Start On. Set the values in the following screens on the LCD keypad. To escape from the Easy Start On, press the [ESC] key. <ul style="list-style-type: none"> • Start Easy Set: Select Yes. • DRV-14 Motor Capacity: Set motor capacity. • BAS-11 Pole Number: Set motor pole number. • BAS-15 Rated Volt: Set motor rated voltage. • BAS-10 60/50 Hz Sel: Set motor rated frequency. • BAS-19 AC Input Volt: Set input voltage. • DRV-06 Cmd Source: Set command source. • DRV-01 Cmd Frequency: Set operation frequency.
	No	Procedures							
	1	Set CNF-61 (Easy Start On) to 1(Yes).							
2	Select 1(All Grp) in CNF-40 (Parameter Init) to initialize all parameters in the inverter.								
3	Restarting the inverter will activate the Easy Start On. Set the values in the following screens on the LCD keypad. To escape from the Easy Start On, press the [ESC] key. <ul style="list-style-type: none"> • Start Easy Set: Select Yes. • DRV-14 Motor Capacity: Set motor capacity. • BAS-11 Pole Number: Set motor pole number. • BAS-15 Rated Volt: Set motor rated voltage. • BAS-10 60/50 Hz Sel: Set motor rated frequency. • BAS-19 AC Input Volt: Set input voltage. • DRV-06 Cmd Source: Set command source. • DRV-01 Cmd Frequency: Set operation frequency. 								
When the settings are completed, the minimum parameter setting on the motor has been made. The LCD keypad will return to a monitoring display. Now the motor can be operated with the command source set at DRV-06.									

5.28 Config (CNF) Mode

The config mode parameters are used to configure the LCD keypad related features.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
CNF	2	LCD brightness/contrast adjustment	LCD Contrast	-	-	-
	10	Inverter S/W version	Inv S/W Ver	x.xx	-	-
	11	Keypad S/W version	Keypad S/W Ver	x.xx	-	-
	12	Keypad title version	KPD Title Ver	x.xx	-	-
	30-32	Power slot type	Option-x Type	None	-	-
	44	Erase trip history	Erase All Trip	No	-	-
	60	Add title update	Add Title Up	No	-	-
	62	Initialize accumulated electric energy	WH Count Reset	No	-	-

Config Mode Parameter Setting Details

Code	Description
CNF-2 LCD contrast	Adjusts LCD brightness/contrast on the LCD keypad.
CNF-10 Inv S/W Ver, CNF-11 Keypad S/W Ver	Check OS version in the inverter and on the LCD keypad.
CNF-12 KPD title Ver	Checks title version on the LCD keypad.
CNF-30-32 Option-x type	Checks type of powerboard installed in 1-3 power slot.
CNF-44 Erase all trip	Deletes stored trip history.
CNF-60 Add Title Up	When inverter SW version is updated and more code is added, CNF-60 settings will add, display, and operate the added codes. Set CNF-60 to 1(Yes) and disconnect the LCD keypad from the inverter. Reconnecting the LCD keypad to the inverter updates titles.
CNF-62 WH Count Reset	Initialize accumulated electric energy consumption count.

Advanced Features


5.29 Timer Settings

Set a multi-function input terminal to a timer and On/Off control the multi-function output and relay according to the timer settings.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
IN	65-71	Px terminal configuration	Px Define(Px: P1-P7)	38	Timer In	0-54
		OUT	31 Multi-function relay1	Relay 1	28	Timer Out
33	Multi-function output1	Q1 Define	-			
55	Timer on delay	Timer on delay	3.00	0.00-100		
	56	Timer off delay	Timer off delay	1.00	0.00-100	sec

Timer Setting Details

Code	Description
IN-65-71 Px Define	Choose one of the multi-function input terminals and change it to a timer terminal by setting it to 38 (Timer In).
OUT-31 Relay1, OUT-33 Q1 Define	Set multi-function output terminal or relay to be used as a timer to 28 (Timer out).
OUT-55 TimerOn Delay, OUT-56 TimerOff Delay	Input a signal (On) to the timer terminal to operate a timer output (Timer out) after the time set at OUT-55 has passed. When the multi-function input terminal is off, multi-function output or relay turns off after the time set at OUT-56.

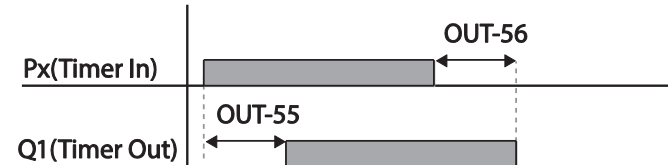


5.30 Brake Control

Brake control is used to control the On/Off operation of electronic brake load system.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
DRV	09	Control mode	Control Mode	0 V/F	-	-
ADV	41	Brake open current	BR Rls Curr	50.0	0.0–180%	%
	42	Brake open delay time	BR Rls Dly	1.00	0.0–10.0	sec
	44	Brake open forward frequency	BR Rls Fwd Fr	1.00	0–Maximum frequency	Hz
	45	Brake open reverse frequency	BR Rls Rev Fr	1.00	0–Maximum frequency	Hz
	46	Brake close delay time	BR Eng Dly	1.00	0.00–10.00	sec
	47	Brake close frequency	BR Eng Fr	2.00	0–Maximum frequency	Hz
OUT	31	Multi-function relay1 item	Relay 1	35 BR Control	-	-
	33	Multi-function output1 item	Q1 Define			

When brake control is activated, DC braking (ADV-12) at inverter start and dwell operation (ADV-20–23) do not operate.

- Brake release sequence:** During motor stop state, if an operation command is entered, the inverter accelerates up to brake release frequency (ADV-44– 45) in forward or in reverse direction. After reaching brake release frequency, if motor current reaches brake release current (BR Rls Curr), the output relay or multi function output terminal for brake control sends a release signal. Once the signal has been sent, acceleration will begin after maintaining frequency for brake release delay time (BR Rls Dly).
- Brake engage sequence:** If a stop command is sent during operation, the motor decelerates. Once the output frequency reaches brake engage frequency (BR Eng Fr), the motor stops deceleration and sends out a brake engage signal to a preset output terminal. Frequency is maintained for the brake engage time (BR Eng Dly) and will become 0 afterwards. If DC braking time (ADV-15) and DC braking resistance (ADV-16) are set, inverter output is blocked after DC braking. For DC braking, refer to [4.17.2 Stop After DC Braking](#) on page [89](#).

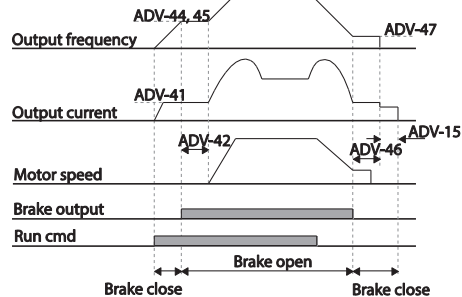

Advanced Features

5.31 Multi-Function Output On/Off Control


Set reference values (on/off level) for analog input and control output relay or multi-function output terminal on/off status accordingly.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
ADV	66	Output terminal on/off control mode	On/Off Ctrl Src	1 V1	-	-
	67	Output terminal on level	On-C Level	90.00	Output terminal off level– 100.00%	%
	68	Output terminal off level	Off-C Level	10.00	0.00–Output terminal on level	%
OUT	31	Multi-function relay1 item	Relay 1	34 On/Off	-	-
	33	Multi-function output1 item	Q1 Define			

Multi-function Output On/Off Control Setting Details

Code	Description
ADV-66 On/Off Ctrl Src	Select analog input On/Off control.
ADV-67 On-C Level , ADV-68 Off-C Level	Set On/Off level at the output terminal.

Analog input

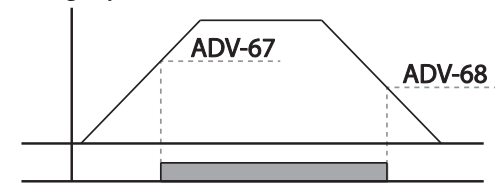

Multi-function relay output

5.32 Press Regeneration Prevention


Press regeneration prevention is used during press operations to prevent braking during the regeneration process. If motor regeneration occurs during a press operation, motor operation speed automatically goes up to avoid the regeneration zone.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
ADV	74	Select press regeneration prevention for press	RegenAvd Sel	0 No	0-1	-
	75	Press regeneration prevention operation voltage level	RegenAvd Level	350 V 700 V	200 V: 300-400 V 400 V: 600-800 V	V
	76	Press regeneration prevention compensation frequency limit	CompFreq Limit	1.00(Hz)	0.00- 10.00 Hz	Hz
	77	Press regeneration prevention P gain	RegenAvd Pgain	50.0(%)	0.0- 100.0%	%
	78	Press regeneration prevention I gain	RegenAvd Igain	500(ms)	20-3000ms	ms

Advanced Features

Press Regeneration Prevention Setting Details

Code	Description
ADV-74 RegenAvd Sel	Frequent regeneration voltage from a press load during constant speed motor operation may force excessive work on the braking unit which may damage or shorten the brake life. To prevent this situation, select ADV-74 (RegenAvd Sel) to control DC link voltage and disable the braking unit operation.
ADV-75 RegenAvd Level	Set brake operation prevention level voltage when the DC link voltage goes up due to regeneration.
ADV-76 CompFreq Limit	Set alternative frequency width that can replace actual operation frequency during regeneration prevention.
ADV-77 RegenAvd Pgain, ADV-78 RegenAvd Igain	To prevent regeneration zone, set P gain/I gain in the DC link voltage suppress PI controller.

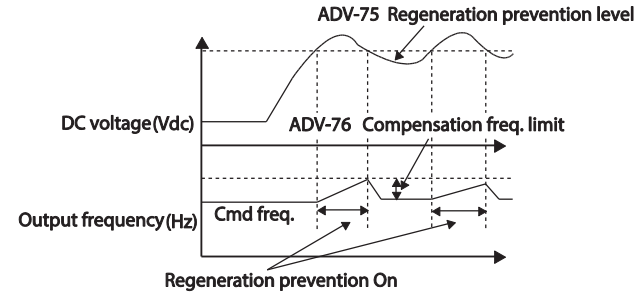

Note

Press regeneration prevention does not operate during accelerations or decelerations, but it only operates during constant speed motor operation. When regeneration prevention is activated, output frequency may change within the range set at ADV-76 (CompFreq Limit).

5.33 Analog Output

An analog output terminal provides output of 0-10 V voltage, 4-20 mA current, or 0-32 kHz pulse.

5.33.1 Voltage and Current Analog Output

An output size can be adjusted by selecting an output option at AO (Analog Output) terminal. Set the analog voltage/current output terminal setting switch (SW2) to change the output type (voltage/current).

AO1: 0-10 V Voltage / 4-20 mA Current Output

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
OUT	01	Analog output1	AO1 Mode	0 Frequency	0-15	-
	02	Analog output1 gain	AO1 Gain	100.0	-1000.0-1000.0	%
	03	Analog output1 bias	AO1 Bias	0.0	-100.0-100.0	%
	04	Analog output1 filter	AO1 Filter	5	0-10000	ms
	05	Analog constant output1	AO1 Const %	0.0	0.0-100.0	%
	06	Analog output1 monitor	AO1 Monitor	0.0	0.0-1000.0	%

AO2: 0–10 V Current output

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
OUT	07	Analog output2	AO2 Mode	0	Frequency	0–15	-
	08	Analog output2 gain	AO2 Gain	100.0		-1000.0–1000.0	%
	09	Analog output2 bias	AO2 Bias	0.0		-100.0–100.0	%
	10	Analog output2 filter	AO2 Filter	5		0–10000	ms
	11	Analog constant output2	AO2 Const %	0.0		0.0–100.0	%
	12	Analog output2 monitor	AO2 Monitor	0.0		0.0–1000.0	%

Voltage and Current Analog Output Setting Details

Code	Description																						
	Select a constant value for output. The following example for output voltage setting.																						
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Frequency Outputs operation frequency as a standard. 10 V output is made from the frequency set at DRV-20 (Max Freq)</td> </tr> <tr> <td>1</td> <td>Output Current 10 V output is made from 200% of inverter rated current (heavy load).</td> </tr> <tr> <td>2</td> <td>Output Voltage Sets the outputs based on the inverter output voltage. 10 V output is made from a set voltage in BAS-15 (Rated V). If 0 V is set in BAS-15, 200 V/400 V models output 10 V based on the actual input voltages (220 V and 440 V respectively).</td> </tr> <tr> <td>3</td> <td>DC Link Volt Outputs inverter DC link voltage as a standard. Outputs 10 V when the DC link voltage is 410 Vdc for 200 V models, and 820 Vdc for 400 V models.</td> </tr> <tr> <td>4</td> <td>Torque Outputs the generated torque as a standard. Outputs 10 V at 250% of motor rated torque.</td> </tr> <tr> <td>5</td> <td>Output Power Monitors output wattage. 200% of rated output is the maximum display voltage (10 V).</td> </tr> <tr> <td>6</td> <td>Idse Outputs the maximum voltage at 200% of no load current.</td> </tr> <tr> <td>7</td> <td>Iqse Outputs the maximum voltage at 250% of rated torque current $\text{rated torque current} = \sqrt{\text{rated current}^2 - \text{no load current}^2}$</td> </tr> <tr> <td>8</td> <td>Target Freq Outputs set frequency as a standard. Outputs 10 V at the maximum frequency (DRV-20).</td> </tr> <tr> <td>9</td> <td>Ramp Freq Outputs frequency calculated with Acc/Dec function as a standard. May vary with actual output frequency. Outputs 10 V.</td> </tr> </tbody> </table>	Setting	Function	0	Frequency Outputs operation frequency as a standard. 10 V output is made from the frequency set at DRV-20 (Max Freq)	1	Output Current 10 V output is made from 200% of inverter rated current (heavy load).	2	Output Voltage Sets the outputs based on the inverter output voltage. 10 V output is made from a set voltage in BAS-15 (Rated V). If 0 V is set in BAS-15, 200 V/400 V models output 10 V based on the actual input voltages (220 V and 440 V respectively).	3	DC Link Volt Outputs inverter DC link voltage as a standard. Outputs 10 V when the DC link voltage is 410 Vdc for 200 V models, and 820 Vdc for 400 V models.	4	Torque Outputs the generated torque as a standard. Outputs 10 V at 250% of motor rated torque.	5	Output Power Monitors output wattage. 200% of rated output is the maximum display voltage (10 V).	6	Idse Outputs the maximum voltage at 200% of no load current.	7	Iqse Outputs the maximum voltage at 250% of rated torque current $\text{rated torque current} = \sqrt{\text{rated current}^2 - \text{no load current}^2}$	8	Target Freq Outputs set frequency as a standard. Outputs 10 V at the maximum frequency (DRV-20).	9	Ramp Freq Outputs frequency calculated with Acc/Dec function as a standard. May vary with actual output frequency. Outputs 10 V.
Setting	Function																						
0	Frequency Outputs operation frequency as a standard. 10 V output is made from the frequency set at DRV-20 (Max Freq)																						
1	Output Current 10 V output is made from 200% of inverter rated current (heavy load).																						
2	Output Voltage Sets the outputs based on the inverter output voltage. 10 V output is made from a set voltage in BAS-15 (Rated V). If 0 V is set in BAS-15, 200 V/400 V models output 10 V based on the actual input voltages (220 V and 440 V respectively).																						
3	DC Link Volt Outputs inverter DC link voltage as a standard. Outputs 10 V when the DC link voltage is 410 Vdc for 200 V models, and 820 Vdc for 400 V models.																						
4	Torque Outputs the generated torque as a standard. Outputs 10 V at 250% of motor rated torque.																						
5	Output Power Monitors output wattage. 200% of rated output is the maximum display voltage (10 V).																						
6	Idse Outputs the maximum voltage at 200% of no load current.																						
7	Iqse Outputs the maximum voltage at 250% of rated torque current $\text{rated torque current} = \sqrt{\text{rated current}^2 - \text{no load current}^2}$																						
8	Target Freq Outputs set frequency as a standard. Outputs 10 V at the maximum frequency (DRV-20).																						
9	Ramp Freq Outputs frequency calculated with Acc/Dec function as a standard. May vary with actual output frequency. Outputs 10 V.																						

Advanced Features


Code	Description
12	PID Ref Value Outputs command value of a PID controller as a standard. Outputs approximately 6.6V at 100%.
13	PID Fdk Value Outputs feedback volume of a PID controller as a standard. Outputs approximately 6.6V at 100%.
14	PID Output Outputs output value of a PID controller as a standard. Outputs approximately 10 V at 100%.
15	Constant Outputs OUT-05 (AO1 Const %) value as a standard.

Adjusts output value and offset. If frequency is selected as an output item, it will operate as shown below.

$$AO1 = \frac{\text{Frequency}}{\text{MaxFreq}} \times AO1 \text{ Gain} + AO1 \text{ Bias}$$

The graph below illustrates the analog voltage output (AO1) changes depend on OUT-02 (AO1 Gain) and OUT-3 (AO1 Bias) values. Y-axis is analog output voltage (0–10 V), and X-axis is % value of the output item.

Example, if the maximum frequency set at DRV-20 (Max Freq) is 60 Hz and the present output frequency is 30 Hz, then the x-axis value on the next graph is 50%.

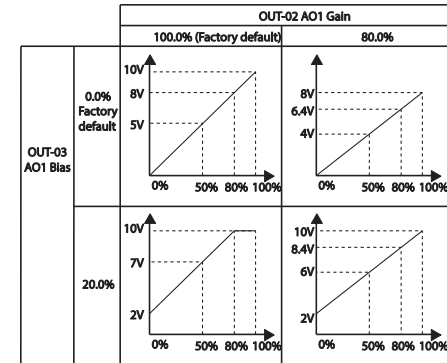

OUT-02 AO1 Gain,
OUT-03 AO1 Bias

OUT-04 AO1 Filter	Set filter time constant on analog output.
OUT-05 AO1 Const %	If analog output at OUT-01 (AO1 Mode) is set to 15(Constant), the analog voltage output is dependent on the set parameter values (0–100%).
OUT-06 AO1 Monitor	Monitors analog output value. Displays the maximum output voltage as a percentage (%) with 10 V as the standard.

5.33.2 Analog Pulse Output

Output item selection and pulse size adjustment can be made for the TO (Pulse Output) terminal.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
OUT	61	Pulse output setting	TO Mode	0 Frequency	0-15	-
	62	Pulse output gain	TO Gain	100.0	-1000.0-1000.0	%
	63	Pulse output bias	TO Bias	0.0	-100.0-100.0	%
	64	Pulse output filter	TO Filter	5	0-10000	ms
	65	Pulse output constant output2	TO Const %	0.0	0.0-100.0	%
	66	Pulse output monitor	TO Monitor	0.0	0.0-1000.0	%

Analog Pulse Output Setting Details

Code	Description
OUT-62 TO Gain, OUT-63 TO Bias	<p>Adjusts output value and offset. If frequency is selected as an output, it will operate as shown below.</p> $TO = \frac{Frequency}{MaxFreq} \times TO\ Gain + TO\ Bias$ <p>The following graph illustrates that the pulse output (TO) changes depend on OUT-62 (TO Gain) and OUT-63 (TO Bias) values. The Y-axis is an analog output current(0-32 kHz), and X-axis is % value on output item.</p> <p>For example, if the maximum frequency set with DRV-20 (Max Freq) is 60 Hz and present output frequency is 30 Hz, then the x-axis value on the next graph is 50%.</p>

Advanced Features

Code	Description
OUT-64 TO Filter	Sets filter time constant on analog output.
OUT-65 TO Const %	If analog output item is set to constant, the analog pulse output is dependent on the set parameter values.
OUT-66 TO Monitor	Monitors analog output value. Displays the maximum output pulse (32 kHz) as a percentage (%) of the standard.

Note

OUT-08 AO2 Gain and OUT-09 AO2 Bias Tuning Mode on 4-20 mA output

- 1 Set OUT-07 (AO2 Mode) to Constant, and set OUT-11 (AO2 Const %) to 0.0 %.
- 2 Set OUT-09 (AO2 Bias) to 20.0% and then check current output. 4 mA output should be displayed.
- 3 If the value is less than 4 mA, gradually increase OUT-09 (AO2 Bias) until 4 mA is measured. If the value is more than 4 mA, gradually decrease OUT-09 (AO2 Bias) until 4 mA is measured.
- 4 Set OUT-11 AO2 Const % to 100.0%
- 5 Set OUT-08 (AO2 Gain) to 80.0% and measure current output at 20 mA. If the value is less than 20 mA, gradually increase OUT-08 (AO2 Gain) until 20 mA is measured. If the value is more than 20 mA, gradually decrease OUT-08 (AO2 Gain) until 20 mA is measured.

The functions for each code are identical to the descriptions for the 0-10 V voltage outputs with an output range 4-20 mA.

5.34 Digital Output


5.34.1 Multi-function Output Terminal and Relay Settings

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
OUT	31	Multi-function relay1 setting	Relay 1	29 Trip	-	-
	33	Multi-function output1 setting	Q1 Define	14 Run	-	-
	41	Multi-function output monitor	DO Status	-	00- 11	bit
	57	Detection frequency	FDT Frequency	30.00	0.00-Maximum frequency	Hz
	58	Detection frequency band	FDT Band	10.00		
IN	65-71	Px terminal configuration	Px Define	16 Exchange	0-54	-

Multi-function Output Terminal and Relay Setting Details

Code	Description	
OUT-31 Relay1	Set relay (Relay 1) output options.	
OUT-33 Q1 Define	Select output options for multi-function output terminal (Q1). Q1 is open collector TR output.	
OUT-41 DO Status	Set output terminal and relay functions according to OUT-57 FDT (Frequency), OUT-58 (FDT Band) settings and fault trip conditions.	
	Setting	Function
	0 None	No output signal.
	1 FDT-1	<p>Detects inverter output frequency reaching the user set frequency. Outputs a signal when the absolute value (set frequency–output frequency) < detected frequency width/2.</p> <p>When detected frequency width is 10 Hz, FDT-1 output is as shown in the graph below.</p>
2 FDT-2	<p>Outputs a signal when the user set frequency and detected frequency (FDT Frequency) are equal, and fulfills FDT-1 condition at the same time.</p> <p>[Absolute value (set frequency–detected frequency) < detected frequency width/2]&[FDT-1]</p> <p>Detected frequency width is 10 Hz. When the detected frequency is set to 30 Hz, FDT-2 output is as shown in the graph below.</p>	
3 FDT-3	<p>Outputs a signal when the Absolute value (output frequency–operation frequency) < detected frequency width/2.</p>	

Code	Description	
		<p>Detected frequency width is 10 Hz. When detected frequency is set to 30 Hz, FDT-3 output is as shown in the graph below.</p>
4	FDT-4	<p>Output signal can be separately set for acceleration and deceleration conditions.</p> <ul style="list-style-type: none"> In acceleration: Operation frequency ≥ Detected frequency In deceleration: Operation frequency > (Detected frequency–Detected frequency width/2) <p>Detected frequency width is 10 Hz. When detected frequency is set to 30 Hz, FDT-4 output is as shown in the graph below.</p>
5	Overload	Outputs a signal at motor overload.
6	IOL	Outputs a signal when a fault is triggered from a protective function operation by inverter overload inverse proportion.
7	Underload	Outputs a signal at load fault warning.
8	Fan Warning	Outputs a signal at fan fault warning.
9	Stall	Outputs a signal when a motor is overloaded and stalled.
10	Over voltage	Outputs a signal when the inverter DC link voltage rises above the protective operation voltage.
11	Low Voltage	Outputs a signal when the inverter DC link voltage drops below the low voltage protective level.
12	Over Heat	Outputs signal when the inverter overheats.
13	Lost command	Outputs a signal when there is a loss of analog input terminal and RS-485 communication command at the terminal block.

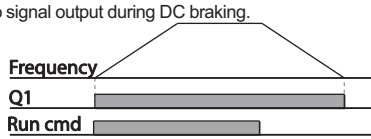Code	Description	
		Outputs a signal when communication power and expansion an I/O power card is installed, and also outputs a signal when losing analog input and communication power commands.
14	RUN	<p>Outputs a signal when operation command is entered and the inverter outputs voltage. No signal output during DC braking.</p>  <p>Frequency</p> <p>Q1</p> <p>Run cmd</p>
15	Stop	Outputs a signal at operation command off, and when there is no inverter output voltage.
16	Steady	Outputs a signal in steady operation.
17	Inverter line	Outputs a signal while the motor is driven by the inverter line.
18	Comm line	Outputs a signal while the motor is driven by a commercial power source. For details, refer to Supply Power Transition on page 152 .
19	Speed search	Outputs a signal during inverter speed search operation. For details, refer to 5.14 Speed Search Operation on page 144 .
22	Ready	Outputs signal when the inverter is in stand by operation and ready to receive an external operation command.
28	Timer Out	A timer function to operate terminal output after a certain time by using multi-function terminal block input. For more details, refer to 5.29 Timer Settings on page 164 .
29	Trip	Outputs a signal after a fault trip Refer to Multi-Function Output On/Off Control on page 166 .
31	DB Warn %ED	Refer to Dynamic Braking (DB) Resistor Configuration on page 196 .
34	On/Off Control	Outputs a signal using an analog input value as a standard. Refer to Multi-Function Output On/Off Control on page 166 .
35	BR Control	Outputs a brake release signal. Refer to

Code	Description
	Brake Control on page 165

5.34.2 Fault Trip Output using Multi-Function Output Terminal and Relay

The inverter can output fault trip state using multi-function output terminal (Q1) and relay (Relay 1).

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
OUT	30	Fault trip output mode	Trip Out Mode	010	-	bit
	31	Multi-function relay1	Relay 1	29	Trip	-
	33	Multi-function output1	Q1 Define	14	Run	-
	53	Fault trip output on delay	TripOut OnDly	0.00	0.00–100.00	sec
	54	Fault trip output off delay	TripOut OffDly	0.00	0.00–100.00	sec

Fault Trip Output by Multi-function Output Terminal and Relay - Setting Details

Code	Description																			
	Fault trip relay operates based on the fault trip output settings.																			
	<table border="1"> <thead> <tr> <th>Item</th> <th>bit on</th> <th>bit off</th> </tr> </thead> <tbody> <tr> <td>LCD keypad</td> <td></td> <td></td> </tr> </tbody> </table>	Item	bit on	bit off	LCD keypad															
Item	bit on	bit off																		
LCD keypad																				
OUT-30 Trip Out Mode	Select fault trip output terminal/relay and select 29(Trip Mode) at codes OUT-31, 33. When a fault trip occurs in the inverter, the relevant terminal and relay will operate. Depending on the fault trip type, terminal and relay operation can be configured as shown in the table below.																			
	<table border="1"> <thead> <tr> <th colspan="3">Setting</th> <th rowspan="2">Function</th> </tr> <tr> <th>bit3</th> <th>bit2</th> <th>bit1</th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td>✓</td> <td>Operates when low voltage fault trips occur</td> </tr> <tr> <td></td> <td>✓</td> <td></td> <td>Operates when fault trips other than low voltage occur</td> </tr> <tr> <td>✓</td> <td></td> <td></td> <td>Operates when auto restart fails (PRT- 08–09)</td> </tr> </tbody> </table>	Setting			Function	bit3	bit2	bit1			✓	Operates when low voltage fault trips occur		✓		Operates when fault trips other than low voltage occur	✓			Operates when auto restart fails (PRT- 08–09)
Setting			Function																	
bit3	bit2	bit1																		
		✓	Operates when low voltage fault trips occur																	
	✓		Operates when fault trips other than low voltage occur																	
✓			Operates when auto restart fails (PRT- 08–09)																	
OUT-31 Relay1	Set relay output (Relay 1).																			
OUT-33 Q1 Define	Select output for multi-function output terminal (Q1). Q1 is open collector TR output.																			
OUT-53 TripOut On Dly.	If a fault trip occurs, trip relay or multi-function output operates after the time delay set in OUT-53. Terminal is off with the input initialized after the time delay set in OUT-53.																			
OUT-54 TripOut OffDly																				

Advanced Features


5.34.3 Multi-function Output Terminal Delay Time Settings

Set on-delay and off-delay times separately to control the output terminal and relay operation times. The delay time set at codes OUT-50–51 applies to multi-function output terminal (Q1) and relay (Relay 1), except when the multi-function output function is in fault trip mode.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
OUT	50	Multi-function output On delay	DO On Delay	0.00	0.00–100.00	s
	51	Multi-function output Off delay	DO Off Delay	0.00	0.00–100.00	s
	52	Select multi-function output terminal	DO NC/NO Sel	00*	00–11	bit

Output Terminal Delay Time Setting Details

Code	Description						
OUT-52 DO NC/NO Sel	Select terminal type for relay and multi-function output terminal. An additional three terminal type selection bits at the terminal block will be added when an expansion I/O is added. By setting the relevant bit to 0, it will operate A terminal (Normally Open), and setting it to 1 will operate B terminal (Normally Closed). Shown below in the table are Relay 1 and Q1 settings starting from the right bit.						
	<table border="1"> <thead> <tr> <th>Item</th> <th>bit on</th> <th>bit off</th> </tr> </thead> <tbody> <tr> <td>LCD keypad</td> <td></td> <td></td> </tr> </tbody> </table>	Item	bit on	bit off	LCD keypad		
Item	bit on	bit off					
LCD keypad							

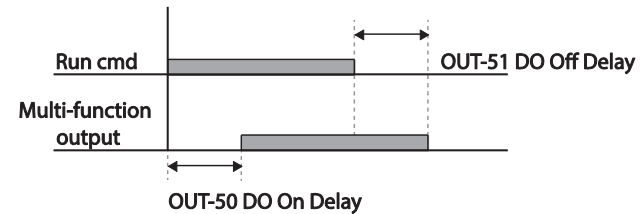

5.35 Keypad Language Settings

Select the language to be displayed on the LCD keypad. Keypad SW Ver 1.04 and above provides language selections.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit	
CNF	01	Select keypad language	Language Sel	0	English	-	-
				1	Russian		
				2	Spanish		
				3	Italian		
				4	Turkish		

5.36 Operation State Monitor

The inverter's operation condition can be monitored using the LCD keypad. If the monitoring option is selected in config (CNF) mode, a maximum of four items can be monitored simultaneously. Monitoring mode displays three different items on the LCD keypad, but only one item can be displayed in the status window at a time.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
CNF	20	Display item condition display window	Anytime Para	0	Frequency	-
	21	Monitor mode display 1	Monitor Line-1	0	Frequency	Hz
	22	Monitor mode display 2	Monitor Line-2	2	Output Current	A
	23	Monitor mode display 3	Monitor Line-3	3	Output Voltage	V
	24	Monitor mode initialize	Mon Mode Init	0	No	-

Advanced Features

Operation State Monitor Setting Details

Code	Description																																								
CNF-20 AnyTime Para	Select items to display on the top-right side of the LCD keypad screen. Choose the parameter settings based on the information to be displayed. Codes CNF-20–23 share the same setting options as listed in the table below.																																								
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Frequency On stop, displays the set frequency. During operation, displays the actual output frequency (Hz).</td> </tr> <tr> <td>1</td> <td>Speed On stop, displays the set speed (rpm). During operation, displays the actual operating speed (rpm).</td> </tr> <tr> <td>2</td> <td>Output Current Displays output current.</td> </tr> <tr> <td>3</td> <td>Output Voltage Displays output voltage.</td> </tr> <tr> <td>4</td> <td>Output Power Displays output power.</td> </tr> <tr> <td>5</td> <td>WHour Counter Displays inverter power consumption.</td> </tr> <tr> <td>6</td> <td>DCLink Voltage Displays DC link voltage within the inverter.</td> </tr> <tr> <td>7</td> <td>DI Status Displays input terminal status of the terminal block. Starting from the right, displays P1–P8.</td> </tr> <tr> <td>8</td> <td>DO Status Displays output terminal status of the terminal block. Starting from the right, Relay1, Relay2, and Q1.</td> </tr> <tr> <td>9</td> <td>V1 Monitor[V] Displays the input voltage value at terminal V1 (V).</td> </tr> <tr> <td>10</td> <td>V1 Monitor[%] Displays input voltage terminal V1 value as a percentage. If -10 V, 0 V, +10 V is measured, -100%, 0%, 100% will be displayed.</td> </tr> <tr> <td>13</td> <td>V2 Monitor[V] Displays input voltage terminal V2 value (V).</td> </tr> <tr> <td>14</td> <td>V2 Monitor[%] Displays input voltage terminal V2 value as a percentage.</td> </tr> <tr> <td>15</td> <td>I2 Monitor[mA] Displays input current terminal I2 value (A).</td> </tr> <tr> <td>16</td> <td>I2 Monitor[%] Displays input current terminal I2 value as a percentage.</td> </tr> <tr> <td>17</td> <td>PID Output Displays output of PID controller.</td> </tr> <tr> <td>18</td> <td>PID Ref Value Displays reference value of PID controller.</td> </tr> <tr> <td>19</td> <td>PID Fdb Value Displays feedback volume of PID controller.</td> </tr> <tr> <td>20</td> <td>Torque If the torque reference command mode (DRV-08) is set to a value other than keypad (0 or 1), the torque reference value is displayed.</td> </tr> </tbody> </table>	Setting	Function	0	Frequency On stop, displays the set frequency. During operation, displays the actual output frequency (Hz).	1	Speed On stop, displays the set speed (rpm). During operation, displays the actual operating speed (rpm).	2	Output Current Displays output current.	3	Output Voltage Displays output voltage.	4	Output Power Displays output power.	5	WHour Counter Displays inverter power consumption.	6	DCLink Voltage Displays DC link voltage within the inverter.	7	DI Status Displays input terminal status of the terminal block. Starting from the right, displays P1–P8.	8	DO Status Displays output terminal status of the terminal block. Starting from the right, Relay1, Relay2, and Q1.	9	V1 Monitor[V] Displays the input voltage value at terminal V1 (V).	10	V1 Monitor[%] Displays input voltage terminal V1 value as a percentage. If -10 V, 0 V, +10 V is measured, -100%, 0%, 100% will be displayed.	13	V2 Monitor[V] Displays input voltage terminal V2 value (V).	14	V2 Monitor[%] Displays input voltage terminal V2 value as a percentage.	15	I2 Monitor[mA] Displays input current terminal I2 value (A).	16	I2 Monitor[%] Displays input current terminal I2 value as a percentage.	17	PID Output Displays output of PID controller.	18	PID Ref Value Displays reference value of PID controller.	19	PID Fdb Value Displays feedback volume of PID controller.	20	Torque If the torque reference command mode (DRV-08) is set to a value other than keypad (0 or 1), the torque reference value is displayed.
	Setting	Function																																							
	0	Frequency On stop, displays the set frequency. During operation, displays the actual output frequency (Hz).																																							
	1	Speed On stop, displays the set speed (rpm). During operation, displays the actual operating speed (rpm).																																							
	2	Output Current Displays output current.																																							
	3	Output Voltage Displays output voltage.																																							
	4	Output Power Displays output power.																																							
	5	WHour Counter Displays inverter power consumption.																																							
	6	DCLink Voltage Displays DC link voltage within the inverter.																																							
	7	DI Status Displays input terminal status of the terminal block. Starting from the right, displays P1–P8.																																							
	8	DO Status Displays output terminal status of the terminal block. Starting from the right, Relay1, Relay2, and Q1.																																							
	9	V1 Monitor[V] Displays the input voltage value at terminal V1 (V).																																							
	10	V1 Monitor[%] Displays input voltage terminal V1 value as a percentage. If -10 V, 0 V, +10 V is measured, -100%, 0%, 100% will be displayed.																																							
	13	V2 Monitor[V] Displays input voltage terminal V2 value (V).																																							
	14	V2 Monitor[%] Displays input voltage terminal V2 value as a percentage.																																							
	15	I2 Monitor[mA] Displays input current terminal I2 value (A).																																							
	16	I2 Monitor[%] Displays input current terminal I2 value as a percentage.																																							
	17	PID Output Displays output of PID controller.																																							
	18	PID Ref Value Displays reference value of PID controller.																																							
19	PID Fdb Value Displays feedback volume of PID controller.																																								
20	Torque If the torque reference command mode (DRV-08) is set to a value other than keypad (0 or 1), the torque reference value is displayed.																																								

Code	Description	
21	Torque Limit	If torque limit setting (CON-53) is set to a value other than keypad (0 or 1), the torque limit value is displayed.
23	Spd Limit	If the speed limit setting (CON-62) on torque control mode is set to a value other than keypad (0 or 1), the speed limit setting is displayed.
CNF-21–23 Monitor Line-x	Select the items to be displayed in monitor mode. Monitor mode is the first displayed mode when the inverter is powered on. A total of three items, from monitor line-1 to monitor line- 3, can be displayed simultaneously.	
CNF-24 Mon Mode Init	Selecting 1(Yes) initializes CNF-20–23.	

Note**Inverter power consumption**

Values are calculated using voltage and current. Electric power is calculated every second and the results are accumulated. Setting CNF-62 (WH Count Reset) value to 1(Yes) will reset cumulated electric energy consumption. Power consumption is displayed as shown below:

- Less than 1,000 kW: Units are in kW, displayed in 999.9 kW format.
- 1–99 MW: Units are in MW, displayed in 99.99 MWh format.
- 100–999 MW: Units are in MW, displayed in 999.9 MWh format.
- More than 1,000 MW: Units are in MW, displayed in 9,999 MWh format and can be displayed up to 65,535 MW. (Values exceeding 65,535MW will reset the value to 0, and units will return to kW. It will be displayed in 999.9 kW format).

5.37 Operation Time Monitor

Monitors inverter and fan operation time.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
CNF	70	Inverter operation accumulated time	On-time	0/00/00 00:00	-	min
	71	Inverter operation accumulated time	Run-time	0/00/00 00:00	-	min
	72	Inverter operation accumulated time initialization	Time Reset	0 No	0–1	-
	74	Cooling fan operation accumulated time	Fan time	0/00/00 00:00	-	min
	75	Cooling fan operation accumulated time initialization	Fan Time Reset	0 No	0–1	-

Operation Time Monitor Setting Details

Code	Description
CNF-70 On-time	Displays accumulated power supply time. Information is displayed in [YY/MM/DD Hr: Min (0/00/00 00: 00)] format.
CNF-71 Run-time	Displays accumulated time of voltage output by operation command input. Information is displayed in [YY/MM/DD Hr: Min (0/00/00 00: 00)] format.
CNF-72 Time Reset	Setting 1(Yes) will delete power supply accumulated time (On-time) and operation accumulated time (Run-time) and is displayed as 0/00/00 00:00 format.
CNF-74 Fan time	Displays accumulated time of inverter cooling fan operation. Information will be displayed in [YY/MM/DD Hr: Min (0/00/00 00: 00)] format.
CNF-75 Fan Time Reset	Setting 1(Yes) will delete cooling fan operation accumulated time(on-time) and operation accumulated time (Run-time) and will display it in 0/00/00 00:00 format.

6 Learning Protection Features

Protection features provided by the SX2000 series inverter are categorized into two types: protection from overheating damage to the motor, and protection against the inverter malfunction.

6.1 Motor Protection

6.1.1 Electronic Thermal Motor Overheating Prevention (ETH)


ETH is a protective function that uses the output current of the inverter without a separate temperature sensor, to predict a rise in motor temperature to protect the motor based on its heat characteristics.

Group	Code	Name	LCD Display	Parameter Setting		Setting range	Unit
PRT	40	Electronic thermal prevention fault trip selection	ETH Trip Sel	0	None	0-2	-
	41	Motor cooling fan type	Motor Cooling	0	Self-cool	-	-
	42	Electronic thermal one minute rating	ETH 1min	150		120-200	%
	43	Electronic thermal prevention continuous rating	ETH Cont	120		50-150	%

Communication

Electronic Thermal (ETH) Prevention Function Setting Details

Code	Description											
PRT-40 ETH Trip Sel	ETH can be selected to provide motor thermal protection. The LCD screen displays "E-Thermal."											
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>None</td> <td>The ETH function is not activated.</td> </tr> <tr> <td>1</td> <td>Free-Run</td> <td>The inverter output is blocked. The motor coasts to a halt (free-run).</td> </tr> <tr> <td>2</td> <td>Dec</td> <td>The inverter decelerates the motor to a stop.</td> </tr> </tbody> </table>	Setting	Function	0	None	The ETH function is not activated.	1	Free-Run	The inverter output is blocked. The motor coasts to a halt (free-run).	2	Dec	The inverter decelerates the motor to a stop.
	Setting	Function										
	0	None	The ETH function is not activated.									
1	Free-Run	The inverter output is blocked. The motor coasts to a halt (free-run).										
2	Dec	The inverter decelerates the motor to a stop.										
Select the drive mode of the cooling fan, attached to the motor.												
<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Self-cool</td> <td>As the cooling fan is connected to the motor axis, the cooling effect varies, based on motor speed. Most universal induction motors have this design.</td> </tr> <tr> <td>1</td> <td>Forced-cool</td> <td>Additional power is supplied to operate the cooling fan. This provides extended operation at low speeds. Motors designed for inverters typically have this design.</td> </tr> </tbody> </table>		Setting	Function	0	Self-cool	As the cooling fan is connected to the motor axis, the cooling effect varies, based on motor speed. Most universal induction motors have this design.	1	Forced-cool	Additional power is supplied to operate the cooling fan. This provides extended operation at low speeds. Motors designed for inverters typically have this design.			
Setting	Function											
0	Self-cool	As the cooling fan is connected to the motor axis, the cooling effect varies, based on motor speed. Most universal induction motors have this design.										
1	Forced-cool	Additional power is supplied to operate the cooling fan. This provides extended operation at low speeds. Motors designed for inverters typically have this design.										
PRT-41 Motor Cooling	<p>Continuous rated current (%)</p> <p>Frequency (Hz)</p>											
PRT-42 ETH 1 min	The amount of input current that can be continuously supplied to the motor for 1 minute, based on the motor-rated current (BAS-13).											
PRT-43 ETH Cont	Sets the amount of current with the ETH function activated. The range below details the set values that can be used during continuous operation without the protection function.											

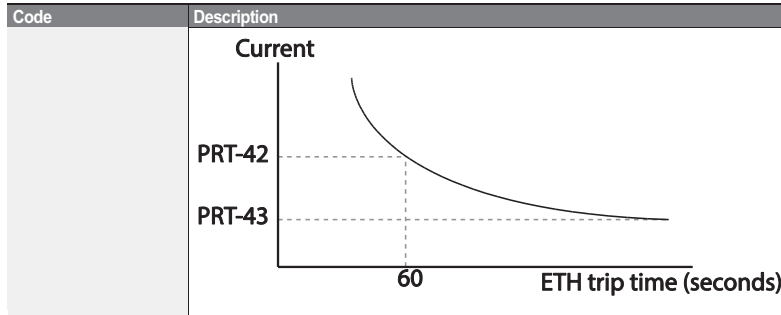

6.1.2 Overload Early Warning and Trip

A warning or fault 'trip' (cutoff) occurs when the motor reaches an overload state, based on the motor's rated current. The amount of current for warnings and trips can be set separately.


Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
PRT	04	Load level setting	Load Duty	1 Heavy Duty	-	-
	17	Overload warning selection	OL Warn Select	1 Yes	0-1	-
	18	Overload warning level	OL Warn Level	150	30-180	%
	19	Overload warning time	OL Warn Time	10.0	0-30	s
	20	Motion at overload trip	OL Trip Select	1 Free-Run	-	-
	21	Overload trip level	OL Trip Level	180	30-200	%
OUT	22	Overload trip time	OL Trip Time	60.0	0-60.0	s
	31	Multi-function relay 1 item	Relay 1	5 Over Load	-	-
	33	Multi-function output 1 item	Q1 Define			

Communication

Overload Early Warning and Trip Setting Details

Coden	Description						
PRT-04 Load Duty	Select the load level.						
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0 Normal Duty</td> <td>Used in underloads, like fans and pumps (overload tolerance: 120% of rated underload current for 1 minute).</td> </tr> <tr> <td>1 Heavy Duty</td> <td>Used in heavy loads, like hoists, cranes, and parking devices (overload tolerance: 150% of rated heavy load current for 1 minute).</td> </tr> </tbody> </table>	Setting	Function	0 Normal Duty	Used in underloads, like fans and pumps (overload tolerance: 120% of rated underload current for 1 minute).	1 Heavy Duty	Used in heavy loads, like hoists, cranes, and parking devices (overload tolerance: 150% of rated heavy load current for 1 minute).
	Setting	Function					
0 Normal Duty	Used in underloads, like fans and pumps (overload tolerance: 120% of rated underload current for 1 minute).						
1 Heavy Duty	Used in heavy loads, like hoists, cranes, and parking devices (overload tolerance: 150% of rated heavy load current for 1 minute).						
PRT-17 OL Warn	If the overload reaches the warning level, the terminal block multi-function						

Coden	Description								
Select	output terminal and relay are used to output a warning signal. If 1 (Yes) is selected, it will operate. If 0 (No) is selected, it will not operate.								
PRT-18 OL Warn Level, PRT-19 OL Warn Time	When the input current to the motor is greater than the overload warning level (OL Warn Level) and continues at that level during the overload warning time (OL Warn Time), the multi-function output (Relay 1, Q1) sends a warning signal. When Over Load is selected at OUT-31 and 33, the multi-function output terminal or relay outputs a signal. The the signal output does not block the inverter output.								
PRT-20 OL Trip Select	Select the inverter protective action in the event of an overload fault trip. <table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0 None</td> <td>No protective action is taken.</td> </tr> <tr> <td>1 Free-Run</td> <td>In the event of an overload fault, inverter output is blocked and the motor will free-run due to inertia.</td> </tr> <tr> <td>3 Dec</td> <td>If a fault trip occurs, the motor decelerates and stops.</td> </tr> </tbody> </table>	Setting	Function	0 None	No protective action is taken.	1 Free-Run	In the event of an overload fault, inverter output is blocked and the motor will free-run due to inertia.	3 Dec	If a fault trip occurs, the motor decelerates and stops.
Setting	Function								
0 None	No protective action is taken.								
1 Free-Run	In the event of an overload fault, inverter output is blocked and the motor will free-run due to inertia.								
3 Dec	If a fault trip occurs, the motor decelerates and stops.								
PRT-21 OL Trip Level, PRT-22 OL Trip Time	When the current supplied to the motor is greater than the preset value at the overload trip level (OL Trip Level) and continues to be supplied during the overload trip time (OL Trip Time), the inverter output is either blocked according to the preset mode from PRT- 17 or slows to a stop after deceleration.								

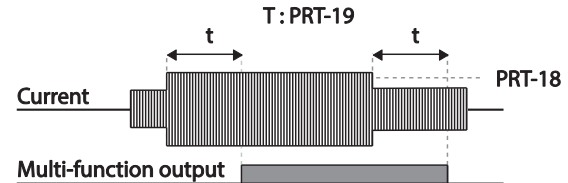

Note

Overload warnings warn of an overload before an overload fault trip occurs. The overload warning signal may not work in an overload fault trip situation, if the overload warn level (OL Warn Level) and the overload warn time (OL Warn Time) are set higher than the overload trip level (OL Trip Level) and overload trip time (OL Trip Time).

6.1.3 Stall Prevention and Flux Braking

The stall prevention function is a protective function that prevents motor stall caused by overloads. If a motor stall occurs due to an overload, the inverter operation frequency is adjusted automatically. When stall is caused by overload, high currents are induced in the motor may cause motor overheat or damage the motor and interrupt operation of the motor-driven devices.


To protect the motor from overload faults, the inverter output frequency is adjusted automatically, based on the size of load.

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
PRT	50	Stall prevention and flux braking	Stall Prevent	0000*	-	bit
	51	Stall frequency 1	Stall Freq 1	60.00	Start frequency--Stall Freq 1	Hz
	52	Stall level 1	Stall Level 1	180	30-250	%
	53	Stall frequency 2	Stall Freq 2	60.00	Stall Freq 1--Stall Freq 3	Hz
	54	Stall level 2	Stall Level 2	180	30-250	%
	55	Stall frequency 3	Stall Freq 3	60.00	Stall Freq 2--Stall Freq 4	Hz
	56	Stall level 3	Stall Level 3	180	30-250	%
	57	Stall frequency 4	Stall Freq 4	60.00	Stall Freq 3--Maximum frequency	Hz
	58	Stall level 4	Stall Level 4	180	30-250	%
OUT	31	Multi-function relay 1 item	Relay 1	9	Stall	-
	33	Multi-function output 1 item	Q1 Define			

Communication

Stall Prevention Function and Flux Braking Setting Details


Code	Description																														
	Stall prevention can be configured for acceleration, deceleration, or while operating a motor at constant speed. When the top LCD segment is on, the corresponding bit is set. When the bottom LCD segment is on, the corresponding bit is off.																														
	<table border="1"> <thead> <tr> <th>Item</th> <th>Bit Status (On)</th> <th>Bit Status (Off)</th> </tr> </thead> <tbody> <tr> <td>LCD keypad</td> <td></td> <td></td> </tr> </tbody> </table>	Item	Bit Status (On)	Bit Status (Off)	LCD keypad																										
Item	Bit Status (On)	Bit Status (Off)																													
LCD keypad																															
	<table border="1"> <thead> <tr> <th colspan="4">Setting</th> <th>Function</th> </tr> <tr> <th>Bit 4</th> <th>Bit 3</th> <th>Bit 2</th> <th>Bit 1</th> <th></th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td></td> <td>✓</td> <td>Stall protection during acceleration</td> </tr> <tr> <td></td> <td></td> <td>✓</td> <td></td> <td>Stall protection while operating at a constant speed</td> </tr> <tr> <td></td> <td>✓</td> <td></td> <td></td> <td>Stall protection during deceleration</td> </tr> <tr> <td>✓</td> <td></td> <td></td> <td></td> <td>Flux braking during deceleration</td> </tr> </tbody> </table>	Setting				Function	Bit 4	Bit 3	Bit 2	Bit 1					✓	Stall protection during acceleration			✓		Stall protection while operating at a constant speed		✓			Stall protection during deceleration	✓				Flux braking during deceleration
Setting				Function																											
Bit 4	Bit 3	Bit 2	Bit 1																												
			✓	Stall protection during acceleration																											
		✓		Stall protection while operating at a constant speed																											
	✓			Stall protection during deceleration																											
✓				Flux braking during deceleration																											
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0001</td> <td>Stall protection during acceleration If inverter output current exceeds the preset stall level (PRT- 52, 54, 56, 58) during acceleration, the motor stops accelerating and starts decelerating. If current level stays above the stall level, the motor decelerates to the start frequency (DRV-19). If the current level causes deceleration below the preset level while operating the stall protection function, the motor resumes acceleration.</td> </tr> <tr> <td>0010</td> <td>Stall protection while operating at constant speed Similar to stall protection function during acceleration, the output frequency automatically decelerates when the current level exceeds the preset stall level while operating at constant speed. When the load current decelerates below the preset level, it resumes acceleration.</td> </tr> <tr> <td>0100</td> <td>Stall protection during deceleration The inverter decelerates and keeps the DC link voltage below a certain level to prevent an over voltage fault trip during deceleration. As a result, deceleration times can be longer than the set time depending on the load.</td> </tr> <tr> <td>1000</td> <td>Flux braking during deceleration When using flux braking, deceleration time may be reduced because regenerative energy is expended at the motor.</td> </tr> <tr> <td>1100</td> <td>Stall protection and flux braking during deceleration Stall protection and flux braking operate together during deceleration to achieve the shortest and most stable deceleration performance.</td> </tr> </tbody> </table>	Setting	Function	0001	Stall protection during acceleration If inverter output current exceeds the preset stall level (PRT- 52, 54, 56, 58) during acceleration, the motor stops accelerating and starts decelerating. If current level stays above the stall level, the motor decelerates to the start frequency (DRV-19). If the current level causes deceleration below the preset level while operating the stall protection function, the motor resumes acceleration.	0010	Stall protection while operating at constant speed Similar to stall protection function during acceleration, the output frequency automatically decelerates when the current level exceeds the preset stall level while operating at constant speed. When the load current decelerates below the preset level, it resumes acceleration.	0100	Stall protection during deceleration The inverter decelerates and keeps the DC link voltage below a certain level to prevent an over voltage fault trip during deceleration. As a result, deceleration times can be longer than the set time depending on the load.	1000	Flux braking during deceleration When using flux braking, deceleration time may be reduced because regenerative energy is expended at the motor.	1100	Stall protection and flux braking during deceleration Stall protection and flux braking operate together during deceleration to achieve the shortest and most stable deceleration performance.																		
Setting	Function																														
0001	Stall protection during acceleration If inverter output current exceeds the preset stall level (PRT- 52, 54, 56, 58) during acceleration, the motor stops accelerating and starts decelerating. If current level stays above the stall level, the motor decelerates to the start frequency (DRV-19). If the current level causes deceleration below the preset level while operating the stall protection function, the motor resumes acceleration.																														
0010	Stall protection while operating at constant speed Similar to stall protection function during acceleration, the output frequency automatically decelerates when the current level exceeds the preset stall level while operating at constant speed. When the load current decelerates below the preset level, it resumes acceleration.																														
0100	Stall protection during deceleration The inverter decelerates and keeps the DC link voltage below a certain level to prevent an over voltage fault trip during deceleration. As a result, deceleration times can be longer than the set time depending on the load.																														
1000	Flux braking during deceleration When using flux braking, deceleration time may be reduced because regenerative energy is expended at the motor.																														
1100	Stall protection and flux braking during deceleration Stall protection and flux braking operate together during deceleration to achieve the shortest and most stable deceleration performance.																														
PRT-50	Stall Prevent																														

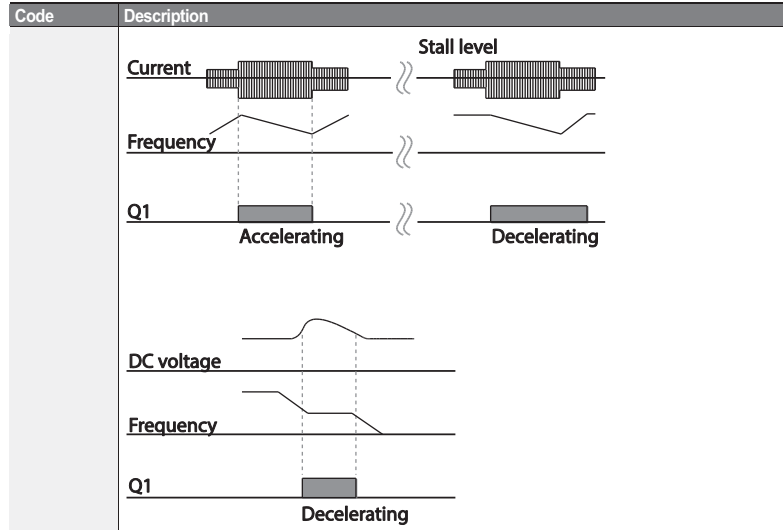

Communication

Additional stall protection levels can be configured for different frequencies, based on the load type. As shown in the graph below, the stall level can be set above the base frequency. The lower and upper limits are set using numbers that correspond in ascending order. For example, the range for Stall Frequency 2 (Stall Freq 2) becomes the lower limit for Stall Frequency 1 (Stall Freq 1) and the upper limit for Stall Frequency 3 (Stall Freq 3).

PRT-51 Stall Freq 1-
PRT-58 Stall Level 4

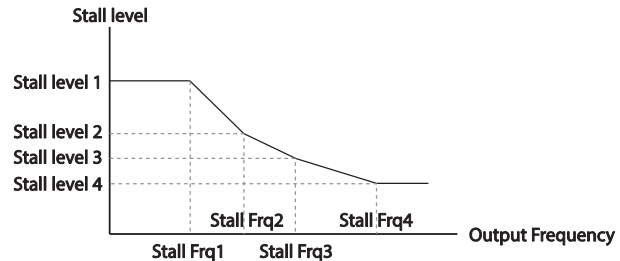

Note

Stall protection and flux braking operate together only during deceleration. Turn on the third and fourth bits of PRT-50 (Stall Prevention) to achieve the shortest and most stable deceleration performance without triggering an overvoltage fault trip for loads with high inertia and short deceleration times. Do not use this function when frequent deceleration of the load is required, as the motor can overheat and may be damaged easily.

Caution

- Use caution when decelerating while using stall protection as depending on the load, the deceleration time can take longer than the time set. Acceleration stops when stall protection operates during acceleration. This may make the actual acceleration time longer than the preset acceleration time.
- When the motor is operating, Stall Level 1 applies and determines the operation of stall protection.

6.2 Inverter and Sequence Protection

6.2.1 Open-phase Protection

Open-phase protection is used to prevent overcurrent levels induced at the inverter inputs due to an open-phase within the input power supply. Open-phase output protection is also available. An open-phase at the connection between the motor and the inverter output may cause the motor to stall, due to a lack of torque.

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
PRT	05	Input/output open-phase protection	Phase Loss Chk	11	-	bit
	06	Open-phase input voltage band	IPO V Band	40	1-100 V	V

Input and Output Open-phase Protection Setting Details

Code	Description										
PRT-05 Phase Loss Chk, PRT-06 IPO V Band	When open-phase protection is operating, input and output configurations are displayed differently. When the top LCD segment is On, the corresponding bit is set to On. When the bottom LCD segment is On, the corresponding bit is set to Off.										
	<table border="1"> <thead> <tr> <th>Item</th> <th>Bit status (On)</th> <th>Bit status (Off)</th> </tr> </thead> <tbody> <tr> <td>LCD keypad</td> <td></td> <td></td> </tr> </tbody> </table>	Item	Bit status (On)	Bit status (Off)	LCD keypad						
	Item	Bit status (On)	Bit status (Off)								
	LCD keypad										
<table border="1"> <thead> <tr> <th colspan="2">Setting</th> <th rowspan="2">Function</th> </tr> <tr> <th>Bit 2</th> <th>Bit 1</th> </tr> </thead> <tbody> <tr> <td>✓</td> <td>✓</td> <td>Output open-phase protection</td> </tr> <tr> <td></td> <td></td> <td>Input open-phase protection</td> </tr> </tbody> </table>	Setting		Function	Bit 2	Bit 1	✓	✓	Output open-phase protection			Input open-phase protection
Setting		Function									
Bit 2	Bit 1										
✓	✓	Output open-phase protection									
		Input open-phase protection									

Communication



6.2.2 External Trip Signal

Set one of the multi-function input terminals to 4 (External Trip) to allow the inverter to stop operation when abnormal operating conditions arise.

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
IN	65-71	Px terminal setting options	Px Define (Px: P1-P7)	4	External Trip	0-54
	87	Multi-function input contact selection	DI NC/NO Sel		-	bit

External Trip Signal Setting Details

Code	Description																							
IN-87 DI NC/NO Sel	Selects the type of input contact. If the mark of the switch is at the bottom (0), it operates as an A contact (Normally Open). If the mark is at the top (1), it operates as a B contact (Normally Closed). The corresponding terminals for each bit are as follows:																							
	<table border="1"> <thead> <tr> <th>Bit</th> <th>11</th> <th>10</th> <th>9</th> <th>8</th> <th>7</th> <th>6</th> <th>5</th> <th>4</th> <th>3</th> <th>2</th> <th>1</th> </tr> </thead> <tbody> <tr> <td>Terminal</td> <td></td> <td></td> <td></td> <td></td> <td>P7</td> <td>P6</td> <td>P5</td> <td>P4</td> <td>P3</td> <td>P2</td> <td>P1</td> </tr> </tbody> </table>	Bit	11	10	9	8	7	6	5	4	3	2	1	Terminal					P7	P6	P5	P4	P3	P2
Bit	11	10	9	8	7	6	5	4	3	2	1													
Terminal					P7	P6	P5	P4	P3	P2	P1													

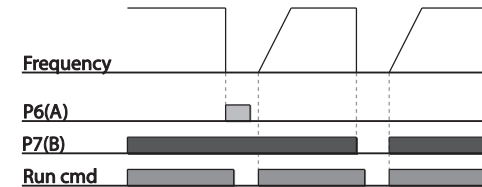

6.2.3 Inverter Overload Protection

When the inverter input current exceeds the rated current, a protective function is activated to prevent damages to the inverter based on inverse proportional characteristics.

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
OUT	31	Multi-function relay 1	Relay 1	6	IOL	-
	33	Multi-function output 1	Q1 Define			

Note

A warning signal output can be provided in advance by the multi-function output terminal before the inverter overload protection function (IOLT) operates. When the overcurrent time reaches 60% of the allowed overcurrent (150%, 1 min), a warning signal output is provided (signal output at 150%, 36sec).

6.2.4 Speed Command Loss

When setting operation speed using an analog input at the terminal block, communication options, or the keypad, speed command loss setting can be used to select the inverter operation for situations when the speed command is lost due to the disconnection of signal cables.


Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
PRT	12	Speed command loss operation mode	Lost Cmd Mode	1	Free-Run	-
	13	Time to determine speed command loss	Lost Cmd Time	1.0	0.1-120	s
	14	Operation frequency at speed command loss	Lost Preset F	0.00	Start frequency–Max. frequency	Hz
	15	Analog input loss decision level	AI Lost Level	0	Half of x1	-
OUT	31	Multi-function Relay 1	Relay 1	13	Lost Command	-
	33	Multi-function output 1	Q1 Define			

Communication

Speed Command Loss Setting Details

Code	Description															
PRT-12 Lost Cmd Mode	In situations when speed commands are lost, the inverter can be configured to operate in a specific mode:															
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>None</td> </tr> <tr> <td>1</td> <td>Free-Run</td> </tr> <tr> <td>2</td> <td>Dec</td> </tr> <tr> <td>3</td> <td>Hold Input</td> </tr> <tr> <td>4</td> <td>Hold Output</td> </tr> <tr> <td>5</td> <td>Lost Preset</td> </tr> </tbody> </table>		Setting	Function	0	None	1	Free-Run	2	Dec	3	Hold Input	4	Hold Output	5	Lost Preset
	Setting	Function														
	0	None														
	1	Free-Run														
	2	Dec														
3	Hold Input															
4	Hold Output															
5	Lost Preset															
Configure the voltage and decision time for speed command loss when using analog input.																
PRT-15 AI Lost Level, PRT-13 Lst Cmd Time	<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Half of x1</td> </tr> <tr> <td>1</td> <td>Below x1</td> </tr> </tbody> </table>		Setting	Function	0	Half of x1	1	Below x1								
	Setting	Function														
0	Half of x1															
1	Below x1															
Based on the values set at IN-08 and IN-12, protective operation starts when the input signal is reduced to half of the initial value of the analog input set using the speed command (DRV-07) and it continues for the time (speed loss decision time) set at PRT- 13 (Lost Cmd Time). For example, set the speed command to 2 (V1) at the 07 code in the DRV group, and IN-06 (V1 Polarity) to 0 (Unipolar). When the voltage input drops to less than half of the value set at IN-08 (V1 Volt x 1), the protective function is activated.																
The protective operation starts when the signal becomes smaller than the initial value of the analog input set by the speed command and it continues for the speed loss decision time set at PRT-13 (Lost Cmd Time). Codes IN-08 and IN-12 are used to set the standard values.																
PRT-14 Lost Preset F	In situations where speed commands are lost, set the operation mode (PRT-12 Lost Cmd Mode) to 5 (Lost Preset). This operates the protection function and sets the frequency so that the operation can continue.															

Set PRT-15 (AI Lost Level) to 1 (Below x 1), PRT-12 (Lost Cmd Mode) to 2 (Dec), and PRT-13 (Lost Cmd Time) to 5 sec. Then it operates as follows:

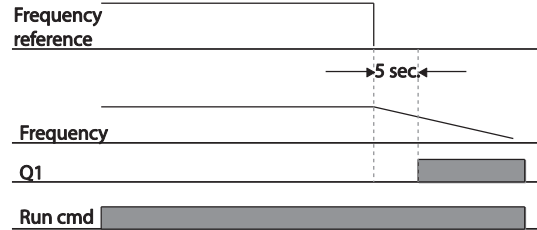

Note

If speed command is lost while using communication options or the integrated RS-485 communication, the protection function operates after the command loss decision time set at PRT-13 (Lost Cmd Time) is passed.

Communication

6.2.5 Dynamic Braking (DB) Resistor Configuration

For SX2000 series, the braking resistor circuit is integrated inside the inverter.

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
PRT	66	Braking resistor configuration	DB Warn %ED	10	0-30	%
OUT	31	Multi-function relay 1 item	Relay 1	31	DB Warn %ED	-
	33	Multi-function output 1 item	Q1 Define			

Dynamic Braking Resistor Setting Details

Code	Description
PRT-66 DB Warn %ED	<p>Set braking resistor configuration (%ED: Duty cycle). Braking resistor configuration sets the rate at which the braking resistor operates for one operation cycle. The maximum time for continuous braking is 15 sec and the braking resistor signal is not output from the inverter after the 15 sec period has expired. An example of braking resistor set up is as follows:</p> $\%ED = \frac{T_{dec}}{T_{acc} + T_{steady} + T_{dec} + T_{stop}} \times 100\%$ <p>[Example 1]</p> $\%ED = \frac{T_{dec}}{T_{dec} + T_{steady1} + T_{acc} + T_{steady2}} \times 100\%$ <p>[Example 2]</p>

Code	Description
	<ul style="list-style-type: none"> • T_acc: Acceleration time to set frequency • T_steady: Constant speed operation time at set frequency • T_dec: Deceleration time to a frequency lower than constant speed operation or the stop time from constant speed operation frequency • T_stop: Stop time until operation resumes

⚠ Caution

Do not set the braking resistor to exceed the resistor's power rating. If overloaded, it can overheat and cause a fire. When using a resistor with a heat sensor, the sensor output can be used as an external trip signal for the inverter's multi-function input.

6.3 Underload Fault Trip and Warning

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit	
PRT	04	Load level selection	Load Duty	0	Normal Duty	-	
	25	Underload warning selection	UL Warn Sel	1	Yes	0-1	
	26	Underload warning time	UL Warn Time	10.0		0-600	sec
	27	Underload trip selection	UL Trip Sel	1	Free-Run	-	-
	28	Underload trip timer	UL Trip Time	30.0		0-600	sec
	29	Underload upper limit level	UL LF Level	30		10-100	%
	30	Underload lower limit level	UL BF Level	30		10-100	%

Under Load Trip and Warning Setting Details

Code	Description
PRT-27 UL Trip Sel	<p>Sets the inverter operation mode for situations when an underload trip occurs. If set to 1 (Free-Run), the output is blocked in an underload fault trip situation. If set to 2 (Dec), the motor decelerates and stops when an underload trip occurs. At PRT-27, the underload rate is decided based on twice the operation frequency of the motor's rated slip speed (BAS-12 Rated Slip).</p> <p>The graph plots Output current on the y-axis against Output frequency on the x-axis. A dashed horizontal line at the top is labeled PRT-30. A dashed vertical line on the x-axis is labeled PRT-29. The x-axis is also marked with 'Rated slip x 2' and 'Base frequency'. The curve shows a smooth, upward-sloping curve that levels off at the PRT-30 current level as it approaches the Base frequency.</p>
PRT-25 UL Warn Sel	Select the underload warning options. Set the multi-function output terminals (at OUT-31 and 33) to 7 (Underload). The warning signals are output when an underload condition arises.
PRT-26 UL Warn Time, PRT-28 UL Trip Time	The protection function operates when the underload level condition explained above is maintained for a set warning time or fault trip time. This function does not operate if energy-saving operation is activated at ADV-50 (E-Save Mode). At PRT-28, the underload rate is decided based on the base frequency set at DRV-18 (Base Freq). When variable torque is required (for example, for fans or pumps), set PRT-04 (Load Duty) to 0 (Normal Duty). For loads operated at constant torques, like elevators and conveyors, set PRT-04 to 1 (Heavy Duty).

Code	Description
PRT-29 UL LF Level, PRT-30 UL BF Level	<p style="text-align: center;">Output current</p> <p style="text-align: center;">Rated slip x 2 Output frequency</p>
	Set the range necessary for underload detection, depending on the type of load.

6.3.1 Fan Fault Detection

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
PRT	79	Cooling fan fault selection	FAN Trip Mode	0	Trip	
OUT	31	Multi-function relay 1	Relay 1	8	FAN Warning	-
OUT	33	Multi-function output 1	Q1 Define			

Fan Fault Detection Setting Details

Code	Description						
PRT-79 FAN Trip Mode	Set the cooling fan fault mode.						
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Trip</td> </tr> <tr> <td>1</td> <td>Warning</td> </tr> </tbody> </table>	Setting	Function	0	Trip	1	Warning
	Setting	Function					
0	Trip						
1	Warning						
OUT33 Q1 Define, OUT31 Relay1	When the code value is set to 8 (FAN Warning), the fan error signal is output and operation continues. However, when the inverter inside temperature rises above a certain level, output is blocked due to activation of overheat protection.						

Communication

6.3.2 Lifetime diagnosis of components

Registering a capacitance reference for inspection

Note

To perform a capacitor diagnosis, a capacitance reference must be measured and registered by setting PRT-61 (CAP Diag) to 1 (Ref Diag) when the inverter is used for the first time. The measured reference value is saved at PRT-63 and is used as the reference for the capacitor life diagnosis.

Refer to the following instructions to measure a reference capacitance.

- Set an appropriate capacitor diagnosis current based on the inverter's rated output at PRT-60 (CAP DiagCurr).
 - The capacitor diagnosis current is a direct current that is applied to the capacitor for inspection, and is defined as a percentage of the rated inverter output. Because the value is defined based on the inverter output, set an appropriate value if the motor has smaller rated current.
- At PRT-62 (CAP Exchange Level), set the capacitor replacement warning level to a value between 50.0% and 95.0%
- Set PRT-61 (CAP Diag) to "1" (Ref Diag). Then, the direct current set at PRT-60 (CAP DiagCurr) is output.
 - The capacitor diagnosis is only available when the inverter is stopped.
 - If PRT-61 is set to 1 (Ref Diag), the displayed value at PRT-63 reflects 100% of the measured capacitance.
 - If you plan to perform a capacitor diagnosis using PRT-61 (CAP Diag), the initial capacitance must be measured when the inverter is used for the first time. A capacitance measured on a used inverter leads to inaccurate inspection results due to an incorrect reference capacitance value.
- Turn off the input to the inverter.
- Turn on the inverter when a low voltage trip (LVT) occurs.
- View the value displayed at PRT-63 (CAP Diag Level). When PRT-61 is set to "1" (Ref Diag), PRT-63 displays $S \times 200\%$ of the capacitance.

[Main Capacitor Diagnosis details]

Group	Code	Name	LCD Display	Setting value	Setting Range	Unit
PRT	60	Capacitance Diagnose current Level	CAP. DiagPerc	0.0	10.0-100.0	%
	61	CAP. Diagnosis mode	CAP. Diag	0	0	None
					1	Ref Diag
					2	Pre Diag
		3	Init Diag			

Learning Protection Features

Group	Code	Name	LCD Display	Setting value	Setting Range	Unit
	62	CAP Exchange Level	CAP Exchange Level	0	50.0 ~ 95.0	%
	63	CAP Diag Level	CAP Diag Level	0	0.0 ~ 100.0	%

Inspecting the capacitor life and initializing the capacitance reference

Refer to the following instructions to inspect the capacitor life and initialize the capacitance reference.

Note

To perform a capacitor diagnosis, a capacitance reference must be measured and registered by setting PRT-61 (CAP Diag) to 1 (Ref Diag) when the inverter is used for the first time. The measured reference value is registered at PRT-63, and is used as the reference for the capacitor life diagnosis.

- 1 On an inverter whose run time has reached the cumulated time for capacitor replacement, set PRT-61 (CAP Diag) to 2 (Pre Diag).
- 2 Check the value displayed at PRT-63 (CAP Diag Level). If the value displayed at PRT-63 is smaller than the value set at PRT-62 (CAP. Level 1), a capacitor replacement warning (CAP Exchange) will occur.
- 3 While the capacitor replacement warning continues, confirm that the first bit at PRT-89 (Inverter State) is set.
- 4 Set PRT-62 to 0.0%. The capacitor replacement warning (CAP Exchange) will be released.
- 5 Set PRT-61 to 3 (CAP. Init) and make sure that the value displayed at PRT-63 has changed to 0.0%.

Lifetime diagnosis for fans

Enter the PRT-87 (Fan exchange warning level) code (%). After the selected usage (%) is reached (out of 50,000 hours), the fan exchange warning message will appear in the multi-functional output or keypad.

The total fan usage level (%) appears at PRT-86. When exchanging fans, you may initialize the accumulated value to 0 by setting the CNF-75 (Initializing accumulated time for cooling fans) to 1.

Group	Code	Name	LCD Display	Setting value	Setting Range	Unit
PRT	86	Accumulated percent of fan usage	FAN Time Perc	0.0	0.0-6553.5	%
	87	Fan exchange warning	FAN Exchange	90.0	0.0-100.0	%
CNF	75	Initialize operation time of cooling fans	FAN Time Rst	0	No	-
				1	Yes	-

Learning Protection Features

Group	Code	Name	LCD Display	Setting value	Setting Range	Unit
OUT	31	Multi-function relay 1	Relay 1	38	FAN Exchange	-
	32	Multi-function relay 2	Relay 2			-
	33	Multi-function output 1	Q1 Define			-

6.3.3 Low Voltage Fault Trip

When inverter input power is lost and the internal DC link voltage drops below a certain voltage level, the inverter stops output and a low voltage trip occurs.

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
PRT	81	Low voltage trip decision delay time	LVT Delay	0.0	0-60	sec
OUT	31	Multi-function relay 1	Relay 1	11	Low Voltage	-
	33	Multi-function output 1	Q1 Define			

Low Voltage Fault Trip Setting Details

Code	Description
PRT-81 LVT Delay	If the code value is set to 11 (Low Voltage), the inverter stops the output first when a low voltage trip condition arises, then a fault trip occurs after the low voltage trip decision time is passed. The warning signal for a low voltage fault trip can be provided using the multi-function output or a relay. However, the low voltage trip delay time (LVT Delay time) does not apply to warning signals.

6.3.4 Output Block by Multi-Function Terminal

When the multi-function input terminal is set as the output block signal terminal and the signal is input to the terminal, then the operation stops.

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
IN	65-71	Px terminal setting options	Px Define(Px: P1-P7)	5 BX	0-54	-

Output Block by Multi-Function Terminal Setting Details

Code	Description
IN-65-71 Px Define	When the operation of the multi-function input terminal is set to 5 (BX) and is turned on during operation, the inverter blocks the output and 'BX' is displayed on the keypad display. While 'BX' is displayed on the keypad screen, the inverter's operation information including the operation frequency and current at the time of BX signal can be monitored. The inverter resumes operation when the BX terminal turns off and operation command is input.

6.3.5 Trip Status Reset

Restart the inverter using the keypad or analog input terminal, to reset the trip status.


Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
IN	65-71	Px terminal setting options	Px Define(Px: P1-P7)	3 RST	0-54	-

Trip Status Reset Setting Details

Code	Description
IN-65-71 Px Define	Press [Stop/Reset] key on the keypad or use the multi-function input terminal to restart the inverter. Set the multi-function input terminal to 3 (RST) and turn on the terminal to reset the trip status.

6.3.6 Inverter Diagnosis State

Check the diagnosis of components or devices for inverter to check if they need to be replaced.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
PRT	89	CAP, FAN replacement warning	Inverter State		Bit 00-10	Bit
					00 -	
					01 CAP Warning	
					10 FAN Warning	

Communication

6.3.7 Operation Mode on Option Card Trip

Option card trips may occur when an option card is used with the inverter. Set the operation mode for the inverter when a communication error occurs between the option card and the inverter body, or when the option card is detached during operation.

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
PRT	80	Operation mode on option card trip	Opt Trip Mode	0 None	0-3	-
				1 Free-Run		
				2 Dec		

Operation Mode on Option Trip Setting Details

Code	Description	
PRT-80 Opt Trip Mode	Setting	Function
	0 None	No operation
	1 Free-Run	The inverter output is blocked and fault trip information is shown on the keypad.

Code	Description	
2	Dec	The motor decelerates to the value set at PRT-07 (Trip Dec Time).

6.3.8 No Motor Trip

If an operation command is run when the motor is disconnected from the inverter output terminal, a 'no motor trip' occurs and a protective operation is performed by the system.

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
PRT	31	Operation on no motor trip	No Motor Trip	0 None	-	-
	32	No motor trip current level	No Motor Level	5	1-100	%
	33	No motor detection time	No Motor Time	3.0	0.1-10	s

No Motor Trip Setting Details

Code	Description
PRT-32 No Motor Level, PRT-33 No Motor Time	If the output current value [based on the rated current (BAS-13)] is lower than the value set at PRT-32 (No Motor Level), and if this continues for the time set at PRT-33 (No Motor Time), a 'no motor trip' occurs.

⚠ Caution

If BAS-07 (V/F Pattern) is set to 1 (Square), set PRT-32 (No Motor Level) to a value lower than the factory default. Otherwise, 'no motor trip' due to a lack of output current will result when the 'no motor trip' operation is set.

6.3.9 Low voltage trip 2

If you set the PRT-82(LV2 Selection) code to Yes (1), the trip notification is displayed when a low voltage trip occurs. In this case, even if the voltage of the DC Link condenser is higher than the trip level, the LV2 trip will not be retrieved. To retrieve the trip, reset the inverter. The trip history will not be saved.

Group	Code	Name	LCD Display	Parameter Setting	Setting Range	Unit
PRT	82	LV2 Selection	LV2 Enable	Yes(1)	0/1	-

6.4 Fault/Warning List

The following list shows the types of faults and warnings that can occur while using the SX2000 inverter. Please refer to 6 [Learning Protection Features](#) on page 183 for details about faults and warnings.

Category	LCD Display	Details	
Major fault	Latch type	Over Current1	Over current trip
		Over Voltage	Over voltage trip
		External Trip	Trip due to an external signal
		NTC Open	Temperature sensor fault trip
		Over Current2	ARM short current fault trip
		Option Trip-x*	Option fault trip*
		Over Heat	Over heat fault trip
		Out Phase Open	Output open-phase fault trip
		In Phase Open	Input open-phase fault trip
		Inverter OLT	Inverter overload fault trip
		Ground Trip	Ground fault trip
		Fan Trip	Fan fault trip
		E-Thermal	Motor overheat fault trip
		Pre-PID Fail	Pre-PID operation failure
		IO Board Trip	IO Board connection fault trip
	Ext-Brake	External brake fault trip	
	No Motor Trip	No motor fault trip	
	Low Voltage 2	Low voltage fault trip during operation	
	ParaWrite Trip	Write parameter fault trip	
	Level type	Low Voltage	Low voltage fault trip
BX		Emergency stop fault trip	
Lost Command		Command loss trip	
Hardware damage	Safety A(B) Err	Safety A(B) contact trip	
	EEP Err	External memory error	
	ADC Off Set	Analog input error	
Minor fault	Watch Dog-1	CPU Watch Dog fault trip	
	Watch Dog-2		
Warning	Overload	Motor overload fault trip	
	Underload	Motor underload fault trip	
	Lost Command	Command loss fault trip warning	
	Overload	Overload warning	
	Underload	Underload warning	
	Inverter OLT	Inverter overload warning	
	Fan Warning	Fan operation warning	
	DB Wam %ED	Braking resistor braking rate warning	
	Retry Tr Tune	Rotor time constant tuning error	
	CAP Exchange	Capacitor replacement warning	
	FAN Exchange	Fan replacement warning	

Communication

* Applies only when an option board is used.

7 RS-485 Communication Features

This section in the user manual explains how to control the inverter with a PLC or a computer over a long distance using the RS-485 communication features. To use the RS-485 communication features, connect the communication cables and set the communication parameters on the inverter. Refer to the communication protocols and parameters to configure and use the RS-485 communication features.

7.1 Communication Standards


Following the RS-485 communication standards, SX2000 products exchange data with a PLC and computer. The RS-485 communication standards support the Multi-drop Link System and offer an interface that is strongly resistant to noise. Please refer to the following table for details about the communication standards.

Item	Standard
Communication method/ Transmission type	RS-485/Bus type, Multi-drop Link System
Inverter type name	SX2000
Number of connected inverters/ Transmission distance	Maximum of 16 inverters / Maximum 1,200m (recommended distance: within 700m)
Recommended cable size	0.75mm ² , (18AWG), Shielded Type Twisted-Pair (STP) Wire
Installation type	Dedicated terminals (S+/S-/SG) on the control terminal block
Power supply	Supplied by the inverter - insulated power source from the inverter's internal circuit
Communication speed	1,200/2,400/9,600/19,200/38,400/57,600/115,200 bps
Control procedure	Asynchronous communications system
Communication system	Half duplex system
Character system	Modbus-RTU: Binary
Stop bit length	1-bit/2-bit
Frame error check	2 bytes
Parity check	None/Even/Odd

7.2 Communication System Configuration

In an RS-485 communication system, the PLC or computer is the master device and the inverter is the slave device. When using a computer as the master, the RS-232 converter must be integrated with the computer, so that it can communicate with the inverter through the RS-232/RS-485 converter. Specifications and performance of converters may vary depending on the manufacturer, but the basic functions are identical. Please refer to the converter manufacturer's user manual for details about features and specifications.

Connect the wires and configure the communication parameters on the inverter by referring to the following illustration of the communication system configuration.

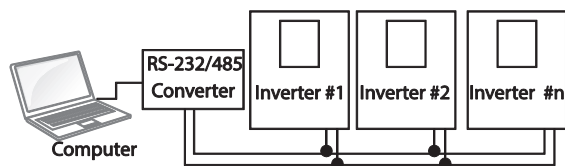

7.2.1 Communication Line Connection

Make sure that the inverter is turned off completely, and then connect the RS-485 communication line to the S+/S-/SG terminals of the terminal block. The maximum number of inverters you can connect is 16. For communication lines, use shielded twisted pair (STP) cables.

The maximum length of the communication line is 1,200 meters, but it is recommended to use no more than 700 meters of communication line to ensure stable communication. Please use a repeater to enhance the communication speed when using a communication line longer than 1,200 meters or when using a large number of devices. A repeater is effective when smooth communication is not available due to noise interference.

⚠ Caution

When wiring the communication line, make sure that the SG terminals on the PLC and inverter are connected. SG terminals prevent communication errors due to electronic noise interference.

7.2.2 Setting Communication Parameters

Before proceeding with setting communication configurations, make sure that the communication lines are connected properly. Turn on the inverter and set the communication parameters.

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
COM	01	Built-in communication inverter ID	Int485 St ID	1	1-250	-
	02	Built-in communication protocol	Int485 Proto	0 ModBus RTU	0, 2	-
	03	Built-in communication speed	Int485 BaudR	3 9600 bps	0-7	-
	04	Built-in communication frame setting	Int485 Mode	0 D8/PN/S1	0-3	-
	05	Transmission delay after reception	Resp Delay	5	0-1000	ms

Communication Parameters Setting Details

Code	Description	
COM-01 Int485 St ID	Set the inverter station ID between 1 and 250.	
COM-02 Int485 Proto	Select Modbus-RTU	
	Setting	Function
	0 Modbus-RTU	Modbus-RTU compatible protocol
COM-03 Int485 BaudR	Set a communication setting speed up to 115,200 bps.	
	Setting	Function
	0	1,200 bps
	1	2,400 bps
	2	4,800 bps
	3	9,600 bps
	4	19,200 bps
	5	38,400 bps
6	56K bps	
7	115 Kbps	
COM-04 Int485 Mode	Set a communication configuration. Set the data length, parity check method, and the number of stop bits.	
	Setting	Function
	0 D8/PN/S1	8-bit data / no parity check / 1 stop bit
	1 D8/PN/S2	8-bit data / no parity check / 2 stop bits
	2 D8/PE/S1	8-bit data / even parity / 1 stop bit
3 D8/PO/S1	8-bit data / odd parity / 1 stop bit	
COM-05 Resp Delay	Set the response time for the slave (inverter) to react to the request from the	

Code	Description
	<p>master. Response time is used in a system where the slave device response is too fast for the master device to process. Set this code to an appropriate value for smooth master-slave communication.</p>

7.2.3 Setting Operation Command and Frequency

To select the built-in RS485 communication as the source of command, set the DRV-06 code to 3 (Int485). Then, set common area parameters for the operation command and frequency via communication.

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit	
DRV	06	Command source	Cmd Source	3	Int 485	0-4	-
	07	Frequency setting method	Freq Ref Src	6	Int 485	0-12	-

Communication

7.2.4 Command Loss Protective Operation

Configure the command loss decision standards and protective operations run when a communication problem lasts for a specified period of time.

Command Loss Protective Operation Setting Details

Code	Description		
	Select the operation to run when a communication error has occurred and lasted exceeding the time set at PRT- 13.		
PRT-12 Lost Cmd Mode, PRT-13 Lost Cmd Time	Setting	Function	
	0	None	The speed command immediately becomes the operation frequency without any protection function.
	1	Free-Run	The inverter blocks output. The motor performs in free-run condition.
	2	Dec	The motor decelerates and then stops at the time set at PRT-07 (Trip Dec Time).
	3	Hold Input	The inverter calculates the average input value for 10 seconds before the loss of the speed command and uses it as the speed reference.
	4	Hold Output	The inverter calculates the average output value for 10 seconds before the loss of the speed command and uses it as the speed reference.
5	Lost Preset	The inverter operates at the frequency set at PRT-14 (Lost Preset F).	

7.2.5 Setting Virtual Multi-Function Input

Multi-function input can be controlled using a communication address (0h0385). Set codes COM-70–77 to the functions to operate, and then set the BIT relevant to the function to 1 at 0h0322 to operate it. Virtual multi-function operates independently from IN-65-71 analog multi-function inputs and cannot be set redundantly. Virtual multi-function input can be monitored using COM-86 (Virt DI Status). Before you configure the virtual multi-function inputs, set the DRV-06 code according to the command source.

Group	Code	Name	LCD Display	Parameter Setting		Setting range	Unit
COM	70-77	Communication multi-function input x	Virtual DI x (x: 1-8)	0	None	0-49	-
	86	Communication multi-function input monitoring	Virt DI Status	-	-	-	-

Example: When sending an Fx command by controlling virtual multi-function input in the common area via Int485, set COM-70 to FX and set address 0h0322 to 0h0001.

Note

The following are values and functions that are applied to address 0h0322:

Setting	Function
0h0001	Forward operation (Fx)
0h0003	Reverse operation (Rx)
0h0000	Stop

Communication

7.2.6 Saving Parameters Defined by Communication

If you turn off the inverter after setting the common area parameters or keypad parameters via communication and operate the inverter, the changes are lost and the values changed via communication revert to the previous setting values when you turn on the inverter.

Set CNF-48 to 1 (Yes) to allow all the changes over communication to be saved, so that the inverter retains all the existing values even after the power has been turned off.

Setting address 0h03E0 to 0 and then setting it again to 1 via communication allows the existing parameter settings to be saved. However, setting address 0h03E0 to 1 and then setting it to 0 does not carry out the same function.

Group	Code	Name	LCD Display	Parameter Setting		Setting range	Unit
CNF	48	Save parameters	Parameter Save	0	No	0 - 1	-
				1	Yes		

7.2.7 Total Memory Map for Communication

Communication Area	Memory Map	Details
Communication common compatible area	0h0000-0h00FF	iS5, iP5A, iV5, iG5A compatible area
Parameter registration type area	0h0100-0h01FF	Areas registered at COM-31–38 and COM-51–58
	0h0200-0h023F	Area registered for User Group
	0h0240-0h027F	Area registered for Macro Group
	0h0280-0h02FF	Reserved
SX2000 communication common area	0h0300-0h037F	Inverter monitoring area
	0h0380-0h03DF	Inverter control area
	0h03E0-0h03FF	Inverter memory control area
	0h0400-0h0FFF	Reserved
	0h1100	DRV Group
	0h1200	BAS Group
	0h1300	ADV Group
	0h1400	CON Group
	0h1500	IN Group
	0h1600	OUT Group
	0h1700	COM Group
	0h1800	APP Group
	0h1B00	PRT Group
	0h1C00	M2 Group

7.2.8 Parameter Group for Data Transmission

By defining a parameter group for data transmission, the communication addresses registered in the communication function group (COM) can be used in communication. Parameter group for data transmission may be defined to transmit multiple parameters at once, into the communication frame.

Group	Code	Name	LCD Display	Parameter Setting	Setting range	Unit
COM	31-38	Output communication address x	Para Status-x	-	-	0000-FFFF Hex
	51-58	Input communication address x	Para Control-x	-	-	0000-FFFF Hex

Currently Registered CM Group Parameter

Address	Parameter	Assigned content by bit
0h0100-0h0107	Status Parameter-1-Status Parameter-8	Parameter communication code value registered at COM-31-38 (Read-only)
0h0110-0h0117	Control Parameter-1-Control Parameter-8	Parameter communication code value registered at COM-51-58 (Read/Write access)

Note

When registering control parameters, register the operation speed (0h0005, 0h0380, 0h0381) and operation command (0h0006, 0h0382) parameters at the end of a parameter control frame. For example, when the parameter control frame has 5 parameter control items (Para Control - x), register the operation speed at Para Control-4 and the operation command to Para Control-5.

Communication

7.3 Communication Protocol

7.3.1 Modbus-RTU Protocol

7.3.1.1 Function Code and Protocol (unit: byte)

In the following section, station ID is the value set at COM-01 (Int485 St ID), and starting address is the communication address. (starting address size is in bytes). For more information about communication addresses, refer to [7.4 Compatible Common Area Parameter](#) on page 217.

Function Code #03: Read Holding Register

Query Field Name	Response Field Name
Station ID	Station ID
Function(0x03)	Function (0x03)
Starting Address Hi	Byte Count
Starting Address Lo	Data Hi
# of Points Hi	Data Lo
# of Points Lo	...
CRC Lo	...
CRC Hi	Data Hi
	Data Lo
	CRC Lo
	CRC Hi

number of Points

Function Code #04: Read Input Register

Query Field Name	Response Field Name
Station ID	Station ID
Function(0x04)	Function (0x04)
Starting Address Hi	Byte Count
Starting Address Lo	Data Hi
# of Points Hi	Data Lo
# of Points Lo	...
CRC Lo	...
CRC Hi	Data Hi
	Data Lo
	CRC Lo
	CRC Hi

number of Points

Function Code #06: Preset Single Register

Query Field Name	Response Field Name
Station ID	Station ID
Function (0x06)	Function (0x06)
Starting Address Hi	Register Address Hi
Register Address Lo	Register Address Lo
Preset Data Hi	Preset Data Hi
Preset Data Lo	Preset Data Lo
CRC Lo	CRC Lo
CRC Hi	CRC Hi

Function Code #16 (hex 0h10): Preset Multiple Register

Query Field Name	Response Field Name
Station ID	Station ID
Function (0x10)	Function (0x10)
Starting Address Hi	Starting Address Hi
Starting Address Lo	Starting Address Lo
# of Register Hi	# of Register Hi
# of Register Lo	# of Register Lo
Byte Count	CRC Lo
Data Hi	CRC Hi
Data Lo	
...	} # number of Points
...	
Data Hi	
Data Lo	
CRC Lo	
CRC Hi	

Exception Code

Code
01: ILLEGAL FUNCTION
02: ILLEGAL DATA ADDRESS
03: ILLEGAL DATA VALUE
06: SLAVE DEVICE BUSY

Response

Field Name
Station ID
Function*
Exception Code
CRC Lo
CRC Hi

* The function value uses the top level bit for all query values.

Example of Modbus-RTU Communication in Use

When the Acc time (Communication address 0x1103) is changed to 5.0 sec and the Dec time (Communication address 0x1104) is changed to 10.0 sec.

Frame Transmission from Master to Slave (Request)

Item	Station ID	Function	Starting Address	# of Register	Byte Count	Data 1	Data 2	CRC
Hex	0x01	0x10	0x1102	0x0002	0x04	0x0032	0x0064	0x1202
Description	COM-01 Int485 St ID	Preset Multiple Register	Starting Address -1 (0x1103-1)	-	-	50 (ACC time 5.0sec)	100 (DEC time 10.0sec)	-

Frame Transmission from Slave to Master (Response)

Item	Station ID	Function	Starting Address	# of Register	CRC
Hex	0x01	0x10	0x1102	0x0002	0xE534
Description	COM-01 Int485 St ID	Preset Multiple Register	Starting Address -1 (0x1103-1)	-	-

7.4 Compatible Common Area Parameter

The following are common area parameters compatible with Fx2000, Ex2000 & Lx2000

Comm. Address	Parameter	Scale	Unit	R/W	Assigned Content by Bit																																
0h0000	Inverter model	-	-	R	6: SX2000																																
0h0001	Inverter capacity	-	-	R	0: 0.75 kW, 1: 1.5 kW, 2: 2.2 kW 3: 3.7 kW, 4: 5.5 kW, 5: 7.5 kW 6: 11 kW, 7: 15 kW, 8: 18.5 kW 9: 22 kW 10: 30 kW, 11: 37 kW 12: 45 kW 13: 55 kW, 14: 75 kW 256: 0.4 kW, 257: 1.1 kW, 258: 3.0 kW 259: 4.0 kW																																
0h0002	Inverter input voltage	-	-	R	0: 220 V product 1: 440 V product																																
0h0003	Version	-	-	R	Example 0h0100: Version 1.00 Example 0h0101: Version 1.01																																
0h0004	Reserved	-	-	R/W																																	
0h0005	Command frequency	0.01	Hz	R/W																																	
0h0006	Operation command (option)	-	-	R	<table border="1"> <tr><td>B15</td><td>Reserved</td></tr> <tr><td>B14</td><td>0: Keypad Freq,</td></tr> <tr><td>B13</td><td>1: Keypad Torq</td></tr> <tr><td>B12</td><td>2-16: Terminal block multi-step speed</td></tr> <tr><td>B11</td><td>17: Up, 18: Down</td></tr> <tr><td>B10</td><td>19: STEADY</td></tr> <tr><td>B9</td><td>22: V1, 24: V2, 25: I2, 26: Reserved</td></tr> <tr><td>B8</td><td>27: Built-in 485</td></tr> <tr><td>B7</td><td>28: Communication option</td></tr> <tr><td>B6</td><td>30: JOG, 31: PID</td></tr> <tr><td>B5</td><td>0: Keypad</td></tr> <tr><td>B4</td><td>1: Fx/Rx-1</td></tr> <tr><td>B3</td><td>2: Fx/Rx-2</td></tr> <tr><td>B2</td><td>3: Built-in 485</td></tr> <tr><td>B1</td><td>4: Communication option</td></tr> <tr><td>B0</td><td>Reserved</td></tr> </table>	B15	Reserved	B14	0: Keypad Freq,	B13	1: Keypad Torq	B12	2-16: Terminal block multi-step speed	B11	17: Up, 18: Down	B10	19: STEADY	B9	22: V1, 24: V2, 25: I2, 26: Reserved	B8	27: Built-in 485	B7	28: Communication option	B6	30: JOG, 31: PID	B5	0: Keypad	B4	1: Fx/Rx-1	B3	2: Fx/Rx-2	B2	3: Built-in 485	B1	4: Communication option	B0	Reserved
B15	Reserved																																				
B14	0: Keypad Freq,																																				
B13	1: Keypad Torq																																				
B12	2-16: Terminal block multi-step speed																																				
B11	17: Up, 18: Down																																				
B10	19: STEADY																																				
B9	22: V1, 24: V2, 25: I2, 26: Reserved																																				
B8	27: Built-in 485																																				
B7	28: Communication option																																				
B6	30: JOG, 31: PID																																				
B5	0: Keypad																																				
B4	1: Fx/Rx-1																																				
B3	2: Fx/Rx-2																																				
B2	3: Built-in 485																																				
B1	4: Communication option																																				
B0	Reserved																																				
0h0007	Acceleration time	0.1	s	R/W	-																																

Communication

Comm. Address	Parameter	Scale	Unit	R/W	Assigned Content by Bit																																
0h0008	Deceleration time	0.1	s	R/W	-																																
0h0009	Output current	0.1	A	R	-																																
0h000A	Output frequency	0.01	Hz	R	-																																
0h000B	Output voltage	1	V	R	-																																
0h000C	DC link voltage	1	V	R	-																																
0h000D	Output power	0.1	kW	R	-																																
0h000E	Operation status	-	-	R	<table border="1"> <tr><td>B15</td><td>0: Remote, 1: Keypad Local</td></tr> <tr><td>B14</td><td>1: Frequency command source by communication (built-in, option)</td></tr> <tr><td>B13</td><td>1: Operation command source by communication (built-in, option)</td></tr> <tr><td>B12</td><td>Reverse operation command</td></tr> <tr><td>B11</td><td>Forward operation command</td></tr> <tr><td>B10</td><td>Brake release signal</td></tr> <tr><td>B9</td><td>Jog mode</td></tr> <tr><td>B8</td><td>Drive stopped.</td></tr> <tr><td>B7</td><td>DC Braking</td></tr> <tr><td>B6</td><td>Speed reached</td></tr> <tr><td>B5</td><td>Decelerating</td></tr> <tr><td>B4</td><td>Accelerating</td></tr> <tr><td>B3</td><td>Fault Trip - operates according to PRT-30 setting</td></tr> <tr><td>B2</td><td>Operating in reverse direction</td></tr> <tr><td>B1</td><td>Operating in forward direction</td></tr> <tr><td>B0</td><td>Stopped</td></tr> </table>	B15	0: Remote, 1: Keypad Local	B14	1: Frequency command source by communication (built-in, option)	B13	1: Operation command source by communication (built-in, option)	B12	Reverse operation command	B11	Forward operation command	B10	Brake release signal	B9	Jog mode	B8	Drive stopped.	B7	DC Braking	B6	Speed reached	B5	Decelerating	B4	Accelerating	B3	Fault Trip - operates according to PRT-30 setting	B2	Operating in reverse direction	B1	Operating in forward direction	B0	Stopped
B15	0: Remote, 1: Keypad Local																																				
B14	1: Frequency command source by communication (built-in, option)																																				
B13	1: Operation command source by communication (built-in, option)																																				
B12	Reverse operation command																																				
B11	Forward operation command																																				
B10	Brake release signal																																				
B9	Jog mode																																				
B8	Drive stopped.																																				
B7	DC Braking																																				
B6	Speed reached																																				
B5	Decelerating																																				
B4	Accelerating																																				
B3	Fault Trip - operates according to PRT-30 setting																																				
B2	Operating in reverse direction																																				
B1	Operating in forward direction																																				
B0	Stopped																																				
0h000F	Fault trip information	-	-	R	<table border="1"> <tr><td>B15</td><td>Reserved</td></tr> <tr><td>B14</td><td>Reserved</td></tr> <tr><td>B13</td><td>Reserved</td></tr> <tr><td>B12</td><td>Reserved</td></tr> <tr><td>B11</td><td>Reserved</td></tr> <tr><td>B10</td><td>H/W-Diag</td></tr> <tr><td>B9</td><td>Reserved</td></tr> <tr><td>B8</td><td>Reserved</td></tr> <tr><td>B7</td><td>Reserved</td></tr> <tr><td>B6</td><td>Reserved</td></tr> <tr><td>B5</td><td>Reserved</td></tr> <tr><td>B4</td><td>Reserved</td></tr> <tr><td>B3</td><td>Level Type trip</td></tr> <tr><td>B2</td><td>Reserved</td></tr> <tr><td>B1</td><td>Reserved</td></tr> <tr><td>B0</td><td>Latch Type trip</td></tr> </table>	B15	Reserved	B14	Reserved	B13	Reserved	B12	Reserved	B11	Reserved	B10	H/W-Diag	B9	Reserved	B8	Reserved	B7	Reserved	B6	Reserved	B5	Reserved	B4	Reserved	B3	Level Type trip	B2	Reserved	B1	Reserved	B0	Latch Type trip
B15	Reserved																																				
B14	Reserved																																				
B13	Reserved																																				
B12	Reserved																																				
B11	Reserved																																				
B10	H/W-Diag																																				
B9	Reserved																																				
B8	Reserved																																				
B7	Reserved																																				
B6	Reserved																																				
B5	Reserved																																				
B4	Reserved																																				
B3	Level Type trip																																				
B2	Reserved																																				
B1	Reserved																																				
B0	Latch Type trip																																				

Comm. Address	Parameter	Scale	Unit	R/W	Assigned Content by Bit
0h0010	Input terminal information	-	-	R	B15- B7
					Reserved
					B6
					P7
					B5
					P6
					B4
					P5
0h0011	Output terminal information	-	-	R	B3
					P4
					B2
					P3
					B1
					P2
					B0
					P1
					B15
					Reserved
B14					
Reserved					
B13					
Reserved					
B12					
Reserved					
B11					
Reserved					
B10					
Reserved					
B9					
Reserved					
B8					
Reserved					
B7					
Reserved					
B6					
Reserved					
B5					
Reserved					
B4					
Reserved					
B3					
Reserved					
B2					
Reserved					
B1					
MO					
B0					
Relay 1					
0h0012	V1	0.01	%	R	V1 input voltage
0h0013	V2	0.01	%	R	V2 input voltage
0h0014	I2	0.01	%	R	I2 input current
0h0015	Motor rotation speed	1	rpm	R	Displays existing motor rotation speed
0h0016 - 0h0019	Reserved	-	-	-	-
0h001A	Select Hz/rpm	-	-	R	0: Hz unit, 1: rpm unit
0h001B	Display the number of poles for the selected motor	-	-	R	Display the number of poles for the selected motor

Communication

7.5 SX2000 Expansion Common Area Parameter

7.5.1 Monitoring Area Parameter (Read Only)

Comm. Address	Parameter	Scale	Unit	Assigned content by bit
0h0300	Inverter model	-	-	SX2000: 0006h
0h0301	Inverter capacity	-	-	0.4 kW: 1900h, 0.75 kW: 3200h
				1.1 kW: 4011h, 1.5 kW: 4015h
				2.2 kW: 4022h, 3.0 kW: 4030h
				3.7 kW: 4037h, 4.0 kW: 4040h
				5.5 kW: 4055h, 7.5 kW: 4075h
				11 kW: 40B0h, 15 kW: 40F0h
				18.5 kW: 4125h, 22 kW: 4160h
				30 kW: 41E0h, 37 kW: 4250h
0h0302	Inverter input voltage/power (Single phase, 3-phase)/cooling method	-	-	45 kW: 42D0h, 55 kW: 4370h
				75 kW: 44B0h
				100 V single phase self cooling: 0120h, 200 V 3-phase forced cooling: 0231h
				100 V single phase forced cooling: 0121h, 400 V single phase self cooling: 0420h
				200 V single phase self cooling: 0220h, 400 V 3-phase self cooling: 0430h
0h0303	Inverter S/W version	-	-	200 V 3-phase self cooling: 0230h, 400 V single phase forced cooling: 0421h
				200 V single phase forced cooling: 0221h, 400 V 3-phase forced cooling: 0431h
0h0304	Reserved	-	-	(Ex) 0h0100: Version 1.00
0h0305	Inverter operation state	-	-	0h0101: Version 1.01
				B15
				0: Normal state
				B14
				4: Warning occurred
				B13
				8: Fault occurred [operates according to PRT- 30 (Trip Out Mode) setting.]
				B12
B11 -				
B8				
-				
B7				
1: Speed searching				
B6				
2: Accelerating				

RS-485 Communication Features

Comm. Address	Parameter	Scale	Unit	Assigned content by bit	
0h0306	Inverter operation frequency command source	-	-	B5	3: Operating at constant rate 4: Decelerating 5: Decelerating to stop 6: H/W OCS 7: S/W OCS 8: Dwell operating
				B4	
				B3	0: Stopped
				B2	1: Operating in forward direction
				B1	2: Operating in reverse direction
				B0	3: DC operating (0 speed control)
				B15	Operation command source 0: Keypad 1: Communication option 3: Built-in RS 485 4: Terminal block
				B14	
				B13	
				B12	
B11	Frequency command source 0: Keypad speed 1: Keypad torque 2-4: Up/Down operation speed 5: V1, 7: V2, 8: I2 9: Pulse 10: Built-in RS 485 11: Communication option 13: Jog 14: PID 25-39: Multi-step speed frequency				
B10					
B9					
B8					
B7					
B6					
B5					
B4					
B3					
B2					
B1					
B0					
0h0307	LCD keypad S/W version	-	-	(Ex.) 0h0100: Version 1.00	
0h0308	LCD keypad title version	-	-	(Ex.) 0h0101: Version 1.01	
0h0309 -0h30F	Reserved	-	-	-	
0h0310	Output current	0.1	A	-	
0h0311	Output frequency	0.01	Hz	-	
0h0312	Output rpm	0	rpm	-	
0h0313	Motor feedback speed	0	rpm	-32768 rpm-32767 rpm (directional)	
0h0314	Output voltage	1	V	-	
0h0315	DC Link voltage	1	V	-	
0h0316	Output power	0.1	kW	-	
0h0317	Output torque	0.1	%	-	
0h0318	PID reference	0.1	%	-	

RS-485 Communication Features

Comm. Address	Parameter	Scale	Unit	Assigned content by bit	
0h0319	PID feedback	0.1	%	-	
0h031A	Display the number of poles for the 1 st motor	-	-	Displays the number of poles for the first motor	
0h031B	Display the number of poles for the 2 nd motor	-	-	Displays the number of poles for the 2nd motor	
0h031C	Display the number of poles for the selected motor	-	-	Displays the number of poles for the selected motor	
0h031D	Select Hz/rpm	-	-	0: Hz, 1: rpm	
0h031E - 0h031F	Reserved	-	-	-	
0h0320	Digital input information	-	-	B5	Reserved
				-	-
				B7	Reserved
				B6	P7(I/O board)
				B5	P6(I/O board)
				B4	P5(I/O board)
				B3	P4(I/O board)
				B2	P3(I/O board)
				B1	P2(I/O board)
				B0	P1(I/O board)
0h0321	Digital output information	-	-	B15	Reserved
				-	Reserved
				B4	Reserved
				B3	Reserved
				B2	Reserved
				B1	Q1
B0	Relay 1				
0h0322	Virtual digital input information	-	-	B15	Reserved
				-	Reserved
				B8	Reserved
				B7	Virtual DI 8(COM-77)
				B6	Virtual DI 7(COM-76)
				B5	Virtual DI 6(COM-75)
				B4	Virtual DI 5(COM-74)
				B3	Virtual DI 4(COM-73)
				B2	Virtual DI 3(COM-72)
				B1	Virtual DI 2(COM-71)
B0	Virtual DI 1(COM-70)				
0h0323	Display the selected motor	-	-	0: 1st motor/1: 2nd motor	
0h0324	A11	0.01	%	Analog input V1 (I/O board)	

RS-485 Communication Features

Comm. Address	Parameter	Scale	Unit	Assigned content by bit	
0h0325	Reserved	0.01	%		
0h0326	AI3	0.01	%	Analog input V2 (I/O board)	
0h0327	AI4	0.01	%	Analog input I2 (I/O board)	
0h0328	AO1	0.01	%	Analog output 1 (I/O board)	
0h0329	AO2	0.01	%	Analog output 2 (I/O board)	
0h032A	AO3	0.01	%	Reserved	
0h032B	AO4	0.01	%	Reserved	
0h032C	Reserved	-	-		
0h032D	Reserved	-	-		
0h032E	Reserved	-	-		
0h032F	Reserved	-	-		
0h0330	Latch type trip information - 1	-	-	B15	Fuse Open Trip
				B14	Over Heat Trip
				B13	Arm Short
				B12	External Trip
				B11	Overvoltage Trip
				B10	Overcurrent Trip
				B9	NTC Trip
				B8	Reserved
				B7	Reserved
				B6	Input open-phase trip
				B5	Output open-phase trip
				B4	Ground Fault Trip
				B3	E-Thermal Trip
				B2	Inverter Overload Trip
				B1	Underload Trip
0h0331	Latch type trip information - 2	-	-	B0	Overload Trip
				B15	Reserved
				B14	Reserved
				B13	Safety option to block inverter output at the terminal block input (only for products rated at 90 kW and above).
				B12	Reserved
				B11	Reserved
				B10	Bad option card
				B9	No motor trip
				B8	External brake trip
				B7	Bad contact at basic I/O board
				B6	Pre PID Fail
				B5	Error while writing parameter
				B4	Reserved
				B3	FAN Trip
				B2	PTC (Thermal sensor) Trip
B1	Reserved				

Communication

RS-485 Communication Features

Comm. Address	Parameter	Scale	Unit	Assigned content by bit					
0h0332	Level type trip information	-	-	B0	MC Fail Trip				
				B15	Reserved				
				-	-				
				B8	Reserved				
				B7	Reserved				
				B6	Reserved				
				B5	SafetyB				
				B4	SafetyA				
				B3	Keypad Lost Command				
				B2	Lost Command				
				B1	LV				
				B0	BX				
				0h0333	HW Diagnosis Trip information	-	-	B15	Reserved
								-	Reserved
								B6	Reserved
B5	Queue Full								
B4	Reserved								
B3	Watchdog-2 error								
B2	Watchdog-1 error								
B1	EEPROM error								
B0	ADC error								
0h0334	Warning information	-	-					B15	Reserved
				-	Reserved				
				B10	Reserved				
				B9	Auto Tuning failed				
				B8	Keypad lost				
				B7	Encoder disconnection				
				B6	Wrong installation of encoder				
				B5	DB				
				B4	FAN running				
				B3	Lost command				
B2	Inverter Overload								
B1	Underload								
B0	Overload								
0h0335 -0h033F	Reserved	-	-	-					
0h0340	On Time date	0	Day	Total number of days the inverter has been powered on					
0h0341	On Time minute	0	Min	Total number of minutes excluding the total number of On Time days					

Comm. Address	Parameter	Scale	Unit	Assigned content by bit
0h0342	Run Time date	0	Day	Total number of days the inverter has driven the motor
0h0343	Run Time minute	0	Min	Total number of minutes excluding the total number of Run Time days
0h0344	Fan Time date	0	Day	Total number of days the heat sink fan has been running
0h0345	Fan Time minute	0	Min	Total number of minutes excluding the total number of Fan Time days
0h0346-0h0348	Reserved	-	-	-
0h0349	Reserved	-	-	-
0h034A	Option 1	-	-	0: None, 9: CANopen
0h034B	Reserved	-	-	-
0h034C	Reserved	-	-	-

7.5.2 Control Area Parameter (Read/ Write)

Comm. Address	Parameter	Scale	Unit	Assigned Content by Bit				
0h0380	Frequency command	0.01	Hz	Command frequency setting				
0h0381	RPM command	1	rpm	Command rpm setting				
0h0382	Operation command	-	-	B7	Reserved			
				B6	Reserved			
				B5	Reserved			
				B4	Reserved			
				B3	0 → 1: Free-run stop			
				B2	0 → 1: Trip initialization			
				B1	0: Reverse command, 1: Forward command			
				B0	0: Stop command, 1: Run command			
								Example: Forward operation command 0003h, Reverse operation command 0001h.
				0h0383	Acceleration time	0.1	s	Acceleration time setting
0h0384	Deceleration time	0.1	s	Deceleration time setting				
0h0385	Virtual digital input control (0: Off, 1:On)	-	-	B15	Reserved			
				-	Reserved			
				B8	Reserved			
				B7	Virtual DI 8(COM-77)			
				B6	Virtual DI 7(COM-76)			
				B5	Virtual DI 6(COM-75)			
				B4	Virtual DI 5(COM-74)			
				B3	Virtual DI 4(COM-73)			
				B2	Virtual DI 3(COM-72)			
				B1	Virtual DI 2(COM-71)			
B0	Virtual DI 1(COM-70)							
0h0386	Digital output control (0:Off, 1:On)	-	-	B15	Reserved			
				B14	Reserved			
				B13	Reserved			
				B12	Reserved			
				B11	Reserved			
				B10	Reserved			
				B9	Reserved			
				B8	Reserved			
				B7	Reserved			
				B6	Reserved			
				B5	Reserved			
				B4	Reserved			
				B3	Reserved			

Comm. Address	Parameter	Scale	Unit	Assigned Content by Bit	
				B2	Reserved
				B1	Q1 (I/O board, OUT-33: None)
				B0	Relay 1 (I/O board, OUT-31: None)
0h0387	Reserved	-	-	Reserved	
0h0388	PID reference	0.1	%	PID reference command	
0h0389	PID feedback value	0.1	%	PID feedback value	
0h038A	Motor rated current	0.1	A	-	
0h038B	Motor rated voltage	1	V	-	
0h038C-0h038F	Reserved			-	
0h0390	Torque Ref	0.1	%	Torque command	
0h0391	Fwd Pos Torque Limit	0.1	%	Forward motoring torque limit	
0h0392	Fwd Neg Torque Limit	0.1	%	Forward regenerative torque limit	
0h0393	Rev Pos Torque Limit	0.1	%	Reverse motoring torque limit	
0h0394	Rev Neg Torque Limit	0.1	%	Reverse regenerative torque limit	
0h0395	Torque Bias	0.1	%	Torque bias	
0h0396-0h399	Reserved	-	-	-	
0h039A	Anytime Para	-	-	Set the CNF-20 value (refer to 5.36 Operation State Monitor on page 179)	
0h039B	Monitor Line-1	-	-	Set the CNF-21 value (refer to 5.36 Operation State Monitor on page 179)	
0h039C	Monitor Line-2	-	-	Set the CNF-22 value (refer to 5.36 Operation State Monitor on page 179)	
0h039D	Monitor Line-3	-	-	Set the CNF-23 value (refer to 5.36 Operation State Monitor on page 179)	

Communication

Note

A frequency set via communication using the common area frequency address (0h0380, 0h0005) is not saved even when used with the parameter save function. To save a changed frequency to use after a power cycle, follow these steps:

- 1 Set DRV-07 to Keypad-1 and select a random target frequency.
- 2 Set the frequency via communication into the parameter area frequency address (0h1101).
- 3 Perform the parameter save (0h03E0: '1') before turning off the power. After the power cycle, the frequency set before turning off the power is displayed.

7.5.3 Inverter Memory Control Area Parameter (Read and Write)

Comm. Address	Parameter	Scale	Unit	Changeable During Operation	Function
0h03E0	Save parameters	-	-	X	0: No, 1:Yes
0h03E1	Monitor mode initialization	-	-	O	0: No, 1:Yes
0h03E2	Parameter initialization	-	-	X	0: No, 1: All Grp, 2: DRV Grp, 3: BAS Grp, 4: ADV Grp, 5: CON Grp, 6: IN Grp, 7: OUT Grp, 8: COM Grp, 9: APP Grp, 12: PRT Grp, 13: M2 Grp Setting is prohibited during fault trip interruptions.
0h03E3	Display changed parameters	-	-	O	0: No, 1: Yes
0h03E4	Reserved	-	-	-	-
0h03E5	Delete all fault history	-	-	O	0: No, 1: Yes
0h03E6	Delete user-registered codes	-	-	O	0: No, 1: Yes
0h03E7	Hide parameter mode	0	Hex	O	Write: 0-9999 Read: 0: Unlock, 1: Lock
0h03E8	Lock parameter mode	0	Hex	O	Write: 0-9999 Read: 0: Unlock, 1: Lock
0h03E9	Easy start on (easy parameter setup mode)	-	-	O	0: No, 1: Yes
0h03EA	Initializing power consumption	-	-	O	0: No, 1: Yes
0h03EB	Initialize inverter operation accumulative time	-	-	O	0: No, 1: Yes
0h03EC	Initialize cooling fan accumulated operation time	-	-	O	0: No, 1: Yes

Note

- When setting parameters in the inverter memory control area, the values are reflected to the inverter operation and saved. Parameters set in other areas via communication are reflected to the inverter operation, but are not saved. All set values are cleared following an inverter power cycle and revert back to its previous values. When setting parameters via communication, ensure that a parameter save is completed prior to shutting the inverter down.
- Set parameters very carefully. After setting a parameter to 0 via communication, set it to another value. If a parameter has been set to a value other than 0 and a non-zero value is entered again, an error message is returned. The previously-set value can be identified by reading the parameter when operating the inverter via communication.
- The addresses 0h03E7 and 0h03E8 are parameters for entering the password. When the password is entered, the condition will change from Lock to Unlock, and vice versa. When the same parameter value is entered continuously, the parameter is executed just once. Therefore, if the same value is entered again, change it to another value first and then re-enter the previous value. For example, if you want to enter 244 twice, enter it in the following order: 244 → 0 → 244.

⚠ Caution

It may take longer to set the parameter values in the inverter memory control area because all data is saved to the inverter. Be careful as communication may be lost during parameter setup if parameter setup is continues for an extended period of time.

Communication

8 Table of Functions

This chapter lists all the function settings for SX2000 series inverter. Set the parameters required according to the following references. If a set value input is out of range, the following messages will be displayed on the keyboard. In these cases, the inverter will not operate with the [ENT] key.

- Set value not allocated: **rd**
- Set value repetition (multi-function input, PID reference, PID feedback related): **OL**
- Set value not allowed (select value, V2, I2): **no**

8.1 Drive group (PAR→DRV)

In the following table, data shaded in grey will be displayed when the related code has been selected.

SL: Sensorless vector control (DRV-09)

***O/X:** Write-enabled during operation

Code	Comm. Address	Name	LCD Display	Setting Range	Initial value	Property *	V/F	SL	Ref.
00	-	Jump Code	Jump Code	1-99	9	O	O	O	p.45
01	0h1101	Target frequency	Cmd Frequency	Start frequency - Maximum frequency(Hz)	0.00	O	O	O	p.58
02	0h1102	Torque command	Cmd Torque	-180~180[%]	0.0	O	X	O	-
03	0h1103	Acceleration time	Acc Time	0.0-600.0(s)	20.0	O	O	O	p.76
04	0h1104	Deceleration time	Dec Time	0.0-600.0(s)	30.0	O	O	O	p.76
06	0h1106	Command source	Cmd Source	0 Keypad	1: Fx/Rx-1	X	O	O	p.70
				1 Fx/Rx-1					
				2 Fx/Rx-2					
				3 Int 485					
4 Field Bus									
07	0h1107	Frequency reference source	Freq Ref Src	0 Keypad-1	0: Keypad-1	X	O	O	p.58
				1 Keypad-2					
				2 V1					
				4 V2					
				5 I2					
				6 Int 485					
				8 Field Bus					
12 Pulse									
08	0h1108	Torque Reference Setting	Trq Ref Scr	0 Keypad-1	0: Keypad-1	X	X	O	p.142
				1 Keypad-2					
				2 V1					

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial value	Property	V/F	SL	Ref.								
				4	V2												
				5	I2												
				6	Int485												
				8	Fieldbus												
				12	Pulse												
09	0h1109	Control mode	Control Mode	0	V/F	X	O	O	<u>p.83</u> , <u>p.121</u> , <u>p.133</u>								
				2	Slip Compen												
				4	IM Sensorless												
				0	V/F												
10	0h110A	Torque Control	Torque Control	0	No	X	X	O	<u>p.141</u>								
				1	Yes												
11	0h110B	Jog frequency	Jog Frequency	0.00, Start frequency-Maximum frequency(Hz)	10.00	O	O	O	<u>p.112</u>								
12	0h110C	Jog run acceleration time	Jog Acc Time	0.0-600.0(s)	20.0	O	O	O	<u>p.112</u>								
13	0h110D	Jog run deceleration time	Jog Dec Time	0.0-600.0(s)	30.0	O	O	O	<u>p.112</u>								
14	0h110E	Motor capacity	Motor Capacity	0: 0.2 kW, 1: 0.4 kW 2: 0.75 kW, 3: 1.1 kW 4: 1.5 kW, 5: 2.2 kW 6: 3.0 kW, 7: 3.7 kW 8: 4.0 kW, 9: 5.5 kW 10: 7.5 kW, 11: 11.0 kW 12: 15.0 kW, 13: 18.5 kW 14: 22.0 kW 15: 30.0 kW 16:37 kW 17:45.0 kW 18:55.0 kW 19:75 kW 20:90 kW	Varies by Motor capacity	X	O	O	<u>p.130</u>								
				0	Manual					0: Manual	X	O	X				
				1	Auto												
				15	0h110F					Torque boost options	Torque Boost	0	Manual	X	O	X	
												1	Auto				

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial value	Property	V/F	SL	Ref.	
16 ¹	0h1110	Forward Torque boost	Fwd Boost	0.0-15.0(%)	2.0	X	O	X	<u>p.86</u>	
17 ³	0h1111	Reverse Torque boost	Rev Boost	0.0-15.0(%)	2.0	X	O	X	<u>p.86</u>	
18	0h1112	Base frequency	Base Freq	30.00-400.00(Hz)	50.00	X	O	O	<u>p.83</u>	
19	0h1113	Start frequency	Start Freq	0.01-10.00(Hz)	0.50	X	O	O	<u>p.83</u>	
20	0h1114	Maximum frequency	Max Freq	40.00-400.00(Hz)[V/F, Slip Compen]	60.00	X	O	O	<u>p.92</u>	
				40.00-120.00(Hz)[IM Sensorless]						
21	0h1115	Select speed unit	Hz/Rpm Sel	0	Hz Display	O	O	O	<u>p.68</u>	
				1	Rpm Display					
22 ²	0h1116	(+) Torque Gain	(+) Trq Gain	50.0-150.0[%]	100[%]	O	X	O	-	
232	0h1117	(-)Torque Gain	(-) Trq Gain	50.0-150.0[%]	80.0[%]	O	X	O	-	
242	0h1118	(-)Torque Gain0	(-) Trq Gain0	50.0-150.0[%]	80.0[%]	O	X	O	-	
252	0h1119	(-)Torque Offset	(-) Trq Offset	0.0-100.0[%]	40.0[%]	O	X	O	-	
80	0h1150	Select ranges at power input	-	Select ranges inverter displays at power input		0: run frequency	O	O	O	-
				0	Run frequency					
				1	Acceleration time					
				2	Deceleration time					
				3	Command source					
				4	Frequency reference source					
5	Multi-step									

¹ Displayed when DRV-15 is set to 0 (Manual)

² Displayed when DRV-10 is set to 1 (Yes)

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial value	Property	V/F	SL	Ref.										
				speed frequency 1															
				6						Multi-step speed frequency 2									
				7						Multi-step speed frequency 3									
				8						Output current									
				9						Motor RPM									
				10						Inverter DC voltage									
				11						User select signal (DRV-81)									
				12						Currently out of order									
				13						Select run direction									
				14						output current2									
				15						Motor RPM2									
				16						Inverter DC voltage2									
				17						User select signal2 (DRV-81)									
				81						0h1151	Select monitor code	-	Monitors user selected code	0: output voltage	O	O	O	-	
													0						Output voltage(V)
													1						Output electric power(kW)

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial value	Property	V/F	SL	Ref.	
89	0h03E3	Display changed parameter	-	2	Torque (kgf · m)	0: View All	O	O	O	p.159
				0	View All					
90	0h115A	[ESC] key functions	-	1	View Changed	0: None	X	O	O	p.72, p.115
				0	Move to initial position					
				1	JOG Key					
93	0h115D	Parameter initialization	-	2	Local/Remote	0:No	X	O	O	p.156
				0	No					
				1	All Grp					
				2	DRV Grp					
				3	BAS Grp					
				4	ADV Grp					
				5	CON Grp					
				6	IN Grp					
				7	OUT Grp					
				8	COM Grp					
				9	APP Grp					
				12	PRT Grp					
				13	M2 Grp					
94	0h115E	Password registration		0-9999	-	O	O	O	p.157	
95	0h115F	Parameter lock settings		0-9999	-	O	O	O	p.158	
97	0h1161	Software version	-		-	-	O	O	-	
98	0h1162	Display I/O board version	IO SW Ver		-	-	O	O		
99	0h1163	Display I/O board HW version	IO H/W Ver	0	Multiple IO	Standard IO	-	O	O	-
				1	Standard IO					
				2	Standard IO (M)					

8.2 Basic Function group (PAR→BAS)

In the following table, the data shaded in grey will be displayed when a related code has been selected.

SL: Sensorless vector control function (DRV-09)

*O/X: Write-enabled during operation

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
00	-	Jump Code	Jump Code	1-99	20	O	O	O	p.45
01	0h1201	Auxiliary reference source	Aux Ref Src	0 None	0:None	X	O	O	p.108
				1 V1					
				3 V2					
				4 I2					
02 ³	0h1202	Auxiliary command calculation type	Aux Calc Type	0 M+(G*A)	0: M+(GA)	X	O	O	p.108
				1 Mx (G*A)					
				2 M/(G*A)					
				3 M+[M*(G*A)]					
				4 M+G*2(A-50%)					
				5 Mx[G*2(A-50%)					
				6 M/[G*2(A-50%)]					
				7 M+M*G*2(A-50%)					
03	0h1203	Auxiliary command gain	Aux Ref Gain	-200.0-200.0(%)	100.0	O	O	O	p.108
04	0h1204	2nd command source	Cmd 2nd Src	0 Keypad	1: Fx/Rx-1	X	O	O	p.94
				1 Fx/Rx-1					
				2 Fx/Rx-2					
				3 Int 485					
05	0h1205	2nd frequency source	Freq 2nd Src	4 FieldBus	0: Keypad-1	O	O	O	p.94
				0 Keypad-1					
				1 Keypad-2					
				2 V1					
				4 V2					
				5 I2					
				6 Int 485					
				8 FieldBus					
12 Pulse									
06	0h1206	2nd Torque	Trq 2 nd Src	0 Keypad-1	0:	O	X	O	

Function Table

³ Displayed when BAS-01 is not set to 0 (None)

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
		command source		1 Keypad-2	Keypad-1				
				2 V1					
				4 V2					
				5 I2					
				6 Int 485					
				8 FieldBus					
				12 Pulse					
07	0h1207	V/F pattern options	V/F Pattern	0 Linear	0: Linear	X	O	X	p.83
				1 Square					
				2 User V/F					
				3 Square 2					
08	0h1208	Acc/dec standard frequency	Ramp T Mode	0 Max Freq	0: Max Freq	X	O	O	p.76
09	0h1209	Time scale settings	Time Scale	1 Delta Freq	1:0.1 sec	X	O	O	p.76
				0 0.01 sec					
10	0h120A	Input power frequency	60/50 Hz Sel	0 60 Hz	1:50 Hz	X	O	O	p.154
				1 50 Hz					
11	0h120B	Number of motor poles	Pole Number	2-48		X	O	O	p.121
12	0h120C	Rated slip speed	Rated Slip	0-3000(Rpm)		X	O	O	p.121
13	0h120D	Motor rated current	Rated Curr	1.0-1000.0(A)		X	O	O	p.121
14	0h120E	Motor no-load current	No-load Curr	0.0-1000.0(A)		X	O	O	p.121
15	0h120F	Motor rated voltage	Rated Volt	170-480(V)	0	X	O	O	p.87
16	0h1210	Motor efficiency	Efficiency	70-100(%)		X	O	O	p.121
17	0h1211	Load inertia rate	Inertia Rate	0-8		X	O	O	p.121
18	0h1212	Trim power display	Trim Power %	70-130(%)		O	O	O	-
19	0h1213	Input power voltage	AC Input Volt	170-480 V	220/380 V	O	O	O	p.154
20	-	Auto Tuning	Auto Tuning	0 None	0:None	X	X	O	p.130
				1 All (Rotation type)					
				2 ALL (Static type)					
				3 Rs+Lsigma					

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				6 (Rotation type) Tr (Static type)					
21	-	Stator resistor	Rs		Dependent on motor setting	Dependent on motor setting	X	X	O
22	-	Leakage inductance	Lsigma	X			X	O	p.130
23	-	Stator inductance	Ls	X			X	O	p.130
24 ⁴	-	Rotor time constant	Tr	25-5000(ms)	-	X	X	O	p.130
254	-	Stator inductance scale	Ls Scale	50-150(%)	100	X	X	O	-
264	-	Rotor time constant scale	Tr Scale	50-150(%)	100	X	X	O	-
41 ⁵	0h1229	User frequency1	User Freq 1	0.00-Maximum frequency(Hz)	12.50	X	O	X	p.85
425	0h122A	User voltage1	User Volt 1	0-100(%)	25	X	O	X	p.85
435	0h122B	User frequency2	User Freq 2	0.00-0.00-Maximum frequency(Hz)	25.00	X	O	X	p.85
445	0h122C	User voltage2	User Volt 2	0-100(%)	50	X	O	X	p.85
455	0h122D	User frequency3	User Freq 3	0.00-Maximum frequency(Hz)	37.50	X	O	X	p.85
465	0h122E	User voltage3	User Volt 3	0-100(%)	75	X	O	X	p.85
475	0h122F	User frequency4	User Freq 4	0.00-Maximum frequency(Hz)	50	X	O	X	p.85
485	0h1230	User voltage4	User Volt 4	0-100(%)	100	X	O	X	p.85
506 ⁶	0h1232	Multi-step speed frequency1	Step Freq-1	0.00-Maximum frequency(Hz)	0.00	O	O	O	p.68
516	0h1233	Multi-step speed frequency2	Step Freq-2	0.00-Maximum frequency(Hz)	0.00	O	O	O	p.68
526	0h1234	Multi-step speed frequency3	Step Freq-3	0.00-Maximum frequency(Hz)	0.00	O	O	O	p.68
536	0h1235	Multi-step speed frequency4	Step Freq-4	0.00-Maximum frequency(Hz)	0.00	O	O	O	p.68

Function Table

⁴ Displayed when DRV-09 is set to 4(IM Sensorless)

⁵ Displayed when either BAS-07 or M2-25 is set to 2 (User V/F)

⁶ Displayed when one of IN-65-71 is set to Speed-L/M/H
Sx2000 AC Drive (30 kW HD to 90 kW ND)

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
546	0h1236	Multi-step speed frequency5	Step Freq-5	0.00-Maximum frequency(Hz)	0.00	O	O	O	p.68
556	0h1237	Multi-step speed frequency6	Step Freq-6	0.00-Maximum frequency(Hz)	0.00	O	O	O	p.68
566	0h1238	Multi-step speed frequency7	Step Freq-7	0.00-Maximum frequency(Hz)	0.00	O	O	O	p.68
70	0h1246	Multi-step acceleration time1	Acc Time-1	0.0-600.0(s)	20.0	O	O	O	p.78
71	0h1247	Multi-step deceleration time1	Dec Time-1	0.0-600.0(s)	20.0	O	O	O	p.78
72 ⁷	0h1248	Multi-step acceleration time2	Acc Time-2	0.0-600.0(s)	30.0	O	O	O	p.78
737	0h1249	Multi-step deceleration time2	Dec Time-2	0.0-600.0(s)	30.0	O	O	O	p.78
747	0h124A	Multi-step acceleration time3	Acc Time-3	0.0-600.0(s)	40.0	O	O	O	p.78
757	0h124B	Multi-step deceleration time3	Dec Time-3	0.0-600.0(s)	40.0	O	O	O	p.78
767	0h124C	Multi-step acceleration time4	Acc Time-4	0.0-600.0(s)	50.0	O	O	O	p.78
777	0h124D	Multi-step deceleration time4	Dec Time-4	0.0-600.0(s)	50.0	O	O	O	p.78
787	0h124E	Multi-step acceleration time5	Acc Time-5	0.0-600.0(s)	40.0	O	O	O	p.78
797	0h124F	Multi-step deceleration time5	Dec Time-5	0.0-600.0(s)	40.0	O	O	O	p.78
807	0h1250	Multi-step acceleration time6	Acc Time-6	0.0-600.0(s)	30.0	O	O	O	p.78
817	0h1251	Multi-step deceleration	Dec Time-6	0.0-600.0(s)	30.0	O	O	O	p.78

⁷ Displayed when one of IN-65-71 is set to Xcel-L/M/H

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
		time6							
827	0h1252	Multi-step acceleration time7	Acc Time-7	0.0-600.0(s)	20.0	O	O	O	p.78
837	0h1253	Multi-step deceleration time7	Dec Time-7	0.0-600.0(s)	20.0	O	O	O	p.78

Table of Functions

8.3 Advanced Function group (PAR→ADV)

In the following table, the data shaded in grey will be displayed when a related code has been selected.

SL: Sensorless vector control (DRV-09)

*O/X: Write-enabled during operation

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
00	-	Jump Code	Jump Code	1-99	24	O	O	O	p.45
01	0h1301	Acceleration pattern	Acc Pattern	0 Linear	1: S-curve	X	O	O	p.80
02	0h1302	Deceleration pattern	Dec Pattern	1 S-curve		X	O	O	p.80
03 ⁸	0h1303	S-curve acceleration start point gradient	Acc S Start	1-100(%)	40	X	O	O	p.80
048	0h1304	S-curve acceleration end point gradient	Acc S End	1-100(%)	40	X	O	O	p.80
05 ⁹	0h1305	S-curve deceleration start point gradient	Dec S Start	1-100(%)	40	X	O	O	p.80
069	0h1306	S-curve deceleration end point gradient	Dec S End	1-100(%)	40	X	O	O	p.80
07	0h1307	Start Mode	Start Mode	0 Acc 1 DC-Start	0:Acc	X	O	O	p.88
08	0h1308	Stop Mode	Stop Mode	0 Dec 1 DC-Brake 2 Free-Run 4 Power Braking	0:Dec	X	O	O	p.89
09	0h1309	Selection of prohibited rotation direction	Run Prevent	0 None 1 Forward Prev 2 Reverse Prev	0:None	X	O	O	p.73
10	0h130A	Starting with power on	Power-on Run	0 No 1 Yes	0:No	O	O	O	p.74
12 ¹⁰	0h130C	DC braking	DC-Start	0.00-60.00(s)	0.00	X	O	O	p.88

⁸ Displayed when ADV- 01 is set to 1 (S-curve)

⁹ Displayed when ADV- 02 is set to 1 (S-curve)

240

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
		time at startup	Time						
13	0h130D	Amount of applied DC	DC Inj Level	0-200(%)	50	X	O	O	p.88
14 ¹¹	0h130E	Output blocking time before DC braking	DC-Block Time	0.00- 60.00(s)	0.10	X	O	O	p.89
15 ¹¹	0h130F	DC braking time	DC-Brake Time	0.00- 60.00(s)	1.00	X	O	O	p.89
16 ¹¹	0h1310	DC braking rate	DC-Brake Level	0-200(%)	50	X	O	O	p.89
17 ¹¹	0h1311	DC braking frequency	DC-Brake Freq	Start frequency-60 Hz	0.5	X	O	O	p.89
20	0h1314	Dwell frequency on acceleration	Acc Dwell Freq	Start frequency-Maximum frequency(Hz)	5.00	X	O	O	p.119
21	0h1315	Dwell operation time on acceleration	Acc Dwell Time	0.0-60.0(s)	0.0	X	O	O	p.119
22	0h1316	Dwell frequency on deceleration	Dec Dwell Freq	Start frequency-Maximum frequency(Hz)	5.00	X	O	O	p.119
23	0h1317	Dwell operation time on deceleration	Dec Dwell Time	0.0-60.0(s)	0.0	X	O	O	p.119
24	0h1318	Frequency limit	Freq Limit	0 No 1 Yes	0:No	X	O	O	p.92
25 ¹²	0h1319	Frequency lower limit value	Freq Limit Lo	0.00-Upper limit frequency(Hz)	0.50	O	O	O	p.92
26 ¹²	0h131A	Frequency upper limit value	Freq Limit Hi	Lower limit frequency-Maximum frequency(Hz)	maximum frequency	X	O	O	p.92
27	0h131B	Frequency jump	Jump Freq	0 No 1 Yes	0:No	X	O	O	p.93
28 ¹³	0h131C	Jump frequency lower limit1	Jump Lo 1	0.00-Jump frequency upper limit1(Hz)	10.00	O	O	O	p.93

Function Table

¹⁰ Displayed when ADV- 07 is set to 1 (DC-Start)
¹¹ Displayed when ADV- 08 is set to 1 (DC-Brake)
¹² Displayed when ADV- 24 is set to 1 (Yes)
¹³ Displayed when ADV- 27 is set to 1 (Yes)
 Sx2000 AC Drive (30 kW HD to 90 kW ND)

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
29 ¹³	0h131D	Jump frequency upper limit1	Jump Hi 1	Jump frequency lower limit1-Maximum frequency(Hz)	15.00	O	O	O	p.93
30 ¹³	0h131E	Jump frequency lower limit2	Jump Lo 2	0.00-Jump frequency upper limit2(Hz)	20.00	O	O	O	p.93
31 ¹³	0h131F	Jump frequency upper limit2	Jump Hi 2	Jump frequency lower limit2-Maximum frequency(Hz)	25.00	O	O	O	p.93
32 ¹³	0h1320	Jump frequency lower limit3	Jump Lo 3	0.00-Jump frequency upper limit3(Hz)	30.00	O	O	O	p.93
33 ¹³	0h1321	Jump frequency upper limit3	Jump Hi 3	Jump frequency lower limit3-Maximum frequency(Hz)	35.00	O	O	O	p.93
41 ¹⁴	0h1329	Brake release current	BR Rls Curr	0.0-180.0(%)	50.0	O	O	O	p.165
42 ¹⁴	0h132A	Brake release delay time	BR Rls Dly	0.00-10.00(s)	1.00	X	O	O	p.165
44 ¹⁴	0h132C	Brake release Forward frequency	BR Rls Fwd Fr	0.00-Maximum frequency(Hz)	1.00	X	O	O	p.165
45 ¹⁴	0h132D	Brake release Reverse frequency	BR Rls Rev Fr	0.00-Maximum frequency(Hz)	1.00	X	O	O	p.165
46 ¹⁴	0h132E	Brake engage delay time	BR Eng Dly	0.00-10.00(s)	1.00	X	O	O	p.165
47 ¹⁴	0h132F	Brake engage frequency	BR Eng Fr	0.00-Maximum frequency(Hz)	2.00	X	O	O	p.165
50	0h1332	Energy saving operation	E-Save Mode	0 None 1 Manual 2 Auto	0:None	X	O	X	p.141
51 ¹⁵	0h1333	Energy saving level	Energy Save	0-30(%)	0	O	O	X	p.141
60	0h133C	Acc/Dec time transition frequency	Xcel Change Fr	0.00-Maximum frequency(Hz)	0.00	X/A	O	O	p.79
64	0h1340	Cooling fan control	FAN Control	0 During Run 1 Always ON	0:Dur ng	O/A	O	O	p.153

¹⁴ Displayed when either OUT-31 or OUT-33 is set to 35 (BR Control)
¹⁵ Displayed when ADV-50 is not set to 0 (None)

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
65	0h1341	Up/down operation frequency save	U/D Save Mode	2	Temp Control	Run				
				0	No					
66	0h1342	Output contact On/Off control options	On/Off Ctrl Src	1	Yes	0:No	O/A	O	O	p.11 Z
				0	None					
				1	V1					
				3	V2					
				4	I2					
6	Pulse									
67	0h1343	Output contact On level	On-Ctrl Level	0	Output contact off level- 100.00%	90.00	X/A	O	O	p.16 G
				1	Yes					
68	0h1344	Output contact Off level	Off-Ctrl Level	0	None	10.00	X/A	O	O	p.16 G
				1	V1					
70	0h1346	Safe operation selection	Run En Mode	0	Always Enable	0:Always Enable	X/A	O	O	p.11 G
				1	DI Dependent					
71 ¹⁶	0h1347	Safe operation stop options	Run Dis Stop	0	Free-Run	0:Free-Run	X/A	O	O	p.11 G
				1	Q-Stop					
				2	Q-Stop Resume					
72 ¹⁶	0h1348	Safe operation deceleration time	Q-Stop Time	0.0-600.0(s)	5.0	O/A	O	O	p.11 G	
74	0h134A	Selection of regeneration evasion function for press	RegenAvd Sel	0	No	0:No	X/A	O	O	p.16 Z
				1	Yes					
75	0h134B	Voltage level of regeneration evasion motion for press	RegenAvd Level	200 V : 300-400 V 400 V : 600-800 V	350 700	X/A	O	O	p.16 Z	
76 ¹⁷	0h134C	Compensation frequency limit of regeneration evasion for press	CompFreq Limit	0.00- 10.00 Hz	1.00	X/A	O	O	p.16 Z	

Function Table

¹⁶ Displayed when ADV-70 is set to 1 (DI Dependent)

¹⁷ Displayed when ADV-74 is set to 1 (Yes)
Sx2000 AC Drive (30 kW HD to 90 kW ND)

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
77 ¹⁷	0h134D	Regeneration evasion for press P gain	RegenAvd Pgain	0.0- 100.0%	50.0	O/A	O	O	p.16 Z	
78 ¹⁷	0h134E	Regeneration evasion for press I gain	RegenAvd Igain	20-30000(ms)	500	O/A	O	O	p.16 Z	
80	0h1350	Fire Mode Selection	Fire Mode Sel	0	None	0:None	X	O	X	p.10 A
				1	Fire Mode					
				2	Fire Mode Test					
81 ¹⁸	0h1351	Fire Mode operation frequency	Fire Mode Freq	0.00-60.00[Hz]	60.00	X	O	X	p.10 A	
82 ¹⁸	0h1352	Fire Mode operation direction	Fire Mode Dir	0	Forward	0:Forward	X	O	X	p.10 A
				1	Reverse					
83 ¹⁸	-	Fire Mode Count	Fire Mode Cnt	Not able to modify	-	-	-	-	p.10 A	

¹⁸ Displayed when ADV-80 is set to 1(Yes)

Table of Functions

8.4 Control Function group (PAR→CON)

In the following table, the data shaded in grey will be displayed when a related code has been selected.

SL: Sensorless vector control (DRV-09)
 *O/X: Write-enabled during operation

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
00	-	Jump Code	Jump Code	1-99	4	O	O	O	p.145	
04	0h1404	Carrier frequency	Carrier Freq	HD	30-45 kW	3.0	O	O	O	p.149
					V/F : 1.0- 10.0 [kHz] SL : 2.0-10.0 [kHz]					
				ND	55-75 kW	2.0	O	O	O	p.149
					V/F : 1.0- 7.0 [kHz] SL : 2.0-7.0 [kHz]					
										30-45 kW
05	0h1405	Switching mode	PWM Mode	0 1	Normal PWM Lowleakage PWM	0:Normal PWM	X	O	O	p.149
09	0h1409	Initial excitation time	PreExTime	0.00-60.00(s)	1.00	X	X	O	p.136	
10	0h140A	Initial excitation amount	Flux Force	100.0-300.0(%)	100.0	X	X	O	p.136	
11	0h140B	Continued operation duration	Hold Time	0.00-60.00(s)	0.00	X	X	O	p.136	
20	0h1414	Sensorless 2 nd gain	SL2 G View Sel	0	No	0:No	O	X	O	p.136
				1	Yes					

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
		display setting								
21	0h1415	Sensorless speed controller proportional gain1	ASR-SL P Gain1	0-5000(%)		Dependent on motor setting	O	X	O	p.136
22	0h1416	Sensorless speed controller integral gain1	ASR-SL I Gain1	10-9999(ms)			O	X	O	p.136
23 ¹⁹	0h1417	Sensorless speed controller proportional gain2	ASR-SL P Gain2	1.0-1000.0(%)		Dependent on motor setting	O	X	O	p.136
24 ¹⁹	0h1418	Sensorless speed controller integral gain2	ASR-SL I Gain2	1.0-1000.0(%)			O	X	O	p.136
25 ¹⁹	0h1419	Sensorless speed controller integral gain0	ASR-SL I Gain0	1.0-999.9(%)			O	X	O	-
26 ¹⁹	0h141A	Flux estimator proportional gain	Flux P Gain	10-200(%)			O	X	O	p.136
27 ¹⁹	0h141B	Flux estimator integral gain	Flux I Gain	10-200(%)		O	X	O	p.136	
28 ¹⁹	0h141C	Speed estimator proportional gain	S-Est P Gain1	0-32767		Dependent on motor setting	O	X	O	p.136
29 ¹⁹	0h141D	Speed estimator integral gain1	S-Est I Gain1	100-1000			O	X	O	p.136
30 ¹⁹	0h141E	Speed	S-Est I	100-10000			O	X	O	p.136

¹⁹ Displayed when DRV-09 is set to 4 (IM Sensorless) and CIN-20 is set to 1 (YES)

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
		estimator integral gain2	Gain2							
31 ¹⁹	0h141F	Sensorless current controller proportional gain	ACR SL P Gain	10-1000		O	X	O	p.136	
32 ¹⁹	0h1420	Sensorless current controller integral gain	ACR SL I Gain	10 -1000		O	X	O	p.136	
48	-	Current controller P gain	ACR P Gain	0-10000	1200	O	X	O	-	
49	-	Current controller I gain	ACR I Gain	0-10000	120	O	X	O	-	
52	0h1434	Torque controller output filter	Torque Out LPF	0-2000(ms)	0	X	X	O	p.136	
53	0h1435	Torque limit setting options	Torque Lmt Src	0	Keypad-1	0: Keypad-1	X	X	O	p.136
				1	Keypad-2					
				2	V1					
				4	V2					
				5	I2					
				6	Int 485					
				8	FieldBus					
				54 ²⁰	0h1436					
55 ²⁰	0h1437	Positive-direction regeneration torque limit	FWD -Trq Lmt	0.0-200.0(%)	180	O	X	O	p.136	
56 ²⁰	0h1438	Negative-direction reverse torque limit	REV +Trq Lmt	0.0-200.0(%)	180	O	X	O	p.136	
57 ²⁰	0h1439	Negative-	REV -Trq	0.0-200.0(%)	180	O	X	O	p.136	

Function Table

²⁰ Displayed when DRV-09 is set to 1 (Yes). This will change the initial value of the parameter at ADV-74 (Torque limit) to 150%.
Sx2000 AC Drive (30 kW HD to 90 kW ND)

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
		direction regeneration torque limit	Lmt							
62 ²¹	0h143E	Speed limit setting	Speed Lmt Src	0	Keypad-2	0:Keypad-1	X	X	O	-
				1	V1					
				3	V2					
				4	I2					
				5	Int 485					
				6	FieldBus					
				7	Keypad-2					
63 ²¹	0h143F	Positive-direction speed limit	FWD Speed Lmt	0.00–Maximum frequency [Hz]	60.00	O	X	O	-	
64 ²¹	0h1440	Negative-direction speed limit	REV Speed Lmt	0.00–Maximum frequency [Hz]	60.00	O	X	O	-	
65 ²¹	0h1441	Speed limit operation gain	Speed Lmt Gain	100–5000(%)	500	O	X	O	-	
70	0h1446	Speed search mode selection	SS Mode	0	Flying Start-1 ²²	0: Flying Start-1	X	O	O	p.144
				1	Flying Start-2					
71	0h1447	Speed search operation selection	Speed Search	bit	0000- 1111	0000	X	O	O	p.144
				0001	Selection of speed search on acceleration					
				0010	When starting on initialization after fault trip					
				0100	When restarting after instantaneous power interruption					
				1000	When starting with power on					
72 ²³	0h1448	Speed search reference	SS Sup-Current	80-200(%)	150	O	O	O	p.144	

²¹ The CON-62-65 codes are displayed when DRV-10 (Torque control) is set to Yes

²² Will not be Displayed when DRV-09 is set to 4 (IM Sensorless)

²³ Displayed when any of the CON-71 code bits are set to 1 and CON-70 is set to 0 (Flying Start-1)

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
		current							
73 ²⁴	0h1449	Speed search proportional gain	SS P-Gain	0-9999	Flying Start-1 : 100 Flying Start-2 : 600 ²⁵	O	O	O	p.144
74 ²⁴	0h144A	Speed search integral gain	SS I-Gain	0-9999	Flying Start-1 : 200 Flying Start-2 : 1000	O	O	O	p.144
75 ²⁴	0h144B	Output blocking time before speed search	SS Block Time	0.0-60.0(s)	1.0	X	O	O	p.144
76 ²⁴	0h144C	Speed search Estimator gain	Spd Est Gain	50-150(%)	100	O	O	O	-
77	0h144D	Energy buffering selection	KEB Select	0 No 1 Yes	0:No	X	O	O	p.140
78 ²⁶	0h144E	Energy buffering start level	KEB Start Lev	110.0-140.0(%)	125.0	X	O	O	p.140
79 ²⁶	0h144F	Energy buffering stop level	KEB Stop Lev	125.0-145.0(%)	130.0	X	O	O	p.140
80 ²⁶	0h1450	Energy buffering gain	KEB Gain	1-20000	1000	O	O	O	p.140
85 ²⁷	0h1455	Flux estimator proportional gain1	Flux P Gain1	100-700	370	O	X	O	p.136
86 ²⁷	0h1456	Flux estimator	Flux P Gain2	0-100	0	O	X	O	p.136

Function Table

²⁴ Displayed when any of the CON-71 code bits are set to 1

²⁵ The initial value is 1200 when the motor-rated capacity is less than 7.5 kW

²⁶ Displayed when CON-77 is set to 1 (Yes)

²⁷ Displayed when CON-20 is set to 1 (Yes)

Sx2000 AC Drive (30 kW HD to 90 kW ND)

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
87 ²⁷	0h1457	proportional gain2 Flux estimator proportional gain3	Flux P Gain3	0-500	100	O	X	O	p.136
88 ²⁷	0h1458	Flux estimator integral gain1	Flux I Gain1	0-200	50	O	X	O	p.136
89 ²⁷	0h1459	Flux estimator integral gain2	Flux I Gain2	0-200	50	O	X	O	p.136
90 ²⁷	0h145A	Flux estimator integral gain3	Flux I Gain3	0-200	50	O	X	O	p.136
91 ²⁷	0h145B	Sensorless voltage compensation1	SL Volt Comp1	0-60	30	O	X	O	p.136
92 ²⁷	0h145C	Sensorless voltage compensation2	SL Volt Comp2	0-60	20	O	X	O	p.136
93 ²⁷	0h145D	Sensorless voltage compensation3	SL Volt Comp3	0-60	20	O	X	O	p.136
94 ²⁷	0h145E	Sensorless field weakening start frequency	SL FW Freq	80.0-110.0(%)	100.0	X	X	O	p.133
95 ²⁷	0h145F	Sensorless gain switching frequency	SL Fc Freq	0.00-8.00(Hz)	2.00	X	X	O	p.133

8.5 Input Terminal Block Function group (PAR→IN)

In the following table, the data shaded in grey will be displayed when a related code has been selected.

SL: Sensorless vector control (DRV-09)

*O/X: Write-enabled during operation

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
00	-	Jump Code	Jump Code	1-99	65	O	O	O	p.45
01	0h1501	Frequency for maximum analog input	Freq at 100%	Start frequency-Maximum frequency(Hz)	Maximum frequency	O	O	O	p.59
02	0h1502	Torque at maximum analog input	Torque at100%	0.0-200.0(%)	100.0	O	X	X	-
05	0h1505	V1 input voltage display	V1 Monitor(V)	-12.00-12.00(V)	0.00	O	O	O	p.59
06	0h1506	V1 input polarity selection	V1 Polarity	0 Unipolar 1 Bipolar	0: Unipolar	X	O	O	p.59
07	0h1507	Time constant of V1 input filter	V1 Filter	0-10000(ms)	10	O	O	O	p.59
08	0h1508	V1 Minimum input voltage	V1 Volt x1	0.00-10.00(V)	0.00	O	O	O	p.59
09	0h1509	V1 output at Minimum voltage (%)	V1 Perc y1	0.00-100.00(%)	0.00	O	O	O	p.59
10	0h150A	V1 Maximum input voltage	V1 Volt x2	0.00-12.00(V)	10.00	O	O	O	p.59
11	0h150B	V1 output at Maximum voltage (%)	V1 Perc y2	0.00-100.00(%)	100.00	O	O	O	p.59
12 ²⁸	0h150C	V1 Minimum input voltage	V1 -Volt x1'	-10.00- 0.00(V)	0.00	O	O	O	p.62
13 ²⁸	0h150D	V1 output at Minimum voltage (%)	V1 -Perc y1'	-100.00-0.00(%)	0.00	O	O	O	p.62
14 ²⁸	0h150E	V1 Maximum input voltage	V1 -Volt x2'	-12.00- 0.00(V)	-10.00	O	O	O	p.62
15 ²⁸	0h150F	V1 output at Maximum	V1 -Perc y2'	-100.00-0.00(%)	-100.00	O	O	O	p.62

²⁸ Displayed when IN-06 is set to 1 (Bipolar)
Sx2000 AC Drive (30 kW HD to 90 kW ND)

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
		voltage (%)							
16	0h1510	V1 rotation direction change	V1 Inverting	0 No 1 Yes	0: No	O	O	O	p.59
17	0h1511	V1 quantization level	V1 Quantizing	0.00 ²⁹ , 0.04-10.00(%)	0.04	X	O	O	p.59
35 ³⁰	0h1523	V2 input voltage display	V2 Monitor(V)	0.00-12.00(V)	0.00	O	O	O	p.65
37 ³⁰	0h1525	V2 input filter time constant	V2 Filter	0-10000(ms)	10	O	O	O	p.65
38 ³⁰	0h1526	V2 Minimum input voltage	V2 Volt x1	0.00-10.00(V)	0.00	O	X	X	p.65
39 ³⁰	0h1527	V2 output at Minimum voltage (%)	V2 Perc y1	0.00-100.00(%)	0.00	O	O	O	p.65
40 ³⁰	0h1528	V2 Maximum input voltage	V2 Volt x2	0.00-10.00(V)	10	O	X	X	p.65
41 ³⁰	0h1529	V2 output at Maximum voltage (%)	V2 Perc y2	0.00-100.00(%)	100.00	O	O	O	p.65
46 ³⁰	0h152E	V2 rotation direction change	V2 Inverting	0 No 1 Yes	0:No	O	O	O	p.65
47 ³⁰	0h152F	V2 quantization level	V2 Quantizing	0.00 ²⁹ , 0.04-10.00(%)	0.04	O	O	O	p.65
50 ³¹	0h1532	I2 input current display	I2 Monitor (mA)	0-24(mA)	0.00	O	O	O	p.63
52 ³¹	0h1534	I2 input filter time constant	I2 Filter	0-10000(ms)	10	O	O	O	p.63
53 ³¹	0h1535	I2 minimum input current	I2 Curr x1	0.00-20.00(mA)	4.00	O	O	O	p.63
54 ³¹	0h1536	I2 output at Minimum current (%)	I2 Perc y1	0.00-100.00(%)	0.00	O	O	O	p.63
55 ³¹	0h1537	I2 maximum input current	I2 Curr x2	0.00-24.00(mA)	20.00	O	O	O	p.63
56 ³¹	0h1538	I2 output at	I2 Perc y2	0.00-	100.00	O	O	O	p.63

²⁹ Quantizing is not used when set to 0.

³⁰ Displayed when V is selected on the analog current/voltage input circuit selection switch (SW2)

³¹ Displayed when I is selected on the analog current/voltage input circuit selection switch (SW2)

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
		Maximum current (%)		100.00(%)						
61 ³¹	0h153D	Changing rotation direction of I2	I2 Inverting	0	No	0:No	O	O	O	p.63
				1	Yes					
62 ³¹	0h153E	I2 quantization level	I2 Quantizing	0.00 ²⁹ ,0.04-10.00(%)	0.04	O	O	O	p.63	
65	0h1541	P1 terminal function setting	P1 Define	0	None	1:Fx	X	O	O	p.70
				1	Fx					
66	0h1542	P2 terminal function setting	P2 Define	2 Rx	2:Rx	X	O	O	p.70	
67	0h1543	P3 terminal function setting	P3 Define	3 RST	5:BX	X	O	O	p.203	
68	0h1544	P4 terminal function setting	P4 Define	4 External Trip	3:RST	X	O	O	p.192	
69	0h1545	P5 terminal function setting	P5 Define	5 BX	7:Sp-L	X	O	O	p.202	
70	0h1546	P6 terminal function setting	P6 Define	6 JOG	8:Sp-M	X	O	O	p.112	
71	0h1547	P7 terminal function setting	P7 Define	7 Speed-L	9:Sp-H	X	O	O	p.68	
				8 Speed-M					p.68	
				9 Speed-H					p.68	
				11 XCEL-L					p.78	
				12 XCEL-M					p.78	
				13 RUN Enable					p.118	
				14 3-Wire					p.117	
				15 2nd Source					p.94	
				16 Exchange					p.152	
				17 Up					p.115	
				18 Down					p.115	
				20 U/D Clear					p.115	
				21 Analog Hold					p.67	

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
				22 I-Term Clear					p.122	
				23 PID Openloop					p.122	
				24 P Gain2					p.122	
				25 XCEL Stop					p.83	
				26 2nd Motor					p.151	
				34 Pre Excite					-	
				38 Timer In					p.164	
				40 dis Aux Ref					p.108	
				46 FWD JOG					p.114	
				47 REV JOG					p.114	
				49 XCEL-H						
				50 User Seq						
				51 Fire Mode					p.78	
				54 TI						
85	0h1555	Multi-function input terminal On filter	DI On Delay	0-10000(ms)	10	O	O	O	p.95	
86	0h1556	Multi-function input terminal Off filter	DI Off Delay	0-10000(ms)	3	O	O	O	p.95	
87	0h1557	Multi-function input contact selection	DI NC/NO Sel	P7 – P1		000 0000	X	O	O	p.95
				0	A contact (NO)					
				1	B contact (NC)					
89	0h1559	Multi-step command delay time	InCheck Time	1-5000(ms)	1	X	O	O	p.68	
90	0h155A	Multi-function input terminal status	DI Status	P7 – P1		000 0000	O	O	O	p.95
				0	release(Off)					
				1	Connection (On)					
91	0h155B	Pulse input amount display	Pulse Monitor (kHz)	0.00-50.00(kHz)	0.00	O	O	O	p.65	
92	0h155C	TI input filter time constant	TI Filter	0-9999(ms)	10	O	O	O	p.65	
93	0h155D	TI Minimum input pulse	TI Pls x1	0.00-32.00(kHz)	0	O/A	O	O	p.65	
94	0h153E	TI output at Minimum pulse (%)	TI Perc y1	0.00-100.00(%)	0.00	O/A	O	O	p.65	

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
95	0h155F	TI Maximum input pulse	TI Pls x2	0.00-32.00(kHz)	32.00	O/A	O	O	p.65	
96	0h1560	TI Output at Maximum pulse (%)	TI Perc y2	0-100(%)	100.00	O/A	O	O	p.65	
97	0h1561	TI rotation direction change	TI Inverting	0	No	0:No	O/A	O	O	p.65
				1	Yes					
98	0h1562	TI quantization level	TI Quantizing	0.00 ²⁹ , 0.04-10.00(%)	0.04	O/A	O	O	p.65	
99	0h1563	SW1(NPN/PNP)/SW2(V2[I2]) Status display	IO SW State	Bit 00~11	00	O	O	O	-	
				00						V2, NPN
				01						V2, PNP
				10						I2, NPN
				11						I2, PNP

Table of Functions

8.6 Output Terminal Block Function group (PAR→OUT)

In the following table, the data shaded in grey will be displayed when a related code has been selected.

SL: Sensorless vector control (DRV-09)

*O/X: Write-enabled during operation

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
00	-	Jump Code	JumpC ode	1-99	30	O	O	O	p.45	
01	0h1601	Analog output 1 item	AO1 Mode	0	Frequency	0: Freque ncy	O	O	O	p.168
				1	Output Current					
				2	Output Voltage					
				3	DCLink Voltage					
				4	Torque					
				5	Output Power					
				6	Idse					
				7	Iqse					
				8	Target Freq					
				9	Ramp Freq					
				10	Speed Fdb					
				12	PID Ref Value					
				13	PID Fdb Value					
				14	PID Output					
				15	Constant					
02	0h1602	Analog output 1 gain	AO1 Gain	-1000.0-1000.0(%)	100.0	O	O	O	p.168	
03	0h1603	Analog output 1 bias	AO1 Bias	-100.0-100.0(%)	0.0	O	O	O	p.168	
04	0h1604	Analog output 1 filter	AO1 Filter	0-10000(ms)	5	O	O	O	p.168	
05	0h1606	Analog constant output 1	AO1 Const %	0.0-100.0(%)	0.0	O	O	O	p.168	
06	0h1606	Analog output 1 monitor	AO1 Monitor	0.0-1000.0(%)	0.0		O	O	p.168	
07	0h1607	Analog output 2 item	AO2 Mode	0	Frequency					
				1	Output Current					
				2	Output Voltage					
				3	DCLink Voltage					
				4	Torque					
				5	Output Power					
				6	Idse					
				7	Iqse					
				8	Target Freq					
9	Ramp Freq									

Function
Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				10 Speed Fdb					
				12 PID Ref Value					
				13 PID Fdb Value					
				14 PID Output					
				15 Constant					
08	0h1608	Analog output 2 gain	AO2 Gain	-1000.0~1000.0(%)	100.0	O	O	O	p.169
09	0h1609	Analog output 2 bias	AO2 Bias	-100.0~100.0(%)	0.0	O	O	O	p.169
10	0h160A	Analog output 2 filter	AO2 Filter	0~10000(ms)	5	O	O	O	p.169
11	0h160B	Analog constant output 2	AO2 Const %	0.0~100.0(%)	0.0	O	O	O	p.169
12	0h160C	Analog output 2 monitor	AO2 Monitor	0.0~1000.0(%)	0.0		O	O	p.169
				bit 000-111					
				1 Low voltage					
30	0h161E	Fault output item	Trip Out Mode	2 Any faults other than low voltage	010	O	O	O	p.177
				3 Automatic restart final failure					
				0 None					
				1 FDT-1					
				2 FDT-2					
				3 FDT-3					
				4 FDT-4					
				5 Over Load					
				6 IOL					
				7 Under Load					
31	0h161F	Multi-function relay 1 item	Relay 1	8 Fan Warning	29:Trip	O	O	O	p.172
				9 Stall					
				10 Over Voltage					
				11 Low Voltage					
				12 Over Heat					
				13 Lost Command					
				14 Run					
				15 Stop					
				16 Steady					
				17 Inverter Line					
				18 Comm Line					

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				19 Speed Search					
				22 Ready					
				28 Timer Out					
				29 Trip					
				31 DB Warn%ED					
				34 On/Off Control					
				35 BR Control					
				36 CAP. Warning					
				37 Fan Exchange					
				38 Fire Mode					
				0 None					
				1 FDT-1					
				2 FDT-2					
				3 FDT-3					
				4 FDT-4					
				5 Over Load					
				6 IOL					
				7 Under Load					
				8 Fan Warning					
				9 Stall					
				10 Over Voltage					
				11 Low Voltage					
				12 Over Heat					
				13 Lost Command					
33	0h1621	Multi-function output1 item	Q1 Define	14 Run	14:Run	O	O	O	p.172
				15 Stop					
				16 Steady					
				17 Inverter Line					
				18 Comm Line					
				19 Speed Search					
				22 Ready					
				28 Timer Out					
				29 Trip					
				31 DB Warn%ED					
				34 On/Off Control					
				35 BR Control					
				36 CAP. Warning					
				37 Fan Exchange					
				38 Fire Mode					
				39 TO					
41	0h1629	Multi-function output monitor	DO Status	-	00	X	-	-	p.172
50	0h1632	Multi-function output On delay	DO On Delay	0.00-100.00(s)	0.00	O	O	O	p.178

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
51	0h1633	Multi-function output Off delay	DO Off Delay	0.00-100.00(s)	0.00	O	O	O	p.178	
52	0h1634	Multi-function output contact selection	DO NC/NO Sel	Q1, Relay1		00	X	O	O	p.178
				0	A contact (NO)					
				1	B contact (NC)					
53	0h1635	Fault output On delay	TripOut OnDly	0.00-100.00(s)	0.00	O	O	O	p.177	
54	0h1636	Fault output Off delay	TripOut OffDly	0.00-100.00(s)	0.00	O	O	O	p.177	
55	h1637	Timer On delay	TimerOn Delay	0.00-100.00(s)	0.00	O	O	O	p.164	
56	0h1638	Timer Off delay	TimerOff Delay	0.00-100.00(s)	0.00	O	O	O	p.164	
57	0h1639	Detected frequency	FDT Frequency	0.00-Maximum frequency(Hz)	30.00	O	O	O	p.172	
58	0h163A	Detected frequency band	FDT Band	0.00-Maximum frequency(Hz)	10.00	O	O	O	p.172	
61	0h163D	Pulse output gain	TO Mode	0	Frequency	0	O/A	O	O	p.171
				1	Output Current					
				2	Output Voltage					
				3	DCLink Voltage					
				4	Torque					
				5	Output Power					
				6	Idse					
				7	Iqse					
				8	Target Freq					
				9	Ramp Freq					
				10	Speed Fdb					
				12	PID Ref Value					
				13	PID Fdb Value					
				14	PID Output					
				15	Constant					
				62	0h163E					
63	0h163F	Pulse output bias	TO Bias	-100.0-100.0(%)	0.0	O	O	O	p.171	
64	0h1640	Pulse output filter	TO Filter	0-10000(ms)	5	O	O	O	p.171	
65	0h1641	Pulse output constant output 2	TO Const %	0.0-100.0(%)	0.0	O	O	O	p.171	
66	0h1642	Pulse output monitor	TO Monitor	0.0-1000.0(%)	0.0	O	O	O	p.171	

Function Table

Table of Functions

8.7 Communication Function group (PAR→COM)

In the following table, the data shaded in grey will be displayed when a related code has been selected.

SL: Sensorless vector control (DRV-09)

*O/X: Write-enabled during operation

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
00	-	Jump Code	Jump Code	1-99	20	O	O	O	p.45	
01	0h1701	Built-in communication inverter ID	Int485 St ID	1-250	1	O	O	O	p.208	
02 ³²	0h1702	Built-in communication protocol	Int485 Proto	0 ModBus RTU	0: ModBus RTU	O	O	O	p.208	
03 ³²	0h1703	Built-in communication speed	Int485 BaudR	0	1200 bps	3: 9600 bps	O	O	O	p.208
				1	2400 bps					
				2	4800 bps					
				3	9600 bps					
				4	19200 bps					
				5	38400 bps					
				6	56 Kbps					
				7	115 Kbps ³³					
04 ³²	0h1704	Built-in communication frame setting	Int485 Mode	0 D8/PN/S1 1 D8/PN/S2 2 D8/PE/S1 3 D8/PO/S1	0: D8/PN/S1	O	O	O	p.208	
05 ³²	0h1705	Transmission delay after reception	Resp Delay	0-1000(ms)	5ms	O	O	O	p.208	
06 ³⁴	0h1706	Communication option S/W version	FBus S/W Ver	-	0.00	O	O	O	-	
07 ³⁴	0h1707	Communication option inverter ID	FBus ID	0-255	1	O	O	O	-	
08 ³⁴	0h1708	FIELD BUS communication speed	FBUS BaudRate	-	12Mbps	-	O	O	-	
09 ³⁴	0h1709	Communication option LED status	FieldBus LED	-	-	O	O	O	-	

³² Will not be displayed when P2P and Multi KPD is set

³³ 115,200bps

³⁴ Displayed only when a communication option card is installed

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property *	V/F	SL	Ref.
30	0h171E	Number of output parameters	ParaStatus Num	0-8	3	O	O	O	p.213
31	0h171F	Output Communication address1	Para Stauts-1	0000-FFFF Hex	000A	O	O	O	p.212
32	0h1720	Output Communication address2	Para Stauts-2	0000-FFFF Hex	000E	O	O	O	p.212
33	0h1721	Output Communication address3	Para Stauts-3	0000-FFFF Hex	000F	O	O	O	p.212
34	0h1722	Output Communication address4	Para Stauts-4	0000-FFFF Hex	0000	O	O	O	p.212
35	0h1723	Output Communication address5	Para Stauts-5	0000-FFFF Hex	0000	O	O	O	p.212
36	0h1724	Output Communication address6	Para Stauts-6	0000-FFFF Hex	0000	O	O	O	p.212
37	0h1725	Output Communication address7	Para Stauts-7	0000-FFFF Hex	0000	O	O	O	p.212
38	0h1726	Output Communication address8	Para Stauts-8	0000-FFFF Hex	0000	O	O	O	p.212
50	0h1732	Number of input parameters	Para Ctrl Num	0-8	2	O	O	O	p.213
51	0h1733	Input Communication address1	Para Control-1	0000-FFFF Hex	0005	X	O	O	p.212
52	0h1734	Input Communication address2	Para Control-2	0000-FFFF Hex	0006	X	O	O	p.212
53	0h1735	Input Communication address3	Para Control-3	0000-FFFF Hex	0000	X	O	O	p.212
54	0h1736	Input Communication address4	Para Control-4	0000-FFFF Hex	0000	X	O	O	p.212
55	0h1737	Input Communication address5	Para Control-5	0000-FFFF Hex	0000	X	O	O	p.212
56	0h1738	Input Communication	Para Control-6	0000-FFFF Hex	0000	X	O	O	p.212

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property *	V/F	SL	Ref.
		address6							
57	0h1739	Input Communication address7	Para Control-7	0000-FFFF Hex	0000	X	O	O	p.212
58	0h173A	Input Communication address8	Para Control-8	0000-FFFF Hex	0000	X	O	O	p.212
68	0h1744	Field bus data swap	FBus Swap Sel	0 No 1 Yes	0	X	O	O	-
70	0h1746	Communication multi-function input 1	Virtual DI 1	0 None	0:None	O	O	O	p.226
71	0h1747	Communication multi-function input 2	Virtual DI 2	1 Fx	0:None	O	O	O	p.226
72	0h1748	Communication multi-function input 3	Virtual DI 3	2 Rx	0:None	O	O	O	p.226
73	0h1749	Communication multi-function input 4	Virtual DI 4	3 RST	0:None	O	O	O	p.226
74	0h174A	Communication multi-function input 5	Virtual DI 5	4 External Trip	0:None	O	O	O	p.226
75	0h174B	Communication multi-function input 6	Virtual DI 6	5 BX	0:None	O	O	O	p.226
76	0h174C	Communication multi-function input 7	Virtual DI 7	6 JOG	0:None	O	O	O	p.226
77	0h174D	Communication multi-function input 8	Virtual DI 8	7 Speed-L 8 Speed-M 9 Speed-H 11 XCEL-L 12 XCEL-M 13 RUN Enable 14 3-Wire 15 2nd Source 16 Exchange 17 Up 18 Down 20 U/D Clear 21 Analog Hold 22 I-Term	0:None	O	O	O	p.226

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				Clear					
				23 PID Openloop					
				24 P Gain2					
				25 XCEL Stop					
				26 2nd Motor					
				34 Pre Excite					
				38 Timer In					
				40 dis Aux Ref					
				46 FWD JOG					
				47 REV JOG					
				49 XCEL-H					
86	0h1756	Communication multi-function input monitoring	Virt DI Status	-	0	X	O	O	<u>p.211</u>
90	0h175A	Selection of data frame communication monitor	Comm Mon Sel	0 Int485 1 Keypad	0	O	O	O	-
91	0h175B	Data frame Rev count	Rev Frame Num	0-65535	0	O	O	O	-
92	0h175C	Data frame Err count	Err Frame Num	0-65535	0	O	O	O	-
93	0h175D	NAK frame count	NAK Frame Num	0-65535	0	O	O	O	-
94 ³⁵	-	Communication data upload	Comm Update	0 No 1 Yes	0:No	-	O	O	-
95	0h1760	P2P communication selection	Int 485 Func	0 Disable All 1 P2P Master 2 P2P Slave 3 KPD-Ready	0: Disable All	X	O	O	<u>p.96</u>
96 ³⁶	-	DO setting selection	P2P DO Sel	0 No 1 Multi-function setting 2 Multi-function output	0:No	O	O	O	<u>p.96</u>

Function Table

Table of Functions

8.8 Application Function group (PAR→APP)

In the following table, the data shaded in grey will be displayed when a related code has been selected.

SL: Sensorless vector control (DRV-09)

*O/X: Write-enabled during operation

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
00	-	Jump Code	Jump Code	1-99	20	O	O	O	<u>p.45</u>
01	0h1801	Application function selection	App Mode	0 None 1 - 2 Proc PID	0: None	X	O	O	<u>p.122</u>
02	-	Enable user sequence	User Seq En	0 No 1 Yes	0:No	X	O	O	<u>p.98</u>
16 ³⁷	0h1810	PID output monitor	PID Output	(%)	0.00			O	<u>p.122</u>
17 ³⁷	0h1811	PID reference monitor	PID Ref Value	(%)	50.00			O	<u>p.122</u>
18 ³⁷	0h1812	PID feedback monitor	PID Fdb Value	(%)	0.00			O	<u>p.122</u>
19 ³⁷	0h1813	PID reference setting	PID Ref Set	-100.00-100.00(%)	50.00	O		O	<u>p.122</u>
20 ³⁷	0h1814	PID reference source	PID Ref Source	0 Keypad 1 V1 3 V2 4 I2 5 Int 485 7 FieldBus 11 Pulse	0: Keypad	X		O	<u>p.122</u>
21 ³⁷	0h1815	PID feedback source	PID F/B Source	0 V1 2 V2 3 I2 4 Int 485 6 FieldBus 10 Pulse	0:V1	X		O	<u>p.122</u>
22 ³⁷	0h1816	PID controller proportional gain	PID P-Gain	0.0-1000.0(%)	50.0	O		O	<u>p.122</u>
23 ³⁷	0h1817	PID controller integral time	PID I-Time	0.0-200.0(s)	10.0	O		O	<u>p.122</u>
24 ³⁷	0h1818	PID controller differentiation time	PID D-Time	0-1000(ms)	0	O		O	<u>p.122</u>
25 ³⁷	0h1819	PID controller	PID F-Gain	0.0-1000.0(%)	0.0	O		O	<u>p.122</u>

³⁵ Displayed only when a communication option card is installed

³⁶ Displayed when APP-01 is set to 2 (Proc PID)
Sx2000 AC Drive (30 kW HD to 90 kW ND)

³⁷ Displayed when APP-01 is set to 2 (Proc PID)

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
		feed-forward compensation gain							
26 ³⁷	0h181A	Proportional gain scale	P Gain Scale	0.0-100.0(%)	100.0	X	O	O	p.122
27 ³⁷	0h181B	PID output filter	PID Out LPF	0-10000(ms)	0	O	O	O	p.122
28 ³⁷	0h181C	PID Mode	PID Mode	0	Process PID	X	O	O	-
				1	Normal PID				
29 ³⁷	0h181D	PID upper limit frequency	PID Limit Hi	PID lower limit frequency-300.00(Hz)	60.00	O	O	O	p.122
30 ³⁷	0h181E	PID lower limit frequency	PID Limit Lo	-300.00 -PID upper limit frequency(Hz)	-60.00	O	O	O	p.122
31 ³⁷	0h181F	PID output inverse	PID Out Inv	0	No	X	O	O	p.122
				1	Yes				
32 ³⁷	0h1820	PID output scale	PID Out Scale	0.1-1000.0(%)	100.0	X	O	O	p.122
34 ³⁷	0h1822	PID controller motion frequency	Pre-PID Freq	0.00- Maximum frequency(Hz)	0.00	X	O	O	p.122
35 ³⁷	0h1823	PID controller motion level	Pre-PID Exit	0.0-100.0(%)	0.0	X	O	O	p.122
36 ³⁷	0h1824	PID controller motion delay time	Pre-PID Delay	0-9999(s)	600	O	O	O	p.122
37 ³⁷	0h1825	PID sleep mode delay time	PID Sleep DT	0.0-999.9(s)	60.0	O	O	O	p.122
38 ³⁷	0h1826	PID sleep mode frequency	PID Sleep Freq	0.00- Maximum frequency(Hz)	0.00	O	O	O	p.122
39 ³⁷	0h1827	PID wake-up level	PIDWakeUp Lev	0-100(%)	35	O	O	O	p.122
40 ³⁷	0h1828	PID wake-up mode setting	PID WakeUp Mod	0	Below Level	O	O	O	p.122
				1	Above Level				
				2	Beyond Level				
42 ³⁷	0h182A	PID controller unit selection	PID Unit Sel	0	%	O	O	O	p.122
				1	Bar				
				2	mBar				
				3	Pa				
				4	kPa				

Sx2000 AC Drive (30 kW HD to 90 kW ND)

265

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				5	Hz				
				6	rpm				
				7	V				
				8	I				
				9	kW				
				10	HP				
				11	°C				
				12	°F				
43 ³⁷	0h182B	PID unit gain	PID Unit Gain	0.00-300.00(%)	100.00	O	O	O	p.122
44 ³⁷	0h182C	PID unit scale	PID Unit Scale	0	x100	2:x 1	O	O	O
				1	x10				
				2	x 1				
				3	x 0.1				
4	x 0.01								
45 ³⁷	0h182D	PID 2nd proportional gain	PID P2-Gain	0.0-1000.0(%)	100.0	X	O	O	p.122

8.9 Protection Function group (PAR→PRT)

In the following table, the data shaded in grey will be displayed when a related code has been selected.

SL: Sensorless vector control (DRV-09)

*O/X: Write-enabled during operation.

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
00	-	Jump Code	Jump Code	1-99	40	O	O	O	p.45
04	0h1B04	Load level setting	Load Duty	0	Normal Duty	X	O	O	p.185
				1	Heavy Duty				
05	0h1B05	Input/output open-phase protection	Phase Loss Chk	bit	00-11	X	O	O	p.191
				01	Output open phase				
				10	Input open phase				

266

Sx2000 AC Drive (30 kW HD to 90 kW ND)

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property	V/F	SL	Ref.	
06	0h1B06	Input voltage range during open-phase	IPO V Band	1-100(V)	15	X	O	O	p.191	
07	0h1B07	Deceleration time at fault trip	Trip Dec Time	0.0-600.0(s)	3.0	O	O	O	-	
08	0h1B08	Selection of startup on trip reset	RST Restart	0	No	0:No	O	O	O	p.147
				1	Yes					
09	0h1B09	Number of automatic restarts	Retry Number	0-10	0	O	O	O	p.147	
10 ³⁸	0h1B0A	Automatic restart delay time	Retry Delay	0.0-60.0(s)	1.0	O	O	O	p.147	
12	0h1B0C	Motion at speed command loss	Lost Cmd Mode	0	None	0:None	O/A	O	O	p.193
				1	Free-Run					
				2	Dec					
				3	Hold Input					
				4	Hold					
				5	Lost					
13 ³⁹	0h1B0D	Time to decide speed command loss	Lost Cmd Time	0.1-120(s)	1.0	O	O	O	p.193	
14 ³⁹	0h1B0E	Operation frequency at speed command loss	Lost Preset F	Start frequency-Maximum frequency(Hz)	0.00	O	O	O	p.193	
15 ³⁹	0h1B0F	Analog input loss decision level	AI Lost Level	0	Half x1	0:Half of x1	O	O	O	p.193
				1	Below x1					
17	0h1B11	Overload warning selection	OL Warn Select	0	No	0:No	O	O	O	p.185
				1	Yes					

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property	V/F	SL	Ref.	
18	0h1B12	Overload alarm level	OL Warn Level	30-180(%)	150	O	O	O	p.185	
19	0h1B13	Overload warning time	OL Warn Time	0.0-30.0(s)	10.0	O	O	O	p.185	
20	0h1B14	Motion at overload fault	OL Trip Select	0	None	1:Free-Run	O	O	O	p.185
				1	Free-Run					
				2	Dec					
21	0h1B15	Overload fault level	OL Trip Level	30-200(%)	180	O	O	O	p.185	
22	0h1B16	Overload fault time	OL Trip Time	0.0-60.0(s)	60.0	O	O	O	p.185	
25	0h1B19	Underload warning selection	UL Warn Sel	0	No	0:No	O	O	O	p.198
				1	Yes					
26	0h1B1A	Underload warning time	UL Warn Time	0.0-600.0(s)	10.0	O	O	O	p.198	
27	0h1B1B	Underload fault selection	UL Trip Sel	0	None	0:None	O	O	O	p.198
				1	Free-Run					
				2	Dec					
28	0h1B1C	Underload fault time	UL Trip Time	0.0-600.0(s)	30.0	O	O	O	p.198	
29	0h1B1D	Underload lower limit level	UL LF Level	10-30(%)	30	O	O	O	p.198	
30	0h1B1E	Underload upper limit level	UL BF Level	30-100(%)	30	O	O	O	p.198	
31	0h1B1F	No motor motion at detection	No Motor Trip	0	None	0:None	O	O	O	p.204
				1	Free-Run					
32	0h1B20	No motor detection current level	No Motor Level	1-100(%)	5	O	O	O	p.204	
33	0h1B21	No motor detection delay	No Motor Time	0.1-10.0(s)	3.0	O	O	O	p.204	
40	0h1B28	Electronic thermal fault selection	ETH Trip Sel	0	None	0:None	O	O	O	p.183
				1	Free-Run					
				2	Dec					
41	0h1B29	Motor cooling fan type	Motor Cooling	0	Self-cool	0:Self-cool	O	O	O	p.183
				1	Forced-cool					
42	0h1B2A	Electronic thermal 1	ETH 1min	120-200(%)	150	O	O	O	p.183	

³⁸ Displayed when PRT-09 is set higher than 0

³⁹ Displayed when PRT-12 is not set to 0 (NONE)
Sx2000 AC Drive (30 kW HD to 90 kW ND)

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property	V/F	SL	Ref.
		minute rating							
43	0h1B2B	Electronic thermal continuous rating	ETH Cont	50-150(%)	120	O	O	O	p.183
45	0h1B2D	BX trip mode	BX Mode	0 Free-Run 1 Dec	0	X	O	O	-
50	0h1B32	Stall prevention motion and flux braking	Stall Prevent	bit 0000-1111 0001 Accelerating 0010 At constant speed 0100 At deceleration	1000	X	O	O	p.187
51	0h1B33	Stall frequency1	Stall Freq 1	Start frequency-Stall frequency2(Hz)	60.00	O	O	O	p.187
52	0h1B34	Stall level1	Stall Level 1	30-250(%)	180	X	O	O	p.187
53	0h1B35	Stall frequency2	Stall Freq 2	Stall frequency1-Stall frequency3(Hz)	60.00	O	O	O	p.187
54	0h1B36	Stall level2	Stall Level 2	30-250(%)	180	X	O	O	p.187
55	0h1B37	Stall frequency3	Stall Freq 3	Stall frequency2-Stall frequency4(Hz)	60.00	O	O	O	p.187
56	0h1B38	Stall level3	Stall Level 3	30-250(%)	180	X	O	O	p.187
57	0h1B39	Stall frequency4	Stall Freq 4	Stall frequency3-Maximum frequency(Hz)	60.00	O	O	O	p.187
58	0h1B3A	Stall level4	Stall Level 4	30-250(%)	180	X	O	O	p.187
59	0h1B3B	Flux braking gain	Flux Brake Kp	0~150	0	O	O	O	-

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property	V/F	SL	Ref.
60	0h1B3C	CAP diagnosis current level	CAP. DiagCurr Perc	10~100(%)	0	O	O	O	-
61 ⁴⁰	0h1B3D	CAP diagnosis mode	CAP. Diag	0 None 1 Ref Diag 2 Pre Diag 3 Init Diag	0	X	O	-	-
62 ⁴⁰	0h1B3E	CAP Exchange Level	CAP Exchange Level	50.0~95.0(%)	0	X	O	O	-
63 ⁴⁰	0h1B3F	CAP Diag Level	CAP Diag Level	0.0~100.0(%)	100.0	-	O	O	-
66	0h1B42	DB resistor warning level	DB Warn %ED	0-30(%)	0	O	O	O	p.196
73	0h1B22	Speed deviation trip	Speed Dev Trip	0 No 1 Yes	0:No	O	O	O	-
74	0h1B23	Speed deviation band	Speed Dev Band	1~20	5	O	O	O	-
75	0h1B24	Speed deviation decision time	Speed Dev Time	0~120	60	O	O	O	-
79	0h1B4F	Cooling fan fault selection	FAN Trip Mode	0 Trip 1 Warning	0:Trip	O	O	O	p.199
80	0h1B50	Motion selection at option trip	Opt Trip Mode	0 None 1 Free-Run 2 Dec	1:Free-Run	O	O	O	p.203
81	0h1B51	Low voltage fault decision delay time	LVT Delay	0.0-60.0(s)	0.0	X	O	O	p.200
82	0h1B52	LV2 Selection	LV2 Enable	0 No 1 Yes	0: No	X	O	O	-
86	0h1B56	Accumulated percent of fan usage	Fan Time Perc	0.0~100.0(%)	0.0	-	O	O	-
87	0h1B57	Fan exchange warning level	Fan Exchange	0.0~100.0(%)	90.0	O	O	O	-
88	0h1B58	Fan reset time	Fan Time Rst	0 No 1 Yes	0	X	O	O	-
89	0h1B59	CAP, FAN Status	CAP, FAN State	Bit 00~10 00 - 01 CAP Warning	00	-	O	O	-

⁴⁰ The PRT-61~63 codes are displayed when the PRT-60 (CAP. DiagPerc) is set to more than 0.

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				10 FAN Warning					
90	0h1B5A	Warning information	-	-	-		O	O	-
91	0h1B5B	Fault history 1	-	-	-		O	O	-
92	0h1B5C	Fault history 2	-	-	-		O	O	-
93	0h1B5D	Fault history 3	-	-	-		O	O	-
94	0h1B5E	Fault history 4	-	-	-		O	O	-
95	0h1B5F	Fault history 5	-	-	-		O	O	-
96	0h1B60	Fault history deletion	-	0 No 1 Yes	0:No		O	O	-

8.10 2nd Motor Function group (PAR→M2)

The 2nd Motor function group will be displayed if any of IN-65-71 are set to 26 (2nd MOTOR). In the following table, the data shaded in grey will be displayed when a related code has been selected.

SL: Sensorless vector control (DRV-09)

*O/X: Write-enabled during operation

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
00	-	Jump Code	Jump Code	1-99	14	O	O	O	p.45	
04	0h1C04	Acceleration time	M2-Acc Time	0.0-600.0(s)	20.0	O	O	O	p.15 1	
05	0h1C05	Deceleration time	M2-Dec Time	0.0-600.0(s)	30.0	O	O	O	p.15 1	
06	0h1C06	Motor capacity	M2-Capacity	0	0.2 kW	-	X	O	O	p.15 1
				1	0.4 kW					
				2	0.75 kW					
				3	1.1 kW					
				4	1.5 kW					
				5	2.2 kW					
				6	3.0 kW					
				7	3.7 kW					
				8	4.0 kW					
				9	5.5 kW					
				10	7.5 kW					
				11	11.0 kW					
12	15.0 kW									

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
				13 18.5 kW 14 22.0 kW 15 30.0 kW 16 37.0 kW 17 45.0 kW 18 55.0 kW 19 75.0 kW 20 90.0 kW						
07	0h1C07	Base frequency	M2-Base Freq	30.00-400.00(Hz)	50.00	X	O	O	p.15 1	
08	0h1C08	Control mode	M2-Ctrl Mode	0	V/F	0:V/F	X	O	O	p.15 1
				2	Slip Compen					
				4	IM Sensorless					
10	0h1C0A	Number of motor poles	M2-Pole Num	2-48		X	O	O	p.15 1	
11	0h1C0B	Rated slip speed	M2-Rated Slip	0-3000(rpm)		X	O	O	p.15 1	
12	0h1C0C	Motor rated current	M2-Rated Curr	1.0-1000.0(A)		X	O	O	p.15 1	
13	0h1C0D	Motor no-load current	M2-Noload Curr	0.5-1000.0(A)		X	O	O	p.15 1	
14	0h1C0E	Motor rated voltage	M2-Rated Volt	170-480(V)		X	O	O	p.15 1	
15	0h1C0F	Motor efficiency	M2-Efficiency	70-100(%)		X	O	O	p.15 1	
16	0h1C10	Load inertia rate	M2-Inertia Rt	0-8		X	O	O	p.15 1	
17	-	Stator resistor	M2-Rs			X	O	O	p.15 1	
18	-	Leakage inductance	M2-Lsigma	Dependent on motor settings		X	O	O	p.15 1	
19	-	Stator inductance	M2-Ls			X	O	O	p.15 1	
20 ⁴¹	-	Rotor time constant	M2-Tr	25-5000(ms)		X	O	O	p.15 1	
25	0h1C19	V/F pattern	M2-V/F Patt	0	Linear	0: Linear	X	O	O	p.15 1
				1	Square					
				2	User V/F					
26	0h1C1A	Forward Torque	M2-Fwd	0.0-15.0(%)	2.0	X	O	O	p.15	

⁴¹ Displayed when M2-08 is set to 4 (IM Sensorless)

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
		boost	Boost						<u>1</u>
27	0h1C1B	Reverse Torque boost	M2-Rev Boost	0.0-15.0(%)		X	O	O	<u>p.15</u> <u>1</u>
28	0h1C1C	Stall prevention level	M2-Stall Lev	30-150(%)	150	X	O	O	<u>p.15</u> <u>1</u>
29	0h1C1D	Electronic thermal 1 minute rating	M2-ETH 1min	100-200(%)	150	X	O	O	<u>p.15</u> <u>1</u>
30	0h1C1E	Electronic thermal continuous rating	M2-ETH Cont	50-150(%)	100	X	O	O	<u>p.15</u> <u>1</u>

8.11 User Sequence group (USS)

This group appears when APP-02 is set to 1 (Yes) or COM-95 is set to 2 (P2P Master). The parameter cannot be changed while the user sequence is running.

SL: Sensorless vector control function (DRV-09)

*O/X: Write-enabled during operation

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
00	-	Jump code	Jump Code	1-99	31	O	O	O	<u>p.45</u>
01	0h1D01	User sequence operation command	User Seq Con	0 Stop	0:Stop	X	O	O	<u>p.98</u>
				1 Run					
				2 Digital In Run					
02	0h1D02	User sequence operation loop time	US Loop Time	0 0.01s	1:0.02s	X	O	O	<u>p.98</u>
				1 0.02s					
				2 0.05s					
				3 0.1s					
				4 0.5s					
5 1s									
11	0h1D0B	Output address link1	Link UserOut1	0-0xFFFF	0	X	O	O	<u>p.98</u>
12	0h1D0C	Output address link2	Link UserOut2	0-0xFFFF	0	X	O	O	<u>p.98</u>
13	0h1D0D	Output address link3	Link UserOut3	0-0xFFFF	0	X	O	O	<u>p.98</u>
14	0h1D0E	Output address link4	Link UserOut4	0-0xFFFF	0	X	O	O	<u>p.98</u>
15	0h1D0F	Output address link5	Link UserOut5	0-0xFFFF	0	X	O	O	<u>p.98</u>

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
16	0h1D10	Output address link6	Link UserOut6	0-0xFFFF	0	X	O	O	<u>p.98</u>
17	0h1D11	Output address link7	Link UserOut7	0-0xFFFF	0	X	O	O	<u>p.98</u>
18	0h1D12	Output address link8	Link UserOut8	0-0xFFFF	0	X	O	O	<u>p.98</u>
19	0h1D13	Output address link9	Link UserOut9	0-0xFFFF	0	X	O	O	<u>p.98</u>
20	0h1D14	Output address link10	Link UserOut10	0-0xFFFF	0	X	O	O	<u>p.98</u>
21	0h1D15	Output address link11	Link UserOut11	0-0xFFFF	0	X	O	O	<u>p.98</u>
22	0h1D16	Output address link12	Link UserOut12	0-0xFFFF	0	X	O	O	<u>p.98</u>
23	0h1D17	Output address link13	Link UserOut13	0-0xFFFF	0	X	O	O	<u>p.98</u>
24	0h1D18	Output address link14	Link UserOut14	0-0xFFFF	0	X	O	O	<u>p.98</u>
25	0h1D19	Output address link15	Link UserOut15	0-0xFFFF	0	X	O	O	<u>p.98</u>
26	0h1D1A	Output address link16	Link UserOut16	0-0xFFFF	0	X	O	O	<u>p.98</u>
27	0h1D1B	Output address link17	Link UserOut17	0-0xFFFF	0	X	O	O	<u>p.98</u>
28	0h1D1C	Output address link18	Link UserOut18	0-0xFFFF	0	X	O	O	<u>p.98</u>
31	0h1D1F	Input constant setting1	Void Para1	-9999-9999	0	X	O	O	<u>p.98</u>
32	0h1D20	Input constant setting2	Void Para2	-9999-9999	0	X	O	O	<u>p.98</u>
33	0h1D21	Input constant setting3	Void Para3	-9999-9999	0	X	O	O	<u>p.98</u>
34	0h1D22	Input constant setting4	Void Para4	-9999-9999	0	X	O	O	<u>p.98</u>
35	0h1D23	Input constant setting5	Void Para5	-9999-9999	0	X	O	O	<u>p.98</u>
36	0h1D24	Input constant setting6	Void Para6	-9999-9999	0	X	O	O	<u>p.98</u>
37	0h1D25	Input constant setting7	Void Para7	-9999-9999	0	X	O	O	<u>p.98</u>
38	0h1D26	Input constant setting8	Void Para8	-9999-9999	0	X	O	O	<u>p.98</u>
39	0h1D27	Input constant setting9	Void Para9	-9999-9999	0	X	O	O	<u>p.98</u>
40	0h1D28	Input constant setting10	Void Para10	-9999-9999	0	X	O	O	<u>p.98</u>

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
41	0h1D29	Input constant setting11	Void Para11	-9999-9999	0	X	O	O	p.98
42	0h1D2A	Input constant setting12	Void Para12	-9999-9999	0	X	O	O	p.98
43	0h1D2B	Input constant setting13	Void Para13	-9999-9999	0	X	O	O	p.98
44	0h1D2C	Input constant setting14	Void Para14	-9999-9999	0	X	O	O	p.98
45	0h1D2D	Input constant setting15	Void Para15	-9999-9999	0	X	O	O	p.98
46	0h1D2E	Input constant setting16	Void Para16	-9999-9999	0	X	O	O	p.98
47	0h1D2F	Input constant setting17	Void Para17	-9999-9999	0	X	O	O	p.98
48	0h1D30	Input constant setting18	Void Para18	-9999-9999	0	X	O	O	p.98
49	0h1D31	Input constant setting19	Void Para19	-9999-9999	0	X	O	O	p.98
50	0h1D32	Input constant setting20	Void Para20	-9999-9999	0	X	O	O	p.98
51	0h1D33	Input constant setting21	Void Para21	-9999-9999	0	X	O	O	p.98
52	0h1D34	Input constant setting22	Void Para22	-9999-9999	0	X	O	O	p.98
53	0h1D35	Input constant setting23	Void Para23	-9999-9999	0	X	O	O	p.98
54	0h1D36	Input constant setting24	Void Para24	-9999-9999	0	X	O	O	p.98
55	0h1D37	Input constant setting25	Void Para25	-9999-9999	0	X	O	O	p.98
56	0h1D38	Input constant setting26	Void Para26	-9999-9999	0	X	O	O	p.98
57	0h1D39	Input constant setting27	Void Para27	-9999-9999	0	X	O	O	p.98
58	0h1D3A	Input constant setting28	Void Para28	-9999-9999	0	X	O	O	p.98
59	0h1D3B	Input constant setting29	Void Para29	-9999-9999	0	X	O	O	p.98
60	0h1D3C	Input constant setting30	Void Para30	-9999-9999	0	X	O	O	p.98
80	0h1D50S	Analog input 1	P2P In V1	0-12,000			O	O	p.98
81	0h1D51	Analog input2	P2P In I2	-12,000-12,000			O	O	p.98
82	0h1D52	Digital input	P2P In DI	0-0x7F			O	O	p.98

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
85	0h1D55	Analog output	P2P OutAO1	0-10,000	0	X	O	O	p.98
89	0h1D58	Digital output	P2P OutDO	0-0x03	0	X	O	O	p.98

8.12 User Sequence Function group(USF)

This group appears when APP-02 is set to 1 (Yes) or COM-95 is set to 2 (P2P Master). The parameter cannot be changed while the user sequence is running.

SL: Sensorless vector control function (DRV-09)

***O/X:** Write-enabled during operation

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
00	-	Jump code	Jump Code	1-99	41	O	O	O	p.45	
01	0h1E01	User function1	User Func1	0	NOP	0:NOP	X	O	O	p.98
				1	ADD					
				2	SUB					
				3	ADDSUB					
				4	MIN					
				5	MAX					
				6	ABS					
				7	NEGATE					
				8	MPYDIV					
				9	REMAINDER					
				10	COMPARE-GT					
				11	COMPARE-GEQ					
				12	COMPARE-EQUAL					
				13	COMPARE-NEQUAL					
				14	TIMER					
				15	LIMIT					
				16	AND					
				17	OR					
				18	XOR					
				19	ANDOR					
				20	SWITCH					
21	BITTEST									

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
				22	BITSET					
				23	BITCLEAR					
				24	LOWPASSFILTER					
				25	PI_CONTORL					
				26	PI_PROCESS					
				27	UPCOUNT					
				28	DOWNCOUNT					
				02	0h1E02					User function input1-A
03	0h1E03	User function input1-B	User Input1-B	0-0xFFFF	0	X	O	O	<u>p.98</u>	
04	0h1E04	User function input1-C	User Input1-C	0-0xFFFF	0	X	O	O	<u>p.98</u>	
05	0h1E05	User function output1	User Output1	-32767-32767	0		O	O	<u>p.98</u>	
06	0h1E06	User function 2	User Func2	0	NOP	0: NOP	X	O	O	<u>p.98</u>
				1	ADD					
				2	SUB					
				3	ADDSUB					
				4	MIN					
				5	MAX					
				6	ABS					
				7	NEGATE					
				8	MPYDIV					
				9	REMAINDER					
				10	COMPARE-GT					
				11	COMPARE-GEQ					
				12	COMPARE-EQUAL					
				13	COMPARE-NEQUAL					
				14	TIMER					
				15	LIMIT					
				16	AND					
				17	OR					
				18	XOR					
				19	ANDOR					
20	SWITCH									

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
				21	BITTEST					
				22	BITSET					
				23	BITCLEAR					
				24	LOWPASSFILTER					
				25	PI_CONTORL					
				26	PI_PROCESS					
				27	UPCOUNT					
				28	DOWNCOUNT					
07	0h1E07	User function input2-A	User Input2-A	0-0xFFFF	0	X	O	O	<u>p.98</u>	
08	0h1E08	User function input2-B	User Input2-B	0-0xFFFF	0	X	O	O	<u>p.98</u>	
09	0h1E09	User function input2-C	User Input2-C	0-0xFFFF	0	X	O	O	<u>p.98</u>	
10	0h1E0A	User function output2	User Output2	-32767-32767	0		O	O	<u>p.98</u>	
11	0h1E0B	User function3	User Func3	0	NOP	0: NOP	X	O	O	<u>p.98</u>
				1	ADD					
				2	SUB					
				3	ADDSUB					
				4	MIN					
				5	MAX					
				6	ABS					
				7	NEGATE					
				8	MPYDIV					
				9	REMAINDER					
				10	COMPARE-GT					
				11	COMPARE-GEQ					
				12	COMPARE-EQUAL					
				13	COMPARE-NEQUAL					
				14	TIMER					
				15	LIMIT					
				16	AND					
				17	OR					
				18	XOR					
				19	ANDOR					

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
12	0h1E0C	User function input3-A	User Input3-A	0-0xFFFF	0	X	O	O	<u>p.98</u>
13	0h1E0D	User function input3-B	User Input3-B	0-0xFFFF	0	X	O	O	<u>p.98</u>
14	0h1E0E	User function input3-C	User Input3-C	0-0xFFFF	0	X	O	O	<u>p.98</u>
15	0h1E05	User function output3	User Output3	-32767-32767	0		O	O	<u>p.98</u>
				0 NOP					
				1 ADD					
				2 SUB					
				3 ADDSUB					
				4 MIN					
				5 MAX					
				6 ABS					
				7 NEGATE					
				8 MPYDIV					
				9 REMAINDER					
16	0h1E0B	User function4	User Func4	10 COMPARE-GT	0:NOP	X	O	O	<u>p.98</u>
				11 COMPARE-GEQ					
				12 COMPARE-EQUAL					
				13 COMPARE-NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					
				17 OR					
				18 XOR					

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				19 ANDOR					
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
17	0h1E0C	User function input4-A	User Input4-A	0-0xFFFF	0	X	O	O	<u>p.98</u>
18	0h1E0D	User function input4-B	User Input4-B	0-0xFFFF	0	X	O	O	<u>p.98</u>
19	0h1E0E	User function input4-C	User Input4-C	0-0xFFFF	0	X	O	O	<u>p.98</u>
20	0h1E05	User function output4	User Output4	-32767-32767	0		O	O	<u>p.98</u>
				0 NOP					
				1 ADD					
				2 SUB					
				3 ADDSUB					
				4 MIN					
				5 MAX					
				6 ABS					
				7 NEGATE					
				8 MPYDIV					
				9 REMAINDER					
21	0h1E0B	User function5	User Func5	10 COMPARE-GT	0:NOP	X	O	O	<u>p.98</u>
				11 COMPARE-GEQ					
				12 COMPARE-EQUAL					
				13 COMPARE-NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					
				17 OR					
				18 XOR					
				19 ANDOR					

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
22	0h1E0C	User function input5-A	User Input5-A	0-0xFFFF	0	X	O	O	<u>p.98</u>
23	0h1E0D	User function input5-B	User Input5-B	0-0xFFFF	0	X	O	O	<u>p.98</u>
24	0h1E0E	User function input5-C	User Input5-C	0-0xFFFF	0	X	O	O	<u>p.98</u>
25	0h1E05	User function output5	User Output5	-32767-32767	0		O	O	<u>p.98</u>
				0 NOP					
				1 ADD					
				2 SUB					
				3 ADDSUB					
				4 MIN					
				5 MAX					
				6 ABS					
				7 NEGATE					
				8 MPYDIV					
26	0h1E0B	User function6	User Func6	9 REMAINDER	0: NOP	X	O	O	<u>p.98</u>
				10 COMPARE-GT					
				11 COMPARE-GEQ					
				12 COMPARE-EQUAL					
				13 COMPARE-NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					
				17 OR					

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				18 XOR					
				19 ANDOR					
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
27	0h1E0C	User function input6-A	User Input6-A	0-0xFFFF	0	X	O	O	<u>p.98</u>
28	0h1E0D	User function input6-B	User Input6-B	0-0xFFFF	0	X	O	O	<u>p.98</u>
29	0h1E0E	User function input6-C	User Input6-C	0-0xFFFF	0	X	O	O	<u>p.98</u>
30	0h1E05	User function output6	User Output6	-32767-32767	0		O	O	<u>p.98</u>
				0 NOP					
				1 ADD					
				2 SUB					
				3 ADDSUB					
				4 MIN					
				5 MAX					
				6 ABS					
				7 NEGATE					
31	0h1E0B	User function7	User Func7	8 MPYDIV	0: NOP	X	O	O	<u>p.98</u>
				9 REMAINDER					
				10 COMPARE-GT					
				11 COMPARE-GEQ					
				12 COMPARE-EQUAL					
				13 COMPARE-NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
				17	OR					
				18	XOR					
				19	ANDOR					
				20	SWITCH					
				21	BITTEST					
				22	BITSET					
				23	BITCLEAR					
				24	LOWPASSFILTER					
				25	PI_CONTORL					
				26	PI_PROCESS					
				27	UPCOUNT					
28	DOWNCOUNT									
32	0h1E0C	User function input7-A	User Input7-A	0-0xFFFF	0	X	O	O	<u>p.98</u>	
33	0h1E0D	User function input7-B	User Input7-B	0-0xFFFF	0	X	O	O	<u>p.98</u>	
34	0h1E0E	User function input7-C	User Input7-C	0-0xFFFF	0	X	O	O	<u>p.98</u>	
35	0h1E05	User function output7	User Output7	-32767-32767	0		O	O	<u>p.98</u>	
36	0h1E0B	User function8	User Func8	0	NOP	0:NOP	X	O	O	<u>p.98</u>
				1	ADD					
				2	SUB					
				3	ADDSUB					
				4	MIN					
				5	MAX					
				6	ABS					
				7	NEGATE					
				8	MPYDIV					
				9	REMAINDER					
				10	COMPARE-GT					
				11	COMPARE-GEQ					
				12	COMPARE-EQUAL					
				13	COMPARE-NEQUAL					
14	TIMER									

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.	
				15	LIMIT					
				16	AND					
				17	OR					
				18	XOR					
				19	ANDOR					
				20	SWITCH					
				21	BITTEST					
				22	BITSET					
				23	BITCLEAR					
				24	LOWPASSFILTER					
				25	PI_CONTORL					
26	PI_PROCESS									
27	UPCOUNT									
28	DOWNCOUNT									
37	0h1E0C	User function input8-A	User Input8-A	0-0xFFFF	0	X	O	O	<u>p.98</u>	
38	0h1E0D	User function input8-B	User Input8-B	0-0xFFFF	0	X	O	O	<u>p.98</u>	
39	0h1E0E	User function input8-C	User Input8-C	0-0xFFFF	0	X	O	O	<u>p.98</u>	
40	0h1E05	User function output8	User Output8	-32767-32767	0		O	O	<u>p.98</u>	
41	0h1E0B	User function9	User Func9	0	NOP	0:NOP	X	O	O	<u>p.98</u>
				1	ADD					
				2	SUB					
				3	ADDSUB					
				4	MIN					
				5	MAX					
				6	ABS					
				7	NEGATE					
				8	MPYDIV					
				9	REMAINDER					
				10	COMPARE-GT					
				11	COMPARE-GEQ					
				12	COMPARE-EQUAL					
				13	COMPARE-					

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					
				17 OR					
				18 XOR					
				19 ANDOR					
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
42	0h1E0C	User function input9-A	User Input9-A	0-0xFFFF	0	X	O	O	p.98
43	0h1E0D	User function input9-B	User Input9-B	0-0xFFFF	0	X	O	O	p.98
44	0h1E0E	User function input9-C	User Input9-C	0-0xFFFF	0	X	O	O	p.98
45	0h1E05	User function output9	User Output9	-32767-32767	0		O	O	p.98
				0 NOP					
				1 ADD					
				2 SUB					
				3 ADDSUB					
				4 MIN					
				5 MAX					
46	0h1E0B	User function10	User Func10	6 ABS	0:NOP	X	O	O	p.98
				7 NEGATE					
				8 MPYDIV					
				9 REMAINDER					
				10 COMPARE-GT					
				11 COMPARE-GEQ					
				12 COMPARE-					

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				EQUAL					
				13 COMPARE-NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					
				17 OR					
				18 XOR					
				19 ANDOR					
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
47	0h1E0C	User function input10-A	User Input10-A	0-0xFFFF	0	X	O	O	p.98
48	0h1E0D	User function input10-B	User Input10-B	0-0xFFFF	0	X	O	O	p.98
49	0h1E0E	User function input10-C	User Input10-C	0-0xFFFF	0	X	O	O	p.98
50	0h1E05	User function output10	User Output10	-32767-32767	0		O	O	p.98
				0 NOP					
				1 ADD					
				2 SUB					
				3 ADDSUB					
				4 MIN					
				5 MAX					
51	0h1E0B	User function11	User Func11	6 ABS	0: NOP	X	O	O	p.98
				7 NEGATE					
				8 MPYDIV					
				9 REMAINDER					
				10 COMPARE-GT					
				11 COMPARE-GEQ					

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				12 COMPARE-EQUAL					
				13 COMPARE-NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					
				17 OR					
				18 XOR					
				19 ANDOR					
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
52	0h1E0C	User function input11-A	User Input11-A	0-0xFFFF	0	X	O	O	p.98
53	0h1E0D	User function input11-B	User Input11-B	0-0xFFFF	0	X	O	O	p.98
54	0h1E0E	User function input11-C	User Input11-C	0-0xFFFF	0	X	O	O	p.98
55	0h1E05	User function output11	User Output11	-32767-32767	0		O	O	p.98
				0 NOP					
				1 ADD					
				2 SUB					
				3 ADDSUB					
				4 MIN					
56	0h1E0B	User function12	User Func12	5 MAX	0:NOP	X	O	O	p.98
				6 ABS					
				7 NEGATE					
				8 MPYDIV					
				9 REMAINDER					
				10 COMPARE-GT					

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				11 COMPARE-GEQ					
				12 COMPARE-EQUAL					
				13 COMPARE-NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					
				17 OR					
				18 XOR					
				19 ANDOR					
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
57	0h1E0C	User function input12-A	User Input12-A	0-0xFFFF	0	X	O	O	p.98
58	0h1E0D	User function input12-B	User Input12-B	0-0xFFFF	0	X	O	O	p.98
59	0h1E0E	User function input12-C	User Input12-C	0-0xFFFF	0	X	O	O	p.98
60	0h1E05	User function output12	User Output12	-32767-32767	0		O	O	p.98
				0 NOP					
				1 ADD					
				2 SUB					
				3 ADDSUB					
				4 MIN					
61	0h1E0B	User function13	User Func13	5 MAX	0:NOP	X	O	O	p.98
				6 ABS					
				7 NEGATE					
				8 MPYDIV					
				9 REMAINDER					

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				10 COMPARE-GT					
				11 COMPARE-GEQ					
				12 COMPARE-EQUAL					
				13 COMPARE-NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					
				17 OR					
				18 XOR					
				19 ANDOR					
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
62	0h1E0C	User function input13-A	User Input13-A	0-0xFFFF	0	X	O	O	p.98
63	0h1E0D	User function input13-B	User Input13-B	0-0xFFFF	0	X	O	O	p.98
64	0h1E0E	User function input13-C	User Input13-C	0-0xFFFF	0	X	O	O	p.98
65	0h1E05	User function output13	User Output13	-32767-32767	0		O	O	p.98
				0 NOP					
				1 ADD					
				2 SUB					
				3 ADDSUB					
66	0h1E0B	User function14	User Func14	4 MIN	0: NOP	X	O	O	p.98
				5 MAX					
				6 ABS					
				7 NEGATE					
				8 MPYDIV					

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				9 REMAINDER					
				10 COMPARE-GT					
				11 COMPARE-GEQ					
				12 COMPARE-EQUAL					
				13 COMPARE-NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					
				17 OR					
				18 XOR					
				19 ANDOR					
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
67	0h1E0C	User function input14-A	User Input14-A	0-0xFFFF	0	X	O	O	p.98
68	0h1E0D	User function input14-B	User Input14-B	0-0xFFFF	0	X	O	O	p.98
69	0h1E0E	User function input14-C	User Input14-C	0-0xFFFF	0	X	O	O	p.98
70	0h1E05	User function output14	User Output14	-32767-32767	0		O	O	p.98
				0 NOP					
				1 ADD					
				2 SUB					
				3 ADDSUB					
71	0h1E0B	User function15	User Func15	4 MIN	0: NOP	X	O	O	p.98
				5 MAX					
				6 ABS					
				7 NEGATE					

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				8 MPYDIV					
				9 REMAINDER					
				10 COMPARE-GT					
				11 COMPARE-GEQ					
				12 COMPARE-EQUAL					
				13 COMPARE-NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					
				17 OR					
				18 XOR					
				19 ANDOR					
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
72	0h1E0C	User function input15-A	User Input15-A	0-0xFFFF	0	X	O	O	p.98
73	0h1E0D	User function input15-B	User Input15-B	0-0xFFFF	0	X	O	O	p.98
74	0h1E0E	User function input15-C	User Input15-C	0-0xFFFF	0	X	O	O	p.98
75	0h1E05	User function output15	User Output15	-32767-32767	0		O	O	p.98
76	0h1E0B	User function 16	User Func16	0 NOP	0:NOP	X	O	O	p.98
				1 ADD					
				2 SUB					
				3 ADDSUB					
				4 MIN					
				5 MAX					
6 ABS									

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				7 NEGATE					
				8 MPYDIV					
				9 REMAINDER					
				10 COMPARE-GT					
				11 COMPARE-GEQ					
				12 COMPARE-EQUAL					
				13 COMPARE-NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					
				17 OR					
				18 XOR					
				19 ANDOR					
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
77	0h1E0C	User function input16-A	User Input16-A	0-0xFFFF	0	X	O	O	p.98
78	0h1E0D	User function input16-B	User Input16-B	0-0xFFFF	0	X	O	O	p.98
79	0h1E0E	User function input16-C	User Input16-C	0-0xFFFF	0	X	O	O	p.98
80	0h1E05	User function output16	User Output16	-32767-32767	0		O	O	p.98
81	0h1E0B	User function 17	User Func17	0 NOP	0: NOP	X	O	O	p.98
				1 ADD					
				2 SUB					
				3 ADDSUB					
				4 MIN					
				5 MAX					

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				6 ABS					
				7 NEGATE					
				8 MPYDIV					
				9 REMAINDER					
				10 COMPARE-GT					
				11 COMPARE-GEQ					
				12 COMPARE-EQUAL					
				13 COMPARE-NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					
				17 OR					
				18 XOR					
				19 ANDOR					
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
82	0h1E0C	User function input17-A	User Input17-A	0-0xFFFF	0	X	O	O	<u>p.98</u>
83	0h1E0D	User function input17-B	User Input17-B	0-0xFFFF	0	X	O	O	<u>p.98</u>
84	0h1E0E	User function input17-C	User Input17-C	0-0xFFFF	0	X	O	O	<u>p.98</u>
85	0h1E05	User function output17	User Output17	-32767-32767	0		O	O	<u>p.98</u>
86	0h1E0B	User function 18	User Func18	0 NOP	0: NOP	X	O	O	<u>p.98</u>
				1 ADD					
				2 SUB					
				3 ADDSUB					
				4 MIN					

Function Table

Table of Functions

Code	Comm. Address	Name	LCD Display	Setting Range	Initial Value	Property*	V/F	SL	Ref.
				5 MAX					
				6 ABS					
				7 NEGATE					
				8 MPYDIV					
				9 REMAINDER					
				10 COMPARE-GT					
				11 COMPARE-GEQ					
				12 COMPARE-EQUAL					
				13 COMPARE-NEQUAL					
				14 TIMER					
				15 LIMIT					
				16 AND					
				17 OR					
				18 XOR					
				19 ANDOR					
				20 SWITCH					
				21 BITTEST					
				22 BITSET					
				23 BITCLEAR					
				24 LOWPASSFILTER					
				25 PI_CONTORL					
				26 PI_PROCESS					
				27 UPCOUNT					
				28 DOWNCOUNT					
87	0h1E0C	User function input18-A	User Input18-A	0-0xFFFF	0	X	O	O	<u>p.98</u>
88	0h1E0D	User function input18-B	User Input18-B	0-0xFFFF	0	X	O	O	<u>p.98</u>
89	0h1E0E	User function input18-C	User Input18-C	0-0xFFFF	0	X	O	O	<u>p.98</u>
90	0h1E05	User function output18	User Output18	-32767-32767	0		O	O	<u>p.98</u>

8.13 Groups for LCD Keypad Only

8.13.1 Trip Mode (TRP Last-x)

Code	Name	LCD Display	Setting Range	Initial Value	Ref.
00	Trip type display	Trip Name(x)	-	-	-
01	Frequency reference at trip	Output Freq	-	-	-
02	Output current at trip	Output Current	-	-	-
03	Acceleration/Deceleration state at trip	Inverter State	-	-	-
04	DC section state	DCLink Voltage	-	-	-
05	NTC temperature	Temperature	-	-	-
06	Input terminal state	DI State	-	0000 0000	-
07	Output terminal state	DO State	-	000	-
08	Trip time after Power on	Trip On Time	-	0/00/00 00:00	-
09	Trip time after operation start	Trip Run Time	-	0/00/00 00:00	-
10	Delete trip history	Trip Delete?	0 No 1 Yes		

8.13.2 Config Mode (CNF)

Code	Name	LCD Display	Setting Range	Initial Value	Ref.
00	Jump code	Jump Code	1-99	42	p.45
01	Keypad language selection	Language Sel	0 English	0 : English	p.179
			1 Russian		
			2 Spanish		
			3 Italian		
			4 Turkish		
02	LCD constrast adjustment	LCD Contrast	-	-	p.163
03	Multi keypad ID	Multi KPD ID	3-99	3	p.96
10	Inverter S/W version	Inv S/W Ver	-	-	p.163
11	LCD keypad S/W version	Keypad S/W Ver	-	-	p.163
12	LCD keypad title version	KPD Title Ver	-	-	p.163

Function Table

Code	Name	LCD Display	Setting Range	Initial Value	Ref.
20	Status window display item	Anytime Para	0 Frequency	0: Frequency	p.179
21	Monitor mode display item1	Monitor Line-1	1 Speed	0: Frequency	p.179
22	Monitor mode display item2	Monitor Line-2	2 Output Current	2:Output Current	p.179
23	Monitor mode display item3	Monitor Line-3	3 Output Voltage	3:Output Voltage	p.179
			4 Output Power		
			5 WHour		
			6 DCLink Voltage		
			7 DI State		
			8 DO State		
			9 V1 Monitor(V)		
			10 V1 Monitor(%)		
			13 V2 Monitor(V)		
			14 V2 Monitor(%)		
			15 I2 Monitor(mA)		
			16 I2 Monitor(%)		
			17 PID Output		
			18 PID Ref Value		
19 PID Fdb Value					
20 Torque					
21 Torque Limit					
23 Speed Limit					
24	Monitor mode initialization	Mon Mode Init	0 No	0:No	p.179
			1 Yes		
30	Option slot 1 type display	Option-1 Type	0 None	0:None	p.163
31	Option slot 2 type display	Option-2 Type	6 Ethernet	0:None	p.163
32	Option slot 3 type display	Option-3 Type	9 CANopen	0:None	p.163
40	Parameter initialization	Parameter Init	0 No	p.156	
			1 All Grp		
			2 DRV Grp		
			3 BAS Grp		
			4 ADV Grp		
			5 CON Grp		
			6 IN Grp		
			7 OUT Grp		

Table of Functions

Code	Name	LCD Display	Setting Range	Initial Value	Ref.
41	Display changed Parameter	Changed Para	8 COM Grp	0:View All	p.159
			9 APP Grp		
			12 PRT Grp		
			13 M2 Grp		
			0 View All		
1 View Changed					
42	Multi key item	Multi Key Sel	0 None	0:None	p.159
			1 JOG Key		
			2 Local/Remote		
			3 UserGrp SelKey		
			4 Multi KPD		
43	Macro function item	Macro Select	0 None	0:None	-
44	Trip history deletion	Erase All Trip	0 No	0:No	p.163
			1 Yes		
45	User registration code deletion	UserGrp AllDel	0 No	0:No	p.159
			1 Yes		
46	Read parameters	Parameter Read	0 No	0:No	p.155
			1 Yes		
47	Write parameters	Parameter Write	0 No	0: No	p.155
			1 Yes		
48	Save parameters	Parameter Save	0 No	0:No	p.155
			1 Yes		
50	Hide parameter mode	View Lock Set	0-9999	Un-locked	p.157
51	Password for hiding parameter mode	View Lock Pw	0-9999	Password	p.157
52	Lock parameter edit	Key Lock Set	0-9999	Un-locked	p.158
53	Password for locking parameter edit	Key Lock Pw	0-9999	Password	p.158
60	Additional title update	Add Title Up	0 No	0:No	p.163
			1 Yes		
61	Simple parameter setting	Easy Start On	0 No	1:Yes	p.162
			1 Yes		
62	Power consumption initialization	WHCount Reset	0 No	0:No	p.163
			1 Yes		
70	Accumulated inverter motion time	On-time	Year/month/day hour:minute	-	p.182

Table of Functions

Code	Name	LCD Display	Setting Range	Initial Value	Ref.
71	Accumulated inverter operation time	Run-time	Year/month/day hour:minute	-	p.182
72	Accumulated inverter operation time initialization	Time Reset	0 No	0:No	p.182
			1 Yes		
74	Accumulated cooling fan operation time	Fan Time	Year/month/day hour:minute	-	p.182
75	Reset of accumulated cooling fan operation time	Fan Time Rst	0 No	0:No	p.182
			1 Yes		

9 Troubleshooting

This chapter explains how to troubleshoot a problem when inverter protective functions, fault trips, warning signals, or a fault occurs. If the inverter does not work normally after following the suggested troubleshooting steps, please contact the L&T Customer Interaction Center.

9.1 Trips and Warnings

When the inverter detects a fault, it stops the operation (trips) or sends out a warning signal. When a trip or warning occurs, detailed information is shown on the LCD display. Users can read the warning message at PRT-90. When more than 2 trips occur at roughly the same time, the LCD keypad shows the information for the fault trip that occurred first.

The fault conditions can be categorized as follows:

- Level: When the fault is corrected, the trip or warning signal disappears and the fault is not saved in the fault history.
- Latch: When the fault is corrected and a reset input signal is provided, the trip or warning signal disappears.
- Fatal: When the fault is corrected, the fault trip or warning signal disappears only after the user turns off the inverter, waits until the charge indicator light goes off, and turns the inverter on again. If the the inverter is still in a fault condition after powering it on again, please contact the supplier or the L&T Customer Interaction Center.

9.1.1 Fault Trips

Protection Functions for Output Current and Input Voltage

LCD Display	Type	Description
Over Load	Latch	Displayed when the motor overload trip is activated and the actual load level exceeds the set level. Operates when PRT-20 is set to a value other than 0.
Underload	Latch	Displayed when the motor underload trip is activated and the actual load level is less than the set level. Operates when PRT-27 is set to a value other than 0.
Over Current1	Latch	Displayed when inverter output current exceeds 200% of the rated current.
Over Voltage	Latch	Displayed when internal DC circuit voltage exceeds the specified value.
Low Voltage	Level	Displayed when internal DC circuit voltage is less than the specified value.
Low Voltage2	Latch	Displayed when internal DC circuit voltage is less than the specified value during inverter operation.
Ground	Latch	Displayed when a ground fault trip occurs on the output side of the inverter

LCD Display	Type	Description
Trip*		and causes the current to exceed the specified value. The specified value varies depending on inverter capacity.
E-Thermal	Latch	Displayed based on inverse time-limit thermal characteristics to prevent motor overheating. Operates when PRT-40 is set to a value other than 0.
Out Phase Open	Latch	Displayed when a 3-phase inverter output has one or more phases in an open circuit condition. Operates when bit 1 of PRT-05 is set to 1.
In Phase Open	Latch	Displayed when a 3-phase inverter input has one or more phases in an open circuit condition. Operates only when bit 2 of PRT-05 is set to 1.
Inverter OLT	Latch	Displayed when the inverter has been protected from overload and resultant overheating, based on inverse time-limit thermal characteristics. Allowable overload rates for the inverter are 150% for 1 min and 200% for 4 sec. Protection is based on inverter rated capacity, and may vary depending on the device's capacity.
No Motor Trip	Latch	Displayed when the motor is not connected during inverter operation. Operates when PRT-31 is set to 1.

* SX2000 inverters rated for 4.0 kW or less do not support the ground fault trip (GFT) feature.

Therefore, an over current trip (OCT) or over voltage trip (OVT) may occur when there is a low-resistance ground fault.

Protection Functions Using Abnormal Internal Circuit Conditions and External Signals

LCD Display	Type	Description
Over Heat	Latch	Displayed when the temperature of the inverter heat sink exceeds the specified value.
Over Current2	Latch	Displayed when the DC circuit in the inverter detects a specified level of excessive, short circuit current.
External Trip	Latch	Displayed when an external fault signal is provided by the multi-function terminal. Set one of the multi-function input terminals at IN-65-71 to 4 (External Trip) to enable external trip.
BX	Level	Displayed when the inverter output is blocked by a signal provided from the multi-function terminal. Set one of the multi-function input terminals at IN-65-71 to 5 (BX) to enable input block function.
HW-Diag	Fatal	Displayed when an error is detected in the memory (EEPROM), analog-digital converter output (ADC Off Set), or CPU watchdog (Watch Dog-1, Watch Dog-2). <ul style="list-style-type: none"> • EEP Err: An error in reading/writing parameters due to keypad or memory (EEPROM) fault. • ADC Off Set: An error in the current sensing circuit (U/V/W terminal, current sensor, etc.).
NTC Open	Latch	Displayed when an error is detected in the temperature sensor of the Insulated Gate Bipolar Transistor (IGBT).
Fan Trip	Latch	Displayed when an error is detected in the cooling fan. Set PRT-79 to 0 to activate fan trip (for models below 22 kW capacity).
Pre-PID Fail	Latch	Displayed when pre-PID is operating with functions set at APP-34–APP-36. A fault trip occurs when a controlled variable (PID feedback) is measured

LCD Display	Type	Description
		below the set value and the low feedback continues, as it is treated as a load fault.
Ext-Brake	Latch	Operates when the external brake signal is provided by the multi-function terminal. Occurs when the inverter output starting current remains below the set value at ADV-41. Set either OUT31 or OUT32 to 35 (BR Control).
Safety A(B) Err	Level	Displayed when at least one of the two safety input signals is off.

Protection Functions for Communication Options

LCD Display	Type	Description
Lost Command	Level	Displayed when a frequency or operation command error is detected during inverter operation by controllers other than the keypad (e.g., using a terminal block and a communication mode). Activate by setting PRT-12 to any value other than 0.
IO Board Trip	Latch	Displayed when the I/O board or external communication card is not connected to the inverter or there is a bad connection. Displayed when the Sx200 error code continues for more than 5 sec.
ParaWrite Trip	Latch	Displayed when communication fails during parameter writing. Occurs when using an LCD keypad due to a control cable fault or a bad connection.
Option Trip-1	Latch	Displayed when a communication error is detected between the inverter and the communication board. Occurs when the communication option card is installed.

9.1.2 Warning Messages

LCD Display	Description
Over Load	Displayed when the motor is overloaded. Operates when PRT-17 is set to 1. To operate, select 5. Set the digital output terminal or relay (OUT-31 or OUT-33) to 5 (Over Load) to receive overload warning output signals.
Under Load	Displayed when the motor is underloaded. Operates when PRT-25 is set to 1. Set the digital output terminal or relay (OUT-31 or OUT-33) to 7 (Under Load) to receive underload warning output signals.
INV Over Load	Displayed when the overload time equivalent to 60% of the inverter overheat protection (inverter IOLT) level, is accumulated. Set the digital output terminal or relay (OUT-31 or OUT-33) to 6 (IOL) to receive inverter overload warning output signals.
Lost Command	Lost command warning alarm occurs even with PRT-12 set to 0. The warning alarm occurs based on the condition set at PRT-13- 15. Set the digital output terminal or relay (OUT-31 or OUT-33) to 13 (Lost Command) to receive lost command warning output signals. If the communication settings and status are not suitable for P2P, a Lost Command alarm occurs.
Fan Warning	Displayed when an error is detected from the cooling fan while PRT-79 is set to 1. Set the digital output terminal or relay (OUT-31 or OUT-33) to 8 (Fan Warning) to receive fan warning output signals.
Fan Exchange	An alarm occurs when the value set at PRT-86 is less than the value set at PRT-87. To receive fan exchange output signals, set the digital output terminal or relay (OUT-31 or OUT-33) to 38 (Fan Exchange).
CAP Exchange	An alarm occurs when the value set at PRT-63 is less than the value set at PRT-62 (the value set at PRT-61 must be 2 (Pre Diag)). To receive CAP exchange signals, set the digital output terminal or relay (OUT-31 or OUT-33) to 36 (CAP Exchange).
DB Warn %ED	Displayed when the DB resistor usage rate exceeds the set value. Set the detection level at PRT-66.
Retry Tr Tune	Tr tune error warning alarm is activated when Dr.9 is set to 4. The warning alarm occurs when the motor's rotor time constant (Tr) is either too low or too high.

9.2 Troubleshooting Fault Trips

When a fault trip or warning occurs due to a protection function, refer to the following table for possible causes and remedies.

Type	Cause	Remedy
Over Load	The load is greater than the motor's rated capacity.	Ensure that the motor and inverter have appropriate capacity ratings.
	The set value for the overload trip level (PRT-21) is too low.	Increase the set value for the overload trip level.
Under Load	There is a motor-load connection problem.	Replace the motor and inverter with models with lower capacity.
	The set value for underload level (PRT-29, PRT-30) is less than the system's minimum load.	Reduce the set value for the underload level.
Over Current1	Acc/Dec time is too short, compared to load inertia (GD2).	Increase Acc/Dec time.
	The inverter load is greater than the rated capacity.	Replace the inverter with a model that has increased capacity.
	The inverter supplied an output while the motor was idling.	Operate the inverter after the motor has stopped or use the speed search function (CON-60).
Over Voltage	The mechanical brake of the motor is operating too fast.	Check the mechanical brake.
	Deceleration time is too short for the load inertia (GD2).	Increase the acceleration time.
	A generative load occurs at the inverter output.	Use the braking unit.
Low Voltage	The input voltage is too high.	Determine if the input voltage is above the specified value.
	The input voltage is too low.	Determine if the input voltage is below the specified value.
	A load greater than the power capacity is connected to the system (e.g., a welder, direct motor connection, etc.)	Increase the power capacity.
Low Voltage2	The magnetic contactor connected to the power source has a faulty connection.	Replace the magnetic contactor.
	The input voltage has decreased during the operation.	Determine if the input voltage is above the specified value.
	An input phase-loss has occurred.	Check the input wiring.
Ground Trip	The power supply magnetic contactor is faulty.	Replace the magnetic contractor.
	A ground fault has occurred in the inverter output wiring.	Check the output wiring.
E-Thermal	The motor insulation is damaged.	Replace the motor.
	The motor has overheated.	Reduce the load or operation frequency.

Type	Cause	Remedy
	The inverter load is greater than the rated capacity.	Replace the inverter with a model that has increased capacity.
	The set value for electronic thermal protection is too low.	Set an appropriate electronic thermal level.
	The inverter has been operated at low speed for an extended duration.	Replace the motor with a model that supplies extra power to the cooling fan.
Output Phase Open	The magnetic contactor on the output side has a connection fault.	Check the magnetic contactor on the output side.
	The output wiring is faulty.	Check the output wiring.
Input Phase Open	The magnetic contactor on the input side has a connection fault.	Check the magnetic contactor on the input side.
	The input wiring is faulty.	Check the input wiring.
Inverter OLT	The DC link capacitor needs to be replaced.	Replace the DC link capacitor. Contact the retailer or the L&T Customer Interaction Center.
	The load is greater than the rated motor capacity.	Replace the motor and inverter with models that have increased capacity.
Over Heat	The torque boost level is too high.	Reduce the torque boost level.
	There is a problem with the cooling system.	Determine if a foreign object is obstructing the air inlet, outlet, or vent.
	The inverter cooling fan has been operated for an extended period.	Replace the cooling fan.
Over Current2	The ambient temperature is too high.	Keep the ambient temperature below 50°C.
	Output wiring is short-circuited.	Check the output wiring.
NTC Open	There is a fault with the electronic semiconductor (IGBT).	Do not operate the inverter. Contact the retailer or the L&T Customer Interaction Center.
	The ambient temperature is too low.	Keep the ambient temperature above -10°C.
FAN Lock	There is a fault with the internal temperature sensor.	Contact the retailer or the L&T Customer Interaction Center.
	A foreign object is obstructing the fan's air vent.	Remove the foreign object from the air inlet or outlet.
	The cooling fan needs to be replaced.	Replace the cooling fan.

9.3 Troubleshooting Other Faults

When a fault other than those identified as fault trips or warnings occurs, refer to the following table for possible causes and remedies.

Type	Cause	Remedy
Parameters cannot be set.	The inverter is in operation (driving mode).	Stop the inverter to change to program mode and set the parameter.
	The parameter access is incorrect.	Check the correct parameter access level and set the parameter.
	The password is incorrect.	Check the password, disable the parameter lock and set the parameter.
	Low voltage is detected.	Check the power input to resolve the low voltage and set the parameter.
The motor does not rotate.	The frequency command source is set incorrectly.	Check the frequency command source setting.
	The operation command source is set incorrectly.	Check the operation command source setting.
	Power is not supplied to the terminal R/S/T.	Check the terminal connections R/S/T and U/V/W.
	The charge lamp is turned off.	Turn on the inverter.
	The operation command is off.	Turn on the operation command (RUN).
	The motor is locked.	Unlock the motor or lower the load level.
	The load is too high.	Operate the motor independently.
	An emergency stop signal is input.	Reset the emergency stop signal.
	The wiring for the control circuit terminal is incorrect.	Check the wiring for the control circuit terminal.
	The input option for the frequency command is incorrect.	Check the input option for the frequency command.
	The input voltage or current for the frequency command is incorrect.	Check the input voltage or current for the frequency command.
	The PNP/NPN mode is selected incorrectly.	Check the PNP/NPN mode setting.
	The frequency command value is too low.	Check the frequency command and input a value above the minimum frequency.
	The [STOP/RESET] key is pressed.	Check that the stoppage is normal, if so resume operation normally.
	Motor torque is too low.	Change the operation modes (V/F, IM, and Sensorless). If the fault remains, replace the inverter with a model with increased capacity.
	The motor rotates in the	The wiring for the motor output cable is incorrect.

Type	Cause	Remedy
opposite direction to the command.		(U/V/W) of the motor.
	The signal connection between the control circuit terminal (forward/reverse rotation) of the inverter and the forward/reverse rotation signal on the control panel side is incorrect.	Check the forward/reverse rotation wiring.
The motor only rotates in one direction.	Reverse rotation prevention is selected.	Remove the reverse rotation prevention.
	The reverse rotation signal is not provided, even when a 3-wire sequence is selected.	Check the input signal associated with the 3-wire operation and adjust as necessary.
The motor is overheating.	The load is too heavy.	Reduce the load. Increase the Acc/Dec time.
		Check the motor parameters and set the correct values. Replace the motor and the inverter with models with appropriate capacity for the load.
	The ambient temperature of the motor is too high.	Lower the ambient temperature of the motor.
	The phase-to-phase voltage of the motor is insufficient.	Use a motor that can withstand phase-to-phase voltages surges greater than the maximum surge voltage.
Only use motors suitable for applications with inverters. Connect the AC reactor to the inverter output (set the carrier frequency to 2 kHz).		
The motor stops during acceleration or when connected to load.	The motor fan has stopped or the fan is obstructed with debris.	Check the motor fan and remove any foreign objects.
	The load is too high.	Reduce the load.
The motor does not accelerate. /The acceleration time is too long.		The frequency command value is low.
	Reduce the load and increase the acceleration time. Check the mechanical brake status.	
	The acceleration time is too long.	Change the acceleration time.
	The combined values of the motor properties and the inverter parameter are incorrect.	The stall prevention level during acceleration is low.
Change the stall prevention level.		

Troubleshooting

Type	Cause	Remedy
	The stall prevention level during operation is low.	Change the stall prevention level.
	Starting torque is insufficient.	Change to vector control operation mode. If the fault is still not corrected, replace the inverter with a model with increased capacity.
Motor speed varies during operation.	There is a high variance in load.	Replace the motor and inverter with models with increased capacity.
	The input voltage varies.	Reduce input voltage variation.
	Motor speed variations occur at a specific frequency.	Adjust the output frequency to avoid a resonance area.
The motor rotation is different from the setting.	The V/F pattern is set incorrectly.	Set a V/F pattern that is suitable for the motor specification.
The motor deceleration time is too long even with Dynamic Braking (DB) resistor connected.	The deceleration time is set too long.	Change the setting accordingly.
	The motor torque is insufficient.	If motor parameters are normal, it is likely to be a motor capacity fault. Replace the motor with a model with increased capacity.
	The load is higher than the internal torque limit determined by the rated current of the inverter.	Replace the inverter with a model with increased capacity.
Operation is difficult in underload applications.	The carrier frequency is too high.	Reduce the carrier frequency.
	Over-excitation has occurred due to an inaccurate V/F setting at low speed.	Reduce the torque boost value to avoid over-excitation.
While the inverter is in operation, a control unit malfunctions or noise occurs.		Change the carrier frequency to the minimum value.
	Noise occurs due to switching inside the inverter.	Install a micro surge filter in the inverter output.
When the inverter is operating, the earth leakage breaker is activated.	An earth leakage breaker will interrupt the supply if current flows to ground during inverter operation.	Connect the inverter to a ground terminal.
		Check that the ground resistance is less than 100 Ω for 200 V inverters and less than 10 Ω for 400 V inverters.
		Check the capacity of the earth leakage breaker and make the appropriate connection, based on the rated current of the inverter.
		Lower the carrier frequency.
		Make the cable length between the inverter and the motor as short as

Troubleshooting

Type	Cause	Remedy
		possible.
The motor vibrates severely and does not rotate normally.	Phase-to-phase voltage of 3-phase power source is not balanced.	Check the input voltage and balance the voltage. Check and test the motor's insulation.
The motor makes humming, or loud noises.	Resonance occurs between the motor's natural frequency and the carrier frequency.	Slightly increase or decrease the carrier frequency.
	Resonance occurs between the motor's natural frequency and the inverter's output frequency.	Slightly increase or decrease the carrier frequency. Use the frequency jump function to avoid the frequency band where resonance occurs.
The motor vibrates/hunts.	The frequency input command is an external, analog command.	In situations of noise inflow on the analog input side that results in command interference, change the input filter time constant (IN-07).
	The wiring length between the inverter and the motor is too long.	Ensure that the total cable length between the inverter and the motor is less than 200m (50m for motors rated 3.7 kW or lower).
The motor does not come to a complete stop when the inverter output stops.	It is difficult to decelerate sufficiently, because DC braking is not operating normally.	Adjust the DC braking parameter.
		Increase the set value for the DC braking current.
		Increase the set value for the DC braking stopping time.
The output frequency does not increase to the frequency reference.	The frequency reference is within the jump frequency range.	Set the frequency reference higher than the jump frequency range.
	The frequency reference is exceeding the upper limit of the frequency command.	Set the upper limit of the frequency command higher than the frequency reference.
	Because the load is too heavy, the stall prevention function is working.	Replace the inverter with a model with increased capacity.
The cooling fan does not rotate.	The control parameter for the cooling fan is set incorrectly.	Check the control parameter setting for the cooling fan.

10 Maintenance

This chapter explains how to replace the cooling fan, the regular inspections to complete, and how to store and dispose of the product. An inverter is vulnerable to environmental conditions and faults also occur due to component wear and tear. To prevent breakdowns, please follow the maintenance recommendations in this section.

ⓘ Caution

- Before you inspect the product, read all safety instructions contained in this manual.
- Before you clean the product, ensure that the power is off.
- Clean the inverter with a dry cloth. Cleaning with wet cloths, water, solvents, or detergents may result in electric shock or damage to the product.

10.1 Regular Inspection Lists

10.1.1 Daily Inspections

Inspection area	Inspection item	Inspection details	Inspection method	Judgment standard	Inspection equipment
All	Ambient environment	Is the ambient temperature and humidity within the design range, and is there any dust or foreign objects present?	Refer to 1.3 Installation Considerations on page 3 .	No icing (ambient temperature: -10 - +40) and no condensation (ambient humidity below 50%)	Thermometer, hygrometer, recorder
	Inverter	Is there any abnormal vibration or noise?	Visual inspection	No abnormality	
	Power voltage	Are the input and output voltages normal?	Measure voltages between R/ S/ T-phases in. the inverter terminal block.	Refer to 11.1 Input and Output Specification on page 316 .	Digital multimeter tester
Input/Output circuit	Smoothing capacitor	Is there any leakage from the inside?	Visual inspection	No abnormality	-

Inspection area	Inspection item	Inspection details	Inspection method	Judgment standard	Inspection equipment
		Is the capacitor swollen?			
Cooling system	Cooling fan	Is there any abnormal vibration or noise?	Turn off the system and check operation by rotating the fan manually.	Fan rotates smoothly	-
Display	Measuring device	Is the display value normal?	Check the display value on the panel.	Check and manage specified values.	Voltmeter, ammeter, etc.
Motor	All	Is there any abnormal vibration or noise?	Visual inspection	No abnormality	-
		Is there any abnormal smell?	Check for overheating or damage.		

10.1.2 Annual Inspections

Inspection area	Inspection item	Inspection details	Inspection method	Judgment standard	Inspection equipment
Input/Output circuit	All	Megger test (between input/output terminals and and earth terminal)	Disconnect inverter and short R/S/T/U/V/W terminals, and then measure from each terminal to the ground terminal using a Megger.	Must be above 5 MΩ	DC 500 V Megger
		Is there anything loose in the device?	Tighten up all screws.	No abnormality	
		Is there any evidence of parts overheating?	Visual inspection		
	Cable connections	Are there any corroded cables?	Visual inspection	No abnormality	-
		Is there any damage to cable insulation?			
	Terminal block	Is there any damage?	Visual inspection	No abnormality	-
	Smoothing condenser	Measure electrostatic capacity.	Measure with capacity meter.	Rated capacity over 85%	Capacity meter
	Relay	Is there any chattering noise during operation?	Visual inspection	No abnormality	-
		Is there any damage to the contacts?	Visual inspection		
	Braking resistor	Is there any damage from resistance?	Visual inspection	No abnormality	Digital multimeter / anaog tester
Check for disconnection.		Disconnect one side and measure with a tester.	Must be within $\pm 10\%$ of the rated value of the resistor.		

Maintenance

Inspection area	Inspection item	Inspection details	Inspection method	Judgment standard	Inspection equipment
Control circuit Protection circuit	Operation check	Check for output voltage imbalance while the inverter is in operation.	Measure voltage between the inverter output terminal U/ V/ W.	Balance the voltage between phases: within 4V for 200 V series and within 8V for 400 V series.	Digital multimeter or DC voltmeter
		Is there an error in the display circuit after the sequence protection test?	Test the inverter ouput protection in both short and open circuit conditions.	The circuit must work according to the sequence.	
Cooling system	Cooling fan	Are any of the fan parts loose?	Check all connected parts and tighten all screws.	No abnormality	-
Display	Display device	Is the display value normal?	Check the command value on the display device.	Specified and managed values must match.	Voltmeter, Ammeter, etc.

10.1.3 Bi-annual Inspections

Inspection area	Inspection item	Inspection details	Inspection method	Judgment standard	Inspection equipment
Motor	Insulation resistance	Megger test (between the input, output and earth terminals).	Disconnect the cables for terminals U/V/W and test the wiring.	Must be above 5 MΩ	DC 500 V Megger

ⓘ Caution

Do not run an insulation resistance test (Megger) on the control circuit as it may result in damage to the product.

10.2 Replacing Major Components

Refer to following for information on replacing major components.

10.2.1 Exchange Cycle for Major Components

Following table shows the cycles and information for major components.

Components	Exchange standard	Symptom	Action
Cooling fan	3 years	Spinning failure	Make inquiries to the A/S center and replace it with a new product.
Main circuit electrolytic condenser	3 years	Capacity reduction	Make inquiries to the A/S center and replace it with a new product.
Main circuit relay	-	Operation failure	Make inquiries to the A/S center.

Note

The life times of major components are based on the operating rated load consecutively. The lifetime may be different according to conditions and environment.


10.2.2 How to Replace the Cooling Fans

ⓘ Caution

Turn off the power when replacing cooling fans.

Replace the cooling fans following the steps below:

- 1 Refer to the illustration and remove the 4 bolts securing the fan bracket.
- 2 Remove the fan bracket and disconnect the fan connector.
- 3 Connect the new fan's connector to the inverter's fan connector.
- 4 Reinsert the 4 bolts and secure the fan bracket.

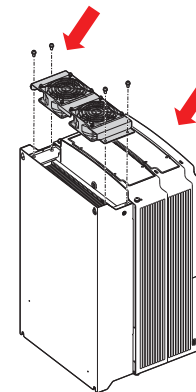

10.3 Storage and Disposal

10.3.1 Storage

If you are not using the product for an extended period, store it in the following way:

- Store the product in the same environmental conditions as specified for operation (refer to [1.3 Installation Considerations](#) on page 3).
- When storing the product for a period longer than 3 months, store it between 10°C and 30°C, to prevent depletion of the electrolytic capacitor.
- Do not expose the inverter to snow, rain, fog, or dust.
- Package the inverter in a way that prevents contact with moisture. Keep the moisture level below 70% in the package by including a desiccant, such as silica gel.

10.3.2 Disposal

When disposing of the product, categorize it as general industrial waste. Recyclable materials are included in the product, so recycle them whenever possible. The packing materials and all metal parts can be recycled. Although plastic can also be recycled, it can be incinerated under controlled conditions in some regions.

⚠ Caution

If the inverter has not been operated for a long time, capacitors lose their charging characteristics and are depleted. To prevent depletion, turn on the product once a year and allow the device to operate for 30-60 min. Run the device under no-load conditions.

11 Technical Specification

11.1 Input and Output Specification

3-Phase 400 V (30–75 kW)

Model LTVF-S4□□□□BAA		0075	0091	0107	0142	0169	
Applied motor	HP	40	50	60	75	100	
	kW	30	37	45	55	75	
Rated output	Rated capacity (kVA)		46	57	69	84	116
	Rated current (A)	Heavy load	61	75	91	110	152
		Normal load	75	91	107	142	169
	Output frequency		0-400 Hz (IM Sensorless: 0-120 Hz)				
Output voltage (V)		3-phase 380-480 V					
Rated input	Working voltage (V)		3-phase 380-480 VAC (-15% to +10%)				
	Input frequency		50-60 Hz (±5%)				
	Rated current (A)	Heavy load	56	69	85	103	143
Normal load		69	85	100	134	160	
Weight (lb /kg)		26	35	35	43	43	

11.2 Product Specification Details


Items	Description	
Control	Control method	V/F control, slip compensation, sensorless vector
	Frequency settings	Digital command: 0.01 Hz
	power resolution	Analog command: 0.06 Hz (60 Hz standard)
	Frequency accuracy	1% of maximum output frequency
	V/F pattern	Linear, square reduction, user V/F
	Overload capacity	Heavy load rated current: 150% 1 min, normal load rated current: 120% 1 min
	Torque boost	Manual torque boost, automatic torque boost
Operation	Operation type	Select key pad, terminal strip, or communication operation
	Frequency settings	Analog type: -10-10 V, 0-10 V, 4-20 mA Digital type: key pad, pulse train input
	Operation function	<ul style="list-style-type: none"> • PID control • 3-wire operation • Frequency limit • Second function <ul style="list-style-type: none"> • Up-down operation • DC braking • Frequency jump • Slip compensation

Items		Description	
Input	Multi function terminal (7EA) P1-P7	<ul style="list-style-type: none"> • Anti-forward and reverse direction rotation • Commercial transition • Speed search • Power braking • Leakage reduction 	<ul style="list-style-type: none"> • Automatic restart • Automatic tuning • Energy buffering • Flux braking • Fire Mode
		Select PNP (Source) or NPN (Sink) mode. Functions can be set according to IN-65–IN-71 codes and parameter settings.	
	Pulse train	<ul style="list-style-type: none"> • Forward direction operation • Reset • Emergency stop • Multi step speed frequency-high/med/low • DC braking during stop • Frequency increase • 3-wire • Local/remote operation mode transition • Select acc/dec/stop 	<ul style="list-style-type: none"> • Reverse direction operation • External trip • Jog operation • Multi step acc/dec-high/med/low • Second motor selection • Frequency reduction • Fix analog command frequency • Transition from PID to general operation
		0-32 kHz, Low Level: 0-0.8 V, High Level: 3.5-12 V	
		Less than DC 24 V, 50 mA	
Output	Multi function open collector terminal	Fault output and inverter operation status output	Less than (N.O., N.C.) AC250 V 1A, Less than DC 30 V, 1A
	Multi function relay terminal		
	Analog output	0-12Vdc (0-24 mA): Select frequency, output current, output voltage, DC terminal voltage and others	
	Pulse train	Maximum 32 kHz, 10-12V	
Protection function	Trip	<ul style="list-style-type: none"> • Over current trip • External signal trip • ARM short circuit current trip • Over heat trip • Input imaging trip • Ground trip • Motor over heat trip • I/O board link trip • No motor trip • Parameter writing trip • Emergency stop trip • Command loss trip • External memory error • CPU watchdog trip 	<ul style="list-style-type: none"> • Over voltage trip • Temperature sensor trip • Inverter over heat • Option trip • Output imaging trip • Inverter overload trip • Fan trip • Pre-PID operation failure • External break trip • Low voltage trip during operation • Low voltage trip • Safety A(B) trip • Analog input error


Items		Description	
Alarm		• Motor normal load trip	• Motor overload trip
		Command loss trip alarm, overload alarm, normal load alarm, inverter overload alarm, fan operation alarm, resistance braking rate alarm, number of corrections on rotor tuning error	
	Instantaneous blackout	Heavy load less than 16 ms (normal load less than 8 ms): continue operation (must be within the rated input voltage and rated output range) Heavy load more than 16 ms (normal load more than 8 ms): auto restart operation	
Structure/ working environment	Cooling type	Forced fan cooling structure	
	Protection structure	IP 20 (standard), UL Open & Enclosed Type 1 (option)	
	Ambient temperature	Heavy load: -10-50°C (14–122°F), normal load: -10-40°C (14–104°F) No ice or frost should be present.	
	Ambient humidity	Relative humidity less than 90% RH (to avoid condensation forming)	
	Storage temperature.	-20°C-65°C (-4–149°F)	
	Surrounding environment	Prevent contact with corrosive gases, inflammable gases, oil stains, dust, and other pollutants (Pollution Degree 2 Environment).	
	Operation altitude/oscillation	No higher than 3280ft (1,000m). Less than 9.8 m/sec ² (0.6G).	
Pressure	70-106 kPa		

11.3 External Dimensions (IP 20 Type)


30 kW (3-Phase)

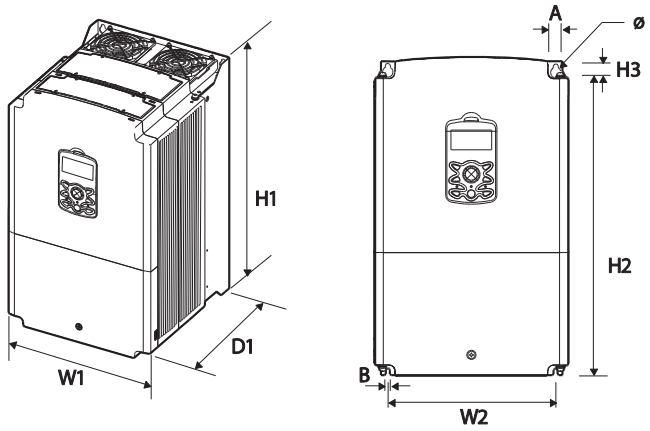

37–45 kW (3-Phase)

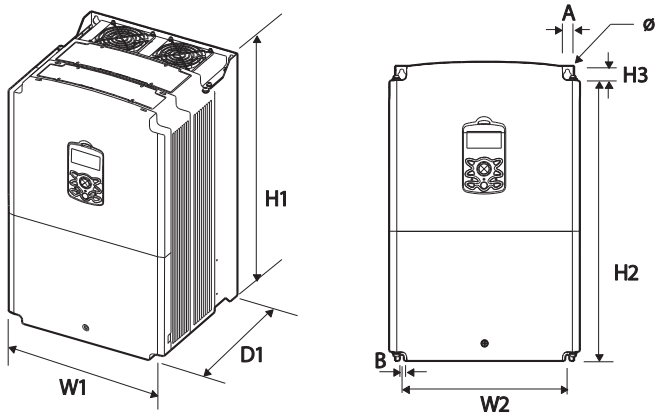

55–75 kW (3-Phase)

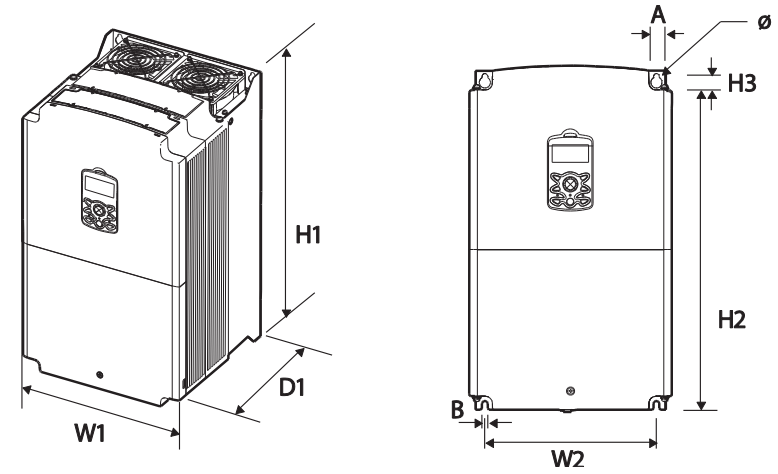

Items	W1	W2	H1	H2	H3	D1	A	B
LTVF-S40075BAA	275 (10.8)	232	450 (17.7)	428.5	14	284 (11.2)	7 (0.28)	7 (0.28)
LTVF-S40091BAA LTVF-S40107BAA	325 (12.8)	282	510 (20.1)	486.5	16			
LTVF-S40142BAA LTVF-S40169BAA		275	550 (21.7)	524.5		309 (12.2)	9	9

Units: mm (inches)

11.4 Peripheral Devices

Compatible Circuit Breaker, Leakage Breaker and Magnetic Contactor Models
(manufactured by L&T)

Product (HD rating)	L&T MCCB / Amp	L&T Magnetic Contactor
30 kW-4	DN2-250M / 125	MO 95
37 kW-4	DN2-250M / 160	MNX 140
45 kW-4	DN2-250M / 160	MNX 140
55 kW-4	DN2-250M / 200	MNX 185
75 kW-4	DN3-400M / 320	MNX 225

11.5 Fuse and Reactor Specifications

Product (HD rating)	AC Input Fuse	
	Current (A)	Voltage (V)
30 kW-4	125 A	600
37 kW-4		
45 kW-4		
55 kW-4		
75 kW-4		

ⓘ Caution

Only use Class H or RK5, UL listed input fuses and UL listed circuit breakers. See the table above for the voltage and current ratings for fuses and circuit breakers.

AC Input Reactor					
Product (HD rating)	mH	Amp	Product (ND rating)	mH	Amp
30 kW-4	0.287	80	37 kW-4	0.232	98
37 kW-4	0.232	98	45 kW-4	0.195	118
45 kW-4	0.195	118	55 kW-4	0.157	142
55 kW-4	0.157	142	75 kW-4	0.122	196
75 kW-4	0.122	196	90 kW-4	0.096	237

11.6 Terminal Screw Specification

Input/Output Terminal Screw Specification

Product (kW)	Terminal Screw Size	Screw Torque (Kgf·cm/Nm)
30~75 kW	M8	61.2~91.8

Control Circuit Terminal Screw Specification

Terminal	Terminal Screw Size	Screw Torque (Kgf·cm/Nm)
P1~P7/CM/RV/1/1/2/AO1/AO2 /Q1/EG/24/TI/TO/SA,SB,SC/S+ ,S-,SG/A1,B1,C1/A2,C2	M2.6	0.4

ⓘ Caution

Apply the rated torque when tightening terminal screws. Loose screws may cause short circuits and malfunctions. Overtightening terminal screws may damage the terminals and cause short circuits and malfunctions. Use copper conductors only, rated at 600 V, 90°C for power terminal wiring, and rated at 300 V, 75°C for control terminal wiring.

11.7 Braking Resistor Specification


Product (kW)	Resistance (Ω)	Rated Capacity (W)
30 kW	12	5000
37 kW		
45 kW	6	10000
55 kW		
75 kW		

- The standard for braking torque is 150% and the working rate (%ED) is 5%. If the working rate is 10%, the rated capacity for braking resistance must be calculated at twice the standard.

11.8 Continuous Rated Current Derating

Derating by Carrier Frequency


The continuous rated current of the inverter is limited based on the carrier frequency. Refer to the following graph.

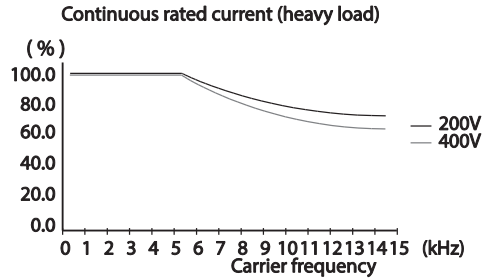

Item	Unit	30 kW	37 kW	45 kW	55 kW	75 kW
$f_{s,ND}$		2				
$f_{s,c}$	[kHz]	6		4		
$f_{s,max}$		10		7		
% of DR	[%]	70				


Derating by Input Voltage

The continuous rated current of the inverter is limited based on the input voltage. Refer to the following graph.

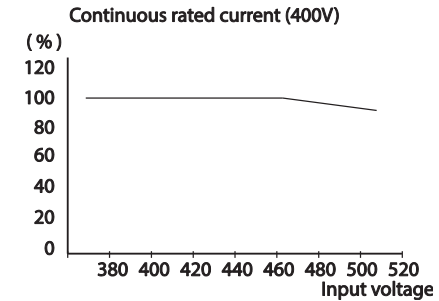

Derating by Ambient Temperature and Installation Type


The constant-rated current of the inverter is limited based on the ambient temperature and installation type. Refer to the following graph.

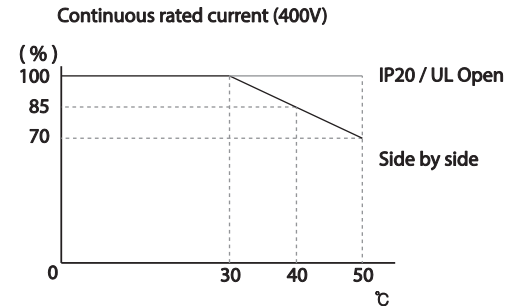

Note : Above graph is for HD models. For ND models operation at 50 deg C needs deration of 2% per deg rise above 40 deg C upto 50 deg C.

11.9 Heat Emmission

The following graph shows the inverters' heat emission characteristics (by product capacity).

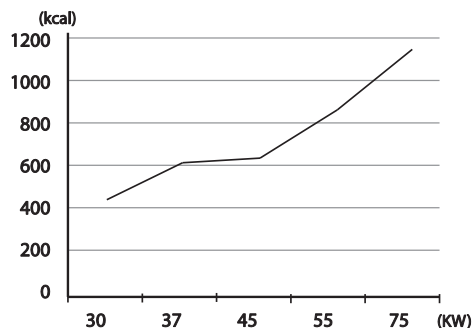

Heat emission data is based on operations with default carrier frequency settings, under normal operating conditions. For detailed information on carrier frequency, refer to 5.16 Operational Noise Settings (carrier frequency settings) on page [149](#).

Index

[
[DOWN] key.....	31
[ESC] key.....	31
[HAND] key.....	31
[LEFT] key.....	31
[MODE] key.....	31
[MULTI] key.....	31
[OFF] key.....	31
[PROG / Ent] key.....	31
[RIGHT] key.....	31
[STOP/RESET] key.....	31
[UP] key.....	31
2	
2 square reduction.....	56
24 terminal.....	21, 23
2nd Motor Function group.....	Refer to M2 (2nd Motor Function group) group
2nd Motor Operation.....	151
2 nd Operation mode.....	94
2 nd command source.....	94
Shared command (Main Source).....	94
3	
3-phase 415V (5.5~22 kW).....	316
3-Wire Operation.....	117
A	
A terminal (Normally Open).....	95
A1/C1/B1 terminal.....	21
AC power input terminal.....	Refer to R/S/T terminal
Acc/Dec pattern.....	56, 80
linear pattern.....	80
S-curve pattern.....	80
Acc/Dec reference.....	77
Delta Freq.....	76
Max Freq.....	76
Acc/Dec reference frequency.....	76
Ramp T Mode.....	76
Acc/Dec stop.....	83
Acc/Dec time.....	76
Acc/Dec time switch frequency.....	79
configuration via multi-function terminal.....	78
maximum frequency.....	76
operation frequency.....	77
accumulated electric energy initialize.....	163
Add User group	
UserGrp SelKey.....	160
ADV (A function group).....	240
advanced features group.....	37
Advanced function group.....	Refer to ADV (advanced) function group
analog frequency hold.....	67
Analog Hold.....	67
analog input.....	20, 37
I2 current input.....	63
I2 voltage input.....	65
TI Pulse input.....	65
V1 voltage input.....	59
analog input selection switch(SW2).....	18, 65
analog output.....	21, 168
analog output selection switch(SW3).....	18
AO terminal.....	21
pulse output.....	171
voltage and current output.....	168
analog output selection switch(SW3).....	168
AO terminal.....	21, 74, 168
APP(Application Function group).....	264
ARM short current fault trip.....	Refer to Over Current2
asynchronous communications system.....	206
auto restart settings.....	148
auto torque boost.....	87
auto tuning.....	87, 130
auto tuning.....	130, 236
All(rotating).....	131
All(static).....	131
default parameter setting.....	130
Tr(static).....	131
auxiliary frequency.....	108
auxiliary frequency reference configuration.....	108
auxiliary reference.....	108
auxiliary reference gain.....	109
configuration.....	108
final command frequency calculation.....	110
main reference.....	108

B	
B terminal (Normally Closed).....	95
BAS(Basic function group).....	235
basic configuration diagram.....	9
Basic group..... Refer to BAS (Basic function group)	
basic operation.....	30
bit95.....	
bit (Off).....	95
bit (On).....	95
bit setting.....	95
multi-function input setting.....	95
multi-function output setting.....	177
speed search setting.....	146
stall prevention.....	188
Bootlace Ferrule.....	22
brake control.....	165
BR Control.....	165
brake engage sequence.....	165
brake release sequence.....	165
brake resistor.....	16
brake unit.....	167
braking resistance.....	
braking torque.....	323
braking resistors.....	9
built-in communication..... Refer to RS-485	
BX.....	205, 300
C	
cable.....	6, 14, 15, 16, 18
Ground Specifications.....	7
Power I/O Cable Specifications.....	7
selection.....	6, 14, 15, 16, 18, 335
shielded twisted pair.....	27
signal(control) cable specifications.....	6
cable tie.....	23
carrier frequency.....	17, 149
derating.....	323
factory default.....	150
charge indicator.....	13, 299, 305
charge lamp.....	13
cleaning.....	309
CM terminal.....	20, 23
CNF (configuration mode).....	36, 163
COM(configuration function group).....	260
command.....	70
configuration.....	70
Command source.....	70
fwd/rev command terminal.....	70
keypad.....	70
RS-485.....	71
run command/rotational direction configuration.....	71
commercial power source transition.....	152
common terminal..... Refer to EG terminal	
communication.....	206
command loss protective operation.....	210
communication address.....	214
communication line connection.....	207
communication parameters.....	208
communication speed.....	208
communication standards.....	206
memory map.....	212
PLC.....	206
protocol.....	214
saving parameters defined by communication.....	212
setting virtual multi-function input.....	211
Communication function group. Refer to COM (communication function group)	
compatible common area parameter.....	217
CON (Control Function group).....	245
Considerations for the installation.....	
Air Pressure.....	3
Altitude/Vibration.....	3
Ambient Humidity.....	3
Environmental Factors.....	3
Considerations for the installation.....	
Ambient Temperature.....	3
contact.....	
A contact.....	192
B contact.....	192
Control group. Refer to CON (Control Function group)	
control terminal board wiring.....	18
cooling fan.....	153
cooling fan malfunction.....	199
Fan Control.....	153
fan Operation accumulated time.....	182
fan Operation accumulated time initialization.....	182
fan replacement.....	314
CPU Watch Dog fault trip.....	205
cursor keys.....	31
[DOWN] key.....	31

[LEFT] key.....	31
[RIGHT] key.....	31
[UP] key.....	31

D

DB resistor.....	
braking resistor circuit.....	196
DB Warn %ED.....	196
DB Warn %ED..... Refer to DB Warn %ED	
DC braking.....	
DC braking after start.....	88
DC braking after stop.....	89
DC braking frequency.....	89
DC link voltage.....	106, 140
derating.....	150
Digital Output.....	172
digital source.....	72
display.....	32
display mode table.....	36
display modes.....	35
disposal.....	309, 315
draw operation.....	106
Drive group...230, Refer to DRV (Drive group)	
Dwell Operation.....	119
Acc/Dec dwell frequency.....	119
acceleration Dwell.....	119
deceleration Dwell.....	119

E

earth leakage breaker.....	307
EEP Rom Empty.....	155
EG terminal.....	21
electronic thermal overheating protection (ETH).....	183
emergency stop fault trip..... Refer to BX	
Enclosed Type 1.....	318
energy buffering operation.....	140
energy saving operation.....	144
automatic energy saving operation.....	144
manual energy saving operation.....	144
ESC key.....	
[ESC] key configuration.....	115
[ESC] key setup.....	72
local/remote switching.....	72
multi-function key.....	72
remote / local operation switching.....	72
ETH... Refer to <i>electronic thermal overheating</i>	

<i>protection (ETH)</i>	205
E-Thermal.....	205
Exciting Current.....	135
external 24V power terminal..... Refer to 24 terminal	
External Trip.....	205, 300
External Trip.....	
External Trip Signal.....	192

F

Fan Trip.....	199, 205, 300
Fan Warning.....	199, 205, 300
fatal.....	299
fault.....	205
fatal.....	299
fault/warning list.....	205
latch.....	299
level.....	299
major fault.....	205
fault monitoring.....	51
multiple fault trips.....	52
fault signal output terminal Refer to A1/C1/B1 terminal	
fault trip mode.....	36
ferrite.....	23
fieldbus.....	58, 70
communication option.....	94
Fieldbus..... Refer to <i>fieldbus</i>	
filter time constant.....	59
filter time constant number.....	95
flux braking.....	187
free run stop.....	91
frequency jump.....	93
frequency limit.....	92
frequency jump.....	93
frequency upper and lower limit value.....	92
maximum/start frequency.....	92
frequency reference.....	88
frequency setting.....	58
I2 current input.....	63
I2 voltage input.....	65
keypad.....	58
RS-485.....	67
T1 Pulse input.....	65
V1 voltage input.....	59
frequency setting (Pulse train) terminal...Refer to T1 terminal	
frequency setting(voltage) terminal Refer to V1	

terminal	9
fuse	321
G	
ground	15
class 3 ground	15
ground terminal	15
Ground Cable Specifications	7
ground fault trip.....Refer to <i>Ground Trip</i>	
Ground Trip	205, 299
ground fault trip	299
H	
half duplex system	206
Heavy Duty	3
heavy load.....	150
hunting.....	139
I	
I2 20, 63	
analog input selection switch(SW2)	20
frequency setting(current/voltage) terminal	
.....	20
In Phase Open	205, 300
IN(Input Terminal Block Function group).....	251
input open-phase fault trip.... Refer to <i>In Phase Open</i>	
input phase open	
input open-phase protection.....	191
input power frequency	154
input power voltage.....	154
input terminal	20
CM terminal.....	20
I2 terminal.....	20
P1-P7 terminal	20
SA terminal	20
SB terminal.....	20
SC terminal	20
TI terminal.....	20
V1 terminal.....	20
VR terminal	20
Input terminal function group Refer to IN (Input terminal function group)	
inspection	
annual inspection.....	311
bi-annual inspection).....	313
installation	8
basic configuration diagram	9
Installation flowchart	8
wiring	13
Installation	
Mounting the Inverter	10
installation considerations	3, 309, 315
IP 20	318
J	
Jog Operation	112
FWD Jog	112
Jog frequency	112
keypad	115
jump frequency.....	93
K	
keypad	30
[ESC] key.....	31
[HAND] key	31
[MODE] key.....	31
[MULTI] key	31
[OFF] key.....	31
[PROG / Ent] key.....	31
[STOP/RESET] key.....	31
configuration mode.....	36
cursor keys	31
display.....	30, 32
display mode.....	35
monitor mode	36
navigating between groups	35
operation keys.....	30
parameter mode	36
S/W version	163
trip mode.....	36
keypad display.....	32
keypad features	
fault monitoring	51
selecting a display mode	38
Keypad Language.....	179
L	
latch	299
LCD display	32
LCD keypad	
LCD brightness/contrast adjustment	163
wiring length	23
leakage breaker.....	321

level	299
Lifetime diagnosis of components	
lifetime diagnosis for fans	201
lift-type load	80, 86, 87, 119
linear pattern	80
linear V/F pattern Operation.....	83
base frequency	83
start frequency	83
local operation	
[ESC] key	72
Local/Remote Mode Switching	72
remote peration.....	72
local Operation	72
locating the installation site	4
location	4
loop	98
loop time	101
Lost Command.....	205, 301, 302
command loss fault trip warning	205
command loss trip	205
low voltage	202, 299
low voltage fault trip	202, 205
low voltage trip 2.....	204
Low Voltage	205
LowLeakage PWM	150
M	
M2(2nd Motor Function group).....	271
magnetic contactor	17, 321
maintenance	309
manual torque boost.....	86
Master	207
master inverter.....	97
master unit.....	96
megger test.....	311
micro surge filter	17
momentary power interruption... 140, 146, 147	
monitor	
Operation State Monitor	179
Operation time monitor	182
monitoring	
monitor mode.....	36
monitor mode display.....	32
motor output voltage adjustment.....	87
motor protection	183
motor rotational direction	29
motor thermal protection(ETH)	
ETH trip.....	184
E-Thermal.....	184
mounting bolt	10
multi-function input terminal	
IN-65-71	253
Px terminal function setting	253
multi-function input terminal	
Px Define	253
multi keypad	
Multi KPD.....	97
slave parameter	97
multi-drop Link System	206
Multi-function (open collector) output terminal	
Multi-function output item1(Q1 Define) ..	258
Multi-function relay 1 item(Relay 1)	257
multi-function input terminal	20
multi-function input terminal Off filter	95
multi-function input terminal On filter	95
P1-P7	Refer to <i>In Phase Open</i>
multi-function input terminal control.....	95
multi-function key	
Multi Key Sel	297
multi-function key options	297
multi-function output terminal	
multi-function output on/off control.....	166
multi-function output terminal and relay	
settings	172
multi-function output terminal delay time	
settings	178
trip output by multi-function output terminal	
and relay	177
multi-function(open collector) output terminal	
..... Refer to Q1 terminal	
multi-keypad	97
master parameter	97
setting.....	97
multi-step frequency.....	68
setting.....	68
Speed-L/Speed-M/Speed-H	69
N	
N- terminal(- DC link terminal)	16
no motor trip.....	204, 205, 300
noise	61
Normal Duty.....	3
normal load	150
Normal PWM.....	150
NPN mode(Sink)	24

O	
open-phase protection.....	191
Operation frequency <i>Refer to frequency setting</i>	
operation noise.....	149
carrier frequency.....	149
frequency jump.....	93
Operation time.....	182
operation accumulated time.....	182
operation accumulated time initialization	
.....	182
option trip.....	203, Refer to <i>Option Trip-x</i>
Option Trip-x.....	205
option trip.....	205
Out Phase Open.....	205, 300
OUT (Output terminal function group).....	256
output block by multi-function terminal.....	202
output open-phase fault trip.....	Refer to <i>Out Phase Open</i>
output terminal.....	Refer to <i>R/S/T terminal</i>
Output terminal function group... Refer to OUT	
(Output terminal function group)	
output/communication terminal	21
24 terminal.....	21
A1/C1/B1 terminal.....	21
AO terminal.....	21
EG terminal.....	21
Q1 terminal.....	21
S+/S-/SG terminal.....	21
TO terminal.....	21
over current trip.....	Refer to <i>Over Current1</i>
Over Current1.....	205, 299
Over Current2.....	205, 300
Over Heat.....	205, 300
over heat fault trip.....	Refer to <i>Over Heat</i>
over load.....	205
Over Load.....	299
overload warning.....	205, 302
Over Voltage.....	205, 299
over voltage trip.....	Refer to <i>Over Voltage</i>
overload.....	Refer to <i>Over Load</i>
overload fault trip.....	205
overload overload trip.....	185
overload warning.....	185
overload rate.....	150
overload trip.....	Refer to <i>Over Load</i>

P	
P/lgain.....	147
P1+ terminals(+ DC link terminals).....	16
P2P.....	96
communication function.....	96
master parameter.....	96
setting.....	96
slave parameter.....	96
parameter	
display changed parameter.....	159
hide parameters.....	157
initialization.....	156
initializing the parameters.....	54
parameter lock.....	158
parameter settings.....	46
password.....	157, 158, 229
read/write/save.....	155
parameter mode.....	36
parameter setting mode	37
parameter view lock.....	157
part names.....	2
parts illustrated.....	2
Peripheral devices.....	321
phase-to-phase voltage.....	306
PID control.....	122
basic PID operation.....	122
configuration.....	122
Differential time(PID D-Time).....	125
integral time(PID I-Time).....	125
oscillation.....	125
Pgain.....	125
PID control block diagram.....	127
PID feedback.....	300
PID Operation Sleep mode.....	129
PID output.....	124
PID reference.....	124
PID Switching.....	129
Pre-PID Operation.....	128
PNP/NPN mode selection switch(SW1).....	18
NPN mode(Sink).....	24
PNP mode(Source).....	23
post-installation checklist.....	26
power consumption.....	180, 181
power slot.....	163
power terminal	
N-terminal.....	16
P2+/B terminal.....	16
U/V/W terminal.....	16

power terminal board wiring.....	16
power terminals	
R/S/T terminals.....	16
Power-on Run.....	Refer to <i>start at power-on</i>
pre-exciting time.....	136
Preinsulated Crimp Terminal.....	22
Press regeneration prevention.....	167
P gain/l gain.....	167
protocol.....	214
PRT(Protection Function group).....	266
Pulse output terminal.....	Refer to TO terminal
PWM.....	149
frequency modulation.....	149

Q

Q1 terminal.....	21
Quantizing.....	61
noise.....	61

R

R/S/T terminals.....	16, 17, 305
rating	
braking resistance rated capacity.....	323
rated motor current.....	121
rated motor voltage.....	130
rated slip frequency.....	121
rated slip speed.....	121
rated torque current.....	169
reactor.....	9, 321
regenerated energy.....	91, 140
remote operation.....	72
[ESC] key.....	72
local operation.....	72
Local/Remote Mode Switching.....	72
Reset Restart.....	refer to <i>restarting after a trip</i>
resonance frequency.....	93
carrier frequency.....	149
frequency jump.....	93
restarting after a trip.....	75
RS-232.....	207
communication.....	207
RS-485.....	206
communication.....	207
converter.....	207
integrated communication.....	67
signal terminal.....	21, 67
RS-485 signal input terminal....	Refer to S+/S-

/SG terminal	
run prevention	
Fwd.....	73
Rev.....	73

S

S/W version.....	163
keypad.....	163
product.....	163
S+/S-/SG terminal.....	21
S100 expansion common area parameter	
control area parameter(Read/Write).....	226
memory control area	
parameter(Read/Write).....	228
monitor area parameter (read only).....	220
SA terminal.....	20
Safe Operation mode.....	118
safety information.....	ii
safety input power terminal.....	Refer to SC terminal
safety inputA terminal.....	Refer to SA terminal
Safety inputB terminal.....	Refer to SB terminal
SB terminal.....	20
SC terminal.....	20
screw specification	
control circuit terminal screw.....	322
input/output terminal screw.....	322
screw size.....	322
screw torque.....	322
S-curve pattern.....	80
actual Acc/Dec time.....	82
sensorless vector control.....	133
configuration.....	135
Hold Time.....	136
lgain.....	136
IM Sensorless.....	135
Pgain.....	136
pre-exciting time.....	136
sensorless vector control operation guide	
.....	139
sequence common terminal.....	Refer to CM terminal
serge killer.....	26
setting virtual multi-function input.....	211
Slave.....	207
slave inverter.....	97
slave unit.....	96
Slip.....	121

slip compensation operation	121
speed command loss	193
speed search operation.....	145
Flying Start-1	145
Flying Start-2.....	145
options	146
P/gain	147
speed unit selection (Hz or Rpm).....	68
Square reduction	
Square reduction load.....	84
V/F pattern Operation	84
stall	
bit on/off	188
stall prevention.....	187
Stall	187
start at power-on	74
start mode	88
acceleration start	88
start after DC braking.....	88
Station	97
Station ID	214
stop mode	89
DC braking after stop	89
deceleration stop	89
free run stop	91
power braking	91
storage	315
Storing Temperature	3
surge killer.....	17
switch.....	18
analog input selection switch(SW2)	18
analog output selection switch(SW3).....	18
PNP/NPN mode selection switch(SW1)..	18
terminal resistor DIP switch(SW4).....	18
T	
target frequency	
Cmd Frequency	230
technical specification	316
terminal	95
A terminal.....	95, 178
B terminal	95, 178
terminal for frequency reference setting ..Refer to VR terminal	
test run.....	28
TI terminal	20, 65
time scale	
0.01sec	77
0.1sec	77
1sec.....	77
time scale setting.....	76
Timer.....	164
protection features group	PRT (protection features) group
TO terminal	21, 171
torque	17
torque control	141
torque reference setting option	142
torque boost	86
auto torque boost.....	87
manual torque boost	86
overexcitation	86
trip	299
erase trip history	163
fault/warning list	205
trip mode	36
trip status reset.....	203
troubleshooting	303
troubleshooting	299
other faults.....	305
troubleshooting fault trips.....	303
U	
U/V/W terminals	16, 17, 305
Under Load	
underload fault trip	205
underload trip	299
underload warning.....	302
Underload	205
underload trip	198
underload warning.....	198, 205
update.....	163
Up-Down Operation.....	115
user group	159
delete parameters	160
parameter registration.....	160
User mode	35, 160
user sequence	98
function block parameter	101
setting.....	98
user function operation condition.....	101
USF group.....	98
USS group.....	98
void parameter	98, 101
user V/F pattern Operation	85
USF.....	276

using the keypad	
parameter settings.....	46
using the keypad	38
navigating through the codes (functions)..	43
switching between groups in parameter display mode	42
USS	273
V	
V/F control.....	83
linear V/F pattern Operation	83
Square reduction V/F pattern Operation.....	84
user V/F pattern Operation	85
V1 terminal.....	20, 59
V2	
analog input selection switch(SW2)	20
V2 input	65
I2 voltage input.....	65
variable torque load	84, 141
voltage drop	17
voltage/current output terminal	Refer to AO terminal
VR terminal	20, 59
W	
Warning	299
fault/warning list	205
wiring	13
3 core cable.....	17
circuit breaker.....	321
control terminal board wiring	18
copper cable.....	13
cover disassembly.....	14
ferrite	23
ground.....	15
power terminal board wiring	16
re-assembling the covers	25
signal wiring.....	22
torque	13
wiring length	17, 23