



Q9 ASD Installation and Operation Manual

Document Number: 59445-002

Date: October, 2009

Q9 ASD Installation and Operation Manual

Document Number: 59445-002

Date: October, 2009



Introduction

Congratulations on the purchase of the new **Q9 True Torque Control² Adjustable Speed Drive!**

The **Q9 True Torque Control² Adjustable Speed Drive** (ASD) is a solid-state AC drive that features **True Torque Control²**. Toshiba's Vector Control Algorithm enables the motor to develop high starting torque and provide compensation for motor slip, which results in smooth, quick starts and highly efficient operation. The Q9 ASD uses digitally-controlled pulse width modulation. The programmable functions may be accessed via the easy-to-use menu or via the **Direct Access Numbers** (see [page 59](#)). This feature, combined with Toshiba's high-performance software, delivers unparalleled motor control and reliability.

The Q9 ASD is a very powerful tool, yet surprisingly simple to operate. The user-friendly **Electronic Operator Interface** (EOI) of the Q9 ASD has an easy-to-read LCD screen. The **EOI** provides easy access to the many monitoring and programming features of the Q9 ASD.

The motor control software is menu-driven, which allows for easy access to the motor control parameters and quick changes when required.

To maximize the abilities of your new Q9 ASD, a working familiarity with this manual will be required. This manual has been prepared for the ASD installer, user, and maintenance personnel. This manual may also be used as a reference guide or for training. With this in mind, use this manual to develop a system familiarity before attempting to install or operate the device.

Important Notice

The instructions contained in this manual are not intended to cover all details or variations in equipment types, nor may it provide for every possible contingency concerning the installation, operation, or maintenance of this equipment. Should additional information be required contact your Toshiba Sales Representative.

The contents of this manual shall not become a part of or modify any prior or existing agreement, commitment, or relationship. The sales contract contains the entire obligation of Toshiba International Corporation. The warranty contained in the contract between the parties is the sole warranty of Toshiba International Corporation and any statements contained herein do not create new warranties or modify the existing warranty.

Any electrical or mechanical modifications to this equipment without prior written consent of Toshiba International Corporation may void all warranties and may void the UL listing or other safety certifications. Unauthorized modifications may also result in a safety hazard or equipment damage.

Misuse of this equipment could result in injury and equipment damage. In no event will Toshiba Corporation be responsible or liable for direct, indirect, special, or consequential damage or injury that may result from the misuse of this equipment.

About This Manual

This manual was written by the Toshiba Technical Publications Group. This group is tasked with providing technical documentation for the **Q9 Adjustable Speed Drive**. Every effort has been made to provide accurate and concise information to you, our customer.

At Toshiba we're continuously searching for better ways to meet the constantly changing needs of our customers. E-mail your comments, questions, or concerns about this publication to Technical-Publications-Dept@tic.toshiba.com.

Manual's Purpose and Scope

This manual provides information on how to safely install, operate, maintain, and dispose of your **Q9 Adjustable Speed Drive**. The information provided in this manual is applicable to the **Q9 Adjustable Speed Drive** only.

This manual provides information on the various features and functions of this powerful cost-saving device, including

- Installation,
- System operation,
- Configuration and menu options, and
- Mechanical and electrical specifications.

Included is a section on general safety instructions that describe the warning labels and symbols that are used throughout the manual. Read the manual completely before installing, operating, performing maintenance, or disposing of this equipment.

This manual and the accompanying drawings should be considered a permanent part of the equipment and should be readily available for reference and review. Dimensions shown in the manual are in metric and/or the English equivalent.

Because of our commitment to continuous improvement, Toshiba International Corporation reserves the right, without prior notice, to update information, make product changes, or to discontinue any product or service identified in this publication.

Toshiba International Corporation (TIC) shall not be liable for direct, indirect, special, or consequential damages resulting from the use of the information contained within this manual.

This manual is copyrighted. No part of this manual may be photocopied or reproduced in any form without the prior written consent of Toshiba International Corporation.

© Copyright 2009 Toshiba International Corporation.

TOSHIBA[®] is a registered trademark of Toshiba Corporation. All other product or trade references appearing in this manual are registered trademarks of their respective owners.

TOSHIBA Leading Innovation[®] is a registered trademark of Toshiba International Corporation.

All rights reserved.

Printed in the U.S.A.

Contacting Toshiba's Customer Support Center

Toshiba's Customer Support Center can be contacted to obtain help in resolving any **Adjustable Speed Drive** system problem that you may experience or to provide application information.

The Support Center is open from 8 a.m. to 5 p.m. (CST), Monday through Friday. The Center's toll free number is US (800) 231-1412/Fax (713) 937-9349 — Canada (800) 527-1204. For after-hours support follow the directions in the outgoing message when calling.

You may also contact Toshiba by writing to:

Toshiba International Corporation
13131 West Little York Road
Houston, Texas 77041-9990
Attn: ASD Product Manager.

For further information on Toshiba's products and services, please visit our web site at www.toshiba.com/ind/.

TOSHIBA INTERNATIONAL CORPORATION

Q9 Adjustable Speed Drive

Please complete the Warranty Card supplied with the ASD and return it to Toshiba by prepaid mail. This will activate the 12 month warranty from the date of installation; but, shall not exceed 18 months from the shipping date.

Complete the following information and retain for your records.

Model Number: _____

Serial Number: _____

Project Number (if applicable): _____

Date of Installation: _____

Inspected By: _____

Name of Application: _____

Table of Contents

General Safety Information	1
Safety Alert Symbol	1
Signal Words	1
Special Symbols	2
Equipment Warning Labels	2
Qualified Personnel	2
Equipment Inspection	3
Handling and Storage	3
Disposal	3
Installation Precautions	4
Location and Ambient Requirements	4
Mounting Requirements	4
Conductor Routing and Grounding	5
Power Connections	6
Protection	6
System Integration Precautions	7
Personnel Protection	7
System Setup Requirements	8
Operational and Maintenance Precautions	9
Motor Characteristics	10
Motor Autotuning	10
Pulse Width Modulation Operation	10
Low Speed Operation	10
Overload Protection Adjustment	10
Operation Above 60 Hz	10
Power Factor Correction	11
Light Load Conditions	11
Motor/Load Combinations	11
Motor Braking	11
Installation and Connections	12
Installation Notes	12
Mounting the ASD	13
Connecting the ASD	14
Lead Length Specifications	18
I/O and Control	19
Electronic Operator Interface	26
EOI Operation	26
EOI Remote Mounting	26
EOI Features	27
Keypad Remote Mounting	29

Command Mode and Frequency Mode Control	32
Command Control (F003)	32
Frequency Control (F004)	33
System Configuration and Menu Options	37
Root Menu Items	37
System Operation	57
Operation (Local)	57
Default Setting Changes	57
Direct Access Parameter Information	59
Direct Access Parameters/Numbers	59
Alarms, Trips, and Troubleshooting	194
User Notification Codes	195
Alarms and Trips	196
Enclosure Dimensions	204
Enclosure Dimensions	205
Current/Voltage Specifications	211
Cable/Terminal Specifications	213
Short Circuit Protection Recommendations	215

General Safety Information

DO NOT attempt to install, operate, maintain, or dispose of this equipment until you have read and understood all of the product safety information and directions that are contained in this manual.

Safety Alert Symbol

The **Safety Alert Symbol** is comprised of an equilateral triangle enclosing an exclamation mark. This indicates that a potential personal injury hazard exists.



Signal Words

Listed below are the signal words that are used throughout this manual followed by their descriptions and associated symbols. When the words **DANGER**, **WARNING**, and **CAUTION** are used in this manual they will be followed by important safety information that must be carefully adhered to.

The word **DANGER** preceded by the safety alert symbol indicates that an imminently hazardous situation exists that, if not avoided, will result in serious injury to personnel or loss of life.



The word **WARNING** preceded by the safety alert symbol indicates that a potentially hazardous situation exists that, if not avoided, could result in serious injury to personnel or loss of life.



The word **CAUTION** preceded by the safety alert symbol indicates that a potentially hazardous situation exists that, if not avoided, may result in minor or moderate injury to personnel.



The word **CAUTION** without the safety alert symbol indicates a potentially hazardous situation exists that, if not avoided, may result in equipment or property damage.

CAUTION

Special Symbols

To identify special hazards, other symbols may appear in conjunction with the **DANGER**, **WARNING**, and **CAUTION** signal words. These symbols indicate areas that require special and/or strict adherence to the procedures to prevent serious injury to personnel or loss of life.

Electrical Hazard Symbol

A symbol that is comprised of an equilateral triangle enclosing a lightning bolt indicates a hazard of injury from electrical shock or burn.



Explosion Hazard Symbol

A symbol that is comprised of an equilateral triangle enclosing an explosion indicates a hazard of injury from exploding parts.



Equipment Warning Labels

DO NOT attempt to install, operate, perform maintenance, or dispose of this equipment until you have read and understood all of the user directions that are contained in this manual.

Warning labels that are attached to the equipment will include an equilateral triangle enclosing an exclamation mark. **DO NOT** remove or cover any of these labels. If the labels are damaged or if additional labels are required, contact your Toshiba Sales Representative.

Labels attached to the equipment are there to provide useful information or to indicate an imminently hazardous situation that may result in serious injury, severe property and equipment damage, or loss of life if safe procedures or methods are not followed as outlined in this manual.

Qualified Personnel

Installation, operation, and maintenance shall be performed by **Qualified Personnel Only**. A Qualified Person is one that has the skills and knowledge relating to the construction, installation, operation, and maintenance of the electrical equipment and has received safety training on the hazards involved (Refer to the latest edition of NFPA 70E for additional safety requirements).

Qualified Personnel shall:

- Have carefully read the entire operation manual.
- Be familiar with the construction and function of the ASD, the equipment being driven, and the hazards involved.
- Be able to recognize and properly address hazards associated with the application of motor-driven equipment.
- Be trained and authorized to safely energize, de-energize, ground, lockout/tagout circuits and equipment, and clear faults in accordance with established safety practices.
- Be trained in the proper care and use of protective equipment such as safety shoes, rubber gloves, hard hats, safety glasses, face shields, flash clothing, etc., in accordance with established safety practices.

For further information on workplace safety visit www.osha.gov.

Equipment Inspection

- Upon receipt of the equipment inspect the packaging and equipment for shipping damage.
- Carefully unpack the equipment and check for damaged parts, missing parts, or concealed damage that may have occurred during shipping. If any discrepancies are discovered, it should be noted with the carrier prior to accepting the shipment, if possible. File a claim with the carrier if necessary and immediately notify your Toshiba Sales Representative.
- **DO NOT** install the ASD if it is damaged or if it is missing any component(s).
- Ensure that the rated capacity and the model number specified on the nameplate conform to the order specifications.
- Modification of this equipment is dangerous and is to be performed by factory trained personnel. When modifications are required contact your Toshiba Sales Representative.
- Inspections may be required after moving equipment.
- Contact your Toshiba Sales Representative to report discrepancies or for assistance if required.

Handling and Storage

- Use proper lifting techniques when moving the ASD; including properly sizing up the load, getting assistance, and using a forklift if required.
- Store in a well-ventilated location and preferably in the original carton if the equipment will not be used upon receipt.
- Store in a cool, clean, and dry location. Avoid storage locations with extreme temperatures, rapid temperature changes, high humidity, moisture, dust, corrosive gases, or metal particles.
- The storage temperature range of the Q9 ASD is -13° to 149° F (-25° to 65° C).
- **DO NOT** store the unit in places that are exposed to outside weather conditions (i.e., wind, rain, snow, etc.).
- Store in an upright position.

Disposal

Never dispose of electrical components via incineration. Contact your state environmental agency for details on disposal of electrical components and packaging in your area.

Installation Precautions

Location and Ambient Requirements

- The Toshiba ASD is intended for permanent installations only.
- Installation should conform to the **2008 National Electrical Code — Article 110 (NEC)** (*Requirements For Electrical Installations*), all regulations of the **Occupational Safety and Health Administration**, and any other applicable national, regional, or industry codes and standards.
- Select a mounting location that is easily accessible, has adequate personnel working space, and adequate illumination for adjustment, inspection, and maintenance of the equipment (Refer to 2008 NEC Article 110-13).
- **DO NOT** mount the ASD in a location that would produce catastrophic results if it were to fall from its mounting location (Equipment damage or injury to personnel).
- **DO NOT** mount the ASD in a location that would allow it to be exposed to flammable chemicals or gases, water, solvents, or other fluids.
- Avoid installation in areas where vibration, heat, humidity, dust, fibers, metal particles, explosive/corrosive mists or gases, or sources of electrical noise are present.
- The installation location shall not be exposed to direct sunlight.
- Allow proper clearance spaces for installation. **DO NOT** obstruct the ventilation openings. Refer to the section titled [Installation and Connections on pg. 12](#) for further information on ventilation requirements.
- The ambient operating temperature range of the Q9 ASD is 14° to 104° F (-10° to 40° C).

Mounting Requirements

- Only [Qualified Personnel](#) should install this equipment.
- Install the unit in a secure and upright position in a well-ventilated area.
- As a minimum, the installation of the equipment should conform to the **2008 National Electrical Code — Article 110 (NEC)**, OSHA, as well as any other applicable national, regional, or industry codes and standards.
- Installation practices should conform to the latest revision of NFPA 70E Electrical Safety Requirements for Employee Workplaces.
- It is the responsibility of the ASD installer/maintenance personnel to ensure that the unit is installed into an enclosure that will protect personnel against electric shock.

Conductor Routing and Grounding



- Use separate metal conduits for routing the input power, output power, and control circuits.
- A separate ground cable should be run inside the conduit with the input power, output power, and control circuits.
- **DO NOT** connect **CC** to earth ground.
- Use **IICC** terminal as the return for the **V/I** (VI/II) input.
- Always ground the ASD to prevent electrical shock and to help reduce electrical noise.
- It is the responsibility of the ASD installer/maintenance personnel to provide proper grounding and branch circuit protection in accordance with the **2008 NEC** and any applicable local codes.

— **The Metal Of Conduit Is Not An Acceptable Ground** —

Grounding Capacitor Switch

The ASD is equipped with leak reduction capacitors which are used to reduce the EMI leakage via the 3-phase power-input circuit and for compliance with the **Electromagnetic Compatibility Directive** (EMC).

The effective value of the capacitor may be increased, reduced, or removed entirely via the **Selector Switch**, **Switching Bar**, or the **Switching Screw** — the type used is typeform-specific.

The **Grounding Capacitor Switch** allows the user to quickly change the value of the leakage-reduction capacitance of the 3-phase input circuit without the use of any tools.

See the section titled [Power Connection Requirements on pg. 15](#) for more on the [Grounding Capacitor](#).

See figures [4](#), [5](#), [6](#), and [7 on pg. 17](#) for an electrical depiction of the leakage-reduction functionality of the [Grounding Capacitor](#) and the methods used to set the capacitance value.

Power Connections



Contact With Energized Wiring Will Cause Severe Injury Or Loss Of Life.

- Turn off, lockout, and tag out all power sources before proceeding to connect the power wiring to the equipment.
- After ensuring that all power sources are turned off and isolated in accordance with established lockout/tag out procedures, connect the 3-phase power source wiring of the correct voltage to the correct input terminals and connect the output terminals to a motor of the correct voltage and type for the application (Refer to NEC Article 300 – Wiring Methods and Article 310 – Conductors For General Wiring). Size the branch circuit conductors in accordance with NEC Table 310.16.
- If multiple conductors are used in parallel for the input or output power and it is necessary to use separate conduits, each parallel set shall have its own conduit (i.e., place U1, V1, W1, and a ground wire in one conduit and U2, V2, W2 and a ground wire in another; refer to NEC Article 300.20 and Article 310.4). National and local electrical codes should be referenced if three or more power conductors are run in the same conduit (Refer to 2008 NEC Article 310 adjustment factors).
- **DO NOT** connect the 3-phase input power to the output of the ASD. This will damage the ASD and may cause injury to personnel.
- **DO NOT** connect resistors across terminals PA – PC or PO – PC. This may cause a fire.
- Ensure the correct phase sequence and the desired direction of motor rotation in the **Bypass** mode (If applicable).
- Turn the power on only after attaching and/or securing the front cover.

Protection

- Ensure that primary protection exists for the input wiring to the equipment. This protection must be able to interrupt the available fault current from the power line. The equipment may or may not be equipped with an input disconnect (Option).
- All cable entry openings must be sealed to reduce the risk of entry by vermin and to allow for maximum cooling efficiency.
- External dynamic braking resistors must be thermally protected.
- It is the responsibility of the ASD installer/maintenance personnel to setup the **Emergency Off** braking system of the ASD. The function of the **Emergency Off** braking function is to remove output power from the drive in the event of an emergency. A supplemental braking system may also be engaged in the event of an emergency. For further information on braking systems see parameters [F250](#) and [F304](#).

***Note:** A supplemental emergency stopping system should be used with the ASD. Emergency stopping should not be a task of the ASD alone.*

- Follow all warnings and precautions and do not exceed equipment ratings.

System Integration Precautions

The following precautions are provided as general guidelines for the setup of the ASD within the system.

- The Toshiba ASD is a general-purpose product. It is a system component only and the system design should take this into consideration. Please contact your Toshiba Sales Representative for application-specific information or for training support.
- The Toshiba ASD is part of a larger system and the safe operation of the ASD will depend upon observing certain precautions and performing proper system integration.
- Improperly designed or improperly installed system interlocks may render the motor unable to start or stop on command.
- The failure of external or ancillary components may cause intermittent system operation (i.e., the system may start the motor without warning).
- A detailed system analysis and job safety analysis should be performed by the systems designer and/or systems integrator before the installation of the ASD component. Contact your Toshiba Sales Representative for options availability and for application-specific system integration information if required.

Personnel Protection

- Installation, operation, and maintenance shall be performed by **Qualified Personnel Only**.
- A thorough understanding of the ASD will be required before the installation, operation, or maintenance of the ASD.



- Rotating machinery and live conductors can be hazardous and shall not come into contact with personnel. Personnel should be protected from all rotating machinery and electrical hazards at all times.
- Insulators, machine guards, and electrical safeguards may fail or be defeated by the purposeful or inadvertent actions of workers. Insulators, machine guards, and electrical safeguards are to be inspected (and tested where possible) at installation and periodically after installation for potential hazardous conditions.
- **DO NOT** allow personnel near rotating machinery. Warning signs to this effect shall be posted at or near the machinery.
- **DO NOT** allow personnel near electrical conductors. Contact with electrical conductors can be fatal. Warning signs to this effect shall be posted at or near the hazard.
- Personal protection equipment shall be provided and used to protect employees from any hazards inherent to system operation.

System Setup Requirements

- When using the ASD as an integral part of a larger system, it is the responsibility of the ASD installer/maintenance personnel to ensure that there is a fail-safe in place (i.e., an arrangement designed to switch the system to a safe condition if there is a fault or failure).
- System safety features should be employed and designed into the integrated system in a manner such that system operation, even in the event of system failure, will not cause harm or result in system damage or injury to personnel (i.e., E-Off, Auto-Restart settings, System Interlocks, etc.).
- The programming setup and system configuration of the ASD may allow it to start the motor unexpectedly. A familiarity with the Auto-Restart settings are a requirement to use this product.
- Improperly designed or improperly installed system interlocks may render the motor unable to start or stop on command.
- **DO NOT** install power factor improvement/correction capacitors or surge absorbers on the output of the ASD.
- Use of the built-in system protective features is highly recommended (i.e., E-Off, Overload Protection, etc.).
- The operating controls and system status indicators should be clearly readable and positioned where the operator can see them without obstruction.
- Additional warnings and notifications shall be posted at the equipment installation location as deemed required by [Qualified Personnel](#).



CAUTION

- The Dynamic Braking function is **NOT** used with the Q9 ASD.
- **DO NOT** attempt to configure or connect the DBR function to the Q9 ASD.
- Attempts to configure or adapt the ASD to use the Dynamic Braking function may result in system damage or injury to personnel.
- If a secondary magnetic contactor (MC) or an ASD output disconnect is used between the ASD and the load, it should be interlocked to halt the ASD before the secondary contact opens. If the output contactor is used for bypass operation, it must be interlocked such that commercial power is never applied to the ASD output terminals (U, V, or W).
- When using an ASD output disconnect, the ASD and the motor must be stopped before the disconnect is either opened or closed. Closing the output disconnect while the 3-phase output of the ASD is active may result in equipment damage or injury to personnel.

Operational and Maintenance Precautions



- Turn off, lockout, and tag out the main power, the control power, and instrumentation connections before inspecting or servicing the drive, connecting or disconnecting the power wiring to the equipment, or opening the door of the enclosure.
- The capacitors of the ASD maintain a residual charge for a period of time after turning off the ASD. The required time for each ASD typeform is indicated with a cabinet label and a **Charge LED** (Shown for smaller ASDs in [Figure 2 on pg. 14](#); LED is located on the front panel of larger ASDs). Wait at least the minimum time indicated on the enclosure-mounted label and ensure that the **Charge LED** has gone out before opening the door of the ASD once the ASD power has been turned off.
- Turn the power on only after attaching (or closing) the front cover and **DO NOT** remove or open the front cover of the ASD when the power is on.
- **DO NOT** attempt to disassemble, modify, or repair the ASD. Call your Toshiba Sales Representative for repair information.
- **DO NOT** place any objects inside of the ASD.
- If the ASD should emit smoke, or an unusual odor or sound, turn the power off immediately.
- The heat sink and other components may become extremely hot to the touch. Allow the unit to cool before coming in contact with these items.
- Remove power from the ASD during extended periods of non-use.
- The system should be inspected periodically for damaged or improperly functioning parts, cleanliness, and to ensure that the connectors are tightened securely.

Motor Characteristics

Listed below are some variable speed AC motor control concepts with which the user of the **Q9 Adjustable Speed Drive** should become familiar.

Motor Autotuning

Motor production methods may cause minor differences in motor operation. The negative effects of these differences may be minimized by using the **Autotune** feature of the ASD. **Autotuning** is a function of the ASD that measures several parameters of the connected motor and places these readings in a stored table. The software uses the information in the table to help optimize the response of the ASD to application-specific load and operational requirements. The **Autotuning** function may be enabled for automatic tuning, configured manually at **F400**, or disabled.

The measured parameters include the rotor resistance, the stator resistance, the required excitation inductance, rotational inertia values, and leakage inductance values.

Pulse Width Modulation Operation

The ASD uses sinusoidal **Pulse Width Modulation** (PWM) control. The output current waveform generated by the ASD approaches that of a perfect sine wave; however, the output waveform is slightly distorted. For this reason, the motor may produce more heat, noise, and vibration when operated by an ASD, rather than directly from commercial power.

Low Speed Operation

Operating a general-purpose motor at lower speeds may cause a decrease in the cooling ability of the motor. Reducing the torque requirement of the motor at lower speeds will decrease the generated heat at lower speeds.

When the motor is to be operated at low speed (less than 50% of full speed) and at the rated torque continuously, a Toshiba VF motor (designed for use in conjunction with an ASD) is recommended.

Overload Protection Adjustment

The ASD software monitors the output current of the system and determines when an overload condition occurs. The overload current level is a percentage of the rating of the motor. This function protects the motor from overload.

The default setting for the overload detection circuit is set to the maximum rated current of the ASD at the factory. This setting will have to be adjusted to match the rating of the motor with which the ASD is to be used. To change the overload reference level, see [Electronic Thermal Protection 1 on pg. 41](#).

Operation Above 60 Hz

A motor produces more noise and vibration when it is operated at frequencies above 60 Hz. Also, when operating a motor above 60 Hz, the rated limit of the motor or its bearings may be exceeded; this may void the motor warranty.

Contact the motor manufacturer for additional information before operating the motor above 60 Hz.

Power Factor Correction

DO NOT connect a power factor correction capacitor or surge absorber to the output of the ASD.

If the ASD is used with a motor that is equipped with a capacitor for power factor correction, remove the capacitor from the motor.

Connecting either of these devices to the output of the ASD may cause the ASD to malfunction and trip, or the output device may cause an over-current condition resulting in damage to the device or the ASD.

Light Load Conditions

When a motor is operated under a continuous light load (i.e., at a load of less than 50% of its rated capacity) or it drives a load which produces a very small amount of inertia, it may become unstable and produce abnormal vibration or trips because of an over-current condition. In such a case, the carrier frequency may be lowered to compensate for this undesirable condition (see Program ⇒ Special Controls ⇒ [PWM Carrier Frequency](#)).

Note: When operating in the **Vector Control** mode the carrier frequency should be set to 2.2 kHz or above.

Motor/Load Combinations

When the ASD is used in combination with one of the following motors or loads, it may result in unstable operation.

- A motor with a rated capacity that exceeds the motor capacity recommended for the ASD.
- An explosion-proof motor.

When using the ASD with an explosion-proof motor or other special motor types, lower the carrier frequency to stabilize the operation. **DO NOT** set the carrier frequency below 2.2 kHz if operating the system in the vector control mode.

Note: When operating in the **Vector Control** mode the carrier frequency should be set to 2.2 kHz or above.

If the motor being used is coupled to a load that has a large backlash or if coupled to a reciprocating load, use one of the following procedures to stabilize motor operation.

- Adjust the **S-Pattern** acceleration/deceleration setting,
- If operating in the **Vector** control mode, adjust the response time, or
- Switch to the **Constant Torque** control mode.

Motor Braking

The motor may continue to rotate and coast to a stop after being shut off due to the inertia of the load. If an immediate stop is required, a braking system should be used. For further information on braking systems see [DC Injection Braking Current on pg. 99](#).

Installation and Connections

The ASD may be set up initially by performing a few simple configuration settings. To operate properly, the ASD must be securely mounted and connected to a power source (3-phase AC input at the R/L1, S/L2, and T/L3 terminals). The control terminals of the ASD may be used by connecting the terminals of the **Terminal Board** (P/N 072314P903) to the proper sensors or signal input sources (See the section titled *I/O and Control* on pg. 19 and *Figure 9* on pg. 22).

System performance may be further enhanced by assigning a function to the output terminals of the **Terminal Board** and connecting the terminals to the proper indicators or actuators (LEDs, relays, contactors, etc.).

Note: The optional Q9 ASD interface boards may be used to expand the I/O functionality of the ASD.

Installation Notes



CAUTION

When a brake-equipped motor is connected to the ASD, it is possible that the brake may not release at startup because of insufficient voltage. To avoid this, **DO NOT** connect the brake or the brake contactor to the output of the ASD.

If an output contactor is used for bypass operation, it must be interlocked such that commercial power is never applied to the output terminals of the ASD (U/T1, V/T2, and W/T3).

DO NOT apply commercial power to the ASD output terminals **U/T1**, **V/T2**, and **W/T3**.

If a secondary magnetic contactor (MC) is used between the output of the ASD and the motor, it should be interlocked such that the **ST – CC** connection is disconnected before the output contactor is opened.

DO NOT open and then close a secondary magnetic contactor between the ASD and the motor unless the ASD is off and the motor is not rotating.

Note: Re-application of power via a secondary contact while the Q9 ASD is on or while the motor is still turning may cause ASD damage.

The Q9 ASD input voltage should remain within 10% of the specified input voltage range. Input voltages approaching the upper or lower-limit settings may require that the over-voltage and under-voltage stall protection level parameters be adjusted. Voltages outside of the permissible tolerance should be avoided.

The frequency of the input power should be ± 2 Hz of the specified input frequency.

DO NOT use an ASD with a motor that has a power rating higher than the rated output of the ASD.

The Q9 ASD is designed to operate NEMA B motors. Consult with your Toshiba Sales Representative before using the ASD for special applications such as with an explosion-proof motor or applications with a piston load.


Disconnect the ASD from the motor before megging or applying a bypass voltage to the motor.

Interface problems may occur when an ASD is used in conjunction with some types of process controllers. Signal isolation may be required to prevent controller and/or ASD malfunction (Contact your Toshiba Sales Representative or the process controller manufacturer for additional information about compatibility and signal isolation).

Use caution when setting the output frequency. Over-speeding a motor decreases the ability to deliver torque and may result in damage to the motor and/or the driven equipment.

Not all ASDs are equipped with internal primary power input fuses (HP dependent). When connecting two or more drives that have no internal fuse to the same power line as shown in [Figure 1](#), it will be necessary to select a circuit-breaking configuration that will ensure that if a short circuit occurs in ASD 1, only MCCB2 trips, not MCCB1. If it is not feasible to use this configuration, insert a fuse between MCCB2 and ASD 1.

Figure 1. Typical Circuit Breaker Configuration.

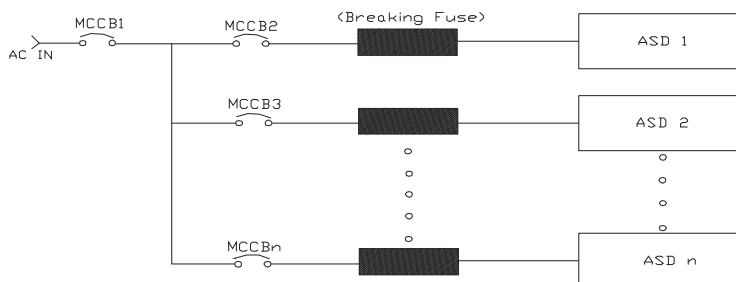

Mounting the ASD

CAUTION

— The following thermal specifications apply to the 230- and 460-volt ASDs ONLY —

Install the unit securely in a well ventilated area that is out of direct sunlight.

The process of converting AC to DC, and then back to AC produces heat. During normal ASD operation, up to 5% of the input energy to the ASD may be dissipated as heat. If installing the ASD in a cabinet, ensure that there is adequate ventilation.

DO NOT operate the ASD with the enclosure door open.

The ambient operating temperature rating of the Q9 ASD is 14° to 104° F (-10° to 40° C).

When installing adjacent ASDs horizontally Toshiba recommends at least 5 cm of space between adjacent units. However, horizontally mounted ASDs may be installed side-by-side with no space in between the adjacent units — side-by-side installations require that the top cover be removed from each ASD.

For 150 HP ASDs and above, a minimum of 50 cm of space is required above and below adjacent units and any obstruction. This space is the recommended minimum space requirement for the ASD and ensures that adequate ventilation is provided for each unit. More space will provide a better environment for cooling (See the section titled [Enclosure Dimensions](#) on [pg. 204](#) for additional information on mounting space requirements).

Note: Ensure that the ventilation openings are not obstructed.

Connecting the ASD



Refer to the section titled [Installation Precautions](#) on pg. 4 and the section titled [Lead Length Specifications](#) on pg. 18 before connecting the ASD and the motor to electrical power.

Power Connections



Contact With 3-Phase Input/Output Terminals May Cause Electrical Shock Resulting In Injury Or Loss Of Life.

See [Figure 20](#) on pg. 24 for a system I/O connectivity schematic.

An inductor (DCL) may be connected across the **PO** and **PA/+** terminals to provide additional filtering. When not used, a jumper must be connected across these terminals (See [Figure 20](#) on pg. 24).

PA/+ and **PB** are used for the DBR connection. The DBR function is not used on the Q9 ASD.


PC/- is the negative terminal of the DC bus.

R/L1, **S/L2**, and **T/L3** are the 3-phase input supply terminals for the ASD.

U/T1, **V/T2**, and **W/T3** are the output terminals of the ASD that connect to the motor.

The location of the **Charge LED** for the smaller typeform ASD is provided in [Figure 2](#). The **Charge LED** is located on the front door of the enclosure of the larger ASDs.

Figure 2. Typical Q9 ASD input/output terminals and the [Grounding Capacitor Switch](#).

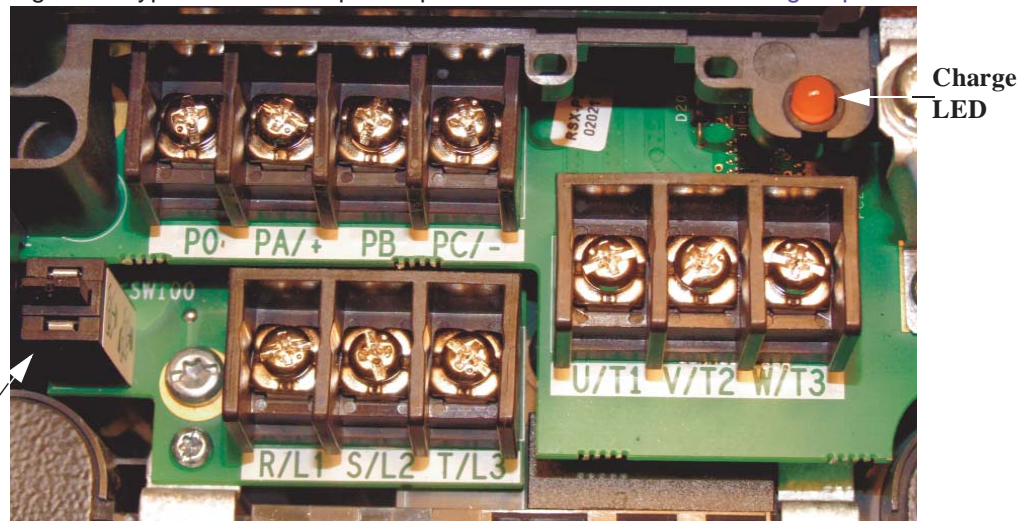

Grounding Capacitor Switch — Pull for **Small** capacitance/push for **Large** capacitance.

Power Connection Requirements

Connect the 3-phase input power to the input terminals of the ASD at **R/L1**, **S/L2**, and **T/L3** (see [Figure 3](#) for the typical electrical connection scheme). Connect the output of the ASD to the motor from the ASD terminals **U/T1**, **V/T2**, and **W/T3**. The input and output conductors and terminal lugs used shall be in accordance with the requirements listed in the section titled [Current/Voltage Specifications](#) on pg. 211.

If multiple conductors are used in parallel for the input or output power and it is necessary to use separate conduits, each parallel set shall have its own conduit and not share its conduit with other parallel sets (i.e., place U1, V1, and W1 in one conduit and U2, V2, and W2 in another — refer to NEC Article 300.20 and Article 310.4). National and local electrical codes should be referenced if three or more power conductors are run in the same conduit (Refer to 2008 NEC Article 310 adjustment factors).

Note: *National and local codes should be referenced when running more than three conductors in the same conduit.*


Install a molded case circuit breaker (MCCB) or fuse between the 3-phase power source and the ASD in accordance with the fault current setting of the ASD and **2008 NEC Article 430**.

The ASD is designed and tested to comply with UL Standard 508C. Modifications to the ASD system or failure to comply with the short circuit protection requirements outlined in this manual may disqualify the UL rating. See [Table 19](#) on pg. 215 for typeform-specific short circuit protection recommendations.

As a minimum, the installation of the ASD shall conform to **2008 NEC Article 110**, the **Occupational Safety and Health Administration** requirements, and to any other local and regional industry codes and standards.

Note: *In the event that the motor rotates in the wrong direction when powered up, reverse any two of the three ASD output power leads connected to the motor.*

Figure 3. Q9 ASD/Motor Typical Connection Diagram.

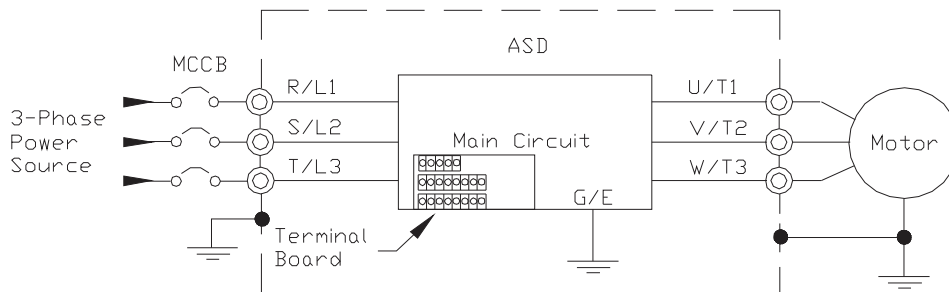

System Grounding

Proper grounding helps to prevent electrical shock and to reduce electrical noise. The Q9 ASD is designed to be grounded in accordance with **Article 250** of the **2008 NEC** or **Section 10/Part One** of the **Canadian Electrical Code (CEC)**.

The grounding conductor shall be sized in accordance with **Article 250-122** of the **NEC** or **Part One-Table 6** of the **CEC**.

— The Metal Of Conduit Is Not An Acceptable Ground —

The input, output, and control lines of the system shall be run in separate metal conduits and each shall have its own ground conductor.

ASDs produce high-frequency noise — steps must be taken during installation to avoid the negative effects of noise. Listed below are some examples of measures that will help to combat noise problems.

- **DO NOT** install the input power and output power wires in the same duct or in parallel with each other, and do not bind them together.
- **DO NOT** install the input/output power wires and the wires of the control circuit in the same duct or in parallel with each other, and do not bind them together.
- Use shielded wires or twisted wires for the control circuits.
- Ensure that the grounding terminals (G/E) of the ASD are securely connected to ground.
- Connect a surge suppressor to every electromagnetic contactor and every relay installed near the ASD.
- Install noise filters as required.

Grounding Capacitor

The **Grounding Capacitor** plays a role in minimizing the effects of leakage current through the ASD system and through ground paths to other systems. Leakage current may cause the improper operation of earth-leakage current breakers, leakage-current relays, ground relays, fire alarms, and other sensors — and it may cause superimposed noise on CRT screens.

The **Grounding Capacitor Switch** allows the user to quickly change the value of the leakage-reduction capacitance of the 3-phase input circuit. See figures 4, 5, 6, and 7 on pg. 17 for an electrical depiction of the leakage-reduction functionality and the methods used to change the capacitance value. The method used is typeform-specific.

If using a 460-volt 5 HP ASD or a 460-volt ASD that is in the range of 7.5 HP to 25 HP, and the **U/T1**, **V/T2**, and **W/T3** connections to the motor are 100 meters or more in length, the ASD **Carrier Frequency** must be set to 4 kHz or less when activating or deactivating the **Grounding Capacitor Switch**. ASD overheating may occur if the **Carrier Frequency** is set above 4 kHz when activating or deactivating the **Grounding Capacitor Switch**.

See pg. 5 for more information on the **Grounding Capacitor Switch** and pg. 14 for the location.

Figure 4. The **Grounding Capacitor Switch** is used on typeforms — **200-volt** 0.5 HP to 10 HP and the 25 and 30 HP/**460-volt** 1.0 HP to 250 HP.
The value may be set to **Maximum** (default setting) or to **Zero** by pushing or pulling the switch actuator, respectively.

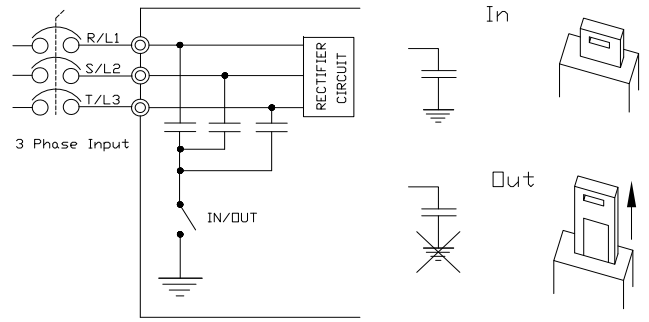


Figure 5. The **Grounding Capacitor Switch** is used on typeforms — **200-volt** 15 HP to 20 HP and the 40 HP to 60 HP/**460-volt** 30 HP to 100 HP.
The value may be set to **Large** (default setting) or **Small** by pushing or pulling the switch actuator, respectively.

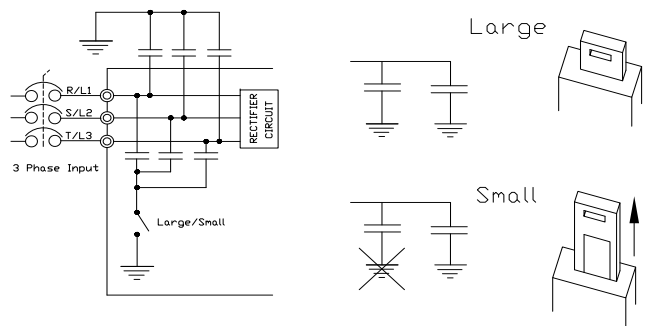


Figure 6. The **Grounding Capacitor Bar** is used on typeforms — **200-volt** 75 HP and the 100 HP/**460-volt** 125 HP and the 150 HP. The value may be set to **Large** or **Small** (default setting) by connecting or disconnecting the switching bar, respectively.


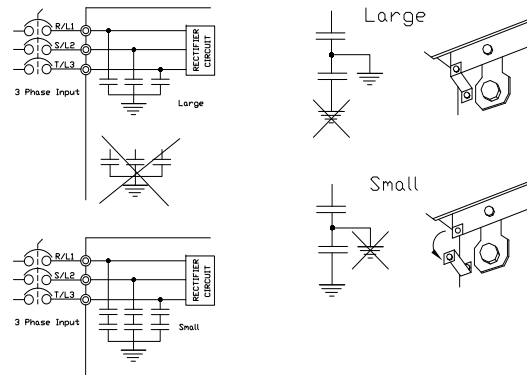


Figure 7. The **Grounding Capacitor Screw** is used on typeforms — **460-volt** 175 HP and above.
The value may be set to **Large** or **Small** (default setting) by placing the screw in the **A** position or by placing the screw in the **B** position, respectively.

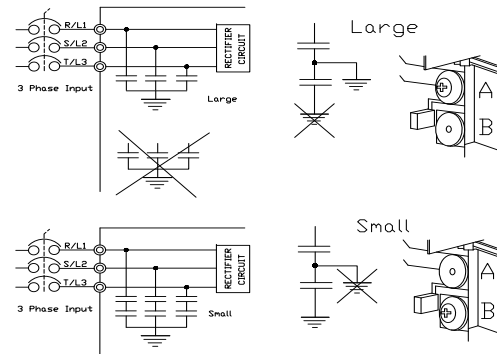

Lead Length Specifications

Adhere to the NEC and any local codes during the installation of ASD/motor systems. Excessive lead lengths may adversely effect the performance of the motor. Special cables are not required. Lead lengths from the ASD to the motor in excess of those listed in [Table 1](#) may require filters to be added to the output of the ASD. [Table 1](#) lists the suggested maximum lead lengths for the listed motor voltages.

Table 1. Lead Length Specifications.

Model	PWM Carrier Frequency	NEMA MG-1-1998 Section IV Part 31 Compliant Motors ²
230 Volt	All	1000 feet
460 Volt	< 5 kHz	600 feet
	≥ 5 kHz	300 feet

Note: *Contact the Toshiba Customer Support Center for application assistance when using lead lengths in excess of those listed.*

Exceeding the peak voltage rating or the allowable thermal rise time of the motor insulation will reduce the life expectancy of the motor.

*When operating in the **Vector Control** mode the carrier frequency should be set to 2.2 kHz or above.*

I/O and Control

The ASD can be controlled by several input types and combinations thereof, as well as operate within a wide range of output frequency and voltage levels. This section discusses the ASD control methods and supported I/O functions.

The **Terminal Board** supports discrete and analog I/O functions and is shown in [Figure 9 on pg. 22](#). [Table 2](#) lists the names, descriptions, and default settings (of programmable terminals) of the input and output terminals of the **Terminal Board**.

Note: To use the input lines of the **Terminal Board** to provide **Run** commands the **Command Mode** setting must be set to **Terminal Block**.

[Figure 20 on pg. 24](#) shows the typical connection diagram for the Q9 ASD system.

Table 2. Terminal Board Terminal Names and Functions.

Terminal Name	Input/Output	Function (Default Setting If Programmable) (See Terminal Descriptions on pg. 20)	Circuit Config.
ST	Discrete Input Connect to CC to activate (Sink mode).	Standby — Multifunctional programmable discrete input. Activation required for normal ASD operation.	Figure 10 on pg. 23.
RES		Reset — Multifunctional programmable discrete input. Activation resets ASD when Faulted — ignored when not Faulted.	
F		Forward — Multifunctional programmable discrete input.	
R		Reverse — Multifunctional programmable discrete input.	
S1		Fire Speed — Multifunctional programmable discrete input.	
S2		Preset Speed 2 — Multifunctional programmable discrete input.	
S3		Damper Feedback — Multifunctional programmable discrete input.	
S4		Emergency Off — Multifunctional programmable discrete input.	
O1A/B (OUT1)	Switched Output	Low Speed — Multifunctional programmable discrete output.	Figure 16 on pg. 23.
O2A/B (OUT2)		Reach Frequency — Multifunctional programmable discrete output.	
FLA		Fault relay (N.O.).	Figure 19 on pg. 23.
FLB		Fault relay (N.C.).	
FLC	Fault relay (Common).		
RR	Analog Input	Frequency Mode 1 — Multifunctional programmable analog input. (0.0 to 10 volt input — 0 Hz to Maximum Frequency).	Figure 11 on pg. 23.
RX		Unassigned — Multifunctional programmable analog input (-10 to +10 VDC input — Unassigned).	Figure 12 on pg. 23.
V/I (Select V or I via SW301)		Unassigned — V — Multifunctional programmable isolated analog voltage input (0 to 10 VDC input). Frequency Mode 2 — I (Default setting) — Multifunctional programmable isolated analog current input (4 [0] to 20 mADC input — 0 Hz to Maximum Frequency).	Figure 13 on pg. 23.
AM	Analog Output	Output Current — Current output that is proportional to the output current of the ASD or to the magnitude of the function assigned to this terminal (See Table 6 on pg. 188).	Figure 18 on pg. 23
FM		Output Frequency — Current or Voltage output that is proportional to the output frequency of the ASD or to the magnitude of the function assigned to this terminal (See Table 6 on pg. 188). Select Current or Voltage at F681.	
SU+	DC Input	Externally-supplied 24 VDC backup control power (1.1 A max.).	
P24	DC Output	24 VDC (200 mA max.) output.	Figure 14 on pg. 23.
PP		10.0 VDC (10 mA max.) voltage source for the external potentiometer.	Figure 15 on pg. 23.
FP	Pulsed Output	Output Frequency — Multifunctional programmable output pulse train of a frequency based on the output frequency (See Table 6 on pg. 188).	Figure 17 on pg. 23.
IICC	—	Return for the V/I input terminal.	DO NOT connect to Earth Gnd or to each other.
CCA	—	Return for the RR, RX, P24, and the PP terminals.	
CC	—	Return for the AM, FM, SU+, and the discrete input terminal.	

Terminal Descriptions

Note: The programmable terminal assignments may be accessed and changed from their default settings as mapped on [pg. 41](#) or via the **Direct Access** method: Program ⇒ Direct Access ⇒ **Applicable Parameter Number**. See the section titled [Program Mode Menu Navigation on pg. 41](#) for the applicable **Direct Access** parameter numbers.

For further information on terminal assignments and default setting changes, see the sections titled [Default Setting Changes on pg. 57](#) and [Input Terminals on pg. 44](#).

Note: See the section titled [Cable/Terminal Specifications on pg. 213](#) for the Q9 ASD conductor and terminal electrical specifications.

Note: Programmable terminals will not retain their settings indefinitely in the event of a power loss. Connect an external +24 VDC supply to the **SU+** terminal to retain the programmable settings in the event of Control Power loss (See [Figure 20 on pg. 24](#)).

ST — The default setting for this terminal is the **Standby** mode controller. As the default setting, this terminal must be activated for normal system operation. The **ST** terminal is activated by connecting **CC** to this terminal (Sink mode). When deactivated, **OFF** is displayed on the **Frequency Command** screen. This input terminal may be programmed to any of the functions listed in [Table 4 on pg. 185](#) (See [F113](#)).

RES — The default setting for this terminal is **Reset**. The **RES** terminal is activated by connecting **CC** to this terminal (Sink mode). A momentary connection to **CC** resets the ASD and any fault indications from the display. **Reset** is effective when faulted only. This input terminal may be programmed to any of the functions listed in [Table 4 on pg. 185](#) (See [F114](#)).

F — The default setting for this terminal is **Forward** run command. The **F** terminal is activated by connecting **CC** to this terminal (Sink mode). This input terminal may be programmed to any of the functions listed in [Table 4 on pg. 185](#) (See [F111](#)).

R — The default setting for this terminal is **Reverse** run command. The **R** terminal is activated by connecting **CC** to this terminal (Sink mode). This input terminal may be programmed to any of the functions listed in [Table 4 on pg. 185](#) (See [F112](#)).

S1 — The default setting for this terminal is **Fire Speed**. The function of this input as **Fire Speed** is to run the motor at the **Preset Speed #1** setting upon activation. This terminal may be activated by connecting **CC** to this terminal (Sink mode) and may be initiated by a fire alarm signal or fire/smoke sensing device. This input terminal may be programmed to any of the functions listed in [Table 4 on pg. 185](#) (See [F115](#)).

S2 — The default setting for this terminal is **Preset Speed 2**. The function of this input as **Preset Speed 2** is to run the motor at the **Preset Speed 2** setting upon activation. The terminal may be activated by connecting **CC** to this terminal (Sink mode). This input terminal may be programmed to any of the functions listed in [Table 4 on pg. 185](#) (See [F116](#)).

S3 — The default setting for this terminal is Damper Feedback. The function of this input as Damper Feedback is to complete the requirements for normal system operation as described in [Table 4 on pg. 185](#). The **S3** terminal is activated by connecting **CC** to this terminal (Sink mode). This input terminal may be programmed to any of the functions listed in [Table 4 on pg. 185](#) (See [F117](#)).

S4 — The default setting for this terminal is **Emergency Off** (Normally Closed). The **Emergency Off** terminal is activated by opening the connection to **CC** (Sink mode). The function of this input as **Emergency Off** is to remove power from the output of the ASD and may apply a supplemental braking system using the method selected at the **Emg Off Mode** selection parameter (See [F603](#)). This input terminal may be programmed to any of the functions listed in [Table 4 on pg. 185](#) (See [F118](#)).

RR — The default function assigned to this terminal is the **Frequency Mode 1** setting. The **RR** terminal accepts a 0 – 10 VDC input signal that is used to control the function assigned to this terminal. This input terminal may be programmed to control the speed or torque of the motor via an amplitude setting or regulate by setting a limit. The gain and bias of this terminal may be adjusted for application-specific suitability (See F210 – F215). See Figure 20 on pg. 24 for an electrical depiction of the **RR** terminal. This terminal references **CCA**.

RX — The **RX** terminal accepts a ± 10 VDC analog input signal and controls the function assigned to this terminal. This input terminal may be programmed to control the speed, torque, or direction of the motor. It may also be used to regulate (limit) the speed or torque of the motor by setting a limit. The gain and bias of this terminal may be adjusted for application-specific suitability (See F216 – F221). See Figure 20 on pg. 24 for an electrical depiction of the **RX** terminal.

V/I — The V/I terminal has the dual function of being able to receive an input voltage or current. The function as a voltage input to receive a 0 – 10 VDC input signal. The function as a current input is to receive a 0 – 20 mA input signal. Using either input type, the function is to control the 0.0 – Maximum Frequency output or the 0.0 to 250% torque output of the ASD. This is an isolated input terminal. This terminal may be programmed to control the speed or torque of the motor and cannot process both input types simultaneously. SW301 must be set to V or I to receive a voltage or current, respectively (See Figure 9 on pg. 22). Terminal scaling is accomplished via F201 – F206. The gain and bias of this terminal may be adjusted for application-specific suitability (See F470 and F471).

SU+ — Externally supplied +24 VDC $\pm 10\%$ at 1.1 A (minimum) backup control power. This terminal references **CC**.

P24 — +24 VDC at 200 mA power supply for customer use. This terminal references **CCA**.

PP — The function of output **PP** is to provide a 10 VDC/10 mADC output that may be divided using a potentiometer. The tapped voltage is applied to the **RR** input to provide manual control of the **RR** programmed function. This terminal references **CCA**.

O1A/B (OUT1A/B) — The default function assigned to this terminal is **Output Low Speed**. This output may be programmed to provide an indication (open or closed) that any one of the functions listed in Table 7 on pg. 189 has occurred or is active. This function may be used to signal external equipment (e.g., activate the brake) (See F130). The **OUT1** terminal is rated at 2 A/120 VAC and 2 A/30 VDC.

O2A/B (OUT2A/B) — The default function assigned to this terminal is **ACC/DEC Complete**. This output may be programmed to provide an indication (open or closed) that any one of the functions listed in Table 7 on pg. 189 has occurred or is active. This function may be used to signal external equipment (e.g., activate the brake) (See F131). The **OUT2** terminal is rated at 2A/120 VAC and 2A/30 VDC.

FP — The default function assigned to this open collector output terminal is **Output Frequency**. This output terminal produces an output pulse train that has a frequency which is proportional to the magnitude of the **Output Frequency** (or the function assigned to this terminal). This terminal may be programmed to provide an output pulse rate that is proportional to the magnitude of the user-selected item from Table 6 on pg. 188. For further information on this terminal see F676 on pg. 143.

AM — The default function assigned to this output terminal is **Output Current**. This output terminal produces an output current that is proportional to the magnitude of the **Output Current** of the Q9 ASD (or the function assigned to this terminal). The available assignments for this output terminal are listed in Table 6 on pg. 188. For further information on this terminal see F670 on pg. 141.

FM — This output terminal produces an output current or voltage that is proportional to the output frequency of the ASD or of the magnitude of the function assigned to this terminal. The available assignments for this output terminal are listed in Table 6 on pg. 188. For further information on this terminal see F005 on pg. 61. The Voltage/Current output selection is performed at F681.

FLA — One of two normally-closed contacts that, under user-defined conditions, connect to **FLC**.

FLB — One of two normally-open contacts that, under user-defined conditions, connect to **FLC**.

FLC — **FLC** is the common leg of a single-pole double-throw form C relay. The **FL** relay is the **Fault Relay** by default, but may be programmed to any of the selections of [Table 7](#) on [pg. 189](#). For further information on this terminal see [F132](#) and [Figure 8](#).

Note: The **FLA**, **FLB**, and **FLC** contacts are rated at 2A/120 VAC and 2A/30 VDC.

Figure 8.FLA, FLB, and FLC Switching Contacts Shown in the Normal Operating Condition.

Note: The relay is shown in the normal operating condition. During a **faulted** condition the relay connection is **FLC-to-FLA**.





Figure 9. Terminal Board.

CAUTION

Ensure that the ground screw is securely in place to prevent arcing, intermittent operation, or system

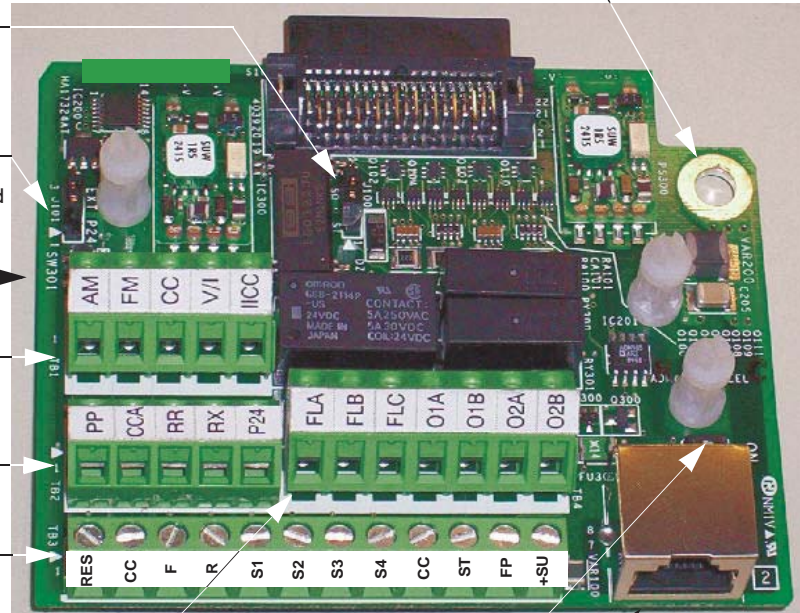

J100
1 to 2 = Sink
2 to 3 = Source

J101 (24 V)
1 to 2 = System Supplied
2 to 3 = Ext. Supplied

SW301
V/I Switch

TB1

TB2

TB3

TB4

SW200
Half/Full Duplex Switch

S4
RS485 4-Wire Communication

See [Figure 20](#) on [pg. 24](#) for more information on the Terminal Board connections.

See the section titled [Terminal Descriptions](#) on [pg. 20](#) for terminal descriptions.

See the section titled [Cable/Terminal Specifications](#) on [pg. 213](#) for information on the proper cable/terminal sizes and torque specifications when making **Terminal Board** connections.


I/O Circuit Configurations

<p>Figure 10. Discrete Input.</p> <p>Input CC or 24 VDC 5 mA MAX.</p> <p>J100 Source 3 2 1 Sink</p> <p>To Control Board</p>	<p>Figure 11. RR Input.</p> <p>30kΩ Input Impedance</p> <p>15kΩ</p> <p>15kΩ</p> <p>0.047 μF</p> <p>P5</p> <p>CCA</p> <p>Use the CCA terminal as the RR signal return.</p>
<p>Figure 12. RX Input.</p> <p>30kΩ Input Impedance</p> <p>15kΩ</p> <p>P15</p> <p>7kΩ</p> <p>CCA</p> <p>Use the CCA terminal as the RX signal return.</p>	<p>Figure 13. V/I Isolated Input.</p> <p>256.7 kΩ Input Impedance</p> <p>I (Current)</p> <p>V (Voltage)</p> <p>SW301</p> <p>Setting</p> <p>29.7 kΩ Input Impedance</p> <p>P15C</p> <p>P15A</p> <p>To Cont. Board</p> <p>N15C</p> <p>N15A</p> <p>Use the IICC terminal as the V/I signal return.</p>
<p>Figure 14. P24 Output.</p> <p>Output</p> <p>24 VDC 200 mA Max.</p> <p>0.047μF</p> <p>J101 1 (P24) 2 3 (EXT)</p> <p>Current Limiter</p> <p>P24</p> <p>CCA</p>	<p>Figure 15. PP Output.</p> <p>10 VDC (output)</p> <p>10 VDC 10 mA Max.</p> <p>0.047 μf</p> <p>Voltage Regulator</p> <p>P15</p> <p>CCA</p> <p>Use the CCA terminal as the PP signal return.</p>
<p>Figure 16. OUT1/OUT2 Output.</p> <p>01A/02A 2A/120VAC 2A/30VDC</p> <p>01B/02B</p> <p>OUT1/OUT2</p> <p>P24</p> <p>Programmable</p>	<p>Figure 17. FP Output.</p> <p>1 to 43.2 KHZ 50 mA max.</p> <p>P24</p> <p>Programmable</p> <p>4.7K</p> <p>4.7K</p> <p>4.7K</p>
<p>Figure 18. AM/FM Output.</p> <p>Output</p> <p>AM 0-1 mA or 0-7.5 VDC (see F670)</p> <p>FM 0-20 mA or 0-10 VDC (see F681)</p> <p>0.1 μF</p> <p>Low Pass Filter Circuit</p> <p>AM = 100Ω FM = 68Ω (0-20mA) 120Ω (0-10VDC)</p> <p>P24</p> <p>Programmable</p>	<p>Figure 19. Fault Relay (shown not faulted).</p> <p>FLA</p> <p>FLB</p> <p>FLC</p> <p>2A/120VAC 2A/30VDC</p> <p>P24</p> <p>Programmable</p>

Typical Connection Diagram

Figure 20. The Q9 ASD Typical Connection Diagram.

Note: When connecting multiple wires to any of ASD terminals, do not connect a solid wire and a stranded wire to the same terminal.

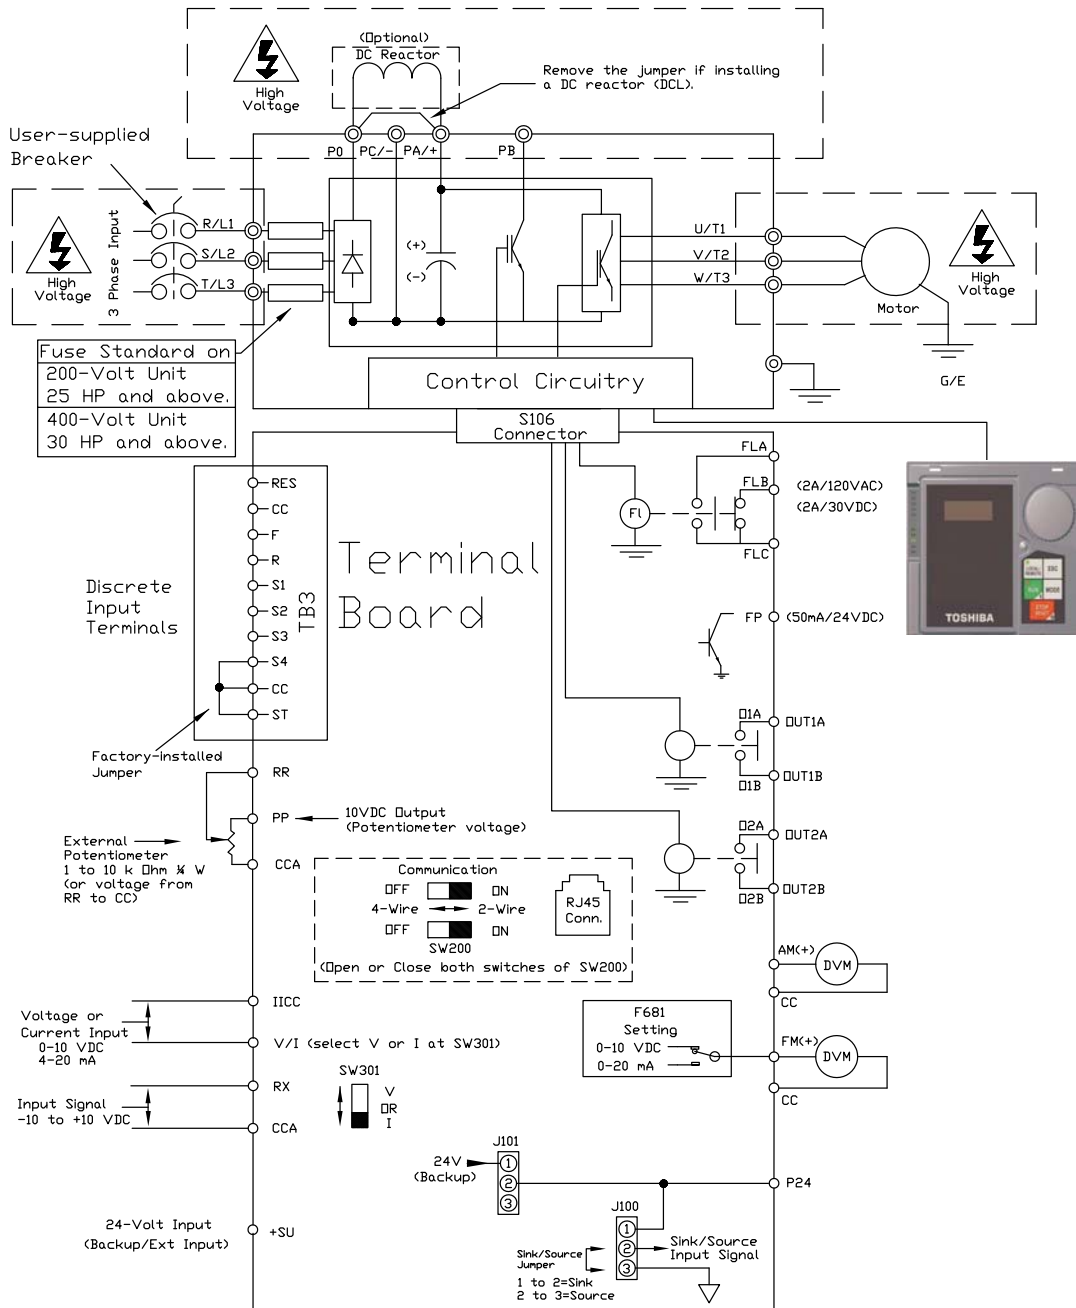

Note: The AM, FM, and the +SU analog terminals are referenced to CC.

The RR, RX, P24, and the PP analog terminals are referenced to CCA.

The isolated V/I analog terminal references IICC.

Startup and Test

Before turning on the ASD ensure that:

- The enclosure door is closed or reattached, and secure.
- **R/L1**, **S/L2**, and **T/L3** are connected to the 3-phase input power.
- **U/T1**, **V/T2**, and **W/T3** are connected to the motor.
- The 3-phase input voltage is within the specified tolerance.
- There are no shorts and all grounds are secure.
- All personnel are at a safe distance away from the motor and/or the motor-driven equipment.

Electronic Operator Interface

The Q9 ASD **Electronic Operator Interface** (EOI) is comprised of an LCD screen, two LED screens, a rotary encoder, and five keys. These items are shown on [pg. 27](#).

EOI Operation

The **EOI** is the primary input/output device for the user. The **EOI** may be used to monitor system functions, input data into the system, perform diagnostics, and view performance data (e.g., motor frequency, bus voltage, torque, etc.).


The software used with the Q9 ASD is menu driven; thus, making it a select and click environment. The operating parameters of a motor may be selected and viewed or changed using the **EOI** (or via communications).

EOI Remote Mounting

The **EOI** may be mounted remotely using the optional **ASD-MTG-KIT9**. The kit contains all of the hardware required to mount the **EOI** of the 9-Series ASD remotely.

System operation and **EOI** operation while using the remotely-mounted **EOI** are the same as with the ASD-mounted configuration.

Figure 21. The Q9 ASD Electronic Operator Interface Features.

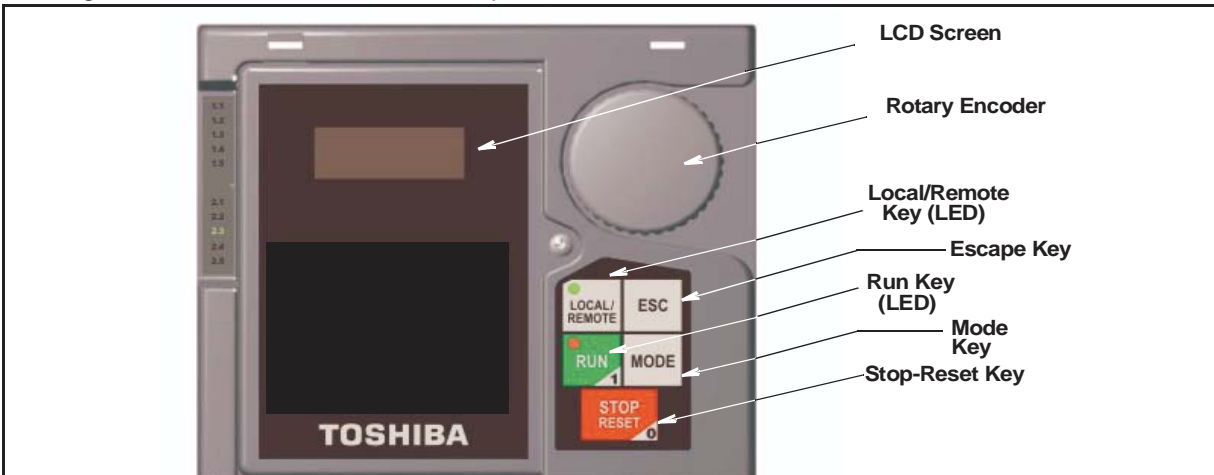

EOI Features

LCD Screen — Displays configuration information, performance data (e.g., output frequency, bus voltage, torque, etc.), and diagnostic information.

Rotary Encoder — Used to access the Q9 ASD menu selections, change the value of a displayed parameter, and performs the **Enter** key function. Turn the **Rotary Encoder** either clockwise or counterclockwise to perform the **Up** or **Down** functions of the displayed menu selection. Press the **Rotary Encoder** to perform the **Enter** (select) function.

Local/Remote Key — Toggles the system to and from the **Local** and **Remote** modes. The LED is on when the system is in the **Local Command** mode. The **Local** mode allows the **Command** and **Frequency** control functions to be carried out via the **EOI**.

The **Remote** mode enables the **Command** and **Frequency** control functions to be carried out via the **Terminal Board**, **RS485**, **Communication Card**, or **Pulse Input**. The selection may be made via Program ⇒ Utility Group ⇒ [Command Mode](#) and [Frequency Mode 1](#), respectively.

ESC Key — Returns the system to the previously viewed menu item. Subsequent **Escape** key activation scrolls through the **Root Menu** until reaching the **Frequency Command** screen (See [Figure 24 on pg. 37](#)). Further **ESC** key entries are ignored.

Run Key — Issues the **Run** command while in the **Local** mode. The **Run** key LED illuminates green while stopped. Illuminates red while running or while exciting the motor.

Mode Key — Provides a means to access the five root menus. Pressing the **Mode Key** key repeatedly loops the system through the five root menus (See [Figure 24 on pg. 37](#)). While looping through the root menus, the **Program** menu will display the default **Program** root menu screen item or the **Program** sub-menu item being accessed prior to pressing the **Mode** key.

Stop-Reset Key — This key has three functions.

1. Issues the **Off** command (decelerates to **Stop** at the programmed rate; [F721](#)) if pressed once while in the **Local** mode.
2. Initiates an **Emergency Off Fault** if pressed twice quickly from the **Local** or **Remote** modes. The **Emergency Off** function terminates the Q9 ASD output and will apply the stopping method selected at [F603](#).
3. Resets active **Faults** and/or active **Alarms** if pressed twice quickly. The source of the **Fault** or **Alarm** must be determined and corrected before normal ASD operation can resume.

LCD Screen

The **LCD** screen is the primary user input/output information center. Parameter settings may be viewed, or selected and changed using the **LCD** screen module of the **EOI**. To view or change a parameter setting using the **LCD** screen, press the **Mode** key until the **Program** menu is displayed. Turn the **Rotary Encoder** until the desired **Primary Menu** item of the **Program** menu is displayed. Press the **Rotary Encoder** to select the item from the **Primary Menu** (repeat the press-to-select for submenu items).

See the section titled [Default Setting Changes on pg. 57](#) for more information on changing parameter setting.

Repeated **ESC** key entries at any time takes the menu back one level each time the **ESC** key is pressed until the **Frequency Command** screen is reached. Further **ESC** key entries are ignored.

LCD Screen Installation Note

When installing the **LCD** screen module of the **EOI**, ensure that the left side of the display is inserted first with the top and bottom catches (See Phillips screws at underside of screen) securely in place. This ensures the proper alignment and electrical connection of the **NX** connector of the **LCD** screen module PCB. Gently hold the screen in place while securing the Phillips mounting screw.

If improperly seated, the periphery of the **LCD** screen module will not be flush with the front panel surface and the unit will not function properly.

Keypad Remote Mounting

The Q9 ASD may be controlled from a remotely-mounted keypad. For safety and application-specific reasons, some ASD installations will warrant that the operator not be in the vicinity during operation or that the keypad not be attached to the ASD housing. The keypad may be mounted either with or without the optional **Remote Mounting Kit** (P/N ASD-MTG-KIT). The ease of installation is enhanced by the **Remote Mounting Kit** (P/N 58333) which allows for keypad placement and easier cable routing.

Remote mounting will also allow for multiple keypad mountings at one location if controlling and monitoring several ASDs from a central location is required.

The keypad can operate up to 9 feet away from the ASD. A keypad extender cable is required for remote mounting. The keypad extender cable is available in a 9-ft. length and may be ordered through your Toshiba Sales Representative.

The optional dust cover (P/N ASD-BPC) may be used to cover the front panel opening of the ASD housing after removing the keypad.

Remote Keypad Required Hardware

Keypad Mounting Hardware

- EOI Remote-Mount Housing — P/N 58333 (included with 230-volt 40-HP and above; and with the 460-volt 75 HP and above)
- 6-32 x 5/16" Pan Head Screw — P/N 50595 (4 ea.)
- #6 Split-Lock Washer — P/N 01884 (4 ea.)
- #6 Flat Washer — P/N 01885 (4 ea.)

Bezel Plate Mounting Hardware

- Bezel Plate — P/N 52291
- 10-32 Hex Nut — P/N 01922 (4 ea.)
- #10 Split-Lock Washer — P/N 01923 (4 ea.)
- #10 Flat Washer — P/N 01924 (4 ea.)
- Dust Cover — P/N ASD-BPC (Optional)

Extender Cable

- ASD-CAB9F-Q9: Cable, 9 ft.

Keypad Installation Precautions

Install the unit securely in a well ventilated area that is out of direct sunlight using the four mounting holes of the rear of the keypad. The ambient temperature rating for the keypad is 14° to 104° F (-10° to 40° C).

- Select a mounting location that is easily accessible by the user.
- Avoid installation in areas where vibration, heat, humidity, dust, metal particles, or high levels of electrical noise (EMI) are present.
- Do not install the keypad where it may be exposed to flammable chemicals or gases, water, solvents, or other fluids.
- Turn on the power only after securing the front cover of the ASD.



Keypad Remote Mounting w/o the ASD-MTG-KIT

Note: See *Figure 22* for the dimensions and the item locations referenced in steps 1 through 5.

1. At the keypad mounting location, mark the 3.80" by 3.56" hole and the four 7/32" screw holes.
2. Cut the 3.80" by 3.56" rectangular hole.
3. Drill the four 7/32" screw holes.
4. Attach and secure the EOI to the front side of the mounting location using the four 6-32 x 5/16" pan head screws, the #6 split lock washers, and the #6 flat washers.
5. Connect the extension cable.

Keypad Mounting Dimensions

Figure 22. Keypad Mounting Dimensions.

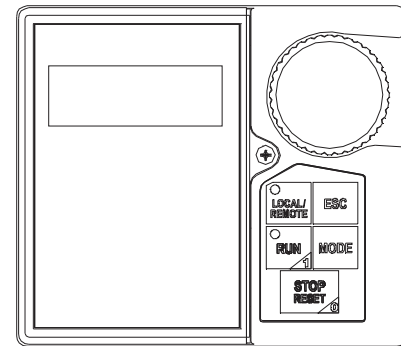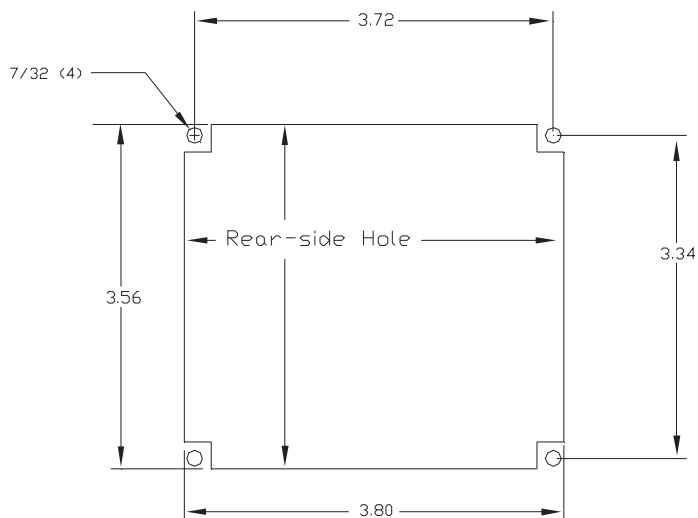


Keypad Remote Mounting Using the ASD-MTG-KIT

Note: See *Figure 23* for the dimensions and the item locations referenced in steps 1 through 6.

1. At the keypad mounting location, mark the 4.60" by 4.50" hole and the four 11/32" screw holes.
2. Cut the 4.60" by 4.50" rectangular hole.
3. Drill the four 11/32" holes for the Bezel Plate mount.
4. Attach and secure the Bezel Plate to the front side of the mounting location using the four 10-32 hex nuts, #10 split lock washers, and the #10 flat washers.
5. Attach and secure the keypad to the front side of the Bezel Plate using the four 6-32 x 5/16" pan head screws, #6 split lock washers, and the #6 flat washers.
6. Connect the extension cable.

Keypad ASD-MTG-KIT Mounting Dimensions

Figure 23. Keypad Bezel Plate Mounting Dimensions.

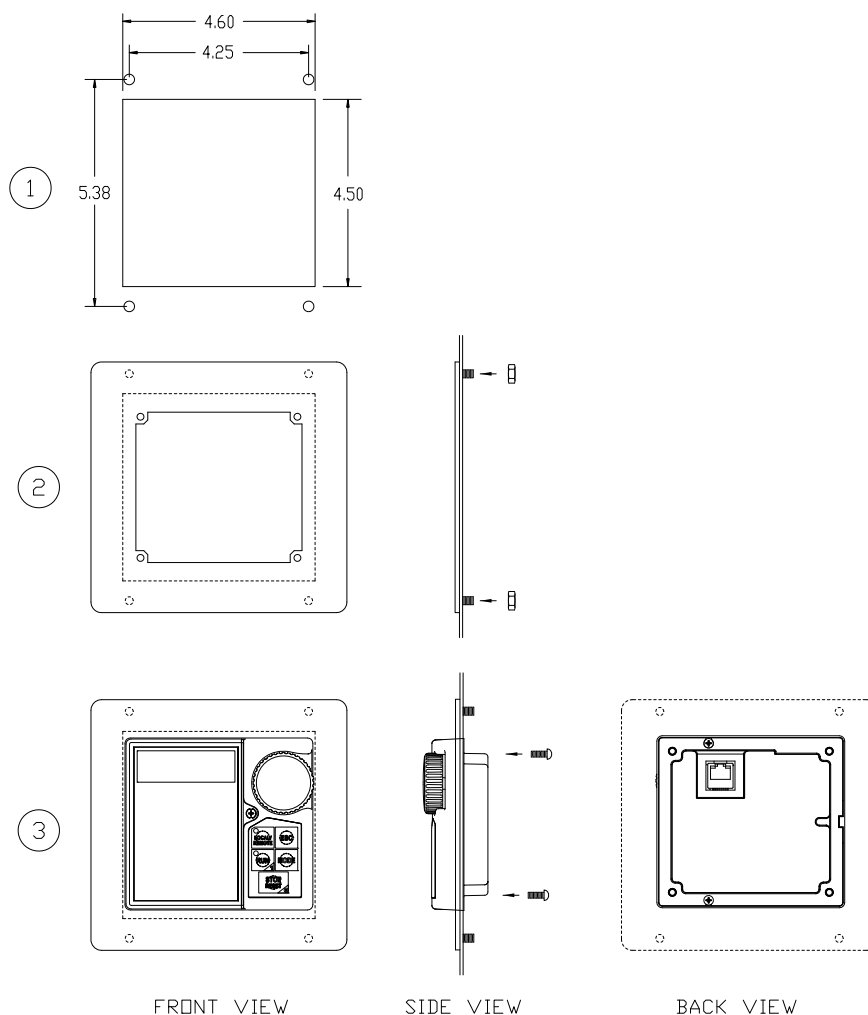

Command Mode and Frequency Mode Control

Command control includes instructions such as **Stop, Run, Jog**, etc. The source of the **Command** signal must be established for normal operation.

Frequency commands control the output speed of the Q9 ASD. The source of the frequency (Speed) control signal must be established for normal operation.

The source of the command control and speed control may be either internal or external. Once the source signal is selected for either function, the system may be configured to use the selected signal all of the time or switch under user-defined conditions.

Command and **Frequency** control may be carried out using any one of several control methods (signal sources) or combinations thereof. In the event that multiple control commands are received, the signal sources are assigned priority levels. The primary control method for **Command** and **Frequency** control uses the settings of **F003** and **F004**, respectively.

Command Control (F003)

The **Command Mode** selection of **F003** establishes the primary source of the command input for the ASD. However, the **Override** feature may supersede the **F003** setting as indicated in [Table 3 on pg. 34](#).

[Table 3](#) shows the hierarchy of the control sources managed by the **Override** function. The level of the control item on the hierarchy is listed from left to right, most to least, respectively. As indicated in the table, the **Override** setting may supersede the **F003** setting.

Placing the EOI in the **Local** mode selects the **RS485** (2-Wire) as the **Command Mode** control source. **Local** mode operation may be superseded by other **Override** settings.

Example: With the EOI set to **Local, Communication Card** input or **RS485** (4-Wire) input will supersede EOI control input.

The remaining control sources may be placed into the **Override Mode** using communications.

The source of the **Command** control signal may be selected by:

- The **F003** setting,
- Placing an item from the list below in the **Override Mode** via communications, or
- Placing the EOI in the **Local** mode (places only the RS485 [2-Wire] in the Override Mode).

Possible **Command** signal source selections include the following:

- Terminal Block (Default Setting),
- Panel Keypad Option,
- RS485 (2-Wire),
- RS485 (4-Wire),
- Communication Option Board, or
- **F003** setting (Used If No Signal Sources Are in the Override Mode).

Note: *The **Terminal Board** is placed in the **Override Mode** for **Command** functions by assigning a discrete terminal to **Command Terminal Board Priority** and connecting the terminal to **CC**. Once activated (Run command required), the **Terminal Board** settings will be used for **Override Command** control (F, R, Preset Speeds, etc.).*



Frequency Control (F004)

The **Frequency Mode 1** (or the Frequency Mode 2) setting establishes the user-selected source of the frequency-control input for the Q9 ASD. The signal source selected here is used for speed control unless the **Reference Priority Selection** parameter is configured to switch this setting automatically (See F200) or if the **Override** feature is enabled.

F004
RR

Table 3 on pg. 34 shows the hierarchy of the control sources managed by the **Override** function. The level of the control item on the hierarchy is listed from left to right, most to least, respectively. As indicated in the table, the **Override** setting may supersede the selection at F004.

Placing the EOI in the **Local** mode selects the **RS485** (2-Wire) as the **Frequency Mode 1** control source. **Local** mode operation may be superseded by other **Override** settings.

Example: With the EOI set to **Local**, **Communication Card** input or **RS485** (4-Wire) input will supersede EOI control input.

The remaining control sources may be placed into the **Override Mode** using communications.

The source of the **Frequency** control signal may be selected by:

- The F004 setting,
- Placing an item from the list below in the **Override Mode** via communications, or
- Placing the EOI in the **Local** mode (places only the **RS485** [2-wire] in the **Override Mode**).

Possible **Frequency** control source selections include the following:

- Communication Card,
- RS485 (2-Wire),
- RS485 (4-Wire),
- Panel Keypad Option,
- Terminal Block (Default Setting), or
- F004 setting (Used if No Other Items Are in the **Override Mode**).

Note: The **Terminal Board** is placed in the **Override Mode** for **Speed** control functions by assigning a discrete terminal to **V/I Terminal Priority** and connecting the terminal to **CC**. Once the discrete terminal is activated, **V/I** is used as the **Terminal Board Override** control item.

Command and Frequency Control Selections

Any or all of the **Command** and **Frequency** control sources may be placed in the **Override Mode**.

Placing the Q9 ASD in the **Local** mode (Local/Remote LED on) places the **RS485** (2-Wire) control selection in the **Override Mode** for **Command** and **Frequency** input.

Communications may be used to place the remaining **Command** and eligible **Frequency** control sources in the **Override Mode**. Once placed in the **Override Mode** this setting is valid until it is cancelled, the power supply is turned off, or the Q9 ASD is reset.

Command and **Frequency** control changes may be disabled at parameter F736.

Override Operation

The status of the listed control sources of [Table 3](#) are read to determine which input sources are in the **Override Mode**. The outcome is used for **Command** and/or **Frequency** control input.

The **Override** control setting supersedes the setting of the **Command** mode setting (F003) and the **Frequency** mode setting (F004). However, the F003 and F004 settings will be used in the event that the scan returns the condition that none of the listed items have the **Override** feature turned on (See [Table 3](#)) or a discrete input terminal is set to **Local Priority** and is activated.

Command and Frequency-Control Override Hierarchy

[Table 3](#) lists the input conditions and the resulting output control source selections for **Command** and **Frequency** control **Override** operation. The Q9 ASD reads the command registers of the listed control items from the left to the right.

The first item to be read that has the **Override** feature turned on will be used for **Command** or **Frequency** control.

Table 3. Command and Frequency Control Hierarchy.

Forced F003/ F004 by I/P Terminal (Assign to Local Priority)	Communication Card	RS485 (4-Wire)	RS485 (2-Wire)	Panel	F003/F004 (Setting)	Actual Command/ Frequency Mode
1	X	X	X	X	X	F003/F004 Setting
0	1	X	X	X	X	Communication Card
0	0	1	X	X	X	RS232/485
0	0	0	1	X	X	Common Serial
0	0	0	0	1	X	Panel
0	0	0	0	0	1	F003/F004 Setting

Note: 1 = Override feature is active for that input; X = Don't care; and 0 = Override Off

Command Control Selections

The following is a listing with descriptions of the **Command Mode (F003)** selections (Program ⇒ Utility Group ⇒ **Command Mode**).

Settings:

0 — Terminal Block

Allows for **Command** control input via the **Terminal Board**.

1 — Panel Keypad

The **Panel Keypad** is unavailable at the time of this release.

2 — RS485 (2-Wire)

Used for **EOI** command control.

3 — RS485 (4-Wire)

Use this setting if using a remotely-mounted **EOI** for command control. Connect the **EOI** to the RJ45 connector of the **Terminal Board**.

4 — (Communication) Option Board

Use this setting if using the optional **Communication Board** for command control.

F003
Terminal Block

Frequency Control Selections

The following is a listing with descriptions of the **Frequency Mode (F004)** selections (Program ⇒ Utility Group ⇒ **Frequency Mode 1**).

Settings:

1 — V/I (VI/II)

Used when a 0 to 10-volt DC analog input or a 4 – 20 mA (or 0 to 1 mA) DC current input is used as the speed control input. Only one input signal type may be used at a time. Set **SW301** to the desired signal type.

2 — RR

Used for a 0 to 10-volt DC analog input signal.

3 — RX

Used for a -10 to +10-volt DC analog input signal.

4 — Panel Keypad

The Panel Keypad is unavailable at the time of this release.

5 — RS485 (2-Wire)

Used for **EOI** frequency control.

6 — RS485 (4-Wire)

Use this setting if using a remotely-mounted **EOI** for frequency control. Connect the **EOI** to the RJ45 connector of the **Terminal Board**.

F004
RR

7 — (Communication) Option Board

Use this setting if using the optional **Communication Board** for frequency control.

8 — RX2

Used for a -10 to +10-volt DC analog input signal.

9 — Option V/I

Allows for the use of the optional voltage/current frequency-control interface.

10 — UP/DOWN Frequency

A discrete terminal may be configured to increase or decrease the speed of the motor by momentarily connecting the assigned terminal to **CC**. See [F264 on pg. 103](#) for further information on this feature.

11 — Pulse (Option)

Used to allow the system to use a pulsed input for frequency control. See [PG Reference 1 on pg. 96](#) for further information on this feature.

12 — Pulse (Motor)

Used to allow the system to use a pulsed input for frequency control. See [PG Reference 1 on pg. 96](#) for further information on this feature.

System Configuration and Menu Options

Root Menu Items

The **Mode** key accesses the five primary modes of the Q9 ASD: the **Frequency Command** mode, the **Setup** mode, the **PID Setup** mode, the **Program** mode, and the **Monitor** mode. From either mode, press the **Mode** key to loop through to the other four modes (See [Figure 24](#)). Press the **ESC** key from any mode to return to the previous mode until reaching the **Frequency Command** mode.

The **Alarm** or **Fault** information will be displayed in the event of an active **Alarm** or **Fault**. **Alarm** text will be displayed on the **Frequency Command** screen when active. **Fault** information will be displayed via a **Fault** screen. See [Alarms and Trips on pg. 196](#) for more information on Alarms and Trips.

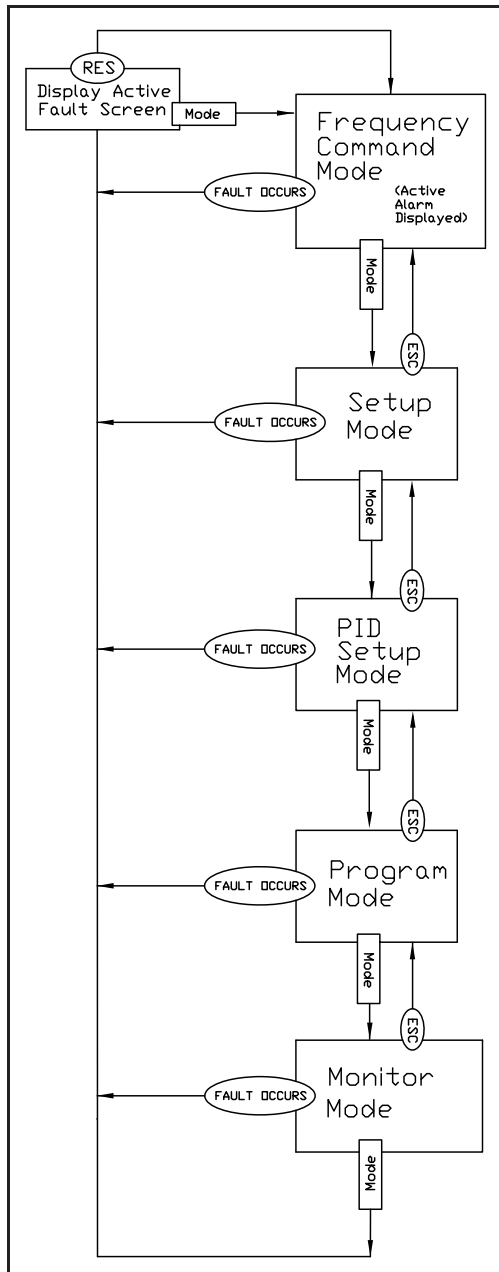


Figure 24. Q9 ASD Root Menu Navigation.

Frequency Command Mode

Frequency Setting

While operating in the **Local** mode (Local LED is illuminated), the running frequency of the motor may be set from the **Frequency Command** screen. Using the **Rotary Encoder**, enter the **Frequency Command** value, connect **ST** to **CC**, provide a **Run** command (F and/or R) and then press the **Run** key. The motor will run at the **Frequency Command** speed and may be changed while running. See [Operation \(Local\) on pg. 57](#) for more information on the **Frequency Command** mode.

Setup Mode

The **Setup** mode is comprised of the commonly used configuration items.

The quick-access items are listed below:

[Acceleration Time 1](#) (see [pg. 63](#) for more information).

[Deceleration Time 1](#) (see [pg. 63](#) for more information).

[Upper-Limit Frequency](#) (see [pg. 63](#) for more information).

[Lower-Limit Frequency](#) (see [pg. 64](#) for more information).

[V/I Reference 1](#) (see [pg. 83](#) for more information).

[V/I Frequency 1](#) (see [pg. 83](#) for more information).

[V/I Reference 2](#) (see [pg. 84](#) for more information).

[V/I Frequency 2](#) (see [pg. 84](#) for more information).

[Type Reset](#) (see [pg. 62](#) for more information).

[V/f Pattern](#) (see [pg. 64](#) for more information).

[Electronic Thermal Protection 1](#) (see [pg. 130](#) for more information).

PID Setup Mode

The **PID Setup** (Proportional-Integral-Derivative) mode is comprised of parameter settings that are specific to the PID operating mode. PID is a closed-loop control technique that seeks error minimization by reacting to three values: One that is proportional to the error, one that is representative of the error, and one that is representative of the rate of change of the error.

The quick-access items are listed below:

- Command Mode (see pg. 60 for more information).
- Frequency Mode 1 (see pg. 60 for more information).
- V/I Reference 1 (see pg. 83 for more information).
- V/I Frequency 1 (see pg. 83 for more information).
- V/I Reference 2 (see pg. 84 for more information).
- V/I Frequency 2 (see pg. 84 for more information).
- PID Control Switching (see pg. 116 for more information).
- PID Feedback Selection (see pg. 117 for more information).
- PID Feedback Delay Filter (see pg. 117 for more information).
- PID Feedback Proportional (P) Gain (see pg. 117 for more information).
- PID Feedback Integral (I) Gain (see pg. 117 for more information).
- PID Deviation Upper-Limit (see pg. 117 for more information).
- PID Deviation Lower-Limit (see pg. 118 for more information).
- PID Feedback Differential (D) Gain (see pg. 118 for more information).
- Process Upper-Limit (see pg. 118 for more information).
- Process Lower-Limit (see pg. 118 for more information).
- PID Control Wait Time (see pg. 118 for more information).
- PID Output Upper-Limit (see pg. 118 for more information).
- PID Output Lower-Limit (see pg. 119 for more information).
- Process Increasing Rate (see pg. 119 for more information).
- Process Decreasing Rate (see pg. 119 for more information).
- Upper-Limit Frequency (see pg. 63 for more information).
- Lower-Limit Frequency (see pg. 64 for more information).
- Low Output Disable Time (see pg. 100 for more information).
- Acceleration Time 1 (see pg. 63 for more information).
- Deceleration Time 1 (see pg. 63 for more information).
- Frequency Command Panel (Same as command entered via Frequency Command screen).
- PID Feedback (Read-Only — displays active feedback value in Hz).

Monitor Mode

The **Monitor** mode allows the user to monitor motor performance variables, control settings, and configuration data during motor operation. There are 30 items that may be monitored from this mode. The items are listed and described below.

Press the **Rotary Encoder** to access the listing of monitored parameters. Turn the **Rotary Encoder** to access subsequent monitored parameters.

Note: The **Monitor** mode is a read-only mode. The settings cannot be changed from the **Monitor** mode. For information on how to change the values, see the section titled *Default Setting Changes on pg. 44*.

Note: The **F701** setting will determine if the **Current** and **Voltage** values displayed appear as **A (Amps)** or **V (Voltage)**, or if the value is shown as a **% (Percentage)** of the **ASD** rating.

Frequency at Trip — Displays the running frequency or the at-trip frequency if tripped.

Frequency Reference — Displays the **Frequency Setpoint** (Commanded Frequency).

Output Current — Displays the **Output Current** as a percentage of the rated capacity of the ASD.

DC (Bus) Voltage — Displays the **Bus Voltage** as a percentage of the rated capacity of the ASD.

Output Voltage — Displays the **Output Voltage** as a percentage of the rated capacity of the ASD.

(Discrete) Input Terminals — Displays any activated discrete input terminals of the **Terminal Board**.

(Discrete) Output Terminals — Displays any activated discrete output terminals of the **Terminal Board**.

Run Time — Displays the **Cumulative Run Time** in hours. Select **Clear Run Timer** at **F007** to reset this reading.

Compensation Frequency — Displays the **Output Frequency** after the application of the slip compensation correction value (Post Compensation Frequency).

PID Feedback — Provides a status of the **PID Real Time Feedback** in Hz.

Motor OL Ratio — Displays the real-time **Motor Overload** value as a percentage of the rated capacity of the motor.

ASD OL Ratio — Displays the real-time **ASD Overload** as a percentage of the rated capacity of the ASD.

Motor Load — Displays the real-time **Motor Load** as a percentage of the rated capacity of the motor.

ASD Load — Displays the **ASD Load** as a percentage of the rated capacity of the ASD.

Input Power — Displays the **Input Power** in Kilowatts (kW).

Output Power — Displays the **Output Power** in Kilowatts (kW).

Input kWh — Displays the **Input Power** in kWh.

Output kWh — Displays the **Output Power** in kWh.

Direction — Displays the **Direction** command (Forward/Reverse).

RR — Displays the **RR** input value as a percentage of the full range of the **RR** value (Potentiometer input).

***V/I** — Displays the **V/I** input setting as a percentage of the full range of the **V/I** value.

*Note: The isolated V/I input terminal may receive **Current** or **Voltage** to control the output speed or the output torque. The input signal type must be selected at **SW301** on the **Terminal Board**.*

*The **V** input setting of **SW301** is used for the 0 – 10 VDC analog input signal and the **I** input setting of **SW301** is used for the 0 – 20 mA analog input signal. Either may be used as a frequency or torque control source. Throughout this guide they will be selection-specific and may be listed as **V/I**.*

*See parameter **F201** for more information on the setup of this input.*

RX — Displays the **RX** input setting as a percentage of the full range of the **RX** value (-10 to +10 VDC Input).

RX2 — Displays the **RX2** input setting as a percentage of the full range of the **RX2** value.

*Note: The **RX2** terminal function is available on the **Expansion IO Card Option 1** Option Board (P/N ETB003Z) only.*

FM Output — Displays the magnitude of the function assigned to this terminal relative to the full-scale reading of the **FM** terminal. This terminal may be configured at **F005** for application-specific suitability.

AM Output — Displays the magnitude of the function assigned to this terminal relative to the full-scale reading of the **AM** terminal. This terminal may be configured at **F670** for application-specific suitability.

Fault — Displays the active fault or **No Error** if there are no errors.

Past Trip 1 — This function records and displays the last trip incurred. Subsequent trips will replace **Past Trip 1**. As trip records are replaced they are shifted to the next level of the **Past Trip** locations until being deleted (i.e., **Past Trip 1** is moved to **Past Trip 2** and then to **Past Trip 3** until being shifted out of **Past Trip 4**). Once shifted out of **Past Trip 4** the record is deleted. If no trips have occurred since the last reset, **No Error** is displayed for each trip record.

Past Trip 2 — Past trip information or **None**.

Past Trip 3 — Past trip information or **None**.

Past Trip 4 — Past trip information or **None**.

*Note: An improper ASD setup may cause some trips — reset the ASD to the **Factory Default** settings before pursuing a systemic malfunction (Program ⇒ Utility Group ⇒ Type Reset ⇒ **Factory Settings**).*

Direction — Displays the **Direction** command (Forward/Reverse).

Discrete Input Terminals — Displays the status (Activated = Reverse Video) of the discrete input terminals of the **Terminal Board**.

Discrete Output Terminals — Displays the status (Activated = Reverse Video) of the discrete output lines of the **Terminal Board**.

Program Mode Menu Navigation

The following table lists the menu items of the **Program** mode and maps the flow of the menu selections. The **Parameter Numbers** for the listed functions are provided where applicable.

The functions listed may be viewed, or selected and changed as mapped below or via the **Direct Access** method: Program ⇒ Direct Access ⇒ *Applicable Parameter Numbers*.

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
OUTPUT FREQUENCY			N/A
SETUP	Acceleration Time 1		F009
	Decel Time 1		F010
	Upper-Limit Frequency		F012
	Lower-Limit Frequency		F013
	V/I Reference 1		F201
	V/I Frequency 1		F202
	V/I Reference 2		F203
	V/I Frequency 2		F204
	Type Reset		F007
	V/f Pattern		F015
	Electronic Thermal Protection 1		F600
PID SETUP	Command Mode		F003
	Frequency Mode 1		F004
	V/I Reference 1		F201
	V/I Frequency 1		F202
	V/I Reference 2		F203
	V/I Frequency 2		F204
	PID Switching		F359

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PID SETUP		Input Feedback Select	F360
		PID Feedback Delay Filter	F361
		PID Feedback Proportional Gain	F362
		PID Feedback Integral Gain	F363
		PID Upper Deviation Limit	F364
		PID Lower Deviation Limit	F365
		PID Feedback Differential Gain	F366
		Process Upper-Limit	F367
		Process Lower-Limit	F368
		PID Control Wait Time	F369
		PID Output Upper-Limit	F370
		PID Output Lower-Limit	F371
		Process Increasing Rate	F372
		Process Decreasing Rate	F373
		Upper-Limit Frequency	F012
		Lower-Limit Frequency	F013
		Low Output Disable Time	F256
		Acceleration Time 1	F009
		Decel Time 1	F010
		Frequency Command Panel	N/A
	PID Feedback	F360	
PROGRAM	Search		
	Direct Access		
	Fundamental 1	Maximum Output Frequency	F011

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PROGRAM	Fundamental 1	Base Frequency 1	F014
		Voltage Compensation	F307
		Base Voltage 1	F409
		Disable Forward/Reverse Run	F311
		Upper-Limit Frequency	F012
		Lower-Limit Frequency	F013
		V/f Pattern	F015
		Torque Boost 1	F016
		Acceleration Time 1	F009
		Decel Time 1	F010
		Accel/Decel Pattern 1	F502
	Fundamental 2	Base Frequency 2	F170
		Base Voltage 2	F171
		Torque Boost 2	F172
		Electronic Thermal Protection 2	F173
		Acceleration Time 2	F500
		Deceleration Time 2	F501
		Accel/Decel Pattern 2	F503
	Panel Control	Accel/Decel Switching Frequency 1	F505
		Panel Direction	F008
		Panel Stopping Pattern	F721
		Panel Accel/Decel Selection	F504
		Switch-On-The-Fly	F295
		Lock CMOD/FMOD	F736

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PROGRAM	Input Terminals	F Terminal	F111
		R Terminal	F112
		ST Terminal	F113
		RES Terminal	F114
		S1 Terminal	F115
		S2 Terminal	F116
		S3 Terminal	F117
		S4 Terminal	F118
		LI1 Terminal	F119
		LI2 Terminal	F120
		LI3 Terminal	F121
		LI4 Terminal	F122
		LI5 Terminal	F123
		Input Terminals	LI6 Terminal
	LI7 Terminal		F125
	LI8 Terminal		F126
	On Terminal		F110
	Direction Priority		F105
	Input Priority		F106
	Output Terminals	OUT1 Terminal	F130
		OUT2 Terminal	F131
		FL Terminal	F132
		OUT3 Terminal	F133
OUT4 Terminal		F134	

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PROGRAM	Output Terminals	OUT5 Terminal	F135
		OUT6 Terminal	F136
		OUT7 Terminal	F137
		R2 Terminal	F138
		Low-Signal Frequency	F100
		Reach Frequency	F101
		Reach Detection	F102
		FP Terminal Assignment	F676
		FP Terminal Scaling	F677
	Special Controls	Startup Frequency	F240
		End Frequency	F243
		Run Frequency	F241
		Run Frequency Hysteresis	F242
		Jump Frequency 1	F270
		Jump Frequency 1 Bandwidth	F271
		Jump Frequency 2	F272
		Jump Frequency 2 Bandwidth	F273
		Jump Frequency 3	F274
		Jump 3 Frequency Bandwidth	F275
		PWM Carrier Frequency	F300
		LCD Contrast	F790
		V/I Input-Loss Response	F644
		V/I Input-Loss Detection Level	F633
		Preset Speed 14	F293

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PROGRAM	Special Controls	Forced Fire-Speed	F650
		Preset Speed 15	F294
		Power Switching	F354
		Power Switching Frequency	F355
		ASD Switching Wait Time	F356
		Commercial Power Wait Time	F357
		Commercial Power Hold Time	F358
		DC Injection Braking Start Frequency	F250
		DC Injection Braking Current	F251
		DC Injection Braking Time	F252
		DC Injection On During Direction Change	F253
		Shaft Stationary	F254
		kWH Memory Selection	F748
		kWH Units Selection	F749
		Preset Speeds	Preset Speed 1
	Preset Speed 2		F019
	Preset Speed 3		F020
	Preset Speed 4		F021
	Preset Speed 5		F022
	Preset Speed 6		F023
	Preset Speed 7		F024
	Preset Speed 8		F287
	Preset Speed 9		F288
Preset Speed 10	F289		

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PROGRAM	Preset Speeds	Preset Speed 11	F290
		Preset Speed 12	F291
		Preset Speed 13	F292
		Preset Speed 14	F293
		Preset Speed 15	F294
	Protection	Dynamic Braking (Not Used)	F304
		Dynamic Braking Resistance (Not Used)	F308
		Dynamic Braking Capacity (Not Used)	F309
		Over-Current Stall Level	F601
		Over-Voltage Stall Enable	F305
		Over-Voltage Stall Level	F626
		Emergency Off Mode Selection	F603
		Emergency Off DC Injection Time	F604
		Number of Retries	F303
		Speed Search Selection	F301
		Ridethrough Mode	F302
		Ridethrough Time	F310
		Under-Voltage Trip	F627
		Overload Reduction Starting Frequency	F606
		Soft Stall Selection	F017
		Trip Save	F602
		Cooling Fan Control	F620
		Run-Time Alarm Setting	F621
Output Phase Loss	F605		

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PROGRAM	Protection	Low-Current Trip	F610
		Low-Current Setting	F611
		Low-Current Time	F612
		Low-Current Detect Hysteresis Width	F609
		Abnormal Speed Time	F622
		Overspeed Frequency	F623
		Speed Drop Frequency	F624
		Short Circuit Test	F613
		Over-Torque Trip	F615
		Over-Torque Level (Positive Torque)	F616
		Over-Torque Level (Negative Torque)	F617
		Over-Torque Detection Time	F618
		Over-Torque Detection Hysteresis	F619
		Input Phase Loss	F608
		Adding Input Selection	F660
		Multiplying Input Selection	F661
		PM Current Level	F640
		PM Current Time	F641
		Feedback Settings	PID Switching
	Input Feedback Selection		F360
	Delay Filter		F361
	Proportional Gain		F362
	Integral Gain		F363
	Upper Deviation Limit		F364

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PROGRAM	Feedback Settings	Lower Deviation Limit	F365
		Differential Gain	F366
		Process Upper-Limit	F367
		Process Lower-Limit	F368
		PID Wait Time	F369
		PID Output Upper-Limit	F370
		PID Output Lower-Limit	F371
		Process Increasing Rate	F372
		Process Decreasing Rate	F373
	Communication Settings	ASD Number	F802
		2-Wire Baud Rate	F800
		4-Wire Baud Rate	F820
		Parity (RS485 2- and 4-Wire)	F801
		Time Out Time (RS485 2- and 4-Wire)	F803
		Time-Out Action (RS485 2- and 4-Wire)	F804
		Send Wait Time (2-Wire)	F805
		Send Wait Time (4-Wire)	F825
		ASD-to-ASD Comm. (RS485 2-Wire)	F806
		ASD-to-ASD Comm. (RS485 4-Wire)	F826
		Communication Reference Selection	F810
		Communication Reference 1	F811
		Communication Frequency 1	F812
		Communication Reference 2	F813
Communication Frequency 2	F814		

Program Mode Menu Navigation				
Primary Menu	Sub Menu	Parameter Name	Parameter Number	
PROGRAM	Communication Settings	Network Reset	F899	
		AM/FM	FM Assignment	F005
	FM Adjustment		F006	
	FM Output Gradient Characteristic		F682	
	FM Bias Adjustment		F683	
	FM Voltage/Current Output Switching		F681	
	AM Assignment		F670	
	AM Adjustment		F671	
	AM Output Gradient Characteristic		F685	
	AM Bias Adjustment		F686	
	Utility Group	Type Reset	F007	
		Command Mode	F003	
		Frequency Mode 1	F004	
		PWM Carrier Frequency	F300	
		Panel Frequency Lockout	F730	
		CPU Version	N/A	
		CPU Revision		
		MC Version		
		MC Revision		
		Control EEPROM Version		
		ASD Typeform	N/A	
		Frequency Multiplier		F702
		User Unit Type		F703
Units for Voltage/Current	F701			

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PROGRAM	Utility Group	User Units Selection	F092
	Motor Settings	Base Frequency 1	F014
		Base Voltage 1	F409
		Torque Boost 1	F016
		Electronic Thermal Protection 1	F600
		Base Frequency 2	F170
		Base Voltage 2	F171
		Torque Boost 2	F172
		Electronic Thermal Protection 2	F173
		Autotune Control	F400
		Motor Slip Gain	F401
		Autotuning Control 2	F402
		Motor Rated Capacity	F405
		Motor Rated Current	F406
		Motor Rated RPM	F407
		Motor Constant 1	F410
		Motor Constant 2	F411
		Motor Constant 3	F412
		Motor Constant 4	F413
	Frequency Settings	Reference Priority Selection	F200
		Frequency Mode 2	F207
		Mode 1/Mode 2 Switching Frequency	F208
		V/I Reference 1	F201
V/I Frequency 1		F202	

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PROGRAM	Frequency Settings	V/I Reference 2	F203
		V/I Frequency 2	F204
		V/I Torque Reference 1	F205
		V/I Torque Reference 2	F206
		RR Reference 1	F210
		RR Frequency 1	F211
		RR Reference 2	F212
		RR Frequency 2	F213
		RR Torque Reference 1	F214
		RR Torque Reference 2	F215
		RX Reference 1	F216
		RX Frequency 1	F217
		RX Reference 2	F218
		RX Frequency 2	F219
		RX Torque Reference 1	F220
		RX Torque Reference 2	F221
		RX2 Reference 1	F222
		RX2 Frequency 1	F223
		RX2 Reference 2	F224
		RX2 Frequency 2	F225
		BIN Reference 1	F228
		BIN Frequency 1	F229
		BIN Reference 2	F230
		BIN Frequency 2	F231

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PROGRAM	Frequency Settings	PG Reference 1	F234
		PG Frequency 1	F235
		PG Reference 2	F236
		PG Frequency 2	F237
		Jog Run Frequency	F260
		Jog Stop Control	F261
	My Function Unit 1	My Function Selection	F977
		Input Function Target 1	F900
		Input Function Command 1	F901
		Input Function Target 2	F902
		Input Function Command 2	F903
		Input Function Target 3	F904
		Output Function Assigned	F905
	My Function Unit 2	Input Function Target 1	F906
		Input Function Command 1	F907
		Input Function Target 2	F908
		Input Function Command 2	F909
		Input Function Target 3	F910
		Output Function Assigned	F911
	My Function Unit 3	Input Function Target 1	F912
		Input Function Command 1	F913
		Input Function Target 2	F914
		Input Function Command 2	F915
		Input Function Target 3	F916

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PROGRAM	My Function Unit 3	Output Function Assigned	F917
	My Function Unit 4	Input Function Target 1	F935
		Input Function Command 1	F936
		Input Function Target 2	F937
		Input Function Command 2	F938
		Input Function Target 3	F939
		Output Function Assigned	F940
		My Function Unit 5	Input Function Target 1
	Input Function Command 1		F942
	Input Function Target 2		F943
	Input Function Command 2		F944
	Input Function Target 3		F945
	Output Function Assigned		F946
	My Function Unit 6	Input Function Target 1	F947
		Input Function Command 1	F948
		Input Function Target 2	F949
		Input Function Command 2	F950
		Input Function Target 3	F951
		Output Function Assigned	F952
	My Function Unit 7	Input Function Target 1	F953
		Input Function Command 1	F954
		Input Function Target 2	F955
		Input Function Command 2	F956
		Input Function Target 3	F957

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PROGRAM	My Function Unit 7	Output Function Assigned	F958
	My Function Data	My Function Percent Data 1	F918
		My Function Percent Data 2	F919
		My Function Percent Data 3	F920
		My Function Percent Data 4	F921
		My Function Percent Data 5	F922
		My Function Frequency Data 1	F923
		My Function Frequency Data 2	F924
		My Function Frequency Data 3	F925
		My Function Frequency Data 4	F926
		My Function Frequency Data 5	F927
		My Function Time Data 1	F928
		My Function Time Data 2	F929
		My Function Time Data 3	F930
		My Function Time Data 4	F931
		My Function Time Data 5	F932
		My Function Count Data 1	F933
		My Function Count Data 2	F934
		My Function Analog	Input Target 11
	Assigned Object 11		F961
	Input Target 21		F962
	Assigned Object 21		F964
	My Function Monitor	Output Function 11	F965
		Output Command 11	F966

Program Mode Menu Navigation			
Primary Menu	Sub Menu	Parameter Name	Parameter Number
PROGRAM	My Function Monitor	Output Function 21	F967
		Output Command 21	F968
		Output Function 31	F969
		Output Command 31	F970
		Output Function 41	F971
		Output Command 41	F972
MONITOR	Read-Only (See Monitor Mode on pg. 39).		N/A

System Operation

Operation (Local)

To run the motor perform the following steps:

1. Press the **Mode** key until the **Frequency Command** screen is displayed.
2. Press the **Local/Remote** key to enter the **Local** mode (Local LED is illuminated). Frequency Command Screen.
3. Use the **Rotary Encoder** to set the desired running speed.



Output Frequency
0.00 Hz

Note: *Ensure that there are no personnel around or near the motor or the motor-driven equipment.*

4. Press the **Run** key (Green Run LED illuminates Red) and the motor runs at the **Frequency Command** value set at step 3.

Note: *The speed of the motor may be changed while the motor is running by using the Rotary Encoder to change the **Frequency Command** value.*

5. Press the **Stop-Reset** key to stop the motor.

Default Setting Changes

To change a parameter setting from the keypad, go to the **Program** menu by pressing the **Mode** key until **Program** is displayed.

From the **Program** menu turn the **Rotary Encoder** until the desired parameter group is displayed. Press the **Rotary Encoder** to access the sub-menu items — repeat as required until reaching the parameter to be changed.

Once a parameter setting is displayed, press the **Rotary Encoder** to enter the **Edit** mode (parameter title flashes). Turn the **Rotary Encoder** to change the parameter setting.

While still in the **Edit** mode, press **ESC** or the **Mode** key to exit the menu without saving the change, or press the **Rotary Encoder** to accept and save the changed setting.

Note: *Some parameters use the unsaved changed value until the ASD is Reset or powered off (e.g., Frequency Command, Accel/Decel, etc.).*

Turn the **Rotary Encoder** to repeatedly loop through the complete listing of sub-menu items for a given **Program Menu** group.

For a complete listing of the **Program** menu items see the section titled [Program Mode Menu Navigation on pg. 41](#). The menu items are mapped for convenience.

From any menu, press the **Mode** key to return to the root menu. Repeated **Mode** key entries loop the system through the root menus as shown in [Figure 24 on pg. 37](#).

Search (For Default Setting Changes)

A listing of all parameters that have been changed from the factory default settings may be viewed sequentially by accessing the **Search** screen (Program ⇒ **Search**).

The **Search** feature allows the user to view (and/or change) the parameters that are different from the factory default settings. From the **Search** screen, press the **Rotary Encoder** to start the **Search** function. Once started, the system automatically scrolls through all of the system parameters and halts once reaching a changed parameter.

After stopping at a changed parameter, the **Rotary Encoder** may be clicked either clockwise or counter-clockwise once to continue scrolling either forward or reverse, respectively. With each **Up** or **Down** click from a stop, the system scrolls and stops at the next parameter that has been changed.

Press the **Rotary Encoder** once while the system is halted at a changed parameter to enter the **Edit** mode (Parameter title flashes). Turn the **Rotary Encoder** to change the setting.

While still in the **Edit** mode, press the **Mode** key to exit the **Search** function without saving the change, press the **ESC** key to return to the **Search** mode, or press the **Rotary Encoder** to accept and save the new setting.

***Note:** Some parameters use the unsaved changed value until the ASD is reset or powered off (e.g., Frequency Command, Accel/Decel, etc.).*

Pressing the **Mode** key when finished searching or when halted at a changed parameter returns the system to the primary menu loop.

Direct Access Parameter Information

The Q9 ASD has the ability to allow the user direct access to the motor control functions. There are two ways in which the motor-control parameters may be accessed for modification: Program ⇒ **Applicable Menu Path** or Program ⇒ Direct Access ⇒ **Applicable Parameter Number**. Both methods access the parameter via the **Program** mode. Once accessed, the parameter may be viewed or changed.

The **Program** mode allows the user to develop an application-specific motor-control profile. Motor control functions may be set to accommodate specific power and timing requirements for a given application. The configurable parameters of the **Program** mode that have user-accessible **Parameter Numbers** are listed and described below.

Note: *Parameter selections are preceded by the number used to select an item if using communications to write to a parameter location in memory (i.e., F000 ⇒ 0-Manual, 1- No Trip on Acc/Dec, 2-No trip on Acc Only, etc.).*

Note: *The setup procedures included within this section may require a **Reset** before performing the procedure. Application-specific settings may then be performed. The pre-Reset conditions may be saved (see F007).*

Note: *Communications setting changes will require that the power be removed and then re-applied for the changes to take affect.*

Direct Access Parameters/Numbers

Automatic Acceleration/Deceleration

No Path — Direct Access Only

This parameter is used to adjust the acceleration and deceleration rates in accordance with the applied load automatically.

The adjusted acceleration and deceleration times range from 12.5% to 800% of the programmed values for **Acceleration Time 1 (F009)** and **Deceleration Time 1 (F010)**.

Settings:

- 0 — Manual
- 1 — Automatic ACC/DEC
- 2 — Automatic ACC Only

Note: *The motor and the load must be connected prior to selecting **Automatic Acceleration/Deceleration**.*

Direct Access Number — F000

Parameter Type — **Selection List**

Factory Default — **Manual**

Changeable During Run — **No**

Automatic Torque Boost

No Path — Direct Access Only

This parameter **Enables/Disables** the ability of the ASD to adjust the output torque in accordance with the applied load automatically. When enabled Autotuning is performed. The motor should be connected before performing an **Autotune**.

Settings:

- 0 — Disabled
- 1 — Automatic Torque Boost + Autotuning
- 2 — Sensorless Vector Control + Autotuning

Direct Access Number — F001

Parameter Type — **Selection List**

Factory Default — **Disabled**

Changeable During Run — **No**

F003**F004****Command Mode**

Program ⇒ Utility Group

The **Command Mode Selection** establishes the source of the command input for the ASD. **Command** inputs include **Run, Stop, Forward**, etc. The **Override** feature may supersede the **Command Mode Selection** setting (see [Command Mode and Frequency Mode Control on pg. 32](#)).

Settings:

- 0 — Terminal Block
- 1 — Panel Keypad
- 2 — RS485 (2-Wire)
- 3 — RS485 (4-Wire)
- 4 — Communication Option Board

Direct Access Number — **F003**

Parameter Type — **Selection List**

Factory Default — **Terminal Block**

Changeable During Run — **No**

Frequency Mode 1

Program ⇒ Utility Group

The **Frequency Mode 1** setting establishes the source of the frequency-control input for the ASD. The **Frequency Mode 2** setting or the **Override** feature may supersede the **Frequency Mode 1** setting (see [Command Mode and Frequency Mode Control on pg. 32](#) and [F200](#) for more information on this feature).

Settings:

- 1 — V/I
- 2 — RR
- 3 — RX
- 4 — Panel Keypad
- 5 — RS485 (2-Wire)
- 6 — RS485 (4-Wire)
- 7 — Communication Option Board
- 8 — RX2 (AI1)
- 9 — Option V/I
- 10 — UP/DOWN Frequency (Terminal Board)
- 11 — Pulse Input (Option)
- 12 — Pulse Input (Motor CPU)

Direct Access Number — **F004**

Parameter Type — **Selection List**

Factory Default — **RR**

Changeable During Run — **No**

F005**F006****FM Output Terminal Assignment**

Program ⇒ AM/FM

This setting determines the output function of the **FM** analog output terminal. The **FM** output terminal produces an output current that is proportional to the magnitude of the function assigned to this terminal. The available assignments for this output terminal are listed in [Table 6 on pg. 188](#).

***Note:** To read **voltage** at this terminal a 100 – 500Ω resistor is required and it must be connected from **FM** (+) to **CC** (-). The voltage is read across the 100 – 500Ω resistor.*

*Current may be read by connecting an ammeter from **FM** (+) to **CC** (-).*

The **FM** analog output has a maximum resolution of 1/1024 and a maximum load rating of 500 ohms.

FM Terminal Setup Parameters

- F005 — Terminal Assignment
- F006 — Terminal Adjustment
- F681 — Voltage/Current Output Switching
- F682 — Output Gradient Characteristic
- F683 — Bias Adjustment
- F684 — Output Filtering

FM Output Terminal Adjustment

Program ⇒ AM/FM

This parameter is used to calibrate the **FM** analog output.

To calibrate the **FM** analog output, connect a meter (Current or Voltage) to terminals **FM** (+) and **CC** (-) as described at **F005**.

With the ASD running at a known value (e.g., Output Frequency), adjust this parameter until the associated function set at parameter **F005** produces the desired DC level output at the **FM** output terminal.

See [F005](#) for more information on this setting.

Direct Access Number — **F005**

Parameter Type — **Selection List**

Factory Default — **Output Frequency**

Changeable During Run — **Yes**

Direct Access Number — **F006**

Parameter Type — **Numerical**

Factory Default — **493**

Changeable During Run — **Yes**

Minimum — 1

Maximum — 1280

F007**F008****Type Reset**

Program ⇒ Utility Group

This feature assists the user when performing fault analysis or by allowing a quick system setup change when required. Performing a **Type Reset** results in one of the following user-selected post-reset configurations.

Settings:

- 0 — None
- 1 — 50 Hz Setting
- 2 — 60 Hz Setting
- 3 — Reset to Factory Settings
- 4 — Clear Past Trips
- 5 — Clear Run Timer
- 6 — Initialize Typeform
- 7 — Save User Settings
- 8 — Restore User Settings
- 9 — Clear Cumulative Fan Timer
- 10 — Accel/Decel Time Setting 0.01 – 600.0 Seconds
- 11 — Accel/Decel Time Setting 0.1 – 6000.0 Seconds

Direct Access Number — F007

Parameter Type — **Selection List**

Factory Default — **None**

Changeable During Run — **No**

Forward/Reverse Run Selection

No Path — Direct Access Only

While operating using the keypad (F003 is set to Panel Keypad) this parameter sets the direction of motor rotation. This setting may be changed during operation. This setting will not override parameter F311 (Forward/Reverse Disable).

If either direction is disabled via parameter F311, the disabled direction will not be recognized if commanded by the keypad. If both directions are disabled via parameter F311, the direction command from the keypad will determine the direction of the motor rotation.

Settings:

- 0 — Forward
- 1 — Reverse
- 2 — Forward (EOI-Switchable F/R)
- 3 — Reverse (EOI-Switchable F/R)

Direct Access Number — F008

Parameter Type — **Selection List**

Factory Default — **Forward**

Changeable During Run — **Yes**

F009

F012

Acceleration Time 1

Program ⇒ Fundamental 1

This parameter specifies the time in seconds for the output of the ASD to go from 0.0 Hz to the **Maximum Frequency** for the **Acceleration 1** profile. The **Accel/Decel Pattern** may be set using [F502](#).

Note: *An acceleration time shorter than the load will allow may cause nuisance tripping and mechanical stress to loads. **Automatic Accel/Decel, Stall, and Ridethrough** settings may lengthen the acceleration times.*

Acceleration

The acceleration rate of a motor is determined by several factors: applied power, applied load, and the physical properties of the motor (winding parameters, motor size, etc.). The ASD will control the first of these factors: input power. The settings of the ASD will control the frequency and amplitude of the applied voltage to the motor.

Under most operating conditions, as the output frequency of the ASD increases so does the output voltage (linear acceleration). The ASD has the ability to modify the relationship between frequency and voltage automatically to produce smoother operation or increased (starting) torque (see [F502](#)).

Deceleration Time 1

Program ⇒ Fundamental 1

This parameter specifies the time in seconds for the output of the ASD to go from the **Maximum Frequency** to 0.0 Hz for the **Deceleration 1** profile. The **Accel/Decel Pattern** may be set using [F502](#).

Note: *A deceleration time shorter than the load will allow may cause nuisance tripping and mechanical stress to loads. **Automatic Accel/Decel, Stall, and Ridethrough** settings may lengthen the deceleration times.*

Maximum Frequency

Program ⇒ Fundamental 1

This setting determines the absolute maximum frequency that the ASD can output.

Accel/Decel times are calculated based on the **Maximum Frequency** setting.

The **Maximum Frequency** is not limited by this setting while operating in the **Drooping Control** mode (see [F320](#) for more information on this setting).

Note: *This setting may not be lower than the **Upper-Limit** setting ([F012](#)).*

Upper-Limit Frequency

Program ⇒ Fundamental 1

This parameter sets the highest frequency that the ASD will accept as a frequency command or frequency setpoint. The ASD may output frequencies higher than the **Upper-Limit Frequency** (but, lower than the Maximum Frequency) when operating in the **PID Control** mode, **Torque Control** mode, or the **Vector Control** modes (Sensorless or Feedback).

Note: *This setting may not be higher than the **Maximum Frequency** ([F011](#)) setting.*

Direct Access Number — F009Parameter Type — **Numerical**Factory Default — **(ASD-Dependent)**Changeable During Run — **Yes**

Minimum — 0.1

Maximum — 6000

Units — Seconds

Direct Access Number — F010Parameter Type — **Numerical**Factory Default — **(ASD-Dependent)**Changeable During Run — **Yes**

Minimum — 0.1

Maximum — 6000

Units — Seconds

Direct Access Number — F011Parameter Type — **Numerical**Factory Default — **60.0**Changeable During Run — **No**

Minimum — 30.0

Maximum — 299.0

Units — Hz

Direct Access Number — F012Parameter Type — **Numerical**Factory Default — **(ASD-Dependent)**Changeable During Run — **Yes**

Minimum — 0.0

Maximum — **Max. Freq. (F011)**

Units — Hz

F013

F015

Lower-Limit Frequency

Program ⇒ Fundamental 1

This parameter sets the lowest frequency that the ASD will accept as a frequency command or frequency setpoint. The ASD will output frequencies lower than the **Lower-Limit Frequency** when accelerating to the lower-limit or decelerating to a stop. Frequencies below the **Lower-Limit** may also be output when operating in the **PID Control** mode, **Torque Control** mode, or the **Vector Control** modes (Sensorless or Feedback).

Base Frequency 1

Program ⇒ Fundamental 1

The **Base Frequency 1** setting is the frequency at which the output voltage of the ASD reaches its maximum setting. The **Base Frequency Voltage 1** parameter is set at F409.

For proper motor operation, the **Base Frequency** should be set for the name-plated frequency of the motor.

V/f Pattern

Program ⇒ Fundamental 1

This function establishes the relationship between the output frequency and the output voltage.

The **Automatic Torque Boost** and the **Sensorless Vector Control** selections use the motor tuning parameters of the ASD to properly configure the ASD for the motor being used. If **Load Reactors** or **Long Lead Filters** are used, or if the capacity of the ASD is greater than the motor, manual tuning of the motor parameters may be required for optimum performance.

Settings:

- 0 — Constant Torque
- 1 — Variable Torque
- 2 — Automatic Torque Boost
- 3 — Sensorless Vector Control (Speed)
- 5 — V/f 5-Point Curve
- 6 — PM Drive
- 7 — PG Feedback Vector Control (Speed)
- 9 — Auto Power Save
- 10 — Dynamic Power Save

Note: When operating in the **Vector Control** mode the carrier frequency should be set to 2.2 kHz or above.

Direct Access Number — F013Parameter Type — **Numerical**Factory Default — **0.00**Changeable During Run — **Yes**

Minimum — 0.00

Maximum — **Upper-Limit (F012)**

Units — Hz

Direct Access Number — F014Parameter Type — **Numerical**Factory Default — **60.0**Changeable During Run — **Yes**

Minimum — 0.0

Maximum — 299.0

Units — Hz

Direct Access Number — F015Parameter Type — **Selection List**Factory Default — **Variable Torque**Changeable During Run — **No**

F016


F017

Manual Torque Boost 1

Program ⇒ Fundamental 1

The **Manual Torque Boost 1** function is used to increase the low frequency torque for high-inertia loads by increasing the output voltage at frequencies below ½ of the **Base Frequency 1** (F014) setting.

The value programmed as a boost percentage establishes an output voltage vs. output frequency relationship to be used to start the motor or to provide smoother operation.

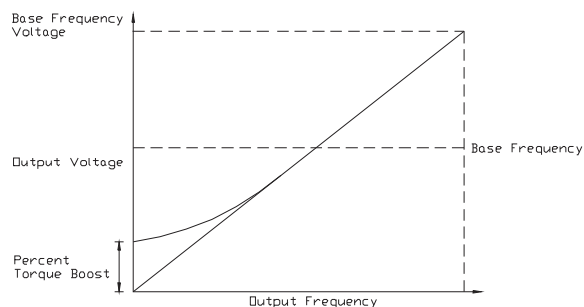

Note: Setting an excessive **Torque Boost** level may cause nuisance tripping and mechanical stress to loads.

Soft Stall Selection

Program ⇒ Protection

This parameter is used to protect the motor from an over-current condition by automatically reducing the output frequency when approaching an overload condition.

The **Overload/Stall** setting and the type of motor being used is selected here to better match the application.

This parameter setting may extend the **Over-Voltage Stall** time settings.

Settings:

- 0 — Overload Trip without Stall
- 1 — Overload Trip with Stall
- 2 — No Overload without Stall
- 3 — Stall Only
- 4 — V/f Motor-Overload without Stall
- 5 — V/f Motor-Overload with Stall
- 6 — V/f Motor-No Overload without Stall
- 7 — V/f Motor-Stall Only

Direct Access Number — F016Parameter Type — **Numerical**Factory Default — **(ASD-Dependent)**Changeable During Run — **Yes**

Minimum — 0.0

Maximum — 30.0

Units — %

Direct Access Number — F017Parameter Type — **Selection List**Factory Default — **O/L Trip With Stall**Changeable During Run — **Yes**

F018

F019

Preset Speed 1

Program ⇒ Preset Speeds

Up to 15 output frequency values that fall within the **Lower-Limit** and the **Upper-Limit** range may be programmed into the ASD and output as a **Preset Speed**. This parameter assigns an output frequency to binary number 0001 and is identified as **Preset Speed 1**. The binary number is applied to **S1 – S4** of the **Terminal Board** to output the **Preset Speed**.

Perform the following setup to allow the system to receive **Preset Speed** control input at the **S1 – S4** terminals:

1. Program ⇒ Utility Group ⇒ Command Mode ⇒ **Terminal Block**.
2. Program ⇒ Input Terminals ⇒ **S1** (Set to Preset Speed 1; LSB of 4-bit count). Repeat for **S2 – S4** (MSB of 4-bit count) as **Preset Speed 2 – 4**, respectively (All set to Normally Open).
3. Program ⇒ Preset Speeds ⇒ **Preset Speed 1** (Set an output frequency as Preset Speed 1; repeat for Preset Speeds 2 – 15 as required).
4. Place the system in the **Remote** mode (Local/Remote LED Off).
5. Provide a **Run** command (Connect F and/or R to CC).

Connect **S1** to **CC** to run **Preset Speed 1** (S1 to CC = 0001 binary).

With **S1 – S4** configured to output **Preset Speeds** (F115 – F118), 0001 – 1111 may be applied to **S1 – S4** of the **Terminal Board** to run the associated **Preset Speed**.

If bidirectional operation is required, **F** and **R** must be connected to **CC**.

With **S1** being the least significant bit of a binary count, the **S1 – S4** settings will produce the programmed speed settings as indicated in the **Preset Speed Truth Table** to the right.

Direct Access Number — F018

Parameter Type — **Numerical**

Factory Default — **0.0**

Changeable During Run — **Yes**

Minimum — **Lower-Limit (F013)**

Maximum — **Upper-Limit (F012)**

Units — Hz

Preset Speed Truth Table

Preset	S4 MSB	S3	S2	S1 LSB	Output
1	0	0	0	1	F018
2	0	0	1	0	F019
3	0	0	1	1	F020
4	0	1	0	0	F021
5	0	1	0	1	F022
6	0	1	1	0	F023
7	0	1	1	1	F024
8	1	0	0	0	F287
9	1	0	0	1	F288
10	1	0	1	0	F289
11	1	0	1	1	F290
12	1	1	0	0	F291
13	1	1	0	1	F292
14	1	1	1	0	F293
15	1	1	1	1	F294

Note: 1 = Terminal connected to CC.

Preset Speed 2

Program ⇒ Preset Speeds

This parameter assigns an output frequency to binary number 0010 and is identified as **Preset Speed 2**. The binary number is applied to **S1 – S4** of the **Terminal Board** to output the **Preset Speed** (see F018 for more information on this parameter).

Direct Access Number — F019

Parameter Type — **Numerical**

Factory Default — **0.0**

Changeable During Run — **Yes**

Minimum — **Lower-Limit (F013)**

Maximum — **Upper-Limit (F012)**

Units — Hz

F020

F024

<p>Preset Speed 3</p> <p>Program ⇒ Preset Speeds</p> <p>This parameter assigns an output frequency to binary number 0011 and is identified as Preset Speed 3. The binary number is applied to S1 – S4 of the Terminal Board to output the Preset Speed (see F018 for more information on this parameter).</p>	<p>Direct Access Number — F020</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>Preset Speed 4</p> <p>Program ⇒ Preset Speeds</p> <p>This parameter assigns an output frequency to binary number 0100 and is identified as Preset Speed 4. The binary number is applied to S1 – S4 of the Terminal Board to output the Preset Speed (see F018 for more information on this parameter).</p>	<p>Direct Access Number — F021</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>Preset Speed 5</p> <p>Program ⇒ Preset Speeds</p> <p>This parameter assigns an output frequency to binary number 0101 and is identified as Preset Speed 5. The binary number is applied to S1 – S4 of the Terminal Board to output the Preset Speed (see F018 for more information on this parameter).</p>	<p>Direct Access Number — F022</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>Preset Speed 6</p> <p>Program ⇒ Preset Speeds</p> <p>This parameter assigns an output frequency to binary number 0110 and is identified as Preset Speed 6. The binary number is applied to S1 – S4 of the Terminal Board to output the Preset Speed (see F018 for more information on this parameter).</p>	<p>Direct Access Number — F023</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>Preset Speed 7</p> <p>Program ⇒ Preset Speeds</p> <p>This parameter assigns an output frequency to binary number 0111 and is identified as Preset Speed 7. The binary number is applied to S1 – S4 of the Terminal Board to output the Preset Speed (see F018 for more information on this parameter).</p>	<p>Direct Access Number — F024</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>

Automatic Function Selection

No Path — Direct Access Only

This parameter setting is used to configure multiple parameters with the setting of only one parameter. From the selection below multiple parameters may be set as indicated in the table.

Once set, the selected configuration is placed in effect and remains in effect until this parameter is changed or the individual settings are changed.

Set this parameter to **Disable** to set these parameters individually.

*Note: After performing the desired selection the EOI display returns to **Disabled** though the selected function has been carried out (i.e., Without this, if selection 1 is performed, F004 and F207 would retain the RR terminal setting regardless of attempts to change the settings individually).*

Settings:

- 0 — Disabled
- 1 — RR
- 2 — V/I
- 3 — RR or VI/II (V/I) Switched via Terminal Board
- 4 — Keypad = Frequency/Terminal Board = Command
- 5 — Keypad = Frequency and Command

Direct Access Number — F040

Parameter Type — Selection List

Factory Default — Disabled

Changeable During Run — No

Related Parameters	Default Settings	User Settings					5-Keypad Freq/CMD
		0-Disabled	1-RR	2-V/I	3-RR or V/I via TB	4-Keypad/ Freq. CMD/TB	
CMOD F003	Terminal Board	N/C				Terminal Board	Keypad
FMOD1 F004	RR	N/C	RR	N/C	RR	Keypad	
S3 Terminal F117	Preset Speed 3	N/C			Freq. Ref. Priority	N/C	
Freq. Priority F200	Terminal Board	N/C	Terminal Board				
V/I Setup F201	0.0%	N/C		20.0%		N/C	
FMOD2 F207	V/I	N/C	RR	V/I		Keypad	

N/C = No Change — the setting remains as it was before setting parameter F040.

F092**F102****User Units Selection**

Program ⇒ Utility Group

This parameter is used to select the displayed unit of measure (relative to the output speed) for the commodity being processed by the ASD.

Settings:

- 0 — UDU
- 1 — RPM
- 2 — PSI
- 3 — CFM
- 4 — LBFT

Direct Access Number — F092Parameter Type — **Selection List**Factory Default — **UDU**Changeable During Run — **Yes****Low-Speed Signal Output Frequency**

No Path — Direct Access Only

The **Low-Speed Signal Output Frequency** parameter sets a frequency threshold that activates the assigned output terminal for the duration that the ASD output is at or above this setting (see [Table 7 on pg. 189](#) for the available output assignments).

Direct Access Number — F100Parameter Type — **Numerical**Factory Default — **0.00**Changeable During Run — **Yes**

Minimum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

Speed Reach Frequency

Program ⇒ Output Terminals

The **Speed Reach Frequency** sets a frequency threshold that, when reached or is within the bandwidth specified by parameter [F102](#), activates the assigned output terminal for the duration that the ASD output is within the bandwidth specified (see [Table 7 on pg. 189](#) for the available output assignments).

Direct Access Number — F101Parameter Type — **Numerical**Factory Default — **0.00**Changeable During Run — **Yes**

Minimum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

Speed Reach Detection Band

Program ⇒ Output Terminals

This parameter sets the bandwidth of the **Speed Reach Frequency (F101)** setting.

Direct Access Number — F102Parameter Type — **Numerical**Factory Default — **2.50**Changeable During Run — **Yes**

Minimum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

F105

F109

Direction Priority

Program ⇒ Input Terminals

The **Direction Priority** setting determines the disposition of the ASD if the **F** and **R** control terminals are activated simultaneously.

Settings:


- 0 — Reverse
- 1 — Suspend

The waveforms shown depict the motor response for all combinations of the **F** and **R** terminal settings if the **Reverse** option is chosen.

The **Suspend** setting will decelerate the motor to a stop regardless of the rotation direction when both the **F** and **R** control terminals are activated.

Direct Access Number — F105Parameter Type — **Selection List**Factory Default — **Suspend**Changeable During Run — **No**

Simultaneous F and R activation.

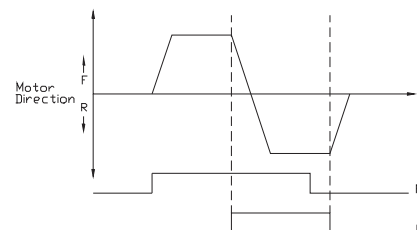**Input Terminal Priority**

Program ⇒ Input Terminals

This parameter is used to allow the **Jog** and **DC Injection Braking** input signals to control the ASD when received via the **Terminal Board** even though the system is in the **Local** mode.

With this parameter enabled, a **Jog** command or a **DC Injection Braking** command received from the **Terminal Board** will receive priority over commands from the **EOI**.

See [F260](#) for more information on using the **Jog** function.

See [F250 – F252](#) for more information on **DC Injection Braking**.

Settings:

- 0 — Disabled
- 1 — Enabled

Direct Access Number — F106Parameter Type — **Selection List**Factory Default — **Disabled**Changeable During Run — **No****Option V/I Terminal Voltage/Current Selection**

No Path — Direct Access Only

This parameter is used to set the **AI2** input terminal to receive either current or voltage as a control signal.

Note: *The Expansion IO Card Option 2 Option Board (P/N ETB004Z) is required to use this terminal.*

See the *Expansion IO Card Option 2 Instruction Manual* (P/N 58686) for more information on the function of this terminal.

Settings:

- 0 — Voltage Input
- 1 — Current Input

Direct Access Number — F109Parameter Type — **Selection List**Factory Default — **Voltage Input**Changeable During Run — **No**

F110

F114

<p>Always ON 1 Terminal 1</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to set the functionality of the virtual discrete input terminal ON. As a virtual terminal, the ON control terminal exists only in memory and is considered to always be in its True (or connected to CC) state.</p> <p>It is often practical to assign a function to this terminal that the user desires to be maintained regardless of external conditions or operations.</p> <p>This parameter sets the programmable ON terminal to any of the user-selectable functions listed in Table 4 on pg. 185.</p>	<p>Direct Access Number — F110</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Unassigned</p> <p>Changeable During Run — No</p>
<p>F Terminal</p> <p>Program ⇒ Input Terminals</p> <p>This parameter is used to set the functionality of the F discrete input terminal. In addition, this input terminal must be specified as Normally Open or Normally Closed.</p> <p>This parameter sets the programmable F terminal to any of the user-selectable functions listed in Table 4 on pg. 185.</p>	<p>Direct Access Number — F111</p> <p>Parameter Type — Selection List</p> <p>Factory Default—Forward</p> <p>Changeable During Run — No</p>
<p>R Terminal</p> <p>Program ⇒ Input Terminals</p> <p>This parameter is used to set the functionality of the R discrete input terminal. In addition, this input terminal must be specified as Normally Open or Normally Closed.</p> <p>This parameter sets the programmable R terminal to any of the user-selectable functions listed in Table 4 on pg. 185.</p>	<p>Direct Access Number — F112</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Reverse</p> <p>Changeable During Run — No</p>
<p>ST Terminal</p> <p>Program ⇒ Input Terminals</p> <p>This parameter is used to set the functionality of the ST discrete input terminal. In addition, this input terminal must be specified as Normally Open or Normally Closed.</p> <p>This parameter sets the programmable ST terminal to any of the user-selectable functions listed in Table 4 on pg. 185.</p>	<p>Direct Access Number — F113</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Standby</p> <p>Changeable During Run — No</p>
<p>RES Terminal</p> <p>Program ⇒ Input Terminals</p> <p>This parameter is used to set the functionality of the RES discrete input terminal. In addition, this input terminal must be specified as Normally Open or Normally Closed.</p> <p>This parameter sets the programmable RES terminal to any of the user-selectable functions listed in Table 4 on pg. 185.</p>	<p>Direct Access Number — F114</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Reset</p> <p>Changeable During Run — No</p>

F115

F119

<p>S1 Terminal</p> <p>Program ⇒ Input Terminals</p> <p>This parameter is used to set the functionality of the S1 discrete input terminal.</p> <p>In addition, this input terminal must be specified as Normally Open or Normally Closed.</p> <p>This parameter sets the programmable S1 terminal to any of the user-selectable functions listed in Table 4 on pg. 185.</p>	<p>Direct Access Number — F115</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Fire Speed</p> <p>Changeable During Run — No</p>
<p>S2 Terminal</p> <p>Program ⇒ Input Terminals</p> <p>This parameter is used to set the functionality of the S2 discrete input terminal.</p> <p>In addition, this input terminal must be specified as Normally Open or Normally Closed.</p> <p>This parameter sets the programmable S2 terminal to any of the user-selectable functions listed in Table 4 on pg. 185.</p>	<p>Direct Access Number — F116</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Preset Speed 2</p> <p>Changeable During Run — No</p>
<p>S3 Terminal</p> <p>Program ⇒ Input Terminals</p> <p>This parameter is used to set the functionality of the S3 discrete input terminal.</p> <p>In addition, this input terminal must be specified as Normally Open or Normally Closed.</p> <p>This parameter sets the programmable S3 terminal to any of the user-selectable functions listed in Table 4 on pg. 185.</p>	<p>Direct Access Number — F117</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Damper Feedback</p> <p>Changeable During Run — No</p>
<p>S4 Terminal</p> <p>Program ⇒ Input Terminals</p> <p>This parameter is used to set the functionality of the S4 discrete input terminal.</p> <p>In addition, this input terminal must be specified as Normally Open or Normally Closed.</p> <p>This parameter sets the programmable S4 terminal to any of the user-selectable functions listed in Table 4 on pg. 185.</p>	<p>Direct Access Number — F118</p> <p>Parameter Type — Selection List</p> <p>Factory Default — E-Off</p> <p>Changeable During Run — No</p>
<p>LI1 Terminal</p> <p>Program ⇒ Input Terminals</p> <p>This parameter is used to set the functionality of the LI1 discrete input terminal.</p> <p>In addition, this input terminal must be specified as Normally Open or Normally Closed.</p> <p>This setting assigns the function of the programmable LI1 terminal to any of the user-selectable functions listed in Table 4 on pg. 185.</p> <p><i>Note: The Expansion IO Card Option 1 Option Board (P/N ETB003Z) is required to use this terminal.</i></p> <p>See the <i>Expansion IO Card Option 1 Instruction Manual</i> (P/N 58685) for more information on the function of this terminal.</p>	<p>Direct Access Number — F119</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Unassigned</p> <p>Changeable During Run — No</p>

F120**F122****LI2 Terminal**

Program ⇒ Input Terminals

This parameter is used to set the functionality of the **LI2** discrete input terminal.

In addition, this input terminal must be specified as **Normally Open** or **Normally Closed**.

This setting assigns the function of the programmable **LI2** terminal to any of the user-selectable functions listed in [Table 4 on pg. 185](#).

Note: The Expansion IO Card Option 1 Option Board (P/N ETB003Z) is required to use this terminal.

See the *Expansion IO Card Option 1 Instruction Manual* (P/N 58685) for more information on the function of this terminal.

Direct Access Number — F120

Parameter Type — **Selection List**

Factory Default — **Unassigned**

Changeable During Run — **No**

LI3 Terminal

Program ⇒ Input Terminals

This parameter is used to set the functionality of the **LI3** discrete input terminal.

In addition, this input terminal must be specified as **Normally Open** or **Normally Closed**.

This setting assigns the function of the programmable **LI3** terminal to any of the user-selectable functions listed in [Table 4 on pg. 185](#).

Note: The Expansion IO Card Option 1 Option Board (P/N ETB003Z) is required to use this terminal.

See the *Expansion IO Card Option 1 Instruction Manual* (P/N 58685) for more information on the function of this terminal.

Direct Access Number — F121

Parameter Type — **Selection List**

Factory Default — **Unassigned**

Changeable During Run — **No**

LI4 Terminal

Program ⇒ Input Terminals

This parameter is used to set the functionality of the **LI4** discrete input terminal.

In addition, this input terminal must be specified as **Normally Open** or **Normally Closed**.

This setting assigns the function of the programmable **LI4** terminal to any of the user-selectable functions listed in [Table 4 on pg. 185](#).

Note: The Expansion IO Card Option 1 Option Board (P/N ETB003Z) is required to use this terminal.

See the *Expansion IO Card Option 1 Instruction Manual* (P/N 58685) for more information on the function of this terminal.

Direct Access Number — F122

Parameter Type — **Selection List**

Factory Default — **Unassigned**

Changeable During Run — **No**

F123

F125

LI5 Terminal

Program ⇒ Input Terminals

This parameter is used to set the functionality of the **LI5** discrete input terminal.

In addition, this input terminal must be specified as **Normally Open** or **Normally Closed**.

This setting assigns the function of the programmable **LI5** terminal to any of the user-selectable functions listed in [Table 4 on pg. 185](#).

Note: The Expansion IO Card Option 2 Option Board (P/N ETB004Z) is required to use this terminal.

See the *Expansion IO Card Option 2 Instruction Manual* (P/N 58686) for more information on the function of this terminal.

Direct Access Number — F123

Parameter Type — **Selection List**

Factory Default — **Unassigned**

Changeable During Run — **No**

LI6 Terminal

Program ⇒ Input Terminals

This parameter is used to set the functionality of the **LI6** discrete input terminal.

In addition, this input terminal must be specified as **Normally Open** or **Normally Closed**.

This setting assigns the function of the programmable **LI6** terminal to any of the user-selectable functions listed in [Table 4 on pg. 185](#).

Note: The Expansion IO Card Option 2 Option Board (P/N ETB004Z) is required to use this terminal.

See the *Expansion IO Card Option 2 Instruction Manual* (P/N 58686) for more information on the function of this terminal.

Direct Access Number — F124

Parameter Type — **Selection List**

Factory Default — **Unassigned**

Changeable During Run — **No**

LI7 Terminal

Program ⇒ Input Terminals

This parameter is used to set the functionality of the **LI7** discrete input terminal.

In addition, this input terminal must be specified as **Normally Open** or **Normally Closed**.

This setting assigns the function of the programmable **LI7** terminal to any of the user-selectable functions listed in [Table 4 on pg. 185](#).

Note: The Expansion IO Card Option 2 Option Board (P/N ETB004Z) is required to use this terminal.

See the *Expansion IO Card Option 2 Instruction Manual* (P/N 58686) for more information on the function of this terminal.

Direct Access Number — F125

Parameter Type — **Selection List**

Factory Default — **Unassigned**

Changeable During Run — **No**

F126

F132

LI8 Terminal

Program ⇒ Input Terminals

This parameter is used to set the functionality of the **LI8** discrete input terminal.

In addition, this input terminal must be specified as **Normally Open** or **Normally Closed**.

This setting assigns the function of the programmable **LI8** terminal to any of the user-selectable functions listed in [Table 4 on pg. 185](#).

Note: The *Expansion IO Card Option 2 Option Board (P/N ETB004Z)* is required to use this terminal.

See the *Expansion IO Card Option 2 Instruction Manual (P/N 58686)* for more information on the function of this terminal.

Direct Access Number — F126

Parameter Type — **Selection List**

Factory Default — **Unassigned**

Changeable During Run — **No**

OUT1 Terminal

Program ⇒ Output Terminals

This parameter is used to set the functionality of the **OUT1** discrete output terminals **O1A** and **O1B**.

The **O1A** and **O1B** (OUT1) output terminals change states (open or close) as a function of a user-selected event. See [Table 7 on pg. 189](#) for listing the possible assignments for the **OUT1** terminals.

In addition, the output terminals must be specified as **Normally Open** or **Normally Closed**.

Direct Access Number — F130

Parameter Type — **Selection List**

Factory Default — **Damper Command**

Changeable During Run — **No**

OUT2 Terminal

Program ⇒ Output Terminals

This parameter is used to set the functionality of the **OUT2** discrete output terminals **O2A** and **O2B**.

The **O2A** and **O2B** (OUT2) output terminals change states (open or close) as a function of a user-selected event. See [Table 7 on pg. 189](#) for listing the possible assignments for the **OUT2** terminals.

In addition, the output terminals must be specified as **Normally Open** or **Normally Closed**.

Direct Access Number — F131

Parameter Type — **Selection List**

Factory Default — **RCH (Acc/Dec Complete)**

Changeable During Run — **No**

FL Terminal

Program ⇒ Output Terminals

This parameter is used to set the functionality of the **FL** output terminals to 1 of the functions listed in [Table 7 on pg. 189](#).


In addition, the output terminals must be specified as **Normally Open** or **Normally Closed**.

Direct Access Number — F132

Parameter Type — **Selection List**

Factory Default — **Fault (All)**

Changeable During Run — **No**



F133

F135

OUT3 Terminal

Program ⇒ Output Terminals

This parameter is used to set the functionality of the **OUT3** discrete output terminal.

In addition, this input terminal must be specified as **Normally Open** or **Normally Closed**.

This setting assigns the function of the programmable **OUT3** terminal to any of the user-selectable functions listed in [Table 7 on pg. 189](#).

Note: *The Expansion IO Card Option 1 Option Board (P/N ETB003Z) is required to use this terminal.*

See the *Expansion IO Card Option 1 Instruction Manual* (P/N 58685) for more information on the function of this terminal.

Direct Access Number — F133

Parameter Type — **Selection List**

Factory Default — **Always OFF**

Changeable During Run — **No**

OUT4 Terminal

Program ⇒ Output Terminals

This parameter is used to set the functionality of the **OUT4** discrete output terminal.

In addition, this input terminal must be specified as **Normally Open** or **Normally Closed**.

This setting assigns the function of the programmable **OUT4** terminal to any of the user-selectable functions listed in [Table 7 on pg. 189](#).

Note: *The Expansion IO Card Option 1 Option Board (P/N ETB003Z) is required to use this terminal.*

See the *Expansion IO Card Option 1 Instruction Manual* (P/N 58685) for more information on the function of this terminal.

Direct Access Number — F134

Parameter Type — **Selection List**

Factory Default — **Always OFF**

Changeable During Run — **No**

R1 Terminal

Program ⇒ Output Terminals

This parameter is used to set the functionality of the **R1** discrete output terminal.

In addition, this input terminal must be specified as **Normally Open** or **Normally Closed**.

This setting assigns the function of the programmable **R1** terminal to any of the user-selectable functions listed in [Table 7 on pg. 189](#).

Note: *The Expansion IO Card Option 1 Option Board (P/N ETB003Z) is required to use this terminal.*

See the *Expansion IO Card Option 1 Instruction Manual* (P/N 58685) for more information on the function of this terminal.

Direct Access Number — F135

Parameter Type — **Selection List**

Factory Default — **Always OFF**

Changeable During Run — **No**

F136

F168

OUT5 Terminal

Program ⇒ Output Terminals

This parameter is used to set the functionality of the **OUT5** discrete output terminal.

In addition, this output terminal must be specified as **Normally Open** or **Normally Closed**.

This setting assigns the function of the programmable **OUT5** terminal to any of the user-selectable functions listed in [Table 7 on pg. 189](#).

Note: *The Expansion IO Card Option 2 Option Board (P/N ETB004Z) is required to use this terminal.*

See the *Expansion IO Card Option 2 Instruction Manual* (P/N 58686) for more information on the function of this terminal.

Direct Access Number — F136

Parameter Type — Selection List

Factory Default — Always Off

Changeable During Run — No

OUT6 Terminal

Program ⇒ Output Terminals

This parameter is used to set the functionality of the **OUT6** discrete output terminal.

In addition, this output terminal must be specified as **Normally Open** or **Normally Closed**.

This setting assigns the function of the programmable **OUT6** terminal to any of the user-selectable functions listed in [Table 7 on pg. 189](#).

Note: *The Expansion IO Card Option 2 Option Board (P/N ETB004Z) is required to use this terminal.*

See the *Expansion IO Card Option 2 Instruction Manual* (P/N 58686) for more information on the function of this terminal.

Direct Access Number — F137

Parameter Type — Selection List

Factory Default — Always Off

Changeable During Run — No

R2 Terminal

Program ⇒ Output Terminals

This parameter is used to set the functionality of the **R2** discrete output terminal.

In addition, this output terminal must be specified as **Normally Open** or **Normally Closed**.

This setting assigns the function of the programmable **R2** terminal to any of the user-selectable functions listed in [Table 7 on pg. 189](#).

Note: *The Expansion IO Card Option 2 Option Board (P/N ETB004Z) is required to use this terminal.*

See the *Expansion IO Card Option 2 Instruction Manual* (P/N 58686) for more information on the function of this terminal.

Direct Access Number — F138

Parameter Type — Selection List

Factory Default — Always Off

Changeable During Run — No

Output Terminal 10 (R3) Function

No Path — Direct Access Only

This parameter sets the functionality of the **R3** output terminal to any of the user-selectable functions listed in [Table 7 on pg. 189](#).

In addition, the output terminals must be specified as **Normally Open** or **Normally Closed**.

See the instruction manual for the **16-Bit BIN/BCD** option for more information on the function of this terminal.

Direct Access Number — F168

Parameter Type — Selection List

Factory Default — OFF

Changeable During Run — No

F169

F172

Output Terminal 11 (R4) Function

No Path — Direct Access Only

This parameter sets the functionality of the **R4** output terminal to any of the user-selectable functions listed in [Table 7 on pg. 189](#).

In addition, the output terminals must be specified as **Normally Open** or **Normally Closed**.

See the instruction manual for the **16-Bit BIN/BCD** option for more information on the function of this terminal.

Direct Access Number — F169

Parameter Type — **Selection List**

Factory Default — **OFF**

Changeable During Run — **No**

Base Frequency 2

Program ⇒ Fundamental 2

The **Base Frequency 2** setting is the frequency at which the output voltage of the ASD reaches its maximum setting. The **Base Frequency Voltage 2** parameter is set at [F171](#).

This parameter is used only when the parameters for motor number **2** are configured and selected. Motor number **2** may be selected by a properly configured input terminal (see [Table 4 on pg. 185](#)).

For proper motor operation, the **Base Frequency** should be set for the name-plated frequency of the motor.

Direct Access Number — F170

Parameter Type — **Numerical**

Factory Default — **60.0**

Changeable During Run — **Yes**

Minimum — 25.0

Maximum — 299.0

Units — Hz

Base Frequency Voltage 2

Program ⇒ Fundamental 2

The **Base Frequency Voltage 2** setting is the **Motor 2** output voltage at the **Base Frequency** ([F170](#)). Regardless of the programmed value, the output voltage cannot be higher than the input voltage.

The actual output voltage will be influenced by the input voltage of the ASD and the **Voltage Compensation** setting ([F307](#)).

This parameter is used only when the parameters for motor number **2** are configured and selected. Motor number **2** may be selected by a properly configured input terminal (see [Table 4 on pg. 185](#)).

Direct Access Number — F171

Parameter Type — **Numerical**

Factory Default — **(ASD-Dependent)**

Changeable During Run — **Yes**

Minimum — 50.0

Maximum — 660.0

Units — Volts

Manual Torque Boost 2

Program ⇒ Fundamental 2

The **Manual Torque Boost 2** function is used to increase the low frequency torque for high inertia loads by increasing the output voltage at frequencies below ½ of the **Base Frequency 2** setting ([F170](#)).

See parameter [F016](#) (Manual Torque Boost 1) for an explanation of torque boost.

This parameter is used only when the parameters for motor number **2** are configured and selected. Motor number **2** may be selected by a properly configured input terminal (see [Table 4 on pg. 185](#)).

Direct Access Number — F172

Parameter Type — **Numerical**

Factory Default — **(ASD-Dependent)**

Changeable During Run — **Yes**

Minimum — 0.0

Maximum — 30.0

Units — %

F173

Motor Overload Protection Level 2

No Path — Direct Access Only

The **Motor 2 Overload Protection Level** parameter specifies the motor overload current level for motor number 2. This value is entered as either a percentage of the full load rating of the ASD or as the FLA of the motor.

The unit of measurement for this parameter may be set to **Amps** (A/V) or it may be set as a percentage of the ASD rating. The name-plated FLA of the motor may be entered directly when **Amps** is selected as the unit of measurement (see F701 to change the display unit).

The **Motor 2 Overload Protection Level** setting will be displayed in **Amps** if the **EOI** display units are set to **A/V** rather than **%**.

Direct Access Number — F173

Parameter Type — Numerical

Factory Default — 100

Changeable During Run — Yes

Minimum — 10

Maximum — 100

Units — %

V/f 5-Point Setting Frequency 1

No Path — Direct Access Only

The **V/f 5-Point Setting Frequency 1** setting establishes the frequency that is to be associated with the voltage setting of F191 (V/f 5-Point Setting Voltage 1).

The V/f 5-point settings define a volts per hertz relationship for the startup output of the ASD.

To enable this function, set the **V/f Pattern** (F015) selection to the **V/f 5-Point Curve** setting.

V/f Curves may be useful in starting high inertia loads such as rotary drum vacuum filters.

Direct Access Number — F190

Parameter Type — Numerical


Factory Default — 0.00

Changeable During Run — No

Minimum — 0.00

Maximum — **Max. Freq.** (F011)

Units — Hz

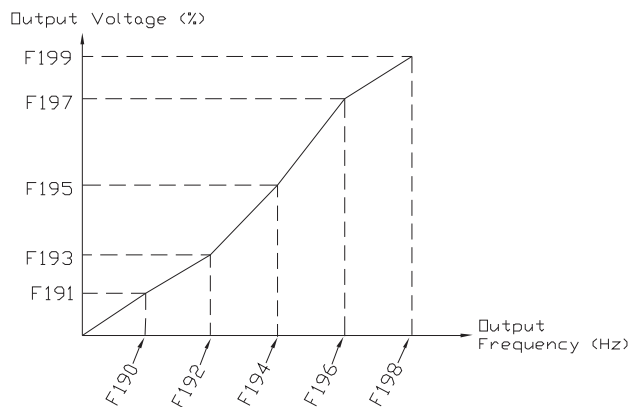

F191

F192

V/f 5-Point Setting Voltage 1

No Path — Direct Access Only

The **V/f 5-Point Setting Voltage 1** establishes the output voltage level that is to be associated with the frequency setting of **F190** (V/f 5-Point Setting Frequency 1).


The **F701** parameter setting will determine if the on-screen selection for this parameter appears in the form of a Voltage (V) or as a Percentage (%) of the ASD rating.

If using **Voltage** as a unit of measure and with no voltage correction (**F307** Disabled), the limit of the on-screen display value for this parameter is 200 volts for the 230-volt ASD and 400 volts for the 460-volt ASD.

The actual output voltage is scaled to the maximum EOI display values (e.g., a 100-volt EOI display corresponds to a 115-volt actual output for the 230-volt ASD — ½ of the full display range).

If using **%** as a unit of measure and with no voltage correction (**F307** Disabled), the ASD output voltage will be the percentage setting times 230 for the 230-volt unit (or % times 460 volts for the 460-volt unit).

See **F190** for additional information on this setting.

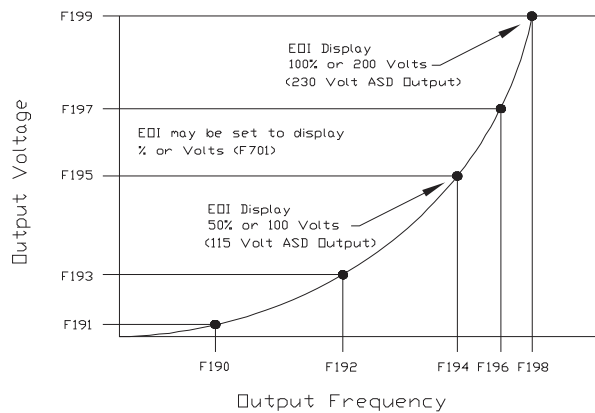

Direct Access Number — **F191**

Parameter Type — **Numerical**

Factory Default — **0.0**

Changeable During Run — **No**

Minimum — 0.0

Maximum — 100.0

Units — V or % (**F701**)

V/f 5-Point Setting Frequency 2

No Path — Direct Access Only

The **V/f 5-Point Setting Frequency 2** sets the frequency to be associated with the voltage setting of parameter **F193** (V/f 5-Point Setting Voltage 2).

See **F190** and **F191** for additional information on this setting.

Direct Access Number — **F192**

Parameter Type — **Numerical**

Factory Default — **0.00**

Changeable During Run — **No**

Minimum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

F193

F197

<p>V/f 5-Point Setting Voltage 2</p> <p>No Path — Direct Access Only</p> <p>The V/f 5-Point Setting Voltage 2 establishes the output voltage level that is to be associated with the frequency setting of F192 (V/f 5-Point Setting Frequency 2).</p> <p>The F701 parameter setting will determine if the selection for this parameter appears in the form of a Voltage (V) or as a Percentage (%) of the ASD rating.</p> <p>The default setting is %.</p> <p>See F190 and F191 for additional information on this setting.</p>	<p>Direct Access Number — F193</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — No</p> <p>Minimum — 0.0</p> <p>Maximum — 100.0</p> <p>Units — V or % (F701)</p>
<p>V/f 5-Point Setting Frequency 3</p> <p>No Path — Direct Access Only</p> <p>The V/f 5-Point Setting Frequency 3 sets the frequency to be associated with the voltage setting of parameter F195 (V/f 5-Point Setting Voltage 3).</p> <p>See F190 and F191 for additional information on this setting.</p>	<p>Direct Access Number — F194</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — No</p> <p>Minimum — 0.00</p> <p>Maximum — Max. Freq. (F011)</p> <p>Units — Hz</p>
<p>V/f 5-Point Setting Voltage 3</p> <p>No Path — Direct Access Only</p> <p>The V/f 5-Point Setting Voltage 3 establishes the output voltage level that is to be associated with the frequency setting of F194 (V/f 5-Point Setting Frequency 3).</p> <p>The F701 parameter setting will determine if the selection for this parameter appears in the form of a Voltage (V) or as a Percentage (%) of the ASD rating.</p> <p>The default setting is %.</p> <p>See F190 and F191 for additional information on this setting.</p>	<p>Direct Access Number — F195</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — No</p> <p>Minimum — 0.0</p> <p>Maximum — 100.0</p> <p>Units — V or % (F701)</p>
<p>V/f 5-Point Setting Frequency 4</p> <p>No Path — Direct Access Only</p> <p>The V/f 5-Point Setting Frequency 4 sets the frequency to be associated with the voltage setting of parameter F197 (V/f 5-Point Setting Voltage 4).</p> <p>See F190 and F191 for additional information on this setting.</p>	<p>Direct Access Number — F196</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — No</p> <p>Minimum — 0.00</p> <p>Maximum — Max. Freq. (F011)</p> <p>Units — Hz</p>
<p>V/f 5-Point Setting Voltage 4</p> <p>No Path — Direct Access Only</p> <p>The V/f 5-Point Setting Voltage 4 establishes the output voltage level that is to be associated with the frequency setting of F196 (V/f 5-Point Setting Frequency 4).</p> <p>The F701 parameter setting will determine if the selection for this parameter appears in the form of a Voltage (V) or as a Percentage (%) of the ASD rating.</p> <p>The default setting is %.</p> <p>See F190 and F191 for additional information on this setting.</p>	<p>Direct Access Number — F197</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — No</p> <p>Minimum — 0.0</p> <p>Maximum — 100.0</p> <p>Units — V or % (F701)</p>

F198

F200

V/f 5-Point Setting Frequency 5

No Path — Direct Access Only

The **V/f 5-Point Setting Frequency 5** sets the frequency to be associated with the voltage setting of parameter **F199** (V/f 5-Point Setting Voltage 5).

See **F190** and **F191** for additional information on this setting.

Direct Access Number — **F198**Parameter Type — **Numerical**Factory Default — **0.00**Changeable During Run — **No**

Minimum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

V/f 5-Point Setting Voltage 5

No Path — Direct Access Only

The **V/f 5-Point Setting Voltage 5** establishes the output voltage level that is to be associated with the frequency setting of **F198** (V/f 5-Point Setting Frequency 5).

The **F701** parameter setting will determine if the selection for this parameter appears in the form of a Voltage (V) or as a Percentage (%) of the ASD rating.

The default setting is %.

See **F190** and **F191** for additional information on this setting.

Direct Access Number — **F199**Parameter Type — **Numerical**Factory Default — **0.0**Changeable During Run — **No**

Minimum — 0.0

Maximum — 100.0

Units — V or % (**F701**)**Frequency Priority Selection**

Program ⇒ Frequency Settings

Either **Frequency Mode 1** or **Frequency Mode 2** may control the output frequency of the ASD. This parameter determines which of the two will control the output frequency and the conditions in which control will be switched from one to the other.

Note: *Frequency Mode is abbreviated as FMOD.*

Settings:


- 0 — FMOD Changed by Terminal Board (Frequency Mode)
- 1 — FMOD (**F208**) (Frequency Mode)

The **Frequency Mode 1** or **Frequency Mode 2** selection specifies the source of the input frequency command signal. These selections are performed at **F004** and **F207**, respectively.

If **FMOD changed by Terminal Board** is selected here, the ASD will follow the control of the discrete input terminal assigned the function of **Frequency Priority**. The discrete terminal **Frequency Priority** will toggle control to and from **Frequency Mode 1** and **Frequency Mode 2** with each activation/deactivation.

If **FMOD (F208)** is selected here, the ASD will follow the control of the **Frequency Mode 1** setting for the duration that the commanded frequency of the **Frequency Mode 1** setting is greater than the setting of **F208**.

If the commanded frequency of the **Frequency Mode 1** setting is less than or equal to the setting of **F208** the ASD will follow the setting of **Frequency Mode 2**.

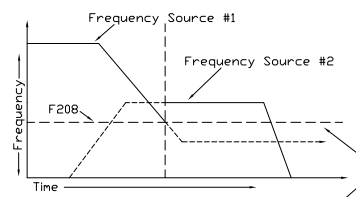Direct Access Number — **F200**Parameter Type — **Selection List**Factory Default — **FMOD (changed by TB)**Changeable During Run — **Yes**

If the frequency command of Frequency Mode 1 is greater than the F208 setting, Frequency Mode 1 has priority over Frequency Mode 2.
If the frequency command of Frequency Mode 1 is equal to or less than the F208 setting, Frequency Mode 2 has priority.

F201

F202

V/I Reference 1

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the isolated **V/I** input terminal when the **V/I** terminal is used as the control input while operating in the **Speed Control** mode or the **Torque Control** mode.

This parameter sets the **V/I** input level that is associated with the **V/I Frequency 1** setting when operating in the **Speed** control mode or is associated with the **V/I Torque Reference 1** setting when operating in the **Torque Control** mode.

Note: See note on pg. 40 for more information on the **V/I** terminal.

V/I Input Speed Control Setup

Perform the following setup to allow the system to receive **Speed** control input at the **V/I** input terminal:

- Set **SW301** of the **Terminal Board** to **Voltage** if using a control voltage or to **Current** if using a control current (see [Figure 9](#) on pg. 22).
- Program ⇒ Utility Group ⇒ Frequency Mode 1 ⇒ **V/I**.
- Program ⇒ Utility Group ⇒ Command Mode ⇒ **Terminal Block**.

Speed Control

Perform the following setup to allow the system to perform **Speed** control from the **V/I** input terminal:

- Set **V/I Frequency 1** (F202).
- Set **V/I Reference 1** (F201) — the input analog signal level that corresponds to the frequency setting at **V/I Frequency 1**.
- Set **V/I Frequency 2** (F204).
- Set **V/I Reference 2** (F203) — the input analog signal level that corresponds to the frequency setting at **V/I Frequency 2**.
- Provide a **Run** command (F and/or R).

Once set, as the **V** input voltage changes or the **I** input current changes, the output frequency of the ASD will vary in accordance with the above settings.

This parameter value is entered as 0% to 100% of the **V/I** input signal range.

Note: When using the isolated **V/I** input terminal the **IICC** terminal must be used as the return (Negative) connection.

Direct Access Number — F201

Parameter Type — Numerical


Factory Default — 0

Changeable During Run — Yes

Minimum — 0

Maximum — 100

Units — %

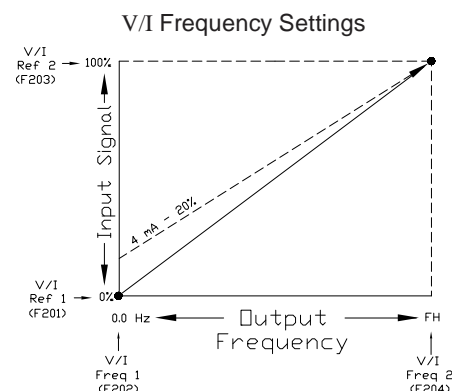

V/I Frequency 1

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the isolated **V/I** input terminal when the **V/I** terminal is used as the control input while operating in the **Speed Control** mode.

This parameter sets **V/I Frequency 1** and is the frequency that is associated with the setting of **V/I Reference 1** when operating in the **Speed Control** mode.

See **V/I Reference 1** (F201) for more information on this setting.

Direct Access Number — F202

Parameter Type — Numerical

Factory Default — 0.00

Changeable During Run — Yes

Minimum — 0.00

Maximum — **Max. Freq.** (F011)

Units — Hz

F203**F204****V/I Reference 2**

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the isolated **V/I** input terminal when the **V/I** terminal is used as the control input while operating in the **Speed Control** mode or the **Torque Control** mode.

This parameter sets the **V/I** input level that is associated with **V/I Frequency 2** when operating in the **Speed** control mode or is associated with the **V/I Torque Reference 2** when operating in the **Torque Control** mode.

This value is entered as 0% to 100% of the **V/I** input signal range.

See **V/I Reference 1** for more information on this setting when used for **Speed** control.

See **V/I Torque Reference 1 (F205)** for more information on this setting when used for **Torque Control**.

Direct Access Number — **F203**

Parameter Type — **Numerical**

Factory Default — **100**

Changeable During Run — **Yes**

Minimum — 0

Maximum — 100

Units — %

V/I Frequency 2

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the isolated **V/I** input terminal when the **V/I** terminal is used as the control input while operating in the **Speed Control** mode.

This parameter sets **V/I Frequency 2** and is the frequency that is associated with the setting of **V/I Reference 2** when operating in the **Speed Control** mode.

See **V/I Reference 1 (F201)** for more information on this setting.

Direct Access Number — **F204**

Parameter Type — **Numerical**

Factory Default — **60.00**

Changeable During Run — **Yes**

Minimum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

F205

F206

V/I Torque Reference 1

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the isolated **V/I** input terminal when the **V/I** terminal is used as the control input while operating in the **Torque Control** mode.

V/I Input Torque Control Setup

Perform the following setup to allow the system to receive **Torque Control** input at the **V/I** input terminal:

- Set **SW301** of the **Terminal Board** to **Voltage** if using a control voltage or to **Current** if using a control current (see [Figure 9](#) on pg. 22).
- Program ⇒ Utility Group ⇒ Frequency Mode 1 ⇒ **V/I**.
- Program ⇒ Utility Group ⇒ Command Mode ⇒ **Terminal Block**.

Torque Control

Perform the following setup to allow the system to perform **Torque Control** from the **V/I** input terminal:

- Set **V/I Torque Reference 1** (F205).
- Set **V/I Reference 1** (F201) — the input analog signal level that corresponds to the torque setting at **V/I Torque Reference 1**.
- Set **V/I Torque Reference 2** (F206).
- Set **V/I Torque Reference 2** (F203) — the input analog signal level that corresponds to the torque setting at **V/I Torque Reference 2**.
- Provide a **Run** command (F and/or R).

Torque Control is accomplished by establishing an associated **V/f** output pattern for a given **V/I** input level.

Once set, as the **V** input voltage changes or the **I** input current changes, the output torque of the ASD will vary in accordance with the above settings.

This parameter sets **V/I Torque Reference 1** and is the output torque value that is associated with the setting of **V/I Reference 1** when operating in the **Torque Control** mode.

This value is entered as 0% to 250% of the rated torque.

Note: When using the isolated **V/I** input terminal the **IICC** terminal must be used as the return (Negative) connection.

Direct Access Number — F205

Parameter Type — Numerical


Factory Default — 0.00

Changeable During Run — Yes

Minimum — 0.00

Maximum — 250.00

Units — %

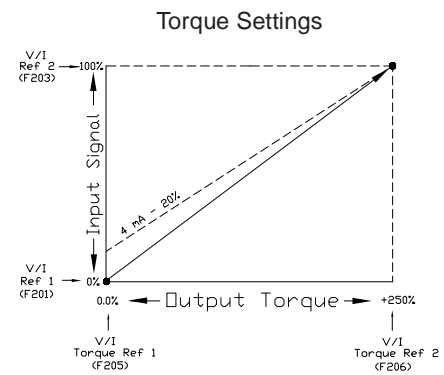**V/I Torque Reference 2**

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the isolated **V/I** input terminal when the **V/I** terminal is used as the control input while operating in the **Torque Control** mode.

Torque Control is accomplished by establishing an associated **V/f** output pattern for a given **V/I** input level.

This parameter sets **V/I Torque Reference 2** and is the output torque value that is associated with the setting of **V/I Reference 2** when operating in the **Torque Control** mode.

This value is entered as 0% to 250% of the rated torque.

See **V/I Torque Reference 1** (F205) for more information on this setting.

Direct Access Number — F206

Parameter Type — Numerical

Factory Default — 100.00

Changeable During Run — Yes

Minimum — 0.00

Maximum — 250.00

Units — %

Frequency Mode 2

Program ⇒ Frequency Settings

This parameter is used to set the source of the frequency command signal to be used as **Frequency Mode 2** in the event that **Frequency Mode 1** is disabled or if **Frequency Mode 2** is set up as the primary control parameter.

See [F004](#) and [F200](#) for additional information on this setting.

Settings:

- 1 — V/I
- 2 — RR
- 3 — RX
- 4 — Panel Keypad
- 5 — RS485 (2-Wire)
- 6 — RS485 (4-Wire)
- 7 — Communication Option Board
- 8 — RX2 (AI1)
- 9 — Option V/I
- 10 — UP/DOWN Frequency (Terminal Board)
- 11 — Pulse Input (Option)
- 12 — Pulse Input (Motor CPU)
- 13 — Binary/BCD Input (Option)

Direct Access Number — F207Parameter Type — **Selection List**Factory Default — **V/I**Changeable During Run — **Yes****Freq Mode 1/Freq Mode 2 Switching Frequency**

Program ⇒ Frequency Settings

This parameter establishes a threshold frequency that will be used as a reference when determining when to switch the output frequency control source from the **Frequency Mode 1** setting to the **Frequency Mode 2** setting.

See [F200](#) for additional information on this setting.

Direct Access Number — F208Parameter Type — **Numerical**Factory Default — **0.10**Changeable During Run — **Yes**

Minimum — 0.10

Maximum — **Max. Freq. (F011)**

Units — Hz

Analog Input Filter

No Path — Direct Access Only

Analog filtering is applied after the analog reference signal is converted to a digital signal. The type of filtering used is **Rolling Average** over time.

Settings:

- 0 — None (1 ms)
- 1 — Small (8 ms)
- 2 — Medium (16 ms)
- 3 — Large (32 ms)
- 4 — Huge (64 ms)

The analog input signal is sampled and converted to a digital signal. With no filtering applied, the resulting digital value is scaled for use by the microprocessor of the ASD.

If the filtering selection **Small** is selected, the ASD averages the last **8 ms** of sampled signal and converted (digital) values. The rolling average is updated (every 4 μS) and scaled for use by the microprocessor.

This holds true for the **Medium**, **Large**, and **Huge** selections providing a larger sample to produce the average for use by the microprocessor.

False responses to electrical noise are eliminated with no loss in bandwidth because the value used by the ASD is the average value of several samples.

Direct Access Number — F209Parameter Type — **Selection List**Factory Default — **None** (1 ms)Changeable During Run — **Yes**

F210

F211

RR Reference 1

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RR** input terminal when the **RR** terminal is used as the control input while operating in the **Speed Control** mode or the **Torque Control** mode.

This parameter sets the **RR** input level that is associated with the **RR Frequency 1** setting when operating in the **Speed** control mode or is associated with the **RR Torque Reference 1** setting when operating in the **Torque Control** mode.

Speed Control

Perform the following setup to allow the system to perform **Speed** control from the **RR** input terminal:

- Set **RR Frequency 1** (F211).
- Set **RR Reference 1** (F210) — the input analog signal level that corresponds to the frequency setting at **RR Frequency 1**.
- Set **RR Frequency 2** (F213).
- Set **RR Reference 2** (F212) — the input analog signal level that corresponds to the frequency setting at **RR Frequency 2**.

RR Input Speed Control Setup

Perform the following setup to allow the system to receive **Speed** control input at the **RR** input terminal:

- Program ⇒ Utility Group ⇒ Frequency Mode 1 ⇒ **RR**.
- Program ⇒ Utility Group ⇒ Command Mode ⇒ **Terminal Block**.
- Provide a **Run** command (F and/or R).

Once set, as the **RR** input voltage changes, the output frequency of the ASD will vary in accordance with the above settings.

This parameter value is entered as 0% to 100% of the **RR** input signal range.

RR Frequency 1

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RR** input terminal when the **RR** terminal is used as the control input while operating in the **Speed Control** mode.

This parameter sets **RR Frequency 1** and is the frequency that is associated with the setting of **RR Reference 1** when operating in the **Speed Control** mode.

See **RR Reference 1** (F210) for more information on this setting.

Direct Access Number — F210

Parameter Type — Numerical


Factory Default — 0

Changeable During Run — Yes

Minimum — 0

Maximum — 100

Units — %

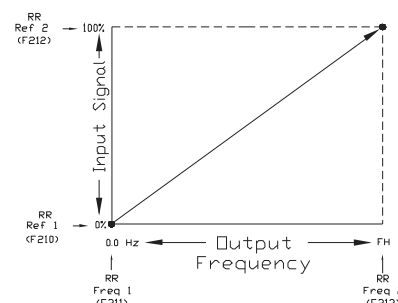Frequency Settings

Direct Access Number — F211

Parameter Type — Numerical

Factory Default — 0.00

Changeable During Run — Yes

Minimum — 0.00

Maximum — **Max. Freq.** (F011)

Units — Hz

F212**F213****RR Reference 2**

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RR** input terminal when the **RR** terminal is used as the control input while operating in the **Speed Control** mode or the **Torque Control** mode.

This parameter sets the **RR** input level that is associated with **RR Frequency 2** when operating in the **Speed** control mode or is associated with the **RR Torque Reference 2** when operating in the **Torque Control** mode.

This value is entered as 0% to 100% of the **RR** input signal range.

See **RR Reference 1** for more information on this setting when used for **Speed** control.

See **RR Torque Reference 1 (F214)** for more information on this setting when used for **Torque Control**.

Direct Access Number — **F212**

Parameter Type — **Numerical**

Factory Default — **100**

Changeable During Run — **Yes**

Minimum — 0

Maximum — 100

Units — %

RR Frequency 2

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RR** input terminal when the **RR** terminal is used as the control input while operating in the **Speed Control** mode.

This parameter sets **RR Frequency 2** and is the frequency that is associated with the setting of **RR Reference 2** when operating in the **Speed Control** mode.

See **RR Reference 1 (F210)** for more information on this setting.

Direct Access Number — **F213**

Parameter Type — **Numerical**

Factory Default — **60.00**

Changeable During Run — **Yes**

Minimum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

F214

F215

RR Torque Reference 1

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RR** input terminal when the **RR** terminal is used as the control input while operating in the **Torque Control** mode.

RR Input Torque Control Setup

Perform the following setup to allow the system to receive **Torque Control** input at the **RR** input terminal:

- Program ⇒ Utility Group ⇒ Frequency Mode 1 ⇒ **RR**.
- Program ⇒ Utility Group ⇒ Command Mode ⇒ **Terminal Block**.

Torque Control

Perform the following setup to allow the system to perform **Torque Control** from the **RR** input terminal:

- Set **RR Torque Reference 1** (F214).
- Set **RR Reference 1** (F210) — the input analog signal level that corresponds to the torque setting at **RR Torque Reference 1**.
- Set **RR Torque Reference 2** (F215).
- Set **RR Reference 2** (F212) — the input analog signal level that corresponds to the frequency setting at **RR Torque Reference 2**.
- Provide a **Run** command (F and/or R).

Torque Control is accomplished by establishing an associated **V/f** output pattern for a given **RR** input level.

Once set, as the **RR** input voltage changes, the output torque of the ASD will vary in accordance with the above settings.

This parameter sets **RR Torque Reference 1** and is the output torque value that is associated with the setting of **RR Reference 1** when operating in the **Torque Control** mode.

This value is entered as 0% to 250% of the rated torque.

Direct Access Number — F214

Parameter Type — Numerical


Factory Default — 0.00

Changeable During Run — Yes

Minimum — 0.00

Maximum — 250.00

Units — %

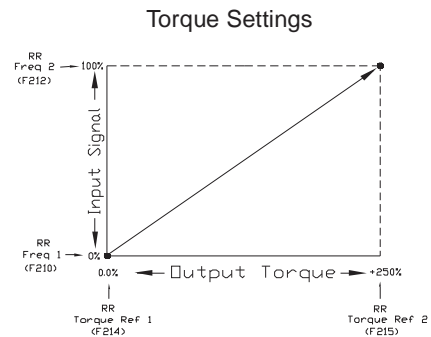**RR Torque Reference 2**

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RR** input terminal when the **RR** terminal is used as the control input while operating in the **Torque Control** mode.

Torque Control is accomplished by establishing an associated **V/f** output pattern for a given **RR** input level.

This parameter sets **RR Torque Reference 2** and is the output torque value that is associated with the setting of **RR Reference 2** when operating in the **Torque Control** mode.

This value is entered as 0% to 250% of the rated torque.

See **RR Torque Reference 1** for more information on this setting.

Direct Access Number — F215

Parameter Type — Numerical

Factory Default — 100.00

Changeable During Run — Yes

Minimum — 0.00

Maximum — 250.00

Units — %

F216

F217

RX Reference 1

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RX** input terminal when the **RX** terminal is used as the control input while operating in the **Speed Control** mode or the **Torque Control** mode.

This parameter sets the **RX** input level that is associated with **RX Frequency 1** when operating in the **Speed Control** mode or is associated with the **RX Torque Reference 1** when operating in the **Torque Control** mode.

RX Input Speed Control Setup

Perform the following setup to allow the system to receive **Speed** control input at the **RX** input terminal:

- Program ⇒ Utility Group ⇒ Frequency Mode 1 ⇒ **RX**.
- Program ⇒ Utility Group ⇒ Command Mode ⇒ **Terminal Block**.

Speed Control

Perform the following setup to allow the system to perform **Speed** control from the **RX** input terminal:

- Set **RX Frequency 1** (F217).
- Set **RX Reference 1** (F216) — the input analog signal level that corresponds to the speed setting at **RX Frequency 1**.
- Set **RX Frequency 2** (F219).
- Set **RX Reference 2** (F218) — the input analog signal level that corresponds to the speed setting at **RX Frequency 2**.
- Provide a **Run** command (F and/or R).

Once set, as the **RX** input voltage changes, the ASD output speed and/or torque will vary in accordance with the above settings.

This parameter value is entered as -100% to +100% of the **RX** input signal range.

See parameter **F474** and **F475** for information on fine-tuning this terminal response.

RX Frequency 1

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RX** input terminal when the **RX** terminal is used as the control input while operating in the **Speed Control** mode.

This parameter sets **RX Frequency 1** and is the frequency that is associated with the setting of **RX Reference 1** when operating in the **Speed Control** mode.

See **RX Reference 1** (F216) for more information on this setting.

Direct Access Number — F216

Parameter Type — Numerical

Factory Default — 0


Changeable During Run — Yes

Minimum — -100

Maximum — +100

Units — %

Frequency Settings

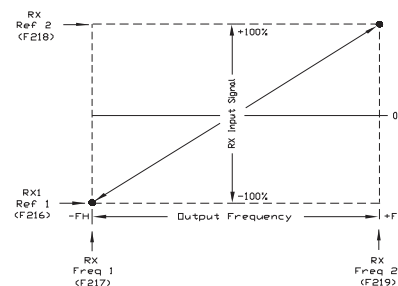

Direct Access Number — F217

Parameter Type — Numerical

Factory Default — 0.00

Changeable During Run — Yes

Minimum — 0.00

Maximum — **Max. Freq.** (F011)

Units — Hz

F218**F219****RX Reference 2**

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RX** input terminal when the **RX** terminal is used as the control input while operating in the **Speed Control** mode or the **Torque Control** mode.

This parameter sets the **RX** input level that is associated with **RX Frequency 2** when operating in the **Speed** control mode or is associated with the **RX Torque Reference 2** when operating in the **Torque Control** mode.

This value is entered as -100% to +100% of the **RX** input signal range.

See RX Reference 1 (F216) for more information on this setting when used for **Speed** control.

See RX Torque Reference 1 (F220) for more information on this setting when used for **Torque Control**.

Direct Access Number — F218

Parameter Type — Numerical

Factory Default — +100

Changeable During Run — Yes

Minimum — -100.0

Maximum — +100.0

Units — %

RX Frequency 2

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RX** input terminal when the **RX** terminal is used as the control input while operating in the **Speed Control** mode.

This parameter sets **RX Frequency 2** and is the frequency that is associated with the setting of **RX Reference 2** when operating in the **Speed Control** mode.

See RX Reference 1 (F216) for more information on this setting.

Direct Access Number — F219

Parameter Type — Numerical

Factory Default — 60.00

Changeable During Run — Yes

Minimum — 0.00.

Maximum — **Max. Freq.** (F011)

Units — Hz

F220

RX Torque Reference 1

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RX** input terminal when the **RX** terminal is used as the control input while operating in the **Torque Control** mode.

RX Input Torque Control Setup

Perform the following setup to allow the system to receive **Torque Control** input at the **RX** input terminal:

- Program ⇒ Utility Group ⇒ Frequency Mode 1 ⇒ **RX**.
- Program ⇒ Utility Group ⇒ Command Mode ⇒ **Terminal Block**.

Torque Control

Perform the following setup to allow the system to perform **Torque Control** from the **RX** input terminal:

- Set **RX Torque Reference 1** (F220).
- Set **RX Reference 1** (F216) — the input analog signal level that corresponds to the torque setting at **RX Torque Reference 1**.
- Set **RX Torque Reference 2** (F221).
- Set **RX Reference 2** (F218) — the input analog signal level that corresponds to the speed setting at **RX Torque Reference 2**.
- Provide a **Run** command (F and/or R).

Torque Control is accomplished by establishing an associated **V/f** output pattern for a given **RX** input level.

Once set, as the **RX** input voltage changes, the ASD output speed and/or torque will vary in accordance with the above settings.

This parameter sets **RX Torque Reference 1** and is the output torque value that is associated with the setting of **RX Reference 1** when operating in the **Torque Control** mode.

This value is entered as -250% to +250% of the rated torque.

RX Torque Reference 2

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RX** input terminal when the **RX** terminal is used as the control input while operating in the **Torque Control** mode.

Torque Control is accomplished by establishing an associated **V/f** output pattern for a given **RX** input level.

This parameter sets **RX Torque Reference 2** and is the output torque value that is associated with the setting of **RX Reference 2** when operating in the **Torque Control** mode.

This value is entered as -250% to +250% of the rated torque.

See **RX Torque Reference 1** (F220) for more information on this setting.

F221

Direct Access Number — F220

Parameter Type — Numerical


Factory Default — 0.00

Changeable During Run — Yes

Minimum — -250.00

Maximum — +250.00

Units — %

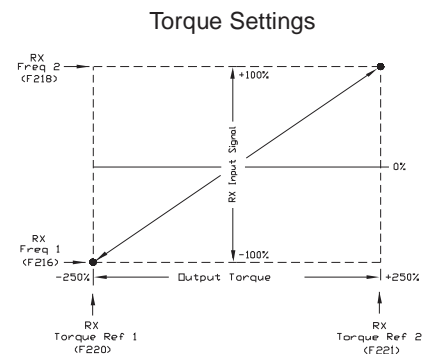

Direct Access Number — F221

Parameter Type — Numerical

Factory Default — 100.00

Changeable During Run — Yes

Minimum — -250.00

Maximum — +250.00

Units — %

F222

RX2 (AI1) Reference 1

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RX2 (AI1)** input terminal when the **RX2 (AI1)** terminal is used as the control input while operating in the **Speed Control** mode or the **Torque Control** mode.

Note: *The Expansion IO Card Option 1 Option Board (P/N ETB003Z) is required to use this terminal.*

This parameter sets the **RX2 (AI1)** input level that is associated with **RX2 (AI1) Frequency 1** when operating in the **Speed Control** mode.

RX2 (AI1) Input Speed Control Setup

Perform the following setup to allow the system to receive **Speed** control input at the **RX2 (AI1)** input terminal:

- Program ⇒ Utility Group ⇒ Frequency Mode 1 ⇒ **RX2**.
- Program ⇒ Utility Group ⇒ Command Mode ⇒ **Terminal Block**.

Speed Control

Perform the following setup to allow the system to perform **Speed** control from the **RX2 (AI1)** input terminal:

- Set **RX2 (AI1) Frequency 1 (F223)**.
- Set **RX2 (AI1) Reference 1 (F222)** — the input analog signal level that corresponds to the speed setting at **RX2 (AI1) Frequency 1**.
- Set **RX2 (AI1) Frequency 2 (F225)**.
- Set **RX2 (AI1) Reference 2 (F224)** — the input analog signal level that corresponds to the speed setting at **RX Frequency 2**.
- Provide a **Run** command (F and/or R).

Once set, as the **RX2 (AI1)** input voltage changes, the ASD output speed and/or torque will vary in accordance with the above settings.

This parameter value is entered as -100% to +100% of the **RX2 (AI1)** input signal range.

See the *Expansion IO Card Option 1 Instruction Manual* (P/N 58685) for more information on the function of this terminal. See parameter **F476** and **F477** for information on fine-tuning this terminal response.

RX2 (AI1) Frequency 1

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RX2 (AI1)** input terminal when the **RX2 (AI1)** terminal is used as the control input while operating in the **Speed Control** mode.

This parameter sets **RX2 (AI1) Frequency 1** and is the frequency that is associated with the setting of **RX2 (AI1) Reference 1** when operating in the **Speed Control** mode.

See **RX2 (AI1) Reference 1 (F222)** for more information on this setting.

F223

Direct Access Number — F222

Parameter Type — Numerical

Factory Default — 0


Changeable During Run — Yes

Minimum — -100

Maximum — +100

Units — %

Frequency Settings

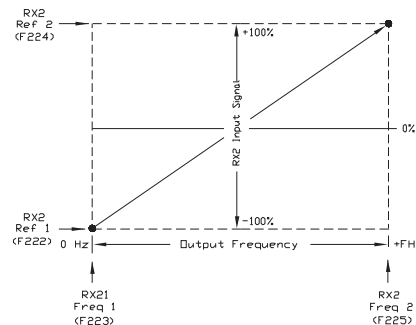

Direct Access Number — F223

Parameter Type — Numerical

Factory Default — 0.00

Changeable During Run — Yes

Minimum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

F224**F225****RX2 (AI1) Reference 2**

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RX2 (AI1)** input terminal when the **RX2 (AI1)** terminal is used as the control input while operating in the **Speed Control** mode or the **Torque Control** mode.

This parameter sets the **RX2 (AI1)** input level that is associated with **RX2 (AI1) Frequency 2** when operating in the **Speed** control mode.

This value is entered as -100% to +100% of the **RX2 (AI1)** input signal range.

See **RX2 (AI1) Reference 1 (F222)** for more information on this setting when used for **Speed** control.

Direct Access Number — **F224**

Parameter Type — **Numerical**

Factory Default — **+100**

Changeable During Run — **Yes**

Minimum — -100

Maximum — +100

Units — %

RX2 (AI1) Frequency 2

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **RX2 (AI1)** input terminal when the **RX2 (AI1)** terminal is used as the control input while operating in the **Speed Control** mode.

This parameter sets **RX2 (AI1) Frequency 2** and is the frequency that is associated with the setting of **RX2 (AI1) Reference 2** when operating in the **Speed Control** mode.

See **RX2 (AI1) Reference 1 (F222)** for more information on this setting.

Direct Access Number — **F225**

Parameter Type — **Numerical**

Factory Default — **60.00**

Changeable During Run — **Yes**

Minimum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

F228

BIN Reference 1

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **BIN** input terminals when the **BIN** terminals are used as the control input while operating in the **Speed Control** mode.

The discrete input terminals of the **Terminal Board** are used as the **BIN** terminals.

BIN Input Speed Control Setup

Perform the following setup to allow the system to receive **Speed** control input at the **BIN** input terminals:

- Program ⇒ Utility Group ⇒ Frequency Mode 1 ⇒ **Binary/BCD**.
- Program ⇒ Utility Group ⇒ Command Mode ⇒ **Terminal Block**.
- Program ⇒ **Input Terminals**; select and set the desired discrete input terminals to **Binary Bit(s) 0 – 7** (or 0 – MSB). The binary input byte will control the speed of the motor.
- Program ⇒ **Input Terminals**; select and set a discrete input terminal to **Binary Write**. Activation of the **Binary Write** terminal will transfer the status of the **Binary Bit(s) 0 – 7** (or 0 – MSB) to the control board for speed control.

Speed Control

Perform the following setup to allow the system to perform **Speed** control from the **BIN** input terminals:

- Set **BIN Frequency 1 (F229)**.
- Set the **BIN** input value (% of 255_D) (**F228**) that represents **BIN Frequency 1**.
- Set **BIN Frequency 2 (F231)**.
- Set the **BIN** input value (% of 255_D) (**F230**) that represents **BIN Frequency 2**.
- Provide a **Run** command (F and/or R).

Note: 255_D is the decimal equivalent of the 8-bit **BIN** byte with all input terminals set to one (255_{10} decimal = 11111111 binary).

Once set, as the **BIN** input signal changes are transferred to the control board, the output frequency of the ASD will vary in accordance with the above settings.

This parameter sets **BIN Reference 1** and is entered as 0% to 100% of the of the range represented by the **BIN** binary input byte 11111111 (255_D) or the binary bit(s) 0 – MSB.

BIN Frequency 1

Program ⇒ Frequency Settings

This parameter is used to set the speed of the **BIN** input terminals when the **BIN** terminals are used as the control input.

This parameter sets **BIN Frequency 1** and is the frequency that is associated with the setting of **BIN Reference 1**.

See **BIN Reference 1 (F228)** for further information on this setting.

F229

Direct Access Number — F228

Parameter Type — Numerical


Factory Default — 0

Changeable During Run — Yes

Minimum — 0

Maximum — 100

Units — %

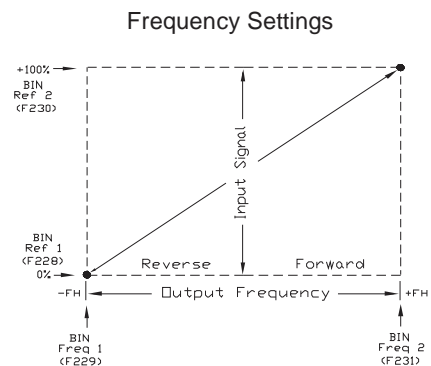

Direct Access Number — F229

Parameter Type — Numerical

Factory Default — 0.00

Changeable During Run — Yes

Minimum — 0

Maximum — **Max. Freq. (F011)**

Units — Hz

F230

F234

BIN Reference 2

Program ⇒ Frequency Settings

This parameter is used to set the speed of the **BIN** input terminals when the **BIN** terminals are used as the control input.

This parameter sets the **BIN** input signal that is associated with **BIN Frequency 2**.

This value is entered as 0% to +100% of the **BIN** input signal range.

See BIN Reference 1 (F228) for further information on this setting.

Direct Access Number — F230

Parameter Type — Numerical

Factory Default — 100

Changeable During Run — Yes

Minimum — 0

Maximum — 100

Units — %

BIN Frequency 2

Program ⇒ Frequency Settings

This parameter is used to set the speed of the **BIN** input terminals when the **BIN** terminal are used as the control input.

This parameter sets **BIN Frequency 2** and is the frequency that is associated with the setting of **BIN Reference 2**.

See BIN Reference 1 (F228) for further information on this setting.

Direct Access Number — F231

Parameter Type — Numerical

Factory Default — 60.00

Changeable During Run — Yes

Maximum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

PG Reference 1

Program ⇒ Frequency Settings

This parameter is used to set the gain and bias of the **PG** input terminal of the option board when a shaft-mounted encoder is used as the control input while operating in the **Speed Control** mode.

Note: See the **PG Option Board Instruction Manual P/N 58687** for more information.

Direct Access Number — F234

Parameter Type — Numerical

Factory Default — 0.0

Changeable During Run — Yes

Minimum — 0

Maximum — 100.0

Units — %

PG Input Speed Control Setup

Perform the following setup to allow the system to receive **Speed** control input at the **PG** input terminal:

- Program ⇒ Utility Group ⇒ Command Mode ⇒ **Option Board**.
- Program ⇒ Utility Group ⇒ Frequency Mode 1 ⇒ **Pulse (Option)**.
- Provide a **Run** command (F and/or R).

Speed Control


Perform the following setup to allow the system to perform **Speed** control from the **PG** input terminals:

- Set **PG Frequency 1 (F235)**.
- Set the **PG** input value (F234) that represents **PG Frequency 1**.
- Set **PG Frequency 2 (F237)**.
- Set the **PG** input value (F236) that represents **PG Frequency 2**.

Once set, as the **PG** input pulse count rate changes, the output frequency of the ASD will vary in accordance with the above settings.

This parameter sets the **PG** input pulse count that represents **PG Frequency 1**. The range of values for this parameter is 0% to 100% of the **PG** input pulse count range.

Note: Further application-specific **PG** settings may be performed from the following path: Program ⇒ Feedback Setting ⇒ **PG Settings**.

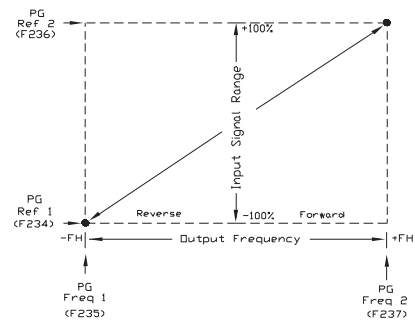Frequency Settings

F235

F240

<p>PG Frequency 1</p> <p>Program ⇒ Frequency Settings</p> <p>This parameter is used to set the speed of the PG input terminals when the PG terminal is used as the control input.</p> <p>This parameter sets PG Frequency 1 and is the frequency that is associated with the setting of PG Reference 1.</p> <p>See PG Reference 1 (F234) for further information on this setting.</p>	<p>Direct Access Number — F235</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — Max. Freq. (F011)</p> <p>Units — Hz</p>
<p>PG Reference 2</p> <p>Program ⇒ Frequency Settings</p> <p>This parameter is used to set the direction and speed of the PG input terminals when the PG terminals are used as the control input.</p> <p>This parameter sets the PG input signal that is associated with PG Frequency 2.</p> <p>This value is entered as 0% to 100% of the PG input signal range.</p> <p>See PG Reference 1 (F234) for further information on this setting.</p>	<p>Direct Access Number — F236</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 100</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 100</p> <p>Units — %</p>
<p>PG Frequency 2</p> <p>Program ⇒ Frequency Settings</p> <p>This parameter is used to set the direction and speed of the PG input terminals when the PG terminal are used as the control input.</p> <p>This parameter sets PG Frequency 2 and is the frequency that is associated with the setting of PG Reference 2.</p> <p>See PG Reference 1 (F234) for further information on this setting.</p>	<p>Direct Access Number — F237</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 60.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — Max. Freq. (F011)</p> <p>Units — Hz</p>
<p>Startup Frequency</p> <p>Program ⇒ Special Controls</p> <p>The output of the ASD will remain at 0.0 Hz until the programmed speed value exceeds this setting during startup. Once exceeded during startup, the output frequency of the ASD will accelerate to the programmed setting.</p> <p>Output frequencies below the Startup Frequency will not be output from the ASD during startup. However, once reaching the Startup Frequency, speed values below the Startup Frequency may be output from the ASD.</p> <p>If the setting of this parameter results in an over-current condition at startup, reduce the setting of this parameter to a value less than the rated slippage of the motor.</p> <p>If zero-speed torque is required, set this parameter and F243 to 0.0 Hz.</p> <p>This setting will override the setting of F244 if this setting has a higher value.</p> <p>This parameter setting is used during a Jog as the Lower-Limit Frequency (see F260).</p>	<p>Direct Access Number — F240</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.10</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — Max. Freq. (F011)</p> <p>Units — Hz</p>

F241**F244**

<p>Run Frequency</p> <p>Program ⇒ Special Controls</p> <p>This parameter establishes a center frequency (Run Frequency) of a frequency band.</p> <p>Parameter F242 provides a plus-or-minus value for the Run Frequency; thus, establishing a frequency band.</p> <p>During acceleration, the ASD will not output a signal to the motor until the lower level of the band is reached.</p> <p>During deceleration, the ASD will continue to output the programmed deceleration signal to the motor until the lower level of the band is reached; at which time the output will go to 0.0 Hz.</p>	<p>Direct Access Number — F241</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — Max. Freq. (F011)</p> <p>Units — Hz</p>
<p>Run Frequency Hysteresis</p> <p>Program ⇒ Special Controls</p> <p>This parameter provides a plus-or-minus value for the Run Frequency setting (F241).</p>	<p>Direct Access Number — F242</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 30.0</p> <p>Units — Hz</p>
<p>End Frequency</p> <p>Program ⇒ Special Controls</p> <p>This parameter sets the lowest frequency that the ASD will recognize during deceleration before the ASD goes to 0.0 Hz.</p>	<p>Direct Access Number — F243</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 30.0</p> <p>Units — Hz</p>
<p>0 Hz Dead Band Signal</p> <p>No Path — Direct Access Only</p> <p>This parameter sets an output frequency threshold that, until the commanded frequency surpasses this setting, the ASD will output 0 Hz to the motor.</p> <p>This setting will override the Startup Frequency setting (F240) if this setting has a higher value.</p>	<p>Direct Access Number — F244</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 5.00</p> <p>Units — Hz</p>

F250

F253

DC Injection Braking Start Frequency

Program ⇒ Special Controls

During deceleration this is the frequency at which **DC Injection** braking will start.

DC Injection Braking

DC Injection Braking is a braking system used with three-phase motors. Unlike conventional brakes, there is no physical contact between the rotating shaft and a stationary brake pad or drum. When braking is required, the ASD outputs a DC current that is applied to the windings of the motor to quickly brake the motor. The braking current is discontinued when the time entered in [F252](#) times out.

The intensity of the DC current used while braking determines how fast the motor will come to a stop and may be set at [F251](#). The intensity setting is entered as a percentage of the full load current of the ASD.

DC Injection Braking is also used to preheat the motor or to keep the rotor from spinning freely when the motor is off by providing a pulsating DC current into the motor at the **Carrier Frequency** (Zero Speed). This feature may be enabled at [F254](#).

Direct Access Number — **F250**

Parameter Type — **Numerical**

Factory Default — **0.00**

Changeable During Run — **Yes**

Minimum — 0.00

Maximum — 120.00

Units — Hz

DC Injection Braking Current

Program ⇒ Special Controls

This parameter sets the percentage of the rated current of the ASD that will be used for **DC Injection** braking. A larger load will require a higher setting.

Direct Access Number — **F251**

Parameter Type — **Numerical**

Factory Default — **50**

Changeable During Run — **Yes**

Minimum — 0

Maximum — 100

Units — %

DC Injection Braking Time

Program ⇒ Special Controls

This parameter setting is used to set the on-time duration of the **DC Injection Braking**.

Direct Access Number — **F252**

Parameter Type — **Numerical**

Factory Default — **1.0**

Changeable During Run — **Yes**

Minimum — 0.0

Maximum — 20.0

Units — Seconds

DC Injection On During Direction Change

Program ⇒ Special Controls

This parameter setting determines if **DC Injection** braking is to be used during a change in the direction of the motor.

Direct Access Number — **F253**

Parameter Type — **Selection List**

Factory Default — **Disabled**

Changeable During Run — **Yes**

Settings:

0 — Disabled

1 — Enabled

F254**F256****Shaft Stationary**

Program ⇒ Special Controls

This parameter **Enables/Disables** a continuous DC injection at half of the amperage setting of **F251** into a stopped motor. This feature is useful in preheating the motor or to keep the rotor from spinning freely.

Shaft Stationary control starts after the DC injection brake stops the motor and continues until **ST – CC** is opened, power is turned off, an **Emergency Off** command is received, or this parameter is changed.

Enabling this feature will also require a non-zero entry at **F250**.

Settings:

- 0 — Disabled
- 1 — Enabled

Direct Access Number — **F254**

Parameter Type — **Selection List**

Factory Default — **Disabled**

Changeable During Run — **Yes**

0 Hz Command Output

No Path — Direct Access Only

This parameter is used to set the go-to-zero method to be used by the ASD in the event that the ASD is commanded to go to zero Hz.

Settings:

- 0 — Standard (DC Injection Braking)
- 1 — 0 Hz Command

Direct Access Number — **F255**

Parameter Type — **Selection List**

Factory Default — **Standard** (DC Injection Braking)

Changeable During Run — **No**

Low Output Disable Time

Program ⇒ PID Setup

This parameter sets the time that the ASD is allowed to operate below the **Lower-Limit** setting before an alarm and subsequent fault is incurred.

Direct Access Number — **F256**

Parameter Type — **Numerical**

Factory Default — **0.0**

Changeable During Run — **Yes**

Minimum — 0.0

Maximum — 600.0

Units — Seconds

Jog Run Frequency

Program ⇒ Frequency Settings

This parameter sets the output frequency of the drive during a **Jog**. **Jog** is the term used to describe turning on the motor for discrete increments of time and may be required when precise positioning of motor-driven equipment is required.

The **Jog** function may be initiated from the **Terminal Board** or using **Communications** (for more information on using Communications for Jogging, see the Communications manual P/N 53840).

The **Jog** function can be activated from zero Hz or from any frequency below the **Jog Run Frequency** setting (Jog can only increase the speed). A **Jog** command will not be recognized when the running frequency is above the **Jog Run Frequency** setting. The **Jog** command has priority over other **Run** commands and is not limited by the **Upper-Limit** setting of parameter **F012**.

Jog commands received for the opposite direction of the commanded frequency will follow the programmed stopping method of **F261** until reaching zero Hz and will then ramp to the programmed **Jog Frequency** and direction.

Jog Setup and Execution

To initiate a **Jog Run** from the EOI perform the following:

1. Set the **Command Mode Selection (F003)** to **Panel Keypad**. This setting places the ASD in the **Remote** mode.
2. Set the **Frequency Mode Selection (F004)** to **Panel Keypad**.
3. Enable the **Jog** function (**F262**).
4. Set the **Input Terminal Priority (F106)** function to **Enable** to receive **Jog** commands.
5. Assign the **Jog Run** setting to any unused discrete input terminal (Select from [Table 4 on pg. 185](#)).
6. Set the **Jog Frequency** at **F260**.
7. Set up a **Jog Stop Pattern** at **F261**.
8. Press the **Run** key and the ASD will output the commanded frequency (as programmed; not the **Jog** frequency).
9. Activate the **Jog Run** terminal (from step 5). The ASD will output the frequency setting of **F260** (from step 6).
10. Stop the **Jog** by either providing a **Stop** command, or by terminating the **Jog Run** terminal activation. Providing a **Stop** command will terminate the commanded frequency and the **Jog** function. Terminating the **Jog Run** terminal activation will terminate the **Jog** function only and will resume the commanded frequency of step 8.

Direct Access Number — **F260**

Parameter Type — **Numerical**

Factory Default — **5.00**

Changeable During Run — **Yes**

Minimum — **F240** Setting

Maximum — 20.00

Units — Hz

F261**F262**

Jog Stop Control

Program ⇒ Frequency Settings

This parameter sets the stopping method used while operating in the **Jog** mode.

***Note:** This parameter setting is used for the **Jog** operation only. The **Emergency Off** stopping method setting of parameter **F603** has priority over this setting and changes made here do not affect the function or setting of parameter **F603**.*

Settings:

- 0 — Deceleration
- 1 — Coast
- 2 — DC Injection Braking

Direct Access Number — F261Parameter Type — **Selection List**Factory Default — **Deceleration**Changeable During Run — **Yes**

Panel Operation Jog Mode

No Path — Direct Access Only

This parameter Enables/Disables the **Jog** command. When disabled the **Jog** command is ignored.

Settings:

- 0 — Disabled
- 1 — Enabled

Direct Access Number — F262Parameter Type — **Selection List**Factory Default — **Disabled**Changeable During Run — **Yes**

UP/DOWN Frequency (UP) Response Time

No Path — Direct Access Only

This parameter functions in conjunction with the parameter settings of **F265**, **F266**, **F267**, **F268**, and **F269**. The purpose of these settings is to setup the ASD to allow an externally-supplied discrete input signal to control the output frequency of the ASD.

This method uses the discrete input terminal settings **UP/DOWN Frequency (UP)** and **UP/DOWN Frequency (DOWN)** to change the ASD speed. Activation of either terminal increases or decreases the output frequency at the **Accel 1** or **Decel 1** rates, respectively.

Depending on the **Delay** setting, the **UP/DOWN Frequency (UP/DOWN)** terminal may perform the increase/decrease function for the duration of the activation or may act as a momentary contact that loads a new commanded frequency upon activation.

In either case, to activate-and-hold will continue the up or down function until reaching the **Upper-Limit Frequency** or the **Lower-Limit Frequency**, respectively. At which point further activation will be ignored.

See **Figure 25** on pg. 105 for more information on the **UP/DOWN Frequency** function.

Setup Requirements

F003 — Selects the **Command** control source; set to **Terminal Block**.

F004 — Selects the **Frequency Control Mode 1** control source; set to **UP/DOWN Frequency**.

F207 — Selects the **Frequency Control Mode 2** control source: set to **UP/DOWN Frequency** if used.

Set one unused discrete input terminal to **UP/DOWN Frequency (UP)** and one unused discrete input terminal to **UP/DOWN Frequency (DOWN)**.

F264 — Sets the system-response delay to the initial activation of the discrete input terminal **UP/DOWN Frequency (UP)**. Also sets the response delay of subsequent terminal activations of the **UP/DOWN Frequency (UP)** terminal during an activate-and-hold.

F265 — Sets the frequency increase amount for each activation of the **UP/DOWN Frequency (UP)** terminal activation. The rate of the frequency increase is set at **Acceleration Time 1 (F009)**.

F266 — Sets the system-response delay to the initial activation of the discrete input terminal **UP/DOWN Frequency (DOWN)**. Also sets the activation delay of subsequent terminal activations of the **UP/DOWN Frequency (DOWN)** terminal during an activate-and-hold.

F267 — Sets the frequency decrease amount for each activation of the **UP/DOWN Frequency (DOWN)** terminal activation. The rate of the frequency decrease is set at **Deceleration Time 1 (F010)**.

F268 — At power up or after a reset, this parameter setting is used to provide a starting frequency for the **UP/DOWN Frequency** function.

F269 — At power down while running, and when enabled, this parameter writes the running frequency into the **F268** location and, upon a system restart, uses this setting as the startup frequency.

Provide a **Run** command (F or R). The motor will run at the **F268** setting.

Direct Access Number — **F264**

Parameter Type — **Numerical**



Factory Default — **0.1**

Changeable During Run — **Yes**

Minimum — 0.0

Maximum — 10.0

Units — Seconds

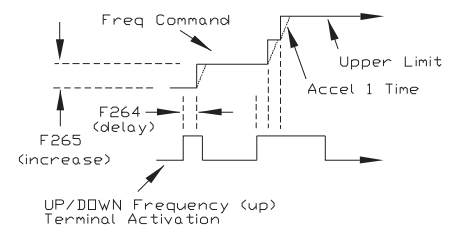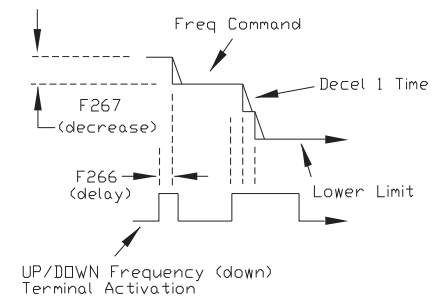
Up/Down Frequency (UP) Mode**Up/Down Frequency (DOWN) Mode**

F265

F269

<p>UP/DOWN Frequency (UP) Frequency Step</p> <p>No Path — Direct Access Only</p> <p>This parameter sets the frequency increase amount for each activation of the UP/DOWN Frequency (UP) terminal activation. The rate of the frequency increase is set at Acceleration Time 1 (F009).</p> <p>See F264 for more information on this parameter.</p>	<p>Direct Access Number — F265</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.10</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — Max. Freq. (F011)</p> <p>Units — Hz</p>
<p>UP/DOWN Frequency (DOWN) Response Time</p> <p>No Path — Direct Access Only</p> <p>This parameter sets the system-response delay to the initial activation of the discrete input terminal UP/DOWN Frequency (DOWN). Also sets the activation delay of subsequent terminal activations of the UP/DOWN Frequency (DOWN) terminal during an activate-and-hold.</p> <p>See F264 for more information on this parameter.</p>	<p>Direct Access Number — F266</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.1</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.0</p> <p>Maximum — 10.0</p> <p>Units — Seconds</p>
<p>UP/DOWN Frequency (DOWN) Frequency Step</p> <p>No Path — Direct Access Only</p> <p>This parameter sets the frequency decrease amount for each activation of the UP/DOWN Frequency (DOWN) terminal activation. The rate of the frequency decrease is set at Deceleration Time 1 (F010).</p> <p>See F264 for more information on this parameter.</p>	<p>Direct Access Number — F267</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.10</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — Max. Freq. (F011)</p> <p>Units — Hz</p>
<p>Initial UP/DOWN Frequency</p> <p>No Path — Direct Access Only</p> <p>At power up or after a reset, this parameter setting is used to provide a starting frequency for the UP/DOWN Frequency function.</p> <p>See F269 for more information on this parameter setting.</p>	<p>Direct Access Number — F268</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>Initial UP/DOWN Frequency Rewriting</p> <p>No Path — Direct Access Only</p> <p>At power down, and when enabled, this parameter writes the running frequency into the F268 location and, upon a system restart, uses this setting as the startup frequency.</p> <p>Disable this parameter and set parameter F268 to the desired startup frequency if the same starting frequency is required at each startup.</p> <p>Note: <i>This parameter setting may be different at each startup when enabled.</i></p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Disabled 1 — Enabled (Overwrite F268 at Power Off or Reset) 	<p>Direct Access Number — F269</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Enabled</p> <p>Changeable During Run — Yes</p>

Figure 25. Up/Down Frequency Operation Control Timing Diagram.

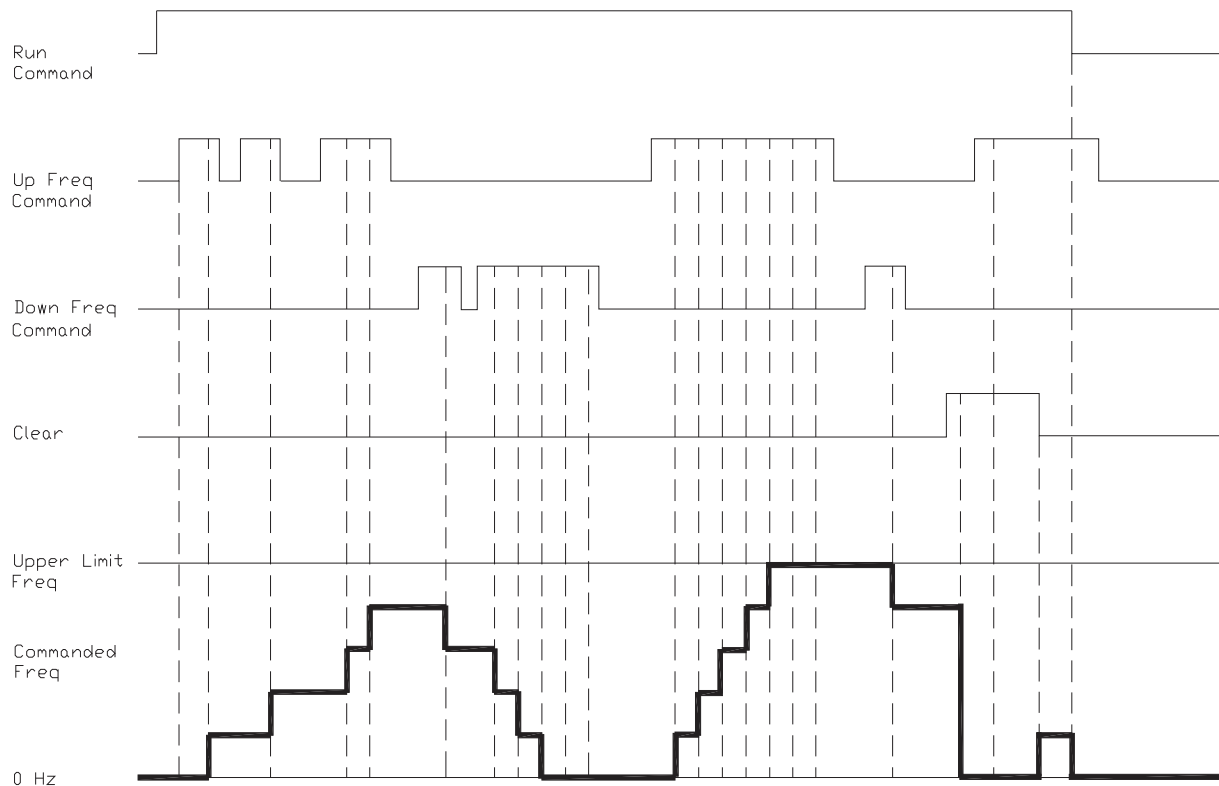

Jump Frequency 1

Program ⇒ Special Controls

In conjunction with parameter **F271**, this parameter establishes a user-defined frequency range: the **Jump Frequency** and a plus-or-minus value.

During acceleration, the output frequency of the drive will hold at the lower level of the **Jump Frequency** range until the programmed acceleration ramp reaches the upper level of the **Jump Frequency** range. At which time the output frequency of the drive will accelerate to the upper level of the **Jump Frequency** range and continue upward as programmed.

During deceleration, the output frequency of the drive will hold at the upper level of the **Jump Frequency** range until the programmed deceleration ramp reaches the lower level of the **Jump Frequency** range. At which time the output frequency of the drive will decelerate to the lower level of the **Jump Frequency** range and continue downward as programmed.

Once set up and enabled, it is on in all control modes.

User-selected frequencies may be jumped to avoid the negative effects of mechanical resonance.

Direct Access Number — **F270**

Parameter Type — **Numerical**

Factory Default — **0.00**

Changeable During Run — **Yes**

Minimum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

F271

F287

<p>Jump Frequency 1 Bandwidth</p> <p>Program ⇒ Special Controls</p> <p>This parameter establishes a plus-or-minus value for Jump Frequency 1 (see F270 for more information on this parameter).</p>	<p>Direct Access Number — F271</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 30.00</p> <p>Units — Hz</p>
<p>Jump Frequency 2</p> <p>Program ⇒ Special Controls</p> <p>Same as Jump Frequency 1 (F270) and is used when multiple frequencies are to be jumped (see the plus-or-minus value setting at F273). When multiple jump frequencies overlap, the system will recognize the lowest and the highest frequencies as one jump range.</p>	<p>Direct Access Number — F272</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — Max. Freq. (F011)</p> <p>Units — Hz</p>
<p>Jump Frequency 2 Bandwidth</p> <p>Program ⇒ Special Controls</p> <p>This parameter establishes a plus-or-minus value for Jump Frequency 2 (F272).</p>	<p>Direct Access Number — F273</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 30.0</p> <p>Units — Hz</p>
<p>Jump Frequency 3</p> <p>Program ⇒ Special Controls</p> <p>Same as Jump Frequency 1 (F270) and is used when multiple frequencies are to be jumped (see the plus-or-minus value setting at F275).</p> <p>When multiple jump frequencies overlap, the system will recognize the lowest and the highest frequencies as one jump range.</p>	<p>Direct Access Number — F274</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — Max. Freq. (F011)</p> <p>Units — Hz</p>
<p>Jump Frequency 3 Bandwidth</p> <p>Program ⇒ Special Controls</p> <p>This parameter establishes a plus-or-minus value for Jump Frequency 3 (F274).</p>	<p>Direct Access Number — F275</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 30.0</p> <p>Units — Hz</p>
<p>Preset Speed 8</p> <p>Program ⇒ Preset Speeds</p> <p>This parameter assigns an output frequency to binary number 1000 and is identified as Preset Speed 8. The binary number is applied to S1 – S4 of the Terminal Board to output the Preset Speed (see F018 for more information on this parameter).</p>	<p>Direct Access Number — F287</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>

F288

F293

<p>Preset Speed 9</p> <p>Program ⇒ Preset Speeds</p> <p>This parameter assigns an output frequency to binary number 1001 and is identified as Preset Speed 9. The binary number is applied to S1 – S4 of the Terminal Board to output the Preset Speed (see F018 for more information on this parameter).</p>	<p>Direct Access Number — F288</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>Preset Speed 10</p> <p>Program ⇒ Preset Speeds</p> <p>This parameter assigns an output frequency to binary number 1010 and is identified as Preset Speed 10. The binary number is applied to S1 – S4 of the Terminal Board to output the Preset Speed (see F018 for more information on this parameter).</p>	<p>Direct Access Number — F289</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>Preset Speed 11</p> <p>Program ⇒ Preset Speeds</p> <p>This parameter assigns an output frequency to binary number 1011 and is identified as Preset Speed 11. The binary number is applied to S1 – S4 of the Terminal Board to output the Preset Speed (see F018 for more information on this parameter).</p>	<p>Direct Access Number — F290</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>Preset Speed 12</p> <p>Program ⇒ Preset Speeds</p> <p>This parameter assigns an output frequency to binary number 1100 and is identified as Preset Speed 12. The binary number is applied to S1 – S4 of the Terminal Board to output the Preset Speed (see F018 for more information on this parameter).</p>	<p>Direct Access Number — F291</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>Preset Speed 13</p> <p>Program ⇒ Preset Speeds</p> <p>This parameter assigns an output frequency to binary number 1101 and is identified as Preset Speed 13. The binary number is applied to S1 – S4 of the Terminal Board to output the Preset Speed (see F018 for more information on this parameter).</p>	<p>Direct Access Number — F292</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>Preset Speed 14</p> <p>Program ⇒ Preset Speeds</p> <p>This parameter assigns an output frequency to binary number 1110 and is identified as Preset Speed 14. The binary number is applied to S1 – S4 of the Terminal Board to output the Preset Speed (see F018 for more information on this parameter).</p>	<p>Direct Access Number — F293</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>

F294

F301

<p>Preset Speed 15</p> <p>Program ⇒ Preset Speeds</p> <p>This parameter assigns an output frequency to binary number 1111 and is identified as Preset Speed 15. The binary number is applied to S1 – S4 of the Terminal Board to output the Preset Speed (see F018 for more information on this parameter).</p> <p>This parameter setting is also used when commanded by the Fire Speed activation of a discrete input terminal (see Table 4 on pg. 185).</p>	<p>Direct Access Number — F294</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 60.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>Remote/Local OTF Switching</p> <p>No Path — Direct Access Only</p> <p>This parameter Enables/Disables On-The-Fly switching. OTF Switching is used when switching from Remote to Local while running and a seamless Remote-to-Local transfer is required.</p> <p>With this parameter enabled and while operating in the Remote mode, press the Local/Remote key to transfer control to the Local mode and maintain the same running speed of the Remote mode of operation.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Disabled 1 — Enabled 	<p>Direct Access Number — F295</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Disabled</p> <p>Changeable During Run — Yes</p>
<p>PWM Carrier Frequency</p> <p>Program ⇒ Utility Group</p> <p>This parameter sets the frequency of the pulse width modulation signal applied to the motor.</p> <p><i>Note: When operating in the Vector Control mode the carrier frequency should be set to 2.2 kHz or above.</i></p>	<p>Direct Access Number — F300</p> <p>Parameter Type — Numerical</p> <p>Factory Default — ASD-Dependent</p> <p>Changeable During Run — No</p> <p>Minimum — 1.0</p> <p>Maximum — (ASD-Dependent)</p> <p>Units — kHz</p>
<p>Speed Search Selection</p> <p>Program ⇒ Protection</p> <p>This parameter Enables/Disables the ability of the drive to start into a spinning motor when the ST – CC connection opens momentarily and is then closed (Break/Make ST) or after a power interruption (momentary power failure).</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Off 1 — Enabled (At Power Failure) 2 — Enabled (At Make-Break ST-CC) 3 — Enabled (At Make-Break ST-CC or Power Failure) 4 — Enabled (At Run) 	<p>Direct Access Number — F301</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Off</p> <p>Changeable During Run — No</p>

F302

F302

Ridethrough Mode

Program ⇒ Protection

This parameter determines the motor-control response of the drive in the event of a momentary power outage or an under-voltage condition.

During a **Ridethrough**, regenerative energy is used to maintain the control circuitry settings for the duration of the **Ridethrough**; it is not used to drive the motor. The motor(s) of the system are stopped and then restarted automatically if so configured.

Note: If used to restart the motors, the Retry setup of [F301](#) is required.

Settings:

- 0 — Off
- 1 — Ridethrough On
- 2 — Decel Stop

Ridethrough Setup Requirements

1. Select the **Ridethrough Mode** at [F302](#).
2. Select the **Ridethrough Time** at [F310](#).

Direct Access Number — F302

Parameter Type — **Selection List**

Factory Default — **Off**

Changeable During Run — **Yes**

Number of Retries

Program ⇒ Protection

After a trip has occurred, this parameter sets the number of times that an automatic system restart is attempted for a qualified trip.

The trip conditions listed below will not initiate the automatic **Retry/Restart** function:

- Input Phase Loss (Input Phase Failure)
- Output Phase Loss (Output Phase Failure)
- Output Current Protection Fault
- Output Current Detector error
- Load Side Over-Current At Start
- Earth Fault (Ground Fault)
- Over-Current During Acceleration
- Arm Over-Current at start-up
- Low-Current
- Voltage Drop In Main Circuit
- EEPROM Data Fault (EEPROM Fault)
- Flash Memory/Gate Array/RAM-ROM Fault
- CPU Fault
- Emergency Off (EMG)
- Communication Error
- Option Fault
- Sink/Source Setting Error
- Overspeed Error
- Over-Torque
- Key Error
- External Thermal Error
- Externally-Controlled Interrupt

See the section titled [System Setup Requirements](#) on pg. 8 for more information on this setting.

Direct Access Number — F303

Parameter Type — **Numerical**

Factory Default — **00**

Changeable During Run — **Yes**

Minimum — 00

Maximum — 10

F304

F305

Dynamic Braking (Not Used)

Program ⇒ Protection

This parameter **Enables/Disables** the **Dynamic Braking** system.

Note: **Dynamic Braking** is not available on the Q9 ASD.

Settings:

- 0 — Off
- 1 — On with Overload Detection
- 2 — On without Overload Detection

Dynamic Braking

Dynamic Braking is used to prevent over-voltage faults during rapid deceleration or constant speed run on cyclic overhauling applications.

Dynamic Braking dissipates regenerated energy in the form of heat. When using a DBR use thermal protection.

The resistive load is connected across terminals **PA** and **PB** (non-polarized). Using a low-value, high-wattage resistance as a load for the generated current, the resistive load dissipates the induced energy.

Dynamic Braking helps to slow the load quickly; it cannot act as a holding brake.

The **Dynamic Braking** function may be setup and enabled by connecting a braking resistor from terminal **PA** to **PB** of the drive and providing the proper information at **F304**, **F308**, and **F309**.

Direct Access Number — F304

Parameter Type — **Selection List**

Factory Default — **Off**

Changeable During Run — **No**

Over-Voltage Stall Enable

Program ⇒ Protection

This parameter enables the **Over-Voltage Limit** function. This feature is used to set the upper DC bus voltage threshold that, once exceeded, will cause an **Over-Voltage Stall**.

An **Over-Voltage Stall** increases the output frequency of the drive during deceleration for a specified time in an attempt to prevent an **Over-Voltage Trip**.

If the over-voltage threshold level setting of parameter **F626** is exceeded for more than 4 ms, an **Over-Voltage Trip** will be incurred.

Note: This parameter setting may increase deceleration times.

Note: Over-voltage alarms will display **OP** to convey Over-Potential.

Settings:

- 0 — Enabled (Over-Voltage Stall)
- 1 — Disabled
- 2 — Enabled (Forced Shorted Deceleration)
- 3 — Enabled (Forced Dynamic Braking Deceleration — Not Used)

Direct Access Number — F305

Parameter Type — **Selection List**

Factory Default — **(ASD-Dependent)**

Changeable During Run — **Yes**

F307

F310

<p>Voltage Compensation</p> <p>Program ⇒ Fundamental 1</p> <p>This parameter Enables/Disables the Voltage Compensation function.</p> <p>When Enabled, this function provides a constant V/f ratio during periods of input voltage fluctuations.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Disabled (Output Voltage Unlimited) 1 — Enabled (Supply Voltage Compensation) 2 — Disabled (Output Voltage Limited) 3 — Enabled (Supply Voltage Compensation w/Output Voltage Limited) 	<p>Direct Access Number — F307</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Disabled (Output Voltage Unlimited)</p> <p>Changeable During Run — No</p>
<p>Dynamic Braking Resistance (Not Used)</p> <p>Program ⇒ Protection</p> <p>This parameter is used to input the resistive value of the Dynamic Braking Resistor being used.</p> <p>Light-duty and heavy-duty resistors vary from a few ohms to several hundred ohms. The appropriate resistance size will be typeform- <u>and</u> application-specific.</p> <p><i>Note:</i> Using a resistor value that is too low may result in system damage.</p> <p><i>Note:</i> Dynamic Braking is not available on the Q9 ASD.</p>	<p>Direct Access Number — F308</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — No</p> <p>Minimum — 0.5</p> <p>Maximum — 1000.0</p> <p>Units — Ω</p>
<p>Dynamic Braking Capacity (Not Used)</p> <p>Program ⇒ Protection</p> <p>This parameter is used to input the wattage of the Dynamic Braking Resistor.</p> <p><i>Note:</i> Using a resistor with a wattage rating that is too low may result in system damage.</p> <p><i>Note:</i> Dynamic Braking is not available on the Q9 ASD.</p>	<p>Direct Access Number — F309</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — No</p> <p>Minimum — 0.01</p> <p>Maximum — 600.00</p> <p>Units — kW</p>
<p>Ridethrough Time</p> <p>Program ⇒ Protection</p> <p>In the event of a momentary power outage, this parameter determines the length of the Ridethrough time.</p> <p>The Ridethrough will be maintained for the number of seconds set using this parameter.</p> <p>See parameter F302 for more information on the Ridethrough function.</p> <p><i>Note:</i> The actual Ridethrough Time is load-dependent.</p>	<p>Direct Access Number — F310</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 2.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.1</p> <p>Maximum — 320.0</p> <p>Units — Seconds</p>

F311**F316****Disable Forward Run/Reverse Run**

Program ⇒ Fundamental 1

This parameter **Enables/Disables** the **Forward Run** or **Reverse Run** mode.

If either direction is disabled, commands received for the disabled direction will not be recognized.

If both directions are disabled, the received direction command will determine the direction of the motor rotation.

Settings:

- 0 — Permit All
- 1 — Disable Reverse Run
- 2 — Disable Forward Run

Direct Access Number — F311

Parameter Type — **Selection List**

Factory Default — **Off**

Changeable During Run — **No**

Random Mode

No Path — Direct Access Only

This parameter adjusts the carrier frequency randomly. This feature is effective in minimizing the negative effects of mechanical resonance.

Settings:

- 0 — Disabled
- 1 — Enabled

Direct Access Number — F312

Parameter Type — **Selection List**

Factory Default — **Disabled**

Changeable During Run — **No**

Carrier Frequency Control Mode

No Path — Direct Access Only

This parameter provides for the automatic decrease of the carrier frequency.

Select **1** to decrease the **Carrier Frequency** setting as a function of an increased current requirement.

Selection **2** or **3** may also include an output voltage drop as a function of an increased current requirement. The **Carrier Frequency** should be set below 4 kHz.

Settings:

- 0 — Disabled – (No Decrease and No Limit)
- 1 — Valid Decrease and No Limit
- 2 — No Decrease and Limit Small Pulse
- 3 — Valid Decrease and Limit Small Pulse

Direct Access Number — F316

Parameter Type — **Selection List**

Factory Default — **Valid Decrease and No Limit**

Changeable During Run — **Yes**

F320

F323

Drooping Gain

No Path — Direct Access Only

This parameter sets the effective 100% output torque level while operating in the **Drooping Control** mode. This value is the upper torque limit of the motor being driven by a given ASD while operating in the **Drooping Control** mode.

Note: The maximum frequency output is not limited by the setting of **F011** while operating in the **Drooping Control** mode.

Drooping

Drooping Control, also called **Load Share**, is used to share the load among two or more mechanically coupled motors. Unlike **Stall**, which reduces the output frequency in order to limit the load once the load reaches a preset level, **Drooping** can decrease or increase the V/f setting of a motor to maintain a balance between the output torque levels of mechanically coupled motors.

Because of variances in gearboxes, sheaves, belts, motors, and since the speed of the motor is constrained by the mechanical system, one motor may experience more load than its counterpart and may become overloaded. **Drooping Control** allows the overloaded motor to slow down, thus shedding load and encouraging a lightly-loaded motor to pick up the slack.

The goal of **Drooping Control** is to have the same torque ratios for mechanically coupled motors.

Direct Access Number — F320Parameter Type — **Numerical**Factory Default — **0.0**Changeable During Run — **Yes**

Minimum — 0.00

Maximum — 100.0

Units — %

Speed at 0% Drooping Gain

No Path — Direct Access Only

This parameter sets the motor speed when at the 0% output torque gain while operating in the **Drooping Control** mode. This function determines the lowest speed that **Drooping** will be in effect for motors that share the same load.

Direct Access Number — F321Parameter Type — **Numerical**Factory Default — **0.00**Changeable During Run — **Yes**

Minimum — 0.00

Maximum — 299.0

Units — Hz

Speed at F320 Drooping Gain

No Path — Direct Access Only

This parameter sets the motor speed when at the 100% output torque gain while operating in the **Drooping Control** mode. This function determines the speed of the individual motors at the 100% **Drooping Gain** setting for motors that share the same load.

Direct Access Number — F322Parameter Type — **Numerical**Factory Default — **0.00**Changeable During Run — **Yes**

Minimum — 0.00

Maximum — 299.0

Units — Hz

Drooping Insensitive Torque

No Path — Direct Access Only

This parameter defines a torque range in which the **Drooping Control** settings will be ignored and the programmed torque settings will be followed.

Direct Access Number — F323Parameter Type — **Numerical**Factory Default — **10.00**Changeable During Run — **Yes**

Minimum — 0.00

Maximum — 100.0

Units — %

F324

F354

Drooping Output Filter

No Path — Direct Access Only

This parameter is used to set the rate of output change allowed when operating in the **Drooping Control** mode.

Jerky operation may be reduced by increasing this setting.

Direct Access Number — F324

Parameter Type — Numerical

Factory Default — 100.0

Changeable During Run — Yes

Minimum — 0.1

Maximum — 200.0

Units — Radians/Second

Power Switching

Program ⇒ Special Controls


This parameter **Enables/Disables** the Commercial Power-to-ASD Output Switching function.

When enabled, the system may be set up to discontinue using the output of the drive and to switch to the commercial power in the event that 1) a trip is incurred, 2) a user-set frequency is reached, or 3) if initiated by a discrete input terminal.

Once set up with the proper switching frequency and hold times, the system will switch to commercial power upon reaching the F355 frequency criterion.

Switching may also be accomplished manually by activating the discrete input terminal **Line Bypass**. Terminal activation forces the ASD output speed to accelerate to the F355 switching frequency, resulting in the ASD-to-commercial power switching.

Deactivation of the discrete input terminal starts the hold-time counter setting (F356) for ASD-to-commercial power switching. Once timed out the motor resumes normal commercial power operation.

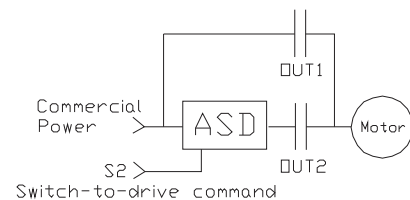

Settings:

- 0 — Off
- 1 — Switch at Signal Input and Trip
- 3 — Switch at Signal Input with Switching Frequency
- 4 — Switch at Signal Input and Trip with Switching Frequency

Switching Setup Requirements

F354 — Enable the switching function.

F355 — Set the switching frequency.

F356 — (Speed) Hold-time before applying ASD output after the switching criteria has been met.

F357 — (Speed) Hold-time before applying commercial power after the switching criteria has been met.

F358 — (Speed) Hold-time of applying commercial power after the switching criteria have been met.

Set a discrete input terminal to **Commercial Power ASD Switching**.

Set **OUT1** and **OUT2** to **Commercial Power/ASD Switching 1** and **2**, respectively.

Note: Ensure that the ASD/Commercial Power switching directions are the same and that **F311** is set to **Permit All**.

Note: The **OUT1** and **OUT2** outputs assigned to **Commercial Power/ASD Switching Output** are used to actuate the re-routing contactors.

F355

F359

<p>Power Switching Frequency</p> <p>Program ⇒ Special Controls</p> <p>When enabled at F354 and with a properly configured discrete output terminal, this parameter sets the frequency at which the At Frequency Powerline Switching function engages.</p> <p>The At Frequency Powerline Switching function commands the system to discontinue using the output of the drive and to switch to commercial power once reaching the frequency set at this parameter.</p> <p>See parameter F354 for more information on this setting.</p>	<p>Direct Access Number — F355</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 60.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — Max. Freq. (F011)</p> <p>Units — Hz</p>
<p>ASD Switching Wait Time</p> <p>Program ⇒ Special Controls</p> <p>This parameter determines the amount of time that the drive will wait before outputting a signal to the motor once the switch-to-drive-output criteria has been met.</p> <p>See parameter F354 for more information on this setting.</p>	<p>Direct Access Number — F356</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.10</p> <p>Maximum — 10.00</p> <p>Units — Seconds</p>
<p>Commercial Power Switching Wait Time</p> <p>Program ⇒ Special Controls</p> <p>This parameter determines the amount of time that the drive will wait before allowing commercial power to be applied to the motor once the switch-to-commercial-power criteria has been met.</p> <p>See parameter F354 for more information on this setting.</p>	<p>Direct Access Number — F357</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.62</p> <p>Changeable During Run — Yes</p> <p>Minimum — (ASD-Dependent)</p> <p>Maximum — 10.00</p> <p>Units — Seconds</p>
<p>Commercial Power Switching Freq. Hold Time</p> <p>Program ⇒ Special Controls</p> <p>This parameter determines the amount of time that the connection to commercial power is maintained once the switch-to-drive-output criteria has been met.</p> <p>See parameter F354 for more information on this setting.</p>	<p>Direct Access Number — F358</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 2.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.10</p> <p>Maximum — 10.00</p> <p>Units — Seconds</p>
<p>PID Control Switching</p> <p>Program ⇒ Feedback Settings</p> <p>This parameter Enables/Disables PID feedback control.</p> <p>Selecting Process PID uses the upper and lower-limit settings of parameters F367 and F368.</p> <p>Selecting Speed PID uses the upper and lower-limit settings of parameters F370 and F371.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — PID Off 1 — Process PID 2 — Speed PID 	<p>Direct Access Number — F359</p> <p>Parameter Type — Selection List</p> <p>Factory Default — PID Off</p> <p>Changeable During Run — No</p>

F360

F364

PID Feedback Selection

Program ⇒ Feedback Settings

This parameter is used to select the source of the feedback control. When enabled at parameter [F359](#), this parameter determines the source of the motor-control feedback or it may be set to the fixed value of zero.

Settings:

- 0 — Feedback Value = Zero
- 1 — V/I
- 2 — RR
- 3 — RX
- 4 — RX2 (AI1)
- 5 — Option V/I
- 6 — PG Feedback

Proportional-Integral-Derivative (PID) — A closed-loop control technique that seeks error minimization by reacting to three values: One that is proportional to the error, one that is representative of the error, and one that is representative of the rate of change of the error.

PID Feedback Delay Filter

Program ⇒ Feedback Settings

This parameter determines the delay in the ASD output response to the motor-control feedback signal (Signal source is selected at [F360](#)).

PID Feedback Proportional (P) Gain

Program ⇒ Feedback Settings

This parameter determines the degree that the **Proportional** function affects the output signal. The larger the value entered here, the quicker the drive responds to changes in feedback.

PID Feedback Integral (I) Gain

Program ⇒ Feedback Settings

This parameter determines the degree that the **Integral** function affects the output signal. The smaller the value here, the more pronounced the effect of the integral function on the output signal.

PID Deviation Upper-Limit

Program ⇒ Feedback Settings

This parameter determines the maximum amount that the feedback may increase the output signal.

Direct Access Number — F360Parameter Type — **Selection List**Factory Default — **Feedback Value = Zero**Changeable During Run — **Yes****Direct Access Number** — F361Parameter Type — **Numerical**Factory Default — **0.1**Changeable During Run — **Yes**

Minimum — 0.0

Maximum — 25.0

Direct Access Number — F362Parameter Type — **Numerical**Factory Default — **0.10**Changeable During Run — **Yes**

Minimum — 0.01

Maximum — 100.0

Direct Access Number — F363Parameter Type — **Numerical**Factory Default — **0.10**Changeable During Run — **Yes**

Minimum — 0.01

Maximum — 100.00

Direct Access Number — F364Parameter Type — **Numerical**Factory Default — **60.00**Changeable During Run — **Yes**

Minimum — 0.00

Maximum — 60.00

Units — Hz

F365

F370

<p>PID Deviation Lower-Limit</p> <p>Program ⇒ Feedback Settings</p> <p>This parameter determines the maximum amount that the feedback may decrease the output signal.</p>	<p>Direct Access Number — F365</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 60.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 60.00</p> <p>Units — Hz</p>
<p>PID Feedback Differential (D) Gain</p> <p>Program ⇒ Feedback Settings</p> <p>This parameter determines the degree that the Differential function affects the output signal. The larger the value entered here, the more pronounced the affect of the differential function for a given feedback signal level.</p>	<p>Direct Access Number — F366</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 2.55</p>
<p>Process Upper-Limit</p> <p>Program ⇒ Feedback Settings</p> <p>Selecting Process PID at parameter F359 allows for this parameter setting to function as the Upper-Limit while operating in the PID Control mode.</p>	<p>Direct Access Number — F367</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 60.00</p> <p>Changeable During Run — No</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>Process Lower-Limit</p> <p>Program ⇒ Feedback Settings</p> <p>Selecting Process PID at parameter F359 allows for this parameter setting to function as the Lower-Limit while operating in the PID Control mode.</p>	<p>Direct Access Number — F368</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — No</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>PID Control Wait Time</p> <p>Program ⇒ Feedback Settings</p> <p>This parameter is used to delay the start of PID Control at start up. During the wait time set here, the ASD will follow the frequency control input of the process value and the feedback input will be ignored until this setting times out. At which time the PID setup assumes control.</p>	<p>Direct Access Number — F369</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 2400</p> <p>Units — Seconds</p>
<p>PID Output Upper-Limit</p> <p>Program ⇒ Feedback Settings</p> <p>Selecting Speed PID at parameter F359 allows for this parameter setting to function as the Upper-Limit while operating in the PID Control mode.</p>	<p>Direct Access Number — F370</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 60.00</p> <p>Changeable During Run — No</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>

F371

F375

<p>PID Output Lower-Limit</p> <p>Program ⇒ Feedback Settings</p> <p>Selecting Speed PID at parameter F359 allows for this parameter setting to function as the Lower-Limit while operating in the PID Control mode.</p>	<p>Direct Access Number — F371</p> <p>Parameter Type — Numerical</p> <p>Factory Default — Lower-Limit (F013)</p> <p>Changeable During Run — Yes</p> <p>Minimum — Lower-Limit (F013)</p> <p>Maximum — Upper-Limit (F012)</p> <p>Units — Hz</p>
<p>Process Increasing Rate</p> <p>Program ⇒ Feedback Settings</p> <p>This parameter is used to limit the rate that the output of the ASD may increase for a given difference in the speed reference and the PID feedback value.</p>	<p>Direct Access Number — F372</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 10.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.1</p> <p>Maximum — 600.0</p> <p>Units — Seconds</p>
<p>Process Decreasing Rate</p> <p>Program ⇒ Feedback Settings</p> <p>This parameter is used to limit the rate that the output of the ASD may decrease for a given difference in the speed reference and the PID feedback value.</p>	<p>Direct Access Number — F373</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 10.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.1</p> <p>Maximum — 600.0</p> <p>Units — Seconds</p>
<p>Feedback Reach Detection Band</p> <p>No Path — Direct Access Only</p> <p>While operating in the PID mode, this parameter reads the feedback frequency and when the frequency read is within F374 Hz of the frequency command a properly configured output terminal is activated.</p> <p>Available output terminal settings for this parameter include: FC = RR, FC = RX, and FC = VI (see Table 7 on pg. 189).</p> <p>Where FC is the frequency command and RR, RX, and VI are the input terminals of the received feedback.</p>	<p>Direct Access Number — F374</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 2.50</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — Max. Freq. (F011)</p> <p>Units — Hz</p>
<p>Number of PG Input Pulses</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to set the number of pulses output from a shaft-mounted encoder that is used to indicate one revolution of rotation (360°) of the motor or of the motor-driven equipment.</p>	<p>Direct Access Number — F375</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — No</p> <p>Minimum — 12</p> <p>Maximum — 9999</p>

F376

F400

<p>Number of PG Input Phases</p> <p>No Path — Direct Access Only</p> <p>This parameter determines the type of information that is supplied by the phase encoder.</p> <p>Settings:</p> <ul style="list-style-type: none"> 1 — Single Phase 2 — Two Phase 	<p>Direct Access Number — F376</p> <p>Parameter Type — Selection List</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — Yes</p>
<p>PG Disconnection Detection</p> <p>No Path — Direct Access Only</p> <p>This parameter Enables/Disables the system's monitoring of the PG connection status when using encoders with line driver outputs.</p> <p><i>Note:</i> The PG Vector Feedback Board option is required to use this feature.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Disabled 1 — Enabled with Filter 3 — Enabled (Detect Momentary Power Fail) 	<p>Direct Access Number — F377</p> <p>Parameter Type — Selection List</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — Yes</p>
<p>PG Pulses Per Revolution</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to set the number of pulses per revolution of the shaft-mounted encoder.</p> <p><i>Note:</i> The PG Vector Feedback Board option is required to use this feature.</p>	<p>Direct Access Number — F378</p> <p>Parameter Type — Selection List</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 12</p> <p>Maximum — 9999</p> <p>Units — Seconds</p>
<p>Autotuning Control</p> <p>Program ⇒ Motor Settings</p> <p>This parameter sets the Autotune command status.</p> <p>Selecting Reset Motor Defaults for this parameter sets parameters F410, F411, F412, and F413 to the factory default settings.</p> <p>If selecting Autotune on Run Command, Autotune Initiated by Input Terminal, or Autotune of Detail Parameters for this parameter set the Base Frequency, Base Frequency Voltage, and the Motor Rated Revolutions to the name-plated values of the motor to achieve the best possible Autotune precision.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Autotune Disabled 1 — Reset Motor Defaults 2 — Enable Autotune on Run Command 3 — Autotuning by Input Terminal Signal (see Table 4 on pg. 185) 4 — Motor Constant Auto Calculation 	<p>Direct Access Number — F400</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Autotune Disabled</p> <p>Changeable During Run — No</p>

F401**F407****Motor Slip Gain**

Program ⇒ Motor Settings

This parameter provides a degree of slip compensation for a given load. A higher setting here decreases the slip allowed for a given load/ASD output ratio.

Direct Access Number — F401Parameter Type — **Numerical**Factory Default — **70**Changeable During Run — **Yes**

Minimum — 0

Maximum — 150

Units — %

Autotuning 2

Program ⇒ Motor Settings

This parameter is used to set the degree that the system automatically adjust the **Autotune** parameter values as a function of increases in the temperature of the motor.

Settings:

0 — Off

1 — Self-Cooled Motor Tuning

2 — Forced Air Cooled Motor Tuning

Direct Access Number — F402Parameter Type — **Selection List**Factory Default — **Off**Changeable During Run — **No****Motor Rated Capacity**

Program ⇒ Motor Settings

This parameter is used to set the (name-plated) rated capacity of the motor being used.

Direct Access Number — F405Parameter Type — **Numerical**Factory Default — **0.75**Changeable During Run — **Yes**

Minimum — 0.1

Maximum — 500.00

Units — kW

Motor Rated Current

Program ⇒ Motor Settings

This parameter is used to set the (name-plated) current rating of the motor being used.

Direct Access Number — F406Parameter Type — **Numerical**Factory Default — **ASD Dependent**Changeable During Run — **Yes**

Minimum — 0.1

Maximum — 2000.0

Units — Amps

Motor Rated RPM

Program ⇒ Motor Settings

This parameter is used input the (name-plated) rated speed of the motor.

Direct Access Number — F407Parameter Type — **Numerical**Factory Default — **1730**Changeable During Run — **Yes**

Minimum — 100

Maximum — 60000

Units — RPM

F409

F415

<p>Base Frequency Voltage 1</p> <p>Program ⇒ Motor Settings</p> <p>The Base Frequency Voltage 1 is the ASD output voltage level at the Base Frequency (F014). Regardless of the programmed value, the output voltage cannot be higher than the input voltage.</p> <p>The actual output voltage will be influenced by the input voltage of the ASD and the Voltage Compensation setting (F307).</p>	<p>Direct Access Number — F409</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 50.0</p> <p>Maximum — 660.0</p> <p>Units — Volts</p>
<p>Motor Constant 1 (Torque Boost)</p> <p>Program ⇒ Motor Settings</p> <p>This parameter sets the primary resistance of the motor. Increasing this value can prevent a drop in the torque of the motor at low speeds. Increasing this value excessively can result in nuisance overload tripping.</p>	<p>Direct Access Number — F410</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.0</p> <p>Maximum — 30.0</p> <p>Units — %</p>
<p>Motor Constant 2 (No-Load Current)</p> <p>Program ⇒ Motor Settings</p> <p>This parameter is used to set the current level required to excite the motor. Specifying a value that is too high for this parameter may result in hunting (erratic motor operation).</p>	<p>Direct Access Number — F411</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — No</p> <p>Minimum — 10</p> <p>Maximum — 90</p> <p>Units — %</p>
<p>Motor Constant 3 (Leak Inductance)</p> <p>Program ⇒ Motor Settings</p> <p>This parameter is used to set the leakage inductance of the motor. A larger setting here results in higher output torque at high speeds.</p>	<p>Direct Access Number — F412</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 200</p> <p>Units — %</p>
<p>Motor Constant 4 (Rated Slip)</p> <p>Program ⇒ Motor Settings</p> <p>This parameter is used to set the secondary resistance of the motor. An increase in this parameter setting results in an increase of compensation for motor slip.</p>	<p>Direct Access Number — F413</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.01</p> <p>Minimum — 25.00</p> <p>Units — %</p>
<p>Exciting Strengthening Coefficient</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to increase the magnetic flux of the motor at low-speeds. This feature is useful when increased torque at low speeds is required.</p>	<p>Direct Access Number — F415</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 100</p> <p>Changeable During Run — Yes</p> <p>Minimum — 100</p> <p>Maximum — 130</p> <p>Units — %</p>

F416

F442

Stall Prevention Factor 1

No Path — Direct Access Only

This parameter is to be adjusted in the event that the motor stalls when operated above the base frequency.

If a momentary heavy-load condition occurs the motor may stall before the load current reaches the stall prevention level setting of **F601**.

A drop in the supply voltage may cause fluctuations of the load current or may cause motor vibration. A gradual adjustment of this parameter may alleviate this condition.

Start with a setting of 85 at these parameters and gradually adjust them from there one at a time until the desired results are produced.

Adjustments to this parameter may increase the load current of the motor and subsequently warrant an adjustment at the **Motor Overload Protection Level** setting.

Direct Access Number — F416Parameter Type — **Numerical**Factory Default — **100**Changeable During Run — **No**

Minimum — 10

Maximum — 250

Power Running Torque Limit

No Path — Direct Access Only

This parameter determines the source of the control signal for the positive torque limit setting.

If **F441** is selected, the value set at **F441** is used as the **Power Running Torque Limit** input.

Settings:

- 1 — V/I
- 2 — RR
- 3 — RX
- 4 — **F441** (Setting)

Direct Access Number — F440Parameter Type — **Selection List**Factory Default — **F441 Setting**Changeable During Run — **Yes****Power Running Torque Limit Level**

No Path — Direct Access Only

This parameter provides a value for the **Power Running Torque Limit** setting if **Setting** is selected at parameter **F440**.

This value provides the positive torque upper-limit for the number **1** motor.

Set this parameter to **250%** to disable this function.

Direct Access Number — F441Parameter Type — **Numerical**Factory Default — **250.0 (Disabled)**Changeable During Run — **Yes**

Minimum — 0.00

Maximum — 250.0 (Disabled)

Units — %

Regenerative Braking Torque Limit

No Path — Direct Access Only

This parameter determines the source of the **Regenerative Torque Limit** control signal.

If **F443** is selected, the value set at **F443** is used for this parameter setting.

Settings:

- 1 — V/I
- 2 — RR
- 3 — RX
- 4 — **F443** (Setting)

Direct Access Number — F442Parameter Type — **Selection List**Factory Default — **F443 Setting**Changeable During Run — **Yes**

F443

F470

<p>Regenerative Braking Torque Limit Setting</p> <p>No Path — Direct Access Only</p> <p>This parameter provides a value to be used as the Regeneration Torque Limit 1 if F443 (Setting) is selected at parameter F442.</p> <p>Set this parameter to 250% to disable this function.</p>	<p>Direct Access Number — F443</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 250.0 (Disabled)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 250.0</p> <p>Units — %</p>
<p>Speed Loop Proportional Gain</p> <p>No Path — Direct Access Only</p> <p>During closed-loop operation, this parameter sets the response sensitivity of the drive when monitoring the output speed for control.</p> <p>The larger the value entered here, the larger the change in the output speed for a given received feedback signal.</p>	<p>Direct Access Number — F460</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — No</p> <p>Minimum — 1</p> <p>Maximum — 9999</p>
<p>Speed Loop Stabilization Coefficient</p> <p>No Path — Direct Access Only</p> <p>During closed-loop operation, this parameter sets the response sensitivity of the drive when monitoring the output speed for control.</p> <p>The larger the value entered here, the quicker the response to changes in the received feedback.</p>	<p>Direct Access Number — F461</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 100</p> <p>Changeable During Run — Yes</p> <p>Minimum — 1</p> <p>Maximum — 9999</p>
<p>Load Moment of Inertia 1</p> <p>No Path — Direct Access Only</p> <p>This parameter is used for calculating accel/decel torque when compensating for load inertia while operating in the Drooping Control mode.</p>	<p>Direct Access Number — F462</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 35</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 100</p>
<p>V/I Input Bias</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to fine-tune the bias of the V/I input terminals.</p> <p><i>Note:</i> See note on pg. 40 for more information on the V/I terminal.</p> <p>This setting may be used to ensure that the zero level of the input source (pot, pressure transducer, flow meter, etc.) is also the zero level setting of the ASD system.</p> <p>This is accomplished by setting the input source to zero and adjusting this setting to provide an output of zero from the ASD.</p>	<p>Direct Access Number — F470</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 128</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 255</p>

F471

F474

V/I Input Gain

No Path — Direct Access Only

This parameter is used to fine tune the gain of the **V/I** input terminals.

Note: See note on pg. 40 for more information on the **V/I** terminal.

This setting may be used to ensure that the 100% level of the input source (pot, pressure transducer, flow meter, etc.) is also the 100% level setting of the ASD system.

This is accomplished by setting the input source to 100% and adjusting this setting to provide an output of 100% from the ASD.

Direct Access Number — F471

Parameter Type — **Numerical**

Factory Default — **124**

Changeable During Run — **Yes**

Minimum — 0

Maximum — 255

RR Input Bias

No Path — Direct Access Only

This parameter is used to fine tune the bias of the **RR** input terminal when this terminal is used as the control input while operating in the **Speed Control** mode or the **Torque Control** mode.

This setting may be used to ensure that the zero level of the input source (pot, pressure transducer, flow meter, etc.) is also the zero level setting of the ASD system.

This is accomplished by setting the input source to zero and adjusting this setting to provide an output of zero from the ASD.

Direct Access Number — F472

Parameter Type — **Numerical**

Factory Default — **128**

Changeable During Run — **Yes**

Minimum — 0

Maximum — 255

RR Input Gain

No Path — Direct Access Only

This parameter is used to fine tune the gain of the **RR** input terminal when this terminal is used as the control input while operating in the **Speed Control** mode or the **Torque Control** mode.

This setting may be used to ensure that the 100% level of the input source (pot, pressure transducer, flow meter, etc.) is also the 100% level setting of the ASD system.

This is accomplished by setting the input source to 100% and adjusting this setting to provide an output of 100% from the ASD.

Direct Access Number — F473

Parameter Type — **Numerical**

Factory Default — **154**

Changeable During Run — **Yes**

Minimum — 0

Maximum — 255

RX Input Bias

No Path — Direct Access Only

This parameter is used to fine tune the bias of the **RX** input terminal when this terminal is used as the control input while operating in the **Speed Control** mode or the **Torque Control** mode.

This setting may be used to ensure that the zero level of the input source (pot, pressure transducer, flow meter, etc.) is also the zero level setting of the ASD system.

This is accomplished by setting the input source to zero and adjusting this setting to provide an output of zero from the ASD.

Direct Access Number — F474

Parameter Type — **Numerical**

Factory Default — **127**

Changeable During Run — **Yes**

Minimum — 0

Maximum — 255

F475

F478

<p>RX Input Gain</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to fine tune the gain of the RX input terminal when this terminal is used as the control input while operating in the Speed Control mode or the Torque Control mode.</p> <p>This setting may be used to ensure that the 100% level of the input source (pot, pressure transducer, flow meter, etc.) is also the 100% level setting of the ASD system.</p> <p>This is accomplished by setting the input source to 100% and adjusting this setting to provide an output of 100% from the ASD.</p>	<p>Direct Access Number — F475</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 127</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 255</p>
<p>RX2 (AI1) Input Bias</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to fine tune the bias of the RX2 (AI1) input terminal when this terminal is used as the control input while operating in the Speed Control mode or the Torque Control mode.</p> <p>This setting may be used to ensure that the zero level of the input source (pot, pressure transducer, flow meter, etc.) is also the zero level setting of the ASD system.</p> <p>This is accomplished by setting the input source to zero and adjusting this setting to provide a zero output from the ASD.</p>	<p>Direct Access Number — F476</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 128</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 255</p>
<p>RX2 (AI1) Input Gain</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to fine tune the gain of the RX2 (AI1) input terminal when this terminal is used as the control input while operating in the Speed Control mode or the Torque Control mode.</p> <p>This setting may be used to ensure that the 100% level of the input source (pot, pressure transducer, flow meter, etc.) is also the 100% level setting of the ASD system.</p> <p>This is accomplished by setting the input source to 100% and adjusting this setting to provide an output of 100% from the ASD.</p>	<p>Direct Access Number — F477</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 128</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 255</p>
<p>AI2 (Option V/I) Input Bias</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to fine tune the gain of the Optional AI2 input terminal when this terminal is used as the control input while operating in the Speed Control mode or the Torque Control mode.</p> <p>This setting may be used to ensure that the 100% level of the input source (pot, pressure transducer, flow meter, etc.) is also the 100% level setting of the ASD system.</p> <p>This is accomplished by setting the input source to 100% and adjusting this setting to provide an output of 100% from the ASD.</p>	<p>Direct Access Number — F478</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 128</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 255</p>

F479

F501

<p>AI2 (Option V/I) Input Gain</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to fine tune the gain of the Optional AI2 input terminal when this terminal is used as the control input while operating in the Speed Control mode or the Torque Control mode.</p> <p>This setting may be used to ensure that the 100% level of the input source (pot, pressure transducer, flow meter, etc.) is also the 100% level setting of the ASD system.</p> <p>This is accomplished by setting the input source to 100% and adjusting this setting to provide an output of 100% from the ASD.</p>	<p>Direct Access Number — F479</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 128</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 255</p>
<p>Permanent Magnet (PM) Motor Constant 1</p> <p>No Path — Direct Access Only</p> <p>This parameter is used with synchronous motor applications only.</p> <p>Contact the Toshiba Customer Support Center for information on this parameter.</p>	<p>Direct Access Number — F498</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 100</p> <p>Units — %</p>
<p>Permanent Magnet (PM) Motor Constant 2</p> <p>No Path — Direct Access Only</p> <p>This parameter is used with synchronous motor applications only.</p> <p>Contact the Toshiba Customer Support Center for information on this parameter.</p>	<p>Direct Access Number — F499</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 100</p> <p>Units — %</p>
<p>Acceleration Time 2</p> <p>Program ⇒ Fundamental 2</p> <p>This parameter specifies the time in seconds for the output of the ASD to go from 0.0 Hz to the Maximum Frequency for the Acceleration 2 profile. The Accel/Decel Pattern may be set using F502.</p> <p>This setting is also used to determine the acceleration rate of the UP/DOWN Frequency Functions.</p> <p><i>Note:</i> An acceleration time shorter than the load will allow may cause nuisance tripping and mechanical stress to loads. Automatic Accel/Decel, Stall, and Ridethrough settings may lengthen the acceleration times.</p>	<p>Direct Access Number — F500</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.1</p> <p>Maximum — 6000.0</p> <p>Units — Seconds</p>
<p>Deceleration Time 2</p> <p>Program ⇒ Fundamental 2</p> <p>This parameter specifies the time in seconds for the output of the ASD to go from the Maximum Frequency to 0.0 Hz for the Deceleration 2 profile. The Accel/Decel Pattern may be set using F502.</p> <p>This setting is also used to determine the deceleration rate of the UP/DOWN Frequency Functions.</p> <p><i>Note:</i> A deceleration time shorter than the load will allow may cause nuisance tripping and mechanical stress to loads. Automatic Accel/Decel, Stall, and Ridethrough settings may lengthen the deceleration times.</p>	<p>Direct Access Number — F501</p> <p>Parameter Type — Numerical</p> <p>Factory Default — (ASD-Dependent)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.1</p> <p>Maximum — 6000</p> <p>Units — Seconds</p>

Acc/Dec Pattern 1

Program ⇒ Fundamental 1


This parameter enables a user-selected preprogrammed output profile that controls the acceleration and deceleration pattern for the **Accel/Decel 1** parameter.

Settings:


- 0 — Linear
- 1 — S-Pattern 1
- 2 — S-Pattern 2

The figures below provide a profile of the available accel/decel patterns.


Linear acceleration and deceleration is the default pattern and is used on most applications.

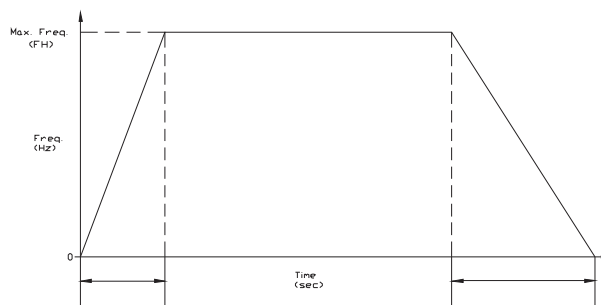

S-Pattern 1 is used for applications that require quick acceleration and deceleration. This setting is also popular for applications that require shock absorption at the start of acceleration or deceleration.

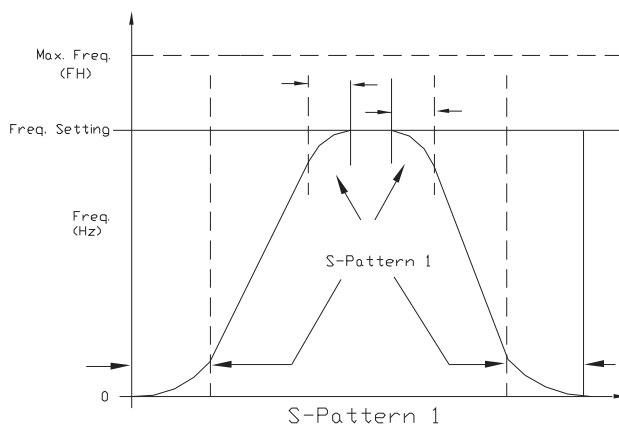

S-Pattern 2 acceleration and deceleration rate decreases above the base frequency.

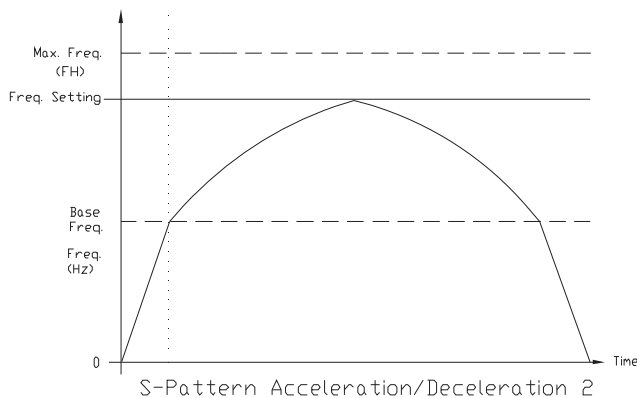

Direct Access Number — F502

Parameter Type — Selection List

Factory Default — Linear

Changeable During Run — Yes

F503

F505

Acc/Dec Pattern 2

Program ⇒ Fundamental 2

This parameter enables a user-selected preprogrammed output profile that controls the acceleration and deceleration patterns for the **Accel/Decel 2** parameter. See [F502](#) for more information on this parameter.

Settings:

- 0 — Linear
- 1 — S-Pattern 1
- 2 — S-Pattern 2

Panel Acc/Dec Selection

Program ⇒ Panel Control

Two Accel/Decel profiles may be set up and run individually.

Accel/Decel Time 1 or **2** may be selected using this parameter setting. The system may also be configured to switch between the number **1** and the number **2** profiles under user-set conditions.

Switching may be accomplished manually via a properly configured discrete input terminal or automatically via a threshold frequency setting.

This parameter is used to manually select one of the configured accel/decel profiles to be used.

Settings:

- 1 — Acc/Dec 1
- 2 — Acc/Dec 2

Each Accel/Decel selection is comprised of an **Acceleration Time**, **Deceleration Time**, and a **Pattern** selection.

Accel/Decel 1 includes a **Switching Frequency** setting ([F505](#)). The **Switching Frequency** is used as a threshold frequency that, once reached (during accel or decel), the ASD switches to the other profile.

Acc/Dec 1 is set up using parameters [F009](#) (Acc Time), [F010](#) (Dec Time), [F502](#) (Pattern), and [F505](#) (Switching Frequency).

Acc/Dec 2 is set up using parameters [F500](#) (Acc Time), [F501](#) (Dec Time), and [F503](#) (Pattern).

To switch using a discrete input terminal, assign the function **A/D 1/2** to an unused discrete input terminal. Activating or deactivating the **A/D 1/2** terminal toggles to and from the **Accel/Decel** profiles **1** and **2** and will override the setting of this parameter.

[Figure 26](#) shows the setup requirements and the resulting output frequency response when using **Switching Frequency** settings to control the **Acc/Dec** profile of the ASD output.

Accel/Decel Switching Frequency 1


Program ⇒ Fundamental 2

This parameter sets the frequency at which the acceleration/deceleration control is switched from the **Accel 1** profile to the **Accel 2** profile or from the **Decel 2** to the **Decel 1** during a multiple-acceleration/deceleration profile configuration.

See [F504](#) for more information on this parameter.

Direct Access Number — **F503**Parameter Type — **Selection List**Factory Default — **Linear**Changeable During Run — **Yes**Direct Access Number — **F504**Parameter Type — **Selection List**Factory Default — **Acc/Dec 1**Changeable During Run — **Yes**.

Figure 26. Using Acc/Dec Switching.

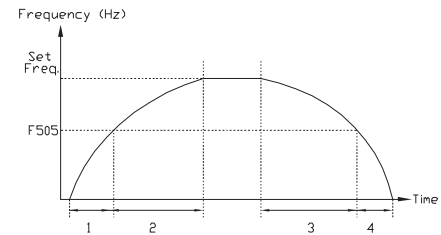1 — Accel time 1 ([F009](#) setting)2 — Accel time 2 ([F500](#) setting)3 — Decel time 2 ([F501](#) setting)4 — Decel time 1 ([F010](#) setting)

[F505](#) — Frequency threshold setting at which the 1-to-2 and the 3-to-4 switch

Direct Access Number — **F505**Parameter Type — **Numerical**Factory Default — **0.00**Changeable During Run — **Yes**

Minimum — 0.00

Maximum — **Max. Freq.** ([F011](#))

Units — Hz

F600

F603

Electronic Thermal Protection 1

Program ⇒ Motor Settings

This parameter specifies the motor overload current level for motor number **1**. This value is entered as either a percentage of the full load rating of the ASD or as a percentage of the FLA of the motor.

The unit of measurement for this parameter may be set to **A/V** (Amps) or it may be set as a percentage of the ASD rating. The name-plated FLA of the motor may be entered directly when **Amps** is selected as the unit of measurement (see **F701** to change the display unit).

Electronic Thermal Protection 1 settings will be displayed in **Amps** if the **EOI** display units are set to **A/V** rather than **%**.

Direct Access Number — F600Parameter Type — **Numerical**Factory Default — **100**Changeable During Run — **Yes**

Minimum — 10

Maximum — 100.0

Units — % (or **F701** setting)**Over-Current Stall Level**

Program ⇒ Protection

This parameter specifies the output current level at which the output frequency is reduced in an attempt to prevent a trip. The over-current level is entered as a percentage of the maximum rating of the drive.

*Note: The **Motor Overload Protection** parameter must be enabled at **F017** to use this feature.*

Direct Access Number — F601Parameter Type — **Numerical**Factory Default — **(ASD-Dependent)**Changeable During Run — **Yes**

Minimum — 10

Maximum — 165

Units — %

Trip Save at Power Down

Program ⇒ Protection

This parameter **Enables/Disables** the **Trip Save** setting. When enabled, this feature logs the trip event and retains the trip information when the system powers down. The trip information may be viewed from the **Monitor** screen.

When disabled, the trip information will be cleared when the system powers down.

Settings:

0 — Disabled

1 — Enabled

Direct Access Number — F602Parameter Type — **Selection List**Factory Default — **Disabled**Changeable During Run — **Yes****Emergency Off Mode Selection**

Program ⇒ Protection

This parameter determines the method used to stop the motor in the event that an **Emergency Off** command is received and the system is configured to use this feature.

This setting may also be associated with the **FL** terminals to allow the **FL** relay to change states when an **EOFF** condition occurs by setting the **FL** terminal to **Fault FL** (all) (see **F132**).

Note: A supplemental emergency stopping system should be used with the ASD. Emergency stopping should not be a task of the ASD alone.

Settings:

0 — Coast Stop

1 — Deceleration Stop

2 — DC Injection Braking Stop

Direct Access Number — F603Parameter Type — **Selection List**Factory Default — **Coast Stop**Changeable During Run — **No**

F604

F608

<p>Emergency Off DC Injection Time</p> <p>Program ⇒ Protection</p> <p>This parameter determines the time that the DC Injection braking is applied to the motor if DC Injection is selected at F603.</p>	<p>Direct Access Number — F604</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 1.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.0</p> <p>Maximum — 20.0</p> <p>Units — Seconds</p>
<p>Output Phase Failure Detection</p> <p>Program ⇒ Protection</p> <p>This parameter Enables/Disables the monitoring of each phase of the 3-phase output signal (U, V, or W) of the ASD. If either line is missing, inactive, or not of the specified level for one second or more, the ASD incurs a trip.</p> <p><i>Note: Autotune checks for phase failures regardless of this setting.</i></p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — No Detection (Disabled) 1 — First Start (Enabled at Startup and Retry) 2 — Every Start (Enabled at Run Command and Retry) 3 — During Run (Enabled During Run) 4 — Start + Run (Enabled at Startup and During Run) 5 — Auto-Restart (Enabled Detects an ALL-PHASE Failure ONLY - Will Not Trip, Restarts At Reconnect) 	<p>Direct Access Number — F605</p> <p>Parameter Type — Selection List</p> <p>Factory Default — No Detection (Disabled)</p> <p>Changeable During Run — No</p>
<p>Overload Reduction Starting Frequency</p> <p>Program ⇒ Protection</p> <p>This parameter is primarily used with V/f motors. It is used to reduce the starting frequency at which the Overload Reduction function begins and, thus, overloads at a lower current level. This function is useful during extremely low-speed motor operation.</p> <p>This function is useful when used on loads such as fans, pumps, and blowers that follow the square reduction torque characteristic.</p> <p>The default overload time is 300 seconds at 150% ASD output; this time may vary as a function of the magnitude of the overload.</p>	<p>Direct Access Number — F606</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 6.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 30.00</p> <p>Units — Hz</p>
<p>ASD Input Phase Failure Detection</p> <p>Program ⇒ Protection</p> <p>This parameter enables the 3-phase input power phase loss detection feature. A loss of either input phase (R, S, or T) results in a trip.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Disabled 1 — Enabled 	<p>Direct Access Number — F608</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Enabled</p> <p>Changeable During Run — No</p>

F609

F613

<p>Low-Current Detection Hysteresis Width</p> <p>Program ⇒ Protection</p> <p>During a momentary low-current condition, this parameter provides a current threshold level to which the low-current condition must return within the time setting of F612 or a Low-Current Trip will be incurred.</p>	<p>Direct Access Number — F609</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 10</p> <p>Changeable During Run — Yes</p> <p>Minimum — 1</p> <p>Maximum — 20</p> <p>Units — %</p>
<p>Low-Current Trip</p> <p>Program ⇒ Protection</p> <p>This parameter Enables/Disables the low-current trip feature.</p> <p>When enabled, the drive will trip on a low-current fault if the output current of the drive falls below the level defined at F611 and remains there for the time set at F612.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Disabled 1 — Enabled 	<p>Direct Access Number — F610</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Disabled</p> <p>Changeable During Run — No</p>
<p>Low-Current Detection Threshold</p> <p>Program ⇒ Protection</p> <p>With the Low-Current Trip (F610) parameter enabled, this function sets the low-current trip threshold.</p> <p>The threshold value is entered as a percentage of the maximum rating of the drive.</p>	<p>Direct Access Number — F611</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 100</p> <p>Units — %</p>
<p>Low-Current Trip Threshold Time</p> <p>Program ⇒ Protection</p> <p>With the Low-Current Trip (F610) parameter enabled, this function sets the time that the low-current condition must exist to cause a trip.</p>	<p>Direct Access Number — F612</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 255</p> <p>Units — Seconds</p>
<p>Short Circuit Detection At Start</p> <p>Program ⇒ Protection</p> <p>This parameter determines when the system will perform an Output Short Circuit test.</p> <p><i>Note: Selection 3 is recommended for high-speed motor applications. Because of the low impedance of high-speed motors the standard-pulse setting may result in a motor malfunction.</i></p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Every Start (Standard Pulse) 1 — Power On or Reset (Standard Pulse) 2 — Every Start (25 μS Pulse) 3 — Power On or Reset (25 μS Pulse) 4 — Every Start (10 μS pulse) 5 — Power On or Reset (10 μS Pulse) 	<p>Direct Access Number — F613</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Every Start (standard pulse)</p> <p>Changeable During Run — No</p>

F615

F619

<p>Over-Torque Trip</p> <p>Program ⇒ Protection</p> <p>This parameter Enables/Disables the Over-Torque Tripping function.</p> <p>When enabled, the ASD trips if an output torque value greater than the setting of F616 or F617 exists for a time longer than the setting of F618.</p> <p>When disabled, the ASD does not trip due to over-torque conditions.</p> <p><i>Note:</i> A discrete output terminal may be activated when an over-torque alarm occurs if so configured (see F130).</p> <p>Settings:</p> <p>0 — Disabled 1 — Enabled</p>	<p>Direct Access Number — F615</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Disabled</p> <p>Changeable During Run — No</p>
<p>Over-Torque Level (Positive Torque)</p> <p>Program ⇒ Protection</p> <p>This parameter sets the torque threshold level that is used as a setpoint for over-torque tripping during positive torque. This setting is a percentage of the maximum rated torque of the drive.</p> <p>This function is enabled at F615.</p>	<p>Direct Access Number — F616</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 250.00</p> <p>Changeable During Run — No</p> <p>Minimum — 0.00</p> <p>Maximum — 250.00</p> <p>Units — %</p>
<p>Over-Torque Detection Level (Negative Torque)</p> <p>Program ⇒ Protection</p> <p>This parameter sets the torque threshold level that is used as a setpoint for over-torque tripping during negative torque (Regen). This setting is a percentage of the maximum rated torque of the drive.</p> <p>This function is enabled at F615.</p>	<p>Direct Access Number — F617</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 250.00</p> <p>Changeable During Run — No</p> <p>Minimum — 0.00</p> <p>Maximum — 250.00</p> <p>Units — %</p>
<p>Over-Torque Detection Time</p> <p>Program ⇒ Protection</p> <p>This parameter sets the amount of time that the over-torque condition may exceed the tripping threshold level set at F616 and F617 before a trip occurs.</p> <p>This function is enabled at F615.</p>	<p>Direct Access Number — F618</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.50</p> <p>Changeable During Run — No</p> <p>Minimum — 0.00</p> <p>Maximum — 10.0</p> <p>Units — Seconds</p>
<p>Over-Torque Detection Hysteresis</p> <p>Program ⇒ Protection</p> <p>During a momentary over-torque condition, this parameter provides a torque threshold level to which the over-torque condition must return within the time setting of F618 or an Over-Torque Trip will be incurred.</p>	<p>Direct Access Number — F619</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 10.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 100.00</p> <p>Units — %</p>

F620

F624

<p>Cooling Fan Control</p> <p>Program ⇒ Protection</p> <p>This parameter sets the cooling fan run-time command.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Automatic 1 — Always On 	<p>Direct Access Number — F620</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Automatic</p> <p>Changeable During Run — Yes</p>
<p>Run-Time Alarm Setting</p> <p>Program ⇒ Protection</p> <p>This parameter sets a run-time value that, once exceeded, closes a discrete output contact. The output signal may be used to control external equipment or used to engage a brake.</p> <p>Associate the Total-Operation-Hours Alarm setting of Table 7 on pg. 189 to a discrete output contactor.</p> <p><i>Note:</i> The time displayed is 1/10th of the actual time (0.1 hr. = 1.0 hr.).</p>	<p>Direct Access Number — F621</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 610.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.0</p> <p>Maximum — 999.9</p> <p>Units — Hours (X 10)</p>
<p>Abnormal Speed Time</p> <p>Program ⇒ Protection</p> <p>This parameter sets the time that an overspeed condition (speed drifts outside of the F623 and F624 range) must exist to cause a trip.</p> <p>This parameter functions in conjunction with the settings of F623 and F624.</p>	<p>Direct Access Number — F622</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.01</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.01</p> <p>Maximum — 100.00</p> <p>Units — Seconds</p>
<p>Abnormal Speed Upper Band</p> <p>Program ⇒ Protection</p> <p>This parameter sets the upper level of the Abnormal Speed range that, once exceeded, will cause an Overspeed Detected alert.</p> <p>This parameter functions in conjunction with the settings of F622 and F624.</p>	<p>Direct Access Number — F623</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0 (Disabled)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.0 (Disabled)</p> <p>Maximum — 30.00</p> <p>Units — Hz</p>
<p>Abnormal Speed Lower Band</p> <p>Program ⇒ Protection</p> <p>This parameter sets the lower level of the Abnormal Speed range that, once the output speed falls below this setting, will cause a Speed Drop Detected alert.</p> <p>This parameter functions in conjunction with the settings of F622 and F623.</p>	<p>Direct Access Number — F624</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00 (Disabled)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00 (Disabled)</p> <p>Maximum — 30.00</p> <p>Units — Hz</p>

F626

F633

Over-Voltage Stall Level

Program ⇒ Protection

This parameter sets the upper DC bus voltage threshold that, once exceeded, will cause an **Over-Voltage Stall**. An **Over-Voltage Stall** increases the output frequency of the drive during deceleration for a specified time in an attempt to prevent an **Over-Voltage Trip**.

If the Over-Voltage condition persists for more than 4 ms, an **Over-Voltage Trip** will be incurred.

This parameter is enabled at F305.

Note: This parameter setting may increase deceleration times.

Direct Access Number — F626

Parameter Type — **Numerical**

Factory Default — **(ASD-Dependent)**

Changeable During Run — **Yes**

Minimum — 100

Maximum — 150

Units — %

Under-Voltage Trip

Program ⇒ Protection

This parameter **Enables/Disables** the **Under-Voltage Trip** function.

With this parameter **Enabled**, the ASD will trip in the event of an under-voltage condition.

A user-selected contact may be actuated if so configured.

If **Disabled** the ASD will stop and not trip; the **FL** contact is not activated.

Settings:

0 — Disabled

1 — Enabled

Direct Access Number — F627

Parameter Type — **Selection List**

Factory Default — **Disabled**

Changeable During Run — **No**

ASD Overload

No Path — Direct Access Only

This parameter is used to protect the ASD from an over-current condition. The standard overload rating of the Q9 ASD is 110% operation for 60 seconds.

This setting allows for the overload protection to be switched from the standard overload detection means (Thermal Detection and Overload) to thermal detection only.

Settings:

0 — Thermal Detection + Overload

1 — Thermal Detection Only

The **Thermal Detection Only** selection is used when multiple devices are installed horizontally as described on [pg. 13](#).

Direct Access Number — F631

Parameter Type — **Selection List**

Factory Default — **Thermal Detection + Overload**

Changeable During Run — **No**

V/I Input-Loss Detection Level

Program ⇒ Special Controls

This parameter is enabled by providing a non-zero value here. This function monitors the **V/I** input signal and if the **V/I** input signal falls below the level specified here and remains there for a period of 0.3 seconds or more a trip will be incurred (E-18).

This value is entered as 0% to 100% of the **V/I** input signal range.

Direct Access Number — F633

Parameter Type — **Numerical**

Factory Default — **0 (Disabled)**

Changeable During Run — **No**

Minimum — 1

Maximum — 100

Units — %

F634

F637

Annual Average Ambient Temperature

No Path — Direct Access Only

This parameter is used in conjunction with a discrete output terminal setting to notify the operator of the remaining useful life of critical components of the ASD system.

With a discrete output terminal set to **Part Replacement Alarm** (see [Table 7 on pg. 189](#)) and the calculation derived from the parameter setting, maintenance scheduling may be enhanced.

Settings:

- 1 — Under 10° C (50° F)
- 2 — Under 20° C (68° F)
- 3 — Under 30° C (86° F)
- 4 — Under 40° C (104° F)
- 5 — Under 50° C (122° F)
- 6 — Under 60° C (140° F)

Direct Access Number — F634Parameter Type — **Selection List**Factory Default — **Under 30°**Changeable During Run — **No****Rush Relay Current Activation Time**

No Path — Direct Access Only

At system startup, this parameter sets a time-delay for the start of the **Rush Relay** activation in an attempt to allow the DC bus voltage to reach the normal operating level before outputting a signal to the motor.

Direct Access Number — F635Parameter Type — **Numerical**Factory Default — **0.0**Changeable During Run — **No**

Minimum — 0.0

Maximum — 2.5

Units — Seconds

PTC1 Thermal Selection

No Path — Direct Access Only

This parameter **Enables/Disables** the optional external thermal detection circuit of the **Expansion IO Card Option 1**. A thermistor is connected from **TH1+** to **TH1-** of **TB3** on the **Expansion IO Card Option 1**.

Should the thermistor resistance reading fall below 50Ω because of an over-temperature condition or exceed 3000Ω because of an open circuit an **External Thermal Fault** (OH2) will be incurred.

***Note:** While this parameter is **Enabled**, the system cannot be restarted until the thermistor value recovers to the level of 1.8kΩ from an over-temperature condition. An **Auto-Restart** will not be initiated subsequent to an **External Thermal Trip** (OH2). A manual restart will be required in the event of an **OH2** trip.*

Settings:

- 0 — Disabled
- 1 — Detect Disconnect

Direct Access Number — F637Parameter Type — **Selection List**Factory Default — **Disabled**Changeable During Run — **No**

F638

F641

PTC2 Thermal Selection

No Path — Direct Access Only

This parameter **Enables/Disables** the optional external thermal detection circuit of the **Expansion IO Card Option 2**. A thermistor is connected from **TH1+** to **TH1-** of **TB4** on the **Expansion IO Card Option 2**.

Should the thermistor resistance reading fall below 50Ω because of an over-temperature condition or exceed 3000Ω because of an open circuit an **External Thermal Fault** (OH2) will be incurred.

Note: While this parameter is **Enabled**, the system cannot be restarted until the thermistor value recovers to the level of 1.8kΩ from an over-temperature condition. An **Auto-Restart** will not be initiated subsequent to an **External Thermal Trip** (OH2). A manual restart will be required in the event of an **OH2** trip.

Settings:

- 0 — Disabled
- 1 — Detect Disconnect

Direct Access Number — F638Parameter Type — **Selection List**Factory Default — **Disabled**Changeable During Run — **No****Braking Resistance Overload Time (10x rated torque)**

No Path — Direct Access Only

This parameter sets the time that the braking resistor is allowed to sustain and overload condition before a trip is incurred.

This feature is useful for applications that have a fluctuating load or for loads that require a long deceleration time.

Direct Access Number — F639Parameter Type — **Numerical**Factory Default — **5.0**Changeable During Run — **No**

Minimum — 0.1

Maximum — 600.0

Units — Seconds

Step-Out Current Detection Level

Program ⇒ Protection

This parameter is used with synchronous motor applications only.

Contact the **Toshiba Customer Support Center** for information on this parameter.

Direct Access Number — F640Parameter Type — **Numerical**Factory Default — **100**Changeable During Run — **Yes**

Minimum — 10

Maximum — 150

Units — %

Step-Out Current Detection Time

Program ⇒ Protection

This parameter is used with synchronous motor applications only.

Contact the **Toshiba Customer Support Center** for information on this parameter.

Direct Access Number — F641Parameter Type — **Numerical**Factory Default — **00**Changeable During Run — **Yes**

Minimum — 0.00

Maximum — 25.0

Units — Seconds

F643

F646

Restart Wait Time

Program ⇒ Protection

This parameter is used with synchronous motor applications only.

Contact the **Toshiba Customer Support Center** for information on this parameter.

Settings:

0 — 10 Hz Over

1 — 20 Hz Over

Direct Access Number — F643

Parameter Type — **Numerical**

Factory Default — **0**

Changeable During Run — **Yes**

V/I Input Loss Response

Program ⇒ Special Controls

This parameter is used to provide a system disposition in the event of the loss of the **V/I** input signal.

The system will either trip or run the speed set at [Preset Speed 14](#).

Note: *Preset Speed 14 must be configured to use the preset speed selection.*

Settings:

Trip

Preset Speed 14

Direct Access Number — F644

Parameter Type — **Selection List**

Factory Default — **Trip**

Changeable During Run — **No**

PTC Thermal Detection Disposition

No Path — Direct Access Only

This parameter sets the ASD disposition in the event that the PTC resistance exceeds the setting of parameter [F646](#).

The **RR** input terminal becomes the **PTC Thermal Input** terminal when **Alarm** or **Trip** is selected at this parameter.

This parameter setting overrides the [Frequency Mode 1](#) and [Frequency Mode 2](#) settings.

Settings:

0 — Do Nothing

1 — Alarm

2 — Trip

Direct Access Number — F645

Parameter Type — **Selection List**

Factory Default — **Do Nothing**

Changeable During Run — **No**

PTC Thermal Detection Level

No Path — Direct Access Only

This parameter provides a user-set resistance threshold for the thermal sensor that, once exceeded, will activate the selection of [F645](#).

Direct Access Number — F646

Parameter Type — **Numerical**

Factory Default — **3000**

Changeable During Run — **No**

Minimum — 100

Maximum — 9999.0

Units — Ω

F647

F653

<p>Backup Option Selection</p> <p>No Path — Direct Access Only</p> <p>This parameter sets the ASD disposition in the event that an Under-torque condition exists for longer than the time setting of F654.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Do Nothing 1 — Alarm 2 — Trip 	<p>Direct Access Number — F647</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Do Nothing</p> <p>Changeable During Run — No</p>
<p>Forced Fire Speed</p> <p>Program ⇒ Special Controls</p> <p>This parameter is used to enable the Forced Fire Speed function. The Forced Fire Speed function runs Preset Speed 15 in the event of an emergency. Preset Speed 15 must be configured to use the Forced Fire Speed function.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Enabled 1 — Disabled 	<p>Direct Access Number — F650</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Enabled</p> <p>Changeable During Run — No</p>
<p>Under-Torque at Constant Speed Disposition</p> <p>No Path — Direct Access Only</p> <p>This parameter sets the ASD disposition in the event that an Under-Torque condition exists for longer than the time setting of F654.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Do Nothing 1 — Alarm 2 — Trip 	<p>Direct Access Number — F651</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Do Nothing</p> <p>Changeable During Run — No</p>
<p>Under-Torque Level While ASD-Driven</p> <p>No Path — Direct Access Only</p> <p>When enabled at parameter F651 and while the motor is being driven by the ASD, this setting is used to set a low-torque threshold minimum level that must exist for the duration of the time setting of parameter F654 to activate the Under-Torque disposition of the parameter F651 setting.</p>	<p>Direct Access Number — F652</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 250.0</p> <p>Units — %</p>
<p>Under-Torque Level During Regeneration</p> <p>No Path — Direct Access Only</p> <p>When enabled at parameter F651 and during regeneration, this setting is used to set a low-torque threshold minimum level that must exist for the duration of the time setting of parameter F654 to activate the Under-Torque disposition of the parameter F651 setting.</p>	<p>Direct Access Number — F653</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Trip</p> <p>Changeable During Run — No</p> <p>Minimum — 0.00</p> <p>Maximum — 250.0</p> <p>Units — %</p>

F654

F660

Under-Torque Detection Time

No Path — Direct Access Only

When enabled at parameter **F651**, this setting is used to set the time that the low-torque condition must exist to activate the **Under-Torque** disposition of the parameter **F651** setting.

Direct Access Number — F654Parameter Type — **Numerical**Factory Default — **0.50**Changeable During Run — **No**

Minimum — 0.00

Maximum — 10.0

Units — Seconds

Under-Torque Hysteresis

No Path — Direct Access Only

When enabled at parameter **F651** by selecting **Alarm**, this setting is used to set the hysteresis threshold of the low-torque condition for which the system must return to deactivate the **Under-Torque Alarm** setting of the parameter **F651** setting and to return to normal system operation.

If **Trip** is selected at parameter **F651**, the same threshold applicables are in effect with the addition that operator intervention will be required to return the system to the normal operating condition. Remove the source of the trip condition and/or perform a system reset.

Direct Access Number — F655Parameter Type — **Numerical**Factory Default — **10.00**Changeable During Run — **No**

Minimum — 0.00

Maximum — 100.0

Units — %

Adding Input Selection

Program ⇒ Protection

This parameter **Enables/Disables** the feature that allows for the external adjustment of the **Output Frequency**.

Selecting either of the input methods listed enables this feature. The selected input is used as a modifier of the programmed **Output Frequency**.

Direct Access Number — F660Parameter Type — **Selection List**Factory Default — **Disabled**Changeable During Run — **Yes**

Settings:

- 0 — Disabled
- 1 — V/I
- 2 — RR
- 3 — RX
- 4 — Panel Keypad
- 5 — RS485 (2-Wire)
- 6 — RS485 (4-Wire)
- 7 — Communication Option Board
- 8 — RX2 (AI1)
- 9 — Option V/I
- 10 — UP/DOWN Frequency (Terminal Board)
- 11 — Pulse Input (Option)
- 12 — Pulse Input (Motor CPU)
- 13 — Binary/BCD Input (Option)

F661

F671

Multiplying Input Selection

Program ⇒ Protection

This parameter **Enables/Disables** the feature that allows for the external adjustment of the **Output Frequency**.

Selecting either of the input methods listed enables this feature. The selected input is used as a multiplier of the programmed **Output Frequency**.

If operating using the **LED Keypad Option** and **Setting** is selected, the value entered at parameter A729 is used as the multiplier.

Settings:

- 0 — Disabled
- 1 — V/I
- 2 — RR
- 3 — RX
- 4 — A729 Setting (Contact Toshiba to use this setting)
- 5 — RX2 (AI1)

AM Output Terminal Assignment

Program ⇒ AM/FM

This parameter is used to set the output function of the **AM** analog output terminal. The **AM** analog output terminal produces an output current that is proportional to the magnitude of the function assigned to this terminal. The available assignments for this output terminal are listed in [Table 6 on pg. 188](#).

The **AM** analog output has a maximum resolution of 1/1024 and a maximum load rating of 750 ohms.

Connect an ammeter to the **AM (+)** and the **CC (-)** terminals to read the output current.

AM Terminal Setup Parameters

- F670 — Terminal Assignment
- F671 — Terminal Adjustment
- F685 — Output Gradient Characteristic
- F686 — Bias Adjustment

AM Terminal Adjustment

Program ⇒ AM/FM

This parameter is used to calibrate the **AM** analog output.

To calibrate the **AM** analog output, connect an ammeter to terminals **AM (+)** and **CC (-)**.

With the drive is running at a known value (e.g., Output Frequency), adjust this parameter until the associated function of parameter [F670](#) produces the desired DC level output at the **AM** output terminal.

See [F670](#) for more information on this setting.

Direct Access Number — F661

Parameter Type — Selection List

Factory Default — Disabled

Changeable During Run — No

Direct Access Number — F670

Parameter Type — Selection List

Factory Default — Output Current

Changeable During Run — Yes

Direct Access Number — F671

Parameter Type — Numerical

Factory Default — 154

Changeable During Run — Yes

Minimum — 1

Maximum — 1280

F672

F674

MON1 Terminal Meter Selection

No Path — Direct Access Only

This parameter is used to set the output function of the **MON1** analog output terminal. The available assignments for this output terminal are listed in [Table 6 on pg. 188](#).

The **MON1** analog output terminal produces an output voltage or current that is proportional to the magnitude of the function assigned to this terminal.

Note: *The Expansion IO Card Option 2 Option Board (P/N ETB004Z) is required to use this terminal.*

See the *Expansion IO Card Option 2 Instruction Manual* (P/N 58686) for more information on the function of this terminal.

MON1 Terminal Setup Parameters

- F672 — Output Function
- F673 — Terminal Meter Adjustment
- F688 — Voltage/Current Output Switching
- F689 — Output Gradient Characteristic
- F690 — Bias Adjustment

MON1 Terminal Adjustment

No Path — Direct Access Only

This parameter is used to set the gain of the **MON1** output terminal and is used in conjunction with the settings of parameter [F672](#).

See parameter [F672](#) for more information on this setting.

MON2 Terminal Meter Assignment

No Path — Direct Access Only

This parameter is used to set the output function of the **MON2** analog output terminal. The available assignments for this output terminal are listed in [Table 6 on pg. 188](#).

The **MON2** analog output terminal produces an output voltage or current that is proportional to the magnitude of the function assigned to this terminal.

Note: *The Expansion IO Card Option 2 Option Board (P/N ETB004Z) is required to use this terminal.*

See the *Expansion IO Card Option 2 Instruction Manual* (P/N 58686) for more information on the function of this terminal.

MON2 Terminal Setup Parameters

- F674 — Terminal Meter Assignment
- F675 — Terminal Meter Adjustment
- F691 — Voltage/Current Output Switching
- F692 — Output Gradient Characteristic
- F693 — Bias Adjustment Set Zero Level

Direct Access Number — F672

Parameter Type — Selection List

Factory Default — Output Voltage

Changeable During Run — Yes

Direct Access Number — F673

Parameter Type — Numerical

Factory Default — 682

Changeable During Run — Yes

Minimum — 1

Maximum — 1280

Direct Access Number — F674

Parameter Type — Selection List

Factory Default — Comp. Frequency

Changeable During Run — Yes

F675

F681

<p>MON2 Terminal Meter Adjustment</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to set the gain of the MON2 output terminal and is used in conjunction with the settings of parameter F674.</p> <p>See parameter F674 for more information on this setting.</p>	<p>Direct Access Number — F675</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 682</p> <p>Changeable During Run — Yes</p> <p>Minimum — 1</p> <p>Maximum — 1280</p>
<p>FP Terminal Assignment</p> <p>Program ⇒ Output Terminals</p> <p>This parameter sets the functionality of the FP output terminal to any of the user-selectable functions listed in Table 6 on pg. 188.</p> <p>As the assigned function changes in magnitude or frequency, the pulse count of the FP output terminal pulse train changes in direct proportion to changes in the assigned function.</p> <p><i>Note:</i> The duty cycle of the output pulse train remains at $65 \pm 5.0 \mu\text{S}$.</p> <p>This parameter is used in conjunction with parameter F677.</p>	<p>Direct Access Number — F676</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Output Frequency</p> <p>Changeable During Run — Yes</p>
<p>FP Terminal Scaling</p> <p>Program ⇒ Output Terminals</p> <p>This parameter scales the FP output terminal by setting the pulses-per-second output signal for a given assigned input value.</p> <p>See F676 for more information on this parameter.</p>	<p>Direct Access Number — F677</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 3.84</p> <p>Changeable During Run — Yes</p> <p>Minimum — 1.00</p> <p>Maximum — 43.20</p> <p>Units — Pulses/Second</p>
<p>FP Terminal Scaling</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to select the degree of filtering to be applied to the DC bus voltage and the output DC voltage.</p>	<p>Direct Access Number — F678</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 64</p> <p>Changeable During Run — Yes</p> <p>Minimum — 4</p> <p>Maximum — 100</p> <p>Units — ms</p>
<p>FM Voltage/Current Output Switching</p> <p>Program ⇒ AM/FM</p> <p>This parameter is used to select the type of output signal provided at the FM terminal (i.e., Voltage or Current).</p> <p>The output voltage and current range is 0 – 10 VDC and 0 – 20 mA, respectively.</p> <p>See F005 for more information on this setting.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — 0 – 10 V 1 — 0 – 20 mA 	<p>Direct Access Number — F681</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 – 20 mA</p> <p>Changeable During Run — No</p>

F682

F685

<p>FM Output Gradient Characteristic</p> <p>Program ⇒ AM/FM</p> <p>This parameter sets the output response polarity of the FM output terminal. The FM output terminal response may be set to respond inversely (-) or directly (+) to the input signal.</p> <p>See F005 for more information on this setting.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Minus (Negative Gradient) 1 — Plus (Positive Gradient) 	<p>Direct Access Number — F682</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Plus (Positive Gradient)</p> <p>Changeable During Run — Yes</p>
<p>FM Bias Adjustment</p> <p>Program ⇒ AM/FM</p> <p>This parameter setting is used to ensure that a zero-level input signal produces a zero-level output at the FM terminal.</p> <p>Set the assigned function of F005 to zero and then set this parameter to zero for proper operation.</p> <p>See F005 for more information on this setting.</p>	<p>Direct Access Number — F683</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — -10.0</p> <p>Maximum — +100.0</p> <p>Units — %</p>
<p>FM Output Filtering</p> <p>No Path — Direct Access Only</p> <p>Analog filtering is applied after the analog reference signal is converted to a digital signal. The type of filtering used is Rolling Average over time.</p> <p>Select the sampling rate from the list below.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — None (1 ms) 1 — Small (8 ms) 2 — Medium (16 ms) 3 — Large (32 ms) 4 — Huge (64 ms) <p>An increased value here may eliminate false responses to electrical noise with no loss in bandwidth because the value used by the ASD is the average value of a number of samples.</p> <p>See F005 for more information on this setting.</p>	<p>Direct Access Number — F684</p> <p>Parameter Type — Selection List</p> <p>Factory Default — None (1 ms)</p> <p>Changeable During Run — Yes</p>
<p>AM Output Gradient Characteristic</p> <p>Program ⇒ AM/FM</p> <p>This parameter sets the output response polarity of the AM output terminal. The AM output terminal response may be set to respond inversely (-) or directly (+) to the input signal.</p> <p>See F670 for more information on this setting.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Minus (Negative Gradient) 1 — Plus (Positive Gradient) 	<p>Direct Access Number — F685</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Plus (Positive Gradient)</p> <p>Changeable During Run — Yes</p>

F686

F691

<p>AM Bias Adjustment</p> <p>Program ⇒ AM/FM</p> <p>This parameter setting is used to ensure that a zero-level input signal produces a zero-level output at the AM terminal.</p> <p>Set the function set at F670 to zero and then set this parameter to zero for proper operation.</p> <p>See F670 for more information on this setting.</p>	<p>Direct Access Number — F686</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — -10.0</p> <p>Maximum — +100.0</p> <p>Units — %</p>
<p>MON 1 Voltage/Current Output Switching</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to set the output signal type of the MON1 output terminal.</p> <p>Settings</p> <ul style="list-style-type: none"> 0 — -10 V – +10 V 1 — 0 – 10 V 2 — 0 – 20 mA 	<p>Direct Access Number — F688</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 – 10 V</p> <p>Changeable During Run — Yes</p>
<p>MON 1 Output Gradient Characteristic</p> <p>No Path — Direct Access Only</p> <p>This parameter sets the output response polarity of the MON1 output terminal. The MON1 output terminal response may be set to respond inversely (-) or directly (+) to the input signal.</p> <p>See parameter F672 for more information on this setting.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Minus (Negative Gradient) 1 — Plus (Positive Gradient) 	<p>Direct Access Number — F689</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Plus (Positive Gradient)</p> <p>Changeable During Run — Yes</p>
<p>MON 1 Bias Adjustment</p> <p>No Path — Direct Access Only</p> <p>This parameter setting is used to ensure that a zero-level input signal produces a zero-level output at the MON1 terminal.</p> <p>Set the assigned function of parameter F672 to zero and then set this parameter to a zero output.</p> <p>See parameter F672 for more information on this setting.</p>	<p>Direct Access Number — F690</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — -10.0</p> <p>Maximum — 100.0</p> <p>Units — %</p>
<p>MON 2 Voltage/Current Output Switching</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to set the output signal type of the MON2 output terminal.</p> <p>See parameter F674 for more information on this setting.</p> <p>Settings</p> <ul style="list-style-type: none"> 0 — -10 V – +10 V 1 — 0 – 10 V 2 — 0 – 20 mA 	<p>Direct Access Number — F691</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 – 10 V</p> <p>Changeable During Run — Yes</p>

F692

F702

<p>MON 2 Output Gradient Characteristic</p> <p>No Path — Direct Access Only</p> <p>This parameter sets the output response polarity of the MON2 output terminal. The MON2 output terminal response may be set to respond inversely (-) or directly (+) to the input signal.</p> <p>See parameter F672 for more information on this setting.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Minus (Negative Gradient) 1 — Plus (Positive Gradient) 	<p>Direct Access Number — F692</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Plus (Positive Gradient)</p> <p>Changeable During Run — Yes</p>
<p>MON 2 Bias Adjustment</p> <p>No Path — Direct Access Only</p> <p>This parameter setting is used to ensure that a zero-level input signal produces a zero-level output at the MON2 terminal.</p> <p>Set the assigned function of parameter F674 to zero and then set this parameter to a zero output.</p> <p>See parameter F674 for more information on this setting.</p>	<p>Direct Access Number — F693</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — -10.0</p> <p>Maximum — 100.0</p> <p>Units — %</p>
<p>Parameter Write Lockout</p> <p>No Path — Direct Access Only</p> <p>This parameter Enables/Disables the Run and Stop keys.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Enabled 1 — Disabled 	<p>Direct Access Number — F700</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Enabled</p> <p>Changeable During Run — Yes</p>
<p>Display Units for Voltage and Current</p> <p>Program ⇒ Utility Group</p> <p>This parameter sets the unit of measurement for current and voltage values displayed on the EOI.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — % 1 — A/V 	<p>Direct Access Number — F701</p> <p>Parameter Type — Selection List</p> <p>Factory Default — %</p> <p>Changeable During Run — Yes</p>
<p>Frequency Display Multiplier</p> <p>Program ⇒ Utility Group</p> <p>This parameter provides a multiplier for the displayed speed value shown on the front panel display of the ASD.</p> <p>This parameter may be used to display the rate that a commodity is being processed by the driven load in process units (i.e., Units/Time).</p> <p>Example: <i>An output frequency of 100 Hz would be displayed as 50 Hz if using a multiplier of 0.5 for this parameter.</i></p> <p>Note: <i>PID frequency-limiting parameters are not affected by this setting (i.e., F364, F365, F367, and F368).</i></p>	<p>Direct Access Number — F702</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00 (OFF)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 200.00</p>

F703

F708

User Unit Type

Program ⇒ Utility Group

This parameter is used in conjunction with F702 to set the method in which the frequency is displayed on the front panel.

The multiplier setting of F702 will be applied to the display of all frequencies if **All Frequencies** are selected at this parameter.

The multiplier setting of F702 will be applied to parameters F364, F365, F367, and F368 **ONLY** if **PID Process Data** is selected at this parameter.

Settings:

- 0 — All Frequencies
- 1 — PID Process Data

Direct Access Number — F703

Parameter Type — **Selection List**

Factory Default — **All Frequencies**

Changeable During Run — **Yes**

Display Bias

No Path — Direct Access Only

In conjunction with the setting of F702, this parameter sets the bias of the front panel speed display.

The frequency entered here will be multiplied by the setting of F702 and then displayed as the zero value on the front panel display.

Direct Access Number — F706

Parameter Type — **Numerical**

Factory Default — **0.00**

Changeable During Run — **Yes**

Minimum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

Change Step Selection 1

No Path — Direct Access Only

In conjunction with the parameter setting of F708, this parameter sets the amount that the output speed will increase or decrease for each speed command change entered from the front panel using the **Rotary Encoder**.

Direct Access Number — F707

Parameter Type — **Numerical**

Factory Default — **0.00**

Changeable During Run — **Yes**

Minimum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

Change Step Selection 2

No Path — Direct Access Only

The parameter is used to modify the degree that the setting of F707 affects the output speed changes that are input from the front panel using the **Rotary Encoder**.

Selecting a zero value here disables this parameter and the resulting non-zero value of parameter setting F707 is output from the ASD.

Selecting a non-zero value here provides a dividend that will be used in the following equation resulting in the actual output frequency applied to the motor.

$$\text{OutputFrequencyDisplayed} = \text{InternallyCommandedFrequency} \times \frac{F708}{F707}$$

Direct Access Number — F708

Parameter Type — **Numerical**

Factory Default — **0 (Disabled)**

Changeable During Run — **Yes**

Minimum — 0

Maximum — 255

F721

F735

<p>Panel Stop Pattern</p> <p>Program ⇒ Panel Control</p> <p>While operating in the Local mode this parameter determines the method used to stop the motor when the stop command is issued via the EOI.</p> <p>The Decel Stop setting enables the Dynamic Braking system that is setup at F304 or the DC Injection Braking system that is setup at F250, F251, and F252.</p> <p>The Coast Stop setting allows the motor to stop at the rate allowed by the inertia of the load.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Deceleration Stop (Not Used) 1 — Coast Stop <p><i>Note:</i> The Stop Pattern setting has no effect on the Emergency Off settings of F603. This parameter may also be accessed by pressing the ESC key from the Frequency Command screen.</p>	<p>Direct Access Number — F721</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Deceleration Stop</p> <p>Changeable During Run — Yes</p>
<p>Panel Frequency Lockout</p> <p>Program ⇒ Utility Group</p> <p>While operating using the LED Keypad Option this parameter Enables/Disables the ability to change the frequency command value.</p> <p><i>Note:</i> The LED keypad is unavailable at the time of this release.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Unlocked 1 — Locked 	<p>Direct Access Number — F730</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Unlocked</p> <p>Changeable During Run — Yes</p>
<p>Panel Emergency Off Lockout</p> <p>No Path — Direct Access Only</p> <p>While operating using the LED Keypad Option this parameter Enables/Disables the ability to provide an Emergency Off command.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Unlocked 1 — Locked 	<p>Direct Access Number — F734</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Unlocked</p> <p>Changeable During Run — No</p>
<p>Panel Reset Lockout</p> <p>No Path — Direct Access Only</p> <p>While operating using the LED Keypad Option this parameter Enables/Disables the ability to initiate a Reset.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Unlocked 1 — Locked 	<p>Direct Access Number — F735</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Unlocked</p> <p>Changeable During Run — Yes</p>

F736

F737

Command Mode/Frequency Mode Change Lockout

No Path — Direct Access Only

This parameter **Enables/Disables** the ability to change the **Command Mode** and the **Frequency Mode** settings on the panel during **Run**.

Settings:

0 — Unlocked

1 — Locked

Direct Access Number — F736Parameter Type — **Selection List**Factory Default — **Unlocked**Changeable During Run — **Yes****Lockout All Keys**

No Path — Direct Access Only

This parameter **Enables/Disables** EOI keypad operation. Select **Locked** to disable all keypad entries.

Cycle the power to the ASD to activate the changes made to this parameter.

To unlock EOI keypad for normal operation, press and hold the **Rotary Encoder** for (greater than) 5 seconds. This unlocks the keypad for the current session **ONLY**. Upon a trip or power off, the **Locked** status of this parameter setting will be re-asserted and the keypad will be locked out.

This setting may also be changed via communications.

Settings:

0 — Unlocked

1 — Locked

Direct Access Number — F737Parameter Type — **Selection List**Factory Default — **Unlocked**Changeable During Run — **Yes**

F740

F740

Trace Selection

No Path — Direct Access Only

In conjunction with parameter [F741 – F745](#), this parameter is used to monitor and store 4 ASD output waveform data points. The data may be read and stored as a function of a trip (At Trip) or it may be initiated by the activation of a discrete terminal activation (At Trigger).

The table below lists the items that may selected for the data read/store function.

Select **At Trip** at this parameter to read/store the value of the item selected from the table below in the event of a trip.

Select **At Trigger** at this parameter and set and activate a discrete input terminal to **Trace Back Trigger Signal** to initiate the **At Trigger** read/store of the item selected from the table below.

The duration of the read/store cycle for the selected data is set at parameter [F741](#).

A communications device is required to use this parameter and a PC is used to store the acquired data. The Q9 ASD supports the following communications protocols: RS485 (MODBUS-RTU) Toshiba Protocol, USB Toshiba Protocol, CC-Link, ProfiBus, and DeviceNet (Refer to the manual of each protocol type for more information).

Settings:

- 0 — None
- 1 — At Trip
- 2 — At Trigger

Once enabled at this parameter, the following monitored items (data points) may be selected for the read/store function at [F742 – F745](#).

Output Frequency	PID Feedback Value	FM Output
Frequency Reference	Motor Overload Ratio	AM Output
Output Current	ASD Overload Ratio	100% Meter Adjust Value
DC Bus Voltage	DBR Overload Ratio (Not Used)	Data From Communication
Output Voltage	DBR Load Ratio (Not Used)	250% Meter Adjust Value
Compensated Frequency	Input Power	Input Watt Hour
Speed Feedback (Realtime)	Output Power	Output Watt Hour
Speed Feedback (1 Sec Filter)	Option V/I Input	Gain Display
Torque	RR Input	My Function Monitor 1 Without Sign
Torque Command	V/I Input	My Function Monitor 2 Without Sign
Torque Current	RX Input	My Function Monitor 3 With Sign
Excitation Current	RX2 (AI1) Input	My Function Monitor 4 With Sign

Direct Access Number — F740

Parameter Type — **Selection List**

Factory Default — **At Trip**

Changeable During Run — **Yes**

F741

F748

<p>Trace Cycle</p> <p>No Path — Direct Access Only</p> <p>This parameter sets the record time for the Trace Data events selected at F742 – F745.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — 4 ms 1 — 20 ms 2 — 100 ms 3 — 1 Second 4 — 10 Seconds 	<p>Direct Access Number — F741</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 100 ms</p> <p>Changeable During Run — Yes</p>
<p>Trace Data 1</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to select the Trace Data 1 item to be read and stored from the setup of parameters F740 and F741.</p> <p>See F740 for more information on this parameter setting.</p>	<p>Direct Access Number — F742</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Output Frequency</p> <p>Changeable During Run — Yes</p>
<p>Trace Data 2</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to select the Trace Data 2 item to be read and stored from the setup of parameters F740 and F741.</p> <p>See F740 for more information on this parameter setting.</p>	<p>Direct Access Number — F743</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Freq. Reference</p> <p>Changeable During Run — Yes</p>
<p>Trace Data 3</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to select the Trace Data 3 item to be read and stored from the setup of parameters F740 and F741.</p> <p>See F740 for more information on this parameter setting.</p>	<p>Direct Access Number — F744</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Output Current</p> <p>Changeable During Run — Yes</p>
<p>Trace Data 4</p> <p>No Path — Direct Access Only4</p> <p>This parameter is used to select the Trace Data 4 item to be read and stored from the setup of parameters F740 and F741.</p> <p>See F740 for more information on this parameter setting.</p>	<p>Direct Access Number — F745</p> <p>Parameter Type — Selection List</p> <p>Factory Default — DC Voltage</p> <p>Changeable During Run — Yes</p>
<p>kWH Memory Set</p> <p>Program ⇒ Special Controls</p> <p>This parameter is used to set the disposition of the kWH meter reading at power off.</p> <p>Settings:</p> <ul style="list-style-type: none"> Save at Power Off Clear at Power Off 	<p>Direct Access Number — F748</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Save at Power Off</p> <p>Changeable During Run — No</p>

F749**F800**

<p>kWH Memory Selection</p> <p>Program ⇒ Special Controls</p> <p>This parameter sets the unit of measure for the power/time display.</p> <p>Settings:</p> <ul style="list-style-type: none"> 1 kW 10 kW 100 kW 1000 kW 10000 kW 	<p>Direct Access Number — F749</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 1 kW</p> <p>Changeable During Run — No</p>
<p>EASY Parameters</p> <p>No Path — Direct Access Only</p> <p>Parameters F750 – F782 are under development and are unavailable at the time of this release.</p>	<p>Direct Access Number — F750 – F782</p> <p>Parameter Type — N/A</p> <p>Factory Default — N/A</p> <p>Changeable During Run — N/A</p>
<p>LCD Contrast</p> <p>Program ⇒ Special Controls</p> <p>This parameter sets the contrast of the LCD screen.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 – 7 	<p>Direct Access Number — F790</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 4</p> <p>Changeable During Run — No</p>
<p>Baud Rate (RS485 2-Wire)</p> <p>Program ⇒ Communication Settings</p> <p>This parameter plays a role in the setup of the communications network by establishing the Baud Rate of the communications link.</p> <p>The communications network includes other ASDs and Host/Control computers that monitor the status of the ASD(s), transfers commands, and loads or modifies the parameter settings of the ASD.</p> <p>Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — 9600 1 — 19200 2 — 38400 	<p>Direct Access Number — F800</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 19200</p> <p>Changeable During Run — Yes</p> <p>Units — bps</p>

F801**F803****Parity (RS485 2- and 4-Wire)**

Program ⇒ Communication Settings

This parameter plays a role in the setup of the communications network by establishing the **Parity** setting of the communications link.

The communications network includes other ASDs and Host/Control computers that monitor the status of the ASD(s), transfers commands, and loads or modifies the parameter settings of the ASD.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Settings:

- 0 — No Parity
- 1 — Even Parity
- 2 — Odd Parity

Direct Access Number — F801

Parameter Type — **Selection List**

Factory Default — **Even Parity**

Changeable During Run — **Yes**

ASD Number

Program ⇒ Communication Settings

This parameter plays a role in the setup of the communications network by assigning an identification (ID) number to each ASD in the communications network.

The communications network includes other ASDs and Host/Control computers that monitor the status of the ASD(s), transfers commands, and loads or modifies the parameter settings of the ASD.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Direct Access Number — F802

Parameter Type — **Numerical**

Factory Default — **0**

Changeable During Run — **Yes**

Minimum — 0

Maximum — 247

Communications Time Out Time (RS485 2- and 4-Wire)

Program ⇒ Communication Settings

This parameter plays a role in the setup of the communications network by setting the time that no activity may exist over the communications link before the link is severed (Timed Out).

The communications network includes other ASDs and Host/Control computers that monitor the status of the ASD(s), transfers commands, and loads or modifies the parameter settings of the ASD.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Direct Access Number — F803

Parameter Type — **Numerical**

Factory Default — **0 (Off)**

Changeable During Run — **Yes**

Minimum — 0 (Off)

Maximum — 100

Units — Seconds

F804**F805****Communications Time-Out Action (RS485 2- and 4-Wire)**

Program ⇒ Communication Settings

This parameter plays a role in the setup of the communications network by determining the action to be taken in the event of a time-out (Time-Out Action).

The communications network includes other ASDs and Host/Control computers that monitor the status of the ASD(s), transfers commands, and loads or modifies the parameter settings of the drive.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Settings:

- 0 — No Action/No Action
- 1 — Alarm/No Action
- 2 — Trip/No Action
- 3 — No Action/Alarm
- 4 — Alarm/Alarm
- 5 — Trip/Alarm
- 6 — No Action/Trip
- 7 — Alarm/Trip
- 8 — Trip/Trip

Direct Access Number — F804

Parameter Type — **Selection List**

Factory Default — **Trip/Trip**

Changeable During Run — **Yes**

Send Wait Time (RS485 2-Wire)

Program ⇒ Communication Settings

This parameter sets the **RS485** response delay time.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Direct Access Number — F805

Parameter Type — **Numerical**

Factory Default — **0.00**

Changeable During Run — **Yes**

Minimum — 0.00

Maximum — 2.00

Units — Seconds

F806

F810

ASD-to-ASD Communications (RS485 2-Wire)

Program ⇒ Communication Settings

The function of this parameter is 2-fold:

- 1) In a Master/Follower configuration and while communicating via RS485 2-Wire, this parameter sets the ASD as the Master or the Follower.
- 2) This parameter determines the function of the ASD while operating as the Master or the Follower. If operating as the Master ASD, an output parameter of the Master ASD is used to control the Follower ASDs and is set here. If operating as a Follower ASD and in the event of an error, the ASD response will be of the selection here.

Note: *Select a Follower function here if F826 is configured as a **Master Output** controller for any other ASD in the system. Otherwise, an **EOI** failure will result.*

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Settings:

- 0 — Follower (Decel Stop - If Error Detected)
- 1 — Follower (Continue - Operation If Error Detected)
- 2 — Follower (Emergency Off - If Error Detected)
- 3 — Master (Output Frequency Command - If Error Detected)
- 4 — Master (Output Frequency - If Error Detected)
- 5 — Master (Output Torque Reference - If Error Detected)
- 6 — Master (Output Torque Command - If Error Detected)

RS485 2-Wire Protocol Selection

No Path — Direct Access Only

This parameter sets the **RS485** (2-Wire) communications protocol.

Settings:

- 0 — Toshiba

Communications Reference Selection

Program ⇒ Communication Settings

This parameter is used to set the communications reference for scaling.

See [F811](#) — [F814](#) for more information on this setting.

Note: *Scaling the communications signal is not required for all applications.*

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Settings:

- 0 — Disabled
- 1 — RS485 (2-Wire)
- 2 — RS485 (4-Wire)
- 3 — Communication Card

Direct Access Number — **F806**

Parameter Type — **Selection List**

Factory Default — **Follower** (Decel Stop)

Changeable During Run — **Yes**

Direct Access Number — **F807**

Parameter Type — **Fixed**

Factory Default — **Toshiba**

Changeable During Run — **Yes**

Direct Access Number — **F810**

Parameter Type — **Selection List**

Factory Default — **Disabled**

Changeable During Run — **Yes**

F811

Communications Reference 1

Program ⇒ Communication Settings

When enabled at F810, this parameter is used to allow the user to set the gain and bias of the speed control input to the drive when the speed control signal is received via the source selected at F810.

Gain and Bias Settings


When operating in the **Speed Control** mode and using one of the control sources from **Settings** above, the settings that determine the gain and bias properties of the input signal are:

- **Communications Speed 1** (frequency) (F812),
- the communications input signal value that represents **Communications Speed 1** (frequency): F811,
- **Communications Speed 2** (frequency) (F814), and
- the communications input signal value that represents **Communications Speed 2** (frequency): F813.

Once set, as the input signal value changes, the output frequency of the drive will vary in accordance with the above settings.

This parameter sets the **Communications Reference 1** input value that represents **Communications Speed 1** (frequency). This value is entered as 0 to 100% of the **Communications Reference 1** input value range.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

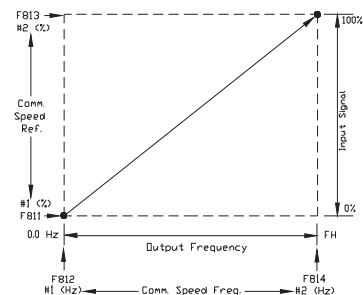Direct Access Number — F811Parameter Type — **Numerical**Factory Default — **0**Changeable During Run — **Yes**Minimum — **0**Maximum — **100**Units — **%****Communications Frequency 1**

Program ⇒ Communication Settings

This parameter is used to set the gain and bias of the **Communications Speed 1** speed control input.

See F811 for more information on this setting.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Direct Access Number — F812Parameter Type — **Numerical**Factory Default — **0.00**Changeable During Run — **Yes**Minimum — **0.00**Maximum — **Max. Freq. (F011)**Units — **Hz****Communications Reference 2**

Program ⇒ Communication Settings

This parameter is used to set the gain and bias of the **Communications Reference 2** speed control input.

See F811 for more information on this setting.

This parameter sets the **Communications Reference 2** input value that represents **Communications Speed 2** (frequency). This value is entered as 0 to 100% of the **Communications Reference 2** input value range.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Direct Access Number — F813Parameter Type — **Numerical**Factory Default — **100**Changeable During Run — **Yes**Minimum — **0**Maximum — **100**Units — **%**

F814**F825****Communications Frequency 2**

Program ⇒ Communication Settings

This parameter is used to set the gain and bias of the **Communications Speed 2** speed control input.

See [F811](#) for more information on this setting.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Baud Rate (RS485 4-Wire)

Program ⇒ Communication Settings

This parameter sets the **RS485** baud rate.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Settings:

- 0 — 9600 bps
- 1 — 19200 bps
- 2 — 38400 bps

RS485 Send Wait Time (RS485 4-Wire)

Program ⇒ Communication Settings

This parameter sets the **RS485** response delay time.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Direct Access Number — **F814**

Parameter Type — **Numerical**

Factory Default — **60.00**

Changeable During Run — **Yes**

Minimum — 0.00

Maximum — **Max. Freq. (F011)**

Units — Hz

Direct Access Number — **F820**

Parameter Type — **Selection List**

Factory Default — **19200**

Changeable During Run — **Yes**

Direct Access Number — **F825**

Parameter Type — **Numerical**

Factory Default — 0.00

Changeable During Run — **Yes**

Minimum — 0.00

Maximum — 2.00

Units — Seconds

F826**F830****ASD-to-ASD Communications (RS485 4-Wire)**

Program ⇒ Communication Settings

The function of this parameter is 2-fold:

- 1) In a Master/Follower configuration and while communicating via RS485 4-Wire, this parameter sets the ASD as the Master or the Follower.
- 2) This parameter determines the function of the ASD while operating as the Master or the Follower. If operating as the Master ASD, an output parameter of the Master ASD is used to control the Follower ASDs and is set here. If operating as a Follower ASD, the ASD response if an error is incurred is set here.

Note: *Select a Follower function here if F806 is configured as a **Master Output** controller for any other ASD in the system. Otherwise, an **EOI** failure will result.*

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Settings:

- 0 — Follower (Decel Stop If Error Detected)
- 1 — Follower (Continues Operation If Error Detected)
- 2 — Follower (Emergency Off If Error Detected)
- 3 — Master (Output Frequency Command If Error Detected)
- 4 — Master (Output Frequency If Error Detected)
- 5 — Master (Output Torque Reference If Error Detected)
- 6 — Master (Output Torque Command If Error Detected)

Direct Access Number — F826

Parameter Type — **Selection List**

Factory Default — **Follower** (Decel Stop)

Changeable During Run — **Yes**

RS485 4-Wire Protocol Selection

No Path — Direct Access Only

This parameter sets the communications protocol for ASD-to-ASD communications.

Settings:

- 0 — Toshiba
- 1 — Modbus

Direct Access Number — F829

Parameter Type — **Selection List**

Factory Default — **Toshiba**

Changeable During Run — **Yes**

Communications Option (DeviceNet/Profibus) Setting 1

No Path — Direct Access Only

While using the DeviceNet/Profibus communications protocol, this parameter allows the user to select the read and write information communicated between the ASD and the Host.

Read information may include the ASD fault status, ASD speed, ASD MAC ID, etc. Write information may include Enable/Disable DeviceNet commands, Forward run, ACC/DEC command, etc.

See the *DeviceNet Option Instruction Manual* (P/N 58683) for more information on this parameter.

Settings:

- 0 – 7

Direct Access Number — F830

Parameter Type — **Selection List**

Factory Default — **0**

Changeable During Run — **Yes**

F831

F836

<p>Communications Option (DeviceNet/Profibus) Setting 2</p> <p>No Path — Direct Access Only</p> <p>While using the DeviceNet/Profibus communications protocol, parameters F831 – F836 allow the user to select the ASD memory location that holds the Command/Frequency/Monitoring instructions to be applied to the ASD for Communications Option Settings 2 – 7, respectively.</p> <p>See the <i>DeviceNet Option Instruction Manual</i> (P/N 58683) for more information on this parameter.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Disabled 1 — FA06 (ALCAN Command 1) 2 — FA23 (ALCAN Command 2) 3 — FA07 (ALCAN Frequency Command, 0.01 Hz) 4 — FA33 (Torque Command, 0.01%) 5 — FA50 (Terminal Output) 6 — FA51 (Analog Output Data from Comm. [FM]) 7 — FA52 (Analog Output Data from Comm. [AM]) 8 — F601 (Stall Prevention Level, %) 9 — F441 (Power Running Torque Limit Level, 0.01%) 10 — F443 (Regen. Braking Torque Limit Level, 0.01%) 11 — F460 (Speed Loop Proportional Gain) 12 — F461 (Speed Loop Stabilization Coefficient) 	<p>Direct Access Number — F831</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Disabled</p> <p>Changeable During Run — Yes</p>
<p>Communications Option (DeviceNet/Profibus) Setting 3</p> <p>No Path — Direct Access Only</p> <p>Same as F831. See F831 for information on this parameter</p>	<p>Direct Access Number — F832</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p>
<p>Communications Option (DeviceNet/Profibus) Setting 4</p> <p>No Path — Direct Access Only</p> <p>Same as F831. See F831 for information on this parameter</p>	<p>Direct Access Number — F833</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p>
<p>Communications Option (DeviceNet/Profibus) Setting 5</p> <p>No Path — Direct Access Only</p> <p>Same as F831. See F831 for information on this parameter</p>	<p>Direct Access Number — F834</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p>
<p>Communications Option (DeviceNet/Profibus) Setting 6</p> <p>No Path — Direct Access Only</p> <p>Same as F831. See F831 for information on this parameter</p>	<p>Direct Access Number — F835</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p>
<p>Communications Option (DeviceNet/Profibus) Setting 7</p> <p>No Path — Direct Access Only</p> <p>Same as F831. See F831 for information on this parameter</p>	<p>Direct Access Number — F836</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p>

F841**F844****Communications Option (DeviceNet/Profibus) Setting 8**

No Path — Direct Access Only

While using the DeviceNet/Profibus communications protocol, parameters [F841](#) – [F846](#) allow the user to select the ASD memory location that holds the Command/Frequency/Monitoring instructions to be applied to the ASD for **Communications Option Settings 8 – 13**, respectively.

See the *DeviceNet Option Instruction Manual* (P/N 58683) for more information on this parameter.

Settings:

- 0 — Disabled
- 1 — FD01 (ASD Status 1)
- 2 — FD00 (Output Frequency, 0.01 Hz)
- 3 — FD03 (Output Current, 0.01%)
- 4 — FD05 (Output Voltage, 0.01%)
- 5 — FC91 (ASD Alarm)
- 6 — FD22 (PID Feedback Value, 0.01 Hz)
- 7 — FD06 (Input Terminal Status)
- 8 — FD07 (Output Terminal Status)
- 9 — FE36 (V/I Input)
- 10 — FE35 (RR Input)
- 11 — FE37 (RX Input)
- 12 — FD04 (Input Voltage [DC Detection], 0.01%)
- 13 — FD16 (Real-Time Speed Feedback)
- 14 — FD18 (Torque, 0.01%)
- 15 — FE60 (My Monitor)
- 16 — FE61 (My Monitor)
- 17 — FE62 (My Monitor)
- 18 — FE63 (My Monitor)
- 19 — F880 (Free Notes)
- 20 — FD29 (Input Power, 0.01 kW)
- 21 — FD30 (Output Power, 0.01 kW)
- 22 — FE14 (Cumulative Operation Time, 0.01=1 Hour)
- 23 — FE40 (FM Terminal Output Monitor)
- 24 — FE41 (AM Terminal Output Monitor)

Direct Access Number — **F841**Parameter Type — **Selection List**Factory Default — **Disabled**Changeable During Run — **Yes****Communications Option (DeviceNet/Profibus) Setting 9**

No Path — Direct Access Only

Same as [F841](#). See [F841](#) for information on this parameter.

Direct Access Number — **F842**Parameter Type — **Selection List**Factory Default — **0**Changeable During Run — **Yes****Communications Option (DeviceNet/Profibus) Setting 10**

No Path — Direct Access Only

Same as [F841](#). See [F841](#) for information on this parameter.

Direct Access Number — **F843**Parameter Type — **Selection List**Factory Default — **0**Changeable During Run — **Yes****Communications Option (DeviceNet/Profibus) Setting 11**

No Path — Direct Access Only

Same as [F841](#). See [F841](#) for information on this parameter.

Direct Access Number — **F844**Parameter Type — **Selection List**Factory Default — **0**Changeable During Run — **Yes**

F845

F853

<p>Communications Option (DeviceNet/Profibus) Setting 12</p> <p>No Path — Direct Access Only</p> <p>Same as F841. See F841 for information on this parameter.</p>	<p>Direct Access Number — F845</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p>
<p>Communications Option (DeviceNet/Profibus) Setting 13</p> <p>No Path — Direct Access Only</p> <p>Same as F841. See F841 for information on this parameter.</p>	<p>Direct Access Number — F846</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p>
<p>Disconnection Detection Extended Time</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to set the length of time that no communications activity may exist before the communications link is disconnected.</p>	<p>Direct Access Number — F850</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.0</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.0</p> <p>Maximum — 100.0</p> <p>Units — Seconds</p>
<p>ASD Operation at Disconnect</p> <p>No Path — Direct Access Only</p> <p>This parameter is used to set the Q9 ASD action to be carried out in the event of the loss of communications.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Stop and Release (End) Communication 1 — Do Nothing (Continue Programmed Operation) 2 — Deceleration Stop 3 — Coast Stop 4 — Emergency Off 5 — Preset Speed (Setting of F852) 	<p>Direct Access Number — F851</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Stop, Release Communication</p> <p>Changeable During Run — Yes</p>
<p>Preset Speed Operation Selection</p> <p>No Path — Direct Access Only</p> <p>This parameter setting is used to set the Preset Speed selection to be used if Preset Speed is selected at parameter F851.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Disabled 1 – 15 — Preset Speed Number 	<p>Direct Access Number — F852</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Disabled</p> <p>Changeable During Run — Yes</p>
<p>Communications Option Station Address Monitor</p> <p>No Path — Direct Access Only</p> <p>This parameter is used in the setup of the communications network by reading the Media Access Code (MAC) address of the ASD that is connected to a node of the communications system.</p> <p>The MAC Address is set via DIP switches of the optional device.</p> <p>See the <i>DeviceNet Option Instruction Manual</i> (P/N 58683) for more information on this parameter.</p>	<p>Direct Access Number — F853</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (Disabled)</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 255</p>

F854**F870****Communications Option Speed Switch Monitor DeviceNet/CC-Link**

No Path — Direct Access Only

This parameter is used in the setup of the communications network by reading the hardware-specific settings of the option card being used with the ASD.

If using the **DEV002Z** Devicenet card, this parameter reads the hardware switch SW300 setting of the Devicenet card. SW300 sets the baud rate and the MAC address of the option card that is connected to a node of the communications system.

See the *DeviceNet Option Instruction Manual* (P/N 58683) for more information on this parameter or see the instruction manual for the option being used with the Q9 ASD.

Direct Access Number — F854

Parameter Type — **Hardware Selectable**

Factory Default — **Option-Specific**

Changeable During Run — **No**

Minimum — 0

Maximum — 255

Number of Poles of Motor

No Path — Direct Access Only

This parameter identifies the number of motor poles for the motor(s) being used.

Direct Access Number — F856

Parameter Type — **Numerical**

Factory Default — **4**

Changeable During Run — **No**

Minimum — 2

Maximum — 16

Block Write Data 1

No Path — Direct Access Only

This parameter plays a role in the setup of the communications network by establishing the type of data to be written to the ASD of the communications link.

The communications network includes other ASDs and Host/Control computers that monitor the status of the ASD(s), transfers commands, and loads or modifies the parameter settings of the ASD.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Direct Access Number — F870

Parameter Type — **Selection List**

Factory Default — **None**

Changeable During Run — **Yes**

Settings:

- 0 — None
- 1 — FA00 (Command 1)
- 2 — FA20 (Command 2)
- 3 — FA01 (Frequency)
- 4 — FA50 (TB Output)
- 5 — FA51 (Analog Output)
- 6 — FA13 (Speed)

F871**F875****Block Write Data 2**

No Path — Direct Access Only

This parameter plays a role in the setup of the communications network by establishing the type of data to be written to the ASD of the communications link.

The communications network includes other ASDs and Host/Control computers that monitor the status of the ASD(s), transfers commands, and loads or modifies the parameter settings of the ASD.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Settings:

- 0 — None
- 1 — FA00 (Command 1)
- 2 — FA20 (Command 2)
- 3 — FA01 (Frequency)
- 4 — FA50 (TB Output)
- 5 — FA51 (Analog Output)
- 6 — FA13 (Speed)

Direct Access Number — F871Parameter Type — **Selection List**Factory Default — **None**Changeable During Run — **Yes****Block Read Data 1**

No Path — Direct Access Only

This parameter plays a role in the setup of the communications network by establishing the type of data to be read from the ASD using the communications link.

The communications network includes other ASDs and Host/Control computers that monitor the status of the ASD(s), transfers commands, and loads or modifies the parameter settings of the ASD.

Changes made to this parameter require that the power be cycled (off then on) for the changes to take effect.

Settings:

- 0 — None
- 1 — Status Information
- 2 — Output Frequency
- 3 — Output Current
- 4 — Output Voltage
- 5 — Alarm Information
- 6 — PID Feedback Value
- 7 — Input Terminal Status
- 8 — Output Terminal Status
- 9 — V/I
- 10 — RR
- 11 — RX
- 12 — DC Voltage
- 13 — PG Feedback
- 14 — Torque
- 15 — My Monitor 1
- 16 — My Monitor 2
- 17 — My Monitor 3
- 18 — My Monitor 4
- 19 — Free Memo
- 20 — Output Speed

Direct Access Number — F875Parameter Type — **Selection List**Factory Default — **None**Changeable During Run — **Yes**

F876

F882

<p>Block Read Data 2</p> <p>No Path — Direct Access Only</p> <p>This parameter plays a role in the setup of the communications network by establishing the type of data to be read from the ASD of the communications link.</p> <p>See parameter F875 for more information on this setting.</p>	<p>Direct Access Number — F876</p> <p>Parameter Type — Selection List</p> <p>Factory Default — None</p> <p>Changeable During Run — Yes</p>
<p>Block Read Data 3</p> <p>No Path — Direct Access Only</p> <p>This parameter plays a role in the setup of the communications network by establishing the type of data to be read from the ASD of the communications link.</p> <p>See parameter F875 for more information on this setting.</p>	<p>Direct Access Number — F877</p> <p>Parameter Type — Selection List</p> <p>Factory Default — None</p> <p>Changeable During Run — Yes</p>
<p>Block Read Data 4</p> <p>No Path — Direct Access Only</p> <p>This parameter plays a role in the setup of the communications network by establishing the type of data to be read from the ASD of the communications link.</p> <p>See parameter F875 for more information on this setting.</p>	<p>Direct Access Number — F878</p> <p>Parameter Type — Selection List</p> <p>Factory Default — None</p> <p>Changeable During Run — Yes</p>
<p>Block Read Data 5</p> <p>No Path — Direct Access Only</p> <p>This parameter plays a role in the setup of the communications network by establishing the type of data to be read from the ASD of the communications link.</p> <p>See parameter F875 for more information on this setting.</p>	<p>Direct Access Number — F879</p> <p>Parameter Type — Selection List</p> <p>Factory Default — None</p> <p>Changeable During Run — Yes</p>
<p>Free Notes</p> <p>No Path — Direct Access Only</p> <p>This is an unused parameter that has allocated memory space.</p> <p>The space may be used at the discretion of the user. This space may be used to store information or a note to be transferred using communications.</p>	<p>Direct Access Number — F880</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 65535</p>
<p>Ext. Comm. Cfg. 1</p> <p>No Path — Direct Access Only</p> <p>This parameter sets the RS485 protocol. An improper setting will result in an INVALID PROTOCOL error.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Modbus RTU 1 — Metasys N2 2 — Seimens FLM 	<p>Direct Access Number — F882</p> <p>Parameter Type — Numerical</p> <p>Factory Default — Modbus RTU</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 255 (Only 0 – 2 Effective)</p>

F883

F884

Ext. Comm. Cfg. 2

No Path — Direct Access Only

This parameter sets the Modbus RTU network characteristics: Baud Rate, Parity, and Stop Bits. See the table below for the parameter settings.

Setting	Baud Rate	Parity	Stop Bits
0	2400	Odd	1
1		Even	
2		None	
3	4800	Odd	
4		Even	
5		None	
6	9600	Odd	
7		Even	
8		None	
9	19200	Odd	
10		Even	
11		None	
12	38400	Odd	2
13		Even	
14		None	
15	2400		
16	4800		
17	9600		
18	19200		
19	38400		

Note: An improper parameter setting will result in a **Communication error**.

Direct Access Number — F883Parameter Type — **Numerical**Factory Default — **0**Changeable During Run — **Yes**

Minimum — 0

Maximum — 255 (only 0 – 19 effective)

Ext. Comm. Cfg. 3

No Path — Direct Access Only

This parameter Enables/Disables the network time-out timer. The timer is enabled by setting this parameter to a non-zero value (1 – 255). The timer is disabled by setting this value to zero.

Once started, the complete packet must be received before the timer expires or an error will be incurred.

Direct Access Number — F884Parameter Type — **Numerical**Factory Default — **0**Changeable During Run — **Yes**

Minimum — 0

Maximum — 255

Units — Seconds

F885

F901

<p>Ext. Comm. Cfg. 4</p> <p>No Path — Direct Access Only</p> <p>This parameter is read-only and is used to store and display the error codes that correlate to the returned initialization status number (0 – 5).</p> <p>The error codes are listed below along with their meaning:</p> <ul style="list-style-type: none"> 0 — No Error (Normal Operation) 1 — Invalid Equipment 2 — Invalid Protocol 3 — Invalid Address 4 — Invalid Network Settings 5 — Resource Allocation Error 	<p>Direct Access Number — F885</p> <p>Parameter Type — Numerical</p> <p>Factory Default — No Error</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 255 (only 0 – 5 effective)</p>
<p>Ext. Comm. Cfg. 5 – 8</p> <p>No Path — Direct Access Only</p> <p>These parameters have protocol-specific functions. See the document <i>ASD NANOCOM ICC 10572-2.100-000</i> located at www.ICCDESIGNS.com for more information on these parameter settings.</p>	<p>Direct Access Number — F886 - F889</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 255</p>
<p>Network Option Reset Settings</p> <p>Program ⇒ Communication Settings</p> <p>This parameter plays a role in the setup of the communications network by establishing the targets of a Reset command received via the communications link.</p> <p>Settings:</p> <ul style="list-style-type: none"> 0 — Reset ASD only 1 — Reset Option Board and ASD 	<p>Direct Access Number — F899</p> <p>Parameter Type — Selection List</p> <p>Factory Default — Reset ASD only</p> <p>Changeable During Run — Yes</p>
<p>Input Function Target 1</p> <p>Program ⇒ My Function Unit 1</p> <p>This parameter plays a role in the setup of the My Function feature by selecting the functionality of the programmable Input Function Target 1 terminal.</p> <p>This setting assigns the function of the programmable Input Function Target 1 terminal to any of the user-selectable functions listed in Table 5 on pg. 187, Table 7 on pg. 189, or Table 8 on pg. 191.</p> <p>From the listed tables select the corresponding Communications Number, Input Setting, or Input Setting.</p> <p>See F977 for more information on this parameter.</p>	<p>Direct Access Number — F900</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (Disabled)</p> <p>Changeable During Run — Yes</p>
<p>Input Function Command 1</p> <p>Program ⇒ My Function Unit 1</p> <p>This parameter is used to assign a user-selected logical operator to two user-selected Input Function Target variables, enable a counter/timer function, or perform a hold/reset function.</p> <p>Table 9 on pg. 193 lists the available selections. Their use and selection requirements are described in an example at F977.</p>	<p>Direct Access Number — F901</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (NOP)</p>

F902

F906

Input Function Target 2

Program ⇒ My Function Unit 1

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 2** terminal.

This setting assigns the function of the programmable **Input Function Target 2** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F902

Parameter Type — Selection List

Factory Default — 0 (Disabled)

Changeable During Run — Yes

Input Function Command 2

Program ⇒ My Function Unit 1

This parameter is used to assign a user-selected logical operator to two user-selected **Input Function Target** variables, enable a counter/timer function, or perform a hold/reset function.

[Table 9 on pg. 193](#) lists the available selections. Their use and selection requirements are described in an example at [F977](#).

Direct Access Number — F903

Parameter Type — Selection List

Factory Default — 0 (NOP)

Input Function Target 3

Program ⇒ My Function Unit 1

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 3** terminal.

This setting assigns the function of the programmable **Input Function Target 3** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F904

Parameter Type — Selection List

Factory Default — 0 (Disabled)

Changeable During Run — Yes

Output Function Assigned

Program ⇒ My Function Unit 1

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the **Output Function Assigned** terminal.

This setting assigns the function of the programmable **Output Function Assigned** data location to 1 of the functions listed in the **Input Setting** field of [Table 5 on pg. 187](#).

Settings:

0 – 3099

See the *My Function Instruction Manual* (P/N E6581335) and [F977](#) for more information on this parameter.

Direct Access Number — F905

Parameter Type — Selection List

Factory Default — 0 (Disabled)

Changeable During Run — Yes

Input Function Target 1

Program ⇒ My Function Unit 2

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 1** terminal.

This setting assigns the function of the programmable **Input Function Target 1** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F906

Parameter Type — Selection List

Factory Default — 0 (Disabled)

Changeable During Run — Yes

<p>Input Function Command 1</p> <p>Program ⇒ My Function Unit 2</p> <p>This parameter is used to assign a user-selected logical operator to two user-selected Input Function Target variables, enable a counter/timer function, or perform a hold/reset function.</p> <p>Table 9 on pg. 193 lists the available selections. Their use and selection requirements are described in an example at F977.</p>	<p>Direct Access Number — F907</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (NOP)</p>
<p>Input Function Target 2</p> <p>Program ⇒ My Function Unit 2</p> <p>This parameter plays a role in the setup of the My Function feature by selecting the functionality of the programmable Input Function Target 2 terminal.</p> <p>This setting assigns the function of the programmable Input Function Target 2 terminal to any of the user-selectable functions listed in Table 5 on pg. 187, Table 7 on pg. 189, or Table 8 on pg. 191.</p> <p>See F977 for more information on this parameter.</p>	<p>Direct Access Number — F908</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (Disabled)</p> <p>Changeable During Run — Yes</p>
<p>Input Function Command 2</p> <p>Program ⇒ My Function Unit 2</p> <p>This parameter is used to assign a user-selected logical operator to two user-selected Input Function Target variables, enable a counter/timer function, or perform a hold/reset function.</p> <p>Table 9 on pg. 193 lists the available selections. Their use and selection requirements are described in an example at F977.</p>	<p>Direct Access Number — F909</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (NOP)</p>
<p>Input Function Target 3</p> <p>Program ⇒ My Function Unit 2</p> <p>This parameter plays a role in the setup of the My Function feature by selecting the functionality of the programmable Input Function Target 3 terminal.</p> <p>This setting assigns the function of the programmable Input Function Target 3 terminal to any of the user-selectable functions listed in Table 5 on pg. 187, Table 7 on pg. 189, or Table 8 on pg. 191.</p> <p>See F977 for more information on this parameter.</p>	<p>Direct Access Number — F910</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (Disabled)</p> <p>Changeable During Run — Yes</p>
<p>Output Function Assigned</p> <p>Program ⇒ My Function Unit 2</p> <p>This parameter plays a role in the setup of the My Function feature by selecting the functionality of the Output Function Assigned terminal.</p> <p>This setting assigns the function of the programmable Output Function Assigned data location to 1 of the functions listed in the Input Setting field of Table 7 on pg. 189.</p> <p>Settings:</p> <p>0 – 3099</p> <p>See the <i>My Function Instruction Manual</i> (P/N E6581335) and F977 for more information on this parameter.</p>	<p>Direct Access Number — F911</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (Disabled)</p> <p>Changeable During Run — Yes</p>

F912

F916

Input Function Target 1

Program ⇒ My Function Unit 3

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 1** terminal.

This setting assigns the function of the programmable **Input Function Target 1** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F912

Parameter Type — Selection List

Factory Default — 0 (Disabled)

Changeable During Run — Yes

Input Function Command 1

Program ⇒ My Function Unit 3

This parameter is used to assign a user-selected logical operator to two user-selected **Input Function Target** variables, enable a counter/timer function, or perform a hold/reset function.

[Table 9 on pg. 193](#) lists the available selections. Their use and selection requirements are described in an example at [F977](#).

Direct Access Number — F913

Parameter Type — Selection List

Factory Default — 0 (NOP)

Input Function Target 2

Program ⇒ My Function Unit 3

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 2** terminal.

This setting assigns the function of the programmable **Input Function Target 2** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F914

Parameter Type — Selection List

Factory Default — 0 (Disabled)

Changeable During Run — Yes

Input Function Command 2

Program ⇒ My Function Unit 3

This parameter is used to assign a user-selected logical operator to two user-selected **Input Function Target** variables, enable a counter/timer function, or perform a hold/reset function.

[Table 9 on pg. 193](#) lists the available selections. Their use and selection requirements are described in an example at [F977](#).

Direct Access Number — F915

Parameter Type — Selection List

Factory Default — 0 (NOP)

Input Function Target 3

Program ⇒ My Function Unit 3

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 3** terminal.

This setting assigns the function of the programmable **Input Function Target 3** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F916

Parameter Type — Selection List

Factory Default — 0 (Disabled)

Changeable During Run — Yes

F917

F921

<p>Output Function Assigned</p> <p>Program ⇒ My Function Unit 3</p> <p>This parameter plays a role in the setup of the My Function feature by selecting the functionality of the Output Function Assigned terminal.</p> <p>This setting assigns the function of the programmable Output Function Assigned data location to 1 of the functions listed in the Input Setting field of Table 7 on pg. 189.</p> <p>Settings:</p> <p>0 – 3099</p> <p>See the <i>My Function Instruction Manual</i> (P/N E6581335) and F977 for more information on this parameter.</p>	<p>Direct Access Number — F917</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (Disabled)</p> <p>Changeable During Run — Yes</p>
<p>My Function Percent Data 1</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the trigger threshold level of the analog signal of the My Function Percent Data 1.</p> <p>The analog signal is selected using the Input Setting number from Table 7 on pg. 189.</p> <p>Once the assigned output value reaches the threshold setting of this parameter the output value is transferred to My Function Out 1.</p> <p>See the <i>My Function Instruction Manual</i> (P/N E6581335) and F977 for more information on this parameter.</p>	<p>Direct Access Number — F918</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 200.00</p> <p>Units — %</p>
<p>My Function Percent Data 2</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the trigger threshold level of the analog signal of the My Function Percent Data 2.</p> <p>The analog signal is selected using the Input Setting number from Table 7 on pg. 189.</p>	<p>Direct Access Number — F919</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 200.00</p> <p>Units — %</p>
<p>My Function Percent Data 3</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the trigger threshold level of the analog signal of the My Function Percent Data 3.</p> <p>The analog signal is selected using the Input Setting number from Table 7 on pg. 189.</p>	<p>Direct Access Number — F920</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 200.00</p> <p>Units — %</p>
<p>My Function Percent Data 4</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the trigger threshold level of the analog signal of the My Function Percent Data 4.</p> <p>The analog signal is selected using the Input Setting number from Table 7 on pg. 189.</p>	<p>Direct Access Number — F921</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 200.00</p> <p>Units — %</p>

F922

F927

<p>My Function Percent Data 5</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the trigger threshold level of the analog signal of the My Function Percent Data 5.</p> <p>The analog signal is selected using the Input Setting number from Table 7 on pg. 189.</p>	<p>Direct Access Number — F922</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 200.00</p> <p>Units — %</p>
<p>My Function Frequency Data 1</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the trigger threshold level of the analog signal of the My Function Frequency Data 1.</p> <p>The analog signal is selected using the Input Setting number from Table 7 on pg. 189.</p>	<p>Direct Access Number — F923</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 200.00</p> <p>Units — %</p>
<p>My Function Frequency Data 2</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the trigger threshold level of the analog signal of the My Function Frequency Data 2.</p> <p>The analog signal is selected using the Input Setting number from Table 7 on pg. 189.</p>	<p>Direct Access Number — F924</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 200.00</p> <p>Units — %</p>
<p>My Function Frequency Data 3</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the trigger threshold level of the analog signal of the My Function Frequency Data 1.</p> <p>The analog signal is selected using the Input Setting number from Table 7 on pg. 189.</p>	<p>Direct Access Number — F925</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 200.00</p> <p>Units — %</p>
<p>My Function Frequency Data 4</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the trigger threshold level of the analog signal of the My Function Frequency Data 4.</p> <p>The analog signal is selected using the Input Setting number from Table 7 on pg. 189.</p>	<p>Direct Access Number — F926</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 200.00</p> <p>Units — %</p>
<p>My Function Frequency Data 5</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the trigger threshold level of the analog signal of the My Function Frequency Data 5.</p> <p>The analog signal is selected using the Input Setting number from Table 7 on pg. 189.</p>	<p>Direct Access Number — F927</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.00</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.00</p> <p>Maximum — 200.00</p> <p>Units — %</p>

F928

F932

<p>My Function Time Data 1</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the response delay of the My Function Time Data 1 terminal.</p> <p>The applied discrete input signal must be present at the input terminal of the Q9 ASD for the time setting here for a system response.</p> <p>Discrete terminal input activation that does not equal or exceed this setting will be ignored.</p>	<p>Direct Access Number — F928</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.01</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.01</p> <p>Maximum — 600.00</p> <p>Units — Seconds</p>
<p>My Function Time Data 2</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the response delay of the My Function Time Data 2 terminal.</p> <p>The applied discrete input signal must be present at the input terminal of the Q9 ASD for the time setting here for a system response.</p> <p>Discrete terminal input activation that does not equal or exceed this setting will be ignored.</p>	<p>Direct Access Number — F929</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.01</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.01</p> <p>Maximum — 600.00</p> <p>Units — Seconds</p>
<p>My Function Time Data 3</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the response delay of the My Function Time Data 3 terminal.</p> <p>The applied discrete input signal must be present at the input terminal of the Q9 ASD for the time setting here for a system response.</p> <p>Discrete terminal input activation that does not equal or exceed this setting will be ignored.</p>	<p>Direct Access Number — F930</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.01</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.01</p> <p>Maximum — 600.00</p> <p>Units — Seconds</p>
<p>My Function Time Data 4</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the response delay of the My Function Time Data 4 terminal.</p> <p>The applied discrete input signal must be present at the input terminal of the Q9 ASD for the time setting here for a system response.</p> <p>Discrete terminal input activation that does not equal or exceed this setting will be ignored.</p>	<p>Direct Access Number — F931</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.01</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.01</p> <p>Maximum — 600.00</p> <p>Units — Seconds</p>
<p>My Function Time Data 5</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the response delay of the My Function Time Data 5 terminal.</p> <p>The applied discrete input signal must be present at the input terminal of the Q9 ASD for the time setting here for a system response.</p> <p>Discrete terminal input activation that does not equal or exceed this setting will be ignored.</p>	<p>Direct Access Number — F932</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0.01</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0.01</p> <p>Maximum — 600.00</p> <p>Units — Seconds</p>

F933

F938

<p>My Function Count Data 1</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the pulse-count threshold value used to trigger the discrete output COUNT1 (ON Timer).</p> <p>COUNT1 (ON Timer) outputs a 1 upon reaching the threshold setting at this parameter.</p>	<p>Direct Access Number — F933</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 9999</p> <p>Units — Pulses</p>
<p>My Function Count Data 2</p> <p>Program ⇒ My Function Data</p> <p>This parameter is used to set the pulse-count threshold value used to trigger the discrete output COUNT2 (ON Timer).</p> <p>COUNT2 (ON Timer) outputs a 1 upon reaching the threshold setting at this parameter.</p>	<p>Direct Access Number — F934</p> <p>Parameter Type — Numerical</p> <p>Factory Default — 0</p> <p>Changeable During Run — Yes</p> <p>Minimum — 0</p> <p>Maximum — 9999</p> <p>Units — Pulses</p>
<p>Input Function Target 1</p> <p>Program ⇒ My Function Unit 4</p> <p>This parameter plays a role in the setup of the My Function feature by selecting the functionality of the programmable Input Function Target 1 terminal.</p> <p>This setting assigns the function of the programmable Input Function Target 1 terminal to any of the user-selectable functions listed in Table 5 on pg. 187, Table 7 on pg. 189, or Table 8 on pg. 191.</p> <p>See F977 for more information on this parameter.</p>	<p>Direct Access Number — F935</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (Disabled)</p> <p>Changeable During Run — Yes</p>
<p>Input Function Command 1</p> <p>Program ⇒ My Function Unit 4</p> <p>This parameter is used to assign a user-selected logical operator to two user-selected Input Function Target variables, enable a counter/timer function, or perform a hold/reset function.</p> <p>Table 9 on pg. 193 lists the available selections. Their use and selection requirements are described in an example at F977.</p>	<p>Direct Access Number — F936</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (NOP)</p>
<p>Input Function Target 2</p> <p>Program ⇒ My Function Unit 4</p> <p>This parameter plays a role in the setup of the My Function feature by selecting the functionality of the programmable Input Function Target 2 terminal.</p> <p>This setting assigns the function of the programmable Input Function Target 2 terminal to any of the user-selectable functions listed in Table 5 on pg. 187, Table 7 on pg. 189, or Table 8 on pg. 191.</p> <p>See F977 for more information on this parameter.</p>	<p>Direct Access Number — F937</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (Disabled)</p> <p>Changeable During Run — Yes</p>
<p>Input Function Command 2</p> <p>Program ⇒ My Function Unit 4</p> <p>This parameter is used to assign a user-selected logical operator to two user-selected Input Function Target variables, enable a counter/timer function, or perform a hold/reset function.</p> <p>Table 9 on pg. 193 lists the available selections. Their use and selection requirements are described in an example at F977.</p>	<p>Direct Access Number — F938</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (NOP)</p>

F939

F943

Input Function Target 3

Program ⇒ My Function Unit 4

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 3** terminal.

This setting assigns the function of the programmable **Input Function Target 3** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F939Parameter Type — **Selection List**Factory Default — **0 (Disabled)**Changeable During Run — **Yes****Output Function Assigned**

Program ⇒ My Function Unit 4

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the **Output Function Assigned** terminal.

This setting assigns the function of the programmable **Output Function Assigned** data location to 1 of the functions listed in the **Input Setting** field of [Table 7 on pg. 189](#).

Settings:

0 – 3099

See the *My Function Instruction Manual* (P/N E6581335) and [F977](#) for more information on this parameter.

Direct Access Number — F940Parameter Type — **Selection List**Factory Default — **0 (Disabled)**Changeable During Run — **Yes****Input Function Target 1**

Program ⇒ My Function Unit 5

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 1** terminal.

This setting assigns the function of the programmable **Input Function Target 1** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F941Parameter Type — **Selection List**Factory Default — **0 (Disabled)**Changeable During Run — **Yes****Input Function Command 1**

Program ⇒ My Function Unit 5

This parameter is used to assign a user-selected logical operator to two user-selected **Input Function Target** variables, enable a counter/timer function, or perform a hold/reset function.

[Table 9 on pg. 193](#) lists the available selections. Their use and selection requirements are described in an example at [F977](#).

Direct Access Number — F942Parameter Type — **Selection List**

Factory Default — 0 (NOP)

Input Function Target 2

Program ⇒ My Function Unit 5

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 2** terminal.

This setting assigns the function of the programmable **Input Function Target 2** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F943Parameter Type — **Selection List**Factory Default — **0 (Disabled)**Changeable During Run — **Yes**

F944

F948

<p>Input Function Command 2</p> <p>Program ⇒ My Function Unit 5</p> <p>This parameter is used to assign a user-selected logical operator to two user-selected Input Function Target variables, enable a counter/timer function, or perform a hold/reset function.</p> <p>Table 9 on pg. 193 lists the available selections. Their use and selection requirements are described in an example at F977.</p>	<p>Direct Access Number — F944</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (NOP)</p>
<p>Input Function Target 3</p> <p>Program ⇒ My Function Unit 5</p> <p>This parameter plays a role in the setup of the My Function feature by selecting the functionality of the programmable Input Function Target 3 terminal.</p> <p>This setting assigns the function of the programmable Input Function Target 3 terminal to any of the user-selectable functions listed in Table 5 on pg. 187, Table 7 on pg. 189, or Table 8 on pg. 191.</p> <p>See F977 for more information on this parameter.</p>	<p>Direct Access Number — F945</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (Disabled)</p> <p>Changeable During Run — Yes</p>
<p>Output Function Assigned</p> <p>Program ⇒ My Function Unit 5</p> <p>This parameter plays a role in the setup of the My Function feature by selecting the functionality of the Output Function Assigned terminal.</p> <p>This setting assigns the function of the programmable Output Function Assigned data location to 1 of the functions listed in the Input Setting field of Table 7 on pg. 189.</p> <p>Settings:</p> <p>0 – 3099</p> <p>See the <i>My Function Instruction Manual</i> (P/N E6581335) and F977 for more information on this parameter.</p>	<p>Direct Access Number — F946</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (Disabled)</p> <p>Changeable During Run — Yes</p>
<p>Input Function Target 1</p> <p>Program ⇒ My Function Unit 6</p> <p>This parameter plays a role in the setup of the My Function feature by selecting the functionality of the programmable Input Function Target 1 terminal.</p> <p>This setting assigns the function of the programmable Input Function Target 1 terminal to any of the user-selectable functions listed in Table 5 on pg. 187, Table 7 on pg. 189, or Table 8 on pg. 191.</p> <p>See F977 for more information on this parameter.</p>	<p>Direct Access Number — F947</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (Disabled)</p> <p>Changeable During Run — Yes</p>
<p>Input Function Command 1</p> <p>Program ⇒ My Function Unit 6</p> <p>This parameter is used to assign a user-selected logical operator to two user-selected Input Function Target variables, enable a counter/timer function, or perform a hold/reset function.</p> <p>Table 9 on pg. 193 lists the available selections. Their use and selection requirements are described in an example at F977.</p>	<p>Direct Access Number — F948</p> <p>Parameter Type — Selection List</p> <p>Factory Default — 0 (NOP)</p>

F949

F953

Input Function Target 2

Program ⇒ My Function Unit 6

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 2** terminal.

This setting assigns the function of the programmable **Input Function Target 2** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F949

Parameter Type — **Selection List**

Factory Default — **0 (Disabled)**

Changeable During Run — **Yes**

Input Function Command 2

Program ⇒ My Function Unit 6

This parameter is used to assign a user-selected logical operator to two user-selected **Input Function Target** variables, enable a counter/timer function, or perform a hold/reset function.

[Table 9 on pg. 193](#) lists the available selections. Their use and selection requirements are described in an example at [F977](#).

Direct Access Number — F950

Parameter Type — **Selection List**

Factory Default — 0 (NOP)

Input Function Target 3

Program ⇒ My Function Unit 6

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 3** terminal.

This setting assigns the function of the programmable **Input Function Target 3** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F951

Parameter Type — **Selection List**

Factory Default — **0 (Disabled)**

Changeable During Run — **Yes**

Output Function Assigned

Program ⇒ My Function Unit 6

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the **Output Function Assigned** terminal.

This setting assigns the function of the programmable **Output Function Assigned** data location to 1 of the functions listed in the **Input Setting** field of [Table 7 on pg. 189](#).

Settings:

0 – 3099

See the *My Function Instruction Manual* (P/N E6581335) and [F977](#) for more information on this parameter.

Direct Access Number — F952

Parameter Type — **Selection List**

Factory Default — **0 (Disabled)**

Changeable During Run — **Yes**

Input Function Target 1

Program ⇒ My Function Unit 7

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 1** terminal.

This setting assigns the function of the programmable **Input Function Target 1** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F953

Parameter Type — **Selection List**

Factory Default — **0 (Disabled)**

Changeable During Run — **Yes**

F954

F958

Input Function Command 1

Program ⇒ My Function Unit 7

This parameter is used to assign a user-selected logical operator to two user-selected **Input Function Target** variables, enable a counter/timer function, or perform a hold/reset function.

[Table 9 on pg. 193](#) lists the available selections. Their use and selection requirements are described in an example at [F977](#).

Direct Access Number — F954Parameter Type — **Selection List**

Factory Default — 0 (NOP)

Input Function Target 2

Program ⇒ My Function Unit 7

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 2** terminal.

This setting assigns the function of the programmable **Input Function Target 2** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F955Parameter Type — **Selection List**Factory Default — **0 (Disabled)**Changeable During Run — **Yes****Input Function Command 2**

Program ⇒ My Function Unit 7

This parameter is used to assign a user-selected logical operator to two user-selected **Input Function Target** variables, enable a counter/timer function, or perform a hold/reset function.

[Table 9 on pg. 193](#) lists the available selections. Their use and selection requirements are described in an example at [F977](#).

Direct Access Number — F956Parameter Type — **Selection List**

Factory Default — 0 (NOP)

Input Function Target 3

Program ⇒ My Function Unit 7

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Input Function Target 3** terminal.

This setting assigns the function of the programmable **Input Function Target 3** terminal to any of the user-selectable functions listed in [Table 5 on pg. 187](#), [Table 7 on pg. 189](#), or [Table 8 on pg. 191](#).

See [F977](#) for more information on this parameter.

Direct Access Number — F957Parameter Type — **Selection List**Factory Default — **0 (Disabled)**Changeable During Run — **Yes****Output Function Assigned**

Program ⇒ My Function Unit 7

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the **Output Function Assigned** terminal.

This setting assigns the function of the programmable **Output Function Assigned** data location to 1 of the functions listed in the **Input Setting** field of [Table 7 on pg. 189](#).

Settings:

0 – 3099

See the *My Function Instruction Manual* (P/N E6581335) and [F977](#) for more information on this parameter.

Direct Access Number — F958Parameter Type — **Selection List**Factory Default — **0 (Disabled)**Changeable During Run — **Yes**

F959

F962

Analog Input Function Target 11

Program ⇒ My Function Analog

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Analog Input Function Target 11** terminal.

The function selected at **F961** may be adjusted using the input analog control signal selected here.

Settings:

- 0 — None (Disabled)
- 1 — V/I
- 2 — RR
- 3 — RX
- 4 — Optional RX2+, RX2-
- 5 — Optional V/I

Direct Access Number — F959Parameter Type — **Selection List**Factory Default — **Disabled**Changeable During Run — **Yes****Analog Function Assigned Object 11**

Program ⇒ My Function Analog

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality to which the adjustment of **F959** is applied.

Settings:

- 0 — None (Disabled)
- 1 — Acceleration Rate
- 2 — Upper-Limit Frequency
- 3 — Acceleration Multiplication Factor
- 4 — Deceleration Multiplication Factor
- 5 — Manual Torque Boost
- 6 — Over Current Stall (**F601**)
- 7 — Thermal Protection
- 8 — Speed Loop Proportional Gain (**F460**)
- 9 — Drooping Gain (**F320**)
- 10 — PID Proportional Gain (**F362**)

See the **My Function Instruction Manual** (P/N E6581335) for a complete description of the setup requirements and operational information of the **Analog Function Assigned Object** parameter.

Direct Access Number — F961Parameter Type — **Selection List**Factory Default — **Disabled**Changeable During Run — **Yes****Analog Input Function Target 21**

Program ⇒ My Function Analog

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality of the programmable **Analog Input Function Target 21** terminal.

The function selected at **F964** may be adjusted using the input analog control signal selected here.

Settings:

- 0 — None (Disabled)
- 1 — V/I
- 2 — RR
- 3 — RX
- 4 — Optional RX2+, RX2-
- 5 — Option V/I

Direct Access Number — F962Parameter Type — **Selection List**Factory Default — **Disabled**Changeable During Run — **Yes**

F964

F966

Analog Function Assigned Object 21

Program ⇒ My Function Analog

This parameter plays a role in the setup of the **My Function** feature by selecting the functionality to which the adjustment of F962 is applied.

Settings:

- 0 — None (Disabled)
- 1 — Acceleration Rate
- 2 — Upper-Limit Frequency
- 3 — Acceleration Multiplication Factor
- 4 — Deceleration Multiplication Factor
- 5 — Manual Torque Boost
- 6 — Over Current Stall (F601)
- 7 — Thermal Protection
- 8 — Speed Loop Proportional Gain (F460)
- 9 — Drooping Gain (F320)
- 10 — PID Proportional Gain (F362)

See the *My Function Instruction Manual* (P/N E6581335) for a complete description of the setup requirements and operational information of the **Analog Function Assigned Object** parameter.

Direct Access Number — F964Parameter Type — **Selection List**Factory Default — **Disabled**Changeable During Run — **Yes****Monitor Output Function 11**

Program ⇒ My Function Monitor

This parameter plays a role in the setup of the **My Function** feature by establishing the function that is to be recorded and output as the **Peak**, **Minimum**, or **Average** value as selected at parameter F966.

Select the **Monitor Display Input Setting** number from [Table 8 on pg. 191](#) to output the corresponding function.

Use the Communication Number if operating using communications.

See the *My Function Instruction Manual* (P/N E6581335) for a complete description of the setup requirements and operational information of the **Monitor Output Function** parameter.

Direct Access Number — F965Parameter Type — **Selection List**

Factory Default — 2000

Changeable During Run — **Yes****Monitor Output Function Command 11**

Program ⇒ My Function Monitor

This parameter plays a role in the setup of the **My Function** feature by allowing the user to select the **Peak**, **Minimum**, or **Normal** (Avg.) value of the parameter F965 selection to be recorded and output as a monitored function.

Settings:

- 0 — Normal
- 1 — Peak
- 2 — Minimum

See the *My Function Instruction Manual* (P/N E6581335) for a complete description of the setup requirements and operational information of the **Monitor Output Function** parameter.

Direct Access Number — F966Parameter Type — **Selection List**Factory Default — **Normal**Changeable During Run — **Yes**

Monitor Output Function 21

Program ⇒ My Function Monitor

This parameter plays a role in the setup of the **My Function** feature by establishing the function that is to be recorded and output as the **Peak, Minimum, or Average** value as selected at parameter F968.

Select the **Monitor Display Input Setting** number from [Table 8 on pg. 191](#) to output the corresponding function.

Use the Communication Number if operating using communications.

See the *My Function Instruction Manual* (P/N E6581335) for a complete description of the setup requirements and operational information of the **Monitor Output Function** parameter.

Monitor Output Function Command 21

Program ⇒ My Function Monitor

This parameter plays a role in the setup of the **My Function** feature by allowing the user to select the **Peak, Minimum, or Normal** (Avg.) value of the parameter F967 selection to be recorded and output as a monitored function.

Settings:

- 0 — Normal
- 1 — Peak
- 2 — Minimum

See the *My Function Instruction Manual* (P/N E6581335) for a complete description of the setup requirements and operational information of the **Monitor Output Function** parameter.

Monitor Output Function 31

Program ⇒ My Function Monitor

This parameter plays a role in the setup of the **My Function** feature by establishing the function that is to be recorded and output as the **Peak, Minimum, or Average** value as selected at parameter F970.

Select the **Monitor Display Input Setting** number from [Table 8 on pg. 191](#) to output the corresponding function.

Use the Communication Number if operating using communications.

See the *My Function Instruction Manual* (P/N E6581335) for a complete description of the setup requirements and operational information of the **Monitor Output Function** parameter.

Direct Access Number — F967Parameter Type — **Selection List**

Factory Default — 2000

Changeable During Run — **Yes****Direct Access Number — F968**Parameter Type — **Selection List**Factory Default — **Normal**Changeable During Run — **Yes****Direct Access Number — F969**Parameter Type — **Selection List**

Factory Default — 2000

Changeable During Run — **Yes**

F970

F972

Monitor Output Function Command 31

Program ⇒ My Function Monitor

This parameter plays a role in the setup of the **My Function** feature by allowing the user to select the **Peak, Minimum, or Normal** (Avg.) value of the parameter F969 selection to be recorded and output as a monitored function.

See the *My Function Instruction Manual* (P/N E6581335) for a complete description of the setup requirements and operational information of the **Monitor Output Function** parameter.

Settings:

- 0 — Normal
- 1 — Peak
- 2 — Minimum

Direct Access Number — F970

Parameter Type — Selection List

Factory Default — Normal

Changeable During Run — Yes

Monitor Output Function 41

Program ⇒ My Function Monitor

This parameter plays a role in the setup of the **My Function** feature by allowing the user to select the **Peak, Minimum, or Normal** (Avg.) value of the parameter F972 selection to be recorded and output as a monitored function.

Settings:

- 0 — Normal
- 1 — Peak
- 2 — Minimum

See the *My Function Instruction Manual* (P/N E6581335) for a complete description of the setup requirements and operational information of the **Monitor Output Function** parameter.

Direct Access Number — F971

Parameter Type — Selection List

Factory Default — Normal

Changeable During Run — Yes

Monitor Output Function Command 41

Program ⇒ My Function Monitor

This parameter plays a role in the setup of the **My Function** feature by establishing the function that is to be recorded and output as the **Peak, Minimum, or Average** value as selected at parameter F971.

Select the **Monitor Display Input Setting** number from [Table 8 on pg. 191](#) to output the corresponding function.

Use the Communication Number if operating using communications.

See the *My Function Instruction Manual* (P/N E6581335) for a complete description of the setup requirements and operational information of the **Monitor Output Function** parameter.

Direct Access Number — F972

Parameter Type — Selection List

Factory Default — 2000

Changeable During Run — Yes

F973

F976

Virtual Input Terminal 1 Selection

No Path — Direct Access Only

This parameter is used to set the functionality of the **Virtual Input Terminal 1**. As a virtual terminal, it exists only in memory and is considered to always be in its **True** (or connected to CC) state.

It is often practical to assign a function to this terminal that the user desires to be maintained regardless of external conditions or operations.

This parameter sets the programmable **Virtual Input Terminal 1** terminal to 1 of the functions that are listed in [Table 4 on pg. 185](#).

In addition, the input terminal must be specified as **Normally Open** or **Normally Closed**.

Direct Access Number — F973

Parameter Type — Selection List

Factory Default — Unassigned

Changeable During Run — No

Virtual Input Terminal 2 Selection

No Path — Direct Access Only

This parameter is used to set the functionality of the **Virtual Input Terminal 2**. As a virtual terminal, it exists only in memory and is considered to always be in its **True** (or connected to CC) state.

It is often practical to assign a function to this terminal that the user desires to be maintained regardless of external conditions or operations.

This parameter sets the programmable **Virtual Input Terminal 2** terminal to 1 of the functions that are listed in [Table 4 on pg. 185](#).

In addition, the input terminal must be specified as **Normally Open** or **Normally Closed**.

Direct Access Number — F974

Parameter Type — Selection List

Factory Default — Unassigned

Changeable During Run — No

Virtual Input Terminal 3 Selection

No Path — Direct Access Only

This parameter is used to set the functionality of the **Virtual Input Terminal 3**. As a virtual terminal, it exists only in memory and is considered to always be in its **True** (or connected to CC) state.

It is often practical to assign a function to this terminal that the user desires to be maintained regardless of external conditions or operations.

This parameter sets the programmable **Virtual Input Terminal 3** terminal to 1 of the functions that are listed in [Table 4 on pg. 185](#).

In addition, the input terminal must be specified as **Normally Open** or **Normally Closed**.

Direct Access Number — F975

Parameter Type — Selection List

Factory Default — Unassigned

Changeable During Run — No

Virtual Input Terminal 4 Selection

No Path — Direct Access Only

This parameter is used to set the functionality of the **Virtual Input Terminal 4**. As a virtual terminal, it exists only in memory and is considered to always be in its **True** (or connected to CC) state.

It is often practical to assign a function to this terminal that the user desires to be maintained regardless of external conditions or operations.

This parameter sets the programmable **Virtual Input Terminal 4** terminal to 1 of the functions that are listed in [Table 4 on pg. 185](#).

In addition, the input terminal must be specified as **Normally Open** or **Normally Closed**.

Direct Access Number — F976

Parameter Type — Selection List

Factory Default — Unassigned

Changeable During Run — No

My Function Selection

Program ⇒ My Function

This parameter **Enables/Disables** the configured **My Function** feature of the Q9 ASD.

Settings:

- 0 — None (Disabled)
- 1 — My Function with Terminal Board Signal (Discrete Terminal Activation)
- 2 — My Function Always On

My Function

The **My Function** feature is configured using the settings of **F900** to **F977** and is used to enhance the programmability of the Q9 ASD by performing two programmable functions: 1) the Combined Terminal Function, and 2) Logic Operations.

Combined Input Terminal Function

Assigning more than one function to a discrete output terminal provides two advantages: it effectively expands the number of input terminals, and reduces the number of cables required to support the input/output functions (e.g., assigning ST and F to one terminal). Using **Virtual Terminals 1 – 4** (**F973 – F976**) are required to use this function.

In the example below, the **ST** terminal assignment and the **F** terminal assignment will be combined as one terminal to illustrate this feature. However, any two of the discrete output terminal assignments listed in **Table 7** on pg. 189 may be combined in this manner.

Setup (Example)

1. Disable the **My Function** parameter at **F977** to prevent the system from starting upon completion of the setup.
2. Assign the **ST** function to the **S1** terminal (**F115**).
3. Assign the **F** function to **Virtual Input Terminal 1** (**F973**).
4. Set **Input Function Target 1** to **5** (**F900**). This setting assigns **S1** as the control input terminal.
5. Set **Output Function Assigned** to **21** (**F905**). This setting is a command that writes the **F115** selection (**S1**) to **Virtual Input Terminal 1**, activating both.
6. Enable the **My Function** parameter at **F977** by selecting **My Function Always On** or selecting **My Function With TB Signal**.

If set to **My Function Always On**, the combination of **ST** and **F** are always On (both are connected to **CC** only during the **S1** activation).

If set to **My Function With TB Signal**, set a discrete input terminal to **My Function Run Signal** and connect it to **CC** to enable **My Function**. Connect **S1** to **CC** to activate the **ST+F** function. A disconnection at either terminal will terminate the **My Function** programming (discrete input terminal **My Function Run Signal** is Aanded with discrete input terminal **S1**).

Connect **S1** to **CC** and the **F-to-CC** + the **ST-to-CC** functions will be carried out using only **S1**.

With the aforementioned setup completed, provide a **Frequency Command** (**F004**) and the motor will run at the commanded frequency.

Continued next page.

Direct Access Number — **F977**

Parameter Type — **Selection List**

Factory Default — **None** (Disabled)

Changeable During Run — **No**



This parameter must always be set to **None** at the start of the **My Function** setup and remain set to **None** until all of the **My Function** parameter settings have been confirmed as being correct.

If enabled for normal operation using settings **1** or **2**, the motor may start and engage the driven equipment unexpectedly upon receiving a **Run** signal during the **My Function** setup.

Combined Output Terminal Function

Output terminals may also be combined to produce one output response to multiple conditions using the computational operators of [Table 9 on pg. 193](#). Assigning more than one function to a discrete output terminal provides two advantages: it effectively expands the number of input terminals, and reduces the number of cables required to support the input/output functions (e.g., assigning Low-Speed Detection and Low-Current Detection to one output terminal). Using **Virtual Terminals 1 – 4 (F973 – F976)** are required to use this function.

In the example below, the **Low-Speed Signal** (detection) terminal assignment and the **Low-Current Detection** terminal assignment will be combined as one terminal output to illustrate this feature. However, any two of the discrete output terminal assignments may listed in [Table 7 on pg. 189](#) may be combined in this manner.

Setup (Example)

1. Disable the **My Function** parameter at [F977](#) to prevent the system from starting upon completion of the setup.
2. From Program ⇒ Direct Access ⇒ Unknown Numbers, select **Enabled**.
3. Set the **OUT1** terminal ([F130](#)) to **My Function Output 1** (222).
4. Set **Input Function Target 1** ([F900](#)) to **1004** (Low-Speed Signal detection). See [Table 7 on pg. 189](#) for a complete listing of available settings.
5. Set **Input Function Target 2** ([F902](#)) to **1026** (Low-Current Alarm). See [Table 7 on pg. 189](#) for a complete listing of available settings.
6. Set **Input Function Command 1** ([F901](#)) to **AND** (3). This setting assigns an operator to the **Input Function Target 1** and the **Input Function Target 2** settings.
7. Set **Output Function Assigned** ([F905](#)) to **1222**. This setting will transfer the results of the logical AND to **My Function Output 1** (OUT1).
8. Enable the **My Function** parameter at [F977](#) by selecting **My Function Always On**.

With the aforementioned setup completed in the example, once the **Low-Speed Signal** AND the **Low-Current Alarm** are active, the **OUT1** terminal is activated for the duration of the **Low-Speed/Low-Current** condition.

See the *My Function Instruction Manual* (P/N E6581335) for a complete description of the setup requirements and operational information of the **My Function** parameter.

Direct Access Number — [F977](#)

Parameter Type — **Selection List**

Factory Default — **None** (Disabled)

Changeable During Run — **No**



This parameter must always be set to **None** at the start of the **My Function** setup and remain set to **None** until all of the **My Function** parameter settings have been confirmed as being correct.

If enabled for normal operation using settings **1** or **2**, the motor may start and engage the driven equipment unexpectedly upon receiving a **Run** signal during the **My Function** setup.

Table 4. Discrete Input Terminal Assignment Selections and Descriptions.

Sel. No.		Terminal Selection Descriptions
NO	NC	
0	1	Unassigned — No operation.
2	3	Forward — Provides a Forward run command.
4	5	Reverse — Provides a Reverse run command.
6	7	Standby — Enables the Forward and Reverse operation commands.
8	9	Reset — Resets the device and any active faults.
10	11	(Pre)Set Speed 1 — Preset Speed 1 is used as the LSB of the 4-bit nibble that is used to select a Preset Speed .
12	13	(Pre)Set Speed 2 — Preset Speed 2 is used as the second bit of the 4-bit nibble that is used to select a Preset Speed .
14	15	(Pre)Set Speed 3 — Preset Speed 3 is used as the third bit of the 4-bit nibble that is used to select a Preset Speed .
16	17	(Pre)Set Speed 4 — Preset Speed 4 is used as the MSB of the 4-bit nibble that is used to select a Preset Speed .
18	19	Jog — Jog is the term used to describe turning on the motor for discrete increments of time and is used when precise positioning of motor-driven equipment is required. This terminal activates a Jog for the duration of the activation. The Jog settings may be configured at F260 – F262 .
20	21	Emergency Off — Terminates the output signal from the drive and may apply a brake if so configured. The braking method may be selected at F603 .
22	23	DC Braking — The drive outputs a DC current that is injected into the windings of the motor to quickly brake the motor.
24	25	A/D 1/2 — Accel/Decel Switching 1 and 2 — Activate or deactivate this terminal to toggle to and from the Accel/Decel profile 1 and 2 . Accel/Decel profiles are comprised of the Accel/Decel settings, Pattern , and Switching Frequency , respectively. See F504 for more information on this terminal setting.
28	29	Motor 1/2 — Motor Profile 1 and 2 — Activate or deactivate this terminal to select Motor profile 1 or 2 , respectively. Motor profiles are comprised of Frequency Mode 1 and 2 , Base Frequency/Base Frequency Voltage , Torque Boost , and Electronic Thermal Protection Level settings.
36	37	PID Off — Turns off PID control.
46	47	External Over-heat — Causes an Over-Heat Trip (OH).
48	49	Local Priority (Cancels Serial Priority) — Overrides any serial control and returns the Command and Frequency control to F003 and F004 .
50	51	Hold (3-Wire Stop) — Decelerates the motor to a stop.
52	53	PID Differentiation/Integration Clear — Clears the PID value.
54	55	PID Forward/Reverse Switching — Toggles the gradient characteristic of the feedback response of the V/I terminal during PID-controlled operation.
56	57	Forced Run — PID control is ignored for the duration of activation.
58	59	Fire Speed — Run Preset Speed 15 for the duration of the activation (see F294 for more information on this setting).
60	61	My Function Run — Activates the configured My Function feature. See F977 for more information on this parameter.
66	67	Autotuning — Initiates the Autotune function. Set F400 to Autotuning by Input Terminal Signal to use this function.
70	71	Servo Lock — Holds the motor at 0 Hz until a Run command is received.
74	75	kWH Clear — Clears the kWH Meter display.
76	77	Trace Back — Initiates the data Read/Store function of the Trace Selection parameter. See F740 for more information on this feature.
80	81	Damper Feedback — Activation of this terminal indicates an open damper and enables the system for normal operation. This terminal connects to a Damper Open/Damper Closed switch.
86	87	Binary Write — Writes the status of the discrete input terminals to the control board during binary input speed control.
<i>Note:</i> NO/NC = Normally Open/Normally Closed.		

Table 4. (Continued) Discrete Input Terminal Assignment Selections and Descriptions.

Sel. No.		Terminal Selection Descriptions
NO	NC	
88	89	UP/DOWN Frequency (UP) — Increases the speed of the motor for the duration of activation until reaching the Upper-Limit setting or increases the speed of the motor in steps (see F264 for more information on this feature).
90	91	UP/DOWN Frequency (DOWN) — Decreases the speed of the motor for the duration of activation until reaching the Lower-Limit setting or decreases the speed of the motor in steps (see F264 for more information on this feature).
92	93	UP/DOWN Frequency (CLEAR) — While operating in the Up/Down Frequency speed control mode this terminal initiates a 0 Hz output command. If operating with an activated UP/DOWN Frequency (UP or DOWN) terminal, the output goes to the Lower-Limit (F013) setting.
98	99	Forward/Reverse — This setting operates in conjunction with another terminal being set to the Run/Stop function. When configured to Run (Run/Stop to CC) , the make or break of this connection to CC changes the direction of the motor.
100	101	Run/Stop — This terminal enables the motor to run when activated and disables the motor when deactivated.
102	103	Line Bypass — Initiates the ASD-to-Commercial Power switching function. See parameter F354 for more information on this feature.
104	105	Frequency Priority — Toggles frequency control to and from the settings of F004 and F207 with each activation/deactivation.
106	107	V/I Terminal Priority — Assigns Speed control to the V/I Terminal and overrides the F004 setting.
108	109	Terminal Priority — Assigns Command control to the Terminal Board and overrides the F003 setting.
110	111	Edit Enable — Allows for the override of the lockout parameter setting (F700) allowing for parameter editing.
122	123	Fast Deceleration — Using dynamic braking (if enabled and supported), stops the motor at the fastest rate allowed by the load.
124	125	Pre-Excitation — Applies an excitation current to the motor (holds shaft stationary) for the duration of the activation.
<i>Note: NO/NC = Normally Open/Normally Closed.</i>		

Table 5. My Function — Input Function Target Selections.

Communications Number	Terminal Assignment (Physical or Internal/Virtual Terminal)	Communications Number	Terminal Assignment (Physical or Internal/Virtual Terminal)
0	Unassigned	17	B12
1	Forward	18	B13
2	Reverse	19	B14
3	Standby	20	B15
4	Reset	21	Virtual Input Terminal 1
5	S1	22	Virtual Input Terminal 2
6	S2	23	Virtual Input Terminal 3
7	S3	24	Virtual Input Terminal 4
8	S4	25	Internal Terminal 1
9	LI1	26	Internal Terminal 2
10	LI2	27	Internal Terminal 3
11	LI3	28	Internal Terminal 4
12	LI4	29	Internal Terminal 5
13	LI5	30	Internal Terminal 6
14	LI6	31	Internal Terminal 7
15	LI7	32	Internal Terminal 8
16	LI8		

Table 6. Output Terminal Assignments for the AM, FM, FP, MON1, and MON2 Output Terminals.

Output Meter Terminal Assignments and Display Item Selections	
Output Frequency	Option V/I Input
Frequency Reference	RR Input
Output Current	V/I Input
DC Bus Voltage	RX Input
Output Voltage	RX2 (AI1) Input
Compensated Frequency	FM Output
Speed Feedback (Realtime)	AM Output
Speed Feedback (1 Sec Filter)	100% Meter Adjust Value
Torque	Data from Communications
Torque Command	185% Meter Adjust Value
Torque Current	250% Meter Adjust Value
Excitation Current	Input Watt Hour
PID Feedback Value	Output Watt Hour
Motor Overload Ratio	Gain Display
ASD Overload Ratio	My Function Monitor 1 Without Sign
DBR Overload Ratio (Not Used)	My Function Monitor 2 Without Sign
DBR Load Ratio (Not Used)	My Function Monitor 3 With Sign
Input Power	My Function Monitor 4 With Sign
Output Power	

Table 7. Terminal Assignments With the Associated My Function Input Setting (Input Function Target) and Parameter Setting Numbers for the FL, O1A/O1B (OUT1), O2A/O2B (OUT2), OUT3–OUT6, R1–R4 Terminals.

Discrete Output Terminal Assignment Selections					
Input Setting	Param Setting	Function	Input Setting	Param Setting	Function
1000	0	Lower-Limit (LL) Frequency	1088	88	Error Code Output 5
1002	2	Upper-Limit (UL) Frequency	1090	90	Error Code Output 6
1004	4	Low (Speed Signal)	1092	92	Data Output 1
1006	6	Acceleration/Deceleration Complete	1094	94	Data Output 2
1008	8	Reach Speed Signal	1096	96	Data Output 3
1010	10	Fault (Any)	1098	98	Data Output 4
1012	12	Fault 2 (Except EF, OCL, EPHO, OL2)	1100	100	Data Output 5
1014	14	Over-Current (OC) Alarm	1102	102	Data Output 6
1016	16	ASD Overload (OL1) Alarm	1104	104	Data Output 7
1018	18	Motor Overload (OL2) Alarm	1106	106	Light Load Detected
1020	20	Over-Heat (OH) Alarm	1108	108	Heavy Load Detected
1022	22	Over-Voltage (OP) Alarm	1110	110	Positive Torque Limit
1024	24	DC Under-Voltage Alarm	1112	112	Negative Torque Limit
1026	26	Low-Current Alarm	1114	114	Rush Suppression Relay Activated
1028	28	Over-Torque (OT) Alarm	1118	118	Completion of Positioning (Not Used)
1030	30	DBR Overload (OL) Alarm (Not Used)	1120	120	L-STOP
1032	32	Emergency Off (E-Off) Active	1122	122	Power Fail Synchronize Op. (Not Used)
1034	34	Retry Active	1124	124	Traverse in Progress (Not Used)
1036	36	Pattern Operation Switching Output (Not Used)	1126	126	Traverse Deceleration in Progress (Not Used)
1038	38	PID Deviation Limit	1128	128	Maintenance Alarm
1040	40	Start/Stop	1130	130	Over-Torque (OT) Alarm
1042	42	Hard Fault (OCA, OCL, EF, Phase Failure, etc.)	1132	132	Frequency Command ½ Selection
1044	44	Soft Fault (OL, OC, OV)	1134	134	Fault (Except Emergency Off)
1046	46	Bypass 1 (Comm. Power/ASD Switching Output 1)	1135	136	Local/Remote
1048	48	Bypass 2 (Comm. Power/ASD Switching Output 2)	1138	138	Forced Run
1050	50	ASD Fan ON/OFF	1140	140	Fire Speed
1052	52	Jogging (Jog Run Active)	1142	142	Low Torque
1054	54	(Panel)/Terminal Board Operation Switching	1144	144	Frequency Control = RR
1056	56	Run-Time Alarm	1146	146	Frequency Control = RX
1058	58	Comm. Alarm (ProfiBus/DeviceNet/CC-Link)	1148	148	Frequency Control = VI
1060	60	Forward/Reverse Switching	1150	150	PTC Alarm
1062	62	Ready for Operation 1 (Includes ST and Run)	1152	152	Power Loss
1064	64	Ready for Operation 2	1154	154	4 – 20 mA Loss
1066	66	POFF Alarm (Control Power Out Of Spec.)	1156	156	Damper Command
1068	68	Brake Release (BR) (Not Used)	1222	222	My Function Output 1
1070	70	Alarm Status Active	1224	224	My Function Output 2
1072	72	Forward Speed Limit (Torque Control)	1226	226	My Function Output 3
1074	74	Reverse Speed Limit (Torque Control)	1228	228	My Function Output 4
1076	76	ASD Healthy Output	1230	230	My Function Output 5
1078	78	External Communication Error	1232	232	My Function Output 6
1080	80	Error Code Output 1	1234	234	My Function Output 7
1082	82	Error Code Output 2	1236	236	My Function Output 8
1084	84	Error Code Output 3	1238	238	My Function Output 9

Table 7. (Continued) Terminal Assignments With the Associated My Function Input Setting (Input Function Target) and Parameter Setting Numbers for the FL, O1A/O1B (OUT1), O2A/O2B (OUT2), OUT3–OUT6, R1–R4 Terminals.

Discrete Output Terminal Assignment Selections					
Input Setting	Param Setting	Function	Input Setting	Param Setting	Function
1086	86	Error Code Output 4	1240	240	My Function Output 10
1242	242	My Function Output 11	1250	250	My Function Output 15
1244	244	My Function Output 12	1252	252	My Function Output 16
1246	246	My Function Output 13	1254	254	Always OFF
1248	248	My Function Output 14			
Note: Only positive logic is available for the listed parameters.					

Table 8. My Function — Input Function Target and Monitor Output Function Selections.

Input Setting/Communication Number				Function	Resolution
FM/AM/FP Input Setting	Comm. Number	Monitor Display Input Setting	Comm. Number		
2000	FD00	3000	FE00	Output Frequency	0.01 Hz
2002	FD02	3002	FE02	Frequency Reference	0.01 Hz
2003	FD03	3003	FE03	Output Current	0.01%
2004	FD04	3004	FE04	DC Bus Voltage	0.01%
2005	FD05	3005	FE05	Output Voltage	0.01%
2015	FD15	3015	FE15	Compensated Frequency	0.01 Hz
2016	FD16	3016	FE16	Speed Feedback (Realtime) <i>(See Note 1)</i>	0.01 Hz
2017	FD17	3017	FE17	Speed Feedback (1 Sec Filter) <i>(See Note 1)</i>	0.01 Hz
2018	FD18	3018	FE18	Torque <i>(See Note 2)</i>	0.01%
2019	FD19	3019	FE19	Torque Command <i>(See Note 2)</i>	0.01%
2020	FD20	3020	FE20	Torque Current <i>(See Note 2)</i>	0.01%
2021	FD21	3021	FE21	Excitation Current	0.01%
2022	FD22	3022	FE22	PID Feedback Value	0.01 Hz
2023	FD23	3023	FE23	Motor Overload Ratio	0.01%
2024	FD24	3024	FE24	ASD Overload Ratio	0.01%
2025	FD25	3025	FE25	DBR Overload Ratio (Not Used)	1%
2028	FD28	3028	FE28	DBR Load Ratio (Not Used)	1%
2029	FD29	3029	FE29	Input Power	0.01 kW
2030	FD30	3030	FE30	Output Power	0.01 kW
2050	FD50			Light-Load High-Speed Load Torque Monitor 1	0.01%
2051	FD51			Light-Load High-Speed Load Torque Monitor 2	0.01%
		3035	FE35	RR Input	1%
		3036	FE36	V/I Input	1%
		3037	FE37	RX Input <i>(See Note 2)</i>	1%
		3038	FE38	RX2 (AI1) Input <i>(See Note 2)</i>	1%
		3039	FE39	RX2 (AI2) Input	1%
		3040	FE40	FM Output	1
		3041	FE41	AM Output	1

Note 1: If no PG feedback is used an estimated speed value is displayed.

Note 2: My Function cannot process negative values — A negative value is processed by My Function as an absolute value.

Table 8. (Continued)My Function — Input Function Target and Monitor Output Function Selections.

Input Setting/Communication Number				Function	Resolution	
FM/AM/FP Input Setting	Comm. Number	Monitor Display Input Setting	Comm. Number			
3050	FE50			Communication Data Output 2		
3051	FE51			Communication Data Output 1		
3052	FE52			Communication Data Output 3		
3060	FE60			My Function Monitor 1 (Output of Unsigned Value)		
3061	FE61			My Function Monitor 2 (Output of Unsigned Value)		
3062	FE62			My Function Monitor 3 (Output of Signed Value)		
3063	FE63			My Function Monitor 4 (Output of Signed Value)		
		3066	FE66	Expansion I/O Card 1 CPU Version		
		3067	FE67	Expansion I/O Card 2 CPU Version		
		3076	FE76	Integral Input Power		0.01 kW
		3077	FE77	Integral Output Power		0.01 kW
		3084	FE84	16-Bit BIN/BCD Input Value		1

Table 9. My Function — Input Function Command Operators.

My Function Computational Selections		
Input Function Command	Function Name	Function Description
0	NOP (No Operation)	Disables the My Function feature.
1	ST	Execute data read/transfer.
2	STN	Execute inverted data read/transfer.
3	AND	Logical product of A AND B.
4	ANDN	Logical product of A AND \bar{B} .
5	OR	Logical sum of A OR B.
6	ORN	Logical sum of A OR \bar{B} .
7	EQ	Compares data — Outputs 1 if Equal; 0 if not Equal.
8	NE	Compares data — Outputs 0 if Equal; 1 if not Equal.
9	GT	Compares data — Outputs 1 if A>B; 0 if A≤B.
10	GE	Compares data — Outputs 1 if A≥B; 0 if A<B.
11	LT	Compares data — Outputs 1 if A<B; 0 if A≥B.
12	LE	Compares data — Outputs 1 if A≤B; 0 if A>B.
13	ASUB	Outputs absolute difference between A and B — A-B
14	ON (Timer)	Enables the On response time delay settings of My Function Time Data 1 – 5 (F928 – F932) for My Function Data .
15	OFF (Timer)	Enables the Off response time delay settings of My Function Time Data 1 – 5 (F928 – F932) for My Function Data .
16	COUNT1 (Timer)	Outputs a 1 upon reaching the pulse count setting of F933.
17	COUNT2 (Timer)	Outputs a 1 upon reaching the pulse count setting of F934.
18	HOLD	Outputs the peak output value since powering up or since the last reset.
19	SET	Sets data.
20	RESET	Resets data.

Alarms, Trips, and Troubleshooting

An **Alarm** notifies the user that a system operating limit is being exceeded and that appropriate action is required to rectify the condition or a **Fault** will be incurred (in most cases; e.g., a Part Replacement alarm will not cause the system to trip).

User Notification Codes are used to alert the user to active system functions (e.g., ETN, ETN2, Emergency Off, etc.).

If a user setting or an ASD operating requirement has been exceeded, or if a data transfer function produces an unexpected result, a condition that is referred to as a **Fault** is incurred.

Some **Faults** have an associated **Alarm** that provides a warning that the normal operating condition of the system is not within specifications and that a **Trip** is imminent.

In most cases, if the event that caused the **Alarm** does not return to its normal operating range within a specified time (some alarms are for notification only and do not result in a trip), the ASD **Faults** and a **Trip** is incurred (Fault and Trip are sometimes used interchangeably).

A **Trip** is a safety feature, and is the result of a **Fault**, that disables the ASD system in the event that a subsystem of the ASD is malfunctioning, or if one or more of the variables listed below exceeds its normal range in time and/or magnitude.

- Current,
- Voltage,
- Speed,
- Temperature,
- Torque, or
- Load.

User Notification Codes

The **User Notification** codes are displayed as an indication that a system function or system condition is active. [Table 10](#) lists the available user-notification codes of the Q9 ASD. The code is displayed on the EOI for the duration of the activation.

Table 10. User Notification Codes.

EOI Display	Description	Possible Causes
Atn	Autotune active.	
ETN	Autotuning error.	<ul style="list-style-type: none"> • Autotune readings that are significantly inconsistent with the configuration information. • A non-3-phase motor is being used. • Improper settings at F400 or F410 to F413. • Using a motor that has a significantly smaller rating than the ASD. • ASD output cabling is too small, too long, or is being housed in a cable tray with other cables that are producing an interfering EMF. • Motor is running during the Autotune function.
ETN1	Autotuning error — Torque boost error.	Improper setting at F410 .
ETN2	Autotuning error — Leak inductance error.	Improper setting at F412 .
ETN3	Autotuning error — Motor rating error.	Improper setting at F405 , F406 , or F407 .
ETYP	Typeform error.	<ul style="list-style-type: none"> • Firmware information (typeform) loaded into the Application Board is inconsistent with the typeform information loaded into the Motor Control board. • A Typeform Reset is required. • The Application Board or the Motor Control board is defective.
No Error	No error.	

Alarms and Trips

Alarm

An **Alarm** is an indication that there are system operating limits that are being exceeded and that a **Fault** may be imminent (not all ongoing alarms result in a fault) or to provide an indication that an operator error has occurred. An **Alarm** may be associated with an output terminal to notify the operator of the condition remotely, close a contact, or to engage a brake. At the least, an **Alarm** will cause an alarm code to appear on the EOI display

The active alarm may be displayed on the **Alarm** screen — some alarms are displayed on the **Frequency Command** screen. Press the **Mode** key if the alarm is displayed on the **Frequency Command** screen to scroll to the **Alarm** screen.

Table 11 lists the possible **Alarm** codes that may be displayed during operation of the Q9 ASD. Each alarm code listed is accompanied by a description and a possible cause. In the event that the source of the malfunction cannot be determined, contact your Toshiba Sales Representative for further information on the condition and for an appropriate course of action.

In the event that multiple alarms are activated only the first to be detected will be displayed.

Table 11. Alarms.

EOI Display	Alarm Description	Possible Causes
4-20 mA	4-20 Signal Loss.	<ul style="list-style-type: none"> Misconnection, poor connection or broken wire. Improper programming at F201 and associated parameters.
CM1	Internal communications error.	<ul style="list-style-type: none"> Improperly programmed ASD. Improper communications settings.
CM2	External communications error.	<ul style="list-style-type: none"> Improperly connected cables.
COFF	Under-voltage condition at the optional Control power supply.	<ul style="list-style-type: none"> Misconnection, poor connection, or broken wire. Defective power supply.
DAMP	Damper closed.	<ul style="list-style-type: none"> Improper configuration/programming for Damper Control at discrete input terminals.
Emergency Off	Output signal from the ASD is terminated and a brake may be applied if so configured.	<ul style="list-style-type: none"> Stop-Reset pressed twice at the EOI. EOFF command received remotely. ASD reset required.
HLD	Heavy load — motor/ASD over loaded.	<ul style="list-style-type: none"> Accel setting is too short. ASD/Motor should be right-sized for application. Excessively fluctuating load.
LLD	Light load.	<ul style="list-style-type: none"> ASD/Motor should be right-sized for application.
LLT	Lower-limit time.	<ul style="list-style-type: none"> Parameter F256 adjustment required.
LTA	Part replacement alarm.	<ul style="list-style-type: none"> Part Replacement Alarm activation as set at F634.

EOI Display	Alarm Description	Possible Causes
MOFF	Main under-voltage condition at the 3-phase AC input to the ASD.	<ul style="list-style-type: none"> • Low 3-phase commercial power voltage level.
OC	Over-Current — ASD output current greater than F601 setting.	<ul style="list-style-type: none"> • Phase-to-phase short (U, V, or W). • Defective IGBT (U, V, or W). • ASD output to the motor is connected incorrectly. • ASD output phase-to-phase short. • Restarting from a power outage or the ASD is starting into a spinning motor. • Motor/machine jammed. • Mechanical brake engaged while the ASD is starting or while running. • Accel/Decel time is too short. • Voltage Boost setting is too high. • V/f setting adjustment required. • Load fluctuations. • ASD operating at an elevated temperature. • ASD/Motor not properly matched. • ASD current exceeds 320% or 340% of the rated FLA on ASDs that are greater than 100 HP or that are 100 HP or less, respectively, during acceleration.
*OH	Overheat — ASD ambient temperature excessive.	<ul style="list-style-type: none"> • ASD is operating at an elevated temperature. • ASD is too close to heat-generating equipment. • Cooling fan vent is obstructed (See Mounting the ASD on pg. 13). • Cooling fan is inoperative. • Internal thermistor is disconnected.
OJ	User-set run-time counter exceeded.	<ul style="list-style-type: none"> • Type Reset required; select Clear run timer.
*OLI	ASD overload — load requirement in excess of the capability of the ASD.	<ul style="list-style-type: none"> • The carrier frequency is too high. • An excessive load. • Acceleration time is too short. • DC damping rate is set too high. • The motor is starting into a spinning load after a momentary power failure. • The ASD is improperly matched to the application.
Note: * Reset ignored if active.		

EOI Display	Alarm Description	Possible Causes
OLM	Motor overload — Load requirement in excess of the capability of the motor.	<ul style="list-style-type: none"> • V/f parameter improperly set. • Motor is locked. • Continuous operation at low speed. • The motor is improperly matched to the load.
OLST	Overload soft Stall active.	<ul style="list-style-type: none"> • Soft Stall Selection adjustment required (F017).
*OP	DC bus voltage exceeds specifications.	<ul style="list-style-type: none"> • ASD attempting to start into a spinning motor after a momentary power loss. • Incoming commercial power voltage level is above the specified range. • Decel time is too short. • Voltage spikes at the 3-phase input; install inductive filter. • Over-Voltage Stall feature is turned off. • System is regenerating. • Load instability. • Disable the Ridethrough function (F302).
OT	Over-torque — torque requirement in excess of the setting of F616 or F617 for a time longer than the setting of F618.	<ul style="list-style-type: none"> • ASD is not correctly matched to the application. • F616 or F617 setting is too low. • Obstructed load.
*POFF	Under-voltage condition at the 5, 15, or the 24 VDC supply.	<ul style="list-style-type: none"> • Defective Control board. • Excessive load on power supply. • Low input voltage.
POT	Pre-over-torque.	<ul style="list-style-type: none"> • A torque requirement by the load in excess of the setting of parameter F616 or F617 exists. • The ASD is improperly matched to the application. • The load is obstructed.
PTC	Optional thermal sensor threshold exceeded.	<ul style="list-style-type: none"> • The user-set thermal threshold setting of F646 has been exceeded.
UC	Under-current — output current of the ASD is below the level defined at F611.	<ul style="list-style-type: none"> • Disable detection at F610. • Parameter F611 adjustment required.
Note: * Reset ignored if active.		

Trip

A **Trip** is an ASD response to a **Fault** (though, **Fault** and **Trip** are sometimes used interchangeably). A **Trip** is a safety feature that terminates the ASD output and disables the ASD system from processing a Run command in the event that the ASD or a subsystem of the ASD is malfunctioning.

Listed in [Table 12](#) are **Faults** that may be displayed at the EOI and the potential causes. When a **Trip** is incurred the system displays the **Fault** screen. The **Fault** screen displays the active **Fault**.

Note: See FC90 of the Q9 ASD for the **Communications Error Code** number of the active fault.

The operating conditions at the time of the trip may be used to help determine the cause of the trip. Listed below are operating conditions that may be used to assist the operator in correcting the problem or that the ASD operator should be prepared to discuss when contacting Toshiba's Customer Support for assistance.

- What trip information is displayed?
- Is this a new installation?
- Has the system ever worked properly and what are the recent modifications (if any)?
- What is the ASD/Motor size?
- What is the CPU version and revision level?
- What is the EOI version?
- Does the ASD trip when accelerating, running, decelerating, or when not running?
- Does the ASD reach the commanded frequency?
- Does the ASD trip without the motor attached?
- Does ASD trip with an unloaded motor?

Table 12. Fault Codes.

EOI Display	Fault Description	Possible Cause
E-10	Over-voltage at an analog input terminal.	<ul style="list-style-type: none"> • Mis-wire at the ASD input terminals.
E-12	Open circuit at the shaft-mounted encoder.	<ul style="list-style-type: none"> • Encoder signal missing.
E-13	Over-speed error.	<ul style="list-style-type: none"> • Result of a motor speed that is greater than the commanded speed when using an encoder for speed control. • Improper encoder connection or setup information. • Defective encoder.
E-18	Loss of signal at an analog input terminal.	<ul style="list-style-type: none"> • V/I input terminal configured for operation but the voltage/current input is either missing or low. • Over-current at P24.
E-19	CPU communication error.	<ul style="list-style-type: none"> • Service call required.
E-20	Speed/torque/direction control signal transfer error.	<ul style="list-style-type: none"> • Service call required.
E-21	Stack overflow error.	<ul style="list-style-type: none"> • Service call required.
E-22	Improper input voltage level at discrete input terminal.	<ul style="list-style-type: none"> • Discrete input terminal configured for operation and the input activation voltage level is out of specification.
E-23	Expansion card option 1 hardware error.	<ul style="list-style-type: none"> • Service call required.
E-24	Expansion card option 2 hardware error.	<ul style="list-style-type: none"> • Service call required.
E-26	CPU fault.	<ul style="list-style-type: none"> • Service call required.
EEP1	EEPROM write error.	<ul style="list-style-type: none"> • Service call required.
EEP2	EEPROM read error during parameter initialization.	<ul style="list-style-type: none"> • Service call required.
EEP3	EEPROM read error during parameter initialization.	<ul style="list-style-type: none"> • Service call required.
EF1	Software-detected earth fault.	<ul style="list-style-type: none"> • Mis-wired ground. • Loose ground connection. • ASD setup improperly.
EF2	Hardware-detected earth fault.	<ul style="list-style-type: none"> • Mis-wired ground. • Loose ground connection.
<p>Note: The event that caused the Trip(s) must be corrected or must decrease to less than the threshold value required to cause the trip to allow for a Reset to be recognized. In the event of multiple active trips, the trip displayed will remain until all faults are corrected and cleared.</p>		

EOI Display	Fault Description	Possible Cause
Emergency Off	Emergency Off command received via keypad or remotely. Output signal from the ASD is terminated and a brake may be applied if so configured.	<ul style="list-style-type: none"> • Stop-Reset pressed twice at the EOI. • EOFF command received remotely. • ASD reset required. • Select stopping method at F603.
EPHI	Input phase loss (R, S, or T).	<ul style="list-style-type: none"> • Mis-wired input phase. • Loose input phase connection.
EPHO	Output phase loss (U, V, or W).	<ul style="list-style-type: none"> • Mis-wired output phase. • Loose output phase connection.
ERR2	RAM read error.	<ul style="list-style-type: none"> • Service call required.
ERR3	ROM read error.	<ul style="list-style-type: none"> • Service call required.
ERR4	CPU watch dog error or related error.	<ul style="list-style-type: none"> • Service call required.
ERR5	Serial communications time-out error.	<ul style="list-style-type: none"> • ASD setup/programmed improperly. • Incorrect option board being used. • Improperly connected cables.
ERR6	ASIC (gate array) error.	<ul style="list-style-type: none"> • Defective Gate Array or Gate Array malfunction. • Service call required.
ERR7	Current detection hardware error.	<ul style="list-style-type: none"> • Improper low-current detection level setting. • Motor (phase) is disconnected.
ERR8	Network option card error.	<ul style="list-style-type: none"> • Optional device malfunction. • Improper system settings (at ASD or optional device). • Loose or improper connection.
OC1/OC1P	Over-current during acceleration.	<ul style="list-style-type: none"> • V/f setting needs to be adjusted. • Restart from a momentary power outage. • The ASD is starting into a rotating motor. • ASD/Motor not properly matched. • Phase-to-phase short (U, V, or W). • Accel time too short. • Voltage Boost setting is too high. • Motor/machine jammed. • Mechanical brake engaged while the ASD is running. • ASD current exceeds 320% or 340% of the rated FLA on ASDs that are greater than 100 HP or that are 100 HP or less, respectively, during acceleration.

EOI Display	Fault Description	Possible Cause
OC2/OC2P	Over-current during deceleration.	<ul style="list-style-type: none"> • Phase-to-phase short (U, V, or W). • Deceleration time is too short. • Motor/machine jammed. • Mechanical brake engaged while the ASD is running. • ASD current exceeds 320% or 340% of the rated FLA on ASDs that are greater than 100 HP or that are 100 HP or less, respectively, during acceleration.
OC3/OC3P	Over-current during run.	<ul style="list-style-type: none"> • ASD/Motor Load not properly matched. • Load fluctuations. • ASD is operating at an elevated temperature. • ASD current exceeds 320% or 340% of the rated FLA on ASDs that are greater than 100 HP or that are 100 HP or less, respectively, during acceleration.
OCA1	Over-current at U phase IGBT.	<ul style="list-style-type: none"> • Low impedance at the U phase.
OCA2	Over-current at V phase IGBT.	<ul style="list-style-type: none"> • Low impedance at the V phase.
OCA3	Over-current at W phase IGBT.	<ul style="list-style-type: none"> • Low impedance at the W phase.
OCL	Output short circuit at U-V-W phases.	<ul style="list-style-type: none"> • The ASD is starting into a rotating motor. • ASD/Motor not properly matched. • Phase-to-phase short (U, V, or W). • Accel time too short. • Voltage Boost setting is too high. • Motor/machine jammed. • Mechanical brake engaged while the ASD is running. • Short Circuit Detection adjustment required (F613). • ASD current exceeds 320% or 340% of the rated FLA on ASDs that are greater than 100 HP or that are 100 HP or less, respectively, during acceleration.
OH	Over temperature error.	<ul style="list-style-type: none"> • Cooling fan inoperative. • Ventilation openings are obstructed. • Internal thermistor is disconnected.
<p>Note: <i>The event that caused the Trip(s) must be corrected or must decrease to less than the threshold value required to cause the trip to allow for a Reset to be recognized. In the event of multiple active trips, the trip displayed will remain until all faults are corrected and cleared.</i></p>		


EOI Display	Fault Description	Possible Cause
OH2	Over temperature error at PTC1 or PTC2 (See F637 and F638).	<ul style="list-style-type: none"> Over-temperature condition detected by option board.
OL1	ASD overload error.	<ul style="list-style-type: none"> Acceleration time is too short. DC Injection current is too high. V/f setting needs to be adjusted. Motor running during restart. ASD or the motor is improperly matched to the application.
OL2	Motor overload error.	<ul style="list-style-type: none"> V/f setting needs to be adjusted. Motor is locked. Continuous operation at low speed. Load requirement exceeds ability of the motor. Startup frequency setting adjustment required.
OP1	Over-voltage during acceleration error.	<ul style="list-style-type: none"> Motor running during restart.
OP2	Over-voltage during deceleration error.	<ul style="list-style-type: none"> Deceleration time is too short. Stall protection is disabled. 3-phase input voltage is out of specification. Input reactance required.
OP3	Over-voltage error during Run.	<ul style="list-style-type: none"> Load fluctuations. 3-Phase input voltage out of specification.
OT	Over-torque error.	<ul style="list-style-type: none"> A torque requirement by the load in excess of the setting of parameter F616 or F617 for a time longer than the setting of parameter F618. The ASD is improperly matched to the application. The load is obstructed.
SOUT	Permanent magnet motor pull out trip.	<ul style="list-style-type: none"> Service call required.
UC	Low-Current error.	<ul style="list-style-type: none"> Improper low-current detection level setting.
UP1	Main power under-voltage.	<ul style="list-style-type: none"> 3-phase input voltage low. Defective control board. Excessive load on the power supply. Under-Voltage/Ridethrough settings require adjustment.

Enclosure Dimensions

The part numbering convention and the enclosure dimensions for the available models (typeforms) are listed below.

Use the part numbering convention to identify the ASD typeform and for placing orders.

Q9 Part Numbering Convention.

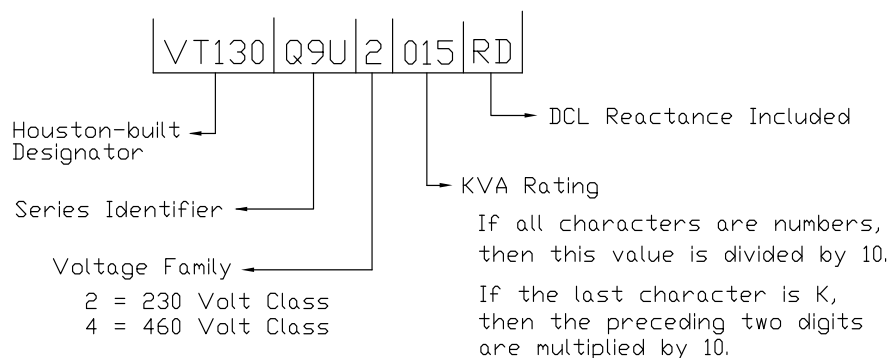

Note: *The Type 1 enclosed versions of these drives meet or exceed the specification **UL 50-1995, the Standard for Heating and Cooling Equipment**, and complies with the applicable requirements for installation in a compartment handling conditioned air.*

Note: *All Toshiba ASD enclosures carry an IP20 rating.*

Enclosure Dimensions

Table 13. 230-Volt Q9 ASD Systems.

Frame	ASD HP Rating	Model No. VT130Q9U	Enclosure Figure Number	A Width (in/mm)	B Height (in/mm)	C Depth (in/mm)	Mounting Hole Dimensions (in/mm)							
							D	E	F	G	H	R1	R2	
2	1	2015	Figure 27	5.1/130	10.0/254	6.0/152	8.7/220	4.5/114	N/A					
	2	2025												
3	3	2035		6.1/155	11.1/281	6.5/164	9.8/249	5.4/138					0.098/2.5	0.217/5.5
	5	2055												
4	7.5	2080		6.9/175	12.6/320	7.6/194	11.1/283	6.2/158					0.236/6.0	
5A	10	2110		8.3/210										
5B	15	2160		9.1/230	16.7/425	7.5/191	15.2/386	8.3/210					0.118/3.0	0.276/7.0
	20	2220												
6	25	2270		Figure 28	9.4/240	16.5/420	8.3/212	15.9/403					8.1/206	0.295/7.5
	30	2330												
7B	40	2400	12.6/320		21.7/550	9.5/242	20.7/525	11.0/280	0.177/4.5	0.394/10				
	50	2500												
	60	2600												
9	75	2750	Figure 30		12.2/310	26.7/680	14.6/370	25.6/650	9.8/250	0.224/5.7	0.472/12			
	100	210K												
10	125	212K			13.8/350	30.8/782	29.8/758	11.7/298						
9	75	2750RD			12.2/310	36.2/920	25.6/650	9.8/250	5.9/150	3.0/75	9.5/240			
	100	210KRD												
10	125	212KRD		13.8/350	40.2/1022	29.8/758	11.7/298	2.8/72						

RD suffix = DCL included.

Table 14. 460-Volt Q9 ASD Systems.

Frame	ASD HP Rating	Model Number VT130Q9U	Enclosure Figure Number	A Width (in/mm)	B Height (in/mm)	C Depth (in/mm)	Mounting Hole Dimensions (in/mm)										
							D	E	F	G	H	R1	R2				
2	1	4015	Figure 27	5.1/130	10.0/254	6.0/152	8.7/220	4.5/114	N/A			0.098/2.5	0.217/5.5				
	2	4025															
	3	4035															
3	5	4055		6.1/155	11.1/281	6.5/164	9.8/249	5.4/138									
	7.5	4080															
4	10	4110		6.9/175	12.6/320	7.6/194	11.1/283	6.2/158						7.5/190			
5A	15	4160		8.3/210													
	20	4220															
5B	25	4270		Figure 28	9.1/230	16.7/425	7.5/191	15.2/386						8.3/210	0.118/3.0	0.276/7.0	
	30	4330															
6	40	4400	Figure 29	9.4/240	16.5/420	8.3/212	15.9/403	8.1/206	0.295/7.5								
7A	50	4500			21.7/550	9.5/242	20.8/529										
	60	4600															
8	75	4750	Figure 30	12.6/320	24.8/630	11.4/290	23.8/605	11.0/280	0.177/4.5	0.394/10							
	100	410K															
	125	412K															
9	150	*415K	Figure 30	12.2/310	26.8/680	14.6/370	25.6/650	9.8/250	5.9/150	3.0/75	9.5/240	0.224/5.7	0.472/12				
10	200	*420K		13.0/350	30.8/782		29.8/758	11.7/298									
11	250	*425K		13.8/334	37.4/950		36.2/920	13.8/350						21.3/540			
12	300	*430K		16.9/430													
	350	*435K															
13	400	*440K		23.0/585													
9	150	415KRD		12.2/310	26.8/680		25.6/650	9.8/250						5.9/150	3.0/75	9.5/240	
10	200	420KRD		13.0/350	30.8/782		29.8/758	11.7/298									2.8/72
11	250	425KRD		13.8/334	37.4/950		36.2/920	13.8/350									21.3/540
12	300	430KRD		16.9/430													
	350	435KRD															
13	400	440KRD	23.0/585														

* = Reactance NOT included; but, required (ACL or DCL).

RD suffix = DCL included.

Figure 27. See Table 13 and 14 for Actual Dimensions.

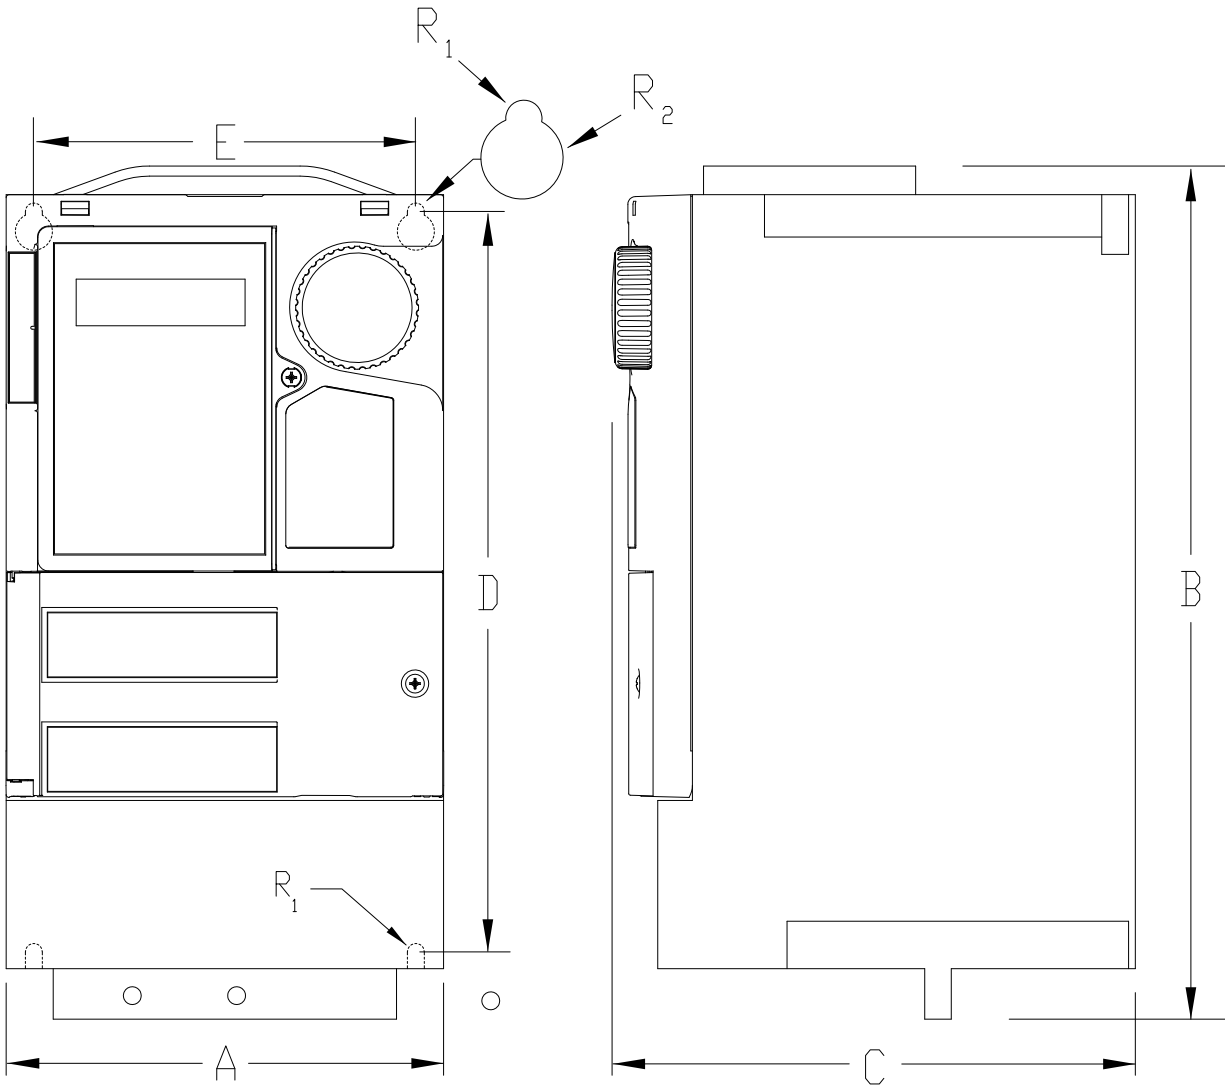


Figure 28. See Table 13 and 14 for Actual Dimensions.

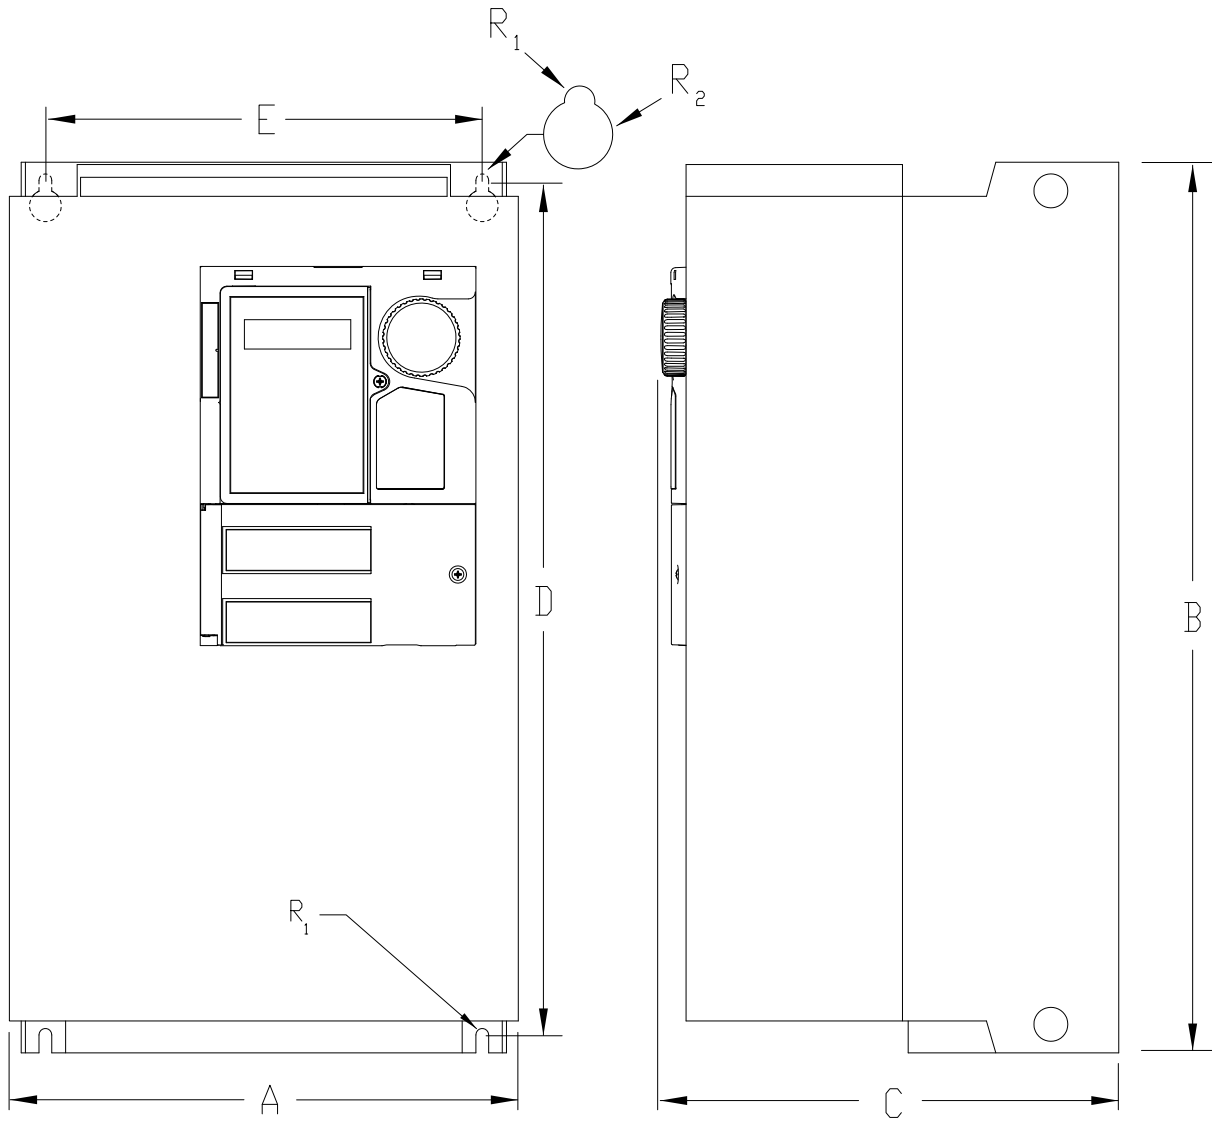


Figure 29. See Table 14 for Actual Dimensions.


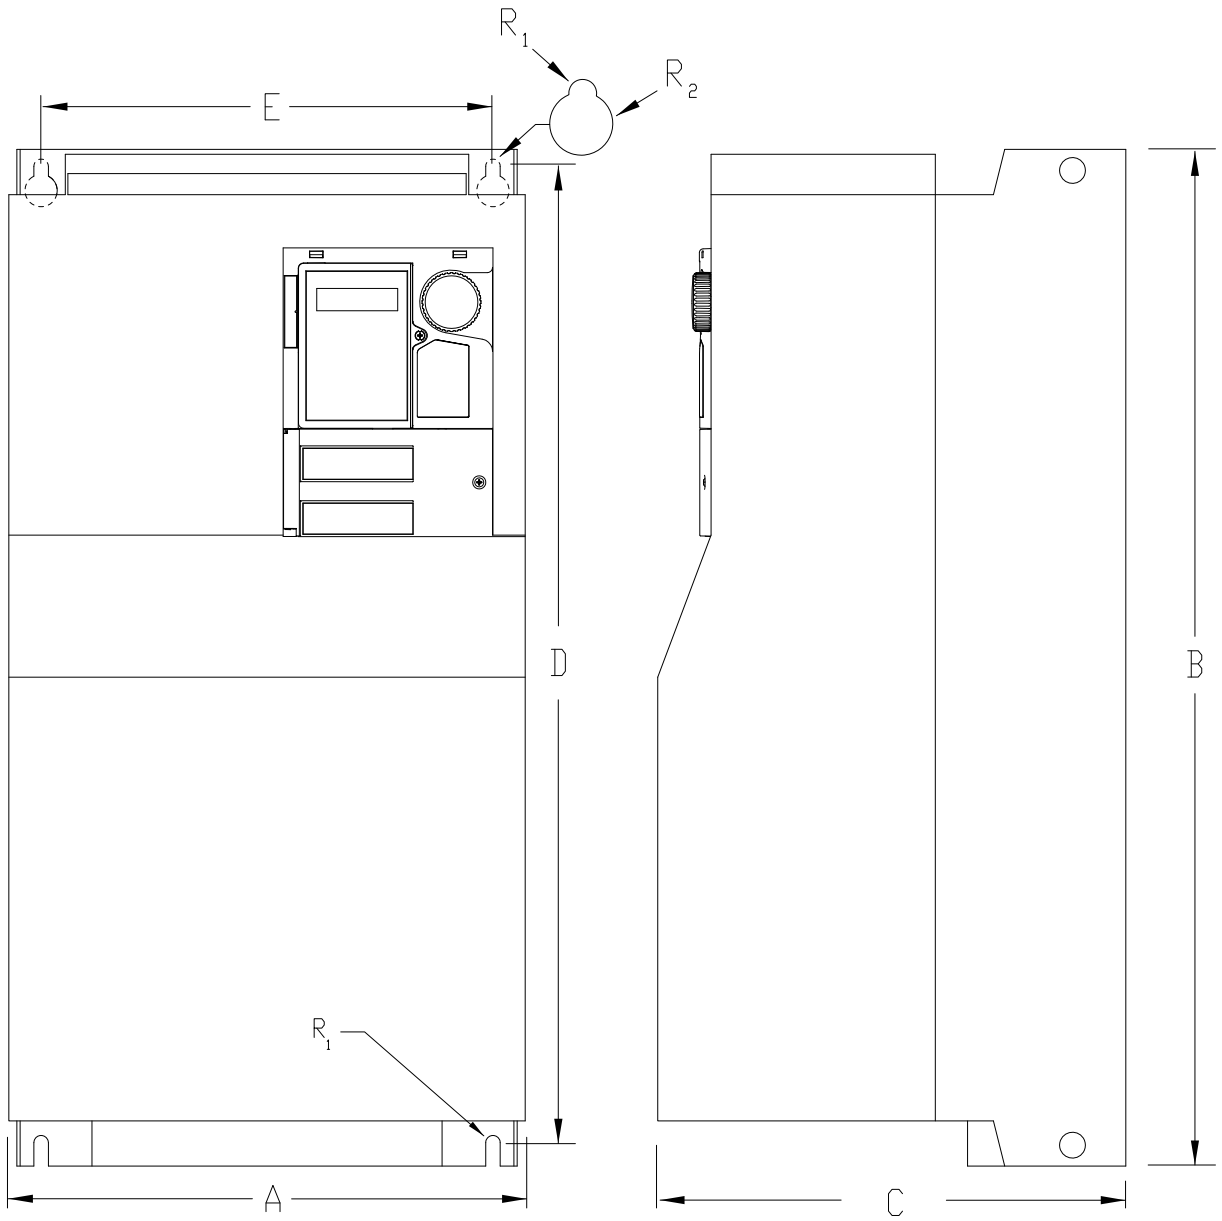


Figure 30. See Table 13 and 14 for Actual Dimensions.

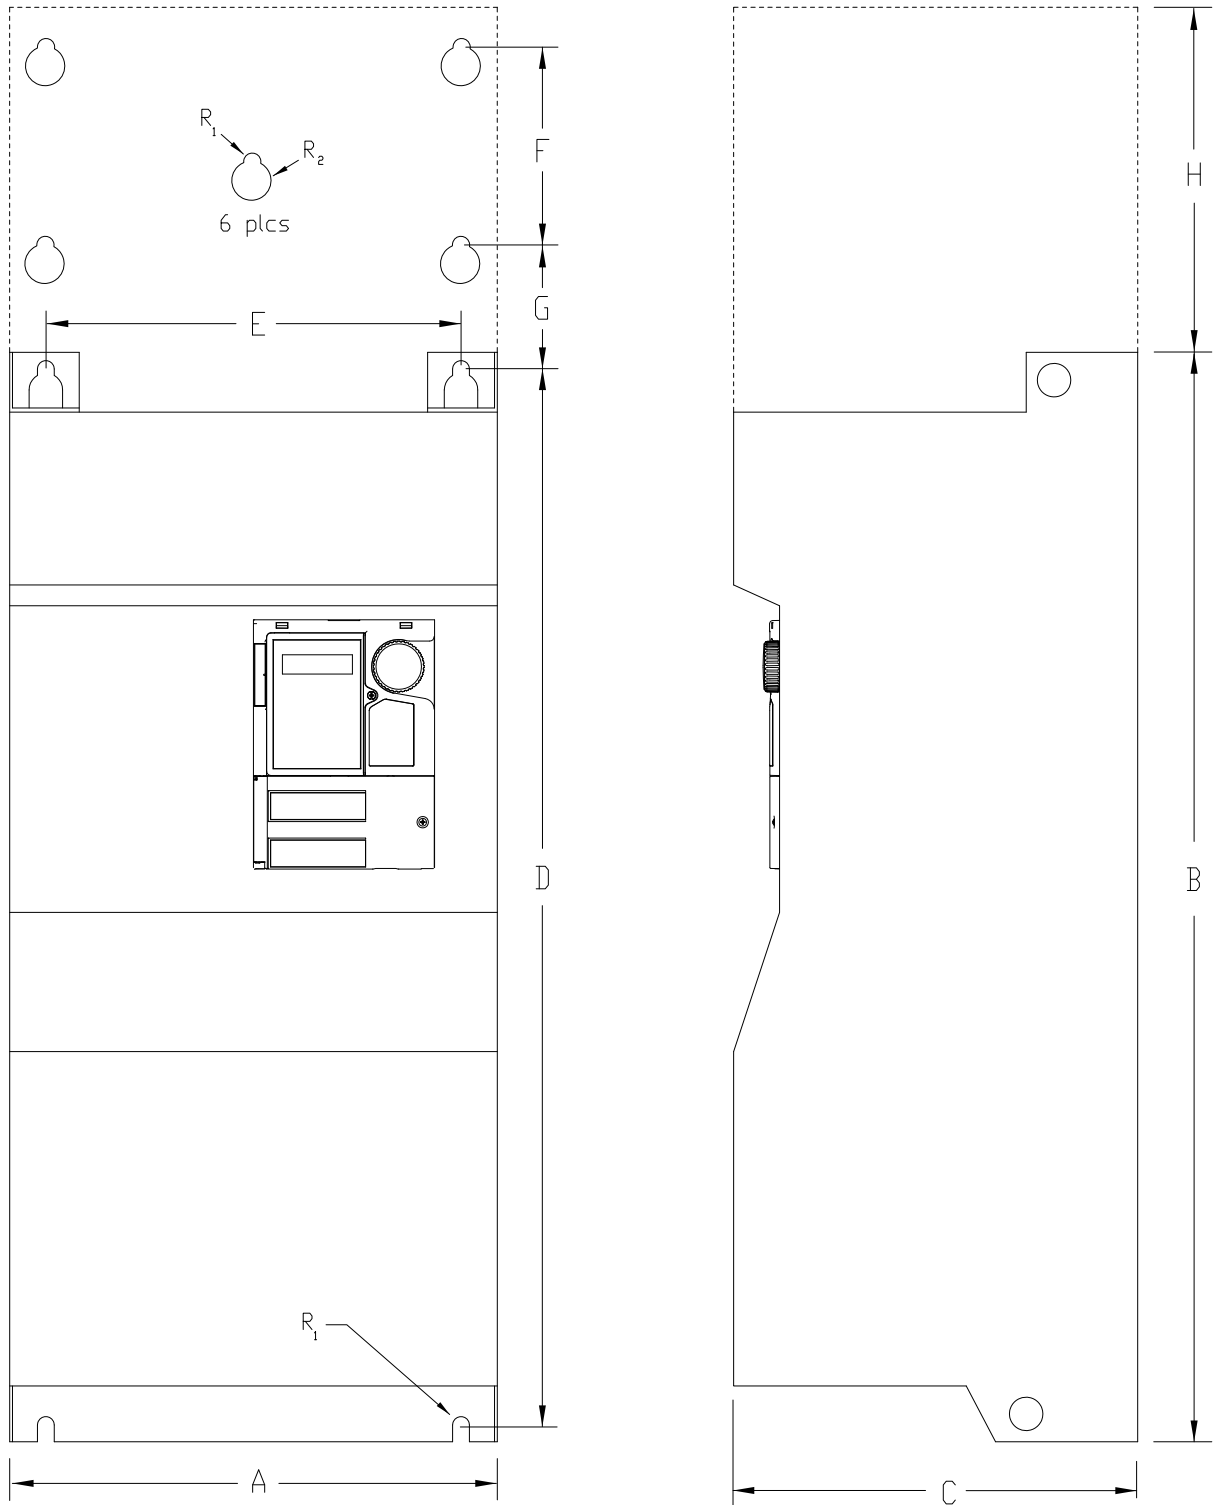

Current/Voltage Specifications

Table 15. 230-Volt UL Type-1/IP-20 Chassis Standard Ratings Table.

Model Number VT130Q9U	100% Output Current Continuous	Overload Current 110% for 60 Seconds	Input Voltage 3-Ph 50/60 ±2 Hz	Output Voltage 3-Ph Variable Frequency	Typical Motor HP
2010	3.7 A	4.1 A	200–240 VAC (±10%)	Input Voltage Level (Max.)	0.75
2015	4.8 A	5.3 A			1.0
2025	7.8 A	8.6 A			2.0
2035	11.0 A	12.1 A			3.0
2055	17.5 A	19.3 A			5.0
2080	25.3 A	27.8 A			7.5
2110	32.2 A	35.4 A			10
2160	48.3 A	53.1 A			15
2220	62.1 A	68.3 A			20
2270	78.2 A	86.0 A			25
2330	92.0 A	101 A			30
2400	120 A	132 A			40
2500	150 A	165 A			50
2600	177 A	195 A			60

Table 16. 460-Volt UL Type-1/IP-20 Chassis Standard Ratings Table.

Model Number VT130Q9U	100% Output Current Continuous	Overload Current 110% for 60 Seconds	Input Voltage 3-Ph 50/60 ±2 Hz	Output Voltage 3-Ph Variable Frequency	Typical Motor HP
4015	2.1 A	2.3 A	380 – 480 VAC (±10%)	Input Voltage Level (Max.)	1.0
4025	3.4 A	3.7 A			2.0
4035	4.8 A	5.3 A			3.0
4055	7.6 A	8.4 A			5.0
4080	11.0 A	12.1 A			7.5
4110	14.0 A	15.4 A			10
4160	21.0 A	23.1 A			15
4220	27.0 A	29.7 A			20
4270	34.0 A	37.4 A			25
4330	40.0 A	44.0 A			30
4400	52.0 A	57.2 A			40
4500	65.0 A	71.5 A			50
4600	77.0 A	84.7 A			60
4750	96.0 A	106 A			75
410K	124 A	136 A			100
412K	156 A	172 A			125
415K	180 A	198 A			150
420K	240 A	264 A			200
425K	302 A	332 A			250
430K	361 A	397 A			300
435K	414 A	455 A	350		
440K	477 A	525 A	400		

Cable/Terminal Specifications

Installation should conform to the 2008 National Electrical Code Article 110 (NEC) (Requirements for Electrical Installations), all regulations of the Occupational Safety and Health Administration, and any other applicable national, regional, or industry codes and standards.

Note: The following ratings are guidelines and shall not be the sole determining factor of the lug or wire size used with the Q9 ASD. Application-specific applicables, wire insulation type, conductor material, and local and regional regulations are but a few of the considerations when selecting the actual lug and wire type to be used with the Q9 ASD.

Note: Cable/Terminal specifications are based on the rated current of the Q9 ASD and **Do Not** include the 10% Service Factor.

Note: Use only 75° C copper wire/cable for motor and power connections.

Table 17. 230-Volt Q9 ASD Cable/Terminal/Torque Specifications.

Model Number VT130Q9U	Wire/Cable Size		Lug Size Range		Terminal Board Wire Size	Torque		
	AWG or kcmil							
	Input/Output Power		Wire-Size/Lug-Capacity for Input/Output Power		In-Lbs./N·m			
	Recommended	Maximum	3Ø-Input	3Ø-Output	TB1 – 4 Terminals	3Ø-Input	3Ø-Output	
2010	14	10	14 to 10		20 (3-core shield) Torque to 5.3/0.6	12.4/1.4		
2015	14	10						
2025	14	10						
2035	14	10						
2055	10	10						
2080	8	8	12 to 8			26.6/3		
2110	8	8	10 to 4					
2160	6	3	8 to 2				47.8/5.4	
2220	4	3						
2270	3	3	4 to 1/0				212/24	
2330	2	2						
2400	1/0	4/0	2 to 300			360/41		
2500	2/0	4/0						
2600	4/0	4/0						

Table 18. 460-Volt Q9 ASD Cable/Terminal/Torque Specifications.

Model Number VT130Q9U	Wire/Cable Size		Lug Size Range		Terminal Board Wire Size	Torque	
	AWG or kcmil						
	Input/Output Power		Wire-Size/Lug-Capacity for Input/Output Power		In-Lbs./N·m		
	Recommended	Maximum	3Ø-Input	3Ø-Output	TB1 – 4 Terminals	3Ø-Input	3Ø-Output
4015	14	10	14 to 10		20 (3-core shield) Torque to 5.3/0.6	12.4/1.4	
4025	14	10					
4035	14	10					
4055	14	10					
4080	14	10					
4110	12	8	12 to 8			26.6/3	
4160	8	4	10 to 4				
4220	8	4					
4270	6	3	8 to 2			47.8/5.4	
4330	6	3					
4400	6	2	4 to 1/0			212/24	
4500	4	2					
4600	3	2					
4750	1	4/0	2 to 300			360/41	
410K	1/0	4/0					
412K	3/0	4/0					
415K	*1	*4/0	6 to 250			212/24	
420K	*2/0	*250					
425K	*4/0	*250					
430K	*300	*350	4 to 350			360/41	
435K	*350	*350					
440K	**250	**350					

Note: (*) Indicates that the item is one of a set of two (listed type) parallel cables.

Note: (**) Indicates that the item is one of a set of three (listed type) parallel cables.

Short Circuit Protection Recommendations

Table 19. 230/240 and 400/480-Volt ASD Recommended Circuit Breaker Selection.

Model Number VT130Q9U	HP	Continuous Output Current (Amps)	Circuit Breaker Part Number
2010	0.75	3.7	Contact Toshiba Customer Service
2015	1.0	4.8	Contact Toshiba Customer Service
2025	2.0	7.8	Contact Toshiba Customer Service
2035	3.0	11.0	HLL36025
2055	5.0	17.5	HLL36025
2080	7.5	25.3	HLL36040
2110	10	32.2	HLL36050
2160	15	48.3	HLL36070
2220	20	62.1	HLL36090
2270	25	78.2	HLL36100
2330	30	92.0	HLL36100
2400	40	120	HLL36125
2500	50	150	HLL36150
2600	60	177	JLL36200
4015	1.0	2.1	Contact Toshiba Customer Service
4025	2.0	3.4	Contact Toshiba Customer Service
4035	3.0	4.8	Contact Toshiba Customer Service
4055	5.0	7.6	HLL36025
4080	7.5	11	HLL36040
4110	10	14	HLL36050
4160	15	21	HLL36070
4220	20	27	HLL36090
4270	25	34	HLL36100
4330	30	40	HLL36100
4400	40	52	HLL36125
4500	50	65	HLL36150
4600	60	77	JLL36200
4750	75	96	JLL36225
410K	100	124	JLL36250
412K	125	156	LIL36300
415K	150	180	LIL36300
420K	200	240	LIL36400
425K	250	302	LIL36400
430K	300	361	Contact Toshiba Customer Service
435K	350	414	Contact Toshiba Customer Service
440K	400	477	Contact Toshiba Customer Service

Index

Numerics

0 Hz Command Output, 100
0 Hz Dead Band Signal, 98

A

Abnormal Speed Lower Band, 134
Abnormal Speed Time, 134
Abnormal Speed Upper Band, 134
Acc/Dec Pattern 1, 128
Acc/Dec Pattern 2, 129
Accel/Decel Switching Frequency 1, 129
Acceleration, 63
Acceleration Time 1, 41, 63
Acceleration Time 2, 127
Adding Input Selection, 140
AI2, 70
AI2 (Option V/I) Input Bias, 126
AI2 (Option V/I) Input Gain, 127
Alarm, 196
Alarms, 194
Always ON 1 Terminal 1, 71
AM, 19, 21
AM Bias Adjustment, 145
AM Output, 40
AM Output Gradient Characteristic, 144
AM Output Terminal Assignment, 141
AM Terminal Adjustment, 141
AM/FM Output, 23
Analog Function Assigned Object 11, 178
Analog Function Assigned Object 21, 179
Analog Input Filter, 86
Analog Input Function Target 11, 178
Analog Input Function Target 21, 178
Annual Average Ambient Temperature, 136
ASD Characteristics, 11
ASD Input Phase Failure Detection, 131
ASD Load, 39
ASD Number, 153
ASD Operation at Disconnect, 161
ASD Overload, 39, 135
ASD Switching Wait Time, 116
ASD/Motor Connection Diagram, 15
ASD-to-ASD Communications (2-Wire), 155, 158
Automatic Acceleration/Deceleration, 59
Automatic Function Selection, 68

Automatic Torque Boost, 59
Autotuning, 10
Autotuning 2, 121
Autotuning Control, 120

B

Backup Option Selection, 139
Base Frequency 1, 64
Base Frequency 2, 78
Base Frequency Voltage 1, 122
Base Frequency Voltage 2, 78
Baud Rate (2-Wire RS485), 152
Baud Rate (4-Wire RS485), 157
Bezel Mounting Hardware, 29
Block Read Data 1, 163
Block Write Data 1, 162
Block Write Data 2, 163
Braking Resistance Overload Time (10x Rated Torque), 137
Breaker Part Number, 215

C

Cable/Terminal Specifications, 213
Carrier Frequency Control Mode, 113
CC, 19
CCA, 19
Change Step Selection 1, 147
Change Step Selection 2, 147
Charge LED, 9, 14
Circuit Breaker Configuration, 13
CMOD/FMOD Change Lockout, 149
Command Control Selections, 35
Command Mode, 60
Command Mode and Frequency Mode Control, 32
Commercial Power Switching Freq. Hold Time, 116
Commercial Power Switching Wait Time, 116
Communications Frequency 1, 156
Communications Frequency 2, 157
Communications Option (DeviceNet/Profibus) Setting 1, 158
Communications Option (DeviceNet/Profibus) Setting 2, 159
Communications Option (DeviceNet/Profibus) Setting 8, 160

Communications Option Speed Switch Monitor DeviceNet/CC-Link, 162
 Communications Option Station Address Monitor, 161
 Communications Reference 1, 156
 Communications Reference 2, 156
 Communications Reference Selection, 155
 Communications Time Out Time (2- and 4-Wire RS485), 153
 Communications Time-Out Action (2- and 4-Wire RS485), 154
 Compensation Frequency, 39
 Connecting the ASD, 14
 Connection Diagram, 24
 Contrast, 152
 Cooling Fan Control, 134
 Current/Voltage, 211
 Current/Voltage Specifications, 211

D

DBR Function, 8
 DC Bus Voltage, 39
 DC Injection Braking Current, 99
 DC Injection Braking Start Frequency, 99
 DC Injection Braking Time, 99
 DC Injection On During Direction Change, 99
 Decel Time 1, 41
 Deceleration Time 1, 63
 Deceleration Time 2, 127
 Default Setting Changes, 57
 Direction, 39
 Direction Priority, 70
 Disable Forward Run/Reverse Run, 113
 Disconnection Detection Extended Time, 161
 Discrete Input, 19, 23
 Discrete Input Terminals, 39, 40
 Discrete Output, 19
 Display Bias, 147
 Display Units for Voltage and Current, 146
 Disposal, 3
 Drooping, 114
 Drooping Gain, 114
 Drooping Insensitive Torque, 114
 Drooping Output Filter, 115
 Dynamic Braking, 8, 111
 Dynamic Braking Capacity, 112
 Dynamic Braking Resistance, 112

E

Electronic Operator Interface, 26
 Electronic Operator Interface Features, 27

Emergency Off, 27
 Emergency Off DC Injection Time, 131
 Emergency Off Mode Selection, 130
 Enclosure Dimensions, 204
 End Frequency, 98
 EOI Features, 27
 EOI Operation, 26
 EOI Remote Mounting, 26
 Equipment Inspection, 3
 Exciting Strengthening Coefficient, 122
 Ext. Comm. Cfg. 1, 164
 Ext. Comm. Cfg. 2, 165
 Ext. Comm. Cfg. 3, 165
 Ext. Comm. Cfg. 4, 166
 Ext. Comm. Cfg. 5 – 8, 166
 Extender Cables, 29

F

F, 19, 20
 F Terminal, 71
 Fan Control, 134
 Fault, 40, 194
 Fault Relay, 23
 Faults, 194
 Feedback Reach Detection Band, 119
 Feedback Selection, 117
 FL Terminal, 75
 FLA, 19, 22
 FLB, 19, 22
 FLC, 19, 22
 FM, 19, 21
 FM Bias Adjustment, 144
 FM Output, 40
 FM Output Filtering, 144
 FM Output Gradient Characteristic, 144
 FM Output Terminal Adjustment, 61
 FM Output Terminal Assignment, 61
 FM Voltage/Current Output Switching, 143
 FMODE, 82
 Forced Fire Speed, 139
 Forward/Reverse Run Selection, 62
 FP, 19, 21, 45
 FP Output, 23
 FP Terminal Assignment, 143
 FP Terminal Scaling, 143
 Free Notes, 164
 Freq Mode 1/Freq Mode 2 Switching Frequency, 86
 Freq Mode 2 Switching Frequency, 86
 Frequency at Trip, 39
 Frequency Command Mode, 37
 Frequency Command Screen, 57
 Frequency Control Selections, 35

Frequency Display Multiplier, 146
 Frequency Mode 1, 60
 Frequency Mode 2, 86
 Frequency Mode Control, 32
 Frequency Priority Selection, 82
 Frequency Reference, 39
 Frequency Setting, 37
 Fundamental 1, 42
 Fundamental 2, 43

G

General Safety Information, 1
 Grounding Capacitor Switch, 14

H

Handling and Storage, 3

I

I, 40
 I/O and Control, 19
 I/O Circuit Configurations, 23
 IICC, 19, 24, 83, 85
 Important Notice, 2
 Initial UP/DOWN Frequency, 104
 Initial UP/DOWN Frequency Rewriting, 104
 Input Function Command 1, 166
 Input Function Command 2, 167
 Input Function Target 1, 166
 Input Function Target 2, 167
 Input Function Target 3, 167
 Input kWh, 39
 Input Phase Failure Detection, 131
 Input Power, 39
 Input Terminal Priority, 70
 Installation and Connections, 12
 Installation Notes, 12
 Installation Precautions, 4

J

Jog Run Frequency, 101
 Jog Stop Control, 102
 Jump Frequency 1, 105
 Jump Frequency 1 Bandwidth, 106
 Jump Frequency 2, 106
 Jump Frequency 2 Bandwidth, 106
 Jump Frequency 3, 106
 Jump Frequency 3 Bandwidth, 106

K

Keypad ASD-MTG-KIT Mounting Dimensions, 31
 Keypad Installation Precautions, 29
 Keypad Remote Mounting, 29
 Keypad Remote Mounting Using the ASD-MTG-KIT, 31
 Keypad Remote Mounting w/o the ASD-MTG-KIT, 30
 kWh Memory Selection, 152
 kWh Memory Set, 151

L

LCD Contrast, 45
 LCD Screen, 27
 Lead Length Specifications, 18
 LI1 Terminal, 72
 LI2 Terminal, 73
 LI3 Terminal, 73
 LI4 Terminal, 73
 LI5 Terminal, 74
 LI6 Terminal, 74
 LI7 Terminal, 74
 LI8 Terminal, 75
 Light Load Conditions, 11
 Linear Acceleration, 128
 Load Moment of Inertia 1, 124
 Local Mode, 27
 Local/Remote Key, 27
 Lockout All Keys, 149
 Low Output Disable Time, 100
 Low Speed Operation, 10
 Low-Current Detection Hysteresis Width, 132
 Low-Current Detection Threshold, 132
 Low-Current Trip, 132
 Low-Current Trip Threshold Time, 132
 Lower-Limit Frequency, 41, 64
 Low-Speed Signal Output Frequency, 69
 Lug Size, 213, 214

M

Manual Torque Boost 1, 65
 Manual Torque Boost 2, 78
 Maximum Frequency, 63
 Menu Navigation, 37
 Menu Options, 37
 Mode Key, 27
 MON 1 Bias Adjustment, 145
 MON 1 Output Gradient Characteristic, 145
 MON 1 Voltage/Current Output Switching, 145
 MON 2 Bias Adjustment, 146
 MON 2 Output Gradient Characteristic, 146

MON 2 Voltage/Current Output Switching, 145
 MON1 Terminal Adjustment, 142
 MON1 Terminal Meter Selection, 142
 MON2 Terminal Meter Adjustment, 143
 MON2 Terminal Meter Assignment, 142
 Monitor, 56
 Monitor Mode, 39
 Monitor Output Function 11, 179
 Monitor Output Function 21, 180
 Monitor Output Function 31, 180
 Monitor Output Function 41, 181
 Monitor Output Function Command 11, 179
 Monitor Output Function Command 21, 180
 Monitor Output Function Command 31, 181
 Monitor Output Function Command 41, 181
 Motor Braking, 11
 Motor Characteristics, 10
 Motor Connection Diagram, 15
 Motor Constant 1, 122
 Motor Constant 2, 122
 Motor Constant 3, 122
 Motor Constant 4, 122
 Motor Load, 39
 Motor Overload Protection Level 2, 79
 Motor Overload Real, 39
 Motor Rated Capacity, 121
 Motor Rated Current, 121
 Motor Rated RPM, 121
 Motor Slip Gain, 121
 Motor/Load Combinations, 11
 Mounting the ASD, 13
 Multiplying Input Selection, 141
 My Function Count Data, 173
 My Function Frequency Data, 171
 My Function Percent Data, 170
 My Function Selection, 183
 My Function Time Data, 172

N

Network Option Reset Settings, 166
 Number of PG Input Phases, 120
 Number of PG Input Pulses, 119
 Number of Poles of Motor, 162
 Number of Retries, 110

O

O1A/B, 19
 O2A/B, 21
 Operation (Local), 57
 Operation Above 60 Hz, 10

Operational and Maintenance Precautions, 9
 Option V/I Terminal Voltage/Current Selection, 70
 OTF Switching, 108
 OUT1, 19, 21
 Out1 Out2 FL, 39, 40
 OUT1 Terminal, 75
 OUT1/OUT2 Output, 23
 OUT2, 21
 OUT2 Terminal, 75
 OUT3 Terminal, 76
 OUT4 Terminal, 76
 OUT5 Terminal, 77
 OUT6 Terminal, 77
 Output Current, 39
 Output Disconnect, 8
 Output Function Assigned, 167
 Output kWh, 39
 Output Phase Failure Detection, 131
 Output Power, 39
 Output Terminal 10 (R3) Function, 77
 Output Terminal 11 (R4) Function, 78
 Output Terminals, 44, 45
 Output Voltage, 39
 Over-Current Stall Level, 130
 Overload Protection, 10
 Overload Reduction Starting Frequency, 131
 Override Operation, 33
 Over-Torque Detection Hysteresis, 133
 Over-Torque Detection Level (Negative Torque), 133
 Over-Torque Detection Level (Positive Torque), 133
 Over-Torque Detection Time, 133
 Over-Torque Trip, 133
 Over-Voltage Stall Enable, 111
 Over-Voltage Stall Level, 135

P

P24, 21
 P24 Output, 23
 PA/+, 14
 Panel Emergency Off Lockout, 148
 Panel Frequency Lockout, 148
 Panel Operation Jog Mode, 102
 Panel Reset Lockout, 148
 Panel Stop Pattern, 148
 Parameter Write Lockout, 146
 Parity (2- and 4-Wire RS485), 153
 Past Trip 1, 40
 Past Trip 2, 40
 Past Trip 3, 40
 Past Trip 4, 40
 Permanent Magnet (PM) Motor Constant 1, 127
 Permanent Magnet (PM) Motor Constant 2, 127

Personnel Protection, 7
 PG Disconnection Detection, 120
 PG Reference 2, 97
 Phase Failure Detection, 131
 PID Control Switching, 116
 PID Control Wait Time, 118
 PID Deviation Lower-Limit, 118
 PID Deviation Upper-Limit, 117
 PID Feedback, 39
 PID Feedback Delay Filter, 117
 PID Feedback Differential (D) Gain, 118
 PID Feedback Integral (I) Gain, 117
 PID Feedback Proportional (P) Gain, 117
 PID Feedback Selection, 117
 PID Output Lower-Limit, 119
 PID Output Upper-Limit, 118
 PID SETUP, 41
 PID Setup, 41
 PID Setup Mode, 38
 PM Motor, 127
 PO, 14
 Power Connections, 6, 14
 Power Factor Correction, 11
 Power Running Torque Limit, 123
 Power Running Torque Limit Level, 123
 Power Switching, 115
 Power Switching Frequency, 116
 PP, 19, 21
 PP Output, 23
 Preset Speed, 46
 Preset Speed 1, 66
 Preset Speed 10, 107
 Preset Speed 11, 107
 Preset Speed 12, 107
 Preset Speed 13, 107
 Preset Speed 14, 107
 Preset Speed 15, 108
 Preset Speed 2, 66
 Preset Speed 3, 67
 Preset Speed 4, 67
 Preset Speed 5, 67
 Preset Speed 6, 67
 Preset Speed 7, 67
 Preset Speed 8, 106
 Preset Speed 9, 107
 Preset Speed Operation Selection, 161
 Process Decreasing Rate, 119
 Process Increasing Rate, 119
 Process Lower-Limit, 118
 Process Upper-Limit, 118
 Program, 42
 Program Mode Menu Navigation, 41
 PTC Thermal Detection Disposition, 138
 PTC Thermal Detection Level, 138

PTC1 Thermal Selection, 136
 PTC2 Thermal Selection, 137
 Pulse Width Modulation, 10
 PWM Carrier Frequency, 108

Q

Q9 Part Numbering Convention, 204
 Qualified Personnel, 2

R

R, 19, 20
 R Terminal, 71
 R/L1, 14
 R1 Terminal, 76
 R2 Terminal, 77
 Random Mode, 113
 Regenerative Braking Torque Limit, 123
 Regenerative Braking Torque Limit Level, 124
 Remote Keypad Required Hardware, 29
 Remote Mode, 27
 Remote/Local OTF Switching, 108
 RES, 19, 20
 RES Terminal, 71
 Reset, 62
 Restart Wait Time, 138
 Retry, 110
 Ridethrough Mode, 109
 Ridethrough Time, 112
 Root Menu Items, 37
 Rotary Encoder, 27
 RR, 19, 21, 39
 RR Input, 23
 RR Input Bias, 125
 RR Input Gain, 125
 RS485 4-Wire Protocol Selection (TSB/ModBus), 158
 RS485 Protocol Selection, 155
 RS485 Send Wait Time (RS485 4-Wire), 157
 Run Frequency, 98
 Run Frequency Hysteresis, 98
 Run Key, 27
 Run Time, 39
 Run-Time Alarm Setting, 134
 Rush Relay Current Activation Time, 136
 RX, 21, 40
 RX Input, 23
 RX Input Bias, 125
 RX Input Gain, 126
 RX2, 40
 RX2 (A11) Input Bias, 126
 RX2 (A11) Input Gain, 126

S

S/L2, 14
 S1, 19, 20
 S1 Terminal, 72
 S2, 19, 20
 S2 Terminal, 72
 S3, 19, 20
 S3 Terminal, 72
 S4, 19, 20
 S4 Terminal, 72
 Safety Information, 1
 Search (For Default Setting Changes), 58
 Send Wait Time (2-Wire), 154
 Setup, 41
 Setup Mode, 37
 Shaft Stationary, 100
 Short Circuit Detection At Start, 132
 Short Circuit Protection, 215
 Sink, 22
 Soft Stall Selection, 65
 Source, 22
 S-Pattern 1, 128
 S-Pattern 2, 128
 Speed at 0% Drooping Gain, 114
 Speed at F320 Drooping Gain, 114
 Speed Loop Proportional Gain, 124
 Speed Loop Stabilization Coefficient, 124
 Speed Reach Detection Band, 69
 Speed Reach Frequency, 69
 Speed Search Selection, 108
 ST, 19, 20
 ST Terminal, 71
 Stall Level, 47
 Stall Prevention Factor 1, 123
 Startup and Test, 25
 Startup Frequency, 97
 Stepout Current Detection Level, 137
 Stepout Current Detection Time, 137
 Stop-Reset Key, 27
 SU+, 21
 Supply Voltage Correction, 112
 System Configuration and Menu Options, 37
 System Grounding, 16
 System Integration Precautions, 7
 System Operation, 57

T

T/L3, 14
 TB1, 22
 TB2, 22
 TB3, 22

TB4, 22
 Terminal Board, 12, 19, 22
 Terminal Descriptions, 20
 Torque Boost, 65
 Trace Cycle, 151
 Trace Data 1, 151
 Trace Data 2, 151
 Trace Data 3, 151
 Trace Data 4, 151
 Trace Selection, 150
 Trip Save at Power Down, 130
 Trips, 194
 Troubleshooting, 194
 Type Reset, 62

U

U/T1, 14
 UL 1995, 204
 Under-Torque at Constant Speed Disposition, 139
 Under-Torque Detection Time, 140
 Under-Torque Hysteresis, 140
 Under-Torque Level During Regeneration, 139
 Under-Torque Level While ASD-Driven, 139
 Under-Voltage Trip, 135
 UP/DOWN Frequency (down) Frequency Step, 104
 UP/DOWN Frequency (down) Response Time, 104
 UP/DOWN Frequency (up) Frequency Step, 104
 UP/DOWN Frequency (up) Response Time, 103
 Up/Down Frequency Operation, 105
 Upper Limit Frequency, 63
 Upper-Limit Frequency, 41
 User Notification codes, 195
 User Unit Type, 147
 User Units Selection, 69

V

V/f 5-Point Setting Frequency 1, 79
 V/f 5-Point Setting Frequency 2, 80
 V/f 5-Point Setting Frequency 3, 81
 V/f 5-Point Setting Frequency 4, 81
 V/f 5-Point Setting Frequency 5, 82
 V/f 5-Point Setting Voltage 1, 80
 V/f 5-Point Setting Voltage 2, 81
 V/f 5-Point Setting Voltage 3, 81
 V/f 5-Point Setting Voltage 4, 81
 V/f 5-Point Setting Voltage 5, 82
 V/f Pattern, 64
 V/I, 40
 V/I (I), 21
 V/I Frequency, 41

V/I Frequency 1, 83
V/I Frequency 2, 84
V/I Input, 23
V/I Input Bias, 124
V/I Input Broken-Wire Detection Level, 135, 138
V/I Input Gain, 125
V/I Input Point 1 Rate, 85
V/I Input Point 2 Rate, 85
V/I Reference, 41
V/I Speed Reference 1, 83
V/I Speed Reference 2, 84

V/T2, 14
Virtual Input Terminal 1 Selection, 182
Virtual Input Terminal 2 Selection, 182
Virtual Input Terminal 3 Selection, 182
Virtual Input Terminal 4 Selection, 182

W

W/T3, 14
Warranty Card, 2

TOSHIBA

TOSHIBA INTERNATIONAL CORPORATION

INDUSTRIAL DIVISION

13131 West Little York Road, Houston, TX 77041

TEL: (713) 466-0277 — FAX: (713) 937-9349

Printed in the U.S.A.