

**SIEMENS**

# SINAMICS

SINAMICS G130/G150

List Manual

Edition

07/2016



# SIEMENS

## SINAMICS

### SINAMICS G130/G150

#### List Manual

Valid for

Drive

SINAMICS

Firmware version

4.8

**Preface**

---

**Fundamental safety instructions**

**1**

**Parameters**

---

**2**

**Function diagrams**

---

**3**

**Faults and alarms**

---

**4**

**Appendix**

---

**A**

**Index**

---

## Legal information

### Warning concept

This manual contains information which you must observe to ensure your safety as well as to avoid material damage. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to equipment damage have no safety alert symbol. Depending on the hazard level, warnings are indicated in a descending order as follows:

 <b>DANGER</b>
indicates that death or serious injury <b>will</b> result if proper precautions are not taken.
 <b>WARNING</b>
indicates that death or serious injury <b>could</b> result if proper precautions are not taken.
 <b>CAUTION</b>
indicates that minor injury can result if proper precautions are not taken.
<b>NOTICE</b>
indicates that property damage can result if proper precautions are not taken.

If more than one level of danger is simultaneously applicable, the warning notice for the highest level is used. A notice warning of injury with a safety alert symbol may also include a warning relating to property damage.

### Qualified personnel

The product/system described in this documentation may only be operated by **personnel qualified** for the specific task in accordance with the relevant documentation for the specific task, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

 <b>WARNING</b>
Siemens products are only permitted to be used for the applications listed in the catalog and in the associated technical documentation. If third-party products and components are used, then they must be recommended or approved by Siemens. These products can only function correctly and safely if they are transported, stored, set up, mounted, installed, commissioned, operated and maintained correctly. The permissible ambient conditions must be adhered to. Notes in the associated documentation must be observed.

### Trademarks

All names identified with ® are registered trademarks of Siemens AG. Any other names used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of liability

We have checked the contents of this publication for consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. The information given in this document is reviewed at regular intervals and any corrections that might be necessary are made in the subsequent editions.

# Preface

## SINAMICS documentation

The SINAMICS documentation is structured according to the following categories:

- General documentation/catalogs
- Manufacturer/service documentation

## Additional information

Information on the following topics is available under the link:

- Ordering documentation / overview of documentation
- Additional links to download documents
- Using documentation online (browse and search in manuals/information).

<http://www.siemens.com/motioncontrol/docu>

## My Documentation Manager

Information on how to produce individual contents for your own machine documentation based on Siemens contents is available under the link:

<http://www.siemens.com/mdm>

## Training

Information about SITRAIN (Siemens Training on products, systems and solutions for automation) is available under the following link:

<http://www.siemens.com/sitrain>

## FAQs

You can find Frequently Asked Questions in the Service&Support pages under Product Support:

<http://support.automation.siemens.com>

## SINAMICS

You can find information on SINAMICS at:

<http://www.siemens.com/sinamics>

## Usage phases and their tools/documents (as an example)

Table V-1 Usage phases and the available tools/documents

Usage phase	Tools/documents
Orientation	SINAMICS G Sales Documentation
Planning/configuring	SIZER Engineering Tool Configuration Manuals, Motors
Deciding/ordering	SINAMICS G Catalogs
Installation/assembly	<ul style="list-style-type: none"> <li>• SINAMICS G150 Operating Instructions</li> <li>• SINAMICS G130 Operating Instructions</li> </ul>
Commissioning	<ul style="list-style-type: none"> <li>• STARTER Commissioning Tool</li> <li>• SINAMICS G150 Operating Instructions</li> <li>• SINAMICS G130 Operating Instructions</li> </ul>
Usage/operation	<ul style="list-style-type: none"> <li>• SINAMICS G150 Operating Instructions</li> <li>• SINAMICS G130 Operating Instructions</li> </ul>
Maintenance/servicing	<ul style="list-style-type: none"> <li>• SINAMICS G150 Operating Instructions</li> <li>• SINAMICS G130 Operating Instructions</li> </ul>

### Target group

This documentation addresses machine manufacturers, commissioning engineers, and service personnel who use SINAMICS.

### Benefits

This documentation contains comprehensive information about parameters, function diagrams and faults and alarms required to commission and service the system.

This manual should be used in addition to the other manuals and tools provided for the product.

## Standard scope

The scope of the functionality described in this document can differ from the scope of the functionality of the drive that is actually supplied.

- Other functions not described in this documentation might be able to be executed in the drive system. However, no claim can be made regarding the availability of these functions when the equipment is first supplied or in the event of servicing.
- Functions that are not available in a particular product version of the drive system may be described in the documentation. The functionalities of the supplied drive system should only be taken from the ordering documentation.
- Supplements or changes made by the machine manufacturer must be documented by the machine manufacturer.

For reasons of clarity, this documentation does not contain all of the detailed information on all of the product types. This documentation cannot take into consideration every conceivable type of installation, operation and service/maintenance.

## Search aids

The following aids are provided to help you locate information in this manual:

1. Table of contents
  - Table of contents for the complete manual (Page 9)
  - Table of contents for function diagrams (Page 1093)
2. List of abbreviations (Page 1945)
3. References (Page 1954)
4. Index (Page 1961)

## Technical Support

Country-specific telephone numbers for technical support are provided on the Internet at:

<http://www.siemens.com/automation/service&support>



# Table of contents

<b>1</b>	<b>Fundamental safety instructions</b> .....	11
1.1	General safety instructions .....	12
1.2	Industrial security .....	13
<b>2</b>	<b>Parameters</b> .....	15
2.1	Overview of parameters .....	16
2.1.1	Explanation of the parameter list .....	16
2.1.2	Number ranges of parameters .....	31
2.2	List of parameters .....	34
2.3	Parameters for data sets .....	1069
2.3.1	Parameters for command data sets (CDS) .....	1069
2.3.2	Parameters for drive data sets (DDS) .....	1071
2.3.3	Parameters for encoder data sets (EDS) .....	1079
2.3.4	Parameters for motor data sets (MDS) .....	1081
2.3.5	Parameters for power unit data sets (PDS) .....	1084
2.4	Parameters for write protection and know-how protection .....	1086
2.4.1	Parameters with "WRITE_NO_LOCK" .....	1086
2.4.2	Parameters with "KHP_WRITE_NO_LOCK" .....	1088
2.4.3	Parameters with "KHP_ACTIVE_READ" .....	1089
<b>3</b>	<b>Function diagrams</b> .....	1091
3.1	Table of contents .....	1093
3.2	Explanation of the function diagrams .....	1101
3.3	CU320-2 input/output terminals .....	1106
3.4	Control Unit communication .....	1114
3.5	PROFIenergy .....	1119
3.6	PROFIdrive .....	1122
3.7	Internal control/status words .....	1167
3.8	Sequence control .....	1180
3.9	Brake control .....	1183
3.10	Safety Integrated Basic Functions .....	1188
3.11	Safety Integrated Extended Functions .....	1196
3.12	Safety Integrated TM54F .....	1210
3.13	Safety Integrated PROFIsafe .....	1223
3.14	Setpoint channel .....	1226
3.15	Encoder evaluation .....	1236
3.16	Vector control .....	1240

3.17	Technology functions . . . . .	1271
3.18	Technology controller . . . . .	1278
3.19	Signals and monitoring functions . . . . .	1284
3.20	Diagnostics. . . . .	1296
3.21	Data sets . . . . .	1305
3.22	Basic Infeed . . . . .	1311
3.23	Terminal Board 30 (TB30) . . . . .	1319
3.24	Communication Board CAN10 (CBC10) . . . . .	1325
3.25	Terminal Module 31 (TM31) . . . . .	1332
3.26	Terminal Module 120 (TM120) . . . . .	1343
3.27	Terminal Module 150 (TM150) . . . . .	1346
3.28	Voltage Sensing Module (VSM) . . . . .	1350
3.29	Basic Operator Panel 20 (BOP20) . . . . .	1353
<b>4</b>	<b>Faults and alarms</b> . . . . .	<b>1355</b>
4.1	Overview of faults and alarms . . . . .	1356
4.1.1	General information on faults and alarms . . . . .	1356
4.1.2	Explanation of the list of faults and alarms. . . . .	1361
4.1.3	Number ranges of faults and alarms . . . . .	1367
4.2	List of faults and alarms . . . . .	1369
<b>A</b>	<b>Appendix</b> . . . . .	<b>1941</b>
A.1	ASCII table (characters that can be displayed) . . . . .	1942
A.2	List of abbreviations . . . . .	1945
A.3	References. . . . .	1954
	<b>Index</b> . . . . .	<b>1961</b>

## Fundamental safety instructions

### Content

1.1	General safety instructions	12
1.2	Industrial security	13

## 1.1 General safety instructions

 <b>WARNING</b>
<b>Risk of death if the safety instructions and remaining risks are not carefully observed</b>
If the safety instructions and residual risks are not carefully observed in the associated hardware documentation, accidents involving severe injuries or death can occur.
<ul style="list-style-type: none"><li>• Observe the safety instructions given in the hardware documentation.</li><li>• When assessing the risk, take into account residual risks.</li></ul>

 <b>WARNING</b>
<b>Danger to life or malfunctions of the machine as a result of incorrect or changed parameter assignment</b>
Machines can malfunction as a result of incorrect or changed parameter assignment, which in turn can lead to injuries or death.
<ul style="list-style-type: none"><li>• Protect the parameterization (parameter assignments) against unauthorized access.</li><li>• Respond to possible malfunctions by applying suitable measures (e.g. EMERGENCY-STOP or EMERGENCY-OFF).</li></ul>

## 1.2 Industrial security

### Note

#### Industrial security

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, solutions, machines, devices, and/or networks. They are important components in a holistic industrial security concept. With this in mind, Siemens products and solutions undergo continuous development. Siemens recommends strongly that you regularly check for product updates.

To ensure that Siemens products and solutions are operated securely, suitable preventive measures (e.g. cell protection concept) and each component must be integrated into a state-of-the-art holistic industrial security concept. Any third-party products that may be in use must also be taken into account. You will find more information about industrial security at:

<http://www.siemens.com/industrialsecurity>

To receive information about product updates on a regular basis, register for our product newsletter. You will find more information at:

<http://support.automation.siemens.com>



#### WARNING

##### Danger due to unsafe operating states caused by software manipulation

Software manipulation (e.g. by viruses, Trojan horses, malware, worms) can cause unsafe operating states to develop in your installation which can result in death, severe injuries and/or material damage.

- Update your software regularly.

You can find information and newsletters on this subject at:

<http://support.automation.siemens.com>

- Integrate the automation and drive components into a holistic, state-of-the-art industrial security concept for the plant or machine.

For more information, visit:

<http://www.siemens.com/industrialsecurity>

- Make sure that you include all installed products into the holistic industrial security concept.



#### WARNING

##### Danger to life due to software manipulation when using exchangeable storage media

Storing files onto exchangeable storage media amounts to an increased risk of infection, e.g. with viruses and malware. As a result of incorrect parameterization, machines can malfunction, which in turn can lead to injuries or death.

- Protect files stored on exchangeable storage media from malicious software by taking suitable protection measures, e.g. virus scanners.



# Parameters

# 2

## Content

2.1	Overview of parameters	16
2.2	List of parameters	34
2.3	Parameters for data sets	1069
2.4	Parameters for write protection and know-how protection	1086

## 2.1 Overview of parameters

### 2.1.1 Explanation of the parameter list

#### Basic structure of the parameter descriptions

The data in the following example has been chosen at random. The table below contains all the information that can be included in a parameter description. Some of the information is optional.

The "List of parameters" (Page 34) has the following structure:

----- **Start of example** -----

<b>pxxxx[0...n]</b>	<b>BICO: Full parameter name / abbreviated name</b>			
Drive object (function module)	<b>Can be changed:</b> C1(x), C2(x), U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8070	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505	
	<b>Not for motor type:</b> ASM	<b>Scaling:</b> p2000	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.00 [Nm]	10.00 [Nm]	0.00 [Nm]	
<b>Description:</b>	Text			
<b>Value:</b>	0: Name and meaning of value 0 1: Name and meaning of value 1 2: Name and meaning of value 2 etc.			
<b>Recommendation:</b>	Text			
<b>Index:</b>	[0] = Name and meaning of index 0 [1] = Name and meaning of index 1 [2] = Name and meaning of index 2 etc.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Name and meaning of bit 0	Yes	no
	01	Name and meaning of bit 1	Yes	no
	02	Name and meaning of bit 2	Yes	no
		etc.		
<b>Dependency:</b>	Text Refer to: pxxxx, rxxxx Refer to: Fxxxx, Axxxx			
<b>Danger:</b>	<b>Warning:</b>	<b>Caution:</b>	Safety notices with a warning triangle	
				
<b>Notice:</b>	Safety notice without a warning triangle			
<b>Note:</b>	Information that might be useful.			

----- **End of example** -----

The individual pieces of information are described in detail below.

**pxxxx[0...n]      Parameter number**

The parameter number is made up of a "p" or "r", followed by the parameter number and the index (optional).

Examples of the representation in the parameter list:

- p...                      Adjustable parameters (read and write parameters)
- r...                      Display parameters (read only)
- p0918                    Adjustable parameter 918
- p0099[0...3]          Adjustable parameter 99, indices 0 to 3
- p1001[0...n]          Adjustable parameter 1001, indices 0 to n (n = configurable)
- r0944                    Display parameter 944
- r2129.0...15          Display parameter 2129 with bit field from bit 0 (lowest bit) to bit 15 (highest bit)

Other examples of the notation in the documentation:

- p1070[1]                Adjustable parameter 1070, index 1
- p2098[1].3             Adjustable parameter 2098, index 1 bit 3
- r0945[2](3)            Display parameter 945, index 2 of drive object 3
- p0795.4                Adjustable parameter 795, bit 4

The following applies to adjustable parameters:

The parameter value as delivered is specified under "Factory setting" with the relevant unit in square brackets. The value can be adjusted within the range defined by "Min" and "Max".

The term "linked parameterization" is used in cases where changes to adjustable parameters affect the settings of other parameters.

Linked parameterization can occur, for example, as a result of the following actions and parameters:

- Executing macros  
p0015, p0700, p1000, p1500
- Setting the PROFIBUS telegram (BICO interconnection)  
p0922
- Setting component lists  
p0230, p0300, p0301, p0400
- Automatic calculation and pre-assignment  
p0112, p0340, p0578, p3900
- Restoring the factory settings  
p0970

The following applies to display parameters:

The fields "Min", "Max" and "Factory setting" are specified with a dash "-" and the relevant unit in square brackets.

---

#### Note

The parameter list can contain parameters that are not visible in the expert lists of the particular commissioning software (e.g. parameters for trace functions).

---

#### BICO: Full parameter name / short name

The following abbreviations can appear in front of the parameter name:

- **BI:** Binector Input  
This parameter is used for selecting the source of a digital signal.
- **BO:** Binector output  
This parameter is available as a digital signal for interconnection with other parameters.
- **CI:** Connector Input  
This parameter is used for selecting the source of an "analog" signal.
- **CO:** Connector output  
This parameter is available as an "analog" signal for interconnection with other parameters.
- **CO/BO:** Connector/Binector Output  
This parameter is available as an "analog" and digital signal for interconnection with other parameters.

---

#### Note

A connector input (CI) cannot be arbitrarily interconnected with any connector output (CO, signal source).

When interconnecting a connector input using the commissioning software, only the corresponding possible signal sources are listed.

---

#### Drive object (function module)

A drive object (DO) is an independent, "self-contained" functional unit that has its own parameters and, in some cases, faults and alarms.

When carrying out commissioning using the commissioning software, you can select/deselect additional functions and their parameters by activating/deactivating function modules accordingly.

The parameter list specifies the associated drive object and function module for each individual parameter.

Examples:

- **p1070 CI: Main setpoint**  
VECTOR  
The parameter is only available with the VECTOR drive object, regardless of which function modules have been activated.
- **p1055 BI: Jog bit 0**  
VECTOR  
The parameter is available with the VECTOR drive object, regardless of which function modules have been activated (i.e. it is available with every activated function module belonging to the drive object).

A parameter can belong to a single, multiple, or all drive objects.

The following information relating to "Drive object" and "Function module" can be displayed under the parameter number:

Table 2-1 Data in the "Drive object (function module)" field

Drive object (function module)	Type	Meaning
All objects	-	This parameter is used by all drive objects.
B_INF	30	Basic Infeed closed-loop control Unregulated line infeed unit (without regenerative feedback) for rectifying the line voltage of the DC link.
B_INF (Rec)	-	Basic Infeed with "Recorder" function module (r0108.5)
B_INF (parallel)	-	Basic Infeed with "Parallel connection" function module (r0108.15).
B_INF (Brk Mod Ext)	-	Basic Infeed with "Braking Module external" function module (r0108.26).
B_INF (Cooling unit)	-	Basic Infeed with "Cooling unit" function module (r0108.28)
B_INF (PN CBE20)	-	Basic Infeed with "PROFINET CBE20" function module (r0108.31).
CU_G130_DP		SINAMICS G130 Control Unit with PROFIBUS interface.
CU_G130_DP (CAN)	-	SINAMICS G130 Control Unit with PROFIBUS interface and "CAN" function module (p0108.29).
CU_G130_DP (COMM BOARD)		SINAMICS G130 Control Unit with PROFIBUS interface and "COMM BOARD" function module (p0108.30).
CU_G130_DP (PN CBE20)	-	SINAMICS G130 Control Unit with PROFIBUS interface and "PROFINET CBE20" function module (p0108.31).
CU_G130_PN		SINAMICS G130 Control Unit with PROFINET interface.
CU_G130_PN (CAN)	-	SINAMICS G130 Control Unit with PROFINET interface and "CAN" function module (p0108.29).
CU_G130_PN (COMM BOARD)		SINAMICS G130 Control Unit with PROFINET interface and "COMM BOARD" function module (p0108.30).
CU_G130_PN (PN CBE20)		SINAMICS G130 Control Unit with PROFINET interface and "PROFINET CBE20" function module (p0108.31).
CU_G150_DP		SINAMICS G150 Control Unit with PROFIBUS interface.
CU_G150_DP (CAN)	-	SINAMICS G150 Control Unit with PROFIBUS interface and "CAN" function module (p0108.29).
CU_G150_DP (COMM BOARD)		SINAMICS G150 Control Unit with PROFIBUS interface and "COMM BOARD" function module (p0108.30).
CU_G150_DP (PN CBE20)	-	SINAMICS G150 Control Unit with PROFIBUS interface and "PROFINET CBE20" function module (p0108.31).
CU_G150_PN		SINAMICS G150 Control Unit with PROFINET interface.
CU_G150_PN (CAN)	-	SINAMICS G150 Control Unit with PROFINET interface and "CAN" function module (p0108.29).
CU_G150_PN (COMM BOARD)		SINAMICS G150 Control Unit with PROFINET interface and "COMM BOARD" function module (p0108.30).
CU_G150_PN (PN CBE20)		SINAMICS G150 Control Unit with PROFINET interface and "PROFINET CBE20" function module (p0108.31).

## 2 Parameters

### 2.1 Overview of parameters

Table 2-1 Data in the "Drive object (function module)" field, continued

Drive object (function module)	Type	Meaning
ENC	300	Object for a DRIVE-CLiQ encoder.
ENC (lin_encoder)	-	Object for a DRIVE-CLiQ encoder with "Linear encoder" function module (r0108.12).
ENC (PN_CBE20)	-	Object for a DRIVE-CLiQ encoder with "PROFINET CBE20" function module (r0108.31).
HUB	150	DRIVE-CLiQ Hub Module.
TB30	100	Terminal Board 30.
TM120	207	Terminal Module 120.
TM150	208	Terminal Module 150.
TM31	200	Terminal Module 31.
TM54F_MA	205	Terminal Module 54F Master.
TM54F_SL	206	Terminal Module 54F Slave.
VECTOR_G	12	Vector drive for SINAMICS G130/G150.
VECTOR_G (n/M)	-	Vector drive for SINAMICS G130/G150 with "Speed/torque control" function module (r0108.2).
VECTOR_G (Rec)	-	Vector drive for SINAMICS G130/G150 with "Recorder" function module (r0108.5).
VECTOR_G (J_estimator)	-	Vector drive for SINAMICS G130/G150 with "Moment of inertia estimator" function module (r0108.10).
VECTOR_G (Safety red)	-	Vector drive for SINAMICS G130/G150 with "Safety rotary axis" function module (r0108.13).
VECTOR_G (ext. brake)	-	Vector drive for SINAMICS G130/G150 with "Extended brake control" function module (r0108.14).
VECTOR_G (parallel)	-	Vector drive for SINAMICS G130/G150 with "Parallel connection" function module (r0108.15).
VECTOR_G (Tech_ctrl)	-	Vector drive for SINAMICS G130/G150 with "Technology controller" function module (r0108.16).
VECTOR_G (ext. mess.)	-	Vector drive for SINAMICS G130/G150 with "Extended messages/monitoring functions" function module (r0108.17).
VECTOR_G (Cooling unit)	-	Vector drive for SINAMICS G130/G150 with "Cooling unit" function module (r0108.28).
VECTOR_G (CAN)	-	Vector drive for SINAMICS G130/G150 with "CAN" function module (r0108.29).
VECTOR_G (PN CBE20)	-	Vector drive for SINAMICS G130/G150 with "PROFINET CBE20" function module (r0108.31).

#### Note

The drive object type is used to identify the drive objects in the drive system (e.g. r0107, r0975[1]).

## Can be changed

The "-" sign indicates that the parameter can be changed in any object state and that the change will be effective immediately.

The information "C1(x), C2(x), T, U" ((x): optional) means that the parameter can be changed only in the specified drive unit state and that the change will not take effect until the unit switches to another state. This can be a single state or multiple states.

The following states are available:

- C1(x) Device commissioning C1: Commissioning 1  
 Device is being commissioned (p0009 > 0).  
 Pulses cannot be enabled.  
 The parameter can only be changed for the following device commissioning settings (p0009 > 0):

  - C1: Can be changed for all settings p0009 > 0.
  - C1(x): Can be changed only when p0009 = x.

A modified parameter value does not take effect until the device commissioning mode is exited with p0009 = 0.
- C2(x) Drive object commissioning C2: Commissioning 2  
 Drive commissioning is in progress (p0009 = 0 and p0010 > 0).  
 Pulses cannot be enabled.  
 The parameter can only be changed in the following drive commissioning settings (p0010 > 0):

  - C2: Can be changed for all settings p0010 > 0.
  - C2(x): Can only be changed for the settings p0010 = x.

A modified parameter value does not take effect until drive commissioning mode is exited with p0010 = 0.
- U Operation U: Run  
 Pulses are enabled.
- T Ready T: Ready to run  
 The pulses are not enabled and the state "C1(x)" or "C2(x)" is not active.

---

### Note

Parameter p0009 is CU-specific (belongs to the Control Unit).

Parameter p0010 is drive-specific (belongs to each drive object).

The operating state of individual drive objects is displayed in r0002.

---

#### Calculated

Specifies whether the parameter is influenced by automatic calculations.

The calculation attribute defines which activities influence the parameter.

The following attributes apply:

- CALC\_MOD\_ALL
  - p0340 = 1
  - Project download with commissioning software and send from p0340 = 3
- CALC\_MOD\_CON
  - p0340 = 1, 3, 4
- CALC\_MOD\_EQU
  - p0340 = 1, 2
- CALC\_MOD\_LIM\_REF
  - p0340 = 1, 3, 5
  - p0578 = 1
- CALC\_MOD\_REG
  - p0340 = 1, 3

---

#### Note

For p3900 > 0, p0340 = 1 is also called automatically.

After p1910 = 1, p0340 = 3 is also called automatically.

---

#### Access level

Specifies the minimum access level required to be able to display and change the relevant parameter. The required access level can be set using p0003.

The system uses the following access levels:

- 1: Standard
- 2: Extended
- 3: Expert
- 4: Service

Parameters with this access level are password protected.

---

#### Note

Parameter p0003 is CU-specific (belongs to the Control Unit).

A higher access level will also include the functions of the lower levels.

---

## Data type

The information on the data type can consist of the following two items (separated by a slash):

- First item  
Data type of the parameter.
- Second item (for binector or connector input only)  
Data type of the signal source to be interconnected (binector/connector output).

Parameters can have the following data types:

- Integer8                I8        8-bit integer number
- Integer16              I16       16-bit integer number
- Integer32              I32       32-bit integer number
- Unsigned8              U8        8 bits without sign
- Unsigned16             U16       16 bits without sign
- Unsigned32             U32       32 bits without sign
- FloatingPoint32       Float      32-bit floating point number

Depending on the data type of the BICO input parameter (signal sink) and BICO output parameter (signal source), the following combinations are possible when creating BICO interconnections:

Table 2-2 Possible combinations of BICO interconnections

BICO output parameter	BICO input parameter			
	CI parameter			BI parameter
	Unsigned32 / Integer16	Unsigned32 / Integer32	Unsigned32 / FloatingPoint32	Unsigned32 / Binary
CO: Unsigned8	x	x	–	–
CO: Unsigned16	x	x	–	–
CO: Integer16	x	x	r2050, r8850	–
CO: Unsigned32	x	x	–	–
CO: Integer32	x	x	r2060, r8860	–
CO: FloatingPoint32	x	x	x	–
BO: Unsigned8	–	–	–	x
BO: Unsigned16	–	–	–	x
BO: Integer16	–	–	–	x
BO: Unsigned32	–	–	–	x
BO: Integer32	–	–	–	x
BO: FloatingPoint32	–	–	–	–
Legend:                    x : BICO interconnection permitted –: BICO interconnection not permitted rxxxx: BICO interconnection is only permitted for the specified CO parameters				

#### Dynamic index

For parameters with a dynamic index [0...n], the following information is specified here:

- Data set (if available).
- Parameter for the number of indices (n = number - 1).

The following information can be contained in this field:

- "CDS, p0170" (Command Data Set, CDS count)

Example:

p1070[0] → main setpoint [command data set 0]

p1070[1] → main setpoint [command data set 1], etc.

- "DDS, p0180" (Drive Data Set, DDS count)
- "EDS, p0140" (Encoder Data Set, EDS count)
- "MDS, p0130" (Motor Data Set, MDS count)
- "PDS, p0120" (Power unit Data Set, PDS count)
- "p2615" (traversing blocks count)

#### Function diagram

The parameter is included in this function diagram. The structure of the parameter function and its relationship with other parameters is shown in the specified function diagram.

#### P-Group (only when accessing via BOP (Basic Operator Panel))

Specifies the functional group to which this parameter belongs. The required parameter group can be set via p0004.

---

##### Note

Parameter p0004 is CU-specific (belongs to the Control Unit).

---

#### Unit, unit group and unit selection

The standard unit of a parameter is specified in square brackets after the values for "Min", "Max", and "Factory setting".

For parameters where the unit can be switched over, the specifications for "Unit group" and "Unit selection" determine the group to which this parameter belongs and with which parameter the unit can be changed over.

##### Example:

Unit group: 7\_1, unit selection: p0505

The parameter belongs to unit group 7\_1 and the unit can be changed over using p0505.

**Note**

Detailed information on changing over units can be found in the following references:

References: /FH1/ SINAMICS S120 Function Manual Drive Functions

References: /BA3/ SINAMICS S150 Operating Instructions

All the potential unit groups and possible unit selections are listed below.

Table 2-3 Unit groups (p0100)

Unit group	Unit selection for p0100 =		Reference variable for %
	0	1	
7_4	Nm	lbf ft	-
8_4	N	lbf	-
14_2	W	HP	-
14_6	kW	HP	-
14_13	W/A	HP/A	-
14_14	W min/1000	HP min/1000	-
14_15	W/A <sup>2</sup>	HP/A <sup>2</sup>	-
14_16	W min <sup>2</sup> /1000 <sup>2</sup>	HP min <sup>2</sup> /1000 <sup>2</sup>	-
25_1	kgm <sup>2</sup>	lb ft <sup>2</sup>	-
27_1	kg	lb	-
28_1	Nm/A	lbf ft/A	-
29_1	N/Arms	lbf/Arms	-
30_1	m	ft	-
47_1	kW s/K	HP s/K	-
48_1	W/K	HP/K	-
48_2	W min/1000 K	HP min/1000 K	-
48_3	W min <sup>2</sup> /1000 <sup>2</sup> K	HP min <sup>2</sup> /1000 <sup>2</sup> K	-
50_1	K/W	K/HP	-

Table 2-4 Unit groups (p0349)

Unit group	Unit selection for p0349 =		Reference variable for %
	1	2	
15_1	mH	%	$\frac{1000 \cdot p0304}{2 \cdot \pi \cdot \sqrt{3} \cdot p0305 \cdot p0310}$
16_1	Ohm	%	$\frac{p0304}{\sqrt{3} \cdot p0305}$

## 2 Parameters

### 2.1 Overview of parameters

Table 2-5 Unit groups (p0505)

Unit group	Unit selection for p0505 =				Reference variable for %
	1	2	3	4	
2_1	Hz	%	Hz	%	p2000
2_2	kHz	%	kHz	%	p2000
3_1	1 rpm	%	1 rpm	%	p2000
4_1	m/min	%	ft/min	%	p2000
4_2	m/min	m/min	ft/min	ft/min	-
5_1	Vrms	%	Vrms	%	p2001
5_2	V	%	V	%	p2001
5_3	V	%	V	%	p2001
6_1	mArms	%	mArms	%	p2002
6_2	Arms	%	Arms	%	p2002
6_3	mA	%	mA	%	p2002
6_4	A	%	A	%	p2002
6_5	A	%	A	%	p2002
7_1	Nm	%	lbf ft	%	p2003
7_2	Nm	Nm	lbf ft	lbf ft	-
7_3	Nm	%	lbf ft	%	1.0
8_1	N	%	lbf	%	p2003
8_2	N	N	lbf	lbf	-
8_3	N	%	lbf	%	1.0
14_1	W	%	HP	%	r2004 (drive)
14_3	W	%	HP	%	r2004 (infeed)
14_4	W	%	HP	%	r2004 (drive)
14_5	kW	%	HP	%	r2004 (drive)
14_7	kW	%	HP	%	r2004 (infeed)
14_8	kW	%	HP	%	r2004 (drive)
14_9	W	W	HP	HP	-
14_10	kW	kW	HP	HP	-
14_11	var	%	var	%	r2004
14_12	kvar	%	kvar	%	r2004
17_1	Nms/rad	%	lbf ft s/rad	%	p2003/p2000
18_1	V/A	%	V/A	%	p2001/p2002
19_1	A/V	%	A/V	%	p2002/p2001
21_1	°C	°C	°F	°F	-
21_2	K	K	°F	°F	-
22_1	m/s <sup>2</sup>	m/s <sup>2</sup>	ft/s <sup>2</sup>	ft/s <sup>2</sup>	-

Table 2-5 Unit groups (p0505), continued

Unit group	Unit selection for p0505 =				Reference variable for %
	1	2	3	4	
22_2	m/s <sup>2</sup>	%	ft/s <sup>2</sup>	%	p2007
23_1	Vrms s/m	Vrms s/m	Vrms s/ft	Vrms s/ft	-
24_1	Ns/m	Ns/m	lbf s/ft	lbf s/ft	-
24_2	Ns/m	%	lbf s/ft	%	p2003/p2000
26_1	m/s <sup>3</sup>	m/s <sup>3</sup>	ft/s <sup>3</sup>	ft/s <sup>3</sup>	-
39_1	1/s <sup>2</sup>	%	1/s <sup>2</sup>	%	p2007
49_1	Nm/rad	%	lbf ft/rad	%	p2003

Table 2-6 Unit group (p0595)

Unit group	Unit selection for p0595 =		Reference variable for %
	Value	Unit	
9_1	The values that can be set and the technological units are shown in p0595.		

## Parameter values

Min	Minimum value of the parameter [unit]
Max	Maximum value of the parameter [unit]
Factory setting	Value when delivered [unit]
	In the case of a binector/connector input, the signal source of the default BICO interconnection is specified. A non-indexed connector output is assigned the index [0].
	A different value may be displayed for certain parameters (e.g. p1800) at the initial commissioning stage or when establishing the factory settings.
	Reason:
	The setting of these parameters is determined by the operating environment of the Control Unit (e.g. depending on converter type, macro, power unit).

### Note

For SINAMICS G130/G150, the macros and their settings are provided in the following documentation:

References: /BAx/ x = 1, 2  
SINAMICS G150/G130 Operating Instructions

#### Not for motor type

Specifies for which motor type this parameter has no significance

- ASM : Induction motor
- PMSM : Permanent-magnet synchronous motor
- REL : Reluctance motor textiles / SIEMOSYN motor
- RESM : Synchronous reluctance motor
- SESM : Separately-excited synchronous motor

#### Normalization

Specification of the reference variable with which a signal value is automatically converted for a BICO interconnection.

The following reference variables are available:

- p2000 ... p2007: Reference speed, reference voltage, etc.
- PERCENT: 1.0 = 100 %
- 4000H: 4000 hex = 100 % (wort) or 4000 0000 hex = 100 % (double word)
- p0514: specific normalization

Refer to the description for p0514[0...9] and p0515[0...19] to p0524[0...19]

#### Expert list

Specifies whether this parameter is available in the expert list of the specified drive objects in the commissioning software.

- 1: Parameter exists in the expert list.
- 0: Parameter does not exist in the expert list.

NOTICE
Users assume full responsibility for using parameters marked "Expert list: 0" (parameter does not exist in the expert list).
These parameters and their functionalities have not been tested and no further user documentation is available for them (e.g. description of functions). Moreover, no support is provided for these parameters by "Technical Support" (hotline).

#### Description

Explanation of the function of a parameter

#### Values

Lists the possible values of a parameter.

#### Recommendation

Information about recommended settings.

## Index

The name and meaning of each individual index is specified for indexed parameters.

The following applies to the values (Min, Max, Factory setting) for indexed adjustable parameters:

- **Min, Max:**  
The adjustment range and unit apply to all indices.
- **Factory setting:**  
When all indices have the same factory setting, index 0 is specified with the unit to represent all indices.  
When the indices have different factory settings, they are all listed individually with the unit.

## Bit field

For parameters with bit fields, the following information is provided about each bit:

- Bit number and signal name
- Meaning for signal states 0 and 1
- Function diagram (optional)  
The signal is shown in this function diagram.

## Dependency

Conditions that must be fulfilled in conjunction with this parameter. Also includes special effects that can occur between this parameter and others.

Where necessary, "Refer to:" indicates the following information:

- List of other relevant parameters to be considered.
- List of faults and alarms to be considered.

## Safety instructions

Important information that must be observed to avoid the risk of injury or material damage.

Information that must be observed to avoid any problems.

Information that the user may find useful.

### **Danger**



The description of this safety instruction can be found at the beginning of this manual, see "Legal information" (Page 4).

### **Warning**



The description of this safety instruction can be found at the beginning of this manual, see "Legal information" (Page 4).

### **Caution**



The description of this safety instruction can be found at the beginning of this manual, see "Legal information" (Page 4).

**Notice**            The description of this safety instruction can be found at the beginning of this manual, see "Legal information" (Page 4).

**Note**                Information that the user may find useful.

## 2.1.2 Number ranges of parameters

### Note

The following number ranges represent an overview for all the parameters available for the SINAMICS drive family.

The parameters for the product described in this List Manual are described in detail in "List of parameters" (Page 34).

Parameters are grouped into the following number ranges:

Table 2-7 Number ranges for SINAMICS

Range		Description
From	To	
0000	0099	Display and operation
0100	0199	Commissioning
0200	0299	Power section
0300	0399	Motor
0400	0499	Encoder
0500	0599	Technology and units, motor-specific data, probes
0600	0699	Thermal monitoring, maximum current, operating hours, motor data, central probe
0700	0799	Control Unit terminals, measuring sockets
0800	0839	CDS, DDS data sets, motor changeover
0840	0879	Sequence control (e.g. signal source for ON/OFF1)
0880	0899	ESR, parking, control and status words
0900	0999	PROFIBUS/PROFIdrive
1000	1199	Setpoint channel (e.g. ramp-function generator)
1200	1299	Functions (e.g. motor holding brake)
1300	1399	U/f control
1400	1799	Closed-loop control
1800	1899	Gating unit
1900	1999	Power unit and motor identification
2000	2009	Reference values
2010	2099	Communication (fieldbus)
2100	2139	Faults and alarms
2140	2199	Signals and monitoring
2200	2359	Technology controller
2360	2399	Staging, hibernation
2500	2699	Position control (LR) and basic positioning (EPOS)
2700	2719	Reference values, display

Table 2-7 Number ranges for SINAMICS, continued

Range		Description
From	To	
2720	2729	Load gearbox
2800	2819	Logic operations
2900	2930	Fixed values (e. g. percentage, torque)
3000	3099	Motor identification results
3100	3109	Real-time clock (RTC)
3110	3199	Faults and alarms
3200	3299	Signals and monitoring
3400	3659	Infeed closed-loop control
3660	3699	Voltage Sensing Module (VSM), Braking Module internal
3700	3779	Advanced Positioning Control (APC)
3780	3819	Synchronization
3820	3849	Friction characteristic
3850	3899	Functions (e. g. long stator)
3900	3999	Management
4000	4599	Terminal Board, Terminal Module (e. g. TB30, TM31)
4600	4699	Sensor Module
4700	4799	Trace
4800	4849	Function generator
4950	4999	OA application
5000	5169	Spindle diagnostics
5200	5230	Current setpoint filter 5 ... 10 (r0108.21)
5400	5499	System droop control (e. g. shaft generator)
5500	5599	Dynamic grid support (solar)
5600	5614	PROFenergy
5900	6999	SINAMICS GM/SM/GL/SL
7000	7499	Parallel connection of power units
7500	7599	SINAMICS SM120
7700	7729	External messages
7770	7789	NVRAM, system parameters
7800	7839	EEPROM read/write parameters
7840	8399	Internal system parameters
8400	8449	Real-time clock (RTC)
8500	8599	Data and macro management
8600	8799	CAN bus
8800	8899	Communication Board Ethernet (CBE), PROFIdrive

Table 2-7 Number ranges for SINAMICS, continued

Range		Description
From	To	
8900	8999	Industrial Ethernet, PROFINET, CBE20
9000	9299	topology
9300	9399	Safety Integrated
9400	9499	Parameter consistency and storage
9500	9899	Safety Integrated
9900	9949	topology
9950	9999	Diagnostics, internal
10000	10199	Safety Integrated
11000	11299	Free technology controller 0, 1, 2
20000	20999	Free function blocks (FBLOCKS)
21000	25999	Drive Control Chart (DCC)
50000	53999	SINAMICS DC MASTER (closed-loop DC current control)
61000	61001	PROFINET

## 2.2 List of parameters

Product: SINAMICS G130/G150, Version: 4806000, Language: eng  
 Objects: CU\_G130\_PN, CU\_G150\_PN, CU\_G130\_DP, CU\_G150\_DP, VECTOR\_G, B\_INF, TM31, TM120, TM150, TB30, TM54F\_MA, TM54F\_SL, ENC, HUB

<b>r0002 Control Unit operating display / CU op_display</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	117	-
<b>Description:</b>	Operating display for the Control Unit (CU).		
<b>Value:</b>	0: Operation 10: Ready 20: Wait for run-up 25: Wait for automatic FW update of DRIVE-CLiQ components 31: Commissioning software download active 33: Remove/acknowledge topology error 34: Exit commissioning mode 35: Carry out first commissioning 70: Initialization 80: Reset active 99: Internal software error 101: Specify topology 111: Insert drive object 112: Delete drive object 113: Change drive object number 114: Change component number 115: Run parameter download 117: Delete component		
<b>Notice:</b>	For several missing enable signals, the corresponding value with the highest number is displayed.		

<b>r0002 Drive operating display / Drv op_display</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	250	-
<b>Description:</b>	Operating display for the drive.		
<b>Value:</b>	0: Operation - everything enabled 10: Operation - set "enable setpoint" = "1" (p1142, p1152) 11: Operation - set "enable speed controller" = "1" (p0856) 12: Operation - RFG frozen, set "RFG start" = "1" (p1141) 13: Operation - set "enable RFG" = "1" (p1140) 14: Oper. - MotID, excit. running and/or brake opens, SS2, STOP C 15: Operation - open brake (p1215) 16: Operation - withdraw braking with OFF1 using "ON/OFF1" = "1" 17: Operation - braking with OFF3 can only be interrupted with OFF2 18: Operation - brake on fault, remove fault, acknowledge 19: Operation - armature short-circ./DC brake act. (p1230, p1231) 21: Ready for operation - set "Enable operation" = "1" (p0852) 22: Ready for operation - de-magnetizing running (p0347) 23: Ready for operation - set "Infeed operation" = "1" (p0864) 31: Ready for switching on - set "ON/OFF1" = "0/1" (p0840) 35: Switching-on inhibited - carry out first commissioning (p0010) 41: Switching-on inhibited - set "ON/OFF1" = "0" (p0840) 42: Switching-on inhibited - set "OC/OFF2" = "1" (p0844, p0845)		

43: Switching-on inhibited - set "OC/OFF3" = "1" (p0848, p0849)  
 44: Switching-on inhibited - supply STO terminal w/ 24 V (hardware)  
 45: Switching-on inhibited - rectify fault, acknowledge fault, STO  
 46: Switching-on inhibited - exit commissioning mode (p0009, p0010)  
 60: Drive object deactivated/not operational  
 70: Initialization  
 200: Wait for booting/partial booting  
 250: Device signals a topology error

**Dependency:**

Refer to: r0046

**Notice:**

For several missing enable signals, the corresponding value with the highest number is displayed.

**Note:**

OC: Operating condition  
 EP: Enable Pulses (pulse enable)  
 RFG: Ramp-function generator  
 COMM: Commissioning  
 MotID: Motor data identification  
 SS2: Safe Stop 2  
 STO: Safe Torque Off

**r0002****Infeed operating display / INF op\_display**

B\_INF

**Can be changed:** -**Calculated:** -**Access level:** 1**Data type:** Integer16**Dyn. index:** -**Func. diagram:** -**P-Group:** -**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0

250

-

**Description:**

Operating display for the infeed.

**Value:**

0: Operation - everything enabled  
 31: Ready for switching on - precharging running (p0857)  
 32: Ready for switching on - set "ON/OFF1" = "0/1" (p0840)  
 35: Switching-on inhibited - carry out first commissioning (p0010)  
 41: Switching-on inhibited - set "ON/OFF1" = "0" (p0840)  
 42: Switching-on inhibited - set "OC/OFF2" = "1" (p0844, p0845)  
 44: Switching-on inhibited - connect 24 V to terminal EP (hardware)  
 45: Switching-on inhibited - remove fault cause, acknowledge fault  
 46: Switching-on inhibited - exit commissioning mode (p0009, p0010)  
 60: Infeed deactivated/not operational  
 70: Initialization  
 200: Wait for booting/partial booting  
 250: Device signals a topology error

**Dependency:**

Refer to: r0046

**Notice:**

For several missing enable signals, the corresponding value with the highest number is displayed.

**Note:**

OC: Operating condition  
 COMM: Commissioning

**r0002****TM120 operating display / TM120 op\_display**

TM120

**Can be changed:** -**Calculated:** -**Access level:** 1**Data type:** Integer16**Dyn. index:** -**Func. diagram:** -**P-Group:** -**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0

250

-

**Description:**

Operating display for Terminal Module 120 (TM120)

**Value:**

0: Module in cyclic operation  
 40: Module not in cyclic operation  
 50: Alarm  
 60: Fault  
 70: Initialization  
 120: Module deactivated

## 2 Parameters

### 2.2 List of parameters

200: Wait for booting/partial booting  
250: Device signals a topology error

**Notice:** For several missing enable signals, the corresponding value with the highest number is displayed.

---

#### r0002 TM150 operating display / TM150 op\_display

TM150	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	250	-

**Description:** Operating display for Terminal Module 150 (TM150)

**Value:**  
0: Module in cyclic operation  
40: Module not in cyclic operation  
50: Alarm  
60: Fault  
70: Initialization  
120: Module deactivated  
200: Wait for booting/partial booting  
250: Device signals a topology error

**Notice:** For several missing enable signals, the corresponding value with the highest number is displayed.

---

#### r0002 TM31 operating display / TM31 op\_display

TM31	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	250	-

**Description:** Operating display for Terminal Module 31 (TM31).

**Value:**  
0: Module in cyclic operation  
40: Module not in cyclic operation  
50: Alarm  
60: Fault  
70: Initialization  
120: Module deactivated  
200: Wait for booting/partial booting  
250: Device signals a topology error

**Notice:** For several missing enable signals, the corresponding value with the highest number is displayed.

---

#### r0002 TB30 operating display / TB30 op\_display

TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	250	-

**Description:** Operating display for Terminal Board 30 (TB30).

**Value:**  
0: Module in cyclic operation  
40: Module not in cyclic operation  
60: Fault  
70: Initialization  
80: Reset active  
120: Module deactivated  
200: Wait for run-up  
250: Device signals a topology error

**Notice:** For several missing enable signals, the corresponding value with the highest number is displayed.

<b>r0002</b>	<b>TM54F operating display / TM54F op_display</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	250	-
<b>Description:</b>	Operating display for Terminal Module 54F (TM54F).		
<b>Value:</b>	0: Module in cyclic operation 40: Module not in cyclic operation 50: Alarm 60: Fault 70: Initialization 120: Module deactivated 200: Wait for booting/partial booting 250: Device signals a topology error		
<b>r0002</b>	<b>Encoder DO operating display / Enc DO op_display</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	250	-
<b>Description:</b>	Operating display for encoder drive object.		
<b>Value:</b>	0: Encoder in cyclic operation 35: Carry out first commissioning (p0010) 45: Remove fault cause, acknowledge fault 46: Exit commissioning mode (p0009, p0010) 60: Encoder deactivated 200: Wait for booting/partial booting 250: Device signals a topology error		
<b>Notice:</b>	For several missing enable signals, the corresponding value with the highest number is displayed.		
<b>r0002</b>	<b>DRIVE-CLiQ Hub Module operating display / Hub op_display</b>		
HUB	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	250	-
<b>Description:</b>	Operating display for the DRIVE-CLiQ Hub Module.		
<b>Value:</b>	0: Module in cyclic operation 40: Module not in cyclic operation 50: Alarm 60: Fault 70: Initialization 120: Module deactivated 200: Wait for booting/partial booting 250: Device signals a topology error		
<b>Notice:</b>	For several missing enable signals, the corresponding value with the highest number is displayed.		

---

<b>p0003</b>	<b>BOP access level / BOP acc_level</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1, U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	4	1
<b>Description:</b>	Sets the access level for reading and writing parameters via the Basic Operator Panel (BOP).		
<b>Value:</b>	1: Standard 2: Extended 3: Expert 4: Service		
<b>Note:</b>	A higher set access level also includes the lower one. Access level 1 (standard): Parameters for simplest possible operations. Access level 2 (extended): Parameters to operate the basic functions of the drive unit. Access level 3 (experts): Expert know-how is required for these parameters (e.g. BICO parameterization). Access level 4 (service): For these parameters, it is necessary that authorized service personnel enter the appropriate password (p3950).		

---

<b>p0004</b>	<b>BOP display filter / BOP disp_filter</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C2(1), U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	99	0
<b>Description:</b>	Sets the display filter for parameters with the Basic Operator Panel (BOP).		
<b>Value:</b>	0: All parameters 1: Displays, signals 2: Power unit 3: Motor 4: Encoder/pos enc 5: Technology/units 7: Digital inputs/outputs, commands, sequence control 8: Analog inputs/outputs 10: Setpoint channel/ramp-fct generator 12: Functions 13: U/f control 14: Control 15: Data sets 17: Basic positioner 18: Gating unit 19: Motor identification 20: Communication 21: Faults, alarms, monitoring functions 25: Position control 28: Free function blocks 47: Trace and function generator 50: Technology Extensions 90: Topology 95: Safety Integrated 98: Command Data Sets (CDS) 99: Drive Data Sets (DDS)		
<b>Dependency:</b>	Refer to: p0003		

**Notice:** The display filter via p0004 provides precise filtering and displays the corresponding parameters only when p0009 and p0010 = 0.

**Note:** The set access level via p0003 is also relevant for the display filter via p0004.

Examples (assumption: p0009 = p0010 = 0):

p0003 = 1, p0004 = 3

--> Only the parameters for the motor with access level 1 are displayed.

p0003 = 2, p0004 = 3

--> Only the parameters for the motor with access levels 1 and 2 are displayed.

---

<b>p0005[0...1]</b>	<b>BOP operating display selection / BOP op_disp sel</b>		
All objects	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	[0] 2 [1] 0
<b>Description:</b>	Sets the parameter number and parameter index for display for p0006 = 2, 4 for the Basic Operator Panel (BOP). Examples for the SERVO drive object: p0005[0] = 21, p0005[1] = 0: Actual speed smoothed (r0021) p0005[0] = 25, p0005[1] = 0: Output voltage smoothed (r0025)		
<b>Index:</b>	[0] = Parameter number [1] = Parameter index		
<b>Dependency:</b>	Refer to: p0006		
<b>Note:</b>	Procedure: 1. The parameter number to be displayed should be set in index 0. Only the monitoring parameters (read-only parameters) can be set that actually exist for the actual drive object. If the set parameter number is not indexed, or if there is an index in index 1 that lies outside the valid range of the set parameter, then index 1 is automatically set to 0. 2. The index that belongs to the parameter set in index 0 should be set in index 1. The permissible changes in index 1 always depend on the parameter number set in index 0.		

---

<b>p0006</b>	<b>BOP operating display mode / BOP op_disp mode</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	4	4	4
<b>Description:</b>	Sets the mode of the operating display for the Basic Operator Panel (BOP) in the operating states "ready for operation" and "operation".		
<b>Value:</b>	4: p0005		
<b>Dependency:</b>	Refer to: p0005		
<b>Note:</b>	Mode 0 ... 3 can only be selected if also r0020, r0021 are available on the drive object. Mode 4 is available for all drive objects.		

## 2 Parameters

### 2.2 List of parameters

---

<b>p0006</b>	<b>BOP operating display mode / BOP op_ disp mode</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4	4
<b>Description:</b>	Sets the mode of the operating display for the Basic Operator Panel (BOP) in the operating states "ready for operation" and "operation".		
<b>Value:</b>	0: Operation --> r0021, otherwise r0020 <--> r0021 1: Operation --> r0021, otherwise r0020 2: Operation --> p0005, otherwise p0005 <--> r0020 3: Operation --> r0002, otherwise r0002 <--> r0020 4: p0005		
<b>Dependency:</b>	Refer to: p0005		
<b>Note:</b>	Mode 0 ... 3 can only be selected if also r0020, r0021 are available on the drive object. Mode 4 is available for all drive objects.		

---

<b>p0007</b>	<b>BOP background lighting / BOP lighting</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [s]	2000 [s]	0 [s]
<b>Description:</b>	Sets the delay time until the background lighting of the Basic Operator Panel (BOP) is switched off. If no keys are actuated, then the background lighting automatically switches itself off after this time has expired.		
<b>Note:</b>	p0007 = 0: Background lighting is always switched on (factory setting).		

---

<b>p0008</b>	<b>BOP drive object after booting / BOP DO after boot</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	65535	1
<b>Description:</b>	Sets the required drive object that is active at the Basic Operator Panel (BOP) after booting.		
<b>Note:</b>	The value from p0008 initializes the display on the Basic Operator Panel (BOP) at the top left after booting. The drive object Control Unit is selected using the value 1.		

---

<b>p0009</b>	<b>Device commissioning parameter filter / Dev comm par_filt</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	10000	1
<b>Description:</b>	Sets the device and basic drive commissioning. By appropriately setting this parameter, those parameters are filtered that can be written into in the various commissioning steps.		
<b>Value:</b>	0: Ready 1: Device configuration 2: Defining the drive type/function module		

3:	Drive base configuration
4:	Data set base configuration
29:	Device download
30:	Parameter reset
50:	Install Technology Extension
55:	Install Technology Extension
101:	Topology input
111:	Insert drive object
112:	Delete drive object
113:	Change drive object number
114:	Change component number
115:	Parameter download
117:	Delete component
10000:	Ready (asynchron)

**Notice:** For p0009 = 10000 the following applies:

After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.

**Note:** The drives can only be switched on outside the device commissioning (the inverter enabled). In this case, p0009 must be 0 (Ready) and the individual drive objects must have already gone into operation (p0010).

p0009 = 1: Device configuration

At the first commissioning of the device, after booting, the device is in the "device configuration" state. To start the internal automatic first commissioning of the drive unit, p0009 should be set to 0 (Ready) after the ID for the actual topology (r0098) was transferred into the ID for the target topology (p0099). To do this, it is sufficient to set a single index value of p0099[x] the same as r0098[x]. Before the device has been completely commissioned, no other parameter can be changed. After the first commissioning was carried out, in this state, when required, other basic device configuration parameters can be adapted (e.g. the basic sampling time in p0110).

p0009 = 2: Defines the drive type / function module

In this state, the drive object types and/or the function modules can be changed or selected for the individual drive objects. To do this, the drive object type can be set using p0107[0...15] and the function can be set using p0108[0...15] (refer to p0101[0...15]).

p0009 = 3: Drive basic configuration

In this state, after the device has been commissioned for the first time, basic changes can be made for the individual drive objects (e.g. sampling times in p0111, p0112, p0115 and the number of data sets in p0120, p0130, p0140, p0170, p0180).

p0009 = 4: Data set basic configuration

In this state, after the device has been commissioned for the first time, for the individual drive objects changes can be made regarding the assignment of the components (p0121, p0131, p0141, p0151, p0161) to the individual data sets and the assignment of the power unit, motor and encoder to the drive data sets (p0185, ...).

p0009 = 29: Device download

If a download is made using the commissioning software, the device is automatically brought into this state. After the download has been completed, p0009 is automatically set to 0 (ready). It is not possible to manually set p0009 to this value.

p0009 = 30: Parameter reset

In order to bring the complete unit into the "first commissioning" state or to load the parameters saved using p0977, to start, p0009 must be set to this value. p0976 can then be changed to the required value.

p0009 = 50: configure Technology Extension

After the device has been commissioned for the first time, in this state, Technology Extensions can be activated/deactivated for the individual drive objects (p4956).

p0009 = 55: install Technology Extension

Technology Extensions can be installed/uninstalled in the state.

p0009 = 101: Topology input

In this state, the DRIVE-CLiQ target topology can be entered using p9902 and p9903.

p0009 = 111: Insert drive object

This state allows a new drive object to be inserted using p9911.

p0009 = 112: Delete drive object

This state allows existing drive objects to be deleted using p9912 after the device has been commissioned for the first time.

p0009 = 113: Change drive object number

This state allows the drive object number of existing drive objects to be changed using p9913 after the device has been commissioned for the first time.

## 2 Parameters

### 2.2 List of parameters

p0009 = 114: Change component number

This state allows the component number of existing components to be changed using p9914 after the device has been commissioned for the first time.

p0009 = 115: Parameter download

This state allows the complete device and drive commissioning using the parameter services.

p0009 = 117: Delete component

This state allows components to be deleted using p9917 after the device has been commissioned for the first time.

---

<b>p0010</b>	<b>Drive commissioning parameter filter / Drv comm. par_filt</b>		
VECTOR_G	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2800, 2818
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	10000	1
<b>Description:</b>	Sets the parameter filter to commission a drive. Setting this parameter filters out the parameters that can be written into in the various commissioning steps.		
<b>Value:</b>	0: Ready 1: Quick commissioning 2: Power unit commissioning 3: Motor commissioning 4: Encoder commissioning 5: Technological application/units 15: Data sets 17: Basic positioner commissioning 25: Position control commissioning 29: Only Siemens int 30: Parameter reset 95: Safety Integrated commissioning 10000: Ready with immediate feedback signal		
<b>Notice:</b>	For p0010 = 10000 the following applies: After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.		
<b>Note:</b>	The drive can only be switched on outside the drive commissioning (inverter enable). To realize this, this parameter must be set to 0. By setting p3900 to a value other than 0, the quick commissioning is completed, and this parameter is automatically reset to 0. Procedure for "Reset parameter": Set p0010 to 30 and p0970 to 1. p0010 = 10000 corresponds to p0010 = 0. Unlike with p0010 = 0, the parameter modification is applied immediately and the calculations are made in the background. Further parameter modifications cannot be made while the calculations are being performed.		

---

<b>p0010</b>	<b>Infeed commissioning parameter filter / INF comm par_filt</b>		
B_INF	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	30	1
<b>Description:</b>	Sets the parameter filter to commission an infeed unit. Setting this parameter filters out the parameters that can be written into in the various commissioning steps.		
<b>Value:</b>	0: Ready 1: Quick commissioning 2: Power unit commissioning 5: Technological application/units 29: Only Siemens int 30: Parameter reset		

**Note:** The drive can only be switched on outside the drive commissioning (inverter enable). To realize this, this parameter must be set to 0.  
For p3900 not equal to 0, at the end of the quick commissioning, this parameter is automatically reset to 0.  
Procedure for "Reset parameter": Set p0010 to 30 and p0970 to 1.

---

<b>p0010</b>	<b>TM120 commissioning parameter filter / TM120 com par_filt</b>		
TM120	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	30	0

**Description:** Sets the parameter filter for commissioning a Terminal Module 120 (TM120).  
Setting this parameter filters out the parameters that can be written into in the various commissioning steps.  
For the BOP, this setting also causes the read access operations to be filtered.

**Value:** 0: Ready  
29: Only Siemens int  
30: Parameter reset

**Dependency:** Refer to: p0970

**Note:** Only the following values are possible: p0010 = 0, 30  
Procedure for "Reset parameter": Set p0010 to 30 and p0970 to 1.

---

<b>p0010</b>	<b>TM150 commissioning parameter filter / TM150 com par_filt</b>		
TM150	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	30	0

**Description:** Sets the parameter filter for commissioning a Terminal Module 150 (TM150).  
Setting this parameter filters out the parameters that can be written into in the various commissioning steps.  
For the BOP, this setting also causes the read access operations to be filtered.

**Value:** 0: Ready  
29: Only Siemens int  
30: Parameter reset

**Dependency:** Refer to: p0970

**Note:** Only the following values are possible: p0010 = 0, 30  
Procedure for "Reset parameter": Set p0010 to 30 and p0970 to 1.

---

<b>p0010</b>	<b>TM31 commissioning parameter filter / TM31 comm par_filt</b>		
TM31	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	30	0

**Description:** Sets the parameter filter for commissioning a Terminal Module 31 (TM31).  
Setting this parameter filters out the parameters that can be written into in the various commissioning steps.  
For the BOP, this setting also causes the read access operations to be filtered.

**Value:** 0: Ready  
29: Only Siemens int  
30: Parameter reset

**Dependency:** Refer to: p0970

**Note:** Only the following values are possible: p0010 = 0, 30  
Procedure for "Reset parameter": Set p0010 to 30 and p0970 to 1.

<b>p0010</b>	<b>TB30 commissioning parameter filter / TB30 comm.par_filt</b>		
TB30	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	30	0
<b>Description:</b>	Sets the parameter filter for commissioning a Terminal Board 30 (TB30). Setting this parameter filters out the parameters that can be written into in the various commissioning steps. For the BOP, this setting also causes the read access operations to be filtered.		
<b>Value:</b>	0: Ready 29: Only Siemens int 30: Parameter reset		
<b>Dependency:</b>	Refer to: p0970		
<b>Note:</b>	Procedure for "Reset parameter": Set p0010 to 30 and p0970 to 1.		
<b>p0010</b>	<b>TM54F commissioning parameter filter / TM54F com par_filt</b>		
TM54F_MA	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2891
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	95	0
<b>Description:</b>	Sets the parameter filter for commissioning a Terminal Module 54F (TM54F). Setting this parameter filters out the parameters that can be written into in the various commissioning steps. For the BOP, this setting also causes the read access operations to be filtered.		
<b>Value:</b>	0: Ready 29: Only Siemens int 30: Parameter reset 95: Safety Integrated commissioning		
<b>Dependency:</b>	Refer to: p0970		
<b>Note:</b>	Procedure for "Reset parameter": Set p0010 to 30 and p0970 to 1.		
<b>p0010</b>	<b>Encoder DO commissioning parameter filter / EncDO com par_filt</b>		
ENC	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	30	0
<b>Description:</b>	Sets the parameter filter to commission an encoder drive object. Setting this parameter filters out the parameters that can be written into in the various commissioning steps. For the BOP, this setting also causes the read access operations to be filtered.		
<b>Value:</b>	0: Ready 4: Encoder commissioning 5: Technological application/units 29: Only Siemens int 30: Parameter reset		
<b>Note:</b>	Procedure for "Reset parameter": Set p0010 to 30 and p0970 to 1.		

<b>p0011</b>	<b>BOP password entry (p0013) / BOP passw ent p13</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Functions <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 65535	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the password for the Basic Operator Panel (BOP).		
<b>Dependency:</b>	Refer to: p0012, p0013		
<b>p0012</b>	<b>BOP password acknowledgment (p0013) / BOP passw ackn p13</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Functions <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 65535	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Acknowledges the password for the Basic Operator Panel (BOP).		
<b>Dependency:</b>	Refer to: p0011, p0013		
<b>p0013[0...49]</b>	<b>BOP user-defined list / BOP list</b>		
All objects	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Functions <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 65535	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the required parameters to read and write via the Basic Operator Panel (BOP). Activation: 1. p0003 = 3 (expert). 2. p0013[0...49] = requested parameter number. 3. If required, enter p0011 = password in order to prevent non-authorized deactivation. 4. p0016 = 1 --> activates the selected user-defined list. Deactivation/change: 1. p0003 = 3 (expert). 2. If required, p0012 = p0011, in order to be authorized to change or deactivate the list. 3. If required p0013[0...49] = required parameter number. 4. p0016 = 1 --> activates the modified user-defined list. 5. p0003 = 0 --> deactivates the user-defined list.		
<b>Dependency:</b>	Refer to: p0009, p0011, p0012, p0976		
<b>Note:</b>	The following parameters can be read and written on the Control Unit drive object: - p0003 (access stage) - p0009 (device commissioning, parameter filter) - p0012 (BOP password acknowledgment (p0013)) The following applies for the user-defined list: - password protection is only available on the drive object Control Unit and is valid for all of the drive objects. - p0013 cannot be included in the user-defined list for all drive objects. - p0003, p0009, p0011, p0012, p0976 cannot, for the drive object Control Unit, be included in the user-defined list. - the user-defined list can be cleared and deactivated "restore factory setting". A value of 0 means: Entry is empty.		

## 2 Parameters

### 2.2 List of parameters

---

<b>p0015</b>	<b>Macro drive unit / Macro drv unit</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1 <b>Data type:</b> Unsigned32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 999999	<b>Access level:</b> 1 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Runs the corresponding macro files. The selected macro file must be available on the memory card/device memory. Example: p0015 = 6 --> the macro file PM000006.ACX is run.		
<b>Dependency:</b>	Refer to: p0700, p1000, p1500, r8570		
<b>Notice:</b>	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0. When executing a specific macro, the corresponding programmed settings are made and become active.		
<b>Note:</b>	The macros in the specified directory are displayed in r8570. r8570 is not in the expert list of the commissioning software. Macros available as standard are described in the technical documentation of the particular product.		
<hr/>			
<b>p0015</b>	<b>Macro drive object / Macro DO</b>		
VECTOR_G, B_INF, TM31, TM120, TM150	<b>Can be changed:</b> C2(1) <b>Data type:</b> Unsigned32 <b>P-Group:</b> Commands <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 999999	<b>Access level:</b> 1 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Runs the corresponding macro files. The selected macro file must be available on the memory card/device memory. Example: p0015 = 6 --> the macro file PM000006.ACX is run.		
<b>Dependency:</b>	Refer to: p0700, p1000, p1500, r8570		
<b>Notice:</b>	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0. When executing a specific macro, the corresponding programmed settings are made and become active. No errors were issued during quick commissioning (p3900 = 1) when writing to parameters of the QUICK_IBN group!		
<b>Note:</b>	The macros in the specified directory are displayed in r8570. r8570 is not in the expert list of the commissioning software. Macros available as standard are described in the technical documentation of the particular product.		
<hr/>			
<b>p0016</b>	<b>Activate BOP user-defined list / BOP user list act</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1, U, T <b>Data type:</b> Integer16 <b>P-Group:</b> All groups <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Setting for activating/deactivating the user-defined list for the Basic Operator Panel (BOP). If p0016 = 1, then it is only possible to access parameters in the parameter list (p0013).		
<b>Value:</b>	0: BOP user-defined list deactivated 1: BOP user-defined list activated		
<b>Dependency:</b>	Refer to: p0011, p0012, p0013		
<b>Note:</b>	The user-defined list can only be deactivated with p0011 = p0012		

<b>r0018</b>	<b>Control Unit firmware version / CU FW version</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	-
<b>Description:</b>	Displays the firmware version of the Control Unit.		
<b>Dependency:</b>	Refer to: r0128, r0148, r0158, r0197, r0198		
<b>Note:</b>	Example: The value 1010100 should be interpreted as V01.01.01.00.		

<b>r0019.0...14</b>	<b>CO/BO: Control word BOP / STW BOP</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9912		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the control word for the Basic Operator Panel (BOP).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	ON / OFF (OFF1)	ON	OFF (OFF1)	-
	01	No coast-down / coast-down (OFF2)	No coast down	Coast down (OFF2)	-
	02	No Quick Stop / Quick Stop (OFF3)	No Quick Stop	Quick Stop (OFF3)	-
	07	Acknowledge fault (0 -> 1)	Yes	No	-
	13	Motorized potentiometer raise	Yes	No	-
	14	Motorized potentiometer lower	Yes	No	-

<b>r0020</b>	<b>Speed setpoint smoothed / n_set smth</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5020, 6799
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the currently smoothed speed setpoint at the input of the speed controller or U/f characteristic (after the interpolator).		
<b>Dependency:</b>	Refer to: r0060		
<b>Note:</b>	Smoothing time constant = 100 ms The signal is not suitable as a process quantity and may only be used as a display quantity. The speed setpoint is available smoothed (r0020) and unsmoothed (r0060).		

<b>r0021</b>	<b>CO: Actual speed smoothed / n_act smooth</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6799
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the smoothed actual value of the motor speed. Frequency components from the slip compensation (for induction motors) are not included.		
<b>Dependency:</b>	Refer to: r0022, r0063		

## 2 Parameters

### 2.2 List of parameters

**Note:** Smoothing time constant = 100 ms  
The signal is not suitable as a process quantity and may only be used as a display quantity.  
The speed actual value is available smoothed (r0021, r0022) and unsmoothed (r0063).

---

#### r0022 Speed actual value rpm smoothed / n\_act rpm smooth

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6799
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]

**Description:** Displays the smoothed actual value of the motor speed.  
Frequency components from the slip compensation (for induction motors) are not included.  
r0022 is identical to r0021, however, it always has units of rpm and contrary to r0021 cannot be changed over.

**Dependency:** Refer to: r0021, r0063

**Note:** Smoothing time constant = 100 ms  
The signal is not suitable as a process quantity and may only be used as a display quantity.  
The speed actual value is available smoothed (r0021, r0022) and unsmoothed (r0063).

---

#### r0024 Output frequency smoothed / f\_outp smooth

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6300, 6799
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Hz]	- [Hz]	- [Hz]

**Description:** Display of the smoothed output frequency.  
Frequency components from the slip compensation (for induction motors) are included.

**Dependency:** Refer to: r0066

**Note:** Smoothing time constant = 100 ms  
The signal is not suitable as a process quantity and may only be used as a display quantity.  
The output frequency is available smoothed (r0024) and unsmoothed (r0066).

---

#### r0025 CO: Output voltage smoothed / U\_outp smooth

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5730, 6300, 6799
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]

**Description:** Displays the smoothed output voltage of the power unit.

**Dependency:** Refer to: r0072

**Note:** Smoothing time constant = 100 ms  
The signal is not suitable as a process quantity and may only be used as a display quantity.  
The output voltage is available smoothed (r0025) and unsmoothed (r0072).

<b>r0026</b>	<b>CO: DC link voltage smoothed / Vdc smooth</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6799, 8750, 8850, 8950
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the smoothed actual value of the DC link voltage.		
<b>Dependency:</b>	Refer to: r0070		
<b>Notice:</b>	For SINAMICS S120 AC Drive (AC/AC) the following applies: When measuring a DC link voltage < 200 V, for the Power Module (e.g. PM340) a valid measured value is not supplied. In this case, when an external 24 V power supply is connected, a value of approx. 24 V is displayed in the display parameter.		
<b>Note:</b>	SERVO, VECTOR: Smoothing time constant = 100 ms The signal is not suitable as a process quantity and may only be used as a display quantity. The DC link voltage is available smoothed (r0026) and unsmoothed (r0070).		

<b>r0026</b>	<b>CO: DC link voltage smoothed / Vdc smooth</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5730, 6799, 8750, 8850, 8950
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the smoothed actual value of the DC link voltage.		
<b>Dependency:</b>	Refer to: r0070		
<b>Notice:</b>	This smoothed signal is not suitable for diagnostics or evaluation of dynamic operations. In this case, the unsmoothed value should be used.		
<b>Note:</b>	A_INF, B_INF, S_INF: smoothing time constant = 300 ms The signal is not suitable as a process quantity and may only be used as a display quantity. The DC link voltage is available smoothed (r0026) and unsmoothed (r0070).		

<b>r0027</b>	<b>CO: Absolute actual current smoothed / I_act abs val smth</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5730, 6799, 8850, 8950
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the smoothed absolute actual current value.		
<b>Dependency:</b>	Refer to: r0068		
<b>Notice:</b>	This smoothed signal is not suitable for diagnostics or evaluation of dynamic operations. In this case, the unsmoothed value should be used.		
<b>Note:</b>	A_INF, S_INF, VECTOR: Smoothing time constant = 300 ms SERVO: Smoothing time constant = 100 ms The signal is not suitable as a process quantity and may only be used as a display quantity. The absolute current actual value is available smoothed (r0027) and unsmoothed (r0068).		

<b>r0027</b>	<b>CO: Absolute actual current smoothed / I_act abs val smth</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8750
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_4	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the smoothed absolute actual current value.		
<b>Dependency:</b>	Refer to: r0068		
<b>Notice:</b>	This smoothed signal is not suitable for diagnostics or evaluation of dynamic operations. In this case, the unsmoothed value should be used. For Basic Line Modules of chassis format, the displayed value is invalid as these units do not have any current sensing.		
<b>Note:</b>	Smoothing time constant = 300 ms The signal is not suitable as a process quantity and may only be used as a display quantity. The absolute current actual value is available smoothed (r0027) and unsmoothed (r0068).		
<b>r0028</b>	<b>Modulation depth smoothed / Mod_depth smth</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5730, 6799, 8950
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the smoothed actual value of the modulation depth.		
<b>Dependency:</b>	Refer to: r0074		
<b>Note:</b>	A_INF: Smoothing time constant = 300 ms SERVO, VECTOR: Smoothing time constant = 100 ms The signal is not suitable as a process quantity and may only be used as a display quantity. The modulation depth is available smoothed (r0028) and unsmoothed (r0074).		
<b>r0029</b>	<b>Current actual value field-generating smoothed / Id_act smooth</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5730, 6799
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the smoothed field-generating actual current.		
<b>Dependency:</b>	Refer to: r0076		
<b>Note:</b>	SERVO: Smoothing time constant = 100 ms VECTOR: Smoothing time constant = 300 ms The signal is not suitable as a process quantity and may only be used as a display quantity. The field-generating current actual value is available smoothed (r0029) and unsmoothed (r0076).		

<b>r0030</b>	<b>Current actual value torque-generating smoothed / Iq_act smooth</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [Arms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> p2002 <b>Max</b> - [Arms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 5730, 6799 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [Arms]
<b>Description:</b>	Displays the smoothed torque-generating actual current.		
<b>Dependency:</b>	Refer to: r0078		
<b>Note:</b>	SERVO: Smoothing time constant = 100 ms VECTOR: Smoothing time constant = 300 ms The signal is not suitable as a process quantity and may only be used as a display quantity. The following applies for SERVO: The torque-generating current actual value is available smoothed (r0030 with 100 ms, r0078[1] with p0045) and unsmoothed (r0078[0]). The following applies for VECTOR: The torque-generating current actual value is available smoothed (r0030 with 300 ms) and unsmoothed (r0078).		
<b>r0031</b>	<b>Actual torque smoothed / M_act smooth</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [Nm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 7_1 <b>Scaling:</b> p2003 <b>Max</b> - [Nm]	<b>Access level:</b> 2 <b>Func. diagram:</b> 5730, 6799 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Nm]
<b>Description:</b>	Displays the smoothed torque actual value.		
<b>Dependency:</b>	Refer to: r0080		
<b>Note:</b>	Smoothing time constant = 100 ms The signal is not suitable as a process quantity and may only be used as a display quantity. The torque actual value is available smoothed (r0031) and unsmoothed (r0080).		
<b>r0032</b>	<b>CO: Active power actual value smoothed / P_actv_act smth</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [kW]	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> 14_10 <b>Scaling:</b> r2004 <b>Max</b> - [kW]	<b>Access level:</b> 2 <b>Func. diagram:</b> 5730, 6799, 8750, 8850, 8950 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [kW]
<b>Description:</b>	Display and connector output for the smoothed actual value of the active power.		
<b>Dependency:</b>	Refer to: r0082		
<b>Notice:</b>	This smoothed signal is not suitable for diagnostics or evaluation of dynamic operations. In this case, the unsmoothed value should be used.		
<b>Note:</b>	Significance for the drive: Power output at the motor shaft Significance for the infeed: Line power drawn For A_INF, B_INF and S_INF the following applies: The active power is available smoothed (r0032 with 300 ms) and unsmoothed (r0082). The following applies for SERVO: The active power is available smoothed (r0032 with 100 ms, r0082[1] with p0045) and unsmoothed (r0082[0]). For VECTOR and VECTORMV, the following applies: The active power is available smoothed (r0032 with 100 ms) and unsmoothed (r0082).		

---

<b>r0032</b>	<b>CO: Active power actual value smoothed / P_actv_act smth</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5730, 6799, 8750, 8850, 8950
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 14_10	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> r2004	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [kW]	- [kW]	- [kW]
<b>Description:</b>	Display and connector output for the smoothed actual value of the active power.		
<b>Dependency:</b>	Refer to: r0082		
<b>Notice:</b>	This smoothed signal is not suitable for diagnostics or evaluation of dynamic operations. In this case, the unsmoothed value should be used.		
	For Basic Line Modules of chassis format, the displayed value is invalid as these units do not have any current sensing.		
<b>Note:</b>	Significance for the drive: Power output at the motor shaft		
	Significance for the infeed: Line power drawn		
	For A_INF, B_INF and S_INF the following applies:		
	The active power is available smoothed (r0032 with 300 ms) and unsmoothed (r0082).		
	The following applies for SERVO:		
	The active power is available smoothed (r0032 with 100 ms, r0082[1] with p0045) and unsmoothed (r0082[0]).		
	For VECTOR and VECTORMV, the following applies:		
	The active power is available smoothed (r0032 with 100 ms) and unsmoothed (r0082).		

---

<b>r0033</b>	<b>Torque utilization smoothed / M_util smooth</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8012
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the smoothed torque utilization as a percentage.		
	The torque utilization is obtained from the required smoothed torque in reference to the torque limit, scaled using p2196.		
<b>Note:</b>	Smoothing time constant = 100 ms		
	The signal is not suitable as a process quantity and may only be used as a display quantity.		
	The torque utilization is available smoothed (r0033) and unsmoothed (r0081).		
	For M_set total (r0079) > 0, the following applies:		
	- Required torque = M_set total		
	- Actual torque limit = M_max upper effective (r1538)		
	For M_set total (r0079) <= 0, the following applies:		
	- Required torque = - M_set total		
	- Actual torque limit = - M_max lower effective (r1539)		
	For the actual torque limit = 0, the following applies: r0033 = 100 %		
	For the actual torque limit < 0, the following applies: r0033 = 0 %		

<b>r0034</b>		<b>CO: Motor utilization thermal / Mot_util therm</b>	
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> ASM, SESM, REL <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> - [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 8017, 8019 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	Display and connector output for the motor utilization from motor temperature model 1 (I2t) or 3. For motor temperature model 1 (I2t) (p0612.0 = 1), the following applies: For firmware version < 4.7 SP6 or p0612.12 = 0: $- r0034 = (\text{motor model temperature} - 40 \text{ K}) / (\text{p0605} - 40 \text{ K}) * 100 \%$ From firmware version 4.7 SP6 and p0612.12 = 1: $- r0034 = (\text{motor model temperature} - \text{p0613}) / (\text{p0605} - \text{p0613}) * 100 \%$ For motor temperature model 3 (p0612.2 = 1), the following applies: $- r0034 = (\text{motor model temperature} - \text{p5397}) / (\text{p5398} - \text{p5397}) * 100 \%$		
<b>Dependency:</b>	The thermal motor utilization is only determined when the motor temperature model 1 (I2t) or 3 is activated. The following conditions are a prerequisite for additional information. - a temperature sensor has not been parameterized (p0600, p0601). - the current corresponds to the stall current (p0318). - speed $n > 1$ [rpm]. For firmware version < 4.7 SP6 or p0612.12 = 0, the following applies: - the temperature model operates with an ambient temperature of 20 °C. A motor utilization of 100% is displayed (r0034 = 100 %) when the following conditions are permanently fulfilled: - the ambient temperature is 40 °C (model 1: p0625 = 40 °C, model 3: p0613 = 40 °C). From firmware version 4.7 SP6 and p0612.12 = 1, the following applies: - the ambient temperature can be adapted to the conditions using p0613. Refer to: p0605, p0611, p0612, p0613, p0627, r0632 Refer to: F07011, A07012		
<b>Notice:</b>	After the drive is switched on, the system starts to determine the motor temperature with an assumed model value. This means that the value for the motor utilization is only valid after a stabilization time.		
<b>Note:</b>	Smoothing time constant = 100 ms The signal is not suitable as a process quantity and may only be used as a display quantity. For r0034 = -200.0 %, the following applies: The value is invalid (e.g. the motor temperature model is not activated or has been incorrectly parameterized).		

<b>r0035</b>		<b>CO: Motor temperature / Mot temp</b>	
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [°C]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 21_1 <b>Scaling:</b> p2006 <b>Max</b> - [°C]	<b>Access level:</b> 2 <b>Func. diagram:</b> 8016, 8017 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [°C]
<b>Description:</b>	Display and connector output for the actual temperature in the motor.		
<b>Note:</b>	For r0035 not equal to -200.0 °C, the following applies: - this temperature display is valid. - a KTY/PT1000 temperature sensor is connected. - the thermal model for the induction motor is activated (p0612 bit 1 = 1 and temperature sensor deactivated: p0600 = 0 or p0601 = 0). For r0035 equal to -200.0 °C, the following applies: - this temperature display is not valid (temperature sensor error). - a PTC sensor or bimetallic NC contact is connected. - the temperature sensor of the synchronous motor is deactivated (p0600 = 0 or p0601 = 0).		

<b>r0035</b>	<b>CO: Temperature input / Temp_input</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8750
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	<p>Displays the temperature currently measured at X21 (booksize) or X41 (chassis).</p> <p>For a BLM with internal Braking Module, a bimetallic sensor must be connected up to monitor the temperature of the braking resistor. The temperature sensor type is indicated using p0601 and cannot be changed for the existing internal Braking Module.</p> <p>Temperature within permissible limit values: r0035 = -50°C</p> <p>Temperature outside the permissible limit values: r0035 = 250°C</p>		
<b>Dependency:</b>	Refer to: F06907, F06908		
<b>Notice:</b>	The function in r0192.11 must be available in order to obtain a correct display.		
<b>Note:</b>	<p>For r0035 equal to -200.0 °C, the following applies:</p> <ul style="list-style-type: none"> <li>- "no sensor" selected in p0601!</li> </ul> <p>For r0035 equal to -300.0 °C, the following applies:</p> <ul style="list-style-type: none"> <li>- a KTY/PT1000 is selected in p0601 but is not connected!</li> <li>- the temperature display is not valid (temperature sensor error)!</li> </ul>		
<b>r0036</b>	<b>CO: Power unit overload I2t / PU overload I2t</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8021
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	<p>Displays the power unit overload determined using the I2t calculation.</p> <p>A current reference value is defined for the I2t monitoring of the power unit. It represents the current that can be conducted by the power unit without any influence of the switching losses (e.g. the continuously permissible current of the capacitors, inductances, busbars, etc.).</p> <p>If the I2t reference current of the power unit is not exceeded, then an overload (0 %) is not displayed.</p> <p>In the other case, the degree of thermal overload is calculated, whereby 100% results in a trip.</p>		
<b>Dependency:</b>	<p>Refer to: p0290, p0294</p> <p>Refer to: F30005</p>		
<b>r0037[0...1]</b>	<b>Control Unit temperature / CU temp</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	<p>Displays the measured Control Unit temperature.</p> <p>An appropriate message is output when the permitted operating temperature is exceeded.</p>		
<b>Index:</b>	<p>[0] = Actual measured value</p> <p>[1] = Maximum measured value</p>		
<b>Dependency:</b>	Refer to: A01009		
<b>Notice:</b>	Only for internal Siemens troubleshooting.		
<b>Note:</b>	The value of -200 indicates that there is no measuring signal.		

<b>r0037[0...19]</b>		<b>CO: Power unit temperatures / PU temperatures</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [°C]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 21_1 <b>Scaling:</b> p2006 <b>Max</b> - [°C]	<b>Access level:</b> 3 <b>Func. diagram:</b> 8021 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [°C]	
<b>Description:</b>	Display and connector output for the temperature in the power unit.			
<b>Index:</b>	[0] = Inverter maximum value [1] = Depletion layer maximum value [2] = Rectifier maximum value [3] = Air intake [4] = Interior of power unit [5] = Inverter 1 [6] = Inverter 2 [7] = Inverter 3 [8] = Inverter 4 [9] = Inverter 5 [10] = Inverter 6 [11] = Rectifier 1 [12] = Rectifier 2 [13] = Depletion layer 1 [14] = Depletion layer 2 [15] = Depletion layer 3 [16] = Depletion layer 4 [17] = Depletion layer 5 [18] = Depletion layer 6 [19] = Cooling unit liquid intake			
<b>Notice:</b>	Only for internal Siemens troubleshooting.			
<b>Note:</b>	The value of -200 indicates that there is no measuring signal. r0037[0]: Maximum value of the inverter temperatures (r0037[5...10]). r0037[1]: Maximum value of the depletion layer temperatures (r0037[13...18]). r0037[2]: Maximum value of the rectifier temperatures (r0037[11...12]). The maximum value is the temperature of the hottest inverter, depletion layer, or rectifier. In the case of a fault, the particular shutdown threshold depends on the power unit, and cannot be read out.			
<b>r0038</b>		<b>Power factor smoothed / Cos phi smooth</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 6799, 8850, 8950 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -	
<b>Description:</b>	Displays the smoothed actual power factor.			
<b>Notice:</b>	For infeed units, the following applies: For active powers < 25 % of the rated power, this does not provide any useful information.			
<b>Note:</b>	Smoothing time constant = 300 ms The signal is not suitable as a process quantity and may only be used as a display quantity. Meaning for motor: - power factor of the basic fundamental signals at the converter output. Meaning for infeed: - Power factor at the connection point (r3470, r3471)			

<b>r0039[0...2] CO: Energy display / Energy displ</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [kWh]	- [kWh]	- [kWh]
<b>Description:</b>	Displays the energy values at the output terminals of the power unit.		
<b>Index:</b>	[0] = Energy balance (sum) [1] = Energy drawn [2] = Energy fed back		
<b>Dependency:</b>	Refer to: p0040		
<b>Note:</b>	For index 0: Difference between the energy drawn and energy that is fed back.		
<hr/>			
<b>p0040 Reset energy consumption display / Energy usage reset</b>			
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Setting to reset the display in r0039 and r0041. Procedure: Set p0040 = 0 --> 1 The displays are reset and the parameter is automatically set to zero.		
<b>Dependency:</b>	Refer to: r0039		
<hr/>			
<b>r0041 Energy consumption saved / Energy cons saved</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [kWh]	- [kWh]	- [kWh]
<b>Description:</b>	Displays the saved energy referred to 100 operating hours.		
<b>Dependency:</b>	Refer to: p0040		
<b>Note:</b>	This display is used for a fluid-flow machine. The flow characteristic is entered into p3320 ... p3329. For an operating time of below 100 hours, the display is interpolated up to 100 hours.		
<hr/>			
<b>r0042[0...2] CO: Process energy display / Proc energy disp</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Wh]	- [Wh]	- [Wh]
<b>Description:</b>	Display and connector output for the energy values at the output terminals of the power unit.		
<b>Index:</b>	[0] = Energy balance (sum) [1] = Energy drawn [2] = Energy fed back		
<b>Dependency:</b>	Refer to: p0043		

**Note:** The signal can be displayed as process variable (scaling: 1 = 1 Wh).  
This is enabled in p0043.  
The display is also reset with p0040 = 1.  
If an enable is present in r0043 when the Control Unit powers up, then the value from r0039 is transferred into r0042.  
As r0039 serves as a reference signal for r0042, due to format reasons, the process energy display can only process values of r0039 up to 2147483 kWh. r0039 should also be reset using this value.

<b>p0043</b>		<b>BI: Enable energy usage display / Enab energy usage</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0	
<b>Description:</b>	Sets the signal source to enable/reset the process energy display in r0042. BI: p0043 = 1 signal: The process energy display is enabled in r0042.			
<b>Dependency:</b>	Refer to: r0042			

<b>p0045</b>		<b>Display values smoothing time constant / Disp_val T_smooth</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4715, 5610, 5730, 6714, 8012	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.00 [ms]	10000.00 [ms]	1.00 [ms]	
<b>Description:</b>	Sets the smoothing time constant for the following display values: SERVO: r0078[1], r0079[1], r0081 (calculated from the quantities smoothed with p0045), r0082[1]. VECTOR: r0063[1], r0068[1], r0080[1], r0082[1].			

<b>r0046.0...31</b>		<b>CO/BO: Missing enable sig / Missing enable sig</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2634	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	

**Description:** Display and BICO output for missing enable signals that are preventing the closed-loop drive control from being commissioned.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	OFF1 enable missing	Yes	No	7954
	01	OFF2 enable missing	Yes	No	-
	02	OFF3 enable missing	Yes	No	-
	03	Operation enable missing	Yes	No	-
	04	Armature short-circuit / DC braking enable missing	Yes	No	-
	05	STOP2 enable missing	Yes	No	-
	08	Safety enable missing	Yes	No	-
	09	Infeed enable missing	Yes	No	-
	10	Ramp-function generator enable missing	Yes	No	-
	11	Ramp-function generator start missing	Yes	No	-
	12	Setpoint enable missing	Yes	No	-
	15	QuickStop enable missing	Yes	No	-
	16	OFF1 enable internal missing	Yes	No	-
	17	OFF2 enable internal missing	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

18	OFF3 enable internal missing	Yes	No	-
19	Pulse enable internal missing	Yes	No	-
20	Armature short-circuit/DC braking internal enable missing	Yes	No	-
21	STOP2 enable internal missing	Yes	No	-
25	Function bypass active	Yes	No	-
26	Drive inactive or not operational	Yes	No	-
27	De-magnetizing not completed	Yes	No	-
28	Brake open missing	Yes	No	-
29	Cooling unit ready signal missing	Yes	No	-
30	Speed controller inhibited	Yes	No	-
31	Jog setpoint active	Yes	No	-

**Dependency:**

Refer to: r0002

**Note:**

The value r0046 = 0 indicates that all enable signals for this drive are present.

Bit 00 = 1 (enable signal missing), if:

- the signal source in p0840 is a 0 signal.
- there is a "switching-on inhibited".

Bit 01 = 1 (enable signal missing), if:

- the signal source in p0844 or p0845 is a 0 signal.

Bit 02 = 1 (enable signal missing), if:

- the signal source in p0848 or p0849 is a 0 signal.

Bit 03 = 1 (enable signal missing), if:

- the signal source in p0852 is a 0 signal.

Bit 04 = 1 (armature short-circuit active), if:

- the signal source in p1230 has a 1 signal

Bit 05, Bit 06: Being prepared

Bit 08 = 1 (enable signal missing), if:

- safety functions have been enabled and STO is active.
- a safety-relevant signal is present with a STOP A response.

STO enabled via terminals:

- the pulse enable via terminal EP is missing (booksize: X21, chassis: X41), or the signal source in p9620 is for a 0 signal.

STO enabled via PROFIsafe or TM54F:

- STO is selected via PROFIsafe or TM54F.

Bit 09 = 1 (enable signal missing), if:

- the signal source in p0864 is a 0 signal.

Bit 10 = 1 (enable signal missing), if:

- the signal source in p1140 is a 0 signal.

Bit 11 = 1 (enable signal missing) if the speed setpoint is frozen, because:

- the signal source in p1141 is a 0 signal.
- the speed setpoint is entered from jogging and the two signal sources for jogging, bit 0 (p1055) and bit 1 (p1056) have a 1 signal.

Bit 12 = 1 (enable signal missing), if:

- the signal source in p1142 is a 0 signal.
- When activating the function module "basic positioner" (r0108.4 = 1), the signal source in p1142 is set to a 0 signal.

Bit 16 = 1 (enable signal missing), if:

- there is an OFF1 fault response. The system is only enabled if the fault is removed and was acknowledged and the "switching-on inhibited" withdrawn with OFF1 = 0.

Bit 17 = 1 (enable signal missing), if:

- commissioning mode is selected (p0009 > 0 or p0010 > 0).
- there is an OFF2 fault response.
- the drive is inactive (p0105 = 0) or is not operational (r7850[DO-Index]=0).

Bit 18 = 1 (enable signal missing), if:

- OFF3 has still not been completed or an OFF3 fault response is present.

Bit 19 = 1 (internal pulse enable missing), if:

- synchronization is running between the basic clock cycle, DRIVE-CLiQ clock cycle and application clock cycle.

- Bit 20 = 1 (internal armature short-circuit active), if:
- the drive is not in the state "S4: Operation" or "S5x" (refer to function diagram 2610).
  - the internal pulse enable is missing (r0046.19 = 0).
- Bit 21 = 1 (enable signal missing), if:
- The pulses have been enabled and the speed setpoint has still not been enabled, because:
- the holding brake opening time (p1216) has still not expired.
  - the motor has still not been magnetized (induction motor).
  - the encoder has not been calibrated (U/f vector and synchronous motor)
- Bit 22: Being prepared
- Bit 26 = 1 (enable signal missing), if:
- the drive is inactive (p0105 = 0) or is not operational (r7850[DO-Index]=0).
  - the function "parking axis" is selected (BI: p0897 = 1 signal)..
  - all power units of a parallel connection are deactivated (p0125, p0895).
- Bit 27 = 1 (enable signal missing), if:
- de-magnetizing has still not been completed (only for vector).
- Bit 28 = 1 (enable signal missing), if:
- the holding brake is closed or has still not been opened.
- Bit 29 = 1 (enable signal missing), if:
- the cooling unit ready signal via binector input p0266[1] missing.
- Bit 30 = 1 (speed controller inhibited), if one of the following reasons is present:
- a 0 signal is available via binector input p0856.
  - the function generator with current input is active.
  - the measuring function "current controller reference frequency characteristic" is active.
  - the pole position identification is active.
  - motor data identification is active (only certain steps).
- Bit 31 = 1 (enable signal missing), if:
- the speed setpoint from jog 1 or 2 is entered.

**r0046.0...29****CO/BO: Missing enable sig / Missing enable sig**

B\_INF

**Can be changed:** -**Calculated:** -**Access level:** 1**Data type:** Unsigned32**Dyn. index:** -**Func. diagram:** 8734**P-Group:** Displays, signals**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Display and BICO output for missing enable signals that are preventing the closed-loop infeed control from being commissioned.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	OFF1 enable missing	Yes	No	-
01	OFF2 enable missing	Yes	No	-
08	EP terminals enable missing	Yes	No	-
16	OFF1 enable internal missing	Yes	No	-
17	OFF2 enable internal missing	Yes	No	-
26	Infeed inactive or not operational	Yes	No	-
29	Cooling unit ready signal missing	Yes	No	-

**Dependency:**

Refer to: r0002

**Note:**

The value r0046 = 0 indicates that all enable signals for the infeed are present.

Bit 00 = 1 (enable signal missing), if:

- the signal source in p0840 is a 0 signal.
- there is a "switching-on inhibited".

Bit 01 = 1 (enable signal missing), if:

- the signal source in p0844 or p0845 is a 0 signal.

Bit 16 = 1 (enable signal missing), if:

- there is an OFF1 fault response. The system is only enabled if the fault is removed and was acknowledged and the "switching-on inhibited" withdrawn with OFF1 = 0.

## 2 Parameters

### 2.2 List of parameters

Bit 17 = 1 (enable signal missing), if:

- the commissioning mode is selected (p0009 > 0 or p0010 > 0) or there is an OFF2 fault response or the OFF1 signal source (p0840) is changed.

Bit 26 = 1 (enable signal missing), if:

- the infeed is inactive (p0105 = 0) or is not operational (r7850[DO-Index]=0).

Bit 29 = 1 (enable signal missing), if:

- the cooling unit ready signal via binector input p0266[1] missing.

<b>r0047 Motor data identification and speed controller optimization / MotID and n_opt</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	300	-
<b>Description:</b>	Displays the actual status for the motor data identification (stationary measurement) and the speed/velocity controller optimization (rotating measurement).		
<b>Value:</b>	0: No measurement 115: Measurement q leakage inductance (part 2) 120: Speed controller optimization (vibration test) 140: Calculate speed controller setting 150: Measurement moment of inertia 170: Measurement magnetizing current and saturation characteristic 190: Speed encoder test 195: Measurement q leakage inductance (part 1) 200: Rotating measurement selected 210: Pole position identification selected 220: identification leakage inductance 230: Identification rotor time constant 240: Identification stator inductance 250: Identification stator inductance LQLD 260: Identification circuit 270: Identification stator resistance 290: Identification valve lockout time 300: Stationary measurement selected		
<b>Note:</b>	For r0047 = 300: This value is also displayed if encoder calibration p1990 is selected.		

<b>r0049[0...3] Motor data set/encoder data set effective / MDS/EDS effective</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8565
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the effective Motor Data Set (MDS) and the effective Encoder Data Sets (EDS).		
<b>Index:</b>	[0] = Motor Data Set MDS effective [1] = Encoder 1 Encoder Data Set EDS effective [2] = Encoder 2 Encoder Data Set EDS effective [3] = Encoder 3 Encoder Data Set EDS effective		
<b>Dependency:</b>	Refer to: p0186, p0187, p0188, p0189, r0838		
<b>Note:</b>	Value 99 means the following: No encoder assigned (not configured).		

**r0050.0...3 CO/BO: Command Data Set CDS effective / CDS effective**

VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8560
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the effective Command Data Set (CDS).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	CDS eff bit 0	ON	OFF	-
	01	CDS eff bit 1	ON	OFF	-
	02	CDS eff bit 2	ON	OFF	-
	03	CDS eff bit 3	ON	OFF	-

**Dependency:** Refer to: p0810, p0811, r0836

**Note:** The Command Data Set selected using a binector input (e.g. p0810) is displayed using r0836.

**r0051.0...4 CO/BO: Drive Data Set DDS effective / DDS effective**

VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8565
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the effective Drive Data Set (DDS).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DDS eff bit 0	ON	OFF	-
	01	DDS eff bit 1	ON	OFF	-
	02	DDS eff bit 2	ON	OFF	-
	03	DDS eff bit 3	ON	OFF	-
	04	DDS eff bit 4	ON	OFF	-

**Dependency:** Refer to: p0820, p0821, p0822, p0823, p0824, r0837

**Note:** The drive data set changeover is suppressed when selecting the motor identification, during the rotating measurement, the encoder calibration and the friction characteristic record.

**r0056.0...15 CO/BO: Status word, closed-loop control / ZSW cl-loop ctrl**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2526
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and BICO output for the status word of the closed-loop control.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Initialization completed	Yes	No	-
	01	De-magnetizing completed	Yes	No	-
	02	Pulse enable available	Yes	No	-
	03	Soft starting present	Yes	No	-
	04	Magnetizing completed	Yes	No	-
	05	Voltage boost when starting	Active	Inactive	6301
	06	Acceleration voltage	Active	Inactive	6301
	07	Frequency negative	Yes	No	6719
	08	Field weakening active	Yes	No	-
	09	Voltage limit active	Yes	No	6714
	10	Slip limit active	Yes	No	6310

## 2 Parameters

### 2.2 List of parameters

11	Frequency limit active	Yes	No	6719
12	Current limiting controller voltage output active	Yes	No	-
13	Current/torque limiting	Active	Inactive	6060
14	Vdc_max controller active	Yes	No	6220, 6320
15	Vdc_min controller active	Yes	No	6220, 6320

#### r0060

#### CO: Speed setpoint before the setpoint filter / n\_set before filt.

VECTOR\_G

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** FloatingPoint32

**Dyn. index:** -

**Func. diagram:** 2701, 2704, 5020, 6030, 6799

**P-Group:** Displays, signals

**Unit group:** 3\_1

**Unit selection:** p0505

**Not for motor type:** -

**Scaling:** p2000

**Expert list:** 1

**Min**

**Max**

**Factory setting**

- [rpm]

- [rpm]

- [rpm]

**Description:**

Displays the actual speed setpoint at the input of the speed controller or U/f characteristic (after the interpolator).

**Dependency:**

Refer to: r0020

**Note:**

The speed setpoint is available smoothed (r0020) and unsmoothed (r0060).

#### r0061[0...2]

#### CO: Actual speed unsmoothed / n\_act unsmoothed

VECTOR\_G

**Can be changed:** -

**Calculated:** -

**Access level:** 2

**Data type:** FloatingPoint32

**Dyn. index:** -

**Func. diagram:** 4700, 4710, 4715

**P-Group:** Displays, signals

**Unit group:** 3\_1

**Unit selection:** p0505

**Not for motor type:** -

**Scaling:** p2000

**Expert list:** 1

**Min**

**Max**

**Factory setting**

- [rpm]

- [rpm]

- [rpm]

**Description:**

Displays the actual speed values sensed by the encoders.

**Index:**

[0] = Encoder 1

[1] = Encoder 2

[2] = Encoder 3

**Note:**

With a parameterized filter time constant p1441, the speed signal from encoder 1 is displayed corrected by the following error.

The speeds from encoder 2 and 3 are only displayed in U/f operating modes if the function module (speed/torque control) (r0108.2) has been activated.

#### r0061

#### CO: Actual speed unsmoothed / n\_act unsmoothed

ENC

**Can be changed:** -

**Calculated:** -

**Access level:** 2

**Data type:** FloatingPoint32

**Dyn. index:** -

**Func. diagram:** 4700, 4710, 4715

**P-Group:** Displays, signals

**Unit group:** 3\_1

**Unit selection:** p0505

**Not for motor type:** -

**Scaling:** p2000

**Expert list:** 1

**Min**

**Max**

**Factory setting**

- [rpm]

- [rpm]

- [rpm]

**Description:**

Displays the unsmoothed actual speed values sensed by the encoders.

**Note:**

The speed actual value within a PROFIBUS cycle (r2064[1]) is averaged and displayed.

<b>r0061</b>	<b>CO: Actual velocity unsmoothed / v_act unsmoothed</b>		
ENC (Lin_enc)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 2 <b>Func. diagram:</b> 4700, 4710, 4715
	<b>P-Group:</b> Displays, signals <b>Not for motor type:</b> -	<b>Unit group:</b> 4_1 <b>Scaling:</b> p2000	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> - [m/min]	<b>Max</b> - [m/min]	<b>Factory setting</b> - [m/min]
<b>Description:</b>	Displays the unsmoothed actual velocity values sensed by the encoders.		
<b>Note:</b>	The velocity actual value within a PROFIBUS cycle (r2064[1]) is averaged and displayed.		
<b>r0062</b>	<b>CO: Speed setpoint after the filter / n_set after filter</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 6020, 6030, 6031
	<b>P-Group:</b> Displays, signals <b>Not for motor type:</b> -	<b>Unit group:</b> 3_1 <b>Scaling:</b> p2000	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> - [rpm]	<b>Max</b> - [rpm]	<b>Factory setting</b> - [rpm]
<b>Description:</b>	Display and connector output for the speed setpoint after the setpoint filters.		
<b>r0063[0...2]</b>	<b>CO: Speed actual value / n_act</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 4702, 4715, 6799
	<b>P-Group:</b> Displays, signals <b>Not for motor type:</b> -	<b>Unit group:</b> 3_1 <b>Scaling:</b> p2000	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> - [rpm]	<b>Max</b> - [rpm]	<b>Factory setting</b> - [rpm]
<b>Description:</b>	Display and connector output for the speed actual value. Frequency components from the slip compensation (for induction motors) are not included. For U/f control and when slip compensation is deactivated (see p1335), the synchronous speed to the output frequency is shown in r0063[0].		
<b>Index:</b>	[0] = Unsmoothed [1] = Smoothed with p0045 [2] = Calculated from f_set - f_slip (unsmoothed)		
<b>Dependency:</b>	Refer to: r0021, r0022		
<b>Note:</b>	The speed actual value is calculated in encoderless operation and for U/f control. For operation with encoder, r0063[0] is smoothed with p1441. The speed actual value r0063[0] – smoothed with p0045 – is additionally displayed in r0063[1]. r0063[1] can be used as process variable for the appropriate smoothing time constant p0045. The speed (r0063[2]) calculated from the output frequency and slip can only be compared with the speed actual value (r0063[0]) in the steady-state. The actual speed (r0063[0]) is available as a display quantity with additional smoothing in r0021. For U/f control, the mechanical speed calculated from the output frequency and the slip is shown in r0063[2] even if slip compensation is deactivated.		

<b>r0064</b>	<b>CO: Speed controller system deviation / n_ctrl sys dev</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5040, 6040
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the actual system deviation of the speed controller.		
<b>Note:</b>	In servo control mode with active reference model, the system deviation to the P component of the speed controller is displayed.		
<b>r0065</b>	<b>Slip frequency / f_Slip</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6310, 6700, 6727, 6730, 6732
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 2_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Hz]	- [Hz]	- [Hz]
<b>Description:</b>	Displays the slip frequency for induction motors (ASM).		
<b>r0066</b>	<b>CO: Output frequency / f_outp</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5300, 5730, 6300, 6310, 6730, 6731, 6799
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 2_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Hz]	- [Hz]	- [Hz]
<b>Description:</b>	Display and connector output for the output frequency of the Motor Module.		
<b>Dependency:</b>	Refer to: r0024		
<b>Note:</b>	The output frequency is available smoothed (r0024) and unsmoothed (r0066).		
<b>r0067</b>	<b>CO: Output current maximum / I_outp max</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5722, 6300, 6301, 6640
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Display and connector output for the maximum output current of the power unit.		
<b>Dependency:</b>	The maximum output current is determined by the parameterized current limit and the motor and converter thermal protection. Refer to: p0290, p0640		

<b>r0068[0...1]</b>	<b>CO: Absolute current actual value / I_act abs val</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 6300, 6714, 6799, 7017, 8017, 8019, 8029, 8021
	<b>P-Group:</b> Displays, signals <b>Not for motor type:</b> -	<b>Unit group:</b> 6_2 <b>Scaling:</b> p2002	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> - [Arms]	<b>Max</b> - [Arms]	<b>Factory setting</b> - [Arms]
<b>Description:</b>	Displays actual absolute current.		
<b>Index:</b>	[0] = Unsmoothed [1] = Smoothed with p0045		
<b>Dependency:</b>	Refer to: r0027		
<b>Notice:</b>	The value is updated with the current controller sampling time.		
<b>Note:</b>	Absolute current value = $\sqrt{I_q^2 + I_d^2}$ The absolute value of the current actual value is available smoothed (r0027 with 300 ms, r0068[1] with p0045) and unsmoothed (r0068[0]).		
<b>r0068</b>	<b>CO: DC current in the DC link / I_dc DC link</b>		
B_INF	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 8021, 8750
	<b>P-Group:</b> Displays, signals <b>Not for motor type:</b> -	<b>Unit group:</b> 6_4 <b>Scaling:</b> p2002	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> - [A]	<b>Max</b> - [A]	<b>Factory setting</b> - [A]
<b>Description:</b>	Displays the DC current in the DC link.		
<b>Dependency:</b>	Refer to: r0027		
<b>Notice:</b>	For Basic Line Modules of chassis format, the displayed value is invalid as these units do not have any current sensing.		
<b>Note:</b>	The DC current in the DC link is available smoothed (r0027) and unsmoothed (r0068).		
<b>r0069[0...8]</b>	<b>CO: Phase current actual value / I_phase act val</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 6730, 6731, 6732, 7983, 7987, 8850, 8950
	<b>P-Group:</b> Displays, signals <b>Not for motor type:</b> -	<b>Unit group:</b> 6_5 <b>Scaling:</b> p2002	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> - [A]	<b>Max</b> - [A]	<b>Factory setting</b> - [A]
<b>Description:</b>	Display and connector output for the measured actual phase currents as peak value.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W [3] = Phase U offset [4] = Phase V offset [5] = Phase W offset [6] = Total U, V, W [7] = Alpha component [8] = Beta component		
<b>Note:</b>	In indices 3 ... 5, the offset currents of the 3 phases, which are added to correct the phase currents, are displayed. The sum of the 3 corrected phase currents is displayed in index 6.		

## 2 Parameters

### 2.2 List of parameters

---

<b>r0070</b>	<b>CO: Actual DC link voltage / Vdc act val</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 6723, 6724, 6730, 6731, 6799
	<b>P-Group:</b> Displays, signals <b>Not for motor type:</b> -	<b>Unit group:</b> 5_2 <b>Scaling:</b> p2001	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> - [V]	<b>Max</b> - [V]	<b>Factory setting</b> - [V]
<b>Description:</b>	Display and connector output for the measured actual value of the DC link voltage.		
<b>Dependency:</b>	Refer to: r0026		
<b>Notice:</b>	For SINAMICS S120 AC Drive (AC/AC) the following applies: When measuring a DC link voltage < 200 V, for the Power Module (e.g. PM340) a valid measured value is not supplied. In this case, when an external 24V power supply is connected, a value of approx. 24 V is displayed.		
<b>Note:</b>	The DC link voltage is available smoothed (r0026) and unsmoothed (r0070).		

---

<b>r0070</b>	<b>CO: Actual DC link voltage / Vdc act val</b>		
B_INF	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 8750, 8850, 8910, 8940, 8950, 8964
	<b>P-Group:</b> Displays, signals <b>Not for motor type:</b> -	<b>Unit group:</b> 5_2 <b>Scaling:</b> p2001	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> - [V]	<b>Max</b> - [V]	<b>Factory setting</b> - [V]
<b>Description:</b>	Display and connector output for the measured actual value of the DC link voltage.		
<b>Dependency:</b>	Refer to: r0026		
<b>Note:</b>	The DC link voltage is available smoothed (r0026) and unsmoothed (r0070).		

---

<b>r0071</b>	<b>Maximum output voltage / U_output max</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 6301, 6640, 6700, 6722, 6723, 6724, 6725, 6727
	<b>P-Group:</b> Displays, signals <b>Not for motor type:</b> -	<b>Unit group:</b> 5_1 <b>Scaling:</b> p2001	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> - [Vrms]	<b>Max</b> - [Vrms]	<b>Factory setting</b> - [Vrms]
<b>Description:</b>	Displays the maximum output voltage.		
<b>Dependency:</b>	The maximum output voltage depends on the actual DC link voltage (r0070) and the maximum modulation depth (p1803).		
<b>Note:</b>	As the (driven) motor load increases, the maximum output voltage drops as a result of the reduction in DC link voltage.		

---

<b>r0072</b>	<b>CO: Output voltage / U_output</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 5700, 5730, 6730, 6731, 6799
	<b>P-Group:</b> Displays, signals <b>Not for motor type:</b> -	<b>Unit group:</b> 5_1 <b>Scaling:</b> p2001	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> - [Vrms]	<b>Max</b> - [Vrms]	<b>Factory setting</b> - [Vrms]
<b>Description:</b>	Display and connector output for the actual output voltage of the power unit (Motor Module).		
<b>Dependency:</b>	Refer to: r0025		
<b>Note:</b>	The output voltage is available smoothed (r0025) and unsmoothed (r0072).		

---

---

<b>r0073</b>	<b>Maximum modulation depth / Modulat_depth max</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6723, 6724, 6725
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the maximum modulation depth.		
<b>Dependency:</b>	Refer to: p1803		

---

<b>r0074</b>	<b>CO: Modulat_depth / Mod_depth</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5730, 6730, 6731, 6799, 8940, 8950
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Display and connector output for the actual modulation depth.		
<b>Dependency:</b>	Refer to: r0028		
<b>Note:</b>	For space vector modulation, 100% corresponds to the maximum output voltage without overcontrol. Values above 100 % indicate an overcontrol condition - values below 100% have no overcontrol. The phase voltage (phase-to-phase, rms) is calculated as follows: $(r0074 \times r0070) / (\sqrt{2} \times 100 \%)$ . The modulation depth is available smoothed (r0028) and unsmoothed (r0074).		

---

<b>r0075</b>	<b>CO: Current setpoint field-generating / Id_set</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6700, 6714, 6725
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Display and connector output for the field-generating current setpoint (Id_set).		
<b>Note:</b>	This value is irrelevant for the U/f control mode.		

---

<b>r0076</b>	<b>CO: Current actual value field-generating / Id_act</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5700, 5714, 5730, 6700, 6714, 6799
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Display and connector output for the field-generating current actual value (Id_act).		
<b>Dependency:</b>	Refer to: r0029		
<b>Note:</b>	This value is irrelevant for the U/f control mode. The field-generating current actual value is available smoothed (r0029) and unsmoothed (r0076).		

<b>r0077</b>	<b>CO: Current setpoint torque-generating / Iq_set</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> REL <b>Min</b> - [Arms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 6_2 <b>Scaling:</b> p2002 <b>Max</b> - [Arms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6700, 6710 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Arms]
<b>Description:</b>	Display and connector output for the torque/force-generating current setpoint.		
<b>Note:</b>	This value is irrelevant for the U/f control mode.		
<b>r0078</b>	<b>CO: Current actual value torque-generating / Iq_act</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [Arms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 6_2 <b>Scaling:</b> p2002 <b>Max</b> - [Arms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6310, 6700, 6714, 6799 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Arms]
<b>Description:</b>	Display and connector output for the torque-generating current actual value (Iq_act).		
<b>Dependency:</b>	Refer to: r0030		
<b>Note:</b>	This value is irrelevant for the U/f control mode. The torque-generating current actual value is available smoothed (r0030 with 300 ms) and unsmoothed (r0078).		
<b>r0079</b>	<b>CO: Torque setpoint / M_set</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> REL <b>Min</b> - [Nm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 7_1 <b>Scaling:</b> p2003 <b>Max</b> - [Nm]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6020, 6060, 6710 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Nm]
<b>Description:</b>	Display and connector output for the torque setpoint at the output of the speed controller.		
<b>r0080[0...1]</b>	<b>CO: Torque actual value / M_act</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [Nm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 7_1 <b>Scaling:</b> p2003 <b>Max</b> - [Nm]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6714, 6799 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Nm]
<b>Description:</b>	Display and connector output for actual torque value.		
<b>Index:</b>	[0] = Unsmoothed [1] = Smoothed with p0045		
<b>Dependency:</b>	Refer to: r0031, p0045		
<b>Note:</b>	The value is available smoothed (r0031 with 100 ms, r0080[1] with p0045) and unsmoothed (r0080[0]).		

<b>r0081</b>	<b>CO: Torque utilization / M_Utilization</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8012
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the torque utilization as a percentage. The torque utilization is obtained from the required smoothed torque referred to the torque limit.		
<b>Dependency:</b>	Refer to: r0033		
<b>Note:</b>	The torque utilization is available smoothed (r0033) and unsmoothed (r0081). The torque utilization is obtained from the required torque referred to the torque limit as follows: - Positive torque: $r0081 = (r0079 / r1538) * 100 \%$ - Negative torque: $r0081 = (-r0079 / -r1539) * 100 \%$		
<b>r0082[0...2]</b>	<b>CO: Active power actual value / P_act</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6714, 6799
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 14_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> r2004	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [kW]	- [kW]	- [kW]
<b>Description:</b>	Displays the instantaneous active power.		
<b>Index:</b>	[0] = Unsmoothed [1] = Smoothed with p0045 [2] = Electric power		
<b>Dependency:</b>	Refer to: r0032		
<b>Note:</b>	The mechanical active power is available smoothed (r0032 with 100 ms, r0082[1] with p0045) and unsmoothed (r0082[0]).		
<b>r0082</b>	<b>CO: Active power actual value / P_act</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8750, 8850, 8950
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 14_7	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> r2004	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [kW]	- [kW]	- [kW]
<b>Description:</b>	Displays the instantaneous active power.		
<b>Dependency:</b>	Refer to: r0032		
<b>Notice:</b>	For Basic Line Modules of chassis format, the displayed value is invalid as these units do not have any current sensing.		
<b>Note:</b>	The active power is available smoothed (r0032) and unsmoothed (r0082).		
<b>r0083</b>	<b>CO: Flux setpoint / Flex setp</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the flux setpoint.		

## 2 Parameters

### 2.2 List of parameters

---

<b>r0084[0...1]</b>	<b>CO: Flux actual value / Flux act val</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> - [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6726, 6730, 6732 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	Displays the flux actual value.		
<b>Index:</b>	[0] = Unsmoothed [1] = Smoothed		
<b>Note:</b>	The flux actual value (index 1) smoothed with p1585 is only displayed for separately excited synchronous motors. In the following cases, the unsmoothed flux actual value is also displayed: - in the range of the current model. - during the pole position identification. - for I/f control. - for a stalled drive.		

---

<b>r0087</b>	<b>CO: Actual power factor / Cos phi act</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 6714, 6730, 6732, 6799 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the actual active power factor.		

---

<b>r0088</b>	<b>CO: DC link voltage setpoint / Vdc setpoint</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [V]	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> 5_2 <b>Scaling:</b> p2001 <b>Max</b> - [V]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [V]
<b>Description:</b>	Displays the setpoint for the DC link voltage.		

---

<b>r0089[0...2]</b>	<b>Actual phase voltage / U_phase act val</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [V]	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> 5_3 <b>Scaling:</b> p2001 <b>Max</b> - [V]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6719 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [V]
<b>Description:</b>	Displays the actual phase voltage.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		
<b>Note:</b>	The values are determined from the transistor switch-on duration.		

<b>p0092</b>	<b>Clock synchronous operation pre-assignment/check / CI sync op pre-as</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	<p>Setting to pre-assign/check the sampling times for the internal controller clock cycles for clock-synchronous PROFIdrive operation.</p> <p>For p0092 = 1:</p> <p>The controller clock cycles are set so that clock synchronous PROFIdrive operation is possible. If it is not possible to change the controller clock cycles of the clock-cycle synchronous PROFIdrive operation, then an appropriate message is output.</p> <p>The pre-setting of the controller clock cycles can result in a derating of the Motor Module (e.g. p0115[0] = 400 µs --&gt; 375 µs).</p> <p>When calculating the drive unit utilization (r9976), when using the fixed DCC runtime groups "Receive AFTER IF1 PROFIdrive PZD", "Send BEFORE IF1 PROFIdrive PZD", "Receive AFTER IF2 PZD" (from V4.4) and "Send BEFORE IF2 PZD" (from V4.4), then its maximum computing time load has already been calculated during ramp-up for isochronous operation and taken into account in r9976 (from V4.3).</p> <p>For p0092 = 0:</p> <p>The controller clock cycles are set without any restrictions by the clock-cycle PROFIdrive operation (same as for up to V2.3).</p> <p>When calculating the drive unit utilization (r9976), when using the fixed DCC runtime groups "Receive AFTER IF1 PROFIdrive PZD", "Send BEFORE IF1 PROFIdrive PZD", "Receive AFTER IF2 PZD" (from V4.4) and "Send BEFORE IF2 PZD" (from V4.4), then its maximum computing time load has already been calculated during ramp-up for isochronous operation and taken into account in r9976 (from V4.3).</p>		
<b>Value:</b>	<p>0: No isochronous PROFIBUS</p> <p>1: Isochronous PROFIBUS</p>		
<b>Dependency:</b>	<p>Refer to: r0110, p0115</p> <p>Refer to: A01223, A01224</p>		
<b>Caution:</b>	<p>Only current controller sampling times (p0115[0]) which are integers of 125 µs are permitted for isochronous mode.</p> <p>For SERVO the following current controller sampling times are also possible:</p> <p>187.5, 150, 100, 93.75, 75, 62.5, 50, 37.5, 31.25 µs</p> <p>For VECTOR the following current controller sampling times are also possible:</p> <p>312.5, 218.75, 200, 187.5, 175, 156.25, 150, 137.5 µs</p> <p>The additional current controller sampling times must be taken into account when parameterizing the bus for Ti, To and Tdp.</p>		
			
<b>Notice:</b>	<p>p0092 only affects the automatic default for the sampling times (p0115) in the drive.</p> <p>If the sampling times are modified subsequently in expert mode (p0112 = 0), p0092 = 0 should be set so that the new values are not overwritten again by the automatic default when the parameters are downloaded.</p> <p>The conditions for current controller sampling time for isosynchronous operation must still be carefully ensured (refer under Caution!).</p>		

<b>r0094</b>	<b>CO: Transformation angle / Transformat_angle</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4700, 4702, 4710, 6300, 6714, 6730, 6731, 6732
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2005	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°]	- [°]	- [°]
<b>Description:</b>	Displays the transformation angle.		
<b>Dependency:</b>	Refer to: p0431, r1778		

## 2 Parameters

### 2.2 List of parameters

**Note:** The transformation angle corresponds to the electrical commutation angle.  
If no pole position identification is carried out (p1982), and the encoder is adjusted, the following applies:  
The encoder supplies the value and indicates the electrical angle of the flux position (d axis).

---

<b>p0097</b>	<b>Select drive object type / Select DO type</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	24	0
<b>Description:</b>	Executes an automatic device configuration. In so doing, p0099, p0107 and p0108 are appropriately set.		
<b>Value:</b>	0: No selection 1: Drive object type SERVO 2: Drive object type VECTOR 3: SINAMICS GM (DFEMV & VECTORMV) 4: SINAMICS SM (AFEMV & VECTORMV) 5: SINAMICS GL (VECTORGL) 6: SINAMICS SL (VECTORSL) 12: Drive object type VECTOR parallel circuit 13: Drive object type VECTORMV - GM parallel circuit 14: Drive object type VECTORMV - SM parallel circuit 15: Drive object type DC_CTRL 16: Drive object type SERVO HMI 17: Drive object type VECTOR HMI 24: Drive object type VECTORMV - SM parallel circuit		
<b>Dependency:</b>	Refer to: r0098, p0099 Refer to: A01330		
<b>Note:</b>	For p0097 = 0, p0099 is automatically set to the factory setting. The possible settings are dependent upon the device type.		

---

<b>r0098[0...5]</b>	<b>Actual device topology / Device_act topo</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the automatically detected actual device topology in coded form.		
<b>Index:</b>	[0] = DRIVE-CLiQ socket X100 [1] = DRIVE-CLiQ socket X101 [2] = DRIVE-CLiQ socket X102 [3] = DRIVE-CLiQ socket X103 [4] = DRIVE-CLiQ socket X104 [5] = DRIVE-CLiQ socket X105		
<b>Dependency:</b>	Refer to: p0097, p0099		
<b>Note:</b>	Topology coding: abcd efgh hex a = number of Active Line Modules b = number of Motor Modules c = number of motors d = number of encoders (or the line supply voltage sensing for Active Line Modules) e = number of additional encoders (or the line supply voltage sensing for Active Line Modules) f = number of Terminal Modules g = number of Terminal Boards h = reserved		

if the value 0 is displayed in all indices, then components are not detected via DRIVE-CLiQ.

If a value F hex occurs at a position of the coding (abcd efgh hex), then an overflow has occurred.

<b>p0099[0...5]</b>	<b>Device target topology / Device_target topo</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the device target topology in coded form (refer to r0098). The setting is made during commissioning. Deactivated or non-available components are also counted		
<b>Index:</b>	[0] = DRIVE-CLiQ socket X100 [1] = DRIVE-CLiQ socket X101 [2] = DRIVE-CLiQ socket X102 [3] = DRIVE-CLiQ socket X103 [4] = DRIVE-CLiQ socket X104 [5] = DRIVE-CLiQ socket X105		
<b>Dependency:</b>	The parameter can only be written into for p0097 = 0. To perform an automatic device configuration run, an index of the device target topology must be set to the value of the device actual topology in r0098 for acknowledgment. An index of the device actual topology with a value other than 0 must be selected. Refer to: p0097, r0098 Refer to: A01330		
<b>Note:</b>	The parameter can only be set to the values 0, the value of the actual device topology, the value of the actual device target topology and FFFFFFFF hex. If the value 0 is displayed in all of the indices, then the system has still not been commissioned. The value FFFFFFFF hex indicates that the topology was not generated by the automatic device configuration but was commissioned using the commissioning software (e.g. using parameter download).		
<b>p0100</b>	<b>IEC/NEMA mot stds / IEC/NEMA mot stds</b>		
VECTOR_G	<b>Can be changed:</b> C2(1)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Defines whether the motor and drive converter power settings (e.g. rated motor power, p0307) are expressed in [kW] or [hp]. Depending on the selection, the rated motor frequency (p0310) is either set to 50 Hz or 60 Hz. For p0100 = 0, the following applies: The power factor (p0308) should be parameterized. For p0100 = 1, the following applies: The efficiency (p0309) should be parameterized.		
<b>Value:</b>	0: IEC motor (50 Hz supply, SI units) 1: NEMA motor (60 Hz supply, US units)		
<b>Dependency:</b>	If p0100 is changed, all of the rated motor parameters are reset. Only then are possible unit changeovers made. The units of all motor parameters are changed that are involved in the selection of IEC or NEMA (e.g. r0206, p0307, p0316, r0333, r0334, p0341, p0344, r1493, r1969). Refer to: r0206, p0210, p0300, p0304, p0305, p0307, p0308, p0309, p0310, p0311, p0314, p0320, p0322, p0323, p0335, r0336, r0337, p1800		
<b>Note:</b>	The parameter can only be changed for vector control (p0107). The parameter value is not reset when the factory setting is restored (p0010 = 30, p0970).		

<b>p0101[0...n]</b>	<b>Drive object numbers / DO numbers</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	62	0
<b>Description:</b>	The parameter contains the object number via which every drive object can be addressed. The number of an existing drive object is entered into each index. Value = 0: No drive object is defined.		
<b>Note:</b>	The numbers are automatically allocated. For the commissioning software, this object number cannot be entered using the expert list, but is automatically assigned when inserting an object.		
<b>r0102[0...1]</b>	<b>Number of drive objects / DO count</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of existing or existing and prepared drive objects.		
<b>Index:</b>	[0] = Existing drive objects [1] = Existing and prepared drive objects		
<b>Dependency:</b>	Refer to: p0101		
<b>Note:</b>	The numbers of the drive objects are in p0101. Index 0: Displays the number of drive objects that have already been set up. Index 1: Displays the number of drive objects that have already been set up and, in addition, the drive objects that still have to be set up.		
<b>p0103[0...n]</b>	<b>Application-specific view / Appl_spec view</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(2)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	999	0
<b>Description:</b>	The application-specific view of an existing drive object is entered into each index. The parameter cannot be changed.		
<b>Dependency:</b>	Refer to: p0107, r0107		
<b>Note:</b>	In the non-volatile memory, the application-specific views are defined in files with the following structure: PDxxxxyy.ACX xxx: Application-specific view (p0103) yyy: Type of drive object (p0107) Example: PD052011.ACX --> "011" stands for the drive object, type SERVO --> "052" is the number of the view for this drive object		

<b>r0103</b>	<b>Application-specific view / Appl_spec view</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	-
<b>Description:</b>	Displays the application-specific view of the individual drive object.		
<b>Dependency:</b>	Refer to: p0107, r0107		
<b>p0105</b>	<b>Activate/deactivate drive object / DO act/deact</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	1
<b>Description:</b>	Setting to activate/deactivate a drive object.		
<b>Value:</b>	0: Deactivate drive object 1: Activate drive object		
<b>Dependency:</b>	Refer to: r0106		
<b>Notice:</b>	The following applies when activating: If components are inserted for the first time and the appropriate drive object is activated, then the drive system is automatically booted. To do this, the pulses of all of the drive objects must be suppressed.		
<b>p0105</b>	<b>Activate/deactivate drive object / DO act/deact</b>		
VECTOR_G, B_INF, TM120, TM150, TB30, ENC, HUB	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	1
<b>Description:</b>	Setting to activate/deactivate a drive object.		
<b>Value:</b>	0: Deactivate drive object 1: Activate drive object 2: Drive object deactivate and not present		
<b>Recommendation:</b>	After inserting all of the components of a drive object, before activating, first wait for Alarm A01316.		
<b>Dependency:</b>	When activating drive objects with the safety functions enabled, the following applies: After reactivating, a warm restart (p0009 = 30, p0976 = 2, 3) or POWER ON should be carried out. Refer to: r0106 Refer to: A01314		
<b>Notice:</b>	The following applies when activating: If components are inserted for the first time and the appropriate drive object is activated, then the drive system is automatically booted. To do this, the pulses of all of the drive objects must be suppressed.		
<b>Note:</b>	For value = 0, 2: When a drive object is deactivated it no longer outputs any errors. If value = 0: All components of the drive object were completely commissioned and are deactivated using this value. They can be removed from the DRIVE-CLiQ without any error. If a component has been deactivated, only the component with the correct serial number may be inserted, or none at all. If value = 1: All components of the drive object must be available for error-free operation.		

If value = 2:

Components of a drive object in a project generated offline and set to this value must never be inserted in the actual topology from the very start. This means that the components are marked to be bypassed in the DRIVE-CLiQ line.

For components that comprise several individual components (e.g. Double Motor Modules), it is not permissible to set just one subset to this value.

<b>p0105 Activate/deactivate drive object / DO act/deact</b>			
TM31	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	1
<b>Description:</b>	Setting to activate/deactivate a drive object.		
<b>Value:</b>	0: Deactivate drive object 1: Activate drive object 2: Drive object deactivate and not present		
<b>Recommendation:</b>	After inserting all of the components of a drive object, before activating, first wait for Alarm A01316.		
<b>Dependency:</b>	Refer to: r0106 Refer to: A01314		
<b>Warning:</b>	A drive that is moved by simulating the inputs of a Terminal Module is brought to a standstill while this parameter is being changed over.		
			
<b>Notice:</b>	The following applies when activating: If components are inserted for the first time and the appropriate drive object is activated, then the drive system is automatically booted. To do this, the pulses of all of the drive objects must be suppressed.		
<b>Note:</b>	For value = 0, 2: When a drive object is deactivated it no longer outputs any errors. If value = 0: All components of the drive object were completely commissioned and are deactivated using this value. They can be removed from the DRIVE-CLiQ without any error. If a component has been deactivated, only the component with the correct serial number may be inserted, or none at all. If value = 1: All components of the drive object must be available for error-free operation. If value = 2: Components of a drive object in a project generated offline and set to this value must never be inserted in the actual topology from the very start. This means that the components are marked to be bypassed in the DRIVE-CLiQ line. For components that comprise several individual components (e.g. Double Motor Modules), it is not permissible to set just one subset to this value.		

<b>p0105 Activate/deactivate drive object / DO act/deact</b>			
TM54F_MA, TM54F_SL	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	1
<b>Description:</b>	Setting to activate/deactivate a drive object.		
<b>Value:</b>	0: Deactivate drive object 1: Activate drive object 2: Drive object deactivate and not present		
<b>Recommendation:</b>	After inserting all of the components of a drive object, before activating, first wait for Alarm A01316.		

- Dependency:** TM54F can only be deactivated if all of the drives assigned to it via p10010 have been deactivated or safety on the assigned drives has not been enabled.  
When activating drive objects with the safety functions enabled, the following applies:  
After reactivating, a warm restart (p0009 = 30, p0976 = 2, 3) or POWER ON should be carried out.  
Refer to: r0106  
Refer to: A01314
- Notice:** The following applies when activating:  
If components are inserted for the first time and the appropriate drive object is activated, then the drive system is automatically booted. To do this, the pulses of all of the drive objects must be suppressed.
- Note:** For value = 0, 2:  
When a drive object is deactivated it no longer outputs any errors.  
If value = 0:  
All components of the drive object were completely commissioned and are deactivated using this value. They can be removed from the DRIVE-CLiQ without any error.  
If a component has been deactivated, only the component with the correct serial number may be inserted, or none at all.  
If value = 1:  
All components of the drive object must be available for error-free operation.  
If value = 2:  
Components of a drive object in a project generated offline and set to this value must never be inserted in the actual topology from the very start. This means that the components are marked to be bypassed in the DRIVE-CLiQ line.  
For components that comprise several individual components (e.g. Double Motor Modules), it is not permissible to set just one subset to this value.

---

<b>r0106</b>	<b>Drive object active/inactive / DO act/inact</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC, HUB	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>
	0	1	-
<b>Description:</b>	Displays the "active/inactive" state of a drive object.		
<b>Value:</b>	0: Drive object inactive 1: Drive object active		
<b>Dependency:</b>	Refer to: p0105		

---

<b>p0107[0...n]</b>	<b>Drive object type / DO type</b>		
CU_G130_PN, CU_G130_DP	<b>Can be changed:</b> C1(2) <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>
	0	300	0
<b>Description:</b>	The type of an existing drive object is entered into each index.		
<b>Value:</b>	0: - 2: SINAMICS G 12: VECTOR 100: TB30 (Terminal Board) 150: DRIVE-CLiQ Hub Module 200: TM31 (Terminal Module) 205: TM54F - Master (Terminal Module) 206: TM54F - Slave (Terminal Module) 207: TM120 (Terminal Module) 208: TM150 (Terminal Module) 300: ENCODER		
<b>Dependency:</b>	Refer to: p0103, r0103		

## 2 Parameters

### 2.2 List of parameters

**Caution:**



If you change this parameter and exit the device commissioning mode, then the complete software will be set up again and all of the previous drive parameter settings are deleted.

**Note:**

The number (p0101) and the associated drive object type are in the same index.

For SINAMICS S a drive object type can only be changed between SERVO and VECTOR. If you change the parameter and exit drive start-up (p0009 from 2 to 0) the drive parameters are set up again.

---

#### p0107[0...n]

#### Drive object type / DO type

CU\_G150\_PN,  
CU\_G150\_DP

**Can be changed:** C1(2)

**Calculated:** -

**Access level:** 2

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** -

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

300

0

**Description:**

The type of an existing drive object is entered into each index.

**Value:**

0: -  
2: SINAMICS G  
12: VECTOR  
30: BASIC INFEED CONTROL  
100: TB30 (Terminal Board)  
150: DRIVE-CLiQ Hub Module  
200: TM31 (Terminal Module)  
205: TM54F - Master (Terminal Module)  
206: TM54F - Slave (Terminal Module)  
207: TM120 (Terminal Module)  
208: TM150 (Terminal Module)  
300: ENCODER

**Dependency:**

Refer to: p0103, r0103

**Caution:**



If you change this parameter and exit the device commissioning mode, then the complete software will be set up again and all of the previous drive parameter settings are deleted.

**Note:**

The number (p0101) and the associated drive object type are in the same index.

For SINAMICS S a drive object type can only be changed between SERVO and VECTOR. If you change the parameter and exit drive start-up (p0009 from 2 to 0) the drive parameters are set up again.

---

#### r0107

#### Drive object type / DO type

VECTOR\_G

**Can be changed:** -

**Calculated:** -

**Access level:** 2

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** Closed-loop control

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

12

12

-

**Description:**

Displays the type of each drive object.

**Value:**

12: VECTOR

**Dependency:**

Refer to: p0103, r0103

---

#### r0107

#### Drive object type / DO type

B\_INF

**Can be changed:** -

**Calculated:** -

**Access level:** 2

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** Closed-loop control

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

30

30

-

**Description:**

Displays the type of each drive object.

**Value:**

30: BASIC INFEED CONTROL

**Dependency:**

Refer to: p0103, r0103

<b>r0107</b>	<b>Drive object type / DO type</b>		
TM120	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> 207	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 207	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the type of each drive object.		
<b>Value:</b>	207: TM120 (Terminal Module)		
<b>Dependency:</b>	Refer to: p0103, r0103		
<b>r0107</b>	<b>Drive object type / DO type</b>		
TM150	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> 208	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 208	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the type of each drive object.		
<b>Value:</b>	208: TM150 (Terminal Module)		
<b>Dependency:</b>	Refer to: p0103, r0103		
<b>r0107</b>	<b>Drive object type / DO type</b>		
TM31	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> 200	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 200	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the type of each drive object.		
<b>Value:</b>	200: TM31 (Terminal Module)		
<b>Dependency:</b>	Refer to: p0103, r0103		
<b>r0107</b>	<b>Drive object type / DO type</b>		
TB30	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> 100	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 100	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the type of each drive object.		
<b>Value:</b>	100: TB30 (Terminal Board)		
<b>Dependency:</b>	Refer to: p0103, r0103		

## 2 Parameters

### 2.2 List of parameters

---

<b>r0107</b>	<b>Drive object type / DO type</b>		
TM54F_MA	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> 205	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 205	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the type of each drive object.		
<b>Value:</b>	205: TM54F - Master (Terminal Module)		
<b>Dependency:</b>	Refer to: p0103, r0103		

---

<b>r0107</b>	<b>Drive object type / DO type</b>		
TM54F_SL	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> 206	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 206	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the type of each drive object.		
<b>Value:</b>	206: TM54F - Slave (Terminal Module)		
<b>Dependency:</b>	Refer to: p0103, r0103		

---

<b>r0107</b>	<b>Drive object type / DO type</b>		
ENC	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> 300	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 300	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the type of each drive object.		
<b>Value:</b>	300: ENCODER		
<b>Dependency:</b>	Refer to: p0103, r0103		

---

<b>r0107</b>	<b>Drive object type / DO type</b>		
HUB	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> 150	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 150	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the type of each drive object.		
<b>Value:</b>	150: DRIVE-CLiQ Hub Module		
<b>Dependency:</b>	Refer to: p0103, r0103		

p0108[0...n]	Drive objects function module / DO fct_mod		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(2)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin

**Description:** The function module of an existing drive object is entered into each index (see p0101, p0107).  
The following bits are available for the Control Unit (Index 0):  
Bit 18: Free function blocks  
Bit 29: CAN  
Bit 30: COMM BOARD  
Bit 31: PROFINET  
For all other drive objects (Index > 0), the significance of the bits should be taken from the display parameters r0108 of the drive object.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-
	16	Bit 16	ON	OFF	-
	17	Bit 17	ON	OFF	-
	18	Bit 18	ON	OFF	-
	19	Bit 19	ON	OFF	-
	20	Bit 20	ON	OFF	-
	21	Bit 21	ON	OFF	-
	22	Bit 22	ON	OFF	-
	23	Bit 23	ON	OFF	-
	24	Bit 24	ON	OFF	-
	25	Bit 25	ON	OFF	-
	26	Bit 26	ON	OFF	-
	27	Bit 27	ON	OFF	-
	28	Bit 28	ON	OFF	-
	29	Bit 29	ON	OFF	-
	30	Bit 30	ON	OFF	-
	31	Bit 31	ON	OFF	-

**Dependency:** Active messages can prevent or influence activating a function module.

Refer to: p0171, r0171, p0172, r0172, p0173, r0173

Refer to: A07089, F13010

**Note:** A "function module" is a functional expansion of a drive object that can be activated when commissioning.

<b>r0108</b>	<b>Drive objects function module / DO fct_mod</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the activated function module for the particular drive object.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	02	Speed/torque control / n/M	Activated	Not activated	-
	05	Recorder / Rec	Activated	Not activated	-
	08	Extended setpoint channel / Ext setp	Activated	Not activated	-
	10	Moment of inertia estimator / J_estimator	Activated	Not activated	-
	13	Safety rotary axis / Safety rot	Activated	Not activated	-
	14	Extended brake control / Ext brake	Activated	Not activated	-
	15	Parallel connection / Parallel	Activated	Not activated	-
	16	Technology controller / Tech_ctrl	Activated	Not activated	-
	17	Extended messages/monitoring / Ext msg	Activated	Not activated	-
	18	Free function blocks / FBLOCKS	Activated	Not activated	-
	20	Software gating unit / SW_gating unit	Activated	Not activated	-
	24	PM330 / PM330	Activated	Not activated	-
	28	Cooling unit / Cool_unit	Activated	Not activated	-
	29	CAN / CAN	Activated	Not activated	-
	31	PROFINET CBE20 / PN CBE20	Activated	Not activated	-

**Dependency:** Refer to: p0171, r0171, p0172, r0172, p0173, r0173

**Note:** A "function module" is a functional expansion of a drive object that can be activated when commissioning. The following bits are only automatically set, if the power units are detected with the appropriate properties.  
 Bit 16: Parallel connection of the same power units (only automatically set for G130/G150).  
 Bit 20: Software gating unit (only automatically set when power units are connected in parallel).  
 Bit 24: Type PM330 power units are presently not supported.  
 Bit 26: Type PM250 power units with F3E energy recovery are only supported for S120 CRANES.  
 Bit 28: Power units with liquid cooling.

<b>r0108</b>	<b>Drive objects function module / DO fct_mod</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the activated function module for the particular drive object.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	05	Recorder / Rec	Activated	Not activated	-
	15	Parallel connection / Parallel	Activated	Not activated	-
	18	Free function blocks / FBLOCKS	Activated	Not activated	-
	26	Braking Module external / Brk Mod ext	Activated	Not activated	-
	28	Cooling unit / Cool_unit	Activated	Not activated	-
	31	PROFINET CBE20 / PN CBE20	Activated	Not activated	-

**Dependency:** Refer to: p0171, r0171, p0172, r0172, p0173, r0173

**Note:** A "function module" is a functional expansion of a drive object that can be activated when commissioning.

<b>r0108</b>	<b>Drive objects function module / DO fct_mod</b>				
TM31, TM120, TM150, TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the activated function module for the particular drive object.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	18	Free function blocks / FBLOCKS	Activated	Not activated	-
	31	PROFINET CBE20 / PN CBE20	Activated	Not activated	-
<b>Dependency:</b>	Refer to: p0171, r0171, p0172, r0172, p0173, r0173				
<b>Note:</b>	A "function module" is a functional expansion of a drive object that can be activated when commissioning.				

<b>r0108</b>	<b>Drive objects function module / DO fct_mod</b>				
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the activated function module for the particular drive object.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	12	Linear encoder / Lin_enc	Activated	Not activated	-
	18	Free function blocks / FBLOCKS	Activated	Not activated	-
	31	PROFINET CBE20 / PN CBE20	Activated	Not activated	-
<b>Dependency:</b>	Refer to: p0171, r0171, p0172, r0172, p0173, r0173				
<b>Note:</b>	A "function module" is a functional expansion of a drive object that can be activated when commissioning.				

<b>r0110[0...2]</b>	<b>Basic sampling times / t_basis</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [µs]	- [µs]	- [µs]	
<b>Description:</b>	Displays the basic sampling times. The sampling times are set using p0112 and p0115. The values for the basic sampling times are determined as a result of these settings.			
<b>Index:</b>	[0] = Basic sampling time 0 [1] = Basic sampling time 1 [2] = Basic sampling time 2			

<b>r0111</b>	<b>Basic sampling time selection / t_basis sel</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the selected basic sampling time for this drive object.			
<b>Dependency:</b>	Refer to: r0110			

<b>p0112      Sampling times pre-setting p0115 / t_sample for p0115</b>			
<b>VECTOR_G</b>	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	3
<b>Description:</b>	<p>Pre-assignment of the sampling times in p0115.</p> <p>The clock cycles for the current controller / speed controller / flux controller / setpoint channel / position controller / positioning / technology controller are pre-assigned as follows:</p> <p>SINAMICS S, servo drive:</p> <p>p0112 = 1: 250 / 250 / 250 / 4000 / 2000 / 8000 / 4000 µs (for chassis units)</p> <p>p0112 = 2: 125 / 250 / 250 / 4000 / 2000 / 8000 / 4000 µs</p> <p>p0112 = 3: 125 / 125 / 125 / 4000 / 1000 / 4000 / 4000 µs</p> <p>p0112 = 4: 62.5 / 62.5 / 62.5 / 1000 / 1000 / 2000 / 1000 µs</p> <p>p0112 = 5: 31.25 / 31.25 / 31.25 / 1000 / 1000 / 2000 / 1000 µs</p> <p>SINAMICS S, Active Infeed (p0112 = 1 not for p0092 = 1):</p> <p>p0112 = 1: 400 / - / - / 1600 µs (pre-setting for the rated pulse frequency = 2.5 kHz)</p> <p>p0112 = 2: 250 / - / - / 2000 µs (pre-setting for the rated pulse frequency = 4.0 kHz)</p> <p>p0112 = 3: 125 / - / - / 2000 µs</p> <p>p0112 = 4: 125 / - / - / 1000 µs</p> <p>p0112 = 5: 125 / - / - / 500 µs</p> <p>SINAMICS S, Smart Infeed (p0112 = 1 not for p0092 = 1):</p> <p>p0112 = 1: 400 / - / - / 1600 µs (pre-setting for the rated pulse frequency = 2.5 kHz)</p> <p>p0112 = 2: 250 / - / - / 2000 µs (pre-setting for the rated pulse frequency = 4.0 kHz)</p> <p>p0112 = 3: 250 / - / - / 2000 µs</p> <p>p0112 = 4: 250 / - / - / 1000 µs</p> <p>p0112 = 5: Not possible</p> <p>SINAMICS S, Basic Infeed, booksize:</p> <p>p0112 = 4: 250 / - / - / 2000 µs</p> <p>SINAMICS S, Basic Infeed, chassis:</p> <p>p0112 = 1: 2000 / - / - / 2000 µs</p> <p>p0112 = 2: 2000 / - / - / 2000 µs (pre-setting)</p> <p>p0112 = 3: 2000 / - / - / 2000 µs</p> <p>p0112 = 4: Not possible</p> <p>p0112 = 5: Not possible</p> <p>SINAMICS S/G, vector drive (p0112 = 1 not for p0092 = 1 and not for PM340):</p> <p>p0112 = 1: 400 / 1600 / 1600 / 1600 / 3200 / 3200 / 3200 µs (for rated pulse frequency = 1.25, 2.5 kHz)</p> <p>p0112 = 2: 250 / 1000 / 2000 / 1000 / 2000 / 4000 / 4000 µs</p> <p>p0112 = 3: 250 / 1000 / 1000 / 1000 / 2000 / 4000 / 4000 µs (for rated pulse frequency = 2.0, 4.0 kHz)</p> <p>SINAMICS S, vector drive:</p> <p>p0112 = 4: 250 / 500 / 1000 / 500 / 1000 / 2000 / 2000 µs</p> <p>p0112 = 5: 250 / 250 / 1000 / 500 / 1000 / 2000 / 1000 µs</p>		
<b>Value:</b>	<p>0: Expert</p> <p>1: xLow</p> <p>2: Low</p> <p>3: Standard</p>		
<b>Recommendation:</b>	<p>When changing the sampling times of the current and speed controllers (also refer to p0115), then we recommend that after exiting commissioning (p0009 = 0) the controller settings are re-calculated using p0340 = 4.</p>		
<b>Dependency:</b>	<p>It is prohibited to select a parameter value from p0112 if the associated current controller clock cycle cannot set (e.g. p0112 = 1 is not possible for a vector drive and PM340 power unit).</p> <p>If, for a servo drive, p112 = 5 is set, then the pulse frequency p1800 is pre-assigned 8 kHz. For D410-2 and vector drive, the current controller sampling time can only be permanently changed for p0112 = 0.</p> <p>Refer to: p0092</p>		

**Note:** For p0112 = 0 (expert) the individual sampling times in p0115 can be adjusted.  
The setting p0112 = 1 cannot be set for a vector drive with power unit type PM340 (refer to r0203).

<b>p0112</b>		<b>Sampling times pre-setting p0115 / t_sample for p0115</b>		
<b>B_INF</b>	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	5	3	
<b>Description:</b>	<p>Pre-assignment of the sampling times in p0115.</p> <p>The clock cycles for the current controller / speed controller / flux controller / setpoint channel / position controller / positioning / technology controller are pre-assigned as follows:</p> <p>SINAMICS S, servo drive:</p> <p>p0112 = 1: 250 / 250 / 250 / 4000 / 2000 / 8000 / 4000 µs (for chassis units)</p> <p>p0112 = 2: 125 / 250 / 250 / 4000 / 2000 / 8000 / 4000 µs</p> <p>p0112 = 3: 125 / 125 / 125 / 4000 / 1000 / 4000 / 4000 µs</p> <p>p0112 = 4: 62.5 / 62.5 / 62.5 / 1000 / 1000 / 2000 / 1000 µs</p> <p>p0112 = 5: 31.25 / 31.25 / 31.25 / 1000 / 1000 / 2000 / 1000 µs</p> <p>SINAMICS S, Active Infeed (p0112 = 1 not for p0092 = 1):</p> <p>p0112 = 1: 400 / - / - / 1600 µs (pre-setting for the rated pulse frequency = 2.5 kHz)</p> <p>p0112 = 2: 250 / - / - / 2000 µs (pre-setting for the rated pulse frequency = 4.0 kHz)</p> <p>p0112 = 3: 125 / - / - / 2000 µs</p> <p>p0112 = 4: 125 / - / - / 1000 µs</p> <p>p0112 = 5: 125 / - / - / 500 µs</p> <p>SINAMICS S, Smart Infeed (p0112 = 1 not for p0092 = 1):</p> <p>p0112 = 1: 400 / - / - / 1600 µs (pre-setting for the rated pulse frequency = 2.5 kHz)</p> <p>p0112 = 2: 250 / - / - / 2000 µs (pre-setting for the rated pulse frequency = 4.0 kHz)</p> <p>p0112 = 3: 250 / - / - / 2000 µs</p> <p>p0112 = 4: 250 / - / - / 1000 µs</p> <p>p0112 = 5: Not possible</p> <p>SINAMICS S, Basic Infeed, booksize:</p> <p>p0112 = 4: 250 / - / - / 2000 µs</p> <p>SINAMICS S, Basic Infeed, chassis:</p> <p>p0112 = 1: 2000 / - / - / 2000 µs</p> <p>p0112 = 2: 2000 / - / - / 2000 µs (pre-setting)</p> <p>p0112 = 3: 2000 / - / - / 2000 µs</p> <p>p0112 = 4: Not possible</p> <p>p0112 = 5: Not possible</p> <p>SINAMICS S/G, vector drive (p0112 = 1 not for p0092 = 1 and not for PM340):</p> <p>p0112 = 1: 400 / 1600 / 1600 / 1600 / 3200 / 3200 / 3200 µs (for rated pulse frequency = 1.25, 2.5 kHz)</p> <p>p0112 = 2: 250 / 1000 / 2000 / 1000 / 2000 / 4000 / 4000 µs</p> <p>p0112 = 3: 250 / 1000 / 1000 / 1000 / 2000 / 4000 / 4000 µs (for rated pulse frequency = 2.0, 4.0 kHz)</p> <p>SINAMICS S, vector drive:</p> <p>p0112 = 4: 250 / 500 / 1000 / 500 / 1000 / 2000 / 2000 µs</p> <p>p0112 = 5: 250 / 250 / 1000 / 500 / 1000 / 2000 / 1000 µs</p>			
<b>Value:</b>	<p>0: Expert</p> <p>1: xLow</p> <p>2: Low</p> <p>3: Standard</p> <p>4: High</p> <p>5: xHigh</p>			
<b>Recommendation:</b>	<p>When changing the sampling times of the current and speed controllers (also refer to p0115), then we recommend that after exiting commissioning (p0009 = 0) the controller settings are re-calculated using p0340 = 4.</p>			

## 2 Parameters

### 2.2 List of parameters

- Dependency:** It is prohibited to select a parameter value from p0112 if the associated current controller clock cycle cannot set (e.g. p0112 = 1 is not possible for a vector drive and PM340 power unit).  
If, for a servo drive, p112 = 5 is set, then the pulse frequency p1800 is pre-assigned 8 kHz. For D410-2 and vector drive, the current controller sampling time can only be permanently changed for p0112 = 0.  
Refer to: p0092
- Note:** For p0112 = 0 (expert) the individual sampling times in p0115 can be adjusted.  
The setting p0112 = 1 cannot be set for a vector drive with power unit type PM340 (refer to r0203).

---

#### p0113 Minimum pulse frequency, selection / f\_puls min sel

VECTOR_G	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1.000 [kHz]	2.000 [kHz]	2.000 [kHz]

- Description:** The current controller sampling time (p0115[0]) is pre-assigned by selecting the minimum pulse frequency.
- Dependency:** The parameter can only be changed with p0112 = 0 (expert). For isochronous operation (p0092 = 1) the parameter can only be set so that a current controller sampling time of 125  $\mu$ s is obtained as an integer number.  
The required pulse frequency can be set in p1800 after commissioning (p0009 = p0010 = 0), assuming that this has not been restricted by other conditions (e.g. as a result of p1082, p0310).  
Refer to: p0112, r0114, p0115, p1800
- Note:** The current controller sampling time (p0115[0]) is set to the inverse value of twice the minimum pulse frequency. For p0113 = 1.0 kHz, p0115[0] = 500  $\mu$ s is set, for p0113 = 2.0 kHz, p0115[0] = 250  $\mu$ s is set. The current controller sampling time (p0115[0]), calculated from the pulse frequency, is set in a grid of 1.25  $\mu$ s.  
For a power unit type PM340 (refer to r0203), only the values 1.0 and 2.0 kHz can be set. A value of 1.0 kHz can be set in order to achieve a current controller sampling time of 500  $\mu$ s. However, in this case, the minimum pulse frequency p1800 is limited to 2 kHz.

---

#### r0114[0...9] Minimum pulse frequency recommended / f\_puls min recom

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [kHz]	- [kHz]	- [kHz]

- Description:** Displays the recommended values (indices 0 and 1) for the minimum pulse frequency (p0113).  
If the system rejects a change to p0113 because the value to be used lies outside the permitted value range, then instead the recommended value from r0114 can be used.
- Index:** [0] = If only the actual drive is changed  
[1] = If all drives connected to the DRIVE-CLiQ line are changed  
[2] = 2nd possible pulse frequency  
[3] = 3rd possible pulse frequency  
[4] = 4th possible pulse frequency  
[5] = 5th possible pulse frequency  
[6] = 6th possible pulse frequency  
[7] = 7th possible pulse frequency  
[8] = 8th possible pulse frequency  
[9] = 9th possible pulse frequency
- Dependency:** Refer to: p0113
- Note:** After exiting commissioning (p0009 = p0010 = 0), the pulse frequencies calculated from the sampling time p0115[0] are displayed in indices 1 to 9. If additional restrictions do not apply (e.g. as a result of the maximum speed (p1082) or due to having selected an output filter), these can be entered into p1800. The maximum pulse frequency of the power units was already taken into account in r0114.  
A value of 0 kHz does not define a recommended pulse frequency.

<b>p0115[0]</b>	<b>Sampling time for supplementary functions / t_samp suppl_fct</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	16000.00 [µs]	4000.00 [µs]
<b>Description:</b>	Sets the basic sampling time for supplementary functions (DCC, free function blocks) on this object. Only setting values that are an integer multiple of 125 µs are permissible.		
<b>Index:</b>	[0] = Basic sampl time		
<b>p0115[0...6]</b>	<b>Sampling times for internal control loops / t_sample int ctrl</b>		
VECTOR_G	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	16000.00 [µs]	[0] 250.00 [µs] [1] 1000.00 [µs] [2] 1000.00 [µs] [3] 1000.00 [µs] [4] 2000.00 [µs] [5] 4000.00 [µs] [6] 4000.00 [µs]
<b>Description:</b>	Sets the sampling times for the control loops. The default setting is made using p0112 and can only be individually changed for p0112 = 0 (expert).		
<b>Recommendation:</b>	When changing the sampling times of the current and speed controllers (also refer to p0115), then we recommend that after exiting commissioning (p0009 = 0) the controller settings are re-calculated using p0340 = 4. When adjusting the current controller sampling time, it is recommended to use values that are an integer multiple of 6.25 µs. The sampling times of analog or digital inputs/outputs (see p0799, p4099) should be set to an integer multiple of the current controller sampling time. If the current controller sampling time is to be reduced with respect to the default setting (e.g. < 250 µs), then it is recommended that the motor data identification (standstill measurement) is executed beforehand, in order to avoid a thermal overload of the power unit as a result of high pulse frequencies (p1800).		
<b>Index:</b>	[0] = Current controller [1] = Speed controller [2] = Flux controller [3] = Setpoint channel [4] = Position controller [5] = Positioning [6] = Technology controller		
<b>Dependency:</b>	Depending on the number and type of vector drives, the sampling times are preset differently. The sampling times can only be separately set if p0112 is 0 (expert). If a sampling time is modified in the expert mode, then all of the sampling times with higher indices are automatically changed in the same ratio as the sampling time itself was changed. Slower time slices are only taken if the calculated sampling time is also permitted. Upper limit is 8 ms. Higher-level controls must be calculated in integral ratios to lower-level controls (e.g. p0115[1] = N * p0115[0]; where N is an integer number). The sampling time of the speed controller (p0115[1]) can have as a maximum a value of 800% of the current controller sampling time (p0115[0]). The sampling times for setpoint channel (p0115[3]), position controller (p0115[4]), positioning (p0115[5]) and technology controller (p0115[6]) must have at least 2x the value of the current controller sampling time (p0115[0]). The sampling time of the current controller p0115[0] and pulse frequency p1800 are checked at each parameter download, and when necessary changed, if, for p0092 = 1, the current controller sampling time is not an integral multiple of 125 µs or if p0112 is set > 1. For p0092 = 0, the check with p0112 = 0 (= expert) can be deactivated. Refer to: r0110, r0111, p0112		

## 2 Parameters

### 2.2 List of parameters

**Note:** For function modules that can be activated (e.g. technology controller), the parameters values are pre-assigned.  
 For power unit type PM340 (r0203), only current controller sampling times of 250 µs or 500 µs can be set. The minimum current controller clock cycle is otherwise 125 µs (SINAMICS G: 250 µs), the maximum current controller clock cycle is 500 µs. The minimum speed controller clock cycle for SINAMICS G is 1 ms.  
 Current controller clock cycles less than 250 µs are restricted by the number of drives or by the number of power units connected in parallel (also see F01340).  
 For chassis power units connected in parallel, it is recommended to connect the DRIVE-CLiQ cables (partially) in parallel between the Control Unit and the individual Motor Modules.  
 For D410-2, the current controller sampling times can only be permanently changed with p0112 = 0 (e.g. to 250 µs).

p0115[0...6]	Sampling times for internal control loops / t_sample int ctrl		
B_INF	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	16000.00 [µs]	[0] 125.00 [µs] [1] 125.00 [µs] [2] 125.00 [µs] [3] 4000.00 [µs] [4] 1000.00 [µs] [5] 4000.00 [µs] [6] 4000.00 [µs]

**Description:** Sets the sampling times for the control loops.

The default setting is made using p0112 and can only be individually changed for p0112 = 0 (expert).

**Recommendation:** When changing the sampling times of the current and speed controllers (also refer to p0115), then we recommend that after exiting commissioning (p0009 = 0) the controller settings are re-calculated using p0340 = 4.

**Index:**  
 [0] = Current controller  
 [1] = Speed controller  
 [2] = Flux controller  
 [3] = Setpoint channel  
 [4] = Position controller  
 [5] = Positioning  
 [6] = Technology controller

**Dependency:** The sampling times can only be separately set if p0112 is 0 (expert). If a sampling time is modified in the expert mode, then all of the sampling times with higher indices are automatically changed in the same ratio as the sampling time itself was changed. Slower time slices are only taken if the calculated sampling time is also permitted. Upper limit is 8 ms.

Higher-level controls must be calculated in integral ratios to lower-level controls (e.g. p0115[1] = N \* p0115[0]; where N is an integer number). The sampling time of the speed controller (p0115[1]) can have as a maximum a value of 800% of the current controller sampling time (p0115[0]).

For servo drives, the maximum sampling time of the current controller is 250 µs and for vector drives, 500 µs.

The sampling times for setpoint channel (p0115[3]), position controller (p0115[4]), positioning (p0115[5]) and technology controller (p0115[6]) must have at least 2x the value of the current controller sampling time (p0115[0]).

Refer to: r0110, r0111, p0112

**Note:** For function modules that can be activated (e.g. technology controller), the parameters values are pre-assigned.  
 For the Active Line Module (ALM) and Smart Line Module (SLM), the current and DC link voltage controllers operate with the same sampling time. For ALM/SLM the maximum current controller clock cycle is 400 µs.  
 For the Basic Line Module (BLM), the DC link voltage measurement operates in the current controller sampling time. For BLM booksize, only the current controller sampling time of 250 µs is permitted. For BLM chassis, only the current controller sampling time of 2000 µs is permitted.  
 For power unit type PM340 (r0203), only current controller sampling times of 62.5 µs, 125 µs, 250 µs and 500 µs can be set. The maximum current controller clock cycle for servo drives and the minimum current controller clock cycle for vector drives is 250 µs.  
 If sampling times in p0115 are individually changed for p0112 = 0 (expert) then it must always be observed that the selected sampling times of the setpoint channel (p0115[3]), position controller (p0115[4]), positioning (p0115[5]) and technology controller (p0115[6]) are always greater than or equal to twice the current controller sampling time (p0115[0]).

<b>p0115[0]</b>	<b>Sampling time for supplementary functions / t_samp suppl_fct</b>		
TM120	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	16000.00 [µs]	4000.00 [µs]
<b>Description:</b>	Sets the sampling times for supplementary functions (DCC, free function blocks) on this object. Only setting values that are an integer multiple of 125 µs are permissible.		
<b>Index:</b>	[0] = Basic sampl time		
<b>p0115[0]</b>	<b>Sampling time for supplementary functions / t_samp suppl_fct</b>		
TM31, TM150, TB30	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	16000.00 [µs]	4000.00 [µs]
<b>Description:</b>	Sets the sampling times for supplementary functions (DCC, free function blocks) on this object. Only setting values that are an integer multiple of 125 µs are permissible.		
<b>Index:</b>	[0] = Basic sampl time		
<b>Note:</b>	This parameter only applies to set the sampling times of possible supplementary functions. The sampling times for inputs/outputs must be set in p4099.		
<b>p0115[0]</b>	<b>Sampling time for speed detection / t_sample n_det</b>		
ENC	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	125.00 [µs]	500.00 [µs]	125.00 [µs]
<b>Description:</b>	Sets the sampling times for speed detection.		
<b>Index:</b>	[0] = Basic sampl time		
<b>r0116[0...1]</b>	<b>Drive object clock cycle recommended / DO_clock recom</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [µs]	- [µs]	- [µs]
<b>Description:</b>	Displays the recommended sampling time for the drive objects. r00116[0] = recommended sampling time: Recommended value which would then make the complete system operational. r00116[1] = recommended sampling time: Recommended value, which after changing other clock cycles on the DRIVE-CLiQ line, would result in an operational system.		
<b>Index:</b>	[0] = Change only for the actual drive object [1] = Changing all objects on the DRIVE-CLiQ line		
<b>Dependency:</b>	Refer to: p0115		

<b>p0117</b>		<b>Current controller computing dead time mode / I_ctrl t_dead mode</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	6	6	
<b>Description:</b>	Sets the mode for the computing dead time of the current controller. 0: Offset (shifted) clocking, minimum computing dead time of each drive, automatic setting 1: Clocking at the same time, the dead time aligns itself to the dead time of the latest drive, automatic setting 2: Manual setting of the computing dead time, early transfer 3: Manual setting of the computing dead time, late transfer 4-6: As for 0-2, however, no early transfers are set for vectors			
<b>Dependency:</b>	Refer to: p0118 Refer to: A02100			
<b>Note:</b>	The mode change is not effective until the drive unit is switched on again. For p0117 = 0: The times when the setpoints become effective for the individual controls is automatically and individually determined. Another computing dead time is set for each control (closed-loop) (p0118). Current is impressed for the individual controls without any offset with respect to time (improved EMC compatibility). For p0117 = 1: The latest closed-loop control determines when the setpoints for each of the individual controls become active. The same computing dead time is set for each control (p0118). Current is impressed (flows) for the individual controls without any offset with respect to time. For p0117 = 2: The computing dead time is manually set. The user must optimize the value in p0118. For p0117 = 3: The computing dead time is manually set. The user must optimize the value in p0118. For p0117 = 4 ... 6: Behavior as for p0117 = 0 ... 2, however for vectors, the earliest times are not determined.			

<b>p0118</b>		<b>Current controller computing dead time / I_ctrl t_dead</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.00 [µs]	2000.00 [µs]	0.00 [µs]	
<b>Description:</b>	This parameter is pre-set as a function of the current controller sampling time (p0115[0]) and normally does not have to be changed.			
<b>Dependency:</b>	Refer to: p0117 Refer to: A02100			
<b>Note:</b>	For p0118 <= 0.005 µs, the current controller output is delayed by a complete current controller clock cycle (p0115[0]). After p0118 has been changed, we recommend that the current controller is adapted (p1715).			

<b>p0120</b>	<b>Number of Power unit Data Sets (PDS) / PDS count</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	8	1
<b>Description:</b>	Sets the number of Power unit Data Sets (PDS). The value corresponds to the number of power units connected together for a parallel circuit configuration.		
<b>Dependency:</b>	Refer to: p0107, r0107		
<b>Note:</b>	This parameter is only significant for drive objects A_INFEED and VECTOR with a parallel circuit configuration.		
<b>p0121[0...n]</b>	<b>Power unit component number / PU comp_no</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> C1(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	199	0
<b>Description:</b>	The power unit data set is assigned to a power unit using this parameter. This unique component number is assigned when parameterizing the topology. Only component numbers can be entered into this parameter that correspond to a power unit.		
<b>Dependency:</b>	Refer to: p0107, r0107		
<b>Note:</b>	For parallel circuit configurations, the parameter index is assigned to a power unit.		
<b>p0124[0...n]</b>	<b>Main component detection using LED / M_comp detect LED</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Detection of the main components of the drive object selected via the index.		
<b>p0124[0...n]</b>	<b>Power unit detection via LED / PU detection LED</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Detects the power unit assigned to this drive and data set.		
<b>Note:</b>	While p0124 = 1, the READY LED flashes green/orange or red/orange with 2 Hz at the appropriate power unit. For parallel circuit configurations, the parameter index is assigned to a power unit.		

<b>p0125[0...n]</b>	<b>Activate/deactivate power unit components / PU_comp act/deact</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> C1(4), T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	1
<b>Description:</b>	Setting to activate/deactivate a power unit component.		
<b>Value:</b>	0: Deactivate component 1: Activate component 2: Component deactivate and not present		
<b>Recommendation:</b>	After inserting a component, before activating, first wait for Alarm A01317.		
<b>Dependency:</b>	Refer to: r0126 Refer to: A01314, A01317		
<b>Caution:</b>	For a parallel connection, the following applies:		
	When deactivating individual power units using this parameter, it is not permissible that the power units of the parallel connection involved are connected. Infeed units should be disconnected from the line supply (for example, using a contactor). Motor feeder cables should be disconnected. In addition, defective power units should be disconnected from the DC link.		
<b>Notice:</b>	It is not permissible to deactivate drive objects with safety functions enabled.		
<b>Note:</b>	The activation of a component can be rejected if the component was inserted for the first time. In this case, it is only possible to activate the component when the pulses for all of the drive objects are inhibited. For units connected in parallel, when one of the power units is deactivated, then the enable in p7001 is withdrawn. For value = 0, 2: When a component is deactivated it no longer outputs any errors. If value = 0: The component was completely commissioned and is deactivated using this value. It can be removed from the DRIVE-CLiQ without any error. If value = 1: The component must be available for error-free operation. If value = 2: A component in a project generated offline and set to this value must never be inserted in the actual topology from the very start. This means that the component is marked to be bypassed in the DRIVE-CLiQ line. For components that comprise several individual components (e.g. Double Motor Modules), it is not permissible to set just one subset to this value.		

<b>r0126[0...n]</b>	<b>Power unit components active/inactive / PU comp act/inact</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	-
<b>Description:</b>	Displays the "active/inactive" state of a power unit component.		
<b>Value:</b>	0: Component inactive 1: Component active		
<b>Dependency:</b>	Refer to: p0105, p0125, p0897		

---

<b>r0127[0...n]</b>	<b>Power unit EEPROM data version / PU EEPROM version</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the version of the EEPROM data of the power unit.		
<b>Dependency:</b>	Refer to: r0147, r0157		
<b>Note:</b>	For parallel circuit configurations, the parameter index is assigned to a power unit.		

---

<b>r0128[0...n]</b>	<b>Power unit firmware version / PU FW version</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the firmware version of the power unit.		
<b>Dependency:</b>	Refer to: r0018, r0148, r0158, r0197, r0198		
<b>Note:</b>	Example: The value 1010100 should be interpreted as V01.01.01.00. For parallel circuit configurations, the parameter index is assigned to a power unit.		

---

<b>p0130</b>	<b>Number of Motor Data Sets (MDS) / MDS count</b>		
VECTOR_G	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8575
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	16	1
<b>Description:</b>	Sets the number of Motor Data Sets (MDS).		

---

<b>p0131[0...n]</b>	<b>Motor component number / Mot comp_no</b>		
VECTOR_G	<b>Can be changed:</b> C1(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	199	0
<b>Description:</b>	The motor data set is assigned to a motor using this parameter. This unique component number is assigned when parameterizing the topology. Only component numbers can be entered into this parameter that correspond to a motor.		

<b>p0133[0...n]</b>	<b>Motor configuration / Motor config</b>			
VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 bin	
<b>Description:</b>	Configuration of the motor when commissioning the motor.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Motor connection type	Delta	Star
				<b>FP</b>
				-
<b>Dependency:</b>	For standard induction motors (p0301 > 10000), bit 0 is automatically pre-assigned the connection type of the selected data set. For p0100 > 0 (60 Hz rated motor frequency), it is not possible to select bit 1. Refer to: p0304, p0305			
<b>Note:</b>	For bit 00: When changing the bits, the rated motor voltage p0304 and the rated motor current p0305 are automatically converted to the selected connection type (star/delta). For instance, this can be necessary if an 1LE1 motor is selected using the Article number (MLFB) or code number (p0300 = 100, p0301 = 1x0xx), and the motor connection type does not correspond to that of the data set.			

<b>p0139[0...2]</b>	<b>Copy Motor Data Set MDS / Copy MDS</b>			
VECTOR_G	<b>Can be changed:</b> C2(15)	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8575	
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	31	0	
<b>Description:</b>	Copying a Motor Data Set (MDS) into another.			
<b>Index:</b>	[0] = Source motor data set [1] = Target motor data set [2] = Start copying procedure			
<b>Note:</b>	Procedure: 1. In Index 0, enter which motor data set should be copied. 2. In Index 1, enter the motor data set data that is to be copied into. 3. Start copying: set index 2 from 0 to 1. p0139[2] is automatically set to 0 when copying is completed. When copying, p0131 is not taken into account.			

<b>p0140</b>	<b>Number of Encoder Data Sets (EDS) / EDS count</b>			
VECTOR_G	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8570	
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	1	16	1	
<b>Description:</b>	Sets the number of Encoder Data Sets (EDS).			
<b>Note:</b>	When parameterizing the drive with "no encoder" there must be at least one encoder data set (p0140 >= 1).			

<b>p0140</b>	<b>Number of Encoder Data Sets (EDS) / EDS count</b>		
ENC	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8570
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	1	1
<b>Description:</b>	Sets the number of Encoder Data Sets (EDS).		
<b>Note:</b>	When parameterizing the drive with "no encoder" there must be at least one encoder data set (p0140 >= 1).		
<b>p0141[0...n]</b>	<b>Encoder interface (Sensor Module) component number / Enc_interf comp_no</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C1(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4704, 8570
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	199	0
<b>Description:</b>	This parameter is used to assign the encoder data set to an encoder evaluation (e.g. SMC). This unique component number is assigned when parameterizing the topology. Only a component number can be entered that corresponds to an encoder evaluation.		
<b>Note:</b>	If the encoder evaluation and encoder are integrated (motor with DRIVE-CLiQ), then their component numbers are identical. For an SMC, different component numbers are assigned for the SMC (p0141) and the (actual) encoder (p0142). SMC: Sensor Module Cabinet		
<b>p0142[0...n]</b>	<b>Encoder component number / Encoder comp_no</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C1(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4704
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	199	0
<b>Description:</b>	This parameter is used to assign the encoder data set to an encoder. This assignment is made using the unique component number that was assigned when parameterizing the topology. Only component numbers can be entered into this parameter that correspond to an encoder.		
<b>Note:</b>	If the encoder evaluation and encoder are integrated (motor with DRIVE-CLiQ), then their component numbers are identical. For an SMC, different component numbers are assigned for the SMC (p0141) and the (actual) encoder (p0142).		
<b>p0144[0...n]</b>	<b>Sensor Module detection via LED / SM detection LED</b>		
VECTOR_G, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Detects the Sensor Module assigned to this drive and data set.		
<b>Note:</b>	While p0144 = 1, the READY LED flashes green/orange or red/orange with 2 Hz at the appropriate Sensor Module.		

<b>p0145[0...n]</b>	<b>Activate/deactivate encoder interface / Enc_intf act/deact</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C1(4), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	1
<b>Description:</b>	Setting to activate/deactivate an encoder interface (Sensor Module).		
<b>Value:</b>	0: Deactivate component 1: Activate component 2: Component deactivate and not present		
<b>Recommendation:</b>	After inserting a component, before activating, first wait for Alarm A01317.		
<b>Dependency:</b>	Refer to: r0146 Refer to: A01314, A01317		
<b>Note:</b>	The deactivation of an encoder interface corresponds to the "parking encoder" function and has the same effect. The activation of a component can be rejected if the component was inserted for the first time. In this case, it is only possible to activate the component when the pulses for all of the drive objects are inhibited. With the encoder interface for encoder 1 (motor encoder), the relevant drive object for writing the parameter must be in the "Ready for operation" state. With the encoder interface for encoders 2 and 3, the parameter can also be written during operation. For value = 0, 2: When a component is deactivated it no longer outputs any errors. If value = 0: The component was completely commissioned and is deactivated using this value. It can be removed from the DRIVE-CLiQ without any error. If value = 1: The component must be available for error-free operation. If value = 2: A component in a project generated offline and set to this value must never be inserted in the actual topology from the very start. For components that comprise several individual components (e.g. Double Motor Modules), it is not permissible to set just one subset to this value.		
<b>r0146[0...n]</b>	<b>Encoder interface active/inactive / Enc_intf act/inact</b>		
VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	-
<b>Description:</b>	Displays the "active" or "inactive" state of an encoder interface (Sensor Module).		
<b>Value:</b>	0: Component inactive 1: Component active		
<b>Dependency:</b>	Refer to: p0105, p0145, p0480, p0897		
<b>r0147[0...n]</b>	<b>Sensor Module EEPROM data version / SM EEPROM version</b>		
VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the version of the EEPROM data of the Sensor Module.		
<b>Dependency:</b>	Refer to: r0127, r0157		

**Note:** Example:  
The value 1010100 should be interpreted as V01.01.01.00.

---

<b>r0148[0...n]</b>	<b>Sensor Module firmware version / SM FW version</b>		
VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the firmware version of the Sensor Module.		
<b>Dependency:</b>	Refer to: r0018, r0128, r0158, r0197, r0198		
<b>Note:</b>	Example: The value 1010100 should be interpreted as V01.01.01.00.		

---

<b>p0150</b>	<b>Number of VSM data sets / VSM dat_sets qty.</b>		
VECTOR_G	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	2	1
<b>Description:</b>	Sets the number of VSM data sets.		

---

<b>p0151[0...n]</b>	<b>Voltage Sensing Module component number / VSM comp_no</b>		
VECTOR_G	<b>Can be changed:</b> C1(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	199	0
<b>Description:</b>	The VSM data set is assigned to a VSM evaluation using this parameter.		
<b>Note:</b>	If two VSM are connected at the Motor Module, then the first (p0151[0]) is assigned to the line voltage measurement (see p3801) and the second, to the motor voltage measurement (see p1200).		

---

<b>p0151</b>	<b>Terminal Module component number / TM comp_no</b>		
TM31, TM120, TM150, TM54F_MA, TM54F_SL	<b>Can be changed:</b> C1(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	199	0
<b>Description:</b>	Sets the component number for the Terminal Module. This unique component number is assigned when parameterizing the topology. Only component numbers can be entered into this parameter that correspond to a Terminal Module.		

## 2 Parameters

### 2.2 List of parameters

<b>p0151[0...1]</b>	<b>DRIVE-CLiQ Hub Module component number / Hub comp_no</b>		
HUB	<b>Can be changed:</b> C1(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	199	0
<b>Description:</b>	This parameter is used to assign the data set to a DRIVE-CLiQ Hub Module. This unique component number is assigned when parameterizing the topology. Only the numbers of components operated as hubs can be entered in these parameters. [0] = DRIVE-CLiQ node 1 [1] = DRIVE-CLiQ node 2		
<b>p0154</b>	<b>Terminal Module detection via LED / TM detection LED</b>		
TM31, TM120, TM150, TM54F_MA, TM54F_SL	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Detects the Terminal Module assigned to this drive and data set.		
<b>Note:</b>	While p0154 = 1, the READY LED flashes green/orange or red/orange with 2 Hz at the appropriate Terminal Module.		
<b>p0154</b>	<b>DRIVE-CLiQ Hub Module detection via LED / Hub detection LED</b>		
HUB	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Detects any DRIVE-CLiQ Hub Module that has been assigned.		
<b>p0155[0...n]</b>	<b>Voltage Sensing Module activate/deactivate / VSM act/deact</b>		
VECTOR_G	<b>Can be changed:</b> C1(4), T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	1
<b>Description:</b>	Setting to activate/deactivate a Voltage Sensing Module (VSM).		
<b>Value:</b>	0: Deactivate component 1: Activate component 2: Component deactivate and not present		
<b>Recommendation:</b>	After inserting a component, before activating, first wait for Alarm A01317.		
<b>Dependency:</b>	Refer to: r0156 Refer to: A01314, A01317		

<b>r0156[0...n]</b>	<b>Voltage Sensing Module active/inactive / VSM act/inact</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	-
<b>Description:</b>	Displays the "active" or "inactive" state of a Voltage Sensing Module (VSM).		
<b>Value:</b>	0: Component inactive 1: Component active		
<b>Dependency:</b>	Refer to: p0155		
<b>r0157[0...n]</b>	<b>Voltage Sensing Module EEPROM data version / VSM EEPROM version</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the version of the EEPROM data of the Voltage Sensing Module (VSM).		
<b>Note:</b>	Example: The value 1010100 should be interpreted as V01.01.01.00.		
<b>r0157</b>	<b>Terminal Module EEPROM data version / TM EEPROM version</b>		
TM31, TM120, TM150, TM54F_MA, TM54F_SL	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the version of the EEPROM data of the Terminal Module.		
<b>Dependency:</b>	Refer to: r0127, r0147		
<b>Note:</b>	Example: The value 1010100 should be interpreted as V01.01.01.00.		
<b>r0157</b>	<b>DRIVE-CLiQ Hub Module EEPROM data version / Hub EEPROM version</b>		
HUB	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the version of the EEPROM data for the DRIVE-CLiQ Hub Module.		
<b>Note:</b>	Example: The value 1010100 should be interpreted as V01.01.01.00.		

## 2 Parameters

### 2.2 List of parameters

<b>r0158[0...n]</b>	<b>Voltage Sensing Module firmware version / VSM FW version</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the firmware version of the Voltage Sensing Module (VSM).		
<b>Dependency:</b>	Refer to: r0018, r0128, r0197, r0198		
<b>Note:</b>	Example: The value 1010100 should be interpreted as V01.01.01.00.		
<b>r0158</b>	<b>Terminal Module firmware version / TM FW version</b>		
TM31, TM120, TM150, TM54F_MA, TM54F_SL	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the firmware version of the Terminal Module.		
<b>Dependency:</b>	Refer to: r0018, r0128, r0148, r0197, r0198		
<b>Note:</b>	Example: The value 1010100 should be interpreted as V01.01.01.00.		
<b>r0158</b>	<b>DRIVE-CLiQ Hub Module firmware version / Hub FW version</b>		
HUB	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the firmware version of the DRIVE-CLiQ Hub Module.		
<b>p0161</b>	<b>Option board component number / Opt board comp_no</b>		
TB30	<b>Can be changed:</b> C1(4)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	199	0
<b>Description:</b>	Sets the component number for the option board (e.g. Terminal Board 30). This unique component number is assigned when parameterizing the topology. Only component numbers can be entered into this parameter that correspond to an option board.		

<b>p0170</b>		<b>Number of Command Data Sets (CDS) / CDS count</b>		
VECTOR_G	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	2	4	2	
<b>Description:</b>	Sets the number of Command Data Sets (CDS).			
<b>Note:</b>	It is possible to toggle between command parameters (BICO parameters) using this data set changeover.			

<b>p0170</b>		<b>Number of Command Data Sets (CDS) / CDS count</b>		
B_INF	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	1	2	1	
<b>Description:</b>	Sets the number of Command Data Sets (CDS).			
<b>Note:</b>	It is possible to toggle between command parameters (BICO parameters) using this data set changeover.			

<b>p0171[0...n]</b>		<b>Drive objects function module 1 / DO fct_mod 1</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(2)	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin	

**Description:** The function module of an existing drive object is entered into each index (see p0101, p0107).  
The following bits are available in p0171 for the Control Unit (Index 0):  
- still none  
For all other drive objects (Index > 0), the significance of the bits should be taken from the display parameters r0171 of the drive object.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-
	16	Bit 16	ON	OFF	-
	17	Bit 17	ON	OFF	-
	18	Bit 18	ON	OFF	-
	19	Bit 19	ON	OFF	-
	20	Bit 20	ON	OFF	-
	21	Bit 21	ON	OFF	-

## 2 Parameters

### 2.2 List of parameters

22	Bit 22	ON	OFF	-
23	Bit 23	ON	OFF	-
24	Bit 24	ON	OFF	-
25	Bit 25	ON	OFF	-
26	Bit 26	ON	OFF	-
27	Bit 27	ON	OFF	-
28	Bit 28	ON	OFF	-
29	Bit 29	ON	OFF	-
30	Bit 30	ON	OFF	-
31	Bit 31	ON	OFF	-

**Dependency:** Active messages can prevent or influence activating a function module.  
Refer to: p0108, r0108, p0172, r0172, p0173, r0173  
Refer to: A07089, F13010

**Note:** A "function module" is a functional expansion of a drive object that can be activated when commissioning.

---

#### r0171 Drive objects function module 1 / DO fct\_mod 1

VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
-	-	-	

**Description:** Displays the activated function module for the particular drive object.

**Dependency:** Refer to: p0108, r0108, p0172, r0172, p0173, r0173

**Note:** A "function module" is a functional expansion of a drive object that can be activated when commissioning.

---

#### p0172[0...n] Drive objects function module 2 / DO fct\_mod 2

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(2)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin	

**Description:** The function module of an existing drive object is entered into each index (see p0101, p0107).

The following bits are available in p0172 for the Control Unit (Index 0):

- still none

For all other drive objects (Index > 0), the significance of the bits should be taken from the display parameters r0172 of the drive object.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-
	16	Bit 16	ON	OFF	-
	17	Bit 17	ON	OFF	-
	18	Bit 18	ON	OFF	-

19	Bit 19	ON	OFF	-
20	Bit 20	ON	OFF	-
21	Bit 21	ON	OFF	-
22	Bit 22	ON	OFF	-
23	Bit 23	ON	OFF	-
24	Bit 24	ON	OFF	-
25	Bit 25	ON	OFF	-
26	Bit 26	ON	OFF	-
27	Bit 27	ON	OFF	-
28	Bit 28	ON	OFF	-
29	Bit 29	ON	OFF	-
30	Bit 30	ON	OFF	-
31	Bit 31	ON	OFF	-

**Dependency:** Active messages can prevent or influence activating a function module.

Refer to: p0108, r0108, p0171, r0171, p0173, r0173

Refer to: A07089, F13010

**Note:** A "function module" is a functional expansion of a drive object that can be activated when commissioning.

---

### r0172 Drive objects function module 2 / DO fct\_mod 2

VECTOR\_G, B\_INF,  
TM31, TM120, TM150,  
TB30, ENC

**Can be changed:** -

**Calculated:** -

**Access level:** 2

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** Closed-loop control

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:** Displays the activated function module for the particular drive object.

**Dependency:** Refer to: p0108, r0108, p0171, r0171, p0173, r0173

**Note:** A "function module" is a functional expansion of a drive object that can be activated when commissioning.

---

### p0173[0...n] Drive objects function module 3 / DO fct\_mod 3

CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP

**Can be changed:** C1(2)

**Calculated:** -

**Access level:** 2

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** -

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

0000 0000 0000 0000 0000  
0000 0000 0000 bin

**Description:** The function module of an existing drive object is entered into each index (see p0101, p0107).

The following bits are available in p0173 for the Control Unit (Index 0):

- still none

For all other drive objects (Index > 0), the significance of the bits should be taken from the display parameters r0173 of the drive object.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

## 2 Parameters

### 2.2 List of parameters

16	Bit 16	ON	OFF	-
17	Bit 17	ON	OFF	-
18	Bit 18	ON	OFF	-
19	Bit 19	ON	OFF	-
20	Bit 20	ON	OFF	-
21	Bit 21	ON	OFF	-
22	Bit 22	ON	OFF	-
23	Bit 23	ON	OFF	-
24	Bit 24	ON	OFF	-
25	Bit 25	ON	OFF	-
26	Bit 26	ON	OFF	-
27	Bit 27	ON	OFF	-
28	Bit 28	ON	OFF	-
29	Bit 29	ON	OFF	-
30	Bit 30	ON	OFF	-
31	Bit 31	ON	OFF	-

**Dependency:** Active messages can prevent or influence activating a function module.  
Refer to: p0108, r0108, p0171, r0171, p0172, r0172  
Refer to: A07089, F13010

**Note:** A "function module" is a functional expansion of a drive object that can be activated when commissioning.

---

#### r0173 Drive objects function module 3 / DO fct\_mod 3

VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the activated function module for the particular drive object.

**Dependency:** Refer to: p0108, r0108, p0171, r0171, p0172, r0172

**Note:** A "function module" is a functional expansion of a drive object that can be activated when commissioning.

---

#### p0180 Number of Drive Data Sets (DDS) / DDS count

VECTOR_G	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8565
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	32	1

**Description:** Sets the number of Drive Data Sets (DDS).

---

#### p0186[0...n] Motor Data Sets (MDS) number / MDS number

VECTOR_G	<b>Can be changed:</b> C1(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8575
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	15	0

**Description:** Using the parameter, each Drive Data Set (= index) is assigned the associated Motor Data Set (MDS). The parameter value therefore corresponds to the number of the assigned motor data set.

<b>p0187[0...n]</b>	<b>Encoder 1 encoder data set number / Enc 1 EDS number</b>		
VECTOR_G	<b>Can be changed:</b> C1(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 4700, 8570
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	99	99

**Description:** Assign a drive data set (= index) the corresponding encoder data set (EDS) for encoder 1.  
The value corresponds to the number of the assigned encoder data set.  
Example:

Encoder 1 in drive data set 2 should be assigned encoder data set 0.  
--> p0187[2] = 0

**Note:** A value of 99 means that no encoder has been assigned to this drive data set (not configured).

<b>p0188[0...n]</b>	<b>Encoder 2 encoder data set number / Enc 2 EDS number</b>		
VECTOR_G	<b>Can be changed:</b> C1(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 4700, 8570
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	99	99

**Description:** Assign a drive data set (= index) the corresponding encoder data set (EDS) for encoder 2.  
The value corresponds to the number of the assigned encoder data set.  
Example:

Encoder 2 in drive data set 2 should be assigned to encoder data set 1.  
--> p0188[2] = 1

**Note:** A value of 99 means that no encoder has been assigned to this drive data set (not configured).

<b>p0189[0...n]</b>	<b>Encoder 3 encoder data set number / Enc 3 EDS number</b>		
VECTOR_G	<b>Can be changed:</b> C1(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 4700, 8570
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	99	99

**Description:** Assign a drive data set (= index) the corresponding encoder data set (EDS) for encoder 3.  
The value corresponds to the number of the assigned encoder data set.

**Note:** A value of 99 means that no encoder has been assigned to this drive data set (not configured).

<b>r0192</b>	<b>Power unit firmware properties 1 / PU FW property 1</b>			
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	

**Description:** Displays the properties supported by the power unit firmware.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Edge modulation possible	Yes	No	-
	01	Free telegram can be selected	Yes	No	-
	02	Smart mode possible for Active Line Module	Yes	No	-
	03	Safety Integrated possible for VECTOR	Yes	No	-
	05	Thermal model expanded	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

06	Liquid cooling	Yes	No	-
07	SERVO pulse frequency changeover DDS-dependent	Yes	No	-
08	Simulation mode possible	Yes	No	-
09	Internal armature short-circuit possible	Yes	No	-
10	Autonomous internal armature short-circuit possible	Yes	No	-
11	Infeed temperature inputs X21.1/2	Yes	No	-
12	Integral scaled to half the gating unit clock cycle freq.	Yes	No	-
13	Filtering thermal power unit current limit possible	Yes	No	-
14	DC link compensation possible in power unit	Yes	No	-
15	PT100 temperature evaluation possible	Yes	No	-
16	Gating unit with pulse frequency wobble possible	Yes	No	-
17	Compound braking possible	Yes	No	-
18	Extended voltage range possible	Yes	No	-
19	Gating unit available with current limitation control	Yes	No	-
20	Component status possible	Yes	No	-
21	Temperature evaluation via Motor Module / CU terminals possible	Yes	No	-
22	Reduced device supply voltage possible	Yes	No	-
23	Current measurement oversampling available	Yes	No	-
24	Parking keeping the relevant data is available	Yes	No	-
25	Internal fan operating hours counter available	Yes	No	-
26	Software gating unit supported in the Control Unit	Yes	No	-
27	Current controller dynamics higher	Yes	No	-
28	Reserved			-
29	Voltage measurement	Yes	No	-
30	Gating unit with all-phase current limiting	Yes	No	-

**Dependency:**

Refer to: r0193

**Notice:**

This information represents the characteristics/features of the power unit firmware. It does not provide information/data about the characteristics/features of the hardware (e.g. bit 06 = 1 means that although the firmware supports "liquid cooling", a power unit with liquid cooling does not have to be used).

**Note:**

For bit 09:

The Motor Module supports the internal armature short-circuit. The function is internally required for voltage protection (p1231 = 3).

For bit 10:

The Motor Module supports the autonomous internal voltage protection.

If the "internal voltage protection" function is activated (p1231 = 3) the Motor Module decides autonomously - using the DC link voltage - as to whether the short-circuit is activated.

For bit 23:

The component supports the detection of current actual values (and the detection of valve close durations) with double clocking and phase shift.

<b>r0193</b>		<b>Power unit firmware properties 2 / PU FW property 2</b>			
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the properties supported by the power unit firmware.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	01	Component trace	Yes	No	-
	06	PT1000 temperature sensor evaluation	Yes	No	-
	08	Reduced undervoltage threshold during precharging	Yes	No	-
	09	Switchover to 1-phase line voltage	Yes	No	-
<b>Dependency:</b>	Refer to: r0192				
<b>r0194[0...n]</b>		<b>VSM properties / VSM properties</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the properties supported by the Voltage Sensing Module (VSM).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Reserved	Yes	No	-
<b>r0196[0...255]</b>		<b>Topology component status / Top comp stat</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status of the components. r0196[0]: group status of all components r0196[1]: Status of component with component number 1 ... r0196[255]: Status of component with component number 255				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Component status bit 0	High	Low	-
	01	Component status bit 1	High	Low	-
	02	Component status bit 2	High	Low	-
	03	Component status bit 3	High	Low	-
	04	Component state	Active	Inactive/parking	-
	06	Topology problem active	Yes	No	-
	07	Part of the target topology	Yes	No only act topo	-
	08	Alarm present	Yes	No	-
	09	Safety message present	Yes	No	-
	10	Fault present	Yes	No	-
	11	Alarm class bit 0	High	Low	-
	12	Alarm class bit 1	High	Low	-
	13	Maintenance required	Yes	No	-
	14	Maintenance urgently required	Yes	No	-
	15	Fault gone/can be acknowledged	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

**Note:** For bit 03 ... 00:  
 Bit 3, 2, 1, 0 = 0, 0, 0, 0 --> component not available.  
 Bit 3, 2, 1, 0 = 0, 0, 0, 1 --> power up, non-cyclic DRIVE-CLiQ communication (LED = orange).  
 Bit 3, 2, 1, 0 = 0, 0, 1, 0 --> operating mode, cyclic DRIVE-CLiQ communication (LED = green).  
 Bit 3, 2, 1, 0 = 0, 0, 1, 1 --> alarm (LED = green).  
 Bit 3, 2, 1, 0 = 0, 1, 0, 0 --> fault (LED = red).  
 Bit 3, 2, 1, 0 = 0, 1, 0, 1 --> detection via LED and operating mode (LED = green/orange).  
 Bit 3, 2, 1, 0 = 0, 1, 1, 0 --> detection via LED and alarm (LED = green/orange).  
 Bit 3, 2, 1, 0 = 0, 1, 1, 1 --> detection via LED and fault (LED = red/orange).  
 Bit 3, 2, 1, 0 = 1, 0, 0, 0 --> firmware being downloaded (LED = green/red with 0.5 Hz).  
 Bit 3, 2, 1, 0 = 1, 0, 0, 1 --> firmware download completed, wait for POWER ON (LED = green/red with 2.0 Hz).  
 For bits 12 ... 11:  
 These status bits are used for the classification of internal alarm classes and are intended for diagnostic purposes only on certain automation systems with integrated SINAMICS functionality.

<b>r0197[0...1]</b>		<b>Bootloader version / Bootloader vers</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the bootloader version. Index 0: Displays the bootloader version. Index 1: Displays the bootloader version 3 (for CU320-2 and CU310-2) Value 0 means that boot loader 3 is not available.			
<b>Dependency:</b>	Refer to: r0018, r0128, r0148, r0158, r0198			
<b>Note:</b>	Example: The value 1010100 should be interpreted as V01.01.01.00.			

<b>r0198[0...2]</b>		<b>BIOS/EEPROM data version / BIOS/EEPROM vers</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the BIOS and EEPROM data version. r0198[0]: BIOS version r0198[1]: EEPROM data version EEPROM 0 r0198[2]: EEPROM data version EEPROM 1			
<b>Dependency:</b>	Refer to: r0018, r0128, r0148, r0158, r0197			
<b>Note:</b>	Example: The value 1010100 should be interpreted as V01.01.01.00.			

<b>p0199[0...24]</b>	<b>Drive object name / DO name</b>		
All objects	<b>Can be changed:</b> C1	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Freely assignable name for a drive object. In the commissioning software, this name cannot be entered using the expert list, but is specified in the configuration assistant. The object name can be subsequently modified in the Project Navigator using standard Windows resources.		
<b>Note:</b>	The parameter is not influenced by setting the factory setting.		
<b>r0200[0...n]</b>	<b>Power unit code number actual / PU code no. act</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the unique code number of the power unit.		
<b>Note:</b>	r0200 = p0201: No power unit found For parallel circuit configurations, the parameter index is assigned to a power unit.		
<b>p0201[0...n]</b>	<b>Power unit code number / PU code no</b>		
VECTOR_G	<b>Can be changed:</b> C2(2)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Sets the actual code number from r0200 to acknowledge the power unit being used. When commissioned for the first time, the code number is automatically transferred from r0200 into p0201.		
<b>Dependency:</b>	Refer to: F07815		
<b>Notice:</b>	When p0201 = 10000, the rated power unit data is reloaded and dependent parameters are set (e.g. p0205, p0210, p0230, p0857, p1800). p0201 is then automatically assigned the value of r0200 if the code number of the power unit could be read. A warm start must be performed after this procedure (automatically if necessary).		
<b>Note:</b>	The parameter is used to identify when the drive is being commissioned for the first time. The power unit commissioning can only be exited (p0201 = r0200), if the actual and acknowledged code numbers are identical (p0010 = 2). However, if the comparator in p9906 or p9908 is at 2 (low) or 3 (minimum), the power unit commissioning is automatically set to p0201 = r0200 upon exiting. When the code number is changed, the connection voltage (p0210) is checked and, if necessary, adjusted. For parallel circuit configurations, the parameter index is assigned to a power unit.		
<b>p0201[0...n]</b>	<b>Power unit code number / PU code no</b>		
B_INF	<b>Can be changed:</b> C2(2)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Sets the actual code number from r0200 to acknowledge the power unit being used. When commissioned for the first time, the code number is automatically transferred from r0200 into p0201.		

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Refer to: F07815

**Note:** The parameter is used to identify when the drive is being commissioned for the first time.  
The power unit commissioning can only be exited (p0201 = r0200), if the actual and acknowledged code numbers are identical (p0010 = 2).  
For parallel circuit configurations, the parameter index is assigned to a power unit.

---

<b>r0203[0...15]</b>	<b>Firmware package name / FW pkg name</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the name of the firmware package on the memory card/device memory.  
r0203[0]: Name character 1  
...  
r0203[15]: Name character 16  
For the commissioning software, the ASCII characters are displayed unencoded.

**Notice:** An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.

---

<b>r0203[0...n]</b>	<b>Actual power unit type / PU actual type</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	2	400	-

**Description:** Displays the type of power unit found.

**Value:**

- 2: MICROMASTER 440
- 3: MICROMASTER 411
- 4: MICROMASTER 410
- 5: MICROMASTER 436
- 6: MICROMASTER 440 PX
- 7: MICROMASTER 430
- 100: SINAMICS S
- 101: SINAMICS S (value)
- 102: SINAMICS S (combi)
- 103: SINAMICS S120M (distributed)
- 112: PM220 (SINAMICS G120)
- 113: PM230 (SINAMICS G120)
- 114: PM240 (SINAMICS G120)
- 115: PM250 (SINAMICS G120 / S120)
- 116: PM260 (SINAMICS G120)
- 118: SINAMICS G120 Px
- 120: PM340 (SINAMICS S120)
- 126: SINAMICS ET200PRO
- 130: PM250D (SINAMICS G120D)
- 133: SINAMICS G120C
- 135: SINAMICS PMV40
- 136: SINAMICS PMV60
- 137: SINAMICS PMV80
- 138: SINAMICS G110M
- 150: SINAMICS G
- 151: PM330 (SINAMICS G120)
- 200: SINAMICS GM
- 250: SINAMICS SM
- 260: SINAMICS MC
- 300: SINAMICS GL

350: SINAMICS SL  
400: SINAMICS DCM

**Note:** For parallel circuit configurations, the parameter index is assigned to a power unit.

---

### r0204[0...n] Power unit hardware properties / PU HW property

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the properties supported by the power unit hardware.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Device type	DC/AC device	AC/AC device	-
	01	RFI filter available	Yes	No	-
	02	Active Line Module available	Yes	No	-
	03	Smart Line Module available	Yes	No	-
	04	Basic Line Module available with thyristor bridge	Yes	No	-
	05	Basic Line Module available with diode bridge	Yes	No	-
	06	Liquid cooling with cooling unit (chassis PU)	Yes	No	-
	07	F3E regenerative feedback into the line supply	Yes	No	-
	08	Internal Braking Module	Yes	No	-
	09	Different cooling type supported	Yes	No	-
	12	Safe Brake Control (SBC) supported	No	Yes	-
	13	Safety Integrated supported	Yes	No	-
	14	Internal LC output filter	Yes	No	-
	15	Line voltage	1-phase	3-phase	-

**Note:** For parallel circuit configurations, the parameter index is assigned to a power unit.

---

### r0204[0...n] Power unit hardware properties / PU HW property

B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the properties supported by the power unit hardware.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Device type	DC/AC device	AC/DC device	-
	01	RFI filter available	Yes	No	-
	02	Active Line Module available	Yes	No	-
	03	Smart Line Module available	Yes	No	-
	04	Basic Line Module available with thyristor bridge	Yes	No	-
	05	Basic Line Module available with diode bridge	Yes	No	-
	06	Liquid cooling with cooling unit (chassis PU)	Yes	No	-
	07	F3E regenerative feedback into the line supply	Yes	No	-
	08	Internal Braking Module	Yes	No	-
	09	Different cooling type supported	Yes	No	-
	12	Safe Brake Control (SBC) supported	No	Yes	-
	13	Safety Integrated supported	Yes	No	-
	14	Internal LC output filter	Yes	No	-
	15	Line voltage	1-phase	3-phase	-

**Note:** For parallel circuit configurations, the parameter index is assigned to a power unit.

## 2 Parameters

### 2.2 List of parameters

---

<b>p0205</b>	<b>Power unit application / PU application</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 2) <b>Data type:</b> Integer16 <b>P-Group:</b> Converter <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 7	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 6
<b>Description:</b>	Overloading the load duty cycles applies under the prerequisite that before and after the overload, the drive converter is operated with its base load current - in this case, a load duty cycle of 300 s is used as basis. For booksize drive units, the following applies: Only the setting p0205 = 0 can be selected. In this particular case, the base load current has a load duty cycle of 150 % for 60 s and 176 % for 30 s. For chassis units, the following applies: The base load current for a low overload condition is based on a load duty cycle 110 % for 60 s and 150 % for 10 s. The base load current for a high overload condition is based on a load duty cycle 150 % for 60 s and 160 % for 10 s.		
<b>Value:</b>	0: Load duty cycle with high overload 1: Load duty cycle with low overload 6: S1 continuous duty (for servo drives) 7: S6 load duty cycle (for servo drives)		
<b>Note:</b>	When the parameter is changed, all of the motor parameters and the control mode are pre-assigned according to the selected application. The parameter has no influence when calculating the thermal overload. p0205 can only be changed to the settings that are saved in the power unit EEPROM. The parameter value is not reset when the factory setting is restored (see p0010 = 30, p0970).		

---

<b>r0206[0...4]</b>	<b>Rated power unit power / PU P<sub>rated</sub></b>		
VECTOR_G, B_INF	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Converter <b>Not for motor type:</b> - <b>Min</b> - [kW]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 14_6 <b>Scaling:</b> - <b>Max</b> - [kW]	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> p0100 <b>Expert list:</b> 1 <b>Factory setting</b> - [kW]
<b>Description:</b>	Displays the rated power unit power for various load duty cycles.		
<b>Index:</b>	[0] = Rated value [1] = Load duty cycle with low overload [2] = Load duty cycle with high overload [3] = S1 cont duty cyc [4] = S6 load duty cycle		
<b>Dependency:</b>	IECdrives (p0100 = 0): Units kW NEMA drives (p0100 = 1): Units hp Refer to: p0100, p0205		

---

<b>r0207[0...4]</b>	<b>Rated power unit current / PU PI<sub>rated</sub></b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Converter <b>Not for motor type:</b> - <b>Min</b> - [Arms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [Arms]	<b>Access level:</b> 2 <b>Func. diagram:</b> 8021 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [Arms]
<b>Description:</b>	Displays the rated power unit power for various load duty cycles.		
<b>Index:</b>	[0] = Rated value [1] = Load duty cycle with low overload [2] = Load duty cycle with high overload [3] = S1 cont duty cyc [4] = S6 load duty cycle		

**Dependency:** Refer to: p0205

---

<b>r0207[0...4]</b>	<b>Rated power unit current / PU PI<sub>rated</sub></b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8021
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the rated power unit power for various load duty cycles.		
<b>Index:</b>	[0] = Rated value [1] = Load duty cycle with low overload [2] = Load duty cycle with high overload [3] = S1 cont duty cyc [4] = S6 load duty cycle		
<b>Dependency:</b>	Refer to: p0205		
<b>Note:</b>	The following applies for booksize power units: The display value corresponds to the rated DC link current at 600 V (according to the SINAMICS S120 Manual). For chassis power units, the following applies: The display value corresponds to the rated input current at the rated line voltage (according to the SINAMICS S120 Manual).		

---

<b>r0208</b>	<b>Rated power unit line supply voltage / PU U<sub>rated</sub></b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]
<b>Description:</b>	Displays the rated line supply voltage of the power unit. r0208 = 400: 380 - 480 V +/-10 % r0208 = 500: 500 - 600 V +/-10 % r0208 = 690: 660 - 690 V +/-10 % For the Basic Line Module (BLM) the following applies: r0208 = 690: 500 - 690 V +/-10 %		

---

<b>r0209[0...4]</b>	<b>Power unit maximum current / PU I<sub>max</sub></b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8750, 8850, 8950
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the maximum output current of the power unit.		
<b>Index:</b>	[0] = Catalog [1] = Load duty cycle with low overload [2] = Load duty cycle with high overload [3] = S1 load duty cycle [4] = S6 load duty cycle		
<b>Dependency:</b>	Refer to: p0205		

<b>p0210</b>	<b>Drive unit line supply voltage / U_connect</b>		
VECTOR_G	<b>Can be changed:</b> C2(2), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1 [V]	63000 [V]	600 [V]
<b>Description:</b>	Sets the drive unit supply voltage. AC/AC unit: The rms value of the phase-to-phase line supply voltage should be entered. DC/AC unit: The rated DC voltage of the connection busbar should be entered.		
<b>Dependency:</b>	Set p1254, p1294 (automatic detection of the Vdc switch-on levels) = 0. The switch-in thresholds of the Vdc_max controller (r1242, r1282) are then directly determined using p0210. The parameter can be reduced to p0210 = 100 V if p0212.0 = 1 has been set. Refer to: p0212		
<b>Notice:</b>	If, in the switched-off state (pulse inhibit), the supply voltage is higher than the entered value, the Vdc controller may be automatically deactivated in some cases to prevent the motor from accelerating the next time the system is switched on. In this case, an appropriate alarm is output (A07401). For SINAMICS S150 devices, the supply voltage is calculated from the line supply voltage (p0210 of the infeed), and is overwritten each time that the line supply voltage changes.		
<b>Note:</b>	Setting ranges for p0210 as a function of the rated power unit voltage: U Rated = 400 V: - p0210 = 380 ... 480 V (AC/AC), 510 ... 720 V (DC/AC) U Rated = 500 V: - p0210 = 500 ... 600 V (AC/AC), 675 ... 900 V (DC/AC) U Rated = 660 ... 690 V: - p0210 = 660 ... 690 V (AC/AC), 890 ... 1035 V (DC/AC) U Rated = 500 ... 690 V: - p0210 = 500 ... 690 V (AC/AC), 675 ... 1035 V (DC/AC) The precharging switch-in threshold for the DC link voltage (Vdc) is calculated from p0210: Vdc_pre = p0210 * 0.82 * 1.35 (AC/AC) Vdc_pre = p0210 * 0.82 (DC/AC) The undervoltage thresholds for the DC link voltage (Vdc) are calculated from p0210 as a function of the rated power unit voltage: U Rated = 400 V: - U_min = p0210 * 0.78 (AC/AC) > 330 V, p0210 * 0.60 (DC/AC) > 380 V U Rated = 500 V: - U_min = p0210 * 0.76 (AC/AC) > 410 V U Rated = 660 ... 690 V: - U_min = p0210 * 0.82 (AC/AC) > 565 V, p0210 * 0.63 (DC/AC) > 650 V U Rated = 500 ... 690 V: - U_min = p0210 * 0.82 (AC/AC) > 420 V, p0210 * 0.63 (DC/AC) > 480 V		
<b>p0210</b>	<b>Drive unit line supply voltage / U_connect</b>		
B_INF	<b>Can be changed:</b> C2(1)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8760
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	70 [Vrms]	1000 [Vrms]	400 [Vrms]
<b>Description:</b>	Sets the drive unit supply voltage (3-ph. AC). The value corresponds to the rms value of the phase-to-phase rated line supply voltage.		
<b>Dependency:</b>	The parameter can be reduced to p0210 = 70 V if p0212.0 is set.		

**Notice:** When connected to 3-ph. 230 V AC (only booksize units) the following must be observed:

- the undervoltage and overvoltage limits change (r0296, r0297).
- when using the internal braking chopper of Basic Line Modules (20 or 40 kW) the threshold when the braking chopper becomes active is reduced to 385 V. When using an external braking chopper, it must be ensured that a suitable activation threshold is used.
- all of the components connected to this DC link must also be adapted to the low line supply voltage. It is especially important that the rated DC voltage of all of the drives connected to this DC link is set with p0210 (e.g.  $p0210(\text{SERVO}) = 1.35 \times p0210(\text{B\_INF}) = 310 \text{ V}$ ).
- it is not possible to use a Control Supply Module (CSM) to generate a 24 V supply from the DC link, as the minimum continuous DC link voltage should not be below 430 V.

**Note:** The supply voltage range depends on the voltage class of the power unit.

400 V chassis units:  $380 \text{ V} \leq p0210 \leq 480 \text{ V}$   
 690 V chassis units:  $500 \text{ V} \leq p0210 \leq 690 \text{ V}$   
 400 V booksize units can also be connected to 3-ph. 230 V AC:  
 400 V booksize units:  $180 \text{ V} \leq p0210 \leq 480 \text{ V}$   
 A reduced supply voltage up to 70 V is possible if p0212.0 = 1 has been set.

<b>p0212</b>		<b>Power unit configuration / PU config</b>			
VECTOR_G	<b>Can be changed:</b> C2(2)	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 bin		
<b>Description:</b>	Sets the power unit configuration.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Drive unit line supply voltage reduced	Yes	No	-
	01	External precharging present	Yes	No	-
	03	Automatically adapt Vdc_max limit	No	Yes	-
	05	Contactors display inputs/outputs status	Yes	No	9814

**Dependency:** For bit 00:  
 Reduced supply voltages are only possible for booksize and chassis power units (DC/AC).  
 Bit 0 = 1 can only be set if r0192.22 = 1.  
 For bit 01 = 1:  
 The external precharging setting only affects the DC/AC power units.  
 For bit 03 = 1:  
 The automatic adaptation (reduction) of the Vdc max limit is deactivated (only for chassis power units). Bit 3 only has an effect, if bit 0 is simultaneously set.  
 Refer to: r0192, p0210

**Caution:** For bit 00:  
 Working with reduced input voltages deactivates undervoltage detection.  
 For bit 03:  
 If the automatic setting of the Vdc max limit is deactivated, then all of the components connected to the DC link must be suitable for the maximum DC link voltage of the power unit (e.g. 820 V for 400 V units).

**Note:** For bit 00 = 0:  
 It is not possible to reduce the supply voltage in p0210.  
 For bit 00 = 1:  
 With this setting the supply voltage in p0210 can be reduced to 100 V.  
 Booksize PU: only for operating mode p1300 = 19  
 Chassis PU: only for operating mode p1300 > 19 and closed-loop DC voltage control  
 For bit 01 = 0:  
 There is no external precharging of the DC/AC Motor Modules. The precharging monitoring is bypassed.  
 For bit 01 = 1:  
 There is external precharging of the DC/AC Motor Modules. The precharging monitoring is calculated.  
 For bit 03 = 0:  
 The DC link voltage limit is calculated from p0210.

## 2 Parameters

### 2.2 List of parameters

For bit 03 = 1:

The DC link voltage limit is set to the maximum value of the power unit.

For bit 05 = 1:

The status of the inputs/outputs for the power unit contactors is displayed in r0256.

This only applies to chassis power units with 3 AC line connection and line contactors.

The status display is only effective after parameter save and POWER ON.

<b>p0212</b>		<b>Power unit configuration / PU config</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(2) <b>Data type:</b> Unsigned16 <b>P-Group:</b> Converter <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 0000 bin	
<b>Description:</b>	Sets the power unit configuration.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Drive unit line supply voltage reduced	Yes	No
	01	External precharging present	Yes	No
	03	Automatically adapt Vdc_max limit	No	Yes
	05	Contactor display inputs/outputs status	Yes	No
	06	Reduction of the permissible minimum voltage during precharging	Yes	No
				<b>FP</b>
				-
				-
				9814
				-
<b>Dependency:</b>	<p>For bit 00: Reduced supply voltages are only possible for booksize and chassis power units (DC/AC). Bit 0 = 1 can only be set if r0192.22 = 1.</p> <p>For bit 01 = 1: The external precharging setting only affects the DC/AC power units.</p> <p>For bit 03 = 1: The automatic adaptation (reduction) of the Vdc max limit is deactivated (only for chassis power units). Bit 3 only has an effect, if bit 0 is simultaneously set. Refer to: r0192, p0210</p>			
<b>Caution:</b>	<p>For bit 00: Working with reduced input voltages deactivates undervoltage detection.</p> <p>For bit 03: If the automatic setting of the Vdc max limit is deactivated, then all of the components connected to the DC link must be suitable for the maximum DC link voltage of the power unit (e.g. 820 V for 400 V units).</p>			
<b>Note:</b>	<p>For bit 00 = 0: It is not possible to reduce the supply voltage in p0210.</p> <p>For bit 00 = 1: With this setting the supply voltage in p0210 can be reduced to 100 V. Booksize PU: only for operating mode p1300 = 19 Chassis PU: only for operating mode p1300 &gt; 19 and closed-loop DC voltage control</p> <p>For bit 01 = 0: There is no external precharging of the DC/AC Motor Modules. The precharging monitoring is bypassed.</p> <p>For bit 01 = 1: There is external precharging of the DC/AC Motor Modules. The precharging monitoring is calculated.</p> <p>For bit 03 = 0: The DC link voltage limit is calculated from p0210.</p> <p>For bit 03 = 1: The DC link voltage limit is set to the maximum value of the power unit.</p> <p>For bit 05 = 1: The status of the inputs/outputs for the power unit contactors is displayed in r0256. This only applies to chassis power units with 3 AC line connection and line contactors. The status display is only effective after parameter save and POWER ON.</p>			

For bit 06:

Precharging via the Motor Module is activated using this bit. To do this, while precharging, the undervoltage threshold for the pulse enable is reduced.

Precharging via the Motor Module can only be activated for S120 devices for separately excited synchronous generators where the DC link voltage control has been preselected (technology controller function module).

### p0212 Power unit configuration / PU config

B_INF	<b>Can be changed:</b> C2(2)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 bin

**Description:** Sets the power unit configuration.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Drive unit line supply voltage reduced	Yes	No	-
	02	Reserved	Yes	No	-
	05	Contactor display inputs/outputs status	Yes	No	9814

**Dependency:** For bit 00:  
Reduced supply voltages are only possible on booksize power units.  
Bit 0 = 1 can only be set if r0192.22 = 1.  
Refer to: r0192, p0210

**Caution:**



For bit 00:  
Working with reduced input voltages correspondingly reduces undervoltage detection.  
This function may only be used by personnel with expert knowledge!

**Note:**

For bit 00 = 0:  
It is not possible to reduce the supply voltage in p0210 to below 180 V.  
For bit 00 = 1:  
With this setting the supply voltage in p0210 can be reduced to 70 V.  
Bit 0 = 1 can only be set for booksize power units with a rated power of up to 40 kW.  
The activation of this function is retentively saved in the unit and for incorrect design of the application can result in loss of warranty!  
For bit 02:  
Reserved. It is not permissible to set to 1.  
For bit 05 = 1:  
The status of the inputs/outputs for the power unit contactors is displayed in r0256.  
This only applies to chassis power units with 3 AC line connection and line contactors.  
The status display is only effective after parameter save and POWER ON.

### p0230 Drive filter type motor side / Drv filt type mot

VECTOR_G	<b>Can be changed:</b> C2(1, 2)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4	0

**Description:** Sets the type of the filter at the motor side.

**Value:**

0:	No filter
1:	Motor reactor
2:	dv/dt filter
3:	Sine-wave filter Siemens
4:	Sine-wave filter third-party

**Dependency:** The following parameters are influenced using p0230:  
p0230 = 1:  
--> p0233 (power unit, motor reactor) = filter inductance

## 2 Parameters

### 2.2 List of parameters

p0230 = 3:

- > p0233 (power unit, motor reactor) = filter inductance
- > p0234 (power unit sine-wave filter capacitance) = filter capacitance
- > p0290 (power unit overload response) = inhibit pulse frequency reduction
- > p1082 (maximum speed) = Fmax filter / pole pair number
- > p1800 (pulse frequency) >= nominal pulse frequency of the filter
- > p1802 (modulator modes) = space vector modulation without overcontrol
- > p1811 (modulator configuration) = wobulation amplitude
- > p1909 (motor data identification, control word) = only Rs measurement

p0230 = 4:

- > p0290 (power unit overload response) = inhibit pulse frequency reduction
- > p1802 (modulator modes) = space vector modulation without overcontrol
- > p1811 (modulator configuration) = wobulation amplitude
- > p1909 (motor data identification, control word) = only Rs measurement

The user must set the following parameters according to the data sheet of the sine-wave filter and also the user must check whether they are permitted.

- > p0233 (power unit, motor reactor) = filter inductance
- > p0234 (power unit sine-wave filter capacitance) = filter capacitance
- > p1082 (maximum speed) = Fmax filter / pole pair number
- > p1800 (pulse frequency) >= nominal pulse frequency of the filter

Refer to: p0233, p0234, p0290, p1082, p1800, p1802

**Note:**

Only motor reactor filter type can be selected for a synchronous reluctance motor (RESM).  
if a filter type cannot be selected, then this filter type is not permitted for the Motor Module.

p0230 = 1:

The output frequency of booksize power units with output reactors is restricted to 120 Hz, for blocksize and chassis power units, to 150 Hz. The maximum pulse frequency for booksize and blocksize power units is 4 kHz, for chassis power units, twice the rated pulse frequency (2.5 kHz or 4 kHz).

p0230 = 2:

Chassis power units with dv/dt filter, depending on the rated pulse frequency, may be operated with a maximum pulse frequency of p1800 = 2.5 kHz or 4 kHz. The output frequency is limited to 150 Hz.

p0230 = 3:

Sine-wave filters with a rated pulse frequency of 1.25 or 2.5 kHz should only be operated with a current controller sampling rate p0115[0] = 400 µs, sine-wave filters with a rated pulse frequency of 2 or 4 kHz with p0115[0] = 250 µs. The sine-wave filter cannot be selected if the current controller sampling rate has not been appropriately set. Chassis power units with sine-wave filter are limited to output frequencies of 115 Hz or 150 Hz.

<b>p0233</b>		<b>Power unit motor reactor / PU mot reactor</b>		
VECTOR_G	<b>Can be changed:</b> C2(2), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.000 [mH]	1000.000 [mH]	0.000 [mH]	
<b>Description:</b>	Enter the inductance of a filter connected at the power unit output.			
<b>Dependency:</b>	This parameter is automatically pre-set when you select a filter via p0230 if a SIEMENS filter is defined for the power unit. Refer to: p0230			
<b>Note:</b>	When exiting the quick commissioning using p3900 = 1, the parameter value is set to the value of the defined SIEMENS filter or to zero. For this reason, the parameter value of a third-party filter only has to be entered outside the commissioning phase (p0010 = 0) and then the controller calculation (p0340 = 3) is carried out.			

<b>p0234</b>	<b>Power unit sine-wave filter capacitance / PU sine filter C</b>				
VECTOR_G	<b>Can be changed:</b> C2(2), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	0.000 [ $\mu$ F]	1000.000 [ $\mu$ F]	0.000 [ $\mu$ F]		
<b>Description:</b>	Enters the capacitance of a sine-wave filter connected at the power unit output.				
<b>Dependency:</b>	This parameter is automatically pre-set when you select a filter via p0230 if a SIEMENS filter is defined for the power unit.				
	Refer to: p0230				
<b>Note:</b>	The parameter value includes the sum of all of the capacitances of a phase connected in series (phase - ground). When exiting the quick commissioning using p3900 = 1, the parameter value is set to the value of the defined SIEMENS filter or to zero. For this reason, the parameter value of a third-party filter only has to be entered outside the commissioning phase (p0010 = 0).				
<b>p0235</b>	<b>Motor reactor in series number / L_mot in SeriesQty</b>				
VECTOR_G	<b>Can be changed:</b> C2(1, 2)	<b>Calculated:</b> -	<b>Access level:</b> 1		
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	1	3	1		
<b>Description:</b>	Sets the number of reactors connected in series at the power unit output.				
<b>Dependency:</b>	Refer to: p0230				
<b>Notice:</b>	If the number of motor reactors connected in series does not correspond to this parameter value, then this can result in an unfavorable control behavior.				
<b>r0238</b>	<b>Internal power unit resistance / PU R internal</b>				
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	- [ohm]	- [ohm]	- [ohm]		
<b>Description:</b>	Displays the internal resistance of the power unit (IGBT and line resistance).				
<b>Note:</b>	For a parallel circuit, the value corresponds to the resistance of a power unit.				
<b>p0247</b>	<b>Voltage measurement configuration / U_mes config</b>				
VECTOR_G	<b>Can be changed:</b> C2(2), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 bin		
<b>Description:</b>	Sets the configuration for the voltage measurement.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	05	Use voltage measured values for flying restart	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

**Warning:**

For p0247.5 = 1 (only for induction motors):

If the Voltage Sensing Module (VSM) is connected to the line voltage, then the line frequency is interpreted as speed. In this case, the flying restart function cannot be used together with VSM and the bit should be set to 0.

If only one VSM is connected at the Motor Module, line synchronization must be deactivated (p3800 = 0), in order to be able to use flying restart together with VSM. If two VSMs are connected, the second VSM is used for flying restart.

**Note:**

The functions are only available if a Voltage Sensing Module (VSM) is assigned to the Motor Module (p0150, p0151).

---

**p0249****Power unit cooling type / PU cool type**

VECTOR\_G

**Can be changed:** C2(1, 2)**Calculated:** -**Access level:** 4**Data type:** Integer16**Dyn. index:** -**Func. diagram:** -**P-Group:** Converter**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0

1

0

**Description:**

Sets the cooling type for booksize compact power units.

This therefore defines whether for these power units, the internal air cooling is shut down and instead, the "Cold-Plate" cooling type is used.

**Value:**

0: Air cooling int

1: Cold-Plate

**Note:**

For booksize compact power units, in the Article number there is a 4 at the 5th position.

The parameter is irrelevant for all other power unit types.

---

**p0251[0...n]****Operating hours counter power unit fan / PU fan t\_oper**

VECTOR\_G, B\_INF

**Can be changed:** T**Calculated:** -**Access level:** 3**Data type:** Unsigned32**Dyn. index:** PDS, p0120**Func. diagram:** -**P-Group:** Modulation**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0 [h]

4294967295 [h]

0 [h]

**Description:**

Displays the power unit fan operating hours.

The number of hours operated can only be reset to 0 in this parameter (e.g. after a fan has been replaced).

**Dependency:**

Refer to: p0252

Refer to: A30042

**Note:**

For liquid-cooled chassis power units, the operating hours of the inner fan are displayed in p0251 and not in p0254.

---

**p0252****Maximum operating time power unit fan / PU fan t\_oper max**

VECTOR\_G, B\_INF

**Can be changed:** T**Calculated:** -**Access level:** 4**Data type:** Unsigned32**Dyn. index:** -**Func. diagram:** -**P-Group:** Modulation**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0 [h]

100000 [h]

40000 [h]

**Description:**

Sets the maximum operating time of the power unit fan.

The prealarm (warning) is output 500 hours before this set value.

The monitoring is deactivated with p0252 = 0.

**Dependency:**

Refer to: p0251

Refer to: A30042

<b>p0254[0...n]</b>	<b>Operating hours counter power unit fan inside the converter / PU inner fan t_op</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [h]	4294967295 [h]	0 [h]
<b>Description:</b>	Displays the power unit fan operating hours of the internal fan in the power unit. The number of hours operated can only be reset to 0 in this parameter (e.g. after a fan has been replaced).		
<b>Dependency:</b>	Refer to: A30042		
<b>Note:</b>	For liquid-cooled chassis power units, the operating hours of the inner fan are displayed in p0251 and not in p0254.		
<b>p0255[0...7]</b>	<b>Power unit contactor monitoring time / PU cont t_monit</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1 [ms]	65535 [ms]	[0] 0 [ms] [1] 0 [ms] [2] -1 [ms] [3] -1 [ms] [4...7] 0 [ms]
<b>Description:</b>	Sets the monitoring time for internal monitoring of the contactor feedback contacts. For a value 0.0 or negative values, the particular monitoring is deactivated. For index 0 ... 3: Is used to monitor the delay time between the control and feedback signals of the particular contactor. For index 4 ... 7: Is used for simultaneity monitoring for a parallel connection. After a contactor has been opened or closed, this checks whether, after the monitoring time has expired, all contactors of the parallel connection have assumed the same state. For index 2, 3: The value -1.0 means that the particular opening time is taken from Index 0 or 1.		
<b>Index:</b>	[0] = Precharging contactor closing time [1] = Bypass contactor closing time [2] = Precharging contactor opening time [3] = Bypass contactor opening time [4] = Simultaneity precharging contactor closing time [5] = Simultaneity bypass contactor closing time [6] = Simultaneity precharging contactor opening time [7] = Simultaneity bypass contactor opening time		
<b>Dependency:</b>	Refer to: r0256 Refer to: F05118, F05119, F30060, F30061		
<b>Notice:</b>	For index 4 ... 7: The simultaneity monitoring is only activate after parameter save and POWER ON.		
<b>Note:</b>	- this parameter is only effective for chassis power units with 3 AC line connection and line contactors. - the simultaneity monitoring can only be activated for a parallel connection. - the feedback signal input of an open bypass contactor must be displayed in r0256 = 0. - the feedback signal input of an open precharging contactor must be displayed in r0256 = 1. - Determining practical monitoring times can be supported by a tracing r0256. For power unit firmware version less than 4.6, the following applies: There are no separate monitoring times for the delay time between opening and closing. In this case, the maximum of the opening time and closing time is effective.		

<b>r0256.0...31</b>		<b>CO/BO: Power unit contactor inputs/outputs status / PU contact IO stat</b>			
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9814		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the status of the inputs/outputs of the power unit contactors. The display is activated in p0212.5.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	PDS0 precharging/line contactor control output	High	Low	-
	01	PDS0 precharging/line contactor feedback signal input	High	Low	-
	02	PDS0 bypass contactor control output	High	Low	-
	03	PDS0 bypass contactor feedback signal input	High	Low	-
	04	PDS1 precharging/line contactor control output	High	Low	-
	05	PDS1 precharging/line contactor feedback signal input	High	Low	-
	06	PDS1 bypass contactor control output	High	Low	-
	07	PDS1 bypass contactor feedback signal input	High	Low	-
	08	PDS2 precharging/line contactor control output	High	Low	-
	09	PDS2 precharging/line contactor feedback signal input	High	Low	-
	10	PDS2 bypass contactor control output	High	Low	-
	11	PDS2 bypass contactor feedback signal input	High	Low	-
	12	PDS3 precharging/line contactor control output	High	Low	-
	13	PDS3 precharging/line contactor feedback signal input	High	Low	-
	14	PDS3 bypass contactor control output	High	Low	-
	15	PDS3 bypass contactor feedback signal input	High	Low	-
	16	PDS4 precharging/line contactor control output	High	Low	-
	17	PDS4 precharging/line contactor feedback signal input	High	Low	-
	18	PDS4 bypass contactor control output	High	Low	-
	19	PDS4 bypass contactor feedback signal input	High	Low	-
	20	PDS5 precharging/line contactor control output	High	Low	-
	21	PDS5 precharging/line contactor feedback signal input	High	Low	-
	22	PDS5 bypass contactor control output	High	Low	-
	23	PDS5 bypass contactor feedback signal input	High	Low	-
	24	PDS6 precharging/line contactor control output	High	Low	-
	25	PDS6 precharging/line contactor feedback signal input	High	Low	-
	26	PDS6 bypass contactor control output	High	Low	-

27	PDS6 bypass contactor feedback signal input	High	Low	-
28	PDS7 precharging/line contactor control output	High	Low	-
29	PDS7 precharging/line contactor feedback signal input	High	Low	-
30	PDS7 bypass contactor control output	High	Low	-
31	PDS7 bypass contactor feedback signal input	High	Low	-

**Dependency:**

Refer to: p0212

**Note:**

This parameter is only effective for chassis power units with 3 AC line connection and line contactors.  
PDS: Power unit Data Set

**p0260****Cooling unit starting time 1 / RKA start time 1**

VECTOR\_G  
(Cool\_unit), B\_INF  
(Cool\_unit)

**Can be changed:** U, T**Calculated:** -**Access level:** 3**Data type:** FloatingPoint32**Dyn. index:** -**Func. diagram:** 9795**P-Group:** Converter**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0.0 [s]

60.0 [s]

5.0 [s]

**Description:**

Sets starting time 1 to monitor the cooling unit after switch-on command.  
After switching on, the following signals must be present within starting time 1:  
- "RKA switched on"  
- "RKA liquid flow OK"  
When a fault occurs, an appropriate message is output.

**Dependency:**

Refer to: F49152, F49153

**Note:**

RKA: cooling system

**p0261****Cooling unit starting time 2 / RKA start time 2**

VECTOR\_G  
(Cool\_unit), B\_INF  
(Cool\_unit)

**Can be changed:** U, T**Calculated:** -**Access level:** 3**Data type:** FloatingPoint32**Dyn. index:** -**Func. diagram:** 9795**P-Group:** Converter**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0.0 [s]

1200.0 [s]

180.0 [s]

**Description:**

Sets starting time 2 to monitor the cooling unit after switch-on command.  
After switching on, the following signals must be present within starting time 2:  
- "RKA conductivity, no fault"  
- "RKA conductivity, no alarm"  
When a fault occurs, an appropriate message is output.

**Dependency:**

Refer to: p0266

Refer to: F49151

**p0262****Cooling unit fault conductivity delay time / RKA cond t\_del**

VECTOR\_G  
(Cool\_unit), B\_INF  
(Cool\_unit)

**Can be changed:** U, T**Calculated:** -**Access level:** 3**Data type:** FloatingPoint32**Dyn. index:** -**Func. diagram:** 9795**P-Group:** Converter**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0.0 [s]

30.0 [s]

0.0 [s]

**Description:**

Sets the delay time for the fault "RKA: Conductive limit value exceeded" during operation.  
The fault is only output if, during operation, the conductivity exceeds the permissible fault value and the value remains for a longer time than is set in this parameter.

**Dependency:**

Refer to: F49151, A49171

## 2 Parameters

### 2.2 List of parameters

<b>p0263</b>	<b>Cooling unit fault liquid flow delay time / RKA flow t_del</b>				
VECTOR_G (Cool_unit), B_INF (Cool_unit)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9795		
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	0.0 [s]	20.0 [s]	3.0 [s]		
<b>Description:</b>	Sets the delay time for the fault "RKA: Liquid flow too low". The fault is only output if the cause is present for a time longer than is set in this parameter.				
<b>Dependency:</b>	Refer to: F49153				
<b>p0264</b>	<b>Cooling unit run-on time / RKA run-on time</b>				
VECTOR_G (Cool_unit), B_INF (Cool_unit)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9795		
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	0.0 [s]	180.0 [s]	30.0 [s]		
<b>Description:</b>	Sets the run-up time of the cooling unit after a switch-off command.				
<b>r0265.0...3</b>	<b>BO: Cooling unit control word / RKA STW</b>				
VECTOR_G (Cool_unit), B_INF (Cool_unit)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the control word for the cooling unit.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Switch on cooling unit	Switch on	Switch off	-
	01	Message converter off	OFF	ON	-
	02	Acknowledge faults	Acknowledgment	No acknowledgment	-
	03	Leakage sensing OK	No leaked liquid	Leaked liquid	-
<b>p0266[0...7]</b>	<b>BI: Cooling unit feedback signals signal source / RKA fdbk S_src</b>				
VECTOR_G (Cool_unit), B_INF (Cool_unit)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	1		
<b>Description:</b>	Sets the signal sources for the feedback signals from the cooling unit.				
<b>Index:</b>	[0] = Cooling unit switched on [1] = Cooling unit ready for switching on [2] = Cooling unit no alarm present [3] = Cooling unit no fault present [4] = Cooling unit no leaked liquid [5] = Cooling unit liquid flow OK [6] = Cooling unit conductivity < fault threshold [7] = Cooling unit conductivity < alarm threshold				

---

<b>r0267.0...7</b>	<b>BO: Cooling unit status word / RKA ZSW</b>				
VECTOR_G (Cool_unit), B_INF (Cool_unit)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status word of the cooling unit.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	RKA switched on	Yes	No	-
	01	RKA ready for switching on	Yes	No	-
	02	RKA no alarm present	Yes	No	-
	03	RKA no fault present	Yes	No	-
	04	RKA no leaked fluid	Yes	No	-
	05	RKA liquid flow OK	Yes	No	-
	06	RKA conductivity no fault	Yes	No	9974
	07	RKA conductivity no alarm	Yes	No	9974
<b>Dependency:</b>	Refer to: p0266				

---

<b>p0278</b>	<b>DC link voltage undervoltage threshold reduction / Vdc U_under red</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-80 [V]	0 [V]	0 [V]	
<b>Description:</b>	Sets the absolute value by which the threshold to initiate the undervoltage fault (F30003) is reduced.			
<b>Dependency:</b>	Refer to: p0210, r0296 Refer to: F30003			
<b>Notice:</b>	When using a Control Supply Module (CSM) for 24 V supply from the DC link, the minimum continuous DC link voltage may not lie below 430 V. DC link voltages in the range 300 ... 430 V are permissible up to a duration of 1 min. For chassis power units, this parameter has no significance.			
<b>Note:</b>	The resulting shutdown threshold can be read in r0296 and is dependent on the selected rated voltage (p0210) and the power unit being used.			

---

<b>p0279</b>	<b>DC link voltage offset alarm threshold / Vdc offs A thresh</b>			
B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8760, 8864, 8964	
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0 [V]	500 [V]	0 [V]	
<b>Description:</b>	Sets the voltage threshold to initiate alarm A06810. The value represents an offset so that the alarm threshold is obtained from the total of r0296 and p0279.			
<b>Dependency:</b>	Refer to: p0210, r0296 Refer to: A06810			
<b>Note:</b>	The absolute value of the undervoltage threshold r0296 depends on the selected unit supply voltage (p0210).			

<b>p0287[0...1] Ground fault monitoring threshold / Gnd flt threshold</b>			
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0.0 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 100.0 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> [0] 6.0 [%] [1] 16.0 [%]
<b>Description:</b>	Sets the shutdown thresholds for the ground fault monitoring. The setting is made as a percentage of the maximum current of the power unit (r0209).		
<b>Index:</b>	[0] = Reduced at the start of precharging [1] = Regular		
<b>Dependency:</b>	Refer to: F30021		
<b>Note:</b>	The parameter only applies to booksize and chassis power units. Deactivating the ground fault monitoring: - Sequence: --> p0287[1] = 0 --> p0287[0] = 0 - irrespective of the firmware version of the power unit. Sets the thresholds: - the prerequisite is at least firmware version 2.2 of the power unit.		
<b>r0289 CO: Maximum power unit output current / PU I_outp max</b>			
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [Arms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> p2002 <b>Max</b> - [Arms]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [Arms]
<b>Description:</b>	Displays the actual maximum output current of the power unit taking into account derating factors.		
<b>p0290 Power unit overload response / PU overld response</b>			
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> Converter <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 13	<b>Access level:</b> 3 <b>Func. diagram:</b> 8021 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the response to a thermal overload condition of the power unit. The following quantities can result in a response to thermal overload: - heat sink temperature (r0037[0]). - chip temperature (r0037[1]). - power unit overload I2t (r0036). Possible measures to avoid thermal overload: - reduce the output current limit r0289 and r0067 (for closed-loop speed/velocity or torque/force control) or the output frequency (for U/f control) indirectly via the output current limit and the intervention of the current limiting controller). - reduce the pulse frequency. A reduction, if parameterized, is always realized after an appropriate alarm is output.		
<b>Value:</b>	0: Reduce output current 1: No reduction shutdown when overload threshold is reached 2: Reduce the pulse frequency and output current 3: Reduce the pulse frequency 10: Automatic output current reduction 12: Automatic pulse frequency and output current reduction 13: Automatic pulse frequency reduction		

- Dependency:** If a sine-wave filter is parameterized as output filter (p0230 = 3, 4), then only responses can be selected without reducing the pulse frequency (p0290 = 0, 1, 10).  
For a thermal power unit overload, an appropriate alarm or fault is output, and r2135.15 or r2135.13 set.  
For p0290 = 10:  
This response is only applicable for booksize power units.  
For p0290 = 12, 13:  
These responses are only applicable for booksize or blocksize power units.  
Refer to: r0036, r0037, p0108, r0108, p0230, r2135  
Refer to: A05000, A05001, A07805
- Notice:** If the thermal overload of the power unit is not sufficiently reduced by the actions taken, the drive is always shut down. This means that the power unit is always protected irrespective of the setting of this parameter.
- Note:** Under overload conditions, the current and torque limit are reduced, and therefore the motor is braked and forbidden speed ranges (e.g. minimum speed p1080 and suppression [skip] speeds p1091 ... p1094) can be passed through. When the motor data identification routine is selected, parameter p0290 cannot be changed.  
For p0290 = 0, 2, 12:  
This setting is only practical if the load decreases with decreasing speed (e.g. for applications with variable torque such as for pumps and fans).  
For p0290 = 2, 3, 12, 13:  
The I2t overload detection of the power unit does not influence the response "Reduce pulse frequency".  
For p0290 = 10, 12, 13:  
The possible load duty cycles, calculated based on the previous model (p0290 = 0, 1, 2, 3) for booksize power units cannot be transferred in every case. As a consequence, we recommend that you involve our application support group for borderline cases when dimensioning.

---

<b>r0293</b>	<b>CO: Power unit alarm threshold model temperature / PU A_thr mod_temp</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8021
	<b>P-Group:</b> Converter	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Temperature alarm threshold for the difference from the chip and heat sink temperature in the thermal model.		
<b>Dependency:</b>	Refer to: r0037 Refer to: F30024		
<b>Note:</b>	The parameter is only relevant for chassis power units.		

---

<b>p0294</b>	<b>Power unit alarm with I2t overload / PU I2t alm thresh</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8021
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	100.0 [%]	95.0 [%]
<b>Description:</b>	Sets the alarm threshold for the I2t power unit overload. Drive: If this threshold is exceeded, an overload alarm is generated and the system responds as parameterized in p0290. Infeed: When the threshold value is exceeded, only an overload alarm is output.		
<b>Dependency:</b>	Refer to: r0036, p0290 Refer to: A07805		
<b>Note:</b>	The I2t fault threshold is 100 %. If this value is exceeded, fault F30005 is output.		

## 2 Parameters

### 2.2 List of parameters

---

<b>p0294</b>	<b>Power unit alarm with I2t overload / PU I2t alm thresh</b>		
B_INF	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Converter <b>Not for motor type:</b> - <b>Min</b> 10.0 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 100.0 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> 8021 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 95.0 [%]
<b>Description:</b>	Sets the alarm threshold for the I2t power unit overload.		
<b>Dependency:</b>	Refer to: r0036 Refer to: A07805		
<b>Note:</b>	The parameter is only relevant for booksize units!		
<hr/>			
<b>p0295</b>	<b>Fan run-on time / Fan run-on time</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Converter <b>Not for motor type:</b> - <b>Min</b> 0 [s]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 600 [s]	<b>Access level:</b> 1 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0 [s]
<b>Description:</b>	Sets the fan run-on time after the pulses for the power unit have been canceled.		
<b>Note:</b>	- Under certain circumstances, the fan can continue to run for longer than was set (e.g. as a result of the excessively high heat sink temperature). - For values less than 1 s, a 1 s run on time for the fan is active.		
<hr/>			
<b>r0296</b>	<b>DC link voltage undervoltage threshold / Vdc U_lower_thresh</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Converter <b>Not for motor type:</b> - <b>Min</b> - [V]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [V]	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [V]
<b>Description:</b>	Threshold to detect a DC link undervoltage. If the DC link voltage falls below this threshold, the drive unit is tripped due to a DC link undervoltage condition.		
<b>Dependency:</b>	Refer to: p0278 Refer to: F30003		
<b>Note:</b>	The value depends on the device type and the selected device rated voltage (p0210). For booksize drive units, the following applies: The undervoltage threshold can be reduced with p0278.		
<hr/>			
<b>r0296</b>	<b>DC link voltage undervoltage threshold / Vdc U_lower_thresh</b>		
B_INF	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16  <b>P-Group:</b> Converter <b>Not for motor type:</b> - <b>Min</b> - [V]	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [V]	<b>Access level:</b> 2 <b>Func. diagram:</b> 8750, 8760, 8850, 8864, 8950, 8964 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [V]
<b>Description:</b>	Threshold to detect a DC link undervoltage. If the DC link voltage falls below this threshold, the drive unit is tripped due to a DC link undervoltage condition.		
<b>Dependency:</b>	Refer to: F30003		
<b>Note:</b>	The value depends on the device type and the selected device rated voltage (p0210).		

<b>r0297</b>	<b>DC link voltage overvoltage threshold / Vdc U_upper_thresh</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8750, 8760, 8850, 8864, 8950, 8964
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Threshold to detect a DC link overvoltage. If the DC link voltage exceeds the threshold specified here, the drive unit is tripped due to DC link overvoltage.		
<b>Dependency:</b>	Refer to: F30002		
<b>p0300[0...n]</b>	<b>Motor type selection / Mot type sel</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6310
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	10001	0
<b>Description:</b>	Selects the motor type or starts to read in the motor parameters for a motor with DRIVE-CLiQ (p0300 = 10000 or 10001, if there is a second data set). For p0300 < 10000 the following applies: The first digit of the parameter value always defines the general motor type and corresponds to the third-party motor belonging to a motor list: 1 = induction motor 2 = synchronous motor 5 = synchronous motor separately excited 7 = SIEMOSYN motor 8 = reluctance motor (for textile applications) xx = motor without code number xxx = motor with code number The type information must be entered to filter motor-specific parameters and to optimize the operating characteristics and behavior. For example, for synchronous motors, power factor (p0308) is neither used nor displayed (in the BOP/AOP). The following applies for values < 100: Motor data must be manually entered. The following applies for values >= 100: Motor data are automatically loaded from an internal list.		
<b>Value:</b>	0: No motor 1: Induction motor 2: Synchronous motor 6: Synchronous reluctance motor 7: SIEMOSYN synchronous motor 8: Reluctance motor textile 10: 1LE1 induction motor (not a code number) 11: 1LA1 induction motor (not a code number) 12: 1LE2 induction motor (not a code number) 13: 1LG6 induction motor (not a code number) 14: 1xx1 SIMOTICS FD induction motor (not a code number) 15: 1LA5 induction motor (not a code number) 16: 1LA6 induction motor (not a code number) 17: 1LA7 induction motor (not a code number) 18: 1xx8 SIMOTICS TN induction motor (not a code number) 19: 1LA9 induction motor (not a code number) 100: 1LE1 induction motor 101: 1PC1 induction motor 102: 1PH2 induction motor		

104: 1PH4 induction motor  
 107: 1PH7 induction motor  
 108: 1PH8 induction motor  
 111: xxxx induction motor OEM  
 134: 1PM4 induction motor  
 136: 1PM6 induction motor  
 166: 1PL6 induction motor  
 222: xxxx synchronous motor OEM  
 264: 1FW4 synchronous motor  
 283: 1FW3 synchronous motor  
 600: 1FP1 standard reluctance motor  
 10000: Motor with DRIVE-CLiQ  
 10001: Motor with DRIVE-CLiQ 2nd data set

**Dependency:**

Motors, selection 206, 236, 237 cannot be operated (also not as motor with DRIVE-CLiQ).  
 p0300 = 5 cannot be selected with SINAMICS G.  
 When the motor type is changed, the code number in p0301 may be reset to 0.  
 p0300 = 12 can only be selected for p0100 = 1 (NEMA).  
 When selecting p0300 = 10 ... 19, parameters p0335, p0626, p0627, and p0628 of the thermal motor model are pre-assigned as a function of p0307 and p0311.  
 When selecting a 1FW4 motor – if the motor database permits this – when exiting commissioning, then p1750.5 is automatically set. This is the reason that after exiting commissioning, all parameters must be saved and a warm restart must be initiated (e.g. p0009 = 30, p0976 = 3).  
 Refer to: p0301

**Caution:**



A permanent-magnet synchronous motor cannot be operated with an SSI encoder without HTL/TTL track.  
 A separately excited synchronous motor can only be operated with an SSI encoder if this is used as the second encoder and an HTL/TTL encoder is used as the first encoder.

**Notice:**

If a catalog motor is selected (p0300 >= 100) and an associated motor code number (p0301), then the parameters that are associated with this list cannot be changed (write protection). The write protection is canceled if the motor type p0300 is set to a non-Siemens motor that matches p0301 (e.g. p0300 = 2 for p0301 = 2xxxx). Write protection is automatically canceled when the results of motor data identification are copied to the motor parameters.  
 The motor type of a catalog motor corresponds to the upper three digits of the code number or the following assignment (if the particular motor type is listed):

Type/code number ranges  
 100 / 100xx, 110xx, 120xx, 130xx, 140xx, 150xx, 160xx, 170xx, 180xx, 190xx  
 101 / 101xx  
 102 / 102xx, 122xx  
 104 / 104xx, 114xx, 124xx  
 107 / 107xx, 117xx, 127xx  
 108 / 108xx, 118xx, 128xx, 138xx, 148xx, 158xx  
 134 / 134xx, 144xx, 154xx  
 136 / 136xx, 146xx, 156xx  
 166 / 166xx, 176xx, 186xx  
 264 / 264xx, 274xx, 284xx, 294xx  
 283 / 283xx, 293xx  
 For OEM motors:  
 111 / 111xx, 112xx, 113xx  
 222 / 222xx, 223xx, 224xx

**Note:**

For 1PQ8 motors (p0300 = 18) the fan type p0335 should be set to 5.  
 With p0300 = 10000, for a motor with DRIVE-CLiQ, the motor parameters are automatically downloaded, with p0300 = 10001, the motor parameters of a second data set (if available).  
 If a motor type has not been selected (p0300 = 0), then the drive commissioning routine cannot be exited.  
 A motor type with a value above p0300 >= 100 describes motors for which a motor parameter list exists.  
 Motor types with a value below p0300 < 100 correspond to the selection of a third-party motor. When appropriately selected, this means that the motor parameters are pre-assigned the settings for a third-party motor.  
 This also applies for parameters for a motor with DRIVE-CLiQ. In this case p0300 can only be set to p0300 = 10000 or 10001 (read motor parameters) or to the corresponding non-Siemens motor (first digit of the motor code number) in order to be able to cancel the write protection.

<b>p0301[0...n]</b>	<b>Motor code number selection / Mot code No. sel</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	The parameter is used to select a motor from a motor parameter list. When changing the code number (with the exception to the value 0), all of the motor parameters are pre-assigned from the internally available parameter lists.		
<b>Dependency:</b>	Code numbers can only be selected for motor types that correspond to the motor type selected in p0300. For 1PH2, 1PH4, 1PH7, 1PM4, 1PM6, 1FT6 motors, code numbers are also possible, whose fourth decimal position is greater by a value of 1 or 2 than the matching motor type in p0300. For 1FE1 motors, the third decimal position can be higher by a value of 1. Refer to: p0300		
<b>Note:</b>	The motor code number can only be changed if the matching catalog motor was first selected in p0300. For a motor with DRIVE-CLiQ, p0301 cannot be changed. In this case, p0301 is automatically written to the code number of the motor parameter read in (r0302) if p0300 is set to 10000. When selecting a catalog motor (p0300 >= 100), drive commissioning can only be exited if a code number is selected.		
<b>r0302[0...n]</b>	<b>Motor code number of motor with DRIVE-CLiQ / Mot code mot w/ DQ</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the motor code number from the saved motor data from a motor with DRIVE-CLiQ.		
<b>Note:</b>	Drive commissioning can only be exited if the code number that was downloaded (r0302) matches the stored code number (p0301). If the numbers differ, then the motor data set should be re-loaded using p0300 = 10000. The motor data are always expected from the first encoder that is assigned to the drive data sets (refer to p0187 = encoder 1) data set number. The value is not updated cyclically but only on specific events (e.g. update DRIVE-CLiQ device). r0302 = 0: No motor with DRIVE-CLiQ found		
<b>r0303[0...n]</b>	<b>Motor with DRIVE-CLiQ status word / Motor w DQ ZSW</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the status word of the automatic motor parameter sensing of a motor with DRIVE-CLiQ. Motor parameter sensing takes place in the following events if the SMI is connected to the Motor Module and the encoder is activated (p0145): - Warm restart - downloading projects. - POWER ON (switch-off/switch-on). - where p0300 = 10000, 10001.		

## 2 Parameters

### 2.2 List of parameters

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Motor data set selected	MDS1	MDS0	-
	01	Motor connection type	Delta	Star	-
	02	Windings can be changed	Yes	No	-
	03	Windings can be changed number	2	0	-

**Dependency:** Refer to: p0145, p0300

**Note:** SMI: SINAMICS Sensor Module Integrated

#### p0304[0...n] Rated motor voltage / Mot U<sub>rated</sub>

VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6301, 6724
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [Vrms]	20000 [Vrms]	0 [Vrms]

**Description:** Sets the rated motor voltage (rating plate).

**Dependency:** Refer to: p0349

**Notice:** When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.

**Note:** When the parameter value is entered the connection type of the motor (star-delta) must be taken into account.

#### p0305[0...n] Rated motor current / Mot I<sub>rated</sub>

VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6301
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Arms]	10000.00 [Arms]	0.00 [Arms]

**Description:** Sets the rated motor current (rating plate).

**Dependency:** Refer to: p0349

**Notice:** When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.

If p0305 is changed during quick commissioning (p0010 = 1), then the maximum current p0640 is pre-assigned accordingly. This is not the case when commissioning the motor (p0010 = 3).

If the rated motor current exceeds twice the maximum drive converter current (r0209), then the maximum current is reduced due to the current harmonics that increase overproportionally (r0067).

**Note:** When the parameter value is entered the connection type of the motor (star-delta) must be taken into account.

#### p0306[0...n] Number of motors connected in parallel / Motor qty

VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	50	1

**Description:** Number of motors that can be operated in parallel using one motor data set.

Depending on the motor number entered, internally an equivalent motor is calculated.

The following should be carefully observed for motors connected in series:

The following rating plate data should only be entered for one motor:

- resistances and inductances: p0350 ... p0361
- currents: p0305, p0320, p0323, p0325, p0329, p0389, p0390, p0391, p0392
- power ratings: p0307
- masses/moments of inertia: p0341, p0344

All other parameters take into account the replacement/equivalent motor (e.g. r0331, r0333).

**Recommendation:** For motors connected in parallel, external thermal protection should be provided for each individual motor.

<b>Dependency:</b>	Refer to: r0331
<b>Caution:</b>	The motors to be connected up in parallel must be of the same type and the same size (power rating) (identical Article No. [MLFB]).
	The mounting regulations when connecting motors in parallel must be carefully maintained! Especially for synchronous motors, the pole position of motors that are rigidly coupled with one another (mechanically) must be identical.
	The number of motors set must correspond to the number of motors that are actually connected in parallel.
	After changing p0306, it is imperative that the control parameters are adapted (e.g. using automatic calculation with p0340 = 1).
	For synchronous motors connected in parallel with p1300 >= 20, the following applies:
	- the individual motors must be mechanically coupled with one another and the EMF must be aligned to one another.
	For induction motors that are connected in parallel, but which are not mechanically coupled with one another, then the following applies:
	- an individual motor must not be loaded beyond its stall point.
<b>Notice:</b>	If p0306 is changed during quick commissioning (p0010 = 1), then the maximum current p0640 is appropriately pre-assigned. This is not the case when commissioning the motor (p0010 = 3).
<b>Note:</b>	Only operation with U/f characteristic makes sense if more than 10 identical motors are connected in parallel.
	Separately excited synchronous motors must not be connected in parallel.
	Synchronous and reluctance motors that are not coupled with one another align themselves when the pulses are switched in. If the motors have different load levels, then equalization currents flow between the motors.

p0307[0...n]	Rated motor power / Mot P <sub>rated</sub>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> -100000.00 [kW]	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> 14_6 <b>Scaling:</b> - <b>Max</b> 100000.00 [kW]	<b>Access level:</b> 1 <b>Func. diagram:</b> - <b>Unit selection:</b> p0100 <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [kW]
<b>Description:</b>	Sets the rated motor power (rating plate).		
<b>Dependency:</b>	IEC drives (p0100 = 0): Units kW NEMA drives (p0100 = 1): Units hp Refer to: p0100		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	For generators, a negative rated power should be entered.		
p0308[0...n]	Rated motor power factor / Mot cos phi rated		
VECTOR_G	<b>Can be changed:</b> C2(1, 3) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> PMSM, REL <b>Min</b> -0.990	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1.000	<b>Access level:</b> 1 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000
<b>Description:</b>	Sets the rated motor power factor (cos phi, rating plate). For a parameter value of 0.000, the power factor is internally calculated and displayed in r0332.		
<b>Dependency:</b>	This parameter is only available for IEC motors (p0100 = 0). Refer to: p0100, p0309, r0332		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection. For separately excited synchronous motors (p0300 = 5) negative values for the power factor are interpreted as overexcitation. For all other motor types, the sign is ignored.		
<b>Note:</b>	The parameter is not used for synchronous motors (p0300 = 2xx).		

## 2 Parameters

### 2.2 List of parameters

---

<b>p0309[0...n]</b>	<b>Rated motor efficiency / Mot eta_rated</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> PMSM, REL <b>Min</b> 0.0 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 99.9 [%]	<b>Access level:</b> 1 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.0 [%]
<b>Description:</b>	Sets the rated motor efficiency (rating plate). For a parameter value of 0.0, the power factor is internally calculated and displayed in r0332.		
<b>Dependency:</b>	This parameter is only visible for NEMA motors (p0100 = 1, 2). Refer to: p0100, p0308, r0332		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	The parameter is not used for synchronous motors (p0300 = 2xx).		
<hr/>			
<b>p0310[0...n]</b>	<b>Rated motor frequency / Mot f_rated</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> 0.000 [Hz]	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 3000.000 [Hz]	<b>Access level:</b> 1 <b>Func. diagram:</b> 6301 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000 [Hz]
<b>Description:</b>	Sets the rated motor frequency (rating plate).		
<b>Dependency:</b>	The number of pole pairs (r0313) is automatically re-calculated when the parameter is changed (together with p0311), if p0314 = 0. The rated frequency is restricted to values between 1.00 Hz and 650.00 Hz. Refer to: p0311, r0313, p0314		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection. If p0310 is changed during quick commissioning (p0010 = 1), the maximum speed p1082, which is also associated with quick commissioning, is pre-assigned accordingly. This is not the case when commissioning the motor (p0010 = 3).		
<hr/>			
<b>p0311[0...n]</b>	<b>Rated motor speed / Mot n_rated</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> 0.00 [rpm]	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 210000.00 [rpm]	<b>Access level:</b> 1 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [rpm]
<b>Description:</b>	Sets the rated motor speed (rating plate). For VECTOR the following applies (p0107): For p0311 = 0, the rated motor slip of induction motors is internally calculated and displayed in r0330. It is especially important to correctly enter the rated motor speed for vector control and slip compensation for U/f control.		
<b>Dependency:</b>	If p0311 is changed and for p0314 = 0, the pole pair (r0313) is re-calculated automatically. Refer to: p0310, r0313, p0314		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection. If p0311 is changed during quick commissioning (p0010 = 1), the maximum speed p1082, which is also associated with quick commissioning, is pre-assigned accordingly. This is not the case when commissioning the motor (p0010 = 3).		

<b>r0313[0...n]</b>	<b>Motor pole pair number, actual (or calculated) / Mot PolePairNo act</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 5300
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of motor pole pairs. The value is used for internal calculations. r0313 = 1: 2-pole motor r0313 = 2: 4-pole motor, etc.		
<b>Dependency:</b>	For p0314 > 0, the entered value is displayed in r0313. For p0314 = 0, the pole pair number (r0313) is automatically calculated from the rated power (p0307), rated frequency (p0310) and rated speed (p0311). Refer to: p0307, p0310, p0311, p0314		
<b>Note:</b>	For the automatic calculation, the pole pair number is set to the value of 2 if the rated speed or the rated frequency is zero.		
<b>p0314[0...n]</b>	<b>Motor pole pair number / Mot pole pair No.</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0
<b>Description:</b>	Sets the motor pole pair number. p0314 = 1: 2-pole motor p0314 = 2: 4-pole motor, etc.		
<b>Dependency:</b>	For p0314 = 0, the pole pair number is automatically calculated from the rated frequency (p0310) and the rated speed (p0311) and displayed in r0313.		
<b>Notice:</b>	If p0314 is changed during quick commissioning (p0010 = 1), the maximum speed p1082, which is also associated with quick commissioning, is pre-assigned accordingly. This is not the case when commissioning the motor (p0010 = 3). For induction motors, the value need only be input if the rated data of a generator is entered therefore resulting in a negative rated slip. In this case, the number of pole pairs in r0313 is too low by 1 and must be manually corrected.		
<b>p0316[0...n]</b>	<b>Motor torque constant / Mot kT</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 28_1	<b>Unit selection:</b> p0100
	<b>Not for motor type:</b> ASM, SESM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [Nm/A]	400.000 [Nm/A]	0.000 [Nm/A]
<b>Description:</b>	Sets the torque constant of the synchronous motor. p0316 = 0: The torque constant is calculated from the motor data. p0316 > 0: The selected value is used as torque constant.		
<b>Dependency:</b>	Refer to: r0334		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	This parameter is not used for induction motors (p0300 = 1xx).		

<b>p0318[0...n]</b>	<b>Motor stall current / Mot I_standstill</b>		
VECTOR_G	<b>Can be changed:</b> C2(3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8017
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Arms]	10000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	Sets the stall current for synchronous motors (p0300 = 2xx), as well as for synchronous reluctance motors (p0300 = 6xx).		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	The parameter is used for the I2t monitoring of the motor (refer to p0611). This parameter is not used for induction motors (p0300 = 1xx). For synchronous reluctance motors, the current corresponds to a winding temperature increase of 105 K at a speed of 20 % of the rated speed.		
<b>p0320[0...n]</b>	<b>Motor rated magnetizing current/short-circuit current / Mot I_mag_rated</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 5722
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [Arms]	5000.000 [Arms]	0.000 [Arms]
<b>Description:</b>	Induction motors: Sets the rated motor magnetizing current. For p0320 = 0.000 the magnetizing current is internally calculated and displayed in r0331. Synchronous motors: Sets the rated motor short-circuit current.		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	The magnetization current p0320 for induction motors (not for catalog motors) is reset when quick commissioning is exited with p3900 > 0. VECTOR: If, for induction motors, the magnetizing current p0320 is changed outside the commissioning phase (p0010 > 0), then the magnetizing inductance p0360 is changed so that the EMF r0337 remains constant.		
<b>p0322[0...n]</b>	<b>Maximum motor speed / Mot n_max</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [rpm]	210000.0 [rpm]	0.0 [rpm]
<b>Description:</b>	Sets the maximum motor speed.		
<b>Dependency:</b>	Refer to: p1082		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection. If p0322 is changed during quick commissioning (p0010 = 1), the maximum speed p1082, which is also associated with quick commissioning, is pre-assigned accordingly. This is not the case when commissioning the motor (p0010 = 3).		
<b>Note:</b>	The parameter has no significance for a value of p0322 = 0.		

<b>p0323[0...n]</b>	<b>Maximum motor current / Mot I_max</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Arms]	20000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	Sets the maximum permissible motor current (e.g. de-magnetizing current for synchronous motors).		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection. If p0323 is changed during quick commissioning (p0010 = 1), then the maximum current p0640 is pre-assigned accordingly. This is not the case when commissioning the motor (p0010 = 3).		
<b>Note:</b>	The parameter has no effect for induction motors. The parameter has no effect for synchronous motors if a value of 0.0 is entered. The user-selectable current limit is entered into p0640.		
<b>p0324[0...n]</b>	<b>Winding maximum speed / Winding n_max</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [rpm]	210000.0 [rpm]	0.0 [rpm]
<b>Description:</b>	Sets the maximum speed for the winding. The following applies when calculating the maximum speed (p1082): - for p0324 = 0 or p0532 = 0, p0322 is used. - for p0324 > 0 and p0532 > 0, the minimum value from the two parameters is used.		
<b>Dependency:</b>	Refer to: p0322, p0532, p1082		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection. If p0324 is changed during quick commissioning (p0010 = 1), then the maximum speed p1082, which is also associated with quick commissioning, is pre-assigned appropriately. This is not the case when commissioning the motor (p0010 = 3).		
<b>p0325[0...n]</b>	<b>Motor pole position identification current 1st phase / Mot PolID I 1st ph</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [Arms]	10000.000 [Arms]	0.000 [Arms]
<b>Description:</b>	Sets the current for the 1st phase of the two-stage technique for pole position identification routine. The current of the 2nd phase is set in p0329. The two-stage technique is selected with p1980 = 4.		
<b>Dependency:</b>	Refer to: p0329, p1980, p1982, r1984, r1985, r1987, p1990		
<b>Notice:</b>	When the motor code (p0301) is changed, it is possible that p0325 is not pre-assigned. p0325 can be pre-assigned using p0340 = 3.		
<b>Note:</b>	The value is automatically pre-assigned for the following events: - For p0325 = 0 and automatic calculation of the closed-loop control parameters (p0340 = 1, 2, 3). - for quick commissioning (p3900 = 1, 2, 3).		

<b>p0327[0...n]</b>	<b>Optimum motor load angle / Mot phi_load opt</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 5722, 6721
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [°]	135.0 [°]	90.0 [°]
<b>Description:</b>	Sets the optimum load angle for synchronous motors with reluctance torque (e.g. 1FE motors). SERVO: The load angle is measured at 1.5 x rated motor current. VECTOR: The load angle is measured at the rated motor current.		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	This parameter has no significance for induction motors. For synchronous motors without reluctance torque, a angle of 90 degrees must be set. When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		

<b>p0328[0...n]</b>	<b>Motor reluctance torque constant / Mot kT_reluctance</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000.00 [mH]	1000.00 [mH]	0.00 [mH]
<b>Description:</b>	Sets the reluctance torque constant for synchronous motors with reluctance torque (e.g. 1FE ... motors). This parameter has no significance for induction motors.		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	For synchronous motors without reluctance torque, the value 0 must be set.		

<b>p0329[0...n]</b>	<b>Motor pole position identification current / Mot PolID current</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Arms]	10000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	Sets the current for the pole position identification routine (p1980 = 1). For a two-stage technique (p1980 = 4), the current is set here for the 2nd phase. The current of the 1st phase is set in p0325.		
<b>Dependency:</b>	The following applies for vector drives: If a maximum current (p0323) was not parameterized, then p0329 is limited to the rated motor current. Refer to: p0325, p1980, p1982, r1984, r1985, r1987, p1990		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		

<b>r0330[0...n]</b>	<b>Rated motor slip / Mot slip_rated</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Hz]	- [Hz]	- [Hz]
<b>Description:</b>	Displays the rated motor slip.		
<b>Dependency:</b>	The rated slip is calculated from the rated frequency, rated speed and number of pole pairs. Refer to: p0310, p0311, r0313		
<b>Note:</b>	The parameter is not used for synchronous motors (p0300 = 2xx).		
<b>r0331[0...n]</b>	<b>Actual motor magnetizing current/short-circuit current / Mot I_mag_rtd act</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 5722, 6722, 6724
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Induction motor: Displays the rated magnetizing current from p0320. For p0320 = 0, the internally calculated magnetizing current is displayed. Synchronous motor: Displays the rated short-circuit current from p0320.		
<b>Dependency:</b>	If p0320 was not entered, then the parameter is calculated from the rating plate parameters.		
<b>Note:</b>	In the case of multi-motor operation r0331 is increased by the factor p0306 compared to p0320.		
<b>r0332[0...n]</b>	<b>Rated motor power factor / Mot cos phi rated</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the rated power factor for induction motors. For IEC motors, the following applies (p0100 = 0): For p0308 = 0, the internally calculated power factor is displayed. For p0308 > 0, this value is displayed. For NEMA motors, the following applies (p0100 = 1, 2): For p0309 = 0, the internally calculated power factor is displayed. For p0309 > 0, this value is converted into the power factor and displayed.		
<b>Dependency:</b>	If p0308 is not entered, the parameter is calculated from the rating plate parameters.		
<b>Note:</b>	The parameter is not used for synchronous motors (p0300 = 2xx).		

<b>r0333[0...n]</b>	<b>Rated motor torque / Mot M<sub>rated</sub></b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> - [Nm]	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> 7_4 <b>Scaling:</b> - <b>Max</b> - [Nm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> p0100 <b>Expert list:</b> 1 <b>Factory setting</b> - [Nm]
<b>Description:</b>	Displays the rated motor torque.		
<b>Dependency:</b>	IEC drives (p0100 = 0): unit Nm NEMA drives (p0100 = 1): unit lbf ft		
<b>Note:</b>	For induction and reluctance motors, r0333 is calculated from p0307 and p0311. For synchronous motors, r0333 is calculated from p0305, p0316, p0327 and p0328. The result can deviate from the input in p0312. If p0316 = 0, then r0333 = p0312 is displayed. In the case of multi-motor operation r0333 is increased by the factor p0306 compared to the rated torque of an individual motor.		
<b>r0334[0...n]</b>	<b>Actual motor-torque constant / Mot kT act</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> ASM, SESM, REL, RESM <b>Min</b> - [Nm/A]	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> 28_1 <b>Scaling:</b> - <b>Max</b> - [Nm/A]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> p0100 <b>Expert list:</b> 1 <b>Factory setting</b> - [Nm/A]
<b>Description:</b>	Displays the torque constant of the synchronous motor used.		
<b>Dependency:</b>	IEC drives (p0100 = 0): unit Nm / A NEMA drives (p0100 = 1): unit lbf ft / A Refer to: p0316		
<b>Note:</b>	This parameter is not used for induction motors (p0300 = 1xx). For synchronous motors, parameter r0334 = p0316 is displayed. For p0316 = 0, r0334 is calculated from p0305 and p0312 or p0305, p0307, and p0311.		
<b>p0335[0...n]</b>	<b>Motor cooling type / Mot cool type</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3), T <b>Data type:</b> Integer16 <b>P-Group:</b> Motor <b>Not for motor type:</b> PMSM, SESM, REL <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 128	<b>Access level:</b> 1 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the motor cooling system used.		
<b>Value:</b>	0: Natural ventilation 1: Forced cooling 2: Liquid cooling 4: Natural ventilation and internal fan 5: Forced cooling and internal fan 6: Liquid cooling and internal fan 128: No fan		
<b>Dependency:</b>	For 1LA5 and 1LA7 motors (p0300), the parameter is pre-set as a function of p0307 and p0311.		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	The parameter influences the thermal 3-mass motor model. 1LA1 and 1LA8 motors are characterized by the fact that they have an internal rotor fan. This "internal cooling" lies within the motor frame and is not visible. Air is not directly exchanged with the motor ambient air.		

For 1PQ8 motors, p0335 should be set to 5 as these motors are force-ventilated motors.  
The setting p0335 = 128 applies for 1LA7 motors, frame size 56 (these are operated without a fan).

<b>r0336[0...n]</b>	<b>Actual rated motor frequency / Mot f<sub>rated act</sub></b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Hz]	- [Hz]	- [Hz]
<b>Description:</b>	Displays the rated frequency of the motor.		
	For p0310 > 0, this value is displayed.		
<b>Dependency:</b>	Refer to: p0311, p0314		
<b>Note:</b>	For p0310 = 0 or for synchronous motors, the rated motor frequency r0336 is calculated from the rated speed and the pole pair number. For p0310 > 0, this value is displayed (not for synchronous motors).		
<b>r0337[0...n]</b>	<b>Rated motor EMF / Mot EMF<sub>rated</sub></b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]
<b>Description:</b>	Displays the rated EMF of the motor.		
<b>Note:</b>	EMF: Electromotive force		
<b>r0339[0...n]</b>	<b>Rated motor voltage / Mot U<sub>rated</sub></b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]
<b>Description:</b>	Displays the rated motor voltage.		
<b>Note:</b>	For induction motors (p0300 = 1xx) the parameter is set to p0304. For synchronous motors, parameter r0339 = p0304 is displayed. If p0304 = 0, then r0339 is calculated from p0305 and p0316.		
<b>p0340[0...n]</b>	<b>Automatic calculation motor/control parameters / Calc auto par</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	5	0
<b>Description:</b>	Setting to automatically calculate motor parameters and U/f open-loop and closed-loop control parameters from the rating plate data.		
<b>Value:</b>	0: No calculation 1: Complete calculation 2: Calculation of equivalent circuit diagram parameters 3: Calculation of closed-loop control parameters 4: Calculation of controller parameters 5: Calculation of technological limits and threshold values		

## 2 Parameters

### 2.2 List of parameters

**Notice:** After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.

The following parameters are influenced using p0340:

The parameters designated with (\*) are not overwritten for catalog motors (p0300 > 100).

SERVO:

p0340 = 1:

--> All of the parameters influenced for p0340 = 2, 3, 4, 5

--> p0341 (\*)

--> p0344, p0600, p0640, p1082, p2000, p2001, p2002, p2003, p2005, p2007

p0340 = 2:

--> p0350 (\*), p0354 (\*), p0356 (\*), p0358 (\*), p0360 (\*)

--> p0625 (matching p0350), p0626 ... p0628

p0340 = 3:

--> All of the parameters influenced for p0340 = 4, 5

--> p0325 (is only calculated for p0325 = 0)

--> p0348 (\*) (is only calculated for p0348 = 0)

--> p0441, p0442, p0443, p0444, p0445 (only for 1FT6, 1FK6, 1FK7 motors)

--> p0492, p1082, p1980, p1319, p1326, p1327, p1612, p1752, p1755

p0340 = 4:

--> p0118, p1441, p1460, p1462, p1463, p1464, p1465, p1470, p1472, p1590, p1592, p1596, p1656, p1657, p1658, p1659, p1715, p1717

--> p1461 (for p0348 > p0322, p1461 is set to 100 %)

--> p1463 (for p0348 > p0322, p1463 is set to 400 %)

p0340 = 5:

--> p1037, p1038, p1520, p1521, p1530, p1531, p2140 ... p2142, p2148, p2150, p2155, p2161 ... p2164, p2175, p2177, p2194, p3820 ... p3829

VECTOR:

p0340 = 1:

--> All of the parameters influenced for p0340 = 2, 3, 4, 5

--> p0341 (\*)

--> p0344, p0600, p0640, p1082, p1145, p1231, p1232, p1281, p1333, p1349, p1360, p1362, p1441, p1442, p1576, p1577, p1609, p1610, p1611, p1619, p1620, p1621, p1654, p1726, p1825, p1828 ... p1832, p1901, p1909, p1959, p2000, p2001, p2002, p2003, p2005, p2007, p3806, p3927, p3928

p0340 = 2:

--> p0350 (\*), p0354 ... p0361 (\*), p0652 ... p0660

--> p0625 (matching p0350)

p0340 = 3:

--> All of the parameters influenced for p0340 = 4, 5

--> p0346, p0347, p0492, p0622, p1262, p1320 ... p1327, p1582, p1584, p1612, p1616, p1744, p1748, p1749, p1755, p1756, p2178

p0340 = 4:

--> p1290, p1292, p1293, p1299, p1338, p1339, p1340, p1341, p1345, p1346, p1460, p1461, p1462, p1463, p1464, p1465, p1470, p1472, p1590, p1592, p1600, p1628, p1629, p1630, p1643, p1703, p1715, p1717, p1740, p1756, p1757, p1760, p1761, p1764, p1767, p1780, p1781, p1783, p1785, p1786, p1795, p7036, p7037, p7038

p0340 = 5:

--> p0260 ... p0264, p1037, p1038, p1520, p1521, p1530, p1531, p1574, p1750, p1802, p1803, p2140, p2141, p2142, p2148, p2150, p2155, p2161 ... p2164, p2175, p2177, p2194, p3207, p3208, p3236, p3237, p3806, p3815, p3820 ... p3829

**Note:** The calculation is not performed, if the power unit is deactivated.

p0340 = 1 contains the calculations of p0340 = 2, 3, 4, 5 without overwriting the motor parameters from the Siemens motor lists (p0301 > 0).

p0340 = 2 calculates the motor parameters (p0350 ... p0360), but only if it does not involve a Siemens catalog motor (p0301 = 0).

p0340 = 3 contains the calculations of p0340 = 4, 5.

p0340 = 4 only calculates the controller parameters.

p0340 = 5 only calculates the controller limits.

When quick commissioning is exited using p3900 > 0, p0340 is automatically set to 1.

At the end of the calculations, p0340 is automatically set to 0.

If the STARTER commissioning software writes a 3 into p0340 when "downloading to target device", then this corresponds to a "complete calculation of the motor/control parameters without equivalent circuit diagram data". The same calculations are carried out as for p0340 = 1, however, without the equivalent circuit diagram parameters of the motor (p0340 = 2), the motor moment of inertia (p0341) and the motor mass (p0344).

For third-party linear synchronous motors (p0300 = 4) equivalent circuit diagram data are not calculated (p0340 = 2).

p0341[0...n]	Motor moment of inertia / Mot M_mom of inert		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> MDS, p0130	<b>Access level:</b> 3 <b>Func. diagram:</b> 5042, 5210, 6020, 6030, 6031
	<b>P-Group:</b> Motor <b>Not for motor type:</b> REL <b>Min</b>	<b>Unit group:</b> 25_1 <b>Scaling:</b> - <b>Max</b>	<b>Unit selection:</b> p0100 <b>Expert list:</b> 1 <b>Factory setting</b>
	0.000000 [kgm <sup>2</sup> ]	100000.000000 [kgm <sup>2</sup> ]	0.000000 [kgm <sup>2</sup> ]
<b>Description:</b>	Sets the motor moment of inertia (without load).		
<b>Dependency:</b>	IEC drives (p0100 = 0): unit kg m <sup>2</sup> NEMA drives (p0100 = 1): unit lb ft <sup>2</sup> The parameter value is included, together with p0342, in the rated starting time of the motor. Refer to: p0342, r0345		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	SERVO: p0341 * p0342 + p1498 influence the speed/torque pre-control in encoderless operation. VECTOR: The product of p0341 * p0342 is used when the speed controller (p0340 = 4) is calculated automatically.		
p0342[0...n]	Ratio between the total and motor moment of inertia / Mot MomInert Ratio		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130	<b>Access level:</b> 3 <b>Func. diagram:</b> 5042, 5210, 6020, 6030, 6031
	<b>P-Group:</b> Motor <b>Not for motor type:</b> REL <b>Min</b>	<b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>
	1.000	10000.000	1.000
<b>Description:</b>	Sets the ratio between the total moment of inertia (load + motor) and the intrinsic motor moment of inertia (no load).		
<b>Dependency:</b>	This means that together with p0341, the rated starting (accelerating time) of the motor is calculated for a vector drive. Refer to: p0341, r0345, p1498		
<b>Note:</b>	SERVO: p0341 * p0342 + p1498 influence the speed/torque pre-control in encoderless operation. VECTOR: The product of p0341 * p0342 is used when the speed controller (p0340 = 4) is calculated automatically.		
p0343[0...n]	Rated motor current identified / Mot I_rated ident		
VECTOR_G	<b>Can be changed:</b> C2(3), T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130	<b>Access level:</b> 4 <b>Func. diagram:</b> -
	<b>P-Group:</b> Motor <b>Not for motor type:</b> PMSM, SESM, REL, RESM <b>Min</b>	<b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>
	0.00 [Arms]	10000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	Displays the identified rated motor current.		

<b>p0344[0...n]</b>	<b>Motor weight (for the thermal motor model) / Mot weight th mod</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> 0.0 [kg]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> 27_1 <b>Scaling:</b> - <b>Max</b> 50000.0 [kg]	<b>Access level:</b> 3 <b>Func. diagram:</b> 8018 <b>Unit selection:</b> p0100 <b>Expert list:</b> 1 <b>Factory setting</b> 0.0 [kg]
<b>Description:</b>	Sets the motor weight.		
<b>Dependency:</b>	IEC drives (p0100 = 0): unit kg NEMA drives (p0100 = 1): unit lb		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	The parameter influences the thermal 3 mass model of the induction motor. The parameter is not used for synchronous motors (p0300 = 2xx).		
<b>r0345[0...n]</b>	<b>Nominal motor starting time / Mot t_start_rated</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> REL <b>Min</b> - [s]	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [s]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [s]
<b>Description:</b>	Displays the rated motor starting time. This time corresponds to the time from standstill up to reaching the motor rated speed and the acceleration with motor rated torque (r0333).		
<b>Dependency:</b>	Refer to: r0313, r0333, r0336, p0341, p0342		
<b>p0346[0...n]</b>	<b>Motor excitation build-up time / Mot t_excitation</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> -20.000 [s]	<b>Calculated:</b> CALC_MOD_REG <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 20.000 [s]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000 [s]
<b>Description:</b>	Sets the excitation build-up time of the motor. This involves the delay time between enabling the pulses and enabling the ramp-function generator. The induction motor is magnetized during this time.		
<b>Caution:</b>	If there is insufficient magnetization under load or if the acceleration rate is too high, then an induction motor can stall (refer to the note). This is especially true for sensorless vector control or U/f control.		
			
<b>Notice:</b>	If the parameter is set to 0 s for separately excited synchronous motors (p0300 = 5), then an excitation current setpoint is generated even if the drive is switched off. In the base speed range, this is the no-load excitation current (p0389). In the field-weakening range, the value is reduced with the inverse value of the actual speed. An excitation current setpoint is not generated during de-magnetizing (p0347) and if an encoder fault is detected. When starting or executing a flying restart for a separately excited synchronous motor without encoder or with incremental encoder, then the voltage induced in the stator by the excitation current pulse is used to determine the rotor position. The length of the ramp is pre-assigned from the motor data for p0346 = 0 s. If it crystallizes out that this time is too short, then it can be extended by entering a negative value in p0346, whereby otherwise, the excitation behavior corresponds with that for p0346 = 0 s. For all other motor types, p0346 is internally limited downwards to 0 s.		
<b>Note:</b>	The parameter is calculated using p0340 = 1, 3. For induction motors, the result depends on the rotor time constant (r0384). If this time is excessively reduced, this can result in an inadequate magnetizing of the induction motor. This is the case if the current limit is reached while building up magnetizing. For induction motors, the parameter cannot be set to 0 s (internal limit: 0.1 * r0384).		

For permanent-magnet synchronous motors and vector control, the value depends on the stator time constant (r0386). Here, it defines the time to establish the current for encoderless operation immediately after the pulses have been enabled.

The current to excite the induction motor can be limited in p0644.

p0347[0...n]	Motor de-excitation time / Mot t_de-excitat		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	20.000 [s]	0.000 [s]
<b>Description:</b>	Sets the de-magnetizing time (for induction motors) after the inverter pulses have been canceled. The inverter pulses cannot be switched in (enabled) within this delay time.		
<b>Note:</b>	The parameter is calculated using p0340 = 1, 3. For induction motors, the result depends on the rotor time constant (r0384). if this time is shortened too much, then this can result in an inadequate de-magnetizing of the induction motor and in an overcurrent condition when the pulses are subsequently enabled (only when the flying restart function is activated and the motor is rotating).		

p0349	System of units motor equivalent circuit diagram data / Unit_sys mot ESB		
VECTOR_G	<b>Can be changed:</b> C2(3)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	2	1
<b>Description:</b>	Sets the actual system of units for motor equivalent circuit diagram data.		
<b>Value:</b>	1: System of units, physical 2: System of units, referred		
<b>Dependency:</b>	The parameter can only be changed in an offline project using the commissioning software. Refer to: p0304, p0305, p0310		
<b>Note:</b>	The reference parameter for resistances of the rated motor impedance $Z = p0304 / (1.732 * p0305)$ is in the % units system. Inductances are converted into a resistance using the factor $2 * \text{Pi} * p0310$ . If a reference parameter (p0304, p0305, p0310) is zero, then it is not possible to make a changeover to "referred" values (per unit values).		

p0350[0...n]	Motor stator resistance cold / Mot R_stator cold		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 16_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00000 [ohm]	2000.00000 [ohm]	0.00000 [ohm]
<b>Description:</b>	Sets the stator resistance of the motor at ambient temperature p0625 (phase value).		
<b>Dependency:</b>	Refer to: p0625, r1912		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	The motor identification routine determines the stator resistance from the total stator resistance minus the cable resistance (p0352).		

<b>p0352[0...n]</b>	<b>Cable resistance / R_cable</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 16_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00000 [ohm]	120.00000 [ohm]	0.00000 [ohm]
<b>Description:</b>	Resistance of the power cable between the Motor Module and motor.		
<b>Dependency:</b>	Refer to: p7003		
<b>Caution:</b>	The cable resistance should be entered prior to motor data identification. If it is used subsequently, the difference by which p0352 was changed must be subtracted from the stator resistance p0350 or motor data identification must be repeated.		
			
<b>Notice:</b>	Parallel circuits with one winding system (p7003 = 0): p0352 includes the feeder cable resistance of an individual Motor Module. The total feeder cable resistance is obtained from p0352 divided by the number of activated Motor Modules (refer to r0395). Parallel circuits with multi-winding system (p7003 = 1): p0352 includes the complete feeder cable resistance and is directly added to the stator resistance (refer to r0395).		
<b>Note:</b>	The parameter influences the temperature adaptation of the stator resistance. The motor identification sets the cable resistance to 20% of the measured total resistance if p0352 is zero at the time that the measurement is made. If p0352 is not zero, then the value is subtracted from the measured total stator resistance to calculate stator resistance p0350. In this case, p0350 is a minimum of 10% of the measured value. Exception: For parallel circuit configurations with one winding system (p7003 = 0), the cable resistance is directly measured. It is important to note that only the component of an individual Motor Module is entered into p0352. The cable resistance is reset when quick commissioning is exited with p3900 > 0.		

<b>p0353[0...n]</b>	<b>Motor series inductance / Mot L_series</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 15_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [mH]	1000000.000 [mH]	0.000 [mH]
<b>Description:</b>	Sets the series inductance.		
<b>Note:</b>	For the automatic calculation with p0340 = 1, 3 or 4, the calculation of p1715 is influenced by p0353. The series inductance is reset when quick commissioning is exited with p3900 > 0.		

<b>p0354[0...n]</b>	<b>Motor rotor resistance cold / damping resistance d axis / Mot R_r cold/R_D d</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> 16_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00000 [ohm]	300.00000 [ohm]	0.00000 [ohm]
<b>Description:</b>	Sets the rotor/secondary section resistance of the motor at the ambient temperature p0625. For separately excited synchronous motors: Sets the damping resistance in the rotor direction (d-axis). This parameter value is automatically calculated using the motor model (p0340 = 1, 2) or using the motor data identification routine (p1910) (not for separately excited synchronous motors).		
<b>Dependency:</b>	Refer to: p0625		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	The parameter is not used for synchronous motors (p0300 = 2xx).		

<b>p0355[0...n]</b>	<b>Motor damping resistance q axis / Mot R_damp q</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> 16_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00000 [ohm]	300.00000 [ohm]	0.00000 [ohm]
<b>Description:</b>	Sets the damping resistance of the separately excited synchronous motor quadrature to the rotor direction (q axis). This parameter value is automatically calculated using the motor model (p0340 = 1, 2).		
<b>p0356[0...n]</b>	<b>Motor stator leakage inductance / Mot L_stator leak.</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 15_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00000 [mH]	1000.00000 [mH]	0.00000 [mH]
<b>Description:</b>	This parameter value is automatically calculated using the motor model (p0340 = 1, 2) or using the motor identification routine (p1910). Induction motor, separately excited synchronous motor: Sets the rotor leakage inductance of the motor. Synchronous motor: Sets the stator quadrature axis inductance of the motor.		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	If the stator leakage inductance (p0356) for induction motors is changed outside the commissioning phase (p0010 > 0), the magnetizing inductance (p0360) is automatically adapted to the new EMF (r0337). You are then advised to repeat the measurement for the saturation characteristic (p1960). For permanent-magnet synchronous motors (p0300 = 2), this is the non-saturated value and is, therefore, ideal for a low current.		
<b>p0357[0...n]</b>	<b>Motor stator inductance d axis / Mot L_stator d</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 15_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00000 [mH]	1000.00000 [mH]	0.00000 [mH]
<b>Description:</b>	Sets the stator direct-axis inductance of the synchronous motor. This parameter value is automatically calculated using the motor model (p0340 = 1, 2) or using the motor identification routine (p1910).		
<b>Note:</b>	The parameter is not used for separately excited synchronous motors (p0300 = 5). For permanent-magnet synchronous motors (p0300 = 2), this is the non-saturated value and is ideal for a low current.		

<b>p0358[0...n]</b>	<b>Motor rotor leakage inductance / damping inductance d axis / Mot L_r leak / LDd</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> 15_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00000 [mH]	1000.00000 [mH]	0.00000 [mH]
<b>Description:</b>	Sets the rotor/secondary section leakage inductance of the motor. For separately excited synchronous motors: Sets the damping inductance in the rotor direction (d-axis). This value is automatically calculated using the motor model (p0340 = 1, 2) or using the motor identification routine (p1910) (not for separately excited synchronous motors).		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	The parameter is not used for synchronous motors (p0300 = 2xx). VECTOR: If the rotor leakage inductance (p0358) for induction motors is changed outside the commissioning phase (p0010 > 0), then the magnetizing inductance (p0360) is automatically adapted to the new EMF (r0337). You are then advised to repeat the measurement for the saturation characteristic (p1960).		
<b>p0359[0...n]</b>	<b>Motor damping inductance q axis / Mot L_damp q</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> 15_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00000 [mH]	1000.00000 [mH]	0.00000 [mH]
<b>Description:</b>	Sets the damping inductance of the separately excited synchronous motor quadrature to the rotor direction (q axis). This parameter value is automatically calculated using the motor model (p0340 = 1, 2).		
<b>p0360[0...n]</b>	<b>Motor magnetizing inductance/magn. inductance d axis saturated / Mot Lh/Lh d sat</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> 15_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00000 [mH]	10000.00000 [mH]	0.00000 [mH]
<b>Description:</b>	Sets the magnetizing inductance of the motor. For separately excited synchronous motors: Sets the saturated magnetizing inductance in the rotor direction (d-axis). This parameter value is automatically calculated using the motor model (p0340 = 1, 2) or using the motor identification routine (p1910) (not for separately excited synchronous motors).		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	The parameter is not used for synchronous motors (p0300 = 2xx).		

<b>p0361[0...n] Motor magnetizing inductance q axis saturated / Mot L_magn q sat</b>			
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> 15_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00000 [mH]	10000.00000 [mH]	0.00000 [mH]
<b>Description:</b>	Sets the saturated magnetizing inductance of the separately excited synchronous motor quadrature to the rotor direction (q axis). This parameter value is automatically calculated using the motor model (p0340 = 1, 2).		
<b>p0362[0...n] Motor saturation characteristic flux 1 / Mot saturat.flux 1</b>			
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6723, 6726
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	800.0 [%]	60.0 [%]
<b>Description:</b>	The saturation characteristic (flux as mapping of current) is defined using 4 points. This parameter specifies the y coordinate (flux) for the 1st value pair of the characteristic. Induction motors (ASM) and separately excited synchronous motors (SESM): The saturation characteristic describes the mapping of the magnetizing current onto the motor flux. The parameter sets the first motor flux as a [%] referred to the rated motor flux. Permanent magnet synchronous motors (PMSM): The saturation characteristic describes the mapping of the stator quadrature axis current onto the stator quadrature axis flux. The parameter sets the first stator quadrature axis flux as a [%] referred to the product of the unsaturated quadrature inductance (p0356) and the rated motor current.		
<b>Dependency:</b>	The following applies for the flux values: p0362 < p0363 < p0364 < p0365 The following applies for the stator quadrature axis flux values (PMSM): 20 % < p0362 < p0363 < p0364 < p0365 Refer to: p0366		
<b>Notice:</b>	For permanent magnet synchronous motors (PMSM): If the parameters are not set as specified, i.e. not in ascending order and to more than 20 %, the unsaturated quadrature inductance (p0356) is always used for quadrature axis flux calculation purposes.		
<b>Note:</b>	For induction motors, p0362 = 100 % corresponds to the rated motor flux. For separately excited synchronous motors p0362 = 100% corresponds to an induced terminal voltage with the magnitude of the rated motor voltage (under no-load conditions at the synchronous speed). With permanent-magnet synchronous motors, p0362 = 100 % corresponds to the product of the unsaturated quadrature inductance (p0356) and the rated motor current (p0305). When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		

<b>p0363[0...n]</b>	<b>Motor saturation characteristic flux 2 / Mot saturat.flux 2</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6723, 6726
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	800.0 [%]	85.0 [%]
<b>Description:</b>	<p>The saturation characteristic (flux as mapping of current) is defined using 4 points.                      This parameter specifies the y coordinate (flux) for the 2nd value pair of the characteristic.                      Induction motors (ASM) and separately excited synchronous motors (SESM):                      The saturation characteristic describes the mapping of the magnetizing current onto the motor flux.                      The parameter sets the second motor flux as a [%] referred to the rated motor flux.                      Permanent magnet synchronous motors (PMSM):                      The saturation characteristic describes the mapping of the stator quadrature axis current onto the stator quadrature axis flux.                      The parameter sets the second stator quadrature axis flux as a [%] referred to the product of the unsaturated quadrature inductance (p0356) and the rated motor current.</p>		
<b>Dependency:</b>	<p>The following applies for the flux values:                      p0362 &lt; p0363 &lt; p0364 &lt; p0365                      The following applies for the stator quadrature axis flux values (PMSM):                      20 % &lt; p0362 &lt; p0363 &lt; p0364 &lt; p0365                      Refer to: p0367</p>		
<b>Notice:</b>	<p>For permanent magnet synchronous motors (PMSM):                      If the parameters are not set as specified, i.e. not in ascending order and to more than 20 %, the unsaturated quadrature inductance (p0356) is always used for quadrature axis flux calculation purposes.</p>		
<b>Note:</b>	<p>For induction motors, p0363 = 100 % corresponds to the rated motor flux.                      For separately excited synchronous motors p0363 = 100% corresponds to an induced terminal voltage with the magnitude of the rated motor voltage (under no-load conditions at the synchronous speed).                      With permanent-magnet synchronous motors, p0362 = 100 % corresponds to the product of the unsaturated quadrature inductance (p0356) and the rated motor current (p0305).                      When quick commissioning is exited with p3900 &gt; 0, then the parameter is reset if a catalog motor has not been selected (p0300).</p>		

<b>p0364[0...n]</b>	<b>Motor saturation characteristic flux 3 / Mot saturat.flux 3</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6723, 6726
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	800.0 [%]	115.0 [%]
<b>Description:</b>	<p>The saturation characteristic (flux as mapping of current) is defined using 4 points.                      This parameter specifies the y coordinate (flux) for the 3rd value pair of the characteristic.                      Induction motors (ASM) and separately excited synchronous motors (SESM):                      The saturation characteristic describes the mapping of the magnetizing current onto the motor flux.                      The parameter sets the third motor flux as a [%] referred to the rated motor flux.                      Permanent magnet synchronous motors (PMSM):                      The saturation characteristic describes the mapping of the stator quadrature axis current onto the stator quadrature axis flux.                      The parameter sets the third stator quadrature axis flux as a [%] referred to the product of the unsaturated quadrature inductance (p0356) and the rated motor current.</p>		

<b>Dependency:</b>	The following applies for the flux values: p0362 < p0363 < p0364 < p0365 The following applies for the stator quadrature axis flux values (PMSM): 20% < p0362 < p0363 < p0364 < p0365 Refer to: p0368
<b>Notice:</b>	For permanent magnet synchronous motors (PMSM): If the parameters are not set as specified, i.e. not in ascending order and to more than 20 %, the unsaturated quadrature inductance (p0356) is always used for quadrature axis flux calculation purposes.
<b>Note:</b>	For induction motors, p0364 = 100 % corresponds to the rated motor flux. For separately excited synchronous motors p0364 = 100% corresponds to an induced terminal voltage with the magnitude of the rated motor voltage (under no-load conditions at the synchronous speed). With permanent-magnet synchronous motors, p0362 = 100 % corresponds to the product of the unsaturated quadrature inductance (p0356) and the rated motor current (p0305). When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).

<b>p0365[0...n]</b>	<b>Motor saturation characteristic flux 4 / Mot saturat.flux 4</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6723, 6726
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	800.0 [%]	125.0 [%]
<b>Description:</b>	<p>The saturation characteristic (flux as mapping of current) is defined using 4 points. This parameter specifies the y coordinate (flux) for the 4th value pair of the characteristic. Induction motors (ASM) and separately excited synchronous motors (SESM): The saturation characteristic describes the mapping of the magnetizing current onto the motor flux. The parameter sets the fourth motor flux as a [%] referred to the rated motor flux. Permanent magnet synchronous motors (PMSM): The saturation characteristic describes the mapping of the stator quadrature axis current onto the stator quadrature axis flux. The parameter sets the fourth stator quadrature axis flux as a [%] referred to the product of the unsaturated quadrature inductance (p0356) and the rated motor current.</p>		
<b>Dependency:</b>	<p>The following applies for the flux values: p0362 &lt; p0363 &lt; p0364 &lt; p0365 The following applies for the stator quadrature axis flux values (PMSM): 20 % &lt; p0362 &lt; p0363 &lt; p0364 &lt; p0365 Refer to: p0369</p>		
<b>Notice:</b>	For permanent magnet synchronous motors (PMSM): If the parameters are not set as specified, i.e. not in ascending order and to more than 20 %, the unsaturated quadrature inductance (p0356) is always used for quadrature axis flux calculation purposes.		
<b>Note:</b>	<p>For induction motors, p0365 = 100 % corresponds to the rated motor flux. For separately excited synchronous motors p0365 = 100% corresponds to an induced terminal voltage with the magnitude of the rated motor voltage (under no-load conditions at the synchronous speed). With permanent-magnet synchronous motors, p0362 = 100 % corresponds to the product of the unsaturated quadrature inductance (p0356) and the rated motor current (p0305). When quick commissioning is exited with p3900 &gt; 0, then the parameter is reset if a catalog motor has not been selected (p0300).</p>		

<b>p0366[0...n]</b>	<b>Motor saturation characteristic I_mag 1 / Mot sat. I_mag 1</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6723, 6726
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	5.0 [%]	800.0 [%]	50.0 [%]
<b>Description:</b>	<p>The saturation characteristic (flux as mapping of current) is defined using 4 points.                      This parameter specifies the x coordinate for the 1st value pair of the characteristic.                      Induction motors (ASM) and separately excited synchronous motors (SESM):                      The saturation characteristic describes the mapping of the magnetizing current onto the motor flux.                      The parameter sets the first magnetizing current as a [%] referred to the rated magnetizing current r0331 (ASM), which in turn is referred to the no-load excitation current (SESM).                      Permanent magnet synchronous motors (PMSM):                      The saturation characteristic describes the mapping of the stator quadrature axis current onto the stator quadrature axis flux.                      The parameter sets the first stator quadrature axis current as a [%] referred to the rated motor current (p0305).</p>		
<b>Dependency:</b>	<p>The following applies for the magnetizing currents:                      p0366 &lt; p0367 &lt; p0368 &lt; p0369                      The following applies for the stator quadrature axis current values (PESM):                      20 % &lt; p0366 &lt; p0367 &lt; p0368 &lt; p0369                      Refer to: p0362</p>		
<b>Notice:</b>	<p>For permanent magnet synchronous motors (PMSM), the following applies:                      If the parameters are not set as specified, i.e. not in ascending order and to more than 20 %, the unsaturated quadrature inductance (p0356) is always used for quadrature axis flux calculation purposes.</p>		
<b>Note:</b>	<p>When quick commissioning is exited with p3900 &gt; 0, then the parameter is reset if a catalog motor has not been selected (p0300).</p>		
<b>p0367[0...n]</b>	<b>Motor saturation characteristic I_mag 2 / Mot sat. I_mag 2</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6723, 6726
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	5.0 [%]	800.0 [%]	75.0 [%]
<b>Description:</b>	<p>The saturation characteristic (flux as mapping of current) is defined using 4 points.                      This parameter specifies the x coordinate for the 2nd value pair of the characteristic.                      Induction motors (ASM) and separately excited synchronous motors (SESM):                      The saturation characteristic describes the mapping of the magnetizing current onto the motor flux.                      The parameter sets the second magnetizing current as a [%] referred to the rated magnetizing current r0331 (ASM), which in turn is referred to the no-load excitation current (SESM).                      Permanent magnet synchronous motors (PMSM):                      The saturation characteristic describes the mapping of the stator quadrature axis current onto the stator quadrature axis flux.                      The parameter sets the second stator quadrature axis current as a [%] referred to the rated motor current (p0305).</p>		
<b>Dependency:</b>	<p>The following applies for the magnetizing currents:                      p0366 &lt; p0367 &lt; p0368 &lt; p0369                      The following applies for the stator quadrature axis current values (PESM):                      20 % &lt; p0366 &lt; p0367 &lt; p0368 &lt; p0369                      Refer to: p0363</p>		
<b>Notice:</b>	<p>For permanent magnet synchronous motors (PMSM), the following applies:                      If the parameters are not set as specified, i.e. not in ascending order and to more than 20 %, the unsaturated quadrature inductance (p0356) is always used for quadrature axis flux calculation purposes.</p>		

**Note:** When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).

<b>p0368[0...n]</b>	<b>Motor saturation characteristic I_mag 3 / Mot sat. I_mag 3</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6723, 6726
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	5.0 [%]	800.0 [%]	150.0 [%]
<b>Description:</b>	<p>The saturation characteristic (flux as mapping of current) is defined using 4 points. This parameter specifies the x coordinate for the 3rd value pair of the characteristic. Induction motors (ASM) and separately excited synchronous motors (SESM):</p> <p>The saturation characteristic describes the mapping of the magnetizing current onto the motor flux. The parameter sets the third magnetizing current as a [%] referred to the rated magnetizing current r0331 (ASM), which in turn is referred to the no-load excitation current (SESM).</p> <p>Permanent magnet synchronous motors (PMSM):</p> <p>The saturation characteristic describes the mapping of the stator quadrature axis current onto the stator quadrature axis flux.</p> <p>The parameter sets the third stator quadrature axis current as a [%] referred to the rated motor current (p0305).</p>		
<b>Dependency:</b>	<p>The following applies for the magnetizing currents: p0366 &lt; p0367 &lt; p0368 &lt; p0369</p> <p>The following applies for the stator quadrature axis current values (PESM): 20 % &lt; p0366 &lt; p0367 &lt; p0368 &lt; p0369</p> <p>Refer to: p0364</p>		
<b>Notice:</b>	<p>For permanent magnet synchronous motors (PMSM), the following applies:</p> <p>If the parameters are not set as specified, i.e. not in ascending order and to more than 20 %, the unsaturated quadrature inductance (p0356) is always used for quadrature axis flux calculation purposes.</p>		
<b>Note:</b>	<p>When quick commissioning is exited with p3900 &gt; 0, then the parameter is reset if a catalog motor has not been selected (p0300).</p>		

<b>p0369[0...n]</b>	<b>Motor saturation characteristic I_mag 4 / Mot sat. I_mag 4</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6723, 6726
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	5.0 [%]	800.0 [%]	210.0 [%]
<b>Description:</b>	<p>The saturation characteristic (flux as mapping of current) is defined using 4 points. This parameter specifies the x coordinate for the 4th value pair of the characteristic. Induction motors (ASM) and separately excited synchronous motors (SESM):</p> <p>The saturation characteristic describes the mapping of the magnetizing current onto the motor flux. The parameter sets the fourth magnetizing current as a [%] referred to the rated magnetizing current r0331 (ASM), which in turn is referred to the no-load excitation current (SESM).</p> <p>Permanent magnet synchronous motors (PMSM):</p> <p>The saturation characteristic describes the mapping of the stator quadrature axis current onto the stator quadrature axis flux.</p> <p>The parameter sets the fourth stator quadrature axis current as a [%] referred to the rated motor current (p0305).</p>		
<b>Dependency:</b>	<p>The following applies for the magnetizing currents: p0366 &lt; p0367 &lt; p0368 &lt; p0369</p> <p>The following applies for the stator quadrature axis current values (PESM): 20 % &lt; p0366 &lt; p0367 &lt; p0368 &lt; p0369</p> <p>Refer to: p0365</p>		

## 2 Parameters

### 2.2 List of parameters

- Notice:** For permanent magnet synchronous motors (PMSM), the following applies:  
If the parameters are not set as specified, i.e. not in ascending order and to more than 20 %, the unsaturated quadrature inductance (p0356) is always used for quadrature axis flux calculation purposes.
- Note:** When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).

---

<b>r0370[0...n]</b>	<b>Motor stator resistance cold / Mot R_stator cold</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 16_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ohm]	- [ohm]	- [ohm]
<b>Description:</b>	Displays the motor stator resistance at an ambient temperature (p0625). The value does not include the cable resistance.		
<b>Dependency:</b>	Refer to: p0625		

---

<b>r0372[0...n]</b>	<b>Total power unit cable resistance / PU cable R_tot</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 16_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ohm]	- [ohm]	- [ohm]
<b>Description:</b>	Displays the total cable resistance between Motor Module and motor, as well as the internal converter resistance.		
<b>Dependency:</b>	Refer to: r0238, p0352		

---

<b>r0373[0...n]</b>	<b>Motor rated stator resistance / Mot R_stator rated</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 16_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ohm]	- [ohm]	- [ohm]
<b>Description:</b>	Displays the rated motor stator resistance at rated temperature (total of p0625 and p0627).		
<b>Dependency:</b>	Refer to: p0627		
<b>Note:</b>	The parameter is not used for synchronous motors (p0300 = 2xx).		

---

<b>r0374[0...n]</b>	<b>Motor rotor resistance cold / damping resistance d axis / Mot R_r cold/R_D d</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 16_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ohm]	- [ohm]	- [ohm]
<b>Description:</b>	Displays the rotor/secondary section resistance of the motor for the ambient temperature p0625. For separately excited synchronous motors: Displays the damping resistance in the rotor direction (d-axis).		
<b>Dependency:</b>	Refer to: p0625		
<b>Note:</b>	The parameter is not used for synchronous motors (p0300 = 2xx).		

<b>r0375[0...n]</b>	<b>Motor damping resistance q axis / Mot R_damp q</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 16_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ohm]	- [ohm]	- [ohm]
<b>Description:</b>	Displays the damping resistance of the separately excited synchronous motor quadrature to the rotor direction (q axis).		
<b>r0376[0...n]</b>	<b>Rated motor rotor resistance / Mot rated R_rotor</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 16_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> PMSM, SESM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ohm]	- [ohm]	- [ohm]
<b>Description:</b>	Displays the nominal rotor / secondary section resistance of the motor at the rated temperature. The rated temperature is the sum of p0625 and p0628.		
<b>Dependency:</b>	Refer to: p0628		
<b>Note:</b>	The parameter is not used for synchronous motors (p0300 = 2xx).		
<b>r0377[0...n]</b>	<b>Motor leakage inductance total / Mot L_leak total</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6640
	<b>P-Group:</b> Motor	<b>Unit group:</b> 15_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the total stray inductance of the motor. Induction motor, separately excited synchronous motor: Displays the stator leakage inductance of the motor, including the series inductance (p0353) and the motor reactor (p0233). Synchronous motor: Displays the stator quadrature inductance, including the series inductance (p0353) and the motor reactor (p0233).		
<b>r0378[0...n]</b>	<b>Motor stator inductance d axis / Mot L_stator d</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 15_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the stator longitudinal inductance of the synchronous motor including the series inductance (p0353) and the motor reactor (p0233).		
<b>Note:</b>	The parameter is not used for separately excited synchronous motors (p0300 = 5).		

<b>r0380[0...n]</b>	<b>Motor damping inductance d axis / Mot L_damp d</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 15_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the damping inductance of the separately excited synchronous motor in the rotor direction (d-axis).		
<b>r0381[0...n]</b>	<b>Motor damping inductance q axis / Mot L_damp q</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 15_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the damping inductance of a separately excited synchronous motor quadrature to the rotor direction (q axis).		
<b>r0382[0...n]</b>	<b>Motor magnetizing inductance transformed / Lh d axis saturated / Mot L_m tr/Lhd sat</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 15_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the magnetizing inductance of the motor. For separately excited synchronous motors: Displays the saturated magnetizing inductance in the rotor direction (d-axis).		
<b>Note:</b>	The parameter is not used for synchronous motors (p0300 = 2xx).		
<b>r0383[0...n]</b>	<b>Motor magnetizing inductance q axis saturated / Mot L_magn q sat</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> 15_1	<b>Unit selection:</b> p0349
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the saturated magnetizing inductance of a separately excited synchronous motor quadrature to the rotor direction (q axis).		

<b>r0384[0...n]</b>	<b>Motor rotor time constant / damping time constant d axis / Mot T_rotor/T_Dd</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6722
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ms]	- [ms]	- [ms]
<b>Description:</b>	Displays the rotor time constant. For separately excited synchronous motors: Displays the damping time constant to the rotor direction (d axis).		
<b>Note:</b>	The parameter is not used for synchronous motors. The value is calculated from the total of the inductances on the rotor side (p0358, p0360) divided by the rotor/damping resistance (p0354). The temperature adaptation of the rotor resistance for induction motors is not taken into account.		
<b>r0385[0...n]</b>	<b>Motor damping time constant q axis / Mot L_damping q</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ms]	- [ms]	- [ms]
<b>Description:</b>	Displays the damping time constant of a separately excited synchronous motor quadrature to the rotor direction (q axis).		
<b>Note:</b>	The value is calculated from the total of the inductances on the damping side (p0359, p0361) divided by the damping resistance (p0355).		
<b>r0386[0...n]</b>	<b>Motor stator leakage time constant / Mot T_stator leak</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ms]	- [ms]	- [ms]
<b>Description:</b>	Displays the stator leakage time constant.		
<b>Note:</b>	The value is calculated from the total of all leakage inductances (p0233*, p0353, p0356, p0358) divided by the total of all motor resistances (p0350, p0352, p0354). The temperature adaptation of the resistances is not taken into account. * only applies for VECTOR (r0107).		
<b>r0387[0...n]</b>	<b>Motor stator leakage time constant q axis / Mot T_Sleak /T_Sq</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ms]	- [ms]	- [ms]
<b>Description:</b>	Displays the stator leakage time constant quadrature to the rotor direction (q axis).		
<b>Note:</b>	The value is calculated from the total of all leakage inductances (p0233, p0356, p0359) divided by the total of all motor resistances (p0350, p0352, p0355). The temperature adaptation of the resistances is not taken into account.		

<b>p0389[0...n]</b>	<b>Excitation rated no-load current / Exc I_noload_rated</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [A]	10000.00 [A]	0.00 [A]
<b>Description:</b>	Sets the rated no-load current (I_F0) for the excitation.		
<b>p0390[0...n]</b>	<b>Rated excitation current / Exc I_rated</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [A]	10000.00 [A]	0.00 [A]
<b>Description:</b>	Setting the rated current (I_F) of the controlled excitation rectifier (DC master).		
<b>p0391[0...n]</b>	<b>Current controller adaptation starting point Kp / I_adapt pt Kp</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6714
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Arms]	6000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	Sets the starting point of the current-dependent current controller adaptation where the current controller gain p1715 is effective.		
<b>Dependency:</b>	Refer to: p0392, p0393, p1402, p1715		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		
<b>p0392[0...n]</b>	<b>Current controller adaptation starting point Kp adapted / I_adapt pt Kp adap</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6714
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Arms]	6000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	Sets the starting point of the current-dependent current controller adaptation where the adapted current controller gain p1715 x p0393 is effective.		
<b>Dependency:</b>	Refer to: p0391, p0393, p1402, p1715		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		

<b>p0393[0...n] Current controller adaptation P gain scaling / I_adapt Kp scal</b>			
VECTOR_G	<b>Can be changed:</b> C2(3), U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> REL <b>Min</b> 0.00 [%]	<b>Calculated:</b> CALC_MOD_REG <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000.00 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6714 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 100.00 [%]
<b>Description:</b>	Sets the factor for the current controller P gain in the adaptation range (e.g. r0078 > p0392, if p0392 > p0391). The value is referred to p1715.		
<b>Dependency:</b>	Refer to: p0391, p0392, p1402, p1715		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	For p0393 = 100 % or p1402.2 = 0, the current controller adaptation is disabled and p1715 is effective over the entire range. When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		
<b>r0395[0...n] Actual stator resistance / R_stator act</b>			
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> - [ohm]	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> 16_1 <b>Scaling:</b> - <b>Max</b> - [ohm]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6301, 6730, 6731, 6732 <b>Unit selection:</b> p0349 <b>Expert list:</b> 1 <b>Factory setting</b> - [ohm]
<b>Description:</b>	Displays the actual stator resistance (phase value). The parameter value also contains the temperature-independent cable resistance.		
<b>Dependency:</b>	In the case of induction motors the parameter is also affected by the motor temperature model. Refer to: p0350, p0352, p0620		
<b>Note:</b>	In each case, only the stator resistance of the active Motor Data Set is included with the stator temperature of the thermal motor model.		
<b>r0396[0...n] Actual rotor resistance / R_rotor act</b>			
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> PMSM, SESM, REL, RESM <b>Min</b> - [ohm]	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> 16_1 <b>Scaling:</b> - <b>Max</b> - [ohm]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6730 <b>Unit selection:</b> p0349 <b>Expert list:</b> 1 <b>Factory setting</b> - [ohm]
<b>Description:</b>	Displays the actual rotor/secondary section resistance (phase value). The parameter is affected by the motor temperature model.		
<b>Dependency:</b>	Refer to: p0354, p0620		
<b>Note:</b>	In each case, only the rotor resistance of the active Motor Data Set is included with the rotor temperature of the thermal motor model. This parameter is not used for synchronous motors (p0300 = 2xx).		

<b>p0397[0...n]</b>	<b>Angle magnetic decoupling maximum angle / Magn decpl max_ang</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [°]	90.0 [°]	90.0 [°]
<b>Description:</b>	Maximum angle when calculating the polynomial function to decouple the magnetic flux axes for permanent-magnet synchronous motors (see p0398, p0399).		
<b>p0398[0...n]</b>	<b>Angle magn decoupling (cross saturation) coeff 1 / Magn decoupl C1</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-10.000000	10.000000	0.000000
<b>Description:</b>	The magnetic cross coupling of the motor's d and q axes caused by saturation (current-dependent) leads to an angle offset affecting the axis system d'q'; this decouples the magnetic quantities. The angle offset can be described as a 3rd order polynomial function of the load current consumed: $\text{phiOffset} = f(C1 \cdot i_q + C3 \cdot i_q^3)$ This parameter is the coefficient C1; it describes the linear load impact effect.		
<b>p0399[0...n]</b>	<b>Angle magn decoupling (cross saturation) coeff 3 / Magn decoupl C3</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-10.000000	10.000000	0.000000
<b>Description:</b>	The magnetic cross coupling of the motor's d and q axes caused by saturation (current-dependent) leads to an angle offset affecting the axis system d'q'; this decouples the magnetic quantities. The angle offset can be described as a 3rd order polynomial function of the load current consumed: $\text{phiOffset} = f(C1 \cdot i_q + C3 \cdot i_q^3)$ This parameter is the coefficient C3; it describes the cubic load impact effect.		
<b>p0400[0...n]</b>	<b>Encoder type selection / Enc_typ sel</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 4)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4700, 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	10000	0
<b>Description:</b>	Selects the encoder from the list of encoder types supported.		
<b>Value:</b>	0: No encoder 3001: 1024 HTL A/B R 3002: 1024 TTL A/B R 3003: 2048 HTL A/B R 3005: 1024 HTL A/B 3006: 1024 TTL A/B 3007: 2048 HTL A/B		

3008: 2048 TTL A/B  
 3009: 1024 HTL A/B unipolar  
 3011: 2048 HTL A/B unipolar  
 3020: 2048 TTL A/B R, with sense  
 9999: User-defined  
 10000: Identify encoder

**Notice:** An encoder type with p0400 < 9999 defines an encoder for which there is an encoder parameter list.  
 When selecting a catalog encoder (p0400 < 9999) the parameters from the encoder parameter list cannot be changed (write protection). To remove write protection, the encoder type should be set to a third-party encoder (p0400 = 9999).

**Note:** The connected encoder can be identified by setting p0400 to 10000 or 10100. This assumes that the encoder supports this method, which is possible in the following cases: Motor with DRIVE-CLiQ, encoder with EnDat interface, DRIVE-CLiQ encoder, encoder with SSI interface (only 10100)..  
 The encoder data (e.g. pulse number p0408) can only be changed when p0400 = 9999.  
 When using an encoder with track A/B and zero pulse, as standard, fine synchronization is not set using a zero mark. If, for a synchronous motor, fine synchronization is to be realized using a zero mark, then the following must be executed:  
 - set p0400 to 9999  
 - set p0404.15 to 1  
 Prerequisite:  
 Coarse synchronization must be selected (e.g. pole position identification) and the zero pulse of the encoder must be either mechanically or electronically (p0431) adjusted to the pole position.  
 For p0400 = 10000 the following applies:  
 If an identification is not possible, then p0400 is set to 0.  
 For p0400 = 10100 the following applies:  
 If an identification is not possible, p0400 remains set to 10100 until it becomes possible.

p0400[0...n]	Encoder type selection / Enc_typ sel		
ENC	<b>Can be changed:</b> C2(1, 4)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4700, 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	10100	0
<b>Description:</b>	Selects the encoder from the list of encoder types supported.		
<b>Value:</b>	0: No encoder 202: DRIVE-CLiQ encoder AS20, singleturn 204: DRIVE-CLiQ encoder AM20, multiturn 4096 242: DRIVE-CLiQ encoder AS24, singleturn 244: DRIVE-CLiQ encoder AM24, multiturn 4096 1001: Resolver 1 speed 1002: Resolver 2 speed 1003: Resolver 3 speed 1004: Resolver 4 speed 2001: 2048, 1 Vpp, A/B C/D R 2002: 2048, 1 Vpp, A/B R 2003: 256, 1 Vpp, A/B R 2004: 400, 1 Vpp, A/B R 2005: 512, 1 Vpp, A/B R 2006: 192, 1 Vpp, A/B R 2007: 480, 1 Vpp, A/B R 2008: 800, 1 Vpp, A/B R 2010: 18000, 1 Vpp, A/B R distance-coded 2012: 420, 1 Vpp, A/B R 2013: 675, 1 Vpp, A/B R 2051: 2048, 1 Vpp, A/B, EnDat, Multiturn 4096 2052: 32, 1 Vpp, A/B, EnDat, Multiturn 4096 2053: 512, 1 Vpp, A/B, EnDat, Multiturn 4096 2054: 16, 1 Vpp, A/B, EnDat, Multiturn 4096 2055: 2048, 1 Vpp, A/B, EnDat, Singleturn 2081: 2048, 1 Vpp, A/B, SSI, Singleturn		

## 2 Parameters

### 2.2 List of parameters

2082: 2048, 1 Vpp, A/B, SSI, Multiturn 4096  
 2083: 2048, 1 Vpp, A/B, SSI, singleturn, error bit  
 2084: 2048, 1 Vpp, A/B, SSI, multiturn 4096, error bit  
 2110: 4000 nm, 1 Vpp, A/B R distance-coded  
 2111: 20000 nm, 1 Vpp, A/B R distance-coded  
 2112: 40000 nm, 1 Vpp, A/B R distance-coded  
 2151: 16000 nm, 1 Vpp, A/B, EnDat, resolution 100 nm  
 3001: 1024 HTL A/B R  
 3002: 1024 TTL A/B R  
 3003: 2048 HTL A/B R  
 3005: 1024 HTL A/B  
 3006: 1024 TTL A/B  
 3007: 2048 HTL A/B  
 3008: 2048 TTL A/B  
 3009: 1024 HTL A/B unipolar  
 3011: 2048 HTL A/B unipolar  
 3020: 2048 TTL A/B R, with sense  
 3081: SSI, Singleturn, 24 V  
 3082: SSI, Multiturn 4096, 24 V  
 3088: 1024, HTL, A/B, SSI, singleturn  
 3090: 4096, HTL, A/B, SSI, Singleturn  
 3109: 2000 nm, TTL, A/B R distance-coded  
 9999: User-defined  
 10000: Identify encoder  
 10050: Encoder with EnDat2.x interface identified  
 10051: DRIVE-CLiQ encoder identified  
 10058: Digital encoder (absolute) identified  
 10059: Digital encoder (incremental) identified  
 10100: Identify encoder (waiting)

**Notice:** An encoder type with p0400 < 9999 defines an encoder for which there is an encoder parameter list. When selecting a catalog encoder (p0400 < 9999) the parameters from the encoder parameter list cannot be changed (write protection). To remove write protection, the encoder type should be set to a third-party encoder (p0400 = 9999).

**Note:** The connected encoder can be identified by setting p0400 to 10000 or 10100. This assumes that the encoder supports this method, which is possible in the following cases: Motor with DRIVE-CLiQ, encoder with EnDat interface, DRIVE-CLiQ encoder, encoder with SSI interface (only 10100)..

The encoder data (e.g. pulse number p0408) can only be changed when p0400 = 9999.

When using an encoder with track A/B and zero pulse, as standard, fine synchronization is not set using a zero mark. If, for a synchronous motor, fine synchronization is to be realized using a zero mark, then the following must be executed:

- set p0400 to 9999
- set p0404.15 to 1

Prerequisite:

Coarse synchronization must be selected (e.g. pole position identification) and the zero pulse of the encoder must be either mechanically or electronically (p0431) adjusted to the pole position.

For p0400 = 10000 the following applies:

If an identification is not possible, then p0400 is set to 0.

For p0400 = 10100 the following applies:

If an identification is not possible, p0400 remains set to 10100 until it becomes possible.

p0402[0...n]	Gearbox type selection / Gearbox type sel		
VECTOR_G, ENC	<b>Can be changed:</b> C2(1, 4)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	10100	9999
<b>Description:</b>	Selects the gearbox type to pre-set the inversion and the gearbox factor. Measuring gear factor = motor or load revolutions / encoder revolutions.		

<b>Value:</b>	1: Gearbox 1:1 not inverted 2: Gearbox 2:7 inverted 3: Gearbox 4:17 inverted 4: Gearbox 2:10 inverted 9999: Gearbox user-defined 10000: Identify gearbox 10100: Identify gearbox
<b>Dependency:</b>	Refer to: p0410, p0432, p0433
<b>Note:</b>	For p0402 = 1: Automatic setting of p0410 = 0000 bin, p0432 = 1, p0433 = 1. For p0402 = 2: Automatic setting of p0410 = 0011 bin, p0432 = 7, p0433 = 2. For p0402 = 3: Automatic setting of p0410 = 0011 bin, p0432 = 17, p0433 = 4. For p0402 = 4: Automatic setting of p0410 = 0011 bin, p0432 = 10, p0433 = 2. For p0402 = 9999: No automatic setting of p0410, p0432, p0433. The parameters should be manually set. For p0402 = 10000: It is only possible to identify the gearbox type for a motor with DRIVE-CLiQ. Parameters p0410, p0432 and p0433 are set corresponding to the identified gearbox. If an identification is not possible, then p0402 is set to 9999.

p0404[0...n]	Encoder configuration effective / Enc_config eff		
VECTOR_G	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4010, 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin

**Description:** Settings for the basic encoder properties.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Linear encoder	Yes	No	-
	01	Absolute encoder	Yes	No	-
	02	Multiturn encoder	Yes	No	-
	03	Track A/B sq-wave	Yes	No	-
	04	Track A/B sine	Yes	No	-
	05	Track C/D	Yes	No	-
	06	Hall sensor	Yes	No	-
	08	EnDat encoder	Yes	No	-
	09	SSI encoder	Yes	No	-
	10	DRIVE-CLiQ encoder	Yes	No	-
	11	Digital encoder	Yes	No	-
	12	Equidistant zero mark	Yes	No	-
	13	Irregular zero mark	Yes	No	-
	14	Distance-coded zero mark	Yes	No	-
	15	Commutation with zero mark (not ASM)	Yes	No	-
	16	Acceleration	Yes	No	-
	17	Track A/B analog	Yes	No	-
	20	Voltage level 5 V	Yes	No	-
	21	Voltage level 24 V	Yes	No	-
	22	Remote sense (only SMC30)	Yes	No	-
	23	Resolver excit	Yes	No	-

**Notice:** This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400).  
When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.  
If an SSI encoder (bit 9 = 1) is used as motor encoder for permanent-magnet synchronous motors, then this is only permissible in conjunction with an additional A/B track (bit 3 = 1 or bit 4 = 1).

## 2 Parameters

### 2.2 List of parameters

**Note:** ZM: Zero mark  
 SMC: Sensor Module Cabinet

If a technique to determine the commutation information/data has not been selected (e.g. track C/D, Hall sensor), and the encoder pulse number is an integer multiple of the pole number, then the following applies:  
 The track A/B is adjusted to match the magnetic position of the motor.  
 For bit 01, 02 (absolute encoder, multiturn encoder):  
 These bits can only be selected for EnDat encoders, SSI encoders or DRIVE-CLiQ encoders.  
 For bit 10 (DRIVE-CLiQ encoder):  
 This bit is only used for the large-scale integrated DRIVE-CLiQ encoders that provide their encoder data directly in DRIVE-CLiQ format without converting this data. This bit is not, therefore, set for first-generation DRIVE-CLiQ encoders.  
 For bit 12 (equidistant zero mark):  
 The zero marks occur at regular intervals (e.g. rotary encoder with 1 zero mark per revolution or linear encoder with constant zero mark distance).  
 The bit activates monitoring of the zero mark distance (p0424/p0425, linear/rotary) or in the case of the linear encoder with 1 zero mark and p0424 = 0 zero mark monitoring is activated.  
 For bit 13 (irregular zero mark):  
 The zero marks occur at irregular intervals (e.g. a linear scale with only 1 zero mark in the traversing range). The zero mark distance is not monitored.  
 For bit 14 (distance-coded zero mark):  
 The distance (clearance) between two or several consecutive zero marks allows the absolute position to be calculated.  
 For bit 15 (commutation with zero mark):  
 Only applicable for synchronous motors.  
 The function can be de-selected by priority via p0430.23.  
 For distance-coded zero marks, the following applies:  
 The phase sequence of the C/D track (if available) must be the same as the phase sequence of the encoder (A/B track).  
 The phase sequence of the Hall signal (if available) must be the same as the phase sequence of the motor. Further, the position of the Hall sensor must be mechanically adjusted to the motor EMF.  
 The fine synchronization is only started after two zero marks have been passed.

p0404[0...n]	Encoder configuration effective / Enc_config eff		
ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4010, 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin

**Description:** Settings for the basic encoder properties.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Linear encoder	Yes	No	-
	01	Absolute encoder	Yes	No	-
	02	Multiturn encoder	Yes	No	-
	03	Track A/B sq-wave	Yes	No	-
	04	Track A/B sine	Yes	No	-
	05	Track C/D	Yes	No	-
	06	Hall sensor	Yes	No	-
	08	EnDat encoder	Yes	No	-
	09	SSI encoder	Yes	No	-
	10	DRIVE-CLiQ encoder	Yes	No	-
	11	Digital encoder	Yes	No	-
	12	Equidistant zero mark	Yes	No	-
	13	Irregular zero mark	Yes	No	-
	14	Distance-coded zero mark	Yes	No	-
	15	Commutation with zero mark (not ASM)	Yes	No	-
	16	Acceleration	Yes	No	-

17	Track A/B analog	Yes	No	-
20	Voltage level 5 V	Yes	No	-
21	Voltage level 24 V	Yes	No	-
22	Remote sense (only SMC30)	Yes	No	-
23	Resolver excit	Yes	No	-

**Notice:** This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.

**Note:** ZM: Zero mark  
SMC: Sensor Module Cabinet

If a technique to determine the commutation information/data has not been selected (e.g. track C/D, Hall sensor), and the encoder pulse number is an integer multiple of the pole number, then the following applies:  
The track A/B is adjusted to match the magnetic position of the motor.

For bit 01, 02 (absolute encoder, multiturn encoder):  
These bits can only be selected for EnDat encoders, SSI encoders or DRIVE-CLiQ encoders.

For bit 10 (DRIVE-CLiQ encoder):  
This bit is only used for the large-scale integrated DRIVE-CLiQ encoders that provide their encoder data directly in DRIVE-CLiQ format without converting this data. This bit is not, therefore, set for first-generation DRIVE-CLiQ encoders.

For bit 12 (equidistant zero mark):  
The zero marks occur at regular intervals (e.g. rotary encoder with 1 zero mark per revolution or linear encoder with constant zero mark distance).  
The bit activates monitoring of the zero mark distance (p0424/p0425, linear/rotary) or in the case of the linear encoder with 1 zero mark and p0424 = 0 zero mark monitoring is activated.

For bit 13 (irregular zero mark):  
The zero marks occur at irregular intervals (e.g. a linear scale with only 1 zero mark in the traversing range). The zero mark distance is not monitored.

For bit 14 (distance-coded zero mark):  
The distance (clearance) between two or several consecutive zero marks allows the absolute position to be calculated.

For bit 15 (commutation with zero mark):  
Only applicable for synchronous motors.  
The function can be de-selected by priority via p0430.23.  
For distance-coded zero marks, the following applies:  
The phase sequence of the C/D track (if available) must be the same as the phase sequence of the encoder (A/B track).  
The phase sequence of the Hall signal (if available) must be the same as the phase sequence of the motor. Further, the position of the Hall sensor must be mechanically adjusted to the motor EMF.  
The fine synchronization is only started after two zero marks have been passed.

p0405[0...n]	Square-wave encoder track A/B / Sq-wave enc A/B		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 1111 bin

**Description:** Settings for the track A/B in a square-wave encoder.  
For square-wave encoders, p0404.3 must also be 1.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Signal	Bipolar	Unipolar	-
	01	Level	TTL	HTL	-
	02	Track monitoring	A/B <> -A/B	None	-
	03	Zero pulse	Same as A/B track	24 V unipolar	-
	04	Switching threshold	High	Low	-
	05	Pulse/direction	Active	Inactive	-

## 2 Parameters

### 2.2 List of parameters

**Notice:** This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400).  
When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.

**Note:** For bit 02:  
When the function is activated, track monitoring can be deactivated by setting p0437.26.  
For bit 05:

When the function is activated, a frequency setpoint and a direction for traveling can be entered via an encoder interface.

---

#### p0407[0...n] Linear encoder grid division / Enc grid div

VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4010, 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [nm]	250000000 [nm]	16000 [nm]

**Description:** Sets the grid division for a linear encoder.

In conjunction with the values in p0418/p0419, the grid division defines the transfer format for position actual values Gn\_XIST1 (r0482) and Gn\_XIST2 (r0483).

**Notice:** This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400).  
When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.

**Note:** The lowest permissible value is 250 nm.

This value does not always correspond to the grid division of the measuring device. For a DRIVE-CLiQ encoder, a value is entered here that facilitates optimum transfer of the resolution (p0422).

---

#### p0408[0...n] Rotary encoder pulse number / Rot enc pulse No.

VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4010, 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	16777215	2048

**Description:** Sets the number of pulses for a rotary encoder.

In conjunction with the values in p0418/p0419, the pulse number defines the transfer format for position actual values Gn\_XIST1 (r0482) and Gn\_XIST2 (r0483).

**Notice:** This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400).  
When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.

**Note:** The smallest permissible value is 1 pulse.

The number of pole pairs for a resolver is entered here.

This value does not always correspond to the pulse number of the measuring device. For a DRIVE-CLiQ encoder, a value is entered here that facilitates optimum transfer of the resolution (p0423).

<b>p0410[0...n]</b>		<b>Encoder inversion actual value / Enc inv act value</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4) <b>Data type:</b> Unsigned16	<b>Calculated:</b> - <b>Dyn. index:</b> EDS, p0140	<b>Access level:</b> 3 <b>Func. diagram:</b> 4704, 4710, 4711, 4715	
	<b>P-Group:</b> Encoder <b>Not for motor type:</b> -	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1	
	<b>Min</b> -	<b>Max</b> -	<b>Factory setting</b> 0000 bin	
<b>Description:</b>	Setting to invert actual values.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Invert speed actual value	Yes	No
	01	Invert position actual value	Yes	No
<b>Note:</b>	The inversion influences the following parameters: Bit 00: r0061, r0063 (exception: encoderless control), r0094 Bit 01: r0482, r0483			

<b>p0410[0...n]</b>		<b>Encoder inversion actual value / Enc inv act value</b>		
ENC (Lin_enc)	<b>Can be changed:</b> C2(4) <b>Data type:</b> Unsigned16	<b>Calculated:</b> - <b>Dyn. index:</b> EDS, p0140	<b>Access level:</b> 3 <b>Func. diagram:</b> 4704, 4710, 4711, 4715	
	<b>P-Group:</b> Encoder <b>Not for motor type:</b> -	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1	
	<b>Min</b> -	<b>Max</b> -	<b>Factory setting</b> 0000 bin	
<b>Description:</b>	Setting to invert actual values.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Invert velocity actual value	Yes	No
	01	Invert position actual value	Yes	No
<b>Note:</b>	The inversion influences the following parameters: Bit 00: r0061, r0063 (exception: encoderless control), r0094 Bit 01: r0482, r0483			

<b>p0411[0...n]</b>		<b>Measuring gear configuration / Meas gear config</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4) <b>Data type:</b> Unsigned32	<b>Calculated:</b> - <b>Dyn. index:</b> EDS, p0140	<b>Access level:</b> 1 <b>Func. diagram:</b> 4704	
	<b>P-Group:</b> Encoder <b>Not for motor type:</b> -	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1	
	<b>Min</b> -	<b>Max</b> -	<b>Factory setting</b> 0000 bin	
<b>Description:</b>	Sets the configuration for position tracking of a measuring gear.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Measuring gear activate position tracking	Yes	No
	01	Axis type	Linear axis	Rotary axis
	02	Measuring gear reset position	Yes	No
	03	Meas. gearbox, activate pos. tracking for incremental encoders	Yes	No
<b>Notice:</b>	For p0411.3 = 1 the following applies: If position tracking is activated for incremental encoders, only the position actual value is stored. Axis or encoder motion is not detected when deactivated! Any tolerance window entered in p0413 has no effect.			

## 2 Parameters

### 2.2 List of parameters

**Note:** For the following events, the non-volatile, saved position values are automatically reset:

- when an encoder replacement has been identified.
- when changing the configuration of the Encoder Data Set (EDS).

p0412[0...n]	Measuring gear absolute encoder rotary revolutions virtual / Abs rot rev		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4194303	0
<b>Description:</b>	Sets the number of rotations that can be resolved for a rotary encoder with activated position tracking of the measuring gear.		
<b>Dependency:</b>	This parameter is only of significance for an absolute encoder (p0404.1 = 1) with activated position tracking (p0411.0 = 1) and for an incremental encoder with activated position tracking (p0411.3 = 1).		
<b>Note:</b>	The resolution that is set must be able to be represented using r0483. For rotary axes/modulo axes, the following applies: p0411.0 = 1: This parameter is pre-set with p0421 and can be changed. p0411.3 = 1: The parameter value is pre-set to the highest possible value. The highest possible value depends on the pulse number (p0408) and the fine resolution (p0419). For linear axes, the following applies: p0411.0 = 1: This parameter is pre-assigned with p0421, expanded by 6 bits for multiturn information (maximum number of overflows) and cannot be changed. p0411.3 = 1: The parameter value is pre-set to the highest possible value. The highest possible value depends on the pulse number (p0408) and the fine resolution (p0419).		

p0413[0...n]	Measuring gear position tracking tolerance window / Pos track window		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	4294967300.00	0.00
<b>Description:</b>	Sets a tolerance window for position tracking. After the system is switched on, the difference between the saved position and the actual position is determined, and depending on this, the following is initiated: Difference within the tolerance window --> The position is reproduced as a result of the encoder actual value. Difference outside the tolerance window --> An appropriate message is output.		
<b>Dependency:</b>	Refer to: F31501, F32501, F33501		
<b>Caution:</b>	Rotation, e.g. through a complete encoder range is not detected.		
			
<b>Note:</b>	The value is entered in integer (complete) encoder pulses. For p0411.0 = 1, the value is automatically pre-assigned quarter of the encoder range. Example: Quarter of the encoder range = (p0408 * p0421) / 4 It is possible that the tolerance window may not be able to be precisely set due to the data type (floating point number with 23 bit mantissa).		

<b>p0414[0...n]</b>	<b>Redundant coarse position value relevant bits (identified) / Relevant bits</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	16	16
<b>Description:</b>	Sets the number of relevant bits for the redundant coarse position value.		
<b>p0415[0...n]</b>	<b>Gx_XIST1 Coarse position safe most significant bit (identified) / Gx_XIST1 safe MSB</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	31	14
<b>Description:</b>	Sets the bit number for the safe most significant bit (MSB) of the Gx_XIST1 coarse position.		
<b>Note:</b>	MSB: Most Significant Bit		
<b>p0416[0...n]</b>	<b>Non safety-relevant meas. steps position value POS1 (detected) / nsrPos1</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	22000
<b>Description:</b>	Sets the non safety-relevant measuring steps of POS1.		
<b>Dependency:</b>	Refer to: r0473, p9513		
<b>p0417[0...n]</b>	<b>Encoder safety comparison algorithm (detected) / Safety comp_algo</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	255
<b>Description:</b>	Sets the comparison algorithm for the encoder position monitoring functions.		
<b>Value:</b>	0: SMx20 safety algorithm 10: DQL binary safety algorithm 11: DQL linear non-binary safety algorithm 12: SMC30 safety algorithm 255: Safety algorithm unknown		
<b>Dependency:</b>	Refer to: p9541		

## 2 Parameters

### 2.2 List of parameters

<b>p0418[0...n]</b>	<b>Fine resolution Gx_XIST1 (in bits) / Enc fine Gx_XIST1</b>			
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4010, 4704	
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	2	18	11	
<b>Description:</b>	Sets the fine resolution in bits of the incremental position actual values.			
<b>Note:</b>	The parameter applies for the following process data: - Gx_XIST1 - Gx_XIST2 for reference mark or flying measurement The fine resolution specifies the fraction between encoder pulses. Depending on the physical measurement principle, an encoder pulse can be broken down into a different number of fractions (e.g. squarewave encoder: 2 bit = resolution 4, sin/cos encoder: Typical 11 bit = resolution 2048). For a squarewave encoder, with the factory setting, the least significant bits have the value zero, i.e. they do not supply any useful information. For especially high quality measuring systems, the fine resolution must be increased corresponding to the available accuracy.			
<b>p0419[0...n]</b>	<b>Fine resolution absolute value Gx_XIST2 (in bits) / Enc fine Gx_XIST2</b>			
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4704, 4710	
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	2	18	9	
<b>Description:</b>	Sets the fine resolution in bits of the absolute position actual values.			
<b>Dependency:</b>	Refer to: p0418			
<b>Note:</b>	This parameter applies to process data Gx_XIST2 when reading the absolute value.			
<b>p0420[0...n]</b>	<b>Encoder connection / Enc_connection</b>			
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 bin	
<b>Description:</b>	Selecting the encoder connection.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	SUB-D	Yes	No
	01	Terminal	Yes	No
				<b>FP</b>
				-
				-
<b>p0421[0...n]</b>	<b>Absolute encoder rotary multiturn resolution / Enc abs multiturn</b>			
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4704	
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	4294967295	4096	
<b>Description:</b>	Sets the number of rotations that can be resolved for a rotary absolute encoder.			
<b>Notice:</b>	This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.			

<b>p0422[0...n]</b>	<b>Absolute encoder linear measuring step resolution / Enc abs meas step</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [nm]	4294967295 [nm]	100 [nm]
<b>Description:</b>	Sets the resolution of the absolute position for a linear absolute encoder.		
<b>Notice:</b>	This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
<b>Note:</b>	The serial protocol of an absolute encoder provides the position with a certain resolution (e.g. 100 nm). This value must be entered here.		
<b>p0423[0...n]</b>	<b>Absolute encoder rotary singleturn resolution / Enc abs singleturn</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1073741823	8192
<b>Description:</b>	Sets the number of measuring steps per revolution for a rotary absolute encoder. The resolution refers to the absolute position.		
<b>Notice:</b>	This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
<b>p0424[0...n]</b>	<b>Encoder linear zero mark distance / Enc lin ZM_dist</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [mm]	65535 [mm]	20 [mm]
<b>Description:</b>	Sets the distance between two zero marks for a linear encoder. This information is used for zero mark monitoring.		
<b>Notice:</b>	This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
<b>Note:</b>	For distance-coded zero marks this parameter signifies the basic distance.		
<b>p0425[0...n]</b>	<b>Encoder rotary zero mark distance / Enc rot dist ZM</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 4704, 8570
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	16777215	2048
<b>Description:</b>	Sets the distance in pulses between two zero marks for a rotary encoder. This information is used for zero mark monitoring.		
<b>Notice:</b>	This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		

## 2 Parameters

### 2.2 List of parameters

**Note:** For distance-coded zero marks this parameter signifies the basic distance.

p0426[0...n]	Encoder zero mark differential distance / Enc ZM Dif_dist		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	65535	1
<b>Description:</b>	Sets the differential distance with distance-coded zero marks [signal periods]. The value corresponds to jump displacement of "zero mark with interference".		
<b>Notice:</b>	This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		

p0427[0...n]	Encoder SSI baud rate / Enc SSI baud rate		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [kHz]	65535 [kHz]	100 [kHz]
<b>Description:</b>	Sets the baud rate for an SSI encoder.		
<b>Notice:</b>	This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
<b>Note:</b>	SSI: Synchronous Serial Interface		

p0428[0...n]	Encoder SSI monoflop time / Enc SSI t_monoflop		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [µs]	65535 [µs]	30 [µs]
<b>Description:</b>	Sets the minimum delay time between two data transfers of the absolute value for an SSI encoder.		
<b>Notice:</b>	This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		

p0429[0...n]	Encoder SSI configuration / Enc SSI config				
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 bin		
<b>Description:</b>	Sets the configuration for an SSI encoder.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Transfer code	Binary code	Gray code	-
	02	Transfer absolute value twice	Yes	No	-
	06	Data line during the monoflop time	High level	Low level	-

**Notice:** This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400).  
When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.

**Note:** For bit 06:  
The quiescent signal level of the data line corresponds to the inverted, set level.

p0430[0...n]	Sensor Module configuration / SM config		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1110 0000 0000 1000 0000 0000 0000 0000 bin

**Description:** Sets the configuration of the Sensor Module.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	17	Burst oversampling	Yes	No	-
	18	Continuous oversampling (reserved)	Yes	No	-
	19	Safety position actual value sensing	Yes	No	-
	20	Speed calculation mode (only SMC30)	Incremental diff	Flank time meas	-
	21	Zero mark tolerance	Yes	No	-
	22	Rot pos adapt	Yes	No	-
	23	De-select commutation with zero mark	Yes	No	-
	24	Commutation with selected zero mark	Yes	No	-
	25	Switch off encoder voltage supply during parking	Yes	No	-
	27	Extrapolate position values	Yes	No	-
	28	Cubic correction	Yes	No	-
	29	Phase correction	Yes	No	-
	30	Amplitude correction	Yes	No	-
	31	Offset correction	Yes	No	-

**Notice:** A bit-wise configuration is only possible if the corresponding property is also present in r0458.

**Note:** For bit 17 (burst oversampling):  
- if bit = 1, burst oversampling is switched on.

For bit 18 (continuous oversampling):  
- if bit = 1, continuous oversampling is switched on.

For bit 19 (Safety position actual value sensing):  
- if bit = 1, the Safety position actual value is transferred in the cyclic telegram.

For bit 20 (speed calculation mode):  
- if bit = 1, the speed is calculated via incremental difference without extrapolation.  
- if bit = 0, the speed is calculated via edge time measurement with extrapolation. p0453 is effective in this mode.

For bit 21 (zero mark tolerance):  
- if bit = 1, a one-off zero mark distance error is tolerated. In the event of a defect, the fault F3x100/F3x101 does not appear, but alarm A3x400/A3x401 does.

For bit 22 (rotor position adaptation):  
- if bit = 1, the rotor position is corrected automatically. The correction speed is +/-1/4 encoder pulse per zero mark distance.

For bit 23 (de-select commutation with zero mark):  
- the bit should only be set for encoders that have not been adjusted.

For bit 24 (commutation with selected zero mark):  
- if bit = 1, the commutation position is corrected via a selected zero mark.

For bit 25 (disconnect the encoder power supply on parking):  
- if bit = 1, the encoder power supply is switched off on parking (0 V).  
- if bit = 0, the encoder power supply is not switched off on parking, it is reduced from 24 V to 5 V.

For bit 27 (extrapolate position values):  
- if bit = 1, the extrapolation of the position values is activated.

## 2 Parameters

### 2.2 List of parameters

- For bit 28 (cubic correction):  
 - if bit = 1, the cubic correction for track A/B sine is activated.
- For bit 29 (phase correction):  
 - if bit = 1, the phase correction for track A/B sine is activated.
- For bit 30 (amplitude correction):  
 - if bit = 1, the amplitude correction for track A/B sine is activated.
- For bit 31 (offset correction):  
 - if bit = 1, the offset correction for track A/B sine is activated.

#### p0430[0...n]

#### Sensor Module configuration / SM config

ENC (Lin\_enc)

**Can be changed:** C2(4)

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32

**Dyn. index:** EDS, p0140

**Func. diagram:** -

**P-Group:** Encoder

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

1110 0000 0000 1000 0000  
0000 0000 0000 bin

#### Description:

Sets the configuration of the Sensor Module.

#### Bit field:

Bit	Signal name	1 signal	0 signal	FP
17	Burst oversampling	Yes	No	-
18	Continuous oversampling (reserved)	Yes	No	-
19	Safety position actual value sensing	Yes	No	-
20	Velocity calculation mode (only SMC30)	Incremental diff	Flank time meas	-
21	Zero mark tolerance	Yes	No	-
22	Rot pos adapt	Yes	No	-
23	De-select commutation with zero mark	Yes	No	-
24	Commutation with selected zero mark	Yes	No	-
25	Switch off encoder voltage supply during parking	Yes	No	-
27	Extrapolate position values	Yes	No	-
28	Cubic correction	Yes	No	-
29	Phase correction	Yes	No	-
30	Amplitude correction	Yes	No	-
31	Offset correction	Yes	No	-

#### Notice:

A bit-wise configuration is only possible if the corresponding property is also present in r0458.

#### Note:

For bit 17 (burst oversampling):

- if bit = 1, burst oversampling is switched on.

For bit 18 (continuous oversampling):

- if bit = 1, continuous oversampling is switched on.

For bit 19 (Safety position actual value sensing):

- if bit = 1, the Safety position actual value is transferred in the cyclic telegram.

For bit 20 (speed calculation mode):

- if bit = 1, the speed is calculated via incremental difference without extrapolation.

- if bit = 0, the speed is calculated via edge time measurement with extrapolation. p0453 is effective in this mode.

For bit 21 (zero mark tolerance):

- if bit = 1, a one-off zero mark distance error is tolerated. In the event of a defect, the fault F3x100/F3x101 does not appear, but alarm A3x400/A3x401 does.

For bit 22 (rotor position adaptation):

- if bit = 1, the rotor position is corrected automatically. The correction speed is +/-1/4 encoder pulse per zero mark distance.

For bit 23 (de-select commutation with zero mark):

- the bit should only be set for encoders that have not been adjusted.

For bit 24 (commutation with selected zero mark):

- if bit = 1, the commutation position is corrected via a selected zero mark.

For bit 25 (disconnect the encoder power supply on parking):

- if bit = 1, the encoder power supply is switched off on parking (0 V).

- if bit = 0, the encoder power supply is not switched off on parking, it is reduced from 24 V to 5 V.

- For bit 27 (extrapolate position values):  
 - if bit = 1, the extrapolation of the position values is activated.  
 For bit 28 (cubic correction):  
 - if bit = 1, the cubic correction for track A/B sine is activated.  
 For bit 29 (phase correction):  
 - if bit = 1, the phase correction for track A/B sine is activated.  
 For bit 30 (amplitude correction):  
 - if bit = 1, the amplitude correction for track A/B sine is activated.  
 For bit 31 (offset correction):  
 - if bit = 1, the offset correction for track A/B sine is activated.

<b>p0431[0...n]</b>	<b>Angular commutation offset / Ang_com offset</b>		
VECTOR_G	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-180.00 [°]	180.00 [°]	0.00 [°]
<b>Description:</b>	Sets the angular commutation offset.		
<b>Dependency:</b>	The value is taken into account in r0094. Refer to: r0094, r1778		
<b>Notice:</b>	When the firmware is upgraded from V2.3 to V2.4 or higher, the value must be reduced by 60° if all the following conditions are fulfilled: - the motor is a synchronous motor (p0300 = 2, 2xx, 4, 4xx). - the encoder is a resolver (p0404.23 = 1). - the actual speed value is inverted (p0410.0 = 1). The angular commutation offset cannot be generally taken from other drive systems. As a minimum - the sign of the offset determined for SIMODRIVE 611 digital and SIMODRIVE 611 universal must be reversed for SINAMICS (p0431 (SINAMICS) = -p1016 (SIMODRIVE)).		
<b>Note:</b>	Angular commutation offset, angular difference between electrical position of encoder and flux position. For p0404.5 = 1 (track C/D) the following applies: The angular offset in p0431 acts on track A/B, the zero mark on track C/D. For p0404.6 = 1 (Hall sensor) the following applies: The angular offset in p0431 acts on track A/B and the zero mark.		

<b>p0432[0...n]</b>	<b>Gearbox factor encoder revolutions / Grbx_fact enc_rev</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	1048576	1
<b>Description:</b>	Sets the encoder revolutions for the gearbox factor of the encoder evaluation. The gearbox factor specifies the ratio between the encoder shaft and motor shaft (for motor encoders) or between the encoder shaft and the load.		
<b>Dependency:</b>	This parameter can only be set for p0402 = 9999. Refer to: p0402, p0410, p0433		
<b>Note:</b>	Negative gearbox factors should be implemented with p0410.		

<b>p0433[0...n]</b>	<b>Gearbox factor motor/load revolutions / Grbx_fact mot_rev</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	1048576	1
<b>Description:</b>	Sets the motor and load revolutions for the gearbox factor of the encoder evaluation. The gearbox factor specifies the ratio between the encoder shaft and motor shaft (for motor encoders) or between the encoder shaft and the load.		
<b>Dependency:</b>	This parameter can only be set for p0402 = 9999. Refer to: p0402, p0410, p0432		
<b>Note:</b>	Negative gearbox factors should be implemented with p0410.		

<b>p0434[0...n]</b>	<b>Encoder SSI error bit / Enc SSI error bit</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Sets the position and level of the error bit in the SSI protocol.		
<b>Notice:</b>	The bit may only be positioned before (p0446) or after (p0448) the absolute value in the SSI protocol.		
<b>Note:</b>	Value = dcba ba: Position of the error bit in the protocol (0 ... 63). c: Level (0: Low level, 1: High level). d: Status of the evaluation (0: Off, 1: On with 1 error bit, 2: On with 2 error bits ... 9: On with 9 error bits). For several error error bits, the following applies: - the position specified under ba and the additional bits are assigned increasing consecutively. - the level set under c applies to all error bits. Example: p0434 = 1013 --> The evaluation is switched in and the error bit is at position 13 with a low level. p0434 = 1113 --> The evaluation is switched in and the error bit is at position 13 with a high level.		

<b>p0435[0...n]</b>	<b>Encoder SSI alarm bit / Enc SSI alarm bit</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Sets the position and level of the alarm bit in the SSI protocol.		
<b>Notice:</b>	The bit may only be positioned before (p0446) or after (p0448) the absolute value in the SSI protocol.		
<b>Note:</b>	Value = dcba ba: Position of the alarm bit in protocol (0 ... 63). c: Level (0: Low level, 1: High level). d: State of the evaluation (0: Off, 1: On).		

Example:

p0435 = 1014

--> The evaluation is switched in and the alarm bit is at position 14 with a low level.

p0435 = 1114

--> The evaluation is switched in and the alarm bit is at position 14 with a high level.

p0436[0...n]	Encoder SSI parity bit / Enc SSI parity bit		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0

**Description:**

Sets the position and parity of the parity bit in the SSI protocol.

**Notice:**

The bit may only be positioned before (p0446) or after (p0448) the absolute value in the SSI protocol.

**Note:**

Value = dcba

ba: Position of the parity bit in the protocol (0 ... 63).

c: Parity (0: even, 1: uneven).

d: State of the evaluation (0: Off, 1: On).

Example:

p0436 = 1015

--> The evaluation is switched in and the parity bit is at position 15 with even parity.

p0436 = 1115

--> The evaluation is switched in and the parity bit is at position 15 with uneven parity.

p0437[0...n]	Sensor Module configuration extended / SM config ext		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0011 0000 0000 0000 0000 1000 0000 0000 bin

**Description:**

Sets the extended configuration of the Sensor Module.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Data logger	Yes	No	-
01	Zero mark edge detection	Yes	No	-
02	Correction position actual value XIST1	Yes	No	-
04	Edge evaluation bit 0	Yes	No	-
05	Edge evaluation bit 1	Yes	No	-
06	Freeze the speed actual value for dn/dt errors	Yes	No	-
07	Do not accumulate the number of incorrect pulses	Yes	No	-
11	Fault handling after PROFIdrive	Yes	No	-
12	Activate additional messages	Yes	No	-
13	Support absolute position for incremental encoder	Yes	No	4750
25	Deselect monitoring multiturn representation in Gx_XIST2	Yes	No	-
26	Deselect track monitoring	Yes	No	-
28	EnDat linear encoder monitoring incremental/absolute	Yes	No	-
29	EnDat encoder initialization with high accuracy	Yes	No	-
31	Analog unipolar track monitoring	Yes	No	-

**Dependency:**

Refer to: p0430, r0459

- Note:** A value of zero is displayed if an encoder is not present.
- For bit 00:  
When the data logger (trace) is activated, in the case of a fault, data before and after the event are recorded (traced) and saved in files on the non-volatile memory medium. Experts can then evaluate this data.
- For bit 01:  
If bit = 0, the zero mark is evaluated by ANDing tracks A and B and the zero mark.  
For bit = 1, the zero mark is evaluated depending on the direction of rotation detected. For a positive direction of rotation, the positive edge of the zero mark is considered and for a negative direction of rotation, the negative edge of the zero mark.
- For bit 02:  
If the bit is set, in the event of a deviation less than the tolerance window for the zero mark (p4681, p4682), the pulses per revolution are corrected. If the bit is not set, encoder fault F3x131 is triggered.
- For bits 05, 04:  
The actual hardware only supports 1x or 4x signal evaluation.  
Bit 5/4 = 0/0: Signal evaluation per period, 4x.  
Bit 5/4 = 1/0: signal evaluation per period, 4x with speed calculation over the complete pulse.  
Bit 5/4 = 0/1: Signal evaluation per period, 1x.  
Bit 5/4 = 1/1: Illegal setting.
- For bit 06:  
If the function is active, when dn/dt monitoring responds, the speed actual value is internally frozen for a time equivalent to two current controller sampling times. The rotor position continues to be integrated. The actual value is then re-enabled after this time has expired.
- For bit 07:  
When the bit is not set, the incorrect pulses that have occurred up until now are accumulated in p4688.  
When the bit is not set, p4688 indicates the incorrect pulses that have still not been corrected.
- For bit 11:  
If the bit is set, the Sensor Module checks within a certain time grid whether the fault cause is still present. This enables the Sensor Module to switch from the fault state to the operating state and provide valid actual values automatically. The faults are displayed until the user acknowledges them.
- For bit 12:  
Additional fault messages can be activated for extended fault diagnostics.
- For bit 13:  
When the bit is set, for an incremental encoder with zero mark, the absolute value in Gn\_XIST2 can be requested via Gn\_STW.13. The absolute value is only valid after passing the zero mark.
- For bit 26:  
Track monitoring is deactivated for the square-wave encoders when the bit is set, even if the monitoring function is selected in p0405.2.
- For bit 28:  
Monitoring of the difference between incremental and absolute position in the case of linear encoders.
- For bit 29:  
When the bit is set, the EnDat encoder is initialized under a certain speed and, therefore, with high accuracy. If initialization at a higher speed is requested, fault F31151, F32151, or F33151 is output.
- For bit 31:  
When monitoring is active, the levels of the individual track signals and the corresponding inverted track signals are monitored separately.

<b>p0437[0...n]</b>		<b>Sensor Module configuration extended / SM config ext</b>			
ENC (Lin_enc)	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0011 0000 0000 0000 0000 1000 0000 0000 bin		
<b>Description:</b>	Sets the extended configuration of the Sensor Module.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Data logger	Yes	No	-
	01	Zero mark edge detection	Yes	No	-
	02	Correction position actual value XIST1	Yes	No	-
	04	Edge evaluation bit 0	Yes	No	-
	05	Edge evaluation bit 1	Yes	No	-
	06	Freeze the speed actual value for dn/dt errors	Yes	No	-
	07	Do not accumulate the number of incorrect pulses	Yes	No	-
	11	Fault handling after PROFIdrive	Yes	No	-
	12	Activate additional messages	Yes	No	-
	13	Support absolute position for incremental encoder	Yes	No	4750
	25	Deselect monitoring multiturn representation in Gx_XIST2	Yes	No	-
	26	Deselect track monitoring	Yes	No	-
	28	EnDat linear encoder monitoring incremental/absolute	Yes	No	-
	29	EnDat encoder initialization with high accuracy	Yes	No	-
	31	Analog unipolar track monitoring	Yes	No	-
<b>Dependency:</b>	Refer to: p0430, r0459				
<b>Note:</b>	A value of zero is displayed if an encoder is not present.				
	For bit 00:				
	When the data logger (trace) is activated, in the case of a fault, data before and after the event are recorded (traced) and saved in files on the non-volatile memory medium. Experts can then evaluate this data.				
	For bit 01:				
	If bit = 0, the zero mark is evaluated by ANDing tracks A and B and the zero mark.				
	For bit = 1, the zero mark is evaluated depending on the direction detected. For a positive direction, the positive edge of the zero mark is considered and for a negative direction, the negative edge of the zero mark.				
	For bit 02:				
	If the bit is set, in the event of a deviation less than the tolerance window for the zero mark (p4681, p4682), the pulses per revolution are corrected. If the bit is not set, encoder fault F3x131 is triggered.				
	For bits 05, 04:				
	Bit 5/4 = 0/0: Signal evaluation per period, 4x.				
	Bit 5/4 = 1/0: Signal evaluation per period, 4x.				
	Bit 5/4 = 0/1: Signal evaluation per period, 1x.				
	Bit 5/4 = 1/1: Illegal setting.				
	For bit 06:				
	If the function is active, when dn/dt monitoring responds, the velocity actual value is internally frozen for a time equivalent to two current controller sampling times. The rotor position continues to be integrated. The actual value is then re-enabled after this time has expired.				
	For bit 07:				
	When the bit is not set, the incorrect pulses that have occurred up until now are accumulated in p4688.				
	When the bit is not set, p4688 indicates the incorrect pulses that have still not been corrected.				

## 2 Parameters

### 2.2 List of parameters

For bit 29:

When the bit is set, the EnDat encoder is initialized under a certain velocity and, therefore, with high accuracy. If initialization at a higher velocity is requested, fault F31151, F32151, or F33151 is output.

For bit 31:

When monitoring is active, the levels of the individual track signals and the corresponding inverted track signals are monitored separately.

<b>p0438[0...n]</b>	<b>Squarewave encoder filter time / Enc t_filt</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	100.00 [µs]	0.64 [µs]
<b>Description:</b>	Sets the filter time for a squarewave encoder. The hardware of the squarewave encoder only supports the following values: 0: No filtering 0.04 µs 0.64 µs 2.56 µs 10.24 µs 20.48 µs		
<b>Dependency:</b>	Refer to: r0452		
<b>Notice:</b>	If the filter time is too long, the track signals A/B/R may be suppressed and the appropriate messages output.		
<b>Note:</b>	The most suitable filter time depends on the number of pulses and maximum speed of the square-wave encoder. The filter time is automatically corrected to the next value when entering a non-specified value. In this case, no message is output. The effective filter time is displayed in r0452.		
<b>p0439[0...n]</b>	<b>Encoder ramp-up time / Enc ramp-up time</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	65535 [ms]	0 [ms]
<b>Description:</b>	Sets the ramp-up time for the encoder. The encoder supplies stable track signals once this time has elapsed.		
<b>Notice:</b>	This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400).		
<b>p0440[0...n]</b>	<b>Copy encoder serial number / Copy enc ser_no</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Copies the actual serial number of the encoder belonging to this Encoder Data Set (EDS) to p0441 ... p0445. Example: For p0440[0] = 1, the serial number of the encoder belonging EDS0 is copied to p0441[0] ... p0445[0].		
<b>Value:</b>	0: No action 1: Transfer serial number		
<b>Dependency:</b>	Refer to: p0441, p0442, p0443, p0444, p0445, r0460, r0461, r0462, r0463, r0464, p1990		

**Note:** For encoders with serial number, encoder replacement is monitored in order to request angular commutation calibration (adjustment) for motor encoders and absolute calibration for direct measuring systems with absolute value data. The serial number, which from then onwards is used for monitoring purposes, can be transferred using p0440. In the following cases, copying is automatically started in the following cases:

- 1.) When commissioning 1FT6, 1FK6, 1FK7 motors.
- 2.) When writing into p0431.
- 3.) For p1990 = 1.

p0440 is automatically set to 0 when the copying has been completed.  
In order to permanently accept the copied values, it is necessary to save in a non-volatile fashion (p0977).

---

### p0441[0...n] Encoder commissioning serial number part 1 / Enc comm ser\_no 1

VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex

**Description:** Serial number part 1 of the encoder for the commissioning.

**Dependency:** Refer to: p0440, p0442, p0443, p0444, p0445, r0460, r0461, r0462, r0463, r0464

**Note:** A value of zero is displayed if an encoder is not present.

---

### p0442[0...n] Encoder commissioning serial number part 2 / Enc comm ser\_no 2

VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex

**Description:** Serial number part 2 of the encoder for the commissioning.

**Dependency:** Refer to: p0440, p0441, p0443, p0444, p0445, r0460, r0461, r0462, r0463, r0464

**Note:** A value of zero is displayed if an encoder is not present.

---

### p0443[0...n] Encoder commissioning serial number part 3 / Enc comm ser\_no 3

VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex

**Description:** Serial number part 3 of the encoder for the commissioning.

**Dependency:** Refer to: p0440, p0441, p0442, p0444, p0445, r0460, r0461, r0462, r0463, r0464

**Note:** A value of zero is displayed if an encoder is not present.

---

### p0444[0...n] Encoder commissioning serial number part 4 / Enc comm ser\_no 4

VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex

**Description:** Serial number part 4 of the encoder for the commissioning.

**Dependency:** Refer to: p0440, p0441, p0442, p0443, p0445, r0460, r0461, r0462, r0463, r0464

**Note:** A value of zero is displayed if an encoder is not present.

## 2 Parameters

### 2.2 List of parameters

<b>p0445[0...n]</b>	<b>Encoder commissioning serial number part 5 / Enc comm ser_no 5</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Serial number part 5 of the encoder for the commissioning.		
<b>Dependency:</b>	Refer to: p0440, p0441, p0442, p0443, p0444, r0460, r0461, r0462, r0463, r0464		
<b>Note:</b>	A value of zero is displayed if an encoder is not present.		
<b>p0446[0...n]</b>	<b>Encoder SSI number of bits before the absolute value / Enc SSI bit before</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Sets the number of bits before the absolute value in the SSI protocol.		
<b>Notice:</b>	This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
<b>Note:</b>	For example, error bit, alarm bit or parity bit can be positioned at these bits.		
<b>p0447[0...n]</b>	<b>Encoder SSI number of bits absolute value / Enc SSI bit val</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	25
<b>Description:</b>	Sets the number of bits for the absolute value in the SSI protocol.		
<b>Notice:</b>	This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
<b>p0448[0...n]</b>	<b>Encoder SSI number of bits after the absolute value / Enc SSI bit after</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Sets the number of bits after the absolute value in the SSI protocol.		
<b>Notice:</b>	This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
<b>Note:</b>	For example, error bit, alarm bit or parity bit can be positioned at these bits.		

<b>p0449[0...n]</b>	<b>Encoder SSI number of bits filler bits / Enc SSI fill bits</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	1
<b>Description:</b>	Sets the number of filler bits for double absolute value transfer in the SSI protocol.		
<b>Dependency:</b>	Refer to: p0429		
<b>Notice:</b>	This parameter is automatically preassigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.		
<b>Note:</b>	This parameter is only of significance for p0429.2 = 1.		
<b>r0451[0...2]</b>	<b>Commutation angle factor / Enc commut_factor</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4710
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the relationship between the electrical and mechanical pole positions.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Note:</b>	A value of zero is displayed if an encoder is not present.		
<b>r0452[0...2]</b>	<b>Squarewave encoder filter time display / Enc t_filt displ</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [µs]	- [µs]	- [µs]
<b>Description:</b>	Displays the effective filter time for a squarewave encoder. The filter time is set using p0438.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: p0438		
<b>Note:</b>	A value of zero is displayed if an encoder is not present.		
<b>r0452</b>	<b>Squarewave encoder filter time display / Enc t_filt displ</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [µs]	- [µs]	- [µs]
<b>Description:</b>	Displays the effective filter time for a squarewave encoder. The filter time is set using p0438.		
<b>Dependency:</b>	Refer to: p0438		
<b>Note:</b>	A value of zero is displayed if an encoder is not present.		

## 2 Parameters

### 2.2 List of parameters

---

#### p0453[0...n] Pulse encoder evaluation zero speed measuring time / Enc\_ev n\_0 t\_meas

VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.10 [ms]	10000.00 [ms]	1000.00 [ms]

**Description:** Sets the measuring time for evaluating zero speed.  
If no pulses are detected from track A/B during this time, a speed actual value of zero is output.

**Dependency:** Refer to: r0452

**Note:** This function is required for slow-running motors so that actual speeds close to zero can be output correctly.

---

#### r0455[0...2] Encoder configuration recognized / Enc\_config recog

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the detected encoder configuration.  
In this case, the encoder must automatically support the function (e.g. encoder with EnDat interface).

**Index:** [0] = Encoder 1  
[1] = Encoder 2  
[2] = Encoder 3

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Linear encoder	Yes	No	-
	01	Absolute encoder	Yes	No	-
	02	Multiturn encoder	Yes	No	-
	03	Track A/B sq-wave	Yes	No	-
	04	Track A/B sine	Yes	No	-
	05	Track C/D	Yes	No	-
	06	Hall sensor	Yes	No	-
	08	EnDat encoder	Yes	No	-
	09	SSI encoder	Yes	No	-
	10	DRIVE-CLiQ encoder	Yes	No	-
	11	Digital encoder	Yes	No	-
	12	Equidistant zero mark	Yes	No	-
	13	Irregular zero mark	Yes	No	-
	14	Distance-coded zero mark	Yes	No	-
	15	Commutation with zero mark (not ASM)	Yes	No	-
	16	Acceleration	Yes	No	-
	17	Track A/B analog	Yes	No	-
	20	Voltage level 5 V	Yes	No	-
	21	Voltage level 24 V	Yes	No	-
	22	Remote sense (only SMC30)	Yes	No	-
	23	Resolver excit	Yes	No	-

**Dependency:** Refer to: p0404

**Note:** ZM: Zero mark

This parameter is only used for diagnostics.  
A value of zero is displayed if an encoder is not present.  
For bit 20, 21 (voltage level 5 V, voltage level 24 V):  
The voltage level cannot be detected. Therefore, these bits are always set to 0.

<b>r0455</b>		<b>Encoder configuration recognized / Enc_config recog</b>			
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the detected encoder configuration. In this case, the encoder must automatically support the function (e.g. encoder with EnDat interface).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Linear encoder	Yes	No	-
	01	Absolute encoder	Yes	No	-
	02	Multiturn encoder	Yes	No	-
	03	Track A/B sq-wave	Yes	No	-
	04	Track A/B sine	Yes	No	-
	05	Track C/D	Yes	No	-
	06	Hall sensor	Yes	No	-
	08	EnDat encoder	Yes	No	-
	09	SSI encoder	Yes	No	-
	10	DRIVE-CLiQ encoder	Yes	No	-
	11	Digital encoder	Yes	No	-
	12	Equidistant zero mark	Yes	No	-
	13	Irregular zero mark	Yes	No	-
	14	Distance-coded zero mark	Yes	No	-
	15	Commutation with zero mark (not ASM)	Yes	No	-
	16	Acceleration	Yes	No	-
	17	Track A/B analog	Yes	No	-
	20	Voltage level 5 V	Yes	No	-
	21	Voltage level 24 V	Yes	No	-
	22	Remote sense (only SMC30)	Yes	No	-
	23	Resolver excit	Yes	No	-
<b>Dependency:</b>	Refer to: p0404				
<b>Note:</b>	ZM: Zero mark This parameter is only used for diagnostics. A value of zero is displayed if an encoder is not present. For bit 20, 21 (voltage level 5 V, voltage level 24 V): The voltage level cannot be detected. Therefore, these bits are always set to 0.				

<b>r0456[0...2]</b>		<b>Encoder configuration supported / Enc_config supp</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the encoder configuration supported by the Sensor Module.				
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Linear encoder	Yes	No	-
	01	Absolute encoder	Yes	No	-
	02	Multiturn encoder	Yes	No	-
	03	Track A/B sq-wave	Yes	No	-
	04	Track A/B sine	Yes	No	-
	05	Track C/D	Yes	No	-
	06	Hall sensor	Yes	No	-
	08	EnDat encoder	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

09	SSI encoder	Yes	No	-
10	DRIVE-CLiQ encoder	Yes	No	-
11	Digital encoder	Yes	No	-
12	Equidistant zero mark	Yes	No	-
13	Irregular zero mark	Yes	No	-
14	Distance-coded zero mark	Yes	No	-
15	Commutation with zero mark (not ASM)	Yes	No	-
16	Acceleration	Yes	No	-
17	Track A/B analog	Yes	No	-
20	Voltage level 5 V	Yes	No	-
21	Voltage level 24 V	Yes	No	-
22	Remote sense (only SMC30)	Yes	No	-
23	Resolver excit	Yes	No	-

**Dependency:** Refer to: p0404

**Note:** ZM: Zero mark

This parameter is only used for diagnostics.

A value of zero is displayed if an encoder is not present.

### r0456 Encoder configuration supported / Enc\_config supp

ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the encoder configuration supported by the Sensor Module.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Linear encoder	Yes	No	-
	01	Absolute encoder	Yes	No	-
	02	Multiturn encoder	Yes	No	-
	03	Track A/B sq-wave	Yes	No	-
	04	Track A/B sine	Yes	No	-
	05	Track C/D	Yes	No	-
	06	Hall sensor	Yes	No	-
	08	EnDat encoder	Yes	No	-
	09	SSI encoder	Yes	No	-
	10	DRIVE-CLiQ encoder	Yes	No	-
	11	Digital encoder	Yes	No	-
	12	Equidistant zero mark	Yes	No	-
	13	Irregular zero mark	Yes	No	-
	14	Distance-coded zero mark	Yes	No	-
	15	Commutation with zero mark (not ASM)	Yes	No	-
	16	Acceleration	Yes	No	-
	17	Track A/B analog	Yes	No	-
	20	Voltage level 5 V	Yes	No	-
	21	Voltage level 24 V	Yes	No	-
	22	Remote sense (only SMC30)	Yes	No	-
	23	Resolver excit	Yes	No	-

**Dependency:** Refer to: p0404

**Note:** ZM: Zero mark

This parameter is only used for diagnostics.

A value of zero is displayed if an encoder is not present.

<b>r0458[0...2] Sensor Module properties / SM properties</b>					
<b>VECTOR_G</b>	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4704		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Sets the Sensor Module configuration.				
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Encoder data available	Yes	No	-
	01	Motor data available	Yes	No	-
	02	Temperature sensor connection available	Yes	No	-
	03	Connection for PTC for motor with DRIVE-CLiQ also available	Yes	No	-
	04	Module temperature available	Yes	No	-
	05	Absolute encoder p0408/p0421 no power of 2	Yes	No	-
	06	Sensor Module permits parking/unparking	Yes	No	-
	07	Hall sensor can be combined with actual value inversion	Yes	No	-
	08	Evaluation through several temperature channels possible	Yes	No	-
	09	Encoder fault and its associated information available	Yes	No	-
	10	Speed diagnostics in the Sensor Module	Yes	No	-
	11	Configuring without park state possible	Yes	No	-
	12	Extended functions available	Yes	No	-
	13	Extended encoder fault handling	Yes	No	-
	14	Extended singleturn/multiturn information available	Yes	No	-
	15	Evaluation function reserve	Yes	No	-
	16	Pole position identification	Yes	No	-
	17	Burst oversampling	Yes	No	-
	18	Continuous oversampling	Yes	No	-
	19	Safety position actual value sensing	Yes	No	-
	20	Extended speed calculation being used (only SMC30)	Yes	No	-
	21	Zero mark tolerance	Yes	No	-
	22	Rot pos adapt	Yes	No	-
	23	Commutation with zero mark can be de-selected	Yes	No	-
	24	Commutation with selected zero mark	Yes	No	-
	25	Disconnection of encoder power supply on parking supported	Yes	No	-
	26	Parking with temperature evaluation	Yes	No	-
	27	SSI position value extrapolation	Yes	No	-
	28	Cubic correction	Yes	No	-
	29	Phase correction	Yes	No	-
	30	Amplitude correction	Yes	No	-
	31	Offset correction	Yes	No	-
<b>Dependency:</b>	Refer to: p0437, p0600, p0601				
<b>Note:</b>	A value of zero is displayed if an encoder is not present. For bit 11: When the property is set, the following parameters can be changed without the actual value in the encoder interface becoming invalid (state r0481.14 = 1 "parking encoder active"): p0314, p0315, p0430, p0431, p0441, p0442, p0443, p0444, p0445				

For bit 12:

The extended functions can be configured using p0437.

For bit 13:

Encoder faults can be acknowledged via Gn\_STW.15.

For bit 14:

Only for internal Siemens use.

For bit 23:

When the property is set, commutation with zero mark can be de-selected using p0430.23.

For bit 24:

If the property is set, commutation to the selected zero mark can be carried out.

**r0458**

**Sensor Module properties / SM properties**

ENC

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** 4704

**P-Group:** Encoder

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:**

Sets the Sensor Module configuration.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Encoder data available	Yes	No	-
01	Motor data available	Yes	No	-
02	Temperature sensor connection available	Yes	No	-
03	Connection for PTC for motor with DRIVE-CLiQ also available	Yes	No	-
04	Module temperature available	Yes	No	-
05	Absolute encoder p0408/p0421 no power of 2	Yes	No	-
06	Sensor Module permits parking/unparking	Yes	No	-
07	Hall sensor can be combined with actual value inversion	Yes	No	-
08	Evaluation through several temperature channels possible	Yes	No	-
09	Encoder fault and its associated information available	Yes	No	-
10	Speed diagnostics in the Sensor Module	Yes	No	-
11	Configuring without park state possible	Yes	No	-
12	Extended functions available	Yes	No	-
13	Extended encoder fault handling	Yes	No	-
14	Extended singleturn/multiturn information available	Yes	No	-
15	Evaluation function reserve	Yes	No	-
16	Pole position identification	Yes	No	-
17	Burst oversampling	Yes	No	-
18	Continuous oversampling	Yes	No	-
19	Safety position actual value sensing	Yes	No	-
20	Extended speed calculation being used (only SMC30)	Yes	No	-
21	Zero mark tolerance	Yes	No	-
22	Rot pos adapt	Yes	No	-
23	Commutation with zero mark can be de-selected	Yes	No	-
24	Commutation with selected zero mark	Yes	No	-
25	Disconnection of encoder power supply on parking supported	Yes	No	-
26	Parking with temperature evaluation	Yes	No	-
27	SSI position value extrapolation	Yes	No	-
28	Cubic correction	Yes	No	-
29	Phase correction	Yes	No	-
30	Amplitude correction	Yes	No	-
31	Offset correction	Yes	No	-

**Dependency:** Refer to: p0437, p0600, p0601

**Note:** A value of zero is displayed if an encoder is not present.

For bit 11:  
When the property is set, the following parameters can be changed without the actual value in the encoder interface becoming invalid (state r0481.14 = 1 "parking encoder active"):  
p0314, p0315, p0430, p0431, p0441, p0442, p0443, p0444, p0445

For bit 12:  
The extended functions can be configured using p0437.

For bit 13:  
Encoder faults can be acknowledged via Gn\_STW.15.

For bit 14:  
Only for internal Siemens use.

For bit 23:  
When the property is set, commutation with zero mark can be de-selected using p0430.23.

For bit 24:  
If the property is set, commutation to the selected zero mark can be carried out.

**r0458****Sensor Module properties / SM properties**

ENC (Lin_enc)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Sets the Sensor Module configuration.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Encoder data available	Yes	No	-
	01	Motor data available	Yes	No	-
	02	Temperature sensor connection available	Yes	No	-
	03	Connection for PTC for motor with DRIVE-CLiQ also available	Yes	No	-
	04	Module temperature available	Yes	No	-
	05	Absolute encoder p0408/p0421 no power of 2	Yes	No	-
	06	Sensor Module permits parking/unparking	Yes	No	-
	07	Hall sensor can be combined with actual value inversion	Yes	No	-
	08	Evaluation through several temperature channels possible	Yes	No	-
	09	Encoder fault and its associated information available	Yes	No	-
	10	Velocity diagnostics in the Sensor Module	Yes	No	-
	11	Configuring without park state possible	Yes	No	-
	12	Extended functions available	Yes	No	-
	13	Extended encoder fault handling	Yes	No	-
	14	Extended singleturn/multiturn information available	Yes	No	-
	15	Evaluation function reserve	Yes	No	-
	16	Pole position identification	Yes	No	-
	17	Burst oversampling	Yes	No	-
	18	Continuous oversampling	Yes	No	-
	19	Safety position actual value sensing	Yes	No	-
	20	Extended velocity calculation available (only SMC30)	Yes	No	-
	21	Zero mark tolerance	Yes	No	-
	22	Rot pos adapt	Yes	No	-
	23	Commutation with zero mark can be de-selected	Yes	No	-
	24	Commutation with selected zero mark	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

25	Disconnection of encoder power supply on parking supported	Yes	No	-
26	Parking with temperature evaluation	Yes	No	-
27	SSI position value extrapolation	Yes	No	-
28	Cubic correction	Yes	No	-
29	Phase correction	Yes	No	-
30	Amplitude correction	Yes	No	-
31	Offset correction	Yes	No	-

**Dependency:** Refer to: p0437, p0600, p0601

**Note:** A value of zero is displayed if an encoder is not present.

For bit 11:

When the property is set, the following parameters can be changed without the actual value in the encoder interface becoming invalid (state r0481.14 = 1 "parking encoder active"):

p0314, p0315, p0430, p0431, p0441, p0442, p0443, p0444, p0445

For bit 12:

The extended functions can be configured using p0437.

For bit 13:

Encoder faults can be acknowledged via Gn\_STW.15.

For bit 14:

Only for internal Siemens use.

For bit 23:

When the property is set, commutation with zero mark can be de-selected using p0430.23.

For bit 24:

If the property is set, commutation to the selected zero mark can be carried out.

#### r0459[0...2]

#### Sensor Module properties extended / SM prop ext

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the extended properties supported by the Sensor Module.

**Index:**

[0] = Encoder 1

[1] = Encoder 2

[2] = Encoder 3

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Data logger	Yes	No	-
01	Zero mark edge detection	Yes	No	-
02	Correction position actual value XIST1	Yes	No	-
04	Edge evaluation bit 0	Yes	No	-
05	Edge evaluation bit 1	Yes	No	-
06	Freeze the speed actual value for dn/dt errors	Yes	No	-
07	Accumulate uncorrected encoder pulses	Yes	No	-
09	Function p0426, p0439 supported	Yes	No	-
10	Pulse/direction interface	Yes	No	-
11	Fault handling after PROFIdrive	Yes	No	-
12	Activate additional messages	Yes	No	-
13	Absolute position for incremental encoder supported	Yes	No	-
14	Spindle functionality	Yes	No	-
15	Additional temperature sensor available	Yes	No	-
16	Internal encoder temperature available	Yes	No	-
17	Extended multiturn resolution	Yes	No	-
18	PT1000 temperature sensor evaluation	Yes	No	-
23	Commutation with 180°	Yes	No	-
24	Multiturn via battery	Yes	No	-

25	Deselect monitoring multiturn representation in Gx_XIST2	Yes	No	-
26	Track monitoring de-selection	Yes	No	-
28	EnDat linear encoder monitoring incremental/absolute	Yes	No	-
29	EnDat encoder initialization with high accuracy	Yes	No	-
31	Analog unipolar track monitoring	Yes	No	-

**Dependency:**

Refer to: p0437

**Note:**

A value of zero is displayed if an encoder is not present.

For bit 09:

Parameter p0426 or p0439 has been modified. These functions are not supported by the connected Sensor Module.

**r0459****Sensor Module properties extended / SM prop ext**

ENC

**Can be changed:** -**Calculated:** -**Access level:** 3**Data type:** Unsigned32**Dyn. index:** -**Func. diagram:** -**P-Group:** Encoder**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Displays the extended properties supported by the Sensor Module.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Data logger	Yes	No	-
01	Zero mark edge detection	Yes	No	-
02	Correction position actual value XIST1	Yes	No	-
04	Edge evaluation bit 0	Yes	No	-
05	Edge evaluation bit 1	Yes	No	-
06	Freeze the speed actual value for dn/dt errors	Yes	No	-
07	Accumulate uncorrected encoder pulses	Yes	No	-
09	Function p0426, p0439 supported	Yes	No	-
10	Pulse/direction interface	Yes	No	-
11	Fault handling after PROFIdrive	Yes	No	-
12	Activate additional messages	Yes	No	-
13	Absolute position for incremental encoder supported	Yes	No	-
14	Spindle functionality	Yes	No	-
15	Additional temperature sensor available	Yes	No	-
16	Internal encoder temperature available	Yes	No	-
17	Extended multiturn resolution	Yes	No	-
18	PT1000 temperature sensor evaluation	Yes	No	-
23	Commutation with 180°	Yes	No	-
24	Multiturn via battery	Yes	No	-
25	Deselect monitoring multiturn representation in Gx_XIST2	Yes	No	-
26	Track monitoring de-selection	Yes	No	-
28	EnDat linear encoder monitoring incremental/absolute	Yes	No	-
29	EnDat encoder initialization with high accuracy	Yes	No	-
31	Analog unipolar track monitoring	Yes	No	-

**Dependency:**

Refer to: p0437

**Note:**

A value of zero is displayed if an encoder is not present.

For bit 09:

Parameter p0426 or p0439 has been modified. These functions are not supported by the connected Sensor Module.

<b>r0459</b>	<b>Sensor Module properties extended / SM prop ext</b>				
ENC (Lin_enc)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the extended properties supported by the Sensor Module.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Data logger	Yes	No	-
	01	Zero mark edge detection	Yes	No	-
	02	Correction position actual value XIST1	Yes	No	-
	04	Edge evaluation bit 0	Yes	No	-
	05	Edge evaluation bit 1	Yes	No	-
	06	Freeze actual velocity for dn/dt errors	Yes	No	-
	07	Accumulate uncorrected encoder pulses	Yes	No	-
	09	Function p0426, p0439 supported	Yes	No	-
	10	Pulse/direction interface	Yes	No	-
	11	Fault handling after PROFIdrive	Yes	No	-
	12	Activate additional messages	Yes	No	-
	13	Absolute position for incremental encoder supported	Yes	No	-
	14	Spindle functionality	Yes	No	-
	15	Additional temperature sensor available	Yes	No	-
	16	Internal encoder temperature available	Yes	No	-
	17	Extended multiturn resolution	Yes	No	-
	18	PT1000 temperature sensor evaluation	Yes	No	-
	23	Commutation with 180°	Yes	No	-
	24	Multiturn via battery	Yes	No	-
	25	Deselect monitoring multiturn representation in Gx_XIST2	Yes	No	-
	26	Track monitoring de-selection	Yes	No	-
	28	EnDat linear encoder monitoring incremental/absolute	Yes	No	-
	29	EnDat encoder initialization with high accuracy	Yes	No	-
	31	Analog unipolar track monitoring	Yes	No	-
<b>Dependency:</b>	Refer to: p0437				
<b>Note:</b>	A value of zero is displayed if an encoder is not present. For bit 09: Parameter p0426 or p0439 has been modified. These functions are not supported by the connected Sensor Module.				

<b>r0460[0...2]</b>	<b>Encoder serial number part 1 / Enc ser_no 1</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the actual serial number part 1 of the appropriate encoder.			
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3			
<b>Dependency:</b>	Refer to: p0441, p0442, p0443, p0444, p0445, r0461, r0462, r0463, r0464			

<b>r0460</b>	<b>Encoder serial number part 1 / Enc ser_no 1</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the actual serial number part 1 of the appropriate encoder.		
<b>Dependency:</b>	Refer to: p0441, p0442, p0443, p0444, p0445, r0461, r0462, r0463, r0464		
<b>r0461[0...2]</b>	<b>Encoder serial number part 2 / Enc ser_no 2</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the actual serial number part 2 of the appropriate encoder.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: p0441, p0442, p0443, p0444, p0445, r0460, r0462, r0463, r0464		
<b>r0461</b>	<b>Encoder serial number part 2 / Enc ser_no 2</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the actual serial number part 2 of the appropriate encoder.		
<b>Dependency:</b>	Refer to: p0441, p0442, p0443, p0444, p0445, r0460, r0462, r0463, r0464		
<b>r0462[0...2]</b>	<b>Encoder serial number part 3 / Enc ser_no 3</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the actual serial number part 3 of the appropriate encoder.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: p0441, p0442, p0443, p0444, p0445, r0460, r0461, r0463, r0464		

## 2 Parameters

### 2.2 List of parameters

---

<b>r0462</b>	<b>Encoder serial number part 3 / Enc ser_no 3</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the actual serial number part 3 of the appropriate encoder.		
<b>Dependency:</b>	Refer to: p0441, p0442, p0443, p0444, p0445, r0460, r0461, r0463, r0464		
<hr/>			
<b>r0463[0...2]</b>	<b>Encoder serial number part 4 / Enc ser_no 4</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the actual serial number part 4 of the appropriate encoder.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: p0441, p0442, p0443, p0444, p0445, r0460, r0461, r0462, r0464		
<hr/>			
<b>r0463</b>	<b>Encoder serial number part 4 / Enc ser_no 4</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the actual serial number part 4 of the appropriate encoder.		
<b>Dependency:</b>	Refer to: p0441, p0442, p0443, p0444, p0445, r0460, r0461, r0462, r0464		
<hr/>			
<b>r0464[0...2]</b>	<b>Encoder serial number part 5 / Enc ser_no 5</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the actual serial number part 5 of the appropriate encoder.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: p0441, p0442, p0443, p0444, p0445, r0460, r0461, r0462, r0463		

<b>r0464</b>	<b>Encoder serial number part 5 / Enc ser_no 5</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the actual serial number part 5 of the appropriate encoder.		
<b>Dependency:</b>	Refer to: p0441, p0442, p0443, p0444, p0445, r0460, r0461, r0462, r0463		
<b>r0465[0...27]</b>	<b>Encoder 1 identification number/serial number / Enc1 ID_no/Ser_no</b>		
VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the identification/serial number of encoder 1. Index 0 = first character of the identification number ... Index x = 20 hex (blank space) --> separation between the identification number and serial number Index x + 1 = 2F hex (slash) --> separation between the identification number and serial number Index x + 2 = 20 hex (blank space) --> separation between the identification number and serial number Index x + 3 = first character of the serial number ... Index y with contents = last character of the serial number		
<b>Dependency:</b>	Refer to: r0460, r0461, r0462, r0463, r0464		
<b>Notice:</b>	An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.		
<b>Note:</b>	The individual characters of the identification number/serial number are available coded as ASCII characters.		
<b>r0466[0...27]</b>	<b>Encoder 2 identification number/serial number / Enc2 ID_no/Ser_no</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the identification/serial number of encoder 2. Index 0 = first character of the identification number ... Index x = 20 hex (blank space) --> separation between the identification number and serial number Index x + 1 = 2F hex (slash) --> separation between the identification number and serial number Index x + 2 = 20 hex (blank space) --> separation between the identification number and serial number Index x + 3 = first character of the serial number ... Index y with contents = last character of the serial number		
<b>Dependency:</b>	Refer to: r0460, r0461, r0462, r0463, r0464		
<b>Notice:</b>	An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.		
<b>Note:</b>	The individual characters of the identification number/serial number are available coded as ASCII characters.		

<b>r0467[0...27]</b>	<b>Encoder 3 identification number/serial number / Enc3 ID_no/Ser_no</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	<p>Displays the identification/serial number of encoder 3.                      Index 0 = first character of the identification number                      ...                      Index x = 20 hex (blank) --&gt; separation between the identification number of serial number                      Index x + 1 = 2F hex (slash) --&gt; separation between the identification number of serial number                      Index x + 2 = 20 hex (blank) --&gt; separation between the identification number of serial number                      Index x + 3 = first character of the serial number                      ...                      Index y with contents = last character of the serial number</p>		
<b>Dependency:</b>	Refer to: r0460, r0461, r0462, r0463, r0464		
<b>Notice:</b>	An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.		
<b>Note:</b>	The individual characters of the identification number/serial number are available coded as ASCII characters.		
<b>r0469[0...2]</b>	<b>Absolute encoder linear measuring step / Enc lin meas step</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [nm]	- [nm]	- [nm]
<b>Description:</b>	Displays the resolution of the absolute position for a linear absolute encoder.		
<b>Index:</b>	<p>[0] = Encoder 1                      [1] = Encoder 2                      [2] = Encoder 3</p>		
<b>Dependency:</b>	Refer to: p0422, p9514		
<b>r0469</b>	<b>Absolute encoder linear measuring step / Enc lin meas step</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [nm]	- [nm]	- [nm]
<b>Description:</b>	Displays the resolution of the absolute position for a linear absolute encoder.		
<b>Dependency:</b>	Refer to: p0422, p9514		

<b>r0470[0...2]</b>	<b>Redundant coarse position value valid bits / Valid bits</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the valid bits of the redundant coarse position value.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: p9323, p9523		
<b>r0470</b>	<b>Redundant coarse position value valid bits / Valid bits</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the valid bits of the redundant coarse position value.		
<b>Dependency:</b>	Refer to: p9323, p9523		
<b>r0471[0...2]</b>	<b>Redundant coarse position value fine resolution bits / Fine bit</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of valid bits for the fine resolution of the redundant coarse position value.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: p9324, p9524		
<b>r0471</b>	<b>Redundant coarse position value fine resolution bits / Fine bit</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of valid bits for the fine resolution of the redundant coarse position value.		
<b>Dependency:</b>	Refer to: p9324, p9524		

<b>r0472[0...2]</b>	<b>Redundant coarse position value relevant bits / Relevant bits</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of relevant bits for the redundant coarse position value.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>r0472</b>	<b>Redundant coarse position value relevant bits / Relevant bits</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of relevant bits for the redundant coarse position value.		
<b>r0473[0...2]</b>	<b>Non safety-relevant measuring steps position value pos1 / nsrPos1</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the non safety-relevant measuring steps of POS1.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: p0416, p9513		
<b>r0473</b>	<b>Non safety-relevant measuring steps position value pos1 / nsrPos1</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the non safety-relevant measuring steps of POS1.		
<b>Dependency:</b>	Refer to: p0416, p9513		

<b>r0474[0...2]</b>		<b>Redundant coarse position value configuration / Red pos config</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the encoder configuration for the redundant coarse position value.				
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Incrementer	Yes	No	-
	01	Encoder CRC least significant byte first	Yes	No	-
	02	Redundant coarse position val. most significant bit left-aligned	Yes	No	-
	04	Binary comparison not possible	Yes	No	-
	05	Single-channel encoder	Yes	No	-
<b>Dependency:</b>	Refer to: p9315, p9515				

<b>r0474</b>		<b>Redundant coarse position value configuration / Red pos config</b>			
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the encoder configuration for the redundant coarse position value.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Incrementer	Yes	No	-
	01	Encoder CRC least significant byte first	Yes	No	-
	02	Redundant coarse position val. most significant bit left-aligned	Yes	No	-
	04	Binary comparison not possible	Yes	No	-
	05	Single-channel encoder	Yes	No	-
<b>Dependency:</b>	Refer to: p9315, p9515				

<b>r0475[0...2]</b>		<b>Gx_XIST1 coarse position safe most significant bit / Gx_XIST1 safe MSB</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the bit number for the safe most significant bit (MSB) of the Gx_XIST1 coarse position.			
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3			
<b>Note:</b>	MSB: Most Significant Bit			

## 2 Parameters

### 2.2 List of parameters

<b>r0475</b>	<b>Gx_XIST1 coarse position safe most significant bit / Gx_XIST1 safe MSB</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the bit number for the safe most significant bit (MSB) of the Gx_XIST1 coarse position.		
<b>Note:</b>	MSB: Most Significant Bit		
<b>r0477[0...2]</b>	<b>CO: Measuring gear position difference / Meas gear pos diff</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the position difference before the measuring gear between switching off and switching on.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: F31501, F32501, F33501		
<b>Note:</b>	The increments are displayed in the format the same as r0483. The position difference should be read in encoder increments.		
<b>r0477</b>	<b>CO: Measuring gear position difference / Meas gear pos diff</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the position difference before the measuring gear between switching off and switching on.		
<b>Dependency:</b>	Refer to: F31501, F32501, F33501		
<b>Note:</b>	The increments are displayed in the format the same as r0483. The position difference should be read in encoder increments.		
<b>r0479[0...2]</b>	<b>CO: Diagnostics encoder position actual value Gn_XIST1 / Diag Gn_XIST1</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Display and connector output for the encoder actual position value Gn_XIST1 according to PROFIdrive for diagnostics. In contrast to r0482, the value is updated in each DRIVE-CLiQ basic clock cycle and displayed with sign.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		

**Caution:**

Following ramping-up or after a data set changeover, the new value is present at connector inputs which are interconnected to connector output r0479 and under certain circumstances take 100 ms to become available.

Reason:

These interconnections are updated in the background, unlike interconnections involving other connector outputs (e.g. CO: r0482).

The value is immediately available when non-cyclically reading r0479 (e.g. via the expert list).

**r0479****CO: Diagnostics encoder position actual value Gn\_XIST1 / Diag Gn\_XIST1**

ENC

**Can be changed:** -**Calculated:** -**Access level:** 3**Data type:** Integer32**Dyn. index:** -**Func. diagram:** 4704**P-Group:** Encoder**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Display and connector output for the encoder actual position value Gn\_XIST1 according to PROFIdrive for diagnostics.

In contrast to r0482, the value is updated in each DRIVE-CLiQ basic clock cycle and displayed with sign.

**Caution:**

Following ramping-up or after a data set changeover, the new value is present at connector inputs which are interconnected to connector output r0479 and under certain circumstances take 100 ms to become available.

Reason:

These interconnections are updated in the background, unlike interconnections involving other connector outputs (e.g. CO: r0482).

The value is immediately available when non-cyclically reading r0479 (e.g. via the expert list).

**p0480[0...2]****CI: Encoder control word Gn\_STW signal source / Enc Gn\_STW S\_src**

VECTOR\_G

**Can be changed:** T**Calculated:** -**Access level:** 3**Data type:** Unsigned32 / Integer16**Dyn. index:** -**Func. diagram:** 4700, 4720, 4750**P-Group:** Encoder**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

0

**Description:**

Sets the signal source for the encoder control word Gn\_STW according to PROFIdrive.

**Index:**

[0] = Encoder 1

[1] = Encoder 2

[2] = Encoder 3

**Note:**

When the function module "basic positioner" (r0108.4 = 1) is activated, the following BICO interconnection is established:

CI: p0480[0] = r2520[0], CI: p0480[1] = r2520[1] and CI: p0480[2] = r2520[2]

**p0480****CI: Encoder control word Gn\_STW signal source / Enc Gn\_STW S\_src**

ENC

**Can be changed:** T**Calculated:** -**Access level:** 3**Data type:** Unsigned32 / Integer16**Dyn. index:** -**Func. diagram:** 4700, 4720, 4750**P-Group:** Encoder**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

0

**Description:**

Sets the signal source for the encoder control word Gn\_STW according to PROFIdrive.

**Note:**

When the function module "basic positioner" (r0108.4 = 1) is activated, the following BICO interconnection is established:

CI: p0480[0] = r2520[0], CI: p0480[1] = r2520[1] and CI: p0480[2] = r2520[2]

<b>r0481[0...2]</b>	<b>CO: Encoder status word Gn_ZSW / Enc Gn_ZSW</b>				
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4010, 4704, 4730, 4750		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the encoder status word Gn_ZSW according to PROFIdrive.				
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Function 1 active	Yes	No	-
	01	Function 2 active	Yes	No	-
	02	Function 3 active	Yes	No	-
	03	Function 4 active	Yes	No	-
	04	Value 1	Displayed in r0483	Not present	-
	05	Value 2	Displayed in r0483	Not present	-
	06	Value 3	Displayed in r0483	Not present	-
	07	Value 4	Displayed in r0483	Not present	-
	08	Measuring probe 1 deflected	Yes	No	-
	09	Measuring probe 2 deflected	Yes	No	-
	11	Encoder fault acknowledge active	Yes	No	9676
	13	Absolute value cyclically	Displayed in r0483	No	-
	14	Parking encoder active	Yes	No	-
	15	Encoder fault	Displayed in r0483	None	-
<b>Notice:</b>	Information on Gn_STW/Gn_ZSW can, e.g. be found in the following literature: SINAMICS S120 Function Manual Drive Functions				
<b>Note:</b>	For bit 14: Displays the acknowledgment for "activate parking encoder" (Gn_STW.14 = 1) or encoder position actual value (Gn_XIST1) invalid. For bit 14, 15: r0481.14 = 1 and r0481.15 = 0 can have one of the following causes: - the encoder is parked. - the encoder is deactivated. - the encoder is being commissioned. - no parameterized encoder available. - encoder data set is being changed over. r0481.14 = 1 and r0481.15 = 1 has the following significance: An encoder error has occurred and the encoder position actual value (Gn_XIST1) is invalid.				

<b>r0481</b>	<b>CO: Encoder status word Gn_ZSW / Enc Gn_ZSW</b>				
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4704, 4730, 4750		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the encoder status word Gn_ZSW according to PROFIdrive.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Function 1 active	Yes	No	-
	01	Function 2 active	Yes	No	-
	02	Function 3 active	Yes	No	-
	03	Function 4 active	Yes	No	-

04	Value 1	Displayed in r0483	Not present	-
05	Value 2	Displayed in r0483	Not present	-
06	Value 3	Displayed in r0483	Not present	-
07	Value 4	Displayed in r0483	Not present	-
08	Measuring probe 1 deflected	Yes	No	-
09	Measuring probe 2 deflected	Yes	No	-
11	Encoder fault acknowledge active	Yes	No	9676
13	Absolute value cyclically	Displayed in r0483	No	-
14	Parking encoder active	Yes	No	-
15	Encoder fault	Displayed in r0483	None	-

**Notice:** Information on Gn\_STW/Gn\_ZSW can, e.g. be found in the following literature:  
SINAMICS S120 Function Manual Drive Functions

**Note:** For bit 14:  
Displays the acknowledgment for "activate parking encoder" (Gn\_STW.14 = 1) or encoder position actual value (Gn\_XIST1) invalid.

For bit 14, 15:

r0481.14 = 1 and r0481.15 = 0 can have one of the following causes:

- the encoder is parked.
- the encoder is deactivated.
- the encoder is being commissioned.
- no parameterized encoder available.
- encoder data set is being changed over.

r0481.14 = 1 and r0481.15 = 1 has the following significance:

An encoder error has occurred and the encoder position actual value (Gn\_XIST1) is invalid.

## r0482[0...2]

### CO: Encoder actual position value Gn\_XIST1 / Enc Gn\_XIST1

VECTOR\_G

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** 4700, 4702, 4704, 4735, 4740, 4750

**P-Group:** Encoder

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:**

Display and connector output for the encoder actual position value Gn\_XIST1 according to PROFIdrive.

**Index:**

[0] = Encoder 1

[1] = Encoder 2

[2] = Encoder 3

**Note:**

- this value is reset if necessary when the "parking encoder" (r0481.14) function is de-selected.
- in this value, the measuring gear (p0432, p0433) is only taken into account when the position tracking is activated (p0411.0 = 1).
- the update time for the position control (EPOS) corresponds to the position controller clock cycle p0115[4].
- the update time in isochronous operation corresponds to the bus cycle time r2064[1].
- the update time in isochronous operation and with position control (EPOS) corresponds to the position controller clock cycle p0115[4].
- the update time in non-isochronous operation or without position control (EPOS) comprises the following:  
Update time = 4 \* least common multiple (LCM) of all current controller clock cycles (p0115[0]) in the drive group (infeed + drives).  
The minimum update time is 1 ms.  
Example 1: infeed, servo  
Update time = 4 \* LCM(250 µs, 125 µs) = 4 \* 250 µs = 1 ms  
Example 2: infeed, servo, vector  
Update time = 4 \* LCM(250 µs, 125 µs, 500 µs) = 4 \* 500 µs = 2 ms

<b>r0482</b>	<b>CO: Encoder actual position value Gn_XIST1 / Enc Gn_XIST1</b>		
ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 4704, 4735, 4740, 4750
	<b>P-Group:</b> Encoder <b>Not for motor type:</b> - <b>Min</b>	<b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>
	-	-	-
<b>Description:</b>	Display and connector output for the encoder actual position value Gn_XIST1 according to PROFIdrive.		
<b>Note:</b>	<ul style="list-style-type: none"> <li>- this value is reset if necessary when the "parking encoder" (r0481.14) function is de-selected.</li> <li>- in this value, the measuring gear (p0432, p0433) is only taken into account when the position tracking is activated (p0411.0 = 1).</li> <li>- the update time for the position control (EPOS) corresponds to the position controller clock cycle p0115[4].</li> <li>- the update time in isochronous operation corresponds to the bus cycle time r2064[1].</li> <li>- the update time in isochronous operation and with position control (EPOS) corresponds to the position controller clock cycle p0115[4].</li> <li>- the update time in non-isochronous operation or without position control (EPOS) comprises the following: Update time = 4 * least common multiple (LCM) of all current controller clock cycles (p0115[0]) in the drive group (infeed + drives). The minimum update time is 1 ms. Example 1: infeed, servo Update time = 4 * LCM(250 µs, 125 µs) = 4 * 250 µs = 1 ms Example 2: infeed, servo, vector Update time = 4 * LCM(250 µs, 125 µs, 500 µs) = 4 * 500 µs = 2 ms</li> </ul>		
<b>r0483[0...2]</b>	<b>CO: Encoder actual position value Gn_XIST2 / Enc Gn_XIST2</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 4704, 4750
	<b>P-Group:</b> Encoder <b>Not for motor type:</b> - <b>Min</b>	<b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the encoder actual position value Gn_XIST2 according to PROFIdrive.		
<b>Recommendation:</b>	Possible causes: For Error code = 4097, 4098: Defective Control Unit hardware. For Error codes = 4099, 4100: Too many measuring pulses have occurred.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Notice:</b>	The encoder position actual value must be requested using the encoder control word Gn_STW.13.		
<b>Note:</b>	<ul style="list-style-type: none"> <li>- in this value, the measuring gear (p0432, p0433) is only taken into account when the position tracking is activated (p0411.0 = 1).</li> <li>- if GxZSW.15 = 1 (r0481), then an error code with the following significance is located in Gx_XIST2 (r0483): 1: Encoder fault. 2: Possible position shift in Gx_XIST1. 3: Encoder parking not possible. 4: Cancellation, reference block search (e.g. reference mark not available or input terminal for external zero mark not set). Zero mark is requested, however according to p0404.12/13/14 there is no zero mark (alarm A07565). 5: Cancellation, fetch reference value (e.g. illegal change from reference mark search to flying measurement). 6: Cancel flying measuring (e.g. input terminal for probe not set). 7: Cancellation, fetch measured value (e.g. illegal change from flying measurement to reference mark search). 8: Abort, absolute value transfer. 3841: Function not supported. 4097: Abort, reference mark search due to an initialization error.</li> </ul>		

4098: Abort, flying measurement due to an initialization error.

4099: Abort, reference mark search due to a measuring error.

4100: Abort, flying measurement due to a measuring error.

<b>r0483 CO: Encoder actual position value Gn_XIST2 / Enc Gn_XIST2</b>			
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4704, 4750
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the encoder actual position value Gn_XIST2 according to PROFIdrive.		
<b>Recommendation:</b>	Possible causes: For Error code = 4097, 4098: Defective Control Unit hardware. For Error codes = 4099, 4100: Too many measuring pulses have occurred.		
<b>Notice:</b>	The encoder position actual value must be requested using the encoder control word Gn_STW.13.		
<b>Note:</b>	- in this value, the measuring gear (p0432, p0433) is only taken into account when the position tracking is activated (p0411.0 = 1). - if GxZSW.15 = 1 (r0481), then an error code with the following significance is located in Gx_XIST2 (r0483): 1: Encoder fault. 2: Possible position shift in Gx_XIST1. 3: Encoder parking not possible. 4: Cancellation, reference block search (e.g. reference mark not available or input terminal for external zero mark not set). Zero mark is requested, however according to p0404.12/13/14 there is no zero mark (alarm A07565). 5: Cancellation, fetch reference value (e.g. illegal change from reference mark search to flying measurement). 6: Cancel flying measuring (e.g. input terminal for probe not set). 7: Cancellation, fetch measured value (e.g. illegal change from flying measurement to reference mark search). 8: Abort, absolute value transfer. 3841: Function not supported. 4097: Abort, reference mark search due to an initialization error. 4098: Abort, flying measurement due to an initialization error. 4099: Abort, reference mark search due to a measuring error. 4100: Abort, flying measurement due to a measuring error.		

<b>r0484[0...2] CO: Redundant coarse encoder position + CRC / Enc red pos+CRC</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the redundant coarse encoder position including CRC (Cyclic Redundancy Check). Upper 16 bits: CRC over the redundant coarse encoder position. Lower 16 bits: Redundant coarse encoder position. On an SMx Sensor Module, the encoder coarse position count direction is opposite to r0482 (encoder actual value Gn_XIST1). The value contains 2 bit fine resolution. With a DRIVE-CLiQ encoder, the encoder coarse position count direction is the same as r0482.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	The values are valid when the safety position actual value sensing is activated (p0430.19 = 1). Refer to: p0430		
<b>Note:</b>	This absolute value does not change, contrary to r0482, when de-selecting the function "parking axis".		

## 2 Parameters

### 2.2 List of parameters

<b>r0484</b>	<b>CO: Redundant coarse encoder position + CRC / Enc red pos+CRC</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the redundant coarse encoder position including CRC (Cyclic Redundancy Check). Upper 16 bits: CRC over the redundant coarse encoder position. Lower 16 bits: Redundant coarse encoder position. On an SMx Sensor Module, the encoder coarse position count direction is opposite to r0482 (encoder actual value Gn_XIST1). The value contains 2 bit fine resolution. With a DRIVE-CLiQ encoder, the encoder coarse position count direction is the same as r0482.		
<b>Dependency:</b>	The values are valid when the safety position actual value sensing is activated (p0430.19 = 1). Refer to: p0430		
<b>Note:</b>	This absolute value does not change, contrary to r0482, when de-selecting the function "parking axis".		
<b>r0485[0...2]</b>	<b>CO: Measuring gear encoder raw value incremental / Enc raw val incr</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the raw value of the incremental encoder actual value before the measuring gear.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>r0485</b>	<b>CO: Measuring gear encoder raw value incremental / Enc raw val incr</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the raw value of the incremental encoder actual value before the measuring gear.		
<b>r0486[0...2]</b>	<b>CO: Measuring gear encoder raw value absolute / Enc raw val abs</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the raw value of the absolute encoder actual value before the measuring gear.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		

<b>r0486</b>	<b>CO: Measuring gear encoder raw value absolute / Enc raw val abs</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the raw value of the absolute encoder actual value before the measuring gear.		

<b>r0487[0...2]</b>	<b>Diagnostic encoder control word Gn_STW / Enc Gn_STW</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4700, 4704, 4720, 4740
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the encoder control word Gn\_STW according to PROFIdrive for diagnostics.

**Index:**  
 [0] = Encoder 1  
 [1] = Encoder 2  
 [2] = Encoder 3

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Request function 1	Yes	No	-
	01	Request function 2	Yes	No	-
	02	Request function 3	Yes	No	-
	03	Request function 4	Yes	No	-
	04	Request command bit 0	Yes	No	-
	05	Request command bit 1	Yes	No	-
	06	Request command bit 2	Yes	No	-
	07	Flying measurement mode/search for reference mark	Flying measurement	Reference marks	-
	13	Request absolute value cyclic	Yes	No	-
	14	Request parking encoder	Yes	No	-
	15	Request acknowledge encoder fault	Yes	No	-

**Notice:** Information on Gn\_STW/Gn\_ZSW should be taken from the corresponding product documentation.

**Note:** The signal source for the encoder control word is set with p0480.

<b>r0487</b>	<b>Diagnostic encoder control word Gn_STW / Enc Gn_STW</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4700, 4704, 4720, 4740
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the encoder control word Gn\_STW according to PROFIdrive for diagnostics.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Request function 1	Yes	No	-
	01	Request function 2	Yes	No	-
	02	Request function 3	Yes	No	-
	03	Request function 4	Yes	No	-
	04	Request command bit 0	Yes	No	-
	05	Request command bit 1	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

06	Request command bit 2	Yes	No	-
07	Flying measurement mode/search for reference mark	Flying measurement	Reference marks	-
13	Request absolute value cyclic	Yes	No	-
14	Request parking encoder	Yes	No	-
15	Request acknowledge encoder fault	Yes	No	-

**Notice:** Information on Gn\_STW/Gn\_ZSW should be taken from the corresponding product documentation.

**Note:** The signal source for the encoder control word is set with p0480.

#### p0488[0...2]

#### Measuring probe 1 input terminal / Meas probe 1 inp

VECTOR\_G

**Can be changed:** U, T

**Calculated:** -

**Access level:** 3

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** 4740

**P-Group:** Encoder

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

8

0

**Description:**

Sets the input terminal to connect probe 1.

**Value:**

- 0: No meas probe
- 1: DI/DO 9 (X122.10/X121.8)
- 2: DI/DO 10 (X122.12/X121.10)
- 3: DI/DO 11 (X122.13/X121.11)
- 4: DI/DO 13 (X132.10/X131.2)
- 5: DI/DO 14 (X132.12/X131.4)
- 6: DI/DO 15 (X132.13/X131.5)
- 7: DI/DO 8 (X122.9/X121.7)
- 8: DI/DO 12 (X132.9/X131.1)

**Index:**

- [0] = Encoder 1
- [1] = Encoder 2
- [2] = Encoder 3

**Dependency:**

Refer to: p0489, p0728

**Notice:**

Regarding the terminal designation:

The first designation is valid for CU320, the second for CU310.

To select the values:

For CX32, NX10 and NX15, only DI/DO 8, 9, 10, 11 can be selected as fast inputs (refer to the Equipment Manual).

**Note:**

DI/DO: Bidirectional Digital Input/Output

The terminal must be set as input (p0728).

Refer to the encoder interface for PROFIdrive.

If parameterization is rejected, check whether the terminal is already being used in p0580, p0680, p2517 or p2518.

#### p0488

#### Measuring probe 1 input terminal / Meas probe 1 inp

ENC

**Can be changed:** U, T

**Calculated:** -

**Access level:** 3

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** 4740

**P-Group:** Encoder

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

8

0

**Description:**

Sets the input terminal to connect probe 1.

**Value:**

- 0: No meas probe
- 1: DI/DO 9 (X122.10/X121.8)
- 2: DI/DO 10 (X122.12/X121.10)
- 3: DI/DO 11 (X122.13/X121.11)
- 4: DI/DO 13 (X132.10/X131.2)
- 5: DI/DO 14 (X132.12/X131.4)
- 6: DI/DO 15 (X132.13/X131.5)
- 7: DI/DO 8 (X122.9/X121.7)
- 8: DI/DO 12 (X132.9/X131.1)

**Dependency:**

Refer to: p0489, p0728

- Notice:** Regarding the terminal designation:  
The first designation is valid for CU320, the second for CU310.  
To select the values:  
For CX32, NX10 and NX15, only DI/DO 8, 9, 10, 11 can be selected as fast inputs (refer to the Equipment Manual).
- Note:** DI/DO: Bidirectional Digital Input/Output  
The terminal must be set as input (p0728).  
Refer to the encoder interface for PROFIdrive.  
If parameterization is rejected, check whether the terminal is already being used in p0580, p0680, p2517 or p2518.

**p0489[0...2] Measuring probe 2 input terminal / Meas probe 2 inp**

VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4740
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	8	0

**Description:** Sets the input terminal to connect probe 2.

**Value:**

0:	No meas probe
1:	DI/DO 9 (X122.10/X121.8)
2:	DI/DO 10 (X122.12/X121.10)
3:	DI/DO 11 (X122.13/X121.11)
4:	DI/DO 13 (X132.10/X131.2)
5:	DI/DO 14 (X132.12/X131.4)
6:	DI/DO 15 (X132.13/X131.5)
7:	DI/DO 8 (X122.9/X121.7)
8:	DI/DO 12 (X132.9/X131.1)

**Index:** [0] = Encoder 1  
[1] = Encoder 2  
[2] = Encoder 3

**Dependency:** Refer to: p0488, p0728

- Notice:** Regarding the terminal designation:  
The first designation is valid for CU320, the second for CU310.  
To select the values:  
For CX32, NX10 and NX15, only DI/DO 8, 9, 10, 11 can be selected as fast inputs (refer to the Equipment Manual).
- Note:** DI/DO: Bidirectional Digital Input/Output  
The terminal must be set as input (p0728).  
Refer to the encoder interface for PROFIdrive.  
If parameterization is rejected, check whether the terminal is already being used in p0580, p0680, p2517 or p2518.

**p0489 Measuring probe 2 input terminal / Meas probe 2 inp**

ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4740
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	8	0

**Description:** Sets the input terminal to connect probe 2.

**Value:**

0:	No meas probe
1:	DI/DO 9 (X122.10/X121.8)
2:	DI/DO 10 (X122.12/X121.10)
3:	DI/DO 11 (X122.13/X121.11)
4:	DI/DO 13 (X132.10/X131.2)
5:	DI/DO 14 (X132.12/X131.4)
6:	DI/DO 15 (X132.13/X131.5)
7:	DI/DO 8 (X122.9/X121.7)
8:	DI/DO 12 (X132.9/X131.1)

**Dependency:** Refer to: p0488, p0728

**Notice:** Regarding the terminal designation:  
 The first designation is valid for CU320, the second for CU310.  
 To select the values:  
 For CX32, NX10 and NX15, only DI/DO 8, 9, 10, 11 can be selected as fast inputs (refer to the Equipment Manual).

**Note:** DI/DO: Bidirectional Digital Input/Output  
 The terminal must be set as input (p0728).  
 Refer to the encoder interface for PROFIdrive.  
 If parameterization is rejected, check whether the terminal is already being used in p0580, p0680, p2517 or p2518.

---

**p0491 Motor encoder fault response ENCODER / Fault resp ENCODER**

VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	5	0

**Description:** Sets the behavior for the ENCODER fault response (motor encoder).  
 This means, for example, if an encoder fault occurs, encoderless operation can be automatically selected with a shutdown behavior that can be selected.

**Value:**

- 0: Encoder fault results in OFF2
- 1: Enc fault results in encoderless oper. and oper. continues
- 2: Encoder fault results in encoderless operation and OFF1
- 3: Encoder fault results in encoderless operation and OFF3
- 4: Encoder fault results in an armature short-cct int/DC braking
- 5: Enc fault results in encoderless op, operation continues, alarm

**Dependency:** The following parameters are relevant for encoderless operation.  
 Refer to: p0341, p0342, p1470, p1472, p1517, p1612, p1755  
 Refer to: F07575

**Caution:** For a value = 1, 2, 3, 5 the following applies:  
 - encoderless operation must have been started.  
 For a value = 1, the following applies:  
 - in spite of the motor encoder fault that has occurred, the motor continues to operate.

**Note:** For a value = 1, 2, 3, 5 the following applies:  
 - Refer to the status signal "encoderless operation due to a fault" (BO: r1407.13).  
 - if, with r1407.13 = 1, a different drive data set is selected (e.g. interconnection from p0820), then the open-loop or closed-loop control type p1300 of this data set must match that of the original data set (e.g. p1300 = 21). Encoderless closed-loop controlled operation is kept when changing over.  
 - not possible for separately excited synchronous motors (p0300 = 5).  
 For a value = 4, the following applies:  
 - the value can only be set for all motor data sets when p1231 = 3, 4.  
 - For synchronous motors, an armature short circuit is initiated on an encoder fault.  
 - For induction motors, DC braking is initiated on an encoder fault. DC braking must be commissioned (p1232, p1233, p1234).  
 For a value = 5, the following applies:  
 Same function as for value = 1.  
 However, faults are output as alarm and the message bit "Fault active" (r2139.3) is not set. The encoder fault has to be acknowledged via the encoder interface in order to resume operation with encoder.

<b>p0492</b>	<b>Maximum speed difference per sampling cycle / n_dif max/samp_cyc</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	0.00 [rpm]
<b>Description:</b>	Sets the maximum permissible speed difference within the current controller sampling time.		
<b>Dependency:</b>	Refer to: r1408		
	Refer to: F07902, F31118, A31418, F32118, A32418, F33118, A33418		
<b>Note:</b>	For a value of 0.0, the speed change monitoring is disabled.		
	The following applies for square-wave encoders:		
	If the speed difference exceeds the threshold value p0492, depending on p0491, either encoderless closed-loop speed/torque control is selected or the drive is switched off with fault F3x118.		
	The following applies for other speed encoders:		
	If the speed difference exceeds threshold value p0492, in order to avoid subsequent faults, the old speed actual value is kept and after time p2178 shut down with fault F07902 (motor stalled).		
<b>p0492</b>	<b>Square-wave encoder maximum speed difference per sampling cycle / n_dif max/samp_cyc</b>		
ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	0.00 [rpm]
<b>Description:</b>	Sets the maximum permissible speed difference within the current controller sampling time for squarewave encoders.		
<b>Dependency:</b>	Refer to: F31118, A31418		
<b>Note:</b>	For a value of 0.0, the speed change monitoring is disabled.		
	if the set maximum speed difference is only exceeded for one sampling time of the current controller, then an appropriate alarm is output. However, if the maximum speed difference is exceeded over several sampling times, then a corresponding fault is output.		
<b>p0492</b>	<b>Square-wave encoder max. velocity difference per sampling cycle / v_dif max/samp_cyc</b>		
ENC (Lin_enc)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [m/min]	1000.00 [m/min]	0.00 [m/min]
<b>Description:</b>	Sets the maximum permissible velocity difference within the current controller sampling time for square-wave encoders.		
<b>Dependency:</b>	Refer to: F31118, A31418		
<b>Note:</b>	For a value of 0.0, velocity change monitoring is disabled.		
	if the set maximum velocity difference is only exceeded for one sampling time of the current controller, then an appropriate alarm is output. However, if the maximum speed difference is exceeded over several sampling times, then a corresponding fault is output.		

<b>p0493[0...n]</b>	<b>Zero mark selection input terminal / ZM_sel inp_term</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	8	0
<b>Description:</b>	Sets the input terminal for selecting the reference mark via BERO/switching signal when performing referencing with several zero marks. The encoder interface supplies the position of the reference mark, which was detected immediately after the positive edge of the BERO signal.		
<b>Value:</b>	0: No selection via BERO 1: DI/DO 9 (X122.10/X121.8) 2: DI/DO 10 (X122.12/X121.10) 3: DI/DO 11 (X122.13/X121.11) 4: DI/DO 13 (X132.10/X131.2) 5: DI/DO 14 (X132.12/X131.4) 6: DI/DO 15 (X132.13/X131.5) 7: DI/DO 8 (X122.9/X121.7) 8: DI/DO 12 (X132.9/X131.1)		
<b>Notice:</b>	For CX32, NX10 and NX15, only DI/DO 9, 10, 11 can be selected as fast inputs (refer to the Equipment Manual). Regarding the terminal designation: The first designation is valid for CU320, the second for CU310.		
<b>Note:</b>	Refer to the encoder interface for PROFIdrive. The terminal must be set as input (p0728). For p0493 = 0 (factory setting) the following applies: - there is no logic operation between the reference mark search and an input signal. For p0493 > 0, the following applies: - the positive edge of the input signal is evaluated. If the negative edge is to be evaluated, signal inversion must be parameterized via p0490. - if a parameter change is rejected, a check should be performed as to whether the input terminal is already being used in p0580, p0680, p2517, or p2518.		

<b>p0493</b>	<b>Zero mark selection input terminal / ZM_sel inp_term</b>		
ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	8	0
<b>Description:</b>	Sets the input terminal for selecting the reference mark via BERO/switching signal when performing referencing with several zero marks. The encoder interface supplies the position of the reference mark, which was detected immediately after the positive edge of the BERO signal.		
<b>Value:</b>	0: No selection via BERO 1: DI/DO 9 (X122.10/X121.8) 2: DI/DO 10 (X122.12/X121.10) 3: DI/DO 11 (X122.13/X121.11) 4: DI/DO 13 (X132.10/X131.2) 5: DI/DO 14 (X132.12/X131.4) 6: DI/DO 15 (X132.13/X131.5) 7: DI/DO 8 (X122.9/X121.7) 8: DI/DO 12 (X132.9/X131.1)		
<b>Notice:</b>	For CX32, NX10 and NX15, only DI/DO 9, 10, 11 can be selected as fast inputs (refer to the Equipment Manual). Regarding the terminal designation: The first designation is valid for CU320, the second for CU310.		

**Note:** Refer to the encoder interface for PROFIdrive.  
 The terminal must be set as input (p0728).  
 For p0493 = 0 (factory setting) the following applies:  
 - there is no logic operation between the reference mark search and an input signal.  
 For p0493 > 0, the following applies:  
 - the positive edge of the input signal is evaluated. If the negative edge is to be evaluated, signal inversion must be parameterized via p0490.  
 - if a parameter change is rejected, a check should be performed as to whether the input terminal is already being used in p0580, p0680, p2517, or p2518.

---

<b>p0494[0...n]</b>	<b>Equivalent zero mark input terminal / ZM_equiv inp_term</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	8	0

**Description:** Selects the input terminal for connecting an equivalent zero mark (external encoder zero mark).

**Value:**

- 0: No equivalent zero mark (evaluation of the encoder zero mark)
- 1: DI/DO 9 (X122.10/X121.8)
- 2: DI/DO 10 (X122.12/X121.10)
- 3: DI/DO 11 (X122.13/X121.11)
- 4: DI/DO 13 (X132.10/X131.2)
- 5: DI/DO 14 (X132.12/X131.4)
- 6: DI/DO 15 (X132.13/X131.5)
- 7: DI/DO 8 (X122.9/X121.7)
- 8: DI/DO 12 (X132.9/X131.1)

**Notice:** For CX32, NX10 and NX15, only DI/DO 9, 10, 11 can be selected as fast inputs (refer to the Equipment Manual).  
 For p0494 = 0 (factory setting), the setting in p0495 is effective.

Regarding the terminal designation:

The first designation is valid for CU320, the second for CU310.

**Note:** Refer to the encoder interface for PROFIdrive.  
 The terminal must be set as input.

---

<b>p0495[0...2]</b>	<b>Equivalent zero mark input terminal / ZM_equiv input</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4735
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	8	0

**Description:** Selects the input terminal for connecting an equivalent zero mark (external encoder zero mark).

**Value:**

- 0: No equivalent zero mark (evaluation of the encoder zero mark)
- 1: DI/DO 9 (X122.10/X121.8)
- 2: DI/DO 10 (X122.12/X121.10)
- 3: DI/DO 11 (X122.13/X121.11)
- 4: DI/DO 13 (X132.10/X131.2)
- 5: DI/DO 14 (X132.12/X131.4)
- 6: DI/DO 15 (X132.13/X131.5)
- 7: DI/DO 8 (X122.9/X121.7)
- 8: DI/DO 12 (X132.9/X131.1)

**Index:**

- [0] = Encoder 1
- [1] = Encoder 2
- [2] = Encoder 3

**Dependency:** Refer to: p0494

## 2 Parameters

### 2.2 List of parameters

**Notice:** For CX32, NX10 and NX15, only DI/DO 9, 10, 11 can be selected as fast inputs (refer to the Equipment Manual).  
For p0494 > 0, the setting in p0494 is effective and p0495 is invalid.  
Regarding the terminal designation:  
The first designation is valid for CU320, the second for CU310.

**Note:** Refer to the encoder interface for PROFIdrive.  
The terminal must be set as input.  
For p0495 = 0 (factory setting), the encoder zero mark is evaluated as zero mark.  
For p0495 > 0, the following applies:  
Depending on the direction of motion, the positive or negative edge at the appropriate input is evaluated.  
- increasing position actual values (r0482) --> the 0/1 edge is evaluated.  
- decreasing position actual values (r0482) --> the 1/0 edge is evaluated.  
Only one zero mark is supported. If function 2, 3 or 4 is selected, this results in a fault message in Gn\_ZSW.  
The inversion of the inputs via p0490 affects the function "referencing with equivalent zero mark". This is the reason that the edge evaluation is interchanged as a function of the direction of motion.  
An input can only be assigned to one encoder as measuring probe 1, 2 or equivalent zero mark. Exception: The same encoder can be simultaneously used as measuring probe and equivalent zero mark as both functions cannot be simultaneously requested.

---

<b>p0495</b>	<b>Equivalent zero mark input terminal / ZM_equiv input</b>		
ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4735
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	8	0

**Description:** Selects the input terminal for connecting an equivalent zero mark (external encoder zero mark).

**Value:**

- 0: No equivalent zero mark (evaluation of the encoder zero mark)
- 1: DI/DO 9 (X122.10/X121.8)
- 2: DI/DO 10 (X122.12/X121.10)
- 3: DI/DO 11 (X122.13/X121.11)
- 4: DI/DO 13 (X132.10/X131.2)
- 5: DI/DO 14 (X132.12/X131.4)
- 6: DI/DO 15 (X132.13/X131.5)
- 7: DI/DO 8 (X122.9/X121.7)
- 8: DI/DO 12 (X132.9/X131.1)

**Notice:** For CX32, NX10 and NX15, only DI/DO 9, 10, 11 can be selected as fast inputs (refer to the Equipment Manual).  
For p0494 > 0, the setting in p0494 is effective and p0495 is invalid.  
Regarding the terminal designation:  
The first designation is valid for CU320, the second for CU310.

**Note:** Refer to the encoder interface for PROFIdrive.  
The terminal must be set as input.  
For p0495 = 0 (factory setting), the encoder zero mark is evaluated as zero mark.  
For p0495 > 0, the following applies:  
Depending on the direction of motion, the positive or negative edge at the appropriate input is evaluated.  
- increasing position actual values (r0482) --> the 0/1 edge is evaluated.  
- decreasing position actual values (r0482) --> the 1/0 edge is evaluated.  
Only one zero mark is supported. If function 2, 3 or 4 is selected, this results in a fault message in Gn\_ZSW.  
The inversion of the inputs via p0490 affects the function "referencing with equivalent zero mark". This is the reason that the edge evaluation is interchanged as a function of the direction of motion.  
An input can only be assigned to one encoder as measuring probe 1, 2 or equivalent zero mark. Exception: The same encoder can be simultaneously used as measuring probe and equivalent zero mark as both functions cannot be simultaneously requested.

p0496[0...2]	Encoder diagnostic signal selection / Enc diag select		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	86	0
<b>Description:</b>	Selects the trace signal to be output in r0497, r0498 and r0499 for encoder diagnostics.		
<b>Value:</b>	0: Inactive 1: r0497: Mechanical revolution 7: r0498: oversampling channel A with fault trigger 8: r0498: oversampling channel A with fault trigger 9: r0497: sum of the squares AB in 0.1 mV 10: r0498: Raw value track A, r0499: Raw value track B 11: r0498: Fine position X (-A/2), r0499: Fine position Y (-B/2) 12: r0498: Fine position Phi, r0499: - 13: r0498: Offset correction X, r0499: Offset correction Y 14: r0498: Phase correction X, r0499: Amplitude correction Y 15: r0498: Cubic correction X, r0499: Fine position X 16: r0498: oversampling channel A, r0499: oversampling channel B 17: r0498: fan-out amount, r0499: fan-out number 18: r0498: Oversampling angle, r0499: Oversampling amount 19: r0498: Fault counter AB, r0499: raw value track A 20: r0498: Raw value track C, r0499: Raw value track D 21: r0498: CD position X (-D/2), r0499: CD position Y (C/2) 22: r0498: CD position Phi, r0499: CD pos. Phi - mech. revolution 23: r0497: Zero mark status 24: r0498: Raw value track R, r0499: Zero mark status 25: r0498: Raw value track A, r0499: Raw value track R 30: r0497: Absolute position serial 31: r0497: Absolute position incremental 32: r0497: Zero mark position 33: r0497: Correction absolute position difference 40: r0498: Raw temperature, r0499: Temperature in 0.1 °C 41: r0498: Resistance in 0.1 Ohm, r0499: Temperature in 0.1 °C 42: r0497: Resistance 2500 Ohm 51: r0497: Absolute speed difference (dn/dt) 52: r0497: Xact1 corrected quadrants 60: Analog sensor: r0498: raw val chann. A, r0499: raw val chann. B 61: Analog sensor: r0498: fine pos chann. A, r0499: fine pos chann. B 62: Analog sensor: r0498: Fine pos before characteristic, r0499: - 70: Resolver: r0498: Transformation ratio, r0499: phase 80: Spindle: r0498: Sensor S1 (raw), r0499: Sensor S4 (raw) 81: Spindle: r0498: Sensor S5 (raw), r0499: - 85: Spindle: r0498: Sensor S1 (cal), r0499: Sensor S4 (cal) 86: Spindle: r0498: Sensor S5 (cal), r0499: -		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: r0497, r0498, r0499		
<b>Notice:</b>	The setting option depends on the following properties: Sensor Module type, hardware version, firmware version (Sensor Module and Control Units), Article number (last digit). Not all combinations are supported.		
<b>Note:</b>	For p0496 = 1: $360^\circ \leftrightarrow 2^{32}$ For p0496 = 7, 8: input voltage in mV For p0496 = 10 (resolver): 2900 mV $\leftrightarrow$ 26214 dec For p0496 = 10, 20 (sin/cos 1 Vpp, EnDat): 500 mV $\leftrightarrow$ 21299 dec For p0496 = 11 (resolver): 2900 mV $\leftrightarrow$ 13107 dec, internal processor offset is corrected For p0496 = 11, 21 (sin/cos 1 Vpp, EnDat): 500 mV $\leftrightarrow$ 10650 dec, internal processor offset is corrected		

## 2 Parameters

### 2.2 List of parameters

For p0496 = 12: 180 ° fine position <--> 32768 dec  
 For p0496 = 13 (resolver): 2900 mV <--> 13107 dec  
 For p0496 = 13 (sin/cos 1 Vpp, EnDat): 500 mV <--> 10650 dec  
 For p0496 = 14: 1 ° <--> 286 dec, 100 % <--> 16384 dec  
 For p0496 = 15: 100 % <--> 16384 dec  
 For p0496 = 16: (resolver): channel A: 2900 mV <--> 26214 dec, channel B: 2900 mV <--> 26214 dec  
 For p0496 = 16: (sin/cos 1 Vpp, EnDat) channel A: 500 mV <--> 21299 dec, channel B: 500 mV <--> 21299 dec  
 For p0496 = 17 (resolver): absolute value: 2900 mV <--> 13107 dec, number: 1 ... 8  
 For p0496 = 17 (sin/cos 1 Vpp, EnDat): absolute value 500 mV <--> 10650 dec, number: 1 ... 8  
 For p0496 = 18 (resolver): angle: signal period <--> 2<sup>16</sup>, absolute value: 2900 mV <--> 13107 dec  
 For p0496 = 18 (sin/cos 1 Vpp, EnDat): angle: signal period <--> 2<sup>16</sup>, absolute value: 500 mV <--> 10650 dec  
 For p0496 = 19 (resolver): counter: dec, channel A: 2900 mV <--> 26214 dec  
 For p0496 = 19 (sin/cos 1 Vpp, EnDat): counter: dec, channel A: 500 mV <--> 21299 dec  
 For p0496 = 22: 180 ° <--> 32768 dec  
 For p0496 = 23, 24: r0497.31 (r0499.15) set for at least 1 current controller sampling time when encoder zero mark detected  
 For p0496 = 24, 25: 500 mV <--> 21299 dec  
 For p0496 = 30: Rotary: 1 singleturn measuring step <--> 1 dec, linear: 1 measuring step <--> 1 dec  
 For p0496 = 31: Absolute position, incremental in 1/4 encoder pulses  
 For p0496 = 32: Zero mark position in 1/4 encoder pulses  
 For p0496 = 33: counter offset absolute value in 1/4 encoder pulses  
 For p0496 = 40: r0498 <--> (R\_KTY/1 kOhm - 0.9) \* 32768  
 For p0496 = 42: 2500 Ohm <--> 2<sup>32</sup>  
 For p0496 = 51: 1 rpm <--> 1000 dec  
 For p0496 = 52: ln 1/4 encoder pulses  
 For p0496 = 60: voltage, channel A in mV, voltage, channel B in mV  
 For p0496 = 61: Channel A: encoder periods <--> 2<sup>16</sup>, channel B: encoder periods <--> 2<sup>16</sup>  
 For p0496 = 62: encoder periods <--> 2<sup>16</sup>  
 For p0496 = 70: r: 100% <--> 10000 dec, phase: 180 ° <--> 18000 dec  
 For p0496 = 80, 81, 85, 86: 1V <--> 1000 inc

<b>p0496</b>		<b>Encoder diagnostic signal selection / Enc diag select</b>	
ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	86	0
<b>Description:</b>	Selects the trace signal to be output in r0497, r0498 and r0499 for encoder diagnostics.		
<b>Value:</b>	0: Inactive 1: r0497: Mechanical revolution 7: r0498: oversampling channel A with fault trigger 8: r0498: oversampling channel A with fault trigger 9: r0497: sum of the squares AB in 0.1 mV 10: r0498: Raw value track A, r0499: Raw value track B 11: r0498: Fine position X (-A/2), r0499: Fine position Y (-B/2) 12: r0498: Fine position Phi, r0499: - 13: r0498: Offset correction X, r0499: Offset correction Y 14: r0498: Phase correction X, r0499: Amplitude correction Y 15: r0498: Cubic correction X, r0499: Fine position X 16: r0498: oversampling channel A, r0499: oversampling channel B 17: r0498: fan-out amount, r0499: fan-out number 18: r0498: Oversampling angle, r0499: Oversampling amount 19: r0498: Fault counter AB, r0499: raw value track A 20: r0498: Raw value track C, r0499: Raw value track D 21: r0498: CD position X (-D/2), r0499: CD position Y (C/2) 22: r0498: CD position Phi, r0499: CD pos. Phi - mech. revolution 23: r0497: Zero mark status		

24: r0498: Raw value track R, r0499: Zero mark status  
 25: r0498: Raw value track A, r0499: Raw value track R  
 30: r0497: Absolute position serial  
 31: r0497: Absolute position incremental  
 32: r0497: Zero mark position  
 33: r0497: Correction absolute position difference  
 40: r0498: Raw temperature, r0499: Temperature in 0.1 °C  
 41: r0498: Resistance in 0.1 Ohm, r0499: Temperature in 0.1 °C  
 42: r0497: Resistance 2500 Ohm  
 51: r0497: Absolute speed difference (dn/dt)  
 52: r0497: Xact1 corrected quadrants  
 60: Analog sensor: r0498: raw val chann. A, r0499: raw val chann. B  
 61: Analog sensor: r0498: fine pos chann. A, r0499: fine pos chann. B  
 62: Analog sensor: r0498: Fine pos before characteristic, r0499: -  
 70: Resolver: r0498: Transformation ratio, r0499: phase  
 80: Spindle: r0498: Sensor S1 (raw), r0499: Sensor S4 (raw)  
 81: Spindle: r0498: Sensor S5 (raw), r0499: -  
 85: Spindle: r0498: Sensor S1 (cal), r0499: Sensor S4 (cal)  
 86: Spindle: r0498: Sensor S5 (cal), r0499: -

**Dependency:** Refer to: r0497, r0498, r0499

**Notice:** The setting option depends on the following properties:

Sensor Module type, hardware version, firmware version (Sensor Module and Control Units), Article number (last digit).

Not all combinations are supported.

**Note:**

For p0496 = 1: 360 ° <--> 2<sup>32</sup>  
 For p0496 = 7, 8: input voltage in mV  
 For p0496 = 10 (resolver): 2900 mV <--> 26214 dec  
 For p0496 = 10, 20 (sin/cos 1 Vpp, EnDat): 500 mV <--> 21299 dec  
 For p0496 = 11 (resolver): 2900 mV <--> 13107 dec, internal processor offset is corrected  
 For p0496 = 11, 21 (sin/cos 1 Vpp, EnDat): 500 mV <--> 10650 dec, internal processor offset is corrected  
 For p0496 = 12: 180 ° fine position <--> 32768 dec  
 For p0496 = 13 (resolver): 2900 mV <--> 13107 dec  
 For p0496 = 13 (sin/cos 1 Vpp, EnDat): 500 mV <--> 10650 dec  
 For p0496 = 14: 1 ° <--> 286 dec, 100 % <--> 16384 dec  
 For p0496 = 15: 100 % <--> 16384 dec  
 For p0496 = 16: (resolver): channel A: 2900 mV <--> 26214 dec, channel B: 2900 mV <--> 26214 dec  
 For p0496 = 16: (sin/cos 1 Vpp, EnDat) channel A: 500 mV <--> 21299 dec, channel B: 500 mV <--> 21299 dec  
 For p0496 = 17 (resolver): absolute value: 2900 mV <--> 13107 dec, number: 1 ... 8  
 For p0496 = 17 (sin/cos 1 Vpp, EnDat): absolute value 500 mV <--> 10650 dec, number: 1 ... 8  
 For p0496 = 18 (resolver): angle: signal period <--> 2<sup>16</sup>, absolute value: 2900 mV <--> 13107 dec  
 For p0496 = 18 (sin/cos 1 Vpp, EnDat): angle: signal period <--> 2<sup>16</sup>, absolute value: 500 mV <--> 10650 dec  
 For p0496 = 19 (resolver): counter: dec, channel A: 2900 mV <--> 26214 dec  
 For p0496 = 19 (sin/cos 1 Vpp, EnDat): counter: dec, channel A: 500 mV <--> 21299 dec  
 For p0496 = 22: 180 ° <--> 32768 dec  
 For p0496 = 23, 24: r0497.31 (r0499.15) set for at least 1 current controller sampling time when encoder zero mark detected  
 For p0496 = 24, 25: 500 mV <--> 21299 dec  
 For p0496 = 30: Rotary: 1 singleturn measuring step <--> 1 dec, linear: 1 measuring step <--> 1 dec  
 For p0496 = 31: Absolute position, incremental in 1/4 encoder pulses  
 For p0496 = 32: Zero mark position in 1/4 encoder pulses  
 For p0496 = 33: counter offset absolute value in 1/4 encoder pulses  
 For p0496 = 40: r0498 <--> (R\_KTY/1 kOhm - 0.9) \* 32768  
 For p0496 = 42: 2500 Ohm <--> 2<sup>32</sup>  
 For p0496 = 51: 1 rpm <--> 1000 dec  
 For p0496 = 52: ln 1/4 encoder pulses  
 For p0496 = 60: voltage, channel A in mV, voltage, channel B in mV  
 For p0496 = 61: Channel A: encoder periods <--> 2<sup>16</sup>, channel B: encoder periods <--> 2<sup>16</sup>

## 2 Parameters

### 2.2 List of parameters

For p0496 = 62: encoder periods <--> 2<sup>16</sup>

For p0496 = 70: r: 100% <--> 10000 dec, phase: 180 ° <--> 18000 dec

For p0496 = 80, 81, 85, 86: 1V <--> 1000 inc

---

<b>r0497[0...2]</b>	<b>CO: Encoder diagnostic signal double word / Enc diag DW</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace signal for encoder diagnostics (double word).  
The signal to be output is selected in p0496.

**Index:** [0] = Encoder 1  
[1] = Encoder 2  
[2] = Encoder 3

**Dependency:** Refer to: p0496, r0498, r0499

---

<b>r0497</b>	<b>Encoder diagnostic signal double word / Enc diag DW</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace signal for encoder diagnostics (double word).  
The signal to be output is selected in p0496.

**Dependency:** Refer to: p0496, r0498, r0499

---

<b>r0498[0...2]</b>	<b>CO: Encoder diagnostic signal low word / Enc diag low word</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace signal for encoder diagnostics (low component).  
The signal to be output is selected in p0496.

**Index:** [0] = Encoder 1  
[1] = Encoder 2  
[2] = Encoder 3

**Dependency:** Refer to: p0496, r0497, r0499

---

<b>r0498</b>	<b>Encoder diagnostic signal low word / Enc diag low word</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace signal for encoder diagnostics (low component).  
The signal to be output is selected in p0496.

**Dependency:** Refer to: p0496, r0497, r0499

<b>r0499[0...2]</b>	<b>CO: Encoder diagnostic signal high word / Enc diag high word</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Encoder <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace signal for encoder diagnostics (high component). The signal to be output is selected in p0496.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: p0496, r0497, r0498		
<b>r0499</b>	<b>Encoder diagnostic signal high word / Enc diag high word</b>		
ENC	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Encoder <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace signal for encoder diagnostics (high component). The signal to be output is selected in p0496.		
<b>Dependency:</b>	Refer to: p0496, r0497, r0498		
<b>p0500</b>	<b>Technology application / Tec application</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 5), T <b>Data type:</b> Integer16 <b>P-Group:</b> Applications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 6	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the technology application. The parameter influences the calculation of open-loop and closed-loop control parameters that is e.g. initiated using p0578.		
<b>Value:</b>	0: Standard drive (VECTOR) 1: Pumps and fans 2: Sensorless closed-loop control down to f = 0 (passive loads) 4: Dynamic in the field weakening range 5: Starting with a high break loose torque 6: High LoadMomInert		
<b>Dependency:</b>	Refer to: p2175, p2177		
<b>Note:</b>	The calculation of parameters dependent on the technology application can be called up as follows: - when exiting quick commissioning using p3900 > 0 - when writing p0340 = 1, 3, 5 (for p0500 = 6: p0340 = 1, 3, 4) - when writing p0578 = 1 For p0500 = 0 and when the calculation is initiated, the following parameters are set: - p1574 = 10 V (separately excited synchronous motor: 20 V) - p1750.2 = 0 - p1802 = 4 (SVM/FLB without overcontrol) - p1803 = 106 % - p1610 = 50 % - p1611 = 30 % - p1310 = 50 %		

- p1311 = 0 %

- p1381 = 0 %

For p0500 = 1 and when the calculation is initiated, the following parameters are set:

- p1574 = 2 V (separately excited synchronous motor: 4 V)

- p1750.2 = 0

- p1802 = 9 (edge modulation), if r0192.0 = 1

- p1802 = 4, if r0192.0 = 0

- p1803 = 106 %

- p1310, p1311, p1381, p1610, p1610 as for p0500 = 0

For p0500 = 2 and when the calculation is initiated, the following parameters are set:

- p1574 = 2 V (separately excited synchronous motor: 4 V)

- p1750.2 = 1: Encoderless control of the induction motor is effective down to zero frequency.

This operating mode is possible for passive loads. These include applications where the load does not generate regenerative torque when breaking away and the motor comes to a standstill (zero speed) itself when the pulses are inhibited.

- p1802, p1803, p1310, p1311, p1381, p1610, p1610 as for p0500 = 0

The setting of p1750 is only relevant for induction motors.

p1802 and p1803 are only changed, in all cases, if a sine-wave output filter (p0230 = 3, 4) has not been selected.

For p0500 = 4: (presetting for VECTOR with PM250 power unit)

- p1574 = 30 V

- p1750.2 = 0

- p1802 = 2 (SVM with overcontrol)

- p1803 = 106 %

- p1381 = 6 % (to avoid overcontrol)

- p1654 = p0115[1]

- p1402.11 = 1

- p1310, p1311, p1610, p1610 as for p0500 = 0

For p0500 = 5: (for speed-controlled starting for vector control without encoder)

- p1574, p1750.2, p1802, p1803, p1381 as for p0500 = 0

- p1610 = 80 % (separately excited synchronous motor: 50%)

- p1611 = 80 % (separately excited synchronous motor: 50%)

- p1310 minimum 80%

- p1311 minimum 30%

For p0500 = 6: (for high moments of inertia with/without gearbox coupling)

- p1574, p1750.2, p1802, p1803, p1610, p1611, p1310 p1311 as for p0500 = 0

The following settings change the speed control for p0340 = 1, 3, 4

They are only reset using p0340 = 1 or p3900 > 0.

- p0342 = 10 (motor moment of inertia factor, if previously p0342 = 1)

The real factor can be entered in the commissioning tool.

- p1400.20 = 1 (acceleration model)

- p1496 = 100 %

- p1959.16 = 1 (speed actual value smoothing is calculated)

- p1967 = 80 %

The following settings are only reset again using p3900 = 1.

- p1115 = 1

- p1130, p1131 ramp-function generator rounding calculated from p1120, p1121 and r0345.

The moment of inertia estimator (p1400 bit 18, p5310) can be used, depending on the specific application, to adaptively determine the load moment of inertia.

**p0505 Selecting the system of units / Unit sys select**VECTOR\_G, B\_INF,  
ENC**Can be changed:** C2(5)**Calculated:** -**Access level:** 1**Data type:** Integer16**Dyn. index:** -**Func. diagram:** -**P-Group:** Applications**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

1

4

1

**Description:**

Sets the actual system of units.

**Value:**

1: SI system of units  
 2: System of units referred/SI  
 3: US system of units  
 4: System of units referred/US

**Dependency:**

The parameter can only be changed in an offline project using the commissioning software.

**Caution:**

If a per unit representation is selected and if the reference parameters (e.g. p2000) are subsequently changed, then the physical significance of several control parameters is also adapted at the same time. As a consequence, the control behavior can change (see p1576, p1621, p1744, p1752, p1755 and p1609, p1612, p1619, p1620).

**Note:**

Reference parameter for the unit system % are, for example, p2000 ... p2004. Depending on what has been selected, these are displayed using either SI or US units.

**p0514[0...9] Scaling-specific reference values / Scal spec ref val**

VECTOR\_G, B\_INF

**Can be changed:** T**Calculated:** CALC\_MOD\_ALL**Access level:** 3**Data type:** FloatingPoint32**Dyn. index:** -**Func. diagram:** -**P-Group:** Communications**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0.000001

10000000.000000

1.000000

**Description:**

Sets the reference values for the specific scaling of BICO parameters.

The specific scaling is active when interconnecting with other BICO parameters, and can be used in the following cases:

1. Parameter with the marking "Scaling: p0514".
2. Changing the standard scaling for parameters with the marking "Scaling: p2000" ... "Scaling: p2007".

Relative values refer to the corresponding reference value. The reference value corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).

To specifically scale BICO parameters, proceed as follows:

- set the reference value (p0514[0...9]).

- set the numbers of the parameters, which should be active for the scaling, corresponding to the index of p0514 (p0515[0...19] ... p0524[0...19]).

For parameters with the marking "Scaling: p0514", which are not entered in p0515[0...19] to p0524[0...19], the reference value 1.0 (factory setting) applies.

**Index:**

[0] = Parameters in p0515[0...19]  
 [1] = Parameters in p0516[0...19]  
 [2] = Parameters in p0517[0...19]  
 [3] = Parameters in p0518[0...19]  
 [4] = Parameters in p0519[0...19]  
 [5] = Parameters in p0520[0...19]  
 [6] = Parameters in p0521[0...19]  
 [7] = Parameters in p0522[0...19]  
 [8] = Parameters in p0523[0...19]  
 [9] = Parameters in p0524[0...19]

**Dependency:**

Refer to: p0515, p0516, p0517, p0518, p0519, p0520, p0521, p0522, p0523, p0524

**Notice:**

This parameter is only changed if a warm restart or save with subsequent power off/on is carried out.

---

<b>p0515[0...19]</b>	<b>Scaling specific parameters referred to p0514[0] / Scal spec p514[0]</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Sets the parameters with reference value in p0514[0] for the specific scaling. p0515[0]: parameter number p0515[1]: parameter number p0515[2]: parameter number ... p0515[19]: parameter number		
<b>Dependency:</b>	Refer to: p0514		

---

<b>p0516[0...19]</b>	<b>Scaling specific parameters referred to p0514[1] / Scal spec p514[1]</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Sets the parameters with reference value in p0514[1] for the specific scaling. p0516[0]: parameter number p0516[1]: parameter number p0516[2]: parameter number ... p0516[19]: parameter number		
<b>Dependency:</b>	Refer to: p0514		

---

<b>p0517[0...19]</b>	<b>Scaling specific parameters referred to p0514[2] / Scal spec p514[2]</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Sets the parameters with reference value in p0514[2] for the specific scaling. p0517[0]: parameter number p0517[1]: parameter number p0517[2]: parameter number ... p0517[19]: parameter number		
<b>Dependency:</b>	Refer to: p0514		

<b>p0518[0...19]    Scaling specific parameters referred to p0514[3] / Scal spec p514[3]</b>			
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Sets the parameters with reference value in p0514[3] for the specific scaling. p0518[0]: parameter number p0518[1]: parameter number p0518[2]: parameter number ... p0518[19]: parameter number		
<b>Dependency:</b>	Refer to: p0514		
<b>p0519[0...19]    Scaling specific parameters referred to p0514[4] / Scal spec p514[4]</b>			
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Sets the parameters with reference value in p0514[4] for the specific scaling. p0519[0]: parameter number p0519[1]: parameter number p0519[2]: parameter number ... p0519[19]: parameter number		
<b>Dependency:</b>	Refer to: p0514		
<b>p0520[0...19]    Scaling specific parameters referred to p0514[5] / Scal spec p514[5]</b>			
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Sets the parameters with reference value in p0514[5] for the specific scaling. p0520[0]: parameter number p0520[1]: parameter number p0520[2]: parameter number ... p0520[19]: parameter number		
<b>Dependency:</b>	Refer to: p0514		

---

<b>p0521[0...19]</b>	<b>Scaling specific parameters referred to p0514[6] / Scal spec p514[6]</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Sets the parameters with reference value in p0514[6] for the specific scaling. p0521[0]: parameter number p0521[1]: parameter number p0521[2]: parameter number ... p0521[19]: parameter number		
<b>Dependency:</b>	Refer to: p0514		

---

<b>p0522[0...19]</b>	<b>Scaling specific parameters referred to p0514[7] / Scal spec p514[7]</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Sets the parameters with reference value in p0514[7] for the specific scaling. p0522[0]: parameter number p0522[1]: parameter number p0522[2]: parameter number ... p0522[19]: parameter number		
<b>Dependency:</b>	Refer to: p0514		

---

<b>p0523[0...19]</b>	<b>Scaling specific parameters referred to p0514[8] / Scal spec p514[8]</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Sets the parameters with reference value in p0514[8] for the specific scaling. p0523[0]: parameter number p0523[1]: parameter number p0523[2]: parameter number ... p0523[19]: parameter number		
<b>Dependency:</b>	Refer to: p0514		

<b>p0524[0...19]</b>	<b>Scaling specific parameters referred to p0514[9] / Scal spec p514[9]</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Sets the parameters with reference value in p0514[9] for the specific scaling. p0524[0]: parameter number p0524[1]: parameter number p0524[2]: parameter number ... p0524[19]: parameter number		
<b>Dependency:</b>	Refer to: p0514		
<b>p0528</b>	<b>Controller gain system of units / Ctrl_gain unit_sys</b>		
VECTOR_G	<b>Can be changed:</b> C2(5)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Applications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	1
<b>Description:</b>	Sets the system of units for the controller gains.		
<b>Value:</b>	0: Representation physical/% (p0505) 1: Representation no dimensions (referred)		
<b>Note:</b>	For VECTOR (r0107) the following applies: The parameter is pre-assigned a value of 1 and cannot be changed.		
<b>p0528</b>	<b>Controller gain system of units / Ctrl_gain unit_sys</b>		
ENC	<b>Can be changed:</b> C2(5)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Applications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the system of units for the controller gains.		
<b>Value:</b>	0: Representation physical/% (p0505) 1: Representation no dimensions (referred)		
<b>Note:</b>	The parameter is pre-assigned a value of 0 and cannot be changed.		
<b>p0530[0...n]</b>	<b>Bearing version selection / Bearing vers sel</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	104	0
<b>Description:</b>	Sets the bearing version. Corresponding to the bearing version entered, its code number (p0531) is automatically set. 0 = No data 1 = Manual entry 101 = STANDARD		

## 2 Parameters

### 2.2 List of parameters

102 = PERFORMANCE  
 103 = HIGH PERFORMANCE  
 104 = ADVANCED LIFETIME

**Dependency:** Refer to: p0301, p0531, p0532, p1082

**Notice:** For p0530 = 101, 102, 103, 104, the maximum bearing speed (p0532) is write protected. Write protection is withdrawn with p0530 = 1.

If p0530 is changed during quick commissioning (p0010 = 1), then the maximum speed p1082, which is also associated with quick commissioning, is pre-assigned appropriately. This is not the case when commissioning the motor (p0010 = 3). The maximum speed of the bearing is factored into the limit for the maximum speed p1082.

**Note:** For a motor with DRIVE-CLiQ, p0530 can only be set to 1.

#### p0531[0...n]

#### Bearing code number selection / Bearing codeNo sel

VECTOR_G	<b>Can be changed:</b> C2(3)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0

**Description:** Display and setting the code number of the bearing.

When setting p0301 and p0530 the code number is automatically pre-assigned and is write protected. The information in p0530 should be observed when removing write protection.

**Dependency:** Refer to: p0301, p0530, p0532, p1082

**Notice:** If p0531 is changed during quick commissioning (p0010 = 1), then the maximum speed p1082, which is also associated with quick commissioning, is pre-assigned appropriately. This is not the case when commissioning the motor (p0010 = 3). The maximum speed of the bearing is factored into the limit for the maximum speed p1082.

**Note:** p0531 cannot be changed on a motor with DRIVE-CLiQ.

#### p0532[0...n]

#### Bearing maximum speed / Bearing n\_max

VECTOR_G	<b>Can be changed:</b> C2(1, 3)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [rpm]	210000.0 [rpm]	0.0 [rpm]

**Description:** Sets the maximum speed of the bearing.

The following applies when calculating the maximum speed (p1082):

- for p0324 = 0 or p0532 = 0, p0322 is used.
- for p0324 > 0 and p0532 > 0, the minimum value from the two parameters is used.

**Dependency:** Refer to: p0301, p0322, p0324, p0530, p1082

**Notice:** This parameter is pre-assigned in the case of motors from the motor list (p0301) if a bearing version (p0530) is selected.

When selecting a catalog motor, this parameter cannot be changed (write protection). The information in p0530 should be observed when removing write protection.

If p0532 is changed during quick commissioning (p0010 = 1), then the maximum speed p1082, which is also associated with quick commissioning, is pre-assigned appropriately. This is not the case when commissioning the motor (p0010 = 3).

<b>r0565[0...15]</b>	<b>CO: Probe time stamp / Probe t_stamp</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Display and connector output for the time stamp MT_ZS_1 up to MT_ZS_16. Displays the measuring time for an edge at the digital input for the "central measuring probe evaluation stage 3" function. The measuring time is specified as 16-bit value with a resolution of 0.25 µs. Priority: MT1 ... MT8, oldest ... newest time stamp		
<b>r0566[0...3]</b>	<b>CO: Probe time stamp reference / Probe t_stamp name</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Display and connector output for the time stamp reference MT_ZSB1 up to MT_ZSB4.		
<b>r0567</b>	<b>CO: Probe diagnostics word / Probe diag_word</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Display and connector output for diagnostics word MT_DIAG.		
<b>p0570</b>	<b>Inhibit list values effective number / Inhib list no</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Applications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	50	0
<b>Description:</b>	Sets the number of parameters in the inhibit list p0571. This number of parameters can be automatically excluded from the calculation of the motor and control parameters (see p0340, p0578), starting from index 0.		
<b>Note:</b>	Defines the number of entries in p0571 that should be taken into account. The inhibit list is deactivated for a value of 0.		

---

<b>p0571[0...49]</b>	<b>Inhibit list motor/closed-loop control parameter calculation / Inhib list calc</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Applications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2142	0
<b>Description:</b>	The inhibit list contains parameters that should be withdrawn from the automatic motor and closed-loop control parameter calculation (p0340, p0578).		
<b>Value:</b>	0: No parameter 600: Motor temperature sensor 640: Current limit 1082: Maximum speed 1460: Speed controller P gain 1462: Speed controller integral time 1470: Speed controller P gain encoderless 1472: Speed controller integral time encoderless 1520: Torque limit upper/motoring 1521: Torque limit lower/regenerative 1530: Power limit motoring 1531: Power limit regenerative 1590: Flux controller P gain 1592: Flux controller integral time 2141: Speed threshold 1 2142: Hysteresis speed 1		
<b>Note:</b>	p0570 defines the number of entries (starting at index 0) for which the inhibit should apply. p0572 can be used to define for which drive data sets the inhibit list should apply. If a motor data set is entered into a parameter number, then this is not overwritten as soon as only one drive data set refers to the motor data set (p0186).		

---

<b>p0572[0...n]</b>	<b>Activate/deactivate inhibit list / Inh_list act/deact</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Applications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Setting for activating/deactivating the inhibit list. Depending on the setting, the parameters of the inhibit list (p0571) should be overwritten when calculating the motor and closed-loop control parameters for the particular drive data set (DDS).		
<b>Value:</b>	0: No 1: Yes		
<b>Note:</b>	If value = 0: The automatic calculation (p0340, p0578) also overwrites the parameters of the inhibit list (p0571). If value = 1: The automatic calculation (p0340, p0578) does not overwrite the parameters of the inhibit list (p0571).		

<b>p0573</b>		<b>Inhibit automatic reference value calculation / Inhibit calc</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Applications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	1	0	
<b>Description:</b>	Setting to inhibit the calculation of reference parameters (e.g. p2000) when automatically calculating the motor and closed-loop control parameters (p0340, p3900).			
<b>Value:</b>	0: No 1: Yes			
<b>Notice:</b>	The inhibit for the reference value calculation is canceled when new motor parameters (e.g. p0305) are entered and only one drive data set exists (p0180 = 1). This is the case during initial commissioning. Once the motor and control parameters have been calculated (p0340, p3900), the inhibit for the reference value calculation is automatically re-activated.			
<b>Note:</b>	If value = 0: The automatic calculation (p0340, p3900) overwrites the reference parameters. If value = 1: The automatic calculation (p0340, p3900) does not overwrite the reference parameters.			

<b>p0578[0...n]</b>		<b>Calculate technology-dependent parameters / Calc tec par</b>		
VECTOR_G	<b>Can be changed:</b> C2(5), T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Applications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	1	0	
<b>Description:</b>	This parameter is used to calculate all parameters that depend on the technology of the application (p0500). All of the parameters are calculated that can also be determined using p0340 = 5.			
<b>Value:</b>	0: No calculation 1: Complete calculation			
<b>Note:</b>	At the end of the calculations, p0578 is automatically set to 0.			

<b>p0595</b>		<b>Technological unit selection / Tech unit select</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> C2(5)	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Applications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	1	32	1	
<b>Description:</b>	Selects the units for the parameters of the technology controller. For p0595 = 1, 2, the reference quantity set in p0596 is not active.			
<b>Value:</b>	1: % 2: 1 referred no dimensions 3: bar 4: °C 5: Pa 6: ltr/s 7: m³/s 8: ltr/min 9: m³/min 10: ltr/h 11: m³/h 12: kg/s 13: kg/min			

## 2 Parameters

### 2.2 List of parameters

14:	kg/h
15:	t/min
16:	t/h
17:	N
18:	kN
19:	Nm
20:	psi
21:	°F
22:	gallon/s
23:	inch³/s
24:	gallon/min
25:	inch³/min
26:	gallon/h
27:	inch³/h
28:	lb/s
29:	lb/min
30:	lb/h
31:	lbf
32:	lbf ft

**Dependency:** Only the unit of the technology controller parameters are switched over (unit group 9\_1).  
Refer to: p0596

**Note:** When switching over from % into another unit, the following sequence applies:  
- set p0596  
- set p0595 to the required unit

---

#### p0596 Technological unit reference quantity / Tech unit ref qty

VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.01	340.28235E36	1.00

**Description:** Sets the reference quantity for the technological units.  
When changing over using changeover parameter p0595 to absolute units, all of the parameters involved refer to the reference quantity.

**Dependency:** Refer to: p0595

**Notice:** When changing over from one technological unit into another, or when changing the reference parameter, a changeover is not made.

---

#### p0600[0...n] Motor temperature sensor for monitoring / Mot temp\_sensor

VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	21	0

**Description:** Sets the sensor to monitor the motor temperature.  
The sensor type used is set in p0601.

**Value:**

0:	No sensor
1:	Temperature sensor via encoder 1
2:	Temperature sensor via encoder 2
3:	Temperature sensor via encoder 3
10:	Temperature sensor via a BICO interconnection
11:	Temperature sensor via Motor Module / CU terminals
20:	Temperature sensor via a BICO interconnection p0608
21:	Temperature sensor via a BICO interconnection p0609

**Dependency:** Refer to: r0458, p0601, p0603

**Caution:**

If, for a selected temperature sensor (p0600 > 0), the motor temperature sensor is not connected but another sensor, then the temperature adaptation of the motor resistances must be switched out. Otherwise, in controlled-loop operation, torque errors will occur that will mean that the drive will not be able to be stopped.

**Notice:**

The parameter is calculated in the drive using p0340 and is inhibited for p0340 > 0.

For operation with a braking resistor (p1300 = 15), p0600 = 11 is automatically set when commissioning.

**Note:**

For p0600 = 0:

With induction motors, the motor temperature is calculated using the motor temperature model (see also p0612.1).

For p0600 = 1, 2, 3:

Bimetallic switch (p0601 = 4) and PT100 temperature sensor (p0601 = 5) are not supported.

For p0600 = 10:

The BICO interconnection should be executed via connector input p0603.

For p0600 = 11:

For SINAMICS S120 AC Drive (AC/AC) and using the Control Unit Adapter CUA31, the temperature sensor is connected at the adapter (X210).

For p0600 = 20, 21:

The BICO interconnection should be executed via connector input p0608 or p0609.

Associated parameters: p0601, p4600 ... p4603, p4610 ... p4613

**p0601[0...n]****Motor temperature sensor type / Mot\_temp\_sens type**

VECTOR\_G

**Can be changed:** C2(3), U, T**Calculated:** -**Access level:** 2**Data type:** Integer16**Dyn. index:** MDS, p0130**Func. diagram:** 8016**P-Group:** Motor**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0

11

2

**Description:**

Sets the sensor type for the motor temperature monitoring.

**Value:**

- 0: No sensor
- 1: PTC alarm & timer
- 2: KTY84
- 3: KTY84 and PTC (only for motors with DRIVE-CLiQ):
- 4: Bimetallic NC contact alarm & timer (only for temp\_eval via MM)
- 5: PT100
- 6: PT1000
- 7: PT1000 and PTC (only for motors with DRIVE-CLiQ):
- 10: Evaluation via several temperature channels SME12x
- 11: Evaluation via several temperature channels BICO

**Dependency:**

A thermal motor model is calculated corresponding to p0612.

Refer to: r0458, p0600, p0612

**Note:**

The temperature sensor for the temperature evaluation is set in p0600.

For p0600 = 10 (temperature sensor via a BICO interconnection), the setting in p0601 has no significance.

Information on using temperature sensors is provided in the following literature:

- hardware description of the appropriate components
- SINAMICS S120 Commissioning Manual

For p0601 = 1:

Tripping resistance = 1650 Ohm.

After the tripping resistance has been exceeded, an appropriate alarm is output and after the delay time set in p0606 has expired, an appropriate fault is output.

For p0601 = 3, 7:

For motors with DRIVE-CLiQ and two temperature sensors, the value is automatically set.

For p0601 = 4:

Tripping resistance = 100 Ohm.

After tripping, an appropriate alarm is output and after the delay time set in p0606 has expired, an appropriate fault is output.

For p0601 = 5:

It is only possible to evaluate a PT100 for p0600 = 11 and r0192.15 = 1.

## 2 Parameters

### 2.2 List of parameters

For p0601 = 10:

Not permitted for p0600 = 0, 10, 11.

Associated parameters: p4600 ... p4603 (can be switched via EDS)

For r0458.8 = 1, a temperature evaluation is supported through several temperature channels.

Examples:

When evaluating using SME120 or SME125, 4 temperature channels are available (parameterized using p4600, p4601, p4602, p4603).

When evaluating using CU310 and CUA32, 2 temperature channels are available (encoder interface: parameterization via p4600, terminal block: parameterization via p4601).

For p0601 = 11:

Not permitted for p0600 = 0, 10, 11.

Associated parameters: p4610 ... p4613 (can be switched via MDS)

<b>p0601</b>	<b>Temperature sensor, sensor type / Temp_sens type</b>		
<b>B_INF</b>	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	6	0
<b>Description:</b>	Sets the sensor type for the temperature measurement at input X21 (booksize) or X41 (chassis). The measured value is displayed in r0035.		
<b>Value:</b>	0: No sensor 1: PTC alarm & timer 2: KTY84 4: Bimetallic NC contact alarm & timer 6: PT1000		
<b>Dependency:</b>	Refer to: r0035		
<b>Note:</b>	The measured value display depends on the selected sensor type. For p0601 = 0: --> r0035 = -200 °C For p0601 = 1: Tripping resistance = 1650 Ohm (lower resistance --> r0035 = -50 °C, higher resistance --> r0035 = 250 °C). For p0601 = 2, 6: Displays the temperature in °C. For p0601 = 4: r0035 = -50 °C --> The tripping resistance is less than 100 Ohm (bimetallic NC contact is closed or has a short-circuit). r0035 = 250 °C --> The tripping resistance is greater than 100 Ohm (bimetallic NC contact is open, not connected or has a wire breakage). When using the following components, a value of 4 is set as the factory setting and can no longer be changed: - Basic Line Module (BLM) with internal Braking Module. - Active Line Module (ALM) with line filter Active Interface Module (AIM, p0220[0] = 41 ... 45). In these cases, in addition to the temperature display, the temperature is also monitored.		

<b>p0602</b>	<b>Par_connection power unit number, temperature sensor / PU_no temp_sensor</b>		
<b>VECTOR_G (Parallel)</b>	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	10	0
<b>Description:</b>	Sets the power unit number to which the temperature sensor is connected. The value corresponds to the Power unit Data Set number (PDS) of the power unit. The number of power unit data sets is defined in p0120.		

<b>p0603</b>	<b>CI: Motor temperature signal source / Mot temp S_src</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to evaluate the motor temperature via a BICO interconnection.		
<b>Dependency:</b>	Refer to: p0600		
<b>Note:</b>	Temperature sensor KTY/PT1000: Valid temperature range -48 °C ... 248 °C. PTC temperature sensor: For a value = -50 °C, the following applies: Motor temperature < nominal response temperature of the PTC. For a value = 250 °C, the following applies: Motor temperature >= nominal response temperature of the PTC. Note: When using a Terminal Module 31 (TM31), the following applies: - the sensor type used is set using p4100. - the temperature signal is interconnected using CO: r4105.		
<b>p0604[0...n]</b>	<b>Mot_temp_mod 2: sensor alarm threshold / Mod 2: sens A_thr</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [°C]	200.0 [°C]	130.0 [°C]
<b>Description:</b>	Sets the alarm threshold for monitoring the motor temperature for motor temperature model 2 or KTY/PT1000. After the alarm threshold is exceeded, alarm A07910 is output and timer (p0606) is started. If the delay time has expired and the alarm threshold has, in the meantime, not been fallen below, then fault F07011 is output.		
<b>Dependency:</b>	Refer to: p0606, p0612 Refer to: F07011, A07910		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	The hysteresis is 2 K. When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		
<b>p0605[0...n]</b>	<b>Mot_temp_mod 1/2 sensor threshold and temperature value / Mod 1/2 sens thr_T</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8016, 8017
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [°C]	240.0 [°C]	145.0 [°C]
<b>Description:</b>	Sets the threshold and temperature value to monitor the motor temperature. Temperature model 1 (I2t, p0612.0 = 1): The following applies for firmware version < 4.7 SP6 or p0612.8 = 0: - sets the alarm threshold. If the model temperature (r0034) exceeds the alarm threshold, then alarm A07012 is output. - this value is simultaneously used as rated winding temperature.		

## 2 Parameters

### 2.2 List of parameters

The following applies from firmware version 4.7 SP6 and p0612.8 = 1:

- p5390: when commissioning a catalog motor for the first time, p0605 is copied to p5390.
- p5390: p5390 is of significance when evaluating the alarm threshold.
- p5390: the stator winding temperature (r0632) is used to initiate the signal.
- p0627: when a catalog motor is commissioned for the first time, p0605 -40 °C is copied to p0627.
- p0627: p0627 is of significance for the rated temperature.

Motor temperature model 2 (p0612.1 = 1) or measurement:

- sets the fault threshold. If the temperature (r0035) exceeds the fault threshold, then fault F07011 is output.

**Dependency:** Refer to: r0034, p0606, p0611, p0612  
Refer to: F07011, A07012

**Notice:** When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.

Motor temperature model 1 (I2t):

The following applies for firmware version < 4.7 SP6 or p0612.8 = 0:

p0605 also defines the final temperature of the model for r0034 = 100 %. Therefore, p0605 has no influence on the time up to alarm A07012 being issued. The time is only determined by time constant p0611, the actual current and the reference value p0318. For p0318 = 0, the rated motor current is used as reference value.

**Note:** The hysteresis is 2 K.  
When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).

#### p0606[0...n]

#### Mot\_temp\_mod 2: sensor timer / Mod 2:sens timer

VECTOR\_G

**Can be changed:** C2(3), U, T

**Calculated:** -

**Access level:** 2

**Data type:** FloatingPoint32

**Dyn. index:** MDS, p0130

**Func. diagram:** 8016

**P-Group:** Motor

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0.000 [s]

600.000 [s]

0.000 [s]

**Description:**

Sets the timer for monitoring the motor temperature for motor temperature model 2 or KTY/PT1000.

This timer is started when the temperature alarm threshold (p0604) is exceeded.

If the timer has expired and the alarm threshold has, in the meantime, not been fallen below, then fault F07011 is output.

If the temperature fault threshold (p0605) is prematurely exceeded before the timer has expired, then fault F07011 is immediately output.

**Dependency:**

Refer to: p0604, p0605

Refer to: F07011, A07910

**Note:**

With p0606 = 0 s, the timer is deactivated and only the fault threshold is effective.

KTY/PT1000: When setting the minimum value, the timer is disabled and a fault is not output until p0605 is exceeded.

PTC, bimetallic NC contact: The timer minimum value has no special significance.

#### p0607[0...n]

#### Temperature sensor fault timer / Sensor fault time

VECTOR\_G

**Can be changed:** C2(3), U, T

**Calculated:** -

**Access level:** 2

**Data type:** FloatingPoint32

**Dyn. index:** MDS, p0130

**Func. diagram:** 8016

**P-Group:** Motor

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0.000 [s]

600.000 [s]

0.100 [s]

**Description:**

Sets the timer between the output of alarm and fault for a temperature sensor fault.

If there is a sensor fault, this timer is started.

If the sensor fault is still present after the timer has expired, a corresponding fault is output.

**Notice:**

The parameterized time is internally rounded-off to an integer multiple of 48 ms.

**Note:**

If the motor is an induction motor, the timer is switched off when setting the minimum value and no alarm is output. Temperature monitoring is then based on the thermal model.

---

<b>p0608[0...3]</b>	<b>CI: Motor temperature signal source 2 / Mot_temp S_src 2</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets signal source 2 to evaluate the motor temperature via a BICO interconnection.		
<b>Index:</b>	[0] = Motor temperature channel 1 [1] = Motor temperature channel 2 [2] = Motor temperature channel 3 [3] = Motor temperature channel 4		
<b>Dependency:</b>	Refer to: p0600		
<b>Note:</b>	Temperature sensor KTY/PT1000: Valid temperature range -48 °C ... 248 °C. Temperature sensor PTC/bimetal: For a value of -50 °C, the following applies: Motor temperature < nominal response temperature of the PTC (bimetal contact closed). For a value of 250 °C, the following applies: Motor temperature >= nominal response temperature of the PTC (bimetal contact open). Note: When using a Terminal Module 120 (TM120), the following applies: - the sensor type used is set using p4100. - the temperature signal is interconnected using connector output r4105.		

---

<b>p0609[0...3]</b>	<b>CI: Motor temperature signal source 3 / Mot_temp S_src 3</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets signal source 3 to evaluate the motor temperature via a BICO interconnection.		
<b>Index:</b>	[0] = Motor temperature channel 1 [1] = Motor temperature channel 2 [2] = Motor temperature channel 3 [3] = Motor temperature channel 4		
<b>Dependency:</b>	Refer to: p0600		
<b>Note:</b>	Temperature sensor KTY/PT1000: Valid temperature range -48 °C ... 248 °C. Temperature sensor PTC/bimetal: For a value of -50 °C, the following applies: Motor temperature < nominal response temperature of the PTC (bimetal contact closed). For a value of 250 °C, the following applies: Motor temperature >= nominal response temperature of the PTC (bimetal contact open). Note: When using a Terminal Module 120 (TM120), the following applies: - the sensor type used is set using p4100. - the temperature signal is interconnected using connector output r4105.		

p0610[0...n]	Motor overtemperature response / Mot temp response		
VECTOR_G	<b>Can be changed:</b> C2(3), T <b>Data type:</b> Integer16	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130	<b>Access level:</b> 2 <b>Func. diagram:</b> 8016, 8017, 8018, 8019
	<b>P-Group:</b> Motor <b>Not for motor type:</b> -	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> 0	<b>Max</b> 12	<b>Factory setting</b> 12
<b>Description:</b>	Sets the system response when the motor temperature reaches the alarm threshold.		
<b>Value:</b>	0: No response only alarm no reduction of I_max 1: Messages, reduction of I_max 2: Messages, no reduction of I_max 12: Messages, no reduction of I_max, temperature storage		
<b>Dependency:</b>	Refer to: p0601, p0604, p0605, p0614, p0615 Refer to: F07011, A07012, A07910		
<b>Note:</b>	The I_max reduction is not executed for PTC (p0601 = 1) or bimetallic NC contact (p0601 = 4). The I_max reduction results in a lower output frequency. If value = 0: An alarm is output and I_max is not reduced. If value = 1: An alarm is output and a timer is started. A fault is output if the alarm is still active after this timer has expired. - for KTY/PT1000/PT100, the following applies: reduction of I_max. - for PTC, the following is valid: I_max. is not reduced If value = 2: An alarm is output and a timer is started. A fault is output if the alarm is still active after this timer has expired. If value = 12: Behavior is always the same as for value 2. For motor temperature monitoring without temperature sensor, when switching off, the model temperature is saved in a non-volatile fashion. When switching on, the same value (reduced by p0614) is taken into account in the model calculation. As a consequence, the UL508C specification is fulfilled.		
p0611[0...n]	I2t motor model thermal time constant / I2t mot_mod T		
VECTOR_G	<b>Can be changed:</b> C2(1, 3), U, T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130	<b>Access level:</b> 3 <b>Func. diagram:</b> 8017
	<b>P-Group:</b> Motor <b>Not for motor type:</b> ASM, SESM, REL	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> 0 [s]	<b>Max</b> 20000 [s]	<b>Factory setting</b> 0 [s]
<b>Description:</b>	Sets the winding time constant. The time constant specifies the warm-up time of the cold stator winding when loaded with the motor standstill current (rated motor current, if the motor standstill current is not parameterized) up until a temperature rise of 63 % of the continuously permissible winding temperature has been reached.		
<b>Dependency:</b>	The parameter is only used for synchronous motors (p0300 = 2xx, 4) and synchronous reluctance motors (p0300 = 6xx). Refer to: r0034, p0612, p0615 Refer to: F07011, A07012, A07910		
<b>Notice:</b>	This parameter is automatically pre-set from the motor database for motors from the motor list (p0301). When selecting a catalog motor, this parameter cannot be changed (write protection). Information in p0300 should be carefully observed when removing write protection. When exiting commissioning, p0612 is checked, and where relevant, is pre-assigned to a value that matches the motor power, if a temperature sensor was not parameterized (see p0601).		
<b>Note:</b>	When parameter p0611 is reset to 0, then this switches out the thermal I2t motor model (refer to p0612). If no temperature sensor is parameterized, then the ambient temperature for the thermal motor model is referred to p0625.		

p0612[0...n]	Mot_temp_mod activation / Mot_temp_mod act				
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> MDS, p0130	<b>Access level:</b> 2 <b>Func. diagram:</b> 8017, 8018, 8019		
	<b>P-Group:</b> - <b>Not for motor type:</b> SESM, REL	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1		
	<b>Min</b> -	<b>Max</b> -	<b>Factory setting</b> 0000 0010 0000 0010 bin		
<b>Description:</b>	Setting to activate the motor temperature model.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Activate mot_temp_mod 1 (I2t)	Yes	No	-
	01	Activate mot_temp_mod 2	Yes	No	-
	02	Activate mot_temp_mod 3	Yes	No	-
	08	Activate mot_temp_mod 1 (I2t) extensions	Yes	No	-
	09	Activate mot_temp_mod 2 extensions	Yes	No	-
	12	Mot_temp_mod 1 (I2t) ambient temperature can be adjusted	Yes (via p0613)	No (fixed 20 °C)	-
<b>Dependency:</b>	For synchronous motors and synchronous reluctance motors, when exiting commissioning, temperature model 1 is automatically activated if a time constant has been entered in p0611. Refer to: r0034, p0604, p0605, p0606, p0611, p0613, p0615, p0625, p0626, p0627, p0628, r0630, r0631, r0632, r0633, p5350, r5389, p5390, p5391 Refer to: F07011, A07012, A07014, A07910				
<b>Notice:</b>	For bit 00: This bit is only automatically activated for permanent-magnet 1FT7 synchronous motors and synchronous reluctance motors. For other permanent-magnet synchronous motors, the user himself must activate motor temperature model 1 (I2t). It is only possible to activate this motor temperature model (I2t) for a time constant greater than zero (p0611 > 0).				
<b>Note:</b>	Mot_temp_mod: motor temperature model For bit 00 (see also bit 8): This bit is used to activate/deactivate the motor temperature model for permanent-magnet synchronous motors and synchronous reluctance motors. For bit 01 (see also bit 9): This bit is used to activate/deactivate the motor temperature model for induction motors. For bit 02: This bit is used to activate/deactivate the motor temperature model for 1FK7 Basic and 1FL6 motors. Motor temperature model 3 cannot be simultaneously activated with another motor temperature model. For bit 08: This bit is used to extend the motor temperature model 1 (I2t). The following applies for firmware version < 4.7 SP6 (only bit 0): - this bit has no function. Temperature model 1 operates in the standard mode. Overtemperature at rated load: p0605 - 40 °C Alarm threshold: p0605 Fault threshold: p0615 The following applies from firmware version 4.7 SP6 (bits 0 and 8): - temperature model 1 operates in the extended mode. Overtemperature at rated load: p0627 Alarm threshold: p5390 Fault threshold: p5391 For bit 09: This bit is used to extend the motor temperature model 2. For firmware version < 4.7 following applies (only bit 1): - this bit has no function. Temperature model 2 operates in the standard mode. From firmware version 4.7 the following applies (bits 1 and 9): - this bit should be set. Temperature model 2 then operates in the extended mode and the result of the model is more precise.				

## 2 Parameters

### 2.2 List of parameters

For bit 12 (only effective if a temperature sensor has not been parameterized):

This bit is used to set the ambient temperature for the motor temperature model 1 (I2t).

The following applies for firmware version < 4.7 SP6 (only bit 0):

- this bit has no function. Temperature model 1 operates with an ambient temperature of 20 °C.

The following applies from firmware version 4.7 SP6 (bits 0 and 12):

- the ambient temperature can be adapted to the conditions using p0613.

<b>p0613[0...n]</b>	<b>Mot_temp_mod 1/3 ambient temperature / Mod 1/3 amb_temp</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8017
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-40 [°C]	100 [°C]	20 [°C]
<b>Description:</b>	Sets the ambient temperature for motor temperature model 1 or 3.		
	- temperature model 1 (I2t, p0612.0 = 1):		
	For firmware version < 4.7 SP6 or p0612.12 = 0, the following applies:		
	The parameter is not relevant.		
	From firmware version 4.7 SP6 and p0612.12 = 1, the following applies:		
	The parameter defines the current ambient temperature.		
	- temperature model 3 (p0612.2 = 1):		
	The parameter defines the current ambient temperature.		
<b>Dependency:</b>	Refer to: p0612		
	Refer to: F07011, A07012		

<b>p0614[0...n]</b>	<b>Thermal resistance adaptation reduction factor / Therm R_adapt red</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [%]	100 [%]	30 [%]
<b>Description:</b>	Sets the reduction factor for the overtemperature of the thermal adaptation of the stator/rotor resistance.		
	The value is a starting value when switching on. Internally, after switch-on, the reduction factor has no effect corresponding to the thermal time constant.		
<b>Dependency:</b>	Refer to: p0610		
<b>Note:</b>	The reduction factor is only effective for p0610 = 12, and refers to the overtemperature.		

<b>p0615[0...n]</b>	<b>Mot_temp_mod 1 (I2t) fault threshold / I2t F thresh</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8017
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [°C]	220.0 [°C]	180.0 [°C]
<b>Description:</b>	Sets the fault threshold for monitoring the motor temperature for motor temperature model 1 (I2t).		
	The following applies for firmware version < 4.7 SP6:		
	- fault F07011 is output after the fault threshold is exceeded.		
	- fault threshold for r0034 = 100 % * (p0615 - 40) / (p0605 - 40).		
	The following applies from firmware version 4.7 SP6 and p0612.8 = 1:		
	- the fault threshold in p0615 is preset when commissioning.		
	- when a catalog motor with motor temperature model 1 (I2t) is being commissioned for the first time, the threshold value is copied from p0615 to p5391.		
	- p5391 is of significance for evaluating the fault threshold.		

<b>Dependency:</b>	The parameter is only used for motor temperature model 1 (I2t). Refer to: r0034, p0611, p0612 Refer to: F07011, A07012
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.
<b>Note:</b>	The hysteresis is 2 K.

---

<b>p0616[0...n]</b>	<b>Motor overtemperature alarm threshold 1 / Mot temp alarm 1</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [°C]	200.0 [°C]	130.0 [°C]
<b>Description:</b>	Sets the alarm threshold 1 for monitoring the motor temperature.		
<b>Note:</b>	The alarm threshold is not, as for p0604, coupled to the timer p0606. The hysteresis for canceling the fault is 2 K.		

---

<b>p0620[0...n]</b>	<b>Thermal adaptation, stator and rotor resistance / Mot therm_adapt R</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	1
<b>Description:</b>	Sets the thermal adaptation of the stator/primary section resistance and rotor/secondary section resistance according to r0395 and r0396.		
<b>Value:</b>	0: No thermal adaptation of stator and rotor resistances 1: Resistances adapted to the temperatures of the thermal model 2: Resistances adapted to the measured stator winding temperature		
<b>Note:</b>	For p0620 = 1, the following applies: The stator resistance is adapted using the temperature in r0035 and the rotor resistance together with the model temperature in r0633. For p0620 = 2, the following applies: The stator resistance is adapted using the temperature in r0035. If applicable, the rotor temperature for adapting the rotor resistance is calculated from the stator temperature (r0035) as follows: $\theta_{R} = (r0628 + r0625) / (r0627 + r0625) * r0035$ For separately excited synchronous motors and p0620 = 1, p0620 = 2 is internally and automatically used for calculating. There is no thermal model to adapt the damping resistances.		

---

<b>p0621[0...n]</b>	<b>Identification stator resistance after restart / Rst_ident Restart</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(3), T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	0
<b>Description:</b>	Selects the identification of the stator resistance after booting the Control Unit (only for vector control). The identification is used to measure the actual stator resistance and from the ratio of the result of motor data identification (p0350) to the matching ambient temperature (p0625) the actual mean temperature of the stator winding is calculated. The result is used to initialize the thermal motor model. p0621 = 1: Identification of the stator resistance only when the drive is switched on for the first time (pulse enable) after booting the Control Unit. p0621 = 2: Identification of the stator resistance every time the drive is switched on (pulse enable).		

## 2 Parameters

### 2.2 List of parameters

<b>Value:</b>	0: No Rs identification 1: Rs identification after switching-on again 2: Rs identification after switching-on each time
<b>Dependency:</b>	- perform motor data identification (see p1910) with cold motor. - enter ambient temperature at time of motor data identification in p0625. Refer to: p0622, r0623
<b>Notice:</b>	The calculated stator temperature can only be compared with the measured value of a temperature sensor (KTY/PT1000) to a certain extent, as the sensor is usually the warmest point of the stator winding, whereas the measured value of identification reflects the mean value of the stator winding. Furthermore this is a short-time measurement with limited accuracy that is performed during the magnetizing phase of the induction motor.
<b>Note:</b>	The measurement is carried out: - For induction motors - When vector control is active (see p1300) - if a temperature sensor (KTY/PT1000) has not been connected - When the motor is at a standstill when switched on When a flying restart is performed on a rotating motor, the temperatures of the thermal motor model are set to a third of the overtemperatures. This occurs only once, however, when the CU is booted (e.g. after a power failure). If identification is activated, the magnetizing time is determined via p0622 and not via p0346. Quick magnetizing (p1401.6) is de-energized internally and alarm A07416 is displayed. The speed is enabled after completion of the measurement.

---

<b>p0622[0...n]</b>	<b>Motor excitation time for Rs_ident after switching on again / t_excit Rs_id</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	20.000 [s]	0.000 [s]
<b>Description:</b>	Sets the excitation time of the motor for the stator resistance identification after switching on again (restart).		
<b>Dependency:</b>	Refer to: p0621, r0623		
<b>Note:</b>	For p0622 < p0346 the following applies: If identification is activated, the magnetizing time is influenced by p0622. The speed is enabled after measurement is complete, but not before the time in p0346 has elapsed (see r0056 bit 4). The time taken for measurement also depends on the settling time of the measured current. For p0622 >= p0346 the following applies: Parameter p0622 is internally limited to the magnetizing time p0346, so that p0346 represents the maximum possible magnetizing time during identification. The entire measurement period (magnetizing plus measurement settling time plus measuring time) will always be greater than p0346.		

---

<b>r0623</b>	<b>Rs identification stator resistance after switch on again / Rs-id Rs aft sw-on</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ohm]	- [ohm]	- [ohm]
<b>Description:</b>	Displays the stator resistance determined using the Rs identification after switching on again.		
<b>Dependency:</b>	Refer to: p0621, p0622		

<b>p0624[0...n]</b>	<b>Motor temperature offset PT100 / Mot T_offset PT100</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-100.0 [K]	100.0 [K]	0.0 [K]
<b>Description:</b>	Sets the temperature offset for the PT100 measured value. If there is a difference between the motor temperature displayed in r0035 and the actual motor temperature, this offset can be entered in this parameter, thereby compensating for the difference.		
<b>Dependency:</b>	Refer to: p0600, p0601, p0602		
<b>Note:</b>	The parameter only takes effect with the following settings: - Temperature sensor of the power unit detected (p0600 = 11). - Sensor type PT100 selected (p0601 = 5). If the resistance in series with the PT100 (e.g. the cable resistance of the feeder cable) is known, the following conversion formula must be used: Offset in p0624 = Measured resistance in ohms x 2.5 K/Ohm Example: Measured cable resistance = 2 Ohm --> 2 Ohm x 2.5 K / Ohm = 5.0 K		
<b>p0625[0...n]</b>	<b>Motor ambient temperature during commissioning / Mot T_ambient</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8017, 8018
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-40 [°C]	80 [°C]	20 [°C]
<b>Description:</b>	Defines the ambient temperature of the motor for calculating the motor temperature model.		
<b>Dependency:</b>	Refer to: p0350, p0354		
<b>Note:</b>	The parameters for stator and rotor resistance (p0350, p0354) refer to this temperature. If the thermal I2t motor model is activated for permanent-magnet synchronous motors (refer to p0611), p0625 is included in the model calculation if a temperature sensor is not being used (see p0601).		
<b>p0626[0...n]</b>	<b>Motor overtemperature, stator core / Mot T_over core</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8018
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10 [K]	200 [K]	50 [K]
<b>Description:</b>	Defines the rated overtemperature of the stator iron referred to ambient temperature in the motor temperature model 2 (p0612.1 = 1).		
<b>Dependency:</b>	For 1LA5 and 1LA7 motors (p0300 = 15, 17), the parameter is pre-set as a function of p0307 and p0311. Refer to: p0625		
<b>Notice:</b>	When selecting a standard induction motor listed in the catalog (p0300 > 100, p0301 > 10000), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		

## 2 Parameters

### 2.2 List of parameters

---

<b>p0627[0...n]</b>	<b>Motor overtemperature, stator winding / Mot T_over stator</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> SESM, REL <b>Min</b> 15 [K]	<b>Calculated:</b> CALC_MOD_EQU <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> 21_2 <b>Scaling:</b> - <b>Max</b> 200 [K]	<b>Access level:</b> 2 <b>Func. diagram:</b> 8017, 8018 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 80 [K]
<b>Description:</b>	Defines the rated overtemperature of the stator winding referred to the ambient temperature. - motor temperature model 1 (I2t, p0612.0 = 1): The following applies for firmware version < 4.7 SP6 or p0612.8 = 0: p0605 is of significance for the rated temperature. The following applies from firmware version 4.7 SP6 and p0612.8 = 1: Overtemperature at the rated operating point. - motor temperature model 2 (p0612.1 = 1): Overtemperature at the rated operating point.		
<b>Dependency:</b>	For 1LA5 and 1LA7 motors (p0300 = 15, 17), the parameter is pre-set as a function of p0307 and p0311. Refer to: p0625		
<b>Notice:</b>	When selecting a standard induction motor listed in the catalog (p0300 > 100, p0301 > 10000), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300). The signal is not suitable as a process quantity and may only be used as a display quantity.		

---

<b>p0628[0...n]</b>	<b>Motor overtemperature rotor / Mot T_over rotor</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> PMSM, SESM, REL <b>Min</b> 20 [K]	<b>Calculated:</b> CALC_MOD_EQU <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> 21_2 <b>Scaling:</b> - <b>Max</b> 200 [K]	<b>Access level:</b> 3 <b>Func. diagram:</b> 8018 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 100 [K]
<b>Description:</b>	Defines the rated overtemperature of the squirrel cage rotor referred to ambient temperature in the motor temperature model 2 (p0612.1 = 1).		
<b>Dependency:</b>	For 1LA5 and 1LA7 motors (p0300 = 15, 17), the parameter is pre-set as a function of p0307 and p0311. Refer to: p0625		
<b>Notice:</b>	When selecting a standard induction motor listed in the catalog (p0300 > 100, p0301 > 10000), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	When quick commissioning is exited with p3900 > 0, then the parameter is reset if a catalog motor has not been selected (p0300).		

---

<b>p0629[0...n]</b>	<b>Stator resistance reference / R_stator ref</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(3), U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> PMSM, SESM, REL <b>Min</b> 0.00000 [ohm]	<b>Calculated:</b> CALC_MOD_EQU <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> 16_1 <b>Scaling:</b> - <b>Max</b> 2000.00000 [ohm]	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> p0349 <b>Expert list:</b> 1 <b>Factory setting</b> 0.00000 [ohm]
<b>Description:</b>	Reference value for the identification of the stator resistance every time the drive is switched on.		
<b>Dependency:</b>	The measurement of the reference value is activated by the automatic calculation (p0340 = 1, 2), if the following conditions apply: - the motor temperature is at this instant in time less than 30 °C (r0035). - a temperature sensor is not being used (p0601). Refer to: p0621, r0623		

**Note:** The reference value to identify the stator resistance should be manually entered after the first identification (p0629 = r0623). The identification must be realized when the motor is in a cold state, as the value refers to the ambient temperature p0625. The feeder cable resistance should be entered into p0352 before the measurement. The result must be saved after the first measurement so that the reference is available after the CU has powered up. When changing p0350 or p0352, the reference value p0629 should be re-determined.

---

**r0630[0...n] Mot\_temp\_mod ambient temperature / Mod T\_ambient**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8018
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]

**Description:** Displays the ambient temperature of the motor temperature model (models 2 and 3).

---

**r0631[0...n] Mot\_temp\_mod stator iron temperature / Mod T\_stator**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8018, 8019
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]

**Description:** Displays the stator iron temperature of the motor temperature model (models 2 and 3).

**Note:** For motor temperature model 1 (p0612.0 = 1), this parameter is not valid:

---

**r0632[0...n] Mot\_temp\_mod stator winding temperature / Mod T\_winding**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8017, 8018, 8019
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]

**Description:** Displays the stator winding temperature of the motor temperature model.

**Dependency:** Refer to: F07011, A07012, A07910

**Note:** For motor temperature model 1 (p0612.0 = 1), this parameter is not valid:

---

**r0633[0...n] Mot\_temp\_mod rotor temperature / Mod rotor temp**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8018, 8019
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]

**Description:** Displays the rotor temperature of the motor temperature model (models 2 and 3).

**Note:** For motor temperature model 1 (p0612.0 = 1), this parameter is not valid:

<b>p0634[0...n]</b>	<b>Q flux flux constant unsaturated / PSIQ KPSI UNSAT</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [Vsrms]	100.000 [Vsrms]	0.000 [Vsrms]
<b>Description:</b>	The non-linear and cross-coupled quadrature axis flux functions are defined using 4 coefficients. The parameter weights the unsaturated component of the quadrature axis flux function.		
<b>p0635[0...n]</b>	<b>Q flux quadrature axis current constant unsaturated / PSIQ KIQ UNSAT</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Arms]	10000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	The non-linear and cross-coupled quadrature axis flux functions are defined using 4 coefficients. This parameter describes the interdependency of the unsaturated component of the quadrature axis current.		
<b>Dependency:</b>	Refer to: p0634		
<b>p0636[0...n]</b>	<b>Q flux direct axis current constant unsaturated / PSIQ KID UNSAT</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Arms]	10000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	The non-linear and cross-coupled quadrature axis flux functions are defined using 4 coefficients. This parameter describes the interdependency of the unsaturated component of the direct axis current.		
<b>Dependency:</b>	Refer to: p0634		
<b>p0637[0...n]</b>	<b>Q flux flux gradient saturated / PSIQ Grad SAT</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [mH]	10000.00 [mH]	0.00 [mH]
<b>Description:</b>	The non-linear and cross-coupled quadrature axis flux functions are defined using 4 coefficients. This parameter describes the gradients of the saturated component over the quadrature axis current.		
<b>Dependency:</b>	Refer to: p0634, p0635, p0636		

<b>p0640[0...n]</b>	<b>Current limit / Current limit</b>		
VECTOR_G	<b>Can be changed:</b> C2(1, 3), U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> 0.00 [Arms]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 10000.00 [Arms]	<b>Access level:</b> 2 <b>Func. diagram:</b> 5722, 6640 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [Arms]
<b>Description:</b>	Sets the current limit.		
<b>Dependency:</b>	Refer to: r0209, p0323		
<b>Note:</b>	<p>The parameter is part of the quick commissioning (p0010 = 1); this means that it is appropriately pre-assigned when changing p0305, p0323 and p0338.</p> <p>The current limit p0640 is limited to r0209 and p0323. The limit to p0323 is not realized if a value of zero is entered there.</p> <p>The resulting current limit is displayed in r0067 and if required, r0067 is reduced by the thermal model of the Motor Module.</p> <p>The torque and power limits (p1520, p1521, p1530, p1531) matching the current limit are automatically calculated when exiting the quick commissioning using p3900 &gt; 0 or using the automatic parameterization with p0340 = 3, 5. For VECTOR the following applies (p0107):</p> <p>p0640 is limited to 4.0 x p0305.</p> <p>p0640 is pre-assigned for the automatic self commissioning routine (e.g. to 1.5 x p0305, with p0305 = r0207[1]). p0640 must be entered when commissioning the system. This is the reason that p0640 is not calculated by the automatic parameterization when exiting the quick commissioning (p3900 &gt; 0).</p> <p>For SERVO the following applies (p0107):</p> <p>p0640 is pre-assigned as follows using the automatic parameterization (p0340 = 1, p3900 &gt; 0) taking into account the limits r0209 and r0323:</p> <ul style="list-style-type: none"> <li>- for induction motors: p0640 = 1.5 x p0305</li> <li>- for synchronous motors: p0640 = p0338</li> </ul>		
<b>p0641[0...n]</b>	<b>CI: Current limit scaling signal source / I_lim scal s_src</b>		
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 / FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170 <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 6300, 6640 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the signal source for scaling the current limit (p0640).		
<b>p0643[0...n]</b>	<b>Overvoltage protection for synchronous motors / Overvolt_protect</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(3) <b>Data type:</b> Integer16 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the overvoltage protection for synchronous motors in the field-weakening range.		
<b>Value:</b>	0: No measure 1: Voltage Protection Module (VPM)		
<b>Dependency:</b>	Refer to: p0316, p1082, p1231, p9601, p9801 Refer to: F07906, F07907		
<b>Notice:</b>	When the speed limiting is removed, the user is responsible for implementing a suitable overvoltage protection.		
<b>Note:</b>	In the field-weakening range, synchronous motors can, when a fault condition exists, generate high DC link voltages. The following possibilities exist to protect the drive system from being destroyed due to overvoltage: <ul style="list-style-type: none"> <li>- limit the maximum speed (p1082) without any additional protection.</li> </ul>		

## 2 Parameters

### 2.2 List of parameters

The maximum speed without protection is calculated as follows:

$$p1082 \text{ [rpm]} \leq 11.695 * r0297 / p0316 \text{ (or } r0334) \text{ [Nm/A]}$$

- use a Voltage Protection Module (VPM) in conjunction with the function "Safe Torque Off" (p9601, p9801).

When a fault condition exists, the VPM short-circuits the motors. During the short-circuit, the pulses must be suppressed - this means that the terminals for the function "Safe Torque Off" must be connected to the VPM.

- activating the internal voltage protection (IVP) with p1231 = 3.

<b>p0644[0...n]</b>	<b>Current limit excitation induction motor / I<sub>max</sub> excitat ASM</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2, U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	50.0 [%]	300.0 [%]	300.0 [%]
<b>Description:</b>	Maximum excitation current of the induction motor referred to the permissible rated current of the power unit (r0207[0]).		
<b>Dependency:</b>	Only effective for vector control. Refer to: p1401, p1573		
<b>Note:</b>	The parameter is pre-assigned in the automatic calculation for chassis power units.		

<b>p0650[0...n]</b>	<b>Actual motor operating hours / Mot t<sub>oper act</sub></b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [h]	4294967295 [h]	0 [h]
<b>Description:</b>	Displays the operating hours for the corresponding motor. The motor operating time counter continues to run when the pulses are enabled. When the pulse enable is withdrawn, the counter is held and the value saved.		
<b>Dependency:</b>	The following prerequisites must be fulfilled in order to be able to save the operating hours counter in a non-volatile fashion: - firmware with V2.2 or higher. - Control Unit 320 (CU320) with hardware version C or higher (module with NVRAM). Refer to: p0651 Refer to: A01590		
<b>Note:</b>	For p0651 = 0, the operating hours counter is disabled. The operating hours counter in p0650 can only be reset to 0. The operating hours counter only runs with motor data set 0 and 1 (MDS).		

<b>p0651[0...n]</b>	<b>Motor operating hours maintenance interval / Mot t<sub>op maint</sub></b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [h]	150000 [h]	0 [h]
<b>Description:</b>	Sets the service/maintenance intervals in hours for the appropriate motor. An appropriate message is output when the operating hours set here are reached.		
<b>Dependency:</b>	Refer to: p0650 Refer to: A01590		
<b>Note:</b>	For p0651 = 0, the operating hours counter is disabled. When setting p0651 to 0, then p0650 is automatically set to 0. The operating hours counter only runs with motor data set 0 and 1 (MDS).		

<b>p0652[0...n]</b>	<b>Motor stator resistance scaling / Mot R_stator scal</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	300.0 [%]	100.0 [%]
<b>Description:</b>	Sets the factor to evaluate the stator resistance.		
<b>Dependency:</b>	Refer to: p0350, r0370		
<b>p0653[0...n]</b>	<b>Motor stator leakage inductance scaling / Mot L_S_leak scal</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	300.0 [%]	100.0 [%]
<b>Description:</b>	Sets the factor to evaluate the stator leakage induction.		
<b>Dependency:</b>	Refer to: p0356, r0377		
<b>p0655[0...n]</b>	<b>Motor magnetizing inductance d axis saturated scaling / Mot L_m d sat scal</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	300.0 [%]	100.0 [%]
<b>Description:</b>	Factor to evaluate the magnetizing inductance in the direction of the rotor axis (d axis).		
<b>Dependency:</b>	Refer to: p0360, r0382		
<b>p0656[0...n]</b>	<b>Motor magnetizing inductance q axis saturated scaling / Mot L_m q sat scal</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	300.0 [%]	100.0 [%]
<b>Description:</b>	Factor to evaluate the magnetizing inductance quadrature to the rotor axis (q axis).		
<b>Dependency:</b>	Refer to: p0361, r0383		
<b>p0657[0...n]</b>	<b>Motor damping inductance d axis scaling / Mot L_damp d scal</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	300.0 [%]	100.0 [%]
<b>Description:</b>	Factor to evaluate the damping inductance in the direction of the rotor axis (d axis).		
<b>Dependency:</b>	Refer to: p0358, r0380		

<b>p0658[0...n]</b>	<b>Motor damping inductance q axis scaling / Mot L_damp q scal</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	300.0 [%]	100.0 [%]
<b>Description:</b>	Factor to evaluate the damping inductance quadrature to the rotor axis (q axis).		
<b>Dependency:</b>	Refer to: p0359, r0381		

<b>p0659[0...n]</b>	<b>Motor damping resistance d axis scaling / Mot R_damp d scal</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	300.0 [%]	100.0 [%]
<b>Description:</b>	Factor to evaluate the damping resistance in the direction of the rotor axis (d axis).		
<b>Dependency:</b>	Refer to: p0354, r0374		

<b>p0660[0...n]</b>	<b>Motor damping resistance q axis scaling / Mot R_damp q scal</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_EQU	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	300.0 [%]	100.0 [%]
<b>Description:</b>	Factor to evaluate the damping resistance quadrature to the rotor axis (q axis).		
<b>Dependency:</b>	Refer to: p0355, r0375		

<b>p0680[0...7]</b>	<b>Central measuring probe input terminal / Cen meas inp</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	8	0
<b>Description:</b>	Sets the digital input used for the function "central measuring probe evaluation". p0680[0]: Digital input, measuring probe 1 p0680[1]: Digital input, measuring probe 2 ... p0680[7]: Digital input, measuring probe 8		
<b>Value:</b>	0: No meas probe 1: DI/DO 9 (X122.10/X121.8) 2: DI/DO 10 (X122.12/X121.10) 3: DI/DO 11 (X122.13/X121.11) 4: DI/DO 13 (X132.10/X131.2) 5: DI/DO 14 (X132.12/X131.4) 6: DI/DO 15 (X132.13/X131.5) 7: DI/DO 8 (X122.9/X121.7) 8: DI/DO 12 (X132.9/X131.1)		
<b>Dependency:</b>	Refer to: p0728		

**Notice:** Regarding the terminal designation:  
The first designation is valid for CU320, the second for CU310.  
To select the values:  
For CX32, NX10 and NX15, only DI/DO 8, 9, 10, 11 can be selected as fast inputs (refer to the Equipment Manual).

**Note:** DI/DO: Bidirectional Digital Input/Output  
Prerequisite: The DI/DO must be set as input (p0728.x = 0).  
If a parameter change is rejected, a check should be performed as to whether the input terminal is already being used in p0488, p0489, p0493, p0494, p0495, p0580, p2517 or p2518.

---

**p0681**      **BI: Central measuring probe synchronizing signal signal source / Cen meas sync\_sig**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for the synchronizing signal (SYN) of the function "central measuring probe evaluation".  
The signal is used to synchronize the common system time between the master and slave.

**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

---

**p0682**      **CI: Central measuring probe control word signal source / Cen meas STW S\_src**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for the control word of the function "central measuring probe evaluation".

---

**p0684**      **Central measuring probe evaluation technique / Cen meas eval\_tech**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	16	0

**Description:** Sets the evaluation technique for the "central measuring probe evaluation" function.

**Value:**  
0: Measurement with handshake  
1: Measurement without handshake 2 edges  
16: Measurement without handshake more than 2 edges

**Notice:** For p0684 = 16:

This evaluation procedure is only activated after parameter save and POWER ON.

**Note:** During measurement without a handshake, the probe may have a higher evaluation frequency.

The setting "Measurement without handshake" must be supported by the higher-level control. This setting cannot be used for SIMOTION D with integrated SINAMICS or with CX32.

For p0684 = 0:

Changing this evaluation procedure to p0684 = 1 is possible in the RUN state.

Changing this evaluation procedure to p0684 = 16 is only activated after parameter save and POWER ON.

Permissible combinations in p0922 are:

p0922 = 391, 392, 393, 394

For p0684 = 1:

Changing this evaluation procedure to p0684 = 0 is possible in the RUN state.

Changing this evaluation procedure to p0684 = 16 is only activated after parameter save and POWER ON.

## 2 Parameters

### 2.2 List of parameters

Permissible combinations in p0922 are:

p0922 = 391, 392, 393, 394

For p0684 = 16:

Changing this evaluation procedure to p0684 = 0 or to p0684 = 1 is only activated after parameter save and POWER ON.

Permissible combinations in p0922 are:

p0922 = 395

<b>r0685</b>		<b>Central measuring probe control word display / Cen meas STW disp</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the control word for the function "central measuring probe evaluation".				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Falling edge measuring probe 1	Yes	No	-
	01	Falling edge measuring probe 2	Yes	No	-
	02	Falling edge measuring probe 3	Yes	No	-
	03	Falling edge measuring probe 4	Yes	No	-
	04	Falling edge measuring probe 5	Yes	No	-
	05	Falling edge measuring probe 6	Yes	No	-
	06	Falling edge measuring probe 7	Yes	No	-
	07	Falling edge measuring probe 8	Yes	No	-
	08	Rising edge measuring probe 1	Yes	No	-
	09	Rising edge measuring probe 2	Yes	No	-
	10	Rising edge measuring probe 3	Yes	No	-
	11	Rising edge measuring probe 4	Yes	No	-
	12	Rising edge measuring probe 5	Yes	No	-
	13	Rising edge measuring probe 6	Yes	No	-
	14	Rising edge measuring probe 7	Yes	No	-
	15	Rising edge measuring probe 8	Yes	No	-

<b>r0686[0...7]</b>		<b>CO: Central measuring probe measuring time rising edge / CenMeas t_meas 0/1</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the measuring time for a rising edge at the digital input for the "central measuring probe evaluation" function. The measuring time is specified as 16-bit value with a resolution of 0.25 µs. r0686[0]: Measuring time, rising edge measuring probe 1 r0686[1]: Measuring time, rising edge measuring probe 2 r0686[2]: Measuring time, rising edge measuring probe 3 r0686[3]: Measuring time, rising edge measuring probe 4 r0686[4]: Measuring time, rising edge measuring probe 5 r0686[5]: Measuring time, rising edge measuring probe 6 r0686[6]: Measuring time, rising edge measuring probe 7 r0686[7]: Measuring time, rising edge measuring probe 8			
<b>Note:</b>	The parameter is only active for the evaluation procedure p0684 = 0, 1. For p0684 = 16, r0686[0...7] = 0 is displayed.			

**r0687[0...7] CO: Central measuring probe measuring time falling edge / CenMeas t\_meas 1/0**CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP**Can be changed:** -**Calculated:** -**Access level:** 3**Data type:** Unsigned16**Dyn. index:** -**Func. diagram:** -**P-Group:** Displays, signals**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Displays the measuring time for a falling edge at the digital input for the "central measuring probe evaluation" function.

The measuring time is specified as 16-bit value with a resolution of 0.25 µs.

r0687[0]: Measuring time, falling edge measuring probe 1

r0687[1]: Measuring time, falling edge measuring probe 2

r0687[2]: Measuring time, falling edge measuring probe 3

r0687[3]: Measuring time, falling edge measuring probe 4

r0687[4]: Measuring time, falling edge measuring probe 5

r0687[5]: Measuring time, falling edge measuring probe 6

r0687[6]: Measuring time, falling edge measuring probe 7

r0687[7]: Measuring time, falling edge measuring probe 8

**Note:**

The parameter is only active for the evaluation procedure p0684 = 0, 1.

For p0684 = 16, r0687[0...7] = 0 is displayed.

**r0688 CO: Central measuring probe status word display / Cen meas ZSW disp**CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP**Can be changed:** -**Calculated:** -**Access level:** 3**Data type:** Unsigned16**Dyn. index:** -**Func. diagram:** -**P-Group:** Displays, signals**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Displays the status word for the function "central measuring probe evaluation".

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Digital input measuring probe 1	High	Low	-
01	Digital input measuring probe 2	High	Low	-
02	Digital input measuring probe 3	High	Low	-
03	Digital input measuring probe 4	High	Low	-
04	Digital input measuring probe 5	High	Low	-
05	Digital input measuring probe 6	High	Low	-
06	Digital input measuring probe 7	High	Low	-
07	Digital input measuring probe 8	High	Low	-
08	Sub-sampling measuring probe 1	High	Low	-
09	Sub-sampling measuring probe 2	High	Low	-
10	Sub-sampling measuring probe 3	High	Low	-
11	Sub-sampling measuring probe 4	High	Low	-
12	Sub-sampling measuring probe 5	High	Low	-
13	Sub-sampling measuring probe 6	High	Low	-
14	Sub-sampling measuring probe 7	High	Low	-
15	Sub-sampling measuring probe 8	High	Low	-

## 2 Parameters

### 2.2 List of parameters

<b>p0690[0...n]</b>	<b>Brushless excitation rated current / BLE I<sub>rated</sub></b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(3), T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [A]	100.00 [A]	0.00 [A]
<b>Description:</b>	Sets the rated current of the excitation equipment for the excitation machine for brushless excitation.		
<b>Dependency:</b>	Refer to: r1626		
<b>Notice:</b>	For a value = 0, brushless excitation is not activated.		
<b>Note:</b>	BLE: brushless excitation		
<b>p0693[0...n]</b>	<b>Brushless excitation inductance d-axis saturated / BLE L<sub>d sat</sub></b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000.00000 [mH]	1000.00000 [mH]	0.00000 [mH]
<b>Description:</b>	Sets the saturated inductance of the excitation machine for brushless excitation. A negative value can also be entered as part of optimizing coefficients.		
<b>Notice:</b>	For a value = 0, brushless excitation is not activated.		
<b>Note:</b>	BLE: brushless excitation		
<b>p0696[0...n]</b>	<b>Brushless excitation ratio / BLE ratio</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	1000.000	0.000
<b>Description:</b>	Sets the ratio between the stator and rotor of the excitation machine for brushless excitation. The ratio of the rated excitation current of the main machine to the associated excitation current of the excitation machine at the rated point of the machine is entered.		
<b>Dependency:</b>	Refer to: p0311, p0390		
<b>Notice:</b>	For a value = 0, brushless excitation is not activated.		
<b>Note:</b>	BLE: brushless excitation		
<b>p0697[0...n]</b>	<b>Brushless excitation number of pole pairs / BLE PolePairNo</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(3), T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	20	0
<b>Description:</b>	Sets the pole pair number of the exciter machine for brushless excitation.		
<b>Notice:</b>	For a value = 0, brushless excitation is not activated.		
<b>Note:</b>	BLE: brushless excitation		

<b>p0698[0...n]</b>	<b>Brushless excitation resistance / BLE exc_resist</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-10.00000 [ohm]	10.00000 [ohm]	0.00000 [ohm]
<b>Description:</b>	Sets the ohmic excitation resistance of the main exciter machine for brushless excitation. When the rotor resistance is known, this value can be added to the excitation resistance.		
<b>Notice:</b>	For a value = 0, brushless excitation is not activated.		
<b>Note:</b>	BLE: brushless excitation		
<b>p0700[0...n]</b>	<b>Macro Binector Input (BI) / Macro BI</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> -
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	999999	0
<b>Description:</b>	Runs the corresponding macro files. The binector inputs of the corresponding command data set are appropriately interconnected. The selected macro file must be available on the memory card/device memory. Example: p0700 = 6 --> macro file PM000006.ACX is run.		
<b>Dependency:</b>	Refer to: p0015, p1000, p1500, r8571		
<b>Notice:</b>	No errors were issued during quick commissioning (p3900 = 1) when writing to parameters of the QUICK_IBN group! When executing a specific macro, the corresponding programmed settings are made and become active.		
<b>Note:</b>	The macros in the specified directory are displayed in r8571. r8571 is not in the expert list of the commissioning software. Macros available as standard are described in the technical documentation of the particular product. BI: Binector Input CDS: Command Data Set		
<b>p0700</b>	<b>Macro Binector Input (BI) for TMs / Macro BI TM</b>		
TM31, TB30	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	999999	0
<b>Description:</b>	Runs the corresponding macro files. The selected macro file must be available on the memory card/device memory. Example: p0700 = 6 --> macro file PM000006.ACX is run.		
<b>Dependency:</b>	Refer to: r8571		
<b>Notice:</b>	No errors were issued during quick commissioning (p3900 = 1) when writing to parameters of the QUICK_IBN group! When executing a specific macro, the corresponding programmed settings are made and become active.		
<b>Note:</b>	The macros in the specified directory are displayed in r8571. r8571 is not in the expert list of the commissioning software. Macros available as standard are described in the technical documentation of the particular product. BI: Binector Input CDS: Command Data Set		

<b>r0721</b>	<b>CU digital inputs terminal actual value / CU DI term act val</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2119, 2120, 2121, 2130, 2131, 2132, 2133
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the actual value at the digital inputs.  
This means that the actual input signal can be checked at terminal DI x or DI/DO x prior to switching from the simulation mode (p0795.x = 1) to terminal mode (p0795.x = 0).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DI 0 (X122.1/X121.1)	High	Low	-
	01	DI 1 (X122.2/X121.2)	High	Low	-
	02	DI 2 (X122.3/X121.3)	High	Low	-
	03	DI 3 (X122.4/X121.4)	High	Low	-
	04	DI 4 (X132.1 / -)	High	Low	-
	05	DI 5 (X132.2 / -)	High	Low	-
	06	DI 6 (X132.3 / -)	High	Low	-
	07	DI 7 (X132.4 / -)	High	Low	-
	08	DI/DO 8 (X122.9/X121.7)	High	Low	-
	09	DI/DO 9 (X122.10/X121.8)	High	Low	-
	10	DI/DO 10 (X122.12/X121.10)	High	Low	-
	11	DI/DO 11 (X122.13/X121.11)	High	Low	-
	12	DI/DO 12 (X132.9/X131.1)	High	Low	-
	13	DI/DO 13 (X132.10/X131.2)	High	Low	-
	14	DI/DO 14 (X132.12/X131.4)	High	Low	-
	15	DI/DO 15 (X132.13/X131.5)	High	Low	-
	16	DI 16 (X122.5/X120.3)	High	Low	-
	17	DI 17 (X122.6/X120.4)	High	Low	-
	20	DI 20 (X132.5/X120.9)	High	Low	-
	21	DI 21 (X132.6/X120.10)	High	Low	-

**Notice:** Regarding the terminal designation:  
The first designation is valid for CU320, the second for CU310.

**Note:** If a DI/DO is parameterized as output (p0728.x = 1), then r0721.x = 0 is displayed.

DI: Digital Input  
DI/DO: Bidirectional Digital Input/Output

<b>r0722.0...21</b>	<b>CO/BO: CU digital inputs status / CU DI status</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2119, 2120, 2121, 2130, 2131, 2132, 2133
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and BICO output for the status of the digital inputs.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	DI 0 (X122.1/X121.1)	High	Low	-
	01	DI 1 (X122.2/X121.2)	High	Low	-
	02	DI 2 (X122.3/X121.3)	High	Low	-
	03	DI 3 (X122.4/X121.4)	High	Low	-
	04	DI 4 (X132.1 / -)	High	Low	-
	05	DI 5 (X132.2 / -)	High	Low	-
	06	DI 6 (X132.3 / -)	High	Low	-
	07	DI 7 (X132.4 / -)	High	Low	-
	08	DI/DO 8 (X122.9/X121.7)	High	Low	-
	09	DI/DO 9 (X122.10/X121.8)	High	Low	-

10	DI/DO 10 (X122.12/X121.10)	High	Low	-
11	DI/DO 11 (X122.13/X121.11)	High	Low	-
12	DI/DO 12 (X132.9/X131.1)	High	Low	-
13	DI/DO 13 (X132.10/X131.2)	High	Low	-
14	DI/DO 14 (X132.12/X131.4)	High	Low	-
15	DI/DO 15 (X132.13/X131.5)	High	Low	-
16	DI 16 (X122.5/X120.3)	High	Low	-
17	DI 17 (X122.6/X120.4)	High	Low	-
20	DI 20 (X132.5/X120.9)	High	Low	-
21	DI 21 (X132.6/X120.10)	High	Low	-

**Dependency:** Refer to: r0723

**Notice:** Regarding the terminal designation:  
The first designation is valid for CU320, the second for CU310.

**Note:** DI: Digital Input  
DI/DO: Bidirectional Digital Input/Output

**r0723.0...21****CO/BO: CU digital inputs status inverted / CU DI status inv**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2119, 2120, 2121, 2130, 2131, 2132, 2133
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and BICO output for the inverted status of the digital inputs.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 0 (X122.1/X121.1)	High	Low	-
	01	DI 1 (X122.2/X121.2)	High	Low	-
	02	DI 2 (X122.3/X121.3)	High	Low	-
	03	DI 3 (X122.4/X121.4)	High	Low	-
	04	DI 4 (X132.1 / -)	High	Low	-
	05	DI 5 (X132.2 / -)	High	Low	-
	06	DI 6 (X132.3 / -)	High	Low	-
	07	DI 7 (X132.4 / -)	High	Low	-
	08	DI/DO 8 (X122.9/X121.7)	High	Low	-
	09	DI/DO 9 (X122.10/X121.8)	High	Low	-
	10	DI/DO 10 (X122.12/X121.10)	High	Low	-
	11	DI/DO 11 (X122.13/X121.11)	High	Low	-
	12	DI/DO 12 (X132.9/X131.1)	High	Low	-
	13	DI/DO 13 (X132.10/X131.2)	High	Low	-
	14	DI/DO 14 (X132.12/X131.4)	High	Low	-
	15	DI/DO 15 (X132.13/X131.5)	High	Low	-
	16	DI 16 (X122.5/X120.3)	High	Low	-
	17	DI 17 (X122.6/X120.4)	High	Low	-
	20	DI 20 (X132.5/X120.9)	High	Low	-
	21	DI 21 (X132.6/X120.10)	High	Low	-

**Dependency:** Refer to: r0722

**Notice:** Regarding the terminal designation:  
The first designation is valid for CU320, the second for CU310.

**Note:** DI: Digital Input  
DI/DO: Bidirectional Digital Input/Output

## 2 Parameters

### 2.2 List of parameters

<b>p0728</b>		<b>CU set input or output / CU DI or DO</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2119, 2030, 2031, 2130, 2131, 2132, 2133		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 0000 0000 bin		
<b>Description:</b>	Sets the bidirectional digital inputs/outputs as an input or output.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	08	DI/DO 8 (X122.9/X121.7)	Output	Input	-
	09	DI/DO 9 (X122.10/X121.8)	Output	Input	-
	10	DI/DO 10 (X122.12/X121.10)	Output	Input	-
	11	DI/DO 11 (X122.13/X121.11)	Output	Input	-
	12	DI/DO 12 (X132.9/X131.1)	Output	Input	-
	13	DI/DO 13 (X132.10/X131.2)	Output	Input	-
	14	DI/DO 14 (X132.12/X131.4)	Output	Input	-
	15	DI/DO 15 (X132.13/X131.5)	Output	Input	-
<b>Notice:</b>	Regarding the terminal designation: The first designation is valid for CU320, the second for CU310.				
<b>Note:</b>	DI/DO: Bidirectional Digital Input/Output				
<b>r0729</b>		<b>CU digital outputs access authority / CU DO acc_auth</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2030, 2031, 2130, 2131, 2132, 2133		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the access authority at the digital outputs. Bit = 1: The control has access authority to the digital output via PROFIBUS or direct access. Bit = 0: The drive has access authority to the digital output or the digital input/output is not set as digital output or is not available.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	08	DI/DO 8 (X122.9/X121.7)	High	Low	-
	09	DI/DO 9 (X122.10/X121.8)	High	Low	-
	10	DI/DO 10 (X122.12/X121.10)	High	Low	-
	11	DI/DO 11 (X122.13/X121.11)	High	Low	-
	12	DI/DO 12 (X132.9/X131.1)	High	Low	-
	13	DI/DO 13 (X132.10/X131.2)	High	Low	-
	14	DI/DO 14 (X132.12/X131.4)	High	Low	-
	15	DI/DO 15 (X132.13/X131.5)	High	Low	-
<b>Dependency:</b>	Refer to: p0728, p0738, p0739, p0740, p0741, p0742, p0743, p0744, p0745, r0747, p0748				
<b>Notice:</b>	Regarding the terminal designation: The first designation is valid for CU320, the second for CU310.				
<b>Note:</b>	The DI/DO must be connected as output (p0728). DI/DO: Bidirectional Digital Input/Output				

---

<b>p0738</b>	<b>BI: CU signal source for terminal DI/DO 8 / CU S_src DI/DO 8</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2119, 2130
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for terminal DI/DO 8 (X122.9 / X121.7). Regarding the terminal designation: The first designation is valid for CU320, the second for CU310.		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	Prerequisite: The DI/DO must be set as an output (p0728.8 = 1). DI/DO: Bidirectional Digital Input/Output		

---

<b>p0739</b>	<b>BI: CU signal source for terminal DI/DO 9 / CU S_src DI/DO 9</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2130
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for terminal DI/DO 9 (X122.10 / X121.8). Regarding the terminal designation: The first designation is valid for CU320, the second for CU310.		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	Prerequisite: The DI/DO must be set as an output (p0728.9 = 1). DI/DO: Bidirectional Digital Input/Output		

---

<b>p0740</b>	<b>BI: CU signal source for terminal DI/DO 10 / CU S_src DI/DO 10</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2131
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for terminal DI/DO 10 (X122.12 / X121.10). Regarding the terminal designation: The first designation is valid for CU320, the second for CU310.		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	Prerequisite: The DI/DO must be set as an output (p0728.10 = 1). DI/DO: Bidirectional Digital Input/Output		

---

<b>p0741</b>	<b>BI: CU signal source for terminal DI/DO 11 / CU S_src DI/DO 11</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2119, 2131
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for terminal DI/DO 11 (X122.13 / X121.11). Regarding the terminal designation: The first designation is valid for CU320, the second for CU310.		

## 2 Parameters

### 2.2 List of parameters

**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:** Prerequisite: The DI/DO must be set as an output (p0728.11 = 1).  
DI/DO: Bidirectional Digital Input/Output

---

<b>p0742</b>	<b>BI: CU signal source for terminal DI/DO 12 / CU S_src DI/DO 12</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2119, 2132
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for terminal DI/DO 12 (X132.9 / X131.1).

Regarding the terminal designation:

The first designation is valid for CU320, the second for CU310.

**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:** Prerequisite: The DI/DO must be set as an output (p0728.12 = 1).  
DI/DO: Bidirectional Digital Input/Output

---

<b>p0743</b>	<b>BI: CU signal source for terminal DI/DO 13 / CU S_src DI/DO 13</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2132
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for terminal DI/DO 13 (X132.10 / X131.2).

Regarding the terminal designation:

The first designation is valid for CU320, the second for CU310.

**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:** Prerequisite: The DI/DO must be set as an output (p0728.13 = 1).  
DI/DO: Bidirectional Digital Input/Output

---

<b>p0744</b>	<b>BI: CU signal source for terminal DI/DO 14 / CU S_src DI/DO 14</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2133
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for terminal DI/DO 14 (X132.12 / X131.4).

Regarding the terminal designation:

The first designation is valid for CU320, the second for CU310.

**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:** Prerequisite: The DI/DO must be set as an output (p0728.14 = 1).  
DI/DO: Bidirectional Digital Input/Output

<b>p0745</b>		<b>BI: CU signal source for terminal DI/DO 15 / CU S_src DI/DO 15</b>	
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2119, 2133
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for terminal DI/DO 15 (X132.13 / X131.5you). Regarding the terminal designation: The first designation is valid for CU320, the second for CU310.		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	Prerequisite: The DI/DO must be set as an output (p0728.15 = 1). DI/DO: Bidirectional Digital Input/Output		

<b>r0747</b>		<b>CU digital outputs status / CU DO status</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2130, 2131, 2132, 2133		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status of digital outputs.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	08	DI/DO 8 (X122.9/X121.7)	High	Low	-
	09	DI/DO 9 (X122.10/X121.8)	High	Low	-
	10	DI/DO 10 (X122.12/X121.10)	High	Low	-
	11	DI/DO 11 (X122.13/X121.11)	High	Low	-
	12	DI/DO 12 (X132.9/X131.1)	High	Low	-
	13	DI/DO 13 (X132.10/X131.2)	High	Low	-
	14	DI/DO 14 (X132.12/X131.4)	High	Low	-
	15	DI/DO 15 (X132.13/X131.5)	High	Low	-
<b>Notice:</b>	Regarding the terminal designation: The first designation is valid for CU320, the second for CU310.				
<b>Note:</b>	Inversion using p0748 has been taken into account. DI/DO: Bidirectional Digital Input/Output				

<b>p0748</b>		<b>CU invert digital outputs / CU DO inv</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2030, 2031, 2130, 2131, 2132, 2133		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 0000 0000 bin		
<b>Description:</b>	Setting to invert the signals at the digital outputs.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	08	DI/DO 8 (X122.9/X121.7)	Inverted	Not inverted	-
	09	DI/DO 9 (X122.10/X121.8)	Inverted	Not inverted	-
	10	DI/DO 10 (X122.12/X121.10)	Inverted	Not inverted	-
	11	DI/DO 11 (X122.13/X121.11)	Inverted	Not inverted	-
	12	DI/DO 12 (X132.9/X131.1)	Inverted	Not inverted	-
	13	DI/DO 13 (X132.10/X131.2)	Inverted	Not inverted	-
	14	DI/DO 14 (X132.12/X131.4)	Inverted	Not inverted	-
	15	DI/DO 15 (X132.13/X131.5)	Inverted	Not inverted	-

## 2 Parameters

### 2.2 List of parameters

**Notice:** If telegram 39x is set via p0922 in SINAMICS Integrated, the inversion of the output has no effect.

Regarding the terminal designation:

The first designation is valid for CU320, the second for CU310.

**Note:** DI/DO: Bidirectional Digital Input/Output

---

<b>p0771[0...2]</b>	<b>CI: Test sockets signal source / Test skt S_src</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Integer16 <b>P-Group:</b> Terminals <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> -	<b>Access level:</b> 2 <b>Func. diagram:</b> 8134 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0

**Description:** Sets the signal source for the signal to be output at the test sockets.

**Index:**  
[0] = T0  
[1] = T1  
[2] = T2

**Dependency:** Can only be set when p0776 = 99.  
Refer to: r0772, r0774, p0776, p0777, p0778, p0779, p0780, p0783, p0784, r0786

---

<b>r0772[0...2]</b>	<b>Test sockets output signal / TestSktsSignalVal</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Terminals <b>Not for motor type:</b> - <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 8134 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]

**Description:** Displays the actual value of the signal to be output.

**Index:**  
[0] = T0  
[1] = T1  
[2] = T2

**Dependency:** Refer to: p0771, r0774, p0776, p0777, p0778, p0779, p0780, p0783, p0784, r0786

---

<b>r0774[0...2]</b>	<b>Test sockets output voltage / TestSkts U_output</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Terminals <b>Not for motor type:</b> - <b>Min</b> - [V]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [V]	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [V]

**Description:** Displays the actual output voltage for the test sockets.

**Index:**  
[0] = T0  
[1] = T1  
[2] = T2

**Dependency:** Refer to: p0771, r0772, p0776, p0777, p0778, p0779, p0780, p0783, p0784, r0786

<b>p0776[0...2]</b>		<b>Test socket mode / Test skt mode</b>	
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8134
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	96	99	99
<b>Description:</b>	Sets the mode for the test sockets.		
<b>Value:</b>	96: Physical address (32-bit integer signal unsigned) 97: Physical address (32-bit integer signal) 98: Physical address (32-bit floating-point signal) 99: BICO signal		
<b>Index:</b>	[0] = T0 [1] = T1 [2] = T2		
<b>Dependency:</b>	Refer to: p0771, r0772, r0774, p0777, p0778, p0779, p0780, p0783, p0784, r0786, p0788, p0789, r0790		

<b>p0777[0...2]</b>		<b>Test socket characteristic value x1 / Test skt char x1</b>	
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8134
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-100000.00 [%]	100000.00 [%]	0.00 [%]
<b>Description:</b>	The scaling characteristic for the test sockets is defined using two points. This parameter specifies the x coordinate (percentage) of the first point on the characteristic.		
<b>Index:</b>	[0] = T0 [1] = T1 [2] = T2		
<b>Dependency:</b>	Can only be set when p0776 = 99. Refer to: p0778, p0779, p0780, r0786		
<b>Note:</b>	The value 0.00 % corresponds to 2.49 V.		

<b>p0778[0...2]</b>		<b>Test socket characteristic value y1 / Test skt char y1</b>	
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8134
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [V]	4.98 [V]	2.49 [V]
<b>Description:</b>	The scaling characteristic for the test sockets is defined using two points. This parameter specifies the y coordinate (output voltage) of the first point on the characteristic.		
<b>Index:</b>	[0] = T0 [1] = T1 [2] = T2		
<b>Dependency:</b>	Can only be set when p0776 = 99. Refer to: p0777, p0779, p0780, r0786		

## 2 Parameters

### 2.2 List of parameters

---

<b>p0779[0...2]</b>	<b>Test socket characteristic value x2 / Test skt char x2</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Terminals <b>Not for motor type:</b> - <b>Min</b> -100000.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 427.9E9 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 8134 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 100.00 [%]
<b>Description:</b>	The scaling characteristic for the test sockets is defined using two points. This parameter specifies the x coordinate (percentage) of the second point on the characteristic.		
<b>Index:</b>	[0] = T0 [1] = T1 [2] = T2		
<b>Dependency:</b>	Can only be set when p0776 = 99. Refer to: p0777, p0778, p0780, r0786		
<b>Note:</b>	The value 100.00 % corresponds to 4.98 V.		
<hr/>			
<b>p0780[0...2]</b>	<b>Test socket characteristic value y2 / Test skt char y2</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Terminals <b>Not for motor type:</b> - <b>Min</b> 0.00 [V]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 4.98 [V]	<b>Access level:</b> 2 <b>Func. diagram:</b> 8134 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 4.98 [V]
<b>Description:</b>	The scaling characteristic for the test sockets is defined using two points. This parameter specifies the y coordinate (output voltage) of the second point on the characteristic.		
<b>Index:</b>	[0] = T0 [1] = T1 [2] = T2		
<b>Dependency:</b>	Can only be set when p0776 = 99. Refer to: p0777, p0778, p0779, r0786		
<hr/>			
<b>p0783[0...2]</b>	<b>Test sockets offset / Test skt offset</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Terminals <b>Not for motor type:</b> - <b>Min</b> -4.98 [V]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 4.98 [V]	<b>Access level:</b> 2 <b>Func. diagram:</b> 8134 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [V]
<b>Description:</b>	Sets an additional offset for the test sockets.		
<b>Index:</b>	[0] = T0 [1] = T1 [2] = T2		
<hr/>			
<b>p0784[0...2]</b>	<b>Test socket limit on/off / TestSktLim on/off</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> Terminals <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 2 <b>Func. diagram:</b> 8134 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the limit for a signal to be output via test sockets.		
<b>Value:</b>	0: Limiting off 1: Limiting on		

<b>Index:</b>	[0] = T0 [1] = T1 [2] = T2
<b>Note:</b>	Limiting on: If signals are output outside the permissible measuring range, the signal is limited to 4.98 V or to 0 V. Limiting off: If signals are output outside the permissible measuring range, this causes signal overflow. In the case of signal overflow, the signal jumps from 0 V to 4.98 V or from 4.98 V to 0 V.

**r0786[0...2]****Test socket scaling per volt / TestSktScale/Volt**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8134
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the scaling of the signal to be output.  
A change in the output voltage by 1 volt corresponds to the value in this parameter. The units are determined by the interconnected test signal.

**Index:** [0] = T0  
[1] = T1  
[2] = T2

**Dependency:** Refer to: p0771, r0772, r0774, p0777, p0778, p0779, p0780, p0783, p0784

**Note:** Example:  
r0786[0] = 1500.0 and the measuring signal is r0063 (CO: Actual speed smoothed [rpm]).  
A change of 1 V at the output of test socket T0 corresponds to 1500.0 [rpm].

**p0788[0...2]****Test sockets physical address / Test skt PhyAddr**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 bin	1111 1111 1111 1111 1111 1111 1111 1111 bin	0000 bin

**Description:** Sets the physical address to output signals via the test sockets.

**Index:** [0] = T0  
[1] = T1  
[2] = T2

**Dependency:** Changes only become effective if p0776 does not equal 99.  
Refer to: p0789, r0790

**p0789[0...2]****Test sockets physical address gain / TestSktPhyAddrGain**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-340.28235E36	340.28235E36	1.00000

**Description:** Sets the gain of a signal output of a physical address via test sockets.

**Index:** [0] = T0  
[1] = T1  
[2] = T2

**Dependency:** Changes only become effective if p0776 does not equal 99.  
Refer to: p0788

<b>r0790[0...2]</b>	<b>Test sockets physical address signal value / TestSocketsPhyAddrVal</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the actual value of a signal determined via a physical address.				
<b>Index:</b>	[0] = T0 [1] = T1 [2] = T2				
<b>Dependency:</b>	Only effective when p0776 = 97 or p0776 = 96. Refer to: p0788				
<b>p0795</b>	<b>CU digital inputs simulation mode / CU DI simulation</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2020, 2030, 2031, 2100, 2119, 2120, 2130, 2131, 2132, 2133		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin		
<b>Description:</b>	Sets the simulation mode for digital inputs.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 0 (X122.1/X121.1)	Simulation	Terminal eval	-
	01	DI 1 (X122.2/X121.2)	Simulation	Terminal eval	-
	02	DI 2 (X122.3/X121.3)	Simulation	Terminal eval	-
	03	DI 3 (X122.4/X121.4)	Simulation	Terminal eval	-
	04	DI 4 (X132.1 / -)	Simulation	Terminal eval	-
	05	DI 5 (X132.2 / -)	Simulation	Terminal eval	-
	06	DI 6 (X132.3 / -)	Simulation	Terminal eval	-
	07	DI 7 (X132.4 / -)	Simulation	Terminal eval	-
	08	DI/DO 8 (X122.9/X121.7)	Simulation	Terminal eval	-
	09	DI/DO 9 (X122.10/X121.8)	Simulation	Terminal eval	-
	10	DI/DO 10 (X122.12/X121.10)	Simulation	Terminal eval	-
	11	DI/DO 11 (X122.13/X121.11)	Simulation	Terminal eval	-
	12	DI/DO 12 (X132.9/X131.1)	Simulation	Terminal eval	-
	13	DI/DO 13 (X132.10/X131.2)	Simulation	Terminal eval	-
	14	DI/DO 14 (X132.12/X131.4)	Simulation	Terminal eval	-
	15	DI/DO 15 (X132.13/X131.5)	Simulation	Terminal eval	-
	16	DI 16 (X122.5/X120.3)	Simulation	Terminal eval	-
	17	DI 17 (X122.6/X120.4)	Simulation	Terminal eval	-
	20	DI 20 (X132.5/X120.9)	Simulation	Terminal eval	-
	21	DI 21 (X132.6/X120.10)	Simulation	Terminal eval	-
<b>Dependency:</b>	The setpoint for the input signals is specified using p0796. Refer to: p0796, p9620				
<b>Notice:</b>	If a digital input is used as signal source for the function "STO" (BI: p9620) then it is not permissible to select the simulation mode and this is rejected. Regarding the terminal designation: The first designation stands for CU320, the second for CU310.				
<b>Note:</b>	This parameter is not saved when data is backed-up (p0971, p0977). DI: Digital Input DI/DO: Bidirectional Digital Input/Output				

<b>p0796</b>		<b>CU digital inputs simulation mode setpoint / CU DI simul setp</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2020, 2030, 2031, 2100, 2119, 2120, 2130, 2131, 2132, 2133	
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin	

**Description:** Sets the setpoint for the input signals in the digital input simulation mode.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 0 (X122.1/X121.1)	High	Low	-
	01	DI 1 (X122.2/X121.2)	High	Low	-
	02	DI 2 (X122.3/X121.3)	High	Low	-
	03	DI 3 (X122.4/X121.4)	High	Low	-
	04	DI 4 (X132.1 / -)	High	Low	-
	05	DI 5 (X132.2 / -)	High	Low	-
	06	DI 6 (X132.3 / -)	High	Low	-
	07	DI 7 (X132.4 / -)	High	Low	-
	08	DI/DO 8 (X122.9/X121.7)	High	Low	-
	09	DI/DO 9 (X122.10/X121.8)	High	Low	-
	10	DI/DO 10 (X122.12/X121.10)	High	Low	-
	11	DI/DO 11 (X122.13/X121.11)	High	Low	-
	12	DI/DO 12 (X132.9/X131.1)	High	Low	-
	13	DI/DO 13 (X132.10/X131.2)	High	Low	-
	14	DI/DO 14 (X132.12/X131.4)	High	Low	-
	15	DI/DO 15 (X132.13/X131.5)	High	Low	-
	16	DI 16 (X122.5/X120.3)	High	Low	-
	17	DI 17 (X122.6/X120.4)	High	Low	-
	20	DI 20 (X132.5/X120.9)	High	Low	-
	21	DI 21 (X132.6/X120.10)	High	Low	-

**Dependency:** The simulation of a digital input is selected using p0795.  
Refer to: p0795

**Notice:** Regarding the terminal designation:  
The first designation is valid for CU320, the second for CU310.

**Note:** This parameter is not saved when data is backed-up (p0971, p0977).  
DI: Digital Input  
DI/DO: Bidirectional Digital Input/Output

<b>p0799[0...2]</b>		<b>CU inputs/outputs sampling time / CU I/O t_sampl</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2020, 2030, 2031	
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.00 [µs]	5000.00 [µs]	4000.00 [µs]	

**Description:** Sets the sampling time for the inputs and outputs of the Control Unit.

**Index:** [0] = Digital inputs/outputs (DI/DO)  
[1] = Not available - analog inputs (AI)  
[2] = Not available - analog outputs (AO)

**Dependency:** The parameter can only be modified for p0009 = 3, 29.  
Refer to: p0009

**Note:** The changed sampling time is immediately effective after a completed sub-boot (p0009 -> 0).

---

<b>p0806</b>	<b>BI: Inhibit master control / PcCtrl inhibit</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to block the master control.		
<b>Dependency:</b>	Refer to: r0807		
<b>Note:</b>	The commissioning software (drive control panel) uses the master control, for example.		

---

<b>r0807.0</b>	<b>BO: Master control active / PcCtrl active</b>			
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays what has the master control.			
	The drive can be controlled via the BICO interconnection or from external (e.g. the commissioning software).			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Master control active	Yes	No
				<b>FP</b>
				5030, 6031
<b>Dependency:</b>	Refer to: p0806			
<b>Notice:</b>	The master control only influences control word 1 and speed setpoint 1. Other control word/setpoints can be transferred from another automation device.			
<b>Note:</b>	Bit 0 = 0: BICO interconnection active Bit 0 = 1: Master control for PC/AOP The commissioning software (drive control panel) uses the master control, for example.			

---

<b>p0809[0...2]</b>	<b>Copy Command Data Set CDS / Copy CDS</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8560
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	15	0
<b>Description:</b>	Copies one Command Data Set (CDS) into another.		
<b>Index:</b>	[0] = Source Command Data Set [1] = Target Command Data Set [2] = Start copying procedure		
<b>Note:</b>	Procedure: 1. In Index 0, enter which command data set should be copied. 2. In index 1, enter the command data set that is to be copied into. 3. Start copying: set index 2 from 0 to 1. p0809[2] is automatically set to 0 when copying is completed.		

---

<b>p0810</b>	<b>BI: Command data set selection CDS bit 0 / CDS select., bit 0</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8560
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to select the Command Data Set bit 0 (CDS bit 0).		
<b>Dependency:</b>	Refer to: r0050, p0811, r0836		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	The Command Data Set selected using the binector inputs is displayed in r0836. The currently effective command data set is displayed in r0050. A Command Data Set can be copied using p0809.		

---

<b>p0811</b>	<b>BI: Command data set selection CDS bit 1 / CDS select., bit 1</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8560
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to select the Command Data Set bit 1 (CDS bit 1).		
<b>Dependency:</b>	Refer to: r0050, p0810, r0836		
<b>Note:</b>	The Command Data Set selected using the binector inputs is displayed in r0836. The currently effective command data set is displayed in r0050. A Command Data Set can be copied using p0809.		

---

<b>p0819[0...2]</b>	<b>Copy Drive Data Set DDS / Copy DDS</b>		
VECTOR_G	<b>Can be changed:</b> C2(15)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8565
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	31	0
<b>Description:</b>	Copies one Drive Data Set (DDS) into another.		
<b>Index:</b>	[0] = Source Drive Data Set [1] = Target Drive Data Set [2] = Start copying procedure		
<b>Note:</b>	Procedure: 1. In Index 0, enter which drive data set is to be copied. 2. In index 1, enter the drive data set data that is to be copied into. 3. Start copying: set index 2 from 0 to 1. p0819[2] is automatically set to 0 when copying is completed.		

## 2 Parameters

### 2.2 List of parameters

---

<b>p0820[0...n]</b>	<b>BI: Drive Data Set selection DDS bit 0 / DDS select., bit 0</b>		
VECTOR_G	<b>Can be changed:</b> C2(15), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8565, 8575
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to select the Drive Data Set, bit 0 (DDS, bit 0).		
<b>Dependency:</b>	Refer to: r0051, r0837		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<hr/>			
<b>p0821[0...n]</b>	<b>BI: Drive Data Set selection DDS bit 1 / DDS select., bit 1</b>		
VECTOR_G	<b>Can be changed:</b> C2(15), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8565, 8570
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to select the Drive Data Set, bit 1 (DDS, bit 1).		
<b>Dependency:</b>	Refer to: r0051, r0837		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<hr/>			
<b>p0822[0...n]</b>	<b>BI: Drive Data Set selection DDS bit 2 / DDS select., bit 2</b>		
VECTOR_G	<b>Can be changed:</b> C2(15), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8565
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to select the Drive Data Set, bit 2 (DDS, bit 2).		
<b>Dependency:</b>	Refer to: r0051, r0837		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<hr/>			
<b>p0823[0...n]</b>	<b>BI: Drive Data Set selection DDS bit 3 / DDS select., bit 3</b>		
VECTOR_G	<b>Can be changed:</b> C2(15), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8565
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to select the Drive Data Set, bit 3 (DDS, bit 3).		
<b>Dependency:</b>	Refer to: r0051, r0837		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		

<b>p0824[0...n]</b>	<b>BI: Drive Data Set selection DDS bit 4 / DDS select., bit 4</b>		
VECTOR_G	<b>Can be changed:</b> C2(15), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8565, 8575
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to select the Drive Data Set, bit 4 (DDS, bit 4).		
<b>Dependency:</b>	Refer to: r0051, r0837		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>p0826[0...n]</b>	<b>Motor changeover motor number / Mot_chng mot No.</b>		
VECTOR_G	<b>Can be changed:</b> C2(3)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8575
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	15	0
<b>Description:</b>	Sets the freely assignable motor number for the motor changeover.		
<b>Dependency:</b>	Refer to: p0827		
<b>Notice:</b>	When changing over motor data sets with the same motor number (e.g. star-delta changeover) and for a motor with brake, the motor brake remains open during the changeover.		
<b>Note:</b>	When the motor data sets are changed over, the following applies: The same motor number signifies the same thermal model. For the same motor number, the correction values of the Rs, Lh or kT adaptation are applied for the data set changeover (refer to r1782, r1787, r1797).		
<b>p0827[0...n]</b>	<b>Motor changeover status word bit number / Mot_chg ZSW bitNo.</b>		
VECTOR_G	<b>Can be changed:</b> C2(3)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8575
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	15	0
<b>Description:</b>	Sets the bit number for every motor data set. Example: p0827[0] = 0: For MDS0, r0830.0 is switched. p0827[1] = 5: For MDS1, r0830.5 is switched.		
<b>Dependency:</b>	Refer to: p0826, r0830		
<b>Note:</b>	A motor is only changed over (a new motor selected) after the pulses have been suppressed. When the motor data sets are changed over, the following applies: Bit numbers that are not identical, signify that the motor must be changed over.		

## 2 Parameters

### 2.2 List of parameters

<b>p0828[0...n]</b>	<b>BI: Motor changeover feedback signal / Mot_chng fdbk sig</b>				
VECTOR_G	<b>Can be changed:</b> C2(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8575		
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0		
<b>Description:</b>	Sets the signal source for the feedback signal when changing over the motor. For p0833.0 = 1 the following applies: This feedback signal (0/1 edge) is required after a motor changeover to enable the pulses.				
<b>Dependency:</b>	Refer to: p0833				
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.				
<b>r0830.0...15</b>	<b>CO/BO: Motor changeover status word / Mot_chngov ZSW</b>				
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8575		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status word of the motor changeover. These signals can be connected to digital outputs to change over the motor.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Motor selection bit 0	High	Low	-
	01	Motor selection bit 1	High	Low	-
	02	Motor selection bit 2	High	Low	-
	03	Motor selection bit 3	High	Low	-
	04	Motor selection bit 4	High	Low	-
	05	Motor selection bit 5	High	Low	-
	06	Motor selection bit 6	High	Low	-
	07	Motor selection bit 7	High	Low	-
	08	Motor selection bit 8	High	Low	-
	09	Motor selection bit 9	High	Low	-
	10	Motor selection bit 10	High	Low	-
	11	Motor selection bit 11	High	Low	-
	12	Motor selection bit 12	High	Low	-
	13	Motor selection bit 13	High	Low	-
	14	Motor selection bit 14	High	Low	-
	15	Motor selection bit 15	High	Low	-
<b>Dependency:</b>	Refer to: p0827				
<b>p0831[0...15]</b>	<b>BI: Motor changeover contactor feedback / Mot_chng cont fdbk</b>				
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8575		
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0		
<b>Description:</b>	Sets the signal source for the feedback signal of the contactors when changing over motors. There is a fixed inter-relationship between energizing the contactor and the feedback signal. Example: A changeover is to be made between MDS0 (motor 0) and MDS1 (motor 1). The contactors should be switched using bit 4 (contactor 0) and 5 (contactor 1). The changeover should be made with an interconnection of the feedback signal.				

## Implementation:

MDS0: p0827[0] = 4, interconnect output to switch contactor 0 to r0830.4, p0831[4] = "input, feedback signal, contactor 0"

MDS1: p0827[1] = 5, interconnect output to switch contactor 1 to r0830.5, p0831[5] = "input, feedback signal, contactor 1"

The following sequence applies when changing over from MDS0 to MDS1:

1. Status bit r0830.4 is deleted. When the feedback signal (p0831[4]) is connected, the system waits until the feedback signal "contactor open" is displayed. If the feedback signal is not connected, then the system waits for the switch-off interlocking time of 320 ms.
2. Status bit r0830.5 is set. If the feedback signal (p0831[5]) is connected, the system waits until the feedback signal "contactor closed" is displayed. If the feedback signal is not connected, then the system waits for the switch-on interlocking time of 160 ms.

## Index:

[0] = Feedback signal contactor 0  
 [1] = Feedback signal contactor 1  
 [2] = Feedback signal contactor 2  
 [3] = Feedback signal contactor 3  
 [4] = Feedback signal contactor 4  
 [5] = Feedback signal contactor 5  
 [6] = Feedback signal contactor 6  
 [7] = Feedback signal contactor 7  
 [8] = Feedback signal contactor 8  
 [9] = Feedback signal contactor 9  
 [10] = Feedback signal contactor 10  
 [11] = Feedback signal contactor 11  
 [12] = Feedback signal contactor 12  
 [13] = Feedback signal contactor 13  
 [14] = Feedback signal contactor 14  
 [15] = Feedback signal contactor 15

**r0832.0...15 CO/BO: Mot. changeover contactor feedback sig. status word / Mot\_chng fdbk ZSW**

VECTOR\_G

**Can be changed:** -**Calculated:** -**Access level:** 2**Data type:** Unsigned32**Dyn. index:** -**Func. diagram:** 8575**P-Group:** Displays, signals**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Displays the status word of the contactor feedback signals when changing over a motor.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Feedback signal contactor 0	Closed	Opened	-
01	Feedback signal contactor 1	Closed	Opened	-
02	Feedback signal contactor 2	Closed	Opened	-
03	Feedback signal contactor 3	Closed	Opened	-
04	Feedback signal contactor 4	Closed	Opened	-
05	Feedback signal contactor 5	Closed	Opened	-
06	Feedback signal contactor 6	Closed	Opened	-
07	Feedback signal contactor 7	Closed	Opened	-
08	Feedback signal contactor 8	Closed	Opened	-
09	Feedback signal contactor 9	Closed	Opened	-
10	Feedback signal contactor 10	Closed	Opened	-
11	Feedback signal contactor 11	Closed	Opened	-
12	Feedback signal contactor 12	Closed	Opened	-
13	Feedback signal contactor 13	Closed	Opened	-
14	Feedback signal contactor 14	Closed	Opened	-
15	Feedback signal contactor 15	Closed	Opened	-

**Dependency:**

Refer to: p0831

<b>p0833</b>	<b>Data set changeover configuration / DS_chng config</b>			
VECTOR_G	<b>Can be changed:</b> C2(15)	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8575	
	<b>P-Group:</b> Data sets	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0010 bin	
<b>Description:</b>	Sets the configuration for the motor and encoder changeover.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Contactor changeover from the application/drive	Application	Drive
	01	Pulse suppression by application/drive	Application	Drive
	02	Suppress drive parking for EDS changeover	Yes	No
<b>Note:</b>	For bit 00: When the bit is set and the motor has to be changed over, then p0827 must be set differently in the appropriate motor data sets. For bit 02: The bit defines whether, for an EDS changeover, the status signal Gn_ZSW.14 is suppressed (parking encoder active). For motor changeover to running motor: The "flying restart" function should also be activated (p1200) when changing over to a motor that is already running.			

<b>r0835.0...11</b>	<b>CO/BO: Data set changeover status word / Data set sw ZSW</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8575	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and BICO output for the status word of the data set switchover.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Motor changeover active	Yes	No
	01	Encoder changeover active	Yes	No
	02	Internal parameter calculation active	Yes	No
	04	Armature short circuit active	Yes	No
	05	Identification running	Yes	No
	06	Friction characteristic plot running	Yes	No
	07	Rotating measurement running	Yes	No
	08	Motor data identification running	Yes	No
	10	Wait for pulse suppression	Yes	No
	11	Wait for motor changeover feedback signal	Yes	No
<b>Note:</b>	This parameter is only supplied with up-to-date values if data set changeover has been selected or is running. For bit 00: The signal is only influenced when a motor changeover is set via p0827 (unequal bit numbers). For bit 01: The signal is only influenced when an encoder changeover is set via p0187, p0188, or p0189. For bit 02: A data set changeover is delayed by the time required for the internal parameter calculation. For bit 04: A data set changeover is only carried out when the armature short circuit is not activated.			

For bit 05:

The following applies for SERVO:

A data set changeover is only carried out when pole position identification, encoder adjustment, motor data identification, and rotating measurement are not running.

The following applies for VECTOR:

A data set changeover is only carried out when pole position identification is not running.

For bit 06:

A data set switchover is only carried out when the friction characteristic is not being plotted.

For bit 07 (VECTOR only):

A data set changeover is only carried out when rotating measurement is not running.

For bit 08 (VECTOR only):

A data set changeover is only carried out when motor data identification is not running.

For bit 10:

A motor changeover is set with p0833.1 = 1. It can only be carried out when the application performs pulse suppression.

For bit 11:

A motor changeover is set with p0833.0 = 1. The pulses are only enabled when the "Motor changeover feedback" signal is detected.

---

### r0835.2 CO/BO: Data set changeover status word / Data set sw ZSW

ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8575
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and BICO output for the status word of the data set switchover.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	02	Internal parameter calculation active	Yes	No	-

**Note:** For bit 02:

A data set changeover is delayed by the time required for the internal parameter calculation.

---

### r0836.0...3 CO/BO: Command Data Set CDS selected / CDS selected

VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8560
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the command data set (CDS) selected via the binector input.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	CDS select. bit 0	ON	OFF	-
	01	CDS select. bit 1	ON	OFF	-
	02	CDS select. bit 2	ON	OFF	-
	03	CDS select. bit 3	ON	OFF	-

**Dependency:** Refer to: r0050, p0810, p0811

**Note:** Command data sets are selected via binector input p0810 and following.

The currently effective command data set is displayed in r0050.

---

<b>r0837.0...4</b>	<b>CO/BO: Drive Data Set DDS selected / DDS selected</b>			
VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8565	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the drive data set (DDS) selected via the binector input.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	DDS select. bit 0	ON	OFF
	01	DDS select. bit 1	ON	OFF
	02	DDS select. bit 2	ON	OFF
	03	DDS select. bit 3	ON	OFF
	04	DDS select. bit 4	ON	OFF
				<b>FP</b>
				-
				-
				-
				-
<b>Dependency:</b>	Refer to: r0051, p0820, p0821, p0822, p0823, p0824			
<b>Note:</b>	Drive data sets are selected via binector input p0820 and following. The currently effective drive data set is displayed in r0051. If there is only one data set, then a value of 0 is displayed in this parameter and not the selection via binector inputs.			

---

<b>r0838[0...3]</b>	<b>Motor/Encoder Data Set selected / MDS/EDS selected</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8565	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the selected Motor Data Set (MDS) and the selected Encoder Data Sets (EDS).			
<b>Index:</b>	[0] = Motor Data Set MDS selected [1] = Encoder 1 Encoder Data Set EDS selected [2] = Encoder 2 Encoder Data Set EDS selected [3] = Encoder 3 Encoder Data Set EDS selected			
<b>Dependency:</b>	Refer to: r0049, p0186, p0187, p0188, p0189			
<b>Note:</b>	Value 99 means the following: No encoder assigned (not configured).			

---

<b>p0839</b>	<b>Motor changeover contactor control delay time / Mot_chg ctrl t_del</b>			
VECTOR_G	<b>Can be changed:</b> C2(3)	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0 [ms]	500 [ms]	0 [ms]	
<b>Description:</b>	Sets the delay time for the contactor control for the motor changeover.			
<b>Note:</b>	The delay time is taken into account in the following cases: - for feedback signal, previous contactor "Open". The new motor contactor is controlled (energized) after the delay time has expired. - for the feedback signal, new motor contactor "Closed". The pulses are enabled after the delay time has expired.			

<b>p0840[0...n]</b>	<b>BI: ON / OFF (OFF1) / ON / OFF (OFF1)</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2501, 2610, 8720, 8820, 8920
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the command "ON/OFF (OFF1)". For the PROFIdrive profile, this command corresponds to control word 1 bit 0 (STW1.0).		
<b>Recommendation:</b>	When the setting for this binector input is changed, the motor can only be switched on by means of an appropriate signal change of the source.		
<b>Dependency:</b>	Refer to: p1055, p1056		
<b>Caution:</b>	When "master control from PC" is activated, this binector input is ineffective.		
			
<b>Notice:</b>	For binector input p0840 = 0 signal, the motor can be moved, jogging using binector input p1055 or p1056. The command "ON/OFF (OFF1)" can be issued using binector input p0840 or p1055/p1056. For binector input p0840 = 0 signal, the switching-on inhibited is acknowledged. Only the signal source that originally switched on can also switch off again. The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	For drives with closed-loop speed control (p1300 = 20, 21), the following applies: - BI: p0840 = 0 signal: OFF1 (braking with the ramp-function generator, then pulse suppression) For drives with closed-loop torque control (p1300 = 22, 23), the following applies: - BI: p0840 = 0 signal: immediate pulse suppression For drives with closed-loop torque control (activated using p1501), the following applies: - BI: p0840 = 0 signal: No dedicated braking response, but pulse cancelation when standstill is detected (p1226, p1227) For drives with closed-loop speed/torque control, the following applies: - BI: p0840 = 0/1 signal: ON (pulses can be enabled) r0863.1 of a drive can also be selected as signal source.		

<b>p0840[0...n]</b>	<b>BI: ON / OFF (OFF1) / ON / OFF (OFF1)</b>		
B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8720, 8820, 8920
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the command "ON/OFF (OFF1)". For the PROFIdrive profile, this command corresponds to control word 1 bit 0 (STW1.0).		
<b>Recommendation:</b>	When the setting for this binector input is changed, the motor can only be switched on by means of an appropriate signal change of the source.		
<b>Dependency:</b>	Refer to: p1055, p1056		
<b>Caution:</b>	When "master control from PC" is activated, this binector input is ineffective.		
			
<b>Notice:</b>	For binector input p0840 = 0 signal, the switching-on inhibited is acknowledged. Only the signal source that originally switched on can also switch off again. The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	For active infeeds (Active Line Module and Smart Line Module) the following applies: - BI: p0840 = 0 signal: OFF1 (reduce Vdc along the ramp, then pulse suppression and precharging contactor/line contactor open) - BI: p0840 = 0/1 signal: ON (precharging contactor/line contactor close, pulses can be enabled)		

## 2 Parameters

### 2.2 List of parameters

For passive infeeds (Basic Line Module) the following applies:

- BI: p0840 = 0 signal: OFF1 (precharging contactor/line contactor open)
- BI: p0840 = 0/1 signal: ON (precharging contactor/line contactor close)

r0863.1 of a drive can also be selected as signal source.

Switching on can be delayed with a wait time (p0862).

Switching off can also be delayed with a wait time (p3490).

<b>p0844[0...n]</b>	<b>BI: No coast-down / coast-down (OFF2) signal source 1 / OFF2 S_src 1</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2501, 8720, 8820, 8920
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

#### Description:

Sets the first signal source for the command "No coast down/coast down (OFF2)".

The following signals are AND'ed:

- BI: p0844 "No coast-down / coast-down (OFF2) signal source 1"
- BI: p0845 "No coast-down / coast-down (OFF2) signal source 2"

For the PROFIdrive profile, the result of the AND logic operation corresponds to control word 1 bit 1 (STW1.1).

BI: p0844 = 0 signal or BI: p0845 = 0 signal

- OFF2 (immediate pulse suppression and switching-on inhibited)

BI: p0844 = 1 signal and BI: p0845 = 1 signal

- no OFF2 (enable is possible)

#### Caution:

When "master control from PC" is activated, this binector input is ineffective.



#### Notice:

The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

<b>p0844[0...n]</b>	<b>BI: No coast-down / coast-down (OFF2) signal source 1 / OFF2 S_src 1</b>		
B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8720, 8820, 8920
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

#### Description:

Sets the first signal source for the command to instantaneously switch off the drive.

This corresponds to command "No coast down/coast down (OFF2)" for drives.

The following signals are AND'ed:

- BI: p0844 "No coast-down / coast-down (OFF2) signal source 1"
- BI: p0845 "No coast-down / coast-down (OFF2) signal source 2"

For the PROFIdrive profile, the result of the AND logic operation corresponds to control word 1 bit 1 (STW1.1).

BI: p0844 = 0 signal or BI: p0845 = 0 signal

- OFF2 (immediate pulse suppression and switching-on inhibited)

BI: p0844 = 1 signal and BI: p0845 = 1 signal

- no OFF2 (enable is possible)

#### Caution:

When "master control from PC" is activated, this binector input is ineffective.



#### Notice:

The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

#### Note:

For binector input p0844 = 0 signal or p0845 = 0 signal, the following applies:

- precharging contactor/line contactor is additionally opened.

p0845[0...n]	BI: No coast-down / coast-down (OFF2) signal source 2 / OFF2 S_src 2		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2501, 8720, 8820, 8920
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

**Description:** Sets the second signal source for the command "No coast down/coast down (OFF2)".  
The following signals are AND'ed:  
- BI: p0844 "No coast-down / coast-down (OFF2) signal source 1"  
- BI: p0845 "No coast-down / coast-down (OFF2) signal source 2"  
For the PROFIdrive profile, the result of the AND logic operation corresponds to control word 1 bit 1 (STW1.1).  
BI: p0844 = 0 signal or BI: p0845 = 0 signal  
- OFF2 (immediate pulse suppression and switching-on inhibited)  
BI: p0844 = 1 signal and BI: p0845 = 1 signal  
- no OFF2 (enable is possible)

**Caution:** When "master control from PC" is activated, this binector input is effective.



p0845[0...n]	BI: No coast-down / coast-down (OFF2) signal source 2 / OFF2 S_src 2		
B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8720, 8820, 8920
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

**Description:** Sets the second signal source for the command to instantaneously switch off the drive.  
This corresponds to command "No coast down/coast down (OFF2)" for drives.  
The following signals are AND'ed:  
- BI: p0844 "No coast-down / coast-down (OFF2) signal source 1"  
- BI: p0845 "No coast-down / coast-down (OFF2) signal source 2"  
For the PROFIdrive profile, the result of the AND logic operation corresponds to control word 1 bit 1 (STW1.1).  
BI: p0844 = 0 signal or BI: p0845 = 0 signal  
- OFF2 (immediate pulse suppression and switching-on inhibited)  
BI: p0844 = 1 signal and BI: p0845 = 1 signal  
- no OFF2 (enable is possible)

**Caution:** When "master control from PC" is activated, this binector input is effective.



**Note:** For binector input p0844 = 0 signal or p0845 = 0 signal, the following applies:  
- precharging contactor/line contactor is additionally opened.

p0848[0...n]	BI: No Quick Stop / Quick Stop (OFF3) signal source 1 / OFF3 S_src 1		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2501
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

**Description:** Sets the first signal source for the command "No quick stop/quick stop (OFF3)".  
The following signals are AND'ed:  
- BI: p0848 "No quick stop / quick stop (OFF3) signal source 1"  
- BI: p0849 "No quick stop / quick stop (OFF3) signal source 2"  
For the PROFIdrive profile, the result of the AND logic operation corresponds to control word 1 bit 2 (STW1.2).  
BI: p0848 = 0 signal or BI: p0849 = 0 signal  
- OFF3 (braking along the OFF3 ramp (p1135), then pulse suppression and switching-on inhibited)  
BI: p0848 = 1 signal and BI: p0849 = 1 signal  
- no OFF3 (enable is possible)

**Caution:** When "master control from PC" is activated, this binector input is ineffective.



**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.  
**Note:** For drives with closed-loop torque control (activated using p1501), the following applies:  
BI: p0848 = 0 signal:  
- no dedicated braking response, but pulse suppression when standstill is detected (p1226, p1227).

p0849[0...n]	BI: No Quick Stop / Quick Stop (OFF3) signal source 2 / OFF3 S_src 2		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2501
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

**Description:** Sets the second signal source for the command "No quick stop/quick stop (OFF3)".  
The following signals are AND'ed:  
- BI: p0848 "No quick stop / quick stop (OFF3) signal source 1"  
- BI: p0849 "No quick stop / quick stop (OFF3) signal source 2"  
For the PROFIdrive profile, the result of the AND logic operation corresponds to control word 1 bit 2 (STW1.2).  
BI: p0848 = 0 signal or BI: p0849 = 0 signal  
- OFF3 (braking along the OFF3 ramp (p1135), then pulse suppression and switching-on inhibited)  
BI: p0848 = 1 signal and BI: p0849 = 1 signal  
- no OFF3 (enable is possible)

**Caution:** When "master control from PC" is activated, this binector input is effective.



**Note:** For drives with closed-loop torque control (activated using p1501), the following applies:  
BI: p0849 = 0 signal:  
- no dedicated braking response, but pulse suppression when standstill is detected (p1226, p1227).

<b>p0852[0...n]</b>	<b>BI: Enable operation/inhibit operation / Enable operation</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2501, 8820, 8920
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

**Description:** Sets the signal source for the command "enable operation/inhibit operation".  
For the PROFIdrive profile, this command corresponds to control word 1 bit 3 (STW1.3).  
BI: p0852 = 0 signal  
Inhibit operation (suppress pulses).  
BI: p0852 = 1 signal  
Enable operation (pulses can be enabled).

**Caution:** When "master control from PC" is activated, this binector input is ineffective.



**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

<b>p0854[0...n]</b>	<b>BI: Control by PLC/no control by PLC / Master ctrl by PLC</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2501, 8720, 8820, 8920
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

**Description:** Sets the signal source for the command "control by PLC/no control by PLC".  
For the PROFIdrive profile, this command corresponds to control word 1 bit 10 (STW1.10).  
BI: p0854 = 0 signal  
No control by PLC  
BI: p0854 = 1 signal  
Master control by PLC.

**Caution:** When "master control from PC" is activated, this binector input is ineffective.



**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:** This bit is used to initiate a response for the drives when the control fails (F07220). If there is no control available, then binector input p0854 should be set to 1.

If a control is available, then STW1.10 must be set to 1 (PZD1) so that the received data is updated. This applies regardless of the setting in p0854 and even in the case of free telegram configuration (p0922 = 999).

<b>p0854</b>	<b>BI: Control by PLC/no control by PLC / Master ctrl by PLC</b>		
ENC	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2501, 8720, 8820, 8920
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

**Description:** Sets the signal source for the command "control by PLC/no control by PLC".  
For the PROFIdrive profile, this command corresponds to control word 1 bit 10 (STW1.10).  
BI: p0854 = 0 signal  
No control by PLC

## 2 Parameters

### 2.2 List of parameters

BI: p0854 = 1 signal  
Master control by PLC.

**Caution:**



When "master control from PC" is activated, this binector input is ineffective.

**Notice:**

The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:**

This bit is used to initiate a response for the drives when the control fails (F07220). If there is no control available, then binector input p0854 should be set to 1.

If a control is available, then STW1.10 must be set to 1 (PZD1) so that the received data is updated. This applies regardless of the setting in p0854 and even in the case of free telegram configuration (p0922 = 999).

#### p0855[0...n]

#### BI: Unconditionally release holding brake / Uncond open brake

VECTOR\_G

**Can be changed:** T

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32 / Binary

**Dyn. index:** CDS, p0170

**Func. diagram:** 2501, 2701, 2707

**P-Group:** Commands

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

0

**Description:**

Sets the signal source for the command "unconditionally open holding brake".

**Dependency:**

Refer to: p0858

**Notice:**

The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:**

The signal via BI: p0858 (unconditionally close holding brake) has a higher priority than via BI: p0855 (unconditionally open holding brake).

#### p0856[0...n]

#### BI: Enable speed controller / n\_ctrl enable

VECTOR\_G

**Can be changed:** T

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32 / Binary

**Dyn. index:** CDS, p0170

**Func. diagram:** 2501, 2701, 2707

**P-Group:** Commands

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

1

**Description:**

Sets the signal source for the command "enable speed controller" (r0898.12).

0 signal: Set the I component and speed controller output to zero.

1 signal: Enable speed controller.

**Dependency:**

Refer to: r0898

**Note:**

If "enable speed controller" is withdrawn, then an existing brake will be closed.

If "enable speed controller" is withdrawn, the pulses are not suppressed.

#### p0857

#### Power unit monitoring time / PU t\_monit

VECTOR\_G, B\_INF

**Can be changed:** T

**Calculated:** -

**Access level:** 2

**Data type:** FloatingPoint32

**Dyn. index:** -

**Func. diagram:** 8760, 8864, 8964

**P-Group:** Commands

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

100.0 [ms]

60000.0 [ms]

6000.0 [ms]

**Description:**

Sets the monitoring time for the power unit.

The following applies for infeeds and drives:

The monitoring time is started after an 0/1 edge of the ON/OFF1 command. If the power unit does not return a READY signal within the monitoring time, then fault F06000 (infeeds) or F07802 (drives) is output.

For drives, the following also applies:

After the pulse enable (operation enabled, p0852), the monitoring time is re-started. If the infeed does not signal ready to the drive within the monitoring time (using BI: p0864 of the drive), fault F07840 is initiated.

<b>Dependency:</b>	Refer to: F06000, F07802, F07840, F30027
<b>Notice:</b>	The maximum time to precharge the DC link is monitored in the power unit and cannot be changed. The maximum duration of the precharging depends on the power class and the power unit design. The monitoring time for the precharging is started after the ON command (BI: p0840 = 0/1 signal). Fault F30027 is output when the maximum precharging duration is exceeded.
<b>Note:</b>	The factory setting for p0857 depends on the power class and the design of the power unit. The monitoring time for the ready signal of the power unit includes the time to precharge the DC link and, if relevant, the de-bounce time of the contactors. If an excessively low value is entered into p0857, then after enable, this results in the corresponding fault.

---

<b>p0858[0...n]</b>	<b>BI: Unconditionally close holding brake / Uncond close brake</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2501, 2701, 2707
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the command "unconditionally close holding brake".		
<b>Dependency:</b>	Refer to: p0855		
<b>Note:</b>	The signal via BI: p0858 (unconditionally close holding brake) has a higher priority than via BI: p0855 (unconditionally open holding brake). For a 1 signal via BI: p0858, the command "unconditionally close the holding brake" is executed and internally a zero setpoint is entered.		

---

<b>p0860</b>	<b>BI: Line contactor feedback signal / Line contact feedb</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2634, 8734, 8834, 8934
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	863.1
<b>Description:</b>	Sets the signal source for the feedback signal from the line contactor.		
<b>Recommendation:</b>	When the monitoring is activated (BI: p0860 not equal to r0863.1), then to control the line contactor, signal BO: r0863.1 of its own drive object should be used.		
<b>Dependency:</b>	Refer to: p0861, r0863 Refer to: F07300		
<b>Notice:</b>	The line contactor monitoring is deactivated if the control signal of the particular drive object is set as the signal source for the feedback signal of the line contactor (BI: p0860 = r0863.1).		
<b>Note:</b>	The state of the line contactor is monitored depending on signal BO: r0863.1. When the monitoring is activated (BI: p0860 not equal to r0863.1), fault F07300 is then also output if the contactor is closed before it is controlled using r0863.1.		

---

<b>p0861</b>	<b>Line contactor monitoring time / LineContact t_mon</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2634, 8734, 8834, 8934
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	5000 [ms]	100 [ms]
<b>Description:</b>	Sets the monitoring time of the line contactor. This time starts each time that the line contactor switches (r0863.1). If a feedback signal is not received from the line contactor within the time, a message is output.		

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Refer to: p0860, r0863  
Refer to: F07300  
**Note:** The monitoring function is disabled for the factory setting of p0860.

---

#### p0862 Power unit ON delay / PU t\_on

VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2610, 8732, 8832, 8932
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	65000 [ms]	0 [ms]

**Description:** Sets the delay time for the control command of the power unit and a line contactor, if used.

**Note:** This means that it is possible to realize a shifted (delayed) precharging or switch-on using a single ON command. When the infeed units are active, before the line contactor is closed, an offset adjustment of the current measurement is carried out for a duration of 120 ms (p3491).

---

#### r0863.0...2 CO/BO: Drive coupling status word/control word / CoupleZSW/STW

VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and BICO output for the status word and control word of the drive coupling.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Closed-loop control operation	Yes	No	2610, 8710, 8810, 8910
	01	Energize contactor	Yes	No	2610, 2634, 7990, 8734, 8834, 8934
	02	Infeed line supply failure	Yes	No	-

**Dependency:** Refer to: p0864

**Note:** For bit 00:  
Bit 0 signals that the infeed is ready.  
When the operating signal is transferred via binector output r0863.0 this allows several drives to start (run-up) staggered over time when they are simultaneously switched on.  
To realize this, the following connections/interconnections are required:  
Drive 1: Interconnect binector input p0864 with binector output r0863.0 of the infeed  
Drive 2: Interconnect binector input p0864 with binector output r0863.0 of drive 1  
Drive 3: Interconnect binector input p0864 with binector output r0863.0 of drive 2 etc.  
The first drive only transfers the operating signal to the next drive after it has reached its ready condition.  
For bit 01:  
Bit 1 is used to control an external line contactor.  
For bit 02:  
This bit only signals line supply failure for Active Infeed (A\_INF) and Smart Infeed (S\_INF).

<b>p0864</b>	<b>BI: Infeed operation / INF operation</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2610, 8710, 8910
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the operating signal of the infeed (e.g. BO: r0863.0).		
<b>Dependency:</b>	Refer to: r0863		
<b>Note:</b>	The sequence control of a servo/vector drive requires this signal. The following applies for an infeed without DRIVE-CLiQ: For these infeeds, the "ready" message is available via an output terminal. This signal must be connected to a digital input. The drives supplied from this infeed must use this signal as ready signal (BI: p0864 = digital input).		
<b>p0867</b>	<b>Power unit main contactor holding time after OFF1 / PU t_MC after OFF1</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [ms]	500.0 [ms]	50.0 [ms]
<b>Description:</b>	Sets the main contactor holding time after OFF1 After withdrawing the OFF1 enable (signal source of p0840), the main contactor is only opened after the main contactor holding time has elapsed.		
<b>Recommendation:</b>	When operating a drive connected to SINUMERIK, which only closes the main contactor with the OFF1 command (blocksize, chassis), p0867 should be set as a minimum to 50 ms.		
<b>Dependency:</b>	Refer to: p0869		
<b>Note:</b>	For p0869 = 1 (keep main contactor closed for STO), after withdrawing STO, the switching-on inhibited must be acknowledged via the signal source of p0840 = 0 (OFF1) – and before the main contactor holding time expires, should go back to 1, otherwise the main contactor will open.		
<b>p0868</b>	<b>Power unit debounce time/wait time / PU t_debounce/t_w</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	65000 [ms]	65000 [ms]
<b>Description:</b>	For Motor Modules, "Chassis" format: Setting the debounce time for the DC circuit breaker For AC/AC converters, "Chassis" format: Setting the wait time for the thyristor rectifier.		
<b>Note:</b>	The following applies if p0868 = 65000 ms: The debounce time defined internally in the power unit's EEPROM is implemented.		

## 2 Parameters

### 2.2 List of parameters

<b>p0869</b>	<b>Sequence control configuration / Seq_ctrl config</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 bin	

**Description:** Sets the configuration for the sequence control.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Keep main contactor closed for STO	Yes	No	-

**Dependency:** Refer to: p0867

**Note:** For bit 00:

After withdrawing the OFF1 enable (signal source of p0840), the main contactor is opened after the main contactor holding time has elapsed.

For p0869.0 = 1, after withdrawing STO, the switching-on inhibited must be acknowledged via the signal source of p0840 = 0 (OFF1) – and before the main contactor holding time expires (p0867), should go back to 1, otherwise the main contactor will open.

<b>p0869</b>	<b>Sequence control configuration / Seq_ctrl config</b>			
B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8732, 8832, 8932	
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 bin	

**Description:** Sets the configuration for the sequence control.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	01	Wait for the feedback signal from the external main contactor	Yes	No	-

**Notice:** For chassis units, the following applies:

Setting p0869.1 = 1 is not permissible, if, using p0860 the internal circuit breaker is monitored (this is not controlled with r0863.1).

**Note:** For bit 01:

For p0869.1 = 1, before starting to charge the DC link (r0899.8 = 1), the system waits for a feedback signal from the external main contactor (p0860 = 1 signal). The main contactor must be controlled using r0863.1.

Waiting for the contactor feedback signal is especially necessary if the external main contactor has long switching times, which would lead to the precharging time being exceeded (F06000, F30027).

<b>r0873</b>	<b>CO/BO: Infeed total operation / INF total oper</b>			
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8732, 8832	
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	

**Description:** Displays the operational readiness of the infeeds when using Smart Line Module (SLM) and Basic Line Module (BLM) together (mixed operation).

In order that signal BO: r0873 is available at one of the infeeds, then BI: p0874 of the one infeed must be interconnected to BO: r0863.0 of the other infeed.

**Dependency:** Refer to: r0863, p0874

**Note:** Mixed operation is not possible with the Active Line Module (ALM)!

<b>p0874</b>	<b>BI: Smart/ Basic Line Module operation / SLM/BLM operation</b>			
B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8732, 8832	
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0	
<b>Description:</b>	Setting to interconnect the ready signal for mixed operation of Smart Line Module (SLM) and Basic Line Module (BLM). In order that signal BO: r0873 is available at one of the infeeds, then BI: p0874 of the one infeed must be interconnected to BO: r0863.0 of the other infeed.			
<b>Dependency:</b>	Refer to: r0863, r0873			
<b>Note:</b>	Mixed operation is not possible with the Active Line Module (ALM)!			
<b>p0894</b>	<b>Parking pre-setting / Parking pre-set</b>			
VECTOR_G, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 bin	
<b>Description:</b>	Pre-setting for the "Parking axis" and "Parking encoder" function.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Default with interconnection	Park	Do not park
<b>FP</b>				-
<b>Dependency:</b>	Refer to: p0480, p0897			
<b>Note:</b>	For bit 00: If there is at least one BICO interconnection for "Parking axis" or "Parking encoder", this default setting is taken into consideration during power up.			
<b>p0895[0...n]</b>	<b>BI: Activate/deactivate power unit components / PU_comp act/deact</b>			
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	1	
<b>Description:</b>	Sets the signal source to activate/deactivate a power unit component.			
<b>Dependency:</b>	BI: p0895 = 0 signal Deactivate power unit components. BI: p0895 = 1 signal Activate power unit components Refer to: p0125, r0126 Refer to: A05054			
<b>Caution:</b>	It is not permissible to deactivate drive objects with safety functions enabled.			
				
<b>Notice:</b>	For Active Line Modules in the "Chassis" format, the Voltage Sensing Module (VSM, p0145) belonging to the power unit is automatically activated/deactivated.			
<b>Note:</b>	The power unit is only deactivated when the pulses are suppressed. For units connected in parallel, when one of the power units is deactivated, then the enable in p7001 is withdrawn.			

---

<b>r0896.0</b>	<b>BO: Parking axis, status word / Parking axis, ZSW</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the status word for the "parking axis" function.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Parking axis active	Yes	No
				<b>FP</b>
				-
<b>Dependency:</b>	Refer to: p0897			

---

<b>p0897</b>	<b>BI: Parking axis selection / Parking axis sel</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0	
<b>Description:</b>	Sets the signal source to select the "parking axis" function.			
<b>Dependency:</b>	BI: p0897 = 0 signal The function "parking axis" is not selected. BI: p0897 = 1 signal The function "parking axis" is selected. Refer to: r0896			
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.			
<b>Note:</b>	After it has been selected the "parking axis" function only becomes active when the pulses are suppressed.			

---

<b>r0898.0...15</b>	<b>CO/BO: Control word drive object 1 / STW DO1</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and connector output for the control word of drive object 1 (Control Unit).			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Synchronization signal SYN	Yes	No
	01	Real time synchronization PING	Yes	No
	07	Acknowledge fault	Yes	No
	12	Master sign-of-life bit 0	Yes	No
	13	Master sign-of-life bit 1	Yes	No
	14	Master sign-of-life bit 2	Yes	No
	15	Master sign-of-life bit 3	Yes	No
				<b>FP</b>
				-

<b>r0898.0...14</b>		<b>CO/BO: Control word sequence control / STW seq_ctrl</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2501		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and connector output for the control word of the sequence control.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	ON/OFF1	Yes	No	-
	01	OC / OFF2	Yes	No	-
	02	OC / OFF3	Yes	No	-
	03	Enable operation	Yes	No	-
	04	Enable ramp-function generator	Yes	No	-
	05	Continue ramp-function generator	Yes	No	-
	06	Enable speed setpoint	Yes	No	-
	07	Command open brake	Yes	No	-
	08	Jog 1	Yes	No	3001
	09	Jog 2	Yes	No	3001
	10	Master control by PLC	Yes	No	-
	12	Speed controller enable	Yes	No	-
	14	Command close brake	Yes	No	-
<b>Note:</b>	OC: Operating condition				

<b>r0898.0...10</b>		<b>CO/BO: Control word sequence control infeed / STW seq_ctrl INF</b>			
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8720		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and connector output for the control word of the sequence control for the infeed.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	ON/OFF1	Yes	No	-
	01	OC / OFF2	Yes	No	-
	10	Master control by PLC	Yes	No	-
<b>Note:</b>	OC: Operating condition				

<b>r0898.10</b>		<b>CO/BO: Control word sequence control encoder DO / STW seq_ctrl encDO</b>			
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and connector output for the control word of the sequence control for encoder drive object.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	10	Master control by PLC	Yes	No	-

<b>r0899.0...15</b>	<b>CO/BO: Status word drive object 1 / ZSW DO1</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the status word of the sequence control of the Control Unit (drive object 1).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Reserved	Yes	No	-
	03	Fault present	Yes	No	-
	07	Alarm present	Yes	No	-
	08	System time synchronized	Yes	No	-
	12	Slave sign-of-life bit 0	Yes	No	-
	13	Slave sign-of-life bit 1	Yes	No	-
	14	Slave sign-of-life bit 2	Yes	No	-
	15	Slave sign-of-life bit 3	Yes	No	-
<b>Note:</b>	DO: Drive Object				

<b>r0899.0...15</b>	<b>CO/BO: Status word sequence control / ZSW seq_ctrl</b>				
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2503		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the status word of the sequence control.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Ready for switching on	Yes	No	-
	01	Ready	Yes	No	-
	02	Operation enabled	Yes	No	-
	03	Jog active	Yes	No	-
	04	No coasting active	OFF2 inactive	OFF2 active	-
	05	No Quick Stop active	OFF3 inactive	OFF3 active	-
	06	Switching-on inhibited active	Yes	No	-
	07	Drive ready	Yes	No	-
	08	Controller enable	Yes	No	-
	09	Control request	Yes	No	-
	11	Pulses enabled	Yes	No	-
	12	Open holding brake	Yes	No	-
	13	Command close holding brake	Yes	No	-
	14	Pulse enable from the brake control	Yes	No	-
	15	Setpoint enable from the brake control	Yes	No	-
<b>Note:</b>	For bits 00, 01, 02, 04, 05, 06, 09: For PROFIdrive, these signals are used for status word 1. For bit 13: When the "Safe Brake Control" (SBC) is activated and selected, the brake is no longer controlled using this signal. For bit 14, 15: These signals are only of significance when the "extended brake control" function module is activated (r0108.14 = 1).				

<b>r0899.0...12</b>		<b>CO/BO: Status word sequence control infeed / ZSW seq_ctrl INF</b>			
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8726		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the status word of the sequence control of the infeed unit.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Ready for switching on	Yes	No	-
	01	Ready	Yes	No	-
	02	Operation enabled	Yes	No	-
	04	No OFF2 active	OFF2 inactive	OFF2 active	-
	06	Switching-on inhibited	Yes	No	-
	08	Switching-on operation active	Yes	No	-
	09	Control request	Yes	No	-
	11	Precharging complete	Yes	No	-
	12	Line contactor closed	Yes	No	-
<b>Note:</b>	For bits 00, 01, 02, 04, 06, 09: For PROFIdrive, these signals are used for status word 1.				

<b>r0899.7...9</b>		<b>CO/BO: Status word sequence control encoder DO / ZSW seq_ctrl encDO</b>			
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status word for sequence control on the encoder drive object.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	07	Drive ready	Yes	No	-
	09	Control request	Yes	No	-
<b>Note:</b>	For PROFIdrive, this signal is used for status word ZSW2_ENC.				

<b>p0918</b>		<b>PROFIBUS address / PB address</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2401, 2410	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	1	126	126	
<b>Description:</b>	Displays or sets the PROFIBUS address for PROFIBUS interface on the Control Unit. The address can be set as follows: 1) Using the address switch on the Control Unit. --> p0918 can then only be read and displays the selected address. --> A change only becomes effective after a POWER ON. 2) Using p0918 --> Only if the address 00 hex, 7F hex, 80 hex, or FF hex has been set using the address switch. --> The address is saved in a non-volatile fashion using the function "copy from RAM to ROM". --> A change only becomes effective after a POWER ON.			
<b>Note:</b>	Permissible PROFIBUS addresses: 1 ... 126 (01 hex ... 7E hex) Address 126 is used for commissioning. Every PROFIBUS address change only becomes effective after a POWER ON. The parameter is not influenced by setting the factory setting.			

<b>p0922</b>		<b>IF1 PROFIdrive PZD telegram selection / IF1 PZD telegr</b>	
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2401, 2420, 2423, 2481, 2483
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	390	999	999
<b>Description:</b>	Sets the send and receive telegram.		
<b>Value:</b>	390: SIEMENS telegram 390, PZD-2/2 391: SIEMENS telegram 391, PZD-3/7 392: SIEMENS telegram 392, PZD-3/15 393: SIEMENS telegram 393, PZD-4/21 394: SIEMENS telegram 394, PZD-3/3 395: SIEMENS telegram 395, PZD-4/25 999: Free telegram configuration with BICO		

<b>p0922</b>		<b>IF1 PROFIdrive PZD telegram selection / IF1 PZD telegr</b>	
VECTOR_G	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2401, 2415, 2416, 2419, 2420, 2421, 2422, 2423
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	999	999
<b>Description:</b>	Sets the send and receive telegram.		
<b>Value:</b>	1: Standard telegram 1, PZD-2/2 2: Standard telegram 2, PZD-4/4 20: Standard telegram 20, PZD-2/6 220: SIEMENS telegram 220, PZD-10/10 352: SIEMENS telegram 352, PZD-6/6 999: Free telegram configuration with BICO		
<b>Caution:</b>	Telegrams 2, 3 and 4 are not suitable for sensorless vector control (p1300 = 20). For sensorless vector control, it is necessary that the setpoint speed is entered at the ramp-function generator input (e.g. p1070) and not after the ramp-function generator (p1155).		
			
<b>Note:</b>	If a value is not equal to 999, a telegram is set and the automatically set interconnections in the telegram are inhibited. The inhibited interconnections can only be changed again after setting value 999.		

<b>p0922</b>		<b>IF1 PROFIdrive PZD telegram selection / IF1 PZD telegr</b>	
VECTOR_G (n/M)	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2401, 2415, 2416, 2419, 2420, 2421, 2422, 2423
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	999	999
<b>Description:</b>	Sets the send and receive telegram.		
<b>Value:</b>	1: Standard telegram 1, PZD-2/2 2: Standard telegram 2, PZD-4/4 3: Standard telegram 3, PZD-5/9 4: Standard telegram 4, PZD-6/14 20: Standard telegram 20, PZD-2/6 220: SIEMENS telegram 220, PZD-10/10 352: SIEMENS telegram 352, PZD-6/6 999: Free telegram configuration with BICO		

**Caution:**

Telegrams 2, 3 and 4 are not suitable for sensorless vector control (p1300 = 20). For sensorless vector control, it is necessary that the setpoint speed is entered at the ramp-function generator input (e.g. p1070) and not after the ramp-function generator (p1155).

**Note:**

If a value is not equal to 999, a telegram is set and the automatically set interconnections in the telegram are inhibited. The inhibited interconnections can only be changed again after setting value 999.

**p0922****IF1 PROFIdrive PZD telegram selection / IF1 PZD telegr**

B\_INF

**Can be changed:** C2(1), T**Calculated:** -**Access level:** 1**Data type:** Unsigned16**Dyn. index:** -**Func. diagram:** 2401, 2420, 2423, 2447, 2457, 2481, 2483**P-Group:** Communications**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

370

999

999

**Description:**

Sets the send and receive telegram.

**Value:**

370: SIEMENS telegram 370, PZD-1/1

371: SIEMENS telegram 371, PZD-5/8

999: Free telegram configuration with BICO

**Note:**

If a value is not equal to 999, a telegram is set and the automatically set interconnections in the telegram are inhibited.

The inhibited interconnections can only be changed again after setting value 999.

**p0922****IF1 PROFIdrive PZD telegram selection / IF1 PZD telegr**

ENC

**Can be changed:** C2(1), T**Calculated:** -**Access level:** 1**Data type:** Unsigned16**Dyn. index:** -**Func. diagram:** 2401, 2415, 2416, 2419, 2420, 2421, 2422, 2423**P-Group:** Communications**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

81

999

999

**Description:**

Sets the send and receive telegram.

**Value:**

81: SIEMENS telegram 81, PZD-2/6

82: SIEMENS telegram 82, PZD-2/7

83: SIEMENS telegram 83, PZD-2/8

999: Free telegram configuration with BICO

**Note:**

If a value is not equal to 999, a telegram is set and the automatically set interconnections in the telegram are inhibited.

The inhibited interconnections can only be changed again after setting value 999.

**r0924[0...1]****ZSW bit pulses enabled / ZSW pulse enab**

VECTOR\_G

**Can be changed:** -**Calculated:** -**Access level:** 3**Data type:** Unsigned16**Dyn. index:** -**Func. diagram:** 2454, 2456**P-Group:** Communications**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Displays the position of the "Pulses enabled" status signal in the PROFIdrive telegram.

**Index:**

[0] = Signal number

[1] = Bit position

<b>p0925</b>	<b>PROFIdrive clock synchronous sign-of-life tolerance / PD SoL_tol</b>		
VECTOR_G (n/M), ENC	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 65535	<b>Access level:</b> 3 <b>Func. diagram:</b> 2410 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the number of tolerated consecutive sign-of-life errors of the clock-cycle synchronous master. The sign-of-life signal is normally received in PZD4 (control word 2) from the master.		
<b>Dependency:</b>	Refer to: p2045, r2065 Refer to: F01912		
<b>Note:</b>	The sign-of-life monitoring is disabled for p0925 = 65535.		
<b>r0930</b>	<b>PROFIdrive operating mode / PD operating mode</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Setpoints <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the operating mode. 1: Closed-loop speed controlled operation with ramp-function generator 2: Position controlled operation 3: Closed-loop speed controlled operation without ramp-function generator		
<b>r0944</b>	<b>CO: Counter for fault buffer changes / Fault buff change</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 2 <b>Func. diagram:</b> 8060 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Display and connector output for the counter for changes of the fault buffer. This counter is incremented every time the fault buffer changes.		
<b>Recommendation:</b>	Used to check whether the fault buffer has been read out consistently.		
<b>Dependency:</b>	Refer to: r0945, r0947, r0948, r0949, r2109		
<b>r0945[0...63]</b>	<b>Fault code / Fault code</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 2 <b>Func. diagram:</b> 8050, 8060 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the numbers of faults that have occurred.		
<b>Dependency:</b>	Refer to: r0947, r0948, r0949, r2109, r2130, r2133, r2136, r3120, r3122		
<b>Notice:</b>	The properties of the fault buffer should be taken from the corresponding product documentation.		
<b>Note:</b>	The buffer parameters are cyclically updated in the background (refer to status signal in r2139). Fault buffer structure (general principle): r0945[0], r0949[0], r0948[0], r2109[0], r3115[0] --> actual fault case, fault 1 ... r0945[7], r0949[7], r0948[7], r2109[7], r3115[7] --> actual fault case, fault 8		

r0945[8], r0949[8], r0948[8], r2109[8], r3115[8] --> 1st acknowledged fault case, fault 1  
 ...  
 r0945[15], r0949[15], r0948[15], r2109[15], r3115[15] --> 1st acknowledged fault case, fault 8  
 ...  
 r0945[56], r0949[56], r0948[56], r2109[56], r3115[56] --> 7th acknowledged fault case, fault 1  
 ...  
 r0945[63], r0949[63], r0948[63], r2109[63], r3115[63] --> 7th acknowledged fault case, fault 8

**r0946[0...65534] Fault code list / Fault code list**

All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8060
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Lists the fault codes stored in the drive unit.

The indices can only be accessed with a valid fault code.

**Dependency:** The parameter assigned to the fault code is entered in r0951 under the same index.

**r0947[0...63] Fault number / Fault number**

All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8060
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** This parameter is identical to r0945.

**r0948[0...63] Fault time received in milliseconds / t\_fault rcv ms**

All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8060
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ms]	- [ms]	- [ms]

**Description:** Displays the system runtime in milliseconds when the fault occurred.

**Dependency:** Refer to: r0945, r0947, r0949, r2109, r2114, r2130, r2133, r2136, r3115, r3120, r3122

**Notice:** The time comprises r2130 (days) and r0948 (milliseconds).

**Note:** The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the fault buffer and the assignment of the indices is shown in r0945.

When the parameter is read via PROFIdrive, the TimeDifference data type applies.

**r0949[0...63] Fault value / Fault value**

All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8060
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays additional information about the fault that occurred (as integer number).

**Dependency:** Refer to: r0945, r0947, r0948, r2109, r2130, r2133, r2136, r3115, r3120, r3122

**Note:** The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the fault buffer and the assignment of the indices is shown in r0945.

## 2 Parameters

### 2.2 List of parameters

---

<b>p0952</b>	<b>Fault cases counter / Fault cases qty</b>		
All objects	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6700, 8060
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Number of fault situations that have occurred since the last reset.		
<b>Dependency:</b>	The fault buffer is deleted (cleared) by setting p0952 to 0. Refer to: r0945, r0947, r0948, r0949, r2109, r2130, r2133, r2136		

---

<b>r0963</b>	<b>PROFIBUS baud rate / PB baud rate</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	-
<b>Description:</b>	Displays the corresponding value for the PROFIBUS baud rate.		
<b>Value:</b>	0: 9.6 kbit/s 1: 19.2 kbit/s 2: 93.75 kbit/s 3: 187.5 kbit/s 4: 500 kbit/s 6: 1.5 Mbit/s 7: 3 Mbit/s 8: 6 Mbit/s 9: 12 Mbit/s 10: 31.25 kbit/s 11: 45.45 kbit/s 255: Unknown		

---

<b>r0964[0...6]</b>	<b>Device identification / Device ident</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the device identification.		
<b>Index:</b>	[0] = Company (Siemens = 42) [1] = Device type [2] = Firmware version [3] = Firmware date (year) [4] = Firmware date (day/month) [5] = Number of drive objects [6] = Firmware patch/hot fix		
<b>Note:</b>	Example: r0964[0] = 42 --> SIEMENS r0964[1] = device type, see below r0964[2] = 403 --> first part of the firmware version V04.03 (for second part, refer to index 6) r0964[3] = 2010 --> year 2010 r0964[4] = 1705 --> 17th of May r0964[5] = 2 --> 2 drive objects r0964[6] = 200 --> second part, firmware version (complete version: V04.03.02.00)		

Device type:

r0964[1] = 5200 --> SINAMICS G150 CU320-2 DP

r0964[1] = 5201 --> SINAMICS G150 CU320-2 PN

r0964[1] = 5210 --> SINAMICS G130 CU320-2 DP

r0964[1] = 5211 --> SINAMICS G130 CU320-2 PN

<b>r0965</b>	<b>PROFIdrive profile number / PD profile number</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the PROFIdrive profile number and profile version. Constant value = 0329 hex. Byte 1: Profile number = 03 hex = PROFIdrive profile Byte 2: Profile version = 29 hex = Version 4.1		
<b>Note:</b>	When the parameter is read via PROFIdrive, the Octet String 2 data type applies.		
<b>p0969</b>	<b>System runtime relative / t_System relative</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8060
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	4294967295 [ms]	0 [ms]
<b>Description:</b>	Displays the system runtime in ms since the last POWER ON.		
<b>Note:</b>	The value in p0969 can only be reset to 0. The value overflows after approx. 49 days. When the parameter is read via PROFIdrive, the TimeDifference data type applies.		
<b>p0970</b>	<b>Reset drive parameters / Drive par reset</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C2(30)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Factory settings	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	100	0
<b>Description:</b>	The parameter is used to initiate the reset of the parameters of an individual drive unit. Parameters p0100, p0205 (only for VECTOR) and the parameters of the basic drive commissioning (p0009) are not reset (p0107, p0108, p0111, p0112, p0115, p0121, p0130, p0131, p0140, p0141, p0142, p0170, p0186 ... p0189). These can only be reset using the factory setting of the complete drive unit (p0976).		
<b>Value:</b>	0: Inactive 1: Start a parameter reset 5: Starts a safety parameter reset 6: Start reset non-safety/safety parameters 10: Start loading the parameters saved with p0971=10 11: Start loading the parameters saved with p0971=11 12: Start loading the parameters saved with p0971=12 30: Start loading the delivery state saved with p0971=30 100: Start a BICO interconnection reset		
<b>Notice:</b>	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.		

## 2 Parameters

### 2.2 List of parameters

**Note:** A factory setting run can only be started if p0010 was first set to 30 (parameter reset).  
At the end of the calculations, p0970 is automatically set to 0.  
Parameter reset has been completed if p0970 and p0010 have been set to 0.  
For p0970 = 5 the following applies:  
The password for Safety Integrated must be set.  
When Safety Integrated is enabled, this can result in error messages, which then require an acceptance test to be performed.  
Then save the parameters and carry out a POWER ON.

---

<b>p0970</b>	<b>Reset drive parameters / Drive par reset</b>		
VECTOR_G	<b>Can be changed:</b> C2(30)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Factory settings	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	100	0
<b>Description:</b>	The parameter is used to initiate the reset of the parameters of an individual drive unit. Parameters p0100, p0205 (only for VECTOR) and the parameters of the basic drive commissioning (p0009) are not reset (p0107, p0108, p0111, p0112, p0115, p0121, p0130, p0131, p0140, p0141, p0142, p0170, p0186 ... p0189). These can only be reset using the factory setting of the complete drive unit (p0976).		
<b>Value:</b>	0: Inactive 1: Start a parameter reset 5: Starts a safety parameter reset 6: Start reset non-safety/safety parameters 100: Start a BICO interconnection reset		
<b>Dependency:</b>	Refer to: F01659		
<b>Notice:</b>	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.		
<b>Note:</b>	A factory setting run can only be started if p0010 was first set to 30 (parameter reset). At the end of the calculations, p0970 is automatically set to 0. Parameter reset has been completed if p0970 and p0010 have been set to 0. For p0970 = 5 the following applies: The password for Safety Integrated must be set. When Safety Integrated is enabled, this can result in error messages, which then require an acceptance test to be performed. Then save the parameters and carry out a POWER ON. For p0970 = 1 the following applies: If a Safety Integrated function is parameterized (p9601), then the safety parameters are not reset. In this case, a fault F01659 is output with fault value 2.		

---

<b>p0970</b>	<b>Reset infeed parameter / INF par reset</b>		
B_INF	<b>Can be changed:</b> C2(30)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Factory settings	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	100	0
<b>Description:</b>	The parameter is used to initiate a reset of the parameters of an individual infeed unit. The parameters of the basic commissioning (refer to p0009) are in this case not reset (p0107, p0108, p0121, p0170). These can only be reset using the factory setting of the complete drive unit (p0976). The sampling times (p0111, p0112, p0115) are only not reset if this results in a conflict with the basic clock cycle (p0110).		
<b>Value:</b>	0: Inactive 1: Start a parameter reset 100: Start a BICO interconnection reset		

- Notice:** After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.
- Note:** A factory setting run can only be started if p0010 was first set to 30 (parameter reset).  
At the end of the calculations, p0970 is automatically set to 0.  
Parameter reset has been completed if p0970 and p0010 have been set to 0.

---

<b>p0970</b>	<b>TM120 reset parameters / TM120 par reset</b>		
TM120	<b>Can be changed:</b> C2(30)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Factory settings	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	100	0
<b>Description:</b>	The parameter is used to initiate a reset of the parameters on Terminal Module 120 (TM120).		
<b>Value:</b>	0: Inactive 1: Start a parameter reset 100: Start a BICO interconnection reset		
<b>Dependency:</b>	Refer to: p0010		
<b>Notice:</b>	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.		
<b>Note:</b>	A factory setting run can only be started if p0010 was first set to 30 (parameter reset). At the end of the calculations, p0970 is automatically set to 0.		

---

<b>p0970</b>	<b>TM150 reset parameters / TM150 par reset</b>		
TM150	<b>Can be changed:</b> C2(30)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Factory settings	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	100	0
<b>Description:</b>	The parameter is used to initiate a reset of the parameters on Terminal Module 150 (TM150).		
<b>Value:</b>	0: Inactive 1: Start a parameter reset 100: Start a BICO interconnection reset		
<b>Dependency:</b>	Refer to: p0010		
<b>Notice:</b>	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.		
<b>Note:</b>	A factory setting run can only be started if p0010 was first set to 30 (parameter reset). At the end of the calculations, p0970 is automatically set to 0.		

---

<b>p0970</b>	<b>TM31 reset parameters / TM31 par reset</b>		
TM31	<b>Can be changed:</b> C2(30)	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Factory settings	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	100	0
<b>Description:</b>	The parameter is used to initiate a reset of the parameters on Terminal Module 31 (TM31). The sampling time p4099 is not reset if in so doing a conflict occurs with the basic clock cycle. Parameter p0151 is not reset. It is only reset if the entire drive unit is reset to the factory settings (p0976).		
<b>Value:</b>	0: Inactive 1: Start a parameter reset 100: Start a BICO interconnection reset		
<b>Dependency:</b>	Refer to: p0010		

## 2 Parameters

### 2.2 List of parameters

**Notice:** After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.

**Note:** A factory setting run can only be started if p0010 was first set to 30 (parameter reset).  
At the end of the calculations, p0970 is automatically set to 0.

---

<b>p0970</b>	<b>TB30 reset parameters / TB30 par reset</b>		
TB30	<b>Can be changed:</b> C2(30) <b>Data type:</b> Unsigned16 <b>P-Group:</b> Factory settings <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 100	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	The parameter is used to initiate a reset of the parameters on Terminal Board 30 (TB30). The sampling time p4099 is not reset if in so doing a conflict occurs with the basic clock cycle. Parameter p0161 is not reset. It is only reset if the entire drive unit is reset to the factory settings (p0976).		
<b>Value:</b>	0: Inactive 1: Start a parameter reset 100: Start a BICO interconnection reset		
<b>Notice:</b>	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.		
<b>Note:</b>	A factory setting run can only be started if p0010 was first set to 30 (parameter reset). At the end of the calculations, p0970 is automatically set to 0. Parameter reset has been completed if p0970 and p0010 have been set to 0.		

---

<b>p0970</b>	<b>TM54F reset parameters / TM54F par reset</b>		
TM54F_MA	<b>Can be changed:</b> C2(30) <b>Data type:</b> Unsigned16 <b>P-Group:</b> Factory settings <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 100	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	The parameter is used to initiate a reset of the parameters on Terminal Module 54F (TM54F). Parameter p0151 is not reset. It is only reset if the entire drive unit is reset to the factory settings (p0976).		
<b>Value:</b>	0: Inactive 1: Start a parameter reset 5: Starts a safety parameter reset 6: Start reset non-safety/safety parameters 100: Start a BICO interconnection reset		
<b>Notice:</b>	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.		
<b>Note:</b>	A factory setting run can only be started if p0010 was first set to 30 (parameter reset). At the end of the calculations, p0970 is automatically set to 0. Parameter reset has been completed if p0970 and p0010 have been set to 0. For p0970 = 5 the following applies: The password for Safety Integrated must be set. When Safety Integrated is enabled, this can result in error messages, which then require an acceptance test to be performed. Then save the parameters and carry out a POWER ON.		

<b>p0970</b>		<b>ENCODER reset parameters / ENC par reset</b>		
ENC	<b>Can be changed:</b> C2(30)	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Factory settings	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	100	0	
<b>Description:</b>	The parameter is used to initiate the reset of the parameters on the ENCODER drive object. Parameter p0141 is not reset. It is only reset if the entire drive unit is reset to the factory settings (p0976).			
<b>Value:</b>	0: Inactive 1: Start a parameter reset 100: Start a BICO interconnection reset			
<b>Notice:</b>	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.			
<b>Note:</b>	A factory setting run can only be started if p0010 was first set to 30 (parameter reset). At the end of the calculations, p0970 is automatically set to 0. Parameter reset has been completed if p0970 and p0010 have been set to 0.			

<b>p0971</b>		<b>Save drive object parameters / Drv_obj par save</b>		
All objects	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Factory settings	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	1	0	
<b>Description:</b>	Setting to save the parameter of the particular drive object in the non-volatile memory. When saving, only the adjustable parameters intended to be saved are taken into account.			
<b>Value:</b>	0: Inactive 1: Save drive object			
<b>Dependency:</b>	Refer to: p0977, p1960, p3845, r3996			
<b>Notice:</b>	The Control Unit power supply may only be switched off after data has been saved (i.e. after data save has been started, wait until the parameter again has the value 0). Writing to parameters is inhibited while saving. The progress while saving is displayed in r3996.			
<b>Note:</b>	Starting from the particular drive object, the following parameters are saved: CU3xx: Device-specific parameters and PROFIBUS device parameters. Other objects: Parameters of the actual object and PROFIBUS device parameters. Prerequisite: In order that the parameter of a drive object, saved with p0971 = 1, is read the next time that the Control Unit is booted, then all parameters must, as a minimum, have first been saved once with p0977 = 1.			

<b>p0972</b>		<b>Drive unit reset / Drv_unit reset</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	3	0	
<b>Description:</b>	Sets the required procedure to execute a hardware reset for the drive unit.			
<b>Value:</b>	0: Inactive 1: Hardware-Reset immediate 2: Hardware reset preparation 3: Hardware reset after cyclic communication has failed			

**Danger:**



**Note:**

It must be absolutely ensured that the system is in a safe condition.

The memory card/device memory of the Control Unit must not be accessed.

If value = 1:

Reset is immediately executed and communications interrupted.

After communications have been established, check the reset operation (refer below).

If value = 2:

Help to check the reset operation.

Firstly, set p0972 = 2 and then read back. Secondly, set p0972 = 1 (it is possible that this request is possibly no longer acknowledged). The communication is then interrupted.

After communications have been established, check the reset operation (refer below).

If value = 3:

The reset is executed after interrupting cyclic communication. This setting is used to implement a synchronized reset by a control for several drive units.

If cyclic communication is not active, then the reset is immediately executed.

If the cyclic communication is active for both PROFIdrive interfaces, then the reset is executed after completing both cycle communications.

After communications have been established, check the reset operation (refer below).

To check the reset operation:

After the drive unit has been restarted and communications have been established, read p0972 and check the following:

p0972 = 0? --> the reset was successfully executed.

p0972 = 0? --> the reset was not executed.

<b>r0975[0...10]</b>	<b>Drive object identification / DO identification</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the identification of the drive object.		
<b>Index:</b>	[0] = Company (Siemens = 42) [1] = Drive object type [2] = Firmware version [3] = Firmware date (year) [4] = Firmware date (day/month) [5] = PROFIdrive drive object type class [6] = PROFIdrive drive object sub-type Class 1 [7] = Drive object number [8] = Reserved [9] = Reserved [10] = Firmware patch/hot fix		
<b>Note:</b>	Example: r0975[0] = 42 --> SIEMENS r0975[1] = 11 --> SERVO drive object type r0975[2] = 102 --> first part, firmware version V01.02 (second part, refer to index 10) r0975[3] = 2003 --> year 2003 r0975[4] = 1401 --> 14th of January r0975[5] = 1 --> PROFIdrive drive object, type class r0975[6] = 9 --> PROFIdrive drive object sub-type class 1 r0975[7] = 2 --> drive object number = 2 r0975[8] = 0 (reserved) r0975[9] = 0 (reserved) r0975[10] = 600 --> second part, firmware version (complete version: V01.02.06.00)		

<b>p0976</b>			
<b>Reset and load all parameters / Reset load all par</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(30)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Factory settings	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1013	0
<b>Description:</b>	Resets or downloads all parameters of the drive system.		
<b>Value:</b>	0: Inactive 1: Start reset of all parameters to factory setting 2: Start dnlod of param. saved in non-volatile mem w/ p0977=1 3: Start download of volatile parameters from RAM 10: Start dnlod of param. saved in non-volatile mem w/ p0977=10 11: Start dnlod of param. saved in non-volatile mem w/ p0977=11 12: Start dnlod of param. saved in non-volatile mem w/ p0977=12 20: Start download Siemens internal setting 20 21: Start download Siemens internal setting 21 22: Start download Siemens internal setting 22 23: Start download Siemens internal setting 23 24: Start download Siemens internal setting 24 25: Start download Siemens internal setting 25 26: Start download Siemens internal setting 26 30: Start loading the delivery state saved with p0977=30 100: Start resetting of all BICO interconnections 1011: Start dnlod of param. saved in volatile mem w/ p0977=1011 1012: Start dnlod of param. saved in volatile mem w/ p0977=1012 1013: Start dnlod of param. saved in volatile mem w/ p0977=1013		
<b>Notice:</b>	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.		
<b>Note:</b>	After all of the parameters have been reset to their factory setting, the system must be commissioned for the first time again. Resetting or loading is realized in the non-volatile memory. Procedure: 1. Set p0009 = 30 (parameter reset). 2. Set p0976 to "required value". The system is rebooted. p0976 is automatically set to 0 and p0009 is automatically set to 1 after this has been carried out.		

<b>p0977</b>			
<b>Save all parameters / Save all par</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Factory settings	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1013	0
<b>Description:</b>	Saves all parameters of the drive system to the non-volatile memory. When saving, only the adjustable parameters intended to be saved are taken into account.		
<b>Value:</b>	0: Inactive 1: Save in non-volatile memory - downloaded at POWER ON 10: Save as opt. in non-vol. memory - downloaded w/ p0976=10 11: Save as opt. in non-vol. memory - downloaded w/ p0976=11 12: Save as opt. in non-vol. memory - downloaded w/ p0976=12 20: Save in non-volatile memory as setting 20 (reserved) 21: Save in non-volatile memory as setting 21 (reserved) 22: Save in non-volatile memory as setting 22 (reserved) 23: Save in non-volatile memory as setting 23 (reserved) 24: Save in non-volatile memory as setting 24 (reserved) 25: Save in non-volatile memory as setting 25 (reserved) 26: Save in non-volatile memory as setting 26 (reserved)		

## 2 Parameters

### 2.2 List of parameters

- 30: State when delivered, save in non-volatile memory as setting 30
- 80: Save in non-volatile memory time-optimized (reserved)
- 1011: Save in volatile memory, downloaded with p0976=1011
- 1012: Save in volatile memory, downloaded with p0976=1012
- 1013: Save in volatile memory, downloaded with p0976=1013

**Dependency:**

Refer to: p0976, p1960, p3845, r3996

**Notice:**

The Control Unit power supply may only be switched off after data has been saved (i.e. after data save has been started, wait until the parameter again has the value 0).

Writing to parameters is inhibited while saving.

The progress while saving is displayed in r3996.

For p0977 = 30:

The original state when delivered is overwritten when executing this memory function.

**Note:**

Parameters saved with p0977 = 10, 11 or 12 can be downloaded again with p0976 = 10, 11 or 12.

The identification and maintenance data (I&M data, p8806 and following) are only saved for p0977 = 1.

#### p0978[0...n]

#### List of drive objects / List of the DO

CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP

**Can be changed:** C1(1)

**Calculated:** -

**Access level:** 2

**Data type:** Unsigned8

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** Topology

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

255

[0] 1

[1...24] 0

**Description:**

This parameter is an image of p0101 in conformance with PROFIdrive.

Parameters p0101 and p0978 contain the following information:

- 1) The same number of drive objects
- 2) The same drive objects

In this sense, they are consistent.

Difference between p0101 and p0978:

p0978 can be re-sorted and a zero inserted in order to identify those drive objects that participate in the process data exchange and to define their sequence in the process data exchange. Drive objects that are listed after the first zero, are excluded from the process data exchange.

For p0978, in addition, the value 255 can be inserted a multiple number of times.

p0978[n] = 255 means: The drive object is visible for the PROFIBUS master and is empty (without any actual process data exchange). This allows cyclic communications of a PROFIBUS master with unchanged configuring to the drive units with a lower number of drive objects.

**Dependency:**

Refer to: p0101, p0971, p0977

**Note:**

p0978 cannot be changed when the drive system is first commissioned. The reason for this is that at this time the actual topology has still not been acknowledged (p0099 is still not equal to r0098 and p0009 is set to 0).

#### r0979[0...30]

#### PROFIdrive encoder format / PD encoder format

VECTOR\_G

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** 4704

**P-Group:** Encoder

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:**

Displays the actual position encoder used according to PROFIdrive.

**Index:**

- [0] = Header
- [1] = Type encoder 1
- [2] = Resolution enc 1
- [3] = Shift factor G1\_XIST1
- [4] = Shift factor G1\_XIST2
- [5] = Distinguishable revolutions encoder 1
- [6...10] = Reserved
- [11] = Type encoder 2
- [12] = Resolution enc 2

[13] = Shift factor G2\_XIST1  
 [14] = Shift factor G2\_XIST2  
 [15] = Distinguishable revolutions encoder 2  
 [16...20] = Reserved  
 [21] = Type encoder 3  
 [22] = Resolution enc 3  
 [23] = Shift factor G3\_XIST1  
 [24] = Shift factor G3\_XIST2  
 [25] = Distinguishable revolutions encoder 3  
 [26...30] = Reserved

**Note:** Information about the individual indices can be taken from the following literature:  
 PROFIdrive Profile Drive Technology

---

### r0979[0...10] PROFIdrive encoder format / PD encoder format

ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the actual position encoder used according to PROFIdrive.

**Index:**  
 [0] = Header  
 [1] = Type encoder 1  
 [2] = Resolution enc 1  
 [3] = Shift factor G1\_XIST1  
 [4] = Shift factor G1\_XIST2  
 [5] = Distinguishable revolutions encoder 1  
 [6...10] = Reserved

**Note:** Information about the individual indices can be taken from the following literature:  
 PROFIdrive Profile Drive Technology

---

### r0979[0...10] PROFIdrive encoder format / PD encoder format

ENC (Lin_enc)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the actual position encoder used according to PROFIdrive.

**Index:**  
 [0] = Header  
 [1] = Type encoder 1  
 [2] = Resolution enc 1  
 [3] = Shift factor G1\_XIST1  
 [4] = Shift factor G1\_XIST2  
 [5] = Distinguishable distance encoder 1  
 [6...10] = Reserved

**Note:** Information about the individual indices can be taken from the following literature:  
 PROFIdrive Profile Drive Technology

<b>r0980[0...299]</b>	<b>List of existing parameters 1 / List avail par 1</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the parameters that exist for this drive.		
<b>Dependency:</b>	Refer to: r0981, r0989		
<b>Note:</b>	Modified parameters are displayed in indices 0 to 298. If an index contains the value 0, then the list ends here. In a long list, index 299 contains the parameter number at which position the list continues. This list consists solely of the following parameters: r0980[0...299], r0981[0...299] ... r0989[0...299] The parameters in this list are not displayed in the expert list of the commissioning software. However, they can be read from a higher-level control system (e.g. PROFIBUS master).		
<b>r0981[0...299]</b>	<b>List of existing parameters 2 / List avail par 2</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the parameters that exist for this drive.		
<b>Dependency:</b>	Refer to: r0980, r0989		
<b>Note:</b>	Modified parameters are displayed in indices 0 to 298. If an index contains the value 0, then the list ends here. In a long list, index 299 contains the parameter number at which position the list continues. This list consists solely of the following parameters: r0980[0...299], r0981[0...299] ... r0989[0...299] The parameters in this list are not displayed in the expert list of the commissioning software. However, they can be read from a higher-level control system (e.g. PROFIBUS master).		
<b>r0989[0...299]</b>	<b>List of existing parameters 10 / List avail par 10</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the parameters that exist for this drive.		
<b>Dependency:</b>	Refer to: r0980, r0981		
<b>Note:</b>	Modified parameters are displayed in indices 0 to 298. If an index contains the value 0, then the list ends here. This list consists solely of the following parameters: r0980[0...299], r0981[0...299] ... r0989[0...299] The parameters in this list are not displayed in the expert list of the commissioning software. However, they can be read from a higher-level control system (e.g. PROFIBUS master).		

<b>r0990[0...99]</b>	<b>List of modified parameters 1 / List chang par 1</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays those parameters with a value other than the factory setting for this drive.		
<b>Dependency:</b>	Refer to: r0991, r0999		
<b>Note:</b>	Modified parameters are displayed in indices 0 to 98. If an index contains the value 0, then the list ends here. In a long list, index 99 contains the parameter number at which position the list continues. This list consists solely of the following parameters: r0990[0...99], r0991[0...99] ... r0999[0...99] The parameters in this list are not displayed in the expert list of the commissioning software. However, they can be read from a higher-level control system (e.g. PROFIBUS master).		
<b>r0991[0...99]</b>	<b>List of modified parameters 2 / List chang par 2</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays those parameters with a value other than the factory setting for this drive.		
<b>Dependency:</b>	Refer to: r0990, r0999		
<b>Note:</b>	Modified parameters are displayed in indices 0 to 98. If an index contains the value 0, then the list ends here. In a long list, index 99 contains the parameter number at which position the list continues. This list consists solely of the following parameters: r0990[0...99], r0991[0...99] ... r0999[0...99] The parameters in this list are not displayed in the expert list of the commissioning software. However, they can be read from a higher-level control system (e.g. PROFIBUS master).		
<b>r0999[0...99]</b>	<b>List of modified parameters 10 / List chang par 10</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays those parameters with a value other than the factory setting for this drive.		
<b>Dependency:</b>	Refer to: r0990, r0991		
<b>Note:</b>	Modified parameters are displayed in indices 0 to 98. If an index contains the value 0, then the list ends here. This list consists solely of the following parameters: r0990[0...99], r0991[0...99] ... r0999[0...99] The parameters in this list are not displayed in the expert list of the commissioning software. However, they can be read from a higher-level control system (e.g. PROFIBUS master).		

## 2 Parameters

### 2.2 List of parameters

<b>p1000[0...n]</b>	<b>Macro Connector Inputs (CI) for speed setpoints / Macro CI n_set</b>		
VECTOR_G	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> -
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	999999	0
<b>Description:</b>	Runs the corresponding macro files. The Connector Inputs (CI) for the speed setpoints of the appropriate Command Data Set (CDS) are appropriately interconnected. The selected macro file must be available on the memory card/device memory. Example: p1000 = 6 --> the macro file PM000006.ACX is run.		
<b>Dependency:</b>	Refer to: p0015, p0700, p1500, r8572		
<b>Notice:</b>	No errors were issued during quick commissioning (p3900 = 1) when writing to parameters of the QUICK_IBN group! When executing a specific macro, the corresponding programmed settings are made and become active.		
<b>Note:</b>	The macros in the specified directory are displayed in r8572. r8572 is not in the expert list of the commissioning software. Macros available as standard are described in the technical documentation of the particular product. CI: Connector Input		
<b>p1001[0...n]</b>	<b>CO: Fixed speed setpoint 1 / n_set_fixed 1</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Setting and connector output for fixed speed setpoint 1.		
<b>Dependency:</b>	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>p1002[0...n]</b>	<b>CO: Fixed speed setpoint 2 / n_set_fixed 2</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Setting and connector output for fixed speed setpoint 2.		
<b>Dependency:</b>	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>p1003[0...n]</b>	<b>CO: Fixed speed setpoint 3 / n_set_fixed 3</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Setting and connector output for fixed speed setpoint 3.		
<b>Dependency:</b>	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		

**Notice:** A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.

---

<b>p1004[0...n]</b>	<b>CO: Fixed speed setpoint 4 / n_set_fixed 4</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]

**Description:** Setting and connector output for fixed speed setpoint 4.

**Dependency:** Refer to: p1020, p1021, p1022, p1023, r1024, r1197

**Notice:** A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.

---

<b>p1005[0...n]</b>	<b>CO: Fixed speed setpoint 5 / n_set_fixed 5</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]

**Description:** Setting and connector output for fixed speed setpoint 5.

**Dependency:** Refer to: p1020, p1021, p1022, p1023, r1024, r1197

**Notice:** A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.

---

<b>p1006[0...n]</b>	<b>CO: Fixed speed setpoint 6 / n_set_fixed 6</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]

**Description:** Setting and connector output for fixed speed setpoint 6.

**Dependency:** Refer to: p1020, p1021, p1022, p1023, r1024, r1197

**Notice:** A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.

---

<b>p1007[0...n]</b>	<b>CO: Fixed speed setpoint 7 / n_set_fixed 7</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]

**Description:** Setting and connector output for fixed speed setpoint 7.

**Dependency:** Refer to: p1020, p1021, p1022, p1023, r1024, r1197

**Notice:** A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.

## 2 Parameters

### 2.2 List of parameters

---

<b>p1008[0...n]</b>	<b>CO: Fixed speed setpoint 8 / n_set_fixed 8</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Setting and connector output for fixed speed setpoint 8.		
<b>Dependency:</b>	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

---

<b>p1009[0...n]</b>	<b>CO: Fixed speed setpoint 9 / n_set_fixed 9</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Setting and connector output for fixed speed setpoint 9.		
<b>Dependency:</b>	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

---

<b>p1010[0...n]</b>	<b>CO: Fixed speed setpoint 10 / n_set_fixed 10</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Setting and connector output for fixed speed setpoint 10.		
<b>Dependency:</b>	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

---

<b>p1011[0...n]</b>	<b>CO: Fixed speed setpoint 11 / n_set_fixed 11</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Setting and connector output for fixed speed setpoint 11.		
<b>Dependency:</b>	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

---

<b>p1012[0...n]</b>	<b>CO: Fixed speed setpoint 12 / n_set_fixed 12</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Setting and connector output for fixed speed setpoint 12.		
<b>Dependency:</b>	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

---

<b>p1013[0...n]</b>	<b>CO: Fixed speed setpoint 13 / n_set_fixed 13</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Setting and connector output for fixed speed setpoint 13.		
<b>Dependency:</b>	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

---

<b>p1014[0...n]</b>	<b>CO: Fixed speed setpoint 14 / n_set_fixed 14</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Setting and connector output for fixed speed setpoint 14.		
<b>Dependency:</b>	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

---

<b>p1015[0...n]</b>	<b>CO: Fixed speed setpoint 15 / n_set_fixed 15</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3010
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Setting and connector output for fixed speed setpoint 15.		
<b>Dependency:</b>	Refer to: p1020, p1021, p1022, p1023, r1024, r1197		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

<b>p1020[0...n]</b>	<b>BI: Fixed speed setpoint selection Bit 0 / n_set_fixed Bit 0</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2505, 3010, 3011
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for selecting the fixed speed setpoint.		
<b>Dependency:</b>	Selects the required fixed speed setpoint using p1020 ... p1023. Displays the number of the actual fixed speed setpoint in r1197. Sets the values for the fixed speed setpoints 1 ... 15 using p1001 ... p1015. Refer to: p1021, p1022, p1023, r1197		
<b>Note:</b>	If a fixed speed setpoint has not been selected (p1020 ... p1023 = 0, r1197 = 0), then r1024 = 0 (setpoint = 0).		
<b>p1021[0...n]</b>	<b>BI: Fixed speed setpoint selection Bit 1 / n_set_fixed Bit 1</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2505, 3010, 3011
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for selecting the fixed speed setpoint.		
<b>Dependency:</b>	Selects the required fixed speed setpoint using p1020 ... p1023. Displays the number of the actual fixed speed setpoint in r1197. Sets the values for the fixed speed setpoints 1 ... 15 using p1001 ... p1015. Refer to: p1020, p1022, p1023, r1197		
<b>Note:</b>	If a fixed speed setpoint has not been selected (p1020 ... p1023 = 0, r1197 = 0), then r1024 = 0 (setpoint = 0).		
<b>p1022[0...n]</b>	<b>BI: Fixed speed setpoint selection Bit 2 / n_set_fixed Bit 2</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2505, 3010, 3011
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for selecting the fixed speed setpoint.		
<b>Dependency:</b>	Selects the required fixed speed setpoint using p1020 ... p1023. Displays the number of the actual fixed speed setpoint in r1197. Sets the values for the fixed speed setpoints 1 ... 15 using p1001 ... p1015. Refer to: p1020, p1021, p1023, r1197		
<b>Note:</b>	If a fixed speed setpoint has not been selected (p1020 ... p1023 = 0, r1197 = 0), then r1024 = 0 (setpoint = 0).		

<b>p1023[0...n]</b>	<b>BI: Fixed speed setpoint selection Bit 3 / n_set_fixed Bit 3</b>				
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2505, 3010, 3011		
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0		
<b>Description:</b>	Sets the signal source for selecting the fixed speed setpoint.				
<b>Dependency:</b>	Selects the required fixed speed setpoint using p1020 ... p1023. Displays the number of the actual fixed speed setpoint in r1197. Sets the values for the fixed speed setpoints 1 ... 15 using p1001 ... p1015. Refer to: p1020, p1021, p1022, r1197				
<b>Note:</b>	If a fixed speed setpoint has not been selected (p1020 ... p1023 = 0, r1197 = 0), then r1024 = 0 (setpoint = 0).				
<b>r1024</b>	<b>CO: Fixed speed setpoint effective / n_set_fixed eff</b>				
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3001, 3010, 3011		
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505		
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	- [rpm]	- [rpm]	- [rpm]		
<b>Description:</b>	Display and connector output for the selected and active fixed speed setpoint. This setpoint is the output value for the fixed speed setpoints and must be appropriately interconnected (e.g. with the main setpoint).				
<b>Recommendation:</b>	Interconnect the signal with the main setpoint (CI: p1070 = r1024).				
<b>Dependency:</b>	Selects the required fixed speed setpoint using p1020 ... p1023. Displays the number of the actual fixed speed setpoint in r1197. Sets the values for the fixed speed setpoints 1 ... 15 using p1001 ... p1015. Refer to: p1070, r1197				
<b>Note:</b>	If a fixed speed setpoint has not been selected (p1020 ... p1023 = 0, r1197 = 0), then r1024 = 0 (setpoint = 0).				
<b>p1030[0...n]</b>	<b>Motorized potentiometer configuration / Mop configuration</b>				
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3020		
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0110 bin		
<b>Description:</b>	Sets the configuration for the motorized potentiometer.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Data save active	Yes	No	-
	01	Automatic mode ramp-function generator active	Yes	No	-
	02	Initial rounding-off active	Yes	No	-
	03	Save in NVRAM active	Yes	No	-
	04	Ramp-function generator always active	Yes	No	-
<b>Notice:</b>	The following prerequisites must be fulfilled in order to be able to save the setpoint (Bit 03 = 1) in a non-volatile fashion: - Firmware with V2.3 or higher. - Control Unit 320 (CU320) with hardware version C or higher (module with NVRAM).				

## 2 Parameters

### 2.2 List of parameters

**Note:**

For bit 00:  
 0: The setpoint for the motorized potentiometer is not saved and after ON is entered using p1040.  
 1: The setpoint for the motorized potentiometer is saved after OFF and after ON set to the saved value. In order to save in a non-volatile fashion, bit 03 should be set to 1.

For bit 01:  
 0: Without ramp-function generator in the automatic mode (ramp-up/ramp-down time = 0).  
 1: With ramp-function generator in the automatic mode.

For manual operation (0 signal via BI: p1041), the ramp-function generator is always active.

For bit 02:  
 0: Without initial rounding-off  
 1: With initial rounding-off. The selected ramp-up/down time is correspondingly exceeded. The initial rounding-off is a sensitive way of specifying small changes (progressive reaction when keys are pressed).

The jerk for the initial rounding-off is independent of the ramp-up time and only depends on the selected maximum speed (p1082). It is calculated as follows:  

$$r = 0.01 \% * p1082 [1/s] / 0.13^2 [s^2]$$

The jerk acts up until the maximum acceleration is reached ( $a_{max} = p1082 [1/s] / p1047 [s]$ ), and then the drive continues to run linearly with a constant rate of acceleration. The higher the maximum acceleration (the lower that p1047 is), the longer the ramp-up time increases with respect to the set ramp-up time.

For bit 03:  
 0: Non-volatile data save deactivated.  
 1: The setpoint for the motorized potentiometer is saved in a non-volatile fashion (for bit 00 = 1).

For bit 04:  
 When the bit is set, the ramp-function generator is computed independent of the pulse enable. The actual output value of the motorized potentiometer is always in r1050.

<b>p1035[0...n]</b>	<b>BI: Motorized potentiometer setpoint raise / Mop raise</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2505, 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to continually increase the setpoint for the motorized potentiometer. The setpoint change (CO: r1050) depends on the set ramp-up time (p1047) and the duration of the signal that is present (BI: p1035).		
<b>Dependency:</b>	Refer to: p1036		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		

<b>p1036[0...n]</b>	<b>BI: Motorized potentiometer lower setpoint / Mop lower</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2505, 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to continuously lower the setpoint for the motorized potentiometer. The setpoint change (CO: r1050) depends on the set ramp-down time (p1048) and the duration of the signal that is present (BI: p1036).		
<b>Dependency:</b>	Refer to: p1035		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		

<b>p1037[0...n]</b>	<b>Motorized potentiometer maximum speed / MotP n_max</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> -210000.000 [rpm]	<b>Max</b> 210000.000 [rpm]	<b>Factory setting</b> 0.000 [rpm]
<b>Description:</b>	Sets the maximum speed/velocity for the motorized potentiometer.		
<b>Note:</b>	This parameter is automatically pre-assigned in the commissioning phase. The setpoint output from the motorized potentiometer is limited to this value.		
<b>p1038[0...n]</b>	<b>Motorized potentiometer minimum speed / MotP n_min</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> -210000.000 [rpm]	<b>Max</b> 210000.000 [rpm]	<b>Factory setting</b> 0.000 [rpm]
<b>Description:</b>	Sets the minimum speed/velocity for the motorized potentiometer.		
<b>Note:</b>	This parameter is automatically pre-assigned in the commissioning phase. The setpoint output from the motorized potentiometer is limited to this value.		
<b>p1039[0...n]</b>	<b>BI: Motorized potentiometer inversion / MotP inv</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> -	<b>Max</b> -	<b>Factory setting</b> 0
<b>Description:</b>	Sets the signal source to invert the minimum speed/velocity or the maximum speed/velocity for the motorized potentiometer.		
<b>Dependency:</b>	Refer to: p1037, p1038		
<b>Note:</b>	The inversion is only active during "motorized potentiometer raise" or "motorized potentiometer lower".		
<b>p1040[0...n]</b>	<b>Motorized potentiometer starting value / Mop start value</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> -210000.000 [rpm]	<b>Max</b> 210000.000 [rpm]	<b>Factory setting</b> 0.000 [rpm]
<b>Description:</b>	Sets the starting value for the motorized potentiometer. This starting value becomes effective after the drive has been switched off.		
<b>Dependency:</b>	Only effective if p1030.0 = 0. Refer to: p1030		

## 2 Parameters

### 2.2 List of parameters

---

<b>p1041[0...n]</b>	<b>BI: Motorized potentiometer manual/automatic / Mop manual/auto</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to change over from manual to automatic when using a motorized potentiometer. In the manual mode, the setpoint is changed using two signals - raise and lower. In the automatic mode, the setpoint must be interconnected via a connector input.		
<b>Dependency:</b>	Refer to: p1030, p1035, p1036, p1042		
<b>Note:</b>	The effectiveness of the internal ramp-function generator can be set in automatic mode.		

---

<b>p1042[0...n]</b>	<b>CI: Motorized potentiometer automatic setpoint / Mop auto setpoint</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the setpoint of the motorized potentiometer in the automatic mode.		
<b>Dependency:</b>	Refer to: p1041		

---

<b>p1043[0...n]</b>	<b>BI: Motorized potentiometer accept setting value / MotP acc set val</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to accept the setting value for the motorized potentiometer.		
<b>Dependency:</b>	Refer to: p1044		
<b>Note:</b>	The setting value (CI: p1044) becomes effective for a 0/1 edge of the setting command (BI: p1043).		

---

<b>p1044[0...n]</b>	<b>CI: Motorized potentiometer setting value / Mop set val</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the setting value for the motorized potentiometer.		
<b>Dependency:</b>	Refer to: p1043		
<b>Note:</b>	The setting value (CI: p1044) becomes effective for a 0/1 edge of the setting command (BI: p1043).		

---

<b>r1045</b>	<b>CO: Mot. potentiometer speed setp. in front of ramp-fct. gen. / Mop n_set bef RFG</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Sets the effective setpoint in front of the internal motorized potentiometer ramp-function generator.		
<b>p1047[0...n]</b>	<b>Motorized potentiometer ramp-up time / Mop ramp-up time</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	1000.000 [s]	10.000 [s]
<b>Description:</b>	Sets the ramp-up time for the internal ramp-function generator for the motorized potentiometer. The setpoint is changed from zero up to the speed/velocity limit (p1082) within this time (if no initial rounding-off has been activated).		
<b>Dependency:</b>	Refer to: p1030, p1048, p1082		
<b>Note:</b>	When the initial rounding-off is activated (p1030.2) the ramp-up time is correspondingly extended.		
<b>p1048[0...n]</b>	<b>Motorized potentiometer ramp-down time / Mop ramp-down time</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	1000.000 [s]	10.000 [s]
<b>Description:</b>	Sets the ramp-down time for the internal ramp-function generator for the motorized potentiometer. The setpoint is changed from the speed/velocity limit (p1082) to zero within this time (if no initial rounding-off has been activated).		
<b>Dependency:</b>	Refer to: p1030, p1047, p1082		
<b>Note:</b>	The deceleration time is extended corresponding to the activated initial rounding-off (p1030.2).		
<b>r1050</b>	<b>CO: Motor. potentiometer setpoint after the ramp-function generator / Mop setp after RFG</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3001, 3020
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Sets the effective setpoint after the internal motorized potentiometer ramp-function generator. This setpoint is the output value of the motorized potentiometer and must be appropriately interconnected onwards (e.g. with the main setpoint).		
<b>Recommendation:</b>	Interconnect the signal with main setpoint (p1070).		
<b>Dependency:</b>	Refer to: p1070		
<b>Note:</b>	For "With ramp-function generator", after an OFF1, OFF2, OFF3 or for a 0 signal via BI: p0852 (inhibit operation, suppress pulses) the ramp-function generator output (r1050) is set to the starting value (configuration via p1030.0).		

<b>p1051[0...n]</b>	<b>CI: Speed limit RFG positive direction of rotation / n_limit RFG pos</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3050
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1083[0]
<b>Description:</b>	Sets the signal source for the speed limit of the positive direction on the ramp-function generator input.		
<b>Note:</b>	The OFF3 ramp-down time (p1135) is effective when the limit is reduced.		
<b>p1052[0...n]</b>	<b>CI: Speed limit RFG negative direction of rotation / n_limit RFG neg</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3050
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1086[0]
<b>Description:</b>	Sets the signal source for the speed limit of the negative direction on the ramp-function generator input.		
<b>Note:</b>	The OFF3 ramp-down time (p1135) is effective when the limit is reduced.		
<b>p1055[0...n]</b>	<b>BI: Jog bit 0 / Jog bit 0</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2501, 3030
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for jog 1.		
<b>Recommendation:</b>	When the setting for this binector input is changed, the motor can only be switched on by means of an appropriate signal change of the source.		
<b>Dependency:</b>	Refer to: p0840, p1058		
<b>Notice:</b>	The drive is enabled for jogging using BI: p1055 or BI: p1056. The command "ON/OFF1" can be issued using BI: p0840 or using BI: p1055/p1056. Only the signal source that was used to switch on can also be used to switch off again.		
<b>p1056[0...n]</b>	<b>BI: Jog bit 1 / Jog bit 1</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2501, 3030
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for jog 2.		
<b>Recommendation:</b>	When the setting for this binector input is changed, the motor can only be switched on by means of an appropriate signal change of the source.		
<b>Dependency:</b>	Refer to: p0840, p1059		
<b>Notice:</b>	The drive is enabled for jogging using BI: p1055 or BI: p1056. The command "ON/OFF1" can be issued using BI: p0840 or using BI: p1055/p1056. Only the signal source that was used to switch on can also be used to switch off again.		

<b>p1058[0...n]</b>	<b>Jog 1 speed setpoint / Jog 1 n_set</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3001, 3030
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Sets the speed for jog 1. Jogging (JOG) is level-triggered, and allows the motor to be incrementally traversed.		
<b>Dependency:</b>	Refer to: p1055, p1056		
<b>p1059[0...n]</b>	<b>Jog 2 speed setpoint / Jog 2 n_set</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3001, 3030
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Sets the speed for jog 2. Jogging (JOG) is level-triggered, and allows the motor to be incrementally traversed.		
<b>Dependency:</b>	Refer to: p1055, p1056		
<b>p1063[0...n]</b>	<b>Setpoint channel speed limit / Setp_chan n_lim</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3040
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [rpm]	210000.000 [rpm]	40000.000 [rpm]
<b>Description:</b>	Sets the speed limit effective in the setpoint channel.		
<b>Dependency:</b>	Refer to: p1082, p1083, p1085, p1086, p1088		
<b>p1070[0...n]</b>	<b>CI: Main setpoint / Main setpoint</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3001, 3030
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1024[0]
<b>Description:</b>	Sets the signal source for the main setpoint. Examples: r1024: Fixed speed setpoint effective r1050: Motor. potentiometer setpoint after the ramp-function generator		
<b>Dependency:</b>	Refer to: p1071, r1073, r1078		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		

## 2 Parameters

### 2.2 List of parameters

---

<b>p1071[0...n]</b>	<b>CI: Main setpoint scaling / Main setp scal</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3001, 3030
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for scaling the main setpoint.		

---

<b>r1073</b>	<b>CO: Main setpoint effective / Main setpoint eff</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3030
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the effective main setpoint. The value shown is the main setpoint after scaling.		

---

<b>p1075[0...n]</b>	<b>CI: Suppl setp / Suppl setp</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3001, 3030
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the supplementary setpoint.		
<b>Dependency:</b>	Refer to: p1076, r1077, r1078		

---

<b>p1076[0...n]</b>	<b>CI: Supplementary setpoint scaling / Suppl setp scal</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3001, 3030
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for scaling the supplementary setpoint.		

---

<b>r1077</b>	<b>CO: Supplementary setpoint effective / Suppl setpoint eff</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3030
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the effective supplementary setpoint. The value shown is the additional setpoint after scaling.		

<b>r1078</b>	<b>CO: Total setpoint effective / Total setpoint eff</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Setpoints <b>Not for motor type:</b> - <b>Min</b> - [rpm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 3_1 <b>Scaling:</b> p2000 <b>Max</b> - [rpm]	<b>Access level:</b> 3 <b>Func. diagram:</b> 3030 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [rpm]
<b>Description:</b>	Displays the total effective setpoint. The value indicates the sum of the effective main setpoint and supplementary setpoint.		
<b>p1080[0...n]</b>	<b>Minimum speed / n_min</b>		
VECTOR_G	<b>Can be changed:</b> C2(1), T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Setpoints <b>Not for motor type:</b> - <b>Min</b> 0.000 [rpm]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 3_1 <b>Scaling:</b> - <b>Max</b> 19500.000 [rpm]	<b>Access level:</b> 1 <b>Func. diagram:</b> 3050 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 0.000 [rpm]
<b>Description:</b>	Sets the lowest possible motor speed. This value is not undershot in operation.		
<b>Dependency:</b>	Refer to: p1106		
<b>Notice:</b>	The effective minimum speed is formed from p1080 and p1106.		
<b>Note:</b>	The parameter value applies for both motor directions. In exceptional cases, the motor can operate below this value (e.g. when reversing). In order that a stationary motor – after all of the enable signals have been switched on, can operate at the minimum speed/minimum velocity once all of the enable signals are available, the direction must be entered using one of the following options: - direction input via small setpoint. - direction input by inhibiting the negative or positive direction (p1110, p1111).		
<b>p1081</b>	<b>Maximum speed scaling / n_max scal</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Setpoints <b>Not for motor type:</b> - <b>Min</b> 100.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> 105.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 3050, 3095 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 100.00 [%]
<b>Description:</b>	Sets the scaling for the maximum speed (p1082). For a higher-level speed control, this scaling allows the maximum speed to be briefly exceeded.		
<b>Dependency:</b>	Refer to: p1082		
<b>Notice:</b>	Continuous operation above a scaling of 100 % is not permitted.		
<b>p1082[0...n]</b>	<b>Maximum speed / n_max</b>		
VECTOR_G	<b>Can be changed:</b> C2(1), T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Setpoints <b>Not for motor type:</b> - <b>Min</b> 0.000 [rpm]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 3_1 <b>Scaling:</b> - <b>Max</b> 210000.000 [rpm]	<b>Access level:</b> 1 <b>Func. diagram:</b> 2820, 3020, 3050, 3060, 3070, 3095 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 1500.000 [rpm]
<b>Description:</b>	Sets the highest possible speed.		
<b>Dependency:</b>	For vector control (p1300 = 20 ... 23) the maximum speed is limited to 60.0 / (8.333 x p0115[0] x r0313). This can be identified by a reduction in r1084. p1082 is not changed in this process due to the fact that the operating mode p1300 can be changed over.		

## 2 Parameters

### 2.2 List of parameters

If a sine-wave filter (p0230 = 3) is parameterized as output filter, then the maximum speed is limited corresponding to the maximum permissible filter output frequency (refer to the filter data sheet). When using sine-wave filters (p0230 = 3, 4), the maximum speed r1084 is limited to 70% of the resonant frequency of the filter capacitance and the motor leakage inductance.

For reactors and dU/dt filters, it is limited to  $150 \text{ Hz} \times 60 / r0313$  (for chassis power units) or  $120 \text{ Hz} \times 60 / r0313$  (for booksize power units).

Refer to: p0115, p0230, r0313, p0322, p0324, r0336, p0532

**Notice:** After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.

**Note:** The parameter applies for both motor directions.

The parameter has a limiting effect and is the reference quantity for all ramp-up and ramp-down times (e.g. down ramps, ramp-function generator, motor potentiometer).

Since the parameter is part of quick commissioning (p0010 = 1), it is defined appropriately when p0310, p0311, p0322, p0324, p0530, p0531, and p0532 are changed.

$p1082 \leq \min(p0324, p0532)$  if  $p0324 > 0$  and  $p0532 > 0$

$p1082 \leq p0322$  if  $p0324 = 0$  or  $p0532 = 0$  and  $p0322 > 0$

$p1082 \leq 60 \times \text{minimum}(15 \times r0336, 650 \text{ Hz}) / r0313$

$p1082 \leq 60 \times \text{Maximum power unit pulse frequency} / (k \times r0313)$

$k = 12$  for vector control ( $r0108.2 = 1$ ),  $k = 6.5$  for U/f control ( $r0108.2 = 0$ )

For the automatic calculation (p0340 = 1) the value of the parameter is pre-assigned the maximum motor speed (p0322). If p0322 = 0, the rated motor speed (p0311) is used as default (pre-assignment) value. For induction motors that are not catalog motors (p0301 = 0), the synchronous no-load speed is used as default (pre-assignment) value ( $p0310 \times 60 / r0313$ ).

For synchronous motors, the following additionally applies:

The maximum speed p1082 is restricted to speeds (r1084) where the EMF does not exceed the DC link voltage.

The effective assignment of the motor data set parameter (e.g. p0311) to the drive data set parameter p1082 when pre-assigning should be taken from p0186.

p1082 is also available in the quick commissioning (p0010 = 1); this means that when exiting via p3900 > 0, the value is not changed.

<b>p1083[0...n]</b>	<b>CO: Speed limit in positive direction of rotation / n_limit pos</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3050, 6732
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [rpm]	210000.000 [rpm]	40000.000 [rpm]
<b>Description:</b>	Sets the maximum speed for the positive direction.		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

<b>r1084</b>	<b>CO: Speed limit positive effective / n_limit pos eff</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3050, 3095
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Display and connector output for the active positive speed limit.		
<b>Dependency:</b>	Refer to: p1082, p1083, p1085		

<b>p1085[0...n]</b>	<b>CI: Speed limit in positive direction of rotation / n_limit pos</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3050
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1083[0]
<b>Description:</b>	Sets the signal source for the speed limit of the positive direction.		
<b>p1086[0...n]</b>	<b>CO: Speed limit in negative direction of rotation / n_limit neg</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3050
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-210000.000 [rpm]	0.000 [rpm]	-40000.000 [rpm]
<b>Description:</b>	Sets the speed limit for the negative direction.		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>r1087</b>	<b>CO: Speed limit negative effective / n_limit neg eff</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3050, 3095
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Display and connector output for the active negative speed limit.		
<b>Dependency:</b>	Refer to: p1082, p1086, p1088		
<b>p1088[0...n]</b>	<b>CI: Speed limit in negative direction of rotation / n_limit neg</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3050
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1086[0]
<b>Description:</b>	Sets the signal source for the speed/velocity limit of the negative direction.		
<b>p1091[0...n]</b>	<b>Skip speed 1 / n_skip 1</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3050
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Sets skip speed 1.		
<b>Dependency:</b>	Refer to: p1092, p1093, p1094, p1101		
<b>Notice:</b>	Skip bandwidths can also become ineffective as a result of the downstream limits in the setpoint channel.		
<b>Note:</b>	The skip (suppression) speeds can be used to prevent the effects of mechanical resonance.		

## 2 Parameters

### 2.2 List of parameters

---

<b>p1092[0...n]</b>	<b>Skip speed 2 / n_skip 2</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3050
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Sets skip speed 2.		
<b>Dependency:</b>	Refer to: p1091, p1093, p1094, p1101		
<b>Notice:</b>	Skip bandwidths can also become ineffective as a result of the downstream limits in the setpoint channel.		

---

<b>p1093[0...n]</b>	<b>Skip speed 3 / n_skip 3</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3050
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Sets skip speed 3.		
<b>Dependency:</b>	Refer to: p1091, p1092, p1094, p1101		
<b>Notice:</b>	Skip bandwidths can also become ineffective as a result of the downstream limits in the setpoint channel.		

---

<b>p1094[0...n]</b>	<b>Skip speed 4 / n_skip 4</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3050
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [rpm]	210000.000 [rpm]	0.000 [rpm]
<b>Description:</b>	Sets skip speed 4.		
<b>Dependency:</b>	Refer to: p1091, p1092, p1093, p1101		
<b>Notice:</b>	Skip bandwidths can also become ineffective as a result of the downstream limits in the setpoint channel.		

---

<b>p1098[0...n]</b>	<b>Cl: Skip speed scaling / n_skip scal</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3050
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for scaling the skip speeds.		
<b>Dependency:</b>	Refer to: p1091, p1092, p1093, p1094		

---

<b>r1099.0</b>	<b>CO/BO: Skip band status word / Skip band ZSW</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and BICO output for the skip bands.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	r1170 within the skip band	Yes	No
				<b>FP</b> 3050
<b>Dependency:</b>	Refer to: r1170			
<b>Note:</b>	For bit 00: With the bit set, the setpoint speed is within the skip band after the ramp-function generator (r1170). The signal can be used to switch over the drive data set (DDS).			

---

<b>p1101[0...n]</b>	<b>Skip speed bandwidth / n_skip bandwidth</b>			
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3050	
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505	
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.000 [rpm]	210000.000 [rpm]	0.000 [rpm]	
<b>Description:</b>	Sets the bandwidth for the skip speeds/velocities 1 to 4.			
<b>Dependency:</b>	Refer to: p1091, p1092, p1093, p1094			
<b>Note:</b>	The setpoint (reference) speeds are skipped (suppressed) in the range of the skip speed +/-p1101. Steady-state operation is not possible in the skipped (suppressed) speed range. The skip (suppression) range is skipped. Example: p1091 = 600 and p1101 = 20 --> setpoint speeds between 580 and 620 [rpm] are skipped. For the skip bandwidths, the following hysteresis behavior applies: For a setpoint speed coming from below, the following applies: r1170 < 580 [rpm] and 580 [rpm] <= r1114 <= 620 [rpm] --> r1119 = 580 [rpm] For a setpoint speed coming from above, the following applies: r1170 > 620 [rpm] and 580 [rpm] <= r1114 <= 620 [rpm] --> r1119 = 620 [rpm]			

---

<b>p1106[0...n]</b>	<b>Cl: Minimum speed signal source / n_min s_src</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3050	
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0	
<b>Description:</b>	Sets the signal source for lowest possible motor speed.			
<b>Dependency:</b>	Refer to: p1080			
<b>Notice:</b>	The effective minimum speed is formed from p1080 and p1106.			

## 2 Parameters

### 2.2 List of parameters

---

<b>p1110[0...n]</b>	<b>BI: Inhibit negative direction / Inhib neg dir</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2505, 3040
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to disable the negative direction.		
<b>Dependency:</b>	Refer to: p1111		

---

<b>p1111[0...n]</b>	<b>BI: Inhibit positive direction / Inhib pos dir</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2505, 3040
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to disable the positive direction.		
<b>Dependency:</b>	Refer to: p1110		

---

<b>r1112</b>	<b>CO: Speed setpoint after minimum limiting / n_set aft min_lim</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3050
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the speed setpoint after the minimum limiting.		
<b>Dependency:</b>	Refer to: p1091, p1092, p1093, p1094, p1101		

---

<b>p1113[0...n]</b>	<b>BI: Setpoint inversion / Setp inv</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2441, 2442, 2505, 3040
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to invert the setpoint.		
<b>Dependency:</b>	Refer to: r1198		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		

---

<b>r1114</b>	<b>CO: Setpoint after the direction limiting / Setp after limit</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3001, 3040, 3050
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the speed/velocity setpoint after the changeover and limiting the direction.		

<b>p1115</b>	<b>Ramp-function generator selection / RFG selection</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3001, 3080
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the ramp-function generator type.		
<b>Value:</b>	0: Basic ramp-function generator 1: Extended ramp-function generator		
<b>Note:</b>	Another ramp-function generator type can only be selected when the motor is at a standstill.		
<b>r1119</b>	<b>CO: Ramp-function generator setpoint at the input / RFG setp at inp</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3001, 3050, 3060, 3070, 6300
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the setpoint at the input of the ramp-function generator.		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	The setpoint is influenced by other functions, e.g. skip (suppressed) speeds, minimum and maximum limits.		
<b>p1120[0...n]</b>	<b>Ramp-function generator ramp-up time / RFG ramp-up time</b>		
VECTOR_G	<b>Can be changed:</b> C2(1), U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3060, 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	999999.000 [s]	10.000 [s]
<b>Description:</b>	The ramp-function generator ramps-up the speed setpoint from standstill (setpoint = 0) up to the maximum speed (p1082) in this time.		
<b>Dependency:</b>	Refer to: p1082, p1138		
<b>Note:</b>	The ramp-up time can be scaled via connector input p1138. The parameter is adapted during the rotating measurement (p1960 > 0). This is the reason that during the rotating measurement, the motor can accelerate faster than was originally parameterized. For U/f control and sensorless vector control (see p1300), a ramp-up time of 0 s does not make sense. The setting should be based on the startup times (r0345) of the motor.		
<b>p1121[0...n]</b>	<b>Ramp-function generator ramp-down time / RFG ramp-down time</b>		
VECTOR_G	<b>Can be changed:</b> C2(1), U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3060, 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	999999.000 [s]	10.000 [s]
<b>Description:</b>	Sets the ramp-down time for the ramp-function generator. The ramp-function generator ramps-down the speed setpoint from the maximum speed (p1082) down to standstill (setpoint = 0) in this time. Further, the ramp-down time is always effective for OFF1.		
<b>Dependency:</b>	Refer to: p1082, p1139		

## 2 Parameters

### 2.2 List of parameters

**Note:** For U/f control and sensorless vector control (see p1300), a ramp-down time of 0 s does not make sense. The setting should be based on the startup times (r0345) of the motor.

<b>p1122[0...n]</b>	<b>BI: Bypass ramp-function generator / Bypass RFG</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2505
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for bypassing the ramp generator (ramp-up and ramp-down times = 0).

**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

The bypass is kept for OFF1/OFF3.

**Note:** For VECTOR in encoderless operation, it is not permissible that the ramp-function generator is bypassed.

<b>p1130[0...n]</b>	<b>Ramp-function generator initial rounding-off time / RFG t_start_round</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	30.000 [s]	0.000 [s]

**Description:** Sets the initial rounding-off time for the extended ramp generator. The value applies to ramp-up and ramp-down.

**Note:** Rounding-off times avoid an abrupt response and prevent damage to the mechanical system.

<b>p1131[0...n]</b>	<b>Ramp-function generator final rounding-off time / RFG t_end_delay</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	30.000 [s]	0.000 [s]

**Description:** Sets the final rounding-off time for the extended ramp generator.

The value applies to ramp-up and ramp-down.

**Note:** Rounding-off times avoid an abrupt response and prevent damage to the mechanical system.

<b>p1134[0...n]</b>	<b>Ramp-function generator rounding-off type / RFG round-off type</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0

**Description:** Sets the smoothed response to the OFF1 command or the reduced setpoint for the extended ramp-function generator.

**Value:**  
 0: Cont smoothing  
 1: Discont smoothing

**Dependency:** No effect up to initial rounding-off time (p1130) > 0 s.

**Note:** p1134 = 0 (continuous smoothing)

If the setpoint is reduced while ramping-up, initially a final rounding-off is carried out and then the ramp-up completed. During the final rounding-off, the output of the ramp-function generator continues to go in the direction of the previous setpoint (overshoot). After the final rounding-off has been completed, the output goes toward the new setpoint.

p1134 = 1 (discontinuous smoothing)

If the setpoint is reduced while ramping-up, then the output goes immediately in the direction of the new setpoint. For the setpoint change there is no rounding-off.

<b>p1135[0...n]</b>	<b>OFF3 ramp-down time / OFF3 t_RD</b>		
VECTOR_G	<b>Can be changed:</b> C2(1), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3060, 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	600.000 [s]	3.000 [s]
<b>Description:</b>	Sets the ramp-down time from the maximum speed down to zero speed for the OFF3 command.		
<b>Note:</b>	This time can be exceeded if the DC link voltage reaches its maximum value.		
<b>p1136[0...n]</b>	<b>OFF3 initial rounding-off time / RFGOFF3 t_strt_rnd</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	30.000 [s]	0.000 [s]
<b>Description:</b>	Sets the initial rounding-off time for OFF3 for the extended ramp generator.		
<b>p1137[0...n]</b>	<b>OFF3 final rounding-off time / RFG OFF3 t_end_del</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	30.000 [s]	0.000 [s]
<b>Description:</b>	Sets the final rounding-off time for OFF3 for the extended ramp generator.		
<b>p1138[0...n]</b>	<b>CI: Ramp-function generator ramp-up time scaling / RFG t_RU scal</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3060, 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for scaling the ramp-up time of the ramp-function generator.		
<b>Dependency:</b>	Refer to: p1120		
<b>Note:</b>	The ramp-up time is set in p1120.		
<b>p1139[0...n]</b>	<b>CI: Ramp-function generator ramp-down time scaling / RFG t_RD scal</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3060, 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for scaling the ramp-down time of the ramp-function generator.		
<b>Dependency:</b>	Refer to: p1121		
<b>Note:</b>	The ramp-down time is set in p1121.		

<b>p1140[0...n]</b>	<b>BI: Enable ramp-function generator/inhibit ramp-function generator / Enable RFG</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2501
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for the command "enable ramp-function generator/inhibit ramp-function generator". For the PROFIdrive profile, this command corresponds to control word 1 bit 4 (STW1.4). BI: p1140 = 0 signal: Inhibits the ramp-function generator (the ramp-function generator output is set to zero). BI: p1140 = 1 signal: Enable ramp-function generator.		
<b>Dependency:</b>	Refer to: p1141, p1142		
<b>Caution:</b>	When "master control from PC" is activated, this binector input is ineffective.		
			
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		

<b>p1141[0...n]</b>	<b>BI: Continue ramp-function generator/freeze ramp-function generator / Continue RFG</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2501
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for the command "continue ramp-function generator/freeze ramp-function generator". For the PROFIdrive profile, this command corresponds to control word 1 bit 5 (STW1.5). BI: p1141 = 0 signal: Freezes the ramp-function generator. BI: p1141 = 1 signal: Continue ramp-function generator.		
<b>Dependency:</b>	Refer to: p1140, p1142		
<b>Caution:</b>	When "master control from PC" is activated, this binector input is ineffective.		
			
<b>Notice:</b>	The ramp-function generator is, independent of the state of the signal source, active in the following cases: - OFF1/OFF3. - ramp-function generator output within the suppression bandwidth. - ramp-function generator output below the minimum speed.		

<b>p1142[0...n]</b>	<b>BI: Enable setpoint/inhibit setpoint / Setpoint enable</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2501
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for the command "enable setpoint/inhibit setpoint". For the PROFIdrive profile, this command corresponds to control word 1 bit 6 (STW1.6). BI: p1142 = 0 signal Inhibits the setpoint (the ramp-function generator input is set to zero). BI: p1142 = 1 signal Setpoint enable.		

**Dependency:** Refer to: p1140, p1141

**Caution:** When "master control from PC" is activated, this binector input is ineffective.



**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:** When the function module "position control" (r0108.3 = 1) is activated, this binector input is interconnected as follows as standard:

BI: p1142 = 0 signal

---

<b>p1143[0...n]</b>	<b>BI: Ramp-function generator, accept setting value / RFG accept set v</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3060, 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for accepting the setting value of the ramp-function generator.

**Dependency:** The signal source for the ramp-function generator setting value is set using parameters.

Refer to: p1144

**Note:** 0/1 signal:

The ramp-function generator output is immediately (without delay) set to the setting value of the ramp-function generator.

1 signal:

The setting value of the ramp-function generator is effective.

1/0 signal:

The input value of the ramp-function generator is effective. The ramp-function generator output is adapted to the input value using the ramp-up time or the ramp-down time.

0 signal:

The input value of the ramp-function generator is effective.

---

<b>p1144[0...n]</b>	<b>CI: Ramp-function generator setting value / RFG setting value</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3060, 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for the ramp-function generator setting value.

**Dependency:** The signal source for accepting the setting value is set using parameters.

Refer to: p1143

---

<b>p1145[0...n]</b>	<b>Ramp-function generator tracking intensity. / RFG track intens</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3080
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0	50.0	1.3

**Description:** Sets the ramp-function generator tracking.

The output value of the ramp-function generator is tracked (corrected) corresponding to the maximum possible drive acceleration.

The reference value is the deviation at the speed/velocity controller input that is necessary to ensure that the motor accelerates at the torque/force limit.

## 2 Parameters

### 2.2 List of parameters

- Recommendation:** If at least one speed setpoint filter/velocity setpoint filter is activated (p1414), then the ramp-function generator tracking should be deactivated (p1145 = 0.0). When the speed setpoint filter is activated, the output value of the ramp-function generator can no longer be tracked (corrected) corresponding to the maximum possible drive acceleration.
- For p1145 = 0.0:  
This value deactivates the ramp-function generator tracking.
- For p1145 = 0.0 ... 1.0:  
Generally, these values are not practical. They cause the motor to accelerate below its torque limit. The lower the selected value, the greater the margin between the controller and torque limit when accelerating.
- For p1145 > 1.0:  
The greater the value, the higher the permissible deviation between the speed setpoint and speed actual value.
- Notice:** If ramp-function generator tracking is activated and the ramp time is set too short, this can cause unsteady acceleration.
- Remedy:  
- deactivate ramp-function generator tracking (p1145 = 0).  
- increase the ramp-up/ramp-down time (p1120, p1121).
- Note:** In the U/f mode, ramp-function generator tracking is not active.  
For ramp-function generator tracking and active acceleration model (p1400.20, 23), the integral component of the speed controller should be able to run freely up to the torque limit (p1400.16 = 1).

---

#### p1148[0...n] Ramp-function gen. tolerance for ramp-up and ramp-down active / RFG tol HL/RL act

VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3060, 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [rpm]	1000.000 [rpm]	19.800 [rpm]

**Description:** Sets the tolerance value for the status of the ramp-function generator (ramp-up active, ramp-down active).  
If the input of the ramp-function generator does not change in comparison to the output by more than the entered tolerance time, then the status bits "ramp-up active" and "ramp-down active" are not influenced.

**Dependency:** Refer to: r1199

---

#### r1149 CO: Ramp-function generator acceleration / RFG acceleration

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3060, 3070
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 39_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2007	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rev/s <sup>2</sup> ]	- [rev/s <sup>2</sup> ]	- [rev/s <sup>2</sup> ]

**Description:** Displays the acceleration of the ramp-function generator.

**Dependency:** Refer to: p1145

---

#### r1150 CO: Ramp-function generator speed setpoint at the output / RFG n\_set at outp

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3001, 3080
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]

**Description:** Displays the setpoint at the output of the ramp-function generator.

<b>p1151[0...n]</b>		<b>Ramp-function generator configuration / RFG config</b>																						
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Setpoints <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 bin																					
<b>Description:</b>	Sets the configuration for the extended ramp-function generator.																							
<b>Bit field:</b>	<table border="1"> <thead> <tr> <th>Bit</th> <th>Signal name</th> <th>1 signal</th> <th>0 signal</th> <th>FP</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Deactivate rounding-off at the zero crossover</td> <td>Yes</td> <td>No</td> <td>3070</td> </tr> <tr> <td>01</td> <td>RFG tracking without polarity change</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>02</td> <td>RFG tracking with polarity change</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	FP	00	Deactivate rounding-off at the zero crossover	Yes	No	3070	01	RFG tracking without polarity change	Yes	No	-	02	RFG tracking with polarity change	Yes	No	-			
Bit	Signal name	1 signal	0 signal	FP																				
00	Deactivate rounding-off at the zero crossover	Yes	No	3070																				
01	RFG tracking without polarity change	Yes	No	-																				
02	RFG tracking with polarity change	Yes	No	-																				
<b>Dependency:</b>	For bit 01, 02 = 1: These bits are only effective when ramp-function generator tracking is activated (p1145 > 0). When both bits are activated, RFG tracking with polarity change is active. For bit 01 = 0, bit 02 = 0: When ramp-function generator tracking is active, the setpoint can only change in the direction of the target setpoint – or be frozen.																							
<b>Notice:</b>	For bit 00 = 1: If the ramp-up time is longer than the ramp-down time (p1120 > p1121), then there is an acceleration step at the zero crossover. This can have a negative impact on the mechanical system.																							
<b>Note:</b>	For bit 00 = 1: When the direction change is changed there is no rounding-off before and after the zero crossover. For bit 01 = 1: For load surges, the ramp-function generator output tracks the actual value. The tracking (correction) ends at a setpoint of zero. For bit 02 = 1: For load surges, the ramp-function generator output tracks the actual value. For a polarity change, the tracking (correction) is continued.																							

<b>p1152</b>		<b>BI: Setpoint 2 enable / Setp 2 enab</b>		
VECTOR_G (Ext brake)	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Commands <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2711, 4015 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 899.15	
<b>Description:</b>	Sets the signal source for "setpoint 2 enable".			

<b>p1155[0...n]</b>		<b>CI: Speed controller speed setpoint 1 / n_ctrl n_set 1</b>		
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 / FloatingPoint32 <b>P-Group:</b> Setpoints <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170 <b>Unit group:</b> - <b>Scaling:</b> p2000 <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 3001, 3080, 5030, 6031 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0	
<b>Description:</b>	Sets the signal source for speed setpoint 1 of the speed controller.			
<b>Dependency:</b>	The effectiveness of this setpoint depends on, e.g. STW1.4 and STW1.6. Refer to: r0002, p0840, p0844, p0848, p0852, p0854, r0898, p1140, p1142, p1160, r1170, p1189			
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.			

<b>p1160[0...n]</b>	<b>CI: Speed controller speed setpoint 2 / n_ctrl n_set 2</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 3001, 3080	
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0	
<b>Description:</b>	Sets the signal source for speed setpoint 2 of the speed controller.			
<b>Dependency:</b>	Refer to: p1155, r1170			
<b>Note:</b>	For OFF1/OFF3, the ramp-function generator ramp is effective. The ramp-function generator is set (SERVO: to the actual value, VECTOR: To the setpoint (r1170)) and stops the drive corresponding to the ramp-downtime (p1121 or p1135). While stopping via the ramp-function generator, STW1.4 is effective (enable ramp-function generator). When the function module "position control" (r0108.3 = 1) is activated, this connector input is interconnected as follows as standard: CI: p1160 = r2562			
<b>r1169</b>	<b>CO: Speed controller speed setpoints 1 and 2 / n_ctrl n_set 1/2</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3080	
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505	
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [rpm]	- [rpm]	- [rpm]	
<b>Description:</b>	Displays the speed setpoint after the addition of the speed setpoint 1 (p1155) and speed setpoint 2 (p1160).			
<b>Dependency:</b>	Refer to: p1155, p1160			
<b>Note:</b>	The value is only correctly displayed at r0899.2 = 1 (operation enabled).			
<b>r1170</b>	<b>CO: Speed controller setpoint sum / n_ctrl setp sum</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3001, 3080, 6300	
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505	
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [rpm]	- [rpm]	- [rpm]	
<b>Description:</b>	Display and connector output for the speed setpoint after selecting the ramp-function generator. The value is the sum of speed setpoint 1 (p1155) and speed setpoint 2 (p1160).			
<b>Dependency:</b>	Refer to: r1150, p1155, p1160			
<b>p1189[0...n]</b>	<b>Speed setpoint configuration / n_ctrl config</b>			
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 3080	
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0011 bin	
<b>Description:</b>	Sets the configuration for the speed setpoint.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Interpolation ramp-fct gen/speed controller active	Yes	No
	01	Interpol. op-loop ctrl /speed controller active	Yes	No
				<b>FP</b>
				3080
				3080

**Note:** For bit 01:  
The interpolator is only effective in following cases:  
- isochronous PROFIBUS operation with a sign-of-life received from the master (STW2.12 ... STW2.15).

<b>r1197</b>		<b>Fixed speed setpoint number actual / n_set_fixed No act</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3010	
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	

**Description:** Displays the number of the selected fixed speed/velocity setpoint.

**Dependency:** Refer to: p1020, p1021, p1022, p1023

**Note:** If a fixed speed setpoint has not been selected (p1020 ... p1023 = 0, r1197 = 0), then r1024 = 0 (setpoint = 0).

<b>r1198.0...15</b>		<b>CO/BO: Control word setpoint channel / STW setpoint chan</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2505	
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	

**Description:** Display and BICO output for the control word of the setpoint channel.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Fixed setp bit 0	Yes	No	3010
	01	Fixed setp bit 1	Yes	No	3010
	02	Fixed setp bit 2	Yes	No	3010
	03	Fixed setp bit 3	Yes	No	3010
	05	Inhibit negative direction	Yes	No	3040
	06	Inhibit positive direction	Yes	No	3040
	11	Setpoint inversion	Yes	No	3040
	13	Motorized potentiometer raise	Yes	No	3020
	14	Motorized potentiometer lower	Yes	No	3020
	15	Bypass ramp-function generator	Yes	No	3060, 3070

<b>r1199.0...8</b>		<b>CO/BO: Ramp-function generator status word / RFG ZSW</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3001, 3080	
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	

**Description:** Displays the status word for the ramp-function generator (RFG).

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Ramp-up active	Yes	No	-
	01	Ramp-down active	Yes	No	-
	02	RFG active	Yes	No	-
	03	Ramp-function generator set	Yes	No	-
	04	Ramp-function generator held	Yes	No	-
	05	Ramp-function generator tracking active	Yes	No	-
	06	Maximum limit active	Yes	No	-
	07	Ramp-function generator acceleration positive	Yes	No	-
	08	Ramp-function generator acceleration negative	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

**Note:** For bit 02:  
The bit is the result of the OR logic operation - bit 00 and bit 01.

<b>p1200[0...n]</b>	<b>Flying restart operating mode / FlyRest op_mode</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> Functions <b>Not for motor type:</b> REL <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 6	<b>Access level:</b> 2 <b>Func. diagram:</b> 6300 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the operating mode for flying restart. The flying restart allows the drive converter to be switched on while the motor is still rotating. In so doing, the drive converter output frequency is changed until the actual motor speed/velocity is found. The motor then accelerates up to the setpoint at the ramp-function generator setting.		
<b>Value:</b>	0: Flying restart inactive 1: Flying restart always active (start in setpoint direction) 2: FlyRestart active after on, fault, OFF2 (start in setp. dir.) 3: FlyRestart active after fault, OFF2 (start in setp. direction) 4: Flying restart always active (start only in setpoint direction) 5: FlyRestart active after on, fault, OFF2 (start only in setp_dir) 6: FlyRestart active after fault, OFF2 (start only in setp. dir.)		
<b>Dependency:</b>	The ground fault test is only possible when the motor is stationary, and is therefore only realized when flying restart is deactivated (p1200 = 0). For induction motors, the following applies: A differentiation is made between flying restart for U/f control and for vector control (p1300). Flying restart, U/f control: p1202, p1203, r1204 Flying restart, vector control: p1202, p1203, r1205 For synchronous motors, the following applies: Flying restart is not possible with U/f control or if, in the case of sensorless vector control, a Voltage Sensing Module (VSM) has not been connected and parameterized. If two VSMs are connected to the Motor Module, then the motor voltage for the flying restart is measured using the second VSM (see p0151[1]). If only one VSM is connected, then this can be used for the flying restart (p1200) (for induction motors, also see p0247 bit 5). When activating flying restart, line synchronization must be deactivated (p3800 = 0). Refer to: p1201 Refer to: F07330, F07331		
<b>Notice:</b>	The "flying restart" function must be used in cases where the motor may still be running (e.g. after a brief line supply interruption) or is being driven by the load. The system might otherwise shut down as a result of overcurrent. It does not make sense to use "flying restart" together with the "motor holding brake function" (p1215 > 0) because then the flying restart will always be realized with the motor stationary. For a flying restart of induction motors without voltage measurement (VSM) the de-energization time (p0347) must be set long enough so that for fast restarts after a pulse inhibit, excessively high current peaks do not occur.		
<b>Note:</b>	For p1200 = 1, 4, the following applies: Flying restart is active after faults, OFF1, OFF2, OFF3. For p1200 = 2, 5, the following applies: The "switch-on" is the first switching-on operation after the drive system has been booted. This is practical for motors with a high-inertia load. For p1200 = 1, 2, 3, the following applies: The search is made in both directions. For p1200 = 4, 5, 6, the following applies: The search is only made in the setpoint direction. For a setpoint of zero, a search is not made in the negative direction of rotation. For operation with encoder, the following applies: p1200 = 1, 4 as well as p1200 = 2, 5 and p1200 = 3, 6 have the same meaning. For U/f control (p1300 < 20), the following applies: The speed can only be sensed for values above approx. 5 % of the rated motor speed. For lower speeds, it is assumed that the motor is at a standstill. If p1200 is changed while commissioning (p0009, p0010 > 0), then it is possible that the old value will no longer be able to be set. The reason for this is that the dynamic limits of p1200 have been changed by a parameter that was set when the drive was commissioned (e.g. p0300).		

<b>p1201[0...n]</b>	<b>BI: Flying restart enable signal source / Fly_res enab S_src</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source to enable the "flying restart" function.		
<b>Dependency:</b>	Refer to: p1200		
<b>Note:</b>	Withdrawing the enable signal has the same effect as setting p1200 = 0.		

<b>p1202[0...n]</b>	<b>Flying restart search current / FlyRest I_srch</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10 [%]	400 [%]	100 [%]
<b>Description:</b>	Sets the search current for the "flying restart" function. The value is referred to the motor magnetizing current. For U/f control, it may be necessary to increase the search current (e.g. 120 %) to ensure reliable flying restart. Fast flying restart for induction motors with voltage model (see r1780.11): Sets the initial setpoint for the field-generating current component.		
<b>Dependency:</b>	Refer to: r0331		
<b>Caution:</b>	An unfavorable parameter value can result in the motor behaving in an uncontrollable fashion.		
			
<b>Note:</b>	In U/f control mode, the parameter serves as a threshold value for establishing the current at the beginning of the flying restart function. When the threshold value is reached, the actual search current is set as a function of the frequency based on the voltage setpoints. Reducing the search current can also improve flying restart performance (if the system moment of inertia is not very high, for example). The following applies for a synchronous reluctance motor: - a parameter change only becomes effective after carrying out the motor data identification. - the minimum search velocity is limited (p1202 >= 50 %). - the search algorithm is optimized for 100 %, and the current reached is internally limited. A set value (p1202 != 100 %) cannot be reached.		

<b>p1203[0...n]</b>	<b>Flying restart search rate factor / FlyRst v_Srch Fact</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10 [%]	4000 [%]	100 [%]
<b>Description:</b>	Sets the factor for the search speed for flying restart. The value influences the rate at which the output frequency is changed during a flying restart. A higher value results in a longer search time.		
<b>Recommendation:</b>	For encoderless vector control and motor cables longer than 200 m, set the factor p1203 >= 300 %.		
<b>Caution:</b>	An unfavorable parameter value can result in the motor behaving in an uncontrollable fashion.		
	For vector control, a value that is too low or too high can cause flying restart to become unstable.		

## 2 Parameters

### 2.2 List of parameters

**Note:** The parameter factory setting is selected so that standard induction motors that are rotating can be found and restarted as quickly as possible (fast flying restart).  
 With this pre-setting, if the motor is not found (e.g. for motors that are accelerated as a result of active loads or with U/f control and low speeds), we recommend that the search rate is reduced (by increasing p1203).  
 This parameter is not relevant for a fast flying restart with voltage model (see r1780.11).  
 The following applies for a synchronous reluctance motor:  
 - the minimum search velocity is limited (p1203 >= 50 %).

r1204.0...15	CO/BO: Flying restart U/f control status / FlyRest Uf st		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the status for checking and monitoring flying restart states in the U/f control mode.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Current impressed	Yes	No	-
	01	No current flow	Yes	No	-
	02	Voltage input	Yes	No	-
	03	Voltage reduced	Yes	No	-
	04	Start ramp-function generator	Yes	No	-
	05	Wait for execution	Yes	No	-
	06	Slope filter act	Yes	No	-
	07	Positive gradient	Yes	No	-
	08	Current < thresh	Yes	No	-
	09	Current minimum	Yes	No	-
	10	Search in the positive direction	Yes	No	-
	11	Stop after positive direction	Yes	No	-
	12	Stop after negative direction	Yes	No	-
	13	No result	Yes	No	-
	14	Fast flying restart w/ voltage model for induction motor activ.	Yes	No	-
	15	Flying restart with VSM active	Yes	No	-

r1205.0...21	CO/BO: Flying restart vector control status / FlyRest vector st		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and BICO output for the status for checking and monitoring flying restart states with vector control.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Speed adaptation circuit record angle	Yes	No	-
	01	Speed adaptation circuit set gain to 0	Yes	No	-
	02	Isd channel enable	Yes	No	-
	03	Speed control switched out	Yes	No	-
	04	Quadrature arm switched in	Yes	No	-
	05	Special transformation active	Yes	No	-
	06	Speed adaptation circuit set I comp to 0	Yes	No	-
	07	Current control on	Yes	No	-
	08	Isd_set = 0 A	Yes	No	-
	09	Frequency held	Yes	No	-
	10	Search in the positive direction	Yes	No	-
	11	Search Started	Yes	No	-
	12	Current impressed	Yes	No	-
	13	Search interrupted	Yes	No	-
	14	Speed adaptation circuit deviation = 0	Yes	No	-

15	Speed control activated	Yes	No	-
16	Fast flying restart w/ voltage model for induction motor activ.	Yes	No	-
17	Fast flying restart w/ voltage model for induction motor exited	Yes	No	-
18	Apply VSM voltage to the monitor	Yes	No	-
19	Preassign flux ramp	Yes	No	-
20	Adaptation current controller and speed adapt. controller gain	Yes	No	-
21	Voltage pulse active	Yes	No	-

**Note:** For bit 00 ... 09:  
Used to control internal sequences during the flying restart.  
Depending on the motor type (p0300), the number of active bits differs.  
For bits 10 ... 17:  
Are used to monitor the flying restart sequence.

---

### p1206[0...9] Automatic restart faults not active / AR fault not act

VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0

**Description:** Sets faults for which automatic restart should not be effective.

**Dependency:** The setting is only effective for p1210 = 6, 16.  
Refer to: p1210

---

### p1207 BI: AR connection following drive object / AR connection DO

B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Modifies the precharging monitoring of the infeed.  
The active automatic restart (AR) of the following drive object can be interconnected using this binector input (BI: p1207 = r1214.2).  
This means that when the automatic restart is operational, the precharging monitoring of the infeed is deactivated and is only re-activated under the following conditions:  
- the absolute current in the DC link is greater than 2 % of the maximum current (r0209) of the infeed to provide protection against short-circuit in the DC link.  
- if a Voltage Sensing Module (VSM) is being used, the line supply voltage amplitude is greater than 3 % of the parameterized unit supply voltage (p0210) to protect the precharging resistors against continuous filter current when the line supply partially returns.

**Dependency:** Refer to: r0209, p0210, r1214

<b>p1208[0...1]</b>	<b>BI: AR modification infeed / AR modification</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to modify the automatic restart (AR). Interconnections between the automatic restart and infeed: With the following interconnection in the mode p1210 = 6, the automatic restart can respond to infeed faults: BI: p1208[0] = r2139.3 With the following interconnection, in the mode p1210 = 4, the automatic restart can respond to line supply failure of the infeed: BI: p1208[1] = r0863.2		
<b>Index:</b>	[0] = Infeed fault [1] = Infeed line supply failure		
<b>Dependency:</b>	Refer to: r0863, r2139		
<b>p1210</b>	<b>Automatic restart mode / AR mode</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	16	0
<b>Description:</b>	Sets the automatic restart mode (AR).		
<b>Value:</b>	0: Inhibit automatic restart 1: Acknowledge all faults without restarting 4: Restart after line supply failure w/o additional start attempts 6: Restart after fault with additional start attempts 14: Restart after line supply failure following man. acknowledgment 16: Restart after fault following manual acknowledgment		
<b>Recommendation:</b>	For brief line supply failures, the motor shaft may still be rotating when restarting. The "flying restart" function (p1200) might need to be activated to restart while the motor shaft is still rotating.		
<b>Dependency:</b>	The automatic restart requires an active ON command (e.g., via a digital input). If, for p1210 > 1, there is no active ON command, then the automatic restart is interrupted. When using an Operator Panel in the LOCAL mode, then there is no automatic start. For p1210 = 14, 16, a manual acknowledgment is required for an automatic restart. Refer to: p0840, p0857, p1267 Refer to: F30003		
<b>Danger:</b>	If the automatic restart is activated (p1210 > 1) if there is an ON command (refer to p0840), the drive is switched on as soon as any fault messages that are present can be acknowledged. This also occurs after the line supply returns or the Control Unit boots if the DC link voltage is again present or the feedback of the line supply infeed (refer to p0864) is again available. This automatic switching-on operation can only be interrupted by withdrawing the ON command.		
<b>Notice:</b>	A change is only accepted and made in the state "initialization" (r1214.0) and "wait for alarm" (r1214.1). When faults are present, therefore, the parameter cannot be changed.		
<b>Note:</b>	For p1210 > 1, the motor is automatically started. For p1210 = 1: Faults that are present are automatically acknowledged. If new faults occur after a successful fault acknowledgment, then these are also automatically acknowledged again. p1211 has no influence on the number of acknowledgment attempts.		

For p1210 = 4:

An automatic restart is only carried out if fault F30003 occurred at the Motor Module or a 1 signal is present at binector input p1208[1]. If additional faults are present, then these faults are also acknowledged and when successful, starting continues. If the 24 V Control Unit power supply fails, then this is interpreted as a line supply failure.

For p1210 = 6:

An automatic restart is carried out if any fault has occurred or there is a 1 signal at binector input p1208[0].

For p1210 = 14:

as for p1210 = 4. However, active faults must be manually acknowledged.

For p1210 = 16:

as for p1210 = 6. However, active faults must be manually acknowledged.

<b>p1210</b>		<b>Automatic restart mode / AR mode</b>		
<b>B_INF</b>	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	6	0	
<b>Description:</b>	Sets the automatic restart mode (AR).			
<b>Value:</b>	0: Inhibit automatic restart 1: Acknowledge all faults without restarting 6: Restart after fault with additional start attempts			
<b>Dependency:</b>	The automatic restart requires an active ON command (e.g., via a digital input). If, for p1210 > 1, there is no active ON command, then the automatic restart is interrupted. When using an Advanced Operator Panel (AOP) in the LOCAL Mode, then there is no automatic restart. Refer to: p0840, p0857, p1267 Refer to: F30003			
<b>Danger:</b>	If the automatic restart is activated (p1210 > 1) if there is an ON command (refer to p0840), the drive is switched on as soon as any fault messages that are present can be acknowledged. This also occurs after the line supply returns or the Control Unit boots if the DC link voltage is again present or the feedback of the line supply infeed (refer to p0864) is again available. This automatic switching-on operation can only be interrupted by withdrawing the ON command.			
				
<b>Notice:</b>	A change is only accepted and made in the state "initialization" (r1214.0) and "wait for alarm" (r1214.1). For p1210 > 1, the infeed is automatically started.			
<b>Note:</b>	For p1210 = 1: Faults that are present are automatically acknowledged. If new faults occur after a successful fault acknowledgment, then these are also automatically acknowledged again. A minimum time of p1212 + 1 s must expire between a successful fault acknowledgment and a fault re-occurring if the signal ON/OFF1 (STW1.0) is at a HIGH signal level. If the signal ON/OFF1 is at a LOW signal level, then the time between a successful fault acknowledgment and a new fault must be at least 1 s. p1211 has no influence on the number of acknowledgment attempts. For p1210 = 6: An automatic restart is carried out if any fault has occurred.			

<b>p1211</b>		<b>Automatic restart start attempts / AR start attempts</b>		
<b>VECTOR_G</b>	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	10	3	
<b>Description:</b>	Sets the start attempts of the automatic restart function for p1210 = 4, 6.			
<b>Dependency:</b>	A change is only accepted and made in the state "initialization" (r1214.0) and "wait for alarm" (r1214.1). Refer to: p1210, r1214 Refer to: F07320			

**Notice:** After fault F07320 occurs, the switch-on command must be withdrawn and all of the faults acknowledged so that the automatic restart function is re-activated.

After a complete power failure (blackout) the start counter always starts with the counter value that applied before the power failure, and decrements this start attempt by 1. If a further attempt to acknowledge is started by the automatic restart function prior to power failure, e.g. when the CU remains active on power failure longer than the time  $p1212 / 2$ , the fault counter will already have been decremented once. In this case, the start counter is thus decreased by the value 2.

**Note:** A start attempt starts immediately when a fault occurs. The start attempt is considered to be completed if the motor was magnetized ( $r0056.4 = 1$ ) and an additional delay time of 1 s has expired.

As long as a fault is present, an acknowledge command is generated in the time intervals of  $p1212 / 2$ . When successfully acknowledged, the start counter is decremented. If, after this, a fault re-occurs before a restart has been completed, then acknowledgment starts again from the beginning.

Fault F07320 is output if, after several faults occur, the number of parameterized start attempts has been reached. After a successful start attempt, i.e. a fault/error has no longer occurred up to the end of the magnetizing phase, the start counter is again reset to the parameter value after 1 s. If a fault re-occurs - the parameterized number of start attempts is again available.

At least one start attempt is always carried out.

After a line supply failure, acknowledgment is immediate and when the line supply returns, the system is switched on. If, between successfully acknowledging the line fault and the line supply returning, another fault occurs, then its acknowledgment also causes the start counter to be decremented.

<b>p1211</b>	<b>Automatic restart start attempts / AR start attempts</b>		
B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	10	3

**Description:** Sets the start attempts of the automatic restart function for  $p1210 = 4, 6$ .

**Dependency:** This parameter setting is active for  $p1210 = 6$ .

For  $p1210 = 4$ , the parameter only has an influence if, when attempting to start, an additional line phase failure (F06200) occurs.

A change is only accepted and made in the state "initialization" ( $r1214.0$ ) and "wait for alarm" ( $r1214.1$ ).

Refer to:  $p1210, r1214$

Refer to: F07320

**Notice:** After fault F07320 occurs, the switch-on command must be withdrawn and all of the faults acknowledged so that the automatic restart function is re-activated.

After a complete power failure (blackout) the start counter always starts with the counter value that applied before the power failure, and decrements this start attempt by 1. If a further attempt to acknowledge is started by the automatic restart function prior to power failure, e.g. when the CU remains active on power failure longer than the time  $p1212 / 2$ , the fault counter will already have been decremented once. In this case, the start counter is thus decreased by the value 2.

**Note:** A start attempt starts immediately when a fault occurs. The restart attempt is considered to have been completed if the infeed is switched on and an additional delay time of 1 s has expired.

As long as a fault is present, an acknowledge command is generated in the time intervals of  $p1212 / 2$ . When successfully acknowledged, the start counter is decremented. If, after this, a fault re-occurs before a restart has been completed, then acknowledgment starts again from the beginning.

Fault F07320 is output if, after several faults occur, the number of parameterized start attempts has been reached. After a successful start attempt (i.e. a fault/error has no longer occurred up to the end of the switching-on operation) the start counter is again reset to the parameter value after 1 s. If faults re-occur, the parameterized number of start attempts is again available.

At least one start attempt is always carried out.

After a line supply failure, acknowledgment is immediate and when the line supply returns, the system is switched on. If, between successfully acknowledging the line fault and the line supply returning, another fault occurs, then its acknowledgment also causes the start counter to be decremented.

---

<b>p1212</b>	<b>Automatic restart delay time start attempts / AR t_wait start</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.1 [s]	1000.0 [s]	1.0 [s]
<b>Description:</b>	Sets the delay time up to restart.		
<b>Dependency:</b>	This parameter setting is active for p1210 = 4, 6. For p1210 = 1, the following applies: Faults are only automatically acknowledged in half of the waiting time, no restart. Refer to: p1210, r1214		
<b>Notice:</b>	A change is only accepted and made in the state "initialization" (r1214.0) and "wait for alarm" (r1214.1).		
<b>Note:</b>	The faults are automatically acknowledged after half of the delay time has expired and the full delay time. If the cause of a fault is not removed in the first half of the delay time, then it is no longer possible to acknowledge in the delay time.		

---

<b>p1212</b>	<b>Automatic restart delay time start attempts / AR t_wait start</b>		
B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.1 [s]	1000.0 [s]	1.0 [s]
<b>Description:</b>	Sets the delay time up to restart.		
<b>Dependency:</b>	This parameter setting is active for p1210 = 4, 6. For p1210 = 1, the following applies: Only automatic acknowledgment of the faults, no restart. Refer to: p1210, r1214		
<b>Notice:</b>	A change is only accepted and made in the state "initialization" (r1214.0) and "wait for alarm" (r1214.1).		
<b>Note:</b>	The faults are automatically acknowledged and the system is switched on again after half of the delay time has expired and after the full delay time has expired.		

---

<b>p1213[0...1]</b>	<b>Automatic restart monitoring time / AR t_monit</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [s]	10000.0 [s]	0.0 [s]
<b>Description:</b>	Sets the monitoring time of the automatic restart (AR).		
<b>Index:</b>	[0] = Restart [1] = Reset start counter		
<b>Dependency:</b>	Refer to: p1210, r1214		
<b>Notice:</b>	A change is only accepted and made in the state "initialization" (r1214.0) and "wait for alarm" (r1214.1). After fault F07320 occurs, the switch-on command must be withdrawn and all of the faults acknowledged so that the automatic restart function is re-activated.		
<b>Note:</b>	For index 0: The monitoring time starts when the faults are detected. If the automatic acknowledgments are not successful, the monitoring time runs again. If, after the monitoring time has expired, the drive has still not successfully started again (flying restart and magnetizing of the motor must have been completed: r0056.4 = 1), then fault F07320 is output. The monitoring is deactivated with p1213 = 0. If p1213 is set lower than the sum of p1212, the magnetizing time p0346 and the additional delay time due to the flying restart, then fault F07320 is generated at each restart. If, for p1210 = 1, the time in p1213 is set lower than in p1212, then fault F07320 is also generated at each restart.		

The monitoring time must be extended if the faults that occur cannot be immediately and successfully acknowledged (e.g. for faults that are permanently present).

In the case of p1210 = 14, 16, the faults which are present must be acknowledged manually within the time in p1213[0]. Otherwise, fault F07320 is generated after the set time.

For index 1:

The start counter (refer to r1214) is only set back to the starting value p1211 if, after successful restart, the time in p1213[1] has expired. The delay time is not effective for fault acknowledgment without automatic restart (p1210 = 1). After a power failure (blackout) the delay time only starts after the line supply returns and the Control Unit boots. The start counter is set to p1211, if F07320 occurred, the switch-on command is withdrawn and the fault is acknowledged. The start counter is immediately updated if the starting value p1211 or the mode p1210 is changed.

<b>p1213[0...1]</b>		<b>Automatic restart monitoring time / AR t_monit</b>		
<b>B_INF</b>	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.0 [s]	10000.0 [s]	0.0 [s]	
<b>Description:</b>	Sets the monitoring time of the automatic restart (AR).			
<b>Index:</b>	[0] = Restart [1] = Reset start counter			
<b>Dependency:</b>	Refer to: p1210, r1214			
<b>Notice:</b>	A change is only accepted and made in the state "initialization" (r1214.0) and "wait for alarm" (r1214.1). After fault F07320 occurs, the switch-on command must be withdrawn and all of the faults acknowledged so that the automatic restart function is re-activated.			
<b>Note:</b>	For index 0: The monitoring time starts when the faults are detected. If the automatic acknowledgments are not successful, the monitoring time runs again. If the drive has not restarted at the end of the monitoring time, fault F07320 is signaled. The monitoring is deactivated with p1213 = 0. If p1213 is set to a value which is lower than in p1212, fault F07320 is generated at each restart. If, for p1210 = 1, the time in p1213 is set lower than in p1212, then fault F07320 is also generated at each restart. The monitoring time must be extended if the faults that occur cannot be immediately and successfully acknowledged (e.g. for faults that are permanently present). For index 1: The start counter (refer to r1214) is only set back to the starting value p1211 if, after successful restart, the time in p1213[1] has expired. The delay time is not effective for fault acknowledgment without automatic restart (p1210 = 1). After a power failure (blackout) the delay time only starts after the line supply returns and the Control Unit boots. The start counter is set to p1211, if F07320 occurred, the switch-on command is withdrawn and the fault is acknowledged. The start counter is immediately updated if the starting value p1211 or the mode p1210 is changed.			

<b>r1214.0...15</b>		<b>CO/BO: Automatic restart status / AR status</b>			
<b>VECTOR_G</b>	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status of the automatic restart (AR).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Initialization	Yes	No	-
	01	Wait for alarm	Yes	No	-
	02	Auto restart act	Yes	No	-
	03	Setting the acknowledgment command	Yes	No	-
	04	Acknowledge alarms	Yes	No	-
	05	Restart	Yes	No	-
	06	Delay time running after automatic switch-on	Yes	No	-
	07	Fault	Yes	No	-

10	Effective fault	Yes	No	-
12	Start count. bit 0	ON	OFF	-
13	Start count. bit 1	ON	OFF	-
14	Start count. bit 2	ON	OFF	-
15	Start count. bit 3	ON	OFF	-

**Note:**

For bit 00:

State to display the single initialization after POWER ON.

For bit 01:

State in which the automatic restart function waits for faults (initial state).

For bit 02:

General display that a fault has been identified and that the restart or acknowledgment has been initiated.

For bit 03:

Displays the acknowledge command within the "acknowledge alarms" state (bit 4 = 1). For bit 5 = 1 or bit 6 = 1, the acknowledge command is continually displayed.

For bit 04:

State in which the faults that are present are acknowledged. The state is exited again after successful acknowledgment. A change is only made into the next state if it is signaled that a fault is no longer present after an acknowledgment command (bit 3 = 1).

For bit 05:

State in which the drive is automatically switched on (only for p1210 = 4, 6).

For bit 06:

State in which the system waits after having been switched on, to the end of the start attempt (to the end of the magnetizing process).

For p1210 = 1, this signal is directly set after the faults have been successfully acknowledged.

For bit 07:

State which is assumed after a fault occurs within the automatic restart function. This is only reset after acknowledging the fault and withdrawing the switch-on command.

For bit 10:

When the automatic restart function is active, r1214.7 is displayed, otherwise the active fault r2139.3.

For bits 12 ... 15:

Actual state of the start counter (binary coded).

**r1214.0...15****CO/BO: Automatic restart status / AR status**

B\_INF

**Can be changed:** -**Calculated:** -**Access level:** 3**Data type:** Unsigned16**Dyn. index:** -**Func. diagram:** -**P-Group:** Functions**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Displays the status of the automatic restart (AR).

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Initialization	Yes	No	-
01	Wait for alarm	Yes	No	-
02	Auto restart act	Yes	No	-
03	Setting the acknowledgment command	Yes	No	-
04	Acknowledge alarms	Yes	No	-
05	Restart	Yes	No	-
06	Delay time running after automatic switch-on	Yes	No	-
07	Fault	Yes	No	-
10	Effective fault	Yes	No	-
12	Start count. bit 0	ON	OFF	-
13	Start count. bit 1	ON	OFF	-
14	Start count. bit 2	ON	OFF	-
15	Start count. bit 3	ON	OFF	-

**Note:**

For bit 00:  
State to display the single initialization after POWER ON.

For bit 01:  
State in which the automatic restart function waits for faults (initial state).

For bit 02:  
General display that a fault has been identified and that the restart or acknowledgment has been initiated.

For bit 03:  
Displays the acknowledge command within the "acknowledge alarms" state (bit 4 = 1). For bit 5 = 1 or bit 6 = 1, the acknowledge command is continually displayed.

For bit 04:  
State in which the faults that are present are acknowledged. The state is exited again after successful acknowledgment. A change is only made into the next state if it is signaled that a fault is no longer present after an acknowledgment command (bit 3 = 1).

For bit 05:  
State in which the drive is automatically switched on (only for p1210 = 4, 6).

For bit 06:  
State in which the system waits after having been switched on, to the end of the start attempt.  
For p1210 = 1, this signal is directly set after the faults have been successfully acknowledged.

For bit 07:  
State which is assumed after a fault occurs within the automatic restart function.

For bits 12 ... 15:  
Actual state of the start counter (binary coded).

<b>p1215</b>		<b>Motor holding brake configuration / Brake config</b>	
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2701, 2707, 2711
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0

**Description:** Sets the holding brake configuration.

**Value:**

- 0: No motor holding brake available
- 1: Motor holding brake acc. to sequence control
- 2: Motor holding brake always open
- 3: Motor holding brake like sequence control connection via BICO

**Dependency:** Refer to: p1216, p1217, p1226, p1227, p1228, p1278

**Caution:** For the setting p1215 = 0, if a brake is used, it remains closed. If the motor moves, this will destroy the brake.



**Notice:** If p1215 was set to 1 or if p1215 was set to 3, then when the pulses are suppressed, the brake is closed even if the motor is still rotating. Pulse suppression can either be caused by a 0 signal at p0844, p0845 or p0852 or as a result of a fault with OFF2 response. If this is not desirable (e.g. for a flying restart), then the brake can be kept open using a 1 signal at p0855.

**Note:**

If the configuration is set to "no holding brake present" when booting, then the motor holding brake will be automatically identified. If a motor holding brake is detected, the configuration is set to "motor holding brake as for sequence control".

If a motor holding brake is used via the brake connection of the Motor Module integrated in the drive, then it is not permissible that p1215 is set to 3.

if an external motor holding brake is being used, then p1215 should be set to 3 and r0899.12 should be interconnected as control signal.

When the function module "extended brake control" is activated (r0108.14 = 1), r1229.1 should be interconnected as control signal.

The parameter can only be set to zero when the pulses are inhibited.

The parameterization "no motor holding brake available" and "Safe Brake Control" enabled (p1215 = 0, p9602 = 1, p9802 = 1) is not practical if there is no motor holding brake.

The parameterization "motor holding brake the same as sequence control, connection via BICO" and "Safe Brake Control" enabled (p1215 = 3, p9602 = 1, p9802 = 1) is not practical.

<b>p1216</b>	<b>Motor holding brake opening time / Brake t<sub>open</sub></b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2701, 2711
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	10000 [ms]	100 [ms]
<b>Description:</b>	Sets the time to open the motor holding brake. After controlling the holding brake (opens), the speed/velocity setpoint remains at zero for this time. After this, the speed/velocity setpoint is enabled.		
<b>Recommendation:</b>	This time should be set longer than the actual opening time of the brake. This ensures that the drive cannot accelerate when the brake is applied.		
<b>Dependency:</b>	Refer to: p1215, p1217		
<b>Note:</b>	For a motor with DRIVE-CLiQ and integrated brake, for p0300 = 10000, this time is pre-assigned the value saved in the motor. For p1216 = 0 ms, the monitoring and the message A07931 "Brake does not open" are deactivated.		
<b>p1217</b>	<b>Motor holding brake closing time / Brake t<sub>close</sub></b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2701, 2711
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	10000 [ms]	100 [ms]
<b>Description:</b>	Sets the time to apply the motor holding brake. After OFF1 or OFF3 and the holding brake is controlled (the brake closes), then the drive remains closed-loop controlled for this time stationary with a speed setpoint/velocity setpoint of zero. The pulses are suppressed when the time expires.		
<b>Recommendation:</b>	This time should be set longer than the actual closing time of the brake. This ensures that the pulses are only suppressed after the brake has closed.		
<b>Dependency:</b>	Refer to: p1215, p1216		
<b>Notice:</b>	If the selected closing time is too short with respect to the actual closing time of the brake, then the load can sag. If the closing time is selected to be too long with respect to the actual closing time of the brake, the control works against the brake and therefore reduces its lifetime.		
<b>Note:</b>	For a motor with DRIVE-CLiQ and integrated brake, for p0300 = 10000, this time is pre-assigned the value saved in the motor. For p1217 = 0 ms, the monitoring and the message A07932 "Brake does not close" are deactivated.		
<b>p1218[0...1]</b>	<b>BI: Open motor holding brake / Open brake</b>		
VECTOR_G (Ext brake)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2707
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for a conditional opening of the motor holding brake.		
<b>Dependency:</b>	Refer to: p1215		
<b>Note:</b>	[0]: Signal, open brake, AND logic operation, input 1 [1]: Signal, open brake, AND logic operation, input 2		

---

<b>p1219[0...3]</b>	<b>BI: Immediately close motor holding brake / Close brake</b>		
VECTOR_G (Ext brake)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2707
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	[0] 0
			[1] 0
			[2] 0
			[3] 1229.9

**Description:** Sets the signal source for an unconditional (immediate) closing of the motor holding brake.

**Dependency:** Refer to: p1215, p1275

**Note:** [0]: Signal, immediately close brake, inversion via p1275.0  
 [1]: Signal, immediately close brake, inversion via p1275.1  
 [2]: Signal, immediately close brake  
 [3]: Signal, immediately close brake - refer to the factory setting  
 These four signals form an OR logic operation.

---

<b>p1220</b>	<b>CI: Open motor holding brake signal source threshold / Open brake thresh</b>		
VECTOR_G (Ext brake)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2707
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

**Description:** Sets the signal source for the command "open brake".

**Dependency:** Refer to: p1215, p1221, r1229, p1277

---

<b>p1221</b>	<b>Open motor holding brake threshold / Open brake thresh</b>		
VECTOR_G (Ext brake)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2707
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	200.00 [%]	0.00 [%]

**Description:** Sets the threshold value for the command "open brake".

**Dependency:** Refer to: p1220, r1229, p1277

---

<b>p1222</b>	<b>BI: Motor holding brake feedback signal brake closed / Brake feedb closed</b>		
VECTOR_G (Ext brake)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2711
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for the feedback signal "brake closed".

For motor holding brakes with feedback signal, the signal "brake closed" can be activated using p1275.5 = 1.

**Dependency:** Refer to: p1223, p1275

**Note:** 1 signal: Brake closed.  
 When braking with 1 feedback signal, the inverted feedback signal is connected to the BICO input for the second feedback signal (p1223).  
 For r1229.5 = 1, OFF1/OFF3 are suppressed to prevent the drive accelerating by a load that drives the motor - whereby OFF2 remains effective.

---

<b>p1223</b>	<b>BI: Motor holding brake feedback signal brake open / Brake feedb open</b>		
VECTOR_G (Ext brake)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2711
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

**Description:** Sets the signal source for the feedback signal "brake open".  
 For motor holding brakes with feedback signal, the signal "brake open" can be activated using p1275.5 = 1.

**Dependency:** Refer to: p1222, p1275

**Note:** 1 signal: Brake open.  
 When braking with 1 feedback signal, the inverted feedback signal is connected to the BICO input for the second feedback signal (p1222).

---

<b>p1224[0...3]</b>	<b>BI: Close motor holding brake at standstill / Brk close standst</b>		
VECTOR_G (Ext brake)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2704
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for close brake at standstill.

**Dependency:** Refer to: p1275

**Note:** [0]: Signal, close brake at standstill, inversion via p1275.2  
 [1]: Signal, close brake at standstill, inversion via p1275.3  
 [2]: signal, close brake at standstill  
 [3]: signal, close brake at standstill  
 These four signals form an OR logic operation.

---

<b>p1225</b>	<b>CI: Standstill detection threshold value / Standstill thresh</b>		
VECTOR_G (Ext brake)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2704
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	63[0]

**Description:** Sets the signal source "threshold value" for the standstill identification.

**Dependency:** Refer to: p1226, p1228, r1229

<b>p1226[0...n]</b>	<b>Threshold for zero speed detection / n_standst n_thresh</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 2701, 2704
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	20.00 [rpm]
<b>Description:</b>	<p>Sets the speed threshold for the standstill identification.</p> <p>Acts on the actual value and setpoint monitoring.</p> <p>When braking with OFF1 or OFF3, when the threshold is undershot, standstill is identified.</p> <p>The following applies when the brake control is activated:</p> <p>When the threshold is undershot, the brake control is started and the system waits for the brake closing time in p1217. The pulses are then suppressed.</p> <p>if the brake control is not activated, the following applies:</p> <p>When the threshold is undershot, the pulses are suppressed and the drive coasts down.</p>		
<b>Dependency:</b>	Refer to: p1215, p1216, p1217, p1227		
<b>Notice:</b>	For reasons relating to the compatibility to earlier firmware versions, a parameter value of zero in indices 1 to 31 is overwritten with the parameter value in index 0 when the Control Unit boots.		
<b>Note:</b>	<p>Standstill is identified in the following cases:</p> <ul style="list-style-type: none"> <li>- the speed actual value falls below the speed threshold in p1226 and the time started after this in p1228 has expired.</li> <li>- the speed setpoint falls below the speed threshold in p1226 and the time started after this in p1227 has expired.</li> </ul> <p>The actual value sensing is subject to measuring noise. For this reason, standstill cannot be detected if the speed threshold is too low.</p>		
<b>p1227</b>	<b>Zero speed detection monitoring time / n_standst t_monit</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2701, 2704
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	300.000 [s]	4.000 [s]
<b>Description:</b>	<p>Sets the monitoring time for the standstill identification.</p> <p>When braking with OFF1 or OFF3, standstill is identified after this time has expired, after the setpoint speed has fallen below p1226 (also refer to p1145).</p> <p>After this, the brake control is started, the system waits for the closing time in p1217 and then the pulses are suppressed.</p>		
<b>Dependency:</b>	Refer to: p1215, p1216, p1217, p1226		
<b>Notice:</b>	For p1145 > 0.0 (RFG tracking) the setpoint is not equal to zero dependent on the selected value. This can therefore cause the monitoring time in p1227 to be exceeded. In this case, for a driven motor, the pulses are not suppressed.		
<b>Note:</b>	<p>Standstill is identified in the following cases:</p> <ul style="list-style-type: none"> <li>- the speed actual value falls below the speed threshold in p1226 and the time started after this in p1228 has expired.</li> <li>- the speed setpoint falls below the speed threshold in p1226 and the time started after this in p1227 has expired.</li> </ul> <p>For p1227 = 300.000 s the following applies:</p> <p>Monitoring is deactivated.</p> <p>For p1227 = 0.000 s, the following applies:</p> <p>With OFF1 or OFF3 and a ramp-down time = 0, the pulses are immediately suppressed and the motor "coasts" down.</p>		

---

<b>p1228</b>	<b>Pulse suppression delay time / Pulse suppr t_del</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2701, 2704
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	299.000 [s]	0.000 [s]
<b>Description:</b>	Sets the delay time for pulse suppression. After OFF1 or OFF3, the pulses are canceled, if at least one of the following conditions is fulfilled: - the speed actual value falls below the threshold in p1226 and the time started after this in p1228 has expired. - the speed setpoint falls below the threshold in p1226 and the time started after this in p1227 has expired.		
<b>Dependency:</b>	Refer to: p1226, p1227		
<b>Notice:</b>	When the motor holding brake is activated, pulse cancellation is additionally delayed by the brake closing time (p1217).		

---

<b>r1229.1...11</b>	<b>CO/BO: Motor holding brake status word / Brake ZSW</b>				
VECTOR_G (Ext brake)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status word for the motor holding brake.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	01	Command open brake (continuous signal)	Yes	No	2711
	03	Pulse enable extended brake control	Yes	No	2711
	04	Brake does not open	Yes	No	2711
	05	Brake does not close	Yes	No	2711
	06	Brake threshold exceeded	Yes	No	2707
	07	Brake threshold undershot	Yes	No	2704
	08	Brake monitoring time expired	Yes	No	2704
	09	Pulse enable request missing/n_ctrl inhibited	Yes	No	2707
	10	Brake OR logic operation result	Yes	No	2707
	11	Brake AND logic operation result	Yes	No	2707

---

<b>p1230[0...n]</b>	<b>BI: Armature short-circuit / DC braking activation / ASC/DCBRK act</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7014, 7016, 7017
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to activate the armature short-circuit or DC braking.		
<b>Dependency:</b>	Refer to: p1231, p1232, p1233, p1234, p1235, p1236, p1237, r1238, r1239, p1345, p1346		
<b>Note:</b>	1 signal: Armature short-circuit/DC braking activated. 0 signal: Armature short-circuit/DC braking deactivated.		

p1231[0...n]	Armature short-circuit / DC braking configuration / ASC/DCBRK config		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130	<b>Access level:</b> 1 <b>Func. diagram:</b> 7014, 7016, 7017
	<b>P-Group:</b> Functions <b>Not for motor type:</b> -	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> 0	<b>Max</b> 14	<b>Factory setting</b> 0
<b>Description:</b>	Setting to activate the various types for armature short-circuit / DC braking.		
<b>Value:</b>	0: No function 1: External armature short-circuit with contactor feedback signal 2: Ext. armature short circuit without contactor feedback signal 3: Internal voltage protection 4: Internal armature short-circuit / DC braking 5: DC braking for OFF1/OFF3 14: DC braking below starting speed		
<b>Dependency:</b>	Refer to: p0300, p1230, p1232, p1233, p1234, p1235, p1236, p1237, r1238, r1239, p1345, p1346		
<b>Danger:</b>	For p1231 = 1, 2: - only short-circuit-proof motors may be used, or suitable resistors must be used to short-circuit the motor For p1231 = 3: - when the internal voltage protection is active, after pulse suppression, all of the motor terminals are at half of the DC link voltage (without an internal voltage protection, the motor terminals are at zero potential!) - it is only permissible to use motors that are short-circuit proof (p0320 < p0323). - the Motor Module must be able to conduct 180% short-circuit current (r0320) of the motor (r0209). - the internal voltage protection cannot be interrupted due to a fault response. If an overcurrent condition occurs during the active, internal voltage protection, then this can destroy the Motor Module and/or the motor. - if the Motor Module does not support the autonomous, internal voltage protection (r0192.10 = 0), in order to ensure safe, reliable functioning when the line supply fails, an external 24 V power supply (UPS) must be used for the components. - if the Motor Module does support the autonomous, internal voltage protection (r0192.10 = 1), in order to ensure safe, reliable functioning when the line supply fails, the 24 V power supply for the components must be provided through a Control Supply Module. - if the internal voltage protection is active, it is not permissible that the motor is driven by the load for a longer period of time (e.g. as a result of loads that move the motor or another coupled motor). For p1231 = 4 and synchronous motor: - when armature short-circuit is active, all of the motor terminals are at half of the DC link potential. - it is only permissible to use motors that are short-circuit proof (p0320 < p0323). - the Motor Module must be able to conduct 180% short-circuit current (r0320) of the motor (r0209).		
<b>Note:</b>	For p1231 = 1, 2: The external armature short circuit can only be selected for synchronous motors (p0300). In this case, control bit BO: r1239.0 must be interconnected (e.g. to a digital input) to control the external contactor. The external armature short circuit cannot be set as a fault response. It can be triggered via binector input p1230. It is also always activated in the case of pulse suppression. When the external armature short circuit is activated, the system waits for the de-excitation time (p0347) before the short-circuit contactor is controlled. For vector control, for the de-excitation time, a value greater than zero may be required in order to avoid the overcurrent monitoring from responding. For p1231 = 3: Internal voltage protection (using an internal armature short circuit) can only be selected for synchronous motors (p0300) and Motor Modules in booksize or chassis format. Further, it is not permissible for Safety Integrated to be active on blocksize Motor Modules (i.e. p9501 = 0 and p9601 = 0). The internal voltage protection prevents the DC link capacitance from being charged if there is no possibility of regenerating the EMF of a motor operated in the field-weakening mode. The Motor Module must support this function (r0192.9 = 1). a) If the Motor Module does not support the autonomous, internal armature short-circuit (r0192.10 = 0), the armature short-circuit is activated as soon as the activation criterion is fulfilled (refer below): b) If the Motor Module supports the autonomous internal voltage protection (r0192.10 = 1), then the Motor Module itself decides - using the DC link voltage - as to whether the short-circuit should be activated. In this case, protection is also provided even if the DRIVE-CLiQ connection between the Control Unit and Motor Module was interrupted.		

The short circuit is activated if the DC link voltage exceeds 800 V. If the DC link voltage falls below 450 V, then the short-circuit is withdrawn. This therefore ensures that the required input voltage for the Control Supply Module is maintained.

For chassis units, the following applies:

The value for the voltage limits is calculated, depending on the voltage class, from EEPROM data of the particular power unit and a factor.

For p1231 = 4:

The function is activated as soon as the activation criterion is fulfilled.

- the function can be superseded by OFF2

a) For synchronous motors (p0300 = 2xx, 4xx), the internal armature short-circuit is initiated.

- the Motor Module must support this function (r0192.9 = 1).

b) For induction motors (p0300 = 1xx), the DC braking is initiated.

Activation criterion (one of the following criteria is fulfilled):

- binector input p1230 = 1 signal (DC braking activation).

- the drive is not in the state "S4: Operation" or in "S5x" (refer to function diagram 2610).

- the internal pulse enable is missing (r0046.19 = 0).

For p1231 = 5:

DC braking can only be set for induction motors.

DC braking is activated if the OFF1 or OFF3 command is present. Binector input p1230 is ineffective. If the drive speed still lies above the speed threshold p1234, then initially, the drive is ramped-down to this threshold, demagnetized (see p0347) and is then switched into DC braking for the time set in p1233. After this, the drive is switched-off. If, at OFF1/OFF3, the drive speed is below p1234, then it is immediately demagnetized and switched into DC braking. A change is made into normal operation if the OFF1 command is withdrawn prematurely.

DC braking by means of fault response continues to be possible.

For p1231 = 14:

DC braking can only be set for induction motors.

DC braking is initiated if binector input p1230 = 1 during operation and the actual speed is below the starting speed p1234 (before this, the drive must have operated above p1234 plus the hysteresis). Then, following upstream demagnetization (see p0347), the braking current p1232 is injected for the time set in p1233. The drive then changes into normal operation. During braking the command for DC braking can be withdrawn. If the time p1233 is exceeded, then DC braking is inhibited and the drive changes into normal operation.

For OFF1 and OFF3, DC braking is only executed, if binector input p1230 = 1 signal.

DC braking by means of fault response continues to be possible.

For operation with an encoder, the encoder signal may not exceed a ripple of 15 rpm in the range of p1234.

For p1231 = 3, 4, 5, 14:

The value can only be changed to values not equal to 3, 4, 5 or 14 if p0491 is not equal to 4 and p2101 is not equal to 6 (armature short-circuit/DC braking not set).

In order that the armature short-circuit/DC braking is active as fault response, the corresponding fault number must be entered in p2100 and fault response p2101 set = 6 (encoder fault response, see p0491).

Note:

ASC: Armature Short Circuit

CSM: Control Supply Module

DCBRK: DC Braking

IVP: Internal Voltage Protection

UPS: Uninterruptible Power Supply

p1232[0...n]	DC braking braking current / DCBRK I_brake		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 7017
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Arms]	10000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	Sets the braking current for DC braking.		
<b>Dependency:</b>	Refer to: p1230, p1231, p1233, p1234, r1239, p1345, p1346		

## 2 Parameters

### 2.2 List of parameters

**Note:** A change to the braking current becomes effective the next time that DC braking is switched on.  
The value for p1232 is specified as an rms value in the 3-phase system. The magnitude of the braking current is the same as that of an identical output current at frequency zero (see r0067, r0068, p0640). The braking current is internally limited to r0067.  
For the current controller, the settings of parameters p1345 and p1346 (I\_max limiting controller) are used.

---

<b>p1233[0...n]</b>	<b>DC braking time / DCBRK time</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 7017
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [s]	3600.0 [s]	1.0 [s]
<b>Description:</b>	Sets the DC braking time (as fault response).		
<b>Dependency:</b>	Refer to: p1230, p1231, p1232, p1234, r1239		
<b>Note:</b>	The time set is also effective when parameterizing DC braking as fault response. If a speed encoder is being used, DC braking is ended as soon as the drive falls below the standstill threshold (p1226).		

---

<b>p1234[0...n]</b>	<b>Speed at the start of DC braking / DCBRK n_start</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 7017
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	40000.00 [rpm]
<b>Description:</b>	Sets the starting speed for DC braking. If the actual speed falls below this threshold, then DC braking is activated.		
<b>Dependency:</b>	Refer to: p1230, p1231, p1232, p1233, r1239		
<b>Notice:</b>	If an encoder fault occurs during closed-loop operation with an encoder, controlled deceleration of the drive down to the start speed p1234 is no longer possible. In this case, DC braking is activated immediately and injects the braking current p1232 for the braking time p1233 after de-magnetizing. The braking current and braking duration must, therefore, be dimensioned accordingly for this situation so that the drive can be decelerated to standstill. In the case of operation with an encoder, this speed may not be set too low so as ensure that the oscillation movement induced by the residual flux/remanence of the motor does not cause DC braking to be deactivated again.		
<b>Note:</b>	Function p1231 = 14 is activated at 15 1/min higher than the value set in p1234. This hysteresis is required to prevent DC braking from being deactivated for speed encoder signals with ripple.		

---

<b>p1235[0...n]</b>	<b>BI: External armature short-circuit contactor feedback signal / ASC ext feedback</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the contactor feedback signal for external armature short-circuit.		
<b>Dependency:</b>	Refer to: p1230, p1231, p1236, p1237, r1239		
<b>Notice:</b>	In order that the pulses are not enabled when the contactor is closed, the contactor feedback signal must lag by a sufficiently long time when opening the contactor.		
<b>Note:</b>	1 signal: The contactor is closed. 0 signal: The contactor is open.		

<b>p1236[0...n]</b>	<b>Ext. armature short-cct. contactor feedback signal monit. time / ASC ext t_monit</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	1000 [ms]	200 [ms]
<b>Description:</b>	Sets the monitoring time of the contactor feedback signal for the external armature short-circuit configuration. If the contactor feedback signal (p1235) is parameterized, then the appropriate feedback signal (r1239.1) is expected within this monitoring time after either opening or closing the contactor.		
<b>Dependency:</b>	Refer to: p1230, p1231, p1235, p1237, r1239 Refer to: F07904, F07905		
<b>p1237[0...n]</b>	<b>External armature short-circuit delay time when opening / ASC ext t_wait</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	1000 [ms]	200 [ms]
<b>Description:</b>	Sets the delay time when opening the contactor of the external armature short-circuit. If no contactor feedback signal has been selected (p1235), then the system waits for this time before the pulses are switched in.		
<b>Dependency:</b>	Refer to: p1230, p1231, p1235, p1236, r1239		
<b>Notice:</b>	This delay time must be at least long enough so that the contactor contacts reliably open before the pulses are switched in. The delay time must be greater than the contactor response time. The Motor Module can be damaged if the delay time is too short.		
<b>r1238</b>	<b>CO: Armature short-circuit external state / EASC state</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2610
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	6	-
<b>Description:</b>	Displays the state for the external armature short-circuit.		
<b>Value:</b>	0: Switched off 1: Ready 2: Active 3: Active - feedback signal "Closed" OK 4: Active - feedback signal "Closed" missing 5: Prompt to remove the armature short-circuit 6: Active - feedback signal "Open" missing		
<b>Dependency:</b>	Refer to: p1230, p1231, p1235, p1236, p1237, r1239 Refer to: F07904, F07905		
<b>Note:</b>	Activation criterion (one of the following criteria is fulfilled): - the signal at BI: p1230 (armature short-circuit activation) is 0. - the drive is not in the state "S4: Operation" or in S5x (refer to function diagram 2610). - the internal pulse enable is missing (r0046.19 = 0). For state "switched out" (r1238 = 0): - the external armature short-circuit can be selected with p1231 = 1. For state "ready" (r1238 = 1): - as soon as the activation criterion is fulfilled, then a transition is made into the state "active" (r1238 = 2).		

2 Parameters

2.2 List of parameters

Regarding the state "active" (r1238 = 2), "active - feedback signal "Closed" OK" (r1238 = 3)", "active - feedback signal "Closed" missing" (r1238 = 4)":

- the control signal to close contactor r1239.0 is set to "1" (closed) and the pulses are suppressed.
- if a contactor feedback signal is not connected (BI: p1235 = 0 signal), then a transition is immediately made into state 3.
- if a contactor feedback signal is connected, then a transition is made into state 3 if the feedback signal at BI: p1235 goes to "1" (closed) within the monitoring time (p1236).
- otherwise, a transition is made into state 4.

For state "prompt to remove the armature short-circuit" (r1238 = 5):

- the activation criterion is no longer fulfilled. An attempt is made to again remove the armature short circuit.
- the control signal to close the contactor r1239.0 is set to "0" (open) and the pulses remain suppressed.
- if a contactor feedback signal is not connected (BI: p1235 = 0 signal), the system waits for the delay time (p1237) to expire until a transition is made into state 1.
- if a contactor feedback signal is connected, the system waits until the feedback signal at BI:p1235 goes to "0" (open) until a transition is made into state 1. If this does not occur within the monitoring time (p1236), then a transition is made into state 6.

For state "active - feedback signal "Open" missing" (r1238 = 6):

- this error state can be exited by de-selecting the external armature short-circuit (p1231 = 0).

**r1239.0...13 CO/BO: Armature short-circuit / DC braking status word / ASC/DCBRK ZSW**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the status word for armature short-circuit.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	External armature short-circuit	Active	Inactive	-
	01	External armature short-circuit contactor feedback signal	Closed	Open	-
	02	External armature short-circuit ready	Yes	No	-
	03	External armature short-circuit with contactor feedback signal	Yes	No	-
	04	Internal armature short-circuit	Active	Inactive	-
	05	Internal armature short circuit feedback signal from power unit	Active	Inactive	-
	06	Internal armature short-circuit ready	Yes	No	-
	08	DC braking active	Yes	No	7017
	09	DC current injection active	Yes	No	-
	10	DC braking ready	Yes	No	7017
	11	Armature short circuit/DC braking selected	Yes	No	-
	12	DC braking selection internally inhibited	Yes	No	-
	13	DC braking for OFF1/OFF3	Yes	No	-

**Dependency:** Refer to: p1230, p1231, p1232, p1233, p1234, p1235, p1236, p1237

**Note:** External armature short-circuit (bits 0 ... 3):

For bit 00:

Using this signal, the motor is short-circuited through an external contactor circuit. This means that this BO: p1239.0 must be interconnected e.g. to a digital output.

For bit 01:

This signal indicates the state of the contactor to establish the armature short-circuit. To do this, BI: p1235 must be interconnected to a digital input.

For bit 02:

The external armature short-circuit configuration is ready and is activated as soon as the activation criterion is fulfilled.

For bit 03:

1: A feedback signal from an external contactor was parameterized in BI: p1235.

Internal voltage protection / internal armature short-circuit (bits 4 ... 6):

For bit 04:

a) Internal voltage protection (p1231 = 3) was selected and the Motor Module does not support the autonomous internal voltage protection (r0192.10 = 0).

The Control Unit issues the command to the Motor Module to short-circuit the motor through the power semiconductors.

a) Internal voltage protection (p1231 = 3) was selected and the Motor Module supports the autonomous internal voltage protection (r0192.10 = 1).

The Motor Module decides autonomously whether the armature short-circuit is activated. In this case, the following applies: r1239.4 = r1239.5.

c) Internal armature short-circuit (p1231 = 4) was selected.

The Control Unit issues the command to the Motor Module to short-circuit the motor through the power semiconductors.

For bit 05:

The Motor Module signals that the motor is short-circuited in the Motor Module through the power semiconductors.

For bit 06:

a) Internal voltage protection (p1231 = 3) was selected and the Motor Module does not support the autonomous internal voltage protection (r0192.10 = 0).

The internal voltage protection is ready and is activated as soon as the activation criterion is fulfilled.

a) Internal voltage protection (p1231 = 3) was selected and the Motor Module supports the autonomous internal voltage protection (r0192.10 = 1).

The internal voltage protection is ready and the Motor Module decides autonomously - using the DC link voltage - whether the short-circuit is activated. In this case, protection is also provided even if the DRIVE-CLiQ connection between the Control Unit and Motor Module was interrupted. The short-circuit is activated if the DC link voltage exceeds 800 V. If the DC link voltage falls below 450 V, then the short-circuit is withdrawn.

c) Internal armature short-circuit (p1231 = 4) was selected.

The internal armature short-circuit is ready and is activated as soon as the activation criterion is fulfilled.

Activation criterion (one of the following criteria is fulfilled):

- the signal at BI: p1230 (armature short-circuit activation) is 1.
- the drive is not in the state "S4: Operation" or in S5x (refer to function diagram 2610).
- the internal pulse enable is missing (r0046.19 = 0).

For bit 12, 13:

Only effective for p1231 = 14.

p1240[0...n]	Vdc controller or Vdc monitoring configuration / Vdc ctrl config		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6220
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	6	1

**Description:** Sets the controller configuration of the DC link voltage (Vdc controller) in the closed-loop control mode.

**Value:**

- 0: Inhib Vdc ctrl
- 1: Enable Vdc\_max controller
- 2: Enable Vdc\_min controller (kinetic buffering)
- 3: Enable Vdc\_min controller and Vdc\_max controller
- 4: Activate Vdc\_max monitoring
- 5: Activate Vdc\_min monitoring
- 6: Activate Vdc\_min monitoring and Vdc\_max monitoring

**Dependency:** Refer to: p1245

Refer to: A07400, A07401, A07402, F07403, F07404, F07405, F07406

**Warning:**



When the Vdc\_max controller is active, the motor can be accelerated (e.g. by driving loads or as a result of high DC link voltages). This can be caused by other drives that are operating on a common DC link busbar.

**Caution:**



If several drives are operated from the same DC link busbar, then it is recommended that the Udc control is only activated for the drives with high moments of inertia. If the Udc controls for various drives are simultaneously active, then they can mutually influence one another. In this case, the controller dynamic performance should be reduced or the Udc control of individual drives should be deactivated.

Drives with Udc control must be able to brake and accelerate independently of one another.

## 2 Parameters

### 2.2 List of parameters

**Notice:** An excessively high value in p1245 can possibly negatively influence the normal operation of the drive.

**Note:** p1240 = 1, 3:  
When the DC link voltage limit specified for the Motor Module is reached the following applies:  
- the Vdc\_max controller limits the regenerative energy in order that the DC link voltage is kept below the maximum DC link voltage when braking.  
- the ramp-down times are automatically increased.

p1240 = 2, 3:  
When the switch-in threshold of the Vdc\_min controller is reached (p1245), the following applies:  
- the Vdc\_min controller limits the energy taken from the DC link in order to keep the DC link voltage above the minimum DC link voltage when accelerating.  
- the motor is braked in order to use its kinetic energy to buffer the DC link.

p1240 = 4, 5, 6:  
When the threshold in r1242 or r1246 is reached, the DC link voltage monitoring initiates a fault (F07403 or F07404) with a response and therefore reduces additional negative effects on the DC link voltage.  
If a braking resistor is connected to the DC link, then the Vdc\_max control should be disabled (also see p1531).

r1242	Vdc_max controller switch-in level / Vdc_max on_level		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6220
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the switch-in level for the Vdc_max controller. If p1254 = 0 (automatic sensing of the switch-in level = off), then the following applies: AC/AC device: $r1242 = 1.15 * \sqrt{2} * p0210$ DC/AC device: $r1242 = 1.15 * p0210$ If p1254 = 1 (automatic sensing of the switch-in level = on), then the following applies: $r1242 = Vdc\_max - 50.0 \text{ V}$ (Vdc_max: Overvoltage threshold of the power unit) $r1242 = Vdc\_max - 25.0 \text{ V}$ (for 230 V power units)		
<b>Notice:</b>	If the activation level of the Vdc_max controller is already exceeded in the deactivated state (pulse inhibit) by the DC link voltage, then the controller can be automatically deactivated (see F07401), so that the drive is not accelerated the next time that it is activated.		
<b>Note:</b>	The Vdc_max controller is not switched back off until the DC link voltage falls below the threshold $0.95 * r1242$ and the controller output is zero.		

p1243[0...n]	Vdc_max controller dynamic factor / Vdc_max dyn_factor		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6220
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1 [%]	10000 [%]	100 [%]
<b>Description:</b>	Sets the dynamic factor for the DC link voltage controller (Vdc_max controller). 100% means that p1250, p1251, and p1252 (gain, integral time, and rate time) are used corresponding to their basic settings and based on a theoretical controller optimization. If subsequent optimization is required, this can be carried out using the dynamic factor. In this case p1250, p1251, p1252 are weighted with the dynamic factor p1243. If several modules are connected to the DC link, then the dynamic factor must be increased corresponding to the ratio of the additional capacitances to the capacitance of the module involved.		
<b>Note:</b>	The pre-setting of the dynamic factor is based on the power units connected to DRIVE-CLiQ. It is assumed that the power units connected via DRIVE-CLiQ are also electrically connected to the DC link. If this is not the case, then the dynamic factor must be optimized manually.		

<b>p1245[0...n]</b>	<b>Vdc_min controller switch-in level (kinetic buffering) / Vdc_min on_level</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	65 [%]	150 [%]	76 [%]
<b>Description:</b>	Sets the switch-in level for the Vdc-min controller (kinetic buffering). The value is obtained as follows: AC/AC device: $r1246[V] = p1245[\%] * \sqrt{2} * p0210$ DC/AC device: $r1246[V] = p1245[\%] * p0210$		
<b>Dependency:</b>	Refer to: p0210		
<b>Warning:</b>	An excessively high value possibly negatively influences normal drive operation, and can mean that after the line supply returns, the Vdc minimum control can no longer be exited. The values up to 150 % are intended for operating modes p1240 = 5, 6.		
			
<b>Note:</b>	For SINAMICS GM/SM, the following applies: Minimum value = 0.75 Maximum value = 0.90		
<b>r1246</b>	<b>Vdc_min controller switch-in level (kinetic buffering) / Vdc_min on_level</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6220
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the switch-in level for the Vdc_min controller (kinetic buffering).		
<b>Note:</b>	The Vdc_min controller is not switched back off until the DC link voltage rises above the threshold $1.05 * p1246$ and the controller output is zero.		
<b>p1247[0...n]</b>	<b>Vdc_min controller dynamic factor (kinetic buffering) / Vdc_min dyn_factor</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6220
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1 [%]	10000 [%]	100 [%]
<b>Description:</b>	Sets the dynamic factor for the Vdc_min controller (kinetic buffering). 100% means that p1250, p1251, and p1252 (gain, integral time, and rate time) are used corresponding to their basic settings and based on a theoretical controller optimization. If subsequent optimization is required, this can be carried out using the dynamic factor. In this case p1250, p1251, p1252 are weighted with the dynamic factor p1247. If several components are connected to the DC link, then the dynamic factor must be increased corresponding to the ratio of the additional capacitances to the capacitance of the component involved.		

## 2 Parameters

### 2.2 List of parameters

<b>p1249[0...n]</b>	<b>Vdc_max controller speed threshold / Vdc_max n_thresh</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	10.00 [rpm]
<b>Description:</b>	Sets the lower speed threshold for the Vdc_max controller. When this speed threshold is undershot, the Vdc_max control is switched out and the speed is controlled using the ramp-function generator.		
<b>Note:</b>	For fast braking where the ramp-function generator tracking was active, it is possible to prevent the drive rotating in the opposite direction by increasing the speed threshold and setting a final rounding-off time in the ramp-function generator (p1131). This is supported using a dynamic setting of the speed controller.		
<b>p1250[0...n]</b>	<b>Vdc controller proportional gain / Vdc_ctrl Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	100.00	1.00
<b>Description:</b>	Sets the proportional gain for the DC link voltage controller (Vdc_min controller, Vdc_max controller).		
<b>Dependency:</b>	The effective proportional gain is obtained taking into account p1243 (Vdc_max controller dynamic factor).		
<b>Note:</b>	The gain factor is proportional to the capacitance of the DC link. The parameter is pre-set to a value that is optimally adapted to the capacitance of the individual Motor Module. The capacitances of the other power units, which are connected to the DC link, can be taken into account using the dynamic factor (p1247 or p1243).		
<b>p1251[0...n]</b>	<b>Vdc controller integral time / Vdc_ctrl Tn</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6220
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	10000 [ms]	0 [ms]
<b>Description:</b>	Sets the integral time for the DC link voltage controller (Vdc_min controller, Vdc_max controller).		
<b>Dependency:</b>	The effective integral time is obtained taking into account p1243 (Vdc_max controller dynamic factor).		
<b>Note:</b>	An integral time is normally not required for single axis drives. For multi-axis drives on the other hand, it may be possible to compensate for interference from other axes using the integral time (integral component) . p1251 = 0: The integral component is deactivated.		
<b>p1252[0...n]</b>	<b>Vdc controller rate time / Vdc_ctrl t_rate</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6220
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	1000 [ms]	0 [ms]
<b>Description:</b>	Sets the rate time constant for the DC link voltage controller (Vdc_min controller, Vdc_max controller).		
<b>Dependency:</b>	The effective rate time is obtained taking into account p1243 (Vdc_max controller dynamic factor).		

<b>p1254</b>	<b>Vdc_max controller automatic ON level detection / Vdc_max SenseOnLev</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	1
<b>Description:</b>	Activates/deactivates the automatic sensing of the switch-in level for the Vdc_max controller.		
<b>Value:</b>	0: Automatic detection inhibited 1: Automatic detection enabled		
<b>p1255[0...n]</b>	<b>Vdc_min controller time threshold / Vdc_min t_thresh</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	10000.000 [s]	0.000 [s]
<b>Description:</b>	Sets the time threshold for the Vdc_min controller (kinetic buffering). If this value is exceeded a fault is output; the required response can be parameterized. Prerequisite: p1256 = 1		
<b>Dependency:</b>	Refer to: F07406		
<b>Notice:</b>	If a time threshold has been parameterized, the Vdc_max controller should also be activated (p1240 = 3) so that the drive does not shut down with overvoltage when Vdc_min control is exited (due to the time violation) and in the event of fault response OFF3. It is also possible to increase the OFF3 ramp-down time p1135.		
<b>p1256[0...n]</b>	<b>Vdc_min controller response (kinetic buffering) / Vdc_min response</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the response for the Vdc_min controller (kinetic buffering).		
<b>Value:</b>	0: Buffer Vdc until undervoltage, n<p1257 -> F07405 1: Buff. Vdc until undervolt., n<p1257 -> F07405, t>p1255 -> F07406		
<b>Dependency:</b>	Refer to: F07405, F07406		
<b>p1257[0...n]</b>	<b>Vdc_min controller speed threshold / Vdc_min n_thresh</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	50.00 [rpm]
<b>Description:</b>	Sets the speed threshold for the Vdc-min controller (kinetic buffering). If this value is exceeded a fault is output; the required response can be parameterized . Kinetic buffering is not started below the speed threshold.		
<b>Note:</b>	Exiting the Vdc_min control before reaching motor standstill prevents the regenerative braking current from increasing significantly at low speeds, and after a pulse inhibit, means that the motor coasts down. However, the maximum braking torque can be set via the appropriate torque limiting.		

## 2 Parameters

### 2.2 List of parameters

<b>r1258</b>	<b>CO: Vdc controller output / Vdc_ctrl output</b>				
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6220		
	<b>P-Group:</b> Functions	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505		
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	- [Arms]	- [Arms]	- [Arms]		
<b>Description:</b>	Displays the actual output of the Vdc controller (DC link voltage controller)				
<b>Note:</b>	The regenerative power limit p1531 is used for vector control to pre-control the Vdc_max controller. The lower the power limit is set, the lower the correction signals of the controller when the voltage limit is reached.				
<b>p1260</b>	<b>Bypass configuration / Bypass config</b>				
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	0	3	0		
<b>Description:</b>	Sets the configuration for the bypass function.				
<b>Value:</b>	0: Bypass deactivated 1: Bypass with synchronization and overlap 2: Bypass with synchronization without overlap 3: Bypass without synchronization				
<b>Note:</b>	If the bypass function is selected ((p1260 > 0), then when the power unit restarts after POWER OFF, the state of the bypass switch is evaluated. This means that after the ramp-up, it is possible to directly change into the standby mode. This is only possible for p1267 = 1 (bypass using the control signal) and if the control command after the system has been booted is still available (p1266). This function has a higher priority than the automatic restart function (p1210).  The "bypass" function can only be switched off again (p1260 = 0) if the bypass is not active or the bypass function has a fault.  The corresponding function should be activated in p3800 for bypass with synchronization.				
<b>r1261.0...11</b>	<b>CO/BO: Bypass control/status word / Bypass STW / ZSW</b>				
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Control and feedback signals of the bypass switch.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Command switch motor - power unit	Close	Open	-
	01	Command switch motor - line supply	Close	Open	-
	02	Synchronization requested	Yes	No	-
	03	Staging status	Active	Not active	-
	05	Feedback signal switch motor - power unit	Closed	Opened	-
	06	Feedback signal switch motor - line supply	Closed	Opened	-
	07	Bypass command (from p1266)	Yes	No	-
	08	Feedback signal synchronization completed (from p1268)	Yes	No	-
	09	Staging requested (from p2369)	Yes	No	-
	10	Bypass in process sequence	Yes	No	-
	11	Bypass enabled	Yes	No	-
<b>Dependency:</b>	Refer to: p2369				
<b>Note:</b>	Control bits 0 and 1 should be interconnected to the signal outputs via which the switches in the motor feeder cables should be controlled. These should be selected/dimensioned for switching under load.				

<b>p1262[0...n]</b>	<b>Bypass dead time / Bypass t<sub>dead</sub></b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> - <b>Not for motor type:</b> RESM <b>Min</b> 0.000 [s]	<b>Calculated:</b> CALC_MOD_REG <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 20.000 [s]	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1.000 [s]
<b>Description:</b>	Sets the dead time for non-synchronized bypass.		
<b>Note:</b>	This parameter is used to define the changeover time of the contactors. It should not be shorter than the de-magnetizing time of the motor (p0347). The total changeover time for the bypass is based on the total of p1262 plus the OFF time for the relevant switch (p1274[x]).		
<b>p1263</b>	<b>Debypass delay time / Debypass t<sub>del</sub></b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> - <b>Not for motor type:</b> RESM <b>Min</b> 0.000 [s]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 300.000 [s]	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1.000 [s]
<b>Description:</b>	Sets the delay time to switch back to converter operation for a non-synchronized bypass.		
<b>p1264</b>	<b>Bypass delay time / Bypass t<sub>del</sub></b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> - <b>Not for motor type:</b> RESM <b>Min</b> 0.000 [s]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 300.000 [s]	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1.000 [s]
<b>Description:</b>	Sets the delay time for switching to line operation for a non-synchronized bypass.		
<b>p1265</b>	<b>Bypass speed threshold / Bypass n<sub>thresh</sub></b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> - <b>Not for motor type:</b> REL, RESM <b>Min</b> 0.00 [rpm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 3_1 <b>Scaling:</b> p2000 <b>Max</b> 210000.00 [rpm]	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 1480.00 [rpm]
<b>Description:</b>	Sets the speed threshold to activate the bypass.		
<b>Note:</b>	When selecting p1260 = 3 and p1267.1 = 1, the bypass is automatically activated when this speed is reached.		
<b>p1266</b>	<b>BI: Bypass control command / Bypass command</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> - <b>Not for motor type:</b> RESM <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the signal source for the control command to the bypass.		

## 2 Parameters

### 2.2 List of parameters

<b>p1267</b>	<b>Bypass changeover source configuration / Chngov_src config</b>			
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 bin	
<b>Description:</b>	Sets the cause that should initiate the bypass.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Bypass via signal (BI: p1266)	Yes	No
	01	Bypass via reaching the speed threshold	Yes	No
				<b>FP</b>
				-
				-
<b>Note:</b>	The parameter only has an effect for a non-synchronized bypass.			
	p1267.0 = 1:			
	The bypass is initiated by setting a binary signal. When the command is reset, after the debypass delay time (p1263) has expired, operation at the power unit is re-selected.			
	p1267.1 = 1:			
	When the speed threshold entered in p1265 is reached, the bypass is switched in. The system only switches back when the speed setpoint again falls below the threshold value.			
<b>p1268</b>	<b>BI: Bypass feedback synchronization completed / FS sync compl</b>			
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	3819.2	
<b>Description:</b>	Sets the signal source for the feedback signal "synchronization completed" for the bypass function.			
<b>Dependency:</b>	Refer to: r3819			
<b>p1269[0...1]</b>	<b>BI: Bypass switch feedback signal / Bypass FS</b>			
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0	
<b>Description:</b>	Sets the signal source for the feedback signal of the bypass switch.			
<b>Index:</b>	[0] = Switch motor/drive [1] = Switch motor/line supply			
<b>Note:</b>	In the case of switches without a feedback signal, interconnect the corresponding control bit as the signal source:			
	BI: p1269[0] = r1261.0			
	BI: p1269[1] = r1261.1			

<b>p1270[0...n]</b>		<b>Flying restart configuration / Fly restart config</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> PMSM, SESM, REL, RESM <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 0000 0000 0000 bin	
<b>Description:</b>	Sets the configuration for the "flying restart function".			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Fast flying restart with voltage model for induction motor	Yes	No
	01	PLL expansion for fast flying restart w/ voltage model for ASM	Yes	No
	12	Siemens internal	Yes	No
	13	Siemens internal	1	0
	14	Siemens internal	1	0
	15	Siemens internal	1	0
<b>Note:</b>	ASM: Induction motor PMSM: permanent-magnet synchronous motor For bit 00: This bit is equivalent to p1780 bit 1. For bit 01: This bit should only be set when required for large drives.			

<b>p1271[0...n]</b>		<b>Flying restart maximum frequency for the inhibited direction / FlyRes f_max dir</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0 [Hz]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 650 [Hz]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0 [Hz]	
<b>Description:</b>	Sets the maximum search frequency for a flying restart in an inhibited setpoint direction (p1110, p1111).			
<b>Note:</b>	The parameter has no effect for an operating mode, which only searches in the setpoint direction (p1200 > 3).			

<b>p1272</b>		<b>Simulation mode / Simulation mode</b>		
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> Functions <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0	
<b>Description:</b>	In the simulation mode, the closed-loop control or U/f control can be operated without motor. The simulation mode is used to test the power unit. Even though the DC link voltage is missing, the pulses are enabled when switching on. The DC link precharging is bypassed and the undervoltage detection is disabled. Closed-loop speed control with an encoder is possible if the torque setpoint (r0079) is used in order to operate a second drive in the closed-loop torque controlled mode.			
<b>Value:</b>	0: OFF 1: ON			
<b>Dependency:</b>	The following functions are deactivated in the simulation mode: - motor data identification routine - motor data identification routine, rotating without encoder - pole position identification			

## 2 Parameters

### 2.2 List of parameters

For U/f control and sensorless vector control, flying restart is not carried out (refer to p1200).

Refer to: r0192, p1900, p1910, p1960, p1990

Refer to: A07825, F07826

**Notice:** In simulation mode, binector output r0863.1 = 1 is set. This is why you need to check whether other devices are switched on via this signal before activating simulation mode. You might need to disconnect the corresponding BICO interconnection temporarily.

**Note:** Simulation mode is only possible for DC link voltages below 40 V. In order that the closed-loop control can be calculated, the displayed DC link voltage (r0026, r0070) is set to the rated DC link voltage (refer to p0210). Closed-loop current control and motor model are switched out (disabled) - the same is true for the speed controller for encoderless closed-loop speed control.

When fault messages occur, the parameter is not automatically reset. This function is not implemented for SINAMICS GM.

---

<b>p1274[0...1]</b>	<b>Bypass switch monitoring time / Switch t_monit</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	5000 [ms]	1000 [ms]

**Description:** Sets the monitoring time for the bypass switch.

**Index:** [0] = Switch motor/drive  
[1] = Switch motor/line supply

**Note:** The monitoring is deactivated with p1274 = 0 ms.

The changeover time for the bypass (p1262) is extended by the value in this parameter.

---

<b>p1275</b>	<b>Motor holding brake control word / Brake STW</b>		
VECTOR_G (Ext brake)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 bin

**Description:** Sets the control word for the motor holding brake.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Inversion BI: 1219[0]	Yes	No	2707
	01	Inversion BI: 1219[1]	Yes	No	2707
	02	Inversion BI: 1224[0]	Yes	No	2704
	03	Inversion BI: 1224[1]	Yes	No	2704
	05	Brake with feedback	Yes	No	2711
	06	Enable with feedback signal	Yes	No	2711

**Note:** For p1275.6 = 1 and p1275.5 = 1, the following applies:

The pulse enable (BO: r1229.3) is independent of the timer that has been set (p1217, p1216). The particular enable is only defined by the feedback signal (BI: p1222, BI: p1223). The timers (p1216, p1217) only influence the alarm A07931 "Brake does not open" and A07932 "Brake does not close".

<b>p1276</b>	<b>Motor holding brake standstill detection bypass / Brk standst bypass</b>		
VECTOR_G (Ext brake)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Functions <b>Not for motor type:</b> - <b>Min</b> 0.000 [s]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 300.000 [s]	<b>Access level:</b> 2 <b>Func. diagram:</b> 2704 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 300.000 [s]
<b>Description:</b>	Sets the delay time for closing the brake at standstill. After this time has expired, if the "close brake at standstill" or OFF1/OFF3 is present, the brake is closed and the pulses are suppressed. For p1276 = 300.000 s, the timer is deactivated - this means that the timer output is always zero.		
<b>p1277</b>	<b>Motor holding brake braking threshold delay exceeded / Del thresh exceed</b>		
VECTOR_G (Ext brake)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Functions <b>Not for motor type:</b> - <b>Min</b> 0.000 [s]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 300.000 [s]	<b>Access level:</b> 2 <b>Func. diagram:</b> 2707 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000 [s]
<b>Description:</b>	Sets the delay time for the signal "braking threshold exceeded" (BO: r1229.6).		
<b>Dependency:</b>	Refer to: p1220, p1221, r1229		
<b>p1278</b>	<b>Brake control diagnostics evaluation / Brake diagnostics</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> Functions <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the brake control type (with or without diagnostics evaluation). Example for brake control with diagnostics evaluation. - brake control in the Motor Modules in booksize format - Safe Brake Relay for AC Drive Example for brake control without diagnostics evaluation. - Brake Relay for AC Drive		
<b>Value:</b>	0: Brake control with diagnostics evaluation 1: Brake control without diagnostics evaluation		
<b>Note:</b>	If the configuration of the motor holding brake (p1215) is set to "no holding brake present" when booting, then an automatic identification of the motor holding brake will be carried out. If a brake control is detected without diagnostics evaluation (e.g. Brake Relay for AC Drive), then the parameter is set to "brake control without diagnostics evaluation". It is not permissible to parameterize "brake control without diagnostics evaluation" and also enable "safe brake control" (p1278 = 1, p9602 = 1, p9802 = 1).		
<b>p1279[0...3]</b>	<b>BI: Motor holding brake OR/AND logic operation / Brake OR AND</b>		
VECTOR_G (Ext brake)	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Functions <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 2 <b>Func. diagram:</b> 2707 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the signal source for the OR/AND logic operation.		
<b>Dependency:</b>	Refer to: r1229		

## 2 Parameters

### 2.2 List of parameters

**Note:** [0]: OR logic operation, input 1 --> the result is displayed in r1229.10.  
 [1]: OR logic operation, input 2 --> the result is displayed in r1229.10.  
 [2]: AND logic operation, input 1 --> the result is displayed in r1229.11.  
 [3]: AND logic operation, input 2 --> the result is displayed in r1229.11.

<b>p1280[0...n]</b>		<b>Vdc controller or Vdc monitoring configuration (U/f) / Vdc_ctr config U/f</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> Functions <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 6	<b>Access level:</b> 3 <b>Func. diagram:</b> 6300, 6320 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1	
<b>Description:</b>	Sets the configuration of the controller for the DC link voltage (Vdc controller) in the U/f operating mode.			
<b>Value:</b>	0: Inhib Vdc ctrl 1: Enable Vdc_max controller 2: Enable Vdc_min controller (kinetic buffering) 3: Enable Vdc_min controller and Vdc_max controller 4: Activate Vdc_max monitoring 5: Activate Vdc_min monitoring 6: Activate Vdc_min monitoring and Vdc_max monitoring			
<b>Warning:</b>	 When the Vdc_max controller is active, the motor can be accelerated (e.g. by driving loads or as a result of high DC link voltages). This can be caused by other drives that are operating on a common DC link busbar.			
<b>Caution:</b>	 If several drives are operated from the same DC link busbar, then it is recommended that the Udc control is only activated for the drives with relatively high moments of inertia. If the Udc controls for various drives are simultaneously active, then they can mutually influence one another. In this case, the controller dynamic performance should be reduced or the Udc control of individual drives should be deactivated. Drives with Udc control must be able to brake and accelerate independently of one another.			
<b>Note:</b>	For p1280 = 4, 5, 6: When the threshold in r1282 or r1286 is reached, the DC link voltage monitoring initiates a fault (F07403 or F07404) with a response and therefore reduces additional negative effects on the DC link voltage. If a braking resistor is connected to the DC link, then the Vdc_max control should be disabled. For p1280 = 1, 3: Only U/f control: When the Vdc max controller is active, fault F07404 is initiated if the speed setpoint ramp is stopped (held) longer than the time set in p1284.			

<b>p1281[0...n]</b>		<b>Vdc controller configuration / Vdc ctrl config</b>																	
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 bin																
<b>Description:</b>	Sets the configuration for the DC link voltage controller.																		
<b>Bit field:</b>	<table border="1"> <thead> <tr> <th>Bit</th> <th>Signal name</th> <th>1 signal</th> <th>0 signal</th> <th>FP</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Vdc min control (U/f) without up ramp</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>02</td> <td>Vdc min shorter wait time when the line returns</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	FP	00	Vdc min control (U/f) without up ramp	Yes	No	-	02	Vdc min shorter wait time when the line returns	Yes	No	-			
Bit	Signal name	1 signal	0 signal	FP															
00	Vdc min control (U/f) without up ramp	Yes	No	-															
02	Vdc min shorter wait time when the line returns	Yes	No	-															
<b>Note:</b>	ASM: Induction motor (induction motor) PMSM: permanent-magnet synchronous motor For bit 00: This bit is equivalent to p1780 bit 1. For bit 01: This bit should only be set when required for large drives.																		

<b>r1282</b>		<b>Vdc_max controller switch-in level (U/f) / Vdc_max on_level</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6320	
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [V]	- [V]	- [V]	
<b>Description:</b>	Displays the switch-in level for the Vdc_max controller. If p1294 = 0 (automatic sensing of the switch-in level = off), then the following applies: AC/AC device: $r1282 = 1.15 * \sqrt{2} * p0210$ DC/AC device: $r1282 = 1.15 * p0210$ If p1294 = 1 (automatic sensing of the switch-in level = on), then the following applies: $r1282 = Vdc\_max - 50.0 \text{ V}$ (Vdc_max: Overvoltage threshold of the power unit) $r1282 = Vdc\_max - 25.0 \text{ V}$ (for 230 V power units)			
<b>Notice:</b>	If the activation level of the Vdc_max controller is already exceeded in the deactivated state (pulse inhibit) by the DC link voltage, then the controller can be automatically deactivated (see F07401), so that the drive is not accelerated the next time that it is activated.			
<b>Note:</b>	The Vdc_max controller is not switched back off until the DC link voltage falls below the threshold $0.95 * r1282$ and the controller output is zero.			

<b>p1283[0...n]</b>		<b>Vdc_max controller dynamic factor (U/f) / Vdc_max dyn_factor</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6320	
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	1 [%]	10000 [%]	100 [%]	
<b>Description:</b>	Sets the dynamic factor for the DC link voltage controller (Vdc_max controller). 100% means that p1290, p1291, and p1292 (gain, integral time, and rate time) are used in accordance with their basic settings and on the basis of a theoretical controller optimization. If subsequent optimization is required, this can be carried out using the dynamic factor. In this case, p1290, p1291, and p1292 are weighted with the dynamic factor p1283. If several modules are connected to the DC link, then the dynamic factor must be increased corresponding to the ratio of the additional capacitances to the capacitance of the module involved.			
<b>Note:</b>	The pre-setting of the dynamic factor is based on the power units connected to DRIVE-CLiQ. It is assumed that the power units connected via DRIVE-CLiQ are also electrically connected to the DC link. If this is not the case, then the dynamic factor must be optimized manually.			

<b>p1284[0...n]</b>		<b>Vdc_max controller time threshold (U/f) / Vdc_max t_thresh</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.000 [s]	300.000 [s]	4.000 [s]	
<b>Description:</b>	Sets the monitoring time for the Vdc_max controller. If the down ramp of the speed setpoint is held for longer than the time set in p1284, then fault F07404 is output.			

## 2 Parameters

### 2.2 List of parameters

<b>p1285[0...n]</b>	<b>Vdc_min controller switch-in level (kinetic buffering) (U/f) / Vdc_min on_level</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	65 [%]	150 [%]	76 [%]
<b>Description:</b>	Sets the switch-in level for the Vdc-min controller (kinetic buffering). The value is obtained as follows: AC/AC device: $r1286[V] = p1285[\%] * \sqrt{2} * p0210$ DC/AC device: $r1286[V] = p1285[\%] * p0210$		
<b>Warning:</b>	An excessively high value may adversely affect normal drive operation. The values up to 150 % are intended for operating modes p1240 = 5, 6.		
			
<b>r1286</b>	<b>Vdc_min controller switch-in level (kinetic buffering) (U/f) / Vdc_min on_level</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6320
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the switch-in level for the Vdc_min controller (kinetic buffering).		
<b>Note:</b>	The Vdc_min controller is not switched back off until the DC link voltage rises above the threshold $1.05 * r1286$ and the controller output is zero.		
<b>p1287[0...n]</b>	<b>Vdc_min controller dynamic factor (kinetic buffering) (U/f) / Vdc_min dyn_factor</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6320
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1 [%]	10000 [%]	100 [%]
<b>Description:</b>	Sets the dynamic factor for the Vdc_min controller (kinetic buffering). 100% means that p1290, p1291, and p1292 (gain, integral time, and rate time) are used corresponding to their basic settings and based on a theoretical controller optimization. If subsequent optimization is required, this can be carried out using the dynamic factor. In this case, p1290, p1291, and p1292 are weighted with the dynamic factor p1287. If several modules are connected to the DC link, then the dynamic factor must be increased corresponding to the ratio of the additional capacitances to the capacitance of the module involved.		
<b>Note:</b>	The pre-setting of the dynamic factor is based on the power units connected to DRIVE-CLiQ. It is assumed that the power units connected via DRIVE-CLiQ are also electrically connected to the DC link. If this is not the case, then the dynamic factor must be optimized manually.		
<b>p1288[0...n]</b>	<b>Vdc_max controller feedback coupling factor ramp-fct. gen. (U/f) / Vdc_max factor RFG</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	100.000	0.500
<b>Description:</b>	Sets the feedback factor for the ramp-function generator. Its ramp times are decelerated relative to the output signal of the Vdc_max controller.		

**Note:** For values p1288 = 0.0 to 0.5, the controller dynamics are automatically adapted internally.

<b>p1289[0...n]</b>	<b>Vdc_max controller speed threshold (U/f) / Vdc_max n_thresh</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	10.00 [rpm]
<b>Description:</b>	Sets the lower speed threshold for the Vdc_max controller. When this speed threshold is undershot, the Vdc_max control is switched out and the speed is controlled using the ramp-function generator.		
<b>p1290[0...n]</b>	<b>Vdc controller proportional gain (U/f) / Vdc_ctrl Kp</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6320
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	100.00	1.00
<b>Description:</b>	Sets the proportional gain for the Vdc controller (DC link voltage controller).		
<b>Note:</b>	The gain factor is proportional to the capacitance of the DC link. The parameter is pre-set to a value that is optimally adapted to the capacitance of the individual Motor Module. The capacitances of the other power units which are connected to the DC link can be taken into account using the dynamic factor (p1287 or p1283).		
<b>p1291[0...n]</b>	<b>Vdc controller integral time (U/f) / Vdc_ctrl Tn</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6320
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	10000 [ms]	40 [ms]
<b>Description:</b>	Sets the integral time for the Vdc controller (DC link voltage controller).		
<b>p1292[0...n]</b>	<b>Vdc controller rate time (U/f) / Vdc_ctrl t_rate</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6320
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	1000 [ms]	10 [ms]
<b>Description:</b>	Sets the rate time constant for the Vdc controller (DC link voltage controller).		
<b>p1293[0...n]</b>	<b>Vdc min controller output limit (U/f) / Vdc_min outp_lim</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6320
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Hz]	600.00 [Hz]	10.00 [Hz]
<b>Description:</b>	Sets the output limit for the Vdc min controller (DC link undervoltage controller).		

## 2 Parameters

### 2.2 List of parameters

<b>p1294</b>	<b>Vdc_max controller automatic detection ON signal level (U/f) / Vdc_max SenseOnLev</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Activates/deactivates the automatic sensing of the switch-in level for the Vdc_max controller. When the sensing function is deactivated, the activation threshold r1282 for the Vdc_max controller is determined from the parameterized connection voltage p0210.		
<b>Value:</b>	0: Automatic detection inhibited 1: Automatic detection enabled		
<b>p1295[0...n]</b>	<b>Vdc_min controller time threshold (U/f) / Vdc_min t_thresh</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	10000.000 [s]	0.000 [s]
<b>Description:</b>	Sets the time threshold for the Vdc_min controller (kinetic buffering). If this value is exceeded a fault is output; the required response can be parameterized. Prerequisite: p1296 = 1		
<b>Notice:</b>	If a time threshold has been parameterized, the Vdc_max controller should also be activated (p1280 = 3) so that the drive does not shut down with overvoltage when Vdc_min control is exited (due to the time violation) and in the event of fault response OFF3. It is also possible to increase the OFF3 ramp-down time p1135.		
<b>p1296[0...n]</b>	<b>Vdc_min controller response (kinetic buffering) (U/f / Vdc_min response</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the response for the Vdc_min controller (kinetic buffering).		
<b>Value:</b>	0: Buffer Vdc until undervoltage, n<p1297 -> F07405 1: Buff. Vdc until undervolt., n<p1297 -> F07405, t>p1295 -> F07406		
<b>Note:</b>	For p1296 = 1: The quick stop ramp entered in p1135 must not be equal to zero, to prevent overcurrent shutdown if F07406 is triggered.		
<b>p1297[0...n]</b>	<b>Vdc_min controller speed threshold (U/f) / Vdc_min n_thresh</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	50.00 [rpm]
<b>Description:</b>	Sets the speed threshold for the Vdc-min controller (kinetic buffering). If this value is exceeded a fault is output; the required response can be parameterized .		
<b>Note:</b>	Exiting the Vdc_min control before reaching motor standstill prevents the regenerative braking current from increasing significantly at low speeds, and after a pulse inhibit, means that the motor coasts down.		

<b>r1298</b>	<b>CO: Vdc controller output (U/f) / Vdc_ctrl output</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6320
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the actual output of the Vdc controller (DC link voltage controller)		
<b>p1300[0...n]</b>	<b>Open-loop/closed-loop control operating mode / Op/cl-lp ctrl_mode</b>		
VECTOR_G	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6300, 6301, 8012
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	19	0
<b>Description:</b>	Sets the U/f control mode of the drive.		
<b>Value:</b>	0: U/f control with linear characteristic 1: U/f control with linear characteristic and FCC 2: U/f control with parabolic characteristic 3: U/f control with parameterizable characteristic 4: U/f control with linear characteristic and ECO 5: U/f control for drives requiring a precise freq. (e.g. textiles) 6: U/f control for drives requiring a precise frequency and FCC 7: U/f control for a parabolic characteristic and ECO 15: Operation with braking resistor 19: U/f control with independent voltage setpoint		
<b>Recommendation:</b>	The use of the vector control operating modes is recommended for synchronous motors.		
<b>Dependency:</b>	If you are working with reduced supply voltages (p0212.0 = 1), only U/f control with independent voltage setpoint (p1300 = 19) can be set as the operating mode.		
	p1300 = 15 (operation with braking resistor), can only be activated or deactivated in quick commissioning (p0010 = 1). This operating mode is only possible for chassis power units (DC/AC Motor Module).		
<b>Notice:</b>	Active slip compensation is required in the U/f control types with Eco mode (p1300 = 4, 7). The scaling of the slip compensation (p1335) should be set so that the slip is completely compensated (generally 100%).		
	The Eco mode is only effective in steady-state operation and when the ramp-function generator is not bypassed. In the case of analog setpoints, if required the tolerance for ramp-up and ramp-down should be actively increased for the ramp-function generator using p1148 in order to reliably signal a steady-state condition.		
<b>Note:</b>	The closed-loop torque control can only be changed over in operation (p1300 = 20, 21) by selecting the closed-loop speed control (p1501). At the changeover, the setting of p1300 does not change. In this case, the actual state is displayed in r1407, bit 2 and bit 3.		
	For motors, type p0300 = 14, operation with U/f control is only recommended for diagnostic purposes.		
<b>p1300[0...n]</b>	<b>Open-loop/closed-loop control operating mode / Op/cl-lp ctrl_mode</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6300, 6301, 8012
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	23	20
<b>Description:</b>	Sets the open and closed-loop control mode of a drive.		
<b>Value:</b>	0: U/f control with linear characteristic 1: U/f control with linear characteristic and FCC 2: U/f control with parabolic characteristic 3: U/f control with parameterizable characteristic		

## 2 Parameters

### 2.2 List of parameters

- 4: U/f control with linear characteristic and ECO
- 5: U/f control for drives requiring a precise freq. (e.g. textiles)
- 6: U/f control for drives requiring a precise frequency and FCC
- 7: U/f control for a parabolic characteristic and ECO
- 15: Operation with braking resistor
- 18: I/f control with fixed current
- 19: U/f control with independent voltage setpoint
- 20: Speed control (encoderless)
- 21: Speed control (with encoder)
- 22: Torque control (encoderless)
- 23: Torque control (with encoder)

**Recommendation:** The use of the vector control operating modes is recommended for synchronous motors.

**Dependency:** Closed-loop speed or torque control (with encoder) cannot be selected if the encoder type is not entered (p0400).  
Closed-loop speed or torque control can be selected if the closed-loop speed/torque control was selected as operating mode (p0108.2).

Only operation with U/f characteristic is possible if the rated motor speed is not entered (p0311).

A reluctance motor (p0300 = 8) can only be operated in a U/f control mode (p1300 < 20), a synchronous-reluctance motor (p0300 = 6, 6xx) only in closed-loop speed/torque control.

Sensorless control on separately excited synchronous motors is only possible with a VSM module (see p0150, p0151).

For chassis power units with reduced line voltage (see r0212 bit 0), the drive can only be operated in a control mode (p1300 = 20...23) and with the DC link voltage control activated.

Refer to: p0108, r0108, p0212, p0300, p0311, p0400, p1501

**Notice:** Active slip compensation is required in the U/f control types with Eco mode (p1300 = 4, 7). The scaling of the slip compensation (p1335) should be set so that the slip is completely compensated (generally 100%).

The Eco mode is only effective in steady-state operation and when the ramp-function generator is not bypassed. In the case of analog setpoints, if required the tolerance for ramp-up and ramp-down should be actively increased for the ramp-function generator using p1148 in order to reliably signal a steady-state condition.

**Note:** The closed-loop torque control can only be changed over in operation (p1300 = 20, 21) by selecting the closed-loop speed control (p1501). At the changeover, the setting of p1300 does not change. In this case, the actual state is displayed in r1407, bit 2 and bit 3.

For the open-loop control modes p1300 = 5 and 6 (textile sector), slip compensation p1335, resonance damping p1338, and the I<sub>max</sub> frequency controller are switched off internally so that the output frequency can be set precisely. The I<sub>max</sub> voltage controller remains active.

For the open-loop control modes p1300 = 4 and 7 (Eco mode), the efficiency can be optimized by varying the voltage (when the operating point is constant).

Separately excited synchronous motors can only be operated in modes p1300 = 20, 21 and 23 - or for diagnostic purposes in modes p1300 = 0, 3 and 18. For I/f control (p1300 = 18), the current amplitude can be set using p1609. Both for U/f as well as for I/f control only a small load may be applied to the separately excited synchronous motor because the excitation current is not calculated as a function of the load.

During operation (pulses enabled) the open-loop/closed-loop control mode cannot be changed by changing over drive data sets.

p1300 is pre-assigned depending on r0108.2 and p0187.

<b>p1302[0...n]</b>		<b>U/f control configuration / U/f config</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -		
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 bin		
<b>Description:</b>	Sets the configuration for the U/f control.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Output voltage starting angle zero	Yes	No	-
	01	Take into account the setpoint voltage sign	Yes	No	-
	02	Reserved	-	-	-
	04	Field orientation	Yes	No	-
	06	Immediate setpoint transfer for pulse inhibit	Yes	No	-

**Note:** For bit 00:  
If the bit is set the device will always start up with setpoint angle zero on pulse enable. This also affects the setpoint angle for DC braking (p1231).  
For bit 01:  
If the bit is set, in the case of U/f control with independent voltage setpoint (p1300 = 19) and negative setpoint voltages at the input of p1330, the setpoint angle is rotated through 180 degrees, thereby achieving a negative output voltage. The voltage boost is in this case not active (p1310, p1311).  
For bit 02:  
Only for internal Siemens use.  
For bit 06:  
Only for p1300 = 19.  
When the bit is set, the setpoints from p1330 for pulse inhibit are transferred without any delay.

p1310[0...n]	Starting current (voltage boost) permanent / I_start (Ua) perm		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6300, 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	250.0 [%]	50.0 [%]
<b>Description:</b>	<p>Defines the voltage boost as a [%] referred to the rated motor current (p0305). The magnitude of the permanent voltage boost is reduced with increasing frequency so that at the rated motor frequency, the rated motor voltage is present. The magnitude of the boost in Volt at a frequency of zero is defined as follows: Voltage boost [V] = 1.732 x p0305 (rated motor current [A]) x r0395 (stator/primary section resistance [ohm]) x p1310 (permanent voltage boost [%]) / 100 % At low output frequencies, there is only a low output voltage in order to maintain the motor flux. However, the output voltage can be too low in order to achieve the following:</p> <ul style="list-style-type: none"> <li>- magnetize the induction motor.</li> <li>- hold the load.</li> <li>- compensate for losses in the system.</li> </ul> <p>This is the reason that the output voltage can be increased using p1310. The voltage boost can be used for both linear as well as square-law U/f characteristics.</p>		
<b>Dependency:</b>	<p>The starting current (voltage boost) is limited by the current limit p0640. The accuracy of the starting current depends on the setting of the stator and feeder cable resistance (p0350, p0352). Refer to: p1300, p1311, p1312, r1315</p>		
<b>Notice:</b>	The starting current (voltage boost) increases the motor temperature (particularly at zero speed).		
<b>Note:</b>	<p>The starting current as a result of the voltage boost is only effective for U/f control (p1300). The boost values are combined with one another if the permanent voltage boost (p1310) is used in conjunction with other boost parameters (acceleration boost (p1311), voltage boost for starting (p1312)). However, these parameters are assigned the following priorities: p1310 &gt; p1311, p1312</p>		

p1311[0...n]	Starting current (voltage boost) when accelerating / I_start accel		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6300, 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	250.0 [%]	0.0 [%]
<b>Description:</b>	<p>p1311 only results in a voltage boost when accelerating and generates a supplementary torque to accelerate the load. The voltage boost becomes effective for a positive setpoint increase and disappears as soon as the setpoint has been reached. The build-up and withdrawal of the voltage boost are smoothed. The magnitude of the boost in Volt at a frequency of zero is defined as follows: Voltage boost [V] = 1.732 * p0305 (rated motor current [A]) x r0395 (stator/primary section resistance [ohm]) x p1311 (voltage boost when accelerating [%]) / 100 %</p>		

## 2 Parameters

### 2.2 List of parameters

**Dependency:** The current limit p0640 limits the boost.  
Refer to: p1300, p1310, p1312, r1315

**Notice:** The voltage boost results in a higher motor temperature increase.

**Note:** The voltage boost when accelerating can improve the response to small, positive setpoint changes.  
Assigning priorities for the voltage boosts: refer to p1310

---

<b>p1312[0...n]</b>	<b>Starting current (voltage boost) when starting / I_start start</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6300, 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	250.0 [%]	0.0 [%]

**Description:** Setting for an additional voltage boost when powering-up, however, only for the first acceleration phase.  
The voltage boost becomes effective for a positive setpoint increase and disappears as soon as the setpoint has been reached. The build-up and withdrawal of the voltage boost are smoothed.

**Dependency:** The current limit p0640 limits the boost.  
Refer to: p1300, p1310, p1311, r1315

**Notice:** The voltage boost results in a higher motor temperature increase.

**Note:** The voltage boost when accelerating can improve the response to small, positive setpoint changes.  
Assigning priorities for the voltage boosts: refer to p1310

---

<b>r1315</b>	<b>Voltage boost total / U_boost total</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]

**Description:** Displays the total resulting voltage boost in volt.

**Dependency:** Refer to: p1310, p1311, p1312

---

<b>p1320[0...n]</b>	<b>U/f control programmable characteristic frequency 1 / Uf char f1</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Hz]	3000.00 [Hz]	0.00 [Hz]

**Description:** The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310.  
This parameter specifies the voltage of the first point along the characteristic.

**Dependency:** Selects the freely programmable characteristic using p1300 = 3.  
The following applies to the frequency values: p1320 <= p1322 <= p1324 <= p1326. Otherwise, a standard characteristic is used that contains the rated motor operating point.  
Refer to: p1300, p1310, p1311, p1321, p1322, p1323, p1324, p1325, p1326, p1327

**Note:** Linear interpolation is carried out between the points 0 Hz/p1310, p1320/p1321 ... p1326/p1327.  
The voltage boost when accelerating (p1311) is also applied to the freely programmable U/f characteristic.

<b>p1321[0...n]</b>	<b>U/f control programmable characteristic voltage 1 / Uf char U1</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [Vrms]	10000.0 [Vrms]	0.0 [Vrms]
<b>Description:</b>	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the voltage of the first point along the characteristic.		
<b>Dependency:</b>	Selects the freely programmable characteristic using p1300 = 3. Refer to: p1310, p1311, p1320, p1322, p1323, p1324, p1325, p1326, p1327		
<b>Note:</b>	Linear interpolation is carried out between the points 0 Hz/p1310, p1320/p1321 ... p1326/p1327. The voltage boost when accelerating (p1311) is also applied to the freely programmable U/f characteristic.		
<b>p1322[0...n]</b>	<b>U/f control programmable characteristic frequency 2 / Uf char f2</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Hz]	3000.00 [Hz]	0.00 [Hz]
<b>Description:</b>	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the voltage of the second point along the characteristic.		
<b>Dependency:</b>	The following applies to the frequency values: p1320 <= p1322 <= p1324 <= p1326. Otherwise, a standard characteristic is used that contains the rated motor operating point. Refer to: p1310, p1311, p1320, p1321, p1323, p1324, p1325, p1326, p1327		
<b>p1323[0...n]</b>	<b>U/f control programmable characteristic voltage 2 / Uf char U2</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [Vrms]	10000.0 [Vrms]	0.0 [Vrms]
<b>Description:</b>	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the voltage of the second point along the characteristic.		
<b>Dependency:</b>	Refer to: p1310, p1311, p1320, p1321, p1322, p1324, p1325, p1326, p1327		
<b>p1324[0...n]</b>	<b>U/f control programmable characteristic frequency 3 / Uf char f3</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Hz]	3000.00 [Hz]	0.00 [Hz]
<b>Description:</b>	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the voltage of the third point along the characteristic.		
<b>Dependency:</b>	The following applies to the frequency values: p1320 <= p1322 <= p1324 <= p1326. Otherwise, a standard characteristic is used that contains the rated motor operating point. Refer to: p1310, p1311, p1320, p1321, p1322, p1323, p1325, p1326, p1327		

<b>p1325[0...n]</b>	<b>U/f control programmable characteristic voltage 3 / Uf char U3</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [Vrms]	10000.0 [Vrms]	0.0 [Vrms]
<b>Description:</b>	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the voltage of the third point along the characteristic.		
<b>Dependency:</b>	Refer to: p1310, p1311, p1320, p1321, p1322, p1323, p1324, p1326, p1327		
<b>p1326[0...n]</b>	<b>U/f control programmable characteristic frequency 4 / Uf char f4</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Hz]	10000.00 [Hz]	0.00 [Hz]
<b>Description:</b>	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the frequency of the fourth point along the characteristic.		
<b>Dependency:</b>	Selects the freely programmable characteristic using p1300 = 3. The following applies for the frequency values: p1320 <= p1322 <= p1324 <= p1326 Otherwise, a standard characteristic is used that contains the rated motor operating point. Refer to: p1310, p1311, p1320, p1321, p1322, p1323, p1324, p1325, p1327		
<b>Note:</b>	Linear interpolation is carried out between the points 0 Hz/p1310, p1320/p1321 ... p1326/p1327. For output frequencies above p1326, the characteristic is extrapolated with the gradient between the characteristic points p1324/p1325 and p1326/p1327. The voltage boost when accelerating (p1311) is also applied to the freely programmable U/f characteristic.		
<b>p1327[0...n]</b>	<b>U/f control programmable characteristic voltage 4 / Uf char U4</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [Vrms]	10000.0 [Vrms]	0.0 [Vrms]
<b>Description:</b>	The programmable characteristic for the U/f control is defined using 4 points and 0 Hz/p1310. This parameter specifies the voltage of the fourth point along the characteristic.		
<b>Dependency:</b>	Selects the freely programmable characteristic using p1300 = 3. Refer to: p1310, p1311, p1320, p1321, p1322, p1323, p1324, p1325, p1326		
<b>Note:</b>	Linear interpolation is carried out between the points 0 Hz/p1310, p1320/p1321 ... p1326/p1327. The voltage boost when accelerating (p1311) is also applied to the freely programmable U/f characteristic.		

---

<b>p1330[0...n]</b>	<b>CI: U/f control independent voltage setpoint / Uf U_set independ.</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the voltage setpoint for U/f control with an independent voltage setpoint (p1300 = 19).		
<b>Dependency:</b>	Selects the U/f control with independent voltage setpoint via p1300 = 19. Refer to: p1300		

---

<b>p1331[0...n]</b>	<b>Voltage limiting / U_lim</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6300
	<b>P-Group:</b> -	<b>Unit group:</b> 5_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	50.00 [Vrms]	2000.00 [Vrms]	1000.00 [Vrms]
<b>Description:</b>	Limiting the voltage setpoint. This means that the output voltage can be reduced with respect to the calculated maximum voltage r0071 and the start of field weakening.		
<b>Note:</b>	The output voltage is only limited if, as a result of p1331, the maximum output voltage (r0071) is fallen below.		

---

<b>p1333[0...n]</b>	<b>U/f control FCC starting frequency / U/f FCC f_start</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Hz]	3000.00 [Hz]	0.00 [Hz]
<b>Description:</b>	Sets the starting frequency at which FCC (Flux Current Control) is activated.		
<b>Dependency:</b>	The correct operating mode must be set (p1300 = 1, 6).		
<b>Warning:</b>	An excessively low value can result in instability.		
			
<b>Note:</b>	For p1333 = 0 Hz, the FCC starting frequency is automatically set to 6 % of the rated motor frequency.		

---

<b>p1334[0...n]</b>	<b>U/f control slip compensation starting frequency / Slip comp start</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6310
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Hz]	3000.00 [Hz]	0.00 [Hz]
<b>Description:</b>	Sets the starting frequency of the slip compensation.		
<b>Note:</b>	For p1334 = 0, the starting frequency of the slip compensation is automatically set to 6 % of the rated motor frequency.		

<b>p1335[0...n]</b>	<b>Slip compensation scaling / Slip comp scal</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6300, 6310
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	600.0 [%]	0.0 [%]
<b>Description:</b>	Sets the setpoint for slip compensation in [%] referred to r0330 (motor rated slip). p1335 = 0.0 %: Slip compensation deactivated. p1335 = 100.0 %: The slip is completely compensated.		
<b>Dependency:</b>	Prerequisite for a precise slip compensation for p1335 = 100 % are the precise motor parameters (p0350 ... p0360). If the parameters are not precisely known, a precise compensation can be achieved by varying p1335. For U/f control types with Eco optimization (4 and 7), the slip compensation must be activated in order to guarantee correct operation.		
<b>Note:</b>	The purpose of slip compensation is to maintain a constant motor speed regardless of the applied load. The fact that the motor speed decreases with increasing load is a typical characteristic of induction motors. For synchronous motors, this effect does not occur and the parameter has no effect in this case. For the open-loop control modes p1300 = 5 and 6 (textile sector), the slip compensation is internally disabled in order to be able to precisely set the output frequency. If p1335 is changed during commissioning (p0009, p0010 > 0), then it is possible that the old value will no longer be able to be set. The reason for this is that the dynamic limits of p1335 have been changed by a parameter that was set when the drive was commissioned (e.g. p0300).		
<b>p1336[0...n]</b>	<b>Slip compensation limit value / Slip comp lim val</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6310
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	600.00 [%]	250.00 [%]
<b>Description:</b>	Sets the limit value for slip compensation in [%] referred to r0330 (motor rated slip).		
<b>r1337</b>	<b>CO: Actual slip compensation / Slip comp act val</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6310
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the actual compensated slip [%] referred to r0330 (rated motor slip).		
<b>Dependency:</b>	p1335 > 0 %: Slip compensation active. Refer to: p1335		
<b>p1338[0...n]</b>	<b>U/f mode resonance damping gain / Uf Res_damp gain</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6300, 6310
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	100.00	0.00
<b>Description:</b>	Sets the gain for resonance damping for U/f control.		
<b>Dependency:</b>	Refer to: p1300, p1339, p1349		

**Note:** The resonance damping function dampens active current oscillations that frequency occur under no-load conditions. The resonance damping is active in a range from approximately 6 % of the rated motor frequency (p0310). The shutoff frequency is determined by p1349.  
For the open-loop control modes p1300 = 5 and 6 (textile sectors), the resonance damping is internally disabled in order that the output frequency can be precisely set.

---

<b>p1339[0...n]</b>	<b>U/f mode resonance damping filter time constant / Uf Res_damp T</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6310
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1.00 [ms]	1000.00 [ms]	20.00 [ms]
<b>Description:</b>	Sets the filter time constant for resonance damping for U/f control.		
<b>Dependency:</b>	Refer to: p1300, p1338, p1349		

---

<b>p1340[0...n]</b>	<b>I_max frequency controller proportional gain / I_max_ctrl Kp</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6300
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	0.500	0.000
<b>Description:</b>	Sets the proportional gain of the I_max frequency controller. The I_max controller reduces the drive converter output current if the maximum current (r0067) is exceeded. In the U/f operating modes (p1300) for the I_max control, one controller is used that acts on the output frequency and one controller that acts on the output voltage. The frequency controller reduces the current by decreasing the converter output frequency. The frequency is reduced down to a minimum value (equaling twice rated slip). If the overcurrent condition cannot be successfully resolved using this measure, then the drive converter output voltage is reduced using the I_max voltage controller. Once the overcurrent condition has been resolved, the drive is accelerated along the ramp set in p1120 (ramp-up time).		
<b>Dependency:</b>	In the U/f modes (p1300) for textile applications and for external voltage setpoints, only the I_max voltage controller is used.		
<b>Notice:</b>	When deactivating the I_max controller, the following must be carefully observed: When the maximum current (r0067) is exceeded, the output current is no longer reduced. The drive is switched off when the overcurrent limits are exceeded.		
<b>Note:</b>	The I_max limiting controller becomes ineffective if the ramp-function generator is deactivated with p1122 = 1. p1341 = 0: I_max frequency controller deactivated and I_max voltage controller activated over the complete speed range.		

---

<b>p1341[0...n]</b>	<b>I_max frequency controller integral time / I_max_ctrl Tn</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6300
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	50.000 [s]	0.300 [s]
<b>Description:</b>	Sets the integral time for the I_max frequency controller.		
<b>Dependency:</b>	Refer to: p1340		
<b>Note:</b>	When p1341 = 0, the current limiting controller influencing the frequency is deactivated and only the current limiting controller influencing the output voltage remains active (p1345, p1346).		

<b>r1343</b>	<b>CO: I_max controller frequency output / I_max_ctrl f_outp</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6300
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the effective frequency limit.		
<b>Dependency:</b>	Refer to: p1340		
<b>r1344</b>	<b>I_max controller voltage output / I_max_ctrl U_outp</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6300
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> 5_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]
<b>Description:</b>	Displays the amount by which the converter output voltage is reduced.		
<b>Dependency:</b>	Refer to: p1340		
<b>p1345[0...n]</b>	<b>I_max voltage controller proportional gain / I_max_U_ctrl Kp</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6300, 7017
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	100000.000	0.000
<b>Description:</b>	Sets the proportional gain for the I_max voltage controller.		
<b>Dependency:</b>	Refer to: p1340		
<b>Note:</b>	The controller settings are also used in the current controller of the DC braking (refer to p1232).		
<b>p1346[0...n]</b>	<b>I_max voltage controller integral time / I_max_U_ctrl Tn</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6300, 7017
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	50.000 [s]	0.030 [s]
<b>Description:</b>	Sets the integral time for the I_max voltage controller.		
<b>Dependency:</b>	Refer to: p1340		
<b>Note:</b>	The controller settings are also used in the current controller of the DC braking (refer to p1232). For p1346 = 0, the following applies: The integral time of the I_max voltage controller is deactivated.		

<b>r1348</b>	<b>CO: U/f control Eco factor actual value / Uf Eco fac act v</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6300, 6301
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the economic factor determined for optimizing motor consumption.		
<b>Dependency:</b>	Refer to: p1335		
<b>Note:</b>	The value is only determined for operating modes with Economic (p1300 = 4, 7).		
<b>p1349[0...n]</b>	<b>U/f mode resonance damping maximum frequency / Uf res_damp f_max</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6310
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Hz]	3000.00 [Hz]	0.00 [Hz]
<b>Description:</b>	Sets the maximum output frequency for resonance damping for U/f control. Resonance damping is inactive above this output frequency.		
<b>Dependency:</b>	Refer to: p1338, p1339		
<b>Note:</b>	For p1349 = 0, the changeover limit is automatically set to 95 % of the rated motor frequency - however, to a max. of 45 Hz.		
<b>p1350[0...n]</b>	<b>U/f control soft start / U/f soft start</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6300
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets whether the voltage is continuously increased during the magnetizing phase (p1350 = 1, On) or whether it jumps directly to the voltage boost (p1350 = 0, Off).		
<b>Value:</b>	0: OFF 1: ON		
<b>Dependency:</b>	The function is not effective for p1300 = 15.		
<b>Note:</b>	The settings for this parameter have the following advantages and disadvantages: 0 = off (jump directly to voltage boost) Advantage: Flux is established quickly -> torque is quickly available Disadvantage: The motor can move while it is being magnetized 1 = on (voltage is continually established) Advantage: The motor is unlikely to rotate Disadvantage: The flux is established slower -> torque is available later		

<b>p1351[0...n]</b>	<b>CO: Motor holding brake starting frequency / Brake f_start</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6310
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-300.00 [%]	300.00 [%]	0.00 [%]
<b>Description:</b>	Sets the frequency setting value at the slip compensation output for starting up with motor holding brake.		
<b>Dependency:</b>	When setting p1351 > 0, then slip compensation is automatically activated (p1335 = 100 %).		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>Note:</b>	A value of 100% corresponds to the motor rated slip (r0330).		
<b>p1356[0...n]</b>	<b>CI: U/f control angular setpoint / Uf ang setpoint</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> -
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2005	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the differential angular generation for U/f control.		
<b>p1358[0...n]</b>	<b>Angular difference symmetrizing actual angle / Sym act angle</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the dead time for the symmetrizing of the actual angle value for the differential angular generation. The selected multiplier refers to the current controller clock cycle (dead time= p1358 * p0115[0]).		
<b>r1359</b>	<b>CO: Angular difference / Angular difference</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> V/f open-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2005	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°]	- [°]	- [°]
<b>Description:</b>	Displays the output of the differential angular generation.		
<b>Note:</b>	The difference between the setpoint angle, read-in in p1356 and the actual value of the U/f control delayed with p1358 is displayed.		

<b>p1360</b>	<b>Braking chopper braking resistor cold / Br_chop R cold</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> V/f open-loop control <b>Not for motor type:</b> - <b>Min</b> 0.000 [ohm]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 10.000 [ohm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000 [ohm]
<b>Description:</b>	Sets the braking resistor for the braking chopper.		
<b>Dependency:</b>	Select operation with braking resistor: p1300 = 15 Refer to: p1362, r1363, p1364 Refer to: A06921, F06922		
<b>p1362[0...1]</b>	<b>Braking chopper activation threshold / Br_chop thresh</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> V/f open-loop control <b>Not for motor type:</b> - <b>Min</b> 0 [V]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1158 [V]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> [0] 0 [V] [1] 60 [V]
<b>Description:</b>	Sets the activation threshold for the brake chopper. The hysteresis defines the range of the output voltage from zero up to the maximum voltage.		
<b>Index:</b>	[0] = Braking chopper threshold value [1] = Braking chopper hysteresis		
<b>Dependency:</b>	Select operation with braking resistor: p1300 = 15 Refer to: p1360, r1363, p1364 Refer to: A06921, F06922		
<b>r1363</b>	<b>CO: Braking chopper output voltage / Br_chop U_output</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [Vrms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 5_1 <b>Scaling:</b> p2001 <b>Max</b> - [Vrms]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Vrms]
<b>Description:</b>	Displays the actual power unit output voltage (Motor Module) in braking chopper operation.		
<b>Dependency:</b>	Select operation with braking resistor: p1300 = 15 Refer to: p1360, p1362, p1364 Refer to: A06921, F06922		
<b>p1364</b>	<b>Braking chopper resistor asymmetry / Br_chop R asym</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> V/f open-loop control <b>Not for motor type:</b> - <b>Min</b> 0.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> 100.00 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 25.00 [%]
<b>Description:</b>	Sets the percentage value for the asymmetry detection for the braking chopper. The ripple of the absolute current r0068 is monitored. The reference value is the average value of the absolute current. The minimum monitoring value is 10 % of the power unit rated current.		

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Select operation with braking resistor: p1300 = 15  
Refer to: p1360, p1362, r1363  
Refer to: F06922

**Note:** For p1364 = 0, asymmetry identification is deactivated.  
Asymmetry can also be displayed if the absolute current manifests ripple, caused by load-related ripple of the DC link voltage. In this particular case, p1364 must be increased.

---

**r1369[0]** **CO: Phase current actual value filtered / I\_ph act val filt**

VECTOR\_G **Can be changed:** - **Calculated:** - **Access level:** 3  
**Data type:** FloatingPoint32 **Dyn. index:** - **Func. diagram:** 6300  
**P-Group:** V/f open-loop control **Unit group:** 6\_5 **Unit selection:** p0505  
**Not for motor type:** - **Scaling:** p2002 **Expert list:** 1  
**Min** **Max** **Factory setting**  
- [A] - [A] - [A]

**Description:** Displays the measured actual phase currents as peak value.  
This value is averaged for the display in the speed controller sampling time (p0115[1]).

**Index:** [0] = Phase U

**Dependency:** The signal is only displayed in operating mode p1300 = 19 (U/f control with independent voltage setpoint) and is used to control DC currents (e.g. for excitation (field) controllers).

---

**p1381[0...n]** **U/f control modulation limit reduction / U/f mod\_max reduc**

VECTOR\_G **Can be changed:** U, T **Calculated:** - **Access level:** 3  
CALC\_MOD\_LIM\_REF  
**Data type:** FloatingPoint32 **Dyn. index:** DDS, p0180 **Func. diagram:** 6723  
**P-Group:** Modulation **Unit group:** - **Unit selection:** -  
**Not for motor type:** - **Scaling:** - **Expert list:** 1  
**Min** **Max** **Factory setting**  
0.0 [%] 40.0 [%] 0.0 [%]

**Description:** Reduction of the maximum modulation depth when compared to r0073 to reduce the maximum output voltage r0071.  
The maximum modulation depth is reduced no more than the ideal overcontrol limit of 100 %.

**Note:** If p1803 is increased for operation with closed-loop speed/torque control, then the modulation limit for operation with U/f control can in turn be reduced in order to avoid overcontrol and the associated current ripple.

---

**p1400[0...n]** **Speed control configuration / n\_ctrl config**

VECTOR\_G (n/M) **Can be changed:** U, T **Calculated:** - **Access level:** 2  
**Data type:** Unsigned32 **Dyn. index:** DDS, p0180 **Func. diagram:** 6490  
**P-Group:** Closed-loop control **Unit group:** - **Unit selection:** -  
**Not for motor type:** REL **Scaling:** - **Expert list:** 1  
**Min** **Max** **Factory setting**  
- - 0000 0000 0000 0000 1000  
0000 0010 0001 bin

**Description:** Sets the configuration for the closed-loop speed control.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Automatic Kp/Tn adaptation active	Yes	No	6040
01	Sensorless vector control freeze I comp	Yes	No	6040
02	Acceleration precontrol signal source	External (p1495)	Internal (n_set)	6031
03	Reference model speed setpoint I component	ON	OFF	6031
05	Kp/Tn adaptation active	Yes	No	6040
06	Free Tn adaptation active	Yes	No	6050
14	Torque pre-control	Always active	For n_ctrl enab	6060
15	Sensorless vector control speed pre-control	Yes	No	6030
16	I component for limiting	Enable	Hold	6030
18	Moment of inertia estimator active	Yes	No	6030
19	Anti-windup for integral component	Yes	No	6030
20	Acceleration model	ON	OFF	6031

22	Obtain moment of inertia estimator value for pulse inhibit	Yes	No	6030
23	Acceleration model (with speed encoder)	Yes	No	6030
24	Accelerated moment of inertia estimator active	Yes	No	6030
25	Acceleration torque instantaneous in the I/f mode	Yes	No	-

**Note:**

For bit 01:

When the bit is set, the I component of the speed controller is kept when changing into the open-loop controlled mode.

For bit 16:

When the bit is set, the integral component of the speed controller is only held if it reaches the torque limit.

For bit 19:

When this bit is set, speed overshoots when accelerating along the torque limit and for load surges are reduced. If the setpoint torque reaches the torque limit, then the integral component is set to the difference between the torque limit and P component.

For bits 20, 23:

The acceleration model for the speed setpoint is only active if p1496 is not zero. When the acceleration model and the ramp-function generator (p1145) are simultaneously activated, it is recommended that p1400 bit 16 is set (this allows the I component to run freely up to the torque limit).

For bit 24:

When the bit is set, assuming that the motor accelerates smoothly, the moment of inertia can be determined faster.

For bit 25:

When the bit is set, for high dynamic starting in the I/f mode, the acceleration precontrol torque smoothing only has a short minimum time (4 ms).

**p1401[0...n]****Flux control configuration / Flux ctrl config**

VECTOR\_G (n/M)

**Can be changed:** U, T**Calculated:** -**Access level:** 3**Data type:** Unsigned16**Dyn. index:** DDS, p0180**Func. diagram:** 6491**P-Group:** Closed-loop control**Unit group:** -**Unit selection:** -**Not for motor type:** REL**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

0000 0000 0000 1110 bin

**Description:**

Sets the configuration for flux setpoint control

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Flux setpoint soft starting active	Yes	No	6722, 6725
01	Flux setpoint differentiation active	Yes	No	6723, 6726
02	Flux build-up control active	Yes	No	6722, 6723, 6725, 6726
03	Flux characteristic load-dependent	Yes	No	6725
04	Flux controller (ASM with encoder)	Yes	No	-
05	Flux impression (ASM with encoder)	with model chngov	From 30 % n <sub>rated</sub>	-
06	Quick magnetizing	Yes	No	6722
07	Pre-control speed limitation	Yes	No	6640
08	Speed limiting controller	With M <sub>limits</sub>	With I <sub>limits</sub>	6640
09	Dynamic load-dependent flux boost	Yes	No	6790, 6823
10	Flux boost low speed	Yes	No	6790, 6823
13	Precontrol characteristic (PESM)	Yes	No	-

**Note:**

For bit 00 (only for induction motors):

Initially, the flux is only established with a low rate of rise when magnetizing the induction motor. The flux setpoint p1570 is reached again at the end of the magnetizing time p0346.

## 2 Parameters

### 2.2 List of parameters

For bit 01 (only for induction motors and separately excited synchronous motors):

The flux differentiation can be switched out if a significant ripple occurs in the field-generating current setpoint (r0075) when entering the field weakening range. However, this is not suitable for fast acceleration operations because then, the flux decays more slowly and the voltage limiting responds.

For bit 02 (only for induction motors):

The flux build-up control operates during the magnetizing phase p0346 of the induction motor. If it is switched out, a constant current setpoint is injected and the flux is built up corresponding to the rotor time constant. When quick magnetizing (p1401.6 = 1) is selected and when flux build-up control is de-energized alarm A07416 is displayed.

For bit 03:

Separately excited synchronous machine: flux characteristic is calculated as a function of the load.

Synchronous-reluctance motor (RESM): activation of the load-dependent optimum flux characteristic.

For bit 04 (only for induction motors with encoder):

The flux controller does not operate in the range of the current model and not in the range of the flux impression (refer to p1750.4).

For bit 05 (only for induction motors with encoder):

Extremely rugged control operation is possible by directly toggling between the current model and flux impression. We therefore recommend that, in addition, the time-controlled model change is switched in (p1750.4 = 1) or the model changeover limits are significantly increased (p1752 > 0.35 \* p0311; p1753 = 5 %).

For bit 06 (not for induction motors):

Magnetizing is carried out with the maximum current ( $0.9 * r0067 \leq p1603 * r0209$ ). Magnetization has been completed if the flux threshold value p1573 or the magnetizing time p0346 has been reached. With active identification of the stator resistance (see p0621) quick magnetizing is internally deactivated and alarm A07416 is displayed. During a flying restart of a rotating motor (see p1200) no quick magnetizing takes place.

For bit 07:

if the speed of the drive exceeds the effective speed limit of the speed limiting controller, the torque limit is reduced linearly to zero as the deviation becomes greater. This reduces the integral component of the speed controller and, in turn, the overshoot during load shedding (see also F07901 and p2162).

For bit 08:

The speed limiting controller sets the speed to maximum by opening the torque limits as far as the current limits (bit 8 = 0) or taking the torque limits into account (bit 8 = 1).

For bit 09:

Synchronous reluctance motor (RESM):

Dynamic increase in the flux setpoint when torque is quickly established.

For bit 10:

Synchronous reluctance motor (RESM):

For load-dependent optimum flux characteristic (p1401.3 = 1) the flux setpoint is increased at low speeds.

For bit 13:

PESM: activation of the load-dependent precontrol characteristic

p1402[0...n]	Closed-loop current control and motor model configuration / I_ctrl config			
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 0000 0000 0001 bin	
<b>Description:</b>	Sets the configuration for the closed-loop control and the motor model.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Speed-following error correction active	Yes	No
	02	Current controller adaptation active	Yes	No
	07	Taking into account slip for speed and frequency calculation	Yes	No
	08	Changeover current model/voltage model with speed setpoint	Yes	No
				<b>FP</b>
				-
				-
				-

10	d-current controller adaptation model-based	Yes	No	-
11	Ldiq/dt precontrol model at the voltage limit	Yes	No	-
12	q-current controller adaptation model-based	Yes	No	-
15	Current controller precontrol active for Vdc controller oper.	Yes	No	-

**Note:**

For bit 00:

When the bit is set, the speed following error is compensated that is obtained as a result of the smoothing time constant in p1441.

For bit 02:

The current controller adaptation (p0391 ... p0393) is only calculated when the bit is set.

For bit 07:

Only with encoderless control of separately excited synchronous motors.

For bit 08:

Only with encoderless control of separately excited synchronous motors.

For bit 11:

Model for the dynamic voltage precontrol Ldi/dt of the q current controller when reaching the voltage limit with the I component held (see p0500 = 4).

For bit 15:

For DC link voltage control (see function diagram 7960) the dynamic current controller precontrol is activated (scalable using p1702, p1703).

**r1406.4...15****CO/BO: Control word speed controller / STW n\_ctrl**

VECTOR\_G (n/M)

**Can be changed:** -**Calculated:** -**Access level:** 3**Data type:** Unsigned16**Dyn. index:** -**Func. diagram:** 2520**P-Group:** Closed-loop control**Unit group:** -**Unit selection:** -**Not for motor type:** REL**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Display and BICO output for the control word of the speed controller.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
04	Hold speed controller I component	Yes	No	6040
05	Set speed controller I component	Yes	No	6040
08	Travel to fixed stop	Yes	No	8012
11	Droop enable	Yes	No	6030
12	Torque control active	Yes	No	6060
15	Set speed adaptation controller I component	Yes	No	-

**r1407.0...27****CO/BO: Status word speed controller / ZSW n\_ctrl**

VECTOR\_G (n/M)

**Can be changed:** -**Calculated:** -**Access level:** 3**Data type:** Unsigned32**Dyn. index:** -**Func. diagram:** 2522**P-Group:** Closed-loop control**Unit group:** -**Unit selection:** -**Not for motor type:** REL**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Display and BICO output for the status word of the speed controller.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	U/f control active	Yes	No	-
01	Encoderless operation active	Yes	No	-
02	Torque control active	Yes	No	6030, 6060, 8010
03	Speed control active	Yes	No	6040
05	Speed controller I component frozen	Yes	No	6040
06	Speed controller I component set	Yes	No	6040
07	Torque limit reached	Yes	No	6060
08	Upper torque limit active	Yes	No	6060

## 2 Parameters

### 2.2 List of parameters

09	Lower torque limit active	Yes	No	6060
10	Droop enabled	Yes	No	6030
11	Speed setpoint limited	Yes	No	6030
12	Ramp-function generator set	Yes	No	-
13	Encoderless operation due to a fault	Yes	No	-
14	I/f control active	Yes	No	-
15	Torque limit reached (without pre-control)	Yes	No	6060
17	Speed limiting control active	Yes	No	6640
23	Acceleration model activated	Yes	No	-
24	Moment of inertia estimator active	Yes	No	-
25	Load estimate active	Yes	No	-
26	Moment of inertia estimator stabilized	Yes	No	-
27	Accelerated moment of inertia estimator active	Yes	No	-

#### r1408.0...15

#### CO/BO: Status word current controller / ZSW I\_ctrl

VECTOR\_G (n/M)

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned16

**Dyn. index:** -

**Func. diagram:** 2530

**P-Group:** Closed-loop control

**Unit group:** -

**Unit selection:** -

**Not for motor type:** REL

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

#### Description:

Display and BICO output for the status word of the current controller.

#### Bit field:

Bit	Signal name	1 signal	0 signal	FP
00	Current controller act	Active	Not active	-
01	Id control I component limiting	Active	Not active	6714
03	Voltage limiting	Active	Not active	6714
10	Speed adaptation limiting	Active	Not active	-
11	Speed adaptation speed deviation	Out tolerance	In tolerance	6719
12	Motor stalled	Yes	No	6719, 8020
13	Separately excited synchronous motor is excited	Yes	No	-
14	Current model SESM: magnetizing excitation current limited to 0	Yes	No	6726
15	Excitation current differential exceeded	Yes	No	6726

#### Note:

For bit 11:

For operation with speed encoder, this bit is set as a result of steps/jumps in the speed signal (see p0492) or due to deviations at the adaptation controller output (see p1744).

#### p1416[0...n]

#### Speed setpoint filter 1 time constant / n\_set\_filt 1 T

VECTOR\_G (n/M)

**Can be changed:** U, T

**Calculated:** -

**Access level:** 3

**Data type:** FloatingPoint32

**Dyn. index:** DDS, p0180

**Func. diagram:** 6020, 6030

**P-Group:** Closed-loop control

**Unit group:** -

**Unit selection:** -

**Not for motor type:** REL

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0.00 [ms]

5000.00 [ms]

0.00 [ms]

#### Description:

Sets the time constant for the speed setpoint filter 1 (PT1).

<b>p1428[0...n]</b>	<b>Speed pre-control balancing dead time / n_prectrBal t_dead</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6031
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0	3.0	0.0
<b>Description:</b>	Sets the dead time to symmetrize the speed setpoint for active torque pre-control. The selected multiplier refers to the sampling time of the speed controller (dead time= p1428 * p0115[1]).		
<b>Dependency:</b>	In conjunction with p1429, this parameter can emulate the characteristics of how the torque is established (dynamic response of closed current control loop). The parameter is only effective if the acceleration model is supplied using external acceleration signals (p1400.2 = 1). For p1400.2 = 0, a fixed dead time is used. Refer to: p1429, p1511		
<b>p1429[0...n]</b>	<b>Speed pre-control balancing time constant / n_prectr bal T</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5030, 5042, 5210, 6031
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	10000.00 [ms]	0.00 [ms]
<b>Description:</b>	Sets the time constant (PT1) for symmetrizing the speed setpoint for active torque pre-control.		
<b>Dependency:</b>	In conjunction with p1428, this parameter can emulate the characteristics of how torque is established (dynamic response of the closed current control loop). For VECTOR (r0107) the following applies: The parameter is only effective if the acceleration model is supplied using external acceleration signals (p1400.2 = 1). For p1400.2 = 0, time constant p1442 (or p1452 for sensorless vector control) is used. Refer to: p1428, p1511		
<b>r1431</b>	<b>CO: Speed pre-control to motor model / n_prectrl mot_mod</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6030
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the speed setpoint for pre-controlling the motor model with sensorless vector control.		
<b>Note:</b>	With p1400.15 = 0 or encoderless torque control, the pre-control signal is kept continuously in the range of the voltage model.		
<b>p1433[0...n]</b>	<b>Speed controller reference model natural frequency / n_ctrl RefMod fn</b>		
VECTOR_G (J_estimator, n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6031
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [Hz]	8000.0 [Hz]	0.0 [Hz]
<b>Description:</b>	Sets the natural frequency of a PT2 element for the reference model of the speed controller.		
<b>Recommendation:</b>	The reference model is correctly set when the characteristics of p1439 (reference model output) and p1445 (actual speed value) are virtually identical when the I component of the speed controller is disabled.		

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Together with p1434 and p1435, the characteristics (in the time domain) of the closed-loop speed control (P) can be emulated.  
For VECTOR (r0107) the following applies:  
The reference model is activated with p1400.3 = 1. For sensorless vector control (p1300 = 20) the reference model is disabled in open-loop speed controlled operation (refer to p1755).  
Refer to: p1434, p1435

---

<b>p1434[0...n]</b>	<b>Speed controller reference model damping / n_ctrl RefMod D</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5030, 6031
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	5.000	1.000
<b>Description:</b>	Sets the damping of a PT2 element for the reference model of the speed controller.		
<b>Recommendation:</b>	The reference model is correctly set when the characteristics of p1439 (reference model output) and p1445 (actual speed value) are virtually identical when the I component of the speed controller is disabled.		
<b>Dependency:</b>	In conjunction with p1433 and p1435, the characteristics (in time) of the P-controlled speed control loop can be emulated. For VECTOR (r0107) the following applies: The reference model is activated with p1400.3 = 1. Refer to: p1433, p1435		

---

<b>p1435[0...n]</b>	<b>Speed controller reference model dead time / n_ctrRefMod t_dead</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5030, 6031
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	3.00	0.00
<b>Description:</b>	Sets the "fractional" dead time for the reference model of the speed controller. This parameter emulates the computing dead time of the proportionally controlled speed control loop. The selected multiplier refers to the speed controller clock cycle (dead time= p1435 * p0115[1]).		
<b>Recommendation:</b>	The reference model is correctly set when the characteristics of p1439 (reference model output) and p1445 (actual speed value) are virtually identical when the I component of the speed controller is disabled.		
<b>Dependency:</b>	In conjunction with p1433 and p1434, the characteristics (in time) of the P-controlled speed control loop can be emulated. For VECTOR (r0107) the following applies: The reference model is activated with p1400.3 = 1. Refer to: p0115, p1433, p1434		

---

<b>r1436</b>	<b>CO: Speed controller reference model speed setpoint output / RefMod n_set outp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5030, 6031
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Display and connector output for the speed setpoint at the output of the reference model.		
<b>Dependency:</b>	For VECTOR (r0107) the following applies: The reference model is activated with p1400.3 = 1.		

<b>p1437[0...n]</b>	<b>CI: Speed controller reference model I component input / n_ctrRefMod I_comp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6031
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1436[0]
<b>Description:</b>	Sets the signal source for speed setpoint for the integral component of the speed controller.		
<b>Dependency:</b>	The reference model is activated with p1400.3 = 1. Refer to: p1400		
<b>Notice:</b>	It should be ensured that a speed setpoint is selected as signal source that corresponds to the setpoint for the P component of the speed controller.		
<b>r1438</b>	<b>CO: Speed controller speed setpoint / n_ctrl n_set</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3001, 5019, 5030, 5042, 5210, 6020, 6031
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Display and connector output of the speed setpoint after setpoint limiting for the P component of the speed controller. For U/f operation, the value that is displayed is of no relevance.		
<b>Dependency:</b>	Refer to: r1439		
<b>Note:</b>	In the standard state (the reference model is deactivated), r1438 = r1439.		
<b>r1439</b>	<b>Speed setpoint I component / n_set I_comp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5030, 5040, 6031
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the speed setpoint for the I component of the speed controller (output of the reference model after the setpoint limiting).		
<b>Dependency:</b>	Refer to: r1438		
<b>Note:</b>	In the standard state (the reference model is deactivated), r1438 = r1439.		
<b>p1440[0...n]</b>	<b>CI: Speed controller speed actual value input / n_ctrl n_act</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6040
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	63[0]
<b>Description:</b>	Sets the signal source for the speed actual value of the speed controller.		
<b>Dependency:</b>	Refer to: r1443		
<b>Danger:</b>	When using external speed actual values for the speed controller, for a direction of rotation change via p1821 = 1, then its polarity must also be changed (e.g. for an encoder DO via p0410). Otherwise, a positive coupling can occur in the speed control loop and the drive would then be accelerated up to the speed limit.		
			

## 2 Parameters

### 2.2 List of parameters

**Caution:**



Speed control with encoder (p1300 = 21):

For the speed or position signal of the motor model there must always be a motor encoder available (evaluation via SMC/SMI, see p0400). The actual speed of the motor (r0061) and the position data for synchronous motors continue to come from this motor encoder and are not affected by the setting of p1440.

Interconnection of p1440:

If connector input p1440 is interconnected with an external speed actual value, the identical scaling of the speed should be observed (p2000).

**Notice:**

Speed control without encoder (p1300 = 20):

Dependent upon the transmission path of the external speed signal there will be dead times which have to be taken into account when setting the speed controller parameters (p1470, p1472) and can lead to dynamic losses accordingly. It is for this reason that signal transmission times have to be kept as low as possible.

So that the speed controller can also work at standstill, set p1750.2 = 1 (closed-loop operation from zero speed for passive loads). If you do not make this setting, operation will switch to open-loop speed control in the low speed range, switching the closed-loop speed controller off and rendering the measured actual speed ineffective.

**Note:**

Speed control with encoder (p1300 = 21):

An external speed signal should, on the average, correspond to the speed of the motor encoder (r0061).

#### p1441[0...n]

#### Actual speed smoothing time / n\_act T\_smooth

VECTOR\_G (n/M)

**Can be changed:** U, T

**Calculated:** -

**Access level:** 3

**Data type:** FloatingPoint32

**Dyn. index:** DDS, p0180

**Func. diagram:** 4710, 4715

**P-Group:** Closed-loop control

**Unit group:** -

**Unit selection:** -

**Not for motor type:** REL

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0.00 [ms]

1000.00 [ms]

0.00 [ms]

**Description:**

Sets the smoothing time constant (PT1) for the speed actual value.

**Dependency:**

Refer to: r0063

**Notice:**

Smoothing times above 20 ms are only possible if the drive is accelerated or braked with the appropriately long ramp-up/ramp-down times. Otherwise, significant torque errors can occur and there is the danger that the drive is switched off (tripped) with F07902 (motor stalled).

**Note:**

The speed actual value should be smoothed for encoders with a low pulse number or for resolvers.

After this parameter has been changed, we recommend that the speed controller is adapted and/or the speed controller settings checked Kp (p1460) and Tn (p1462).

#### p1442[0...n]

#### Speed controller speed actual value smoothing time / n\_ctr n\_act T\_smth

VECTOR\_G (n/M)

**Can be changed:** U, T

**Calculated:** CALC\_MOD\_ALL

**Access level:** 2

**Data type:** FloatingPoint32

**Dyn. index:** DDS, p0180

**Func. diagram:** 6020, 6040

**P-Group:** Closed-loop control

**Unit group:** -

**Unit selection:** -

**Not for motor type:** REL

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0.00 [ms]

32000.00 [ms]

4.00 [ms]

**Description:**

Sets the smoothing time for the actual speed value of the speed controller for closed-loop control with encoder.

**Note:**

The smoothing must be increased if there is gear backlash. For longer smoothing times, the integral time of the speed controller must also be increased (e.g. using p0340 = 4).

#### r1443

#### CO: Speed controller speed actual value at actual value input / n\_ctrl n\_act inp

VECTOR\_G (n/M)

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** FloatingPoint32

**Dyn. index:** -

**Func. diagram:** 6040

**P-Group:** Closed-loop control

**Unit group:** 3\_1

**Unit selection:** p0505

**Not for motor type:** REL

**Scaling:** p2000

**Expert list:** 1

**Min**

**Max**

**Factory setting**

- [rpm]

- [rpm]

- [rpm]

**Description:**

Displays the speed actual value at the speed controller's free-wiring actual value input p1440.

**Dependency:**

Refer to: p1440

**Note:**

This speed signal is only used by the speed controller and not by the motor model.

<b>r1444</b>	<b>Speed controller speed setpoint steady-state (static) / n_ctrl n_set stat</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5030
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the sum of all speed setpoints that are present. The following sources are available for the displayed setpoint: - setpoint at the ramp-function generator input (r1119). - speed setpoint 1 (p1155). - speed setpoint 2 (p1160). - speed setpoint for the speed pre-control (p1430). - setpoint from DSC (for DSC active). - setpoint via PC (for master control active).		
<b>Dependency:</b>	Refer to: r1119, p1155, p1160		
<b>r1445</b>	<b>CO: Actual speed smoothed / n_act smooth</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6040
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Display and connector output for the actual smoothed speed actual value of the speed control.		
<b>p1451[0...n]</b>	<b>Motor model speed actual value smoothing time sensorless / Mot_mod n_act t_sm</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	1000 [ms]	4 [ms]
<b>Description:</b>	Sets the smoothing time for the speed actual value calculated by the motor model in sensorless operation.		
<b>p1452[0...n]</b>	<b>Speed controller speed actual value smoothing time (sensorless) / n_C n_act T_s SL</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6020, 6040
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	32000.00 [ms]	10.00 [ms]
<b>Description:</b>	Sets the smoothing time for the actual speed of the speed controller for encoderless closed-loop speed control.		
<b>Note:</b>	The smoothing must be increased if there is gear backlash. For longer smoothing times, the integral time of the speed controller must also be increased (e.g. using p0340 = 4).		

## 2 Parameters

### 2.2 List of parameters

<b>r1454</b>	<b>CO: Speed controller system deviation I component / n_ctrl sys dev Tn</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6040
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Display and connector output for the system deviation of the I component of the speed controller. When the reference model is inactive (p1433 = 0 Hz), this parameter corresponds to the system deviation of the complete PI controller (r1454 = r0064).		
<b>p1455[0...n]</b>	<b>CI: Speed controller P gain adaptation signal / n_ctr adapt_sig Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6050
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the source for the adaptation signal to additionally adapt the P gain of the speed controller.		
<b>Dependency:</b>	Refer to: p1456, p1457, p1458, p1459		
<b>p1456[0...n]</b>	<b>Speed controller P gain adaptation lower starting point / n_ctrl AdaptKpLow</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6050
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	400.00 [%]	0.00 [%]
<b>Description:</b>	Sets the lower starting point of the adaptation range for the additional adaptation of the P gain of the speed controller. The values are in % and refer to the set source of the adaptation signal.		
<b>Dependency:</b>	Refer to: p1455, p1457, p1458, p1459		
<b>Note:</b>	If the upper transition point p1457 of the speed controller adaptation is set to lower values than the lower transition p1456, then the controller gain below p1457 is adapted with p1459 and above p1456, with p1458.		
<b>p1457[0...n]</b>	<b>Speed controller P gain adaptation upper starting point / n_ctrl AdaptKp up</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6050
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	400.00 [%]	0.00 [%]
<b>Description:</b>	Sets the upper starting point of the adaptation range for the additional adaptation of the P gain of the speed controller. The values are in % and refer to the set source of the adaptation signal.		
<b>Dependency:</b>	Refer to: p1455, p1456, p1458, p1459		
<b>Note:</b>	If the upper transition point p1457 of the speed controller adaptation is set to lower values than the lower transition p1456, then the controller gain below p1457 is adapted with p1459 and above p1456, with p1458.		

<b>p1458[0...n]</b>	<b>Adaptation factor lower / Adapt_factor lower</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6050
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	200000.0 [%]	100.0 [%]
<b>Description:</b>	Sets the adaptation factor before the adaptation range (0 % ... p1456) to additionally adapt the P gain of the speed/velocity controller.		
<b>Dependency:</b>	Refer to: p1455, p1456, p1457, p1459		
<b>Note:</b>	If the upper transition point p1457 of the speed controller adaptation is set to lower values than the lower transition p1456, then the controller gain below p1457 is adapted with p1459 and above p1456, with p1458.		
<b>p1459[0...n]</b>	<b>Adaptation factor upper / Adapt_factor upper</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6050
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	200000.0 [%]	100.0 [%]
<b>Description:</b>	Sets the adaptation factor after the adaptation range (> p1457) to additionally adapt the P gain of the speed/velocity controller.		
<b>Dependency:</b>	Refer to: p1455, p1456, p1457, p1458		
<b>Note:</b>	If the upper transition point p1457 of the speed controller adaptation is set to lower values than the lower transition p1456, then the controller gain below p1457 is adapted with p1459 and above p1456, with p1458.		
<b>p1460[0...n]</b>	<b>Speed controller P gain adaptation speed lower / n_ctrl Kp n lower</b>		
VECTOR_G (J_estimator, n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6020, 6040
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	999999.000	0.300
<b>Description:</b>	Sets the P gain of the speed controller before the adaptation speed range (0 ... p1464). This value corresponds to the basic setting of the P gain of the speed controller without adaptation (p1461 = 100 %).		
<b>Dependency:</b>	For p0528 = 1, the speed controller gain is represented without any dimensions. Refer to: p1461, p1464, p1465		
<b>p1461[0...n]</b>	<b>Speed controller Kp adaptation speed upper scaling / n_ctr Kp n up scal</b>		
VECTOR_G (J_estimator, n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6050
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	200000.0 [%]	100.0 [%]
<b>Description:</b>	Sets the P gain of the speed controller for the upper adaptation speed range (> p1465). The entry is made referred to the P gain for the lower adaptation speed range of the speed controller (% referred to p1460).		
<b>Dependency:</b>	Refer to: p1460, p1464, p1465		
<b>Note:</b>	If the upper transition point p1465 of the speed controller adaptation is set to lower values than the lower transition p1464, then the controller gain below p1465 is adapted with p1461. This means that an adaptation can be implemented for low speeds without having to change the controller parameters.		

## 2 Parameters

### 2.2 List of parameters

<b>p1462[0...n]</b>	<b>Speed controller integral time adaptation speed lower / n_ctrl Tn n lower</b>		
VECTOR_G (J_estimator, n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180	<b>Access level:</b> 2 <b>Func. diagram:</b> 5040, 5042, 6020, 6040
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> 0.00 [ms]	<b>Max</b> 100000.00 [ms]	<b>Factory setting</b> 20.00 [ms]
<b>Description:</b>	Sets the integration time of the speed controller before the adaptation speed range (0 ... p1464). This value corresponds to the basic setting of the integral time of the speed controller without adaptation (p1461 = 100 %).		
<b>Dependency:</b>	Refer to: p1463, p1464, p1465		
<b>Note:</b>	The integral component is stopped if the complete controller output or the sum of controller output and torque pre-control reach the torque limit.		
<b>p1463[0...n]</b>	<b>Speed controller Tn adaptation speed upper scaling / n_ctr Tn n up scal</b>		
VECTOR_G (J_estimator, n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180	<b>Access level:</b> 3 <b>Func. diagram:</b> 6050
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> 0.0 [%]	<b>Max</b> 200000.0 [%]	<b>Factory setting</b> 100.0 [%]
<b>Description:</b>	Sets the integral time of the speed controller after the adaptation speed range (> p1465). The entry is made referred to the integral time for the lower adaptation speed range of the speed controller (% referred to p1462).		
<b>Dependency:</b>	Refer to: p1462, p1464, p1465		
<b>Note:</b>	If the upper transition point p1465 of the speed controller adaptation is set to lower values than the lower transition point p1464, then the controller integral time below p1465 is adapted with p1463. This means that an adaptation can be implemented for low speeds without having to change the controller parameters.		
<b>p1464[0...n]</b>	<b>Speed controller adaptation speed lower / n_ctrl n lower</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180	<b>Access level:</b> 3 <b>Func. diagram:</b> 6050
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL	<b>Unit group:</b> 3_1 <b>Scaling:</b> -	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> 0.00 [rpm]	<b>Max</b> 210000.00 [rpm]	<b>Factory setting</b> 0.00 [rpm]
<b>Description:</b>	Sets the lower adaptation speed of the speed controller. No adaptation is effective below this speed.		
<b>Dependency:</b>	The parameter is set by the speed controller optimization. Adaptation to the application should then be subsequently made. Refer to: p1460, p1461, p1462, p1463, p1465		
<b>Note:</b>	If the upper transition point p1465 of the speed controller adaptation is set to lower values than the lower transition point p1464, then the controller below p1465 is adapted with p1461 or p1463. This means that an adaptation can be implemented for low speeds without having to change the controller parameters.		

<b>p1465[0...n]</b>	<b>Speed controller adaptation speed upper / n_ctrl n upper</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> 0.00 [rpm]	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 3_1 <b>Scaling:</b> - <b>Max</b> 210000.00 [rpm]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6050 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 210000.00 [rpm]
<b>Description:</b>	Sets the upper adaptation speed of the speed controller. No adaptation is effective above this speed. For the proportional gain, p1460 x p1461 is effective. For the integral time, p1462 x p1463 is effective.		
<b>Dependency:</b>	The parameter is set by the speed controller optimization. Adaptation to the application should then be subsequently made. Refer to: p1460, p1461, p1462, p1463, p1464		
<b>Note:</b>	If the upper transition point p1465 of the speed controller adaptation is set to lower values than the lower transition point p1464, then the controller below p1465 is adapted with p1461 or p1463. This means that an adaptation can be implemented for low speeds without having to change the controller parameters.		
<b>p1466[0...n]</b>	<b>CI: Speed controller P-gain scaling / n_ctrl Kp scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 / FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170 <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 6050 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the signal source for the scaling of the P gain of the speed controller. This also makes the effective P gain (including adaptations) scalable.		
<b>r1468</b>	<b>CO: Speed controller P-gain effective / n_ctr Kp eff</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 6040 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the effective P gain of the speed controller.		
<b>Dependency:</b>	For p0528 = 1, the speed controller gain is represented without any dimensions. In this case, connector output signal r1468 is increased by a factor of 100 in order to improve the resolution.		
<b>r1469</b>	<b>Speed controller integral time effective / n_ctr Tn eff</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> - [ms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 5040, 5042, 6040 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [ms]
<b>Description:</b>	Displays the effective integral time of the speed controller.		

## 2 Parameters

### 2.2 List of parameters

<b>p1470[0...n]</b>	<b>Speed controller encoderless operation P-gain / n_ctrl SL Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6040, 6050
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	999999.000	0.300
<b>Description:</b>	Sets the P gain for encoderless operation for the speed controller.		
<b>Dependency:</b>	For p0528 = 1, the speed controller gain is represented without any dimensions.		
<b>Note:</b>	The product p0341 x p0342 is taken into account when automatically calculating the speed controller (p0340 = 1, 3, 4).		

<b>p1472[0...n]</b>	<b>Speed controller encoderless operation integral time / n_ctrl SL Tn</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6040, 6050
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [ms]	100000.0 [ms]	20.0 [ms]
<b>Description:</b>	Set the integral time for encoderless operation for the speed controller.		
<b>Note:</b>	The integral component is stopped if the complete controller output or the sum of controller output and torque pre-control reach the torque limit.		

<b>p1475[0...n]</b>	<b>CI: Speed controller torque setting value for motor holding brake / n_ctrl M_sv MHB</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6040
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the torque setting value when starting up with motor holding brake.		
<b>Recommendation:</b>	To hold the actual torque when stopping the motor, you are advised to set p1400 bit 1 = 1. As a result, the integral component of the speed controller is frozen when changing to the open-loop controlled operating range.		
<b>Dependency:</b>	The switching in of the torque setting value for the motor holding brake has a higher priority than the setting of the integrator value using p1477 and p1478.		
<b>Note:</b>	The setting of the integral output of the speed controller begins after magnetizing (see p0346, r0056 bit 4) and ends at the end of the brake control opening time p1216. A setting value of zero means that no setting procedure will take place.		

<b>p1476[0...n]</b>	<b>BI: Speed controller hold integrator / n_ctrl integ stop</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2520, 5040, 5042, 5210, 6040
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to hold the integrator for the speed controller.		

<b>p1477[0...n]</b>			
<b>VECTOR_G (n/M)</b>	<b>BI: Speed controller set integrator value / n_ctrl integ set</b>		
	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2520, 5040, 5042, 5210, 6040
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to set the integrator setting value (p1478).		
<b>Dependency:</b>	Refer to: p1478, p1479		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	For the interface mode "SIMODRIVE 611 universal" (p2038 = 1), p1477 and p1478 are used for the signal STW2.6 (integrator inhibit, speed controller).		

<b>p1478[0...n]</b>			
<b>VECTOR_G (n/M)</b>	<b>CI: Speed controller integrator setting value / n_ctr integ_setVal</b>		
	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6040
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the integrator setting value for the velocity controller. The signal to set this integrator setting value is interconnected via p1477.		
<b>Dependency:</b>	The setting value of the speed controller integrator is weighted with the scaling factor of the signal source in p1479. If p1478 is interconnected to the integral output of the speed controller (r1482), then after the magnetizing time (r0346) and if the speed controller is enabled, the integral component of the controller is set to the last value before the pulse inhibit. This value is set if no setting command (p1477) is interconnected or, at the instant that the pulses were inhibited, a setting command is available, which is not deactivated up to the next time that the pulses are inhibited. For sensorless vector control, in addition p1400.1 should be set to 1 so that when the drive is stopped, the integral component of the speed controller is not controlled down to zero. In order that when setting the integrator output, only the static torque is detected, we recommend that the accelerating torque is completely pre-controlled (e.g. p1496). If p1478 is interconnected to another output other than r1482, then after magnetizing and speed controller enable, the integral output is set once if the setting command is not interconnected (p1477 = 0). Refer to: p1477, p1479		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		

<b>p1479[0...n]</b>			
<b>VECTOR_G (n/M)</b>	<b>CI: Speed controller integrator setting value scaling / n_ctrl I_val scal</b>		
	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6040
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for scaling the integrator setting value (p1478) of the speed controller.		
<b>Dependency:</b>	Refer to: p1477, p1478		

## 2 Parameters

### 2.2 List of parameters

---

<b>r1480</b>	<b>CO: Speed controller PI torque output / n_ctrl PI-M_outp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> - [Nm]	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> 7_1 <b>Scaling:</b> p2003 <b>Max</b> - [Nm]	<b>Access level:</b> 3 <b>Func. diagram:</b> 5019, 5040, 5042, 5060, 5210, 6060 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Nm]
<b>Description:</b>	Display and connector output for the torque setpoint at the output of the PI speed controller.		
<hr/>			
<b>r1481</b>	<b>CO: Speed controller P torque output / n_ctrl P-M_outp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> - [Nm]	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> 7_1 <b>Scaling:</b> p2003 <b>Max</b> - [Nm]	<b>Access level:</b> 3 <b>Func. diagram:</b> 5040, 5042, 5210, 6040 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Nm]
<b>Description:</b>	Display and connector output for the torque setpoint at the output of the P speed controller.		
<hr/>			
<b>r1482</b>	<b>CO: Speed controller I torque output / n_ctrl I-M_outp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> - [Nm]	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> 7_1 <b>Scaling:</b> p2003 <b>Max</b> - [Nm]	<b>Access level:</b> 3 <b>Func. diagram:</b> 5040, 5042, 5210, 6030, 6040 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Nm]
<b>Description:</b>	Display and connector output for the torque setpoint at the output of the I speed controller.		
<hr/>			
<b>p1486[0...n]</b>	<b>CI: Droop compensation torque / Droop M_comp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 / FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170 <b>Unit group:</b> - <b>Scaling:</b> p2003 <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 6030 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the signal source for the compensation torque to be output within the droop calculation. This parameter should be interconnected with the torque setpoint of the drive (corresponding to the selection p1488), with which load equalization should be performed.		
<hr/>			
<b>p1487[0...n]</b>	<b>Droop compensation torque scaling / Droop M_comp scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> -2000.0 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> 2000.0 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6030 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 100.0 [%]
<b>Description:</b>	Sets the scaling for the compensation torque within the droop calculation.		

<b>p1488[0...n]</b>	<b>Droop input source / Droop input source</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6030
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0
<b>Description:</b>	Sets the source for droop feedback. With increasing torque, the speed setpoint is reduced (enabled using p1492), so that for mechanically coupled drives a load equalization (load compensation) is obtained. A load difference compensation is also possible, if p1486 is interconnected with the torque setpoint of the other drive.		
<b>Value:</b>	0: Droop feedback not connected 1: Droop from torque setpoint 2: Droop from speed controller output 3: Droop from integral output speed controller		
<b>Dependency:</b>	Refer to: p1486, p1487, p1489, r1490, p1492		
<b>Caution:</b>	For active acceleration precontrol of the speed controller (refer to p1496), it is not recommended that p1488 is set to 1, as this could result in positive coupling effects. Instead of this, as source of the droop feedback, the output signal of the speed controller should be used, which generally sets the load torque.		
			
<b>p1489[0...n]</b>	<b>Droop feedback scaling / Droop scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6030
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	0.500	0.050
<b>Description:</b>	Sets the scaling for the droop feedback		
<b>Dependency:</b>	Refer to: p1486, p1487, p1488, r1490, p1492		
<b>Note:</b>	Example: A value of 0.05 means that for a torque equal to the rated motor torque, the rated motor speed is reduced by 5 %.		
<b>r1490</b>	<b>CO: Droop feedback speed reduction / Droop n_reduction</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6030
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the output signal of the droop calculation. The droop feedback result is subtracted from the speed setpoint when activated (p1492).		
<b>Dependency:</b>	Refer to: p1486, p1487, p1488, p1489, p1492		
<b>p1492[0...n]</b>	<b>BI: Droop feedback enable / Droop enable</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2520, 6030
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Enables the droop to be applied to the speed/velocity setpoint.		
<b>Dependency:</b>	Refer to: p1486, p1487, p1488, p1489, r1490		

## 2 Parameters

### 2.2 List of parameters

**Note:** Even when not enabled, the droop speed is calculated but not subtracted from the setpoint speed. This makes it possible to subtract the result of this calculation from the speed of another drive.

---

<b>r1493</b>	<b>CO: Moment of inertia total, scaled / M_inert tot scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6031
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 25_1	<b>Unit selection:</b> p0100
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [kgm <sup>2</sup> ]	- [kgm <sup>2</sup> ]	- [kgm <sup>2</sup> ]

**Description:** Display and connector output for the parameterized total moment of inertia.  
The value is calculated as follows: (p0341 \* p0342) + p1496  
The scaling is not take into account using p1497.

---

<b>p1495[0...n]</b>	<b>CI: Acceleration pre-control / a_prectrl</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6031
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2007	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for the acceleration pre-control.

**Dependency:** The signal source for the acceleration is activated with p1400.2 = 1.  
For p1400.2 = 0, the acceleration pre-control is calculated from the speed setpoint change from r0062.  
For p1400.2 = 0 and activate reference model (p1400.3 = 1) the acceleration pre-control is switched out.  
Refer to: p1400, p1496

**Note:** If the acceleration is entered as external signal, then the accelerating torque is calculated as follows (r1518):  
 $r1518 = \text{acceleration (\% of p2007)} / 100 \% * (p2007 * 60 \text{ s}) / p0311 * r0345 / 1 \text{ s} * r0333$

---

<b>p1496[0...n]</b>	<b>Acceleration pre-control scaling / a_prectrl scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6020, 6031
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	10000.0 [%]	0.0 [%]

**Description:** Sets the scaling for the acceleration pre-control of the speed/velocity controller.

**Dependency:** When the reference model is activated (p1400.3 = 1) and for an internal acceleration pre-control (p1400.2 = 0), the acceleration pre-control is switched out (disabled). The reference model (p1400.3 = 1) and external acceleration pre-control (p1400.2 = 1) can be operated together.

Refer to: p0341, p0342

**Warning:**  The acceleration precontrol r1518 is kept at the old value if the ramp-function generator tracking (r1199.5) is active or the ramp-function generator output is set (r1199.3). This is used to avoid torque peaks. Depending on the application, it may therefore be necessary to disable the ramp-function generator tracking (p1145 = 0) or the acceleration precontrol (p1496 = 0).

The acceleration precontrol is set to zero, if the Vdc control is active (r0056.14/15).

**Note:** The parameter is set to 100% by the rotating measurement (refer to p1960).

The acceleration pre-control may not be used if the speed setpoint manifests significant ripple (e.g. analog setpoint) and the rounding-off in the speed ramp-function generator is disabled.

We also recommend that the pre-control mode is not used if there is gearbox backlash.

<b>p1497[0...n]</b>	<b>CI: Moment of inertia scaling signal source / M_inert scal s_src</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / FloatingPoint32  <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170  <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 5042, 5210, 6030, 6031 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the signal source for scaling the motor moment of inertia.		
<b>p1498[0...n]</b>	<b>Load moment of inertia / Load M_inertia</b>		
VECTOR_G (J_estimator, n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> 0.00000 [kgm <sup>2</sup> ]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 25_1 <b>Scaling:</b> - <b>Max</b> 100000.00000 [kgm <sup>2</sup> ]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6031 <b>Unit selection:</b> p0100 <b>Expert list:</b> 1 <b>Factory setting</b> 0.00000 [kgm <sup>2</sup> ]
<b>Description:</b>	Sets the load moment of inertia.		
<b>Note:</b>	(p0341 * p0342) + p1498 influence the speed/torque pre-control in encoderless operation.		
<b>p1499[0...n]</b>	<b>Accelerating for torque control scaling / a for M_ctrl scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> 0.0 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 400.0 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6030 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 100.0 [%]
<b>Description:</b>	Sets the scaling for the acceleration integrator at low speeds (only for encoderless torque control).		
<b>Dependency:</b>	Refer to: p0341, p0342		
<b>p1500[0...n]</b>	<b>Macro Connector Inputs (CI) for torque setpoints / Macro CI M_set</b>		
VECTOR_G	<b>Can be changed:</b> C2(1), T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Commands <b>Not for motor type:</b> REL <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 999999	<b>Access level:</b> 1 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Runs the corresponding macro files. The Connector Inputs (CI) for the torque setpoints of the appropriate Command Data Set (CDS) are appropriately interconnected. The selected macro file must be available on the memory card/device memory. Example: p1500 = 6 --> the macro file PM000006.ACX is run.		
<b>Dependency:</b>	Refer to: p0015, p0700, p1000, r8573		
<b>Notice:</b>	No errors were issued during quick commissioning (p3900 = 1) when writing to parameters of the QUICK_IBN group! When executing a specific macro, the corresponding programmed settings are made and become active.		
<b>Note:</b>	The macros in the specified directory are displayed in r8573. r8573 is not in the expert list of the commissioning software. Macros available as standard are described in the technical documentation of the particular product. CI: Connector Input		

## 2 Parameters

### 2.2 List of parameters

---

<b>p1501[0...n]</b>	<b>BI: Change over between closed-loop speed/torque control / Changeov n/M_ctrl</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2520, 6020
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for toggling between speed and torque control. 0 signal: Closed-loop speed control 1 signal: Closed-loop torque control		
<b>Dependency:</b>	The input connectors to enter the torque are provided using p1511, p1512 and p1513. Refer to: p1300		
<b>Notice:</b>	If the closed-loop torque control is not activated (p1300) and a change is made to closed-loop torque control (p1501), OFF1 (p0840) does not have its own braking response but pulse suppression when standstill is detected (p1226, p1227).		
<b>Note:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		

---

<b>p1502[0...n]</b>	<b>BI: Freeze moment of inertia estimator / J_estim freeze</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to freeze the estimated moment of inertia. 0 signal: Moment of inertia estimator active 1 signal: Determined moment of inertia frozen.		
<b>Dependency:</b>	Refer to: p1300		
<b>Note:</b>	Only active when the "moment of inertia estimator" function module is active (r0108.10 = 1) and p1400.18 = 1. For operation with encoder, p1400.23 must also be set to 1.		

---

<b>p1503[0...n]</b>	<b>CI: Torque setpoint / M_set</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6020, 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the torque setpoint for torque control.		
<b>Note:</b>	A change is made to closed-loop torque control if, in p1300, closed-loop torque control was selected or if the selection was made using the changeover source in p1501. it is also possible to change over in operation using p1501.		

---

<b>r1508</b>	<b>CO: Torque setpoint before supplementary torque / M_set bef. M_suppl</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6030, 6060, 6722
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Nm]	- [Nm]	- [Nm]
<b>Description:</b>	Displays the torque setpoint before entering the supplementary torque. For closed-loop speed control, r1508 corresponds to the speed controller output; for closed-loop torque control, r1508 corresponds to the torque setpoint of the signal source assigned in p1503.		

---

<b>p1511[0...n]</b>	<b>CI: Supplementary torque 1 / M_suppl 1</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6020, 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for supplementary torque 1.		

---

<b>p1512[0...n]</b>	<b>CI: Supplementary torque 1 scaling / M_suppl 1 scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 5060, 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for scaling the supplementary torque 1.		

---

<b>p1513[0...n]</b>	<b>CI: Supplementary torque 2 / M_suppl 2</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6020, 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for supplementary torque 2.		

---

<b>p1514[0...n]</b>	<b>Supplementary torque 2 scaling / M_suppl 2 scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6020, 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2000.0 [%]	2000.0 [%]	100.0 [%]
<b>Description:</b>	Sets the scaling for supplementary torque 2.		

<b>r1515</b>	<b>Supplementary torque total / M_suppl total</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6020, 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Nm]	- [Nm]	- [Nm]
<b>Description:</b>	Displays the total supplementary torque. The displayed value is the total of supplementary torque values 1 and 2 (p1511, p1512, p1513, p1514).		
<b>r1516</b>	<b>CO: Supplementary torque and acceleration torque / M_suppl + M_accel</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Nm]	- [Nm]	- [Nm]
<b>Description:</b>	Displays the total supplementary torque and the accelerating torque. The displayed value is the total of the smoothed supplementary torque and the accelerating torque (p1516 = p1518[1] + r1515).		
<b>p1517[0...n]</b>	<b>Accelerating torque smoothing time constant / M_accel T_smooth</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5042, 5210, 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	100.00 [ms]	4.00 [ms]
<b>Description:</b>	Sets the smoothing time constant of the accelerating torque.		
<b>Note:</b>	For servo drives, the following applies: - For p1402.4 = 1, the highest dynamic performance is achieved with p1517 = 0 ms. - in encoderless operation, p1517 should be set >= 0.5 ms; for an induction motor with current displacement rotor p1517 >= 20 ms is recommended. For vector drives, the following applies: - the acceleration pre-control is inhibited if the smoothing is set to the maximum value.		
<b>r1518[0...1]</b>	<b>CO: Accelerating torque / M_accel</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Nm]	- [Nm]	- [Nm]
<b>Description:</b>	Displays the accelerating torque for pre-control of the speed controller.		
<b>Index:</b>	[0] = Unsmoothed [1] = Smoothed		
<b>Dependency:</b>	Refer to: p0341, p0342, p1496		

<b>p1520[0...n]</b>		<b>CO: Torque limit upper / M_max upper</b>	
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6020, 6630
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b> -1000000.00 [Nm]	<b>Max</b> 20000000.00 [Nm]	<b>Factory setting</b> 0.00 [Nm]
<b>Description:</b>	Sets the fixed, upper torque limit.		
<b>Dependency:</b>	Refer to: p1521, p1522, p1523, r1538, r1539		
<b>Danger:</b>	Negative values when setting the upper torque limit (p1520 < 0) can result in the motor accelerating in an uncontrollable fashion.		
			
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>Note:</b>	The torque limit is limited to 400% of the rated motor torque. When automatically calculating the motor/closed-loop control parameters (p0340), the torque limit is set to match the current limit (p0640).		

<b>p1521[0...n]</b>		<b>CO: Torque limit lower / M_max lower</b>	
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6020, 6630
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b> -20000000.00 [Nm]	<b>Max</b> 1000000.00 [Nm]	<b>Factory setting</b> 0.00 [Nm]
<b>Description:</b>	Sets the fixed, lower torque limit.		
<b>Dependency:</b>	Refer to: p1520, p1522, p1523		
<b>Danger:</b>	Positive values when setting the lower torque limit (p1521 > 0) can result in the motor accelerating in an uncontrollable fashion.		
			
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>Note:</b>	The torque limit is limited to 400% of the rated motor torque. When automatically calculating the motor/closed-loop control parameters (p0340), the torque limit is set to match the current limit (p0640).		

<b>p1522[0...n]</b>		<b>CI: Torque limit upper / M_max upper</b>	
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6630
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b> -	<b>Max</b> -	<b>Factory setting</b> 1520[0]
<b>Description:</b>	Sets the signal source for the upper torque limit.		
<b>Dependency:</b>	Refer to: p1520, p1521, p1523		
<b>Danger:</b>	Negative values resulting from the signal source and scaling can cause the motor to accelerate in an uncontrolled manner.		
			

## 2 Parameters

### 2.2 List of parameters

---

<b>p1523[0...n]</b>	<b>CI: Torque limit lower / M_max lower</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6020, 6630
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1521[0]
<b>Description:</b>	Sets the signal source for the lower torque limit.		
<b>Dependency:</b>	Refer to: p1520, p1521, p1522		
<b>Danger:</b>	Positive values resulting from the signal source and scaling can cause the motor to accelerate in an uncontrolled manner.		




---

<b>p1524[0...n]</b>	<b>CO: Torque limit upper scaling / M_max upper scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6630
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2000.0 [%]	2000.0 [%]	100.0 [%]
<b>Description:</b>	Sets the scaling for the upper torque limit.		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>Note:</b>	This parameter can be freely interconnected. The value has the meaning stated above if it is interconnected from connector input p1528.		

---

<b>p1525[0...n]</b>	<b>CO: Torque limit lower scaling / M_max lower scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6630
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2000.0 [%]	2000.0 [%]	100.0 [%]
<b>Description:</b>	Sets the scaling for the lower torque limit.		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>Note:</b>	This parameter can be freely interconnected. The value has the meaning stated above if it is interconnected from connector input p1528.		

---

<b>r1526</b>	<b>CO: Total upper torque limit / M_max upper total</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6060, 6630, 6640
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Nm]	- [Nm]	- [Nm]
<b>Description:</b>	Display and connector output for the upper torque limit of all torque limits.		
<b>Dependency:</b>	Refer to: p1520, p1521, p1522, p1523, p1528, p1529		

<b>r1527</b>	<b>CO: Total lower torque limit / M_max lower total</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 6060, 6630, 6640
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL	<b>Unit group:</b> 7_1 <b>Scaling:</b> p2003	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> - [Nm]	<b>Max</b> - [Nm]	<b>Factory setting</b> - [Nm]
<b>Description:</b>	Display and connector output for the lower torque limit of all torque limits.		
<b>Dependency:</b>	Refer to: p1520, p1521, p1522, p1523, p1528, p1529		
<b>p1528[0...n]</b>	<b>CI: Torque limit upper scaling / M_max upper scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170	<b>Access level:</b> 3 <b>Func. diagram:</b> 6630
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL	<b>Unit group:</b> - <b>Scaling:</b> PERCENT	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> -	<b>Max</b> -	<b>Factory setting</b> 1524[0]
<b>Description:</b>	Sets the signal source for the scaling of the upper torque limit in p1522.		
<b>Danger:</b>	For p1400.4 = 0 (torque limiting, upper/lower) the following applies: Negative values resulting from the signal source and scaling can cause the motor to accelerate in an uncontrolled manner.		
			
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>p1529[0...n]</b>	<b>CI: Torque limit lower scaling / M_max lower scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170	<b>Access level:</b> 3 <b>Func. diagram:</b> 6630
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL	<b>Unit group:</b> - <b>Scaling:</b> PERCENT	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> -	<b>Max</b> -	<b>Factory setting</b> 1525[0]
<b>Description:</b>	Sets the signal source for the scaling of the lower torque limit in p1523.		
<b>Danger:</b>	For p1400.4 = 0 (torque limiting, upper/lower) the following applies: Positive values resulting from the signal source and scaling can cause the motor to accelerate in an uncontrolled manner.		
			
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>p1530[0...n]</b>	<b>Power limit motoring / P_max mot</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> CALC_MOD_LIM_REF <b>Dyn. index:</b> DDS, p0180	<b>Access level:</b> 2 <b>Func. diagram:</b> 6640
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL	<b>Unit group:</b> 14_5 <b>Scaling:</b> -	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> 0.00 [kW]	<b>Max</b> 100000.00 [kW]	<b>Factory setting</b> 0.00 [kW]
<b>Description:</b>	Sets the power limit when motoring.		
<b>Dependency:</b>	Refer to: p0500, p1531		
<b>Note:</b>	The power limit is limited to 300% of the rated motor power.		

## 2 Parameters

### 2.2 List of parameters

<b>p1531[0...n]</b>	<b>Power limit regenerative / P_max gen</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6640
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 14_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> -100000.00 [kW]	<b>Max</b> -0.01 [kW]	<b>Factory setting</b> -0.01 [kW]
<b>Description:</b>	Sets the regenerative power limit.		
<b>Dependency:</b>	Refer to: p0500, p1530		
<b>Note:</b>	The power limit is limited to 300% of the rated motor power. For power units without regenerative feedback into the line supply, the regenerative power limit is pre-set to 30% of the motoring power limit p1530 and in the ratio rated drive converter power to rated motor power. If a braking resistor is connected to the DC link, then the power limit can be correspondingly increased.		
<b>r1533</b>	<b>Current limit torque-generating total / Iq_max total</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6640
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b> - [Arms]	<b>Max</b> - [Arms]	<b>Factory setting</b> - [Arms]
<b>Description:</b>	Displays the maximum torque/force generating current as a result if all current limits.		
<b>r1536[0...1]</b>	<b>Current limit maximum torque-generating current / Isq_max</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6640, 6710
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b> - [Arms]	<b>Max</b> - [Arms]	<b>Factory setting</b> - [Arms]
<b>Description:</b>	Displays the maximum limit for the torque-generating current component. Index 0 indicates the signal limited by the Vdc controller.		
<b>Index:</b>	[0] = Limited [1] = Unlimited		
<b>r1537[0...1]</b>	<b>Current limit minimum torque-generating current / Isq_min</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6640, 6710
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b> - [Arms]	<b>Max</b> - [Arms]	<b>Factory setting</b> - [Arms]
<b>Description:</b>	Displays the minimum limit for the torque-generating current component. Index 0 indicates the signal limited by the Vdc controller.		
<b>Index:</b>	[0] = Limited [1] = Unlimited		

<b>r1538</b>	<b>CO: Upper effective torque limit / M_max upper eff</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6020, 6640
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Nm]	- [Nm]	- [Nm]
<b>Description:</b>	Display and connector output for the actual effective upper torque limit.		
<b>Note:</b>	The effective upper torque limit is reduced with respect to the selected upper torque limit p1520, if the current limit p0640 is reduced or the rated magnetizing current of the induction motor p0320 is increased. The torque limit p1520 can be re-calculated using p0340 = 1, 3 or 5. This torque limit can be influenced by p0543. The following applies for VECTOR: - this is possibly the case for a rotating measurement (see p1960). - additional variable torque limiting is possible (e.g. binector input p1540).		
<b>r1539</b>	<b>CO: Lower effective torque limit / M_max lower eff</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6020, 6640
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Nm]	- [Nm]	- [Nm]
<b>Description:</b>	Display and connector output for the actual effective lower torque limit.		
<b>Note:</b>	The effective lower torque limit is reduced with respect to the selected lower torque limit p1521, if the current limit p0640 is reduced or the rated magnetizing current of the induction motor p0320 is increased. The following applies in the case of VECTOR: This may be the case for rotating measurements (see p1960). The following applies in the case of VECTOR: Further variable torque limiting is possible (e.g. binector input p1541). The torque limit p1520 can be re-calculated using p0340 = 1, 3 or 5. This torque limit can be influenced by p0543.		
<b>p1540[0...n]</b>	<b>CI: Torque limit speed controller upper scaling / M_max n-ctr upScal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6020, 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for the scaling of the upper torque limiting to limit the speed controller output.		
<b>p1541[0...n]</b>	<b>CI: Torque limit. speed controller lower scaling / M_max nctr lowScal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6020, 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for the scaling of the lower torque limiting to limit the speed controller output.		

## 2 Parameters

### 2.2 List of parameters

<b>p1545[0...n]</b>	<b>BI: Activates travel to a fixed stop / TfS activation</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2520, 3617, 8012
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to activate/deactivate the "travel to fixed stop" function 1: Travel to fixed stop is active 0: Travel to fixed stop is inactive		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	EPOS uses the parameter (refer to p2686). When traveling to fixed stop, the fault F07900 "motor blocked" is suppressed.		
<b>r1547[0...1]</b>	<b>CO: Torque limit for speed controller output / M_max outp n_ctrl</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Nm]	- [Nm]	- [Nm]
<b>Description:</b>	Displays the torque limit to limit the speed controller output.		
<b>Index:</b>	[0] = Upper limit [1] = Lower limit		
<b>r1548[0...1]</b>	<b>CO: Stall current limit torque-generating maximum / Isq_max stall</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the limit for the torque-generating current component using the stall calculation, the current limit of the Motor Module as well as the parameterization in p0640.		
<b>Index:</b>	[0] = Upper limit [1] = Lower limit		
<b>p1551[0...n]</b>	<b>BI: Torque limit variable/fixed signal source / M_lim var/fixS_src</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 5620, 5630, 6060, 6630
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source to change over the torque limits between variable and fixed torque limit. BI: p1551 = 1 signal: The variable torque limit applies (fixed torque limit + scaling). BI: p1551 = 0 signal: The fixed torque limit applies.		

Example:

In order that for a Quick Stop (OFF3) the fixed torque limit is effective, binector input: p1551 must be interconnected to r0899.5.

---

<b>p1552[0...n]</b>	<b>CI: Torque limit upper scaling without offset / M_max up w/o offs</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

**Description:** Sets the signal source for the scaling of the upper torque limiting to limit the speed controller output without taking into account the current and power limits.

---

<b>p1553[0...n]</b>	<b>Stall limit scaling / Stall limit scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	80.0 [%]	130.0 [%]	100.0 [%]

**Description:** Sets the scaling of the stall limit for the start of field weakening.

**Danger:** If the stall current limit is increased, then the q current setpoint can exceed the stall limit; as a consequence, a hysteresis effect can occur when loading and unloading.




---

<b>p1554[0...n]</b>	<b>CI: Torque limit lower scaling without offset / M_max low w/o offs</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6060
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

**Description:** Sets the signal source for the scaling of the lower torque limiting to limit the speed controller output without taking into account the current and power limits.

---

<b>p1555[0...n]</b>	<b>CI: Power limit / P_max</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6640
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> r2004	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

**Description:** Sets the signal source for the motoring and negative regenerative power limit.

**Dependency:** Refer to: p1530, p1531

**Note:** The resulting motoring power limit is the minimum from p1530 and the signal which is read in.

The resulting regenerative power limit is the maximum from p1531 and the negative signal which is read in.

## 2 Parameters

### 2.2 List of parameters

<b>p1556[0...n]</b>	<b>Power limit scaling / P_max scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6640
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	340.28235E36	0.00
<b>Description:</b>	Sets the scaling of the signal source for the motoring and negative regenerative power limit. 0 signifies no power limiting.		
<b>p1560[0...n]</b>	<b>Moment of inertia estimator accelerating torque threshold value / J_est M thresh</b>		
VECTOR_G (J_estimator)	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.10 [%]	100.00 [%]	10.00 [%]
<b>Description:</b>	Sets the threshold for the accelerating torque for the moment of inertia estimator. The moment of inertia estimator is active above this threshold. The value is referred to the rated torque (r0333).		
<b>Dependency:</b>	Refer to: p1400, p1561, p1562		
<b>Note:</b>	The moment of inertia estimation is inaccurate at very low accelerating torques. As a consequence, below this threshold, the estimator does not provide any new values.		
<b>p1561[0...n]</b>	<b>Moment of inertia estimator change time moment of inertia / J_est t J</b>		
VECTOR_G (J_estimator)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.00 [ms]	5000.00 [ms]	500.00 [ms]
<b>Description:</b>	Sets the change time for the moment of inertia for the moment of inertia estimator. Lower values mean that faster changes are possible. For a higher value, this estimated value is smoothed more significantly.		
<b>Dependency:</b>	Refer to: p1400, p1560, p1562		
<b>p1562[0...n]</b>	<b>Moment of inertia estimator change time load / J_est t load</b>		
VECTOR_G (J_estimator)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	5.00 [ms]	5000.00 [ms]	10.00 [ms]
<b>Description:</b>	Sets the change time for the load torque for the moment of inertia estimator. Lower values mean that faster changes are possible. For a higher value, this estimated value is smoothed more significantly.		
<b>Dependency:</b>	Refer to: p1400, p1560, p1561		

<b>p1563[0...n]</b>	<b>CO: Mom. of inertia estimator load torque direction of rotation pos. / J_est M pos</b>		
VECTOR_G (J_estimator)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> -340.28235E36 [Nm]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> p2003 <b>Max</b> 340.28235E36 [Nm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [Nm]
<b>Description:</b>	Display and connector output for the monitored load torque in the positive direction of rotation. The moment of inertia estimator estimates the load torque drawn while the speed is constant.		
<b>Dependency:</b>	Refer to: p1400, p1560, p1561		
<b>p1564[0...n]</b>	<b>CO: Mom. of inertia estimator load torque direction of rotation neg. / J_est M neg</b>		
VECTOR_G (J_estimator)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> -340.28235E36 [Nm]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> p2003 <b>Max</b> 340.28235E36 [Nm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [Nm]
<b>Description:</b>	Display and connector output for the monitored load torque in the negative direction of rotation. The moment of inertia estimator estimates the load torque drawn while the speed is constant.		
<b>Dependency:</b>	Refer to: p1400, p1560, p1561		
<b>r1566[0...n]</b>	<b>Flux reduction torque factor transition value / Flux red M trans</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, SESM, REL <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> - [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6790 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	The following applies for a synchronous reluctance motor: Displays the transition value for the start of the evaluation of the optimum flux characteristic. The value is referred to the rated motor torque.		
<b>Note:</b>	The transition value corresponds with the lower limit of the flux setpoint (p1581). For a lower absolute torque setpoint, the flux setpoint remains at the lower limit (p1581).		
<b>p1567[0...n]</b>	<b>Magnetization rate time scaling / Mag Tv scale</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, SESM, REL <b>Min</b> 0 [%]	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000 [%]	<b>Access level:</b> 4 <b>Func. diagram:</b> 6790 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 100 [%]
<b>Description:</b>	The following applies for a synchronous reluctance motor: Sets the scaling of the rate time Tv for dynamic flux increase when the torque is quickly established. The value is referred to the inverse value of the rated motor frequency. Tv = p1567 / 100 % / p0310		
<b>Dependency:</b>	Refer to: p1401		
<b>Note:</b>	The "Dynamic load-dependent flux boost" function can be deactivated using p1401.9 = 0.		

<b>r1568[0...5]</b>	<b>CO: Synchronous reluctance motor flux channel / RESM flux channel</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, SESM, REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Display and connector output for signals of the flux channel for a synchronous reluctance motor (RESM). The values are referred to the rated motor flux of the in-line axis (p0357 * r0331).		
<b>Index:</b>	[0] = Setpoint before filter [1] = Optimum flux characteristic output [2] = Minimum value at low speed [3] = Dynamic load-dependent boost [4] = Field weakening value total [5] = Field weakening value precontrol		
<b>Note:</b>	RESM: reluctance synchronous motor (synchronous reluctance motor)		
<b>p1569[0...n]</b>	<b>CI: Supplementary torque 3 / M_suppl 3</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	3841[0]
<b>Description:</b>	Sets the signal source for supplementary torque 3.		
<b>Dependency:</b>	Refer to: p3842		
<b>Notice:</b>	The signal input is after the torque limit (r1538, r1539). For vector drives, the signals that are entered are only limited by the current and power limits.		
<b>Note:</b>	The signal input is preferably used to enter the friction characteristic. The friction compensation is also effective if the speed controller output reaches its torque limits, but the current limits have still not been reached (this only applies to vector drives).		
<b>p1570[0...n]</b>	<b>CO: Flux setpoint / Flex setp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6722
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	50.0 [%]	200.0 [%]	100.0 [%]
<b>Description:</b>	Sets the flux setpoint referred to rated motor flux. The following applies for a synchronous reluctance motor: Scaling the flux setpoint.		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>Note:</b>	For p1570 > 100%, the flux setpoint increases as a function of the load from 100% (no-load operation) to the setting in p1570 (above rated motor torque), if p1580 > 0% has been set. The following applies for a synchronous reluctance motor: The scaling allows the flux setpoint to be adapted when operating with load-dependent optimum flux characteristic or with constant flux setpoint.		

<b>p1571[0...n]</b>	<b>CI: Supplementary flux setpoint / Suppl flux setp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 6725
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the supplementary flux setpoint.		
<b>Notice:</b>	Low flux setpoints can cause the drive to stall at higher loads. This is the reason that the flux setpoint should only be adapted for slow load changes.		
<b>Note:</b>	The supplementary flux setpoint is limited to +/- 50 %.		
<b>p1572[0...n]</b>	<b>Supplementary flux setpoint / Suppl flux setp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6726
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	100.0 [%]	0.0 [%]
<b>Description:</b>	Sets the supplementary flux setpoint for the flux controller. The value is referred to the rated motor flux.		
<b>Notice:</b>	The parameter should be set back to 0% again for normal closed-loop control operation.		
<b>Note:</b>	The parameter is used to optimize the flux controller. The current model is not influenced by the setting.		
<b>p1573[0...n]</b>	<b>Flux threshold value magnetizing / Flux thresh magnet</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6722
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.0 [%]	200.0 [%]	100.0 [%]
<b>Description:</b>	Sets the flux threshold value for enabling the speed setpoint and the end of magnetizing (r0056.4).		
<b>Note:</b>	The parameter only has an influence if the flux actual value reaches the threshold value p1573 more quickly during magnetizing than the time set in p0346. This is generally the case when selecting fast magnetization (p1401.6). The parameter has no influence for flying restart (see p1200) and after DC braking (see p1231).		
<b>p1574[0...n]</b>	<b>Voltage reserve dynamic / U_reserve dyn</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6723, 6724
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 5_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [Vrms]	150.0 [Vrms]	10.0 [Vrms]
<b>Description:</b>	Sets a dynamic voltage reserve.		
<b>Note:</b>	In the field weakening range, it must be expected that the control dynamic performance is somewhat restricted due to the limited possibilities of controlling/adjusting the voltage. This can be improved by increasing the voltage reserve. Increasing the reserve reduces the steady-state maximum output voltage (r0071).		

## 2 Parameters

### 2.2 List of parameters

---

<b>p1575[0...n]</b>	<b>Voltage target value limit / U_tgt val lim</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6725
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	50.00 [%]	300.00 [%]	200.00 [%]
<b>Description:</b>	Sets the limit of the voltage target value. In steady-state field weakening operation this corresponds to the required output voltage. The value of 100% refers to p0304.		
<b>Note:</b>	The output voltage is only limited if the maximum output voltage (r0071) minus the voltage reserve (p1574) corresponds to a value higher than p1575. Limiting via p1575 allows the influence of the voltage ripple of the line supply voltage to be eliminated at the operating point.		

---

<b>p1576[0...n]</b>	<b>Flux boost adaptation speed, lower / Flux boost n lower</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6725
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	0.00 [rpm]
<b>Description:</b>	Sets the lower adaptation speed of the flux boost. Below this speed, p1570 is set as reference (setpoint) flux.		

---

<b>p1577[0...n]</b>	<b>Flux boost adaptation speed upper / Flux boost n upper</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6725
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1.0 [%]	10000.0 [%]	200.0 [%]
<b>Description:</b>	Sets the upper adaptation speed of the flux boost. Above this speed, the rated motor flux (100 %) is set as reference (setpoint) flux.		
<b>Dependency:</b>	The parameter value refers to the lower adaptation speed of the flux boost. Refer to: p1576		

---

<b>p1578[0...n]</b>	<b>Flux reduction flux decrease smoothing time / Flux red dec t_sm</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6791
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	20 [ms]	5000 [ms]	200 [ms]
<b>Description:</b>	Sets the smoothing time for the flux setpoint when decreasing the flux due to flux reduction (p1581 < 100 %).		
<b>Dependency:</b>	Refer to: p1579		

<b>p1579[0...n]</b>	<b>Flux reduction flux build-up smoothing time / Flux red up t_sm</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6791
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	5000 [ms]	4 [ms]
<b>Description:</b>	Sets the smoothing time for the flux setpoint for the flux build-up due to flux reduction (p1581 < 100 %).		
<b>Dependency:</b>	Refer to: p1578		
<b>Note:</b>	An excessively long smoothing time extends the time until the maximum torque is reached from the no-load phase.		
<b>p1580[0...n]</b>	<b>Efficiency optimization / Efficiency opt.</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6722
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [%]	100 [%]	0 [%]
<b>Description:</b>	Sets the efficiency optimization. When optimizing the efficiency, the flux setpoint of the closed-loop control is adapted as a function of the load. For p1580 = 100 %, under no-load operating conditions, the flux setpoint is reduced to 50 % of the rated motor flux.		
<b>Note:</b>	It only makes sense to activate this function if the dynamic response requirements of the speed controller are low. In order to avoid oscillations, if required, the speed controller parameters should be adapted (increase Tn, reduce Kp). Further, the smoothing time of the flux setpoint filter (p1582) should be increased.		
<b>p1581[0...n]</b>	<b>Flux reduction factor / Flux red factor</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [%]	100 [%]	100 [%]
<b>Description:</b>	Sets the factor to which the flux is reduced under no-load conditions. For a value of 100%, the flux reduction is switched out. This parameter refers to the flux saved in the field weakening characteristic. By reducing the flux, the losses in induction motors can be reduced under no-load conditions or at low torques. However, the time it takes to reach the maximum torque is extended.		
<b>Recommendation:</b>	For induction motors with closed rotor slots, we recommend that the integral time of the current controller (p1717) is e.g. increased to three times the value. For stable operation, the maximum field-weakening factor in operation with an encoder must be less than 16 and in operation without an encoder must be less than 4. Lower field weakening factors are recommended. The field weakening factor is calculated as follows: $(p1082 * 100 \% * 600 \text{ V}) / (p0348 * p1581 * p0070)$ In order to reduce losses due to magnetizing and de-magnetizing, we recommend that the smoothing times are adapted for flux decrease (p1578) and flux build-up (p1579). In order to reduce the losses as a result of building-up and reducing the torque, we recommend that the torque setpoint is smoothed (current setpoint filter (p1656 ...) or speed actual value filter (p1441)).		

## 2 Parameters

### 2.2 List of parameters

**Note:** It only makes sense to activate this function if there are low dynamic requirements placed on the speed controller and there are frequent phases with a low load.  
In order to avoid oscillations, if required, the speed controller parameters should be adapted (decrease Kp (p1460, p1470), increase Tn (p1462, p1472)).  
When used without an encoder, flux reduction is not possible for induction motors with closed rotor slots.

---

<b>p1582[0...n]</b>	<b>Flux setpoint smoothing time / Flux setp T_smth</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> 4 [ms]	<b>Calculated:</b> CALC_MOD_REG <b>Dyn. index:</b> DDS, p0180  <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 5000 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6722, 6724, 6725 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 15 [ms]
<b>Description:</b>	Sets the smoothing time for the flux setpoint.		

---

<b>r1583</b>	<b>Flux setpoint smoothed / Flux setp smooth</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> - [%]	<b>Access level:</b> 4 <b>Func. diagram:</b> 6722, 6723, 6724 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	Displays the smoothed flux setpoint. The value is referred to the rated motor flux.		

---

<b>p1584[0...n]</b>	<b>Field weakening operation flux setpoint smoothing time / Field weak T_smth</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> PMSM, REL <b>Min</b> 0 [ms]	<b>Calculated:</b> CALC_MOD_REG <b>Dyn. index:</b> DDS, p0180  <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 20000 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6722 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0 [ms]
<b>Description:</b>	Sets the smoothing time for the flux setpoint in the field-weakening range		
<b>Recommendation:</b>	Smoothing should be especially used if there is no regenerative feedback into the line supply. This means that the DC link voltage can quickly increase in regenerative operation		
<b>Note:</b>	Only the flux setpoint rise is smoothed		

---

<b>p1585[0...n]</b>	<b>Flux actual value smoothing time / Flux actVal T_smth</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> 0 [ms]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180  <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6726 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0 [ms]
<b>Description:</b>	Sets the smoothing time for the flux actual value.		

<b>p1586[0...n]</b>	<b>Field weakening characteristic scaling / Field weak scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	80.0 [%]	120.0 [%]	100.0 [%]
<b>Description:</b>	Sets the scaling of the pre-control characteristic for the start of field weakening. For values above 100 % and for partial load situations, the field weakening starts at higher speeds.		
<b>Note:</b>	If the start of field weakening is shifted to lower speeds, then the voltage reserve is increased for partial load situations. If the start of field weakening is shifted to higher speeds, the voltage reserve is appropriately reduced so that for fast load changes, it can be expected that this will have a negative impact on the dynamic performance.		
<b>r1589</b>	<b>Field-weakening current pre-control value / I_FieldWeak prectr</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6724
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the pre-control value for the field weakening current.		
<b>p1590[0...n]</b>	<b>Flux controller P gain / Flux controller Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6723
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0	999999.0	10.0
<b>Description:</b>	Sets the proportional gain for the flux controller.		
<b>Note:</b>	The value is automatically pre-assigned dependent on the motor when the drive system is first commissioned. When calculating controller parameters (p0340 = 4), this value is re-calculated.		
<b>p1592[0...n]</b>	<b>Flux controller integral time / Flux controller Tn</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6723
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	10000 [ms]	30 [ms]
<b>Description:</b>	Sets the integral time for the flux controller.		
<b>Note:</b>	The value is automatically pre-assigned dependent on the motor when the drive system is first commissioned. When calculating controller parameters (p0340 = 4), this value is re-calculated.		

## 2 Parameters

### 2.2 List of parameters

<b>r1593[0...1]</b>	<b>CO: Field weakening controller / flux controller output / Field/FI_ctrl outp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> - [Arms]	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> 6_2 <b>Scaling:</b> p2002 <b>Max</b> - [Arms]	<b>Access level:</b> 4 <b>Func. diagram:</b> 6723, 6724, 6726 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Arms]
<b>Description:</b>	Display and connector output for the output of the field weakening controller (synchronous motor) or the output of the flux controller (separately excited synchronous motor, induction motor).		
<b>Index:</b>	[0] = PI output [1] = I output		
<b>p1594[0...n]</b>	<b>Field-weakening controller P gain / Field_ctrl Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, SESM, REL <b>Min</b> 0.00	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000.00	<b>Access level:</b> 4 <b>Func. diagram:</b> 6724 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00
<b>Description:</b>	Sets the P gain of the field-weakening controller.		
<b>p1595[0...n]</b>	<b>Field weakening controller additional setpoint / Field_ctr add_setp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> - <b>Not for motor type:</b> REL <b>Min</b> -80.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 50.00 [%]	<b>Access level:</b> 4 <b>Func. diagram:</b> 6726 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [%]
<b>Description:</b>	Sets an additional setpoint for the field weakening controller. The value refers to the dynamic voltage reserve (p1574).		
<b>Note:</b>	For a value equal to zero, the field weakening controller is activated when the maximum voltage, calculated with the average value of the DC link voltage - and limited using p1575 - is reached. Positive values mean that the field weakening controller intervenes later. Negative values cause the field weakening controller to intervene earlier, so that the voltage can move away from the modulation depth limit.		
<b>p1596[0...n]</b>	<b>Field weakening controller integral-action time / Field_ctrl Tn</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> 10 [ms]	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 10000 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6723, 6724 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 50 [ms]
<b>Description:</b>	Sets the integral-action time of the field-weakening controller.		

<b>r1597</b>	<b>CO: Field weakening controller output / Field_ctrl outp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6723
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the output of the field weakening controller. The value is referred to the rated motor flux.		
<b>r1598</b>	<b>CO: Total flux setpoint / Flux setp total</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6714, 6723, 6724, 6725, 6726, 8020
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the effective flux setpoint. The value is referred to the rated motor flux.		
<b>p1599[0...n]</b>	<b>Flux controller excitation current difference / Flux ctr I_exc_dif</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	100.0 [%]	3.0 [%]
<b>Description:</b>	Sets the permissible difference between the actual excitation current and the excitation current setpoint. The excitation current flux controller is active within this difference. If the difference lies outside the specified limit value, then the I component of the excitation current flux controller is kept. Instead of this, for the flux controller of the field-generating current, an additional I controller is switched in (integral time according to p1592). If the difference again lies within the bandwidth, the I component of the excitation current flux controller is re-activated and the I component of the flux controller of the field-generating current is reduced as an exponential function with respect to time. The reduction of the I component over time depends on the rotor time constant (r0384).		
<b>p1600[0...n]</b>	<b>P flux controller P gain / P flux ctrl Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0	999999.0	10.0
<b>Description:</b>	Sets the proportional gain of the P flux controller for separately excited synchronous motors (SESM).		
<b>Note:</b>	The value is automatically pre-assigned dependent on the motor when the drive system is first commissioned. When calculating controller parameters (p0340 = 4), this value is re-calculated.		

## 2 Parameters

### 2.2 List of parameters

<b>p1601[0...n]</b>	<b>Current injection ramp-up time / I_inject t_ramp-up</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6790
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1 [ms]	10000 [ms]	20 [ms]
<b>Description:</b>	The following applies for a synchronous reluctance motor: Sets the ramp-up time of the current setpoint when switching over from closed-loop controlled operation to open-loop controlled operation. The current setpoint is calculated from p1610 and p1611.		
<b>r1602</b>	<b>CO: P flux controller output / P flux ctrl outp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6726, 6727
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the output of the P flux controller for separately excited synchronous motors (SESM).		
<b>p1604[0...n]</b>	<b>Pulse technique current limit / Pulse current lim</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Arms]	10000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	Sets the effective current limit within the pulse technique.		
<b>Note:</b>	The saturation characteristic of the motor defines the available operating range for the pulse technique. This operating range can be adjusted using the current limit. When commissioning a catalog motor, the technique is automatically selected depending on the motor type being used. Otherwise, the rated motor current is used as pre-assigned value.		
<b>p1605[0...n]</b>	<b>Pulse technique pattern configuration / Puls patrn config</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	2	2
<b>Description:</b>	Sets the applied pulse patterns for estimating the continuous rotor position. Remark: See p1750 for the activation of the pulse-pattern technique.		
<b>Value:</b>	1: pm 2: ppmm		
<b>Dependency:</b>	Refer to: p1750		
<b>Note:</b>	When commissioning a catalog motor, the technique is automatically selected depending on the motor type being used.		

<b>r1606</b>	<b>CO: Pulse technique pattern actual / Puls pattern act</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	-
<b>Description:</b>	Displays the currently applied pulse patterns for estimating the continuous rotor position.		
<b>Value:</b>	0: None 1: pm 2: ppmm		
<b>Dependency:</b>	Refer to: p1605, p1750		
<b>p1607[0...n]</b>	<b>Pulse technique stimulus / Puls stimulus</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [mVs]	20000.000 [mVs]	32.000 [mVs]
<b>Description:</b>	Sets the excitation amplitude (voltage-time pulse) for the pulse technique for estimating the continuous rotor position.		
<b>Dependency:</b>	Refer to: p1605, p1750		
<b>r1608[0...8]</b>	<b>CO: Pulse technique response / Puls response</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the signal responses to the excitation of the pulse technique.		
<b>Index:</b>	[0] = Phase R [1] = Phase S [2] = D estimated [3] = Q estimated [4] = D estimated AC [5] = Q estimated AC [6] = Pointer length AC [7] = D estimated AC smooth [8] = Q estimated AC smooth		
<b>Dependency:</b>	Refer to: p1605, p1607, p1750		
<b>Note:</b>	For index 7, 8: Displays the smoothed values (smoothing time p0045) from indices 4 and 5.		
<b>p1609[0...n]</b>	<b>I/f operation current setpoint / I/f op I_setp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Arms]	10000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	Sets the stator current setpoint for operation of a separately excited synchronous motor (SESM) in operating mode I/f (p1300 = 18).		

<b>p1610[0...n]</b>	<b>Torque setpoint static (sensorless) / M_set static</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180	<b>Access level:</b> 2 <b>Func. diagram:</b> 6700, 6721, 6722, 6726
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> -200.0 [%]	<b>Max</b> 200.0 [%]	<b>Factory setting</b> 50.0 [%]
<b>Description:</b>	Sets the static torque setpoint for sensorless vector control in the low speed range. This parameter is entered as a percentage referred to the rated motor torque (r0333). For sensorless vector control, in the speed-controlled operating range (open loop), an absolute current is impressed. p1610 represents the maximum load that occurs at a constant setpoint speed.		
<b>Notice:</b>	p1610 should always be set to at least 10 % higher than the maximum steady-state load that can occur.		
<b>Note:</b>	For p1610 = 0%, a current setpoint is calculated that corresponds to the no-load case (ASM: rated magnetizing current, RESM: no-load magnetizing current). For p1610 = 100 %, a current setpoint is calculated that corresponds to the rated motor torque. Negative values are converted into positive setpoints in the case of induction and permanent-magnet synchronous motors as well as closed-loop controlled reluctance motors.		
<b>p1611[0...n]</b>	<b>Additional acceleration torque (sensorless) / M_suppl_accel</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> DDS, p0180	<b>Access level:</b> 2 <b>Func. diagram:</b> 6700, 6721, 6722, 6726
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> 0.0 [%]	<b>Max</b> 200.0 [%]	<b>Factory setting</b> 30.0 [%]
<b>Description:</b>	Enters the dynamic torque setpoint for the low-speed range for sensorless vector control. This parameter is entered as a percentage referred to the rated motor torque (r0333).		
<b>Note:</b>	When accelerating and braking p1611 is added to p1610 and the resulting total torque is converted into an appropriate current setpoint and controlled. For pure accelerating torques, it is always favorable to use the torque pre-control of the speed controller (p1496).		
<b>p1612[0...n]</b>	<b>Current setpoint magnetizing open-loop controlled / Id_set ctrl</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> DDS, p0180	<b>Access level:</b> 2 <b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL	<b>Unit group:</b> 6_2 <b>Scaling:</b> -	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> 0.00 [Arms]	<b>Max</b> 10000.00 [Arms]	<b>Factory setting</b> 0.00 [Arms]
<b>Description:</b>	Sets the magnetizing current setpoint in the open-loop controlled encoderless operation. The value is only valid during the current model orientation.		
<b>Dependency:</b>	Refer to: p1610, p1611		
<b>Note:</b>	The value is effective at speeds less than p1755 and represents a reserve for a possibly existing load torque or torque error in the moment of inertia.		

<b>r1614</b>	<b>EMF maximum / EMF max</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6725
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 5_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]
<b>Description:</b>	Displays the actual maximum possible electromotive force (EMF) of the separately excited synchronous motor.		
<b>Dependency:</b>	The value is the basis for the flux setpoint. The maximum possible EMF depends on the following factors: - Actual DC link voltage (r0070). - Maximum modulation depth (p1803). - Field-generating and torque-generating current setpoint.		
<b>p1616[0...n]</b>	<b>Current setpoint smoothing time / I_set T_smooth</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6721, 6722, 6726
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	4 [ms]	10000 [ms]	40 [ms]
<b>Description:</b>	Sets the smoothing time for the current/torque setpoint in the open-loop-controlled operating range in the case of sensorless vector control.		
<b>Note:</b>	This parameter is only effective in the range where current is injected for sensorless vector control. For permanent magnet synchronous motors, the parameter is effective over the complete speed range. For induction motors, the current setpoint is calculated from p1610 and p1611 and for separately excited synchronous motors the torque setpoint is calculated from p1610 and p1611.		
<b>r1617</b>	<b>CO: Torque setpoint (controlled) / M_set ctrl</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Nm]	- [Nm]	- [Nm]
<b>Description:</b>	Torque setpoint for sensorless control of the separately excited synchronous motor in the open-loop-controlled operating range (under p1755 * p1756).		
<b>r1618</b>	<b>Current model controller pre-control / I_mod_ctrl prectrl</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the pre-control value of the current model controller. It involves a magnetizing current in the d-direction.		

## 2 Parameters

### 2.2 List of parameters

<b>p1619[0...n]</b>	<b>Setpoint/actual value tracking threshold / SetAct track thrsh</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> 0.00 [Arms]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 6_2 <b>Scaling:</b> p2002 <b>Max</b> 10000.00 [Arms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6727 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [Arms]
<b>Description:</b>	Threshold for setpoint/actual value tracking of the stator current in the q axis of the current model.		
<b>p1620[0...n]</b>	<b>Stator current minimum / I_stator min</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> -10000.00 [Arms]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 6_2 <b>Scaling:</b> - <b>Max</b> 10000.00 [Arms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6727 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [Arms]
<b>Description:</b>	Sets the minimum stator current for separately excited synchronous motors (SESM). A negative value means that the field-generating stator current (d-axis) has a negative sign. The valid value is internally limited to 50% of the rated motor current (p0305).		
<b>p1621[0...n]</b>	<b>Changeover speed inner cos phi = 1 / n_chngov cos phi=1</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> 0.00 [rpm]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 3_1 <b>Scaling:</b> - <b>Max</b> 210000.00 [rpm]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6727 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [rpm]
<b>Description:</b>	Sets the speed where a change is made from the inner to the outer cos phi = 1. If the value that is entered exceeds the rated speed, then a change is made to the inner cos phi = 1 over the complete speed range.		
<b>p1622[0...n]</b>	<b>Field-generating current setpoint smoothing time constant / Id_setp T_smth</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> 0.1 [ms]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 200.0 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6727 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 20.0 [ms]
<b>Description:</b>	Sets the smoothing time constant for the setpoint of the field-generating current components. The current filtered in this way is included in the calculation of the cos phi.		
<b>r1623[0...1]</b>	<b>Field-generating current setpoint (steady-state) / Id_set stationary</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> PMSM, REL <b>Min</b> - [Arms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 6_2 <b>Scaling:</b> p2002 <b>Max</b> - [Arms]	<b>Access level:</b> 4 <b>Func. diagram:</b> 6723, 6726, 6727 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Arms]
<b>Description:</b>	Displays the steady-state field generating current setpoint (Id_set).		

<b>r1624</b>	<b>Field-generating current setpoint total / Id_setp total</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> REL <b>Min</b> - [Arms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 6_2 <b>Scaling:</b> p2002 <b>Max</b> - [Arms]	<b>Access level:</b> 4 <b>Func. diagram:</b> 6640, 6721, 6723, 6727 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Arms]
<b>Description:</b>	Displays the limited field-generating current setpoint (Id_set). This value comprises the steady-state field-generating current setpoint r1623 and a dynamic component that is only set when changes are made to the flux setpoint.		
<b>p1625[0...n]</b>	<b>Excitation current setpoint calibration / I_exc_setp cal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> 10.0 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 200.0 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6727 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 100.0 [%]
<b>Description:</b>	Sets the gain factor to weight the excitation current setpoint.		
<b>r1626[0...1]</b>	<b>CO: Excitation current setpoint / I_exc_setp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> - [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6727 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	Displays the calculated excitation current setpoint. The following applies for index 0: For direct excitation, the value is referred to p0390. For brushless excitation, the value is referred to p0690. The following applies for index 1: The value is referred to p0390.		
<b>Index:</b>	[0] = Excitation current of the excitation equipment [1] = Excitation current for direct excitation		
<b>Dependency:</b>	Refer to: p0390, p0690		
<b>r1627</b>	<b>CO: Current model load angle / I_mod load angle</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> - [°]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> p2005 <b>Max</b> - [°]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6727 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [°]
<b>Description:</b>	Displays the load angle of the current model.		

## 2 Parameters

### 2.2 List of parameters

---

<b>p1628[0...n]</b>	<b>Current model controller dynamic factor / I_mod_ctr dyn_fact</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1 [%]	400 [%]	50 [%]
<b>Description:</b>	Sets the dynamic response factor for the current model controller.		

---

<b>p1629[0...n]</b>	<b>Current model controller P gain / I_mod_ctrl Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	100000.000	0.000
<b>Description:</b>	Sets the proportional gain for the current model controller. This value is automatically pre-set using p3900 or p0340 when commissioning has been completed.		

---

<b>p1630[0...n]</b>	<b>Current model controller integral time / I_mod_ctrl Tn</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	10000.00 [ms]	0.00 [ms]
<b>Description:</b>	Sets the integral time for the current model controller. This value is automatically pre-set using p3900 or p0340 when commissioning has been completed.		

---

<b>r1631</b>	<b>Current model controller P gain effective / I_mod ctrl Kp eff</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the effective P gain of the current model controller.		

---

<b>r1632</b>	<b>Current model controller integral time effective / I_mod_ctrl Tn eff</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ms]	- [ms]	- [ms]
<b>Description:</b>	Displays the effective integral time of the current model controller.		

---

<b>r1633</b>	<b>Current model flux setpoint / I_mod flux setp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the effective flux setpoint of the current model. The value is referred to the rated motor flux.		
<b>r1634</b>	<b>Current model flux actual value / I_mod flux act val</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the effective flux actual value of the current model. The value is referred to the rated motor flux.		
<b>r1635</b>	<b>Current model controller I component / I_mod_ctrl I comp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the I component of the current model controller.		
<b>r1636</b>	<b>Current model controller output / I_mod_ctrl outp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the output of the current model controller.		
<b>r1637</b>	<b>Current model magnetizing current d axis / I_mod I_mag d-ax</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the magnetizing current of the current model in the d-axis.		

## 2 Parameters

### 2.2 List of parameters

<b>r1638</b>	<b>Current model magnetizing current q axis / I_mod I_mag q-ax</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> - [Arms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 6_2 <b>Scaling:</b> p2002 <b>Max</b> - [Arms]	<b>Access level:</b> 4 <b>Func. diagram:</b> 6727 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Arms]
<b>Description:</b>	Displays the magnetizing current of the current model in the q-axis.		
<b>r1639</b>	<b>CO: Current model Isq after actual value tracking / I_mod Isq track</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> - [Arms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 6_2 <b>Scaling:</b> p2002 <b>Max</b> - [Arms]	<b>Access level:</b> 4 <b>Func. diagram:</b> 6727 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Arms]
<b>Description:</b>	Displays the stator current in the q axis after the current actual value tracking.		
<b>p1640[0...n]</b>	<b>CI: Excitation current actual value signal source / I_exc_ActVal S_src</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 / FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170 <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 6727 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the signal source for the excitation current actual value		
<b>r1641[0...1]</b>	<b>Excitation current actual value / I_exc_act val</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> - [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6727, 8020 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	Displays the excitation current actual value that is read in.		
<b>Index:</b>	[0] = Excitation current of the excitation equipment [1] = Excitation current for direct excitation		
<b>Dependency:</b>	Refer to: p0390		
<b>Note:</b>	The following applies for index 0: For direct excitation, the value is referred to p0390. For brushless excitation, the value is referred to p0690. The following applies for index 1: The value is referred to p0390.		
<b>p1642[0...n]</b>	<b>Minimum excitation current / Min I_exc</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> 0.1 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 50.0 [%]	<b>Access level:</b> 4 <b>Func. diagram:</b> 6727 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 5.0 [%]
<b>Description:</b>	Sets the minimum excitation current. This means that negative excitation currents can be avoided.		

<b>p1643[0...n]</b>	<b>Minimum excitation current closed-loop control gain factor / I_exc_min Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	5.00	0.40
<b>Description:</b>	Sets the gain factor for the minimum excitation current, closed-loop control. This is active if the excitation current is below 75 % of p1642.		
<b>Dependency:</b>	Refer to: p1642		
<b>r1644</b>	<b>CO: Excitation current monitoring output / I_exc_monit outp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6727
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the output of the excitation current monitoring for separately excited synchronous motors.		
<b>p1645[0...7]</b>	<b>BI: Excitation feedback signals signal source / Exc FS S_src</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6495
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	[0...6] 1 [7] 0
<b>Description:</b>	Sets the signal source for the individual feedback signals from the excitation.		
<b>Index:</b>	[0] = Excitation ready for switching on [1] = Excitation ready [2] = Excitation operational [3] = Excitation group signal fault [4] = Excitation group signal alarm [5] = Not used [6] = Not used [7] = Excitation at the voltage limit		
<b>Dependency:</b>	Refer to: r1649		
<b>p1646</b>	<b>Excitation monitoring time / Excit t_monit</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6495
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	2.0 [s]	1300.0 [s]	20.0 [s]
<b>Description:</b>	Sets the monitoring time of the excitation. After an ON command, the feedback signal must be received within this monitoring time.		
<b>Note:</b>	After the on command for the excitation (r1648.0 = 1), its feedback signal must be available at r1649.1 within this monitoring time (BI: p1645[1]). The same monitoring time is effective after the excitation is enabled for operation (r1648.3 = 1) up to the feedback signal "excitation operational" (r1649.2 = 1, BI: p1645[2]).		

<b>p1647</b>	<b>Excitation switch-off delay time / Exc t_off</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6495
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> 0.0 [s]	<b>Max</b> 5.0 [s]	<b>Factory setting</b> 0.8 [s]
<b>Description:</b>	Sets the switch-off delay time to shut down the excitation equipment.		
<b>Note:</b>	The delay time starts if, when switching off, r0863.0 = 0. r1648.0 and r1648.3 are reset at the end of the delay time.		

<b>r1648.0...11</b>	<b>CO/BO: Excitation control word / Excitation STW</b>				
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6495		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b> -	<b>Max</b> -	<b>Factory setting</b> -		
<b>Description:</b>	Displays the control word for the excitation equipment.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Power up excitation	Yes	No	-
	01	Excitation no OFF2	Yes	No	-
	02	Excitation no OFF3	Yes	No	-
	03	Excitation operation enable	Yes	No	-
	07	Excitation acknowledge fault	Yes	No	-
	10	Reserved	-	-	-
	11	Reserved	-	-	-
<b>Note:</b>	For bit 00: This bit is set dependent on r0863.0.				

<b>r1649.0...8</b>	<b>CO/BO: Excitation status word / Excitation ZSW</b>				
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6495		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> ASM, PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b> -	<b>Max</b> -	<b>Factory setting</b> -		
<b>Description:</b>	Displays the status word of the excitation equipment.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Excitation ready for switching on feedback signal	Yes	No	-
	01	Excitation ready feedback signal	Yes	No	-
	02	Excitation operational feedback signal	Yes	No	-
	03	Excitation group signal fault	Yes	No	-
	07	Excitation group signal alarm	Yes	No	-
	08	Excitation at the voltage limit	Yes	No	-
<b>Dependency:</b>	Refer to: p1645				

<b>r1650</b>	<b>Current setpoint torque-generating before filter / Iq_set before filt</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 5710
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the torque generating current setpoint Iqset after the torque limits and the clock cycle interpolation is ahead of the current setpoint filters.		
<b>r1651</b>	<b>CO: Torque setpoint function generator / M_set FG</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2003	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Nm]	- [Nm]	- [Nm]
<b>Description:</b>	Displays the torque setpoint of the function generator.		
<b>p1653[0...n]</b>	<b>Current setpoint torque-generating smoothing time minimum / Isq_s T_smth min</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6710
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.1 [ms]	20.0 [ms]	0.1 [ms]
<b>Description:</b>	Sets the minimum smoothing time constant for the setpoint of the torque-generating current components.		
<b>p1654[0...n]</b>	<b>Curr. setpoint torque-gen. smoothing time field weakening range / Isq_s T_smth FW</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6710
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.1 [ms]	50.0 [ms]	4.8 [ms]
<b>Description:</b>	Sets the smoothing time constant for the setpoint of the torque-generating current components.		
<b>Note:</b>	The smoothing time does not become effective until the field-weakening range is reached.		
<b>p1655[0...4]</b>	<b>CI: Current setpoint/Speed actual value filter nat. frequency tuning / I/n_setp_filt f_n</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6700, 6710
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for tuning the natural frequency of the current setpoint filter 1, 2 and speed actual value filter 5.		
<b>Index:</b>	[0] = Filter 1 [1] = Filter 2 [2] = Reserved [3] = Reserved [4] = Filter 5		

## 2 Parameters

### 2.2 List of parameters

<b>p1656[0...n]</b>	<b>Current setpoint/Speed actual value filter activation / I_setp_filt act</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 4715, 6710	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 0001 bin	
<b>Description:</b>	Setting for activating/deactivating the current setpoint filter 1, 2 and speed actual value filter 5.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Filter 1	Active	Inactive
	01	Filter 2	Active	Inactive
	04	Filter 5	Active	Inactive
				<b>FP</b>
				-
				-
				-
<b>Dependency:</b>	The individual current setpoint/speed actual value filters are parameterized starting at p1657.			
<b>Note:</b>	If not all of the filters are required, then the filters should be used consecutively starting from filter 1.			
<b>p1657[0...n]</b>	<b>Current setpoint filter 1 type / I_set_filt 1 type</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5710, 6710	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	1	2	1	
<b>Description:</b>	Sets the current setpoint filter 1 as low pass (PT2) or general 2nd order filter.			
<b>Value:</b>	1: PT2 low pass			
	2: General 2nd order filter			
<b>Dependency:</b>	The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.			
<b>Note:</b>	For a general 2nd order filter, by inserting the same natural frequency in both the numerator and in the denominator, i.e. bandstop frequency, a bandstop filter is implemented. If the numerator damping of zero is selected, the bandstop frequency is completely suppressed.			
	The denominator damping can be determined from the equation for the 3 dB bandwidth:			
	$f_{3dB\ bandwidth} = 2 * D_{denominator} * f_{bandstop\ frequency}$			
<b>p1658[0...n]</b>	<b>Current setpoint filter 1 denominator natural frequency / I_set_filt1 fn_den</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5710, 6710	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.5 [Hz]	16000.0 [Hz]	1999.0 [Hz]	
<b>Description:</b>	Sets the denominator natural frequency for current setpoint filter 1 (PT2, general filter).			
<b>Dependency:</b>	The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.			
<b>p1659[0...n]</b>	<b>Current setpoint filter 1 denominator damping / I_set_filt 1 D_den</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5710, 6710	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.001	10.000	0.700	
<b>Description:</b>	Sets the denominator damping for current setpoint filter 1.			
<b>Dependency:</b>	The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.			

<b>p1660[0...n]</b>	<b>Current setpoint filter 1 numerator natural frequency / I_set_filt1 fn_num</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5710, 6710
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.5 [Hz]	16000.0 [Hz]	1999.0 [Hz]
<b>Description:</b>	Sets the numerator natural frequency for current setpoint filter 1 (general filter).		
<b>Dependency:</b>	The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.		
<b>p1661[0...n]</b>	<b>Current setpoint filter 1 numerator damping / I_set_filt 1 D_num</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5710, 6710
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	10.000	0.700
<b>Description:</b>	Sets the numerator damping for current setpoint filter 1.		
<b>Dependency:</b>	The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.		
<b>p1662[0...n]</b>	<b>Current setpoint filter 2 type / I_set_filt 2 type</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5710, 6710
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	2	1
<b>Description:</b>	Sets the current setpoint filter 2 as low pass (PT2) or general 2nd order filter.		
<b>Value:</b>	1: PT2 low pass 2: General 2nd order filter		
<b>Dependency:</b>	Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.		
<b>Note:</b>	For a general 2nd order filter, by inserting the same natural frequency in both the numerator and in the denominator, i.e. bandstop frequency, a bandstop filter is implemented. If the numerator damping of zero is selected, the bandstop frequency is completely suppressed. The denominator damping can be determined from the equation for the 3 dB bandwidth: $f_{3dB \text{ bandwidth}} = 2 * D_{denominator} * f_{bandstop \text{ frequency}}$		
<b>p1663[0...n]</b>	<b>Current setpoint filter 2 denominator natural frequency / I_set_filt2 fn_den</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5710, 6710
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.5 [Hz]	16000.0 [Hz]	1999.0 [Hz]
<b>Description:</b>	Sets the denominator natural frequency for current setpoint filter 2 (PT2, general filter).		
<b>Dependency:</b>	Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.		

<b>p1664[0...n]</b>	<b>Current setpoint filter 2 denominator damping / I_set_filt 2 D_den</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5710, 6710
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.001	10.000	0.700
<b>Description:</b>	Sets the denominator damping for current setpoint filter 2.		
<b>Dependency:</b>	Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.		
<b>p1665[0...n]</b>	<b>Current setpoint filter 2 numerator natural frequency / I_set_filt2 fn_num</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5710, 6710
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.5 [Hz]	16000.0 [Hz]	1999.0 [Hz]
<b>Description:</b>	Sets the numerator natural frequency for current setpoint filter 2 (general filter).		
<b>Dependency:</b>	Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.		
<b>p1666[0...n]</b>	<b>Current setpoint filter 2 numerator damping / I_set_filt 2 D_num</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 5710, 6710
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	10.000	0.700
<b>Description:</b>	Sets the numerator damping for current setpoint filter 2.		
<b>Dependency:</b>	Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.		
<b>p1677[0...n]</b>	<b>Speed actual value filter 5 type / n_act_filt 5 type</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 4715
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	2	2
<b>Description:</b>	Sets the speed actual value filter 5 as low pass (PT2) or general 2nd order filter.		
<b>Value:</b>	1: PT2 low pass 2: General 2nd order filter		
<b>Dependency:</b>	The speed actual value filter is activated via p1656.4 and parameterized via p1677 ... p1681.		
<b>Note:</b>	For a general 2nd order filter, by inserting the same natural frequency in both the numerator and in the denominator, i.e. bandstop frequency, a bandstop filter is implemented. If the numerator damping of zero is selected, the bandstop frequency is completely suppressed. The denominator damping can be determined from the equation for the 3 dB bandwidth: $f_{3dB} \text{ bandwidth} = 2 * D_{denominator} * f_{bandstop} \text{ frequency}$		

---

<b>p1678[0...n]</b>	<b>Speed actual value filter 5 denominator natural frequency / n_act_filt5 fn_den</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 4715
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.5 [Hz]	16000.0 [Hz]	1999.0 [Hz]

**Description:** Sets the denominator natural frequency for speed actual value filter 5 (PT2, general filter).  
**Dependency:** The speed actual value filter is activated via p1656.4 and parameterized via p1677 ... p1681.

---

<b>p1679[0...n]</b>	<b>Speed actual value filter 5 denominator damping / n_act_filt 5 D_den</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 4715
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.001	10.000	0.700

**Description:** Sets the denominator damping for speed actual value filter 5.  
**Dependency:** The speed actual value filter is activated via p1656.4 and parameterized via p1677 ... p1681.

---

<b>p1680[0...n]</b>	<b>Speed actual value filter 5 numerator natural frequency / n_act_filt5 fn_num</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 4715
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.5 [Hz]	16000.0 [Hz]	1999.0 [Hz]

**Description:** Sets the numerator natural frequency for speed actual value filter 5 (general filter).  
**Dependency:** The speed actual value filter is activated via p1656.4 and parameterized via p1677 ... p1681.

---

<b>p1681[0...n]</b>	<b>Speed actual value filter 5 numerator damping / n_act_filt 5 D_num</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 4715
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	10.000	0.700

**Description:** Sets the numerator damping for speed actual value filter 5.  
**Dependency:** The speed actual value filter is activated via p1656.4 and parameterized via p1677 ... p1681.

---

<b>p1699</b>	<b>Filter data acceptance / Filt data accept</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0

**Description:** Activates data acceptance for parameter changes for the filter.  
p1699 = 0:  
The new filter data are immediately accepted.

## 2 Parameters

### 2.2 List of parameters

p1699 = 1:

The new filter data are only accepted when this parameter is reset.

**Dependency:**

Speed setpoint filter 1, 2 (p1414 and following)

Current setpoint filter 1 ... 4 (p1656 and following)

Current setpoint filter 5 ... 10 (function module, p5200 and following)

Refer to: p1656

---

#### p1702[0...n]

#### Isd current controller pre-control scaling / Isd\_ctr\_prectrScal

VECTOR\_G (n/M)

**Can be changed:** U, T

**Calculated:** -

**Access level:** 4

**Data type:** FloatingPoint32

**Dyn. index:** DDS, p0180

**Func. diagram:** 6714

**P-Group:** Closed-loop control

**Unit group:** -

**Unit selection:** -

**Not for motor type:** ASM, REL

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0.0 [%]

200.0 [%]

70.0 [%]

**Description:**

Sets the scaling of the dynamic current controller pre-control for the flux-generating current component Isd.

**Note:**

The parameter is effective for permanent and separately excited synchronous motors.

---

#### p1703[0...n]

#### Isq current controller pre-control scaling / Isq\_ctr\_prectrScal

VECTOR\_G (n/M)

**Can be changed:** U, T

**Calculated:** CALC\_MOD\_CON

**Access level:** 4

**Data type:** FloatingPoint32

**Dyn. index:** DDS, p0180

**Func. diagram:** 6714

**P-Group:** Closed-loop control

**Unit group:** -

**Unit selection:** -

**Not for motor type:** REL

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0.0 [%]

200.0 [%]

70.0 [%]

**Description:**

Sets the scaling of the dynamic current controller pre-control for the torque/force-generating current component Isq.

---

#### p1704[0...n]

#### Isq current controller pre-control EMF scaling / Isq\_ctrl EMF scal

VECTOR\_G (n/M)

**Can be changed:** U, T

**Calculated:** -

**Access level:** 4

**Data type:** FloatingPoint32

**Dyn. index:** DDS, p0180

**Func. diagram:** 6714, 6726

**P-Group:** Closed-loop control

**Unit group:** -

**Unit selection:** -

**Not for motor type:** ASM, PMSM, REL

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0.0 [%]

200.0 [%]

100.0 [%]

**Description:**

Sets the scaling of the EMF pre-control for the Isq current controller.

---

#### p1705[0...n]

#### Flux setpoint/actual value tracking threshold / Flux track thresh

VECTOR\_G (n/M)

**Can be changed:** U, T

**Calculated:** -

**Access level:** 4

**Data type:** FloatingPoint32

**Dyn. index:** DDS, p0180

**Func. diagram:** 6714, 6726

**P-Group:** Closed-loop control

**Unit group:** -

**Unit selection:** -

**Not for motor type:** ASM, PMSM, REL

**Scaling:** PERCENT

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0.0 [%]

100.0 [%]

100.0 [%]

**Description:**

Threshold for the setpoint - actual value tracking of the EMF pre-control of the Isq current controller.

<b>p1710[0...n]</b>	<b>Current controller adaptation in-line axis starting point Kp / Id_adapt pt Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Arms]	6000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	Sets the starting point of the current-dependent current controller adaptation where the current controller gain p1720 is effective.		
<b>Dependency:</b>	Refer to: p1720		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	For p1712 = 100 % or p1402.2 = 0, the current controller adaptation is disabled and p1720 is effective over the entire range.		
<b>p1711[0...n]</b>	<b>Current ctrl adaptation in-line axis starting point Kp adapted / Id_adapt pt Kp adap</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Arms]	6000.00 [Arms]	0.00 [Arms]
<b>Description:</b>	Sets the starting point of the current-dependent current controller adaptation where the adapted current controller gain p1720 x p1712 is effective.		
<b>Dependency:</b>	Refer to: p1710, p1712, p1720		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	For p1712 = 100 % or p1402.2 = 0, the current controller adaptation is disabled and p1720 is effective over the entire range.		
<b>p1712[0...n]</b>	<b>Current controller adaptation in-line axis p gain adaptation / Id_adapt Kp adapt</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	1000.00 [%]	100.00 [%]
<b>Description:</b>	Sets the factor for the current controller P gain in the adaptation range (d-current > p1711). The value is referred to p1720.		
<b>Dependency:</b>	Refer to: p1710, p1711, p1720		
<b>Notice:</b>	When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.		
<b>Note:</b>	For p1712 = 100 % or p1402.2 = 0, the current controller adaptation is disabled and p1720 is effective over the entire range.		

## 2 Parameters

### 2.2 List of parameters

<b>p1715[0...n]</b>	<b>Current controller P gain / I_ctrl Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180	<b>Access level:</b> 3 <b>Func. diagram:</b> 6700, 6714, 7017
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> 0.000	<b>Max</b> 100000.000	<b>Factory setting</b> 0.000
<b>Description:</b>	Sets the proportional gain of the current controller for the lower adaptation current range. This value is automatically pre-set using p3900 or p0340 when commissioning has been completed.		
<b>Dependency:</b>	Refer to: p0391, p0392, p0393		
<b>Note:</b>	For p0393 = 100 %, the current controller adaptation is disabled and p1715 is effective over the entire range.		
<b>p1717[0...n]</b>	<b>Current controller integral-action time / I_ctrl Tn</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180	<b>Access level:</b> 3 <b>Func. diagram:</b> 5714, 6700, 6714, 7017
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> 0.00 [ms]	<b>Max</b> 1000.00 [ms]	<b>Factory setting</b> 2.00 [ms]
<b>Description:</b>	Sets the integral-action time of the current controller.		
<b>Dependency:</b>	Refer to: p1715		
<b>r1718</b>	<b>CO: Isq controller output / Isq_ctrl outp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> 6714
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL	<b>Unit group:</b> 5_1 <b>Scaling:</b> p2001	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> - [Vrms]	<b>Max</b> - [Vrms]	<b>Factory setting</b> - [Vrms]
<b>Description:</b>	Displays the actual output of the Isq current controller (torque/force generating current, PI controller). The value contains the proportional and integral components of the PI controller.		
<b>r1719</b>	<b>Isq controller integral component / Isq_ctrl I_comp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> 6714
	<b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL	<b>Unit group:</b> 5_1 <b>Scaling:</b> p2001	<b>Unit selection:</b> p0505 <b>Expert list:</b> 1
	<b>Min</b> - [Vrms]	<b>Max</b> - [Vrms]	<b>Factory setting</b> - [Vrms]
<b>Description:</b>	Displays the integral component of the Isq current controller (torque/force-generating current, PI controller).		

<b>p1720[0...n] Current controller d axis p gain / Id_ctrl Kp</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	100000.000	0.000
<b>Description:</b>	Sets the proportional gain of the d-current controller for the lower adaptation current range. This value is automatically pre-set using p3900 or p0340 when commissioning has been completed.		
<b>p1722[0...n] Current controller d axis integral time / I_ctrl d-axis Tn</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	1000.00 [ms]	2.00 [ms]
<b>Description:</b>	Sets the integral time of the d-current controller.		
<b>r1723 CO: Isd controller output / Isd_ctrl outp</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6714
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 5_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]
<b>Description:</b>	Displays the actual output of the Isd current controller (flux-generating current, PI controller). The value contains the proportional and integral components of the PI controller.		
<b>r1724 Isd controller integral component / Isd_ctrl I_comp</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6714
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 5_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]
<b>Description:</b>	Displays the integral component of the Isd current controller (flux-generating current, PI controller).		
<b>r1725 Isd controller integral component limit / Isd_ctrl I_limit</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6714
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 5_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]
<b>Description:</b>	Displays the limit value for the integral component of the Isd current controller.		

<b>p1726[0...n]</b>	<b>Quadrature arm decoupling scaling / Transv_decpl scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6714
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	200.0 [%]	75.0 [%]
<b>Description:</b>	Sets the scaling of the quadrature arm decoupling		
<b>Note:</b>	This parameter is ineffective for sensorless vector control. In this case, p1727 is always used. If p1726 is set to 0, then the quadrature de-coupling is deactivated. The integral component of the Isd current controller remains effective in the complete speed control range. For the closed-loop control of synchronous motors, this parameter is used to scale the current controller de-coupling.		
<b>p1727[0...n]</b>	<b>Quadrature arm decoupling at voltage limit scaling / TrnsvDecplVmaxScal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6714
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	200.0 [%]	50.0 [%]
<b>Description:</b>	Sets the scaling of quadrature arm decoupling when the voltage limit is reached.		
<b>r1728</b>	<b>De-coupling voltage in-line axis / U_dir-axis_decoupl</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6714
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 5_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]
<b>Description:</b>	Displays the actual output of the quadrature channel de-coupling for the d axis.		
<b>r1729</b>	<b>De-coupling voltage quadrature axis / U_quad_decoupl</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6714
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 5_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]
<b>Description:</b>	Displays the actual output of the quadrature channel de-coupling for the q axis.		
<b>p1730[0...n]</b>	<b>Isd controller integral component shutdown threshold / Isd ctrl Tn shutd</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	30 [%]	150 [%]	30 [%]
<b>Description:</b>	Sets the speed threshold for deactivating the integral component of the Isd controller. The d current controller is only effective as P controller for speeds greater than the threshold value. Instead of the integral component, the quadrature arm decoupling is effective.		

**Warning:**

For settings above 80%, the d current controller is active up to the field weakening limit. When operated at the voltage limit, this can result in an unstable behavior. In order to avoid this, the dynamic voltage reserve p1574 should be increased.

**Note:**

The parameter value is referred to the synchronous rated motor speed.

<b>p1731[0...n] Isd controller combination current time component / Isd ctr I_combi T1</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> PMSM, SESM, REL <b>Min</b> 0.00 [ms]	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 10000.00 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [ms]
<b>Description:</b>	Sets the time constant to calculate the d current DC component difference (combination current) to add to the d current controller actual value.		
<b>Note:</b>	It is not added for p1731 = 0.		
<b>r1732[0...1] CO: Direct-axis voltage setpoint / Direct U set</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> - [Vrms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 5_1 <b>Scaling:</b> p2001 <b>Max</b> - [Vrms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 5700, 5714, 6714, 5718 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Vrms]
<b>Description:</b>	Display and connector output for the direct axis voltage setpoint Ud.		
<b>Index:</b>	[0] = Unsmoothed [1] = Smoothed with p0045		
<b>r1733[0...1] CO: Quadrature-axis voltage setpoint / Quad U set</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> - [Vrms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 5_1 <b>Scaling:</b> p2001 <b>Max</b> - [Vrms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 5700, 5714, 5718, 6714, 6719 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Vrms]
<b>Description:</b>	Display and connector output for the quadrature axis voltage setpoint Uq.		
<b>Index:</b>	[0] = Unsmoothed [1] = Smoothed with p0045		
<b>p1740[0...n] Gain resonance damping for encoderless closed-loop control / Gain res_damp</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> 0.000	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 10.000	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.025
<b>Description:</b>	Defines the gain of the controller for resonance damping for operation with sensorless vector control in the range that current is injected.		

## 2 Parameters

### 2.2 List of parameters

<b>p1744[0...n]</b>	<b>Motor model speed threshold stall detection / MotMod n_thr stall</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> SESM, REL <b>Min</b> 0.00 [rpm]	<b>Calculated:</b> CALC_MOD_REG <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 3_1 <b>Scaling:</b> - <b>Max</b> 210000.00 [rpm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 100.00 [rpm]
<b>Description:</b>	Sets the speed threshold value to detect a stalled motor. If the adaptation controller output exceeds the parameterized speed difference, then in status word r1408.11 is set = 1.		
<b>Dependency:</b>	If a stalled drive is detected (r1408.11 = 1), fault F07902 is output after the delay time set in p2178. Refer to: p2178		
<b>Note:</b>	Speed monitoring is only effective in operation with a speed encoder (refer to p1300). Stalling is also identified if steps/jumps occur in the speed signal, which exceed the value in p0492.		
<b>p1745[0...n]</b>	<b>Motor model error threshold stall detection / MotMod ThreshStall</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> 0.0 [%]	<b>Calculated:</b> CALC_MOD_REG <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000.0 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 5.0 [%]
<b>Description:</b>	Sets the fault threshold in order to detect a motor that has stalled. If the error signal (r1746) exceeds the parameterized error threshold, then status signal r1408.12 is set to 1.		
<b>Dependency:</b>	If a stalled drive is detected (r1408.12 = 1), fault F07902 is output after the delay time set in p2178. Refer to: p2178		
<b>Note:</b>	Monitoring is only effective in the low-speed range (below p1755 * (100% - p1756)).		
<b>r1746</b>	<b>Motor model error signal stall detection / MotMod sig stall</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [%]	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	Signal to initiate stall detection		
<b>Note:</b>	The signal is not calculated while magnetizing and only in the low speed range (below p1755 * (100 % - p1756)).		
<b>p1748[0...n]</b>	<b>Motor model lower changeover speed n_set -&gt; n_act / MotMod low n_chng</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, PMSM, REL <b>Min</b> 0.0 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 90.0 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 50.0 [%]
<b>Description:</b>	Sets the lower speed for the transition "n_set -> n_act" in encoderless operation. This value is entered as a percentage referred to p1749.		
<b>Dependency:</b>	Refer to: p1749, p1752		

<b>p1749[0...n] Motor model upper changeover speed / increase changeover speed / Up/incr n_chngov</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	99.0 [%]	50.0 [%]
<b>Description:</b>	<p>Separately excited synchronous motor: Sets the upper speed for the transition "n_set -&gt; n_act" in sensorless operation. This value is entered as a percentage of p1755. Induction motor without speed encoder: Depending on the machine data, the drive has calculated a minimum value of the operating frequency for rugged operation. If the minimum value is greater than the lower changeover limit parameterized with p1755 * (1 - 2 * p1756), then the difference is displayed using p1749 * p1755. The parameter value cannot be changed.</p>		
<b>Dependency:</b>	Refer to: p1748, p1752, p1755, p1756		

<b>p1750[0...n] Motor model configuration / MotMod config</b>					
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b>	<b>Access level:</b> 3		
		CALC_MOD_LIM_REF			
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 bin		
<b>Description:</b>	<p>Sets the configuration for the motor model. Bit 0 = 1: Forces open-loop speed-controlled starting (ASM). Bit 1 = 1: Forces the system to pass through frequency zero, open-loop-controlled (ASM). Bit 2 = 1: Drive remains in full closed-loop control mode, even at zero frequency (ASM). Bit 3 = 1: Motor model evaluates the saturation characteristic (ASM). Bit 4 = 1: Time-controlled change between current and observer models (ASM). Bit 5 = 1: HF signal injection to estimate the continuous rotor position (PMSM). Bit 6 = 1: If the motor is blocked, sensorless vector control remains speed-controlled (ASM). For a stalled (blocked) synchronous motor (PMSM), the encoderless vector control remains open-loop speed controlled. Bit 7 = 1: Use rugged switchover limits to switchover the model between open-loop and closed-loop controlled operation (ASM).</p>				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Controlled start	Yes	No	-
	01	Controlled through 0 Hz	Yes	No	-
	02	Closed-loop ctrl oper. down to zero freq. for passive loads	Yes	No	-
	03	Motor model Lh_pre = f(PsiEst)	Yes	No	-
	04	Model changeover	Time controlled	Freq. controlled	-
	05	Closed-loop ctrl mode PMSM up to f=0Hz with HF signal injection	Yes	No	-
	06	Closed-/open-loop controlled when motor is blocked	Yes	No	-
	07	Use rugged changeover limits	Yes	No	-
<b>Caution:</b>	<p>Do not use bit 6 = 1 if the motor can be slowly reversed by the load at the torque limit. Long delay times due to blocking (p2177 &gt; p1758) can cause the motor to stall. In this case you should deactivate the function or use closed-loop control throughout the speed range (note the information re bit 2 = 1).</p>				



## 2 Parameters

### 2.2 List of parameters

**Note:** Bit 0 ... 3 only have influence for sensorless vector control, bit 4 only for vector control with encoder. Bit 2 is pre-assigned depending on p0500.

For bit 2 = 1:  
The sensorless vector control is effective down to zero frequency. A change is not made into the open-loop speed controlled mode.  
This operating mode is possible for passive loads. These include applications where the load itself does not generate any active torque and therefore only acts reactively to the drive torque of the induction motor.  
If bit 2 = 1, then bit 3 is automatically set to 1. Manual de-selection is possible and may be sensible if the saturation characteristic (p1960) was not measured for third-party motors. Generally, for standard SIEMENS motors, the already pre-assigned (default value) saturation characteristic is adequate.  
When the bit is set, the selection of bits 0 and 1 is ignored.

For bit 2 = 0:  
If the model feedback is deactivated (p1784 = 0), with bit 2 = 0, then bit 3 is also automatically set to 0.

For bit 5 = 1:  
The selection of HF signal injection is only relevant for permanent-magnet synchronous motors (PMSM). Therefore, activation of bit 5 is only possible outside of motor commissioning (p0010 = 0).  
In order to achieve user-friendly configuration of the power unit components in the oversampling mode, when activated for the first time, initially p1810.3 is set, and then an automatic system boot is initiated. This is only possible if all of the axes connected to the Control Unit are switched off (refer to the setting conditions for p0009); otherwise, it is not possible to set the bit.  
When deactivating p1750.5, p1810.3 remains unchanged and the system does not boot again.  
Therefore, to reverse configure the power unit components from the oversampling mode (after manually deselecting p1750 bit 5) then initially p1810 bit 3 must be manually deleted and then a manual warm restart initiated.  
As an alternative to a warm restart: save the parameters and carry out a POWER ON (switch-off/switch-on).  
When the function "safety without encoder" (p9306/p9506) is activated, this setting is not permissible and results in monitoring errors.

For bit 6 = 1:  
The following applies for encoderless vector control of induction motors:  
For a blocked motor (see p2175, p2177) the time condition in p1758 is bypassed and a change is not made into open-loop controlled operation.  
The following applies for encoderless vector control of synchronous motors:  
For a blocked motor (see p2175, p2177), the speed ramp-function generator is held in open-loop speed controlled operation, and a change is not made into closed-loop controlled operation.

For bit 7 = 1:  
The following applies for encoderless vector control of induction motors:  
If the changeover limits are parameterized too low (p1755, p1756), then they are automatically increased to rugged values by the absolute amount  $p1749 * p1755$ .  
The effective time condition for changing over into open-controlled operation is obtained from the minimum of p1758 and  $0.5 * r0384$ .  
Activation can make sense for applications that demand a high torque at low frequencies and therefore low speed gradients.  
Adequate parameterization must be ensured (p1610, p1611).

<b>r1751</b>		<b>Motor model status / MotMod status</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status of the motor model.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Controlled operation	Active	Inactive	6721
	01	Set ramp-function generator	Active	Inactive	-
	02	Stop RsLh adaptation	Yes	No	-
	03	Feedback	Active	Inactive	-
	04	Encoder operation	Active	Inactive	-
	05	Holding angle	Yes	No	-

06	Acceleration criterion	Active	Inactive	-
07	Set angular integrator PMSM	Yes	No	-
08	Stop Kt adaptation PMSM	Yes	No	-
09	PolID active PMSM encoderless	Yes	No	-
10	I injection PMSM	Yes	No	-
11	Speed controller output cannot be set to zero	Yes	No	-
12	Rs adapt waits	Yes	No	-
13	Motor operation	Yes	No	-
14	Stator frequency sign	Positive	Negative	-
15	Torque sign	Motor mode	Regenerative mode	-
16	Pulse injection active PMSM	Yes	No	-
17	Operation with rugged model feedback	Enabled	Inhibited	-
18	Operation of the current model with current feedback	Enabled	Inhibited	-
19	Current feedback in the current model	Active	Inactive	-
20	Rugged increase of the changeover limits	Active	Inactive	-
21	Motor blocked (RFG stop) PMSM	No	Yes	-

**Note:**

PMSM: permanent-magnet synchronous motor

For bit 17:

Displays the enabled status of the rugged model feedback (p1784).

The feedback is used to increase the parameter ruggedness of the motor model and is effective in the operating range of the two-component closed loop current control.

For bit 18:

Displays the status when enabling the differential current feedback in the current model for operation with encoder.

The function is automatically enabled with p1784 > 0 or p1731 > 0.

The feedback is used for a rugged change between the current model and complete machine model with active rugged model feedback and combination current.

For bit 19:

Displays the currently active stator circuit feedback in current model operation.

For bit 20:

Displays the currently effective increase of the changeover limits by the value p1749 \* p1755.

For bit 21:

For a blocked synchronous motor, the speed ramp-function generator is held in the open-loop speed controlled operating range if the torque setpoint reaches the torque limit and the speed is less than the threshold value in p2175.

---

**p1752[0...n] Motor model changeover speed operation with encoder / MotMod n\_chgov enc**

VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	210000.00 [rpm]

**Description:** Sets the speed to change over the motor model for operation with encoder.

**Dependency:** In U/f characteristic mode the parameter is of no significance.

Using the friction characteristic for operation with encoder:

When changing the motor model changeover speed p1752, the points along the friction characteristic should be recalculated (p0340 = 5) and the friction characteristic recorded again (p3845). For slight changes, only the associated friction characteristic points must be recorded (see p3844).

Refer to: p1756

<b>p1753[0...n]</b>	<b>Motor model changeover speed hysteresis operation with encoder / MotMod n_chgovHysE</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> 0.0 [%]	<b>Calculated:</b> CALC_MOD_REG <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 90.0 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.0 [%]
<b>Description:</b>	Sets the hysteresis for the changeover speed of the motor model for operation with speed encoder.		
<b>Dependency:</b>	Refer to: p1752		
<b>Note:</b>	The value refers to p1752. In the case of separately excited synchronous motors, the lower hysteresis value is calculated with $p1752 * p1753$ ; in the case of all other types of motor, $p1752 * (1 - p1753)$ is used.		
<b>p1754[0...n]</b>	<b>Flux angle difference smoothing time / Angle diff T_smth</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> ASM, REL <b>Min</b> 0.1 [ms]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 10000.0 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6733 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 5.0 [ms]
<b>Description:</b>	Sets the smoothing time constant to filter the main flux angle difference from the voltage and current models. The filtered value is included in the calculation of the total flux angle. PMSM: Sets the smoothing time constant to display the angular difference between the motor model and encoder.		
<b>Note:</b>	In the case of a separately excited synchronous motor (SESM) and sensorless vector control, the parameter must be set to the minimum value to improve motor model changeover. PMSM: permanent-magnet synchronous motor SESM: separately excited synchronous motor		
<b>p1755[0...n]</b>	<b>Motor model changeover speed encoderless operation / MotMod n_chgSnsorl</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> 0.00 [rpm]	<b>Calculated:</b> CALC_MOD_REG <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 3_1 <b>Scaling:</b> - <b>Max</b> 210000.00 [rpm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 210000.00 [rpm]
<b>Description:</b>	Sets the speed to change over the motor model to encoderless operation.		
<b>Dependency:</b>	In U/f characteristic mode the parameter is of no significance. Refer to: p1749, p1756		
<b>Notice:</b>	The changeover speed represents the steady-state minimum speed up to which the motor model can be used in sensorless steady-state operation. If the stability is not adequate close to the changeover speed, it may make sense to increase the parameter value.		
<b>Note:</b>	The changeover speed applies for the changeover between open-loop and closed-loop control mode.		

<b>p1756</b>	<b>Motor model changeover speed hysteresis encoderless operation / MotMod n_chgov hys</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> 0.0 [%]	<b>Calculated:</b> CALC_MOD_REG <b>Dyn. index:</b> -  <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 95.0 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> 6730, 6731, 6732, 6733 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 50.0 [%]
<b>Description:</b>	Sets the hysteresis for the changeover speed of the motor model for encoderless operation. In the case of separately excited synchronous motors, the lower hysteresis value is calculated with $p1756 * p1755$ ; in the case of all other types of motor, $p1755 * (1 - p1756)$ is used.		
<b>Dependency:</b>	In U/f characteristic mode the parameter is of no significance. Refer to: p1755		
<b>Note:</b>	The parameter value refers to p1755. In the case of separately excited synchronous motors, the lower hysteresis value is calculated with $p1755 * p1756$ ; in the case of all other types of motor, $p1755 * (1 - p1756)$ is used.		
<b>p1757[0...n]</b>	<b>Motor model w/o enc. op./cl.-loop controlled stab. controller Kp / MotMod w/o enc Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> SESM, REL <b>Min</b> 0.01	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180  <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 10.00	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.70
<b>Description:</b>	Sets the gain of the transient response controller when the motor model changes over from open-loop controlled operation to closed-loop controlled operation.		
<b>Note:</b>	Only for ASM and PSM in encoderless operation: The settling range starts at $0.5 * p1755 * p1756$ . For ASM it ends at $p1755 * p1756$ or at p1755, if p1759 is at the maximum value. For PSM it always ends at $p1755 * p1756$ .		
<b>p1758[0...n]</b>	<b>Motor model changeover delay time closed/open-loop control / MotMod t_cl_op</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> PMSM, SESM, REL <b>Min</b> 100 [ms]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180  <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 10000 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1000 [ms]
<b>Description:</b>	Sets the minimum time for falling below the changeover speed when changing from closed-loop controlled operation to open-loop controlled operation.		
<b>Dependency:</b>	The wait time has no significance if the setpoint speed before the ramp-function generator lies in the open-loop speed controlled operating range. In this case, the change is made without any delay. Refer to: p1755, p1756		
<b>Note:</b>	If p1758 is changed, commissioning must be selected in order to validate the value for the blocking monitoring.		

## 2 Parameters

### 2.2 List of parameters

<b>p1759[0...n]</b>	<b>Motor model changeover delay time open/closed-loop control / MotMod t op_cl</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	2000 [ms]	0 [ms]
<b>Description:</b>	Sets the minimum time for a transition from open-loop controlled to closed-loop controlled operation after the lower changeover speed $p1755 * (1 - p1756 / 100 \%)$ has been exceeded.		
<b>Dependency:</b>	Refer to: p1755, p1756		
<b>Note:</b>	With p1759 = 2000 ms, the delay time becomes ineffective and the model changeover is determined by the output frequency only (changeover for p1755).		
<b>p1760[0...n]</b>	<b>Motor model with encoder speed adaptation Kp / MotMod wE n_ada Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	100000.000	1000.000
<b>Description:</b>	Sets the proportional gain Kp of the controller for speed adaptation with encoder		
<b>p1761[0...n]</b>	<b>Motor model with encoder speed adaptation Tn / MotMod wE n_ada Tn</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	1000 [ms]	4 [ms]
<b>Description:</b>	Sets the integral-action time Tn of the controller for speed adaptation with encoder		
<b>r1762[0...1]</b>	<b>Motor model deviation component 1 / MotMod dev comp 1</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6721, 6730, 6731
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Induction motor (ASM): Displays the referred imaginary system deviation for the adaptation circuit of the motor model. Permanent-magnet synchronous motor (PMSM): Displays the system deviation for speed adaptation. r1762[0]: Angular deviation [rad-el] of the estimated EMF. r1762[1]: Angular deviation [rad-el] of the low-level signal response for pulse technique.		
<b>Index:</b>	[0] = Deviation model 1 [1] = Deviation model 2		

<b>r1763</b>	<b>Motor model deviation component 2 / MotMod dev comp 2</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Induction motor (ASM): Displays the referred real system deviation for the adaptation circuit of the motor model. Permanent-magnet synchronous motor (PMSM): Not used.		
<b>p1764[0...n]</b>	<b>Motor model without encoder speed adaptation Kp / MotMod woE n_adaKp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6730
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	100000.000	1000.000
<b>Description:</b>	Sets the proportional gain of the controller for speed adaptation without encoder.		
<b>r1765</b>	<b>Motor model speed adaptation Kp effective / MotM n_ada Kp act</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the effective proportional gain of the controller for the speed adaptation.		
<b>p1766[0...n]</b>	<b>Motor model voltage model calculation enable / U_mod calc enab</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	90.0 [%]	50.0 [%]
<b>Description:</b>	Sets the speed to enable the voltage model to calculate the speed actual value. This value is entered as a percentage referred to p1752. For separately excited synchronous motors without encoder, the parameter is referred to p1748.		
<b>Dependency:</b>	Refer to: p1748, p1752		
<b>p1767[0...n]</b>	<b>Motor model without encoder speed adaptation Tn / MotMod woE n_adaTn</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6730
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1 [ms]	200 [ms]	4 [ms]
<b>Description:</b>	Sets the integral time of the controller for speed adaptation without encoder		

## 2 Parameters

### 2.2 List of parameters

<b>r1768</b>	<b>Motor model speed adaptation Vi effective / MotM n_ada Vi act</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the effective gain of the integral component of the controller for speed adaptation.		
<b>r1770</b>	<b>CO: Motor model speed adaptation proportional component / MotMod n_adapt Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6730
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the P component of the controller for speed adaptation.		
<b>r1771</b>	<b>CO: Motor model speed adaptation I comp. / MotMod n_adapt Tn</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6730
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the I component of the controller for speed adaptation.		
<b>r1773[0...1]</b>	<b>Motor model slip speed / MotMod slip</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays estimated (speed) signals of the motor model. r1773[0]: Displays the estimated (mechanical) slip of the motor model. r1773[1]: Displays the estimated input speed of the motor model.		
<b>Index:</b>	[0] = Slip speed estimated [1] = Speed estimated		
<b>p1774[0...n]</b>	<b>Motor model offset voltage compensation alpha / MotMod offs comp A</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-5.000 [V]	5.000 [V]	0.000 [V]
<b>Description:</b>	Sets the offset voltage in the alpha direction; this compensates the offset voltages of the drive converter/inverter at low speeds. The value is valid for the rated (nominal) pulse frequency of the power unit.		
<b>Note:</b>	The value is pre-set during the rotating measurement.		

<b>p1775[0...n]</b>	<b>Motor model offset voltage compensation beta / MotMod offs comp B</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> PMSM, SESM, REL <b>Min</b> -5.000 [V]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 5.000 [V]	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000 [V]
<b>Description:</b>	Sets the offset voltage in the beta direction; this compensates the offset voltages of the drive converter/inverter at low speeds. The value is valid for the rated (nominal) pulse frequency of the power unit.		
<b>Note:</b>	The value is pre-set during the rotating measurement.		
<b>r1776[0...6]</b>	<b>Motor model status signals / MotMod status sig</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the internal status signals of the motor model: Index 0: Changeover ramp between current and voltage models Index 1: Changeover ramp for model feedback (only encoderless induction motors) Index 2: Changeover ramp for zero frequency range (only encoderless induction motors) Index 3: Transition ramp actual speed from speed setpoint to model value (SESM without encoder) Index 4: Speed controller enable (SESM without encoder) Index 5: Transition ramp between current and voltage models (SESM without encoder) Index 6: Transition ramp for EMF deviation at PLL input (PMSM without encoder)		
<b>Index:</b>	[0] = Changeover ramp motor model [1] = Changeover ramp model tracking [2] = Changeover ramp zero frequency encoderless ASM [3] = Changeover ramp actual speed SESM without encoder [4] = Enable speed controller SESM without encoder [5] = Changeover ramp motor model SESM without encoder [6] = Changeover ramp motor model PMSM without encoder		
<b>Note:</b>	Indices 3 through 5 are only relevant in the case of encoderless control of separately excited synchronous motors.		
<b>r1778</b>	<b>Motor model flux angle difference / MotMod ang diff</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> - [°]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> p2005 <b>Max</b> - [°]	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [°]
<b>Description:</b>	Induction motor (ASM): Displays the difference between the motor model flux angle and the transformation angle. Permanent-magnet synchronous motor (PMSM): Displays the angular difference between motor model and encoder.		
<b>Dependency:</b>	A setting for smoothing the display can be made using p1754.		

<b>r1779</b>	<b>Motor model absolute flux / MotMod abs flux</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b> - [%]	<b>Max</b> - [%]	<b>Factory setting</b> - [%]
<b>Description:</b>	Displays the absolute value of the flux of the motor model.		

<b>p1780[0...n]</b>	<b>Motor model adaptation configuration / MotMod adapt conf</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> -	<b>Max</b> -	<b>Factory setting</b> 0000 0000 0111 1100 bin

**Description:** Sets the configuration for the adaptation circuit of the motor model.  
 Induction motor (ASM): Rs, Rr (only for operation with encoder), Lh and offset compensation.  
 Permanent-magnet synchronous motor (PMSM): kT

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	01	Select motor model ASM Rs adaptation	Yes	No	-
	02	Select motor model ASM Lh adaptation	Yes	No	-
	03	Select motor model PMSM kT adaptation	Yes	No	-
	04	Select motor model offset adaptation	Yes	No	-
	05	Select ASM Rr adaptation (only with encoder)	Yes	No	-
	06	Select pole position identification PMSM encoderless	Yes	No	-
	07	Select T(valve) with Rs adaptation	Yes	No	-
	10	Filter time combination current like current ctrl integral time	Yes	No	-
	11	Fast flying restart with voltage model for induction motor	Yes	No	-
	12	Start PMSM sensorless with last angle	Yes	No	-
	13	Fast pulsed pole position identification	Yes	No	-
	14	Delay of the precontrol speed to the motor model	Yes	No	-
	15	RESM Q flux model linear	Yes	No	-

**Dependency:** In U/f characteristic operating mode, only bit 7 and bit 11 are relevant.  
 For active motor model feedback (see p1784), the Lh adaptation is internally deactivated automatically.  
 When the power units are connected in parallel with separate, offset motor winding systems (p7003 = 2), then the compensation of the valve interlocking times should be implemented as Rs adaptation (bit 7 = 1).

**Caution:** Bit 11: The selection has not been enabled for output filters, with the exception of motor reactors (see p0230)



**Notice:** It is only permissible to change bit 11 if the drive is switched off.  
 When selecting bit 11, also for U/f characteristic operation, a standstill measurement must have been performed to set the necessary current controller for a fast flying restart.

**Note:** ASM: Induction motor  
 PMSM: permanent-magnet synchronous motor  
 When selecting the compensation of the valve interlocking via Rs (bit 7), the compensation in the gating unit is deactivated and is instead taken into account in the motor model.  
 In order that the correction values of the Rs, Lh and kT adaptation (selected using Bit 0 ... Bit 2) are correctly accepted when changing over the drive data set, a dedicated motor number must be entered into p0826 for each different motor.  
 Bit 11 has no influence on flying restart with speed encoder. Depending on the motor, the fast flying restart is suitable for speeds of maximum 1.5x to 4x the rated motor speed.

For bit 12 (only for synchronous motors and bit 6 = 1):

The pole position identification is only carried out after power on and after the motor has coasted down. The switch-off speed p1226 should be as low as possible. If the power unit is switched off when the motor is stationary, then the next time that the power unit is switched on, the old angle is used as starting value. The precondition applies that while the power unit is switched off the motor does not rotate.

The duration of the pole position identification is shortened using bit 13. As a consequence, the pole wheel angle error can be slightly greater.

<b>p1784[0...n]</b>	<b>Motor model feedback scaling / MotMod fdbk scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [%]	1000.0 [%]	0.0 [%]
<b>Description:</b>	Sets the scaling for model fault feedback.		
<b>Note:</b>	Feeding back the measured model fault to the model states increases the control stability and makes the motor model rugged against parameter errors. When feedback is selected (p1784 > 0), Lh adaptation is not effective.		
<b>p1785[0...n]</b>	<b>Motor model Lh adaptation Kp / MotMod Lh Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	10.000	0.100
<b>Description:</b>	Sets the proportional gain for the Lh adaptation of the motor model for an induction motor (ASM).		
<b>p1786[0...n]</b>	<b>Motor model Lh adaptation integral time / MotMod Lh Tn</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10 [ms]	10000 [ms]	100 [ms]
<b>Description:</b>	Sets the integral time for the Lh adaptation of the motor model for an induction motor (ASM).		
<b>r1787[0...n]</b>	<b>Motor model Lh adaptation corrective value / MotMod Lh corr</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the corrective value for the Lh adaptation of the motor model for an induction motor (ASM).		
<b>Dependency:</b>	Refer to: p0826, p1780		
<b>Note:</b>	The adaptation result is reset if the magnetizing inductance of the induction motor is changed (p0360, r0382). This also happens when changing over the data set if a different motor is not being used (p0826). The display of the inactive data sets is only updated when changing over the data set.		

## 2 Parameters

### 2.2 List of parameters

<b>r1791</b>	<b>Motor model Lh adaptation switch-on frequency / MotMod Lh f_on</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Hz]	- [Hz]	- [Hz]
<b>Description:</b>	Displays the switch-on stator frequency/ primary section frequency for the Lh adaptation for the induction motor (ASM).		
<b>r1792</b>	<b>Motor model Lh adaptation switch-on slip / MotMod Lh fslip</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Hz]	- [Hz]	- [Hz]
<b>Description:</b>	Displays the switch-on slip frequency for the Lh adaptation for the induction motor (ASM).		
<b>p1795[0...n]</b>	<b>Motor model kT adaptation integral time / MotMod kT Tn</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6731
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10 [ms]	10000 [ms]	100 [ms]
<b>Description:</b>	Sets the integral time of the kT adaptation of the motor model for a permanent-magnet synchronous motor (PMSM).		
<b>r1797[0...n]</b>	<b>Motor model kT adaptation corrective value / MotMod kT corr</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6731
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Nm/A]	- [Nm/A]	- [Nm/A]
<b>Description:</b>	Displays the corrective value of the kT adaptation of the motor model for a permanent-magnet synchronous motor (PMSM).		
<b>Dependency:</b>	Refer to: p0826, p1780		
<b>Note:</b>	The display of the inactive data sets is only updated when changing over the data set.		
<b>p1798[0...n]</b>	<b>Motor model pulse technique speed adaptation Kp / MotMod PulsTech Kp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	1000.000	1.000
<b>Description:</b>	Sets the proportional gain Kp for speed adaptation with active pulse technique for the estimation of the continuous rotor position.		

p1800[0...n]	Pulse frequency setpoint / Pulse freq setp		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8021
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1.000 [kHz]	16.000 [kHz]	4.000 [kHz]
<b>Description:</b>	Sets the pulse frequency for the converter. This parameter is pre-set to the rated converter value when the drive is first commissioned.		
<b>Dependency:</b>	The pulse frequency can, depending on the current controller sampling time (p0115[0]) assume the following values: $p1800 = 1000 / (p0115[0] * 2)$ or $p1800 = n * 1000 / p0115[0]$ with $n = 1, 2, 3, \dots$ Example: $p0115[0] = 250 \mu s \rightarrow p1800 = 2, 4, 8, 12, 16 \text{ kHz}$ Possible setting values can be taken from r0114 (if p0009 = p0010 = 0). If p0092 = 1 the sampling times p0115 and the pulse frequency p1800 are checked every time the parameters are downloaded, and reset to the initial values if necessary. This check can be deactivated by setting p0092 = 0 (making this setting does not affect isochronous PROFIBUS operation). The pulse frequency cannot be changed when motor data identification is active (p1910). If the pulse frequency is set asynchronously to the current controller sampling time (p1810.12), the following limit applies: $p1800 \leq 1000 * 2 / p0115[0]$ If wobulation is selected (p1810.2), the pulse frequency can only be changed as part of pulse enabling to values with the following ratio: a) $p1800 \leq 1000 / p0115[0]$ for $p1811 > 0 \%$ b) $p1800 \leq 1000 * 2 / p0115[0]$ for $p1811 = 0 \%$ Under pulse inhibit $p1800 > 1000 / p0115[0] \rightarrow p1811 = 0$ $p1800 > 1000 * 2 / p0115[0] \rightarrow p1810.2 = 0$ and $p1811 = 0$ (applicable for all indices) Refer to: r0110, r0111, p0112, p0113, r0114, p0115, p0230, p1817		
<b>Notice:</b>	The pulse frequency p1800 can also be asynchronously set to the current controller sampling time (0.05 kHz increment). To do this, p1810.12 must be set to 1 (secondary condition, see p1810). Effects: - switching over the gating unit (p1810.2). - activating the current actual value correction (p1840.0). - minimum pulse frequency $1000 * 0.5 / p0115[0]$ . - maximum pulse frequency $1000 * 2 / p0115[0]$ . - fluctuating deadtimes and dynamic performance in the current control loop. - increased level of current ripple in the current display.		
<b>Note:</b>	The maximum possible pulse frequency is also determined by the power unit being used. When the pulse frequency is increased, depending on the particular power unit, the maximum output current can be reduced (derating, refer to r0067). The maximum pulse frequency for operation with output reactors (see p0230) is 4 kHz for booksize and blocksize power units, for chassis power units it is twice the rated pulse frequency (2.5 kHz or 4 kHz). If a sine-wave filter is parameterized as output filter (p0230 = 3), then the pulse frequency cannot be set below the minimum value required for the filter. If an external sine-wave filter is parameterized, (p0230 = 4), then the minimum pulse frequency is calculated as follows: $f_{puls\_min} = 1.6 / (2 * \pi * \sqrt{p0233 * p0234 * p0235})$ , with p0233 in H and p0234 in F In this case, the pulse frequency must be a multiple of the inverse value of the current controller sampling time (p0115[0]). If a sine-wave filter is parameterized as output filter (p0230 = 3), then the pulse frequency cannot be changed below the minimum value required for the filter.		

## 2 Parameters

### 2.2 List of parameters

If p1800 is changed while commissioning (p0009, p0010 > 0), then it is possible that the old value will no longer be able to be set. The reason for this is that the dynamic limits of p1800 have been changed by a parameter that was set when the drive was commissioned (e.g. p1082).

<b>r1801[0...1]</b>		<b>CO: Pulse frequency / Pulse frequency</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [kHz]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> p2000 <b>Max</b> - [kHz]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [kHz]	
<b>Description:</b>	Display and connector output for the actual converter switching frequency.			
<b>Index:</b>	[0] = Actual [1] = Modulator minimum value			
<b>Note:</b>	The selected pulse frequency (p1800) may be reduced if the drive converter has an overload condition (p0290). The following applies for vector drives (p0107): The pulse frequency can also be reduced when changing over the modulator to an optimized pulse pattern. This is used to avoid overcontrol. In the case of chassis power units, two-thirds of the setpoint pulse frequency is displayed in the FLB modulation range.			
<b>p1802[0...n]</b>		<b>Modulator mode / Modulator mode</b>		
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> Modulation <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> CALC_MOD_LIM_REF <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 19	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0	
<b>Description:</b>	Sets the modulator mode.			
<b>Value:</b>	0: Automatic changeover SVM/FLB 1: Flat top modulation (FLB) 2: Space vector modulation (SVM) 3: SVM without overcontrol 4: SVM/FLB without overcontrol 5: SVM with pulse frequency reduction 6: SVM/FLB with pulse frequency reduction 7: No edge modulation up to 100 Hz 8: No edge modulation up to 60 Hz 9: Edge modulation 19: Optimized pulse pattern			
<b>Dependency:</b>	If a sine-wave filter is parameterized as output filter (p0230 = 3, 4), or if the power unit firmware is not able to calculate edge modulation (r0192.0 = 0), then only space vector modulation without overcontrol can be set as modulation type (p1802 = 3). For permanent-magnet synchronous motors and chassis power units, the following applies: Edge modulation or optimized pulse pattern can only be used, if p1810 bit 2 = 1 is set. Refer to: r0192, p0230, p7003			
<b>Notice:</b>	If the pulse patterns are enabled with overmodulation option (p1802 < 3) or edge modulation (p1802 > 6), then the current actual value correction is automatically activated (p1840.0 = 0).			
<b>Note:</b>	When modulation modes are enabled that could lead to overmodulation (p1802 = 0, 1, 2, 5, 6), the modulation depth must be limited using p1803 (default p1803 < 100 %). The higher the overmodulation, the greater the current ripple and torque ripple. When changing p1802[x], the values for all of the other existing indices are also changed. p1802 = 7, 8 should be used if the drive is operated below 100 Hz or 60 Hz, and it is necessary to avoid changing over to edge modulation. Above these output frequencies, the modulation depth remains limited so that there the full output voltage of the edge modulation is not reached. The setting p1802 = 19 is only released for chassis power units and SIMOTICS FD motors.			

<b>p1803[0...n]</b>	<b>Maximum modulation depth / Modulat depth max</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6723
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	20.0 [%]	150.0 [%]	100.0 [%]
<b>Description:</b>	Defines the maximum modulation depth.		
<b>Note:</b>	p1803 = 100% is the overcontrol limit for space vector modulation (for an ideal drive converter without any switching delay). If optimized pulse patterns are enabled (edge modulation), then the modulation depth is limited to below the output frequency of 28 Hz as there is no optimized pulse pattern in this range.		
<b>p1804[0...n]</b>	<b>Filter time constant smoothed modulation index / T_filt mod_idx sm</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [ms]	10000.0 [ms]	10.0 [ms]
<b>Description:</b>	Filter time constant for the smoothed modulation index to change over the modulator mode.		
<b>p1806[0...n]</b>	<b>Filter time constant Vdc correction / T_filt Vdc_corr</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [ms]	10000.0 [ms]	0.0 [ms]
<b>Description:</b>	Sets the filter time constant for the DC link voltage. This time constant is used to calculate the modulation depth.		
<b>r1807</b>	<b>Actual DC link voltage to calculate the modulation depth / VdcActValMod_depth</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 5_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	DC link voltage that is used to convert the setpoint voltage into an equivalent modulation depth.		
<b>r1808</b>	<b>DC link voltage actual value for U_max calculation / Vdc act val U_max</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 5_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	DC link voltage used to determine the maximum possible output voltage.		

<b>r1809</b>	<b>CO: Modulator mode actual / Modulator mode act</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	9	-
<b>Description:</b>	Displays the effective modulator mode.		
<b>Value:</b>	1: Flat top modulation (FLB) 2: Space vector modulation (SVM) 3: Edge modulation from 28 Hz; 23:3 4: Edge modulation from 28 Hz; 19:1 5: Edge modulation from 60 Hz; 17:3 6: Edge modulation from 60 Hz; 17:1 7: Edge modulation from 100 Hz; 9:2 8: Edge modulation from 100 Hz; 9:1 9: Optimized pulse pattern		

<b>p1810</b>	<b>Modulator configuration / Modulator config</b>				
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 0000 0010 bin		
<b>Description:</b>	Sets the configuration for the modulator.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Avg value filter for V_lim (only for Vdc_comp in modulator)	Yes	No	-
	01	DC link voltage compensation in the current control	Yes	No	-
	02	Wobulation activated	Yes	No	-
	03	Current measurement oversampling selected	Yes	No	-
	08	Pulse frequency reduction (speed dependent) stage 1	Yes	No	-
	09	Pulse frequency reduction (speed dependent) stage 2	Yes	No	-
	10	Activate pulse-locking/pulse-dropping function	Pulse-Dropping	Pulse-Locking	-
	12	Pulse freq. can be asynchronously set to curr. ctrl clock cycle	Yes	No	-
	13	Pulse freq. reduction before optimized pulse patterns for 500 µs	Yes	No	-
	14	Deactivate maximum angular difference adaptation	Yes	No	-
	15	Increase overmodulation range	Yes	No	-
<b>Dependency:</b>	If bit 2 is set from 1 to 0, p1811 = 0 is set.				
<b>Notice:</b>	Bit 1 = 0 can only be set under a pulse inhibit and for r0192.14 = 1. Bit 2 can only be set to 1 subject to the following prerequisites: - Pulse inhibit - r0192.16 = 1 - p1800 < 2 x 1000/p0115[0]				

Bit 12 can only be changed subject to the following prerequisites:

- preconditions, the same as bit 2 = 1
- p1810.3 = 0

For fast current changes, bit 15 = 1 together with p1802 = 0, 2 and p1803 > 106 % result in a significant increase in the torque ripple. As a consequence, increasing the modulation limit must be checked on an application for application basis.

**Note:**

For bit 00 = 0:

Voltage limitation from the minimum of the DC link voltage (lower ripple in the output current, reduced output voltage).

For bit 00 = 1:

Voltage limitation from averaged DC link voltage (higher output voltage with increased ripple in the output current).

The selection is only valid if the DC link compensation is not performed in the Control Unit (bit 1 = 0).

For bit 01 = 0:

DC link voltage compensation in the modulator.

For bit 01 = 1:

DC link voltage compensation in the current control.

For bit 02 = 0:

A gating unit that does not permit wobulation is used.

Edge modulation is not possible for a parallel connection with a single-winding system (p7003 = 0).

Bit 02 cannot be set to 0 if bit 12 = 1.

For bit 02 = 1:

A gating unit that permits wobulation is used.

For a wobulation amplitude p1811 = 0, the maximum possible pulse frequency in p1800 =  $2 \times 1000 / p0115[0]$ .

For a wobulation amplitude p1811 > 0, the maximum possible pulse frequency in p1800 =  $1000 / p0115[0]$ .

If optimized pulse patterns has been activated (p1802 > 6), then a parameter save is required and switch off and switch on again. This is displayed using a message (F01040).

For bit 03 = 1:

The actual current value sensing and the determination of the valve ON times takes place with a double current controller clock cycle and phase offset.

The activation is only possible with r0192.23 = 1 and p1810.12 = 0 - and takes effect the next time the system is powered up.

For bit 08 = 1:

Above the frequency threshold r1836[0], the pulse frequency is switched to the value in p1800. Below r1836[0] (minus the hysteresis), the pulse frequency is reduced to the next possible pulse frequency (see r0114).

For bit 09 = 1:

Above the frequency threshold r1836[1], the pulse frequency is increased to the next possible value. Below r1836[1] (minus the hysteresis), the pulse frequency is reduced to the next possible pulse frequency.

If bit 8 is set to 0, bit 9 is automatically reset.

For bit 10 = 0:

Pulse-locking function activated.

For bit 10 = 1:

Pulse-dropping function activated.

For bit 12 = 0:

The pulse frequency p1800 can also be synchronously set to the current controller clock cycle (see r0114).

Bit 12 can only be set from 1 to 0 if the pulse frequency p1800 is set synchronously to the current controller clock cycle. In this case, the gating unit is not switched over.

For bit 12 = 1:

The pulse frequency p1800 can also be asynchronously set to the current controller clock cycle. In this case, the effects should be observed (see p1800).

If bit 12 is set to 1, then the gating unit is automatically switched over (p1810.2 = 1). If this is not possible (see above), then bit 12 cannot be set to 1.

Bit 12 cannot be set to 1, if p1810.3 = 1 is set.

For bit 15 = 1:

For p1802 = 0, 2 and p1803 > 106 %, dynamically, a modulation depth of more than 106 % is permitted. When p1803 is increased, the dynamic modulation depth reserve p1574 should be increased so that the maximum output voltage r0071 approximately remains the same. For U/f control, the overcontrol in p1381 can be separately reduced.

## 2 Parameters

### 2.2 List of parameters

<b>p1811[0...n]</b>	<b>Pulse frequency wobulation amplitude / Puls wobbl ampl</b>			
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0 [%]	20 [%]	0 [%]	
<b>Description:</b>	Sets the amplitude of the statistical wobulation signal. This signal is used to vary the pulse frequency to create a more pleasant sound.			
<b>Note:</b>	p1811 > 0 is possible, if the following applies: - configuration: p1810.2 = 1 (wobulation activated) - pulse frequency: p1800 <= 1000 / p115[0] - output filter, filter type: p0230 < 3 (no sine-wave filter)			
<b>p1812</b>	<b>BI: Offset calibration output current measurement / Off_calibr I_outp</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	1	
<b>Description:</b>	Sets the signal source to activate/deactivate offset calibration for output current measurement.			
<b>Caution:</b>	The absence of offset calibration can have a negative effect on control properties. Offset calibration must be performed before switching on the power unit for the first time after POWER ON.			
				
<b>Note:</b>	Offset calibration is only performed with pulses suppressed and can take up to one second.			
<b>p1814[0...n]</b>	<b>Vdc filter dead band for modulation switchover / Vdc filt dead band</b>			
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.0 [%]	12.0 [%]	0.0 [%]	
<b>Description:</b>	Sets the filter dead bandwidth for the DC link voltage signal to switch over the modulation type for optimized pulse patterns. The parameter value refers to the rated line voltage of the power unit.			
<b>Recommendation:</b>	For power units with controlled regenerative line feedback, a value of approximately 2 % is recommended. For all other power units, a value of approximately 8 % (as a result of the increased DC link voltage ripple under load).			
<b>p1815</b>	<b>Phase for PWM generation subgroup / Ph for PWM subgr</b>			
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0001 bin	
<b>Description:</b>	Sets bit 0 for recording the power unit in the subgroup for the "offset clocking".			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Recording in subgroup for offset clocking	Yes	No
<b>Dependency:</b>	Refer to: p1818, p1819			

**Note:** A change only becomes effective after booting.  
 If one of the following secondary conditions is not fulfilled, then none of the power units from the subgroup are clocked with an offset.  
 Secondary conditions for clocking with an offset:  
 - the PWM frequency (p1800[D]) of all power units in the subgroup must be the same.  
 - the PWM frequency (p1800[D]) must be the same in all drive data sets in the subgroup.  
 - the following must apply for the ratio between the PWM cycle (1/p1800[D]) and the current controller cycle (p0115[0]):  
 The ratio (1/p1800[D]) / (p0115[0]) must be an even integer number (2, 4, 6, ...) for all power units in the subgroup.  
 or  
 The ratio (p0115[0]) / (1/p1800[D]) must be an integer number (1, 2, 3, ...) for all power units in the subgroup.

<b>p1816 Set phase for PWM generation manually / Set Ph for PWM</b>			
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1	16	-1
<b>Description:</b>	Sets manual setting and overwriting of automatically determined phase shift for "offset clocking". For p1816 = -1, the following applies: Automatic mode. The phase shift value is automatically determined. For p1816 = 0 ... 16, the following applies: Manual mode. The user should define the phase shift value as follows: 1. PWM cycle (1/p1800) > current controller cycle (p0115[0]) The power unit executes a phase shift from Tshift = current controller cycle (p0115[0]) * p1816. 2. PWM cycle (1/p1800) <= current controller clock cycle (p0115[0]) For p1816 >= 1, the power unit executes a phase shift from Tshift = PWM cycle/2.		
<b>Dependency:</b>	Refer to: r0116, p1800, p1819		

<b>p1817 Minimum ratio, pulse frequency to the output frequency / Min f_puls / f_max</b>			
VECTOR_G	<b>Can be changed:</b> C2(2)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	8.3	15.0	12.0
<b>Description:</b>	Sets the minimum ratio between the pulse frequency and the output frequency.		
<b>Notice:</b>	If the ratio between the pulse frequency and the output frequency is reduced, then oscillations can occur in the output current that can result in significant levels of current ripple with the appropriate negative effects.		
<b>Note:</b>	When the maximum speed is changed, the pulse frequency p1800 is automatically limited to this minimum ratio. It is not permissible to reduce the pulse frequency if this would result in this ratio being undershot.		

<b>p1818 Phase for PWM generation configuration / Ph for PWM config</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	1
<b>Description:</b>	Sets the phase shift for offset clocking. For the first active power unit, it is specified whether clocking is to start at 0° (value = 0) or 180° (value = 1). All other active power units are clocked alternately according to the setting made here.		
<b>Dependency:</b>	Refer to: p1819		

## 2 Parameters

### 2.2 List of parameters

**Note:** A change only becomes effective after a POWER ON.  
The parameter is not influenced by setting the factory setting.

---

#### p1819 Phase for PWM generation / Ph for PWM

VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1	16	-1

**Description:** Display for "offset clocking".  
Depending on the particular case, the value is interpreted differently:  
Case 1:  
The PWM clock cycle (1/p1800[D]) is greater than the current controller clock cycle (p115[0]) and the ratio between the PWM clock cycle and the current controller clock cycle is an integer and even multiple of it (e.g. p0115[0] = 125 µs, p1800[D] = 4 kHz, 2 kHz, 1 kHz).  
The value displayed refers to:  
- the phase shift in the current-controller cycles to be executed by the power unit.  
Case 2:  
The PWM clock cycle (1/p1800[D]) is less than or equal to the current controller clock cycle (p0115[0]) and the ratio between the current controller clock cycle and the PWM clock cycle is an integer and even multiple of it (e.g. p0115[0] = 125 µs, p1800[D] = 8 kHz, 16 kHz).  
The value 1 displayed means that:  
- the power unit is to apply a phase shift of 180 ° (from the PWM cycle).  
A value of 0 displayed on all power units of the drive line-up means the following:  
- the general conditions of the "offset clocking" (see p1815) are not fulfilled, i.e. no power unit is clocked with an offset.

**Dependency:** Refer to: p0108, r0108, p0115, p1800, p1815, p1816, p1818

**Note:** For reasons of compatibility, the parameter is an adjustable parameter. However, it functions solely as a display parameter. This means that factory setting -1 no longer has any significance and is only available for reasons of compatibility.

---

#### p1820[0...n] Reverse the output phase sequence / Outp\_ph\_seq rev

VECTOR_G	<b>Can be changed:</b> C2(3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 6732
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0

**Description:** Sets the phase sequence reversal for the motor.  
If the motor does not rotate in the required direction, then the output phase sequence can be reversed using this parameter. This means that with the same setpoint, the motor direction is reversed without reversing the encoder actual value.

When a speed encoder is being used, it may be necessary to also invert the encoder actual value (p0410).

**Value:**  
0: OFF  
1: ON

**Dependency:** Refer to: p1821

**Caution:** For 12-pulse converters with 30° offset angle for system 2, for a direction of rotation reversal, the phase offset changes by 60° as the sign of the angle offset changes. This can be adapted in p1810.15.



Changing the direction using p1820 or p1821 is not recognized by the "Safe Direction without encoder". As a consequence, the limit provided by SDI (Safe Direction) from r9733 no longer functions.

**Note:** This setting can only be changed when the pulses are inhibited.  
p1821 can be used to reverse the phase sequence and encoder actual value.

<b>p1821[0...n]</b>	<b>Dir of rot / Dir of rot</b>		
VECTOR_G	<b>Can be changed:</b> C2(3) <b>Data type:</b> Integer16	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180	<b>Access level:</b> 3 <b>Func. diagram:</b> 4704, 4710, 4711, 4715, 5730, 6730, 6731, 6732
	<b>P-Group:</b> Motor <b>Not for motor type:</b> -	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> 0	<b>Max</b> 1	<b>Factory setting</b> 0
<b>Description:</b>	Setting to change the direction of rotation. If the parameter is changed, it reverses the direction of rotation of the motor and the encoder actual value without changing the setpoint.		
<b>Value:</b>	0: CW 1: CCW		
<b>Dependency:</b>	Refer to: F07434		
<b>Danger:</b>	When using external speed actual values for the speed controller (see p1440), for a direction of rotation change (p1821 = 1), then its polarity must also be changed (e.g. for drive object ENCODER via p0410). Otherwise, a positive coupling can occur in the speed control loop and the drive would then be accelerated up to the speed limit.		
			
<b>Caution:</b>	For 12-pulse converters with 30° offset angle for system 2, for a direction of rotation reversal, the phase offset changes by 60° as the sign of the angle offset changes. This can be adapted in p1810.15. Changing the direction using p1820 or p1821 is not recognized by the "Safe Direction without encoder". As a consequence, the limit provided by SDI (Safe Direction) from r9733 no longer functions.		
			
<b>Notice:</b>	An appropriate fault is output for a drive data set changeover where the direction of rotation changes and the pulses are enabled.		
<b>Note:</b>	For operation with the phase sequence U/V/W, the direction of rotation is defined when viewing the face side of the motor output shaft. When changing the direction of rotation, the rotating field direction of the current controller is reversed. The speed actual value (e.g. r0063) is also reversed so that the control sense is kept and internally causing the direction of rotation to be reversed with the same setpoint. Further, the position actual values of the actual encoder are reversed (e.g. r0482[0...2]). p1820 can be used to reverse the direction of the motor without reversing the encoder actual value.		
<b>p1822</b>	<b>Power unit line phases monitoring tolerance time / PU ph monit t_tol</b>		
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32	<b>Calculated:</b> - <b>Dyn. index:</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> -
	<b>P-Group:</b> - <b>Not for motor type:</b> -	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> 500 [ms]	<b>Max</b> 540000 [ms]	<b>Factory setting</b> 1000 [ms]
<b>Description:</b>	Sets the tolerance time for line phase monitoring for blocksize power units. If a line phase fault is present for longer than this tolerance time, then a corresponding fault is output.		
<b>Dependency:</b>	Refer to: F30011		
<b>Notice:</b>	When operating with a failed line phase, depending on the active power, values higher than the default value can either immediately damage the power unit or damage it over the long term.		
<b>Note:</b>	For the setting p1822 = maximum value, line phase monitoring is deactivated.		
<b>p1825</b>	<b>Converter valve threshold voltage / Threshold voltage</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation <b>Not for motor type:</b> -	<b>Unit group:</b> - <b>Scaling:</b> -	<b>Unit selection:</b> - <b>Expert list:</b> 1
	<b>Min</b> 0.0 [Vrms]	<b>Max</b> 100.0 [Vrms]	<b>Factory setting</b> 0.6 [Vrms]
<b>Description:</b>	Sets the threshold voltage drop of the valves (power semiconductor devices) to be compensated.		
<b>Note:</b>	The value is automatically calculated in the motor data identification routine.		

## 2 Parameters

### 2.2 List of parameters

---

<b>p1828</b>	<b>Compensation valve lockout time phase U / Comp t_lock ph U</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	1000000.00 [µs]	0.00 [µs]
<b>Description:</b>	Sets the valve lockout time to compensate for phase U.		
<b>Notice:</b>	Deadtime compensation is deactivated with p7003 = 2.		
<b>Note:</b>	The value is automatically calculated in the motor data identification routine. For type PM340 power units, the value is limited to 3.98 µs.		

---

<b>p1829</b>	<b>Compensation valve lockout time phase V / Comp t_lock ph V</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	1000000.00 [µs]	0.00 [µs]
<b>Description:</b>	Sets the valve lockout time to compensate for phase V.		
<b>Notice:</b>	Deadtime compensation is deactivated with p7003 = 2.		
<b>Note:</b>	For type PM340 power units, the value is limited to 3.98 µs.		

---

<b>p1830</b>	<b>Compensation valve lockout time phase W / Comp t_lock ph W</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	1000000.00 [µs]	0.00 [µs]
<b>Description:</b>	Sets the valve lockout time to compensate for phase W.		
<b>Notice:</b>	Deadtime compensation is deactivated with p7003 = 2.		
<b>Note:</b>	For type PM340 power units, the value is limited to 3.98 µs.		

---

<b>p1832</b>	<b>Dead time compensation current level / t_dead_comp I_lev</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [Arms]	10000.0 [Arms]	0.0 [Arms]
<b>Description:</b>	Sets the current level for the dead time compensation. Above the current level, the dead time - resulting from the converter switching delays - is compensated by a previously calculated constant value. If the relevant phase current setpoint falls below the absolute value defined by p1832, the corrective value for this phase is continuously reduced.		
<b>Dependency:</b>	The factory setting of p1832 is automatically set to 0.02 * rated drive converter current (r0207).		

---

<b>p1835[0...1]</b>	<b>Pulse frequency reduction switchover frequency shift / f_puls_red f_sw</b>				
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	0.00 [Hz]	800.00 [Hz]	0.00 [Hz]		
<b>Description:</b>	Frequency to shift the switchover frequency r1836 for pulse frequency reduction. The parameter value reduces the switchover frequency threshold with the same parameter index.				
<b>Index:</b>	[0] = Frequency limit 1 [1] = Frequency limit 2				
<b>Dependency:</b>	Refer to: r1836				
<b>r1836[0...1]</b>	<b>Pulse frequency reduction, switchover frequency / f_puls_red f_sw</b>				
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	- [Hz]	- [Hz]	- [Hz]		
<b>Description:</b>	Displays the frequency limits, under which the pulse frequency is automatically reduced. Starting from the parameterized pulse frequency p1800, the pulse frequency is reduced to the next possible one, if the frequency limits and an additional hysteresis are fallen below.				
<b>Index:</b>	[0] = Frequency limit 1 [1] = Frequency limit 2				
<b>Dependency:</b>	Refer to: p1810, p1835				
<b>Note:</b>	The pulse frequency reduction is not active for U/f control. A minimum clearance of 10 Hz is kept between the frequency thresholds, which cannot be fallen below when changing p1835. For index 0: Frequency limit for the first pulse frequency reduction (active for p1810.8 = 1). For index 1: Frequency limit for the second pulse frequency reduction (active for p1810.9 = 1).				
<b>r1837</b>	<b>Gating unit configuration / Gating unit config</b>				
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display for the configuration of the gating unit driver.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Modulation depth for a flying restart	Limited	Not limited	-
	01	Modulation depth for Vdc closed-loop control	Limited	Not limited	-
	02	Vdc_min controller	Active	Not active	-
	03	Motor data identification routine	Active	Not active	-
	04	Current offset calculation	Active	Not active	-
	05	Simulation mode	Active	Not active	-
	06	Reverse the output phase sequence	Active	Not active	-
	07	CCW dir of rot	Active	Not active	-
	08	Synchronization (bypass)	Active	Not active	-
	09	F07801 monitor by application	Active	Not active	-
	10	Chassis Drive active	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

11	Short-circuit test active	No	Yes	-
12	FL modulation prohibited	Yes	No	-
13	F3E present	Yes	No	-
14	Angle prerotation (advance) active in SW	Yes	No	-
15	Power unit with PS interface	Yes	No	-
16	Current measurement oversampling active	Yes	No	-
17	Actual value averaging temporarily suppressed	Yes	No	-
18	Modulation depth limiting	Yes	No	-
19	Reduced DC link capacitance (without F3E)	Yes	No	-
20	The setpoint is not reset	Yes	No	-
21	Voltage calibration active	Yes	No	-
22	Vdc correction deactivated in the gating unit	Yes	No	-

#### p1840[0...n] Actual value correction configuration / ActVal\_corr conf

VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 bin

**Description:** Sets the configuration of the actual value correction.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Actual value correction deactivated	Yes	No	-
	01	Compares the integrals from modulator and setpoint	Yes	No	-

**Dependency:** Refer to: p1802

**Note:** During operation (pulses enabled) the configuration cannot be changed by changing over drive data sets.

#### r1841 Actual value correction status word / ActVal\_corr status

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the status of actual value correction.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Hardware for the actual value correction detected	Yes	No	-
	01	Automatic shutdown (too many switching instants)	Yes	No	-
	02	Integral scaled to half the gating unit clock cycle freq.	Yes	No	-
	03	Actual value correction temporarily suppressed	Yes	No	-
	14	Reserved	Yes	No	-
	15	Actual value correction active	Yes	No	-

<b>p1845[0...n]</b>	<b>Actual value correction evaluation factor Lsig / ActVal_cor ev Lsig</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	10.00	1.00
<b>Description:</b>	Sets the weighting factor for the leakage inductance of the L-R element of the actual value correction.		
<b>Dependency:</b>	Refer to: p0391, p0392, p0393		
<b>Note:</b>	The load-dependent adaptation of the leakage inductance of the current actual value correction is defined using p0391 ... p0393.		
<b>p1846[0...n]</b>	<b>Actual value correction damping factor / ActV_corr D_factor</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	10.00	1.00
<b>Description:</b>	Sets the damping factor for the actual value correction. The factor multiplies the T0/Tsig ratio in the feedback branch of the LR element.		
<b>r1848[0...5]</b>	<b>Actual value correction phase currents / ActVal_corr I_ph</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays phase correction currents as well as the drive converter phase currents		
<b>Index:</b>	[0] = Harmonics phase U [1] = Harmonics phase V [2] = Harmonics phase W [3] = Measured value phase U [4] = Measured value phase V [5] = Measured value phase W		
<b>r1849[0...5]</b>	<b>Actual value correction phase voltages / ActVal_corr U_ph</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the phase correction voltages and and the drive converter phase voltages		
<b>Index:</b>	[0] = Harmonics phase U [1] = Harmonics phase V [2] = Harmonics phase W [3] = Measured value phase U [4] = Measured value phase V [5] = Measured value phase W		

<b>p1900</b>	<b>Motor data identification and rotating measurement / MotID and rot meas</b>		
VECTOR_G	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	2
<b>Description:</b>	<p>Sets the motor data identification and speed controller optimization.</p> <p>p1900 = 0: Function inhibited.</p> <p>p1900 = 2: Induction motors --&gt; set p1910 = 1 and p1960 = 0 Permanent-magnet or separately excited synchronous motors --&gt; set p1910 = 1, p1990 = 1 and p1960 = 0 When the drive enable signals are present, a motor data identification routine is carried out at standstill with the next switch-on command. Current flows through the motor which means that it can align itself by up to a quarter of a revolution.</p> <p>For permanent-magnet or separately excited synchronous motors, the encoder is adjusted with the next switch-on command. The motor must be free to rotate and rotates through 1.5 revolutions of the motor encoder.</p>		
<b>Value:</b>	<p>0: Inhibited</p> <p>2: Identifying motor data (at standstill)</p>		
<b>Dependency:</b>	<p>In the simulation mode, the parameter cannot be written into.</p> <p>When selecting the motor data identification routine, the drive data set changeover is suppressed.</p> <p>Refer to: p1272, p1300, p1910</p> <p>Refer to: F07990, A07991</p>		
<b>Notice:</b>	<p>If there is a motor holding brake, it must be open (p1215 = 2).</p> <p>To permanently accept the determined settings they must be saved in a non-volatile fashion (p0971, p0977).</p> <p>It is not permissible to activate write protection during the motor identification (p7761).</p> <p>During the rotating measurement it is not possible to save the parameters (p0971, p0977).</p>		
<b>Note:</b>	<p>The motor and control parameters of the vector control are only optimally set when both measurements are carried out (initially at standstill, and then with the motor rotating). The measurement with rotating motor is not performed for p1300 &lt; 20 (U/f controls).</p> <p>An appropriate alarm is output when the parameter is set.</p> <p>The switch-on command must remain set during a measurement and after the measurement has been completed, the drive automatically resets it.</p> <p>The duration of the measurements can lie between 0.3 s and several minutes. This time is, for example, influenced by the motor size and the mechanical conditions.</p> <p>p1900 is automatically set to 0 after the motor data identification routine has been completed.</p> <p>If a reluctance motor has been parameterized, a pole position identification is carried out during the stationary measurement. As a consequence, faults that occur can also be assigned to the pole position identification.</p>		

<b>p1900</b>	<b>Motor data identification and rotating measurement / MotID and rot meas</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	2
<b>Description:</b>	<p>Sets the motor data identification and speed controller optimization.</p> <p>The motor identification should first be performed with the motor stationary (p1900 = 1, 2; also refer to p1910). Based on this, additional motor and control parameters can be determined using the motor data identification with the motor rotating (p1900 = 1, 3; also refer to p1960); not for p1300 &lt; 20.</p> <p>p1900 = 0: Function inhibited.</p>		

p1900 = 1:

Induction motors --> set p1910 = 1 and p1960 = 0, 1, 2 depending on p1300

Permanent-magnet or separately excited synchronous motors --> set p1910 = 1, p1990 = 1 and p1960 = 0, 1, 2 depending on p1300

When the drive enable signals are present, a motor data identification routine is carried out at standstill with the next switch-on command. Current flows through the motor which means that it can align itself by up to a quarter of a revolution.

For permanent-magnet or separately excited synchronous motors, the encoder is adjusted with the next switch-on command. The motor must be free to rotate and rotates through 1.5 revolutions of the motor encoder.

With the following switch-on command, a rotating motor data identification routine is carried out - and in addition, a speed controller optimization by making measurements at different motor speeds.

p1900 = 2:

Induction motors --> set p1910 = 1 and p1960 = 0

Permanent-magnet or separately excited synchronous motors --> set p1910 = 1, p1990 = 1 and p1960 = 0

When the drive enable signals are present, a motor data identification routine is carried out at standstill with the next switch-on command. Current flows through the motor which means that it can align itself by up to a quarter of a revolution.

For permanent-magnet or separately excited synchronous motors, the encoder is adjusted with the next switch-on command. The motor must be free to rotate and rotates through 1.5 revolutions of the motor encoder.

p1900 = 3:

Sets p1960 = 0, 1, 2 depending on p1300

This setting should only be selected if the motor data identification was already carried out at standstill.

When the drive enable signals are present, with the next switch-on command, a rotating motor data identification routine is carried out - and in addition, speed controller optimization by taking measurements at different motor speeds.

**Value:**

- 0: Inhibited
- 1: Identifying motor data and optimizing the speed controller
- 2: Identifying motor data (at standstill)
- 3: Optimizing the speed controller (in rotating operation)

**Dependency:**

In the simulation mode, the parameter cannot be written into.

When selecting the motor data identification routine, the drive data set changeover is suppressed.

Refer to: p1272, p1300, p1910, p1960, p1990

Refer to: A07980, A07981, F07982, F07983, F07984, F07985, F07986, A07987, F07988, F07990, A07991

**Notice:**

If there is a motor holding brake, it must be open (p1215 = 2).

To permanently accept the determined settings they must be saved in a non-volatile fashion (p0971, p0977).

It is not permissible to activate write protection during the motor identification (p7761).

During the rotating measurement it is not possible to save the parameters (p0971, p0977).

p1900 = 3:

This setting should only be selected if the motor data identification was already carried out at standstill.

**Note:**

The motor and control parameters of the vector control are only optimally set when both measurements are carried out (initially at standstill, and then with the motor rotating). The measurement with rotating motor is not performed for p1300 < 20 (U/f controls).

An appropriate alarm is output when the parameter is set.

The switch-on command must remain set during a measurement and after the measurement has been completed, the drive automatically resets it.

The duration of the measurements can lie between 0.3 s and several minutes. This time is, for example, influenced by the motor size and the mechanical conditions.

p1900 is automatically set to 0 after the motor data identification routine has been completed.

If a reluctance motor has been parameterized, a pole position identification is carried out during the stationary measurement. As a consequence, faults that occur can also be assigned to the pole position identification.

<b>p1901</b>		<b>Test pulse evaluation configuration / Test puls config</b>																						
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Motor identification <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 bin																					
<b>Description:</b>	Sets the configuration for the test pulse evaluation. Bit 00: Check for conductor-to-conductor short circuit once/always when the pulses are enabled. Bit 01: Check for ground fault once/always when the pulses are enabled. Bit 02: Activation of the tests selected using bit 00 and/or bit 01 each time the pulses are enabled																							
<b>Recommendation:</b>	If the ground fault test is incorrectly initiated because the motor is not at a complete standstill, then the pulse cancellation delay time (p1228) should be increased.																							
<b>Bit field:</b>	<table border="1"> <thead> <tr> <th>Bit</th> <th>Signal name</th> <th>1 signal</th> <th>0 signal</th> <th>FP</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Phase short-circuit test pulse active</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>01</td> <td>Ground fault detection test pulse active</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>02</td> <td>Test pulse at each pulse enable</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	FP	00	Phase short-circuit test pulse active	Yes	No	-	01	Ground fault detection test pulse active	Yes	No	-	02	Test pulse at each pulse enable	Yes	No	-			
Bit	Signal name	1 signal	0 signal	FP																				
00	Phase short-circuit test pulse active	Yes	No	-																				
01	Ground fault detection test pulse active	Yes	No	-																				
02	Test pulse at each pulse enable	Yes	No	-																				
<b>Dependency:</b>	The ground fault test is only possible when the motor is stationary, and is therefore only realized when flying restart is deactivated (p1200 = 0). When a sine-wave filter is connected, the short-circuit and the ground fault test are deactivated, as the filter could be excited by the test pulse. Refer to: p0287																							
<b>Note:</b>	If a conductor-to-conductor short-circuit is detected during the test, this is displayed in r1902.1. If a ground fault is detected during the test, this is displayed in r1902.2. For bit 02 = 0: If the test was successful once after POWER ON (see r1902.0), it is not repeated. For bit 02 = 1: The test is not only performed after POWER ON, but also each time the pulses are enabled.																							

<b>r1902</b>		<b>Test pulse evaluation status / Test puls ev stat</b>																																
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -																															
<b>Description:</b>	Displays the status of the test pulse evaluation.																																	
<b>Bit field:</b>	<table border="1"> <thead> <tr> <th>Bit</th> <th>Signal name</th> <th>1 signal</th> <th>0 signal</th> <th>FP</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Short-circuit test successfully performed</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>01</td> <td>Phase short-circuit detected</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>02</td> <td>Ground fault test successfully performed</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>03</td> <td>Ground fault detected</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>04</td> <td>Identification pulse width greater than the minimum pulse width</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	FP	00	Short-circuit test successfully performed	Yes	No	-	01	Phase short-circuit detected	Yes	No	-	02	Ground fault test successfully performed	Yes	No	-	03	Ground fault detected	Yes	No	-	04	Identification pulse width greater than the minimum pulse width	Yes	No	-			
Bit	Signal name	1 signal	0 signal	FP																														
00	Short-circuit test successfully performed	Yes	No	-																														
01	Phase short-circuit detected	Yes	No	-																														
02	Ground fault test successfully performed	Yes	No	-																														
03	Ground fault detected	Yes	No	-																														
04	Identification pulse width greater than the minimum pulse width	Yes	No	-																														
<b>Note:</b>	If the ground fault test was selected, but not successfully performed, then sufficient current was not be able to be established during the test pulses. For bit 04: A test pulse longer than one sampling time has occurred																																	

<b>p1905</b>		<b>Parameter tuning selection / Par tuning select</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	90	0	
<b>Description:</b>	<p>The fine encoder calibration should be started during the first commissioning or after the encoder is replaced. The fine calibration starts when the pulses are enabled and performs a rotating measurement (approximately 1 minute). In this case, a setpoint speed of at least 40 % of the motor rated speed must be entered, and the torque must be less than half of the motor rated torque.</p> <p>The phases of the fine calibration of displayed using alarm A07976.</p> <p>The fine calibration ends with the calculation of p0431 for the following pulse inhibit.</p> <p>p1905 is automatically set to 0 at the end of the fine calibration.</p>			
<b>Value:</b>	<p>0: Inactive 90: Fine encoder calibration</p>			
<b>Dependency:</b>	<p>If the motor encoder adjustment has not been performed (p3925.4 = 0) or the encoder calibration is activated (p1990 != 0), then encoder fine calibration is prevented.</p> <p>Refer to: p1272, p1910, p1960, p1990</p> <p>Refer to: A07976</p>			
<b>Notice:</b>	<p>During encoder fine calibration, the motor must be operated without a load - and if a motor holding brake is being used, this must be opened.</p>			
<b>Note:</b>	<p>For p1905 = 90 and with the pulses not enabled, the function is only executed the next time that the pulses are enabled.</p> <p>When selecting the encoder fine calibration, the changeover of the motor data sets is suppressed.</p>			

<b>p1909[0...n]</b>		<b>Motor data identification control word / MotID STW</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin		
<b>Description:</b>	Sets the configuration for the motor data identification.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Stator inductance estimate no measurement	Yes	No	-
	01	Cl.-loop current control w/ dead-beat controller	Yes	No	-
	02	Rotor time constant estimate no measurement	Yes	No	-
	03	Leakage inductance estimate no measurement	Yes	No	-
	04	Activates the identification dynamic leakage inductance	Yes	No	-
	05	Determine Tr and Lsig evaluation in the time range	Yes	No	-
	06	Activate vibration damping	Yes	No	-
	07	Deactivate vibration detection	Yes	No	-
	11	Deactivate pulse measurement Lq Ld	Yes	No	-
	12	Deactivate rotor resistance Rr measurement	Yes	No	-
	14	Deactivate valve interlocking time measurement	Yes	No	-
	15	Determine only stator resistance, valve voltage fault, dead time	Yes	No	-
	16	Short motor identification (lower quality)	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

17	Measurement without control parameter calculation	Yes	No	-
20	Estimate cable resistance	Yes	No	-
22	Only identify circle	Yes	No	-
23	Deactivate circle identification	Yes	No	-
24	Circle identification with 0 and 90 degrees	Yes	No	-
25	Deactivate gating unit switchover	Yes	No	-

**Note:**

The following applies to permanent-magnet synchronous motors:

Without de-selection in bit 11, in the closed-loop control mode, the direct inductance LD and the quadrature inductance Lq are measured at a low current.

When de-selecting with bit 11 or in the U/f mode, the stator inductance is measured at half the rated motor current.

If the stator inductance is not measured but is to be estimated, then bit 0 should be set and bit 11 should be de-selected.

#### p1910

#### Motor data identification selection / MotID selection

VECTOR\_G

**Can be changed:** T

**Calculated:** -

**Access level:** 2

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** Motor identification

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

28

1

**Description:**

Sets the motor data identification routine.

The motor data identification routine is carried out after the next switch-on command.

p1910 = 1:

All motor data and the drive converter characteristics are identified and then transferred to the following parameters:

p0350, p0354, p0356, p0357, p0358, p0360, p1825, p1828, p1829, p1830

After this, the control parameter p0340 = 3 is automatically calculated.

**Value:**

- 0: Inhibited
- 1: Complete identification (ID) and acceptance of motor data
- 2: Complete identification (ID) of motor data without acceptance
- 3: ID of the saturation characteristic and acceptance
- 4: ID of the saturation characteristic without acceptance
- 5: ID of dynamic leakage inductance Lsig (r1920) without acceptance
- 6: ID of lockout time (r1926) without acceptance
- 7: ID of stator resistance Rs (r1912) without acceptance
- 8: ID of stator inductance Ls (r1915) Rr (r1927) without acceptance
- 9: ID of rotor time constant Tr (r1913) without acceptance
- 10: ID of static leakage inductance Lsig (r1914) without acceptance
- 20: Voltage vector input
- 21: Voltage vector input without filter
- 22: Rectangular voltage vector input without filter
- 23: Triangular voltage vector input without filter
- 24: Rectangular voltage vector input with filter
- 25: Triangular voltage vector input with filter
- 26: Enter voltage vector with DTC correction
- 27: Enter voltage vector with AVC
- 28: Enter voltage vector with DTC + AVC correction

**Dependency:**

"Quick commissioning" must be carried out (p0010 = 1) before executing the motor data identification routine!

In the simulation mode, the parameter cannot be written into. When selecting the motor data identification routine, the drive data set changeover is suppressed.

Refer to: p1272, p1900

Refer to: F07990, A07991

**Notice:**

After the motor data identification (p1910 > 0) has been selected, alarm A07991 is output and a motor data identification routine is carried out as follows at the next switch-on command:

- current flows through the motor and a voltage is present at the drive converter output terminals.
- during the identification routine, the motor shaft can rotate through a maximum of half a revolution.
- however, no torque torque is generated.

**Note:** If there is a motor holding brake, it must be open (p1215 = 2).  
 To permanently accept the determined settings they must be saved in a non-volatile fashion (p0971, p0977).  
 When setting p1910, the following should be observed:  
 1. "With acceptance" means:  
 The parameters specified in the description are overwritten with the identified values and therefore have an influence on the controller setting.  
 2. "Without acceptance" means:  
 The identified parameters are only displayed in the range r1912 ... r1926. The controller settings remain unchanged.  
 3. p1910 = 3, 4, 5 can only be selected for induction motors.  
 4. For settings 27 and 28, the AVC configuration set using p1840 is active.  
 The switch-on command must remain set during a measurement and after the measurement has been completed, the drive automatically resets it. The duration of the measurements can lie between 0.3 s and several minutes. This time is mainly influenced by the motor size. At the end of the motor data identification, p1910 is automatically set to 0, if only the stationary measurement is selected, then p1900 is also reset to 0, otherwise, the rotating measurement is activated.

<b>p1911</b>		<b>Phases to be identified number / Ph to ident qty</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	1	3	1	
<b>Description:</b>	Sets the number of phases to be identified.			
<b>Value:</b>	1: 1 phase U 2: 2 phases U, V 3: 3 phases U, V, W			
<b>Note:</b>	When identifying with several phases, the accuracy increases and also the time it takes to make the measurement.			

<b>r1912[0...2]</b>		<b>Identified stator resistance / R_stator ident</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [ohm]	- [ohm]	- [ohm]	
<b>Description:</b>	Displays the identified stator resistance.			
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W			

<b>r1913[0...2]</b>		<b>Identified rotor time constant / T_rotor ident</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> PMSM	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [ms]	- [ms]	- [ms]	
<b>Description:</b>	Displays the identified rotor time constant.			
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W			

<b>r1914[0...2]</b>	<b>Identified total leakage inductance / L_total_leak ident</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the identified total leakage inductance.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		
<b>r1915[0...2]</b>	<b>Identified nominal stator inductance / L_stator ident</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the nominal stator inductance identified.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		
<b>r1916[0...2]</b>	<b>Identified stator inductance 1 / L_stator 1 ident</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the stator inductance identified for the 1st point of the saturation characteristic.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		
<b>r1917[0...2]</b>	<b>Identified stator inductance 2 / L_stator 2 ident</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the stator inductance identified for the 2nd point of the saturation characteristic.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		

<b>r1918[0...2]</b>	<b>Identified stator inductance 3 / L_stator 3 ident</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the stator inductance identified for the 3rd point of the saturation characteristic.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		
<b>r1919[0...2]</b>	<b>Identified stator inductance 4 / L_stator 4 ident</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the stator inductance identified for the 4th point of the saturation characteristic.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		
<b>r1920[0...2]</b>	<b>Identified dynamic leakage inductance / L_leak dyn ident</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the identified dynamic total leakage inductance.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		
<b>r1921[0...2]</b>	<b>Identified dynamic leakage inductance 1 / L_leak 1 dyn id</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the identified dynamic leakage inductance 1.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		

<b>r1922[0...2]</b>	<b>Identified dynamic leakage inductance 2 / L_leak 2 dyn id</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the identified dynamic leakage inductance 2.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		
<b>r1923[0...2]</b>	<b>Identified dynamic leakage inductance 3 / L_leak 3 dyn id</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the identified dynamic leakage inductance 3.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		
<b>r1924[0...2]</b>	<b>Identified dynamic leakage inductance 4 / L_leak 4 dyn id</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the identified dynamic leakage inductance 4.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		
<b>r1925[0...2]</b>	<b>Identified threshold voltage / U_threshold ident</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]
<b>Description:</b>	Displays the identified IGBT threshold voltage.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		

<b>r1926[0...2]</b>	<b>Identified effective valve lockout time / t_lock_valve id</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [µs]	- [µs]	- [µs]
<b>Description:</b>	Displays the identified effective valve lockout time.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		
<b>r1927[0...2]</b>	<b>Identified rotor resistance / R_rotor ident</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ohm]	- [ohm]	- [ohm]
<b>Description:</b>	Displays identified rotor resistance (on separately excited synchronous motors: damping resistance).		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		
<b>r1929[0...2]</b>	<b>Identified cable resistance / R_cable ident</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ohm]	- [ohm]	- [ohm]
<b>Description:</b>	Displays the identified cable resistance.		
<b>Index:</b>	[0] = Phase U [1] = Phase V [2] = Phase W		
<b>r1934[0...9]</b>	<b>q inductance identified / Lq ident</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mH]	- [mH]	- [mH]
<b>Description:</b>	Displays the identified (differential) q-inductance.		
<b>Dependency:</b>	Refer to: r1935, p1959, p1960		
<b>Note:</b>	The Lq characteristic consists of the value pairs from p1934 and p1935 with the same index. This value corresponds to the value of the total leakage inductance (r0377).		

<b>r1935[0...9]</b>	<b>q inductance identification current / Lq I_ident</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the identification current to identify the q inductance ([0...9]).		
<b>Dependency:</b>	Refer to: r1934, p1959, p1960		
<b>Note:</b>	The Lq characteristic consists of the value pairs from r1934 and r1935 with the same index.		

<b>p1959[0...n]</b>	<b>Rotating measurement configuration / Rot meas config</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 0001 1111 bin

**Description:** Sets the configuration of the rotating measurement.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Enc test active	Yes	No	-
	01	Saturation characteristic identification	Yes	No	-
	02	Moment of inertia identification	Yes	No	-
	03	Re-calculates the speed controller parameters	Yes	No	-
	04	Speed controller optimization (vibration test)	Yes	No	-
	05	q leakage inductance ident. (for current controller adaptation)	Yes	No	-
	11	Do not change the controller parameters during the measurement	Yes	No	-
	12	Measurement shortened	Yes	No	-
	13	After measurement direct transition into operation	Yes	No	-
	14	Calculate speed actual value smoothing time	Yes	No	-

**Dependency:** Refer to: F07988

**Note:** The encoder is only tested if the rotating measurement with encoder is selected (p1960 = 2).

The following parameters are influenced for the individual optimization steps:

Bit 00: None

Bit 01: p0320, p0360, p0362 ... p0369

Bit 02: p0341, p0342

Bit 03: p1400.0, p1458, p1459, p1460, p1462, p1463, p1470, p1472, p1496

Bit 04: Dependent on p1960

Bit 05: p0391, p0392, p0393, p1402.2 only for induction motors

p1960 = 1, 3: p1458, p1459, p1470, p1472, p1496, p1400.0

p1960 = 2, 4: p1458, p1459, p1460, p1462, p1496, p1461, p1463

The identification of the q leakage inductance can only be carried out for unloaded motors or motors with a low load (load approx. 30% below the rated motor torque). Only then is a current controller adaptation (p0391 ... p0393) parameterized if the q-leakage inductance under no-load conditions is at least 30 % higher than the total leakage inductance (p0356, p0358).

For bit 11 = 1:

Bits 02, 03, 04 no longer have any effect. It makes sense to set bit 11 if the speed controller and its adaptation were already set before the measurement.

For bit 12 = 1:

The selection only has an effect on the measurement p1960 = 1, 2. For the shortened measurement, the magnetizing current and moment of inertia are determined with a somewhat lower accuracy.

For bit 13 = 1:

After the measurement has been completed, the system immediately goes into closed-loop speed controlled operation.

<b>p1960</b>	<b>Rotating measurement selection / Rot meas sel</b>		
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> Motor identification <b>Not for motor type:</b> REL <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 4	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	<p>Sets the rotating measurement.</p> <p>The rotating measurement is carried out after the next switch-on command.</p> <p>The setting possibilities of the parameter depend on the open-loop/closed-loop control mode (p1300).</p> <p>p1300 &lt; 20 (U/f open-loop control):            It is not possible to select rotating measurement or speed controller optimization.</p> <p>p1300 = 20, 22 (encoderless operation):            Only rotating measurement or speed controller optimization can be selected in the encoderless mode.</p> <p>p1300 = 21, 23 (operation with encoder):            Both versions (encoderless and with encoder) of the rotating measurement and speed controller optimization can be selected.</p>		
<b>Value:</b>	0: Inhibited 1: Rotating measurement in encoderless operation 2: Rotating measurement with encoder 3: Speed controller optimization in encoderless operation 4: Speed controller optimization with encoder		
<b>Dependency:</b>	<p>Before the rotating measurement is carried out, the motor data identification routine (p1900, p1910, r3925) should have already been done.</p> <p>In the simulation mode, a value of 1 cannot be written into the parameter.</p> <p>When selecting the rotating measurement, the drive data set changeover is suppressed.</p> <p>When selecting rotating measurement (with the exception for p1959.13 = 1) the following BICO parameters are set to standard values, and after the measurement has been completed, are reset back to the original parameter assignments:            p1020 ... p1023, p1070, p1075, p1138, p1139, p1140 ... p1143, p1155, p1160, p1437, p1476, p1477            Refer to: p1272, p1300, p1900, p1959, p1967, r1968            Refer to: A07987</p>		
<b>Danger:</b> 	<p>For drives with a mechanical system that limits the distance moved, it must be ensured that this is not reached during the rotating measurement. If this is not the case, then it is not permissible that the measurement is carried out.</p>		
<b>Notice:</b>	<p>If there is a motor holding brake, it must be open (p1215 = 2).</p> <p>To permanently accept the determined settings they must be saved in a non-volatile fashion (p0971, p0977).</p> <p>During the rotating measurement it is not possible to save the parameters (p0971, p0977).</p>		
<b>Note:</b>	<p>When the rotating measurement is activated, it is not possible to save the parameters (p0971, p0977).</p> <p>Parameter changes are automatically made for the rotating measurement (e.g. p1120); this is the reason that up to the end of the measurement, and if no faults are present, no manual changes should be made.</p> <p>The ramp-up and ramp-down times (p1120, p1121) are limited, for the rotating measurement, to 900 s.</p> <p>For speed controller optimization with encoder (p1960 = 2, 4), the speed controller for encoderless operation is also pre-assigned (p1470, p1472).</p> <p>Depending on whether the speed controller optimization is carried out with or without encoder, different Kp/Tn adaptations of the speed controller are set (p1464, p1465). If the drive should be controlled with as well as without speed encoder, then we recommend the use of two drive data sets (p0180). These can then be executed with different speed controller adaptations.</p>		

<b>p1961</b>	<b>Saturation characteristic speed to determine / Sat_char n determ</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	26 [%]	75 [%]	40 [%]
<b>Description:</b>	Sets the speed to determine the saturation characteristic and the encoder test. The percentage value is referred to p0310 (rated motor frequency).		
<b>Dependency:</b>	Refer to: p0310, p1959 Refer to: F07983		
<b>Note:</b>	The saturation characteristics should be determined at an operating point with the lowest possible load.		
<b>r1962[0...4]</b>	<b>Saturation characteristic magnetizing current / Sat_char I_mag</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the magnetizing currents of the identified saturation characteristic. The values are referred to r0331. After they have been determined, the values are transferred to p0366 ... p0369.		
<b>Index:</b>	[0] = Value 1 [1] = Value 2 [2] = Value 3 [3] = Value 4 [4] = Value 5		
<b>Dependency:</b>	Refer to: r0331		
<b>r1963[0...4]</b>	<b>Saturation characteristic magnetizing inductance / Sat_char L_main</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> PMSM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the magnetizing inductances of the identified saturation characteristic. The values are referred to r0382.		
<b>Index:</b>	[0] = Value 1 [1] = Value 2 [2] = Value 3 [3] = Value 4 [4] = Value 5		
<b>Dependency:</b>	Refer to: r0382		

<b>r1964[0...4]</b>		<b>Saturation characteristic rotor flux / Sat_char rot flux</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor identification <b>Not for motor type:</b> PMSM, REL <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [%]	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]	
<b>Description:</b>	Displays the rotor flux values of the identified saturation characteristic. After they have been determined, the values are transferred to p0362 ... p0365.			
<b>Index:</b>	[0] = Value 1 [1] = Value 2 [2] = Value 3 [3] = Value 4 [4] = Value 5			
<b>p1965</b>		<b>Speed_ctrl_opt speed / n_opt speed</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor identification <b>Not for motor type:</b> REL <b>Min</b> 10 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 75 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 40 [%]	
<b>Description:</b>	Sets the speed for the identification of the moment of inertia and the vibration test. Induction motor: The percentage value is referred to p0310 (rated motor frequency). Synchronous motor: The percentage value is referred to the minimum from p0310 (rated motor frequency) and p1082 (maximum speed).			
<b>Dependency:</b>	Refer to: p0310, p1959 Refer to: F07984, F07985			
<b>Note:</b>	In order to calculate the inertia, sudden speed changes are carried out - the specified value corresponds to the lower speed setpoint. This value is increased by 20 % for the upper speed value. The q leakage inductance (refer to p1959.5) is determined at zero speed and at 50 % of p1965 - however, with a maximum output frequency of 15 Hz and at a minimum of 10% of the rated motor speed.			
<b>p1967</b>		<b>Speed_ctrl_opt dynamic factor / n_opt dyn_factor</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor identification <b>Not for motor type:</b> REL <b>Min</b> 1 [%]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 400 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 100 [%]	
<b>Description:</b>	Sets the dynamic response factor for speed controller optimization. After optimization, the dynamic response achieved is displayed in r1968.			
<b>Dependency:</b>	Refer to: p1959, r1968 Refer to: F07985			
<b>Note:</b>	For a rotating measurement, this parameter can be used to optimize the speed controller. p1967 = 100 % --> speed controller optimization according to a symmetric optimum. p1967 > 100 % --> optimization with a higher dynamic response (Kp higher, Tn lower). If the actual dynamic response (see r1968) is significantly reduced with respect to the required dynamic response (p1967), then this can be as a result of mechanical load oscillations. If, in spite of this load behavior, a higher dynamic response is required, then the oscillation test (p1959.4 = 0) should be deactivated and the measurement repeated.			

## 2 Parameters

### 2.2 List of parameters

<b>r1968</b>	<b>Speed_ctrl_opt dynamic factor actual / n_opt dyn_fact act</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor identification <b>Not for motor type:</b> REL <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	Displays the dynamic factor which is actually achieved for the vibration test		
<b>Dependency:</b>	Refer to: p1959, p1967 Refer to: F07985		
<b>Note:</b>	This dynamic factor only refers to the control mode of the speed controller set in p1960.		
<b>r1969</b>	<b>Speed_ctrl_opt moment of inertia determined / n_opt M_inert det</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor identification <b>Not for motor type:</b> REL <b>Min</b> - [kgm <sup>2</sup> ]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 25_1 <b>Scaling:</b> - <b>Max</b> - [kgm <sup>2</sup> ]	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> p0100 <b>Expert list:</b> 1 <b>Factory setting</b> - [kgm <sup>2</sup> ]
<b>Description:</b>	Displays the determined moment of inertia of the drive. After it has been determined, the value is transferred to p0341, p0342.		
<b>Dependency:</b>	IEC drives (p0100 = 0): unit kg m <sup>2</sup> NEMA drives (p0100 = 1): unit lb ft <sup>2</sup> Refer to: p0341, p0342, p1959 Refer to: F07984		
<b>r1970[0...1]</b>	<b>Speed_ctrl_opt vibration test vibration frequency determined / n_opt f_vib det</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor identification <b>Not for motor type:</b> REL <b>Min</b> - [Hz]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [Hz]	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [Hz]
<b>Description:</b>	Displays the vibration frequencies determined by the vibration test.		
<b>Index:</b>	[0] = Frequency low [1] = Frequency high		
<b>Dependency:</b>	Refer to: p1959 Refer to: F07985		
<b>r1971[0...1]</b>	<b>Speed_ctrl_opt vibration test standard deviation determined / n_opt std_dev det</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor identification <b>Not for motor type:</b> REL <b>Min</b> - [Hz]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [Hz]	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [Hz]
<b>Description:</b>	Displays the standard deviations of the vibration frequencies determined by the vibration test		
<b>Index:</b>	[0] = Standard deviation of low frequency [1] = Standard deviation of high frequency		
<b>Dependency:</b>	Refer to: p1959 Refer to: F07985		

<b>r1972[0...1]</b>	<b>Speed_ctrl_opt vibration test number of periods determined / n_opt per_qty det</b>				
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the period number determined by the vibration test.				
<b>Index:</b>	[0] = No. of periods of the low frequency [1] = No. of periods of the high frequency				
<b>Dependency:</b>	Refer to: p1959 Refer to: F07985				
<b>r1973</b>	<b>Rotating measurement encoder test pulse number determined / n_opt puls no. det</b>				
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the number of pulses determined during the vibration test.				
<b>Note:</b>	A negative signal indicates an incorrect polarity of the encoder signal.				
<b>p1974</b>	<b>Speed_ctrl_opt saturation characteristic rotor flux maximum / n_opt rot_fl max</b>				
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> PMSM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	104 [%]	120 [%]	120 [%]		
<b>Description:</b>	Sets the maximum flux setpoint to measure the saturation characteristic.				
<b>r1979.0...12</b>	<b>BO: Speed_ctrl_opt status / n_opt status</b>				
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status to check and monitor the states of speed controller optimization.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Speed controller optimization activated	Yes	No	-
	01	Speed controller optimization completed	Yes	No	-
	02	Speed controller optimization interrupted	Yes	No	-
	04	Enc test active	Yes	No	-
	05	Saturation char. identification active	Yes	No	-
	06	Moment of inertia identification active	Yes	No	-
	07	Recalc. speed controller parameters active	Yes	No	-
	08	Speed controller vibration test active	Yes	No	-
	09	Magnetizing inductance adapt. active	Yes	No	-
	10	Operation with encoder after encoderless operation	Yes	No	-
	11	q-leakage inductance identification	Yes	No	-
	12	Moment of inertia estimator inhibited	Yes	No	-

p1980[0...n]	PolID technique / PolID technique		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> Motor identification <b>Not for motor type:</b> ASM <b>Min</b> 1	<b>Calculated:</b> CALC_MOD_REG <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 12	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 4
<b>Description:</b>	Sets the pole position identification technique. The current magnitudes are limited to the rated power unit values. p1980 = 1, 8: The current magnitude is set using p0329. p1980 = 4, 6: The current magnitude of the first measurement section is set using p0325, the second using p0329. p1980 = 10: The rated motor current is impressed to align. p1980 = 12: The induced stator voltage is sensed using a VSM and evaluated. This rotor position identification technique can only be used for separately excited synchronous motors with incremental encoder.		
<b>Value:</b>	1: Voltage pulsing 1st harmonic 4: Voltage pulsing 2-stage 6: Voltage pulsing 2-stage inverse 8: Voltage pulsing 2nd harmonic, inverse 10: DC current injection 12: Rotor position sensing with VSM for SESM w/ incremental encoder		
<b>Dependency:</b>	When commissioning a catalog motor, the technique is automatically selected depending on the motor type being used. In the simulation mode, the parameter cannot be written into. Refer to: p0325, p0329, p1272, p1780 Refer to: F07969		
<b>Note:</b>	For p1980 = 1, 4, 6, 8: Voltage pulse technique cannot be applied to separately excited synchronous motors (p0300 = 5) and for for operation with sine-wave output filters (p0230). For p1980 = 12: This technique can only be applied for separately excited synchronous motors (SESM) with voltage measurement (VSM). The rotor position identification technique (p1980 = 12) cannot be used for permanent-magnet synchronous motors.		
p1982[0...n]	PolID selection / PolID selection		
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> Motor identification <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 2	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Activates the pole position identification routine to determine the commutation angle and to carry out a plausibility check.		
<b>Value:</b>	0: Pole position identification off 1: Pole position identification for commutation 2: Pole position identification for plausibility check		
<b>Recommendation:</b>	For p1982 = 1: This is used for synchronous motors with motor encoder without absolute data. The information/data regarding the absolute commutation angle is supplied via a track C/D, Hall sensors, an absolute encoder or from the pole position identification routine. For separately excited synchronous motors, the position identification is realized using the voltage measurement of a Voltage Sensing Module VSM (p1980 = 12). If there is no VSM then the setting is not possible.		

For p1982 = 2:

This is used for synchronous motor with motor encoder with absolute data to check this data.

With p1982 = 2, each time the pulses are enabled it is checked whether the absolute position supplied from the encoder does not exceed a deviation of 45 degrees to the identified pole wheel position.

Not possible for separately excited synchronous motors.

**Dependency:** Refer to: p0325, p0329, p1980, r1984, r1985, r1987, p1990

**Note:** For encoderless operation, the pole position identification routine is selected with p1780.6

---

<b>r1984</b>	<b>PoIID angular difference / PoIID ang diff</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°]	- [°]	- [°]

**Description:** Displays the angular difference between the actual electrical commutation angle and the angle determined by the pole position identification.

**Dependency:** Refer to: p0325, p0329, p1980, p1982, r1985, r1987, p1990

**Note:** PoIID: Pole position identification

When the pole position identification routine is executed several times using p1983, the spread of the measured values can be determined using this value. At the same position, the spread should be less than 2 degrees electrical.

---

<b>r1985</b>	<b>PoIID saturation curve / PoIID sat_char</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]

**Description:** Displays the saturation characteristic of the pole position identification routine (saturation technique).

Displays the current characteristic of the pole position identification routine (elasticity technique).

**Dependency:** Refer to: p0325, p0329, p1980, p1982, r1984, r1987, p1990

**Note:** PoIID: Pole position identification

Regarding the saturation technique:

The values for the characteristic of the last saturation-based pole position identification routine are output every 1 ms in order to record signals (e.g. trace).

---

<b>r1987</b>	<b>PoIID trigger characteristic / PoIID trig_char</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]

**Description:** Displays the trigger characteristic of the pole position identification routine.

The values for the characteristic of the last pole position identification routine are output every 1 ms in order to record signals (e.g. trace).

The values for trigger characteristic and saturation characteristic are always output in synchronism from a time perspective.

**Dependency:** Refer to: p0325, p0329, p1980, p1982, r1984, r1985, p1990

**Note:** PoIID: Pole position identification

The following information and data can be taken from the trigger characteristic.

- the value -100% marks the angle at the start of the measurement.

- the value +100 % marks the commutation angle determined from the pole position identification routine.

<b>p1990 Encoder adjustment determine angular commutation offset / Enc_adj det ang</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0
<b>Description:</b>	<p>This function is only required for synchronous motors and can be started when commissioning for the first time or after replacing an encoder. The function acts on the active motor data set.</p> <p>Alarm A07971 is output while the angular commutation offset is being determined. p1990 is automatically set to 0 after the angular commutation offset has been determined.</p> <p>For p1990 = 1 (encoder adjustment with transfer), the following applies: The angular commutation offset is determined and transferred into p0431.</p> <p>For p1990 = 2 (encoder adjustment for checking), the following applies: The angular commutation offset is determined and is not transferred into p0431. For a deviation of more than 6 ° electrical, fault F07413 is output.</p> <p>For p1990 = 3 (encoder adjustment in operation), the following applies: PolID procedure runs before the zero mark detection. The angular commutation offset is determined and transferred into p0431. A fine adjustment (p1905) is then optionally possible.</p>		
<b>Value:</b>	<p>0: Deactivated 1: Activated with transfer 2: Activated for checking 3: Activates encoder adjustment in operation</p>		
<b>Dependency:</b>	<p>In the simulation mode, the parameter cannot be written into.</p> <p>When selecting the encoder adjustment, the changeover of the drive data sets is suppressed.</p> <p>Encoder adjustment is only carried out if the function module for "speed/torque control" is activated (r0108.2 = 1). Refer to: p0325, p0329, p0431, p1272, p1900</p>		
<b>Caution:</b>	<p>When the encoder is being adjusted, the motor must be operated without a load - and if a motor holding brake is being used, this must be opened.</p>		
			
<b>p1991[0...n] Motor changeover angular commutation correction / Ang_com corr</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-180 [°]	180 [°]	0 [°]
<b>Description:</b>	Sets the angle that is added to the commutating angle.		
<b>Caution:</b>	If the angular correction is not correctly set, when changing over and with closed-loop torque control, the motor can accelerate to high speeds in spite of the fact that a setpoint of zero has been entered.		
			
<b>p1998[0...n] PolID circle center point / PolID circ center</b>			
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_CON	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0000 [A]	10000.0000 [A]	0.0000 [A]
<b>Description:</b>	Current offset determined to measure the speed (RESM)		
<b>Dependency:</b>	Refer to: p1980, p1982, r1984, r1985, r1987, p1990		

<b>p1999[0...n]</b>	<b>Ang. commutation offset calibr. and PolID scaling / Com_ang_offs scal</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10 [%]	5000 [%]	100 [%]
<b>Description:</b>	Sets the scaling for the runtime of the automatic encoder calibration and of the pole position identification technique in which the current is injected.		
<b>Dependency:</b>	Refer to: p0341, p0342		
<b>Caution:</b>	For p1999 > 100 % (setting large moments of inertia) the following applies: There is no locked rotor monitoring (F07970 fault value 2). The plausibility check of the encoder signal (F07970 fault value 4) only checks the sign.		
			
<b>Note:</b>	For high moments of inertia, it is practical to scale the runtime of the calibration higher.		
<b>p2000</b>	<b>Reference speed reference frequency / n_ref f_ref</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	6.00 [rpm]	210000.00 [rpm]	3000.00 [rpm]
<b>Description:</b>	Sets the reference quantity for speed and frequency. All speeds or frequencies specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word). The following applies: Reference frequency (in Hz) = reference speed (in ((rpm) / 60) x pole pair number)		
<b>Dependency:</b>	Refer to: p2001, p2002, p2003, r2004		
<b>Note:</b>	For the automatic calculation (p0340 = 1, p3900 > 0) an appropriate pre-assignment is only made if the parameter is not inhibited from being overwritten using p0573 = 1. If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor. Example 1: The signal of an analog input (e.g. r4055[0]) is connected to a speed setpoint (e.g. p1070[0]). The actual percentage input value is cyclically converted into the absolute speed setpoint using the reference speed (p2000). Example 2: The setpoint from PROFIBUS (r2050[1]) is connected to a speed setpoint (e.g. p1070[0]). The actual input value is cyclically converted into a percentage value via the pre-specified scaling 4000 hex. This percentage value is converted to the absolute speed setpoint via reference speed (p2000).		
<b>p2000</b>	<b>Reference frequency / f_ref</b>		
B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.10 [Hz]	1000.00 [Hz]	50.00 [Hz]
<b>Description:</b>	Sets the reference quantity for the frequency. All frequencies specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word). The following applies: Reference frequency (in Hz)		

<b>p2000</b>	<b>Reference speed reference frequency / n_ref f_ref</b>		
ENC	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	6.00 [rpm]	210000.00 [rpm]	3000.00 [rpm]
<b>Description:</b>	Sets the reference quantity for speed and frequency. All speeds or frequencies specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
<b>Note:</b>	If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor.		
<b>p2000</b>	<b>Reference velocity reference frequency / v_ref f_ref</b>		
ENC (Lin_enc)	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.60 [m/min]	600.00 [m/min]	120.00 [m/min]
<b>Description:</b>	Sets the reference quantity for velocity and frequency. All velocities or frequencies specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word). The following applies: Reference frequency (in Hz) = reference velocity (in (m/min) / 60)		
<b>Note:</b>	If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor.		
<b>p2001</b>	<b>Reference voltage / Reference voltage</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10 [Vrms]	100000 [Vrms]	1000 [Vrms]
<b>Description:</b>	Sets the reference quantity for voltages. All voltages specified as relative value are referred to this reference quantity. This also applies for direct voltage values (= rms value) like the DC link voltage. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word). <b>Note:</b> This reference quantity also applies to direct voltage values. It is not interpreted as rms value, but as DC voltage value.		
<b>Note:</b>	For the automatic calculation (p0340 = 1, p3900 > 0) an appropriate pre-assignment is only made if the parameter is not inhibited from being overwritten using p0573 = 1. If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor. For infeed units, the parameterized device supply voltage (p0210) is pre-assigned as the reference quantity. <b>Example:</b> The actual value of the DC link voltage (r0070) is connected to a test socket (e.g. p0771[0]). The actual voltage value is cyclically converted into a percentage of the reference voltage (p2001) and output according to the parameterized scaling.		

<b>p2002</b>		<b>Reference current / I_ref</b>	
VECTOR_G, B_INF	<b>Can be changed:</b> T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0.10 [Arms]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 100000.00 [Arms]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 100.00 [Arms]
<b>Description:</b>	Sets the reference quantity for currents. All currents specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
<b>Notice:</b>	If various DDS are used with different motor data, then the reference quantities remain the same as these are not changed over with the DDS. The resulting conversion factor should be taken into account (e.g. for trace records). Example: p2002 = 100 A Reference quantity 100 A corresponds to 100 % p0305[0] = 100 A Rated motor current 100 A for MDS0 in DDS0 --> 100 % corresponds to 100 % of the rated motor current p0305[1] = 50 A Rated motor current 50 A for MDS1 in DDS1 --> 100 % corresponds to 200 % of the rated motor current		
<b>Note:</b>	For the automatic calculation (p0340 = 1, p3900 > 0) an appropriate pre-assignment is only made if the parameter is not inhibited from being overwritten using p0573 = 1. SERVO: Pre-assigned value for p0338 > 0.001 is p0338, otherwise 2 * p0305. VECTOR: Pre-assigned value is p0640. If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor. For infeed units, the rated line current, which is obtained from the rated power and parameterized rated line supply voltage (p2002 = r0206 / p0210 / 1.73) is pre-assigned as the reference quantity. Example: The actual value of a phase current (r0069[0]) is connected to a test socket (e.g. p0771[0]). The actual current value is cyclically converted into a percentage of the reference current (p2002) and output according to the parameterized scaling.		

<b>p2003</b>		<b>Reference torque / M_ref</b>	
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0.01 [Nm]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> - <b>Unit group:</b> 7_2 <b>Scaling:</b> - <b>Max</b> 20000000.00 [Nm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 1.00 [Nm]
<b>Description:</b>	Sets the reference quantity for torque. All torques specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
<b>Note:</b>	For the automatic calculation (p0340 = 1, p3900 > 0) an appropriate pre-assignment is only made if the parameter is not inhibited from being overwritten using p0573 = 1. SERVO: Pre-assigned value for p0338 and p0334 > 0.001 is p0338 * p0334, otherwise 2 * p0333. VECTOR: Pre-assigned value is 2 * p0333. If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor.		

## 2 Parameters

### 2.2 List of parameters

Example:

The actual value of the total torque (r0079) is connected to a test socket (e.g. p0771[0]). The actual torque is cyclically converted into a percentage of the reference torque (p2003) and output according to the parameterized scaling.

<b>r2004</b>	<b>Reference power / P_ref</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> 14_10	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [kW]	- [kW]	- [kW]
<b>Description:</b>	Displays the reference quantity for power. All power ratings specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
<b>Dependency:</b>	This value is calculated as follows: Infeed: Calculated from voltage times current. Closed-loop control: Calculated from torque times speed. Refer to: p2000, p2001, p2002, p2003		
<b>Note:</b>	If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor. The reference power is calculated as follows: - $2 * \text{Pi} * \text{reference speed} / 60 * \text{reference torque (motor)}$ - $\text{reference voltage} * \text{reference current} * \text{root}(3)$ (infeed)		
<b>p2005</b>	<b>Reference angle / Reference angle</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	90.00 [°]	180.00 [°]	90.00 [°]
<b>Description:</b>	Sets the reference quantity for angle. All angles specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
<b>Note:</b>	For the automatic calculation (p0340 = 1, p3900 > 0) an appropriate pre-assignment is only made if the parameter is not inhibited from being overwritten using p0573 = 1. If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor.		
<b>p2006</b>	<b>Reference temp / Ref temp</b>		
VECTOR_G, B_INF, TM31, TM120, TM150	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	50.00 [°C]	300.00 [°C]	100.00 [°C]
<b>Description:</b>	Sets the reference quantity for temperature. All temperatures specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		

<b>p2007</b>	<b>Reference acceleration / a_ref</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.01 [rev/s <sup>2</sup> ]	500000.00 [rev/s <sup>2</sup> ]	0.01 [rev/s <sup>2</sup> ]
<b>Description:</b>	Sets the reference quantity for acceleration rates. All acceleration rates specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
<b>Note:</b>	For the automatic calculation (p0340 = 1, p3900 > 0) an appropriate pre-assignment is only made if the parameter is not inhibited from being overwritten using p0573 = 1. If a BICO interconnection is established between different physical quantities, then the particular reference quantities are used as internal conversion factor. The reference acceleration is calculated as follows: Reference speed (p2000) converted from 1/min to 1/s divided by 1 s --> p2007 = p2000 [rpm] / (60 [s/min] * 1 [s])		
<b>r2019[0...7]</b>	<b>Comm IF error statistics / Comm err</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the receive errors at the commissioning interface (RS232).		
<b>Index:</b>	[0] = Number of error-free telegrams [1] = Number of rejected telegrams [2] = Number of framing errors [3] = Number of overrun errors [4] = Number of parity errors [5] = Number of starting character errors [6] = Number of checksum errors [7] = Number of length errors		
<b>p2020</b>	<b>Field bus interface baud rate / Field bus baud</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9310
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	4	13	8
<b>Description:</b>	Sets the baud rate for the fieldbus interface USS.		
<b>Value:</b>	4: 2400 baud 5: 4800 baud 6: 9600 baud 7: 19200 baud 8: 38400 baud 9: 57600 baud 10: 76800 baud 11: 93750 baud 12: 115200 baud 13: 187500 baud		
<b>Note:</b>	Fieldbus IF: Fieldbus interface Changes only become effective after POWER ON. The parameter is not influenced by setting the factory setting. The parameter is set to the factory setting when the protocol is reselected.		

<b>p2021</b>		<b>Field bus interface address / Field bus address</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9310	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	31	0	
<b>Description:</b>	Displays or sets the address for the fieldbus interface USS. The address can be set as follows: 1) Using the address switch on the Control Unit. --> p2021 displays the address setting. --> A change only becomes effective after a POWER ON. 2) Using p2021 --> Only if an address of 0 or an address that is invalid for the fieldbus selected in p2030 has been set using the address switch. --> The address is saved in a non-volatile fashion using the function "copy from RAM to ROM". --> A change only becomes effective after a POWER ON.			
<b>Dependency:</b>	Refer to: p2030			
<b>Note:</b>	Changes only become effective after POWER ON. The parameter is not influenced by setting the factory setting. The parameter is set to the factory setting when the protocol is reselected.			

<b>p2022</b>		<b>Field bus int USS PZD no. / Field bus USS PZD</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9310	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	16	2	
<b>Description:</b>	Sets the number of 16-bit words in the PZD part of the USS telegram for the field bus interface.			
<b>Dependency:</b>	Refer to: p2030			
<b>Note:</b>	The parameter is not influenced by setting the factory setting.			

<b>p2023</b>		<b>Field bus int USS PKW no. / Field bus USS PKW</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9310	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	127	127	
<b>Description:</b>	Sets the number of 16-bit words in the PKW part of the USS telegram for the field bus interface.			
<b>Value:</b>	0: PKW 0 words 3: PKW 3 words 4: PKW 4 words 127: PKW variable			
<b>Dependency:</b>	Refer to: p2030			
<b>Note:</b>	The parameter is not influenced by setting the factory setting.			

<b>p2024[0...2]</b>	<b>Fieldbus interface times / Fieldbus times</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9310
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	10000 [ms]	[0] 1000 [ms] [1] 0 [ms] [2] 0 [ms]
<b>Description:</b>	Sets the time values for the fieldbus interface. For Modbus the following applies: p2024[0, 1]: Not relevant. p2024[2]: Telegram pause time (pause time between two telegrams).		
<b>Index:</b>	[0] = Max. processing time [1] = Character delay time [2] = Telegram pause time		
<b>Dependency:</b>	Refer to: p2020, p2030		
<b>Note:</b>	For p2024[2] (Modbus): If the field bus baud rate is changed (p2020), the default time setting is restored. The default setting corresponds to a time of 3.5 characters (dependent on the baud rate that has been set).		
<b>r2029[0...7]</b>	<b>Field bus int error statistics / Field bus error</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9310
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the receive errors on the field bus interface (USS).		
<b>Index:</b>	[0] = Number of error-free telegrams [1] = Number of rejected telegrams [2] = Number of framing errors [3] = Number of overrun errors [4] = Number of parity errors [5] = Number of starting character errors [6] = Number of checksum errors [7] = Number of length errors		
<b>p2030</b>	<b>Field bus int protocol selection / Field bus protocol</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	3	6	3
<b>Description:</b>	Sets the communication protocol for the field bus interface.		
<b>Value:</b>	3: PROFIBUS 6: USS (X140)		
<b>Note:</b>	Changes only become effective after POWER ON. The parameter is not influenced by setting the factory setting.		

<b>p2030</b>	<b>Field bus int protocol selection / Field bus protocol</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	7	13	7
<b>Description:</b>	Sets the communication protocol for the field bus interface.		
<b>Value:</b>	7: PROFINET 13: Modbus TCP		
<b>Note:</b>	Changes only become effective after POWER ON. The parameter is not influenced by setting the factory setting.		

<b>r2032</b>	<b>Master control control word effective / PcCtrl STW eff</b>				
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the effective control word 1 (STW1) of the drive for the master control.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	ON/OFF1	Yes	No	-
	01	OC / OFF2	Yes	No	-
	02	OC / OFF3	Yes	No	-
	03	Enable operation	Yes	No	-
	04	Enable ramp-function generator	Yes	No	-
	05	Start ramp-function generator	Yes	No	-
	06	Enable speed setpoint	Yes	No	-
	07	Acknowledge fault	Yes	No	-
	08	Jog bit 0	Yes	No	3030
	09	Jog bit 1	Yes	No	3030
	10	Master control by PLC	Yes	No	-
<b>Notice:</b>	The master control only influences control word 1 and speed setpoint 1. Other control word/setpoints can be transferred from another automation device.				
<b>Note:</b>	OC: Operating condition				

<b>r2032</b>	<b>Master control control word effective / PcCtrl STW eff</b>				
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the effective control word 1 (STW1) of the drive for the master control.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	ON/OFF1	Yes	No	-
	01	OC / OFF2	Yes	No	-
	03	Enable operation	Yes	No	-
	07	Acknowledge fault	Yes	No	-
	10	Master control by PLC	Yes	No	-
<b>Notice:</b>	The master control only influences control word 1 and speed setpoint 1. Other control word/setpoints can be transferred from another automation device.				
<b>Note:</b>	OC: Operating condition				

<b>p2035</b>	<b>Fieldbus interface USS PIV drive object number / Fieldbus USS DO_no</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	62	2
<b>Description:</b>	Sets the drive object number for communication via the field bus interface (USS).		
<b>Dependency:</b>	Refer to: p0978		
<b>Note:</b>	p2035 defines the destination for USS parameter requests (PIV). p0978[0] defines the destination for USS process data (PZD). The parameter is available globally on all drive objects. The parameter is not influenced by setting the factory setting.		
<b>p2037</b>	<b>IF1 PROFIdrive STW1.10 = 0 mode / IF1 PD STW1.10=0</b>		
VECTOR_G, B_INF, ENC	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	0
<b>Description:</b>	Sets the processing mode for PROFIdrive STW1.10 "master control by PLC". Generally, control word 1 is received with the first receive word (PZD1) (this is in conformance to the PROFIdrive profile). The behavior of STW1.10 = 0 corresponds to that of the PROFIdrive profile. For other applications that deviate from this, the behavior can be adapted using this particular parameter.		
<b>Value:</b>	0: Freeze setpoints and continue to process sign-of-life 1: Freeze setpoints and sign-of-life 2: Do not freeze setpoints		
<b>Recommendation:</b>	Do not change the setting p2037 = 0.		
<b>Note:</b>	If the STW1 is not transferred according to the PROFIdrive with PZD1 (with bit 10 "master control by PLC"), then p2037 should be set to 2.		
<b>p2038</b>	<b>IF1 PROFIdrive STW/ZSW interface mode / PD STW/ZSW IF mode</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	0
<b>Description:</b>	Displays the interface mode of the PROFIdrive control words and status words.		
<b>Value:</b>	0: SINAMICS 1: SIMODRIVE 611 universal 2: VIK-NAMUR		
<b>Dependency:</b>	Refer to: p0922, p2079		
<b>Notice:</b>	The parameter is protected and cannot be changed.		
<b>Note:</b>	For telegram selection p0922 (p2079) = 20, then p2038 is automatically set = 2. When another telegram is selected, then p2038 is automatically set = 0.		

<b>p2039</b>	<b>Select debug monitor interface / Debug monit select</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0
<b>Description:</b>	Sets the serial interface for the debug monitor. The serial interface for the debug monitor is COM1 (X140) or COM2 (internal). Value = 0: COM2 (internal) Value = 1: COM1 (X140), commissioning protocol is deactivated Value = 2: COM2 (internal) Value = 3: Reserved		
<b>p2040</b>	<b>Fieldbus interface monitoring time / Fieldbus t_monit</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9310
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	1999999 [ms]	100 [ms]
<b>Description:</b>	Sets the monitoring time to monitor the process data received via the fieldbus interface. If no process data is received within this time, then an appropriate message is output.		
<b>Dependency:</b>	Refer to: p2030		
<b>Note:</b>	The parameter is only relevant for the setting of the following fieldbus protocols. - USS (X140) (p2030 = 6) - Modbus TCP (p2030 = 13) Value = 0: Monitoring is deactivated.		
<b>p2042</b>	<b>PROFIBUS Ident Number / PB ident No.</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the PROFIBUS ident number (PNO-ID). SINAMICS can be operated with various identities on PROFIBUS. This allows the use of a PROFIBUS GSD that is independent of the device (e.g. PROFIdrive VIK-NAMUR with ident number 3AA0 hex).		
<b>Value:</b>	0: SINAMICS 1: VIK-NAMUR		
<b>Note:</b>	Every change only becomes effective after a POWER ON.		

<b>r2043.0...2</b>	<b>BO: IF1 PROFIdrive PZD state / IF1 PD PZD state</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the PROFIdrive PZD state.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Setpoint failure	Yes	No
	01	Clock cycle synchronous operation active	Yes	No
	02	Fieldbus oper	Yes	No
<b>Dependency:</b>	Refer to: p2044			
<b>Note:</b>	When using the "setpoint failure" signal, the bus can be monitored and an application-specific response triggered when the setpoint fails.			
<b>p2044</b>	<b>IF1 PROFIdrive fault delay / IF1 PD fault delay</b>			
VECTOR_G, B_INF, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0 [s]	100 [s]	0 [s]	
<b>Description:</b>	Sets the delay time to initiate fault F01910 after a setpoint failure. The time until the fault is initiated can be used by the application. This means that it is possible to respond to the failure while the drive is still operational (e.g. emergency retraction).			
<b>Dependency:</b>	Refer to: r2043			
<b>p2045</b>	<b>CI: PB/PN clock synchronous controller sign-of-life signal source / PB/PN ctrSoL s_src</b>			
VECTOR_G (n/M), ENC	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0	
<b>Description:</b>	Connector input for the sign-of-life of the clock synchronous PROFIBUS/PROFINET controller. The sign-of-life is expected at bits 12 to 15. Bits 0 to 11 are not evaluated. The sign-of-life signal is normally received in PZD4 (control word 2) from the controller.			
<b>Dependency:</b>	Refer to: p0925, r2065			
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.			
<b>p2047</b>	<b>PROFIBUS additional monitoring time / PB suppl t_monit</b>			
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0 [ms]	20000 [ms]	0 [ms]	
<b>Description:</b>	Sets the additional monitoring time to monitor the process data received via PROFIBUS. Enables short bus faults to be compensated. If no process data is received within this time, then an appropriate message is output.			
<b>Recommendation:</b>	In the isochronous mode, the additional monitoring time should not be set.			

## 2 Parameters

### 2.2 List of parameters

**Note:** For controller STOP, the additional monitoring time is not effective.

---

<b>p2048</b>	<b>IF1 PROFIdrive PZD sampling time / IF1 PZD t_sample</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1.00 [ms]	16.00 [ms]	4.00 [ms]
<b>Description:</b>	Sets the sampling time for the cyclic interface 1 (IF1).		
<b>Note:</b>	The system only permits certain sampling times and after writing to this parameter, displays the value that has actually been set. For clock cycle synchronous operation, the specified bus cycle time applies (Tdp).		

---

<b>r2050[0...19]</b>	<b>CO: IF1 PROFIdrive PZD receive word / IF1 PZD rcv word</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Connector output to interconnect PZD (setpoints) with word format received from the fieldbus controller.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20		
<b>Note:</b>	IF1: Interface 1		

---

<b>r2050[0...31]</b>	<b>CO: IF1 PROFIdrive PZD receive word / IF1 PZD rcv word</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2440, 2468
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Connector output to interconnect PZD (setpoints) with word format received from the fieldbus controller.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6		

[6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12  
 [12] = PZD 13  
 [13] = PZD 14  
 [14] = PZD 15  
 [15] = PZD 16  
 [16] = PZD 17  
 [17] = PZD 18  
 [18] = PZD 19  
 [19] = PZD 20  
 [20] = PZD 21  
 [21] = PZD 22  
 [22] = PZD 23  
 [23] = PZD 24  
 [24] = PZD 25  
 [25] = PZD 26  
 [26] = PZD 27  
 [27] = PZD 28  
 [28] = PZD 29  
 [29] = PZD 30  
 [30] = PZD 31  
 [31] = PZD 32

**Dependency:** Refer to: r2060

**Notice:** Where there is a multiple interconnection of a connector output, all the connector inputs must either have Integer or FloatingPoint data types.

A BICO interconnection for a single PZD can only take place either on r2050 or r2060.

**Note:** IF1: Interface 1

---

### r2050[0...9] CO: IF1 PROFIdrive PZD receive word / IF1 PZD recv word

<b>B_INF</b>	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Connector output to interconnect PZD (setpoints) with word format received from the fieldbus controller.

**Index:** [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10

**Note:** IF1: Interface 1

<b>r2050[0...4]</b>	<b>CO: IF1 PROFIdrive PZD receive word / IF1 PZD rcv word</b>		
TM31, TM120, TM150, TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Connector output to interconnect PZD (setpoints) with word format received from the fieldbus controller.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5		
<b>Note:</b>	IF1: Interface 1		
<b>r2050[0...3]</b>	<b>CO: IF1 PROFIdrive PZD receive word / IF1 PZD rcv word</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2440, 2468
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Connector output to interconnect PZD (setpoints) with word format received from the fieldbus controller.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4		
<b>Dependency:</b>	Refer to: r2060		
<b>Notice:</b>	Where there is a multiple interconnection of a connector output, all the connector inputs must either have Integer or FloatingPoint data types. A BICO interconnection for a single PZD can only take place either on r2050 or r2060.		
<b>Note:</b>	IF1: Interface 1		
<b>p2051[0...24]</b>	<b>CI: IF1 PROFIdrive PZD send word / IF1 PZD send word</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects the PZD (actual values) with word format to be sent to the fieldbus controller.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15		

[15] = PZD 16  
 [16] = PZD 17  
 [17] = PZD 18  
 [18] = PZD 19  
 [19] = PZD 20  
 [20] = PZD 21  
 [21] = PZD 22  
 [22] = PZD 23  
 [23] = PZD 24  
 [24] = PZD 25

**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:** IF1: Interface 1

---

### p2051[0...31] CI: IF1 PROFIdrive PZD send word / IF1 PZD send word

VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2470
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Selects the PZD (actual values) with word format to be sent to the fieldbus controller.

**Index:**

[0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12  
 [12] = PZD 13  
 [13] = PZD 14  
 [14] = PZD 15  
 [15] = PZD 16  
 [16] = PZD 17  
 [17] = PZD 18  
 [18] = PZD 19  
 [19] = PZD 20  
 [20] = PZD 21  
 [21] = PZD 22  
 [22] = PZD 23  
 [23] = PZD 24  
 [24] = PZD 25  
 [25] = PZD 26  
 [26] = PZD 27  
 [27] = PZD 28  
 [28] = PZD 29  
 [29] = PZD 30  
 [30] = PZD 31  
 [31] = PZD 32

**Dependency:** Refer to: p2061

**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:** IF1: Interface 1

<b>p2051[0...9]</b>	<b>CI: IF1 PROFIdrive PZD send word / IF1 PZD send word</b>		
B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects the PZD (actual values) with word format to be sent to the fieldbus controller.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	IF1: Interface 1		
<b>p2051[0...4]</b>	<b>CI: IF1 PROFIdrive PZD send word / IF1 PZD send word</b>		
TM31, TM120, TM150, TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects the PZD (actual values) with word format to be sent to the fieldbus controller.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	IF1: Interface 1		
<b>p2051[0...11]</b>	<b>CI: IF1 PROFIdrive PZD send word / IF1 PZD send word</b>		
ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2470
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects the PZD (actual values) with word format to be sent to the fieldbus controller.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9		

[9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12

**Dependency:**

Refer to: p2061

**Notice:**

The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:**

IF1: Interface 1

**r2053[0...24]****IF1 PROFIdrive diagnostics PZD send word / IF1 diag send word**

CU\_G130\_PN,  
 CU\_G150\_PN,  
 CU\_G130\_DP,  
 CU\_G150\_DP

**Can be changed:** -**Calculated:** -**Access level:** 3**Data type:** Unsigned16**Dyn. index:** -**Func. diagram:** -**P-Group:** Communications**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Displays the PZD (actual values) with word format sent to the fieldbus controller.

**Index:**

[0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12  
 [12] = PZD 13  
 [13] = PZD 14  
 [14] = PZD 15  
 [15] = PZD 16  
 [16] = PZD 17  
 [17] = PZD 18  
 [18] = PZD 19  
 [19] = PZD 20  
 [20] = PZD 21  
 [21] = PZD 22  
 [22] = PZD 23  
 [23] = PZD 24  
 [24] = PZD 25

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Bit 0	ON	OFF	-
01	Bit 1	ON	OFF	-
02	Bit 2	ON	OFF	-
03	Bit 3	ON	OFF	-
04	Bit 4	ON	OFF	-
05	Bit 5	ON	OFF	-
06	Bit 6	ON	OFF	-
07	Bit 7	ON	OFF	-
08	Bit 8	ON	OFF	-
09	Bit 9	ON	OFF	-
10	Bit 10	ON	OFF	-
11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

**Note:**

IF1: Interface 1

<b>r2053[0...31]</b>		<b>IF1 PROFIdrive diagnostics PZD send word / IF1 diag send word</b>																																																																																								
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2450, 2470 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -																																																																																							
<b>Description:</b>	Displays the PZD (actual values) with word format sent to the fieldbus controller.																																																																																									
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20 [20] = PZD 21 [21] = PZD 22 [22] = PZD 23 [23] = PZD 24 [24] = PZD 25 [25] = PZD 26 [26] = PZD 27 [27] = PZD 28 [28] = PZD 29 [29] = PZD 30 [30] = PZD 31 [31] = PZD 32																																																																																									
<b>Bit field:</b>	<table border="1"> <thead> <tr> <th>Bit</th> <th>Signal name</th> <th>1 signal</th> <th>0 signal</th> <th>FP</th> </tr> </thead> <tbody> <tr><td>00</td><td>Bit 0</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>01</td><td>Bit 1</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>02</td><td>Bit 2</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>03</td><td>Bit 3</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>04</td><td>Bit 4</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>05</td><td>Bit 5</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>06</td><td>Bit 6</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>07</td><td>Bit 7</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>08</td><td>Bit 8</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>09</td><td>Bit 9</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>10</td><td>Bit 10</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>11</td><td>Bit 11</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>12</td><td>Bit 12</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>13</td><td>Bit 13</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>14</td><td>Bit 14</td><td>ON</td><td>OFF</td><td>-</td></tr> <tr><td>15</td><td>Bit 15</td><td>ON</td><td>OFF</td><td>-</td></tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	FP	00	Bit 0	ON	OFF	-	01	Bit 1	ON	OFF	-	02	Bit 2	ON	OFF	-	03	Bit 3	ON	OFF	-	04	Bit 4	ON	OFF	-	05	Bit 5	ON	OFF	-	06	Bit 6	ON	OFF	-	07	Bit 7	ON	OFF	-	08	Bit 8	ON	OFF	-	09	Bit 9	ON	OFF	-	10	Bit 10	ON	OFF	-	11	Bit 11	ON	OFF	-	12	Bit 12	ON	OFF	-	13	Bit 13	ON	OFF	-	14	Bit 14	ON	OFF	-	15	Bit 15	ON	OFF	-				
Bit	Signal name	1 signal	0 signal	FP																																																																																						
00	Bit 0	ON	OFF	-																																																																																						
01	Bit 1	ON	OFF	-																																																																																						
02	Bit 2	ON	OFF	-																																																																																						
03	Bit 3	ON	OFF	-																																																																																						
04	Bit 4	ON	OFF	-																																																																																						
05	Bit 5	ON	OFF	-																																																																																						
06	Bit 6	ON	OFF	-																																																																																						
07	Bit 7	ON	OFF	-																																																																																						
08	Bit 8	ON	OFF	-																																																																																						
09	Bit 9	ON	OFF	-																																																																																						
10	Bit 10	ON	OFF	-																																																																																						
11	Bit 11	ON	OFF	-																																																																																						
12	Bit 12	ON	OFF	-																																																																																						
13	Bit 13	ON	OFF	-																																																																																						
14	Bit 14	ON	OFF	-																																																																																						
15	Bit 15	ON	OFF	-																																																																																						
<b>Dependency:</b>	Refer to: p2051, p2061																																																																																									
<b>Note:</b>	IF1: Interface 1																																																																																									

<b>r2053[0...9]</b>		<b>IF1 PROFIdrive diagnostics PZD send word / IF1 diag send word</b>			
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the PZD (actual values) with word format sent to the fieldbus controller.				
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-
<b>Note:</b>	IF1: Interface 1				

<b>r2053[0...4]</b>		<b>IF1 PROFIdrive diagnostics PZD send word / IF1 diag send word</b>			
TM31, TM120, TM150, TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the PZD (actual values) with word format sent to the fieldbus controller.				
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-

## 2 Parameters

### 2.2 List of parameters

08	Bit 8	ON	OFF	-
09	Bit 9	ON	OFF	-
10	Bit 10	ON	OFF	-
11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

**Note:** IF1: Interface 1

---

#### r2053[0...11] IF1 PROFIdrive diagnostics PZD send word / IF1 diag send word

<b>ENC</b>	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2450, 2470
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PZD (actual values) with word format sent to the fieldbus controller.

**Index:**  
 [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

**Dependency:** Refer to: p2051, p2061

**Note:** IF1: Interface 1

<b>r2054</b>	<b>PROFIBUS status / PB status</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4	-
<b>Description:</b>	Status display for the PROFIBUS interface.		
<b>Value:</b>	0: OFF 1: No connection (search for baud rate) 2: Connection OK (baud rate found) 3: Cyclic connection with master (data exchange) 4: Cyclic data OK		
<b>Note:</b>	For r2054 = 3: In state 3 (the LED flashes green), a cyclic connection has been established to the PROFIBUS master; however, one of the following prerequisites is missing for cyclic operation: - no setpoints are being received as the PROFIBUS master is in the STOP condition. Only for clock-cycle synchronous operation, the following applies: - the drive is not in synchronism as the global control (GC) has an error. For r2054 = 4: In the status 4 (LED green), the cyclic connection to the PROFIBUS master has been established and setpoints are being received. The clock cycle synchronization is OK, the global control (GC) is error-free. This state does not provide any statement regarding the quality of the clock cycle synchronous sign-of-life characters on the drive objects.		
<b>r2055[0...2]</b>	<b>PROFIBUS diagnostics standard / PB diag standard</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Diagnostics display for the PROFIBUS interface.		
<b>Index:</b>	[0] = Master bus address [1] = Master input total length bytes [2] = Master output total length bytes		
<b>r2057</b>	<b>PROFIBUS address switch diagnostics / PB addr sw diag</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the setting of the PROFIBUS address switch "DP ADDRESS" on the Control Unit.		
<b>Dependency:</b>	Refer to: p0918		
<b>Notice:</b>	The display is updated after switching on, and not cyclically.		

<b>r2060[0...30]</b>	<b>CO: IF1 PROFIdrive PZD receive double word / IF1 PZD rcv DW</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2440, 2468
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Connector output to interconnect PZD (setpoints) with double word format received from the fieldbus controller.		
<b>Index:</b>	[0] = PZD 1 + 2 [1] = PZD 2 + 3 [2] = PZD 3 + 4 [3] = PZD 4 + 5 [4] = PZD 5 + 6 [5] = PZD 6 + 7 [6] = PZD 7 + 8 [7] = PZD 8 + 9 [8] = PZD 9 + 10 [9] = PZD 10 + 11 [10] = PZD 11 + 12 [11] = PZD 12 + 13 [12] = PZD 13 + 14 [13] = PZD 14 + 15 [14] = PZD 15 + 16 [15] = PZD 16 + 17 [16] = PZD 17 + 18 [17] = PZD 18 + 19 [18] = PZD 19 + 20 [19] = PZD 20 + 21 [20] = PZD 21 + 22 [21] = PZD 22 + 23 [22] = PZD 23 + 24 [23] = PZD 24 + 25 [24] = PZD 25 + 26 [25] = PZD 26 + 27 [26] = PZD 27 + 28 [27] = PZD 28 + 29 [28] = PZD 29 + 30 [29] = PZD 30 + 31 [30] = PZD 31 + 32		
<b>Dependency:</b>	Refer to: r2050		
<b>Notice:</b>	Where there is a multiple interconnection of a connector output, all the connector inputs must either have Integer or FloatingPoint data types. A BICO interconnection for a single PZD can only take place either on r2050 or r2060. A maximum of 4 indices of the "trace" function can be used.		
<b>Note:</b>	IF1: Interface 1		

<b>r2060[0...2]</b>	<b>CO: IF1 PROFIdrive PZD receive double word / IF1 PZD rcv DW</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2440, 2468
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Connector output to interconnect PZD (setpoints) with double word format received from the fieldbus controller.		
<b>Index:</b>	[0] = PZD 1 + 2 [1] = PZD 2 + 3 [2] = PZD 3 + 4		
<b>Dependency:</b>	Refer to: r2050		

**Notice:** Where there is a multiple interconnection of a connector output, all the connector inputs must either have Integer or FloatingPoint data types.

A BICO interconnection for a single PZD can only take place either on r2050 or r2060.

**Note:** IF1: Interface 1

---

<b>p2061[0...30]</b>	<b>CI: IF1 PROFIdrive PZD send double word / IF1 PZD send DW</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2470
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Selects the PZD (actual values) with double word format to be sent to the fieldbus controller.

**Index:**

- [0] = PZD 1 + 2
- [1] = PZD 2 + 3
- [2] = PZD 3 + 4
- [3] = PZD 4 + 5
- [4] = PZD 5 + 6
- [5] = PZD 6 + 7
- [6] = PZD 7 + 8
- [7] = PZD 8 + 9
- [8] = PZD 9 + 10
- [9] = PZD 10 + 11
- [10] = PZD 11 + 12
- [11] = PZD 12 + 13
- [12] = PZD 13 + 14
- [13] = PZD 14 + 15
- [14] = PZD 15 + 16
- [15] = PZD 16 + 17
- [16] = PZD 17 + 18
- [17] = PZD 18 + 19
- [18] = PZD 19 + 20
- [19] = PZD 20 + 21
- [20] = PZD 21 + 22
- [21] = PZD 22 + 23
- [22] = PZD 23 + 24
- [23] = PZD 24 + 25
- [24] = PZD 25 + 26
- [25] = PZD 26 + 27
- [26] = PZD 27 + 28
- [27] = PZD 28 + 29
- [28] = PZD 29 + 30
- [29] = PZD 30 + 31
- [30] = PZD 31 + 32

**Dependency:** Refer to: p2051

**Notice:** A BICO interconnection for a single PZD can only take place either on p2051 or p2061.

The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:** IF1: Interface 1

---

<b>p2061[0...10]</b>	<b>CI: IF1 PROFIdrive PZD send double word / IF1 PZD send DW</b>		
ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2470
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Selects the PZD (actual values) with double word format to be sent to the fieldbus controller.

**Index:**

- [0] = PZD 1 + 2
- [1] = PZD 2 + 3

## 2 Parameters

### 2.2 List of parameters

[2] = PZD 3 + 4  
 [3] = PZD 4 + 5  
 [4] = PZD 5 + 6  
 [5] = PZD 6 + 7  
 [6] = PZD 7 + 8  
 [7] = PZD 8 + 9  
 [8] = PZD 9 + 10  
 [9] = PZD 10 + 11  
 [10] = PZD 11 + 12

**Dependency:**

Refer to: p2051

**Notice:**

A BICO interconnection for a single PZD can only take place either on p2051 or p2061.  
 The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:**

IF1: Interface 1

#### r2063[0...30]

#### IF1 PROFIdrive diagnostics PZD send double word / IF1 diag send DW

VECTOR\_G

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** 2450, 2470

**P-Group:** Communications

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:**

Displays the PZD (actual values) with double word format sent to the fieldbus controller.

**Index:**

[0] = PZD 1 + 2  
 [1] = PZD 2 + 3  
 [2] = PZD 3 + 4  
 [3] = PZD 4 + 5  
 [4] = PZD 5 + 6  
 [5] = PZD 6 + 7  
 [6] = PZD 7 + 8  
 [7] = PZD 8 + 9  
 [8] = PZD 9 + 10  
 [9] = PZD 10 + 11  
 [10] = PZD 11 + 12  
 [11] = PZD 12 + 13  
 [12] = PZD 13 + 14  
 [13] = PZD 14 + 15  
 [14] = PZD 15 + 16  
 [15] = PZD 16 + 17  
 [16] = PZD 17 + 18  
 [17] = PZD 18 + 19  
 [18] = PZD 19 + 20  
 [19] = PZD 20 + 21  
 [20] = PZD 21 + 22  
 [21] = PZD 22 + 23  
 [22] = PZD 23 + 24  
 [23] = PZD 24 + 25  
 [24] = PZD 25 + 26  
 [25] = PZD 26 + 27  
 [26] = PZD 27 + 28  
 [27] = PZD 28 + 29  
 [28] = PZD 29 + 30  
 [29] = PZD 30 + 31  
 [30] = PZD 31 + 32

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Bit 0	ON	OFF	-
01	Bit 1	ON	OFF	-
02	Bit 2	ON	OFF	-
03	Bit 3	ON	OFF	-
04	Bit 4	ON	OFF	-
05	Bit 5	ON	OFF	-
06	Bit 6	ON	OFF	-
07	Bit 7	ON	OFF	-

08	Bit 8	ON	OFF	-
09	Bit 9	ON	OFF	-
10	Bit 10	ON	OFF	-
11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-
16	Bit 16	ON	OFF	-
17	Bit 17	ON	OFF	-
18	Bit 18	ON	OFF	-
19	Bit 19	ON	OFF	-
20	Bit 20	ON	OFF	-
21	Bit 21	ON	OFF	-
22	Bit 22	ON	OFF	-
23	Bit 23	ON	OFF	-
24	Bit 24	ON	OFF	-
25	Bit 25	ON	OFF	-
26	Bit 26	ON	OFF	-
27	Bit 27	ON	OFF	-
28	Bit 28	ON	OFF	-
29	Bit 29	ON	OFF	-
30	Bit 30	ON	OFF	-
31	Bit 31	ON	OFF	-

**Notice:** A maximum of 4 indices of the "trace" function can be used.

**Note:** IF1: Interface 1

### r2063[0...10] IF1 PROFIdrive diagnostics PZD send double word / IF1 diag send DW

ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2450, 2470
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PZD (actual values) with double word format sent to the fieldbus controller.

**Index:**  
 [0] = PZD 1 + 2  
 [1] = PZD 2 + 3  
 [2] = PZD 3 + 4  
 [3] = PZD 4 + 5  
 [4] = PZD 5 + 6  
 [5] = PZD 6 + 7  
 [6] = PZD 7 + 8  
 [7] = PZD 8 + 9  
 [8] = PZD 9 + 10  
 [9] = PZD 10 + 11  
 [10] = PZD 11 + 12

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-

## 2 Parameters

### 2.2 List of parameters

15	Bit 15	ON	OFF	-
16	Bit 16	ON	OFF	-
17	Bit 17	ON	OFF	-
18	Bit 18	ON	OFF	-
19	Bit 19	ON	OFF	-
20	Bit 20	ON	OFF	-
21	Bit 21	ON	OFF	-
22	Bit 22	ON	OFF	-
23	Bit 23	ON	OFF	-
24	Bit 24	ON	OFF	-
25	Bit 25	ON	OFF	-
26	Bit 26	ON	OFF	-
27	Bit 27	ON	OFF	-
28	Bit 28	ON	OFF	-
29	Bit 29	ON	OFF	-
30	Bit 30	ON	OFF	-
31	Bit 31	ON	OFF	-

**Notice:** A maximum of 4 indices of the "trace" function can be used.

**Note:** IF1: Interface 1

---

#### r2064[0...7] PB/PN diagnostics clock cycle synchronism / PB/PN diag clock

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the last parameter received from the PROFIBUS/PROFINET controller for clock synchronism. The parameters for clock synchronism are created when configuring the bus and are transferred at the start of cyclic operation from the controller to the device.

**Index:**  
 [0] = Clock synchronous mode activated  
 [1] = Bus cycle time (Tdp) [μs]  
 [2] = Master cycle time (Tmapc) [μs]  
 [3] = Instant of actual value acquisition (Ti) [μs]  
 [4] = Instant of setpoint acquisition (To) [μs]  
 [5] = Data exchange interval (Tdx) [μs]  
 [6] = PLL window (Tpll-w) [1/12 μs]  
 [7] = PLL delay time (Tpll-d) [1/12 μs]

---

#### r2065 PB/PN controller sign of life diagnostics / PB/PN ctr SoL diag

VECTOR_G (n/M), ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays how often the sign-of-life from the clock synchronous PROFIBUS/PROFINET controller last failed. An appropriate fault is output when the tolerance, specified in p0925, is exceeded.

**Dependency:** Refer to: F01912

<b>r2067[0...1]</b>	<b>IF1 PZD maximum interconnected / IF1 PZDmaxIntercon</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -	
<b>Description:</b>	Display for the maximum interconnected PZD in the receive/send direction Index 0: receive (r2050, r2060) Index 1: send (p2051, p2061)			
<b>p2070</b>	<b>IF1 PROFIdrive SIC/SCC start receive / SIC/SCC start recv</b>			
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> Unsigned8 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 29	<b>Access level:</b> 3 <b>Func. diagram:</b> 2423 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0	
<b>Description:</b>	Sets the start for the SIC/SCC telegram (p60122) in the receive words (r2050, r2060).			
<b>Dependency:</b>	Refer to: p0922, p2071, p2079, p60122			
<b>Note:</b>	For setting p0922/p2079, the value is preset to the end of the PZD telegram. For p0922 equal to 999 and p2079 not equal to 999, the preset value can be increased. The value must be set again after changing p0922/p2079.			
<b>p2071</b>	<b>IF1 PROFIdrive SIC/SCC start send / SIC/SCC start send</b>			
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> Unsigned8 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 30	<b>Access level:</b> 3 <b>Func. diagram:</b> 2423 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0	
<b>Description:</b>	Sets the start for the SIC/SCC telegram (p60122) in the send words (p2051, p2061).			
<b>Dependency:</b>	Refer to: p0922, p2079, p60122			
<b>Note:</b>	For setting p0922/p2079, the value is preset to the end of the PZD telegram. For p0922 equal to 999 and p2079 not equal to 999, the preset value can be increased. The value must be set again after changing p0922/p2079.			
<b>p2072</b>	<b>Response receive value after PZD failure / Resp aft PZD fail</b>			
VECTOR_G	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 bin	
<b>Description:</b>	Sets the response for the receive value (r2090) after PZD failure.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Unconditionally open holding brake (p0855)	Freeze value	Zero the value
				<b>FP</b> -

<b>r2074[0...19]</b>	<b>IF1 PROFIdrive diagnostics bus address PZD receive / IF1diag addr recv</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the PROFIBUS address of the sender from which the process data (PZD) is received.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20		
<b>Note:</b>	IF1: Interface 1 Value range: 0 - 125: Bus address of the sender 65535: Not assigned		

<b>r2074[0...31]</b>	<b>IF1 PROFIdrive diagnostics bus address PZD receive / IF1diag addr recv</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the PROFIBUS address of the sender from which the process data (PZD) is received.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18		

[18] = PZD 19  
 [19] = PZD 20  
 [20] = PZD 21  
 [21] = PZD 22  
 [22] = PZD 23  
 [23] = PZD 24  
 [24] = PZD 25  
 [25] = PZD 26  
 [26] = PZD 27  
 [27] = PZD 28  
 [28] = PZD 29  
 [29] = PZD 30  
 [30] = PZD 31  
 [31] = PZD 32

**Note:** IF1: Interface 1  
 Value range:  
 0 - 125: Bus address of the sender  
 65535: Not assigned

---

<b>r2074[0...9]</b>	<b>IF1 PROFIdrive diagnostics bus address PZD receive / IF1diag addr recv</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PROFIBUS address of the sender from which the process data (PZD) is received.

**Index:** [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10

**Note:** IF1: Interface 1  
 Value range:  
 0 - 125: Bus address of the sender  
 65535: Not assigned

---

<b>r2074[0...4]</b>	<b>IF1 PROFIdrive diagnostics bus address PZD receive / IF1diag addr recv</b>		
TM31, TM120, TM150, TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PROFIBUS address of the sender from which the process data (PZD) is received.

**Index:** [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5

## 2 Parameters

### 2.2 List of parameters

**Note:** IF1: Interface 1  
Value range:  
0 - 125: Bus address of the sender  
65535: Not assigned

---

#### r2074[0...3] IF1 PROFIdrive diagnostics bus address PZD receive / IF1diag addr rcv

ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PROFIBUS address of the sender from which the process data (PZD) is received.

**Index:** [0] = PZD 1  
[1] = PZD 2  
[2] = PZD 3  
[3] = PZD 4

**Note:** IF1: Interface 1  
Value range:  
0 - 125: Bus address of the sender  
65535: Not assigned

---

#### r2075[0...19] IF1 PROFIdrive diagnostics telegram offset PZD receive / IF1 diag offs rcv

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PZD byte offset in the PROFIdrive receive telegram (controller output).

**Index:** [0] = PZD 1  
[1] = PZD 2  
[2] = PZD 3  
[3] = PZD 4  
[4] = PZD 5  
[5] = PZD 6  
[6] = PZD 7  
[7] = PZD 8  
[8] = PZD 9  
[9] = PZD 10  
[10] = PZD 11  
[11] = PZD 12  
[12] = PZD 13  
[13] = PZD 14  
[14] = PZD 15  
[15] = PZD 16  
[16] = PZD 17  
[17] = PZD 18  
[18] = PZD 19  
[19] = PZD 20

**Note:** IF1: Interface 1  
Value range:  
0 - 242: Byte offset  
65535: Not assigned

r2075[0...31]	IF1 PROFIdrive diagnostics telegram offset PZD receive / IF1 diag offs recv		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the PZD byte offset in the PROFIdrive receive telegram (controller output).		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20 [20] = PZD 21 [21] = PZD 22 [22] = PZD 23 [23] = PZD 24 [24] = PZD 25 [25] = PZD 26 [26] = PZD 27 [27] = PZD 28 [28] = PZD 29 [29] = PZD 30 [30] = PZD 31 [31] = PZD 32		
<b>Note:</b>	IF1: Interface 1 Value range: 0 - 242: Byte offset 65535: Not assigned		

r2075[0...9]	IF1 PROFIdrive diagnostics telegram offset PZD receive / IF1 diag offs recv		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the PZD byte offset in the PROFIdrive receive telegram (controller output).		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6		

## 2 Parameters

### 2.2 List of parameters

[6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10

**Note:** IF1: Interface 1  
 Value range:  
 0 - 242: Byte offset  
 65535: Not assigned

---

#### r2075[0...4] IF1 PROFIdrive diagnostics telegram offset PZD receive / IF1 diag offs recv

TM31, TM120, TM150, TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PZD byte offset in the PROFIdrive receive telegram (controller output).

**Index:** [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5

**Note:** IF1: Interface 1  
 Value range:  
 0 - 242: Byte offset  
 65535: Not assigned

---

#### r2075[0...3] IF1 PROFIdrive diagnostics telegram offset PZD receive / IF1 diag offs recv

ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PZD byte offset in the PROFIdrive receive telegram (controller output).

**Index:** [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4

**Note:** IF1: Interface 1  
 Value range:  
 0 - 242: Byte offset  
 65535: Not assigned

---

#### r2076[0...24] IF1 PROFIdrive diagnostics telegram offset PZD send / IF1 diag offs send

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PZD byte offset in the PROFIdrive send telegram (controller input).

**Index:** [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4

[4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12  
 [12] = PZD 13  
 [13] = PZD 14  
 [14] = PZD 15  
 [15] = PZD 16  
 [16] = PZD 17  
 [17] = PZD 18  
 [18] = PZD 19  
 [19] = PZD 20  
 [20] = PZD 21  
 [21] = PZD 22  
 [22] = PZD 23  
 [23] = PZD 24  
 [24] = PZD 25

**Note:** IF1: Interface 1  
 Value range:  
 0 - 242: Byte offset  
 65535: Not assigned

---

### r2076[0...31] IF1 PROFIdrive diagnostics telegram offset PZD send / IF1 diag offs send

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PZD byte offset in the PROFIdrive send telegram (controller input).

**Index:**

[0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12  
 [12] = PZD 13  
 [13] = PZD 14  
 [14] = PZD 15  
 [15] = PZD 16  
 [16] = PZD 17  
 [17] = PZD 18  
 [18] = PZD 19  
 [19] = PZD 20  
 [20] = PZD 21  
 [21] = PZD 22  
 [22] = PZD 23  
 [23] = PZD 24  
 [24] = PZD 25  
 [25] = PZD 26  
 [26] = PZD 27  
 [27] = PZD 28

## 2 Parameters

### 2.2 List of parameters

[28] = PZD 29  
 [29] = PZD 30  
 [30] = PZD 31  
 [31] = PZD 32

**Note:** IF1: Interface 1  
 Value range:  
 0 - 242: Byte offset  
 65535: Not assigned

---

#### r2076[0...9] IF1 PROFIdrive diagnostics telegram offset PZD send / IF1 diag offs send

B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PZD byte offset in the PROFIdrive send telegram (controller input).

**Index:** [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10

**Note:** IF1: Interface 1  
 Value range:  
 0 - 242: Byte offset  
 65535: Not assigned

---

#### r2076[0...4] IF1 PROFIdrive diagnostics telegram offset PZD send / IF1 diag offs send

TM31, TM120, TM150, TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PZD byte offset in the PROFIdrive send telegram (controller input).

**Index:** [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5

**Note:** IF1: Interface 1  
 Value range:  
 0 - 242: Byte offset  
 65535: Not assigned

<b>r2076[0...11]</b>		<b>IF1 PROFIdrive diagnostics telegram offset PZD send / IF1 diag offs send</b>		
ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2410 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -	
<b>Description:</b>	Displays the PZD byte offset in the PROFIdrive send telegram (controller input).			
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12			
<b>Note:</b>	IF1: Interface 1 Value range: 0 - 242: Byte offset 65535: Not assigned			
<b>r2077[0...15]</b>		<b>PROFIBUS diagnostics peer-to-peer data transfer addresses / PB diag peer addr</b>		
CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -	
<b>Description:</b>	Displays the addresses of the slaves (peers) where peer-to-peer data transfer has been configured via PROFIBUS.			
<b>p2079</b>		<b>IF1 PROFIdrive PZD telegram selection extended / IF1 PZD telegr ext</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 390	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 999	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 999	
<b>Description:</b>	Sets the send and receive telegram. Contrary to p0922, a telegram can be selected using p2079 and subsequently expanded.			
<b>Value:</b>	390: SIEMENS telegram 390, PZD-2/2 391: SIEMENS telegram 391, PZD-3/7 392: SIEMENS telegram 392, PZD-3/15 393: SIEMENS telegram 393, PZD-4/21 394: SIEMENS telegram 394, PZD-3/3 395: SIEMENS telegram 395, PZD-4/25 999: Free telegram configuration with BICO			
<b>Note:</b>	For p0922 < 999 the following applies: p2079 has the same value and is inhibited. All of the interconnections and extensions contained in the telegram are inhibited.			

## 2 Parameters

### 2.2 List of parameters

For p0922 = 999 the following applies:

p2079 can be freely set. If p2079 is also set to 999, then all of the interconnections can be set.

For p0922 = 999 and p2079 < 999 the following applies:

The interconnections contained in the telegram are inhibited. However, the telegram can be extended.

---

<b>p2079</b>	<b>IF1 PROFIdrive PZD telegram selection extended / IF1 PZD telegr ext</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	999	999
<b>Description:</b>	Sets the send and receive telegram. Contrary to p0922, a telegram can be selected using p2079 and subsequently expanded.		
<b>Value:</b>	1: Standard telegram 1, PZD-2/2 2: Standard telegram 2, PZD-4/4 20: Standard telegram 20, PZD-2/6 220: SIEMENS telegram 220, PZD-10/10 352: SIEMENS telegram 352, PZD-6/6 999: Free telegram configuration with BICO		
<b>Dependency:</b>	Refer to: p0922		
<b>Note:</b>	For p0922 < 999 the following applies: p2079 has the same value and is inhibited. All of the interconnections and extensions contained in the telegram are inhibited. For p0922 = 999 the following applies: p2079 can be freely set. If p2079 is also set to 999, then all of the interconnections can be set. For p0922 = 999 and p2079 < 999 the following applies: The interconnections contained in the telegram are inhibited. However, the telegram can be extended.		

---

<b>p2079</b>	<b>IF1 PROFIdrive PZD telegram selection extended / IF1 PZD telegr ext</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	999	999
<b>Description:</b>	Sets the send and receive telegram. Contrary to p0922, a telegram can be selected using p2079 and subsequently expanded.		
<b>Value:</b>	1: Standard telegram 1, PZD-2/2 2: Standard telegram 2, PZD-4/4 3: Standard telegram 3, PZD-5/9 4: Standard telegram 4, PZD-6/14 20: Standard telegram 20, PZD-2/6 220: SIEMENS telegram 220, PZD-10/10 352: SIEMENS telegram 352, PZD-6/6 999: Free telegram configuration with BICO		
<b>Dependency:</b>	Refer to: p0922		
<b>Note:</b>	For p0922 < 999 the following applies: p2079 has the same value and is inhibited. All of the interconnections and extensions contained in the telegram are inhibited. For p0922 = 999 the following applies: p2079 can be freely set. If p2079 is also set to 999, then all of the interconnections can be set. For p0922 = 999 and p2079 < 999 the following applies: The interconnections contained in the telegram are inhibited. However, the telegram can be extended.		

<b>p2079</b>		<b>IF1 PROFIdrive PZD telegram selection extended / IF1 PZD telegr ext</b>	
B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	370	999	999
<b>Description:</b>	Sets the send and receive telegram. Contrary to p0922, a telegram can be selected using p2079 and subsequently expanded.		
<b>Value:</b>	370: SIEMENS telegram 370, PZD-1/1 371: SIEMENS telegram 371, PZD-5/8 999: Free telegram configuration with BICO		
<b>Dependency:</b>	Refer to: p0922		
<b>Note:</b>	For p0922 < 999 the following applies: p2079 has the same value and is inhibited. All of the interconnections and extensions contained in the telegram are inhibited. For p0922 = 999 the following applies: p2079 can be freely set. If p2079 is also set to 999, then all of the interconnections can be set. For p0922 = 999 and p2079 < 999 the following applies: The interconnections contained in the telegram are inhibited. However, the telegram can be extended.		

<b>p2079</b>		<b>IF1 PROFIdrive PZD telegram selection extended / IF1 PZD telegr ext</b>	
ENC	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	81	999	999
<b>Description:</b>	Sets the send and receive telegram. Contrary to p0922, a telegram can be selected using p2079 and subsequently expanded.		
<b>Value:</b>	81: SIEMENS telegram 81, PZD-2/6 82: SIEMENS telegram 82, PZD-2/7 83: SIEMENS telegram 83, PZD-2/8 999: Free telegram configuration with BICO		
<b>Dependency:</b>	Refer to: p0922		
<b>Note:</b>	For p0922 < 999 the following applies: p2079 has the same value and is inhibited. All of the interconnections and extensions contained in the telegram are inhibited. For p0922 = 999 the following applies: p2079 can be freely set. If p2079 is also set to 999, then all of the interconnections can be set. For p0922 = 999 and p2079 < 999 the following applies: The interconnections contained in the telegram are inhibited. However, the telegram can be extended.		

<b>p2080[0...15]</b>		<b>BI: Binector-connector converter status word 1 / Bin/con ZSW1</b>	
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2472
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects bits to be sent to the PROFIdrive controller. The individual bits are combined to form status word 1.		
<b>Index:</b>	[0] = Bit 0 [1] = Bit 1		

- [2] = Bit 2
- [3] = Bit 3
- [4] = Bit 4
- [5] = Bit 5
- [6] = Bit 6
- [7] = Bit 7
- [8] = Bit 8
- [9] = Bit 9
- [10] = Bit 10
- [11] = Bit 11
- [12] = Bit 12
- [13] = Bit 13
- [14] = Bit 14
- [15] = Bit 15

**Dependency:** Refer to: p2088, r2089

**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**p2081[0...15] BI: Binector-connector converter status word 2 / Bin/con ZSW2**

CU_G130_PN,	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
CU_G150_PN,	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2472
CU_G130_DP,	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
CU_G150_DP,	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
VECTOR_G, B_INF,	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
TM31, TM120, TM150,	-	-	0
TB30, ENC	-	-	0

**Description:** Selects bits to be sent to the PROFIdrive controller.  
The individual bits are combined to form status word 2.

- Index:**
- [0] = Bit 0
  - [1] = Bit 1
  - [2] = Bit 2
  - [3] = Bit 3
  - [4] = Bit 4
  - [5] = Bit 5
  - [6] = Bit 6
  - [7] = Bit 7
  - [8] = Bit 8
  - [9] = Bit 9
  - [10] = Bit 10
  - [11] = Bit 11
  - [12] = Bit 12
  - [13] = Bit 13
  - [14] = Bit 14
  - [15] = Bit 15

**Dependency:** Refer to: p2088, r2089

**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

**Note:** For clock synchronous operation, bit 12 to 15 to transfer the sign-of-life are reserved in status word 2 - and may not be freely interconnected.

**p2082[0...15] BI: Binector-connector converter status word 3 / Bin/con ZSW3**

CU_G130_PN,	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
CU_G150_PN,	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2472
CU_G130_DP,	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
CU_G150_DP,	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
VECTOR_G, B_INF,	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
TM31, TM120, TM150,	-	-	0
TB30, ENC	-	-	0

**Description:** Selects bits to be sent to the PROFIdrive controller.  
The individual bits are combined to form free status word 3.

- Index:**
- [0] = Bit 0
  - [1] = Bit 1
  - [2] = Bit 2

[3] = Bit 3  
 [4] = Bit 4  
 [5] = Bit 5  
 [6] = Bit 6  
 [7] = Bit 7  
 [8] = Bit 8  
 [9] = Bit 9  
 [10] = Bit 10  
 [11] = Bit 11  
 [12] = Bit 12  
 [13] = Bit 13  
 [14] = Bit 14  
 [15] = Bit 15

**Dependency:** Refer to: p2088, r2089

**Notice:** The parameter may be protected as a result of p0922 or p2079 and cannot be changed.

---

<b>p2083[0...15]</b>	<b>BI: Binector-connector converter status word 4 / Bin/con ZSW4</b>		
CU_G130_PN,	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
CU_G150_PN,	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2472
CU_G130_DP,	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
CU_G150_DP,	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
VECTOR_G, B_INF,	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
TM31, TM120, TM150,	-	-	0
TB30, ENC			

**Description:** Selects bits to be sent to the PROFIdrive controller.  
 The individual bits are combined to form free status word 4.

**Index:** [0] = Bit 0  
 [1] = Bit 1  
 [2] = Bit 2  
 [3] = Bit 3  
 [4] = Bit 4  
 [5] = Bit 5  
 [6] = Bit 6  
 [7] = Bit 7  
 [8] = Bit 8  
 [9] = Bit 9  
 [10] = Bit 10  
 [11] = Bit 11  
 [12] = Bit 12  
 [13] = Bit 13  
 [14] = Bit 14  
 [15] = Bit 15

**Dependency:** Refer to: p2088, r2089

---

<b>p2084[0...15]</b>	<b>BI: Binector-connector converter status word 5 / Bin/con ZSW5</b>		
CU_G130_PN,	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
CU_G150_PN,	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2472
CU_G130_DP,	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
CU_G150_DP,	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
VECTOR_G, B_INF,	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
TM31, TM120, TM150,	-	-	0
TB30, ENC			

**Description:** Selects bits to be sent to the PROFIdrive controller.  
 The individual bits are combined to form free status word 5.

**Index:** [0] = Bit 0  
 [1] = Bit 1  
 [2] = Bit 2  
 [3] = Bit 3  
 [4] = Bit 4  
 [5] = Bit 5  
 [6] = Bit 6  
 [7] = Bit 7

## 2 Parameters

### 2.2 List of parameters

[8] = Bit 8  
 [9] = Bit 9  
 [10] = Bit 10  
 [11] = Bit 11  
 [12] = Bit 12  
 [13] = Bit 13  
 [14] = Bit 14  
 [15] = Bit 15

**Dependency:** Refer to: p2088, r2089

<b>p2088[0...4]</b>		<b>Invert binector-connector converter status word / Bin/con ZSW inv</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> 2472 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>	0000 0000 0000 0000 bin	
<b>Description:</b>	Setting to invert the individual binector inputs of the binector connector converter.				
<b>Index:</b>	[0] = Status word 1 [1] = Status word 2 [2] = Free status word 3 [3] = Free status word 4 [4] = Free status word 5				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Bit 0	Inverted	Not inverted	-
	01	Bit 1	Inverted	Not inverted	-
	02	Bit 2	Inverted	Not inverted	-
	03	Bit 3	Inverted	Not inverted	-
	04	Bit 4	Inverted	Not inverted	-
	05	Bit 5	Inverted	Not inverted	-
	06	Bit 6	Inverted	Not inverted	-
	07	Bit 7	Inverted	Not inverted	-
	08	Bit 8	Inverted	Not inverted	-
	09	Bit 9	Inverted	Not inverted	-
	10	Bit 10	Inverted	Not inverted	-
	11	Bit 11	Inverted	Not inverted	-
	12	Bit 12	Inverted	Not inverted	-
	13	Bit 13	Inverted	Not inverted	-
	14	Bit 14	Inverted	Not inverted	-
	15	Bit 15	Inverted	Not inverted	-
<b>Dependency:</b>	Refer to: p2080, p2081, p2082, p2083, r2089				

<b>r2089[0...4]</b>		<b>CO: Send binector-connector converter status word / Bin/con ZSW send</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> 2472 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>	-	
<b>Description:</b>	Connector output to interconnect the status words to a PZD send word.				
<b>Index:</b>	[0] = Status word 1 [1] = Status word 2 [2] = Free status word 3 [3] = Free status word 4 [4] = Free status word 5				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-

03	Bit 3	ON	OFF	-
04	Bit 4	ON	OFF	-
05	Bit 5	ON	OFF	-
06	Bit 6	ON	OFF	-
07	Bit 7	ON	OFF	-
08	Bit 8	ON	OFF	-
09	Bit 9	ON	OFF	-
10	Bit 10	ON	OFF	-
11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

**Dependency:** Refer to: p2051, p2080, p2081, p2082, p2083

**Note:** r2089 together with p2080 to p2084 forms five binector-connector converters.

---

### r2090.0...15 BO: IF1 PROFIBUS PZD1 receive bit-serial / IF1 PZD1 recv bitw

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> 2468 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>
-	-	-	-

**Description:** Binector output for bit-serial interconnection of PZD1 (normally control word 1) received from the PROFIdrive controller.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

**Note:** IF1: Interface 1

---

### r2091.0...15 BO: IF1 PROFIdrive PZD2 receive bit-serial / IF1 PZD2 recv bitw

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> 2468 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>
-	-	-	-

**Description:** Binector output for bit-serial interconnection of PZD2 received from the PROFIdrive controller.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-

## 2 Parameters

### 2.2 List of parameters

06	Bit 6	ON	OFF	-
07	Bit 7	ON	OFF	-
08	Bit 8	ON	OFF	-
09	Bit 9	ON	OFF	-
10	Bit 10	ON	OFF	-
11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

**Note:** IF1: Interface 1

---

#### r2092.0...15 **BO: IF1 PROFIdrive PZD3 receive bit-serial / IF1 PZD3 recv bitw**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2468
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Binector output for bit-serial interconnection of PZD3 received from the PROFIdrive controller.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

**Note:** IF1: Interface 1

---

#### r2093.0...15 **BO: IF1 PROFIdrive PZD4 receive bit-serial / IF1 PZD4 recv bitw**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2468
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Binector output for bit-serial interconnection of PZD4 (normally control word 2) received from the PROFIdrive controller.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-

10	Bit 10	ON	OFF	-
11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

**Note:** IF1: Interface 1

---

### r2094.0...15 BO: Connector-binector converter binector output / Con/bin outp

CU_G130_PN,	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
CU_G150_PN,	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2468
CU_G130_DP,	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
CU_G150_DP,	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
VECTOR_G, B_INF,	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
TM31, TM120, TM150,	-	-	-
TB30, ENC	-	-	-

**Description:** Binector output for bit-serial onward interconnection of a PZD word received from the PROFIdrive controller. The PZD is selected via p2099[0].

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

**Dependency:** Refer to: p2099

---

### r2095.0...15 BO: Connector-binector converter binector output / Con/bin outp

CU_G130_PN,	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
CU_G150_PN,	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2468
CU_G130_DP,	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
CU_G150_DP,	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
VECTOR_G, B_INF,	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
TM31, TM120, TM150,	-	-	-
TB30, ENC	-	-	-

**Description:** Binector output for bit-serial interconnection of a PZD word received from the PROFIdrive controller. The PZD is selected via p2099[1].

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-

## 2 Parameters

### 2.2 List of parameters

11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

**Dependency:** Refer to: p2099

<b>p2098[0...1]</b>	<b>Inverter connector-binector converter binector output / Con/bin outp inv</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> 2468 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>	- - - - - 0000 0000 0000 0000 bin

**Description:** Setting to invert the individual binector outputs of the connector-binector converter.  
Using p2098[0], the signals of connector input p2099[0] are influenced.  
Using p2098[1], the signals of connector input p2099[1] are influenced.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Bit 0	Inverted	Not inverted	-
	01	Bit 1	Inverted	Not inverted	-
	02	Bit 2	Inverted	Not inverted	-
	03	Bit 3	Inverted	Not inverted	-
	04	Bit 4	Inverted	Not inverted	-
	05	Bit 5	Inverted	Not inverted	-
	06	Bit 6	Inverted	Not inverted	-
	07	Bit 7	Inverted	Not inverted	-
	08	Bit 8	Inverted	Not inverted	-
	09	Bit 9	Inverted	Not inverted	-
	10	Bit 10	Inverted	Not inverted	-
	11	Bit 11	Inverted	Not inverted	-
	12	Bit 12	Inverted	Not inverted	-
	13	Bit 13	Inverted	Not inverted	-
	14	Bit 14	Inverted	Not inverted	-
	15	Bit 15	Inverted	Not inverted	-

**Dependency:** Refer to: r2094, r2095, p2099

<b>p2099[0...1]</b>	<b>CI: Connector-binector converter signal source / Con/bin S_src</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Integer16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> 2468 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>	- - - - 0

**Description:** Sets the signal source for the connector-binector converter.  
A PZD receive word can be selected as signal source. The signals are available to be serially passed-on (interconnection).

**Dependency:** Refer to: r2094, r2095

**Note:** From the signal source set via the connector input, the corresponding lower 16 bits are converted. p2099[0...1] together with r2094.0...15 and r2095.0...15 forms two connector-binector converters:  
Connector input p2099[0] to binector output in r2094.0...15  
Connector input p2099[1] to binector output in r2095.0...15

---

<b>p2100[0...19]</b>	<b>Change fault response fault number / Chng resp F_no</b>		
All objects	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8075
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Selects the faults for which the fault response should be changed		
<b>Dependency:</b>	The fault is selected and the required response is set under the same index. Refer to: p2101		
<b>Note:</b>	Re-parameterization is also possible if a fault is present. The change only becomes effective after the fault has been resolved.		

---

<b>p2101[0...19]</b>	<b>Change fault response response / Chng resp resp</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8075
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	0	0
<b>Description:</b>	Sets the fault response for the selected fault.		
<b>Value:</b>	0: NONE		
<b>Dependency:</b>	The fault is selected and the required response is set under the same index.		
<b>Notice:</b>	For the following cases, it is not possible to re-parameterize the fault response to a fault: - fault number does not exist (exception value = 0). - Message type is not "fault" (F). - fault response is not permissible for the set fault number.		
<b>Note:</b>	Re-parameterization is also possible if a fault is present. The change only becomes effective after the fault has been resolved.		

---

<b>p2101[0...19]</b>	<b>Change fault response response / Chng resp resp</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8075
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	7	0
<b>Description:</b>	Sets the fault response for the selected fault.		
<b>Value:</b>	0: NONE 1: OFF1 2: OFF2 3: OFF3 5: STOP2 6: Internal armature short-circuit / DC braking 7: ENCODER (p0491)		
<b>Dependency:</b>	The fault is selected and the required response is set under the same index. Refer to: p2100		
<b>Notice:</b>	For the following cases, it is not possible to re-parameterize the fault response to a fault: - fault number does not exist (exception value = 0). - Message type is not "fault" (F). - fault response is not permissible for the set fault number.		

## 2 Parameters

### 2.2 List of parameters

**Note:** Re-parameterization is also possible if a fault is present. The change only becomes effective after the fault has been resolved.

The fault response can only be changed for faults with the appropriate identification (see the List Manual, chapter "Faults and alarms").

Example:  
 F12345 and fault response = OFF3 (OFF1, OFF2, NONE)  
 --> The default fault response OFF3 can be changed to OFF1, OFF2 or NONE.

For value = 1 (OFF1):  
 Braking along the ramp-function generator down ramp followed by a pulse inhibit.

For value = 2 (OFF2):  
 Internal/external pulse inhibit.

For value = 3 (OFF3):  
 Braking along the OFF3 down ramp followed by a pulse inhibit.

For value = 5 (STOP2):  
 n\_set = 0

For value = 6 (armature short-circuit, internal/DC braking):  
 The value can only be set for all motor data sets when p1231 = 3, 4.

a) For synchronous motors (p0300 = 2xx, 4xx), an internal armature short-circuit is executed.  
 b) For induction motors (p0300 = 1xx), a DC braking is initiated.

For value = 7 (ENCODER (p0491)):  
 The fault response set in p0491 is executed if applicable.

Note:  
 IASC: Internal Armature Short Circuit  
 DCBRK: DC braking

---

<b>p2101[0...19]</b>	<b>Change fault response response / Chng resp resp</b>		
<b>B_INF</b>	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8075
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	0
<b>Description:</b>	Sets the fault response for the selected fault.		
<b>Value:</b>	0: NONE 1: OFF1 2: OFF2		
<b>Dependency:</b>	The fault is selected and the required response is set under the same index.		
<b>Notice:</b>	For the following cases, it is not possible to re-parameterize the fault response to a fault: - fault number does not exist (exception value = 0). - Message type is not "fault" (F). - fault response is not permissible for the set fault number.		
<b>Note:</b>	Re-parameterization is also possible if a fault is present. The change only becomes effective after the fault has been resolved.		

---

<b>p2102</b>	<b>BI: Acknowledge all faults / Ackn all faults</b>		
<b>CU_G130_PN,</b> <b>CU_G150_PN,</b> <b>CU_G130_DP,</b> <b>CU_G150_DP</b>	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2546, 8060
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to acknowledge all faults at all drive objects of the drive system.		
<b>Note:</b>	A fault acknowledgment is triggered with a 0/1 signal.		

---

<b>p2103</b>	<b>BI: 1st acknowledge faults / 1st acknowledge</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the first signal source to acknowledge faults.		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	A fault acknowledgment is triggered with a 0/1 signal.		

---

<b>p2103[0...n]</b>	<b>BI: 1st acknowledge faults / 1st acknowledge</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary  <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170  <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2441, 2442, 2443, 2447, 2475, 2546, 9220, 9677, 9678 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the first signal source to acknowledge faults.		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>Note:</b>	A fault acknowledgment is triggered with a 0/1 signal.		

---

<b>p2104</b>	<b>BI: 2nd acknowledge faults / 2nd acknowledge</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the second signal source to acknowledge faults.		
<b>Note:</b>	A fault acknowledgment is triggered with a 0/1 signal.		

---

<b>p2104[0...n]</b>	<b>BI: 2nd acknowledge faults / 2nd acknowledge</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170  <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2546, 8060 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the second signal source to acknowledge faults.		
<b>Note:</b>	A fault acknowledgment is triggered with a 0/1 signal.		

## 2 Parameters

### 2.2 List of parameters

<b>p2105</b>	<b>BI: 3rd acknowledge faults / 3rd acknowledge</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> _	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the third signal source to acknowledge faults.		
<b>Note:</b>	A fault acknowledgment is triggered with a 0/1 signal.		
<b>p2105[0...n]</b>	<b>BI: 3rd acknowledge faults / 3rd acknowledge</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2546, 8060 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the third signal source to acknowledge faults.		
<b>Note:</b>	A fault acknowledgment is triggered with a 0/1 signal.		
<b>p2106</b>	<b>BI: External fault 1 / External fault 1</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> _	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the signal source for external fault 1.		
<b>Dependency:</b>	Refer to: F07860		
<b>Note:</b>	An external fault is triggered with a 0 signal. If this fault is output at the Control Unit, then it is transferred to all existing drive objects.		
<b>p2106[0...n]</b>	<b>BI: External fault 1 / External fault 1</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2546 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the signal source for external fault 1.		
<b>Dependency:</b>	Refer to: F07860		
<b>Note:</b>	An external fault is triggered with a 0 signal. If this fault is output at the Control Unit, then it is transferred to all existing drive objects.		

---

<b>p2107</b>	<b>BI: External fault 2 / External fault 2</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> _	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the signal source for external fault 2.		
<b>Dependency:</b>	Refer to: F07861		
<b>Note:</b>	An external fault is triggered with a 0 signal. If this fault is output at the Control Unit, then it is transferred to all existing drive objects.		

---

<b>p2107[0...n]</b>	<b>BI: External fault 2 / External fault 2</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2546 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the signal source for external fault 2.		
<b>Dependency:</b>	Refer to: F07861		
<b>Note:</b>	An external fault is triggered with a 0 signal. If this fault is output at the Control Unit, then it is transferred to all existing drive objects.		

---

<b>p2108</b>	<b>BI: External fault 3 / External fault 3</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> _	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the signal source for external fault 3. External fault 3 is initiated by the following AND logic operation: - BI: p2108 negated - BI: p3111 - BI: p3112 negated		
<b>Dependency:</b>	Refer to: p3110, p3111, p3112 Refer to: F07862		
<b>Note:</b>	An external fault is triggered with a 0 signal. If this fault is output at the Control Unit, then it is transferred to all existing drive objects.		

<b>p2108[0...n]</b>			
<b>VECTOR_G, B_INF</b>	<b>BI: External fault 3 / External fault 3</b>		
	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2546
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for external fault 3. External fault 3 is initiated by the following AND logic operation: - BI: p2108 negated - BI: p3111 - BI: p3112 negated		
<b>Dependency:</b>	Refer to: p3110, p3111, p3112 Refer to: F07862		
<b>Note:</b>	An external fault is triggered with a 0 signal. If this fault is output at the Control Unit, then it is transferred to all existing drive objects.		
<hr/>			
<b>r2109[0...63]</b>			
	<b>Fault time removed in milliseconds / t_flt resolved ms</b>		
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8060
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ms]	- [ms]	- [ms]
<b>Description:</b>	Displays the system runtime in milliseconds when the fault was removed.		
<b>Dependency:</b>	Refer to: r0945, r0947, r0948, r0949, r2114, r2130, r2133, r2136, r3115, r3120, r3122		
<b>Notice:</b>	The time comprises r2136 (days) and r2109 (milliseconds).		
<b>Note:</b>	The buffer parameters are cyclically updated in the background (refer to status signal in r2139). The structure of the fault buffer and the assignment of the indices is shown in r0945.		
<hr/>			
<b>r2110[0...63]</b>			
	<b>Alarm number / Alarm number</b>		
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8065
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	This parameter is identical to r2122.		
<hr/>			
<b>p2111</b>			
	<b>Alarm counter / Alarm counter</b>		
All objects	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8065
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Number of alarms that have occurred after the last reset.		
<b>Dependency:</b>	When p2111 is set to 0, the following is initiated: - all of the alarms of the alarm buffer that have gone [0...7] are transferred into the alarm history [8...63]. - the alarm buffer [0...7] is deleted. Refer to: r2110, r2122, r2123, r2124, r2125		
<b>Note:</b>	The parameter is reset to 0 at POWER ON.		

<b>p2112</b>	<b>BI: External alarm 1 / External alarm 1</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the signal source for external alarm 1.		
<b>Dependency:</b>	Refer to: A07850		
<b>Note:</b>	An external alarm is triggered with a 0 signal.		
<b>p2112[0...n]</b>	<b>BI: External alarm 1 / External alarm 1</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2546 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the signal source for external alarm 1.		
<b>Dependency:</b>	Refer to: A07850		
<b>Note:</b>	An external alarm is triggered with a 0 signal.		
<b>r2114[0...1]</b>	<b>System runtime total / Sys runtime tot</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the total system runtime for the drive unit. The time comprises r2114[0] (milliseconds) and r2114[1] (days). After r2114[0] has reached a value of 86.400.000 ms (24 hours) this value is reset and r2114[1] is incremented.		
<b>Index:</b>	[0] = Milliseconds [1] = Days		
<b>Dependency:</b>	Refer to: r0948, r2109, r2123, r2125, r2130, r2136, r2145, r2146		
<b>Note:</b>	The time in r2114 is used to display the times for faults and alarms. When the electronic power supply is switched out, the counter values are saved. After the drive unit is switched on, the counter continues to run with the last value that was saved.		
<b>p2116</b>	<b>BI: External alarm 2 / External alarm 2</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the signal source for external alarm 2.		
<b>Dependency:</b>	Refer to: A07851		
<b>Note:</b>	An external alarm is triggered with a 0 signal.		

## 2 Parameters

### 2.2 List of parameters

<b>p2116[0...n]</b>	<b>BI: External alarm 2 / External alarm 2</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2546
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for external alarm 2.		
<b>Dependency:</b>	Refer to: A07851		
<b>Note:</b>	An external alarm is triggered with a 0 signal.		
<b>p2117</b>	<b>BI: External alarm 3 / External alarm 3</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for external alarm 3.		
<b>Dependency:</b>	Refer to: A07852		
<b>Note:</b>	An external alarm is triggered with a 0 signal.		
<b>p2117[0...n]</b>	<b>BI: External alarm 3 / External alarm 3</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 2546
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for external alarm 3.		
<b>Dependency:</b>	Refer to: A07852		
<b>Note:</b>	An external alarm is triggered with a 0 signal.		
<b>p2118[0...19]</b>	<b>Change message type message number / Chng type msg_no</b>		
All objects	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8075
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Selects faults or alarms for which the message type should be changed.		
<b>Dependency:</b>	Selects the fault or alarm selection and sets the required type of message realized under the same index. Refer to: p2119		
<b>Note:</b>	Re-parameterization is also possible if a message is present. The change only becomes effective after the message has gone.		

<b>p2119[0...19]</b>	<b>Change message type type / Change type type</b>		
All objects	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> 1	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 3	<b>Access level:</b> 3 <b>Func. diagram:</b> 8050, 8075 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the message type for the selected fault or alarm.		
<b>Value:</b>	1: Fault (F) 2: Alarm (A) 3: No message (N)		
<b>Dependency:</b>	Selects the fault or alarm selection and sets the required type of message realized under the same index. Refer to: p2118		
<b>Note:</b>	Re-parameterization is also possible if a message is present. The change only becomes effective after the message has gone. The message type can only be changed for messages with the appropriate identification (exception, value = 0). Example: F12345(A) --> Fault F12345 can be changed to alarm A12345. In this case, the message number that may be possibly entered in p2100[0...19] and p2126[0...19] is automatically removed.		
<b>r2120</b>	<b>CO: Sum of fault and alarm buffer changes / Sum buffer changed</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> 8065 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the sum of all of the fault and alarm buffer changes in the drive unit.		
<b>Dependency:</b>	Refer to: r0944, r2121		
<b>r2121</b>	<b>CO: Counter alarm buffer changes / Alrm buff changed</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 8065 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	This counter is incremented every time the alarm buffer changes.		
<b>Dependency:</b>	Refer to: r2110, r2122, r2123, r2124, r2125		
<b>r2122[0...63]</b>	<b>Alarm code / Alarm code</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 2 <b>Func. diagram:</b> 8050, 8065 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the number of alarms that have occurred.		
<b>Dependency:</b>	Refer to: r2110, r2123, r2124, r2125, r2134, r2145, r2146, r3121, r3123		
<b>Notice:</b>	The properties of the alarm buffer should be taken from the corresponding product documentation.		

## 2 Parameters

### 2.2 List of parameters

**Note:** The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

Alarm buffer structure (general principle):

r2122[0], r2124[0], r2123[0], r2125[0] --> alarm 1 (the oldest)

...

r2122[7], r2124[7], r2123[7], r2125[7] --> Alarm 8 (the latest)

When the alarm buffer is full, the alarms that have gone are entered into the alarm history:

r2122[8], r2124[8], r2123[8], r2125[8] --> Alarm 1 (the latest)

...

r2122[63], r2124[63], r2123[63], r2125[63] --> alarm 56 (the oldest)

---

#### r2123[0...63] Alarm time received in milliseconds / t\_alarm rcv ms

All objects

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** 8050, 8065

**P-Group:** Messages

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

- [ms]

- [ms]

- [ms]

**Description:** Displays the system runtime in milliseconds when the alarm occurred.

**Dependency:** Refer to: r2110, r2114, r2122, r2124, r2125, r2134, r2145, r2146, r3121, r3123

**Notice:** The time comprises r2145 (days) and r2123 (milliseconds).

**Note:** The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the alarm buffer and the assignment of the indices is shown in r2122.

---

#### r2124[0...63] Alarm value / Alarm value

All objects

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Integer32

**Dyn. index:** -

**Func. diagram:** 8050, 8065

**P-Group:** Messages

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:** Displays additional information about the active alarm (as integer number).

**Dependency:** Refer to: r2110, r2122, r2123, r2125, r2134, r2145, r2146, r3121, r3123

**Note:** The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the alarm buffer and the assignment of the indices is shown in r2122.

---

#### r2125[0...63] Alarm time removed in milliseconds / t\_alarm res ms

All objects

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** 8050, 8065

**P-Group:** Messages

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

- [ms]

- [ms]

- [ms]

**Description:** Displays the system runtime in milliseconds when the alarm was cleared.

**Dependency:** Refer to: r2110, r2114, r2122, r2123, r2124, r2134, r2145, r2146, r3121, r3123

**Notice:** The time comprises r2146 (days) and r2125 (milliseconds).

**Note:** The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the alarm buffer and the assignment of the indices is shown in r2122.

---

<b>p2126[0...19]</b>	<b>Change acknowledge mode fault number / Chng ackn F_no</b>		
All objects	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8075
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Selects the faults for which the acknowledge mode is to be changed		
<b>Dependency:</b>	Selects the faults and sets the required acknowledge mode realized under the same index Refer to: p2127		
<b>Note:</b>	Re-parameterization is also possible if a fault is present. The change only becomes effective after the fault has been resolved.		

---

<b>p2127[0...19]</b>	<b>Change acknowledge mode mode / Chng ackn mode</b>		
All objects	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8075
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	3	1
<b>Description:</b>	Sets the acknowledge mode for selected fault.		
<b>Value:</b>	1: Acknowledgment only using POWER ON 2: Ack IMMEDIATELY after the fault cause has been removed 3: Acknowledgment only for PULSE INHIBIT		
<b>Dependency:</b>	Selects the faults and sets the required acknowledge mode realized under the same index Refer to: p2126		
<b>Notice:</b>	It is not possible to re-parameterize the acknowledge mode for a fault in the following cases: - fault number does not exist (exception value = 0). - Message type is not "fault" (F). - Acknowledge mode is not permissible for the set fault number.		
<b>Note:</b>	Re-parameterization is also possible if a fault is present. The change only becomes effective after the fault has been resolved. The acknowledge mode can only be changed for faults with the appropriate identification. Example: F12345 and acknowledge mode = IMMEDIATELY (POWER ON) --> The acknowledge mode can be changed from IMMEDIATELY to POWER ON.		

---

<b>p2128[0...15]</b>	<b>Faults/alarms trigger selection / F/A trigger sel</b>		
All objects	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8070
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Sets the faults/alarms for which a trigger signal should be generated in r2129.0...15.		
<b>Dependency:</b>	If the fault/alarm set in p2128[0...15] occurs, then the particular binector output r2129.0...15 is set. Refer to: r2129		

---

**r2129.0...15**      **CO/BO: Faults/alarms trigger word / F/A trigger word**

All objects      **Can be changed:** -      **Calculated:** -      **Access level:** 3  
**Data type:** Unsigned16      **Dyn. index:** -      **Func. diagram:** 8070  
**P-Group:** Messages      **Unit group:** -      **Unit selection:** -  
**Not for motor type:** -      **Scaling:** -      **Expert list:** 1  
**Min**      **Max**      **Factory setting**  
-      -      -

**Description:**      Display and BICO output for the trigger signals of the faults/alarms set in p2128[0...15].

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Trigger signal p2128[0]	ON	OFF	-
	01	Trigger signal p2128[1]	ON	OFF	-
	02	Trigger signal p2128[2]	ON	OFF	-
	03	Trigger signal p2128[3]	ON	OFF	-
	04	Trigger signal p2128[4]	ON	OFF	-
	05	Trigger signal p2128[5]	ON	OFF	-
	06	Trigger signal p2128[6]	ON	OFF	-
	07	Trigger signal p2128[7]	ON	OFF	-
	08	Trigger signal p2128[8]	ON	OFF	-
	09	Trigger signal p2128[9]	ON	OFF	-
	10	Trigger signal p2128[10]	ON	OFF	-
	11	Trigger signal p2128[11]	ON	OFF	-
	12	Trigger signal p2128[12]	ON	OFF	-
	13	Trigger signal p2128[13]	ON	OFF	-
	14	Trigger signal p2128[14]	ON	OFF	-
	15	Trigger signal p2128[15]	ON	OFF	-

**Dependency:**      If the fault/alarm set in p2128[0...15] occurs, then the particular binector output r2129.0...15 is set.  
Refer to: p2128

**Note:**      CO: r2129 = 0 --> None of the selected messages has occurred.  
CO: r2129 > 0 --> At least one of the selected messages has occurred.

---

**r2130[0...63]**      **Fault time received in days / t\_fault recv days**

All objects      **Can be changed:** -      **Calculated:** -      **Access level:** 3  
**Data type:** Unsigned16      **Dyn. index:** -      **Func. diagram:** 8060  
**P-Group:** Messages      **Unit group:** -      **Unit selection:** -  
**Not for motor type:** -      **Scaling:** -      **Expert list:** 1  
**Min**      **Max**      **Factory setting**  
-      -      -

**Description:**      Displays the system runtime in days when the fault occurred.

**Dependency:**      Refer to: r0945, r0947, r0948, r0949, r2109, r2114, r2133, r2136, r3115, r3120, r3122

**Notice:**      The time comprises r2130 (days) and r0948 (milliseconds).

**Note:**      The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

---

**r2131**      **CO: Actual fault code / Act fault code**

All objects      **Can be changed:** -      **Calculated:** -      **Access level:** 3  
**Data type:** Unsigned16      **Dyn. index:** -      **Func. diagram:** 8060  
**P-Group:** Messages      **Unit group:** -      **Unit selection:** -  
**Not for motor type:** -      **Scaling:** -      **Expert list:** 1  
**Min**      **Max**      **Factory setting**  
-      -      -

**Description:**      Displays the code of the oldest active fault.

**Dependency:**      Refer to: r3131, r3132

**Note:**      0: No fault present.

<b>r2132</b>	<b>CO: Actual alarm code / Actual alarm code</b>				
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8065		
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the code of the last alarm that occurred.				
<b>Note:</b>	0: No alarm present.				
<b>r2133[0...63]</b>	<b>Fault value for float values / Fault val float</b>				
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8060		
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays additional information about the fault that occurred for float values.				
<b>Dependency:</b>	Refer to: r0945, r0947, r0948, r0949, r2109, r2130, r2136, r3115				
<b>Note:</b>	The buffer parameters are cyclically updated in the background (refer to status signal in r2139).				
<b>r2134[0...63]</b>	<b>Alarm value for float values / Alarm value float</b>				
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8065		
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays additional information about the active alarm for float values.				
<b>Dependency:</b>	Refer to: r2110, r2122, r2123, r2124, r2125, r2145, r2146, r3121, r3123				
<b>Note:</b>	The buffer parameters are cyclically updated in the background (refer to status signal in r2139).				
<b>r2135.0...15</b>	<b>CO/BO: Status word faults/alarms 2 / ZSW fault/alarm 2</b>				
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2548		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the second status word of faults and alarms.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Fault encoder 1	Yes	No	-
	01	Fault encoder 2	Yes	No	-
	02	Fault encoder 3	Yes	No	-
	12	Fault motor overtemperature	Yes	No	8016
	13	Fault power unit thermal overload	Yes	No	8021
	14	Alarm motor overtemperature	Yes	No	8016
	15	Alarm power unit thermal overload	Yes	No	8021

<b>r2136[0...63]</b>	<b>Fault time removed in days / t_fit resolv days</b>		
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8060
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the system runtime in days when the fault was removed.		
<b>Dependency:</b>	Refer to: r0945, r0947, r0948, r0949, r2109, r2114, r2130, r2133, r3115, r3120, r3122		
<b>Notice:</b>	The time comprises r2136 (days) and r2109 (milliseconds).		
<b>Note:</b>	The buffer parameters are cyclically updated in the background (refer to status signal in r2139).		

<b>r2138.7...15</b>	<b>CO/BO: Control word faults/alarms / STW fault/alarm</b>			
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2546	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and BICO output for the control word of faults and alarms.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	07	Acknowledge fault	Yes	No
	10	External alarm 1 (A07850) effective	Yes	No
	11	External alarm 2 (A07851) effective	Yes	No
	12	External alarm 3 (A07852) effective	Yes	No
	13	External fault 1 (F07860) effective	Yes	No
	14	External fault 2 (F07861) effective	Yes	No
	15	External fault 3 (F07862) effective	Yes	No
				<b>FP</b>
				8060
				8065
				8065
				8065
				8060
				8060
				8060
<b>Dependency:</b>	Refer to: p2103, p2104, p2105, p2106, p2107, p2108, p2112, p2116, p2117, p3110, p3111, p3112			

<b>r2139.0...15</b>	<b>CO/BO: Status word faults/alarms 1 / ZSW fault/alarm 1</b>			
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2548	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and BICO output for status word 1 of faults and alarms.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Being acknowledged	Yes	No
	01	Acknowledgment required	Yes	No
	03	Fault present	Yes	No
	05	Safety message present	Yes	No
	06	Internal message 1 present	Yes	No
	07	Alarm present	Yes	No
	08	Internal message 2 present	Yes	No
	11	Alarm class bit 0	High	Low
	12	Alarm class bit 1	High	Low
	13	Maintenance required	Yes	No
	14	Maintenance urgently required	Yes	No
	15	Fault gone/can be acknowledged	Yes	No
				<b>FP</b>
				-
				-
				8060
				-
				-
				-
				-
				-
				-
<b>Note:</b>	For bit 03, 05, 07: These bits are set if at least one fault/alarm occurs. Data is entered into the fault/alarm buffer with delay. This is the reason that the fault/alarm buffer should only be read if, after "fault present" or "alarm present" has occurred, a change in the buffer was also detected (r0944, r9744, r2121).			

For bit 06, 08:

These status bits are used for internal diagnostic purposes only.

For bit 12, 11:

These status bits are used for the classification of internal alarm classes and are intended for diagnostic purposes only on certain automation systems with integrated SINAMICS functionality.

<b>p2140[0...n]</b>	<b>Hysteresis speed 2 / n_hysteresis 2</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8010
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> 0.00 [rpm]	<b>Max</b> 300.00 [rpm]	<b>Factory setting</b> 90.00 [rpm]
<b>Description:</b>	Sets the hysteresis speed (bandwidth) for the following signals: " n_act  <= speed threshold value 2" (BO: r2197.1) " n_act  > speed threshold value 2" (BO: r2197.2)		
<b>Dependency:</b>	Refer to: p2155, r2197		
<b>p2141[0...n]</b>	<b>Speed threshold 1 / n_thresh val 1</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8010
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> 0.00 [rpm]	<b>Max</b> 210000.00 [rpm]	<b>Factory setting</b> 5.00 [rpm]
<b>Description:</b>	Sets the speed threshold value for the signal "f or n comparison value reached or exceeded" (BO: r2199.1).		
<b>Dependency:</b>	Refer to: p2142, r2199		
<b>p2142[0...n]</b>	<b>Hysteresis speed 1 / n_hysteresis 1</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8010
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> 0.00 [rpm]	<b>Max</b> 300.00 [rpm]	<b>Factory setting</b> 2.00 [rpm]
<b>Description:</b>	Sets the hysteresis speed (bandwidth) for the signal "f or n / v comparison value reached or exceeded" (BO: r2199.1).		
<b>Dependency:</b>	Refer to: p2141, r2199		
<b>p2144[0...n]</b>	<b>BI: Motor stall monitoring enable (negated) / Mot stall enab neg</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8012
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> -	<b>Max</b> -	<b>Factory setting</b> 0
<b>Description:</b>	Sets the signal source for the negated enable (0 = enable) of the motor stall monitoring.		
<b>Dependency:</b>	Refer to: p2163, p2164, p2166, r2197, r2198 Refer to: F07900		
<b>Note:</b>	When interconnecting the enable signal with r2197.7 then the stall signal is suppressed if there is no speed setpoint - actual value deviation.		

## 2 Parameters

### 2.2 List of parameters

<b>r2145[0...63]</b>	<b>Alarm time received in days / t_alarm rcv days</b>		
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8065
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the system runtime in days when the alarm occurred.		
<b>Dependency:</b>	Refer to: r2110, r2114, r2122, r2123, r2124, r2125, r2134, r2146, r3121, r3123		
<b>Notice:</b>	The time comprises r2145 (days) and r2123 (milliseconds).		
<b>Note:</b>	The buffer parameters are cyclically updated in the background (refer to status signal in r2139).		
<b>r2146[0...63]</b>	<b>Alarm time removed in days / t_alarm res days</b>		
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8065
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the system runtime in days when the alarm was cleared.		
<b>Dependency:</b>	Refer to: r2110, r2114, r2122, r2123, r2124, r2125, r2134, r2145, r3121, r3123		
<b>Notice:</b>	The time comprises r2146 (days) and r2125 (milliseconds).		
<b>Note:</b>	The buffer parameters are cyclically updated in the background (refer to status signal in r2139).		
<b>p2147</b>	<b>Delete fault buffer of all drive objects / Del fault buffer</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8060
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Setting to delete the fault buffer of all existing drive objects.		
<b>Value:</b>	0: Inactive 1: Start to delete the fault buffer of all drive objects		
<b>Dependency:</b>	Refer to: r0945, r0947, r0948, r0949, r2109, r2130, r2133, r2136		
<b>Note:</b>	p2147 is automatically set to 0 after execution.		
<b>p2148[0...n]</b>	<b>BI: RFG active / RFG active</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8011
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the signal "ramp-function generator active" for the following signals/messages: "Speed setpoint - actual value deviation within tolerance t_on" (BO: r2199.4) "Ramp-up/ramp-down completed" (BO: r2199.5)		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		

**Note:** The binector input is automatically pre-assigned to r1199.2.  
 The following applies for SERVO:  
 The pre-assignment using the automatic calculation of the motor/control parameters in the drive (p0340 = 1, 3, 5) is only realized if, at the instant of the calculation, the "setpoint channel" function module is active (r0108.8 = 1). If the calculation in p0340 is not selected when downloading parameters, then the parameter is not pre-assigned.

<b>p2149[0...n]</b>		<b>Monitoring configuration / Monit config</b>		
<b>VECTOR_G</b>	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 0000 0000 0001 bin	
<b>Description:</b>	Sets the configuration for messages and monitoring functions.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Enable alarm A07903	Yes	No
	01	Load monitoring only in the 1st quadrant	Yes	No
	03	Reserved		-
	06	Enable underspeed monitoring	Yes	No
	15	Automatic parameterization carried out (p0340 = 1, p3900 > 0)	Yes	No
<b>Dependency:</b>	Refer to: r2197 Refer to: A07903			
<b>Note:</b>	For bit 00: Alarm A07903 is output when the bit is set with r2197.7 = 0 (n_set <> n_act). For bit 01: As a result of the positive characteristic parameters (p2182 ... p2190), when the bit is set, the load monitoring is only executed in the 1st quadrants. For bit 03: When the bit is set, r2197.1 and r2197.2 are determined using separate hysteresis functions. For bit 06: When the bit is set, with r2197.1 = 1 (n_act < p2155 speed threshold value 2) alarm A08721 is output, and with r2199.0 = 1 (n_act < p2161 speed threshold value 3), fault F07822 is output. For separately excited synchronous motors (without encoder) in torque control (p1501 set), the underspeed speed monitoring is automatically activated if conditions (p0300 = 5, p1300 = 20) for the automatic pre-assignment of the threshold values during commissioning (p0340 = 1) are fulfilled. The alarm threshold p2155 is preassigned with 1.5 * p1755 - and the fault threshold p2161, with p1755. For bit 15: The bit indicates whether the automatic parameterization (p0340 = 1, p3900 > 0) for the parameters of the extended monitoring functions was carried out. If the bit is not set (e.g. when the configuration is activated (p0108.15)), the parameterization is automatically carried out during booting even if r3925.0 is already 1.			

<b>p2150[0...n]</b>		<b>Hysteresis speed 3 / n_hysteresis 3</b>		
<b>VECTOR_G</b>	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> 0.00 [rpm]	<b>Calculated:</b> CALC_MOD_LIM_REF <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 3_1 <b>Scaling:</b> - <b>Max</b> 300.00 [rpm]	<b>Access level:</b> 3 <b>Func. diagram:</b> 8010, 8011 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 2.00 [rpm]	
<b>Description:</b>	Sets the hysteresis speed (bandwidth) for the following signals: " n_act  < speed threshold value 3" (BO: r2199.0) "n_set >= 0" (BO: r2198.5) "n_act >= 0" (BO: r2197.3)			
<b>Dependency:</b>	Refer to: p2161, r2197, r2199			

## 2 Parameters

### 2.2 List of parameters

<b>p2151[0...n]</b>	<b>CI: Speed setpoint for messages/signals / n_set for msg</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8011
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1170[0]
<b>Description:</b>	Sets the signal source for the speed setpoint for the following messages: "Speed setpoint - actual value deviation within tolerance t_off" (BO: r2197.7) "Ramp-up/ramp-down completed" (BO: r2199.5) " n_set  < p2161" (BO: r2198.4) "n_set > 0" (BO: r2198.5)		
<b>Dependency:</b>	Refer to: r2197, r2198, r2199		
<b>p2153[0...n]</b>	<b>Speed actual value filter time constant / n_act_filt T</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8010
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	1000000 [ms]	0 [ms]
<b>Description:</b>	Sets the time constant of the PT1 element to smooth the speed / velocity actual value. The smoothed actual speed/velocity is compared with the threshold values and is only used for messages and signals.		
<b>Dependency:</b>	Refer to: r2169		
<b>p2154[0...n]</b>	<b>CI: Speed setpoint 2 / n_set 2</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8010
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for speed setpoint 2. The sum of p2151 and p2154 is used for the following messages/signals: "Speed setpoint - actual value deviation within tolerance t_off" (r2197.7) "Speed setpoint - actual value deviation within tolerance t_on" (r2199.4) "Ramp-up/ramp-down completed" (r2199.5)		
<b>Dependency:</b>	Refer to: p2151, r2197, r2199		
<b>p2155[0...n]</b>	<b>Speed threshold 2 / n_thresh val 2</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8010
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	900.00 [rpm]
<b>Description:</b>	Sets the speed threshold value for the following messages: " n_act  <= speed threshold value 2" (BO: r2197.1) " n_act  > speed threshold value 2" (BO: r2197.2)		

**Dependency:** Refer to: p2140, r2197  
Refer to: A07821

**Caution:** The filter monitoring function is deactivated with 2155 = 0.0.



**Note:** The parameter is used as alarm threshold for underspeed monitoring.

Underspeed monitoring for a separately excited synchronous motor in closed-loop torque control without an encoder (p0300 = 5, p1300 = 20, p1501 = 1 signal), is automatically activated internally, and can be manually activated with p2149.6 = 1.

For separately excited synchronous motors, when exiting commissioning (p0340 = 5), this parameter is automatically assigned 1.5 \* p1755.

---

### p2156[0...n] On delay comparison value reached / t\_on cmpr val rchd

VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8010
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [ms]	10000.0 [ms]	0.0 [ms]

**Description:** Sets the switch-in delay time for the signal "comparison value reached" (BO: r2199.1).

**Dependency:** Refer to: p2141, p2142, r2199

---

### p2161[0...n] Speed threshold 3 / n\_thresh val 3

VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8010, 8011
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	5.00 [rpm]

**Description:** Sets the speed threshold value for the signal "|n\_act| < speed threshold value 3" (BO: r2199.0).

**Dependency:** Refer to: p2142, r2199

Refer to: F07822

**Caution:** The threshold monitoring function is deactivated with 2161 = 0.0.



**Note:** The parameter is used as fault threshold for underspeed monitoring

Underspeed monitoring for a separately excited synchronous motor in closed-loop torque control without an encoder (p0300 = 5, p1300 = 20, p1501 = 1 signal), is automatically activated internally, and can be manually activated with p2149.6 = 1.

For separately excited synchronous motors, when exiting commissioning (p0340 = 5), this parameter is automatically assigned p1755.

---

### p2162[0...n] Hysteresis speed n\_act > n\_max / Hyst n\_act > n\_max

VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8010
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	60000.00 [rpm]	0.00 [rpm]

**Description:** Sets the hysteresis speed (bandwidth) for the signal "n\_act > n\_max" (BO: r2197.6).

**Dependency:** Refer to: r1084, r1087, r2197

## 2 Parameters

### 2.2 List of parameters

**Notice:** For  $p0322 = 0$ , the following applies:  $p2162 \leq 0.1 * p0311$   
 For  $p0322 > 0$ , the following applies:  $p2162 \leq 1.02 * p0322 - p1082$   
 If one of the conditions is violated,  $p2162$  is appropriately and automatically reduced when exiting the commissioning mode.

**Note:** For a negative speed limit ( $r1087$ ) the hysteresis is effective below the limit value and for a positive speed limit ( $r1084$ ) above the limit value.  
 If significant overshoot occurs in the maximum speed range (e.g. due to load shedding), you are advised to increase the dynamic response of the speed controller (if possible). If this is insufficient, the hysteresis  $p2162$  can only be increased by more than 10% of the rated speed when the maximum speed ( $p0322$ ) of the motor is sufficiently greater than the speed limit  $p1082$ .

---

<b>p2163[0...n]</b>	<b>Speed threshold 4 / n_thresh val 4</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8011
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	90.00 [rpm]
<b>Description:</b>	Sets the speed threshold value for the "speed setpoint - actual value deviation in tolerance t_off" signal/message (BO: r2197.7).		
<b>Dependency:</b>	Refer to: p2164, p2166, r2197		

---

<b>p2164[0...n]</b>	<b>Hysteresis speed 4 / n_hysteresis 4</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8011
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	200.00 [rpm]	2.00 [rpm]
<b>Description:</b>	Sets the hysteresis speed (bandwidth) for the "speed setpoint - actual value deviation in tolerance t_off" signal/message (BO: r2197.7).		
<b>Dependency:</b>	Refer to: p2163, p2166, r2197		

---

<b>p2166[0...n]</b>	<b>Off delay n_act = n_set / t_del_off n_i=n_so</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8011
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [ms]	10000.0 [ms]	200.0 [ms]
<b>Description:</b>	Sets the switch-off delay time for the "speed setpoint - actual value deviation in tolerance t_off" signal/message (BO: r2197.7).		
<b>Dependency:</b>	Refer to: p2163, p2164, r2197		

---

<b>p2167[0...n]</b>	<b>Switch-on delay n_act = n_set / t_on n_act=n_set</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8011
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [ms]	10000.0 [ms]	200.0 [ms]
<b>Description:</b>	Sets the switch-on delay for the "speed setpoint - actual value deviation in tolerance t_on" signal/message (BO: r2199.4).		

<b>r2169</b>	<b>CO: Actual speed smoothed signals / n_act smth message</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8010
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Display and connector output of the smoothed speed actual value for messages.		
<b>Dependency:</b>	Refer to: p2153		
<b>p2174[0...n]</b>	<b>Torque threshold value 1 / M_thresh val 1</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8012
	<b>P-Group:</b> Messages	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Nm]	20000000.00 [Nm]	5.13 [Nm]
<b>Description:</b>	Sets the torque threshold value for the messages: "Torque setpoint < torque threshold value 1 and n_set reached" (BO: r2198.9) "Torque setpoint < torque threshold value 1" (BO: r2198.10) "Torque setpoint > torque threshold value 1" (BO: r2198.13)		
<b>Dependency:</b>	Refer to: p2195, r2198		
<b>p2175[0...n]</b>	<b>Motor blocked speed threshold / Mot lock n_thresh</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8012
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	120.00 [rpm]
<b>Description:</b>	Sets the speed threshold for the message "Motor blocked" (BO: r2198.6).		
<b>Dependency:</b>	Refer to: p0500, p2177, r2198 Refer to: F07900		
<b>Note:</b>	The following applies for encoderless vector control for induction motors: At low speeds in open-loop speed controlled operation (see p1755, p1756), a blocked motor cannot be detected. The following applies for encoderless vector control for permanent magnet synchronous motors: At low speeds in open-loop speed controlled operation (see p1755, p1756), a blocked motor can only be detected if p2175 = p1755, and p1750.6 is set to 1.		
<b>p2177[0...n]</b>	<b>Motor blocked delay time / Mot lock t_del</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8012
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	65.000 [s]	1.000 [s]
<b>Description:</b>	Sets the delay time for the message "Motor blocked" (BO: r2198.6).		
<b>Dependency:</b>	Refer to: p0500, p2175, r2198 Refer to: F07900		

## 2 Parameters

### 2.2 List of parameters

**Note:** The following applies for sensorless vector control:  
At low speeds a locked motor can only be detected if no change is made to open-loop speed controlled operation. If this is the case, the value in p2177 must be reduced accordingly ( $p2177 < p1758$ ) before time p2177 has elapsed in order to detect the locked state reliably.  
As countermeasure, it is generally also possible to set p1750.6. This is only not permitted if the drive is slowly reversed by the load at the torque limit (speed below p1755 for longer than p1758).

---

<b>p2178[0...n]</b>	<b>Motor stalled delay time / Mot stall t<sub>del</sub></b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_REG	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8012
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	10.000 [s]	0.010 [s]
<b>Description:</b>	Sets the delay time for the message "Motor stalled" (BO: r2198.7).		
<b>Dependency:</b>	Refer to: r2198		

---

<b>p2181[0...n]</b>	<b>Load monitoring response / Load monit resp</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8013
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	6	0
<b>Description:</b>	Sets the response when evaluating the load monitoring.		
<b>Value:</b>	0: Load monitoring disabled 1: A07920 for torque/speed too low 2: A07921 for torque/speed too high 3: A07922 for torque/speed out of tolerance 4: F07923 for torque/speed too low 5: F07924 for torque/speed too high 6: F07925 for torque/speed out of tolerance		
<b>Dependency:</b>	Refer to: p2182, p2183, p2184, p2185, p2186, p2187, p2188, p2189, p2190, p2192, r2198 Refer to: A07920, A07921, A07922, F07923, F07924, F07925		
<b>Note:</b>	The response to the faults F07923 ... F07925 can be set. This parameter setting has no effect on the generation of fault F07936.		

---

<b>p2182[0...n]</b>	<b>Load monitoring speed threshold value 1 / n<sub>thresh</sub> 1</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8013
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	150.00 [rpm]
<b>Description:</b>	Sets the speed/torque envelope curve for load monitoring. The envelope curve (upper and lower envelope curve) is defined as follows based on 3 speed thresholds: p2182 (n <sub>threshold</sub> 1) --> p2185 (M <sub>threshold</sub> 1, upper), p2186 (M <sub>threshold</sub> 1, lower) p2183 (n <sub>threshold</sub> 2) --> p2187 (M <sub>threshold</sub> 2, upper), p2188 (M <sub>threshold</sub> 2, lower) p2184 (n <sub>threshold</sub> 3) --> p2189 (M <sub>threshold</sub> 3, upper), p2190 (M <sub>threshold</sub> 3, lower)		
<b>Dependency:</b>	The following applies: $p2182 < p2183 < p2184$ Refer to: p2183, p2184, p2185, p2186 Refer to: A07926		
<b>Note:</b>	In order that the load monitoring can reliably respond, the speed threshold p2182 should always be set lower than the minimum motor speed to be monitored.		

**p2183[0...n] Load monitoring speed threshold value 2 / n\_thresh 2**

VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8013
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	900.00 [rpm]

**Description:** Sets the speed/torque envelope curve for load monitoring.  
The envelope curve (upper and lower envelope curve) is defined as follows based on 3 speed thresholds:  
p2182 (n\_threshold 1) --> p2185 (M\_threshold 1, upper), p2186 (M\_threshold 1, lower)  
p2183 (n\_threshold 2) --> p2187 (M\_threshold 2, upper), p2188 (M\_threshold 2, lower)  
p2184 (n\_threshold 3) --> p2189 (M\_threshold 3, upper), p2190 (M\_threshold 3, lower)

**Dependency:** The following applies: p2182 < p2183 < p2184  
Refer to: p2182, p2184, p2187, p2188  
Refer to: A07926

**p2184[0...n] Load monitoring speed threshold value 3 / n\_thresh 3**

VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8013
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	1500.00 [rpm]

**Description:** Sets the speed/torque envelope curve for load monitoring.  
The envelope curve (upper and lower envelope curve) is defined as follows based on 3 speed thresholds:  
p2182 (n\_threshold 1) --> p2185 (M\_threshold 1, upper), p2186 (M\_threshold 1, lower)  
p2183 (n\_threshold 2) --> p2187 (M\_threshold 2, upper), p2188 (M\_threshold 2, lower)  
p2184 (n\_threshold 3) --> p2189 (M\_threshold 3, upper), p2190 (M\_threshold 3, lower)

**Dependency:** The following applies: p2182 < p2183 < p2184  
Refer to: p2182, p2183, p2189, p2190  
Refer to: A07926

**Note:** In order that the load monitoring can reliably respond, the speed threshold p2184 should always be set higher than the maximum motor speed to be monitored.

**p2185[0...n] Load monitoring torque threshold 1 upper / M\_thresh 1 upper**

VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8013
	<b>P-Group:</b> Messages	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Nm]	20000000.00 [Nm]	10000000.00 [Nm]

**Description:** Sets the speed/torque / velocity/force envelope curve for the load monitoring.

**Dependency:** The following applies: p2185 > p2186  
Refer to: p2182, p2186  
Refer to: A07926

**Note:** The upper envelope curve is defined by p2185, p2187 and p2189.

<b>p2186[0...n]</b>	<b>Load monitoring torque threshold 1 lower / M_thresh 1 lower</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8013
	<b>P-Group:</b> Messages	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Nm]	20000000.00 [Nm]	0.00 [Nm]
<b>Description:</b>	Sets the speed/torque / velocity/force envelope curve for the load monitoring.		
<b>Dependency:</b>	The following applies: p2186 < p2185 Refer to: p2182, p2185 Refer to: A07926		
<b>Note:</b>	The lower envelope curve is defined by p2186, p2188 and p2190.		
<b>p2187[0...n]</b>	<b>Load monitoring torque threshold 2 upper / M_thresh 2 upper</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8013
	<b>P-Group:</b> Messages	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Nm]	20000000.00 [Nm]	10000000.00 [Nm]
<b>Description:</b>	Sets the speed/torque / velocity/force envelope curve for the load monitoring.		
<b>Dependency:</b>	The following applies: p2187 > p2188 Refer to: p2183, p2188 Refer to: A07926		
<b>Note:</b>	The upper envelope curve is defined by p2185, p2187 and p2189.		
<b>p2188[0...n]</b>	<b>Load monitoring torque threshold 2 lower / M_thresh 2 lower</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8013
	<b>P-Group:</b> Messages	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Nm]	20000000.00 [Nm]	0.00 [Nm]
<b>Description:</b>	Sets the speed/torque / velocity/force envelope curve for the load monitoring.		
<b>Dependency:</b>	The following applies: p2188 < p2187 Refer to: p2183, p2187 Refer to: A07926		
<b>Note:</b>	The lower envelope curve is defined by p2186, p2188 and p2190.		
<b>p2189[0...n]</b>	<b>Load monitoring torque threshold 3 upper / M_thresh 3 upper</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8013
	<b>P-Group:</b> Messages	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Nm]	20000000.00 [Nm]	10000000.00 [Nm]
<b>Description:</b>	Sets the speed/torque / velocity/force envelope curve for the load monitoring.		
<b>Dependency:</b>	The following applies: p2189 > p2190 Refer to: p2184, p2190 Refer to: A07926		
<b>Note:</b>	The upper envelope curve is defined by p2185, p2187 and p2189.		

<b>p2190[0...n]</b>	<b>Load monitoring torque threshold 3 lower / M_thresh 3 lower</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8013
	<b>P-Group:</b> Messages	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Nm]	20000000.00 [Nm]	0.00 [Nm]
<b>Description:</b>	Sets the speed/torque / velocity/force envelope curve for the load monitoring.		
<b>Dependency:</b>	The following applies: p2190 < p2189 Refer to: p2184, p2189 Refer to: A07926		
<b>Note:</b>	The lower envelope curve is defined by p2186, p2188 and p2190.		
<b>p2192[0...n]</b>	<b>Load monitoring delay time / Load monit t_del</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8013
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [s]	65.00 [s]	10.00 [s]
<b>Description:</b>	Sets the delay time to evaluate the load monitoring.		
<b>p2194[0...n]</b>	<b>Torque threshold value 2 / M_thresh val 2</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
		CALC_MOD_LIM_REF	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8012
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	100.00 [%]	90.00 [%]
<b>Description:</b>	Sets the torque threshold value for the message "Torque utilization < torque threshold value 2" (BO: r2199.11). The message "torque setpoint < p2174" (BO: r2198.10) and "torque utilization < p2194" (BO: r2199.11) are only evaluated after the run-up and the delay time has expired.		
<b>Dependency:</b>	Refer to: r0033, p2195, r2199		
<b>p2195[0...n]</b>	<b>Torque utilization switch-off delay / M_util t_off</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8012
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [ms]	1000.0 [ms]	800.0 [ms]
<b>Description:</b>	Sets the switch-off delay time for the negated signal "run-up completed". The message "torque setpoint < p2174" (BO: r2198.10) and "torque utilization < p2194" (BO: r2199.11) are only evaluated after the run-up and the delay time has expired.		
<b>Dependency:</b>	Refer to: p2174, p2194		

## 2 Parameters

### 2.2 List of parameters

<b>p2196[0...n]</b>	<b>Torque utilization scaling / M_util scal</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	1000.00 [%]	100.00 [%]
<b>Description:</b>	Sets the scaling factor for torque utilization (r0033).		

<b>r2197.1...13</b>	<b>CO/BO: Status word monitoring 1 / ZSW monitor 1</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2534
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and BICO output for the first status word of the monitoring functions.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	01	n_act  <= speed threshold value 2 p2155	Yes	No	8010
	02	n_act  > speed threshold value 2 p2155	Yes	No	8010
	03	n_act >= 0	Yes	No	8011
	06	n_act  > n_max	Yes	No	8010
	07	Speed setp - act val deviation in tolerance t_off	Yes	No	8011
	13	n_act  > n_max (F07901)	Yes	No	-

**Note:** For bit 01, 02:  
The threshold value is set in p2155 and the hysteresis in p2140.  
For bit 03:  
The hysteresis is set in p2150.  
For bit 06:  
The hysteresis is set in p2162.  
For bit 07:  
The threshold value is set in p2163 and the hysteresis is set in p2164.  
For bit 13:  
Only for internal Siemens use.

<b>r2198.4...12</b>	<b>CO/BO: Status word monitoring 2 / ZSW monitor 2</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2536
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and BICO output for the second status word of the monitoring functions.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	04	n_set  < p2161	Yes	No	8011
	05	n_set > 0	Yes	No	8011
	06	Motor blocked	Yes	No	8012
	07	Motor stalled	Yes	No	8012
	10	M_set  < torque threshold value 1	Yes	No	8012
	11	Load in the alarm range	Yes	No	8013
	12	Load in the fault range	Yes	No	8013

**Note:** For bit 10:  
The torque threshold value 1 is set in p2174.  
For bit 12:  
This bit is reset after the fault cause disappears, even if the fault itself is still present.

---

**r2199.0...14 CO/BO: Status word monitoring 3 / ZSW monitor 3**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2537
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and BICO output for the third status word of the monitoring functions.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	n_act  < speed threshold value 3	Yes	No	8010
	01	f or n comparison value reached or exceeded	Yes	No	8010
	04	Speed setp - act val deviation in tolerance t_on	Yes	No	8011
	05	Ramp-up/ramp-down completed	Yes	No	8011
	06	Current below the zero current threshold	Yes	No	8020
	07	Speed deviation model/external intolerance	Yes	No	8012
	11	Torque utilization < torque threshold value 2	Yes	No	8012
	12	Excitation current outside the tolerance range	Yes	No	8020
	13	I2t alarm threshold exceeded (nur SESM)	Yes	No	8022
	14	I2t fault threshold exceeded (nur SESM)	Yes	No	8022

**Dependency:** Refer to: A07823, F07824, F07913

**Note:** SESM: separately excited synchronous motor  
For bit 00:  
The speed threshold value 3 is set in p2161.  
For bit 01:  
The comparison value is set in p2141. We recommend setting the hysteresis (p2142) for canceling the bit to a value lower than that in p2141. Otherwise, the bit is not reset.  
For bit 11:  
The torque threshold value 2 is set in p2194.  
For bit 13:  
The I2t monitoring detects when the alarm threshold is exceeded (p3243), outputs fault A07823 and sets the status bit.  
For bit 14:  
The I2t monitoring detects when the fault threshold is exceeded (100 %), outputs fault A07824 and sets the status bit.

---

**p2200[0...n] BI: Technology controller enable / Tec\_ctrl enable**

VECTOR_G (Tec_ctrl)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source to switch in/switch out the technology controller.  
The technology controller is switched in with a 1 signal.

## 2 Parameters

### 2.2 List of parameters

---

<b>p2201[0...n]</b>	<b>CO: Technology controller fixed value 1 / Tec_ctrl fix val1</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950, 7951 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 10.00 [%]
<b>Description:</b>	Sets the value for fixed value 1 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<hr/>			
<b>p2202[0...n]</b>	<b>CO: Technology controller fixed value 2 / Tec_ctr fix val 2</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950, 7951 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 20.00 [%]
<b>Description:</b>	Sets the value for fixed value 2 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<hr/>			
<b>p2203[0...n]</b>	<b>CO: Technology controller fixed value 3 / Tec_ctr fix val 3</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950, 7951 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 30.00 [%]
<b>Description:</b>	Sets the value for fixed value 3 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<hr/>			
<b>p2204[0...n]</b>	<b>CO: Technology controller fixed value 4 / Tec_ctr fix val 4</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950, 7951 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 40.00 [%]
<b>Description:</b>	Sets the value for fixed value 4 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

<b>p2205[0...n]</b>	<b>CO: Technology controller fixed value 5 / Tec_ctr fix val 5</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 50.00 [%]
<b>Description:</b>	Sets the value for fixed value 5 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>p2206[0...n]</b>	<b>CO: Technology controller fixed value 6 / Tec_ctr fix val 6</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 60.00 [%]
<b>Description:</b>	Sets the value for fixed value 6 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>p2207[0...n]</b>	<b>CO: Technology controller fixed value 7 / Tec_ctr fix val 7</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 70.00 [%]
<b>Description:</b>	Sets the value for fixed value 7 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>p2208[0...n]</b>	<b>CO: Technology controller fixed value 8 / Tec_ctr fix val 8</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 80.00 [%]
<b>Description:</b>	Sets the value for fixed value 8 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

## 2 Parameters

### 2.2 List of parameters

---

<b>p2209[0...n]</b>	<b>CO: Technology controller fixed value 9 / Tec_ctr fix val 9</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 90.00 [%]
<b>Description:</b>	Sets the value for fixed value 9 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<hr/>			
<b>p2210[0...n]</b>	<b>CO: Technology controller fixed value 10 / Tec_ctr fix val 10</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 100.00 [%]
<b>Description:</b>	Sets the value for fixed value 10 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<hr/>			
<b>p2211[0...n]</b>	<b>CO: Technology controller fixed value 11 / Tec_ctr fix val 11</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 110.00 [%]
<b>Description:</b>	Sets the value for fixed value 11 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<hr/>			
<b>p2212[0...n]</b>	<b>CO: Technology controller fixed value 12 / Tec_ctr fix val 12</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 120.00 [%]
<b>Description:</b>	Sets the value for fixed value 12 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		

<b>p2213[0...n]</b>	<b>CO: Technology controller fixed value 13 / Tec_ctr fix val 13</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 130.00 [%]
<b>Description:</b>	Sets the value for fixed value 13 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>p2214[0...n]</b>	<b>CO: Technology controller fixed value 14 / Tec_ctr fix val 14</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 140.00 [%]
<b>Description:</b>	Sets the value for fixed value 14 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>p2215[0...n]</b>	<b>CO: Technology controller fixed value 15 / Tec_ctr fix val 15</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 150.00 [%]
<b>Description:</b>	Sets the value for fixed value 15 of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222, p2223, r2224, r2229		
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.		
<b>p2216[0...n]</b>	<b>Technology controller fixed value selection method / Tec_ctr FixVal sel</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> 1	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 2	<b>Access level:</b> 2 <b>Func. diagram:</b> 7950, 7951 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 2
<b>Description:</b>	Sets the method to select the fixed setpoints.		
<b>Value:</b>	1: Direct selection 2: Binary selection		

## 2 Parameters

### 2.2 List of parameters

---

<b>p2220[0...n]</b>	<b>BI: Technology controller fixed value selection bit 0 / Tec_ctrl sel bit 0</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7950, 7951
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to select a fixed value of the technology controller.		
<b>Dependency:</b>	Refer to: p2221, p2222, p2223		

---

<b>p2221[0...n]</b>	<b>BI: Technology controller fixed value selection bit 1 / Tec_ctrl sel bit 1</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7950, 7951
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to select a fixed value of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2222, p2223		

---

<b>p2222[0...n]</b>	<b>BI: Technology controller fixed value selection bit 2 / Tec_ctrl sel bit 2</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7950, 7951
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to select a fixed value of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2223		

---

<b>p2223[0...n]</b>	<b>BI: Technology controller fixed value selection bit 3 / Tec_ctrl sel bit 3</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7950, 7951
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to select a fixed value of the technology controller.		
<b>Dependency:</b>	Refer to: p2220, p2221, p2222		

---

<b>r2224</b>	<b>CO: Technology controller fixed value effective / Tec_ctr FixVal eff</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7950, 7951
	<b>P-Group:</b> Technology	<b>Unit group:</b> 9_1	<b>Unit selection:</b> p0595
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Display and connector output for the selected and active fixed value of the technology controller.		
<b>Dependency:</b>	Refer to: r2229		

<b>r2225.0</b>	<b>CO/BO: Technology controller fixed value selection status word / Tec_ctr FixVal ZSW</b>			
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and BICO output for the status word of the fixed value selection of the technology controller.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Technology controller fixed value selected	Yes	No
				<b>FP</b> 7950, 7951
<b>r2229</b>	<b>Technology controller number actual / Tec_ctrl No. act</b>			
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7950	
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the number of the selected fixed setpoint of the technology controller.			
<b>Dependency:</b>	Refer to: r2224			
<b>p2230[0...n]</b>	<b>Technology controller motorized potentiometer configuration / Tec_ctr mop config</b>			
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7954	
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 0100 bin	
<b>Description:</b>	Sets the configuration for the motorized potentiometer of the technology controller.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Data save active	Yes	No
	02	Initial rounding-off active	Yes	No
	03	Non-volatile data save active for p2230.0 = 1	Yes	No
	04	Ramp-function generator always active	Yes	No
				<b>FP</b> - - - -
<b>Dependency:</b>	Refer to: r2231, p2240			
<b>Notice:</b>	The following prerequisites must be fulfilled in order to be able to save the setpoint in a non-volatile fashion: - Firmware with V2.3 or higher. - Control Unit 320 (CU320) with hardware version C or higher (module with NVRAM).			
<b>Note:</b>	For bit 00: 0: The setpoint for the motorized potentiometer is not saved and after ON is entered using p2240. 1: The setpoint for the motorized potentiometer is saved and after ON is entered using r2231. In order to save in a non-volatile fashion, bit 03 should be set to 1. For bit 02: 0: Without initial rounding-off 1: With initial rounding-off. The selected ramp-up/down time is correspondingly exceeded. The initial rounding-off is a sensitive way of specifying small changes (progressive reaction when keys are pressed). The jerk for initial rounding is independent of the ramp-up time and only depends on the selected maximum value (p2237).			

## 2 Parameters

### 2.2 List of parameters

It is calculated as follows:

$$r = 0.0001 \times \max(p2237, |p2238|) [\%] / 0.13^2 [s^2]$$

The jerk is effective until the maximum acceleration is reached ( $a_{\max} = p2237 [\%] / p2247 [s]$  or  $a_{\max} = p2238 [\%] / p2248 [s]$ ), after which the drive continues to run linearly with constant acceleration.

The higher the maximum acceleration (the lower that p2247 is), the longer the ramp-up time increases with respect to the set ramp-up time.

For bit 03:

0: Non-volatile data save deactivated.

1: The setpoint for the motorized potentiometer is saved in a non-volatile fashion (for p2230.0 = 1).

For bit 04:

When the bit is set, the ramp-function generator is computed independent of the pulse enable. The actual output value of the motorized potentiometer is always in r2250.

<b>r2231</b>	<b>Technology controller motorized potentiometer setpoint memory / Tec_ctrl mop mem</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7954
	<b>P-Group:</b> Technology	<b>Unit group:</b> 9_1	<b>Unit selection:</b> p0595
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the setpoint memory for the motorized potentiometer of the technology controller. For p2230.0 = 1, the last setpoint that was saved is entered after ON.		
<b>Dependency:</b>	Refer to: p2230		
<b>p2235[0...n]</b>	<b>BI: Technology controller motorized potentiometer raise setpoint / Tec_ctrl mop raise</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7954
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to continually increase the setpoint for the motorized potentiometer of the technology controller. The setpoint change (CO: r2250) depends on the set ramp-up time (p2247) and the duration of the signal that is present (BI: p2235).		
<b>Dependency:</b>	Refer to: p2236		
<b>p2236[0...n]</b>	<b>BI: Technology controller motorized potentiometer lower setpoint / Tec_ctrl mop lower</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7954
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to continually reduce the setpoint for the motorized potentiometer of the technology controller. The setpoint change (CO: r2250) depends on the set ramp-down time (p2248) and the duration of the signal that is present (BI: p2236).		
<b>Dependency:</b>	Refer to: p2235		

<b>p2237[0...n]</b>	<b>Technology controller motorized potentiometer maximum value / Tec_ctrl mop max</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> - <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7954 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 100.00 [%]
<b>Description:</b>	Sets the maximum value for the motorized potentiometer of the technology controller.		
<b>Dependency:</b>	Refer to: p2238		
<b>p2238[0...n]</b>	<b>Technology controller motorized potentiometer minimum value / Tec_ctrl mop min</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> - <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7954 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> -100.00 [%]
<b>Description:</b>	Sets the minimum value for the motorized potentiometer of the technology controller.		
<b>Dependency:</b>	Refer to: p2237		
<b>p2240[0...n]</b>	<b>Technology controller motorized potentiometer starting value / Tec_ctrl mop start</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -200.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 9_1 <b>Scaling:</b> - <b>Max</b> 200.00 [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7954 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [%]
<b>Description:</b>	Sets the starting value for the motorized potentiometer of the technology controller. For p2230.0 = 0, this setpoint is entered after ON.		
<b>Dependency:</b>	Refer to: p2230		
<b>r2245</b>	<b>CO: Technology controller mot. potentiometer setpoint before RFG / Tec_ctr mop befRFG</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> - [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7954 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	Sets the effective setpoint in front of the internal motorized potentiometer ramp-function generator of the technology controller.		
<b>Dependency:</b>	Refer to: r2250		

## 2 Parameters

### 2.2 List of parameters

<b>p2247[0...n]</b>	<b>Technology controller motorized potentiometer ramp-up time / Tec_ctr mop t_r-up</b>			
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> 0.0 [s]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000.0 [s]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7954 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 10.0 [s]	
<b>Description:</b>	Sets the ramp-up time for the internal ramp-function generator for the motorized potentiometer of the technology controller.			
<b>Dependency:</b>	Refer to: p2248			
<b>Note:</b>	The time is referred to 100 %. When the initial rounding-off is activated (p2230.2 = 1) the ramp-up is correspondingly extended.			
<b>p2248[0...n]</b>	<b>Technology controller motorized potentiometer ramp-down time / Tec_ctrMop t_rdown</b>			
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> 0.0 [s]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000.0 [s]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7954 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 10.0 [s]	
<b>Description:</b>	Sets the ramp-down time for the internal ramp-function generator for the motorized potentiometer of the technology controller.			
<b>Dependency:</b>	Refer to: p2247			
<b>Note:</b>	The time is referred to 100 %. When the initial rounding-off is activated (p2230.2 = 1) the ramp-down is correspondingly extended.			
<b>r2250</b>	<b>CO: Technology controller motorized potentiometer setpoint after RFG / Tec_ctr mop aftRFG</b>			
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> - [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7954 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> - [%]	
<b>Description:</b>	Displays the effective setpoint after the internal ramp-function generator for the motorized potentiometer of the technology controller.			
<b>Dependency:</b>	Refer to: r2245			
<b>p2252</b>	<b>Technology controller configuration / Tec_ctrl config</b>			
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Modulation <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0111 bin	
<b>Description:</b>	Sets the configuration of the technology controller.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Ramp-up/down time independent of setpoint sign	Yes	No
	01	Integrator independent of Kp	Yes	No
	02	Output signal without ramp active	Yes	No
	03	Act value limit	Yes	No
				<b>FP</b>
				-
				-
				-

**Dependency:** Refer to: p2257, p2258, p2267, p2268, p2280, p2285

**Note:** For bit 00 = 0:  
The ramp-down time (p2258) switches to the ramp-up time (p2257) when the sign for the output signal r2260 changes. When the sign changes, the output signal is kept at zero for one arithmetic cycle.

For bit 00 = 1:  
When r2260 exhibits a positive gradient, the ramp-up time (p2257) is active; when it exhibits a negative gradient, the ramp-down time (p2258) is active. The sign for r2260 does not have any effect on the ramp time.

For bit 01 = 0:  
The integration time of the PID controller is evaluated with the gain factor Kp (p2280) (p2285 = integral time).

For bit 01 = 1:  
The integration time of the PID controller is independent of the gain factor (p2285 = integration time) if p2280 > 0.

For bit 02 = 0:  
When the PID controller is deactivated via p2200, the output signal r2294 is reduced to zero via the ramp-down time p2293.

For bit 02 = 1:  
When the PID controller is deactivated via p2200, the output signal r2294 is set directly to zero.

For bit 03 = 0:  
The actual values are not limited by p2267 and p2268.

For bit 03 = 1:  
The actual values are limited by p2267 and p2268.

---

**p2253[0...n]**      **CI: Technology controller setpoint 1 / Tec\_ctrl setp 1**

VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for the setpoint 1 of the technology controller.

**Dependency:** Refer to: p2254, p2255

---

**p2254[0...n]**      **CI: Technology controller setpoint 2 / Tec\_ctrl setp 2**

VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for the setpoint 2 of the technology controller.

**Dependency:** Refer to: p2253, p2256

---

**p2255**      **Technology controller setpoint 1 scaling / Tec\_ctrl set1 scal**

VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	100.00 [%]	100.00 [%]

**Description:** Sets the scaling for the setpoint 1 of the technology controller.

**Dependency:** Refer to: p2253

## 2 Parameters

### 2.2 List of parameters

---

<b>p2256</b>	<b>Technology controller setpoint 2 scaling / Tec_ctrl set2 scal</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> 0.00 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 100.00 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> 7958 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 100.00 [%]
<b>Description:</b>	Sets the scaling for the setpoint 2 of the technology controller.		
<b>Dependency:</b>	Refer to: p2254		

---

<b>p2257</b>	<b>Technology controller ramp-up time / Tec_ctrl t_ramp-up</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> 0.00 [s]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 650.00 [s]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7958 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1.00 [s]
<b>Description:</b>	Sets the ramp-up time of the technology controller.		
<b>Dependency:</b>	Refer to: p2252, p2258		
<b>Note:</b>	The ramp-up time is referred to 100 %.		

---

<b>p2258</b>	<b>Technology controller ramp-down time / Tec_ctrl t_ramp-dn</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> 0.00 [s]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 650.00 [s]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7958 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1.00 [s]
<b>Description:</b>	Sets the ramp-down time of the technology controller.		
<b>Dependency:</b>	Refer to: p2252, p2257		
<b>Note:</b>	The ramp-down time is referred to 100 %.		

---

<b>r2260</b>	<b>CO: Technology controller setpoint after ramp-function generator / Tec_ctr set aftRFG</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> - [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7958 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	Sets the setpoint after the ramp-function generator of the technology controller.		

---

<b>p2261</b>	<b>Technology controller setpoint filter time constant / Tec_ctrl set T</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> 0.000 [s]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 60.000 [s]	<b>Access level:</b> 3 <b>Func. diagram:</b> 7958 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000 [s]
<b>Description:</b>	Sets the time constant for the setpoint filter (PT1) of the technology controller.		

---

<b>r2262</b>	<b>CO: Technology controller setpoint after filter / Tec_ctr set aftFlt</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> - [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> 7958 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	Display and connector output for the smoothed setpoint after the setpoint filter (PT1) of the technology controller.		
<b>p2263</b>	<b>Technology controller type / Tec_ctrl type</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 3 <b>Func. diagram:</b> 7958 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the type of technology controller.		
<b>Value:</b>	0: D component in the actual value signal 1: D component in system deviation		
<b>p2264[0...n]</b>	<b>CI: Technology controller actual value / Tec_ctrl act val</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> CDS, p0170 <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> -	<b>Access level:</b> 2 <b>Func. diagram:</b> 7958 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the signal source for the actual value of the technology controller.		
<b>p2265</b>	<b>Technology controller actual value filter time constant / Tec_ctrl act T</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> 0.000 [s]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 60.000 [s]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7958 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000 [s]
<b>Description:</b>	Sets the time constant for the actual value filter (PT1) of the technology controller.		
<b>r2266</b>	<b>CO: Technology controller actual value after filter / Tec_ctr act aftFlt</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Technology <b>Not for motor type:</b> - <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 9_1 <b>Scaling:</b> PERCENT <b>Max</b> - [%]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7958 <b>Unit selection:</b> p0595 <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	Display and connector output for the smoothed actual value after the filter (PT1) of the technology controller.		

## 2 Parameters

### 2.2 List of parameters

<b>p2267</b>	<b>Technology controller upper limit actual value / Tec_ctrl u_lim act</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> 9_1	<b>Unit selection:</b> p0595
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-10000.00 [%]	10000.00 [%]	200.00 [%]
<b>Description:</b>	Sets the upper limit for the actual value signal of the technology controller.		
<b>Dependency:</b>	Refer to: p2252, p2264, p2265, p2271 Refer to: F07426		
<b>Notice:</b>	If the actual value exceeds this upper limit, this results in fault F07426.		
<b>Note:</b>	Limiting only active for p2252.3 = 1.		
<b>p2268</b>	<b>Technology controller lower limit actual value / Tec_ctrl l_lim act</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> 9_1	<b>Unit selection:</b> p0595
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-10000.00 [%]	10000.00 [%]	-200.00 [%]
<b>Description:</b>	Sets the lower limit for the actual value signal of the technology controller.		
<b>Dependency:</b>	Refer to: p2252, p2264, p2265, p2271 Refer to: F07426		
<b>Notice:</b>	If the actual value falls below this lower limit, this results in fault F07426.		
<b>Note:</b>	Limiting only active for p2252.3 = 1.		
<b>p2269</b>	<b>Technology controller gain actual value / Tech_ctrl gain act</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	500.00 [%]	100.00 [%]
<b>Description:</b>	Sets the scaling factor for the actual value of the technology controller.		
<b>Dependency:</b>	Refer to: p2264, p2265, p2267, p2268, p2271		
<b>Note:</b>	For 100%, the actual value is not changed.		
<b>p2270</b>	<b>Technology controller actual value function / Tec_ctr ActVal fct</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0
<b>Description:</b>	Setting to use an arithmetic function for the actual value signal of the technology controller.		
<b>Value:</b>	0: Output (y) = input (x) 1: Root function (root from x) 2: Square function (x * x) 3: Cube function (x * x * x)		
<b>Dependency:</b>	Refer to: p2264, p2265, p2267, p2268, p2269, p2271		

<b>p2271</b>	<b>Technology controller actual value inversion (sensor type) / Tech_ctrl act inv</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Setting to invert the actual value signal of the technology controller. The inversion depends on the sensor type for the actual value signal.		
<b>Value:</b>	0: No inversion 1: Inversion actual value signal		
<b>Caution:</b>	If the actual value inversion is incorrectly selected, then the closed-loop control with the technology controller can become unstable and can oscillate!		
			
<b>Note:</b>	The correct setting can be determined as follows: - inhibit the technology controller (p2200 = 0). - increase the motor speed and in so doing, measure the actual value signal of the technology controller. --> If the actual value increases as the motor speed increases, then p2271 should be set to 0 (no inversion). --> If the actual value decreases as the motor speed increases, then p2271 should be set to 1 (the actual value signal is inverted).		
<b>r2272</b>	<b>CO: Technology controller actual value scaled / Tech_ctrl act scal</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> 9_1	<b>Unit selection:</b> p0595
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Display and connector output for the scaled actual value signal of the technology controller.		
<b>Dependency:</b>	Refer to: p2264, p2265, r2266, p2267, p2268, p2269, p2270, p2271		
<b>r2273</b>	<b>CO: Technology controller system deviation / Tec_ctrl sys_dev</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> 9_1	<b>Unit selection:</b> p0595
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the system deviation between the setpoint and actual value of the technology controller.		
<b>Dependency:</b>	Refer to: p2263		
<b>p2274</b>	<b>Technology controller differentiation time constant / Tec_ctrl D comp T</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	60.000 [s]	0.000 [s]
<b>Description:</b>	Sets the time constant for the differentiation (D component) of the technology controller.		
<b>Note:</b>	p2274 = 0: Differentiation is disabled.		

---

<b>p2280</b>	<b>Technology controller proportional gain / Tec_ctrl Kp</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000	1000.000	1.000
<b>Description:</b>	Sets the proportional gain (P component) of the technology controller.		
<b>Dependency:</b>	Refer to: p2252		
<b>Note:</b>	p2280 = 0: The proportional gain is disabled.		

---

<b>p2285</b>	<b>Technology controller integral time / Tec_ctrl Tn</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	60.000 [s]	0.000 [s]
<b>Description:</b>	Sets the integral time (I component, integrating time constant) of the technology controller.		
<b>Dependency:</b>	Refer to: p2252		
<b>Note:</b>	p2285 = 0: The integral time is disabled.		

---

<b>p2286[0...n]</b>	<b>BI: Hold technology controller integrator / Tec_ctr integ hold</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to hold the integrator for the technology controller.		

---

<b>p2289[0...n]</b>	<b>CI: Technology controller pre-control signal / Tec_ctr prectr_sig</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the pre-control signal of the technology controller.		

---

<b>p2291</b>	<b>CO: Technology controller maximum limiting / Tec_ctrl max_lim</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-200.00 [%]	200.00 [%]	100.00 [%]
<b>Description:</b>	Sets the maximum limit of the technology controller.		
<b>Dependency:</b>	Refer to: p2292		
<b>Caution:</b>	The maximum limit must always be greater than the minimum limit (p2291 > p2292).		



---

<b>p2292</b>	<b>CO: Technology controller minimum limiting / Tec_ctrl min_lim</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-200.00 [%]	200.00 [%]	0.00 [%]
<b>Description:</b>	Sets the minimum limit of the technology controller.		
<b>Dependency:</b>	Refer to: p2291		
<b>Caution:</b>	The maximum limit must always be greater than the minimum limit (p2291 > p2292).		




---

<b>p2293</b>	<b>Technology controller ramp-up/ramp-down time / Tec_ctr t_RU/RD</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [s]	100.00 [s]	1.00 [s]
<b>Description:</b>	Sets the ramping time for the output signal of the technology controller.		
<b>Dependency:</b>	Refer to: p2291, p2292		
<b>Note:</b>	The time refers to the set maximum and minimum limits (p2291, p2292).		

---

<b>r2294</b>	<b>CO: Technology controller output signal / Tec_ctrl outp_sig</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Display and connector output for the output signal of the technology controller.		
<b>Dependency:</b>	Refer to: p2295		

---

<b>p2295</b>	<b>CO: Technology controller output scaling / Tec_ctrl outp_scal</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-100.00 [%]	100.00 [%]	100.00 [%]
<b>Description:</b>	Sets the scaling for the output signal of the technology controller.		

---

<b>p2296[0...n]</b>	<b>CI: Technology controller output scaling / Tec_ctrl outp_scal</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	2295[0]
<b>Description:</b>	Sets the signal source for the scaling value of the technology controller.		
<b>Dependency:</b>	Refer to: p2295		

<b>p2297[0...n]</b>	<b>CI: Technology controller maximum limit signal source / Tec_ctrMaxLimS_src</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	2291[0]
<b>Description:</b>	Sets the signal source for the maximum limiting of the technology controller.		
<b>Dependency:</b>	Refer to: p2291		

<b>p2298[0...n]</b>	<b>CI: Technology controller minimum limit signal source / Tec_ctrl min_l s_s</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	2292[0]
<b>Description:</b>	Sets the signal source for the minimum limiting of the technology controller.		
<b>Dependency:</b>	Refer to: p2292		

<b>p2299[0...n]</b>	<b>CI: Technology controller limit offset / Tech_ctrl lim offs</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the offset of the output limiting of the technology controller.		

<b>p2306</b>	<b>Technology controller system deviation inversion / Tec_ctr SysDev inv</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0

**Description:** Setting to invert the system deviation of the technology controller.  
The setting depends on the type of control loop.

**Value:** 0: No inversion  
1: Inversion

**Caution:** If the actual value inversion is incorrectly selected, then the closed-loop control with the technology controller can become unstable and can oscillate!



**Note:** The correct setting can be determined as follows:

- inhibit the technology controller (p2200 = 0).
- increase the motor speed and in so doing, measure the actual value signal (of the technology controller).
- if the actual value increases with increasing motor speed, then the inversion should be switched out.
- if the actual value decreases with increasing motor speed, then the inversion should be set.

If value = 0:  
The drive reduces the output speed when the actual value rises (e.g. for heating fans, intake pump, compressor).

If value = 1:  
The drive increases the output speed when the actual value increases (e.g. for cooling fans, discharge pumps).

<b>r2349.0...13</b>		<b>CO/BO: Technology controller status word / Tec_ctrl ZSW</b>			
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7958		
	<b>P-Group:</b> Technology	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the status word of the technology controller.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Technology controller deactivated	Yes	No	-
	01	Technology controller limited	Yes	No	-
	02	Technology controller motorized potentiometer limited max	Yes	No	-
	03	Technology controller motorized potentiometer limited min	Yes	No	-
	04	Technology controller speed setpoint total in setpoint channel	Yes	No	-
	05	Technology controller RFG bypassed in the setpoint channel	Yes	No	-
	06	Technology controller starting value at the current limit	No	Yes	-
	08	Technology controller actual value at the minimum	Yes	No	-
	09	Technology controller actual value at the maximum	Yes	No	-
	10	Technology controller output at the minimum	Yes	No	-
	11	Technology controller output at the maximum	Yes	No	-
	12	Fault response active	Yes	No	-
	13	Technology controller limiting enable	Yes	No	-

<b>p2369</b>		<b>BI: Closed-loop cascade control, control word / Csc_ctrl STW</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0	
<b>Description:</b>	Sets the signal source for the selection of the "Switch-in motor" function. When the function is selected, monitoring of the switches is deactivated with the "bypass" function. This means that the power unit can be connected to other motors via an external control without switch monitoring responding.			

<b>r2700</b>		<b>CO: Reference speed/reference frequency / n_ref/f_ref</b>		
VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and connector output for the reference quantity for speed and frequency (p2000). All speeds or frequencies specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word). This parameter has the unit rpm. The following applies: Reference frequency (in Hz) = reference speed (in rpm) / 60			

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Refer to: p2000  
**Note:** This BICO parameter provides the numerical value of the reference quantity p2000 as a connector output for interconnection with Drive Control Chart (DCC). The numerical value can be adopted unchanged from this connector output in DCC.  
This BICO parameter is not suitable for interconnecting for cyclic communication.

---

<b>r2700</b>	<b>CO: Reference frequency / f_ref</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Display and connector output of the actual reference quantity for the frequency (p2000). All frequencies specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word). This parameter has the unit Hz.		
<b>Dependency:</b>	Refer to: p2000		
<b>Note:</b>	This BICO parameter provides the numerical value of the reference quantity p2000 as a connector output for interconnection with Drive Control Chart (DCC). The numerical value can be adopted unchanged from this connector output in DCC. This BICO parameter is not suitable for interconnecting for cyclic communication.		

---

<b>r2700</b>	<b>CO: Reference velocity/reference frequency actual / v_ref/f_ref act</b>		
ENC (Lin_enc)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Display and connector output for the actual reference quantity for velocity and frequency. All velocities or frequencies specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word). The following applies: Reference frequency (in Hz) = reference velocity (in m/min) / 60		
<b>Dependency:</b>	Refer to: p2000		
<b>Note:</b>	This BICO parameter provides the numerical value of the reference quantity p2000 as a connector output for interconnection with Drive Control Chart (DCC). The numerical value can be adopted unchanged from this connector output in DCC. This BICO parameter is not suitable for interconnecting for cyclic communication.		

---

<b>r2701</b>	<b>CO: Reference voltage / Reference voltage</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Connector output of the reference quantity for voltages p2001. All voltages specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word). This parameter has the unit Vrms.		
<b>Dependency:</b>	Refer to: p2001		

**Note:** This BICO parameter provides the numerical value of the reference quantity p2001 as a connector output for interconnection with Drive Control Chart (DCC). The numerical value can be adopted unchanged from this connector output in DCC.  
This BICO parameter is not suitable for interconnecting for cyclic communication.

---

**r2702 CO: Reference current / Reference current**

VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Connector output of the reference quantity for currents p2002.  
All currents specified as relative value are referred to this reference quantity.  
The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).  
This parameter has the unit Arms.

**Dependency:** Refer to: p2002

**Note:** This BICO parameter provides the numerical value of the reference quantity p2002 as a connector output for interconnection with Drive Control Chart (DCC). The numerical value can be adopted unchanged from this connector output in DCC.  
This BICO parameter is not suitable for interconnecting for cyclic communication.

---

**r2703 CO: Reference torque / Reference torque**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Connector output of the reference quantity p2003 for torque (r0108.12 = 0) or force (r0108.12 = 1).  
All torques specified as relative values (r0108.12 = 0) or forces (r0108.12 = 1) are referred to this reference quantity.  
The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).  
The unit of this parameter is the same as the unit selected for p2003.

**Dependency:** p0505, r0108.12  
Refer to: p2003

**Note:** This BICO parameter provides the numerical value of the reference quantity p2003 in the currently selected unit as a connector output for interconnection with Drive Control Chart (DCC). The numerical value can be adopted unchanged from this connector output in DCC.  
This BICO parameter is not suitable for interconnecting for cyclic communication.

---

**r2704 CO: Reference power / Reference power**

VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Connector output of the reference quantity for powers p2004.  
All power ratings specified as relative value are referred to this reference quantity.  
The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).  
The unit of this parameter is the same as the unit selected for p2004.

**Dependency:** This value is calculated as voltage x current for the infeed and as torque x speed for closed-loop controls.  
Refer to: r2004

## 2 Parameters

### 2.2 List of parameters

**Note:** This BICO parameter provides the numerical value of the reference quantity p2004 in the currently selected unit as a connector output for interconnection with Drive Control Chart (DCC). The numerical value can be adopted unchanged from this connector output in DCC.

This BICO parameter is not suitable for interconnecting for cyclic communication.

The reference power is calculated as follows:

-  $2 * \text{Pi} * \text{reference speed} / 60 * \text{reference torque (motor)}$

-  $\text{reference voltage} * \text{reference current} * \text{root}(3) \text{ (infeed)}$

---

<b>r2705</b>	<b>CO: Reference angle / Reference angle</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Connector output of the reference quantity for angles p2005. All angles specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word). This parameter has the unit degree.		
<b>Dependency:</b>	Refer to: p2005		
<b>Note:</b>	This BICO parameter provides the numerical value of the reference quantity p2005 as a connector output for interconnection with Drive Control Chart (DCC). The numerical value can be adopted unchanged from this connector output in DCC. This BICO parameter is not suitable for interconnecting for cyclic communication.		

---

<b>r2706</b>	<b>CO: Reference temp / Reference temp</b>		
VECTOR_G, B_INF, TM31, TM120, TM150	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Connector output of the reference quantity for temperatures. All temperatures specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word). This parameter has the unit degree Celsius.		
<b>Note:</b>	This BICO parameter provides the numerical value of the reference quantity for the temperature as a connector output for interconnection with Drive Control Chart (DCC). The numerical value can be adopted unchanged from this connector output in DCC. This BICO parameter is not suitable for interconnecting for cyclic communication.		

---

<b>r2707</b>	<b>CO: Reference acceleration / Ref accel</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Connector output of the reference quantity for accelerations p2007. All acceleration rates specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word). The unit of this parameter is the same as the unit selected for p2007.		
<b>Dependency:</b>	r0108.12, p0505 Refer to: p2007		

**Note:** This BICO parameter provides the numerical value of the reference quantity p2007 as a connector output for interconnection with Drive Control Chart (DCC). The numerical value in the currently selected unit can be adopted unchanged from this connector output in DCC.  
This BICO parameter is not suitable for interconnecting for cyclic communication.

<b>p2720[0...n]</b>	<b>Load gear configuration / Load gear config</b>				
VECTOR_G	<b>Can be changed:</b> C2(1, 4)	<b>Calculated:</b> -	<b>Access level:</b> 1		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 bin		
<b>Description:</b>	Sets the configuration for position tracking of a load gear.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Load gear activate position tracking	Yes	No	-
	01	Axis type	Linear axis	Rotary axis	-
	02	Load gear reset position	Yes	No	-
<b>Note:</b>	For the following events, the non-volatile, saved position values are automatically reset:				
	- when an encoder replacement has been identified.				
	- when changing the configuration of the Encoder Data Set (EDS).				
	- when adjusting the absolute encoder again				

<b>p2721[0...n]</b>	<b>Load gear rotary absolute encoder revolutions virtual / Abs rot rev</b>			
VECTOR_G	<b>Can be changed:</b> C2(1, 4)	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	4194303	0	
<b>Description:</b>	Sets the number of rotations that can be resolved for a rotary absolute encoder with activated position tracking of the load gear.			
<b>Dependency:</b>	This parameter is only of significance for an absolute encoder (p0404.1 = 1) with activated position tracking of the load gear (p2720.0 = 1).			
<b>Note:</b>	The resolution that is set must be able to be represented using r2723.			
	For rotary axes/modulo axes, the following applies:			
	This parameter is pre-set with p0421 when activating position tracking and can be changed.			
	For linear axes, the following applies:			
	This parameter is pre-assigned with p0421 when activating position tracking, expanded by 6 bits for multiturn information (maximum number of overflows) and cannot be changed.			

<b>p2722[0...n]</b>	<b>Load gear position tracking tolerance window / Pos track tol</b>			
VECTOR_G	<b>Can be changed:</b> C2(1, 4)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.00	4294967300.00	0.00	
<b>Description:</b>	Sets a tolerance window for position tracking.			
	After the system is switched on, the difference between the saved position and the actual position is determined, and depending on this, the following is initiated:			
	Difference within the tolerance window --> The position is reproduced as a result of the encoder actual value.			
	Difference outside the tolerance window --> An appropriate message is output.			
<b>Dependency:</b>	Refer to: F07449			

## 2 Parameters

### 2.2 List of parameters

**Caution:** Rotation, e.g. through a complete encoder range is not detected.



**Note:** The value is entered in integer (complete) encoder pulses.  
For p2720.0 = 1, the value is automatically pre-assigned quarter of the encoder range.

Example:

Quarter of the encoder range = (p0408 \* p0421) / 4

It is possible that the tolerance window may not be able to be precisely set due to the data type (floating point number with 23 bit mantissa).

---

<b>r2723[0...n]</b>	<b>CO: Load gear absolute value / Load gear abs_val</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 4010, 4704
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the absolute value after the load gear.		
<b>Notice:</b>	The encoder position actual value must be requested using the encoder control word Gn_STW.13.		
<b>Note:</b>	The increments are displayed in the format the same as r0483.		

---

<b>r2724[0...n]</b>	<b>CO: Load gear position difference / Load gear pos diff</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the position difference before the load gear between switching off and switching on.		
<b>Note:</b>	The increments are displayed in the same format as for r0483/r2723. If the measuring gear of the motor encoder is not activated, the position difference should be read in encoder increments. If the measuring gear of the motor encoder is activated, the position difference is converted using the measuring gear factor.		

---

<b>p2810[0...1]</b>	<b>BI: AND logic operation inputs / AND inputs</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2634
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal sources for the inputs of the AND logic operation.		
<b>Dependency:</b>	Refer to: r2811		
<b>Note:</b>	[0]: AND logic operation, input 1 --> the result is displayed in r2811.0. [1]: AND logic operation, input 2 --> the result is displayed in r2811.0.		

<b>r2811.0</b>	<b>CO/BO: AND logic operation result / AND result</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2634	
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and BICO output for the result of the AND logic operation.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	AND condition fulfilled	Yes	No
<b>Dependency:</b>	Refer to: p2810			
<b>p2816[0...1]</b>	<b>BI: OR logic operation inputs / OR inputs</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2634	
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0	
<b>Description:</b>	Sets the signal sources for the inputs of the OR logic operation.			
<b>Dependency:</b>	Refer to: r2817			
<b>Note:</b>	[0]: OR logic operation, input 1 --> the result is displayed in r2817.0. [1]: OR logic operation, input 2 --> the result is displayed in r2817.0.			
<b>r2817.0</b>	<b>CO/BO: OR logic operation result / OR result</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2634	
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and BICO output for the result of the OR logic operation.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	OR condition fulfilled	Yes	No
<b>Dependency:</b>	Refer to: p2816			
<b>p2822[0...3]</b>	<b>BI: NOT logic operation input / NOT input</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2634	
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0	
<b>Description:</b>	Sets the signal sources for the inputs of the NOT logic operations.			
<b>Index:</b>	[0] = NOT logic operation 0 input [1] = NOT logic operation 1 input [2] = NOT logic operation 2 input [3] = NOT logic operation 3 input			
<b>Dependency:</b>	Refer to: r2823			
<b>Note:</b>	[0]: NOT logic operation 0 --> result is displayed in r2823.0. [1]: NOT logic operation 1 --> result is displayed in r2823.1.			

## 2 Parameters

### 2.2 List of parameters

[2]: NOT logic operation 2 --> result is displayed in r2823.2.

[3]: NOT logic operation 3 --> the result is displayed in r2823.3.

<b>r2823.0...3</b>	<b>CO/BO: NOT logic operation result / NOT result</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2634	
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and BICO output for the results of the NOT logic operations.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	NOT logic operation 0 result	High	Low
	01	NOT logic operation 1 result	High	Low
	02	NOT logic operation 2 result	High	Low
	03	NOT logic operation 3 result	High	Low
				<b>FP</b>
				-
				-
				-
<b>Dependency:</b>	Refer to: p2822			
<b>p2900[0...n]</b>	<b>CO: Fixed value 1 [%] / Fixed value 1 [%]</b>			
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 1021	
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-10000.00 [%]	10000.00 [%]	0.00 [%]	
<b>Description:</b>	Setting and connector output for a fixed percentage value.			
<b>Dependency:</b>	Refer to: p2901, r2902, p2930			
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.			
<b>Note:</b>	The value can be used to interconnect a scaling function (e.g. scaling the main setpoint).			
<b>p2901[0...n]</b>	<b>CO: Fixed value 2 [%] / Fixed value 2 [%]</b>			
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 1021	
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-10000.00 [%]	10000.00 [%]	0.00 [%]	
<b>Description:</b>	Setting and connector output for a fixed percentage value.			
<b>Dependency:</b>	Refer to: p2900, p2930			
<b>Notice:</b>	A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.			
<b>Note:</b>	The value can be used to interconnect a scaling function (e.g. scaling of the supplementary setpoint)			
<b>r2902[0...14]</b>	<b>CO: Fixed values [%] / Fixed values [%]</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 1021	
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [%]	- [%]	- [%]	
<b>Description:</b>	Display and connector output for frequently used percentage values.			
<b>Index:</b>	[0] = Fixed value +0 %			
	[1] = Fixed value +5 %			
	[2] = Fixed value +10 %			
	[3] = Fixed value +20 %			

[4] = Fixed value +50 %  
 [5] = Fixed value +100 %  
 [6] = Fixed value +150 %  
 [7] = Fixed value +200 %  
 [8] = Fixed value -5 %  
 [9] = Fixed value -10 %  
 [10] = Fixed value -20 %  
 [11] = Fixed value -50 %  
 [12] = Fixed value -100 %  
 [13] = Fixed value -150 %  
 [14] = Fixed value -200 %

**Dependency:**

Refer to: p2900, p2901, p2930

**Note:**

The signal sources can, for example, be used to interconnect scalings.

**p2930[0...n]****CO: Fixed value M [Nm] / Fixed value M [Nm]**

VECTOR\_G

**Can be changed:** U, T**Calculated:** -**Access level:** 3**Data type:** FloatingPoint32**Dyn. index:** DDS, p0180**Func. diagram:** 1021**P-Group:** Setpoints**Unit group:** 7\_1**Unit selection:** p0505**Not for motor type:** REL**Scaling:** p2003**Expert list:** 1**Min****Max****Factory setting**

-100000.00 [Nm]

100000.00 [Nm]

0.00 [Nm]

**Description:**

Setting and connector output for a fixed torque value.

**Dependency:**

Refer to: p2900, p2901, r2902

**Notice:**

A BICO interconnection to a parameter that belongs to a drive data set always acts on the effective data set.

**Note:**

The value can, for example, be used to interconnect a supplementary torque.

**r2969[0...6]****Flux model value display / Psi\_mod val displ**

VECTOR\_G (n/M)

**Can be changed:** -**Calculated:** -**Access level:** 3**Data type:** FloatingPoint32**Dyn. index:** -**Func. diagram:** -**P-Group:** Closed-loop control**Unit group:** -**Unit selection:** -**Not for motor type:** ASM, PMSM, SESM, REL**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Displays the values of the direct access flux model for the synchronous reluctance motor (RESM) for diagnostic purposes.

Valid values are only displayed when the pulses are inhibited.

For index 0:

Display of the entered direct axis current id in Arms:

For index 1, 2, 3:

Display of the saturation curves of the direct axis flux psid(id, iq):

- r2969[1]: flux in Vsrms with respect to the direct axis current for iq = 0

- r2969[2]: flux in Vsrms with respect to the direct axis current for iq = 0.5 \* p2950

- r2969[3]: flux in Vsrms with respect to the direct axis current for iq = p2950

For index 4, 5, 6:

Displays the relative error of the current inversion (id(psid, iq) - id) / p2950:

- r2969[4]: error with respect to direct axis current for iq = 0

- r2969[5]: error with respect to direct axis current for iq = 0.5 \* p2950

- r2969[6]: error with respect to direct axis current for iq = p2950

**Index:**

[0] = d-current

[1] = d-flux iq0

[2] = d-flux iq1

[3] = d-flux iq2

[4] = d-current error iq0

[5] = d-current error iq1

[6] = d-current error iq2

**Note:**

RESM: reluctance synchronous motor (synchronous reluctance motor)

## 2 Parameters

### 2.2 List of parameters

<b>p3100</b>	<b>RTC time stamp mode / RTC t_stamp mode</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	2
<b>Description:</b>	Sets the mode for the time stamp		
<b>Value:</b>	0: Operating hours 1: UTC format 2: Operating hours + 01.01.2000		
<b>Notice:</b>	For p3100 = 1: The system prevents this setting from being changed. The parameter can only be influenced after "Set factory setting" or with a "Project download".		
<b>Note:</b>	RTC: Real-time clock UTC: Universal Time Coordinates For p3100 = 1: Time of day synchronization is only possible with this setting. The UTC time started, according to the definition on 01.01.1970 at 00:00:00 and is output in days and milliseconds.		
<b>p3101[0...1]</b>	<b>Setting UTC time / Set UTC time</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Setting the UTC time. This means that the drive system is synchronized to the time specified by the time master. To start p3101[1] must be written to followed by p3101[0]. After writing to p3101[0], the UTC time is accepted.		
<b>Index:</b>	[0] = Milliseconds [1] = Days		
<b>Dependency:</b>	Refer to: p3100		
<b>r3102[0...1]</b>	<b>Displaying UTC time / Display UTC time</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displaying the current UTC time.		
<b>Index:</b>	[0] = Milliseconds [1] = Days		
<b>Dependency:</b>	Refer to: p3100		

<b>p3103</b>	<b>UTC synchronization process / UTC sync_process</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0
<b>Description:</b>	Setting the synchronization process.		
<b>Value:</b>	0: PING/SNAP 1: Reserved 2: Parameter 3: Reserved		
<b>Dependency:</b>	Refer to: p3101, p3104		
<b>Note:</b>	For p3103 = 0: The PING/SNAP technique allows the UTC time to be set with a high degree of accuracy using p3104 and p3101. For additional information, see SINAMICS S120 Function Manual Drive Functions (FH1). For p3103 = 2: Simply setting the UTC time via p3101.		
<b>p3104</b>	<b>BI: UTC PING synchronization / UTC PING sync</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the PING event to set the UTC time.		
<b>Notice:</b>	The parameter may be protected as a result of p0922 or p2079 and cannot be changed.		
<b>r3107[0...3]</b>	<b>UTC synchronization time out of tolerance / UTC t_sync out tol</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the last synchronizing event that was out of tolerance.		
<b>Index:</b>	[0] = Milliseconds after sync [1] = Days after sync [2] = Milliseconds before sync [3] = Days before sync		
<b>Dependency:</b>	Refer to: p3109 Refer to: A01099		
<b>Note:</b>	For r3107[0, 1]: Displays the UTC time after synchronization. For 3107[2, 3]: Displays the UTC time before synchronization.		

## 2 Parameters

### 2.2 List of parameters

<b>r3108[0...1]</b>	<b>UTC synchronization deviation / UTC sync_dev</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the absolute value of the last synchronization deviation that was determined.		
<b>Index:</b>	[0] = Milliseconds [1] = Days		
<b>p3109</b>	<b>UTC synchronization tolerance / UTC sync tol</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0 [ms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 100 [ms]
<b>Description:</b>	Sets the tolerance for time of day synchronization. When this tolerance is exceeded, an appropriate alarm is output.		
<b>Dependency:</b>	Refer to: A01099		
<b>p3110</b>	<b>External fault 3 switch-on delay / Ext fault 3 t_on</b>		
All objects	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> 0 [ms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 2546 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0 [ms]
<b>Description:</b>	Sets the delay time for external fault 3.		
<b>Dependency:</b>	Refer to: p2108, p3111, p3112 Refer to: F07862		
<b>p3111</b>	<b>BI: External fault 3 enable / Ext fault 3 enab</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Messages <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2546 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the signal source for the enable signal of external fault 3. External fault 3 is initiated by the following AND logic operation: - BI: p2108 negated - BI: p3111 - BI: p3112 negated		
<b>Dependency:</b>	Refer to: p2108, p3110, p3112 Refer to: F07862		

<b>p3111[0...n]</b>	<b>BI: External fault 3 enable / Ext fault 3 enab</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for the enable signal of external fault 3. External fault 3 is initiated by the following AND logic operation: - BI: p2108 negated - BI: p3111 - BI: p3112 negated		
<b>Dependency:</b>	Refer to: p2108, p3110, p3112 Refer to: F07862		
<b>p3112</b>	<b>BI: External fault 3 enable negated / Ext flt 3 enab neg</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2546
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the negated enable signal of external fault 3. External fault 3 is initiated by the following AND logic operation: - BI: p2108 negated - BI: p3111 - BI: p3112 negated		
<b>Dependency:</b>	Refer to: p2108, p3110, p3111 Refer to: F07862		
<b>p3112[0...n]</b>	<b>BI: External fault 3 enable negated / Ext flt 3 enab neg</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the negated enable signal of external fault 3. External fault 3 is initiated by the following AND logic operation: - BI: p2108 negated - BI: p3111 - BI: p3112 negated		
<b>Dependency:</b>	Refer to: p2108, p3110, p3111 Refer to: F07862		

**r3113.0...15 CO/BO: NAMUR message bit bar / NAMUR bit bar**

All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and BICO output for the status of the NAMUR message bit bar.  
The faults and alarms are assigned to the appropriate signaling/message classes and influence a specific message bit.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Fault converter information electronics/software error	Yes	No	-
	01	Network fault	Yes	No	-
	02	DC link overvoltage	Yes	No	-
	03	Fault drive converter power electronics	Yes	No	-
	04	Drive converter overtemperature	Yes	No	-
	05	Ground fault	Yes	No	-
	06	Motor overload	Yes	No	-
	07	Bus error	Yes	No	-
	08	External safety-relevant shutdown	Yes	No	-
	09	Mot encoder fault	Yes	No	-
	10	Error communication internal	Yes	No	-
	11	Fault infeed	Yes	No	-
	15	Other faults	Yes	No	-

**Note:**

For bit 00:  
Hardware or software malfunction was identified. Carry out a POWER ON of the component involved. If it occurs again, contact Technical Support.

For bit 01:  
A line supply fault has occurred (phase failure, voltage level, ...). Check the line supply / fuses. Check the supply voltage. Check the wiring.

For bit 02:  
The DC link voltage has assumed an inadmissibly high value. Check the dimensioning of the system (line supply, reactor, voltages). Check the infeed settings.

For bit 03:  
An inadmissible operating state of the power electronics was identified (overcurrent, overtemperature, IGBT failure, ...). Check that the permissible load cycles are maintained. Check the ambient temperatures (fan).

For bit 04:  
The temperature in the component has exceeded the highest permissible limit. Check the ambient temperature / control cabinet cooling.

For bit 05:  
A ground fault / inter-phase short-circuit was detected in the power cables or in the motor windings. Check the power cables (connection). Check the motor.

For bit 06:  
The motor was operated outside the permissible limits (temperature, current, torque, ...). Check the load cycles and limits that have been set. Check the ambient temperature / motor cooling.

For bit 07:  
The communication to the higher-level control system (internal coupling, PROFIBUS, PROFINET, ...) is faulted or interrupted. Check the state of the higher-level control system. Check the communication connection/wiring. Check the bus configuration / clock cycles.

For bit 08:  
A safety operation monitoring function (Safety) has detected an error.

For bit 09:  
When evaluating the encoder signals (track signals, zero marks, absolute values, ...) an illegal signal state was detected. Check the encoder / state of the encoder signals. Observe the maximum frequencies.

For bit 10:  
The internal communication between the SINAMICS components is faulted or interrupted. Check the DRIVE-CLiQ wiring. Ensure an EMC-compliant design. Observe the maximum permissible quantity structure / clock cycles.

For bit 11:

The infeed is faulted or has failed. Check the infeed and the surroundings (line supply, filter, reactors, fuses, ...).  
Check the closed-loop infeed control.

For bit 15:

Group fault. Determine the precise cause of the fault using the commissioning tool.

<b>r3114.9...11</b>	<b>CO/BO: Messages status word global / Msg ZSW global</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the global status word for messages. The appropriate bit is set if at least one message is present at the drive objects.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	09	Group alarm present	Yes	No
	10	Group fault present	Yes	No
	11	Safety group message present	Yes	No
				<b>FP</b>
				8065
				8060
				-
<b>Note:</b>	The status bits are displayed with delay.			
<b>r3115[0...63]</b>	<b>Fault drive object initiating / F DO initiating</b>			
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8050, 8060	
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the drive object number of the initiating drive object for this fault as integer number. Value = 63: The fault was initiated by the drive object itself.			
<b>Dependency:</b>	Refer to: r0945, r0947, r0948, r0949, r2109, r2130, r2133, r2136, r3120, r3122			
<b>Note:</b>	The buffer parameters are cyclically updated in the background (refer to status signal in r2139). The structure of the fault buffer and the assignment of the indices is shown in r0945.			
<b>p3116</b>	<b>BI: Suppress automatic acknowledgment / Ackn suppress</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0	
<b>Description:</b>	Sets the signal source for the automatic acknowledgment of Control Unit faults. BI: p3116 = 0 signal Acknowledgeable faults are automatically acknowledged on the Control Unit. Control Unit faults with LOCAL propagation are passed on to the first active drive object. BI: p3116 = 1 signal Acknowledgeable faults are not automatically acknowledged on the Control Unit. Control Unit faults with LOCAL propagation are not passed on.			
<b>Dependency:</b>	Refer to: p2102, p2103, p2104, p2105, p3981			
<b>Note:</b>	When selecting a standard telegram, the BICO interconnection for control signal STW1.10 (master control by PLC) is automatically established.			

<b>p3117</b>					
<b>Change safety message type / Ch. SI mess type</b>					
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	0	1	0		
<b>Description:</b>	Sets the re-parameterization of all safety messages for faults and alarms. The relevant message type during changeover is selected by the firmware. 0: Safety messages are not re-parameterized 1: Safety messages are re-parameterized				
<b>Note:</b>	A change only becomes effective after a POWER ON.				
<hr/>					
<b>r3120[0...63]</b>					
<b>Component fault / Comp fault</b>					
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8060		
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the component of the fault which has occurred.				
<b>Dependency:</b>	Refer to: r0945, r0947, r0948, r0949, r2109, r2130, r2133, r2136, r3122				
<b>Note:</b>	Value = 0: Assignment to a component not possible. The buffer parameters are cyclically updated in the background (refer to status signal in r2139). The structure of the fault buffer and the assignment of the indices is shown in r0945.				
<hr/>					
<b>r3121[0...63]</b>					
<b>Component alarm / Comp alarm</b>					
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8065		
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the component of the alarm which has occurred.				
<b>Dependency:</b>	Refer to: r2110, r2122, r2123, r2124, r2125, r2134, r2145, r2146, r3123				
<b>Note:</b>	Value = 0: Assignment to a component not possible. The buffer parameters are cyclically updated in the background (refer to status signal in r2139). The structure of the alarm buffer and the assignment of the indices is shown in r2122.				
<hr/>					
<b>r3122[0...63]</b>					
<b>Diagnostic attribute fault / Diag_attr fault</b>					
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8060		
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the diagnostic attribute of the fault which has occurred.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Hardware replacement recommended	Yes	No	-
	15	Message has gone	Yes	No	-
	16	PROFdrive fault class bit 0	High	Low	-

17	PROFIdrive fault class bit 1	High	Low	-
18	PROFIdrive fault class bit 2	High	Low	-
19	PROFIdrive fault class bit 3	High	Low	-
20	PROFIdrive fault class bit 4	High	Low	-

**Dependency:** Refer to: r0945, r0947, r0948, r0949, r2109, r2130, r2133, r2136, r3120

**Note:** The buffer parameters are cyclically updated in the background (refer to status signal in r2139).

The structure of the fault buffer and the assignment of the indices is shown in r0945.

For bits 20 ... 16:

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 0, 0 --> PROFIdrive message class 0: not assigned

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 0, 1 --> PROFIdrive message class 1: hardware fault/software error

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 1, 0 --> PROFIdrive message class 2: line fault

Bits 20, 19, 18, 17, 16 = 0, 0, 0, 1, 1 --> PROFIdrive message class 3: supply voltage fault

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 0, 0 --> PROFIdrive message class 4: DC link fault

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 0, 1 --> PROFIdrive message class 5: power electronics faulted

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 1, 0 --> PROFIdrive message class 6: overtemperature electronic components

Bits 20, 19, 18, 17, 16 = 0, 0, 1, 1, 1 --> PROFIdrive message class 7: ground fault/phase fault detected

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 0, 0 --> PROFIdrive message class 8: motor overload

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 0, 1 --> PROFIdrive message class 9: communication error to the higher-level control

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 1, 0 --> PROFIdrive message class 10: safe monitoring channel has identified an error

Bits 20, 19, 18, 17, 16 = 0, 1, 0, 1, 1 --> PROFIdrive message class 11: incorrect position actual value/speed actual value or not available

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 0 --> PROFIdrive message class 12: internal (DRIVE-CLiQ) communication error

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 1 --> PROFIdrive message class 13: infeed unit faulted

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 1, 0 --> PROFIdrive message class 14: braking controller/Braking Module faulted

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 1, 1 --> PROFIdrive message class 15: line filter faulted

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 0, 0 --> PROFIdrive message class 16: external measured value/signal state outside the permissible range

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 0, 1 --> PROFIdrive message class 17: application/technology function faulted

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 1, 0 --> PROFIdrive message class 18: error in the parameterization/configuration/commissioning sequence

Bits 20, 19, 18, 17, 16 = 1, 0, 0, 1, 1 --> PROFIdrive message class 19: general drive fault

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 0 --> PROFIdrive message class 20: auxiliary unit faulted

### r3123[0...63] Diagnostic attribute alarm / Diag\_attr alarm

All objects

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** 8065

**P-Group:** Messages

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:**

Displays the diagnostic attribute of the alarm which has occurred.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Hardware replacement recommended	Yes	No	-
11	Alarm class bit 0	High	Low	-
12	Alarm class bit 1	High	Low	-
13	Maintenance required	Yes	No	-
14	Maintenance urgently required	Yes	No	-
15	Message has gone	Yes	No	-
16	PROFIdrive fault class bit 0	High	Low	-
17	PROFIdrive fault class bit 1	High	Low	-
18	PROFIdrive fault class bit 2	High	Low	-
19	PROFIdrive fault class bit 3	High	Low	-
20	PROFIdrive fault class bit 4	High	Low	-

**Dependency:**

Refer to: r2110, r2122, r2123, r2124, r2125, r2134, r2145, r2146, r3121

## 2 Parameters

### 2.2 List of parameters

**Note:** The buffer parameters are cyclically updated in the background (refer to status signal in r2139).  
The structure of the alarm buffer and the assignment of the indices is shown in r2122.

For bit 12, 11:  
These status bits are used for the classification of internal alarm classes and are intended for diagnostic purposes only on certain automation systems with integrated SINAMICS functionality.

For bits 20 ... 16:  
 Bits 20, 19, 18, 17, 16 = 0, 0, 0, 0, 0 --> PROFIdrive message class 0: not assigned  
 Bits 20, 19, 18, 17, 16 = 0, 0, 0, 0, 1 --> PROFIdrive message class 1: hardware fault/software error  
 Bits 20, 19, 18, 17, 16 = 0, 0, 0, 1, 0 --> PROFIdrive message class 2: line fault  
 Bits 20, 19, 18, 17, 16 = 0, 0, 0, 1, 1 --> PROFIdrive message class 3: supply voltage fault  
 Bits 20, 19, 18, 17, 16 = 0, 0, 1, 0, 0 --> PROFIdrive message class 4: DC link fault  
 Bits 20, 19, 18, 17, 16 = 0, 0, 1, 0, 1 --> PROFIdrive message class 5: power electronics faulted  
 Bits 20, 19, 18, 17, 16 = 0, 0, 1, 1, 0 --> PROFIdrive message class 6: overtemperature electronic components  
 Bits 20, 19, 18, 17, 16 = 0, 0, 1, 1, 1 --> PROFIdrive message class 7: ground fault/phase fault detected  
 Bits 20, 19, 18, 17, 16 = 0, 1, 0, 0, 0 --> PROFIdrive message class 8: motor overload  
 Bits 20, 19, 18, 17, 16 = 0, 1, 0, 0, 1 --> PROFIdrive message class 9: communication error to the higher-level control  
 Bits 20, 19, 18, 17, 16 = 0, 1, 0, 1, 0 --> PROFIdrive message class 10: safe monitoring channel has identified an error  
 Bits 20, 19, 18, 17, 16 = 0, 1, 0, 1, 1 --> PROFIdrive message class 11: incorrect position actual value/speed actual value or not available  
 Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 0 --> PROFIdrive message class 12: internal (DRIVE-CLiQ) communication error  
 Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 1 --> PROFIdrive message class 13: infeed unit faulted  
 Bits 20, 19, 18, 17, 16 = 0, 1, 1, 1, 0 --> PROFIdrive message class 14: braking controller/Braking Module faulted  
 Bits 20, 19, 18, 17, 16 = 0, 1, 1, 1, 1 --> PROFIdrive message class 15: line filter faulted  
 Bits 20, 19, 18, 17, 16 = 1, 0, 0, 0, 0 --> PROFIdrive message class 16: external measured value/signal state outside the permissible range  
 Bits 20, 19, 18, 17, 16 = 1, 0, 0, 0, 1 --> PROFIdrive message class 17: application/technology function faulted  
 Bits 20, 19, 18, 17, 16 = 1, 0, 0, 1, 0 --> PROFIdrive message class 18: error in the parameterization/configuration/commissioning sequence  
 Bits 20, 19, 18, 17, 16 = 1, 0, 0, 1, 1 --> PROFIdrive message class 19: general drive fault  
 Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 0 --> PROFIdrive message class 20: auxiliary unit faulted

#### r3131

#### CO: Actual fault value / Act fault val

All objects

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Integer32

**Dyn. index:** -

**Func. diagram:** 8060

**P-Group:** Messages

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:**

Displays the fault value of the oldest active fault.

**Dependency:**

Refer to: r2131, r3132

#### r3132

#### CO: Actual component number / Comp\_no act

All objects

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Integer32

**Dyn. index:** -

**Func. diagram:** 8060

**P-Group:** Messages

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:**

Displays the component number of the oldest fault that is still active.

**Dependency:**

Refer to: r2131, r3131

<b>p3135</b>	<b>Suppress active fault / Supp act flt</b>			
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8060	
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 0000 0000 0000 bin	
<b>Description:</b>	Sets the suppression of r2139.3 "Fault present" for certain fault responses.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	08	Suppression of fault response ENCODER	ON	OFF
	10	Suppression of fault response NONE	ON	OFF
				<b>FP</b>
				-
				-
<b>Dependency:</b>	Refer to: p0491, r2139			
<b>Note:</b>	Depending on the suppression of a fault reaction in this parameter, r2139.1 "Acknowledgment required" is set when at least one fault occurs.			
	For bit 08:			
	The suppression is only effective if p0491 = 1.			
<b>p3201[0...n]</b>	<b>Excitation current outside the tolerance threshold value / I_exc n Tol thresh</b>			
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.1 [%]	100.0 [%]	10.0 [%]	
<b>Description:</b>	Sets the threshold value for the "excitation current outside tolerance" message for the excitation current monitoring. If the absolute value of the difference between the excitation current setpoint and actual value (r1641 - r1626) exceeds the threshold value and the hysteresis is longer than the selected delay time, then fault F07913 is output. This fault is withdrawn when the threshold voltage is undershot.			
<b>Dependency:</b>	Refer to: r1626, r1641, p3202, p3203			
	Refer to: F07913			
<b>Note:</b>	The monitoring function is only carried out for separately excited synchronized motors (p0300 = 5).			
<b>p3202[0...n]</b>	<b>Excitation current outside the tolerance hysteresis / I_exc n Tol hyst</b>			
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.1 [%]	100.0 [%]	10.0 [%]	
<b>Description:</b>	Sets the hysteresis for the "excitation current outside tolerance" message for the excitation current monitoring.			
<b>Dependency:</b>	Refer to: p3201, p3203			
	Refer to: F07913			
<b>Note:</b>	The monitoring function is only carried out for separately excited synchronized motors (p0300 = 5).			

<b>p3203[0...n]</b>	<b>Excitation current outside the tolerance delay time / I_exc n Tol t_del</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [s]	10.0 [s]	1.0 [s]
<b>Description:</b>	Sets the delay time for the "excitation current outside tolerance" message for the excitation current monitoring.		
<b>Dependency:</b>	Refer to: p3201, p3202 Refer to: F07913		
<b>Note:</b>	The monitoring function is only carried out for separately excited synchronized motors (p0300 = 5).		
<b>p3204[0...n]</b>	<b>Flux outside the tolerance threshold value / Flux n tol thresh</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.1 [%]	100.0 [%]	10.0 [%]
<b>Description:</b>	Sets the threshold value for the "flux outside the tolerance" message for the flux monitoring. If the absolute value of the difference between the flux setpoint and actual value (r0083 - r0084) falls below the threshold value with hysteresis longer than the selected delay time, then fault F07914 is output. This fault is withdrawn when the threshold voltage is undershot.		
<b>Dependency:</b>	Refer to: r0083, r0084, p3205, p3206 Refer to: F07914		
<b>Note:</b>	The monitoring function is only carried out for separately excited synchronized motors (p0300 = 5). The flux monitoring is only active after magnetizing (r0056.4 = 1).		
<b>p3205[0...n]</b>	<b>Flux outside the tolerance hysteresis / Flux n tol hyst</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.1 [%]	50.0 [%]	10.0 [%]
<b>Description:</b>	Sets the hysteresis for the "flux outside tolerance" message for the flux monitoring.		
<b>Dependency:</b>	Refer to: p3204, p3206 Refer to: F07914		
<b>Note:</b>	The monitoring function is only carried out for separately excited synchronized motors (p0300 = 5). The flux monitoring is only active after magnetizing (r0056.4 = 1).		

<b>p3206[0...n]</b>	<b>Flux outside tolerance delay time / Flux n tol t_del</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [s]	10.0 [s]	5.0 [s]
<b>Description:</b>	Sets the delay time for the "flux outside tolerance" message for the flux monitoring.		
<b>Dependency:</b>	Refer to: p3204, p3205 Refer to: F07914		
<b>Note:</b>	The monitoring function is only carried out for separately excited synchronized motors (p0300 = 5). The flux monitoring is only active after magnetizing (r0056.4 = 1).		
<b>p3207[0...n]</b>	<b>Zero current signal threshold value / I_0_sig thresh</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.01 [Arms]	10000.00 [Arms]	1.00 [Arms]
<b>Description:</b>	Sets the threshold value for the zero current signal for the zero current monitoring. If the absolute current falls below the threshold value then r2199.6 is set to 1 after the delay time has expired. The bit is reset if the threshold value and the hysteresis are exceeded again.		
<b>Dependency:</b>	Refer to: r2199, p3208, p3209		
<b>Note:</b>	The monitoring function is only carried out for separately excited synchronized motors (p0300 = 5). The monitoring is only carried out for speeds less than the speed threshold value in p2161 (r2199.0 = 1).		
<b>p3208[0...n]</b>	<b>Zero current signal hysteresis / I_0_sig hyst</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.01 [Arms]	10000.00 [Arms]	1.00 [Arms]
<b>Description:</b>	Sets the hysteresis for the zero current signal for the zero current monitoring.		
<b>Dependency:</b>	Refer to: p3207, p3209		
<b>Note:</b>	The monitoring function is only carried out for separately excited synchronized motors (p0300 = 5). The monitoring is only carried out for speeds less than the speed threshold value in p2161 (r2199.0 = 1).		

## 2 Parameters

### 2.2 List of parameters

<b>p3209[0...n]</b>	<b>Zero current signal delay time / I_0_sig t_del</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [s]	10.00 [s]	0.02 [s]
<b>Description:</b>	Sets the delay time for the zero current signal for the zero current monitoring.		
<b>Dependency:</b>	Refer to: p3207, p3208		
<b>Note:</b>	The monitoring function is only carried out for separately excited synchronized motors (p0300 = 5). The monitoring is only carried out for speeds less than the speed threshold in p2161 (r2199.0 = 1).		
<b>p3233[0...n]</b>	<b>Torque actual value filter time constant / M_act_filt T</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8013
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	1000000 [ms]	0 [ms]
<b>Description:</b>	Sets the time constant for the PT1 element to smooth the torque actual value. The smoothed torque actual value is compared with the threshold values and is only used for messages and signals.		
<b>p3235</b>	<b>Phase failure signal motor monitoring time / Ph_fail t_monit</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	2000 [ms]	320 [ms]
<b>Description:</b>	Sets the monitoring time for phase failure detection of the motor.		
<b>Notice:</b>	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.		
<b>Note:</b>	Monitoring is only effective for blocksize and booksize power units. For p3235 = 0 the function is deactivated. For VECTOR, the following applies: The monitoring is automatically deactivated during a flying restart for a motor that is still rotating.		
<b>p3236[0...n]</b>	<b>Speed threshold value 7 / n_thresh val 7</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8012
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	3000.00 [rpm]	100.00 [rpm]
<b>Description:</b>	Sets the speed threshold value for the signal "speed deviation model/external in tolerance" (BO: r2199.7).		
<b>Dependency:</b>	Refer to: r1443, r2169, r2199, p3237		

<b>p3237[0...n]</b>	<b>Hysteresis speed 7 / n_hysteresis 7</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8012
	<b>P-Group:</b> Messages	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> 0.00 [rpm]	<b>Max</b> 200.00 [rpm]	<b>Factory setting</b> 2.00 [rpm]
<b>Description:</b>	Sets the hysteresis speed for the signal "speed deviation model/external" (BO: r2199.7).		
<b>Dependency:</b>	Refer to: r2199, p3236		
<b>p3238[0...n]</b>	<b>OFF delay n_act_motor model = n_act external / t_del n_a = n_ext</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8012
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> 0.0 [s]	<b>Max</b> 100.0 [s]	<b>Factory setting</b> 3.0 [s]
<b>Description:</b>	Sets the OFF delay for the signal "speed deviation model/external in tolerance" (BO: r2199.7). The smoothed actual speed of the motor model r2169 is compared with the speed measured externally r1443 (threshold value p3236).		
<b>Dependency:</b>	Refer to: p3236, p3237		
<b>p3240[0...n]</b>	<b>CI: I2t input value signal source / I2t in_value s_src</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 8022
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b> -	<b>Max</b> -	<b>Factory setting</b> 0
<b>Description:</b>	Sets the signal source for the input value of the freely parameterizable I2t monitoring.		
<b>Dependency:</b>	Refer to: p3241, p3242, p3243, r3244 Refer to: A07823, F07824		
<b>Notice:</b>	To activate the freely parameterizable I2t monitoring, the following applies: - the function module "Extended messages/monitoring" must be activated (r0108.17 = 1). - the maximum duration must be set greater than zero (p3242 > 0).		
<b>Note:</b>	Application example: Excitation current monitoring for the separately excited synchronous motor.		
<b>p3241[0...n]</b>	<b>Permissible I2t continuous value / Perm I2t cont val</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8022
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> 10.00 [%]	<b>Max</b> 200.00 [%]	<b>Factory setting</b> 100.00 [%]
<b>Description:</b>	Sets the permissible continuous value of the freely parameterizable I2t monitoring. The integrator value in r3244 decreases if the value received via connector input p3240 is higher than the value set in p3241. The integrator value in r3244 increases if the value received via connector input p3240 is less than the value set in p3241.		

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Refer to: p3240, p3242, p3243, r3244  
Refer to: A07823, F07824

---

<b>p3242[0...n]</b>	<b>I2t maximum duration / I2t max_dur</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8022
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [s]	3600.00 [s]	0.00 [s]
<b>Description:</b>	Sets the maximum duration for 100 % overload (corresponding to p3241 + 100 %) of the freely parameterizable I2t monitoring. Setting example: Operation should be possible at 150 % of the input quantity for a duration of 3 s for a permissible continuous value p3241 = 110 %. As a consequence, the following settings value is obtained: $p3242 = ((150 \times 150 - 110 \times 110) / ((100 + 110) \times (100 + 110) - 110 \times 110)) \times 3 \text{ s} = 0.975 \text{ s}$		
<b>Dependency:</b>	Refer to: p3240, p3241, p3243, r3244 Refer to: A07823, F07824		
<b>Notice:</b>	For p3242 = 0, the freely parameterizable I2t monitoring is deactivated.		
<b>Note:</b>	After this time expires for 100 % overload, fault F07824 is output and status bit r2199.14 is set. For lower overload conditions, the permissible duration extends corresponding to the specified setting example.		

---

<b>p3243[0...n]</b>	<b>I2t alarm thresh / I2t alarm thresh</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 8022
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	99.90 [%]	50.00 [%]
<b>Description:</b>	Sets the alarm threshold for the I2t integrator value (r3244) scaled to 100 %. When the alarm threshold is reached, alarm A07823 is output and status bit r2199.13 is set.		
<b>Dependency:</b>	Refer to: p3240, p3241, p3242, r3244 Refer to: A07823		

---

<b>r3244</b>	<b>CO: Actual I2t integrator value / Act I2t integ_val</b>		
VECTOR_G (Ext msg)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8022
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> ASM, PMSM, REL, RESM	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Display and connector output for the actual integrator value of the freely parameterizable I2t monitoring. The value is scaled, so that the maximum permissible overload is reached at 100 %.		
<b>Dependency:</b>	Refer to: p3240, p3241, p3242, p3243		

<b>p3320[0...n]</b>	<b>Fluid flow machine power point 1 / Fluid_mach P1</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	100.00	25.00
<b>Description:</b>	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the power (P) of point 1 as a [%]. The characteristic comprises the following value pairs: Power (P) / speed (n) p3320 / p3321 --> point 1 (P1 / n1) p3322 / p3323 --> point 2 (P2 / n2) p3324 / p3325 --> point 3 (P3 / n3) p3326 / p3327 --> point 4 (P4 / n4) p3328 / p3329 --> point 5 (P5 / n5)		
<b>Dependency:</b>	Refer to: r0041, p3321, p3322, p3323, p3324, p3325, p3326, p3327, p3328, p3329		
<b>Note:</b>	The reference value for power and speed is the rated power/rated speed. The energy saved is displayed in r0041.		
<b>p3321[0...n]</b>	<b>Fluid flow machine speed point 1 / Fluid_mach n1</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	100.00	0.00
<b>Description:</b>	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the speed (n) of point 1 as a [%]. The characteristic comprises the following value pairs: Power (P) / speed (n) p3320 / p3321 --> point 1 (P1 / n1) p3322 / p3323 --> point 2 (P2 / n2) p3324 / p3325 --> point 3 (P3 / n3) p3326 / p3327 --> point 4 (P4 / n4) p3328 / p3329 --> point 5 (P5 / n5)		
<b>Dependency:</b>	Refer to: r0041, p3320, p3322, p3323, p3324, p3325, p3326, p3327, p3328, p3329		
<b>Note:</b>	The reference value for power and speed is the rated power/rated speed. The energy saved is displayed in r0041.		
<b>p3322[0...n]</b>	<b>Fluid flow machine power point 2 / Fluid_mach P2</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	100.00	50.00
<b>Description:</b>	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the power (P) of point 2 as a [%].		
<b>Dependency:</b>	Refer to: r0041, p3320, p3321, p3323, p3324, p3325, p3326, p3327, p3328, p3329		

## 2 Parameters

### 2.2 List of parameters

**Note:** The reference value for power and speed is the rated power/rated speed.  
The energy saved is displayed in r0041.

---

<b>p3323[0...n]</b>	<b>Fluid flow machine speed point 2 / Fluid_mach n2</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	100.00	25.00
<b>Description:</b>	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the speed (n) of point 2 as a [%].		
<b>Dependency:</b>	Refer to: r0041, p3320, p3321, p3322, p3324, p3325, p3326, p3327, p3328, p3329		
<b>Note:</b>	The reference value for power and speed is the rated power/rated speed. The energy saved is displayed in r0041.		

---

<b>p3324[0...n]</b>	<b>Fluid flow machine power point 3 / Fluid_mach P3</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	100.00	77.00
<b>Description:</b>	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the power (P) of point 3 as a [%].		
<b>Dependency:</b>	Refer to: r0041, p3320, p3321, p3322, p3323, p3325, p3326, p3327, p3328, p3329		
<b>Note:</b>	The reference value for power and speed is the rated power/rated speed. The energy saved is displayed in r0041.		

---

<b>p3325[0...n]</b>	<b>Fluid flow machine speed point 3 / Fluid_mach n3</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	100.00	50.00
<b>Description:</b>	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the speed (n) of point 3 as a [%].		
<b>Dependency:</b>	Refer to: r0041, p3320, p3321, p3322, p3323, p3324, p3326, p3327, p3328, p3329		
<b>Note:</b>	The reference value for power and speed is the rated power/rated speed. The energy saved is displayed in r0041.		

<b>p3326[0...n]</b>	<b>Fluid flow machine power point 4 / Fluid_mach P4</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	100.00	92.00
<b>Description:</b>	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the power (P) of point 4 as a [%].		
<b>Dependency:</b>	Refer to: r0041, p3320, p3321, p3322, p3323, p3324, p3325, p3327, p3328, p3329		
<b>Note:</b>	The reference value for power and speed is the rated power/rated speed. The energy saved is displayed in r0041.		
<b>p3327[0...n]</b>	<b>Fluid flow machine speed point 4 / Fluid_mach n4</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	100.00	75.00
<b>Description:</b>	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the speed (n) of point 4 as a [%].		
<b>Dependency:</b>	Refer to: r0041, p3320, p3321, p3322, p3323, p3324, p3325, p3326, p3328, p3329		
<b>Note:</b>	The reference value for power and speed is the rated power/rated speed. The energy saved is displayed in r0041.		
<b>p3328[0...n]</b>	<b>Fluid flow machine power point 5 / Fluid_mach P5</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	100.00	100.00
<b>Description:</b>	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the power (P) of point 5 as a [%].		
<b>Dependency:</b>	Refer to: r0041, p3320, p3321, p3322, p3323, p3324, p3325, p3326, p3327, p3329		
<b>Note:</b>	The reference value for power and speed is the rated power/rated speed. The energy saved is displayed in r0041.		
<b>p3329[0...n]</b>	<b>Fluid flow machine speed point 5 / Fluid_mach n5</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00	100.00	100.00
<b>Description:</b>	For the energy-saving display of a fluid-flow machine, a typical flow characteristic $P = f(n)$ with 5 points along the characteristic is required. This parameter specifies the speed (n) of point 5 as a [%].		
<b>Dependency:</b>	Refer to: r0041, p3320, p3321, p3322, p3323, p3324, p3325, p3326, p3327, p3328		

## 2 Parameters

### 2.2 List of parameters

**Note:** The reference value for power and speed is the rated power/rated speed.  
The energy saved is displayed in r0041.

#### r3402

#### Infeed status internal BIC / INF state int

B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8932
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	6	-

**Description:** Displays the internal status of the infeed module.

**Value:**

- 0: Initialization
- 1: Fault
- 2: No ON command
- 3: Offset measurement running
- 4: ON delay active
- 5: Precharging running
- 6: Operation

#### r3405.1...8

#### CO/BO: Status word DC link control / ZSW Vdc\_ctrl

VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and BICO output for the status word of the DC link voltage control.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	01	Vdc-ctrl active	Yes	No	-
	08	Vdc controller selected	Yes	No	-

**Dependency:** Refer to: A06810

**Note:** For bit 01:  
DC link voltage control is disabled and enabled with p3513.  
For bit 08 = 1:  
DC link voltage control is selected using p3513.

#### r3405.7

#### CO/BO: Infeed status word / Inf ZSW

B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and BICO output for the status word of the infeed unit.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	07	DC link undervoltage alarm threshold undershot	Yes	No	-

**Dependency:** Refer to: A06810

**Note:** For bit 07:  
When the alarm threshold is fallen below, alarm A06810 is output and r3405.7 is set = 1.  
The alarm threshold is obtained from the sum of the undervoltage threshold p0296 and offset r0279. As a consequence, the alarm threshold is only effective for p0279 > 0.  
Monitoring only takes place when operational.  
The following applies for states r3402 <= 5 and r3402 = 12: r3405.7 = 0.

<b>p3422</b>	<b>DC link capacitance total / C_DC tot</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> 0.20 [mF]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 2000.00 [mF]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 2.00 [mF]
<b>Description:</b>	Sets the total DC link capacitance for closed-loop voltage control. The capacitance of one power unit is pre-assigned to this value. The value should be adapted according to the number of power units.		
<b>Note:</b>	The controller setting for the DC link voltage controller is derived from this value.		
<b>p3490</b>	<b>Infeed delay time OFF1 command / INF t_del OFF1</b>		
B_INF	<b>Can be changed:</b> T <b>Data type:</b> FloatingPoint32  <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> 0.0 [ms]	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000000.0 [ms]	<b>Access level:</b> 2 <b>Func. diagram:</b> 8732, 8832, 8932  <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.0 [ms]
<b>Description:</b>	Sets the delay time for the ON/OFF1 command of the infeed. After ON/OFF1 = 0 the infeed remains in operation for the specified time		
<b>Dependency:</b>	Refer to: p0840		
<b>Notice:</b>	The ON/OFF1 command of the infeed can be interrupted.		
<b>Note:</b>	This parameter is only relevant if a Motor Module and the infeed are controlled by the same OFF command. In this case, the delay time and the stop ramp time of the motor can be coordinated with one another.		
<b>p3510</b>	<b>DC link voltage setpoint / Vdc setp</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> 100.00 [V]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 5_2 <b>Scaling:</b> p2001 <b>Max</b> 1600.00 [V]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7960 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 600.00 [V]
<b>Description:</b>	Sets the setpoint for the DC link voltage on the motor side.		
<b>p3511</b>	<b>CI: DC link voltage supplementary setpoint / Vdc Z_set</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 / FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> p2001 <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 7960 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the signal source for the supplementary setpoint for the DC link voltage on the motor side.		
<b>Dependency:</b>	Refer to: p3510		

---

<b>p3513</b>	<b>BI: Voltage-controlled operation inhibit / U_ctrl op inhib</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7960
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1

**Description:** Sets the signal source for disabling DC link voltage control on the motor side.

---

<b>r3517</b>	<b>CO: DC link controller active current setpoint / Vdc I_act set</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 6220, 7960
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]

**Description:** Display and connector output for the unlimited setpoint of the active current controller of the DC link voltage control on the motor side.

---

<b>p3519[0...3]</b>	<b>CI: DC link pre-control power (scaled) / Vdc prectrl P scal</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> r2004	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for power pre-control.

**Dependency:** Refer to: p3521

**Note:** Closed-loop control of the DC link voltage is improved by pre-controlling the power required for the other components.  
A scaled quantity is expected so that the various power reference values (r2004) of the drive objects must be taken into account. The scaling factors are used to adapt the scaling (p3521).

---

<b>p3520[0...3]</b>	<b>CI: DC link pre-control power (not scaled) / Vdc pre-ctrl P</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7960
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for power pre-control.

**Dependency:** Refer to: p3521

**Note:** Closed-loop control of the DC link voltage is improved by pre-controlling the power required for the other modules.  
A non-scaled quantity is expected so that the various power reference values (r2004) of the drive objects do not have to be taken into account. The scaling factors are used to adapt the scaling (p3521).

---

<b>p3521[0...3]</b>	<b>DC link pre-control power scaling / Vdc prectrl P scal</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7960
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-100000.00000 [%]	100000.00000 [%]	100.00000 [%]
<b>Description:</b>	Sets the scaling factor for the power pre-control.		
<b>Dependency:</b>	Refer to: p3520		
<b>Note:</b>	The scaling factor acts on the sum of the associated indices of p3519 and p3520. As one BICO input is scaled (p3519) and the other is not scaled (p3520), for each index, only one of the two inputs should be assigned.		

---

<b>r3522[0...4]</b>	<b>CO: DC link voltage control precontrol display / Vdc_ctr prectrl dis</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7960
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [kW]	- [kW]	- [kW]
<b>Description:</b>	Display and connector output for the smoothed power precontrols.		
<b>Index:</b>	[0] = Power precontrol 1 [1] = Power precontrol 2 [2] = Power precontrol 3 [3] = Power precontrol 4 [4] = Power precontrol sum linearized		
<b>Dependency:</b>	Refer to: p3520, p3521, p3523		
<b>Note:</b>	These displays are used to set the correct scaling for the pre-control.		

---

<b>p3523[0...3]</b>	<b>DC link pre-control power smoothing / Vdc pre-ctrl P sm</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	1000 [ms]	0 [ms]
<b>Description:</b>	Sets the filter time for power pre-control.		
<b>Dependency:</b>	Refer to: p3520		

---

<b>r3554[0...1]</b>	<b>Vdc controller output / INF Vdc_ctrl outp</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7960
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Display of the DC link voltage controller output (Vdc controller).		
<b>Index:</b>	[0] = I output [1] = PI output		

---

<b>p3560</b>	<b>Vdc controller proportional gain / Vdc_ctrl Kp</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7960
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.01 [%]	1000.00 [%]	100.00 [%]
<b>Description:</b>	Sets the scaled proportional gain for the DC link voltage controller (Vdc controller).		
<b>Note:</b>	A value of 100% corresponds to the basic setting derived from the loop control parameter (p3422).		

---

<b>p3562</b>	<b>Vdc controller integral time / Vdc_ctrl Tn</b>		
VECTOR_G (Tech_ctrl)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7960
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.10 [%]	100000.00 [%]	100.00 [%]
<b>Description:</b>	Sets the scaled integral time for the DC link voltage controller (Vdc).		
<b>Note:</b>	A value of 100% corresponds to the basic setting derived from the loop control parameter (p3422).		

---

<b>p3660[0...n]</b>	<b>VSM input line supply voltage voltage scaler / VSM inp U_scaler</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> 9880
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	100000.00 [%]	0.00 [%]
<b>Description:</b>	Sets the voltage scaler for the Voltage Sensing Module (VSM).		
<b>Note:</b>	When the 690 V input is used (X522) without voltage scaler, 0 % should be entered. When the 100 V input (X521) is used with voltage scaler to measure medium voltages, the dividing (scaling) factor multiplied by 100% should be entered. Example: 1000 V line supply voltage, voltage scaling, 10:1 --> voltage at the VSM input is 100 V --> p3660 = 10 * 100 % = 1000 %		

---

<b>r3661[0...n]</b>	<b>CO: VSM input line supply voltage u1 - u2 / VSM inp u1-u2</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 5_3	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the input voltage between phases L1 and L2 for the Voltage Sensing Module (VSM).		
<b>Dependency:</b>	Refer to: p3660		
<b>Note:</b>	X521.1 or X522.1: Connection of L1 X521.2 or X522.2: Connection of L2 X521.3 or X522.3: Connection of L3		

<b>r3662[0...n]</b>	<b>CO: VSM input line supply voltage u2 - u3 / VSM inp u2-u3</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 5_3	<b>Unit selection:</b> p0505	
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [V]	- [V]	- [V]	
<b>Description:</b>	Displays the input voltage between phases L2 and L3 for the Voltage Sensing Module (VSM).			
<b>Dependency:</b>	Refer to: p3660			
<b>Note:</b>	X521.1 or X522.1: Connection of L1 X521.2 or X522.2: Connection of L2 X521.3 or X522.3: Connection of L3			
<b>r3664[0...n]</b>	<b>CO: VSM temperature evaluation status / VSM temp status</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> 9886	
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the status of the temperature evaluation using the Voltage Sensing Module (VSM). This displays whether the temperature actual value has exceeded the alarm/fault threshold.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Alarm is present	Yes	No
	01	Fault is present	Yes	No
				<b>FP</b>
				-
				-
<b>Dependency:</b>	Refer to: p3665, r3666, p3667, p3668			
<b>p3665[0...n]</b>	<b>VSM temperature evaluation sensor type / VSM TempSensorType</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> 9886	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	6	0	
<b>Description:</b>	Setting of the temperature sensor for the Voltage Sensing Module (VSM). The temperature sensor is connected to terminals X520.5 and X520.6 of the VSM.			
<b>Value:</b>	0: No sensor 1: PTC 2: KTY84 6: PT1000			
<b>r3666[0...n]</b>	<b>CO: VSM temperature actual value / VSM Temp_ActVal</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> 9886	
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505	
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [°C]	- [°C]	- [°C]	
<b>Description:</b>	Display and connector output for the temperature actual value of a temperature sensor connected to a Voltage Sensing Module (VSM). Prerequisite: A KTY/ PT1000 temperature sensor is connected, and correspondingly 3665 is set = 2, 6.			

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Refer to: p3665  
Refer to: F34207, A34211

**Note:** If value r3666 exceeds threshold value p3667 or p3668, then alarm A34211 or fault F34207 is output.  
For sensor type PTC (p3665 = 1), the following applies:  
- below the nominal response temperature, r3666 = -50°C.  
- above the nominal response temperature, r3666 = 250 °C.

---

**p3667[0...n]**      **VSM overtemperature alarm threshold / VSM T A thresh**

VECTOR\_G      **Can be changed:** T      **Calculated:** -      **Access level:** 3  
**Data type:** FloatingPoint32      **Dyn. index:** p0150      **Func. diagram:** 9886  
**P-Group:** -      **Unit group:** 21\_1      **Unit selection:** p0505  
**Not for motor type:** -      **Scaling:** p2006      **Expert list:** 1  
**Min**      **Max**      **Factory setting**  
-100.00 [°C]      301.00 [°C]      150.00 [°C]

**Description:** Sets the alarm threshold for the temperature sensor on the Voltage Sensing Module (VSM).  
Prerequisite:  
A KTY/PT1000 temperature sensor is connected, and correspondingly p3665 is set = 2, 6.

**Dependency:** Refer to: p3665  
Refer to: A34211

**Note:** For sensor type KTY (p3665 = 2), values 181 ... 300 °C result in fault F06255.  
The monitoring is deactivated for p3667 = 301.

---

**p3668[0...n]**      **VSM overtemperature shutdown threshold / VSM T F\_thresh**

VECTOR\_G      **Can be changed:** T      **Calculated:** -      **Access level:** 3  
**Data type:** FloatingPoint32      **Dyn. index:** p0150      **Func. diagram:** 9886  
**P-Group:** -      **Unit group:** 21\_1      **Unit selection:** p0505  
**Not for motor type:** -      **Scaling:** p2006      **Expert list:** 1  
**Min**      **Max**      **Factory setting**  
-100.00 [°C]      301.00 [°C]      180.00 [°C]

**Description:** Sets the shutdown threshold for the temperature sensor of the VSM.  
Prerequisite:  
A KTY/PT1000 temperature sensor is connected, and correspondingly p3665 is set = 2, 6.

**Dependency:** Refer to: p3665, p3667  
Refer to: F35207

**Note:** For sensor type KTY (p3665 = 2), values 181 ... 300 °C result in fault F06255.  
The monitoring is deactivated for p3668 = 301.

---

**p3669[0...n]**      **VSM overtemperature hysteresis / VSM T hyst**

VECTOR\_G      **Can be changed:** T      **Calculated:** -      **Access level:** 3  
**Data type:** FloatingPoint32      **Dyn. index:** p0150      **Func. diagram:** 9886  
**P-Group:** -      **Unit group:** 21\_2      **Unit selection:** p0505  
**Not for motor type:** -      **Scaling:** p2006      **Expert list:** 1  
**Min**      **Max**      **Factory setting**  
1.00 [K]      50.00 [K]      3.00 [K]

**Description:** Sets the hysteresis for the alarm threshold of the Voltage Sensing Module (VSM).

**Dependency:** Refer to: p3667

<b>p3670[0...n]</b>	<b>VSM 10 V input CT gain / VSM CT_gain</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> 9880
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [A]	1000.000 [A]	1.000 [A]
<b>Description:</b>	Sets CT gain of the CT connected at the 10 V input of the Voltage Sensing Module (VSM). The parameter specifies the current magnitude in [A] referred to the input voltage at the VSM in [V]. Example: CT with 1 V per 200 A. --> p3670 = 200		
<b>Dependency:</b>	Refer to: r3671, r3672		
<b>Note:</b>	The CT for phase 1 is connected at terminals X520.1 and X520.2 of the VSM. The CT for phase 2 is connected at terminals X520.3 and X520.4 of the VSM.		
<b>r3671[0...n]</b>	<b>CO: VSM 10 V input CT 1 actual value / VSM CT 1 I_act</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> 9880
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the current actual value from current transducer (CT) 1 at the 10 V input of the Voltage Sensing Module (VSM).		
<b>Dependency:</b>	Refer to: p3670		
<b>Note:</b>	The CT for phase 1 is connected at terminals X520.1 and X520.2 of the VSM.		
<b>r3672[0...n]</b>	<b>CO: VSM 10 V input CT 2 actual value / VSM CT 2 I_act</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> 9880
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the current actual value from current transducer (CT) 2 at the 10 V input of the Voltage Sensing Module (VSM).		
<b>Dependency:</b>	Refer to: p3670		
<b>Note:</b>	The CT for phase 2 is connected at terminals X520.3 and X520.4 of the VSM.		
<b>r3673[0...n]</b>	<b>CO: VSM 10 V input 1 actual value / VSM inp 1 U_act</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> 9880
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the actual value of the voltage measured at the 10 V input 1 of the Voltage Sensing Module (VSM).		
<b>Dependency:</b>	Refer to: p3670		
<b>Note:</b>	10 V input 1: Terminals X520.1 and X520.2		

## 2 Parameters

### 2.2 List of parameters

---

<b>r3674[0...n]</b>	<b>CO: VSM 10 V input 2 actual value / VSM inp 2 U_act</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> 9880
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the actual value of the voltage measured at the 10 V input 2 of the Voltage Sensing Module (VSM).		
<b>Dependency:</b>	Refer to: p3670		
<b>Note:</b>	10 V input 2: Terminals X520.3 and X520.4		
<hr/>			
<b>p3680</b>	<b>BI: Braking Module internal inhibit / BM int inhib</b>		
B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to inhibit the internal Braking Module. BI: p3680 = 1 signal: The Braking Module is inhibited. BI: p3680 = 0 signal: The Braking Module is enabled.		
<b>Dependency:</b>	Refer to: A06904		
<b>Caution:</b>	When the Braking Module is inhibited, no energy can be dissipated in the braking resistor.		
			
<hr/>			
<b>p3681</b>	<b>BI: Activating Braking Module internal DC link fast discharge / BM intDCdischg act</b>		
B_INF	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to activate the DC link fast discharge for an internal braking module. When the following conditions apply, the DC link fast discharge is started later with delay time (p3682): - BI: p3681 = 1 signal. - an external line contactor is opened via r0863.1 "energize contactor". The DC link fast discharge is interrupted when the following conditions apply: - BI: p3681 = 0 signal. - ON command for the infeed.		
<b>Recommendation:</b>	The DC link fast discharge should be activated if there is an external line contactor and is correctly interconnected (r0863.1, p0860). If the DC link fast discharge is not activated together with an external line contactor, then faults can occur when precharging (e.g. F30027).		
<b>Dependency:</b>	Refer to: p3682 Refer to: F30027		
<b>Notice:</b>	The parameter is only effective for Basic Line Modules with the internal Braking Module (this is valid for Basic Line Modules with a power rating of less than 100 kW).		

<b>p3682</b>	<b>Braking Module internal DC link fast discharge delay time / BM int DC dischg t</b>		
B_INF	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	500 [ms]	4294967295 [ms]	1000 [ms]
<b>Description:</b>	Sets the delay time for switching in the DC link fast discharge for an internal Braking Module.		
<b>Dependency:</b>	Refer to: p3681		
<b>Notice:</b>	The parameter is only effective for Basic Line Modules with the internal Braking Module (this is valid for Basic Line Modules with a power rating of less than 100 kW).		
<b>p3683</b>	<b>Braking Module internal activation threshold brake chopper / BM int act thresh</b>		
B_INF	<b>Can be changed:</b> C2(1)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	110.00 [V]	780.00 [V]	760.00 [V]
<b>Description:</b>	Sets the activation threshold for the braking chopper.		
<b>Note:</b>	The activation threshold is only effective if the "Device supply voltage reduced" function (p0212.0 = 1) has been activated!		
<b>r3685</b>	<b>BO: Digital Braking Module: Pre-alarm I2t shutdown / Dig BM A I2t shutd</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	The binector output uses a 1 signal to indicate that 80 % of the highest permissible I2t value has been reached in the Braking Module.		
<b>Dependency:</b>	Refer to: A06905		
<b>r3686</b>	<b>BO: Digital Braking Module fault / Dig BM fault</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	The binector output uses a 1 signal to indicate an overcurrent fault or an I2t shutdown in the Braking Module.		
<b>Dependency:</b>	Refer to: F06906		

---

<b>r3687</b>	<b>BO: Digital Braking Module pre-alarm overtemperature / Dig BM A overtemp</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays a fault due to the excessively high temperature. 1 signal: The connected temperature sensor (X21.1, X21.2) signals an overtemperature.		
<b>Recommendation:</b>	Measure the braking resistor temperature using the temperature sensor.		

---

<b>r3688</b>	<b>BO: Braking Module internal overtemperature shutdown / BM int temp shudt</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the shutdown due to the excessively high temperature. 1 signal: The connected temperature sensor (X21.1, X21.2) signals an overtemperature. The highest permissible temperature at the connected temperature sensor has been exceeded and results in a shutdown.		
<b>Dependency:</b>	Refer to: F06908		

---

<b>r3689</b>	<b>BO: Digital Braking Module Uce fault / Dig BM Uce fault</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays an Uce fault in the internal Braking Module. 1 signal: An Uce fault is present in the internal Braking Module.		
<b>Dependency:</b>	Refer to: F06909		

---

<b>p3800[0...n]</b>	<b>Sync-line-drive activation / Sync act</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7020
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the activation for the line-drive synchronization.		
<b>Value:</b>	0: Sync-line-drive deactivated 1: Sync-line-drive activated VSM-INT		
<b>Dependency:</b>	Refer to: p3801, p3802		
<b>Caution:</b>	 <p>If there is only one VSM being used, this can either be used for line synchronization or for a flying restart. If the VSM was connected to the line supply, then flying restart should be deselected in p1200. If the VSM was connected at the output (motor side), then line synchronization should be deactivated using p3800. Line synchronization (first VSM connected with the line supply) and also flying restart (second VSM connected to the motor terminals) can only be used if two VSMs are assigned to the Motor Module.</p>		

**Note:** When the ground fault monitoring initiates a fault for overlapping synchronizing the threshold value p0287[1] for the Motor Module and the associated infeed must be appropriately increased (e.g. p0287[1] = 100 %).  
For p3800 = 1, the following applies:  
The INTERNAL voltage actual values are used for synchronization. The effects that a (sine-wave) filter - that is connected between the Motor Module and motor - has on the voltage actual values are taken into account (theoretically) by appropriately selecting p0230.  
VSM: Voltage Sensing Module

p3801[0...n]	Sync-line-drive drive object number / Sync DO_no		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7020
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	62	1

**Description:** Sets the drive object number of the VSM used for the line-drive synchronization.

**Dependency:** Refer to: p3800, p3802

**Notice:** The current controller sampling time p0115[0] of the drive object with the VSM used for synchronization must be identical to the current controller sampling time of the drive of the drive used to perform line synchronization.

**Note:** VSM: Voltage Sensing Module  
The setting p3801 = 1 is always possible (no VSM selected).  
If the VSM is assigned subsequently to a Motor Module, its drive object number must be entered in p3801.  
The line voltage is always measured using the first VSM (p0151[0]).

p3802[0...n]	BI: Sync-line-drive enable / Sync enable		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> CDS, p0170	<b>Func. diagram:</b> 7020
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source to switch in/switch out for the line-drive synchronization.

BI: p3802 = 1 signal:

The line-drive synchronization is switched in.

**Dependency:** Refer to: p3800, p3801

r3803.0	CO/BO: Sync-line-drive control word / Sync STW		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the control word for the line-drive synchronization.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Sync-line-drive selected	Yes	No	-

**Note:** For bit 00:  
For a 1 signal, p3800 > 0 is set.

<b>r3804</b>	<b>CO: Sync-line-drive target frequency / Sync f_target</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3030, 7020
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Hz]	- [Hz]	- [Hz]
<b>Description:</b>	Displays the target frequency for the line-drive synchronization.		
<b>Dependency:</b>	Refer to: A07941		
<b>r3805</b>	<b>CO: Sync-line-drive frequency difference / Sync f_diff</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7020
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Hz]	- [Hz]	- [Hz]
<b>Description:</b>	Displays the frequency difference between the measured target frequency and output frequency of the gating unit of the closed-loop control for line-drive synchronization.		
<b>p3806[0...n]</b>	<b>Sync-line-drive frequency difference threshold value / Sync f_diff thresh</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b>	<b>Access level:</b> 2
		CALC_MOD_LIM_REF	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7020
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Hz]	1.00 [Hz]	0.10 [Hz]
<b>Description:</b>	Sets the threshold value of the frequency difference to activate the closed-loop phase control for line-drive synchronization. The closed-loop phase control is activated (r3819.6 = 1), if the frequency difference is less that the threshold value.		
<b>r3808</b>	<b>CO: Sync-line-drive phase difference / Sync phase diff</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7020
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2005	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°]	- [°]	- [°]
<b>Description:</b>	Displays the phase difference between the measured target phase and phase of the gating unit of the closed-loop control for line-drive synchronization.		
<b>p3809[0...n]</b>	<b>Sync-line-drive phase setpoint / Sync phase setp</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7020
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-180.00 [°]	179.90 [°]	0.00 [°]
<b>Description:</b>	Sets the phase setpoint for the line-drive synchronization.		

<b>p3811[0...n]</b>	<b>Sync-line-drive frequency limiting / Sync f_lim</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7020
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [Hz]	1.00 [Hz]	0.20 [Hz]
<b>Description:</b>	Sets the frequency limiting of the phase controller output for the line-drive synchronization.		
<b>r3812</b>	<b>CO: Sync-line-drive correction frequency / Sync f_corr</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 3080, 7020
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Hz]	- [Hz]	- [Hz]
<b>Description:</b>	Displays the correction frequency for the line-drive synchronization.		
<b>p3813[0...n]</b>	<b>Sync-line-drive phase synchronism threshold value / Sync Ph_sync thrsh</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7020
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1.00 [°]	20.00 [°]	2.00 [°]
<b>Description:</b>	Sets the threshold value of the phase synchronism for the line-drive synchronization. A prerequisite for synchronism is achieved if the phase difference is lower than the threshold value.		
<b>Note:</b>	Synchronism is reached (r3819.2 = 1), if the AND logic operation of the results from the phase measurement (p3813) and voltage measurement (p3815) is fulfilled.		
<b>r3814</b>	<b>CO: Sync-line-drive voltage difference / Sync U_diff</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7020
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Vrms]	- [Vrms]	- [Vrms]
<b>Description:</b>	Display and connector output for the voltage difference between the measured target voltage and output voltage of the gating unit of the closed-loop control for line-drive synchronization.		
<b>p3815[0...n]</b>	<b>Sync-line-drive voltage difference threshold value / Sync U_diff thresh</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7020
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	20.00 [%]	10.00 [%]
<b>Description:</b>	Sets the threshold value of the voltage difference for the line-drive synchronization. A prerequisite for synchronism is reached if the voltage difference is less than the threshold value.		

## 2 Parameters

### 2.2 List of parameters

**Note:** Synchronism is reached ( $r3819.2 = 1$ ), if the AND logic operation of the results from the phase measurement (p3813) and voltage measurement (p3815) is fulfilled.  
For voltage manipulated quantity margin (reserve) of the drive converter, the amplitude difference (r3814) between the setpoint and actual value is controlled (corrected) to zero.

<b>r3819.0...7</b>		<b>CO/BO: Sync-line-drive status word / Sync ZSW</b>																																					
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Functions <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 2 <b>Func. diagram:</b> 7020 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -																																				
<b>Description:</b>	Displays the status word for the line-drive synchronization.																																						
<b>Bit field:</b>	<table border="1"> <thead> <tr> <th>Bit</th> <th>Signal name</th> <th>1 signal</th> <th>0 signal</th> <th>FP</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Sync-line-drive enabled</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>02</td> <td>Sync-line-drive synchronism reached</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>03</td> <td>Sync-line-drive synchronizing error</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>05</td> <td>Sync-line-drive frequency measurement active</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>06</td> <td>Sync-line-drive phase control active</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>07</td> <td>Sync-line-drive without drive</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	FP	00	Sync-line-drive enabled	Yes	No	-	02	Sync-line-drive synchronism reached	Yes	No	-	03	Sync-line-drive synchronizing error	Yes	No	-	05	Sync-line-drive frequency measurement active	Yes	No	-	06	Sync-line-drive phase control active	Yes	No	-	07	Sync-line-drive without drive	Yes	No	-			
Bit	Signal name	1 signal	0 signal	FP																																			
00	Sync-line-drive enabled	Yes	No	-																																			
02	Sync-line-drive synchronism reached	Yes	No	-																																			
03	Sync-line-drive synchronizing error	Yes	No	-																																			
05	Sync-line-drive frequency measurement active	Yes	No	-																																			
06	Sync-line-drive phase control active	Yes	No	-																																			
07	Sync-line-drive without drive	Yes	No	-																																			

<b>p3820[0...n]</b>		<b>Friction characteristic value n0 / Friction n0</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Functions <b>Not for motor type:</b> REL <b>Min</b> 0.00 [rpm]	<b>Calculated:</b> CALC_MOD_LIM_REF <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 3_1 <b>Scaling:</b> - <b>Max</b> 210000.00 [rpm]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7010 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 15.00 [rpm]	
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the n coordinate of the 1st value pair of the friction characteristic.			
<b>Dependency:</b>	Refer to: p3830, p3845			

<b>p3821[0...n]</b>		<b>Friction characteristic value n1 / Friction n1</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Functions <b>Not for motor type:</b> REL <b>Min</b> 0.00 [rpm]	<b>Calculated:</b> CALC_MOD_LIM_REF <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 3_1 <b>Scaling:</b> - <b>Max</b> 210000.00 [rpm]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7010 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> 30.00 [rpm]	
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the n coordinate of the 2nd value pair of the friction characteristic.			
<b>Dependency:</b>	Refer to: p3831, p3845			

<b>p3822[0...n]</b>	<b>Friction characteristic value n2 / Friction n2</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	60.00 [rpm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the n coordinate of the 3rd value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3832, p3845		
<b>p3823[0...n]</b>	<b>Friction characteristic value n3 / Friction n3</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	120.00 [rpm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the n coordinate of the 4th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3833, p3845		
<b>p3824[0...n]</b>	<b>Friction characteristic value n4 / Friction n4</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	150.00 [rpm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the n coordinate of the 5th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3834, p3845		
<b>p3825[0...n]</b>	<b>Friction characteristic value n5 / Friction n5</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	210000.00 [rpm]	300.00 [rpm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the n coordinate of the 6th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3835, p3845		

## 2 Parameters

### 2.2 List of parameters

---

<b>p3826[0...n]</b>	<b>Friction characteristic value n6 / Friction n6</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> 0.00 [rpm]	<b>Max</b> 210000.00 [rpm]	<b>Factory setting</b> 600.00 [rpm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the n coordinate of the 7th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3836, p3845		

---

<b>p3827[0...n]</b>	<b>Friction characteristic value n7 / Friction n7</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> 0.00 [rpm]	<b>Max</b> 210000.00 [rpm]	<b>Factory setting</b> 1200.00 [rpm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the n coordinate of the 8th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3837, p3845		

---

<b>p3828[0...n]</b>	<b>Friction characteristic value n8 / Friction n8</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> 0.00 [rpm]	<b>Max</b> 210000.00 [rpm]	<b>Factory setting</b> 1500.00 [rpm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the n coordinate of the 9th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3838, p3845		

---

<b>p3829[0...n]</b>	<b>Friction characteristic value n9 / Friction n9</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> CALC_MOD_LIM_REF	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b> 0.00 [rpm]	<b>Max</b> 210000.00 [rpm]	<b>Factory setting</b> 3000.00 [rpm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the n coordinate of the 10th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3839, p3845		

---

---

<b>p3830[0...n]</b>	<b>Friction characteristic value M0 / Friction M0</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000000.0000 [Nm]	1000000.0000 [Nm]	0.0000 [Nm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the M coordinate of the 1st value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3820, p3845		

---

<b>p3831[0...n]</b>	<b>Friction characteristic value M1 / Friction M1</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000000.0000 [Nm]	1000000.0000 [Nm]	0.0000 [Nm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the M coordinate of the 2nd value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3821, p3845		

---

<b>p3832[0...n]</b>	<b>Friction characteristic value M2 / Friction M2</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000000.0000 [Nm]	1000000.0000 [Nm]	0.0000 [Nm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the M coordinate of the 3rd value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3822, p3845		

---

<b>p3833[0...n]</b>	<b>Friction characteristic value M3 / Friction M3</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000000.0000 [Nm]	1000000.0000 [Nm]	0.0000 [Nm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the M coordinate of the 4th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3823, p3845		

## 2 Parameters

### 2.2 List of parameters

---

<b>p3834[0...n]</b>	<b>Friction characteristic value M4 / Friction M4</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000000.0000 [Nm]	1000000.0000 [Nm]	0.0000 [Nm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the M coordinate of the 5th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3824, p3845		

---

<b>p3835[0...n]</b>	<b>Friction characteristic value M5 / Friction M5</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000000.0000 [Nm]	1000000.0000 [Nm]	0.0000 [Nm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the M coordinate of the 6th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3825, p3845		

---

<b>p3836[0...n]</b>	<b>Friction characteristic value M6 / Friction M6</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000000.0000 [Nm]	1000000.0000 [Nm]	0.0000 [Nm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the M coordinate of the 7th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3826, p3845		

---

<b>p3837[0...n]</b>	<b>Friction characteristic value M7 / Friction M7</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000000.0000 [Nm]	1000000.0000 [Nm]	0.0000 [Nm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the M coordinate of the 8th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3827, p3845		

<b>p3838[0...n]</b>	<b>Friction characteristic value M8 / Friction M8</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000000.0000 [Nm]	1000000.0000 [Nm]	0.0000 [Nm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the M coordinate of the 9th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3828, p3845		

<b>p3839[0...n]</b>	<b>Friction characteristic value M9 / Friction M9</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> 7_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000000.0000 [Nm]	1000000.0000 [Nm]	0.0000 [Nm]
<b>Description:</b>	The friction characteristic is defined by 10 value pairs. This parameter specifies the M coordinate of the 10th value pair of the friction characteristic.		
<b>Dependency:</b>	Refer to: p3829, p3845		

<b>r3840.0...9</b>	<b>CO/BO: Friction characteristic status word / Friction ZSW</b>				
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7010		
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the status word of the friction characteristic.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Friction characteristic OK	Yes	No	-
	01	Friction characteristic record activated	Yes	No	-
	02	Friction characteristic record completed	Yes	No	-
	03	Friction characteristic record aborted	Yes	No	-
	08	Friction characteristic positive direction	Yes	No	-
	09	Friction torque model controlled status	Upper	Lower	-

**Note:** For bit 09:  
For closed-control of an induction motors with encoder, the switchover between the current and observer model is displayed (see also r1751.19), if p3844 is > 0.  
The following applies for bit 9 = 0 (observer model active):  
The frictional torque is calculated from the characteristic values from the characteristic point entered into p3844.  
The following applies for bit 9 = 1 (current model active):  
The frictional torque is calculated from the characteristic values below the characteristic point entered into p3844.

<b>r3841</b>	<b>CO: Friction characteristic output / Frict outp</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Functions <b>Not for motor type:</b> REL <b>Min</b> - [Nm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> 7_1 <b>Scaling:</b> p2003 <b>Max</b> - [Nm]	<b>Access level:</b> 2 <b>Func. diagram:</b> 7010 <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [Nm]
<b>Description:</b>	Display and connector output for the torque of the friction characteristic dependent on the speed.		
<b>Dependency:</b>	Refer to: p1569, p3842		
<b>p3842</b>	<b>Friction characteristic activation / Frict act</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> Functions <b>Not for motor type:</b> REL <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 2 <b>Func. diagram:</b> 7010 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Setting to activate and deactivate the friction characteristic.		
<b>Value:</b>	0: Friction characteristic deactivated 1: Friction characteristic activated		
<b>Dependency:</b>	Refer to: p1569, r3841, p3845		
<b>p3843[0...n]</b>	<b>Friction characteristic frictional torque diff. smoothing time / Frict M_diff t_sm</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> PMSM, SESM, REL <b>Min</b> 0.00 [ms]	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 10000.00 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [ms]
<b>Description:</b>	Sets the smoothing time constant (PT1) for the friction torque difference. Smoothing is activated when switching over from status bit r3840.9.		
<b>Dependency:</b>	Refer to: p3844		
<b>p3844[0...n]</b>	<b>Friction characteristic number changeover point upper / FricNo chng_pt up</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> PMSM, SESM, REL <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 4	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Selects the upper changeover point of the friction characteristic for the frictional torque input controlled by the motor model of the induction motor.  The speed of this changeover point is pre-assigned when automatically calculating with the changeover speed p1752. The changeover point located below is pre-assigned with the changeover speed p1752 * (1 - p1753). Example: p3844 = 3 means that the speed value for the change to the monitor model (p3823 = p1752) is entered into p3823 (friction characteristic value n3).  Depending on the display of r3840.9, the frictional torque is calculated from the friction characteristic values, which are associated with these changeover points. For the changeover of the motor model, with hysteresis, the frictional torque smoothed with p3843 changes between these two states.		
<b>Dependency:</b>	As part of the automatic calculation (p0340), p3844 is only activated for closed loop control (p1300 = 21, 23) of induction motors with encoder. Refer to: p3843		

- Notice:** If the changeover point defined using p3844 does not match the changeover speed p1752, then internally, the model-controlled friction torque input is automatically deactivated (same as for p3844 = 0).
- Note:** For p3844 = 0, the model-controlled frictional torque changeover is deactivated. The frictional torque is then calculated the same as for the encoderless control by interpolating between the points along the friction characteristic.

---

**p3845 Friction characteristic record activation / Frict rec act**

VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0

**Description:** Setting for the friction characteristic record.

After the next switch-on command, the friction characteristic is automatically recorded.

**Value:**

- 0: Friction characteristic record deactivated
- 1: Friction char record activated for all directions
- 2: Friction char record activated for positive direction
- 3: Friction char record activated for negative direction

**Dependency:** When selecting the friction characteristic measurement, the drive data set changeover is suppressed.

For linear drives (refer to r0108 bit 12) it is not permissible to carry out the friction characteristic measurement for mechanical systems that limit travel.

**Danger:**



For drives with a mechanical system that limit the distance moved, it must be ensured that during recording, the friction characteristic is not reached. If this is not the case, then it is not permissible that the measurement is carried out.

**Notice:** To permanently accept the determined settings they must be saved in a non-volatile fashion (p0971, p0977).

**Note:** When the friction characteristic record is active, it is not possible to save the parameters (p0971, p0977).

When the friction characteristic record is active (p3845 > 0), it is not possible to change p3820 ... p3829, p3830 ... p3839 and p3842.

When recording the friction characteristic, in addition to the friction, the motor losses are also determined (e.g. iron losses, eddy current losses and re-magnetizing losses). A differentiation is not made between these individual loss components. We recommend that a motor temperature sensor is used because torque deviations can also be emulated/mapped on the characteristic due to the thermal influence.

---

**p3846[0...n] Friction characteristic record ramp-up/ramp-down time / Frict rec t\_RU/RD**

VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	999999.000 [s]	10.000 [s]

**Description:** Sets the ramp-up/ramp-down time of the ramp-up/ramp-down function generator to automatically record the friction characteristic.

The drive is accelerated from standstill (setpoint = 0) up to the maximum speed/velocity (p1082) in this time.

**Dependency:** Refer to: p3845

---

**p3847[0...n] Friction characteristic record warm-up time / Frict rec t\_warm**

VECTOR_G (n/M)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> 7010
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [s]	3600.000 [s]	0.000 [s]

**Description:** Sets the warm-up time.

For an automatic trace (record) to start, the highest selected speed (p3829) is approached and this time is held. After this, the measurement is started with the highest speed.

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Refer to: p3829, p3845

<b>p3860 Number of Braking Modules connected in parallel / BM qty par_cct</b>			
B_INF (Brk Mod ext)	<b>Can be changed:</b> C2(2)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9951
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	8	1

**Description:** Sets the number of Braking Modules connected in parallel in a DC link.

**Note:** The parameter can only be written to if the infeed is in the commissioning mode (p0010 = 2).

<b>r3861.0...7 BO: Braking Module inhibit/acknowledgment / BM inhib/ackn</b>			
B_INF (Brk Mod ext)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9951
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Signal to energize terminal X21.1 "inhibit/acknowledgment" on the Braking Module.

This binector output is used as signal source to interconnect to a digital output.

For "booksize" formats the digital output must be connected to terminal X21.1 and for "chassis" formats the digital output must be connected to terminal X21.3 of the particular Braking Module.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Inhibit/acknowledge Braking Module 1	High	Low	-
	01	Inhibit/acknowledge Braking Module 2	High	Low	-
	02	Inhibit/acknowledge Braking Module 3	High	Low	-
	03	Inhibit/acknowledge Braking Module 4	High	Low	-
	04	Inhibit/acknowledge Braking Module 5	High	Low	-
	05	Inhibit/acknowledge Braking Module 6	High	Low	-
	06	Inhibit/acknowledge Braking Module 7	High	Low	-
	07	Inhibit/acknowledge Braking Module 8	High	Low	-

**Warning:** Check that binector outputs BO: r3861.n are connected correctly and that the appropriate digital outputs are wired correctly.



If the interconnection/wiring is incorrect, the software could execute a different (incorrect) function via binector outputs BO: r3861.n if the Braking Module develops a fault.

<b>p3862 Braking Module DC link fast discharge delay time / BM DC-dischg t_del</b>			
B_INF (Brk Mod ext)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9951
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	500 [ms]	4294967295 [ms]	1000 [ms]

**Description:** Sets the delay time for switching in the DC link fast discharge.

**Dependency:** Refer to: p3863, r3864

**Note:** The DC link fast discharge is only possible for "booksize" formats. This function is not supported for "chassis" formats.

---

<b>p3863</b>	<b>BI: Activating Braking Module DC link fast discharge / BM DC-dischg act</b>		
B_INF (Brk Mod ext)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9951
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to activate the DC link fast discharge. The DC link fast discharge is started later with delay time (p3862) when the following conditions apply: - BI: p3863 = 1 signal. - an external line contactor is opened via r0863.1 "energize contactor". The DC link fast discharge is interrupted when the following conditions apply: - BI: p3863 = 0 signal. - ON command for the infeed.		
<b>Recommendation:</b>	The DC link fast discharge should be activated if there is an external line contactor and is correctly interconnected (r0863.1, p0860). If the DC link fast discharge is not activated together with an external line contactor, then faults can occur when precharging (e.g. F30027).		
<b>Dependency:</b>	Refer to: r3864 Refer to: F30027		
<b>Note:</b>	The DC link fast discharge is only possible for "booksize" formats. This function is not supported for "chassis" formats.		

---

<b>r3864.0...7</b>	<b>BO: Braking Module DC link fast discharge / BM DC link dischg</b>				
B_INF (Brk Mod ext)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9951		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Signal to control (energize) terminal X21.2 "DC link fast discharge" on the Braking Module. This binector output is used as signal source to interconnect to a digital output. The digital output must be connected to terminal X21.2 of the particular Braking Module.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Fast discharge Braking Module 1	High	Low	-
	01	Fast discharge Braking Module 2	High	Low	-
	02	Fast discharge Braking Module 3	High	Low	-
	03	Fast discharge Braking Module 4	High	Low	-
	04	Fast discharge Braking Module 5	High	Low	-
	05	Fast discharge Braking Module 6	High	Low	-
	06	Fast discharge Braking Module 7	High	Low	-
	07	Fast discharge Braking Module 8	High	Low	-
<b>Dependency:</b>	Refer to: p3863 Refer to: F30027				
<b>Warning:</b>	It must be carefully ensured that the binector outputs BO: p3864.n are correctly interconnected and also that the appropriate digital outputs are correctly connected up. If the interconnection/connection is incorrect, in the case of an active DC link fast discharge, the software could execute another function (incorrect function) via binector outputs BO: p3864.n or could also permanently control the DC link fast discharge even if the line contactor is closed.				
					
<b>Note:</b>	The DC link fast discharge is only possible for "booksize" formats. This function is not supported for "chassis" formats.				

---

<b>p3865[0...7]</b>	<b>BI: Braking Module pre-alarm l*t shutdown / BM l*t shutdown</b>		
B_INF (Brk Mod ext)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9951
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the message "pre-alarm l*t shutdown" of the Braking Module. BI: p3865[0...7] = 1 signal --> no pre-alarm, l*t shutdown BI: p3865[0...7] = 0 signal --> pre-alarm l*t shutdown (A06901)		
<b>Dependency:</b>	Refer to: A06901		
<b>Note:</b>	For the Braking Module, this message is output via the following terminal: - X21.4 for the "Booksize" format This function is not supported for the "chassis" format.		

---

<b>p3866[0...7]</b>	<b>BI: Braking Module fault / BM fault</b>		
B_INF (Brk Mod ext)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9951
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the "Fault" message of the Braking Module. BI: p3866[0...7] = 1 signal --> No fault BI: p3866[0...7] = 0 signal --> fault (A06900) For a 0 signal, an acknowledgment via BO: r3861 is automatically carried out at certain time intervals.		
<b>Dependency:</b>	Refer to: A06900		
<b>Note:</b>	For the Braking Module, this message is output via the following terminal: - X21.4 for the "Booksize" format - X21.5 for the "Chassis" format		

---

<b>p3880</b>	<b>BI: ESM activation signal source / ESM act s s</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7033
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to activate the essential service mode (ESM) via digital input. Using this function, when required the motor can be operated for as long as possible (e.g. to extract smoke). BI: p3880 = 1 signal: The essential service mode is activated. BI: p3880 = 0 signal: The essential service mode is deactivated.		
<b>Dependency:</b>	The function can only be activated for SINAMICS G130/G150/S150. Refer to: p3881, p3882, p3883, p3886, r3887, p3888, r3889		
<b>Warning:</b>	When activating the essential service mode (BI: p3880 = 1 signal), the motor immediately runs according to the selected setpoint source. When the essential service mode is activated, the motor cannot be stopped using the OFF commands.		
			
<b>Note:</b>	ESM: Essential Service Mode Permissible signal sources: - BO: r0722.x (high active) - BO: r0723.x (low active), x = 0 ... 17, 20, 21		

<b>p3881</b>		<b>ESM setpoint source / ESM setp_src</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7033	
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	7	0	
<b>Description:</b>	Sets the setpoint source for essential service mode (ESM).			
<b>Value:</b>	0: Last known setpoint (r1078 smoothed) 1: Fixed speed setpoint 15 (p1015) 3: Fieldbus 5: TB30/TM31 analog input 6: Enable the response OFF1 7: Enable the response OFF2			
<b>Note:</b>	ESM: Essential Service Mode When the essential service mode is activated, the effective speed setpoint is displayed in r1114. For p3881 = 0: The last known setpoint value is only transmitted safely if it was present consistently for at least 30 s prior to activating the essential service mode. If this condition is not met, fixed speed setpoint 15 (p1015) is used. Speed setpoints from the jog mode (p1058, p1059) are not taken into account. For p3881 = 5: The signal source for the setpoint via analog input for TB30/TM31 is set via p3886. For p3881 = 6: n_act = 0: pulse suppression and switching-on inhibited. n_active > 0: braking along the ramp-function generator down ramp (p1121), pulse cancellation and switching-on inhibited. For p3881 = 7: n_act = 0: pulse suppression and switching-on inhibited. n_act > 0: immediate pulse cancellation and switching-on inhibited.			
<b>p3882</b>		<b>ESM setpoint source alternative / ESM setp_src alt</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7033	
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	2	0	
<b>Description:</b>	Sets the alternative setpoint source for essential service mode (ESM). This setpoint is used when the setpoint source set in p3881 is lost.			
<b>Value:</b>	0: Last known setpoint (r1078 smoothed) 1: Fixed speed setpoint 15 (p1015) 2: Maximum speed (p1082)			
<b>Dependency:</b>	Refer to: p3881			
<b>Note:</b>	ESM: Essential Service Mode The alternative setpoint source is only active for p3881 = 3, 5.			

## 2 Parameters

### 2.2 List of parameters

<b>p3883</b>	<b>BI: ESM direction of rotation signal source / ESM rot dir s s</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7033
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the direction of rotation during essential service mode (ESM). p3883 = 1 signal: Direction of rotation of the setpoint, parameterized for essential service mode, is reversed. p3883 = 0 signal: Direction of rotation of the setpoint parameterized for essential service mode is kept.		
<b>Note:</b>	ESM: Essential Service Mode		
<b>p3886</b>	<b>CI: ESM setpoint TB30/TM31 analog input / ESM setp TB30TM31</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7033
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the setpoint for p3881 = 5 (TB30/TM31 analog input) in the essential service mode (ESM).		
<b>Dependency:</b>	Refer to: p3881		
<b>Note:</b>	ESM: Essential Service Mode		
<b>r3887[0...1]</b>	<b>ESM number of activations/faults / ESM act/fault qty</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7033
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of activations and faults that have occurred for the essential service mode (ESM).		
<b>Index:</b>	[0] = Activation of the essential service mode [1] = Faults during the essential service mode		
<b>Dependency:</b>	Refer to: p3888		
<b>Note:</b>	ESM: Essential Service Mode		
<b>p3888</b>	<b>ESM reset number of activations/faults / ESM act/F qty r</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7033
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Setting to reset the number of activations and faults that have occurred for the essential service mode (ESM). 1: counter reset active (r3887[0, 1]) 0: inactive		
<b>Dependency:</b>	Refer to: r3887		
<b>Note:</b>	ESM: Essential Service Mode The parameter is automatically reset to zero after the counter has been reset.		

<b>r3889.0...10</b>	<b>CO/BO: ESM status word / ESM ZSW</b>				
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 7033		
	<b>P-Group:</b> Functions	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the status word of the essential service mode (ESM).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Essential service mode (ESM) activated	Yes	No	-
	01	Direction of rotation inverted	Yes	No	-
	02	Setpoint signal lost	Yes	No	-
	07	Setpoint TB30/TM31 analog input parameterized (p3886)	Yes	No	-
	08	Power unit not permissible (permissible p0201 >= 14000)	Yes	No	-
	09	Response OFF1/OFF2 activated	Yes	No	-
	10	Automatic restart interrupted (F07320)	Yes	No	-
<b>Note:</b>	ESM: Essential Service Mode				

<b>p3900</b>	<b>Completion of quick commissioning / Compl quick_comm</b>			
VECTOR_G	<b>Can be changed:</b> C2(1)	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	3	0	
<b>Description:</b>	<p>Exits quick commissioning (p0010 = 1) with automatic calculation of all parameters of all existing drive data sets that depend on the entries made during quick commissioning.</p> <p>p3900 = 1 initially includes a parameter reset (factory setting, the same as p0970 = 1) for all parameters of the drive object; however, without overwriting the entries made during the quick commissioning.</p> <p>The interconnections of PROFIBUS PZD telegram selection (p0922) and the interconnections via p0700, p1000 and p1500 are re-established and all of the dependent motor, open-loop and control-loop control parameters are calculated (corresponding to p0340 = 1).</p> <p>p3900 = 2 includes the restoration of the interconnections of PROFIBUS PZD telegram selection (p0922) and the interconnections via p0700, p1000 and p1500 and the calculations corresponding to p0340 = 1.</p> <p>p3900 = 3 only includes the calculations associated with the motor, open-loop and closed-loop control parameters corresponding to p0340 = 1.</p>			
<b>Value:</b>	<p>0: No quick parameterization</p> <p>1: Quick parameterization after parameter reset</p> <p>2: Quick parameterization (only) for BICO and motor parameters</p> <p>3: Quick parameterization for motor parameters (only)</p>			
<b>Notice:</b>	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.			
<b>Note:</b>	<p>When the calculations have been completed, p3900 and p0010 are automatically reset to a value of zero.</p> <p>When calculating motor, open-loop and closed-loop control parameters (such as for p0340 = 1) parameters associated with a selected Siemens catalog motor are not overwritten.</p> <p>If a catalog motor has not been selected (p0300), then the following parameters are reset with p3900 &gt; 0 in order to restore the situation that applied when commissioning the drive for the first time:</p> <p>induction motors p0320, p0352, p0353, p0362 ... p0369, p0391 ... p0393, p0604, p0605, p0626 ... p0628</p> <p>synchronous motor p0326, p0327, p0352, p0353, p0391 ... p0393, p0604, p0605.</p>			

<b>p3900</b>	<b>Completion of quick commissioning / Compl quick_comm</b>		
B_INF	<b>Can be changed:</b> C2(1)	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0
<b>Description:</b>	Exits the quick commissioning (p0010 = 1) with automatic calculation of all of the parameters that depend on the entries made during the quick commissioning. p3900 = 1 initially includes a parameter reset (factory setting, the same as p0970 = 1) for all parameters of the drive object; however, without overwriting the entries made during the quick commissioning. The interconnections of PROFIBUS PZD telegram selection (p0922) and the interconnections via p0700 are re-established and all of the dependent filter and closed-loop control parameters are calculated (corresponding to p0340 = 1). p3900 = 2 includes the restoration of the interconnections of PROFIBUS PZD telegram selection (p0922) and the interconnections via p0700 and the calculations corresponding to p0340 = 1. p3900 = 3 only includes the end of quick commissioning.		
<b>Value:</b>	0: No quick parameterization 1: Quick parameterization after parameter reset 2: Quick param. (only) for controller par. and reset for BICO par 3: Completion of quick commissioning		
<b>Notice:</b>	After the value has been modified, no further parameter modifications can be made and the status is shown in r3996. Modifications can be made again when r3996 = 0.		
<b>Note:</b>	When the calculations have been completed, p3900 and p0010 are automatically reset to a value of zero.		

<b>p3901[0...n]</b>	<b>Power unit EEPROM Vdc offset calibration / PU EEPROM Vdc offs</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> C1, C2(1), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-40.0 [V]	40.0 [V]	0.0 [V]
<b>Description:</b>	Differential voltage for calibrating the offset for DC link voltage measurement.		
<b>Dependency:</b>	Refer to: r0192, p0212		
<b>Caution:</b>	Incorrect use of the calibration can have a negative impact on the closed-loop control. The parameter influences the upper and lower voltage detection.		
			
<b>Note:</b>	Parameter entries are directly saved in the DRIVE-CLiQ component involved. The parameter is only effective in the case of booksize power units, if r0192.22 = 1 and p0212.0 = 1.		

<b>r3925[0...n]</b>	<b>Identification final display / Ident final_disp</b>				
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the commissioning steps that have been carried out.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Motor/control parameters calculated (p0340 = 1, p3900 > 0)	Yes	No	-
	02	Motor data identification carried out at standstill (p1910 = 1)	Yes	No	-
	03	Rotating measurement carried out (p1960 = 1, 2)	Yes	No	-
	04	Motor encoder adjustment carried out (p1960 = 1, p1990 = 1, 3)	Yes	No	-

08	Identified motor data are automatically backed up	Yes	No	-
10	Automatic parameterization only for U/f control (r0108.2 = 0)	Yes	No	-
15	Motor equivalent circuit diagram parameters changed	Yes	No	-
18	Circle identification executed	Yes	No	-

**Note:** The individual bits are only set if the appropriate action has been initiated and successfully completed. When motor rating plate parameters are changed, the final display is reset.

**r3927[0...n]****Motor data identification control word / MotID STW**

VECTOR\_G

**Can be changed:** -**Calculated:** CALC\_MOD\_ALL**Access level:** 3**Data type:** Unsigned32**Dyn. index:** DDS, p0180**Func. diagram:** -**P-Group:** Motor identification**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Successfully completed component of the last motor data identification carried out.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Stator inductance estimate no measurement	Yes	No	-
01	Cl.-loop current control w/ dead-beat controller	Yes	No	-
02	Rotor time constant estimate no measurement	Yes	No	-
03	Leakage inductance estimate no measurement	Yes	No	-
04	Activates the identification dynamic leakage inductance	Yes	No	-
05	Determine Tr and Lsig evaluation in the time range	Yes	No	-
06	Activate vibration damping	Yes	No	-
07	Deactivate vibration detection	Yes	No	-
11	Deactivate pulse measurement Lq Ld	Yes	No	-
12	Deactivate rotor resistance Rr measurement	Yes	No	-
14	Deactivate valve interlocking time measurement	Yes	No	-
15	Determine only stator resistance, valve voltage fault, dead time	Yes	No	-
16	Short motor identification (lower quality)	Yes	No	-
17	Measurement without control parameter calculation	Yes	No	-
18	After motID direct transition into operation	Yes	No	-
19	After MotID automatically save results	Yes	No	-
20	Estimate cable resistance	Yes	No	-
21	Calibrating the output voltage measurement	Yes	No	-
22	Only identify circle	Yes	No	-
23	Deactivate circle identification	Yes	No	-
24	Circle identification with 0 and 90 degrees	Yes	No	-
25	Deactivate gating unit switchover	Yes	No	-

**Dependency:**

Refer to: r3925

**Note:**

The parameter is a copy of p1909.

## 2 Parameters

### 2.2 List of parameters

<b>r3928[0...n]</b>	<b>Rotating measurement configuration / Rot meas config</b>				
VECTOR_G (n/M)	<b>Can be changed:</b> -	<b>Calculated:</b> CALC_MOD_ALL	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Motor identification	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> REL	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Successfully completed component of the last rotating measurement carried out.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Enc test active	Yes	No	-
	01	Saturation characteristic identification	Yes	No	-
	02	Moment of inertia identification	Yes	No	-
	03	Re-calculates the speed controller parameters	Yes	No	-
	04	Speed controller optimization (vibration test)	Yes	No	-
	05	q leakage inductance ident. (for current controller adaptation)	Yes	No	-
	11	Do not change the controller parameters during the measurement	Yes	No	-
	12	Measurement shortened	Yes	No	-
	13	After measurement direct transition into operation	Yes	No	-
	14	Calculate speed actual value smoothing time	Yes	No	-
<b>Dependency:</b>	Refer to: r3925				
<b>Note:</b>	The parameter is a copy of p1959.				
<b>p3940[0...n]</b>	<b>Motor/controller data calculation / Mot/ctrl_data calc</b>				
VECTOR_G	<b>Can be changed:</b> C2, T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -		
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	0	3	0		
<b>Description:</b>	Selecting the calculation of the motor/controller data for the offline parameterization Startdrive				
<b>Value:</b>	0: No calculation 1: Complete calculation 3: Calculation without equivalent circuit diagram data				
<b>Dependency:</b>	The parameter is preassigned when changing the motor. Refer to: p0340				
<b>p3950</b>	<b>Service parameter / Serv par</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1, U, T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	For service personnel only.				

---

<b>r3974</b>	<b>Drive unit status word / Drv_unit ZSW</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the status word for the drive unit.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Software reset active	Yes	No	-
	01	Writing of parameters disabled as parameter save in progress	Yes	No	-
	02	Writing of parameters disabled as macro is running	Yes	No	-

---

<b>r3977</b>	<b>BICO counter topology / BICO counter topo</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the BICO interconnections that have been parameterized in the complete (overall) topology. The counter is incremented by one for each modified BICO interconnection.

**Dependency:** Refer to: r3978, r3979

---

<b>r3978</b>	<b>BICO CounterDevice / BICO CounterDevice</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the counter reading for modified BICO interconnections on this device. The counter is incremented by one for each modified BICO interconnection.

---

<b>r3979</b>	<b>BICO counter drive object / BICO counter DO</b>		
VECTOR_G, B_INF, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the counter reading for modified BICO interconnections on this drive object. The counter is incremented by one for each modified BICO interconnection.

---

<b>p3981</b>	<b>Acknowledge drive object faults / Ackn DO faults</b>		
All objects	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8060
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Setting to acknowledge all active faults of a drive object.		
<b>Notice:</b>	Safety messages cannot be acknowledged using this parameter.		
<b>Note:</b>	Parameter should be set from 0 to 1 to acknowledge. After acknowledgment, the parameter is automatically reset to 0.		

---

<b>p3985</b>	<b>Master control mode selection / PcCtrl mode select</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Setpoints	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the mode to change over the master control / LOCAL mode.		
<b>Value:</b>	0: Change master control for STW1.0 = 0 1: Change master control in operation		
<b>Danger:</b>	When changing the master control in operation, the drive can manifest undesirable behavior - e.g. it can accelerate up to another setpoint.		
			

---

<b>r3986</b>	<b>Number of parameters / Param count</b>		
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of parameters for this drive unit. The number comprises the device-specific and the drive-specific parameters.		
<b>Dependency:</b>	Refer to: r0980, r0981, r0989		

---

<b>r3988[0...1]</b>	<b>Boot state / Boot_state</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	10800	-
<b>Description:</b>	Index 0: Displays the boot state. Index 1: Displays the partial boot state		
<b>Value:</b>	0: Not active 1: Fatal fault 10: Fault 20: Reset all parameters 30: Drive object modified 40: Download using commissioning software		

50: Parameter download using commissioning software  
 90: Reset Control Unit and delete drive objects  
 100: Start initialization  
 101: Wait for topology input  
 110: Instantiate Control Unit basis  
 111: Insert drive object  
 112: Remove drive object  
 113: Change drive object number  
 114: Change component number  
 115: Parameter download using commissioning software  
 117: Remove component  
 150: Wait until actual topology determined  
 160: Evaluate topology  
 170: Instantiate Control Unit reset  
 180: Initialization YDB configuration information  
 200: First commissioning  
 210: Create drive packages  
 250: Wait for topology acknowledge  
 325: Wait for input of drive type  
 350: Determine drive type  
 360: Write into topology-dependent parameters  
 370: Wait until p0009 = 0 is set  
 380: Check topology  
 550: Call conversion functions for parameter  
 625: Wait non-cyclic starting DRIVE-CLiQ  
 650: Start cyclic operation  
 660: Evaluate drive commissioning status  
 670: Autom. FW update DRIVE-CLiQ components  
 680: Wait for CU LINK slaves  
 690: Wait non-cyclic starting DRIVE-CLiQ  
 700: Save parameters  
 725: Wait until DRIVE-CLiQ cyclic  
 740: Check the ability to operate  
 745: Start of the time slices  
 750: Interrupt enable  
 800: Initialization finished  
 10050: Wait for synchronization  
 10100: Wait for CU LINK slaves  
 10150: Wait until actual topology determined  
 10200: Evaluate component status  
 10250: Call conversion functions for parameter  
 10300: Preparation cyclic operation  
 10350: Autom. FW update DRIVE-CLiQ components  
 10400: Wait for slave properties  
 10450: Check CX/NX status  
 10500: Wait until DRIVE-CLiQ cyclic  
 10550: Carry out warm start  
 10600: Evaluate, encoder status  
 10800: Partial boot completed

**Index:**  
 [0] = System  
 [1] = Partial boot

---

### r3996[0...1] Parameter write inhibit status / Par\_write inhib st

All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays whether writing to parameters is inhibited.  
 r3996[0] = 0:  
 Parameter write not inhibited.

## 2 Parameters

### 2.2 List of parameters

0 < r3996[0] < 100:

Parameter write inhibited. The value shows how the calculations are progressing.

**Index:** [0] = Progress calculations  
[1] = Cause

**Note:** For index 1:  
Only for internal Siemens troubleshooting.

r3998[0...n]	First drive commissioning / First drv_comm		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	-
<b>Description:</b>	Displays whether the drive still has to be commissioned for the first time. 0 = Yes 2 = No		

r3998	First infeed commissioning / First inf_comm		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	-
<b>Description:</b>	Displays whether the infeed must be commissioned for the first time. 0 = Yes 2 = No		

r4021	TM31 digital inputs terminal actual value / TM31 DI act value				
TM31	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9549, 9550, 9552, 9560, 9562		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the actual value at the digital inputs. This means that the actual input signal can be checked at terminal DI x or DI/DO x prior to switching from the simulation mode (p4095.x = 1) to terminal mode (p4095.x = 0).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 0 (X520.1)	High	Low	-
	01	DI 1 (X520.2)	High	Low	-
	02	DI 2 (X520.3)	High	Low	-
	03	DI 3 (X520.4)	High	Low	-
	04	DI 4 (X530.1)	High	Low	-
	05	DI 5 (X530.2)	High	Low	-
	06	DI 6 (X530.3)	High	Low	-
	07	DI 7 (X530.4)	High	Low	-
	08	DI/DO 8 (X541.2)	High	Low	-
	09	DI/DO 9 (X541.3)	High	Low	-
	10	DI/DO 10 (X541.4)	High	Low	-
	11	DI/DO 11 (X541.5)	High	Low	-
<b>Note:</b>	If a DI/DO is parameterized as output (p4028.x = 1), then r4021.x = 0 is displayed. DI: Digital Input DI/DO: Bidirectional Digital Input/Output				

<b>r4021</b>		<b>TB30 digital inputs terminal actual value / TB30 DI act value</b>			
TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9100		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the actual value at the digital inputs. This means that the actual input signal can be checked at terminal DI x prior to switching from the simulation mode (p4095.x = 1) to the terminal mode (p4095.x = 0).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 0 (X481.1)	High	Low	-
	01	DI 1 (X481.2)	High	Low	-
	02	DI 2 (X481.3)	High	Low	-
	03	DI 3 (X481.4)	High	Low	-
<b>Note:</b>	DI: Digital Input				

<b>r4022.0...11</b>		<b>CO/BO: TM31 digital inputs status / TM31 DI status</b>			
TM31	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9549, 9550, 9552, 9560, 9562		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status of the digital inputs of Terminal Module 31 (TM31).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 0 (X520.1)	High	Low	-
	01	DI 1 (X520.2)	High	Low	-
	02	DI 2 (X520.3)	High	Low	-
	03	DI 3 (X520.4)	High	Low	-
	04	DI 4 (X530.1)	High	Low	-
	05	DI 5 (X530.2)	High	Low	-
	06	DI 6 (X530.3)	High	Low	-
	07	DI 7 (X530.4)	High	Low	-
	08	DI/DO 8 (X541.2)	High	Low	-
	09	DI/DO 9 (X541.3)	High	Low	-
	10	DI/DO 10 (X541.4)	High	Low	-
	11	DI/DO 11 (X541.5)	High	Low	-
<b>Dependency:</b>	Refer to: r4023				
<b>Note:</b>	DI: Digital Input DI/DO: Bidirectional Digital Input/Output				

<b>r4022.0...3</b>	<b>CO/BO: TB30 digital inputs status / TB30 DI status</b>				
TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9099, 9100		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status of the digital inputs of the Terminal Board 30 (TB30).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 0 (X481.1)	High	Low	-
	01	DI 1 (X481.2)	High	Low	-
	02	DI 2 (X481.3)	High	Low	-
	03	DI 3 (X481.4)	High	Low	-
<b>Dependency:</b>	Refer to: r4023				
<b>Note:</b>	DI: Digital Input				

<b>r4023.0...11</b>	<b>CO/BO: TM31 digital inputs status inverted / TM31 DI status inv</b>				
TM31	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9549, 9550, 9552, 9560, 9562		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the inverted status of the digital inputs of Terminal Module 31 (TM31).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 0 (X520.1)	High	Low	-
	01	DI 1 (X520.2)	High	Low	-
	02	DI 2 (X520.3)	High	Low	-
	03	DI 3 (X520.4)	High	Low	-
	04	DI 4 (X530.1)	High	Low	-
	05	DI 5 (X530.2)	High	Low	-
	06	DI 6 (X530.3)	High	Low	-
	07	DI 7 (X530.4)	High	Low	-
	08	DI/DO 8 (X541.2)	High	Low	-
	09	DI/DO 9 (X541.3)	High	Low	-
	10	DI/DO 10 (X541.4)	High	Low	-
	11	DI/DO 11 (X541.5)	High	Low	-
<b>Dependency:</b>	Refer to: r4022				
<b>Note:</b>	DI: Digital Input DI/DO: Bidirectional Digital Input/Output				

<b>r4023.0...3</b>	<b>BO: TB30 digital inputs status inverted / TB30 DI status inv</b>				
TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9099, 9100		
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the inverted status of the digital inputs of the Terminal Board 30 (TB30).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 0 (X481.1)	High	Low	-
	01	DI 1 (X481.2)	High	Low	-
	02	DI 2 (X481.3)	High	Low	-
	03	DI 3 (X481.4)	High	Low	-

**Dependency:** Refer to: r4022

**Note:** DI: Digital Input

---

<b>p4028</b>	<b>TM31 set input or output / TM31 DI or DO</b>		
TM31	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9549, 9560, 9562
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 0000 0000 bin

**Description:** Sets the bidirectional digital inputs/outputs as input or output on the Terminal Module 31 (TM31).

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	08	DI/DO 8 (X541.2)	Output	Input	-
	09	DI/DO 9 (X541.3)	Output	Input	-
	10	DI/DO 10 (X541.4)	Output	Input	-
	11	DI/DO 11 (X541.5)	Output	Input	-

**Note:** DI/DO: Bidirectional Digital Input/Output

---

<b>p4030</b>	<b>BI: TM31 signal source for terminal DO 0 / TM31 s_src DO 0</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9549, 9556
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for the digital output DO 0 (X542.1, X542.2, X542.3) of Terminal Module 31 (TM31). Digital output 0 of TM31 is a relay output.

If the signal at the binector input p4030 is low, then terminal COM 0 (X542.2) is connected to NC 0 (X542.1). This connection also matches the mechanical quiescent setting of the relay.

If the signal at the binector input p4030 is high, then terminal COM 0 (X542.2) is connected to NO 0 (X542.3).

**Note:** DO: Digital Output

NC: Normally Closed contact

NO: Normally Open contact

---

<b>p4030</b>	<b>BI: TB30 signal source for terminal DO 0 / TB30 s_src DO 0</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9099, 9102
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for digital output DO 0 (X481.5) of the Terminal Board 30 (TB30).

**Note:** DO: Digital Output

## 2 Parameters

### 2.2 List of parameters

<b>p4031</b>	<b>BI: TM31 signal source for terminal DO 1 / TM31 s_src DO 1</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9549, 9556
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the digital output DO 1 (X542.4, X542.5, X542.6) of Terminal Module 31 (TM31). Digital output 1 of TM31 is a relay output. If the signal at the binector input p4031 is low, then terminal COM 1 (X542.5) is connected to NC 1 (X542.4). This connection also matches the mechanical quiescent setting of the relay. If the signal at the binector input p4031 is high, then terminal COM 1 (X542.5) is connected to NO 1 (X542.6).		
<b>Note:</b>	DO: Digital Output NC: Normally Closed contact NO: Normally Open contact		
<b>p4031</b>	<b>BI: TB30 signal source for terminal DO 1 / TB30 s_src DO 1</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9102
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for terminal DO 1 (X481.6) of the Terminal Board 30 (TB30).		
<b>Note:</b>	DO: Digital Output		
<b>p4032</b>	<b>BI: TB30 signal source for terminal DO 2 / TB30 s_src DO 2</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9102
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for terminal DO 2 (X481.7) of the Terminal Board 30 (TB30).		
<b>Note:</b>	DO: Digital Output		
<b>p4033</b>	<b>BI: TB30 signal source for terminal DO 3 / TB30 s_src DO 3</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9099, 9102
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for terminal DO 3 (X481.8) of the Terminal Board 30 (TB30).		
<b>Note:</b>	DO: Digital Output		

---

<b>p4038</b>	<b>BI: TM31 signal source for terminal DI/DO 8 / TM31 s_s DI/DO8</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9549, 9560
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for terminal DI/DO 8 (X541.2) of Terminal Module 31 (TM31).		
<b>Note:</b>	Prerequisite: The DI/DO must be set as an output (p4028.8 = 1). DI/DO: Bidirectional Digital Input/Output		

---

<b>p4039</b>	<b>BI: TM31 signal source for terminal DI/DO 9 / TM31 S_src DI/DO9</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9560
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for terminal DI/DO 9 (X541.3) of Terminal Module 31 (TM31).		
<b>Note:</b>	Prerequisite: The DI/DO must be set as an output (p4028.9 = 1). DI/DO: Bidirectional Digital Input/Output		

---

<b>p4040</b>	<b>BI: TM31 signal source for terminal DI/DO 10 / TM31 S_src DI/DO10</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9562
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for terminal DI/DO 10 (X541.4) of Terminal Module 31 (TM31).		
<b>Note:</b>	Prerequisite: The DI/DO must be set as an output (p4028.10 = 1). DI/DO: Bidirectional Digital Input/Output		

---

<b>p4041</b>	<b>BI: TM31 signal source for terminal DI/DO 11 / TM31 s_s DI/DO 11</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9549, 9562
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for terminal DI/DO 11 (X541.5) of Terminal Module 31 (TM31).		
<b>Note:</b>	Prerequisite: The DI/DO must be set as an output (p4028.11 = 1). DI/DO: Bidirectional Digital Input/Output		

**p4046**      **TM31 digital outputs limit current / TM31 DO limit curr**

TM31      **Can be changed:** T      **Calculated:** -      **Access level:** 2  
**Data type:** Integer16      **Dyn. index:** -      **Func. diagram:** 9560  
**P-Group:** Commands      **Unit group:** -      **Unit selection:** -  
**Not for motor type:** -      **Scaling:** -      **Expert list:** 1  
**Min**      **Max**      **Factory setting**  
0      1      0

**Description:** Sets the limit for the total output voltage of terminals X541.1, X541.2, X541.3 and X541.4 (DI/DO 8 ... 11) of Terminal Module 31 (TM31).

**Value:** 0: 0.1 A total current limit DI/DO 8 ... 11  
1: 1.0 A total current limit DI/DO 8 ... 11

**Dependency:** Refer to: p4028

**Warning:** Since the sum of the output currents at terminals X541.1, X541.2, X541.3 and X541.4 is limited, an overcurrent or short circuit at one output terminal can cause a dip in the signal at the other terminals.



**r4047**      **TM31 digital outputs status / TM31 DO status**

TM31      **Can be changed:** -      **Calculated:** -      **Access level:** 1  
**Data type:** Unsigned32      **Dyn. index:** -      **Func. diagram:** 9556, 9560, 9562  
**P-Group:** Commands      **Unit group:** -      **Unit selection:** -  
**Not for motor type:** -      **Scaling:** -      **Expert list:** 1  
**Min**      **Max**      **Factory setting**  
-      -      -

**Description:** Displays the status of the digital outputs of Terminal Module 31 (TM31).

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	DO 0 (X542.1 - 3)	High	Low	-
01	DO 1 (X542.4 - 6)	High	Low	-
08	DI/DO 8 (X541.2)	High	Low	-
09	DI/DO 9 (X541.3)	High	Low	-
10	DI/DO 10 (X541.4)	High	Low	-
11	DI/DO 11 (X541.5)	High	Low	-

**Note:** Inversion using p4048 has been taken into account.  
The setting of the DI/DO as either input or output is of no significance (p4028).  
DO: Digital Output  
DI/DO: Bidirectional Digital Input/Output

**r4047**      **TB30 digital outputs status / TB30 DO status**

TB30      **Can be changed:** -      **Calculated:** -      **Access level:** 1  
**Data type:** Unsigned32      **Dyn. index:** -      **Func. diagram:** 9102  
**P-Group:** Commands      **Unit group:** -      **Unit selection:** -  
**Not for motor type:** -      **Scaling:** -      **Expert list:** 1  
**Min**      **Max**      **Factory setting**  
-      -      -

**Description:** Displays the status of the digital outputs of the Terminal Board 30 (TB30).

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	DO 0 (X481.5)	High	Low	-
01	DO 1 (X481.6)	High	Low	-
02	DO 2 (X481.7)	High	Low	-
03	DO 3 (X481.8)	High	Low	-

**Note:** Inversion using p4048 has been taken into account.  
DO: Digital Output

<b>p4048</b>		<b>TM31 invert digital outputs / TM31 DO inv</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9556, 9560, 9562	
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 0000 0000 0000 bin	
<b>Description:</b>	Setting to invert the signals at the digital outputs of Terminal Module 31 (TM31).			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	DO 0 (X542.1 - 3)	Inverted	Not inverted
	01	DO 1 (X542.4 - 6)	Inverted	Not inverted
	08	DI/DO 8 (X541.2)	Inverted	Not inverted
	09	DI/DO 9 (X541.3)	Inverted	Not inverted
	10	DI/DO 10 (X541.4)	Inverted	Not inverted
	11	DI/DO 11 (X541.5)	Inverted	Not inverted
<b>Note:</b>	DO: Digital Output DI/DO: Bidirectional Digital Input/Output			

<b>p4048</b>		<b>TB30 invert digital outputs / TB30 DO inv</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9102	
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 bin	
<b>Description:</b>	Setting to invert the signals at the digital outputs of the Terminal Board 30 (TB30).			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	DO 0 (X481.5)	Inverted	Not inverted
	01	DO 1 (X481.6)	Inverted	Not inverted
	02	DO 2 (X481.7)	Inverted	Not inverted
	03	DO 3 (X481.8)	Inverted	Not inverted
<b>Note:</b>	DO: Digital Output			

<b>r4052[0...1]</b>		<b>CO: TM31 analog inputs current input voltage/current / TM31 AI U/I_inp</b>		
TM31	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9566, 9568	
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the actual input voltage in V when set as voltage input. Displays the actual input current in mA when set as current input and with the load resistor switched in.			
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)			
<b>Dependency:</b>	The type of analog input AI x (voltage or current input) is set using p4056. Refer to: r4056, p4056			
<b>Note:</b>	AI: Analog Input			

<b>r4052[0...1]</b>	<b>CO: TB30 analog inputs actual input voltage / TB30 AI U_inp act</b>		
TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9104
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the actual input voltage at the analog inputs for Terminal Board 30 (TB30). Note: For p4056[x] = 3 (unipolar current input monitored (+4 mA ... +20 mA)) the following applies: A current less than 4 mA is not displayed in r4052[x] - but instead r4052[x] = 4 mA is output.		
<b>Index:</b>	[0] = AI 0 (X482.1/X482.2) [1] = AI 1 (X482.3/X482.4)		
<b>Note:</b>	AI: Analog Input		
<b>p4053[0...1]</b>	<b>TM31 analog inputs smoothing time constant / TM31 AI T_smooth</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9566, 9568
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [ms]	1000.0 [ms]	0.0 [ms]
<b>Description:</b>	Sets the smoothing time constant of the 1st order lowpass filter for the analog inputs of Terminal Module 31 (TM31).		
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)		
<b>Note:</b>	AI: Analog Input		
<b>p4053[0...1]</b>	<b>TB30 analog inputs smoothing time constant / TB30 AI T_smooth</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9104
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [ms]	1000.0 [ms]	0.0 [ms]
<b>Description:</b>	Sets the smoothing time constant of the 1st order lowpass filter for the analog inputs of the Terminal Board 30 (TB30).		
<b>Index:</b>	[0] = AI 0 (X482.1/X482.2) [1] = AI 1 (X482.3/X482.4)		
<b>Note:</b>	AI: Analog Input		
<b>r4055[0...1]</b>	<b>CO: TM31 analog inputs actual value in percent / TM31 AI value in %</b>		
TM31	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9549, 9566, 9568
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the currently referred input value of the analog inputs of Terminal Module 31 (TM31). When interconnected, the signals are referred to the reference quantities p200x and p205x.		
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)		
<b>Note:</b>	AI: Analog Input		

<b>r4055[0...1]</b>	<b>CO: TB30 analog inputs actual value in percent / TB30 AI value in %</b>		
TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9099, 9104
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the currently referred input value of the analog inputs of Terminal Board 30 (TB30). When interconnected, the signals are referred to the reference quantities p200x and p205x.		
<b>Index:</b>	[0] = AI 0 (X482.1/X482.2) [1] = AI 1 (X482.3/X482.4)		
<b>Note:</b>	AI: Analog Input		
<b>p4056[0...1]</b>	<b>TM31 analog inputs type / TM31 AI type</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9566, 9568
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	5	4
<b>Description:</b>	Sets the type of analog inputs of Terminal Module 31 (TM31). p4056[x] = 0, 4 correspond to a voltage input (r4052, p4057, p4059 are displayed in V). p4056[x] = 2, 3, 5 correspond to a current input (r4052, p4057, p4059 are displayed in mA). In addition, the associated switch S5 must be appropriately set. AI 0: S5.0 = V --> voltage input, S5.0 = I --> current input (burden resistor = 250 Ohm) AI 1: S5.1 = V --> voltage input, S5.1 = I --> current input (burden resistor = 250 Ohm)		
<b>Value:</b>	0: Unipolar voltage input (0 V ... +10 V) 2: Unipolar current input (0 mA ... +20 mA) 3: Unipolar current input monitored (+4 mA to +20 mA) 4: Bipolar voltage input (-10 V ... +10 V) 5: Bipolar current input (-20 mA to +20 mA)		
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)		
<b>Warning:</b>	The maximum voltage difference between the analog input terminals AI+, AI- and the ground of the TM31 (X520.6, X530.3) may not exceed 35 V.		
	For operation with the load resistor switched in, the voltage between the differential inputs AI+ and AI- may not exceed 15 V or the impressed current of 60 mA; if this is not carefully observed, the input will be damaged.		
<b>Notice:</b>	For operation as a voltage input/current input, switch S5.0 or S5.1 must be appropriately set.		
<b>Note:</b>	When changing p4056, the parameters of the scaling characteristic (p4057, p4058, p4059, p4060) are overwritten with the following default values: For p4056 = 0, 4, p4057 is set to 0.0 V, p4058 to 0.0 %, p4059 to 10.0 V and p4060 to 100.0 %. For p4056 = 2, 5, p4057 is set to 0.0 mA, p4058 to 0.0 %, p4059 to 20.0 mA and p4060 to 100.0 %. For p4056 = 3, p4057 is set to 4.0 mA, p4058 to 0.0 %, p4059 to 20.0 mA and p4060 to 100.0 %.		
<b>r4056[0...1]</b>	<b>TB30 analog inputs type / TB30 AI type</b>		
TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	4	4	-
<b>Description:</b>	Displays the type of analog inputs.		
<b>Value:</b>	4: Bipolar voltage input (-10 V ... +10 V)		

## 2 Parameters

### 2.2 List of parameters

**Index:** [0] = AI 0 (X482.1/X482.2)  
[1] = AI 1 (X482.3/X482.4)

---

#### p4057[0...1] TM31 analog inputs characteristic value x1 / TM31 AI char x1

TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9566, 9568
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-20.000	20.000	0.000

**Description:** Sets the scaling characteristic for the analog inputs of Terminal Module 31 (TM31).  
The scaling characteristic for the analog inputs is defined using 2 points.  
This parameter specifies the x coordinate (input voltage in V or input current in mA) of the 1st value pair of the characteristic.

**Index:** [0] = AI 0 (X521.1/X521.2, S5.0)  
[1] = AI 1 (X521.3/X521.4, S5.1)

**Dependency:** The unit of this parameter (V or mA) depends on the analog input type.  
Refer to: r4056, p4056

**Notice:** This parameter is automatically overwritten when the analog input type (p4056) is modified.

**Note:** The parameters for the characteristic do not have a limiting effect.

---

#### p4057[0...1] TB30 analog inputs characteristic value x1 / TB30 AI char x1

TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9104
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-11.000 [V]	11.000 [V]	0.000 [V]

**Description:** Sets the scaling characteristic for the analog inputs of Terminal Board 30 (TB30).  
The scaling characteristic for the analog inputs is defined using 2 points.  
This parameter specifies the x coordinate (input voltage in V) of the 1st value pair of the characteristic.

**Index:** [0] = AI 0 (X482.1/X482.2)  
[1] = AI 1 (X482.3/X482.4)

**Note:** The parameters for the characteristic do not have a limiting effect.

---

#### p4058[0...1] TM31 analog inputs characteristic value y1 / TM31 AI char y1

TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9566, 9568
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000.00 [%]	1000.00 [%]	0.00 [%]

**Description:** Sets the scaling characteristic for the analog inputs of Terminal Module 31 (TM31).  
The scaling characteristic for the analog inputs is defined using 2 points.  
This parameter specifies the y coordinate (percentage) of the 1st value pair of the characteristic.

**Index:** [0] = AI 0 (X521.1/X521.2, S5.0)  
[1] = AI 1 (X521.3/X521.4, S5.1)

**Notice:** This parameter is automatically overwritten when the analog input type (p4056) is modified.

**Note:** The parameters for the characteristic do not have a limiting effect.

<b>p4058[0...1]</b>	<b>TB30 analog inputs characteristic value y1 / TB30 AI char y1</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9104
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000.00 [%]	1000.00 [%]	0.00 [%]
<b>Description:</b>	Sets the scaling characteristic for the analog inputs of Terminal Board 30 (TB30). The scaling characteristic for the analog inputs is defined using 2 points. This parameter specifies the y coordinate (percentage) of the 1st value pair of the characteristic.		
<b>Index:</b>	[0] = AI 0 (X482.1/X482.2) [1] = AI 1 (X482.3/X482.4)		
<b>Note:</b>	The parameters for the characteristic do not have a limiting effect.		
<b>p4059[0...1]</b>	<b>TM31 analog inputs characteristic value x2 / TM31 AI char x2</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9566, 9568
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-20.000	20.000	10.000
<b>Description:</b>	Sets the scaling characteristic for the analog inputs of Terminal Module 31 (TM31). The scaling characteristic for the analog inputs is defined using 2 points. This parameter specifies the x coordinate (input voltage in V or input current in mA) of the 2nd value pair of the characteristic.		
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)		
<b>Dependency:</b>	The unit of this parameter (V or mA) depends on the analog input type. Refer to: r4056, p4056		
<b>Notice:</b>	This parameter is automatically overwritten when the analog input type (p4056) is modified.		
<b>Note:</b>	The parameters for the characteristic do not have a limiting effect.		
<b>p4059[0...1]</b>	<b>TB30 analog inputs characteristic value x2 / TB30 AI char x2</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9104
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-11.000 [V]	11.000 [V]	10.000 [V]
<b>Description:</b>	Sets the scaling characteristic for the analog inputs of Terminal Board 30 (TB30). The scaling characteristic for the analog inputs is defined using 2 points. This parameter specifies the x coordinate (input voltage in V) of the 2nd value pair of the characteristic.		
<b>Index:</b>	[0] = AI 0 (X482.1/X482.2) [1] = AI 1 (X482.3/X482.4)		
<b>Note:</b>	The parameters for the characteristic do not have a limiting effect.		

<b>p4060[0...1]</b>	<b>TM31 analog inputs characteristic value y2 / TM31 AI char y2</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9566, 9568
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000.00 [%]	1000.00 [%]	100.00 [%]
<b>Description:</b>	Sets the scaling characteristic for the analog inputs of Terminal Module 31 (TM31). The scaling characteristic for the analog inputs is defined using 2 points. This parameter specifies the y coordinate (percentage) of the 2nd value pair of the characteristic.		
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)		
<b>Notice:</b>	This parameter is automatically overwritten when the analog input type (p4056) is modified.		
<b>Note:</b>	The parameters for the characteristic do not have a limiting effect.		
<b>p4060[0...1]</b>	<b>TB30 analog inputs characteristic value y2 / TB30 AI char y2</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9104
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000.00 [%]	1000.00 [%]	100.00 [%]
<b>Description:</b>	Sets the scaling characteristic for the analog inputs of Terminal Board 30 (TB30). The scaling characteristic for the analog inputs is defined using 2 points. This parameter specifies the y coordinate (percentage) of the 2nd value pair of the characteristic.		
<b>Index:</b>	[0] = AI 0 (X482.1/X482.2) [1] = AI 1 (X482.3/X482.4)		
<b>Note:</b>	The parameters for the characteristic do not have a limiting effect.		
<b>p4061[0...1]</b>	<b>TM31 analog inputs wire breakage monitoring response threshold / TM31 WireBrkThresh</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9566, 9568
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [mA]	20.00 [mA]	2.00 [mA]
<b>Description:</b>	Sets the response threshold for wire-breakage monitoring of the analog inputs of Terminal Module 31 (TM31).		
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)		
<b>Dependency:</b>	For the following analog input type, the wire breakage monitoring is active: p4056[x] = 3 (unipolar current input monitored (+4 mA ... +20 mA)) Refer to: r4056, p4056		

<b>p4062[0...1]</b>	<b>TM31 analog inputs wire breakage monitoring delay time / TM31 wirebrk t_del</b>		
TM31	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Terminals <b>Not for motor type:</b> - <b>Min</b> 0 [ms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000 [ms]	<b>Access level:</b> 2 <b>Func. diagram:</b> 9566, 9568 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 100 [ms]
<b>Description:</b>	Sets the delay time for wire-breakage monitoring of the analog inputs on Terminal Module 31 (TM31).		
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)		
<b>p4063[0...1]</b>	<b>TM31 analog inputs offset / TM31 AI offset</b>		
TM31	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Terminals <b>Not for motor type:</b> - <b>Min</b> -20.000	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 20.000	<b>Access level:</b> 2 <b>Func. diagram:</b> 9566, 9568 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000
<b>Description:</b>	Sets the offset for the analog inputs of Terminal Module 31 (TM31). The offset is added to the input signal before the scaling characteristic.		
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)		
<b>p4063[0...1]</b>	<b>TB30 analog inputs offset / TB30 AI offset</b>		
TB30	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Terminals <b>Not for motor type:</b> - <b>Min</b> -20.000 [V]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 20.000 [V]	<b>Access level:</b> 2 <b>Func. diagram:</b> 9104 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000 [V]
<b>Description:</b>	Sets the offset for the analog inputs of Terminal Board 30 (TB30). The offset is added to the input signal before the scaling characteristic.		
<b>Index:</b>	[0] = AI 0 (X482.1/X482.2) [1] = AI 1 (X482.3/X482.4)		
<b>p4066[0...1]</b>	<b>TM31 analog inputs activate absolute value generation / TM31 AI absVal act</b>		
TM31	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> Terminals <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 3 <b>Func. diagram:</b> 9566, 9568 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Activates the absolute value generation for the analog input signals of Terminal Module 31 (TM31).		
<b>Value:</b>	0: No absolute value generation 1: Absolute value generation switched in		
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)		

<b>p4066[0...1]</b>	<b>TB30 analog inputs activate absolute value generation / TB30 AI absVal act</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9104
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Activates the absolute value generation for the analog input signals of the Terminal Board 30 (TB30).		
<b>Value:</b>	0: No absolute value generation 1: Absolute value generation switched in		
<b>Index:</b>	[0] = AI 0 (X482.1/X482.2) [1] = AI 1 (X482.3/X482.4)		
<b>p4067[0...1]</b>	<b>BI: TM31 analog inputs invert signal source / TM31 AI inv s_src</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9566, 9568
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to invert the analog inputs signals of Terminal Module 31 (TM31).		
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)		
<b>p4067[0...1]</b>	<b>BI: TB30 analog inputs invert signal source / TB30 AI inv s_src</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9104
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to invert the analog input signals of the Terminal Board 30 (TB30).		
<b>Index:</b>	[0] = AI 0 (X482.1/X482.2) [1] = AI 1 (X482.3/X482.4)		
<b>p4068[0...1]</b>	<b>TM31 analog inputs window to suppress noise / TM31 AI window</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9566, 9568
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	20.00 [%]	0.00 [%]
<b>Description:</b>	Sets the noise suppression window of the analog inputs for Terminal Module 31 (TM31). Changes less than the window are suppressed.		
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)		
<b>Note:</b>	AI: Analog Input		

<b>p4068[0...1]</b>	<b>TB30 analog inputs noise suppression window / TB30 AI window</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9104
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	20.00 [%]	0.00 [%]
<b>Description:</b>	Sets the noise suppression window of the analog inputs for Terminal Board 30 (TB30). Changes less than the window are suppressed.		
<b>Index:</b>	[0] = AI 0 (X482.1/X482.2) [1] = AI 1 (X482.3/X482.4)		
<b>Note:</b>	AI: Analog Input		
<b>p4069[0...1]</b>	<b>BI: TM31 analog inputs signal source for enable / TM31 AI enable</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9566, 9568
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for the enable signal of the analog inputs of Terminal Module 31 (TM31).		
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)		
<b>p4069[0...1]</b>	<b>BI: TB30 analog inputs signal source for enable / TB30 AI enable</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9104
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source for enabling the analog inputs of the Terminal Board 30 (TB30).		
<b>Index:</b>	[0] = AI 0 (X482.1/X482.2) [1] = AI 1 (X482.3/X482.4)		
<b>p4071[0...1]</b>	<b>CI: TM31 analog outputs signal source / TM31 AO s_src</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9549, 9572
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the analog outputs of Terminal Module 31 (TM31).		
<b>Index:</b>	[0] = AO 0 (X522.1, X522.2, X522.3) [1] = AO 1 (X522.4, X522.5, X522.6)		
<b>Note:</b>	AO: Analog Output		

## 2 Parameters

### 2.2 List of parameters

<b>p4071[0...1]</b>	<b>CI: TB30 analog outputs signal source / TB30 AO s_src</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32 / FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9099, 9106
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the analog outputs of the Terminal Board 30 (TB30).		
<b>Index:</b>	[0] = AO 0 (X482.5/X482.6) [1] = AO 1 (X482.7/X482.8)		
<b>Note:</b>	AO: Analog Output		
<b>r4072[0...1]</b>	<b>TM31 analog outputs output value currently referred / TM31 AO outp_val</b>		
TM31	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9572
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the actual referred output value of the analog outputs of Terminal Module 31 (TM31).		
<b>Index:</b>	[0] = AO 0 (X522.1, X522.2, X522.3) [1] = AO 1 (X522.4, X522.5, X522.6)		
<b>r4072[0...1]</b>	<b>TB30 analog outputs output value currently referred / TB30 AO outp_val</b>		
TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9106
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the actual referred output value of the analog outputs of the Terminal Board 30 (TB30).		
<b>Index:</b>	[0] = AO 0 (X482.5/X482.6) [1] = AO 1 (X482.7/X482.8)		
<b>p4073[0...1]</b>	<b>TM31 analog outputs smoothing time constant / TM31 AO T_smooth</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9572
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [ms]	1000.0 [ms]	0.0 [ms]
<b>Description:</b>	Sets the smoothing time constant of the 1st order lowpass filter for the analog outputs of Terminal Module 31 (TM31).		
<b>Index:</b>	[0] = AO 0 (X522.1, X522.2, X522.3) [1] = AO 1 (X522.4, X522.5, X522.6)		

---

<b>p4073[0...1]</b>	<b>TB30 analog outputs smoothing time constant / TB30 AO T_smooth</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9106
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [ms]	1000.0 [ms]	0.0 [ms]
<b>Description:</b>	Sets the smoothing time constant of the 1st order lowpass filter for the analog outputs of the Terminal Board 30 (TB30).		
<b>Index:</b>	[0] = AO 0 (X482.5/X482.6) [1] = AO 1 (X482.7/X482.8)		

---

<b>r4074[0...1]</b>	<b>TM31 analog outputs current output voltage/current / TM31 AO U/I_outp</b>		
TM31	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9572
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the actual output voltage in V when set as voltage output. Displays the actual output voltage in mA when set as current output.		
<b>Index:</b>	[0] = AO 0 (X522.1, X522.2, X522.3) [1] = AO 1 (X522.4, X522.5, X522.6)		
<b>Dependency:</b>	The type of the analog output AO x (voltage or current output) is set using p4076. Refer to: r4076, p4076		
<b>Note:</b>	AO: Analog Output		

---

<b>r4074[0...1]</b>	<b>TB30 analog outputs actual output voltage / TB30 AO U_outp</b>		
TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9106
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the actual output voltage at the analog outputs of the Terminal Board 30 (TB30).		
<b>Index:</b>	[0] = AO 0 (X482.5/X482.6) [1] = AO 1 (X482.7/X482.8)		

---

<b>p4075[0...1]</b>	<b>TM31 analog outputs activate absolute value generation / TM31 AO absVal act</b>		
TM31	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9572
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Activates the absolute value generation for the analog outputs of Terminal Module 31 (TM31).		
<b>Value:</b>	0: No absolute value generation 1: Absolute value generation switched in		
<b>Index:</b>	[0] = AO 0 (X522.1, X522.2, X522.3) [1] = AO 1 (X522.4, X522.5, X522.6)		

<b>p4075[0...1]</b>	<b>TB30 analog outputs activate absolute value generation / TB30 AO absVal act</b>		
TB30	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9106
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Activates the absolute value generation for the analog outputs of the Terminal Board 30 (TB30).		
<b>Value:</b>	0: No absolute value generation 1: Absolute value generation switched in		
<b>Index:</b>	[0] = AO 0 (X482.5/X482.6) [1] = AO 1 (X482.7/X482.8)		
<b>p4076[0...1]</b>	<b>TM31 analog outputs type / TM31 AO type</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9572
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4	4
<b>Description:</b>	Sets the type of analog outputs of Terminal Module 31 (TM31). p4076[x] = 1, 4 correspond to a voltage output (p4074, p4078, p4080, p4083 are displayed in V). p4076[x] = 0, 2, 3 correspond to a current output (p4074, p4078, p4080, p4083 are displayed in mA).		
<b>Value:</b>	0: Current output (0 mA ... +20 mA) 1: Voltage output (0 V ... +10 V) 2: Current output (+4 mA ... +20 mA) 3: Current output (-20 mA ... +20 mA) 4: Voltage output (-10 V ... +10 V)		
<b>Index:</b>	[0] = AO 0 (X522.1, X522.2, X522.3) [1] = AO 1 (X522.4, X522.5, X522.6)		
<b>Dependency:</b>	Refer to: p4077, p4078, p4079, p4080		
<b>Note:</b>	When changing p4076, the parameters of the scaling characteristic (p4077, p4078, p4079, p4080) are overwritten with the following default values: For p4076 = 0, 3, p4077 is set to 0.0 %, p4078 to 0.0 mA, p4079 to 100.0 % and p4080 to 20.0 mA. For p4076 = 1, 4, p4077 is set to 0.0 %, p4078 to 0.0 V, p4079 to 100.0 % and p4080 to 10.0 V. For p4076 = 2, p4077 is set to 0.0 %, p4078 to 4.0 mA, p4079 to 100.0 % and p4080 to 20.0 mA.		
<b>r4076[0...1]</b>	<b>TB30 analog outputs type / TB30 AO type</b>		
TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	4	4	-
<b>Description:</b>	Displays the type of analog outputs of the Terminal Board 30 (TB30).		
<b>Value:</b>	4: Voltage output (-10 V ... +10 V)		
<b>Index:</b>	[0] = AO 0 (X482.5/X482.6) [1] = AO 1 (X482.7/X482.8)		

<b>p4077[0...1]</b>	<b>TM31 analog outputs characteristic value x1 / TM31 AO char x1</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9572
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000.00 [%]	1000.00 [%]	0.00 [%]
<b>Description:</b>	Sets the scaling characteristic for the analog outputs of Terminal Module 31 (TM31). The scaling characteristic for the analog outputs is defined using 2 points. This parameter specifies the x coordinate (percentage) of the 1st value pair of the characteristic.		
<b>Index:</b>	[0] = AO 0 (X522.1, X522.2, X522.3) [1] = AO 1 (X522.4, X522.5, X522.6)		
<b>Dependency:</b>	Refer to: r4076, p4076		
<b>Notice:</b>	This parameter is automatically overwritten when changing p4076 (type of analog outputs).		
<b>Note:</b>	The parameters for the characteristic do not have a limiting effect.		
<b>p4077[0...1]</b>	<b>TB30 analog outputs characteristic value x1 / TB30 AO char x1</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9106
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000.00 [%]	1000.00 [%]	0.00 [%]
<b>Description:</b>	Sets the scaling characteristic for the analog outputs of Terminal Board 30 (TB30). The scaling characteristic for the analog outputs is defined using 2 points. This parameter specifies the x coordinate (percentage) of the 1st value pair of the characteristic.		
<b>Index:</b>	[0] = AO 0 (X482.5/X482.6) [1] = AO 1 (X482.7/X482.8)		
<b>Note:</b>	The parameters for the characteristic do not have a limiting effect.		
<b>p4078[0...1]</b>	<b>TM31 analog outputs characteristic value y1 / TM31 AO char y1</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9572
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-20.000 [V]	20.000 [V]	0.000 [V]
<b>Description:</b>	Sets the scaling characteristic for the analog outputs of Terminal Module 31 (TM31). The scaling characteristic for the analog outputs is defined using 2 points. This parameter specifies the y coordinate (output voltage in V or output current in mA) of the 1st value pair of the characteristic.		
<b>Index:</b>	[0] = AO 0 (X522.1, X522.2, X522.3) [1] = AO 1 (X522.4, X522.5, X522.6)		
<b>Dependency:</b>	The unit of this parameter (V or mA) depends on the analog output type. Refer to: r4076, p4076		
<b>Notice:</b>	This parameter is automatically overwritten when changing p4076 (type of analog outputs).		
<b>Note:</b>	The parameters for the characteristic do not have a limiting effect.		

<b>p4078[0...1]</b>	<b>TB30 analog outputs characteristic value y1 / TB30 AO char y1</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9106
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-11.000 [V]	11.000 [V]	0.000 [V]
<b>Description:</b>	Sets the scaling characteristic for the analog outputs of Terminal Board 30 (TB30). The scaling characteristic for the analog outputs is defined using 2 points. This parameter specifies the y coordinate (output voltage in V) of the 1st value pair of the characteristic.		
<b>Index:</b>	[0] = AO 0 (X482.5/X482.6) [1] = AO 1 (X482.7/X482.8)		
<b>Note:</b>	The parameters for the characteristic do not have a limiting effect.		
<b>p4079[0...1]</b>	<b>TM31 analog outputs characteristic value x2 / TM31 AO char x2</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9572
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000.00 [%]	1000.00 [%]	100.00 [%]
<b>Description:</b>	Sets the scaling characteristic for the analog outputs of Terminal Module 31 (TM31). The scaling characteristic for the analog outputs is defined using 2 points. This parameter specifies the x coordinate (percentage) of the 2nd value pair of the characteristic.		
<b>Index:</b>	[0] = AO 0 (X522.1, X522.2, X522.3) [1] = AO 1 (X522.4, X522.5, X522.6)		
<b>Dependency:</b>	Refer to: r4076, p4076		
<b>Notice:</b>	This parameter is automatically overwritten when changing p4076 (type of analog outputs).		
<b>Note:</b>	The parameters for the characteristic do not have a limiting effect.		
<b>p4079[0...1]</b>	<b>TB30 analog outputs characteristic value x2 / TB30 AO char x2</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9106
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1000.00 [%]	1000.00 [%]	100.00 [%]
<b>Description:</b>	Sets the scaling characteristic for the analog outputs of Terminal Board 30 (TB30). The scaling characteristic for the analog outputs is defined using 2 points. This parameter specifies the x coordinate (percentage) of the 2nd value pair of the characteristic.		
<b>Index:</b>	[0] = AO 0 (X482.5/X482.6) [1] = AO 1 (X482.7/X482.8)		
<b>Note:</b>	The parameters for the characteristic do not have a limiting effect.		

<b>p4080[0...1]</b>	<b>TM31 analog outputs characteristic value y2 / TM31 AO char y2</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9572
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-20.000 [V]	20.000 [V]	10.000 [V]
<b>Description:</b>	Sets the scaling characteristic for the analog outputs of Terminal Module 31 (TM31). The scaling characteristic for the analog outputs is defined using 2 points. This parameter specifies the y coordinate (output voltage in V or output current in mA) of the 2nd value pair of the characteristic.		
<b>Index:</b>	[0] = AO 0 (X522.1, X522.2, X522.3) [1] = AO 1 (X522.4, X522.5, X522.6)		
<b>Dependency:</b>	The unit of this parameter (V or mA) depends on the analog output type. Refer to: r4076, p4076		
<b>Notice:</b>	This parameter is automatically overwritten when changing p4076 (type of analog outputs).		
<b>Note:</b>	The parameters for the characteristic do not have a limiting effect.		
<b>p4080[0...1]</b>	<b>TB30 analog outputs characteristic value y2 / TB30 AO char y2</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9106
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-11.000 [V]	11.000 [V]	10.000 [V]
<b>Description:</b>	Sets the scaling characteristic for the analog outputs of Terminal Board 30 (TB30). The scaling characteristic for the analog outputs is defined using 2 points. This parameter specifies the y coordinate (output voltage in V) of the 2nd value pair of the characteristic.		
<b>Index:</b>	[0] = AO 0 (X482.5/X482.6) [1] = AO 1 (X482.7/X482.8)		
<b>Note:</b>	The parameters for the characteristic do not have a limiting effect.		
<b>p4082[0...1]</b>	<b>BI: TM31 analog outputs invert signal source / TM31 AO inv s_src</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9572
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to invert the analog output signals of Terminal Module 31 (TM31).		
<b>Index:</b>	[0] = AO 0 (X522.1, X522.2, X522.3) [1] = AO 1 (X522.4, X522.5, X522.6)		
<b>p4082[0...1]</b>	<b>BI: TB30 analog outputs invert signal source / TB30 AO inv s_src</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9106
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for inverting the analog output signals of the Terminal Board 30 (TB30).		
<b>Index:</b>	[0] = AO 0 (X482.5/X482.6) [1] = AO 1 (X482.7/X482.8)		

<b>p4083[0...1]</b>	<b>TM31 analog outputs offset / TM31 AO offset</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9572
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-20.000	20.000	0.000
<b>Description:</b>	Sets the offset for the analog outputs of Terminal Module 31 (TM31). The offset is added to the output signal after the scaling characteristic.		
<b>Index:</b>	[0] = AO 0 (X522.1, X522.2, X522.3) [1] = AO 1 (X522.4, X522.5, X522.6)		
<b>Dependency:</b>	The unit of this parameter (V or mA) depends on the analog input type. Refer to: r4076, p4076		
<b>Note:</b>	This means, for example, the offset of a downstream isolating amplifier can be compensated.		

<b>p4083[0...1]</b>	<b>TB30 analog outputs offset / TB30 AO offset</b>		
TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9106
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-10.000	10.000	0.000
<b>Description:</b>	Sets the offset for the analog outputs of Terminal Board 30 (TB30). The offset is added to the output signal after the scaling characteristic.		
<b>Index:</b>	[0] = AO 0 (X482.5/X482.6) [1] = AO 1 (X482.7/X482.8)		

<b>p4095</b>	<b>TM31 digital inputs simulation mode / TM31 DI sim_mode</b>				
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9549, 9550, 9552, 9560, 9562		
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 0000 0000 bin		
<b>Description:</b>	Sets the simulation mode for the digital inputs of Terminal Module 31 (TM31).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 0 (X520.1)	Simulation	Terminal eval	-
	01	DI 1 (X520.2)	Simulation	Terminal eval	-
	02	DI 2 (X520.3)	Simulation	Terminal eval	-
	03	DI 3 (X520.4)	Simulation	Terminal eval	-
	04	DI 4 (X530.1)	Simulation	Terminal eval	-
	05	DI 5 (X530.2)	Simulation	Terminal eval	-
	06	DI 6 (X530.3)	Simulation	Terminal eval	-
	07	DI 7 (X530.4)	Simulation	Terminal eval	-
	08	DI/DO 8 (X541.2)	Simulation	Terminal eval	-
	09	DI/DO 9 (X541.3)	Simulation	Terminal eval	-
	10	DI/DO 10 (X541.4)	Simulation	Terminal eval	-
	11	DI/DO 11 (X541.5)	Simulation	Terminal eval	-
<b>Dependency:</b>	The setpoint for the input signals is specified using p4096. Refer to: p4096				
<b>Warning:</b>	A drive that is moved by simulating the inputs of a Terminal Module is brought to a standstill while the Terminal Module is being activated or deactivated.				
					

**Note:** This parameter is not saved when data is backed-up (p0971, p0977).  
 DI: Digital Input  
 DI/DO: Bidirectional Digital Input/Output

---

**p4095 TB30 digital inputs simulation mode / TB30 DI sim\_mode**

TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9099, 9100
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 bin

**Description:** Sets the simulation mode for the digital inputs of the Terminal Board 30 (TB30).

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 0 (X481.1)	Simulation	Terminal eval	-
	01	DI 1 (X481.2)	Simulation	Terminal eval	-
	02	DI 2 (X481.3)	Simulation	Terminal eval	-
	03	DI 3 (X481.4)	Simulation	Terminal eval	-

**Dependency:** The setpoint for the input signals is specified using p4096.  
 Refer to: p4096

**Warning:** A drive that is moved by simulating the inputs of a Terminal Board is brought to a standstill while the Terminal Module is being activated or deactivated.



**Note:** This parameter is not saved when data is backed-up (p0971, p0977).  
 DI: Digital Input

---

**p4096 TM31 digital inputs simulation mode setpoint / TM31 DI sim setp**

TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9549, 9550, 9552, 9560, 9562
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 0000 0000 bin

**Description:** Sets the setpoint for the input signals in the simulation mode of the digital inputs of Terminal Module 31 (TM31).

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 0 (X520.1)	High	Low	-
	01	DI 1 (X520.2)	High	Low	-
	02	DI 2 (X520.3)	High	Low	-
	03	DI 3 (X520.4)	High	Low	-
	04	DI 4 (X530.1)	High	Low	-
	05	DI 5 (X530.2)	High	Low	-
	06	DI 6 (X530.3)	High	Low	-
	07	DI 7 (X530.4)	High	Low	-
	08	DI/DO 8 (X541.2)	High	Low	-
	09	DI/DO 9 (X541.3)	High	Low	-
	10	DI/DO 10 (X541.4)	High	Low	-
	11	DI/DO 11 (X541.5)	High	Low	-

**Dependency:** The simulation of a digital input is selected using p4095.  
 Refer to: p4095

**Note:** This parameter is not saved when data is backed-up (p0971, p0977).  
 DI: Digital Input  
 DI/DO: Bidirectional Digital Input/Output

---

**p4096 TB30 digital inputs simulation mode setpoint / TB30 DI sim setpt**

<b>TB30</b>	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9099, 9100
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>

- - 0000 bin

**Description:** Sets the setpoint for the input signals in the simulation mode of the digital inputs of the Terminal Board 30 (TB30).

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 0 (X481.1)	High	Low	-
	01	DI 1 (X481.2)	High	Low	-
	02	DI 2 (X481.3)	High	Low	-
	03	DI 3 (X481.4)	High	Low	-

**Dependency:** The simulation of a digital input is selected using p4095.

Refer to: p4095

**Note:** This parameter is not saved when data is backed-up (p0971, p0977).

DI: Digital Input

---

**p4097[0...1] TM31 analog inputs simulation mode / TM31 AI sim\_mode**

<b>TM31</b>	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9566, 9568
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>

0 1 0

**Description:** Sets the simulation mode for the analog inputs of Terminal Module 31 (TM31).

**Value:** 0: Terminal evaluation for analog input x

1: Simulation for analog input x

**Index:** [0] = AI 0 (X521.1/X521.2, S5.0)

[1] = AI 1 (X521.3/X521.4, S5.1)

**Dependency:** The setpoint for the input voltage is specified via p4098.

Refer to: p4098

**Note:** This parameter is not saved when data is backed-up (p0971, p0977).

AI: Analog Input

---

**p4097[0...1] TB30 analog inputs simulation mode / TB30 AI sim\_mode**

<b>TB30</b>	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9104
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>

0 1 0

**Description:** Sets the simulation mode for the analog inputs of the Terminal Board 30 (TB30).

**Value:** 0: Terminal evaluation for analog input x

1: Simulation for analog input x

**Index:** [0] = AI 0 (X482.1/X482.2)

[1] = AI 1 (X482.3/X482.4)

**Dependency:** The setpoint for the input voltage is specified via p4098.

Refer to: p4098

**Note:** This parameter is not saved when data is backed-up (p0971, p0977).

AI: Analog Input

<b>p4098[0...1]</b>	<b>TM31 analog inputs simulation mode setpoint / TM31 AI sim setp</b>		
TM31	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Terminals <b>Not for motor type:</b> - <b>Min</b> -20.000	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 20.000	<b>Access level:</b> 2 <b>Func. diagram:</b> 9566, 9568 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000
<b>Description:</b>	Sets the setpoint for the input value in simulation mode of the analog inputs of Terminal Module 31 (TM31).		
<b>Index:</b>	[0] = AI 0 (X521.1/X521.2, S5.0) [1] = AI 1 (X521.3/X521.4, S5.1)		
<b>Dependency:</b>	The simulation of an analog input is selected using p4097. If AI x is parameterized as voltage input (p4056), then the setpoint is a voltage in V. If AI x is parameterized as current input (p4056), then the setpoint is a current in mA. Refer to: r4056, p4056, p4097		
<b>Note:</b>	This parameter is not saved when data is backed-up (p0971, p0977). AI: Analog Input		
<b>p4098[0...1]</b>	<b>TB30 analog inputs simulation mode setpoint / TB30 AI sim setp</b>		
TB30	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Terminals <b>Not for motor type:</b> - <b>Min</b> -11.000 [V]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 11.000 [V]	<b>Access level:</b> 2 <b>Func. diagram:</b> 9104 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000 [V]
<b>Description:</b>	Sets the setpoint for the input voltage in the simulation mode of the analog inputs of Terminal Board 30 (TB30).		
<b>Index:</b>	[0] = AI 0 (X482.1/X482.2) [1] = AI 1 (X482.3/X482.4)		
<b>Dependency:</b>	The simulation of an analog input is selected using p4097. Refer to: p4097		
<b>Note:</b>	This parameter is not saved when data is backed-up (p0971, p0977). AI: Analog Input		
<b>p4099[0...2]</b>	<b>TM31 inputs/outputs sampling time / TM31 I/O t_sample</b>		
TM31	<b>Can be changed:</b> C1(3) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Commands <b>Not for motor type:</b> - <b>Min</b> 0.00 [µs]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 5000.00 [µs]	<b>Access level:</b> 3 <b>Func. diagram:</b> 9549, 9550 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 4000.00 [µs]
<b>Description:</b>	Sets the sampling time for the inputs and outputs of Terminal Module 31 (TM31).		
<b>Index:</b>	[0] = Digital inputs/outputs (DI/DO) [1] = Analog inputs (AI) [2] = Analog outputs (AO)		
<b>Dependency:</b>	The parameter can only be modified for p0009 = 3, 29. The following applies for the sampling time: The sampling times at a DRIVE-CLiQ line must be integral multiples of one another. The sampling times of this TM must be an integral multiple of a servo or vector drive that exists in the system. The minimum permissible sampling time is 125 µs. The sampling times entered in index 0 (digital inputs/outputs) and index 2 (analog outputs) must always be greater than or equal to the sampling time in index 1 (analog inputs). Refer to: p0009, r0110, r0111		
<b>Notice:</b>	The sampling times entered in index 0 (digital inputs/outputs) and index 2 (analog outputs) must always be greater than or equal to the sampling time in index 1 (analog inputs).		

## 2 Parameters

### 2.2 List of parameters

**Note:** The changed sampling time is immediately effective after a completed sub-boot (p0009 -> 0).  
Parameter p4099[0] must never be equal to zero.

---

<b>p4099[0...2]</b>	<b>TB30 inputs/outputs sampling time / TB30 I/O t_sample</b>		
TB30	<b>Can be changed:</b> C1(3) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Commands <b>Not for motor type:</b> - <b>Min</b> 0.00 [µs]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 5000.00 [µs]	<b>Access level:</b> 3 <b>Func. diagram:</b> 9099, 9100 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> [0] 4000.00 [µs] [1] 4000.00 [µs] [2] 4000.00 [µs]
<b>Description:</b>	Sets the sampling time for the inputs and outputs of Terminal Board 30 (TB30).		
<b>Index:</b>	[0] = Digital inputs/outputs (DI/DO) [1] = Analog inputs (AI) [2] = Analog outputs (AO)		
<b>Dependency:</b>	The parameter can only be modified for p0009 = 3, 29. The sampling times can only be set as an integer multiple of the lowest basic sampling time (r0110[0]). Refer to: p0009, r0110, r0111		
<b>Note:</b>	The changed sampling time is immediately effective after a completed sub-boot (p0009 -> 0). For clock cycle synchronous PROFIBUS operation, the TB30 hardware (e.g. analog/digital converter) is operated with the PROFIBUS clock cycle (r2064[1]). This clock cycle is also kept after the PROFIBUS connection has been exited up to the next time that the Control Unit is switched off. In this case, a faster sampling time than the PROFIBUS clock cycle is not practical in p4099[0...2].		

---

<b>p4100[0...3]</b>	<b>TM120 temperature evaluation, sensor type / TM120 sensor type</b>		
TM120	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 6	<b>Access level:</b> 1 <b>Func. diagram:</b> 9605, 9606 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the sensor type for temperature evaluation via Terminal Module 120 (TM120). This means that the temperature sensor type is selected and the evaluation is switched in.		
<b>Value:</b>	0: Evaluation disabled 1: PTC thermistor 2: KTY84 4: Bimetallic NC contact 6: PT1000		
<b>Index:</b>	[0] = Temperature channel 0 [1] = Temperature channel 1 [2] = Temperature channel 2 [3] = Temperature channel 3		
<b>Notice:</b>	For p4102[0...7] = 251 °C, evaluation of the corresponding threshold is deactivated. For sensor type "PTC thermistor" (p4100[0...3] = 1), the following applies: To activate the corresponding alarm or fault, p4102[0...7] must be set <= 250 °C.		
<b>Note:</b>	The temperature sensors are connected to the following terminals: X521.2(+) and X521.1(-) = channel 0 X521.4(+) and X521.3(-) = channel 1 X521.6(+) and X521.5(-) = channel 2 X521.8(+) and X521.7(-) = channel 3		

<b>p4100[0...11]</b>		<b>TM150 sensor type / TM150 sensor type</b>	
TM150	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 6	<b>Access level:</b> 1 <b>Func. diagram:</b> 9626, 9627 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 5
<b>Description:</b>	Sets the sensor type for Terminal Module 150 (TM150) This means that the temperature sensor type is selected and the evaluation is switched in.		
<b>Value:</b>	0: Evaluation disabled 1: PTC thermistor 2: KTY84 4: Bimetallic NC contact 5: PT100 6: PT1000		
<b>Index:</b>	[0] = Temperature channel 0 [1] = Temperature channel 1 [2] = Temperature channel 2 [3] = Temperature channel 3 [4] = Temperature channel 4 [5] = Temperature channel 5 [6] = Temperature channel 6 [7] = Temperature channel 7 [8] = Temperature channel 8 [9] = Temperature channel 9 [10] = Temperature channel 10 [11] = Temperature channel 11		
<b>Notice:</b>	For p4102[0...23] = 251 °C, evaluation of the corresponding threshold is deactivated. For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[0...11] = 1, 4), the following applies: To activate the corresponding alarm or fault, p4102[0...23] must be set <= 250 °C.		
<b>Note:</b>	The temperature sensors are connected to the following terminals: X531 = channel 0 (for 2x2 wire evaluation, additionally channel 6) X532 = channel 1 (for 2x2 wire evaluation, additionally channel 7) X533 = channel 2 (for 2x2 wire evaluation, additionally channel 8) X534 = channel 3 (for 2x2 wire evaluation, additionally channel 9) X535 = channel 4 (for 2x2 wire evaluation, additionally channel 10) X536 = channel 5 (for 2x2 wire evaluation, additionally channel 11) Details on the wiring are included in the parameter description for p4108.		

<b>p4100</b>		<b>TM31 sensor type / TM31 sensor type</b>	
TM31	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 6	<b>Access level:</b> 1 <b>Func. diagram:</b> 9576 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the sensor type for Terminal Module 31 (TM31) This means that the temperature sensor type is selected and the evaluation is switched in.		
<b>Value:</b>	0: Evaluation disabled 1: PTC thermistor 2: KTY84 6: PT1000		
<b>Notice:</b>	For p4102[0...1] = 251 °C, evaluation of the corresponding threshold is deactivated. For sensor type "PTC thermistor" (p4100 = 1), the following applies: To activate the corresponding alarm or fault, p4102[0...1] must be set <= 250 °C.		
<b>Note:</b>	The temperature sensor is connected at terminals X522.7(+) and X522.8(-).		

<b>r4101[0...3]</b>	<b>TM120 sensor resistance / TM120 R_sensor</b>		
TM120	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9605, 9606
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ohm]	- [ohm]	- [ohm]
<b>Description:</b>	Displays the actual resistance value of the temperature sensor connected at the Terminal Module.		
<b>Index:</b>	[0] = Temperature channel 0 [1] = Temperature channel 1 [2] = Temperature channel 2 [3] = Temperature channel 3		
<b>Note:</b>	The maximum measurable resistance value is approx. 1720 Ohm. The temperature sensors are connected to the following terminals: X521.2(+) and X521.1(-) = channel 0 X521.4(+) and X521.3(-) = channel 1 X521.6(+) and X521.5(-) = channel 2 X521.8(+) and X521.7(-) = channel 3		
<b>r4101[0...11]</b>	<b>TM150 sensor resistance / TM150 R_sensor</b>		
TM150	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9626, 9627
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ohm]	- [ohm]	- [ohm]
<b>Description:</b>	Displays the actual resistance value of the temperature sensor connected at the Terminal Module.		
<b>Index:</b>	[0] = Temperature channel 0 [1] = Temperature channel 1 [2] = Temperature channel 2 [3] = Temperature channel 3 [4] = Temperature channel 4 [5] = Temperature channel 5 [6] = Temperature channel 6 [7] = Temperature channel 7 [8] = Temperature channel 8 [9] = Temperature channel 9 [10] = Temperature channel 10 [11] = Temperature channel 11		
<b>Note:</b>	The maximum measurable resistance value is approx. 2500 Ohm. For 1x2 and 2x2 wire evaluation: The actual sensor resistance is displayed in this parameter(i.e. the wire resistance (p4110) is taken into account). The temperature sensors are connected to the following terminals: X531 = channel 0 (for 2x2 wire evaluation, additionally channel 6) X532 = channel 1 (for 2x2 wire evaluation, additionally channel 7) X533 = channel 2 (for 2x2 wire evaluation, additionally channel 8) X534 = channel 3 (for 2x2 wire evaluation, additionally channel 9) X535 = channel 4 (for 2x2 wire evaluation, additionally channel 10) X536 = channel 5 (for 2x2 wire evaluation, additionally channel 11) Details on the wiring are included in the parameter description for p4108.		

<b>r4101</b>	<b>TM31 sensor resistance / TM31 R_sensor</b>		
TM31	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9576
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ohm]	- [ohm]	- [ohm]
<b>Description:</b>	Displays the actual resistance value of the temperature sensor connected at the Terminal Module.		
<b>Note:</b>	The maximum measurable resistance value is approx. 1720 Ohm. The temperature sensor is connected at terminals X522.7(+) and X522.8(-).		
<b>p4102[0...7]</b>	<b>TM120 fault threshold/alarm threshold / TM120 F/A_thresh</b>		
TM120	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9605, 9606
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-48 [°C]	251 [°C]	251 [°C]
<b>Description:</b>	Sets the fault threshold/alarm threshold for Terminal Module 120 (TM120). A35211 is initiated, if the temperature actual value r4105[0] > p4102[0] F35207 is initiated if the temperature actual value r4105[0] > p4102[1] or timer p4103[0] has expired A35212 is initiated, if the temperature actual value r4105[1] > p4102[2] F35208 is initiated if the temperature actual value r4105[1] > p4102[3] or timer p4103[1] has expired A35213 is initiated, if the temperature actual value r4105[2] > p4102[4] F35209 is initiated if the temperature actual value r4105[2] > p4102[5] or timer p4103[2] has expired A35214 is initiated, if the temperature actual value r4105[3] > p4102[6] F35210 is initiated if the temperature actual value r4105[3] > p4102[7] or timer p4103[3] has expired For alarms A35211, A35212, A35213, A35214 the following applies: - Remains until the temperature actual value (r4105[0...3]) reaches or falls below the value (p4102[0, 2, 4, 6] - hysteresis). For fault F35207, F35208, F35209, F35210 the following applies: - Remains until the temperature actual value (r4105[0...3]) reaches or falls below the value (p4102[1, 3, 5, 7] - hysteresis) and the fault has been acknowledged. - the hysteresis value is 5 K and cannot be changed.		
<b>Index:</b>	[0] = Channel 0 alarm threshold (A35211) [1] = Channel 0 fault threshold (F35207) [2] = Channel 1 alarm threshold (A35212) [3] = Channel 1 fault threshold (F35208) [4] = Channel 2 alarm threshold (A35213) [5] = Channel 2 fault threshold (F35209) [6] = Channel 3 alarm threshold (A35214) [7] = Channel 3 fault threshold (F35210)		
<b>Dependency:</b>	Refer to: p4103		
<b>Notice:</b>	Fault F35207 ... F35210 only causes the drive to shut down if there is at least one BICO interconnection between the drive and TM120. For p4102[0...7] = 251 °C, evaluation of the corresponding threshold is deactivated. For sensor type "PTC thermistor" (p4100[0...3] = 1), the following applies: To activate the corresponding alarm or fault, p4102[0...7] must be set <= 250 °C.		
<b>Note:</b>	The temperature sensor is connected to the following terminals: X521.2(+) and X521.1(-) = channel 0 X521.4(+) and X521.3(-) = channel 1 X521.6(+) and X521.5(-) = channel 2 X521.8(+) and X521.7(-) = channel 3		

p4102[0...23]	TM150 fault threshold/alarm threshold / TM150 F/A_thresh		
TM150	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9626, 9627
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-99 [°C]	251 [°C]	251 [°C]
<b>Description:</b>	<p>Sets the fault threshold/alarm threshold for Terminal Module 150 (TM150).            For alarms (even indices [0, 2, 4 ... 22]), the following applies:            - the corresponding alarm is initiated, if the temperature actual value associated with a temperature channel exceeds the associated alarm threshold (r4105[x] &gt; p4102[2x]). In addition, the timer is started (p4103[x]).            - the alarm remains until the temperature actual value (r4105[x]) reaches or falls below the threshold value (p4102[2x] - hysteresis (p4118[x])).            For faults (uneven indices [1, 3, 5 ... 23]), the following applies:            - the corresponding fault is initiated, if the temperature actual value associated with a temperature channel exceeds the associated fault threshold (r4105[x] &gt; p4102[2x+1]) or the associated timer (p4103[x]) has expired.            - the fault remains until the temperature actual value (r4105[x]) reaches or falls below the threshold value (p4102[2x+1]) - hysteresis (p4118[x]) and the fault has been acknowledged.</p>		
<b>Index:</b>	<p>[0] = Channel 0 alarm threshold (A35211)            [1] = Channel 0 fault threshold (F35207)            [2] = Channel 1 alarm threshold (A35212)            [3] = Channel 1 fault threshold (F35208)            [4] = Channel 2 alarm threshold (A35213)            [5] = Channel 2 fault threshold (F35209)            [6] = Channel 3 alarm threshold (A35214)            [7] = Channel 3 fault threshold (F35210)            [8] = Channel 4 alarm threshold (A35410)            [9] = Channel 4 fault threshold (F35400)            [10] = Channel 5 alarm threshold (A35411)            [11] = Channel 5 fault threshold (F35401)            [12] = Channel 6 alarm threshold (A35412)            [13] = Channel 6 fault threshold (F35402)            [14] = Channel 7 alarm threshold (A35413)            [15] = Channel 7 fault threshold (F35403)            [16] = Channel 8 alarm threshold (A35414)            [17] = Channel 8 fault threshold (F35404)            [18] = Channel 9 alarm threshold (A35415)            [19] = Channel 9 fault threshold (F35405)            [20] = Channel 10 alarm threshold (A35416)            [21] = Channel 10 fault threshold (F35406)            [22] = Channel 11 alarm threshold (A35417)            [23] = Channel 11 fault threshold (F35407)</p>		
<b>Dependency:</b>	Refer to: p4103, r4104, r4105, p4118		
<b>Notice:</b>	<p>Faults F35207 ... F35210 and F35400 ... F35407 only result in the drive being shut down if at least one BICO interconnection exists between the drive and the TM150.            For p4102[0...23] = 251 °C, evaluation of the corresponding threshold is deactivated.            For sensor type "PTC thermistor" (p4100[0...11] = 1), the following applies:            To activate the corresponding alarm or fault, p4102[0...23] must be set &lt;= 250 °C.</p>		
<b>Note:</b>	The hysteresis can be set in p4118[0...11].		

p4102[0...1]	TM31 fault threshold/alarm threshold / TM31 F/A_thresh		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9576
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-48 [°C]	251 [°C]	[0] 100 [°C] [1] 120 [°C]
<b>Description:</b>	Sets the fault threshold/alarm threshold for Terminal Module 31 (TM31). A35211 is initiated, if the temperature actual value r4105[0] > p4102[0] F35207 is initiated if the temperature actual value r4105[0] > p4102[1] or timer p4103[0] has expired For alarm A35211 the following applies: - Remains until the temperature actual value (r4105) reaches or falls below the value (p4102[0] - hysteresis). For fault F35207 the following applies: - Remains until the temperature actual value (r4105) reaches or falls below the value (p4102[1] - hysteresis) and the fault has been acknowledged. - the hysteresis value is 5 K and cannot be changed by the user.		
<b>Index:</b>	[0] = Alarm threshold [1] = Fault threshold		
<b>Dependency:</b>	Refer to: r4104		
<b>Notice:</b>	Fault F35207 only causes the drive to be shut down if there is at least one BICO interconnection between the drive and TM31. For p4102[0...1] = 251 °C, evaluation of the corresponding threshold is deactivated. For sensor type "PTC thermistor" (p4100 = 1), the following applies: To activate the alarm or fault, p4102[0...1] must be set <= 250 °C.		

p4103[0...3]	TM120 temperature evaluation delay time / TM120 temp t_delay		
TM120	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9605, 9606
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [ms]	600000.000 [ms]	0.000 [ms]
<b>Description:</b>	Sets the delay time for the output of the fault for the temperature evaluation of Terminal Module 120 (TM120). The timer is started when the alarm threshold (p4102[0, 2, 4, 6]) is exceeded. If the delay time has expired and the alarm threshold has, in the meantime, not been fallen below, then fault F35207 ... F53210 is output. The fault can be acknowledged, if, after the delay time has expired, the alarm threshold is again fallen below. For sensor type "KTY84" "PT1000" (p4100[0...3] = 2, 6), the following applies: If the fault threshold (p4102[1, 3, 5, 7]) is exceeded before the delay time has expired, then fault F35207 ... F35210 is immediately output. For sensor type "PTC thermistor" (p4100[0...3] = 1), the following applies: - Alarm and fault threshold simultaneously respond. The fault is only issued after the delay time has expired.		
<b>Index:</b>	[0] = Temperature channel 0 [1] = Temperature channel 1 [2] = Temperature channel 2 [3] = Temperature channel 3		
<b>Dependency:</b>	Refer to: r4104		
<b>Warning:</b>	Fault F35207 ... F35210 only causes the drive to shut down if there is at least one BICO interconnection between the drive and TM120.		
			
<b>Note:</b>	With p4103 = 0 ms, the timer is deactivated and only the fault threshold is effective.		

<b>p4103[0...11]</b>	<b>TM150 delay time / TM150 t_delay</b>		
TM150	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9626, 9627
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [s]	600.0 [s]	0.0 [s]
<b>Description:</b>	<p>Sets the delay time for the output of the fault for the Terminal Module 150 (TM150).                      The timer is started when the alarm threshold (e.g. p4102[0]) is exceeded.                      If the delay time has expired and the alarm threshold has, in the meantime, not been fallen below, then the corresponding fault is output.                      The fault can be acknowledged, if, after the delay time has expired, the alarm threshold is again fallen below.                      For sensor type "KTY84", "PT100", "PT1000" (p4100[0...11] = 2, 5, 6) the following applies:                      - if the fault threshold (e.g. p4102[1]) is exceeded before the delay time has expired, then the corresponding fault is immediately output.                      For sensor type "PTC thermistor", "Bimetallic NC contact" (p4100[0...11] = 1, 4), the following applies:                      - Alarm and fault threshold simultaneously respond. The fault is only issued after the delay time has expired.</p>		
<b>Index:</b>	<p>[0] = Temperature channel 0                      [1] = Temperature channel 1                      [2] = Temperature channel 2                      [3] = Temperature channel 3                      [4] = Temperature channel 4                      [5] = Temperature channel 5                      [6] = Temperature channel 6                      [7] = Temperature channel 7                      [8] = Temperature channel 8                      [9] = Temperature channel 9                      [10] = Temperature channel 10                      [11] = Temperature channel 11</p>		
<b>Dependency:</b>	Refer to: p4102, r4104, r4105, p4118		
<b>Warning:</b>	The fault F35207 ... F35210 and F35400 ... 35407 only results in the drive being shut down if at least one BICO interconnection exists between the drive and the TM150.		
			
<b>Note:</b>	<p>For p4103 = 0 s and sensor type "KTY84", "PT100", "PT1000" (p4100[0...11] = 2, 5, 6) the following applies:                      - the corresponding fault can only be initiated via the fault threshold (output of the timer is always a logical 0).                      For p4103 = 0 s and sensor type "PTC thermistor", "Bimetallic NC contact" (p4100[0...11] = 1, 4), the following applies:                      - the corresponding alarm and fault are simultaneously output (delay time = 0 s).</p>		

<b>p4103</b>	<b>TM31 temperature evaluation delay time / TM31 temp t_delay</b>		
TM31	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9576
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [ms]	600000.000 [ms]	0.000 [ms]
<b>Description:</b>	<p>Sets the delay time for the output of the fault for the Terminal Module 31 (TM31).                      The timer is started when the alarm threshold (p4102[0]) is exceeded.                      If the delay time has expired and the alarm threshold has, in the meantime, not been fallen below, then fault F35207 is output.                      The fault can be acknowledged, if, after the delay time has expired, the alarm threshold is again fallen below.                      For sensor type "KTY84" "PT1000" (p4100 = 2, 6), the following applies:                      If the fault threshold (p4102[1]) is exceeded before the delay time has expired, then fault F35207 is immediately output.                      For sensor type "PTC thermistor" (p4100 = 1), the following applies:                      - Alarm and fault threshold simultaneously respond. The fault is only issued after the delay time has expired.</p>		

**Dependency:** Refer to: r4104

**Warning:** Fault F35207 only causes the drive to be shut down if there is at least one BICO interconnection between the drive and TM31.



**Note:** With p4103 = 0 ms, the timer is deactivated and only the fault threshold is effective.

### r4104.0...7 **BO: TM120 temperature evaluation status / TM120 temp status**

TM120	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9605, 9606
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and binector output for the status for the Terminal Module 120 (TM120).

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Channel 0 alarm present	Yes	No	9605
	01	Channel 0 fault present	Yes	No	9605
	02	Channel 1 alarm present	Yes	No	9605
	03	Channel 1 fault present	Yes	No	9605
	04	Channel 2 alarm present	Yes	No	9606
	05	Channel 2 fault present	Yes	No	9606
	06	Channel 3 alarm present	Yes	No	9606
	07	Channel 3 fault present	Yes	No	9606

**Dependency:** Refer to: p4102

### r4104.0...23 **BO: TM150 temperature evaluation status / TM150 temp status**

TM150	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9626, 9627
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and binector output for the status for the Terminal Module 150 (TM150).

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Channel 0 alarm present	Yes	No	9626
	01	Channel 0 fault present	Yes	No	9626
	02	Channel 1 alarm present	Yes	No	9626
	03	Channel 1 fault present	Yes	No	9626
	04	Channel 2 alarm present	Yes	No	9626
	05	Channel 2 fault present	Yes	No	9626
	06	Channel 3 alarm present	Yes	No	9626
	07	Channel 3 fault present	Yes	No	9626
	08	Channel 4 alarm present	Yes	No	9626
	09	Channel 4 fault present	Yes	No	9626
	10	Channel 5 alarm present	Yes	No	9626
	11	Channel 5 fault present	Yes	No	9626
	12	Channel 6 alarm present	Yes	No	9627
	13	Channel 6 fault present	Yes	No	9627
	14	Channel 7 alarm present	Yes	No	9627
	15	Channel 7 fault present	Yes	No	9627
	16	Channel 8 alarm present	Yes	No	9627
	17	Channel 8 fault present	Yes	No	9627
	18	Channel 9 alarm present	Yes	No	9627
	19	Channel 9 fault present	Yes	No	9627
	20	Channel 10 alarm present	Yes	No	9627
	21	Channel 10 fault present	Yes	No	9627
	22	Channel 11 alarm present	Yes	No	9627
	23	Channel 11 fault present	Yes	No	9627

**Dependency:** Refer to: p4102, p4103, r4105, p4118

## 2 Parameters

### 2.2 List of parameters

<b>r4104.0...1</b>	<b>BO: TM31 temperature evaluation status / TM31 temp status</b>			
TM31	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9549, 9576	
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and binector output for the status for the Terminal Module 31 (TM31).			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Alarm is present	Yes	No
	01	Fault is present	Yes	No
<b>Dependency:</b>	Refer to: p4102			

<b>r4105[0...3]</b>	<b>CO: TM120 temperature actual value / TM120 temp_act val</b>			
TM120	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8016, 9605, 9606	
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [°C]	- [°C]	- [°C]	
<b>Description:</b>	Displays the temperature actual value for the Terminal Module 120 (TM120)			
<b>Index:</b>	[0] = Temperature channel 0 [1] = Temperature channel 1 [2] = Temperature channel 2 [3] = Temperature channel 3			
<b>Dependency:</b>	For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100 = 1, 4), the following applies: - below the nominal response temperature, r4105 = -50 °C. - above the nominal response temperature, r4105 = 250 °C. For sensor type "KTY84" "PT1000" (p4100 = 2, 6), the following applies: - the displayed value corresponds to the temperature actual value. Refer to: p4100			
<b>Note:</b>	r4105[0...3] = -300 °C is displayed in the following cases: - temperature actual value invalid (F35920 ... F35923 output). - no sensor selected (p4100[0...3] = 0). The temperature sensor is connected to the following terminals: X521.2(+), X521.1(-) = channel 0 X521.4(+), X521.3(-) = channel 1 X521.6(+), X521.5(-) = channel 2 X521.8(+), X521.7(-) = channel 3			

<b>r4105[0...11]</b>	<b>CO: TM150 temperature actual value / TM150 temp_act val</b>			
TM150	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9626, 9627	
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [°C]	- [°C]	- [°C]	
<b>Description:</b>	Displays the temperature actual value for the Terminal Module 150 (TM150)			
<b>Index:</b>	[0] = Temperature channel 0 [1] = Temperature channel 1 [2] = Temperature channel 2 [3] = Temperature channel 3 [4] = Temperature channel 4			

[5] = Temperature channel 5  
 [6] = Temperature channel 6  
 [7] = Temperature channel 7  
 [8] = Temperature channel 8  
 [9] = Temperature channel 9  
 [10] = Temperature channel 10  
 [11] = Temperature channel 11

**Dependency:** For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[0...11] = 1, 4), the following applies:

- below the nominal response temperature, r4105[0...11] = -50 °C.
- above the nominal response temperature, r4105[0...11] = 250 °C.

For sensor type "KTY84", "PT100", "PT1000" (p4100[0...11] = 2, 5, 6) the following applies:

- the displayed value corresponds to the temperature actual value.

Refer to: p4100, p4111, r4112, r4113, r4114

**Note:** r4105[0...11] = -300 °C is displayed in the following cases:

- temperature actual value invalid (F35920 ... F35931 output).
- no sensor selected (p4100[0...11] = 0).

The temperature actual values can be grouped using p4111[0...2] and the maximum value, minimum value as well as the average value for each group evaluated (r4112[0...2], r4113[0...2], r4114[0...2]).

**r4105****CO: TM31 temperature actual value / TM31 temp\_act val**

TM31

**Can be changed:** -**Calculated:** -**Access level:** 1**Data type:** FloatingPoint32**Dyn. index:** -**Func. diagram:** 9549, 9576**P-Group:** Terminals**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** p2006**Expert list:** 1**Min****Max****Factory setting**

- [°C]

- [°C]

- [°C]

**Description:** Displays the temperature actual value for the Terminal Module 31 (TM31)

**Dependency:** For sensor type "PTC thermistor" (p4100 = 1), the following applies:

- below the nominal response temperature, r4105 = -50°C.
- above the nominal response temperature, r4105 = 250 °C.

For sensor type "KTY84" "PT1000" (p4100 = 2, 6), the following applies:

- the displayed value corresponds to the temperature actual value.

Refer to: p4100

**Note:** r4105 = -300 °C is displayed in the following cases:

- temperature actual value invalid (F35920 output).
- no sensor selected (p4100 = 0).

The temperature sensor is connected at terminals X522.7(+) and X522.8(-).

**p4108[0...5]****TM150 terminal block measuring method / TM150 meas method**

TM150

**Can be changed:** T**Calculated:** -**Access level:** 1**Data type:** Integer16**Dyn. index:** -**Func. diagram:** 9625, 9626, 9627**P-Group:** -**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0

3

1

**Description:** Sets the measuring method for the terminal block X531 ... X536 for the Terminal Module 150 (TM150).

For p4108[0...5] = 0 (1x2 wire evaluation):

- the temperature sensor is connected at terminals 1(+) and 2(-).

For p4108[0...5] = 1 (2x2 wire evaluation):

- the first temperature sensor is connected at terminals 1(+) and 2(-).
- the second temperature sensor is connected at terminals 3(+) and 4(-).

## 2 Parameters

### 2.2 List of parameters

For p4108[0...5] = 2 (3 wire evaluation):

- the temperature sensor is connected at terminals 3(+) and 4(-).
- the measuring conductor is connected at terminal 1(+).
- terminals 2(-) and 4(-) must be jumpered.

For p4108[0...5] = 3 (4 wire evaluation):

- the temperature sensor is connected at terminals 3(+) and 4(-).
- the measuring conductor is connected at terminals 1(+) and 2(-).

**Value:**  
 0: 1x2 wire evaluation  
 1: 2x2 wire evaluation  
 2: 3 wire evaluation  
 3: 4 wire evaluation

**Index:**  
 [0] = X531  
 [1] = X532  
 [2] = X533  
 [3] = X534  
 [4] = X535  
 [5] = X536

**Note:** The temperature sensors are connected to the following terminals:  
 X531 = channel 0 (for 2x2 wire evaluation, additionally channel 6)  
 X532 = channel 1 (for 2x2 wire evaluation, additionally channel 7)  
 X533 = channel 2 (for 2x2 wire evaluation, additionally channel 8)  
 X534 = channel 3 (for 2x2 wire evaluation, additionally channel 9)  
 X535 = channel 4 (for 2x2 wire evaluation, additionally channel 10)  
 X536 = channel 5 (for 2x2 wire evaluation, additionally channel 11)  
 For p4108[0...5] = 0, 2, 3 (1x2, 3, 4 wire evaluation):  
 The temperature channel belonging to the terminal block with the higher number is automatically deactivated (e.g. for X531 with 3-wire evaluation, channel 6 is deactivated).

---

#### p4109[0...11] TM150 wire resistance measurement / TM150 R\_wire meas

TM150	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9626, 9627
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0

**Description:** Setting to start the measurement of the wire resistance for a channel for the Terminal Module 150 (TM150).  
 For a 2 wire evaluation, the total wire resistance is measured and saved. During the temperature evaluation, the temperature actual value is automatically calibrated using the measured wire resistance.

Procedure:

1. Select the measuring method (1x2/2x2) for the corresponding terminal block (p4108[0...5] = 0, 1).
2. Set the required sensor type for the corresponding channel (p4100[x] = 1 ... 6, x = 0...5 or 0...11).
3. Jumper the sensor to be connected (short-circuit the sensor conductor close to the sensor).
4. Connect the sensor conductors to the appropriate terminals 1(+), 2(-) or 3(+), 4(-).
5. For the corresponding channel, start the measurement of the wire resistance (p4109[x] = 1).
6. After p4109[x] = 0, check the measured resistance value in p4110[x].
7. Remove the jumper across the temperature sensor.

**Value:**  
 0: Inactive  
 1: Start

**Index:**  
 [0] = Temperature channel 0  
 [1] = Temperature channel 1  
 [2] = Temperature channel 2  
 [3] = Temperature channel 3  
 [4] = Temperature channel 4  
 [5] = Temperature channel 5  
 [6] = Temperature channel 6  
 [7] = Temperature channel 7  
 [8] = Temperature channel 8  
 [9] = Temperature channel 9

[10] = Temperature channel 10  
 [11] = Temperature channel 11

**Dependency:** Refer to: p4100, p4108, p4110

**Notice:** Wire resistance measurement is only possible for 1x2 or 2x2 wire evaluation (p4108[0...5] = 0, 1).

**Note:** The wire resistance value can be also directly entered into p4110[0...11].  
 The automatic conductor calibration for 1x2 and 2x2 wire evaluation is always performed with the value in p4110[0...11].

---

**p4110[0...11] TM150 wire resistance value / TM150 R\_wire value**

TM150	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9626, 9627
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ohm]	3000.00 [ohm]	0.00 [ohm]

**Description:** Sets and displays the wire resistance for Terminal Module 150 (TM150).  
 The value is used for the automatic conductor calibration.  
 The value is automatically set by starting the wire resistance measurement (p4109[0...11]) of the corresponding channel.

**Index:** [0] = Temperature channel 0  
 [1] = Temperature channel 1  
 [2] = Temperature channel 2  
 [3] = Temperature channel 3  
 [4] = Temperature channel 4  
 [5] = Temperature channel 5  
 [6] = Temperature channel 6  
 [7] = Temperature channel 7  
 [8] = Temperature channel 8  
 [9] = Temperature channel 9  
 [10] = Temperature channel 10  
 [11] = Temperature channel 11

**Dependency:** Refer to: p4109

**Notice:** Wire resistance measurement is only possible for 1x2 or 2x2 wire evaluation (p4108[0...5] = 0, 1).

**Note:** Automatic conductor calibration is deactivated using p4110[0...11] = 0.

---

**p4111[0...2] TM150 group channel assignment / TM150 grp channel**

TM150	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9625
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 0000 0000 bin

**Description:** Assigns the temperature channels to groups for the Terminal Module 150 (TM150)  
 For each group, the following calculated values are provided from the temperature actual values (r4105[0...11]):  
 - Maximum value (r4112[0...2])  
 - Minimum value (r4113[0...2])  
 - average value (r4114[0...2])

**Index:** [0] = Group 0  
 [1] = Group 1  
 [2] = Group 2

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Temperature channel 0	Yes	No	-
	01	Temperature channel 1	Yes	No	-
	02	Temperature channel 2	Yes	No	-
	03	Temperature channel 3	Yes	No	-
	04	Temperature channel 4	Yes	No	-
	05	Temperature channel 5	Yes	No	-
	06	Temperature channel 6	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

07	Temperature channel 7	Yes	No	-
08	Temperature channel 8	Yes	No	-
09	Temperature channel 9	Yes	No	-
10	Temperature channel 10	Yes	No	-
11	Temperature channel 11	Yes	No	-

**Dependency:** Refer to: r4105, r4112, r4113, r4114

**Notice:** When forming groups, it must be ensured that in one particular group, only temperature channels with the following sensor types are included:

- "KTY84", "PT100", "PT1000" (p4100[0...11] = 2, 5, 6), real temperature actual value or alternatively

- "PTC thermistor", "bimetallic NC contact" (p4100[0...11] = 1, 4), fictitious temperature actual value (-50 °C, 250 °C)  
If these sensor types are combined within one group, then the calculated values for maximum, minimum and average value will be falsified.

**Note:** Active and inactive temperature channels can be included in one group. However, when calculating the values (r4112, r4113, r4114) only the active temperature channels with valid actual value are taken into account (r4105[0...11] not equal to -300 °C).

---

#### r4112[0...2] CO: TM150 group temperature actual value maximum value / TM150 grp temp max

TM150	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9625
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]

**Description:** Display and connector output for the maximum value of each group for the Terminal Module 150 (TM150). This value is calculated from the actual temperature values (r4105[0...11]) of each group.

**Recommendation:** The following connector inputs can use these connector outputs for interconnection:

- CI: p0603
- CI: p0608[0...3]
- CI: p0609[0...3]
- CI: p2051

**Index:**  
[0] = Group 0  
[1] = Group 1  
[2] = Group 2

**Dependency:** Refer to: r4105, p4111, r4113, r4114

---

#### r4113[0...2] CO: TM150 group temperature actual value minimum value / TM150 grp temp min

TM150	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9625
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]

**Description:** Display and connector output for the minimum value of each group for the Terminal Module 150 (TM150). This value is calculated from the actual temperature values (r4105[0...11]) of each group.

**Recommendation:** The following connector inputs can use these connector outputs for interconnection:

- CI: p0603
- CI: p0608[0...3]
- CI: p0609[0...3]
- CI: p2051

**Index:**  
[0] = Group 0  
[1] = Group 1  
[2] = Group 2

**Dependency:** Refer to: r4105, p4111, r4112, r4114

<b>r4114[0...2]</b>	<b>CO: TM150 group temperature average actual value / TM150 grp temp av</b>		
TM150	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9625
	<b>P-Group:</b> Terminals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Display and connector output for the average value of each group for the Terminal Module 150 (TM150). This value is calculated from the actual temperature values (r4105[0...11]) of each group.		
<b>Recommendation:</b>	The following connector inputs can use these connector outputs for interconnection: - CI: p0603 - CI: p0608[0...3] - CI: p0609[0...3] - CI: p2051		
<b>Index:</b>	[0] = Group 0 [1] = Group 1 [2] = Group 2		
<b>Dependency:</b>	Refer to: r4105, p4111, r4112, r4113		
<b>Note:</b>	If one group is assigned sensor type "PTC" or "bimetal NC contact", then the average value -300 °C is output.		
<b>p4117[0...2]</b>	<b>TM150 group sensor error effect / TM150 error effect</b>		
TM150	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9625
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the effect for an error of a sensor of a group for Terminal Module TM150 (TM150). For p4117 = 0, the following applies: The defective temperature sensor assigned to a group is not take into account when forming the group. For p4117 = 1, the following applies: For a sensor error, for the maximum value, minimum value and average value of the corresponding group, a value of -300 °C is output.		
<b>Value:</b>	0: Skip sensor 1: Output value = -300 °C		
<b>Index:</b>	[0] = Group 0 [1] = Group 1 [2] = Group 2		
<b>Dependency:</b>	Refer to: r4105, p4111, r4112, r4113, r4114		
<b>p4118[0...11]</b>	<b>TM150 fault threshold/alarm threshold hysteresis / TM150 thresh hyst</b>		
TM150	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9626, 9627
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [K]	50 [K]	5 [K]
<b>Description:</b>	Sets the hysteresis for the fault threshold/alarm threshold (p4102[0...23]) for the Terminal Module 150 (TM150).		
<b>Index:</b>	[0] = Temperature channel 0 [1] = Temperature channel 1 [2] = Temperature channel 2 [3] = Temperature channel 3 [4] = Temperature channel 4 [5] = Temperature channel 5		

## 2 Parameters

### 2.2 List of parameters

[6] = Temperature channel 6  
 [7] = Temperature channel 7  
 [8] = Temperature channel 8  
 [9] = Temperature channel 9  
 [10] = Temperature channel 10  
 [11] = Temperature channel 11

**Dependency:**

Refer to: p4102, p4103, r4104, r4105

**Note:**

The following applies for a corresponding alarm:

- Remains until the temperature actual value (r4105[x]) reaches or falls below the threshold value (p4102[2x] - hysteresis (p4118[x]).

The following applies for a corresponding fault:

- Remains until the temperature actual value (r4105[x]) reaches or falls below the threshold value (p4102[2x+1]) - hysteresis (p4118[x]) and the fault has been acknowledged.

#### p4119[0...11]

#### TM150 activate/deactivate smoothing / TM150 smooth act

TM150

**Can be changed:** T

**Calculated:** -

**Access level:** 1

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** 9626, 9627

**P-Group:** -

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

1

0

**Description:**

Setting to activate/deactivate the filter to smooth the temperature signal for the Terminal Module 150 (TM150). The smoothing is realized with a 1st order filter.

The effective smoothing time constant depends on the number of channels that are simultaneously active and is displayed in r4120.

**Value:**

0: Filter deactivated  
 1: Filter activated

**Index:**

[0] = Temperature channel 0  
 [1] = Temperature channel 1  
 [2] = Temperature channel 2  
 [3] = Temperature channel 3  
 [4] = Temperature channel 4  
 [5] = Temperature channel 5  
 [6] = Temperature channel 6  
 [7] = Temperature channel 7  
 [8] = Temperature channel 8  
 [9] = Temperature channel 9  
 [10] = Temperature channel 10  
 [11] = Temperature channel 11

**Dependency:**

Refer to: r4120

#### r4120[0...11]

#### TM150 actual smoothing time in ms / TM150 actual T ms

TM150

**Can be changed:** -

**Calculated:** -

**Access level:** 1

**Data type:** Unsigned16

**Dyn. index:** -

**Func. diagram:** 9626, 9627

**P-Group:** -

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

- [ms]

- [ms]

- [ms]

**Description:**

Displays the implemented smoothing time constant for the temperature filter for the Terminal Module 150 (TM150).

**Index:**

[0] = Temperature channel 0  
 [1] = Temperature channel 1  
 [2] = Temperature channel 2  
 [3] = Temperature channel 3  
 [4] = Temperature channel 4  
 [5] = Temperature channel 5  
 [6] = Temperature channel 6  
 [7] = Temperature channel 7  
 [8] = Temperature channel 8  
 [9] = Temperature channel 9

[10] = Temperature channel 10  
 [11] = Temperature channel 11  
**Dependency:** Refer to: r4105, p4111, r4112, r4113, p4122

---

<b>p4121</b>	<b>TM150 filter rated line frequency / TM150 fil f_line</b>		
TM150	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9626, 9627
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the rated line frequency for the filter to skip the line frequency for Terminal Module 150 (TM150).		
<b>Value:</b>	0: 50 Hz 1: 60 Hz		

---

<b>p4122[0...11]</b>	<b>TM150 smoothing time constant / TM150 T</b>		
TM150	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9626, 9627
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	100 [ms]	10000 [ms]	100 [ms]
<b>Description:</b>	Sets the smoothing time constant for the 1st order lowpass filter of the temperature channels. The effective smoothing time constant depends on the number of channels that are simultaneously active and is displayed in r4120. In order that the value becomes effective, p4122 must be set $\geq 2 \cdot$ channel sampling time. The following applies: Channel sampling time = active number of channels * 50ms For lower values, a smoothing of $2 \cdot$ channel sampling time.		
<b>Index:</b>	[0] = Temperature channel 0 [1] = Temperature channel 1 [2] = Temperature channel 2 [3] = Temperature channel 3 [4] = Temperature channel 4 [5] = Temperature channel 5 [6] = Temperature channel 6 [7] = Temperature channel 7 [8] = Temperature channel 8 [9] = Temperature channel 9 [10] = Temperature channel 10 [11] = Temperature channel 11		
<b>Dependency:</b>	Refer to: r4120		

---

<b>p4600[0...n]</b>	<b>Motor temperature sensor 1 sensor type / Temp_sens 1 type</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	60	0
<b>Description:</b>	Sets the sensor type of the first temperature sensor for the motor temperature monitoring.		
<b>Value:</b>	0: No sensor 10: PTC fault 11: PTC alarm 12: PTC alarm & timer 20: KTY84 30: Bimetallic NC contact fault		

## 2 Parameters

### 2.2 List of parameters

- 31: Bimetallic NC contact alarm
- 32: Bimetallic NC contact alarm & timer
- 60: PT1000

**Dependency:**

Refer to: r0458, p0600, p0601

**Note:**

This parameter is effective only when p0601 = 10.

PTC thermistor: Tripping resistance = 1650 Ohm

Information on using temperature sensors is provided in the following literature:

- hardware description of the appropriate components
- SINAMICS S120 Commissioning Manual

---

**p4601[0...n]****Motor temperature sensor 2 sensor type / Temp\_sens 2 type****VECTOR\_G****Can be changed:** C2(3), U, T**Calculated:** -**Access level:** 2**Data type:** Integer16**Dyn. index:** EDS, p0140**Func. diagram:** 8016**P-Group:** Motor**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0

60

0

**Description:**

Sets the sensor type of the second temperature sensor for the motor temperature monitoring.

**Value:**

- 0: No sensor
- 10: PTC fault
- 11: PTC alarm
- 12: PTC alarm & timer
- 20: KTY84
- 30: Bimetallic NC contact fault
- 31: Bimetallic NC contact alarm
- 32: Bimetallic NC contact alarm & timer
- 60: PT1000

**Dependency:**

Refer to: r0458, p0600, p0601

**Note:**

This parameter is effective only when p0601 = 10.

Terminals for KTY84/PT1000: X200.1, X200.2

PTC thermistor: Tripping resistance = 1650 Ohm

Information on using temperature sensors is provided in the following literature:

- hardware description of the appropriate components
- SINAMICS S120 Commissioning Manual

---

**p4602[0...n]****Motor temperature sensor 3 sensor type / Temp\_sens 3 type****VECTOR\_G****Can be changed:** C2(3), U, T**Calculated:** -**Access level:** 2**Data type:** Integer16**Dyn. index:** EDS, p0140**Func. diagram:** 8016**P-Group:** Motor**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0

60

0

**Description:**

Sets the sensor type of the third temperature sensor for the motor temperature monitoring.

**Value:**

- 0: No sensor
- 10: PTC fault
- 11: PTC alarm
- 12: PTC alarm & timer
- 20: KTY84
- 30: Bimetallic NC contact fault
- 31: Bimetallic NC contact alarm
- 32: Bimetallic NC contact alarm & timer
- 60: PT1000

**Dependency:**

Refer to: r0458, p0600, p0601

**Note:**

This parameter is effective only when p0601 = 10.

Terminals for PTC triplet and bimetallic: X200.3, X200.4

PTC thermistor: Tripping resistance = 1650 Ohm

Information on using temperature sensors is provided in the following literature:

- hardware description of the appropriate components
- SINAMICS S120 Commissioning Manual

<b>p4603[0...n] Motor temperature sensor 4 sensor type / Temp_sens 4 type</b>			
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	60	0
<b>Description:</b>	Sets the sensor type of the fourth temperature sensor for the motor temperature monitoring.		
<b>Value:</b>	0: No sensor 10: PTC fault 11: PTC alarm 12: PTC alarm & timer 20: KTY84 30: Bimetallic NC contact fault 31: Bimetallic NC contact alarm 32: Bimetallic NC contact alarm & timer 60: PT1000		
<b>Dependency:</b>	Refer to: r0458, p0600, p0601		
<b>Note:</b>	This parameter is effective only when p0601 = 10. Terminals for PTC triplet: X200.5, X200.6 PTC thermistor: Tripping resistance = 1650 Ohm Information on using temperature sensors is provided in the following literature: - hardware description of the appropriate components - SINAMICS S120 Commissioning Manual		

<b>p4610[0...n] Motor temperature sensor 1 sensor type MDS / Temp sens1 typ MDS</b>			
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	32	10
<b>Description:</b>	Sets the sensor type of the first temperature sensor for the motor temperature monitoring.		
<b>Value:</b>	0: No sensor 10: PTC fault 11: PTC alarm 12: PTC alarm & timer 20: KTY84, PT100, PT1000 30: Bimetallic NC contact fault 31: Bimetallic NC contact alarm 32: Bimetallic NC contact alarm & timer		
<b>Dependency:</b>	Refer to: r0458, p0600, p0601		
<b>Note:</b>	This parameter is effective only when p0601 = 11. PTC thermistor: Tripping resistance = 1650 Ohm Information on using temperature sensors is provided in the following literature: - hardware description of the appropriate components - SINAMICS S120 Commissioning Manual		

---

<b>p4611[0...n]</b>	<b>Motor temperature sensor 2 sensor type MDS / Temp sens2 typ MDS</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	32	10
<b>Description:</b>	Sets the sensor type of the second temperature sensor for the motor temperature monitoring.		
<b>Value:</b>	0: No sensor 10: PTC fault 11: PTC alarm 12: PTC alarm & timer 20: KTY84, PT100, PT1000 30: Bimetallic NC contact fault 31: Bimetallic NC contact alarm 32: Bimetallic NC contact alarm & timer		
<b>Dependency:</b>	Refer to: r0458, p0600, p0601		
<b>Note:</b>	This parameter is effective only when p0601 = 11. PTC thermistor: Tripping resistance = 1650 Ohm Information on using temperature sensors is provided in the following literature: - hardware description of the appropriate components - SINAMICS S120 Commissioning Manual		

---

<b>p4612[0...n]</b>	<b>Motor temperature sensor 3 sensor type MDS / Temp sens3 typ MDS</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	32	10
<b>Description:</b>	Sets the sensor type of the third temperature sensor for the motor temperature monitoring.		
<b>Value:</b>	0: No sensor 10: PTC fault 11: PTC alarm 12: PTC alarm & timer 20: KTY84, PT100, PT1000 30: Bimetallic NC contact fault 31: Bimetallic NC contact alarm 32: Bimetallic NC contact alarm & timer		
<b>Dependency:</b>	Refer to: r0458, p0600, p0601		
<b>Note:</b>	This parameter is effective only when p0601 = 11. PTC thermistor: Tripping resistance = 1650 Ohm Information on using temperature sensors is provided in the following literature: - hardware description of the appropriate components - SINAMICS S120 Commissioning Manual		

<b>p4613[0...n]</b>		<b>Motor temperature sensor 4 sensor type MDS / Temp sens4 typ MDS</b>	
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Motor	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	32	10
<b>Description:</b>	Sets the sensor type of the fourth temperature sensor for the motor temperature monitoring.		
<b>Value:</b>	0: No sensor 10: PTC fault 11: PTC alarm 12: PTC alarm & timer 20: KTY84, PT100, PT1000 30: Bimetallic NC contact fault 31: Bimetallic NC contact alarm 32: Bimetallic NC contact alarm & timer		
<b>Dependency:</b>	Refer to: r0458, p0600, p0601		
<b>Note:</b>	This parameter is effective only when p0601 = 11. PTC thermistor: Tripping resistance = 1650 Ohm Information on using temperature sensors is provided in the following literature: - hardware description of the appropriate components - SINAMICS S120 Commissioning Manual		

<b>r4620[0...3]</b>		<b>Motor temperature measured / Mot_temp meas</b>	
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8016
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays the actual temperature in the motor measured through temperature channels 1 ... 4.		
<b>Index:</b>	[0] = Temperature channel 1 [1] = Temperature channel 2 [2] = Temperature channel 3 [3] = Temperature channel 4		
<b>Note:</b>	For a value not equal to -200.0 °C, the following applies: - this temperature display is valid. - a KTY/PT1000 temperature sensor is connected. For a value equal to -200.0 °C, the following applies: - this temperature display is not valid (temperature sensor error). - a PTC sensor or bimetallic NC contact is connected. - the temperature sensor evaluation is deactivated (p0600 = 0 or p0601 = 0). - the sensor channel is deactivated (p460x = 0 or p461x = 0).		

<b>r4640[0...95]</b>		<b>Encoder diagnostics state machine / Enc diag stat_ma</b>	
VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the encoder diagnostics for the PROFIdrive interface.		

## 2 Parameters

### 2.2 List of parameters

---

<b>p4641[0...2]</b>	<b>OEM encoder diagnostic signal selection / OEM enc diag sel</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Encoder <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 65535	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the trace functionality for OEM encoder manufacturers.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		

---

<b>p4642</b>	<b>Test function encoder fault / Test encoder fault</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> Encoder <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Test function to initiate an encoder fault For a 0/1 transition, an encoder fault is output at the currently used motor encoder. For a 1/0 transition and an alarm acknowledgment, the encoder fault that was issued is cleared.		
<b>Notice:</b>	It is not permissible that a data set is switched over between issuing and deleting an encoder fault.		

---

<b>p4650</b>	<b>Encoder functional reserve component number / Enc fct_res num</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 399	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the component number (p0141) of the encoder whose functional reserve is to be displayed (r4651).		
<b>Dependency:</b>	Refer to: r4651		

---

<b>r4651[0...3]</b>	<b>Encoder functional reserve / Enc fct_reserve</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	Displays the functional reserve of the encoder selected via p4650. 0 ... 25 %: The function limit has been reached. A service is recommended. 26 ... 100 %: The encoder is working in the specified range.		
<b>Index:</b>	[0] = Function reserve 1 [1] = Function reserve 2 [2] = Function reserve 3 [3] = Function reserve 4		
<b>Dependency:</b>	Refer to: p4650		

**Note:** Value = 999 means:  
 - the component specified in p4650 is not connected  
 - the encoder does not support the display of the functional reserve

<b>p4652[0...2]</b>	<b>XIST1_ERW reset mode / XIST1_ERW res mode</b>		
<b>VECTOR_G</b>	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4750
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0
<b>Description:</b>	Sets the mode to reset the actual value in XIST_ERW (CO: r4653).		
<b>Value:</b>	0: Inactive 1: Reset with zero mark 2: Reset with BICO 3: Reset with selected zero mark		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: r4653, r4654, p4655		
<b>Note:</b>	The absolute value is only valid after passing the zero mark. If value = 1: The value in XIST1_ERW is reset when passing every zero mark. If value = 2: The value in XIST1_ERW is reset with a 0/1 edge via binector input p4655. If value = 3: The value in XIST1_ERW is reset after a 0/1 edge via binector input p4655 when passing the next zero mark.		

<b>p4652</b>	<b>XIST1_ERW reset mode / XIST1_ERW res mode</b>		
<b>ENC</b>	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4750
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0
<b>Description:</b>	Sets the mode to reset the actual value in XIST_ERW (CO: r4653).		
<b>Value:</b>	0: Inactive 1: Reset with zero mark 2: Reset with BICO 3: Reset with selected zero mark		
<b>Dependency:</b>	Refer to: r4653, r4654, p4655		
<b>Note:</b>	The absolute value is only valid after passing the zero mark. If value = 1: The value in XIST1_ERW is reset when passing every zero mark. If value = 2: The value in XIST1_ERW is reset with a 0/1 edge via binector input p4655. If value = 3: The value in XIST1_ERW is reset after a 0/1 edge via binector input p4655 when passing the next zero mark.		

## 2 Parameters

### 2.2 List of parameters

<b>r4653[0...2]</b>	<b>CO: XIST1_ERW actual value / XIST1_ERW actual</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4750	
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and connector output for the actual value XIST1_ERW.			
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3			
<b>Dependency:</b>	Refer to: p4652, r4654, p4655			
<b>r4653</b>	<b>CO: XIST1_ERW actual value / XIST1_ERW actual</b>			
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4750	
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and connector output for the actual value XIST1_ERW.			
<b>Dependency:</b>	Refer to: p4652, r4654, p4655			
<b>r4654.0...16</b>	<b>CO/BO: XIST1_ERW status / XIST1_ERW stat</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4750	
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and binector output to reset XIST1_ERW.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Encoder 1 XIST1_ERW reset	High	Low
	08	Geber 2 XIST1_ERW reset	High	Low
	16	Geber 3 XIST1_ERW reset	High	Low
				<b>FP</b>
				-
<b>Dependency:</b>	Refer to: p4652, r4653, p4655			
<b>Note:</b>	The reset of XIST1_ERW is initiated via binector input p4655. Binector output r4654 is reset with a 0 signal from binector input p4655.			
<b>r4654.0</b>	<b>CO/BO: XIST1_ERW status / XIST1_ERW stat</b>			
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4750	
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and binector output to reset XIST1_ERW.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	XIST1_ERW reset	High	Low
				<b>FP</b>
				-
<b>Dependency:</b>	Refer to: p4652, r4653, p4655			
<b>Note:</b>	The reset of XIST1_ERW is initiated via binector input p4655. Binector output r4654 is reset with a 0 signal from binector input p4655.			

---

<b>p4655[0...2]</b>	<b>BI: XIST1_ERW reset signal source / XIST1_ERW resS_src</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4750
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to reset XIST1_ERW (CO: r4653).		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: p4652, r4653, r4654		
<b>Note:</b>	The reset of XIST1_ERW depends on the selected mode (p4652).		

---

<b>p4655</b>	<b>BI: XIST1_ERW reset signal source / XIST1_ERW resS_src</b>		
ENC	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 4750
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to reset XIST1_ERW (CO: r4653).		
<b>Dependency:</b>	Refer to: p4652, r4653, r4654		
<b>Note:</b>	The reset of XIST1_ERW depends on the selected mode (p4652).		

---

<b>p4660[0...2]</b>	<b>Sensor Module filter bandwidth / SM Filt_bandw</b>		
VECTOR_G	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [kHz]	20000.00 [kHz]	0.00 [kHz]
<b>Description:</b>	Sets the filter bandwidth for Sensor Module SMx10 (resolver) and SMx20 (sin/cos). The value set on the Sensor Module is displayed in r4661. Currently, the Sensor Module hardware only supports the following values: - 0: The Sensor Module's default setting is used. - 50 kHz - 170 kHz - 500 kHz - Unlimited: Only the bandwidth of the operational amplifier is effective.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: r4661		
<b>Note:</b>	A value of zero is displayed if an encoder is not present.		

---

<b>p4660</b>	<b>Sensor Module filter bandwidth / SM Filt_bandw</b>		
ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [kHz]	20000.00 [kHz]	0.00 [kHz]
<b>Description:</b>	Sets the filter bandwidth for Sensor Module SMx10 (resolver) and SMx20 (sin/cos). The value set on the Sensor Module is displayed in r4661. Currently, the Sensor Module hardware only supports the following values: - 0: The Sensor Module's default setting is used. - 50 kHz - 170 kHz - 500 kHz - Unlimited: Only the bandwidth of the operational amplifier is effective.		
<b>Dependency:</b>	Refer to: r4661		
<b>Note:</b>	A value of zero is displayed if an encoder is not present.		

---

<b>r4661[0...2]</b>	<b>Sensor Module filter bandwidth display / SM Filt_bandw disp</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [kHz]	- [kHz]	- [kHz]
<b>Description:</b>	Display of the effective filter bandwidth for Sensor Module SMx10 (resolver) and SMx20 (sin/cos). The bandwidth of the filter is set using p4660.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: p4660		
<b>Note:</b>	A value of zero is displayed if an encoder is not present.		

---

<b>r4661</b>	<b>Sensor Module filter bandwidth display / SM Filt_bandw disp</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [kHz]	- [kHz]	- [kHz]
<b>Description:</b>	Display of the effective filter bandwidth for Sensor Module SMx10 (resolver) and SMx20 (sin/cos). The bandwidth of the filter is set using p4660.		
<b>Dependency:</b>	Refer to: p4660		
<b>Note:</b>	A value of zero is displayed if an encoder is not present.		

<b>p4662[0...n]</b>	<b>Encoder characteristic type / Enc char_type</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the characteristic type. For non-linear sensors, the interrelationship between the signal voltage and the position can be defined using a third degree polynomial.		
<b>Value:</b>	0: Characteristic inactive 1: Characteristic polynomial third degree		
<b>Dependency:</b>	Refer to: p4663, p4664, p4665, p4666		
<b>Note:</b>	If value = 1: A third degree polynomial is defined as follows: $F(x) = K3 * x^3 + K2 * x^2 + K1 * x + K0$ Coefficients K0 ... K3 should be defined and entered into p4663 ... p4666. The sensor range is emulated to $x = -0.5 \dots +0.5$ .		
<b>p4663[0...n]</b>	<b>Encoder characteristic K0 / Enc char K0</b>		
VECTOR_G, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Setting for coefficient K0 to calculate the characteristic (p4662).		
<b>Dependency:</b>	Refer to: p4662, p4664, p4665, p4666		
<b>p4664[0...n]</b>	<b>Encoder characteristic K1 / Enc char K1</b>		
VECTOR_G, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Setting for coefficient K1 to calculate the characteristic (p4662).		
<b>Dependency:</b>	Refer to: p4662, p4663, p4665, p4666		
<b>p4665[0...n]</b>	<b>Encoder characteristic K2 / Enc char K2</b>		
VECTOR_G, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Setting for coefficient K2 to calculate the characteristic (p4662).		
<b>Dependency:</b>	Refer to: p4662, p4663, p4664, p4666		

## 2 Parameters

### 2.2 List of parameters

<b>p4666[0...n]</b>	<b>Encoder characteristic K3 / Enc char K3</b>		
VECTOR_G, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Setting for coefficient K3 to calculate the characteristic (p4662).		
<b>Dependency:</b>	Refer to: p4662, p4663, p4664, p4665		

<b>p4670[0...n]</b>	<b>Analog sensor configuration / Ana_sens config</b>		
VECTOR_G, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin

**Description:** Sets the configuration for evaluation on the analog sensor.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	06	Set velocity to 0	Yes	No	-
	08	Pos val range	0.0 / 1.0 pulse	-0.5 / +0.5 pulse	-
	09	Fault/alarm messages	Alarm	Fault	-
	10	Channel B act	Yes	No	-
	11	Channel A act	Yes	No	-
	13	Commutation angle constant	Yes	No	-
	14	Suppress faults	Yes	No	-
	31	Extrapolation	ON	OFF	-

**Notice:** For bit 06:  
Setting the bit sets the velocity actual value (r0061) permanently to 0.

For bit 13:  
Setting the bit sets the commutation angle permanently to the commutation angle offset (p0431).

**Note:** For bit 09:  
A setting of bit = 0 will trigger a fault for the relevant channel if the actual value is invalid.  
A setting of bit = 1 will trigger an alarm for the relevant channel if the actual value is invalid.  
Zu Bit 10, 11:  
If both channels are activated, the actual value is generated from the mean value of both channels. If a channel fails (actual value invalid), it is not included when the mean value is generated.  
For bit 14:  
The bit is only evaluated for encoder 1. Otherwise no effect.

<b>p4671[0...n]</b>	<b>Analog sensor input / Ana_sens inp</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0
<b>Description:</b>	Sets the input circuit for the analog sensor.		
<b>Value:</b>	0: Differential 1: Single-ended A, B 2: Single-ended A*, B* 3: Single-ended A, B sensitive		

**Note:**

p4671 = 0:  
The two signals on a track are evaluated differentially.

p4671 = 1:  
Only the non-inverted signal on a track is evaluated.

p4671 = 2:  
Only the inverted signal on a track is evaluated.

p4671 = 3:  
Only the non-inverted signal on a track (high resolution) is evaluated.

---

<b>p4672[0...n]</b>	<b>Analog sensor channel A voltage at actual value zero / Ana_sens A U at 0</b>		
VECTOR_G, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-10.0000 [V]	10.0000 [V]	0.0000 [V]
<b>Description:</b>	Sets the voltage when the connected sensor is at actual value zero. At this voltage channel A supplies an actual value of zero.		

---

<b>p4673[0...n]</b>	<b>Analog sensor channel A voltage per encoder period / Ana_sens A U/per</b>		
VECTOR_G, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-10.0000 [V]	10.0000 [V]	6.0000 [V]
<b>Description:</b>	Sets the output voltage range to be mapped for the connected analog sensor. The voltage range is determined by the following parameters: - p4672 (voltage at actual value 0) - p4673 (voltage per encoder period)		
<b>Note:</b>	The minimum actual value which can be mapped is equal to p4672 - p4673/2. The maximum actual value which can be mapped is equal to p4672 + p4673/2.		

---

<b>p4674[0...n]</b>	<b>Analog sensor channel B voltage at actual value zero / Ana_sens B U at 0</b>		
VECTOR_G, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-10.0000 [V]	10.0000 [V]	0.0000 [V]
<b>Description:</b>	Sets the voltage when the connected sensor is at actual value zero. At this voltage channel B supplies an actual value of zero.		

## 2 Parameters

### 2.2 List of parameters

<b>p4675[0...n]</b>	<b>Analog sensor channel B voltage per encoder period / Ana_sens B U/per</b>				
VECTOR_G, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -		
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-10.0000 [V]	10.0000 [V]	6.0000 [V]		
<b>Description:</b>	Sets the output voltage range to be mapped for the connected analog sensor. The voltage range is determined by the following parameters: - p4674 (voltage at actual value 0) - p4675 (voltage per encoder period)				
<b>Note:</b>	The minimum actual value which can be mapped is equal to p4674 - p4675/2. The maximum actual value which can be mapped is equal to p4674 + p4675/2.				
<b>p4676[0...n]</b>	<b>Analog sensor range limit threshold / Ana_sens lim thr</b>				
VECTOR_G, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -		
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	0.0 [%]	100.0 [%]	100.0 [%]		
<b>Description:</b>	Sets the threshold for limit monitoring of the absolute actual value on the analog sensor. If this threshold is overshoot by the actual value of a channel, a corresponding fault/alarm (p4670.9) is output.				
<b>Dependency:</b>	Refer to: p4673, p4675				
<b>p4677[0...n]</b>	<b>Analog sensor LVDT configuration / Ana_sens LVDT conf</b>				
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 4		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 bin		
<b>Description:</b>	Sets the configuration for LVDT mode on the analog sensor.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	LVDT ON	Yes	No	-
	01	Track B excitation	Yes	No	-
	02	Fixed value amplitude	Yes	No	-
	03	Fixed value amplitude and phase	Yes	No	-
<b>p4678[0...n]</b>	<b>Analog sensor LVDT ratio / An_sens LVDT ratio</b>				
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 4		
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	0.00 [%]	200.00 [%]	50.00 [%]		
<b>Description:</b>	Sets the ratio for the LVDT sensor.				

<b>p4679[0...n]</b>	<b>Analog sensor LVDT phase / An_sens LVDT ph</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4), T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-360.00 [°]	360.00 [°]	0.00 [°]
<b>Description:</b>	Sets the phase for the LVDT sensor.		
<b>p4680[0...n]</b>	<b>Zero mark monitoring tolerance permissible / ZM_monit tol perm</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1000	4
<b>Description:</b>	Sets the permissible tolerance in encoder pulses for the zero mark distance in the context of zero mark monitoring. Causes fault F3x100 to appear less frequently.		
<b>Dependency:</b>	Refer to: F31100		
<b>p4681[0...n]</b>	<b>Zero mark monitoring tolerance window limit 1 positive / ZM tol lim 1 pos</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1000	2
<b>Description:</b>	Sets the positive tolerance window in encoder pulses for limit 1 for the zero mark monitoring. If the deviation is less than this limit, then the pulse number is not corrected. If it is higher than this limit, fault F3x131 is triggered. If fault F3x131 is re-parameterized to alarm (A) or no message (N), the encoder pulses which have not been corrected are added to the accumulator (p4688). The accumulator can be deactivated using p0437.7.		
<b>Dependency:</b>	Refer to: p0437, p4688 Refer to: F31131		
<b>Note:</b>	This monitoring is activated by setting p0437.2 = 1 (position actual value correction). The positive limit describes additional pulses due to EMC.		
<b>p4682[0...n]</b>	<b>Zero mark monitoring tolerance window limit 1 negative / ZM tol lim 1 neg</b>		
VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1001	0	-1001
<b>Description:</b>	Sets the negative tolerance window in encoder pulses for limit 1 for the zero mark monitoring. If the deviation is less than this limit, the PPR is not corrected. If it is higher than this limit, fault F3x131 is triggered. If fault F3x131 is re-parameterized to alarm (A) or no message (N), the encoder pulses which have not been corrected are added to the accumulator (p4688). The accumulator can be deactivated using p0437.7.		
<b>Dependency:</b>	Refer to: p0437, p4681, p4688 Refer to: F31131		

## 2 Parameters

### 2.2 List of parameters

**Note:** This monitoring is activated by setting p0437.2 = 1 (position actual value correction).  
For a set value = -1001, the negated value of p4681 is effective.  
The negative limit describes the pulses lost due to a covered glass panel in the incremental encoder.

---

#### p4683[0...n] Zero mark monitoring tolerance window alarm threshold positive / ZM tol A\_thr pos

VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	100000	0

**Description:** Sets the positive tolerance window in encoder pulses for limit 2 for the zero mark monitoring.  
Accumulator (p4688) is compared with this parameter, and where relevant, alarm A3x422 is output for 5 seconds.

**Dependency:** Refer to: p0437, p4681, p4682, p4688  
Refer to: F31131, A31422

**Note:** Zero mark monitoring is activated by setting p0437.2 = 1 (position actual value correction).

---

#### p4684[0...n] Zero mark monitoring tolerance window alarm threshold negative / ZM tol A\_thr neg

VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-100001	0	-100001

**Description:** Sets the negative tolerance window in encoder pulses for limit 2 for the zero mark monitoring.  
Accumulator (p4688) is compared with this parameter, and where relevant, alarm A3x422 is output for 5 seconds.

**Dependency:** Refer to: p0437, p4683, p4688  
Refer to: F31131, A31422

**Note:** Zero mark monitoring is activated by setting p0437.2 = 1 (position actual value correction).  
For a set value = -100001, the negated value of p4683 is effective.

---

#### p4685[0...n] Speed actual value mean value generation / n\_act mean val

VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	20	0

**Description:** Sets the number of current controller clock cycles for mean value generation of the speed actual value.

**Note:** Value = 0, 1: No mean value generation.  
Higher values also mean higher dead times for the speed actual value.

---

#### p4686[0...n] Zero mark minimum length / ZM min length

VECTOR_G, ENC	<b>Can be changed:</b> C2(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> EDS, p0140	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	10	1

**Description:** Sets the minimum length for the zero mark in 1/4 encoder pulses.

**Dependency:** Refer to: p0425, p0437

**Note:** The minimum length of the zero mark must be less than the zero mark distance (p4686 < p0425).  
The parameter is activated using p0437.1 = 1 (zero mark edge detection).

<b>p4688[0...2]</b>	<b>CO: Zero mark monitoring differential pulse count / ZM diff_pulse qty</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147483648	2147483647	0
<b>Description:</b>	Display and connector output for the identified incorrect pulses in lines. Also see p0437.7 (do not accumulate number of incorrect pulses).		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: p0437, p4681, p4682, p4683, p4684		
<b>Note:</b>	The display can only be reset to zero.		
<b>p4688</b>	<b>CO: Zero mark monitoring differential pulse count / ZM diff_pulse qty</b>		
ENC	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147483648	2147483647	0
<b>Description:</b>	Display and connector output for the identified incorrect pulses in lines. Also see p0437.7 (do not accumulate number of incorrect pulses).		
<b>Dependency:</b>	Refer to: p0437, p4681, p4682, p4683, p4684		
<b>Note:</b>	The display can only be reset to zero.		
<b>r4689[0...2]</b>	<b>CO: Squarewave encoder diagnostics / Sq-wave enc diag</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the encoder status according to PROFIdrive for a squarewave encoder.		
<b>Index:</b>	[0] = Encoder 1 [1] = Encoder 2 [2] = Encoder 3		
<b>Dependency:</b>	Refer to: A31422		
<b>Note:</b>	After alarm A3x422 is output, this parameter is set for 100 ms.		
<b>r4689</b>	<b>CO: Squarewave encoder diagnostics / Sq-wave enc diag</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Encoder	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the encoder status according to PROFIdrive for a squarewave encoder.		
<b>Dependency:</b>	Refer to: A31422		
<b>Note:</b>	After alarm A3x422 is output, this parameter is set for 100 ms.		

## 2 Parameters

### 2.2 List of parameters

<b>p4690</b>	<b>SMI spare part component number / SMI comp_no</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	399	0
<b>Description:</b>	Sets the component number for the SMI/DQI for which motor and/or encoder data should be saved, deleted or downloaded.		
<b>Dependency:</b>	Refer to: p4691, p4692, p4693		
<b>Note:</b>	DQI: DRIVE-CLiQ Sensor Integrated SMI: SINAMICS Sensor Module Integrated		
<b>p4691</b>	<b>SMI spare part save/download data / Save/DL SMI data</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	39	0
<b>Description:</b>	Setting for the saving/downloading/deletion of motor and/or encoder data for the component specified in p4690 (SMI/DQI).  A backup of this data can be saved to non-volatile memory. The backup procedure is performed automatically as part of the function for saving to non-volatile memory (p0977 = 1 or "Copy RAM to ROM"). If a part is replaced, the saved data can be reloaded.  Procedure: p4690 = set component number p4691 = 1, 2, 30: Set the required procedure (save/download/delete). p4691 = 9, 10, 36: Feedback signal on successful completion of the procedure. p4691 = 11... 22, 37, 38: Error values if the procedure could not be executed successfully.		
<b>Value:</b>	0: Inactive 1: Save SMI data 2: Download SMI data 9: SMI data downloaded and POWER ON required for component 10: SMI data backup complete 11: SMI data backup for selected component not found 12: Selected component not available or not connected 13: Insufficient memory space for backup 14: Format of saved data is incompatible 15: Transfer fault during data download 16: Transfer fault during data backup 17: Data backup does not match parameterized encoder/motor 18: Data backup directory not permissible 19: Component already contains data 20: Component does not contain any data 21: Component is not an SMI or a DQI 22: SMI data cannot be downloaded for component 30: Delete SMI data 35: Confirmation of SMI data delete required 36: SMI data deleted and POWER ON required for component 37: Access level not sufficient for delete 38: Delete SMI data not permitted for component 39: SMI data for component cannot be deleted		
<b>Dependency:</b>	Refer to: p4690, p4692, p4693		
<b>Notice:</b>	Once SMI/DQI data has been deleted or downloaded successfully, the component has to be switched on (POWER ON).		

- Note:**
- SMI: SINAMICS Sensor Module Integrated
  - DQI: DRIVE-CLiQ Sensor Integrated
  - Help for error value = 11:
    - Save the data for the original SMI on the memory card.
    - Use an SMI with a suitable hardware version.
  - Help for error value = 12:
    - set the correct component number or connect the component.
  - Help for error value = 13:
    - Use a memory card with more memory space.
  - Help for error value = 14:
    - Create a data backup on the memory card corresponding to the SMI type.
  - Help for error value = 15:
    - check the DRIVE-CLiQ wiring for the component.
  - Help for error value = 16:
    - check the DRIVE-CLiQ wiring for the component.
  - Help for error value = 17:
    - Save the data for the original SMI on the memory card.
  - Help for error value = 18:
    - set parameter p4693 to an appropriate value.
  - Help for error value = 19:
    - Perform an SMI delete or use a blank SMI.
  - Help for error value = 20:
    - Use an SMI that is not blank.
  - Help for error value = 21:
    - set the correct component number (p4690).
  - Note for error value = 22:
    - Data cannot be downloaded for component.
  - Help for error value = 35:
    - Reset parameter p4691 to 30.
  - Help for error value = 37:
    - set the access level to Expert or higher.
  - Help for error value = 38:
    - insert the SMI/DQI into the actual topology as an additional component (component number >= 200).
    - set the component number from the actual topology (p4690 >= 200).
    - set the correct component number (p4690 >= 200).
  - Note for error value = 39:
    - SMI already deleted or too old. Delete not possible.

<b>p4692</b>		<b>SMI spare part save data of all SMIs / Save SMI data</b>	
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	29	0
<b>Description:</b>	Setting to back up the data of all SMIs and DQIs featured in the target topology.		
<b>Value:</b>	0: Inactive 1: Save data of all SMIs and DQIs 10: Save all data successful 13: Insufficient memory space for backup 16: Transfer fault during data backup 20: Component does not contain any data 29: Not all components from target topology saved		

## 2 Parameters

### 2.2 List of parameters

**Note:** SMI: SINAMICS Sensor Module Integrated  
p4692 = 10: Automatic on successful completion of backup procedure.  
p4692 = 13, 16, 20, 29: Error values if the procedure could not be executed successfully.  
The procedure must be repeated if the data save operation was interrupted (e.g. if the power supply voltage failed).  
Help for error value = 13:  
- Use a memory card with more memory space.  
Help for error value = 16:  
- check the DRIVE-CLiQ wiring.  
Help for error value = 20:  
- Use an SMI that is not blank.  
Help for error value = 29:  
- check and correct the target and actual topologies for the SMIs.  
- Repeat the save procedure.

---

#### p4693[0...1]

#### SMI spare part data backup directory / SMI dat\_bkup dir

CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP

<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
0	399	0

**Description:**

Sets the directory for downloading and saving data.  
Example:  
The SMI has the component number 5 and the SMI data (motor/encoder data) is to be stored in subdirectory C205.  
--> p4690 = 5, p4693[0] = 205, p4691 = 1

**Index:**

[0] = Subdirectory selection  
[1] = Reserved

**Dependency:**

Refer to: p4691, r4694

**Notice:**

If p4693[0] is not equal to 0 and p4693[0] is not equal to p4690, the following applies:  
- Only a number  $\geq 200$  may be selected for the subdirectory when saving.  
- in the case of downloads, a selection for the subdirectory may only be made for an SMI/DQI with a component number  $\geq 200$  (preliminary component number) (p4690  $\geq 200$ ).

**Note:**

DQI: DRIVE-CLiQ Sensor Integrated  
SMI: SINAMICS Sensor Module Integrated  
For index 0:  
This index is used to select the subdirectory for saving and downloading data. The motor article number (MLFB) of the corresponding data backup is displayed in r4694.  
For p4693[0] = 0, the following applies:  
The directory is determined by the setting of p4690.

---

#### r4694[0...19]

#### SMI spare part data backup motor article number / SMI dat\_bkup MLFB

CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP

<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
-	-	-

**Description:**

Displays the motor article number (MLFB) of the data backup selected with p4693.

**Dependency:**

Refer to: p4691, p4692

**Caution:**



If the selected subdirectory contains a number of data sets, "More Datasets" is displayed in r4694[0...19].  
If there is no SMI data (motor/encoder data) in the selected subdirectory or if the selected subdirectory does not exist, the following applies:  
- the number of the next subdirectory located is displayed.  
- this subdirectory is not checked for valid SMI data.  
- if another subdirectory cannot be located, nothing is displayed in r4694[0...19].

**Note:** SMI: SINAMICS Sensor Module Integrated

<b>p4700[0...1]</b>	<b>Trace control / Trace control</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	1	0	
<b>Description:</b>	Setting to control the trace function.			
<b>Value:</b>	0: Stop trace 1: Start trace			
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1			
<b>p4701</b>	<b>Measuring function control / Meas fct ctrl</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	3	0	
<b>Description:</b>	Setting to control the measurement function.			
<b>Value:</b>	0: Stop measuring function 1: Start measuring function 2: Measuring function check parameterization 3: Start measuring function without enable signals			
<b>p4703[0...1]</b>	<b>Trace options / Trace options</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 bin	
<b>Description:</b>	Sets the options for the trace.			
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Automatically start trace with time slices	Yes	No
<b>Dependency:</b>	Refer to: p4700			
<b>Note:</b>	For bit 00: 0: The trace starts with p4700 as before. 1: When powering up, the trace starts immediately with the saved parameter settings with the start of the time slices.			

---

<b>r4705[0...1]</b>	<b>Trace status / Trace status</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	6	-
<b>Description:</b>	Displays the actual status of the trace.		
<b>Value:</b>	0: Trace inactive 1: Trace is recording presamples 2: Trace is waiting for trigger event 3: Trace is recording 4: Recording (trace) ended 5: Trace inactive with permissible configuration data 6: Trace inactive with inadmissible configuration data		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		

---

<b>r4706</b>	<b>Measuring function status / Meas fct status</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	5	-
<b>Description:</b>	Displays the actual status of the measuring function.		
<b>Value:</b>	0: Measurement function inactive 1: Measuring function parameterization checked 2: Measuring function waits for stabilizing time 3: Measuring function recording (tracing) 4: Measuring function trace ended with error 5: Measuring function trace successfully completed		

---

<b>p4707</b>	<b>Measurement function configuration / Meas fct config</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Setting to configure the measurement function.		
<b>Value:</b>	0: Standard 1: Free meas fct		
<b>Dependency:</b>	The parameter cannot be changed when the measurement function has been started (r4706 = 2, 3).		
<b>Note:</b>	This parameter involves the free measuring functions and is only active for p4810=6. For value = 0: The free measuring function is parameterized with master control. For value = 1: The free measuring function is parameterized without master control.		

<b>r4708[0...1]</b>	<b>Trace memory space required / Trace mem required</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the required memory in bytes for the actual parameterization.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>Dependency:</b>	Refer to: r4799		
<b>r4709[0...1]</b>	<b>Trace memory space required for measuring functions / Trace mem required</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the required memory in bytes for the actual parameterization. This applies, if the trace for the measurement functions is used.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>Dependency:</b>	Refer to: r4799		
<b>p4710[0...1]</b>	<b>Trace trigger condition / Trace Trig_cond</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> 1	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 8	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 2
<b>Description:</b>	Sets the trigger condition for the trace.		
<b>Value:</b>	1: Immediate trace start 2: Positive edge 3: Negative edge 4: Entry to hysteresis band 5: Leaving hysteresis band 6: Trigger at bit mask 7: Start with function generator 8: Trigger at bit mask with edge		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>p4711[0...5]</b>	<b>Trace trigger signal / Trace trig_signal</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0
<b>Description:</b>	Selects the trigger signal for the trace.		
<b>Index:</b>	[0] = Trace 0 parameter in BICO format [1] = Trace 1 parameter in BICO format		

## 2 Parameters

### 2.2 List of parameters

[2] = Trace 0 PINx with DO Id and chart Id  
 [3] = Trace 0 PINx with block Id and PIN Id  
 [4] = Trace 1 PINy with DO Id and chart Id  
 [5] = Trace 1 PINy with block Id and PIN Id

**Dependency:**

Only effective when p4710 does not equal 1.

**Note:**

It only makes sense to trace the PINs using the commissioning software.  
 For index 2(4) and 3(5) equal to zero, index 0(1) can only be written and vice versa.  
 For index 0 ... 1:  
 Here, the trigger signal for trace 0 or 1 is entered as parameter in the BICO format.  
 For trace with a physical address (p4789), the data type of the trigger signal is set here.  
 For index 2 ...3:  
 The triggering PIN for trace 0 is entered here.  
 Index 2 bit 31 ... 16: Number of the Drive Object (DO), bit 15 ... 0: Number of the chart  
 Index 3 bit 31 ... 16: Number of the block, bit 15 ... 0: Number of the PIN  
 For index 4 ... 5:  
 The triggering PIN for trace 1 is entered here.  
 Index 4 bit 31 ... 16: Number of the Drive Object (DO), bit 15 ... 0: Number of the chart  
 Index 5 bit 31 ... 16: Number of the block, bit 15 ... 0: Number of the PIN

#### p4712[0...1]

#### Trace trigger threshold / Trace trig\_thresh

CU\_G130\_PN,  
 CU\_G150\_PN,  
 CU\_G130\_DP,  
 CU\_G150\_DP

<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
-340.28235E36	340.28235E36	0.00

**Description:**

Sets the trigger threshold for the trace.

**Index:**

[0] = Trace 0  
 [1] = Trace 1

**Dependency:**

Only effective when p4710 = 2, 3.

#### p4713[0...1]

#### Trace tolerance band trigger threshold 1 / Trace trig thr 1

CU\_G130\_PN,  
 CU\_G150\_PN,  
 CU\_G130\_DP,  
 CU\_G150\_DP

<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
-340.28235E36	340.28235E36	0.00

**Description:**

Sets the first trigger threshold for trigger via tolerance band.

**Index:**

[0] = Trace 0  
 [1] = Trace 1

**Dependency:**

Only effective when p4710 = 4, 5.

#### p4714[0...1]

#### Trace tolerance band trigger threshold 2 / Trace trig thr 2

CU\_G130\_PN,  
 CU\_G150\_PN,  
 CU\_G130\_DP,  
 CU\_G150\_DP

<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
-340.28235E36	340.28235E36	0.00

**Description:**

Sets the second trigger threshold for trigger via tolerance band

**Index:**

[0] = Trace 0  
 [1] = Trace 1

**Dependency:**

Only effective when p4710 = 4, 5.

<b>p4715[0...1]</b>	<b>Trace bit mask trigger, bit mask / Trace trig mask</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 4294967295	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0
<b>Description:</b>	Sets the bit mask for the bit mask trigger.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>Dependency:</b>	Only effective when p4710 = 6 or p4710 = 8.		
<b>p4716[0...1]</b>	<b>Trace bit mask trigger trigger condition / Trace Trig_cond</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 4294967295	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0
<b>Description:</b>	Sets the trigger condition for bit mask trigger.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>Dependency:</b>	Only effective when p4710 = 6.		
<b>p4717</b>	<b>Measuring function number of averaging operations / Meas fct avg qty</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0
<b>Description:</b>	Sets the number of averaging operations for the measuring function.		
<b>p4718</b>	<b>Measuring function number of stabilizing periods / MeasFct StabPerQty</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0
<b>Description:</b>	Sets the number of stabilizing periods for the measuring function.		
<b>r4719[0...1]</b>	<b>Trace trigger index / Trace Trig_index</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trigger index in the trace buffer. The trigger event occurred at this point.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Only valid when p4705 = 4.

---

<b>p4720[0...1]</b>	<b>Trace recording cycle / Trace record_cyc</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [ms]	60000.000 [ms]	1.000 [ms]
<b>Description:</b>	Sets the recording cycle for the trace.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		

---

<b>p4721[0...1]</b>	<b>Trace recording time / Trace record_time</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [ms]	340.28235E36 [ms]	1000.000 [ms]
<b>Description:</b>	Sets the recording time for the trace.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		

---

<b>p4722[0...1]</b>	<b>Trace trigger delay / Trace trig_delay</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-340.28235E36 [ms]	340.28235E36 [ms]	0.000 [ms]
<b>Description:</b>	Sets the trigger delay for the trace. Trigger delay < 0: Pretrigger: Tracing (recording) starts the selected time before the trigger event actually occurs. Trigger delay > 0: Post trigger: Tracing does not start until the set time after the trigger event.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		

---

<b>p4723[0...1]</b>	<b>Trace time slice cycle / Trace cycle</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.03125 [ms]	4.00000 [ms]	0.12500 [ms]
<b>Description:</b>	Sets the time slice cycle in which the trace is called.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		

<b>p4724[0...1]</b>	<b>Trace average in the time range / Trace average</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> 0000 bin	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 0001 bin	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0000 bin
<b>Description:</b>	Sets the averaging in the time range for the trace.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>r4725[0...1]</b>	<b>Trace data type 1 traced / Trace rec type 1</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the recorded data type 1 for the trace.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>r4726[0...1]</b>	<b>Trace data type 2 traced / Trace rec type 2</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the recorded data type 2 for the trace.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>r4727[0...1]</b>	<b>Trace data type 3 traced / Trace rec type 3</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the recorded data type 3 for the trace.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		

<b>r4728[0...1]</b>	<b>Trace data type 4 traced / Trace rec type 4</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the recorded data type 4 for the trace.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>r4729[0...1]</b>	<b>Trace number of recorded values / Trace rec values</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the number of traced values for each signal.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>Dependency:</b>	Only valid when p4705 = 4.		
<b>p4730[0...5]</b>	<b>Trace record signal 0 / Trace record sig 0</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0
<b>Description:</b>	Selects the first signal to be traced.		
<b>Index:</b>	[0] = Trace 0 parameter in BICO format [1] = Trace 1 parameter in BICO format [2] = Trace 0 PINx with DO Id and chart Id [3] = Trace 0 PINx with block Id and PIN Id [4] = Trace 1 PINy with DO Id and chart Id [5] = Trace 1 PINy with block Id and PIN Id		
<b>p4731[0...5]</b>	<b>Trace record signal 1 / Trace record sig 1</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0
<b>Description:</b>	Selects the second signal to be traced.		
<b>Index:</b>	[0] = Trace 0 parameter in BICO format [1] = Trace 1 parameter in BICO format [2] = Trace 0 PINx with DO Id and chart Id [3] = Trace 0 PINx with block Id and PIN Id [4] = Trace 1 PINy with DO Id and chart Id [5] = Trace 1 PINy with block Id and PIN Id		

<b>p4732[0...5]</b>	<b>Trace record signal 2 / Trace record sig 2</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects the third signal to be traced.		
<b>Index:</b>	[0] = Trace 0 parameter in BICO format [1] = Trace 1 parameter in BICO format [2] = Trace 0 PINx with DO Id and chart Id [3] = Trace 0 PINx with block Id and PIN Id [4] = Trace 1 PINy with DO Id and chart Id [5] = Trace 1 PINy with block Id and PIN Id		
<b>p4733[0...5]</b>	<b>Trace record signal 3 / Trace record sig 3</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects the fourth signal to be traced.		
<b>Index:</b>	[0] = Trace 0 parameter in BICO format [1] = Trace 1 parameter in BICO format [2] = Trace 0 PINx with DO Id and chart Id [3] = Trace 0 PINx with block Id and PIN Id [4] = Trace 1 PINy with DO Id and chart Id [5] = Trace 1 PINy with block Id and PIN Id		
<b>p4734[0...5]</b>	<b>Trace record signal 4 / Trace record sig 4</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects the fifth signal to be traced.		
<b>Index:</b>	[0] = Trace 0 parameter in BICO format [1] = Trace 1 parameter in BICO format [2] = Trace 0 PINx with DO Id and chart Id [3] = Trace 0 PINx with block Id and PIN Id [4] = Trace 1 PINy with DO Id and chart Id [5] = Trace 1 PINy with block Id and PIN Id		
<b>p4735[0...5]</b>	<b>Trace record signal 5 / Trace record sig 5</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects the sixth signal to be traced.		
<b>Index:</b>	[0] = Trace 0 parameter in BICO format [1] = Trace 1 parameter in BICO format		

## 2 Parameters

### 2.2 List of parameters

[2] = Trace 0 PINx with DO Id and chart Id  
 [3] = Trace 0 PINx with block Id and PIN Id  
 [4] = Trace 1 PINy with DO Id and chart Id  
 [5] = Trace 1 PINy with block Id and PIN Id

<b>p4736[0...5]</b>	<b>Trace record signal 6 / Trace record sig 6</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects the seventh signal to be traced.		
<b>Index:</b>	[0] = Trace 0 parameter in BICO format [1] = Trace 1 parameter in BICO format [2] = Trace 0 PINx with DO Id and chart Id [3] = Trace 0 PINx with block Id and PIN Id [4] = Trace 1 PINy with DO Id and chart Id [5] = Trace 1 PINy with block Id and PIN Id		
<b>p4737[0...5]</b>	<b>Trace record signal 7 / Trace record sig 7</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects the eighth signal to be traced.		
<b>Index:</b>	[0] = Trace 0 parameter in BICO format [1] = Trace 1 parameter in BICO format [2] = Trace 0 PINx with DO Id and chart Id [3] = Trace 0 PINx with block Id and PIN Id [4] = Trace 1 PINy with DO Id and chart Id [5] = Trace 1 PINy with block Id and PIN Id		
<b>r4740[0...16383]</b>	<b>Trace 0 trace buffer signal 0 floating point / Trace 0 rec sig 0</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 0 and signal 0. The trace (record) buffer is sub-divided into memory banks, each containing 16384 values. Parameter p4795 can be used to toggle between the individual banks. Example A: The first 16384 values of signal 0, trace 0 are to be read out. In this case, memory bank 0 is set with p4795 = 0. The first 16384 values can now be read out using r4740[0] to r4740[16383]. Example B: The values 16385 to 32768 from signal 0, trace 0 are to be read out. In this case, memory bank 1 is set with p4795 = 1. The values can now be read out in r4740[0] to r4740[16383].		
<b>Dependency:</b>	Refer to: p4795		

**r4741[0...16383] Trace 0 trace buffer signal 1 floating point / Trace 0 rec sig 1**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace buffer (record buffer) for trace 0 and signal 1.

**Dependency:** Refer to: r4740, p4795

**r4742[0...16383] Trace 0 trace buffer signal 2 floating point / Trace 0 rec sig 2**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace buffer (record buffer) for trace 0 and signal 2.

**Dependency:** Refer to: r4740, p4795

**r4743[0...16383] Trace 0 trace buffer signal 3 floating point / Trace 0 rec sig 3**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace buffer (record buffer) for trace 0 and signal 3.

**Dependency:** Refer to: r4740, p4795

**r4744[0...16383] Trace 0 trace buffer signal 4 floating point / Trace 0 rec sig 4**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace buffer (record buffer) for trace 0 and signal 4.

**Dependency:** Refer to: r4740, p4795

**r4745[0...16383] Trace 0 trace buffer signal 5 floating point / Trace 0 rec sig 5**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace buffer (record buffer) for trace 0 and signal 5.

**Dependency:** Refer to: r4740, p4795

## 2 Parameters

### 2.2 List of parameters

---

<b>r4746[0...16383]</b>	<b>Trace 0 trace buffer signal 6 floating point / Trace 0 rec sig 6</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 0 and signal 6.		
<b>Dependency:</b>	Refer to: r4740, p4795		
<hr/>			
<b>r4747[0...16383]</b>	<b>Trace 0 trace buffer signal 7 floating point / Trace 0 rec sig 7</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 0 and signal 7.		
<b>Dependency:</b>	Refer to: r4740, p4795		
<hr/>			
<b>r4750[0...16383]</b>	<b>Trace 1 trace buffer signal 0 floating point / Trace 1 rec sig 0</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 1 and signal 0.		
<b>Dependency:</b>	Refer to: r4740, p4795		
<hr/>			
<b>r4751[0...16383]</b>	<b>Trace 1 trace buffer signal 1 floating point / Trace 1 rec sig 1</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 1 and signal 1.		
<b>Dependency:</b>	Refer to: r4740, p4795		
<hr/>			
<b>r4752[0...16383]</b>	<b>Trace 1 trace buffer signal 2 floating point / Trace 1 rec sig 2</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 1 and signal 2.		
<b>Dependency:</b>	Refer to: r4740, p4795		

**r4753[0...16383] Trace 1 trace buffer signal 3 floating point / Trace 1 rec sig 3**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace buffer (record buffer) for trace 1 and signal 3.

**Dependency:** Refer to: r4740, p4795

**r4754[0...16383] Trace 1 trace buffer signal 4 floating point / Trace 1 rec sig 4**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace buffer (record buffer) for trace 1 and signal 4.

**Dependency:** Refer to: r4740, p4795

**r4755[0...16383] Trace 1 trace buffer signal 5 floating point / Trace 1 rec sig 5**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace buffer (record buffer) for trace 1 and signal 5.

**Dependency:** Refer to: r4740, p4795

**r4756[0...16383] Trace 1 trace buffer signal 6 floating point / Trace 1 rec sig 6**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace buffer (record buffer) for trace 1 and signal 6.

**Dependency:** Refer to: r4740, p4795

**r4757[0...16383] Trace 1 trace buffer signal 7 floating point / Trace 1 rec sig 7**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace buffer (record buffer) for trace 1 and signal 7.

**Dependency:** Refer to: r4740, p4795

**r4760[0...16383] Trace 0 trace buffer signal 0 / Trace 0 rec sig 0**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace buffer (record buffer) for trace 0 and signal 0 as integer number.

**Note:** For signals, data type I32 or U32, the trace buffer is assigned as follows:  
r4760[0] = value 0  
r4760[1] = value 1  
...  
r4760[8191] = value 8191  
For signals, data type I16 or U16, the trace buffer is assigned as follows:  
r4760[0] = value 1 (bit 31 ... 16) and value 0 (bit 15 ... 0)  
r4760[1] = value 3 (bit 31 ... 16) and value 2 (bit 15 ... 0)  
...  
r4760[8191] = value 16383 (bit 31 ... 16) and value 16382 (bit 15 ... 0)  
For signals, data type I8 or U8, the trace buffer is assigned as follows:  
r4760[0] = value 3 (bit 31 ... 24) value 2 (bit 23 ... 16) value 1 (bit 15 ... 8) value 0 (bit 7 ... 0)  
r4760[1] = value 7 (bit 31 ... 24) value 6 (bit 23 ... 16) value 5 (bit 15 ... 8) value 4 (bit 7 ... 0)  
...  
r4760[8191] = value 32767 (bit 31 ... 24) value 32766 (bit 23 ... 16) value 32765 (bit 15 ... 8) value 32764 (bit 7 ... 0)

**r4761[0...16383] Trace 0 trace buffer signal 1 / Trace 0 rec sig 1**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace buffer (record buffer) for trace 0 and signal 1.

**Dependency:** Refer to: r4760

**r4762[0...16383] Trace 0 trace buffer signal 2 / Trace 0 rec sig 2**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the trace buffer (record buffer) for trace 0 and signal 2.

**Dependency:** Refer to: r4760

<b>r4763[0...16383] Trace 0 trace buffer signal 3 / Trace 0 rec sig 3</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 0 and signal 3.		
<b>Dependency:</b>	Refer to: r4760		
<b>r4764[0...16383] Trace 0 trace buffer signal 4 / Trace 0 rec sig 4</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 0 and signal 4.		
<b>Dependency:</b>	Refer to: r4760		
<b>r4765[0...16383] Trace 0 trace buffer signal 5 / Trace 0 rec sig 5</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 0 and signal 5.		
<b>Dependency:</b>	Refer to: r4760		
<b>r4766[0...16383] Trace 0 trace buffer signal 6 / Trace 0 rec sig 6</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 0 and signal 6.		
<b>Dependency:</b>	Refer to: r4760		
<b>r4767[0...16383] Trace 0 trace buffer signal 7 / Trace 0 rec sig 7</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 0 and signal 7.		
<b>Dependency:</b>	Refer to: r4760		

## 2 Parameters

### 2.2 List of parameters

---

<b>r4770[0...16383]</b>	<b>Trace 1 trace buffer signal 0 / Trace 1 rec sig 0</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -	
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 1 and signal 0.			
<b>Dependency:</b>	Refer to: r4760			
<hr/>				
<b>r4771[0...16383]</b>	<b>Trace 1 trace buffer signal 1 / Trace 1 rec sig 1</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -	
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 1 and signal 1.			
<b>Dependency:</b>	Refer to: r4760			
<hr/>				
<b>r4772[0...16383]</b>	<b>Trace 1 trace buffer signal 2 / Trace 1 rec sig 2</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -	
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 1 and signal 2.			
<b>Dependency:</b>	Refer to: r4760			
<hr/>				
<b>r4773[0...16383]</b>	<b>Trace 1 trace buffer signal 3 / Trace 1 rec sig 3</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -	
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 1 and signal 3.			
<b>Dependency:</b>	Refer to: r4760			
<hr/>				
<b>r4774[0...16383]</b>	<b>Trace 1 trace buffer signal 4 / Trace 1 rec sig 4</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -	
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 1 and signal 4.			
<b>Dependency:</b>	Refer to: r4760			

<b>r4775[0...16383] Trace 1 trace buffer signal 5 / Trace 1 rec sig 5</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 1 and signal 5.		
<b>Dependency:</b>	Refer to: r4760		
<b>r4776[0...16383] Trace 1 trace buffer signal 6 / Trace 1 rec sig 6</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 1 and signal 6.		
<b>Dependency:</b>	Refer to: r4760		
<b>r4777[0...16383] Trace 1 trace buffer signal 7 / Trace 1 rec sig 7</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the trace buffer (record buffer) for trace 1 and signal 7.		
<b>Dependency:</b>	Refer to: r4760		
<b>p4780[0...1] Trace physical address signal 0 / Trace PhyAddr Sig0</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> 0000 bin	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1111 1111 1111 1111 1111 1111 1111 1111 bin	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0000 bin
<b>Description:</b>	Sets the physical address for the first signal to be traced. The data type is defined using p4730.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		

<b>p4781[0...1]</b>	<b>Trace physical address signal 1 / Trace PhyAddr Sig1</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 bin	1111 1111 1111 1111 1111 1111 1111 1111 bin	0000 bin
<b>Description:</b>	Sets the physical address for the second signal to be traced. The data type is defined using p4731.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>p4782[0...1]</b>	<b>Trace physical address signal 2 / Trace PhyAddr Sig2</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 bin	1111 1111 1111 1111 1111 1111 1111 1111 bin	0000 bin
<b>Description:</b>	Sets the physical address for the third signal to be traced. The data type is defined using p4732.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>p4783[0...1]</b>	<b>Trace physical address signal 3 / Trace PhyAddr Sig3</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 bin	1111 1111 1111 1111 1111 1111 1111 1111 bin	0000 bin
<b>Description:</b>	Sets the physical address for the fourth signal to be traced. The data type is defined using p4733.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>p4784[0...1]</b>	<b>Trace physical address signal 4 / Trace PhyAddr Sig4</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 bin	1111 1111 1111 1111 1111 1111 1111 1111 bin	0000 bin
<b>Description:</b>	Sets the physical address for the fifth signal to be traced. The data type is defined using p4734.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		

<b>p4785[0...1]</b>	<b>Trace physical address signal 5 / Trace PhyAddr Sig5</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> 0000 bin	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1111 1111 1111 1111 1111 1111 1111 1111 bin	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0000 bin
<b>Description:</b>	Sets the physical address for the sixth signal to be traced. The data type is defined using p4735.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>p4786[0...1]</b>	<b>Trace physical address signal 6 / Trace PhyAddr Sig6</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> 0000 bin	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1111 1111 1111 1111 1111 1111 1111 1111 bin	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0000 bin
<b>Description:</b>	Sets the physical address for the seventh signal to be traced. The data type is defined using p4736.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>p4787[0...1]</b>	<b>Trace physical address signal 7 / Trace PhyAddr Sig7</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> 0000 bin	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1111 1111 1111 1111 1111 1111 1111 1111 bin	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0000 bin
<b>Description:</b>	Sets the physical address for the eighth signal to be traced. The data type is defined using p4737.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>p4789[0...1]</b>	<b>Trace physical address trigger signal / Trace PhyAddr Trig</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> FFFF FFFF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0000 hex
<b>Description:</b>	Sets the physical address for the trigger signal. The data type is defined by making the appropriate selection in p4711.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		

## 2 Parameters

### 2.2 List of parameters

---

<b>r4790[0...1]</b>	<b>Trace data type 5 traced / Trace rec type 5</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the recorded data type 5 for the trace.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<hr/>			
<b>r4791[0...1]</b>	<b>Trace data type 6 traced / Trace rec type 6</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the recorded data type 6 for the trace.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<hr/>			
<b>r4792[0...1]</b>	<b>Trace data type 7 traced / Trace rec type 7</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the recorded data type 7 for the trace.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<hr/>			
<b>r4793[0...1]</b>	<b>Trace data type 8 traced / Trace rec type 8</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the recorded data type 8 for the trace.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<hr/>			
<b>p4795</b>	<b>Trace memory bank changeover / Trace mem changeov</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 500	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0
<b>Description:</b>	Changes over the memory bank to read out the contents of the trace buffer.		
<b>Dependency:</b>	Refer to: r4740, r4741, r4742, r4743, r4750, r4751, r4752, r4753		

<b>r4797[0...1]</b>	<b>Trace 0 trigger instant / Trace 0 t_trigger</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the instant in time for fulfilling the trigger condition for trace recorder 0. The time comprises milliseconds (index 0) and days (index 1).		
<b>Index:</b>	[0] = Milliseconds [1] = Days		
<b>Dependency:</b>	Refer to: r2114, r3102, r4719		
<b>Notice:</b>	The accuracy of the trigger instant depends on the accuracy of the underlying basis time. For clarification: The trigger instant is calculated with a $\mu$ s accuracy. If the underlying basis time is only available with ms accuracy, then as a result of rounding effects, an inaccuracy of 1 ms can occur. When referred to r4719, the trigger instant can therefore deviate somewhat.		
<b>Note:</b>	If the time calculation of the drive can be synchronized with a higher-level control, then this time can be taken from the actual UTC time (r3102). Otherwise, the time is based on the system runtime (r2114).		
<b>r4798[0...1]</b>	<b>Trace 1 trigger instant / Trace 1 t_trigger</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the instant in time for fulfilling the trigger condition for trace recorder 1. The time comprises milliseconds (index 0) and days (index 1).		
<b>Index:</b>	[0] = Milliseconds [1] = Days		
<b>Dependency:</b>	Refer to: r2114, r3102, r4719		
<b>Notice:</b>	The accuracy of the trigger instant depends on the accuracy of the underlying basis time. For clarification: The trigger instant is calculated with a $\mu$ s accuracy. If the underlying basis time is only available with ms accuracy, then as a result of rounding effects, an inaccuracy of 1 ms can occur. When referred to r4719, the trigger instant can therefore deviate somewhat.		
<b>Note:</b>	If the time calculation of the drive can be synchronized with a higher-level control, then this time can be taken from the actual UTC time (r3102). Otherwise, the time is based on the system runtime (r2114).		
<b>r4799</b>	<b>Trace memory location free / Trace mem free</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the free memory for the trace in bytes.		
<b>Dependency:</b>	Refer to: r4708		

---

<b>p4800</b>	<b>Function generator control / FG control</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0
<b>Description:</b>	The function generator is started with p4800 = 1. The signal is only generated for a 1 signal of binector input p4819.		
<b>Value:</b>	0: Stop function generator 1: Start function generator 2: Check function generator parameterization 3: Start function generator without enable signals		
<b>Dependency:</b>	Refer to: p4819		

---

<b>r4805</b>	<b>Function generator status / FG status</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	6	-
<b>Description:</b>	Displays the actual status of the function generator.		
<b>Value:</b>	0: Inactive 1: Generate accelerating ramp to offset 2: Generate parameterized signal shape 3: Generate braking ramp 4: Function generator stopped due to missing enable signals 5: Function generator waits for BI: p4819 6: Function generator parameterization has been checked		
<b>Dependency:</b>	Refer to: p4800, p4819		

---

<b>r4806.0</b>	<b>BO: Function generator status signal / FG status signal</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status of the function generator. 0 signal: Function generator inactive 1 signal: Function generator running				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Bit 0	ON	OFF	-

<b>p4810</b>	<b>Function generator mode / FG operating mode</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	99	0
<b>Description:</b>	Sets the operating mode of the function generator.		
<b>Value:</b>	0: Connection at connector output r4818 1: Connection at current setpoint after filter and r4818 2: Connection as disturbing torque and r4818 3: Connection at speed setpoint after filter and r4818 4: Connection at current setpoint before filter and r4818 5: Connection at speed setpoint before filter and r4818 6: Connection for free measurement function r4818 and r4834 99: Connection at physical address and r4818		
<b>p4812</b>	<b>Function generator physical address / FG phys address</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Sets the physical address where the function generator is to be connected.		
<b>Dependency:</b>	Only effective when p4810 = 99.		
<b>p4813</b>	<b>Function generator physical address reference value / FG phys addr ref</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1.00	1000000.00	1.00
<b>Description:</b>	Sets the reference value for 100 % for referred inputs.		
<b>Dependency:</b>	Only effective when p4810 = 99.		
<b>p4815[0...2]</b>	<b>Function generator drive number / FG drive number</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Selects the required drive where the function generator is to be connected.		
<b>Index:</b>	[0] = First drive for connection [1] = Second drive for connection [2] = Third drive for connection		
<b>Dependency:</b>	Only effective when p4810 = 1, 2, 3, 4 or 5.		
<b>Note:</b>	For the function generator, only type SERVO, VECTOR or DC_CTRL type drives can be used.		

## 2 Parameters

### 2.2 List of parameters

<b>p4816</b>	<b>Function generator output signal integer number scaling / FG outp integ scal</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147483648	2147483647	0
<b>Description:</b>	Sets the scaling for the integer number of the output signal for the function generator.		
<b>Dependency:</b>	Refer to: r4805, r4817		
<b>Note:</b>	The parameter can only be changed in the following operating states: r4805 = 0, 4, 6		
<b>r4817</b>	<b>CO: Function generator output signal integer number / FG outp integ no.</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Display and connector output for the integer number of the output signal for the function generator.		
<b>Dependency:</b>	Refer to: p4816		
<b>Note:</b>	The value is output independent of the function generator operating mode.		
<b>r4818</b>	<b>CO: Function generator output signal / FG outp_sig</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the output signal for the function generator.		
<b>Dependency:</b>	Refer to: p4810		
<b>Note:</b>	The value is displayed independently of the function generator mode.		
<b>p4819</b>	<b>BI: Function generator control / FG control</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	1
<b>Description:</b>	Sets the signal source to control the function generator. When the function generator is running, signal generation is stopped with a 0 signal from BI: p4819 and p4800 is set to 0.		
<b>Dependency:</b>	Refer to: p4800		

<b>p4820</b>	<b>Function generator signal shape / FG signal shape</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	5	1
<b>Description:</b>	Sets the signal to be generated for the function generator.		
<b>Value:</b>	1: Square-wave 2: Staircase 3: Delta 4: Binary noise - PRBS (Pseudo Random Binary Signal) 5: Sine-wave		
<b>p4821</b>	<b>Function generator period / FG period duration</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	60000.00 [ms]	1000.00 [ms]
<b>Description:</b>	Sets the period of the signal to be generated for the function generator.		
<b>Dependency:</b>	Ineffective when p4820 = 4 (PRBS).		
<b>p4822</b>	<b>Function generator pulse width / FG pulse width</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	60000.00 [ms]	500.00 [ms]
<b>Description:</b>	Sets the pulse width for the signal to be generated for the function generator.		
<b>Dependency:</b>	Only effective when p4820 = 1 (square-wave).		
<b>p4823</b>	<b>Function generator bandwidth / FG bandwidth</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0025 [Hz]	16000.0000 [Hz]	4000.0000 [Hz]
<b>Description:</b>	Sets the bandwidth for the signal to be generated for the function generator.		
<b>Dependency:</b>	Only effective when p4820 = 4 (PRBS). Refer to: p4830 Refer to: A02041		

## 2 Parameters

### 2.2 List of parameters

<b>p4824</b>	<b>Function generator amplitude / FG amplitude</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1600.00 [%]	1600.00 [%]	5.00 [%]
<b>Description:</b>	Sets the amplitude for the signal to be generated for the function generator.		
<b>Dependency:</b>	Units are dependent on p4810. If p4810 = 1, 2, 4: The amplitude is referred to p2002 (reference current). If p4810 = 3, 5: The amplitude is referred to p2000 (reference speed).		
<b>p4825</b>	<b>Function generator 2nd amplitude / FG 2nd amplitude</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1600.00 [%]	1600.00 [%]	7.00 [%]
<b>Description:</b>	Sets the second amplitude for the signal to be generated for the function generator.		
<b>Dependency:</b>	Only effective for p4820 = 2 (staircase). Units are dependent on p4810. If p4810 = 1, 2, 4: The amplitude is referred to p2002 (reference current). If p4810 = 3, 5: The amplitude is referred to p2000 (reference speed).		
<b>p4826</b>	<b>Function generator offset / FG offset</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1600.00 [%]	1600.00 [%]	0.00 [%]
<b>Description:</b>	Sets the offset (DC component) of the signal to be generated for the function generator.		
<b>Dependency:</b>	Units are dependent on p4810. If p4810 = 1, 2, 4: The offset is referred to p2002 (reference current). If p4810 = 3, 5: The offset is referred to p2000 (reference speed). If p4810 = 2: In order to avoid the undesirable effects of play (backlash), the offset does not act on the current setpoint, but instead on the speed setpoint.		
<b>p4827</b>	<b>Function generator ramp-up time to offset / FG ramp-up offset</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	100000.00 [ms]	32.00 [ms]
<b>Description:</b>	Sets the ramp-up time to the offset for the function generator.		

<b>p4828</b>	<b>Function generator lower limit / FG lower limit</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-10000.00 [%]	0.00 [%]	-100.00 [%]
<b>Description:</b>	Sets the lower limit for the function generator.		
<b>Dependency:</b>	For p4810 = 2 the limit only applies to the current setpoint, but not the speed setpoint (offset).		
<b>p4829</b>	<b>Function generator upper limit / FG upper limit</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	10000.00 [%]	100.00 [%]
<b>Description:</b>	Sets the upper limit for the function generator.		
<b>Dependency:</b>	For p4810 = 2 the limit only applies to the current setpoint, but not the speed setpoint (offset).		
<b>p4830</b>	<b>Function generator time slice cycle / FG time slice</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.03125 [ms]	2.00000 [ms]	0.12500 [ms]
<b>Description:</b>	Sets the time slice cycle in which the function generator is called.		
<b>p4831</b>	<b>Function generator amplitude scaling / FG amplitude scal</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00000 [%]	200.00000 [%]	100.00000 [%]
<b>Description:</b>	Sets the scaling for the amplitude of the signal waveforms for all output channels. The value can be changed while the function generator is running.		
<b>p4832[0...2]</b>	<b>Function generator amplitude scaling / FG amplitude scal</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-340.28235E36 [%]	340.28235E36 [%]	100.00000 [%]
<b>Description:</b>	Sets the scaling for the amplitude of the signal waveforms separately for each output channel. The value cannot be changed while the function generator is running.		
<b>Index:</b>	[0] = First drive for connection [1] = Second drive for connection [2] = Third drive for connection		

## 2 Parameters

### 2.2 List of parameters

<b>p4833[0...2]</b>	<b>Function generator offset scaling / FG offset scal</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-340.28235E36 [%]	340.28235E36 [%]	100.00000 [%]
<b>Description:</b>	Sets the scaling for the offset of the signal waveforms separately for each output channel. The value cannot be changed while the function generator is running.		
<b>Index:</b>	[0] = First drive for connection [1] = Second drive for connection [2] = Third drive for connection		
<b>r4834[0...4]</b>	<b>CO: Function generator free measurement output signal / FG fr MeasFct outp</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the output signal for the free measurement function.		
<b>Index:</b>	[0] = Signal 1 [1] = Signal 2 [2] = Signal 3 [3] = Signal 4 [4] = Signal 5		
<b>Dependency:</b>	Refer to: p4810		
<b>Note:</b>	The signals are only output in the "free measurement function" operating mode (p4810 = 6)		
<b>p4835[0...4]</b>	<b>Function generator free measurement function scaling / FG fr MeasFct scal</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-200.00000 [%]	200.00000 [%]	100.00000 [%]
<b>Description:</b>	Sets the scaling of the output signals for the free measurement function.		
<b>Index:</b>	[0] = Signal 1 [1] = Signal 2 [2] = Signal 3 [3] = Signal 4 [4] = Signal 5		
<b>Note:</b>	The parameter cannot be changed when the measurement function has been started (r4706 = 2, 3).		
<b>p4840[0...1]</b>	<b>MTrace cycle number setting / Cycle number</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Trace and function generator	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Sets the number of cycles of a multiple trace. The multiple trace is deactivated with a value = 0.		

<b>Index:</b>	[0] = Trace 0 [1] = Trace 1
<b>Dependency:</b>	Refer to: r4841, p4844 Refer to: A02097, A02098
<b>Notice:</b>	A multiple trace can have a negative impact on the total system performance. From their inherent principle of operation, flash memory cards are subject to wear as a result of write operations. As a consequence, the lifetime of flash memory cards is reduced when using the multiple trace functionality.

---

<b>r4841[0...1]</b>	<b>MTrace cycle actual display / Cycle act display</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the currently running cycle (including deadtime) of the multiple trace.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>Dependency:</b>	Refer to: p4840, p4844		

---

<b>p4844[0...1]</b>	<b>MTrace ring buffer files number / Ring buff file qty</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Trace and function generator <b>Not for motor type:</b> - <b>Min</b> 10	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 10	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 10
<b>Description:</b>	Sets the number of ring buffer files for the measurement results of the multiple trace.		
<b>Index:</b>	[0] = Trace 0 [1] = Trace 1		
<b>Dependency:</b>	Refer to: p4840, r4841		

---

<b>r4950</b>	<b>TEC DO-specific number / TEC DO qty</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> OEM range <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 16	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Number of Technology Extensions installed on this drive object.		
<b>Dependency:</b>	Refer to: r4951, r4952, r4955, p4956, r4957, r4958, r4959, r4960		
<b>Note:</b>	DO: Drive Object TEC: Technology Extension		

---

<b>r4951</b>	<b>TEC DO-specific identifier total length / TEC DO ident tot_l</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> OEM range <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 144	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the total length of the identifiers of the Technology Extensions installed on this drive object.		
<b>Dependency:</b>	Refer to: r4950, r4952, r4955, p4956, r4957, r4958, r4959, r4960		

## 2 Parameters

### 2.2 List of parameters

**Note:** The identifier of a Technology Extension comprises a maximum of 8 characters plus separator.  
TEC: Technology Extension

---

<b>r4952</b>	<b>TEC DO-specific GUID total length / TEC DO GUID length</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> OEM range <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 288	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the total length of the GUIDs of the Technology Extensions installed on this drive object.		
<b>Dependency:</b>	Refer to: r4950, r4951, r4955, p4956, r4957, r4958, r4959, r4960		
<b>Note:</b>	The GUID of a Technology Extension comprises 16 characters plus 1 character major information plus 1 character, minor information. GUID: Globally Unique Identifier TEC: Technology Extension		

---

<b>r4955[0...n]</b>	<b>TEC DO-specific identifier / TEC DO ident</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> OEM range <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> r4951 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the identifier of the Technology Extensions installed on this drive object. r4955[0...8]: Identifier of Technology Extension 1 r4955[9...17]: Identifier of Technology Extension 2, ...		
<b>Dependency:</b>	Refer to: r4950, r4951, r4952, p4956, r4957, r4958, r4959, r4960		
<b>Notice:</b>	If there is no Technology Extension, then it is not possible to access an index.		
<b>Note:</b>	TEC: Technology Extension		

---

<b>p4956[0...n]</b>	<b>TEC DO-specific activation / TEC DO act</b>		
All objects	<b>Can be changed:</b> C1, T <b>Data type:</b> Integer16 <b>P-Group:</b> OEM range <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> r4950 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Setting to activate the Technology Extensions installed on this drive object. r4956[0]: Activation of Technology Extension 1 r4956[1]: Activation of Technology Extension 2, ...		
<b>Value:</b>	0: Technology Extension inactive 1: Technology Extension active		
<b>Dependency:</b>	Refer to: r4950, r4951, r4952, r4955, r4957, r4958, r4959, r4960		
<b>Notice:</b>	If there is no Technology Extension, then it is not possible to access an index.		
<b>Note:</b>	TEC: Technology Extension		

<b>r4957[0...n]</b>	<b>TEC DO-specific version / TEC DO Version</b>		
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> r4950	<b>Func. diagram:</b> -
	<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	-
<b>Description:</b>	Displays the version of the Technology Extensions installed on this drive object. r4957[0]: Version of Technology Extension 1 r4957[1]: Version of Technology Extension 2, ...		
<b>Dependency:</b>	Refer to: r4950, r4951, r4952, r4955, p4956, r4958, r4959, r4960		
<b>Notice:</b>	If there is no Technology Extension, then it is not possible to access an index.		
<b>Note:</b>	TEC: Technology Extension Example: The value 1010100 should be interpreted as V01.01.01.00.		
<b>r4958[0...n]</b>	<b>TEC DO-specific interface version / TEC DO interf_ vers</b>		
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> r4950	<b>Func. diagram:</b> -
	<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the interface version of Technology Extensions installed on this drive object. r4958[0]: Interface version of Technology Extension 1 r4958[1]: Interface version of Technology Extension 2, ...		
<b>Dependency:</b>	Refer to: r4950, r4951, r4952, r4955, p4956, r4957, r4959, r4960		
<b>Notice:</b>	If there is no Technology Extension, then it is not possible to access an index.		
<b>Note:</b>	TEC: Technology Extension Example: The value 1010100 should be interpreted as V01.01.01.00.		
<b>r4959[0...n]</b>	<b>TEC DO-specific GUID / TEC DO GUID</b>		
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> r4952	<b>Func. diagram:</b> -
	<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the GUIDs of the Technology Extensions installed on this drive object. r4959[0...15]: GUID of Technology Extension 1 r4959[16]: Major information of Technology Extension 1 r4959[17]: Minor information of Technology Extension 1 r4959[18...33]: GUID of Technology Extension 2 r4959[34]: Major information of Technology Extension 2 r4959[35]: Minor information of Technology Extension 2, ...		
<b>Dependency:</b>	Refer to: r4950, r4951, r4952, r4955, p4956, r4957, r4958, r4960		
<b>Notice:</b>	If there is no Technology Extension, then it is not possible to access an index.		
<b>Note:</b>	TEC: Technology Extension		

## 2 Parameters

### 2.2 List of parameters

<b>r4960[0...n]</b>	<b>TEC DO-specific GUID drive object / TEC DO GUID DO</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> OEM range <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> r4952 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the GUIDs of this drive object of the Technology Extensions installed on the memory card/device memory. r4960[0...15]: GUID of this drive object of Technology Extension 1 r4960[16]: Major information of this drive object of Technology Extension 1 r4960[17]: Minor information of this drive object of Technology Extension 1 r4960[18...33]: GUID of this drive object of Technology Extension 2 r4960[34]: Major information of this drive object of Technology Extension 2 r4960[35]: Minor information of this drive object of Technology Extension 2, ...		
<b>Dependency:</b>	Refer to: r4950, r4951, r4952, r4955, p4956, r4957, r4958, r4959		
<b>Notice:</b>	If there is no Technology Extension, then it is not possible to access an index.		
<b>Note:</b>	TEC: Technology Extension		
<b>p4961[0...n]</b>	<b>TEC DO-specific logbook module selection / TEC DO log module</b>		
All objects	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 <b>P-Group:</b> OEM range <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> r4950 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> FFFF FFFF hex	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 hex
<b>Description:</b>	Only for service purposes.		
<b>Note:</b>	TEC: Technology Extension		
<b>r4975</b>	<b>TEC invalid number / TEC inval qty</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> OEM range <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the number of invalid Technology Extensions installed on the memory card/device memory.		
<b>Dependency:</b>	Refer to: r4976, r4978, r4979		
<b>Note:</b>	TEC: Technology Extension		
<b>r4976</b>	<b>TEC invalid identifier total length / TEC inval ID tot_l</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> OEM range <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the total length of the IDs of all the invalid Technology Extensions installed on the memory card/device memory.		
<b>Dependency:</b>	Refer to: r4975, r4978, r4979		
<b>Note:</b>	TEC: Technology Extension The identifier of an invalid Technology Extension comprises a maximum of 8 characters plus separator.		

<b>r4978[0...n]</b>	<b>TEC invalid identifier / TEC inval ID</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> r4976	<b>Func. diagram:</b> -
	<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the IDs of all the invalid Technology Extensions installed on the memory card/device memory. r4978[0...8]: Identifier of invalid Technology Extension 1 r4978[9...17]: Identifier of invalid Technology Extension 2, ...		
<b>Dependency:</b>	Refer to: r4975, r4976, r4979		
<b>Notice:</b>	An index cannot be accessed if there is no valid Technology Extension available.		
<b>Note:</b>	TEC: Technology Extension		
<b>r4979[0...n]</b>	<b>TEC invalid error code / TEC inv error code</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> r4975	<b>Func. diagram:</b> -
	<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the error code of the invalid Technology Extensions installed on the memory card/device memory. r4979[0]: Fault value of Technology Extension 1 r4979[1]: Fault value of Technology Extension 2, ...		
<b>Dependency:</b>	Refer to: r4975, r4976, r4978		
<b>Notice:</b>	An index cannot be accessed if there is no valid Technology Extension available.		
<b>Note:</b>	TEC: Technology Extension The value in the error code must be interpreted in binary form. The bits have the following meaning: Bit 0: Incompatible version of the TEC interface. Bit 1: Technology Extension could not be loaded. Bit 2: Incorrect description files. Bit 3: Technology Extension does not define a CPU type. Bit 4: Technology Extension for this device not available (incorrect CPU type). Bit 5: Technology Extension for this device not available (incorrect type ID). Bit 6: Incorrect description files (Const/Startup incompatible).		
<b>r4985</b>	<b>TEC number / TEC qty</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	16	-
<b>Description:</b>	Displays the number of Technology Extensions installed on the memory card/device memory.		
<b>Dependency:</b>	Refer to: r4986, r4987, r4988, r4989, r4990, r4991, r4992, r4993, r4994		
<b>Note:</b>	TEC: Technology Extension		

## 2 Parameters

### 2.2 List of parameters

<b>r4986</b>	<b>TEC identifier total length / TEC ident tot_I</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	144	-
<b>Description:</b>	Displays the total length of the IDs of all the Technology Extensions installed on the memory card/device memory.		
<b>Dependency:</b>	Refer to: r4985, r4987, r4988, r4989, r4990, r4991, r4992, r4993, r4994		
<b>Note:</b>	TEC: Technology Extension The identifier of a Technology Extension comprises a maximum of 8 characters plus separator.		
<b>r4987</b>	<b>TEC GUID total length / TEC GUID tot_Igth</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	288	-
<b>Description:</b>	Displays the total length of the GUIDs of all the Technology Extensions installed on the memory card/device memory.		
<b>Dependency:</b>	Refer to: r4985, r4986, r4988, r4989, r4990, r4991, r4992, r4993, r4994		
<b>Note:</b>	The GUID of a Technology Extension comprises 16 characters plus 1 character major information plus 1 character, minor information. GUID: Globally Unique Identifier TEC: Technology Extension		
<b>r4988[0...n]</b>	<b>TEC identifier / TEC ident</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> r4986	<b>Func. diagram:</b> -
	<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the IDs of all the Technology Extensions installed on the memory card/device memory. r4988[0...8]: Identifier of Technology Extension 1 r4988[9...17]: Identifier of Technology Extension 2, ...		
<b>Dependency:</b>	Refer to: r4985, r4986, r4987, r4989, r4990, r4991, r4992, r4993, r4994		
<b>Notice:</b>	If there is no Technology Extension, then it is not possible to access an index.		
<b>Note:</b>	TEC: Technology Extension		
<b>r4989[0...n]</b>	<b>TEC version / TEC version</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> r4985	<b>Func. diagram:</b> -
	<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the version of all the Technology Extensions installed on the memory card/device memory. r4989[0]: Version of Technology Extension 1 r4989[1]: Version of Technology Extension 2, ...		
<b>Dependency:</b>	Refer to: r4985, r4986, r4987, r4988, r4990, r4991, r4992, r4993, r4994		
<b>Notice:</b>	If there is no Technology Extension, then it is not possible to access an index.		

**Note:** TEC: Technology Extension  
 Example:  
 The value 1010100 should be interpreted as V01.01.01.00.

<b>r4990[0...n]</b>	<b>TEC interface version / TEC interf_vers</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> r4985	<b>Func. diagram:</b> -
	<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the interface version of all the Technology Extensions installed on the memory card/device memory. r4990[0]: Interface version of Technology Extension 1 r4990[1]: Interface version of Technology Extension 2, ...		
<b>Dependency:</b>	Refer to: r4985, r4986, r4987, r4988, r4989, r4991, r4992, r4993, r4994		
<b>Notice:</b>	If there is no Technology Extension, then it is not possible to access an index.		
<b>Note:</b>	TEC: Technology Extension Example: The value 1010100 should be interpreted as V01.01.01.00.		

<b>r4991[0...n]</b>	<b>TEC GUID / TEC GUID</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> r4987	<b>Func. diagram:</b> -
	<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the GUIDs of all the Technology Extensions installed on the memory card/device memory. r4991[0...15]: GUID of Technology Extension 1 r4991[16]: Major information of Technology Extension 1 r4991[17]: Minor information of Technology Extension 1 r4991[18...33]: GUID of Technology Extension 2 r4991[34]: Major information of Technology Extension 2 r4991[35]: Minor information of Technology Extension 2, ...		
<b>Dependency:</b>	Refer to: r4985, r4986, r4987, r4988, r4989, r4990, r4992, r4993, r4994		
<b>Notice:</b>	If there is no Technology Extension, then it is not possible to access an index.		
<b>Note:</b>	TEC: Technology Extension		

<b>r4992[0...n]</b>	<b>TEC GUID ES / TEC GUID ES</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> r4987	<b>Func. diagram:</b> -
	<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the GUIDs of all the Technology Extensions installed on the memory card/device memory. r4992[0...15]: GUID of Technology Extension 1 r4992[16]: Major information of Technology Extension 1 r4992[17]: Minor information of Technology Extension 1 r4992[18...33]: GUID of Technology Extension 2 r4992[34]: Major information of Technology Extension 2 r4992[35]: Minor information of Technology Extension 2, ...		
<b>Dependency:</b>	Refer to: r4985, r4986, r4987, r4988, r4989, r4990, r4991, r4993, r4994		

## 2 Parameters

### 2.2 List of parameters

**Notice:** If there is no Technology Extension, then it is not possible to access an index.

**Note:** TEC: Technology Extension

#### r4993[0...n]

#### TEC activation status / TEC act stat

CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP

<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
<b>Data type:</b> Integer16	<b>Dyn. index:</b> r4985	<b>Func. diagram:</b> -
<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
0	1	-

**Description:** Displays the activation status of the Technology Extensions installed on the memory card/device memory.

r4993[0]: Activation of Technology Extension 1  
r4993[1]: Activation of Technology Extension 2, ...

**Value:**  
0: Technology Extension inactive  
1: Technology Extension active

**Dependency:** Refer to: r4985, r4986, r4987, r4988, r4989, r4990, r4991, r4992, r4994

**Notice:** If there is no Technology Extension, then it is not possible to access an index.

**Note:** TEC: Technology Extension

#### r4994[0...n]

#### TEC properties / TEC property

CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP

<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> r4985	<b>Func. diagram:</b> -
<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
-	-	-

**Description:** Displays the properties of all the Technology Extensions installed on the memory card/device memory.

r4994[0]: Property of Technology Extension 1  
r4994[1]: Property of Technology Extension 2, ...

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Properties diagnostics bit 0	Yes	No	-
	01	Properties diagnostics bit 1	Yes	No	-
	02	Properties diagnostics bit 2	Yes	No	-
	03	OEM	No	Yes	-
	04	Properties diagnostics bit 4	Yes	No	-
	05	Properties diagnostics bit 5	Yes	No	-
	06	Properties diagnostics bit 6	Yes	No	-

**Dependency:** Refer to: r4985, r4986, r4987, r4988, r4989, r4990, r4991, r4992, r4993

**Notice:** If there is no Technology Extension, then it is not possible to access an index.

**Note:** TEC: Technology Extension

The parameter is only for internal Siemens diagnostics.

#### r4995[0...n]

#### TEC external version / TEC ext version

CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP

<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> r4985	<b>Func. diagram:</b> -
<b>P-Group:</b> OEM range	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
-	-	-

**Description:** Displays the external version of all the Technology Extensions installed on the memory card/device memory.

r4995[0]: External version of Technology Extension 1  
r4995[1]: External version of Technology Extension 2, ...

**Dependency:** Refer to: r4985, r4986, r4987, r4988, r4990, r4991, r4992, r4993, r4994

**Notice:** If there is no Technology Extension, then it is not possible to access an index.

**Note:** Example:  
The value 1010100 should be interpreted as V01.01.01.00.

<b>p5271[0...n]</b>		<b>Online tuning configuration / Ot config</b>			
VECTOR_G (J_estimator)	<b>Can be changed:</b> T <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> REL <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 0000 bin		
<b>Description:</b>	Sets the configuration for the online tuning.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	02	Load adaptation Kp	Yes	No	5045
	06	Do not change Kp	Yes	No	-
<b>Note:</b>	For bit 02: The estimated load moment of inertia is taken into account for the speed controller gain (see p5273). For bit 06: The speed controller gain set in p1460 is not changed when calculating the controller data.				

<b>p5310[0...n]</b>		<b>Moment of inertia precontrol configuration / J_est config</b>			
VECTOR_G (J_estimator)	<b>Can be changed:</b> C2(3), U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 bin		
<b>Description:</b>	Configuration of the moment of inertia precontrol when the moment of inertia estimator is active.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Activating calculations	Yes	No	-
	01	Activating the moment of inertia precontrol	Yes	No	-
<b>Dependency:</b>	The function module "Moment of inertia estimator" (r0108.10) must be activated for the "Moment of inertia precontrol" function.				
<b>Note:</b>	Refer to: r5311, p5312, p5313, p5314, p5315 Possible bit combinations: Bit 1, 0 = 0, 0 --> function not active = 0, 1 --> cyclic calculation of the coefficients without moment of inertia precontrol (commissioning) = 1, 0 --> moment of inertia precontrol activated (without cyclic calculation of the coefficients) = 1, 1 --> moment of inertia precontrol activated (with cyclic calculation of the coefficients) For bit 00: Calculation for the constant and linear coefficients of the moment of inertia precontrol is activated. The results are written to parameters (p5312, p5313, p5314, p5315). For bit 01: The moment of inertia precontrol is activated. The moment of inertia is calculated from the currently measured load torque and the saved coefficients (p5312, p5313, p5314, p5315).				

<b>r5311[0...n]</b>		<b>Moment of inertia precontrol status word / J_prectrl ZSW</b>																																						
VECTOR_G (J_estimator)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -																																					
<b>Description:</b>	Displays the status word for the moment of inertia precontrol.																																							
<b>Bit field:</b>	<table border="1"> <thead> <tr> <th>Bit</th> <th>Signal name</th> <th>1 signal</th> <th>0 signal</th> <th>FP</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>New measuring points are available</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>01</td> <td>New parameters being calculated</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>02</td> <td>Moment of inertia precontrol active</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>03</td> <td>Calculation of positive coefficients completed</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>04</td> <td>Calculation of negative coefficients completed</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> <tr> <td>05</td> <td>Results are being written to parameter</td> <td>Yes</td> <td>No</td> <td>-</td> </tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	FP	00	New measuring points are available	Yes	No	-	01	New parameters being calculated	Yes	No	-	02	Moment of inertia precontrol active	Yes	No	-	03	Calculation of positive coefficients completed	Yes	No	-	04	Calculation of negative coefficients completed	Yes	No	-	05	Results are being written to parameter	Yes	No	-				
Bit	Signal name	1 signal	0 signal	FP																																				
00	New measuring points are available	Yes	No	-																																				
01	New parameters being calculated	Yes	No	-																																				
02	Moment of inertia precontrol active	Yes	No	-																																				
03	Calculation of positive coefficients completed	Yes	No	-																																				
04	Calculation of negative coefficients completed	Yes	No	-																																				
05	Results are being written to parameter	Yes	No	-																																				
<b>Dependency:</b>	The function module "Moment of inertia estimator" (r0108.10) must be activated for the "Moment of inertia precontrol" function. Refer to: p5310, p5312, p5313, p5314, p5315																																							

<b>p5312[0...n]</b>		<b>Moment of inertia precontrol linear positive / J_est lin pos</b>		
VECTOR_G (J_estimator)	<b>Can be changed:</b> C2(3), U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> -340.28235E36 [s <sup>2</sup> ]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 340.28235E36 [s <sup>2</sup> ]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000000 [s <sup>2</sup> ]	
<b>Description:</b>	Setting of the linear coefficients for moment of inertia precontrol in the positive direction when the moment of inertia estimator is active. The estimated moment of inertia is obtained according to the following formula: Moment of inertia (J) = linear coefficient (p5312) * load torque + constant coefficient (p5313)			
<b>Dependency:</b>	The function module "Moment of inertia estimator" (r0108.10) must be activated for the "Moment of inertia precontrol" function. Refer to: p5310, r5311, p5313, p5314, p5315			

<b>p5313[0...n]</b>		<b>Moment of inertia precontrol constant positive / J_est const pos</b>		
VECTOR_G (J_estimator)	<b>Can be changed:</b> C2(3), U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> -340.28235E36 [kgm <sup>2</sup> ]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 25_1 <b>Scaling:</b> - <b>Max</b> 340.28235E36 [kgm <sup>2</sup> ]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> p0100 <b>Expert list:</b> 1 <b>Factory setting</b> 0.000000 [kgm <sup>2</sup> ]	
<b>Description:</b>	Setting of the constant coefficients for moment of inertia precontrol in the positive direction when the moment of inertia estimator is active. The estimated moment of inertia is obtained according to the following formula: Moment of inertia (J) = linear coefficient (p5312) * load torque + constant coefficient (p5313)			
<b>Dependency:</b>	The function module "Moment of inertia estimator" (r0108.10) must be activated for the "Moment of inertia precontrol" function. Refer to: p5310, r5311, p5312, p5314, p5315			

<b>p5314[0...n]</b>	<b>Moment of inertia precontrol linear negative / J_est lin neg</b>		
VECTOR_G (J_estimator)	<b>Can be changed:</b> C2(3), U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> -340.28235E36 [s <sup>2</sup> ]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 340.28235E36 [s <sup>2</sup> ]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.000000 [s <sup>2</sup> ]
<b>Description:</b>	Setting of the linear coefficients for moment of inertia precontrol in the negative direction when the moment of inertia estimator is active. The estimated moment of inertia is obtained according to the following formula: Moment of inertia (J) = linear coefficient (p5314) * load torque + constant coefficient (p5315)		
<b>Dependency:</b>	The function module "Moment of inertia estimator" (r0108.10) must be activated for the "Moment of inertia precontrol" function. Refer to: p5310, r5311, p5312, p5313, p5315		
<b>p5315[0...n]</b>	<b>Moment of inertia precontrol constant negative / J_est const neg</b>		
VECTOR_G (J_estimator)	<b>Can be changed:</b> C2(3), U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> - <b>Min</b> -340.28235E36 [kgm <sup>2</sup> ]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> 25_1 <b>Scaling:</b> - <b>Max</b> 340.28235E36 [kgm <sup>2</sup> ]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> p0100 <b>Expert list:</b> 1 <b>Factory setting</b> 0.000000 [kgm <sup>2</sup> ]
<b>Description:</b>	Setting of the constant coefficients for moment of inertia precontrol in the negative direction when the moment of inertia estimator is active. The estimated moment of inertia is obtained according to the following formula: Moment of inertia (J) = linear coefficient (p5314) * load torque + constant coefficient (p5315)		
<b>Dependency:</b>	The function module "Moment of inertia estimator" (r0108.10) must be activated for the "Moment of inertia precontrol" function. Refer to: p5310, r5311, p5312, p5313, p5314		
<b>p5316[0...n]</b>	<b>Moment of inertia precontrol change time moment of inertia / J_prectrl t J</b>		
VECTOR_G (J_estimator)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Closed-loop control <b>Not for motor type:</b> REL <b>Min</b> 10.00 [ms]	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 5000.00 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 500.00 [ms]
<b>Description:</b>	Sets the change time for the moment of inertia for the moment of inertia precontrol. Lower values mean that faster changes are possible. For a higher value, this estimated value is smoothed more significantly.		
<b>Dependency:</b>	Refer to: p1400, p1560, p1562		
<b>p5350[0...n]</b>	<b>Mot_temp_mod 1/3 boost factor at standstill / Standst boost_fact</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Motor <b>Not for motor type:</b> ASM, SESM, REL <b>Min</b> 1.0000	<b>Calculated:</b> - <b>Dyn. index:</b> MDS, p0130 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 2.0000	<b>Access level:</b> 2 <b>Func. diagram:</b> 8017 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 2.0000
<b>Description:</b>	Sets the boost factor for the copper losses at standstill for motor temperature models 1 and 3. The entered factor is active for speed n = 0 [rpm]. This factor is linearly reduced down to 1 between speeds n = 0 ... 1 [rpm].		

## 2 Parameters

### 2.2 List of parameters

The following values are required to calculate the boost factor:

- stall current (I<sub>0</sub>, p0318, catalog value)
- thermal stall current (I<sub>th0</sub>, catalog value)

The boost factor is calculated as follows:

$$- p5350 = (I_0 / I_{th0})^2$$

**Dependency:** Refer to: p0318, p0612, p5390, p5391

Refer to: F07011, A07012, A07014

**Notice:** When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.

**Note:** Temperature model 1 (I2t):

The following applies for firmware version < 4.7 SP6 or p0612.8 = 0:

- parameter p5350 is not active. Internally, a fixed boost factor of 1.333 is used as basis for the calculation.

The following applies from firmware version 4.7 SP6 and p0612.8 = 1:

- parameter p5350 becomes active as described above.

#### r5389.0...8

#### CO/BO: Mot\_temp status word faults/alarms / Mot\_temp ZSW F/A

VECTOR\_G

**Can be changed:** -

**Calculated:** -

**Access level:** 2

**Data type:** Unsigned16

**Dyn. index:** -

**Func. diagram:** 8016

**P-Group:** Displays, signals

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:**

Display and BICO output for faults and alarms of the motor temperature monitoring.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Motor temperature measurement fault active	Yes	No	-
01	Motor temperature model fault active	Yes	No	-
02	Encoder temperature measurement fault active	Yes	No	-
04	Motor temperature measurement alarm active	Yes	No	-
05	Motor temperature measurement alarm active	Yes	No	-
08	Current reduction active	Yes	No	-

**Dependency:**

Refer to: r0034, p0612, r0632

Refer to: F07011, A07012, A07910

**Note:**

For bit 00, 04:

The motor temperature is measured using a temperature sensor (p0600, p0601). When the bit is set, a high temperature is identified, and a corresponding signal is additionally output.

For bit 01, 05:

The motor temperature is monitored based on a temperature model (p0612). When the bit is set, a high temperature is identified, and a corresponding signal is additionally output.

For bit 02:

The encoder temperature is measured using a temperature sensor. When the bit is set, a high temperature is identified, and a corresponding signal is additionally output.

For bit 08:

When reaching the motor temperature alarm threshold, reduction of the maximum current is set as response (p0610 = 1). When the bit is set, reduction of the maximum current is active.

<b>p5390[0...n]</b>	<b>Mot_temp_mod 1/3 alarm threshold / A thresh</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8017
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [°C]	200.0 [°C]	110.0 [°C]
<b>Description:</b>	<p>Sets the alarm threshold for monitoring the motor temperature for motor temperature models 1 and 3. The stator winding temperature (r0632) is used to initiate the signal. The following applies for temperature model 1 (I2t):</p> <ul style="list-style-type: none"> <li>- only effective from firmware version 4.7 SP6 and p0612.8 = 1.</li> <li>- Alarm A07012 is output after the alarm threshold is exceeded.</li> <li>- when commissioning a catalog motor for the first time, the threshold value is copied from p0605 to p5390.</li> </ul> <p>The following applies for temperature model 3:</p> <ul style="list-style-type: none"> <li>- after the alarm threshold is exceeded, alarm A07012 is output and a calculated delay time (t = p5371/p5381) is started.</li> <li>- if the delay time has expired and the alarm threshold has, in the meantime, not been fallen below, then fault F07011 is output.</li> </ul>		
<b>Dependency:</b>	<p>Refer to: r0034, p0605, p0612, r0632, p5391</p> <p>Refer to: F07011, A07012, A07014</p>		
<b>Notice:</b>	<p>When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.</p>		
<b>Note:</b>	<p>The hysteresis is 2 K.</p>		
<b>p5391[0...n]</b>	<b>Mot_temp_mod 1/3 fault threshold / F thresh</b>		
VECTOR_G	<b>Can be changed:</b> C2(3), U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8017
	<b>P-Group:</b> Motor	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0 [°C]	200.0 [°C]	120.0 [°C]
<b>Description:</b>	<p>Sets the fault threshold for monitoring the motor temperature for motor temperature models 1 and 3. Fault F07011 is output after the fault threshold is exceeded. The stator winding temperature (r0632) is used to initiate the signal. The following applies for temperature model 1 (I2t):</p> <ul style="list-style-type: none"> <li>- only effective from firmware version 4.7 SP6 and p0612.8 = 1.</li> <li>- when commissioning a catalog motor for the first time, the threshold value is copied from p0615 to p5391.</li> </ul>		
<b>Dependency:</b>	<p>Refer to: r0034, p0612, p0615, r0632, p5390</p> <p>Refer to: F07011, A07014</p>		
<b>Notice:</b>	<p>When selecting a catalog motor (p0301), this parameter is automatically pre-assigned and is write protected. Information in p0300 should be carefully observed when removing write protection.</p>		
<b>Note:</b>	<p>The hysteresis is 2 K.</p>		
<b>r5397</b>	<b>Mot_temp_mod 3 ambient temperature image p0613 / AmbTmp image p0613</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8019
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	<p>Displays the ambient temperature for motor temperature model 3. This value is used to calculate the utilization display (p0034). The parameter value is an image of p0613.</p>		

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Refer to: r0034  
**Note:** Users cannot see and change parameter p0613 (only Siemens internal).

---

<b>r5398[0...n]</b>	<b>Mot_temp_mod 3 alarm threshold image p5390 / A thr image p5390</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8019
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays the alarm threshold for monitoring the motor temperature for motor temperature model 3. This value is used to calculate the utilization display (p0034). The parameter value is an image of p5390.		
<b>Dependency:</b>	Refer to: p5390 Refer to: F07011, A07012, A07014		
<b>Note:</b>	Users cannot see and change parameter p5390 (only Siemens internal).		

---

<b>r5399[0...n]</b>	<b>Mot_temp_mod 3 fault threshold image p5391 / F thr image p5391</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> MDS, p0130	<b>Func. diagram:</b> 8019
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> ASM, SESM, REL	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Sets the fault threshold for monitoring the motor temperature for motor temperature model 3. Fault F07011 is output after the fault threshold is exceeded. The parameter value is an image of p5391.		
<b>Dependency:</b>	Refer to: p5391 Refer to: F07011, A07012, A07014		
<b>Note:</b>	Users cannot see and change parameter p5391 (only Siemens internal).		

---

<b>r5600</b>	<b>Pe energy-saving mode ID / Pe mode ID</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2381, 2382
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	-
<b>Description:</b>	Displays the PROFlenergy mode ID of the effective energy-saving mode.		
<b>Value:</b>	0: POWER OFF 2: Energy-saving mode 2 240: Operation 255: Ready		
<b>Note:</b>	Pe: PROFlenergy profiles		

<b>p5602[0...1]</b>	<b>Pe energy-saving mode pause time minimal / Pe mod t_pause min</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2381		
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	300000 [ms]	4294967295 [ms]	[0] 300000 [ms] [1] 480000 [ms]		
<b>Description:</b>	Sets the minimum possible pause time for the energy-saving mode. The value is the sum of the following times: - Energy-saving mode transition time - Operating state transition time regular - Energy-saving mode, time of minimum stay				
<b>Index:</b>	[0] = Reserved [1] = Mode 2				
<b>Note:</b>	It is not permissible that the value is less than the sum of the "energy-saving mode transition time" and the "operating state transition time" (system properties). Pe: PROFInergy profiles				
<b>p5606[0...1]</b>	<b>Pe energy-saving mode time of maximum stay / Pe t_max_stay</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2381		
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	0 [ms]	4294967295 [ms]	4294967295 [ms]		
<b>Description:</b>	Sets the time of maximum stay for the energy-saving mode.				
<b>Index:</b>	[0] = Reserved [1] = Mode 2				
<b>Note:</b>	Pe: PROFInergy profiles				
<b>p5611</b>	<b>Pe energy-saving properties general / Pe properties gen</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2381, 2382		
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 bin		
<b>Description:</b>	Sets the general properties for energy-saving.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Inhibit PROFInergy control commands	Yes	No	-
	01	Drive initiates OFF1 when transitioning to energy-saving mode	Yes	No	-
	02	Trans to energy-saving mode from PROFIdrive state S3/S4 poss	Yes	No	-
<b>Note:</b>	Pe: PROFInergy profiles PROFIdrive state S3: ready PROFIdrive state S4: operation				

<b>p5612[0...1]</b>	<b>Pe energy-saving properties mode-dependent / Pe properties mod</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	[0] 0110 bin [1] 0000 bin	
<b>Description:</b>	Sets the mode-dependent properties for energy-saving.			
<b>Index:</b>	[0] = Reserved [1] = Mode 2			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Reserved	Yes	No
				<b>FP</b>
				-
<b>Note:</b>	Pe: PROFenergy profiles			

<b>r5613.0...1</b>	<b>CO/BO: Pe energy-saving active/inactive / Pe save act/inact</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2382	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and binector output for the state display PROFenergy energy saving active or inactive.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Pe active	Yes	No
	01	Pe inactive	Yes	No
				<b>FP</b>
				-
<b>Note:</b>	Bit 0 and bit 1 are inverse of one another. Pe: PROFenergy profiles			

<b>p5614</b>	<b>BI: Pe set switching-on inhibited signal source / Pe sw-on_inh s_src</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2382	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0	
<b>Description:</b>	Sets the signal source to set in the PROFdrive state S1 "switching-on inhibited".			
<b>Dependency:</b>	Refer to: r5613			
<b>Note:</b>	Pe: PROFenergy profiles			

<b>p6397</b>	<b>Motor Module phase shift second system / MM ph_sh 2nd sys</b>			
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	8	0	
<b>Description:</b>	Sets the phase shift of the second system with respect to the first system for the Motor Module for a 12-pulse gating unit.			
<b>Value:</b>	0: Shift by +30 ° 1: Shift by -30 ° 2: Shift by 0 ° 3: Shift by +90 °			

- 4: Shift by -90 °
- 5: Shift by +120 °
- 6: Shift by -120 °
- 7: Shift by +150 °
- 8: Shift by -150 °

**Dependency:**

Refer to: p7003

**Notice:**

The parameter is only evaluated if p7003 = 2.

**Note:**

For p6397 = 0 the following applies: The second systems leads for a positive direction of rotation.

For p6397 = 1 the following applies: The second systems lags for a positive direction of rotation.

**p6700[0...n]****Voltage model angle smoothing / U\_mod ang smooth**

VECTOR\_G (n/M)

**Can be changed:** U, T**Calculated:** -**Access level:** 4**Data type:** FloatingPoint32**Dyn. index:** DDS, p0180**Func. diagram:** -**P-Group:** -**Unit group:** -**Unit selection:** -**Not for motor type:** ASM, PMSM, REL**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0 [ms]

100 [ms]

0 [ms]

**Description:**

Sets the smoothing of the flux orientation of the voltage model for a separately excited synchronous motor.

**p6870[0...n]****VSM offset voltage u1 - u2 / VSM offset u1 - u2**

VECTOR\_G (n/M)

**Can be changed:** T**Calculated:** -**Access level:** 3**Data type:** FloatingPoint32**Dyn. index:** p0150**Func. diagram:** -**P-Group:** Closed-loop control**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-100.000 [V]

100.000 [V]

0.000 [V]

**Description:**

Offset voltage between phases L1 and L2 for the Voltage Sensing Module (VSM). The value is automatically determined with the drive switched-off and stationary when the offset calculation is enabled. The last determined value is saved if the offset calculation is inhibited. If the offset calculation is inhibited, then a fixed value can also be entered here.

**Dependency:**

Refer to: p6903

**Note:**

Offset calibration is only automatically activated if the resulting motor voltage is less than 1% of the rated voltage.

**p6871[0...n]****VSM offset voltage u2 - u3 / VSM offset u2 - u3**

VECTOR\_G (n/M)

**Can be changed:** T**Calculated:** -**Access level:** 3**Data type:** FloatingPoint32**Dyn. index:** p0150**Func. diagram:** -**P-Group:** Closed-loop control**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-100.000 [V]

100.000 [V]

0.000 [V]

**Description:**

Offset voltage between phases L2 and L3 for the Voltage Sensing Module (VSM). The value is automatically determined with the drive switched-off and stationary when the offset calculation is enabled. The last determined value is saved if the offset calculation is inhibited. If the offset calculation is inhibited, then a fixed value can also be entered here.

**Dependency:**

Refer to: p6903

**Note:**

Offset calibration is only automatically activated if the resulting motor voltage is less than 1% of the rated voltage.

<b>p6903[0...n]</b>	<b>Voltage actual values, offset mode / U_ActVal offs mode</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> p0150	<b>Func. diagram:</b> -
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	1
<b>Description:</b>	Sets the offset mode for voltage actual value sensing. When the mode is enabled (p6903 = 0), for a pulse inhibit for stator and excitation and zero speed, the offset calibration is automatically started. Offset calibration is inhibited when the mode is inhibited (p6903 = 1). The values last determined in p6870 and p6871 are saved. However, they can also be overwritten by a fixed value.		
<b>Value:</b>	0: Offset calculation enabled 1: Offset calculation inhibited		
<b>Dependency:</b>	Refer to: p6870, p6871		
<b>Note:</b>	Offset mode can only be set for actual value sensing functions that are available in the hardware.		

<b>r6991[0...4]</b>	<b>Recorder settings display / Rec setting displ</b>		
VECTOR_G (Rec), B_INF (Rec)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8144
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the values calculated for the recorder		
<b>Index:</b>	[0] = Actual trace number [1] = Actual recording time [2] = Actual pretrigger time [3] = Actual post trigger time [4] = Actual number of signals		
<b>Dependency:</b>	Refer to: p6999		

<b>r6992.0...15</b>	<b>CO/BO: Recorder status word / Rec ZSW</b>				
VECTOR_G (Rec), B_INF (Rec)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8144, 8145		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the status word of the recorder.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Internal activation	Set	Not set	-
	01	External activation	Set	Not set	-
	02	Internal trigger	Set	Not set	-
	03	External trigger 1.1	Set	Not set	-
	04	External trigger 1.2	Set	Not set	-
	05	External trigger 1.3	Set	Not set	-
	06	External trigger 1.4	Set	Not set	-
	07	External trigger 2.1	Set	Not set	-
	08	External trigger 2.2	Set	Not set	-
	09	External trigger 2.3	Set	Not set	-
	10	Hardware trigger	Set	Not set	-

11	Data buffering running	Yes	No	-
12	Post trigger time running	Yes	No	-
13	Data being stored	Yes	No	-
14	Data buffer full	Yes	No	-
15	Trigger group signal	Set	Not set	-

**Dependency:** Refer to: p6993, p6994, r6997, p6998, p6999  
Refer to: A49998

---

### p6993[0...2] Recorder trigger 2 bit mask / Rec trig 2 mask

VECTOR_G (Rec), B_INF (Rec)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8144
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0001 hex

**Description:** Sets the bit mask for trigger signal 2 (p6994) of the recorder.  
Trigger 2.1 is formed by ANDing the signal source in p6994[0] and the bit mask in p6993[0].  
Trigger 2.2 is formed by ANDing the signal source in p6994[1] and the bit mask in p6993[1].  
Trigger 2.3 is formed by ANDing the signal source in p6994[2] and the bit mask in p6993[2].

**Index:** [0] = Trigger 2.1  
[1] = Trigger 2.2  
[2] = Trigger 2.3

**Dependency:** Refer to: p6994

---

### p6994[0...2] CI: Recorder trigger 2 signal source / Rec trig 2 S\_src

VECTOR_G (Rec), B_INF (Rec)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32 / Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8144
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for trigger 2 of the recorder.  
Trigger 2.1 is formed by ANDing the signal source in p6994[0] and the bit mask in p6993[0].  
Trigger 2.2 is formed by ANDing the signal source in p6994[1] and the bit mask in p6993[1].  
Trigger 2.3 is formed by ANDing the signal source in p6994[2] and the bit mask in p6993[2].

**Index:** [0] = Trigger 2.1  
[1] = Trigger 2.2  
[2] = Trigger 2.3

**Dependency:** Refer to: p6993

p6996[0...63]	Recorder signals / Rec sig		
VECTOR_G (Rec)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8144
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	996553699	[0] 3600
			[1] 3700
			[2] 3701
			[3] 3703
			[4] 3705
			[5] 3706
			[6] 3707
			[7] 3708
			[8] 3709
			[9] 3710
			[10] 3711
			[11] 3712
			[12] 3713
			[13] 3714
			[14] 3715
			[15] 3716
			[16] 3717
			[17] 3718
			[18] 5600
			[19] 6000
			[20] 6100
			[21] 6300
			[22] 6600
			[23] 6800
			[24] 6900
			[25] 6901
			[26] 6902
			[27] 6906
			[28] 7000
			[29] 7200
			[30] 7300
			[31] 7400
			[32] 7500
			[33] 7600
			[34] 7700
			[35] 7800
			[36] 8000
			[37] 8200
			[38] 8300
			[39] 8400
			[...] ...
<b>Description:</b>	Setting to parameterize the signals for the recorder.		

<b>p6996[0...63] Recorder signals / Rec sig</b>			
B_INF (Rec)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8144
	<b>P-Group:</b> Commands	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	996553699	[0] 3600
			[1] 3700
			[2] 3701
			[3] 3703
			[4] 3711
			[5] 3712
			[6] 6600
			[7] 6800
			[8] 7000
			[9] 8200
			[10] 9400
			[11] 89800
			[12] 89900
			[13] 7200
			[14] 183800
			[15] 183900
			[16] 723000
			[17] 723001
			[18] 703100
			[19...63] 0

**Description:** Setting to parameterize the signals for the recorder.

<b>r6997 CO: Recorder sequencer state / Rec state</b>			
VECTOR_G (Rec), B_INF (Rec)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8145
	<b>P-Group:</b> Closed-loop control	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	60	-

**Description:** Display and connector output of the state of the sequencer for the recorder.

**Value:**

- 0: Not active
- 10: Active
- 20: Post trigger time running
- 30: Prepare data save operation
- 40: Start data save
- 50: End data save
- 60: Configuration

---

<b>p6998[0...4]</b>	<b>BI: Recorder trigger 1 signal sources / Rec trig 1 S_src</b>		
VECTOR_G (Rec), B_INF (Rec)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8144
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	[0] 1 [1...4] 0
<b>Description:</b>	Sets the signal sources to activate and trigger the recorder.		
<b>Index:</b>	[0] = Activating [1] = Trigger 1.1 [2] = Trigger 1.2 [3] = Trigger 1.3 [4] = Trigger 1.4		

---

<b>p6999[0...4]</b>	<b>Recorder parameterization / Rec par</b>		
VECTOR_G (Rec), B_INF (Rec)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 8144, 8145
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2000	[0] 1 [1] 1000 [2] 900 [3] 0 [4] 0
<b>Description:</b>	Setting to parameterize the recorder. The recorder supplies up to 64 internal variables (depending on the parameterization). The maximum recording time is 2000 ms. The variables are acquired in the current controller sampling time – and a pretrigger can be set. The values can then be acyclically written to the memory card. The development and system test departments have the software necessary to decode the content.		
<b>Index:</b>	[0] = Enable [1] = Recording time [2] = Pre-trigger time [3] = Output message [4] = Recording factor		
<b>Dependency:</b>	Refer to: A49998		
<b>Note:</b>	For index [0]: Enables or disables the function. p6999[0] = 0 Inhibits the function. p6999[0] = 1 Enables the function. For index [1]: Sets the recording time, [ms]. A maximum of 8000 measuring points can be recorded across all drive objects. 1 measuring point is created in one current controller sampling time. Example: The "Recorder" function module is activated on 4 drive objects. The current controller sampling time (p0115[0]) is 250 µs. --> every drive object can record a maximum of 8000/4 = 2000 measuring points. --> the recording time that can be realized is 2000 * 0.250 ms = 500 ms. Note: - the recording time that can be realized is displayed in r6991[1]. - if the recording time is set too long, then it is automatically reduced to what can be realized.		

For index [2]:

Sets the pretrigger time, [ms].

This time is included in the recording time and cannot be longer than the recording time p6999[1].

Note:

- when the recording time is automatically reduced, the pretrigger time is correspondingly reduced as well.

- the pretrigger time that can be realized is displayed in r6991[2].

For index [3]:

Enables or disables the output of message A49998 when the trigger event is triggered.

For index [4]:

p6999[4] = n, n = 0 ... 4

Recording with the factor, which extends the record time p6999[1] and the pre-trigger time p6999[2] 2<sup>n</sup> times, and reduces the number of signals 2<sup>n</sup> times.

Example:

Number of drive objects = 1, p0115[0] = 250 μs, p6999[1] = 2000, p6999[2] = 1000, p6999[4] = 4

--> recording time: 2000 ms \* 2<sup>4</sup> = 32 s, pre-trigger time: 1000 ms \* 2<sup>4</sup> = 16 s, number of signals 64/16 = 4.

When setting p6999[4] to 0, the results are as follows:

--> recording time: 2000 ms, pre-trigger time: 1000 ms, number of signals: 64

### r7000

#### CO: Par\_circuit No. of active power units / Qty active PU

VECTOR\_G (Parallel),  
B\_INF (Parallel)

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned16

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** Modulation

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:**

Displays the active power units for a parallel circuit configuration.

**Dependency:**

Refer to: p7001

### p7001[0...n]

#### Par\_circuit power units enable / PU enable

VECTOR\_G (Parallel),  
B\_INF (Parallel)

**Can be changed:** T

**Calculated:** -

**Access level:** 3

**Data type:** Integer16

**Dyn. index:** PDS, p0120

**Func. diagram:** -

**P-Group:** Modulation

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

1

1

**Description:**

Setting to enable the power units for a parallel connection.

**Value:**

0: Deactivated

1: Activated

**Dependency:**

Refer to: r7000

**Caution:**



For a parallel connection, the following applies:

When deactivating individual power units using this parameter, it is not permissible that the power units of the parallel connection involved are connected. Infeed units should be disconnected from the line supply (for example, using a contactor). Motor feeder cables should be disconnected. In addition, defective power units should be disconnected from the DC link.

**Note:**

For motors with separate winding systems (p7003 = 1) it is not possible to inhibit an individual power unit.

p7001 is automatically reset if a power unit is deactivated via p0125 or p0895.

<b>r7002[0...n]</b>	<b>CO: Par_circuit status power units / Status PU</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Modulation <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> PDS, p0120 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Display and connector output for the status of the power units in a parallel connection.		
<b>Value:</b>	0: Pulses inhibited 1: Pulses enabled		
<b>Dependency:</b>	Refer to: r7000, p7001		
<b>p7003</b>	<b>Par_circuit winding system / Wind_sys</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> C2(2) <b>Data type:</b> Integer16 <b>P-Group:</b> Converter <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 2	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Specifies the motor winding system when power units are connected in parallel.		
<b>Value:</b>	0: One-winding system 1: Several separate winding systems or motors 2: Two separate offset winding systems		
<b>Dependency:</b>	For p7003 = 2: In order to permit separate, offset winding systems, wobulation must first be deactivated (p1810.2 = 0). The magnitude and direction of the offset is parameterized in p6397. When exiting commissioning, the circulating current control is automatically deactivated (p7035 = 0), and the compensation of the valve interlocking times is replaced by the appropriate stator resistance adaptation (p1780.7 = 1). Refer to: p1802, p6397		
<b>Note:</b>	For p7003 = 0: - the motor data identification routine (p1910) determines the stator resistance and the cable resistance. The cable resistance of an individual Motor Module is entered into p0352. - the current symmetrizing is activated as standard after the motor data identification routine (p7035 = 1). - individual Motor Modules can be activated and deactivated (p7001). For p7003 = 1, 2: - the motor data identification routine (p1910) determines the total (overall) resistance. The cable resistance is not measured, but instead, entered as a component of the total resistance (refer to p0352). - all Motor Modules are activated. It is not possible to deactivate a Motor Module.		
<b>p7010</b>	<b>Par_circuit current asymmetry alarm threshold / i_asym A thresh</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Modulation <b>Not for motor type:</b> - <b>Min</b> 2 [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> PERCENT <b>Max</b> 100 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 20 [%]
<b>Description:</b>	Sets the alarm threshold to detect current asymmetry in the parallel circuit configuration. The deviation between the measured values and average value is evaluated. The specified value is referred to the rated power unit current (p7251[0]).		
<b>Dependency:</b>	Refer to: r7251 Refer to: A05052		

<b>p7011</b>	<b>Par_circuit DC link voltage asymmetry alarm threshold / Vdc_dissym A thrsh</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	2 [%]	100 [%]	10 [%]
<b>Description:</b>	Sets the alarm threshold to detect asymmetry of the DC link voltages in the parallel circuit configuration. The deviation between the measured values and average value is evaluated. The specified value is referred to the rated link voltage.		
<b>Dependency:</b>	Refer to: A05053		
<b>p7015</b>	<b>Par_circuit holding brake power unit data set / Brake PDS</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2701, 2814
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	99	99
<b>Description:</b>	Sets the power unit data set for a parallel connection via which the holding brake is controlled.		
<b>Value:</b>	0: Power unit data set 0 1: Power unit data set 1 2: Power unit data set 2 3: Power unit data set 3 4: Power unit data set 4 5: Power unit data set 5 6: Power unit data set 6 7: Power unit data set 7 99: No holding brake connected		
<b>Dependency:</b>	Refer to: p0120, p0121		
<b>Note:</b>	PDS: Power unit Data Set Example: 3 power units are connected in parallel and the holding brake is connected to power unit 1. p0120 = 3 p0121[0] = component number of power unit 0 p0121[1] = component number of power unit 1 (with holding brake) p0121[2] = component number of power unit 2 --> p7015 = 1		
<b>r7020[0...n]</b>	<b>CO: Par_circuit deviation current in phase U / Phase U curr dev</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the deviation between the measured current actual value of phase U and the average value as peak value. The maximum deviation from the average value is displayed in r7025.		
<b>Dependency:</b>	Refer to: r7021, r7022, r7025		

<b>r7021[0...n]</b>	<b>CO: Par_circuit deviation current in phase V / Phase V curr dev</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the deviation between the measured current actual value of phase V and the average value as peak value. The maximum deviation from the average value is displayed in r7026.		
<b>Dependency:</b>	Refer to: r7020, r7022, r7026		
<b>r7022[0...n]</b>	<b>CO: Par_circuit deviation current in phase W / Phase W curr dev</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the deviation between the measured current actual value of phase W and the average value as peak value. The maximum deviation from the average value is displayed in r7027.		
<b>Dependency:</b>	Refer to: r7020, r7021, r7027		
<b>r7025</b>	<b>CO: Par_circuit max. deviation currents phase U / Phase U Max i_dev</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the maximum absolute deviation of the measured current actual values of phase U from the average value as peak value. The deviation of the individual currents from the average value is displayed in r7020.		
<b>Dependency:</b>	Refer to: r7020, r7026, r7027 Refer to: A05052		
<b>r7026</b>	<b>CO: Par_circuit max. deviation currents phase V / Phase V Max i_dev</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the maximum absolute deviation of the measured current actual values of phase V from the average value as peak value. The deviation of the individual currents from the average value is displayed in r7021.		
<b>Dependency:</b>	Refer to: r7021, r7025, r7027 Refer to: A05052		

<b>r7027</b>	<b>CO: Par_circuit max. deviation currents phase W / Phase W Max i_dev</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the maximum absolute deviation of the measured current actual values of phase W from the average value as peak value. The deviation of the individual currents from the average value is displayed in r7022.		
<b>Dependency:</b>	Refer to: r7022, r7025, r7026 Refer to: A05052		
<b>r7030[0...n]</b>	<b>CO: Par_circuit DC link voltage deviation / Vdc deviation</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the deviation of the measured DC link voltage from the average value. The maximum deviation from the average value is displayed in r7031.		
<b>Dependency:</b>	Refer to: r7031		
<b>r7031</b>	<b>CO: Par_circuit DC link voltage maximum deviation / Vdc deviation max.</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the maximum absolute deviation of the measured DC link voltage from the average value. The deviation of the individual voltages from the average value is displayed in r7030.		
<b>Dependency:</b>	Refer to: r7030 Refer to: A05053		
<b>p7035[0...n]</b>	<b>Par_circuit circulating current control operating mode / I_cct_ctrl mode</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> DDS, p0180	<b>Func. diagram:</b> -
	<b>P-Group:</b> Modulation	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	1
<b>Description:</b>	Sets the operating mode of the circulating current control. The circulating current control ensures symmetrical distribution of the total currents to the individual converters.		
<b>Value:</b>	0: Circulating current control deactivated 1: Circulating current control activated		
<b>Dependency:</b>	Circulating current control is not possible for separate, offset motor winding systems (p7003 = 2).		

## 2 Parameters

### 2.2 List of parameters

<b>p7036[0...n]</b>	<b>Par_circuit circulating current control proportional gain / Circ_I Kp</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Modulation <b>Not for motor type:</b> - <b>Min</b> 0.00000 [ohm]	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 200.00000 [ohm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00000 [ohm]
<b>Description:</b>	Sets the proportional gain for the circulating current controller. The parameter is pre-set to the cable resistance.		
<b>p7037[0...n]</b>	<b>Par_circuit circulating current control integral time / I_circ Tn</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Modulation <b>Not for motor type:</b> - <b>Min</b> 2.0	<b>Calculated:</b> CALC_MOD_CON <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000.0	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 4.0
<b>Description:</b>	Sets the integral time of the circulating current controller. The parameter is referred to the current controller sampling time (p0115[0]).		
<b>Dependency:</b>	Refer to: p0115		
<b>Note:</b>	Using p7037 = 1000, the integral component is deactivated (held in operation). This is the preferred setting for operation with separate motor winding system.		
<b>p7038[0...n]</b>	<b>Par_circuit circulating current control limit / I_circ limit</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Modulation <b>Not for motor type:</b> - <b>Min</b> 1 [%]	<b>Calculated:</b> CALC_MOD_ALL <b>Dyn. index:</b> DDS, p0180 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 100 [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 50 [%]
<b>Description:</b>	Sets the limit of the circulating current controller output values. The parameter is, depending on the phase, referred to the valve lockout times (p1828, p1829, p1830).		
<b>p7040[0...n]</b>	<b>Par_circuit correction valve lockout time phase U / Comp t_lockout U</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Modulation <b>Not for motor type:</b> - <b>Min</b> -1000000.00 [µs]	<b>Calculated:</b> - <b>Dyn. index:</b> PDS, p0120 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000000.00 [µs]	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [µs]
<b>Description:</b>	For the particular Motor Module, the correction time must be added to the valve lockout time to be compensated for phase U (p1828). The corrective value is used to compensate variations/spread in the valve lockout times of Motor Modules for a parallel circuit configuration.		
<b>Dependency:</b>	Refer to: p1828		

<b>p7042[0...n]</b>	<b>Par_circuit correction valve lockout time phase V / Comp t_lockout V</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Modulation <b>Not for motor type:</b> - <b>Min</b> -1000000.00 [µs]	<b>Calculated:</b> - <b>Dyn. index:</b> PDS, p0120 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000000.00 [µs]	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [µs]
<b>Description:</b>	For the particular Motor Module, the correction time must be added to the valve lockout time to be compensated for phase V (p1829). The corrective value is used to compensate variations/spread in the valve lockout times of Motor Modules for a parallel circuit configuration.		
<b>Dependency:</b>	Refer to: p1829		
<b>p7044[0...n]</b>	<b>Par_circuit correction valve lockout time phase W / Comp t_lockout W</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Modulation <b>Not for motor type:</b> - <b>Min</b> -1000000.00 [µs]	<b>Calculated:</b> - <b>Dyn. index:</b> PDS, p0120 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000000.00 [µs]	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [µs]
<b>Description:</b>	For the particular Motor Module, the correction time must be added to the valve lockout time to be compensated for phase W (p1830). The corrective value is used to compensate variations/spread in the valve lockout times of Motor Modules for a parallel circuit configuration.		
<b>Dependency:</b>	Refer to: p1830		
<b>r7050[0...n]</b>	<b>Par_circuit circulating current phase U / Circ_I_phase U</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [A]	<b>Calculated:</b> - <b>Dyn. index:</b> PDS, p0120 <b>Unit group:</b> 6_5 <b>Scaling:</b> p2002 <b>Max</b> - [A]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [A]
<b>Description:</b>	Displays the circulating current of phase U as peak value.		
<b>r7051[0...n]</b>	<b>Par_circuit circulating current phase V / Circ_I_phase V</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [A]	<b>Calculated:</b> - <b>Dyn. index:</b> PDS, p0120 <b>Unit group:</b> 6_5 <b>Scaling:</b> p2002 <b>Max</b> - [A]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [A]
<b>Description:</b>	Displays the circulating current of phase V as peak value.		
<b>r7052[0...n]</b>	<b>Par_circuit circulating current phase W / Circ_I_phase W</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Displays, signals <b>Not for motor type:</b> - <b>Min</b> - [A]	<b>Calculated:</b> - <b>Dyn. index:</b> PDS, p0120 <b>Unit group:</b> 6_5 <b>Scaling:</b> p2002 <b>Max</b> - [A]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> p0505 <b>Expert list:</b> 1 <b>Factory setting</b> - [A]
<b>Description:</b>	Displays the circulating current of phase W as peak value.		

## 2 Parameters

### 2.2 List of parameters

<b>r7100[0...99]</b>	<b>Par_circuit ring buffer fault/alarm code / Fault/alarm code</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Ring buffer for faults and alarms that have occurred from power units connected in parallel (Motor Module, Active Line Infeed, Voltage Sensing Module). Displays the fault/alarm code.		
<b>Dependency:</b>	Refer to: r7101, r7102, r7103		
<b>Note:</b>	The last fault case that occurred is documented in index 0. The parameter is reset to 0 at POWER ON.		
<b>r7101[0...99]</b>	<b>Par_circuit ring buffer data set number / Ring buffer Ds_no</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Ring buffer for faults and alarms that have occurred from power units connected in parallel (Motor Module, Active Line Infeed, Voltage Sensing Module). p7101 < 100: Displays the Power unit Data Set number (PDS). p7101 >= 100: Displays the Voltage Sensing Module Data Set number (VSMDS)		
<b>Dependency:</b>	Refer to: r7100, r7102, r7103		
<b>Note:</b>	The last fault case that occurred is documented in index 0. The parameter is reset to 0 at POWER ON.		
<b>r7102[0...99]</b>	<b>Par_circuit ring buffer fault/alarm received / F/A received</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Ring buffer for faults and alarms that have occurred from power units connected in parallel (Motor Module, Active Line Infeed, Voltage Sensing Module). Displays the relative system runtime when the fault or alarm occurred.		
<b>Dependency:</b>	Refer to: r7100, r7101, r7103		
<b>Note:</b>	The last fault case that occurred is documented in index 0. The parameter is reset to 0 at POWER ON.		

---

<b>r7103[0...99]</b>	<b>Par_circuit ring buffer fault/alarm gone / F/A gone</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Ring buffer for faults and alarms that have occurred from power units connected in parallel (Motor Module, Active Line Infeed, Voltage Sensing Module). Displays the relative system runtime when the fault or alarm was withdrawn.		
<b>Dependency:</b>	Refer to: r7100, r7101, r7102		
<b>Note:</b>	The last fault case that occurred is documented in index 0. The parameter is reset to 0 at POWER ON.		

---

<b>r7200[0...n]</b>	<b>Par_circuit power unit overload I2t / PU overload I2t</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the overload of the particular power unit in a parallel circuit configuration calculated using the I2t function. The maximum value of all power units is displayed in r0036.		

---

<b>r7201[0...n]</b>	<b>CO: Par_circuit power unit temperatures max. inverter / PU temp max inv</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays the maximum inverter temperature in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[0].		

---

<b>r7202[0...n]</b>	<b>Par_circuit power unit temperatures max. depletion layer / PU TempMaxDepLayer</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays the maximum depletion layer temperature in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[1].		

---

## 2 Parameters

### 2.2 List of parameters

---

<b>r7203[0...n]</b>	<b>CO: Par_circuit power unit temperatures max. rectifier / PU temp max rect</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays the maximum rectifier temperature in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[2].		

---

<b>r7204[0...n]</b>	<b>CO: Par_circuit power unit temperatures air intake / PU temp air intake</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays the air intake temperature in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[3].		

---

<b>r7205[0...n]</b>	<b>Par_circuit power unit temperatures electronics / PU temp electr</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays the temperature of the electronics module in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[4].		

---

<b>r7206[0...n]</b>	<b>Par_circuit power unit temperatures inverter 1 / PU temp inv 1</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays the inverter temperature 1 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[5].		

---

<b>r7207[0...n]</b>	<b>Par_circuit power unit temperatures inverter 2 / PU temp inv 2</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays the inverter temperature 2 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[6].		

---

---

<b>r7208[0...n]</b>	<b>Par_circuit power unit temperatures inverter 3 / PU temp inv 3</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays the inverter temperature 3 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[7].		

---

<b>r7209[0...n]</b>	<b>Par_circuit power unit temperatures inverter 4 / PU temp inv 4</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays the inverter temperature 4 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[8].		

---

<b>r7210[0...n]</b>	<b>Par_circuit power unit temperatures inverter 5 / PU temp inv 5</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays the inverter temperature 5 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[9].		

---

<b>r7211[0...n]</b>	<b>Par_circuit power unit temperatures inverter 6 / PU temp inv 6</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays the inverter temperature 6 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[10].		

---

<b>r7212[0...n]</b>	<b>Par_circuit power unit temperatures inverter 1 / PU temp rect 1</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays rectifier temperature 1 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[11].		

---

## 2 Parameters

### 2.2 List of parameters

---

<b>r7213[0...n]</b>	<b>Par_circuit power unit temperatures inverter 2 / PU temp rect 2</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays rectifier temperature 2 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[12].		

---

<b>r7214[0...n]</b>	<b>Par_circuit power unit temperatures depletion layer 1 / PU temp DepLayer 1</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays depletion layer temperature 1 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[13].		

---

<b>r7215[0...n]</b>	<b>Par_circuit power unit temperatures depletion layer 2 / PU temp DepLayer 2</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays depletion layer temperature 2 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[14].		

---

<b>r7216[0...n]</b>	<b>Par_circuit power unit temperatures depletion layer 3 / PU temp DepLayer 3</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays depletion layer temperature 3 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[15].		

---

<b>r7217[0...n]</b>	<b>Par_circuit power unit temperatures depletion layer 4 / PU temp DepLayer 4</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays depletion layer temperature 4 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[16].		

---

<b>r7218[0...n]</b>	<b>Par_circuit power unit temperatures depletion layer 5 / PU temp DepLayer 5</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays depletion layer temperature 5 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[17].		

---

<b>r7219[0...n]</b>	<b>Par_circuit power unit temperatures depletion layer 6 / PU temp DepLayer 6</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 21_1	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2006	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°C]	- [°C]	- [°C]
<b>Description:</b>	Displays depletion layer temperature 6 in the power unit for a parallel circuit configuration. The maximum value of all power units is displayed in r0037[18].		

---

<b>r7220[0...n]</b>	<b>CO: Par_circuit drive output current maximum / Drv I_outp max</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays the maximum output current of the power unit. The minimum value of all power units multiplied by the number of Motor Modules is displayed in r0067.		

---

<b>r7222[0...n]</b>	<b>CO: Par_circuit absolute current actual value / I_act abs val</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]
<b>Description:</b>	Displays actual absolute current. The summed value of all power units is displayed in r0068.		

---

<b>r7223[0...n]</b>	<b>CO: Par_circuit phase current actual value phase U / I_phase U act val</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the measured actual value of phase U as peak value. The summed value of all power units is displayed in r0069[0].		

---

---

<b>r7224[0...n]</b>	<b>CO: Par_circuit phase current actual value phase V / I_phase V act val</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the measured actual value of phase V as peak value. The summed value of all power units is displayed in r0069[1].		

---

<b>r7225[0...n]</b>	<b>CO: Par_circuit phase current actual value phase W / I_phase W act val</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the measured actual value of phase W as peak value. The summed value of all power units is displayed in r0069[2].		

---

<b>r7226[0...n]</b>	<b>CO: Par_circuit phase current actual value phase U offset / I_phase U offset</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the measured offset of phase U as peak value. The summed value of all power units is displayed in r0069[3].		

---

<b>r7227[0...n]</b>	<b>CO: Par_circuit phase current actual value phase V offset / I_phase V offset</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the measured offset of phase V as peak value. The summed value of all power units is displayed in r0069[4].		

---

<b>r7228[0...n]</b>	<b>CO: Par_circuit phase current actual value phase W offset / I_phase W offset</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Displays the measured offset of phase W as peak value. The summed value of all power units is displayed in r0069[5].		

---

<b>r7229[0...n]</b>	<b>CO: Par_circuit phase current actual value sum U, V, W / I_phase sum UVW</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 6_5	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2002	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [A]	- [A]	- [A]
<b>Description:</b>	Display and connector output for the measured sum of the currents in phases U, V and W as instantaneous value. The summed value of all power units is displayed in r0069[6].		
<b>r7230[0...n]</b>	<b>CO: Par_circuit DC link voltage actual value / Vdc_act</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 5_2	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the measured actual value of the DC link voltage. The average value of all power units is displayed in r0070.		
<b>r7231[0...n]</b>	<b>CO: Par_circuit phase voltage actual value phase U / U_phase U act val</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 5_3	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the actual voltage, phase U. The average value of all power units is displayed in r0089[0].		
<b>r7232[0...n]</b>	<b>CO: Par_circuit phase voltage actual value phase V / U_phase V act val</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 5_3	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the actual voltage, phase V. The average value of all power units is displayed in r0089[1].		
<b>r7233[0...n]</b>	<b>CO: Par_circuit phase voltage actual value phase W / U_phase W act val</b>		
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> 5_3	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2001	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [V]	- [V]	- [V]
<b>Description:</b>	Displays the actual voltage, phase W. The average value of all power units is displayed in r0089[2].		

<b>r7240[0...n]</b>		<b>Par_circuit gating unit status word 1 / Gating unit ZSW1</b>			
VECTOR_G (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Displays, signals	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays status word 1 of the power unit.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Fault time-critical	ON	OFF	-
	01	Gating unit mode bit 0	ON	OFF	-
	02	Pulse enable	ON	OFF	-
	03	Upper switch-off signal path	Inactive	Active	-
	04	Lower switch-off signal path	Inactive	Active	-
	05	Gating unit mode bit 1	ON	OFF	-
	06	Gating unit mode bit 2	ON	OFF	-
	07	Brake state	ON	OFF	-
	08	Brake diagnostics	ON	OFF	-
	09	Armature short-circuit braking	Active	Not active	-
	10	Gating unit state bit 0	ON	OFF	-
	11	Gating unit state bit 1	ON	OFF	-
	12	Gating unit state bit 2	ON	OFF	-
	13	Alarm status bit 0	ON	OFF	-
	14	Alarm status bit 1	ON	OFF	-
	15	Diagnostics 24 V	ON	OFF	-

<b>r7250[0...4]</b>		<b>Par_circuit power unit rated power / PU P_rated</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Converter	<b>Unit group:</b> 14_6	<b>Unit selection:</b> p0100	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [kW]	- [kW]	- [kW]	
<b>Description:</b>	Displays the rated power of the individual power units connected in parallel for various load duty cycles. The sum of the rated powers of all power units connected in parallel is displayed in r0206.			
<b>Index:</b>	[0] = Rated value [1] = Load duty cycle with low overload [2] = Load duty cycle with high overload [3] = S1 cont duty cyc [4] = S6 load duty cycle			
<b>Dependency:</b>	The value is displayed in [kW] or [hp]. Refer to: p0100, p0205			

<b>r7251[0...4]</b>		<b>Par_circuit power unit rated current / PU PI_rated</b>		
VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [Arms]	- [Arms]	- [Arms]	
<b>Description:</b>	Displays the rated current of the individual power units connected in parallel for various load duty cycles. The sum of the rated currents of all power units connected in parallel is displayed in r0207.			
<b>Index:</b>	[0] = Rated value [1] = Load duty cycle with low overload [2] = Load duty cycle with high overload			

[3] = S1 cont duty cyc  
 [4] = S6 load duty cycle

**Dependency:** Refer to: p0205

---

### r7252[0...4] Par\_circuit maximum power unit current / PU I\_max

VECTOR_G (Parallel), B_INF (Parallel)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Arms]	- [Arms]	- [Arms]

**Description:** Displays the maximum output current of the individual power units connected in parallel.  
 The sum of the maximum currents of all power units connected in parallel is displayed in r0209.

**Index:**  
 [0] = Rated value  
 [1] = Load duty cycle with low overload  
 [2] = Load duty cycle with high overload  
 [3] = S1 cont duty cyc  
 [4] = S6 load duty cycle

**Dependency:** Refer to: p0205

---

### r7740[0...n] IGBT power cycling counter valve 1 / IGBT load count 1

VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the status of power cycling counter for valve 1.  
 For repairs, this parameter serves as internal documentation for service personnel.  
 The counter state corresponds to the valve wear. A maximum of 650% of the specified service life is displayed.

**Dependency:** Refer to: p7786

**Notice:** After a valve has been replaced, the corresponding power cycling counter must be reset.

**Note:** The IGBT power cycling counter can only be set to 0.

Procedure when replacing valve 1:

1. Switch off the system and replace valve 1.
2. Switch on the system and acknowledge that valve 1 has been replaced (p7786.1 = 1).  
 --> the power cycling counter of valve 1 is then reset (r7740 = 0).
3. Carry out a POWER ON (switch-off/switch-on).  
 --> as a consequence p7786.1 is automatically set to 0.

---

### r7741[0...n] IGBT power cycling counter valve 2 / IGBT load count 2

VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the status of power cycling counter for valve 2.  
 For repairs, this parameter serves as internal documentation for service personnel.  
 The counter state corresponds to the valve wear. A maximum of 650% of the specified service life is displayed.

**Dependency:** Refer to: p7786

**Notice:** After a valve has been replaced, the corresponding power cycling counter must be reset.

## 2 Parameters

### 2.2 List of parameters

**Note:** The IGBT power cycling counter can only be set to 0.  
Procedure when replacing valve 2:  
1. Switch off the system and replace valve 2.  
2. Switch on the system and acknowledge that valve 2 has been replaced (p7786.2 = 1).  
--> the power cycling counter of valve 2 is reset (r7741 = 0).  
3. Carry out a POWER ON (switch-off/switch-on).  
--> as a consequence p7786.2 is automatically set to 0.

---

#### r7742[0...n] IGBT power cycling counter valve 3 / IGBT load count 3

VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the status of power cycling counter for valve 3.  
For repairs, this parameter serves as internal documentation for service personnel.  
The counter state corresponds to the valve wear. A maximum of 650% of the specified service life is displayed.

**Dependency:** Refer to: p7786

**Notice:** After a valve has been replaced, the corresponding power cycling counter must be reset.

**Note:** The IGBT power cycling counter can only be set to 0.  
Procedure when replacing valve 3:  
1. Switch off the system and replace valve 3.  
2. Switch on the system and acknowledge that valve 3 has been replaced (p7786.3 = 1).  
--> the power cycling counter of valve 3 is reset (r7742 = 0).  
3. Carry out a POWER ON (switch-off/switch-on).  
--> as a consequence p7786.3 is automatically set to 0.

---

#### r7743[0...n] IGBT power cycling counter valve 4 / IGBT load count 4

VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the status of power cycling counter for valve 4.  
For repairs, this parameter serves as internal documentation for service personnel.  
The counter state corresponds to the valve wear. A maximum of 650% of the specified service life is displayed.

**Dependency:** Refer to: p7786

**Notice:** After a valve has been replaced, the corresponding power cycling counter must be reset.

**Note:** The IGBT power cycling counter can only be set to 0.  
Procedure when replacing valve 4:  
1. Switch off the system and replace valve 4.  
2. Switch on the system and acknowledge that valve 4 has been replaced (p7786.4 = 1).  
--> the power cycling counter of valve 4 is reset (r7743 = 0).  
3. Carry out a POWER ON (switch-off/switch-on).  
--> as a consequence p7786.4 is automatically set to 0.

**r7744[0...n] IGBT power cycling counter valve 5 / IGBT load count 5**

VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the status of power cycling counter for valve 5.  
For repairs, this parameter serves as internal documentation for service personnel.  
The counter state corresponds to the valve wear. A maximum of 650% of the specified service life is displayed.

**Dependency:** Refer to: p7786

**Notice:** After a valve has been replaced, the corresponding power cycling counter must be reset.

**Note:** The IGBT power cycling counter can only be set to 0.

Procedure when replacing valve 5:

1. Switch off the system and replace valve 5.
2. Switch on the system and acknowledge that valve 5 has been replaced (p7786.5 = 1).  
--> the power cycling counter of valve 5 is reset (r7744 = 0).
3. Carry out a POWER ON (switch-off/switch-on).  
--> as a consequence p7786.5 is automatically set to 0.

**r7745[0...n] IGBT power cycling counter valve 6 / IGBT load count 6**

VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the status of power cycling counter for valve 6.  
For repairs, this parameter serves as internal documentation for service personnel.  
The counter state corresponds to the valve wear. A maximum of 650% of the specified service life is displayed.

**Dependency:** Refer to: p7786

**Notice:** After a valve has been replaced, the corresponding power cycling counter must be reset.

**Note:** The IGBT power cycling counter can only be set to 0.

Procedure when replacing valve 6:

1. Switch off the system and replace valve 6.
2. Switch on the system and acknowledge that valve 6 has been replaced (p7786.6 = 1).  
--> the power cycling counter of valve 6 is reset (r7745 = 0).
3. Carry out a POWER ON (switch-off/switch-on).  
--> as a consequence p7786.6 is automatically set to 0.

**r7758[0...19] KHP Control Unit serial number / KHP CU ser\_no**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the actual serial number of the Control Unit.  
The individual characters of the serial number are displayed in the ASCII code in the indices.  
For the commissioning software, the ASCII characters are displayed uncoded.

**Dependency:** Refer to: p7765, p7766, p7767, p7768

**Notice:** An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.

## 2 Parameters

### 2.2 List of parameters

**Note:** KHP: Know-How Protection

<b>p7759[0...19]</b>	<b>KHP Control Unit reference serial number / KHP CU ref ser_no</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Sets the reference serial number for the Control Unit. Using this parameter, if a Control Unit and/or a memory card is replaced at the end customer, the OEM can again adapt the project to the modified hardware.		
<b>Dependency:</b>	Refer to: p7765, p7766, p7767, p7768		
<b>Note:</b>	KHP: Know-How Protection - the OEM may only change this parameter for the use case "Sending encrypted SINAMICS data". - SINAMICS only evaluates this parameter when powering up from the encrypted "Load into file system..." output or when powering up from the encrypted PS files. The evaluation is only made when know-how protection and memory card copy protection have been activated.		

<b>r7760.0...12</b>	<b>CO/BO: Write protection/know-how protection status / Wr_prot/KHP stat</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status for the write protection and know-how protection.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Write protection active	Yes	No	-
	01	Know-how protection active	Yes	No	-
	02	Know-how protection temporarily withdrawn	Yes	No	-
	03	Know-how protection cannot be deactivated	Yes	No	-
	04	Extended copy protection is active	Yes	No	-
	05	Basic copy protection is active	Yes	No	-
	06	Trace and measuring functions for diagnostic purposes active	Yes	No	-
	12	Reserved Siemens	Yes	No	-
<b>Dependency:</b>	Refer to: p7761, p7765, p7766, p7767, p7768				
<b>Note:</b>	KHP: Know-How Protection For bit 00: Write protection can be activated/deactivated via p7761 on the Control Unit. For bit 01: The know-how protection can be activated by entering a password (p7766 ... p7768). For bit 02: If it has already been activated, know-how protection can be temporarily deactivated by entering the valid password in p7766. In this case, bit 1 = 0 and bit 2 = 1 offset. For bit 03: Know-how protection cannot be deactivated, as p7766 is not entered in the OEM exception list (only the factory setting is possible). This bit is only set if know-how protection is active (bit 1 = 1) and p7766 has not been entered in the OEM exception list. For bit 04: When know-how protection has been activated, the contents of the memory card (parameter and DCC data) can be additionally protected against being used with other memory cards/Control Units. This bit is only set if know-how protection is active and in p7765.0 is set = 1.				

For bit 05:

When know-how protection has been activated, the contents of the memory card (parameter and DCC data) can be additionally protected against being used with other memory cards. This bit is only set if know-how protection is active and p7765.1 is set = 1 and p7765.0 is set = 0.

For bit 06:

When know-how protection is activated, the drive data can be traced using the device trace function. This bit is only set if know-how protection is active and p7765.2 is set = 1.

For bit 12:

Together with p7755, the bit is used to monitor write protection.

Bit = 1, if p7755 != 0 and write protection is active (p7760.0 = 1).

Bit = 0, if write protection was deactivated. p7755 is set to 0, and when write protection is activated again, bit 12 remains at 0.

**r7760****Write protection/know-how protection status / Wr\_prot/KHP stat**

VECTOR_G, B_INF, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:**

Displays the status for the write protection and know-how protection.

**Bit field:**

<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
00	Write protection active	Yes	No	-
01	Know-how protection active	Yes	No	-
02	Know-how protection temporarily withdrawn	Yes	No	-
03	Know-how protection cannot be deactivated	Yes	No	-
04	Extended copy protection is active	Yes	No	-
05	Basic copy protection is active	Yes	No	-
06	Trace and measuring functions for diagnostic purposes active	Yes	No	-
12	Reserved Siemens	Yes	No	-

**Dependency:**

Refer to: p7761, p7765, p7766, p7767, p7768

**Note:**

KHP: Know-How Protection

For bit 00:

Write protection can be activated/deactivated via p7761 on the Control Unit.

For bit 01:

The know-how protection can be activated by entering a password (p7766 ... p7768).

For bit 02:

If it has already been activated, know-how protection can be temporarily deactivated by entering the valid password in p7766. In this case, bit 1 = 0 and bit 2 = 1 offset.

For bit 03:

Know-how protection cannot be deactivated, as p7766 is not entered in the OEM exception list (only the factory setting is possible). This bit is only set if know-how protection is active (bit 1 = 1) and p7766 has not been entered in the OEM exception list.

For bit 04:

When know-how protection has been activated, the contents of the memory card (parameter and DCC data) can be additionally protected against being used with other memory cards/Control Units. This bit is only set if know-how protection is active and in p7765.0 is set = 1.

For bit 05:

When know-how protection has been activated, the contents of the memory card (parameter and DCC data) can be additionally protected against being used with other memory cards. This bit is only set if know-how protection is active and p7765.1 is set = 1 and p7765.0 is set = 0.

For bit 06:

When know-how protection is activated, the drive data can be traced using the device trace function. This bit is only set if know-how protection is active and p7765.2 is set = 1.

For bit 12:

Together with p7755, the bit is used to monitor write protection.

Bit = 1, if p7755 != 0 and write protection is active (p7760.0 = 1).

Bit = 0, if write protection was deactivated. p7755 is set to 0, and when write protection is activated again, bit 12 remains at 0.

---

<b>p7761</b>	<b>Write protection / Write protection</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Setting for activating/deactivating the write protection for adjustable parameters.		
<b>Value:</b>	0: Deactivate write protection 1: Activate write protection		
<b>Dependency:</b>	Refer to: r7760		
<b>Notice:</b>	While write protection is active, a download is prevented; however, it is still possible to restore the factory settings.		
<b>Note:</b>	Parameters with the "WRITE_NO_LOCK" attributes are excluded from the write protection. A product-specific list of these parameters is also available in the corresponding List Manual.		

---

<b>p7762</b>	<b>Write protection multi-master fieldbus system access behavior / Fieldbus acc_behav</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the behavior for write protection when accessing via multi-master fieldbus systems (e.g. CAN, BACnet).		
<b>Value:</b>	0: Write access independent of p7761 1: Write access dependent on p7761		
<b>Dependency:</b>	Refer to: r7760, p7761		

---

<b>p7763</b>	<b>KHP OEM exception list number of indices for p7764 / KHP OEM qty p7764</b>		
All objects	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	500	1
<b>Description:</b>	Sets the number of parameters for the OEM exception list (p7764[0...n]). p7764[0...n], with n = p7763 - 1		
<b>Dependency:</b>	Refer to: p7764		
<b>Note:</b>	KHP: Know-How Protection Even if know-how protection is set, parameters in this list can be read and written to.		

<b>p7764[0...n]</b>	<b>KHP OEM exception list / KHP OEM excep list</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> p7763	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	[0] 7766 [1...499] 0
<b>Description:</b>	OEM exception list (p7764[0...n]) for setting parameters that should be excluded from know-how protection. p7764[0...n], with n = p7763 - 1		
<b>Dependency:</b>	The number of indices depends on p7763. Refer to: p7763		
<b>Note:</b>	KHP: Know-How Protection Even if know-how protection is set, parameters in this list can be read and written to.		

<b>p7764[0...n]</b>	<b>KHP OEM exception list / KHP OEM excep list</b>		
VECTOR_G, B_INF, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> p7763	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	OEM exception list (p7764[0...n]) for setting parameters that should be excluded from know-how protection. p7764[0...n], with n = p7763 - 1		
<b>Dependency:</b>	The number of indices depends on p7763. Refer to: p7763		
<b>Note:</b>	KHP: Know-How Protection Even if know-how protection is set, parameters in this list can be read and written to.		

<b>p7765</b>	<b>KHP configuration / KHP config</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 bin		
<b>Description:</b>	Configuration settings for know-how protection. For bit 00, 01: When KHP is activated, this means that the OEM can define whether the parameters and DCC data encrypted on the memory card should be protected before using on other memory cards/Control Units. For bit 02: This means that the OEM can define whether it is possible or not to trace the drive data using the device trace function although KHP is activated.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Extended copy protection - linked to the memory card and CU	Yes	No	-
	01	Basic copy protection - linked to the memory card	Yes	No	-
	02	Permit trace and measuring functions for diagnostic purposes	Yes	No	-
<b>Dependency:</b>	Refer to: p7766, p7767, p7768				

## 2 Parameters

### 2.2 List of parameters

**Note:** KHP: Know-How Protection  
 For copy protection, the serial numbers of the memory card and/or Control Unit are checked.  
 The memory card copy protection and preventing data to be traced are only effective when the know-how protection has been activated.  
 For bit 00, 01:  
 If both bits are inadvertently set to 1 (e.g. at the BOP), then the setting of bit 0 applies.  
 There is no copy protection if both bits are set to 0.

<b>p7766[0...29]</b>	<b>KHP password input / KHP passw input</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Sets the password for know-how protection. Example of a password: 123aBc = 49 50 51 97 66 99 dec (ASCII characters) [0] = character 1 (e.g. 49 dec) [1] = character 2 (e.g. 50 dec) ... [5] = character 6 (e.g. 99 dec) [29] = 0 dec (completes the entry)		
<b>Dependency:</b>	Refer to: p7767, p7768		
<b>Notice:</b>	An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual. When using the STARTER commissioning software, the password should be entered using the associated dialogs. The following rules apply when entering the password: - password entry must start with p7766[0]. - no gaps are permissible in the password. - entering a password is completed when writing to p7766[29] (p7766[29] = 0 for passwords less than 30 characters).		
<b>Note:</b>	KHP: Know-How Protection When reading, p7766[0...29] = 42 dec (ASCII character = "**") is displayed. Parameters with the "KHP_WRITE_NO_LOCK" attribute are not involved in the know-how protection. Parameters with the "KHP_ACTIVE_READ" attribute can be read even when know-how protection is activated. A product-specific list of these parameters is also available in the corresponding List Manual.		

<b>p7767[0...29]</b>	<b>KHP password new / KHP passw new</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Sets the new password for know-how protection.		
<b>Dependency:</b>	Refer to: p7766, p7768		
<b>Note:</b>	KHP: Know-How Protection When reading, p7767[0...29] = 42 dec (ASCII character = "**") is displayed.		

<b>p7768[0...29]</b>	<b>KHP password confirmation / KHP passw confirm</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Confirms the new password for know-how protection.		
<b>Dependency:</b>	Refer to: p7766, p7767		
<b>Note:</b>	KHP: Know-How Protection When reading, p7768[0...29] = 42 dec (ASCII character = "**") is displayed.		
<b>p7769[0...20]</b>	<b>KHP memory card reference serial number / KHP mem ref ser_no</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Sets the reference serial number for the memory card. Using this parameter, if a Control Unit and/or a memory card is replaced at the end customer, the OEM can again adapt the project to the modified hardware.		
<b>Dependency:</b>	Refer to: p7765, p7766, p7767, p7768		
<b>Note:</b>	KHP: Know-How Protection - the OEM may only change this parameter for the use case "Sending encrypted SINAMICS data". - SINAMICS only evaluates this parameter when powering up from the encrypted "Load into file system..." output or when powering up from the encrypted PS files. The evaluation is only made when know-how protection and memory card copy protection have been activated.		
<b>p7770</b>	<b>NVRAM action / NVRAM action</b>		
VECTOR_G, B_INF, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 3	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the action to be executed for NVRAM data. At the end of the action the value is automatically set to 0.		
<b>Value:</b>	0: Inactive 1: Load NVRAM data to parameters 2: Load parameters to NVRAM 3: Reset		
<b>Notice:</b>	After action p7770 = 1 no more pulses may be enabled. After action p7770 = 2, it is essential that parameters are backed up (p0977 = 1) and that a warm restart is then performed (p0009 = 30, p0976 = 2, 3). This will apply the values written.		
<b>Note:</b>	If value = 1: This action loads the NVRAM data to the parameters. If value = 2: This action loads the parameters to the NVRAM. If value = 3: This action sets parameters p7771 ... p7774 to the factory setting. It is recommended to avoid placing unnecessary load on the subsequent upload/download operation.		

<b>p7775</b>		<b>NVRAM data backup/import/delete / NVRAM backup</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1, U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	17	0	
<b>Description:</b>	Setting to backup/import/delete NVRAM data. NVRAM data are non-volatile data in the device (e.g. fault buffer). For NVRAM data actions, the following data are excluded: - crash diagnostics - CU operating hours counter - CU temperature - safety logbook			
<b>Value:</b>	0: Inactive 1: NVRAM data backup to memory card 2: Import NVRAM data from the memory card 3: Delete NVRAM data in the device 10: Error when clearing 11: Error when backing up, memory card not available 12: Error when backing up, insufficient memory space 13: Error when backing up 14: Error when importing, memory card not available 15: Error when importing, checksum error 16: Error when importing, no NVRAM data available 17: Error when importing			
<b>Notice:</b>	For value = 2, 3: These actions are only possible when pulses are inhibited.			
<b>Note:</b>	After the action has been successfully completed, the parameter is automatically set to zero. The actions importing and deleting NVRAM data immediately initiate a warm restart. If the procedure was not successfully completed, then an appropriate fault value is displayed (p7775 >= 10).			

<b>p7786[0...n]</b>		<b>Service report / Service report</b>			
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -		
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 0000 0000 bin		
<b>Description:</b>	Service parameter to internally document repairs. After a component has been replaced, this must be confirmed using p7786.x = 0/1. When acknowledging a replacement, the "Generate report" function is automatically executed. p7786.x is automatically set to 0 after POWER ON.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Control Interface Module (CIM) replaced	Yes	No	-
	01	Valve 1 replaced	Yes	No	-
	02	Valve 2 replaced	Yes	No	-
	03	Valve 3 replaced	Yes	No	-
	04	Valve 4 replaced	Yes	No	-
	05	Valve 5 replaced	Yes	No	-
	06	Valve 6 replaced	Yes	No	-
	15	Generate report	Yes	No	-
<b>Notice:</b>	This write process can take several minutes.				
<b>Note:</b>	The power unit involved can be assigned the correct P index using p0124 (power unit detection via LED).				

<b>p7788</b>	<b>Power unit sign-of-life monitoring tolerance window / PU SoL monit tol</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	1000	10
<b>Description:</b>	Setting of the tolerance window for the sign of life monitoring for communication to the power unit.		
<b>Dependency:</b>	Refer to: A30853		
<b>Note:</b>	An active window is generated by means of DRIVE-CLiQ telegrams. If more than one sign-of-life error appears in the window, then A30853 is output. The lower the value in p7788, the greater the monitoring tolerance.		
<b>p7789</b>	<b>Power unit sign-of-life monitoring fault threshold / PU SoL monit F_thr</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1000	1
<b>Description:</b>	Sets the number of consecutive sign-of-life errors that are tolerated for communication to the power unit.		
<b>Dependency:</b>	Refer to: F30008		
<b>Note:</b>	F30008 is output in the case of a fault. The higher the value in the parameter, the higher the monitoring tolerance.		
<b>p7790[0...15]</b>	<b>Component trace signal / Comp trace sig</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Converter	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	9	[0] 2 [1] 3 [2] 4 [3] 7 [4] 8 [5] 9 [6] 5 [7] 0 [8] 6 [9] 1 [10...15] 0
<b>Description:</b>	Sets the individual signals for the component trace. For p7790[0...15] = 0, the component trace is deactivated. For index 0 ... 7: The signals are set in p7790[0...7], whose characteristic is to be recorded over time. If "No signal" is set for a trace channel, then the recording duration of the other time characteristics is increased. For index 8 ... 15: The signals are set in p7790[8...15], whose instantaneous value is to be recorded.		
<b>Value:</b>	0: No signal 1: Pulse frequency 2: Phase current U 3: Phase current V		

## 2 Parameters

### 2.2 List of parameters

- 4: Phase current W
- 5: IGBT chip temperature
- 6: Heat sink temperature
- 7: DC link voltage
- 8: Modulat\_depth
- 9: Angle

**Index:**

- [0] = Trace channel 0
- [1] = Trace channel 1
- [2] = Trace channel 2
- [3] = Trace channel 3
- [4] = Trace channel 4
- [5] = Trace channel 5
- [6] = Trace channel 6
- [7] = Trace channel 7
- [8] = Trace channel 8
- [9] = Trace channel 9
- [10] = Trace channel 10
- [11] = Trace channel 11
- [12] = Trace channel 12
- [13] = Trace channel 13
- [14] = Trace channel 14
- [15] = Trace channel 15

**Dependency:** Refer to: p7791, p7792  
Refer to: A01302

**Note:** In the operation state, when a trigger event occurs, the trace data of the signals are saved in the component. The oldest trace data are overwritten after more than 5 trigger events.  
The trigger event can be set in p7791.  
By activating p7792, the trace data of the component is written to files on the non-volatile storage medium (memory card). Experts can then evaluate this data.

---

#### p7791 Component trace trigger / Comp trace trigger

VECTOR_G, B_INF	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> Converter <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 2	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
-----------------	--	--	---

**Description:** Sets the trigger event for the component trace.

**Value:**

- 0: Overcurrent, overvoltage, ground fault, Uce
- 1: Time-critical message
- 2: Uce

**Dependency:** Refer to: p7790, p7792

**Note:** F30001 is output if the power unit detects an overcurrent condition.  
F30002 is output if the power unit detects an overvoltage condition in the DC link.  
F30021 is output if the power unit detects a ground fault.  
F30022 is output if the power unit detects an Uce fault.

---

#### p7792 Upload component trace data / Upload comp trace

VECTOR_G, B_INF	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> Converter <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
-----------------	--	--	---

**Description:** Setting to upload and save the trace data of the component trace.

Experts can then evaluate this data.

For p7792 = 1, the trace data of the component is written to files on the memory card in a non-volatile fashion.  
The parameter is then automatically set to zero.

<b>Value:</b>	0: Inactive 1: Upload and save active
<b>Dependency:</b>	Refer to: p7790, p7791
<b>Notice:</b>	Trace files of this component already available on the non-volatile storage medium are overwritten after backup has been activated.

---

<b>p7820</b>	<b>DRIVE-CLiQ component component number / DQ compo_no</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Sets the component number of the DRIVE-CLiQ component whose parameters are to be accessed.		
<b>Dependency:</b>	Refer to: p7821, p7822, r7823		

---

<b>p7821</b>	<b>DRIVE-CLiQ component parameter number / DQ para_no</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Sets the parameter number to access a parameter of a DRIVE-CLiQ component.		
<b>Dependency:</b>	Refer to: p7820, p7822, r7823		

---

<b>p7822[0...1]</b>	<b>DRIVE-CLiQ component parameter index / number of indices / DQ para_idx</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	[0] 0 [1] 1
<b>Description:</b>	Index [0] Sets the parameter index to access a parameter of a DRIVE-CLiQ component. Index [1] Number of indices that should be written to.		
	Write: If several indices must be written to, then beforehand p7837 must be written to, followed by p7822[1]. p7822 is used to secure the consistent display of data to be written to p7837.		
<b>Dependency:</b>	Refer to: p7820, p7821, r7823		

---

<b>r7823[0...254]</b>	<b>DRIVE-CLiQ component read parameter value / Read DQ value</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the parameter value read from the DRIVE-CLiQ component.		
<b>Dependency:</b>	Refer to: p7820, p7821, p7822		

<b>r7825[0...6]</b>	<b>DRIVE-CLiQ component versions / DQ comp version</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the firmware and EEPROM versions of the DRIVE-CLiQ component selected using p7828[1].		
<b>Index:</b>	[0] = Reference firmware version [1] = Actual firmware version [2] = EEPROM0 version [3] = EEPROM1 version [4] = AndEEPROM2 version [5] = EEPROM3 version [6] = EEPROM4 version		
<b>Dependency:</b>	Refer to: p7828		
<b>Note:</b>	For index 0: Firmware version on the memory card/device memory. For index 1: Actual firmware version of the DRIVE-CLiQ component. For index 2 ... 6: Actual EEPROM version of the DRIVE-CLiQ component.		

<b>p7826</b>	<b>Firmware update automatic / FW update auto</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	1
<b>Description:</b>	Sets the behavior for the automatic firmware update of the DRIVE-CLiQ components.		
<b>Value:</b>	0: Deactivated 1: Upgrade and downgrade 2: Upgrade		
<b>Notice:</b>	If this parameter is changed, it only becomes effective the next time that the drive system boots.		
<b>Note:</b>	The firmware is automatically updated when the system boots. The boot can take several minutes. After the update has been completed, it is necessary to carry out a new POWER ON (switch-off/switch-on) for the components involved. The firmware update procedure is displayed as follows: Control Unit (LED RDY): Flashes yellow with 0.5 Hz --> firmware is being updated. Flashing yellow with 2 Hz --> POWER ON is required for the components involved. Components involved: Flashing red/green with 0.5 Hz --> firmware is being updated. Flashing red/green with 2 Hz --> POWER ON of the components is required. Only components from firmware version 2.5 support the red/green flashing at 2 Hz.		

<b>r7827</b>	<b>Firmware update progress display / FW update progress</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the progress when updating the firmware of the DRIVE-CLiQ components.		
<b>p7828[0...1]</b>	<b>Firmware download component number / FW downl comp_no</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	399	0
<b>Description:</b>	Sets the component number for the required DRIVE-CLiQ component. Index 0: Component number of the DRIVE-CLiQ component for which a firmware download is to be made. Index 1: Component number of the DRIVE-CLiQ component for which the reference firmware version, saved in r7825 on the memory card/device memory, is to be displayed.		
<b>Index:</b>	[0] = Firmware download [1] = Reference firmware version		
<b>Dependency:</b>	Refer to: p0121, p0141, p0151, p7829		
<b>Note:</b>	For p7828[0] = 399, the firmware for all of the existing components is downloaded. The firmware download is started with p7829 = 1.		
<b>p7829</b>	<b>Activate firmware download / FW download act</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1	999	0
<b>Description:</b>	Activating the firmware download for the DRIVE-CLiQ components specified in p7828. 1: Activate download. -1: activate the download and carry out a reset. 0: Download successfully completed. > 1: Fault code 011: DRIVE-CLiQ component has detected a checksum error. 015: The selected DRIVE-CLiQ components did not accept the contents of the firmware file. 018: Firmware version is too old and is not accepted by the component. 019: Firmware version is not suitable for the hardware release of the component. 101: After several communication attempts, no response from the DRIVE-CLiQ component. 140: Firmware file for the DRIVE-CLiQ component not available on the memory card/device memory. 143: Component has not changed to the mode for firmware download. It was not possible to delete the existing firmware. 144: When checking the firmware that was downloaded (checksum), the component detected a fault. It is possible that the file on the memory card/device memory is defective. 145: Checking the loaded firmware (checksum) was not completed by the component in the appropriate time. 156: Component with the specified component number is not available.		

## 2 Parameters

### 2.2 List of parameters

Additional values:

Only for internal Siemens troubleshooting.

**Dependency:**

Refer to: p7828

**Note:**

p7829 is automatically set to 0 after the firmware has been successfully downloaded.  
The new firmware only becomes active at the next system run-up.

---

#### p7830

#### Telegram diagnostics selection / Telegr diag sel

VECTOR\_G, ENC

**Can be changed:** T

**Calculated:** -

**Access level:** 4

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** -

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

3

0

**Description:**

Selects a telegram whose contents should be shown in r7831 ... r7836.

**Value:**

0: Reserved  
1: First cyclic receive telegram sensor 1  
2: First cyclic receive telegram sensor 2  
3: First cyclic receive telegram sensor 3

**Dependency:**

Refer to: r7831, r7832, r7833, r7834, r7835, r7836

---

#### r7831[0...23]

#### Telegram diagnostics signals / Telegr diag sig

VECTOR\_G, ENC

**Can be changed:** -

**Calculated:** -

**Access level:** 4

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** -

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

15157

-

**Description:**

Displays the signals contained in the selected telegram (p7830).

**Value:**

0: UNUSED  
1: UNKNOWN  
102: SAPAR\_ID\_DSA\_ALARM  
110: SAPAR\_ALARMBITS\_FLOAT\_0  
111: SAPAR\_ALARMBITS\_FLOAT\_1  
112: SAPAR\_ALARMBITS\_FLOAT\_2  
113: SAPAR\_ALARMBITS\_FLOAT\_3  
114: SAPAR\_ALARMBITS\_FLOAT\_4  
115: SAPAR\_ALARMBITS\_FLOAT\_5  
10500: ENC\_ID\_TIME\_PRETRIGGER  
10501: ENC\_ID\_TIME\_SEND\_TELEG\_1  
10502: ENC\_ID\_TIME\_CYCLE\_FINISHED  
10503: ENC\_ID\_TIME\_DELTA\_FUNMAN  
10504: ENC\_ID\_SUBTRACE\_CALCTIMES  
10505: ENC\_ID\_SYNO\_PERIOD  
10515: ENC\_ID\_AB\_SQUARE\_SUM  
10516: ENC\_ID\_ADC\_TRACK\_A  
10517: ENC\_ID\_ADC\_TRACK\_B  
10518: ENC\_ID\_ADC\_TRACK\_C  
10519: ENC\_ID\_ADC\_TRACK\_D  
10520: ENC\_ID\_ADC\_TRACK\_A\_SAFETY  
10521: ENC\_ID\_ADC\_TRACK\_B\_SAFETY  
10523: ENC\_ID\_ADC\_TEMP\_1  
10524: ENC\_ID\_SUBTRACE\_TRACK\_A  
10525: ENC\_ID\_SUBTRACE\_TRACK\_B  
10526: ENC\_ID\_ADC\_TRACK\_R  
10532: ENC\_ID\_TRACK\_AB\_X  
10533: ENC\_ID\_TRACK\_AB\_Y  
10534: ENC\_ID\_OFFSET\_CORR\_AB\_X  
10535: ENC\_ID\_OFFSET\_CORR\_AB\_Y  
10536: ENC\_ID\_AB\_ABS\_VALUE  
10537: ENC\_ID\_TRACK\_CD\_X

10538: ENC\_ID\_TRACK\_CD\_Y  
10539: ENC\_ID\_TRACK\_CD\_ABS  
10542: ENC\_ID\_AB\_RAND\_X  
10543: ENC\_ID\_AB\_RAND\_Y  
10544: ENC\_ID\_AB\_RAND\_ABS\_VALUE  
10545: ENC\_ID\_SUBTRACE\_ABS\_ARRAY  
10546: ENC\_ID\_PROC\_OFFSET\_0  
10547: ENC\_ID\_PROC\_OFFSET\_4  
10550: ENC\_ID\_SUBTRACE\_AMPL  
10563: ENC\_ID\_ENCODER\_TEMP  
10564: ENC\_SELFTEMP\_ACT  
10565: ENC\_ID\_MOTOR\_TEMP\_TOP  
10566: ENC\_ID\_MOTOR\_TEMP\_1  
10567: ENC\_ID\_MOTOR\_TEMP\_1\_COD  
10569: ENC\_ID\_MOTOR\_TEMP\_2\_COD  
10571: ENC\_ID\_MOTOR\_TEMP\_3\_COD  
10580: ENC\_ID\_RESISTANCE\_1  
10590: ENC\_ID\_ANA\_CHAN\_A  
10591: ENC\_ID\_ANA\_CHAN\_B  
10592: ENC\_ID\_ANA\_CHAN\_X  
10593: ENC\_ID\_ANA\_CHAN\_Y  
10596: ENC\_ID\_AB\_ANGLE  
10597: ENC\_ID\_CD\_ANGLE  
10598: ENC\_ID\_MECH\_ANGLE\_HI  
10599: ENC\_ID\_RM\_POS\_PHI\_COMMU  
10600: ENC\_ID\_PHI\_COMMU  
10601: ENC\_ID\_SUBTRACE\_ANGLE  
10612: ENC\_ID\_DIFF\_CD\_INC  
10613: ENC\_ID\_RM\_POS\_PHI\_COMMU\_RFG  
10628: ENC\_ID\_MECH\_ANGLE  
10629: ENC\_ID\_MECH\_RM\_POS  
10644: ENC\_ID\_INIT\_VECTOR  
10645: FEAT\_INIT\_VECTOR  
10660: ENC\_ID\_SENSOR\_STATE  
10661: ENC\_ID\_BASIC\_SYSTEM  
10662: ENC\_ID\_REFMARK\_STATUS  
10663: ENC\_ID\_DSA\_STATUS1\_SENSOR  
10664: ENC\_ID\_DSA\_RMSTAT\_HANDSHAKE  
10665: ENC\_ID\_DSA\_CONTROL1\_SENSOR  
10667: ENC\_ID\_SAFETY  
10669: ENC\_ID\_SUB\_STATE  
10676: ENC\_ID\_COUNTCORR\_SAW\_VALUE  
10677: ENC\_ID\_COUNTCORR\_ABS\_VALUE  
10678: ENC\_ID\_SAWTOOTH\_CORR  
10680: ENC\_ID\_SM\_XIST1\_CORRECTED\_QUADRANTS  
10692: ENC\_ID\_RESISTANCE\_CALIB\_INSTANT  
10693: ENC\_ID\_SERPROT\_POS  
10700: ENC\_ID\_AB\_VIOL\_COUNT  
10701: ENC\_ID\_SUBTRACE\_TRACK\_A\_TRIG  
10702: ENC\_ID\_SUBTRACE\_TRACK\_B\_TRIG  
10723: ENC\_ID\_ACT\_STATEMACHINE\_FUNCTION  
10724: ENC\_ID\_ACT\_FUNMAN\_FUNCTION  
10725: ENC\_ID\_SAFETY\_COUNTER\_CRC  
10728: ENC\_ID\_SUBTRACE\_AREA  
10740: ENC\_ID\_POS\_ABSOLUTE  
10741: ENC\_ID\_POS\_REFMARK  
10742: ENC\_ID\_SAWTOOTH  
10743: ENC\_ID\_SAFETY\_PULSE\_COUNTER  
10745: ENC\_ID\_EIU\_ZEROCTRL  
10756: ENC\_ID\_DSA\_ACTUAL\_SPEED  
10757: ENC\_ID\_SPEED\_DEV\_ABS  
10772: ENC\_ID\_DSA\_POS\_XIST1  
10788: ENC\_ID\_AB\_CROSS\_CORR  
10789: ENC\_ID\_AB\_GAIN\_Y\_CORR  
10790: ENC\_ID\_AB\_PEAK\_CORR  
11825: ENC\_ID\_RES\_TRANSITION\_RATIO

11826: ENC\_ID\_RES\_PHASE\_SHIFT  
 12088: ENC\_ID\_SM\_DIFF\_PULSE\_ACCU  
 15150: ENC\_ID\_SPINDLE\_S1\_RAW  
 15151: ENC\_ID\_SPINDLE\_S4\_RAW  
 15152: ENC\_ID\_SPINDLE\_S5\_RAW  
 15155: ENC\_ID\_SPINDLE\_S1\_CAL  
 15156: ENC\_ID\_SPINDLE\_S4\_CAL  
 15157: ENC\_ID\_SPINDLE\_S5\_CAL

---

**r7832[0...23] Telegram diagnostics numerical format / Telegr diag format**

VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1	14	-

**Description:** Displays the original numerical format of the signals contained in the telegram.  
 The associated signal number is represented in the appropriate index of r7831.

**Value:**

- 1: Unknown
- 0: Boolean
- 1: Signed 1 byte
- 2: Signed 2 byte
- 3: Signed 4 byte
- 4: Signed 8 byte
- 5: Unsigned 1 byte
- 6: Unsigned 2 byte
- 7: Unsigned 4 byte
- 8: Unsigned 8 byte
- 9: Float 4 byte
- 10: Double 8 byte
- 11: mm dd yy HH MM SS MS DOW
- 12: ASCII string
- 13: SINUMERIK frame type
- 14: SINUMERIK axis type

**Dependency:** Refer to: r7831

---

**r7833[0...23] Telegram diagnostics unsigned / Telegr diag unsign**

VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Parameter to display a DSA signal in the unsigned-integer format.  
 The associated signal number is represented at the appropriate index in r7831.

---

**r7834[0...23] Telegram diagnostics signed / Telegr diag sign**

VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Parameter to display a DSA signal in the signed-integer format.  
 The associated signal number is represented at the appropriate index in r7831.

<b>r7835[0...23]</b>		<b>Telegram diagnostics real / Telegr diag real</b>	
VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Parameter to display a DSA signal in the float format. The associated signal number is represented at the appropriate index in r7831.		

<b>r7836[0...23]</b>		<b>Telegram diagnostics unit / Telegr diag unit</b>	
VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1	147	-
<b>Description:</b>	Displays the units of a DSA signal. The associated signal number is represented at the appropriate index in r7831.		

<b>Value:</b>	-1: Unknown
	0: None
	1: Millimeter or degrees
	2: Millimeter
	3: Degrees
	4: mm/min or RPM
	5: Millimeter / min
	6: Revolutions / min
	7: m/sec <sup>2</sup> or U/sec <sup>2</sup>
	8: m/sec <sup>2</sup>
	9: U/sec <sup>2</sup>
	10: m/sec <sup>3</sup> or U/sec <sup>3</sup>
	11: m/sec <sup>3</sup>
	12: U/sec <sup>3</sup>
	13: sec
	14: 16.667 / sec
	15: mm/revolution
	16: ACX_UNIT_COMPENSATION_CORR
	18: Newton
	19: Kilogram
	20: Kilogram meter <sup>2</sup>
	21: Percent
	22: Hertz
	23: Volt peak-to-peak
	24: Amps peak-to-peak
	25: Degrees Celsius
	26: Degrees
	28: Millimeter or degrees
	29: Meters / minute
	30: Meters / second
	31: ohm
	32: Millihenry
	33: Newton meter
	34: Newton meter/Ampere
	35: Volt/Ampere
	36: Newton meter second / rad
	38: 31.25 microseconds
	39: Microseconds
	40: Milliseconds
	42: Kilowatt
	43: Micro amps peak-to-peak

## 2 Parameters

### 2.2 List of parameters

44:	Volt seconds
45:	Microvolt seconds
46:	Micro newton meters
47:	Amps / volt seconds
48:	Per mille
49:	Hertz / second
53:	Micrometer or millidegrees
54:	Micrometer
55:	Millidegrees
59:	Nanometer
61:	Newton/Amps
62:	Volt seconds/meter
63:	Newton seconds/meter
64:	Micronewton
65:	Liters / minute
66:	Bar
67:	Cubic centimeters
68:	Millimeter / volt minute
69:	Newton/Volt
80:	Millivolts peak-to-peak
81:	Volt rms
82:	Millivolts rms
83:	Amps rms
84:	Micro amps rms
85:	Micrometers / revolution
90:	Tenths of a second
91:	Hundredths of a second
92:	10 microseconds
93:	Pulses
94:	256 pulses
95:	Tenths of a pulse
96:	Revolutions
97:	100 revolutions / minute
98:	10 revolutions / minute
99:	0.1 revolutions / minute
100:	Thousandth revolution / minute
101:	Pulses / second
102:	100 pulses / second
103:	10 revolutions / (minute x seconds)
104:	10000 pulses/second <sup>2</sup>
105:	0.1 Hertz
106:	0.01 Hertz
107:	0.1 / seconds
108:	Factor 0.1
109:	Factor 0.01
110:	Factor 0.001
111:	Factor 0.0001
112:	0.1 Volt peak-to-peak
113:	0.1 Volt peak-to-peak
114:	0.1 amps peak-to-peak
115:	Watt
116:	100 Watt
117:	10 Watt
118:	0.01 percent
119:	1/second <sup>3</sup>
120:	0.01 percent/millisecond
121:	Pulses / revolution
122:	Microfarads
123:	Milliohm
124:	0.01 Newton meter
125:	Kilogram millimeter <sup>2</sup>
126:	Rad / (seconds newton meter)
127:	Henry
128:	Kelvin
129:	Hours
130:	Kilohertz

131:	Milliamperes peak-to-peak
132:	Millifarads
133:	Meter
135:	Kilowatt hours
136:	Percent
137:	Amps / Volt
138:	Volt
139:	Millivolts
140:	Microvolts
141:	Amps
142:	Milliamperes
143:	Micro amps
144:	Milliamperes rms
145:	Millimeter
146:	Nanometer
147:	Joules

---

<b>r7843[0...20]</b>	<b>Memory card serial number / Mem_card ser.no</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the actual serial number of the memory card. The individual characters of the serial number are displayed in the ASCII code in the indices.		
<b>Dependency:</b>	Refer to: p9920, p9921		
<b>Notice:</b>	An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.		
<b>Note:</b>	Example: displaying the serial number for a memory card: r7843[0] = 49 dec --> ASCII characters = "1" --> serial number, character 1 r7843[1] = 49 dec --> ASCII characters = "1" --> serial number, character 2 r7843[2] = 49 dec --> ASCII characters = "1" --> serial number, character 3 r7843[3] = 57 dec --> ASCII characters = "9" --> serial number, character 4 r7843[4] = 50 dec --> ASCII characters = "2" --> serial number, character 5 r7843[5] = 51 dec --> ASCII characters = "3" --> serial number, character 6 r7843[6] = 69 dec --> ASCII characters = "E" --> serial number, character 7 r7843[7] = 0 dec --> ASCII characters = " " --> serial number, character 8 ... r7843[19] = 0 dec --> ASCII characters = " " --> serial number, character 20 r7843[20] = 0 dec Serial number = 111923E		

---

<b>r7844[0...2]</b>	<b>Memory card/device memory firmware version / Mem_crd/dev_mem FW</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the version of the firmware stored on the memory medium of the drive device. Depending on the drive device being used, the memory medium is a memory card, or an internal non-volatile device memory.		
<b>Index:</b>	[0] = Internal [1] = External [2] = Parameter backup		

## 2 Parameters

### 2.2 List of parameters

**Note:** For index 0:  
Displays the internal firmware version (e.g. 04402315).  
This firmware version is the version of the memory card/device memory and not the CU firmware (r0018), however, normally they have the same versions.  
For index 1:  
Displays the external firmware version (e.g. 04040000 -> 4.4).  
For automation systems with SINAMICS Integrated this is the runtime version of the automation system.  
For index 2:  
Displays the internal firmware version of the parameter backup.  
With this CU firmware version, the parameter backup was saved, which was used when powering up.

<b>r7850[0...n]</b>	<b>Drive object operational/not operational / DO ready for oper</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-32786	32767	-
<b>Description:</b>	Displays whether, for an activated drive object, all activated topology components are available or not (or whether these can be addressed). 0: Drive object not ready for operation 1: Drive object ready for operation		

<b>p7852</b>	<b>Number of indices for r7853 / Qty indices r7853</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	200	1
<b>Description:</b>	Displays the number of indices for r7853[0...n]. This corresponds to the number of DRIVE-CLiQ components that are in the target topology.		
<b>Dependency:</b>	Refer to: r7853		
<b>Note:</b>	The values are valid if all available Control Units adopt the "Initialization finished" state (r3988 = 800) following power up.		

<b>r7853[0...n]</b>	<b>Component available/not available / Comp present</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> p7852	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF hex	-
<b>Description:</b>	Displays the component and whether this component is currently present. High byte: Component number Low byte: 0/1 (not available/available)		
<b>Dependency:</b>	Refer to: p7852		
<b>Note:</b>	The values are valid if all available Control Units adopt the "Initialization finished" state (r3988 = 800) following power up.		

<b>p7857</b>	<b>Sub-boot mode / Sub-boot mode</b>		
VECTOR_G, B_INF, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC, HUB	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the mode for the sub-boot.		
<b>Value:</b>	0: Sub-boot manual 1: Sub-boot automatic		
<b>Note:</b>	For p7857 = 0 (manual sub-boot) the following applies: The parameter should be set to 1 to start the sub-boot.		
<b>p7859[0...199]</b>	<b>Component number global / Comp_no global</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -32786	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 32767	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0
<b>Description:</b>	Sets the global and unique component number in a drive system with several Control Units. Each index of the parameter corresponds to a possible local component number on the corresponding Control Unit. The indices are allocated to the global component numbers as follows: p7859[0]: Not used p7859[1]: Sets the global component number for the local component number 1 p7859[2]: Sets the global component number for the local component number 2 ... p7859[199]: Sets the global component number for the local component number 199		
<b>Notice:</b>	This parameter is preferably set via suitable commissioning software (e.g. UpdateAgent, STARTER, SCOUT). Changing the parameter via the AOP (Advanced Operator Panel) or BOP (Basic Operator Panel) can destroy a valid unique setting.		
<b>Note:</b>	The parameter is not influenced by setting the factory setting.		
<b>r7867</b>	<b>Status/configuration changes global / Changes global</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays status and configuration changes of all of the drive objects in the complete unit. When changing the status or the configuration of the Control Unit or a drive object, the value of this parameter is incremented.		
<b>Dependency:</b>	Refer to: r7868, r7869, r7870		

<b>r7868[0...24]</b>	<b>Configuration changes drive object reference / Config_chng DO ref</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Reference to the drive objects whose configuration has changed. Index 0: When changing one of the following indices, then the value in this index is increased. Index 1...n: The drive object with object number in p0101[n-1] has changed its configuration. Example: r7868[3] was incremented since the last time it was read. --> the configuration of the drive object with object number in p0101[2] was changed.		
<b>Index:</b>	[0] = Sum of the following indices [1] = Object number in p0101[0] [2] = Object number in p0101[1] [3] = Object number in p0101[2] [4] = Object number in p0101[3] [5] = Object number in p0101[4] [6] = Object number in p0101[5] [7] = Object number in p0101[6] [8] = Object number in p0101[7] [9] = Object number in p0101[8] [10] = Object number in p0101[9] [11] = Object number in p0101[10] [12] = Object number in p0101[11] [13] = Object number in p0101[12] [14] = Object number in p0101[13] [15] = Object number in p0101[14] [16] = Object number in p0101[15] [17] = Object number in p0101[16] [18] = Object number in p0101[17] [19] = Object number in p0101[18] [20] = Object number in p0101[19] [21] = Object number in p0101[20] [22] = Object number in p0101[21] [23] = Object number in p0101[22] [24] = Object number in p0101[23]		
<b>Dependency:</b>	Refer to: p0101, r7867, r7871		

<b>r7869[0...24]</b>	<b>Status changes drive object reference / Status_chng DO ref</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Reference to the drive objects whose status has changed. Index 0: When changing one of the following indices, then the value in this index is increased. Index 1...n: The drive object with object number in p0101[n-1] has changed its status. Example: r7868[3] was incremented since the last time it was read. --> the status of the drive object with object number in p0101[2] was changed.		

<b>Index:</b>	[0] = Sum of the following indices [1] = Object number in p0101[0] [2] = Object number in p0101[1] [3] = Object number in p0101[2] [4] = Object number in p0101[3] [5] = Object number in p0101[4] [6] = Object number in p0101[5] [7] = Object number in p0101[6] [8] = Object number in p0101[7] [9] = Object number in p0101[8] [10] = Object number in p0101[9] [11] = Object number in p0101[10] [12] = Object number in p0101[11] [13] = Object number in p0101[12] [14] = Object number in p0101[13] [15] = Object number in p0101[14] [16] = Object number in p0101[15] [17] = Object number in p0101[16] [18] = Object number in p0101[17] [19] = Object number in p0101[18] [20] = Object number in p0101[19] [21] = Object number in p0101[20] [22] = Object number in p0101[21] [23] = Object number in p0101[22] [24] = Object number in p0101[23]
<b>Dependency:</b>	Refer to: p0101, r7867, r7872

<b>r7870[0...7]</b>	<b>Configuration changes global / Config_chng global</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the configuration changes of all of the drive objects in the complete unit.

<b>Index:</b>	[0] = Sum of the following indices [1] = r7871[0] of a drive object [2] = p0101 or r0102 [3] = PROFIBUS configuration (p0978) [4] = DRIVE-CLiQ actual topology (r9900 or r9901) [5] = DRIVE-CLiQ target topology (r9902 or r9903) [6] = DRIVE-CLiQ sockets (p0109) [7] = Technology Extensions
---------------	---

**Dependency:** Refer to: r7867, r7871

<b>Note:</b>	For index 0: When changing one of the following indices, then the value in this index is incremented.
	For index 1: Drive object configuration. When changing r7871[0] on a drive object, the value in this index is incremented.
	For index 2: Drive object, configuration unit. When changing either p0101 or r0102, the value in this index is incremented.
	For index 3: PROFIBUS configuration unit. When changing p0978, the value in this index is incremented.
	For index 4: DRIVE-CLiQ actual topology. When changing either r9900 or r9901, the value in this index is incremented.
	For index 5: DRIVE-CLiQ target topology. When changing either p9902 or p9903, the value in this index is incremented.
	For index 6: DRIVE-CLiQ sockets. When changing p0109, the value in this index is incremented.
	For index 7: Technology Extensions When changing Technology Extensions, the value in this index is incremented.

r7871[0...15]	Configuration changes drive object / Config_chng DO		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the configuration changes on the drive object.		
<b>Index:</b>	<p>[0] = Sum of the following indices                      [1] = p0107, p0108, p0171, p0172 or p0173                      [2] = Drive object name (p0199)                      [3] = Structure-relevant parameters (e.g. p0180)                      [4] = BICO interconnections                      [5] = Activate/deactivate drive object                      [6] = Data backup required                      [7] = Reserved                      [8] = Reference or changeover parameters (e.g. p2000)                      [9] = Parameter count through Drive Control Chart (DCC)                      [10] = p0107, p0108                      [11] = Reserved                      [12] = Write protection and know-how protection status                      [13] = Reserved                      [14] = Reserved                      [15] = Reserved</p>		
<b>Dependency:</b>	Refer to: r7868, r7870		
<b>Note:</b>	<p>For index 0:                      When changing one of the following indices, then the value in this index is incremented.</p> <p>For index 1:                      Drive object commissioning: When changing p0107, p0108, p0171, p0172 or p0173, the value in this index is incremented.</p> <p>For index 2:                      Drive object name. When changing p0199, the value in this index is incremented.</p> <p>For index 3:                      Drive object structure. When changing a parameter that is relevant for the structure (e.g. number of data sets), the value in this index is incremented.</p> <p>For index 4:                      Drive object BICO interconnections. When changing r3977, the value in this index is incremented.</p> <p>For index 5:                      Drive object activity: When changing p0105, the value in this index is incremented.</p> <p>For index 6:                      Drive object, data save.</p> <p>0: There are no parameter changes to save.                      1: There are parameter changes to save.</p> <p>For index 8:                      Drive object changeover of units. When changing reference or changeover parameters (e.g. p2000, p0304), the value in this index is incremented.</p> <p>For index 9:                      Drive object parameter count. When changing the number of parameters by loading Drive Control Chart (DCC), the value in this index is incremented.</p> <p>For index 10:                      Drive object configuration. When changing p0107, p0108, p0171, p0172 or p0173, the value in this index is incremented.</p>		

r7871[0...15]	Configuration changes drive object / Config_chng DO		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the configuration changes on the drive object.		
<b>Index:</b>	<p>[0] = Sum of the following indices            [1] = p0010, p0107, p0108, p0171, p0172 or p0173            [2] = Drive object name (p0199)            [3] = Structure-relevant parameters (e.g. p0180)            [4] = BICO interconnections            [5] = Activate/deactivate drive object            [6] = Data backup required            [7] = Activate/deactivate component            [8] = Reference or changeover parameters (e.g. p2000)            [9] = Parameter count through Drive Control Chart (DCC)            [10] = p0107, p0108, p0171, p0172 or p0173            [11] = p0530 or p0531            [12] = Write protection and know-how protection status            [13] = Reserved            [14] = Reserved            [15] = SERVO or VECTOR (e.g. p0300)</p>		
<b>Dependency:</b>	Refer to: r7868, r7870		
<b>Note:</b>	<p>For index 0:            When changing one of the following indices, then the value in this index is incremented.</p> <p>For index 1:            Drive object commissioning: When changing p0010, p0107, p0108, p0171, p0172 or p0173, the value in this index is incremented.</p> <p>For index 2:            Drive object name. When changing p0199, the value in this index is incremented.</p> <p>For index 3:            Drive object structure. When changing a parameter that is relevant for the structure (e.g. number of data sets), the value in this index is incremented.</p> <p>For index 4:            Drive object BICO interconnections. When changing r3977, the value in this index is incremented.</p> <p>For index 5:            Drive object activity: When changing p0105, the value in this index is incremented.</p> <p>For index 6:            Drive object, data save.            0: There are no parameter changes to save.            1: There are parameter changes to save.</p> <p>For index 7:            Drive object component activity: When changing either p0125 or p0145, the value in this index is incremented.</p> <p>For index 8:            Drive object changeover of units. When changing reference or changeover parameters (e.g. p2000, p0304), the value in this index is incremented.</p> <p>For index 9:            Drive object parameter count. When changing the number of parameters by loading Drive Control Chart (DCC), the value in this index is incremented.</p> <p>For index 10:            Drive object configuration. When changing p0107, p0108, p0171, p0172 or p0173, the value in this index is incremented.</p> <p>For index 11:            Drive object bearing. When changing p0530 or p0531, the value in this index is incremented.</p>		

For index 12:

Drive object configuration. When activating/deactivating write protection or know-how protection, the value in this index is incremented.

For index 15:

SERVO/VECTOR configuration. When changing p0300, p0301 or p0400, the value in this index is incremented.

<b>r7871[0...15]</b>	<b>Configuration changes drive object / Config_chng DO</b>		
<b>B_INF</b>	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the configuration changes on the drive object.		
<b>Index:</b>	[0] = Sum of the following indices [1] = p0010, p0107, p0108 [2] = Drive object name (p0199) [3] = Structure-relevant parameters (e.g. p0180) [4] = BICO interconnections [5] = Activate/deactivate drive object [6] = Data backup required [7] = Activate/deactivate component [8] = Reference or changeover parameters (e.g. p2000) [9] = Parameter count through Drive Control Chart (DCC) [10] = p0107, p0108 [11] = Reserved [12] = Write protection and know-how protection status [13] = Reserved [14] = Reserved [15] = Reserved		
<b>Dependency:</b>	Refer to: r7868, r7870		
<b>Note:</b>	For index 0: When changing one of the following indices, then the value in this index is incremented. For index 1: Drive object commissioning: When changing p0010, p0107, p0108, p0171, p0172 or p0173, the value in this index is incremented. For index 2: Drive object name. When changing p0199, the value in this index is incremented. For index 3: Drive object structure. When changing a parameter that is relevant for the structure (e.g. number of data sets), the value in this index is incremented. For index 4: Drive object BICO interconnections. When changing r3977, the value in this index is incremented. For index 5: Drive object activity: When changing p0105, the value in this index is incremented. For index 6: Drive object, data save. 0: There are no parameter changes to save. 1: There are parameter changes to save. For index 7: Drive object component activity: When changing either p0125 or p0145, the value in this index is incremented. For index 8: Drive object changeover of units. When changing reference or changeover parameters (e.g. p2000, p0304), the value in this index is incremented. For index 9: Drive object parameter count. When changing the number of parameters by loading Drive Control Chart (DCC), the value in this index is incremented.		

For index 10:

Drive object configuration. When changing p0107, p0108, p0171, p0172 or p0173, the value in this index is incremented.

<b>r7871[0...15]</b>	<b>Configuration changes drive object / Config_chng DO</b>		
TM31, TM120, TM150, TB30, HUB	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the configuration changes on the drive object.		
<b>Index:</b>	<p>[0] = Sum of the following indices            [1] = p0010, p0107, p0108            [2] = Drive object name (p0199)            [3] = Structure-relevant parameters (e.g. p0180)            [4] = BICO interconnections            [5] = Activate/deactivate drive object            [6] = Data backup required            [7] = Reserved            [8] = Reference or changeover parameters (e.g. p2000)            [9] = Parameter count through Drive Control Chart (DCC)            [10] = p0107, p0108            [11] = Reserved            [12] = Write protection and know-how protection status            [13] = Reserved            [14] = Reserved            [15] = Reserved</p>		
<b>Dependency:</b>	Refer to: r7868, r7870		
<b>Note:</b>	<p>For index 0:            When changing one of the following indices, then the value in this index is incremented.</p> <p>For index 1:            Drive object commissioning: When changing p0010, p0107 or p0108, the value in this index is incremented.</p> <p>For index 2:            Drive object name. When changing p0199, the value in this index is incremented.</p> <p>For index 3:            Drive object structure. When changing a parameter that is relevant for the structure (e.g. number of data sets), the value in this index is incremented.</p> <p>For index 4:            Drive object BICO interconnections. When changing r3977, the value in this index is incremented.</p> <p>For index 5:            Drive object activity: When changing p0105, the value in this index is incremented.</p> <p>For index 6:            Drive object, data save.            0: There are no parameter changes to save.            1: There are parameter changes to save.</p> <p>For index 8:            Drive object changeover of units. When changing reference or changeover parameters (e.g. p2000, p0304), the value in this index is incremented.</p> <p>For index 9:            Drive object parameter count. When changing the number of parameters by loading Drive Control Chart (DCC), the value in this index is incremented.</p> <p>For index 10:            Drive object configuration. When changing either p0107 or p0108, the value in this index is incremented.</p> <p>For index 12:            Drive object configuration. When activating/deactivating write protection or know-how protection, the value in this index is incremented.</p>		

r7871[0...15]	Configuration changes drive object / Config_chng DO		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the configuration changes on the drive object.		
<b>Index:</b>	[0] = Sum of the following indices [1] = p0010, p0107, p0108 [2] = Drive object name (p0199) [3] = Structure-relevant parameters (e.g. p0180) [4] = BICO interconnections [5] = Reserved [6] = Data backup required [7] = Reserved [8] = Reference or changeover parameters (e.g. p2000) [9] = Parameter count through Drive Control Chart (DCC) [10] = p0107, p0108 [11] = Reserved [12] = Write protection and know-how protection status [13] = Reserved [14] = Reserved [15] = Reserved		
<b>Dependency:</b>	Refer to: r7868, r7870		
<b>Note:</b>	For index 0: When changing one of the following indices, then the value in this index is incremented. For index 1: Drive object commissioning: When changing p0010, p0107, p0108, p0171, p0172 or p0173, the value in this index is incremented. For index 2: Drive object name. When changing p0199, the value in this index is incremented. For index 3: Drive object structure. When changing a parameter that is relevant for the structure (e.g. number of data sets), the value in this index is incremented. For index 4: Drive object BICO interconnections. When changing r3977, the value in this index is incremented. For index 6: Drive object, data save. 0: There are no parameter changes to save. 1: There are parameter changes to save. For index 8: Drive object changeover of units. When changing reference or changeover parameters (e.g. p2000, p0304), the value in this index is incremented. For index 9: Drive object parameter count. When changing the number of parameters by loading Drive Control Chart (DCC), the value in this index is incremented. For index 10: Drive object configuration. When changing p0107, p0108, p0171, p0172 or p0173, the value in this index is incremented.		

r7871[0...15]	Configuration changes drive object / Config_chng DO		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the configuration changes on the drive object.		
<b>Index:</b>	<p>[0] = Sum of the following indices            [1] = p0010, p0107, p0108, p0171, p0172 or p0173            [2] = Drive object name (p0199)            [3] = Structure-relevant parameters (e.g. p0180)            [4] = BICO interconnections            [5] = Activate/deactivate drive object            [6] = Data backup required            [7] = Activate/deactivate component            [8] = Reference or changeover parameters (e.g. p2000)            [9] = Parameter count through Drive Control Chart (DCC)            [10] = p0107, p0108, p0171, p0172 or p0173            [11] = p0530 or p0531            [12] = Write protection and know-how protection status            [13] = Reserved            [14] = Reserved            [15] = Enc type (p0400)</p>		
<b>Dependency:</b>	Refer to: r7868, r7870		
<b>Note:</b>	<p>For index 0:            When changing one of the following indices, then the value in this index is incremented.</p> <p>For index 1:            Drive object configuration. When changing p0010, p0107, p0108, p0171, p0172 or p0173, the value in this index is incremented.</p> <p>For index 2:            Drive object name. When changing p0199, the value in this index is incremented.</p> <p>For index 3:            Drive object structure. When changing a parameter that is relevant for the structure (e.g. number of data sets), the value in this index is incremented.</p> <p>For index 4:            Drive object BICO interconnections. When changing r3977, the value in this index is incremented.</p> <p>For index 6:            Drive object, data save.</p> <p>0: There are no parameter changes to save.            1: There are parameter changes to save.</p> <p>For index 8:            Drive object changeover of units. When changing reference or changeover parameters (e.g. p2000, p0304 ...), the value in this index is incremented.</p> <p>For index 9:            Drive object parameter count. When changing the number of parameters by loading Drive Control Chart (DCC), the value in this index is incremented.</p> <p>For index 15:            Encoder configuration. When changing p0400, the value in this index is incremented.</p>		

<b>r7872[0...3]</b>			
<b>Drive object status changes / DO stat_chng</b>			
All objects	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the status changes on the drive object.		
<b>Index:</b>	[0] = Sum of the following indices [1] = Faults (r0944) [2] = Alarms (r2121) [3] = Safety messages (r9744)		
<b>Dependency:</b>	Refer to: r7869		
<b>Note:</b>	For index 0: When changing one of the following indices, then the value in this index is incremented. For index 1: Drive object faults. When changing r0944, the value in this index is incremented. For index 2: Drive object alarms. When changing r2121, the value in this index is incremented. For index 3: Drive object safety messages. When changing r9744, the value in this index is incremented.		
<hr/>			
<b>p7900[0...23]</b>			
<b>Drive objects priority / DO priority</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Sets the priority for processing the existing drive objects in the system. The parameter enables a free sequence to be set for processing the drive objects. For this purpose all the drive object numbers existing in the system have to be written in the desired sequence into the corresponding indices of the parameter. After re-booting this sequence will be effective without a plausibility check. With the factory setting the following priorities regarding processing are applicable: - the drive objects are pre-sorted according to their type as follows: CONTROL UNIT, INFEED, SERVO, VECTOR, TM, HUB, CU_LINK - if they are of the same type, they are sorted in ascending order according to their drive object number, i.e. the lower the number, the higher the priority for processing.		
<b>Index:</b>	[0] = Drive object number Control Unit [1] = Drive object number object 1 [2] = Drive object number object 2 [3] = Drive object number object 3 [4] = Drive object number object 4 [5] = Drive object number object 5 [6] = Drive object number object 6 [7] = Drive object number object 7 [8] = Drive object number object 8 [9] = Drive object number object 9 [10] = Drive object number object 10 [11] = Drive object number object 11 [12] = Drive object number object 12 [13] = Drive object number object 13 [14] = Drive object number object 14 [15] = Drive object number object 15 [16] = Drive object number object 16 [17] = Drive object number object 17 [18] = Drive object number object 18		

[19] = Drive object number object 19  
 [20] = Drive object number object 20  
 [21] = Drive object number object 21  
 [22] = Drive object number object 22  
 [23] = Drive object number object 23

**Notice:** This parameter may only be used by qualified service personnel.

**Note:** If the same drive object numbers are used and if the existing drive object numbers in the system are entered incompletely, the content of this parameter is ignored entirely. The behavior as with factory setting will then become effective.

**r7901[0...81]****Sampling times / t\_sample**

CU\_G130\_PN,  
 CU\_G150\_PN,  
 CU\_G130\_DP,  
 CU\_G150\_DP

**Can be changed:** -

**Calculated:** -

**Access level:** 4

**Data type:** FloatingPoint32

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** -

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

- [µs]

- [µs]

- [µs]

**Description:**

Displays the sampling times currently present on the drive unit.

r7901[0...63]: sampling times of hardware time slices.

r7901[64...82]: sampling times of software time slices.

r7901[x] = 0, means the following:

No methods have been registered in the time slice involved.

**Note:**

The basis for the software time slices is T\_NRK = p7901[15].

**r7903****Hardware sampling times still assignable / HW t\_samp free**

CU\_G130\_PN,  
 CU\_G150\_PN,  
 CU\_G130\_DP,  
 CU\_G150\_DP

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned16

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** -

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:**

Displays the number of hardware sampling times that can still be assigned.

These free sampling times can be used by technology functions such as TEC, DCC or FBLOCKS.

**Note:**

DCC: Drive Control Chart

FBLOCKS: free blocks

TEC: Technology Extension

**p8500[0...7]****BI: Input signal bit-serially 0 / Input\_sig bit 0**

CU\_G130\_PN,  
 CU\_G150\_PN,  
 CU\_G130\_DP,  
 CU\_G150\_DP

**Can be changed:** U, T

**Calculated:** -

**Access level:** 2

**Data type:** Unsigned32 / Binary

**Dyn. index:** -

**Func. diagram:** 2195

**P-Group:** -

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

0

**Description:**

Sets the signal source for bit-serial input signals.

These signals are available in binector output r8510.0 ... 7 for further interconnection.

**Index:**

[0] = To BO: r8510.0

[1] = To BO: r8510.1

[2] = To BO: r8510.2

[3] = To BO: r8510.3

[4] = To BO: r8510.4

[5] = To BO: r8510.5

[6] = To BO: r8510.6

[7] = To BO: r8510.7

**Dependency:**

Refer to: r8510

---

<b>p8501[0...21]</b>	<b>BI: Input signal bit-serially 1 / Input_sig bit 1</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2195
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for bit-serial input signals.  
These signals are available in binector output r8511.0 ... 21 for further interconnection.

**Index:**  
 [0] = To BO: r8511.0  
 [1] = To BO: r8511.1  
 [2] = To BO: r8511.2  
 [3] = To BO: r8511.3  
 [4] = To BO: r8511.4  
 [5] = To BO: r8511.5  
 [6] = To BO: r8511.6  
 [7] = To BO: r8511.7  
 [8] = To BO: r8511.8  
 [9] = To BO: r8511.9  
 [10] = To BO: r8511.10  
 [11] = To BO: r8511.11  
 [12] = To BO: r8511.12  
 [13] = To BO: r8511.13  
 [14] = To BO: r8511.14  
 [15] = To BO: r8511.15  
 [16] = To BO: r8511.16  
 [17] = To BO: r8511.17  
 [18] = To BO: r8511.18  
 [19] = To BO: r8511.19  
 [20] = To BO: r8511.20  
 [21] = To BO: r8511.21

**Dependency:** Refer to: r8511

---

<b>p8502</b>	<b>CI: Input signal word-serially 0 / Input_sig word 0</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2195
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for wordwise input signals.  
This signal value is available in connector output r8512 for further interconnection.

**Dependency:** Refer to: r8512

---

<b>p8503</b>	<b>CI: Input signal word-serially 1 / Input_sig word 1</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2195
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for wordwise input signals.  
This signal value is available in connector output r8513 for further interconnection.

**Dependency:** Refer to: r8513

<b>p8504</b>	<b>CI: Input signal word-serially 2 / Input_sig word 2</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2195
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for wordwise input signals.  
This signal value is available in connector output r8514 for further interconnection.

**Dependency:** Refer to: r8514

<b>p8505</b>	<b>CI: Input signal word-serially 3 / Input_sig word 3</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32 / Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2195
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for wordwise input signals.  
This signal value is available in connector output r8515 for further interconnection.

**Dependency:** Refer to: r8515

<b>r8510.0...7</b>	<b>BO: Output signal bit-serially 0 / Outp_sig bit 0</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2195
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and binector output for the signal interconnected via binector input p8500[0...7].

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	From Bl: p8500[0]	ON	OFF	-
	01	From Bl: p8500[1]	ON	OFF	-
	02	From Bl: p8500[2]	ON	OFF	-
	03	From Bl: p8500[3]	ON	OFF	-
	04	From Bl: p8500[4]	ON	OFF	-
	05	From Bl: p8500[5]	ON	OFF	-
	06	From Bl: p8500[6]	ON	OFF	-
	07	From Bl: p8500[7]	ON	OFF	-

**Dependency:** Refer to: p8500

<b>r8511.0...21</b>	<b>BO: Output signal bit-serially 1 / Outp_sig bit 1</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2195
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and binector output for the signal interconnected via binector input p8501[0...21].

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	From Bl: p8501[0]	ON	OFF	-
	01	From Bl: p8501[1]	ON	OFF	-
	02	From Bl: p8501[2]	ON	OFF	-

## 2 Parameters

### 2.2 List of parameters

03	From Bl: p8501[3]	ON	OFF	-
04	From Bl: p8501[4]	ON	OFF	-
05	From Bl: p8501[5]	ON	OFF	-
06	From Bl: p8501[6]	ON	OFF	-
07	From Bl: p8501[7]	ON	OFF	-
08	From Bl: p8501[8]	ON	OFF	-
09	From Bl: p8501[9]	ON	OFF	-
10	From Bl: p8501[10]	ON	OFF	-
11	From Bl: p8501[11]	ON	OFF	-
12	From Bl: p8501[12]	ON	OFF	-
13	From Bl: p8501[13]	ON	OFF	-
14	From Bl: p8501[14]	ON	OFF	-
15	From Bl: p8501[15]	ON	OFF	-
16	From Bl: p8501[16]	ON	OFF	-
17	From Bl: p8501[17]	ON	OFF	-
18	From Bl: p8501[18]	ON	OFF	-
19	From Bl: p8501[19]	ON	OFF	-
20	From Bl: p8501[20]	ON	OFF	-
21	From Bl: p8501[21]	ON	OFF	-

**Dependency:** Refer to: p8501

---

#### r8512 CO: Output signal wordwise 0 / Outp\_sig word 0

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2195
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]

**Description:** Display and connector output for the signal interconnected via connector input p8502.

**Dependency:** Refer to: p8502

---

#### r8513 CO: Output signal wordwise 1 / Outp\_sig word 1

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2195
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]

**Description:** Display and connector output for the signal interconnected via connector input p8503.

**Dependency:** Refer to: p8503

---

#### r8514 CO: Output signal wordwise 2 / Outp\_sig word 2

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2195
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]

**Description:** Display and connector output for the signal interconnected via connector input p8504.

**Dependency:** Refer to: p8504

<b>r8515</b>	<b>CO: Output signal wordwise 3 / Outp_sig word 3</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2195
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> PERCENT	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Display and connector output for the signal interconnected via connector input p8505.		
<b>Dependency:</b>	Refer to: p8505		

<b>p8550</b>	<b>AOP LOCAL/REMOTE / AOP LOCAL/REMOTE</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 0000 1001 bin		
<b>Description:</b>	Setting for saving the actual configuration of the Advanced Operator Panel (AOP).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	LOCAL save	Yes	No	-
	01	Start in LOCAL	Yes	No	-
	02	Change in oper	Yes	No	-
	03	OFF acts like OFF1	Yes	No	-
	04	OFF acts like OFF2	Yes	No	-
	05	OFF acts like OFF3	Yes	No	-
	06	Reserved	Yes	No	-
	07	CW/CCW active	Yes	No	-
	08	Jog active	Yes	No	-
	09	Save speed setpoint	Yes	No	-
	14	Inhibit operation	Yes	No	-
	15	Inhibit parameterization	Yes	No	-

<b>p8552</b>	<b>IOP speed unit / IOP speed unit</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	2	2
<b>Description:</b>	Sets the unit for displaying and entering speeds.		
<b>Value:</b>	1: Hz 2: rpm		

<b>r8570[0...39]</b>	<b>Macro drive object / Macro DO</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the macro file saved in the appropriate directory on the memory card/device memory.		
<b>Dependency:</b>	Refer to: p0015		
<b>Note:</b>	For a value = 9999999, the following applies: The read operation is still running.		

---

<b>r8571[0...39]</b>	<b>Macro Binector Input (BI) / Macro BI</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the ACX file saved in the appropriate directory in the non-volatile memory.		
<b>Dependency:</b>	Refer to: p0700		
<b>Note:</b>	For a value = 9999999, the following applies: The read operation is still running.		

---

<b>r8572[0...39]</b>	<b>Macro Connector Inputs (CI) for speed setpoints / Macro CI n_set</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the ACX file saved in the appropriate directory in the non-volatile memory.		
<b>Dependency:</b>	Refer to: p1000		
<b>Note:</b>	For a value = 9999999, the following applies: The read operation is still running.		

---

<b>r8573[0...39]</b>	<b>Macro Connector Inputs (CI) for torque setpoints / Macro CI M_set</b>		
VECTOR_G, B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the ACX file saved in the appropriate directory in the non-volatile memory.		
<b>Dependency:</b>	Refer to: p1500		
<b>Note:</b>	For a value = 9999999, the following applies: The read operation is still running.		

---

<b>r8585</b>	<b>Macro execution actual / Macro executed</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the macro currently being executed on the drive object.		
<b>Dependency:</b>	Refer to: p0015, p0700, p1000, p1500, r8570, r8571, r8572, r8573		

<b>r8600 CAN device type / Device type</b>			
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays all of the devices connected to the CAN bus after run-up. r8600 = 00000000 hex: No drive recognized. = FFFF0192 hex: Several drives - 1st drive is an Active Line Module, servo drive or vector drive = FFFF0191 hex: Several drives - 1st drive is a Terminal Module = 02010192 hex: 1 Vector drive = 00020192 hex: 1 Servo drive = 01000192 hex: 1 Active Line Module = 00080191 hex: 1 Terminal Module		
<b>Note:</b>	Corresponds to the CANopen object 1000 hex. For each detected drive, the device type is displayed in object 67FF hex + 800 hex * x (x: Drive number 0 ... 7).		
<b>r8601 CAN error register / Error register</b>			
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the error register for CANopen. Bit 0: Generic error. 0 signal: No error present. 1 signal: Generic error present. Bit 1 ... 3: Not supported (always a 0 signal). Bit 4: Communications error. 0 signal: There is no message in the range 8700 ... 8799. 1 signal: There is at least one message (fault or alarm) in the range 8700 ... 8799. Bit 5 ... 6: Not supported (always a 0 signal). Bit 7: Fault outside the range 8700 ... 8799. 0 signal: There is no fault outside the range 8700 ... 8799. 1 signal: There is at least one fault outside the range 8700 ... 8799.		
<b>Note:</b>	Corresponds to the CANopen object 1001 hex.		
<b>p8602 CAN SYNC object / SYNC object</b>			
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> FFFF FFFF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0080 hex
<b>Description:</b>	Sets the SYNC object parameter for the following CANopen objects: - 1005 hex: COB-ID		
<b>Note:</b>	SINAMICS operates as SYNC load. COB-ID: CAN object identification		

<b>p8603</b>	<b>CAN COB-ID Emergency Message / COB-ID EMCY Msg</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the COB-ID for the emergency message (error telegram). It corresponds to the CANopen objects: - 1014 hex: COB-ID		
<b>Note:</b>	If, when downloading, the pre-set value 0 is downloaded, then the CANopen pre-set value 80 hex + Node-ID is automatically set. Online, the value 0 is rejected as, according to the CANopen Standard, COB-ID 0 is not permitted here. The changeover of the node ID using the hardware switch at the Control Unit or per software has no effect on the COB-ID EMCY. The saved value remains effective.		
<b>p8604[0...1]</b>	<b>CAN life guarding / Life guarding</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0
<b>Description:</b>	Sets the life guarding parameter for the following CANopen objects: - 100C hex: Guard Time - 100D hex: Life Time Factor The life time is derived by multiplying guard time by the life time factor.		
<b>Index:</b>	[0] = Time interval [ms] for the life time [1] = Factor for the lifetime		
<b>Dependency:</b>	Refer to: p8606 Refer to: F08700		
<b>Note:</b>	For p8604[0] = 0 and/or p8604[1] = 0, the life guarding event service (monitoring the node guarding, fault F08700 with fault value = 2) is deactivated. The node guarding protocol is active without the life guarding event service, if the heartbeat protocol is deactivated (p8606 = 0).		
<b>p8606</b>	<b>CAN Producer Heartbeat Time / Prod Heartb Time</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	65535 [ms]	0 [ms]
<b>Description:</b>	Sets the time [ms] to cyclically send heartbeat telegrams. The smallest cycle is 100 ms. For p8606 = 0, heartbeat telegrams are not sent.		
<b>Dependency:</b>	Refer to: p8604		
<b>Note:</b>	Corresponds to the CANopen object 1017 hex. Activating the heartbeat protocol automatically deactivates the node guarding.		

<b>r8607[0...3]</b>		<b>CAN Identity Object / Identity object</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	General device information display.			
<b>Index:</b>	[0] = Vendor ID [1] = Product code [2] = Revision number [3] = Serial number			
<b>Note:</b>	Corresponds to the CANopen object 1018 hex. For index 3: The SINAMICS serial number comprises 60 bits. Of these bits, the following are displayed in this index: Bits 0 ... 19: Consecutive number Bits 20 ... 23: Production ID - 0 hex: Development - 1 hex: P1 unique number - 2 hex: P2 unique number - 3 hex: WA unique number - 9 hex: Pattern - F hex: All others Bits 24 ... 27: Month of manufacture (0 means January, B means December) Bits 28 ... 31: Year of manufacture (0 means 2002)			
<b>p8608[0...1]</b>		<b>CAN Clear Bus Off Error / Clear bus off err</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	1	0	
<b>Description:</b>	As a result of a Bus Off error, the CAN controller is set into the initialization state. Index 0: The CAN controller is manually started after resolving the cause of the error with p8608[0] = 1. Index 1: The automatic CAN bus start function is activated using p8608[1] = 1. At 2 second intervals, the CAN controller is automatically restarted until the cause of the error has been resolved and a CAN connection has been established.			
<b>Value:</b>	0: Inactive 1: Start CAN controller			
<b>Index:</b>	[0] = Manual controller start function [1] = Activating the automatic controller start function			
<b>Note:</b>	For index 0: This parameter is automatically reset to 0 after start.			

<b>p8609[0...1]</b>	<b>CAN Error Behavior / Error behavior</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	1
<b>Description:</b>	Sets the behavior of the CAN node referred to the communications error or equipment fault.		
<b>Value:</b>	0: Pre-operational 1: No change 2: Stopped		
<b>Index:</b>	[0] = Behavior for communication errors [1] = Behavior for device faults		
<b>Note:</b>	Corresponds to the CANopen object 1029 hex.		
<b>r8610[0...1]</b>	<b>CAN First Server SDO / First server SDO</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the identifier (client/server and server/client) of the SDO channel.		
<b>Index:</b>	[0] = COB-ID from the client to the server [1] = COB-ID from the server to the client		
<b>Dependency:</b>	Refer to: p8612		
<b>Note:</b>	Corresponds to the CANopen object 1200 hex. SDO: Service Data Object		
<b>p8611[0...82]</b>	<b>CAN Pre-defined Error Field / Pre_def err field</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF 1000 hex	0000 hex
<b>Description:</b>	Displays the Pre-defined Error Field of the CAN node. It includes the number of all errors that have occurred, the number of errors that have occurred for each drive and the errors according to their history. The first 16 bits represent the CANopen error code and the second 16 bits the SINAMICS error code. Index 1 has the same structure - however, the drive object ID is in the second 16 bits instead of the SINAMICS error code. CANopen error code: 0000 hex: No error present. 8110 hex: Alarm A08751 present. 8120 hex: Alarm A08752 present. 8130 hex: Alarm A08700(F) with alarm value = 2 present. 1000 hex: Generic error 1 present (there is at least one fault outside the range 8700 ... 8799) 1001 hex: Generic error 2 present (there is at least one alarm in the range 8700 ... 8799 with the exception of A08751, A08752, A08700) All drive objects are acknowledged by writing the value 0 to index 0. As soon as a fault has been acknowledged or an alarm cleared, then it is also cleared from the fault list.		

<b>Index:</b>	[0] = Number of all faults in the drive unit
	[1] = Actual drive number/fault number
	[2] = Number of faults drive 1
	[3] = Fault 1/ drive 1
	[4] = Fault 2/ drive 1
	[5] = Fault 3/ drive 1
	[6] = Fault 4/ drive 1
	[7] = Fault 5/ drive 1
	[8] = Fault 6/ drive 1
	[9] = Fault 7/ drive 1
	[10] = Fault 8/ drive 1
	[11] = Number of faults drive 2
	[12] = Fault 1/ drive 2
	[13] = Fault 2/ drive 2
	[14] = Fault 3/ drive 2
	[15] = Fault 4/ drive 2
	[16] = Fault 5/ drive 2
	[17] = Fault 6/ drive 2
	[18] = Fault 7/ drive 2
	[19] = Fault 8/ drive 2
	[20] = Number of faults drive 3
	[21] = Fault 1/ drive 3
	[22] = Fault 2/ drive 3
	[23] = Fault 3/ drive 3
	[24] = Fault 4/ drive 3
	[25] = Fault 5/ drive 3
	[26] = Fault 6/ drive 3
	[27] = Fault 7/ drive 3
	[28] = Fault 8/ drive 3
	[29] = Number of faults drive 4
	[30] = Fault 1/ drive 4
	[31] = Fault 2/ drive 4
	[32] = Fault 3/ drive 4
	[33] = Fault 4/ drive 4
	[34] = Fault 5/ drive 4
	[35] = Fault 6/ drive 4
	[36] = Fault 7/ drive 4
	[37] = Fault 8/ drive 4
	[38] = Number of faults drive 5
	[39] = Fault 1/ drive 5
	[40] = Fault 2/ drive 5
	[41] = Fault 3/ drive 5
	[42] = Fault 4/ drive 5
	[43] = Fault 5/ drive 5
	[44] = Fault 6/ drive 5
	[45] = Fault 7/ drive 5
	[46] = Fault 8/ drive 5
	[47] = Number of faults drive 6
	[48] = Fault 1/ drive 6
	[49] = Fault 2/ drive 6
	[50] = Fault 3/ drive 6
	[51] = Fault 4/ drive 6
	[52] = Fault 5/ drive 6
	[53] = Fault 6/ drive 6
	[54] = Fault 7/ drive 6
	[55] = Fault 8/ drive 6
	[56] = Number of faults drive 7
	[57] = Fault 1/ drive 7
	[58] = Fault 2/ drive 7
	[59] = Fault 3/ drive 7
	[60] = Fault 4/ drive 7
	[61] = Fault 5/ drive 7
	[62] = Fault 6/ drive 7
	[63] = Fault 7/ drive 7
	[64] = Fault 8/ drive 7
	[65] = Number of faults drive 8

## 2 Parameters

### 2.2 List of parameters

[66] = Fault 1/ drive 8  
 [67] = Fault 2/ drive 8  
 [68] = Fault 3/ drive 8  
 [69] = Fault 4/ drive 8  
 [70] = Fault 5/ drive 8  
 [71] = Fault 6/ drive 8  
 [72] = Fault 7/ drive 8  
 [73] = Fault 8/ drive 8  
 [74] = Number of faults Control Unit  
 [75] = Fault 1/Control Unit  
 [76] = Fault 2/Control Unit  
 [77] = Fault 3/Control Unit  
 [78] = Fault 4/Control Unit  
 [79] = Fault 5/Control Unit  
 [80] = Fault 6/Control Unit  
 [81] = Fault 7/Control Unit  
 [82] = Fault 8/Control Unit

**Dependency:**

Refer to: r8743

**Note:**

Corresponds to the CANopen object 1003 hex.

Parameter r8743 is used to display the assignment of the drive object (drive object number) to the CANopen device module.

#### p8612[0...1]

#### CAN drive object server SDO / DO server SDO

CU\_G130\_PN (CAN),  
 CU\_G150\_PN (CAN),  
 CU\_G130\_DP (CAN),  
 CU\_G150\_DP (CAN),  
 VECTOR\_G (CAN)

**Can be changed:** T

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** Communications

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0581 hex

8000 067F hex

8000 0000 hex

**Description:**

Sets the identifier (client/server and server/client) of the additional SDO server.

Using these SDO servers, it is possible to access manufacturer-specific CANopen objects of the supported drive objects.

**Index:**

[0] = COB-ID drive object from the client to the server  
 [1] = COB-ID drive object from the server to the client

**Dependency:**

Refer to: r8610

**Note:**

SDO: Service Data Object

Regarding the drive object Control Unit:

- Corresponds to the CANopen object 1201 hex

Regarding the drive object with closed-loop control functions:

- Corresponds to the CANopen object 1202 hex + 1 \* x (x: Drive number 0 ... 7)

#### p8620

#### CAN Node-ID / Node ID

CU\_G130\_PN (CAN),  
 CU\_G150\_PN (CAN),  
 CU\_G130\_DP (CAN),  
 CU\_G150\_DP (CAN)

**Can be changed:** T

**Calculated:** -

**Access level:** 2

**Data type:** Unsigned8

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** -

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

1

127

126

**Description:**

Display or setting of the CANopen Node ID.

The Node ID can be set as follows:

1) Using the address switch on the Control Unit.

--> p8620 can then only be read and displays the selected Node ID.

--> A change only becomes effective after a POWER ON.

--> CANopen Node ID and PROFIBUS address are identical.

2) Using p8620  
 --> Only if address 0 is set using the address switch.  
 --> the Node ID is set as standard to 126.  
 --> A change only becomes effective after save and POWER ON.

**Dependency:**

Refer to: r8621

**Note:**

Every node ID change only becomes effective after a POWER ON.

The active node ID is displayed in r8621.

The parameter is not influenced by setting the factory setting.

It is only possible to independently set CANopen node ID and the PROFIBUS address using p0918 and p8620 (prerequisite: the address 0 is set for the address switch).

**r8621****CAN Node-ID active / Node ID active**

CU_G130_PN (CAN),	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
CU_G150_PN (CAN),	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
CU_G130_DP (CAN),	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
CU_G150_DP (CAN)	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:**

Displays the active CANopen Node ID.

**Dependency:**

Refer to: p8620

**p8622****CAN bit rate / Bit rate**

CU_G130_PN (CAN),	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
CU_G150_PN (CAN),	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
CU_G130_DP (CAN),	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
CU_G150_DP (CAN)	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	7	6

**Description:**

Setting the bit rate for the CAN bus.

The appropriate bit timings are selected that are defined in p8623 in the associated sub-index.

Example:

Bit rate = 20 kbit/s --&gt; p8622 = 6 --&gt; associated bit timing is in p8623[6].

**Value:**

0: 1 Mbit/s  
 1: 800 kbit/s  
 2: 500 kbit/s  
 3: 250 kbit/s  
 4: 125 kbit/s  
 5: 50 kbit/s  
 6: 20 kbit/s  
 7: 10 kbit/s

**Dependency:**

Refer to: p8623

**Note:**

The parameter is not influenced by setting the factory setting.

<b>p8623[0...7]</b>		<b>CAN Bit Timing selection / Bit timing select</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0000 hex	000F 7FFF hex	[0] 1405 hex [1] 1605 hex [2] 1C05 hex [3] 1C0B hex [4] 1C17 hex [5] 1C3B hex [6] 0002 1C15 hex [7] 0004 1C2B hex	
<b>Description:</b>	Sets the bit timing for the C_CAN controller to the associated and selected bit rate (p8622). Bits are distributed to the following parameters of the C_CAN controller in p8623[0...7]: Bit 0 ... 5: BRP (Baud Rate Prescaler) Bit 6 ... 7: SJW (Synchronization Jump Width) Bit 8 ... 11: TSEG1 (Time Segment 1, before the sampling point) Bit 12 ... 14: TSEG2 (Time Segment 2, after the sampling point) Bit 15: Reserved Bit 16 ... 19: BRPE (Baud Rate Prescaler Extension) Bit 20 ... 31: Reserved Example: Bit rate = 20 kbit/s --> p8622 = 6 --> associated bit timing is in p8623[6] --> 0001 2FB6			
<b>Recommendation:</b>	Use the factory setting when setting the bit timing.			
<b>Index:</b>	[0] = 1 Mbit/s [1] = 800 kbit/s [2] = 500 kbit/s [3] = 250 kbit/s [4] = 125 kbit/s [5] = 50 kbit/s [6] = 20 kbit/s [7] = 10 kbit/s			
<b>Dependency:</b>	Refer to: p8622			
<b>Note:</b>	The parameter is not influenced by setting the factory setting.			

<b>p8630[0...2]</b>		<b>CAN virtual objects / Virtual objects</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	65535	0	
<b>Description:</b>	Sets the drive object selection (index 0), the sub-index area (index 1) and the parameter area (index 2) when using virtual objects. This means that it is possible to access all SINAMICS parameters via CAN. Index 0 (drive object number): 0: Not possible to access virtual CANopen objects 1: Device 2 ... 65535: Drive object number of drive 1 ... 8			

Index 1 (sub-index area):

0: 0 ... 255

1: 256 ... 511

2: 512 ... 767

3: 768 ... 1023

Index 2 (parameter area):

0: 1 ... 9999

1: 10000 ... 19999

2: 20000 ... 29999

3: 30000 ... 39999

**Index:** [0] = Drive object number  
[1] = Sub-index range  
[2] = Parameter range

---

### p8641 CAN Abort Connection Option Code / Abort con opt code

<b>VECTOR_G (CAN)</b>	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	3

**Description:** Sets the fault response for a CAN communication error with output of fault F08700.  
Corresponds to CANopen object 6007 hex.

**Value:** 0: No response  
1: OFF1  
2: OFF2  
3: OFF3

**Dependency:** Refer to: p2100, p2101  
Refer to: F08700

**Note:** When the factory setting is changed, the fault response of fault F08700 is written to p2100 and p2101. In this particular case it is not possible to change the message type using p2118 and p2119.

---

### r8680[0...36] CAN Diagnosis Hardware / Diagnostics HW

CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the register of the CAN controller C\_CAN:  
Register, Message Interface Register and Message Handler Register - referred to the CAN protocol.

**Index:** [0] = Control register  
[1] = Status register  
[2] = Error counter  
[3] = Bit timing register  
[4] = Interrupt register  
[5] = Test register  
[6] = Baud rate prescaler extension register  
[7] = Interface 1 command request register  
[8] = Interface 1 command mask register  
[9] = Interface 1 mask 1 register  
[10] = Interface 1 mask 2 register  
[11] = Interface 1 arbitration 1 register  
[12] = Interface 1 arbitration 2 register  
[13] = Interface 1 message control register  
[14] = Interface 1 data A1 register  
[15] = Interface 1 data A2 register  
[16] = Interface 1 data B1 register

- [17] = Interface 1 data B2 register
- [18] = Interface 2 command request register
- [19] = Interface 2 command mask register
- [20] = Interface 2 mask 1 register
- [21] = Interface 2 mask 2 register
- [22] = Interface 2 arbitration 1 register
- [23] = Interface 2 arbitration 2 register
- [24] = Interface 2 message control register
- [25] = Interface 2 data A1 register
- [26] = Interface 2 data A2 register
- [27] = Interface 2 data B1 register
- [28] = Interface 2 data B2 register
- [29] = Transmission request 1 register
- [30] = Transmission request 2 register
- [31] = New data 1 register
- [32] = New data 2 register
- [33] = Interrupt pending 1 register
- [34] = Interrupt pending 2 register
- [35] = Message valid 1 register
- [36] = Message valid 2 register

**Note:** A description of the individual registers of the C\_CAN controller can be taken from "C\_CAN User's Manual".

---

<b>p8684</b>	<b>CAN NMT state after booting / NMT state aft boot</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	4	127	127
<b>Description:</b>	Sets the CANopen NMT state that is effective after booting.		
<b>Value:</b>	4: Stopped 5: Operational 127: Pre-operational		
<b>Dependency:</b>	Refer to: p8685		
<b>Note:</b>	Booting in the NMT state pre-operational corresponds to the CANopen standard		

---

<b>p8685</b>	<b>CAN NMT states / NMT states</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	129	127
<b>Description:</b>	Sets and displays the CANopen NMT state.		
<b>Value:</b>	0: Initialization 4: Stopped 5: Operational 127: Pre-operational 128: Reset node 129: Reset Communication		
<b>Note:</b>	The value 0 (initialization) is only displayed and cannot be set.		

---

<b>p8699</b>	<b>CAN: RPDO monitoring time / RPDO t_monit</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [ms]	65535000 [ms]	0 [ms]
<b>Description:</b>	Sets the monitoring time for the process data received via the CAN bus. A value that is not a multiple integer of the CANopen sampling time is rounded-off. If no process data is received within this time, then fault F08702 is output.		
<b>Dependency:</b>	Refer to: p8848 Refer to: F08702		
<b>Note:</b>	Value = 0: Monitoring is deactivated. p8848: CANopen sampling time		

---

<b>p8700[0...1]</b>	<b>CAN Receive PDO 1 / Receive PDO 1</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204, 9206
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	8000 06DF hex	[0] 8000 06DF hex [1] 00FE hex
<b>Description:</b>	Sets the communication parameters for CANopen Receive Process Data Object 1 (RPDO 1).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Note:</b>	Corresponds to the CANopen object 1400 hex + 40 hex * x (x: Drive number 0 ... 7). Transmission types 0, 1, FE and FF can be set. PDO: Process Data Object		

---

<b>p8701[0...1]</b>	<b>CAN Receive PDO 2 / Receive PDO 2</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204, 9206
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	8000 06DF hex	[0] 8000 06DF hex [1] 00FE hex
<b>Description:</b>	Sets the communication parameters for CANopen Receive Process Data Object 2 (RPDO 2).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Note:</b>	Corresponds to the CANopen object 1401 hex + 40 hex * x (x: Drive number 0 ... 7). Transmission types 0, 1, FE and FF can be set. PDO: Process Data Object		

<b>p8702[0...1]</b>	<b>CAN Receive PDO 3 / Receive PDO 3</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204, 9206
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	8000 06DF hex	[0] 8000 06DF hex [1] 00FE hex
<b>Description:</b>	Sets the communication parameters for CANopen Receive Process Data Object 3 (RPDO 3).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Note:</b>	Corresponds to the CANopen object 1402 hex + 40 hex * x (x: Drive number 0 ... 7). Transmission types 0, 1, FE and FF can be set. PDO: Process Data Object		
<b>p8703[0...1]</b>	<b>CAN Receive PDO 4 / Receive PDO 4</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204, 9206
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	8000 06DF hex	[0] 8000 06DF hex [1] 00FE hex
<b>Description:</b>	Sets the communication parameters for CANopen Receive Process Data Object 4 (RPDO 4).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Note:</b>	Corresponds to the CANopen object 1403 hex + 40 hex * x (x: Drive number 0 ... 7). Transmission types 0, 1, FE and FF can be set. PDO: Process Data Object		
<b>p8704[0...1]</b>	<b>CAN Receive PDO 5 / Receive PDO 5</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	8000 06DF hex	[0] 8000 06DF hex [1] 00FE hex
<b>Description:</b>	Sets the communication parameters for CANopen Receive Process Data Object 5 (RPDO 5).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Note:</b>	Corresponds to the CANopen object 1404 hex + 40 hex * x (x: Drive number 0 ... 7). Transmission types 0, 1, FE and FF can be set. PDO: Process Data Object		

---

<b>p8705[0...1]</b>	<b>CAN Receive PDO 6 / Receive PDO 6</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	8000 06DF hex	[0] 8000 06DF hex [1] 00FE hex
<b>Description:</b>	Sets the communication parameters for CANopen Receive Process Data Object 6 (RPDO 6).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Note:</b>	Corresponds to the CANopen object 1405 hex + 40 hex * x (x: Drive number 0 ... 7). Transmission types 0, 1, FE and FF can be set. PDO: Process Data Object		

---

<b>p8706[0...1]</b>	<b>CAN Receive PDO 7 / Receive PDO 7</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	8000 06DF hex	[0] 8000 06DF hex [1] 00FE hex
<b>Description:</b>	Sets the communication parameters for CANopen Receive Process Data Object 7 (RPDO 7).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Note:</b>	Corresponds to the CANopen object 1406 hex + 40 hex * x (x: Drive number 0 ... 7). Transmission types 0, 1, FE and FF can be set. PDO: Process Data Object		

---

<b>p8707[0...1]</b>	<b>CAN Receive PDO 8 / Receive PDO 8</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	8000 06DF hex	[0] 8000 06DF hex [1] 00FE hex
<b>Description:</b>	Sets the communication parameters for CANopen Receive Process Data Object 8 (RPDO 8).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Note:</b>	Corresponds to the CANopen object 1407 hex + 40 hex * x (x: Drive number 0 ... 7). Transmission types 0, 1, FE and FF can be set. PDO: Process Data Object		

<b>p8710[0...3]</b>	<b>CAN Receive Mapping for RPDO 1 / Mapping RPDO 1</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204, 9206
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Receive Process Data Object 1 (RPDO 1).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1600 hex + 40 hex * x (x: Drive number 0 ... 7). Dummy mapping not supported. The parameter can only be written online when the associated COB ID in p870x is set as invalid.		
<b>p8711[0...3]</b>	<b>CAN Receive Mapping for RPDO 2 / Mapping RPDO 2</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204, 9206
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Receive Process Data Object 2 (RPDO 2).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1601 hex + 40 hex * x (x: Drive number 0 ... 7). Dummy mapping not supported. The parameter can only be written online when the associated COB ID in p870x is set as invalid.		
<b>p8712[0...3]</b>	<b>CAN Receive Mapping for RPDO 3 / Mapping RPDO 3</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204, 9206
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Receive Process Data Object 3 (RPDO 3).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1602 hex + 40 hex * x (x: Drive number 0 ... 7). Dummy mapping not supported. The parameter can only be written online when the associated COB ID in p870x is set as invalid.		

---

<b>p8713[0...3]</b>	<b>CAN Receive Mapping for RPDO 4 / Mapping RPDO 4</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204, 9206
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Receive Process Data Object 4 (RPDO 4).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1603 hex + 40 hex * x (x: Drive number 0 ... 7). Dummy mapping not supported. The parameter can only be written online when the associated COB ID in p870x is set as invalid.		

---

<b>p8714[0...3]</b>	<b>CAN Receive Mapping for RPDO 5 / Mapping RPDO 5</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Receive Process Data Object 5 (RPDO 5).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1604 hex + 40 hex * x (x: Drive number 0 ... 7). Dummy mapping not supported. The parameter can only be written online when the associated COB ID in p870x is set as invalid.		

---

<b>p8715[0...3]</b>	<b>CAN Receive Mapping for RPDO 6 / Mapping RPDO 6</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Receive Process Data Object 6 (RPDO 6).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1605 hex + 40 hex * x (x: Drive number 0 ... 7). Dummy mapping not supported. The parameter can only be written online when the associated COB ID in p870x is set as invalid.		

<b>p8716[0...3]</b>	<b>CAN Receive Mapping for RPDO 7 / Mapping RPDO 7</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Receive Process Data Object 7 (RPDO 7).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1606 hex + 40 hex * x (x: Drive number 0 ... 7). Dummy mapping not supported. The parameter can only be written online when the associated COB ID in p870x is set as invalid.		
<b>p8717[0...3]</b>	<b>CAN Receive Mapping for RPDO 8 / Mapping RPDO 8</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Receive Process Data Object 8 (RPDO 8).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1607 hex + 40 hex * x (x: Drive number 0 ... 7). Dummy mapping not supported. The parameter can only be written online when the associated COB ID in p870x is set as invalid.		
<b>p8720[0...4]</b>	<b>CAN Transmit PDO 1 / Transmit PDO 1</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9208, 9210
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	C000 06DF hex	[0] C000 06DF hex [1] 00FE hex [2] 0000 hex [3] 0000 hex [4] 0000 hex
<b>Description:</b>	Sets the communication parameters for CANopen Transmit Process Data Object 1 (TPDO 1).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type [2] = Inhibit time (in 100 µs) [3] = Reserved [4] = Event timer (in ms)		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Notice:</b>	For inhibit time and event timer, the following apply: A value that is not a multiple integer of the CANopen sampling time is rounded-off.		

**Note:** Corresponds to the CANopen object 1800 hex + 40 hex \* x (x: Drive number 0 ... 7).  
Transmission types 0, 1 ... F0, FE and FF can be set.  
p8848: CANopen sampling time  
PDO: Process Data Object

---

### p8721[0...4] CAN Transmit PDO 2 / Transmit PDO 2

VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9208, 9210
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	C000 06DF hex	[0] C000 06DF hex [1] 00FE hex [2] 0000 hex [3] 0000 hex [4] 0000 hex

**Description:** Sets the communication parameters for CANopen Transmit Process Data Object 2 (TPDO 2).

**Index:**  
[0] = PDO COB-ID  
[1] = PDO transmission type  
[2] = Inhibit time (in 100 µs)  
[3] = Reserved  
[4] = Event timer (in ms)

**Dependency:** A valid COB-ID can only be set for the available (existing) channel.

**Notice:** For inhibit time and event timer, the following apply:

A value that is not a multiple integer of the CANopen sampling time is rounded-off.

**Note:** Corresponds to the CANopen object 1801 hex + 40 hex \* x (x: Drive number 0 ... 7).  
Transmission types 0, 1 ... F0, FE and FF can be set.  
p8848: CANopen sampling time  
PDO: Process Data Object

---

### p8722[0...4] CAN Transmit PDO 3 / Transmit PDO 3

VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9208, 9210
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	C000 06DF hex	[0] C000 06DF hex [1] 00FE hex [2] 0000 hex [3] 0000 hex [4] 0000 hex

**Description:** Sets the communication parameters for CANopen Transmit Process Data Object 3 (TPDO 3).

**Index:**  
[0] = PDO COB-ID  
[1] = PDO transmission type  
[2] = Inhibit time (in 100 µs)  
[3] = Reserved  
[4] = Event timer (in ms)

**Dependency:** A valid COB-ID can only be set for the available (existing) channel.

**Notice:** For inhibit time and event timer, the following apply:

A value that is not a multiple integer of the CANopen sampling time is rounded-off.

**Note:** Corresponds to the CANopen object 1802 hex + 40 hex \* x (x: Drive number 0 ... 7).  
Transmission types 0, 1 ... F0, FE and FF can be set.  
p8848: CANopen sampling time  
PDO: Process Data Object

---

<b>p8723[0...4]</b>	<b>CAN Transmit PDO 4 / Transmit PDO 4</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> C000 06DF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> 9208, 9210 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> [0] C000 06DF hex [1] 00FE hex [2] 0000 hex [3] 0000 hex [4] 0000 hex
<b>Description:</b>	Sets the communication parameters for CANopen Transmit Process Data Object 4 (TPDO 4).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type [2] = Inhibit time (in 100 µs) [3] = Reserved [4] = Event timer (in ms)		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Notice:</b>	For inhibit time and event timer, the following apply: A value that is not a multiple integer of the CANopen sampling time is rounded-off.		
<b>Note:</b>	Corresponds to the CANopen object 1803 hex + 40 hex * x (x: Drive number 0 ... 7). Transmission types 0, 1 ... F0, FE and FF can be set. p8848: CANopen sampling time PDO: Process Data Object		

---

<b>p8724[0...4]</b>	<b>CAN Transmit PDO 5 / Transmit PDO 5</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> C000 06DF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> 9208 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> [0] C000 06DF hex [1] 00FE hex [2] 0000 hex [3] 0000 hex [4] 0000 hex
<b>Description:</b>	Sets the communication parameters for CANopen Transmit Process Data Object 5 (TPDO 5).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type [2] = Inhibit time (in 100 µs) [3] = Reserved [4] = Event timer (in ms)		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Notice:</b>	For inhibit time and event timer, the following apply: A value that is not a multiple integer of the CANopen sampling time is rounded-off.		
<b>Note:</b>	Corresponds to the CANopen object 1804 hex + 40 hex * x (x: Drive number 0 ... 7). Transmission types 0, 1 ... F0, FE and FF can be set. p8848: CANopen sampling time PDO: Process Data Object		

<b>p8725[0...4]</b>		<b>CAN Transmit PDO 6 / Transmit PDO 6</b>	
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9208
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	C000 06DF hex	[0] C000 06DF hex
			[1] 00FE hex
			[2] 0000 hex
			[3] 0000 hex
			[4] 0000 hex
<b>Description:</b>	Sets the communication parameters for CANopen Transmit Process Data Object 6 (TPDO 6).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type [2] = Inhibit time (in 100 µs) [3] = Reserved [4] = Event timer (in ms)		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Notice:</b>	For inhibit time and event timer, the following apply: A value that is not a multiple integer of the CANopen sampling time is rounded-off.		
<b>Note:</b>	Corresponds to the CANopen object 1805 hex + 40 hex * x (x: Drive number 0 ... 7). Transmission types 0, 1 ... F0, FE and FF can be set. p8848: CANopen sampling time PDO: Process Data Object		

<b>p8726[0...4]</b>		<b>CAN Transmit PDO 7 / Transmit PDO 7</b>	
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9208
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	C000 06DF hex	[0] C000 06DF hex
			[1] 00FE hex
			[2] 0000 hex
			[3] 0000 hex
			[4] 0000 hex
<b>Description:</b>	Sets the communication parameters for CANopen Transmit Process Data Object 7 (TPDO 7).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type [2] = Inhibit time (in 100 µs) [3] = Reserved [4] = Event timer (in ms)		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Notice:</b>	For inhibit time and event timer, the following apply: A value that is not a multiple integer of the CANopen sampling time is rounded-off.		
<b>Note:</b>	Corresponds to the CANopen object 1806 hex + 40 hex * x (x: Drive number 0 ... 7). Transmission types 0, 1 ... F0, FE and FF can be set. p8848: CANopen sampling time PDO: Process Data Object		

<b>p8727[0...4]</b>	<b>CAN Transmit PDO 8 / Transmit PDO 8</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> C000 06DF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> 9208 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> [0] C000 06DF hex [1] 00FE hex [2] 0000 hex [3] 0000 hex [4] 0000 hex
<b>Description:</b>	Sets the communication parameters for CANopen Transmit Process Data Object 8 (TPDO 8).		
<b>Index:</b>	[0] = PDO COB-ID [1] = PDO transmission type [2] = Inhibit time (in 100 µs) [3] = Reserved [4] = Event timer (in ms)		
<b>Dependency:</b>	A valid COB-ID can only be set for the available (existing) channel.		
<b>Notice:</b>	For inhibit time and event timer, the following apply: A value that is not a multiple integer of the CANopen sampling time is rounded-off.		
<b>Note:</b>	Corresponds to the CANopen object 1807 hex + 40 hex * x (x: Drive number 0 ... 7). Transmission types 0, 1 ... F0, FE and FF can be set. p8848: CANopen sampling time PDO: Process Data Object		
<b>p8730[0...3]</b>	<b>CAN Transmit Mapping for TPDO 1 / Mapping TPDO 1</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> FFFF FFFF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> 9208, 9210 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Transmit Process Data Object 1 (TPDO 1).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1A00 hex + 40 hex * x (x: Drive number 0 ... 7). The parameter can only be written online when the associated COB ID in p872x is set as invalid.		
<b>p8731[0...3]</b>	<b>CAN Transmit Mapping for TPDO 2 / Mapping TPDO 2</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> FFFF FFFF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> 9208, 9210 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Transmit Process Data Object 2 (TPDO 2).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1A01 hex + 40 hex * x (x: Drive number 0 ... 7). The parameter can only be written online when the associated COB ID in p872x is set as invalid.		

<b>p8732[0...3]</b>	<b>CAN Transmit Mapping for TPDO 3 / Mapping TPDO 3</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9208, 9210
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Transmit Process Data Object 3 (TPDO 3).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1A02 hex + 40 hex * x (x: Drive number 0 ... 7). The parameter can only be written online when the associated COB ID in p872x is set as invalid.		
<b>p8733[0...3]</b>	<b>CAN Transmit Mapping for TPDO 4 / Mapping TPDO 4</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9208, 9210
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Transmit Process Data Object 4 (TPDO 4).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1A03 hex + 40 hex * x (x: Drive number 0 ... 7). The parameter can only be written online when the associated COB ID in p872x is set as invalid.		
<b>p8734[0...3]</b>	<b>CAN Transmit Mapping for TPDO 5 / Mapping TPDO 5</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9208
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Transmit Process Data Object 5 (TPDO 5).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1A04 hex + 40 hex * x (x: Drive number 0 ... 7). The parameter can only be written online when the associated COB ID in p872x is set as invalid.		

<b>p8735[0...3]</b>	<b>CAN Transmit Mapping for TPDO 6 / Mapping TPDO 6</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9208
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Transmit Process Data Object 6 (TPDO 6).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1A05 hex + 40 hex * x (x: Drive number 0 ... 7). The parameter can only be written online when the associated COB ID in p872x is set as invalid.		
<b>p8736[0...3]</b>	<b>CAN Transmit Mapping for TPDO 7 / Mapping TPDO 7</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9208
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Transmit Process Data Object 7 (TPDO 7).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1A06 hex + 40 hex * x (x: Drive number 0 ... 7). The parameter can only be written online when the associated COB ID in p872x is set as invalid.		
<b>p8737[0...3]</b>	<b>CAN Transmit Mapping for TPDO 8 / Mapping TPDO 8</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9208
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the mapping parameters for CANopen Transmit Process Data Object 8 (TPDO 8).		
<b>Index:</b>	[0] = Mapped object 1 [1] = Mapped object 2 [2] = Mapped object 3 [3] = Mapped object 4		
<b>Note:</b>	Corresponds to the CANopen object 1A07 hex + 40 hex * x (x: Drive number 0 ... 7). The parameter can only be written online when the associated COB ID in p872x is set as invalid.		

---

<b>r8739</b>	<b>Minimum CAN processing time / t_processing min</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [µs]	- [µs]	- [µs]
<b>Description:</b>	Displays the minimum, internal, cyclic processing time of CAN communication. The total number of valid TPDO of all CANopen supported drive objects is defined using the following ratio. CAN sampling time (p8848) / CAN minimum processing time (r8739)		
<b>Dependency:</b>	Refer to: r8742, p8848 Refer to: A08758		
<b>Note:</b>	For r8739 = 0.0, the following applies: The total number of valid TPDO of all CANopen-supported drive objects is not limited.		

---

<b>r8742[0...1]</b>	<b>CAN PDO available number / PDO available no.</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the RPDO or TPDO channels that are still available.		
<b>Index:</b>	[0] = RPDO [1] = TPDO		
<b>Dependency:</b>	Refer to: A08758		
<b>Note:</b>	RPDO: Receive Process Data Object TPDO: Transmit Process Data Object The total number of valid RPDO of all CANopen supported drive objects is 25 valid RPDO as a result of the hardware. The total number of valid TPDO of all CANopen supported drive objects is defined using the following ratio. CAN sampling time (p8848) / CAN minimum processing time (r8739)		

---

<b>r8743[0...7]</b>	<b>CAN device module assignment / Device mod assign</b>		
CU_G130_PN (CAN), CU_G150_PN (CAN), CU_G130_DP (CAN), CU_G150_DP (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the assignment of the drive object (drive object number) to the CANopen device module.		
<b>Index:</b>	[0] = Drive object number for device module 0 [1] = Drive object number for device module 1 [2] = Drive object number for device module 2 [3] = Drive object number for device module 3 [4] = Drive object number for device module 4 [5] = Drive object number for device module 5 [6] = Drive object number for device module 6 [7] = Drive object number for device module 7		

<b>p8744 CAN PDO mapping configuration / PDO Mapping config</b>			
VECTOR_G (CAN)	<b>Can be changed:</b> C2, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9204, 9206, 9208, 9210
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	2	2
<b>Description:</b>	Selector switch for the PDO mapping.		
<b>Value:</b>	1: Predefined Connection Set 2: Free PDO Mapping		

<b>r8745[0...15] CO: CAN free PZD receive objects 16 bit / Free PZD recv 16</b>			
VECTOR_G (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Access to free PZD receive objects 16 bit using the SDO transfer.  
An index can only be used, if the corresponding object has not been mapped in a PDO.

**Index:** [0] = PZD object 0  
[1] = PZD object 1  
[2] = PZD object 2  
[3] = PZD object 3  
[4] = PZD object 4  
[5] = PZD object 5  
[6] = PZD object 6  
[7] = PZD object 7  
[8] = PZD object 8  
[9] = PZD object 9  
[10] = PZD object 10  
[11] = PZD object 11  
[12] = PZD object 12  
[13] = PZD object 13  
[14] = PZD object 14  
[15] = PZD object 15

**Note:** Index 0 corresponds to the CANopen object 5800 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 1 corresponds to the CANopen object 5801 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 2 corresponds to the CANopen object 5802 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 3 corresponds to the CANopen object 5803 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 4 corresponds to the CANopen object 5804 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 5 corresponds to the CANopen object 5805 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 6 corresponds to the CANopen object 5806 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 7 corresponds to the CANopen object 5807 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 8 corresponds to the CANopen object 5808 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 9 corresponds to the CANopen object 5809 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 10 corresponds to the CANopen object 580A hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 11 corresponds to the CANopen object 580B hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 12 corresponds to the CANopen object 580C hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 13 corresponds to the CANopen object 580D hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 14 corresponds to the CANopen object 580E hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 15 corresponds to the CANopen object 580F hex + 80 hex \* x (x: Drive number 0 ... 7).

---

<b>p8746[0...15]</b>	<b>CI: CAN free PZD send objects 16 bit / Free PZD send 16</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for free PZD send objects 16 bit for SDO transfer.  
An index can only be used, if the corresponding object has not been mapped in a PDO.

**Index:**  
 [0] = PZD object 0  
 [1] = PZD object 1  
 [2] = PZD object 2  
 [3] = PZD object 3  
 [4] = PZD object 4  
 [5] = PZD object 5  
 [6] = PZD object 6  
 [7] = PZD object 7  
 [8] = PZD object 8  
 [9] = PZD object 9  
 [10] = PZD object 10  
 [11] = PZD object 11  
 [12] = PZD object 12  
 [13] = PZD object 13  
 [14] = PZD object 14  
 [15] = PZD object 15

**Note:**  
 Index 0 corresponds to the CANopen object 5810 hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 1 corresponds to the CANopen object 5811 hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 2 corresponds to the CANopen object 5812 hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 3 corresponds to the CANopen object 5813 hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 4 corresponds to the CANopen object 5814 hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 5 corresponds to the CANopen object 5815 hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 6 corresponds to the CANopen object 5816 hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 7 corresponds to the CANopen object 5817 hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 8 corresponds to the CANopen object 5818 hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 9 corresponds to the CANopen object 5819 hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 10 corresponds to the CANopen object 581A hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 11 corresponds to the CANopen object 581B hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 12 corresponds to the CANopen object 581C hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 13 corresponds to the CANopen object 581D hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 14 corresponds to the CANopen object 581E hex + 80 hex \* x (x: Drive number 0 ... 7).  
 Index 15 corresponds to the CANopen object 581F hex + 80 hex \* x (x: Drive number 0 ... 7).

---

<b>r8747[0...7]</b>	<b>CO: CAN free PZD receive objects 32 bit / Free PZD recv 32</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Access to free PZD receive objects 32 bit using the SDO transfer.  
An index can only be used, if the corresponding object has not been mapped in a PDO.

**Index:**  
 [0] = PZD object 0  
 [1] = PZD object 1  
 [2] = PZD object 2  
 [3] = PZD object 3  
 [4] = PZD object 4

## 2 Parameters

### 2.2 List of parameters

[5] = PZD object 5  
[6] = PZD object 6  
[7] = PZD object 7

**Note:** Index 0 corresponds to the CANopen object 5820 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 1 corresponds to the CANopen object 5821 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 2 corresponds to the CANopen object 5822 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 3 corresponds to the CANopen object 5823 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 4 corresponds to the CANopen object 5824 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 5 corresponds to the CANopen object 5825 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 6 corresponds to the CANopen object 5826 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 7 corresponds to the CANopen object 5827 hex + 80 hex \* x (x: Drive number 0 ... 7).

---

#### p8748[0...7]

#### CI: CAN free PZD send objects 32 bit / Free PZD send 32

VECTOR_G (CAN)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for free PZD send objects 32 bit for SDO transfer.  
An index can only be used, if the corresponding object has not been mapped in a PDO.

**Index:** [0] = PZD object 0  
[1] = PZD object 1  
[2] = PZD object 2  
[3] = PZD object 3  
[4] = PZD object 4  
[5] = PZD object 5  
[6] = PZD object 6  
[7] = PZD object 7

**Note:** Index 0 corresponds to the CANopen object 5830 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 1 corresponds to the CANopen object 5831 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 2 corresponds to the CANopen object 5832 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 3 corresponds to the CANopen object 5833 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 4 corresponds to the CANopen object 5834 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 5 corresponds to the CANopen object 5835 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 6 corresponds to the CANopen object 5836 hex + 80 hex \* x (x: Drive number 0 ... 7).  
Index 7 corresponds to the CANopen object 5837 hex + 80 hex \* x (x: Drive number 0 ... 7).

---

#### r8750[0...15]

#### CAN mapped 16-bit receive objects / RPDO 16 mapped

VECTOR_G (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the mapped 16-bit receive CANopen objects in the process data buffer.  
Example:  
If, e.g. the control word is mapped in an RPDO, then r8750 indicates the position of the control word in the process data buffer.

**Index:** [0] = PZD 1  
[1] = PZD 2  
[2] = PZD 3  
[3] = PZD 4  
[4] = PZD 5  
[5] = PZD 6  
[6] = PZD 7  
[7] = PZD 8

[8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12  
 [12] = PZD 13  
 [13] = PZD 14  
 [14] = PZD 15  
 [15] = PZD 16

---

**r8751[0...15] CAN mapped 16-bit transmit objects / TPDO 16 mapped**

VECTOR_G (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays mapped 16-bit transmit CANopen objects in the process data buffer.

**Index:**

[0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12  
 [12] = PZD 13  
 [13] = PZD 14  
 [14] = PZD 15  
 [15] = PZD 16

**Dependency:** Refer to: r8750

---

**r8760[0...14] CAN mapped 32-bit receive objects / RPDO 32 mapped**

VECTOR_G (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the mapped 32-bit receive CANopen objects in the process data buffer.

**Index:**

[0] = PZD 1 + 2  
 [1] = PZD 2 + 3  
 [2] = PZD 3 + 4  
 [3] = PZD 4 + 5  
 [4] = PZD 5 + 6  
 [5] = PZD 6 + 7  
 [6] = PZD 7 + 8  
 [7] = PZD 8 + 9  
 [8] = PZD 9 + 10  
 [9] = PZD 10 + 11  
 [10] = PZD 11 + 12  
 [11] = PZD 12 + 13  
 [12] = PZD 13 + 14  
 [13] = PZD 14 + 15  
 [14] = PZD 15 + 16

<b>r8761[0...14]</b>	<b>CAN mapped 32-bit transmit objects / TPDO 32 mapped</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays mapped 32-bit transmit CANopen objects in the process data buffer.		
<b>Index:</b>	[0] = PZD 1 + 2 [1] = PZD 2 + 3 [2] = PZD 3 + 4 [3] = PZD 4 + 5 [4] = PZD 5 + 6 [5] = PZD 6 + 7 [6] = PZD 7 + 8 [7] = PZD 8 + 9 [8] = PZD 9 + 10 [9] = PZD 10 + 11 [10] = PZD 11 + 12 [11] = PZD 12 + 13 [12] = PZD 13 + 14 [13] = PZD 14 + 15 [14] = PZD 15 + 16		

<b>r8762</b>	<b>CO: CAN operating mode display / Op mode display</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the currently effective CANopen operating mode. To send the CANopen object 0x6061 mapped in a TPDO, this parameter can be correspondingly interconnected in the PZD interface.		

<b>r8784</b>	<b>CO: CAN status word / Status word</b>				
VECTOR_G (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9226		
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and connector output for the CANopen status word				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Ready for switching on	Yes	No	-
	01	Ready	Yes	No	-
	02	Operation enabled	Yes	No	-
	03	Fault present	Yes	No	-
	04	No coasting active	Yes	No	-
	05	No Quick Stop active	Yes	No	-
	06	Switching-on inhibited active	Yes	No	-
	07	Alarm present	Yes	No	-
	08	Can be freely interconnected (BI: p8785)	Yes	No	-
	09	Control request	Yes	No	-

10	Target reached	Yes	No	-
11	Torque limit reached	Yes	No	-
12	Velocity equal to zero	Yes	No	-
14	Can be freely interconnected (BI: p8786)	Yes	No	-
15	Can be freely interconnected (BI: p8787)	Yes	No	-

**Note:**

Corresponds to the CANopen object 6041 hex + 800 hex \* x (x: Drive number 0 ... 7).

For bit 10:

When the ramp-function generator is activated, the interconnection from CI: p2151 = r1119 can be changed, so that to evaluate bit 10, the setpoint can be retrieved (taken) from in front of the ramp-function generator.

For bit 10, 12:

When braking, the two bits must indicate the same state. This is the reason that the following parameters must be set the same:

p2161 (speed threshold value 3, for r2199.0) = p2163 (speed threshold value 4, for r2197.7)

p2150 (hysteresis speed 3, for r2199.0) = p2164 (hysteresis speed 4, for r2197.7)

**p8785****BI: CAN status word bit 8 / Status word bit 8**

VECTOR_G (CAN)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9226
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:**

Sets the signal source for bit 8 of the CANopen status word.

**Dependency:**

Refer to: r8784

**p8786****BI: CAN status word bit 14 / Status word bit 14**

VECTOR_G (CAN)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9226
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:**

Sets the signal source for bit 14 of the CANopen status word.

**Dependency:**

Refer to: r8784

**p8787****BI: CAN status word bit 15 / Status word bit 15**

VECTOR_G (CAN)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 9226
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:**

Sets the signal source for bit 15 of the CANopen status word.

**Dependency:**

Refer to: r8784

<b>p8790</b>		<b>CAN control word - auto interconnection / STW interc auto</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	1	0	
<b>Description:</b>	Sets the automatic BICO interconnection of the CANopen control word.			
<b>Value:</b>	0: No interconn 1: Interconnection			
<b>Dependency:</b>	Refer to: r2050, r2090, r2091, r2092, r2093, r8750, r8795, r8850, r8890, r8891, r8892, r8893			
<b>Note:</b>	The following BICO interconnections are automatically established if the CANopen control word is mapped at one of the locations x = 0 ... 3 in the receive process data buffer. For SINAMICS S120 with CBC10, the PZD interface IF2 is used: BI: p0840.0 = r889x.0 BI: p0844.0 = r889x.1 BI: p0848.0 = r889x.2 BI: p0852.0 = r889x.3 BI: p2103.0 = r889x.7 For SINAMICS S110, the PZD interface IF1 is used: BI: p0840.0 = r209x.0 BI: p0844.0 = r209x.1 BI: p0848.0 = r209x.2 BI: p0852.0 = r209x.3 BI: p2103.0 = r209x.7 The write access is rejected if a CANopen control word is not mapped at one of these locations. This also causes the project download of the commissioning software to be canceled.			
<b>p8791</b>		<b>CAN stop option code / Stop opt_code</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> C1(3), T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-1	3	-1	
<b>Description:</b>	Setting for the CANopen control word bit 8 "Stop" (CANopen STW.8).			
<b>Value:</b>	-1: No interconn 1: Interconnection CANopen STW.8 with p1142 3: Interconnection CANopen STW.8 with p1140			
<b>Dependency:</b>	Refer to: r8750, r8795, r8850			
<b>Note:</b>	Corresponds to the CANopen object 605D hex + 800 hex * x (x: drive number 0 ... 7). The BICO interconnection is established, if the CANopen control word is mapped at one of the locations x = 0 ... 3 in the receive process data buffer.			

<b>r8792[0]</b>		<b>CO: CAN velocity mode I16 setpoint / Vel mod I16 set</b>																																																																													
VECTOR_G (CAN)	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> 4000H <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -																																																																												
<b>Description:</b>	Display and connector output to interconnect standardized I16 setpoint CANopen objects of the velocity mode for SDO transfer. An index can only be used, if the corresponding object has not been mapped in a PDO.																																																																														
<b>Index:</b>	[0] = VL Target Velocity																																																																														
<b>Note:</b>	For index 0: Corresponds to the CANopen object 6042 hex + 800 hex * x (x: Drive number 0 ... 7). The displayed parameter value is scaled via the reference speed p2000: 4000 hex corresponds to p2000																																																																														
<b>r8795.0...15</b>		<b>CO/BO: CAN control word / Control word</b>																																																																													
VECTOR_G (CAN)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -																																																																												
<b>Description:</b>	Access to the CANopen control word using SDO transfer.																																																																														
<b>Bit field:</b>	<table border="1"> <thead> <tr> <th>Bit</th> <th>Signal name</th> <th>1 signal</th> <th>0 signal</th> <th>FP</th> </tr> </thead> <tbody> <tr><td>00</td><td>ON/OFF1</td><td>Yes</td><td>No</td><td>-</td></tr> <tr><td>01</td><td>Do not activate coast down</td><td>Yes</td><td>No</td><td>-</td></tr> <tr><td>02</td><td>Do not activate a Quick Stop</td><td>Yes</td><td>No</td><td>-</td></tr> <tr><td>03</td><td>Enable operation</td><td>Yes</td><td>No</td><td>-</td></tr> <tr><td>04</td><td>Enable ramp-function generator</td><td>Yes</td><td>No</td><td>-</td></tr> <tr><td>05</td><td>Continue ramp-function generator</td><td>Yes</td><td>No (freeze)</td><td>-</td></tr> <tr><td>06</td><td>Enable speed setpoint</td><td>Yes</td><td>No</td><td>-</td></tr> <tr><td>07</td><td>Acknowledge fault</td><td>Yes</td><td>No</td><td>-</td></tr> <tr><td>08</td><td>Stop</td><td>Yes</td><td>No</td><td>-</td></tr> <tr><td>11</td><td>Freely interconn</td><td>Yes</td><td>No</td><td>-</td></tr> <tr><td>12</td><td>Freely interconn</td><td>Yes</td><td>No</td><td>-</td></tr> <tr><td>13</td><td>Freely interconn</td><td>Yes</td><td>No</td><td>-</td></tr> <tr><td>14</td><td>Freely interconn</td><td>Yes</td><td>No</td><td>-</td></tr> <tr><td>15</td><td>Freely interconn</td><td>Yes</td><td>No</td><td>-</td></tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	FP	00	ON/OFF1	Yes	No	-	01	Do not activate coast down	Yes	No	-	02	Do not activate a Quick Stop	Yes	No	-	03	Enable operation	Yes	No	-	04	Enable ramp-function generator	Yes	No	-	05	Continue ramp-function generator	Yes	No (freeze)	-	06	Enable speed setpoint	Yes	No	-	07	Acknowledge fault	Yes	No	-	08	Stop	Yes	No	-	11	Freely interconn	Yes	No	-	12	Freely interconn	Yes	No	-	13	Freely interconn	Yes	No	-	14	Freely interconn	Yes	No	-	15	Freely interconn	Yes	No	-			
Bit	Signal name	1 signal	0 signal	FP																																																																											
00	ON/OFF1	Yes	No	-																																																																											
01	Do not activate coast down	Yes	No	-																																																																											
02	Do not activate a Quick Stop	Yes	No	-																																																																											
03	Enable operation	Yes	No	-																																																																											
04	Enable ramp-function generator	Yes	No	-																																																																											
05	Continue ramp-function generator	Yes	No (freeze)	-																																																																											
06	Enable speed setpoint	Yes	No	-																																																																											
07	Acknowledge fault	Yes	No	-																																																																											
08	Stop	Yes	No	-																																																																											
11	Freely interconn	Yes	No	-																																																																											
12	Freely interconn	Yes	No	-																																																																											
13	Freely interconn	Yes	No	-																																																																											
14	Freely interconn	Yes	No	-																																																																											
15	Freely interconn	Yes	No	-																																																																											
<b>Dependency:</b>	Refer to: p8790																																																																														
<b>Note:</b>	Corresponds to the CANopen object 6040 hex + 800 hex * x (x: Drive number 0 ... 7).																																																																														
<b>r8796[0]</b>		<b>CO: CAN profile velocity mode I32 setpoints / Pr vel mo I32 set</b>																																																																													
VECTOR_G (CAN)	<b>Can be changed:</b> - <b>Data type:</b> Integer32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> 4000H <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -																																																																												
<b>Description:</b>	Display and connector output to interconnect standardized I32 setpoint CANopen objects of the profile velocity mode for SDO transfer. An index can only be used, if the corresponding object has not been mapped in a PDO.																																																																														
<b>Index:</b>	[0] = Target velocity																																																																														

## 2 Parameters

### 2.2 List of parameters

**Note:** For index 0:  
Corresponds to the CANopen object 60FF hex + 800 hex \* x (x: Drive number 0 ... 7).  
The displayed parameter value is scaled via the reference speed p2000:  
4000 0000 hex corresponds to p2000

---

<b>r8797[0]</b>	<b>CO: CAN profile torque mode I16 setpoints / Pr Tq mod I16 set</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Display and connector output to interconnect standardized I16 setpoint CANopen objects of the profile torque mode for SDO transfer. An index can only be used, if the corresponding object has not been mapped in a PDO.		
<b>Index:</b>	[0] = Target torque		
<b>Note:</b>	For index 0: Corresponds to the CANopen object 6071 hex + 800 hex * x (x: Drive number 0 ... 7). The displayed parameter value is scaled via the reference torque p2003: 4000 hex corresponds to p2003		

---

<b>p8798[0...1]</b>	<b>CAN speed conversion factor / n_conv_factor</b>		
VECTOR_G (CAN)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	4294967295	1
<b>Description:</b>	The factor converts the required velocity units into the internal velocity units (U/s). With the factory setting, for CANopen, the velocity units are increments/second. The parameter corresponds to the CANopen object 6094 hex. The internal velocity is calculated as follows: $n\_set\_internal = object\ 6094.1 / object\ 6094.2 * 1/(p0408 * 2^{p0418}) * n\_set\_bus$		
<b>Index:</b>	[0] = Counter [1] = Denominator		

---

<b>p8806[0...53]</b>	<b>Identification and Maintenance 1 / I&amp;M 1</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Parameters for the PROFINET data set "Identification and Maintenance 1" (I&M 1). This information is known as "System identifier" and "Location identifier".		
<b>Dependency:</b>	Refer to: p8807, p8808		
<b>Notice:</b>	Only characters belonging to the standard ASCII character set may be used (32 dec to 126 dec).		
<b>Note:</b>	An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual. For p8806[0...31]: System identifier. For p8806[32...53]: Location identifier.		

<b>p8807[0...15]</b>	<b>Identification and Maintenance 2 / I&amp;M 2</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	
<b>Description:</b>	Parameters for the PROFINET data set "Identification and Maintenance 2" (I&M 2). This information is known as "Installation date".		
<b>Dependency:</b>	Refer to: p8806, p8808		
<b>Note:</b>	An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual. For p8807[0...15]: Dates of installation or first commissioning of the device with the following format options (ASCII): YYYY-MM-DD or YYYY-MM-DD hh:mm - YYYY: year - MM: month 01 ... 12 - DD: day 01 ... 31 - hh: hours 00 ... 23 - mm: minutes 00 ... 59 Separators must be placed between the individual data, i.e. a hyphen '-', space ' ' and colon ':'.		
<b>p8808[0...53]</b>	<b>Identification and Maintenance 3 / I&amp;M 3</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	
<b>Description:</b>	Parameters for the PROFINET data set "Identification and Maintenance 3" (I&M 3). This information is known as "Supplementary information".		
<b>Dependency:</b>	Refer to: p8806, p8807		
<b>Notice:</b>	Only characters belonging to the standard ASCII character set may be used (32 dec to 126 dec).		
<b>Note:</b>	An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual. For p8808[0...53]: Any supplementary information and comments (ASCII).		
<b>p8809[0...53]</b>	<b>Identification and Maintenance 4 / I&amp;M 4</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 bin	1111 1111 bin	0000 bin
<b>Description:</b>	Parameters for the PROFINET data set "Identification and Maintenance 4" (I&M 4). This information is known as "Signature".		
<b>Note:</b>	Parameter p8809 contains the information described below. For p8809[0...3]: Contains the value from r9781[0] "SI change tracking checksum functional". For p8809[4...7]: Contains the value from r9782[0] "SI change tracking time stamp checksum functional".		

For p8809[8...53]:  
Reserved.

---

<b>p8811</b>	<b>SINAMICS Link project selection / Project sel</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> C1(1) <b>Data type:</b> Integer16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 8	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 64	<b>Access level:</b> 3 <b>Func. diagram:</b> 2197, 2198 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 64
<b>Description:</b>	Project selection for SINAMICS Link.		
<b>Value:</b>	8: Project 8 participants, 32 words 12: Project 12 participants, 24 words 16: Project 16 participants, 16 words 64: Project 64 participants, 16 words		
<b>Note:</b>	SINAMICS Link requires that the appropriate CBE20 firmware version is selected (p8835 = 3). The parameter must be set the same for all participants. A change only becomes effective after a POWER ON. The parameter is not influenced by setting the factory setting.		

---

<b>p8812[0...1]</b>	<b>SINAMICS Link clock cycle settings / Clock cyc set</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> C1(1) <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 2000	<b>Access level:</b> 3 <b>Func. diagram:</b> 2197, 2198 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> [0] 1 [1] 2000
<b>Description:</b>	Sets the clock cycle for SINAMICS Link. For index 0: 0 = clock synchronous mode not activated, 1 = clock synchronous mode activated For index 1: Possible values: 500, 1000, 2000 µs		
<b>Index:</b>	[0] = Activate isochronous mode [1] = Bus CC [µs]		
<b>Dependency:</b>	Refer to: p8811		
<b>Note:</b>	SINAMICS Link requires that the appropriate CBE20 firmware version is selected (p8835 = 3). A change only becomes effective after a POWER ON. The parameter is not influenced by setting the factory setting. For index 0: Is applicable for the synchronization of the application. The SINAMICS Link itself is always synchronous. For index 1: The value must be set the same for all participants. When newly selecting the project p8811, p8812[1] is set to the factory setting. For p8811 = 8, 12, 16 the following applies: Min/max/factory setting: 500/500/500 µs For p8811 = 64, the following applies: Min/max/factory setting: 1000/2000/2000 µs		

<b>p8815[0...1]</b>	<b>IF1/IF2 PZD functionality selection / IF1/IF2 PZD fct</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1) <b>Data type:</b> Integer16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 1	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 2	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Selects the PZD interface for the clock cycle synchronization functionality and PROFIsafe.		
<b>Value:</b>	1: Interface 1 (IF1) 2: Interface 2 (IF2)		
<b>Index:</b>	[0] = Isochronous mode [1] = PROFIsafe		
<b>Dependency:</b>	Refer to: p8839		
<b>Note:</b>	A change only becomes effective after POWER ON, reset or project download. Example: p8815[0] = 1: IF1 supports the isochronous mode. p8815[1] = 2: IF2 supports PROFIsafe.		
<b>p8829</b>	<b>CBE2x remote controller number / CBE2x rem ctrl num</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> C1(1) <b>Data type:</b> Integer16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 1	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 2	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the number of remote controllers expected for PROFINET CBE20/CBE25. The "Shared Device" functionality is activated with a value = 2. The drive is being accessed by two PROFINET controllers simultaneously: - automation controller (SIMOTION or SIMATIC A-CPU). - safety controller (SIMATIC F-CPU).		
<b>Value:</b>	1: Automation or Safety 2: Automation and Safety		
<b>Notice:</b>	The F CPU may only use PROFIsafe telegrams. The A CPU must be connected to enable the F CPU to gain access. Set the value = 1 to commission the F CPU individually.		
<b>Note:</b>	A change only becomes effective after a POWER ON.		
<b>p8835</b>	<b>CBE20 firmware selection / CBE20 FW sel</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> C1(1) <b>Data type:</b> Integer16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 1	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 99	<b>Access level:</b> 3 <b>Func. diagram:</b> 2197, 2198 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Selects the firmware version for the CBE20.		
<b>Value:</b>	1: PROFINET Device 2: PROFINET gate 3: SINAMICS Link 4: EtherNet/IP 5: Modbus TCP 99: Customer-specific from the OEM directory		

## 2 Parameters

### 2.2 List of parameters

**Note:** A change only becomes effective after a POWER ON.  
The parameter is not influenced by setting the factory setting.  
CBE20: Communication Board Ethernet 20

---

<b>p8836</b>	<b>SINAMICS link node address / Node address</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> C1(1) <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 64	<b>Access level:</b> 3 <b>Func. diagram:</b> 2198 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0

**Description:** Selects the node address for the SINAMICS Link on the Communication Board Ethernet 20 (CBE20).  
p8836 = 0: SINAMICS Link deactivated  
p8836 = 1 ... 64: SINAMICS Link node address

**Dependency:** Refer to: p8811, p8835

**Note:** The maximum number of permitted participant addresses is limited by the project selection p8811.  
SINAMICS Link requires that the appropriate CBE20 firmware version is selected (p8835 = 3).  
A change only becomes effective after a POWER ON.  
The parameter is not influenced by setting the factory setting.

---

<b>p8837</b>	<b>IF2 STW1.10 = 0 mode / IF2 STW1.10=0</b>		
VECTOR_G, B_INF, ENC	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 2	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 2

**Description:** Sets the processing mode for PROFIdrive STW1.10 "master control by PLC".  
Generally, control world 1 is received with the first receive word (PZD1) (this is in conformance to the PROFIdrive profile). The behavior of STW1.10 = 0 corresponds to that of the PROFIdrive profile. For other applications that deviate from this, the behavior can be adapted using this particular parameter.

**Value:** 0: Freeze setpoints and continue to process sign-of-life  
1: Freeze setpoints and sign-of-life  
2: Do not freeze setpoints

**Recommendation:** Do not change the setting p2037 = 0.

**Note:** If the STW1 is not transferred according to the PROFIdrive with PZD1 (with bit 10 "master control by PLC"), then p2037 should be set to 2.

---

<b>p8839[0...1]</b>	<b>PZD interface hardware assignment / PZD IF HW assign</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1) <b>Data type:</b> Integer16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 99	<b>Access level:</b> 3 <b>Func. diagram:</b> 2197, 2198 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 99

**Description:** Assignment of the hardware for cyclic communications via PZD interface 1 (IF1) and interface 2 (IF2).

**Value:** 0: Inactive  
1: Control Unit onboard  
2: COMM BOARD  
99: Automatic

**Index:** [0] = Interface 1  
[1] = Interface 2

**Dependency:** Refer to: p2030, p8815

**Note:** For value = 99 (automatic) the following applies:

- if a COMM BOARD is not inserted, then the onboard interface (PROFIBUS/PROFINET/USS) communicates via IF1.
- if a CBE20 is inserted, then the following applies:
  - CU320-2 DP: PROFINET CBE20 communicates via IF1 and PROFIBUS/USS via IF2.
  - CU320-2 PN: PROFINET onboard communicates via IF1 and PROFINET CBE20 via IF2.
- CAN CBC10 always communicates via IF2.

For a value not equal to 99 (automatic) the following applies:

- both indices must be set to a number not equal to 99 (automatic).

A change only becomes effective after POWER ON, reset or download.

---

<b>p8840</b>	<b>COMM BOARD monitoring time / CB t_monit</b>		
CU_G130_PN (COMM BOARD, PN CBE20), CU_G150_PN (COMM BOARD, PN CBE20), CU_G130_DP (COMM BOARD, PN CBE20), CU_G150_DP (COMM BOARD, PN CBE20)	<b>Can be changed:</b> U, T <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0 [ms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 65535000 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 20 [ms]
<b>Description:</b>	Sets the monitoring time to monitor the process data received via COMM BOARD. If, during this time, the Control Unit does not receive any process data from the COMM BOARD, then an appropriate message is output.		
<b>Dependency:</b>	Refer to: p8835		
<b>Note:</b>	This monitoring function only monitors the connection between the Control Unit and COMM BOARD and not the data traffic on the fieldbus. For CBE20 firmware version MODBUS TCP (p8835 =5) then the fieldbus data traffic is also monitored. Value = 0: Monitoring is deactivated.		

---

<b>p8841[0...239]</b>	<b>COMM BOARD send configuration data / CB s config_dat</b>		
CU_G130_PN (COMM BOARD, PN CBE20), CU_G150_PN (COMM BOARD, PN CBE20), CU_G130_DP (COMM BOARD, PN CBE20), CU_G150_DP (COMM BOARD, PN CBE20)	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 65535	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the send configuration data for the COMM BOARD. The setting is activated with p8842.		
<b>Dependency:</b>	Refer to: p8842		
<b>Note:</b>	The configuration data are specific to the inserted COMM BOARD. For CBE20, the configuration data are not relevant.		

---

<b>p8842</b>	<b>Activate COMM BOARD send configuration / CB s config act</b>		
CU_G130_PN (COMM BOARD, PN CBE20), CU_G150_PN (COMM BOARD, PN CBE20), CU_G130_DP (COMM BOARD, PN CBE20), CU_G150_DP (COMM BOARD, PN CBE20)	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 3 <b>Func. diagram:</b> 2199, 2200 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Activate a modified send configuration for COMM BOARD. With p8842 = 1, the values in p8841 are transferred to the COMM BOARD and activated. After this, p8842 is automatically set to zero.		
<b>Dependency:</b>	Refer to: p8841		
<b>Note:</b>	For CBE20, certain SINAMICS parameters are newly evaluated and activated. An existing, cyclic bus connection is interrupted.		

## 2 Parameters

### 2.2 List of parameters

<b>r8843.0...2</b>	<b>BO: IF2 PZD state / IF2 PZD state</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the PROFIdrive PZD state.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Setpoint failure	Yes	No
	01	Clock cycle synchronous operation active	Yes	No
	02	Fieldbus oper	Yes	No
<b>Dependency:</b>	Refer to: p2044			
<b>Note:</b>	When using the "setpoint failure" signal, the bus can be monitored and an application-specific response triggered when the setpoint fails.			
<b>p8844</b>	<b>IF2 fault delay / IF2 F delay</b>			
VECTOR_G, B_INF, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0 [s]	100 [s]	0 [s]	
<b>Description:</b>	Sets the delay time to initiate fault F01910 after a setpoint failure. The time until the fault is initiated can be used by the application. This means that it is possible to respond to the failure while the drive is still operational (e.g. emergency retraction).			
<b>Dependency:</b>	Refer to: r2043			
<b>p8848</b>	<b>IF2 PZD sampling time / IF2 PZD t_sample</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(3)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	1.00 [ms]	16.00 [ms]	4.00 [ms]	
<b>Description:</b>	Sets the sampling time for the cyclic interface 2 (IF2).			
<b>Note:</b>	The system only permits certain sampling times and after writing to this parameter, displays the value that has actually been set. For clock cycle synchronous operation, the specified bus cycle time applies (Tdp).			
<b>r8849[0...139]</b>	<b>COMM BOARD receive configuration data / CB r config_dat</b>			
CU_G130_PN (COMM BOARD, PN CBE20), CU_G150_PN (COMM BOARD, PN CBE20), CU_G130_DP (COMM BOARD, PN CBE20), CU_G150_DP (COMM BOARD, PN CBE20)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the receive configuration data for the COMM BOARD.			

<b>r8850[0...19]</b>		<b>CO: IF2 PZD receive word / IF2 PZD rcv word</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2491	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Connector output for interconnecting the PZD (setpoints) received via interface 2 in the word format.			
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20			
<b>Note:</b>	IF2: Interface 2 PZD1 to PZD2 are displayed bit-serially in r8890 to r8891.			

<b>r8850[0...31]</b>		<b>CO: IF2 PZD receive word / IF2 PZD rcv word</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2485, 2491, 9204, 9206	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Connector output for interconnecting the PZD (setpoints) received via interface 2 in the word format.			
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19			

## 2 Parameters

### 2.2 List of parameters

[19] = PZD 20  
 [20] = PZD 21  
 [21] = PZD 22  
 [22] = PZD 23  
 [23] = PZD 24  
 [24] = PZD 25  
 [25] = PZD 26  
 [26] = PZD 27  
 [27] = PZD 28  
 [28] = PZD 29  
 [29] = PZD 30  
 [30] = PZD 31  
 [31] = PZD 32

**Dependency:** Refer to: r8860, r8890, r8891, r8892, r8893

**Notice:** Where there is a multiple interconnection of a connector output, all the connector inputs must either have Integer or FloatingPoint data types.

A BICO interconnection for a single PZD can only take place either on r8850 or r8860.

**Note:** IF2: Interface 2

PZD1 to PZD4 are displayed bit-serially in r8890 to r8893.

#### **r8850[0...9] CO: IF2 PZD receive word / IF2 PZD rcv word**

B\_INF

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** 2491

**P-Group:** Communications

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** 4000H

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:** Connector output for interconnecting the PZD (setpoints) received via interface 2 in the word format.

**Index:**

[0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10

**Note:** IF2: Interface 2

PZD1 to PZD2 are displayed bit-serially in r8890 to r8891.

#### **r8850[0...4] CO: IF2 PZD receive word / IF2 PZD rcv word**

TM31, TM120, TM150,  
 TB30

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** 2491

**P-Group:** Communications

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** 4000H

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:** Connector output for interconnecting the PZD (setpoints) received via interface 2 in the word format.

**Index:**

[0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5

**Note:** IF2: Interface 2

PZD1 to PZD2 are displayed bit-serially in r8890 to r8891.

<b>r8850[0...3]</b>		<b>CO: IF2 PZD receive word / IF2 PZD recv word</b>	
<b>ENC</b>	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2485, 2491, 9204, 9206
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Connector output for interconnecting the PZD (setpoints) received via interface 2 in the word format.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4		
<b>Dependency:</b>	Refer to: r8860, r8890, r8891, r8892, r8893		
<b>Notice:</b>	Where there is a multiple interconnection of a connector output, all the connector inputs must either have Integer or FloatingPoint data types. A BICO interconnection for a single PZD can only take place either on r8850 or r8860.		
<b>Note:</b>	IF2: Interface 2 PZD1 to PZD4 are displayed bit-serially in r8890 to r8893.		
<b>p8851[0...24]</b>		<b>CI: IF2 PZD send word / IF2 PZD send word</b>	
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2493, 9210
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects the PZD (actual values) to be sent via interface 2 in the word format.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20 [20] = PZD 21 [21] = PZD 22 [22] = PZD 23 [23] = PZD 24 [24] = PZD 25		
<b>Note:</b>	IF2: Interface 2		

---

<b>p8851[0...31]</b>	<b>CI: IF2 PZD send word / IF2 PZD send word</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2487, 9208
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects the PZD (actual values) to be sent via interface 2 in the word format.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20 [20] = PZD 21 [21] = PZD 22 [22] = PZD 23 [23] = PZD 24 [24] = PZD 25 [25] = PZD 26 [26] = PZD 27 [27] = PZD 28 [28] = PZD 29 [29] = PZD 30 [30] = PZD 31 [31] = PZD 32		
<b>Dependency:</b>	Refer to: p8861		
<b>Note:</b>	IF2: Interface 2		

---

<b>p8851[0...9]</b>	<b>CI: IF2 PZD send word / IF2 PZD send word</b>		
B_INF	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2493, 9210
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects the PZD (actual values) to be sent via interface 2 in the word format.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7		

[7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10

**Note:** IF2: Interface 2

---

### p8851[0...4] CI: IF2 PZD send word / IF2 PZD send word

TM31, TM120, TM150, TB30	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2493, 9210
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Selects the PZD (actual values) to be sent via interface 2 in the word format.

**Index:**  
 [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5

**Note:** IF2: Interface 2

---

### p8851[0...11] CI: IF2 PZD send word / IF2 PZD send word

ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2487, 9208
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> 4000H	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Selects the PZD (actual values) to be sent via interface 2 in the word format.

**Index:**  
 [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12

**Dependency:** Refer to: p8861

**Note:** IF2: Interface 2

---

### r8853[0...24] IF2 diagnostics PZD send / IF2 diag PZD send

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2493
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the sent PZD (actual values) sent via interface 2.

**Index:**  
 [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6

## 2 Parameters

### 2.2 List of parameters

[6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12  
 [12] = PZD 13  
 [13] = PZD 14  
 [14] = PZD 15  
 [15] = PZD 16  
 [16] = PZD 17  
 [17] = PZD 18  
 [18] = PZD 19  
 [19] = PZD 20  
 [20] = PZD 21  
 [21] = PZD 22  
 [22] = PZD 23  
 [23] = PZD 24  
 [24] = PZD 25

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

**Note:** IF2: Interface 2

#### r8853[0...31] IF2 diagnostics PZD send / IF2 diag PZD send

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2487, 9208, 9210
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the sent PZD (actual values) sent via interface 2.

**Index:**  
 [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12  
 [12] = PZD 13  
 [13] = PZD 14  
 [14] = PZD 15  
 [15] = PZD 16

[16] = PZD 17  
 [17] = PZD 18  
 [18] = PZD 19  
 [19] = PZD 20  
 [20] = PZD 21  
 [21] = PZD 22  
 [22] = PZD 23  
 [23] = PZD 24  
 [24] = PZD 25  
 [25] = PZD 26  
 [26] = PZD 27  
 [27] = PZD 28  
 [28] = PZD 29  
 [29] = PZD 30  
 [30] = PZD 31  
 [31] = PZD 32

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

**Dependency:** Refer to: p8851, p8861

**Note:** IF2: Interface 2

### r8853[0...9] IF2 diagnostics PZD send / IF2 diag PZD send

B\_INF      **Can be changed:** -      **Calculated:** -      **Access level:** 3  
**Data type:** Unsigned16      **Dyn. index:** -      **Func. diagram:** 2493  
**P-Group:** Communications      **Unit group:** -      **Unit selection:** -  
**Not for motor type:** -      **Scaling:** -      **Expert list:** 1  
**Min**      **Max**      **Factory setting**  
 -      -      -

**Description:** Displays the sent PZD (actual values) sent via interface 2.

**Index:**  
 [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-

## 2 Parameters

### 2.2 List of parameters

07	Bit 7	ON	OFF	-
08	Bit 8	ON	OFF	-
09	Bit 9	ON	OFF	-
10	Bit 10	ON	OFF	-
11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

**Note:** IF2: Interface 2

---

#### r8853[0...4] IF2 diagnostics PZD send / IF2 diag PZD send

TM31, TM120, TM150, TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2493
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the sent PZD (actual values) sent via interface 2.

**Index:**  
 [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

**Note:** IF2: Interface 2

---

#### r8853[0...11] IF2 diagnostics PZD send / IF2 diag PZD send

ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2487, 9208, 9210
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the sent PZD (actual values) sent via interface 2.

**Index:**  
 [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8

[8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

**Dependency:** Refer to: p8851, p8861

**Note:** IF2: Interface 2

#### r8854 COMM BOARD state / CB state

CU_G130_PN (COMM BOARD, PN CBE20), CU_G150_PN (COMM BOARD, PN CBE20), CU_G130_DP (COMM BOARD, PN CBE20), CU_G150_DP (COMM BOARD, PN CBE20)	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
---	--	--	---

**Description:** Status display for COMM BOARD.

<b>Value:</b>	0: No initialization 1: Fatal fault 2: Initialization 3: Send configuration 4: Receive configuration 5: Non-cyclic communication 6: Cyclic communications but no setpoints (stop/no clock cycle) 255: Cyclic communication
---------------	---

#### r8858[0...39] COMM BOARD read diagnostics channel / CB diag\_chan read

CU_G130_PN (COMM BOARD, PN CBE20), CU_G150_PN (COMM BOARD, PN CBE20), CU_G130_DP (COMM BOARD, PN CBE20), CU_G150_DP (COMM BOARD, PN CBE20)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
---	---	--	---

**Description:** Displays the COMM BOARD diagnostics data.

**Note:** The display depends on the COMM BOARD being used.

Example for CBE20:

r8858[0] = 4201 --> Siemens CBE20

r8858[1] = 1 --> firmware type = PROFINET device (see p8835)

r8858[2] = x --> state of cyclic communication

r8858[3] = y --> state of the IP configuration

r8858[4] = 1281 --> device ID 0501 hex = SINAMICS S120/S150

r8858[5 ... 39] --> only for internal Siemens diagnostics.

<b>r8859[0...7]</b>		<b>COMM BOARD identification data / CB ident data</b>		
CU_G130_PN (COMM BOARD, PN CBE20), CU_G150_PN (COMM BOARD, PN CBE20), CU_G130_DP (COMM BOARD, PN CBE20), CU_G150_DP (COMM BOARD, PN CBE20)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 65535	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -	
<b>Description:</b>	Displays the COMM BOARD identification data			
<b>Index:</b>	[0] = Version interface structure [1] = Version interface driver [2] = Company (Siemens = 42) [3] = CB type [4] = Firmware version [5] = Firmware date (year) [6] = Firmware date (day/month) [7] = Firmware patch/hot fix			
<b>Note:</b>	Example for CBE20: r8859[0] = 100 --> version of the interface structure V1.00 r8859[1] = 111 --> version of the interface driver V1.11 r8859[2] = 42 --> SIEMENS r8859[3] = 0 --> CBE20 r8859[4] = 1200 --> first part, firmware version V12.00 (second part, see index 7) r8859[5] = 2010 --> year 2010 r8859[6] = 2306 --> 23rd June r8859[7] = 1300 --> second part, firmware version (complete version: V12.00.13.00)			

<b>r8860[0...30]</b>		<b>CO: IF2 PZD receive double word / IF2 PZD recv DW</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> Integer32  <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> -  <b>Unit group:</b> - <b>Scaling:</b> 4000H <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2485, 9204, 9206 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -	
<b>Description:</b>	Connector output for interconnecting the PZD (setpoints) received via interface 2 in the double word format.			
<b>Index:</b>	[0] = PZD 1 + 2 [1] = PZD 2 + 3 [2] = PZD 3 + 4 [3] = PZD 4 + 5 [4] = PZD 5 + 6 [5] = PZD 6 + 7 [6] = PZD 7 + 8 [7] = PZD 8 + 9 [8] = PZD 9 + 10 [9] = PZD 10 + 11 [10] = PZD 11 + 12 [11] = PZD 12 + 13 [12] = PZD 13 + 14 [13] = PZD 14 + 15 [14] = PZD 15 + 16 [15] = PZD 16 + 17 [16] = PZD 17 + 18 [17] = PZD 18 + 19 [18] = PZD 19 + 20 [19] = PZD 20 + 21 [20] = PZD 21 + 22 [21] = PZD 22 + 23 [22] = PZD 23 + 24			

[23] = PZD 24 + 25  
 [24] = PZD 25 + 26  
 [25] = PZD 26 + 27  
 [26] = PZD 27 + 28  
 [27] = PZD 28 + 29  
 [28] = PZD 29 + 30  
 [29] = PZD 30 + 31  
 [30] = PZD 31 + 32

**Dependency:**

Refer to: r8850

**Notice:**

Where there is a multiple interconnection of a connector output, all the connector inputs must either have Integer or FloatingPoint data types.

A BICO interconnection for a single PZD can only take place either on r8850 or r8860.

A maximum of 4 indices of the "trace" function can be used.

**Note:**

IF2: Interface 2

**r8860[0...2]****CO: IF2 PZD receive double word / IF2 PZD recv DW**

ENC

**Can be changed:** -**Calculated:** -**Access level:** 3**Data type:** Integer32**Dyn. index:** -**Func. diagram:** 2485, 9204, 9206**P-Group:** Communications**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** 4000H**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Connector output for interconnecting the PZD (setpoints) received via interface 2 in the double word format.

**Index:**

[0] = PZD 1 + 2  
 [1] = PZD 2 + 3  
 [2] = PZD 3 + 4

**Dependency:**

Refer to: r8850

**Notice:**

Where there is a multiple interconnection of a connector output, all the connector inputs must either have Integer or FloatingPoint data types.

A BICO interconnection for a single PZD can only take place either on r8850 or r8860.

**Note:**

IF2: Interface 2

**p8861[0...30]****CI: IF2 PZD send double word / IF2 PZD send DW**

VECTOR\_G

**Can be changed:** U, T**Calculated:** -**Access level:** 3**Data type:** Unsigned32 / Integer32**Dyn. index:** -**Func. diagram:** 2487, 9208, 9210**P-Group:** Communications**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** 4000H**Expert list:** 1**Min****Max****Factory setting**

-

-

0

**Description:**

Selects the PZD (actual values) to be sent via interface 2 in the double word format.

**Index:**

[0] = PZD 1 + 2  
 [1] = PZD 2 + 3  
 [2] = PZD 3 + 4  
 [3] = PZD 4 + 5  
 [4] = PZD 5 + 6  
 [5] = PZD 6 + 7  
 [6] = PZD 7 + 8  
 [7] = PZD 8 + 9  
 [8] = PZD 9 + 10  
 [9] = PZD 10 + 11  
 [10] = PZD 11 + 12  
 [11] = PZD 12 + 13  
 [12] = PZD 13 + 14  
 [13] = PZD 14 + 15  
 [14] = PZD 15 + 16  
 [15] = PZD 16 + 17  
 [16] = PZD 17 + 18

## 2 Parameters

### 2.2 List of parameters

[17] = PZD 18 + 19  
 [18] = PZD 19 + 20  
 [19] = PZD 20 + 21  
 [20] = PZD 21 + 22  
 [21] = PZD 22 + 23  
 [22] = PZD 23 + 24  
 [23] = PZD 24 + 25  
 [24] = PZD 25 + 26  
 [25] = PZD 26 + 27  
 [26] = PZD 27 + 28  
 [27] = PZD 28 + 29  
 [28] = PZD 29 + 30  
 [29] = PZD 30 + 31  
 [30] = PZD 31 + 32

**Dependency:**

Refer to: p8851

**Notice:**

A BICO interconnection for a single PZD can only take place either on p8851 or p8861.

**Note:**

IF2: Interface 2

#### p8861[0...10]

#### CI: IF2 PZD send double word / IF2 PZD send DW

ENC

**Can be changed:** U, T

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32 / Integer32

**Dyn. index:** -

**Func. diagram:** 2487, 9208, 9210

**P-Group:** Communications

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** 4000H

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

0

**Description:**

Selects the PZD (actual values) to be sent via interface 2 in the double word format.

**Index:**

[0] = PZD 1 + 2  
 [1] = PZD 2 + 3  
 [2] = PZD 3 + 4  
 [3] = PZD 4 + 5  
 [4] = PZD 5 + 6  
 [5] = PZD 6 + 7  
 [6] = PZD 7 + 8  
 [7] = PZD 8 + 9  
 [8] = PZD 9 + 10  
 [9] = PZD 10 + 11  
 [10] = PZD 11 + 12

**Dependency:**

Refer to: p8851

**Notice:**

A BICO interconnection for a single PZD can only take place either on p8851 or p8861.

**Note:**

IF2: Interface 2

#### r8863[0...30]

#### IF2 diagnostics PZD send double word / IF2 diag send DW

VECTOR\_G

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** 2487

**P-Group:** Communications

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:**

Displays the PZD sent via interface 2 (actual values) with double word format.

**Index:**

[0] = PZD 1 + 2  
 [1] = PZD 2 + 3  
 [2] = PZD 3 + 4  
 [3] = PZD 4 + 5  
 [4] = PZD 5 + 6  
 [5] = PZD 6 + 7  
 [6] = PZD 7 + 8  
 [7] = PZD 8 + 9  
 [8] = PZD 9 + 10

[9] = PZD 10 + 11  
 [10] = PZD 11 + 12  
 [11] = PZD 12 + 13  
 [12] = PZD 13 + 14  
 [13] = PZD 14 + 15  
 [14] = PZD 15 + 16  
 [15] = PZD 16 + 17  
 [16] = PZD 17 + 18  
 [17] = PZD 18 + 19  
 [18] = PZD 19 + 20  
 [19] = PZD 20 + 21  
 [20] = PZD 21 + 22  
 [21] = PZD 22 + 23  
 [22] = PZD 23 + 24  
 [23] = PZD 24 + 25  
 [24] = PZD 25 + 26  
 [25] = PZD 26 + 27  
 [26] = PZD 27 + 28  
 [27] = PZD 28 + 29  
 [28] = PZD 29 + 30  
 [29] = PZD 30 + 31  
 [30] = PZD 31 + 32

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-
	16	Bit 16	ON	OFF	-
	17	Bit 17	ON	OFF	-
	18	Bit 18	ON	OFF	-
	19	Bit 19	ON	OFF	-
	20	Bit 20	ON	OFF	-
	21	Bit 21	ON	OFF	-
	22	Bit 22	ON	OFF	-
	23	Bit 23	ON	OFF	-
	24	Bit 24	ON	OFF	-
	25	Bit 25	ON	OFF	-
	26	Bit 26	ON	OFF	-
	27	Bit 27	ON	OFF	-
	28	Bit 28	ON	OFF	-
	29	Bit 29	ON	OFF	-
	30	Bit 30	ON	OFF	-
	31	Bit 31	ON	OFF	-

**Notice:** A maximum of 4 indices of the "trace" function can be used.

**Note:** IF2: Interface 2

<b>r8863[0...10]</b>	<b>IF2 diagnostics PZD send double word / IF2 diag send DW</b>				
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2487		
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the PZD sent via interface 2 (actual values) with double word format.				
<b>Index:</b>	[0] = PZD 1 + 2 [1] = PZD 2 + 3 [2] = PZD 3 + 4 [3] = PZD 4 + 5 [4] = PZD 5 + 6 [5] = PZD 6 + 7 [6] = PZD 7 + 8 [7] = PZD 8 + 9 [8] = PZD 9 + 10 [9] = PZD 10 + 11 [10] = PZD 11 + 12				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-
	16	Bit 16	ON	OFF	-
	17	Bit 17	ON	OFF	-
	18	Bit 18	ON	OFF	-
	19	Bit 19	ON	OFF	-
	20	Bit 20	ON	OFF	-
	21	Bit 21	ON	OFF	-
	22	Bit 22	ON	OFF	-
	23	Bit 23	ON	OFF	-
	24	Bit 24	ON	OFF	-
	25	Bit 25	ON	OFF	-
	26	Bit 26	ON	OFF	-
	27	Bit 27	ON	OFF	-
	28	Bit 28	ON	OFF	-
	29	Bit 29	ON	OFF	-
	30	Bit 30	ON	OFF	-
	31	Bit 31	ON	OFF	-
<b>Notice:</b>	A maximum of 4 indices of the "trace" function can be used.				
<b>Note:</b>	IF2: Interface 2				

<b>r8867[0...1]</b>	<b>IF2 PZD maximum interconnected / IF2 PZDmaxIntercon</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Display for the maximum interconnected PZD in the receive/send direction Index 0: receive (r8850, r8860) Index 1: send (p8851, p8861)		
<b>p8870[0...15]</b>	<b>SINAMICS Link PZD receive word / PZD recv word</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20), B_INF (PN CBE20), TM31 (PN CBE20), TM120 (PN CBE20), TM150 (PN CBE20), TB30 (PN CBE20), ENC (PN CBE20)	<b>Can be changed:</b> T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 32	<b>Access level:</b> 3 <b>Func. diagram:</b> 2198, 2199 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Assignment of a PZD to a telegram word from a SINAMICS Link receive telegram. For p8839[0] = 2 (COMM BOARD via interface 1), the following applies: - PZD p2050[index] is assigned by means of p8870[index], p8872[index]. For p8839[1] = 2 (COMM BOARD via interface 2), the following applies: - using p8870[index], p8872[index], the PZD is assigned r8850[index].		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16		
<b>Dependency:</b>	Refer to: p8872		
<b>Note:</b>	Value range: 0: Not used 1 ... 32: telegram word A pair of values p8870[index], p8872[index] may only be used once in single a device. A change only becomes effective after POWER ON, reset, project download or p8842 = 1.		

<b>p8870[0...31]</b>	<b>SINAMICS Link PZD receive word / PZD rcv word</b>		
VECTOR_G (PN CBE20)	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2198, 2199
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	32	0
<b>Description:</b>	Assignment of a PZD to a telegram word from a SINAMICS Link receive telegram. For p8839[0] = 2 (COMM BOARD via interface 1), the following applies: - PZD p2050[index] is assigned by means of p8870[index], p8872[index]. For p8839[1] = 2 (COMM BOARD via interface 2), the following applies: - using p8870[index], p8872[index], the PZD is assigned r8850[Index].		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20 [20] = PZD 21 [21] = PZD 22 [22] = PZD 23 [23] = PZD 24 [24] = PZD 25 [25] = PZD 26 [26] = PZD 27 [27] = PZD 28 [28] = PZD 29 [29] = PZD 30 [30] = PZD 31 [31] = PZD 32		
<b>Dependency:</b>	Refer to: p8872		
<b>Note:</b>	Value range: 0: Not used 1 ... 32: telegram word A pair of values p8870[index], p8872[index] may only be used once in single a device. A change only becomes effective after POWER ON, reset, project download or p8842 = 1.		

<b>p8871[0...15]</b>		<b>SINAMICS Link PZD send word / PZD send word</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20), B_INF (PN CBE20), TM31 (PN CBE20), TM120 (PN CBE20), TM150 (PN CBE20), TB30 (PN CBE20), ENC (PN CBE20)	<b>Can be changed:</b> T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 32	<b>Access level:</b> 3 <b>Func. diagram:</b> 2198, 2199 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0	
<b>Description:</b>	Assigns a PZD to a telegram word in the SINAMICS Link send telegram. For p8839[0] = 2 (COMM BOARD via interface 1), the following applies: - p8871[index] assigns PZD p2051[index]. For p8839[1] = 2 (COMM BOARD via interface 2), the following applies: - p8871[index] assigns PZD p8851[index].			
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16			
<b>Dependency:</b>	Refer to: p2051, p8851 Refer to: A50002			
<b>Note:</b>	Value range: 0: Not used 1 ... 32: send telegram word A specific telegram word send may only be used once within a single device. A change only becomes effective after POWER ON, reset, project download or p8842 = 1.			

<b>p8871[0...31]</b>		<b>SINAMICS Link PZD send word / PZD send word</b>		
VECTOR_G (PN CBE20)	<b>Can be changed:</b> T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 32	<b>Access level:</b> 3 <b>Func. diagram:</b> 2198, 2199 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0	
<b>Description:</b>	Assigns a PZD to a telegram word in the SINAMICS Link send telegram. For p8839[0] = 2 (COMM BOARD via interface 1), the following applies: - p8871[index] assigns PZD p2051[index]. For p8839[1] = 2 (COMM BOARD via interface 2), the following applies: - p8871[index] assigns PZD p8851[index].			

## 2 Parameters

### 2.2 List of parameters

**Index:**

- [0] = PZD 1
- [1] = PZD 2
- [2] = PZD 3
- [3] = PZD 4
- [4] = PZD 5
- [5] = PZD 6
- [6] = PZD 7
- [7] = PZD 8
- [8] = PZD 9
- [9] = PZD 10
- [10] = PZD 11
- [11] = PZD 12
- [12] = PZD 13
- [13] = PZD 14
- [14] = PZD 15
- [15] = PZD 16
- [16] = PZD 17
- [17] = PZD 18
- [18] = PZD 19
- [19] = PZD 20
- [20] = PZD 21
- [21] = PZD 22
- [22] = PZD 23
- [23] = PZD 24
- [24] = PZD 25
- [25] = PZD 26
- [26] = PZD 27
- [27] = PZD 28
- [28] = PZD 29
- [29] = PZD 30
- [30] = PZD 31
- [31] = PZD 32

**Dependency:** Refer to: p2051, p8851  
Refer to: A50002

**Note:** Value range:  
0: Not used  
1 ... 32: send telegram word

A specific telegram word send may only be used once within a single device.

A change only becomes effective after POWER ON, reset, project download or p8842 = 1.

---

#### p8872[0...15] SINAMICS Link PZD receive address / PZD rcv adr.

CU_G130_PN (PN CBE20),	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
CU_G150_PN (PN CBE20),	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2198, 2199
CU_G130_DP (PN CBE20),	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
CU_G150_DP (PN CBE20),	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
CU_G150_DP (PN CBE20), B_INF (PN CBE20), TM31 (PN CBE20), TM120 (PN CBE20), TM150 (PN CBE20), TB30 (PN CBE20), ENC (PN CBE20)	<b>Min</b> 0	<b>Max</b> 64	<b>Factory setting</b> 0

**Description:** Selects the address of the SINAMICS Link sender from which the process data (PZD) is received.

**Index:**

- [0] = PZD 1
- [1] = PZD 2
- [2] = PZD 3
- [3] = PZD 4
- [4] = PZD 5
- [5] = PZD 6
- [6] = PZD 7

[7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12  
 [12] = PZD 13  
 [13] = PZD 14  
 [14] = PZD 15  
 [15] = PZD 16

**Dependency:** Refer to: p8870

**Note:** Value range:  
 0: Not used  
 1 ... 64: address

A change only becomes effective after POWER ON, reset, project download or p8842 = 1.

---

### p8872[0...31] SINAMICS Link PZD receive address / PZD rcv adr.

VECTOR\_G (PN  
 CBE20)

**Can be changed:** T

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned16

**Dyn. index:** -

**Func. diagram:** 2198, 2199

**P-Group:** Communications

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

64

0

**Description:** Selects the address of the SINAMICS Link sender from which the process data (PZD) is received.

**Index:**

[0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12  
 [12] = PZD 13  
 [13] = PZD 14  
 [14] = PZD 15  
 [15] = PZD 16  
 [16] = PZD 17  
 [17] = PZD 18  
 [18] = PZD 19  
 [19] = PZD 20  
 [20] = PZD 21  
 [21] = PZD 22  
 [22] = PZD 23  
 [23] = PZD 24  
 [24] = PZD 25  
 [25] = PZD 26  
 [26] = PZD 27  
 [27] = PZD 28  
 [28] = PZD 29  
 [29] = PZD 30  
 [30] = PZD 31  
 [31] = PZD 32

**Dependency:** Refer to: p8870

**Note:** Value range:  
 0: Not used  
 1 ... 64: address

A change only becomes effective after POWER ON, reset, project download or p8842 = 1.

<b>r8874[0...19] IF2 diagnostics bus address PZD receive / IF2 diag addr recv</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the bus address of sender from which the PZD is received.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20		

<b>r8874[0...31] IF2 diagnostics bus address PZD receive / IF2 diag addr recv</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the bus address of sender from which the PZD is received.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20 [20] = PZD 21 [21] = PZD 22 [22] = PZD 23		

[23] = PZD 24  
 [24] = PZD 25  
 [25] = PZD 26  
 [26] = PZD 27  
 [27] = PZD 28  
 [28] = PZD 29  
 [29] = PZD 30  
 [30] = PZD 31  
 [31] = PZD 32

**Note:** IF2: Interface 2  
 Value range:  
 0 - 125: Bus address of the sender  
 255: Not assigned

---

**r8874[0...9] IF2 diagnostics bus address PZD receive / IF2 diag addr recv**

B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the bus address of sender from which the PZD is received.

**Index:** [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10

---

**r8874[0...4] IF2 diagnostics bus address PZD receive / IF2 diag addr recv**

TM31, TM120, TM150, TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the bus address of sender from which the PZD is received.

**Index:** [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5

---

**r8874[0...3] IF2 diagnostics bus address PZD receive / IF2 diag addr recv**

ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the bus address of sender from which the PZD is received.

**Index:** [0] = PZD 1  
 [1] = PZD 2

## 2 Parameters

### 2.2 List of parameters

**Note:**  
 [2] = PZD 3  
 [3] = PZD 4  
 IF2: Interface 2  
 Value range:  
 0 - 125: Bus address of the sender  
 255: Not assigned

---

<b>r8875[0...19]</b>	<b>IF2 diagnostics telegram offset PZD receive / IF diag offs recv</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the byte offset of the PZD in the receive telegram.

**Index:**  
 [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12  
 [12] = PZD 13  
 [13] = PZD 14  
 [14] = PZD 15  
 [15] = PZD 16  
 [16] = PZD 17  
 [17] = PZD 18  
 [18] = PZD 19  
 [19] = PZD 20

---

<b>r8875[0...31]</b>	<b>IF2 diagnostics telegram offset PZD receive / IF diag offs recv</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the byte offset of the PZD in the receive telegram.

**Index:**  
 [0] = PZD 1  
 [1] = PZD 2  
 [2] = PZD 3  
 [3] = PZD 4  
 [4] = PZD 5  
 [5] = PZD 6  
 [6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10  
 [10] = PZD 11  
 [11] = PZD 12  
 [12] = PZD 13  
 [13] = PZD 14  
 [14] = PZD 15  
 [15] = PZD 16

[16] = PZD 17  
 [17] = PZD 18  
 [18] = PZD 19  
 [19] = PZD 20  
 [20] = PZD 21  
 [21] = PZD 22  
 [22] = PZD 23  
 [23] = PZD 24  
 [24] = PZD 25  
 [25] = PZD 26  
 [26] = PZD 27  
 [27] = PZD 28  
 [28] = PZD 29  
 [29] = PZD 30  
 [30] = PZD 31  
 [31] = PZD 32

**Note:** IF2: Interface 2  
 Value range:  
 0 - 242: Byte offset  
 255: Not assigned

---

<b>r8875[0...9]</b>	<b>IF2 diagnostics telegram offset PZD receive / IF diag offs recv</b>		
B_INF	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the byte offset of the PZD in the receive telegram.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10		

---

<b>r8875[0...4]</b>	<b>IF2 diagnostics telegram offset PZD receive / IF diag offs recv</b>		
TM31, TM120, TM150, TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the byte offset of the PZD in the receive telegram.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5		

<b>r8875[0...3]</b>		<b>IF2 diagnostics telegram offset PZD receive / IF diag offs recv</b>		
ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -	
<b>Description:</b>	Displays the byte offset of the PZD in the receive telegram.			
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4			
<b>Note:</b>	IF2: Interface 2 Value range: 0 - 242: Byte offset 255: Not assigned			

<b>r8876[0...24]</b>		<b>IF2 diagnostics telegram offset PZD send / IF2 diag offs send</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -	
<b>Description:</b>	Displays the byte offset of the PZD in the send telegram.			
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20 [20] = PZD 21 [21] = PZD 22 [22] = PZD 23 [23] = PZD 24 [24] = PZD 25			

<b>r8876[0...31]</b>		<b>IF2 diagnostics telegram offset PZD send / IF2 diag offs send</b>	
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the byte offset of the PZD in the send telegram.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20 [20] = PZD 21 [21] = PZD 22 [22] = PZD 23 [23] = PZD 24 [24] = PZD 25 [25] = PZD 26 [26] = PZD 27 [27] = PZD 28 [28] = PZD 29 [29] = PZD 30 [30] = PZD 31 [31] = PZD 32		
<b>Note:</b>	IF2: Interface 2 Value range: 0 - 242: Byte offset 255: Not assigned		

<b>r8876[0...9]</b>		<b>IF2 diagnostics telegram offset PZD send / IF2 diag offs send</b>	
B_INF	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the byte offset of the PZD in the send telegram.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6		

## 2 Parameters

### 2.2 List of parameters

[6] = PZD 7  
 [7] = PZD 8  
 [8] = PZD 9  
 [9] = PZD 10

---

<b>r8876[0...4]</b>	<b>IF2 diagnostics telegram offset PZD send / IF2 diag offs send</b>		
TM31, TM120, TM150, TB30	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the byte offset of the PZD in the send telegram.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5		

---

<b>r8876[0...11]</b>	<b>IF2 diagnostics telegram offset PZD send / IF2 diag offs send</b>		
ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the byte offset of the PZD in the send telegram.		
<b>Index:</b>	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12		
<b>Note:</b>	IF2: Interface 2 Value range: 0 - 242: Byte offset 255: Not assigned		

---

<b>p8880[0...15]</b>	<b>BI: IF2 binector-connector converter status word 1 / Bin/con ZSW1</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2489
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Selects bits to be sent via interface 2. The individual bits are combined to form status word 1.		
<b>Index:</b>	[0] = Bit 0 [1] = Bit 1 [2] = Bit 2 [3] = Bit 3		

[4] = Bit 4  
 [5] = Bit 5  
 [6] = Bit 6  
 [7] = Bit 7  
 [8] = Bit 8  
 [9] = Bit 9  
 [10] = Bit 10  
 [11] = Bit 11  
 [12] = Bit 12  
 [13] = Bit 13  
 [14] = Bit 14  
 [15] = Bit 15

**Dependency:** Refer to: p8888, r8889

---

<b>p8881[0...15]</b>	<b>BI: IF2 binector-connector converter status word 2 / Bin/con ZSW2</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, ENC	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2489 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0

**Description:** Selects bits to be sent via interface 2.  
 The individual bits are combined to form status word 2.

**Index:** [0] = Bit 0  
 [1] = Bit 1  
 [2] = Bit 2  
 [3] = Bit 3  
 [4] = Bit 4  
 [5] = Bit 5  
 [6] = Bit 6  
 [7] = Bit 7  
 [8] = Bit 8  
 [9] = Bit 9  
 [10] = Bit 10  
 [11] = Bit 11  
 [12] = Bit 12  
 [13] = Bit 13  
 [14] = Bit 14  
 [15] = Bit 15

**Dependency:** Refer to: p8888, r8889

---

<b>p8882[0...15]</b>	<b>BI: IF2 binector-connector converter status word 3 / Bin/con ZSW3</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, ENC	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2489 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0

**Description:** Selects bits to be sent via interface 2.  
 The individual bits are combined to form free status word 3.

**Index:** [0] = Bit 0  
 [1] = Bit 1  
 [2] = Bit 2  
 [3] = Bit 3  
 [4] = Bit 4  
 [5] = Bit 5  
 [6] = Bit 6  
 [7] = Bit 7  
 [8] = Bit 8  
 [9] = Bit 9

## 2 Parameters

### 2.2 List of parameters

[10] = Bit 10  
[11] = Bit 11  
[12] = Bit 12  
[13] = Bit 13  
[14] = Bit 14  
[15] = Bit 15

**Dependency:** Refer to: p8888, r8889

---

#### **p8883[0...15] BI: IF2 binector-connector converter status word 4 / Bin/con ZSW4**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, ENC	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2489 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
--	---	--	--

**Description:** Selects bits to be sent via interface 2.  
The individual bits are combined to form free status word 4.

**Index:** [0] = Bit 0  
[1] = Bit 1  
[2] = Bit 2  
[3] = Bit 3  
[4] = Bit 4  
[5] = Bit 5  
[6] = Bit 6  
[7] = Bit 7  
[8] = Bit 8  
[9] = Bit 9  
[10] = Bit 10  
[11] = Bit 11  
[12] = Bit 12  
[13] = Bit 13  
[14] = Bit 14  
[15] = Bit 15

**Dependency:** Refer to: p8888, r8889

---

#### **p8884[0...15] BI: IF2 binector-connector converter status word 5 / Bin/con ZSW5**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, ENC	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2489 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
--	---	--	--

**Description:** Selects bits to be sent via interface 2.  
The individual bits are combined to form free status word 5.

**Index:** [0] = Bit 0  
[1] = Bit 1  
[2] = Bit 2  
[3] = Bit 3  
[4] = Bit 4  
[5] = Bit 5  
[6] = Bit 6  
[7] = Bit 7  
[8] = Bit 8  
[9] = Bit 9  
[10] = Bit 10  
[11] = Bit 11  
[12] = Bit 12  
[13] = Bit 13  
[14] = Bit 14  
[15] = Bit 15

**Dependency:** Refer to: p8888, r8889

<b>p8888[0...4]</b>	<b>IF2 invert binector-connector converter status word / Bin/con ZSW inv</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, ENC	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2489	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 0000 0000 0000 bin	

**Description:** Setting to invert the individual binector inputs of the binector connector converter.

**Index:**  
 [0] = Status word 1  
 [1] = Status word 2  
 [2] = Free status word 3  
 [3] = Free status word 4  
 [4] = Free status word 5

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Bit 0	Inverted	Not inverted	-
	01	Bit 1	Inverted	Not inverted	-
	02	Bit 2	Inverted	Not inverted	-
	03	Bit 3	Inverted	Not inverted	-
	04	Bit 4	Inverted	Not inverted	-
	05	Bit 5	Inverted	Not inverted	-
	06	Bit 6	Inverted	Not inverted	-
	07	Bit 7	Inverted	Not inverted	-
	08	Bit 8	Inverted	Not inverted	-
	09	Bit 9	Inverted	Not inverted	-
	10	Bit 10	Inverted	Not inverted	-
	11	Bit 11	Inverted	Not inverted	-
	12	Bit 12	Inverted	Not inverted	-
	13	Bit 13	Inverted	Not inverted	-
	14	Bit 14	Inverted	Not inverted	-
	15	Bit 15	Inverted	Not inverted	-

**Dependency:** Refer to: p8880, p8881, p8882, p8883, p8884, r8889

<b>r8889[0...4]</b>	<b>CO: IF2 send binector-connector converter status word / Bin/con ZSW send</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	

**Description:** Connector output to interconnect the status words to a PZD send word.

**Index:**  
 [0] = Status word 1  
 [1] = Status word 2  
 [2] = Free status word 3  
 [3] = Free status word 4  
 [4] = Free status word 5

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-

## 2 Parameters

### 2.2 List of parameters

11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

**Dependency:** Refer to: p8851, p8880, p8881, p8882, p8883, p8884, p8888

**Note:** r8889 together with p8880 to p8884 forms five binector-connector converters.

#### r8890.0...15 **BO: IF2 PZD1 receive bit-serial / IF2 PZD1 recv bitw**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> 2485, 2491, 9204, 9206 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>
-	-	-	-

**Description:** Binector output for bit-serial interconnection of PZD1 (normally control word 1) received via interface 2.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

**Dependency:** Refer to: r8850

**Note:** IF2: Interface 2

#### r8891.0...15 **BO: IF2 PZD2 receive bit-serial / IF2 PZD2 recv bitw**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> 2485, 2491, 9204, 9206 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>
-	-	-	-

**Description:** Binector output for bit-serial interconnection of PZD2 received via interface 2.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-

11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

**Dependency:** Refer to: r8850

**Note:** IF2: Interface 2

---

### r8892.0...15 BO: IF2 PZD3 receive bit-serial / IF2 PZD3 recv bitw

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2485, 9204, 9206
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Binector output for bit-serial interconnection of PZD3 received via interface 2.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

**Dependency:** Refer to: r8850

**Note:** IF2: Interface 2

---

### r8893.0...15 BO: IF2 PZD4 receive bit-serial / IF2 PZD4 recv bitw

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, ENC	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2485, 9204, 9206
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Binector output for bit-serial interconnection of PZD4 (normally control word 2) received via interface 2.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-

## 2 Parameters

### 2.2 List of parameters

11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

**Dependency:** Refer to: r8850

**Note:** IF2: Interface 2

---

#### r8894.0...15 **BO: IF2 connector-binector converter binector output / Con/bin outp**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> 2485, 2491 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>
-	-	-	-

**Description:** Binector output for bit-serial interconnection of a PZD word received via interface 2.  
The PZD is selected via p8899[0].

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-
	11	Bit 11	ON	OFF	-
	12	Bit 12	ON	OFF	-
	13	Bit 13	ON	OFF	-
	14	Bit 14	ON	OFF	-
	15	Bit 15	ON	OFF	-

**Dependency:** Refer to: p8899

---

#### r8895.0...15 **BO: IF2 connector-binector converter binector output / Con/bin outp**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Communications <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> 2485, 2491 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>
-	-	-	-

**Description:** Binector output for bit-serial interconnection of a PZD word received via interface 2.  
The PZD is selected via p8899[1].

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	ON	OFF	-
	01	Bit 1	ON	OFF	-
	02	Bit 2	ON	OFF	-
	03	Bit 3	ON	OFF	-
	04	Bit 4	ON	OFF	-
	05	Bit 5	ON	OFF	-
	06	Bit 6	ON	OFF	-
	07	Bit 7	ON	OFF	-
	08	Bit 8	ON	OFF	-
	09	Bit 9	ON	OFF	-
	10	Bit 10	ON	OFF	-

11	Bit 11	ON	OFF	-
12	Bit 12	ON	OFF	-
13	Bit 13	ON	OFF	-
14	Bit 14	ON	OFF	-
15	Bit 15	ON	OFF	-

**Dependency:** Refer to: p8898, p8899

### p8898[0...1] IF2 invert connector-binector converter binector output / Con/bin outp inv

CU_G130_PN,	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
CU_G150_PN,	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2485, 2491
CU_G130_DP,	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
CU_G150_DP,	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
VECTOR_G, B_INF,	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
TM31, TM120, TM150,	-	-	0000 0000 0000 0000 bin
ENC	-	-	-

**Description:** Setting to invert the individual binector outputs of the connector-binector converter.  
Using p8898[0], the signals of CI: p8899[0] are influenced.  
Using p8898[1], the signals of CI: p8899[1] are influenced.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Bit 0	Inverted	Not inverted	-
	01	Bit 1	Inverted	Not inverted	-
	02	Bit 2	Inverted	Not inverted	-
	03	Bit 3	Inverted	Not inverted	-
	04	Bit 4	Inverted	Not inverted	-
	05	Bit 5	Inverted	Not inverted	-
	06	Bit 6	Inverted	Not inverted	-
	07	Bit 7	Inverted	Not inverted	-
	08	Bit 8	Inverted	Not inverted	-
	09	Bit 9	Inverted	Not inverted	-
	10	Bit 10	Inverted	Not inverted	-
	11	Bit 11	Inverted	Not inverted	-
	12	Bit 12	Inverted	Not inverted	-
	13	Bit 13	Inverted	Not inverted	-
	14	Bit 14	Inverted	Not inverted	-
	15	Bit 15	Inverted	Not inverted	-

**Dependency:** Refer to: r8894, r8895, p8899

### p8899[0...1] CI: IF2 connector-binector converter signal source / Con/bin S\_src

CU_G130_PN,	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
CU_G150_PN,	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2485, 2491
CU_G130_DP,	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
CU_G150_DP,	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
VECTOR_G, B_INF,	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
TM31, TM120, TM150,	-	-	0
ENC	-	-	-

**Description:** Sets the signal source for the connector-binector converter.  
A PZD receive word can be selected as signal source. The signals are available to be serially passed-on (interconnection).

**Dependency:** Refer to: r8850, r8894, r8895, p8898

**Note:** From the signal source set via the connector input, the corresponding lower 16 bits are converted.  
p8899[0...1] together with r8894.0...15 and r8895.0...15 forms two connector-binector converters:  
Connector input p8899[0] to binector output in r8894.0...15  
Connector input p8899[1] to binector output in r8895.0...15

## 2 Parameters

### 2.2 List of parameters

---

<b>p8900[0...239]</b>	<b>IE Name of Station / IE Name Stat</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Sets the station name for the Industrial Ethernet interface (X127) on the Control Unit. The actual station name is displayed in r8910.		
<b>Dependency:</b>	Refer to: p8905, r8910		
<b>Note:</b>	An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual. The interface configuration (p8900 and following) is activated with p8905 = 1. The parameter is not influenced by setting the factory setting. IE: Industrial Ethernet		
<hr/>			
<b>p8901[0...3]</b>	<b>IE IP address / IE IP addr</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the IP address for the Industrial Ethernet interface (X127) on the Control Unit. The actual IP address is displayed in r8911.		
<b>Dependency:</b>	Refer to: p8905, r8911		
<b>Note:</b>	The interface configuration (p8900 and following) is activated with p8905 = 1. The parameter is not influenced by setting the factory setting.		
<hr/>			
<b>p8902[0...3]</b>	<b>IE def gateway / IE Def Gateway</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the default gateway for the Industrial Ethernet interface (X127) on the Control Unit. The actual default gateway is displayed in r8912.		
<b>Dependency:</b>	Refer to: p8905, r8912		
<b>Note:</b>	The setting p8902[0...3] = 0 or p8902 = p8901 (own IP address) means that a standard gateway has not been set. The interface configuration (p8900 and following) is activated with p8905 = 1. The parameter is not influenced by setting the factory setting.		
<hr/>			
<b>p8903[0...3]</b>	<b>IE Subnet Mask / IE Subnet Mask</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the subnet mask for the Industrial Ethernet interface (X127) on the Control Unit. The actual subnet mask is displayed in r8913.		
<b>Dependency:</b>	Refer to: p8905, r8913		

**Note:** The interface configuration (p8900 and following) is activated with p8905 = 1.  
The parameter is not influenced by setting the factory setting.

---

<b>p8904</b>	<b>IE DHCP mode / IE DHCP mode</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0

**Description:** Sets the DHCP mode for the Industrial Ethernet interface (X127) on the Control Unit.  
The actual DHCP mode is displayed in parameter r8914.

**Value:** 0: DHCP off  
2: DHCP on, identification using MAC address  
3: DHCP on, identification via name of station

**Dependency:** Refer to: p8905, r8914

**Note:** The interface configuration (p8900 and following) is activated with p8905.  
The parameter is not influenced by setting the factory setting.

---

<b>p8905</b>	<b>IE Interface configuration / IE IF config</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0

**Description:** Setting to activate the interface configuration for the Industrial Ethernet interface (X127) on the Control Unit.  
p8905 is automatically set to 0 at the end of an operation.

**Value:** 0: No function  
1: Activate configuration  
2: Activate and save configuration  
3: Delete configuration

**Dependency:** Refer to: p8900, p8901, p8902, p8903, p8904  
Refer to: A08561

**Note:** When a project is downloaded, the interface configuration is only activated if, in the offline project, parameter p8905 is set = 1 or 2.  
For p8905 = 1:  
The interface configuration (p8900 and following) is activated.  
For p8905 = 2:  
The interface configuration (p8900 and following) is activated and saved to non-volatile memory.  
For p8905 = 3:  
The interface configuration is reset to the factory setting at all points.  
The factory settings for the interface configuration are loaded on activation (p8905 = 1) or at the next POWER ON.

---

<b>p8908</b>	<b>Activate FTP / Act FTP</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0

**Description:** Activation of the FTP server.  
Permits the FTP access to the /INSTALL/SINAMICS directory of the memory card.

**Value:** 0: No  
1: Yes

## 2 Parameters

### 2.2 List of parameters

**Note:** Activation of the FTP server becomes effective immediately.  
Deactivation only becomes effective after POWER ON of the Control Unit.  
Before commissioning the system for the first time, the FTP server is activated independent of the parameter setting.

<b>r8909</b>	<b>PN device ID / PN device ID</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PROFINET Device ID.  
Every SINAMICS device type has its own PROFINET Device ID and its own PROFINET GSD.

**Note:** List of the SINAMICS Device IDs:  
0501 hex: S120/S150  
0504 hex: G130/G150  
050A hex: DC MASTER  
050C hex: MV  
050F hex: G120P  
0510 hex: G120C  
0511 hex: G120 CU240E-2  
0512 hex: G120D  
0513 hex: G120 CU250S-2 Vector  
0514 hex: G110M

<b>r8910[0...239]</b>	<b>IE Name of Station actual / IE Name Stat act</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the actual station name for the Industrial Ethernet interface (X127) on the Control Unit.

<b>r8911[0...3]</b>	<b>IE IP address actual / IE IP addr act</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	-

**Description:** Displays the actual IP address for the Industrial Ethernet interface (X127) on the Control Unit.

<b>r8912[0...3]</b>	<b>IE def gateway actual / IE Def Gateway act</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	-

**Description:** Displays the actual default gateway for the Industrial Ethernet interface (X127) on the Control Unit.

<b>r8913[0...3]</b>	<b>IE Subnet Mask actual / IE Subnet Mask act</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	-
<b>Description:</b>	Displays the actual subnet mask for the Industrial Ethernet interface (X127) on the Control Unit.		
<b>r8914</b>	<b>IE DHCP mode actual / IE DHCP mode act</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	-
<b>Description:</b>	Displays the actual DHCP mode for the Industrial Ethernet interface (X127) on the Control Unit.		
<b>Value:</b>	0: DHCP off 2: DHCP on, identification using MAC address 3: DHCP on, identification via name of station		
<b>r8915[0...5]</b>	<b>IE MAC address / IE MAC addr</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 1
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	00FF hex	-
<b>Description:</b>	Displays the MAC address for the Industrial Ethernet interface (X127) on the Control Unit.		
<b>p8920[0...239]</b>	<b>PN Name of Station / PN Name Stat</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Sets the station name for the onboard PROFINET interface on the Control Unit. The actual station name is displayed in r8930.		
<b>Dependency:</b>	Refer to: p8925, r8930		
<b>Note:</b>	An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual. The interface configuration (p8920 and following) is activated with p8925. The parameter is not influenced by setting the factory setting. PN: PROFINET		

## 2 Parameters

### 2.2 List of parameters

---

<b>p8921[0...3]</b>	<b>PN IP address / PN IP addr</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the IP address for the onboard PROFINET interface on the Control Unit. The actual IP address is displayed in r8931.		
<b>Dependency:</b>	Refer to: p8925, r8931		
<b>Note:</b>	The interface configuration (p8920 and following) is activated with p8925. The parameter is not influenced by setting the factory setting.		
<hr/>			
<b>p8922[0...3]</b>	<b>PN Def Gateway / PN Def Gateway</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the default gateway for the onboard PROFINET interface on the Control Unit. The actual standard gateway is displayed in r8932.		
<b>Dependency:</b>	Refer to: p8925, r8932		
<b>Note:</b>	The setting p8922[0...3] = 0 or p8922 = p8921 (own IP address) means that a standard gateway has not been set. The interface configuration (p8920 and following) is activated with p8925. The parameter is not influenced by setting the factory setting.		
<hr/>			
<b>p8923[0...3]</b>	<b>PN Subnet Mask / PN Subnet Mask</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the subnet mask for the onboard PROFINET interface on the Control Unit. The actual subnet mask is displayed in r8933.		
<b>Dependency:</b>	Refer to: p8925, r8933		
<b>Note:</b>	The interface configuration (p8920 and following) is activated with p8925. The parameter is not influenced by setting the factory setting.		
<hr/>			
<b>p8924</b>	<b>PN DHCP Mode / PN DHCP mode</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 3	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the DHCP mode for the onboard PROFINET interface on the Control Unit. The actual DHCP mode is displayed in r8934.		
<b>Value:</b>	0: DHCP off 2: DHCP on, identification using MAC address 3: DHCP on, identification via name of station		

<b>Dependency:</b>	Refer to: p8925, r8934
<b>Notice:</b>	When the DHCP mode is active (p8924 not equal to 0), then PROFINET communication via this interface is no longer possible! However, the interface can be used by the STARTER/SCOUT commissioning tool.
<b>Note:</b>	The interface configuration (p8920 and following) is activated with p8925. The active DHCP mode is displayed in parameter r8934. The parameter is not influenced by setting the factory setting.

---

<b>p8925</b>	<b>PN interface configuration / PN IF config</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0
<b>Description:</b>	Setting to activate the interface configuration for the onboard PROFINET interface on the Control Unit. p8925 is automatically set to 0 at the end of the operation.		
<b>Value:</b>	0: No function 1: Activate configuration 2: Activate and save configuration 3: Delete configuration		
<b>Dependency:</b>	Refer to: p8920, p8921, p8922, p8923, p8924 Refer to: A08563		
<b>Notice:</b>	When the DHCP mode is active (p8924 > 0), then PROFINET communication via this interface is no longer possible! However, the interface can be used by the STARTER/SCOUT commissioning tool.		
<b>Note:</b>	When a project is downloaded, the interface configuration is only activated if, in the offline project, parameter p8925 is set = 1 or 2. For p8925 = 1: The interface configuration (p8920 and following) is activated. For p8925 = 2: The interface configuration (p8920 and following) is activated and saved to non-volatile memory. For p8925 = 3: Restores all memory locations for the interface configuration to the factory settings. The factory settings for the interface configuration are loaded on activation (p8925 = 1) or at the next POWER ON.		

---

<b>p8929</b>	<b>PN remote controller number / PN rem ctrl num</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	2	1
<b>Description:</b>	Sets the number of remote controllers expected for PROFINET onboard. The "Shared Device" functionality is activated with p8929 = 2. The drive is being accessed by two PROFINET controllers simultaneously: - automation controller (SIMOTION or SIMATIC A-CPU). - safety controller (SIMATIC F-CPU).		
<b>Value:</b>	1: Automation or Safety 2: Automation and Safety		
<b>Notice:</b>	The F CPU may only use PROFIsafe telegrams.		
<b>Note:</b>	A change only becomes effective after POWER ON, reset or download. For PROFINET system redundancy, p8929 should be set = 1.		

## 2 Parameters

### 2.2 List of parameters

---

<b>r8930[0...239]</b>	<b>PN Name of Station actual / PN Name Stat act</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the actual station name for the onboard PROFINET interface on the Control Unit.		
<hr/>			
<b>r8931[0...3]</b>	<b>PN IP address actual / PN IP addr act</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	-
<b>Description:</b>	Displays the actual IP address for the onboard PROFINET interface on the Control Unit.		
<hr/>			
<b>r8932[0...3]</b>	<b>PN Default Gateway actual / PN Def Gateway act</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	-
<b>Description:</b>	Displays the actual default gateway for the onboard PROFINET interface on the Control Unit.		
<hr/>			
<b>r8933[0...3]</b>	<b>PN Subnet Mask actual / PN Subnet Mask act</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	-
<b>Description:</b>	Displays the actual subnet mask for the onboard PROFINET interface on the Control Unit.		
<hr/>			
<b>r8934</b>	<b>PN DHCP Mode actual / PN DHCP Mode act</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	-
<b>Description:</b>	Displays the actual DHCP mode for the onboard PROFINET interface on the Control Unit.		
<b>Value:</b>	0: DHCP off 2: DHCP on, identification using MAC address 3: DHCP on, identification via name of station		
<b>Notice:</b>	When the DHCP mode is active (parameter value not equal to 0), PROFINET communication via this interface is no longer possible! However, the interface can be used for commissioning tool such as STARTER or SCOUT.		

<b>r8935[0...5]</b>		<b>PN MAC address / PN MAC addr</b>	
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	00FF hex	-
<b>Description:</b>	Displays the MAC address for the onboard PROFINET interface on the Control Unit.		

<b>r8936[0...1]</b>		<b>PN cyclic connection state / PN cyc conn state</b>	
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	13	-
<b>Description:</b>	Displays the state of the cyclic PROFINET connections.		
<b>Value:</b>	0: Interrupted 1: Not connected 2: Connection starts to be established 3: Module information expected 4: Module information received 5: Module address expected 6: Module address received 7: Parameterization data expected 8: Parameterization data received 9: Evaluate parameterization data 10: Connection being established completion expected 11: Configured controller RUN expected 12: Configured controller STOP 13: Configured controller RUN		
<b>Index:</b>	[0] = Controller 1 [1] = Controller 2		
<b>Dependency:</b>	Refer to: p8929, r8961, r8962		
<b>Note:</b>	For two connections (Shared Device or system redundancy) the display in the index depends on the sequence in which the connections are established. The IP addresses of controllers 1 and 2 are displayed in r8961 and r8962. The following states are displayed for system redundancy: Primary controller: r8936[x] = 13 Backup controller: r8936[x] = 11 If value = 10: If the connection remains in this state, then when using PROFINET IRT the following can apply: - topology error (incorrect port assignment). - synchronization missing.		

<b>r8937[0...5]</b>		<b>PN diagnostics / PN diag</b>	
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Display to diagnose the cyclic PROFINET connections.		
<b>Index:</b>	[0] = Number of cyclic connections [1] = Number of send subslots of all connections		

## 2 Parameters

### 2.2 List of parameters

[2] = Number of send net data (bytes) of all connections  
 [3] = Number of receive subslots of all connections  
 [4] = Number of receive net data (bytes) of all connections  
 [5] = Connection type (RT, IRT)

**Dependency:** Refer to: p8929  
**Note:** For index 5:  
 Bit 0 = 1: there is at least one RT connection.  
 Bit 1 = 1: there is an IRT connection.

#### r8939

#### PN DAP ID / PN DAP ID

CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the DAP ID for the onboard PROFINET interface.  
 The combination of device ID (r8909) and DAP ID uniquely identifies a PROFINET access point.

**Note:** DAP ID: Device Access Point ID  
 List of the SINAMICS DAP IDs:  
 20008 hex: CBE20 V4.6  
 20009 hex: CBE20 V4.7  
 2000A hex: CBE20 V4.8  
 20108 hex: CU310-2 PN V4.6  
 20109 hex: CU310-2 PN V4.7  
 2010A hex: CU310-2 PN V4.8  
 20308 hex: CU320-2 PN V4.6  
 20309 hex: CU320-2 PN V4.7  
 2030A hex: CU320-2 PN V4.8

#### p8940[0...239]

#### CBE2x Name of Station / CBE2x Name Stat

CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Sets the station name for the Communication Board Ethernet 20/25 (CBE20/CBE25).

**Dependency:** Refer to: p8945, r8950

**Note:** An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.  
 The interface configuration (p8940 and following) is activated with p8945.  
 The parameter is not influenced by setting the factory setting.

#### p8941[0...3]

#### CBE2x IP address / CBE2x IP addr

CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0

**Description:** Sets the IP address for the Communication Board Ethernet 20/25 (CBE20/CBE25).

**Dependency:** Refer to: p8945, r8951

**Note:** The interface configuration (p8940 and following) is activated with p8945.  
The parameter is not influenced by setting the factory setting.

---

<b>p8942[0...3]</b>	<b>CBE2x Default Gateway / CBE2x Def Gateway</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the standard gateway for the Communication Board Ethernet 20/25 (CBE20/CBE25).		
<b>Dependency:</b>	Refer to: p8945, r8952		
<b>Note:</b>	The setting p8942[0...3] = 0 or p8942 = p8941 (own IP address) means that a standard gateway has not been set. The interface configuration (p8940 and following) is activated with p8945. The parameter is not influenced by setting the factory setting.		

---

<b>p8943[0...3]</b>	<b>CBE2x Subnet Mask / CBE2x Subnet Mask</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the subnet mask for the Communication Board Ethernet 20/25 (CBE20/CBE25).		
<b>Dependency:</b>	Refer to: p8945, r8953		
<b>Note:</b>	The interface configuration (p8940 and following) is activated with p8945. The parameter is not influenced by setting the factory setting.		

---

<b>p8944</b>	<b>CBE2x DHCP Mode / CBE2x DHCP Mode</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 3	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the DHCP mode for the Communication Board Ethernet 20/25 (CBE20/CBE25).		
<b>Value:</b>	0: DHCP off 2: DHCP on, identification using MAC address 3: DHCP on, identification via name of station		
<b>Dependency:</b>	Refer to: p8945, r8954		
<b>Notice:</b>	When the DHCP mode is active (p8944 not equal to 0), then PROFINET communication via this interface is no longer possible! However, the interface can be used by the STARTER/SCOUT commissioning tool.		
<b>Note:</b>	The interface configuration (p8940 and following) is activated with p8945. The parameter is not influenced by setting the factory setting.		

## 2 Parameters

### 2.2 List of parameters

---

<b>p8945</b>	<b>CBE2x interface configuration / CBE2x int config</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 3	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the activation of the interface configuration for the Communication Board Ethernet 20/25 (CBE20/CBE25). p8945 is automatically set to 0 at the end of an operation.		
<b>Value:</b>	0: No function 2: Save and activate configuration 3: Delete configuration		
<b>Dependency:</b>	Refer to: p8940, p8941, p8942, p8943, p8944 Refer to: A08565		
<b>Notice:</b>	When the DHCP mode is active (p8944 > 0), then PROFINET communication via this interface is no longer possible! However, the interface can be used by the STARTER/SCOUT commissioning tool.		
<b>Note:</b>	For CBE20, the parameter is only valid for firmware version "PROFINET Device" (p8835 = 1), "EtherNet/IP" (p8835 = 4) or "MODBUS TCP" (p8835 = 5). Otherwise, it is locked. This restriction is not applicable for the CBE25. When a project is downloaded, the interface configuration is only activated if, in the offline project, parameter p8945 is set = 2. For p8945 = 2: The interface configuration (p8940 and following) is saved and activated after the next POWER ON. For p8945 = 3: The factory setting of the interface configuration is loaded after the next POWER ON.		

---

<b>r8950[0...239]</b>	<b>CBE2x Name of Station actual / CBE2x Name act</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the actual station name for the Communication Board Ethernet 20/25 (CBE20/CBE25).		

---

<b>r8951[0...3]</b>	<b>CBE2x IP Address actual / CBE2x IP addr</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the actual IP address for the Communication Board Ethernet 20/25 (CBE20/CBE25).		

<b>r8952[0...3]</b>	<b>CBE2x Default Gateway actual / CBE2x def GW act</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the actual standard gateway for the Communication Board Ethernet 20/25 (CBE20/CBE25).		
<b>r8953[0...3]</b>	<b>CBE2x Subnet Mask actual / CBE2x Sub Mask act</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the actual subnet mask for the Communication Board Ethernet 20/25 (CBE20/CBE25).		
<b>r8954</b>	<b>CBE2x DHCP Mode actual / CBE2x DHCP act</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 3	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the actual DHCP mode for the Communication Board Ethernet 20/25 (CBE20/CBE25).		
<b>Value:</b>	0: DHCP off 2: DHCP on, identification using MAC address 3: DHCP on, identification via name of station		
<b>Notice:</b>	When the DHCP mode is active (parameter value greater than 0), PROFINET communication via this interface is no longer possible! However, the interface can be used by the STARTER/SCOUT commissioning tool.		
<b>r8955[0...5]</b>	<b>CBE2x MAC address / CBE2x MAC Addr</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 00FF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the MAC address for the Communication Board Ethernet 20/25 (CBE20/CBE25).		
<b>r8959</b>	<b>CBE2x DAP ID / CBE2x DAP ID</b>		
CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> FFFF FFFF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the DAP ID for PROFINET via the Communication Board Ethernet 20/25 (CBE20/CBE25). The combination of device ID (r8909) and DAP ID (r8959) uniquely identifies a PROFINET access point.		

## 2 Parameters

### 2.2 List of parameters

**Note:** DAP ID: Device Access Point ID  
DAP ID = 20008 hex: SINAMICS CBE20 V4.6  
DAP ID = 20009 hex: SINAMICS CBE20 V4.7  
DAP ID = 2000A hex: SINAMICS CBE20 V4.8  
DAP ID = 20209 hex: SINAMICS CBE25 V4.7

---

<b>r8960[0...2]</b>	<b>PN subplot controller assignment / PN subplot assign</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 8	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the controller assignment of a PROFINET subplot on the actual drive object. The display is only relevant for Shared Device (p8929 = 2).		
<b>Index:</b>	[0] = Subslot 2 PROFIsafe [1] = Subslot 3 PZD telegram [2] = Subslot 4 PZD supplementary data		
<b>Dependency:</b>	Refer to: r8961, r8962		
<b>Note:</b>	Example: If the parameter contains the value 2 in index [1], then this means that subplot 3 is assigned to controller 2.		

---

<b>r8961[0...3]</b>	<b>PN IP Address Remote Controller 1 / IP Addr Rem Ctrl1</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the IP address of the first PROFINET controller connected with the device via PN onboard.		

---

<b>r8962[0...3]</b>	<b>PN IP Address Remote Controller 2 / IP Addr Rem Ctrl2</b>		
CU_G130_PN, CU_G150_PN	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the IP address of the second PROFINET controller connected with the device via PN onboard. The display is only relevant for Shared Device (p8929 = 2) or system redundancy.		

---

<b>p8969</b>	<b>PROFIsafe wait for clock synchronization / PS wait sync</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Setting for the behavior of a PROFIsafe communication connection depending on another isochronous communication connection.		
<b>Value:</b>	0: No 1: Yes		
<b>Recommendation:</b>	A value of 1 is recommended, if problems are encountered with the PROFIsafe connection when synchronizing.		

**Note:** If value = 1:  
 A PROFIsafe connection is only accepted if an isochronous connection exists.  
 Relevant, if PROFIsafe and isochronous operation are configured via various communication connections (e.g. PROFINET Shared Device).

---

**r8970[0...2] CBE2x subslot controller assignment / CBE2x subslot**

CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20), VECTOR_G (PN CBE20), B_INF (PN CBE20), TM31 (PN CBE20), TM120 (PN CBE20), TM150 (PN CBE20), TB30 (PN CBE20), ENC (PN CBE20)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 8	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
--	---	--	---

**Description:** Displays the controller assignment of a PROFINET subslot on the actual drive object.

**Index:**  
 [0] = Subslot 2 PROFIsafe  
 [1] = Subslot 3 PZD telegram  
 [2] = Subslot 4 PZD supplementary data

**Dependency:** Refer to: r8971, r8972

**Note:** Example:  
 If the parameter contains the value 2 in index [1], then this means that subslot 3 is assigned to controller 2.

---

**r8971[0...3] CBE2x IP Address Remote Controller 1 / CBE2x IP Rem Ctrl1**

CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
---	---	--	---

**Description:** Displays the IP address of the first PROFINET controller connected with the device via CBE20/CBE25.

---

**r8972[0...3] CBE2x IP Address Remote Controller 2 / CBE2x IP Rem Ctrl2**

CU_G130_PN (PN CBE20), CU_G150_PN (PN CBE20), CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> - <b>Data type:</b> Unsigned8 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
---	---	--	---

**Description:** Displays the IP address of the second PROFINET controller connected with the device via CBE20/CBE25.

<b>p8986</b>	<b>Web server configuration / Web serv config</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0101 bin

**Description:** Setting to activate and configure the "Web server" function in the drive.  
It is possible to access the web server via the integrated Ethernet and PROFINET interfaces of the drive. The addressing is realized via the set IP address.

<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Activating	Yes	No	-
	01	Only permit access via https	Yes	No	-
	02	Enable "SINAMICS" user	Yes	No	-
	03	Enable "Administrator" user	Yes	No	-

<b>p8987[0...1]</b>	<b>Web server port assignment / WebServ PortAssign</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	32767	[0] 80 [1] 443

**Description:** This parameter allows the port setting for the web server to be changed.

**Index:** [0] = Port for standard transfer (http)  
[1] = Port for secure transfer (https)

<b>p9206[0...2]</b>	<b>Topology direct access / Topo access</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0

**Description:** Data setting to read topology properties.  
The result is displayed depending on the property in r9207 or r9208.

- For index 0:
- 0: actual topology, 1: target topology
- For index 1:
- Sets the component number of the component involved.
- For index 2:
- 7: Name (r9208)
- 8: Component type (r9207)
- 9: Number of DRIVE-CLiQ connections (r9207)
- 11: Manufacturer (upper byte) and version (lower byte) (r9207)
- 12: Serial number (r9208)
- 13: Index (r9207)
- 15: Comparison level (r9207)
- 23: Article number (r9207)
- 24: Hardware serial number (r9208)
- 25: Envelope article number (r9207)
- 28: Firmware version (r9207)

29: EEPROM version (r9207)  
 30: Hardware version (r9207)  
 1000: Name of DRIVE-CLiQ connection 0 (r9208)  
 1001: Name of DRIVE-CLiQ connection 1 (r9208)  
 ...  
 1015: Name of DRIVE-CLiQ connection 15 (r9208)

**Index:** [0] = Actual topology/target topology  
 [1] = Component number  
 [2] = Identifier/property

**Dependency:** Refer to: r9207, r9208

**r9207****Topology direct access integer value / Topo access int**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the value for the property set in p9206.  
 A value is only displayed for integer type properties.

**Dependency:** Refer to: p9206, r9208

**r9208[0...50]****Topology direct access string / Topo access string**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the value for the property set in p9206.  
 A value is only displayed for string type properties.

**Dependency:** Refer to: p9206, r9207

**Note:** An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.

**p9210****Flashing component number / Flash comp\_no.**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	499	0

**Description:** Sets the component number for a component to get its status LED to flash.

**Dependency:** Refer to: p9211

## 2 Parameters

### 2.2 List of parameters

<b>p9211</b>	<b>Flash function / Flash fct.</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1	1	-1
<b>Description:</b>	Sets the function for the component selected in p9210. After initiating a function, the parameter is automatically reset again. Example: - set the component number (p9210). - select the "flashing on" function (set p9211 = 1).		
<b>Value:</b>	-1: Select function 0: Flashing off 1: Flashing on		
<b>Dependency:</b>	Refer to: p9210		
<b>Notice:</b>	If a task cannot be executed (e.g. the component number in p9210 does not exist), the following applies: - there is no negative feedback signal. - the value is reset anyway.		
<b>r9220</b>	<b>Statistics number of entries / Stat entries qty</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of statistic entries in r9222.		
<b>Dependency:</b>	In p9221, the component Id is set whose statistical entries are to be displayed. Refer to: p9221		
<b>p9221</b>	<b>Statistic components Id / Statistic comp Id</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	00FF hex	0002 hex
<b>Description:</b>	Selects the component Id whose statistics are to be displayed in r9222.		
<b>r9222[0...n]</b>	<b>Statistic DRIVE-CLiQ acyclic communication / Statistic</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> r9220	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the statistics for the acyclic DRIVE-CLiQ communication of a component. The component is preset in p9221. The entry comprises the following elements: Index 0: Parameter Id. Index 1: Number of messages sent.		

Index 2: Minimum time of all acyclic requests referred to the parameter Id (index 0).  
 Index 3: Maximum time of all acyclic requests referred to the parameter Id (index 0).  
 Index 4: Average of all acyclic requests referred to the parameter Id (index 0).  
 The time unit is 10  $\mu$ s.

**Dependency:**

The number of statistic entries is displayed in p9220.  
 In p9221, the component Id can be set whose statistic is to be displayed.  
 Refer to: r9220, p9221

**Note:**

As a statistic entry comprises 5 data, when calling the entries via the terminal, a size that represents a multiple of 5 must be specified.  
 Example:  
 The 2nd entry should be called:  
 rdp 1 9222 5 5  
 or  
 rdpa 1 9222 5 5

**p9300****SI Motion monitoring clock cycle (Motor Module) / SI Mtn clock MM**

VECTOR\_G

<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
500.00 [ $\mu$ s]	25000.00 [ $\mu$ s]	12000.00 [ $\mu$ s]

**Description:**

Sets the monitoring clock cycle for safe motion monitoring.

**Dependency:**

Refer to: p9500, p9511  
 Refer to: F01652

**Notice:**

This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:**

The monitoring clock cycle must be a multiple of the actual value sensing clock cycle in p9311 or of the DP clock cycle.  
 A change only becomes effective after a POWER ON.

**p9301****SI Motion enable safety functions (Motor Module) / SI Mtn enable MM**

VECTOR\_G

<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin

**Description:**

Sets the enable signals for the safe motion monitoring.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Enable SOS/SLS	Enable	Inhibit	-
01	Enable SLP	Enable	Inhibit	-
02	Enable absolute position	Enable	Inhibit	-
03	Enable actual value synchronization	Enable	Inhibit	-
16	Enable SSM hysteresis and filtering	Enable	Inhibit	2823
17	Enable SDI	Enable	Inhibit	2824
18	Enable SS2E	Enable	Inhibit	-
24	Enable transfer SLS limit value via PROFIsafe	Enable	Inhibit	-
25	Enable transfer safe position via PROFIsafe	Enable	Inhibit	-
26	Enable safe gearbox switchover	Enable	Inhibit	-
27	Enable referencing via SCC	Enable	Inhibit	-

**Dependency:**

Refer to: p9501  
 Refer to: F01682, F01683

**Notice:**

This parameter is overwritten by the copy function of the safety functions integrated in the drive.

## 2 Parameters

### 2.2 List of parameters

**Note:** A change only becomes effective after a POWER ON.  
SDI: Safe Direction (safe motion direction)  
SLP: Safely Limited Position  
SLS: Safely Limited Speed  
SOS: Safe Operating Stop  
SP: Safe Position  
SS2E: Safe Stop 2 external (Safe Stop 2 with external stop, external STOP D)  
SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

---

<b>p9302</b>	<b>SI Motion axis type (Motor Module) / SI Mtn AxisType MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the axis type (linear axis or rotary axis/spindle).		
<b>Value:</b>	0: Linear axis 1: Rot axis/spindle		
<b>Dependency:</b>	Refer to: p9502		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	For the commissioning software, after changing over the axis type, the units dependent on the axis type are only updated after a project upload. A change only becomes effective after a POWER ON.		

---

<b>p9305</b>	<b>SI Motion SP modulo value (Motor Module) / SI mtn SP mod MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [°]	737280 [°]	0 [°]
<b>Description:</b>	Sets the modulo value in degrees for rotary axes of the "Safe position" function. This modulo value is taken into account when safely referencing as well as when transferring the safe position via PROFIsafe when the absolute position is enabled. The value should be set, so that it is precisely at $2^n$ revolutions, so that when the range that can be represented (+/- 2048) overflows, this does not cause the position actual value to jump. The modulo function is deactivated for a value = 0.		
<b>Dependency:</b>	Refer to: F01681		
<b>Notice:</b>	When the "SLP" function is activated, the modulo function must be deactivated as otherwise fault F30681 will be output. If the absolute position is not enabled, then the parameterized modulo value is not taken into account.		
<b>Note:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive. SLP: Safely Limited Position SP: Safe Position		

<b>p9306</b>		<b>SI Motion function specification (Motor Module) / SI Mtn fct_spc MM</b>			
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	0	3	0		
<b>Description:</b>	Sets the function specification for the safe motion monitoring.				
<b>Value:</b>	0: Safety with encoder and accel_monitoring(SAM) / delay time 1: Safety without encoder and braking ramp(SBR) 2: Safety with encoder and braking ramp (SBR) 3: Safety without encoder with accel_monitoring(SAM) / delay time				
<b>Dependency:</b>	Refer to: C30711				
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.				
<b>p9307</b>		<b>SI Motion function configuration MM / SI mtn config MM</b>			
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 bin		
<b>Description:</b>	Sets the function configuration for the safe motion monitoring functions.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Extended message acknowledgment	Yes	No	-
	01	Setpoint velocity limit for STOP F	No	Yes	-
	02	Actual value sensing sensorless motor type	Synchronous motor	Induction motor	-
	03	SS1 with OFF3 (brake response)	SS1E external stop	SS1 with OFF3	-
	05	Actual value sensing sensorless edge modulation	Yes	No	-
	06	Configuration test stop motion monitoring functions	Test automatic	Test manual	-
<b>Dependency:</b>	Refer to: C01711				
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.				
<b>Note:</b>	For bit 00: When the function is activated, a safety-relevant acknowledgment (internal event acknowledge) can be performed by selecting/deselecting STO.				
	For bit 01: When the function is activated, the active setpoint velocity limit (CO: r9733) is set to zero when STOP F is active.				
	For bit 02: This bit defines the type of motor, which the sensorless actual value sensing evaluates. For bit = 0, the actual velocity is calculated for an induction motor. For bit = 1, the actual velocity is calculated for a synchronous motor. This value depends on the setting in p0300. Bit = 0 should be set if no motor is defined (p0300 = 0).				
	For bit 03: When the bit is activated – when selecting function SS1 or activating a STOP B – an SS1E or a STOP B with Stop, which should be externally initiated, is triggered instead of SS1 with a drive-based braking response. As a consequence, brake monitoring (SBR, SAM) is deactivated. SS1E: Safe Stop 1 external (Safe Stop 1 with external stop)				
	For bit 05: This bit defines the type of modulation, which the sensorless actual value sensing evaluates. For bit = 0, the actual velocity is calculated for space vector modulation. For bit = 1, the actual velocity is calculated for edge modulation. This value depends on the setting in p1802.				

<b>p9309</b>	<b>SI Motion behavior during pulse suppression (Motor Module) / SI Mtn behav IL MM</b>			
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 0000 1111 1111 bin	
<b>Description:</b>	Sets the behavior of safety functions and their feedback during pulse suppression in encoderless operation.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	SSM during pulse suppression and sensorless	Becomes inactive	Remains active
	08	SDI during pulse suppression and sensorless	Becomes inactive	Remains active
<b>Dependency:</b>	Refer to: C01711			
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.			
	For bit 00:			
	If the OFF1 or the OFF3 ramp-down time is too low, or there is an insufficient clearance between the SSM limit speed, and the shutdown speed, then it is possible that the "speed under limit value" signal does not change to 1, because no speed actual value below the SSM limit was able to be identified before pulse cancellation. In this case, the OFF1 or the OFF3 ramp-down time or the clearance between the SSM limit speed and shutdown speed must be increased.			
<b>Note:</b>	SDI: Safe Direction (safe motion direction)			
	SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)			
	For bit 00:			
	For bit = 1 and with the SSM safety function activated, the following applies:			
	- During pulse suppression, monitoring is switched off and the feedback signal has a 0 signal level.			
	For bit = 0 and with the SSM safety function activated, the following applies:			
	- Monitoring continues during pulse suppression. The feedback signal last displayed before pulse suppression is kept and the system goes into the STO state.			
	For bit 08:			
	For bit = 1 and with the SDI safety function activated, the following applies:			
	- During pulse suppression, monitoring is switched off and the status signal indicates inactive.			
	For bit = 0 and with the SDI safety function activated, the following applies:			
	- Monitoring continues during pulse suppression. The status signal indicates active and the system goes into the STO state.			
<b>p9311</b>	<b>SI Motion actual value sensing clock cycle (Motor Module) / SI Mtn act clk MM</b>			
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.0000 [µs]	25000.0000 [µs]	0.0000 [µs]	
<b>Description:</b>	Sets the clock cycle time of the actual value sensing for safe motion monitoring.			
	Setting criteria if the motion monitoring functions are executed with an encoder.			
	- a slower clock cycle time reduces the maximum permissible velocity - however, it ensures a lower load of the Control Unit for safe actual value sensing.			
	- the maximum permissible velocity which, when exceeded, can mean that errors occur during safe actual value sensing, is displayed in r9730.			
	- the isochronous PROFIBUS clock cycle is used as a clock cycle time for actual value sensing with a setting of 0 ms; the setting is 1 ms if isochronous operation is not being used.			
	Setting criteria if the motion monitoring functions are executed without an encoder:			
	- the actual value sensing clock cycle must be set to the same value as the current controller clock cycle (p0115).			
	For SINAMICS S120M, the following applies:			
	Only setting p9311 = 0 or 2 ms is possible (a value of 0 is internally assumed to be 2).			

**Dependency:** Refer to: p0115, p9300, p9511  
Refer to: F01652

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** The parameter is only active for drive-based motion monitoring functions (p9801.2 = 1).  
The monitoring clock cycle from p9300 must be an integer multiple of this parameter.  
In the case of motion monitoring functions with encoder, the clock cycle time for actual value sensing must be an integer multiple of the current controller clock cycle and at least 4 times slower than the current controller clock cycle. A factor of at least 8 is recommended.  
The clock cycle time of the actual value sensing should not be set to more than 8 ms.  
A change only becomes effective after a POWER ON.

---

### p9312 Select SI Motion safety functions without selection (MM) / SI Mtn w/o sel MM

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 0001 0000 bin

**Description:** Sets the safety functions without selection.  
The safety functions without selection are enabled with p9601.5/p9801.5.  
Using this parameter, the individual motion monitoring functions can then be selected (e.g. SLS, SDI positive, SDI negative), which should then be permanently selected.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	04	SLS static (MM)	Static selected	Static deselected	-
	12	SDI positive static (MM)	Static selected	Static deselected	-
	13	SDI negative static (MM)	Static selected	Static deselected	-

**Dependency:** Refer to: p9601, p9801  
Refer to: F01682, F30682

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** A change becomes immediately effective after exiting the safety commissioning mode.  
SDI: Safe Direction (safe motion direction)  
SLS: Safely Limited Speed

---

### p9313 SI Motion non safety-relevant measuring steps POS1 (MM) / nsrPOS1 MM

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	22000

**Description:** Sets the non safety-relevant measuring steps of position value POS1.  
The encoder that is used for the safe motion monitoring functions on processor 2, must be parameterized in this parameter.

**Dependency:** Refer to: p9513

---

### p9314 SI Motion absolute encoder linear measuring steps (MM) / EncLinMeasStep MM

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [nm]	4294967295 [nm]	100 [nm]

**Description:** Sets the resolution of the absolute position for a linear absolute encoder.  
The encoder that is used for the safe motion monitoring functions on the Motor Module/Hydraulic Module must be parameterized in this parameter.

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Refer to: p9514

---

#### p9315 SI Motion coarse position value configuration (Motor Module) / SI Mtn s config MM

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin

**Description:** Sets the encoder configuration for the redundant coarse position value.  
The encoder that is used for the safe motion monitoring functions on the Motor Module/Hydraulic Module must be parameterized in this parameter.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Incrementer	Yes	No	-
	01	Encoder CRC least significant byte first	Yes	No	-
	02	Redundant coarse position val. most significant bit left-aligned	Yes	No	-
	04	Binary comparison not possible	Yes	No	-
	05	Single-channel encoder	Yes	No	-
	16	DRIVE-CLiQ encoder	Yes	No	-
	17	EnDat 2.2 converter	Yes	No	-

**Dependency:** Refer to: r0474, p9515

---

#### p9316 SI Motion encoder configuration, safety functions (Motor Module) / SI Mtn enc\_cfg MM

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 bin

**Description:** Sets the configuration for the encoder and position actual value.  
The encoder that is used for the safe motion monitoring functions on the Motor Module must be parameterized in this parameter.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Encoder rotating/linear	Linear	Rotating	-
	01	Position actual value sign change	Yes	No	-
	04	No STOP A after encoder fault for 1 encoder safety	Yes	No	-

**Dependency:** Refer to: p0404, p0410, p9516

---

#### p9317 SI Motion linear scale grid division (Motor Module) / SI Mtn grid MM

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [nm]	250000000.00 [nm]	10000.00 [nm]

**Description:** Sets the grid division for a linear encoder.  
The encoder that is used for the safe motion monitoring functions on the Motor Module/Hydraulic Module must be parameterized in this parameter.

**Dependency:** Refer to: p0407, p9316

<b>p9318</b>	<b>SI Motion encoder pulses per revolution (Motor Module) / SI Mtn p/rev MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	16777215	2048
<b>Description:</b>	Sets the number of encoder pulses per revolution for rotary encoders. The encoder that is used for the safe motion monitoring functions on the Motor Module/Hydraulic Module must be parameterized in this parameter.		
<b>Dependency:</b>	Refer to: p0408, p9316		
<b>p9319</b>	<b>SI Motion fine resolution G1_XIST1 (Motor Module) / SI Mtn G1_XIST1 MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	2	18	11
<b>Description:</b>	Sets the fine resolution for G1_XIST1 in bits. The encoder that is used for the safe motion monitoring functions on the Motor Module/Hydraulic Module must be parameterized in this parameter.		
<b>Dependency:</b>	Refer to: p0418 Refer to: F01670, F01671		
<b>Note:</b>	For safety functions that have not been enabled (p9301 = 0), the following applies: When booting, p9319 is automatically set the same as p0418. For safety functions that are enabled (p9301 > 0), the following applies: p9319 is checked for agreement with p0418. G1_XIST1: Encoder 1 position actual value 1 (PROFIdrive)		
<b>p9320</b>	<b>SI Motion spindle pitch (Motor Module) / SI Mtn sp_pitch MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.1000 [mm]	8388.0000 [mm]	10.0000 [mm]
<b>Description:</b>	Sets the gear ratio between the encoder and load in mm/revolution for a linear axis with rotary encoder. The encoder that is used for the safe motion monitoring functions on the Motor Module/Hydraulic Module must be parameterized in this parameter.		
<b>Dependency:</b>	Refer to: p9520		
<b>Notice:</b>	The fourth decimal point can be rounded-off depending on the size of the entered number (from 3 places before the decimal point).		

<b>p9321[0...7]</b>	<b>SI Motion gearbox encoder (motor)/load denom (Motor Module) / SI Mtn gearDenomMM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> Unsigned32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 1	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 2147000000	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the denominator for the gearbox between the encoder (or motor in the case of encoderless monitoring functions) and the load. The active gearbox stage can be switched over via PROFIsafe.		
<b>Index:</b>	[0] = Gearbox 1 [1] = Gearbox 2 [2] = Gearbox 3 [3] = Gearbox 4 [4] = Gearbox 5 [5] = Gearbox 6 [6] = Gearbox 7 [7] = Gearbox 8		
<b>Dependency:</b>	Refer to: p9322		
<b>p9322[0...7]</b>	<b>SI Motion gearbox encoder (motor)/load numerator (Motor Module) / SI Mtn gear num MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> Unsigned32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 1	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 2147000000	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the numerator for the gearbox between the encoder (or motor in the case of encoderless monitoring functions) and the load. The active gearbox stage can be switched over via PROFIsafe.		
<b>Index:</b>	[0] = Gearbox 1 [1] = Gearbox 2 [2] = Gearbox 3 [3] = Gearbox 4 [4] = Gearbox 5 [5] = Gearbox 6 [6] = Gearbox 7 [7] = Gearbox 8		
<b>Dependency:</b>	Refer to: p9321		
<b>Note:</b>	In the case of encoderless monitoring functions, the pole pair number must be multiplied by the numerator of the gearbox ratio. Example: Gearbox ratio 1:4, pole pair number (r0313) = 2 --> p9321 = 1, p9322 = 8 (4 x 2)		

<b>p9323</b>	<b>SI Motion red. coarse position value valid bits (Motor Module) / Valid bits MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	16	9
<b>Description:</b>	Sets the number of valid bits of the redundant coarse position value. The encoder that is used for the safe motion monitoring functions on the Motor Module/Hydraulic Module must be parameterized in this parameter.		
<b>Dependency:</b>	Refer to: r0470, p9523		
<b>p9324</b>	<b>SI Motion redundant coarse pos. value fine resolution bits (MM) / SI Mtn fine bit MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-16	16	-2
<b>Description:</b>	Sets the number of valid bits for the fine resolution of the redundant coarse position value. The encoder that is used for the safe motion monitoring functions on the Motor Module/Hydraulic Module must be parameterized in this parameter.		
<b>Dependency:</b>	Refer to: r0471, p9524		
<b>p9325</b>	<b>SI Motion redundant coarse pos. value relevant bits (MM) / Relevant bits MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	16	16
<b>Description:</b>	Sets the number of relevant bits for the redundant coarse position value. The encoder that is used for the safe motion monitoring functions on the Motor Module/Hydraulic Module must be parameterized in this parameter.		
<b>Dependency:</b>	Refer to: p0414, r0472, p9525		
<b>p9326</b>	<b>SI Motion encoder assignment (Motor Module) / SI Mtn encoder MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	3	1
<b>Description:</b>	Sets the number of the encoder, which is used on the Motor Module for safe motion monitoring functions.		
<b>Dependency:</b>	For the safe motion monitoring functions, the redundant safety position actual value sensing must be activated in the appropriate encoder data set (p0430.19 = 1). Refer to: p0187, p0188, p0189, p0430, p9526		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	A change only becomes effective after a POWER ON. For p9326 = 1, the following applies: Motor Module uses an encoder for closed-loop speed control, it involves a 1-encoder system.		

<b>p9328[0...11]</b>	<b>SI Motion Sensor Module Node Identifier (Motor Module) / SI Mtn SM Ident MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> Unsigned8 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 00FF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 hex
<b>Description:</b>	Sets the node identifier of the Sensor Module that is used by the Motor Module/Hydraulic Module for the motion monitoring functions.		
<b>Dependency:</b>	Refer to: r9881		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>p9329</b>	<b>SI Motion Gx_XIST1 coarse pos safe most significant bit (MM) / Gx_XIST1 MSB MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> Unsigned16 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 31	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 14
<b>Description:</b>	Sets the bit number for the safe most significant bit (MSB) of the Gx_XIST1 coarse position. The encoder that is used for the safe motion monitoring functions on the Motor Module/Hydraulic Module must be parameterized in this parameter.		
<b>Dependency:</b>	Refer to: p0415, r0475, p9529		
<b>Note:</b>	MSB: Most Significant Bit		
<b>p9330</b>	<b>SI Motion standstill tolerance (Motor Module) / SI Mtn SOS Tol MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0.000 [mm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 100.000 [mm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1.000 [mm]
<b>Description:</b>	Sets the tolerance for the function "Safe Operating Stop" (SOS).		
<b>Dependency:</b>	Refer to: p9530 Refer to: C01707		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	SOS: Safe Operating Stop		
<b>p9330</b>	<b>SI Motion standstill tolerance (Motor Module) / SI Mtn SOS Tol MM</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0.000 [°]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 100.000 [°]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1.000 [°]
<b>Description:</b>	Sets the tolerance for the function "Safe Operating Stop" (SOS).		
<b>Dependency:</b>	Refer to: p9530 Refer to: C01707		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	SOS: Safe Operating Stop		

<b>p9331[0...3]</b>	<b>SI Motion SLS limit values (Motor Module) / SI Mtn SLS lim MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [mm/min]	1000000.00 [mm/min]	2000.00 [mm/min]
<b>Description:</b>	Sets the limit values for the function "Safely Limited Speed" (SLS).		
<b>Index:</b>	[0] = Limit value SLS1 [1] = Limit value SLS2 [2] = Limit value SLS3 [3] = Limit value SLS4		
<b>Dependency:</b>	Refer to: p9363, p9531 Refer to: C01714		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	SLS: Safely Limited Speed		
<b>p9331[0...3]</b>	<b>SI Motion SLS limit values (Motor Module) / SI Mtn SLS lim MM</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	1000000.00 [rpm]	2000.00 [rpm]
<b>Description:</b>	Sets the limit values for the function "Safely Limited Speed" (SLS).		
<b>Index:</b>	[0] = Limit value SLS1 [1] = Limit value SLS2 [2] = Limit value SLS3 [3] = Limit value SLS4		
<b>Dependency:</b>	Refer to: p9363, p9531 Refer to: C01714		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	SLS: Safely Limited Speed		
<b>p9334[0...1]</b>	<b>SI Motion SLP upper limit values (Motor Module) / SI Mtn SLP uplimMM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2822
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147000.000 [mm]	2147000.000 [mm]	100000.000 [mm]
<b>Description:</b>	Sets the upper limit for the function "Safely Limited Position" (SLP).		
<b>Index:</b>	[0] = Limit value SLP1 (SE1) [1] = Limit value SLP2 (SE2)		
<b>Dependency:</b>	Refer to: p9501, p9535, p9562 Refer to: C01715		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	The following applies to the setting of these limits: - p9334[x] > p9335[x] - p9334[x] must lie in the valid traversing range (-737280 ... 737280). SLP: Safely Limited Position / SE: Safe software limit switches		

<b>p9334[0...1]</b>	<b>SI Motion SLP upper limit values (Motor Module) / SI Mtn SLP uplimMM</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2822
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147000.000 [°]	2147000.000 [°]	100000.000 [°]
<b>Description:</b>	Sets the upper limit for the function "Safely Limited Position" (SLP).		
<b>Index:</b>	[0] = Limit value SLP1 (SE1) [1] = Limit value SLP2 (SE2)		
<b>Dependency:</b>	Refer to: p9501, p9535, p9562 Refer to: C01715		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	The following applies to the setting of these limits: - p9334[x] > p9335[x] - p9334[x] must lie in the valid traversing range (-737280 ... 737280). SLP: Safely Limited Position / SE: Safe software limit switches		
<b>p9335[0...1]</b>	<b>SI Motion SLP lower limit values (Motor Module) / SI Mtn SLPlowLimMM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2822
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147000.000 [mm]	2147000.000 [mm]	-100000.000 [mm]
<b>Description:</b>	Sets the lower limit for the function "Safely Limited Position" (SLP).		
<b>Index:</b>	[0] = Limit value SLP1 (SE1) [1] = Limit value SLP2 (SE2)		
<b>Dependency:</b>	Refer to: p9501, p9534, p9562 Refer to: C01715		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	The following applies to the setting of these limits: - p9334[x] > p9335[x] - p9335[x] must lie in the valid traversing range (-737280 ... 737280). SLP: Safely Limited Position / SE: Safe software limit switches		
<b>p9335[0...1]</b>	<b>SI Motion SLP lower limit values (Motor Module) / SI Mtn SLPlowLimMM</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2822
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147000.000 [°]	2147000.000 [°]	-100000.000 [°]
<b>Description:</b>	Sets the lower limit for the function "Safely Limited Position" (SLP).		
<b>Index:</b>	[0] = Limit value SLP1 (SE1) [1] = Limit value SLP2 (SE2)		
<b>Dependency:</b>	Refer to: p9501, p9534, p9562 Refer to: C01715		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	The following applies to the setting of these limits: - p9334[x] > p9335[x] - p9335[x] must lie in the valid traversing range (-737280 ... 737280). SLP: Safely Limited Position / SE: Safe software limit switches		

<b>p9339[0...7]</b>	<b>SI Motion gearbox direction of rotation reversal (Motor Module) / SI Mtn grbx rev MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the direction of rotation reversal for the gearbox. 0: No direction of rotation reversal 1: Direction of rotation reversal The active gearbox stage can be switched over via PROFIsafe.		
<b>Index:</b>	[0] = Gearbox 1 [1] = Gearbox 2 [2] = Gearbox 3 [3] = Gearbox 4 [4] = Gearbox 5 [5] = Gearbox 6 [6] = Gearbox 7 [7] = Gearbox 8		
<b>Dependency:</b>	Refer to: p9321		
<b>p9341</b>	<b>SI Motion encoder comparison algorithm (Motor Module) / Enc comp algo MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	255
<b>Description:</b>	Sets the comparison algorithm for the encoder position monitoring functions. The encoder that is used for the safe motion monitoring functions on the Motor Module/Hydraulic Module must be parameterized in this parameter.		
<b>Value:</b>	0: SMx20 safety algorithm 10: DQL binary safety algorithm 11: DQL linear non-binary safety algorithm 12: SMC30 safety algorithm 255: Safety algorithm unknown		
<b>Dependency:</b>	Refer to: p9541		
<b>p9342</b>	<b>SI Motion act val comparison tol (crosswise) (Motor Module) / SI Mtn actV tol MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0010 [mm]	360.0000 [mm]	0.1000 [mm]
<b>Description:</b>	Sets the tolerance for the crosswise data comparison of the actual position between the two monitoring channels. For encoderless motion monitoring functions, the tolerance must be set to a higher value (12 degrees rotary, 1 mm linear).		
<b>Dependency:</b>	Refer to: p9542 Refer to: C01711		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	For a linear axis, the tolerance is internally limited to 10 mm. For a "linear axis with rotating motor" and factory setting of p9320, p9321 and p9322, the factory setting of p9342 corresponds to a position tolerance of 36 ° on the motor side.		

<b>p9342</b>	<b>SI Motion act val comparison tol (crosswise) (Motor Module) / SI Mtn actV tol MM</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0.0010 [°]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 360.0000 [°]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.1000 [°]
<b>Description:</b>	Sets the tolerance for the crosswise data comparison of the actual position between the two monitoring channels. For encoderless motion monitoring functions, the tolerance must be set to a higher value (12 degrees rotary, 1 mm linear).		
<b>Dependency:</b>	Refer to: p9542 Refer to: C01711		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>p9343</b>	<b>SI Motion gearbox switching position tolerance (MM) / SI Mtn grbx tol MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> Integer32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 1	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1
<b>Description:</b>	Sets the factor to increase the tolerance for the crosswise data comparison of the actual position between the two monitoring channels while the gearbox stage is being switched over. This factor is effective when actual value synchronization is activated and when deactivated. Depending on the following tolerance, the following is obtained: - actual value synchronization activated: p9549 * p9543 - actual value synchronization deactivated: p9542 * p9543		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>p9344</b>	<b>SI Motion actual value comparison tolerance (referencing) (MM) / SI mtn ref tol MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0.0000 [mm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 36.0000 [mm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.0100 [mm]
<b>Description:</b>	Sets the tolerance for checking the actual values. For an incremental encoder, the actual values are checked after referencing; for an absolute encoder, when switching on.		
<b>Dependency:</b>	Refer to: C01711		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	A change only becomes effective after a POWER ON. For linear axes, the maximum value is limited to 1 mm.		

**p9344 SI Motion actual value comparison tolerance (referencing) (MM) / SI mtn ref tol MM**

VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0000 [°]	36.0000 [°]	0.0100 [°]

**Description:** Sets the tolerance for checking the actual values.  
For an incremental encoder, the actual values are checked after referencing; for an absolute encoder, when switching on.

**Dependency:** Refer to: C01711

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** A change only becomes effective after a POWER ON.

For linear axes, the maximum value is limited to 1 mm.

**p9345 SI Motion SSM filter time (Motor Module) / SI Mtn SSM filt MM**

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2823
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	500000.00 [µs]	0.00 [µs]

**Description:** Sets the filter time for the SSM feedback signal to detect standstill ( $n < nx$ ).

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** The filter time is effective only if the function is enabled ( $p9301.16 = p9501.16 = 1$ ).

The set time is rounded internally to an integer multiple of the monitoring clock cycle.

The parameter is included in the crosswise data comparison of the two monitoring channels.

SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

**p9346 SI Motion SSM velocity limit (Motor Module) / SI Mtn SSM v\_limMM**

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2823
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [mm/min]	1000000.00 [mm/min]	20.00 [mm/min]

**Description:** Sets the velocity limit for the SSM feedback signal to detect standstill ( $n < nx$ ).  
When this limit value is undershot, the signal "SSM feedback signal active" is set.  
For  $p9368 = p9568 = 0$ , the value in  $p9346/p9546$  is also applicable for SAM/SBR.

**Dependency:** Refer to: p9546

**Caution:** The "SAM/SBR" function is deactivated if the selected threshold value is undershot.



**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** SAM: Safe Acceleration Monitor (safe acceleration monitoring)

SBR: Safe Brake Ramp (safe brake ramp monitoring)

SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

---

<b>p9346</b>	<b>SI Motion SSM velocity limit (Motor Module) / SI Mtn SSM v_limMM</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2823
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	1000000.00 [rpm]	20.00 [rpm]

**Description:** Sets the velocity limit for the SSM feedback signal to detect standstill ( $n < nx$ ).  
 When this limit value is undershot, the signal "SSM feedback signal active" is set.  
 For p9368 = p9568 = 0, the value in p9346/p9546 is also applicable for SAM/SBR.

**Dependency:** Refer to: p9546

**Caution:** The "SAM/SBR" function is deactivated if the selected threshold value is undershot.



**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** SAM: Safe Acceleration Monitor (safe acceleration monitoring)  
 SBR: Safe Brake Ramp (safe brake ramp monitoring)  
 SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

---

<b>p9347</b>	<b>SI Motion SSM velocity hysteresis (Motor Module) / SI Mtn SSM Hyst MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2823
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0010 [mm/min]	500.0000 [mm/min]	10.0000 [mm/min]

**Description:** Sets the velocity hysteresis for the SSM feedback signal to detect standstill ( $n < nx$ ).

**Dependency:** Refer to: C01711

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** The velocity hysteresis is effective only if the function is enabled (p9301.16 = p9501.16 = 1).  
 The parameter is included in the crosswise data comparison of the two monitoring channels.  
 SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

---

<b>p9347</b>	<b>SI Motion SSM velocity hysteresis (Motor Module) / SI Mtn SSM Hyst MM</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2823
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0010 [rpm]	500.0000 [rpm]	10.0000 [rpm]

**Description:** Sets the velocity hysteresis for the SSM feedback signal to detect standstill ( $n < nx$ ).

**Dependency:** Refer to: C01711

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** The velocity hysteresis is effective only if the function is enabled (p9301.16 = p9501.16 = 1).  
 The parameter is included in the crosswise data comparison of the two monitoring channels.  
 SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

<b>p9348</b>	<b>SI Motion SAM actual velocity tolerance (Motor Module) / SI Mtn SAM tol MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [mm/min]	120000.00 [mm/min]	300.00 [mm/min]
<b>Description:</b>	Sets the velocity tolerance for the "SAM" function.		
<b>Dependency:</b>	Refer to: p9548 Refer to: C01706		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	SAM: Safe Acceleration Monitor (safe acceleration monitoring)		
<b>p9348</b>	<b>SI Motion SAM actual velocity tolerance (Motor Module) / SI Mtn SAM tol MM</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	120000.00 [rpm]	300.00 [rpm]
<b>Description:</b>	Sets the velocity tolerance for the "SAM" function.		
<b>Dependency:</b>	Refer to: p9548 Refer to: C01706		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	SAM: Safe Acceleration Monitor (safe acceleration monitoring)		
<b>p9349</b>	<b>SI Motion slip velocity tolerance (Motor Module) / SI Mtn slip MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [mm/min]	6000.00 [mm/min]	6.00 [mm/min]
<b>Description:</b>	Sets the velocity tolerance that is used for a 2-encoder system in crosswise comparison between the two monitoring channels.		
<b>Dependency:</b>	Refer to: p9301, p9342, p9549		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	If the "actual value synchronization" is not enabled (p9301.3 = 0), then the value parameterized in p9342 is used as tolerance in the crosswise data comparison.		
<b>p9349</b>	<b>SI Motion slip velocity tolerance (Motor Module) / SI Mtn slip MM</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	6000.00 [rpm]	6.00 [rpm]
<b>Description:</b>	Sets the velocity tolerance that is used for a 2-encoder system in crosswise comparison between the two monitoring channels.		
<b>Dependency:</b>	Refer to: p9301, p9342, p9549		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	If the "actual value synchronization" is not enabled (p9301.3 = 0), then the value parameterized in p9342 is used as tolerance in the crosswise data comparison.		

<b>p9351</b>	<b>SI Motion SLS(SG) changeover/SOS (SBH) delay time (MM) / SI SLS/SOS t MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2819, 2820
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	600000000.00 [µs]	100000.00 [µs]
<b>Description:</b>	Sets the delay time for the SLS changeover and for the activation of SOS for the functions "Safely Limited Speed" (SLS) and "Safe Operating Stop" (SOS). When transitioning from a higher to a lower safely limited speed level, and when activating safe operating stop (SOS), within this delay time, the "old" speed level remains active. This delay is also applicable when activating SLS from the state "SOS and SLS inactive" and activating SOS from the state "SOS inactive".		
<b>Dependency:</b>	Refer to: p9551		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. SLS: Safely Limited Speed SOS: Safe Operating Stop		
<b>p9352</b>	<b>SI Motion transition time STOP C to SOS (Motor Module) / SI Mtn t C-&gt;SOS MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2819
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	600000000.00 [µs]	100000.00 [µs]
<b>Description:</b>	Sets the transition time from STOP C to "Safe Operating Stop" (SOS).		
<b>Dependency:</b>	Refer to: p9552		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. SOS: Safe Operating Stop		
<b>p9353</b>	<b>SI Motion transition time STOP D to SOS (Motor Module) / SI Mtn t D-&gt;SOS MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2819
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	600000000.00 [µs]	100000.00 [µs]
<b>Description:</b>	Sets the transition time from STOP D to "Safe Operating Stop" (SOS).		
<b>Dependency:</b>	Refer to: p9553		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. SOS: Safe Operating Stop		

<b>p9354</b>	<b>SI Motion transition time STOP E to SOS (Motor Module) / SI Mtn t E-&gt;SOS MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	600000000.00 [µs]	100000.00 [µs]
<b>Description:</b>	Sets the transition time from STOP E to "Safe Operating Stop" (SOS).		
<b>Dependency:</b>	Refer to: p9554		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. SOS: Safe Operating Stop		
<b>p9355</b>	<b>SI Motion transition time STOP F to STOP B (Motor Module) / SI Mtn t F-&gt;B MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2819
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	600000000.00 [µs]	0.00 [µs]
<b>Description:</b>	Sets the transition time from STOP F to STOP B.		
<b>Dependency:</b>	Refer to: C01711		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle.		
<b>p9356</b>	<b>SI Motion STOP A delay time (Motor Module) / SI Mtn IL t_del MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2819
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	3600000000.00 [µs]	100000.00 [µs]
<b>Description:</b>	Sets the delay time for STOP A after STOP B / SS1. In the case of encoderless motion monitoring functions with safe brake ramp monitoring (p9306 = 1) and the OFF3 ramp enabled at the same time (p9507.3 = 0), the parameter has no effect.		
<b>Dependency:</b>	Refer to: p9360, p9556 Refer to: C01701		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. SS1: Safe Stop 1		
<b>p9357</b>	<b>SI Motion STO test time (Motor Module) / SI Mtn IL t MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	10000000.00 [µs]	100000.00 [µs]
<b>Description:</b>	Sets the time after which STO must be active when initiating the test stop.		
<b>Dependency:</b>	Refer to: p9557 Refer to: C01798		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		

**Note:** The set time is rounded internally to an integer multiple of the monitoring clock cycle.

---

**p9358 SI Motion acceptance test mode time limit (Motor Module) / SI Mtn acc t MM**

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	5000000.00 [µs]	100000000.00 [µs]	40000000.00 [µs]

**Description:** Sets the maximum time for the acceptance test mode.  
If the acceptance test mode takes longer than the selected time limit, then the mode is automatically terminated.

**Dependency:** Refer to: p9558  
Refer to: C01799

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** The set time is rounded internally to an integer multiple of the monitoring clock cycle.

---

**p9360 SI Motion STO shutdown velocity (Motor Module) / SI Mtn IL v\_sh MM**

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [mm/min]	6000.00 [mm/min]	0.00 [mm/min]

**Description:** Sets the shutdown velocity for activating STO.  
Below this velocity "standstill" is assumed and for STOP B / SS1, STO is selected.  
In the case of encoderless motion monitoring functions, the parameter must be > 0 (recommended value: 10).

**Dependency:** Refer to: p9356, p9560

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** The shutdown velocity has no effect for a value = 0.  
SS1: Safe Stop 1

---

**p9360 SI Motion pulse suppression shutdown speed (Motor Module) / SI Mtn IL n\_sh MM**

VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	6000.00 [rpm]	0.00 [rpm]

**Description:** Sets the shutdown speed for the pulse suppression.  
Below this speed "standstill" is assumed and for STOP B / SS1, the pulses are suppressed (by changing to STOP A).

**Dependency:** Refer to: p9356, p9560

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** The shutdown speed has no effect for a value = 0.  
SS1: Safe Stop 1

<b>p9362[0...1]</b>		<b>SI Motion SLP stop response (Motor Module) / SI mtn SLP stop MM</b>	
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	14	2
<b>Description:</b>	Sets the stop response for the function "Safely Limited Position" (SLP).		
<b>Value:</b>	0: STOP A 1: STOP B 2: STOP C 3: STOP D 4: STOP E 10: STOP A with delayed stop response when the bus fails 11: STOP B with delayed stop response when the bus fails 12: STOP C with delayed stop response when the bus fails 13: STOP D with delayed stop response when the bus fails 14: STOP E with delayed stop response when the bus fails		
<b>Index:</b>	[0] = Limit value SLP1 (SE1) [1] = Limit value SLP2 (SE2)		
<b>Dependency:</b>	Refer to: p9534, p9535		
<b>Note:</b>	In the extended sense, a bus failure should be seen here as a communication error in the control signals of the safety functions (e.g. via PROFIsafe or TM54F). SLP: Safely Limited Position		

<b>p9363[0...3]</b>		<b>SI Motion SLS stop response (Motor Module) / SI Mtn SLS Stop MM</b>	
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	14	2
<b>Description:</b>	Sets the stop response for the function "Safely Limited Speed" (SLS). These settings apply to the individual limit values for SLS. In the case of encoderless motion monitoring (p9506/p9306 = 1, 3), only a value of 0 or 1 is permitted.		
<b>Value:</b>	0: STOP A 1: STOP B 2: STOP C 3: STOP D 4: STOP E 10: STOP A with delayed stop response when the bus fails 11: STOP B with delayed stop response when the bus fails 12: STOP C with delayed stop response when the bus fails 13: STOP D with delayed stop response when the bus fails 14: STOP E with delayed stop response when the bus fails		
<b>Index:</b>	[0] = Limit value SLS1 [1] = Limit value SLS2 [2] = Limit value SLS3 [3] = Limit value SLS4		
<b>Dependency:</b>	Refer to: p9331, p9380, p9563		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	In the extended sense, a bus failure should be seen here as a communication error in the control signals of the safety functions (e.g. via PROFIsafe or TM54F). SLS: Safely Limited Speed		

<b>p9364</b>	<b>SI Motion SDI tolerance (Motor Module) / SI Mtn SDI tol MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2824
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.001 [mm]	360.000 [mm]	12.000 [mm]
<b>Description:</b>	Sets the tolerance for the function "Safe motion direction" (SDI). This motion in the monitored direction is still permissible before safety message C30716 is initiated.		
<b>Dependency:</b>	Refer to: p9365, p9366 Refer to: C30716		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	SDI: Safe Direction (safe motion direction)		
<b>p9364</b>	<b>SI Motion SDI tolerance (Motor Module) / SI Mtn SDI tol MM</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2824
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.001 [°]	360.000 [°]	12.000 [°]
<b>Description:</b>	Sets the tolerance for the function "Safe motion direction" (SDI). This motion in the monitored direction is still permissible before safety message C30716 is initiated.		
<b>Dependency:</b>	Refer to: p9365, p9366 Refer to: C30716		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	SDI: Safe Direction (safe motion direction)		
<b>p9365</b>	<b>SI Motion SDI delay time (Motor Module) / SI Mtn SDI t MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2824
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [μs]	600000000.00 [μs]	100000.00 [μs]
<b>Description:</b>	Sets the delay time for the function "Safe motion direction" (SDI). After selecting the SDI function, then for a maximum of this time, motion in the monitored direction is permissible. This time can therefore be used for braking any motion.		
<b>Dependency:</b>	Refer to: p9364, p9366 Refer to: C30716		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. SDI: Safe Direction (safe motion direction)		

<b>p9366</b>		<b>SI Motion SDI stop response (Motor Module) / SI Mtn SDI Stop MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2824	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	14	1	
<b>Description:</b>	Sets the stop response for the function "Safe motion direction" (SDI). This setting applies to both directions of motion. In the case of encoderless motion monitoring (p9306 = 1), only a value of 0 or 1 is permitted.			
<b>Value:</b>	0: STOP A 1: STOP B 2: STOP C 3: STOP D 4: STOP E 10: STOP A with delayed stop response when the bus fails 11: STOP B with delayed stop response when the bus fails 12: STOP C with delayed stop response when the bus fails 13: STOP D with delayed stop response when the bus fails 14: STOP E with delayed stop response when the bus fails			
<b>Dependency:</b>	Refer to: p9364, p9365 Refer to: C30716			
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.			
<b>Note:</b>	In the extended sense, a bus failure should be seen here as a communication error in the control signals of the safety functions (e.g. via PROFIsafe or TM54F). SDI: Safe Direction (safe motion direction)			

<b>p9368</b>		<b>SI Motion SAM/SBR velocity limit (Motor Module) / SI Mtn SAM v_limMM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.00 [mm/min]	1000.00 [mm/min]	0.00 [mm/min]	
<b>Description:</b>	Sets the velocity limit for the "SAM" and "SBR" functions. SAM is deactivated once the set velocity limit has been undershot. SBR is deactivated if the safe brake ramp falls below the set velocity limit.			
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.			
<b>Note:</b>	SAM: Safe Acceleration Monitor (safe acceleration monitoring) SBR: Safe Brake Ramp (safe brake ramp monitoring) SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring) For p9568 = p9368 = 0, the following applies: The value in p9546/p9346 (SSM) is applied as the velocity limit for SAM/SBR.			

<b>p9368</b>		<b>SI Motion SAM/SBR velocity limit (Motor Module) / SI Mtn SAM v_limMM</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.00 [rpm]	1000.00 [rpm]	0.00 [rpm]	
<b>Description:</b>	Sets the velocity limit for the "SAM" and "SBR" functions. SAM is deactivated once the set velocity limit has been undershot. SBR is deactivated if the safe brake ramp falls below the set velocity limit.			

## 2 Parameters

### 2.2 List of parameters

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** SAM: Safe Acceleration Monitor (safe acceleration monitoring)  
SBR: Safe Brake Ramp (safe brake ramp monitoring)  
SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)  
For p9568 = p9368 = 0, the following applies:  
The value in p9546/p9346 (SSM) is applied as the velocity limit for SAM/SBR.

---

<b>p9370</b>	<b>SI Motion acceptance test mode (Motor Module) / SI Mtn acc_mod MM</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	00AC hex	0000 hex
<b>Description:</b>	Setting to select and de-select the acceptance test mode.		
<b>Value:</b>	0: [00 hex] De-select the acceptance test mode 172: [AC hex] Select the acceptance test mode		
<b>Dependency:</b>	Refer to: p9358, r9371 Refer to: C01799		
<b>Note:</b>	Acceptance test mode can only be selected if the motion monitoring functions, which are integrated in the drives, are enabled (p9601.2/p9801.2).		

---

<b>r9371</b>	<b>SI Motion acceptance test status (Motor Module) / SI Mtn acc_stat MM</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	00AC hex	-
<b>Description:</b>	Displays the status of the acceptance test mode.		
<b>Value:</b>	0: [00 hex] Acc_mode inactive 12: [0C hex] Acc_mode not possible due to POWER ON fault 13: [0D hex] Acc_mode not possible due to incorrect ID in p9370 15: [0F hex] Acc_mode not possible due to expired Acc_timer 172: [AC hex] Acc_mode active		
<b>Dependency:</b>	Refer to: p9358, p9370 Refer to: C01799		

---

<b>p9374</b>	<b>SI Motion safe position scaling (Motor Module) / SI mtn SP scal MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	100000	1000
<b>Description:</b>	Sets the scaling factor to transfer the safe position via PROFIsafe in the 16-bit notation.		
<b>Dependency:</b>	Refer to: r9713		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	The parameter is only effective when PROFIsafe telegram 901 is selected. By selecting a suitable scaling of the 32 bit position actual value (r9713[0]), it must be ensured that the scaled position actual value is not greater than 16 bit. The scaling is realized by dividing r9713[0] with this scaling factor. If, during operation, a position actual value is determined, which cannot be scaled to the 16 bits, then message C30711 with value 7001 is output and safety stop response STOP F.		

<b>p9377</b>	<b>SI Motion SLP delay time (Motor Module) / SI mtn SLP t MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	600000000.00 [µs]	0.00 [µs]
<b>Description:</b>	Setting the delay time: -between selecting and activating the "Safety-limited Position" (SLP) function -when changing between the two active SLP ranges, if the new range is not completely contained in the old range.		
<b>Dependency:</b>	Refer to: p9301, p9334, p9335		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. SLP: Safely Limited Position		
<b>p9380</b>	<b>SI Motion stop response delay bus failure (Motor Module) / SI Mtn t to IL MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	800000.00 [µs]	0.00 [µs]
<b>Description:</b>	Sets the delay time, after which the stop response parameterized in p9612 for bus failure is executed.		
<b>Dependency:</b>	Refer to: p9363		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	In the extended sense, a bus failure should be seen here as a communication error in the control signals of the safety functions (e.g. via PROFIsafe or TM54F). The main use of the wait time is the ESR function (Extended Stop and Retract). The set time is rounded internally to an integer multiple of the monitoring clock cycle.		
<b>p9381</b>	<b>SI Motion brake ramp reference value (Motor Module) / SI Mtn ramp ref MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	600.0000 [mm/min]	240000.0000 [mm/min]	1500.0000 [mm/min]
<b>Description:</b>	Sets the reference value to define the brake ramp. The rate of rise of the brake ramp depends upon p9381 (reference value) and p9383 (monitoring time).		
<b>Dependency:</b>	Refer to: p9382, p9383		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>p9381</b>	<b>SI Motion brake ramp reference value (Motor Module) / SI Mtn ramp ref MM</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	600.0000 [rpm]	240000.0000 [rpm]	1500.0000 [rpm]
<b>Description:</b>	Sets the reference value to define the brake ramp. The rate of rise of the brake ramp depends upon p9381 (reference value) and p9383 (monitoring time).		
<b>Dependency:</b>	Refer to: p9382, p9383		

## 2 Parameters

### 2.2 List of parameters

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

---

<b>p9382</b>	<b>SI Motion brake ramp delay time (Motor Module) / SI Mtn rp t<sub>del</sub> MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10000.00 [µs]	99000000.00 [µs]	250000.00 [µs]

**Description:** Sets the delay time for monitoring the brake ramp.  
Monitoring of the brake ramp starts once the delay time has elapsed.

**Dependency:** Refer to: p9381, p9383

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** The set time is rounded internally to an integer multiple of the monitoring clock cycle.  
Internally, the set time is limited downwards to 2 safety monitoring clock cycles (2 \* p9500/p9300).

---

<b>p9383</b>	<b>SI Motion brake ramp monitoring time (Motor Module) / SI Mtn rp t<sub>mon</sub> MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	500.00 [ms]	3600000.00 [ms]	10000.00 [ms]

**Description:** Sets the monitoring time to define the brake ramp.  
The rate of rise of the brake ramp depends upon p9381 (reference value) and p9383 (monitoring time).

**Dependency:** Refer to: p9381, p9382

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** The set time is rounded internally to an integer multiple of the monitoring clock cycle.

---

<b>p9385</b>	<b>SI Motion actual value sensing sensorless fault tolerance (MM) / ActVal si tol MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-1	4	-1

**Description:** Sets the tolerance of the plausibility monitoring of the current and voltage angle.  
A higher value results in a higher degree of ruggedness when reversing at low speeds, as well as in the field weakening range for load steps.  
An increase is advantageous, if the current or voltage at the motor become small.

**Dependency:** Refer to: p9507  
Refer to: F30681, C30711

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.  
Reducing this value can adversely affect the actual value sensing and the plausibility check.  
When the value is increased, this results in a longer evaluation delay and a higher velocity deviation (r9787).

**Note:** This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3).  
For synchronous motors, the value 4 must be set.  
If value = -1:  
- for synchronous motors, the calculation is automatically made with the value 4.  
- for induction motors, the calculation is automatically made with a value of 0 (if the code number of the power unit p0201[0] < 14000, otherwise with a value of 2).

<b>p9386</b>	<b>SI Motion actual value sensing sensorless delay time (MM) / ActVal sl t_del MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	5.00 [ms]	1000.00 [ms]	100.00 [ms]
<b>Description:</b>	Sets the delay time to evaluate the encoderless actual value sensing after the pulses have been enabled. The value must be greater than or equal to the motor magnetizing time (p0346).		
<b>Dependency:</b>	Refer to: C30711		
<b>Caution:</b>	The safety functionality is only completely guaranteed after this time has expired.		
			
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive. If this value is reduced, this can have a negative impact on the actual value acquisition and plausibility check – and result in Safety message C30711 with the message value 1041 or 1042.		
<b>Note:</b>	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3). The set time is rounded internally to an integer multiple of the monitoring clock cycle.		
<b>p9387</b>	<b>SI Motion actual value sensing sensorless filter time (MM) / Actv sl t_filt MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	100000.00 [µs]	25000.00 [µs]
<b>Description:</b>	Sets the filter time for smoothing the actual value with sensorless actual value sensing.		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive. A longer filter time results in a longer response time.		
<b>Note:</b>	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3). The smoothing is realized with a 1st order filter. For p9387 = minimum value, the filter is deactivated. The set time is rounded internally to an integer multiple of the monitoring clock cycle.		
<b>p9388</b>	<b>SI Motion actual value sensing sensorless minimum current (MM) / ActVal sl I_min MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	1000.00 [%]	10.00 [%]
<b>Description:</b>	Sets the minimum current for encoderless actual value sensing referred to 1 A (i.e. 1 % = 10 mA). - the value must be increased if C30711 has occurred with message value 1042. - the value must be decreased if C30711 has occurred with message value 1041. For synchronous motors, the following condition must be fulfilled: $ p0305 \times p9783  \geq p9388 \times 1.2$		
<b>Recommendation:</b>	If required, the correct value of the motor minimum current should be determined by making the appropriate measurements.		
<b>Dependency:</b>	Refer to: r9785 Refer to: C30711		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive. If this percentage value is reduced excessively, then this can result in a safety message and an inaccurate actual value.		
<b>Note:</b>	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3).		

<b>p9389</b>	<b>SI Motion actual value sensing sensorless accel. limit (MM) / ActVal sl a_lim MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.00 [%]	3300.00 [%]	100.00 [%]
<b>Description:</b>	Sets the acceleration limit to filter velocity fluctuations. If this percentage value is increased, when accelerating, velocity peaks that do not reflect the real velocity characteristic can occur. If this value is decreased, and this dampens the velocity peaks when accelerating. - the value must be increased if C30711 with message value 1043 has occurred. - the value must be lowered if acceleration procedures have led to an excessive Safety actual velocity.		
<b>Recommendation:</b>	The setting of this parameter depends on the motor and closed-loop control, and must be newly determined for each configuration. To do this, a measurement should be performed while the actual value jumps, and the limit in r9785[0] must be set so low using p9389, so that it is exceeded by the value in r9785[1] a maximum of four times per second. The actual value correction filter intervenes at this instant in time. The step is no longer so drastic.		
<b>Dependency:</b>	Refer to: r9784 Refer to: C30711		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3). For p9389 = maximum value, the filter is deactivated. Diagnostics parameter p9784 must be used to correctly set this parameter.		
<b>r9390[0...3]</b>	<b>SI Motion version safety motion monitoring (Motor Module) / SI Mtn Version MM</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the Safety Integrated version for the safe monitoring functions.		
<b>Index:</b>	[0] = Safety Version (major release) [1] = Safety Version (minor release) [2] = Safety Version (baselevel or patch) [3] = Safety Version (hotfix)		
<b>Dependency:</b>	Refer to: r9590, r9770, r9870, r9890		
<b>Note:</b>	Example: r9390[0] = 2, r9390[1] = 60, r9390[2] = 1, r9390[3] = 0 --> SI Motion version V02.60.01.00		
<b>r9398[0...1]</b>	<b>SI Motion actual checksum SI parameters (Motor Module) / SI Mtn act CRC MM</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the checksum for the checked Safety Integrated parameters of the motion monitoring function (actual checksum) on the Motor Module/Hydraulic Module.		
<b>Index:</b>	[0] = Checksum over SI parameters for motion monitoring [1] = Checksum over SI parameters with hardware reference		
<b>Dependency:</b>	Refer to: p9399		
<b>Note:</b>	SI: Safety Integrated		

<b>p9399[0...1] SI Motion reference checksum SI parameters (Motor Module) / SI Mtn setp CRC MM</b>			
VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> Unsigned32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> FFFF FFFF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 hex
<b>Description:</b>	Sets the checksum for the checked Safety Integrated parameters of the motion monitoring function (reference checksum) on the Motor Module/Hydraulic Module.		
<b>Index:</b>	[0] = Checksum over SI parameters for motion monitoring [1] = Checksum over SI parameters with hardware reference		
<b>Dependency:</b>	Refer to: r9398		
<b>Note:</b>	SI: Safety Integrated		
<b>r9406[0...19] PS file parameter number parameter not transferred / PS par_no n transf</b>			
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 1 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the parameters that were not able to be transferred when reading the parameter back-up files (PS files) from the non-volatile memory (e.g. memory card). r9406[0] = 0 --> All of the parameter values were able to be transferred error-free. r9406[0...x] > 0 --> indicates the parameter number in the following cases: - parameter, whose value was not able to be completely accepted. - indexed parameter, where at least 1 index was not able to be accepted. The first index that is not transferred is displayed in r9407.		
<b>Dependency:</b>	Refer to: r9407, r9408		
<b>Note:</b>	All indices from r9406 to r9408 designate the same parameter. r9406[x] parameter number, parameter not accepted r9407[x] parameter index, parameter not accepted r9408[x] fault code, parameter not accepted		
<b>r9407[0...19] PS file parameter index parameter not transferred / PS parameter index</b>			
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 1 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the first index of the parameters that could not be transferred when the parameter backup files (PS files) were read from the non-volatile memory (e.g. memory card). If, from an indexed parameter, at least one index was not able to be transferred, then the parameter number is displayed in r9406[n] and the first index that was not transferred is displayed in r9407[n]. r9406[0] = 0 --> All of the parameter values were able to be transferred error-free. r9406[n] > 0 --> Displays r9407[n] the first index of the parameter number r9406[n] that was not transferred.		
<b>Dependency:</b>	Refer to: r9406, r9408		

## 2 Parameters

### 2.2 List of parameters

**Note:** All indices from r9406 to r9408 designate the same parameter.  
r9406[x] parameter number, parameter not accepted  
r9407[x] parameter index, parameter not accepted  
r9408[x] fault code, parameter not accepted

---

<b>r9408[0...19]</b>	<b>PS file fault code parameter not transferred / PS fault code</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 1 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Only for internal Siemens service purposes.		
<b>Dependency:</b>	Refer to: r9406, r9407		
<b>Note:</b>	All indices from r9406 to r9408 designate the same parameter. r9406[x] parameter number, parameter not accepted r9407[x] parameter index, parameter not accepted r9408[x] fault code, parameter not accepted		

---

<b>r9409</b>	<b>Number of parameters to be saved / Qty par to save</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the number of modified parameters and those that have still not be saved for this drive object.		
<b>Dependency:</b>	Refer to: p0971, p0977		
<b>Notice:</b>	Inherent to the system, the list of the parameters to be backed up is empty after the following actions: - Download - Warm restart - Factory setting In these cases, a new parameter backup must be initiated, which is then the starting point for the list of modified parameters.		
<b>Note:</b>	The modified parameters that still need to be saved are internally listed in r9410 ... r9419.		

---

<b>r9450[0...29]</b>	<b>Reference value change parameter with unsuccessful calculation / Ref_chg par n poss</b>		
VECTOR_G, B_INF, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 2 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the parameters for which the re-calculation was unsuccessful after an internal system reference value change.		
<b>Dependency:</b>	Refer to: F07086		

<b>r9451[0...29]</b>	<b>Units changeover adapted parameters / Unit_chngov par</b>		
VECTOR_G, B_INF, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 1 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the parameters whose parameter would have to be changed during a units changeover.		
<b>Dependency:</b>	Refer to: F07088		
<b>r9481</b>	<b>Number of BICO interconnections / BICO count</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Commands <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the number of BICO interconnections (signal sinks).		
<b>Dependency:</b>	Refer to: r9482, r9483		
<b>Note:</b>	The selected BICO interconnections should be entered into r9482 and r9483.		
<b>r9482[0...n]</b>	<b>BICO interconnections BI/CI parameters / BICO BI/CI par</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Commands <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> r9481 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the signal sinks (binector/connector inputs, BI/CI parameters). The number of BICO interconnections is displayed in r9481.		
<b>Dependency:</b>	Refer to: r9481, r9483		
<b>Note:</b>	The list is sorted according to signal sources and is structured as follows: r9842[0]: Interconnection 1 (signal sink, BICO coded), r9843[0]: Interconnection 1 (signal source, BICO coded) r9842[1]: Interconnection 2 (signal sink, BICO coded), r9843[1]: Interconnection 2 (signal source, BICO coded) ...		
<b>r9483[0...n]</b>	<b>BICO interconnections BO/CO parameters / BICO BO/CO par</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Commands <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> r9481 <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the signal sources (binector/connector outputs, BO/CO parameters). The number of BICO interconnections is displayed in r9481.		
<b>Dependency:</b>	Refer to: r9481, r9482		
<b>Note:</b>	The list is sorted according to signal sources and is structured as follows: r9842[0]: Interconnection 1 (signal sink, BICO coded), r9843[0]: Interconnection 1 (signal source, BICO coded) r9842[1]: Interconnection 2 (signal sink, BICO coded), r9843[1]: Interconnection 2 (signal source, BICO coded) ...		

## 2 Parameters

### 2.2 List of parameters

<b>p9484</b>	<b>BICO interconnections search signal source / BICO S_src srch</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 4294967295	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0
<b>Description:</b>	Sets the signal source (BO/CO parameter, BICO coded) to search in the signal sinks. The question is answered: How often is a connection made to a signal source in the drive object and from which index are these interconnections saved (r9482 and r9483)?		
<b>Dependency:</b>	Refer to: r9481, r9482, r9483, r9485, r9486		
<b>r9485</b>	<b>BICO interconnections signal source search count / BICO S_src srchQty</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the number of BICO interconnections to the signal sink being searched for.		
<b>Dependency:</b>	Refer to: r9481, r9482, r9483, p9484, r9486		
<b>Note:</b>	The signal source to be searched is set in p9484 (BICO-coded). The search result is contained in r9482 and r9483 and is specified by the count (r9485) and the first index (r9486).		
<b>r9486</b>	<b>BICO interconnections signal source search first index / BICO S_src srchIdx</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, TM54F_MA, TM54F_SL, ENC	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> -
<b>Description:</b>	Displays the first index of the signal source being searched for.		
<b>Dependency:</b>	Refer to: r9481, r9482, r9483, p9484, r9485		
<b>Note:</b>	The signal source to be searched is set in p9484 (BICO-coded). The search result is contained in r9482 and r9483 and is specified by the count (r9485) and the first index (r9486).		
<b>r9490</b>	<b>Number of BICO interconnections to other drives / Qty BICO to drive</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Commands <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the number of signal sources from this drive to other drives/drive objects (Binector Output/Connector Output, BO/CO).		
<b>Dependency:</b>	Refer to: r9491, r9492, p9493		

<b>r9491[0...9]</b>	<b>BI/CI of BICO interconnections to other drives / BI/CI to drive</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Commands <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the signal receiver list (Binector Input/Connector Input, BI/CI) for the first interconnections between this drive and other drives/drive objects.		
<b>Dependency:</b>	Refer to: r9490, r9492, p9493		
<b>Notice:</b>	A drive cannot be deleted if this list is not empty! Otherwise, another drive would continue to attempt to read a signal from a drive that no longer existed.		
<b>Note:</b>	All indices of r9491 to p9493 designate the same interconnection. r9491[x] contains the signal receiver and r9492[x] the matching signal source; p9493[x] can be set to modify the interconnection.		
<b>r9492[0...9]</b>	<b>BO/CO of BICO interconnections to other drives / BO/CO to drive</b>		
All objects	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Commands <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the signal source list (Binector Output/Connector Output, BO/CO) for the first interconnections between this drive and other drives/drive objects.		
<b>Dependency:</b>	Refer to: r9490, r9491, p9493		
<b>Notice:</b>	A drive cannot be deleted if this list is not empty! Otherwise, another drive would continue to attempt to read a signal from a drive that no longer existed.		
<b>Note:</b>	All indices of r9491 to p9493 designate the same interconnection. r9491[x] contains the signal receiver and r9492[x] the matching signal source; p9493[x] can be set to modify the interconnection.		
<b>p9493[0...9]</b>	<b>Reset BICO interconnections to other drives / Reset BICO to driv</b>		
All objects	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 15	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 15
<b>Description:</b>	Setting to reset the BICO interconnections to other drives. Each interconnection can be individually reset.		
<b>Value:</b>	0: Set connection to 0 1: Set connection to 1 (100 %) 2: Set connection to factory setting 15: Finished		
<b>Dependency:</b>	Refer to: r9490, r9491, r9492		
<b>Note:</b>	All indices of r9491 to p9493 designate the same interconnection. r9491[x] contains the signal receiver and r9492[x] the matching signal source; p9493[x] can be set to modify the interconnection.		

<b>p9495</b>		<b>BICO behavior for deactivated drive objects / Behav for deact DO</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>	
	0	2	0	
<b>Description:</b>	Sets the behavior for BICO interconnections to drive objects that are either not capable of operation or have been deactivated. BO/CO parameters are on the drive object that is either not capable of operation or has been deactivated (signal source).			
<b>Value:</b>	0: Inactive 1: Save interconnections 2: Save interconnections and establish the factory setting			
<b>Dependency:</b>	Refer to: p9496, p9497, p9498, p9499 Refer to: A01318, A01507			
<b>Note:</b>	For p9495 = 0, the following applies: - the number of interconnections is zero (p9497 = 0). For p9495 not equal to 0, the following applies: - the BI/CI parameters involved are listed in p9498[0...29] (signal sink). - the associated BO/CO parameters are listed in p9499[0...29] (signal source).			
<b>p9496</b>		<b>BICO behavior when activating drive objects / Behav when act DO</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> T <b>Data type:</b> Integer16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>	
	0	2	0	
<b>Description:</b>	Sets the behavior when activating BICO interconnections to drive objects that are either not capable of operation or have been deactivated.			
<b>Value:</b>	0: Inactive 1: Restore the interconnections from the list 2: Delete the interconnections from the list			
<b>Dependency:</b>	Refer to: p9495, p9497, p9498, p9499 Refer to: A01318, A01507			
<b>Note:</b>	The BI/CI parameters involved are listed in p9498[0...29] (signal sink). The associated BO/CO parameters are listed in p9499[0...29] (signal source). After p9496 = 1, 2 the following applies: - p9497 = 0 - p9496 = 0			
<b>p9497</b>		<b>BICO interconnections to deactivated drive objects number / Interconn obj qty</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> T <b>Data type:</b> Unsigned16 <b>P-Group:</b> Commands <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>	
	0	65535	0	
<b>Description:</b>	Displays the number of saved BICO interconnections to drive objects that are either not capable of operation or have been deactivated. BO/CO parameters are on the drive object that is either not capable of operation or has been deactivated (signal source).			

**Dependency:** Refer to: p9495, p9496, p9498, p9499  
Refer to: A01318, A01507

---

**p9498[0...29] BICO BI/CI parameters to deactivated drive objects / BI/CI to deact obj**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Commands <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
--	--	---	---

**Description:** Displays the saved BI/CI parameters (signal sink), whose source is located on drive objects that are either not capable of operation or have been deactivated.

**Dependency:** Refer to: p9495, p9496, p9497, p9499  
Refer to: A01318, A01507

**Note:** A BICO interconnection (signal sink, signal source) is displayed in the same index of p9498 and p9499.

---

**p9499[0...29] BICO BO/CO parameters to deactivated drive objects / BO/CO to deact obj**

CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G, B_INF, TM31, TM120, TM150, TB30, ENC	<b>Can be changed:</b> T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Commands <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
--	--	---	---

**Description:** Displays the saved BO/CO parameters (signal source), which are located on drive objects that are either not capable of operation or have been deactivated.

**Dependency:** Refer to: p9495, p9496, p9497, p9498  
Refer to: A01318, A01507

**Note:** A BICO interconnection (signal sink, signal source) is displayed in the same index of p9498 and p9499.

---

**p9500 SI Motion monitoring clock cycle (Control Unit) / SI Mtn clock CU**

VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b>	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b>	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b>
	0.50000 [ms]	25.00000 [ms]	12.00000 [ms]

**Description:** Sets the monitoring clock cycle for safe motion monitoring.

**Dependency:** Refer to: r2064, p9511  
Refer to: F01652

**Note:** A change only becomes effective after a POWER ON.  
The monitoring clock cycle must be a multiple of the actual value sensing clock cycle (see the parameter description for p9511).

**p9501 SI Motion enable safety functions (Control Unit) / SI Mtn enable CU**

VECTOR\_G      **Can be changed:** C2(95)      **Calculated:** -      **Access level:** 3  
**Data type:** Unsigned32      **Dyn. index:** -      **Func. diagram:** -  
**P-Group:** Safety Integrated      **Unit group:** -      **Unit selection:** -  
**Not for motor type:** -      **Scaling:** -      **Expert list:** 1  
**Min**      **Max**      **Factory setting**  
-      -      0000 0000 0000 0000 0000  
0000 0000 0000 bin

**Description:** Sets the enable signals for the safe motion monitoring.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Enable SOS/SLS (SBH/SG)	Enable	Inhibit	-
	01	Enable SLP (SE)	Enable	Inhibit	-
	02	Enable absolute position	Enable	Inhibit	-
	03	Enable actual value synchronization	Enable	Inhibit	-
	16	Enable SSM (n < nx) hysteresis and filtering	Enable	Inhibit	2823
	17	Enable SDI	Enable	Inhibit	2824
	18	Enable SS2E	Enable	Inhibit	-
	24	Enable transfer SLS (SG) limit value via PROFIsafe	Enable	Inhibit	-
	25	Enable transfer safe position via PROFIsafe	Enable	Inhibit	-
	26	Enable safe gearbox switchover	Enable	Inhibit	-
	27	Enable referencing via SCC	Enable	Inhibit	-

**Dependency:** Refer to: F01682, F01683

**Note:** A change only becomes effective after a POWER ON.  
SDI: Safe Direction (safe motion direction)  
SLS: Safely Limited Speed / SG: Safely reduced speed  
SOS: Safe Operating Stop / SBH: Safe operating stop  
SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

**p9502 SI Motion axis type (Control Unit) / SI Mtn ax type CU**

VECTOR\_G      **Can be changed:** C2(95)      **Calculated:** -      **Access level:** 3  
**Data type:** Integer16      **Dyn. index:** -      **Func. diagram:** -  
**P-Group:** Safety Integrated      **Unit group:** -      **Unit selection:** -  
**Not for motor type:** -      **Scaling:** -      **Expert list:** 1  
**Min**      **Max**      **Factory setting**  
0      1      0

**Description:** Sets the axis type (linear axis or rotary axis/spindle).

**Value:** 0: Linear axis  
1: Rot axis/spindle

**Note:** For the commissioning software, after changing over the axis type, the units dependent on the axis type are only updated after a project upload.  
A change only becomes effective after a POWER ON.

<b>p9503</b>	<b>SI Motion SCA (SN) enable (Control Unit) / SI Mtn SCA enab</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin

**Description:** Setting to enable the function "Safe Cam" (SCA).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Enable SCA1 (SN1)	Enable	Inhibit	-
	01	Enable SCA2 (SN2)	Enable	Inhibit	-
	02	Enable SCA3 (SN3)	Enable	Inhibit	-
	03	Enable SCA4 (SN4)	Enable	Inhibit	-
	04	Enable SCA5 (SN5)	Enable	Inhibit	-
	05	Enable SCA6 (SN6)	Enable	Inhibit	-
	06	Enable SCA7 (SN7)	Enable	Inhibit	-
	07	Enable SCA8 (SN8)	Enable	Inhibit	-
	08	Enable SCA9 (SN9)	Enable	Inhibit	-
	09	Enable SCA10 (SN10)	Enable	Inhibit	-
	10	Enable SCA11 (SN11)	Enable	Inhibit	-
	11	Enable SCA12 (SN12)	Enable	Inhibit	-
	12	Enable SCA13 (SN13)	Enable	Inhibit	-
	13	Enable SCA14 (SN14)	Enable	Inhibit	-
	14	Enable SCA15 (SN15)	Enable	Inhibit	-
	15	Enable SCA16 (SN16)	Enable	Inhibit	-
	16	Enable ESCA17 (SN17)	Enable	Inhibit	-
	17	Enable SCA18 (SN18)	Enable	Inhibit	-
	18	Enable SCA19 (SN19)	Enable	Inhibit	-
	19	Enable SCA20 (SN20)	Enable	Inhibit	-
	20	Enable SCA21 (SN21)	Enable	Inhibit	-
	21	Enable SCA22 (SN22)	Enable	Inhibit	-
	22	Enable SCA23 (SN23)	Enable	Inhibit	-
	23	Enable SCA24 (SN24)	Enable	Inhibit	-
	24	Enable SCA25 (SN25)	Enable	Inhibit	-
	25	Enable SCA26 (SN26)	Enable	Inhibit	-
	26	Enable SCA27 (SN27)	Enable	Inhibit	-
	27	Enable SCA28 (SN28)	Enable	Inhibit	-
	28	Enable SCA29 (SN29)	Enable	Inhibit	-
	29	Enable SCA30 (SN30)	Enable	Inhibit	-

**Dependency:** Refer to: p9501

Refer to: F01686

**Note:** The "Safe Cam" function (SCA) can either be enabled using p9501 or p9503.

SCA: Safe Cam / SN: Safe software cam

<b>p9505</b>	<b>SI Motion SP modulo value (Control Unit) / SI mtn SP mod CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0 [°]	737280 [°]	0 [°]

**Description:** Sets the modulo value in degrees for rotary axes of the "Safe position" function.

This modulo value is taken into account when safely referencing as well as when transferring the safe position via PROFIsafe when the absolute position is enabled.

The value should be set, so that it is precisely at  $2^n$  revolutions, so that when the range that can be represented (+/- 2048) overflows, this does not cause the position actual value to jump.

The modulo function is deactivated for a value = 0.

## 2 Parameters

### 2.2 List of parameters

<b>Dependency:</b>	Refer to: p9501 Refer to: F01681
<b>Notice:</b>	When the "SLP" function is activated, the modulo function must be deactivated as otherwise fault F01681 will be output. If the absolute position is not enabled, then the parameterized modulo value is not taken into account.
<b>Note:</b>	SLP: Safely Limited Position SP: Safe Position

---

<b>p9506</b>	<b>SI Motion function specification (Control Unit) / SI Mtn fct_spc CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	0
<b>Description:</b>	Sets the function specification for the safe motion monitoring.		
<b>Value:</b>	0: Safety with encoder and accel_monitoring(SAM) / delay time 1: Safety without encoder with braking ramp (SBR) 2: Safety with encoder with braking ramp (SBR) 3: Safety without encoder with accel_monitoring(SAM) / delay time		
<b>Dependency:</b>	Refer to: C01711		

---

<b>p9507</b>	<b>SI Motion function specification (Control Unit) / SI Mtn config CU</b>				
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 bin		
<b>Description:</b>	Sets the function configuration for the safe motion monitoring functions.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Extended message acknowledgment	Yes	No	-
	01	Setpoint velocity limit for STOP F	No	Yes	-
	02	Actual value sensing sensorless motor type	Synchronous motor	Induction motor	-
	03	SS1 with OFF3 (brake response)	SS1E external stop	SS1 with OFF3	-
	05	Actual value sensing sensorless edge modulation	Yes	No	-
	06	Configuration test stop motion monitoring functions	Test automatic	Test manual	-
<b>Dependency:</b>	Refer to: C01711				
<b>Note:</b>	For bit 00: When the function is activated, a safety-relevant acknowledgment (internal event acknowledge) can be performed by selecting/deselecting STO. For bit 01: When the function is activated, the active setpoint velocity limit (CO: r9733) is set to zero when STOP F is active. For bit 02: This bit defines the type of motor, which the sensorless actual value sensing evaluates. For bit = 0, the actual velocity is calculated for an induction motor. For bit = 1, the actual velocity is calculated for a synchronous motor. This value depends on the setting in p0300. Bit = 0 should be set if no motor is defined (p0300 = 0). For bit 03: When the bit is activated – when selecting function SS1 or activating a STOP B – an SS1E or a STOP B with Stop, which should be externally initiated, is triggered instead of SS1 with a drive-based braking response. As a consequence, brake monitoring (SBR, SAM) is deactivated. SS1E: Safe Stop 1 external (Safe Stop 1 with external stop)				

For bit 05:

This bit defines the type of modulation, which the sensorless actual value sensing evaluates.

For bit = 0, the actual velocity is calculated for space vector modulation.

For bit = 1, the actual velocity is calculated for edge modulation. This value depends on the setting in p1802.

For bit 06:

For the automatic test stop, the test stop can still be initiated via binector input p9705.

The automatic test stop is executed after power up, partial power up or a warm restart.

**p9509****SI Motion behavior during pulse suppression (Control Unit) / SI Mtn behav IL CU**

VECTOR\_G

**Can be changed:** C2(95)**Calculated:** -**Access level:** 3**Data type:** Unsigned32**Dyn. index:** -**Func. diagram:** -**P-Group:** Safety Integrated**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

0000 0000 1111 1111 bin

**Description:**

Sets the behavior of safety functions and their feedback during pulse suppression in encoderless operation.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	SSM during pulse suppression and sensorless	Becomes inactive	Remains active	-
08	SDI during pulse suppression and sensorless	Becomes inactive	Remains active	-

**Dependency:**

Refer to: C01711

**Notice:**

For bit 00:

If the OFF1 or the OFF3 ramp-down time is too low, or there is an insufficient clearance between the SSM limit speed, and the shutdown speed, then it is possible that the "speed under limit value" signal does not change to 1, because no speed actual value below the SSM limit was able to be identified before pulse cancellation. In this case, the OFF1 or the OFF3 ramp-down time or the clearance between the SSM limit speed and shutdown speed must be increased.

**Note:**

SDI: Safe Direction (safe motion direction)

SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)

For bit 00:

For bit = 1 and with the SSM safety function activated, the following applies:

- During pulse suppression, monitoring is switched off and the feedback signal has a 0 signal level.

For bit = 0 and with the SSM safety function activated, the following applies:

- Monitoring continues during pulse suppression. The feedback signal last displayed before pulse suppression is kept and the system goes into the STO state.

For bit 08:

For bit = 1 and with the SDI safety function activated, the following applies:

- During pulse suppression, monitoring is switched off and the status signal indicates inactive.

For bit = 0 and with the SDI safety function activated, the following applies:

- Monitoring continues during pulse suppression. The status signal indicates active and the system goes into the STO state.

**p9510****SI Motion clock-cycle synchronous PROFIBUS master / SI Mtn sync master**

VECTOR\_G

**Can be changed:** C2(95)**Calculated:** -**Access level:** 4**Data type:** Integer16**Dyn. index:** -**Func. diagram:** -**P-Group:** Safety Integrated**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0

1

0

**Description:**

Setting for clock cycle synchronous communication between PROFIdrive controller and Control Unit.

The parameter is only relevant, if the safety-relevant motion monitoring functions integrated in the drive have been enabled (p9601.2 =1).

If a PROFIdrive controller exchanges process data in clock cycle synchronism with the Control Unit, then p9510 must be set to 1. This also applies if the drive itself does not exchange process data in clock cycle synchronism.

## 2 Parameters

### 2.2 List of parameters

Examples for clock cycle synchronous communication:

- clock-cycle synchronous control for the motion control (e.g. SIMOTION).
- clock-cycle synchronous PROFIsafe master (e.g. SIMATIC S7-400F).

**Value:** 0: Communication not isochronous  
1: Communication isochronous

**Dependency:** Refer to: C01711, A01796

**Notice:** As of firmware version 2.6, the parameter has no effect.

---

<b>p9511</b>	<b>SI Motion actual value sensing cycle clock (Control Unit) / SI Mtn act clk CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00000 [ms]	25.00000 [ms]	0.00000 [ms]
<b>Description:</b>	<p>Sets the clock cycle time of the actual value sensing for safe motion monitoring. Setting criteria if the motion monitoring functions are executed with an encoder.</p> <ul style="list-style-type: none"> <li>- a slower clock cycle time reduces the maximum permissible velocity - however, it ensures a lower load of the Control Unit for safe actual value sensing.</li> <li>- the maximum permissible velocity which, when exceeded, can mean that errors occur during safe actual value sensing, is displayed in r9730.</li> <li>- the isochronous PROFIBUS clock cycle is used as a clock cycle time for actual value sensing with a setting of 0 ms; the setting is 1 ms if isochronous operation is not being used.</li> </ul> <p>Setting criteria if the motion monitoring functions are executed without an encoder:</p> <ul style="list-style-type: none"> <li>- the actual value sensing clock cycle must be set to the same value as the current controller clock cycle (p0115).</li> </ul> <p>For SINAMICS S120M, the following applies: Only setting p9511 = 0 or 2 ms is possible (a value of 0 is internally assumed to be 2).</p>		
<b>Dependency:</b>	Refer to: p0115 Refer to: F01652		
<b>Note:</b>	<p>The parameter is only active for drive-based motion monitoring functions (p9601.2 = 1). The monitoring clock cycle from p9500 must be an integer multiple of this parameter. In the case of motion monitoring functions with encoder, the clock cycle time for actual value sensing must be an integer multiple of the current controller clock cycle and at least 4 times slower than the current controller clock cycle. A factor of at least 8 is recommended. The clock cycle time of the actual value sensing should not be set to more than 8 ms. A change only becomes effective after a POWER ON.</p>		

---

<b>p9512</b>	<b>Select SI Motion safety functions without selection (CU) / SI Mtn w/o sel CU</b>				
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 0001 0000 bin		
<b>Description:</b>	<p>Sets the safety functions without selection. The safety functions without selection are enabled with p9601.5/p9801.5. Using this parameter, the individual motion monitoring functions can then be selected (e.g. SLS, SDI positive, SDI negative), which should then be permanently selected.</p>				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	04	SLS static (CU)	Static selected	Static deselected	-
	12	SDI positive static (CU)	Static selected	Static deselected	-
	13	SDI negative static (CU)	Static selected	Static deselected	-
<b>Dependency:</b>	Refer to: p9601, p9801 Refer to: F01682				

**Note:** A change becomes immediately effective after exiting the safety commissioning mode.  
SDI: Safe Direction (safe motion direction)  
SLS: Safely Limited Speed

<b>p9513</b>		<b>SI Motion non safety-relevant measuring steps POS1 (CU) / nsrPOS1</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	4294967295	22000	
<b>Description:</b>	Sets the non safety-relevant measuring steps of position value POS1. The encoder that is used for the safe motion monitoring functions on the Control Unit must be parameterized in this parameter.			
<b>Dependency:</b>	Refer to: p0416, r0473, p9313 Refer to: F01670			
<b>Note:</b>	For safe functions that are not enabled (p9501 = 0), the following applies: - p9513 is automatically set the same as r0416 when the system boots. For safety functions that are enabled (p9501 > 0), the following applies: - p9513 is checked to see that it matches r0416.			

<b>p9514</b>		<b>SI Motion absolute encoder linear measuring steps (CU) / EncLinMeasStep CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0 [nm]	4294967295 [nm]	100 [nm]	
<b>Description:</b>	Sets the resolution of the absolute position for a linear absolute encoder. The encoder that is used for the safe motion monitoring functions on the Control Unit must be parameterized in this parameter.			
<b>Dependency:</b>	Refer to: p0422, r0469, p9314			
<b>Note:</b>	For safe functions that are not enabled (p9501 = 0), the following applies: - p9514 is automatically set the same as r0422 when the system boots. For safety functions that are enabled (p9501 > 0), the following applies: - p9514 is checked to see that it matches r0422.			

<b>p9515</b>		<b>SI Motion encoder coarse position value config (Control Unit) / SI Mtn s config CU</b>			
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	0000 0000 0000 0000 0000 0000 0000 0000 bin		
<b>Description:</b>	Sets the encoder configuration for the redundant coarse position value. The encoder that is used for the safe motion monitoring functions on the Control Unit must be parameterized in this parameter.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Incrementer	Yes	No	-
	01	Encoder CRC least significant byte first	Yes	No	-
	02	Redundant coarse position val. most significant bit left-aligned	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

04	Binary comparison not possible	Yes	No	-
05	Single-channel encoder	Yes	No	-
16	DRIVE-CLiQ encoder	Yes	No	-
17	EnDat 2.2 converter	Yes	No	-

**Dependency:**

Refer to: r0474, p9315

**Note:**

- after starting the copy function (p9700 = 57 hex), p9515.0...5 are set the same as r0474.  
 For safe functions that are not enabled (p9501 = 0), the following applies:  
 - when the system boots, p9515.16 is automatically set the same as p0404.10, p9515.17 the same as p0404.8 & 11.  
 For safety functions that are enabled (p9501 > 0), the following applies:  
 - p9515.16 is checked to identify whether it coincides with p0404.10, p9515.17 with p0404.8 & 11

---

#### p9516 SI Motion encoder configuration safety functions (Control Unit) / SI Mtn enc\_cfg CU

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 bin

**Description:**

Sets the configuration for the motor encoder and position actual value.  
 The encoder that is used for the safe motion monitoring functions on the Control Unit must be parameterized in this parameter.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Motor encoder rotating/linear	Linear	Rotating	-
01	Position actual value sign change	Yes	No	-
04	No STOP A after encoder fault for 1 encoder safety	Yes	No	-

**Dependency:**

Refer to: p0404, p0410  
 Refer to: F01671

**Note:**

For safe functions that are not enabled (p9501 = 0), the following applies:  
 - p9516.0 is automatically set the same as p0404.0 when the system boots.  
 - p9516.1 is automatically set the same as p0410.1 when the system boots.  
 For safety functions that are enabled (p9501 > 0), the following applies:  
 - p9516.0 is checked to identify whether it coincides with p0404.0.

---

#### p9517 SI Motion linear encoder grid division (Control Unit) / SI Mtn grid CU

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [nm]	250000000.00 [nm]	10000.00 [nm]

**Description:**

Sets the grid division for a linear encoder.  
 The encoder that is used for the safe motion monitoring functions on the Control Unit must be parameterized in this parameter.

**Dependency:**

Refer to: p0407, p9516  
 Refer to: F01671

**Note:**

For safety functions that have not been enabled (p9501 = 0), the following applies: When booting p9517 is automatically set the same as p0407.  
 For safety functions that are enabled (p9501 > 0), the following applies: p9517 is checked whether it coincides with p0407.

<b>p9518</b>	<b>SI Motion encoder pulses per revolution (Control Unit) / SI Mtn puls/rev CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	16777215	2048
<b>Description:</b>	Sets the number of encoder pulses per revolution for rotary encoders. The encoder that is used for the safe motion monitoring functions on the Control Unit must be parameterized in this parameter.		
<b>Dependency:</b>	Refer to: p0408, p9516 Refer to: F01671		
<b>Note:</b>	For safety functions that have not been enabled (p9501 = 0), the following applies: When booting, p9518 is automatically set the same as p0408. For safety functions that are enabled (p9501 > 0), the following applies: p9518 is checked whether it coincides with p0408.		
<b>p9519</b>	<b>SI Motion fine resolution G1_XIST1 (Control Unit) / SI Mtn G1_XIST1 CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	2	18	11
<b>Description:</b>	Sets the fine resolution for G1_XIST1 in bits. The encoder that is used for the safe motion monitoring functions on the Control Unit must be parameterized in this parameter.		
<b>Dependency:</b>	Refer to: p0418 Refer to: F01671		
<b>Note:</b>	For safety functions that have not been enabled (p9501 = 0), the following applies: When booting, p9519 is automatically set the same as p0418. For safety functions that are enabled (p9501 > 0), the following applies: p9519 is checked whether it coincides with p0418. G1_XIST1: Encoder 1 position actual value 1 (PROFIdrive)		
<b>p9520</b>	<b>SI Motion spindle pitch (Control Unit) / SI Mtn Sp_pitch CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.1000 [mm]	8388.0000 [mm]	10.0000 [mm]
<b>Description:</b>	Sets the gear ratio between the encoder and load in mm/revolution for a linear axis with rotary encoder.		
<b>Notice:</b>	The fourth decimal point can be rounded-off depending on the size of the entered number (from 3 places before the decimal point).		

<b>p9521[0...7]</b>	<b>SI Motion gearbox enc (motor)/load denominator (Control Unit) / SI Mtn gear den CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	2147000000	1
<b>Description:</b>	Sets the denominator for the gearbox between the encoder (or motor in the case of encoderless monitoring functions) and the load. The active gearbox stage can be switched over via PROFIsafe.		
<b>Index:</b>	[0] = Gearbox 1 [1] = Gearbox 2 [2] = Gearbox 3 [3] = Gearbox 4 [4] = Gearbox 5 [5] = Gearbox 6 [6] = Gearbox 7 [7] = Gearbox 8		
<b>Dependency:</b>	Refer to: p9522		

<b>p9522[0...7]</b>	<b>SI Motion gearbox encoder (motor)/load numerator (Control Unit) / SI Mtn gear num CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	2147000000	1
<b>Description:</b>	Sets the numerator for the gearbox between the encoder (or motor in the case of encoderless monitoring functions) and the load. The active gearbox stage can be switched over via PROFIsafe.		
<b>Index:</b>	[0] = Gearbox 1 [1] = Gearbox 2 [2] = Gearbox 3 [3] = Gearbox 4 [4] = Gearbox 5 [5] = Gearbox 6 [6] = Gearbox 7 [7] = Gearbox 8		
<b>Dependency:</b>	Refer to: p9521		
<b>Note:</b>	In the case of encoderless monitoring functions, the pole pair number must be multiplied by the numerator of the gearbox ratio. Example: Gearbox ratio 1:4, pole pair number (r0313) = 2 --> p9521 = 1, p9522 = 8 (4 x 2)		

<b>p9523</b>	<b>SI Motion redundant coarse pos. value valid bits (Control Unit) / Valid bits CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	16	9
<b>Description:</b>	Sets the number of valid bits of the redundant coarse position value. The encoder that is used for the safe motion monitoring functions on the Control Unit must be parameterized in this parameter.		
<b>Dependency:</b>	Refer to: r0470, p9323		

**Note:** - after starting the copy function (p9700 = 57 hex), p9523 is set the same as r0470.

---

<b>p9524</b>	<b>SI Motion Redundant coarse pos. value fine resolution bits (CU) / SI Mtn fine bit CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-16	16	-2
<b>Description:</b>	Sets the number of valid bits for the fine resolution of the redundant coarse position value. The encoder that is used for the safe motion monitoring functions on the Control Unit must be parameterized in this parameter.		
<b>Dependency:</b>	Refer to: r0471, p9324		
<b>Note:</b>	- after starting the copy function (p9700 = 57 hex), p9524 is set the same as r0471.		

---

<b>p9525</b>	<b>SI Motion Redundant coarse pos. value relevant bits (CU) / Relevant bits CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	16	16
<b>Description:</b>	Sets the number of relevant bits for the redundant coarse position value. The encoder that is used for the safe motion monitoring functions on the Control Unit must be parameterized in this parameter.		
<b>Dependency:</b>	Refer to: p0414, r0472, p9325		
<b>Note:</b>	For safe functions that are not enabled (p9501 = 0), the following applies: - p9525 is automatically set the same as r0472 when the system boots. For safety functions that are enabled (p9501 > 0), the following applies: - p9525 is checked to see that it matches r0472.		

---

<b>p9526</b>	<b>SI Motion encoder assignment second channel / SI Mtn enc chan 2</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	3	1
<b>Description:</b>	Sets the number of the encoder that the second channel (control, Motor Module) uses for safe motion monitoring functions.		
<b>Dependency:</b>	For the safe motion monitoring functions, the redundant safety position actual value sensing must be activated in the appropriate encoder data set (p0430.19 = 1). Refer to: p0187, p0188, p0189, p0430		
<b>Note:</b>	For p9526 = 1, the encoder for the closed-loop speed control is used for the second channel of the motion monitoring functions (1-encoder system). A change only becomes effective after a POWER ON.		

<b>p9529</b>		<b>SI Motion Gx_XIST1 coarse pos. safe most significant bit (CU) / Gx_XIST1 MSB CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	31	14	
<b>Description:</b>	Sets the bit number for the safe most significant bit (MSB) of the Gx_XIST1 coarse position. The encoder that is used for the safe motion monitoring functions on the Control Unit must be parameterized in this parameter.			
<b>Dependency:</b>	Refer to: p0415, r0475, p9329			
<b>Note:</b>	For safe functions that are not enabled (p9501 = 0), the following applies: - p9529 is automatically set the same as r0475 when the system boots. For safety functions that are enabled (p9501 > 0), the following applies: - p9529 is checked to see that it matches r0475. MSB: Most Significant Bit			

<b>p9530</b>		<b>SI Motion standstill tolerance (Control Unit) / SI Mtn standst_tol</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.000 [mm]	100.000 [mm]	1.000 [mm]	
<b>Description:</b>	Sets the tolerance for the function "Safe Operating Stop" (SOS).			
<b>Dependency:</b>	Refer to: C01707			
<b>Note:</b>	SOS: Safe Operating Stop / SBH: Safe operating stop			

<b>p9530</b>		<b>SI Motion standstill tolerance (Control Unit) / SI Mtn standst_tol</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.000 [°]	100.000 [°]	1.000 [°]	
<b>Description:</b>	Sets the tolerance for the function "Safe Operating Stop" (SOS).			
<b>Dependency:</b>	Refer to: C01707			
<b>Note:</b>	SOS: Safe Operating Stop / SBH: Safe operating stop			

<b>p9531[0...3]</b>		<b>SI Motion SLS (SG) limit values (Control Unit) / SI Mtn SLS lim CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.00 [mm/min]	1000000.00 [mm/min]	2000.00 [mm/min]	
<b>Description:</b>	Sets the limit values for the function "Safely Limited Speed" (SLS).			
<b>Index:</b>	[0] = Limit value SLS1 [1] = Limit value SLS2 [2] = Limit value SLS3 [3] = Limit value SLS4			
<b>Dependency:</b>	Refer to: p9532, p9561, p9563 Refer to: C01714			

**Note:** SLS: Safely Limited Speed / SG: Safely reduced speed

---

<b>p9531[0...3]</b>	<b>SI Motion SLS (SG) limit values (Control Unit) / SI Mtn SLS lim CU</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	1000000.00 [rpm]	2000.00 [rpm]
<b>Description:</b>	Sets the limit values for the function "Safely Limited Speed" (SLS).		
<b>Index:</b>	[0] = Limit value SLS1 [1] = Limit value SLS2 [2] = Limit value SLS3 [3] = Limit value SLS4		
<b>Dependency:</b>	Refer to: p9532, p9561, p9563 Refer to: C01714		
<b>Note:</b>	SLS: Safely Limited Speed / SG: Safely reduced speed		

---

<b>p9532[0...15]</b>	<b>SI Motion SLS (SG) override factor (Control Unit) / SI Mtn SLS over CU</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [%]	100.000 [%]	100.000 [%]
<b>Description:</b>	Sets the override factor for the limit value for SLS2 and SLS4 for the function "Safely Limited Speed" (SLS).		
<b>Index:</b>	[0] = SLS (SG) override factor 0 [1] = SLS (SG) override factor 1 [2] = SLS (SG) override factor 2 [3] = SLS (SG) override factor 3 [4] = SLS (SG) override factor 4 [5] = SLS (SG) override factor 5 [6] = SLS (SG) override factor 6 [7] = SLS (SG) override factor 7 [8] = SLS (SG) override factor 8 [9] = SLS (SG) override factor 9 [10] = SLS (SG) override factor 10 [11] = SLS (SG) override factor 11 [12] = SLS (SG) override factor 12 [13] = SLS (SG) override factor 13 [14] = SLS (SG) override factor 14 [15] = SLS (SG) override factor 15		
<b>Dependency:</b>	Refer to: p9501, p9531		
<b>Note:</b>	The actual override factor for SLS2 and SLS4 is selected using the safety-relevant inputs (SGE). SLS: Safely Limited Speed / SG: Safely reduced speed		

---

<b>p9533</b>	<b>SI Motion SLS setpoint velocity limiting (Control Unit) / SI Mtn SLS set_lim</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.000 [%]	100.000 [%]	80.000 [%]
<b>Description:</b>	This is an evaluation factor to define the setpoint limit from the selected actual speed limit. The active SLS limit value is evaluated with this factor and is made available as setpoint limit in r9733.		

## 2 Parameters

### 2.2 List of parameters

**Dependency:** This parameter only has to be parameterized for the motion monitoring functions integrated in the drive (p9601.2 = 1)  
 $r9733[0] = p9531[x] \times p9533$  (converted from the load side to the motor side)  
 $r9733[1] = - p9531[x] \times p9533$  (converted from the load side to the motor side)  
[x] = Selected SLS stage  
Conversion factor from the motor side to the load side:  
- motor type = rotary and axis type = linear:  $p9522 / (p9521 \times p9520)$   
- otherwise:  $p9522 / p9521$   
Refer to: p9501, p9531, p9601

**Note:** The active actual speed limit is selected via safety-relevant inputs (SGE).  
When selecting SOS or a STOP A ... D, setpoint 0 is specified in r9733.  
SLS: Safely Limited Speed

---

**p9534[0...1] SI Motion SLP (SE) upper limit values (Control Unit) / SI Mtn SLP up lim**

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2822
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147000.000 [mm]	2147000.000 [mm]	100000.000 [mm]

**Description:** Sets the upper limit for the function "Safely Limited Position" (SLP).  
**Index:** [0] = Limit value SLP1 (SE1)  
[1] = Limit value SLP2 (SE2)  
**Dependency:** Refer to: p9501, p9535, p9562  
Refer to: C01715  
**Note:** The following applies to the setting of these limits:  
-  $p9534[x] > p9535[x]$   
-  $p9534[x]$  must lie in the valid traversing range (-737280 ... 737280).  
SLP: Safely Limited Position / SE: Safe software limit switches

---

**p9534[0...1] SI Motion SLP (SE) upper limit values (Control Unit) / SI Mtn SLP up lim**

VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2822
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147000.000 [°]	2147000.000 [°]	100000.000 [°]

**Description:** Sets the upper limit for the function "Safely Limited Position" (SLP).  
**Index:** [0] = Limit value SLP1 (SE1)  
[1] = Limit value SLP2 (SE2)  
**Dependency:** Refer to: p9501, p9535, p9562  
Refer to: C01715  
**Note:** The following applies to the setting of these limits:  
-  $p9534[x] > p9535[x]$   
-  $p9534[x]$  must lie in the valid traversing range (-737280 ... 737280).  
SLP: Safely Limited Position / SE: Safe software limit switches

<b>p9535[0...1]</b>	<b>SI Motion SLP (SE) lower limit values (Control Unit) / SI Mtn SLP low lim</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2822
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147000.000 [mm]	2147000.000 [mm]	-100000.000 [mm]
<b>Description:</b>	Sets the lower limit for the function "Safely Limited Position" (SLP).		
<b>Index:</b>	[0] = Limit value SLP1 (SE1) [1] = Limit value SLP2 (SE2)		
<b>Dependency:</b>	Refer to: p9501, p9534, p9562 Refer to: C01715		
<b>Note:</b>	The following applies to the setting of these limits: - p9534[x] > p9535[x] - p9535[x] must lie in the valid traversing range (-737280 ... 737280). SLP: Safely Limited Position / SE: Safe software limit switches		
<b>p9535[0...1]</b>	<b>SI Motion SLP (SE) lower limit values (Control Unit) / SI Mtn SLP low lim</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2822
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147000.000 [°]	2147000.000 [°]	-100000.000 [°]
<b>Description:</b>	Sets the lower limit for the function "Safely Limited Position" (SLP).		
<b>Index:</b>	[0] = Limit value SLP1 (SE1) [1] = Limit value SLP2 (SE2)		
<b>Dependency:</b>	Refer to: p9501, p9534, p9562 Refer to: C01715		
<b>Note:</b>	The following applies to the setting of these limits: - p9534[x] > p9535[x] - p9535[x] must lie in the valid traversing range (-737280 ... 737280). SLP: Safely Limited Position / SE: Safe software limit switches		
<b>p9536[0...29]</b>	<b>SI Motion SCA (SN) plus cam position (Control Unit) / SI Mtn SCA+</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147000.000 [mm]	2147000.000 [mm]	10.000 [mm]
<b>Description:</b>	Sets the plus cam position for the function "Safe Cam" (SCA).		
<b>Index:</b>	[0] = Cam position SCA1 (SN1) [1] = Cam position SCA2 (SN2) [2] = Cam position SCA3 (SN3) [3] = Cam position SCA4 (SN4) [4] = Cam position SCA5 (SN5) [5] = Cam position SCA6 (SN6) [6] = Cam position SCA7 (SN7) [7] = Cam position SCA8 (SN8) [8] = Cam position SCA9 (SN9) [9] = Cam position SCA10 (SN10) [10] = Cam position SCA11 (SN11) [11] = Cam position SCA12 (SN12) [12] = Cam position SCA13 (SN13)		

## 2 Parameters

### 2.2 List of parameters

[13] = Cam position SCA14 (SN14)  
 [14] = Cam position SCA15 (SN15)  
 [15] = Cam position SCA16 (SN16)  
 [16] = Cam position SCA17 (SN17)  
 [17] = Cam position SCA18 (SN18)  
 [18] = Cam position SCA19 (SN19)  
 [19] = Cam position SCA20 (SN20)  
 [20] = Cam position SCA21 (SN21)  
 [21] = Cam position SCA22 (SN22)  
 [22] = Cam position SCA23 (SN23)  
 [23] = Cam position SCA24 (SN24)  
 [24] = Cam position SCA25 (SN25)  
 [25] = Cam position SCA26 (SN26)  
 [26] = Cam position SCA27 (SN27)  
 [27] = Cam position SCA28 (SN28)  
 [28] = Cam position SCA29 (SN29)  
 [29] = Cam position SCA30 (SN30)

**Dependency:**

Refer to: p9501, p9503, p9537

**Note:**

A change only becomes effective after a POWER ON.  
 SCA: Safe Cam / SN: Safe software cam

#### p9536[0...29]

#### SI Motion SCA (SN) plus cam position (Control Unit) / SI Mtn SCA+

VECTOR\_G (Safety rot)

**Can be changed:** U, T

**Calculated:** -

**Access level:** 4

**Data type:** FloatingPoint32

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** Safety Integrated

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-2147000.000 [°]

2147000.000 [°]

10.000 [°]

**Description:**

Sets the plus cam position for the function "Safe Cam" (SCA).

**Index:**

[0] = Cam position SCA1 (SN1)  
 [1] = Cam position SCA2 (SN2)  
 [2] = Cam position SCA3 (SN3)  
 [3] = Cam position SCA4 (SN4)  
 [4] = Cam position SCA5 (SN5)  
 [5] = Cam position SCA6 (SN6)  
 [6] = Cam position SCA7 (SN7)  
 [7] = Cam position SCA8 (SN8)  
 [8] = Cam position SCA9 (SN9)  
 [9] = Cam position SCA10 (SN10)  
 [10] = Cam position SCA11 (SN11)  
 [11] = Cam position SCA12 (SN12)  
 [12] = Cam position SCA13 (SN13)  
 [13] = Cam position SCA14 (SN14)  
 [14] = Cam position SCA15 (SN15)  
 [15] = Cam position SCA16 (SN16)  
 [16] = Cam position SCA17 (SN17)  
 [17] = Cam position SCA18 (SN18)  
 [18] = Cam position SCA19 (SN19)  
 [19] = Cam position SCA20 (SN20)  
 [20] = Cam position SCA21 (SN21)  
 [21] = Cam position SCA22 (SN22)  
 [22] = Cam position SCA23 (SN23)  
 [23] = Cam position SCA24 (SN24)  
 [24] = Cam position SCA25 (SN25)  
 [25] = Cam position SCA26 (SN26)  
 [26] = Cam position SCA27 (SN27)  
 [27] = Cam position SCA28 (SN28)  
 [28] = Cam position SCA29 (SN29)  
 [29] = Cam position SCA30 (SN30)

**Dependency:**

Refer to: p9501, p9503, p9537

**Note:**

A change only becomes effective after a POWER ON.  
 SCA: Safe Cam / SN: Safe software cam

<b>p9537[0...29] SI Motion SCA (SN) plus cam position (Control Unit) / SI Mtn SCA-</b>			
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147000.000 [mm]	2147000.000 [mm]	-10.000 [mm]
<b>Description:</b>	Sets the minus cam position for the function "Safe Cam" (SCA).		
<b>Index:</b>	[0] = Cam position SCA1 (SN1) [1] = Cam position SCA2 (SN2) [2] = Cam position SCA3 (SN3) [3] = Cam position SCA4 (SN4) [4] = Cam position SCA5 (SN5) [5] = Cam position SCA6 (SN6) [6] = Cam position SCA7 (SN7) [7] = Cam position SCA8 (SN8) [8] = Cam position SCA9 (SN9) [9] = Cam position SCA10 (SN10) [10] = Cam position SCA11 (SN11) [11] = Cam position SCA12 (SN12) [12] = Cam position SCA13 (SN13) [13] = Cam position SCA14 (SN14) [14] = Cam position SCA15 (SN15) [15] = Cam position SCA16 (SN16) [16] = Cam position SCA17 (SN17) [17] = Cam position SCA18 (SN18) [18] = Cam position SCA19 (SN19) [19] = Cam position SCA20 (SN20) [20] = Cam position SCA21 (SN21) [21] = Cam position SCA22 (SN22) [22] = Cam position SCA23 (SN23) [23] = Cam position SCA24 (SN24) [24] = Cam position SCA25 (SN25) [25] = Cam position SCA26 (SN26) [26] = Cam position SCA27 (SN27) [27] = Cam position SCA28 (SN28) [28] = Cam position SCA29 (SN29) [29] = Cam position SCA30 (SN30)		
<b>Dependency:</b>	Refer to: p9501, p9503, p9536		
<b>Note:</b>	A change only becomes effective after a POWER ON. SCA: Safe Cam / SN: Safe software cam		

<b>p9537[0...29] SI Motion SCA (SN) plus cam position (Control Unit) / SI Mtn SCA-</b>			
VECTOR_G (Safety rot)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-2147000.000 [°]	2147000.000 [°]	-10.000 [°]
<b>Description:</b>	Sets the minus cam position for the function "Safe Cam" (SCA).		
<b>Index:</b>	[0] = Cam position SCA1 (SN1) [1] = Cam position SCA2 (SN2) [2] = Cam position SCA3 (SN3) [3] = Cam position SCA4 (SN4) [4] = Cam position SCA5 (SN5) [5] = Cam position SCA6 (SN6) [6] = Cam position SCA7 (SN7) [7] = Cam position SCA8 (SN8) [8] = Cam position SCA9 (SN9)		

## 2 Parameters

---

### 2.2 List of parameters

[9] = Cam position SCA10 (SN10)  
[10] = Cam position SCA11 (SN11)  
[11] = Cam position SCA12 (SN12)  
[12] = Cam position SCA13 (SN13)  
[13] = Cam position SCA14 (SN14)  
[14] = Cam position SCA15 (SN15)  
[15] = Cam position SCA16 (SN16)  
[16] = Cam position SCA17 (SN17)  
[17] = Cam position SCA18 (SN18)  
[18] = Cam position SCA19 (SN19)  
[19] = Cam position SCA20 (SN20)  
[20] = Cam position SCA21 (SN21)  
[21] = Cam position SCA22 (SN22)  
[22] = Cam position SCA23 (SN23)  
[23] = Cam position SCA24 (SN24)  
[24] = Cam position SCA25 (SN25)  
[25] = Cam position SCA26 (SN26)  
[26] = Cam position SCA27 (SN27)  
[27] = Cam position SCA28 (SN28)  
[28] = Cam position SCA29 (SN29)  
[29] = Cam position SCA30 (SN30)

**Dependency:**

Refer to: p9501, p9503, p9536

**Note:**

A change only becomes effective after a POWER ON.

SCA: Safe Cam / SN: Safe software cam

**p9538[0...29] SI Motion SCA (SN) cam track assignment (Control Unit) / SI Mtn SCA assign.**

VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	100	414	[0] 100
			[1] 101
			[2] 102
			[3] 103
			[4] 104
			[5] 105
			[6] 106
			[7] 107
			[8] 108
			[9] 109
			[10] 110
			[11] 111
			[12] 112
			[13] 113
			[14] 114
			[15] 200
			[16] 201
			[17] 202
			[18] 203
			[19] 204
			[20] 205
			[21] 206
			[22] 207
			[23] 208
			[24] 209
			[25] 210
			[26] 211
			[27] 212
			[28] 213
			[29] 214

**Description:** Assigns the individual cams to the maximum of 4 cam tracks and defines the numerical value for the SGA "cam range".

p9538[0...29] = CBA dec

C = Assignment of the cam to the cam track.

Valid values are 1, 2, 3, 4.

BA = Numerical value for the SGA "cam range".

If the position lies in the range of this cam, the value BA is signaled to the safety-relevant logic via the SGA "cam range" of the cam track set using C.

Valid values are 0 ... 14. Each numerical value may only be used once for each cam track.

Examples:

p9538[0] = 207

Cam 1 (index 0) is assigned cam track 2. If the position lies within the range of this cam, a value of 7 is entered in the SGA "cam range" of the second cam track.

p9538[5] = 100

Cam 6 (index 5) is assigned cam track 1. If the position lies within the range of this cam, a value of 0 is entered in the SGA "cam range" of the first cam track.

## 2 Parameters

### 2.2 List of parameters

<b>Index:</b>	[0] = Track assignment SCA1 [1] = Track assignment SCA2 [2] = Track assignment SCA3 [3] = Track assignment SCA4 [4] = Track assignment SCA5 [5] = Track assignment SCA6 [6] = Track assignment SCA7 [7] = Track assignment SCA8 [8] = Track assignment SCA9 [9] = Track assignment SCA10 [10] = Track assignment SCA11 [11] = Track assignment SCA12 [12] = Track assignment SCA13 [13] = Track assignment SCA14 [14] = Track assignment SCA15 [15] = Track assignment SCA16 [16] = Track assignment SCA17 [17] = Track assignment SCA18 [18] = Track assignment SCA19 [19] = Track assignment SCA20 [20] = Track assignment SCA21 [21] = Track assignment SCA22 [22] = Track assignment SCA23 [23] = Track assignment SCA24 [24] = Track assignment SCA25 [25] = Track assignment SCA26 [26] = Track assignment SCA27 [27] = Track assignment SCA28 [28] = Track assignment SCA29 [29] = Track assignment SCA30
<b>Dependency:</b>	Refer to: p9501, p9503 Refer to: F01681
<b>Note:</b>	A change only becomes effective after a POWER ON. SCA: Safe Cam / SN: Safe software cam

---

#### **p9539[0...7] SI Motion gearbox direction of rotation reversal (Control Unit) / SI Mtn grbx rev CU**

<b>VECTOR_G</b>	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0

**Description:** Sets the direction of rotation reversal for the gearbox.  
0: No direction of rotation reversal  
1: Direction of rotation reversal  
The active gearbox stage can be switched over via PROFIsafe.

<b>Index:</b>	[0] = Gearbox 1 [1] = Gearbox 2 [2] = Gearbox 3 [3] = Gearbox 4 [4] = Gearbox 5 [5] = Gearbox 6 [6] = Gearbox 7 [7] = Gearbox 8
---------------	--

**Dependency:** Refer to: p9521

---

<b>p9540</b>	<b>SI Motion SCA (SN) tolerance (Control Unit) / SI Mtn SCA tol CU</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0010 [mm]	10.0000 [mm]	0.1000 [mm]
<b>Description:</b>	Sets the tolerance for the function "Safe Cam" (SCA). Within this tolerance, both monitoring channels may signal different signal states of the same safe cam.		
<b>Note:</b>	A change only becomes effective after a POWER ON.		

---

<b>p9540</b>	<b>SI Motion SCA (SN) tolerance (Control Unit) / SI Mtn SCA tol CU</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0010 [°]	10.0000 [°]	0.1000 [°]
<b>Description:</b>	Sets the tolerance for the function "Safe Cam" (SCA). Within this tolerance, both monitoring channels may signal different signal states of the same safe cam.		
<b>Note:</b>	A change only becomes effective after a POWER ON.		

---

<b>p9541</b>	<b>SI Motion encoder comparison algorithm (CU) / Enc comp algo</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	255
<b>Description:</b>	Sets the comparison algorithm for the encoder position monitoring functions. The encoder that is used for the safe motion monitoring functions on the Control Unit must be parameterized in this parameter.		
<b>Value:</b>	0: SMx20 safety algorithm 10: DQL binary safety algorithm 11: DQL linear non-binary safety algorithm 12: SMC30 safety algorithm 255: Safety algorithm unknown		
<b>Dependency:</b>	Refer to: p0417, p9341		
<b>Note:</b>	For safe functions that are not enabled (p9501 = 0), the following applies: - p9541 is automatically set the same as r0417 when the system boots. For safety functions that are enabled (p9501 > 0), the following applies: - p9541 is checked to see that it matches r0417.		

---

<b>p9542</b>	<b>SI Motion act val comparison tol (crosswise) (Control Unit) / SI Mtn act tol CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0010 [mm]	360.0000 [mm]	0.1000 [mm]
<b>Description:</b>	Sets the tolerance for the crosswise data comparison of the actual position between the two monitoring channels. For encoderless motion monitoring functions, the tolerance must be set to a higher value (12 degrees rotary, 1 mm linear).		

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Refer to: C01711

**Note:** For a linear axis, the tolerance is internally limited to 10 mm.

For a "linear axis with rotating motor" and factory setting of p9520, p9521 and p9522, the factory setting of p9542 corresponds to a position tolerance of 36 ° on the motor side.

---

#### **p9542 SI Motion act val comparison tol (crosswise) (Control Unit) / SI Mtn act tol CU**

VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0010 [°]	360.0000 [°]	0.1000 [°]

**Description:** Sets the tolerance for the crosswise data comparison of the actual position between the two monitoring channels. For encoderless motion monitoring functions, the tolerance must be set to a higher value (12 degrees rotary, 1 mm linear).

**Dependency:** Refer to: C01711

---

#### **p9543 SI Motion gearbox switching position tolerance factor (CU) / SI Mtn grbx tol CU**

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	1000	1

**Description:** Sets the factor to increase the tolerance for the crosswise data comparison of the actual position between the two monitoring channels while the gearbox stage is being switched over.

This factor is effective when actual value synchronization is activated and when deactivated.

Depending on the following tolerance, the following is obtained:

- actual value synchronization activated: p9549 \* p9543
- actual value synchronization deactivated: p9542 \* p9543

---

#### **p9544 SI Motion actual value comparison tolerance (referencing) (CU) / SI Mtn ref tol**

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0000 [mm]	36.0000 [mm]	0.0100 [mm]

**Description:** Sets the tolerance for checking the actual values.

For an incremental encoder, the actual values are checked after referencing; for an absolute encoder, when switching on.

**Dependency:** Refer to: C01711

**Note:** A change only becomes effective after a POWER ON.

For linear axes, the maximum value is limited to 1 mm.

<b>p9544</b>	<b>SI Motion actual value comparison tolerance (referencing) (CU) / SI Mtn ref tol</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0.0000 [°]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 36.0000 [°]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.0100 [°]
<b>Description:</b>	Sets the tolerance for checking the actual values. For an incremental encoder, the actual values are checked after referencing; for an absolute encoder, when switching on.		
<b>Dependency:</b>	Refer to: C01711		
<b>Note:</b>	A change only becomes effective after a POWER ON. For linear axes, the maximum value is limited to 1 mm.		
<b>p9545</b>	<b>SI Motion SSM (SGA n &lt; nx) filter time (Control Unit) / SI Mtn SSM filt CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0.00 [ms]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 500.00 [ms]	<b>Access level:</b> 3 <b>Func. diagram:</b> 2823 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [ms]
<b>Description:</b>	Sets the filter time for the SSM feedback signal to detect standstill (n < nx).		
<b>Note:</b>	The filter time is effective only if the function is enabled (p9501.16 = 1). The parameter is included in the crosswise data comparison of the two monitoring channels. The set time is rounded internally to an integer multiple of the monitoring clock cycle. SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)		
<b>p9546</b>	<b>SI Motion SSM (SGA n &lt; nx) velocity limit (CU) / SI Mtn SSM v_limCU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0.00 [mm/min]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000000.00 [mm/min]	<b>Access level:</b> 3 <b>Func. diagram:</b> 2823 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 20.00 [mm/min]
<b>Description:</b>	Sets the velocity limit for the SSM feedback signal to detect standstill (n < nx). When this limit value is undershot, the signal "SSM feedback signal active" (SGA n < n_x) is set. For p9568 = 0, the value in p9546 is also applicable for SAM/SBR.		
<b>Caution:</b>	The following applies for p9506 = 3: The "SAM/SBR" function is deactivated if the selected threshold value is undershot.		
<b>Note:</b>	F-DO: Failsafe Digital Output / SGA: Safety-related output SAM: Safe Acceleration Monitor (safe acceleration monitoring) SBR: Safe Brake Ramp (safe brake ramp monitoring) SSM: Safe Speed Monitor (safety-related feedback signal from the velocity monitoring) / SGA n < nx: Safety-related output n < nx		

<b>p9546</b>	<b>SI Motion SSM (SGA n &lt; nx) velocity limit (CU) / SI Mtn SSM v_limCU</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2823
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	1000000.00 [rpm]	20.00 [rpm]
<b>Description:</b>	Sets the velocity limit for the SSM feedback signal to detect standstill (n < nx). When this limit value is undershot, the signal "SSM feedback signal active" (SGA n < n_x) is set. For p9568 = 0, the value in p9546 is also applicable for SAM/SBR.		
<b>Caution:</b>	The following applies for p9506 = 3: The "SAM/SBR" function is deactivated if the selected threshold value is undershot.		
			
<b>Note:</b>	F-DO: Failsafe Digital Output / SGA: Safety-related output SAM: Safe Acceleration Monitor (safe acceleration monitoring) SBR: Safe Brake Ramp (safe brake ramp monitoring) SSM: Safe Speed Monitor (safety-related feedback signal from the velocity monitoring) / SGA n < nx: Safety-related output n < nx		

<b>p9547</b>	<b>SI Motion SSM (SGA n &lt; nx) velocity hysteresis (CU) / SI Mtn SSM hyst CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2823
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0010 [mm/min]	500.0000 [mm/min]	10.0000 [mm/min]
<b>Description:</b>	Sets the velocity hysteresis for the SSM feedback signal to detect standstill (n < nx).		
<b>Dependency:</b>	Refer to: C01711		
<b>Note:</b>	The velocity hysteresis is effective only if the function is enabled (p9501.16 = 1). The parameter is included in the crosswise data comparison of the two monitoring channels. SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)		

<b>p9547</b>	<b>SI Motion SSM (SGA n &lt; nx) velocity hysteresis (CU) / SI Mtn SSM hyst CU</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2823
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.0010 [rpm]	500.0000 [rpm]	10.0000 [rpm]
<b>Description:</b>	Sets the velocity hysteresis for the SSM feedback signal to detect standstill (n < nx).		
<b>Dependency:</b>	Refer to: C01711		
<b>Note:</b>	The velocity hysteresis is effective only if the function is enabled (p9501.16 = 1). The parameter is included in the crosswise data comparison of the two monitoring channels. SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)		

---

<b>p9548</b>	<b>SI Motion SAM actual velocity tolerance (Control Unit) / SI Mtn SAM tol CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [mm/min]	120000.00 [mm/min]	300.00 [mm/min]
<b>Description:</b>	Sets the velocity tolerance for the "SAM" function.		
<b>Dependency:</b>	Refer to: C01706		
<b>Note:</b>	SAM: Safe Acceleration Monitor (safe acceleration monitoring)		

---

<b>p9548</b>	<b>SI Motion SAM actual velocity tolerance (Control Unit) / SI Mtn SAM tol CU</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	120000.00 [rpm]	300.00 [rpm]
<b>Description:</b>	Sets the velocity tolerance for the "SAM" function.		
<b>Dependency:</b>	Refer to: C01706		
<b>Note:</b>	SAM: Safe Acceleration Monitor (safe acceleration monitoring)		

---

<b>p9549</b>	<b>SI Motion slip velocity tolerance (Control Unit) / SI Mtn slip tol</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [mm/min]	6000.00 [mm/min]	6.00 [mm/min]
<b>Description:</b>	Sets the velocity tolerance that is used for a 2-encoder system in crosswise comparison between the two monitoring channels.		
<b>Dependency:</b>	Refer to: p9501, p9542		
<b>Note:</b>	If the "actual value synchronization" is not enabled (p9501.3 = 0), then the value parameterized in p9542 is used as tolerance in the crosswise data comparison.		

---

<b>p9549</b>	<b>SI Motion slip velocity tolerance (Control Unit) / SI Mtn slip tol</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	6000.00 [rpm]	6.00 [rpm]
<b>Description:</b>	Sets the velocity tolerance that is used for a 2-encoder system in crosswise comparison between the two monitoring channels.		
<b>Dependency:</b>	Refer to: p9501, p9542		
<b>Note:</b>	If the "actual value synchronization" is not enabled (p9501.3 = 0), then the value parameterized in p9542 is used as tolerance in the crosswise data comparison.		

<b>p9550</b>	<b>SI Motion SGE changeover tolerance time (Control Unit) / SI Mtn SGE chg tol</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	10000.00 [ms]	500.00 [ms]
<b>Description:</b>	Sets the tolerance time for the changeover of the safety-related inputs (SGE).		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle.		
<b>p9551</b>	<b>SI Motion SLS(SG) changeover/SOS (SBH) delay time (CU) / SI SLS/SOS t CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2819, 2820
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	600000.00 [ms]	100.00 [ms]
<b>Description:</b>	Sets the delay time for the SLS changeover and for the activation of SOS for the functions "Safely Limited Speed" (SLS) and "Safe Operating Stop" (SOS). When transitioning from a higher to a lower safely limited speed level, and when activating safe operating stop (SOS), within this delay time, the "old" speed level remains active. This delay is also applicable when activating SLS from the state "SOS and SLS inactive" and activating SOS from the state "SOS inactive".		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. SLS: Safely Limited Speed / SG: Safely reduced speed SOS: Safe Operating Stop / SBH: Safe operating stop		
<b>p9552</b>	<b>SI Motion transition time STOP C to SOS (SBH) (Control Unit) / SI Mtn t C-&gt;SOS CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2819
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	600000.00 [ms]	100.00 [ms]
<b>Description:</b>	Sets the transition time from STOP C to "Safe Operating Stop" (SOS).		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. SOS: Safe Operating Stop / SBH: Safe operating stop		
<b>p9553</b>	<b>SI Motion transition time STOP D to SOS (SBH) (Control Unit) / SI Mtn t D-&gt;SOS CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2819
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	600000.00 [ms]	100.00 [ms]
<b>Description:</b>	Sets the transition time from STOP D to "Safe Operating Stop" (SOS).		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. SOS: Safe Operating Stop / SBH: Safe operating stop		

<b>p9554</b>	<b>SI Motion transition time STOP E to SOS (SBH) (Control Unit) / SI Mtn t E-&gt;SOS CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	600000.00 [ms]	100.00 [ms]
<b>Description:</b>	Sets the transition time from STOP E to "Safe Operating Stop" (SOS).		
<b>Dependency:</b>	Refer to: p9354		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. SOS: Safe Operating Stop / SBH: Safe operating stop		
<b>p9555</b>	<b>SI Motion transition time STOP F to STOP B (Control Unit) / SI Mtn t F-&gt;B CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2819
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	600000.00 [ms]	0.00 [ms]
<b>Description:</b>	Sets the transition time from STOP F to STOP B.		
<b>Dependency:</b>	Refer to: C01711		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle.		
<b>p9556</b>	<b>SI Motion STOP A delay time (Control Unit) / SI Mtn IL t_del CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2819
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	3600000.00 [ms]	100.00 [ms]
<b>Description:</b>	Sets the delay time for STOP A after STOP B. In the case of encoderless motion monitoring functions with safe brake ramp monitoring (p9506 = 1) and the OFF3 ramp enabled at the same time (p9507.3 = 0), the parameter has no effect.		
<b>Dependency:</b>	Refer to: p9560 Refer to: C01701		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle.		
<b>p9557</b>	<b>SI Motion STO test time (Control Unit) / SI Mtn IL t_test</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	10000.00 [ms]	100.00 [ms]
<b>Description:</b>	Sets the time after which STO must be active when initiating the test stop.		
<b>Dependency:</b>	Refer to: C01798		
<b>Note:</b>	A change only becomes effective after a POWER ON. The set time is rounded internally to an integer multiple of the monitoring clock cycle.		

## 2 Parameters

### 2.2 List of parameters

<b>p9558</b>	<b>SI Motion acceptance test mode time limit (Control Unit) / SI Mtn acc t CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	5000.00 [ms]	100000.00 [ms]	40000.00 [ms]
<b>Description:</b>	Sets the maximum time for the acceptance test mode. If the acceptance test mode takes longer than the selected time limit, then the mode is automatically terminated.		
<b>Dependency:</b>	Refer to: C01799		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle.		
<b>p9559</b>	<b>SI Motion forced checking procedure timer (Control Unit) / SI Mtn dyn timer</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [h]	9000.00 [h]	8.00 [h]
<b>Description:</b>	Sets the time interval for carrying out the forced checking procedure and testing the safety motion monitoring functions integrated in the drives. Within the parameterized time, the safety functions must have been tested at least once (including de-selection of the "STO" function). This monitoring time is reset each time the test is carried out. The signal source to initiate the forced checking procedure is set in p9705.		
<b>Dependency:</b>	Refer to: p9705 Refer to: A01697, C01798		
<b>Note:</b>	STO: Safe Torque Off		
<b>p9560</b>	<b>SI Motion STO shutdown velocity (Control Unit) / SI Mtn IL v_shutCU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [mm/min]	6000.00 [mm/min]	0.00 [mm/min]
<b>Description:</b>	Sets the shutdown velocity for activating STO. Below this velocity "standstill" is assumed and for STOP B / SS1, STO is selected. In the case of encoderless motion monitoring functions, the parameter must be > 0 (recommended value: 10).		
<b>Dependency:</b>	Refer to: p9556		
<b>Note:</b>	The shutdown velocity has no effect for a value = 0. SS1: Safe Stop 1		
<b>p9560</b>	<b>SI Motion pulse suppression shutdown speed (Control Unit) / SI Mtn IL n_shutCU</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [rpm]	6000.00 [rpm]	0.00 [rpm]
<b>Description:</b>	Sets the shutdown speed for the pulse suppression. Below this speed "standstill" is assumed and for STOP B / SS1, the pulses are suppressed (by changing to STOP A).		

**Dependency:** Refer to: p9556  
**Note:** The shutdown speed has no effect for a value = 0.  
 SS1: Safe Stop 1

---

### p9561 SI Motion SLS (SG) stop response (Control Unit) / SI Mtn SLS resp

VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	14	5

**Description:** Sets the stop response for the function "Safely Limited Speed" (SLS).  
 This setting applies for all SLS limit values.  
 An input value of less than 5 signifies personnel protection, from 10 and upwards, machine protection.  
 This parameter can only be used for SINUMERIK Safety Integrated.  
 For motion monitoring functions integrated in the drive, only a value of 5 is permissible. Other settings result in the safety message C01711/C30711 with message value 44.

**Value:**

- 0: STOP A
- 1: STOP B
- 2: STOP C
- 3: STOP D
- 4: STOP E
- 5: Sets the stop response via p9563 (SLS-specific)
- 10: STOP A with delayed STO when the bus fails
- 11: STOP B with delayed STO when the bus fails
- 12: STOP C with delayed STO when the bus fails
- 13: STOP D with delayed STO when the bus fails
- 14: STOP E with delayed STO when the bus fails

**Dependency:** Refer to: p9531, p9563, p9580  
**Note:** SLS: Safely Limited Speed / SG: Safely reduced speed

---

### p9562[0...1] SI Motion SLP (SE) stop response (Control Unit) / SI Mtn SLP Stop CU

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	14	2

**Description:** Sets the stop response for the function "Safely Limited Position" (SLP).

**Value:**

- 0: STOP A
- 1: STOP B
- 2: STOP C
- 3: STOP D
- 4: STOP E
- 10: STOP A with delayed stop response when the bus fails
- 11: STOP B with delayed stop response when the bus fails
- 12: STOP C with delayed stop response when the bus fails
- 13: STOP D with delayed stop response when the bus fails
- 14: STOP E with delayed stop response when the bus fails

**Index:** [0] = Limit value SLP1 (SE1)  
 [1] = Limit value SLP2 (SE2)

**Dependency:** Refer to: p9534, p9535

**Note:** In the extended sense, a bus failure should be seen here as a communication error in the control signals of the safety functions (e.g. via PROFIsafe or TM54F).  
 SLP: Safely Limited Position / SE: Safe software limit switches

<b>p9563[0...3]</b>		<b>SI Motion SLS (SG)-specific stop response (Control Unit) / SI Mtn SLS stop CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> Integer16 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 14	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 2	
<b>Description:</b>	Sets the SLS-specific stop response for the function "Safely Limited Speed" (SLS). These settings apply to the individual limit values for SLS. An input value of less than 5 signifies personnel protection, from 10 and upwards, machine protection.			
<b>Value:</b>	0: STOP A 1: STOP B 2: STOP C 3: STOP D 4: STOP E 10: STOP A with delayed stop response when the bus fails 11: STOP B with delayed stop response when the bus fails 12: STOP C with delayed stop response when the bus fails 13: STOP D with delayed stop response when the bus fails 14: STOP E with delayed stop response when the bus fails			
<b>Index:</b>	[0] = Limit value SLS1 [1] = Limit value SLS2 [2] = Limit value SLS3 [3] = Limit value SLS4			
<b>Dependency:</b>	Refer to: p9531, p9561, p9580			
<b>Notice:</b>	In the case of encoderless motion monitoring (p9506/p9306 = 1, 3), only a value of 0 or 1 is permitted.			
<b>Note:</b>	In the extended sense, a bus failure should be seen here as a communication error in the control signals of the safety functions (e.g. via PROFIsafe or TM54F). SLS: Safely Limited Speed / SG: Safely reduced speed			

<b>p9564</b>		<b>SI Motion SDI tolerance (Control Unit) / SI Mtn SDI tol CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0.001 [mm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 360.000 [mm]	<b>Access level:</b> 3 <b>Func. diagram:</b> 2824 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 12.000 [mm]	
<b>Description:</b>	Sets the tolerance for the function "Safe motion direction" (SDI). This motion in the monitored direction is still permissible before safety message C01716 is initiated.			
<b>Dependency:</b>	Refer to: p9565, p9566 Refer to: C01716			
<b>Note:</b>	SDI: Safe Direction (safe motion direction)			

<b>p9564</b>		<b>SI Motion SDI tolerance (Control Unit) / SI Mtn SDI tol CU</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0.001 [°]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 360.000 [°]	<b>Access level:</b> 3 <b>Func. diagram:</b> 2824 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 12.000 [°]	
<b>Description:</b>	Sets the tolerance for the function "Safe motion direction" (SDI). This motion in the monitored direction is still permissible before safety message C01716 is initiated.			
<b>Dependency:</b>	Refer to: p9565, p9566 Refer to: C01716			
<b>Note:</b>	SDI: Safe Direction (safe motion direction)			

<b>p9565 SI Motion SDI delay time (Control Unit) / SI Mtn SDI t CU</b>			
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2824
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	600000.00 [ms]	100.00 [ms]
<b>Description:</b>	Sets the delay time for the function "Safe motion direction" (SDI). After selecting the SDI function, then for a maximum of this time, motion in the monitored direction is permissible. This time can therefore be used for braking any motion.		
<b>Dependency:</b>	Refer to: p9564, p9566 Refer to: C01716		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. SDI: Safe Direction (safe motion direction)		

<b>p9566 SI Motion SDI stop response (Control Unit) / SI Mtn SDI Stop CU</b>			
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2824
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	14	1
<b>Description:</b>	Sets the stop response for the function "Safe motion direction" (SDI). This setting applies to both directions of motion.		
<b>Value:</b>	0: STOP A 1: STOP B 2: STOP C 3: STOP D 4: STOP E 10: STOP A with delayed stop response when the bus fails 11: STOP B with delayed stop response when the bus fails 12: STOP C with delayed stop response when the bus fails 13: STOP D with delayed stop response when the bus fails 14: STOP E with delayed stop response when the bus fails		
<b>Dependency:</b>	Refer to: p9564, p9565 Refer to: C01716		
<b>Notice:</b>	In the case of encoderless motion monitoring (p9506 = 1), only a value of 0 or 1 is permitted.		
<b>Note:</b>	In the extended sense, a bus failure should be seen here as a communication error in the control signals of the safety functions (e.g. via PROFSafe or TM54F). SDI: Safe Direction (safe motion direction)		

<b>p9568 SI Motion SAM/SBR velocity limit (Control Unit) / SI Mtn SAM v_limCU</b>			
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [mm/min]	1000.00 [mm/min]	0.00 [mm/min]
<b>Description:</b>	Sets the velocity limit for the "SAM" and "SBR" functions. SAM is deactivated once the set velocity limit has been undershot. SBR is deactivated if the safe brake ramp falls below the set velocity limit.		
<b>Note:</b>	SAM: Safe Acceleration Monitor (safe acceleration monitoring) SBR: Safe Brake Ramp (safe brake ramp monitoring) SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)		

## 2 Parameters

### 2.2 List of parameters

For p9568 = p9368 = 0, the following applies:

The value in p9546/p9346 (SSM) is applied as the velocity limit for SAM/SBR.

<b>p9568</b>	<b>SI Motion SAM/SBR velocity limit (Control Unit) / SI Mtn SAM v_limCU</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0.00 [rpm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 1000.00 [rpm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0.00 [rpm]
<b>Description:</b>	Sets the velocity limit for the "SAM" and "SBR" functions. SAM is deactivated once the set velocity limit has been undershot. SBR is deactivated if the safe brake ramp falls below the set velocity limit.		
<b>Note:</b>	SAM: Safe Acceleration Monitor (safe acceleration monitoring) SBR: Safe Brake Ramp (safe brake ramp monitoring) SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring) For p9568 = p9368 = 0, the following applies: The value in p9546/p9346 (SSM) is applied as the velocity limit for SAM/SBR.		
<b>p9570</b>	<b>SI Motion acceptance test mode (Control Unit) / SI Mtn Acc_mode</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 00AC hex	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 hex
<b>Description:</b>	Setting to select and de-select the acceptance test mode.		
<b>Value:</b>	0: [00 hex] De-select the acceptance test mode 172: [AC hex] Select the acceptance test mode		
<b>Dependency:</b>	Refer to: p9558, r9571, p9601 Refer to: C01799		
<b>Note:</b>	Acceptance test mode can only be selected if the safe motion monitoring functions are enabled.		
<b>r9571</b>	<b>SI Motion acceptance test status (Control Unit) / SI Mtn acc_status</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 00AC hex	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the status of the acceptance test mode.		
<b>Value:</b>	0: [00 hex] Acc_mode inactive 12: [0C hex] Acc_mode not possible due to POWER ON fault 13: [0D hex] Acc_mode not possible due to incorrect ID in p9570 15: [0F hex] Acc_mode not possible due to expired Acc_timer 172: [AC hex] Acc_mode active		
<b>Dependency:</b>	Refer to: p9558, p9570 Refer to: C01799		

---

<b>p9572</b>	<b>SI Motion reference position (Control Unit) / SI mtn rel_pos</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-737280.000 [mm]	737280.000 [mm]	0.000 [mm]
<b>Description:</b>	The reference position entered in this parameter, is used as safe absolute position when setting p9573. If errors are identified when performing the plausibility checks, then message C01711 is output with message value 1003		
<b>Note:</b>	The unit depends on the selected axis type, linear or rotary axis, in p9502		

---

<b>p9572</b>	<b>SI Motion reference position (Control Unit) / SI mtn rel_pos</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-737280.000 [°]	737280.000 [°]	0.000 [°]
<b>Description:</b>	The reference position entered in this parameter, is used as safe absolute position when setting p9573. If errors are identified when performing the plausibility checks, then message C01711 is output with message value 1003		
<b>Note:</b>	The unit depends on the selected axis type, linear or rotary axis, in p9502		

---

<b>p9573</b>	<b>SI Motion accept reference position (Control Unit) / SI mtn set_ref_pos</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	263	0
<b>Description:</b>	The safe absolute position is rejected or newly set using this parameter. If errors are identified when performing the plausibility checks, then message C1711 is output with message value 1003		
<b>Value:</b>	0: No action 89: Set reference position at standstill 122: Declare reference position invalid 263: Referencing via SCC		
<b>Dependency:</b>	Refer to: p9572		
<b>Note:</b>	SCC: Safety Control Channel		

---

<b>p9574</b>	<b>SI Motion safe position scaling (Control Unit) / SI mtn SP scal CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	100000	1000
<b>Description:</b>	Sets the scaling factor to transfer the safe position via PROFIsafe in the 16-bit notation.		
<b>Dependency:</b>	Refer to: r9713		

## 2 Parameters

### 2.2 List of parameters

**Note:** The parameter is only effective when PROFIsafe telegram 901 is selected.  
By selecting a suitable scaling of the 32 bit position actual value (r9713[0]), it must be ensured that the scaled position actual value is not greater than 16 bit. The scaling is realized by dividing r9713[0] with this scaling factor.  
If, during operation, a position actual value is determined, which cannot be scaled to the 16 bits, then message C0711 with value 7001 is output and safety stop response STOP F.

---

<b>p9575</b>	<b>SI Motion acceptance test SLP (SE) (Control Unit) / SI Mtn accept SLP</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	00AC hex	0000 hex
<b>Description:</b>	Setting to select and de-select the acceptance test for SLP (SE).		
<b>Value:</b>	0: [00 hex] deselect acceptance test SLP (SE) 172: [AC hex] select acceptance test SLP (SE)		
<b>Dependency:</b>	Refer to: p9358, p9370, p9558, p9570, p9601		
<b>Note:</b>	Acceptance test SLP (SE) can only be selected, if the safe motion monitoring functions have been enabled, and the acceptance test mode was activated in p9570/p9370. SLP: Safely Limited Position / SE: Safe software limit switches		

---

<b>p9577</b>	<b>SI Motion SLP delay time (Control Unit) / SI Mtn SLP t CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	600000.00 [ms]	0.00 [ms]
<b>Description:</b>	Setting the delay time: -between selecting and activating the "Safety-limited Position" (SLP) function -when changing between the two active SLP ranges, if the new range is not completely contained in the old range.		
<b>Dependency:</b>	Refer to: p9501, p9534, p9535		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. SLP: Safely Limited Position		

---

<b>p9580</b>	<b>SI Motion stop response delay bus failure (Control Unit) / SI Mtn t to IL CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	800.00 [ms]	0.00 [ms]
<b>Description:</b>	Sets the delay time, after which the stop response parameterized in p9612 for bus failure is executed.		
<b>Dependency:</b>	Refer to: p9561, p9563		
<b>Note:</b>	In the extended sense, a bus failure should be seen here as a communication error in the control signals of the safety functions (e.g. via PROFIsafe or TM54F). The main use of the wait time is the ESR function (Extended Stop and Retract). The set time is rounded internally to an integer multiple of the monitoring clock cycle.		

---

<b>p9581</b>	<b>SI Motion brake ramp reference value (Control Unit) / SI Mtn ramp ref CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	600.0000 [mm/min]	240000.0000 [mm/min]	1500.0000 [mm/min]
<b>Description:</b>	Sets the reference value to define the brake ramp.		
	The rate of rise of the brake ramp depends upon p9581 (reference value) and p9583 (monitoring time).		
<b>Dependency:</b>	Refer to: p9582, p9583		

---

<b>p9581</b>	<b>SI Motion brake ramp reference value (Control Unit) / SI Mtn ramp ref CU</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	600.0000 [rpm]	240000.0000 [rpm]	1500.0000 [rpm]
<b>Description:</b>	Sets the reference value to define the brake ramp.		
	The rate of rise of the brake ramp depends upon p9581 (reference value) and p9583 (monitoring time).		
<b>Dependency:</b>	Refer to: p9582, p9583		

---

<b>p9582</b>	<b>SI Motion brake ramp delay time (Control Unit) / SI Mtn rp t_del CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.00 [ms]	99000.00 [ms]	250.00 [ms]
<b>Description:</b>	Sets the delay time for monitoring the brake ramp.		
	Monitoring of the brake ramp starts once the delay time has elapsed.		
<b>Dependency:</b>	Refer to: p9581, p9583		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle.		
	Internally, the set time is limited downwards to 2 safety monitoring clock cycles (2 * p9500/p9300).		

---

<b>p9583</b>	<b>SI Motion brake ramp monitoring time (Control Unit) / SI Mtn rp t_mon CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.50 [s]	3600.00 [s]	10.00 [s]
<b>Description:</b>	Sets the monitoring time to define the brake ramp.		
	The rate of rise of the brake ramp depends upon p9581 (reference value) and p9583 (monitoring time).		
<b>Dependency:</b>	Refer to: p9581, p9582		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle.		

<b>p9585</b>		<b>SI Motion actual value sensing sensorless fault tolerance (CU) / ActVal sl tol CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-1	4	-1	
<b>Description:</b>	Sets the tolerance of the plausibility monitoring of the current and voltage angle. A higher value results in a higher degree of ruggedness when reversing at low speeds, as well as in the field weakening range for load steps. An increase is advantageous, if the current or voltage at the motor become small.			
<b>Dependency:</b>	Refer to: r9787 Refer to: F01681, C01711			
<b>Notice:</b>	Reducing this value can adversely affect the actual value sensing and the plausibility check. When the value is increased, this results in a longer evaluation delay and a higher velocity deviation (r9787).			
<b>Note:</b>	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3). For synchronous motors, the value 4 must be set. If value = -1: - for synchronous motors, the calculation is automatically made with the value 4. - for induction motors, the calculation is automatically made with a value of 0 (if the code number of the power unit p0201[0] < 14000, otherwise with a value of 2).			

<b>p9586</b>		<b>SI Motion actual value sensing sensorless delay time (CU) / ActVal sl t_del CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	5.00 [ms]	1000.00 [ms]	100.00 [ms]	
<b>Description:</b>	Sets the delay time to evaluate the encoderless actual value sensing after the pulses have been enabled. The value must be greater than or equal to the motor magnetizing time (p0346).			
<b>Dependency:</b>	Refer to: C01711			
<b>Caution:</b>	The safety functionality is only completely guaranteed after this time has expired.			
				
<b>Notice:</b>	If this value is reduced, this can have a negative impact on the actual value acquisition and plausibility check – and result in Safety message C01711 with the message value 1041 or 1042.			
<b>Note:</b>	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3). The set time is rounded internally to an integer multiple of the monitoring clock cycle.			

<b>p9587</b>		<b>SI Motion actual value sensing sensorless filter time (CU) / Actv sl t_filt CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0.00 [ms]	100.00 [ms]	25.00 [ms]	
<b>Description:</b>	Sets the filter time for smoothing the actual value with sensorless actual value sensing.			
<b>Notice:</b>	A longer filter time results in a longer response time.			
<b>Note:</b>	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3). The smoothing is realized with a 1st order filter. For p9587 = minimum value, the filter is deactivated. The set time is rounded internally to an integer multiple of the monitoring clock cycle.			

<b>p9588</b>	<b>SI Motion actual value sensing sensorless minimum current (CU) / ActVal sl I_min CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [%]	1000.00 [%]	10.00 [%]
<b>Description:</b>	Sets the minimum current for encoderless actual value sensing referred to 1 A (i.e. 1 % = 10 mA). - the value must be increased if C01711 has occurred with message value 1042. - the value must be decreased if C01711 has occurred with message value 1041. For synchronous motors, the following condition must be fulfilled: $ p0305 \times p9783  \geq p9588 \times 1.2$		
<b>Recommendation:</b>	If required, the correct value of the motor minimum current should be determined by making the appropriate measurements.		
<b>Dependency:</b>	Refer to: r9785 Refer to: C01711		
<b>Notice:</b>	If this percentage value is reduced excessively, then this can result in a safety message and an inaccurate actual value.		
<b>Note:</b>	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3).		
<b>p9589</b>	<b>SI Motion act. value sensing sensorless acceleration limit (CU) / ActVal sl a_lim CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	10.00 [%]	3300.00 [%]	100.00 [%]
<b>Description:</b>	Sets the acceleration limit to filter velocity fluctuations. If this percentage value is increased, when accelerating, velocity peaks that do not reflect the real velocity characteristic can occur. If this value is decreased, and this dampens the velocity peaks when accelerating. - the value must be increased if C01711 with message value 1043 has occurred. - the value must be lowered if acceleration procedures have led to an excessive Safety actual velocity.		
<b>Recommendation:</b>	The setting of this parameter depends on the motor and closed-loop control, and must be newly determined for each configuration. To do this, a measurement should be performed while the actual value jumps, and the limit in r9785[0] must be set so low using p9589, so that it is exceeded by the value in r9785[1] a maximum of four times per second. The actual value correction filter intervenes at this instant in time. The step is no longer so drastic.		
<b>Dependency:</b>	Refer to: r9784 Refer to: C01711		
<b>Note:</b>	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3). For p9589 = maximum value, the filter is deactivated. Diagnostics parameter p9784 must be used to correctly set this parameter.		

<b>r9590[0...3]</b>	<b>SI Motion version safety motion monitoring (Control Unit) / SI Mtn version CU</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the Safety Integrated version for the safe monitoring functions.		
<b>Index:</b>	[0] = Safety Version (major release) [1] = Safety Version (minor release) [2] = Safety Version (baselevel or patch) [3] = Safety Version (hotfix)		
<b>Dependency:</b>	Refer to: r9770, r9870, r9890		
<b>Note:</b>	Example: r9590[0] = 2, r9590[1] = 60, r9590[2] = 1, r9590[3] = 0 --> SI Motion version V02.60.01.00		
<b>p9601</b>	<b>SI enable functions integrated in the drive (Control Unit) / SI enable fct CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 bin
<b>Description:</b>	Sets the enable signals for the safety functions integrated in the drive and the type of selection on the Control Unit. Not all of the settings listed below will be permissible, depending on the Control Unit and Motor Module or Power Module being used: 0000 hex: Safety functions integrated in the drive inhibited (no safety function). 0001 hex: Basic functions are enabled via onboard terminals (permissible for r9771.0 = 1). 0004 hex: Extended functions via Terminal Module 54F (TM54F) have been enabled (permissible for r9771.5 = 1). 0005 hex: Extended functions via Terminal Module 54F (TM54F) and the basic functions via onboard terminals have been enabled (permissible for r9771.5 = 1). 0008 hex: Basic functions are enabled via PROFIsafe (permissible for r9771.6 = 1). 0009 hex: Basic functions are enabled via PROFIsafe onboard terminals (permissible for r9771.6 = 1). 000C hex: Extended functions are enabled via PROFIsafe (permissible for r9771.4 = 1). 000D hex: Extended functions are enabled via PROFIsafe and basic functions via onboard terminals (permissible for r9771.4 = 1). 0024 hex: Extended functions without selection are enabled (permissible for r9771.16 = 1). 0025 hex: Extended functions without selection and basic functions via onboard terminals are enabled (permissible for r9771.16 = 1). 0040 hex: Basic functions are enabled via TM54F 0041 hex: Basic functions are enabled via TM54F and basic functions via onboard terminals.		

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO (SH) via terminals (CU) enable	Enable	Inhibit	2810
	02	Enable motion monitoring functions integrated in drive (CU)	Enable	Inhibit	-
	03	Enable PROFIsafe (CU)	Enable	Inhibit	-
	05	Enab motion monit functions integr in drive w/out selection (CU)	Enable	Inhibit	-
	06	Basic functions via TM54F	Enable	Inhibit	-

**Dependency:** Refer to: r9771, p9801

**Note:** A change always becomes effective only after a POWER ON. Exception: Changes to p9601.0 and p9601.7 become effective immediately.

In addition to all of the combinations listed above, using bit 7, the "STO via Power Module terminals" function can be enabled (this is permissible for r9771.19 = 1).

CU: Control Unit  
 STO: Safe Torque Off / SH: Safe standstill  
 SS1: Safe Stop 1 (corresponds to Stop Category 1 acc. to EN60204)  
 SI: Safety Integrated  
 SMM: Safe Motion Monitoring  
 F-DI: Failsafe Digital Input  
 F-DO: Failsafe Digital Output

---

**p9602**      **SI enable Safe Brake Control (Control Unit) / SI enable SBC CU**

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2814
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0

**Description:** Sets the enable signal for the function "Safe Brake Control" (SBC) on the Control Unit.

**Value:**  
 0: Inhibit SBC  
 1: Enable SBC

**Dependency:** Refer to: p9802

**Note:** The "Safe Brake Control" function is not activated until at least one safety monitoring function has been enabled (i.e. p9501 not equal to 0 and/or p9601 not equal to 0).

It does not make sense to parameterize "no motor holding brake available" and enable "Safe Brake Control" (p1215 = 0, p9602 = p9802 = 1) if there is no motor holding brake.

The parameterization "motor holding brake the same as sequence control, connection via BICO" and "Safe Brake Control" enabled (p1215 = 3, p9602 = 1, p9802 = 1) is not practical.

It is not permissible to parameterize "motor holding brake without feedback signals" and also enable "safe brake control" (p1278 = 1, p9602 = 1, p9802 = 1).

CU: Control Unit  
 SBC: Safe Brake Control  
 SI: Safety Integrated

---

**p9610**      **SI PROFIsafe address (Control Unit) / SI PROFIsafe CU**

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65534	0

**Description:** Sets the PROFIsafe address for the Control Unit.

**Dependency:** Refer to: p9810

<b>p9611</b>	<b>SI PROFIsafe telegram selection (Control Unit) / SI Ps telegram CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	998	998
<b>Description:</b>	Sets the PROFIsafe telegram number for the Control Unit.		
<b>Value:</b>	0: No PROFIsafe telegram selected 30: PROFIsafe standard telegram 30, PZD-1/1 31: PROFIsafe standard telegram 31, PZD-2/2 900: PROFIsafe SIEMENS telegram 900, PZD-2/2 901: PROFIsafe SIEMENS telegram 901, PZD-3/5 902: PROFIsafe SIEMENS telegram 902, PZD-3/6 998: Compatibility mode (as for firmware version < 4.5)		
<b>Dependency:</b>	Refer to: p9811, p60022		
<b>Note:</b>	For p9601.3 = p9801.3 = 1 (PROFIsafe enabled), the following variants exist when parameterizing PROFIsafe telegram 30: - p9611 = p9811 = 998 and p60022 = 0 - p9611 = p9811 = 998 and p60022 = 30 - p9611 = p9811 = 30 and p60022 = 30		
<b>p9612</b>	<b>SI PROFIsafe failure response (Control Unit) / SI Ps fail CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the stop response when PROFIsafe communication fails.		
<b>Value:</b>	0: STOP A 1: STOP B		
<b>Dependency:</b>	Refer to: p9812		
<b>Note:</b>	For the set stop response STOP B, in order that the OFF3 ramp is actually maintained, when just using Safety Basic functions, the following must be carefully observed: - the transition time STOP F to STOP A (p9658, p9858) must be set longer or equal to the SS1 delay time (p9652, p9852). - if a higher-level control responds to a drive fault by withdrawing the controller enable signals, for faults F01611 and F30611, the message type must be changed to alarm (p2118, p2119).		
<b>p9620[0...7]</b>	<b>BI: SI signal source for STO (SH)/SBC/SS1 (Control Unit) / SI S_srcSTO/SS1 CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2810
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for the following functions on the Control Unit: STO: Safe Torque Off / SH: Safe standstill SBC: Safe Brake Control SS1: Safe Stop 1 (time monitored)		
<b>Dependency:</b>	Refer to: p9601		

**Note:** The following signal sources are permitted:

- fixed zero (standard setting).
- digital inputs DI 0 ... 7, 16, 17, 20, 21 on the Control Unit 320-2 (CU320-2).
- digital inputs DI 0 ... 3 on the Controller Extensions (CX32-2, NX10.3, NX15.3).
- digital inputs DI 0 ... 3, 16 on the Control Unit 310-2 (CU310-2).

It is not permitted to establish an interconnection to a digital input in the simulation mode.

For a parallel circuit configuration of n power units, the following applies:

p9620[0] = Signal source for power unit 1

...

p9620[n-1] = Signal source for power unit n

---

<b>p9621</b>	<b>BI: SI Safe Brake Adapter signal source (Control Unit) / SI SBA S_src CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2814
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for Safe Brake Adapter (SBA). This defines via which digital input the Safe Brake Adapter feedback signal is read-in (SBA_DIAG). p9621/p9821 = 0: There is no Safe Brake Control (SBC) with Safe Brake Adapter (SBA) available. p9621/p9821 = r0722.x (x = 0, 1 ... 7) Safe Brake Adapter and Booksize unit (no Communication Interface Module (CIM)). p9621/p9821 = r9872.3 Safe Brake Adapter and Chassis unit (CIM).		
<b>Dependency:</b>	Refer to: p9601, p9602, p9821		
<b>Note:</b>	No difference is tolerated for a crosswise data comparison between p9621 and p9821. To use the "Safe Brake Adapter" function the following must apply: p9601 = p9801 <> 0 and p9602 = p9802 = 1		

---

<b>p9622[0...1]</b>	<b>SI SBA relay delay times (Control Unit) / SI SBA relay t CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2814
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	1000.00 [ms]	[0] 100.00 [ms] [1] 65.00 [ms]
<b>Description:</b>	Sets the delay times for activating and deactivating the Safe Brake Adapter relay. The relay-specific minimum delay times for evaluating the feedback signal contacts have to be set. They differ for the activation and deactivation of one and the same relay.		
<b>Index:</b>	[0] = Wait time activation [1] = Wait time deactivation		
<b>Dependency:</b>	Refer to: p9822		
<b>Note:</b>	For a crosswise data comparison between p9622 and p9822, a difference of one Safety monitoring clock cycle is tolerated. The set time is rounded internally to an integer multiple of the monitoring clock cycle. For index 0: Wait time switch on = drop-out time + bounce time NO contact + effect of the free-wheeling diode in the Safe Brake Adapter For index 1: Wait time switch off = response time + bounce time NC contact + effect of the free-wheeling diode in the Safe Brake Adapter		

<b>p9650</b>	<b>SI SGE changeover discrepancy time (Control Unit) / SI SGE chg t CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2810
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	2000.00 [ms]	500.00 [ms]
<b>Description:</b>	Sets the discrepancy time to change over the safety-related inputs (SGE) on the Control Unit. An SGE changeover is not effective simultaneously due to the different runtimes in the two monitoring channels. After an SGE changeover, dynamic data is not subject to a crosswise data comparison during this discrepancy time.		
<b>Dependency:</b>	Refer to: p9850		
<b>Note:</b>	For a crosswise data comparison between p9650 and p9850, a difference of one Safety monitoring clock cycle is tolerated. The set time is rounded internally to an integer multiple of the monitoring clock cycle. SGE: Safety-related input (e.g. STO terminals)		
<b>p9651</b>	<b>SI STO/SBC/SS1 debounce time (Control Unit) / SI STO t_debou CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	100.00 [ms]	0.00 [ms]
<b>Description:</b>	Sets the debounce time for the failsafe digital inputs used to control STO/SBC/SS1.		
<b>Note:</b>	The debounce time is rounded to whole milliseconds. It specifies the maximum duration of a fault pulse at the fail-safe digital inputs with no reaction/influence on the selection or deselection of the Safety Basic Functions. Example: Debounce time = 1 ms: Fault pulses of 1 ms are filtered; only pulses longer than 2 ms are processed. Debounce time = 3 ms: Fault pulses of 3 ms are filtered; only pulses longer than 4 ms are processed.		
<b>p9652</b>	<b>SI Safe Stop 1 delay time (Control Unit) / SI Stop 1 t_del CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [s]	300.00 [s]	0.00 [s]
<b>Description:</b>	Sets the delay time of the pulse suppression for the function "Safe Stop 1" (SS1) on the Control Unit to brake along the OFF3 down ramp (p1135).		
<b>Recommendation:</b>	In order that the drive can completely ramp-down along the OFF3 ramp and a motor holding brake that is possibly available can close, then the delay time should be set as follows: Motor holding brake parameterized: delay time $\geq$ p1135 + p1228 + p1217 Motor holding brake not parameterized: delay time $\geq$ p1135 + p1228		
<b>Dependency:</b>	Refer to: p1135, p9852		
<b>Note:</b>	Pulse cancellation after failure of PROFISafe communication is delayed by this time, if "Stop B after failure of the PROFISafe communication" (p9612) is parameterized. For a crosswise data comparison between p9652 and p9852, a difference of one Safety monitoring clock cycle is tolerated. The set time is rounded internally to an integer multiple of the monitoring clock cycle. SS1: Safe Stop 1 (corresponds to Stop Category 1 acc. to EN60204)		

---

<b>p9653</b>	<b>SI Safe Stop 1 drive-based braking response / SI SS1 drv resp</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the drive-based braking response for the "Safe Stop 1" (SS1) function.		
<b>Value:</b>	0: SS1 with OFF3 1: SS1E external stop		
<b>Note:</b>	SS1: Safe Stop 1 (Safe Stop 1, corresponds to Stop Category 1 acc. to EN60204) SS1E: Safe Stop 1 external (Safe Stop 1 with external stop) SS1E requires the externally initiated stop in order to be in conformance with stop Category 1. With this parameter, a switchover is made from SS1 to SS1E, and the drive-based braking response of function SS1 (time controlled) of the Basic Functions is deactivated.		

---

<b>p9658</b>	<b>SI transition time STOP F to STOP A (Control Unit) / SI STOP F-&gt;A CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2802
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	30000.00 [ms]	0.00 [ms]
<b>Description:</b>	Sets the transition period from STOP F to STOP A on the Control Unit.		
<b>Dependency:</b>	Refer to: r9795, p9858 Refer to: F01611		
<b>Note:</b>	For a crosswise data comparison between p9658 and p9858, a difference of one Safety monitoring clock cycle is tolerated. The set time is rounded internally to an integer multiple of the monitoring clock cycle. If a higher-level control responds to a drive fault by withdrawing the controller enable signals, for faults F01611 and F30611, the message type must be changed to alarm (p2118, p2119). As a consequence, the drive can still be braked in a controlled fashion during this delay time. STOP F: Defect in a monitoring channel (error in the crosswise data comparison) STOP A: STO as a result of a fault detected by Safety Integrated		

---

<b>p9659</b>	<b>SI forced checking procedure timer / SI FCP Timer</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2810
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [h]	9000.00 [h]	8.00 [h]
<b>Description:</b>	Sets the time interval for carrying out the forced checking procedure and testing the Safety switch-off signal paths. Within the parameterized time, STO must have been de-selected at least once. The monitoring time is reset each time that STO is de-selected.		
<b>Dependency:</b>	Refer to: A01699		
<b>Note:</b>	STO: Safe Torque Off / SH: Safe standstill		

---

<b>r9660</b>	<b>SI forced checking procedure remaining time / SI FCP remain</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [h]	- [h]	- [h]
<b>Description:</b>	Displays the time remaining before dynamization and testing of the safety switch-off signal paths (forced checking procedure).		
<b>Dependency:</b>	Refer to: A01699		

---

<b>p9665[0...255]</b>	<b>SI Motor Module parameter save / SI MM par save</b>		
VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	00FF hex	0000 hex
<b>Description:</b>	Save the safety parameters for the basic functions on the Motor Module/Hydraulic Module.		
<b>Note:</b>	The parameter values are saved in the following indices: p9801: index 20...23 p9802: index 28...31 p9810: index 36...39 p9811: index 116...119 p9812: indices 148...151 p9821: index 84...87 p9822[0]: index 92...95 p9822[1]: index 100...103 p9825[0]: index 124...127 p9825[1]: index 132...135 p9826: index 140...143 p9850: index 44...47 p9851: index 76...79 p9852: index 52...55 p9858: index 60...63 p9897: index 108...111 p9899: index 68...71 Depending on the existing technology, configuration and firmware version, it is possible that not all of the listed parameters are available.		

---

<b>p9670</b>	<b>SI module identification Control Unit / Module ID CU</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP, VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	CRC via Node Identifier of the Control Unit.		
<b>Note:</b>	CU: Control Unit		

<b>p9671[0...n]</b>	<b>SI module identifier Motor Module / Module ID MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> PDS, p0120	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	CRC via the Node Identifier of a Motor Module.		
<b>Note:</b>	The CRC is saved indexed when Motor Modules are connected in parallel. MM: Motor Module		
<b>p9672</b>	<b>SI module identifier Power Module / Module ID PM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	CRC via the Node Identifier of a Power Module.		
<b>Note:</b>	PM: Power Module		
<b>p9673</b>	<b>SI module identifier Sensor Module channel 1 / Module ID SM 1</b>		
VECTOR_G	<b>Can be changed:</b> C2(95), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	CRC via Node Identifier of the Sensor Module, which is used by the first monitoring channel.		
<b>Note:</b>	SM: Sensor Module		
<b>p9674</b>	<b>SI module identifier Sensor Module channel 2 / Module ID SM 2</b>		
VECTOR_G	<b>Can be changed:</b> C2(95), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	CRC via Node Identifier of the Sensor Module, which is used by the second monitoring channel.		
<b>Note:</b>	SM: Sensor Module		
<b>p9675</b>	<b>SI module identifier sensor channel 1 / Module ID sensor 1</b>		
VECTOR_G	<b>Can be changed:</b> C2(95), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	CRC via the serial number of the encoder, which is used by the first monitoring channel.		
<b>Note:</b>	When using an encoder without its own serial number, the value of zero is kept.		

<b>p9676</b>	<b>SI module identifier sensor channel 2 / Module ID sensor 2</b>		
VECTOR_G	<b>Can be changed:</b> C2(95), T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	CRC via the serial number of the encoder, which is used by the second monitoring channel.		
<b>Note:</b>	When using an encoder without its own serial number, the value of zero is kept.		
<b>p9677[0...1]</b>	<b>SI Motion offset POS1 POS2 encoder / SI Mtn offset sens</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	4294967295	0
<b>Description:</b>	Sets the offset between encoder positions POS1 and POS2, which is used once to check (after powering up and unparking).		
<b>Index:</b>	[0] = Offset POS1 POS2 encoder CU [1] = Offset POS1 POS2 encoder MM		
<b>p9697</b>	<b>SI Motion bus failure STO/SH delay time (CU) / SI Mtn STO t CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	800.00 [ms]	0.00 [ms]
<b>Description:</b>	Sets the delay time for STO after bus failure on the Control Unit (e.g. used for ESR).		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle. ESR: Extended Stop and Retract STO: Safe Torque Off / SH: Safe standstill		
<b>p9700</b>	<b>SI Motion copy function / SI Mtn copy fct</b>		
VECTOR_G	<b>Can be changed:</b> C2(95), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	00D0 hex	0000 hex
<b>Description:</b>	Setting to start the required copy function. After starting, the appropriate parameters are copied from the Control Unit to the Motor Module. Once copying is complete, the parameter is automatically reset to zero.		
<b>Value:</b>	0: [00 hex] Copy function ended 29: [1D hex] Start copy function node identifier 46: [2E hex] start copy function encoder parameters 87: [57 hex] Start copy function SI parameters 208: [D0 hex] Start copy function SI basic parameters		
<b>Note:</b>	For value = 57 hex, 2E hex and D0 hex: The value can only be set if the safety commissioning mode is set and the Safety Integrated password was entered.		

For value = D0 hex:

The following parameters are copied after starting the copy function:

p9601 --> p9801, p9602 --> p9802, p9610 --> 9810, p9611 --> 9811, p9621 --> 9821, p9622 --> 9822, p9650 --> p9850, p9651 --> p9851, p9652 --> p9852, p9658 --> p9858, p9697 --> p9897

---

<b>p9700</b>	<b>SI Motion copy function / SI Mtn copy fct</b>		
TM54F_MA	<b>Can be changed:</b> C2(95), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	00CC hex	0000 hex
<b>Description:</b>	Setting to start the required copy function. After starting, the appropriate parameters are copied from the Control Unit to the Motor Module. Once copying is complete, the parameter is automatically reset to zero.		
<b>Value:</b>	0: [00 hex] Copy function ended 29: [1D hex] Start copy function node identifier 87: [57 hex] Start copy function SI parameters 204: [CC hex] Start copy function TM54F communication clock cycles		
<b>Note:</b>	For value = 57 hex: The value can only be set if the safety commissioning mode is set and the Safety Integrated password was entered. SI: Safety Integrated		

---

<b>p9701</b>	<b>Acknowledge SI motion data change / Ackn SI Mtn dat</b>		
VECTOR_G	<b>Can be changed:</b> C2(95), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	00EC hex	0000 hex
<b>Description:</b>	Setting to transfer the reference checksums from the associated actual checksums after changes (SI parameters, hardware). After transferring the reference checksums, parameters are automatically reset to zero.		
<b>Value:</b>	0: [00 hex] Data unchanged 172: [AC hex] Acknowledge data change complete 220: [DC hex] Acknowledge SI basic parameter change 236: [EC hex] Acknowledge hardware CRC		
<b>Dependency:</b>	Refer to: r9398, p9399, r9728, p9729, r9798, p9799, r9898, p9899		
<b>Note:</b>	For value = AC and DC hex: These values can only be set if the safety commissioning mode is set and the Safety Integrated password was entered.		

---

<b>p9701</b>	<b>Acknowledge SI motion data change / Ackn SI Mtn dat</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95), U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	00EC hex	0000 hex
<b>Description:</b>	Setting to transfer the reference checksums from the associated actual checksums after changes (SI parameters, hardware). After transferring the reference checksums, parameters are automatically reset to zero.		
<b>Value:</b>	0: [00 hex] Data unchanged 172: [AC hex] Acknowledge data change complete 236: [EC hex] Acknowledge hardware CRC		

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Refer to: r9398, p9399, r9728, p9729, r9798, p9799, r9898, p9899  
**Note:** For value = AC hex:  
These values can only be set if the safety commissioning mode is set and the Safety Integrated password was entered.  
SI: Safety Integrated

---

**p9702** **SI Acknowledge component replacement / Comp\_replace ackn**

VECTOR\_G **Can be changed:** U, T **Calculated:** - **Access level:** 3  
**Data type:** Integer16 **Dyn. index:** - **Func. diagram:** -  
**P-Group:** Safety Integrated **Unit group:** - **Unit selection:** -  
**Not for motor type:** - **Scaling:** - **Expert list:** 1  
**Min** **Max** **Factory setting**  
0 29 0

**Description:** Setting to acknowledge that a component has been replaced.  
By writing 29 to this parameter, the unique identifier of a safety-relevant component is transferred into the drive parameterization.

**Value:** 0: [00 hex] hardware replacement acknowledge ready  
29: [1D hex] hardware replacement acknowledgment

**Dependency:** Refer to: F01640  
**Notice:** It is not permissible that the safety commissioning mode is set in order to write to this parameter.  
**Note:** After successful execution, this parameter is automatically reset to zero.  
Data must then be saved in a non-volatile fashion (p0977 = 1 or p0971 = 1 or "copy RAM to ROM").  
The parameter cannot be written to using a project download, and cannot be set in an offline project.

---

**p9705** **BI: SI Motion: Test stop signal source / SI Mtn test stop**

VECTOR\_G **Can be changed:** C2(95) **Calculated:** - **Access level:** 3  
**Data type:** Unsigned32 / Binary **Dyn. index:** - **Func. diagram:** 2837  
**P-Group:** Safety Integrated **Unit group:** - **Unit selection:** -  
**Not for motor type:** - **Scaling:** - **Expert list:** 1  
**Min** **Max** **Factory setting**  
- - 0

**Description:** Sets the signal source for the test stop of the safety-relevant motion monitoring functions.

**Notice:** Before setting the signal source in p9705 it must be ensured that the signal source is at a logical 0.  
If, in the Safety commissioning mode, the signal source in p9705 is set - and it already has a logical 1 - then a test stop is immediately initiated and the messages C01711/C30711 are output with message value 1005.

**Note:** It is not permissible to use TM54F inputs to start the test stop.

---

**r9707[0...2]** **CO: SI Motion diagnostics encoder position actual value GX\_XIST1 / SI Mtn XIST1**

VECTOR\_G **Can be changed:** - **Calculated:** - **Access level:** 3  
**Data type:** Unsigned32 **Dyn. index:** - **Func. diagram:** -  
**P-Group:** Safety Integrated **Unit group:** - **Unit selection:** -  
**Not for motor type:** - **Scaling:** - **Expert list:** 1  
**Min** **Max** **Factory setting**  
- - -

**Description:** Display:  
Index0: of the encoder actual value GX\_Xist1,  
Index1: of the encoder actual value GX\_Xist1 in the clock cycle, from which the subsequently transferred reference position was received.  
Index2: The difference between index1 and index0 while waiting for the reference position to be transferred.  
Index1 and index2 are only relevant for safety monitoring functions requiring an encoder with absolute reference, when "Referencing via SCC" is enabled (p9501 bit27=1)

**Index:** [0] = Encoder actual value Xist1 on CU  
[1] = Encoder actual value Xist1 latched for referencing  
[2] = Xist1 latched - reference position difference

**Note:** The parameter is only available for Safety Integrated with encoder

<b>r9708[0...5]</b>		<b>SI Motion diagnostics safe position / SI mtn safe pos</b>	
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> - [mm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [mm]	<b>Access level:</b> 3 <b>Func. diagram:</b> 2822, 2836 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [mm]
<b>Description:</b>	Displays the actual load-side actual values of both monitoring channels and their difference.		
<b>Index:</b>	[0] = Load-side actual value on the CU [1] = Load-side actual value on the second channel [2] = Load-side actual value difference CU - second channel [3] = Load-side max. actual value difference CU - second channel [4] = Load-side actual value as safe position via PROFIsafe [5] = Load-side additional actual value difference CU - second channel		
<b>Dependency:</b>	Refer to: r9713		
<b>Note:</b>	For index 0: The display of the load-side position actual value on the Control Unit is updated in the monitoring clock cycle. For index 1: The display of the load-side position actual value on the second channel is updated in the CDC clock cycle (r9724) and delayed by one CDC clock cycle. For index 2: The difference between the load-side position actual value on the Control Unit and load-side position actual value in the second channel is updated in the CDC clock cycle (r9724) and delayed by one CDC clock cycle. For index 3: The maximum difference between the load-side position actual value on the Control Unit and the load-side position actual value on the second channel. For index 4: Displays the load-side position actual value when enabling the function "Safe position via PROFIsafe". The value is an average value from the values in index 0 and 1. When the function is not enabled, the content corresponds to the value in index 0. For index 5: The display of the maximum additional difference between the load-side position actual value on the Control Unit, and the load-side position actual value in the second channel, which can occur as a result of the actual value sensing delay in the EnDat 2.2 converter. Input in p9542: p9708[3] + p9708[5], after performing the measurement for the mechanical tolerance by performing a test run, where, after completion, the maximum tolerance that has occurred is displayed in p9708[3]. CDC: Crosswise Data Comparison		

<b>r9708[0...5]</b>		<b>SI Motion diagnostics safe position / SI mtn safe pos</b>	
VECTOR_G (Safety rot)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> - [°]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [°]	<b>Access level:</b> 3 <b>Func. diagram:</b> 2822, 2836 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [°]
<b>Description:</b>	Displays the actual load-side actual values of both monitoring channels and their difference.		
<b>Index:</b>	[0] = Load-side actual value on the CU [1] = Load-side actual value on the second channel [2] = Load-side actual value difference CU - second channel [3] = Load-side max. actual value difference CU - second channel [4] = Load-side actual value as safe position via PROFIsafe [5] = Load-side additional actual value difference CU - second channel		
<b>Dependency:</b>	Refer to: r9713		
<b>Note:</b>	For index 0: The display of the load-side position actual value on the Control Unit is updated in the monitoring clock cycle.		

For index 1:

The display of the load-side position actual value on the second channel is updated in the CDC clock cycle (r9724) and delayed by one CDC clock cycle.

For index 2:

The difference between the load-side position actual value on the Control Unit and load-side position actual value in the second channel is updated in the CDC clock cycle (r9724) and delayed by one CDC clock cycle.

For index 3:

The maximum difference between the load-side position actual value on the Control Unit and the load-side position actual value on the second channel.

For index 4:

Displays the load-side position actual value when enabling the function "Safe position via PROFIsafe".

The value is an average value from the values in index 0 and 1.

When the function is not enabled, the content corresponds to the value in index 0.

For index 5:

The display of the maximum additional difference between the load-side position actual value on the Control Unit, and the load-side position actual value in the second channel, which can occur as a result of the actual value sensing delay in the EnDat 2.2 converter.

Input in p9542: p9708[3] + p9708[5], after performing the measurement for the mechanical tolerance by performing a test run, where, after completion, the maximum tolerance that has occurred is displayed in p9708[3].

CDC: Crosswise Data Comparison

**r9710[0...1]**

**SI Motion diagnostics result list 1 / SI Mtn res\_list 1**

VECTOR\_G

<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
-	-	-

**Description:**

Displays result list 1 that, for the crosswise data comparison between the monitoring channels, led to the fault.

**Index:**

[0] = Result list second channel  
[1] = Result list drive

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	Actual value > upper limit SOS	Yes	No	-
01	Actual value > lower limit SOS	Yes	No	-
02	Actual value > upper limit SLP1	Yes	No	-
03	Actual value > lower limit SLP1	Yes	No	-
04	Actual value > upper limit SLP2	Yes	No	-
05	Actual value > lower limit SLP2	Yes	No	-
06	Actual value > upper limit SLS1	Yes	No	-
07	Actual value > lower limit SLS1	Yes	No	-
08	Actual value > upper limit SLS2	Yes	No	-
09	Actual value > lower limit SLS2	Yes	No	-
10	Actual value > upper limit SLS3	Yes	No	-
11	Actual value > lower limit SLS3	Yes	No	-
12	Actual value > upper limit SLS4	Yes	No	-
13	Actual value > lower limit SLS4	Yes	No	-
16	Actual value > upper limit SAM/SBR	Yes	No	-
17	Actual value > lower limit SAM/SBR	Yes	No	-
18	Actual value > upper limit SDI positive	Yes	No	-
19	Actual value > lower limit SDI positive	Yes	No	-
20	Actual value > upper limit SDI negative	Yes	No	-
21	Actual value > lower limit SDI negative	Yes	No	-

**Dependency:**

Refer to: C01711

**Note:**

SBR: Safe Brake Ramp (safe brake ramp monitoring)  
SLP: Safely Limited Position  
SLS: Safely Limited Speed  
SOS: Safe Operating Stop

<b>r9711[0...1]</b>		<b>SI Motion diagnostics result list 2 / SI Mtn res_list 2</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays result list 2 that, for the crosswise data comparison between the monitoring channels, led to the fault.				
<b>Index:</b>	[0] = Result list second channel [1] = Result list drive				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Actual value > upper limit SCA1+	Yes	No	-
	01	Actual value > lower limit SCA1+	Yes	No	-
	02	Actual value > upper limit SCA1-	Yes	No	-
	03	Actual value > lower limit SCA1-	Yes	No	-
	04	Actual value > upper limit SCA2+	Yes	No	-
	05	Actual value > lower limit SCA2+	Yes	No	-
	06	Actual value > upper limit SCA2-	Yes	No	-
	07	Actual value > lower limit SCA2-	Yes	No	-
	08	Actual value > upper limit SCA3+	Yes	No	-
	09	Actual value > lower limit SCA3+	Yes	No	-
	10	Actual value > upper limit SCA3-	Yes	No	-
	11	Actual value > lower limit SCA3-	Yes	No	-
	12	Actual value > upper limit SCA4+	Yes	No	-
	13	Actual value > lower limit SCA4+	Yes	No	-
	14	Actual value > upper limit SCA4-	Yes	No	-
	15	Actual value > lower limit SCA4-	Yes	No	-
	16	Actual value > upper limit SSM+	Yes	No	-
	17	Actual value > lower limit SSM+	Yes	No	-
	18	Actual value > upper limit SSM-	Yes	No	-
	19	Actual value > lower limit SSM-	Yes	No	-
	20	Actual value > upper limit modulo	Yes	No	-
	21	Actual value > lower limit modulo	Yes	No	-
<b>Dependency:</b>	Refer to: C01711				
<b>Note:</b>	SCA: Safe Cam SSM: Safe Speed Monitor (safety-relevant feedback signal from the velocity monitoring)				

<b>r9712</b>		<b>CO: SI Motion diagnostics position actual value motor side / SI Mtn s_act mot</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the actual motor-side position actual value for the motion monitoring functions on the Control Unit.				
<b>Note:</b>	The display is updated in the safety monitoring clock cycle.				

<b>r9713[0...5]</b>	<b>CO: SI Motion diagnostics position actual value load side / SI Mtn s_act load</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Display and connector output for the actual load-side actual values of both monitoring channels and their difference.		
<b>Index:</b>	[0] = Load-side actual value on the CU [1] = Load-side actual value on the second channel [2] = Load-side actual value difference CU - second channel [3] = Load-side max. actual value difference CU - second channel [4] = Load-side actual value as safe position via PROFIsafe [5] = Load-side additional actual value difference CU - second channel		
<b>Dependency:</b>	Refer to: r9708, r9724		
<b>Note:</b>	Regarding the units, this parameter should be interpreted as follows: - linear axis: µm - rotary axis: mdegrees The value of this parameter is displayed in r9708 with units (mm or degrees). The display is updated in the safety monitoring clock cycle. For index 0: The display of the load-side position actual value on the Control Unit is updated in the monitoring clock cycle. For index 1: The display of the load-side position actual value on the second channel is updated in the CDC clock cycle (r9724) and delayed by one CDC clock cycle. For index 2: The difference between the load-side position actual value on the Control Unit and load-side position actual value in the second channel is updated in the CDC clock cycle (r9724) and delayed by one CDC clock cycle. For index 3: The maximum difference between the load-side position actual value on the Control Unit and the load-side position actual value on the second channel. For index 4: Displays the load-side position actual value when enabling the function "Safe position via PROFIsafe". The value is an average value from the values in index 0 and 1. For a 16-bit notation, the value is influenced using the scaling factor (p9574/p9374). When the function is not enabled, the content corresponds to the value in index 0. For index 5: The display of the maximum additional difference between the load-side position actual value on the Control Unit, and the load-side position actual value in the second channel, which can occur as a result of the actual value sensing delay in the EnDat 2.2 converter. Input in p9542: r9713[3] + r9713[5], after performing the measurement for the mechanical tolerance by performing a test run, where, after completion, the maximum tolerance that has occurred is displayed in p9713[3]. CDC: Crosswise Data Comparison		

<b>r9714[0...2]</b>	<b>CO: SI motion diagnostics velocity / SI Mtn diag v</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mm/min]	- [mm/min]	- [mm/min]
<b>Description:</b>	Displays the velocity actual values for the motion monitoring functions on the Control Unit.		
<b>Index:</b>	[0] = Load-side velocity actual value on the Control Unit [1] = Actual SAM/SBR velocity limit on the Control Unit [2] = Actual SLS velocity limit on the Control Unit		

**Dependency:** Refer to: r9732

**Notice:** For index 2:  
This SLS velocity limit can, as a result of conversion into the internal monitoring format, deviate from the specified SLS velocity limit (see r9732).

**Note:** The display is updated in the safety monitoring clock cycle.  
For linear axes, the following unit applies: millimeters per minute  
For rotary axes, the following unit applies: revolutions per minute

---

**r9714[0...2] CO: SI motion diagnostics velocity / SI Mtn diag v**

VECTOR_G (Safety rot)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]

**Description:** Displays the velocity actual values for the motion monitoring functions on the Control Unit.

**Index:** [0] = Load-side velocity actual value on the Control Unit  
[1] = Actual SAM/SBR velocity limit on the Control Unit  
[2] = Actual SLS velocity limit on the Control Unit

**Dependency:** Refer to: r9732

**Notice:** For index 2:  
This SLS velocity limit can, as a result of conversion into the internal monitoring format, deviate from the specified SLS velocity limit (see r9732).

**Note:** The display is updated in the safety monitoring clock cycle.  
For linear axes, the following unit applies: millimeters per minute  
For rotary axes, the following unit applies: revolutions per minute

---

**r9718.23 CO/BO: SI Motion control signals 1 / SI Mtn ctrl\_sig 1**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Control signal 1 for safety-relevant motion monitoring functions.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	23	Set offset for TfS to the actual torque	Set	Reset	-

**Note:** TfS: Traverse to fixed stop

---

**r9719.0...31 CO/BO: SI Motion control signals 2 / SI Mtn ctrl\_sig 2**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Control signal 2 for safety-relevant motion monitoring functions.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	De-select SOS/SLS (SBH/SG)	Yes	No	-
	01	De-select SOS (SBH)	Yes	No	-
	03	Select SLS (SG) bit 0	Set	Not set	-
	04	Select SLS (SG) bit 1	Set	Not set	-
	05	Deselect SDI positive	Yes	No	-
	06	Deselect SDI negative	Yes	No	-
	07	Deselect SLP	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

08	Gearbox selection bit 0	Set	Not set	-
09	Gearbox selection bit 1	Set	Not set	-
10	Gearbox selection bit 2	Set	Not set	-
11	Gearbox switchover	Set	Not set	-
12	Select SLP (SE) position range	SLP2 (SE2)	SLP1 (SE1)	-
13	Close brake from control	Yes	No	-
15	Select test stop	Yes	No	-
16	SGE valid	Yes	No	-
18	De-select external STOP A	Yes	No	-
19	De-select external STOP C	Yes	No	-
20	De-select external STOP D	Yes	No	-
21	De-select external STOP E	Yes	No	-
28	SLS (SG) override bit 0	Set	Not set	-
29	SLS (SG) override bit 1	Set	Not set	-
30	SLS (SG) override bit 2	Set	Not set	-
31	SLS (SG) override bit 3	Set	Not set	-

**Note:**

For r9719.0 and r9719.1:

These two bits must be considered together.

- if SOS/SLS (SBH/SG) is de-selected using bit 0, then assignment of bit 1 is irrelevant.

- if SOS/SLS (SBH/SG) is selected using bit 0, then a changeover is made between SOS (SBH) and SLS (SG) using bit 1.

SLP: Safely Limited Position / SE: Safe software limit switches

SLS: Safely Limited Speed / SG: Safely reduced speed

SOS: Safe Operating Stop / SBH: Safe operating stop

SDI: Safe Direction (safe motion direction)

#### r9720.0...28

#### CO/BO: SI Motion control signals integrated in the drive / SI Mtn integ STW

VECTOR\_G

**Can be changed:** -

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** 2840, 2905

**P-Group:** Safety Integrated

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:**

Control signals for safety-relevant motion monitoring functions integrated in the drive.

**Bit field:**

Bit	Signal name	1 signal	0 signal	FP
00	De-select STO	Yes	No	-
01	De-select SS1	Yes	No	-
02	De-select SS2	Yes	No	-
03	De-select SOS	Yes	No	-
04	De-select SLS	Yes	No	-
06	Deselect SLP	Yes	No	2822
07	Acknowledgment	Signal edge active	No	-
09	Select SLS bit 0	Set	Not set	-
10	Select SLS bit 1	Set	Not set	-
12	Deselect SDI positive	Yes	No	2824
13	Deselect SDI negative	Yes	No	2824
19	Select SLP position range	SLP2	SLP1	2822
24	Select gearbox bit 0	Set	Not set	-
25	Select gearbox bit 1	Set	Not set	-
26	Select gearbox bit 2	Set	Not set	-
27	Gearbox switchover	Set	Not set	-
28	Deselect SS2E	Yes	No	-

**Note:**

This parameter is only supplied with actual values in the case of Safety Integrated Extended Functions. For Safety Integrated Basic Functions (SBC, SS1, STO), the value is equal to zero.

<b>r9721.0...15</b>		<b>CO/BO: SI Motion status signals (Control Unit) / SI Mtn stat_sig CU</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the status signals of the safe motion monitoring functions on monitoring channel 1.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	SOS or SLS active	Yes	No	-
	01	SOS active	Yes	No	-
	02	Pulse enable	Deleted	Enabled	-
	03	Active SLS stage bit 0	Set	Not set	-
	04	Active SLS stage bit 1	Set	Not set	-
	05	Velocity below limit value n_x	Yes	No	-
	06	SLP active	Yes	No	-
	07	Safely referenced	Yes	No	-
	08	SDI positive active	Yes	No	-
	09	SDI negative active	Yes	No	-
	10	SLP active position area	SLP2	SLP1	-
	12	STOP A or STOP B or STO or SS1 active	Yes	No	2819
	13	STOP C or SS2 active	Yes	No	2819
	14	STOP D or SS2E active	Yes	No	2819
	15	STOP E active	Yes	No	-
<b>Note:</b>	This parameter is only supplied with actual values in the case of Safety Integrated Extended Functions. For Safety Integrated Basic Functions (SBC, SS1, STO), the value is equal to zero.				

<b>r9722.0...31</b>		<b>CO/BO: SI Motion drive-integrated status signals (Control Unit) / SI Mtn int stat CU</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2840, 2905		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Status signal for safety-relevant motion monitoring functions integrated in the drive on monitoring channel 1.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	STO or safe pulse suppression active	Yes	No	-
	01	SS1 active	Yes	No	-
	02	SS2 active	Yes	No	-
	03	SOS active	Yes	No	-
	04	SLS active	Yes	No	-
	06	SLP active	Yes	No	2822
	07	Internal event	No	Yes	-
	09	Active SLS stage bit 0	Set	Not set	-
	10	Active SLS stage bit 1	Set	Not set	-
	11	SOS selected	Yes	No	-
	12	SDI positive active	Yes	No	2824
	13	SDI negative active	Yes	No	2824
	15	SSM (speed below limit value)	Yes	No	2823
	19	SLP active position area	SLP2	SLP1	2822
	22	SP valid	Yes	No	-
	23	Safely referenced	Yes	No	-
	28	SS2E active	Yes	No	-
	30	SLP limit upper maintained	Yes	No	2822
	31	SLP limit lower maintained	Yes	No	2822
<b>Notice:</b>	For bit 07: The signal state behaves in an opposite way to the PROFIsafe Standard.				

## 2 Parameters

### 2.2 List of parameters

**Note:** This parameter is only supplied with actual values in the case of Safety Integrated Extended Functions. For Safety Integrated Basic Functions (SBC, SS1, STO), the value is equal to zero.  
For bit 07:  
An internal event is displayed if a STOP A ... F is active.

<b>r9723.0...17</b>		<b>CO/BO: SI Motion diagnostic signals integrated in the drive / SI Mtn integ diag</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the diagnostic signals for safety-relevant motion monitoring functions integrated in the drive.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Forced checking procedure required	Yes	No	-
	01	STOP F and then STOP B active	Yes	No	2819
	02	Communication failure	Yes	No	-
	03	Actual value sensing supplies valid value	Yes	No	2821
	04	Encoderless act val sensing acc to technique for U/f control	Yes	No	-
	09	Safe pulse suppression active	Yes	No	-
	12	Test stop active	Yes	No	-
	16	SAM/SBR active	Yes	No	2820
	17	Position referenced	Yes	No	2821

**Note:** For bit 00:  
A required dynamization is also displayed via alarm A01679.  
For bit 01:  
This bit can be used, to execute a drive-based or control-based ESR.  
For bit 04:  
When sensing the velocity without encoder, a distinction is made between the closed-loop speed controlled and open-loop speed controlled (U/f) modes.  
For bit 09:  
Safe pulse pulse cancellation is a state that can only occur for the combination of velocity sensing without encoder (p9506) and drive-integrated motion monitoring functions without selection (p9601.5). In this state, internally an STO is initiated, which can be withdrawn again using an OFF1 enable.  
For bit 12:  
An active test stop is also displayed using the safety message C01798.  
ESR: Extended Stop and Retract  
SAM: Safe Acceleration Monitor (safe acceleration monitoring)  
SBR: Safe Brake Ramp (safe brake ramp monitoring)

<b>r9724</b>		<b>SI Motion crosswise comparison clock cycle / SI Mtn CDC clk cyc</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [ms]	- [ms]	- [ms]	
<b>Description:</b>	Displays the crosswise comparison clock cycle. The value indicates the clock cycle time with which each individual CDC value is compared between the two monitoring channels.			
<b>Dependency:</b>	Refer to: p9500			
<b>Note:</b>	Crosswise comparison clock cycle = monitoring clock cycle (p9500) * number of data to be crosswise compared CDC: Crosswise Data Comparison			

<b>r9725[0...2]</b>	<b>SI Motion diagnostics STOP F / SI Mtn Diag STOP F</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	For index 0: Displays the message value that resulted in the STOP F on the drive. Value = 0: The Control Unit signaled a STOP F. Value = 1 ... 999: Number of the incorrect date in the crosswise data comparison between the monitoring channels. Value >= 1000: Additional diagnostic values of the drive. For index 1: Displays the value of the Control Unit that resulted in the STOP F. For index 2: Displays the value from the second channel that resulted in the STOP F.		
<b>Index:</b>	[0] = Message value for CDC [1] = Control Unit CDC actual value [2] = Components CDC actual value		
<b>Dependency:</b>	Refer to: C01711		
<b>Note:</b>	The significance of the individual message values is described in message C01711. CDC: Crosswise Data Comparison For index 1, 2: When Safety message C01711 with message value >= 1000 occurs, these indices are not supplied with values.		
<b>p9726</b>	<b>SI Motion user agreement selection/de-selection / SI Mtn UserAgr sel</b>		
VECTOR_G	<b>Can be changed:</b> U, T <b>Data type:</b> Integer16 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 00AC hex	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 hex
<b>Description:</b>	Setting to select and de-select the user agreement.		
<b>Value:</b>	0: [00 hex] De-select user agreement 172: [AC hex] Select user agreement		
<b>Dependency:</b>	Refer to: r9727		
<b>r9727</b>	<b>SI Motion user agreement inside the drive / SI Mtn UserAgr int</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> Integer16 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2822 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the internal state of the user agreement. Value = 0: User agreement is not set. Value = AC hex: User agreement is set.		
<b>Dependency:</b>	Refer to: p9726		

<b>r9728[0...2]</b>	<b>SI Motion actual checksum SI parameters / SI Mtn act CRC</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the checksum over the checked Safety Integrated parameters of the motion monitoring functions (actual checksum).		
<b>Index:</b>	[0] = Checksum over SI parameters for motion monitoring [1] = Checksum over SI parameters for actual values [2] = Checksum over SI parameters for hardware		
<b>Dependency:</b>	Refer to: p9729 Refer to: F01680		
<b>p9729[0...2]</b>	<b>SI Motion reference checksum SI parameters / SI Mtn ref CRC</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the checksum using the checksum-tested Safety Integrated parameters for motion monitoring functions (reference checksum).		
<b>Index:</b>	[0] = Checksum over SI parameters for motion monitoring [1] = Checksum over SI parameters for actual values [2] = Checksum over SI parameters for hardware		
<b>Dependency:</b>	Refer to: r9728 Refer to: F01680		
<b>r9730</b>	<b>SI Motion Safe maximum velocity / SI mtn safe v_Max</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mm/min]	- [mm/min]	- [mm/min]
<b>Description:</b>	Displays the safe maximum velocity (on the load side) that is permissible for the safe motion monitoring functions as a result of the actual value sensing. This parameter indicates up to which load velocity the safe encoder actual values (redundant encoder coarse position) can still be correctly detected as a result of the particular encoder parameterization. This parameter is only of significance for enabled safety with encoder (otherwise "0").		
<b>Note:</b>	If the value displayed is exceeded, message C01711 is output indicating relevant subsequent faults.		

<b>r9730</b>	<b>SI Motion Safe maximum velocity / SI mtn safe v_Max</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> - [rpm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [rpm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [rpm]
<b>Description:</b>	Displays the safe maximum velocity (on the load side) that is permissible for the safe motion monitoring functions as a result of the actual value sensing. This parameter indicates up to which load velocity the safe encoder actual values (redundant encoder coarse position) can still be correctly detected as a result of the particular encoder parameterization. This parameter is only of significance for enabled safety with encoder (otherwise "0").		
<b>Note:</b>	If the value displayed is exceeded, message C01711 is output indicating relevant subsequent faults.		
<b>r9731</b>	<b>SI Motion safe position accuracy / SI Mtn pos acc</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> - [mm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [mm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [mm]
<b>Description:</b>	Displays the safe position accuracy (load side). As a result of the actual value sensing for safe motion monitoring functions, this accuracy can be achieved as the maximum.  In the case of the two encoder system, the accuracy of the poorer encoder is displayed, based on the number of encoder pulses.		
<b>Note:</b>	The parameter is only of significance for enabled safety with encoder (otherwise "0").		
<b>r9731</b>	<b>SI Motion safe position accuracy / SI Mtn pos acc</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> - [°]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [°]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [°]
<b>Description:</b>	Displays the safe position accuracy (load side). As a result of the actual value sensing for safe motion monitoring functions, this accuracy can be achieved as the maximum.  In the case of the two encoder system, the accuracy of the poorer encoder is displayed, based on the number of encoder pulses.		
<b>Note:</b>	The parameter is only of significance for enabled safety with encoder (otherwise "0").		

<b>r9732[0...1]</b>		<b>SI Motion velocity resolution / SI Mtn v_res</b>		
VECTOR_G	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> - [mm/min]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [mm/min]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [mm/min]	
<b>Description:</b>	Displays the velocity resolution for safety-relevant motion monitoring functions. For index 0: Displays the safe velocity resolution (load side). Setpoints for velocity limits or parameter changes for velocities below this threshold have no effect. For index 1: Displays the safe velocity accuracy based on the safe encoder accuracy			
<b>Index:</b>	[0] = Actual velocity resolution [1] = Minimum velocity resolution			
<b>Note:</b>	For index 0: This parameter does not provide any information about the actual accuracy of the velocity sensing. This depends on the type of actual value sensing, the gear factors as well as the quality of the encoder being used. Conversion of: (internal fixed value/ Tsi) to mm/min (linear) or rpm (rotary) with Tsi = p9500 (SI Motion monitoring clock cycle). Example: For Tsi = 12 ms, r9732[0] = 5 mm/min (linear) or 1/72 rpm (rotary) is obtained. For index 1: - for a 2-encoder system with non safety-capable encoders, this means the poorer value for both encoders. Index[1] takes into account the coarse resolution of the encoder only Internal calculation, which also incorporates the factor for the motor-load side conversion, the gearbox ratio and the safety monitoring clock cycle. Result returns mm/min (linear) or rpm (rotary). - for safety without encoder, index 1 is not relevant, and is always the value of zero.			

<b>r9732[0...1]</b>		<b>SI Motion velocity resolution / SI Mtn v_res</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> - [rpm]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [rpm]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [rpm]	
<b>Description:</b>	Displays the velocity resolution for safety-relevant motion monitoring functions. For index 0: Displays the safe velocity resolution (load side). Setpoints for velocity limits or parameter changes for velocities below this threshold have no effect. For index 1: Displays the safe velocity accuracy based on the safe encoder accuracy			
<b>Index:</b>	[0] = Actual velocity resolution [1] = Minimum velocity resolution			
<b>Note:</b>	For index 0: This parameter does not provide any information about the actual accuracy of the velocity sensing. This depends on the type of actual value sensing, the gear factors as well as the quality of the encoder being used. Conversion of: (internal fixed value/ Tsi) to mm/min (linear) or rpm (rotary) with Tsi = p9500 (SI Motion monitoring clock cycle). Example: For Tsi = 12 ms, r9732[0] = 5 mm/min (linear) or 1/72 rpm (rotary) is obtained.			

For index 1:

- for a 2-encoder system with non safety-capable encoders, this means the poorer value for both encoders. Index[1] takes into account the coarse resolution of the encoder only

Internal calculation, which also incorporates the factor for the motor-load side conversion, the gearbox ratio and the safety monitoring clock cycle. Result returns mm/min (linear) or rpm (rotary).

- for safety without encoder, index 1 is not relevant, and is always the value of zero.

<b>r9733[0...2]</b>		<b>CO: SI Motion setpoint speed limit effective / SI Mtn setp_lim</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2820, 2824, 3630	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> 3_1	<b>Unit selection:</b> p0505	
	<b>Not for motor type:</b> -	<b>Scaling:</b> p2000	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	- [rpm]	- [rpm]	- [rpm]	
<b>Description:</b>	Displays the necessary setpoint speed limit as a result of the selected motion monitoring functions. Contrary to the parameterization of the SI limit values, this parameter specifies the motor-side limit value and not the load-side limit value.			
<b>Recommendation:</b>	For the ramp-function generator, by appropriately interconnecting the speed limits p1051 and p1052 with r9733[0, 1], a drive-based setpoint velocity limiting can be realized. - CI: p1051 = r9733[0] - CI: p1052 = r9733[1] Additional limiting can also be activated using connector input p1085 and p1088.			
<b>Index:</b>	[0] = Setpoint limiting positive [1] = Setpoint limiting negative [2] = Setpoint limit absolute			
<b>Dependency:</b>	For SLS: $r9733[0] = p9531[x] \times p9533$ (converted from the load side to the motor side) For SDI negative: $r9733[0] = 0$ For SLS: $r9733[1] = -p9531[x] \times p9533$ (converted from the load side to the motor side) For SDI positive: $r9733[1] = 0$ [x] = Selected SLS stage Conversion factor from the motor side to the load side: - motor type = rotary and axis type = linear: $p9522 / (p9521 \times p9520)$ - otherwise: $p9522 / p9521$ Refer to: p9531, p9533			
<b>Notice:</b>	If p1051 = r9733[0] is interconnected, p1052 = r9733[1] must also be interconnected and vice versa. If only the absolute value of the setpoint velocity limiting is required, r9733[2] must be interconnected.			
<b>Note:</b>	The unit changeover between linear and rotary axis is not implemented via the safety changeover (p9502) but by the linear motor changeover. If the "SLS" or "SDI" function is not selected, r9733[0] shows p1082 and r9733[1] shows -p1082. The display in r9733 can be delayed by up to one Safety monitoring clock cycle as compared to the display in r9719/r9720 and r9721/r9722.			

<b>r9734.0...15</b>		<b>CO/BO: SI Safety Info Channel status word S_ZSW1B / SIC S_ZSW1B</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for status word S_ZSW1B of the safety information channel.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	STO active	Yes	No	-
	01	SS1 active	Yes	No	-
	02	SS2 active	Yes	No	-
	03	SOS active	Yes	No	-

## 2 Parameters

### 2.2 List of parameters

04	SLS active	Yes	No	-
05	SOS selected	Yes	No	-
06	SLS selected	Yes	No	-
07	Internal event	Yes	No	-
09	Select SLS bit0	Yes	No	-
10	Select SLS bit1	Yes	No	-
12	SDI positive selected	Yes	No	-
13	SDI neg selected	Yes	No	-
14	ESR retract requested	Yes	No	-
15	Safety message present	Yes	No	-

**Note:** SIC: Safety Info Channel  
 For bit 07:  
 An internal event is displayed if a STOP A ... F is active.

---

#### p9740 SI Motion user agreement selection/de-selection MM / SI mtn UserAgr MM

VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	00AC hex	0000 hex

**Description:** Setting to select and de-select the user agreement on the Motor Module/Hydraulic Module.

**Value:** 0: [00 hex] De-select user agreement  
 172: [AC hex] Select user agreement

**Dependency:** Refer to: r9741

---

#### r9741 SI Motion user agreement inside the drive MM / SI Mtn UserAgr int

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2822
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the internal state of the user agreement.

Value = 0: User agreement is not set.  
 Value = AC hex: User agreement is set.

**Dependency:** Refer to: p9740

---

#### r9743.4...15 CO/BO: SI Safety Info Channel status word S\_ZSW2B / SIC S\_ZSW2B

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Display and BICO output for status word S\_ZSW2B of the safety information channel.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	04	SLP selected position area	SLP2	SLP1	-
	07	SLP selected and user agreement set	Yes	No	-
	08	SDI positive selected	Yes	No	-
	09	SDI neg selected	Yes	No	-
	12	Test stop active	Yes	No	-
	13	Test stop required	Yes	No	-
	14	Reference position required	Yes	No	-
	15	Reference trigger command identified or reference position valid	Yes	No	-

**Note:** SIC: Safety Info Channel

---

### r9744 SI message buffer changes, counter / SI msg\_buffer chng

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the changes of the safety message buffer.  
This counter is incremented every time that the safety message buffer changes.

**Recommendation:** This is used to check whether the safety message buffer has been read out consistently.

**Dependency:** Refer to: r9747, r9748, r9749, p9752, r9753, r9754, r9755, r9756

---

### r9745[0...63] SI components / SI comp

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the component of the safety message that has occurred.

**Note:** Value = 0: Assignment to a component not possible.

---

### r9747[0...63] SI message code / SI msg\_code

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the numbers of safety messages that have occurred.

**Dependency:** Refer to: r9744, r9748, r9749, p9752, r9753, r9754, r9755, r9756

**Note:** The messages type "safety message" (Cxxxxx) are entered in the message fault buffer.

Message buffer structure (principle):

r9747[0], r9748[0], r9749[0], r9753[0], r9754[0], r9755[0], r9756[0] --> Actual message case, safety message 1

...

r9747[7], r9748[7], r9749[7], r9753[7], r9754[7], r9755[7], r9756[7] --> Actual message case, safety message 8

r9747[8], r9748[8], r9749[8], r9753[8], r9754[8], r9755[8], r9756[8] --> 1st acknowledged message case, safety message 1

...

r9747[15], r9748[15], r9749[15], r9753[15], r9754[15], r9755[15], r9756[15] --> 1st acknowledged message case, safety message 8

...

r9747[56], r9748[56], r9749[56], r9753[56], r9754[56], r9755[56], r9756[56] --> 7th acknowledged message case, safety message 1

...

r9747[63], r9748[63], r9749[63], r9753[63], r9754[63], r9755[63], r9756[63] --> 7th acknowledged message case, safety message 8

<b>r9748[0...63]</b>	<b>SI message time received in milliseconds / SI t_msg_rcv_ms</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ms]	- [ms]	- [ms]
<b>Description:</b>	Displays the relative system runtime in milliseconds when the safety message occurred.		
<b>Dependency:</b>	Refer to: r9744, r9747, r9749, p9752, r9753, r9754, r9755, r9756		

<b>r9749[0...63]</b>	<b>SI message value / SI msg_value</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the additional information about the safety message that occurred (as integer number).		
<b>Dependency:</b>	Refer to: r9744, r9747, r9748, p9752, r9753, r9754, r9755, r9756		

<b>r9750[0...63]</b>	<b>SI diagnostic attributes / SI diag_attr</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the diagnostic attributes of the safety messages that have occurred.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Hardware replacement recommended	Yes	No	-
	15	Message has gone	Yes	No	-
	16	PROFIdrive fault class bit 0	High	Low	-
	17	PROFIdrive fault class bit 1	High	Low	-
	18	PROFIdrive fault class bit 2	High	Low	-
	19	PROFIdrive fault class bit 3	High	Low	-
	20	PROFIdrive fault class bit 4	High	Low	-

**Note:** The buffer parameters are cyclically updated in the background (refer to status signal in r2139).  
 The structure of the SI message buffer and the assignment of the indices is shown in r9747.  
 For bits 20 ... 16:  
 Bits 20, 19, 18, 17, 16 = 0, 0, 0, 0, 0 --> PROFIdrive message class 0: not assigned  
 Bits 20, 19, 18, 17, 16 = 0, 0, 0, 0, 1 --> PROFIdrive message class 1: hardware fault/software error  
 Bits 20, 19, 18, 17, 16 = 0, 0, 0, 1, 0 --> PROFIdrive message class 2: line fault  
 Bits 20, 19, 18, 17, 16 = 0, 0, 0, 1, 1 --> PROFIdrive message class 3: supply voltage fault  
 Bits 20, 19, 18, 17, 16 = 0, 0, 1, 0, 0 --> PROFIdrive message class 4: DC link fault  
 Bits 20, 19, 18, 17, 16 = 0, 0, 1, 0, 1 --> PROFIdrive message class 5: power electronics faulted  
 Bits 20, 19, 18, 17, 16 = 0, 0, 1, 1, 0 --> PROFIdrive message class 6: overtemperature electronic components  
 Bits 20, 19, 18, 17, 16 = 0, 0, 1, 1, 1 --> PROFIdrive message class 7: ground fault/phase fault detected  
 Bits 20, 19, 18, 17, 16 = 0, 1, 0, 0, 0 --> PROFIdrive message class 8: motor overload  
 Bits 20, 19, 18, 17, 16 = 0, 1, 0, 0, 1 --> PROFIdrive message class 9: communication error to the higher-level control  
 Bits 20, 19, 18, 17, 16 = 0, 1, 0, 1, 0 --> PROFIdrive message class 10: safe monitoring channel has identified an error  
 Bits 20, 19, 18, 17, 16 = 0, 1, 0, 1, 1 --> PROFIdrive message class 11: incorrect position actual value/speed actual value or not available  
 Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 0 --> PROFIdrive message class 12: internal (DRIVE-CLiQ) communication error

Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 1 --> PROFIdrive message class 13: infeed unit faulted  
 Bits 20, 19, 18, 17, 16 = 0, 1, 1, 1, 0 --> PROFIdrive message class 14: braking controller/Braking Module faulted  
 Bits 20, 19, 18, 17, 16 = 0, 1, 1, 1, 1 --> PROFIdrive message class 15: line filter faulted  
 Bits 20, 19, 18, 17, 16 = 1, 0, 0, 0, 0 --> PROFIdrive message class 16: external measured value/signal state outside the permissible range  
 Bits 20, 19, 18, 17, 16 = 1, 0, 0, 0, 1 --> PROFIdrive message class 17: application/technology function faulted  
 Bits 20, 19, 18, 17, 16 = 1, 0, 0, 1, 0 --> PROFIdrive message class 18: error in the parameterization/configuration/commissioning sequence  
 Bits 20, 19, 18, 17, 16 = 1, 0, 0, 1, 1 --> PROFIdrive message class 19: general  
 Bits 20, 19, 18, 17, 16 = 0, 1, 1, 0, 0 --> PROFIdrive message class 20: auxiliary unit faulted

---

**p9752 SI message cases counter / SI msg\_cases count**

VECTOR_G	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65535	0

**Description:** Number of safety messages that have occurred since the last reset.  
**Dependency:** The safety message buffer is cleared by resetting the parameter to 0.  
 Refer to: r9744, r9747, r9748, r9749, r9753, r9754, r9755, r9756  
**Note:** The parameter is reset to 0 at POWER ON.

---

**r9753[0...63] SI message value for float values / SI msg\_val float**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays additional information about the safety message that has occurred for float values.  
**Dependency:** Refer to: r9744, r9747, r9748, r9749, p9752, r9754, r9755, r9756

---

**r9754[0...63] SI message time received in days / SI t\_msg rcv days**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the relative system runtime in days when the safety message occurred.  
**Dependency:** Refer to: r9744, r9747, r9748, r9749, p9752, r9753, r9755, r9756

---

**r9755[0...63] SI message time removed in milliseconds / SI t\_msg rem ms**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ms]	- [ms]	- [ms]

**Description:** Displays the relative system runtime in milliseconds when the safety message was removed.  
**Dependency:** Refer to: r9744, r9747, r9748, r9749, p9752, r9753, r9754, r9756

<b>r9756[0...63]</b>	<b>SI message time removed in days / SI t_msg rem days</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Messages	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the relative system runtime in days when the safety message was removed.		
<b>Dependency:</b>	Refer to: r9744, r9747, r9748, r9749, p9752, r9753, r9754, r9755		
<b>p9761</b>	<b>SI password input / SI password inp</b>		
VECTOR_G	<b>Can be changed:</b> C1, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2800
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Enters the Safety Integrated password.		
<b>Dependency:</b>	Refer to: F01659		
<b>Note:</b>	It is not possible to change Safety Integrated parameters until the Safety Integrated password has been entered.		
<b>p9762</b>	<b>SI password new / SI password new</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2800
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Enters a new Safety Integrated password.		
<b>Dependency:</b>	A change made to the Safety Integrated password must be acknowledged in the following parameter: Refer to: p9763		
<b>p9763</b>	<b>SI password acknowledgment / SI ackn password</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2800
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Acknowledges the new Safety Integrated password.		
<b>Dependency:</b>	Refer to: p9762		
<b>Note:</b>	The new password entered into p9762 must be re-entered in order to acknowledge. p9762 = p9763 = 0 is automatically set after the new Safety Integrated password has been successfully acknowledged.		

**r9765 SI Motion forced check procedure remaining time (Control Unit) / SI Mtn dyn remain**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [h]	- [h]	- [h]

**Description:** Displays the time remaining until the next dynamization and testing of the safety motion monitoring functions integrated in the drives.

The signal source to initiate the forced checking procedure is parameterized in p9705.

**Dependency:** Refer to: p9705  
Refer to: C01798

**r9768[0...7] SI PROFIsafe receive control words (Control Unit) / SI Ps PZD recv CU**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the received PROFIsafe telegram on the Control Unit.

**Index:** [0] = PZD 1  
[1] = PZD 2  
[2] = PZD 3  
[3] = PZD 4  
[4] = PZD 5  
[5] = PZD 6  
[6] = PZD 7  
[7] = PZD 8

**Dependency:** Refer to: r9769

**Note:** The PROFIsafe trailer at the end of the telegram is also displayed (2 words).

**r9769[0...7] SI PROFIsafe send status words (Control Unit) / SI Ps PZD send CU**

VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the PROFIsafe telegram to be sent on the Control Unit.

**Index:** [0] = PZD 1  
[1] = PZD 2  
[2] = PZD 3  
[3] = PZD 4  
[4] = PZD 5  
[5] = PZD 6  
[6] = PZD 7  
[7] = PZD 8

**Dependency:** Refer to: r9768

**Note:** The PROFIsafe trailer at the end of the telegram is also displayed (2 words).

<b>r9770[0...3]</b>		<b>SI version drive-integrated safety function (Control Unit) / SI version Drv CU</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2802	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the Safety Integrated version for the drive-integrated safety functions on the Control Unit.			
<b>Index:</b>	[0] = Safety Version (major release) [1] = Safety Version (minor release) [2] = Safety Version (baselevel or patch) [3] = Safety Version (hotfix)			
<b>Dependency:</b>	Refer to: r9870, r9890			
<b>Note:</b>	Example: r9770[0] = 2, r9770[1] = 60, r9770[2] = 1, r9770[3] = 0 --> Safety version V02.60.01.00			

<b>r9771</b>		<b>SI common functions (Control Unit) / SI common fct CU</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2804		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the supported Safety Integrated monitoring functions supported on both monitoring channels. The Control Unit determines this display.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	STO supported via terminals	Yes	No	2804
	01	SBC supported	Yes	No	2804
	02	Extended Functions supported (p9501 > 0)	Yes	No	2804
	03	SS1 supported	Yes	No	2804
	04	Extended Functions PROFIsafe supported	Yes	No	-
	05	Extended Functions integrated in drive supported (p9601.2 = 1)	Yes	No	-
	06	Basic Functions PROFIsafe supported	Yes	No	-
	07	Extended Functions encoderless supported	Yes	No	-
	08	Safe Brake Adapter supported	Yes	No	-
	09	Basic Functions PROFIsafe for parallel connection supported	Yes	No	-
	10	Extended Functions integrated in drive for parallel connection	Yes	No	-
	11	Extended Functions SDI supported	Yes	No	-
	12	Extended Functions SSM encoderless supported	Yes	No	-
	13	ESR delay of the pulse suppression	Yes	No	-
	14	SBC for parallel connection supported	Yes	No	-
	15	SLS limit SP supported via PROFIsafe	Yes	No	-
	16	Safety functions without selection, SLP, SS1E supported	Yes	No	-
	17	Safe gearbox stage switchover ref supported via SCC	Yes	No	-
	18	Controlling Basic Functions with TM54F	Yes	No	-
	20	STOP B for PROFIsafe failure supported	Yes	No	-
	21	SBR with encoder and SS2E supported	Yes	No	-
<b>Dependency:</b>	Refer to: r9871				
<b>Note:</b>	CU: Control Unit ESR: Extended Stop and Retract SBC: Safe Brake Control SBR: Safe Brake Ramp (safe brake ramp monitoring)				

SCC: Safety Control Channel  
 SDI: Safe Direction (safe motion direction)  
 SI: Safety Integrated  
 SLP: Safely Limited Position  
 SP: Safe Position  
 SS1: Safe Stop 1  
 SS1E: Safe Stop 1 External (Safe Stop 1 with external stop)  
 SS2E: Safe Stop 2 external (Safe Stop 2 with external stop, external STOP D)  
 SSM: Safe Speed Monitor (safety-related feedback signal from the velocity monitoring) / SGA n < nx: Safety-related output n < nx  
 STO: Safe Torque Off / SH: Safe standstill  
 For bit 16:  
 SS1E is supported for Safety Extended Functions.

<b>r9772.0...23</b>		<b>CO/BO: SI status (Control Unit) / SI status CU</b>			
<b>VECTOR_G</b>	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2804		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the Safety Integrated status on the Control Unit.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	STO or safe pulse cancellation on CU selected	Yes	No	2810
	01	STO or safe pulse cancellation on CU active	Yes	No	2810
	02	SS1 delay time active on CU	Yes	No	2810
	04	SBC requested	Yes	No	2814
	05	SS1 on CU selected (Basic Functions)	Yes	No	-
	06	SS1 on CU active (Basic Functions)	Yes	No	-
	07	STO terminal state on CU (Basic Functions)	High	Low	-
	09	STOP A cannot be acknowledged active	Yes	No	2802
	10	STOP A active	Yes	No	2802
	15	STOP F active	Yes	No	2802
	16	STO cause: Safety comm. mode	Yes	No	-
	17	STO cause selection via terminal (Basic Functions)	Yes	No	-
	18	STO cause selection via Safe Motion Monitoring (SMM)	Yes	No	-
	19	STO cause actual value missing or safe pulse cancellation	Yes	No	-
	20	STO cause selection PROFIsafe/TM54F (Basic Functions)	Yes	No	-
	21	STO cause selection on other monitoring channel	Yes	No	-
	22	SS1 cause selection terminal (Basic Functions)	Yes	No	-
	23	SS1 cause selection PROFIsafe/TM54F (Basic Functions)	Yes	No	-
<b>Dependency:</b>	Refer to: r9872				
<b>Note:</b>	For bit 00:				
	When STO or "Safe pulse cancellation" is selected, the cause is displayed in bits 16 ... 21.				
	For bit 01:				
	- For p9772.1 = 1 and p9772.19 = 0, an STO from the Safety Basic functions is active.				
	- For p9772.1 = 1 and p9772.19 = 1, safe pulse cancellation is active, if safety functions without selection are activated via p9601.2/p9801.2 = 1 and p9601.5/p9801.5 = 1.				
	<b>Note:</b>				
	If p9601.0 = 1 and p9601.2 = 1 and p9801.5 = 1 then for bit 0 and 1, the STO function applies.				

## 2 Parameters

### 2.2 List of parameters

For bit 05:

When SS1 is selected, the cause is displayed in bits 22 and 23.

For bit 18:

When the bit is set, STO is selected via PROFIsafe or Terminal Module 54F (TM54F).

For bit 19:

With SMM encoderless no actual value sensing is possible on account of OFF2.

With SMM with encoder no actual value sensing is possible on account of parking.

For Safety functions without selection, safe pulse cancellation to selected (p9772.19 = 1).

SMM: Safe Motion Monitoring

For bit 22 and 23:

These bits show via which path the SS1 has been triggered, i.e. what has started the SS1 delay time.

If the SS1 delay time is not started (e.g. because an STO is triggered at the same time), neither of the two bits is set.

#### r9773.0...31

#### CO/BO: SI status (Control Unit + Motor Module) / SI status CU+MM

VECTOR\_G

**Can be changed:** -

**Calculated:** -

**Access level:** 2

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** 2804

**P-Group:** Safety Integrated

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

#### Description:

Display and BICO output of the Safety Integrated status on the drive (Control Unit + Motor Module).

#### Bit field:

Bit	Signal name	1 signal	0 signal	FP
00	STO selected in drive	Yes	No	2804
01	STO active in drive	Yes	No	2804
02	SS1 delay time active in the drive	Yes	No	2804
04	SBC requested	Yes	No	2804
05	SS1 selected in the drive (Basic Functions)	Yes	No	-
06	SS1 active in the drive (Basic Functions)	Yes	No	-
31	Switch-off signal paths must be tested	Yes	No	2810

#### Note:

This status is formed from the AND operation of the relevant status of the two monitoring channels.

#### r9774.0...31

#### CO/BO: SI status (group STO) / SI stat group STO

VECTOR\_G

**Can be changed:** -

**Calculated:** -

**Access level:** 2

**Data type:** Unsigned32

**Dyn. index:** -

**Func. diagram:** 2804

**P-Group:** Safety Integrated

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

#### Description:

Display and BICO output for the Safety Integrated status of the group to which this drive belongs.

These signals are an AND logic operation of the individual status signals of the drives included in this group.

#### Bit field:

Bit	Signal name	1 signal	0 signal	FP
00	STO selected in group	Yes	No	2804
01	STO active in group	Yes	No	2804
02	SS1 delay time active in group	Yes	No	-
04	SBC requested in group	Yes	No	2804
05	SS1 selected in group (Basic Functions)	Yes	No	-
06	SS1 active in group (Basic Functions)	Yes	No	-
31	Switch-off signal paths of the group must be tested	Yes	No	2804

#### Dependency:

Refer to: p9620, r9773

#### Notice:

If a drive belonging to a group is deactivated via p0105, then the signals in r9774 can no longer be correctly displayed (Remedy: Before deactivating, remove this drive from the group).

#### Note:

A group is formed by appropriately grouping the terminals for the function "Safe Torque Off" (STO).

The status of a group of n drives is, for drives 1 to n - 1 displayed with a delay of one monitoring clock cycle; this is a system-related effect.

<b>r9776.0...3</b>		<b>BO: SI diagnostics / SI diag</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	The parameter is used for diagnostics.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Safety parameter changed POWER ON required	Yes	No	-
	01	Safety functions enabled	Yes	No	-
	02	Safety component replaced and data save required	Yes	No	-
	03	Safety component replaced and acknowledge/save required	Yes	No	-
<b>Dependency:</b>	Refer to: r9793				
<b>Note:</b>	For bit 00 = 1: At least one Safety parameter has been changed that will only take effect after a POWER ON.				
	For bit 01 = 1: Safety functions (basic functions or extended functions) have been enabled and are active.				
	For bit 02 = 1: A safety-relevant component has been replaced. Data save required (p0977 = 1 or p0971 = 1 or "copy RAM to ROM").				
	For bit 03 = 1: A safety-relevant component has been replaced. Acknowledge (p9702 = 29) and save (p0977 = 1 or p0971 = 1 or "Copy RAM to ROM") required.				

<b>r9776.0...2</b>		<b>BO: SI diagnostics / SI diag</b>			
TM54F_MA	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	The parameter is used for diagnostics.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Safety parameter changed POWER ON required	Yes	No	-
	01	Safety functions enabled	Yes	No	-
	02	Safety component replaced and data save required	Yes	No	-
<b>Dependency:</b>	Refer to: r9793				
<b>Note:</b>	For bit 00 = 1: At least one Safety parameter has been changed that will only take effect after a POWER ON.				
	For bit 01 = 1: Safety functions (basic functions or extended functions) have been enabled and are active.				
	For bit 02 = 1: A safety-relevant component has been replaced. Data save required (p0977 = 1 or p0971 = 1 or "copy RAM to ROM").				

---

<b>r9780</b>	<b>SI monitoring clock cycle (Control Unit) / SI monitor_click CU</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2802
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ms]	- [ms]	- [ms]
<b>Description:</b>	Displays the clock cycle time for the Safety Integrated Basic Functions on the Control Unit.		
<b>Dependency:</b>	Refer to: r0110, p0115, r9880		
<b>Note:</b>	Information regarding the relationship between monitoring clock cycle and response times can be found in the following references: - SINAMICS S120 Function Manual Safety Integrated - technical documentation for the particular product		

---

<b>r9781[0...1]</b>	<b>SI checksum to check changes (Control Unit) / SI chg chksm CU</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the checksum for tracking changes for Safety Integrated. These are additional checksums that are created to track changes (fingerprint for the "safety logbook" functionality) to safety parameters (that are relevant for checksums).		
<b>Index:</b>	[0] = SI checksum to track functional changes [1] = SI checksum to track hardware-specific changes		
<b>Dependency:</b>	Refer to: p9601, p9729, p9799 Refer to: F01690		

---

<b>r9782[0...1]</b>	<b>SI time stamps to check changes (Control Unit) / SI chg t CU</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [h]	- [h]	- [h]
<b>Description:</b>	Displays the time stamps for the checksums for tracking changes for Safety Integrated. The time stamps for the checksums for tracking changes (fingerprint for the "safety logbook" functionality) made to safety parameters are saved in parameters p9781[0] and p9781[1].		
<b>Index:</b>	[0] = SI time stamp for checksum to track functional changes [1] = SI time stamp for checksum to track hardware-specific changes		
<b>Dependency:</b>	Refer to: p9601, p9729, p9799 Refer to: F01690		

<b>p9783</b>	<b>SI Motion act. value sensing sensorless synchr. motor I_inject / Actv sl sync I_inj</b>		
VECTOR_G (n/M)	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-50.00 [%]	0.00 [%]	-20.00 [%]
<b>Description:</b>	Sets the additional field-generating current for synchronous motors with sensorless actual value sensing. The set value is referred to p0305. This parameter ensures a "base load" for the motor. The value must fulfill the following condition:  p0305 x p9783  >= p9588 x 1.2		
<b>Dependency:</b>	Refer to: p9588 Refer to: C01711		
<b>Notice:</b>	Reducing this percentage value can adversely affect actual value sensing with synchronous motors. If the value is increased, this results in an increased motor power loss.		
<b>Note:</b>	This parameter is only effective for encoderless actual value sensing (p9506/p9306 = 1, 3). For p9783 = maximum value, current injection is deactivated. Current injection is not effective in the U/f control mode.		
<b>r9784[0...1]</b>	<b>SI Motion diagnostics sensorless acceleration / Diag sl a</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mm/s <sup>2</sup> ]	- [mm/s <sup>2</sup> ]	- [mm/s <sup>2</sup> ]
<b>Description:</b>	Display to diagnose acceleration values of the encoderless actual values sensing.		
<b>Index:</b>	[0] = Setpoint acceleration value [1] = Actual acceleration value		
<b>Dependency:</b>	Refer to: p9589		
<b>Note:</b>	For index 0: Shows the parameterized acceleration value of p9589. For index 1: Shows the actually measured acceleration values of the encoderless actual value sensing		
<b>r9784[0...1]</b>	<b>SI Motion diagnostics sensorless acceleration / Diag sl a</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rev/s <sup>2</sup> ]	- [rev/s <sup>2</sup> ]	- [rev/s <sup>2</sup> ]
<b>Description:</b>	Display to diagnose acceleration values of the encoderless actual values sensing.		
<b>Index:</b>	[0] = Setpoint acceleration value [1] = Actual acceleration value		
<b>Dependency:</b>	Refer to: p9589		
<b>Note:</b>	For index 0: Shows the parameterized acceleration value of p9589. For index 1: Shows the actually measured acceleration values of the encoderless actual value sensing		

<b>r9785[0...1]</b>	<b>SI Motion diagnostics sensorless minimum current / Diag sl I_min</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> 6_3	<b>Unit selection:</b> p0505
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mA]	- [mA]	- [mA]
<b>Description:</b>	Display to diagnose currents of the encoderless actual value sensing.		
<b>Index:</b>	[0] = Minimum current parameterized [1] = Minimum current measured		
<b>Dependency:</b>	Refer to: p9588		
<b>Note:</b>	For index 0: Displays the parameterized minimum current of p9588. For index 1: Displays the currently measured current of the encoderless actual value sensing		
<b>r9786[0...2]</b>	<b>SI Motion diagnostics sensorless angle / Diag sl angle</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [°]	- [°]	- [°]
<b>Description:</b>	Display to diagnose the angle for sensorless actual value sensing.		
<b>Index:</b>	[0] = Plausibility angle actual value [1] = Voltage angle actual value [2] = Current angle actual value		
<b>Dependency:</b>	Refer to: p9585		
<b>Note:</b>	For index 0: Displays the actual plausibility angle. For index 1: Displays the actual voltage angle. For index 2: Displays the actual current angle.		
<b>r9787</b>	<b>SI Motion diagnostics sensorless velocity deviation / Diag sl v_dev</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [mm/min]	- [mm/min]	- [mm/min]
<b>Description:</b>	Displays the actual velocity deviation for sensorless actual value sensing. This value is calculated when setting p9585/p9385. The actual velocity has a deviation of +/- r9787 for 6 ms * p9585/p9385 within a monitoring time of 1 s.		
<b>Dependency:</b>	Refer to: p9585		
<b>Note:</b>	For linear axes, the following unit applies: millimeters per minute For rotary axes, the following unit applies: revolutions per minute		

<b>r9787</b>	<b>SI Motion diagnostics sensorless velocity deviation / Diag sl v_dev</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [rpm]	- [rpm]	- [rpm]
<b>Description:</b>	Displays the actual velocity deviation for sensorless actual value sensing. This value is calculated when setting p9585/p9385. The actual velocity has a deviation of +/- r9787 for 6 ms * p9585/p9385 within a monitoring time of 1 s.		
<b>Dependency:</b>	Refer to: p9585		
<b>Note:</b>	For linear axes, the following unit applies: millimeters per minute For rotary axes, the following unit applies: revolutions per minute		
<b>r9793[0...9]</b>	<b>SI diagnostics component replacement / Diag comp_replace</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the component number for the first 10 replaced safety-relevant components.		
<b>Dependency:</b>	Refer to: r9776		
<b>Note:</b>	This parameter does not exist for a Control Unit and Terminal Module.		
<b>r9794[0...19]</b>	<b>SI crosswise comparison list (Control Unit) / SI CDC_list CU</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2802
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of the data that are being presently compared crosswise on the Control Unit. The content of the list of crosswise-compared data is dependent upon the particular application.		
<b>Dependency:</b>	Refer to: r9894		
<b>Note:</b>	CDC: Crosswise Data Comparison Example: r9794[0] = 1 (monitoring clock cycle) r9794[1] = 2 (enable safety functions) r9794[2] = 3 (F-DI changeover, tolerance time) ... A complete list of numbers for crosswise-compared data items appears in fault F01611.		

---

<b>r9795</b>	<b>SI diagnostics STOP F (Control Unit) / SI diag STOP F CU</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2802
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of the cross-compared data which has caused STOP F on the Control Unit.		
<b>Dependency:</b>	Refer to: r9895 Refer to: F01611		
<b>Note:</b>	A complete list of numbers for crosswise-compared data items appears in fault F01611.		

---

<b>r9798</b>	<b>SI actual checksum SI parameters (Control Unit) / SI act_checksum CU</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2800
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the checksum over the checked Safety Integrated parameters on the Control Unit (actual checksum).		
<b>Dependency:</b>	Refer to: p9799, r9898		

---

<b>p9799</b>	<b>SI reference checksum SI parameters (Control Unit) / SI set_checksum CU</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2800
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the checksum for the checked Safety Integrated parameters on the Control Unit (reference checksum).		
<b>Dependency:</b>	Refer to: r9798, p9899		

---

<b>p9801</b>	<b>SI enable functions integrated in the drive (Motor Module) / SI enable fct MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0000 0000 bin
<b>Description:</b>	Sets the enable signals for the safety functions integrated in the drive and the type of selection on the Motor Module. Not all of the settings listed below will be permissible, depending on the Control Unit and Motor Module or Power Module being used: 0000 hex: Safety functions integrated in the drive inhibited (no safety function). 0001 hex: Basic functions are enabled via onboard terminals (permissible for r9871.0 = 1). 0004 hex: Extended functions via Terminal Module 54F (TM54F) have been enabled (permissible for r9871.5 = 1). 0005 hex: Extended functions via Terminal Module 54F (TM54F) and the basic functions via onboard terminals have been enabled (permissible for r9871.5 = 1).		

0008 hex:

Basic functions are enabled via PROFIsafe (permissible for r9871.6 = 1).

0009 hex:

Basic functions are enabled via PROFIsafe onboard terminals (permissible for r9871.6 = 1).

000C hex:

Extended functions are enabled via PROFIsafe (permissible for r9871.4 = 1).

000D hex:

Extended functions are enabled via PROFIsafe and basic functions via onboard terminals (permissible for r9871.4 = 1).

0024 hex:

Extended functions without selection are enabled (permissible for r9871.16 = 1).

0025 hex:

Extended functions without selection and basic functions via onboard terminals are enabled (permissible for r9871.16 = 1).

0040 hex:

Basic functions are enabled via TM54F

0041 hex:

Basic functions are enabled via TM54F and basic functions via onboard terminals.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	STO (SH) via terminals (MM) enable	Enable	Inhibit	2810
	02	Enable motion monitoring functions integrated in drive (MM)	Enable	Inhibit	-
	03	Enable PROFIsafe (MM)	Enable	Inhibit	-
	05	Enab motion monit functions integr in drive w/out selection (MM)	Enable	Inhibit	-
	06	Basic functions via TM54F	Enable	Inhibit	-

**Dependency:** Refer to: p9601, r9871

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** A change always becomes effective only after a POWER ON. Exception: Changes to p9801.0 become effective immediately.

MM: Motor Module

SI: Safety Integrated

SMM: Safe Motion Monitoring

STO: Safe Torque Off / SH: Safe standstill

SS1: Safe Stop 1 (corresponds to Stop Category 1 acc. to EN60204)

F-DI: Failsafe Digital Input

F-DO: Failsafe Digital Output

## p9802 SI enable Safe Brake Control (Motor Module) / SI enable SBC MM

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2814
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0

**Description:** Sets the enable signal for the "Safe Brake Control" function (SBC) on the Motor Module.

0: Inhibit SBC

1: Enable SBC

**Dependency:** Refer to: p9602

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** The "Safe Brake Control" function is not activated until at least one safety monitoring function has been enabled (i.e. p9501 not equal to 0 and/or p9801 not equal to 0).

It does not make sense to parameterize "no motor holding brake available" and enable "Safe Brake Control" (p1215 = 0, p9602 = p9802 = 1) if there is no motor holding brake.

The parameterization "motor holding brake the same as sequence control, connection via BICO" and "Safe Brake Control" enabled (p1215 = 3, p9602 = 1, p9802 = 1) is not practical.

## 2 Parameters

### 2.2 List of parameters

It is not permissible to parameterize "motor holding brake without feedback signals" and also enable "safe brake control" (p1278 = 1, p9602 = 1, p9802 = 1).

MM: Motor Module

SBC: Safe Brake Control

SI: Safety Integrated

---

<b>p9810</b>	<b>SI PROFIsafe address (Motor Module) / SI PROFIsafe MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	65534	0
<b>Description:</b>	Sets the PROFIsafe address of the Motor Module/Hydraulic module.		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<hr/>			
<b>p9811</b>	<b>SI PROFIsafe telegram selection (Motor Module) / SI Ps telegram MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	998	998
<b>Description:</b>	Sets the PROFIsafe telegram number for the Motor Module/Hydraulic Module.		
<b>Value:</b>	0: No PROFIsafe telegram selected 30: PROFIsafe standard telegram 30, PZD-1/1 31: PROFIsafe standard telegram 31, PZD-2/2 900: PROFIsafe SIEMENS telegram 900, PZD-2/2 901: PROFIsafe SIEMENS telegram 901, PZD-3/5 902: PROFIsafe SIEMENS telegram 902, PZD-3/6 998: Compatibility mode (as for firmware version < 4.5)		
<b>Dependency:</b>	Refer to: p9611, p60022		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	For p9601.3 = p9801.3 = 1 (PROFIsafe enabled), the following variants exist when parameterizing PROFIsafe telegram 30: - p9611 = p9811 = 998 and p60022 = 0 - p9611 = p9811 = 998 and p60022 = 30 - p9611 = p9811 = 30 and p60022 = 30		
<hr/>			
<b>p9812</b>	<b>SI PROFIsafe failure response (Motor Module) / SI Ps fail MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Sets the stop response when PROFIsafe communication fails.		
<b>Value:</b>	0: STOP A 1: STOP B		
<b>Dependency:</b>	Refer to: p9612		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		

**Note:** For the set stop response STOP B, in order that the OFF3 ramp is actually maintained, when just using Safety Basic functions, the following must be carefully observed:

- the transition time STOP F to STOP A (p9658, p9858) must be set longer or equal to the SS1 delay time (p9652, p9852).
- if a higher-level control responds to a drive fault by withdrawing the controller enable signals, for faults F01611 and F30611, the message type must be changed to alarm (p2118, p2119).

---

<b>p9821</b>	<b>BI: SI Safe Brake Adapter signal source (Motor Module) / SI SBA S_src MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2814
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0

**Description:** Sets the signal source for Safe Brake Adapter (SBA).  
This defines via which digital input the Safe Brake Adapter feedback signal is read-in (SBA\_DIAG).  
p9621/p9821 = 0:  
There is no Safe Brake Control (SBC) with Safe Brake Adapter (SBA) available.  
p9621/p9821 = r0722.x (x = 0, 1 ... 7)  
Safe Brake Adapter and Booksize unit (no Communication Interface Module (CIM)).  
p9621/p9821 = r9872.3  
Safe Brake Adapter and Chassis unit (CIM).

**Dependency:** Refer to: p9601, p9602, p9621

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** No difference is tolerated for a crosswise data comparison between p9621 and p9821.

To use the "Safe Brake Adapter" function the following must apply:

p9601 = p9801 <> 0 and p9602 = p9802 = 1

---

<b>p9822[0...1]</b>	<b>SI SBA relay delay times (Motor Module) / SI SBA relay t MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2814
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	1000000.00 [µs]	[0] 100000.00 [µs] [1] 65000.00 [µs]

**Description:** Sets the delay times for activating and deactivating the Safe Brake Adapter relay.  
The relay-specific minimum delay times for evaluating the feedback signal contacts have to be set. They differ for the activation and deactivation of one and the same relay.

**Index:** [0] = Wait time activation  
[1] = Wait time deactivation

**Dependency:** Refer to: p9622

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** The set time is rounded internally to an integer multiple of the monitoring clock cycle.

For index 0:

Wait time switch on = drop-out time + bounce time NO contact + effect of the free-wheeling diode in the Safe Brake Adapter

For index 1:

Wait time switch off = response time + bounce time NC contact + effect of the free-wheeling diode in the Safe Brake Adapter

---

<b>p9850</b>	<b>SI SGE changeover discrepancy time (Motor Module) / SI SGE chg t MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2810
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	2000000.00 [µs]	500000.00 [µs]
<b>Description:</b>	Sets the discrepancy time to change over the safety-related inputs (SGE) on the Motor Module/Hydraulic Module. An SGE changeover is not effective simultaneously due to the different runtimes in the two monitoring channels. After an SGE changeover, dynamic data is not subject to a crosswise data comparison during this discrepancy time.		
<b>Dependency:</b>	Refer to: p9650		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	For a crosswise data comparison between p9650 and p9850, a difference of one Safety monitoring clock cycle is tolerated. Rounding effects can occur in the last decimal place of the parameterized time. The set time is rounded internally to an integer multiple of the monitoring clock cycle. SGE: Safety-related input (e.g. STO terminals)		

---

<b>p9851</b>	<b>SI STO/SBC/SS1 debounce time (Motor Module) / SI STO t_debou MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	100000.00 [µs]	0.00 [µs]
<b>Description:</b>	Sets the debounce time for the EP terminal of the Motor Module.		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	Rounding effects can occur in the last decimal place of the parameterized time. The debounce time is rounded to whole milliseconds. It specifies the maximum duration of a fault pulse at the fail-safe digital inputs with no reaction/influence on the selection or deselection of the Safety Basic Functions. Example: Debounce time = 1 ms: Fault pulses of 1 ms are filtered; only pulses longer than 2 ms are processed. Debounce time = 3 ms: Fault pulses of 3 ms are filtered; only pulses longer than 4 ms are processed.		

---

<b>p9852</b>	<b>SI Safe Stop 1 delay time (Motor Module) / SI Stop 1 t_del MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [ms]	300000.00 [ms]	0.00 [ms]
<b>Description:</b>	Sets the delay time of the pulse suppression for the function "Safe Stop 1" (SS1) on the Motor Module to brake along the OFF3 down ramp (p1135).		
<b>Recommendation:</b>	In order that the drive can completely ramp-down along the OFF3 ramp and a motor holding brake that is possibly available can close, then the delay time should be set as follows: Motor holding brake parameterized: delay time $\geq$ p1135 + p1228 + p1217 Motor holding brake not parameterized: delay time $\geq$ p1135 + p1228		
<b>Dependency:</b>	Refer to: p1135, p9652		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		

**Note:** Pulse cancellation after failure of PROFISafe communication is delayed by this time, if "Stop B after failure of the PROFISafe communication" (9812) is parameterized.  
 For a crosswise data comparison between p9652 and p9852, a difference of one Safety monitoring clock cycle is tolerated.  
 Rounding effects can occur in the last decimal place of the parameterized time.  
 The set time is rounded internally to an integer multiple of the monitoring clock cycle.  
 SS1: Safe Stop 1 (corresponds to Stop Category 1 acc. to EN60204)

---

<b>p9858</b>	<b>SI transition time STOP F to STOP A (Motor Module) / SI STOP F-&gt;A MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2802
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	30000000.00 [µs]	0.00 [µs]

**Description:** Sets the transition period from STOP F to STOP A on the Motor Module/Hydraulic Module.

**Dependency:** Refer to: p9658, r9895

Refer to: F30611

**Notice:** This parameter is overwritten by the copy function of the safety functions integrated in the drive.

**Note:** For a crosswise data comparison between p9658 and p9858, a difference of one Safety monitoring clock cycle is tolerated.

Rounding effects can occur in the last decimal place of the parameterized time.

The set time is rounded internally to an integer multiple of the monitoring clock cycle.

If a higher-level control responds to a drive fault by withdrawing the controller enable signals, for faults F01611 and F30611, the message type must be changed to alarm (p2118, p2119). As a consequence, the drive can still be braked in a controlled fashion during this delay time.

STOP F: Defect in a monitoring channel (error in the crosswise data comparison)

STOP A: STO as a result of a fault detected by Safety Integrated

---

<b>r9870[0...3]</b>	<b>SI version drive-integrated safety function (Motor Module) / SI version MM</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2802
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Displays the Safety Integrated version for the drive-integrated safety functions on the Motor Module/Hydraulic Module.

**Index:** [0] = Safety Version (major release)  
 [1] = Safety Version (minor release)  
 [2] = Safety Version (baselevel or patch)  
 [3] = Safety Version (hotfix)

**Dependency:** Refer to: r9770, r9890

**Note:** Example:

r9870[0] = 2, r9870[1] = 60, r9870[2] = 1, r9870[3] = 0 --> Safety version V02.60.01.00

<b>r9871</b>		<b>SI common functions (Motor Module) / SI general fct MM</b>			
<b>VECTOR_G</b>	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2804		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the supported Safety Integrated monitoring functions supported on both monitoring channels. The Motor Module/Hydraulic Module determines this display.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	STO supported via terminals	Yes	No	2804
	01	SBC supported	Yes	No	2804
	02	Extended Functions supported (p9501 > 0)	Yes	No	2804
	03	SS1 supported	Yes	No	2804
	04	Extended Functions PROFIsafe supported	Yes	No	-
	05	Extended Functions integrated in drive supported (p9601.2 = 1)	Yes	No	-
	06	Basic Functions PROFIsafe supported	Yes	No	-
	07	Extended Functions encoderless supported	Yes	No	-
	08	Safe Brake Adapter supported	Yes	No	-
	09	Basic Functions PROFIsafe for parallel connection supported	Yes	No	-
	10	Extended Functions integrated in drive for parallel connection	Yes	No	-
	11	Extended Functions SDI supported	Yes	No	-
	12	Extended Functions SSM encoderless supported	Yes	No	-
	13	ESR delay of the pulse suppression	Yes	No	-
	14	SBC for parallel connection supported	Yes	No	-
	15	SLS limit SP supported via PROFIsafe	Yes	No	-
	16	Safety functions without selection, SLP, SS1E supported	Yes	No	-
	17	Safe gearbox stage switchover ref supported via SCC	Yes	No	-
	18	Controlling Basic Functions with TM54F	Yes	No	-
	20	STOP B for PROFIsafe failure supported	Yes	No	-
	21	SBR with encoder and SS2E supported	Yes	No	-
<b>Dependency:</b>	Refer to: r9771				
<b>Note:</b>	ESR: Extended Stop and Retract MM: Motor Module SBC: Safe Brake Control SBR: Safe Brake Ramp (safe brake ramp monitoring) SCC: Safety Control Channel SDI: Safe Direction (safe motion direction) SI: Safety Integrated SLP: Safely Limited Position SP: Safe Position SS1: Safe Stop 1 SS1E: Safe Stop 1 External (Safe Stop 1 with external stop) SS2E: Safe Stop 2 external (Safe Stop 2 with external stop, external STOP D) SSM: Safe Speed Monitor (safety-related feedback signal from the velocity monitoring) / SGA n < nx: Safety-related output n < nx STO: Safe Torque Off / SH: Safe standstill For bit 16: SS1E is supported for Safety Extended Functions.				

<b>r9872.0...24</b>		<b>CO/BO: SI status list (Motor Module) / SI status MM</b>			
<b>VECTOR_G</b>	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2804		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the Safety Integrated status on the Motor Module/Hydraulic Module.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	STO selected on MM	Yes	No	2810
	01	STO on MM act	Yes	No	2810
	02	SS1 delay time active on MM	Yes	No	2810
	03	Safe Brake Adapter feedback signal	Yes	No	2814
	04	SBC requested	Yes	No	2814
	05	SS1 selected on MM (Basic Functions)	Yes	No	-
	06	SS1 active on MM (Basic Functions)	Yes	No	-
	07	STO terminal state on MM (Basic Functions)	High	Low	-
	09	STOP A cannot be acknowledged active	Yes	No	2802
	10	STOP A active	Yes	No	2802
	15	STOP F active	Yes	No	2802
	16	STO cause: Safety comm. mode	Yes	No	-
	17	STO cause selection via terminal (Basic Functions)	Yes	No	-
	18	STO cause: selection via SMM	Yes	No	-
	20	STO cause selection PROFIsafe/TM54F (Basic Functions)	Yes	No	-
	21	STO cause selection on other monitoring channel	Yes	No	-
	22	SS1 cause selection terminal (Basic Functions)	Yes	No	-
	23	SS1 cause selection PROFIsafe/TM54F (Basic Functions)	Yes	No	-
	24	Slave MM ready for communication	Yes	No	-
<b>Dependency:</b>	Refer to: r9772				
<b>Notice:</b>	If communication between both monitoring channels is interrupted (e.g. by switching off the power unit), this display parameter is no longer updated. The last transferred status of the Motor Module/Hydraulic Module is displayed.				
<b>Note:</b>	For bit 00: When STO is selected, the cause is displayed in bits 16 ... 21.				
	For bit 05: When SS1 is selected, the cause is displayed in bits 22 and 23.				
	For bit 18: When the bit is set, STO is selected via PROFIsafe or Terminal Module 54F (TM54F). SMM: Safe Motion Monitoring				
	For bit 22, 23: These bits show via which path the SS1 was triggered, i.e. what has started the SS1 delay time. If the SS1 delay time is not started (e.g. because an STO is triggered at the same time), neither of the two bits is set.				
	For bit 24: Only for a parallel connection and active motion monitoring functions.				

---

<b>r9880</b>	<b>SI monitoring clock cycle (Motor Module) / SI monitor_clk MM</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2802
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [ms]	- [ms]	- [ms]
<b>Description:</b>	Displays the clock cycle time for the Safety Integrated Basic Functions on the Motor Module/Hydraulic Module.		
<b>Dependency:</b>	Refer to: r0110, p0115, r9780		
<b>Note:</b>	Information about the interrelationship between the monitoring clock cycle and the response times can be taken from the technical documentation on the particular product.		

---

<b>r9881[0...11]</b>	<b>SI Motion Sensor Module Node Identifier second channel / SI Mtn SM Ident</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the Node Identifier of the Sensor Module that the second channel uses for the motion monitoring functions.		

---

<b>r9890[0...2]</b>	<b>SI version (Sensor Module) / SI version SM</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the Safety Integrated version on the Sensor Module.		
<b>Index:</b>	[0] = Safety Version (major release) [1] = Safety Version (minor release) [2] = Safety Version (baselevel or patch)		
<b>Dependency:</b>	Refer to: r9770, r9870		
<b>Note:</b>	Example: r9890[0] = 2, r9890[1] = 3, r9890[2] = 1 --> Safety-Version V02.03.01		

---

<b>r9894[0...19]</b>	<b>SI crosswise comparison list (Motor Module) / SI CDC_list MM</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2802
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of the data that are being presently compared crosswise on the Motor Module/Hydraulic Module. The content of the list of crosswise-compared data is dependent upon the particular application.		
<b>Dependency:</b>	Refer to: r9794		
<b>Note:</b>	CDC: Crosswise Data Comparison Example: r9894[0] = 1 (monitoring clock cycle) r9894[1] = 2 (enable safety functions)		

r9894[2] = 3 (F-DI changeover, tolerance time)

...

The complete list of numbers for crosswise data comparison is listed in Fault F30611.

<b>r9895</b>	<b>SI diagnostics STOP F (Motor Module) / SI diag STOP F MM</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2802
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of the cross-compared data, which has caused STOP F on the Motor Module/Hydraulic Module.		
<b>Dependency:</b>	Refer to: r9795 Refer to: F30611		
<b>Note:</b>	The complete list of numbers for crosswise data comparison is listed in Fault F30611.		
<b>p9897</b>	<b>SI Motion bus failure STO delay time (MM) / SI Mtn IL t_del MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [µs]	800000.00 [µs]	0.00 [µs]
<b>Description:</b>	Sets the delay time for STO after bus failure on the Motor Module/Hydraulic Module (e.g. used for ESR).		
<b>Notice:</b>	This parameter is overwritten by the copy function of the safety functions integrated in the drive.		
<b>Note:</b>	Rounding effects can occur in the last decimal place of the parameterized time. The set time is rounded internally to an integer multiple of the monitoring clock cycle. ESR: Extended Stop and Retract STO: Safe Torque Off / SH: Safe standstill		
<b>r9898</b>	<b>SI actual checksum SI parameters (Motor Module) / SI act_checksum MM</b>		
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2800
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the checksum for the checked Safety Integrated parameters on the Motor Module/Hydraulic Module (actual checksum).		
<b>Dependency:</b>	Refer to: r9798, p9899		
<b>p9899</b>	<b>SI reference checksum SI parameters (Motor Module) / SI set_checksum MM</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2800
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the checksum for the checked Safety Integrated parameters on the Motor Module/Hydraulic Module (reference checksum).		
<b>Dependency:</b>	Refer to: p9799, r9898		

<b>r9900</b>	<b>Actual topology number of indices / Act topo indices</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the number of indices of the actual topology.		
<b>Dependency:</b>	Refer to: r9901		
<b>Note:</b>	Only for internal Siemens use. The parameter is not displayed for the STARTER commissioning software.		

<b>r9901[0...n]</b>	<b>Actual topology / Act topo</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> r9900	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	<p>Displays the actual topology of the drive unit.</p> <p>The actual topology is sub-divided into several sections. Each of the following data is saved under an index.</p> <p>General data on the topology:</p> <ul style="list-style-type: none"> <li>- version</li> <li>- attribute to compare the actual topology and target topology</li> <li>- number of components</li> </ul> <p>Data on a component:</p> <ul style="list-style-type: none"> <li>- type component of the node ID of the component</li> <li>- number of DRIVE-CLiQ sockets in the Node Identifier</li> <li>- manufacturer and version of the Node Identifier</li> <li>- serial number of the Node Identifier (4 indices)</li> <li>- index of the component</li> <li>- article number (8 indices)</li> <li>- attribute to compare the actual topology and target topology of the component</li> <li>- communications address</li> <li>- number of port types</li> <li>- port type</li> <li>- number of ports of the port type</li> <li>- communications address of the associated/linked component</li> <li>- number of the associated/linked port</li> <li>- communications address of the associated/linked component</li> <li>- number of the associated port, etc.</li> </ul> <p>Data on the next component:</p> <ul style="list-style-type: none"> <li>- etc.</li> </ul>		
<b>Dependency:</b>	Refer to: r9900		
<b>Note:</b>	Only for internal Siemens use. The parameter is not displayed for the STARTER commissioning software.		

<b>p9902 Target topology number of indices / TargetTopo indices</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	65535	1
<b>Description:</b>	Sets the number of target topology indices.		
<b>Dependency:</b>	Refer to: p9903		
<b>Note:</b>	Only for internal Siemens use. The parameter is not displayed for the STARTER commissioning software.		

<b>p9903[0...n] Target topology / Target topo</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> p9902	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF hex	0000 hex
<b>Description:</b>	Sets the target topology of the drive unit. The target topology is sub-divided into several sections. Each of the following data is saved under an index. General data on the topology: - version - attribute to compare the actual topology and target topology - number of components Data on a component: - type component of the Node Identifier of the component - number of DRIVE-CLiQ sockets in the Node Identifier - manufacturer and version of the Node Identifier - serial number of the Node Identifier (4 indices) - index of the component - article number (8 indices) - attribute to compare the actual topology and target topology of the component - component number - number of port types - port type - number of ports of the port type - component number of the associated/linked component - number of the associated/linked port - component number of the associated/linked component - number of the associated port, etc. Data on the next component: - etc.		
<b>Dependency:</b>	Refer to: p9902		
<b>Note:</b>	The target topology can only be modified using the commissioning software. The parameter is not displayed for the STARTER commissioning software. Changes only become effective when the state of p0009 = 101 changes to 0 or 111.		

<b>p9904</b>	<b>Topology comparison acknowledge differences / Topo_compare ackn</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	<p>If, when comparing the actual topology and target topology, only error has occurred, that can be acknowledged, then using this parameter, a new comparison can be started - acknowledging the error in the target topology.</p> <p>Differences that can be acknowledged:</p> <ul style="list-style-type: none"> <li>- topology comparison, component shifted</li> <li>- topology comparison, serial number of a component has been detected to be different (byte 3 = 1)</li> <li>- topology comparison shows one component that is connected differently</li> </ul> <p>The following parameter values are available:</p> <p>p9904 = 1 --&gt; the procedure is started.</p> <p>p9904 = 0 after starting --&gt; the procedure has been successfully completed.</p> <p>p9904 = 1 after starting --&gt; the procedure has not been successfully completed.</p> <p>The possible causes for an unsuccessful procedure are located in bytes 4, 3, 2.</p> <p>Byte 2: Number of structural differences.</p> <p>Byte 3: Number of differences that can be acknowledged (p9904).</p> <p>Byte 4: Number of differences. These differences can be resolved as follows:</p> <ul style="list-style-type: none"> <li>- sets the topology comparison (p9906 or p9907/p9908).</li> <li>- change over the actual topology.</li> </ul> <p>The appropriate action should be selected corresponding to the message that is displayed/output.</p>		
<b>Note:</b>	<p>In order to permanently accept the acknowledgment of the fault that can be resolved, then it must be saved in a non-volatile fashion (p0977).</p>		

<b>p9905</b>	<b>Device specialization / Specialization</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	0
<b>Description:</b>	<p>With p9905 = 1, the serial numbers and the hardware versions of all of the components are transferred from the actual topology into the target topology and a new comparison is started.</p> <p>For this device specialization, the components of the target topology may only differ from those of the actual topology by the serial numbers.</p> <p>With p9905 = 2, the serial numbers, the hardware versions and the article numbers of all of the components are transferred from the actual topology into the target topology and a new comparison is started.</p> <p>For this device specialization, the components of the target topology may only differ from those of the actual topology by the serial numbers and article numbers.</p>		
<b>Note:</b>	<p>p9905 is automatically set to 0 at the end of the operation.</p> <p>In order to permanently accept the data, it is necessary to save in a non-volatile fashion (p0977).</p>		

<b>p9906</b>	<b>Topology comparison comparison stage of all components / Topo_cmpr tot comp</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	99	0
<b>Description:</b>	Sets the type of comparison between the actual topology and target topology. The comparison is started by setting the required value.		
<b>Value:</b>	0: High: Compares the complete electronic rating plate 1: Average: Compares the component type and the article number 2: Low: Compares the component type 3: Minimum: Compares the component class 99: Topology has different comparison stages		
<b>Note:</b>	The electronic rating plate comprises the following data: - component type (e.g. "SMC20") - article number (e.g. "6SL3055-0AA0-5BA0") - manufacturer (e.g. SIEMENS) - hardware version (e.g. "A") - Serial No. (e.g. "T-P30050495") When comparing the topology, the following data is compared in the target and actual topologies: p9906 = 0: Component type, Article Number, Hardware version, Manufacturer, Serial No. p9906 = 1: Component type, Article Number p9906 = 2: Component type p9906 = 3: Component class (e.g. Sensor Module or Motor Module)		
<b>p9907</b>	<b>Topology comparison comparison stage of the component number / Topo_cmpr comp_no</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	199	0
<b>Description:</b>	Enters the number of the component where the setting of how the actual topology should be compared to the target topology should be changed.		
<b>Dependency:</b>	Refer to: p9908		
<b>p9908</b>	<b>Topology comparison comparison stage of a component / Topo_cmpr 1 comp</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	99	0
<b>Description:</b>	Sets the type of comparison of a component in the target topology with the actual topology. The comparison is started by setting the required value.		
<b>Value:</b>	0: High: Compares the complete electronic rating plate 1: Average: Compares the component type and the article number 2: Low: Compares the component type 3: Minimum: Compares the component class 99: Topology has different comparison stages		
<b>Dependency:</b>	Refer to: p9907		

## 2 Parameters

### 2.2 List of parameters

**Note:** The electronic rating plate comprises the following data:

- component type (e.g. "SMC20")
- article number (e.g. "6SL3055-0AA0-5BA0")
- manufacturer (e.g. SIEMENS)
- hardware version (e.g. "A")
- Serial No. (e.g. "T-P30050495")

When comparing the topology, the following data is compared in the target and actual topologies:

p9908 = 0: Component type, Article No., Hardware version, Manufacturer, Serial No.

p9908 = 1: Component type, Article Number

p9908 = 2: Component type

p9908 = 3: Component class (e.g. Sensor Module or Motor Module)

#### p9909

#### Topology comparison component replacement / Topo\_cmpr replace

CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP

**Can be changed:** C1(1)

**Calculated:** -

**Access level:** 3

**Data type:** Unsigned8

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** Topology

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

1

1

#### Description:

For p9909 = 1, the serial number and the hardware version of the new replaced component is automatically transferred from the actual topology into the target topology and then saved in a non-volatile fashion.

For the components that have been replaced, the electronic rating plate must match as far as the following data is concerned:

- component type (e.g. "SMC20")
- article number (e.g. "6SL3055-0AA0-5BA0")

For p9909 = 0, serial numbers and hardware versions are not automatically transferred. In this case, the transfer must be made using p9904.

#### Dependency:

Refer to: p9904, p9905

#### Note:

The modified target topology is automatically saved in a non-volatile fashion when the drive object runs-up (e.g. after a POWER ON).

Special case for Control Unit and option slot modules:

When replacing these components, independent of p9909, the serial number and hardware version are automatically transferred and saved in a non-volatile fashion.

#### p9910

#### Target topology accept additional components / Add comp accept

CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP

**Can be changed:** C1(1)

**Calculated:** -

**Access level:** 1

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** Topology

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

6

0

#### Description:

Accept additional inserted DRIVE-CLiQ components into the target topology.

The corresponding drive objects are added to the project.

#### Value:

- 0: No selection
- 1: Drive object type SERVO
- 2: Drive object type VECTOR
- 3: SINAMICS GM (DFEMV & VECTORMV)
- 4: SINAMICS SM (AFEMV & VECTORMV)
- 5: SINAMICS GL (VECTORGL)
- 6: SINAMICS SL (VECTORSL)

<b>p9911[0...6]</b>		<b>Insert drive object / Drv_obj insert</b>	
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1) <b>Data type:</b> Unsigned32 <b>P-Group:</b> All groups <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 4294967295	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0
<b>Description:</b>	New drive objects can be created using this parameter. Index 0: The values 2 ... 62 are permissible. Index 1: Number of the drive object type (e.g. 11 for type SERVO). Index 2, 4, 5, 6: Function modules defined for the drive object. Index 3: = 0: Ready. = 1: Reset (only indices 0 ... 3). = 2: Reset all (indices 0 ... 3 and flagged entries). = 3: Check and flag for insertion.		
<b>Index:</b>	[0] = Drive object number [1] = Drive object type [2] = Drive object function module [3] = Reset or check and flag for insertion [4] = Drive object function module expansion 1 [5] = Drive object function module expansion 2 [6] = Drive object function module expansion 3		
<b>Note:</b>	Only for internal Siemens use. The parameter is not displayed for the STARTER commissioning software.		

<b>p9912[0...1]</b>		<b>Delete drive object / Drv_obj delete</b>	
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(3) <b>Data type:</b> Unsigned16 <b>P-Group:</b> All groups <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 62	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 0 <b>Factory setting</b> 0
<b>Description:</b>	Drive objects can be deleted using this parameter. Index 0: The values 2 ... 62 are permissible. Index 1: = 0: Ready. = 1: Reset (only indices 0 and 1) = 2: Reset all (indices 0 and 1 and flagged entries). = 3: Check and flag for deletion. = 30: Check and flag for deletion. Keep target topology.		
<b>Index:</b>	[0] = Drive object number [1] = Reset or check and flag for deletion		
<b>Note:</b>	Only for internal Siemens use. The parameter is not displayed for the STARTER commissioning software.		

---

<b>p9913[0...2]</b>	<b>Change drive object number / Change drv_obj_no</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(4)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	62	0
<b>Description:</b>	Existing drive objects can be assigned new numbers using these parameters. Index 0: The values 2 ... 62 are permissible. Index 1: The values 2 ... 62 are permissible. Index 2: = 0: Ready. = 1: Reset (only indices 0 ... 2). = 2: Reset all (indices 0 ... 2 and flagged entries). = 3: Check and flag for modification.		
<b>Index:</b>	[0] = Drive object number old [1] = Drive object number new [2] = Reset or check and flag for modification		
<b>Note:</b>	Only for internal Siemens use. The parameter is not displayed for the STARTER commissioning software.		

---

<b>p9914[0...2]</b>	<b>Change component number / Change comp_no</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	199	0
<b>Description:</b>	You can change the number of topology components using this parameter. Index 0: The values 2 ... 199 are permissible. Index 1: The values 2 ... 199 are permissible. Index 2: = 0: Ready. = 1: Reset (only indices 0 ... 2). = 2: Reset all (indices 0 ... 2 and flagged entries). = 3: Check and flag for modification.		
<b>Index:</b>	[0] = Component number old [1] = Component number new [2] = Reset or check and flag for modification		
<b>Note:</b>	Only for internal Siemens use. The parameter is not displayed for the STARTER commissioning software.		

<b>p9915</b>	<b>DRIVE-CLiQ data transfer error shutdown threshold master / DQ fault master</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	0007 07FF hex	0007 02FF hex
<b>Description:</b>	Only for internal Siemens service purposes.		
<b>p9916</b>	<b>DRIVE-CLiQ data transfer error shutdown threshold slave / DQ fault slave</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	0007 07FF hex	0007 02FF hex
<b>Description:</b>	Only for internal Siemens service purposes.		
<b>p9917[0...1]</b>	<b>Delete component / Delete comp</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(30)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> All groups	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	199	0
<b>Description:</b>	Excessive components that have not been assigned can be removed from the component target topology using this parameter. Index 0: The values 2 ... 199 are permissible. Index 1: = 0: Ready. = 1: Reset (only indices 0 and 1) = 2: Reset all (indices 0 and 1 and flagged entries). = 3: Check and flag for deletion.		
<b>Index:</b>	[0] = Component number [1] = Reset or check and flag for deletion		
<b>Note:</b>	Only for internal Siemens use. The parameter is not displayed for the STARTER commissioning software.		
<b>p9920[0...99]</b>	<b>Licensing enter license key / Enter license key</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Enters the license key for this drive unit. Example of the license key: EACZ-QBCA = 69 65 67 90 45 81 66 67 65 dec (ASCII characters) Index 0 = license key character 1 (e.g. 69 dec) Index 1 = license key character 2 (e.g. 65 dec) ...		

## 2 Parameters

### 2.2 List of parameters

Index 8 = license key character 9 (e.g. 65 dec)

Index 9 = license key character 10 (e.g. 0 dec)

...

**Dependency:**

Refer to: r7843, p9921

Refer to: A13000, A13001, F13010

**Notice:**

An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.

With the STARTER commissioning software, ASCII characters are not entered coded, i.e. the characters of the license key can be entered as printed in the Certificate of License. In this case, STARTER codes the characters.

**Note:**

For an invalid license key, all the indices have the value 0 dec.

Only the ASCII characters contained in a license key can be entered ("1" to "9", "A" to "H", "K" to "N", "P" to "Z" as well as "-").

When manually changing p9920[x] to the value 0 dec, all the values of all the following indices are also set to 0 dec.

After entering the license key, the license key must be activated (p9921).

If the licensing is not adequate, then the following alarm is displayed together with LED:

- A13000 --> licensing not sufficient

- LED READY --> flashes green/red with 0.5 Hz

---

#### p9921

#### Licensing activate license key / Act license key

CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP

**Can be changed:** U, T

**Calculated:** -

**Access level:** 2

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** -

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

1

0

**Description:**

Activates the entered license key.

The following is executed when activating the license key.

- the checksum of the entered license key is checked.

- the entered license key is saved in a non-volatile fashion on the memory card.

- re-enter the license key.

**Value:**

0: Inactive

1: Activate start license key

**Dependency:**

Refer to: p9920

Refer to: A13000, A13001, F13010

**Note:**

Before activation, the license key entered using parameter p9920 is checked. If this check identifies an error, activation is rejected. In this case, writing a 1 to p9921 is rejected.

When the license key has been activated, p9921 is automatically set to 0.

---

#### r9925[0...99]

#### Firmware file incorrect / FW file incorr

CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP

**Can be changed:** -

**Calculated:** -

**Access level:** 2

**Data type:** Unsigned8

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** -

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

-

-

-

**Description:**

Displays the directory and name of the file whose status as shipped from the factory was identified as impermissible.

**Dependency:**

Refer to: r9926

Refer to: A01016

**Note:**

The directory and name of the file is displayed in the ASCII code.

<b>r9926</b>	<b>Firmware check status / FW check status</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 2
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the status when the firmware is checked when the system is booted. 0: Firmware not yet checked. 1: Check running. 2: Check successfully completed. 3: Check indicates an error.		
<b>Dependency:</b>	Refer to: r9925 Refer to: A01016		
<b>p9930[0...8]</b>	<b>System logbook activation / SYSLOG activation</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0
<b>Description:</b>	Only for service purposes.		
<b>Index:</b>	[0] = System logbook stage (0: Not active) [1] = COM2/COM1 (0: COM2, 1: COM1) [2] = Activate file write (0: Not active) [3] = Display time stamp (0: Not displayed) [4...7] = Reserved [8] = System logbook file size (stages, each 10 kB)		
<b>Notice:</b>	Before switching off the Control Unit, ensure that the system logbook is switched out (p9930[0] = 0). If writing to the file is activated (p9930[2] = 1), writing to the file must be deactivated again before switching off the Control Unit (p9930[2] = 0) in order to ensure that the system logbook has been completely written to the file.		
<b>p9931[0...185]</b>	<b>System logbook module selection / SYSLOG mod select.</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Only for service purposes.		
<b>p9932</b>	<b>Save system logbook EEPROM / SYSLOG EEPROM save</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0
<b>Description:</b>	Only for service purposes.		

<b>r9935.0</b>				
<b>BO: POWER ON delay signal / POWER ON t_delay</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Display and binector output for a delay after POWER ON. After switch-on, binector output r9935.0 is set with the start of the first sampling time and is again reset after approx. 100 ms.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	POWER ON delay signal	High	Low
<b>r9936[0...199]</b>				
<b>DRIVE-CLiQ diagnostic error counter connection / DQdiag err counter</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> Integer32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	-	
<b>Description:</b>	Displays the error counter for the individual DRIVE-CLiQ connections/cables. r9936[0]: sum of the error counter for all connections r9936[1]: not used r9936[2]: error counter for the feeder cable to DRIVE-CLiQ components with component number 2 ... r9936[199]: error counter for the feeder cable to DRIVE-CLiQ components with component number 199 The feeder cable is the DRIVE-CLiQ cable that is connected to a component in the direction of the Control Unit.			
<b>Dependency:</b>	Refer to: p9937, p9938			
<b>p9937</b>				
<b>DRIVE-CLiQ diagnostic configuration / DQ diag config</b>				
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4	
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 0000 0000 0000 bin	
<b>Description:</b>	Sets the configuration for the DRIVE-CLiQ diagnostics (error counter r9936). Using this function, connections and cables of DRIVE-CLiQ connections can be checked for transfer errors. The error counter is evaluated in the PHY blocks involved.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Alarm for connection error	Yes	No
	08	Reset error counter	Yes	No
<b>Dependency:</b>	Refer to: r9936, p9938 Refer to: A01839			
<b>Note:</b>	For bit 00: To activate this function, p9938 must be set to 0 (inactive). After changing the error counter (r9936), an appropriate alarm is output. The alarm automatically disappears after 5 seconds. For bit 08: With p9937.8 = 1, the error counters are reset (r9936[0...199]). After the reset, p9937.8 is automatically set to 0.			

<b>p9938</b>	<b>DRIVE-CLiQ detailed diagnostics configuration / DQ diag config</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	6	0
<b>Description:</b>	Sets the configuration for the DRIVE-CLiQ detailed diagnostics (r9943). Using the detailed diagnostics, it is possible to investigate data transfer errors on an individual connection, selected using p9942.		
<b>Value:</b>	0: Inactive 1: Sum send and receive errors 2: Only send errors 3: Only receive errors 4: Siemens internal 5: Siemens internal 6: Siemens internal		
<b>Dependency:</b>	The functions in p9938 can only be set for p9937.0 = 0. Refer to: r9936, p9937, p9939, p9942		
<b>Notice:</b>	If value = 0: - detailed diagnostics is inactive. - the error counter is active (r9936). If value > 0: - the error counter is inactive (r9936). - the detailed diagnostics as configured is active (r9943).		
<b>p9939</b>	<b>DRIVE-CLiQ detailed diagnostics time interval / DQ detail t_interv</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1 [s]	3600 [s]	1 [s]
<b>Description:</b>	Sets the time interval for recording the error counter in r9943.		
<b>Dependency:</b>	Refer to: r9936, p9938, p9942, r9943		
<b>p9941</b>	<b>Target topology feature delete all components / Feature delete</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> C1(1)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Topology	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 0
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	For p9941 =1, the serial numbers of all components in the target topology are deleted (zero is written). Through activation and deactivation this enables the actual topology components to be newly assigned to the target topology components.		
<b>Note:</b>	p9941 is automatically set to 0 at the end of the operation. A warm restart is triggered automatically after p0009 = 0.		

## 2 Parameters

### 2.2 List of parameters

<b>p9942</b>	<b>DRIVE-CLiQ detailed diagnostics select individual connection / DQ detail conn</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned16 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 199	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the component, whose feeder cable is monitored for data transfer errors. The feeder cable is the DRIVE-CLiQ cable that is connected to a component in the direction of the Control Unit. Errors that have occurred in the selected time interval (p9939) can be read-out from r9943.		
<b>Dependency:</b>	Refer to: r9936, p9938, p9939, r9943		
<b>r9943</b>	<b>DRIVE-CLiQ detailed diagn. individual connection error counter / DQ det err counter</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> Integer32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the connection errors of the individual connection that have occurred within the time interval (p9939). The detailed diagnostics for the individual connection is activated via p9938 > 0 and is selected via p9942.		
<b>Dependency:</b>	Refer to: r9936, p9938, p9939, p9942		
<b>r9975[0...7]</b>	<b>System utilization measured / Sys util meas</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [%]	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]
<b>Description:</b>	Displays the measured system utilization. The higher the value displayed, the higher the system utilization.		
<b>Index:</b>	[0] = Computing time utilization (min) [1] = Computing time utilization (averaged) [2] = Computing time utilization (max) [3] = Largest total utilization (min) [4] = Largest total utilization (averaged) [5] = Largest total utilization (max) [6] = Reserved [7] = Reserved		
<b>Dependency:</b>	Refer to: r9976, r9979, r9980, r9981 Refer to: F01054, F01205		
<b>Note:</b>	For index 3 ... 5: The total utilizations are determined using all sampling times used. The largest total utilizations are mapped here. The sampling time with the largest total utilization is displayed in r9979. Total utilization: Computing time load of sampling time involved including load from higher-priority sampling times (interrupts).		

<b>r9976[0...7]</b>	<b>System utilization / Sys util</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the system utilization. If the utilization is greater than 100%, fault F01054 is output.		
<b>Index:</b>	[0] = Reserved [1] = Computing time utilization [2] = Reserved [3] = Reserved [4] = Reserved [5] = Largest total utilization [6] = Reserved [7] = Reserved		
<b>Dependency:</b>	Refer to: r9979, r9980 Refer to: F01054, F01205		
<b>Note:</b>	For index 1: The value shows the total computing time load of the system. For index 5: The total utilization is determined using all sampling times used. The largest total utilization is mapped here. The sampling time with the largest total utilization is displayed in r9979. Total utilization: Computing time load of sampling time involved including load from higher-priority sampling times (interrupts).		
<b>r9979</b>	<b>Sampling time with largest total utilization / t_sampl lg total</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [µs]	- [µs]	- [µs]
<b>Description:</b>	Displays the sampling time with the largest total utilization.		
<b>Dependency:</b>	Refer to: r7901, r9976 Refer to: F01054		
<b>Note:</b>	The largest total utilization is displayed in r9976[5]. Total utilization: Computing time load of sampling time involved including load from higher-priority sampling times (interrupts).		
<b>r9980[0...165]</b>	<b>Sampling times utilization calculated / t_sampl util calc</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [%]	- [%]	- [%]
<b>Description:</b>	Displays the calculated utilizations for the active sampling times based on the existing target topology.		
<b>Index:</b>	[0] = Net utilization 0 [1] = Total utilization 0 [2] = Net utilization 1 [3] = Total utilization 1 [4] = Net utilization 2 [5] = Total utilization 2		

[6] = Net utilization 3  
[7] = Total utilization 3  
[8] = Net utilization 4  
[9] = Total utilization 4  
[10] = Net utilization 5  
[11] = Total utilization 5  
[12] = Net utilization 6  
[13] = Total utilization 6  
[14] = Net utilization 7  
[15] = Total utilization 7  
[16] = Net utilization 8  
[17] = Total utilization 8  
[18] = Net utilization 9  
[19] = Total utilization 9  
[20] = Net utilization 10  
[21] = Total utilization 10  
[22] = Net utilization 11  
[23] = Total utilization 11  
[24] = Net utilization 12  
[25] = Total utilization 12  
[26] = Net utilization 13  
[27] = Total utilization 13  
[28] = Net utilization 14  
[29] = Total utilization 14  
[30] = Net utilization 15  
[31] = Total utilization 15  
[32] = Net utilization 16  
[33] = Total utilization 16  
[34] = Net utilization 17  
[35] = Total utilization 17  
[36] = Net utilization 18  
[37] = Total utilization 18  
[38] = Net utilization 19  
[39] = Total utilization 19  
[40] = Net utilization 20  
[41] = Total utilization 20  
[42] = Net utilization 21  
[43] = Total utilization 21  
[44] = Net utilization 22  
[45] = Total utilization 22  
[46] = Net utilization 23  
[47] = Total utilization 23  
[48] = Net utilization 24  
[49] = Total utilization 24  
[50] = Net utilization 25  
[51] = Total utilization 25  
[52] = Net utilization 26  
[53] = Total utilization 26  
[54] = Net utilization 27  
[55] = Total utilization 27  
[56] = Net utilization 28  
[57] = Total utilization 28  
[58] = Net utilization 29  
[59] = Total utilization 29  
[60] = Net utilization 30  
[61] = Total utilization 30  
[62] = Net utilization 31  
[63] = Total utilization 31  
[64] = Net utilization 32  
[65] = Total utilization 32  
[66] = Net utilization 33  
[67] = Total utilization 33  
[68] = Net utilization 34  
[69] = Total utilization 34  
[70] = Net utilization 35  
[71] = Total utilization 35

[72] = Net utilization 36  
[73] = Total utilization 36  
[74] = Net utilization 37  
[75] = Total utilization 37  
[76] = Net utilization 38  
[77] = Total utilization 38  
[78] = Net utilization 39  
[79] = Total utilization 39  
[80] = Net utilization 40  
[81] = Total utilization 40  
[82] = Net utilization 41  
[83] = Total utilization 41  
[84] = Net utilization 42  
[85] = Total utilization 42  
[86] = Net utilization 43  
[87] = Total utilization 43  
[88] = Net utilization 44  
[89] = Total utilization 44  
[90] = Net utilization 45  
[91] = Total utilization 45  
[92] = Net utilization 46  
[93] = Total utilization 46  
[94] = Net utilization 47  
[95] = Total utilization 47  
[96] = Net utilization 48  
[97] = Total utilization 48  
[98] = Net utilization 49  
[99] = Total utilization 49  
[100] = Net utilization 50  
[101] = Total utilization 50  
[102] = Net utilization 51  
[103] = Total utilization 51  
[104] = Net utilization 52  
[105] = Total utilization 52  
[106] = Net utilization 53  
[107] = Total utilization 53  
[108] = Net utilization 54  
[109] = Total utilization 54  
[110] = Net utilization 55  
[111] = Total utilization 55  
[112] = Net utilization 56  
[113] = Total utilization 56  
[114] = Net utilization 57  
[115] = Total utilization 57  
[116] = Net utilization 58  
[117] = Total utilization 58  
[118] = Net utilization 59  
[119] = Total utilization 59  
[120] = Net utilization 60  
[121] = Total utilization 60  
[122] = Net utilization 61  
[123] = Total utilization 61  
[124] = Net utilization 62  
[125] = Total utilization 62  
[126] = Net utilization 63  
[127] = Total utilization 63  
[128] = Net utilization 64  
[129] = Total utilization 64  
[130] = Net utilization 65  
[131] = Total utilization 65  
[132] = Net utilization 66  
[133] = Total utilization 66  
[134] = Net utilization 67  
[135] = Total utilization 67  
[136] = Net utilization 68  
[137] = Total utilization 68

- [138] = Net utilization 69
- [139] = Total utilization 69
- [140] = Net utilization 70
- [141] = Total utilization 70
- [142] = Net utilization 71
- [143] = Total utilization 71
- [144] = Net utilization 72
- [145] = Total utilization 72
- [146] = Net utilization 73
- [147] = Total utilization 73
- [148] = Net utilization 74
- [149] = Total utilization 74
- [150] = Net utilization 75
- [151] = Total utilization 75
- [152] = Net utilization 76
- [153] = Total utilization 76
- [154] = Net utilization 77
- [155] = Total utilization 77
- [156] = Net utilization 78
- [157] = Total utilization 78
- [158] = Net utilization 79
- [159] = Total utilization 79
- [160] = Net utilization 80
- [161] = Total utilization 80
- [162] = Net utilization 81
- [163] = Total utilization 81
- [164] = Net utilization 82
- [165] = Total utilization 82

**Dependency:** Refer to: r7901, r9976, r9979  
Refer to: F01054

**Note:** The corresponding sampling times can be read out in parameter r7901.  
Net utilization:  
Computing time load that is only called by the sampling time involved.  
Total utilization:  
Computing time load of sampling time involved including load from higher-priority sampling times (interrupts).

**r9981[0...165]**

**Sampling times utilization measured / t\_sampl util meas**

CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP

<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
- [%]	- [%]	- [%]

**Description:** Displays the utilizations measured for the active sampling times.

- Index:**
- [0] = Net utilization 0
  - [1] = Total utilization 0
  - [2] = Net utilization 1
  - [3] = Total utilization 1
  - [4] = Net utilization 2
  - [5] = Total utilization 2
  - [6] = Net utilization 3
  - [7] = Total utilization 3
  - [8] = Net utilization 4
  - [9] = Total utilization 4
  - [10] = Net utilization 5
  - [11] = Total utilization 5
  - [12] = Net utilization 6
  - [13] = Total utilization 6
  - [14] = Net utilization 7
  - [15] = Total utilization 7
  - [16] = Net utilization 8
  - [17] = Total utilization 8

[18] = Net utilization 9  
[19] = Total utilization 9  
[20] = Net utilization 10  
[21] = Total utilization 10  
[22] = Net utilization 11  
[23] = Total utilization 11  
[24] = Net utilization 12  
[25] = Total utilization 12  
[26] = Net utilization 13  
[27] = Total utilization 13  
[28] = Net utilization 14  
[29] = Total utilization 14  
[30] = Net utilization 15  
[31] = Total utilization 15  
[32] = Net utilization 16  
[33] = Total utilization 16  
[34] = Net utilization 17  
[35] = Total utilization 17  
[36] = Net utilization 18  
[37] = Total utilization 18  
[38] = Net utilization 19  
[39] = Total utilization 19  
[40] = Net utilization 20  
[41] = Total utilization 20  
[42] = Net utilization 21  
[43] = Total utilization 21  
[44] = Net utilization 22  
[45] = Total utilization 22  
[46] = Net utilization 23  
[47] = Total utilization 23  
[48] = Net utilization 24  
[49] = Total utilization 24  
[50] = Net utilization 25  
[51] = Total utilization 25  
[52] = Net utilization 26  
[53] = Total utilization 26  
[54] = Net utilization 27  
[55] = Total utilization 27  
[56] = Net utilization 28  
[57] = Total utilization 28  
[58] = Net utilization 29  
[59] = Total utilization 29  
[60] = Net utilization 30  
[61] = Total utilization 30  
[62] = Net utilization 31  
[63] = Total utilization 31  
[64] = Net utilization 32  
[65] = Total utilization 32  
[66] = Net utilization 33  
[67] = Total utilization 33  
[68] = Net utilization 34  
[69] = Total utilization 34  
[70] = Net utilization 35  
[71] = Total utilization 35  
[72] = Net utilization 36  
[73] = Total utilization 36  
[74] = Net utilization 37  
[75] = Total utilization 37  
[76] = Net utilization 38  
[77] = Total utilization 38  
[78] = Net utilization 39  
[79] = Total utilization 39  
[80] = Net utilization 40  
[81] = Total utilization 40  
[82] = Net utilization 41  
[83] = Total utilization 41

[84] = Net utilization 42  
[85] = Total utilization 42  
[86] = Net utilization 43  
[87] = Total utilization 43  
[88] = Net utilization 44  
[89] = Total utilization 44  
[90] = Net utilization 45  
[91] = Total utilization 45  
[92] = Net utilization 46  
[93] = Total utilization 46  
[94] = Net utilization 47  
[95] = Total utilization 47  
[96] = Net utilization 48  
[97] = Total utilization 48  
[98] = Net utilization 49  
[99] = Total utilization 49  
[100] = Net utilization 50  
[101] = Total utilization 50  
[102] = Net utilization 51  
[103] = Total utilization 51  
[104] = Net utilization 52  
[105] = Total utilization 52  
[106] = Net utilization 53  
[107] = Total utilization 53  
[108] = Net utilization 54  
[109] = Total utilization 54  
[110] = Net utilization 55  
[111] = Total utilization 55  
[112] = Net utilization 56  
[113] = Total utilization 56  
[114] = Net utilization 57  
[115] = Total utilization 57  
[116] = Net utilization 58  
[117] = Total utilization 58  
[118] = Net utilization 59  
[119] = Total utilization 59  
[120] = Net utilization 60  
[121] = Total utilization 60  
[122] = Net utilization 61  
[123] = Total utilization 61  
[124] = Net utilization 62  
[125] = Total utilization 62  
[126] = Net utilization 63  
[127] = Total utilization 63  
[128] = Net utilization 64  
[129] = Total utilization 64  
[130] = Net utilization 65  
[131] = Total utilization 65  
[132] = Net utilization 66  
[133] = Total utilization 66  
[134] = Net utilization 67  
[135] = Total utilization 67  
[136] = Net utilization 68  
[137] = Total utilization 68  
[138] = Net utilization 69  
[139] = Total utilization 69  
[140] = Net utilization 70  
[141] = Total utilization 70  
[142] = Net utilization 71  
[143] = Total utilization 71  
[144] = Net utilization 72  
[145] = Total utilization 72  
[146] = Net utilization 73  
[147] = Total utilization 73  
[148] = Net utilization 74  
[149] = Total utilization 74

[150] = Net utilization 75  
 [151] = Total utilization 75  
 [152] = Net utilization 76  
 [153] = Total utilization 76  
 [154] = Net utilization 77  
 [155] = Total utilization 77  
 [156] = Net utilization 78  
 [157] = Total utilization 78  
 [158] = Net utilization 79  
 [159] = Total utilization 79  
 [160] = Net utilization 80  
 [161] = Total utilization 80  
 [162] = Net utilization 81  
 [163] = Total utilization 81  
 [164] = Net utilization 82  
 [165] = Total utilization 82

**Dependency:**

Refer to: r7901, r9975, r9980

Refer to: F01054

**Note:**

The corresponding sampling times can be read out in parameter r7901.

Net utilization:

Computing time load that is only called by the sampling time involved.

Total utilization:

Computing time load of sampling time involved including load from higher-priority sampling times (interrupts).

**r9982[0...4]****Data memory utilization / Mem\_util dat\_mem**

CU\_G130\_PN,  
 CU\_G150\_PN,  
 CU\_G130\_DP,  
 CU\_G150\_DP

**Can be changed:** -**Calculated:** -**Access level:** 3**Data type:** FloatingPoint32**Dyn. index:** -**Func. diagram:** -**P-Group:** -**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

- [%]

- [%]

- [%]

**Description:**

Displays the calculated data memory utilization rates based on the existing target topology.

**Index:**

[0] = Fast data memory 1  
 [1] = Fast data memory 2  
 [2] = Fast data memory 3  
 [3] = Fast data memory 4  
 [4] = Reserved

**Dependency:**

Refer to: F01068

**r9983[0...4]****Measured data memory utilization (actual load) / Mem\_ut dat\_mem ms**

CU\_G130\_PN,  
 CU\_G150\_PN,  
 CU\_G130\_DP,  
 CU\_G150\_DP

**Can be changed:** -**Calculated:** -**Access level:** 4**Data type:** FloatingPoint32**Dyn. index:** -**Func. diagram:** -**P-Group:** -**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

- [%]

- [%]

- [%]

**Description:**

Displays the measured data memory utilization rates based on the existing target topology.

**Index:**

[0] = Fast Memory 1  
 [1] = Fast Memory 2  
 [2] = Fast Memory 3  
 [3] = Fast Memory 4  
 [4] = Heap

**Dependency:**

Refer to: F01068

## 2 Parameters

### 2.2 List of parameters

<b>r9984[0...4]</b>	<b>Data memory utilization TEC / Data mem util TEC</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]	
<b>Description:</b>	Displays the data memory utilization as a result of Technology Extensions.			
<b>Index:</b>	[0] = Fast Memory 1 [1] = Fast Memory 2 [2] = Fast Memory 3 [3] = Fast Memory 4 [4] = Reserved			
<b>Dependency:</b>	Refer to: F01068			
<b>Note:</b>	TEC: Technology Extension			
<b>r9986[0...7]</b>	<b>DRIVE-CLiQ system load / DQ system load</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]	
<b>Description:</b>	Displays the calculated DRIVE-CLiQ system utilization based on the existing target topology. The values are only available in the "Initialization finished" state (r3988 = 800). Index 0 ... 7 corresponds to DRIVE-CLiQ socket X100 ... X107.			
<b>Dependency:</b>	Refer to: F01340			
<b>r9987[0...7]</b>	<b>DRIVE-CLiQ bandwidth load / DQ bandw load</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]	
<b>Description:</b>	Displays the calculated DRIVE-CLiQ bandwidth utilization based on the existing target topology. The values are only available in the "Initialization finished" state (r3988 = 800). Index 0 ... 7 corresponds to DRIVE-CLiQ socket X100 ... X107.			
<b>Dependency:</b>	Refer to: F01340			
<b>r9988[0...7]</b>	<b>DRIVE-CLiQ DPRAM load / DQ DPRAM load</b>			
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> - <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> - <b>Not for motor type:</b> - <b>Min</b> - [%]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> - [%]	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> - [%]	
<b>Description:</b>	Displays the calculated DRIVE-CLiQ DPRAM load based on the existing target topology. The values are not made available until the RUNUP READY (800) state is adopted (see p3988). Index 0 ... 7 corresponds to DRIVE-CLiQ socket X100 ... X107.			
<b>Dependency:</b>	Refer to: F01340			

**p9990 DO memory usage actual value determination selection / Mem\_use ActVal sel**CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP**Can be changed:** U, T**Calculated:** -**Access level:** 4**Data type:** Unsigned16**Dyn. index:** -**Func. diagram:** -**P-Group:** -**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0

65535

0

**Description:**

The meaning of the parameter differs for reading and writing.

Read:

- Returns the number of memory areas monitored.

Write:

- Memory usage of a drive object: Enter drive object number

- Memory usage of the complete system: Enter value 65535

**r9991[0...4] Memory usage drive object actual value / Mem\_use DO ActVal**CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP**Can be changed:** -**Calculated:** -**Access level:** 4**Data type:** Unsigned32**Dyn. index:** -**Func. diagram:** -**P-Group:** -**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Displays the memory usage for each drive object as actual value.

**Index:**

[0] = Fast Memory 1

[1] = Fast Memory 2

[2] = Fast Memory 3

[3] = Fast Memory 4

[4] = Heap

**r9992[0...4] Memory usage drive object reference value / Mem\_use DO ref val**CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP**Can be changed:** -**Calculated:** -**Access level:** 4**Data type:** Unsigned32**Dyn. index:** -**Func. diagram:** -**P-Group:** -**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Displays the memory usage for each drive object as reference value.

**Index:**

[0] = Fast Memory 1

[1] = Fast Memory 2

[2] = Fast Memory 3

[3] = Fast Memory 4

[4] = Heap

**r9993[0...4] Memory utilization Technology Extension / Mem\_util TEC**CU\_G130\_PN,  
CU\_G150\_PN,  
CU\_G130\_DP,  
CU\_G150\_DP**Can be changed:** -**Calculated:** -**Access level:** 4**Data type:** Unsigned32**Dyn. index:** -**Func. diagram:** -**P-Group:** -**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

-

-

-

**Description:**

Displays the memory usage of a Technology Extension.

**Index:**

[0] = Fast Memory 1

[1] = Fast Memory 2

[2] = Fast Memory 3

## 2 Parameters

### 2.2 List of parameters

[3] = Fast Memory 4

[4] = Heap

**Note:** TEC: Technology Extension

---

<b>r9999[0...99]</b>	<b>Software error internal supplementary diagnostics / SW_err int diag</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP, CU_G150_DP	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-

**Description:** Diagnostics parameter to display additional information for internal software errors.

**Note:** Only for internal Siemens troubleshooting.

---

<b>p10000[0...5]</b>	<b>SI TM54F communication clock cycle / TM54F comm_cycle</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00000 [ms]	25.00000 [ms]	[0] 12.00000 [ms] [1...5] 0.00000 [ms]

**Description:** Sets the safety communication clock cycle with which the TM54F communicates with a drive.

The communication clock cycle must correspond to the safety monitoring clock cycle of the drive.

**Index:**  
[0] = Drive 1  
[1] = Drive 2  
[2] = Drive 3  
[3] = Drive 4  
[4] = Drive 5  
[5] = Drive 6

**Note:** - if only index 0 of p10000 is used, then p10000[0] defines the communication clock cycle that is applicable for all drives used in p10010[]. In this case, all safety monitoring clock cycles on the Control Unit must be identical with p10000[0].

- the minimum communication clock cycle is 1 ms.

---

<b>p10001</b>	<b>SI TM54F delay time for test stop at DO 0 ... DO 3 / SI t_delay DO</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	2.00 [ms]	2000.00 [ms]	500.00 [ms]

**Description:** Sets the delay time for testing the digital outputs 0 ... 3 (DO 0 ... DO 3).

Within this time, for a forced checking procedure of the digital outputs, the signal must have been detected via the corresponding readback input (p10047).

**Dependency:** Refer to: p10003, p10007, p10041, p10046

**Note:** The delay time must be set to a value greater than the debounce time (p10017).

The set time is rounded internally to an integer multiple of the TM54F sampling time (r10015).

<b>p10002</b>	<b>SI TM54F F-DI changeover discrepancy time / SI F-DI chg t</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2893, 2894
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1.00 [ms]	2000.00 [ms]	500.00 [ms]
<b>Description:</b>	Sets the discrepancy time for digital inputs. The signal states at the two associated digital inputs (F-DI) must assume the same state within this discrepancy time.		
<b>Note:</b>	The discrepancy time of the F-DIs must always be set higher than the highest value of parameter p9780 or p9500 of the drives that use safety with TM54F. The set time is rounded internally to an integer multiple of the TM54F sampling time (r10015).		
<b>p10003</b>	<b>SI TM54F forced checking procedure timer / SI dyn t</b>		
TM54F_MA	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2892
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.00 [h]	8760.00 [h]	8.00 [h]
<b>Description:</b>	Sets the time to carry out the forced checking procedure (test stop). Within the parameterized time, the digital inputs/outputs must have been subject to a forced checking procedure at least once. The forced checking procedure is started with binector input p10007 = 0/1 signal.		
<b>Dependency:</b>	Refer to: p10001, p10007, p10046		
<b>r10004[0...1]</b>	<b>SI TM54F parameter actual checksum / SI par CRC act</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2891
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays the actual checksum of the checksum-checked parameters for the Terminal Module 54F (TM54F).		
<b>Index:</b>	[0] = Checksum HW-independent TM54F parameters [1] = Checksum HW-dependent TM54F parameters (MM)		
<b>p10005[0...1]</b>	<b>SI TM54F parameter reference checksum / SI par CRC target</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2891
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Displays the reference checksum of the checksum-checked parameters for the Terminal Module 54F (TM54F).		
<b>Index:</b>	[0] = Checksum HW-independent TM54F parameters [1] = Checksum HW-dependent TM54F parameters (MM)		

<b>p10006</b>	<b>SI TM54F acknowledgment internal event input terminal / SI ackn int event</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2900, 2905
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0
<b>Description:</b>	Select a fail-safe digital input (F-DI) for the signal "acknowledge internal event" (internal fault). The signal is transferred to the corresponding control signal of all drives. The falling edge at this input resets the status "internal event" in the drives. The rising edge at this input acknowledges any existing discrepancy errors.		
<b>Value:</b>	0: Static selected 1: F-DI 0 (X521.2/3/6) 2: F-DI 1 (X521.4/5/7) 3: F-DI 2 (X522.1/2/7) 4: F-DI 3 (X522.3/4/8) 5: F-DI 4 (X522.5/6/9) 6: F-DI 5 (X531.2/3/6) 7: F-DI 6 (X531.4/5/7) 8: F-DI 7 (X532.1/2/7) 9: F-DI 8 (X532.3/4/8) 10: F-DI 9 (X532.5/6/9) 255: Static deselected		
<b>Dependency:</b>	Refer to: A35081		
<b>Note:</b>	The values "static selected" and "static deselected" result in an inactive function of the safe acknowledgment. F-DI: Failsafe Digital Input		
<b>p10007</b>	<b>BI: SI TM54F forced checking procedure F-DI/F-DO signal source / SI dynF-DI/DOs_src</b>		
TM54F_MA	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Binary	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2892
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source to initiate the test stop. For example, a digital input of the Control Unit or one of the other Terminal Modules can be set as signal source. The test stop is triggered on a 0/1 signal edge. The TM54F must be in the "ready" state (p0010 = 0).		
<b>Dependency:</b>	Refer to: p10001, p10003, p10041, p10046		
<b>Notice:</b>	Digital inputs of the TM54F must not be used to trigger the test stop.		
<b>p10008</b>	<b>SI TM54F operating mode / SI op_mod</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	1
<b>Description:</b>	Sets the operating mode for the Terminal Module 54F (TM54F).		
<b>Value:</b>	0: Function interface 1: Control interface		
<b>Note:</b>	Parameter being prepared. For this firmware version, the function interface is not supported.		

<b>p10009 SI TM54F SLP retract F-DI / SI SLP retr F-DI</b>			
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	10	0
<b>Description:</b>	<p>Selects a fail-safe digital input (F-DI) for the "SLP retract" function.</p> <p>A rising edge at this F-DI makes it possible to retract the drives, which at this instant in time indicate a violation of the SLP limit.</p> <p>After safe acknowledgment of the active safety faults, the drives can be traversed in the direction of the permitted position range.</p> <p>In the retract mode, SLP becomes inactive, and SDI, if enabled, is selected in the direction of the permitted position range.</p> <p>A 0 signal at the F-DI for retraction, deactivates the active retraction mode (SLP becomes active again, and SDI selected corresponding to the actual F-DIs).</p>		
<b>Value:</b>	<p>0: Function inactive</p> <p>1: F-DI 0 (X521.2/3/6)</p> <p>2: F-DI 1 (X521.4/5/7)</p> <p>3: F-DI 2 (X522.1/2/7)</p> <p>4: F-DI 3 (X522.3/4/8)</p> <p>5: F-DI 4 (X522.5/6/9)</p> <p>6: F-DI 5 (X531.2/3/6)</p> <p>7: F-DI 6 (X531.4/5/7)</p> <p>8: F-DI 7 (X532.1/2/7)</p> <p>9: F-DI 8 (X532.3/4/8)</p> <p>10: F-DI 9 (X532.5/6/9)</p>		
<b>Note:</b>	<p>- Retraction is only possible, if SDI in the opposite direction of the permitted position range is not already selected.</p> <p>- a discrepancy at this F-DI must be acknowledged using a safe acknowledgment.</p> <p>F-DI: Failsafe Digital Input</p> <p>SDI: Safe Direction (safe motion direction)</p> <p>SLP: Safely Limited Position</p>		

<b>p10010[0...5] SI TM54F drive object assignment / SI drv_obj assign</b>			
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2891, 2892
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	62	0
<b>Description:</b>	Sets the drive object number for the drives that are available.		
<b>Index:</b>	<p>[0] = Drive 1</p> <p>[1] = Drive 2</p> <p>[2] = Drive 3</p> <p>[3] = Drive 4</p> <p>[4] = Drive 5</p> <p>[5] = Drive 6</p>		
<b>Note:</b>	A change only becomes effective after a POWER ON.		

---

<b>p10011[0...5]</b>	<b>SI TM54F drive group assignment / SI drv_gr assign</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2892
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1	4	1
<b>Description:</b>	Sets the drive group for the drives that are available. A drive group is a combination of several drives with the same types of behavior.		
<b>Index:</b>	[0] = Drive 1 [1] = Drive 2 [2] = Drive 3 [3] = Drive 4 [4] = Drive 5 [5] = Drive 6		
<b>Note:</b>	If the basic functions are controlled via the TM54F, then within a drive group, only drives with basic functions or drives with extended functions can be assigned.		

---

<b>p10012[0...5]</b>	<b>SI TM54F Motor/Hydraulic Module Node Identifier Word 1 / SI MM/HM Node ID 1</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the actual Node Identifier (word 1, bit 0 ... 31) for the Motor/Hydraulic Modules.		
<b>Index:</b>	[0] = Drive 1 [1] = Drive 2 [2] = Drive 3 [3] = Drive 4 [4] = Drive 5 [5] = Drive 6		
<b>Dependency:</b>	Refer to: p10013, p10014		
<b>Note:</b>	The Node Identifier (96 bit) is represented in the following 3 parameters. p10012[0] word 1 (bit 0 ... 31) for Motor/Hydraulic Module 1 ... p10012[5] word 1 (bit 0 ... 31) for Motor/Hydraulic Module 6 p10013[0] word 2 (bit 32 ... 63) for Motor/Hydraulic Module 1 ... p10013[5] word 2 (bit 32 ... 63) for Motor/Hydraulic Module 6 p10014[0] word 3 (bit 64 ... 95) for Motor/Hydraulic Module 1 ... p10014[5] word 3 (bit 64 ... 95) for Motor/Hydraulic Module 6		

---

<b>p10013[0...5]</b>	<b>SI TM54F Motor/Hydraulic Module Node Identifier Word 2 / SI MM Node ID 2</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0000 hex	FFFF FFFF hex	0000 hex
<b>Description:</b>	Sets the actual Node Identifier (word 2, bit 32 ... 63) for the Motor/Hydraulic Modules.		
<b>Index:</b>	[0] = Drive 1 [1] = Drive 2 [2] = Drive 3		

[3] = Drive 4  
 [4] = Drive 5  
 [5] = Drive 6

**Dependency:**

Refer to: p10012, p10014

**Note:**

The complete Node Identifier (96 bit) is represented in p10012, p10013 and p10014.

**p10014[0...5]****SI TM54F Motor/Hydraulic Module Node Identifier Word 3 / SI MM Node ID 3**

TM54F\_MA,  
 TM54F\_SL

**Can be changed:** C2(95)**Calculated:** -**Access level:** 4**Data type:** Unsigned32**Dyn. index:** -**Func. diagram:** -**P-Group:** Safety Integrated**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

0000 hex

FFFF FFFF hex

0000 hex

**Description:**

Sets the actual Node Identifier (word 3, bit 64 ... 95) for the Motor/Hydraulic Modules.

**Index:**

[0] = Drive 1  
 [1] = Drive 2  
 [2] = Drive 3  
 [3] = Drive 4  
 [4] = Drive 5  
 [5] = Drive 6

**Dependency:**

Refer to: p10012, p10013

**Note:**

The complete Node Identifier (96 bit) is represented in p10012, p10013 and p10014.

**r10015****SI TM54F sampling time / SI t\_sample**

TM54F\_MA,  
 TM54F\_SL

**Can be changed:** -**Calculated:** -**Access level:** 3**Data type:** FloatingPoint32**Dyn. index:** -**Func. diagram:** -**P-Group:** Safety Integrated**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

- [ms]

- [ms]

- [ms]

**Description:**

Displays the active sampling time of the TM54F.

In this clock cycle, the debounced F-DIs (p10017) are evaluated, and converted over to SGEs.

In this clock cycle, also the F-DOs are controlled corresponding to the presently available SGAs.

This clock cycle corresponds to the smallest communication clock cycle that was entered in p10000[].

SGEs are transferred to the drives, and the SGAs received from the drives are transferred with the specific communication clock cycle of each drive in p10000[].

The value of a specific index of p10000[] represents the communication clock cycle of the drive, which is entered in the same index of p10010[].

**Note:**

F-DO: Failsafe Digital Output / SGA: Safety-related output

SGE: Safety-relevant input

**p10017****SI TM54F digital inputs debounce time / SI DI t\_debounce**

TM54F\_MA,  
 TM54F\_SL

**Can be changed:** C2(95)**Calculated:** -**Access level:** 3**Data type:** FloatingPoint32**Dyn. index:** -**Func. diagram:** -**P-Group:** Safety Integrated**Unit group:** -**Unit selection:** -**Not for motor type:** -**Scaling:** -**Expert list:** 1**Min****Max****Factory setting**

1.00 [ms]

100.00 [ms]

1.00 [ms]

**Description:**

Sets the debounce time for digital inputs.

The debounce time is accepted rounded off to whole milliseconds.

The debounce time acts on the following digital inputs:

- Fail-safe digital inputs (F-DI).

- Single-channel digital inputs (DI).

## 2 Parameters

### 2.2 List of parameters

**Note:** Example:  
Debounce time = 1 ms: Fault pulses of 1 ms are filtered; only pulses longer than 2 ms are processed.  
Debounce time = 3 ms: Fault pulses of 3 ms are filtered; only pulses longer than 4 ms are processed.  
The debounce result can be read in r10051.

---

<b>p10020[0...3]</b>	<b>SI TM54F special operating mode selection / SI spec op sel</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	3	1
<b>Description:</b>	Sets the special operating mode for the operating mode "function interface". 0 = Inactive 1 = Safe Operating Stop with braking (SS2) 2 = Safe Operating Stop without braking (SOS) 3 = Safely reduced speed without standstill (SLS) 4 = Safely reduced speed with agreement (SS2 --> SLS)		
<b>Index:</b>	[0] = Drive group 1 [1] = Drive group 2 [2] = Drive group 3 [3] = Drive group 4		
<b>Dependency:</b>	Refer to: p10008		
<b>Note:</b>	Parameter being prepared. For this firmware version, the function interface is not supported. SLS: Safely Limited Speed SOS: Safe Operating Stop SS2: Safe Stop 2		

---

<b>p10021[0...3]</b>	<b>SI TM54F Emergency Stop stop response / SI Emergency Stop</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	2	0
<b>Description:</b>	Sets the stop response for the drive group for Emergency Stop. The input terminal for Emergency Stop is set in p10038. 0 = Stop reaction STO 1 = Stop reaction SS1 2 = Stop reaction SS2		
<b>Index:</b>	[0] = Drive group 1 [1] = Drive group 2 [2] = Drive group 3 [3] = Drive group 4		
<b>Dependency:</b>	Refer to: p10008, p10038		
<b>Note:</b>	Parameter being prepared. For this firmware version, the function interface is not supported.		

<b>p10022[0...3]</b>		<b>SI TM54F STO input terminal / SI STO F-DI</b>	
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2900, 2905
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0
<b>Description:</b>	Sets the fail-safe digital input (F-DI) for the "STO" function (operating mode "control interface").		
<b>Value:</b>	0: Static selected 1: F-DI 0 (X521.2/3/6) 2: F-DI 1 (X521.4/5/7) 3: F-DI 2 (X522.1/2/7) 4: F-DI 3 (X522.3/4/8) 5: F-DI 4 (X522.5/6/9) 6: F-DI 5 (X531.2/3/6) 7: F-DI 6 (X531.4/5/7) 8: F-DI 7 (X532.1/2/7) 9: F-DI 8 (X532.3/4/8) 10: F-DI 9 (X532.5/6/9) 255: Static deselected		
<b>Index:</b>	[0] = Drive group 1 [1] = Drive group 2 [2] = Drive group 3 [3] = Drive group 4		
<b>Note:</b>	If value = 0: No terminal assigned, safety function always selected. If value = 255: No terminal assigned, safety function always deselected. F-DI: Failsafe Digital Input STO: Safe Torque Off		

<b>p10023[0...3]</b>		<b>SI TM54F SS1 input terminal / SI SS1 F-DI</b>	
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2900, 2905
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0
<b>Description:</b>	Sets the fail-safe digital input (F-DI) for the "SS1" function (operating mode "control interface").		
<b>Value:</b>	0: Static selected 1: F-DI 0 (X521.2/3/6) 2: F-DI 1 (X521.4/5/7) 3: F-DI 2 (X522.1/2/7) 4: F-DI 3 (X522.3/4/8) 5: F-DI 4 (X522.5/6/9) 6: F-DI 5 (X531.2/3/6) 7: F-DI 6 (X531.4/5/7) 8: F-DI 7 (X532.1/2/7) 9: F-DI 8 (X532.3/4/8) 10: F-DI 9 (X532.5/6/9) 255: Static deselected		
<b>Index:</b>	[0] = Drive group 1 [1] = Drive group 2 [2] = Drive group 3 [3] = Drive group 4		
<b>Note:</b>	If value = 0: No terminal assigned, safety function always selected.		

## 2 Parameters

### 2.2 List of parameters

If value = 255:  
No terminal assigned, safety function always deselected.  
F-DI: Failsafe Digital Input  
SS1: Safe Stop 1

---

<b>p10024[0...3]</b>	<b>SI TM54F SS2 input terminal / SI SS2 F-DI</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0
<b>Description:</b>	Sets the fail-safe digital input (F-DI) for the "SS2" function (operating mode "control interface").		
<b>Value:</b>	0: Static selected 1: F-DI 0 (X521.2/3/6) 2: F-DI 1 (X521.4/5/7) 3: F-DI 2 (X522.1/2/7) 4: F-DI 3 (X522.3/4/8) 5: F-DI 4 (X522.5/6/9) 6: F-DI 5 (X531.2/3/6) 7: F-DI 6 (X531.4/5/7) 8: F-DI 7 (X532.1/2/7) 9: F-DI 8 (X532.3/4/8) 10: F-DI 9 (X532.5/6/9) 255: Static deselected		
<b>Index:</b>	[0] = Drive group 1 [1] = Drive group 2 [2] = Drive group 3 [3] = Drive group 4		
<b>Note:</b>	If value = 0: No terminal assigned, safety function always selected. If value = 255: No terminal assigned, safety function always deselected. F-DI: Failsafe Digital Input SS2: Safe Stop 2		

---

<b>p10025[0...3]</b>	<b>SI TM54F SOS input terminal / SI SOS F-DI</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0
<b>Description:</b>	Sets the fail-safe digital input (F-DI) for the "SOS" function (operating mode "control interface").		
<b>Value:</b>	0: Static selected 1: F-DI 0 (X521.2/3/6) 2: F-DI 1 (X521.4/5/7) 3: F-DI 2 (X522.1/2/7) 4: F-DI 3 (X522.3/4/8) 5: F-DI 4 (X522.5/6/9) 6: F-DI 5 (X531.2/3/6) 7: F-DI 6 (X531.4/5/7) 8: F-DI 7 (X532.1/2/7) 9: F-DI 8 (X532.3/4/8) 10: F-DI 9 (X532.5/6/9) 255: Static deselected		

**Index:** [0] = Drive group 1  
 [1] = Drive group 2  
 [2] = Drive group 3  
 [3] = Drive group 4

**Note:** If value = 0:  
 No terminal assigned, safety function always selected.  
 If value = 255:  
 No terminal assigned, safety function always deselected.  
 F-DI: Failsafe Digital Input  
 SOS: Safe Operating Stop

---

**p10026[0...3] SI TM54F SLS input terminal / SI SLS F-DI**

TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0

**Description:** Sets the fail-safe digital input (F-DI) for the "SLS" function (operating mode "control interface").

**Value:** 0: Static selected  
 1: F-DI 0 (X521.2/3/6)  
 2: F-DI 1 (X521.4/5/7)  
 3: F-DI 2 (X522.1/2/7)  
 4: F-DI 3 (X522.3/4/8)  
 5: F-DI 4 (X522.5/6/9)  
 6: F-DI 5 (X531.2/3/6)  
 7: F-DI 6 (X531.4/5/7)  
 8: F-DI 7 (X532.1/2/7)  
 9: F-DI 8 (X532.3/4/8)  
 10: F-DI 9 (X532.5/6/9)  
 255: Static deselected

**Index:** [0] = Drive group 1  
 [1] = Drive group 2  
 [2] = Drive group 3  
 [3] = Drive group 4

**Note:** If value = 0:  
 No terminal assigned, safety function always selected.  
 If value = 255:  
 No terminal assigned, safety function always deselected.  
 F-DI: Failsafe Digital Input  
 SLS: Safely Limited Speed

---

**p10027[0...3] SI TM54F SLS limit bit 0 input terminal / SI SLS lim 0 F-DI**

TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0

**Description:** Sets the fail-safe digital input (F-DI) for the limit value bit 0 of the "SLS" function (operating mode "control interface").

**Value:** 0: Static selected  
 1: F-DI 0 (X521.2/3/6)  
 2: F-DI 1 (X521.4/5/7)  
 3: F-DI 2 (X522.1/2/7)  
 4: F-DI 3 (X522.3/4/8)  
 5: F-DI 4 (X522.5/6/9)  
 6: F-DI 5 (X531.2/3/6)  
 7: F-DI 6 (X531.4/5/7)

## 2 Parameters

### 2.2 List of parameters

8: F-DI 7 (X532.1/2/7)  
 9: F-DI 8 (X532.3/4/8)  
 10: F-DI 9 (X532.5/6/9)  
 255: Static deselected

**Index:** [0] = Drive group 1  
 [1] = Drive group 2  
 [2] = Drive group 3  
 [3] = Drive group 4

**Note:** If value = 0:  
 No terminal assigned, selection bit remains statically at "0".  
 If value = 255:  
 No terminal assigned, selection bit remains statically at "1".  
 F-DI: Failsafe Digital Input  
 SLS: Safely Limited Speed

---

#### p10028[0...3] SI TM54F SLS limit bit 1 input terminal / SI SLS lim 1 F-DI

TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0

**Description:** Sets the fail-safe digital input (F-DI) for the limit value bit 1 of the "SLS" function (operating mode "control interface").

**Value:** 0: Static selected  
 1: F-DI 0 (X521.2/3/6)  
 2: F-DI 1 (X521.4/5/7)  
 3: F-DI 2 (X522.1/2/7)  
 4: F-DI 3 (X522.3/4/8)  
 5: F-DI 4 (X522.5/6/9)  
 6: F-DI 5 (X531.2/3/6)  
 7: F-DI 6 (X531.4/5/7)  
 8: F-DI 7 (X532.1/2/7)  
 9: F-DI 8 (X532.3/4/8)  
 10: F-DI 9 (X532.5/6/9)  
 255: Static deselected

**Index:** [0] = Drive group 1  
 [1] = Drive group 2  
 [2] = Drive group 3  
 [3] = Drive group 4

**Note:** If value = 0:  
 No terminal assigned, selection bit remains statically at "0".  
 If value = 255:  
 No terminal assigned, selection bit remains statically at "1".  
 F-DI: Failsafe Digital Input  
 SLS: Safely Limited Speed

---

#### p10030[0...3] SI TM54F SDI positive input terminal / SI SDI pos F-DI

TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0

**Description:** Sets the fail-safe digital input (F-DI) for the "SDI" function (operating mode "control interface").

**Value:** 0: Static selected  
 1: F-DI 0 (X521.2/3/6)  
 2: F-DI 1 (X521.4/5/7)  
 3: F-DI 2 (X522.1/2/7)

4: F-DI 3 (X522.3/4/8)  
 5: F-DI 4 (X522.5/6/9)  
 6: F-DI 5 (X531.2/3/6)  
 7: F-DI 6 (X531.4/5/7)  
 8: F-DI 7 (X532.1/2/7)  
 9: F-DI 8 (X532.3/4/8)  
 10: F-DI 9 (X532.5/6/9)  
 255: Static deselected

**Index:** [0] = Drive group 1  
 [1] = Drive group 2  
 [2] = Drive group 3  
 [3] = Drive group 4

**Note:** If value = 0:  
 No terminal assigned, safety function always selected.  
 If value = 255:  
 No terminal assigned, safety function always deselected.  
 F-DI: Failsafe Digital Input  
 SDI: Safe Direction (safe motion direction)

---

### p10031[0...3] SI TM54F SDI negative input terminal / SI SDI neg F-DI

TM54F\_MA,  
 TM54F\_SL

**Can be changed:** C2(95)

**Calculated:** -

**Access level:** 3

**Data type:** Integer16

**Dyn. index:** -

**Func. diagram:** -

**P-Group:** Safety Integrated

**Unit group:** -

**Unit selection:** -

**Not for motor type:** -

**Scaling:** -

**Expert list:** 1

**Min**

**Max**

**Factory setting**

0

255

0

**Description:** Sets the fail-safe digital input (F-DI) for the "SDI negative" function (operating mode "control interface").

**Value:** 0: Static selected  
 1: F-DI 0 (X521.2/3/6)  
 2: F-DI 1 (X521.4/5/7)  
 3: F-DI 2 (X522.1/2/7)  
 4: F-DI 3 (X522.3/4/8)  
 5: F-DI 4 (X522.5/6/9)  
 6: F-DI 5 (X531.2/3/6)  
 7: F-DI 6 (X531.4/5/7)  
 8: F-DI 7 (X532.1/2/7)  
 9: F-DI 8 (X532.3/4/8)  
 10: F-DI 9 (X532.5/6/9)  
 255: Static deselected

**Index:** [0] = Drive group 1  
 [1] = Drive group 2  
 [2] = Drive group 3  
 [3] = Drive group 4

**Note:** If value = 0:  
 No terminal assigned, safety function always selected.  
 If value = 255:  
 No terminal assigned, safety function always deselected.  
 F-DI: Failsafe Digital Input  
 SDI: Safe Direction (safe motion direction)

---

<b>p10032[0...3]</b>	<b>SI TM54F SLP input terminal / SI SLP F-DI</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0
<b>Description:</b>	Sets the fail-safe digital input (F-DI) for the "SLP" function (operating mode "control interface").		
<b>Value:</b>	0: Static selected 1: F-DI 0 (X521.2/3/6) 2: F-DI 1 (X521.4/5/7) 3: F-DI 2 (X522.1/2/7) 4: F-DI 3 (X522.3/4/8) 5: F-DI 4 (X522.5/6/9) 6: F-DI 5 (X531.2/3/6) 7: F-DI 6 (X531.4/5/7) 8: F-DI 7 (X532.1/2/7) 9: F-DI 8 (X532.3/4/8) 10: F-DI 9 (X532.5/6/9) 255: Static deselected		
<b>Index:</b>	[0] = Drive group 1 [1] = Drive group 2 [2] = Drive group 3 [3] = Drive group 4		
<b>Note:</b>	If value = 0: No terminal assigned, safety function always selected. If value = 255: No terminal assigned, safety function always deselected. F-DI: Failsafe Digital Input SLP: Safely Limited Position		

---

<b>p10033[0...3]</b>	<b>SI TM54F SLP position range input terminal / SI SLP pos F-DI</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	255	0
<b>Description:</b>	Sets the fail-safe digital input (F-DI) for the selection of the position range for "SLP" (operating mode "control interface").		
<b>Value:</b>	0: Static selected 1: F-DI 0 (X521.2/3/6) 2: F-DI 1 (X521.4/5/7) 3: F-DI 2 (X522.1/2/7) 4: F-DI 3 (X522.3/4/8) 5: F-DI 4 (X522.5/6/9) 6: F-DI 5 (X531.2/3/6) 7: F-DI 6 (X531.4/5/7) 8: F-DI 7 (X532.1/2/7) 9: F-DI 8 (X532.3/4/8) 10: F-DI 9 (X532.5/6/9) 255: Static deselected		
<b>Index:</b>	[0] = Drive group 1 [1] = Drive group 2 [2] = Drive group 3 [3] = Drive group 4		

**Note:** If value = 0:  
No terminal assigned, selection bit remains statically at "0".  
If value = 255:  
No terminal assigned, selection bit remains statically at "1".  
F-DI: Failsafe Digital Input  
SLP: Safely Limited Position

**p10036[0...3]****SI TM54F special operating mode input terminal / SI spec mode F-DI**TM54F\_MA,  
TM54F\_SL

<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 4
<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
0	255	0

**Description:** Sets the fail-safe digital input (F-DI) for the "special operating mode" function (operating mode "function interface").

**Value:** 0: Static selected  
1: F-DI 0 (X521.2/3/6)  
2: F-DI 1 (X521.4/5/7)  
3: F-DI 2 (X522.1/2/7)  
4: F-DI 3 (X522.3/4/8)  
5: F-DI 4 (X522.5/6/9)  
6: F-DI 5 (X531.2/3/6)  
7: F-DI 6 (X531.4/5/7)  
8: F-DI 7 (X532.1/2/7)  
9: F-DI 8 (X532.3/4/8)  
10: F-DI 9 (X532.5/6/9)  
255: Static deselected

**Index:** [0] = Drive group 1  
[1] = Drive group 2  
[2] = Drive group 3  
[3] = Drive group 4

**Note:** Parameter being prepared. For this firmware version, the function interface is not supported.  
If value = 0:  
No terminal assigned, static special operation.  
If value = 255:  
No terminal assigned, static normal operation.  
F-DI: Failsafe Digital Input

**p10037[0...3]****SI TM54F agreement input terminal / SI agreement F-DI**TM54F\_MA,  
TM54F\_SL

<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 4
<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
0	255	0

**Description:** Sets the fail-safe digital input (F-DI) for the "agreement" function (operating mode "function interface").

**Value:** 0: Static selected  
1: F-DI 0 (X521.2/3/6)  
2: F-DI 1 (X521.4/5/7)  
3: F-DI 2 (X522.1/2/7)  
4: F-DI 3 (X522.3/4/8)  
5: F-DI 4 (X522.5/6/9)  
6: F-DI 5 (X531.2/3/6)  
7: F-DI 6 (X531.4/5/7)  
8: F-DI 7 (X532.1/2/7)  
9: F-DI 8 (X532.3/4/8)  
10: F-DI 9 (X532.5/6/9)  
255: Static deselected

## 2 Parameters

### 2.2 List of parameters

<b>Index:</b>	[0] = Drive group 1 [1] = Drive group 2 [2] = Drive group 3 [3] = Drive group 4
<b>Note:</b>	Parameter being prepared. For this firmware version, the function interface is not supported. If value = 0: No terminal assigned, no static agreement. If value = 255: No terminal assigned, static agreement. F-DI: Failsafe Digital Input

---

<b>p10038[0...3]</b>	<b>SI TM54F Emergency Stop input terminal / SI E-Stop F-DI</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95) <b>Data type:</b> Integer16 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 255	<b>Access level:</b> 4 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the fail-safe digital input (F-DI) for the "Emergency Stop" function (operating mode "function interface"). The behavior of this input signal is set in p10021.		
<b>Value:</b>	0: Static selected 1: F-DI 0 (X521.2/3/6) 2: F-DI 1 (X521.4/5/7) 3: F-DI 2 (X522.1/2/7) 4: F-DI 3 (X522.3/4/8) 5: F-DI 4 (X522.5/6/9) 6: F-DI 5 (X531.2/3/6) 7: F-DI 6 (X531.4/5/7) 8: F-DI 7 (X532.1/2/7) 9: F-DI 8 (X532.3/4/8) 10: F-DI 9 (X532.5/6/9) 255: Static deselected		
<b>Index:</b>	[0] = Drive group 1 [1] = Drive group 2 [2] = Drive group 3 [3] = Drive group 4		
<b>Dependency:</b>	Refer to: p10008, p10021		
<b>Note:</b>	Parameter being prepared. For this firmware version, the function interface is not supported. If value = 0: No terminal assigned, "Emergency Stop" statically selected. If value = 255: No terminal assigned, no "Emergency Stop" statically deselected. F-DI: Failsafe Digital Input		

---

<b>p10039[0...3]</b>	<b>SI TM54F Safe State signal selection / SI Safe State Sel</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95) <b>Data type:</b> Unsigned32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2901, 2906 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 0001 bin
<b>Description:</b>	Sets the signals for the drive group specific signal "Safe State".		
<b>Index:</b>	[0] = Drive group 1 [1] = Drive group 2 [2] = Drive group 3 [3] = Drive group 4		

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	Power_removed	Selected	Not selected	-
	01	SS1_active	Selected	Not selected	-
	02	SS2_active	Selected	Not selected	-
	03	SOS_active	Selected	Not selected	-
	04	SLS_active	Selected	Not selected	-
	05	SDI_pos_active	Selected	Not selected	-
	06	SDI_neg_active	Selected	Not selected	-
	07	SLP_active	Selected	Not selected	-

p10040	SI TM54F F-DI input mode / SI F-DI inp_mode
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95) <b>Calculated:</b> - <b>Access level:</b> 3 <b>Data type:</b> Unsigned32 <b>Dyn. index:</b> - <b>Func. diagram:</b> - <b>P-Group:</b> Safety Integrated <b>Unit group:</b> - <b>Unit selection:</b> - <b>Not for motor type:</b> - <b>Scaling:</b> - <b>Expert list:</b> 1 <b>Min</b> <b>Max</b> <b>Factory setting</b> -      -      0000 0000 0000 0000 bin

**Description:** Sets the input mode for the safety digital inputs (F-DI).

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	F-DI 0, DI 1+ (X521.3)	NO contact	NC contact	2893
	01	F-DI 1, DI 3+ (X521.5)	NO contact	NC contact	2893
	02	F-DI 2, DI 5+ (X522.2)	NO contact	NC contact	2893
	03	F-DI 3, DI 7+ (X522.4)	NO contact	NC contact	2893
	04	F-DI 4, DI 9+ (X522.6)	NO contact	NC contact	2893
	05	F-DI 5, DI 11+ (X531.3)	NO contact	NC contact	2894
	06	F-DI 6, DI 13+ (X531.5)	NO contact	NC contact	2894
	07	F-DI 7, DI 15+ (X532.2)	NO contact	NC contact	2894
	08	F-DI 8, DI 17+ (X532.4)	NO contact	NC contact	2894
	09	F-DI 9, DI 19+ (X532.6)	NO contact	NC contact	2894

**Note:** Only an NC contact can be connected for the safety digital inputs not listed.

p10041	SI TM54F F-DI enable for test / SI F-DI enab test
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95) <b>Calculated:</b> - <b>Access level:</b> 3 <b>Data type:</b> Unsigned32 <b>Dyn. index:</b> - <b>Func. diagram:</b> 2892 <b>P-Group:</b> Safety Integrated <b>Unit group:</b> - <b>Unit selection:</b> - <b>Not for motor type:</b> - <b>Scaling:</b> - <b>Expert list:</b> 1 <b>Min</b> <b>Max</b> <b>Factory setting</b> -      -      0000 0000 0000 0000 bin

**Description:** Enable signal for the integration of F-DI in the test (forced checking procedure) of the sensor power supply.

Bit field:	Bit	Signal name	1 signal	0 signal	FP
	00	F-DI 0, power supply L1+	Test active	No test	-
	01	F-DI 1, power supply L1+	Test active	No test	-
	02	F-DI 2, power supply L1+	Test active	No test	-
	03	F-DI 3, power supply L1+	Test active	No test	-
	04	F-DI 4, power supply L1+	Test active	No test	-
	05	F-DI 5, power supply L2+	Test active	No test	-
	06	F-DI 6, power supply L2+	Test active	No test	-
	07	F-DI 7, power supply L2+	Test active	No test	-
	08	F-DI 8, power supply L2+	Test active	No test	-
	09	F-DI 9, power supply L2+	Test active	No test	-

**Note:** F-DI: Failsafe Digital Input

<b>p10042[0...5]</b>	<b>SI TM54F F-DO 0 signal sources / SI F-DO 0 S_src</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2902, 2907
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	783	0

**Description:** Sets the signal sources for F-DO 0.  
The 6 signal sources in p10042[0...5] are AND'ed and the result is output at F-DO 0.

- Value:**
- 0: No function
  - 1: Drive group 1 STO active
  - 2: Drive group 1 SS1 active
  - 3: Drive group 1 SS2 active
  - 4: Drive group 1 SOS active
  - 5: Drive group 1 SLS active
  - 6: Drive group 1 SSM feedback signal active
  - 7: Drive group 1 safe state
  - 8: Drive group 1 SOS selected
  - 9: Drive group 1 internal event
  - 10: Drive group 1 active SLS stage bit 0
  - 11: Drive group 1 active SLS stage bit 1
  - 12: Drive group 1 SDI positive active
  - 13: Drive group 1 SDI negative active
  - 14: Drive group 1 SLP active
  - 15: Drive group 1 active SLP area
  - 257: Drive group 2 STO active
  - 258: Drive group 2 SS1 active
  - 259: Drive group 2 SS2 active
  - 260: Drive group 2 SOS active
  - 261: Drive group 2 SLS active
  - 262: Drive group 2 SSM feedback signal active
  - 263: Drive group 2 safe state
  - 264: Drive group 2 SOS selected
  - 265: Drive group 2 internal event
  - 266: Drive group 2 active SLS stage bit 0
  - 267: Drive group 2 active SLS stage bit 1
  - 268: Drive group 2 SDI positive active
  - 269: Drive group 2 SDI negative active
  - 270: Drive group 2 SLP active
  - 271: Drive group 2 active SLP area
  - 513: Drive group 3 STO active
  - 514: Drive group 3 SS1 active
  - 515: Drive group 3 SS2 active
  - 516: Drive group 3 SOS active
  - 517: Drive group 3 SLS active
  - 518: Drive group 3 SSM feedback signal active
  - 519: Drive group 3 safe state
  - 520: Drive group 3 SOS selected
  - 521: Drive group 3 internal event
  - 522: Drive group 3 active SLS stage bit 0
  - 523: Drive group 3 active SLS stage bit 1
  - 524: Drive group 3 SDI positive active
  - 525: Drive group 3 SDI negative active
  - 526: Drive group 3 SLP active
  - 527: Drive group 3 active SLP area
  - 769: Drive group 4 STO active
  - 770: Drive group 4 SS1 active
  - 771: Drive group 4 SS2 active
  - 772: Drive group 4 SOS active
  - 773: Drive group 4 SLS active
  - 774: Drive group 4 SSM feedback signal active
  - 775: Drive group 4 safe state

776: Drive group 4 SOS selected  
 777: Drive group 4 internal event  
 778: Drive group 4 active SLS stage bit 0  
 779: Drive group 4 active SLS stage bit 1  
 780: Drive group 4 SDI positive active  
 781: Drive group 4 SDI negative active  
 782: Drive group 4 SLP active  
 783: Drive group 4 active SLP area

**Index:** [0] = AND logic operation input 1  
 [1] = AND logic operation input 2  
 [2] = AND logic operation input 3  
 [3] = AND logic operation input 4  
 [4] = AND logic operation input 5  
 [5] = AND logic operation input 6

**Note:** F-DO: Failsafe Digital Output

---

### p10043[0...5] SI TM54F F-DO 1 signal sources / SI F-DO 1 S\_src

TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2902, 2907
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	783	0

**Description:** Sets the signal sources for F-DO 1.

The 6 signal sources in p10043[0...5] are AND'ed and the result is output at F-DO 1.

**Value:**

- 0: No function
- 1: Drive group 1 STO active
- 2: Drive group 1 SS1 active
- 3: Drive group 1 SS2 active
- 4: Drive group 1 SOS active
- 5: Drive group 1 SLS active
- 6: Drive group 1 SSM feedback signal active
- 7: Drive group 1 safe state
- 8: Drive group 1 SOS selected
- 9: Drive group 1 internal event
- 10: Drive group 1 active SLS stage bit 0
- 11: Drive group 1 active SLS stage bit 1
- 12: Drive group 1 SDI positive active
- 13: Drive group 1 SDI negative active
- 14: Drive group 1 SLP active
- 15: Drive group 1 active SLP area
- 257: Drive group 2 STO active
- 258: Drive group 2 SS1 active
- 259: Drive group 2 SS2 active
- 260: Drive group 2 SOS active
- 261: Drive group 2 SLS active
- 262: Drive group 2 SSM feedback signal active
- 263: Drive group 2 safe state
- 264: Drive group 2 SOS selected
- 265: Drive group 2 internal event
- 266: Drive group 2 active SLS stage bit 0
- 267: Drive group 2 active SLS stage bit 1
- 268: Drive group 2 SDI positive active
- 269: Drive group 2 SDI negative active
- 270: Drive group 2 SLP active
- 271: Drive group 2 active SLP area
- 513: Drive group 3 STO active
- 514: Drive group 3 SS1 active
- 515: Drive group 3 SS2 active
- 516: Drive group 3 SOS active
- 517: Drive group 3 SLS active
- 518: Drive group 3 SSM feedback signal active
- 519: Drive group 3 safe state

## 2 Parameters

### 2.2 List of parameters

520: Drive group 3 SOS selected  
 521: Drive group 3 internal event  
 522: Drive group 3 active SLS stage bit 0  
 523: Drive group 3 active SLS stage bit 1  
 524: Drive group 3 SDI positive active  
 525: Drive group 3 SDI negative active  
 526: Drive group 3 SLP active  
 527: Drive group 3 active SLP area  
 769: Drive group 4 STO active  
 770: Drive group 4 SS1 active  
 771: Drive group 4 SS2 active  
 772: Drive group 4 SOS active  
 773: Drive group 4 SLS active  
 774: Drive group 4 SSM feedback signal active  
 775: Drive group 4 safe state  
 776: Drive group 4 SOS selected  
 777: Drive group 4 internal event  
 778: Drive group 4 active SLS stage bit 0  
 779: Drive group 4 active SLS stage bit 1  
 780: Drive group 4 SDI positive active  
 781: Drive group 4 SDI negative active  
 782: Drive group 4 SLP active  
 783: Drive group 4 active SLP area

**Index:** [0] = AND logic operation input 1  
 [1] = AND logic operation input 2  
 [2] = AND logic operation input 3  
 [3] = AND logic operation input 4  
 [4] = AND logic operation input 5  
 [5] = AND logic operation input 6

**Note:** F-DO: Failsafe Digital Output

---

#### p10044[0...5] SI TM54F F-DO 2 signal sources / SI F-DO 2 S\_src

TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2902, 2907
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	783	0

**Description:** Sets the signal sources for F-DO 2.

The 6 signal sources in p10044[0...5] are AND'ed and the result is output at F-DO 2.

**Value:**

0: No function  
 1: Drive group 1 STO active  
 2: Drive group 1 SS1 active  
 3: Drive group 1 SS2 active  
 4: Drive group 1 SOS active  
 5: Drive group 1 SLS active  
 6: Drive group 1 SSM feedback signal active  
 7: Drive group 1 safe state  
 8: Drive group 1 SOS selected  
 9: Drive group 1 internal event  
 10: Drive group 1 active SLS stage bit 0  
 11: Drive group 1 active SLS stage bit 1  
 12: Drive group 1 SDI positive active  
 13: Drive group 1 SDI negative active  
 14: Drive group 1 SLP active  
 15: Drive group 1 active SLP area  
 257: Drive group 2 STO active  
 258: Drive group 2 SS1 active  
 259: Drive group 2 SS2 active  
 260: Drive group 2 SOS active  
 261: Drive group 2 SLS active  
 262: Drive group 2 SSM feedback signal active  
 263: Drive group 2 safe state

264: Drive group 2 SOS selected  
 265: Drive group 2 internal event  
 266: Drive group 2 active SLS stage bit 0  
 267: Drive group 2 active SLS stage bit 1  
 268: Drive group 2 SDI positive active  
 269: Drive group 2 SDI negative active  
 270: Drive group 2 SLP active  
 271: Drive group 2 active SLP area  
 513: Drive group 3 STO active  
 514: Drive group 3 SS1 active  
 515: Drive group 3 SS2 active  
 516: Drive group 3 SOS active  
 517: Drive group 3 SLS active  
 518: Drive group 3 SSM feedback signal active  
 519: Drive group 3 safe state  
 520: Drive group 3 SOS selected  
 521: Drive group 3 internal event  
 522: Drive group 3 active SLS stage bit 0  
 523: Drive group 3 active SLS stage bit 1  
 524: Drive group 3 SDI positive active  
 525: Drive group 3 SDI negative active  
 526: Drive group 3 SLP active  
 527: Drive group 3 active SLP area  
 769: Drive group 4 STO active  
 770: Drive group 4 SS1 active  
 771: Drive group 4 SS2 active  
 772: Drive group 4 SOS active  
 773: Drive group 4 SLS active  
 774: Drive group 4 SSM feedback signal active  
 775: Drive group 4 safe state  
 776: Drive group 4 SOS selected  
 777: Drive group 4 internal event  
 778: Drive group 4 active SLS stage bit 0  
 779: Drive group 4 active SLS stage bit 1  
 780: Drive group 4 SDI positive active  
 781: Drive group 4 SDI negative active  
 782: Drive group 4 SLP active  
 783: Drive group 4 active SLP area

**Index:** [0] = AND logic operation input 1  
 [1] = AND logic operation input 2  
 [2] = AND logic operation input 3  
 [3] = AND logic operation input 4  
 [4] = AND logic operation input 5  
 [5] = AND logic operation input 6

**Note:** F-DO: Failsafe Digital Output

### p10045[0...5]

### SI TM54F F-DO 3 signal sources / SI F-DO 3 S\_src

TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2902, 2907
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	783	0

**Description:** Sets the signal sources for F-DO 3.  
 The 6 signal sources in p10045[0...5] are AND'ed and the result is output at F-DO 3.

**Value:** 0: No function  
 1: Drive group 1 STO active  
 2: Drive group 1 SS1 active  
 3: Drive group 1 SS2 active  
 4: Drive group 1 SOS active  
 5: Drive group 1 SLS active  
 6: Drive group 1 SSM feedback signal active  
 7: Drive group 1 safe state

## 2 Parameters

### 2.2 List of parameters

8:	Drive group 1 SOS selected
9:	Drive group 1 internal event
10:	Drive group 1 active SLS stage bit 0
11:	Drive group 1 active SLS stage bit 1
12:	Drive group 1 SDI positive active
13:	Drive group 1 SDI negative active
14:	Drive group 1 SLP active
15:	Drive group 1 active SLP area
257:	Drive group 2 STO active
258:	Drive group 2 SS1 active
259:	Drive group 2 SS2 active
260:	Drive group 2 SOS active
261:	Drive group 2 SLS active
262:	Drive group 2 SSM feedback signal active
263:	Drive group 2 safe state
264:	Drive group 2 SOS selected
265:	Drive group 2 internal event
266:	Drive group 2 active SLS stage bit 0
267:	Drive group 2 active SLS stage bit 1
268:	Drive group 2 SDI positive active
269:	Drive group 2 SDI negative active
270:	Drive group 2 SLP active
271:	Drive group 2 active SLP area
513:	Drive group 3 STO active
514:	Drive group 3 SS1 active
515:	Drive group 3 SS2 active
516:	Drive group 3 SOS active
517:	Drive group 3 SLS active
518:	Drive group 3 SSM feedback signal active
519:	Drive group 3 safe state
520:	Drive group 3 SOS selected
521:	Drive group 3 internal event
522:	Drive group 3 active SLS stage bit 0
523:	Drive group 3 active SLS stage bit 1
524:	Drive group 3 SDI positive active
525:	Drive group 3 SDI negative active
526:	Drive group 3 SLP active
527:	Drive group 3 active SLP area
769:	Drive group 4 STO active
770:	Drive group 4 SS1 active
771:	Drive group 4 SS2 active
772:	Drive group 4 SOS active
773:	Drive group 4 SLS active
774:	Drive group 4 SSM feedback signal active
775:	Drive group 4 safe state
776:	Drive group 4 SOS selected
777:	Drive group 4 internal event
778:	Drive group 4 active SLS stage bit 0
779:	Drive group 4 active SLS stage bit 1
780:	Drive group 4 SDI positive active
781:	Drive group 4 SDI negative active
782:	Drive group 4 SLP active
783:	Drive group 4 active SLP area

**Index:** [0] = AND logic operation input 1  
[1] = AND logic operation input 2  
[2] = AND logic operation input 3  
[3] = AND logic operation input 4  
[4] = AND logic operation input 5  
[5] = AND logic operation input 6

**Note:** F-DO: Failsafe Digital Output

<b>p10046</b>	<b>SI TM54F F-DO feedback signal input activation / SI F-DO FS act</b>			
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2892	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 bin	
<b>Description:</b>	Activates the readback input for the safety digital outputs (F-DO) The test mode for the particular safety digital output is set in p10047.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Read back F-DO 0	Test active	No test
	01	Read back F-DO 1	Test active	No test
	02	Read back F-DO 2	Test active	No test
	03	Read back F-DO 3	Test active	No test
<b>Dependency:</b>	Refer to: p10047			
<b>Note:</b>	F-DO: Failsafe Digital Output			
<b>p10047[0...3]</b>	<b>SI TM54F F-DO test stop mode / SI F-DO test mode</b>			
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	1	3	2	
<b>Description:</b>	Sets the test stop mode for the particular safety digital output (F-DO) Index 0: F-DO 0 Index 1: F-DO 1 Index 2: F-DO 2 Index 3: F-DO 3			
<b>Value:</b>	1: Test mode 1 evaluation of int. diagnostic signal (passive load) 2: Test mode 2 read back F-DO in DI (relay circuit) 3: Test mode 3 read back F-DO in DI (actuator with feedback signal)			
<b>Note:</b>	If value = 1: When this test mode is being used, and excessive resistance of the load between DO+ and DO- can lead to problems during the test stop. It is therefore important to make sure that the load resistance at an individual F-DO does not exceed 10 kOhm.			
<b>p10048</b>	<b>SI TM54F F-DI F-DO test stop configuration / SI teststop config</b>			
TM54F_MA	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	1	0	
<b>Description:</b>	Configures the test stop for F-DI and F-DO of the TM54F. If the automatic test stop is activated, then the test stop can still be started using binector input p10007. Note: The automatic test stop is started after power up, partial power up or a warm restart.			
<b>Value:</b>	0: Manual test stop via BICO p10007 1: Automatic test stop			

## 2 Parameters

### 2.2 List of parameters

<b>r10051.0...9</b>		<b>CO/BO: SI TM54F digital inputs status / SI DI status</b>			
TM54F_MA, TM54F_SL	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2893, 2894		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the single-channel, logical, and debounced status of the safety digital inputs F-DI 0 ... 9 at Terminal Module 54F (TM54F).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	F-DI 0	Logical 1	Logical 0	2893
	01	F-DI 1	Logical 1	Logical 0	2893
	02	F-DI 2	Logical 1	Logical 0	2893
	03	F-DI 3	Logical 1	Logical 0	2893
	04	F-DI 4	Logical 1	Logical 0	2893
	05	F-DI 5	Logical 1	Logical 0	2894
	06	F-DI 6	Logical 1	Logical 0	2894
	07	F-DI 7	Logical 1	Logical 0	2894
	08	F-DI 8	Logical 1	Logical 0	2894
	09	F-DI 9	Logical 1	Logical 0	2894
<b>Dependency:</b>	Refer to: p10017, p10040				
<b>Note:</b>	If a safety function is assigned to an input (e.g. via p10022), then the following applies:				
	- logical "0": Safety function is selected				
	- logical "1": Safety function is de-selected				
	The interrelationship between the logical level and the external voltage level at the input depends on the parameterization (refer to p10040) of the input as either NC or NO contact and is aligned to the use of a safety function:				
	With 24 V at the input, NC contacts have a logical "1" level, for 0 V at the input, a logical "0" level.				
	This means that an NC/NC contact parameterization of 0 V at both inputs of the F-DI selects the safety function, for 24 V at both inputs, de-selects the safety function.				
	With 24 V at the input, NO contacts have a logical "0" level, for 0 V at the input, a logical "1" level.				
	This means that for an NC/NO contact parameterization, the level 0 V/24 V selects the safety function, the level 24 V/0 V de-selects the safety function.				
	F-DI: Failsafe Digital Input				

<b>r10052.0...3</b>		<b>CO/BO: SI TM54F digital outputs status / SI DO status</b>			
TM54F_MA, TM54F_SL	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the status of the digital outputs at Terminal Module 54F (TM54F). TM54F_MA (master): display of DO- TM54F_SL (slave): display of DO+				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DO 0	High	Low	2895
	01	DO 1	High	Low	2895
	02	DO 2	High	Low	2895
	03	DO 3	High	Low	2895
<b>Note:</b>	F-DO: Failsafe Digital Output				

<b>r10053.0...3</b>		<b>CO/BO: SI TM54F digital inputs 20 ... 23 status / SI DI 20...23 stat</b>			
TM54F_SL	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2892		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the status of the digital inputs at the Terminal Module 54F (TM54F).				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	DI 20	High	Low	2895
	01	DI 21	High	Low	2895
	02	DI 22	High	Low	2895
	03	DI 23	High	Low	2895
<b>r10054</b>		<b>SI TM54F failsafe events active / SI failsafe act</b>			
TM54F_MA, TM54F_SL	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	<p>Displays the events that lead to the transfer of failsafe signals to all drives assigned to the TM54F.</p> <p>If the second channel of the TM54F transmits failsafe signals, then these are synchronized to the other channel. In this particular case, p10054 of the other TM54F channel should be evaluated.</p> <p>Possibilities of resolving the situation:</p> <ul style="list-style-type: none"> <li>- error during test stop: correctly perform the test stop.</li> <li>- internal software error: no possibility of resolving this problem, POWER ON.</li> <li>- internal synchronization problem: no possibility of resolving this problem, POWER ON.</li> <li>- internal status error: no possibility of resolving this problem, POWER ON.</li> <li>- parameterizing error: evaluate fault F35004 or F35006. Resolve parameterizing error. POWER ON. After the TM54F firmware has been updated, a POWER ON may be required.</li> <li>- all other causes: remove the cause of the error and carry out a safe acknowledgment (p10006).</li> </ul>				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Commissioning mode active (p0010 = 95)	Yes	No	2891
	01	Checksum error of the safety parameters	Yes	No	-
	02	Synchronization problem within TM54F	Yes	No	-
	03	Internal software error	Yes	No	-
	04	Overvoltage in the TM54F	Yes	No	-
	05	Undervoltage in the TM54F	Yes	No	-
	06	Error at test stop	Yes	No	-
	07	Error for crosswise data comparison within TM54F	Yes	No	-
	08	Overtemperature in the TM54F	Yes	No	-
	09	Internal state error	Yes	No	-
	10	Param error	Yes	No	-
	31	Failsafe events active on another channel	Yes	No	-

<b>r10055</b>		<b>SI TM54F communication status drive-specific / SI comm_stat drv</b>																																						
TM54F_MA, TM54F_SL	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -																																					
<b>Description:</b>	Displays the communication status of the individual drives with the Terminal Module 54F (TM54F). For r10055 = 0, the following applies: All drives assigned in p10010 communicate with the TM54F.																																							
<b>Bit field:</b>	<table border="1"> <thead> <tr> <th>Bit</th> <th>Signal name</th> <th>1 signal</th> <th>0 signal</th> <th>FP</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Communication between drive 1 and TM54F</td> <td>Not configured</td> <td>Configured</td> <td>-</td> </tr> <tr> <td>01</td> <td>Communication between drive 2 and TM54F</td> <td>Not configured</td> <td>Configured</td> <td>-</td> </tr> <tr> <td>02</td> <td>Communication between drive 3 and TM54F</td> <td>Not configured</td> <td>Configured</td> <td>-</td> </tr> <tr> <td>03</td> <td>Communication between drive 4 and TM54F</td> <td>Not configured</td> <td>Configured</td> <td>-</td> </tr> <tr> <td>04</td> <td>Communication between drive 5 and TM54F</td> <td>Not configured</td> <td>Configured</td> <td>-</td> </tr> <tr> <td>05</td> <td>Communication between drive 6 and TM54F</td> <td>Not configured</td> <td>Configured</td> <td>-</td> </tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	FP	00	Communication between drive 1 and TM54F	Not configured	Configured	-	01	Communication between drive 2 and TM54F	Not configured	Configured	-	02	Communication between drive 3 and TM54F	Not configured	Configured	-	03	Communication between drive 4 and TM54F	Not configured	Configured	-	04	Communication between drive 5 and TM54F	Not configured	Configured	-	05	Communication between drive 6 and TM54F	Not configured	Configured	-				
Bit	Signal name	1 signal	0 signal	FP																																				
00	Communication between drive 1 and TM54F	Not configured	Configured	-																																				
01	Communication between drive 2 and TM54F	Not configured	Configured	-																																				
02	Communication between drive 3 and TM54F	Not configured	Configured	-																																				
03	Communication between drive 4 and TM54F	Not configured	Configured	-																																				
04	Communication between drive 5 and TM54F	Not configured	Configured	-																																				
05	Communication between drive 6 and TM54F	Not configured	Configured	-																																				
<b>r10056.0</b>		<b>CO/BO: SI TM54F status / SI stat</b>																																						
TM54F_MA	<b>Can be changed:</b> - <b>Data type:</b> Unsigned32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -																																					
<b>Description:</b>	Display and BICO output for the status of the Terminal Module 54F (TM54F).																																							
<b>Bit field:</b>	<table border="1"> <thead> <tr> <th>Bit</th> <th>Signal name</th> <th>1 signal</th> <th>0 signal</th> <th>FP</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Test stop status</td> <td>Active</td> <td>Inactive</td> <td>-</td> </tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	FP	00	Test stop status	Active	Inactive	-																													
Bit	Signal name	1 signal	0 signal	FP																																				
00	Test stop status	Active	Inactive	-																																				
<b>p10061</b>		<b>SI TM54F password input / SI password inp</b>																																						
TM54F_MA, TM54F_SL	<b>Can be changed:</b> U, T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> FFFF FFFF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> 2891 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 hex																																					
<b>Description:</b>	Enters the Safety Integrated password for the Terminal Module 54F (TM54F). This password is required to change the safety-relevant parameters.																																							

<b>p10062</b>	<b>SI TM54F password new / SI password new</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95) <b>Data type:</b> Unsigned32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> FFFF FFFF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> 2891 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 hex
<b>Description:</b>	Enters the new Safety Integrated password for the Terminal Module 54F (TM54F).		
<b>Dependency:</b>	A change made to the Safety Integrated password must be acknowledged in the following parameter: Refer to: p10063		
<b>p10063</b>	<b>SI TM54F password acknowledgment / SI ackn password</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> C2(95) <b>Data type:</b> Unsigned32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0000 hex	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> FFFF FFFF hex	<b>Access level:</b> 3 <b>Func. diagram:</b> 2891 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0000 hex
<b>Description:</b>	Acknowledgment of the new Safety Integrated password for the Terminal Module 54F (TM54F).		
<b>Dependency:</b>	Refer to: p10062		
<b>Note:</b>	The new password entered into p10062 must be re-entered in order to acknowledge. p10062 = p10063 = 0 is automatically set after the new Safety Integrated password has been successfully acknowledged.		
<b>p10070</b>	<b>SI TM54F module identifier / SI module ID</b>		
TM54F_MA	<b>Can be changed:</b> C2(95), T <b>Data type:</b> Unsigned32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 4294967295	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	CRC via Node Identifier of the TM54F		
<b>r10090[0...3]</b>	<b>SI TM54F version / SI Version</b>		
TM54F_MA, TM54F_SL	<b>Can be changed:</b> - <b>Data type:</b> Unsigned16 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> - <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> -
<b>Description:</b>	Displays the Safety Integrated version for the Terminal Module 54F (TM54F).		
<b>Index:</b>	[0] = Safety Version (major release) [1] = Safety Version (minor release) [2] = Safety Version (baselevel or patch) [3] = Safety Version (hotfix)		
<b>Dependency:</b>	Refer to: r9390, r9590, r9770, r9870, r9890		
<b>Note:</b>	Example: r10090[0] = 2, r10090[1] = 60, r10090[2] = 1, r10090[3] = 0 --> SI TM54F version V02.60.01.00		

---

<b>p10201</b>	<b>SI Motion SBT enable / SBT enable</b>			
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0000 bin	
<b>Description:</b>	Sets the enable for the safe brake test.			
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>
	00	Enable safe brake test	Yes	No
<b>Note:</b>	SBT: Safe Brake Test			

---

<b>p10202[0...1]</b>	<b>SI Motion SBT brake selection / SBT brake select</b>			
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	2	0	
<b>Description:</b>	Selects the brakes to be tested.			
<b>Value:</b>	0: Inhibit			
	1: Test motor holding brake			
	2: Test external brake			
<b>Index:</b>	[0] = Brake 1			
	[1] = Brake 2			
<b>Dependency:</b>	Refer to: p10203, p10230, p10235			
	Refer to: A01785			
<b>Note:</b>	It is not possible to test two motor holding brakes. An appropriate message is output for an incorrect parameterization.			
	The brake to be tested is selected using p10230[2] or p10235.2.			

---

<b>p10203</b>	<b>SI Motion SBT control selection / SBT control select</b>			
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2837	
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	0	2	0	
<b>Description:</b>	Selects the control for the safe brake test.			
<b>Value:</b>	0: SBT via SCC (p10235)			
	1: SBT via BICO (p10230)			
	2: SBT for test stop selection (p9705/p10250.8)			
<b>Dependency:</b>	Refer to: p9705, p10230, p10235, p10250			
<b>Note:</b>	SCC: Safety Control Channel			
	For a value = 2, the following applies:			
	Brake 1 with sequence 1 (p10210[0], p10211[0], p10212[0], p10218) is tested. Brake 1 must be configured as motor holding brake (p10202[0] = 1).			

<b>p10204</b>	<b>SI Motion SBT motor type / SBT motor type</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0
<b>Description:</b>	Selects the motor type for the safe brake test.		
<b>Value:</b>	0: Rotating 1: Linear		
<b>Dependency:</b>	Refer to: F01787		
<b>Note:</b>	For safe functions that are not enabled (p9501 = 0), the following applies: - p10204 is automatically set the same as r0108.12 when the system boots. When the safe brake test is enabled (10201.0 = 1), the following applies: - p10204 is checked when the system boots to see that it matches r0108.12.		
<b>p10208[0...1]</b>	<b>SI Motion SBT test torque ramp time / SBT M_test t_ramp</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2836
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	20 [ms]	10000 [ms]	1000 [ms]
<b>Description:</b>	Sets the time, during which the test torque is ramped up against the closed brake. The test torque is then ramped down after the safe brake test.		
<b>Index:</b>	[0] = Brake 1 [1] = Brake 2		
<b>Note:</b>	The set time is rounded internally to an integer multiple of the monitoring clock cycle.		
<b>p10209[0...1]</b>	<b>SI Motion SBT brake holding torque / SBT brake M_stop</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2836
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	1.00 [Nm]	60000.00 [Nm]	10.00 [Nm]
<b>Description:</b>	Sets the effective holding torque on the motor side of the brake to be tested.		
<b>Index:</b>	[0] = Brake 1 [1] = Brake 2		
<b>Dependency:</b>	The holding torque of an external brake should be converted to the motor side. Conversion factor: - motor type = rotary and axis type = linear: p9522 / (p9521 x p9520) - otherwise: p9522 / p9521 Further, the efficiency of the mechanical system should be taken into account. Refer to: p10210, p10220		
<b>Note:</b>	The test torque effective for the brake test can be set for each sequence using a factor (p10210, p10220).		

## 2 Parameters

### 2.2 List of parameters

---

<b>p10210[0...1]</b>	<b>SI Motion SBT test torque factor sequence 1 / SBT M_test fact 1</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2836
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.30	1.00	1.00
<b>Description:</b>	Sets the factor for the test torque of sequence 1 for the safe brake test. The factor is referred to the holding torque of the brake (p10209).		
<b>Index:</b>	[0] = Brake 1 [1] = Brake 2		
<b>Dependency:</b>	Refer to: p10209, p10230, p10235		
<b>Note:</b>	The test sequence is selected using p10230[4] or p10235.4.		
<hr/>			
<b>p10211[0...1]</b>	<b>SI Motion SBT test duration sequence 1 / SBT t_test seq 1</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2836
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	20 [ms]	10000 [ms]	1000 [ms]
<b>Description:</b>	Sets the test duration for sequence 1 for the safe brake test. The test torque is available for this time at the closed brake.		
<b>Index:</b>	[0] = Brake 1 [1] = Brake 2		
<b>Dependency:</b>	Refer to: p10230, p10235		
<b>Note:</b>	The test sequence is selected using p10230[4] or p10235.4. The set time is rounded internally to an integer multiple of the monitoring clock cycle.		
<hr/>			
<b>p10212[0...1]</b>	<b>SI Motion SBT position tolerance sequence 1 / SBT pos_tol seq 1</b>		
VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2836
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.001 [mm]	360.000 [mm]	1.000 [mm]
<b>Description:</b>	Sets the tolerated position deviation for sequence 1 for the safe brake test.		
<b>Index:</b>	[0] = Brake 1 [1] = Brake 2		
<b>Dependency:</b>	Refer to: p10230, p10235		
<b>Note:</b>	The test sequence is selected using p10230[4] or p10235.4.		
<hr/>			
<b>p10212[0...1]</b>	<b>SI Motion SBT position tolerance sequence 1 / SBT pos_tol seq 1</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2836
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.001 [°]	360.000 [°]	1.000 [°]
<b>Description:</b>	Sets the tolerated position deviation for sequence 1 for the safe brake test.		
<b>Index:</b>	[0] = Brake 1 [1] = Brake 2		
<b>Dependency:</b>	Refer to: p10230, p10235		

**Note:** The test sequence is selected using p10230[4] or p10235.4.

---

### p10218 SI Motion SBT test torque sign / SBT M\_test sign

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2837
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	1	0

**Description:** Sets the sign for the test torque for the safe brake test.  
This parameter is only valid for "SBT for test stop selection" (p10203 = 2).

**Value:**  
0: Positive  
1: Negative

**Dependency:** Refer to: p10203

---

### p10220[0...1] SI Motion SBT test torque factor sequence 2 / SBT M\_test fact 2

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2836
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.30	1.00	1.00

**Description:** Sets the factor for the test torque of sequence 2 for the safe brake test.  
The factor is referred to the holding torque of the brake (p10209).

**Index:**  
[0] = Brake 1  
[1] = Brake 2

**Dependency:** Refer to: p10209, p10230, p10235

**Note:** The test sequence is selected using p10230[4] or p10235.4.

---

### p10221[0...1] SI Motion SBT test duration sequence 2 / SBT t\_test seq 2

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2836
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	20 [ms]	10000 [ms]	1000 [ms]

**Description:** Sets the test duration for sequence 2 for the safe brake test.  
The test torque is available for this time at the closed brake.

**Index:**  
[0] = Brake 1  
[1] = Brake 2

**Dependency:** Refer to: p10230, p10235

**Note:** The test sequence is selected using p10230[4] or p10235.4.  
The set time is rounded internally to an integer multiple of the monitoring clock cycle.

---

### p10222[0...1] SI Motion SBT position tolerance sequence 2 / SBT pos\_tol seq 2

VECTOR_G	<b>Can be changed:</b> C2(95)	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2836
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0.001 [mm]	360.000 [mm]	1.000 [mm]

**Description:** Sets the tolerated position deviation for sequence 2 for the safe brake test.

**Index:**  
[0] = Brake 1  
[1] = Brake 2

## 2 Parameters

### 2.2 List of parameters

**Dependency:** Refer to: p10230, p10235  
**Note:** The test sequence is selected using p10230[4] or p10235.4.

---

<b>p10222[0...1]</b>	<b>SI Motion SBT position tolerance sequence 2 / SBT pos_tol seq 2</b>		
VECTOR_G (Safety rot)	<b>Can be changed:</b> C2(95) <b>Data type:</b> FloatingPoint32 <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> 0.001 [°]	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> 360.000 [°]	<b>Access level:</b> 3 <b>Func. diagram:</b> 2836 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 1.000 [°]
<b>Description:</b>	Sets the tolerated position deviation for sequence 2 for the safe brake test.		
<b>Index:</b>	[0] = Brake 1 [1] = Brake 2		
<b>Dependency:</b>	Refer to: p10230, p10235		
<b>Note:</b>	The test sequence is selected using p10230[4] or p10235.4.		

---

<b>p10230[0...5]</b>	<b>BI: SI Motion SBT control word / SBT STW</b>		
VECTOR_G	<b>Can be changed:</b> C2(95) <b>Data type:</b> Unsigned32 / Binary <b>P-Group:</b> Safety Integrated <b>Not for motor type:</b> - <b>Min</b> -	<b>Calculated:</b> - <b>Dyn. index:</b> - <b>Unit group:</b> - <b>Scaling:</b> - <b>Max</b> -	<b>Access level:</b> 3 <b>Func. diagram:</b> 2837 <b>Unit selection:</b> - <b>Expert list:</b> 1 <b>Factory setting</b> 0
<b>Description:</b>	Sets the signal sources for the control word of the safe brake test This parameter is only valid for "SBT via BICO" (p10203 = 1).		
<b>Index:</b>	[0] = Select brake test [1] = Start brake test [2] = Select brake [3] = Select test torque sign [4] = Select test sequence [5] = External brake status		
<b>Note:</b>	For BI: p10230[0]: 0/1 signal: select brake test. 0 signal: inactive. For BI: p10230[1]: 0/1 signal: start brake test. For BI: p10230[2]: 1 signal: select brake 2. 0 signal: select brake 1. For BI: p10230[3]: 1 signal: select negative test torque. 0 signal: select positive test torque. For BI: p10230[4]: 1 signal: select test sequence 2. 0 signal: select test sequence 1. For BI: p10230[5]: 1 signal: external brake closed. 0 signal: external brake open.		

<b>r10231</b>		<b>SI Motion SBT control word diagnostics / SBT STW diag</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2836, 2837		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Displays the diagnostic bits for the control word of the safe brake test				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Select brake test	Yes	No	-
	01	Start brake test	Yes	No	-
	02	Select brake	Brake 2	Brake 1	-
	03	Select test torque sign	Negative	Positive	-
	04	Select test sequence	Test sequence 2	Test sequence 1	-
	05	External brake status	Closed	Open	-
<b>Dependency:</b>	Refer to: p10203				
<b>Note:</b>	The bits indicate the actual control signals of the control set in p10203.				

<b>r10234.0...15</b>		<b>CO/BO: SI Safety Info Channel status word S_ZSW3B / SIC S_ZSW3B</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2836		
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for status word S_ZSW3B of the safety information channel.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	00	Brake test selected	Yes	No	-
	01	Setpoint input drive/external	Drive	External	-
	02	Active brake	Brake 2	Brake 1	-
	03	Brake test active	Yes	No	-
	04	Brake test result	Successful	With error	-
	05	Brake test completed	Yes	No	-
	06	External brake request	Close	Open	-
	07	Actual load sign	Negative	Positive	-
	11	SS2E active	Yes	No	-
	14	Acceptance test SLP (SE) active	Yes	No	-
	15	Acceptance test mode selected	Yes	No	-
<b>Note:</b>	SIC: Safety Info Channel				
	SLP: Safely Limited Position / SE: Safe software limit switches				
	SS2E: Safe Stop 2 external (Safe Stop 2 with external stop, external STOP D)				

<b>p10235</b>		<b>CI: SI Safety Control Channel control word S_STW3B / SCC S_STW3B</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3	
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2837	
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -	
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1	
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>	
	-	-	0	
<b>Description:</b>	Sets the signal source for control word S_STW3B of the Safety Control Channel.			
<b>Dependency:</b>	This parameter is used as control word for the safe brake test only for "SBT via SCC" (p10203 = 0).			
	Refer to: p10203			
<b>Note:</b>	SBT: Safe Brake Test			
	SCC: Safety Control Channel			

<b>r10240</b>			
<b>SI Motion SBT test torque diagnostics / SBT M_test diag</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2836
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Nm]	- [Nm]	- [Nm]
<b>Description:</b>	Displays the effective maximum test torque on the motor side for a safe brake test.		
<b>Dependency:</b>	The test torque for an external brake should be converted to the load side. Conversion factor: - motor type = rotary and axis type = linear: (p9521 x p9520) / p9522 - otherwise: p9521 / p9522 Further, the efficiency of the mechanical system should be taken into account. Refer to: p10210, p10220		
<b>Note:</b>	The value remains displayed until the start of the next test sequence.		
<hr/>			
<b>r10241</b>			
<b>SI Motion SBT load torque diagnostics / SBT M_load diag</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> FloatingPoint32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2836
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	- [Nm]	- [Nm]	- [Nm]
<b>Description:</b>	Displays the load torque for a safe brake test. When initializing the brake test, this load torque is available at the drive.		
<b>Note:</b>	The value remains displayed until the brake test is deselected.		
<hr/>			
<b>r10242</b>			
<b>SI Motion SBT state diagnostics / SBT state diag</b>			
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 4
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	16	-
<b>Description:</b>	Displays the actual state of the safe brake test.		
<b>Value:</b>	<ul style="list-style-type: none"> <li>0: Brake test inactive, wait for SBT selection</li> <li>1: Setpoint input drive</li> <li>2: Determining the load</li> <li>3: Brake test is initialized, wait for start of test sequence</li> <li>4: Start test seq</li> <li>5: Closing the brake, establishing the test torque</li> <li>6: Brake test active, wait for test duration sequence</li> <li>7: Reduce test torque</li> <li>8: Wait for the brake to open</li> <li>9: Brake test successfully completed, wait for start deselection</li> <li>10: Change to brake test initialized - fault acknowledgment</li> <li>11: Brake test canceled, torque is reduced</li> <li>12: Brake test canceled, wait for brake to open</li> <li>13: Brake test ended with error, wait for acknowledgment</li> <li>14: Brake opening timer elapsed</li> <li>15: Error when initializing the brake test, wait for acknowledgment</li> <li>16: Change to brake test inactive, acknowledgment active</li> </ul>		

---

<b>p10250</b>	<b>CI: SI Safety Control Channel control word S_STW1B / SCC S_STW1B</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned32 / Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	0
<b>Description:</b>	Sets the signal source for control word S_STW1B of the Safety Control Channel.		
<b>Dependency:</b>	Refer to: p10203, r10251		
<b>Note:</b>	SCC: Safety Control Channel		

---

<b>r10251.8...12</b>	<b>CO/BO: SI Safety Control Channel control word S_STW1B diagnostics / SCC S_STW1B diag</b>				
VECTOR_G	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3		
	<b>Data type:</b> Unsigned32	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -		
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -		
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1		
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>		
	-	-	-		
<b>Description:</b>	Display and BICO output for the diagnostics of control word S_STW1B of the safety control channel.				
<b>Bit field:</b>	<b>Bit</b>	<b>Signal name</b>	<b>1 signal</b>	<b>0 signal</b>	<b>FP</b>
	08	Extended functions test stop selection	Selected	Not selected	2837
	09	Extended Functions referencing trigger	Selected	Not selected	-
	10	Extended Functions referencing reset	Selected	Not selected	-
	12	Extended Functions premature SOS after STOP D	Selected	Not selected	-
<b>Dependency:</b>	Refer to: p10250				
<b>Note:</b>	SCC: Safety Control Channel				

---

<b>p60022</b>	<b>PROFIsafe telegram selection / Ps telegram_sel</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> -
	<b>P-Group:</b> Safety Integrated	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	0	902	0
<b>Description:</b>	Sets the telegram number for PROFIsafe.		
<b>Value:</b>	0: No PROFIsafe telegram selected		
	30: PROFIsafe standard telegram 30, PZD-1/1		
	31: PROFIsafe standard telegram 31, PZD-2/2		
	901: PROFIsafe SIEMENS telegram 901, PZD-3/5		
	902: PROFIsafe SIEMENS telegram 902, PZD-3/6		
<b>Dependency:</b>	Refer to: p9611, p9811		
<b>Note:</b>	For p9601.3 = p9801.3 = 1 (PROFIsafe enabled), the following variants exist when parameterizing PROFIsafe telegram 30:		
	- p9611 = p9811 = 998 and p60022 = 0		
	- p9611 = p9811 = 998 and p60022 = 30		
	- p9611 = p9811 = 30 and p60022 = 30		

## 2 Parameters

### 2.2 List of parameters

---

<b>p60122</b>	<b>IF1 PROFIdrive SIC/SCC telegram selection / IF1 SIC/SCC telegr</b>		
VECTOR_G	<b>Can be changed:</b> T	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Integer16	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2423
	<b>P-Group:</b> Communications	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	700	999	999
<b>Description:</b>	Sets the telegram for the safety information channel (SIC) / safety control channel (SCC). The SIC/SCC telegram p60122 is attached directly to the PZD telegram p0922/p2079.		
<b>Value:</b>	700: Supplementary telegram 700, PZD-0/3 701: Supplementary telegram 701, PZD-2/5 999: Free telegram configuration with BICO		
<b>Note:</b>	The clearance to the PZD telegram can be increased using p2070/p2071. After changing p0922/p2079 or p2070/p2071, then p60122 must be set again. The telegram interconnections can only be changed if p60122 and p0922 are both set to 999.		

---

<b>r61000[0...239]</b>	<b>PROFINET Name of Station / PN Name of Station</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays PROFINET Name of Station.		
<b>Notice:</b>	An ASCII table (excerpt) can be found, for example, in the appendix to the List Manual.		

---

<b>r61001[0...3]</b>	<b>PROFINET IP of Station / PN IP of Station</b>		
CU_G130_PN, CU_G150_PN, CU_G130_DP (PN CBE20), CU_G150_DP (PN CBE20)	<b>Can be changed:</b> -	<b>Calculated:</b> -	<b>Access level:</b> 3
	<b>Data type:</b> Unsigned8	<b>Dyn. index:</b> -	<b>Func. diagram:</b> 2410
	<b>P-Group:</b> -	<b>Unit group:</b> -	<b>Unit selection:</b> -
	<b>Not for motor type:</b> -	<b>Scaling:</b> -	<b>Expert list:</b> 1
	<b>Min</b>	<b>Max</b>	<b>Factory setting</b>
	-	-	-
<b>Description:</b>	Displays PROFINET IP of Station.		

## 2.3 Parameters for data sets

### 2.3.1 Parameters for command data sets (CDS)

The following list contains the parameters that are dependent on the command data sets.

Product: SINAMICS G130/G150, Version: 4806000, Language: eng, Type: CDS

p0641[0...n]	Cl: Current limit scaling signal source / I_lim scal s_src
p0700[0...n]	Macro Binector Input (BI) / Macro BI
p0820[0...n]	Bl: Drive Data Set selection DDS bit 0 / DDS select., bit 0
p0821[0...n]	Bl: Drive Data Set selection DDS bit 1 / DDS select., bit 1
p0822[0...n]	Bl: Drive Data Set selection DDS bit 2 / DDS select., bit 2
p0823[0...n]	Bl: Drive Data Set selection DDS bit 3 / DDS select., bit 3
p0824[0...n]	Bl: Drive Data Set selection DDS bit 4 / DDS select., bit 4
p0828[0...n]	Bl: Motor changeover feedback signal / Mot_chng fdbk sig
p0840[0...n]	Bl: ON / OFF (OFF1) / ON / OFF (OFF1)
p0844[0...n]	Bl: No coast-down / coast-down (OFF2) signal source 1 / OFF2 S_src 1
p0845[0...n]	Bl: No coast-down / coast-down (OFF2) signal source 2 / OFF2 S_src 2
p0848[0...n]	Bl: No Quick Stop / Quick Stop (OFF3) signal source 1 / OFF3 S_src 1
p0849[0...n]	Bl: No Quick Stop / Quick Stop (OFF3) signal source 2 / OFF3 S_src 2
p0852[0...n]	Bl: Enable operation/inhibit operation / Enable operation
p0854[0...n]	Bl: Control by PLC/no control by PLC / Master ctrl by PLC
p0855[0...n]	Bl: Unconditionally release holding brake / Uncond open brake
p0856[0...n]	Bl: Enable speed controller / n_ctrl enable
p0858[0...n]	Bl: Unconditionally close holding brake / Uncond close brake
p1000[0...n]	Macro Connector Inputs (CI) for speed setpoints / Macro CI n_set
p1020[0...n]	Bl: Fixed speed setpoint selection Bit 0 / n_set_fixed Bit 0
p1021[0...n]	Bl: Fixed speed setpoint selection Bit 1 / n_set_fixed Bit 1
p1022[0...n]	Bl: Fixed speed setpoint selection Bit 2 / n_set_fixed Bit 2
p1023[0...n]	Bl: Fixed speed setpoint selection Bit 3 / n_set_fixed Bit 3
p1035[0...n]	Bl: Motorized potentiometer setpoint raise / Mop raise
p1036[0...n]	Bl: Motorized potentiometer lower setpoint / Mop lower
p1039[0...n]	Bl: Motorized potentiometer inversion / MotP inv
p1041[0...n]	Bl: Motorized potentiometer manual/automatic / Mop manual/auto
p1042[0...n]	Cl: Motorized potentiometer automatic setpoint / Mop auto setpoint
p1043[0...n]	Bl: Motorized potentiometer accept setting value / MotP acc set val
p1044[0...n]	Cl: Motorized potentiometer setting value / Mop set val
p1051[0...n]	Cl: Speed limit RFG positive direction of rotation / n_limit RFG pos
p1052[0...n]	Cl: Speed limit RFG negative direction of rotation / n_limit RFG neg
p1055[0...n]	Bl: Jog bit 0 / Jog bit 0
p1056[0...n]	Bl: Jog bit 1 / Jog bit 1
p1070[0...n]	Cl: Main setpoint / Main setpoint
p1071[0...n]	Cl: Main setpoint scaling / Main setp scal
p1075[0...n]	Cl: Suppl setp / Suppl setp
p1076[0...n]	Cl: Supplementary setpoint scaling / Suppl setp scal
p1085[0...n]	Cl: Speed limit in positive direction of rotation / n_limit pos
p1088[0...n]	Cl: Speed limit in negative direction of rotation / n_limit neg
p1098[0...n]	Cl: Skip speed scaling / n_skip scal
p1106[0...n]	Cl: Minimum speed signal source / n_min s_src
p1110[0...n]	Bl: Inhibit negative direction / Inhib neg dir
p1111[0...n]	Bl: Inhibit positive direction / Inhib pos dir
p1113[0...n]	Bl: Setpoint inversion / Setp inv
p1122[0...n]	Bl: Bypass ramp-function generator / Bypass RFG
p1138[0...n]	Cl: Ramp-function generator ramp-up time scaling / RFG t_RU scal

## 2 Parameters

### 2.3 Parameters for data sets

p1139[0...n]	CI: Ramp-function generator ramp-down time scaling / RFG t_RD scal
p1140[0...n]	BI: Enable ramp-function generator/inhibit ramp-function generator / Enable RFG
p1141[0...n]	BI: Continue ramp-function generator/freeze ramp-function generator / Continue RFG
p1142[0...n]	BI: Enable setpoint/inhibit setpoint / Setpoint enable
p1143[0...n]	BI: Ramp-function generator, accept setting value / RFG accept set v
p1144[0...n]	CI: Ramp-function generator setting value / RFG setting value
p1155[0...n]	CI: Speed controller speed setpoint 1 / n_ctrl n_set 1
p1160[0...n]	CI: Speed controller speed setpoint 2 / n_ctrl n_set 2
p1201[0...n]	BI: Flying restart enable signal source / Fly_res enab S_src
p1230[0...n]	BI: Armature short-circuit / DC braking activation / ASC/DCBRK act
p1235[0...n]	BI: External armature short-circuit contactor feedback signal / ASC ext feedback
p1330[0...n]	CI: U/f control independent voltage setpoint / Uf U_set independ.
p1356[0...n]	CI: U/f control angular setpoint / Uf ang setpoint
p1437[0...n]	CI: Speed controller reference model I component input / n_ctrRefMod I_comp
p1440[0...n]	CI: Speed controller speed actual value input / n_ctrl n_act
p1455[0...n]	CI: Speed controller P gain adaptation signal / n_ctr adapt_sig Kp
p1466[0...n]	CI: Speed controller P-gain scaling / n_ctrl Kp scal
p1475[0...n]	CI: Speed controller torque setting value for motor holding brake / n_ctrl M_sv MHB
p1476[0...n]	BI: Speed controller hold integrator / n_ctrl integ stop
p1477[0...n]	BI: Speed controller set integrator value / n_ctrl integ set
p1478[0...n]	CI: Speed controller integrator setting value / n_ctr integ_setVal
p1479[0...n]	CI: Speed controller integrator setting value scaling / n_ctrl I_val scal
p1486[0...n]	CI: Droop compensation torque / Droop M_comp
p1492[0...n]	BI: Droop feedback enable / Droop enable
p1495[0...n]	CI: Acceleration pre-control / a_prectrl
p1497[0...n]	CI: Moment of inertia scaling signal source / M_inert scal s_src
p1500[0...n]	Macro Connector Inputs (CI) for torque setpoints / Macro CI M_set
p1501[0...n]	BI: Change over between closed-loop speed/torque control / Changeov n/M_ctrl
p1502[0...n]	BI: Freeze moment of inertia estimator / J_estim freeze
p1503[0...n]	CI: Torque setpoint / M_set
p1511[0...n]	CI: Supplementary torque 1 / M_suppl 1
p1512[0...n]	CI: Supplementary torque 1 scaling / M_suppl 1 scal
p1513[0...n]	CI: Supplementary torque 2 / M_suppl 2
p1522[0...n]	CI: Torque limit upper / M_max upper
p1523[0...n]	CI: Torque limit lower / M_max lower
p1528[0...n]	CI: Torque limit upper scaling / M_max upper scal
p1529[0...n]	CI: Torque limit lower scaling / M_max lower scal
p1540[0...n]	CI: Torque limit speed controller upper scaling / M_max n-ctr upScal
p1541[0...n]	CI: Torque limit. speed controller lower scaling / M_max nctr lowScal
p1545[0...n]	BI: Activates travel to a fixed stop / TfS activation
p1551[0...n]	BI: Torque limit variable/fixed signal source / M_lim var/fixS_src
p1552[0...n]	CI: Torque limit upper scaling without offset / M_max up w/o offs
p1554[0...n]	CI: Torque limit lower scaling without offset / M_max low w/o offs
p1555[0...n]	CI: Power limit / P_max
p1569[0...n]	CI: Supplementary torque 3 / M_suppl 3
p1571[0...n]	CI: Supplementary flux setpoint / Suppl flux setp
p1640[0...n]	CI: Excitation current actual value signal source / I_exc_ActVal S_src
p2103[0...n]	BI: 1st acknowledge faults / 1st acknowledge
p2104[0...n]	BI: 2nd acknowledge faults / 2nd acknowledge
p2105[0...n]	BI: 3rd acknowledge faults / 3rd acknowledge
p2106[0...n]	BI: External fault 1 / External fault 1
p2107[0...n]	BI: External fault 2 / External fault 2
p2108[0...n]	BI: External fault 3 / External fault 3
p2112[0...n]	BI: External alarm 1 / External alarm 1
p2116[0...n]	BI: External alarm 2 / External alarm 2

p2117[0...n]	BI: External alarm 3 / External alarm 3
p2144[0...n]	BI: Motor stall monitoring enable (negated) / Mot stall enab neg
p2148[0...n]	BI: RFG active / RFG active
p2151[0...n]	CI: Speed setpoint for messages/signals / n_set for msg
p2154[0...n]	CI: Speed setpoint 2 / n_set 2
p2200[0...n]	BI: Technology controller enable / Tec_ctrl enable
p2220[0...n]	BI: Technology controller fixed value selection bit 0 / Tec_ctrl sel bit 0
p2221[0...n]	BI: Technology controller fixed value selection bit 1 / Tec_ctrl sel bit 1
p2222[0...n]	BI: Technology controller fixed value selection bit 2 / Tec_ctrl sel bit 2
p2223[0...n]	BI: Technology controller fixed value selection bit 3 / Tec_ctrl sel bit 3
p2235[0...n]	BI: Technology controller motorized potentiometer raise setpoint / Tec_ctrl mop raise
p2236[0...n]	BI: Technology controller motorized potentiometer lower setpoint / Tec_ctrl mop lower
p2253[0...n]	CI: Technology controller setpoint 1 / Tec_ctrl setp 1
p2254[0...n]	CI: Technology controller setpoint 2 / Tec_ctrl setp 2
p2264[0...n]	CI: Technology controller actual value / Tec_ctrl act val
p2286[0...n]	BI: Hold technology controller integrator / Tec_ctr integ hold
p2289[0...n]	CI: Technology controller pre-control signal / Tec_ctr prectr_sig
p2296[0...n]	CI: Technology controller output scaling / Tec_ctrl outp scal
p2297[0...n]	CI: Technology controller maximum limit signal source / Tec_ctrMaxLimS_src
p2298[0...n]	CI: Technology controller minimum limit signal source / Tec_ctrl min_l s_s
p2299[0...n]	CI: Technology controller limit offset / Tech_ctrl lim offs
p3111[0...n]	BI: External fault 3 enable / Ext fault 3 enab
p3112[0...n]	BI: External fault 3 enable negated / Ext fit 3 enab neg
p3240[0...n]	CI: I2t input value signal source / I2t in_value s_src
p3802[0...n]	BI: Sync-line-drive enable / Sync enable

### 2.3.2 Parameters for drive data sets (DDS)

The following list contains the parameters that are dependent on the drive data sets.

Product: SINAMICS G130/G150, Version: 4806000, Language: eng, Type: DDS

p0186[0...n]	Motor Data Sets (MDS) number / MDS number
p0187[0...n]	Encoder 1 encoder data set number / Enc 1 EDS number
p0188[0...n]	Encoder 2 encoder data set number / Enc 2 EDS number
p0189[0...n]	Encoder 3 encoder data set number / Enc 3 EDS number
p0340[0...n]	Automatic calculation motor/control parameters / Calc auto par
p0572[0...n]	Activate/deactivate inhibit list / Inh_list act/deact
p0578[0...n]	Calculate technology-dependent parameters / Calc tec par
p0640[0...n]	Current limit / Current limit
p0644[0...n]	Current limit excitation induction motor / I <sub>max</sub> excitat ASM
p1001[0...n]	CO: Fixed speed setpoint 1 / n_set_fixed 1
p1002[0...n]	CO: Fixed speed setpoint 2 / n_set_fixed 2
p1003[0...n]	CO: Fixed speed setpoint 3 / n_set_fixed 3
p1004[0...n]	CO: Fixed speed setpoint 4 / n_set_fixed 4
p1005[0...n]	CO: Fixed speed setpoint 5 / n_set_fixed 5
p1006[0...n]	CO: Fixed speed setpoint 6 / n_set_fixed 6
p1007[0...n]	CO: Fixed speed setpoint 7 / n_set_fixed 7
p1008[0...n]	CO: Fixed speed setpoint 8 / n_set_fixed 8
p1009[0...n]	CO: Fixed speed setpoint 9 / n_set_fixed 9
p1010[0...n]	CO: Fixed speed setpoint 10 / n_set_fixed 10
p1011[0...n]	CO: Fixed speed setpoint 11 / n_set_fixed 11
p1012[0...n]	CO: Fixed speed setpoint 12 / n_set_fixed 12
p1013[0...n]	CO: Fixed speed setpoint 13 / n_set_fixed 13
p1014[0...n]	CO: Fixed speed setpoint 14 / n_set_fixed 14

## 2 Parameters

### 2.3 Parameters for data sets

p1015[0...n]	CO: Fixed speed setpoint 15 / n_set_fixed 15
p1030[0...n]	Motorized potentiometer configuration / Mop configuration
p1037[0...n]	Motorized potentiometer maximum speed / MotP n_max
p1038[0...n]	Motorized potentiometer minimum speed / MotP n_min
p1040[0...n]	Motorized potentiometer starting value / Mop start value
p1047[0...n]	Motorized potentiometer ramp-up time / Mop ramp-up time
p1048[0...n]	Motorized potentiometer ramp-down time / Mop ramp-down time
p1058[0...n]	Jog 1 speed setpoint / Jog 1 n_set
p1059[0...n]	Jog 2 speed setpoint / Jog 2 n_set
p1063[0...n]	Setpoint channel speed limit / Setp_chan n_lim
p1080[0...n]	Minimum speed / n_min
p1082[0...n]	Maximum speed / n_max
p1083[0...n]	CO: Speed limit in positive direction of rotation / n_limit pos
p1086[0...n]	CO: Speed limit in negative direction of rotation / n_limit neg
p1091[0...n]	Skip speed 1 / n_skip 1
p1092[0...n]	Skip speed 2 / n_skip 2
p1093[0...n]	Skip speed 3 / n_skip 3
p1094[0...n]	Skip speed 4 / n_skip 4
p1101[0...n]	Skip speed bandwidth / n_skip bandwidth
p1120[0...n]	Ramp-function generator ramp-up time / RFG ramp-up time
p1121[0...n]	Ramp-function generator ramp-down time / RFG ramp-down time
p1130[0...n]	Ramp-function generator initial rounding-off time / RFG t_start_round
p1131[0...n]	Ramp-function generator final rounding-off time / RFG t_end_delay
p1134[0...n]	Ramp-function generator rounding-off type / RFG round-off type
p1135[0...n]	OFF3 ramp-down time / OFF3 t_RD
p1136[0...n]	OFF3 initial rounding-off time / RFGOFF3 t_strt_rnd
p1137[0...n]	OFF3 final rounding-off time / RFG OFF3 t_end_del
p1145[0...n]	Ramp-function generator tracking intensity. / RFG track intens
p1148[0...n]	Ramp-function gen. tolerance for ramp-up and ramp-down active / RFG tol HL/RL act
p1151[0...n]	Ramp-function generator configuration / RFG config
p1189[0...n]	Speed setpoint configuration / n_ctrl config
p1200[0...n]	Flying restart operating mode / FlyRest op_mode
p1202[0...n]	Flying restart search current / FlyRest I_srch
p1203[0...n]	Flying restart search rate factor / FlyRst v_Srch Fact
p1226[0...n]	Threshold for zero speed detection / n_standst n_thresh
p1240[0...n]	Vdc controller or Vdc monitoring configuration / Vdc ctrl config
p1243[0...n]	Vdc_max controller dynamic factor / Vdc_max dyn_factor
p1245[0...n]	Vdc_min controller switch-in level (kinetic buffering) / Vdc_min on_level
p1247[0...n]	Vdc_min controller dynamic factor (kinetic buffering) / Vdc_min dyn_factor
p1249[0...n]	Vdc_max controller speed threshold / Vdc_max n_thresh
p1250[0...n]	Vdc controller proportional gain / Vdc_ctrl Kp
p1251[0...n]	Vdc controller integral time / Vdc_ctrl Tn
p1252[0...n]	Vdc controller rate time / Vdc_ctrl t_rate
p1255[0...n]	Vdc_min controller time threshold / Vdc_min t_thresh
p1256[0...n]	Vdc_min controller response (kinetic buffering) / Vdc_min response
p1257[0...n]	Vdc_min controller speed threshold / Vdc_min n_thresh
p1262[0...n]	Bypass dead time / Bypass t_dead
p1270[0...n]	Flying restart configuration / Fly restart config
p1271[0...n]	Flying restart maximum frequency for the inhibited direction / FlyRes f_max dir
p1280[0...n]	Vdc controller or Vdc monitoring configuration (U/f) / Vdc_ctr config U/f
p1281[0...n]	Vdc controller configuration / Vdc ctrl config
p1283[0...n]	Vdc_max controller dynamic factor (U/f) / Vdc_max dyn_factor
p1284[0...n]	Vdc_max controller time threshold (U/f) / Vdc_max t_thresh
p1285[0...n]	Vdc_min controller switch-in level (kinetic buffering) (U/f) / Vdc_min on_level
p1287[0...n]	Vdc_min controller dynamic factor (kinetic buffering) (U/f) / Vdc_min dyn_factor

p1288[0...n]	Vdc_max controller feedback coupling factor ramp-fct. gen. (U/f) / Vdc_max factor RFG
p1289[0...n]	Vdc_max controller speed threshold (U/f) / Vdc_max n_thresh
p1290[0...n]	Vdc controller proportional gain (U/f) / Vdc_ctrl Kp
p1291[0...n]	Vdc controller integral time (U/f) / Vdc_ctrl Tn
p1292[0...n]	Vdc controller rate time (U/f) / Vdc_ctrl t_rate
p1293[0...n]	Vdc min controller output limit (U/f) / Vdc_min outp_lim
p1295[0...n]	Vdc_min controller time threshold (U/f) / Vdc_min t_thresh
p1296[0...n]	Vdc_min controller response (kinetic buffering) (U/f / Vdc_min response
p1297[0...n]	Vdc_min controller speed threshold (U/f) / Vdc_min n_thresh
p1300[0...n]	Open-loop/closed-loop control operating mode / Op/cl-lp ctrl_mode
p1302[0...n]	U/f control configuration / U/f config
p1310[0...n]	Starting current (voltage boost) permanent / I_start (Ua) perm
p1311[0...n]	Starting current (voltage boost) when accelerating / I_start accel
p1312[0...n]	Starting current (voltage boost) when starting / I_start start
p1320[0...n]	U/f control programmable characteristic frequency 1 / Uf char f1
p1321[0...n]	U/f control programmable characteristic voltage 1 / Uf char U1
p1322[0...n]	U/f control programmable characteristic frequency 2 / Uf char f2
p1323[0...n]	U/f control programmable characteristic voltage 2 / Uf char U2
p1324[0...n]	U/f control programmable characteristic frequency 3 / Uf char f3
p1325[0...n]	U/f control programmable characteristic voltage 3 / Uf char U3
p1326[0...n]	U/f control programmable characteristic frequency 4 / Uf char f4
p1327[0...n]	U/f control programmable characteristic voltage 4 / Uf char U4
p1331[0...n]	Voltage limiting / U_lim
p1333[0...n]	U/f control FCC starting frequency / U/f FCC f_start
p1334[0...n]	U/f control slip compensation starting frequency / Slip comp start
p1335[0...n]	Slip compensation scaling / Slip comp scal
p1336[0...n]	Slip compensation limit value / Slip comp lim val
p1338[0...n]	U/f mode resonance damping gain / Uf Res_damp gain
p1339[0...n]	U/f mode resonance damping filter time constant / Uf Res_damp T
p1340[0...n]	I_max frequency controller proportional gain / I_max_ctrl Kp
p1341[0...n]	I_max frequency controller integral time / I_max_ctrl Tn
p1345[0...n]	I_max voltage controller proportional gain / I_max_U_ctrl Kp
p1346[0...n]	I_max voltage controller integral time / I_max_U_ctrl Tn
p1349[0...n]	U/f mode resonance damping maximum frequency / Uf res_damp f_max
p1350[0...n]	U/f control soft start / U/f soft start
p1351[0...n]	CO: Motor holding brake starting frequency / Brake f_start
p1358[0...n]	Angular difference symmetrizing actual angle / Sym act angle
p1381[0...n]	U/f control modulation limit reduction / U/f mod_max reduc
p1400[0...n]	Speed control configuration / n_ctrl config
p1401[0...n]	Flux control configuration / Flux ctrl config
p1402[0...n]	Closed-loop current control and motor model configuration / I_ctrl config
p1416[0...n]	Speed setpoint filter 1 time constant / n_set_filt 1 T
p1428[0...n]	Speed pre-control balancing dead time / n_prectrBal t_dead
p1429[0...n]	Speed pre-control balancing time constant / n_prectr bal T
p1433[0...n]	Speed controller reference model natural frequency / n_ctrl RefMod fn
p1434[0...n]	Speed controller reference model damping / n_ctrl RefMod D
p1435[0...n]	Speed controller reference model dead time / n_ctrRefMod t_dead
p1441[0...n]	Actual speed smoothing time / n_act T_smooth
p1442[0...n]	Speed controller speed actual value smoothing time / n_ctr n_act T_smth
p1451[0...n]	Motor model speed actual value smoothing time sensorless / Mot_mod n_act t_sm
p1452[0...n]	Speed controller speed actual value smoothing time (sensorless) / n_C n_act T_s SL
p1456[0...n]	Speed controller P gain adaptation lower starting point / n_ctrl AdaptKpLow
p1457[0...n]	Speed controller P gain adaptation upper starting point / n_ctrl AdaptKp up
p1458[0...n]	Adaptation factor lower / Adapt_factor lower
p1459[0...n]	Adaptation factor upper / Adapt_factor upper

## 2 Parameters

### 2.3 Parameters for data sets

p1460[0...n]	Speed controller P gain adaptation speed lower / n_ctrl Kp n lower
p1461[0...n]	Speed controller Kp adaptation speed upper scaling / n_ctr Kp n up scal
p1462[0...n]	Speed controller integral time adaptation speed lower / n_ctrl Tn n lower
p1463[0...n]	Speed controller Tn adaptation speed upper scaling / n_ctr Tn n up scal
p1464[0...n]	Speed controller adaptation speed lower / n_ctrl n lower
p1465[0...n]	Speed controller adaptation speed upper / n_ctrl n upper
p1470[0...n]	Speed controller encoderless operation P-gain / n_ctrl SL Kp
p1472[0...n]	Speed controller encoderless operation integral time / n_ctrl SL Tn
p1487[0...n]	Droop compensation torque scaling / Droop M_comp scal
p1488[0...n]	Droop input source / Droop input source
p1489[0...n]	Droop feedback scaling / Droop scal
p1496[0...n]	Acceleration pre-control scaling / a_prectrl scal
p1498[0...n]	Load moment of inertia / Load M_inertia
p1499[0...n]	Accelerating for torque control scaling / a for M_ctrl scal
p1514[0...n]	Supplementary torque 2 scaling / M_suppl 2 scal
p1517[0...n]	Accelerating torque smoothing time constant / M_accel T_smooth
p1520[0...n]	CO: Torque limit upper / M_max upper
p1521[0...n]	CO: Torque limit lower / M_max lower
p1524[0...n]	CO: Torque limit upper scaling / M_max upper scal
p1525[0...n]	CO: Torque limit lower scaling / M_max lower scal
p1530[0...n]	Power limit motoring / P_max mot
p1531[0...n]	Power limit regenerative / P_max gen
p1553[0...n]	Stall limit scaling / Stall limit scal
p1556[0...n]	Power limit scaling / P_max scal
p1560[0...n]	Moment of inertia estimator accelerating torque threshold value / J_est M thresh
p1561[0...n]	Moment of inertia estimator change time moment of inertia / J_est t J
p1562[0...n]	Moment of inertia estimator change time load / J_est t load
p1563[0...n]	CO: Mom. of inertia estimator load torque direction of rotation pos. / J_est M pos
p1564[0...n]	CO: Mom. of inertia estimator load torque direction of rotation neg. / J_est M neg
r1566[0...n]	Flux reduction torque factor transition value / Flux red M trans
p1567[0...n]	Magnetization rate time scaling / Mag Tv scale
p1570[0...n]	CO: Flux setpoint / Flex setp
p1572[0...n]	Supplementary flux setpoint / Suppl flux setp
p1573[0...n]	Flux threshold value magnetizing / Flux thresh magnet
p1574[0...n]	Voltage reserve dynamic / U_reserve dyn
p1575[0...n]	Voltage target value limit / U_tgt val lim
p1576[0...n]	Flux boost adaptation speed, lower / Flux boost n lower
p1577[0...n]	Flux boost adaptation speed upper / Flux boost n upper
p1578[0...n]	Flux reduction flux decrease smoothing time / Flux red dec t_sm
p1579[0...n]	Flux reduction flux build-up smoothing time / Flux red up t_sm
p1580[0...n]	Efficiency optimization / Efficiency opt.
p1581[0...n]	Flux reduction factor / Flux red factor
p1582[0...n]	Flux setpoint smoothing time / Flux setp T_smth
p1584[0...n]	Field weakening operation flux setpoint smoothing time / Field weak T_smth
p1585[0...n]	Flux actual value smoothing time / Flux actVal T_smth
p1586[0...n]	Field weakening characteristic scaling / Field weak scal
p1590[0...n]	Flux controller P gain / Flux controller Kp
p1592[0...n]	Flux controller integral time / Flux controller Tn
p1594[0...n]	Field-weakening controller P gain / Field_ctrl Kp
p1595[0...n]	Field weakening controller additional setpoint / Field_ctr add_setp
p1596[0...n]	Field weakening controller integral-action time / Field_ctrl Tn
p1599[0...n]	Flux controller excitation current difference / Flux ctr I_exc_dif
p1600[0...n]	P flux controller P gain / P flux ctrl Kp
p1601[0...n]	Current injection ramp-up time / I_inject t_ramp-up
p1604[0...n]	Pulse technique current limit / Pulse current lim

p1605[0...n]	Pulse technique pattern configuration / Puls patrn config
p1607[0...n]	Pulse technique stimulus / Puls stimulus
p1609[0...n]	I/f operation current setpoint / I/f op I_setp
p1610[0...n]	Torque setpoint static (sensorless) / M_set static
p1611[0...n]	Additional acceleration torque (sensorless) / M_suppl_accel
p1612[0...n]	Current setpoint magnetizing open-loop controlled / Id_set ctrl
p1616[0...n]	Current setpoint smoothing time / I_set T_smooth
p1619[0...n]	Setpoint/actual value tracking threshold / SetAct track thrsh
p1620[0...n]	Stator current minimum / I_stator min
p1621[0...n]	Changeover speed inner cos phi = 1 / n_chngov cos phi=1
p1622[0...n]	Field-generating current setpoint smoothing time constant / Id_setp T_smth
p1625[0...n]	Excitation current setpoint calibration / I_exc_setp cal
p1628[0...n]	Current model controller dynamic factor / I_mod_ctr dyn_fact
p1629[0...n]	Current model controller P gain / I_mod_ctrl Kp
p1630[0...n]	Current model controller integral time / I_mod_ctrl Tn
p1642[0...n]	Minimum excitation current / Min I_exc
p1643[0...n]	Minimum excitation current closed-loop control gain factor / I_exc_min Kp
p1653[0...n]	Current setpoint torque-generating smoothing time minimum / Isq_s T_smth min
p1654[0...n]	Curr. setpoint torque-gen. smoothing time field weakening range / Isq_s T_smth FW
p1656[0...n]	Current setpoint/Speed actual value filter activation / I_setp_filt act
p1657[0...n]	Current setpoint filter 1 type / I_set_filt 1 type
p1658[0...n]	Current setpoint filter 1 denominator natural frequency / I_set_filt1 fn_den
p1659[0...n]	Current setpoint filter 1 denominator damping / I_set_filt 1 D_den
p1660[0...n]	Current setpoint filter 1 numerator natural frequency / I_set_filt1 fn_num
p1661[0...n]	Current setpoint filter 1 numerator damping / I_set_filt 1 D_num
p1662[0...n]	Current setpoint filter 2 type / I_set_filt 2 type
p1663[0...n]	Current setpoint filter 2 denominator natural frequency / I_set_filt2 fn_den
p1664[0...n]	Current setpoint filter 2 denominator damping / I_set_filt 2 D_den
p1665[0...n]	Current setpoint filter 2 numerator natural frequency / I_set_filt2 fn_num
p1666[0...n]	Current setpoint filter 2 numerator damping / I_set_filt 2 D_num
p1677[0...n]	Speed actual value filter 5 type / n_act_filt 5 type
p1678[0...n]	Speed actual value filter 5 denominator natural frequency / n_act_filt5 fn_den
p1679[0...n]	Speed actual value filter 5 denominator damping / n_act_filt 5 D_den
p1680[0...n]	Speed actual value filter 5 numerator natural frequency / n_act_filt5 fn_num
p1681[0...n]	Speed actual value filter 5 numerator damping / n_act_filt 5 D_num
p1702[0...n]	Isd current controller pre-control scaling / Isd_ctr_prectrScal
p1703[0...n]	Isq current controller pre-control scaling / Isq_ctr_prectrScal
p1704[0...n]	Isq current controller pre-control EMF scaling / Isq_ctrl EMF scal
p1705[0...n]	Flux setpoint/actual value tracking threshold / Flux track thrsh
p1715[0...n]	Current controller P gain / I_ctrl Kp
p1717[0...n]	Current controller integral-action time / I_ctrl Tn
p1720[0...n]	Current controller d axis p gain / Id_ctrl Kp
p1722[0...n]	Current controller d axis integral time / I_ctrl d-axis Tn
p1726[0...n]	Quadrature arm decoupling scaling / Transv_decpl scal
p1727[0...n]	Quadrature arm decoupling at voltage limit scaling / TrnsvDecplVmaxScal
p1730[0...n]	Isd controller integral component shutdown threshold / Isd ctrl Tn shutd
p1731[0...n]	Isd controller combination current time component / Isd ctr I_combi T1
p1740[0...n]	Gain resonance damping for encoderless closed-loop control / Gain res_damp
p1744[0...n]	Motor model speed threshold stall detection / MotMod n_thr stall
p1745[0...n]	Motor model error threshold stall detection / MotMod ThreshStall
p1748[0...n]	Motor model lower changeover speed n_set -> n_act / MotMod low n_chng
p1749[0...n]	Motor model upper changeover speed / increase changeover speed / Up/incr n_chngov
p1750[0...n]	Motor model configuration / MotMod config
p1752[0...n]	Motor model changeover speed operation with encoder / MotMod n_chgov enc
p1753[0...n]	Motor model changeover speed hysteresis operation with encoder / MotMod n_chgovHysE

## 2 Parameters

### 2.3 Parameters for data sets

p1754[0...n]	Flux angle difference smoothing time / Angle diff T_smth
p1755[0...n]	Motor model changeover speed encoderless operation / MotMod n_chgSnsorI
p1757[0...n]	Motor model w/o enc. op./cl.-loop controlled stab. controller Kp / MotMod w/o enc Kp
p1758[0...n]	Motor model changeover delay time closed/open-loop control / MotMod t_cl_op
p1759[0...n]	Motor model changeover delay time open/closed-loop control / MotMod t_op_cl
p1760[0...n]	Motor model with encoder speed adaptation Kp / MotMod wE n_ada Kp
p1761[0...n]	Motor model with encoder speed adaptation Tn / MotMod wE n_ada Tn
p1764[0...n]	Motor model without encoder speed adaptation Kp / MotMod woE n_adaKp
p1766[0...n]	Motor model voltage model calculation enable / U_mod calc enab
p1767[0...n]	Motor model without encoder speed adaptation Tn / MotMod woE n_adaTn
p1774[0...n]	Motor model offset voltage compensation alpha / MotMod offs comp A
p1775[0...n]	Motor model offset voltage compensation beta / MotMod offs comp B
p1780[0...n]	Motor model adaptation configuration / MotMod adapt conf
p1784[0...n]	Motor model feedback scaling / MotMod fdbk scal
p1785[0...n]	Motor model Lh adaptation Kp / MotMod Lh Kp
p1786[0...n]	Motor model Lh adaptation integral time / MotMod Lh Tn
r1787[0...n]	Motor model Lh adaptation corrective value / MotMod Lh corr
p1795[0...n]	Motor model kT adaptation integral time / MotMod kT Tn
r1797[0...n]	Motor model kT adaptation corrective value / MotMod kT corr
p1798[0...n]	Motor model pulse technique speed adaptation Kp / MotMod PulsTech Kp
p1800[0...n]	Pulse frequency setpoint / Pulse freq setp
p1802[0...n]	Modulator mode / Modulator mode
p1803[0...n]	Maximum modulation depth / Modulat depth max
p1804[0...n]	Filter time constant smoothed modulation index / T_filt mod_idx sm
p1806[0...n]	Filter time constant Vdc correction / T_filt Vdc_corr
p1811[0...n]	Pulse frequency wobble amplitude / Puls wobb ampl
p1814[0...n]	Vdc filter dead band for modulation switchover / Vdc filt dead band
p1820[0...n]	Reverse the output phase sequence / Outp_ph_seq rev
p1821[0...n]	Dir of rot / Dir of rot
p1840[0...n]	Actual value correction configuration / ActVal_corr conf
p1845[0...n]	Actual value correction evaluation factor Lsig / ActVal_cor ev Lsig
p1846[0...n]	Actual value correction damping factor / ActV_corr D_factor
p1959[0...n]	Rotating measurement configuration / Rot meas config
p1998[0...n]	PollID circle center point / PollID circ center
p2140[0...n]	Hysteresis speed 2 / n_hysteresis 2
p2141[0...n]	Speed threshold 1 / n_thresh val 1
p2142[0...n]	Hysteresis speed 1 / n_hysteresis 1
p2149[0...n]	Monitoring configuration / Monit config
p2150[0...n]	Hysteresis speed 3 / n_hysteresis 3
p2153[0...n]	Speed actual value filter time constant / n_act_filt T
p2155[0...n]	Speed threshold 2 / n_thresh val 2
p2156[0...n]	On delay comparison value reached / t_on cmpr val rchd
p2161[0...n]	Speed threshold 3 / n_thresh val 3
p2162[0...n]	Hysteresis speed n_act > n_max / Hyst n_act>n_max
p2163[0...n]	Speed threshold 4 / n_thresh val 4
p2164[0...n]	Hysteresis speed 4 / n_hysteresis 4
p2166[0...n]	Off delay n_act = n_set / t_del_off n_i=n_so
p2167[0...n]	Switch-on delay n_act = n_set / t_on n_act=n_set
p2174[0...n]	Torque threshold value 1 / M_thresh val 1
p2175[0...n]	Motor blocked speed threshold / Mot lock n_thresh
p2177[0...n]	Motor blocked delay time / Mot lock t_del
p2178[0...n]	Motor stalled delay time / Mot stall t_del
p2181[0...n]	Load monitoring response / Load monit resp
p2182[0...n]	Load monitoring speed threshold value 1 / n_thresh 1
p2183[0...n]	Load monitoring speed threshold value 2 / n_thresh 2

p2184[0...n]	Load monitoring speed threshold value 3 / n_thresh 3
p2185[0...n]	Load monitoring torque threshold 1 upper / M_thresh 1 upper
p2186[0...n]	Load monitoring torque threshold 1 lower / M_thresh 1 lower
p2187[0...n]	Load monitoring torque threshold 2 upper / M_thresh 2 upper
p2188[0...n]	Load monitoring torque threshold 2 lower / M_thresh 2 lower
p2189[0...n]	Load monitoring torque threshold 3 upper / M_thresh 3 upper
p2190[0...n]	Load monitoring torque threshold 3 lower / M_thresh 3 lower
p2192[0...n]	Load monitoring delay time / Load monit t_del
p2194[0...n]	Torque threshold value 2 / M_thresh val 2
p2195[0...n]	Torque utilization switch-off delay / M_util t_off
p2196[0...n]	Torque utilization scaling / M_util scal
p2201[0...n]	CO: Technology controller fixed value 1 / Tec_ctrl fix val1
p2202[0...n]	CO: Technology controller fixed value 2 / Tec_ctr fix val 2
p2203[0...n]	CO: Technology controller fixed value 3 / Tec_ctr fix val 3
p2204[0...n]	CO: Technology controller fixed value 4 / Tec_ctr fix val 4
p2205[0...n]	CO: Technology controller fixed value 5 / Tec_ctr fix val 5
p2206[0...n]	CO: Technology controller fixed value 6 / Tec_ctr fix val 6
p2207[0...n]	CO: Technology controller fixed value 7 / Tec_ctr fix val 7
p2208[0...n]	CO: Technology controller fixed value 8 / Tec_ctr fix val 8
p2209[0...n]	CO: Technology controller fixed value 9 / Tec_ctr fix val 9
p2210[0...n]	CO: Technology controller fixed value 10 / Tec_ctr fix val 10
p2211[0...n]	CO: Technology controller fixed value 11 / Tec_ctr fix val 11
p2212[0...n]	CO: Technology controller fixed value 12 / Tec_ctr fix val 12
p2213[0...n]	CO: Technology controller fixed value 13 / Tec_ctr fix val 13
p2214[0...n]	CO: Technology controller fixed value 14 / Tec_ctr fix val 14
p2215[0...n]	CO: Technology controller fixed value 15 / Tec_ctr fix val 15
p2216[0...n]	Technology controller fixed value selection method / Tec_ctr FixVal sel
p2230[0...n]	Technology controller motorized potentiometer configuration / Tec_ctr mop config
p2237[0...n]	Technology controller motorized potentiometer maximum value / Tec_ctrl mop max
p2238[0...n]	Technology controller motorized potentiometer minimum value / Tec_ctrl mop min
p2240[0...n]	Technology controller motorized potentiometer starting value / Tec_ctrl mop start
p2247[0...n]	Technology controller motorized potentiometer ramp-up time / Tec_ctr mop t_r-up
p2248[0...n]	Technology controller motorized potentiometer ramp-down time / Tec_ctrMop t_rdown
p2720[0...n]	Load gear configuration / Load gear config
p2721[0...n]	Load gear rotary absolute encoder revolutions virtual / Abs rot rev
p2722[0...n]	Load gear position tracking tolerance window / Pos track tol
r2723[0...n]	CO: Load gear absolute value / Load gear abs_val
r2724[0...n]	CO: Load gear position difference / Load gear pos diff
p2900[0...n]	CO: Fixed value 1 [%] / Fixed value 1 [%]
p2901[0...n]	CO: Fixed value 2 [%] / Fixed value 2 [%]
p2930[0...n]	CO: Fixed value M [Nm] / Fixed value M [Nm]
p3201[0...n]	Excitation current outside the tolerance threshold value / I_exc n Tol thresh
p3202[0...n]	Excitation current outside the tolerance hysteresis / I_exc n Tol hyst
p3203[0...n]	Excitation current outside the tolerance delay time / I_exc n Tol t_del
p3204[0...n]	Flux outside the tolerance threshold value / Flux n tol thresh
p3205[0...n]	Flux outside the tolerance hysteresis / Flux n tol hyst
p3206[0...n]	Flux outside tolerance delay time / Flux n tol t_del
p3207[0...n]	Zero current signal threshold value / I_0_sig thresh
p3208[0...n]	Zero current signal hysteresis / I_0_sig hyst
p3209[0...n]	Zero current signal delay time / I_0_sig t_del
p3233[0...n]	Torque actual value filter time constant / M_act_filt T
p3236[0...n]	Speed threshold value 7 / n_thresh val 7
p3237[0...n]	Hysteresis speed 7 / n_hysteresis 7
p3238[0...n]	OFF delay n_act_motor model = n_act external / t_del n_a = n_ext
p3241[0...n]	Permissible I2t continuous value / Perm I2t cont val

## 2 Parameters

### 2.3 Parameters for data sets

p3242[0...n]	I2t maximum duration / I2t max_dur
p3243[0...n]	I2t alarm thresh / I2t alarm thresh
p3320[0...n]	Fluid flow machine power point 1 / Fluid_mach P1
p3321[0...n]	Fluid flow machine speed point 1 / Fluid_mach n1
p3322[0...n]	Fluid flow machine power point 2 / Fluid_mach P2
p3323[0...n]	Fluid flow machine speed point 2 / Fluid_mach n2
p3324[0...n]	Fluid flow machine power point 3 / Fluid_mach P3
p3325[0...n]	Fluid flow machine speed point 3 / Fluid_mach n3
p3326[0...n]	Fluid flow machine power point 4 / Fluid_mach P4
p3327[0...n]	Fluid flow machine speed point 4 / Fluid_mach n4
p3328[0...n]	Fluid flow machine power point 5 / Fluid_mach P5
p3329[0...n]	Fluid flow machine speed point 5 / Fluid_mach n5
p3800[0...n]	Sync-line-drive activation / Sync act
p3801[0...n]	Sync-line-drive drive object number / Sync DO_no
p3806[0...n]	Sync-line-drive frequency difference threshold value / Sync f_diff thresh
p3809[0...n]	Sync-line-drive phase setpoint / Sync phase setp
p3811[0...n]	Sync-line-drive frequency limiting / Sync f_lim
p3813[0...n]	Sync-line-drive phase synchronism threshold value / Sync Ph_sync thrsh
p3815[0...n]	Sync-line-drive voltage difference threshold value / Sync U_diff thresh
p3820[0...n]	Friction characteristic value n0 / Friction n0
p3821[0...n]	Friction characteristic value n1 / Friction n1
p3822[0...n]	Friction characteristic value n2 / Friction n2
p3823[0...n]	Friction characteristic value n3 / Friction n3
p3824[0...n]	Friction characteristic value n4 / Friction n4
p3825[0...n]	Friction characteristic value n5 / Friction n5
p3826[0...n]	Friction characteristic value n6 / Friction n6
p3827[0...n]	Friction characteristic value n7 / Friction n7
p3828[0...n]	Friction characteristic value n8 / Friction n8
p3829[0...n]	Friction characteristic value n9 / Friction n9
p3830[0...n]	Friction characteristic value M0 / Friction M0
p3831[0...n]	Friction characteristic value M1 / Friction M1
p3832[0...n]	Friction characteristic value M2 / Friction M2
p3833[0...n]	Friction characteristic value M3 / Friction M3
p3834[0...n]	Friction characteristic value M4 / Friction M4
p3835[0...n]	Friction characteristic value M5 / Friction M5
p3836[0...n]	Friction characteristic value M6 / Friction M6
p3837[0...n]	Friction characteristic value M7 / Friction M7
p3838[0...n]	Friction characteristic value M8 / Friction M8
p3839[0...n]	Friction characteristic value M9 / Friction M9
p3843[0...n]	Friction characteristic frictional torque diff. smoothing time / Frict M_diff t_sm
p3844[0...n]	Friction characteristic number changeover point upper / FricNo chng_pt up
p3846[0...n]	Friction characteristic record ramp-up/ramp-down time / Frict rec t_RU/RD
p3847[0...n]	Friction characteristic record warm-up time / Frict rec t_warm
r3925[0...n]	Identification final display / Ident final_disp
r3927[0...n]	Motor data identification control word / MotID STW
r3928[0...n]	Rotating measurement configuration / Rot meas config
p3940[0...n]	Motor/controller data calculation / Mot/ctrl_data calc
r3998[0...n]	First drive commissioning / First drv_comm
p5271[0...n]	Online tuning configuration / Ot config
p5310[0...n]	Moment of inertia precontrol configuration / J_est config
r5311[0...n]	Moment of inertia precontrol status word / J_prectrl ZSW
p5312[0...n]	Moment of inertia precontrol linear positive / J_est lin pos
p5313[0...n]	Moment of inertia precontrol constant positive / J_est const pos
p5314[0...n]	Moment of inertia precontrol linear negative / J_est lin neg
p5315[0...n]	Moment of inertia precontrol constant negative / J_est const neg

p5316[0...n]	Moment of inertia precontrol change time moment of inertia / J_prectrl t J
p6700[0...n]	Voltage model angle smoothing / U_mod ang smooth
p7035[0...n]	Par_circuit circulating current control operating mode / I_cct_ctrl mode
p7036[0...n]	Par_circuit circulating current control proportional gain / Circ_I Kp
p7037[0...n]	Par_circuit circulating current control integral time / I_circ Tn
p7038[0...n]	Par_circuit circulating current control limit / I_circ limit

### 2.3.3 Parameters for encoder data sets (EDS)

The following list contains the parameters that are dependent on the encoder data sets.

Product: SINAMICS G130/G150, Version: 4806000, Language: eng, Type: EDS

p0141[0...n]	Encoder interface (Sensor Module) component number / Enc_interf comp_no
p0142[0...n]	Encoder component number / Encoder comp_no
p0144[0...n]	Sensor Module detection via LED / SM detection LED
p0145[0...n]	Activate/deactivate encoder interface / Enc_intf act/deact
r0146[0...n]	Encoder interface active/inactive / Enc_intf act/inact
r0147[0...n]	Sensor Module EEPROM data version / SM EEPROM version
r0148[0...n]	Sensor Module firmware version / SM FW version
p0400[0...n]	Encoder type selection / Enc_typ sel
p0402[0...n]	Gearbox type selection / Gearbox type sel
p0404[0...n]	Encoder configuration effective / Enc_config eff
p0405[0...n]	Square-wave encoder track A/B / Sq-wave enc A/B
p0407[0...n]	Linear encoder grid division / Enc grid div
p0408[0...n]	Rotary encoder pulse number / Rot enc pulse No.
p0410[0...n]	Encoder inversion actual value / Enc inv act value
p0411[0...n]	Measuring gear configuration / Meas gear config
p0412[0...n]	Measuring gear absolute encoder rotary revolutions virtual / Abs rot rev
p0413[0...n]	Measuring gear position tracking tolerance window / Pos track window
p0414[0...n]	Redundant coarse position value relevant bits (identified) / Relevant bits
p0415[0...n]	Gx_XIST1 Coarse position safe most significant bit (identified) / Gx_XIST1 safe MSB
p0416[0...n]	Non safety-relevant meas. steps position value POS1 (detected) / nsrPos1
p0417[0...n]	Encoder safety comparison algorithm (detected) / Safety comp_algo
p0418[0...n]	Fine resolution Gx_XIST1 (in bits) / Enc fine Gx_XIST1
p0419[0...n]	Fine resolution absolute value Gx_XIST2 (in bits) / Enc fine Gx_XIST2
p0420[0...n]	Encoder connection / Enc_connection
p0421[0...n]	Absolute encoder rotary multiturn resolution / Enc abs multiturn
p0422[0...n]	Absolute encoder linear measuring step resolution / Enc abs meas step
p0423[0...n]	Absolute encoder rotary singleturn resolution / Enc abs singleturn
p0424[0...n]	Encoder linear zero mark distance / Enc lin ZM_dist
p0425[0...n]	Encoder rotary zero mark distance / Enc rot dist ZM
p0426[0...n]	Encoder zero mark differential distance / Enc ZM Dif_dist
p0427[0...n]	Encoder SSI baud rate / Enc SSI baud rate
p0428[0...n]	Encoder SSI monoflop time / Enc SSI t_monoflop
p0429[0...n]	Encoder SSI configuration / Enc SSI config
p0430[0...n]	Sensor Module configuration / SM config
p0431[0...n]	Angular commutation offset / Ang_com offset
p0432[0...n]	Gearbox factor encoder revolutions / Grbx_fact enc_rev
p0433[0...n]	Gearbox factor motor/load revolutions / Grbx_fact mot_rev
p0434[0...n]	Encoder SSI error bit / Enc SSI error bit
p0435[0...n]	Encoder SSI alarm bit / Enc SSI alarm bit
p0436[0...n]	Encoder SSI parity bit / Enc SSI parity bit
p0437[0...n]	Sensor Module configuration extended / SM config ext
p0438[0...n]	Squarewave encoder filter time / Enc t_filt

## 2 Parameters

### 2.3 Parameters for data sets

p0439[0...n]	Encoder ramp-up time / Enc ramp-up time
p0440[0...n]	Copy encoder serial number / Copy enc ser_no
p0441[0...n]	Encoder commissioning serial number part 1 / Enc comm ser_no 1
p0442[0...n]	Encoder commissioning serial number part 2 / Enc comm ser_no 2
p0443[0...n]	Encoder commissioning serial number part 3 / Enc comm ser_no 3
p0444[0...n]	Encoder commissioning serial number part 4 / Enc comm ser_no 4
p0445[0...n]	Encoder commissioning serial number part 5 / Enc comm ser_no 5
p0446[0...n]	Encoder SSI number of bits before the absolute value / Enc SSI bit before
p0447[0...n]	Encoder SSI number of bits absolute value / Enc SSI bit val
p0448[0...n]	Encoder SSI number of bits after the absolute value / Enc SSI bit after
p0449[0...n]	Encoder SSI number of bits filler bits / Enc SSI fill bits
p0453[0...n]	Pulse encoder evaluation zero speed measuring time / Enc_ev n_0 t_meas
p0493[0...n]	Zero mark selection input terminal / ZM_sel inp_term
p0494[0...n]	Equivalent zero mark input terminal / ZM_equiv inp_term
p4600[0...n]	Motor temperature sensor 1 sensor type / Temp_sens 1 type
p4601[0...n]	Motor temperature sensor 2 sensor type / Temp_sens 2 type
p4602[0...n]	Motor temperature sensor 3 sensor type / Temp_sens 3 type
p4603[0...n]	Motor temperature sensor 4 sensor type / Temp_sens 4 type
p4662[0...n]	Encoder characteristic type / Enc char_type
p4663[0...n]	Encoder characteristic K0 / Enc char K0
p4664[0...n]	Encoder characteristic K1 / Enc char K1
p4665[0...n]	Encoder characteristic K2 / Enc char K2
p4666[0...n]	Encoder characteristic K3 / Enc char K3
p4670[0...n]	Analog sensor configuration / Ana_sens config
p4671[0...n]	Analog sensor input / Ana_sens inp
p4672[0...n]	Analog sensor channel A voltage at actual value zero / Ana_sens A U at 0
p4673[0...n]	Analog sensor channel A voltage per encoder period / Ana_sens A U/per
p4674[0...n]	Analog sensor channel B voltage at actual value zero / Ana_sens B U at 0
p4675[0...n]	Analog sensor channel B voltage per encoder period / Ana_sens B U/per
p4676[0...n]	Analog sensor range limit threshold / Ana_sens lim thr
p4677[0...n]	Analog sensor LVDT configuration / Ana_sens LVDT conf
p4678[0...n]	Analog sensor LVDT ratio / An_sens LVDT ratio
p4679[0...n]	Analog sensor LVDT phase / An_sens LVDT ph
p4680[0...n]	Zero mark monitoring tolerance permissible / ZM_monit tol perm
p4681[0...n]	Zero mark monitoring tolerance window limit 1 positive / ZM tol lim 1 pos
p4682[0...n]	Zero mark monitoring tolerance window limit 1 negative / ZM tol lim 1 neg
p4683[0...n]	Zero mark monitoring tolerance window alarm threshold positive / ZM tol A_thr pos
p4684[0...n]	Zero mark monitoring tolerance window alarm threshold negative / ZM tol A_thr neg
p4685[0...n]	Speed actual value mean value generation / n_act mean val
p4686[0...n]	Zero mark minimum length / ZM min length

### 2.3.4 Parameters for motor data sets (MDS)

The following list contains the parameters that are dependent on the motor data sets.

Product: SINAMICS G130/G150, Version: 4806000, Language: eng, Type: MDS

p0131[0...n]	Motor component number / Mot comp_no
p0133[0...n]	Motor configuration / Motor config
p0300[0...n]	Motor type selection / Mot type sel
p0301[0...n]	Motor code number selection / Mot code No. sel
r0302[0...n]	Motor code number of motor with DRIVE-CLiQ / Mot code mot w/ DQ
r0303[0...n]	Motor with DRIVE-CLiQ status word / Motor w DQ ZSW
p0304[0...n]	Rated motor voltage / Mot U <sub>rated</sub>
p0305[0...n]	Rated motor current / Mot I <sub>rated</sub>
p0306[0...n]	Number of motors connected in parallel / Motor qty
p0307[0...n]	Rated motor power / Mot P <sub>rated</sub>
p0308[0...n]	Rated motor power factor / Mot cos phi rated
p0309[0...n]	Rated motor efficiency / Mot eta <sub>rated</sub>
p0310[0...n]	Rated motor frequency / Mot f <sub>rated</sub>
p0311[0...n]	Rated motor speed / Mot n <sub>rated</sub>
r0313[0...n]	Motor pole pair number, actual (or calculated) / Mot PolePairNo act
p0314[0...n]	Motor pole pair number / Mot pole pair No.
p0316[0...n]	Motor torque constant / Mot kT
p0318[0...n]	Motor stall current / Mot I <sub>standstill</sub>
p0320[0...n]	Motor rated magnetizing current/short-circuit current / Mot I <sub>mag<sub>rated</sub></sub>
p0322[0...n]	Maximum motor speed / Mot n <sub>max</sub>
p0323[0...n]	Maximum motor current / Mot I <sub>max</sub>
p0324[0...n]	Winding maximum speed / Winding n <sub>max</sub>
p0325[0...n]	Motor pole position identification current 1st phase / Mot PolID I 1st ph
p0327[0...n]	Optimum motor load angle / Mot phi <sub>load opt</sub>
p0328[0...n]	Motor reluctance torque constant / Mot kT <sub>reluctance</sub>
p0329[0...n]	Motor pole position identification current / Mot PolID current
r0330[0...n]	Rated motor slip / Mot slip <sub>rated</sub>
r0331[0...n]	Actual motor magnetizing current/short-circuit current / Mot I <sub>mag<sub>rtd act</sub></sub>
r0332[0...n]	Rated motor power factor / Mot cos phi rated
r0333[0...n]	Rated motor torque / Mot M <sub>rated</sub>
r0334[0...n]	Actual motor-torque constant / Mot kT act
p0335[0...n]	Motor cooling type / Mot cool type
r0336[0...n]	Actual rated motor frequency / Mot f <sub>rated act</sub>
r0337[0...n]	Rated motor EMF / Mot EMF <sub>rated</sub>
r0339[0...n]	Rated motor voltage / Mot U <sub>rated</sub>
p0341[0...n]	Motor moment of inertia / Mot M <sub>mom of inert</sub>
p0342[0...n]	Ratio between the total and motor moment of inertia / Mot MomInert Ratio
p0343[0...n]	Rated motor current identified / Mot I <sub>rated ident</sub>
p0344[0...n]	Motor weight (for the thermal motor model) / Mot weight th mod
r0345[0...n]	Nominal motor starting time / Mot t <sub>start<sub>rated</sub></sub>
p0346[0...n]	Motor excitation build-up time / Mot t <sub>excitation</sub>
p0347[0...n]	Motor de-excitation time / Mot t <sub>de-excitat</sub>
p0350[0...n]	Motor stator resistance cold / Mot R <sub>stator cold</sub>
p0352[0...n]	Cable resistance / R <sub>cable</sub>
p0353[0...n]	Motor series inductance / Mot L <sub>series</sub>
p0354[0...n]	Motor rotor resistance cold / damping resistance d axis / Mot R <sub>r cold/R<sub>D d</sub></sub>
p0355[0...n]	Motor damping resistance q axis / Mot R <sub>damp q</sub>
p0356[0...n]	Motor stator leakage inductance / Mot L <sub>stator leak</sub> .
p0357[0...n]	Motor stator inductance d axis / Mot L <sub>stator d</sub>
p0358[0...n]	Motor rotor leakage inductance / damping inductance d axis / Mot L <sub>r leak / LDd</sub>
p0359[0...n]	Motor damping inductance q axis / Mot L <sub>damp q</sub>

## 2 Parameters

### 2.3 Parameters for data sets

p0360[0...n]	Motor magnetizing inductance/magn. inductance d axis saturated / Mot Lh/Lh d sat
p0361[0...n]	Motor magnetizing inductance q axis saturated / Mot L_magn q sat
p0362[0...n]	Motor saturation characteristic flux 1 / Mot saturat.flux 1
p0363[0...n]	Motor saturation characteristic flux 2 / Mot saturat.flux 2
p0364[0...n]	Motor saturation characteristic flux 3 / Mot saturat.flux 3
p0365[0...n]	Motor saturation characteristic flux 4 / Mot saturat.flux 4
p0366[0...n]	Motor saturation characteristic I_mag 1 / Mot sat. I_mag 1
p0367[0...n]	Motor saturation characteristic I_mag 2 / Mot sat. I_mag 2
p0368[0...n]	Motor saturation characteristic I_mag 3 / Mot sat. I_mag 3
p0369[0...n]	Motor saturation characteristic I_mag 4 / Mot sat. I_mag 4
r0370[0...n]	Motor stator resistance cold / Mot R_stator cold
r0372[0...n]	Total power unit cable resistance / PU cable R tot
r0373[0...n]	Motor rated stator resistance / Mot R_stator rated
r0374[0...n]	Motor rotor resistance cold / damping resistance d axis / Mot R_r cold/R_D d
r0375[0...n]	Motor damping resistance q axis / Mot R_damp q
r0376[0...n]	Rated motor rotor resistance / Mot rated R_rotor
r0377[0...n]	Motor leakage inductance total / Mot L_leak total
r0378[0...n]	Motor stator inductance d axis / Mot L_stator d
r0380[0...n]	Motor damping inductance d axis / Mot L_damp d
r0381[0...n]	Motor damping inductance q axis / Mot L_damp q
r0382[0...n]	Motor magnetizing inductance transformed / Lh d axis saturated / Mot L_m tr/Lhd sat
r0383[0...n]	Motor magnetizing inductance q axis saturated / Mot L_magn q sat
r0384[0...n]	Motor rotor time constant / damping time constant d axis / Mot T_rotor/T_Dd
r0385[0...n]	Motor damping time constant q axis / Mot L_damping q
r0386[0...n]	Motor stator leakage time constant / Mot T_stator leak
r0387[0...n]	Motor stator leakage time constant q axis / Mot T_Sleak /T_Sq
p0389[0...n]	Excitation rated no-load current / Exc I_noload_rated
p0390[0...n]	Rated excitation current / Exc I_rated
p0391[0...n]	Current controller adaptation starting point Kp / I_adapt pt Kp
p0392[0...n]	Current controller adaptation starting point Kp adapted / I_adapt pt Kp adap
p0393[0...n]	Current controller adaptation P gain scaling / I_adapt Kp scal
r0395[0...n]	Actual stator resistance / R_stator act
r0396[0...n]	Actual rotor resistance / R_rotor act
p0397[0...n]	Angle magnetic decoupling maximum angle / Magn decpl max_ang
p0398[0...n]	Angle magn decoupling (cross saturation) coeff 1 / Magn decoupl C1
p0399[0...n]	Angle magn decoupling (cross saturation) coeff 3 / Magn decoupl C3
p0530[0...n]	Bearing version selection / Bearing vers sel
p0531[0...n]	Bearing code number selection / Bearing codeNo sel
p0532[0...n]	Bearing maximum speed / Bearing n_max
p0600[0...n]	Motor temperature sensor for monitoring / Mot temp_sensor
p0601[0...n]	Motor temperature sensor type / Mot_temp_sens type
p0604[0...n]	Mot_temp_mod 2: sensor alarm threshold / Mod 2: sens A_thr
p0605[0...n]	Mot_temp_mod 1/2 sensor threshold and temperature value / Mod 1/2 sens thr_T
p0606[0...n]	Mot_temp_mod 2: sensor timer / Mod 2:sens timer
p0607[0...n]	Temperature sensor fault timer / Sensor fault time
p0610[0...n]	Motor overtemperature response / Mot temp response
p0611[0...n]	I2t motor model thermal time constant / I2t mot_mod T
p0612[0...n]	Mot_temp_mod activation / Mot_temp_mod act
p0613[0...n]	Mot_temp_mod 1/3 ambient temperature / Mod 1/3 amb_temp
p0614[0...n]	Thermal resistance adaptation reduction factor / Therm R_adapt red
p0615[0...n]	Mot_temp_mod 1 (I2t) fault threshold / I2t F thresh
p0616[0...n]	Motor overtemperature alarm threshold 1 / Mot temp alarm 1
p0620[0...n]	Thermal adaptation, stator and rotor resistance / Mot therm_adapt R
p0621[0...n]	Identification stator resistance after restart / Rst_ident Restart
p0622[0...n]	Motor excitation time for Rs_ident after switching on again / t_excit Rs_id

p0624[0...n]	Motor temperature offset PT100 / Mot T_offset PT100
p0625[0...n]	Motor ambient temperature during commissioning / Mot T_ambient
p0626[0...n]	Motor overtemperature, stator core / Mot T_over core
p0627[0...n]	Motor overtemperature, stator winding / Mot T_over stator
p0628[0...n]	Motor overtemperature rotor / Mot T_over rotor
p0629[0...n]	Stator resistance reference / R_stator ref
r0630[0...n]	Mot_temp_mod ambient temperature / Mod T_ambient
r0631[0...n]	Mot_temp_mod stator iron temperature / Mod T_stator
r0632[0...n]	Mot_temp_mod stator winding temperature / Mod T_winding
r0633[0...n]	Mot_temp_mod rotor temperature / Mod rotor temp
p0634[0...n]	Q flux flux constant unsaturated / PSIQ KPSI UNSAT
p0635[0...n]	Q flux quadrature axis current constant unsaturated / PSIQ KIQ UNSAT
p0636[0...n]	Q flux direct axis current constant unsaturated / PSIQ KID UNSAT
p0637[0...n]	Q flux flux gradient saturated / PSIQ Grad SAT
p0643[0...n]	Overvoltage protection for synchronous motors / Overvolt_protect
p0650[0...n]	Actual motor operating hours / Mot t_oper act
p0651[0...n]	Motor operating hours maintenance interval / Mot t_op maint
p0652[0...n]	Motor stator resistance scaling / Mot R_stator scal
p0653[0...n]	Motor stator leakage inductance scaling / Mot L_S_leak scal
p0655[0...n]	Motor magnetizing inductance d axis saturated scaling / Mot L_m d sat scal
p0656[0...n]	Motor magnetizing inductance q axis saturated scaling / Mot L_m q sat scal
p0657[0...n]	Motor damping inductance d axis scaling / Mot L_damp d scal
p0658[0...n]	Motor damping inductance q axis scaling / Mot L_damp q scal
p0659[0...n]	Motor damping resistance d axis scaling / Mot R_damp d scal
p0660[0...n]	Motor damping resistance q axis scaling / Mot R_damp q scal
p0690[0...n]	Brushless excitation rated current / BLE I_rated
p0693[0...n]	Brushless excitation inductance d-axis saturated / BLE L_d sat
p0696[0...n]	Brushless excitation ratio / BLE ratio
p0697[0...n]	Brushless excitation number of pole pairs / BLE PolePairNo
p0698[0...n]	Brushless excitation excitation resistance / BLE exc_resist
p0826[0...n]	Motor changeover motor number / Mot_chng mot No.
p0827[0...n]	Motor changeover status word bit number / Mot_chg ZSW bitNo.
p1231[0...n]	Armature short-circuit / DC braking configuration / ASC/DCBRK config
p1232[0...n]	DC braking braking current / DCBRK I_brake
p1233[0...n]	DC braking time / DCBRK time
p1234[0...n]	Speed at the start of DC braking / DCBRK n_start
p1236[0...n]	Ext. armature short-cct. contactor feedback signal monit. time / ASC ext t_monit
p1237[0...n]	External armature short-circuit delay time when opening / ASC ext t_wait
p1710[0...n]	Current controller adaptation in-line axis starting point Kp / Id_adapt pt Kp
p1711[0...n]	Current ctrl adaptation in-line axis starting point Kp adapted / Id_adap pt Kp adap
p1712[0...n]	Current controller adaptation in-line axis p gain adaptation / Id_adapt Kp adapt
p1909[0...n]	Motor data identification control word / MotID STW
p1980[0...n]	PolID technique / PolID technique
p1982[0...n]	PolID selection / PolID selection
p1991[0...n]	Motor changeover angular commutation correction / Ang_com corr
p1999[0...n]	Ang. commutation offset calibr. and PolID scaling / Com_ang_offs scal
p4610[0...n]	Motor temperature sensor 1 sensor type MDS / Temp sens1 typ MDS
p4611[0...n]	Motor temperature sensor 2 sensor type MDS / Temp sens2 typ MDS
p4612[0...n]	Motor temperature sensor 3 sensor type MDS / Temp sens3 typ MDS
p4613[0...n]	Motor temperature sensor 4 sensor type MDS / Temp sens4 typ MDS
p5350[0...n]	Mot_temp_mod 1/3 boost factor at standstill / Standst boost_fact
p5390[0...n]	Mot_temp_mod 1/3 alarm threshold / A thresh
p5391[0...n]	Mot_temp_mod 1/3 fault threshold / F thresh
r5398[0...n]	Mot_temp_mod 3 alarm threshold image p5390 / A thr image p5390
r5399[0...n]	Mot_temp_mod 3 fault threshold image p5391 / F thr image p5391

### 2.3.5 Parameters for power unit data sets (PDS)

The following list contains the parameters that are dependent on the power unit data sets.

Product: SINAMICS G130/G150, Version: 4806000, Language: eng, Type: PDS

p0121[0...n]	Power unit component number / PU comp_no
p0124[0...n]	Power unit detection via LED / PU detection LED
p0125[0...n]	Activate/deactivate power unit components / PU_comp act/deact
r0126[0...n]	Power unit components active/inactive / PU comp act/inact
r0127[0...n]	Power unit EEPROM data version / PU EEPROM version
r0128[0...n]	Power unit firmware version / PU FW version
r0200[0...n]	Power unit code number actual / PU code no. act
p0201[0...n]	Power unit code number / PU code no
r0203[0...n]	Actual power unit type / PU actual type
r0204[0...n]	Power unit hardware properties / PU HW property
p0251[0...n]	Operating hours counter power unit fan / PU fan t_oper
p0254[0...n]	Operating hours counter power unit fan inside the converter / PU inner fan t_op
p0895[0...n]	BI: Activate/deactivate power unit components / PU_comp act/deact
p3901[0...n]	Power unit EEPROM Vdc offset calibration / PU EEPROM Vdc offs
p7001[0...n]	Par_circuit power units enable / PU enable
r7002[0...n]	CO: Par_circuit status power units / Status PU
r7020[0...n]	CO: Par_circuit deviation current in phase U / Phase U curr dev
r7021[0...n]	CO: Par_circuit deviation current in phase V / Phase V curr dev
r7022[0...n]	CO: Par_circuit deviation current in phase W / Phase W curr dev
r7030[0...n]	CO: Par_circuit DC link voltage deviation / Vdc deviation
p7040[0...n]	Par_circuit correction valve lockout time phase U / Comp t_lockout U
p7042[0...n]	Par_circuit correction valve lockout time phase V / Comp t_lockout V
p7044[0...n]	Par_circuit correction valve lockout time phase W / Comp t_lockout W
r7050[0...n]	Par_circuit circulating current phase U / Circ_I_phase U
r7051[0...n]	Par_circuit circulating current phase V / Circ_I_phase V
r7052[0...n]	Par_circuit circulating current phase W / Circ_I_phase W
r7200[0...n]	Par_circuit power unit overload I2t / PU overload I2t
r7201[0...n]	CO: Par_circuit power unit temperatures max. inverter / PU temp max inv
r7202[0...n]	Par_circuit power unit temperatures max. depletion layer / PU TempMaxDepLayer
r7203[0...n]	CO: Par_circuit power unit temperatures max. rectifier / PU temp max rect
r7204[0...n]	CO: Par_circuit power unit temperatures air intake / PU temp air intake
r7205[0...n]	Par_circuit power unit temperatures electronics / PU temp electr
r7206[0...n]	Par_circuit power unit temperatures inverter 1 / PU temp inv 1
r7207[0...n]	Par_circuit power unit temperatures inverter 2 / PU temp inv 2
r7208[0...n]	Par_circuit power unit temperatures inverter 3 / PU temp inv 3
r7209[0...n]	Par_circuit power unit temperatures inverter 4 / PU temp inv 4
r7210[0...n]	Par_circuit power unit temperatures inverter 5 / PU temp inv 5
r7211[0...n]	Par_circuit power unit temperatures inverter 6 / PU temp inv 6
r7212[0...n]	Par_circuit power unit temperatures inverter 1 / PU temp rect 1
r7213[0...n]	Par_circuit power unit temperatures inverter 2 / PU temp rect 2
r7214[0...n]	Par_circuit power unit temperatures depletion layer 1 / PU temp DepLayer 1
r7215[0...n]	Par_circuit power unit temperatures depletion layer 2 / PU temp DepLayer 2
r7216[0...n]	Par_circuit power unit temperatures depletion layer 3 / PU temp DepLayer 3
r7217[0...n]	Par_circuit power unit temperatures depletion layer 4 / PU temp DepLayer 4
r7218[0...n]	Par_circuit power unit temperatures depletion layer 5 / PU temp DepLayer 5
r7219[0...n]	Par_circuit power unit temperatures depletion layer 6 / PU temp DepLayer 6
r7220[0...n]	CO: Par_circuit drive output current maximum / Drv I_outp max
r7222[0...n]	CO: Par_circuit absolute current actual value / I_act abs val
r7223[0...n]	CO: Par_circuit phase current actual value phase U / I_phase U act val
r7224[0...n]	CO: Par_circuit phase current actual value phase V / I_phase V act val
r7225[0...n]	CO: Par_circuit phase current actual value phase W / I_phase W act val

r7226[0...n]	CO: Par_circuit phase current actual value phase U offset / I_phase U offset
r7227[0...n]	CO: Par_circuit phase current actual value phase V offset / I_phase V offset
r7228[0...n]	CO: Par_circuit phase current actual value phase W offset / I_phase W offset
r7229[0...n]	CO: Par_circuit phase current actual value sum U, V, W / I_phase sum UVW
r7230[0...n]	CO: Par_circuit DC link voltage actual value / Vdc_act
r7231[0...n]	CO: Par_circuit phase voltage actual value phase U / U_phase U act val
r7232[0...n]	CO: Par_circuit phase voltage actual value phase V / U_phase V act val
r7233[0...n]	CO: Par_circuit phase voltage actual value phase W / U_phase W act val
r7240[0...n]	Par_circuit gating unit status word 1 / Gating unit ZSW1
r7740[0...n]	IGBT power cycling counter valve 1 / IGBT load count 1
r7741[0...n]	IGBT power cycling counter valve 2 / IGBT load count 2
r7742[0...n]	IGBT power cycling counter valve 3 / IGBT load count 3
r7743[0...n]	IGBT power cycling counter valve 4 / IGBT load count 4
r7744[0...n]	IGBT power cycling counter valve 5 / IGBT load count 5
r7745[0...n]	IGBT power cycling counter valve 6 / IGBT load count 6
p7786[0...n]	Service report / Service report
p9671[0...n]	SI module identifier Motor Module / Module ID MM

## 2.4 Parameters for write protection and know-how protection

### 2.4.1 Parameters with "WRITE\_NO\_LOCK"

The following list contains the parameters with the "WRITE\_NO\_LOCK" attribute.

These parameters are not affected by the write protection.

Product: SINAMICS G130/G150, Version: 4806000, Language: eng, Type: WRITE\_NO\_LOCK

p0003	BOP access level / BOP acc_level
p0009	Device commissioning parameter filter / Dev comm par_filt
p0124[0...n]	Main component detection using LED / M_comp detect LED
p0124[0...n]	Power unit detection via LED / PU detection LED
p0144[0...n]	Sensor Module detection via LED / SM detection LED
p0154	Terminal Module detection via LED / TM detection LED
p0154	DRIVE-CLiQ Hub Module detection via LED / Hub detection LED
p0972	Drive unit reset / Drv_unit reset
p0976	Reset and load all parameters / Reset load all par
p0977	Save all parameters / Save all par
p2035	Fieldbus interface USS PIV drive object number / Fieldbus USS DO_no
p2102	BI: Acknowledge all faults / Ackn all faults
p2111	Alarm counter / Alarm counter
p3100	RTC time stamp mode / RTC t_stamp mode
p3101[0...1]	Setting UTC time / Set UTC time
p3103	UTC synchronization process / UTC sync_process
p3950	Service parameter / Serv par
p3981	Acknowledge drive object faults / Ackn DO faults
p3985	Master control mode selection / PcCtrl mode select
p4700[0...1]	Trace control / Trace control
p4701	Measuring function control / Meas fct ctrl
p4703[0...1]	Trace options / Trace options
p4707	Measurement function configuration / Meas fct config
p4710[0...1]	Trace trigger condition / Trace Trig_cond
p4711[0...5]	Trace trigger signal / Trace trig_signal
p4712[0...1]	Trace trigger threshold / Trace trig_thresh
p4713[0...1]	Trace tolerance band trigger threshold 1 / Trace trig thr 1
p4714[0...1]	Trace tolerance band trigger threshold 2 / Trace trig thr 2
p4715[0...1]	Trace bit mask trigger, bit mask / Trace trig mask
p4716[0...1]	Trace bit mask trigger trigger condition / Trace Trig_cond
p4717	Measuring function number of averaging operations / Meas fct avg qty
p4718	Measuring function number of stabilizing periods / MeasFct StabPerQty
p4720[0...1]	Trace recording cycle / Trace record_cyc
p4721[0...1]	Trace recording time / Trace record_time
p4722[0...1]	Trace trigger delay / Trace trig_delay
p4723[0...1]	Trace time slice cycle / Trace cycle
p4724[0...1]	Trace average in the time range / Trace average
p4730[0...5]	Trace record signal 0 / Trace record sig 0
p4731[0...5]	Trace record signal 1 / Trace record sig 1
p4732[0...5]	Trace record signal 2 / Trace record sig 2
p4733[0...5]	Trace record signal 3 / Trace record sig 3
p4734[0...5]	Trace record signal 4 / Trace record sig 4
p4735[0...5]	Trace record signal 5 / Trace record sig 5
p4736[0...5]	Trace record signal 6 / Trace record sig 6
p4737[0...5]	Trace record signal 7 / Trace record sig 7

## 2.4 Parameters for write protection and know-how protection

p4780[0...1]	Trace physical address signal 0 / Trace PhyAddr Sig0
p4781[0...1]	Trace physical address signal 1 / Trace PhyAddr Sig1
p4782[0...1]	Trace physical address signal 2 / Trace PhyAddr Sig2
p4783[0...1]	Trace physical address signal 3 / Trace PhyAddr Sig3
p4784[0...1]	Trace physical address signal 4 / Trace PhyAddr Sig4
p4785[0...1]	Trace physical address signal 5 / Trace PhyAddr Sig5
p4786[0...1]	Trace physical address signal 6 / Trace PhyAddr Sig6
p4787[0...1]	Trace physical address signal 7 / Trace PhyAddr Sig7
p4789[0...1]	Trace physical address trigger signal / Trace PhyAddr Trig
p4795	Trace memory bank changeover / Trace mem changeov
p4800	Function generator control / FG control
p4810	Function generator mode / FG operating mode
p4812	Function generator physical address / FG phys address
p4813	Function generator physical address reference value / FG phys addr ref
p4815[0...2]	Function generator drive number / FG drive number
p4816	Function generator output signal integer number scaling / FG outp integ scal
p4819	BI: Function generator control / FG control
p4820	Function generator signal shape / FG signal shape
p4821	Function generator period / FG period duration
p4822	Function generator pulse width / FG pulse width
p4823	Function generator bandwidth / FG bandwidth
p4824	Function generator amplitude / FG amplitude
p4825	Function generator 2nd amplitude / FG 2nd amplitude
p4826	Function generator offset / FG offset
p4827	Function generator ramp-up time to offset / FG ramp-up offset
p4828	Function generator lower limit / FG lower limit
p4829	Function generator upper limit / FG upper limit
p4830	Function generator time slice cycle / FG time slice
p4831	Function generator amplitude scaling / FG amplitude scal
p4832[0...2]	Function generator amplitude scaling / FG amplitude scal
p4833[0...2]	Function generator offset scaling / FG offset scal
p4835[0...4]	Function generator free measurement function scaling / FG fr MeasFct scal
p4840[0...1]	MTrace cycle number setting / Cycle number
p7761	Write protection / Write protection
p7770	NVRAM action / NVRAM action
p8550	AOP LOCAL/REMOTE / AOP LOCAL/REMOTE
p8806[0...53]	Identification and Maintenance 1 / I&M 1
p8807[0...15]	Identification and Maintenance 2 / I&M 2
p8808[0...53]	Identification and Maintenance 3 / I&M 3
p8809[0...53]	Identification and Maintenance 4 / I&M 4
p8829	CBE2x remote controller number / CBE2x rem ctrl num
p9210	Flashing component number / Flash comp_no.
p9211	Flash function / Flash fct.
p9484	BICO interconnections search signal source / BICO S_src srch

### 2.4.2 Parameters with "KHP\_WRITE\_NO\_LOCK"

The following list contains the parameters with the "KHP\_WRITE\_NO\_LOCK" attribute.

These parameters are not affected by the know-how protection.

Product: SINAMICS G130/G150, Version: 4806000, Language: eng, Type: KHP\_WRITE\_NO\_LOCK

p0003	BOP access level / BOP acc_level
p0009	Device commissioning parameter filter / Dev comm par_filt
p0124[0...n]	Main component detection using LED / M_comp detect LED
p0124[0...n]	Power unit detection via LED / PU detection LED
p0144[0...n]	Sensor Module detection via LED / SM detection LED
p0154	Terminal Module detection via LED / TM detection LED
p0154	DRIVE-CLiQ Hub Module detection via LED / Hub detection LED
p0972	Drive unit reset / Drv_unit reset
p0976	Reset and load all parameters / Reset load all par
p0977	Save all parameters / Save all par
p2035	Fieldbus interface USS PIV drive object number / Fieldbus USS DO_no
p2040	Fieldbus interface monitoring time / Fieldbus t_monit
p2102	BI: Acknowledge all faults / Ackn all faults
p2111	Alarm counter / Alarm counter
p3100	RTC time stamp mode / RTC t_stamp mode
p3101[0...1]	Setting UTC time / Set UTC time
p3103	UTC synchronization process / UTC sync_process
p3950	Service parameter / Serv par
p3981	Acknowledge drive object faults / Ackn DO faults
p3985	Master control mode selection / PcCtrl mode select
p7761	Write protection / Write protection
p7770	NVRAM action / NVRAM action
p8550	AOP LOCAL/REMOTE / AOP LOCAL/REMOTE
p8806[0...53]	Identification and Maintenance 1 / I&M 1
p8807[0...15]	Identification and Maintenance 2 / I&M 2
p8808[0...53]	Identification and Maintenance 3 / I&M 3
p8809[0...53]	Identification and Maintenance 4 / I&M 4
p8829	CBE2x remote controller number / CBE2x rem ctrl num
p8835	CBE20 firmware selection / CBE20 FW sel
p8839[0...1]	PZD interface hardware assignment / PZD IF HW assign
p8840	COMM BOARD monitoring time / CB t_monit
p9210	Flashing component number / Flash comp_no.
p9211	Flash function / Flash fct.
p9484	BICO interconnections search signal source / BICO S_src srch

### 2.4.3 Parameters with "KHP\_ACTIVE\_READ"

The following list contains the parameters with the "KHP\_ACTIVE\_READ" attribute.

These parameters can also be read with activated know-how protection.

Product: SINAMICS G130/G150, Version: 4806000, Language: eng, Type: KHP\_ACTIVE\_READ

p0015	Macro drive unit / Macro drv unit
p0015	Macro drive object / Macro DO
p0100	IEC/NEMA mot stds / IEC/NEMA mot stds
p0101[0...n]	Drive object numbers / DO numbers
p0103[0...n]	Application-specific view / Appl_spec view
p0105	Activate/deactivate drive object / DO act/deact
p0107[0...n]	Drive object type / DO type
p0108[0...n]	Drive objects function module / DO fct_mod
p0120	Number of Power unit Data Sets (PDS) / PDS count
p0121[0...n]	Power unit component number / PU comp_no
p0125[0...n]	Activate/deactivate power unit components / PU_comp act/deact
p0130	Number of Motor Data Sets (MDS) / MDS count
p0131[0...n]	Motor component number / Mot comp_no
p0140	Number of Encoder Data Sets (EDS) / EDS count
p0141[0...n]	Encoder interface (Sensor Module) component number / Enc_intf comp_no
p0142[0...n]	Encoder component number / Encoder comp_no
p0145[0...n]	Activate/deactivate encoder interface / Enc_intf act/deact
p0150	Number of VSM data sets / VSM dat_sets qty.
p0151[0...n]	Voltage Sensing Module component number / VSM comp_no
p0151	Terminal Module component number / TM comp_no
p0151[0...1]	DRIVE-CLiQ Hub Module component number / Hub comp_no
p0161	Option board component number / Opt board comp_no
p0170	Number of Command Data Sets (CDS) / CDS count
p0171[0...n]	Drive objects function module 1 / DO fct_mod 1
p0172[0...n]	Drive objects function module 2 / DO fct_mod 2
p0173[0...n]	Drive objects function module 3 / DO fct_mod 3
p0180	Number of Drive Data Sets (DDS) / DDS count
p0199[0...24]	Drive object name / DO name
p0300[0...n]	Motor type selection / Mot type sel
p0304[0...n]	Rated motor voltage / Mot U_rated
p0305[0...n]	Rated motor current / Mot I_rated
p0349	System of units motor equivalent circuit diagram data / Unit_sys mot ESB
p0400[0...n]	Encoder type selection / Enc_typ sel
p0505	Selecting the system of units / Unit sys select
p0595	Technological unit selection / Tech unit select
p0806	BI: Inhibit master control / PcCtrl inhibit
p0864	BI: Infeed operation / INF operation
p0922	IF1 PROFIdrive PZD telegram selection / IF1 PZD telegr
p0978[0...n]	List of drive objects / List of the DO
p1080[0...n]	Minimum speed / n_min
p1082[0...n]	Maximum speed / n_max
p1520[0...n]	CO: Torque limit upper / M_max upper
p2000	Reference speed reference frequency / n_ref f_ref
p2000	Reference frequency / f_ref
p2000	Reference velocity reference frequency / v_ref f_ref
p2001	Reference voltage / Reference voltage
p2002	Reference current / I_ref
p2003	Reference torque / M_ref
p2005	Reference angle / Reference angle
p2006	Reference temp / Ref temp

## 2 Parameters

---

### 2.4 Parameters for write protection and know-how protection

p2007	Reference acceleration / a_ref
p2030	Field bus int protocol selection / Field bus protocol
p2038	IF1 PROFIdrive STW/ZSW interface mode / PD STW/ZSW IF mode
p2079	IF1 PROFIdrive PZD telegram selection extended / IF1 PZD telegr ext
p4956[0...n]	TEC DO-specific activation / TEC DO act
p7763	KHP OEM exception list number of indices for p7764 / KHP OEM qty p7764
p7764[0...n]	KHP OEM exception list / KHP OEM excep list
p7852	Number of indices for r7853 / Qty indices r7853
p8836	SINAMICS link node address / Node address
p8870[0...15]	SINAMICS Link PZD receive word / PZD recv word
p8870[0...31]	SINAMICS Link PZD receive word / PZD recv word
p8871[0...15]	SINAMICS Link PZD send word / PZD send word
p8871[0...31]	SINAMICS Link PZD send word / PZD send word
p8872[0...15]	SINAMICS Link PZD receive address / PZD recv adr.
p8872[0...31]	SINAMICS Link PZD receive address / PZD recv adr.
p9500	SI Motion monitoring clock cycle (Control Unit) / SI Mtn clock CU
p9601	SI enable functions integrated in the drive (Control Unit) / SI enable fct CU
p9810	SI PROFIsafe address (Motor Module) / SI PROFIsafe MM
p9902	Target topology number of indices / TargetTopo indices

# Function diagrams

## Content

3.1	Table of contents	1093
3.2	Explanation of the function diagrams	1101
3.3	CU320-2 input/output terminals	1106
3.4	Control Unit communication	1114
3.5	PROIFlenergy	1119
3.6	PROFIdrive	1122
3.7	Internal control/status words	1167
3.8	Sequence control	1180
3.9	Brake control	1183
3.10	Safety Integrated Basic Functions	1188
3.11	Safety Integrated Extended Functions	1196
3.12	Safety Integrated TM54F	1210
3.13	Safety Integrated PROFIsafe	1223
3.14	Setpoint channel	1226
3.15	Encoder evaluation	1236
3.16	Vector control	1240
3.17	Technology functions	1271
3.18	Technology controller	1278
3.19	Signals and monitoring functions	1284
3.20	Diagnostics	1296
3.21	Data sets	1305
3.22	Basic Infeed	1311
3.23	Terminal Board 30 (TB30)	1319
3.24	Communication Board CAN10 (CBC10)	1325
3.25	Terminal Module 31 (TM31)	1332

3.26	Terminal Module 120 (TM120)	1343
3.27	Terminal Module 150 (TM150)	1346
3.28	Voltage Sensing Module (VSM)	1350
3.29	Basic Operator Panel 20 (BOP20)	1353

## 3.1 Table of contents

<b>3.2 Explanation of the function diagrams</b> .....	1101
1020 – Explanation of the symbols (part 1) .....	1102
1021 – Explanation of the symbols (part 2) .....	1103
1022 – Explanation of the symbols (part 3) .....	1104
1030 – Handling BICO technology .....	1105
<b>3.3 CU320-2 input/output terminals</b> .....	1106
2119 – Overview .....	1107
2120 – Digital inputs, electrically isolated (DI 0 ... DI 3, DI 16, DI 17) .....	1108
2121 – Digital inputs, electrically isolated (DI 4 ... DI 7, DI 20, DI 21) .....	1109
2130 – Digital inputs/outputs, bidirectional (DI/DO 8 ... DI/DO 9) .....	1110
2131 – Digital inputs/outputs, bidirectional (DI/DO 10 ... DI/DO 11) .....	1111
2132 – Digital inputs/outputs, bidirectional (DI/DO 12 ... DI/DO 13) .....	1112
2133 – Digital inputs/outputs, bidirectional (DI/DO 14 ... DI/DO 15) .....	1113
<b>3.4 Control Unit communication</b> .....	1114
2197 – SINAMICS Link overview (r0108.31 = 1, p8835 = 3) .....	1115
2198 – SINAMICS Link configuration (r0108.31 = 1, p8835 = 3) .....	1116
2199 – SINAMICS Link receive data (r0108.31 = 1, p8835 = 3) .....	1117
2200 – SINAMICS Link send data (r0108.31 = 1, p8835 = 3) .....	1118
<b>3.5 PROIFlenergy</b> .....	1119
2381 – Control commands / interrogation commands .....	1120
2382 – States .....	1121
<b>3.6 PROFIdrive</b> .....	1122
2401 – Overview .....	1124
2410 – PROFIBUS (PB) / PROFINET (PN), addresses and diagnostics .....	1125
2415 – Standard telegrams and process data 1 .....	1126
2416 – Standard telegrams and process data 2 .....	1127
2419 – Manufacturer-specific telegrams and process data 1 .....	1128
2420 – Manufacturer-specific telegrams and process data 2 .....	1129
2421 – Manufacturer-specific telegrams and process data 3 .....	1130
2422 – Manufacturer-specific telegrams and process data 4 .....	1131
2423 – Manufacturer-specific/free telegrams and process data .....	1132
2425 – STW1_BM control word, metal industry interconnection .....	1133
2426 – STW2_BM control word, metal industry interconnection .....	1134

2427 – E_STW1_BM control word, infeed metal industry interconnection . . . . .	1135
2428 – ZSW1_BM status word, metal industry interconnection . . . . .	1136
2429 – ZSW2_BM status word, metal industry interconnection . . . . .	1137
2430 – E_ZSW1_BM status word, infeed metal industry interconnection . . . . .	1138
2439 – PZD receive signals interconnection, profile-specific . . . . .	1139
2440 – PZD receive signals interconnection, manufacturer-specific . . . . .	1140
2441 – STW1 control word interconnection (p2038 = 2) . . . . .	1141
2442 – STW1 control word interconnection (p2038 = 0) . . . . .	1142
2444 – STW2 control word interconnection (p2038 = 0) . . . . .	1143
2447 – E_STW1 control word infeed interconnection . . . . .	1144
2449 – PZD send signals interconnection, profile-specific . . . . .	1145
2450 – PZD send signals interconnection, manufacturer-specific . . . . .	1146
2451 – ZSW1 status word interconnection (p2038 = 2) . . . . .	1147
2452 – ZSW1 status word interconnection (p2038 = 0) . . . . .	1148
2454 – ZSW2 status word interconnection (p2038 = 0) . . . . .	1149
2457 – E_ZSW1 status word, infeed interconnection . . . . .	1150
2468 – IF1 receive telegram, free interconnection via BICO (p0922 = 999) . . . . .	1151
2470 – IF1 send telegram, free interconnection via BICO (p0922 = 999) . . . . .	1152
2472 – IF1 status words, free interconnection . . . . .	1153
2481 – IF1 receive telegram, free interconnection via BICO (p0922 = 999) . . . . .	1154
2483 – IF1 send telegram, free interconnection via BICO (p0922 = 999) . . . . .	1155
2485 – IF2 receive telegram, free interconnection . . . . .	1156
2487 – IF2 send telegram, free interconnection . . . . .	1157
2489 – IF2 status words, free interconnection . . . . .	1158
2491 – IF2 receive telegram, free interconnection . . . . .	1159
2493 – IF2 send telegram, free interconnection . . . . .	1160
2495 – CU_STW1 control word 1, Control Unit interconnection . . . . .	1161
2496 – CU_ZSW1 status word 1, Control Unit interconnection . . . . .	1162
2497 – A_DIGITAL interconnection . . . . .	1163
2498 – E_DIGITAL interconnection . . . . .	1164
2499 – A_DIGITAL_1 interconnection . . . . .	1165
2500 – E_DIGITAL_1 interconnection . . . . .	1166
<b>3.7 Internal control/status words . . . . .</b>	<b>1167</b>
2501 – Control word, sequence control . . . . .	1168
2503 – Status word, sequence control . . . . .	1169
2505 – Control word, setpoint channel . . . . .	1170

2520 – Control word, speed controller .....	1171
2522 – Status word, speed controller .....	1172
2526 – Status word, closed-loop control .....	1173
2530 – Status word, closed-loop current control .....	1174
2534 – Status word, monitoring functions 1 .....	1175
2536 – Status word, monitoring functions 2 .....	1176
2537 – Status word, monitoring functions 3 .....	1177
2546 – Control word, faults/alarms .....	1178
2548 – Status word, faults/alarms 1 and 2 .....	1179
<b>3.8 Sequence control</b> .....	<b>1180</b>
2610 – Sequencer .....	1181
2634 – Missing enables, line contactor control, logic operation .....	1182
<b>3.9 Brake control</b> .....	<b>1183</b>
2701 – Basic brake control (r0108.14 = 0) .....	1184
2704 – Extended brake control, zero-speed detection (r0108.14 = 1) .....	1185
2707 – Extended brake control, open/close brake (r0108.14 = 1) .....	1186
2711 – Extended brake control, signal outputs (r0108.14 = 1) .....	1187
<b>3.10 Safety Integrated Basic Functions</b> .....	<b>1188</b>
2800 – Parameter manager .....	1189
2802 – Monitoring functions and faults/alarms .....	1190
2804 – SI status CU, MM, CU + MM, group STO .....	1191
2806 – S_STW1/2 Safety control word 1/2, S_ZSW1/2 Safety status word 1/2 .....	1192
2810 – STO (Safe Torque Off), SS1 (Safe Stop 1) .....	1193
2811 – STO (Safe Torque Off), safe pulse suppression .....	1194
2814 – SBC (Safe Brake Control), SBA (Safe Brake Adapter) .....	1195
<b>3.11 Safety Integrated Extended Functions</b> .....	<b>1196</b>
2818 – Parameter manager .....	1197
2819 – SS1, SS2, SOS, internal STOP B, C, D, F .....	1198
2820 – SLS (Safely-Limited Speed) .....	1199
2821 – Safe referencing .....	1200
2822 – SLP (Safely-Limited Position) .....	1201
2823 – SSM (Safe Speed Monitor) .....	1202
2824 – SDI (Safe Direction) .....	1203
2825 – SAM (Safe Acceleration Monitor), SBR (Safe Brake Ramp) .....	1204

2836 – SBT (Safe Brake Test) . . . . .	1205
2837 – Selection of active control word . . . . .	1206
2840 – SI Motion drive-integrated control signals / status signals . . . . .	1207
2842 – S_STW1 Safety control word 1, S_ZSW1 Safety status word 1 . . . . .	1208
2843 – S_STW2 Safety control word 2, S_ZSW2 Safety status word 2 . . . . .	1209
<b>3.12 Safety Integrated TM54F . . . . .</b>	<b>1210</b>
2890 – Overview . . . . .	1211
2891 – Parameter manager . . . . .	1212
2892 – Configuration, F-DI/F-DO test . . . . .	1213
2893 – Fail-safe digital inputs (F-DI 0 ... F-DI 4) . . . . .	1214
2894 – Fail-safe digital inputs (F-DI 5 ... F-DI 9) . . . . .	1215
2895 – Fail-safe digital outputs (F-DO 0 ... F-DO 3), digital inputs (DI 20 ... DI 23) . . . . .	1216
2900 – Basic Functions control interface (p9601.2/3 = 0 & p9601.6 = 1) . . . . .	1217
2901 – Basic Functions Safe State selection . . . . .	1218
2902 – Basic Functions assignment (F-DO 0 ... F-DO 3) . . . . .	1219
2905 – Extended Functions control interface (p9601.2 = 1 & p9601.3 = 0) . . . . .	1220
2906 – Extended Functions Safe State selection . . . . .	1221
2907 – Extended Functions assignment (F-DO 0 ... F-DO 3) . . . . .	1222
<b>3.13 Safety Integrated PROFIsafe . . . . .</b>	<b>1223</b>
2915 – Standard telegrams . . . . .	1224
2917 – Manufacturer-specific telegrams . . . . .	1225
<b>3.14 Setpoint channel . . . . .</b>	<b>1226</b>
3001 – Overview . . . . .	1227
3010 – Fixed speed setpoints . . . . .	1228
3020 – Motorized potentiometer . . . . .	1229
3030 – Main/supplementary setpoint, setpoint scaling, jogging . . . . .	1230
3040 – Direction limitation and direction reversal . . . . .	1231
3050 – Skip frequency bands and speed limitations . . . . .	1232
3060 – Basic ramp-function generator . . . . .	1233
3070 – Extended ramp-function generator . . . . .	1234
3080 – Ramp-function generator selection, status word, tracking . . . . .	1235

<b>3.15 Encoder evaluation</b> .....	1236
4702 – Overview .....	1237
4704 – Raw signal sensing .....	1238
4715 – Actual speed value and pole position sensing, encoder 1, n_act_filter 5 .....	1239
<b>3.16 Vector control</b> .....	1240
6020 – Speed control and generation of the torque limits, overview .....	1242
6030 – Speed setpoint, droop .....	1243
6031 – Pre-control balancing, reference/acceleration model .....	1244
6035 – Moment of inertia estimator (r0108.10 = 1) .....	1245
6040 – Speed controller with/without encoder .....	1246
6050 – Speed controller adaptation (Kp_n/Tn_n adaptation) .....	1247
6060 – Torque setpoint .....	1248
6220 – Vdc_max controller and Vdc_min controller .....	1249
6300 – U/f control, overview .....	1250
6301 – U/f characteristic and voltage boost .....	1251
6310 – Resonance damping and slip compensation .....	1252
6320 – Vdc_max controller and Vdc_min controller (U/f) .....	1253
6490 – Speed control configuration .....	1254
6491 – Flux control configuration .....	1255
6630 – Upper/lower torque limit .....	1256
6640 – Current/power/torque limits .....	1257
6700 – Current control, overview .....	1258
6710 – Current setpoint filter .....	1259
6714 – Iq and Id controllers .....	1260
6721 – Id setpoint (PEM, p0300 = 2) .....	1261
6722 – Field weakening characteristic, Id setpoint (ASM, p0300 = 1) .....	1262
6723 – Field weakening controller, flux controller (ASM, p0300 = 1) .....	1263
6724 – Field weakening controller (PEM, p0300 = 2) .....	1264
6730 – Interface to the Motor Module (ASM, p0300 = 1) .....	1265
6731 – Interface to the Motor Module (PEM, p0300 = 2) .....	1266
6790 – Flux setpoint (RESM, p0300 = 6) .....	1267
6791 – Id setpoint (RESM, p0300 = 6) .....	1268
6792 – Interface to the Motor Module (RESM, p0300 = 6) .....	1269
6799 – Display signals .....	1270

<b>3.17 Technology functions</b> .....	1271
7010 – Friction characteristic .....	1272
7014 – External Armature Short-Circuit (EASC, p0300 = 2xx or 4xx) .....	1273
7016 – Internal Armature Short-Circuit (IASC, p0300 = 2xx or 4xx) .....	1274
7017 – DC braking (p0300 = 1xx) .....	1275
7020 – Synchronization .....	1276
7033 – Essential service mode (ESM) .....	1277
<b>3.18 Technology controller</b> .....	1278
7950 – Fixed values, binary selection (r0108.16 = 1 and p2216 = 2) .....	1279
7951 – Fixed values, direct selection (r0108.16 = 1 and p2216 = 1) .....	1280
7954 – Motorized potentiometer (r0108.16 = 1) .....	1281
7958 – Closed-loop control (r0108.16 = 1) .....	1282
7960 – DC-link voltage controller (r0108.16 = 1) .....	1283
<b>3.19 Signals and monitoring functions</b> .....	1284
8005 – Overview .....	1285
8010 – Speed signals 1 .....	1286
8011 – Speed signals 2 .....	1287
8012 – Torque signals, motor blocked/stalled .....	1288
8013 – Load monitoring (r0108.17 = 1) .....	1289
8016 – Thermal monitoring, motor, motor temperature status word faults/alarms .....	1290
8017 – Motor temperature model 1 (I2t) .....	1291
8018 – Motor temperature model 2 .....	1292
8019 – Motor temperature model 3 .....	1293
8021 – Thermal monitoring, power unit .....	1294
8022 – Freely parameterized I2t monitoring (SESM) .....	1295
<b>3.20 Diagnostics</b> .....	1296
8050 – Overview .....	1297
8060 – Fault buffer .....	1298
8065 – Alarm buffer .....	1299
8070 – Faults/alarms trigger word (r2129) .....	1300
8075 – Faults/alarms configuration .....	1301
8134 – Measuring sockets (T0, T1, T2) .....	1302
8144 – Recorder overview (r0108.5 = 1) .....	1303
8145 – Recorder sequence control (r0108.5 = 1) .....	1304

<b>3.21 Data sets</b> .....	1305
8560 – Command Data Sets (CDS) .....	1306
8565 – Drive Data Sets (DDS) .....	1307
8570 – Encoder Data Sets (EDS) .....	1308
8575 – Motor Data Sets (MDS) .....	1309
8580 – Power unit Data Sets (PDS) .....	1310
<b>3.22 Basic Infeed</b> .....	1311
8710 – Overview .....	1312
8720 – Control word, sequence control infeed .....	1313
8726 – Status word, sequence control infeed .....	1314
8732 – Sequencer .....	1315
8738 – Missing enables, line contactor control .....	1316
8750 – Interface to the Basic Infeed power unit (control signals, actual values) .....	1317
8760 – Signals and monitoring functions (p3400.0 = 0) .....	1318
<b>3.23 Terminal Board 30 (TB30)</b> .....	1319
9099 – Overview .....	1320
9100 – Digital inputs, electrically isolated (DI 0 ... DI 3) .....	1321
9102 – Digital outputs, electrically isolated (DO 0 ... DO 3) .....	1322
9104 – Analog inputs (AI 0 ... AI 1) .....	1323
9106 – Analog outputs (AO 0 ... AO 1) .....	1324
<b>3.24 Communication Board CAN10 (CBC10)</b> .....	1325
9204 – Receive telegram, free PDO mapping (p8744 = 2) .....	1326
9206 – Receive telegram, Predefined Connection Set (p8744 = 1) .....	1327
9208 – Send telegram, free PDO mapping (p8744 = 2) .....	1328
9210 – Send telegram, Predefined Connection Set (p8744 = 1) .....	1329
9220 – Control word, CANopen .....	1330
9226 – Status word, CANopen .....	1331
<b>3.25 Terminal Module 31 (TM31)</b> .....	1332
9549 – Overview .....	1333
9550 – Digital inputs, electrically isolated (DI 0 ... DI 3) .....	1334
9552 – Digital inputs, electrically isolated (DI 4 ... DI 7) .....	1335
9556 – Digital relay outputs, electrically isolated (DO 0 ... DO 1) .....	1336
9560 – Digital inputs/outputs, bidirectional (DI/DO 8 ... DI/DO 9) .....	1337
9562 – Digital inputs/outputs, bidirectional (DI/DO 10 ... DI/DO 11) .....	1338

9566 – Analog input 0 (AI 0) .....	1339
9568 – Analog input 1 (AI 1) .....	1340
9572 – Analog outputs (AO 0 ... AO 1) .....	1341
9576 – Temperature evaluation .....	1342
<b>3.26 Terminal Module 120 (TM120)</b> .....	<b>1343</b>
9605 – Temperature evaluation channels 0 and 1 (KTY/PTC/bimetal) .....	1344
9606 – Temperature evaluation channels 2 and 3 (KTY/PTC/bimetal) .....	1345
<b>3.27 Terminal Module 150 (TM150)</b> .....	<b>1346</b>
9625 – Temperature evaluation structure (channels 0 ... 11) .....	1347
9626 – Temperature evaluation 1x2-, 3-, 4-wire (channels 0 ... 5) .....	1348
9627 – Temperature evaluation 2x2-wire (channels 0 ... 11) .....	1349
<b>3.28 Voltage Sensing Module (VSM)</b> .....	<b>1350</b>
9880 – Analog inputs (AI 0 ... AI 3) .....	1351
9886 – Temperature evaluation .....	1352
<b>3.29 Basic Operator Panel 20 (BOP20)</b> .....	<b>1353</b>
9912 – Control word interconnection .....	1354

## 3.2 Explanation of the function diagrams

### Function diagrams

---

1020 – Explanation of the symbols (part 1)	1102
1021 – Explanation of the symbols (part 2)	1103
1022 – Explanation of the symbols (part 3)	1104
1030 – Handling BICO technology	1105

---

Fig. 3-1 1020 – Explanation of the symbols (part 1)

Parameters		Connectors		Binectors		Connectors/binectors	
Symbol	Meaning	Symbol	Meaning	Symbol	Meaning	Symbol	Meaning
Parameter name [Unit] rxxx[x]	Monitoring parameter with index [x].	name pxxxx (xxxx)	Connector input CI.	name pxxxx (Def)	Binector input BI with factory setting (Def).	Parameter name rxxx rxxx	Connector/binector output CO/BO.
Parameter name [Unit] rxxx[x...y]	Monitoring parameter with index range [x...y].	name pxxxx[y] (xxxx [x])	Connector input CI with index [y].	name pxxxx[y] (Def)	Binector input BI with index [y] and factory setting (Def).	<b>Cross references between diagrams</b>	
[aaaa.b] Parameter name from ... to [Unit] pxxx[y...z] (Def)	Setting parameter (if the parameter appears a multiple number of times, then diagram references are specified).	name pxxxx[y...z] (xxxx [y])	Connector input CI with index range [y...z].	name pxxxx[y...z] (Def)	Binector input BI with index range [y...z] and factory setting (Def).	1 ... 8 Signal path 1 Signal path 8 [aaaa.1] ... [aaaa.8]	The function diagrams are sub-divided into 8 signal paths in order to facilitate orientation.
[aaaa.b] Parameter name from ... to [Unit] pxxx[y] (Def)	Setting parameter with index (if the parameter appears a multiple number of times, then diagram references are specified).	name [unit] rxxx[y...z]	Connector output CO with [dimension unit] and index range [y...z].	name rxxx	Binector output BO.	Text → [aaaa.b]	Text = Unique signal designation aaaa = Signal goes to target diagram aaaa b = Signal goes to signal path b
		name [unit] rxxx[y]	Connector output CO [dimension unit] and with index [y].	name rxxx.y	Binector output BO with bit y.	[cccc.d] → Text	Text = Unique signal designation cccc = Signal comes from source diagram cccc d = Signal comes from signal path d
		CI: Connector Input CO: Connector Output CO/BO: Connector/Binector Output		BI: Binector Input BO: Binector Output		To "function diagram name" [aaaa.b] = for binectors.	
<b>Data sets</b>		<b>Information on parameters, binectors, connectors</b>					
Symbol	Meaning	Symbol	Meaning				
pxxxx[C]	Parameter belongs to the Command Data Set (CDS).	Parameter name	Parameter name (up to 18 characters).				
pxxxx[D]	Parameter belongs to the Drive Data Set (DDS).	[Unit]	[dimension unit] rotatory axis, for linear axis see list of parameters.				
pxxxx[E]	Parameter belongs to the Encoder Data Set (EDS).	rxxx[y] or rxxx[y...z] or rxxx[y].ww or rxxx.ww	"r" = monitoring parameter. These parameters are read-only "xxxx" stands for the parameter number, "y" specifies the valid index, "y...z" specifies the applicable index range ".ww" specifies the bit number (e.g. 0...15).				
pxxxx[M]	Parameter belongs to the Motor Data Set (MDS).	pxxxx[y] or pxxxx[y...z] or pxxxx[y].ww or pxxxx.ww	"p" = setting parameter. These parameters can be changed. "xxxx" stands for the parameter number, "y" specifies the applicable index, "y...z" specifies the applicable index range ".ww" specifies the bit number (e.g. 0...15).				
pxxxx[P]	Parameter belongs to the Power unit Data Set (PDS).	from ... to	Value range.				
		(xxxx[y].ww)	Parameter number (xxxx) with Index number [y] and bit number .ww.				
		(Def)	Factory setting.				
		(Def.w)	Factory setting with bit number as prefix.				
		[aaaa.b]	Diagram references for setting parameters that occur a multiple number of times. [Function diagram number, signal path]				
		<b>Samplings times</b>					
		pxxxx[Y] (ZZZ.ZZ μs)	Setting parameter with factory setting to select the time slice.				
		p0115[y] (Drive Object)	Time slice depending on the pre-setting p0112 of the drive object. "y" specifies the applicable index.				
		p0115[y] (Motor Modules)	Time slice depending on the rated pulse frequency of the motor module. "y" specifies the applicable index.				
		(PROFIdrive sampling time)	Presetting for IF1 in p2048. Presetting for IF2 in p8848. The bus clock applies to a clock synchronized operate to IF1 or IF2.				
		(CAN bus sampling time)	Presetting in p8848.				
		Background	There is no fixed sampling time for this function. The processing takes place in background. The cycle time depends on the computational load of the control unit.				
		Not relevant	A static state is displayed here. The sampling time data is not relevant.				
1	2	3	4	5	6	7	8
DO: All objects					fp_1020_51_eng.vsd	Function diagram	
Explanations on the function diagrams - Explanation of the symbols (part 1)					27.11.15 V04.08.00	SINAMICS	
							- 1020 -

Fig. 3-2 1021 – Explanation of the symbols (part 2)

Pre-assigned binectors and connectors	Symbols for logic functions	Symbols for computational and closed-loop control functions					
<p><b>Fixed percentage values</b></p> <p>-10 000.00...10 000.00 [%] p2900[D] (0.00) → </p> <p>-10 000.00...10 000.00 [%] p2901[D] (0.00) → </p> <p>Fixed values [%] p2902[0...14] (0.00) → </p> <p>p2902[0] = +0 %    p2902[5] = +100 %    p2902[10] = -20 % p2902[1] = +5 %    p2902[6] = +150 %    p2902[11] = -50 % p2902[2] = +10 %    p2902[7] = +200 %    p2902[12] = -100 % p2902[3] = +20 %    p2902[8] = -5 %    p2902[13] = -150 % p2902[4] = +50 %    p2902[9] = -10 %    p2902[14] = -200 %</p> <p><b>Fixed speed values</b></p> <p>-210 000.000...210 000.000 [rpm] p1001[D] (0.000) → </p> <p>⋮</p> <p>-210 000.000...210 000.000 [rpm] p1015[D] (0.000) → </p> <p><b>Fixed torque value</b></p> <p>-100 000.00...100 000.00 [Nm] p2930[D] (0.00) → </p>	<p><b>NOT element</b> Logical inversion (negation).</p> <p><b>AND element</b> With logical inversion of an input.</p> <p><b>OR element</b></p> <p><b>R/S flip-flop</b> S/R = setting input/reset input Q = non-inverted output Q̄ = inverted output With a simultaneous 1-signal at the R and S inputs, the S input dominates.</p> <p><b>Exclusiv-OR/XOR</b> y = 1 when x<sub>1</sub> ≠ x<sub>2</sub> is.</p> <p><b>Comparator</b> y = 1 when x<sub>1</sub> = x<sub>2</sub> is.</p>	<p><b>Threshold value switch 1/0</b> Outputs at y a logical "1" if x &lt; S.</p> <p><b>Threshold value switch 0/1</b> Outputs at y a logical "1" if x &gt; S.</p> <p><b>Threshold value switch 1/0 with hysteresis</b> Outputs at y a logical "1" if x &lt; S. If x ≥ S + H, then y returns to 0.</p> <p><b>Threshold value switch 0/1 with hysteresis</b> Outputs at y a logical "1" if x &gt; S. If x ≤ S - H, then y returns to 0.</p> <p><b>Limiter</b> x is limited to the upper limit LU and the lower limit LL and output at y. The digital signals MLU and MLL have the value "1", if the upper or lower limit is active.</p> <p><b>Sample &amp; Hold element</b> Sample and hold element. y = x if SET = 1 (not saved retentively at POWER OFF)</p>					
<p><b>Switch symbol</b></p> <p></p> <p><b>Simple changeover switch</b> The switch position is shown according to the factory setting of pxxxx (in this case switch position 1).</p>	<p><b>Symbols for computational and closed-loop control functions</b></p> <p><b>Sign reversal</b> y = -x</p> <p><b>Absolute value generator</b> y =  x </p> <p><b>Divider</b> y = <math>\frac{x_1}{x_2}</math></p> <p><b>Multiplier</b> y = x<sub>1</sub> * x<sub>2</sub></p> <p><b>Comparator</b> y = 1 if the analog signal x &gt; 0, i.e. is positive.</p> <p><b>Differentiator</b> Y = <math>\frac{dx}{dt}</math></p>						
1	2	3	4	5	6	7	8
DO: All objects					fp_1021_51_eng.vsd	Function diagram	
Explanations on the function diagrams - Explanation of the symbols (part 2)					26.11.15 V04.08.00	SINAMICS	


Fig. 3-3 1022 – Explanation of the symbols (part 3)

<p><b>Switch-on delay</b></p> <p>The digital signal x must have the value "1" without any interruption during the time T before output y changes to "1".</p>	<p><b>PT1 element</b></p> <p>Delay element, first order. pxxxx = time constant</p>	<p><b>PT2 low pass</b></p> <p>Natural frequency, denominator: fn_d Damping, denominator: D_d</p> <p>Transfer function: <math display="block">H(s) = \frac{1}{\left(\frac{s}{2\pi \cdot fn\_d}\right)^2 + \frac{2 \cdot D\_d}{2\pi \cdot fn\_d} \cdot s + 1}</math></p>	<p><b>2nd-order filter (bandstop/general filter)</b></p> <p>Natural frequency, numerator: fn_n Damping, numerator: D_n</p> <p>Natural frequency, denominator: fn_d Damping, denominator: D_d</p> <p>Used as bandstop filter - center frequency fs: - bandwidth f_B:</p> $fn\_n = fs$ $fn\_d = fs$ $D\_n = 0$ $D\_d = \frac{f\_B}{2 \cdot fs}$ <p>Transfer function when used as general filter:</p> $H(s) = \frac{\left(\frac{s}{2\pi \cdot fn\_n}\right)^2 + \frac{2 \cdot D\_n}{2\pi \cdot fn\_n} \cdot s + 1}{\left(\frac{s}{2\pi \cdot fn\_d}\right)^2 + \frac{2 \cdot D\_d}{2\pi \cdot fn\_d} \cdot s + 1}$				
<p><b>Switch-off delay</b></p> <p>The digital signal x must have the value "0" without interruption during the time T before output y changes to "0".</p>	<p><b>Delay (switch-on and switch-off)</b></p> <p>The digital signal x must have the value "1" without interruption during time T<sub>1</sub> or must have the value "0" during time T<sub>2</sub> before output y changes its signal state.</p>	<p><b>Linear</b></p> <p>p0310</p> <p><b>Parabolic</b></p> <p>p0310</p> <p><b>Flux current control (FCC)</b></p> <p>Dependent on the load current Mot f_rated p0310</p>					
1	2	3	4	5	6	7	8

DO: All objects	fp_1022_51_eng.vsd	Function diagram
Explanations on the function diagrams - Explanation of the symbols (part 3)	17.07.13 V04.08.00	SINAMICS

Fig. 3-4 1030 – Handling BICO technology

### Handling BICO technology

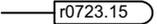**Binector:**  r0723.15 Binectors are binary signals that can be freely interconnected (BO = Binector Output). They represent a bit of a "BO:" display parameter (e.g. bit 15 from r0723).


**Connector:**  r0723 Connectors are bit fields or numerical values that can be freely interconnected (e.g. "analog signals", like percentage variables, speeds or torques). Connectors are also "CO:" display parameters (CO = Connector Output).

**Parameterization:**

At the signal destination, the required binector or connector is selected using appropriate parameters:  
"BI:" parameter for binectors (BI = Binector Input)  
or  
"CI:" parameter for connectors (CI = Connector Input)

**Example:**

The main setpoint for the speed controller (CI: p1070) should be received from the output of the motorized potentiometer (CO: r1050) and the "jog" command (BI: p1055) from digital input DI 0 (BO: r0722.0, X122.1 terminal) on the CU320.

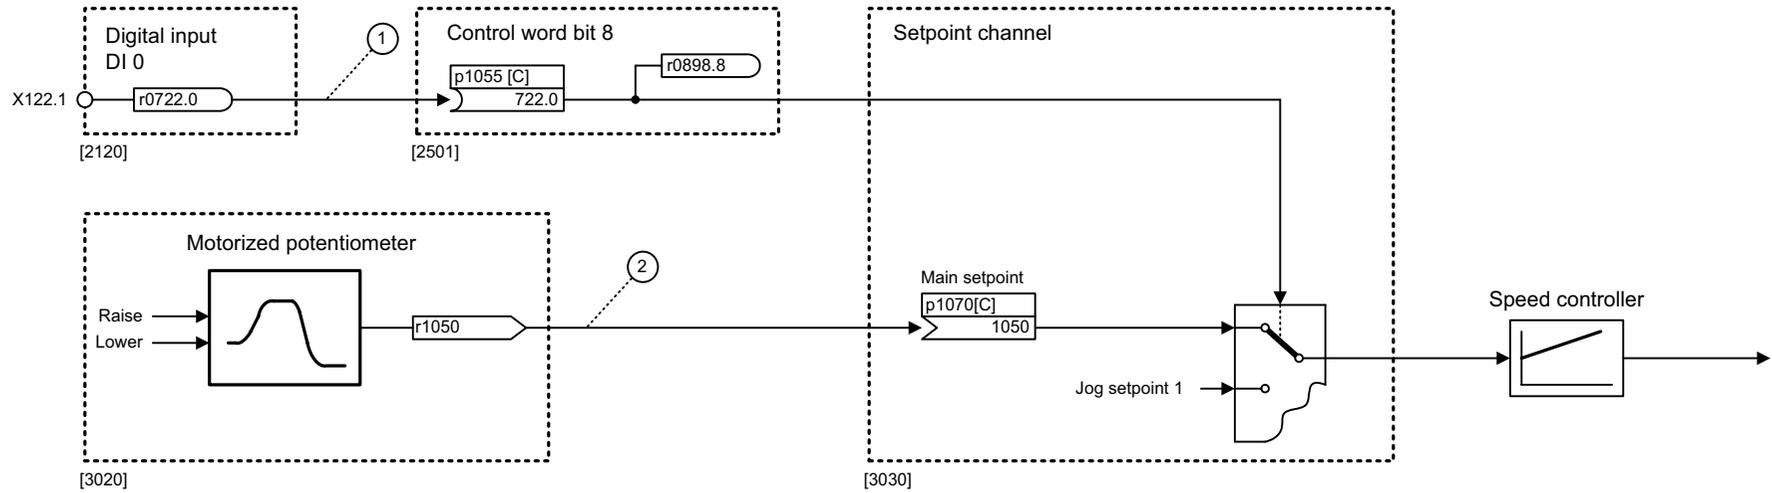

**Parameterizing steps:**

- ① p1055[0] = 722.0 Terminal X122.1 acts as "Jog bit 0".
- ② p1070[0] = 1050 The output of the motorized potentiometer acts as main setpoint for the speed controller.


1	2	3	4	5	6	7	8
DO: All objects					fp_1030_51_eng.vsd	Function diagram	
Explanations on the function diagrams - Handling BICO technology					10.05.11 V04.08.00	SINAMICS	
							- 1030 -

### 3.3 CU320-2 input/output terminals

#### Function diagrams

2119 – Overview	1107
2120 – Digital inputs, electrically isolated (DI 0 ... DI 3, DI 16, DI 17)	1108
2121 – Digital inputs, electrically isolated (DI 4 ... DI 7, DI 20, DI 21)	1109
2130 – Digital inputs/outputs, bidirectional (DI/DO 8 ... DI/DO 9)	1110
2131 – Digital inputs/outputs, bidirectional (DI/DO 10 ... DI/DO 11)	1111
2132 – Digital inputs/outputs, bidirectional (DI/DO 12 ... DI/DO 13)	1112
2133 – Digital inputs/outputs, bidirectional (DI/DO 14 ... DI/DO 15)	1113

Fig. 3-5 2119 – Overview

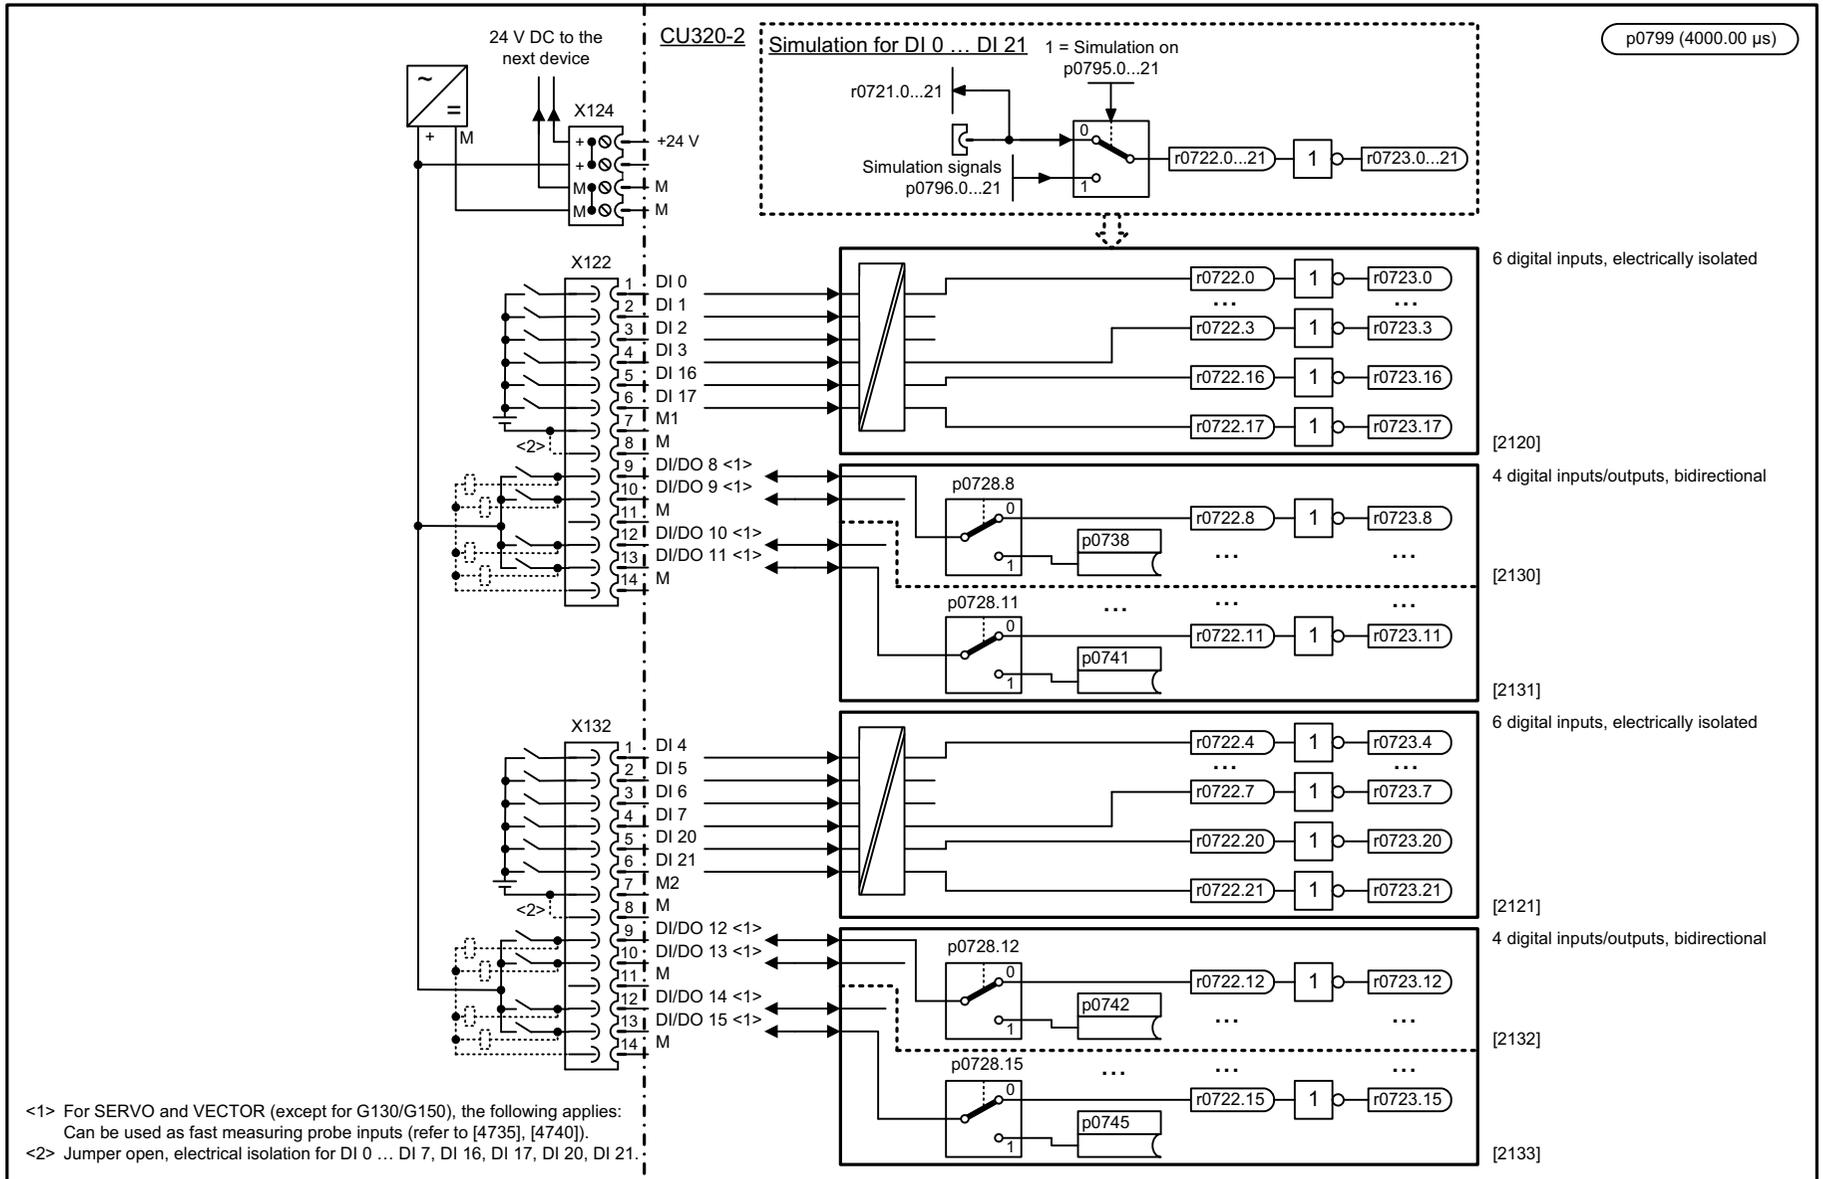

1	2	3	4	5	6	7	8
DO: CU_G, CU_MV, CU_S					fp_2119_51_eng.vsd	Function diagram	
CU320-2 input/output terminals - Overview					12.03.13 V04.08.00	SINAMICS	
							- 2119 -


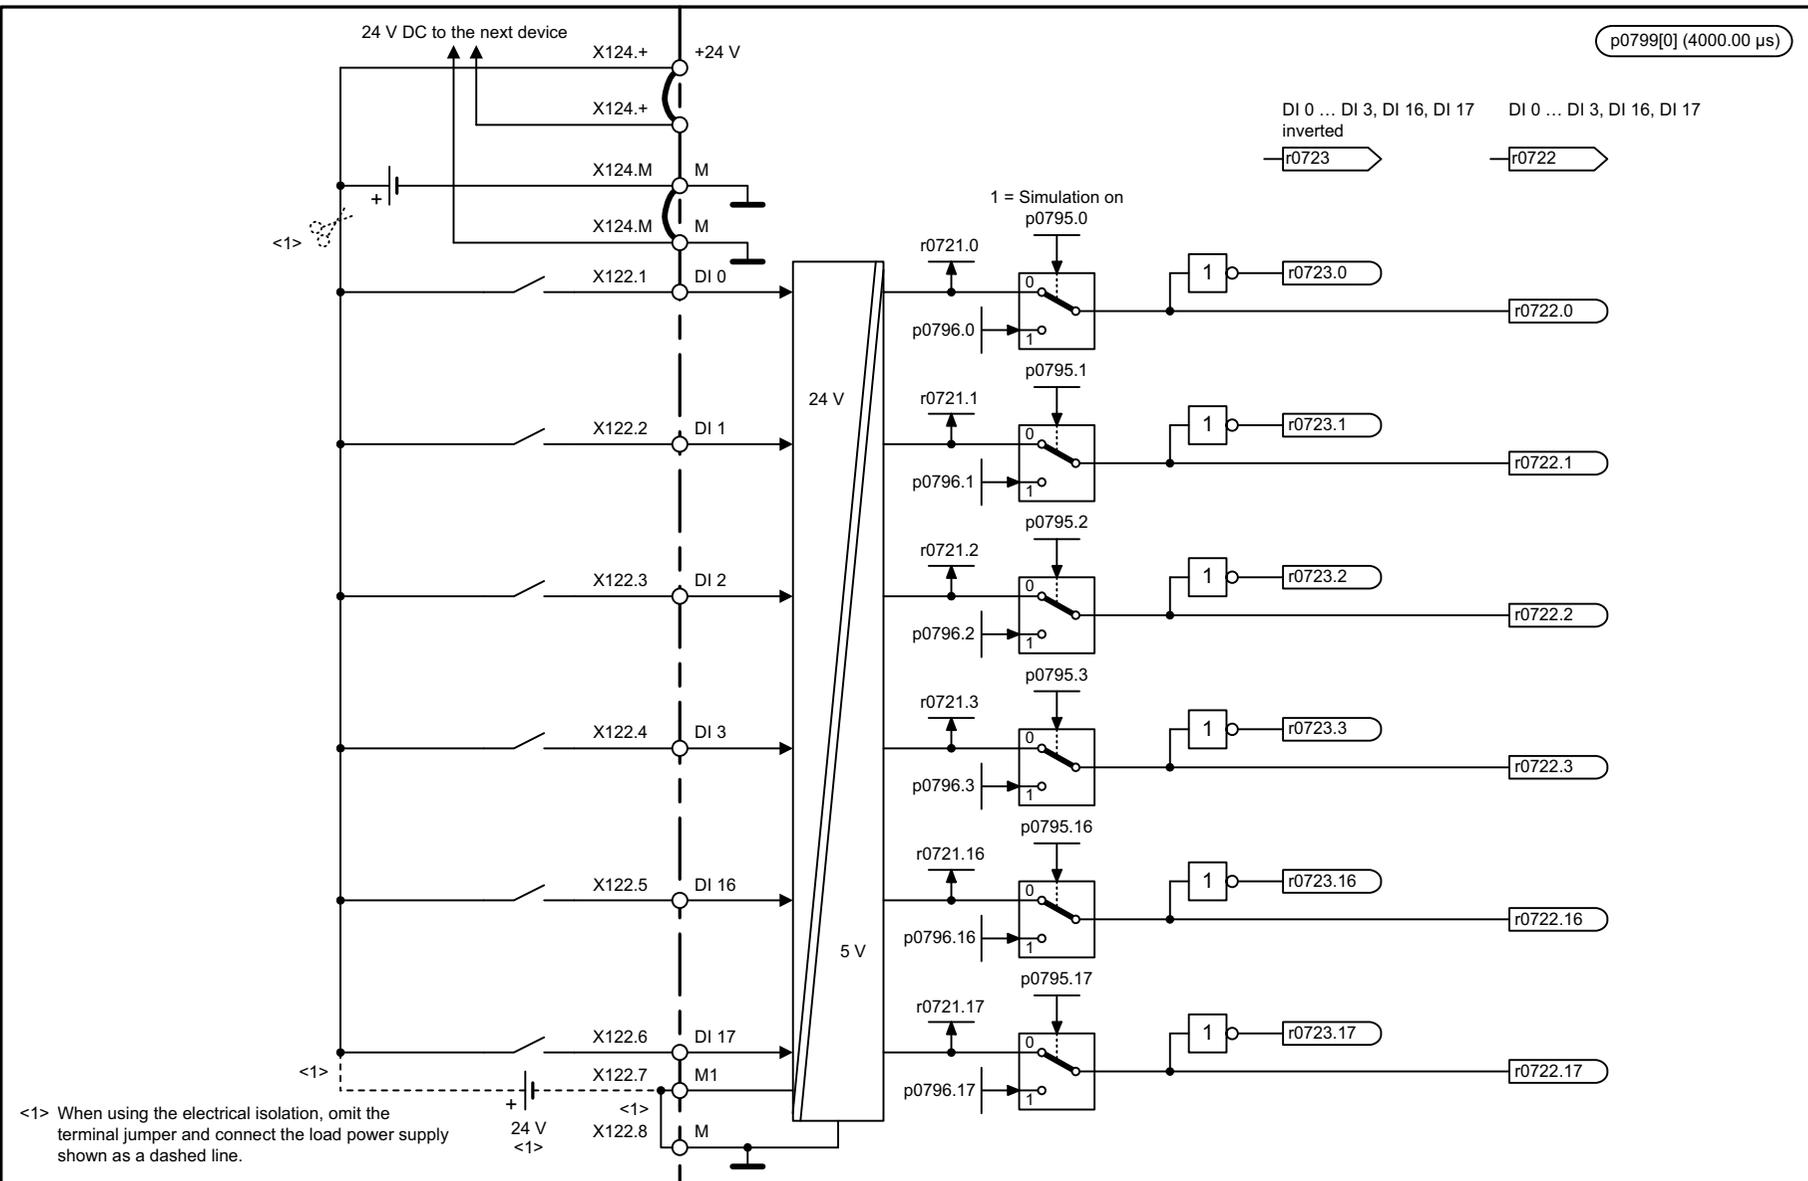



Fig. 3-6 2120 – Digital inputs, electrically isolated (DI 0 ... DI 3; DI 16, DI 17)

1	2	3	4	5	6	7	8
DO: CU_G, CU_MV, CU_S					fp_2120_51_eng.vsd	Function diagram	
CU320-2 input/output terminals - Digital inputs, electrically isolated (DI 0 ... DI 3, DI 16, DI 17)					12.07.12 V04.08.00	SINAMICS	
							- 2120 -

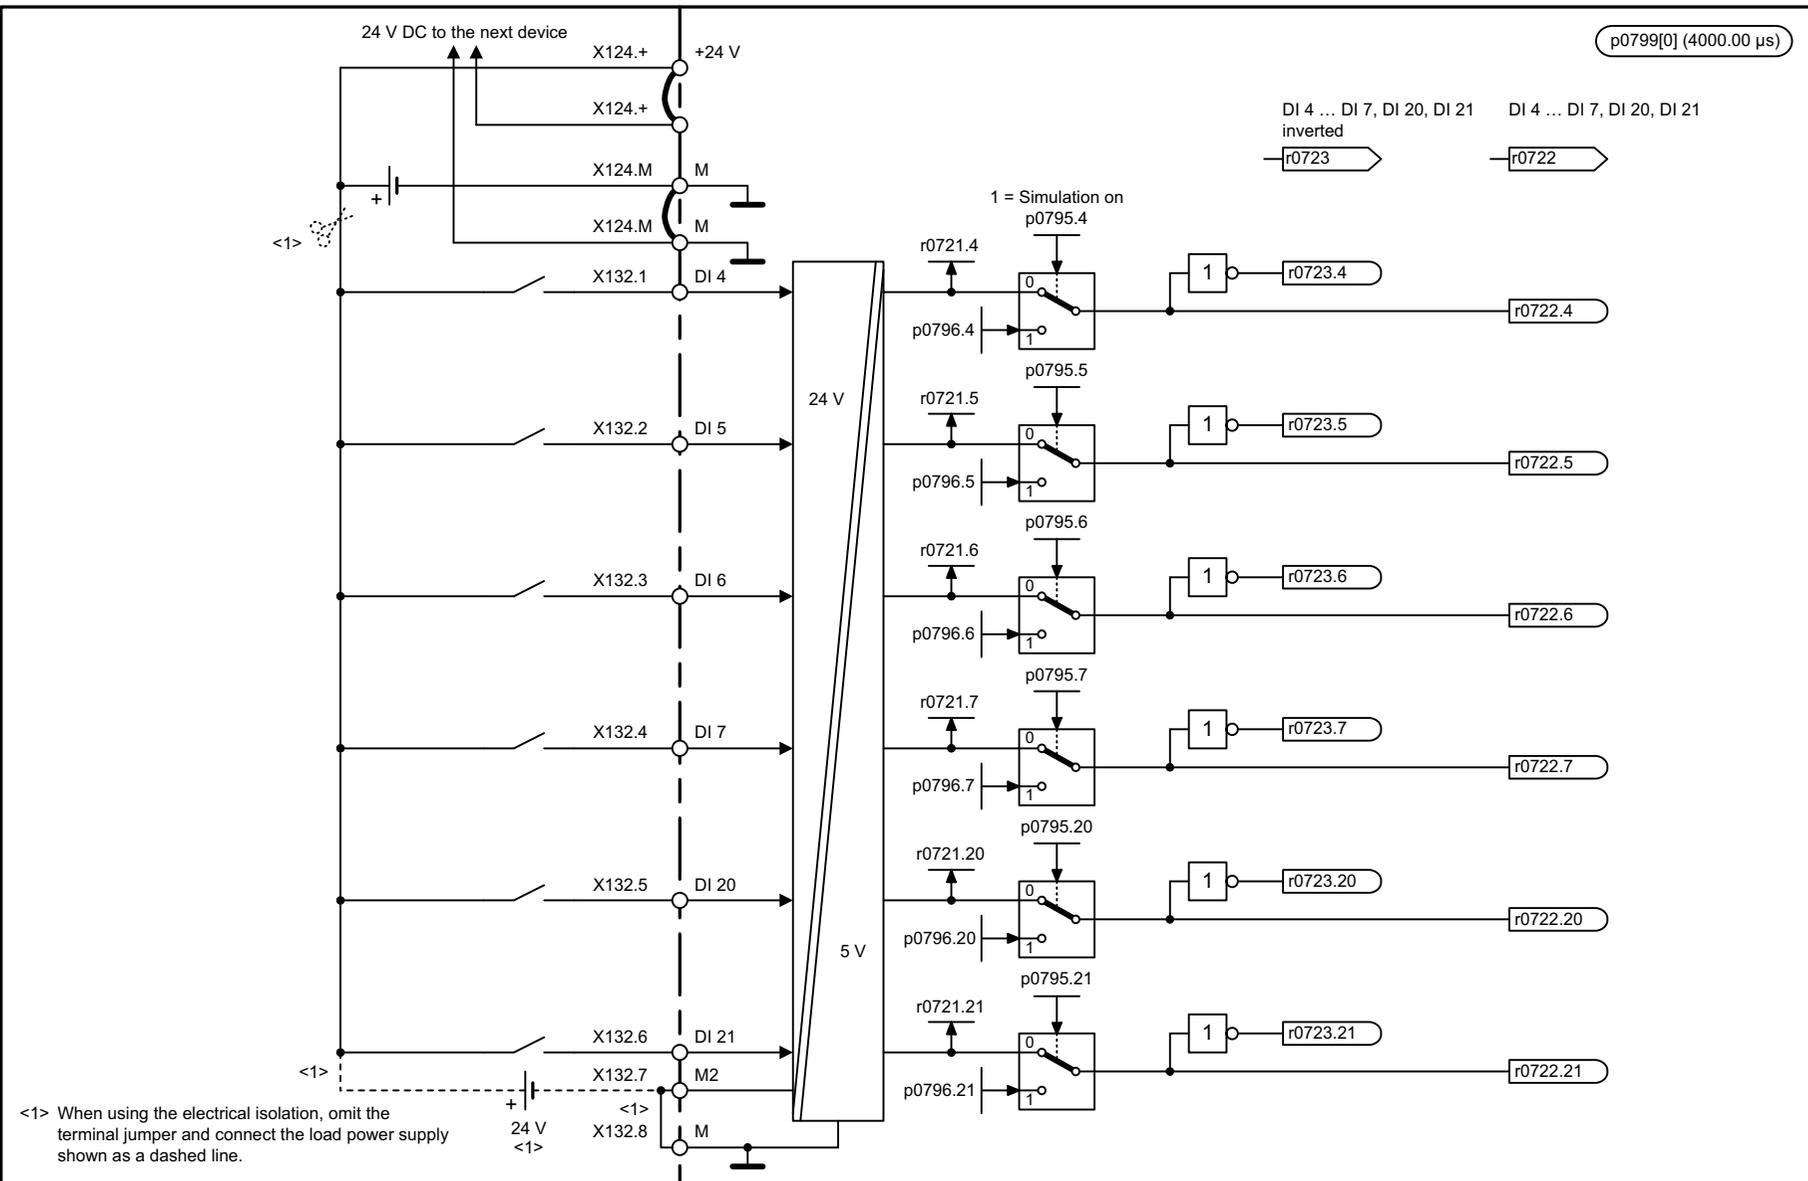

1	2	3	4	5	6	7	8
DO: CU_G, CU_MV, CU_S					fp_2121_51_eng.vsd	Function diagram	
CU320-2 input/output terminals - Digital inputs, electrically isolated (DI 4 ... DI 7, DI 20, DI 21)					12.07.12 V04.08.00	SINAMICS	
							- 2121 -

Fig. 3-7 2121 – Digital inputs, electrically isolated (DI 4 ... DI 7, DI 20, DI 21)

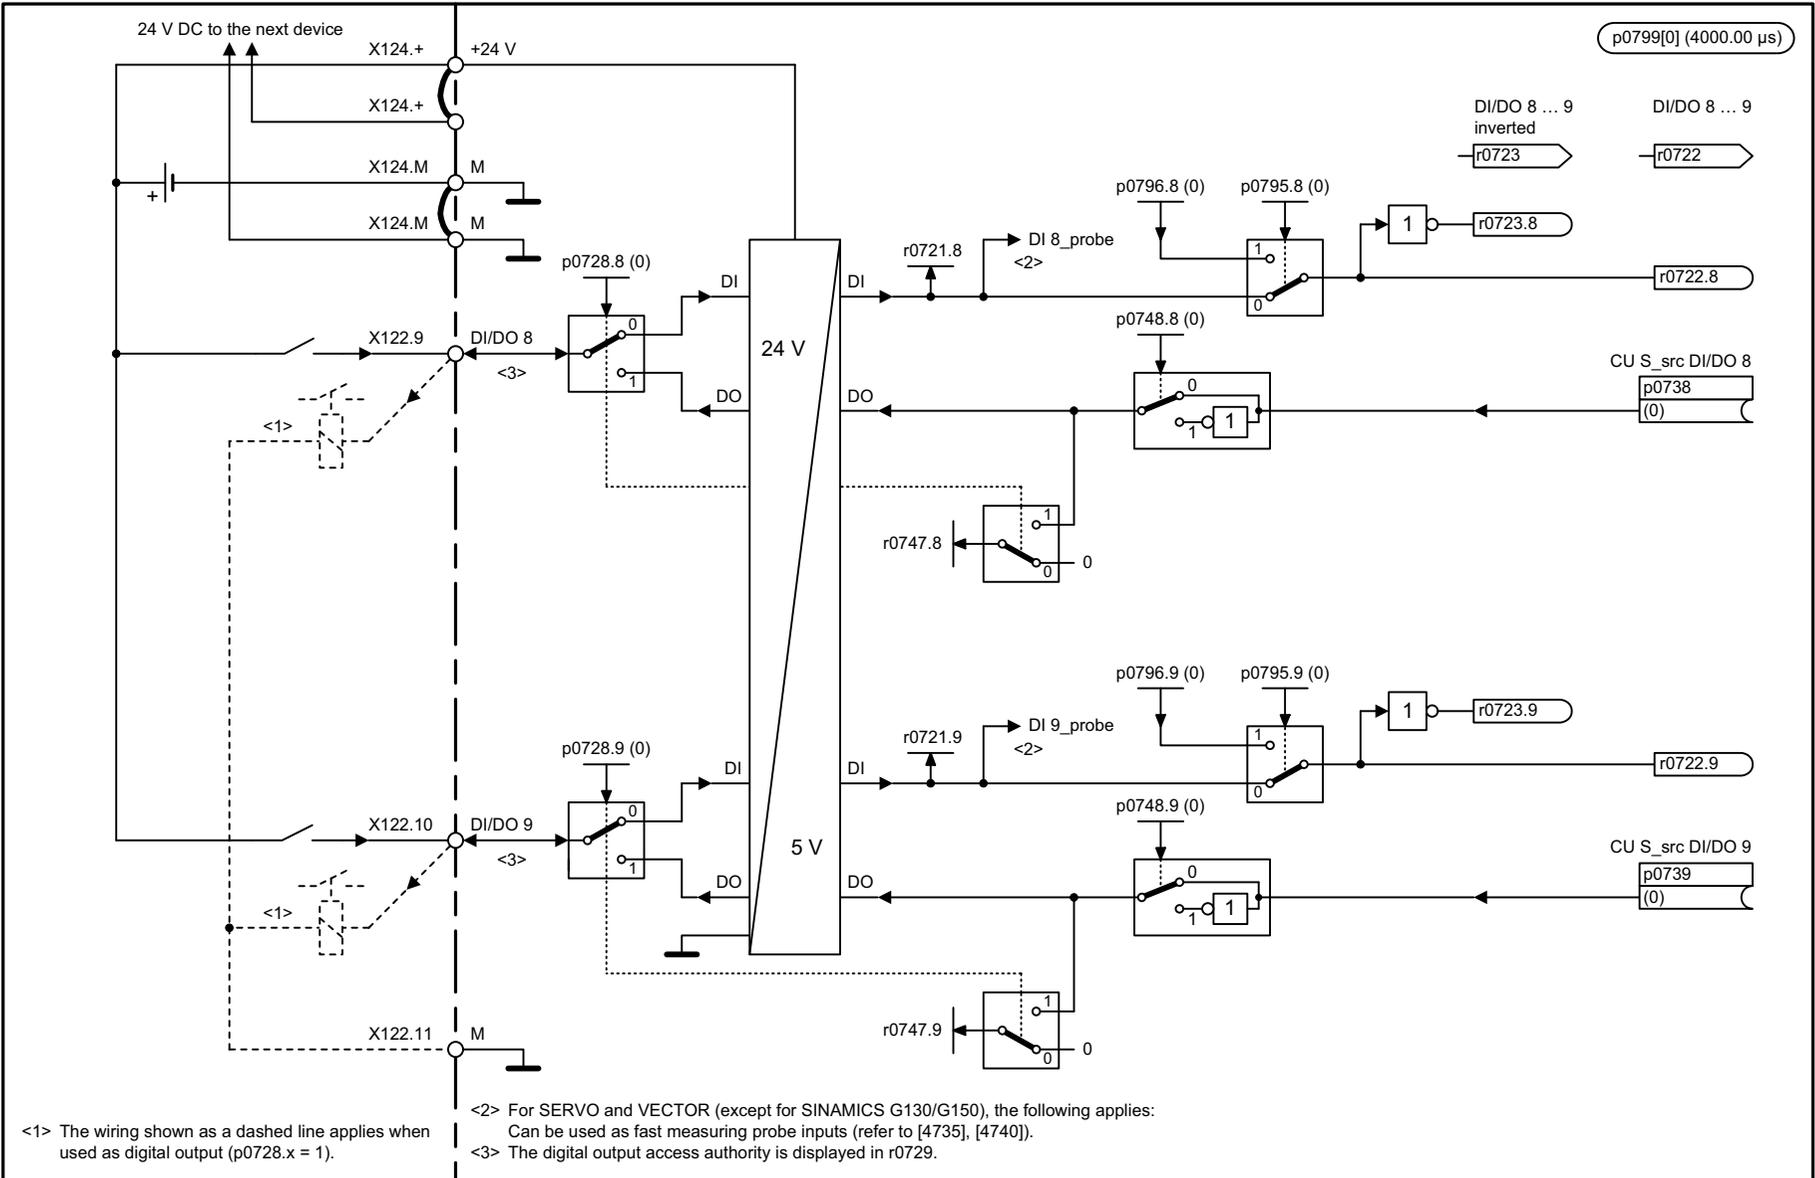

<1> The wiring shown as a dashed line applies when used as digital output (p0728.x = 1).


<2> For SERVO and VECTOR (except for SINAMICS G130/G150), the following applies:  
Can be used as fast measuring probe inputs (refer to [4735], [4740]).


<3> The digital output access authority is displayed in r0729.

1	2	3	4	5	6	7	8
DO: CU_G, CU_MV, CU_S					fp_2130_51_eng.vsd	Function diagram	
CU320-2 input/output terminals - Digital inputs/outputs, bidirectional (DI/DO 8 ... DI/DO 9)					12.07.12 V04.08.00	SINAMICS	
							<b>- 2130 -</b>

Fig. 3-8 2130 – Digital inputs/outputs, bidirectional (DI/DO 8 ... DI/DO 9)

Fig. 3-9 2131 – Digital inputs/outputs, bidirectional (DI/DO 10 ... DI/DO 11)

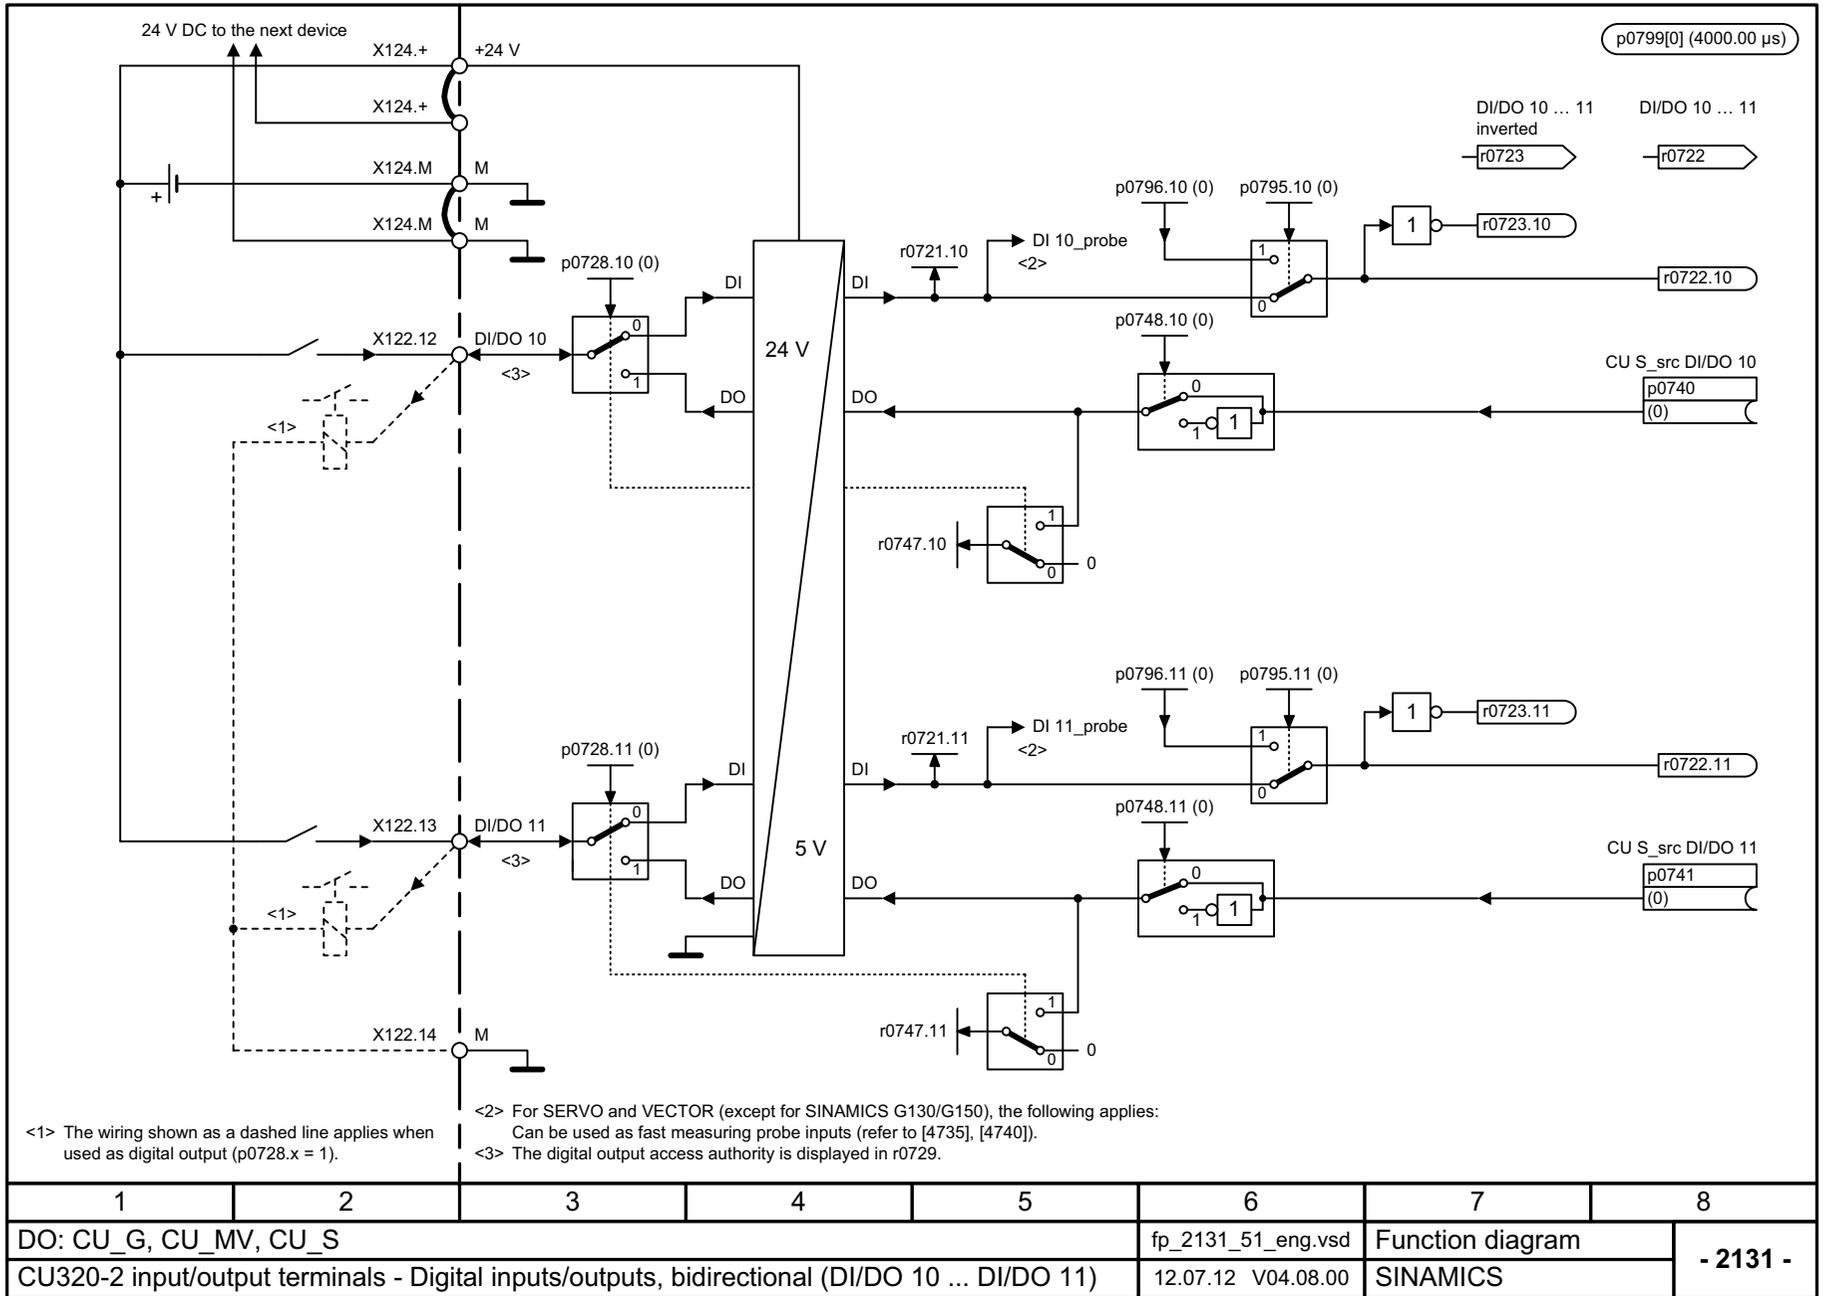

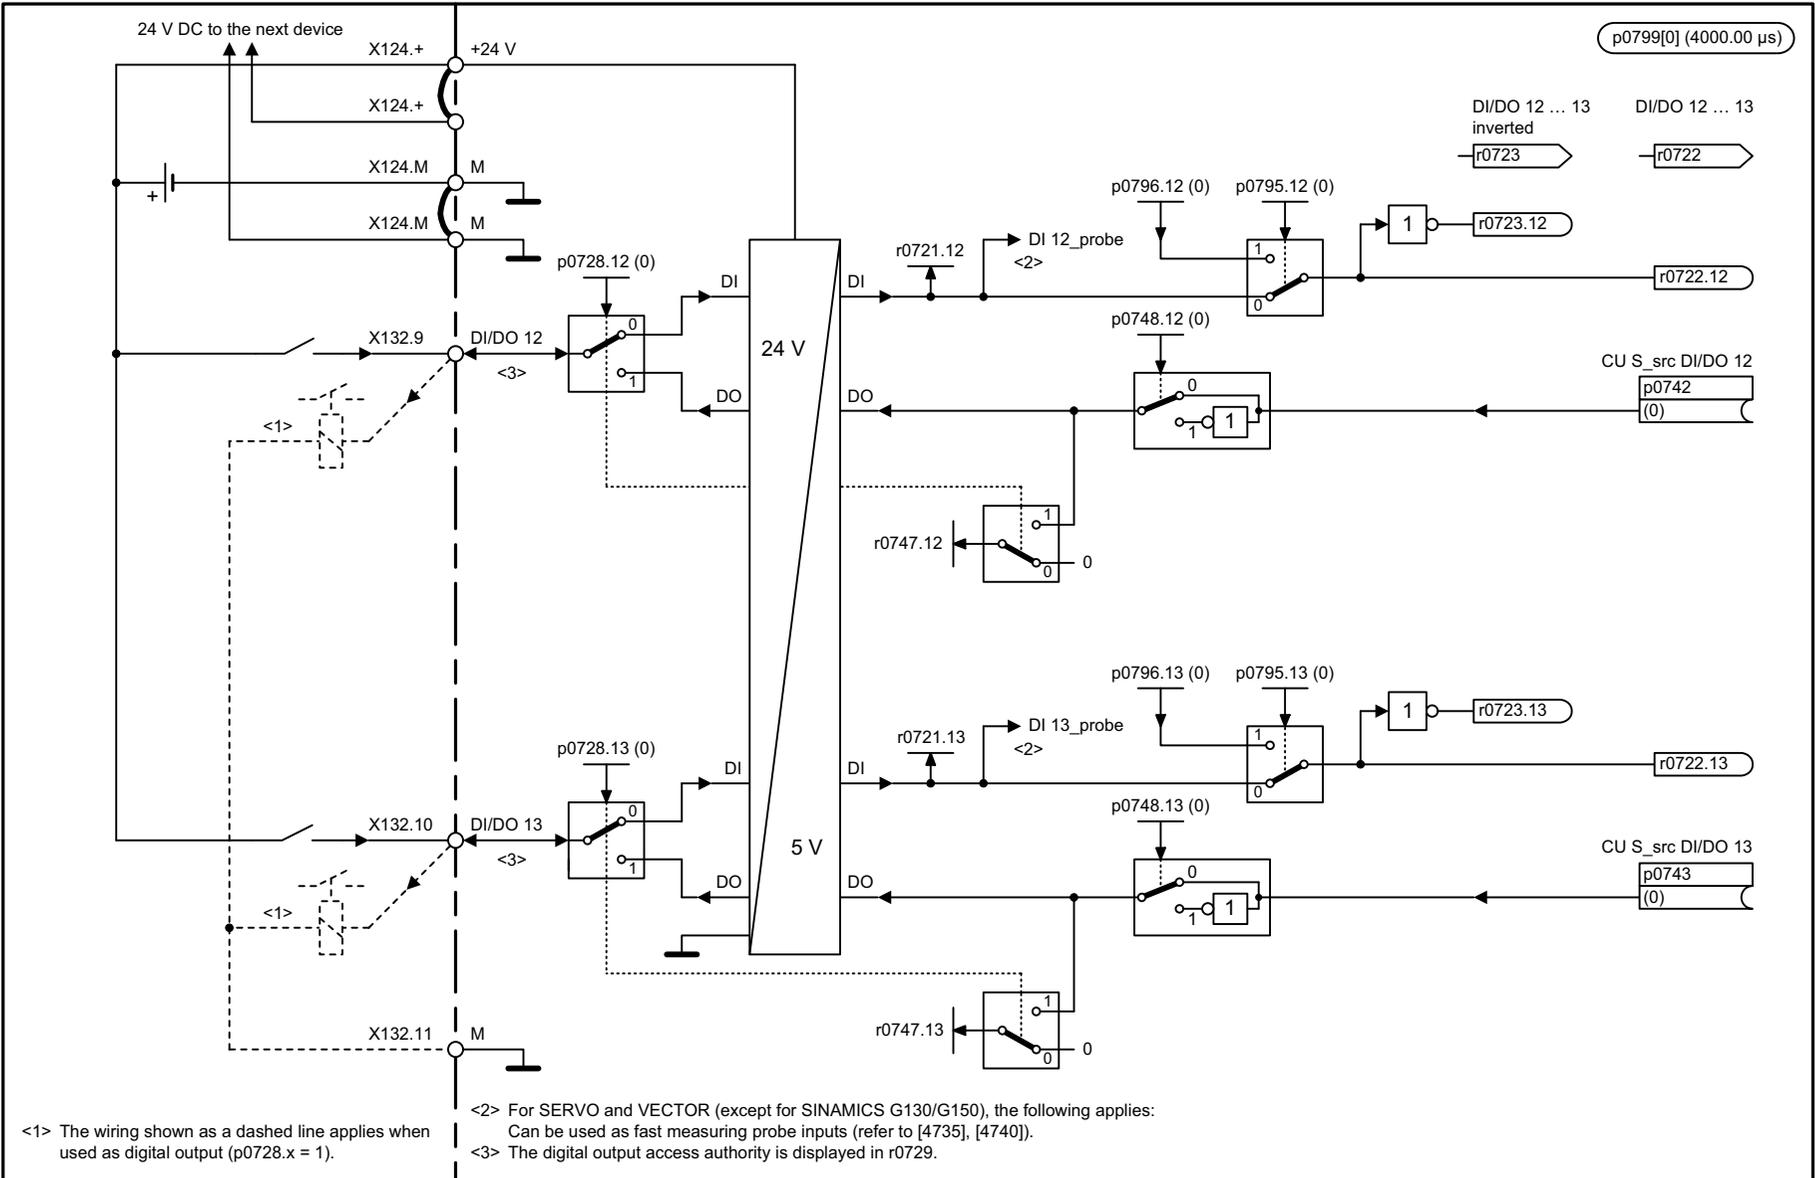

<1> The wiring shown as a dashed line applies when used as digital output (p0728.x = 1).


<2> For SERVO and VECTOR (except for SINAMICS G130/G150), the following applies:  
Can be used as fast measuring probe inputs (refer to [4735], [4740]).

<3> The digital output access authority is displayed in r0729.

1	2	3	4	5	6	7	8
DO: CU_G, CU_MV, CU_S					fp_2132_51_eng.vsd	Function diagram	
CU320-2 input/output terminals - Digital inputs/outputs, bidirectional (DI/DO 12 ... DI/DO 13)					12.07.12 V04.08.00	SINAMICS	
							- 2132 -

Fig. 3-10 2132 – Digital inputs/outputs, bidirectional (DI/DO 12 ... DI/DO 13)

Fig. 3-11 2133 – Digital inputs/outputs, bidirectional (DI/DO 14 ... DI/DO 15)

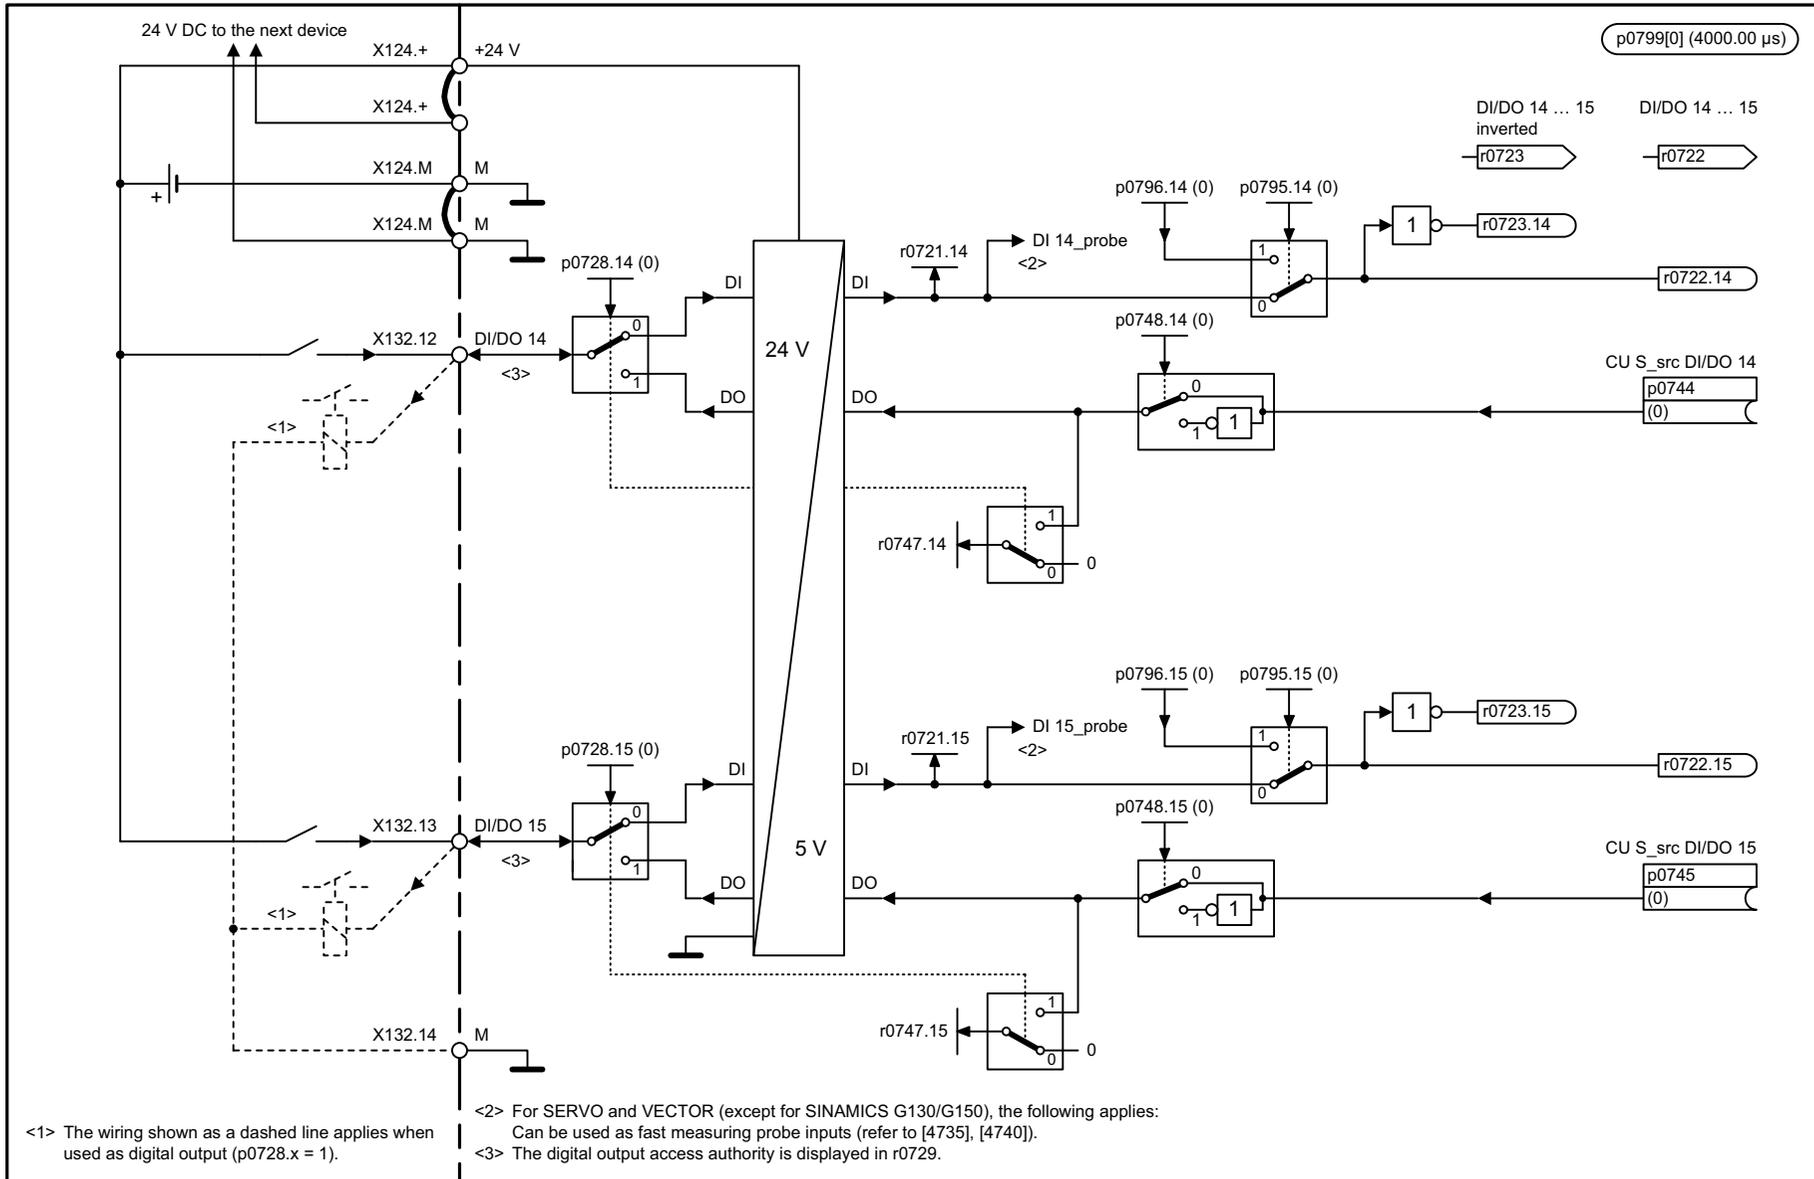

<1> The wiring shown as a dashed line applies when used as digital output (p0728.x = 1).

<2> For SERVO and VECTOR (except for SINAMICS G130/G150), the following applies:  
Can be used as fast measuring probe inputs (refer to [4735], [4740]).

<3> The digital output access authority is displayed in r0729.


1	2	3	4	5	6	7	8
DO: CU_G, CU_MV, CU_S					fp_2133_51_eng.vsd	Function diagram	
CU320-2 input/output terminals - Digital inputs/outputs, bidirectional (DI/DO 14 ... DI/DO 15)					12.07.12 V04.08.00	SINAMICS	
							- 2133 -

## 3.4 Control Unit communication

### Function diagrams

2197 – SINAMICS Link overview (r0108.31 = 1, p8835 = 3)	1115
2198 – SINAMICS Link configuration (r0108.31 = 1, p8835 = 3)	1116
2199 – SINAMICS Link receive data (r0108.31 = 1, p8835 = 3)	1117
2200 – SINAMICS Link send data (r0108.31 = 1, p8835 = 3)	1118

Fig. 3-12 2197 – SINAMICS Link overview (r0108:31 = 1, p8835 = 3)

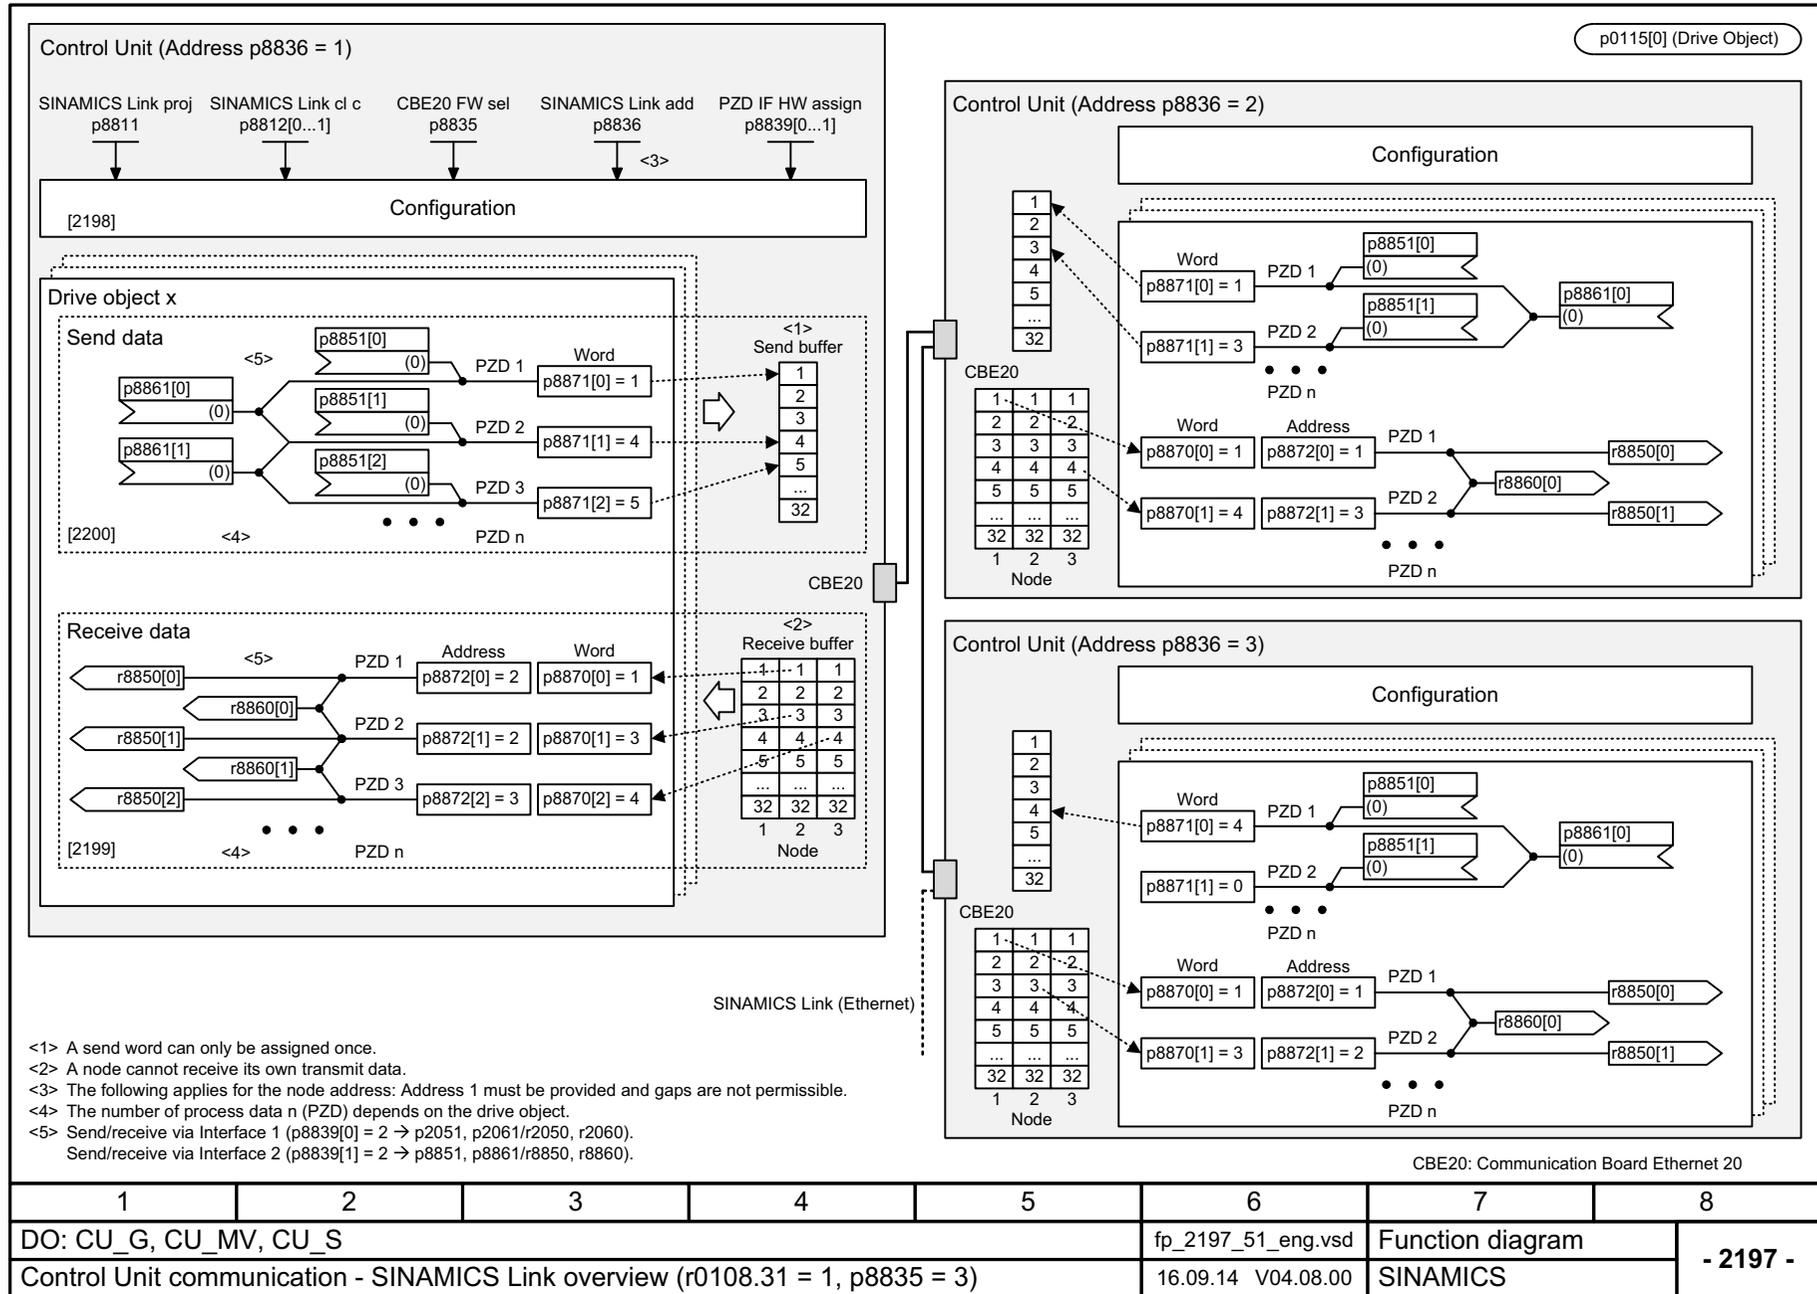



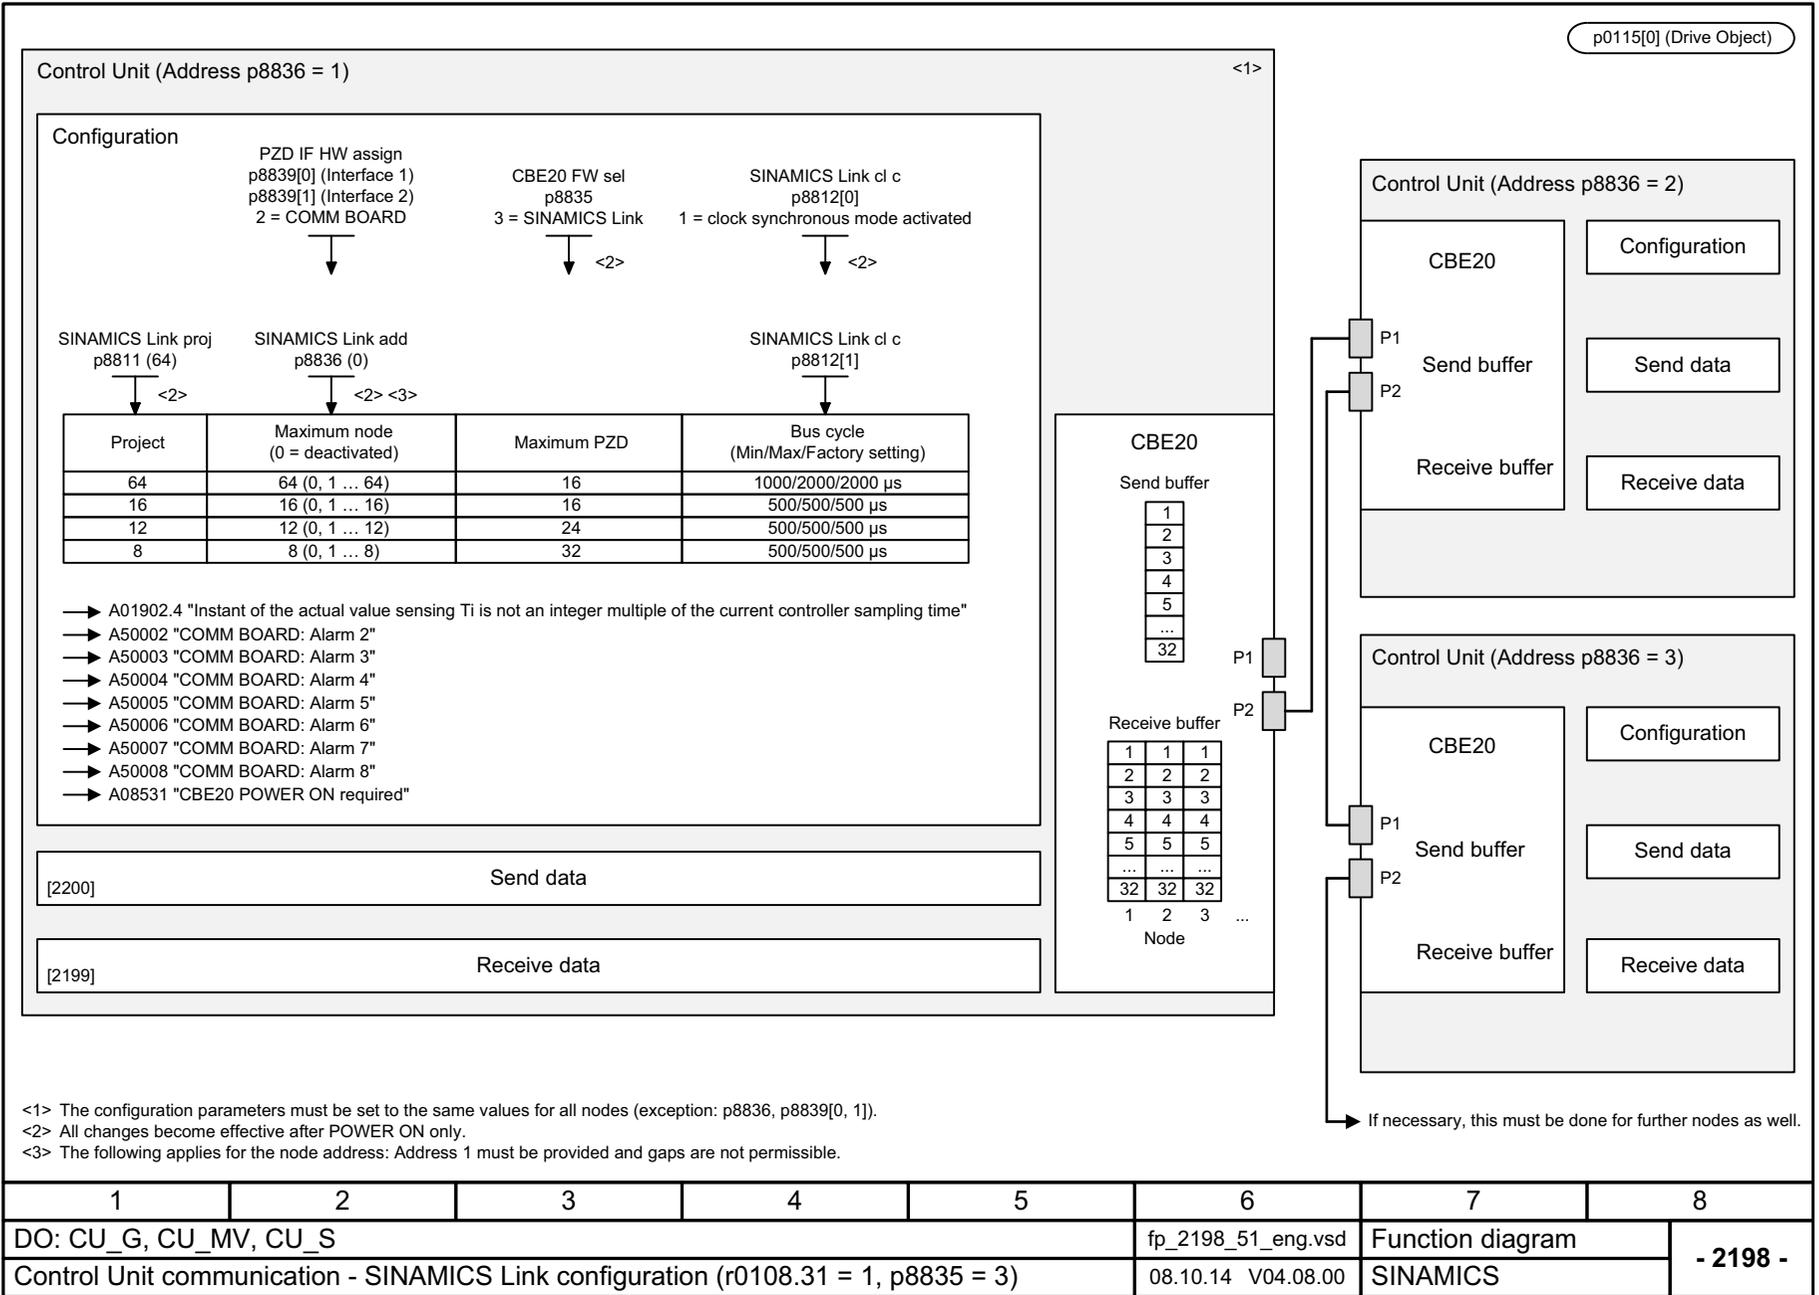


Fig. 3-13 2198 – SINAMICS Link configuration (r0108.31 = 1, p8835 = 3)

1	2	3	4	5	6	7	8
DO: CU_G, CU_MV, CU_S					fp_2198_51_eng.vsd	Function diagram	
Control Unit communication - SINAMICS Link configuration (r0108.31 = 1, p8835 = 3)					08.10.14 V04.08.00	SINAMICS	
							<b>- 2198 -</b>

Fig. 3-14 2199 – SINAMICS Link receive data (r0108.31 = 1, p8835 = 3)

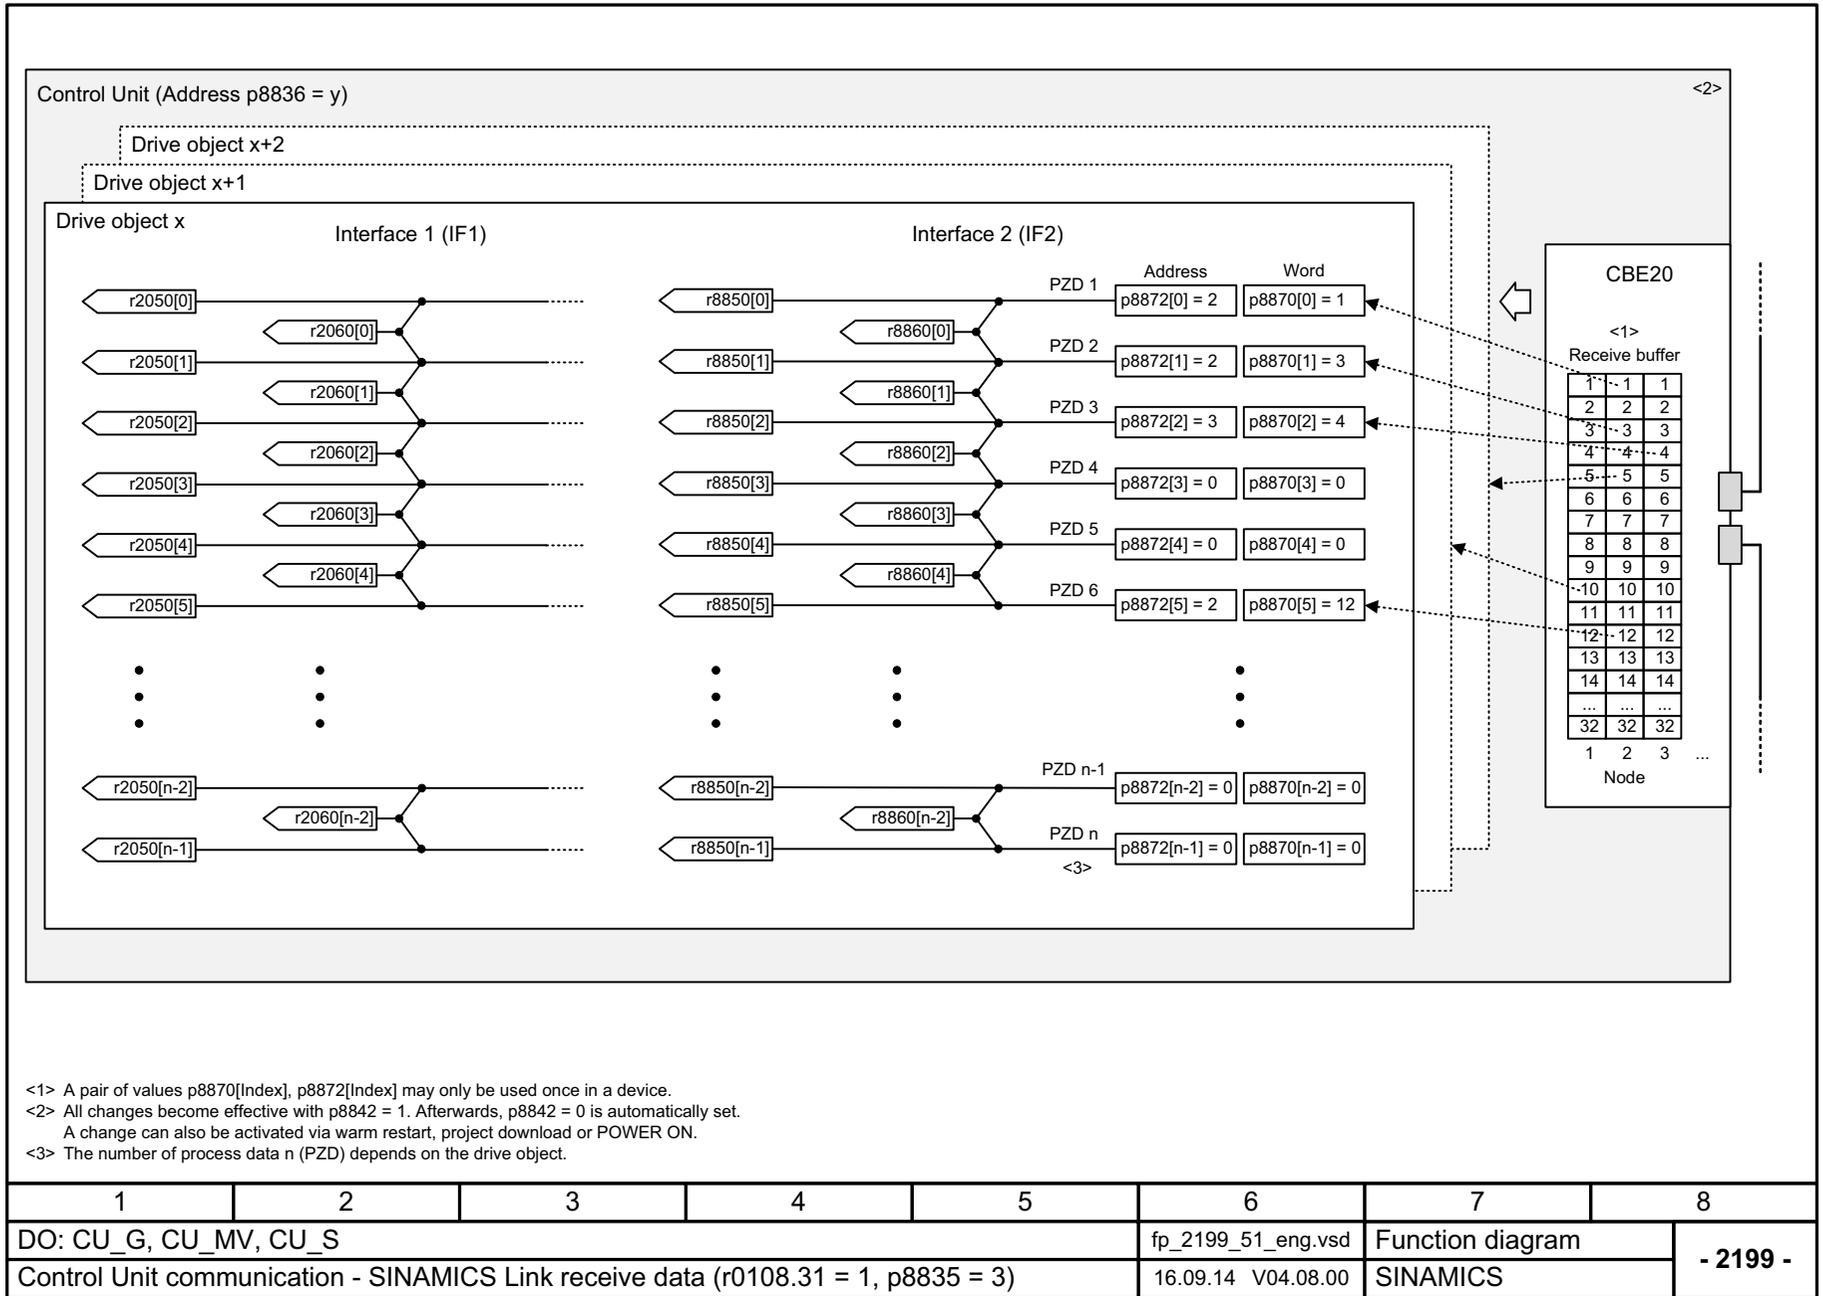

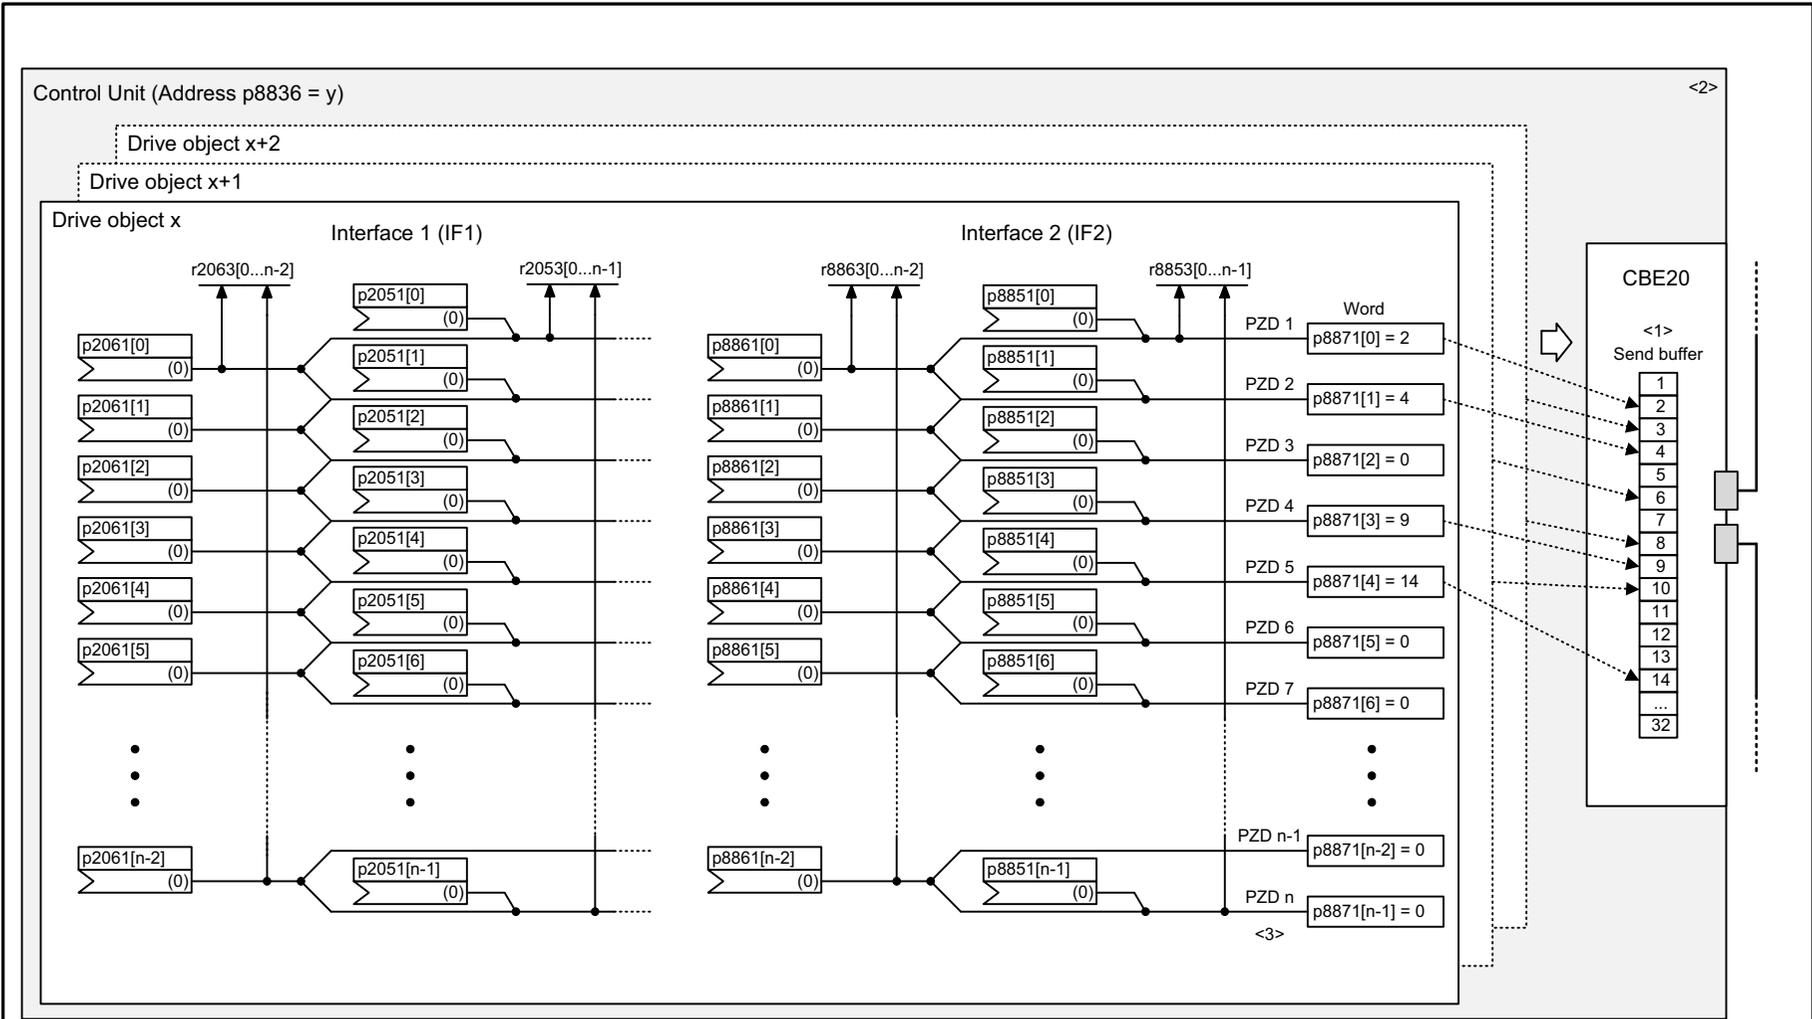

- <1> A send word can only be assigned once.
- <2> All changes become effective with p8842 = 1. Afterwards, p8842 = 0 is automatically set.  
A change can also be activated via warm restart, project download or POWER ON.
- <3> The number of process data n (PZD) depends on the drive object.

1	2	3	4	5	6	7	8
DO: CU_G, CU_MV, CU_S					fp_2200_51_eng.vsd	Function diagram	
Control Unit communication - SINAMICS Link send data (r0108.31 = 1, p8835 = 3)					16.09.14 V04.08.00	SINAMICS	

Fig. 3-15 2200 – SINAMICS Link send data (r0108.31 = 1, p8835 = 3)

## 3.5 PROIFlenergy

### Function diagrams

---

2381 – Control commands / interrogation commands	1120
2382 – States	1121

---

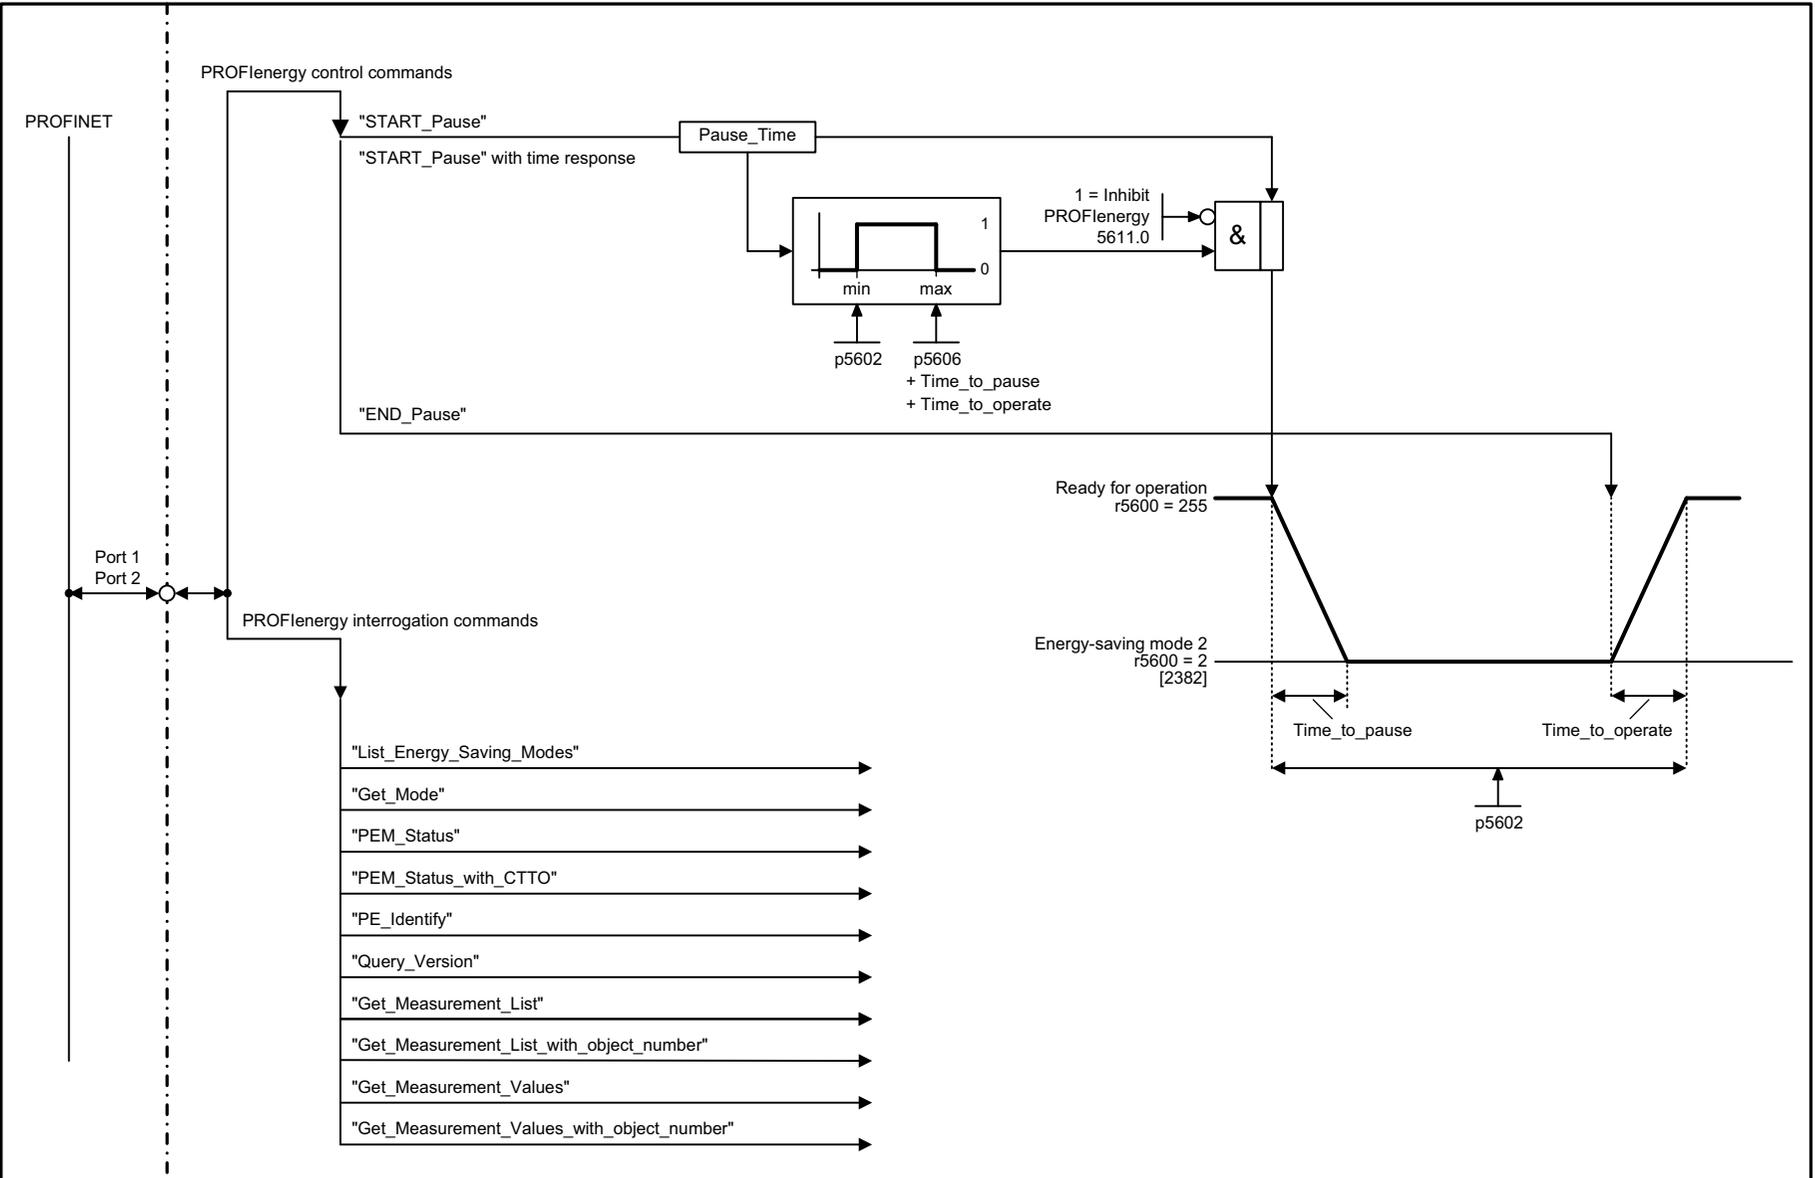


Fig. 3-16 2381 – Control commands / interrogation commands

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, SERVO, S_INF, VECTOR					fp_2381_54_eng.vsd	Function diagram	
PROFIenergy - Control commands/interrogation commands					09.04.13 V04.08.00	S120/S150/G130/G150	
<b>- 2381 -</b>							



## 3.6 PROFdrive


### Function diagrams

2401 – Overview	1124
2410 – PROFIBUS (PB) / PROFINET (PN), addresses and diagnostics	1125
2415 – Standard telegrams and process data 1	1126
2416 – Standard telegrams and process data 2	1127
2419 – Manufacturer-specific telegrams and process data 1	1128
2420 – Manufacturer-specific telegrams and process data 2	1129
2421 – Manufacturer-specific telegrams and process data 3	1130
2422 – Manufacturer-specific telegrams and process data 4	1131
2423 – Manufacturer-specific/free telegrams and process data	1132
2425 – STW1_BM control word, metal industry interconnection	1133
2426 – STW2_BM control word, metal industry interconnection	1134
2427 – E_STW1_BM control word, infeed metal industry interconnection	1135
2428 – ZSW1_BM status word, metal industry interconnection	1136
2429 – ZSW2_BM status word, metal industry interconnection	1137
2430 – E_ZSW1_BM status word, infeed metal industry interconnection	1138
2439 – PZD receive signals interconnection, profile-specific	1139
2440 – PZD receive signals interconnection, manufacturer-specific	1140
2441 – STW1 control word interconnection (p2038 = 2)	1141
2442 – STW1 control word interconnection (p2038 = 0)	1142
2444 – STW2 control word interconnection (p2038 = 0)	1143
2447 – E_STW1 control word infeed interconnection	1144
2449 – PZD send signals interconnection, profile-specific	1145
2450 – PZD send signals interconnection, manufacturer-specific	1146
2451 – ZSW1 status word interconnection (p2038 = 2)	1147
2452 – ZSW1 status word interconnection (p2038 = 0)	1148
2454 – ZSW2 status word interconnection (p2038 = 0)	1149
2457 – E_ZSW1 status word, infeed interconnection	1150
2468 – IF1 receive telegram, free interconnection via BICO (p0922 = 999)	1151

---

2470 – IF1 send telegram, free interconnection via BICO (p0922 = 999)	1152
2472 – IF1 status words, free interconnection	1153
2481 – IF1 receive telegram, free interconnection via BICO (p0922 = 999)	1154
2483 – IF1 send telegram, free interconnection via BICO (p0922 = 999)	1155
2485 – IF2 receive telegram, free interconnection	1156
2487 – IF2 send telegram, free interconnection	1157
2489 – IF2 status words, free interconnection	1158
2491 – IF2 receive telegram, free interconnection	1159
2493 – IF2 send telegram, free interconnection	1160
2495 – CU_STW1 control word 1, Control Unit interconnection	1161
2496 – CU_ZSW1 status word 1, Control Unit interconnection	1162
2497 – A_DIGITAL interconnection	1163
2498 – E_DIGITAL interconnection	1164
2499 – A_DIGITAL_1 interconnection	1165
2500 – E_DIGITAL_1 interconnection	1166


---

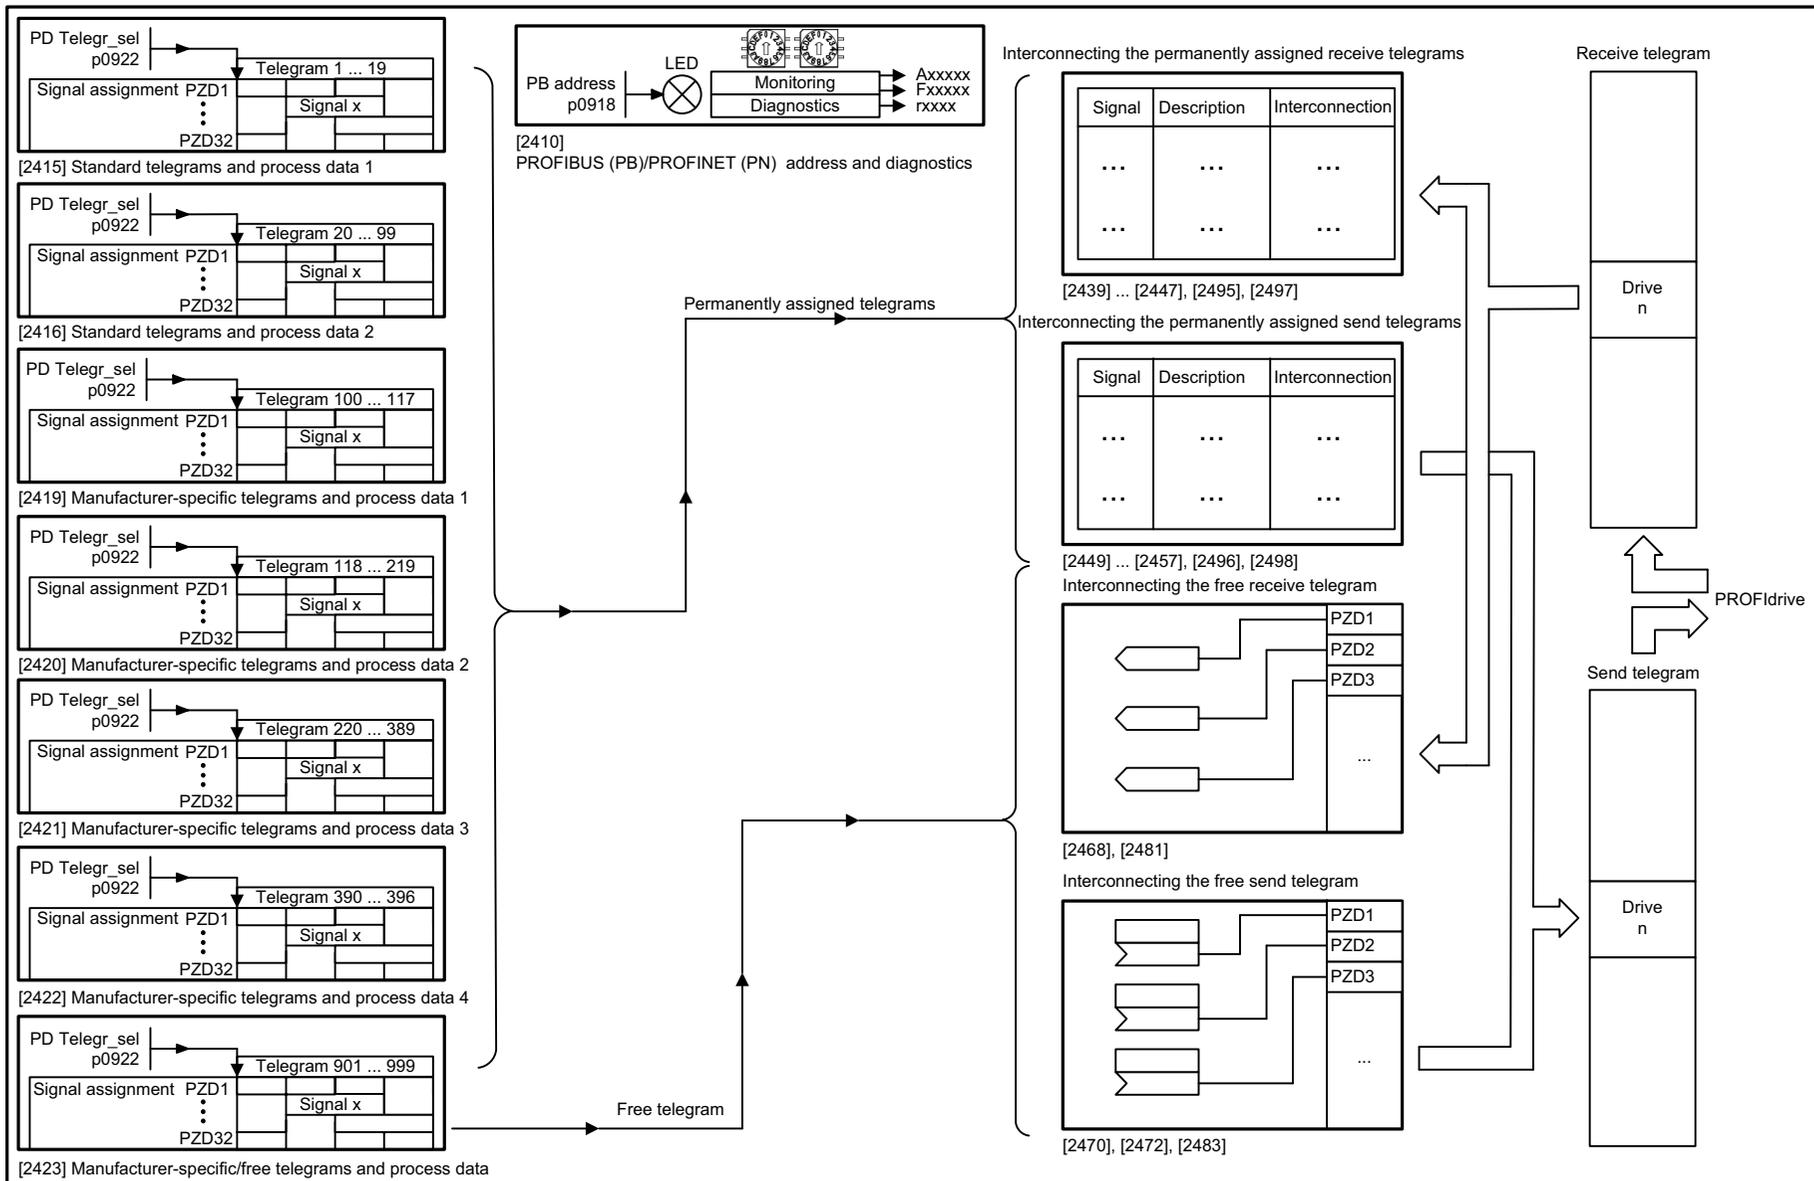

1	2	3	4	5	6	7	8
DO: All objects					fp_2401_54_eng.vsd	Function diagram	
PROFdrive - Overview					12.03.13 V04.08.00	S120/S150/G130/G150	
<b>- 2401 -</b>							

Fig. 3-18 2401 – Overview


Fig. 3-19 2410 – PROFIBUS (PB) / PROFINET (PN), addresses and diagnostics

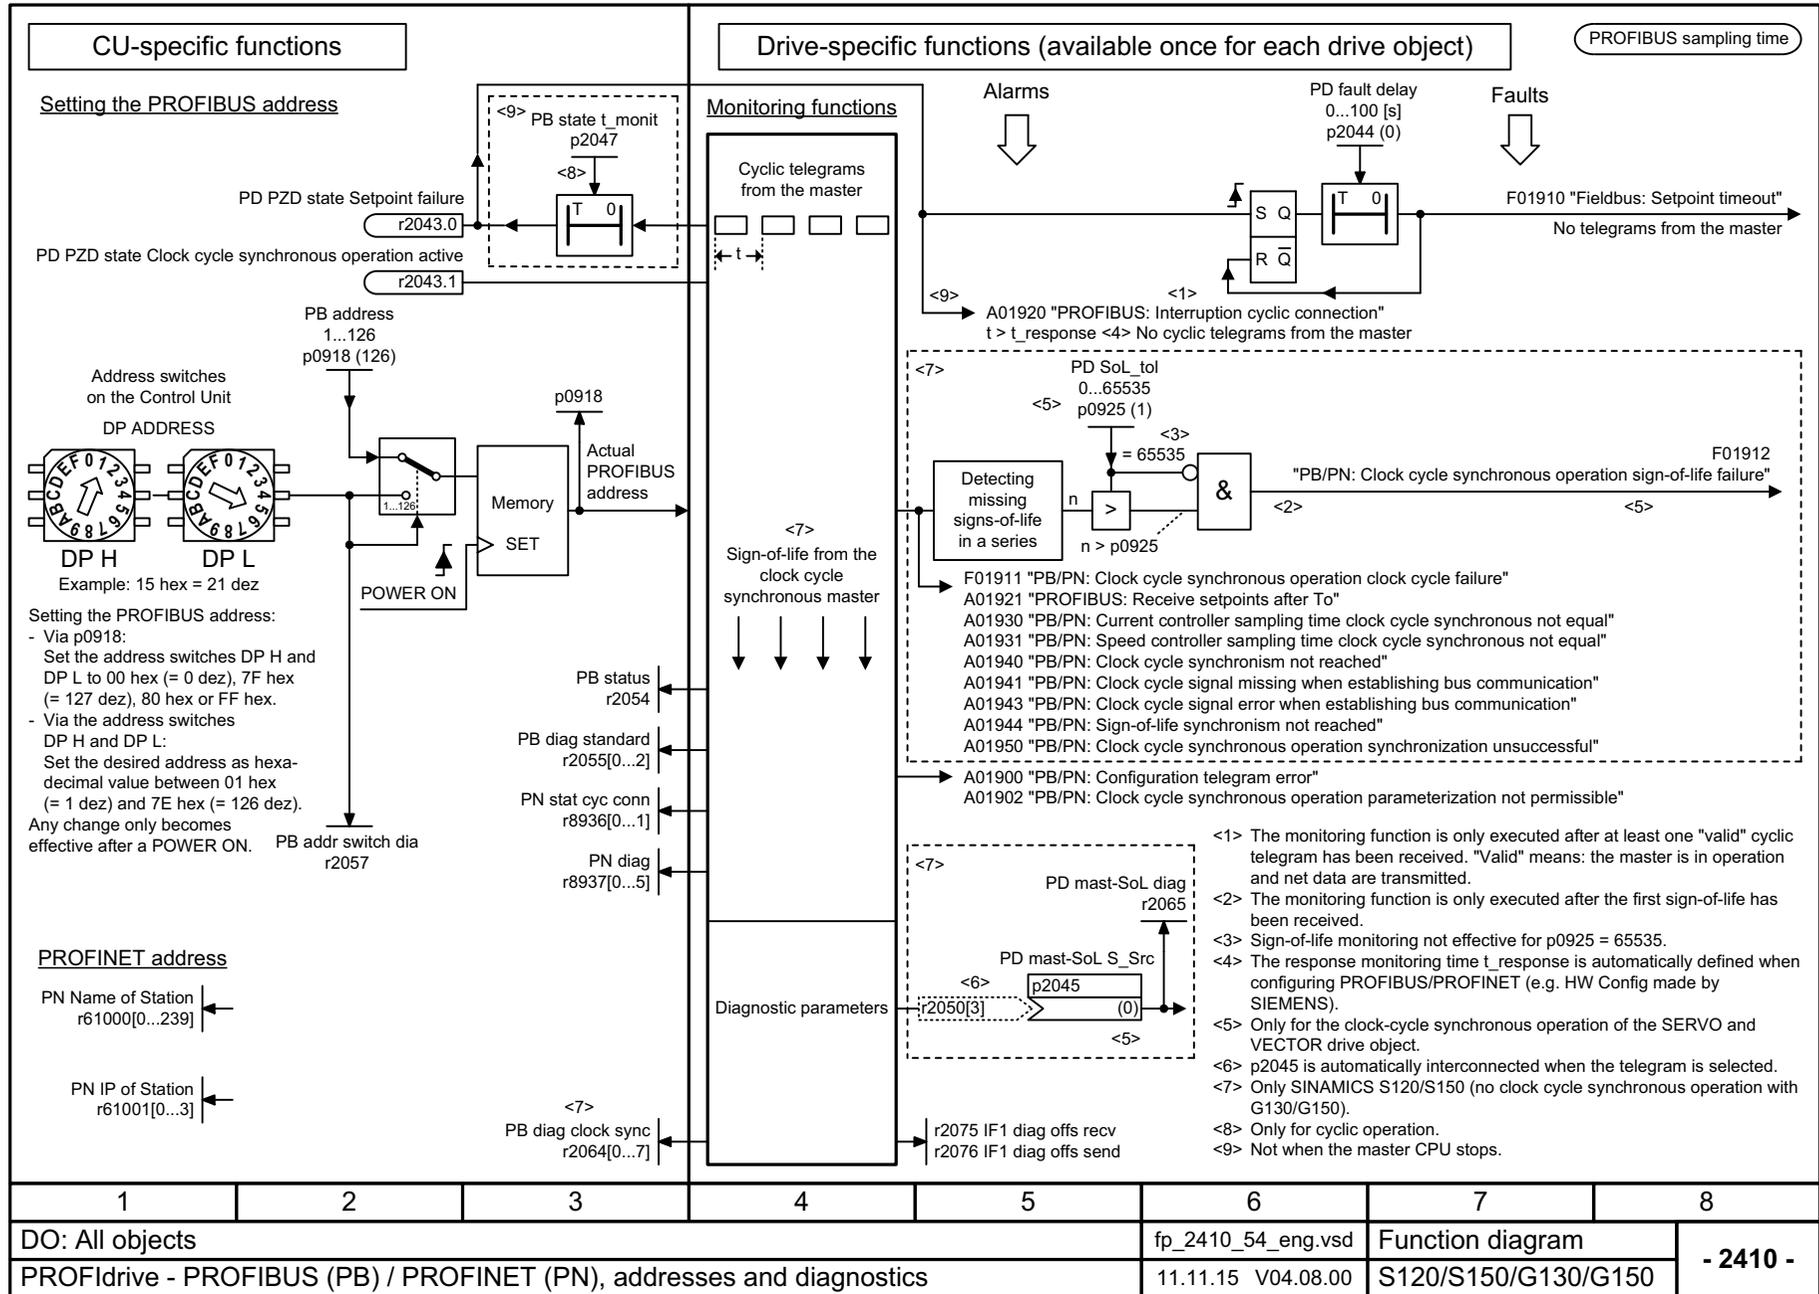

1	2	3	4	5	6	7	8
DO: All objects					fp_2410_54_eng.vsd	Function diagram	
PROFIdrive - PROFIBUS (PB) / PROFINET (PN), addresses and diagnostics					11.11.15 V04.08.00	S120/S150/G130/G150	
							- 2410 -

Interconnection is made according to																
Telegram	1		2		3		4		5		6		7		9	
Appl. class	1		1		1, 4		1, 4		4 DSC		4 DSC		3		3	
PZD1	STW1	ZSW1	STW1	ZSW1	STW1	ZSW1	STW1	ZSW1	STW1	ZSW1	STW1	ZSW1	STW1	ZSW1	STW1	ZSW1
PZD2	NSOLL_A	NIST_A	NSOLL_B	NIST_B	NSOLL_B	NIST_B	NSOLL_B	NIST_B	NSOLL_B	NIST_B	NSOLL_B	NIST_B	SATZANW	AKTSATZ	SATZANW	AKTSATZ
PZD3															STW2	ZSW2
PZD4			STW2	ZSW2	STW2	ZSW2	STW2	ZSW2	STW2	ZSW2	STW2	ZSW2				
PZD5					G1_STW	G1_ZSW	G1_STW	G1_ZSW	G1_STW	G1_ZSW	G1_STW	G1_ZSW			MDI_TARPOS	XIST_A
PZD6							G2_STW				G2_STW				MDI_VELOCITY	
PZD7						G1_XIST1		G1_XIST1	XERR	G1_XIST1		G1_XIST1			MDI_ACC	
PZD8						G1_XIST2		G1_XIST2	KPC	G1_XIST2		G1_XIST2			MDI_DEC	
PZD9											KPC				MDI_MOD	
PZD10								G2_ZSW				G2_ZSW				
PZD11								G2_XIST1				G2_XIST1				
PZD12								G2_XIST2				G2_XIST2				
PZD13																
PZD14																
PZD15																
PZD16																
PZD17																
PZD18																
PZD19																
PZD20																
PZD21																
PZD22																
PZD23																
PZD24																
PZD25																
PZD26																
PZD27																
PZD28																
PZD29																
PZD30																
PZD31																
PZD32																


<1> Depending on the drive object, only specific telegrams can be used. Not suitable for sensorless vector control.  
 <2> If p0922 = 999 is changed to another value, the telegram is automatically assigned as specified in [2415] to [2423].  
 If p0922 ≠ 999 is changed to p0922 = 999, the "old" telegram assignment is maintained as specified in [2415] to [2423].  
 <3> The maximum number of PZD words depends on the drive object type.  
 <4> Only for SINAMICS S120/S150.

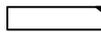 = Position encoder signal

1	2	3	4	5	6	7	8
DO: ENC, SERVO, VECTOR					fp_2415_54_eng.vsd	Function diagram	
PROFIdrive - Standard telegrams and process data 1					06.03.14 V04.08.00	S120/S150/G130/G150	

Fig. 3-20 2415 – Standard telegrams and process data 1


Fig. 3-21 2416 – Standard telegrams and process data 2

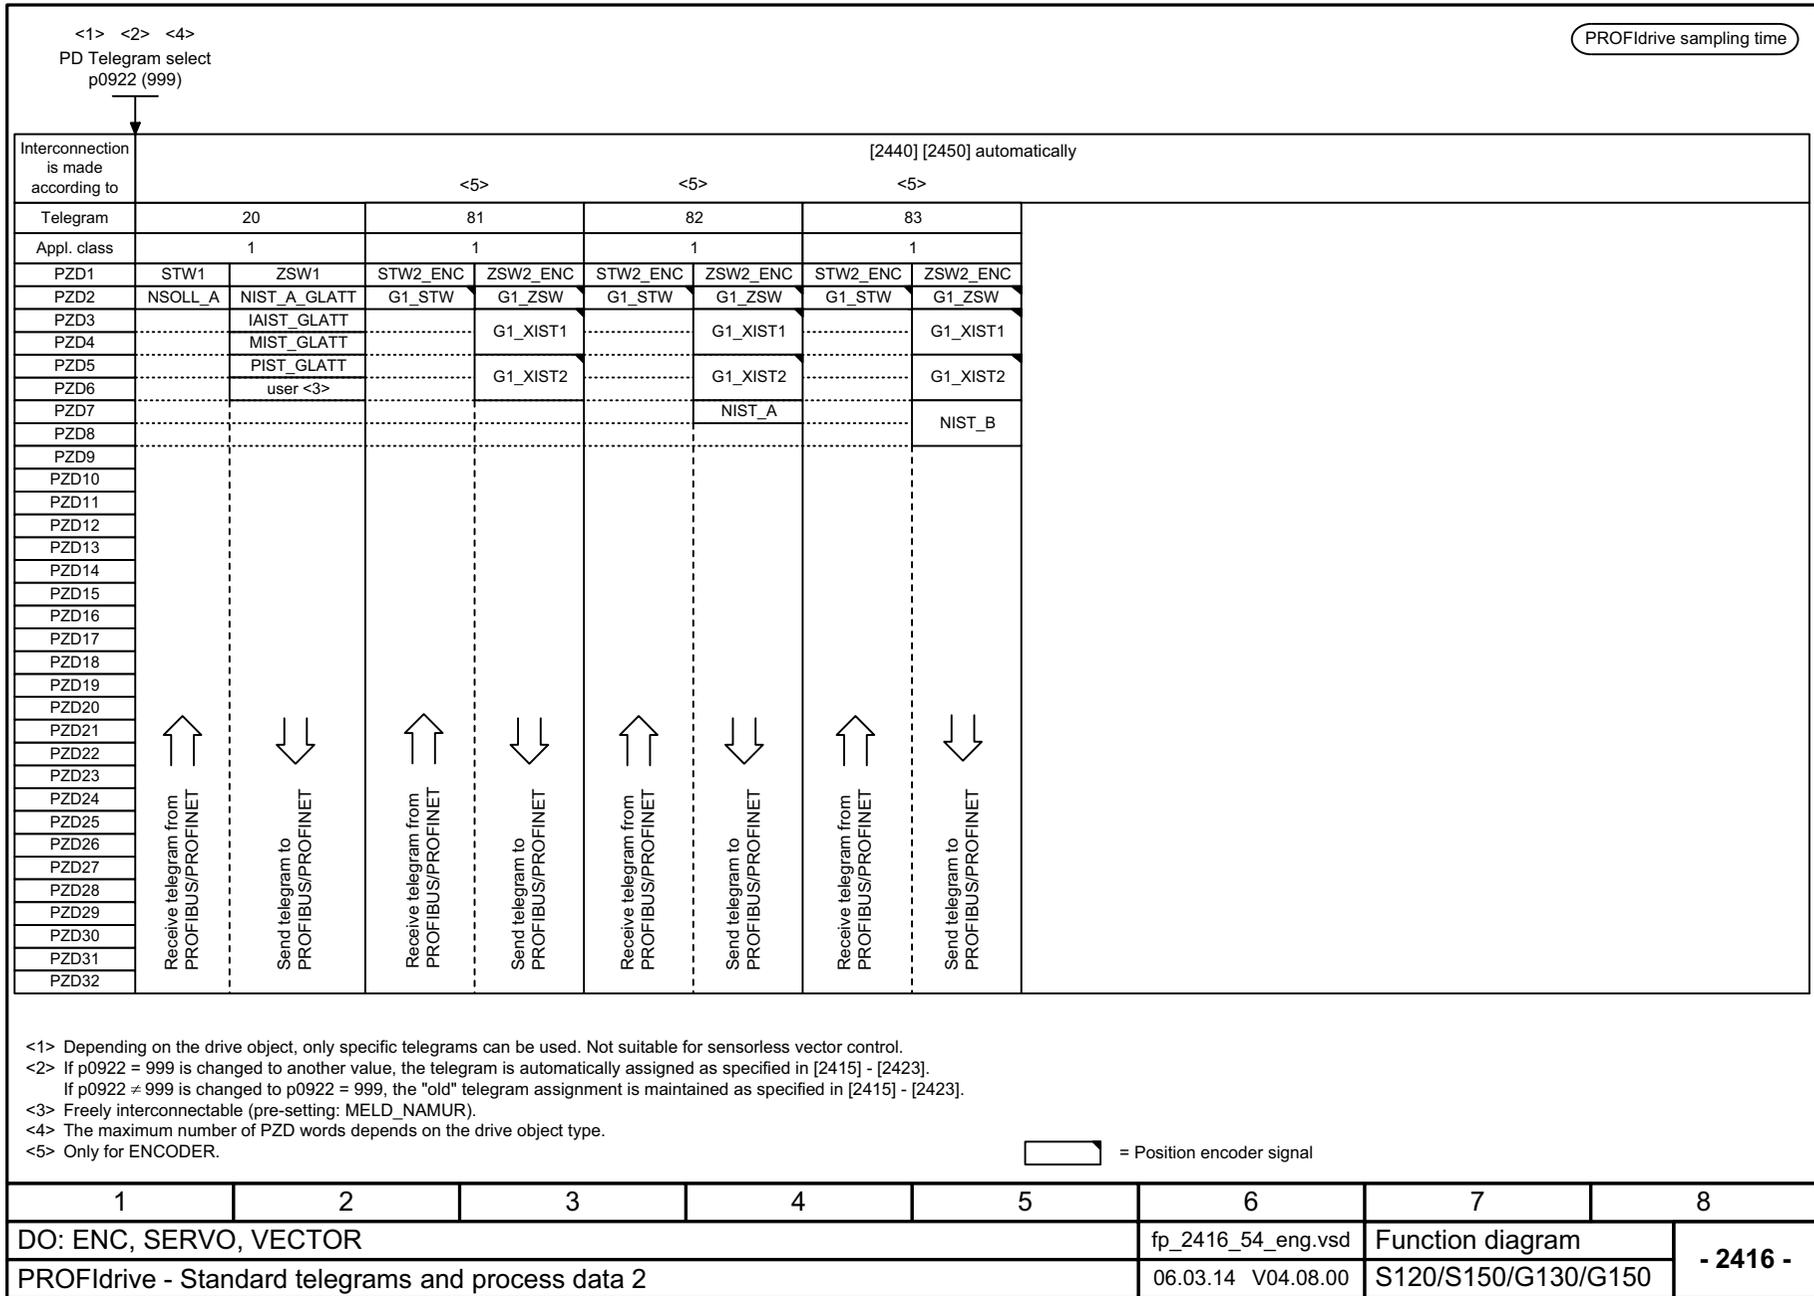

PROFdrive sampling time

Interconnection is made according to		[2440] [2450] automatically												
Telegram	<5>	<5>	<5>	<5>	<5>	<5>	<5>	<5>	<5>	<5>	<5>	<5>	<5>	
Appl. class	1, 4	1, 4	4 DSC	4 DSC	3	3	4 DSC	4 DSC	3	3	4 DSC	4 DSC	4 DSC	
PZD1	STW1	ZSW1												
PZD2	NSOLL_B	NIST_B	NSOLL_B	NIST_B	NSOLL_B	NIST_B	NSOLL_B	NIST_B	SATZANW	AKTSATZ	POS_STW1	POS_ZSW1	NSOLL_B	NIST_B
PZD3									POS_STW	POS_ZSW	POS_STW2	POS_ZSW2		
PZD4	STW2	ZSW2												
PZD5	MOMRED	MELDW	MOMRED	MELDW	MOMRED	MELDW	MOMRED	MELDW	VERRIDE	MELDW	VERRIDE	MELDW	MOMRED	MELDW
PZD6	G1_STW	G1_ZSW	G1_STW	G1_ZSW	G1_STW	G1_ZSW	G1_STW	G1_ZSW	MDI_TAR	XIST_A	MDI_TAR	XIST_A	G1_STW	G1_ZSW
PZD7		G2_STW		G1_XIST1	XERR	G1_XIST1	G2_STW		POS				G2_STW	G1_XIST1
PZD8		G1_XIST1						G1_XIST1	MDI_VELO		MDI_VELO			G1_XIST1
PZD9				G1_XIST2	KPC	G1_XIST2	XERR		CITY		CITY		NIST_B	XERR
PZD10							KPC	G1_XIST2						G1_XIST2
PZD11								G2_ZSW	MDI_ACC		MDI_ACC		FAULT_CODE	KPC
PZD12									MDI_DEC		MDI_DEC		WARN_CODE	
PZD13								G2_XIST1	MDI_MODE				user <3>	user <3>
PZD14														G2_XIST1
PZD15								G2_XIST2						G2_XIST2
PZD16														AIST_GLATT
PZD17														MSOLL_GLATT
PZD18														PIST_GLATT
PZD19														ITIST_GLATT
PZD20														
PZD21	↑	↓	↑	↓	↑	↓	↑	↓	↑	↓	↑	↓	↑	↓
PZD22	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET
PZD23														
PZD24														
PZD25														
PZD26														
PZD27														
PZD28														
PZD29														
PZD30														
PZD31														
PZD32														

<1> Depending on the drive object, only specific telegrams can be used.  
 <2> If p0922 = 999 is changed to another value, the telegram is automatically assigned as specified in [2415] - [2423].  
 If p0922 ≠ 999 is changed to p0922 = 999, the "old" telegram assignment is maintained as specified in [2415] - [2423]!  
 <3> Can be freely connected.  
 <4> The maximum number of PZD words depends on the drive object type.  
 <5> Only for SINAMICS S120/S150.

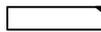 = Position encoder signal

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2419_54_eng.vsd	Function diagram	
PROFdrive - Manufacturer-specific telegrams and process data 1					06.03.14 V04.08.00	S120/S150/G130/G150	
							<b>- 2419 -</b>

Fig. 3-22 2419 – Manufacturer-specific telegrams and process data 1

Fig. 3-23 2420 – Manufacturer-specific telegrams and process data 2

PROFdrive sampling time														
[2440] [2450] automatically														
Interconnection is made according to	<3>		<3>		<3>		<7>		<6>					
Telegram	118		125		126		136		138		139		166	
Appl. class	4 DSC													
PZD1	STW1	ZSW1												
PZD2	NSOLL_B	NIST_B												
PZD3														
PZD4	STW2	ZSW2												
PZD5	MOMRED	MELDW												
PZD6	G2_STW	G2_ZSW	G1_STW	G1_ZSW	G1_STW	G1_ZSW	G2_STW	G1_ZSW	G2_STW	G2_ZSW	G1_STW	G1_ZSW	G1_STW	G1_ZSW
PZD7	G3_STW	G2_XIST1	XERR	G1_XIST1	G2_STW	G1_XIST1	G3_STW	G1_XIST1	G3_STW	G2_XIST1	res	G1_XIST1	G2_STW	G1_XIST1
PZD8	XERR				XERR									
PZD9		G2_XIST2	KPC	G1_XIST2		G1_XIST2		G1_XIST2		G2_XIST2		G1_XIST2		G1_XIST2
PZD10	KPC				KPC									
PZD11		G3_ZSW	M_VST			G2_ZSW		G2_ZSW		G3_ZSW		SP_ZSW		G2_ZSW
PZD12		G3_XIST1	DSC_STW <5>		M_VST	G2_XIST1	M_VST	G3_XIST1	M_VST	G2_XIST1	M_VST	SP_XIST_A	G1_MP	G2_XIST1
PZD13			res		DSC_STW <5>		DSC_STW <5>		DSC_STW <5>		DSC_STW <5>		SP_XIST_D	
PZD14		G3_XIST2	T_SYMM <5>		res	G2_XIST2	res	G3_XIST2	res	G2_XIST2	res	SP_KONFIG	G1_MP_ZSW	G2_XIST2
PZD15					T_SYMM <5>		T_SYMM <5>		T_SYMM <5>		T_SYMM <5>		res	
PZD16		AIST_GLATT						AIST_GLATT		AIST_GLATT		AIST_GLATT		VA_VALVELIFT
PZD17		MSOLL_GLATT						MSOLL_GLATT		MSOLL_GLATT		MSOLL_GLATT		VA_TORQUE
PZD18		PIST_GLATT						PIST_GLATT		PIST_GLATT		PIST_GLATT		VA_POWER
PZD19		ITIST_GLATT						ITIST_GLATT		ITIST_GLATT		ITIST_GLATT		VA_PRESSURE_A
PZD20														VA_PRESSURE_B
PZD21														
PZD22														
PZD23														
PZD24														
PZD25														
PZD26														
PZD27														
PZD28														
PZD29														
PZD30														
PZD31														
PZD32														
	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET
<p>&lt;1&gt; Depending on the drive object, only specific telegrams can be used.                  &lt;2&gt; If p0922 = 999 is changed to another value, the telegram is automatically assigned as specified in [2415] - [2423].                  If p0922 ≠ 999 is changed to p0922 = 999, the "old" telegram assignment is maintained as specified in [2415] - [2423].                  &lt;3&gt; Only for SINAMICS S120/S150.                  &lt;4&gt; The maximum number of PZD words depends on the drive object type.                  &lt;5&gt; Only if the "DSC with Spline" function module is active (r0108.6 = 1).                  &lt;6&gt; Only if the "Spindle diagnostics" function module is active (r0108.11 = 1).                  &lt;7&gt; Only for SINAMICS S120.</p>														
= Position encoder signal														
DO: SERVO, VECTOR									fp_2420_54_eng.vsd			Function diagram		
PROFdrive - Manufacturer-specific telegrams and process data 2									06.03.14 V04.08.00			S120/S150/G130/G150		

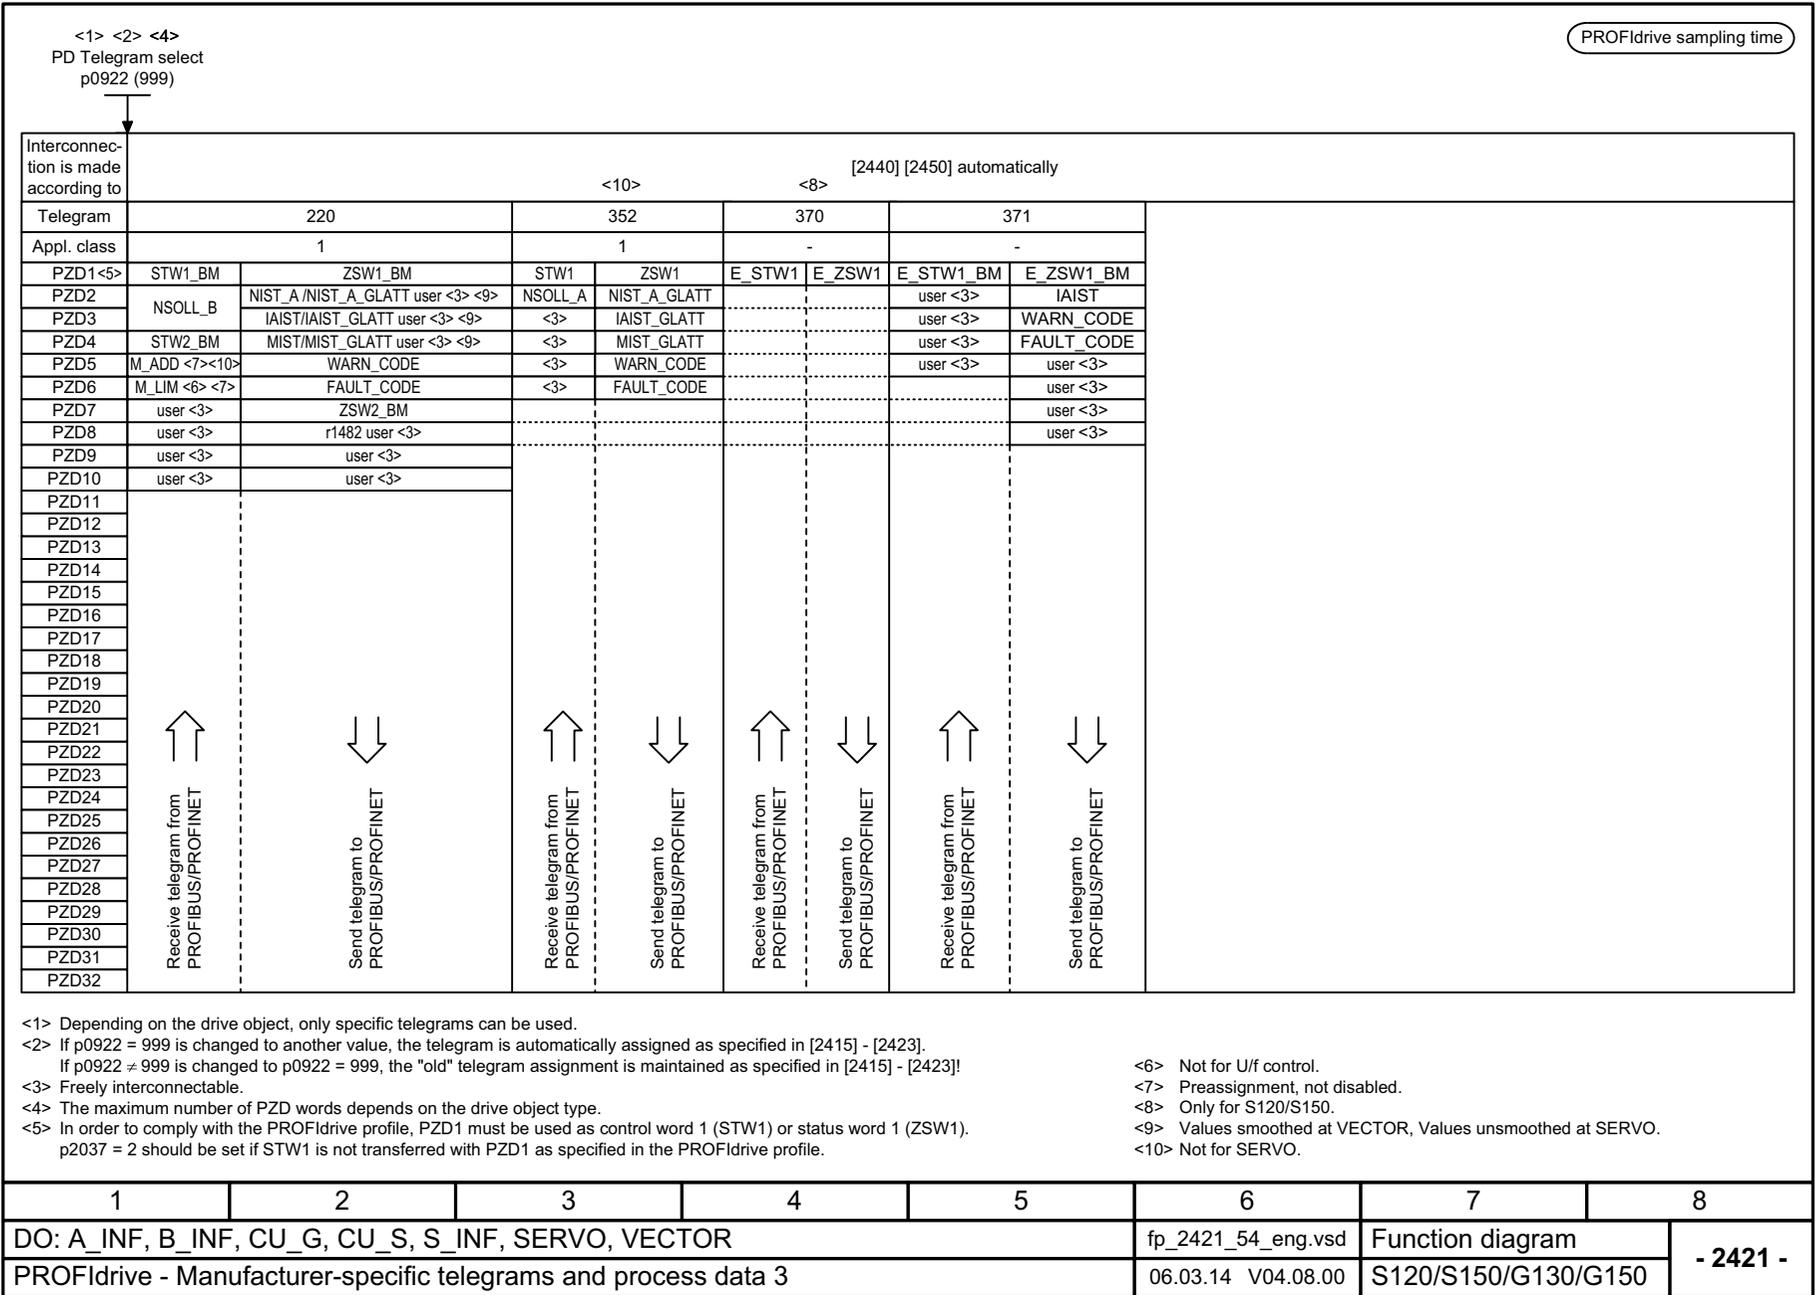


Fig. 3-24 2421 – Manufacturer-specific telegrams and process data 3

Fig. 3-25 2422 – Manufacturer-specific telegrams and process data 4

		[2440] [2450] automatically												<4>	
Interconnection is made according to															
Telegram	390	391		392		393		394		395		396			
Appl. class	-	-		-		-		-		-		-			
PZD1	CU_STW1	CU_ZSW1													
PZD2	A_DIGITAL	E_DIGITAL													
PZD3			MT_STW	MT_ZSW	MT_STW	MT_ZSW	A_DIGITAL_1	E_DIGITAL_1	A_DIGITAL_1	E_DIGITAL_1	A_DIGITAL_1	E_DIGITAL_1	A_DIGITAL_1	E_DIGITAL_1	
PZD4				MT1_ZS_F		MT1_ZS_F		MT_ZSW		MT_ZSW		MT_ZSW		MT_ZSW	
PZD5				MT1_ZS_S		MT1_ZS_S		MT1_ZS_F		MT1_ZS_F		MT_DIAG	NOCKEN1_ZS_F	MT1_ZS_F	
PZD6				MT2_ZS_F		MT2_ZS_F		MT1_ZS_S		MT1_ZS_S		MT_ZS_1	NOCKEN1_ZS_S	MT1_ZS_S	
PZD7				MT2_ZS_S		MT2_ZS_S		MT2_ZS_F		MT2_ZS_F		MT_ZS_2	NOCKEN2_ZS_F	MT2_ZS_F	
PZD8						MT3_ZS_F		MT2_ZS_S		MT2_ZS_S		MT_ZS_3	NOCKEN2_ZS_S	MT2_ZS_S	
PZD9						MT3_ZS_S		MT3_ZS_F		MT3_ZS_F		MT_ZS_4	NOCKEN3_ZS_F	MT3_ZS_F	
PZD10						MT4_ZS_F		MT3_ZS_S		MT3_ZS_S		MT_ZSB1	NOCKEN3_ZS_S	MT3_ZS_S	
PZD11						MT4_ZS_S		MT4_ZS_F		MT4_ZS_F		MT_ZS_5	NOCKEN4_ZS_F	MT4_ZS_F	
PZD12						MT5_ZS_F		MT4_ZS_S		MT4_ZS_S		MT_ZS_6	NOCKEN4_ZS_S	MT4_ZS_S	
PZD13						MT5_ZS_S		MT5_ZS_F		MT5_ZS_F		MT_ZS_7	NOCKEN5_ZS_F	MT5_ZS_F	
PZD14						MT6_ZS_F		MT5_ZS_S		MT5_ZS_S		MT_ZS_8	NOCKEN5_ZS_S	MT5_ZS_S	
PZD15						MT6_ZS_S		MT6_ZS_F		MT6_ZS_F		MT_ZSB2	NOCKEN6_ZS_F	MT6_ZS_F	
PZD16								MT6_ZS_S		MT6_ZS_S		MT_ZS_9	NOCKEN6_ZS_S	MT6_ZS_S	
PZD17								MT7_ZS_F		MT7_ZS_F		MT_ZS_10	NOCKEN7_ZS_F	MT7_ZS_F	
PZD18								MT7_ZS_S		MT7_ZS_S		MT_ZS_11	NOCKEN7_ZS_S	MT7_ZS_S	
PZD19								MT8_ZS_F		MT8_ZS_F		MT_ZS_12	NOCKEN8_ZS_F	MT8_ZS_F	
PZD20								MT8_ZS_S		MT8_ZS_S		MT_ZSB3	NOCKEN8_ZS_S	MT8_ZS_S	
PZD21								E_ANALOG		E_ANALOG		MT_ZS_13		E_ANALOG	
PZD22												MT_ZS_14			
PZD23												MT_ZS_15			
PZD24												MT_ZS_16			
PZD25												MT_ZSB4			
PZD26	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	Receive telegram from PROFIBUS/PROFINET	Send telegram to PROFIBUS/PROFINET	
PZD27															
PZD28															
PZD29															
PZD30															
PZD31															
PZD32															

- <1> Depending on the drive object, only specific telegrams can be used.
- <2> If p0922 = 999 is changed to another value, the telegram is automatically assigned as specified in [2415] - [2423].  
If p0922 ≠ 999 is changed to p0922 = 999, the "old" telegram assignment is maintained as specified in [2415] - [2423].
- <3> The maximum number of PZD words depends on the drive object type.
- <4> Only for CU\_I\_D410.
- <5>   Connected Only for CU\_S\_AC or CU\_I\_D410.

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, CU_G, CU_S, S_INF, SERVO, VECTOR					fp_2422_54_eng.vsd	Function diagram	
PROFIdrive - Manufacturer-specific telegrams and process data 4					07.03.14 V04.08.00	S120/S150/G130/G150	
							- 2422 -

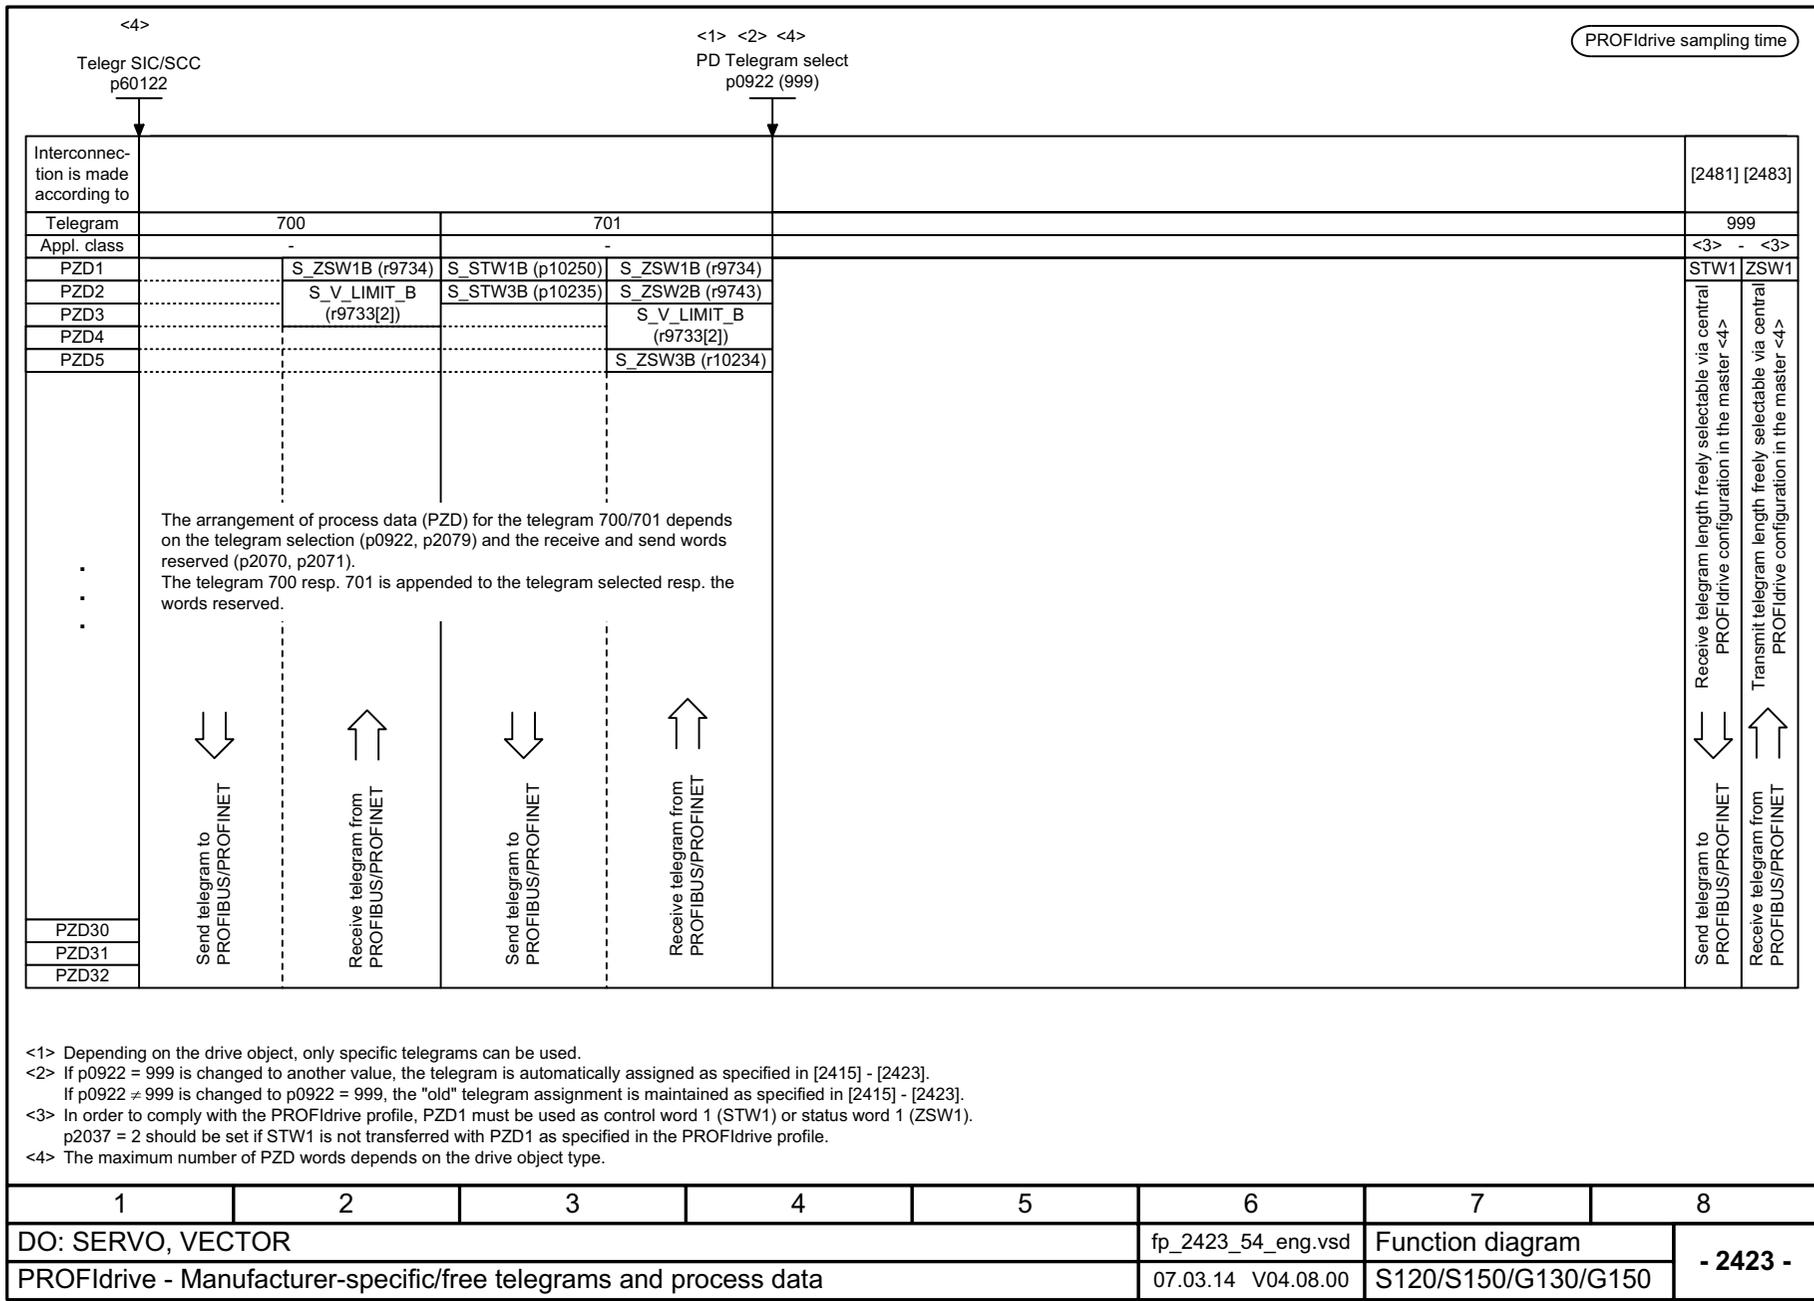


Fig. 3-26 2423 – Manufacturer-specific/free telegrams and process data

Fig. 3-27 2425 – STW1\_BM control word, metal industry interconnection

Signal targets for STW1_BM						<1>									
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word	[Function diagram] signal target	Inverted	PROFIdrive sampling time									
STW1.0	<b>0 = OFF (OFF1)</b> ▲ = ON	p0840[0] = r2090.0	[2501.3]	[2610]	-										
STW1.1	<b>0 = OFF2</b> (immediate pulse suppression and switch on inhibit) 1 = No OFF2 (enable is possible)	p0844[0] = r2090.1	[2501.3]	[2610]	-										
STW1.2	<b>0 = OFF3</b> (braking along the OFF3 ramp (p1135), then pulse suppression and switch on inhibit) 1 = <b>No OFF3</b> (enable is possible)	p0848[0] = r2090.2	[2501.3]	[2610]	-										
STW1.3	<b>0 = Inhibit operation</b> 1 = <b>Enable operation</b>	p2816[0] = r2090.3	[2501.3]	[2634.3]	-										
STW1.4	<b>0 = Inhibit ramp-function generator</b> 1 = <b>Operating condition</b>	p1140[0] = r2090.4	[2501.3]	[3060] [3070] [3080]	-										
STW1.5	<b>0 = Stop the ramp-function generator</b> 1 = <b>Enable the ramp-function generator</b>	p1141[0] = r2090.5	[2501.3]	[3060] [3070]	-										
STW1.6	<b>0 = Inhibit setpoint = 0</b> 1 = <b>Enable setpoint</b>	p1142[0] = r2090.6	[2501.3]	[3060] [3070] [3080]	-										
STW1.7	▲ = <b>Acknowledge faults</b>	p2103[0] = r2090.7	[2546.1]	[8060]	-										
STW1.8	<b>Reserved</b>	-	-	-	-										
STW1.9	<b>Reserved</b>	-	-	-	-										
STW1.10	<b>1 = Control by PLC</b> <2>	p0854[0] = r2090.10	[2501.3]	[2501]	-										
STW1.11	<b>Reserved</b>	-	-	-	-										
STW1.12	<b>Reserved</b> <3>	<3>	-	-	-										
STW1.13	<b>Reserved</b> <3>	<3>	-	-	-										
STW1.14	<b>Reserved</b> <3>	<3>	-	-	-										
STW1.15	<b>Reserved</b> <3>	<3>	-	-	-										
<1> Used in telegram 220. <2> STW1.10 must be set to ensure that the drive object accepts the process data (PZD). <3> Interconnection is not disabled.															
1		2		3		4		5		6		7		8	
DO: SERVO, VECTOR						fp_2425_54_eng.vsd		Function diagram		- 2425 -					
PROFIdrive - STW1_BM control word, metal industry interconnection						27.06.13 V04.08.00		S120/S150/G130/G150							

PROFIdrive sampling time

Signal targets for STW2_BM					
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word	[Function diagram] signal target	Inverted
STW2.0	Command data set selection CDS, bit 0	p0810 = r2093.0	-	[8560]	-
STW2.1	Command data set selection CDS, bit 1 <3>	p0811 = r2093.1	-	[8560]	-
STW2.2	Drive data set selection DDS, bit 0	p0820[0] = r2093.2 <2>	-	[8565]	-
STW2.3	Drive data set selection DDS, bit 1	p0821[0] = r2093.3 <2>	-	[8565]	-
STW2.4	Drive data set selection DDS, bit 2	p0822[0] = r2093.4 <2>	-	[8565]	-
STW2.5	1 = Bypass ramp-function generator <4>	p1122[0] = r2093.5	-	-	-
STW2.6	Reserved	-	-	-	-
STW2.7	1 = Speed controller set integrator value	p1477[0] = r2093.7	-	-	-
STW2.8	1 = Droop enabled <3>	p1492[0] = r2093.8	-	[6030]	-
STW2.9	1 = Speed controller enabled	p0856[0] = r2093.9 <2>	-	-	-
STW2.10	Reserved <2>	<2>	-	-	-
STW2.11	1 = Torque controlled operation 0 = Speed controlled operation	p1501[0] = r2093.11	-	-	-
STW2.12	Reserved <2>	<2>	-	-	-
STW2.13	Reserved <2>	<2>	-	-	-
STW2.14	Reserved <2>	<2>	-	-	-
STW2.15	Controller slave sign-of-life Toggle bit	p2081[15] = r2093.15	-	-	-

<1> Used in telegram 220.  
<2> Interconnection is not disabled.  
<3> Only for VECTOR.  
<4> Only for "Extended setpoint channel".

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2426_54_eng.vsd	Function diagram	
PROFIdrive - STW2_BM control word, metal industry interconnection					27.06.13 V04.08.00	S120/S150/G130/G150	
							- 2426 -

Fig. 3-28 2426 – STW2\_BM control word, metal industry interconnection

Fig. 3-29 2427 – E\_STW1\_BM control word, infeed metal industry interconnection

PROFdrive sampling time									
Signal targets for E_STW1_BM <1> <7>									
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word			[Function diagram] signal target			Inverted
			A_INF	B_INF <7>	S_INF <5>	A_INF	B_INF <7>	S_INF <5>	
STW1.0	<b>▲ = ON</b> (close precharging/line contactor, pulses can be enabled) 0 = OFF1 (reduce Vdc along a ramp, suppress pulse and open precharging/line contactor)	p0840[0] = r2090.0	[8920.3]	[8720.3]	[8820.3]	[8932]	[8732]	[8832]	-
STW1.1	<b>1 = No OFF2 (enable is possible)</b> 0 = OFF2 (immediate pulse suppression and power-on inhibit)	p0844[0] = r2090.1	[8920.3]	[8720.3]	[8820.3]	[8932]	[8732]	[8832]	-
STW1.2	<b>Reserved</b>	-	-	-	-	-	-	-	-
STW1.3	<b>1 = Enable operation (pulses can be enabled)</b> <3> 0 = Inhibit operation (suppress pulses)	p0852[0] = r2090.3	[8920.3]	-	[8820.3]	[8932]	-	[8832]	-
STW1.4	<b>Reserved</b>	-	-	-	-	-	-	-	-
STW1.5	<b>1 = Infeed, inhibit motoring</b> <4>	p3532= r2090.5	[8920.3]	-	-	[8920]	-	-	-
STW1.6	<b>1 = Infeed, inhibit regenerative operation</b> <3>	p3533= r2090.6	[8920.3]	-	[8820.3]	[8920]	-	[8820]	-
STW1.7	<b>▲ = Acknowledge faults</b>	p2103[0] = r2090.7	[2546.3]			[8060]			-
STW1.8	<b>Reserved</b> <6>	<6>	-	-	-	-	-	-	-
STW1.9	<b>Reserved</b> <6>	<6>	-	-	-	-	-	-	-
STW1.10	<b>1 = Control by PLC</b> <2>	p0854[0] = r2090.10	[8920.3]	[8720.3]	[8820.3]	[8920]	[8720]	[8820]	-
STW1.11	<b>Reserved</b> <6>	<6>	-	-	-	-	-	-	-
STW1.12	<b>Reserved</b> <6>	<6>	-	-	-	-	-	-	-
STW1.13	<b>Reserved</b> <6>	<6>	-	-	-	-	-	-	-
STW1.14	<b>Reserved</b> <6>	<6>	-	-	-	-	-	-	-
STW1.15	<b>Controller-sign-of-life Toggle bit</b>	p2080[15] = r2090.15	-	-	-	-	-	-	-

<1> Used in telegram 371. <2> STW1.10 must be set to ensure that the drive object accepts the process data (PZD). <3> Only for A_INF, S_INF. <4> Only for A_INF.	<5> B_INF and S_INF only for S120. <6> Interconnection is not disabled. <7> Only for S120 and G150. <8> Not for G130.
---	--

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, S_INF					fp_2427_54_eng.vsd	Function diagram	
PROFdrive - E_STW1_BM control word, infeed metal industry interconnection					27.06.13 V04.08.00	S120/S150/G130/G150	
							- 2427 -

PROFIdrive sampling time

Signal sources for ZSW1_BM						<1>
Signal	Meaning	Interconnection parameters	[Function diagram] Internal status word	[Function diagram] signal source	Inverted <2>	
ZSW1.0	1 = Ready for switching on	p2080[0] = r0899.0	[2503.7]	[2610]	-	
ZSW1.1	1 = Ready for operation	p2080[1] = r0899.1	[2503.7]	[2610]	-	
ZSW1.2	1 = Operation enabled	p2080[2] = r2811.0	[2503.7]	[2610]	-	
ZSW1.3	1 = Fault present	p2080[3] = r2139.3	[2548.7]	[8060]	-	
ZSW1.4	1 = No coast down active (OFF2 inactive)	p2080[4] = r0899.4	[2503.7]	[2610]	-	
ZSW1.5	1 = No quick stop active (OFF3 inactive)	p2080[5] = r0899.5	[2503.7]	[2610]	-	
ZSW1.6	1 = Switching on inhibited active	p2080[6] = r0899.6	[2503.7]	[2610]	-	
ZSW1.7	1 = Alarm present	p2080[7] = r2139.7	[2548.7]	[8065]	-	
ZSW1.8	1 = Speed setpoint - actual value deviation within tolerance t_off	p2080[8] = r2197.7	[2534.7]	[8010]	-	
ZSW1.9	1 = Control requested <3>	p2080[9] = r0899.9	[2503.7]	[2503]	-	
ZSW1.10	1 = f or n comparison value reached/exceeded	p2080[10] = r2199.1	[2536.7]	[8010]	-	
ZSW1.11	1 = I, M, or P limit not reached <4>	p2080[11] = r1407.7	[2522.7]	[5610] [6060] <5>	✓	
ZSW1.12	1 = Open the holding brake	p2080[12] = r0899.12	[2503.7]	[2701]	-	
ZSW1.13	Reserved <6>	<6>	-	-	-	
ZSW1.14	Reserved <6>	<6>	-	-	-	
ZSW1.15	Reserved <6>	<6>	-	-	-	

<1> Used in telegram 220.  
 <2> The ZSW1 is generated using the binector-connector converter (BI: p2080[0...15], inversion: p2088[0]...p2088[0].15)  
 <3> The drive object is ready to accept data.  
 <4> Not for VECTOR U/f.  
 <5> Only for SINAMICS S120.  
 <6> Interconnection is not disabled.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2428_54_eng.vsd	Function diagram	
PROFIdrive - ZSW1_BM status word, metal industry interconnection					27.06.13 V04.08.00	S120/S150/G130/G150	
							<b>- 2428 -</b>

Fig. 3-30 2428 – ZSW1\_BM status word, metal industry interconnection

PROFIdrive sampling time

Signal sources for ZSW2_BM						<1>
Signal	Meaning	Interconnection parameters	[Function diagram] internal status word	[Function diagram] signal source	Inverted	
ZSW2.0	Reserved <3>	<3>	-	-	-	
ZSW2.1	Reserved <3>	<3>	-	-	-	
ZSW2.2	Reserved <3>	<3>	-	-	-	
ZSW2.3	Reserved <3>	<3>	-	-	-	
ZSW2.4	Reserved <3>	<3>	-	-	-	
ZSW2.5	1 = Alarm class bit 0	p2081[5] = r2139.11	-	[2548]	-	
ZSW2.6	1 = Alarm class bit 1	p2081[6] = r2139.12	-	[2548]	-	
ZSW2.7	Reserved	-	-	-	-	
ZSW2.8	Reserved	-	-	-	-	
ZSW2.9	1 = Speed setpoint limited <2>	p2081[9] = r1407.11	-	-	-	
ZSW2.10	1 = Upper torque limit <2>	p2081[10] = r1407.8	-	-	-	
ZSW2.11	1 = Lower torque limit <2>	p2081[11] = r1407.9	-	-	-	
ZSW2.12	1 = Encoderless operation due to fault	p2081[12] = r1407.13	-	-	-	
ZSW2.13	1 = SS1 delay time active in the drive	p2081[13] = r9773.2	-	-	-	
ZSW2.14	1 = STO active in drive	p2081[14] = r9773.1	-	-	-	
ZSW2.15	Controller slave sign-of-life Toggle bit	p2081[15] = r2093.15	-	-	-	

<1> Used in telegram 220.  
 <2> Not for VECTOR U/f.  
 <3> Interconnection is not disabled.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2429_54_eng.vsd	Function diagram	
PROFIdrive - ZSW2_BM status word, metal industry interconnection					27.06.13 V04.08.00	S120/S150/G130/G150	
							- 2429 -

Fig. 3-31 2429 – ZSW2\_BM status word, metal industry interconnection

PROFIdrive sampling time


Signal sources for E_ZSW1_BM									
Signal	Meaning	Interconnection parameters	[Function diagram] signal source			[Function diagram] internal status word			Inverted
			A_INF	B_INF <5>	S_INF <3>	A_INF	B_INF <5>	S_INF <3>	
ZSW1.0	1 = Ready for switching on	p2080[0] = r0899.0	[8932]	[8732]	[8832]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.1	1 = Ready for operation	p2080[1] = r0899.1	[8932]	[8732]	[8832]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.2	1 = Operation enabled	p2080[2] = r0899.2	[8932]	[8732]	[8832]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.3	1 = Fault present	p2080[3] = r2139.3	[8060]			[2548.7]			-
ZSW1.4	1 = No OFF2 effective	p2080[4] = r0899.4	[8932]	[8732]	[8832]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.5	Reserved	-	-	-	-	-	-	[8826.7]	-
ZSW1.6	1 = Switching on inhibited	p2080[6] = r0899.6	[8932]	[8732]	[8832]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.7	1 = Alarm present	p2080[7] = r2139.7	[8065]			[2548.7]			-
ZSW1.8	Reserved <4>	<4>	-	-	-	-	-	-	-
ZSW1.9	1 = PLC requests control <2>	p2080[9] = r0899.9	[8926]	[8726]	[8826]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.10	Reserved <4>	<4>	-	-	-	-	-	-	-
ZSW1.11	1 = Precharging completed	p2080[11] = r0899.11	[8950]	[8750]	[8850]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.12	1 = Line contactor closed	p2080[12] = r0899.12	[8938]	[8738]	[8838]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.13	Reserved <4>	<4>	-	-	-	-	-	-	-
ZSW1.14	Reserved <4>	<4>	-	-	-	-	-	-	-
ZSW1.15	Controller sign-of-life Toggle bit	r2080[15] = r2090.15	-	-	-	-	-	-	-

<1> Used in telegram 371.                      <4> Interconnection is not disabled.  
 <2> The drive object is ready to accept data.                      <5> Only for S120 and G150.  
 <3> Only for S120.                                      <6> Not for G130.

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, S_INF					fp_2430_54_eng.vsd	Function diagram	
PROFIdrive - E_ZSW1_BM status word, infeed metal industry interconnection					19.06.15 V04.08.00	S120/S150/G130/G150	
- 2430 -							

Fig. 3-32 2430 – E\_ZSW1\_BM status word, infeed metal industry interconnection

Fig. 3-33 2439 – PZD receive signals interconnection, profile-specific

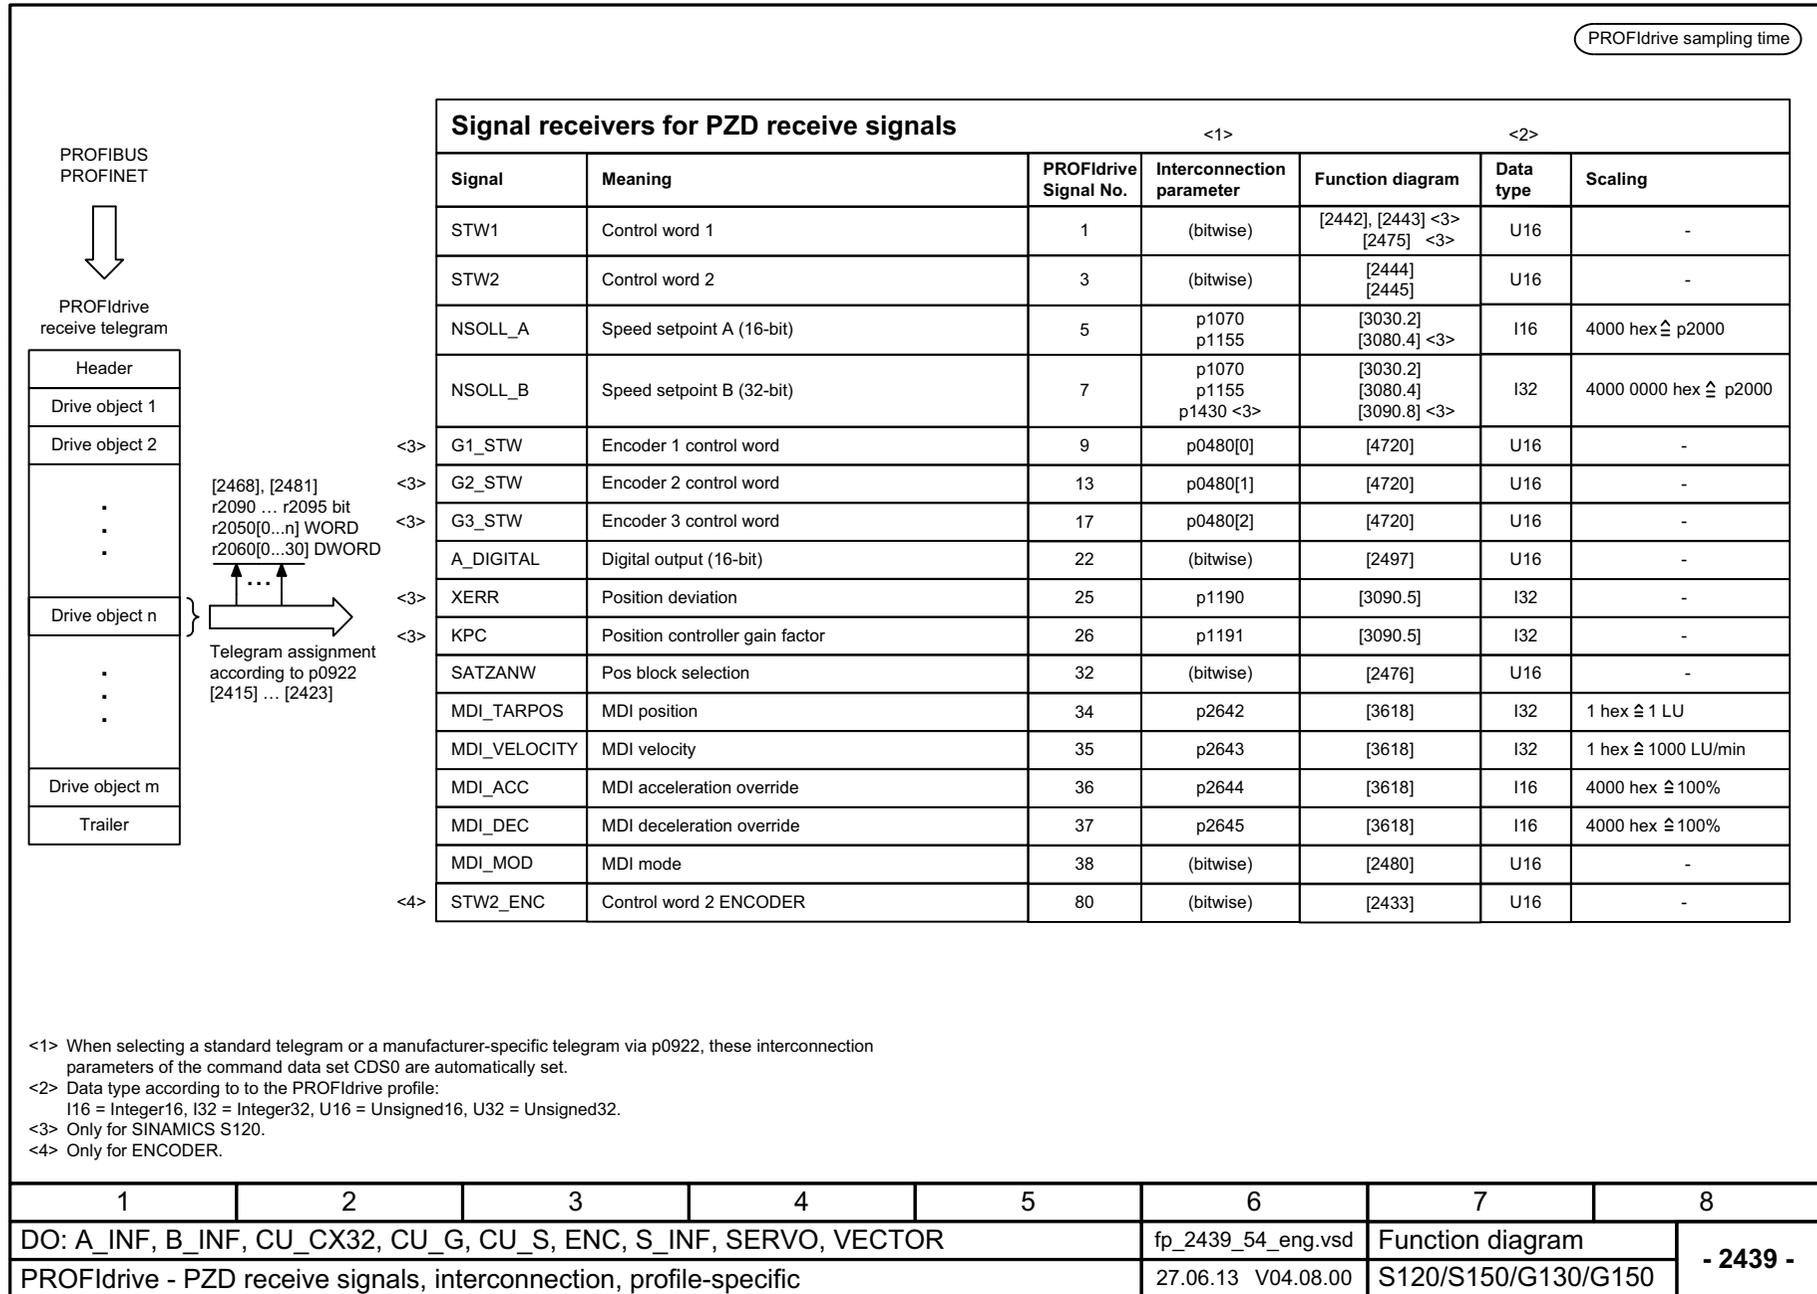

PROFdrive sampling time

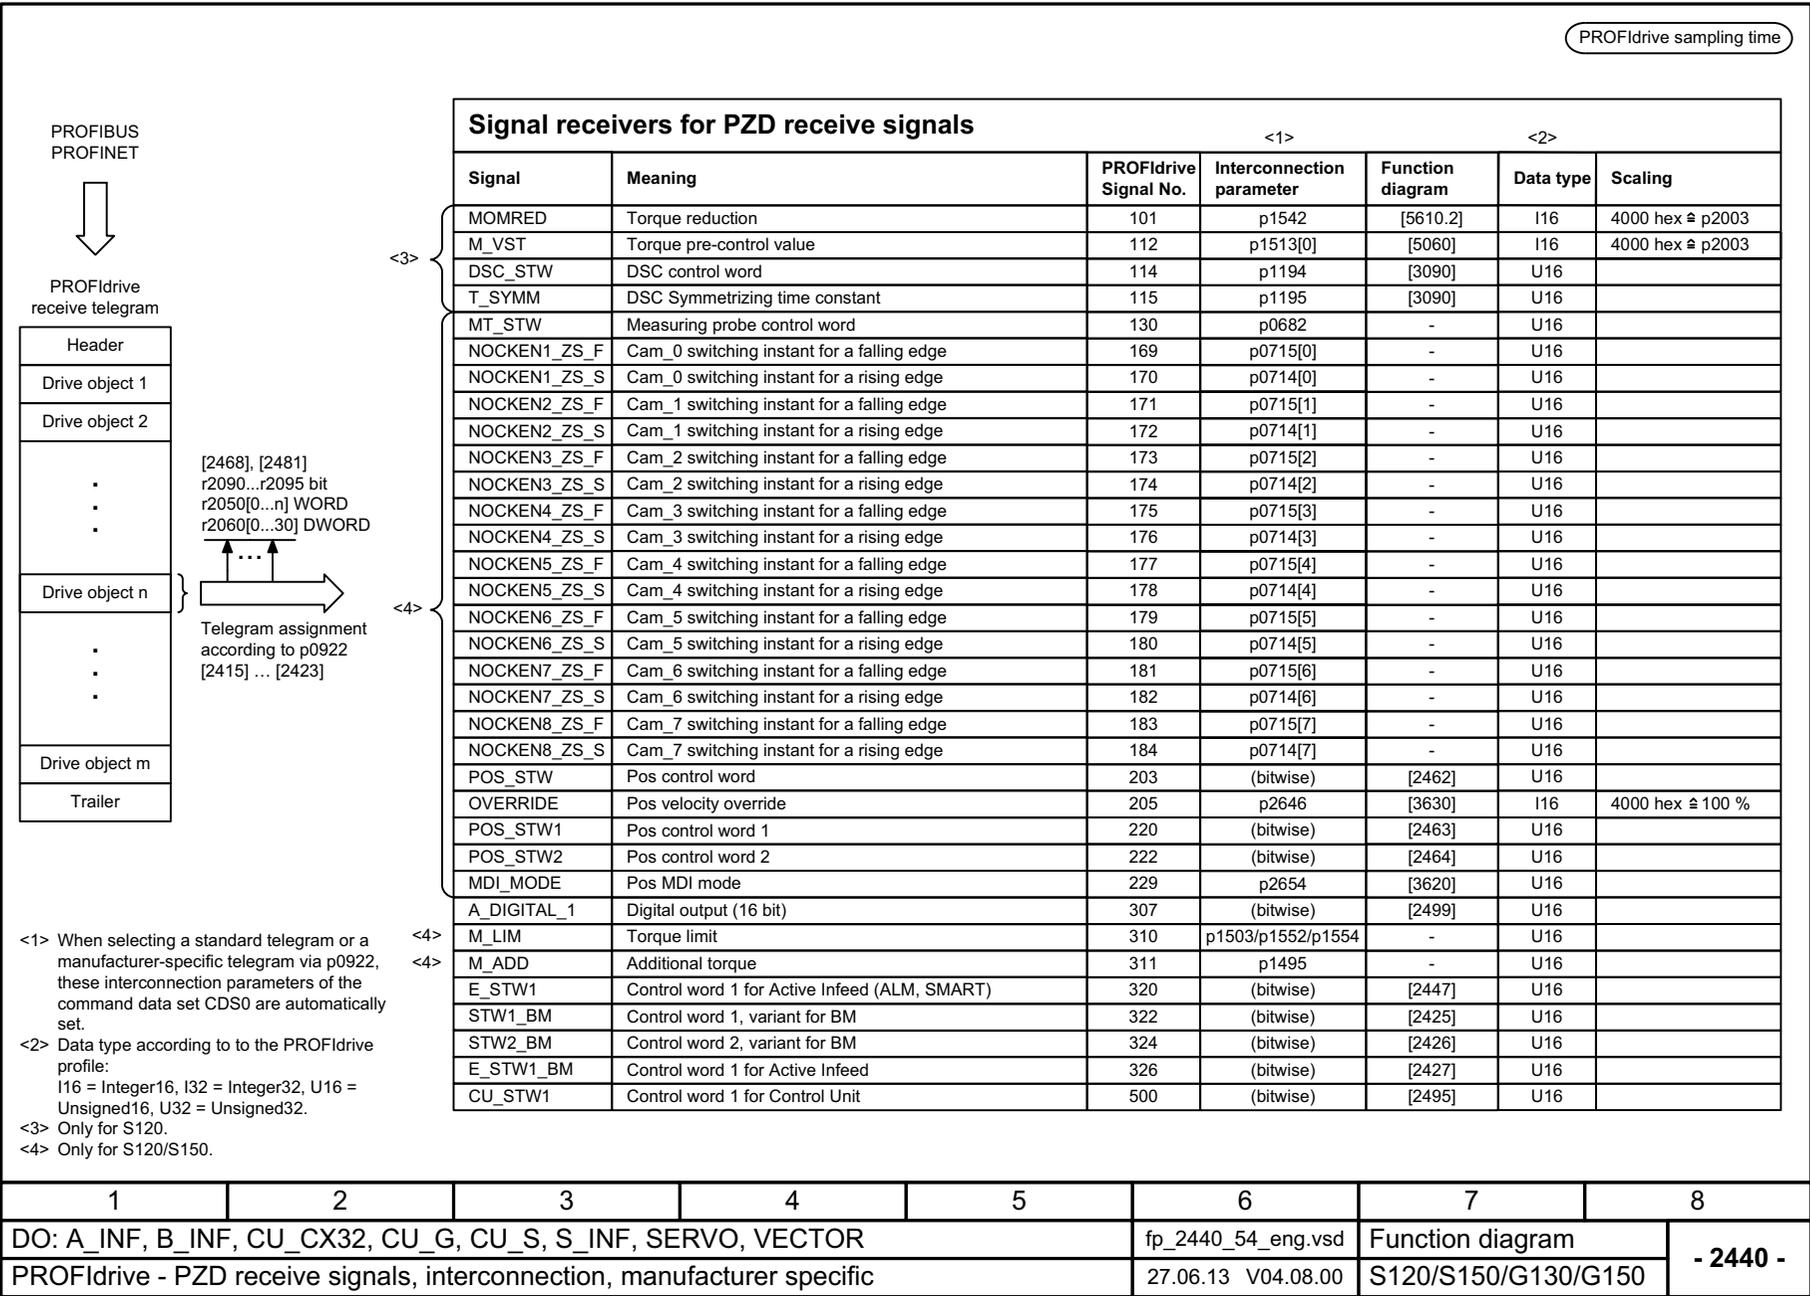


Fig. 3-34 2440 – PZD receive signals interconnection, manufacturer-specific

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, CU_CX32, CU_G, CU_S, S_INF, SERVO, VECTOR					fp_2440_54_eng.vsd	Function diagram	
PROFdrive - PZD receive signals, interconnection, manufacturer specific					27.06.13 V04.08.00	S120/S150/G130/G150	
<b>- 2440 -</b>							

Fig. 3-35 2441 – STW1 control word interconnection (p2038 = 2)

Signal targets for STW1 in Interface Mode VIK-NAMUR (p2038 = 2)						<1>
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word	[Function diagram] signal target	Inverted	PROFdrive sampling time
STW1.0	= ON (pulses can be enabled) 0 = OFF1 (braking with ramp-function generator, then pulse suppression & ready for switching on)	p0840[0] = r2090.0	[2501.3]	[2610]	-	
STW1.1	1 = No OFF2 (enable is possible) <3> 0 = OFF2 (immediate pulse suppression and switching on inhibited)	p0844[0] = r2090.1	[2501.3]	[2610]	-	
STW1.2	1 = No OFF3 (enable possible) <3> 0 = OFF3 (braking with the OFF3 ramp p1135, then pulse suppression and switching on inhibited)	p0848[0] = r2090.2	[2501.3]	[2610]	-	
STW1.3	1 = Enable operation (pulses can be enabled) 0 = Inhibit operation (suppress pulses)	p0852[0] = r2090.3	[2501.3]	[2610]	-	
STW1.4	1 = Operating condition (the ramp-function generator can be enabled) 0 = Inhibit ramp-function generator (set the ramp-function generator output to zero)	p1140[0] = r2090.4	[2501.3]	[3060] [3070] [3080]	-	
STW1.5	1 = Enable the ramp-function generator 0 = Stop the ramp-function generator (freeze the ramp-function generator output)	p1141[0] = r2090.5	[2501.3]	[3060] [3070]	-	
STW1.6	1 = Enable setpoint 0 = Inhibit setpoint (set the ramp-function generator input to zero)	p1142[0] = r2090.6	[2501.3]	[3060] [3070] [3080]	-	
STW1.7	= 1. Acknowledge faults	p2103[0] = r2090.7	[2546.1]	[8060]	-	
STW1.8	Reserved	-	-	-	-	
STW1.9	Reserved	-	-	-	-	
STW1.10	1 = Control by PLC <2>	p0854[0] = r2090.10	[2501.3]	[2501]	-	
STW1.11	1 = Setpoint inversion	p1113[0] = r2090.11	[2505.3]	[3040]	-	
STW1.12	1 = Unconditionally open the holding brake	p0855[0] = r2090.12	[2501.3]	[2701]	-	
STW1.13	Reserved	-	-	-	-	
STW1.14	Reserved	-	-	-	-	
STW1.15	1 = Command Data Set selection CDS bit 0	<4> p0810[0] = 2090.15	-	[8560]	-	

<1> Used in telegram 20.  
<2> STW1.10 must be set to ensure that the drive object accepts the process data (PZD).  
<3> OC = Operating condition.  
<4> Interconnection is not disabled.

1	2	3	4	5	6	7	8
DO: VECTOR					fp_2441_54_eng.vsd	Function diagram	
PROFdrive - STW1 control word interconnection (p2038 = 2)					27.06.13 V04.08.00	S120/S150/G130/G150	
							- 2441 -

PROFIdrive sampling time

**Signal targets for STW1 in Interface Mode SINAMICS (p2038 = 0)** <1>

Signal	Meaning	Interconnection parameters	[Function diagram] internal control word	[Function diagram] signal target	Inverted
STW1.0	= ON (pulses can be enabled) 0 = OFF1 (braking with ramp-function generator, then pulse suppression & ready for switching on)	p0840[0] = r2090.0	[2501.3]	[2610]	-
STW1.1	1 = No OFF2 (enable is possible) 0 = OFF2 (immediate pulse suppression and switching on inhibited)	p0844[0] = r2090.1	[2501.3]	[2610]	-
STW1.2	1 = No OFF3 (enable possible) 0 = OFF3 (braking with the OFF3 ramp p1135, then pulse suppression and switching on inhibited)	p0848[0] = r2090.2	[2501.3]	[2610]	-
STW1.3	1 = Enable operation (pulses can be enabled) 0 = Inhibit operation (suppress pulses)	p0852[0] = r2090.3	[2501.3]	[2610]	-
STW1.4	1 = Operating condition (the ramp-function generator can be enabled) 0 = Inhibit ramp-function generator (set the ramp-function generator output to zero)	p1140[0] = r2090.4	[2501.3]	[3060] [3070] [3080]	-
STW1.5	1 = Continue ramp-function generator 0 = Freeze ramp-function generator (freeze the ramp-function generator output)	p1141[0] = r2090.5	[2501.3]	[3060] [3070]	-
STW1.6	1 = Enable setpoint 0 = Inhibit setpoint (set the ramp-function generator input to zero)	p1142[0] = r2090.6	[2501.3]	[3060] [3070] [3080]	-
STW1.7	= 1. Acknowledge faults	p2103[0] = r2090.7	[2546.1]	[8060]	-
STW1.8	Reserved	-	-	-	-
STW1.9	Reserved	-	-	-	-
STW1.10	1 = Control by PLC <2>	p0854[0] = r2090.10	[2501.3]	[2501]	-
STW1.11	1 = Setpoint inversion <3>	p1113[0] = r2090.11	[2505.3]	[3040]	-
STW1.12	Reserved	-	-	-	-
STW1.13	1 = Motorized potentiometer setpoint raise <3>	p1035[0] = r2090.13	[2505.3]	[3020]	-
STW1.14	1 = Motorized potentiometer setpoint lower <3>	p1036[0] = r2090.14	[2505.3]	[3020]	-
STW1.15	Reserved	-	-	-	-

<1> Used in telegrams 1, 2, 3, 4, 5, 6, 352 (telegram 5 and 6 only for S120).  
 <2> STW1.10 must be set to ensure that the drive object accepts the process data (PZD).  
 <3> Only for "expanded setpoint channel" and "extended ramp-function generator".

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2442_54_eng.vsd	Function diagram	
PROFIdrive - STW1 control word interconnection (p2038 = 0)					03.12.15 V04.08.00	S120/S150/G130/G150	
							- 2442 -

Fig. 3-36 2442 – STW1 control word interconnection (p2038 = 0)

Fig. 3-37 2444 – STW2 control word interconnection (p2038 = 0)

Signal targets for STW2 in Interface Mode SINAMICS (p2038 = 0)						<1>	
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word	[Function diagram] signal target	Inverted	PROFdrive sampling time	
STW2.0	Drive data set selection DDS, bit 0	p0820[0] = r2093.0 <4> r2092.0	-	[8565]	-		
STW2.1	Drive data set selection DDS, bit 1	p0821[0] = r2093.1 <4> r2092.1	-	[8565]	-		
STW2.2	Drive data set selection DDS, bit 2	p0822[0] = r2093.2 <4> r2092.2	-	[8565]	-		
STW2.3	Drive data set selection DDS, bit 3	p0823[0] = r2093.3 <4> r2092.3	-	[8565]	-		
STW2.4	Drive data set selection DDS, bit 4	p0824[0] = r2093.4 <4> r2092.4	-	[8565]	-		
STW2.5	Reserved	-	-	-	-		
STW2.6	Reserved	-	-	-	-		
STW2.7	1 = Parking axis	p0897 = r2093.7 <4> r2092.7	-	-	-		
STW2.8	1 = Traverse to fixed endstop <2> <3> <5>	p1545[0] = r2093.8	[2520.2]	[8012]	-		
STW2.9	Reserved	-	-	-	-		
STW2.10	Reserved	-	-	-	-		
STW2.11	 = Motor changeover, feedback Signal	p0828[0] = r2093.11 <4> r2092.11	-	-	-		
STW2.12	Master sign-of-life, bit 0 <5>	p2045 = r2050[3] <4> r2050[2]	-	[2410]	-		
STW2.13	Master sign-of-life, bit 1 <5>						
STW2.14	Master sign-of-life, bit 2 <5>						
STW2.15	Master sign-of-life, bit 3 <5>						
		<1> Used in telegrams 2, 3, 4, 5, 6, 9, 110 and 111.	<2> Not for telegrams 9, 110 and 111. <3> Only for SINAMICS S120.	<4> Only for telegram 9. <5> Not for Vector U/f.			
1	2	3	4	5	6	7	8
DO: SERVO, VECTOR			fp_2444_54_eng.vsd		Function diagram		- 2444 -
PROFdrive - STW2 control word interconnection (p2038 = 0)			27.06.13 V04.08.00		S120/S150/G130/G150		

PROFIdrive sampling time


Signal targets for E_STW1									
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word			[Function diagram] signal target			Inverted
			A_INF	B_INF <6>	S_INF <5>	A_INF	B_INF <6>	S_INF <5>	
STW1.0	<b>ON</b> (close precharging/line contactor, pulses can be enabled) 0 = OFF1 (reduce Vdc along a ramp, suppress pulse and open precharging/line contactor)	p0840[0] = r2090.0	[8920.3]	[8720.3]	[8820.3]	[8932]	[8732]	[8832]	-
STW1.1	<b>1 = No OFF2 (enable is possible)</b> 0 = OFF2 (immediate pulse suppression and switching on inhibited)	p0844[0] = r2090.1	[8920.3]	[8720.3]	[8820.3]	[8932]	[8732]	[8832]	-
STW1.2	<b>Reserved</b>		-	-	-	-	-	-	-
STW1.3	<b>1 = Enable operation (pulses can be enabled)</b> 0 = Inhibit operation (suppress pulses)	p0852[0] = r2090.3	[8920.3]	-	[8820.3]	[8932]	-	[8832]	-
STW1.4	<b>Reserved</b>	-	-	-	-	-	-	-	-
STW1.5	<b>1 = Infeed, inhibit motoring operation</b>	p3532= r2090.5	[8920.3]	-	-	[8920]	-	-	-
STW1.6	<b>1 = Infeed, inhibit regenerative operation</b>	p3533= r2090.6	[8920.3]	-	[8820.3]	[8920]	-	[8820]	-
STW1.7	<b>Acknowledge faults</b>	p2103[0] = r2090.7	[2546.3]			[8060]			-
STW1.8	<b>Reserved</b>	-	-	-	-	-	-	-	-
STW1.9	<b>Reserved</b>	-	-	-	-	-	-	-	-
STW1.10	<b>1 = Control by PLC</b>	p0854[0] = r2090.10	[8920.3]	[8720.3]	[8820.3]	[8920]	[8720]	[8820]	-
STW1.11	<b>Reserved</b>	-	-	-	-	-	-	-	-
STW1.12	<b>Reserved</b>	-	-	-	-	-	-	-	-
STW1.13	<b>Reserved</b>	-	-	-	-	-	-	-	-
STW1.14	<b>Reserved</b>	-	-	-	-	-	-	-	-
STW1.15	<b>Reserved</b>	-	-	-	-	-	-	-	-

<1> Used in telegram 370.  
 <2> STW1.10 must be set to ensure that the drive object accepts the process data (PZD).  
 <3> Only for A\_INF, S\_INF.  
 <4> Only for A\_INF.  
 <5> B\_INF and S\_INF only for S120.  
 <6> Only for S120 and G150.  
 <7> Not for G130.

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, S_INF					fp_2447_54_eng.vsd	Function diagram	
PROFIdrive - E_STW1 control word infeed interconnection					27.06.13 V04.08.00	S120/S150/G130/G150	
<b>- 2447 -</b>							

Fig. 3-38 2447 – E\_STW1 control word infeed interconnection


Fig. 3-39 2449 – PZD send signals interconnection, profile-specific

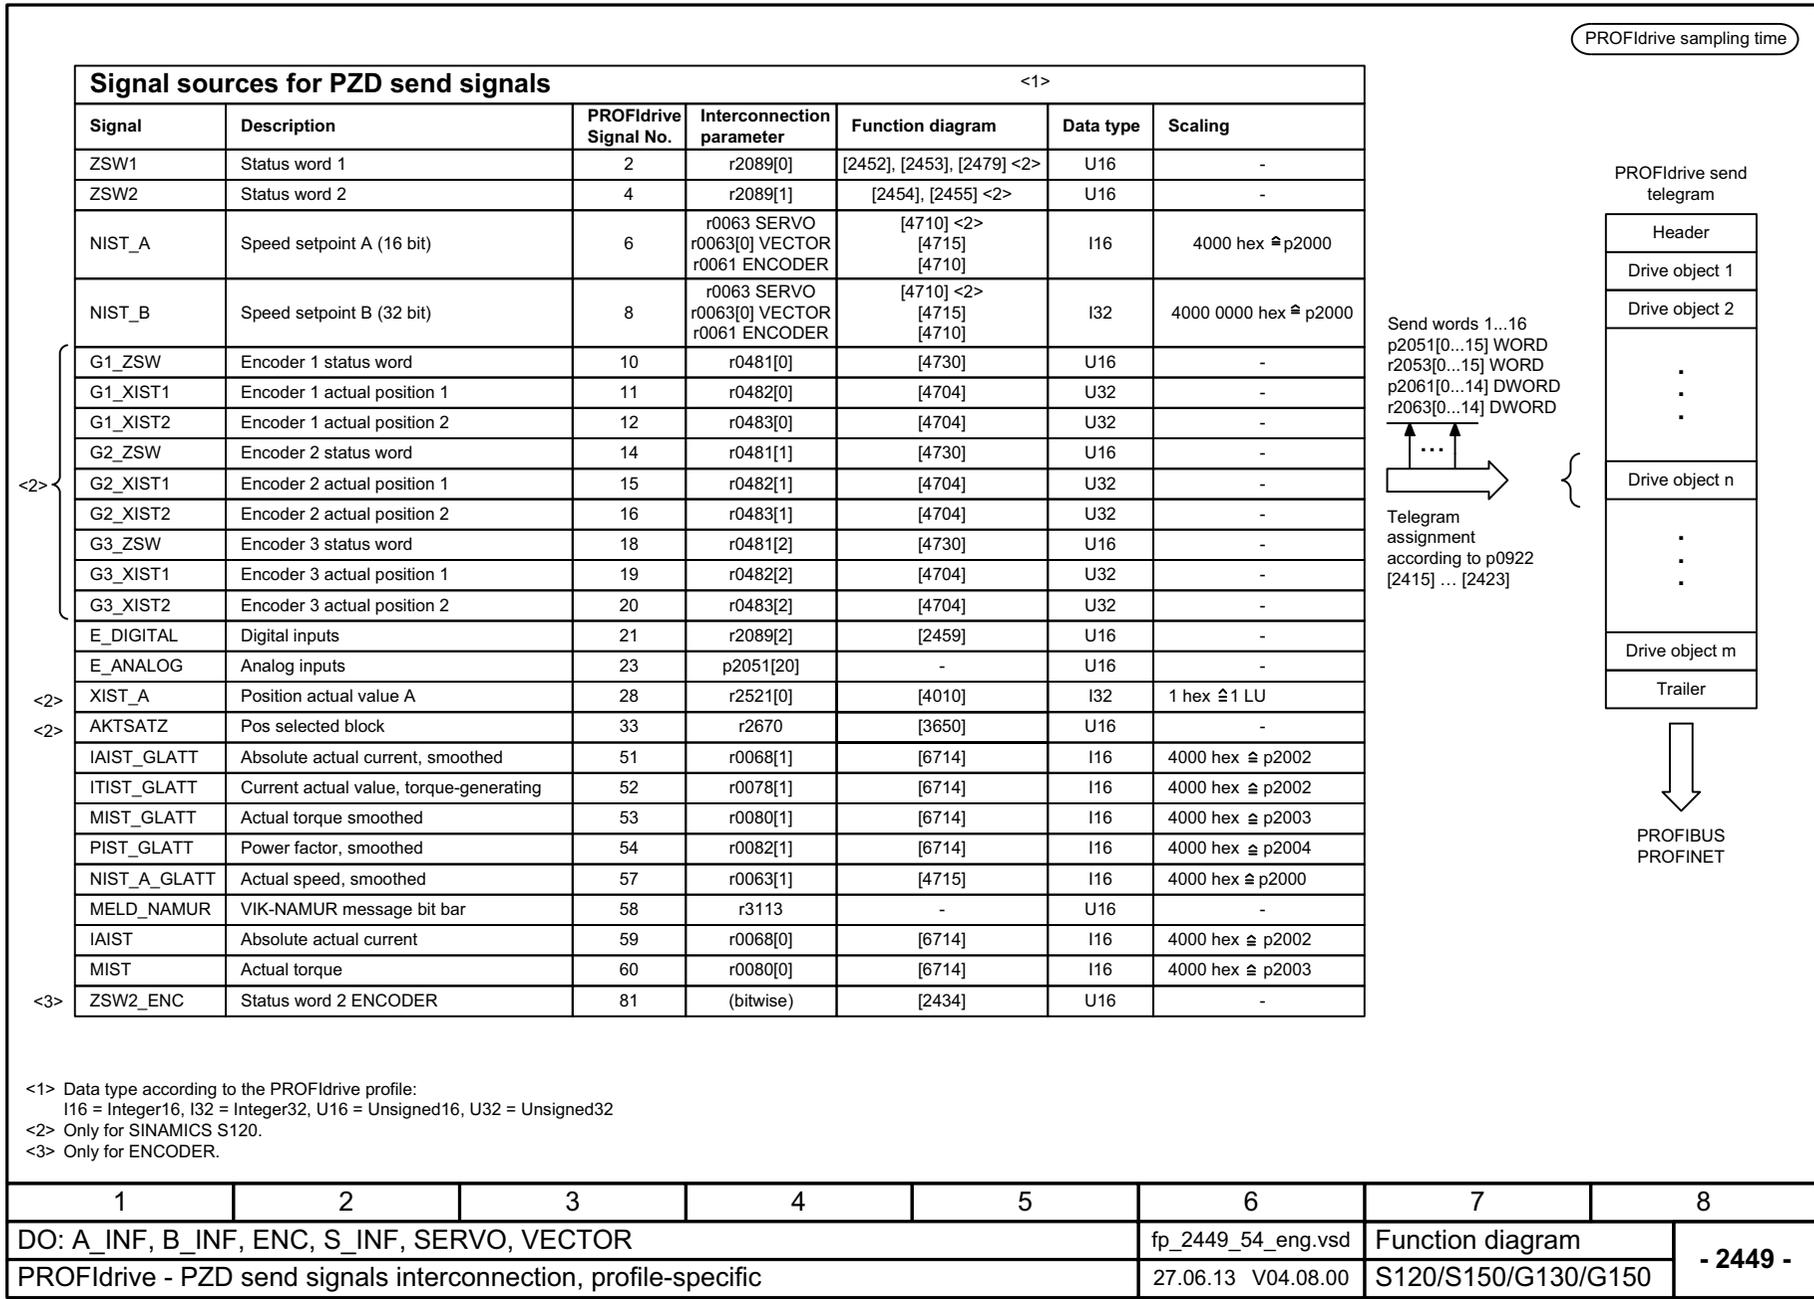



PROFdrive sampling time

Signal sources for PZD send signals <1>						
Signal	Description	PROFdrive Signal No.	Interconnection parameter	Function diagram	Data type	Scaling
MELDW	Message word	102	r2089[2]	[2456]	U16	-
MSOLL_GLATT	Total speed setpoint smoothed	120	r0079[1]	[5610] <2>	I16	4000 hex $\pm$ p2003
AIST_GLATT	Torque utilization smoothed	121	r0081	[8012]	I16	4000 hex $\pm$ 100%
MT_ZSW	Measuring probe status word	131	r0688	-	U16	-
MT1_ZS_F	Measuring probe 1 measuring time falling edge	132	r0687[0]	-	U16	-
MT1_ZS_S	Measuring probe 1 measuring time rising edge	133	r0686[0]	-	U16	-
MT2_ZS_F	Measuring probe 2 measuring time falling edge	134	r0687[1]	-	U16	-
MT2_ZS_S	Measuring probe 2 measuring time rising edge	135	r0686[1]	-	U16	-
MT3_ZS_F	Measuring probe 3 measuring time falling edge	136	r0687[2]	-	U16	-
MT3_ZS_S	Measuring probe 3 measuring time rising edge	137	r0686[2]	-	U16	-
MT4_ZS_F	Measuring probe 4 measuring time falling edge	138	r0687[3]	-	U16	-
MT4_ZS_S	Measuring probe 4 measuring time rising edge	139	r0686[3]	-	U16	-
MT5_ZS_F	Measuring probe 5 measuring time falling edge	140	r0687[4]	-	U16	-
MT5_ZS_S	Measuring probe 5 measuring time rising edge	141	r0686[4]	-	U16	-
MT6_ZS_F	Measuring probe 6 measuring time falling edge	142	r0687[5]	-	U16	-
MT6_ZS_S	Measuring probe 6 measuring time rising edge	143	r0686[5]	-	U16	-
MT7_ZS_F	Measuring probe 7 measuring time falling edge	144	r0687[6]	-	U16	-
MT7_ZS_S	Measuring probe 7 measuring time rising edge	145	r0686[6]	-	U16	-
MT8_ZS_F	Measuring probe 8 measuring time falling edge	146	r0687[7]	-	U16	-
MT8_ZS_S	Measuring probe 8 measuring time rising edge	147	r0686[7]	-	U16	-
MT_DIAG	Measuring probe (stage 3) diagnostics word	148	r0567	-	U16	-
MT_ZS1	Measuring probe (stage 3) measuring time 1	149	r0565[0]	-	U16	-
•	•	•	•	•	•	•
•	•	•	•	•	•	•
•	•	•	•	•	•	•
MT_ZS16	Measuring probe (stage 3) measuring time 16	164	r0565[15]	-	U16	-
MT_ZSB1	Measuring probe (stage 3) measuring time reference 1	165	r0566[0]	-	U16	-
MT_ZSB2	Measuring probe (stage 3) measuring time reference 2	166	r0566[1]	-	U16	-
MT_ZSB3	Measuring probe (stage 3) measuring time reference 3	167	r0566[2]	-	U16	-
MT_ZSB4	Measuring probe (stage 3) measuring time reference 4	168	r0566[3]	-	U16	-
POS_ZSW	Pos status word	204	r2683	[3645]	U16	-
POS_ZSW1	Pos status word 1	221	r2089[3]	[2466]	U16	-
POS_ZSW2	Pos status word 2	223	r2089[4]	[2467]	U16	-
FAULT_CODE	Fault code	301	r2131	[8060]	U16	-
WARN_CODE	Alarm code	303	r2132	[8065]	U16	-
E_DIGITAL_1	Digital input (16 Bit)	307	r2089[3]	[2500]	U16	-
E_ZSW1	Status word 1 for Active Infeed	321	r2089[1]	[2457]	U16	-
ZSW1_BM	Status word 1, variant for BM	323	r2089[0]	[2428]	U16	-
ZSW2_BM	Status word 2, variant for BM	325	r2089[1]	[2429]	U16	-
E_ZSW1_BM	Status word 1 for Infeed, variant for BM (ALM, BLM, SLM)	327	r2080	[2430]	U16	-
CU_ZSW1	Status word 1 for Control Unit	501	r2089[1]	[2496]	U16	-

Send words 1...16  
p2051[0...15] WORD  
r2053[0...15] WORD  
p2061[0...14] DWORD  
r2063[0...14] DWORD

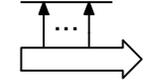

Telegram assignment according to p0922 [2415] ... [2423]

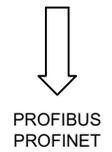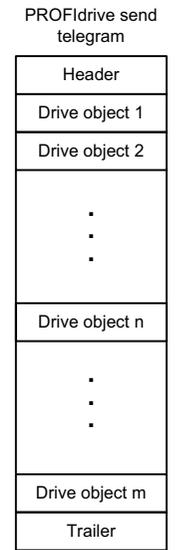

<1> Data type according to the PROFdrive profile:  
I16 = Integer16, I32 = Integer32, U16 = Unsigned16, U32 = Unsigned32  
<2> Only for SINAMICS S120.

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, S_INF, SERVO, TM41, VECTOR					fp_2450_54_eng.vsd	Function diagram	
PROFdrive - PZD send signals interconnection, manufacture specific					27.06.13 V04.08.00	S120/S150/G130/G150	
- 2450 -							

Fig. 3-40 2450 – PZD send signals interconnection, manufacturer-specific

Fig. 3-41 2451 – ZSW1 status word interconnection (p2038 = 2)

Signal sources for ZSW1 in Interface Mode VIK-NAMUR (p2038 = 2)						<1>
Signal	Meaning	Interconnection parameters	[Function diagram] Internal status word	[Function diagram] Signal source	Inverted <2>	PROFdrive sampling time
ZSW1.0	1 = Ready for switching on	p2080[0] = r0899.0	[2503.7]	[2610]	-	
ZSW1.1	1 = Ready for operation (DC link loaded, pulses inhibited)	p2080[1] = r0899.1	[2503.7]	[2610]	-	
ZSW1.2	1 = Operation enabled (drive follows n_set)	p2080[2] = r0899.2	[2503.7]	[2610]	-	
ZSW1.3	1 = Fault present	p2080[3] = r2139.3	[2548.7]	[8060]	-	
ZSW1.4	1 = No coast down active (OFF2 inactive)	p2080[4] = r0899.4	[2503.7]	[2610]	-	
ZSW1.5	1 = No quick stop active (OFF3 inactive)	p2080[5] = r0899.5	[2503.7]	[2610]	-	
ZSW1.6	1 = Power-on inhibit active	p2080[6] = r0899.6	[2503.7]	[2610]	-	
ZSW1.7	1 = Alarm present	p2080[7] = r2139.7	[2548.7]	[8065]	-	
ZSW1.8	1 = Speed setpoint - actual value deviation within tolerance t_off	p2080[8] = r2197.7	[2534.7]	[8010]	-	
ZSW1.9	1 = Control requested <3>	p2080[9] = r0899.9	[2503.7]	[2503]	-	
ZSW1.10	1 = f or n comparison value reached/exceeded	p2080[10] = r2199.1	[2536.7]	[8010]	-	
ZSW1.11	1 = I, M, or P limit not reached	p2080[11] = r0056.13	[2522.7]	[6060]	✓	
ZSW1.12	Reserved	-	-	-	-	
ZSW1.13	1 = No motor overtemperature alarm	p2080[13] = r2135.14	[2548.7]	[8016]	✓	
ZSW1.14	1 = Motor rotates forwards (n_act ≥ 0) 0 = Motor rotates backwards (n_act < 0)	p2080[14] = r2197.3	[2534.7]	[8011]	-	
ZSW1.15	1 = Command Data Set selection CDS bit 0	<4> p2080[15] = r0836.0	-	-	-	

<1> Used in telegram 20.  
<2> The ZSW1 is generated using the binector-connector converter (BI: p2080[0...15], inversion: p2088[0]...p2088[0].15)

<3> The drive object is ready to accept data.  
<4> Interconnection is not disabled.

1	2	3	4	5	6	7	8
DO: VECTOR					fp_2451_54_eng.vsd	Function diagram	
PROFdrive - ZSW1 status word interconnection (p2038 = 2)					27.06.13 V04.08.00	S120/S150/G130/G150	
							- 2451 -

PROFIdrive sampling time

Signal sources for ZSW1 im Interface Mode SINAMICS (p2038 = 0) <1>					
Signal	Meaning	Interconnection parameters	[Function diagram] Internal status word	[Function diagram] signal source	Inverted <2>
ZSW1.0	1 = Ready for switching on	p2080[0] = r0899.0	[2503.7]	[2610]	-
ZSW1.1	1 = Ready for operation	p2080[1] = r0899.1	[2503.7]	[2610]	-
ZSW1.2	1 = Operation enabled	p2080[2] = r0899.2	[2503.7]	[2610]	-
ZSW1.3	1 = Fault present	p2080[3] = r2139.3	[2548.7]	[8060]	-
ZSW1.4	1 = No coast down active (OFF2 inactive)	p2080[4] = r0899.4	[2503.7]	[2610]	-
ZSW1.5	1 = No quick stop active (OFF3 inactive)	p2080[5] = r0899.5	[2503.7]	[2610]	-
ZSW1.6	1 = Switching on inhibited active	p2080[6] = r0899.6	[2503.7]	[2610]	-
ZSW1.7	1 = Alarm present	p2080[7] = r2139.7	[2548.7]	[8065]	-
ZSW1.8	1 = Speed setpoint - actual value deviation within tolerance t_off	p2080[8] = r2197.7	[2534.7]	[8010]	-
ZSW1.9	1 = Control requested <3>	p2080[9] = r0899.9	[2503.7]	[2503]	-
ZSW1.10	1 = f or n comparison value reached/exceeded	p2080[10] = r2199.1	[2536.7]	[8010]	-
ZSW1.11	1 = I, M, or P limit reached <4>	p2080[11] = r1407.7	[2522.7]	[5610] [6060] <5>	✓
ZSW1.12	1 = Open the holding brake	p2080[12] = r0899.12	[2503.7]	[2701]	-
ZSW1.13	1 = No motor overtemperature alarm	p2080[13] = r2135.14	[2548.7]	[8016]	✓
ZSW1.14	1 = Motor rotates forwards (n_act ≥ 0) 0 = Motor rotates backwards (n_act < 0)	p2080[14] = r2197.3	[2534.7]	[8010]	-
ZSW1.15	1 = No alarm, thermal overload, power unit	p2080[15] = r2135.15	[2548.7]	[8021]	✓

<1> Used in telegrams 1, 2, 3, 4, 5, 6, 352.  
 <2> The ZSW1 is generated using the binector-connector converter (BI: p2080[0...15], inversion: p2088[0].0...p2088[0].15).  
 <3> The drive object is ready to accept data.  
 <4> Not for VECTOR U/f.  
 <5> Only for SINAMICS S120.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2452_54_eng.vsd	Function diagram	
PROFIdrive - ZSW1 status word interconnection (p2038 = 0)					26.07.13 V04.08.00	S120/S150/G130/G150	
							- 2452 -

Fig. 3-42 2452 – ZSW1 status word interconnection (p2038 = 0)

Fig. 3-43 2454 – ZSW2 status word interconnection (p2038 = 0)

Signal sources for ZSW2 in Interface Mode SINAMICS (p2038 = 0)						<1>	
Signal	Meaning	Interconnection parameters	[Function diagram] internal status word	[Function diagram] signal source	Inverted	PROFdrive sampling time	
ZSW2.0	1 = Drive data set DDS effective, bit 0	p2081[0] = r0051.0	-	[8565]	-		
ZSW2.1	1 = Drive data set DDS effective, bit 1	p2081[1] = r0051.1	-	[8565]	-		
ZSW2.2	1 = Drive data set DDS effective, bit 2	p2081[2] = r0051.2	-	[8565]	-		
ZSW2.3	1 = Drive data set DDS effective, bit 3	p2081[3] = r0051.3	-	[8565]	-		
ZSW2.4	1 = Drive data set DDS effective, bit 4	p2081[4] = r0051.4	-	[8565]	-		
ZSW2.5	1 = Alarm class bit 0	p2081[5] = r2139.11	-	[2548]	-		
ZSW2.6	1 = Alarm class bit 1	p2081[6] = r2139.12	-	[2548]	-		
ZSW2.7	1 = Parking axis active	p2081[7] = r0896.0	-	-	-		
<3> <4> ZSW2.8	1 = Traverse to fixed endstop	p2081[8] = r1406.8	-	[2520]	-		
ZSW2.9	Reserved	-	-	-	-		
ZSW2.10	1 = Pulses enabled	p2082[13] = r0899.11	[2503.7]	[2610]	-		
ZSW2.11	1 = Motor data set changeover active	p2081[11] = r0835.0	-	-	-		
ZSW2.12	Slave sign-of-life bit 0	Implicitly interconnected	-	-	-		
ZSW2.13	Slave sign-of-life bit 1						
ZSW2.14	Slave sign-of-life bit 2						
ZSW2.15	Slave sign-of-life bit 3						
		<3>		<3> Only for SINAMICS S120.			
		<4>		<4> Not for Vector U/f.			
<1> Used in telegrams 2, 3, 4, 5, 6, 9, 110, 111.		<2>		<2> These signals are automatically interconnected for clock-cycle synchronous operation.			
1	2	3	4	5	6	7	8
DO: SERVO, VECTOR			fp_2454_54_eng.vsd		Function diagram		- 2454 -
PROFdrive - ZSW2 status word interconnection (p2038 = 0)			27.06.13 V04.08.00		S120/S150/G130/G150		

PROFIdrive sampling time


Signal sources for E_ZSW1									
Signal	Meaning	Interconnection parameters	[Function diagram] signal source			[Function diagram] internal status word			Inverted
			A_INF	B_INF <4>	S_INF <3>	A_INF	B_INF <4>	S_INF <3>	
ZSW1.0	1 = Ready for switching on	p2080[0] = r0899.0	[8932]	[8732]	[8832]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.1	1 = Ready for operation	p2080[1] = r0899.1	[8932]	[8732]	[8832]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.2	1 = Operation enabled	p2080[2] = r0899.2	[8932]	[8732]	[8832]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.3	1 = Fault present	p2080[3] = r2139.3	[8060]			[2548.7]			-
ZSW1.4	1 = No OFF2 effective	p2080[4] = r0899.4	[8932]	[8732]	[8832]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.5	Reserved	-	-	-	-	-	-	-	-
ZSW1.6	1 = Switching on inhibited	p2080[6] = r0899.6	[8932]	[8732]	[8832]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.7	1 = Alarm present	p2080[7] = r2139.7	[8065]			[2548.7]			-
ZSW1.8	Reserved	-	-	-	-	-	-	-	-
ZSW1.9	1 = PLC requests control <2>	p2080[9] = r0899.9	[8926]	[8726]	[8826]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.10	Reserved	-	-	-	-	-	-	-	-
ZSW1.11	1 = Precharging completed	p2080[11] = r0899.11	[8950]	[8750]	[8850]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.12	1 = Line contactor closed	p2080[12] = r0899.12	[8938]	[8738]	[8838]	[8926.7]	[8726.7]	[8826.7]	-
ZSW1.13	Reserved	-	-	-	-	-	-	-	-
ZSW1.14	Reserved	-	-	-	-	-	-	-	-
ZSW1.15	Reserved	-	-	-	-	-	-	-	-

<1> Used in telegram 370.  
 <2> The drive object is ready to accept data.  
 <3> Only for S120.  
 <4> Only for S120 and G150.  
 <5> Not for G130.


1	2	3	4	5	6	7	8
DO: A_INF, B_INF, S_INF					fp_2457_54_eng.vsd	Function diagram	
PROFIdrive - E_ZSW1 status word infeed interconnection					19.06.15 V04.08.00	S120/S150/G130/G150	
- 2457 -							

Fig. 3-44 2457 – E\_ZSW1 status word, infeed interconnection

Fig. 3-45 2468 – IF1 receive telegram, free interconnection via BICO (p0922 = 999)

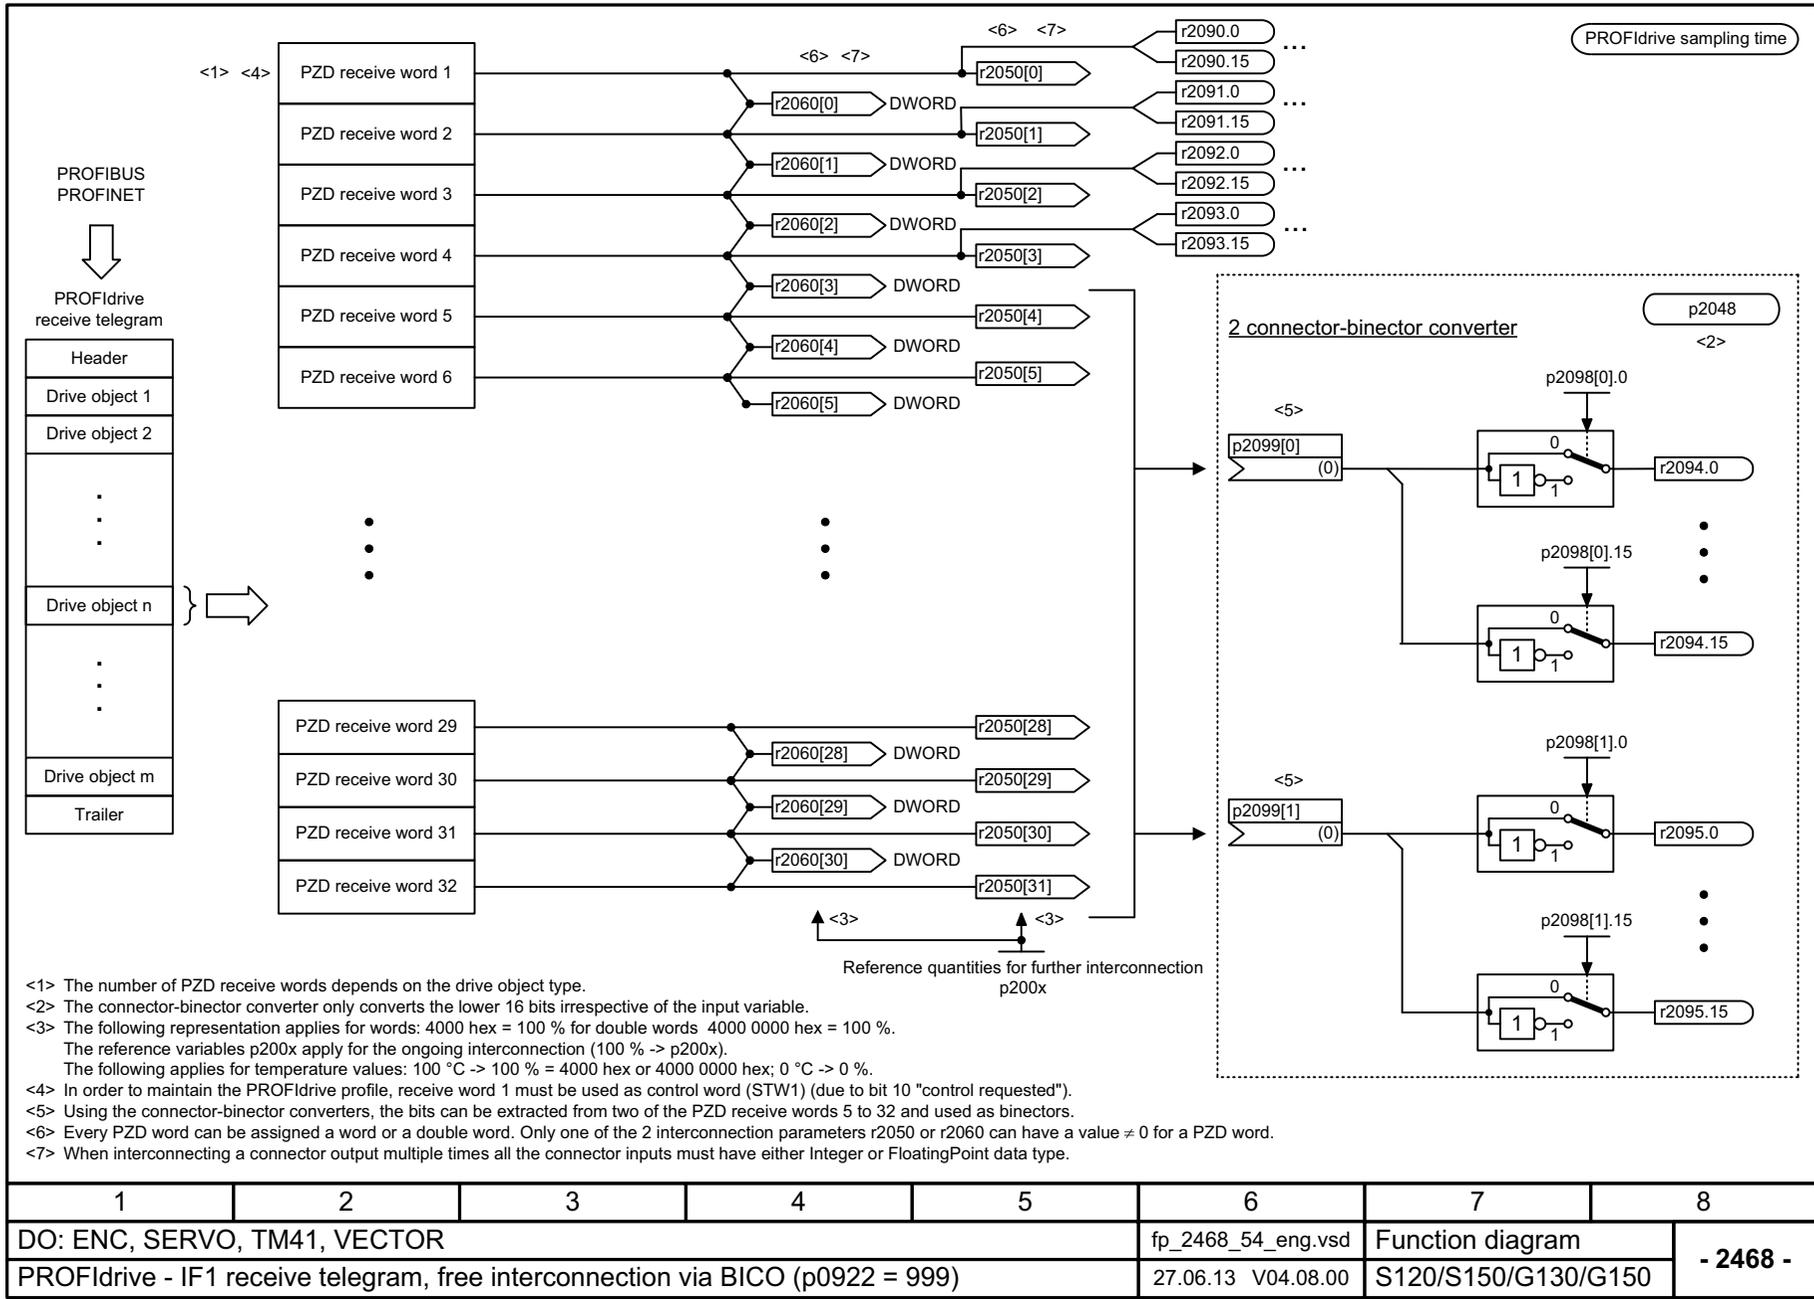

1	2	3	4	5	6	7	8
DO: ENC, SERVO, TM41, VECTOR					fp_2468_54_eng.vsd	Function diagram	
PROFdrive - IF1 receive telegram, free interconnection via BICO (p0922 = 999)					27.06.13 V04.08.00	S120/S150/G130/G150	
							- 2468 -

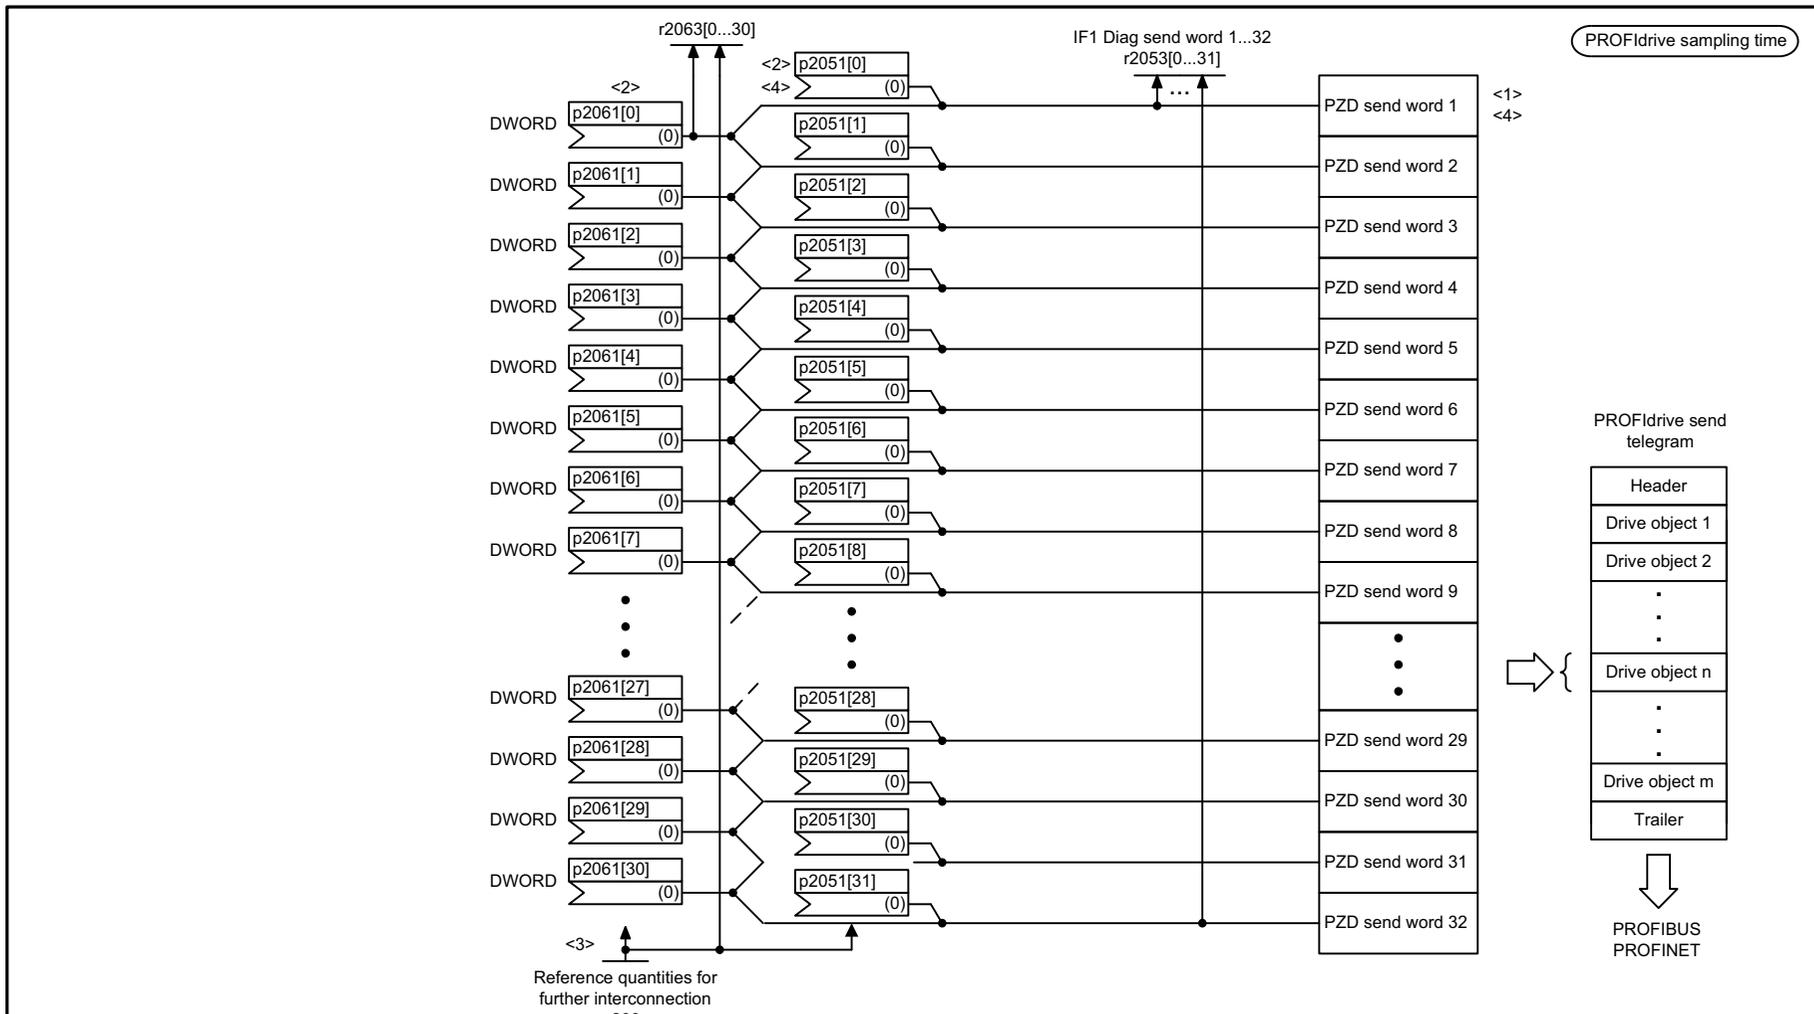



- <1> The number of PZD send words depends on the drive object type.
- <2> A PZD send word can either be supplied via connector input p2051[x] (WORD) or via p2061[x] (DWORD). The two corresponding connector inputs cannot be interconnected.
- <3> Physical word and double word values are inserted in the telegram as referenced variables. p200x apply as reference variables (telegram contents = 4000 hex or 4000 0000 hex in the case of double words, if the input variable has the value p200x). The following applies for temperature values: 100° C -> 100 % = 4000 hex or 4000 0000 hex; 0° C -> 0 %.
- <4> To comply with the PROFIdrive profile, send word 1 must be used as status word 1 (ZSW1), not as DWORD.

Fig. 3-46 2470 – IF1 send telegram, free interconnection via BICO (p0922 = 999)

1	2	3	4	5	6	7	8
DO: ENC, SERVO, TM41, VECTOR					fp_2470_54_eng.vsd	Function diagram	
PROFIdrive - IF1 send telegram, free interconnection via BICO (p0922 = 999)					27.06.13 V04.08.00	S120/S150/G130/G150	

Fig. 3-47 2472 - IF1 status words, free interconnection

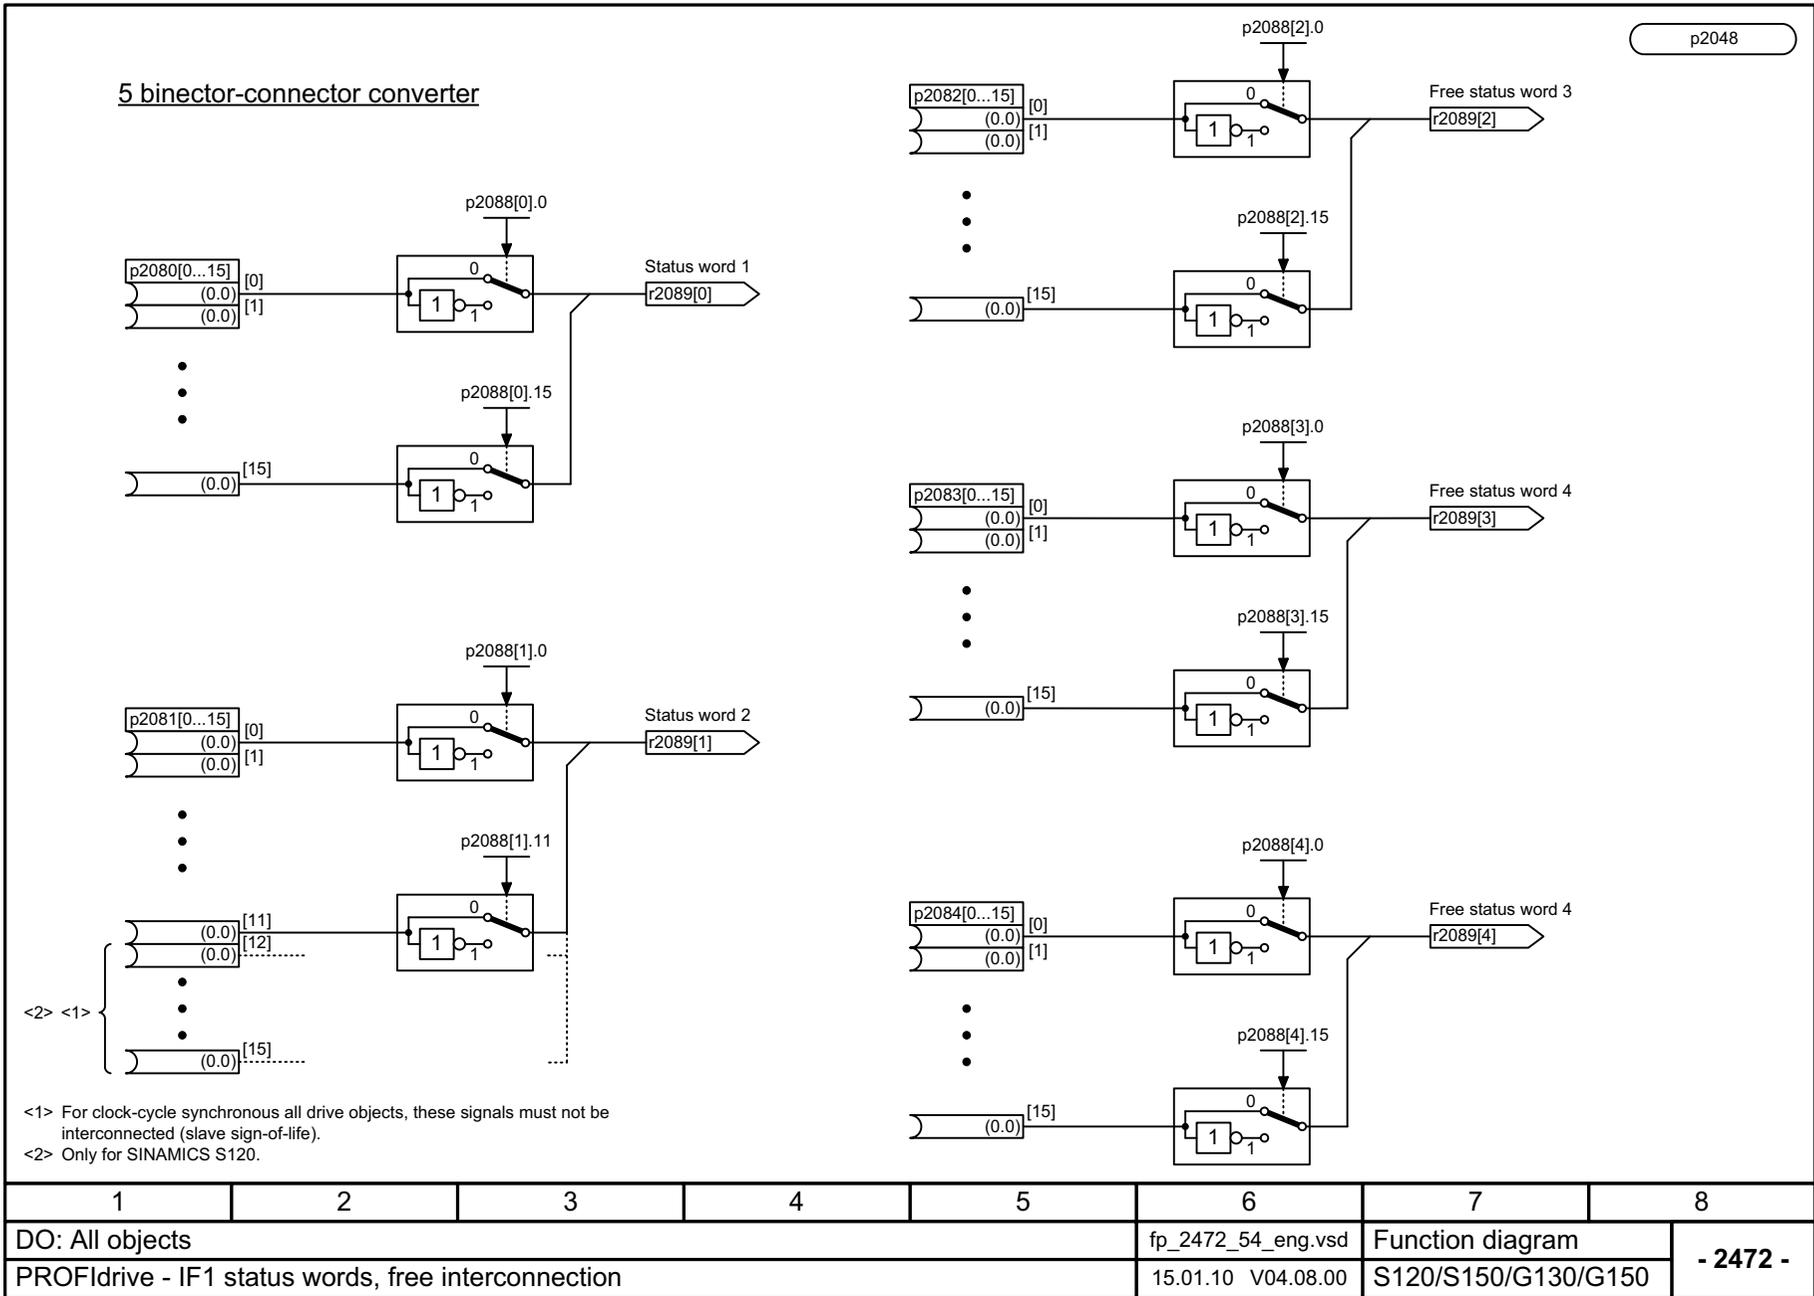

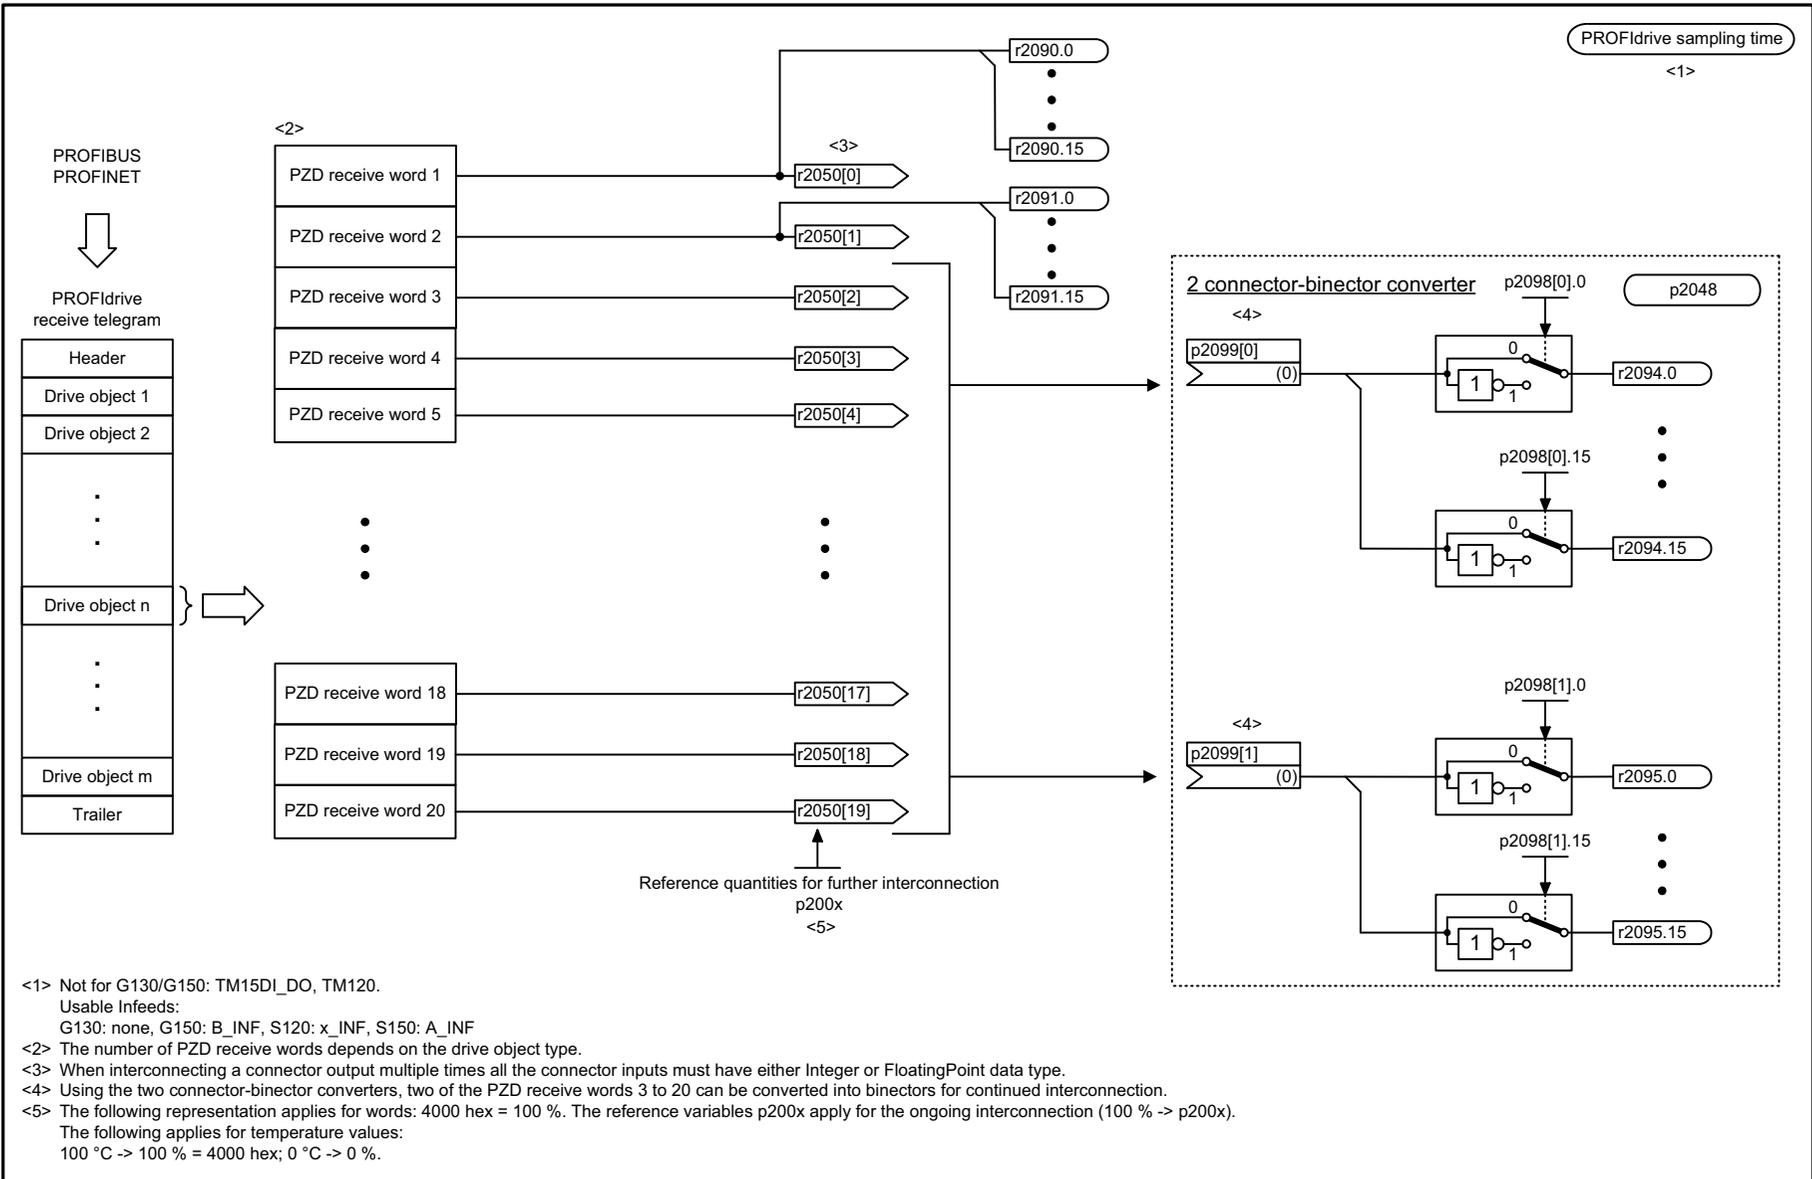


- <1> Not for G130/G150: TM15DI\_DO, TM120.  
Usable Infeeds:  
G130: none, G150: B\_INF, S120: x\_INF, S150: A\_INF
- <2> The number of PZD receive words depends on the drive object type.
- <3> When interconnecting a connector output multiple times all the connector inputs must have either Integer or FloatingPoint data type.
- <4> Using the two connector-binector converters, two of the PZD receive words 3 to 20 can be converted into binectors for continued interconnection.
- <5> The following representation applies for words: 4000 hex = 100 %. The reference variables p200x apply for the ongoing interconnection (100 % -> p200x).  
The following applies for temperature values:  
100 °C -> 100 % = 4000 hex; 0 °C -> 0 %.

Fig. 3-48 2481 - IF1 receive telegram, free interconnection via BICO (p0922 = 999)

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, CU_G, CU_S, R_INF, S_INF, TB30, TM15DI_DO, TM31, TM120, TM150					fp_2481_54_eng.vsd	Function diagram	
PROFdrive - IF1 receive telegram, free interconnection via BICO (p0922 = 999)					18.03.16 V04.08.00	S120/S150/G130/G150	

Fig. 3-49 2483 – IF1 send telegram, free interconnection via BICO (p0922 = 999)

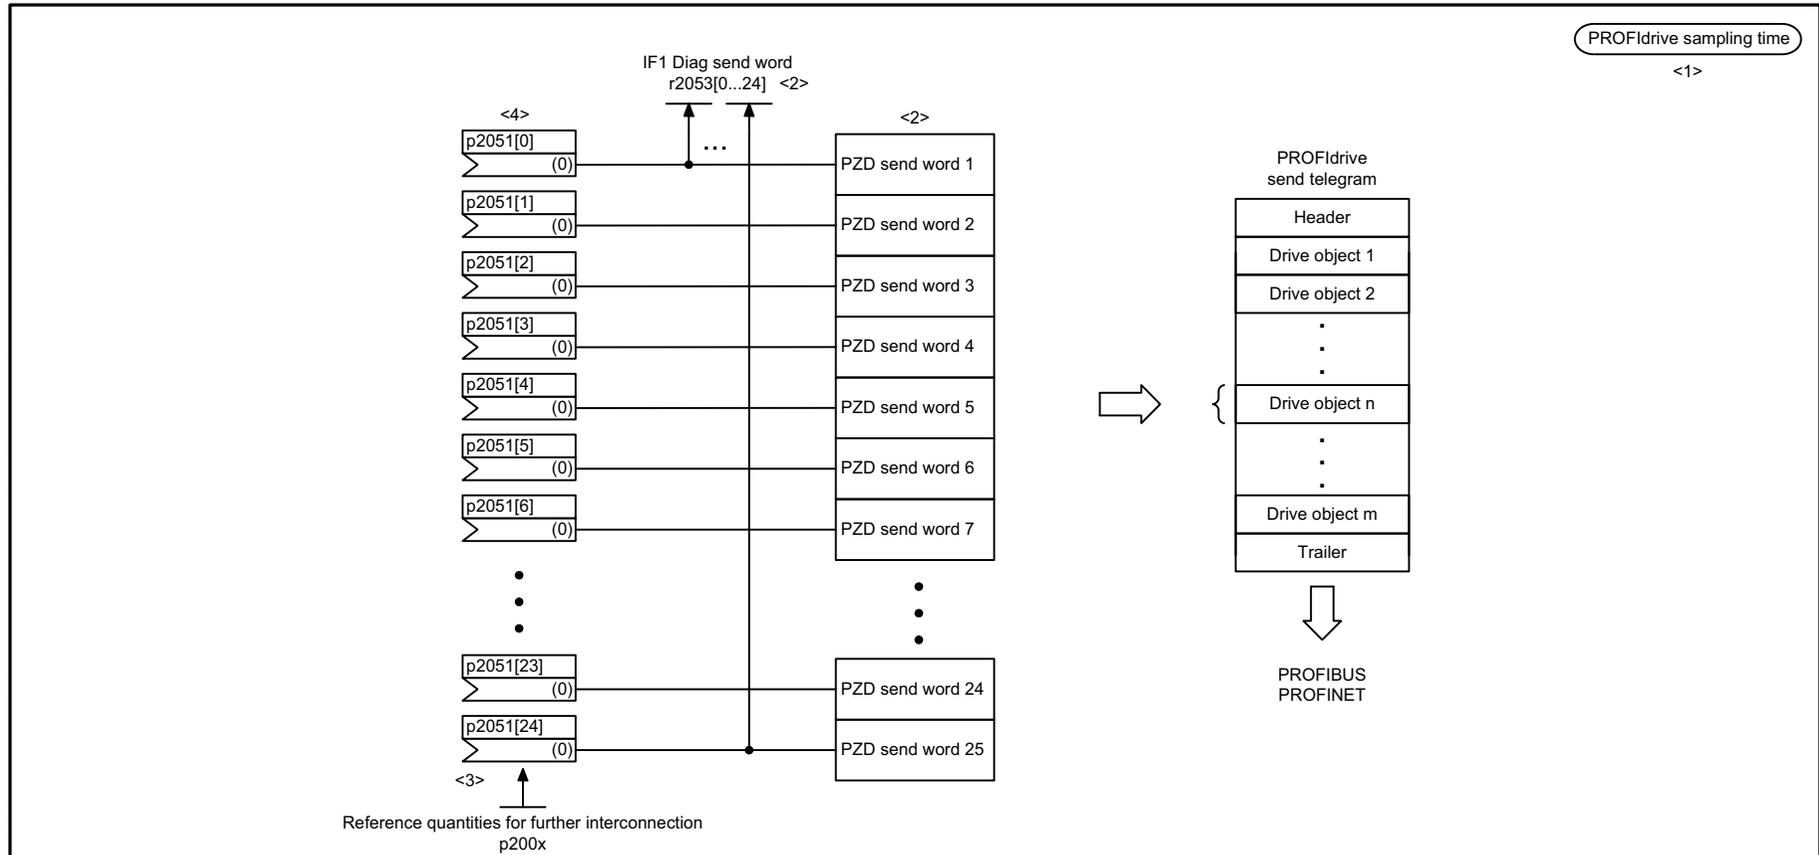

- <1> Not for G130/G150: TM15DI\_DO, TM120.  
Usable infeeds:  
G130: none, G150: B\_INF, S120: x\_INF, S150: A\_INF
- <2> The number of PZD send words depends on the drive object type.
- <3> The following representation applies for words: 4000 hex = 100 %.  
The reference variables p200x apply for the ongoing interconnection (100 % -> p200x).  
The following applies for temperature values: 100 °C -> 100 % = 4000 hex; 0 °C -> 0 %.
- <4> Using the binector/connector converters at [2472], bits of 5 send words can be interconnected with any binectors.

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, CU_G, CU_S, R_INF, S_INF, TB30, TM15DI_DO, TM31, TM120, TM150					fp_2483_54_eng.vsd	Function diagram	
PROFdrive - IF1 send telegram, free interconnection via BICO (p0922 = 999)					18.03.16 V04.08.00	S120/S150/G130/G150	


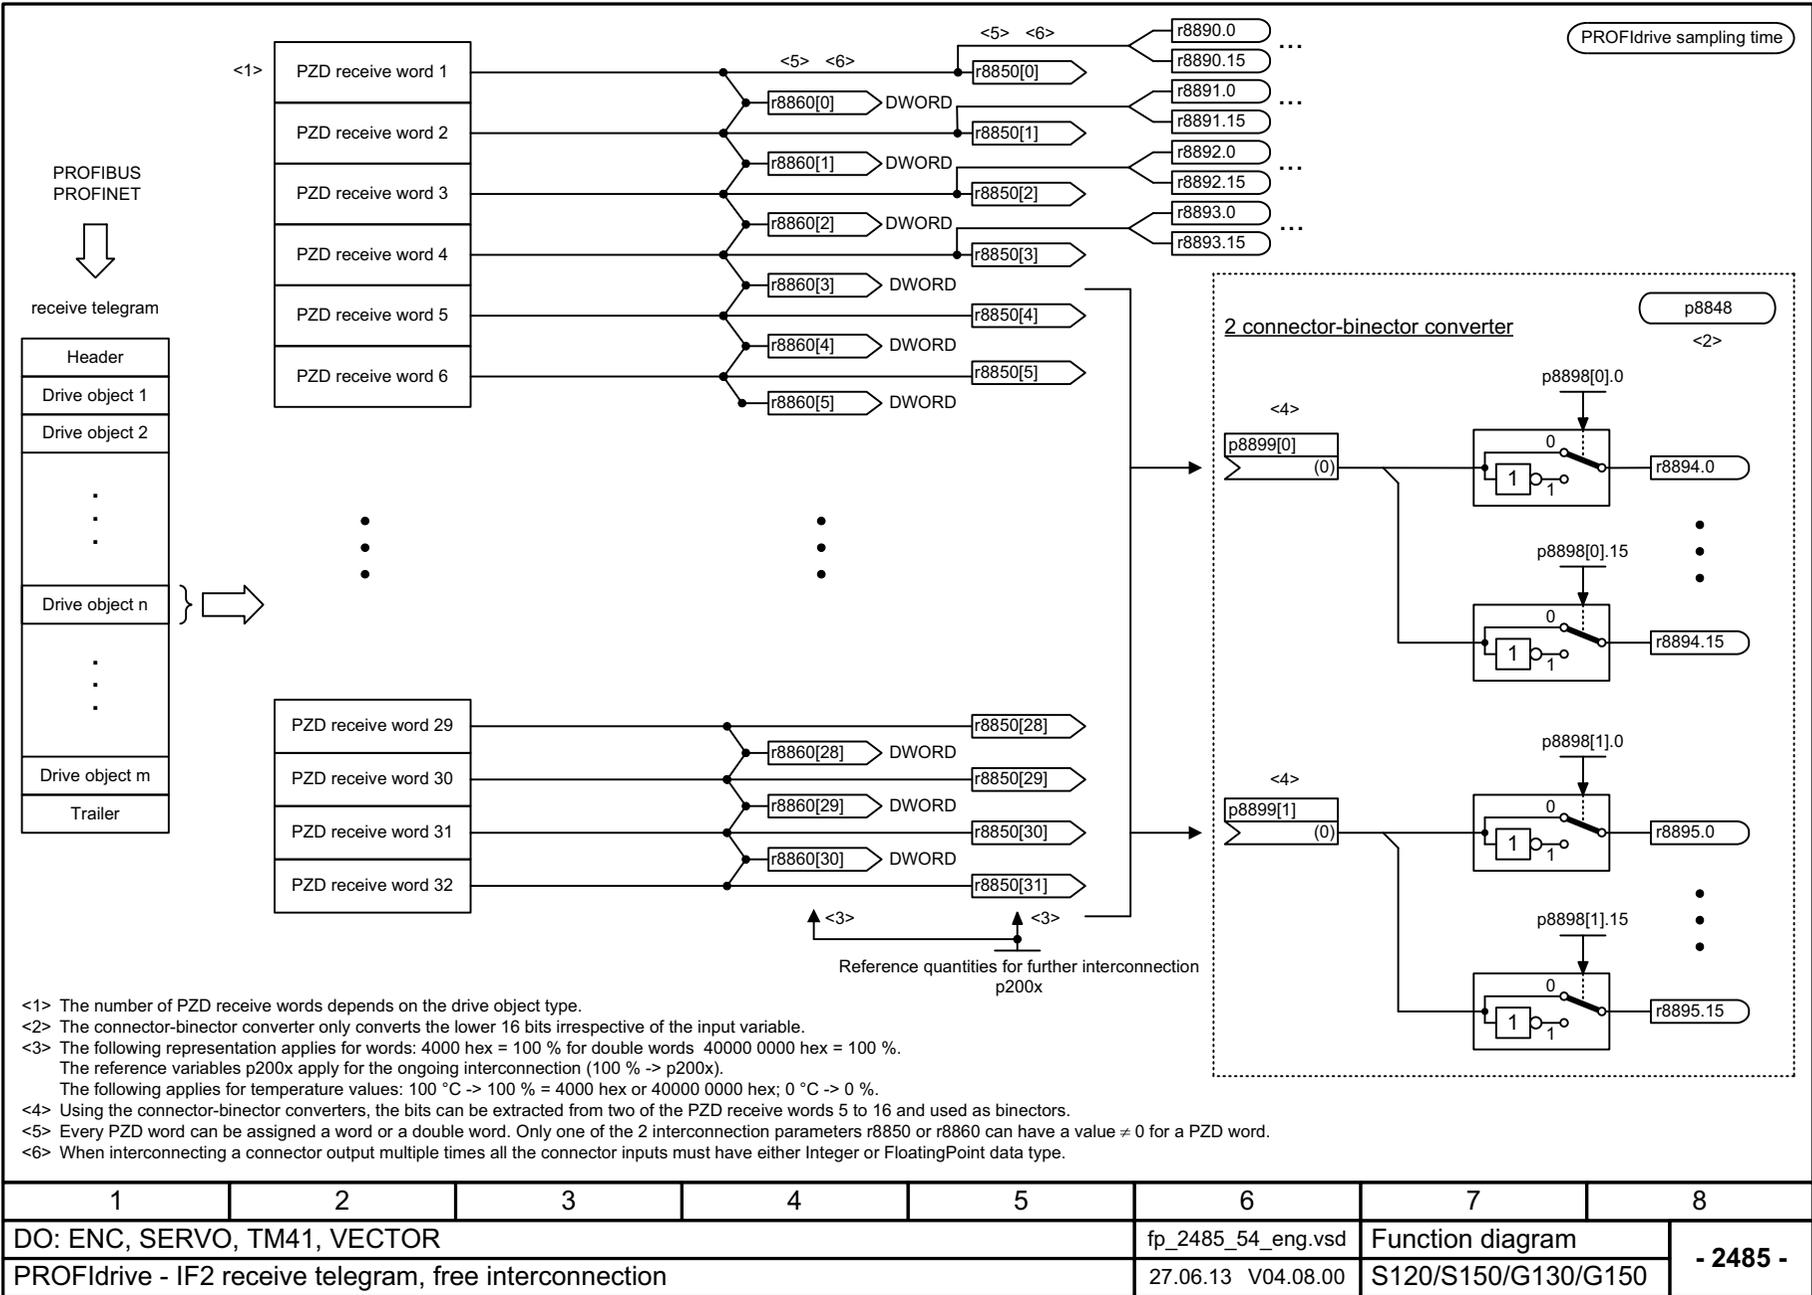


Fig. 3-50 2485 – IF2 receive telegram, free interconnection


1	2	3	4	5	6	7	8
DO: ENC, SERVO, TM41, VECTOR					fp_2485_54_eng.vsd	Function diagram	
PROFdrive - IF2 receive telegram, free interconnection					27.06.13 V04.08.00	S120/S150/G130/G150	
							<b>- 2485 -</b>

Fig. 3-51 2487 – IF2 send telegram, free interconnection

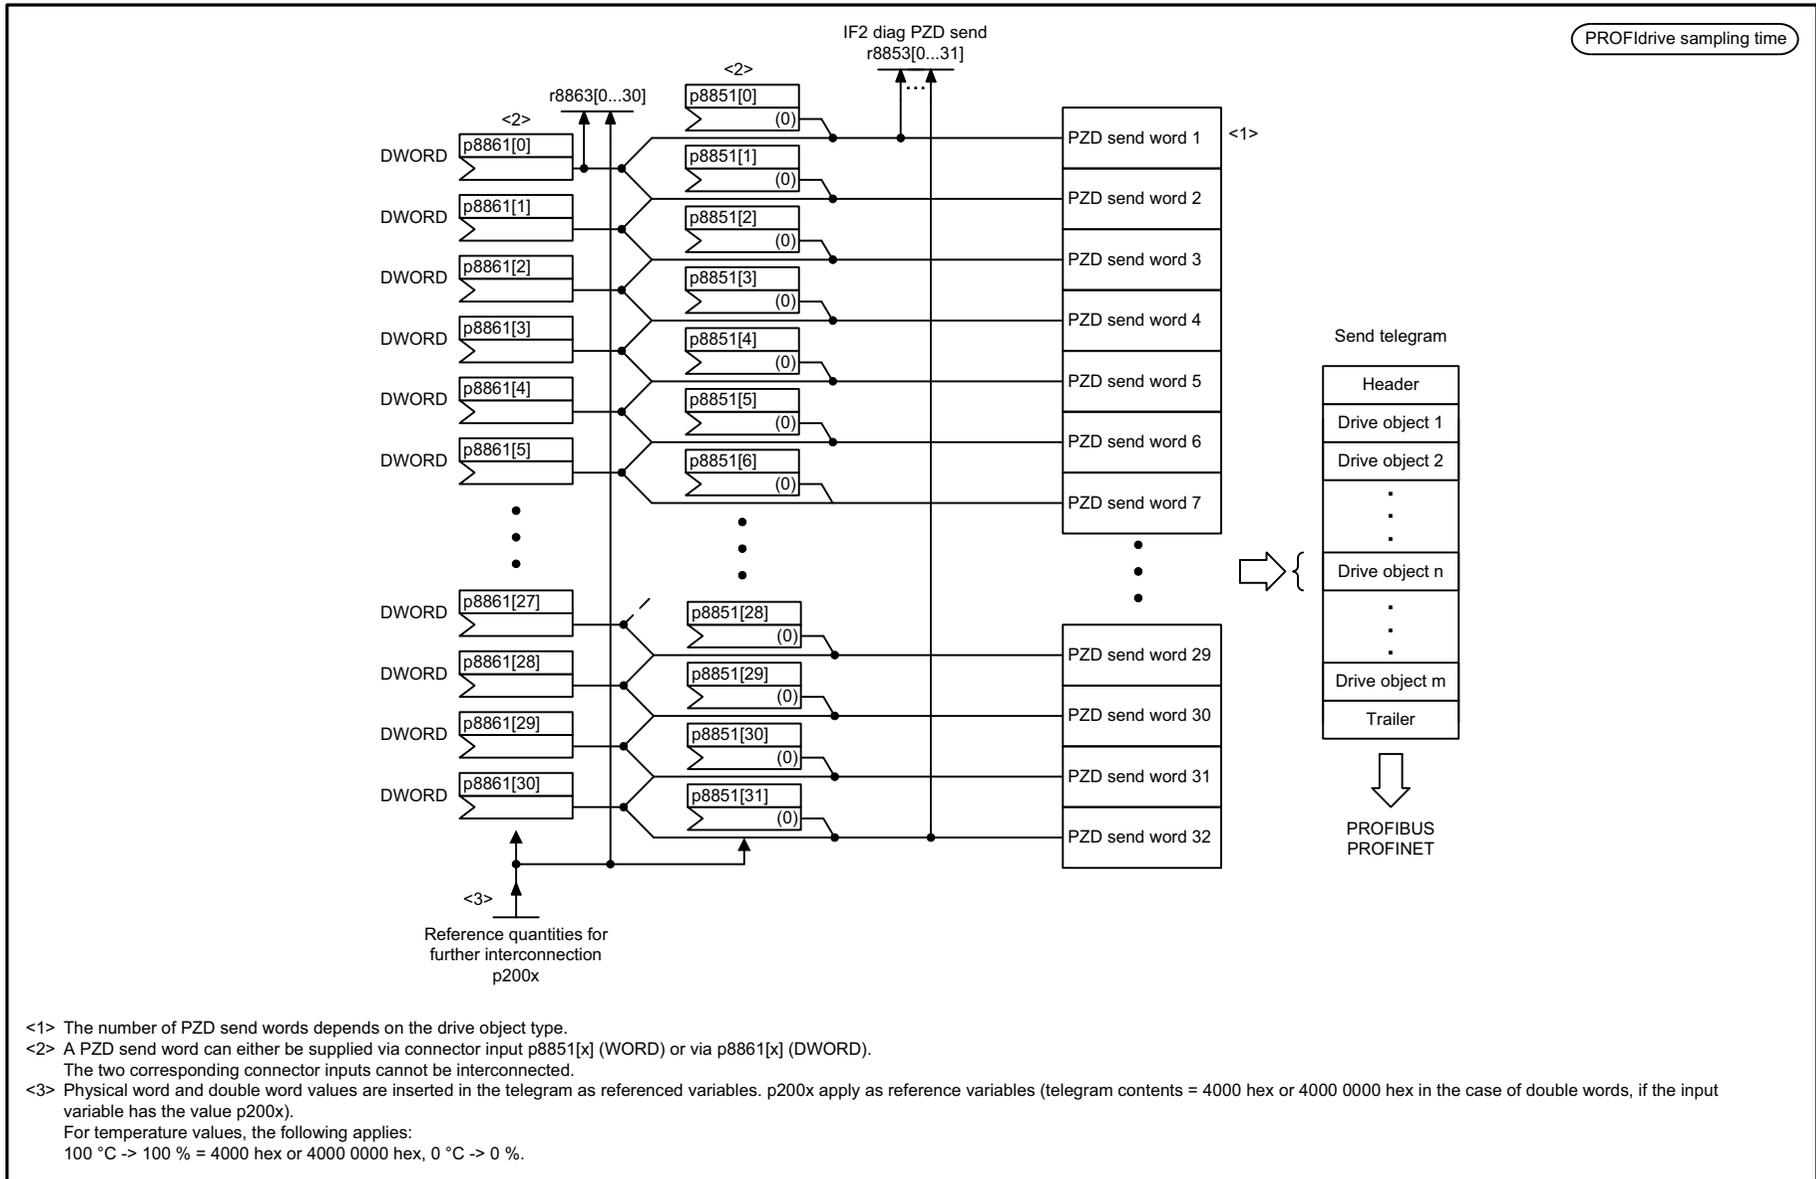

- <1> The number of PZD send words depends on the drive object type.
- <2> A PZD send word can either be supplied via connector input p8851[x] (WORD) or via p8861[x] (DWORD). The two corresponding connector inputs cannot be interconnected.
- <3> Physical word and double word values are inserted in the telegram as referenced variables. p200x apply as reference variables (telegram contents = 4000 hex or 4000 0000 hex in the case of double words, if the input variable has the value p200x).  
For temperature values, the following applies:  
100 °C -> 100 % = 4000 hex or 4000 0000 hex, 0 °C -> 0 %.

1	2	3	4	5	6	7	8
DO: ENC, SERVO, TM41, VECTOR					fp_2487_54_eng.vsd	Function diagram	
PROFIdrive - IF2 send telegram, free interconnection					18.03.16 V04.08.00	S120/S150/G130/G150	
							- 2487 -

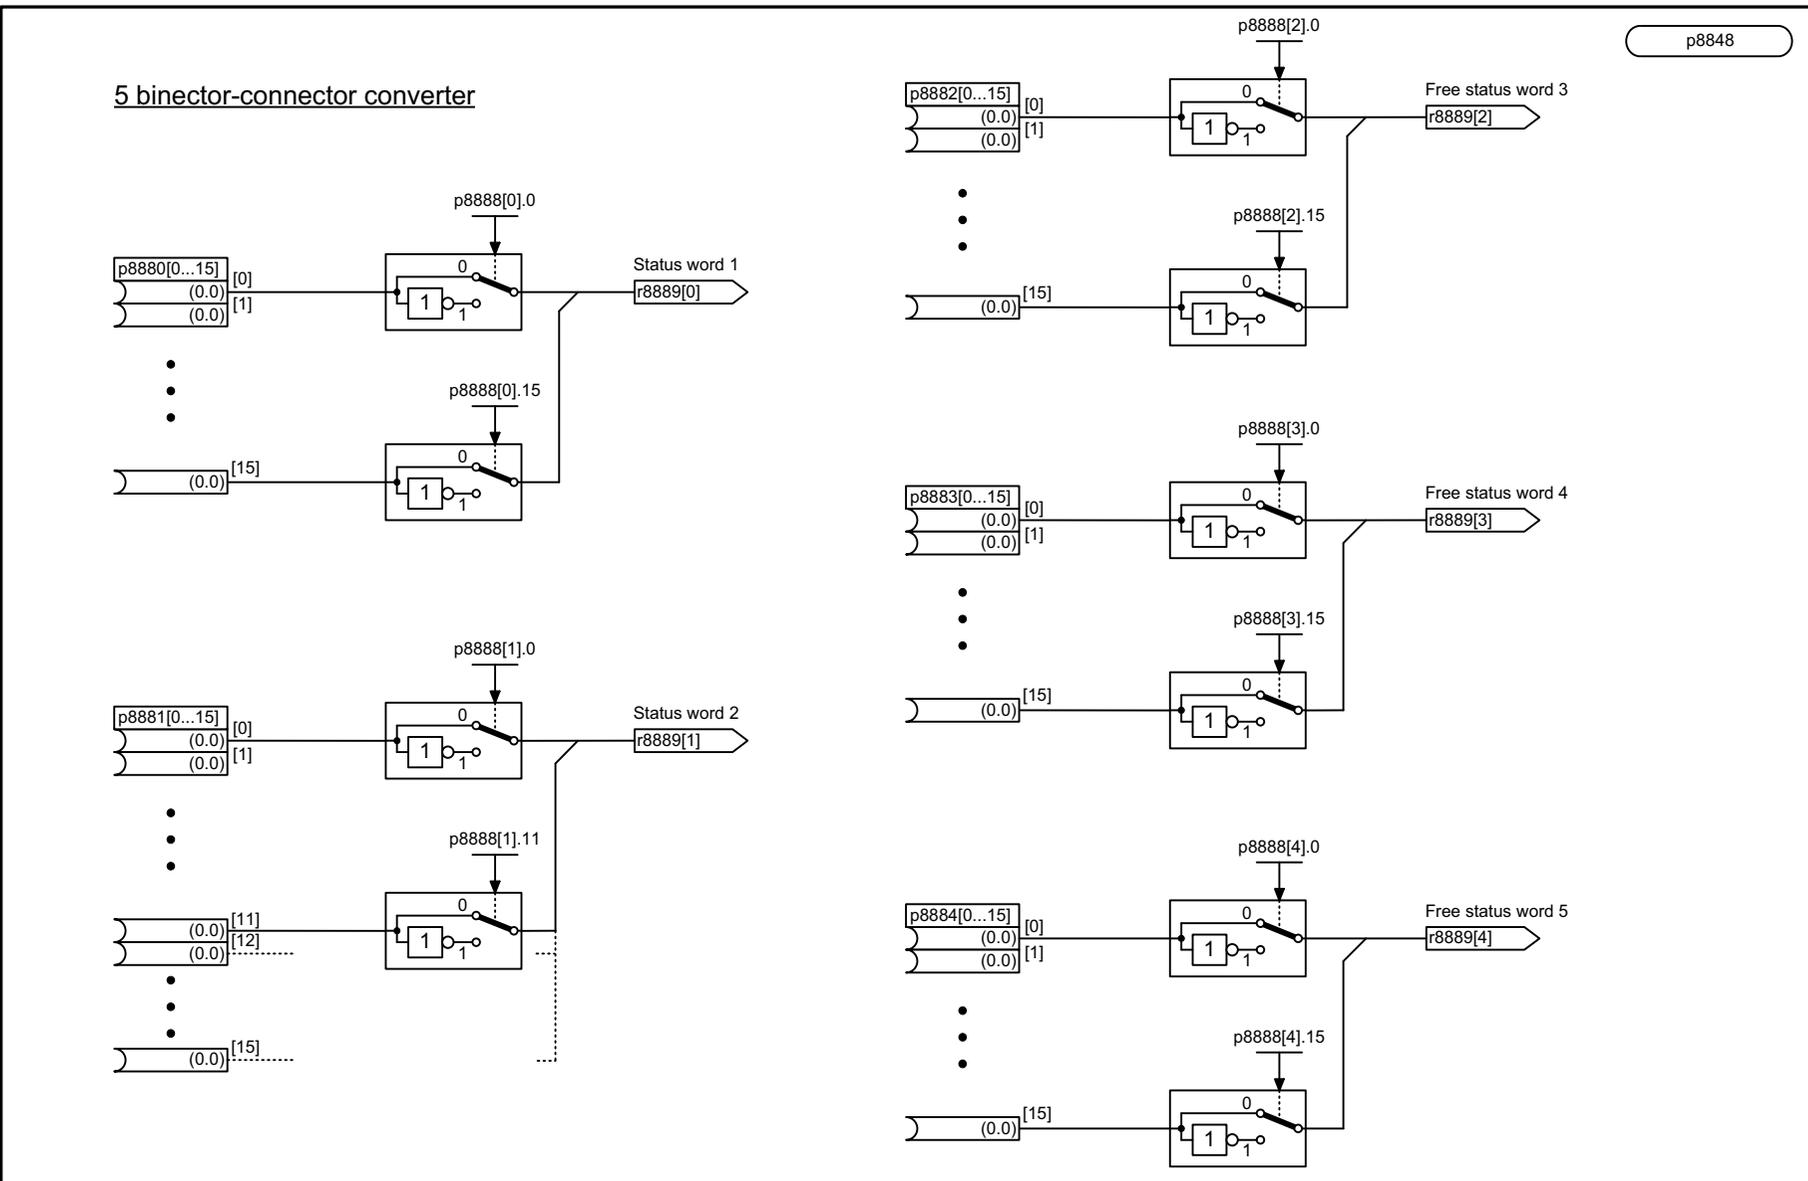


1	2	3	4	5	6	7	8
DO: A_INF, B_INF, ENC, S_INF, SERVO, VECTOR					fp_2489_54_eng.vsd	Function diagram	
PROFIdrive - IF2 status words, free interconnection					20.01.10 V04.08.00	S120/S150/G130/G150	

p8848


5 binector-connector converter

Fig. 3-52 2489 – IF2 status words, free interconnection

Fig. 3-53 2491 – IF2 receive telegram, free interconnection

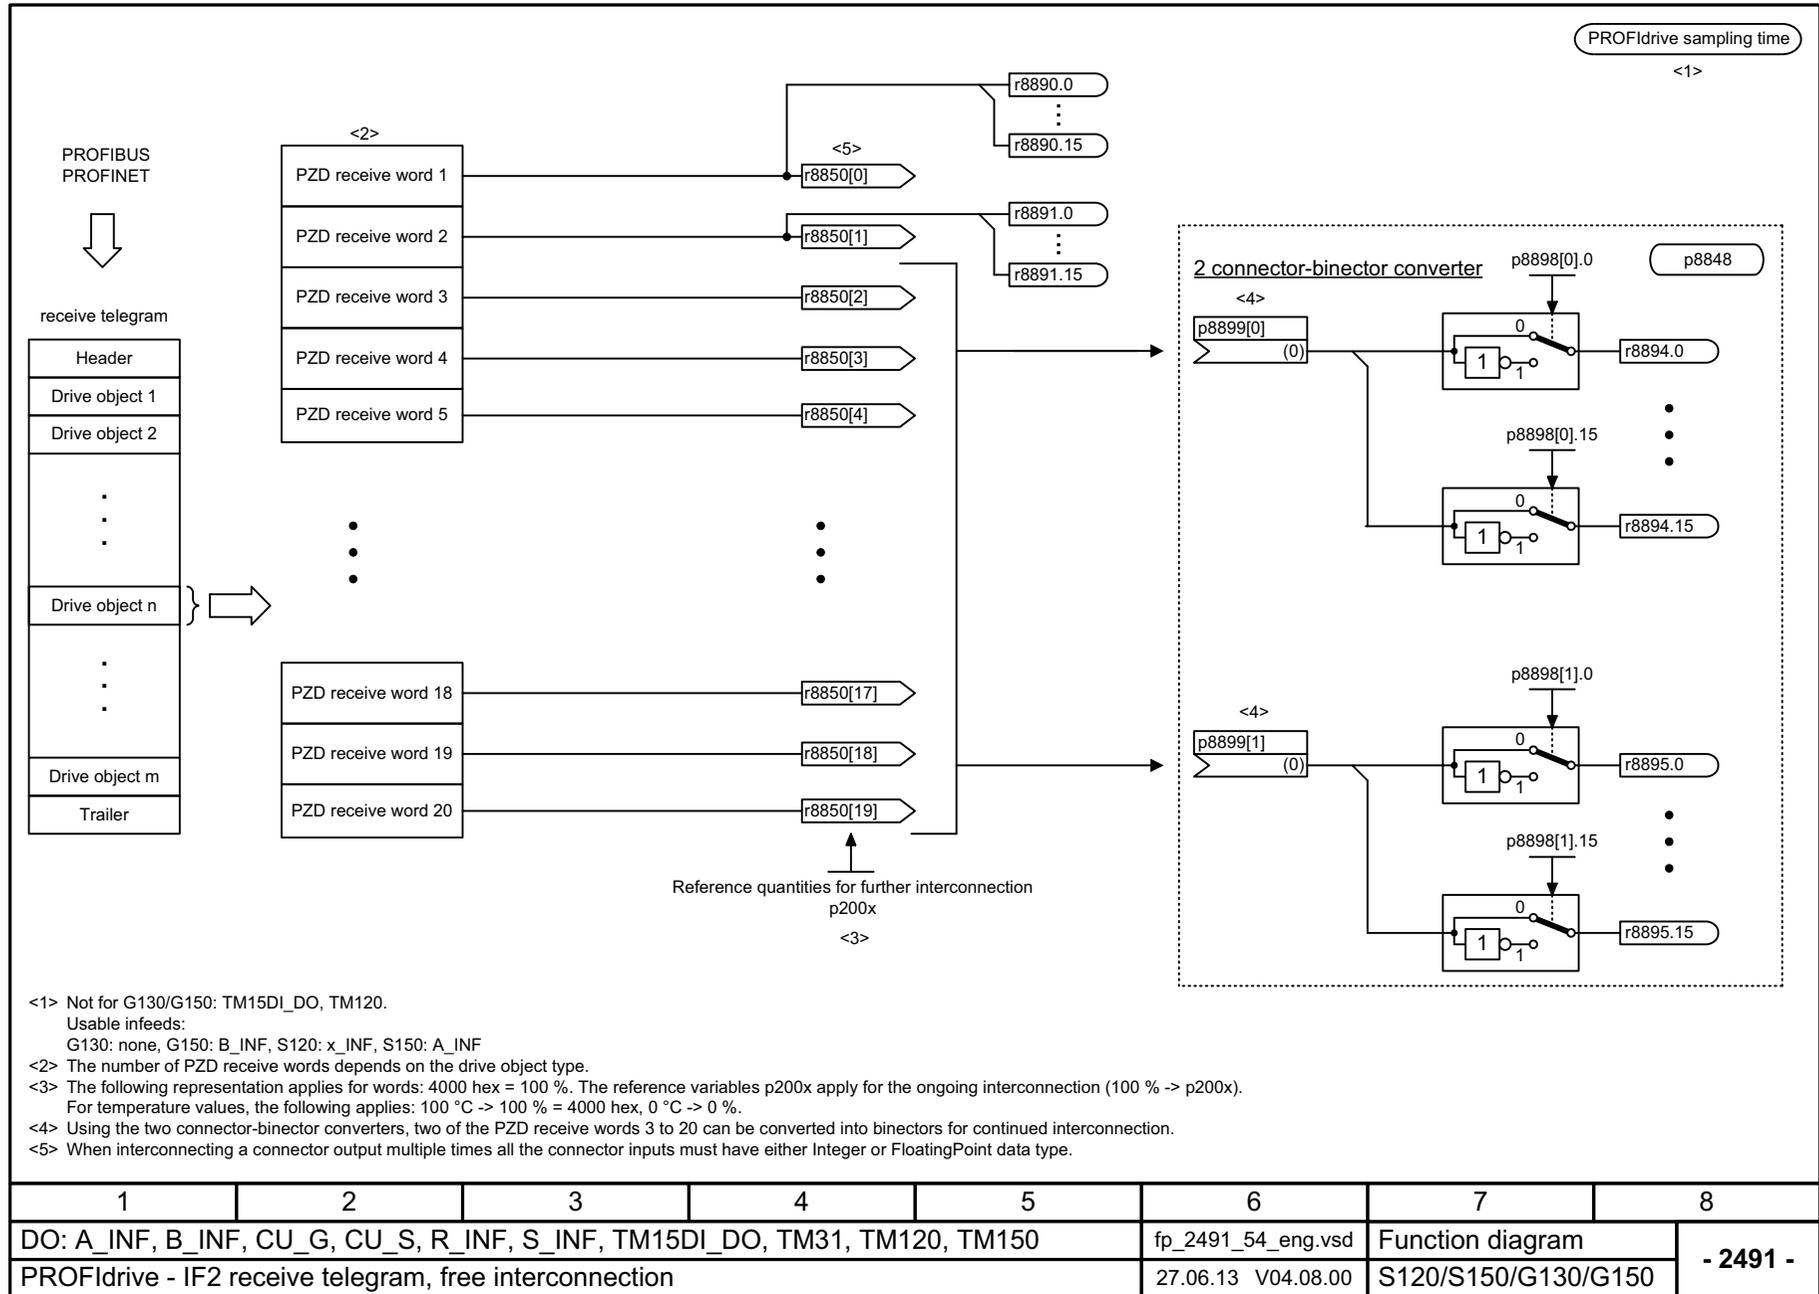

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, CU_G, CU_S, R_INF, S_INF, TM15DI_DO, TM31, TM120, TM150					fp_2491_54_eng.vsd	Function diagram	
PROFIdrive - IF2 receive telegram, free interconnection					27.06.13 V04.08.00	S120/S150/G130/G150	
							- 2491 -

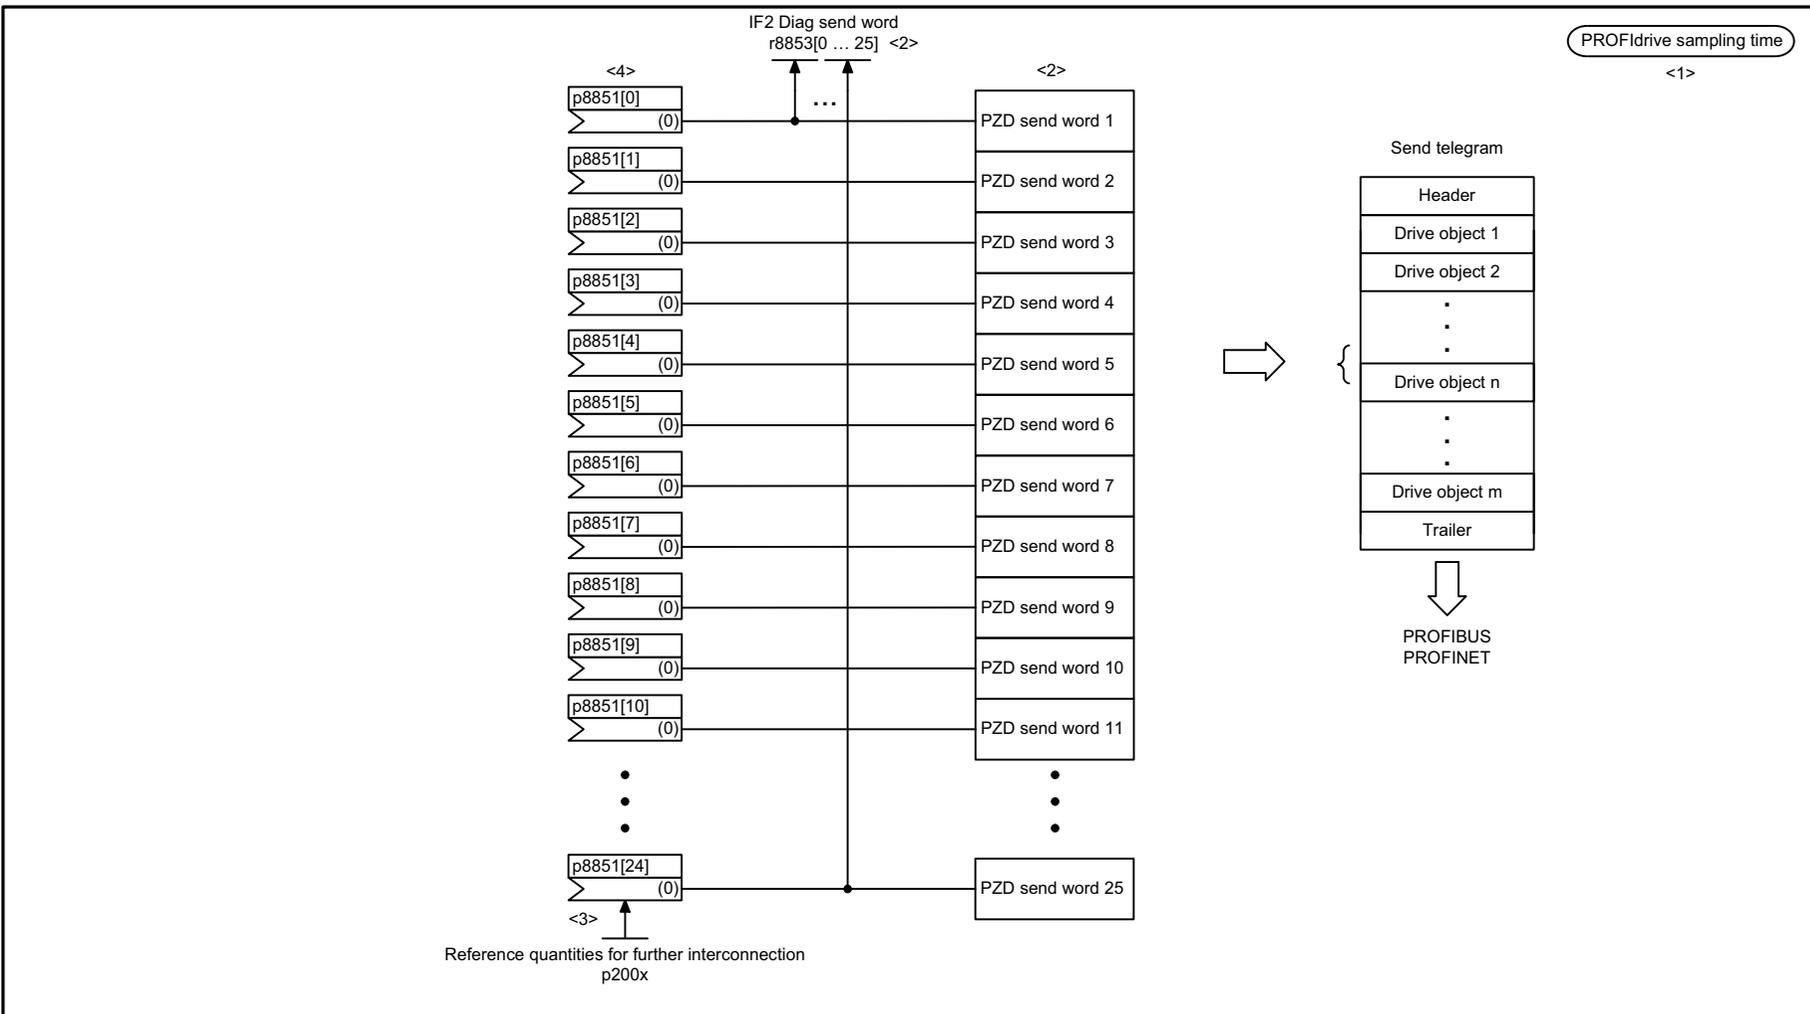

- <1> Not for G130/G150: TM15DI\_DO, TM120.  
Usable infeeds:  
G130: none, G150: B\_INF, S120: x\_INF, S150: A\_INF
- <2> The number of PZD send words depends on the drive object type.
- <3> The following representation applies for words: 4000 hex = 100 %. The reference variables p200x apply for the ongoing interconnection (100 % -> p200x).  
For temperature values, the following applies: 100 °C -> 100 % = 4000 hex, 0 °C -> 0 %.
- <4> Using the binector/connector converters at [2489], bits of 5 send words can be interconnected with any binectors.

Fig. 3-54 2493 – IF2 send telegram, free interconnection

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, CU_G, CU_S, R_INF, S_INF, TM15DI_DO, TM31, TM120, TM150					fp_2493_54_eng.vsd	Function diagram	
PROFIdrive - IF2 send telegram, free interconnection					18.03.16 V04.08.00	S120/S150/G130/G150	

Fig. 3-55 2495 – CU\_STW1 control word 1, Control Unit interconnection

Signal targets for CU_STW1						<1>	
Signal	Meaning	Interconnection parameters	[Function diagram] internal control word	[Function diagram] signal target	Inverted	PROFIdrive sampling time	
CU_STW1.0	Central measuring probe, synchronizing signal source	p0681[0] = r2090.0	-	-	-		
CU_STW1.1	RTC real time synchronization PING	p3104 = r2090.1	-	-	-		
CU_STW1.2	ESR-Trigger <2>	p0890.0 = r2090.2	-	-	-		
CU_STW1.3	Reserved	-	-	-	-		
CU_STW1.4	Reserved	-	-	-	-		
CU_STW1.5	Reserved	-	-	-	-		
CU_STW1.6	Reserved	-	-	-	-		
CU_STW1.7	 1. Acknowledge faults	p2103[0] = r2090.7	-	-	-		
CU_STW1.8	Reserved	-	-	-	-		
CU_STW1.9	Reserved	-	-	-	-		
CU_STW1.10	Acknowledgment automatically suppressed	p3116 = r2090.10	-	-	-		
CU_STW1.11	Reserved	-	-	-	-		
CU_STW1.12	Master sign-of-life bit 0	p2045 = r2050[0]	-	-	-		
CU_STW1.13	Master sign-of-life bit 1						
CU_STW1.14	Master sign-of-life bit 2						
CU_STW1.15	Master sign-of-life bit 3						
<1> Used in telegrams 390 to 394. <2> Only available when the function module "Extended setpoint channel" is active (r0108.9 = 1).							
1	2	3	4	5	6	7	8
DO: CU_G, CU_S				fp_2495_54_eng.vsd	Function diagram		- 2495 -
PROFIdrive - CU_STW1 control word 1, Control Unit interconnection				27.06.13 V04.08.00	S120/S150/G130/G150		

PROFIdrive sampling time

Signal sources for CU_ZSW1						<1>
Signal	Meaning	Interconnection parameters	[Function diagram] Internal status word	[Function diagram] signal source	Inverted <2>	
CU_ZSW1.0	Reserved	-	-	-	-	
CU_ZSW1.1	Reserved	-	-	-	-	
CU_ZSW1.2	Reserved	-	-	-	-	
CU_ZSW1.3	1 = Fault present	p2081[3] = r2139.3	-	-	-	
CU_ZSW1.4	Reserved	-	-	-	-	
CU_ZSW1.5	Reserved	-	-	-	-	
CU_ZSW1.6	Reserved	-	-	-	-	
CU_ZSW1.7	1 = Alarm present	p2081[7] = r2139.7	-	-	-	
CU_ZSW1.8	1 = System time synchronized (SYNC)	p2081[8] = r0899.8	-	-	-	
CU_ZSW1.9	1 = No alarm present	p2081[9] = r3114.9	-	-	✓	
CU_ZSW1.10	1 = No fault present	p2081[10] = r3114.10	-	-	✓	
CU_ZSW1.11	1 = No safety message present	p2081[11] = r3114.11	-	-	✓	
CU_ZSW1.12	Slave sign-of-life bit 0	Implicitly interconnected	-	-	-	
CU_ZSW1.13	Slave sign-of-life bit 1					
CU_ZSW1.14	Slave sign-of-life bit 2					
CU_ZSW1.15	Slave sign-of-life bit 3					

<1> Used in telegrams 390 to 394.

<2> The ZSW1 is generated using the binector-connector converter (BI: p2080[0...15], inversion: p2088[0].0...p2088[0].15).

1	2	3	4	5	6	7	8
DO: CU_G, CU_S			fp_2496_54_eng.vsd			Function diagram	
PROFIdrive - CU_ZSW1 status word 1, Control Unit interconnection			27.06.13 V04.08.00			S120/S150/G130/G150	
							- 2496 -

Fig. 3-56 2496 – CU\_ZSW1 status word 1, Control Unit interconnection

Fig. 3-57 2497 – A\_DIGITAL interconnection

Signal targets for A_DIGITAL						<1>
Signal	Meaning		Interconnection parameters <3>	[Function diagram] internal status word	[Function diagram] signal target	Inverted
A_DIGITAL.0	Digital output 8 (DI/DO 8)	<2>	p0738 = r2091.0	-	-	-
A_DIGITAL.1	Digital output 9 (DI/DO 9)	<2>	p0739 = r2091.1	-	-	-
A_DIGITAL.2	Digital output 10 (DI/DO 10)	<2>	p0740 = r2091.2	-	-	-
A_DIGITAL.3	Digital output 11 (DI/DO 11)	<2>	p0741 = r2091.3	-	-	-
A_DIGITAL.4	Digital output 12 (DI/DO 12)	<2>	p0742 = r2091.4	-	-	-
A_DIGITAL.5	Digital output 13 (DI/DO 13)	<2>	p0743 = r2091.5	-	-	-
A_DIGITAL.6	Digital output 14 (DI/DO 14)	<2>	p0744 = r2091.6	-	-	-
A_DIGITAL.7	Digital output 15 (DI/DO 15)	<2>	p0745 = r2091.7	-	-	-
A_DIGITAL.8	Reserved		-	-	-	-
A_DIGITAL.9	Reserved		-	-	-	-
A_DIGITAL.10	Reserved		-	-	-	-
A_DIGITAL.11	Reserved		-	-	-	-
A_DIGITAL.12	Reserved		-	-	-	-
A_DIGITAL.13	Reserved		-	-	-	-
A_DIGITAL.14	Reserved		-	-	-	-
A_DIGITAL.15	Reserved		-	-	-	-

PROFIdrive sampling time

<1> Used in telegrams 390 to 396.  
<2> Can be set via p0728 as input (DI) or output (DO).      <3> Pre-assignment, can be freely changed.

1	2	3	4	5	6	7	8
DO: CU_G, CU_S					fp_2497_54_eng.vsd	Function diagram	
PROFIdrive - A_DIGITAL interconnection					27.06.13 V04.08.00	S120/S150/G130/G150	

- 2497 -

PROFIdrive sampling time

**Signal targets for E\_DIGITAL**

Signal	Meaning		Interconnection parameters<3>	[Function diagram] Internal status word	[Function diagram] signal target	Inverted
E_DIGITAL.0	Digital input 8 (DI/DO 8)	<2>	p2081[0] = r0722.8	-	-	-
E_DIGITAL.1	Digital input 9 (DI/DO 9)	<2>	p2081[1] = r0722.9	-	-	-
E_DIGITAL.2	Digital input 10 (DI/DO 10)	<2>	p2081[2] = r0722.10	-	-	-
E_DIGITAL.3	Digital input 11 (DI/DO 11)	<2>	p2081[3] = r0722.11	-	-	-
E_DIGITAL.4	Digital input 12 (DI/DO 12)	<2>	p2081[4] = r0722.12	-	-	-
E_DIGITAL.5	Digital input 13 (DI/DO 13)	<2>	p2081[5] = r0722.13	-	-	-
E_DIGITAL.6	Digital input 14 (DI/DO 14)	<2>	p2081[6] = r0722.14	-	-	-
E_DIGITAL.7	Digital input 15 (DI/DO 15)	<2>	p2081[7] = r0722.15	-	-	-
E_DIGITAL.8	Digital input 0 (DI 0)		p2081[8] = r0722.0	-	-	-
E_DIGITAL.9	Digital input 1 (DI 1)		p2081[9] = r0722.1	-	-	-
E_DIGITAL.10	Digital input 2 (DI 2)		p2081[10] = r0722.2	-	-	-
E_DIGITAL.11	Digital input 3 (DI 3)		p2081[11] = r0722.3	-	-	-
E_DIGITAL.12	Digital input 4 (DI 4)	<4>	p2081[12] = r0722.4	-	-	-
E_DIGITAL.13	Digital input 5 (DI 5)	<4>	p2081[13] = r0722.5	-	-	-
E_DIGITAL.14	Digital input 6 (DI 6)	<4>	p2081[14] = r0722.6	-	-	-
E_DIGITAL.15	Digital input 7 (DI 7)	<4>	p2081[15] = r0722.7	-	-	-

<1> Used in telegrams 390 to 396.

<2> Can be set via p0728 as input (DI) or output (DO).

<3> Pre-assignment, can be freely changed.

<4> Only for CU320-2.

1	2	3	4	5	6	7	8
DO: CU_G, CU_S				fp_2498_54_eng.vsd		Function diagram	
PROFIdrive - E_DIGITAL interconnection				20.09.11 V04.08.00		S120/S150/G130/G150	
							<b>- 2498 -</b>

Fig. 3-58 2498 – E\_DIGITAL interconnection

Fig. 3-59 2499 – A\_DIGITAL\_1 interconnection

Signal targets for A_DIGITAL_1						<1>	
Signal	Meaning	Interconnection parameters <2>	[Function diagram] internal status word	[Function diagram] signal target	Inverted	PROFIdrive sampling time	
A_DIGITAL_1.0	Reserved	-	-	-	-		
A_DIGITAL_1.1	Reserved	-	-	-	-		
A_DIGITAL_1.2	Reserved	-	-	-	-		
A_DIGITAL_1.3	Reserved	-	-	-	-		
A_DIGITAL_1.4	Reserved	-	-	-	-		
A_DIGITAL_1.5	Reserved	-	-	-	-		
A_DIGITAL_1.6	Reserved	-	-	-	-		
A_DIGITAL_1.7	Reserved	-	-	-	-		
A_DIGITAL_1.8	Digital output 16 (DI/DO 16) <3>	p0746 = r2092.8	-	-	-		
A_DIGITAL_1.9	Reserved	-	-	-	-		
A_DIGITAL_1.10	Reserved	-	-	-	-		
A_DIGITAL_1.11	Reserved	-	-	-	-		
A_DIGITAL_1.12	Reserved	-	-	-	-		
A_DIGITAL_1.13	Reserved	-	-	-	-		
A_DIGITAL_1.14	Reserved	-	-	-	-		
A_DIGITAL_1.15	Reserved	-	-	-	-		

<1> Used in telegrams 393 to 396.  
<2> Pre-assignment, can be freely changed. <3> Only for CU\_S\_AC or CU\_I\_D410.

1	2	3	4	5	6	7	8
DO: CU_G, CU_S					fp_2499_54_eng.vsd	Function diagram	
PROFIdrive - A_DIGITAL_1 interconnection					27.06.13 V04.08.00	S120/S150/G130/G150	

PROFIdrive sampling time

Signal targets for E_DIGITAL_1						<1>
Signal	Meaning	Interconnection parameters <3>	[Function diagram] Internal status word	[Function diagram] signal target	Inverted	
E_DIGITAL_1.0	Reserved	-	-	-	-	
E_DIGITAL_1.1	Reserved	-	-	-	-	
E_DIGITAL_1.2	Reserved	-	-	-	-	
E_DIGITAL_1.3	Reserved	-	-	-	-	
E_DIGITAL_1.4	Reserved	-	-	-	-	
E_DIGITAL_1.5	Reserved	-	-	-	-	
E_DIGITAL_1.6	Reserved	-	-	-	-	
E_DIGITAL_1.7	Reserved	-	-	-	-	
E_DIGITAL_1.8	Digital input 16 (DI 16)	p2083[8] = r0722.16	-	-	-	
E_DIGITAL_1.9	Digital input 17 (DI 17)	p2083[9] = r0722.17	-	-	-	
E_DIGITAL_1.10	Digital input 18 (DI 18)	<2> p2083[10] = r0722.18	-	-	-	
E_DIGITAL_1.11	Digital input 19 (DI 19)	<2> p2083[11] = r0722.19	-	-	-	
E_DIGITAL_1.12	Digital input 20 (DI 20)	p2083[12] = r0722.20	-	-	-	
E_DIGITAL_1.13	Digital input 21 (DI 21)	p2083[13] = r0722.21	-	-	-	
E_DIGITAL_1.14	Digital input 22 (DI 22)	<2> p2083[14] = r0722.22	-	-	-	
E_DIGITAL_1.15	Reserved	-	-	-	-	

<1> Used in telegrams 393 to 396.

<2> Not for CU320-2.

<3> Pre-assignment, can be freely changed.

1	2	3	4	5	6	7	8
DO: CU_G, CU_S					fp_2500_54_eng.vsd	Function diagram	
PROFIdrive - E_DIGITAL_1 interconnection					27.06.13 V04.08.00	S120/S150/G130/G150	

- 2500 -

Fig. 3-60 2500 – E\_DIGITAL\_1 interconnection

## 3.7 Internal control/status words

### Function diagrams

2501 – Control word, sequence control	1168
2503 – Status word, sequence control	1169
2505 – Control word, setpoint channel	1170
2520 – Control word, speed controller	1171
2522 – Status word, speed controller	1172
2526 – Status word, closed-loop control	1173
2530 – Status word, closed-loop current control	1174
2534 – Status word, monitoring functions 1	1175
2536 – Status word, monitoring functions 2	1176
2537 – Status word, monitoring functions 3	1177
2546 – Control word, faults/alarms	1178
2548 – Status word, faults/alarms 1 and 2	1179

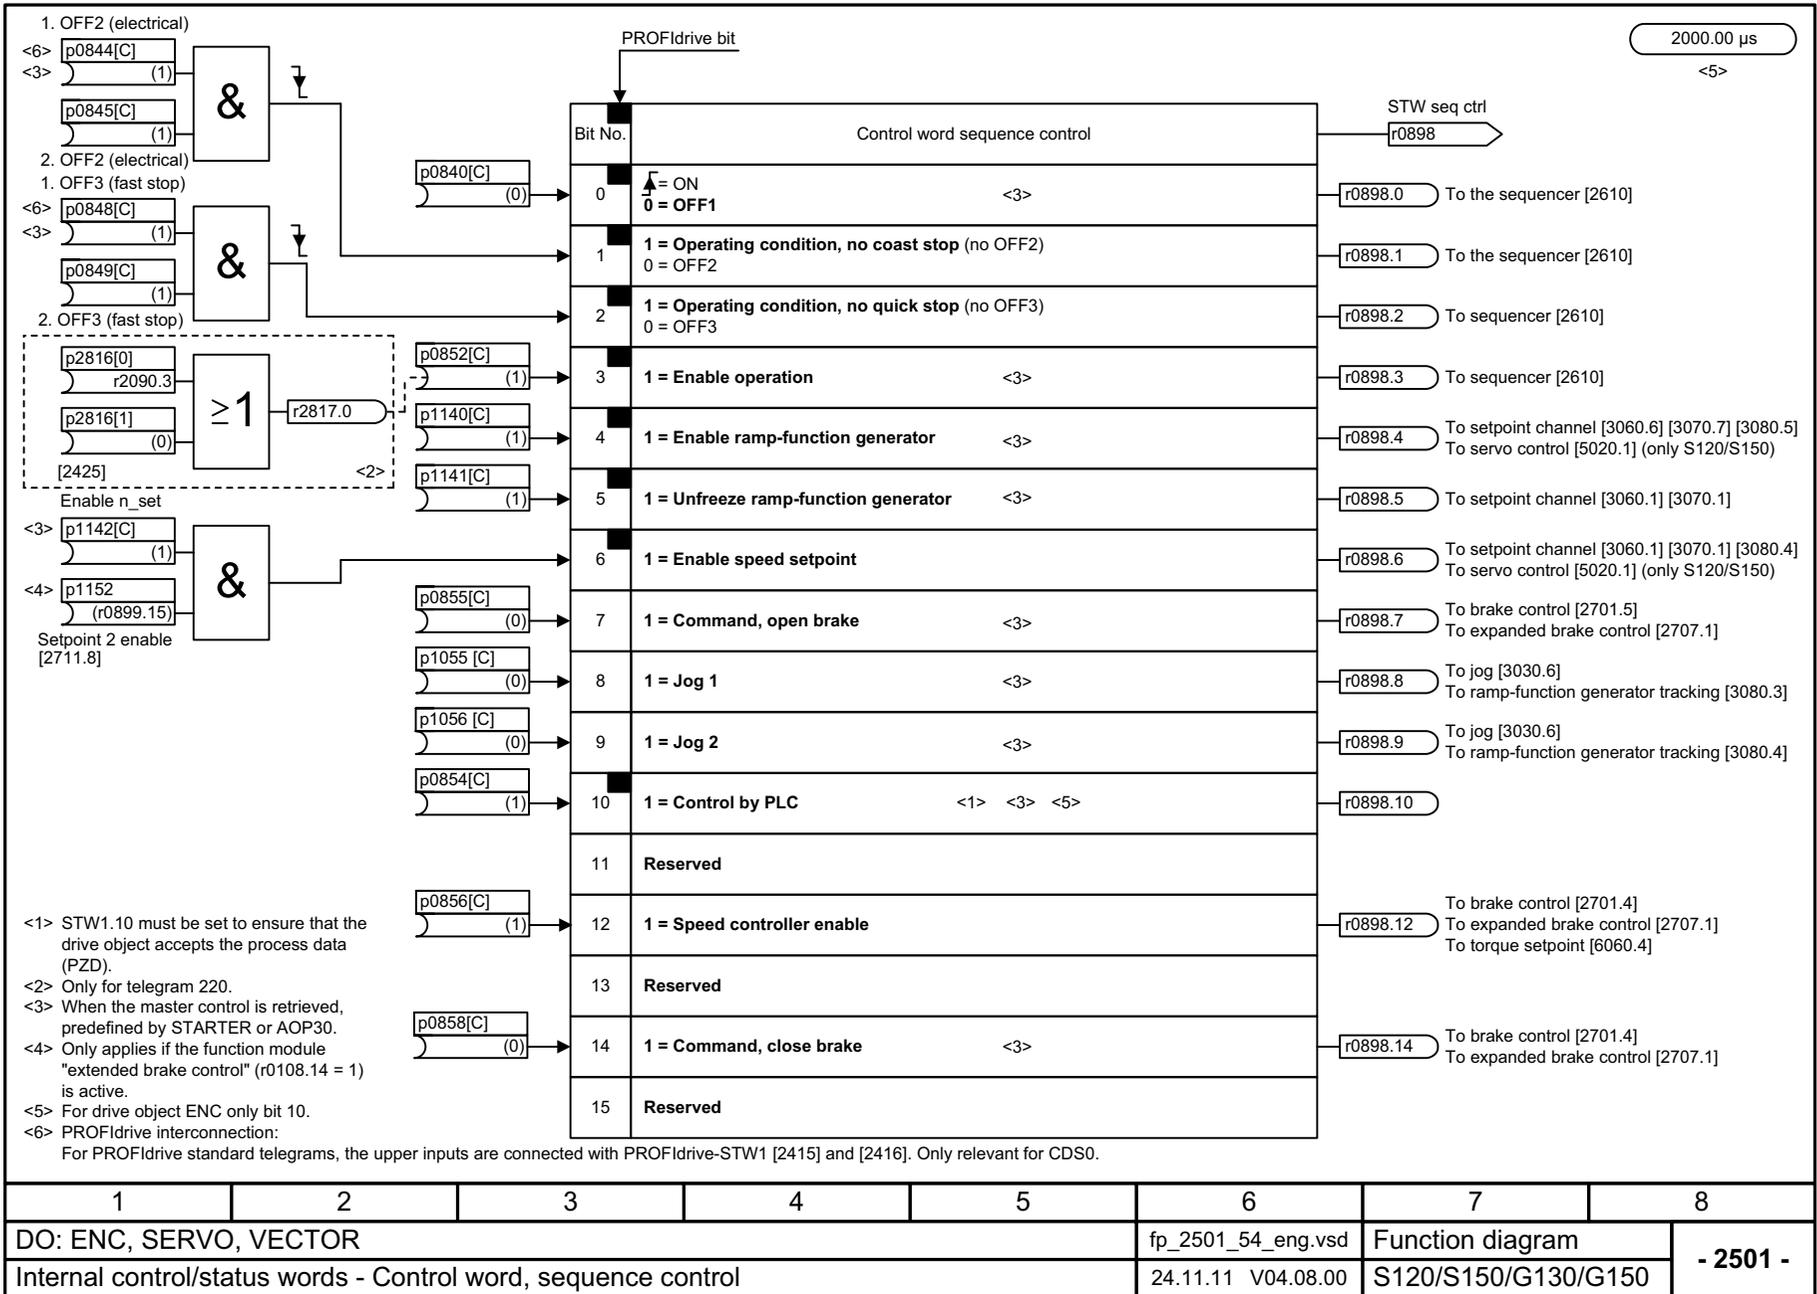
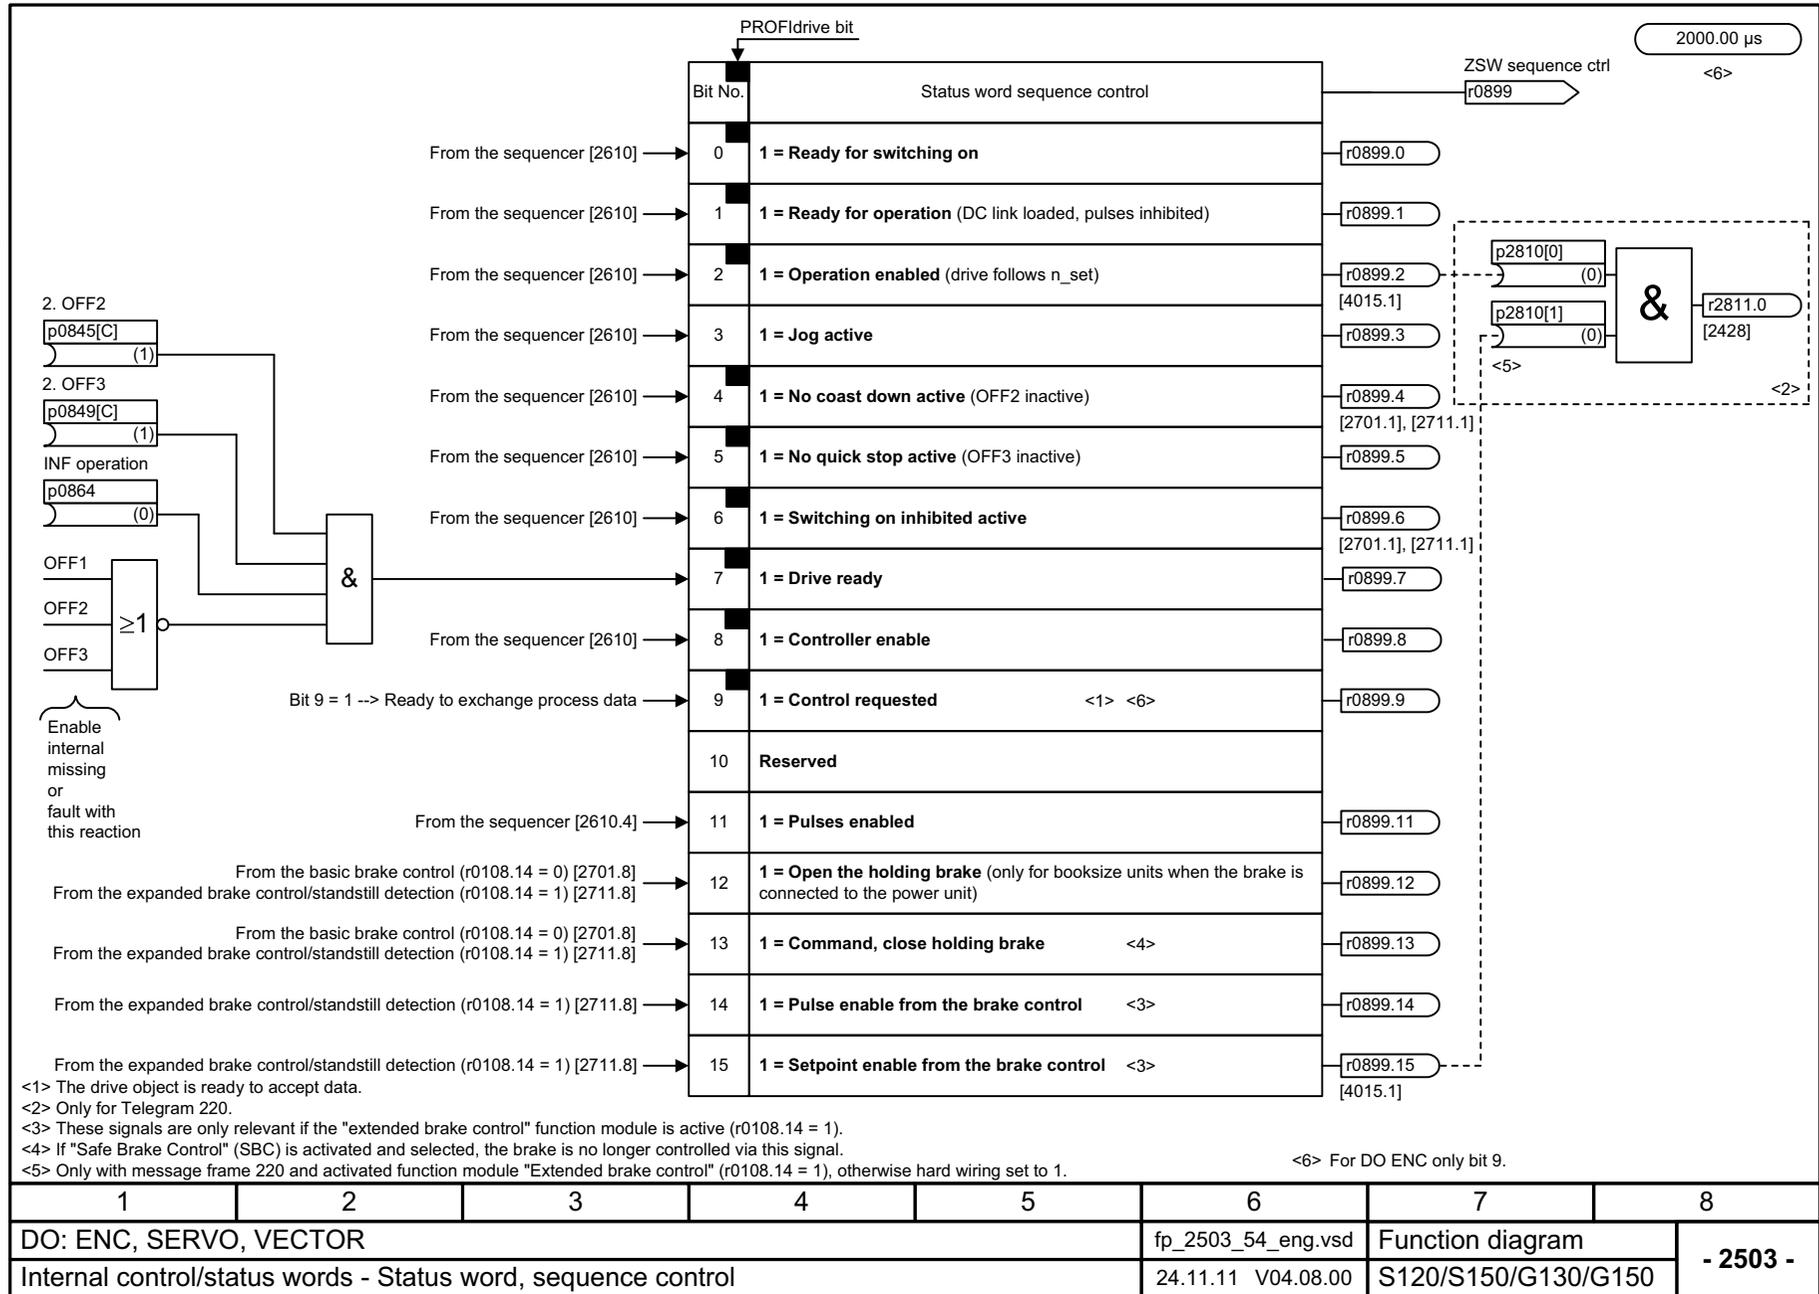


Fig. 3-61 2501 – Control word, sequence control

Fig. 3-62 2503 – Status word, sequence control



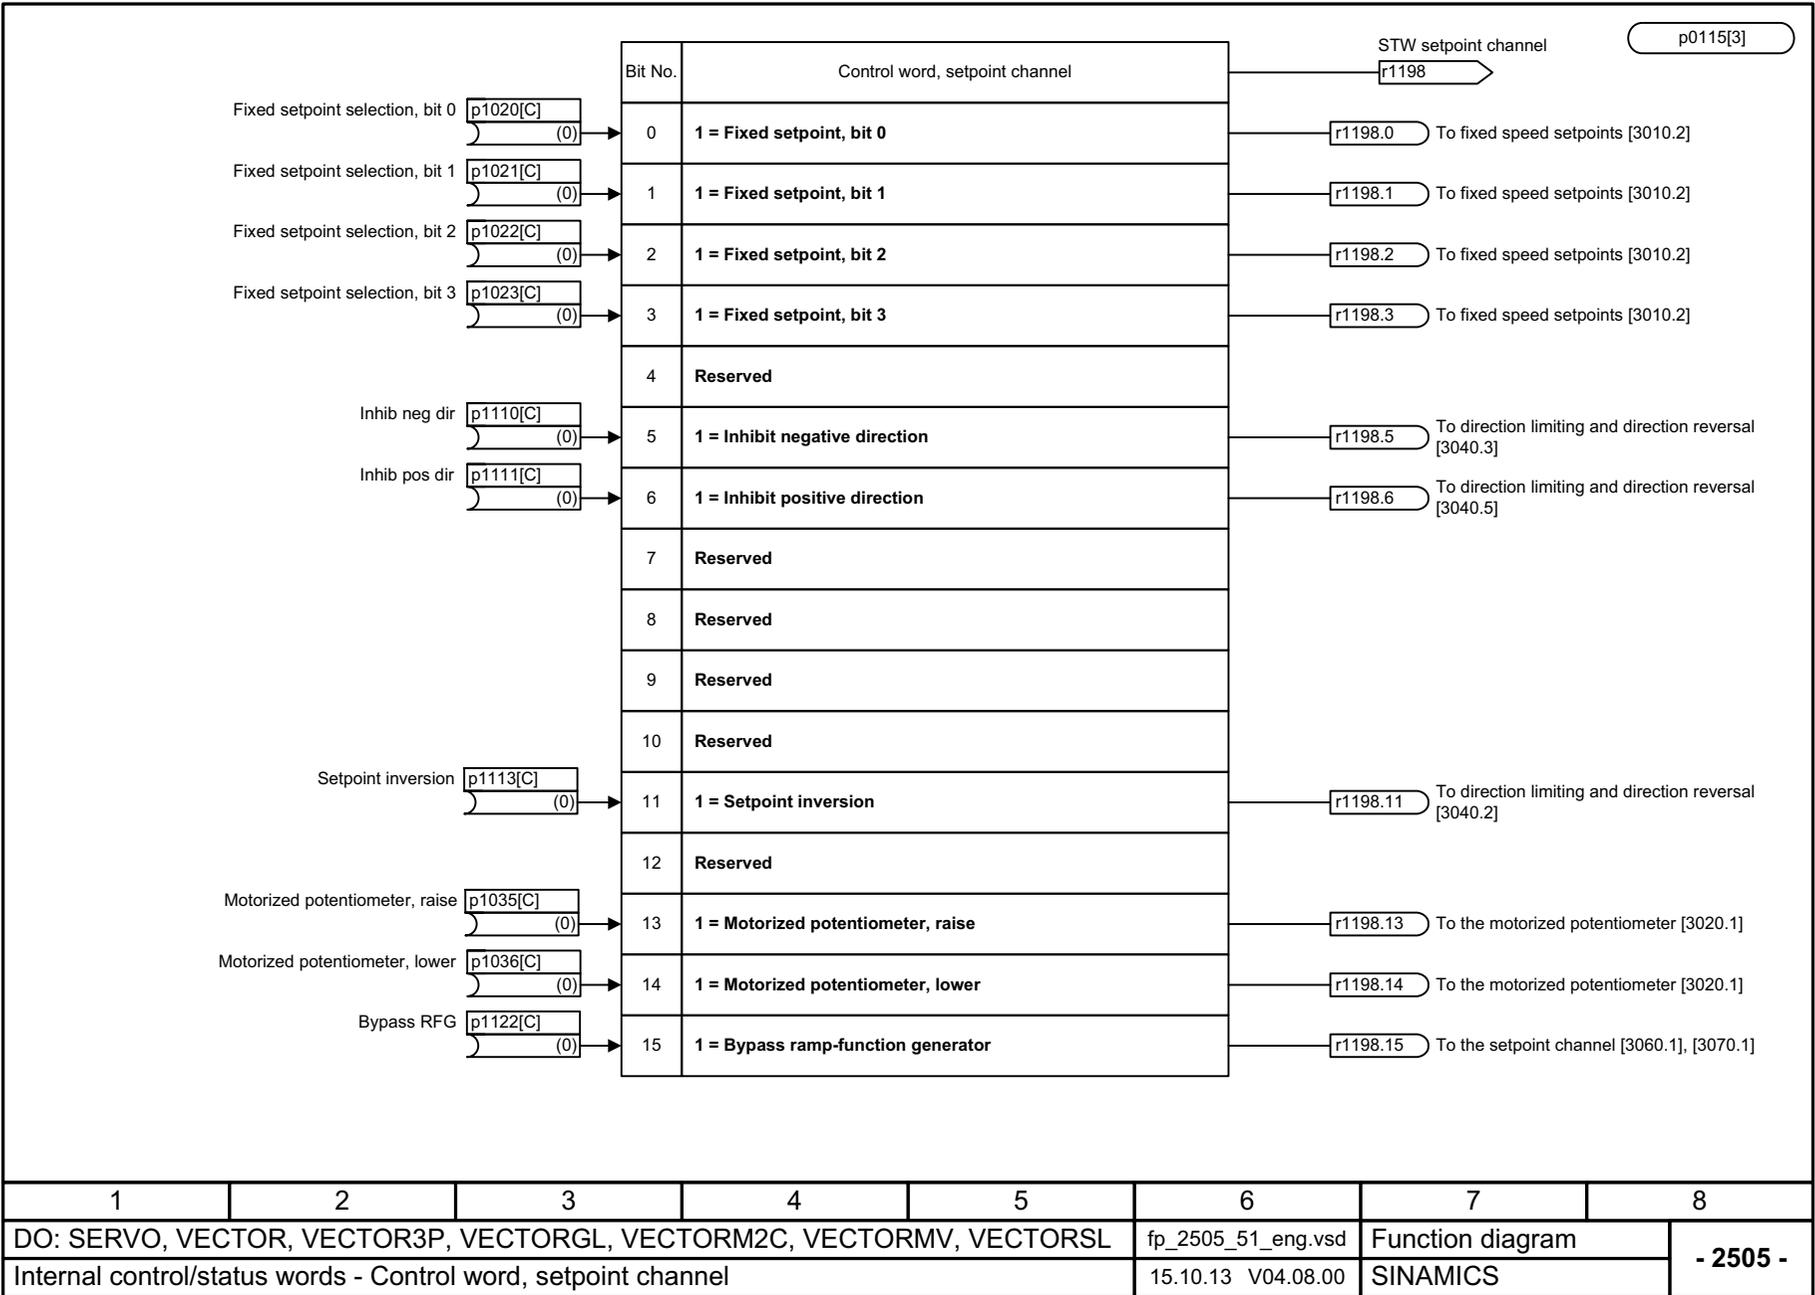


Fig. 3-63 2505 – Control word, setpoint channel

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_2505_51_eng.vsd	Function diagram	
Internal control/status words - Control word, setpoint channel					15.10.13 V04.08.00	SINAMICS	
							- 2505 -

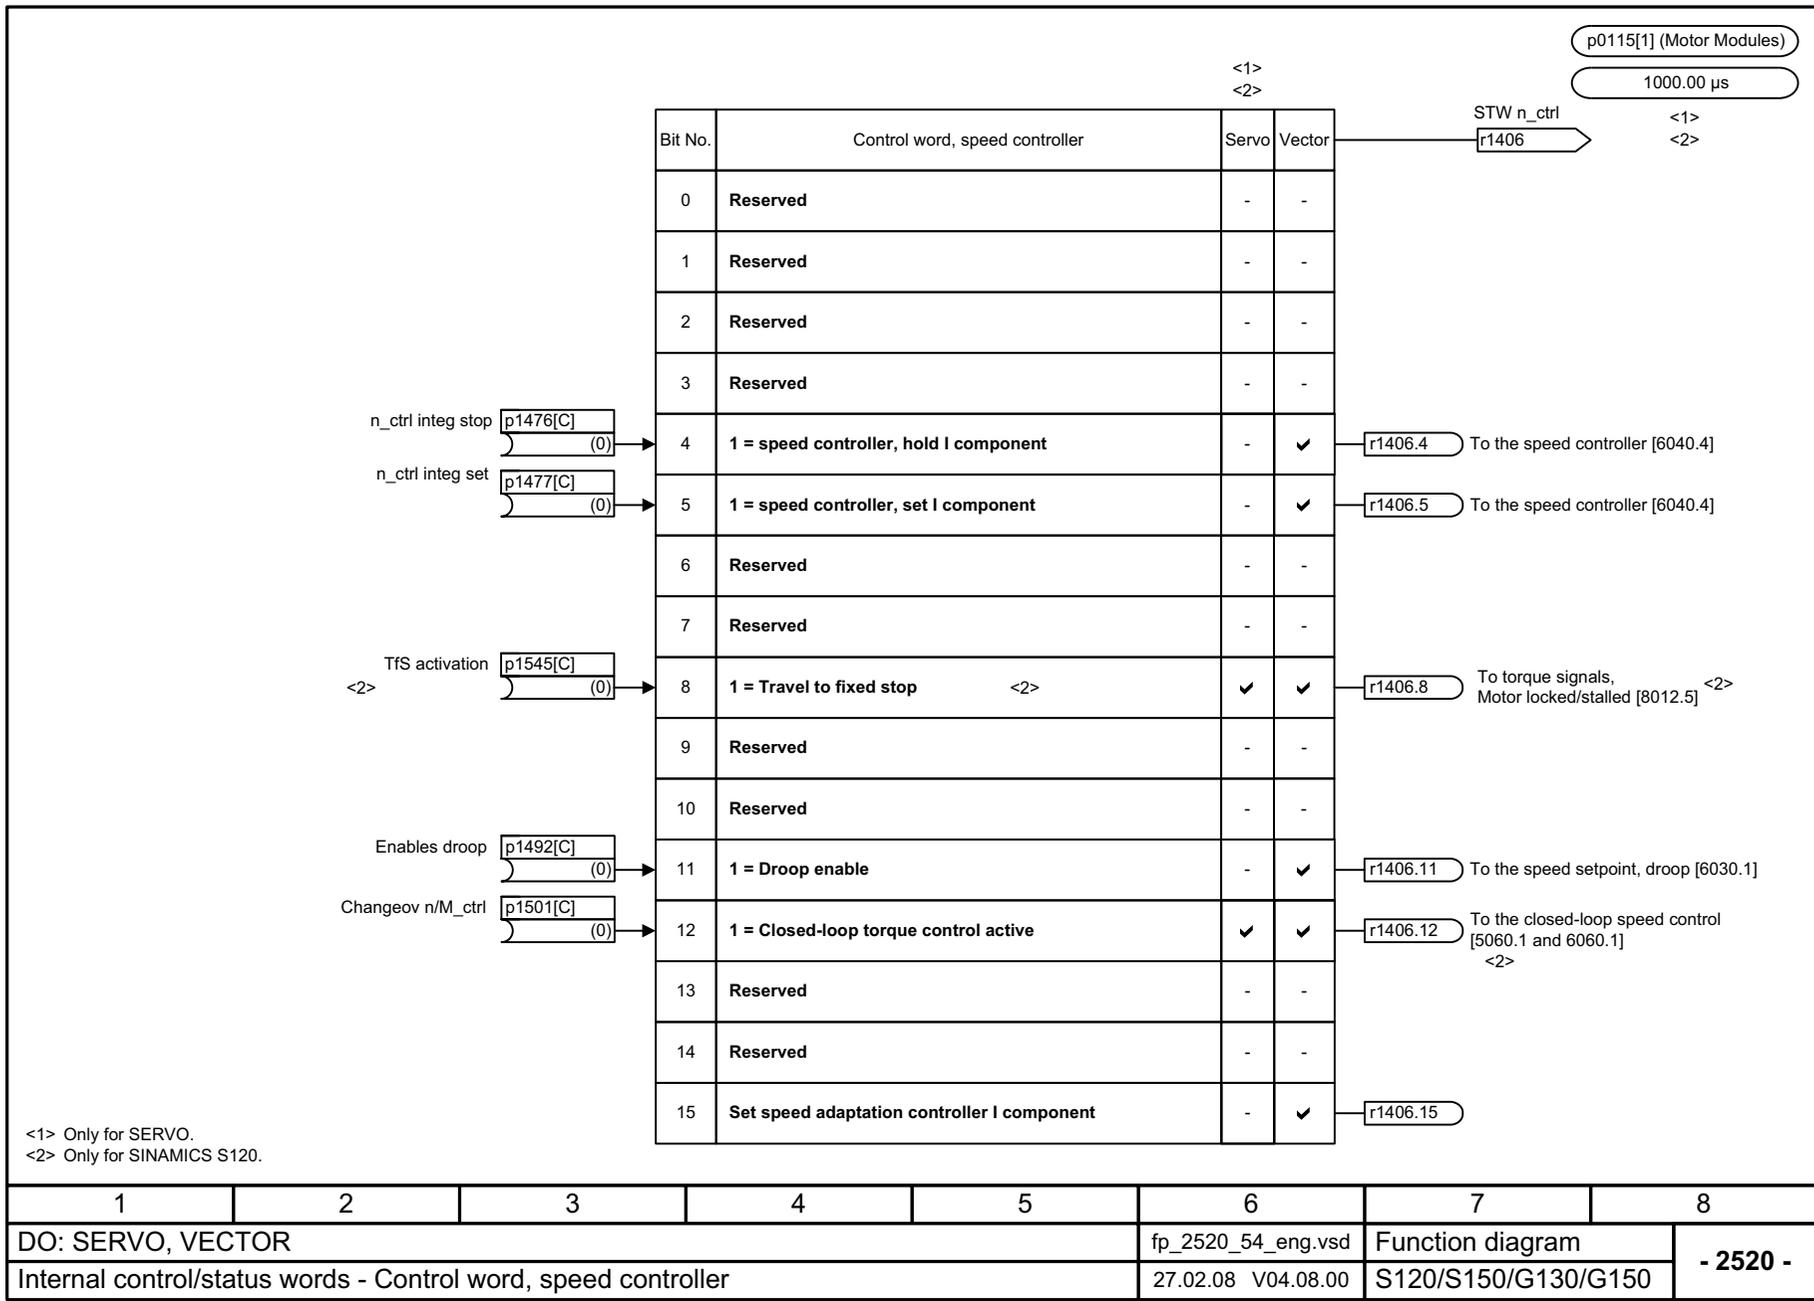


Fig. 3-64 2520 – Control word, speed controller

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2520_54_eng.vsd	Function diagram	
Internal control/status words - Control word, speed controller					27.02.08 V04.08.00	S120/S150/G130/G150	
- 2520 -							

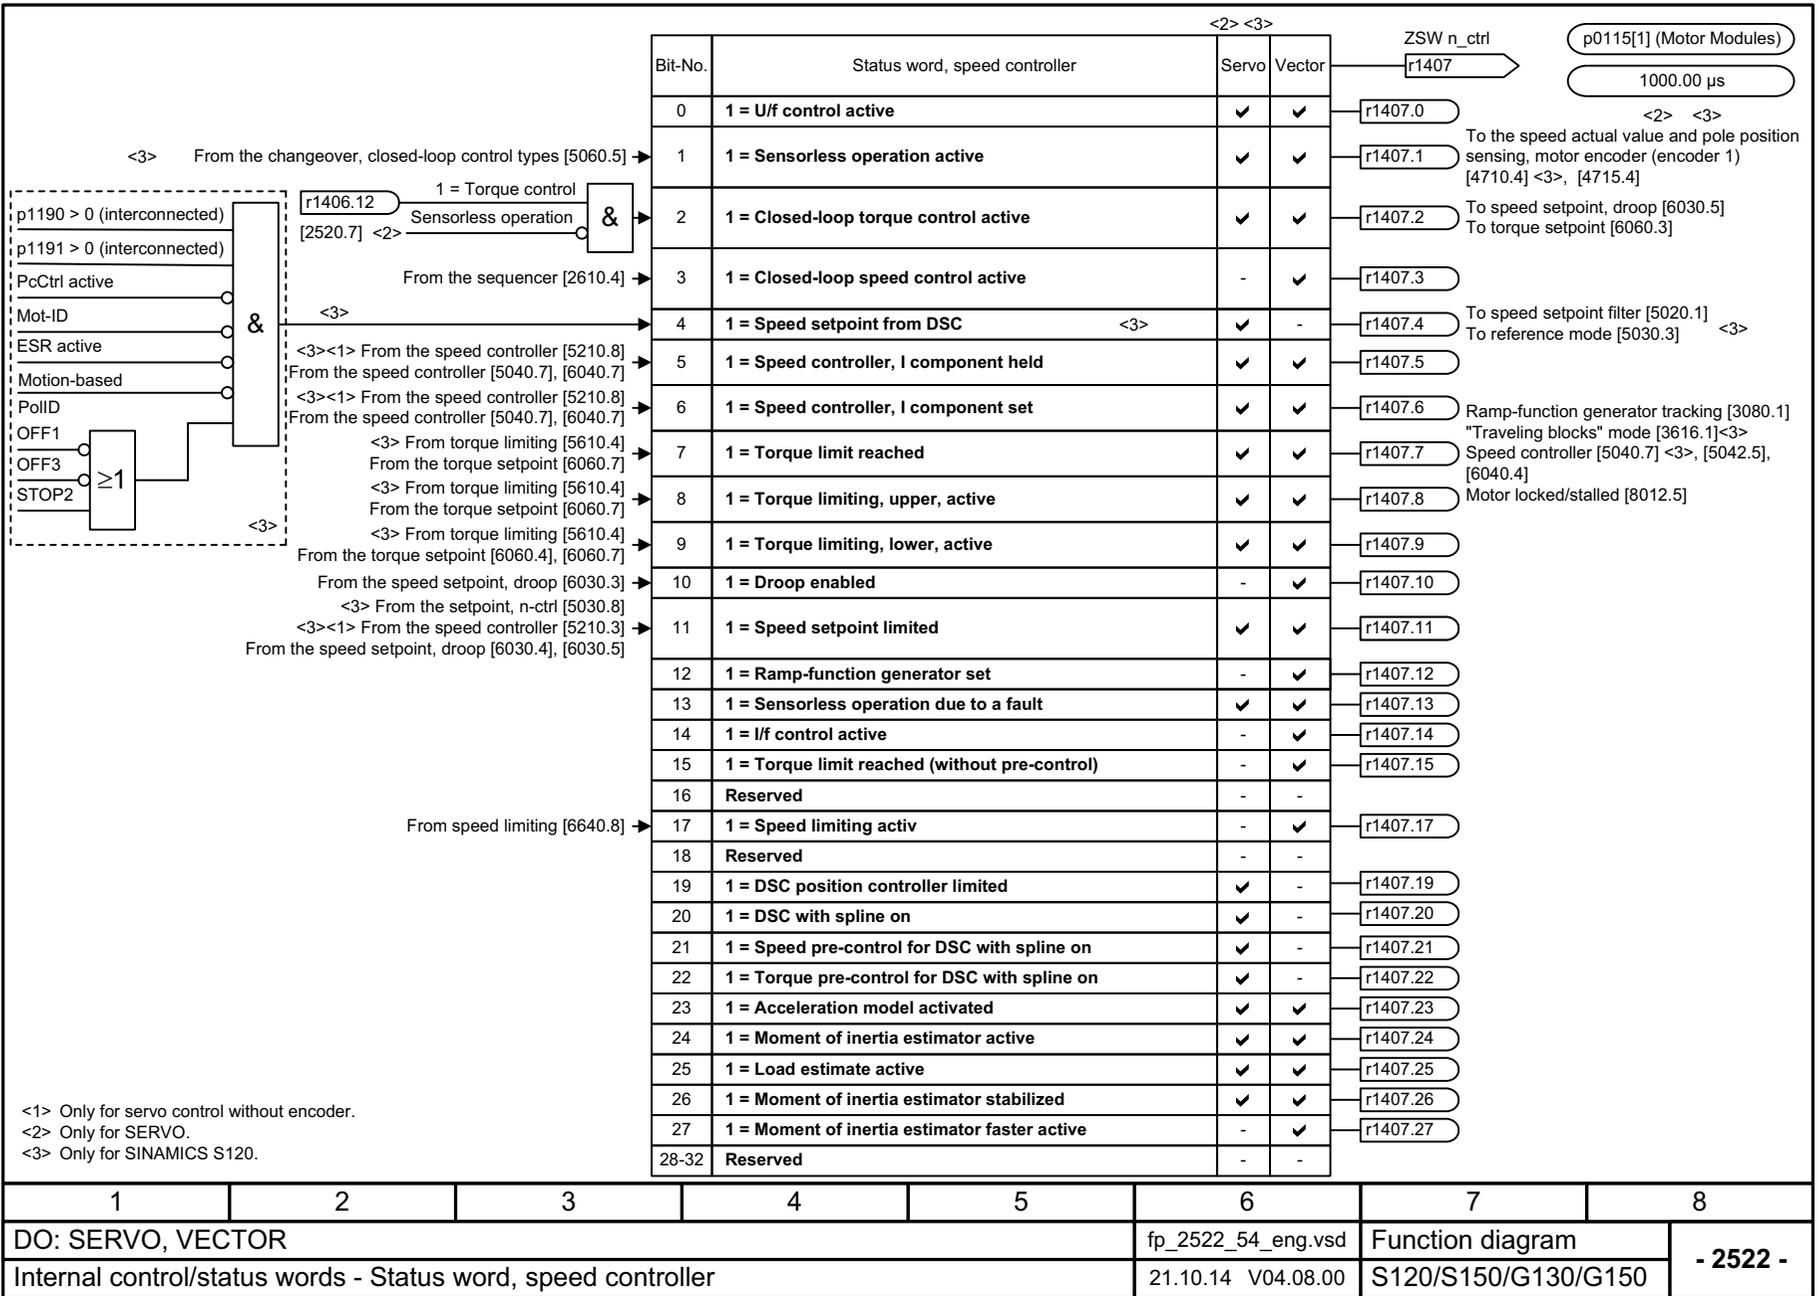
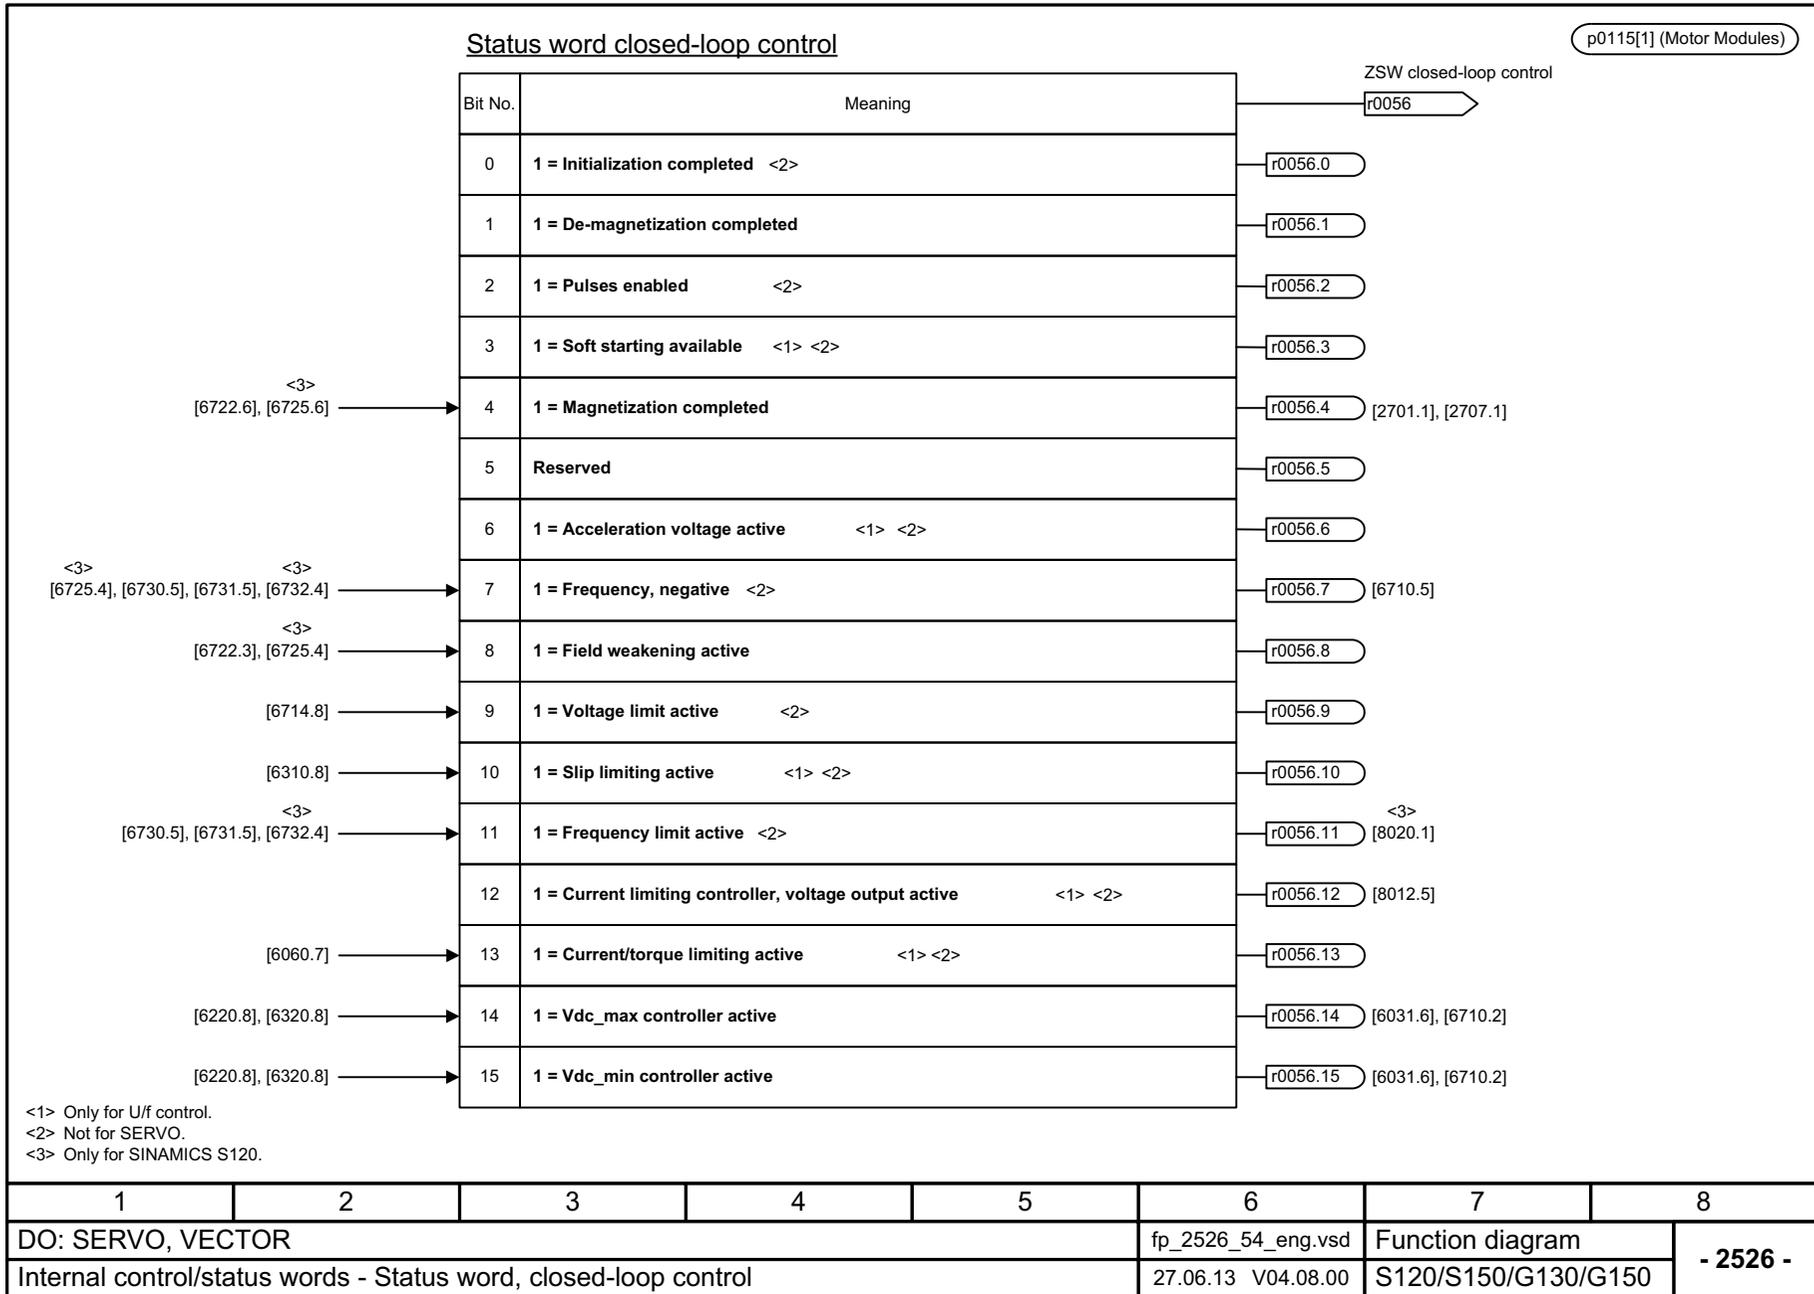


Fig. 3-65 2522 – Status word, speed controller

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2522_54_eng.vsd	Function diagram	
Internal control/status words - Status word, speed controller					21.10.14 V04.08.00	S120/S150/G130/G150	
- 2522 -							

Fig. 3-66 2526 – Status word, closed-loop control



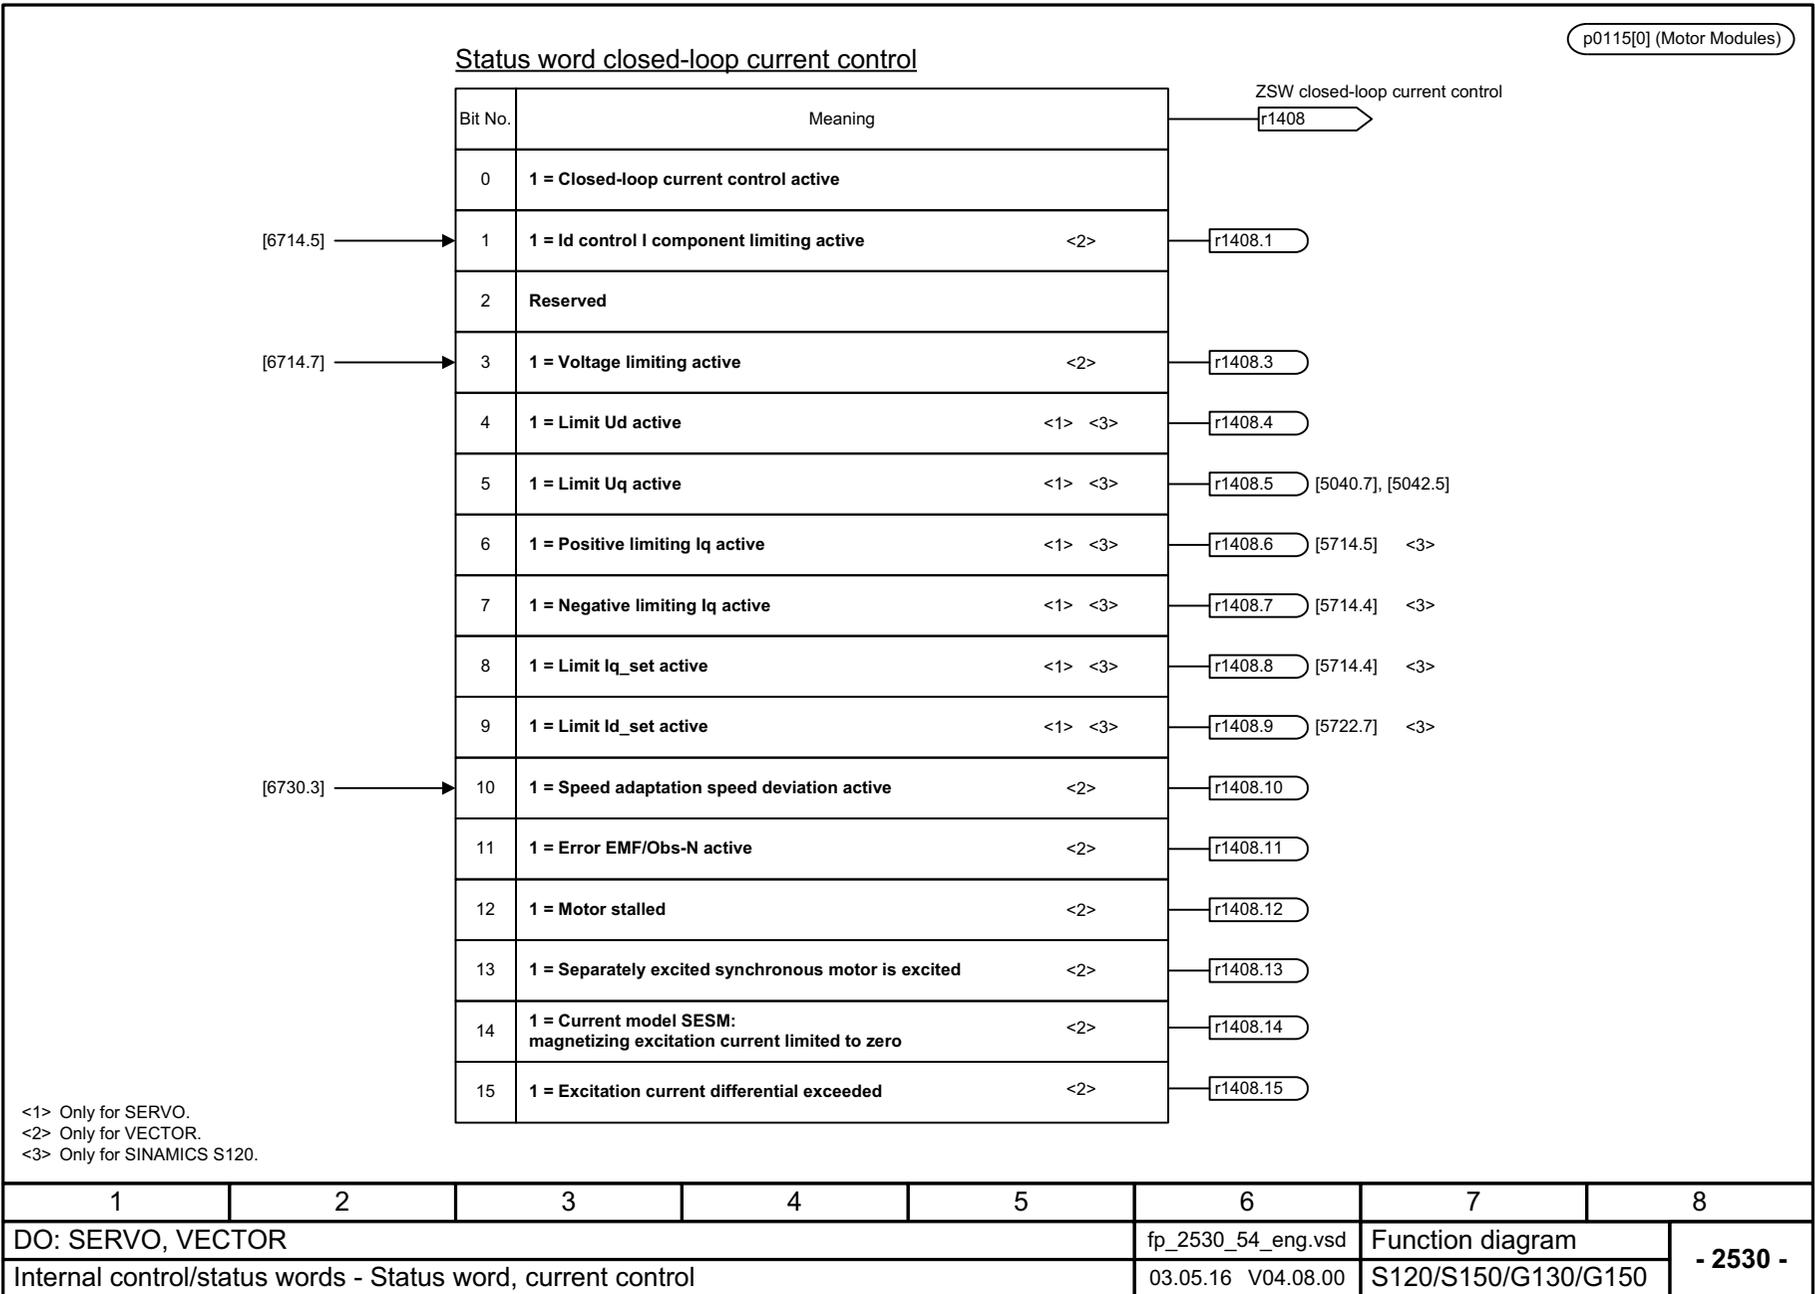


Fig. 3-67 2530 – Status word, closed-loop current control

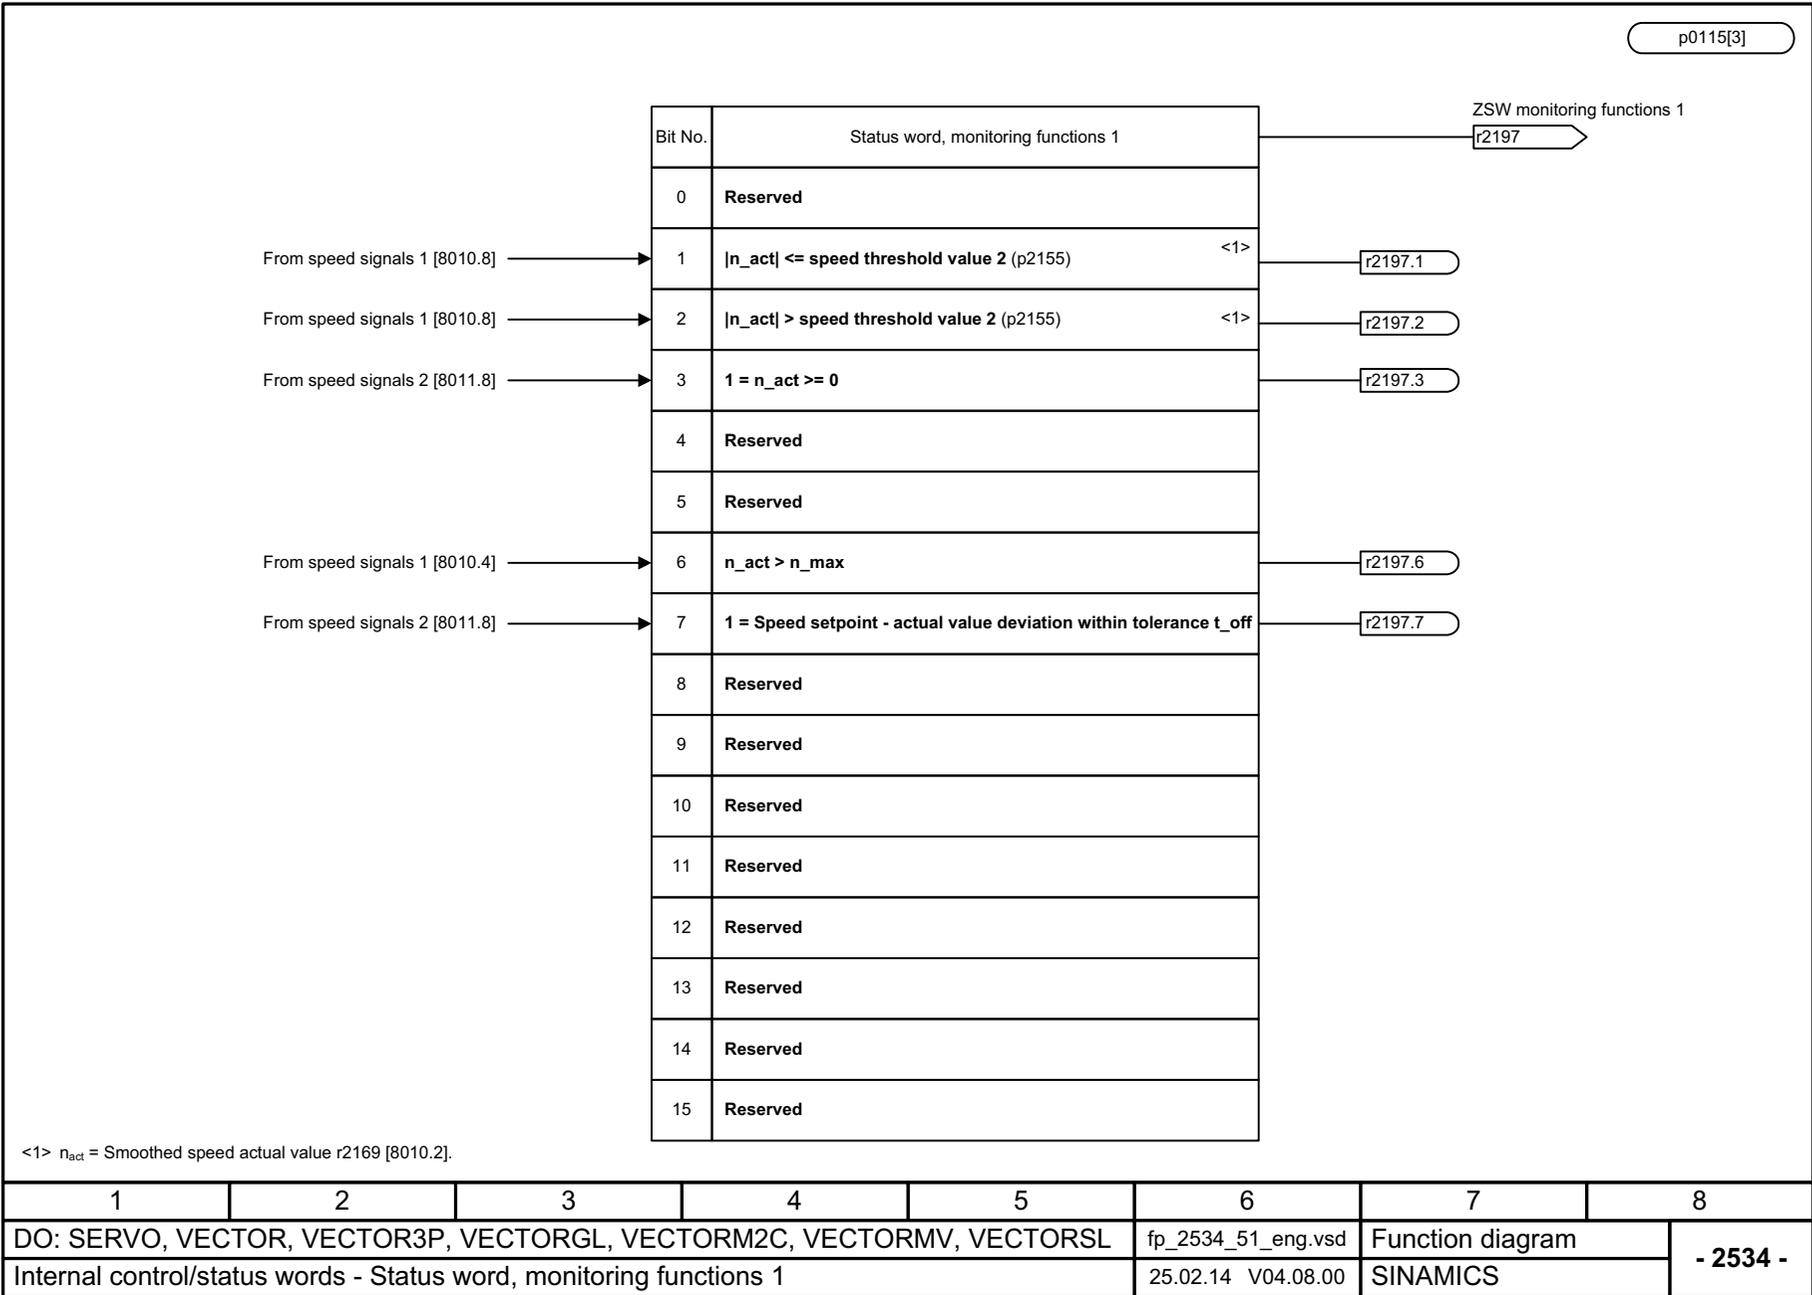


Fig. 3-68 2534 – Status word, monitoring functions 1

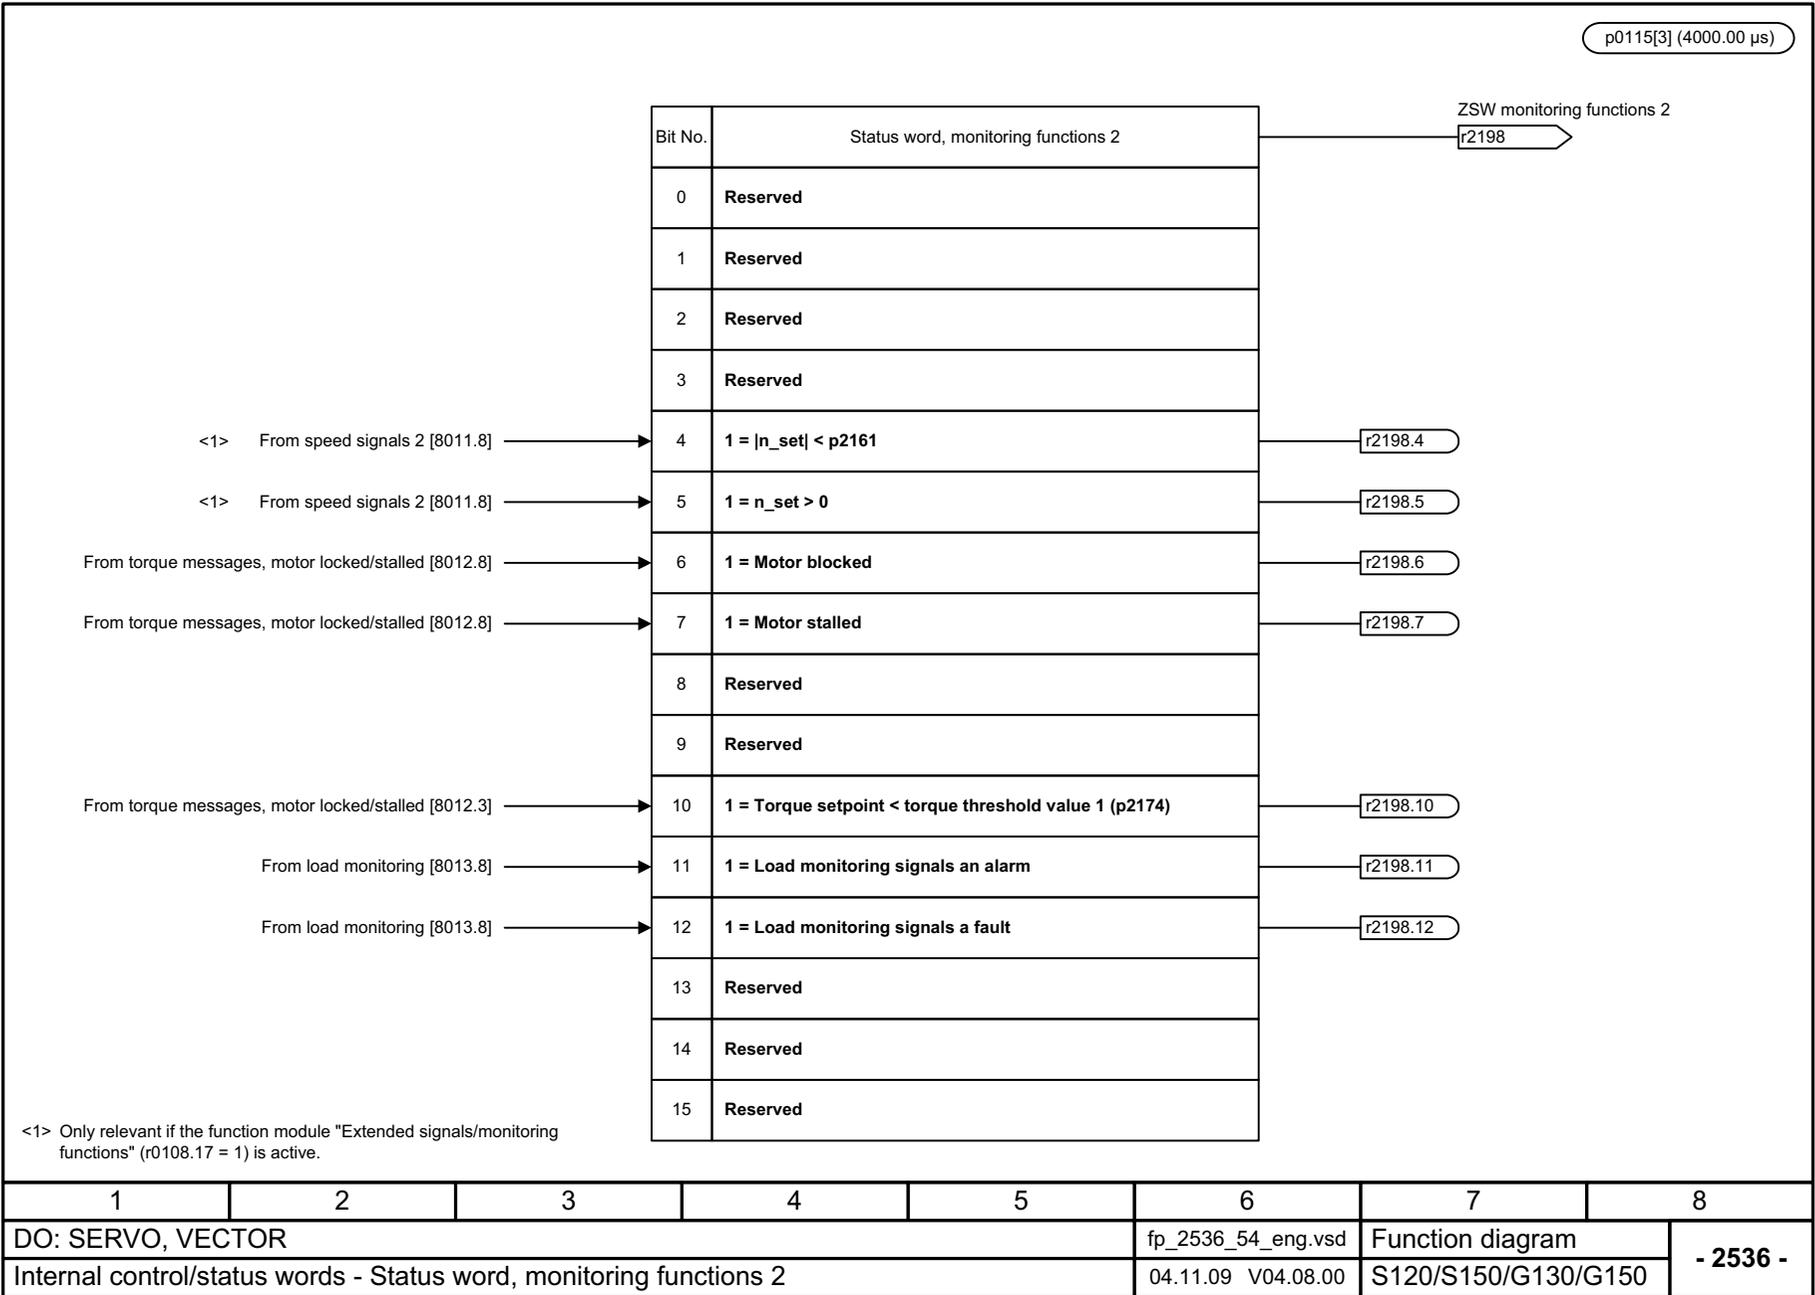


Fig. 3-69 2536 – Status word, monitoring functions 2

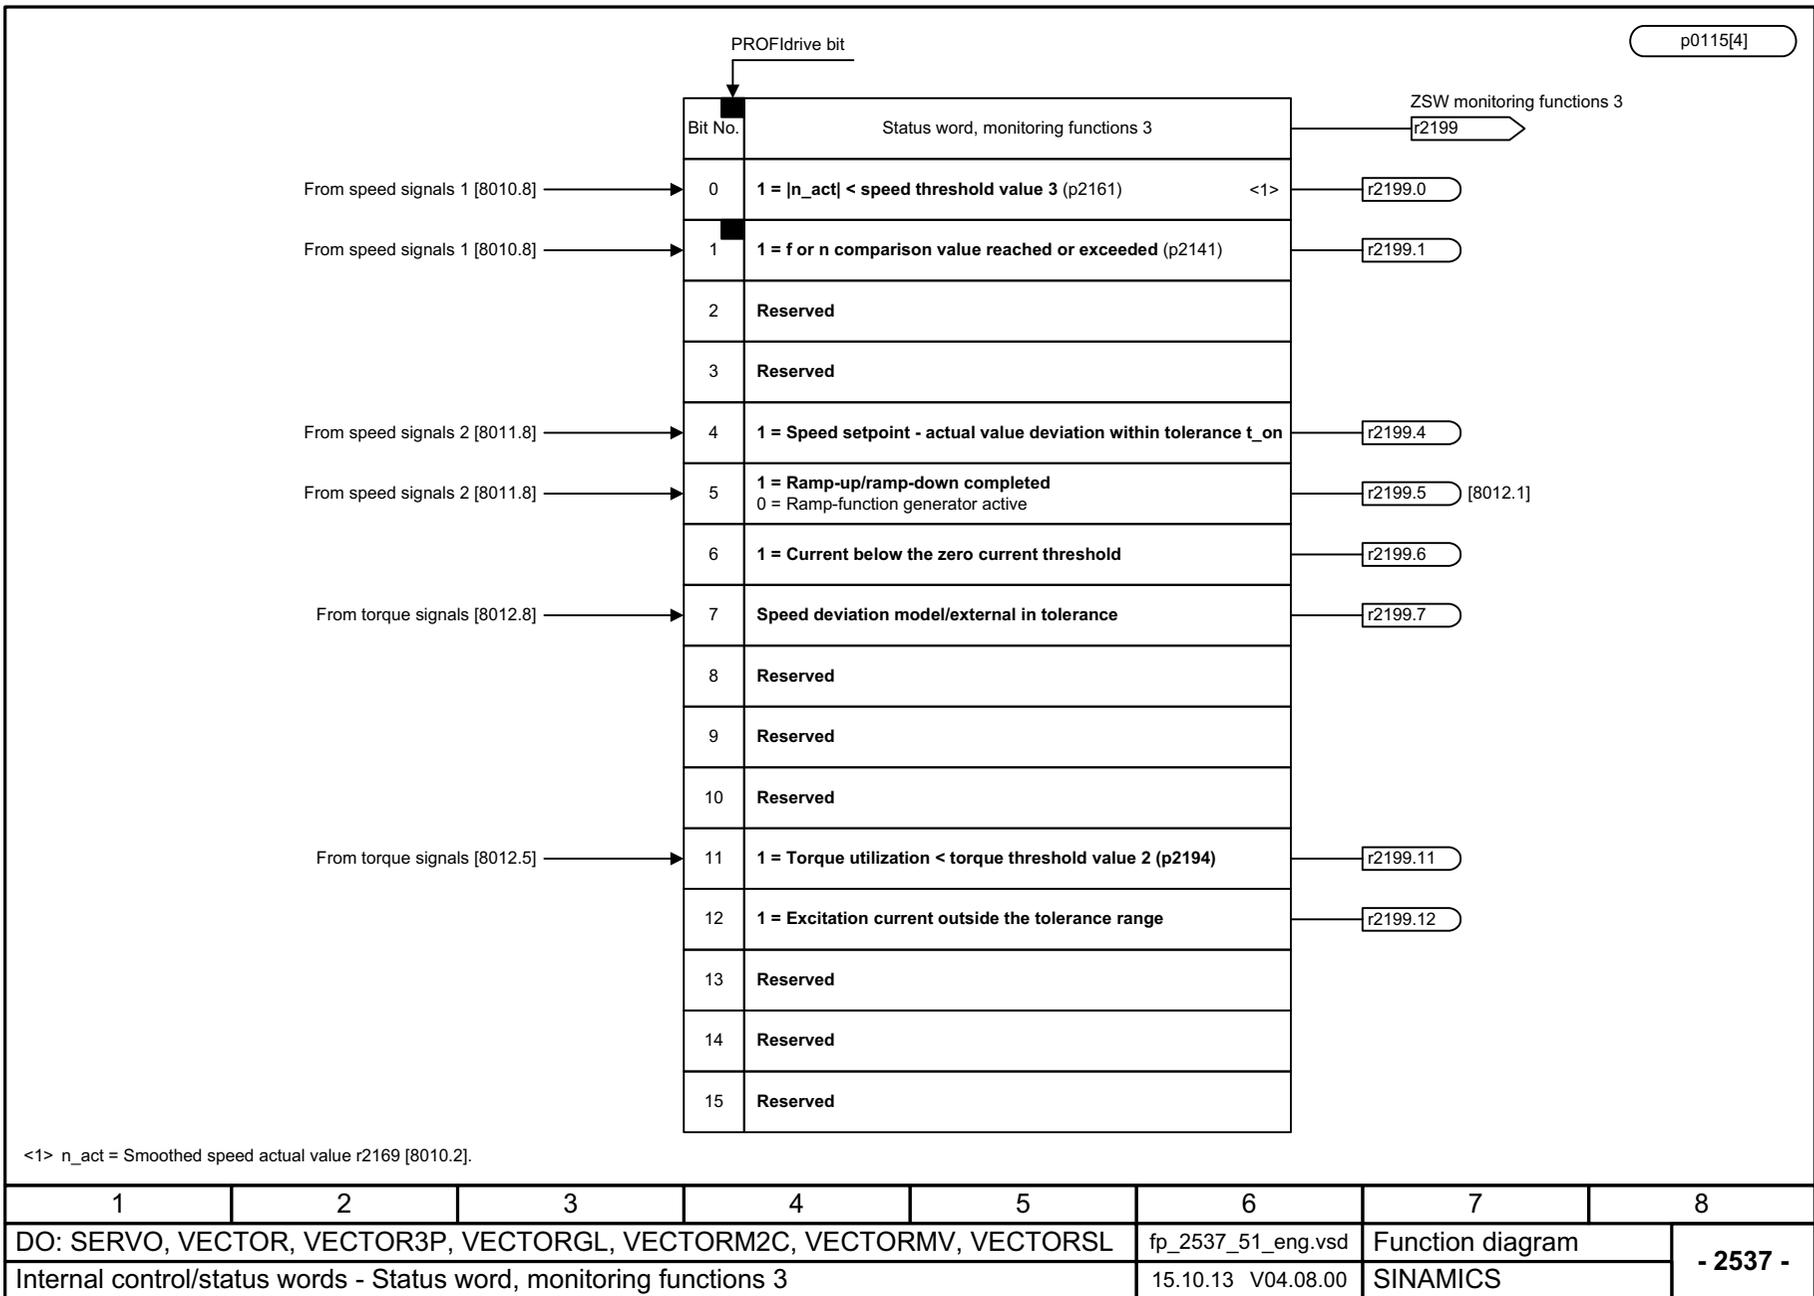


Fig. 3-70 2537 – Status word, monitoring functions 3

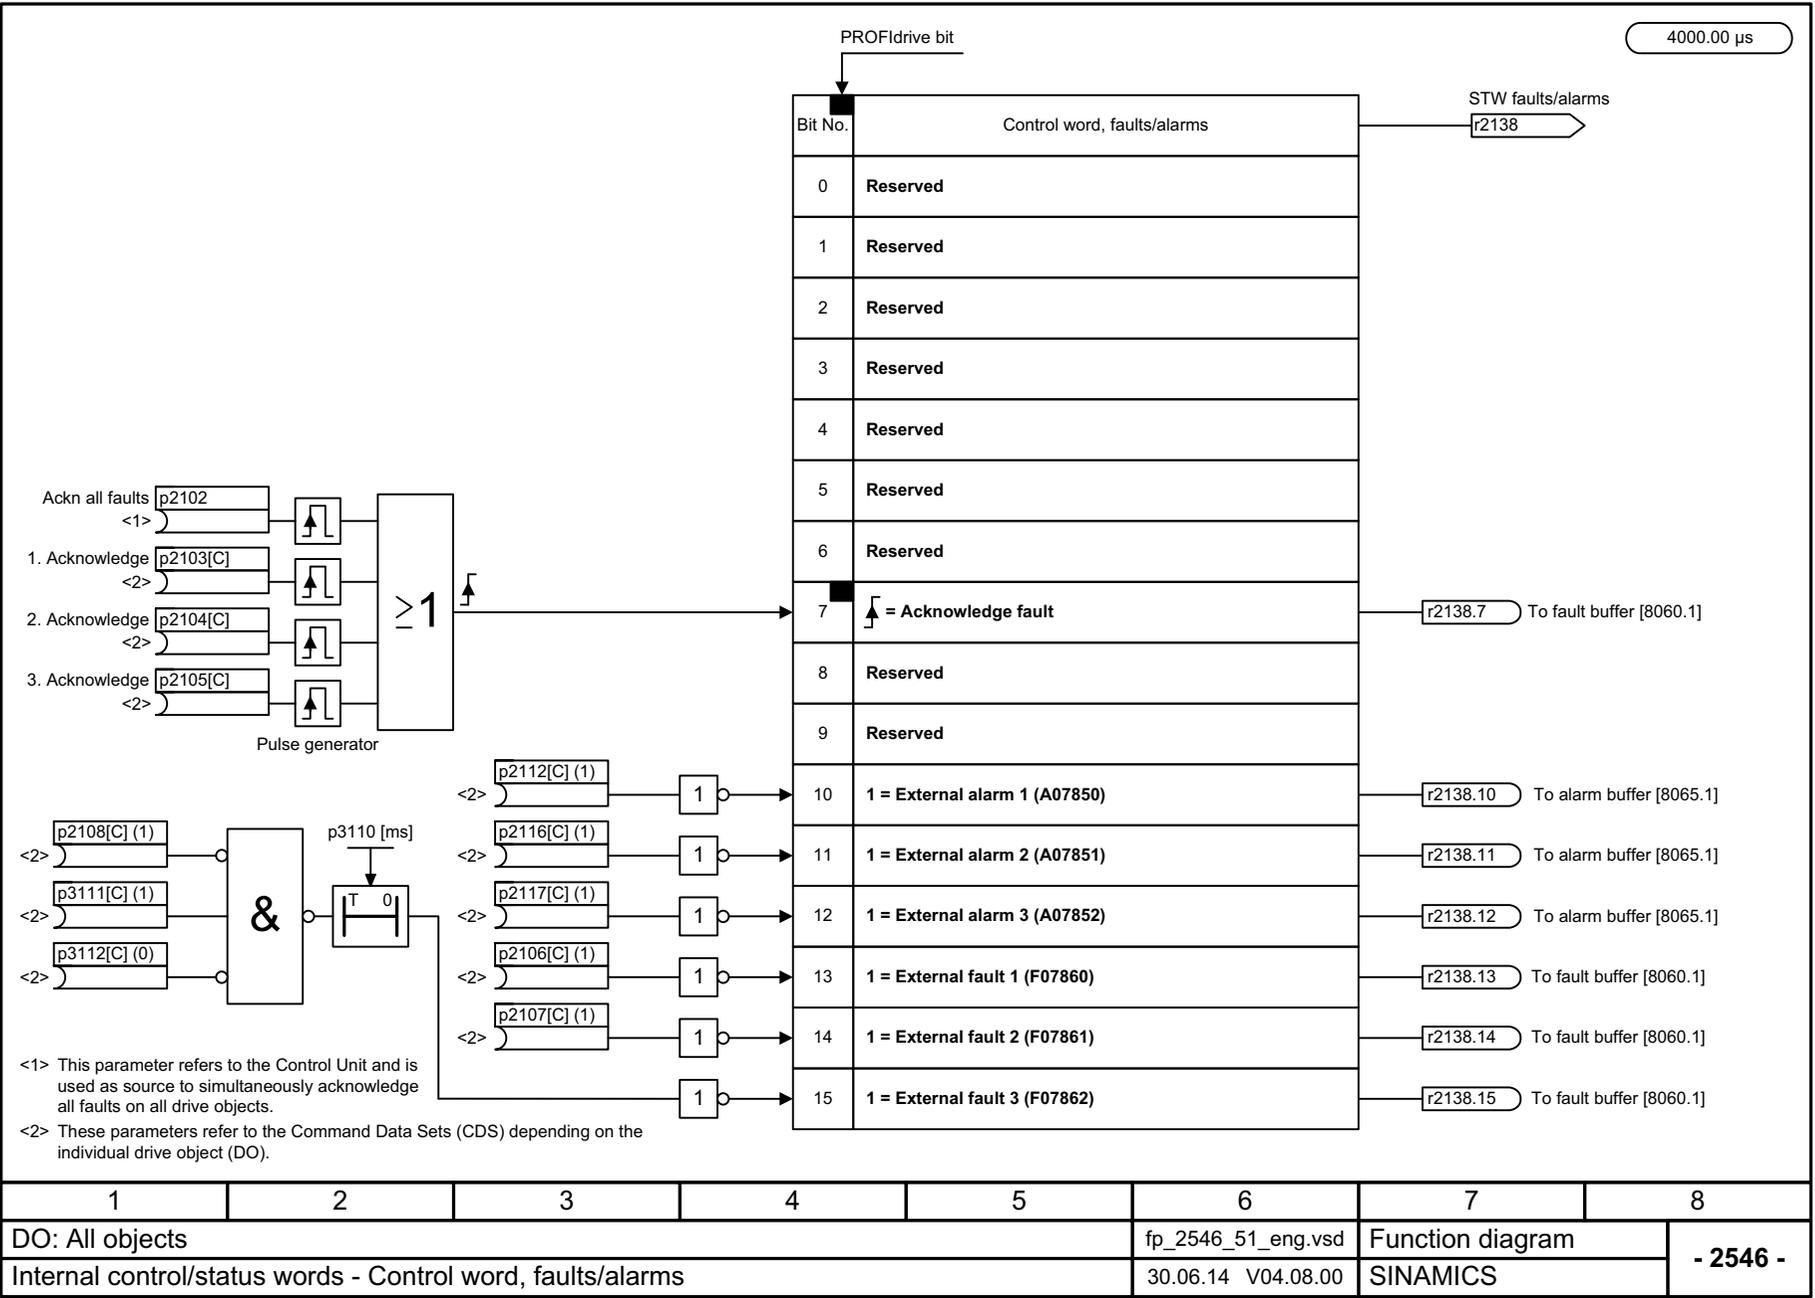


Fig. 3-71 2546 – Control word, faults/alarms

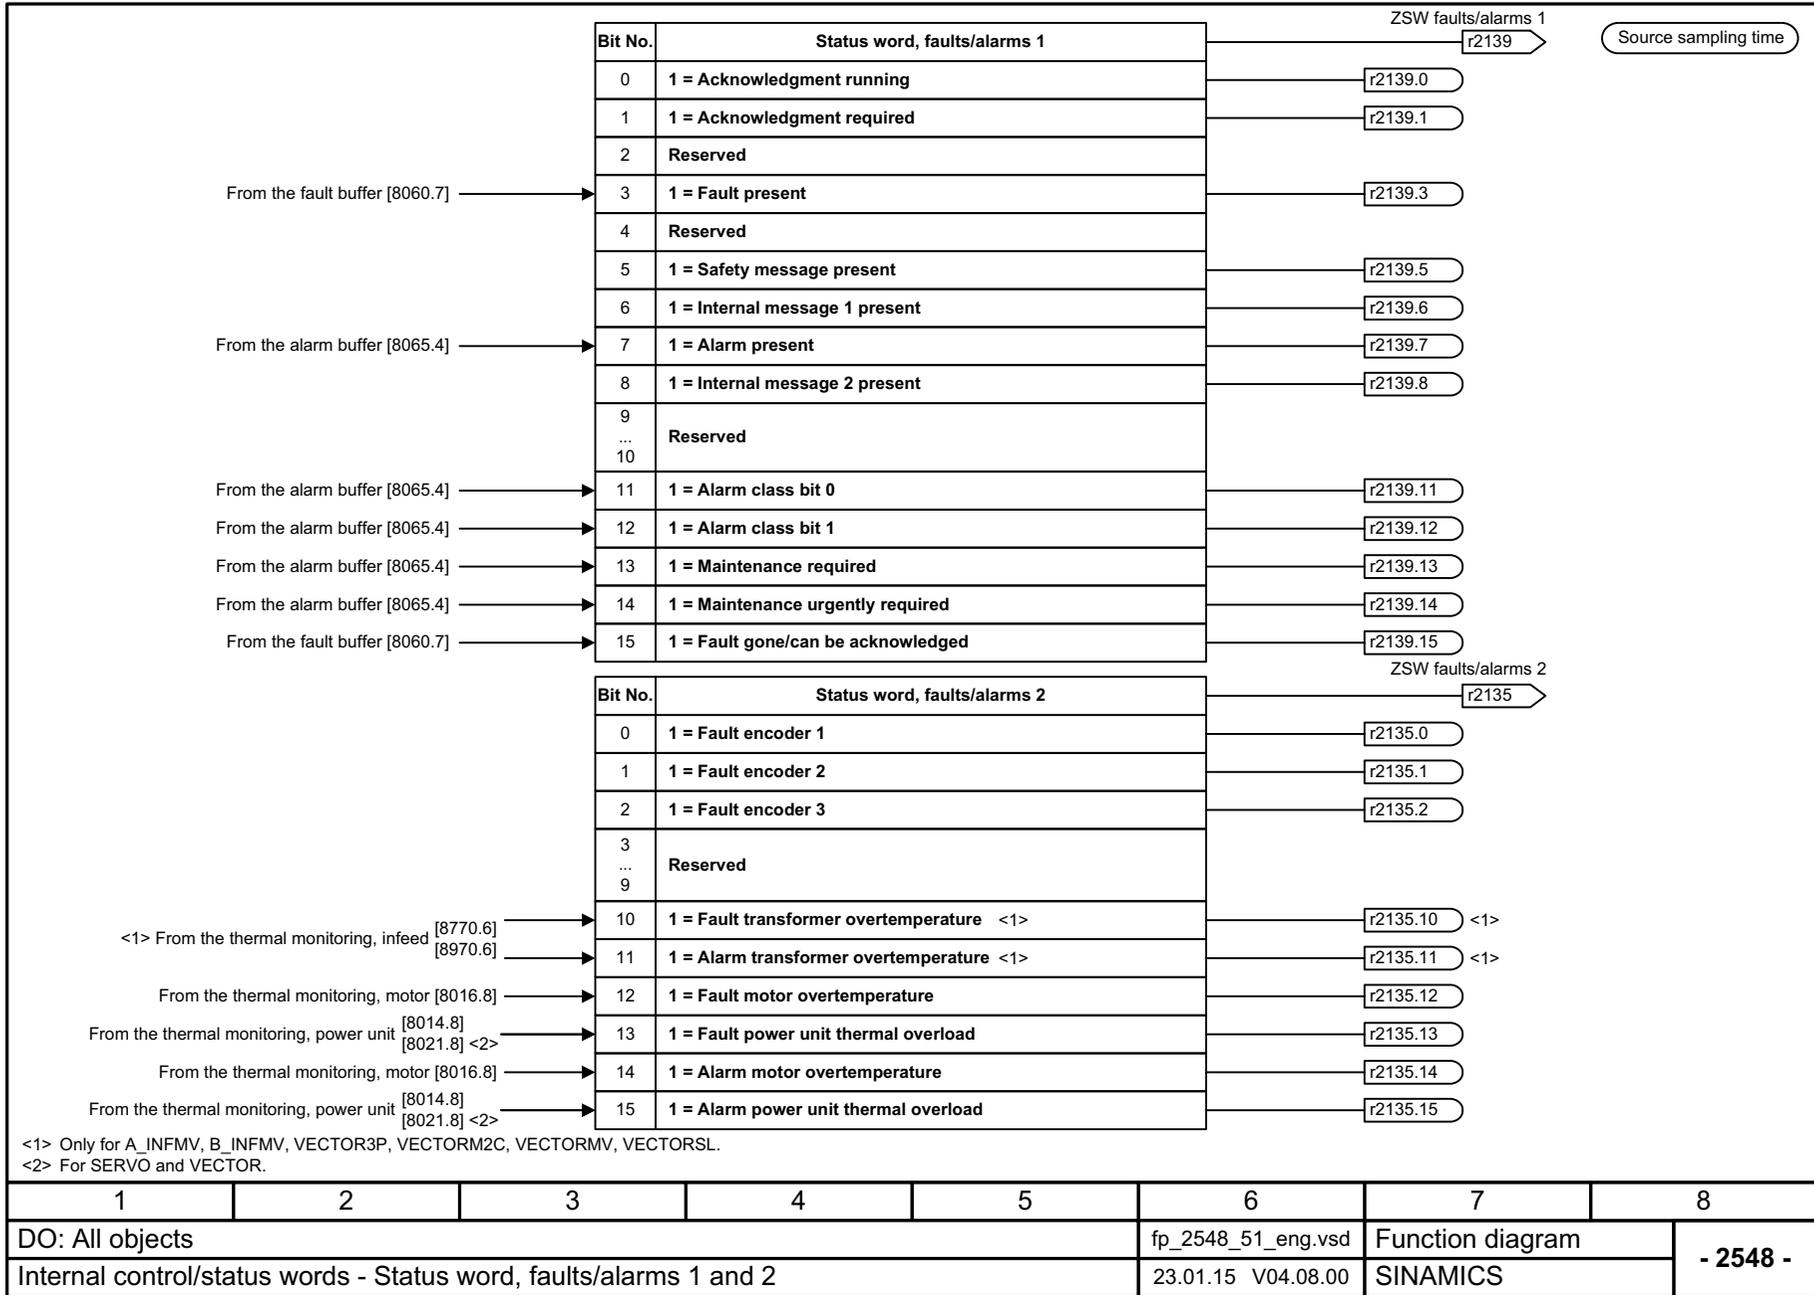


Fig. 3-72 2548 – Status word, faults/alarms 1 and 2

## 3.8 Sequence control


### Function diagrams

---

2610 – Sequencer	1181
2634 – Missing enables, line contactor control, logic operation	1182

---

Fig. 3-73 2610 – Sequencer

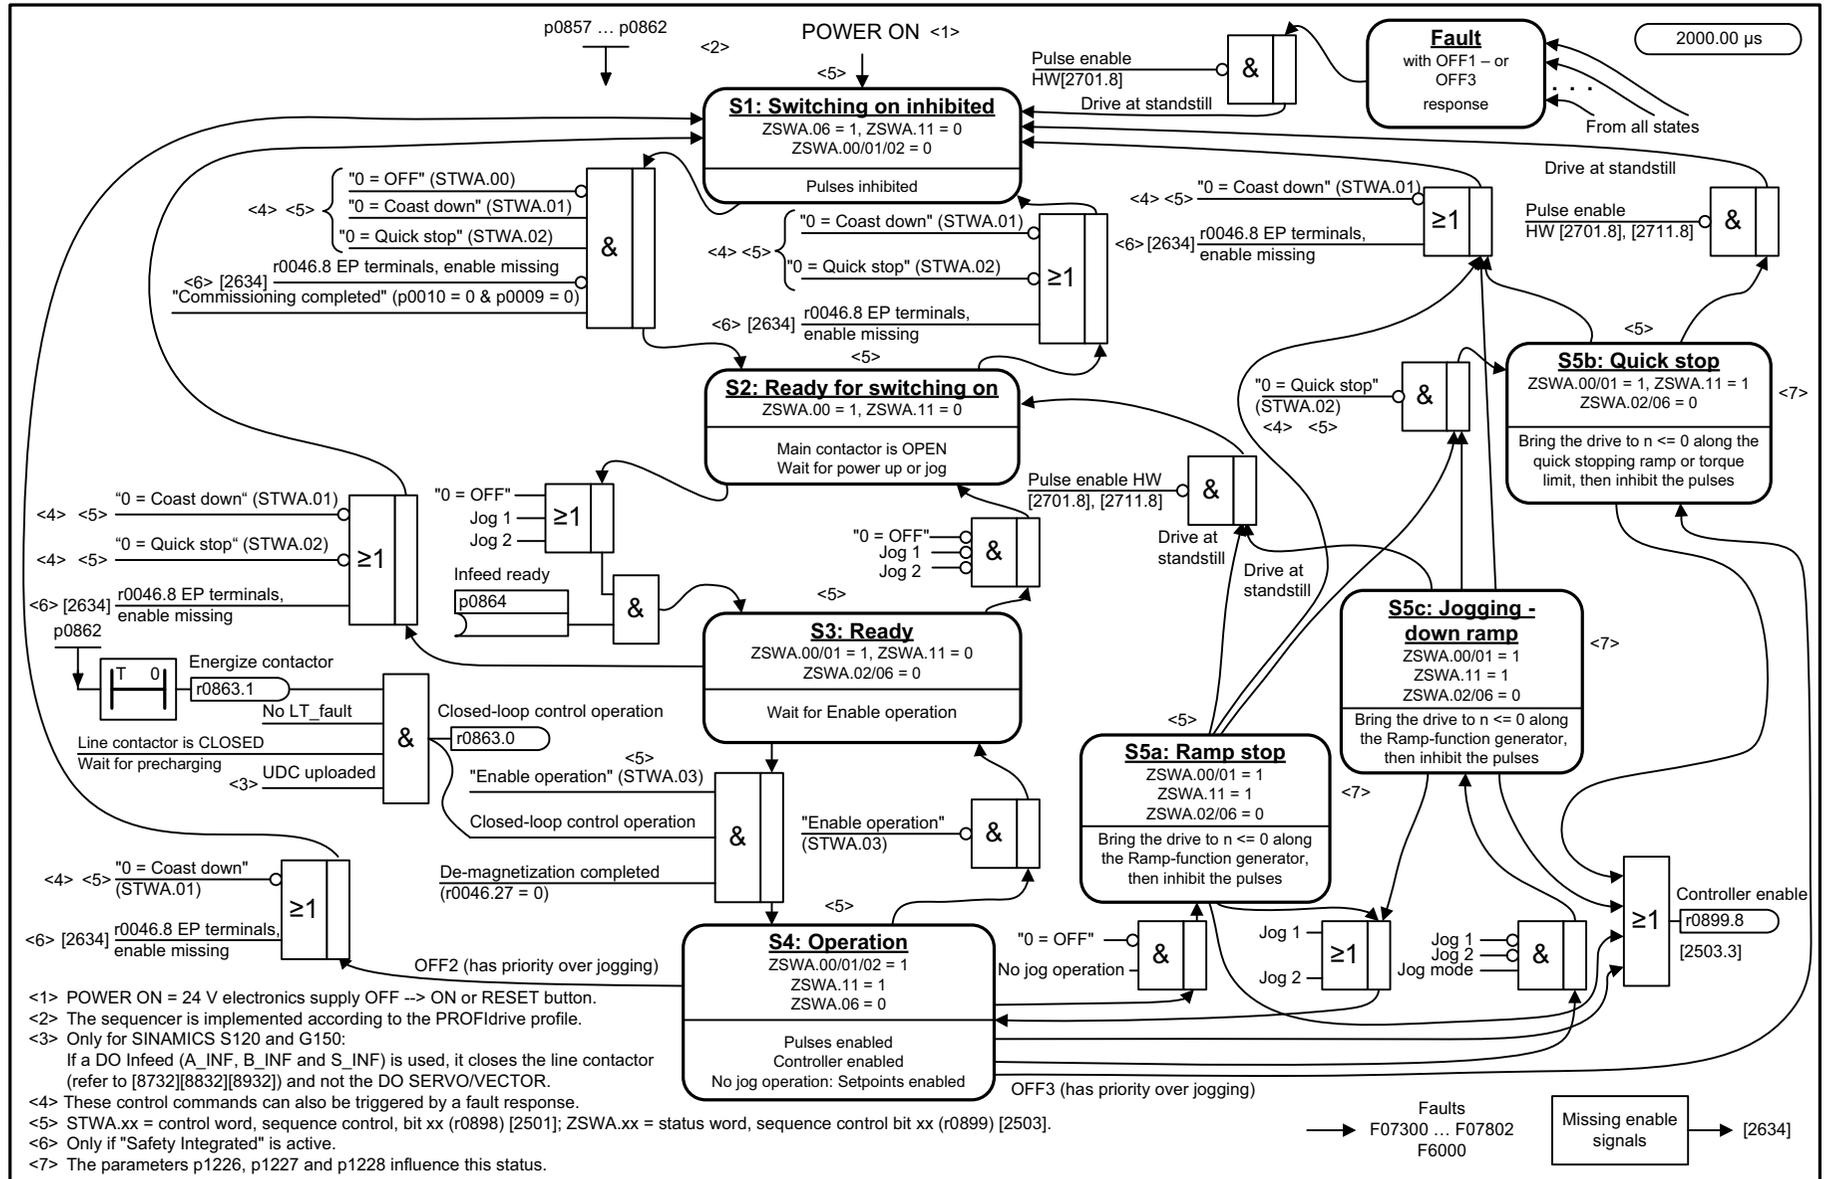

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2610_54_eng.vsd	Function diagram	
Sequence control - Sequencer					26.11.13 V04.08.00	S120/S150/G130/G150	
							- 2610 -

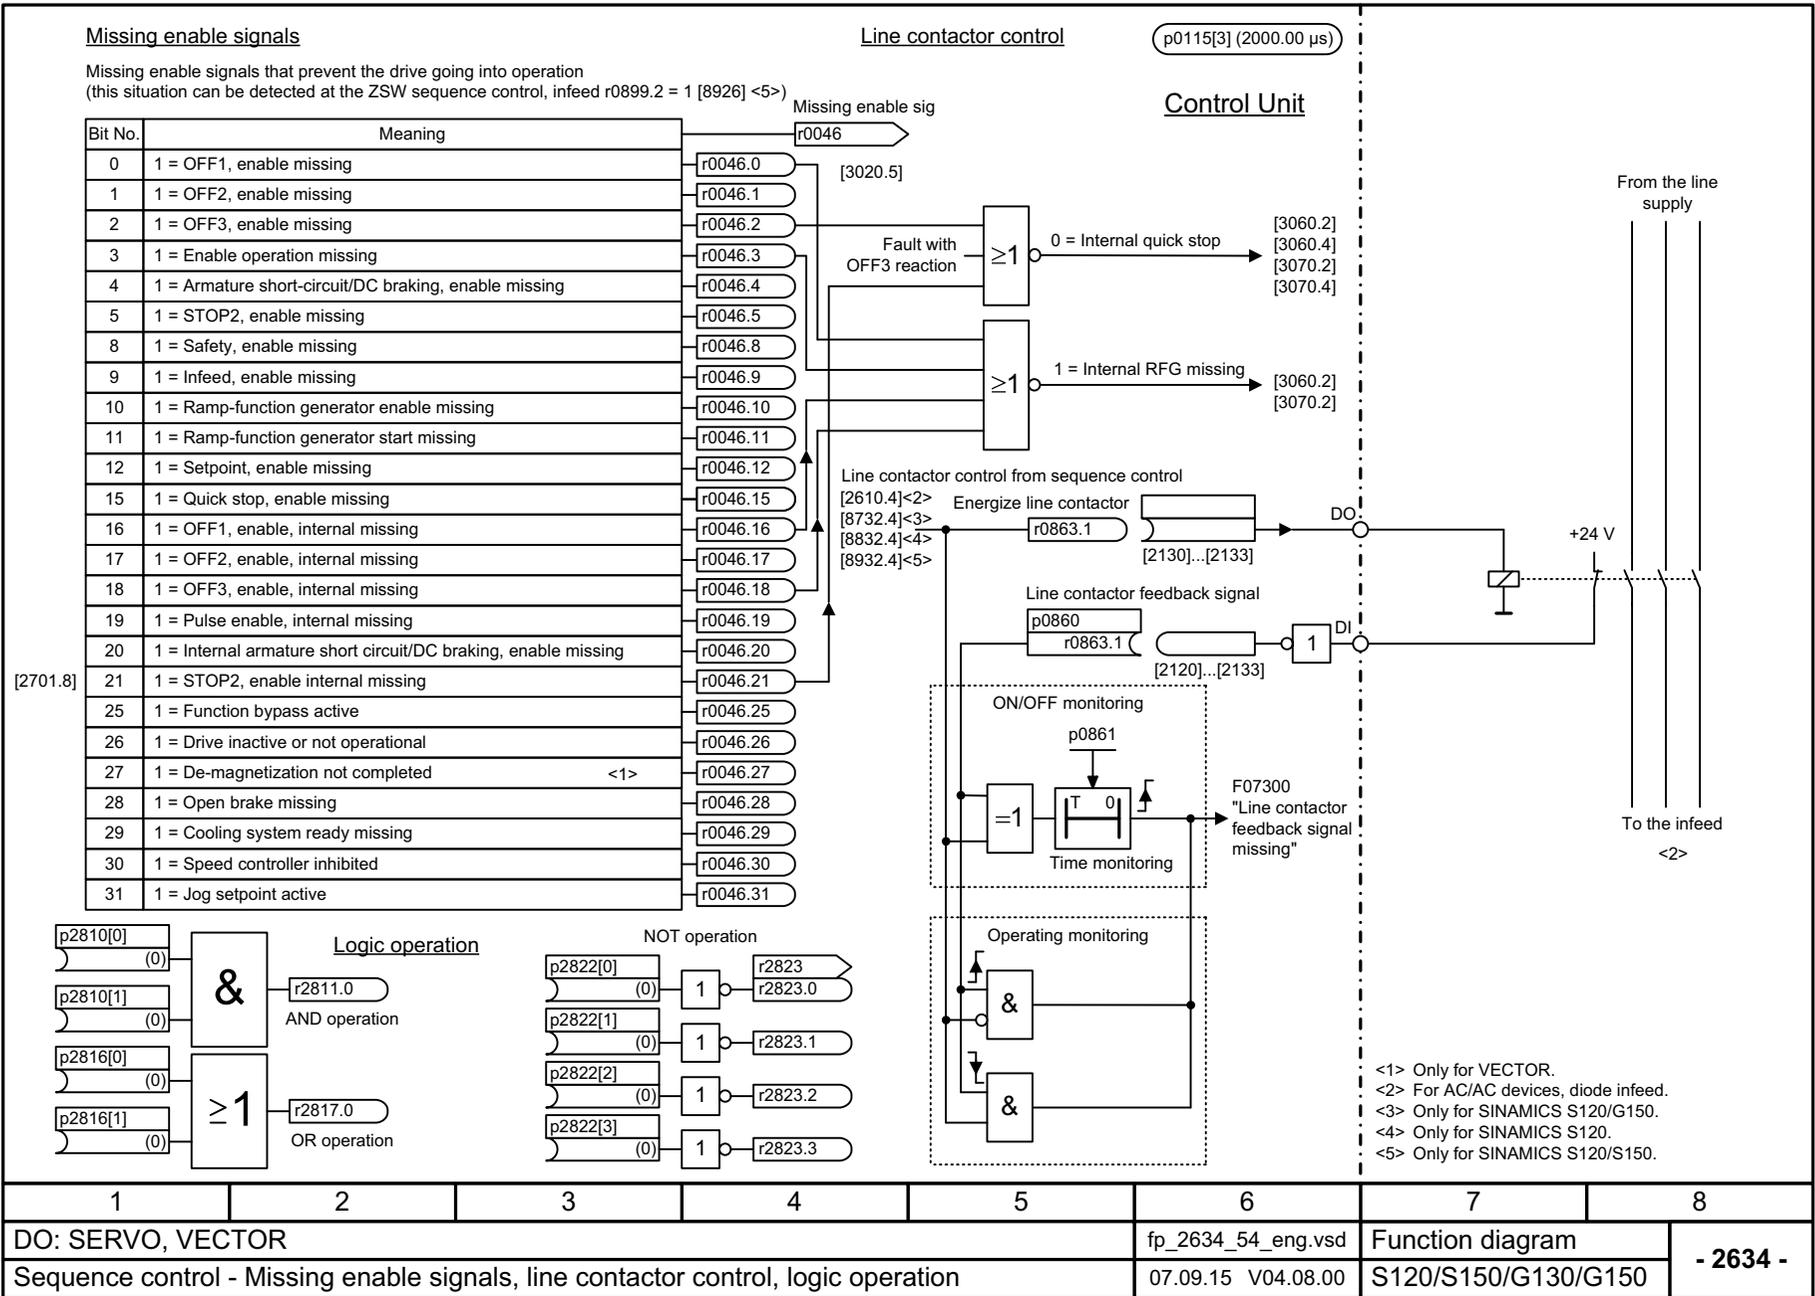


Fig. 3-74 2634 – Missing enables, line contactor control, logic operation

## 3.9 Brake control

### Function diagrams


---

2701 – Basic brake control (r0108.14 = 0)	1184
2704 – Extended brake control, zero-speed detection (r0108.14 = 1)	1185
2707 – Extended brake control, open/close brake (r0108.14 = 1)	1186
2711 – Extended brake control, signal outputs (r0108.14 = 1)	1187

---



Fig. 3-76 2704 – Extended brake control, zero-speed detection (r0108.14 = 1)

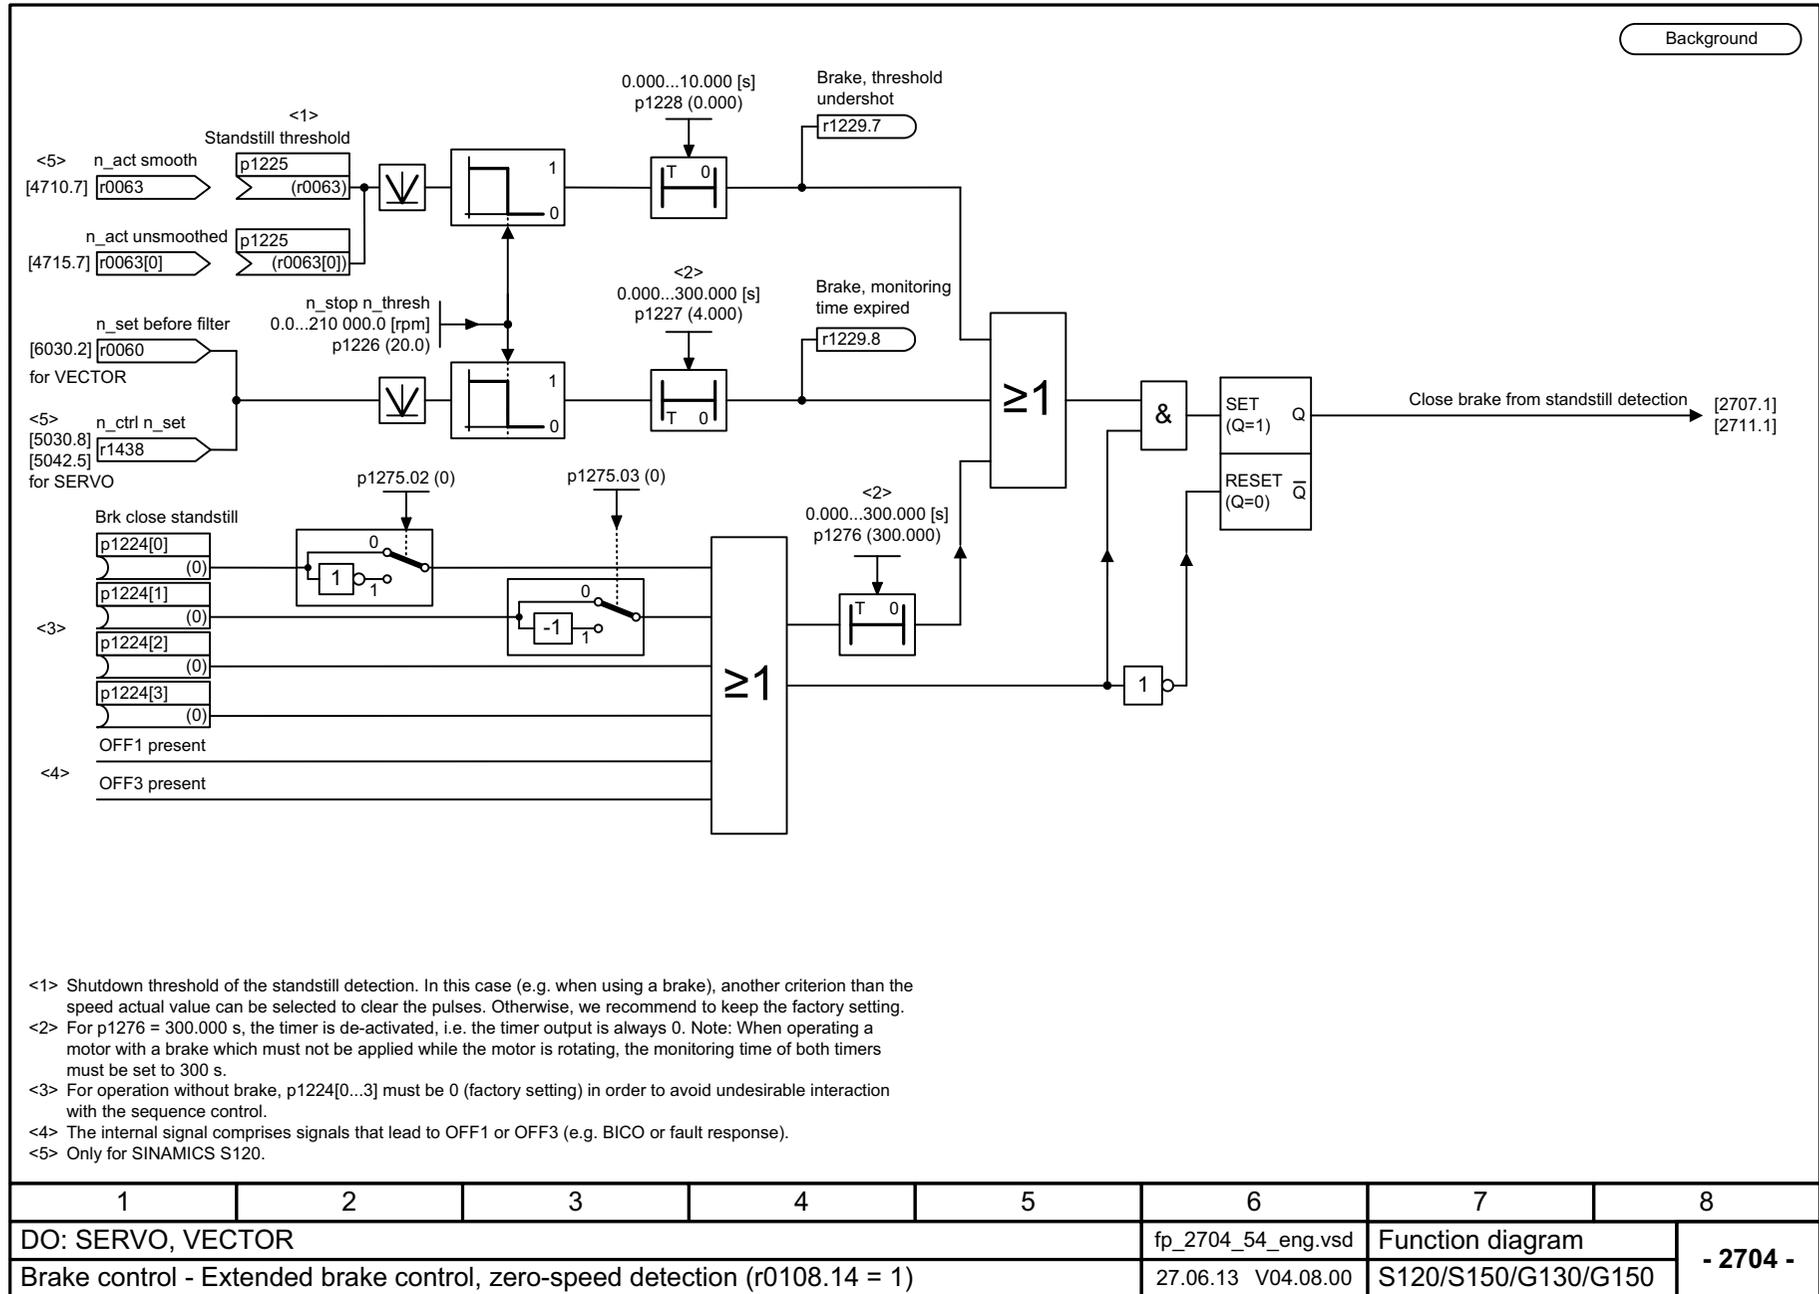


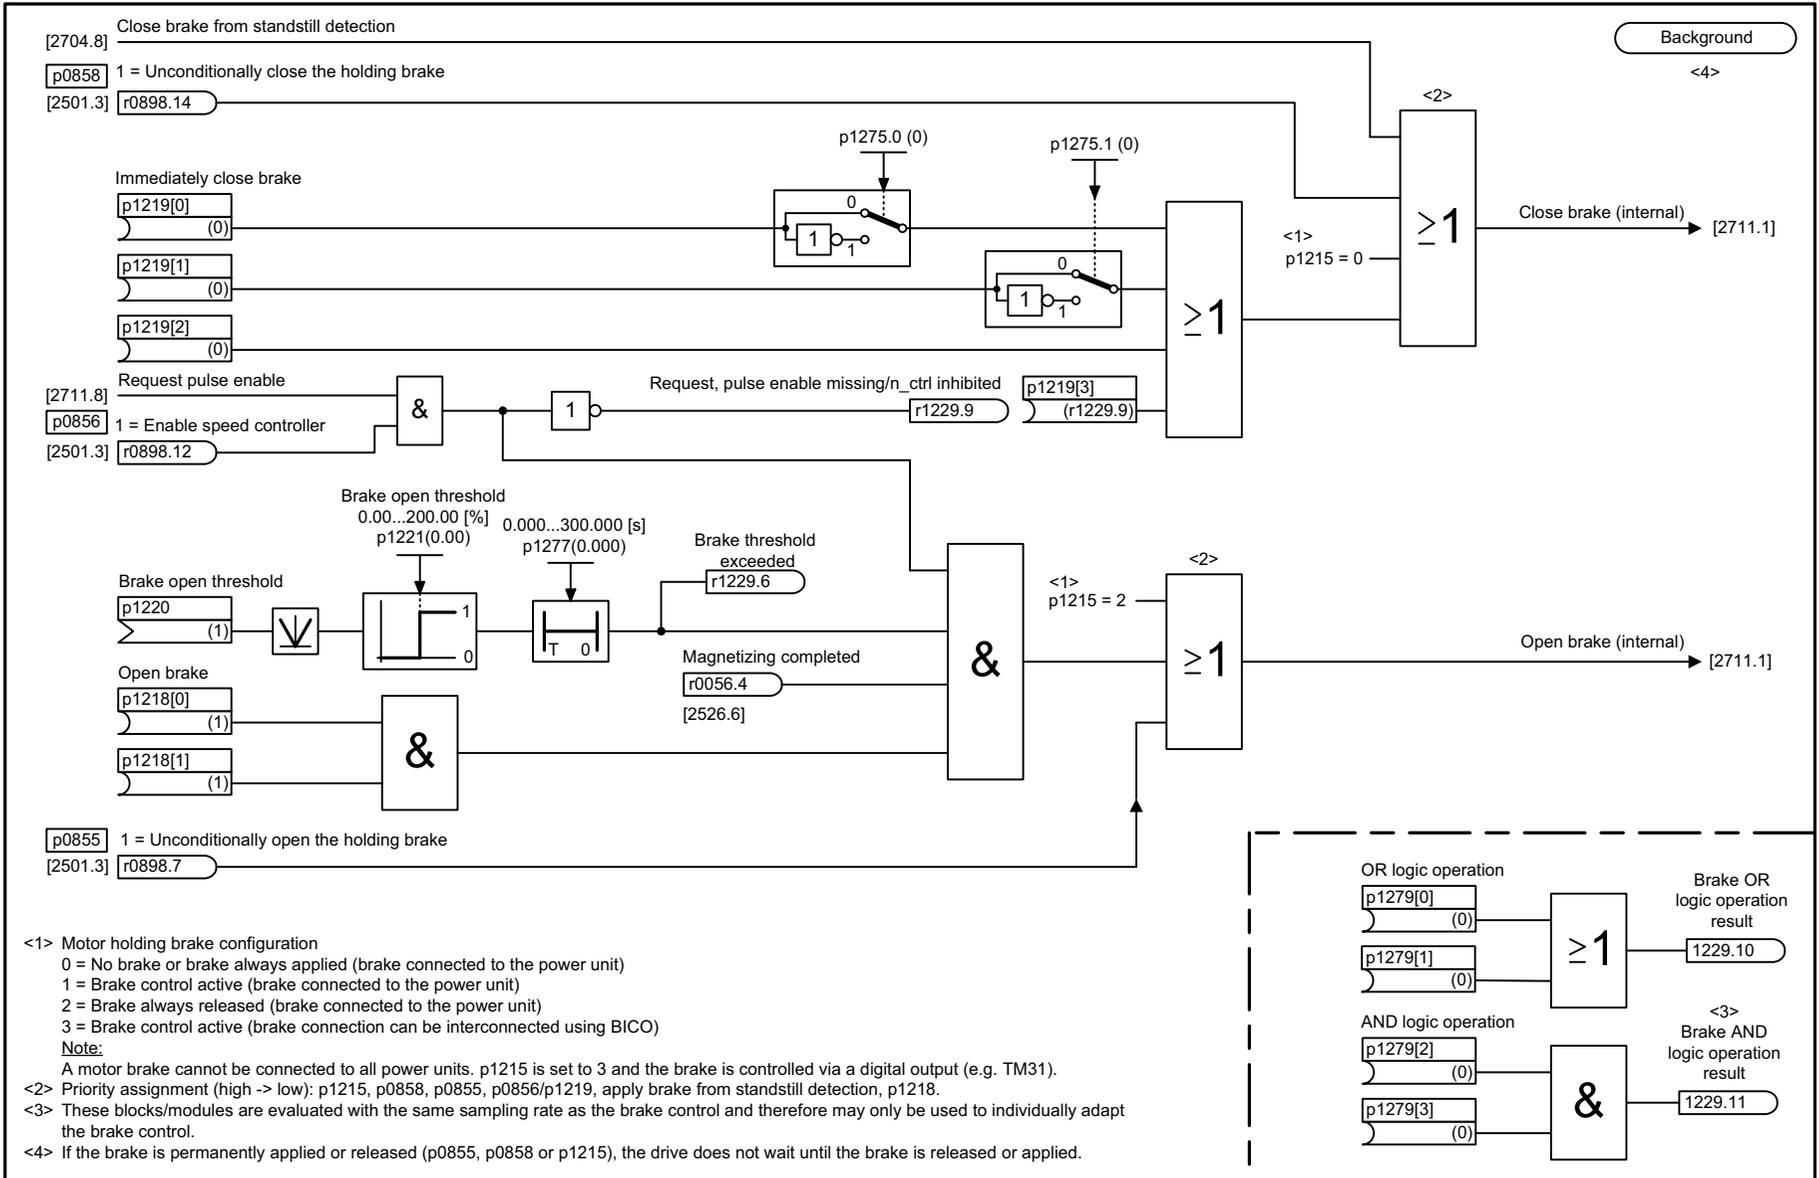


Fig. 3-77 2707 – Extended brake control, open/close brake (r0108.14 = 1)

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2707_54_eng.vsd	Function diagram	
Brake control - Extended brake control, open/close brake (r0108.14 = 1)					18.12.13 V04.08.00	S120/S150/G130/G150	
							- 2707 -

Fig. 3-78 2711 – Extended brake control, signal outputs (r0108.14 = 1)

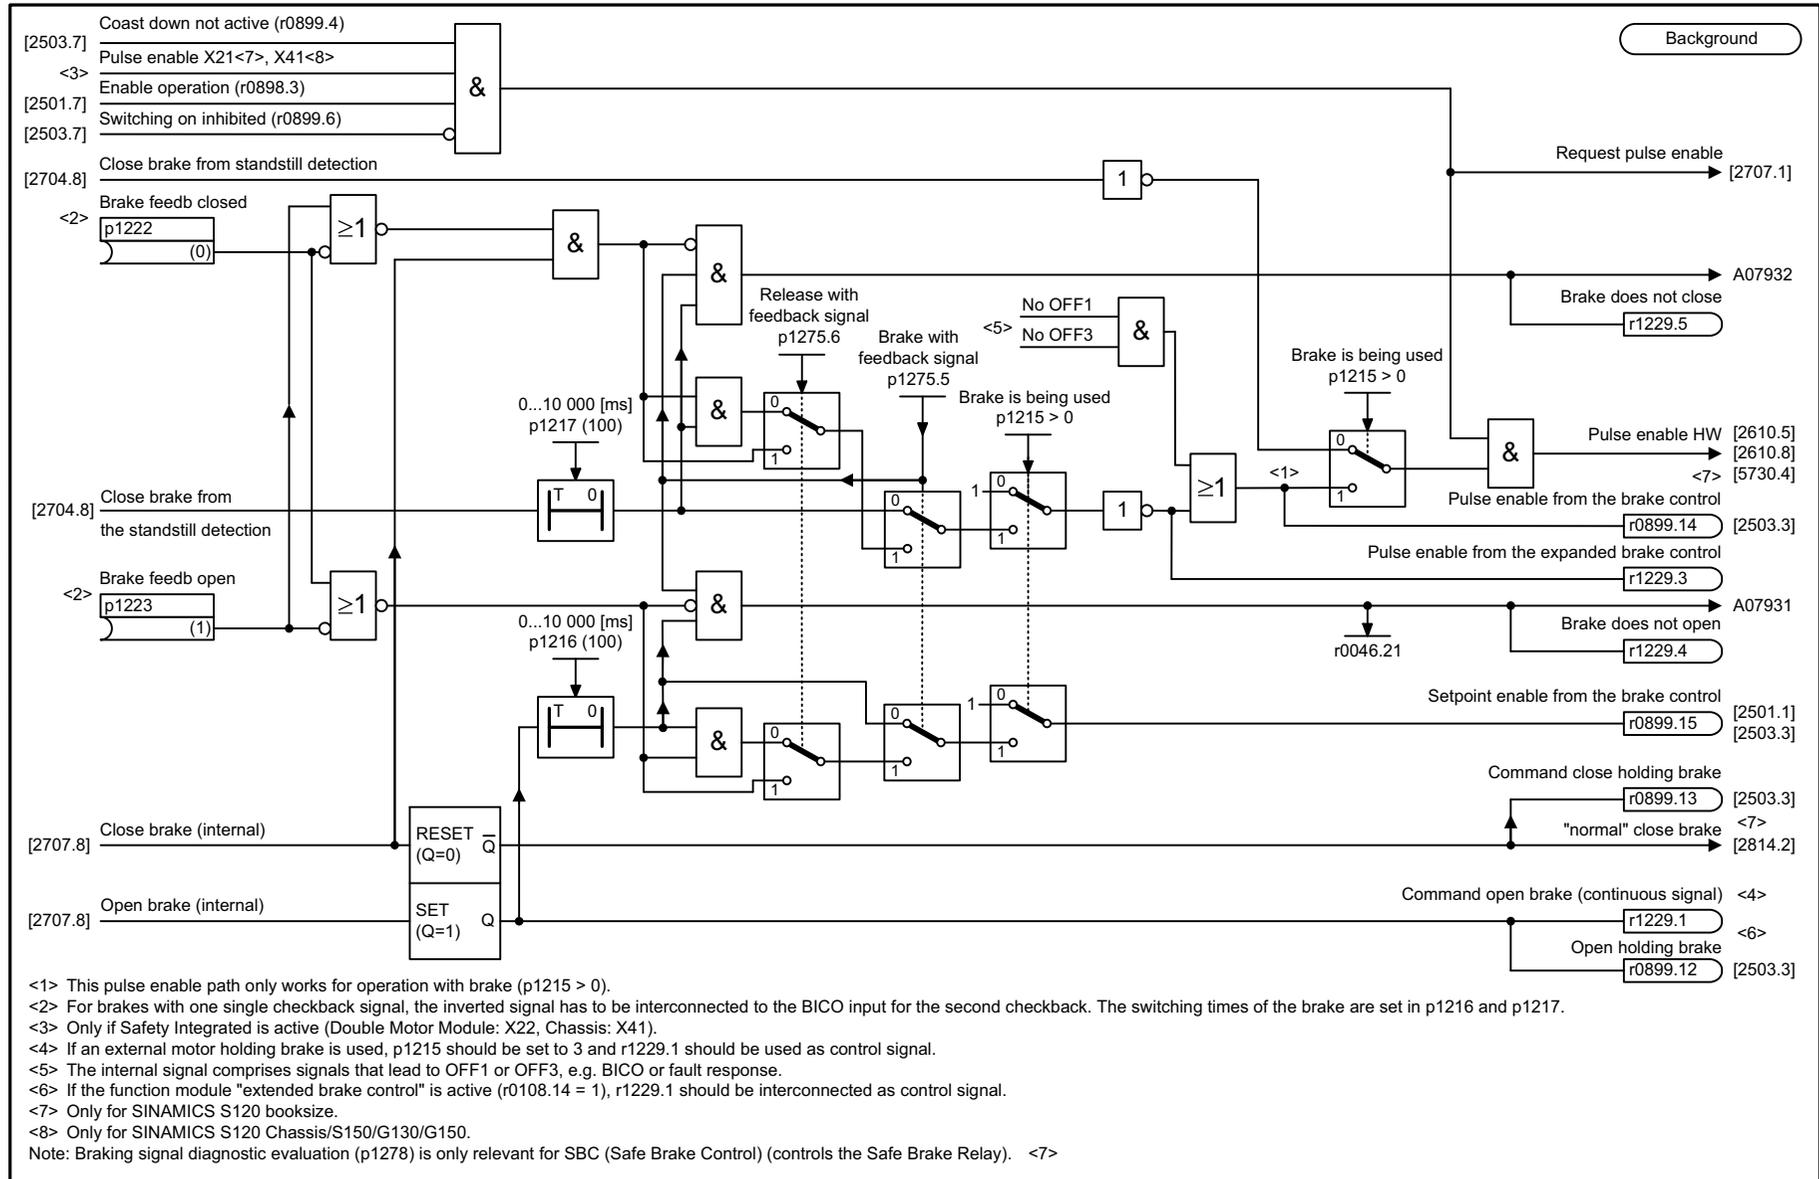

<1> This pulse enable path only works for operation with brake (p1215 > 0).  
 <2> For brakes with one single checkback signal, the inverted signal has to be interconnected to the BICO input for the second checkback. The switching times of the brake are set in p1216 and p1217.  
 <3> Only if Safety Integrated is active (Double Motor Module: X22, Chassis: X41).  
 <4> If an external motor holding brake is used, p1215 should be set to 3 and r1229.1 should be used as control signal.  
 <5> The internal signal comprises signals that lead to OFF1 or OFF3, e.g. BICO or fault response.  
 <6> If the function module "extended brake control" is active (r0108.14 = 1), r1229.1 should be interconnected as control signal.  
 <7> Only for SINAMICS S120 booksize.  
 <8> Only for SINAMICS S120 Chassis/S150/G130/G150.  
 Note: Braking signal diagnostic evaluation (p1278) is only relevant for SBC (Safe Brake Control) (controls the Safe Brake Relay). <7>


1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2711_54_eng.vsd	Function diagram	
Brake control - Extended brake control, signal outputs (r0108.14 = 1)					14.03.16 V04.08.00	S120/S150/G130/G150	
							- 2711 -


## 3.10 Safety Integrated Basic Functions

### Function diagrams

2800 – Parameter manager	1189
2802 – Monitoring functions and faults/alarms	1190
2804 – SI status CU, MM, CU + MM, group STO	1191
2806 – S_STW1/2 Safety control word 1/2, S_ZSW1/2 Safety status word 1/2	1192
2810 – STO (Safe Torque Off), SS1 (Safe Stop 1)	1193
2811 – STO (Safe Torque Off), safe pulse suppression	1194
2814 – SBC (Safe Brake Control), SBA (Safe Brake Adapter)	1195

Fig. 3-79 2800 – Parameter manager

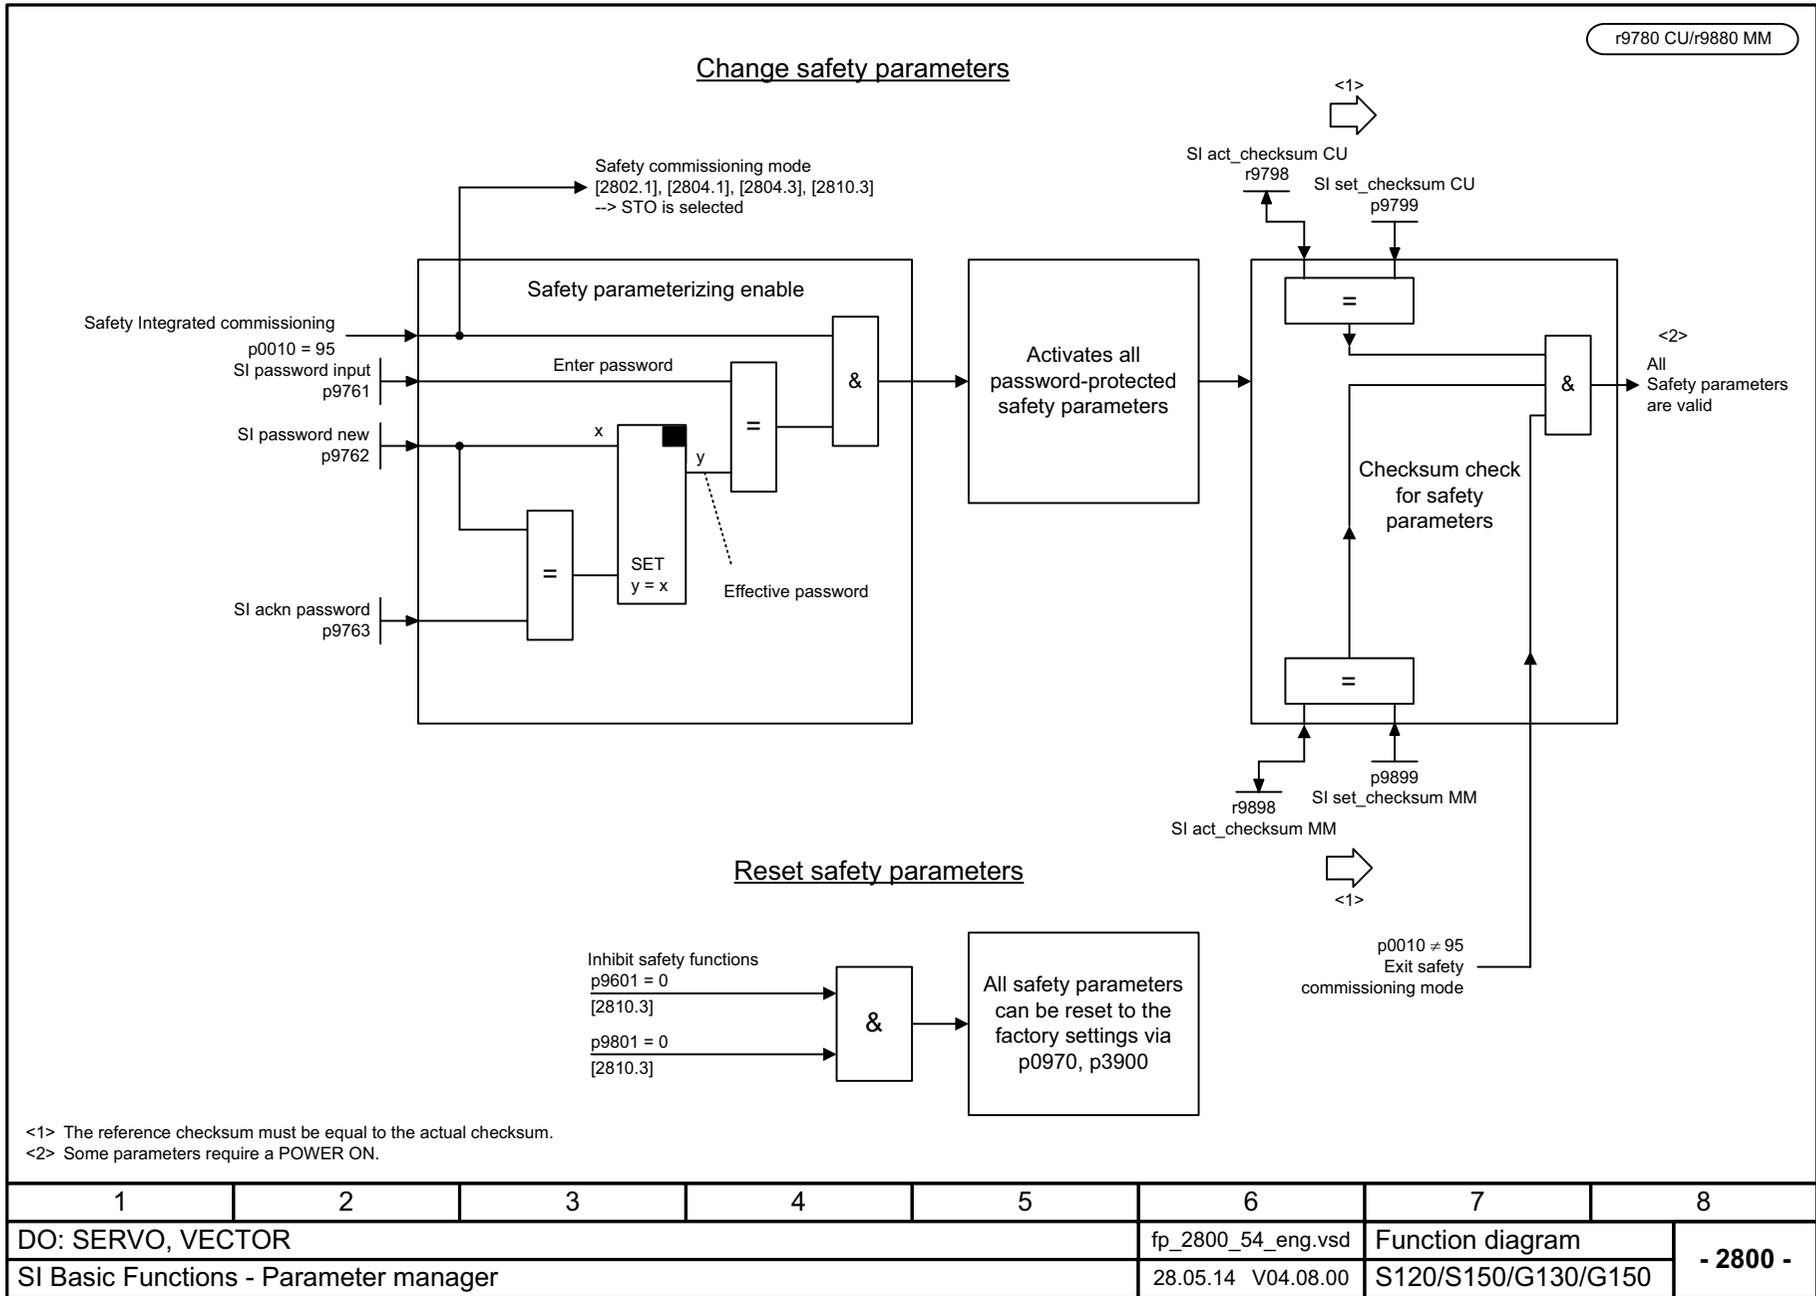

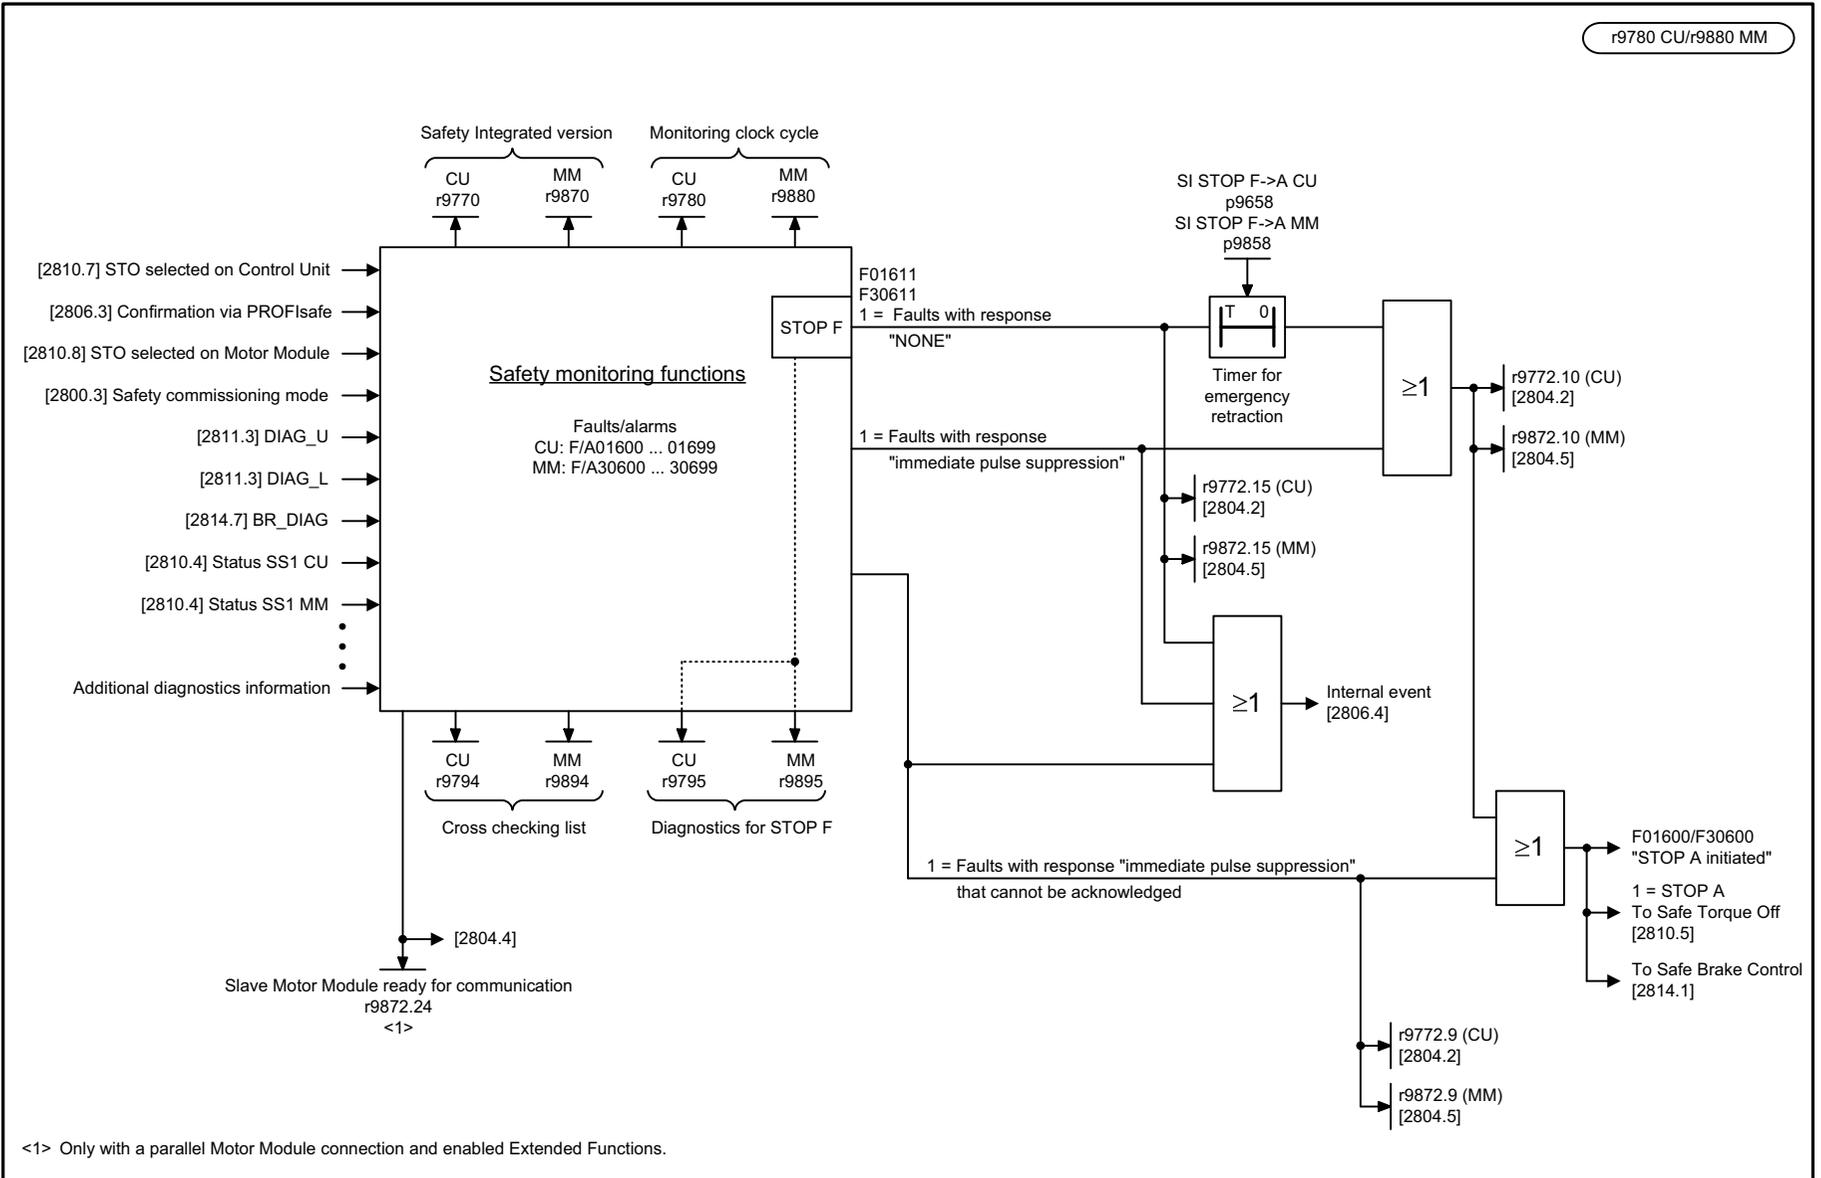


<1> Only with a parallel Motor Module connection and enabled Extended Functions.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2802_54_eng.vsd	Function diagram	
SI Basic Functions - Monitoring functions and faults/alarms					28.05.14 V04.08.00	S120/S150/G130/G150	
- 2802 -							

Fig. 3-80 2802 – Monitoring functions and faults/alarms


Fig. 3-81 2804 – SI status CU, MM, CU + MM, group STO

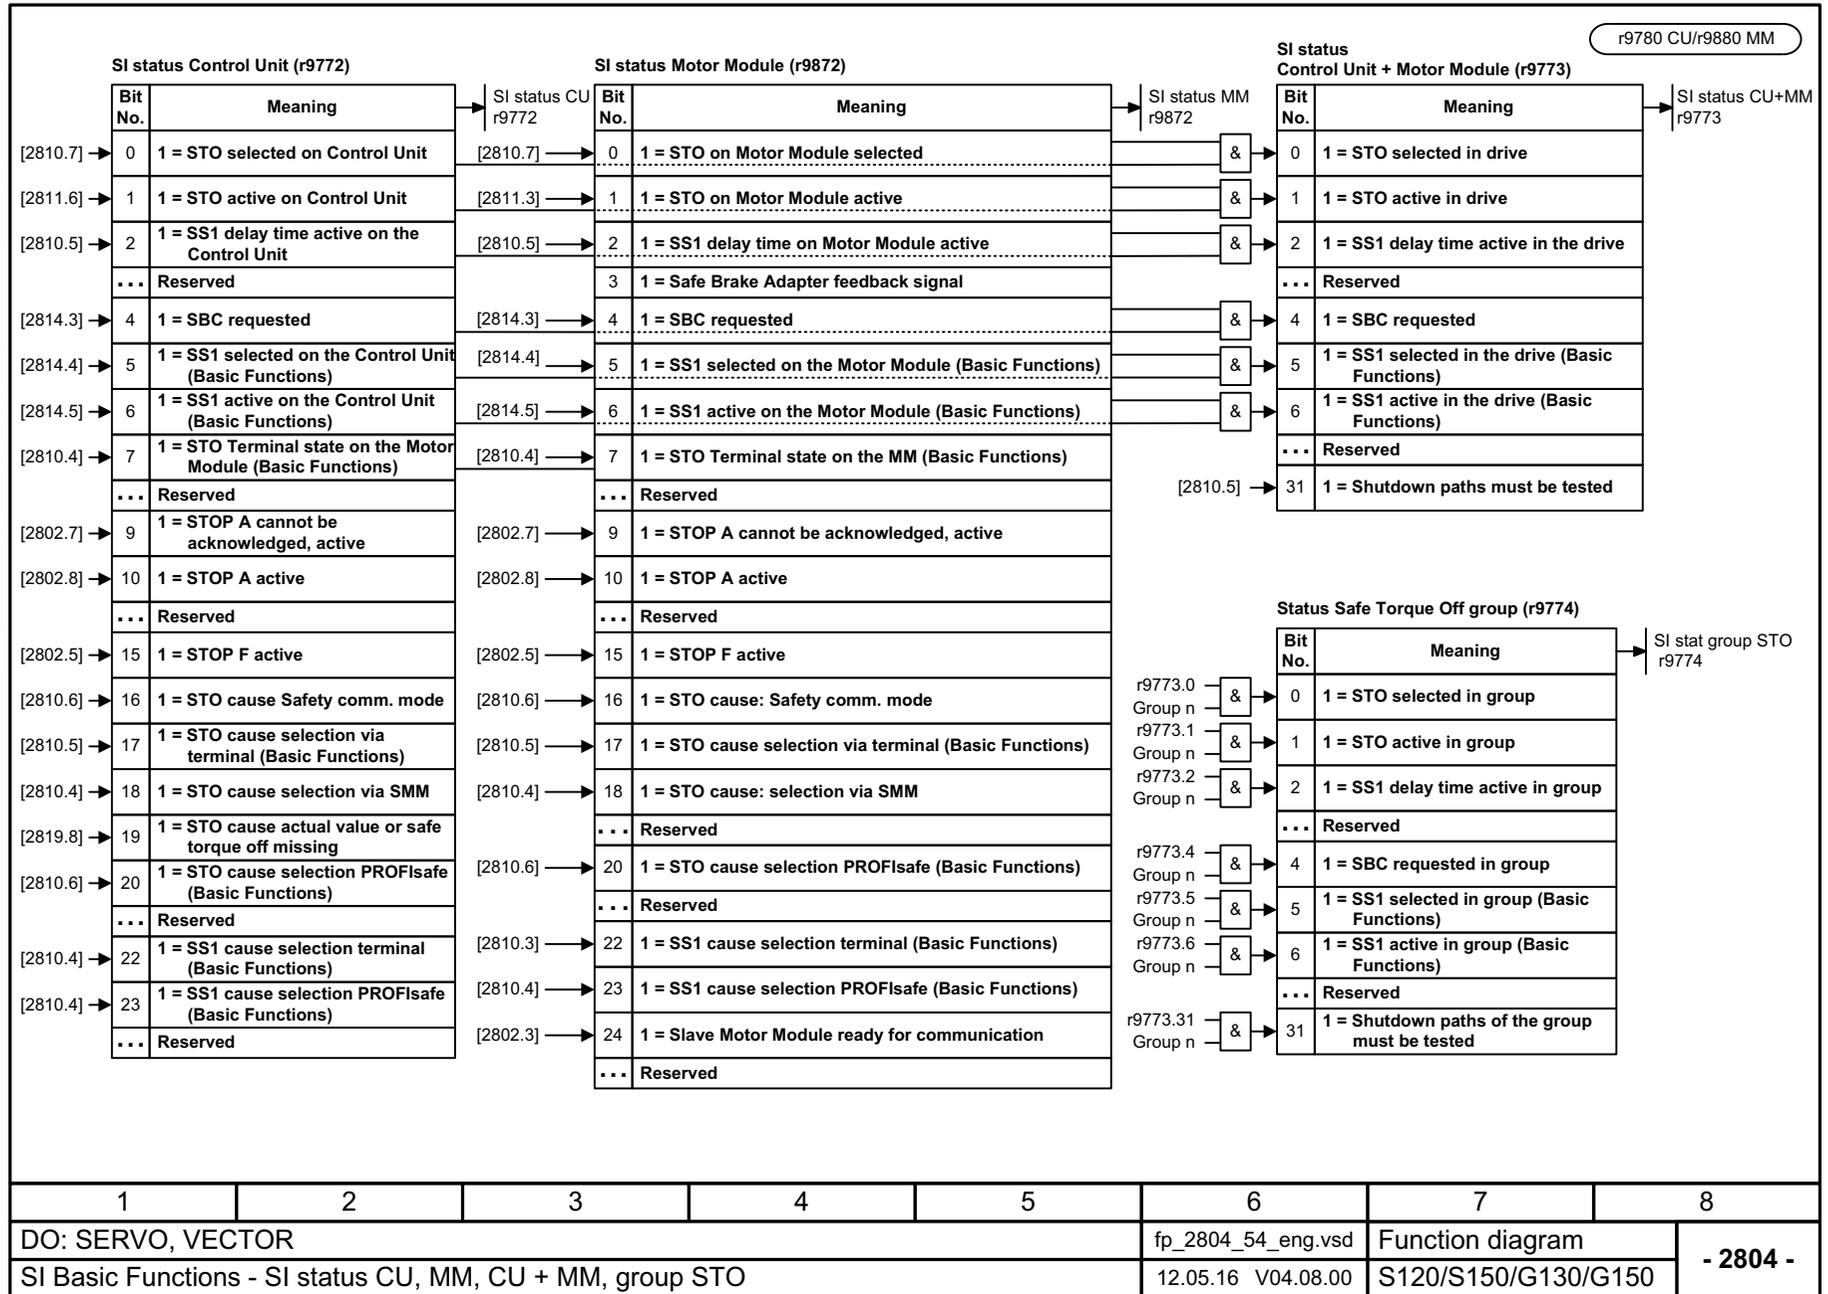

2 x r9780


**S\_STW1 Safety control word 1**

Bit No.	Meaning
0	1 = Deselect STO
1	1 = Deselect SS1
...	Reserved
7	1/0 = Acknowledgment
...	Reserved
15	

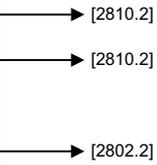


**S\_ZSW1 Safety status word 1**

Bit No.	Meaning
0	1 = STO active
1	1 = SS1 active
...	Reserved
7	1 = Internal event
...	Reserved
15	

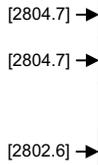


**S\_STW2 Safety control word 2**

Bit No.	Meaning
0	1 = Deselect STO
1	1 = Deselect SS1
...	Reserved
7	1/0 = Acknowledgment
...	Reserved
31	

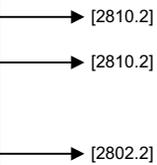

**S\_ZSW2 Safety status word 2**


Bit No.	Meaning
0	1 = STO active
1	1 = SS1 active
...	Reserved
7	1 = Internal event
...	Reserved
31	

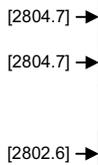

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2806_54_eng.vsd	Function diagram	
SI Basic Functions - S_STW1/2 Safety control word 1/2, S_ZSW1/2 Safety status word 1/2					31.07.14 V04.08.00	S120/S150/G130/G150	
- 2806 -							

Fig. 3-82 2806 – S\_STW1/2 Safety control word 1/2, S\_ZSW1/2 Safety status word 1/2



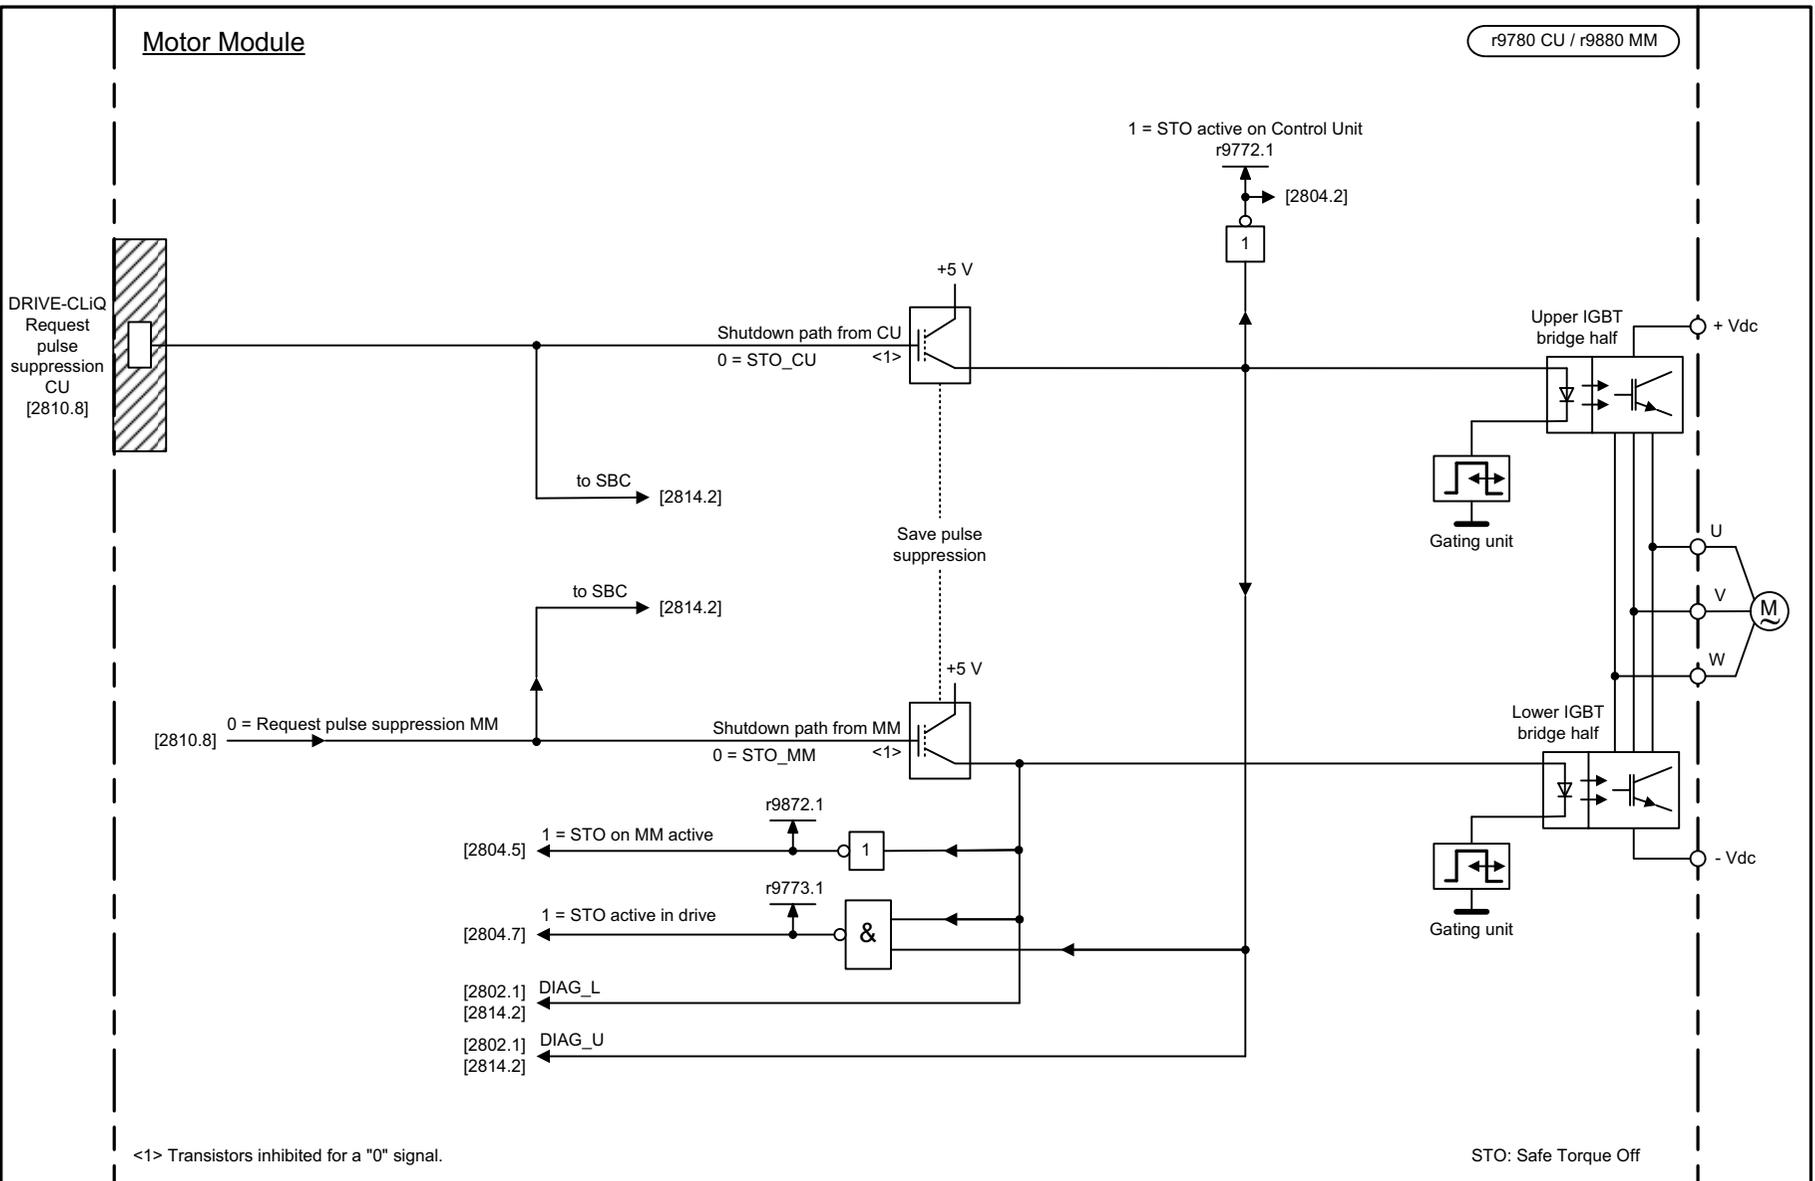


<1> Transistors inhibited for a "0" signal.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2811_54_eng.vsd	Function diagram	
SI Basic Functions - STO (Safe Torque Off), safe pulse suppression					17.01.12 V04.08.00	S120/S150/G130/G150	
- 2811 -							

Fig. 3-84 2811 – STO (Safe Torque Off), safe pulse suppression

Fig. 3-85 2814 – SBC (Safe Brake Control), SBA (Safe Brake Adapter)

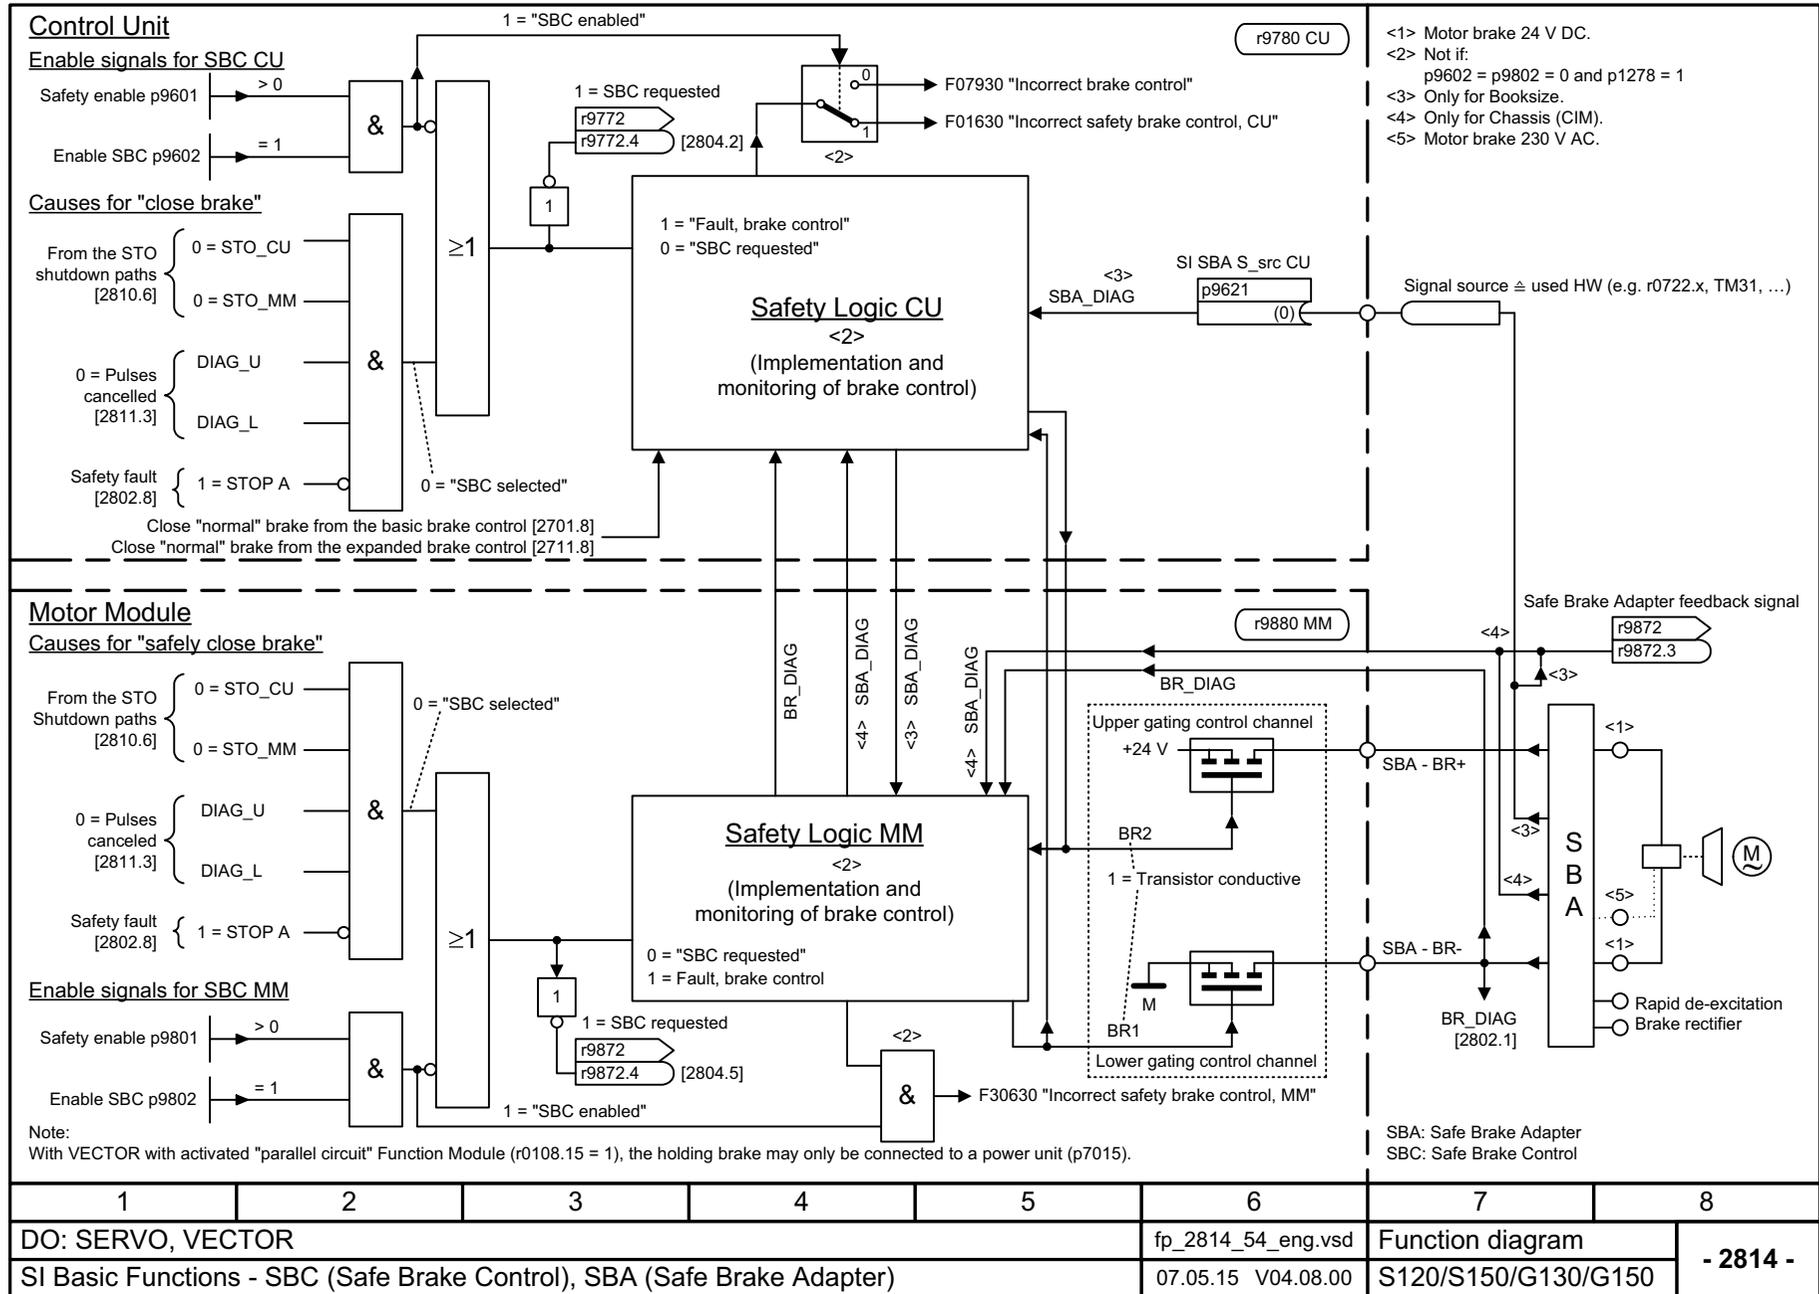



## 3.11 Safety Integrated Extended Functions

### Function diagrams

2818 – Parameter manager	1197
2819 – SS1, SS2, SOS, internal STOP B, C, D, F	1198
2820 – SLS (Safely-Limited Speed)	1199
2821 – Safe referencing	1200
2822 – SLP (Safely-Limited Position)	1201
2823 – SSM (Safe Speed Monitor)	1202
2824 – SDI (Safe Direction)	1203
2825 – SAM (Safe Acceleration Monitor), SBR (Safe Brake Ramp)	1204
2836 – SBT (Safe Brake Test)	1205
2837 – Selection of active control word	1206
2840 – SI Motion drive-integrated control signals / status signals	1207
2842 – S_STW1 Safety control word 1, S_ZSW1 Safety status word 1	1208
2843 – S_STW2 Safety control word 2, S_ZSW2 Safety status word 2	1209

Fig. 3-86 2818 – Parameter manager

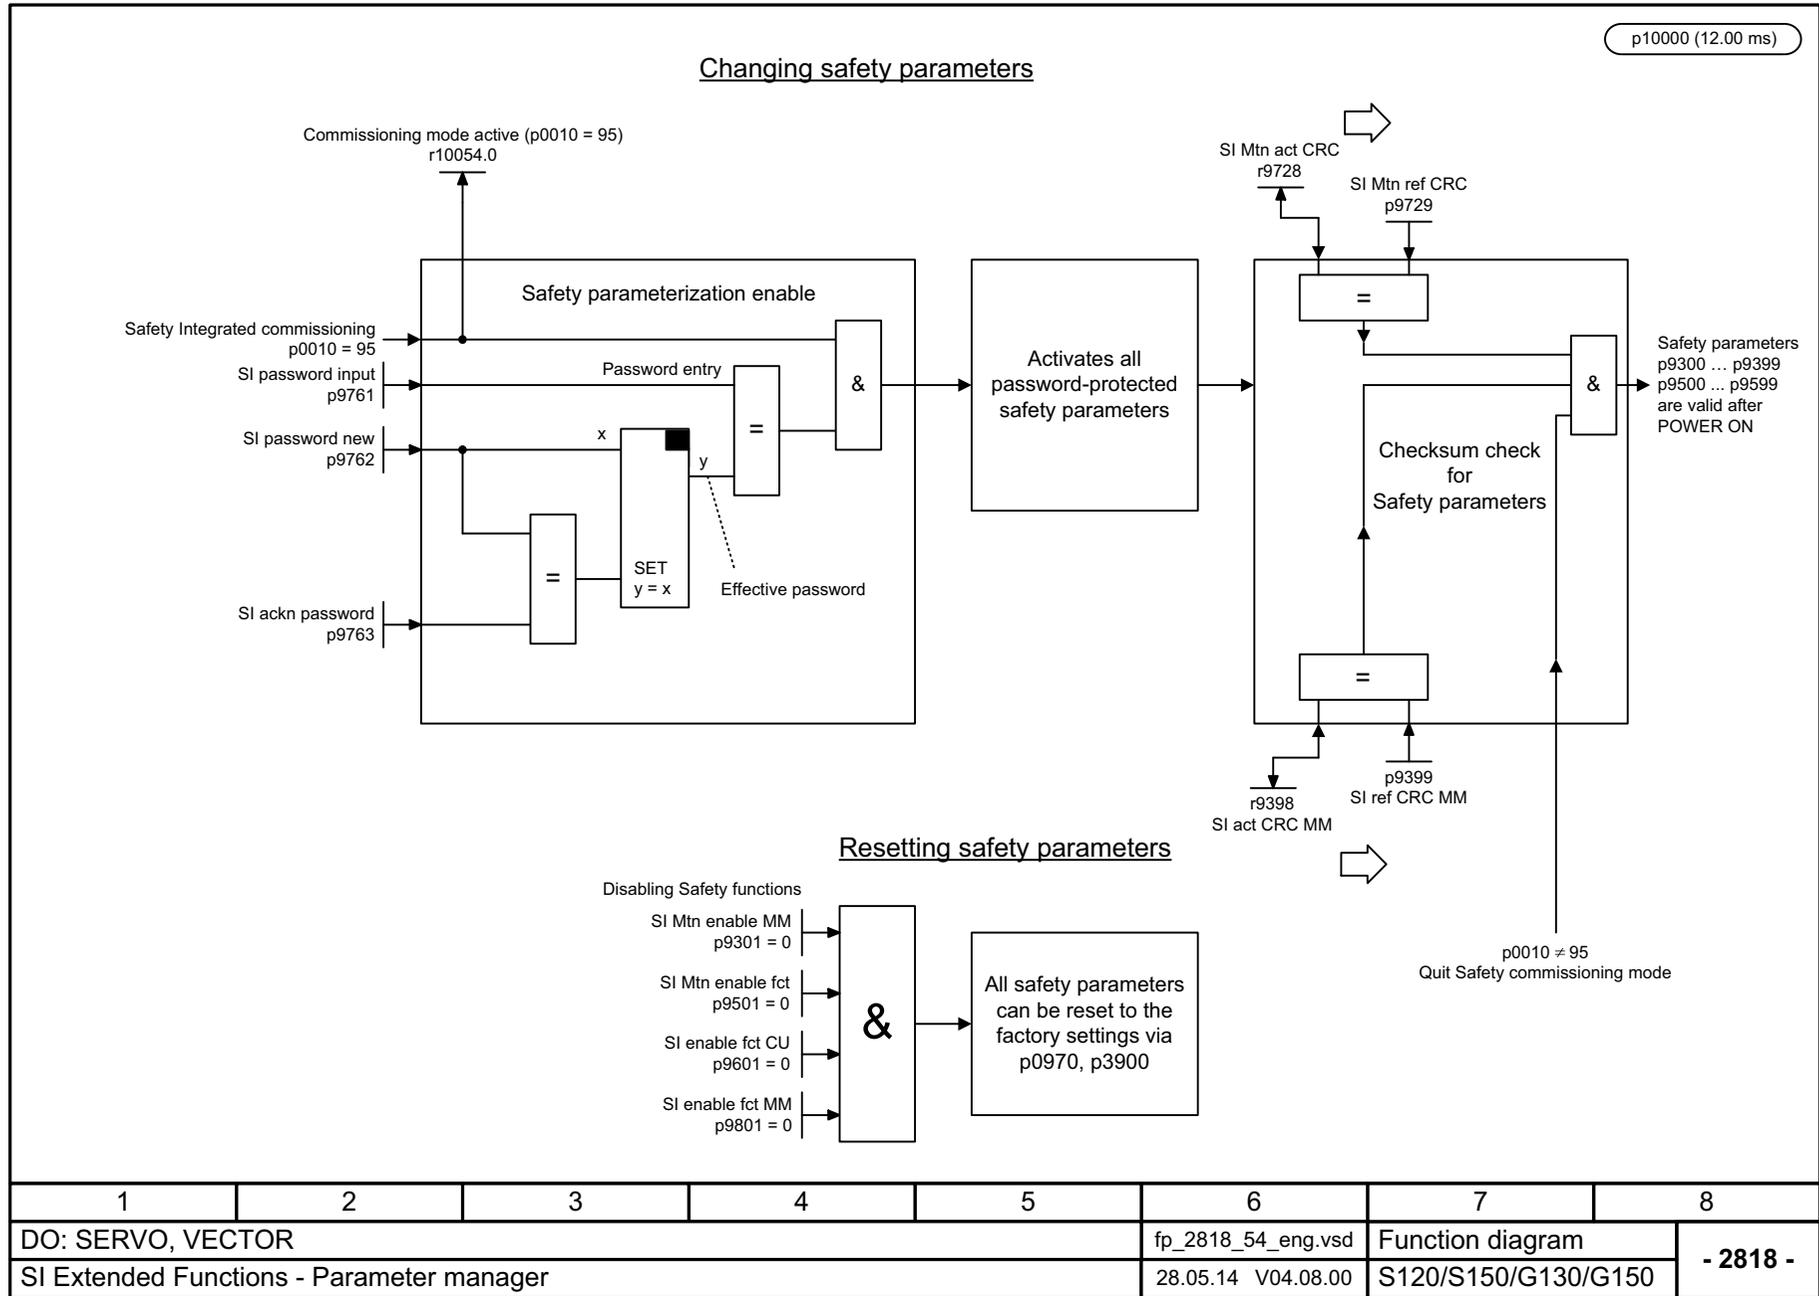

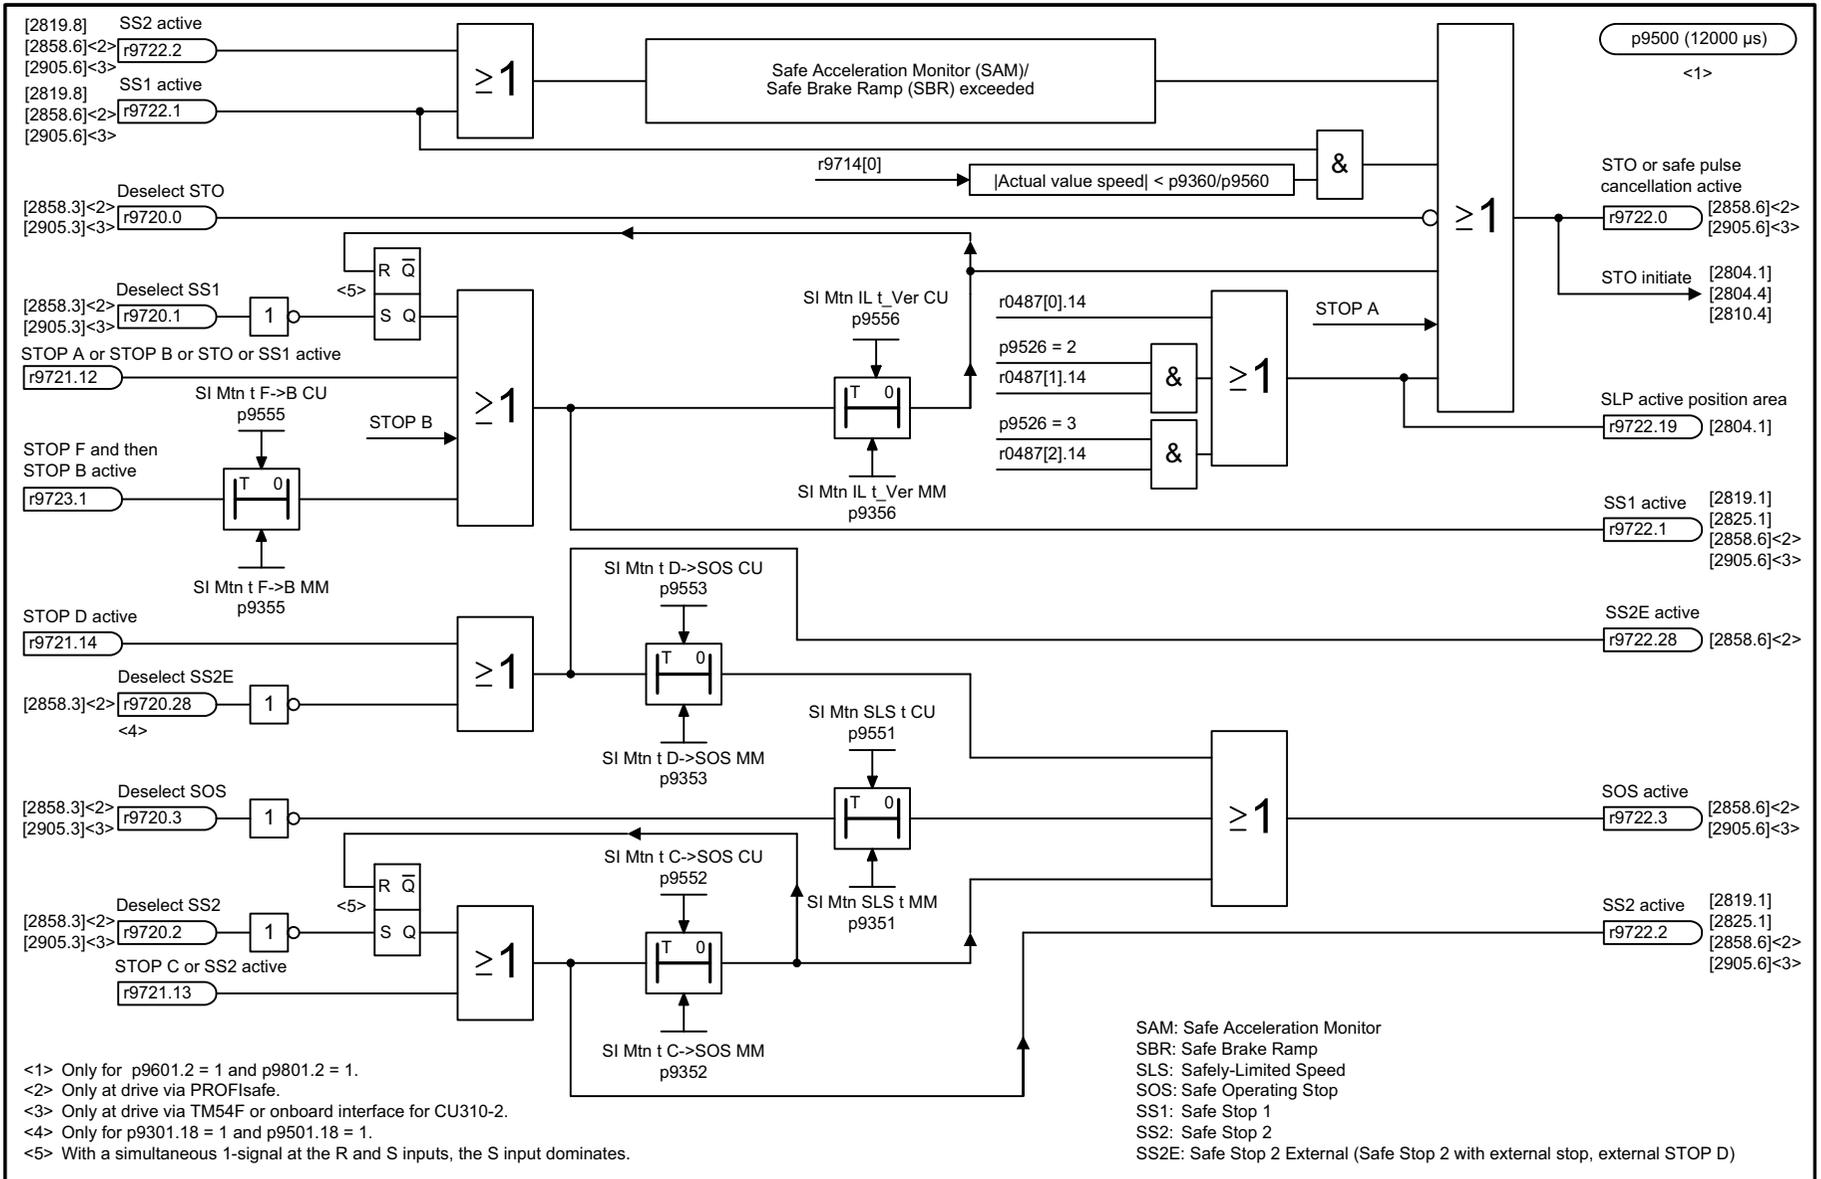

<1> Only for p9601.2 = 1 and p9801.2 = 1.  
 <2> Only at drive via PROFIsafe.  
 <3> Only at drive via TM54F or onboard interface for CU310-2.  
 <4> Only for p9301.18 = 1 and p9501.18 = 1.  
 <5> With a simultaneous 1-signal at the R and S inputs, the S input dominates.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2819_54_eng.vsd	Function diagram	
SI Extended Functions - SS1, SS2, SOS, Interner STOP B, C, D, F					01.04.16 V04.08.00	S120/S150/G130/G150	

Fig. 3-87 2819 – SS1, SS2, SOS, internal STOP B, C, D, F




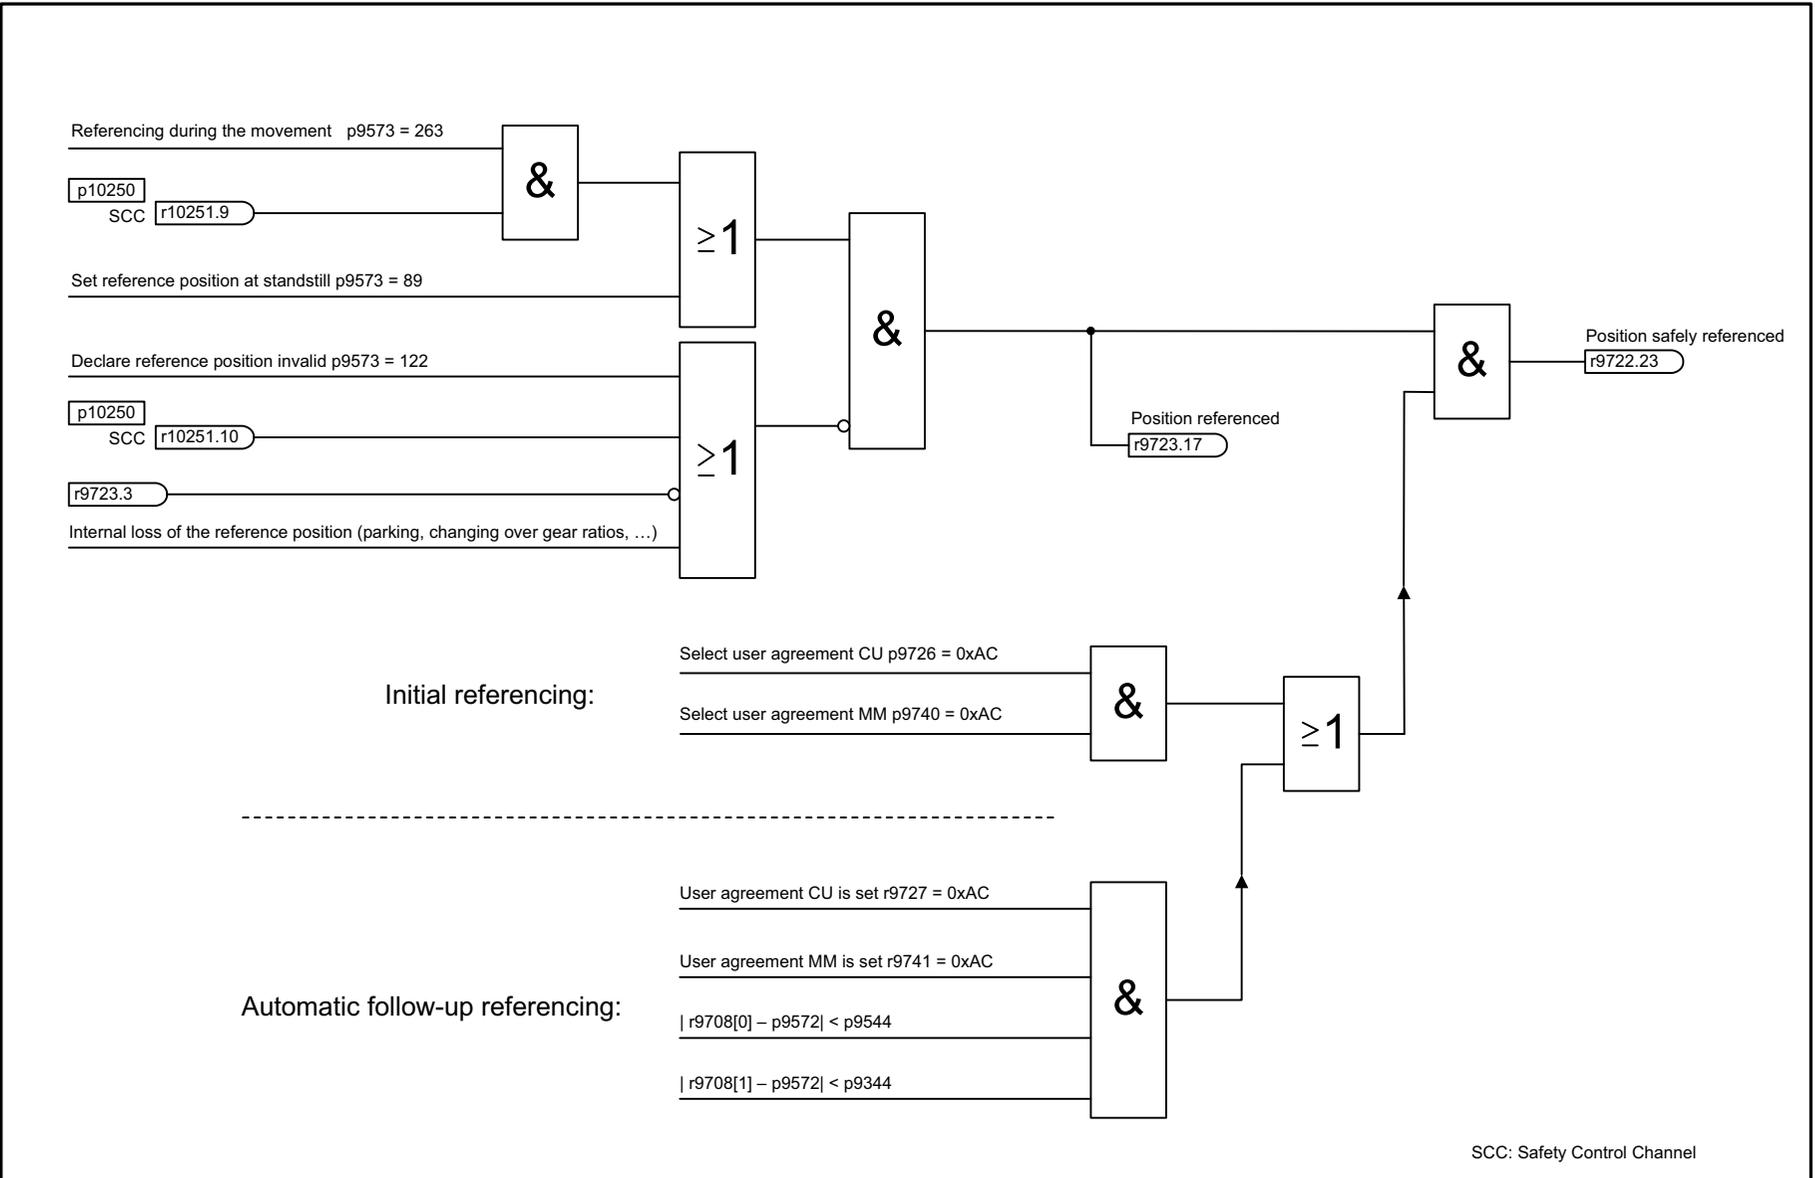



Fig. 3-89 2821 – Safe referencing

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2821_54_eng.vsd	Function diagram	
SI Extended Functions - Safely referencing					17.05.13 V04.08.00	S120/S150/G130/G150	
- 2821 -							

Fig. 3-90 2822 – SLP (Safely-Limited Position)

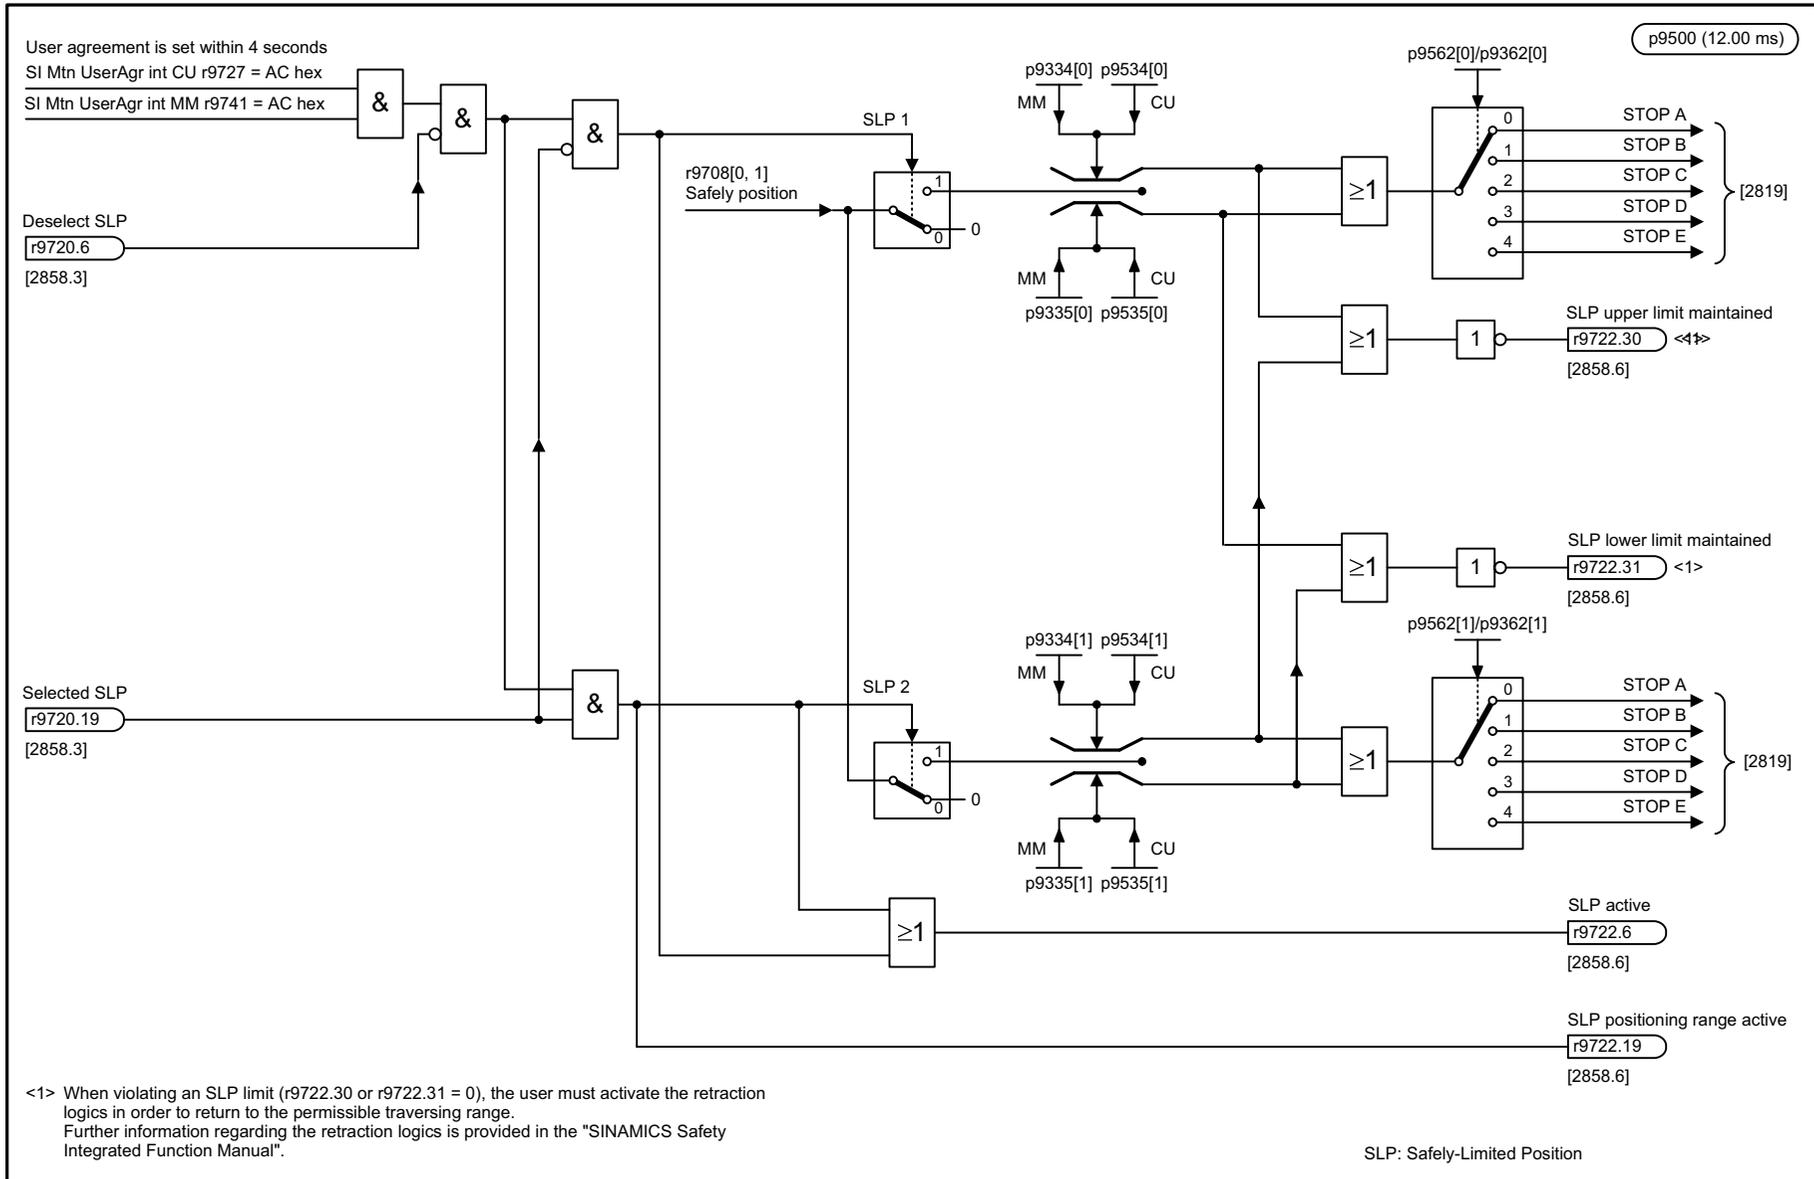

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2822_54_eng.vsd	Function diagram	
SI Extended Functions - SLP (Safely-Limited Position)					18.05.16 V04.08.00	S120/S150/G130/G150	
							- 2822 -

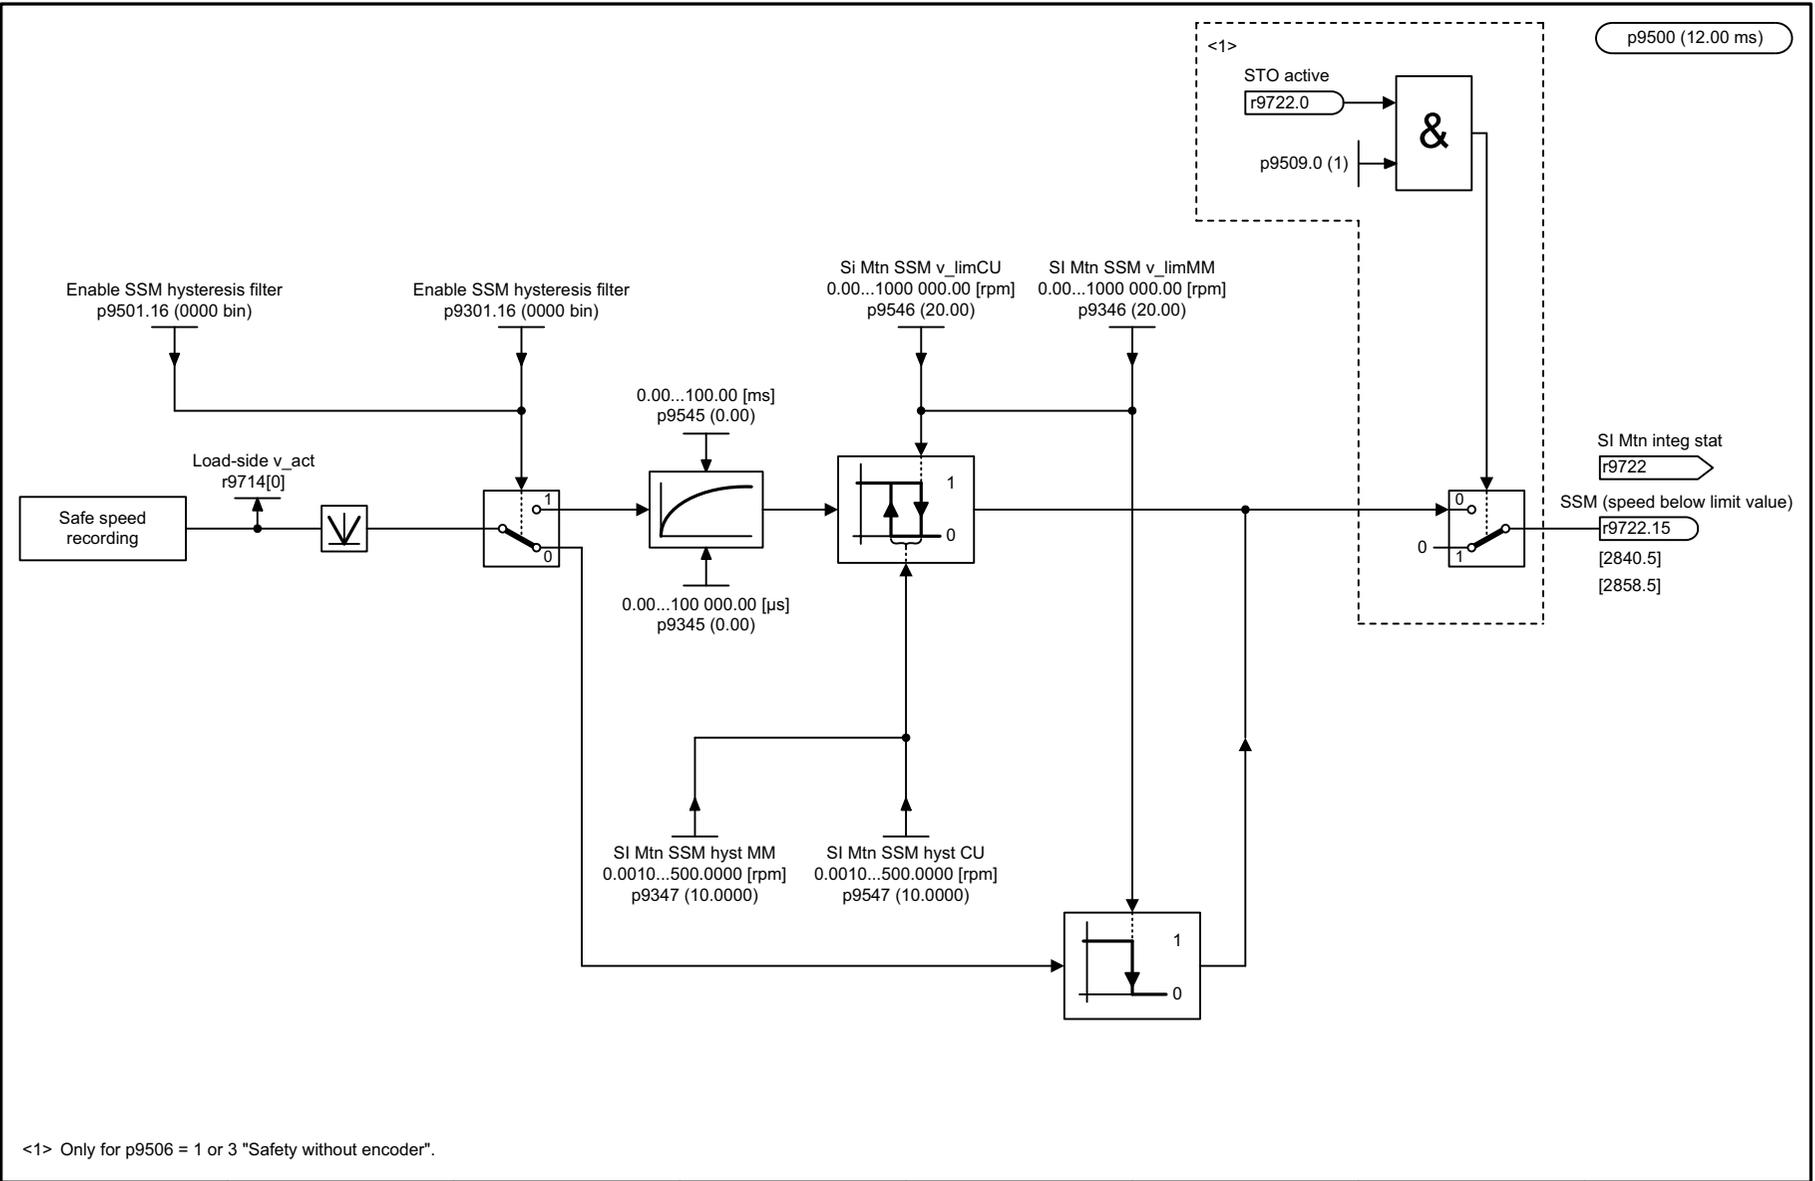


<1> Only for p9506 = 1 or 3 "Safety without encoder".

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2823_54_eng.vsd	Function diagram	
SI Extended Functions - SSM (Safe Speed Monitor)					07.11.12 V04.08.00	S120/S150/G130/G150	
							<b>- 2823 -</b>

Fig. 3-91 2823 – SSM (Safe Speed Monitor)

Fig. 3-92 2824 – SDI (Safe Direction)

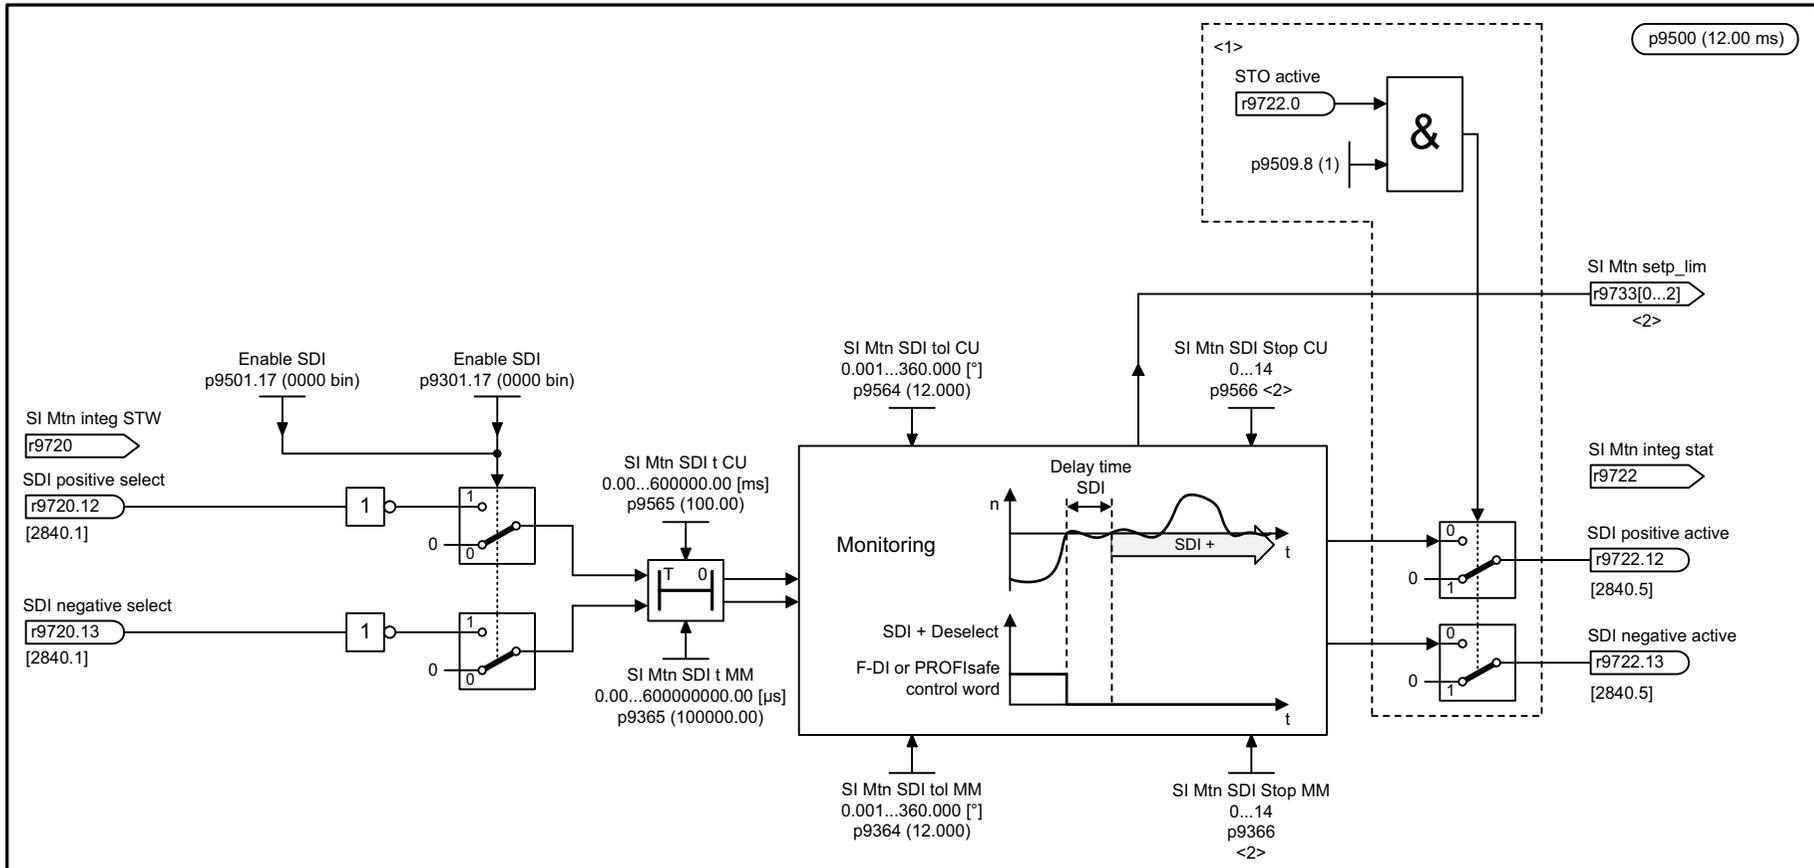

<1> Only for p9506 = 1 or 3 "Safety without encoder".

<2>

Selected SI-Function	r9733[0] Setpoint limiting positive	r9733[1] Setpoint limiting negative	r9733[2] Setpoint limit absolute
SDI positive	p1082	0	p1082
SDI negative	0	-p1082	p1082
SDI positive + SLSx	p9531[x] x p9533	0	p9531[x] x p9533
SDI negative + SLSx	0	-p9531[x] x p9533	p9531[x] x p9533

SDI: Safe Direction  
SLS: Safely-Limited Speed

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2824_54_eng.vsd	Function diagram	
SI Extended Functions - SDI (Safe Direction)					02.06.14 V04.08.00	S120/S150/G130/G150	
							- 2824 -

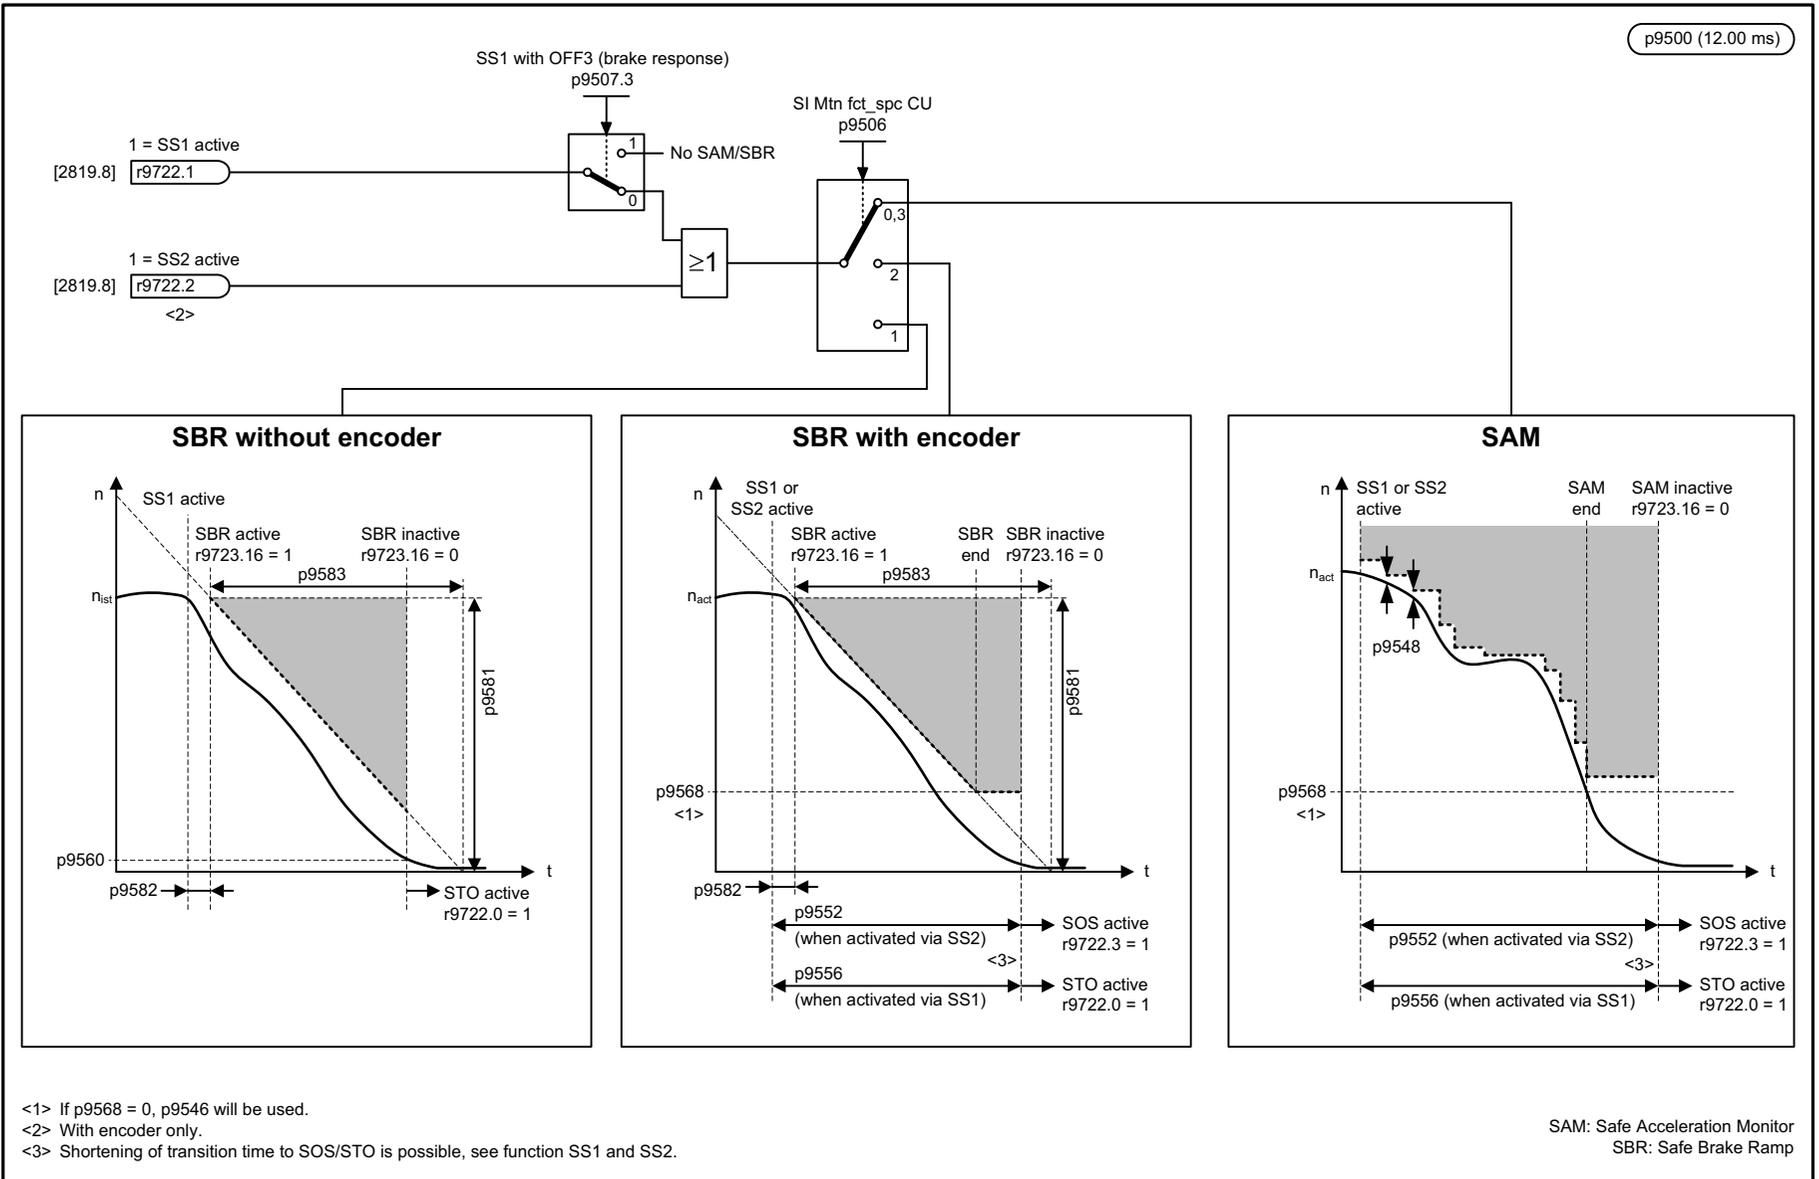
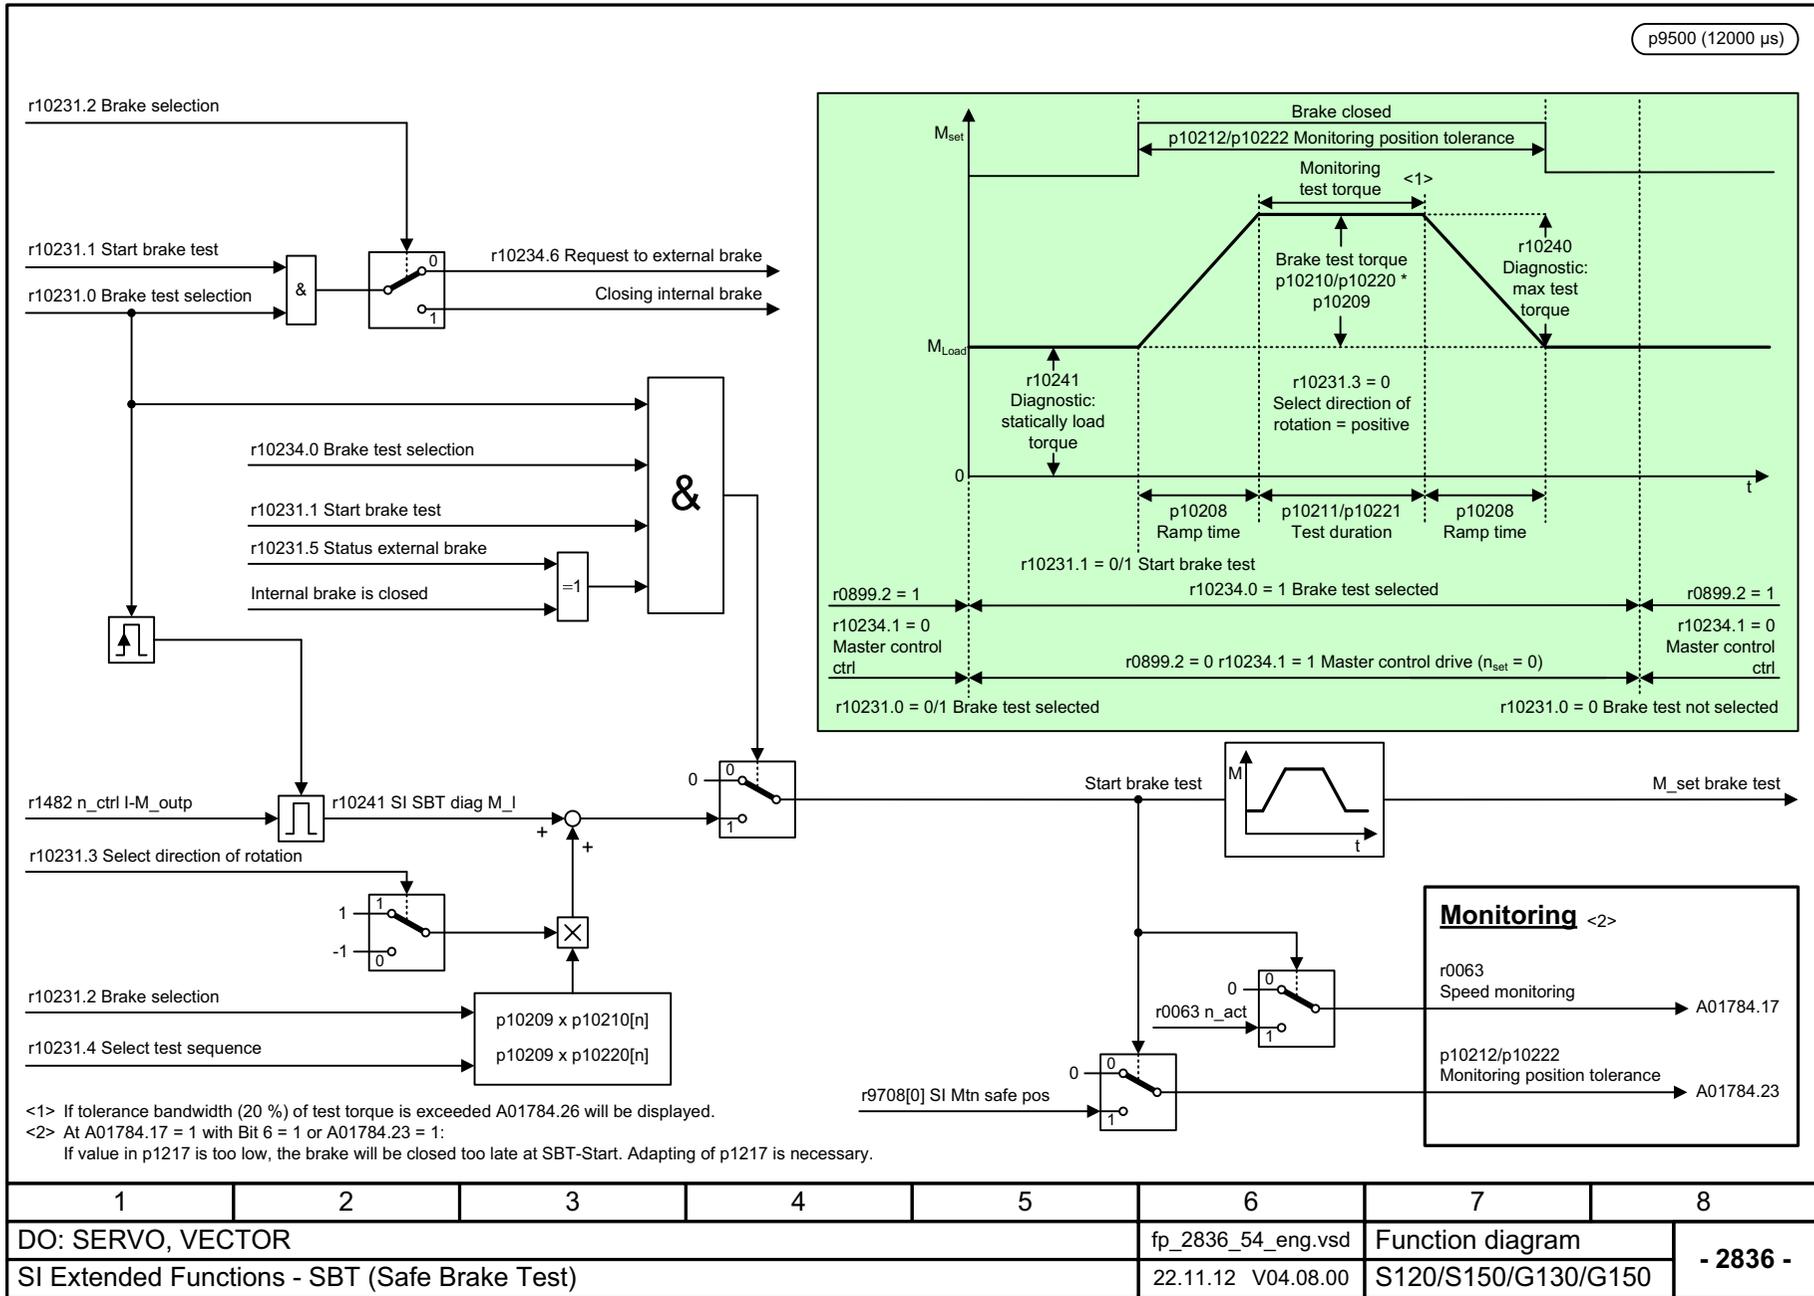


Fig. 3-93 2825 – SAM (Safe Acceleration Monitor), SBR (Safe Brake Ramp)

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2825_54_eng.vsd	Function diagram	
SI Extended Functions - SAM (Safe Acceleration Monitor), SBR (Safe Brake Ramp)					30.03.16 V04.08.00	S120/S150/G130/G150	
- 2825 -							

Fig. 3-94 2836 – SBT (Safe Brake Test)




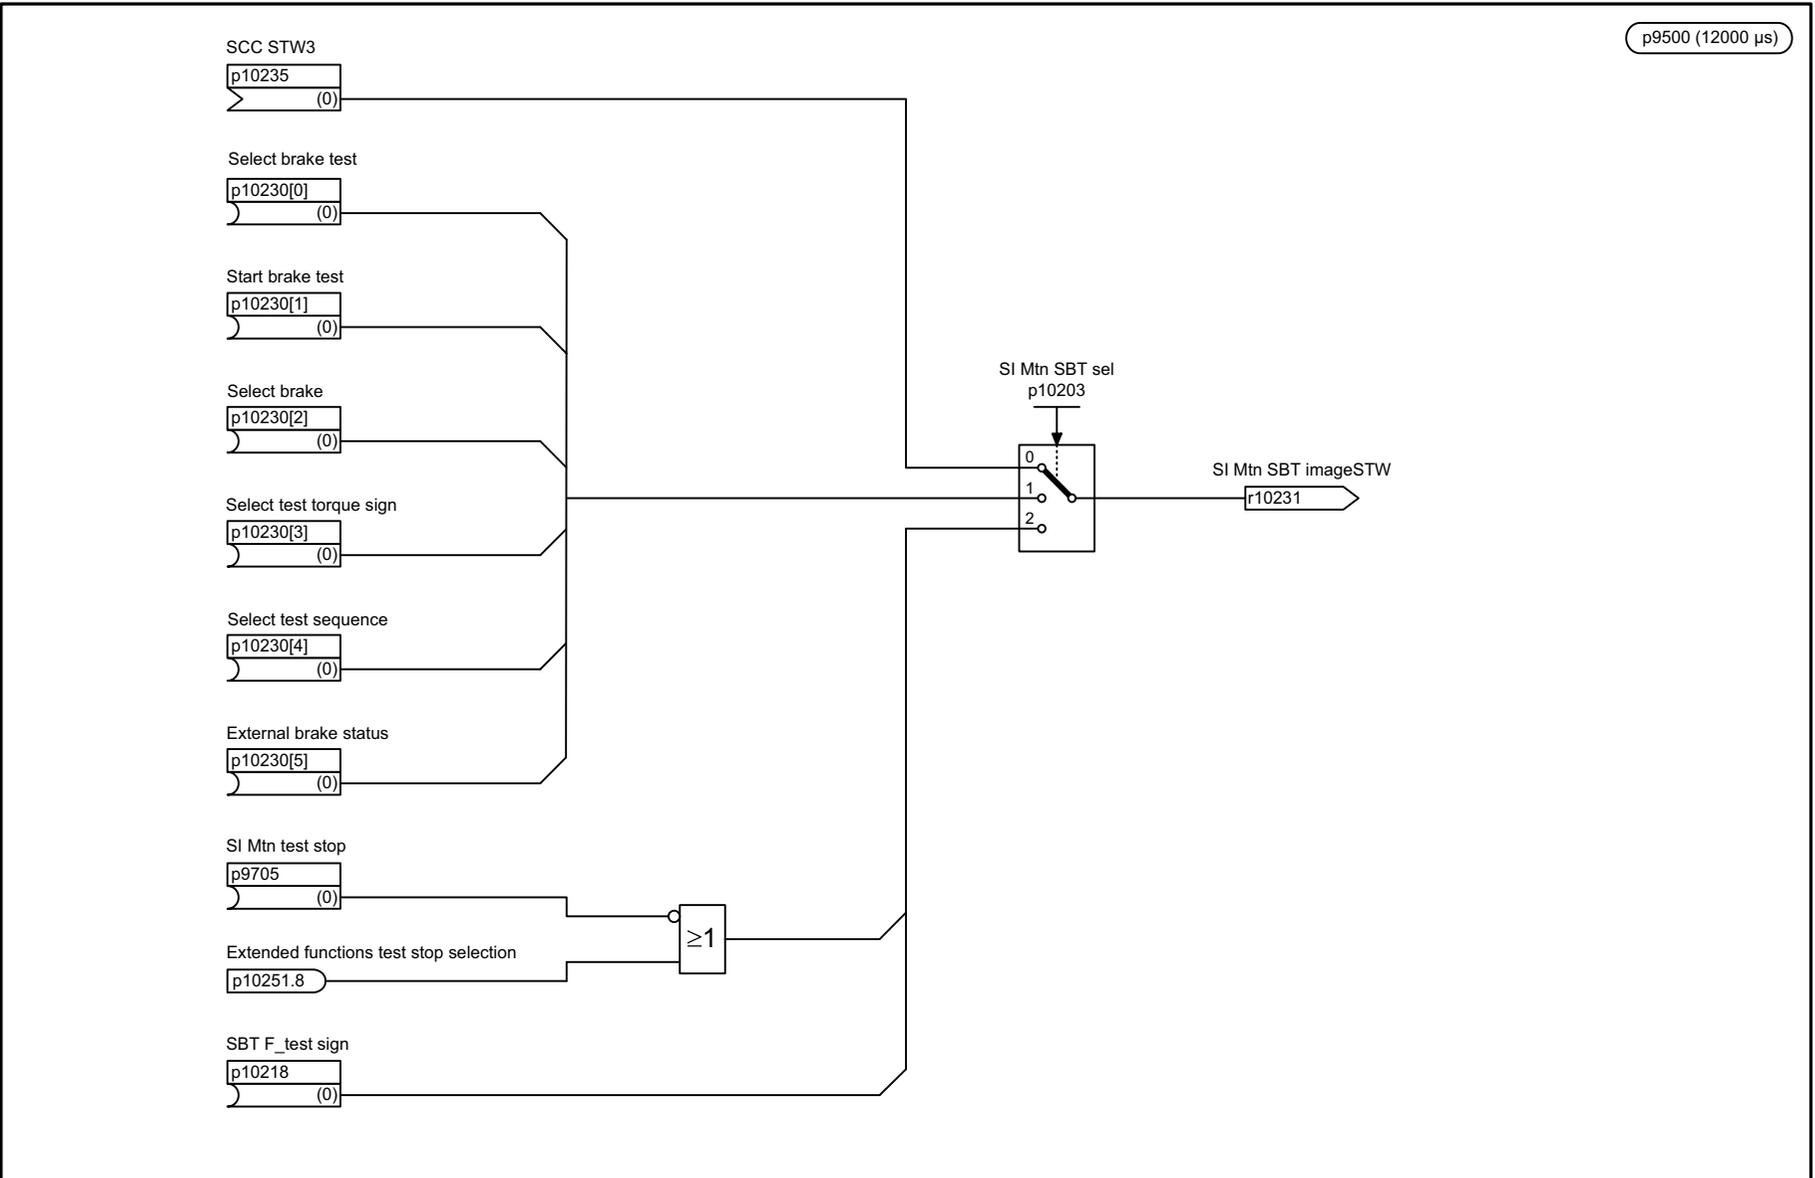


Fig. 3-95 2837 – Selection of active control word

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2837_54_eng.vsd	Function diagram	
SI Extended Functions - Selection of active control word					11.09.12 V04.08.00	S120/S150/G130/G150	
- 2837 -							

Fig. 3-96 2840 – SI Motion drive-integrated control signals / status signals

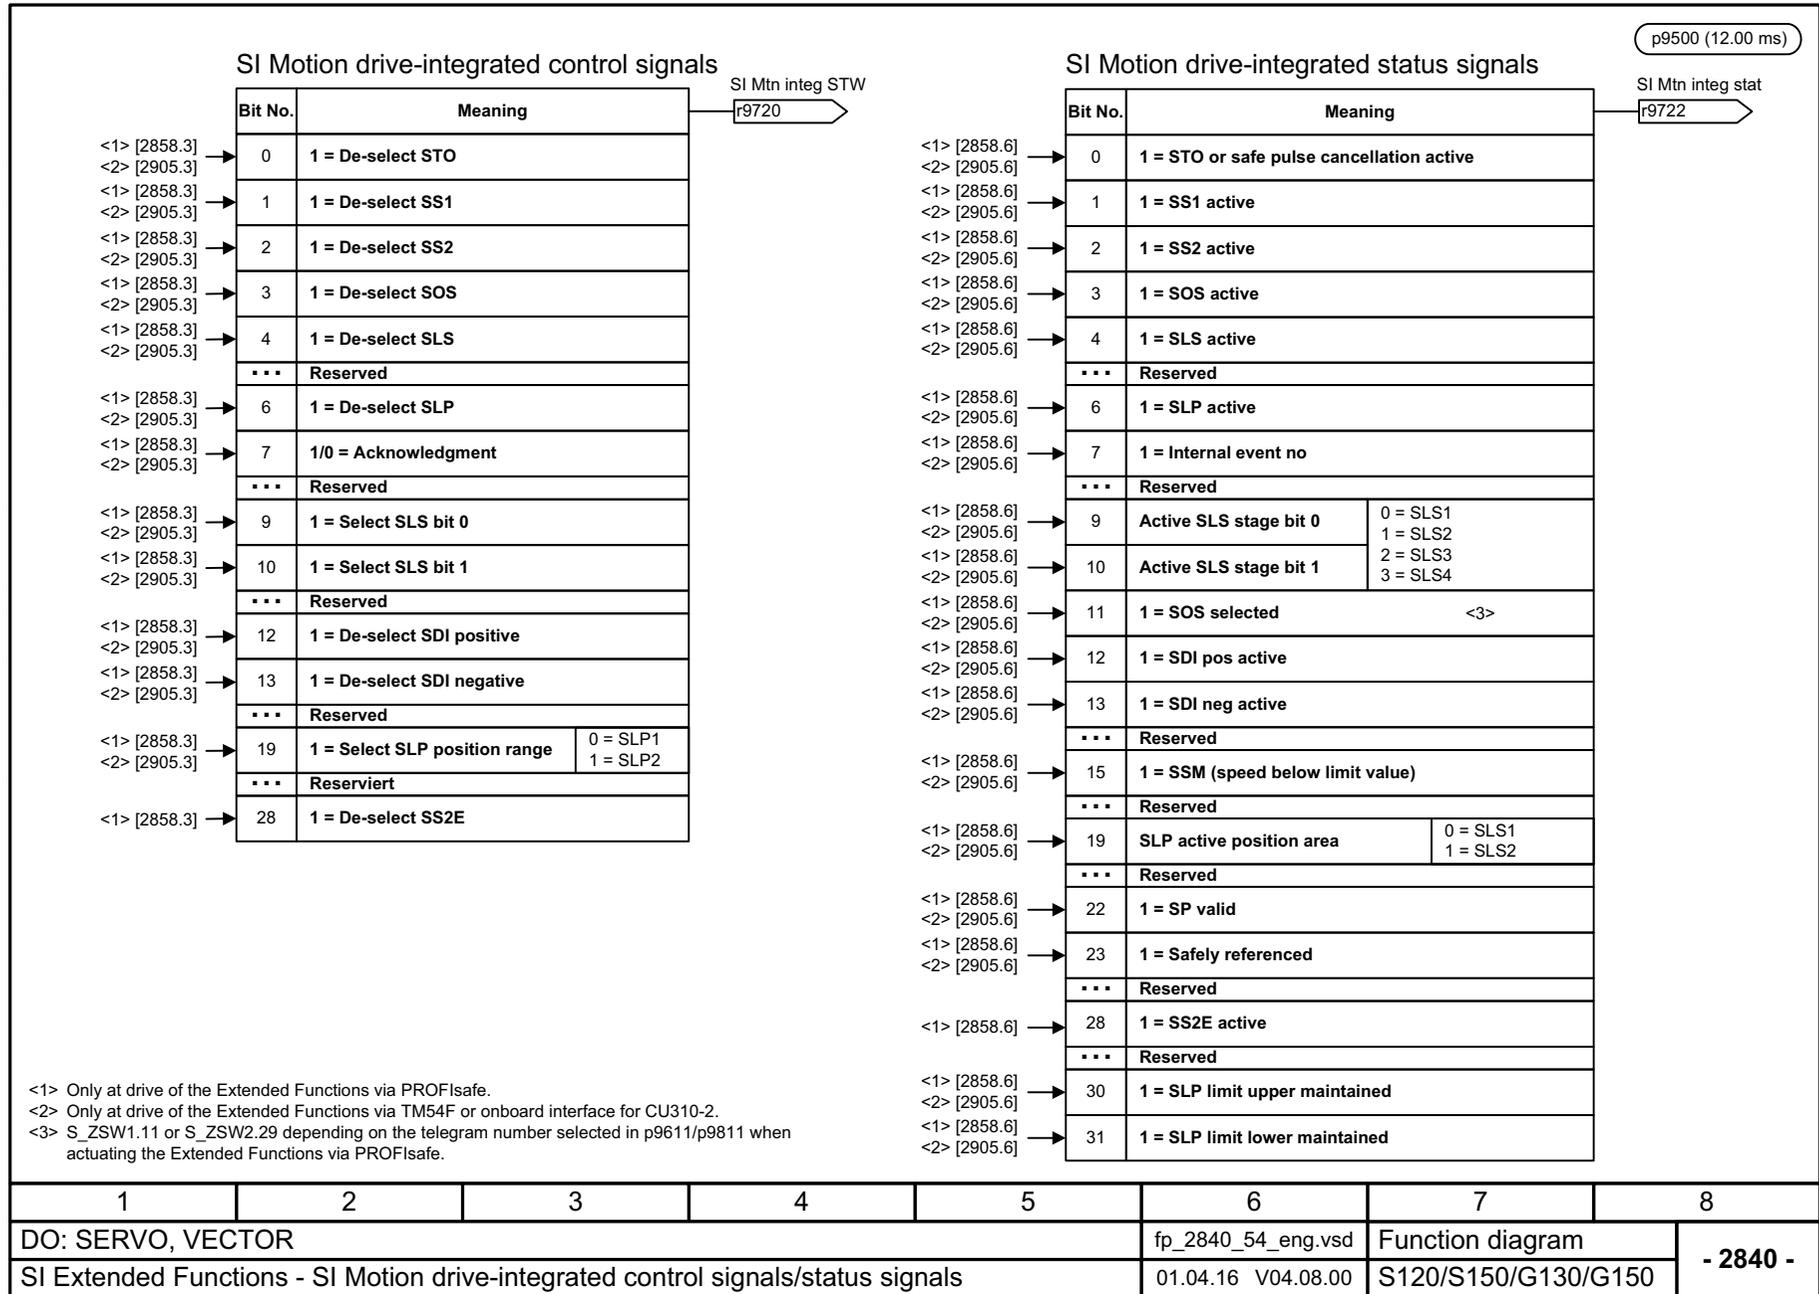

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_2840_54_eng.vsd	Function diagram	
SI Extended Functions - SI Motion drive-integrated control signals/status signals					01.04.16 V04.08.00	S120/S150/G130/G150	
- 2840 -							

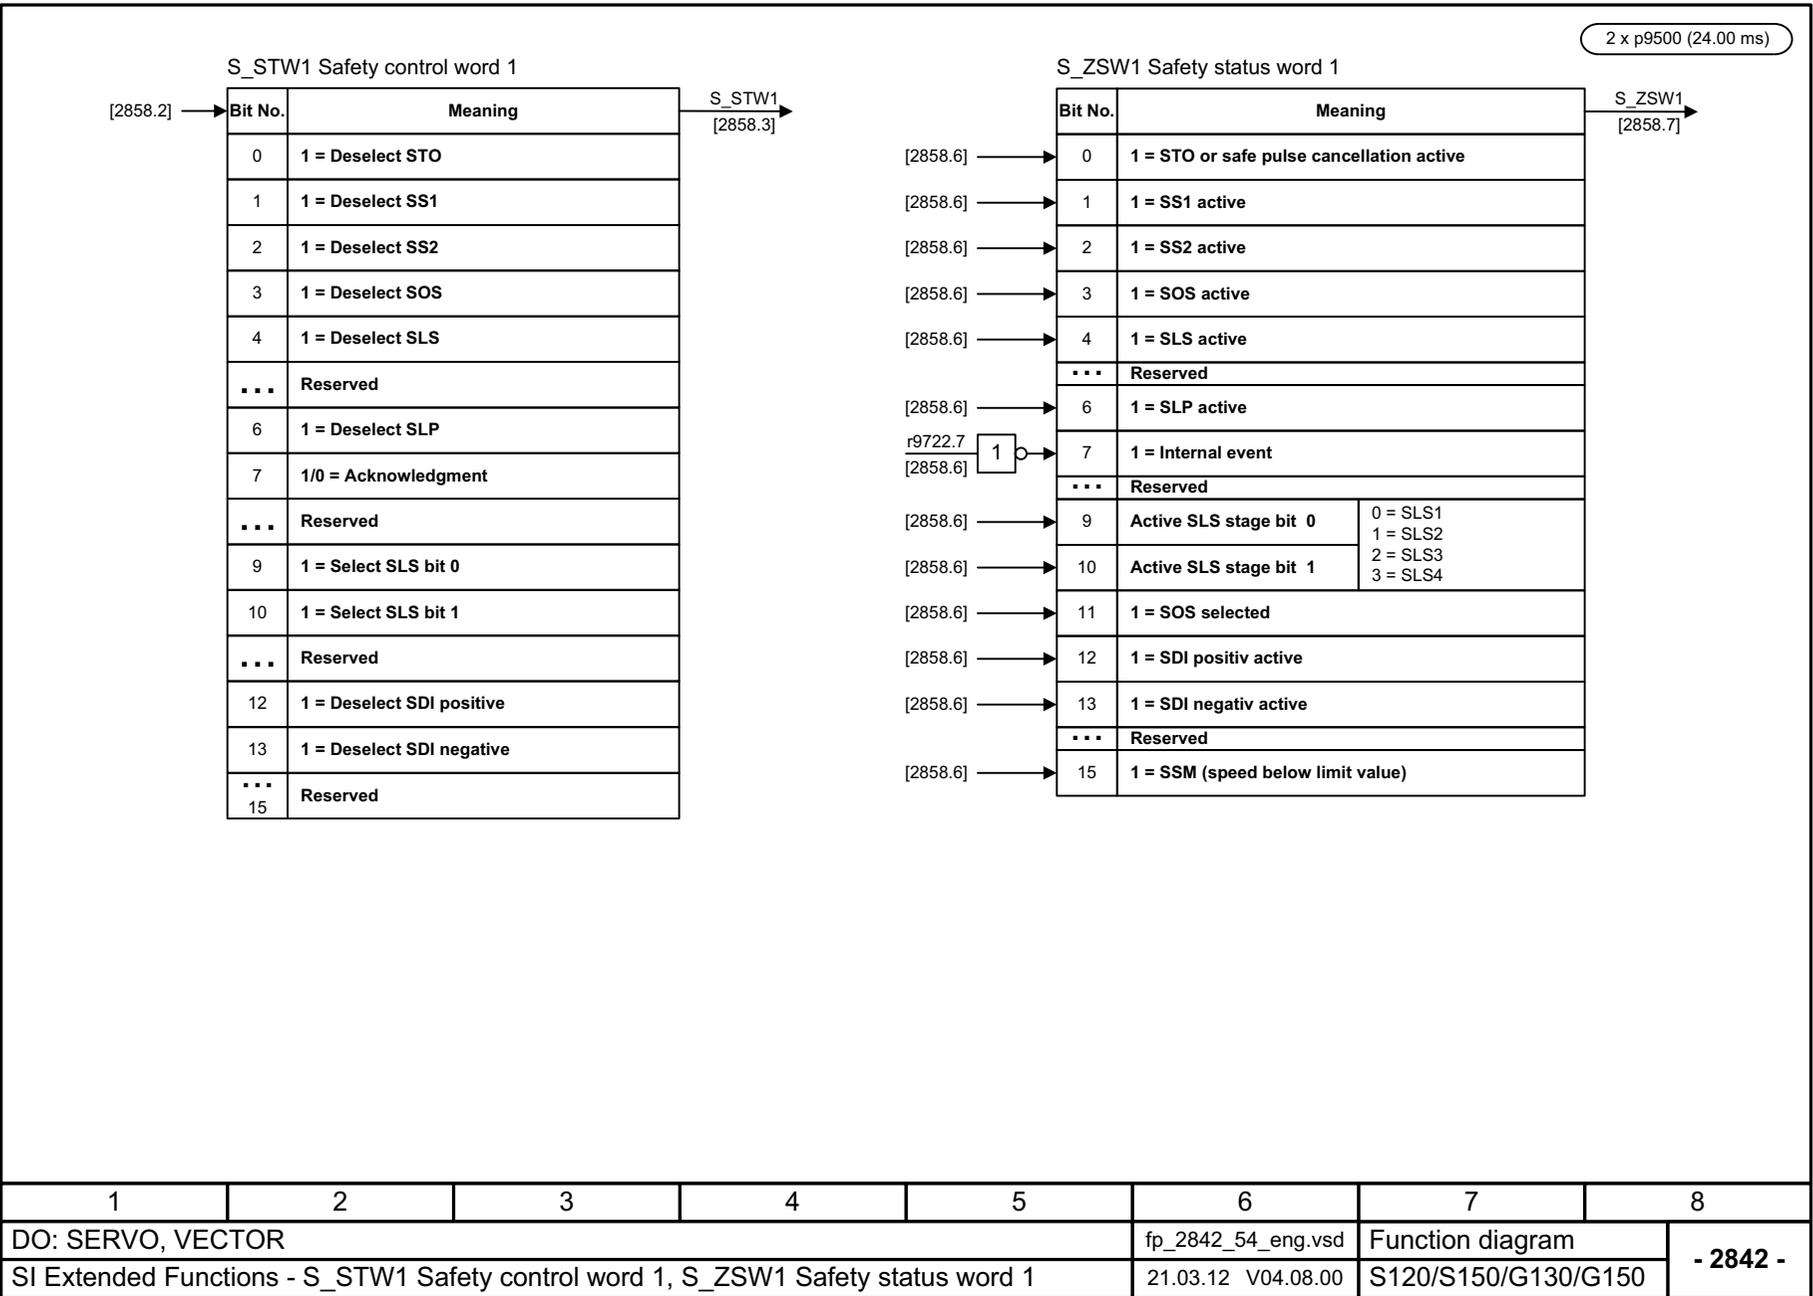


Fig. 3-97 2842 – S\_STW1 Safety control word 1, S\_ZSW1 Safety status word 1

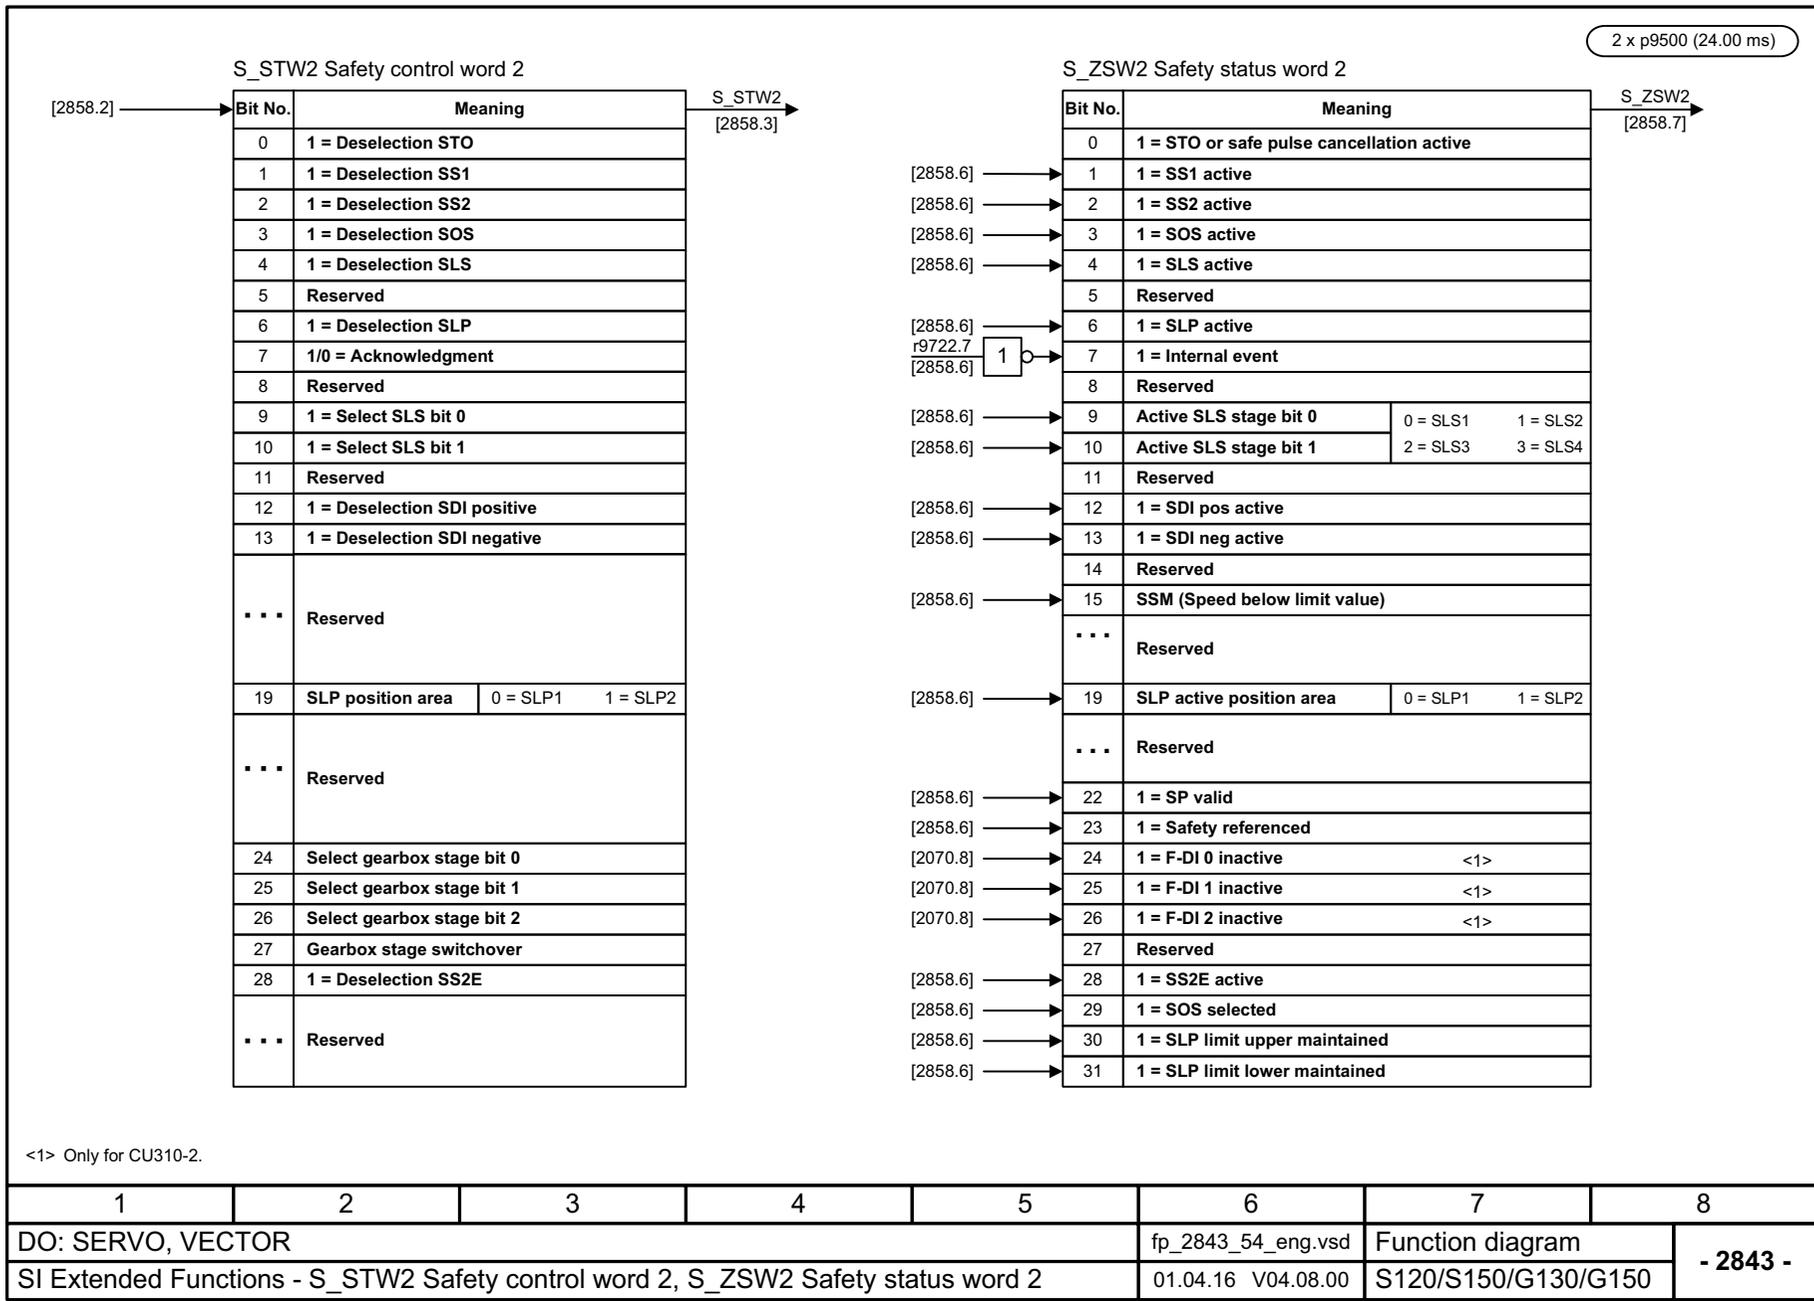


Fig. 3-98 2843 – S\_STW2 Safety control word 2, S\_ZSW2 Safety status word 2

## 3.12 Safety Integrated TM54F

### Function diagrams

2890 – Overview	1211
2891 – Parameter manager	1212
2892 – Configuration, F-DI/F-DO test	1213
2893 – Fail-safe digital inputs (F-DI 0 ... F-DI 4)	1214
2894 – Fail-safe digital inputs (F-DI 5 ... F-DI 9)	1215
2895 – Fail-safe digital outputs (F-DO 0 ... F-DO 3), digital inputs (DI 20 ... DI 23)	1216
2900 – Basic Functions control interface (p9601.2/3 = 0 & p9601.6 = 1)	1217
2901 – Basic Functions Safe State selection	1218
2902 – Basic Functions assignment (F-DO 0 ... F-DO 3)	1219
2905 – Extended Functions control interface (p9601.2 = 1 & p9601.3 = 0)	1220
2906 – Extended Functions Safe State selection	1221
2907 – Extended Functions assignment (F-DO 0 ... F-DO 3)	1222

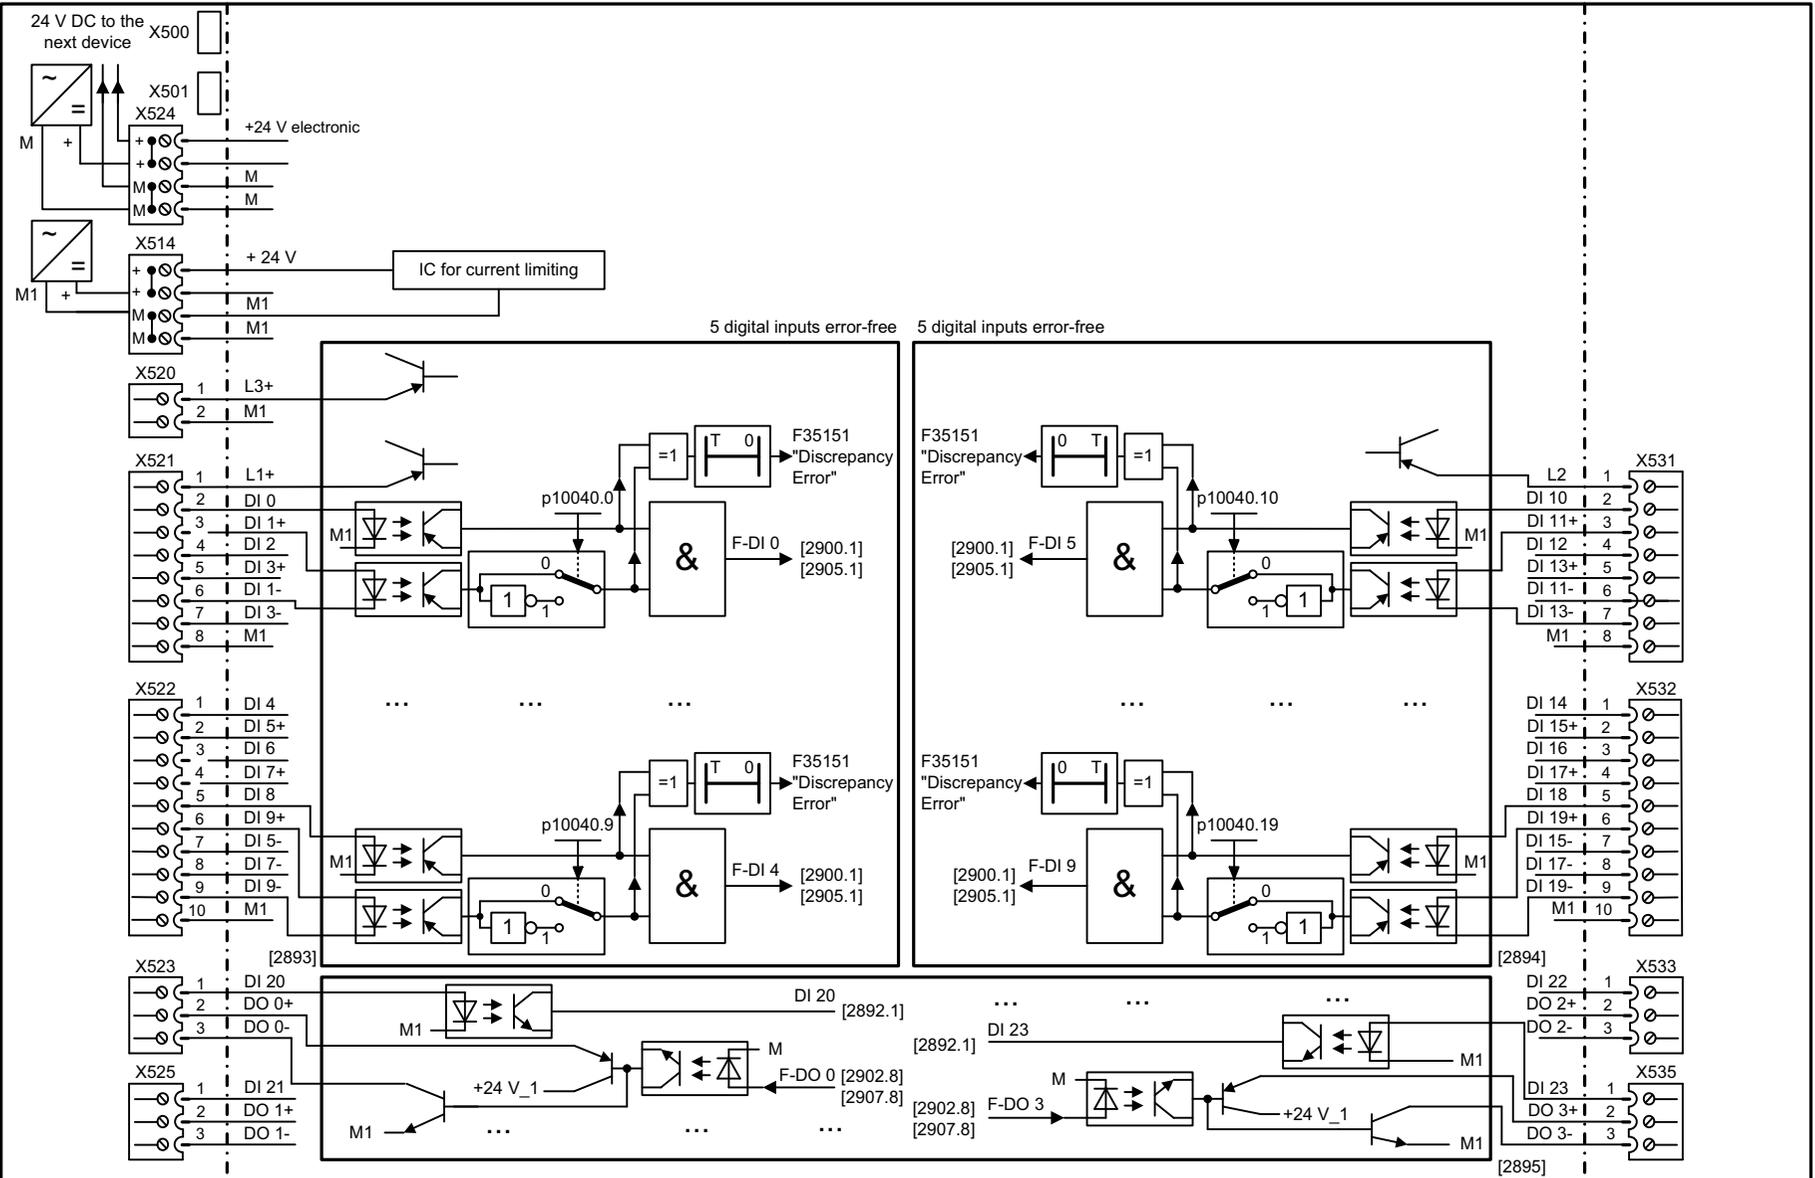


Fig. 3-99 2890 – Overview

SINAMICS G130/G150  
List Manual (LH2), 07/2016, A5E03263479A

1	2	3	4	5	6	7	8	
DO: TM54F_MA, TM54F_SL					fp_2890_51_eng.vsd		Function diagram	- 2890 -
SI TM54F - Overview					06.07.15 V04.08.00		SINAMICS	

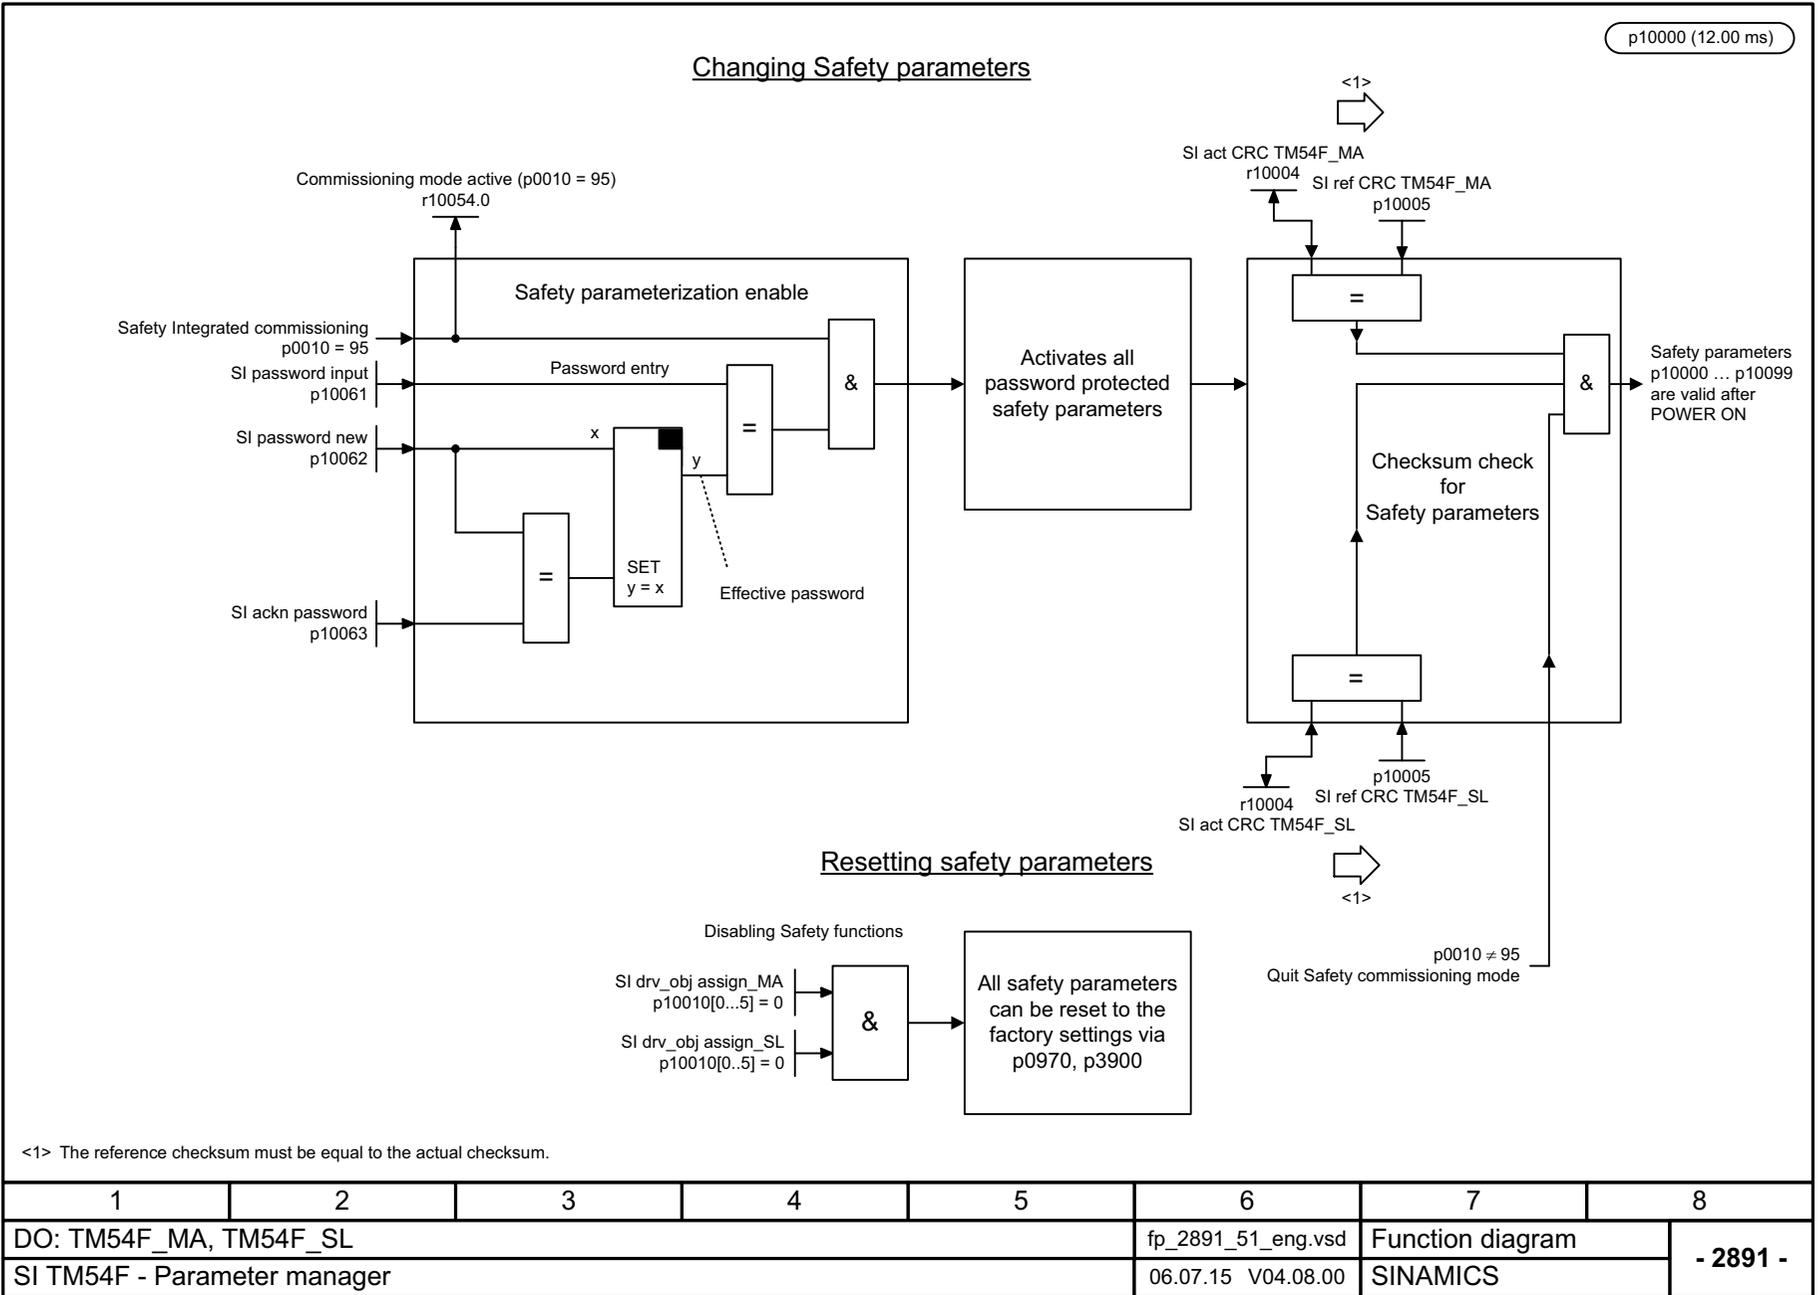
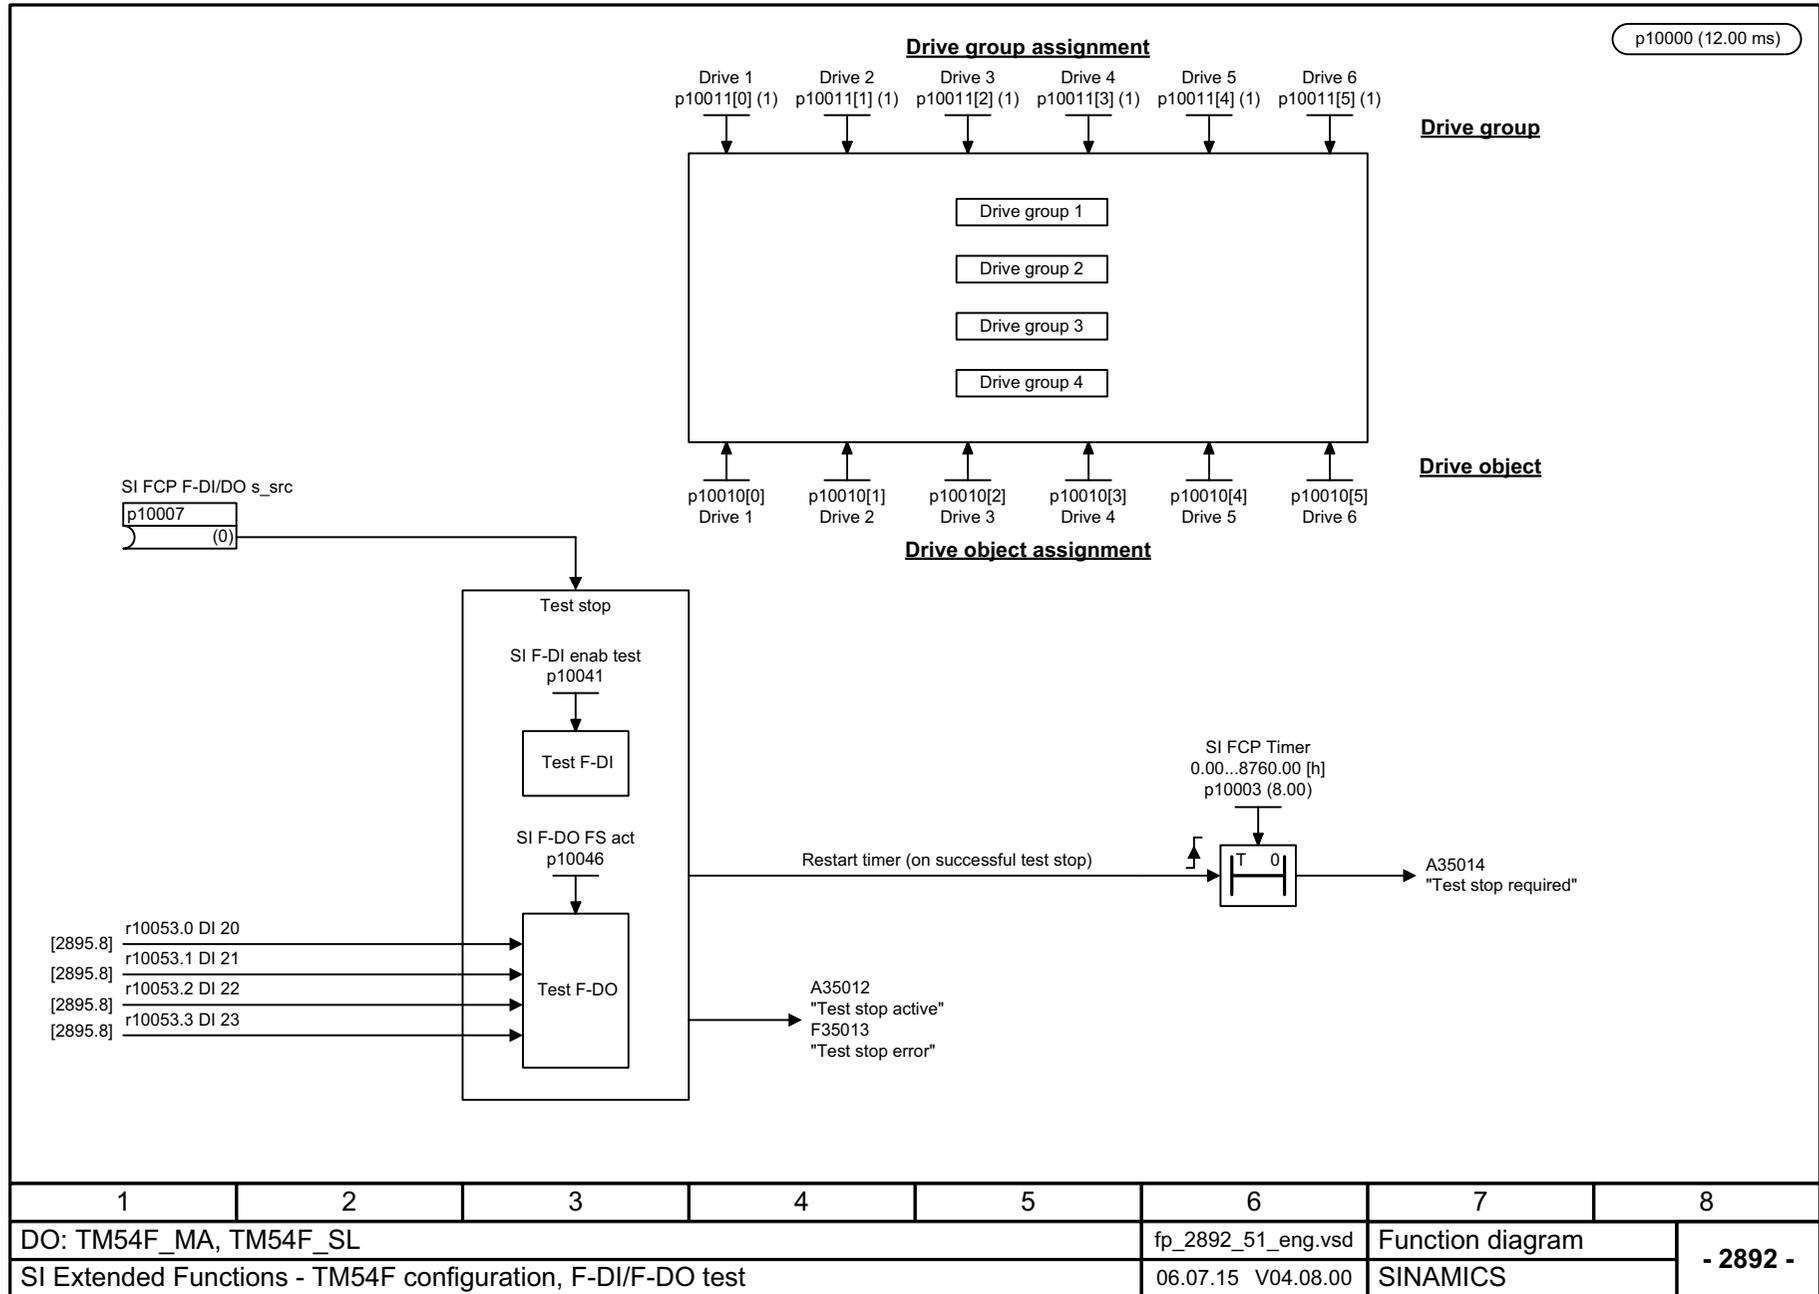


Fig. 3-100 2891 – Parameter manager

1	2	3	4	5	6	7	8
DO: TM54F_MA, TM54F_SL					fp_2891_51_eng.vsd	Function diagram	
SI TM54F - Parameter manager					06.07.15 V04.08.00	SINAMICS	
							- 2891 -

Fig. 3-101 2892 – Configuration, F-DI/F-DO test



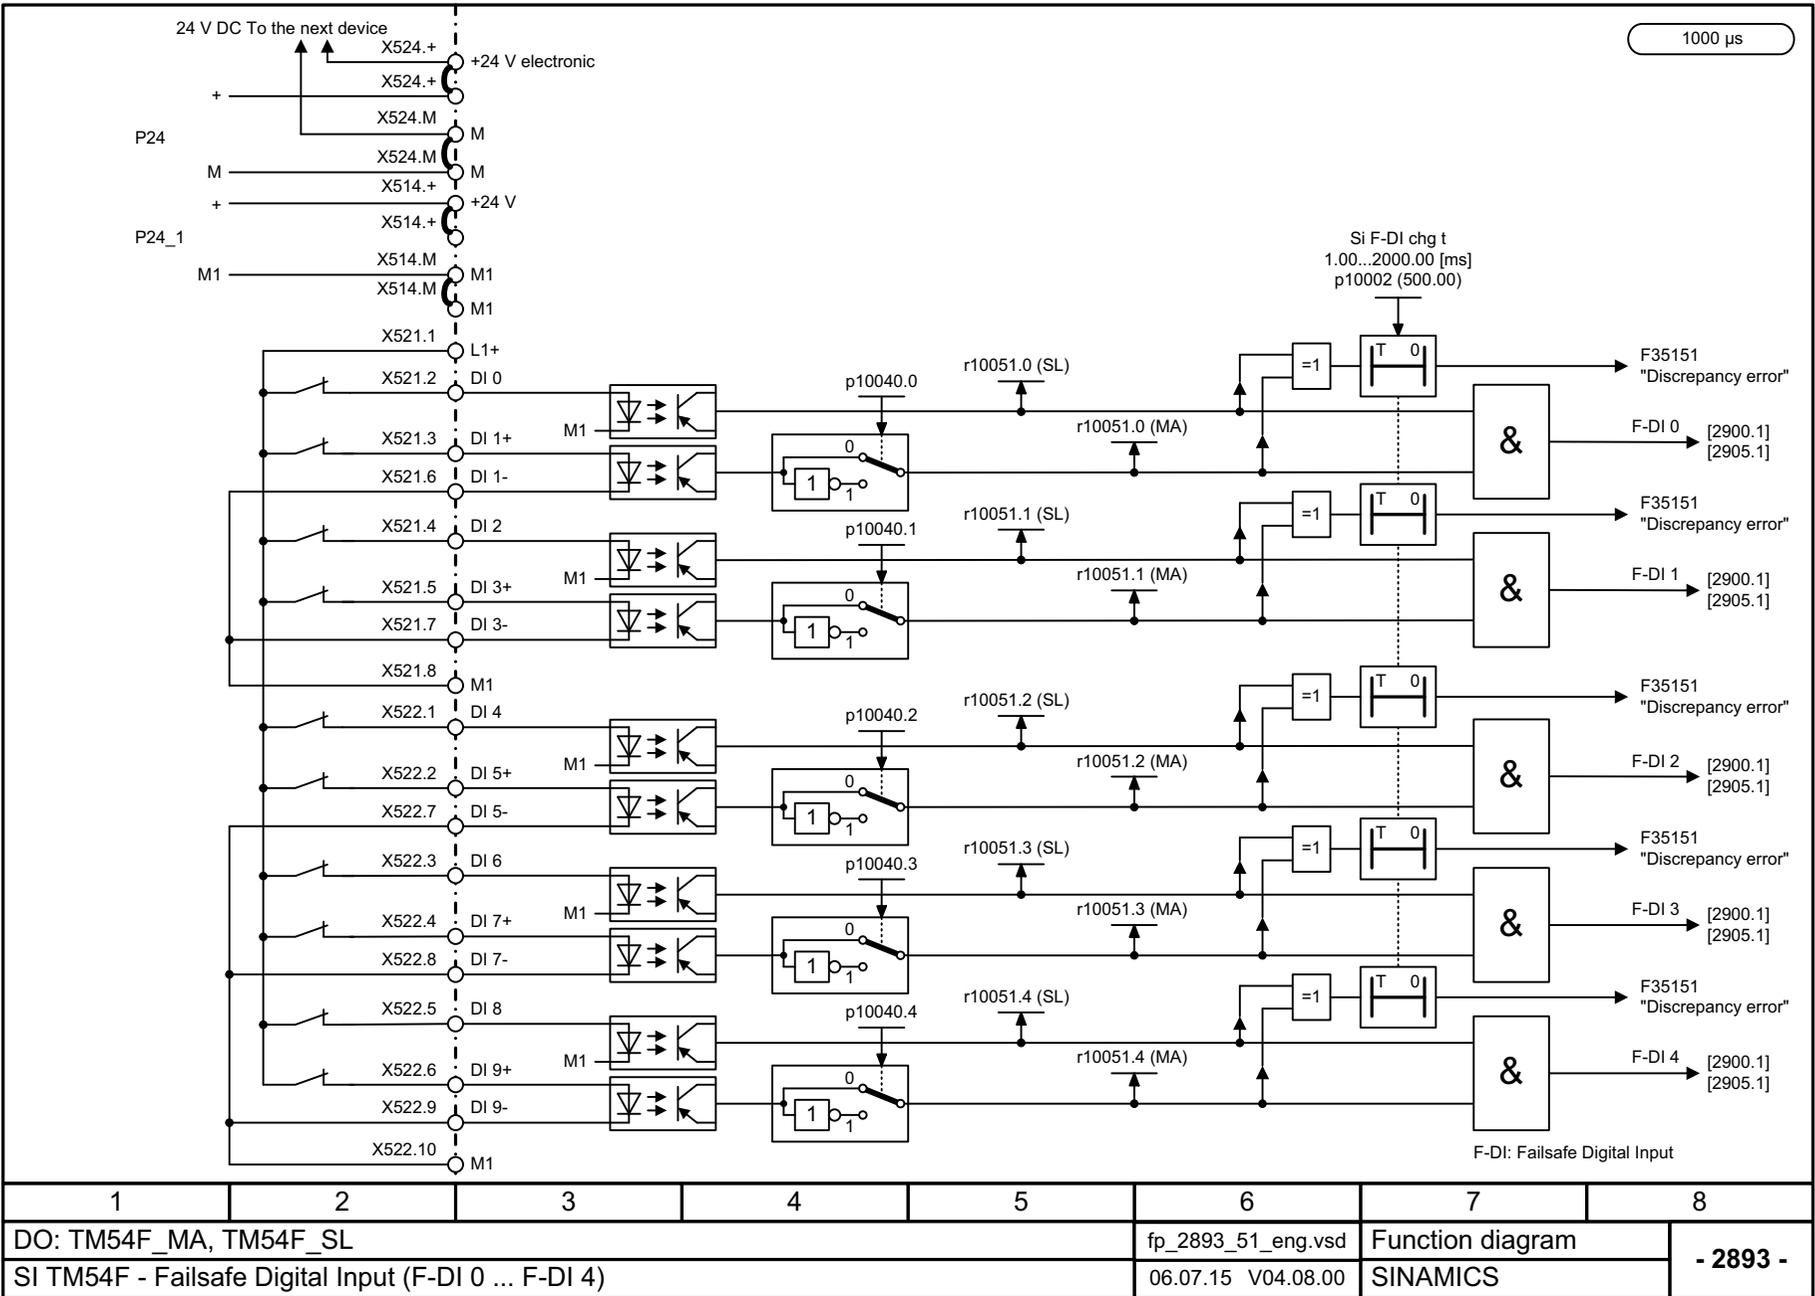
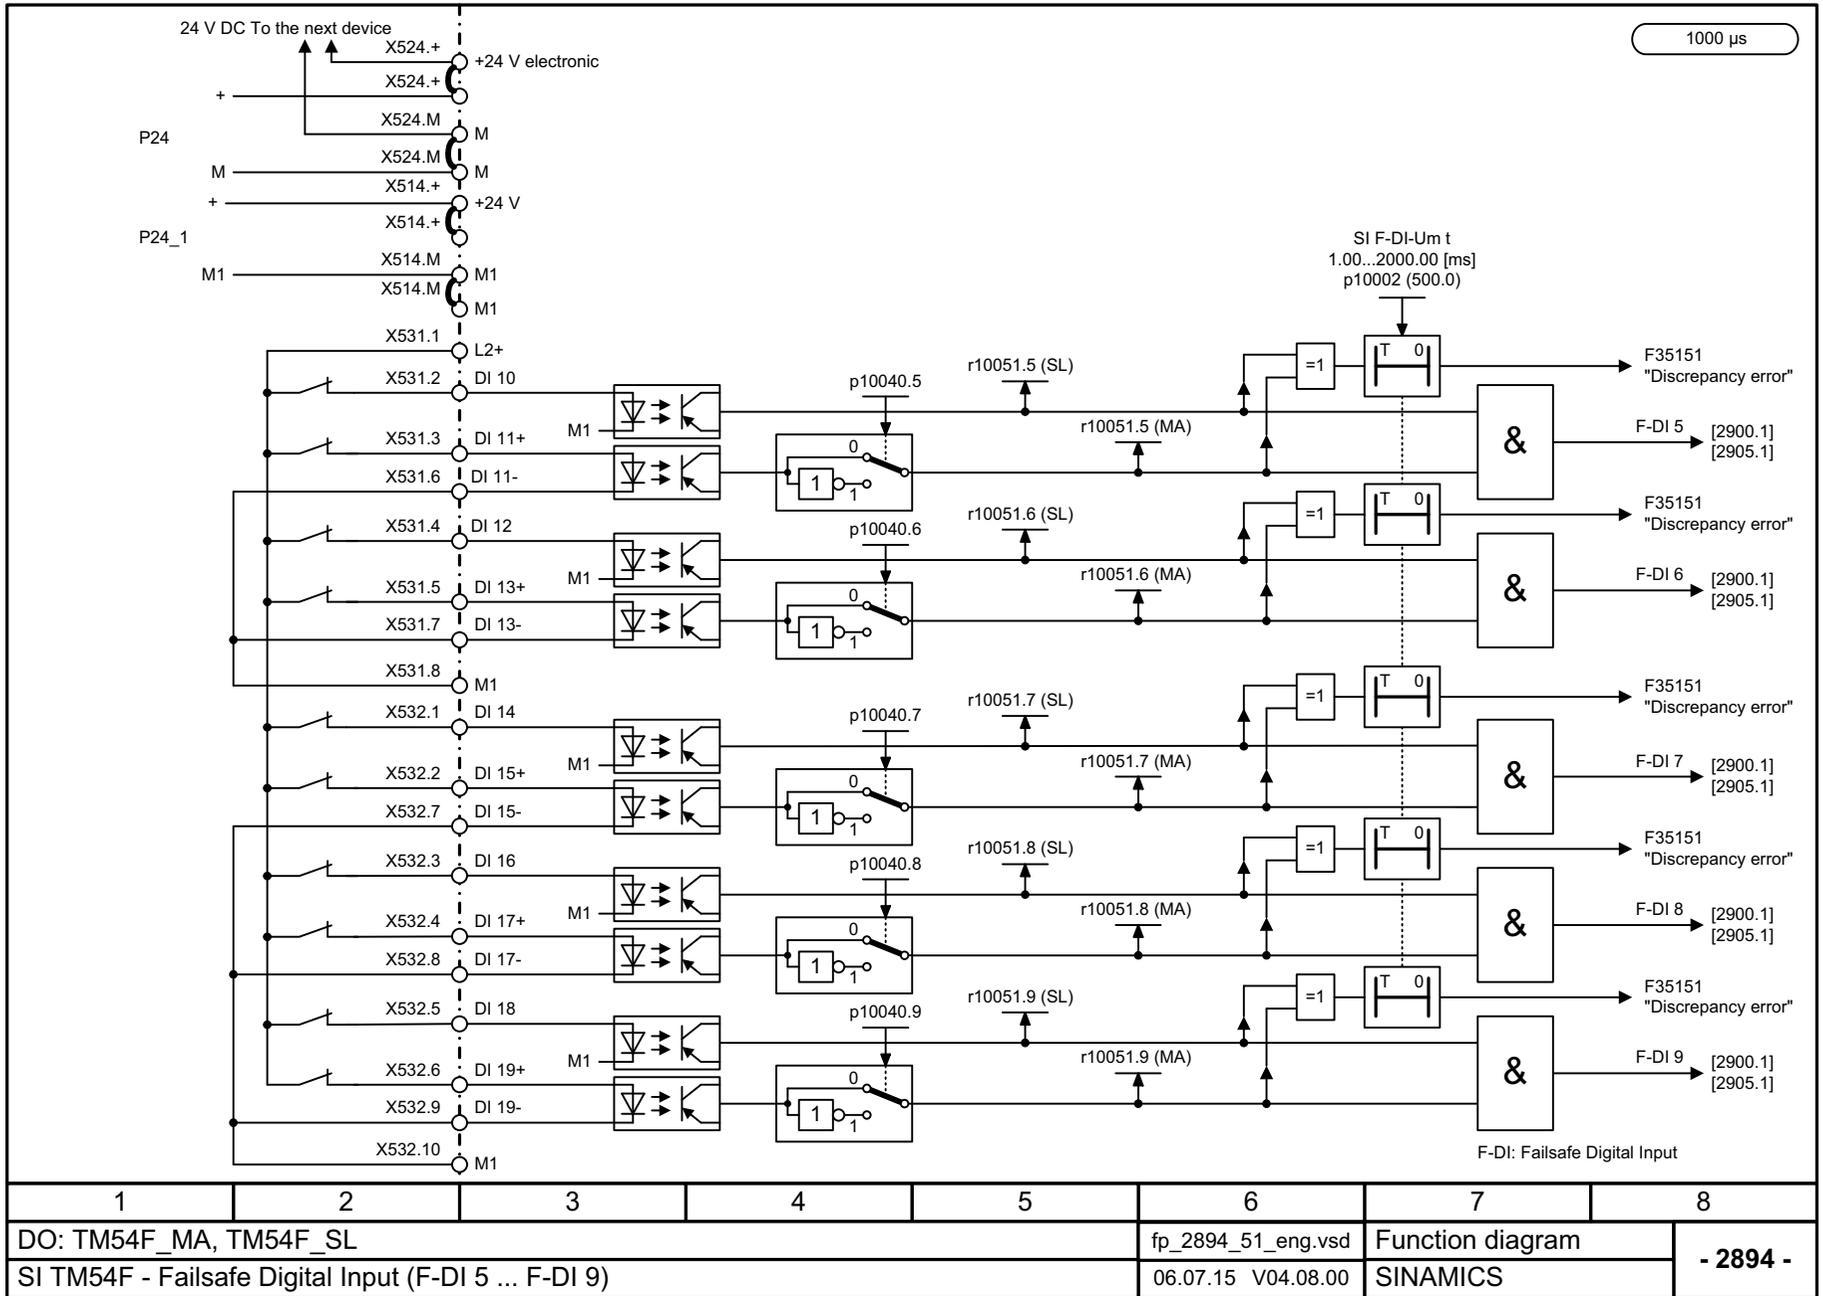


Fig. 3-102 2893 – Fail-safe digital inputs (F-DI 0 ... F-DI 4)

Fig. 3-103 2894 – Fail-safe digital inputs (F-DI 5 ... F-DI 9)



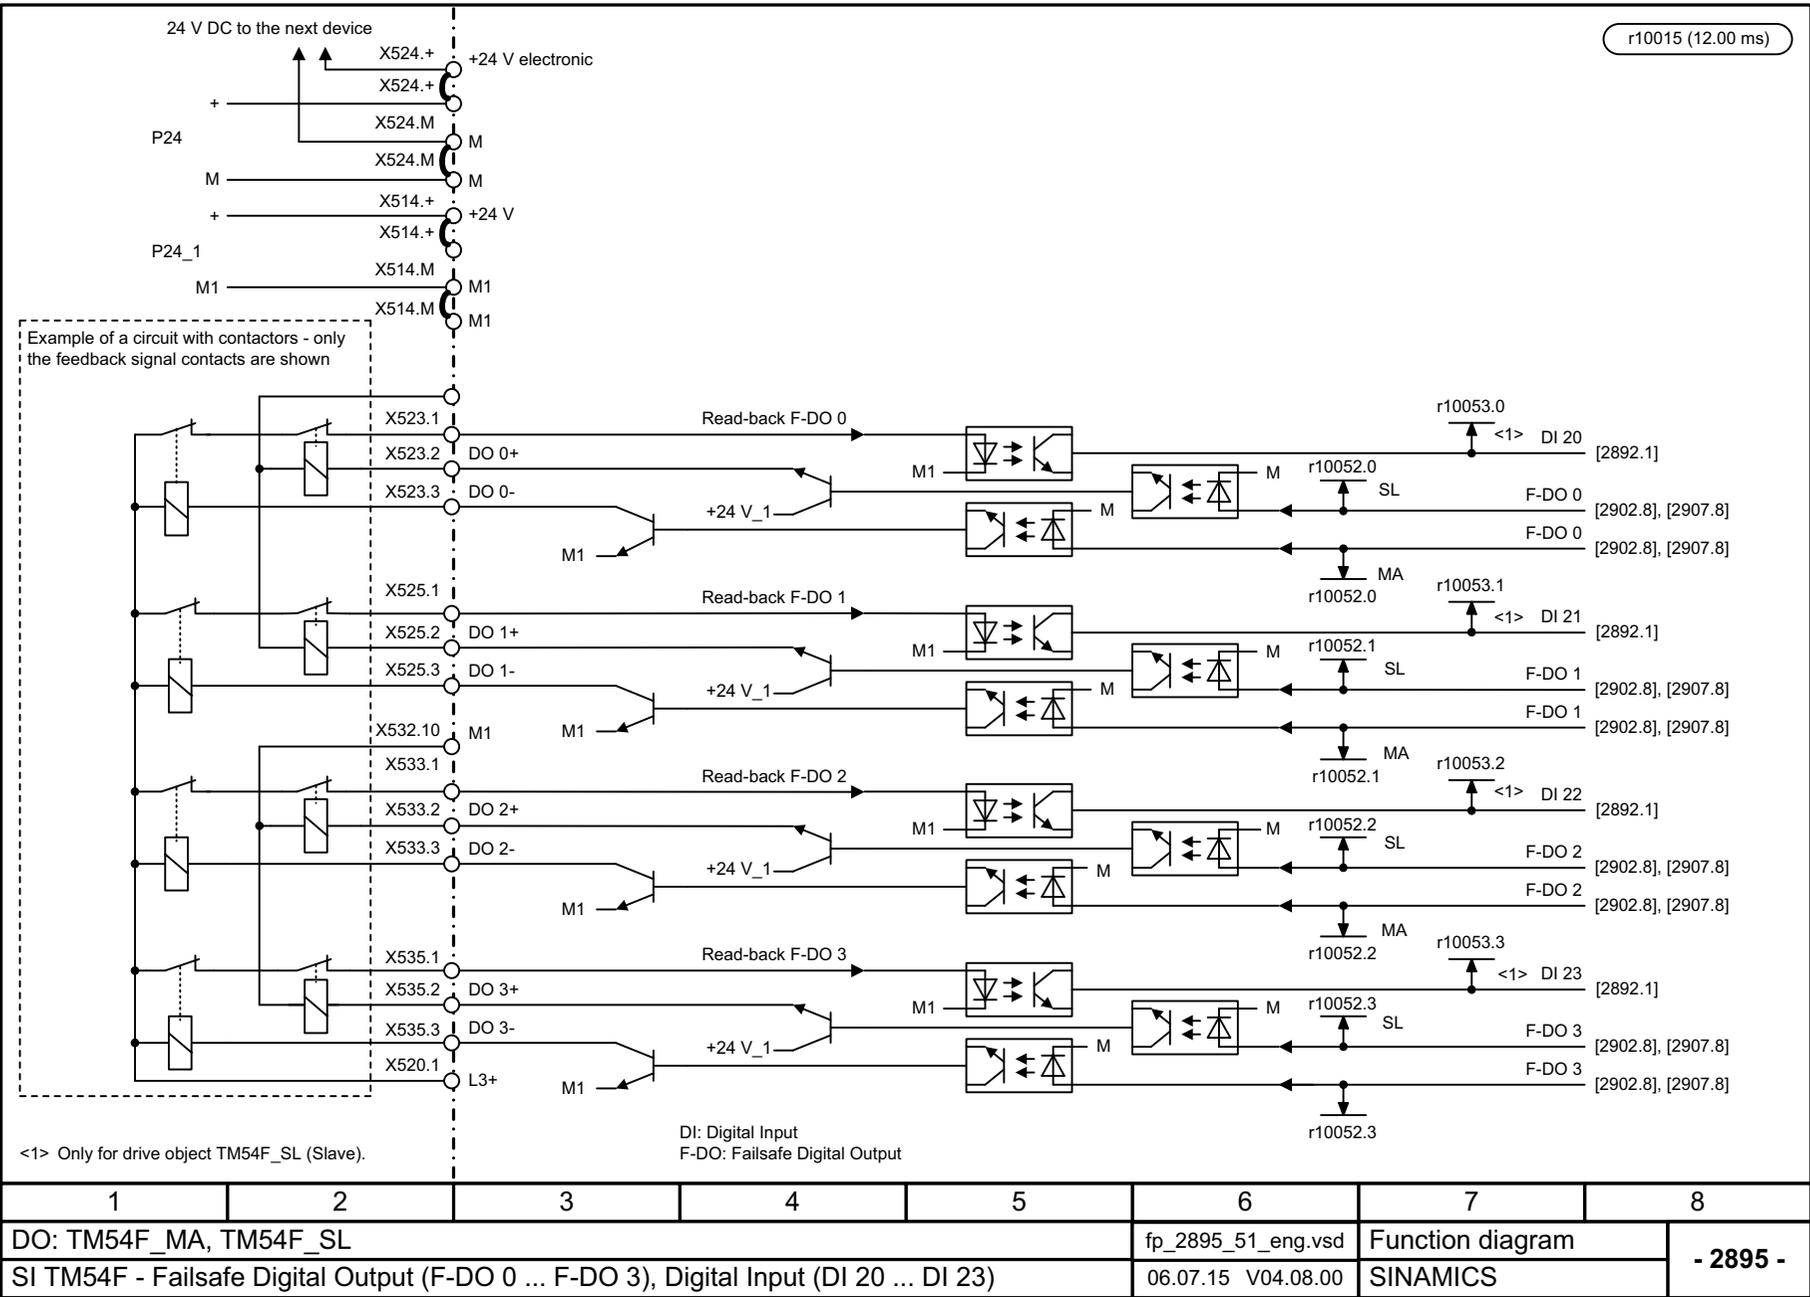
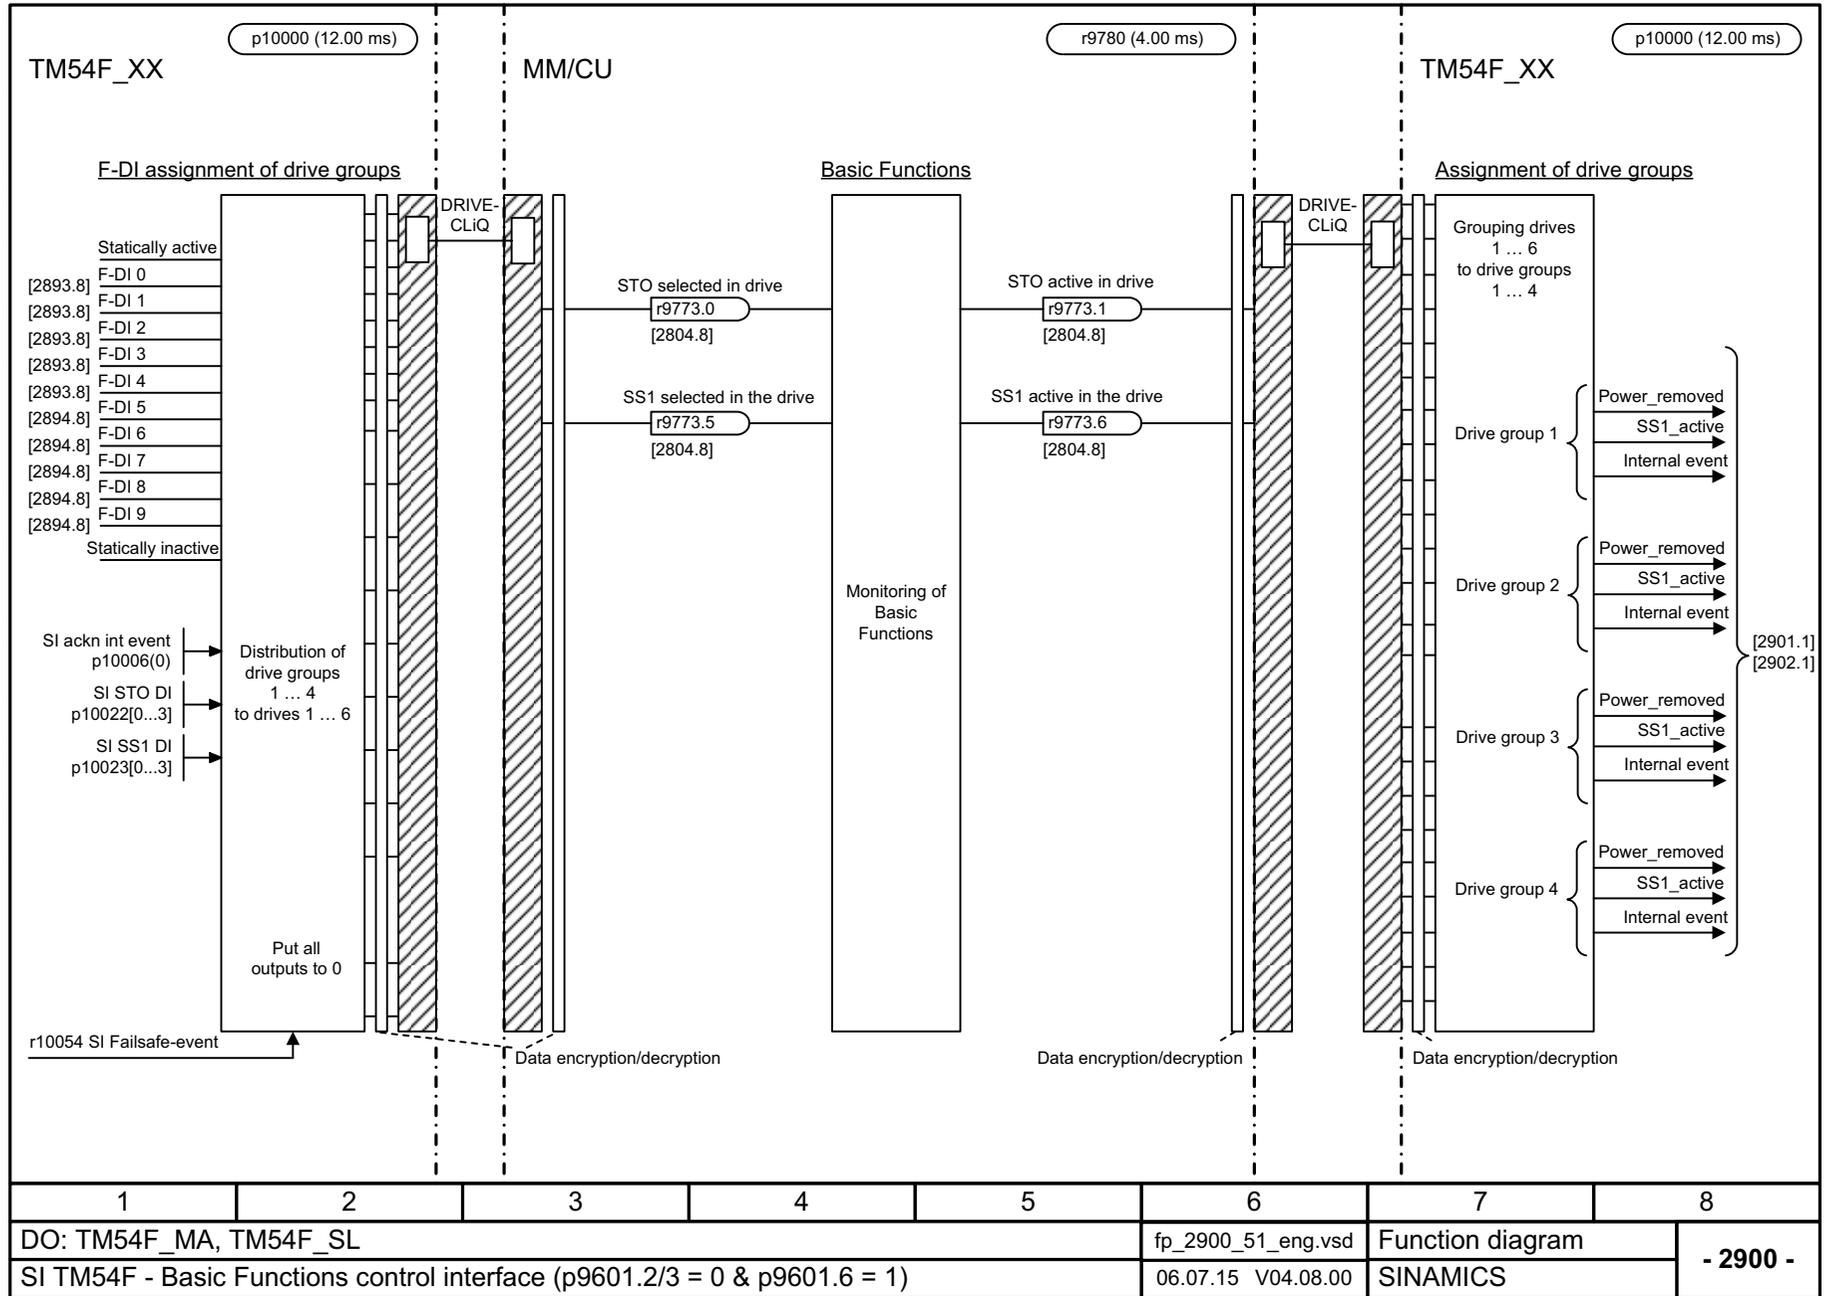


Fig. 3-104 2895 - Fail-safe digital outputs (F-DO 0 ... F-DO 3), digital inputs (DI 20 ... DI 23)

Fig. 3-105 2900 – Basic Functions control interface (p9601.2/3 = 0 & p9601.6 = 1)



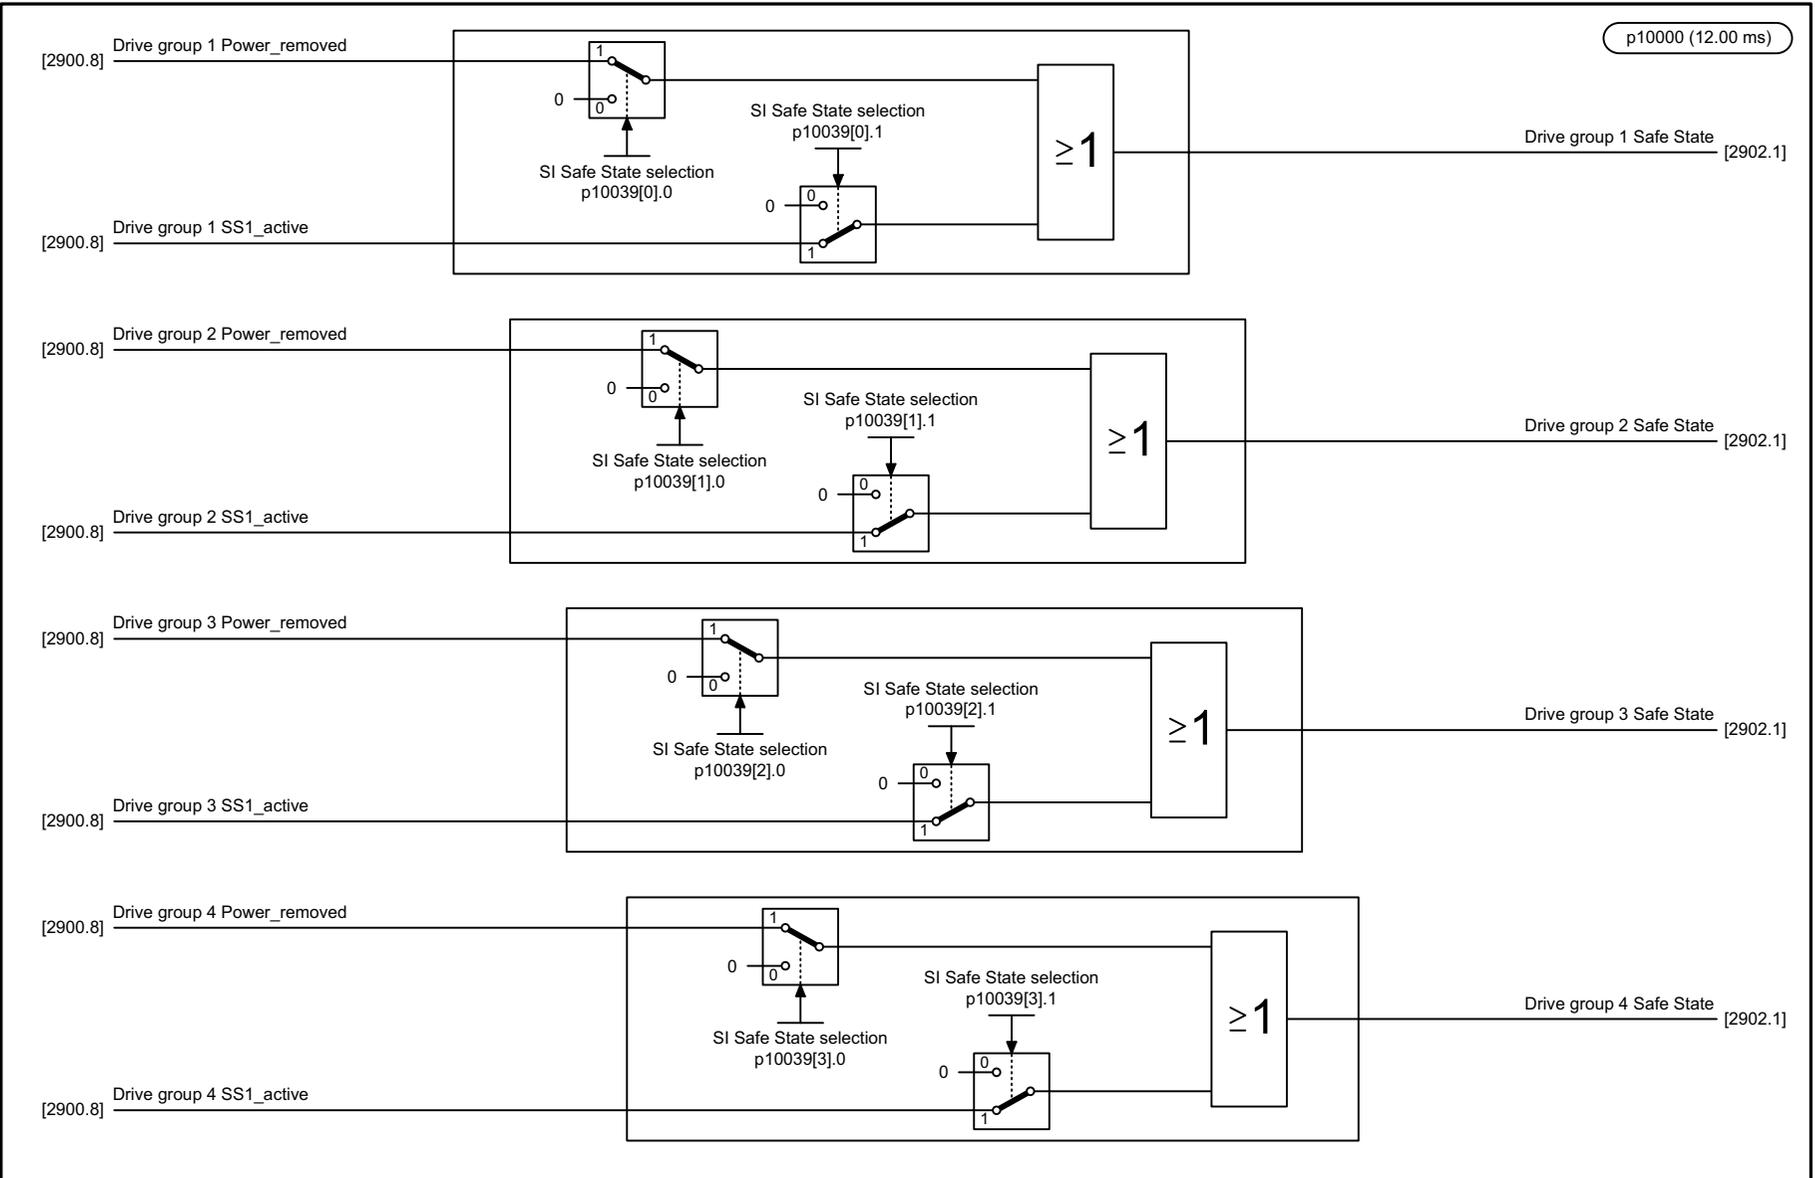
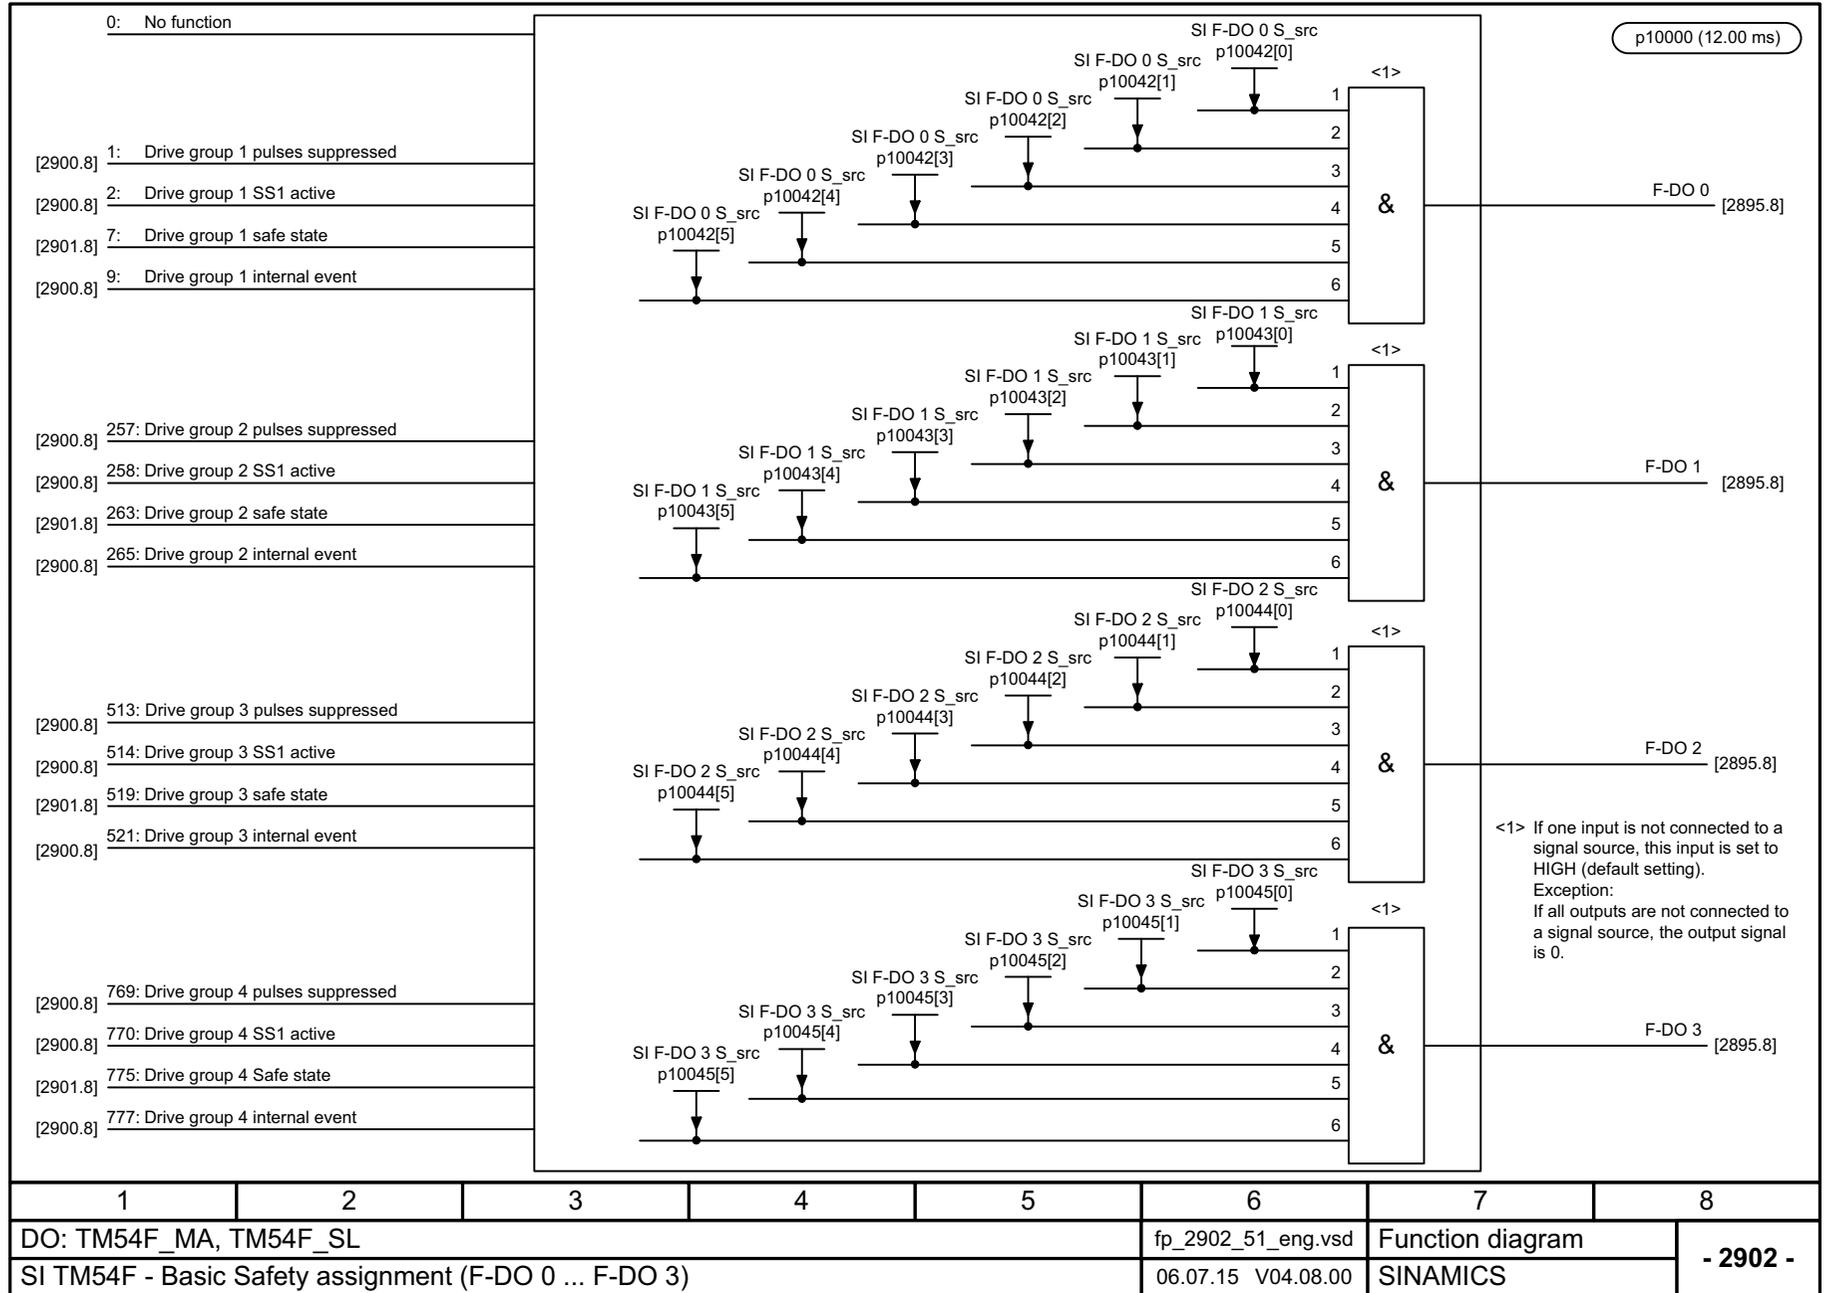


Fig. 3-106 2901 – Basic Functions Safe State selection

1	2	3	4	5	6	7	8
DO: TM54F_MA, TM54F_SL					fp_2901_51_eng.vsd	Function diagram	
SI TM54F - Basic Functions Safe State selection					06.07.15 V04.08.00	SINAMICS	

Fig. 3-107 2902 – Basic Functions assignment (F-DO 0 ... F-DO 3)





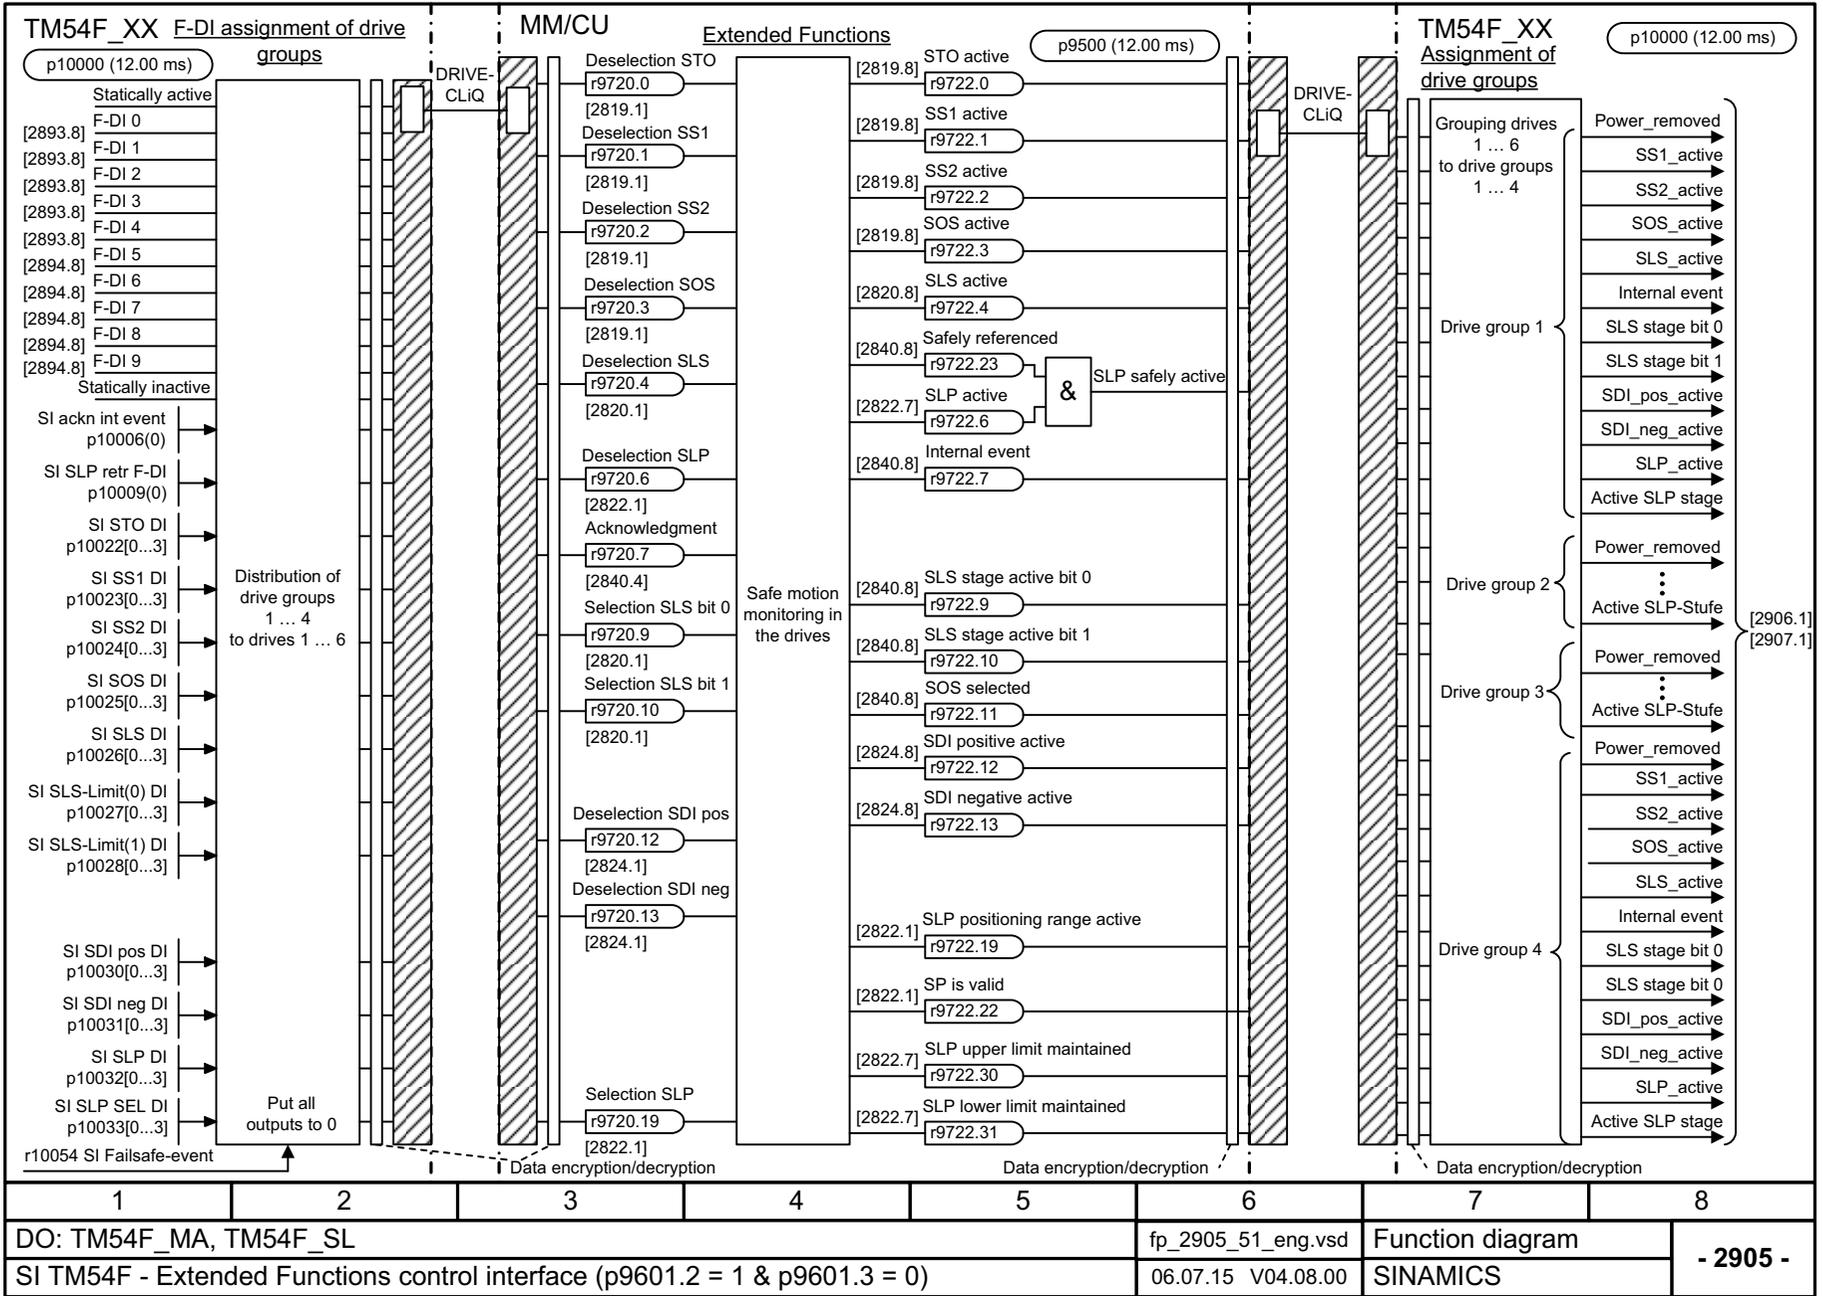


Fig. 3-108 2905 - Extended Functions control interface (p9601.2 = 1 & p9601.3 = 0)

Fig. 3-109 2906 – Extended Functions Safe State selection

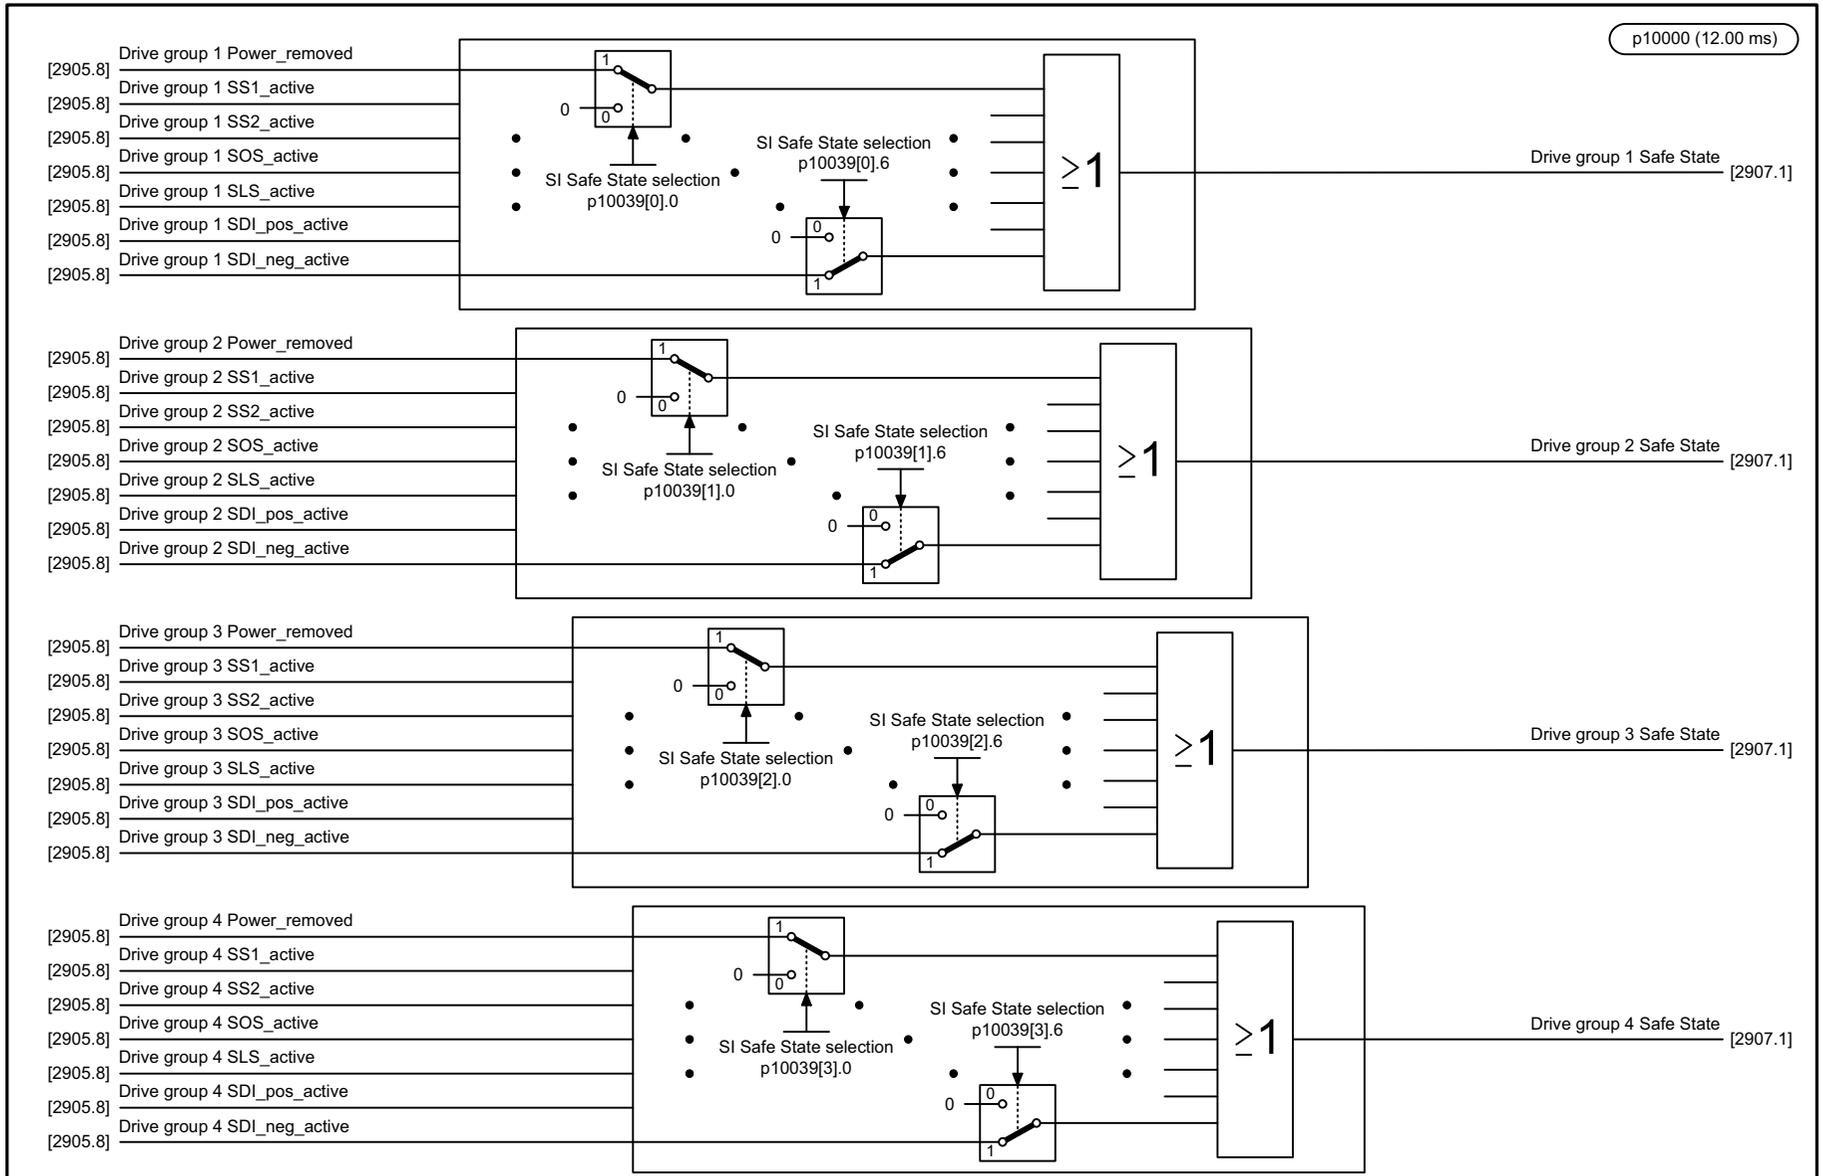

1	2	3	4	5	6	7	8
DO: TM54F_MA, TM54F_SL					fp_2906_51_eng.vsd	Function diagram	
SI TM54F - Extended Functions Safe State selection					06.07.15 V04.08.00	SINAMICS	
							- 2906 -

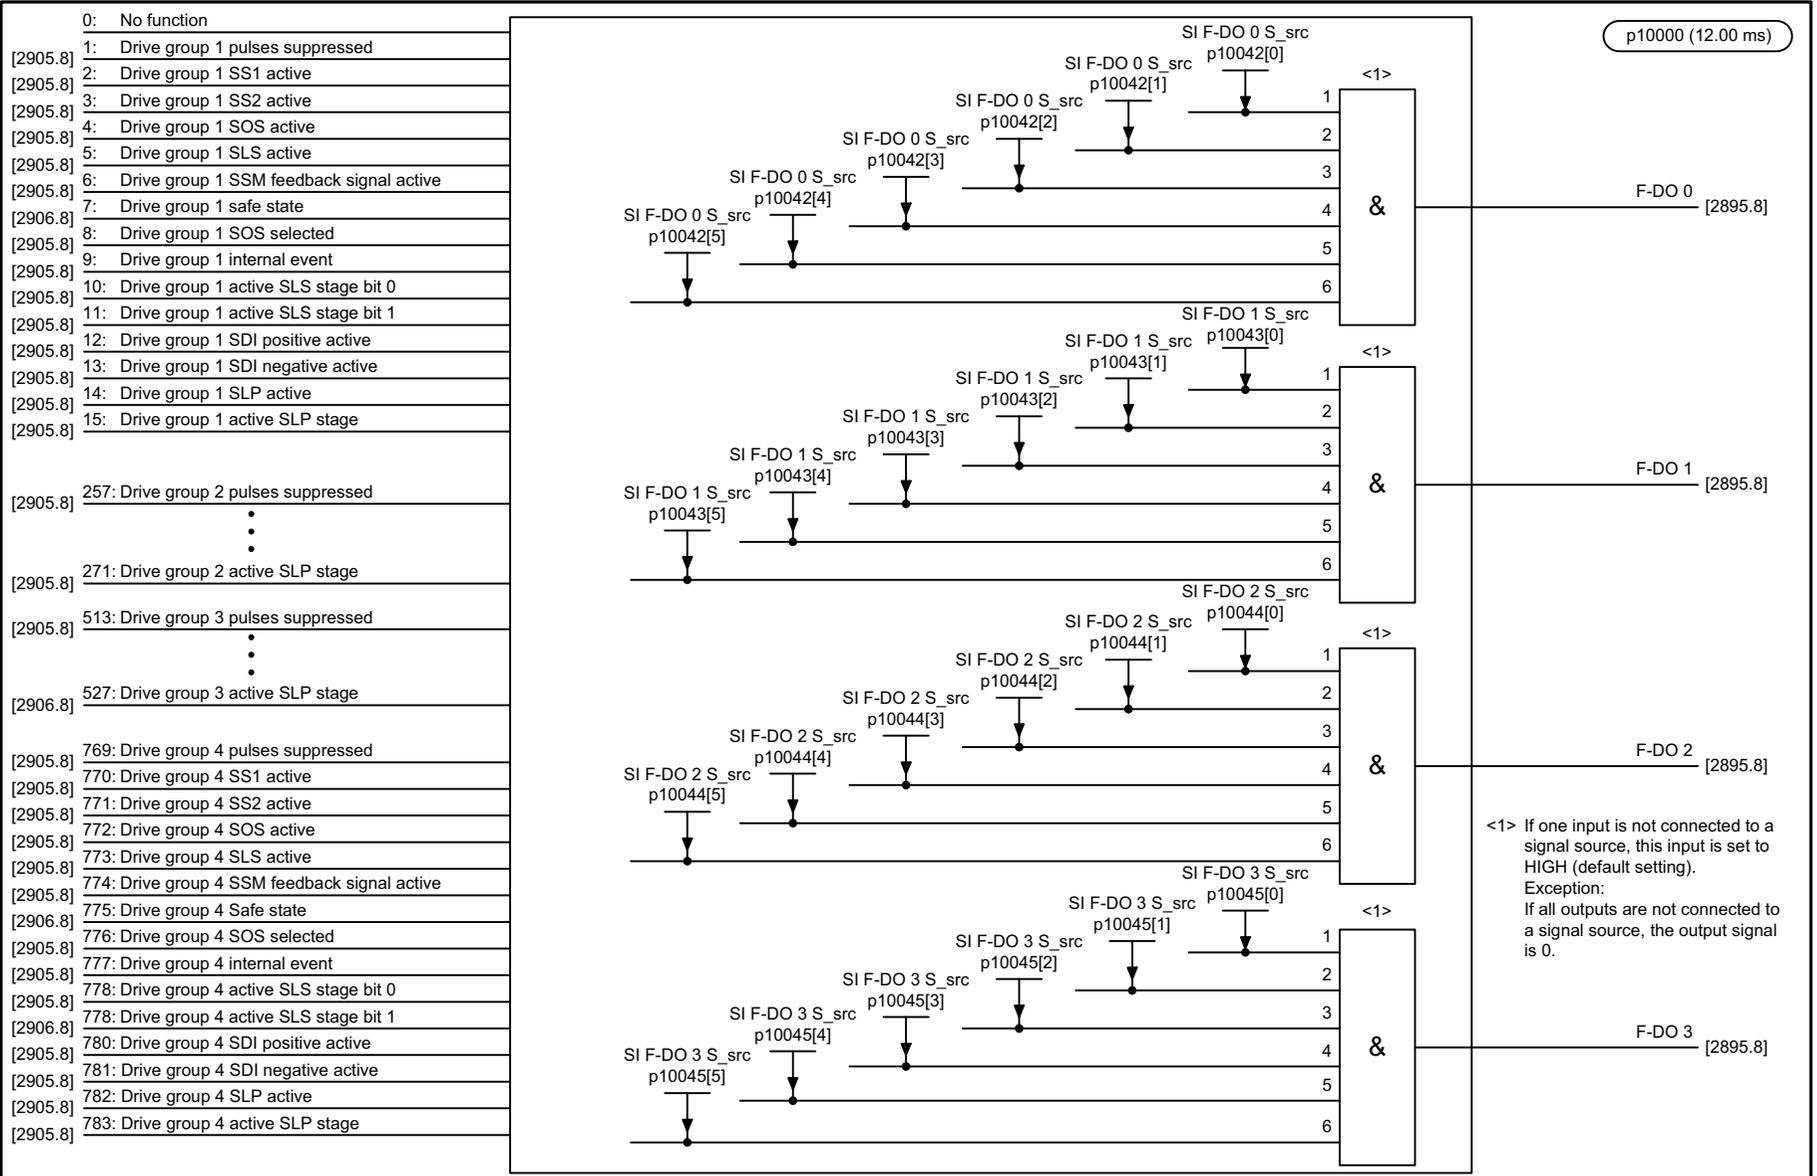

0:	No function
[2905.8]	1: Drive group 1 pulses suppressed
[2905.8]	2: Drive group 1 SS1 active
[2905.8]	3: Drive group 1 SS2 active
[2905.8]	4: Drive group 1 SOS active
[2905.8]	5: Drive group 1 SLS active
[2905.8]	6: Drive group 1 SSM feedback signal active
[2906.8]	7: Drive group 1 safe state
[2905.8]	8: Drive group 1 SOS selected
[2905.8]	9: Drive group 1 internal event
[2905.8]	10: Drive group 1 active SLS stage bit 0
[2905.8]	11: Drive group 1 active SLS stage bit 1
[2905.8]	12: Drive group 1 SDI positive active
[2905.8]	13: Drive group 1 SDI negative active
[2905.8]	14: Drive group 1 SLP active
[2905.8]	15: Drive group 1 active SLP stage
[2905.8]	257: Drive group 2 pulses suppressed
	⋮
[2905.8]	271: Drive group 2 active SLP stage
[2905.8]	513: Drive group 3 pulses suppressed
	⋮
[2906.8]	527: Drive group 3 active SLP stage
[2905.8]	769: Drive group 4 pulses suppressed
[2905.8]	770: Drive group 4 SS1 active
[2905.8]	771: Drive group 4 SS2 active
[2905.8]	772: Drive group 4 SOS active
[2905.8]	773: Drive group 4 SLS active
[2905.8]	774: Drive group 4 SSM feedback signal active
[2906.8]	775: Drive group 4 Safe state
[2905.8]	776: Drive group 4 SOS selected
[2905.8]	777: Drive group 4 internal event
[2905.8]	778: Drive group 4 active SLS stage bit 0
[2906.8]	778: Drive group 4 active SLS stage bit 1
[2905.8]	780: Drive group 4 SDI positive active
[2905.8]	781: Drive group 4 SDI negative active
[2905.8]	782: Drive group 4 SLP active
[2905.8]	783: Drive group 4 active SLP stage

1	2	3	4	5	6	7	8
DO: TM54F_MA, TM54F_SL					fp_2907_51_eng.vsd	Function diagram	
SI TM54F - Extended Functions assignment (F-DO 0 ... F-DO 3)					06.07.15 V04.08.00	SINAMICS	
							<b>- 2907 -</b>

Fig. 3-110 2907 – Extended Functions assignment (F-DO 0 ... F-DO 3)

## 3.13 Safety Integrated PROFIsafe

### Function diagrams

---

2915 – Standard telegrams	1224
2917 – Manufacturer-specific telegrams	1225

---


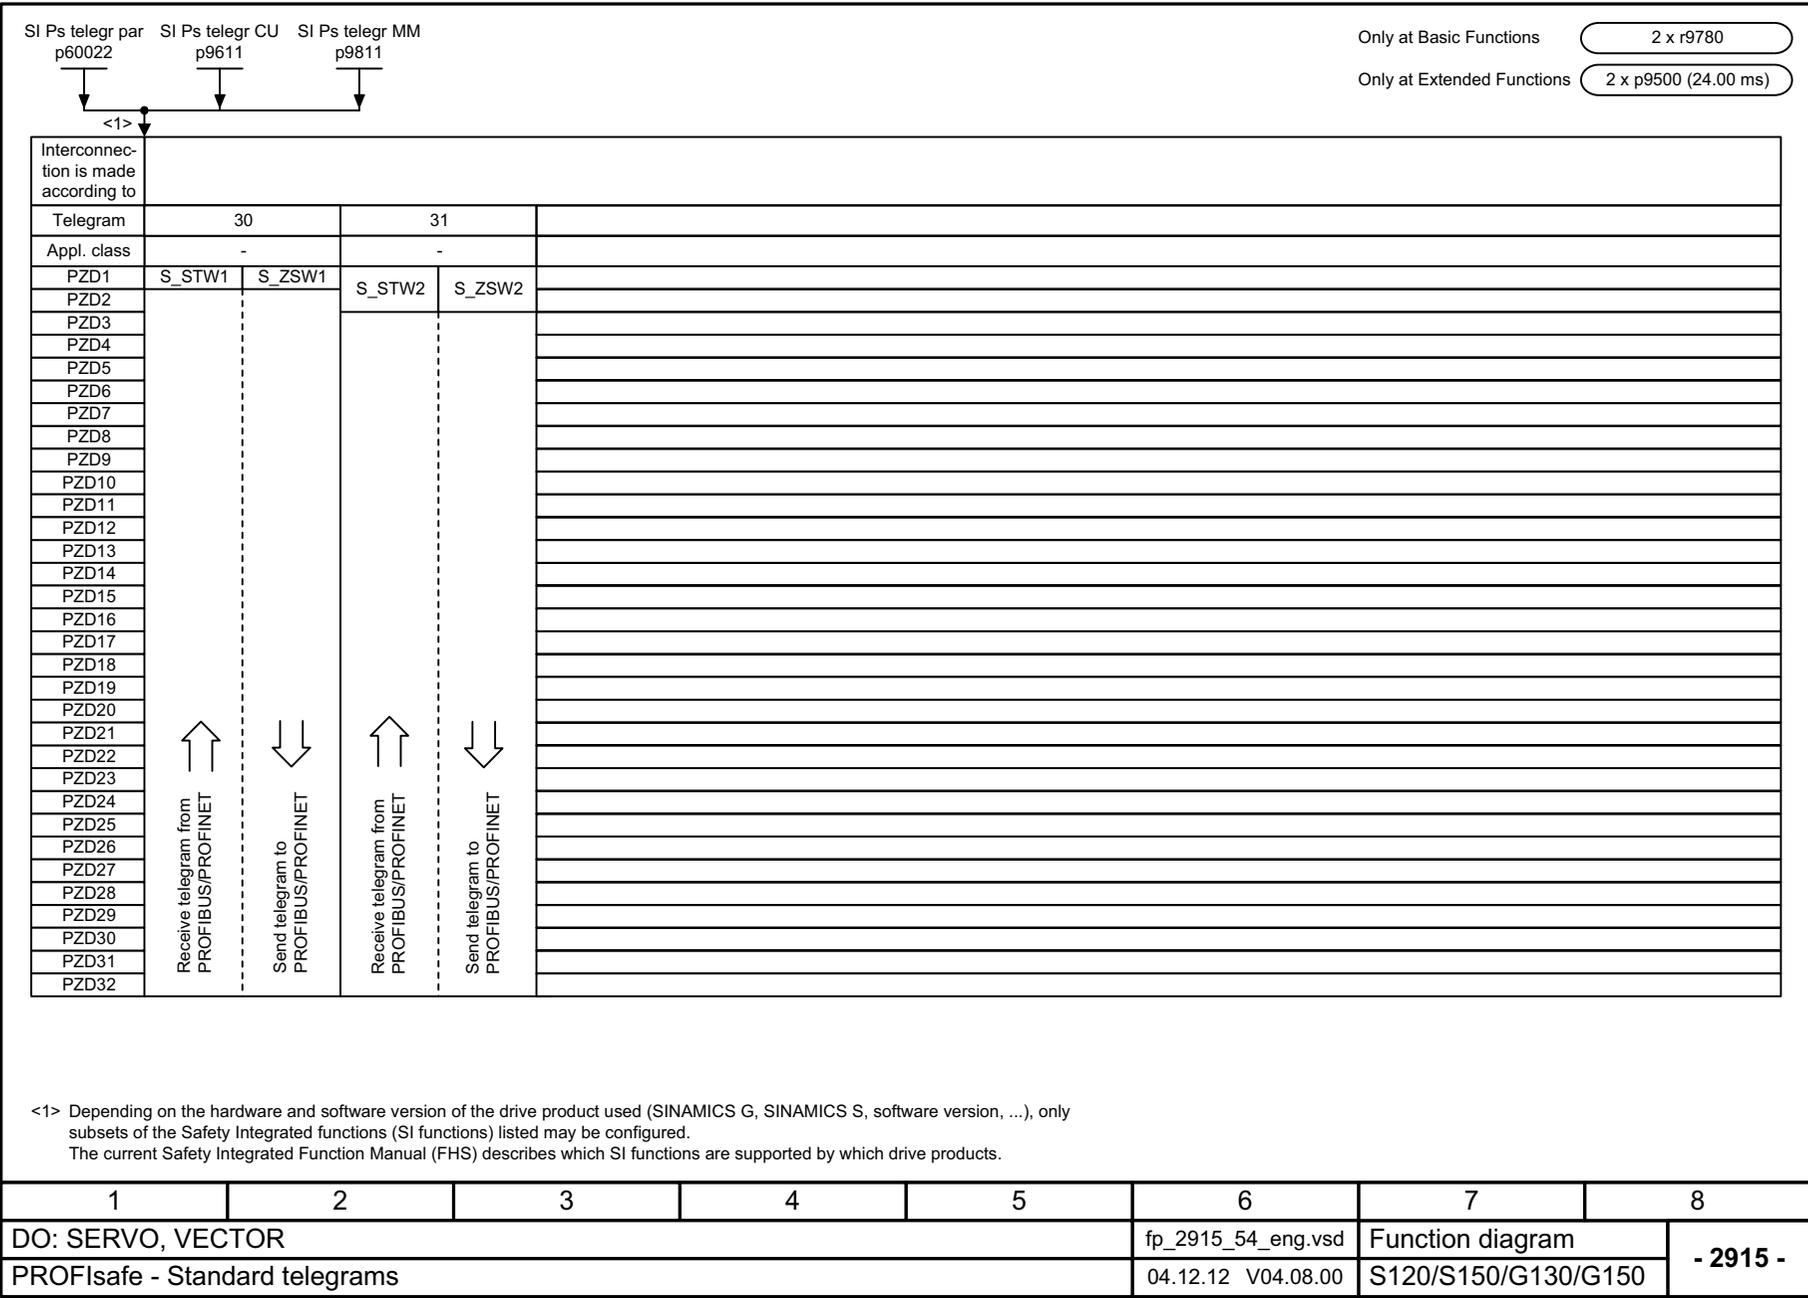


Fig. 3-111 2915 – Standard telegrams

Fig. 3-112 2917 – Manufacturer-specific telegrams

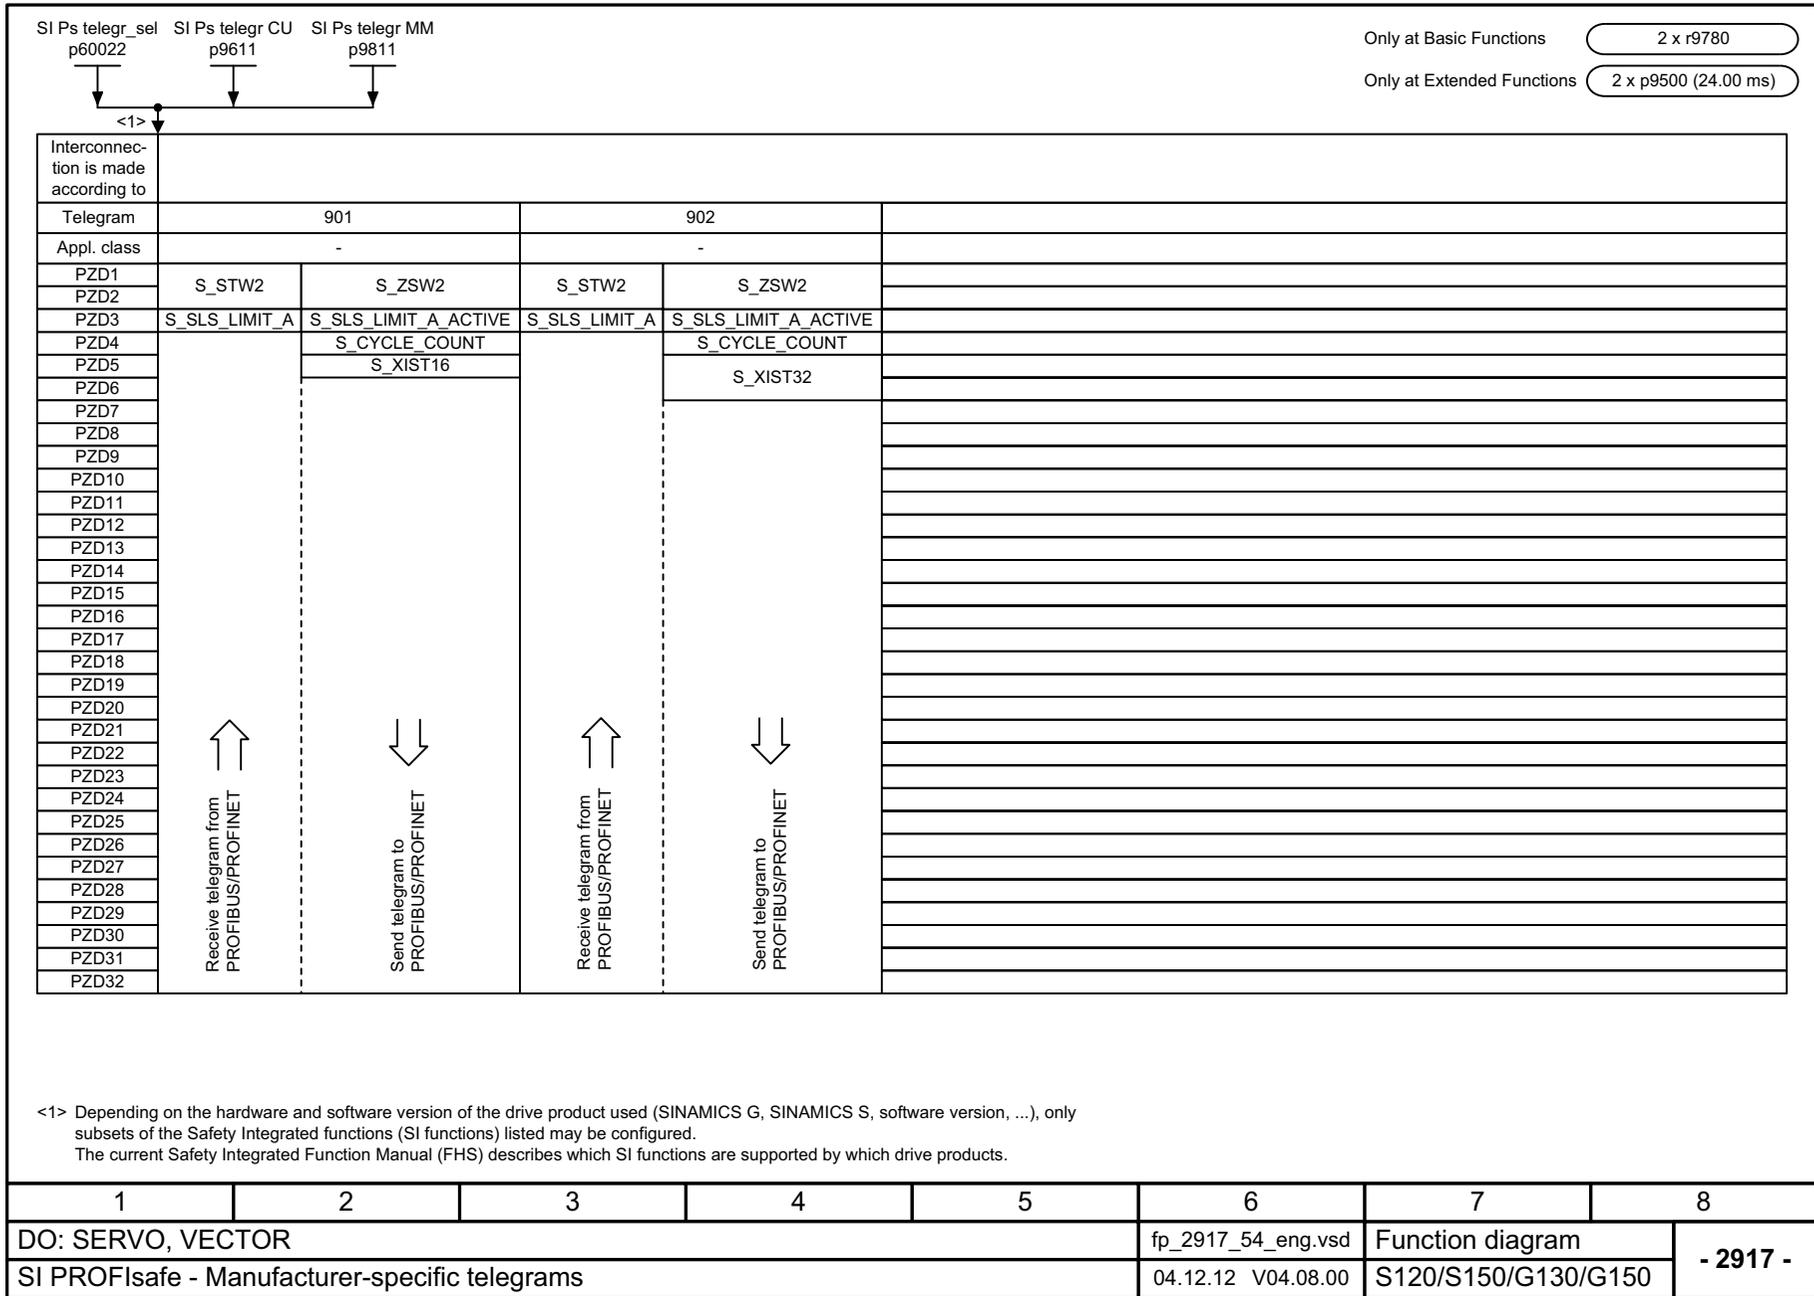


## 3.14 Setpoint channel


### Function diagrams

3001 – Overview	1227
3010 – Fixed speed setpoints	1228
3020 – Motorized potentiometer	1229
3030 – Main/supplementary setpoint, setpoint scaling, jogging	1230
3040 – Direction limitation and direction reversal	1231
3050 – Skip frequency bands and speed limitations	1232
3060 – Basic ramp-function generator	1233
3070 – Extended ramp-function generator	1234
3080 – Ramp-function generator selection, status word, tracking	1235

Fig. 3-113 3001 – Overview

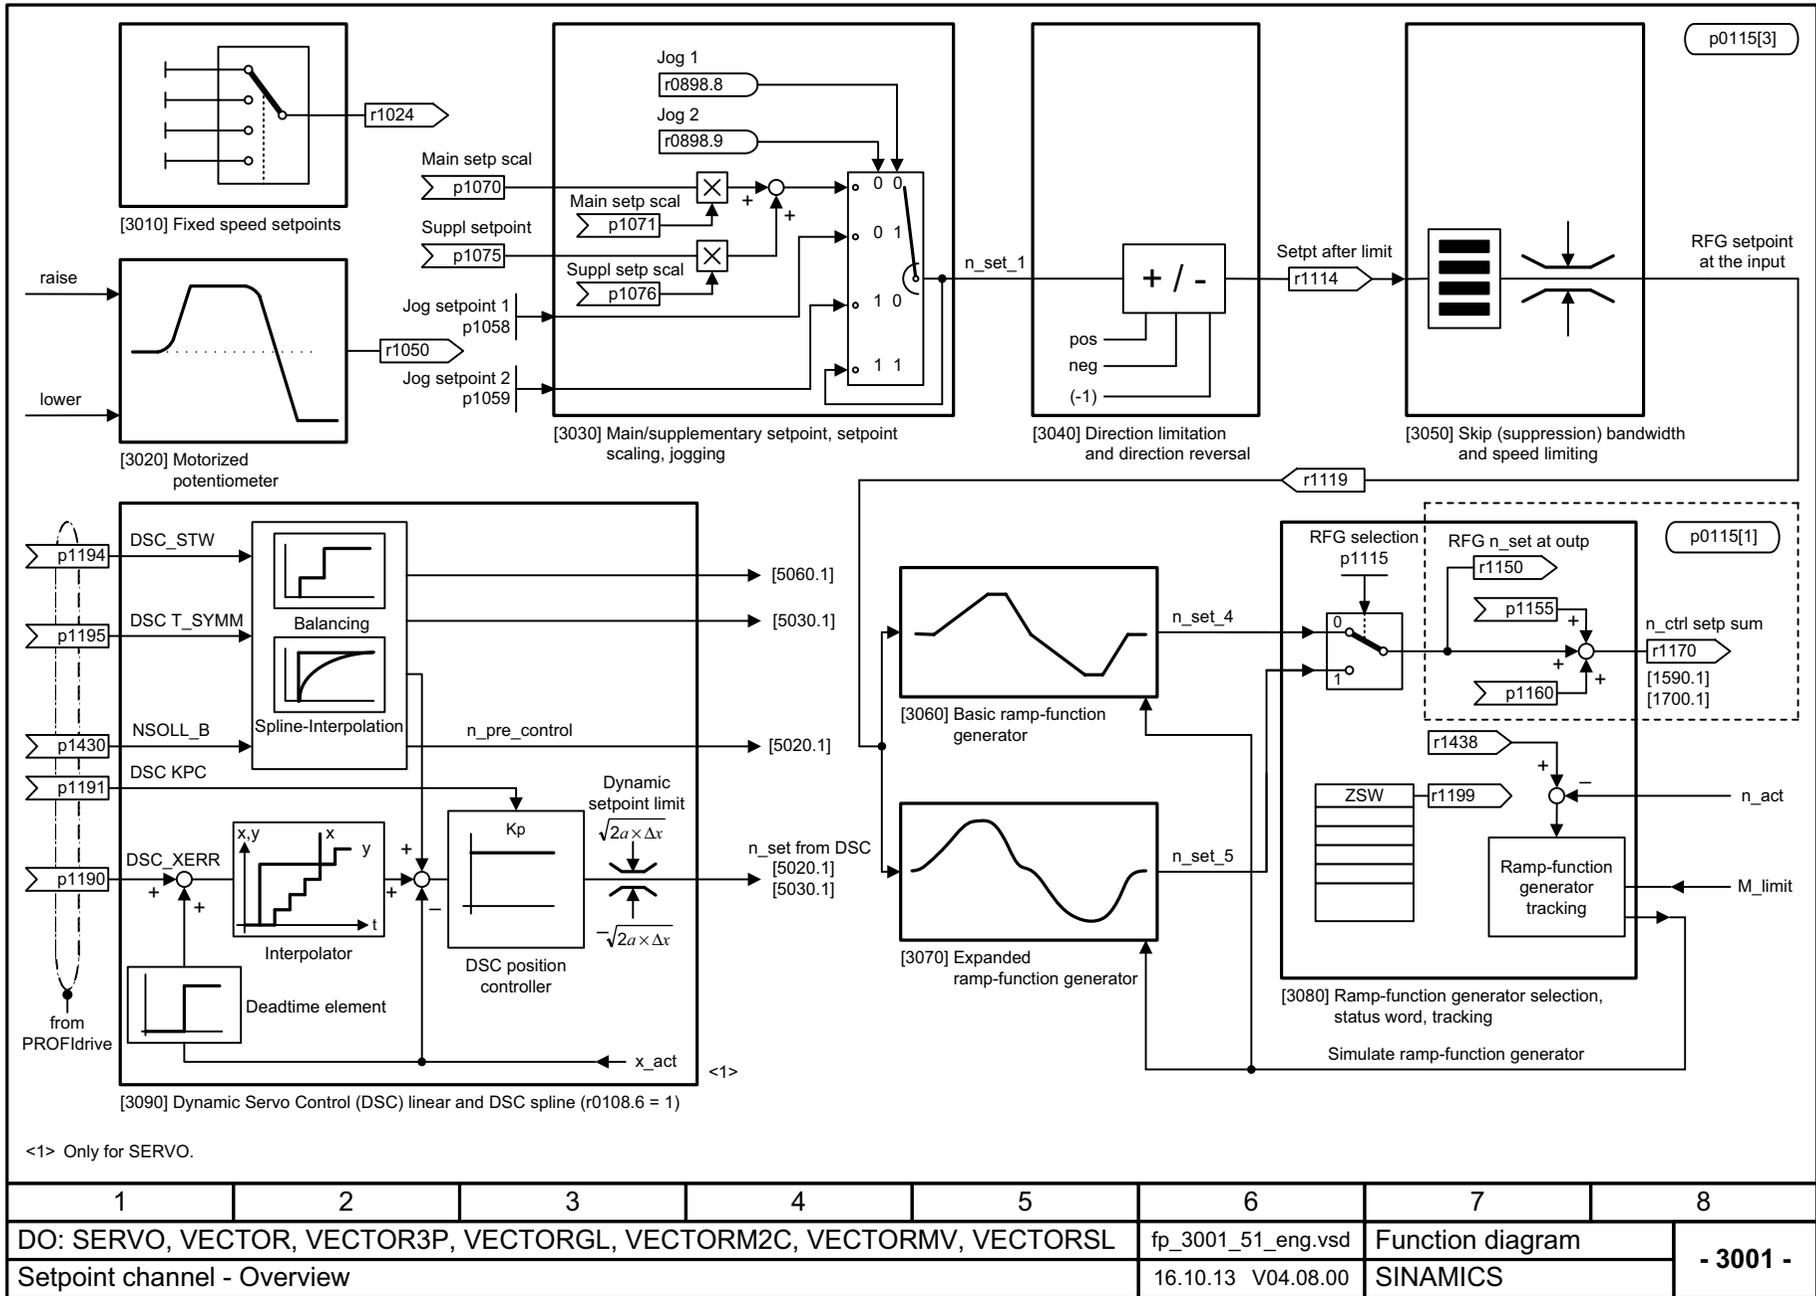


1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_3001_51_eng.vsd	Function diagram	
Setpoint channel - Overview					16.10.13 V04.08.00	SINAMICS	
							<b>- 3001 -</b>

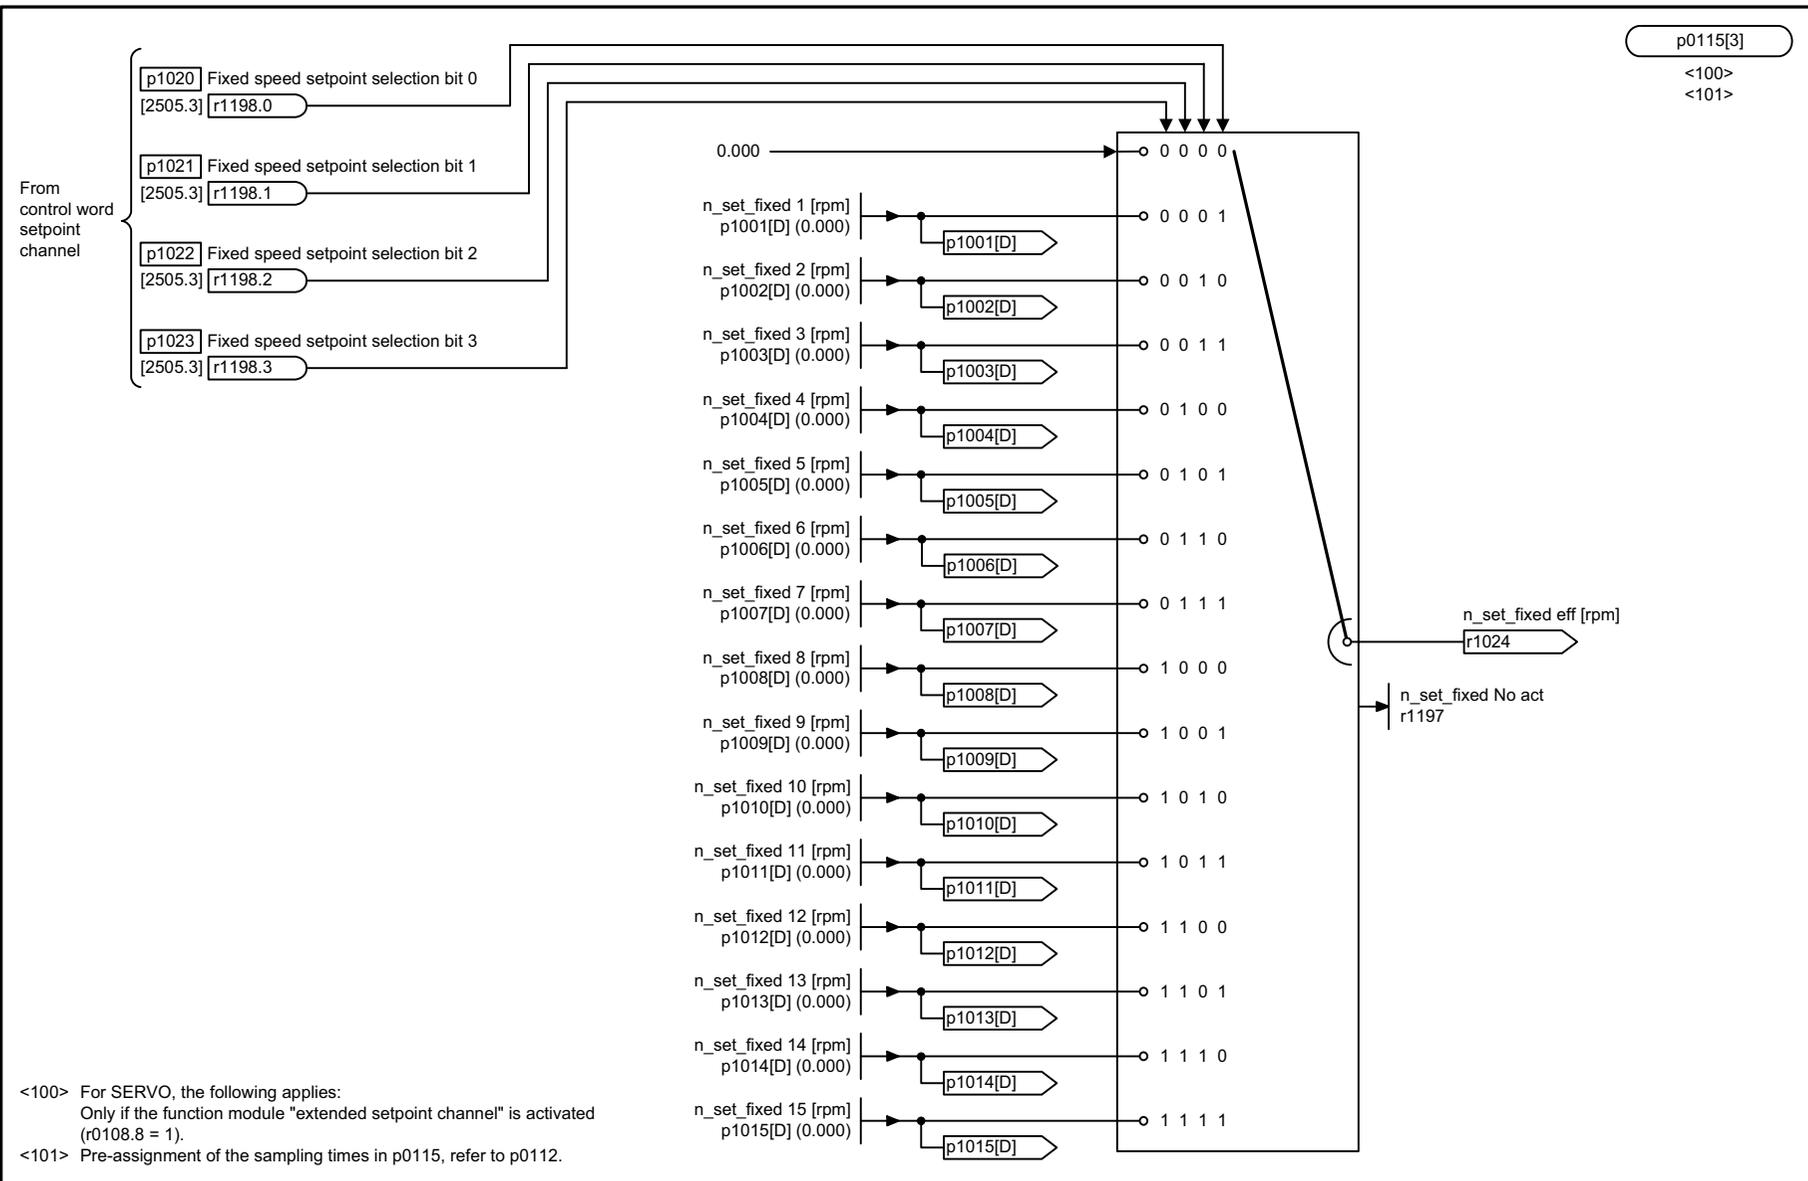


1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_3010_51_eng.vsd	Function diagram	
Setpoint channel - Fixed speed setpoints					16.10.13 V04.08.00	SINAMICS	
							<b>- 3010 -</b>

Fig. 3-114 3010 – Fixed speed setpoints

Fig. 3-115 3020 – Motorized potentiometer

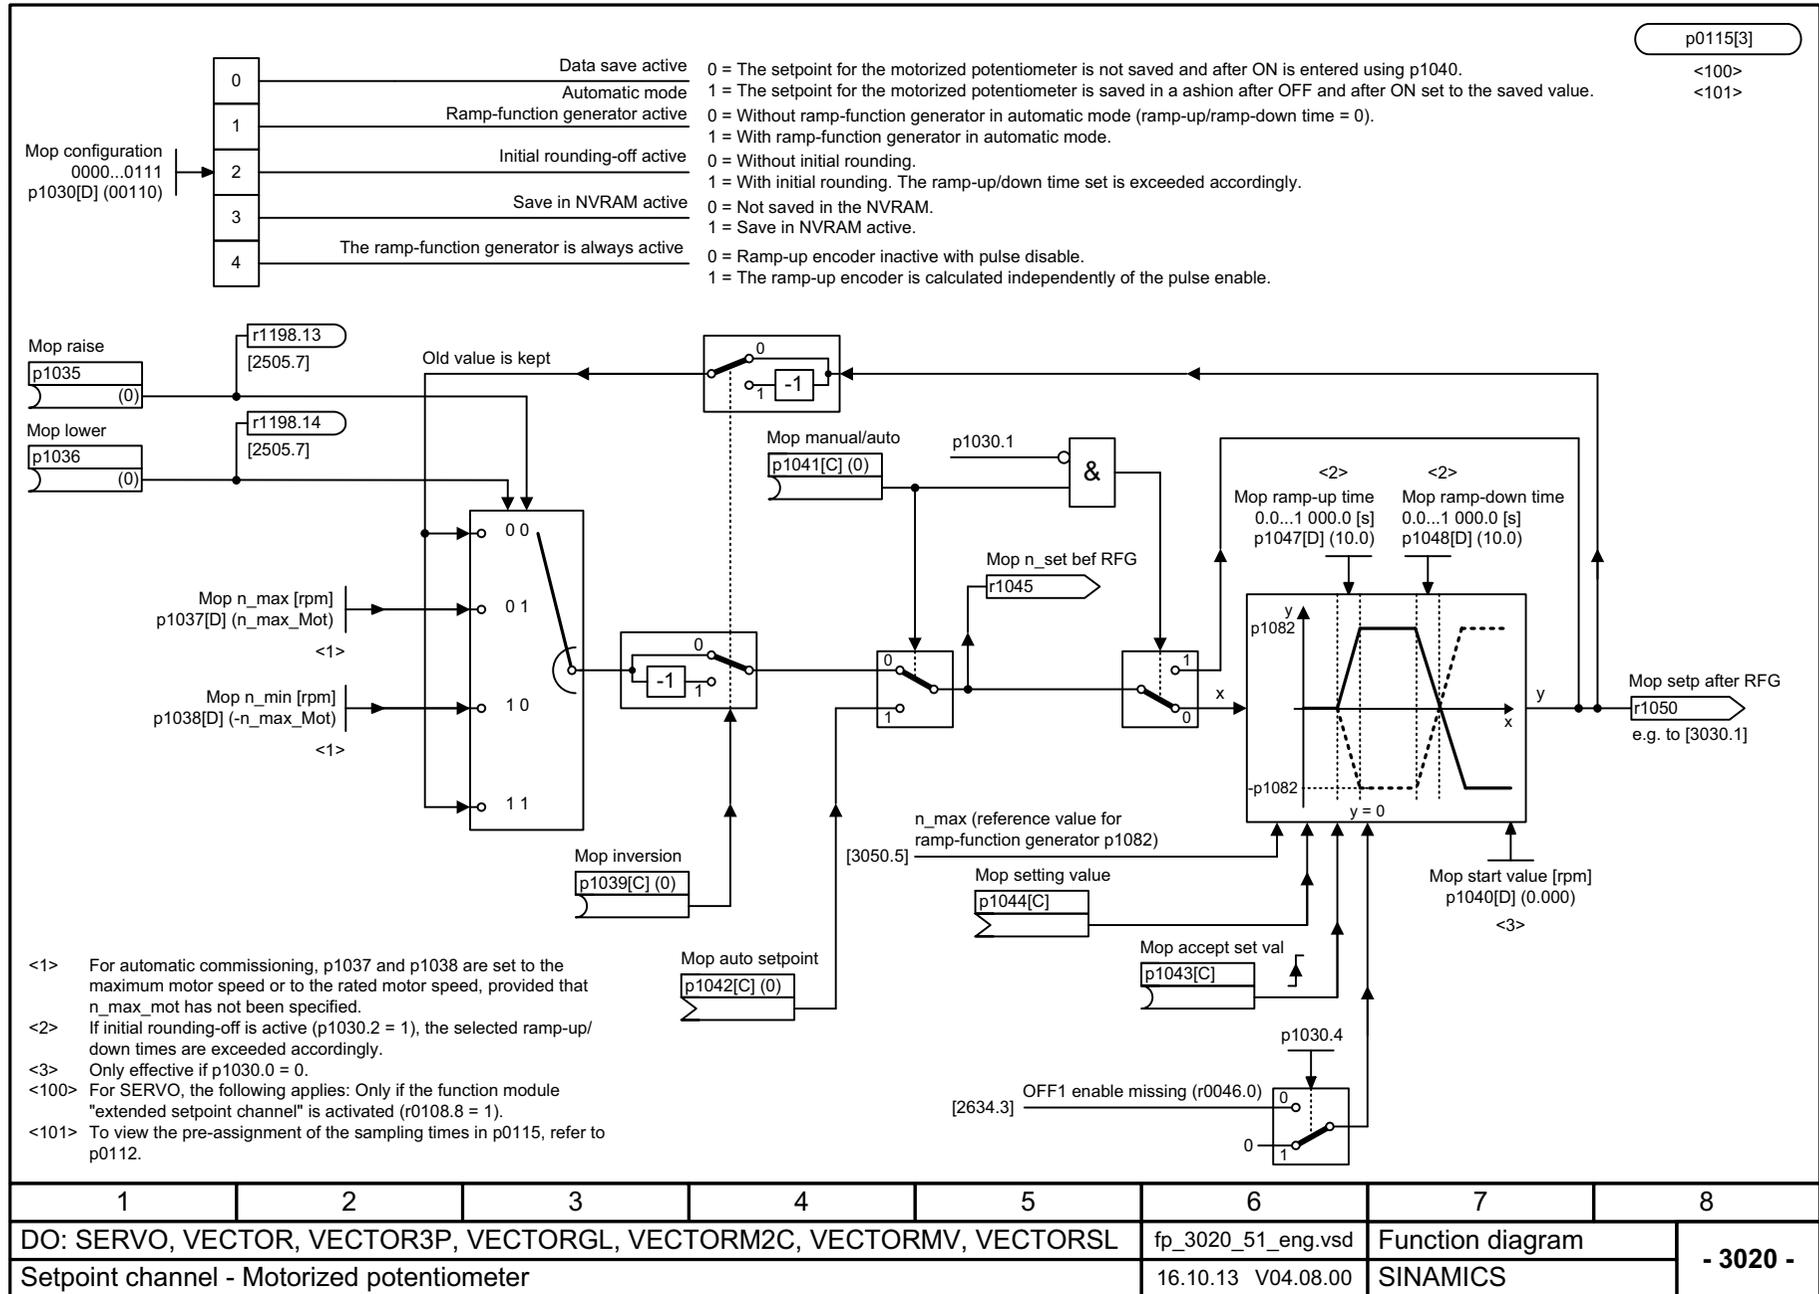

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_3020_51_eng.vsd	Function diagram	
Setpoint channel - Motorized potentiometer					16.10.13 V04.08.00	SINAMICS	
							- 3020 -

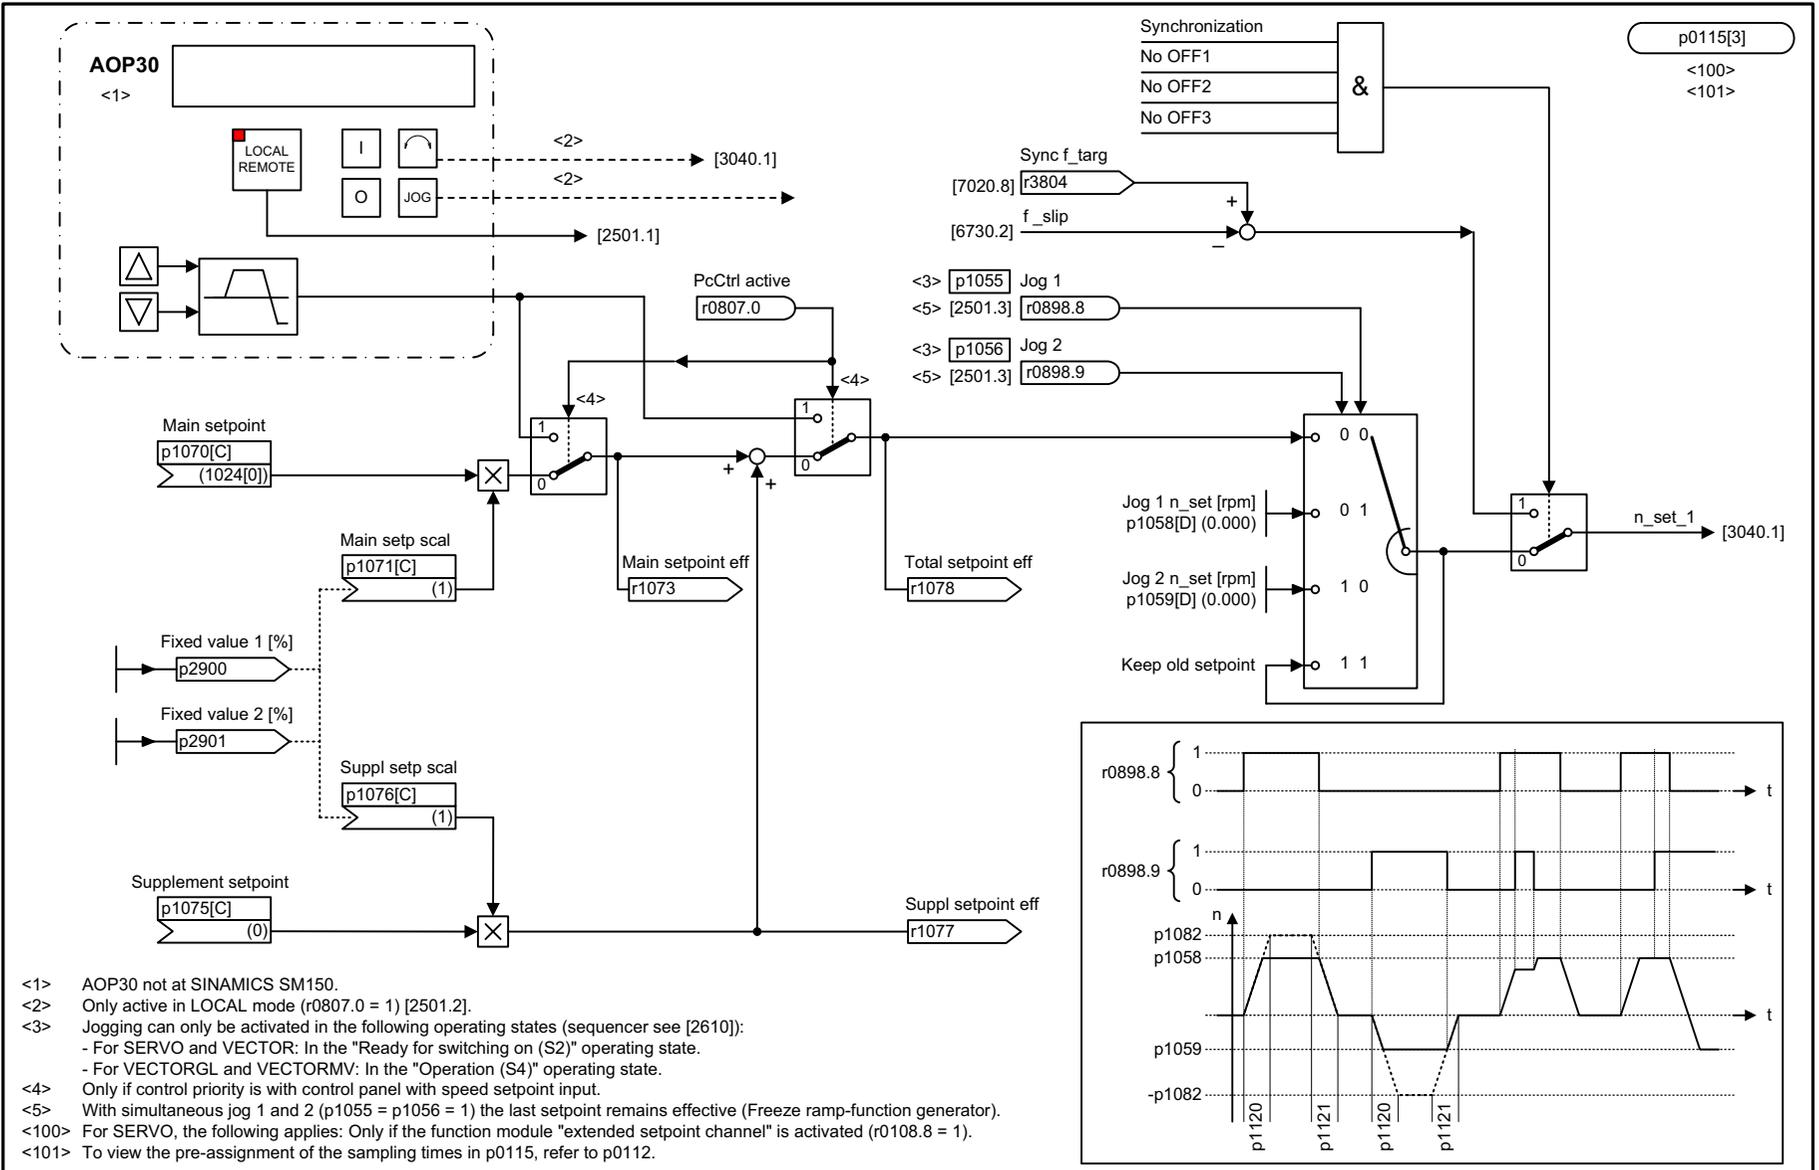


- <1> AOP30 not at SINAMICS SM150.
- <2> Only active in LOCAL mode (r0807.0 = 1) [2501.2].
- <3> Jogging can only be activated in the following operating states (sequencer see [2610]):  
- For SERVO and VECTOR: In the "Ready for switching on (S2)" operating state.  
- For VECTORGL and VECTORMV: In the "Operation (S4)" operating state.
- <4> Only if control priority is with control panel with speed setpoint input.
- <5> With simultaneous jog 1 and 2 (p1055 = p1056 = 1) the last setpoint remains effective (Freeze ramp-function generator).
- <100> For SERVO, the following applies: Only if the function module "extended setpoint channel" is activated (r0108.8 = 1).
- <101> To view the pre-assignment of the sampling times in p0115, refer to p0112.


1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL						fp_3030_51_eng.vsd	Function diagram SINAMICS
Setpoint channel - Main/supplementary setpoint, setpoint scaling, jogging						11.06.15 V04.08.00	

Fig. 3-116 3030 – Main/supplementary setpoint, setpoint scaling, jogging

Fig. 3-117 3040 – Direction limitation and direction reversal

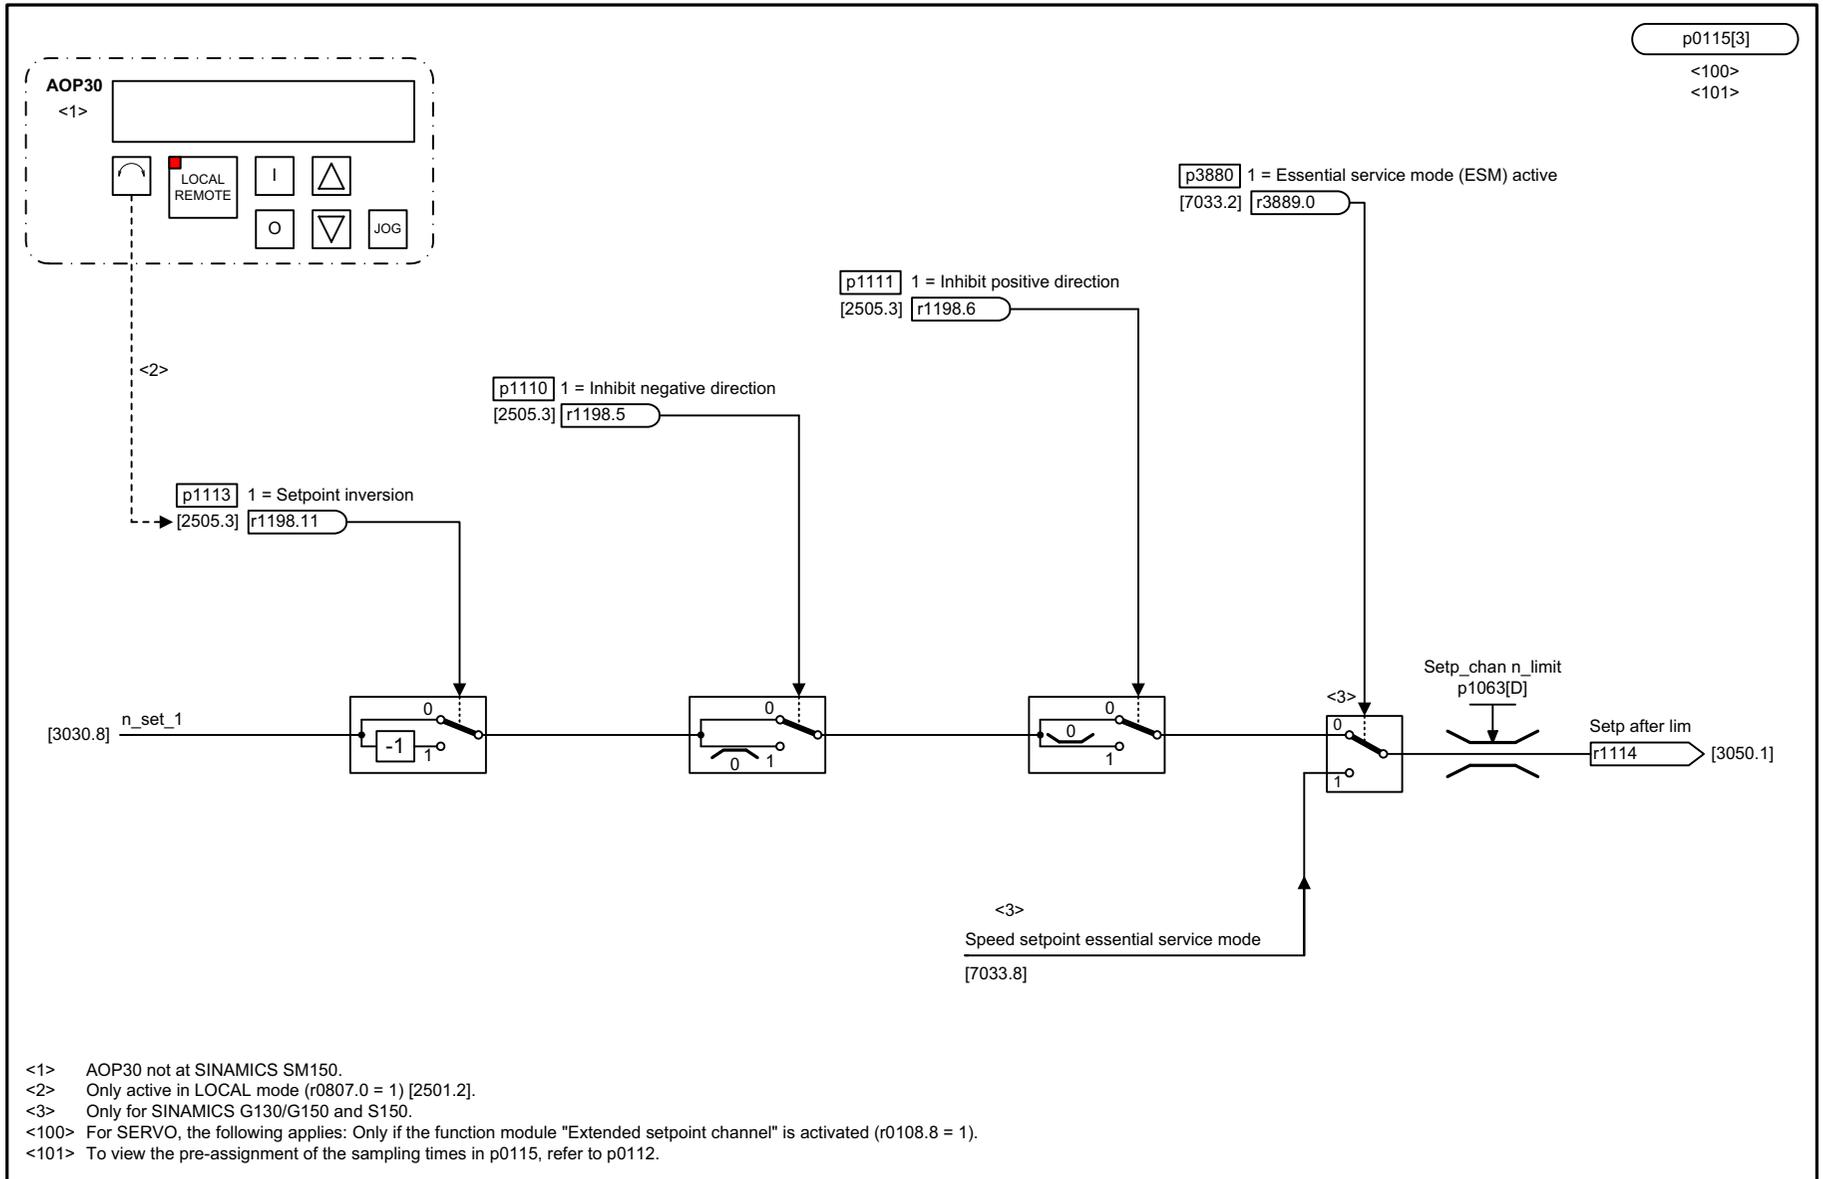

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_3040_51_eng.vsd	Function diagram	
Setpoint channel - Direction limitation and direction reversal					04.05.16 V04.08.00	SINAMICS	
							<b>- 3040 -</b>

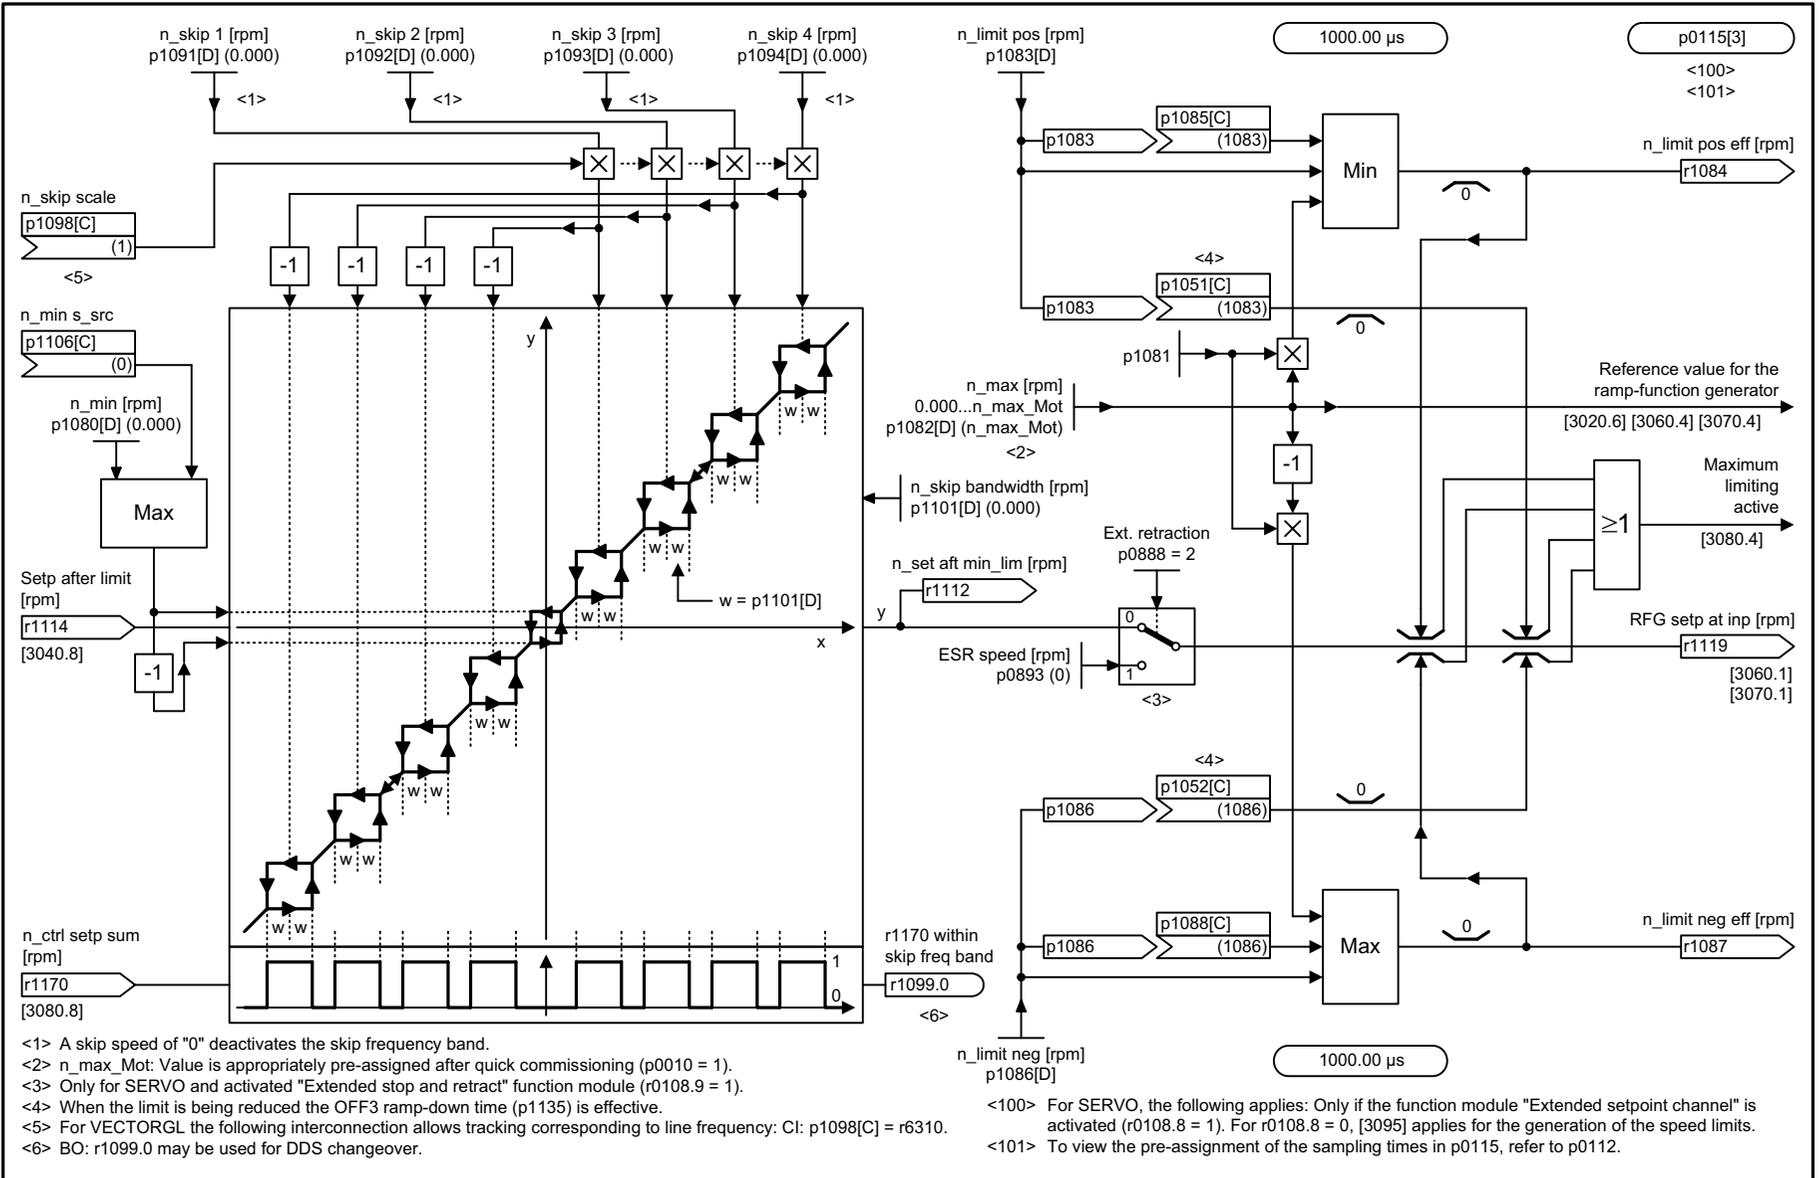

- <1> A skip speed of "0" deactivates the skip frequency band.
- <2> n\_max\_Mot: Value is appropriately pre-assigned after quick commissioning (p0010 = 1).
- <3> Only for SERVO and activated "Extended stop and retract" function module (r0108.9 = 1).
- <4> When the limit is being reduced the OFF3 ramp-down time (p1135) is effective.
- <5> For VECTORGL the following interconnection allows tracking corresponding to line frequency: Cl: p1098[C] = r6310.
- <6> BO: r1099.0 may be used for DDS changeover.


- <100> For SERVO, the following applies: Only if the function module "Extended setpoint channel" is activated (r0108.8 = 1). For r0108.8 = 0, [3095] applies for the generation of the speed limits.
- <101> To view the pre-assignment of the sampling times in p0115, refer to p0112.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_3050_51_eng.vsd	Function diagram	
Setpoint channel - Skip frequency bands and speed limitations					16.10.13 V04.08.00	SINAMICS	


- 3050 -

Fig. 3-118 3050 – Skip frequency bands and speed limitations

Fig. 3-119 3060 – Basic ramp-function generator

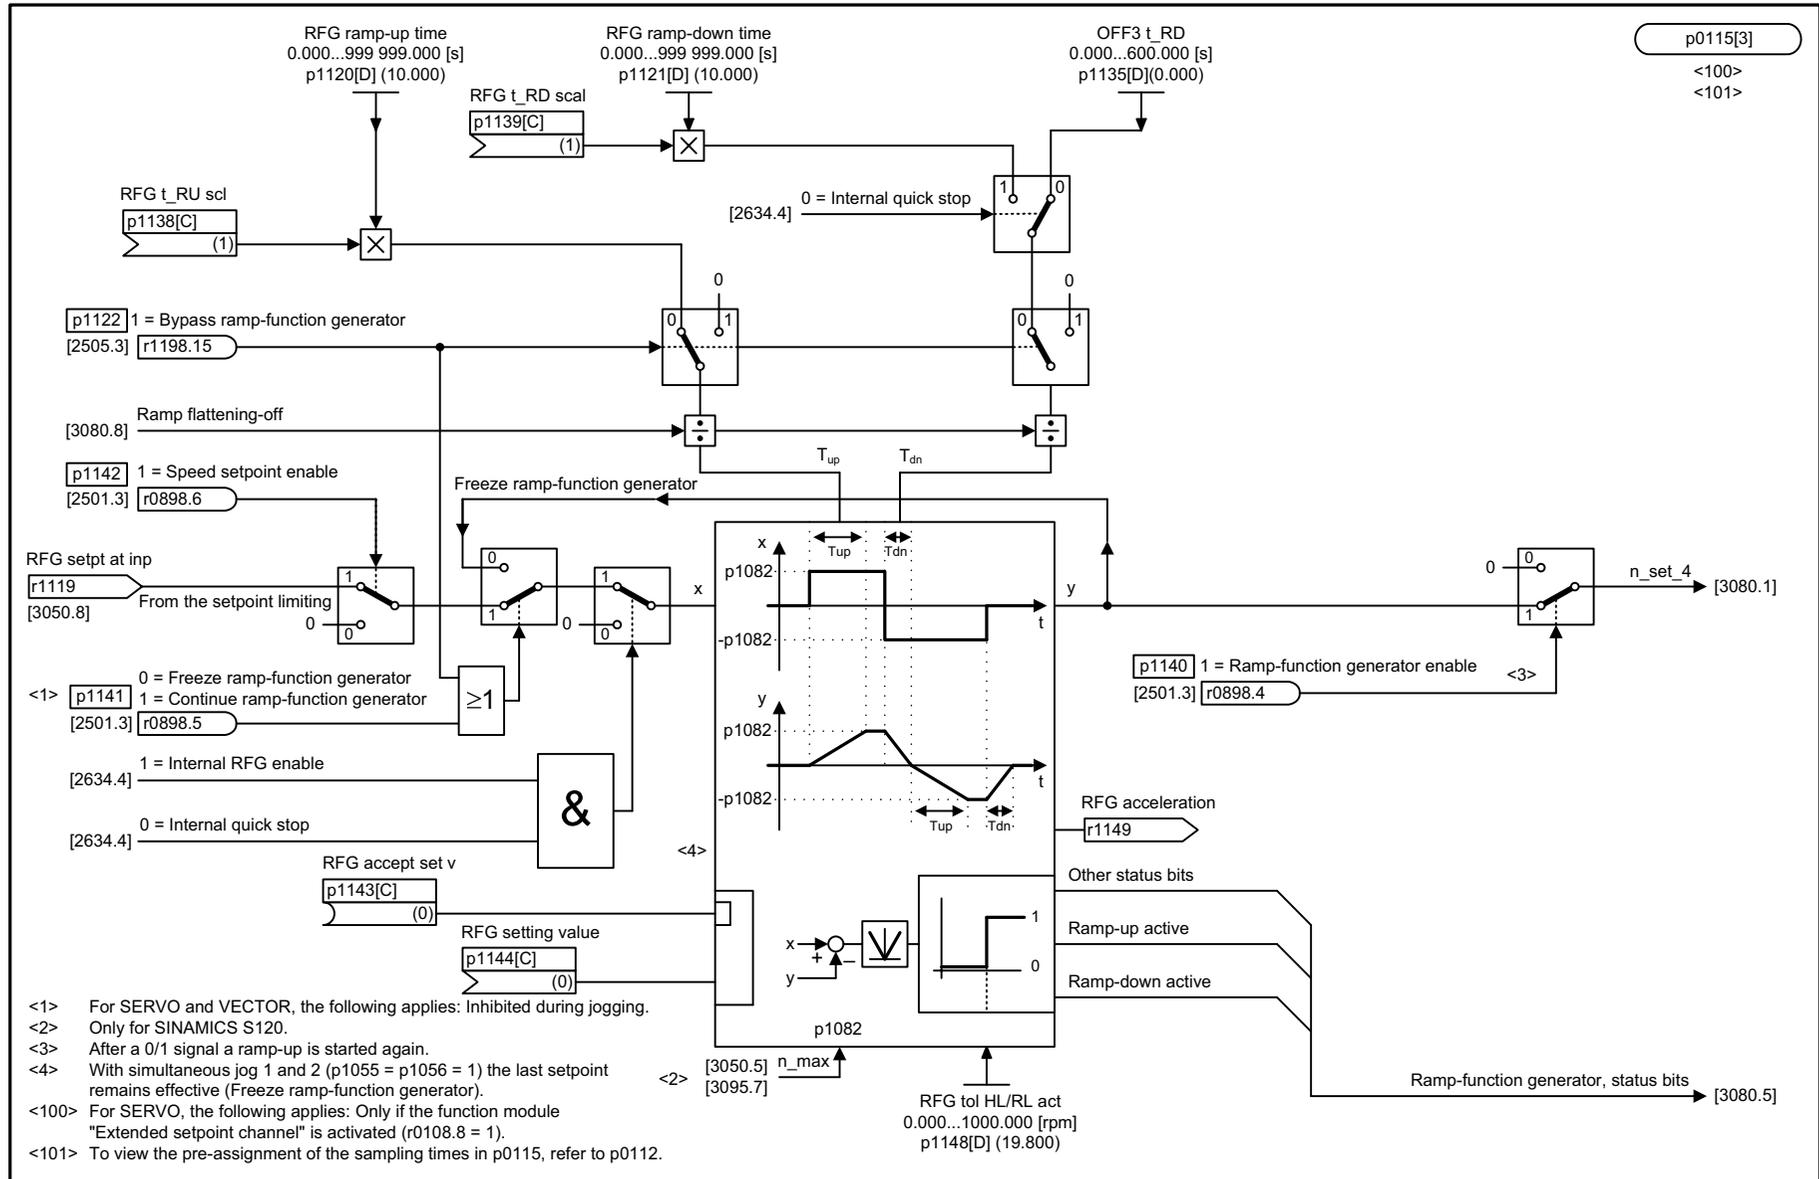

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_3060_51_eng.vsd	Function diagram	
Setpoint channel - Basic ramp-function generator					28.08.14 V04.08.00	SINAMICS	
							- 3060 -

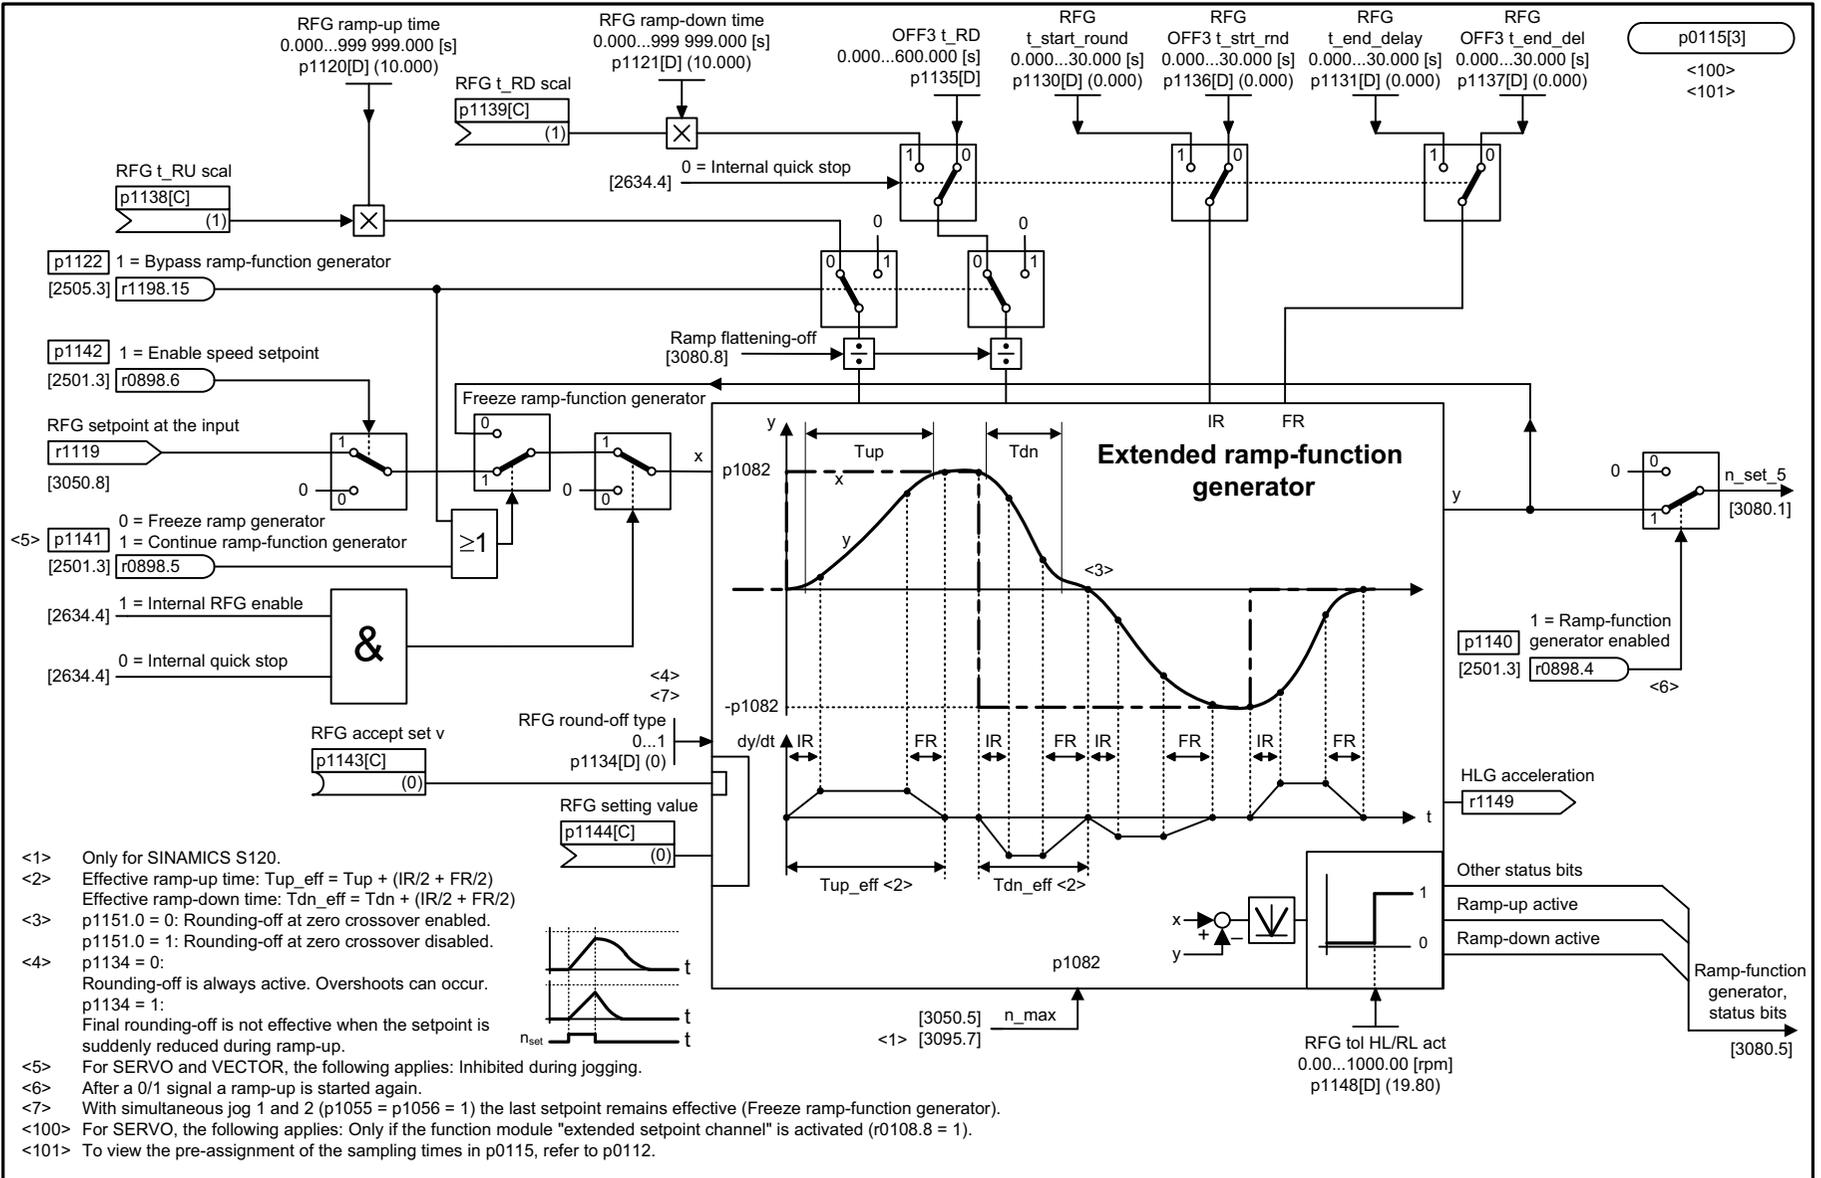


- <1> Only for SINAMICS S120.
- <2> Effective ramp-up time:  $T_{up\_eff} = T_{up} + (IR/2 + FR/2)$   
Effective ramp-down time:  $T_{dn\_eff} = T_{dn} + (IR/2 + FR/2)$
- <3> p1151.0 = 0: Rounding-off at zero crossover enabled.  
p1151.0 = 1: Rounding-off at zero crossover disabled.
- <4> p1134 = 0: Rounding-off is always active. Overshoots can occur.  
p1134 = 1: Final rounding-off is not effective when the setpoint is suddenly reduced during ramp-up.
- <5> For SERVO and VECTOR, the following applies: Inhibited during jogging.
- <6> After a 0/1 signal a ramp-up is started again.
- <7> With simultaneous jog 1 and 2 (p1055 = p1056 = 1) the last setpoint remains effective (Freeze ramp-function generator).
- <100> For SERVO, the following applies: Only if the function module "extended setpoint channel" is activated (r0108.8 = 1).
- <101> To view the pre-assignment of the sampling times in p0115, refer to p0112.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_3070_51_eng.vsd	Function diagram	
Setpoint channel - Extended ramp-function generator					28.08.14 V04.08.00	SINAMICS	

- 3070 -

Fig. 3-120 3070 – Extended ramp-function generator

Fig. 3-121 3080 – Ramp-function generator selection, status word, tracking

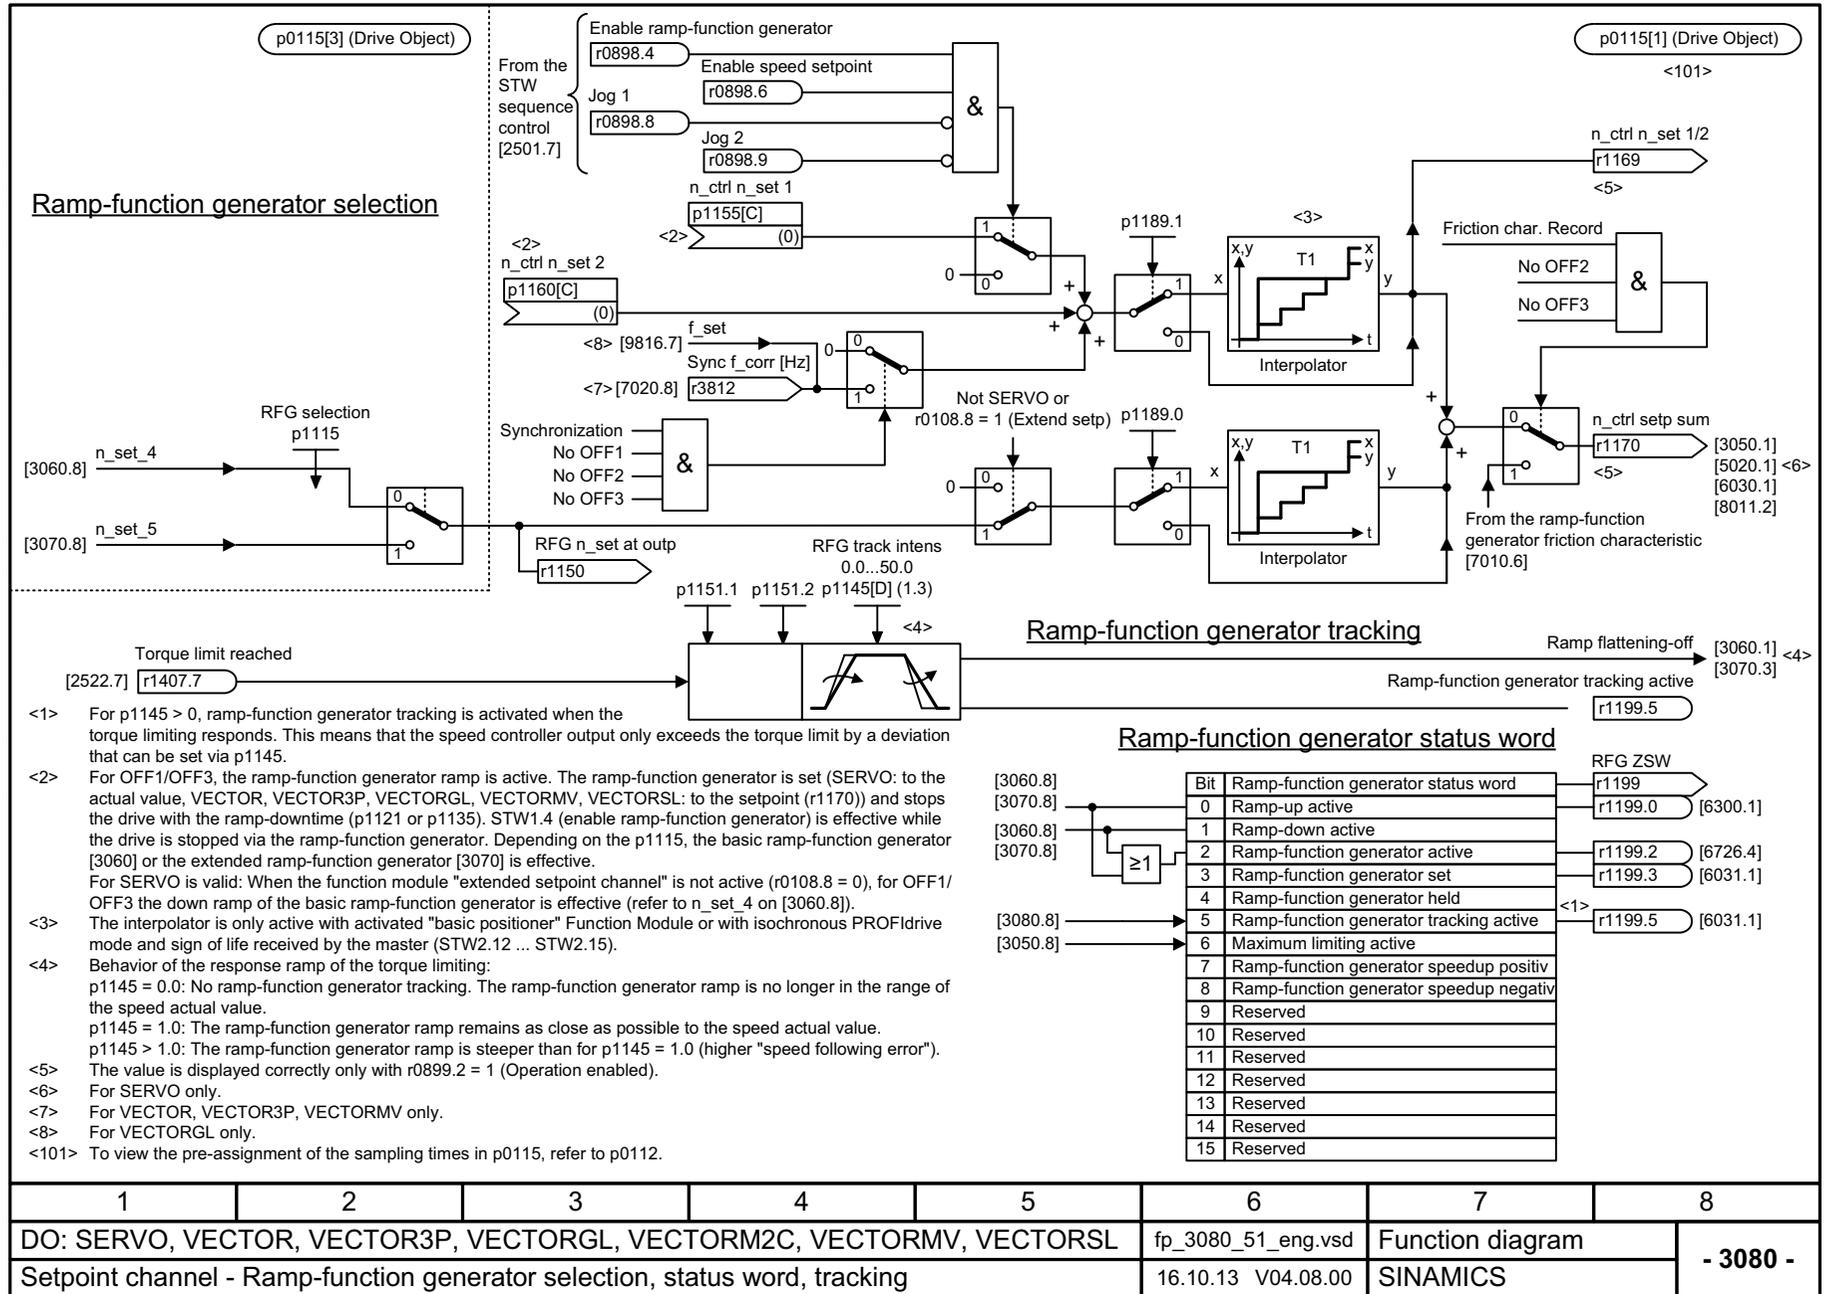

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_3080_51_eng.vsd	Function diagram	
Setpoint channel - Ramp-function generator selection, status word, tracking					16.10.13 V04.08.00	SINAMICS	
							- 3080 -



## 3.15 Encoder evaluation

### Function diagrams

---

4702 – Overview	1237
4704 – Raw signal sensing	1238
4715 – Actual speed value and pole position sensing, encoder 1, n_act_filter 5	1239


---

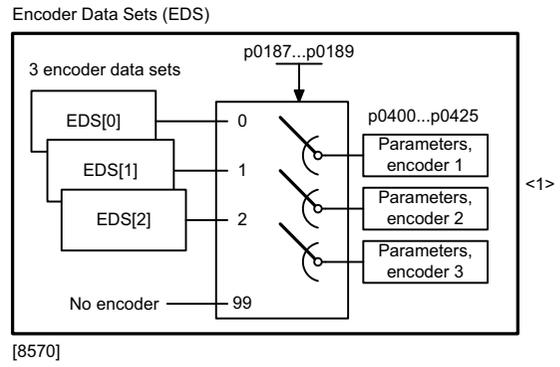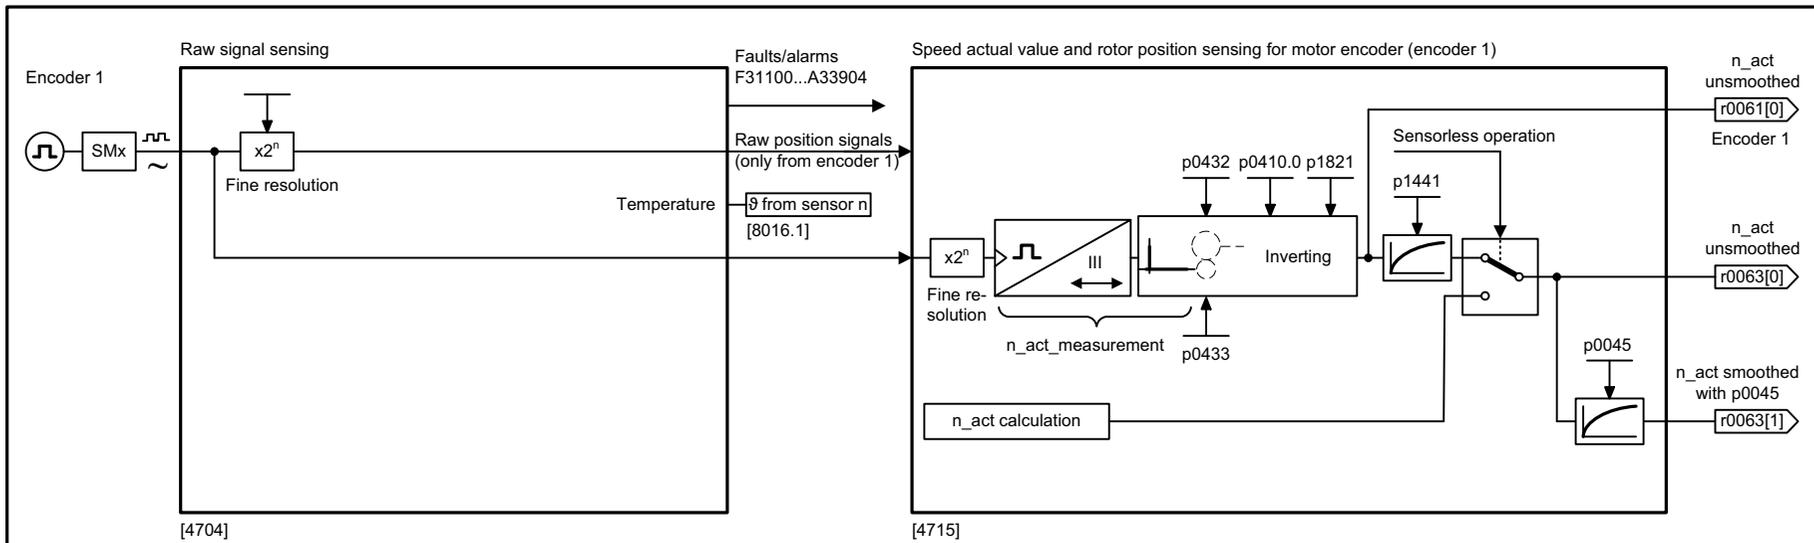

<1> Only 1 encoder for G130/G150.

1	2	3	4	5	6	7	8
DO: VECTOR					fp_4702_56_eng.vsd	Function diagram	
Encoder evaluation - Overview					24.05.13 V04.08.00	SINAMICS G130/G150	
							- 4702 -


Fig. 3-122 4702 – Overview

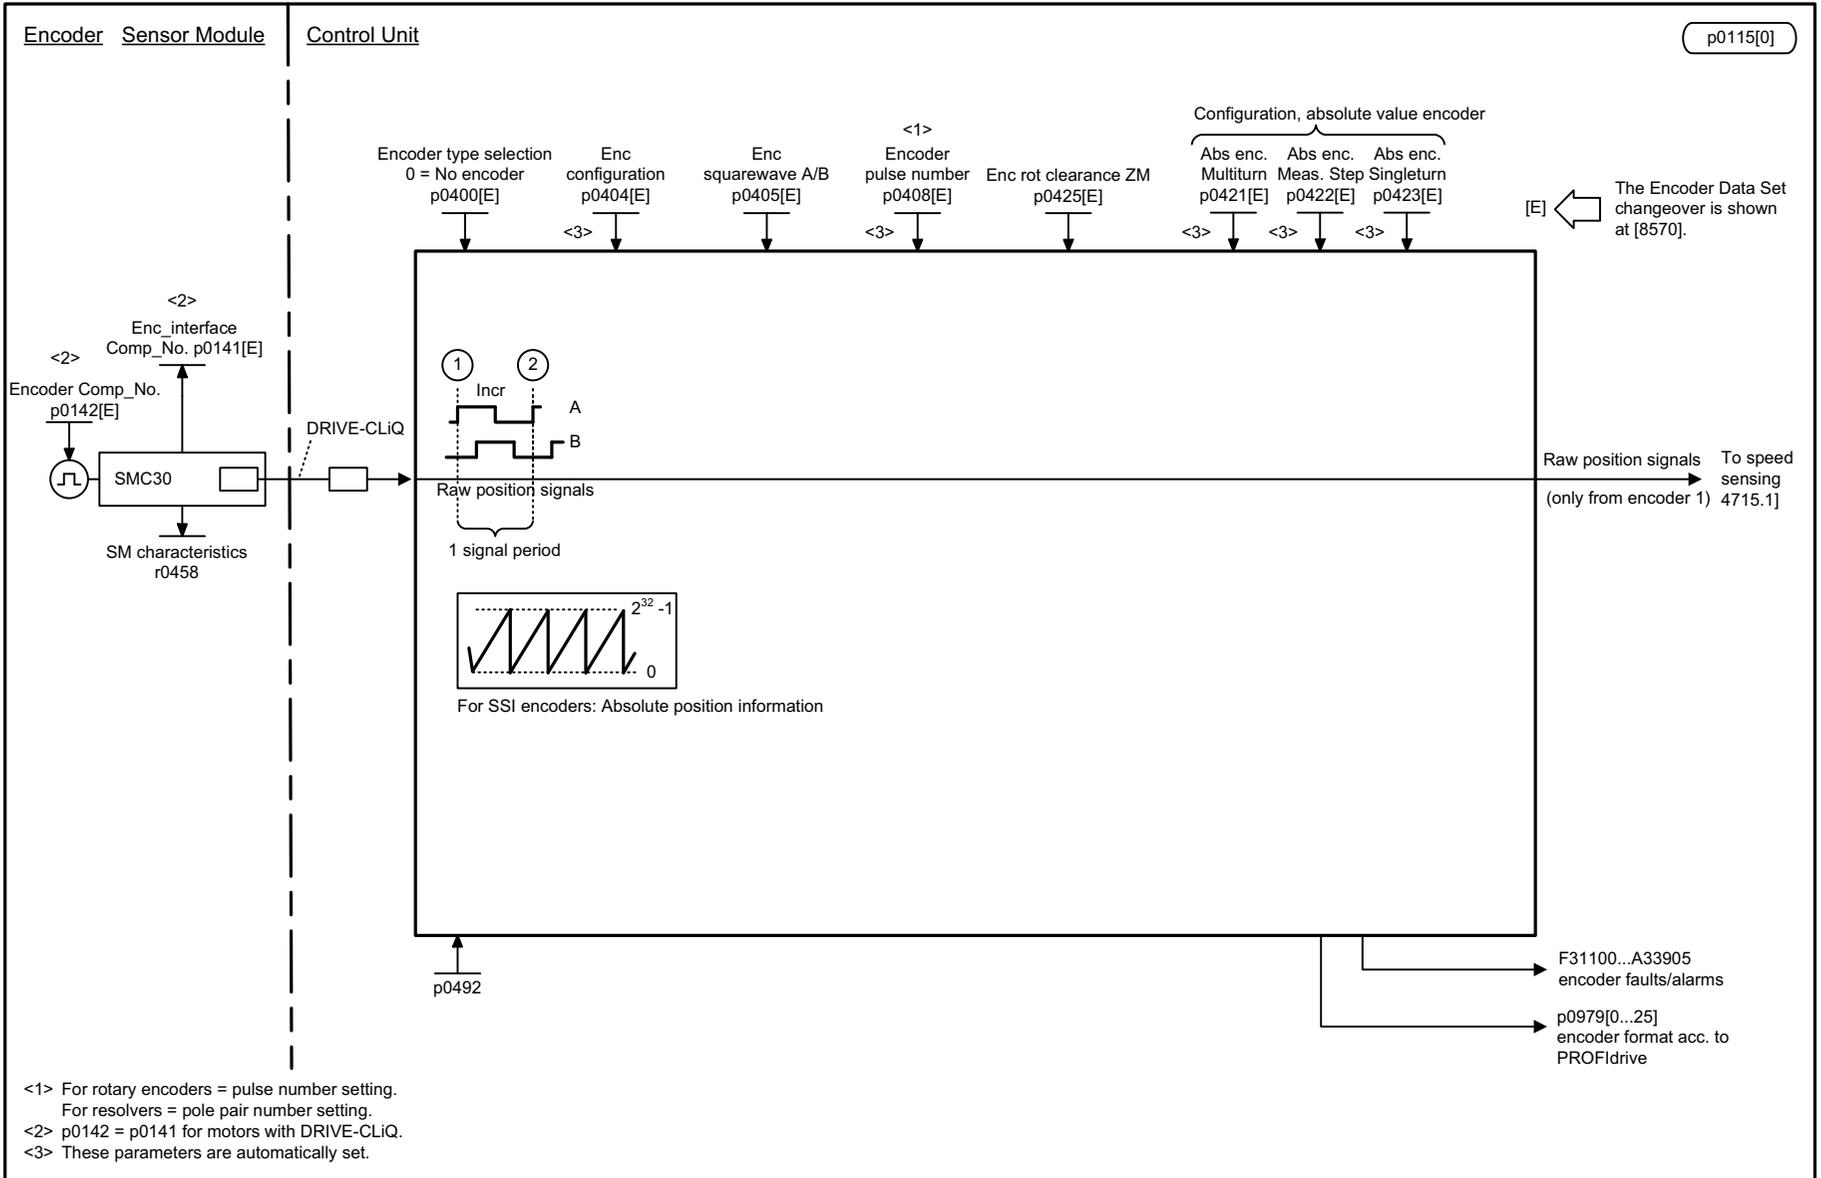

1	2	3	4	5	6	7	8
DO: VECTOR					fp_4704_56_eng.vsd	Function diagram	
Encoder evaluation - Raw signal sensing					17.07.13 V04.08.00	SINAMICS G130/G150	

Fig. 3-123 4704 – Raw signal sensing

Fig. 3-124 4715 – Actual speed value and pole position sensing, encoder 1, n\_act\_filt 5

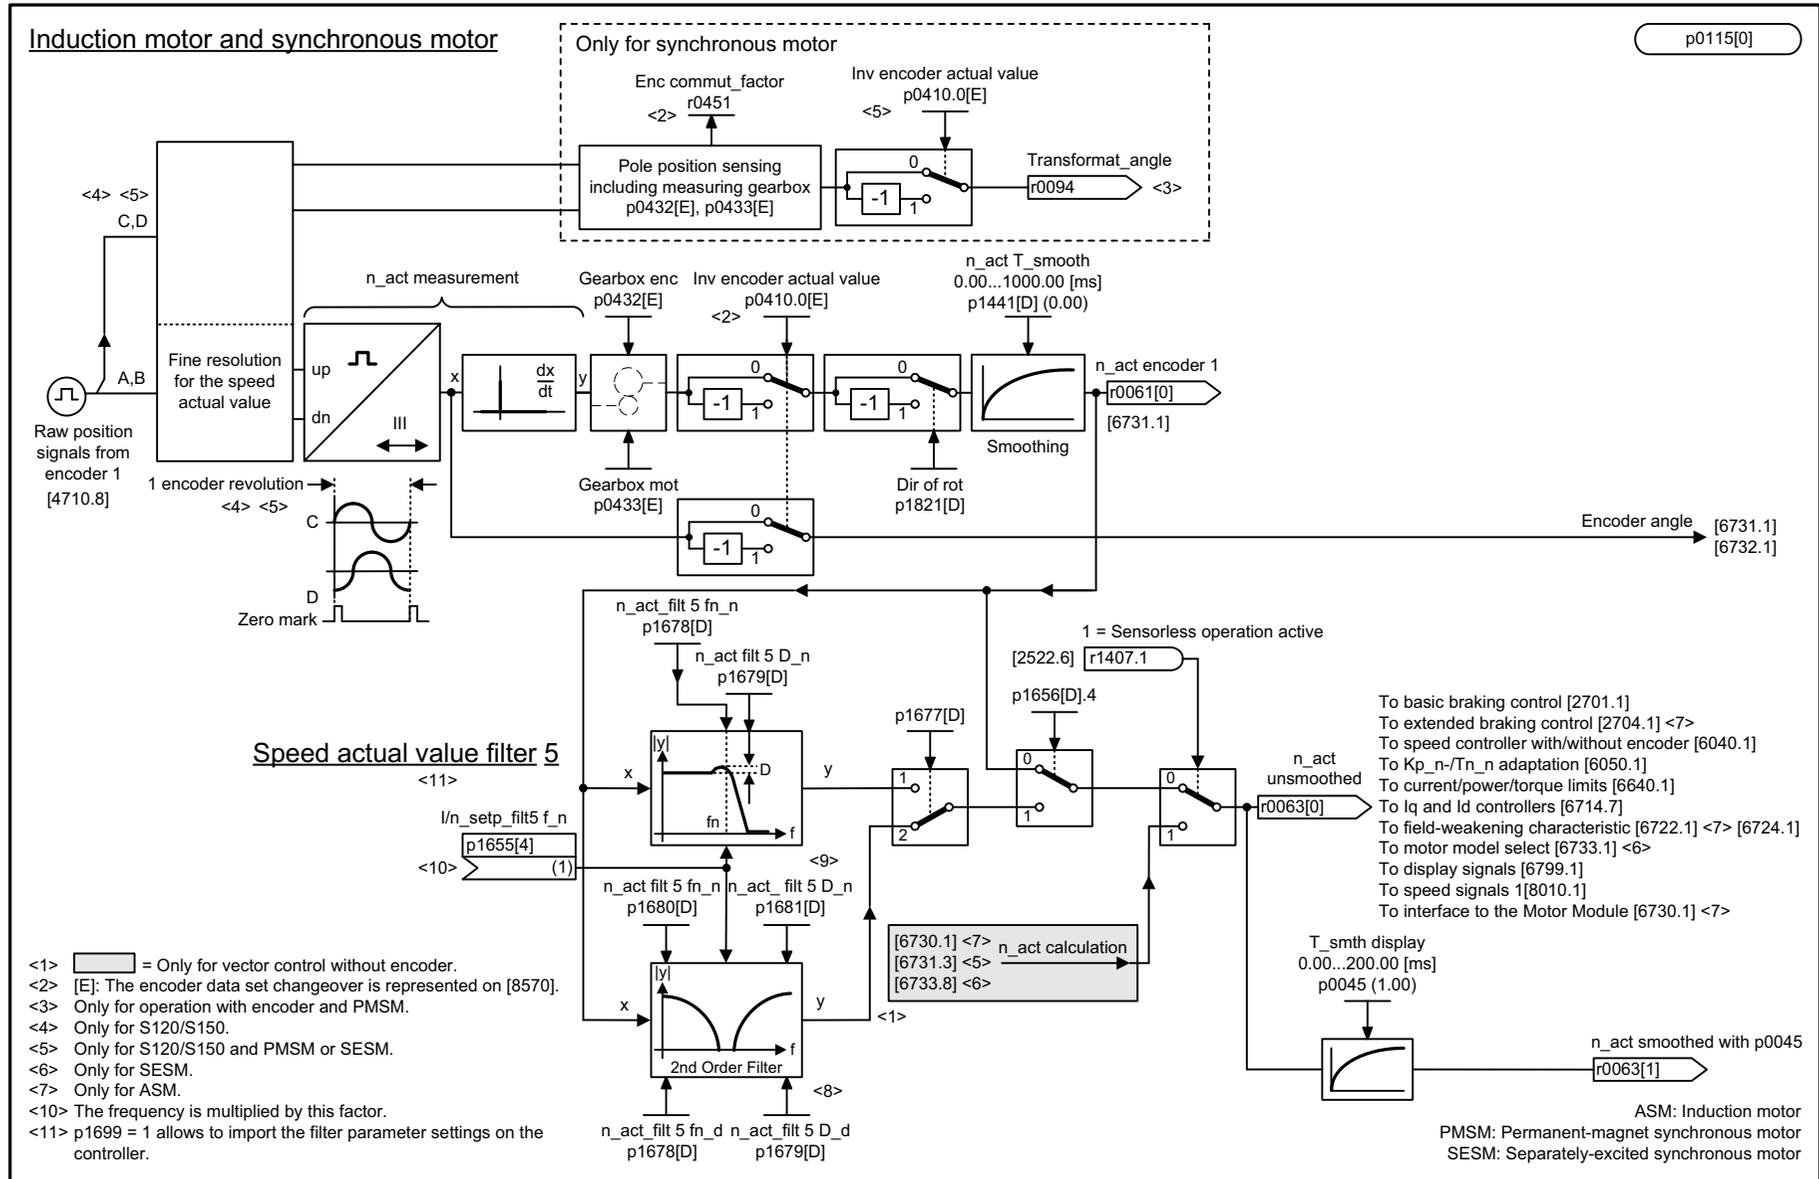

- <1> [ ] = Only for vector control without encoder.
- <2> [E]: The encoder data set changeover is represented on [8570].
- <3> Only for operation with encoder and PMSM.
- <4> Only for S120/S150.
- <5> Only for S120/S150 and PMSM or SESM.
- <6> Only for SESM.
- <7> Only for ASM.
- <10> The frequency is multiplied by this factor.
- <11> p1699 = 1 allows to import the filter parameter settings on the controller.

1	2	3	4	5	6	7	8
DO: VECTOR					fp_4715_54_eng.vsd	Function diagram	
Encoder evaluation - Speed actual value and pole position sensing, encoder 1, n_act_filt 5					12.03.14 V04.08.00	S120/S150/G130/G150	
							- 4715 -

## 3.16 Vector control

### Function diagrams

6020 – Speed control and generation of the torque limits, overview	1242
6030 – Speed setpoint, droop	1243
6031 – Pre-control balancing, reference/acceleration model	1244
6035 – Moment of inertia estimator (r0108.10 = 1)	1245
6040 – Speed controller with/without encoder	1246
6050 – Speed controller adaptation (Kp_n/Tn_n adaptation)	1247
6060 – Torque setpoint	1248
6220 – Vdc_max controller and Vdc_min controller	1249
6300 – U/f control, overview	1250
6301 – U/f characteristic and voltage boost	1251
6310 – Resonance damping and slip compensation	1252
6320 – Vdc_max controller and Vdc_min controller (U/f)	1253
6490 – Speed control configuration	1254
6491 – Flux control configuration	1255
6630 – Upper/lower torque limit	1256
6640 – Current/power/torque limits	1257
6700 – Current control, overview	1258
6710 – Current setpoint filter	1259
6714 – Iq and Id controllers	1260
6721 – Id setpoint (PEM, p0300 = 2)	1261
6722 – Field weakening characteristic, Id setpoint (ASM, p0300 = 1)	1262
6723 – Field weakening controller, flux controller (ASM, p0300 = 1)	1263
6724 – Field weakening controller (PEM, p0300 = 2)	1264
6730 – Interface to the Motor Module (ASM, p0300 = 1)	1265
6731 – Interface to the Motor Module (PEM, p0300 = 2)	1266
6790 – Flux setpoint (RESM, p0300 = 6)	1267
6791 – Id setpoint (RESM, p0300 = 6)	1268

---

6792 – Interface to the Motor Module (RESM, p0300 = 6)	1269
6799 – Display signals	1270

---

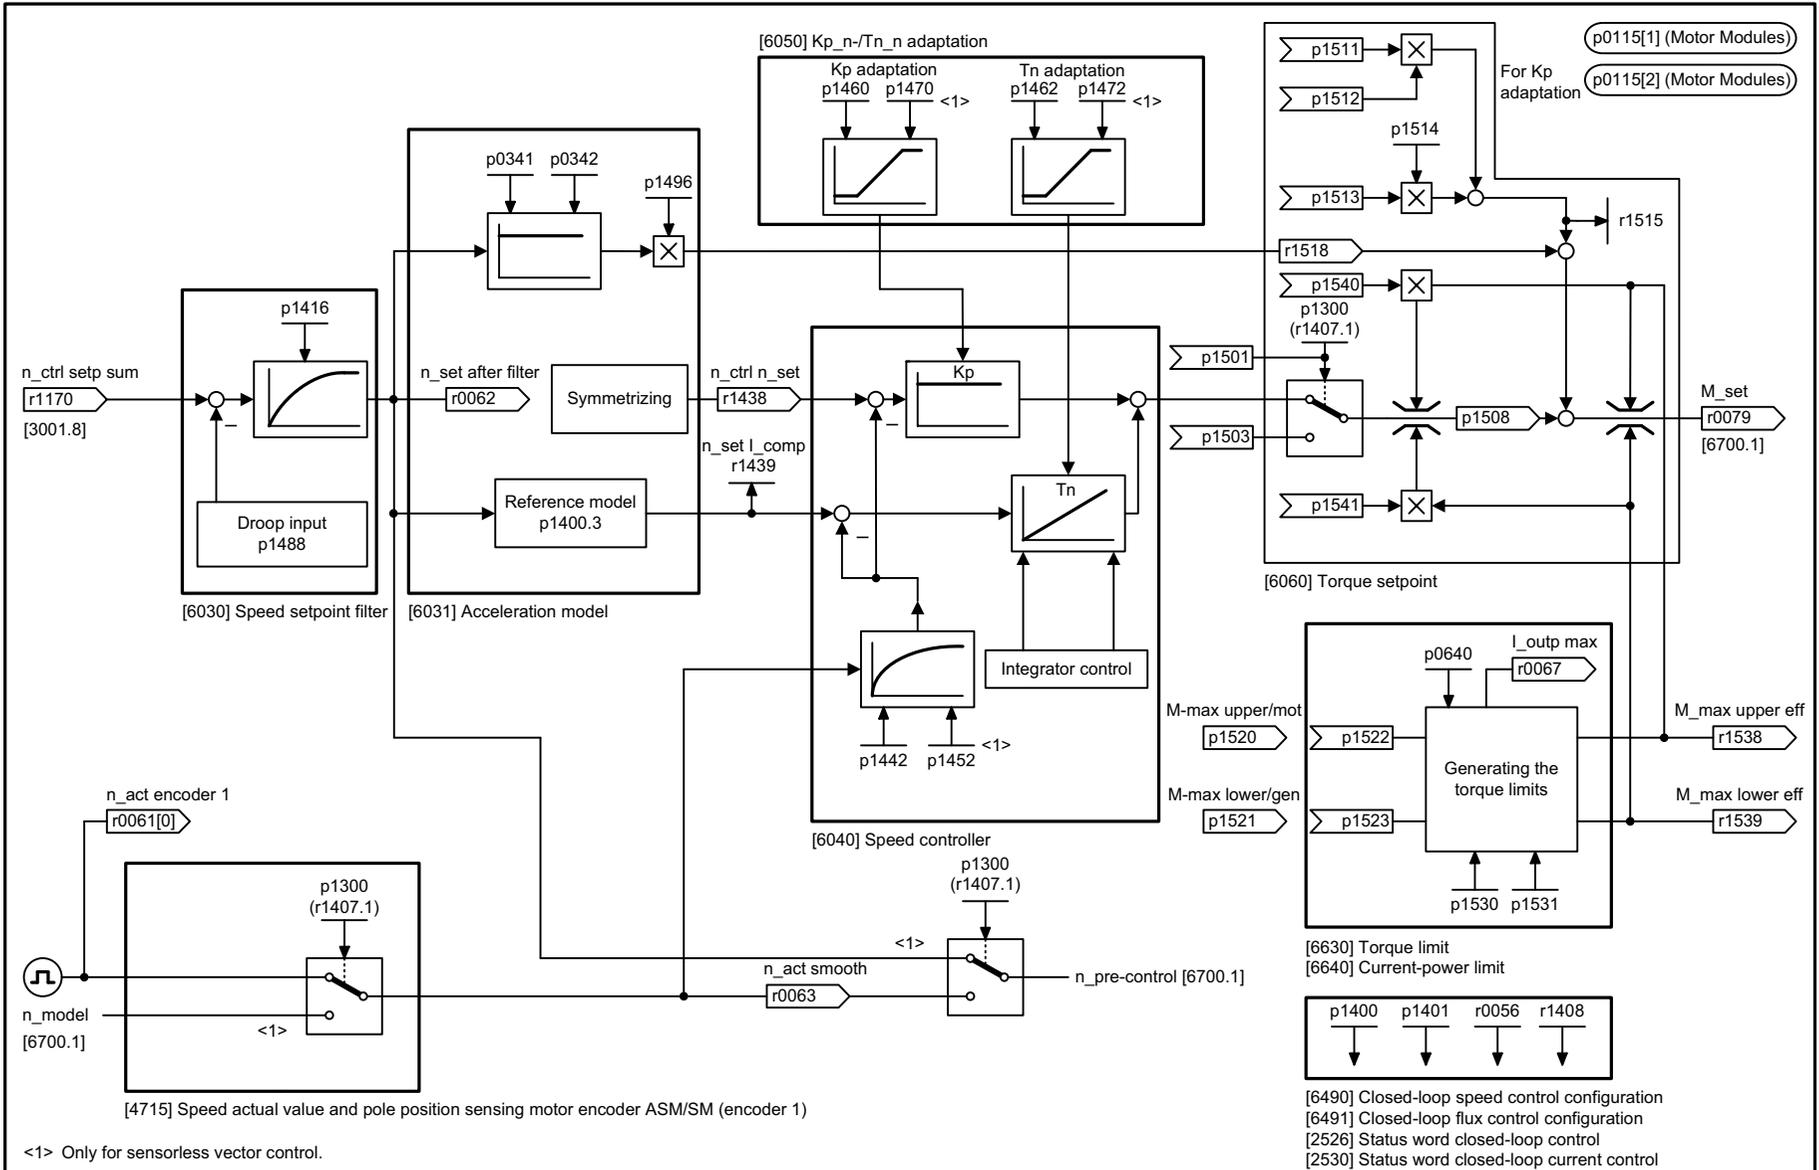


Fig. 3-125 6020 – Speed control and generation of the torque limits, overview

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6020_54_eng.vsd	Function diagram	
Vector control - Speed control and generation of the torque limits, overview					11.04.14 V04.08.00	S120/S150/G130/G150	
							<b>- 6020 -</b>




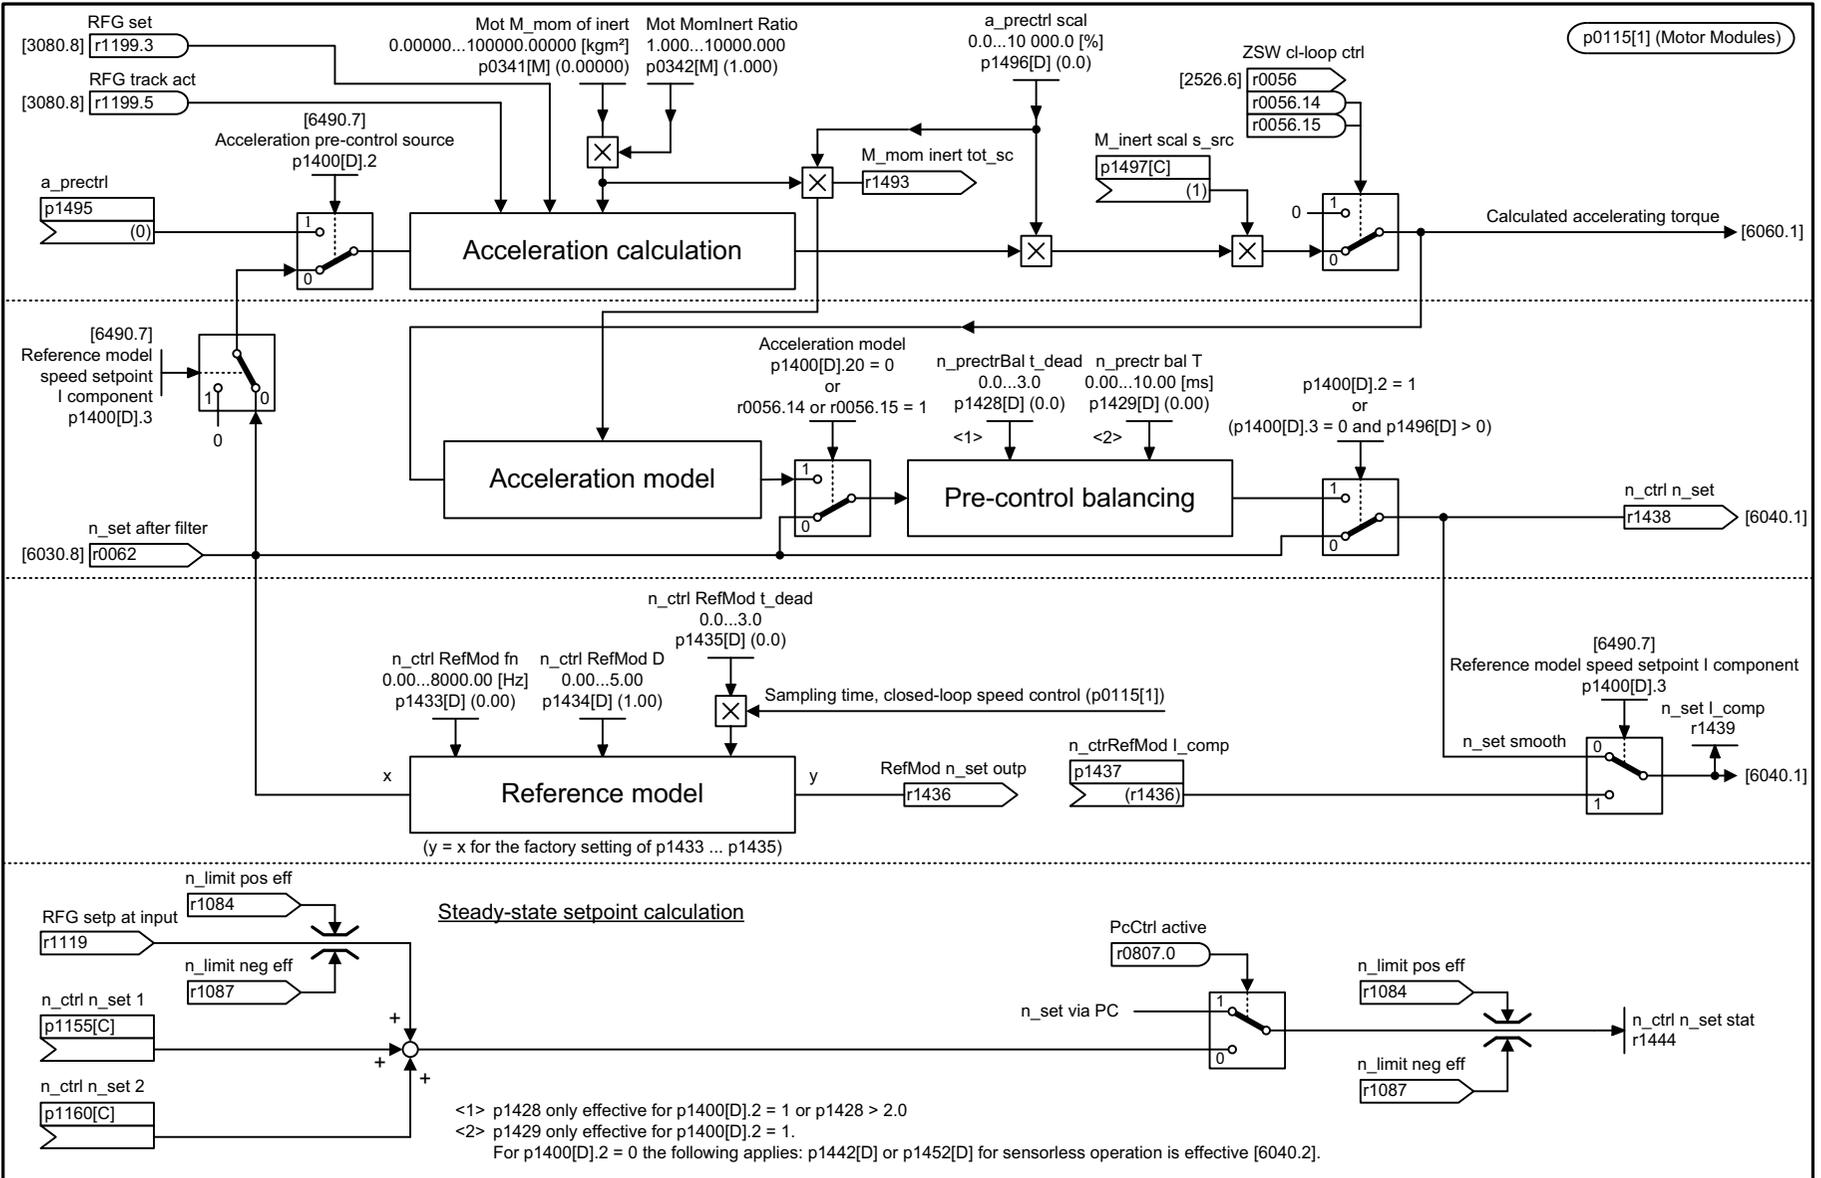


Fig. 3-127 6031 – Pre-control balancing, reference/acceleration model


1	2	3	4	5	6	7	8
DO: VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_6031_51_eng.vsd	Function diagram	
Vector control - Pre-control balancing, reference/acceleration model					07.01.15 V04.08.00	SINAMICS	
							<b>- 6031 -</b>

Fig. 3-128 6035 – Moment of inertia estimator (r0108.10 = 1)

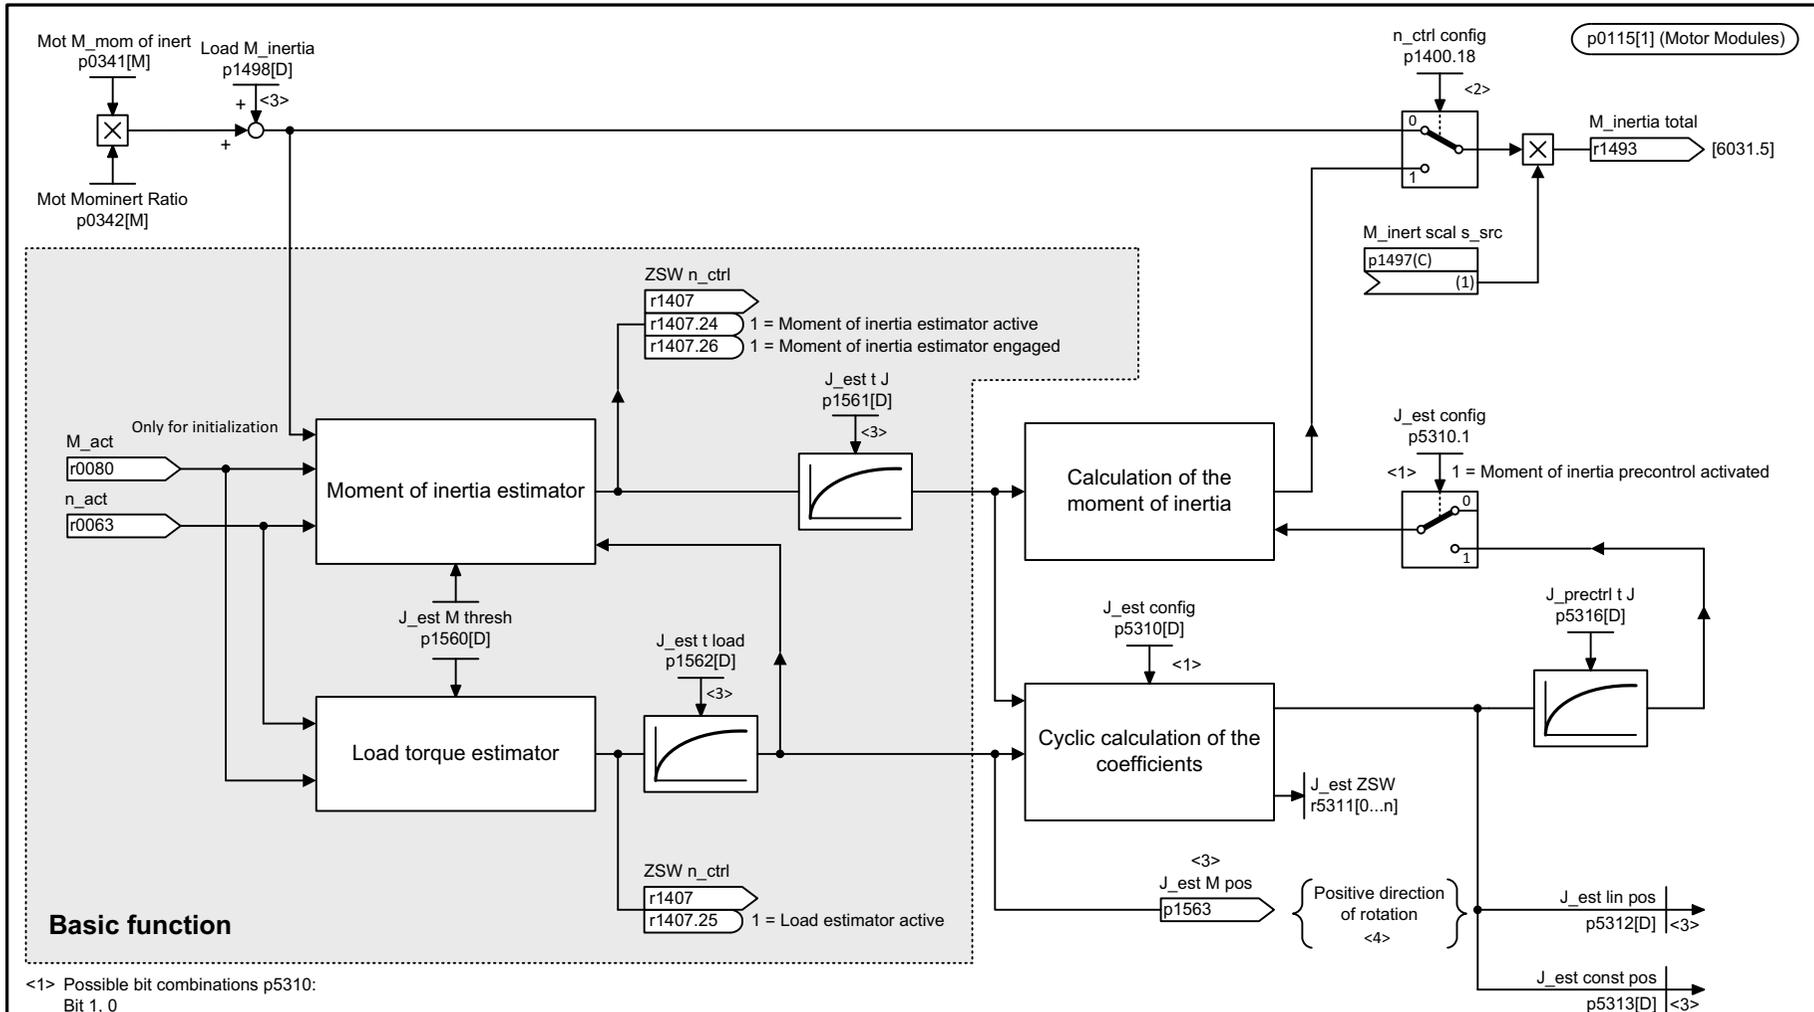

- <1> Possible bit combinations p5310:  
Bit 1, 0  
= 0, 0 → Function inactive  
= 0, 1 → Cyclic calculations of the coefficient without moment of inertia precontrol (commissioning)  
= 1, 0 → Moment of inertia precontrol activated (without cyclic calculation of the coefficients)  
= 1, 1 → Moment of inertia precontrol activated (with cyclic calculation of the coefficients)
- <2> If p1497 is connected to a source not equal to 1, the switch always remains set to 0.
- <3> On p1400.22 = 1 and r1407.26 = 1, the current values are saved in p1498, p1561 ... p1564, p5312 ... p5315 for RAM to ROM.
- <4> p1564, p5314 and p5315 for negative direction of rotation.


1	2	3	4	5	6	7	8
DO: VECTOR					fp_6035_54_eng.vsd	Function diagram	
Vector control - Moment of inertia estimator (r0108.10 = 1)					27.04.16 V04.08.00	S120/S150/G130/G150	
							- 6035 -

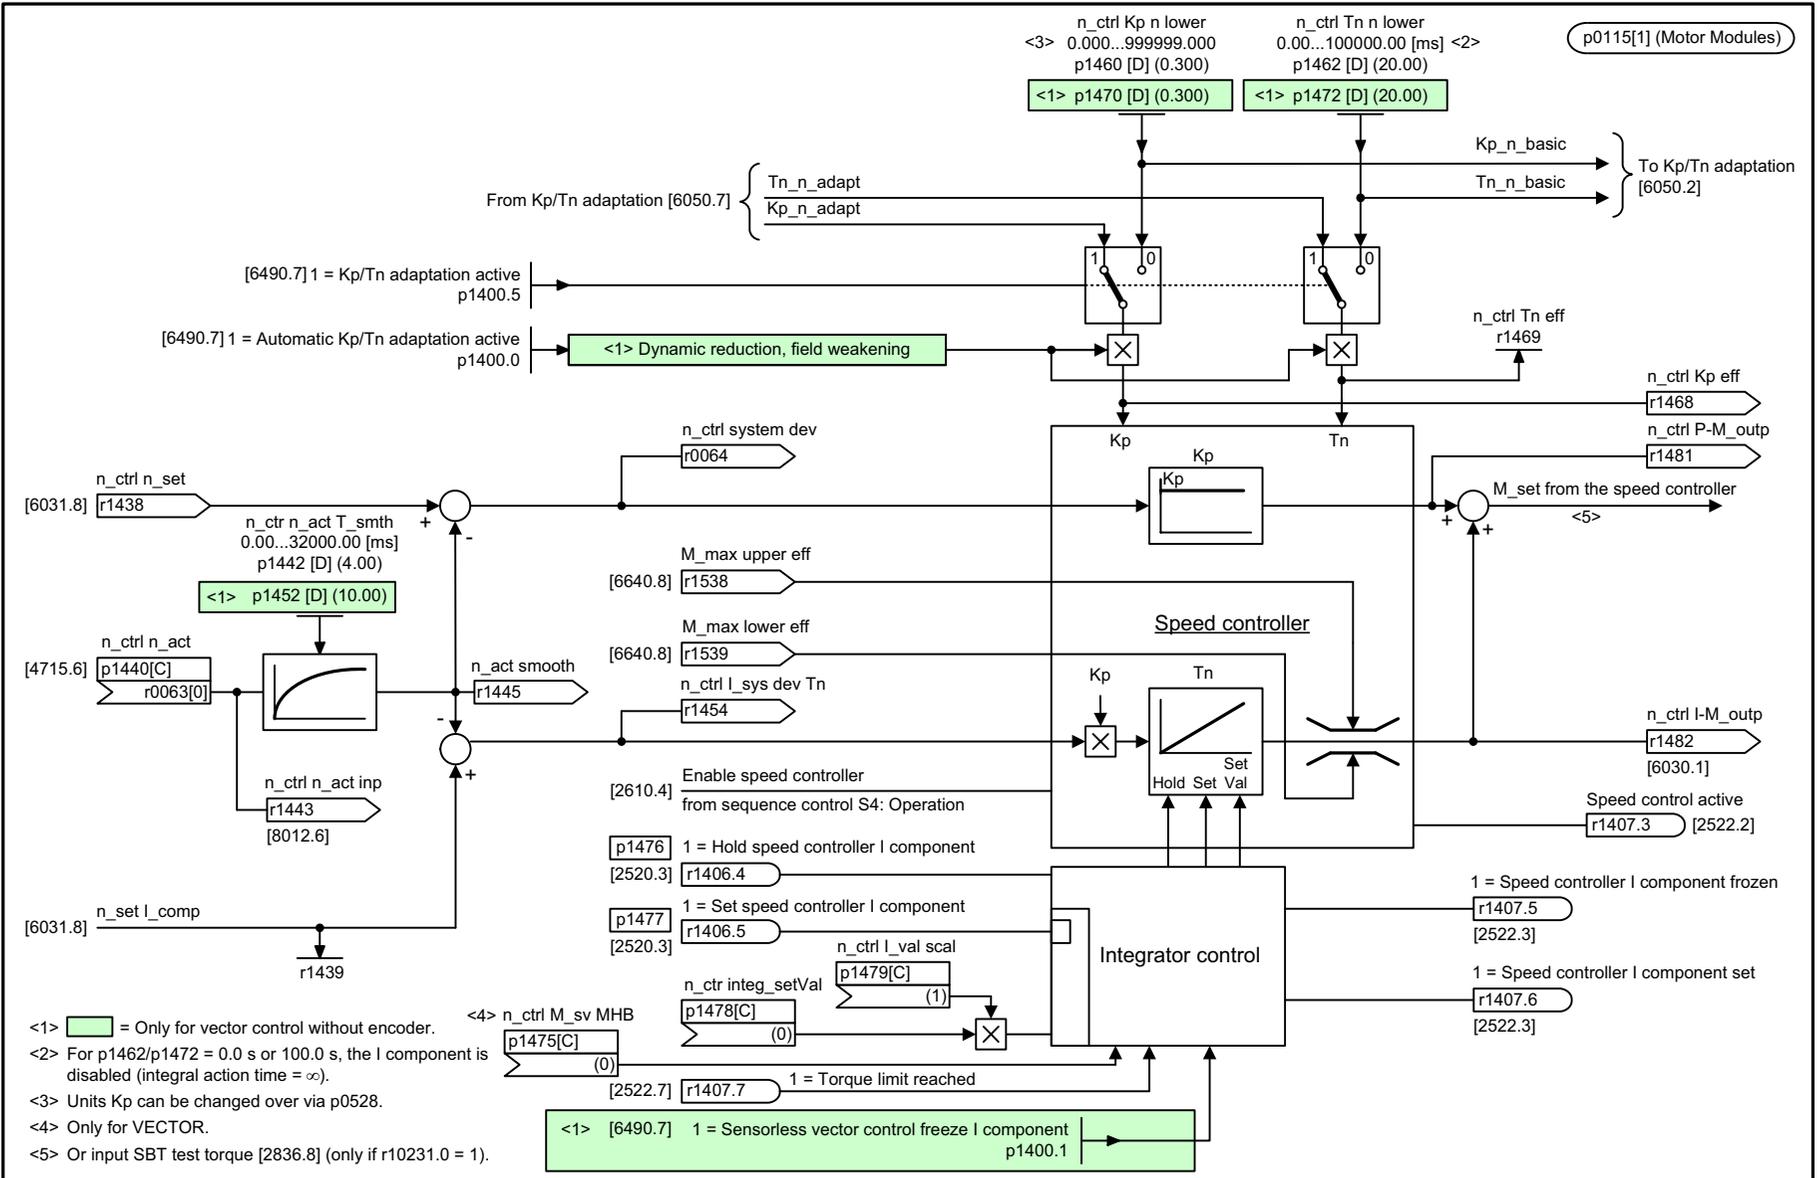

1	2	3	4	5	6	7	8
DO: VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_6040_51_eng.vsd	Function diagram	
Vector control - Speed controller with/without encoder					07.01.15 V04.08.00	SINAMICS	
							<b>- 6040 -</b>

Fig. 3-129 6040 – Speed controller with/without encoder

Fig. 3-130 6050 – Speed controller adaptation (Kp\_n/Tn\_n adaptation)

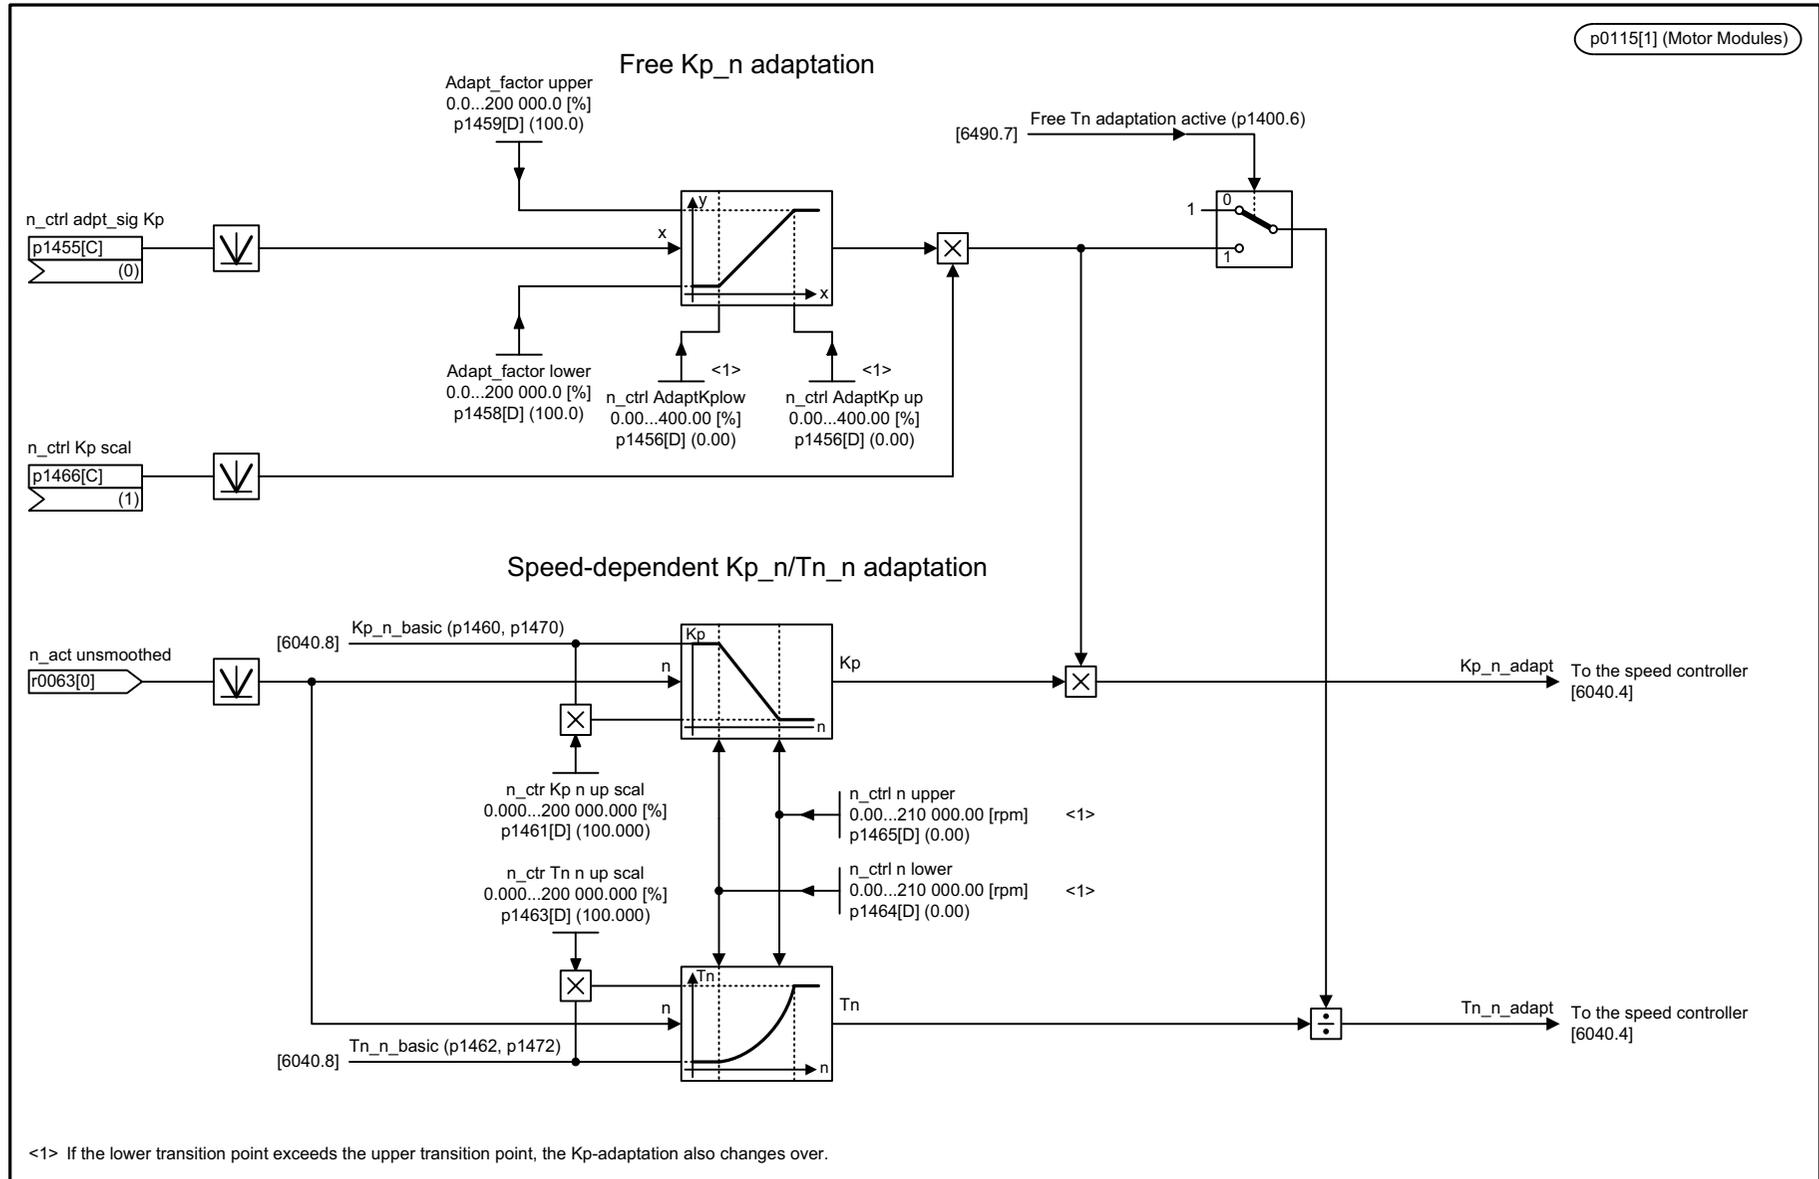

1	2	3	4	5	6	7	8
DO: VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_6050_51_eng.vsd	Function diagram	
Vector control - Speed controller adaptation (Kp_n/Tn_n adaptation)					07.01.15 V04.08.00	SINAMICS	
							<b>- 6050 -</b>


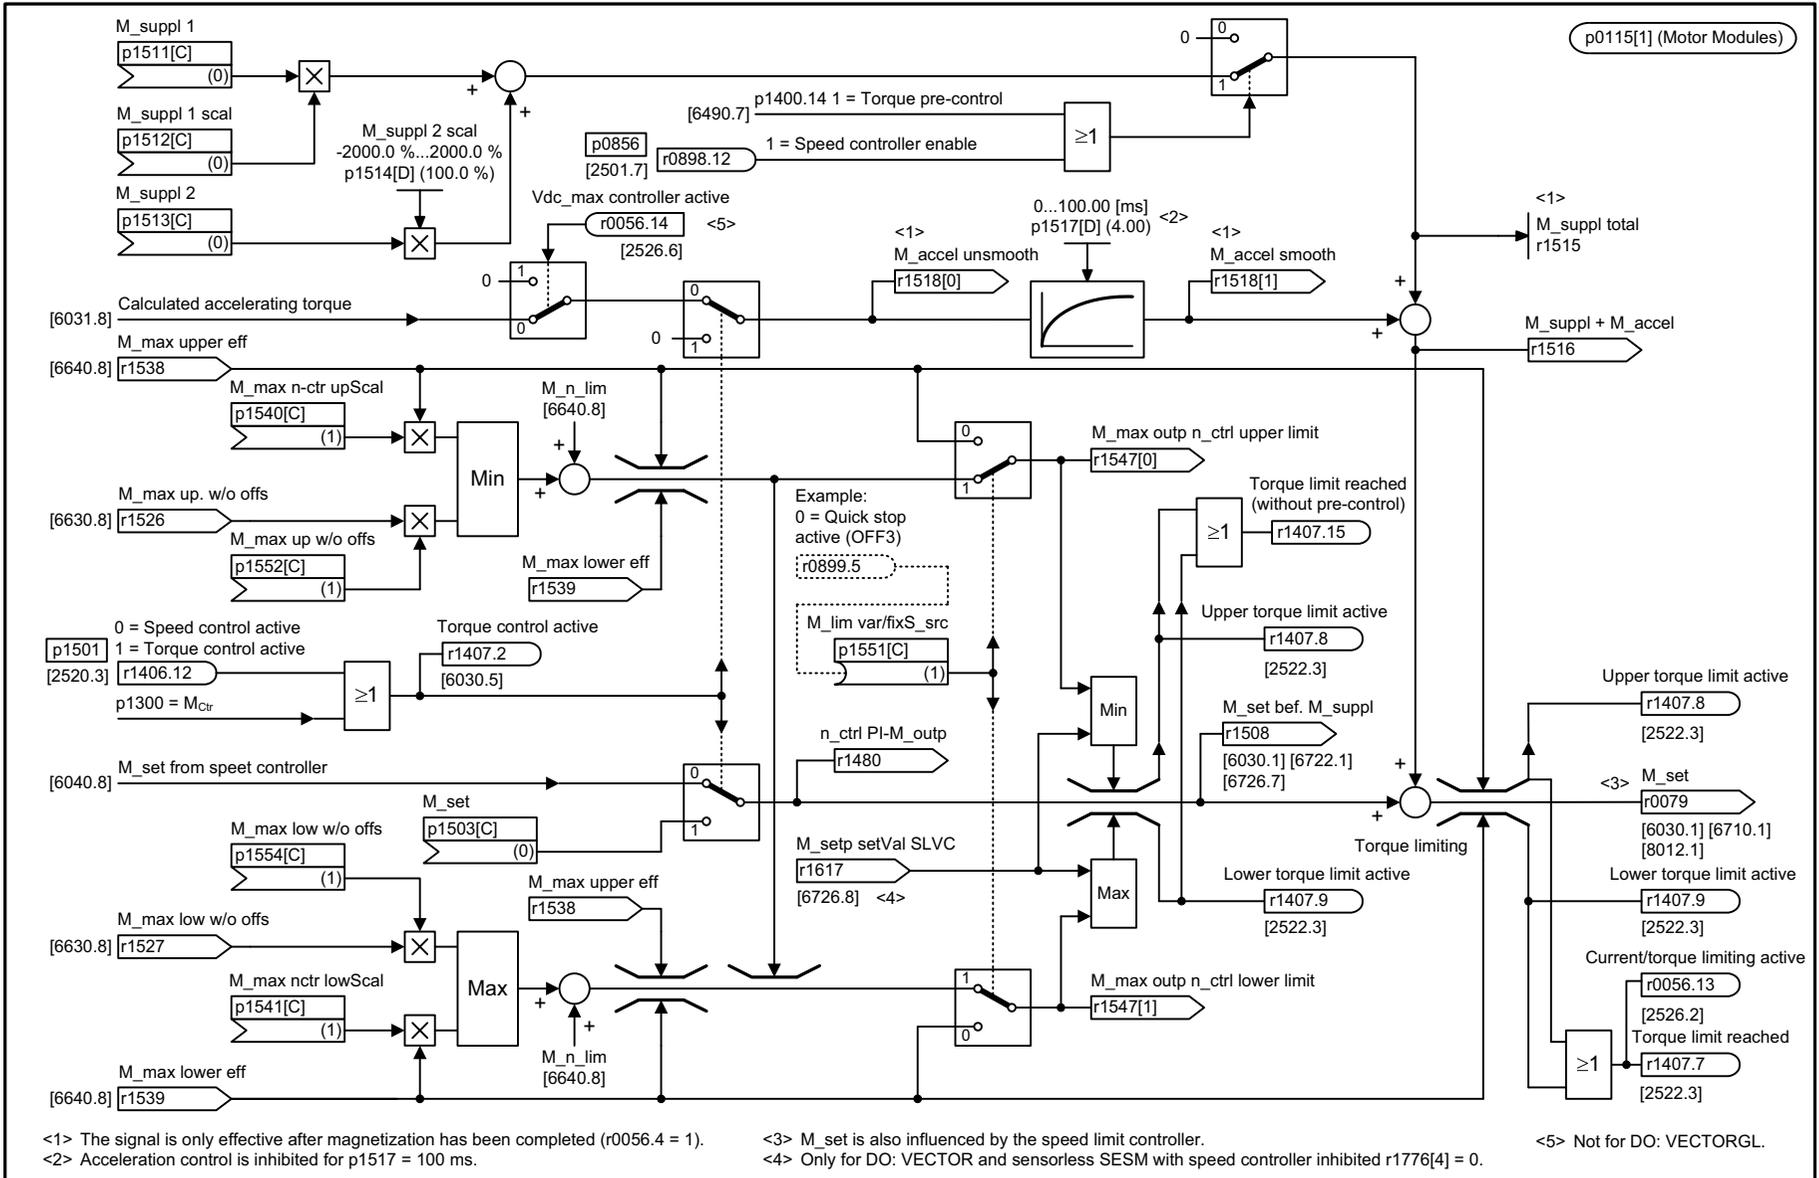


Fig. 3-131 6060 – Torque setpoint

1	2	3	4	5	6	7	8
DO: VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_6060_51_eng.vsd	Function diagram	
Vector control - Torque setpoint					07.01.15 V04.08.00	SINAMICS	
							<b>- 6060 -</b>

Fig. 3-132 6220 – Vdc\_max controller and Vdc\_min controller

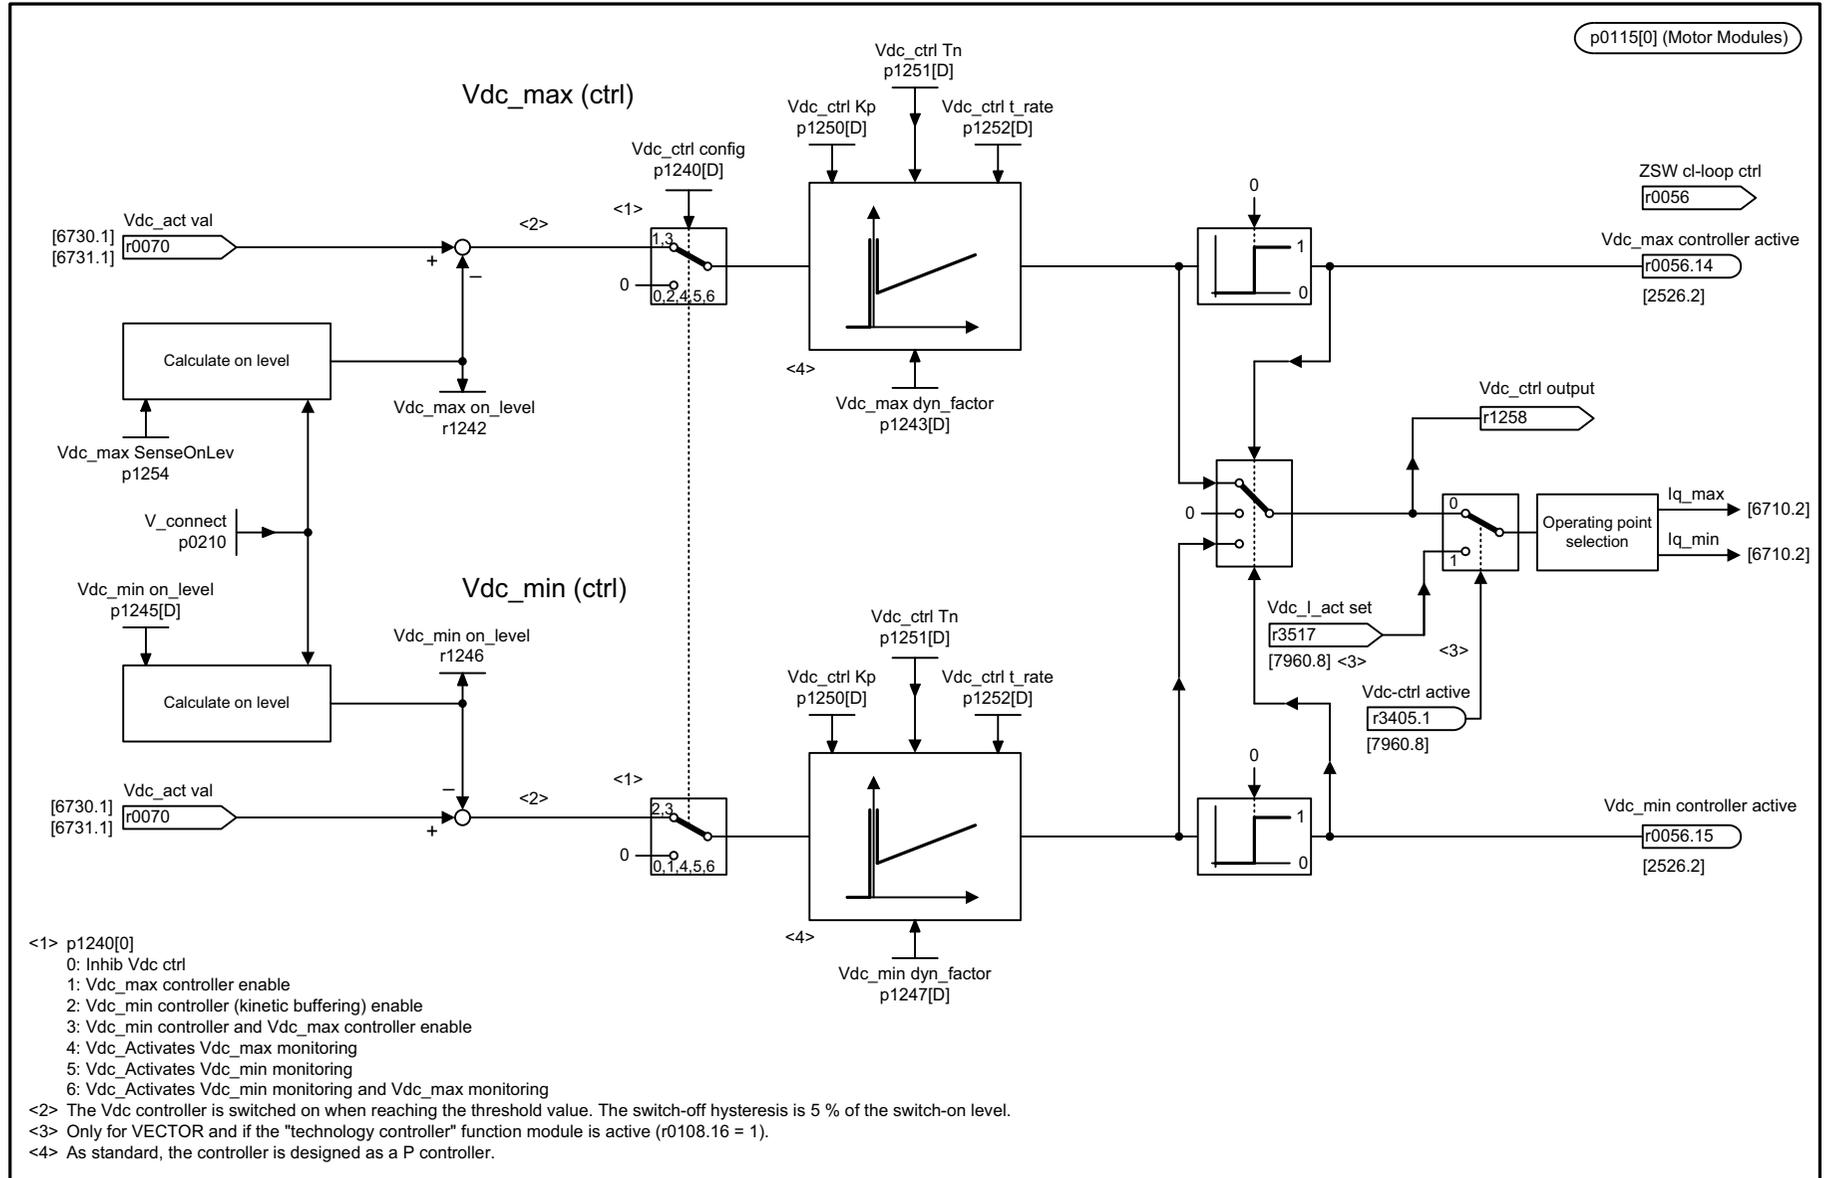


- <1> p1240[0]
- 0: Inhib Vdc ctrl
- 1: Vdc\_max controller enable
- 2: Vdc\_min controller (kinetic buffering) enable
- 3: Vdc\_min controller and Vdc\_max controller enable
- 4: Vdc\_Activates Vdc\_max monitoring
- 5: Vdc\_Activates Vdc\_min monitoring
- 6: Vdc\_Activates Vdc\_min monitoring and Vdc\_max monitoring
- <2> The Vdc controller is switched on when reaching the threshold value. The switch-off hysteresis is 5 % of the switch-on level.
- <3> Only for VECTOR and if the "technology controller" function module is active (r0108.16 = 1).
- <4> As standard, the controller is designed as a P controller.

1	2	3	4	5	6	7	8
DO: VECTOR, VECTOR3P, VECTORM2C, VECTORMV					fp_6220_51_eng.vsd	Function diagram	
Vector control - Vdc_max controller and Vdc_min controller					05.04.16 V04.08.00	SINAMICS	
							- 6220 -




Fig. 3-134 6301 – U/f characteristic and voltage boost

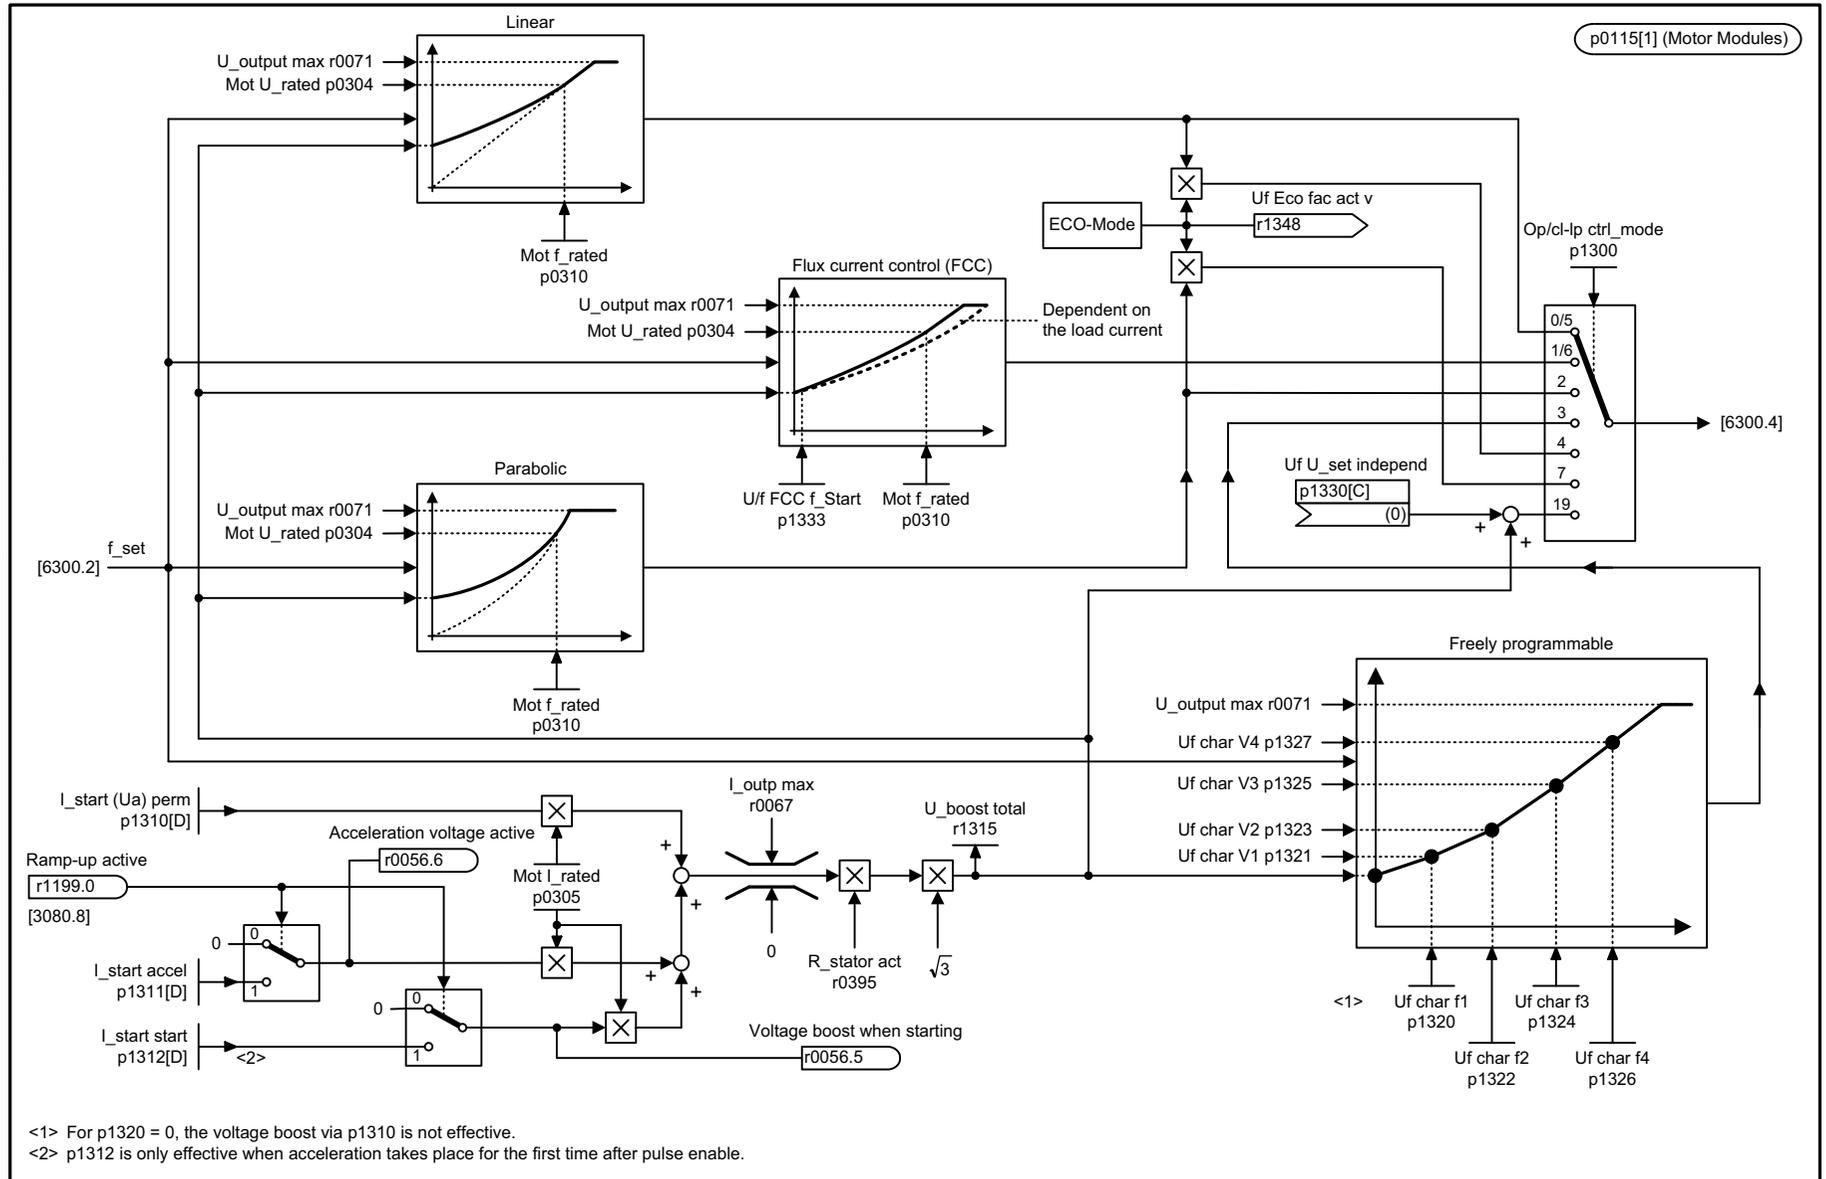

<1> For p1320 = 0, the voltage boost via p1310 is not effective.  
<2> p1312 is only effective when acceleration takes place for the first time after pulse enable.

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6301_54_eng.vsd	Function diagram	
Vector control - U/f characteristic and voltage boost					02.05.16 V04.08.00	S120/S150/G130/G150	
							- 6301 -

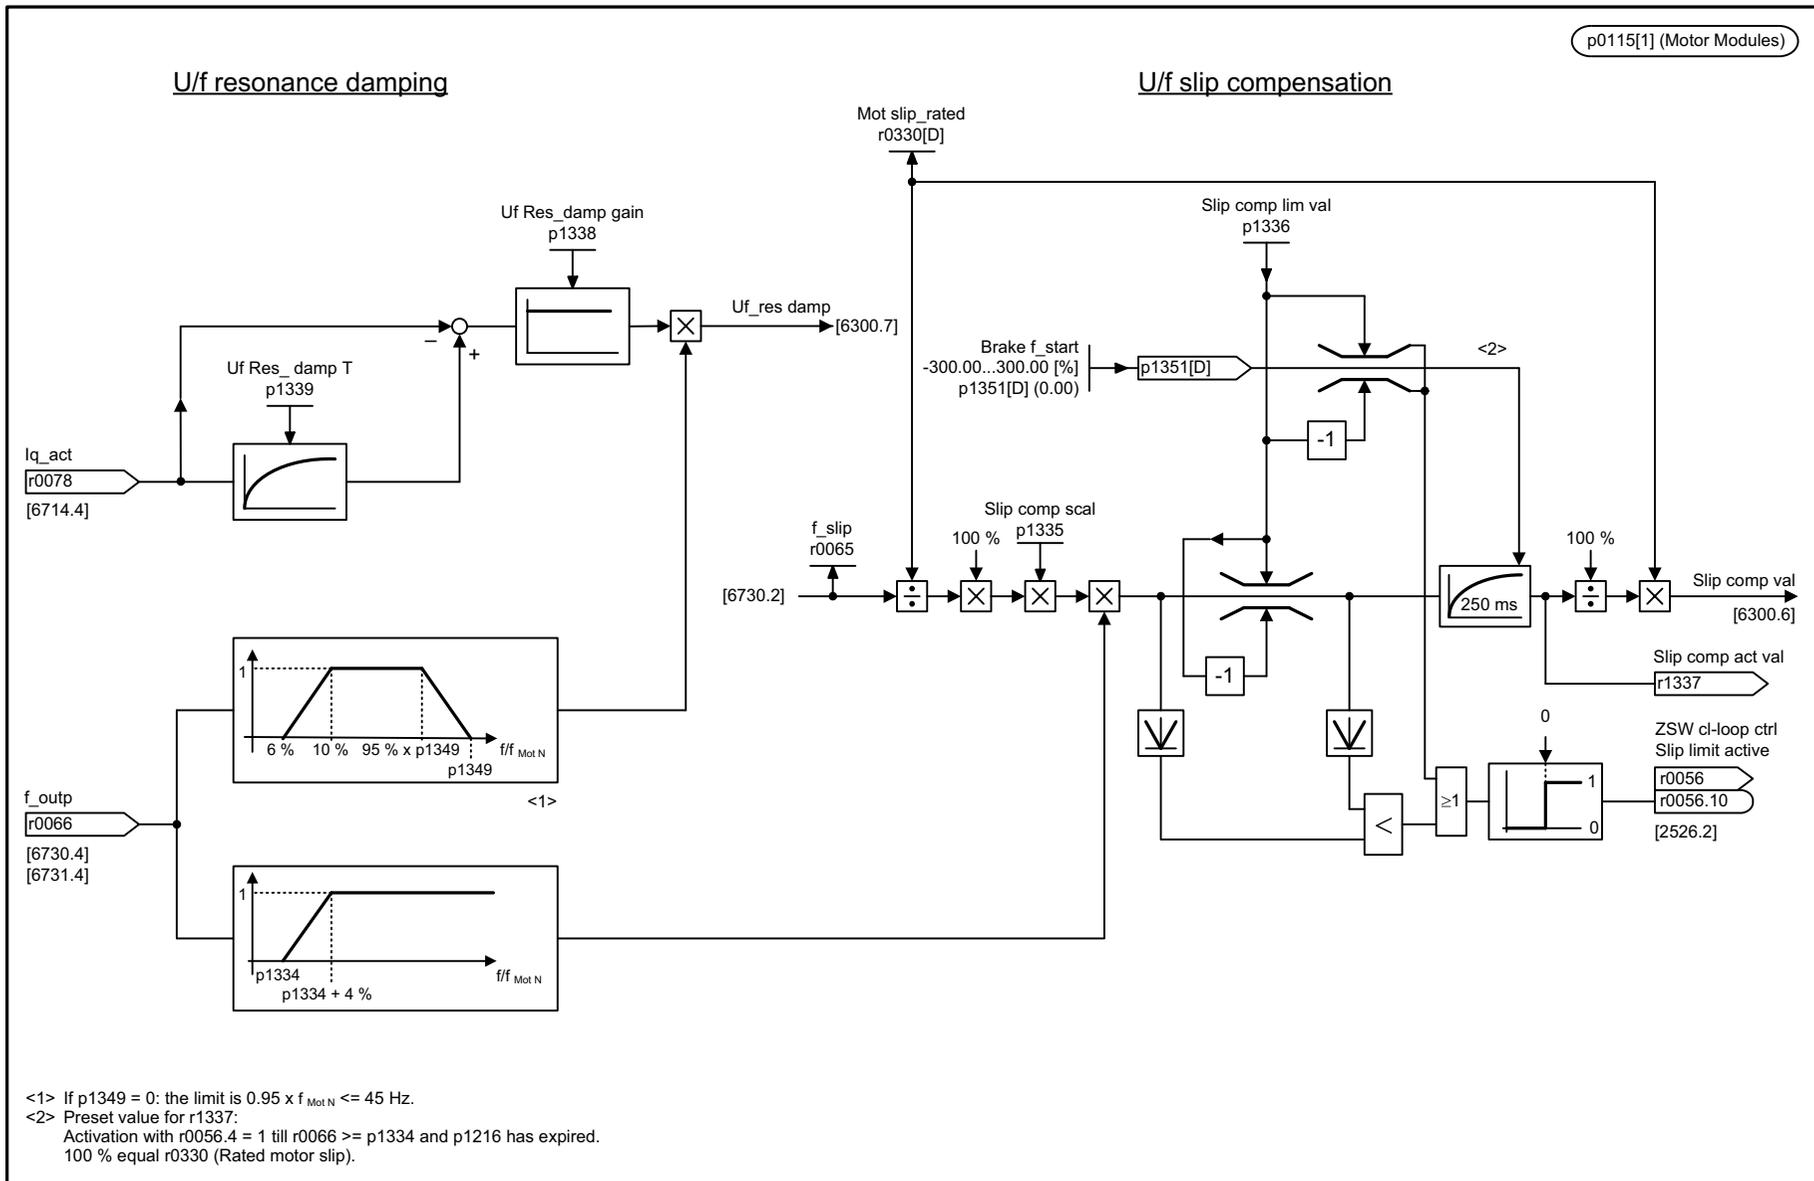


<1> If p1349 = 0: the limit is  $0.95 \times f_{MotN} \leq 45$  Hz.  
 <2> Preset value for r1337:  
 Activation with r0056.4 = 1 till r0066  $\geq$  p1334 and p1216 has expired.  
 100 % equal r0330 (Rated motor slip).

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6310_54_eng.vsd	Function diagram	
Vector control - Resonance damping and slip compensation					02.12.13 V04.08.00	S120/S150/G130/G150	
							<b>- 6310 -</b>

Fig. 3-135 6310 – Resonance damping and slip compensation

Fig. 3-136 6320 – Vdc\_max controller and Vdc\_min controller (U/f)

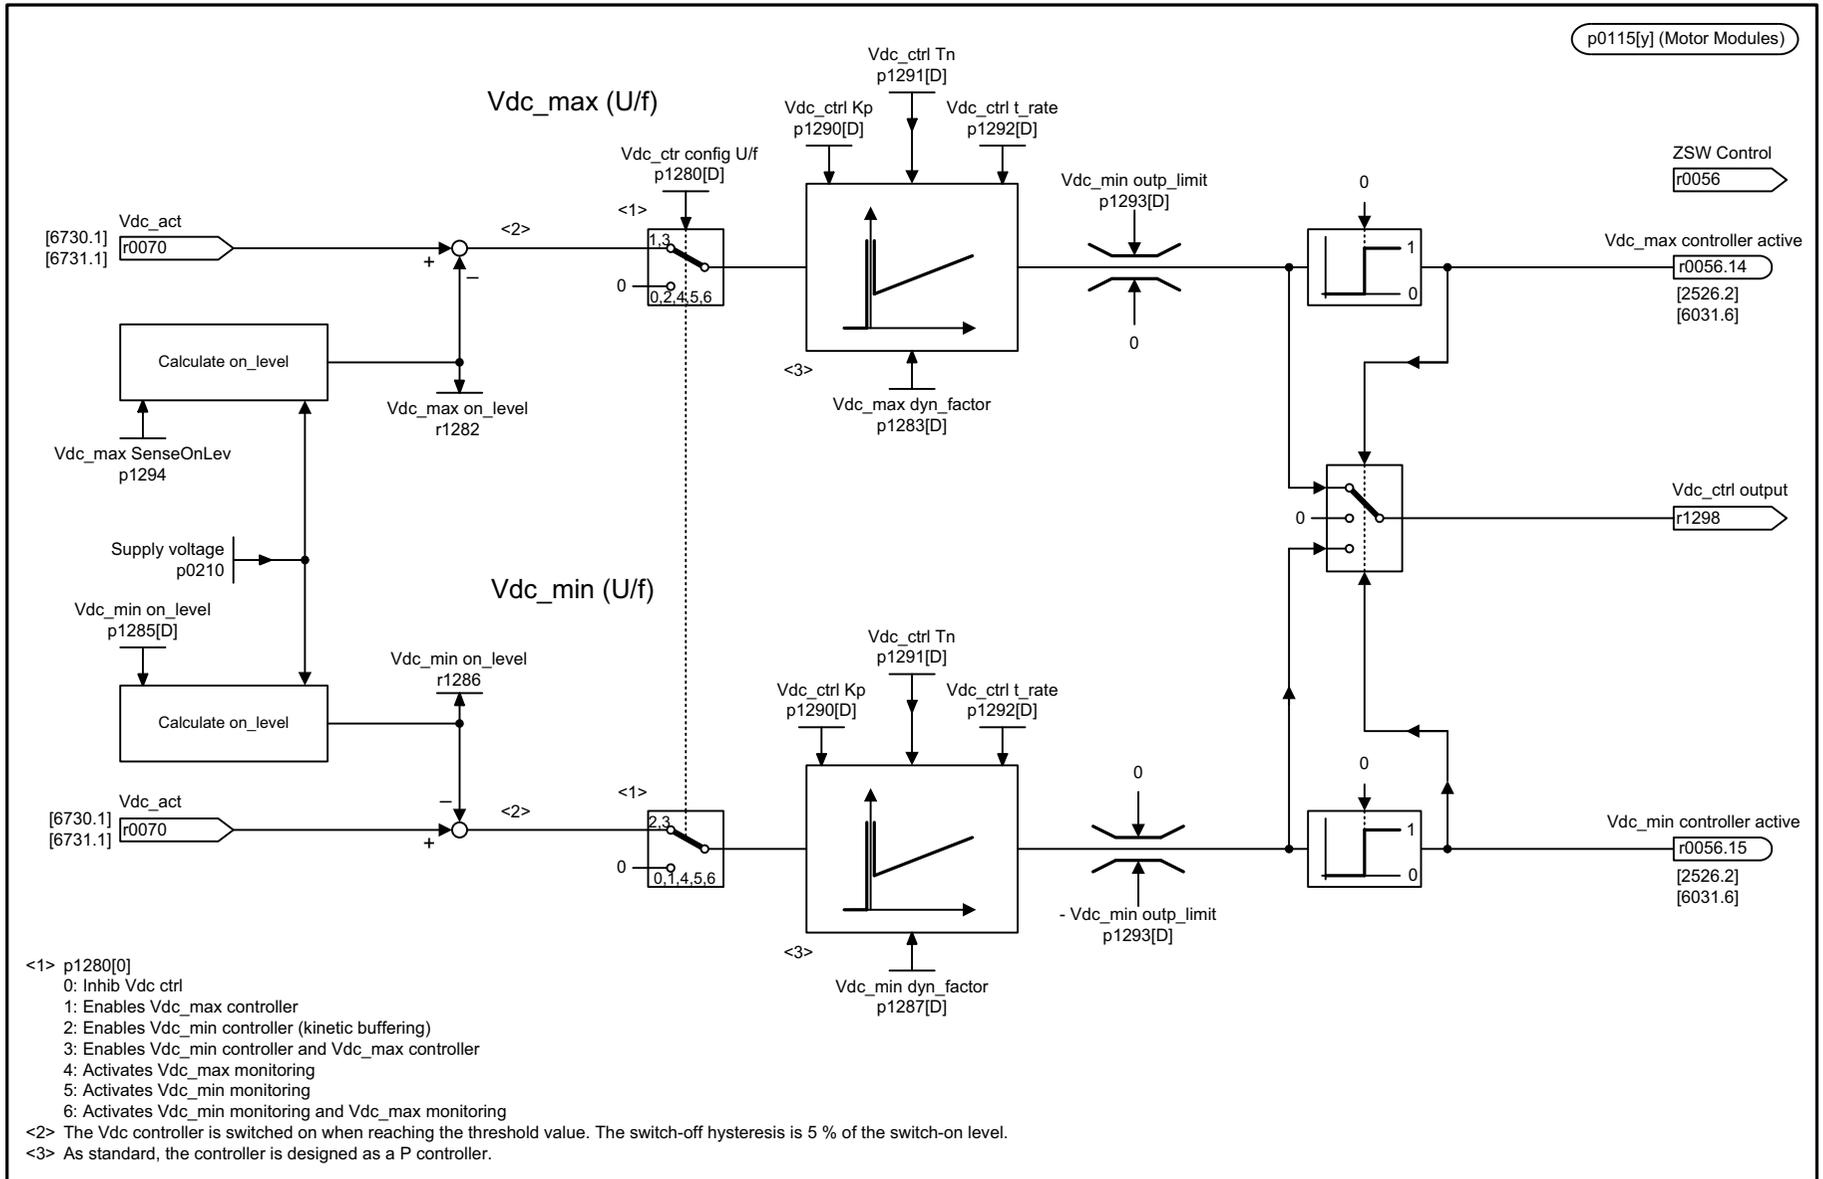

- <1> p1280[0]  
0: Inhib Vdc ctrl  
1: Enables Vdc\_max controller
- 2: Enables Vdc\_min controller (kinetic buffering)
- 3: Enables Vdc\_min controller and Vdc\_max controller
- 4: Activates Vdc\_max monitoring
- 5: Activates Vdc\_min monitoring
- 6: Activates Vdc\_min monitoring and Vdc\_max monitoring
- <2> The Vdc controller is switched on when reaching the threshold value. The switch-off hysteresis is 5 % of the switch-on level.
- <3> As standard, the controller is designed as a P controller.

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6320_54_eng.vsd	Function diagram	
Vector control - Vdc_max controller and Vdc_min controller (U/f)					12.07.13 V04.08.00	S120/S150/G130/G150	
							- 6320 -

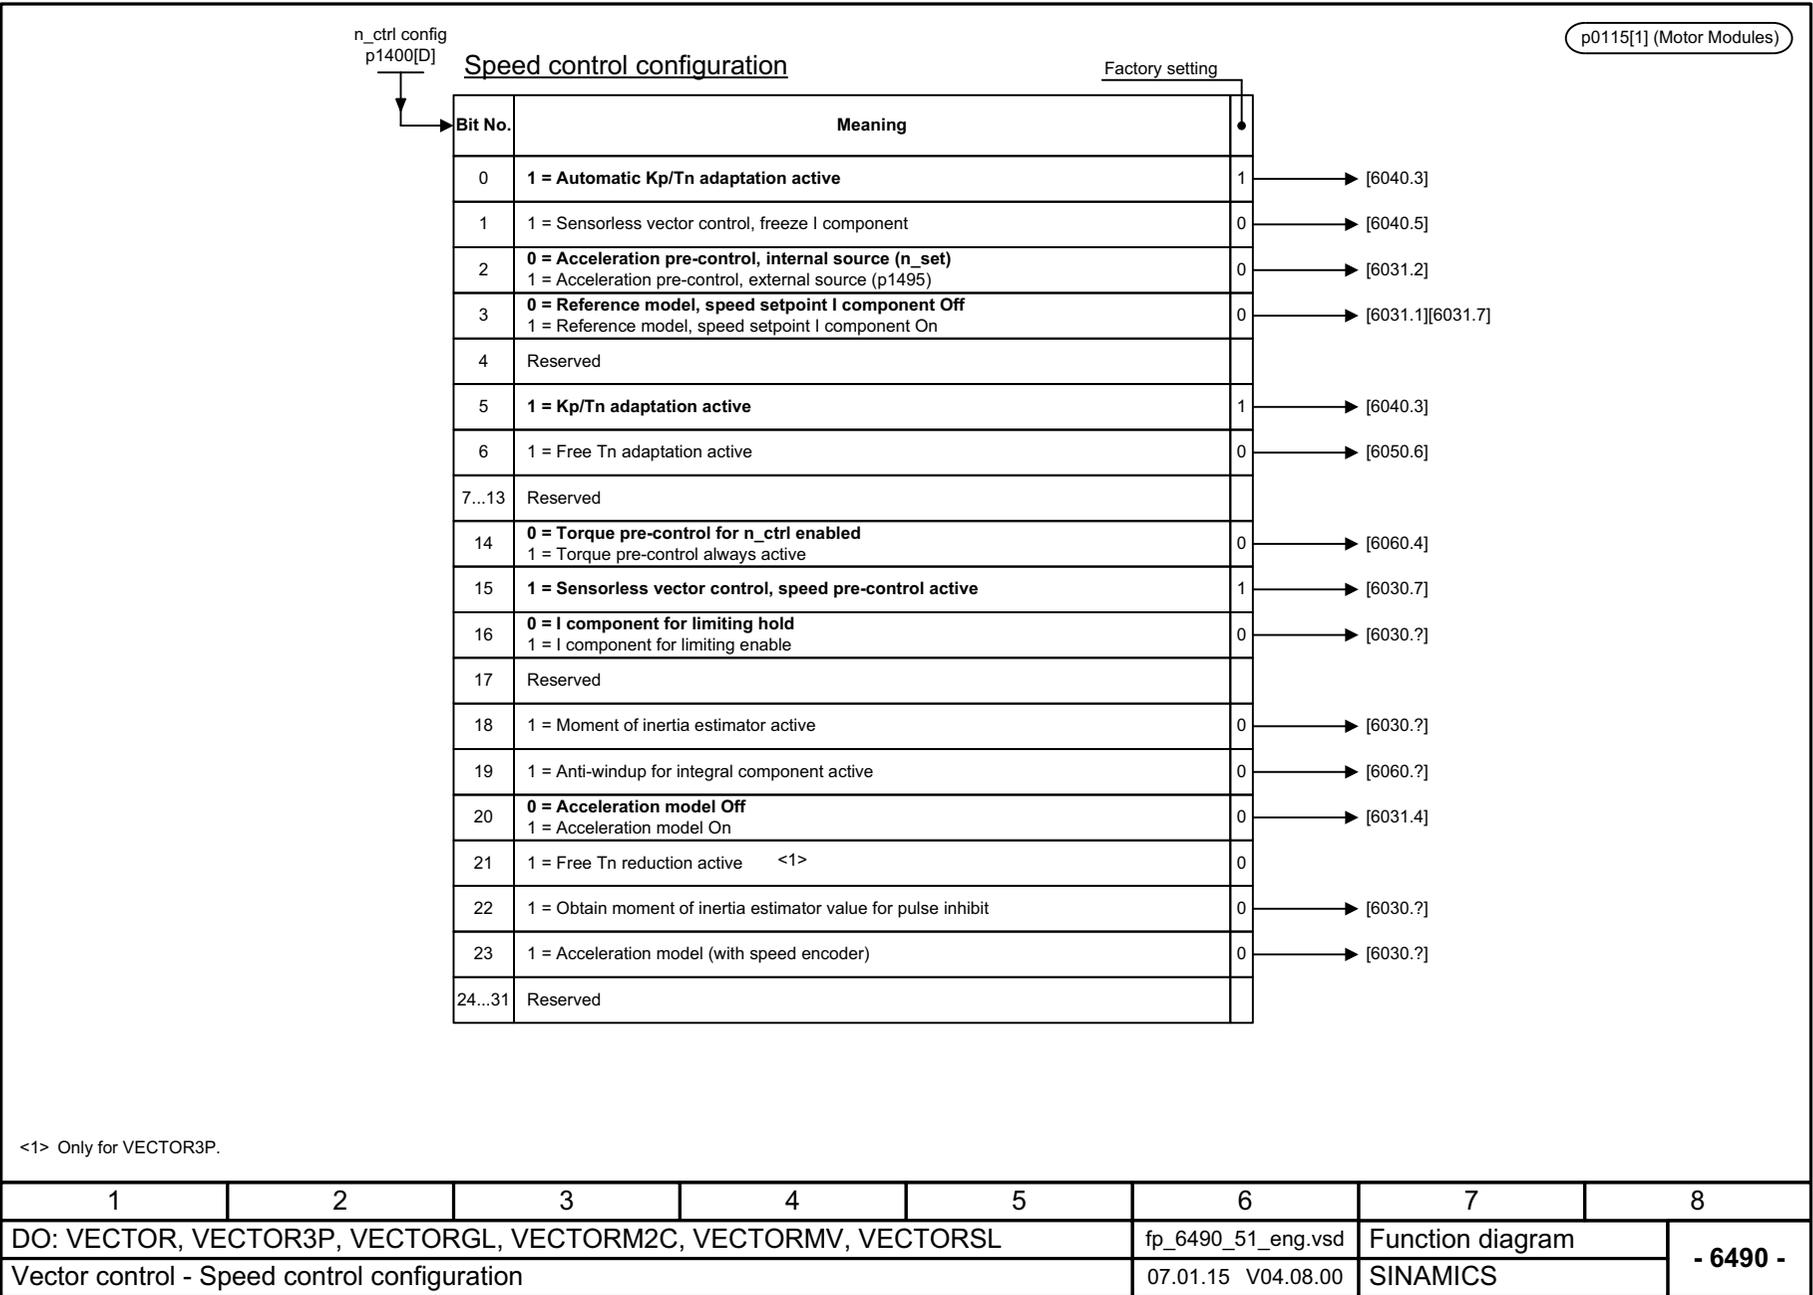


Fig. 3-137 6490 – Speed control configuration

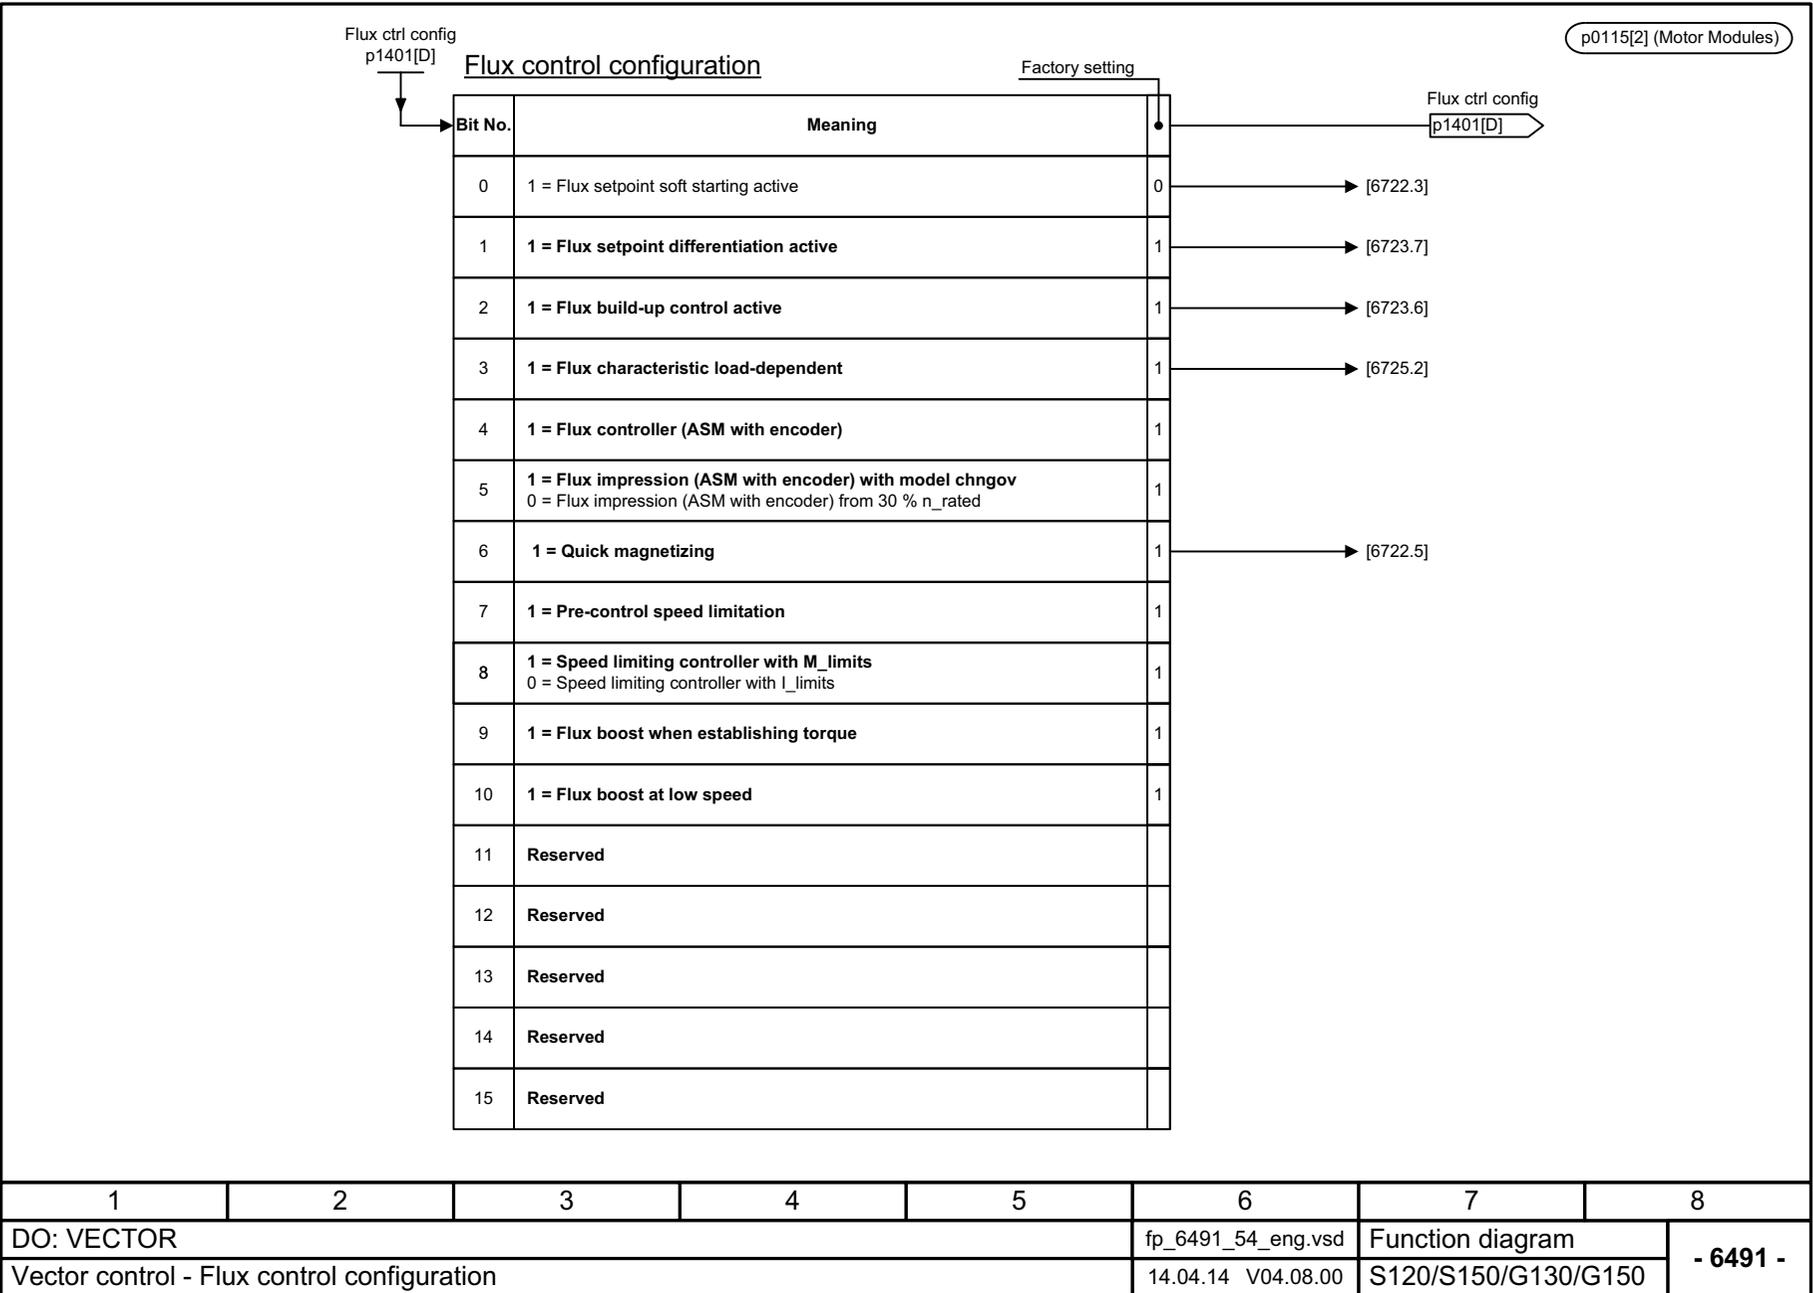


Fig. 3-138 6491 – Flux control configuration

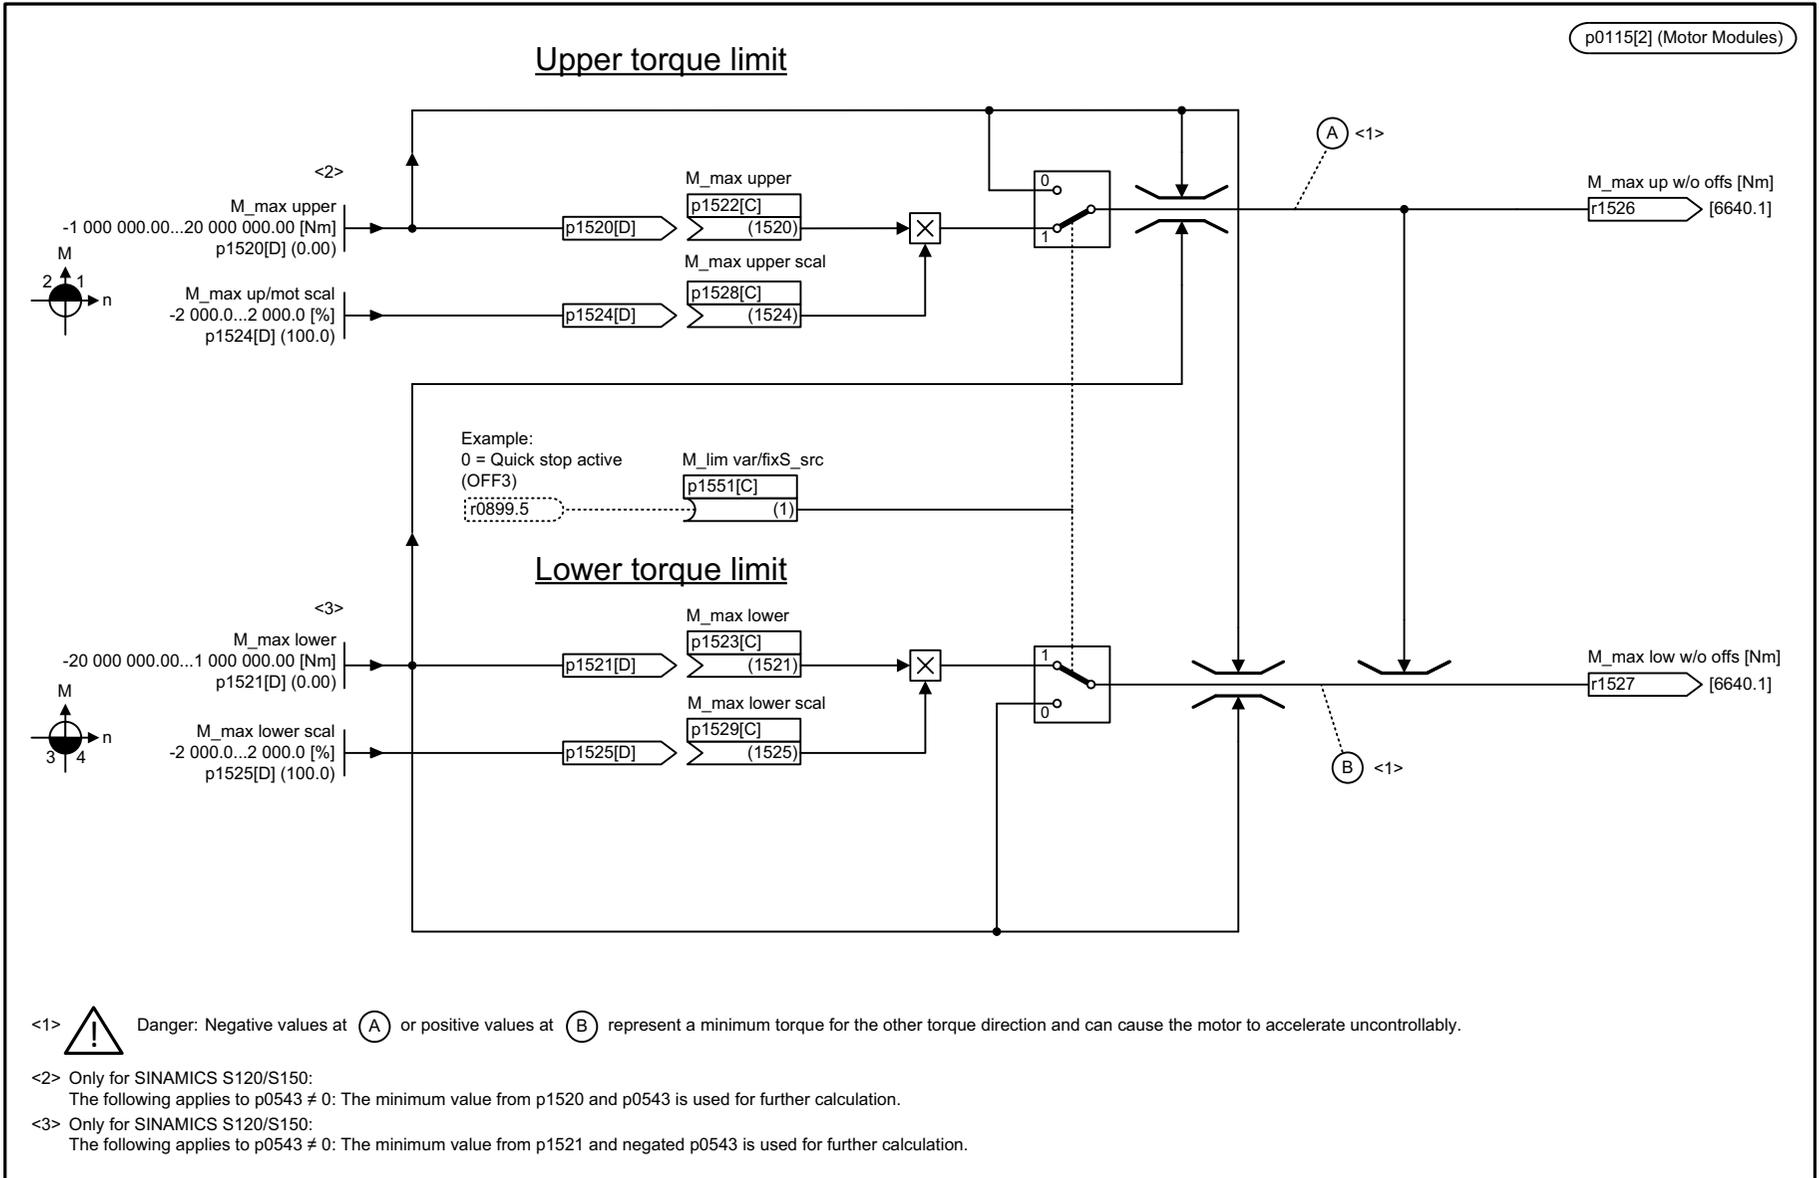
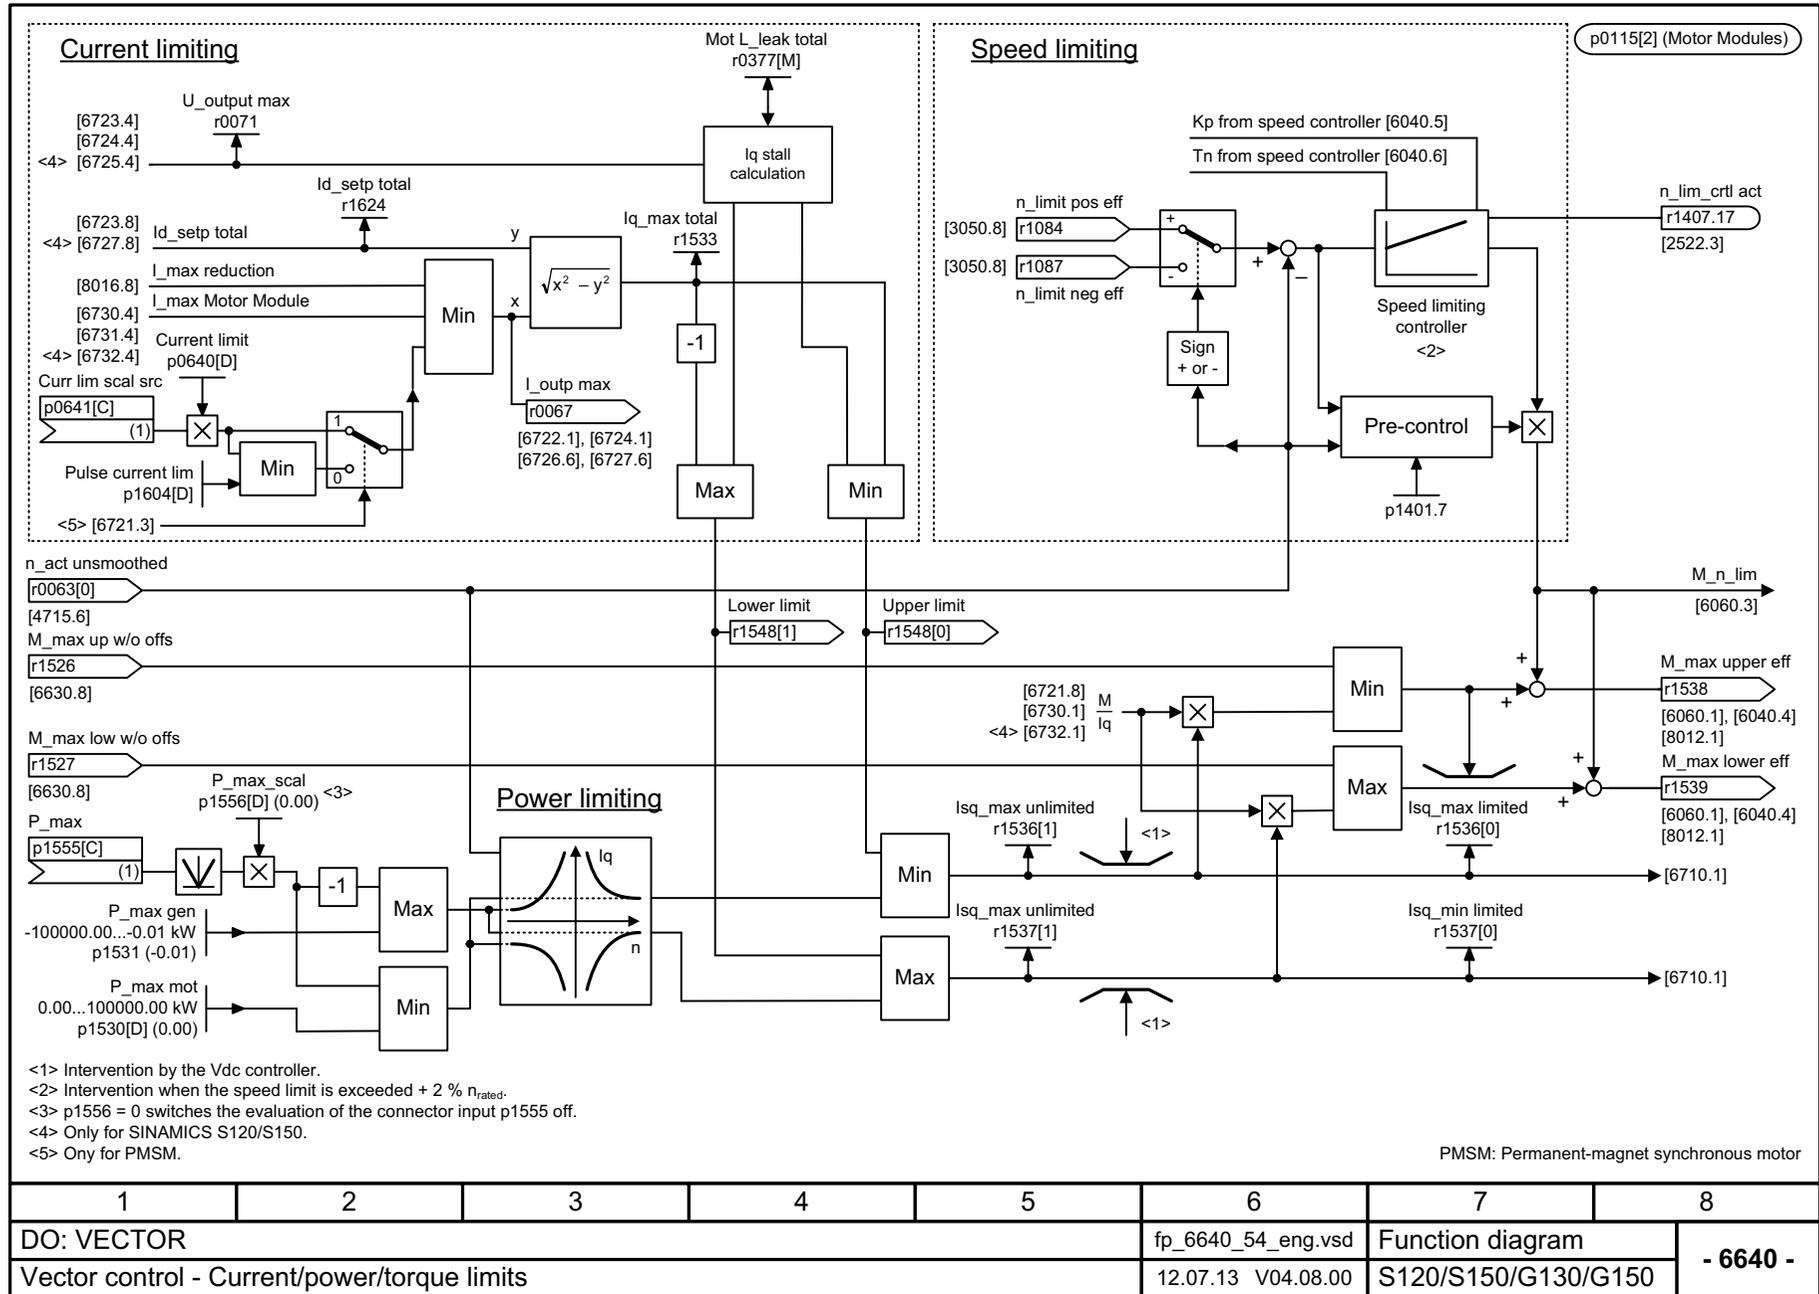


Fig. 3-139 6630 – Upper/lower torque limit

1	2	3	4	5	6	7	8
DO: VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_6630_51_eng.vsd	Function diagram	
Vector control - Upper/lower torque limit					07.01.15 V04.08.00	SINAMICS	

- 6630 -

Fig. 3-140 6640 – Current/power/torque limits




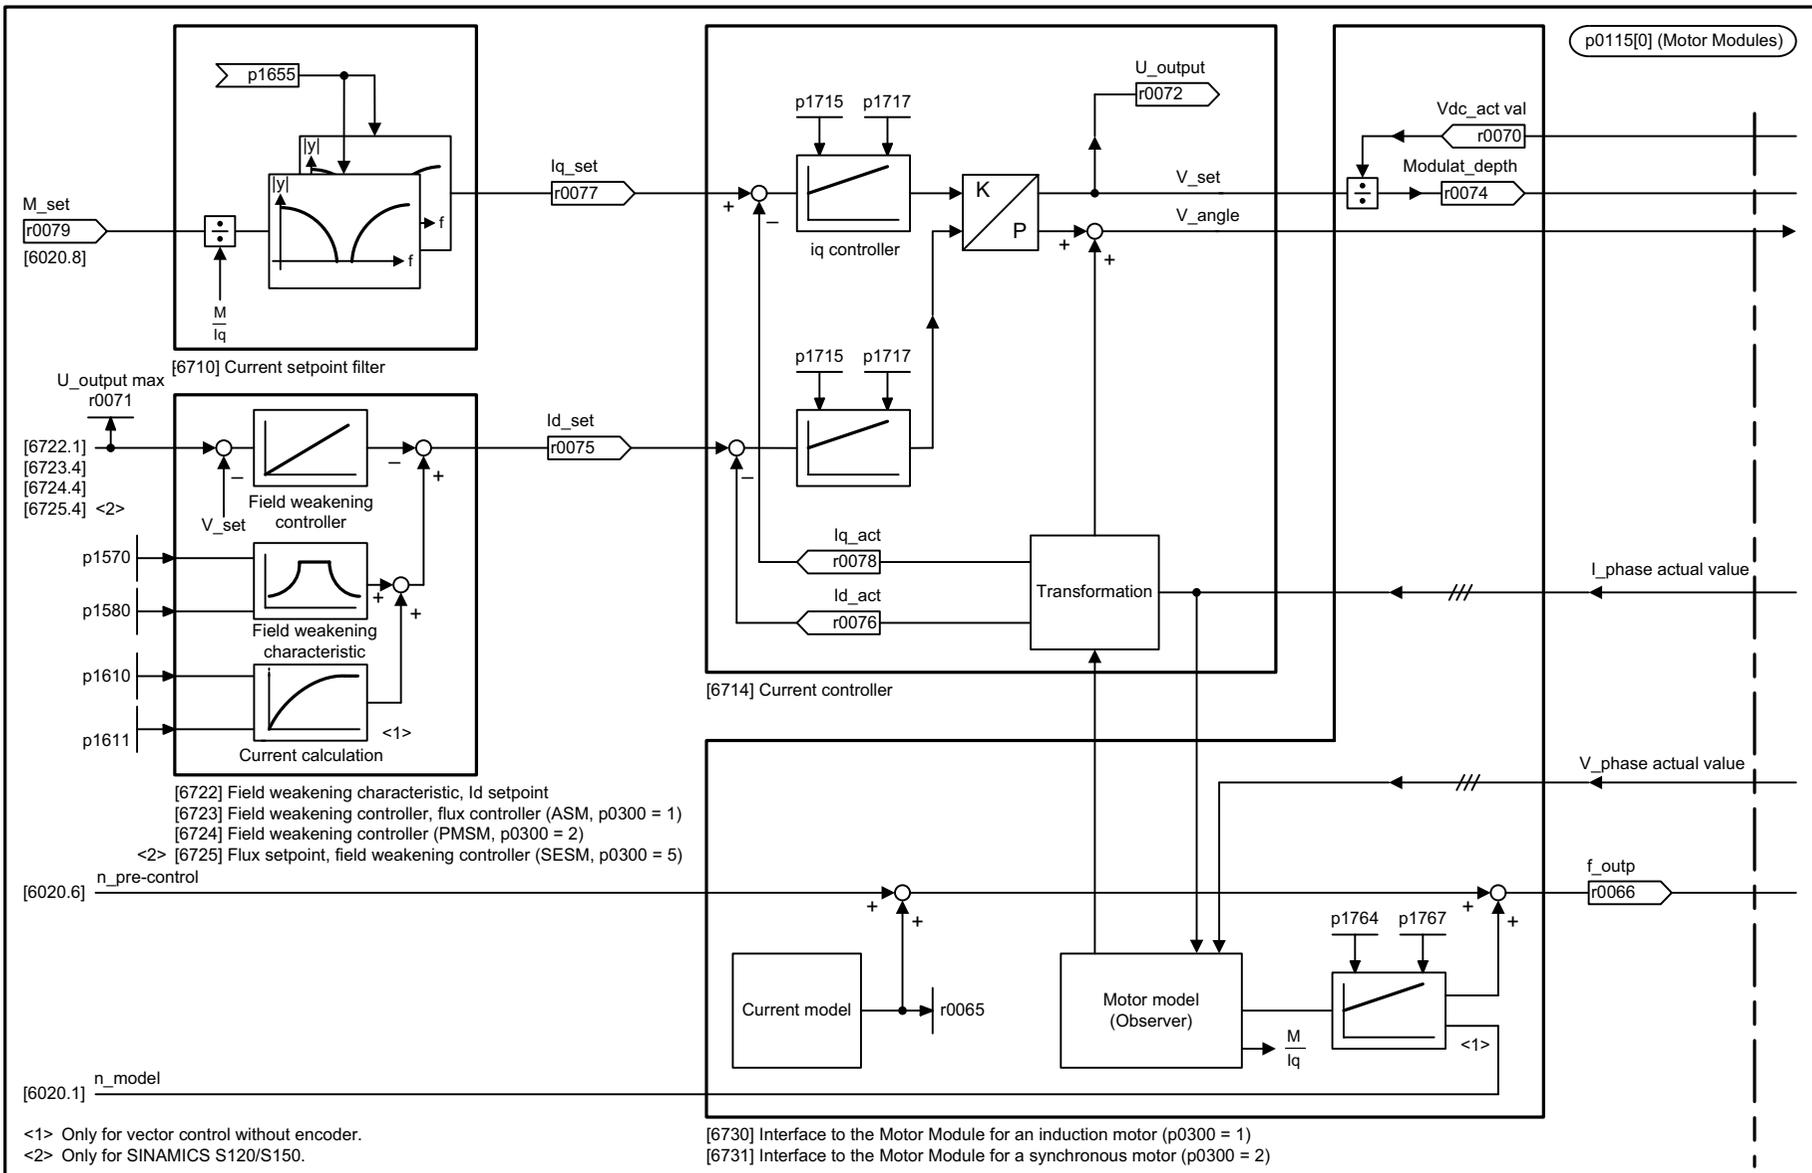


Fig. 3-141 6700 – Current control, overview

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6700_54_eng.vsd	Function diagram	
Vector control - Current control, overview					10.09.13 V04.08.00	S120/S150/G130/G150	
							<b>- 6700 -</b>

Fig. 3-142 6710 – Current setpoint filter

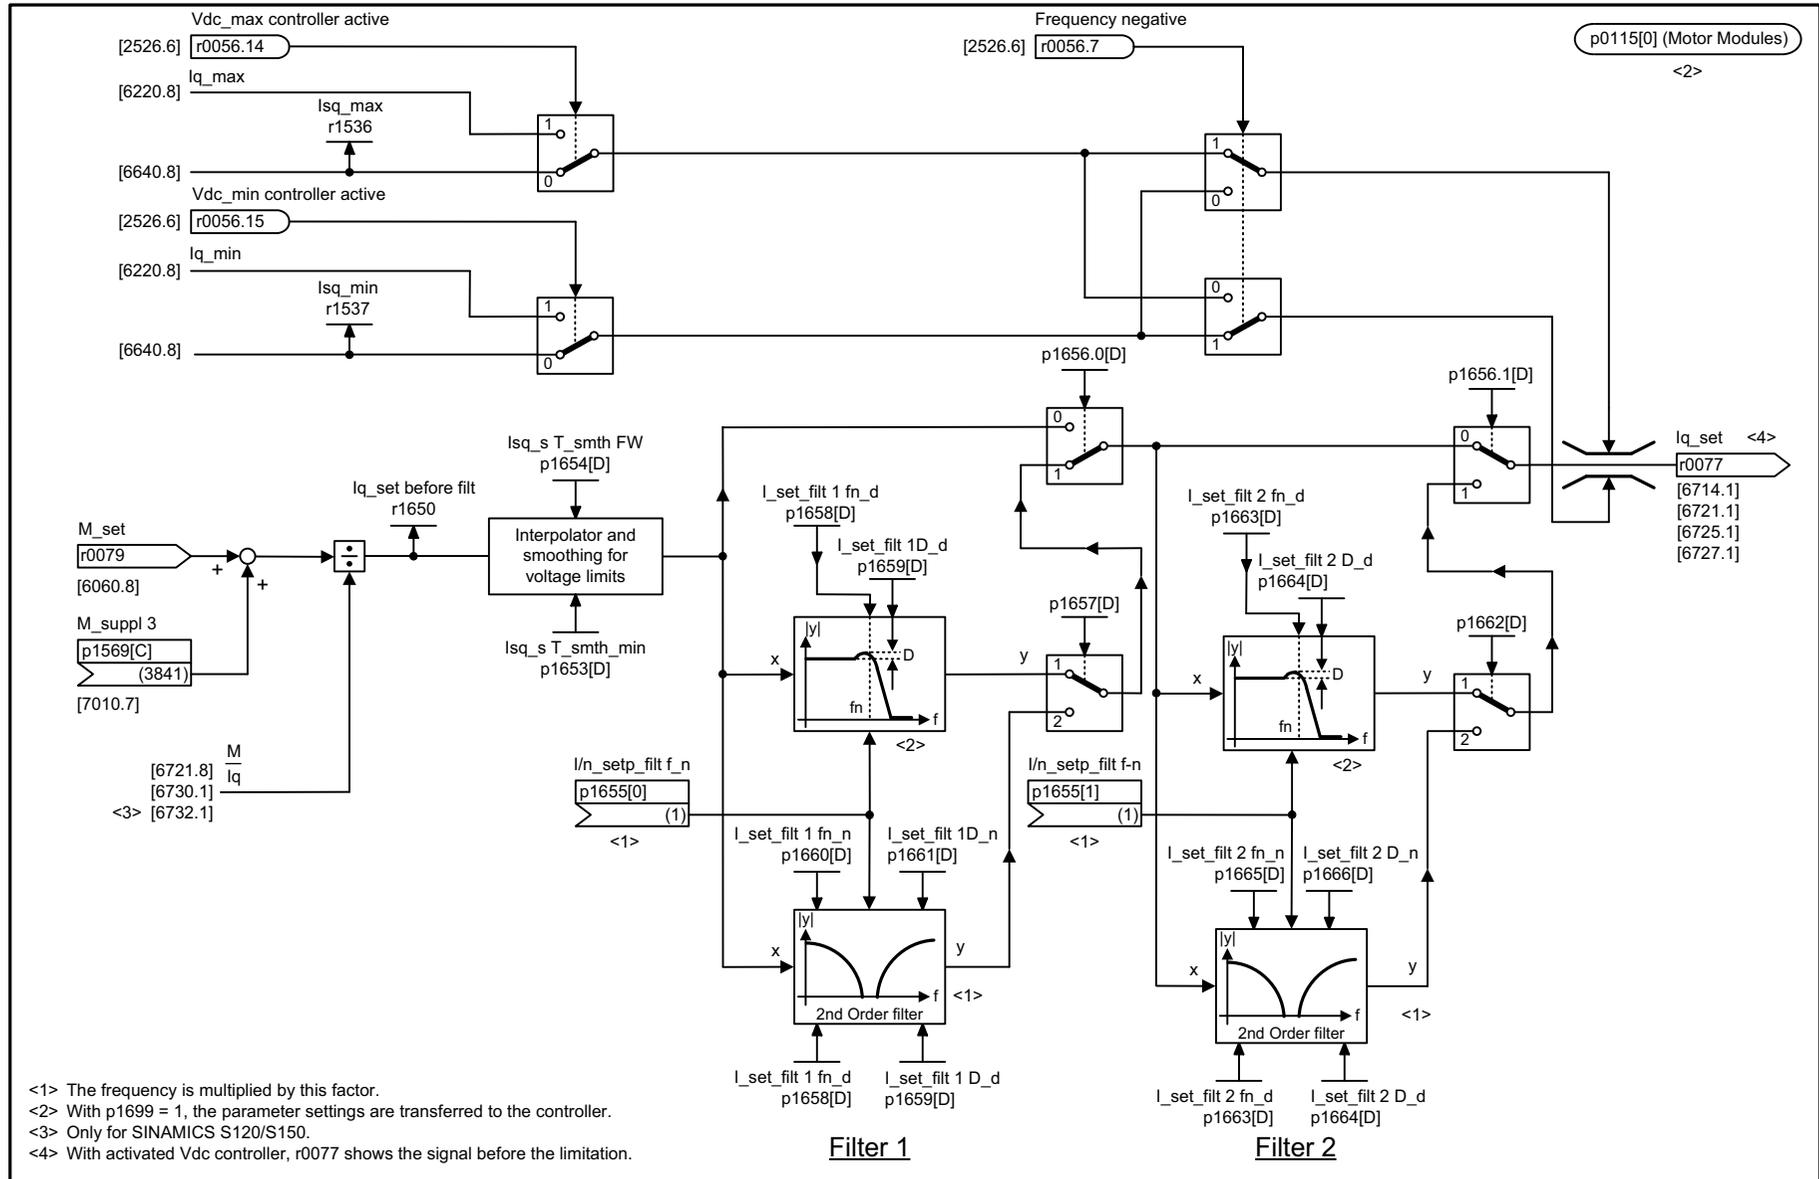

- <1> The frequency is multiplied by this factor.
- <2> With p1699 = 1, the parameter settings are transferred to the controller.
- <3> Only for SINAMICS S120/S150.
- <4> With activated Vdc controller, r0077 shows the signal before the limitation.

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6710_54_eng.vsd	Function diagram	
Vector control - Current setpoint filter					27.09.13 V04.08.00	S120/S150/G130/G150	
							- 6710 -

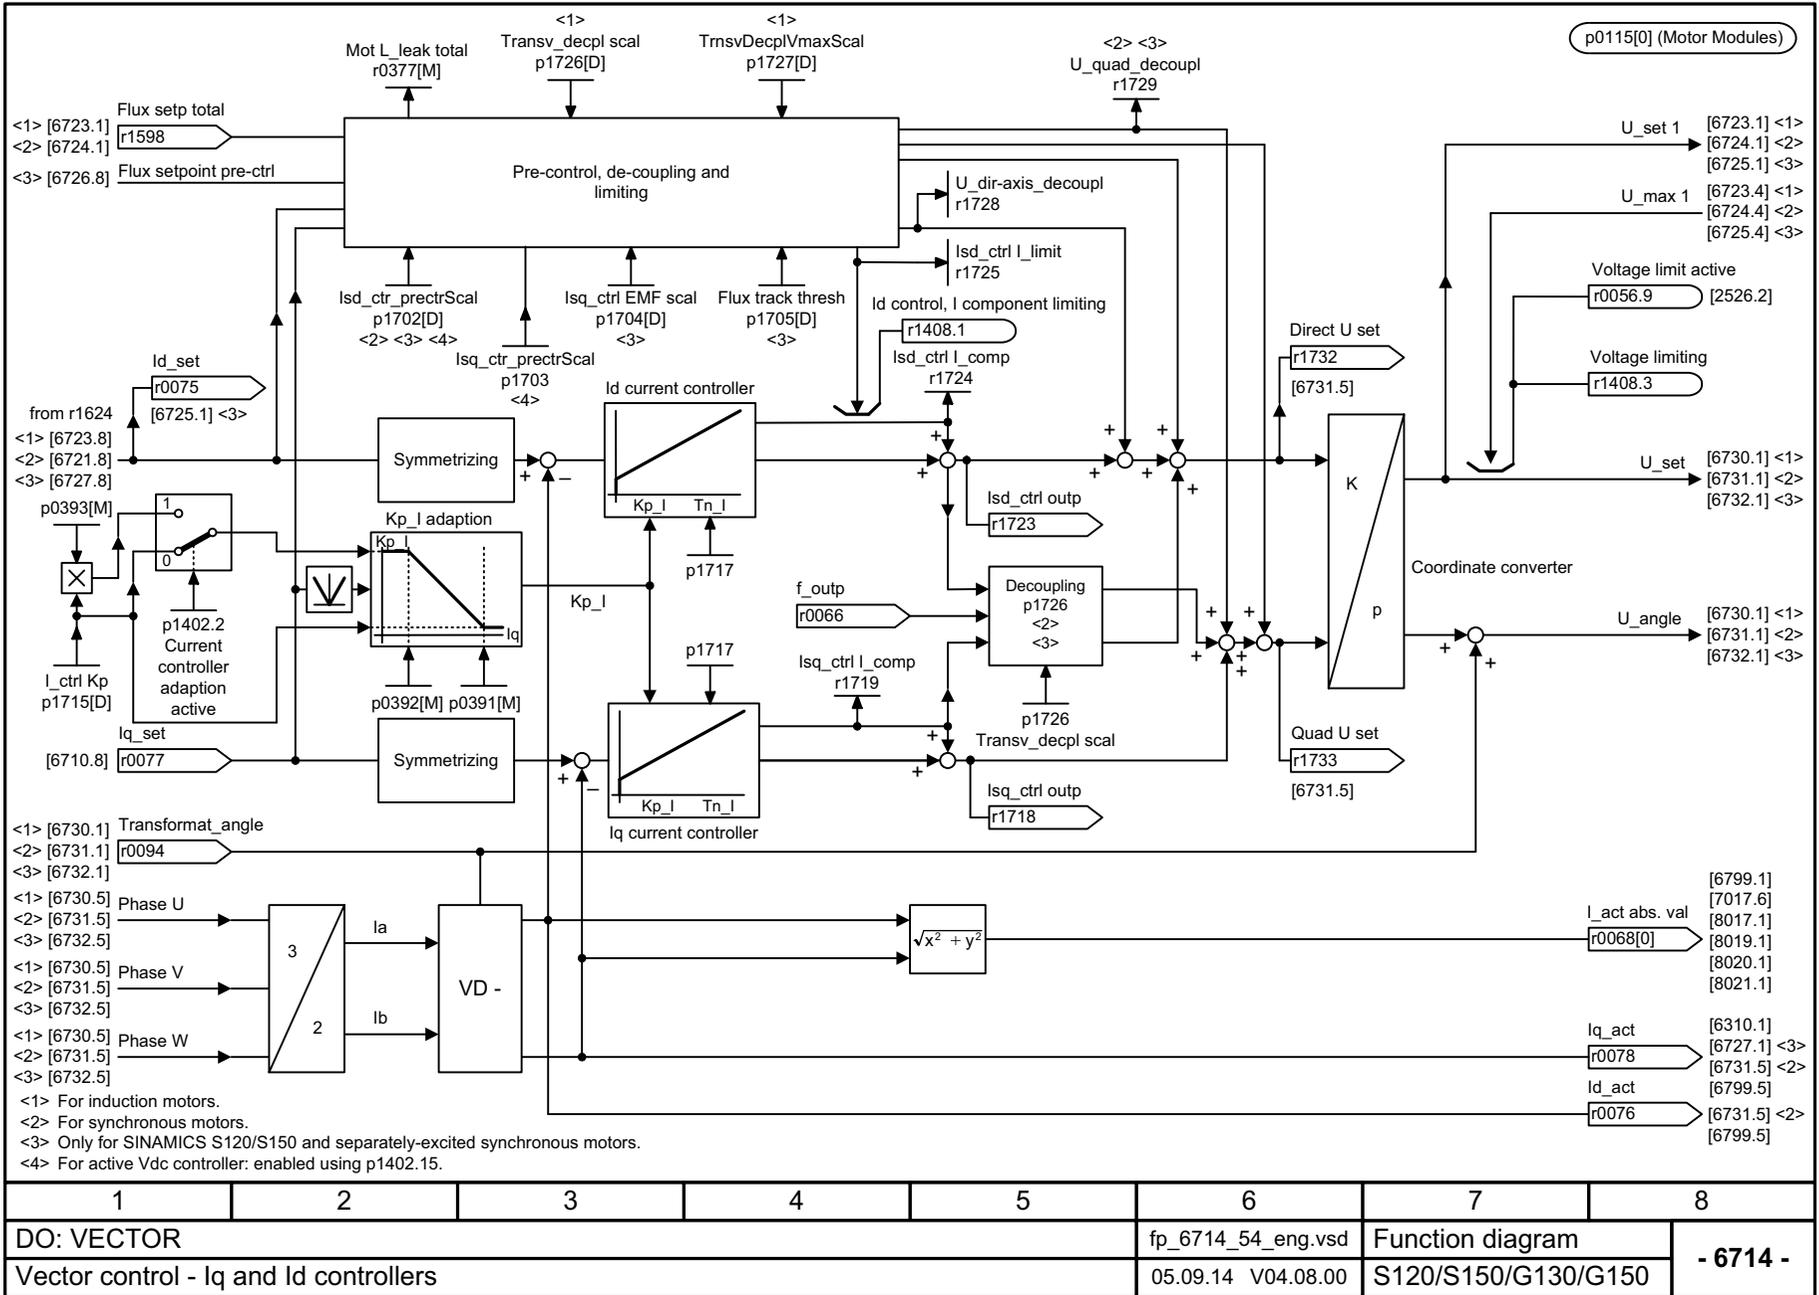



Fig. 3-143 6714 – Iq and Id controllers

<1> [6730.1] Transformat\_angle  
 <2> [6731.1] r0094  
 <3> [6732.1]  
 <1> [6730.5] Phase U  
 <2> [6731.5]  
 <3> [6732.5]  
 <1> [6730.5] Phase V  
 <2> [6731.5]  
 <3> [6732.5]  
 <1> [6730.5] Phase W  
 <2> [6731.5]  
 <3> [6732.5]

<1> For induction motors.  
 <2> For synchronous motors.  
 <3> Only for SINAMICS S120/S150 and separately-excited synchronous motors.  
 <4> For active Vdc controller: enabled using p1402.15.

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6714_54_eng.vsd	Function diagram	
Vector control - Iq and Id controllers					05.09.14 V04.08.00	S120/S150/G130/G150	
							<b>- 6714 -</b>

Fig. 3-144 6721 - Id setpoint (PEM, p0300 = 2)

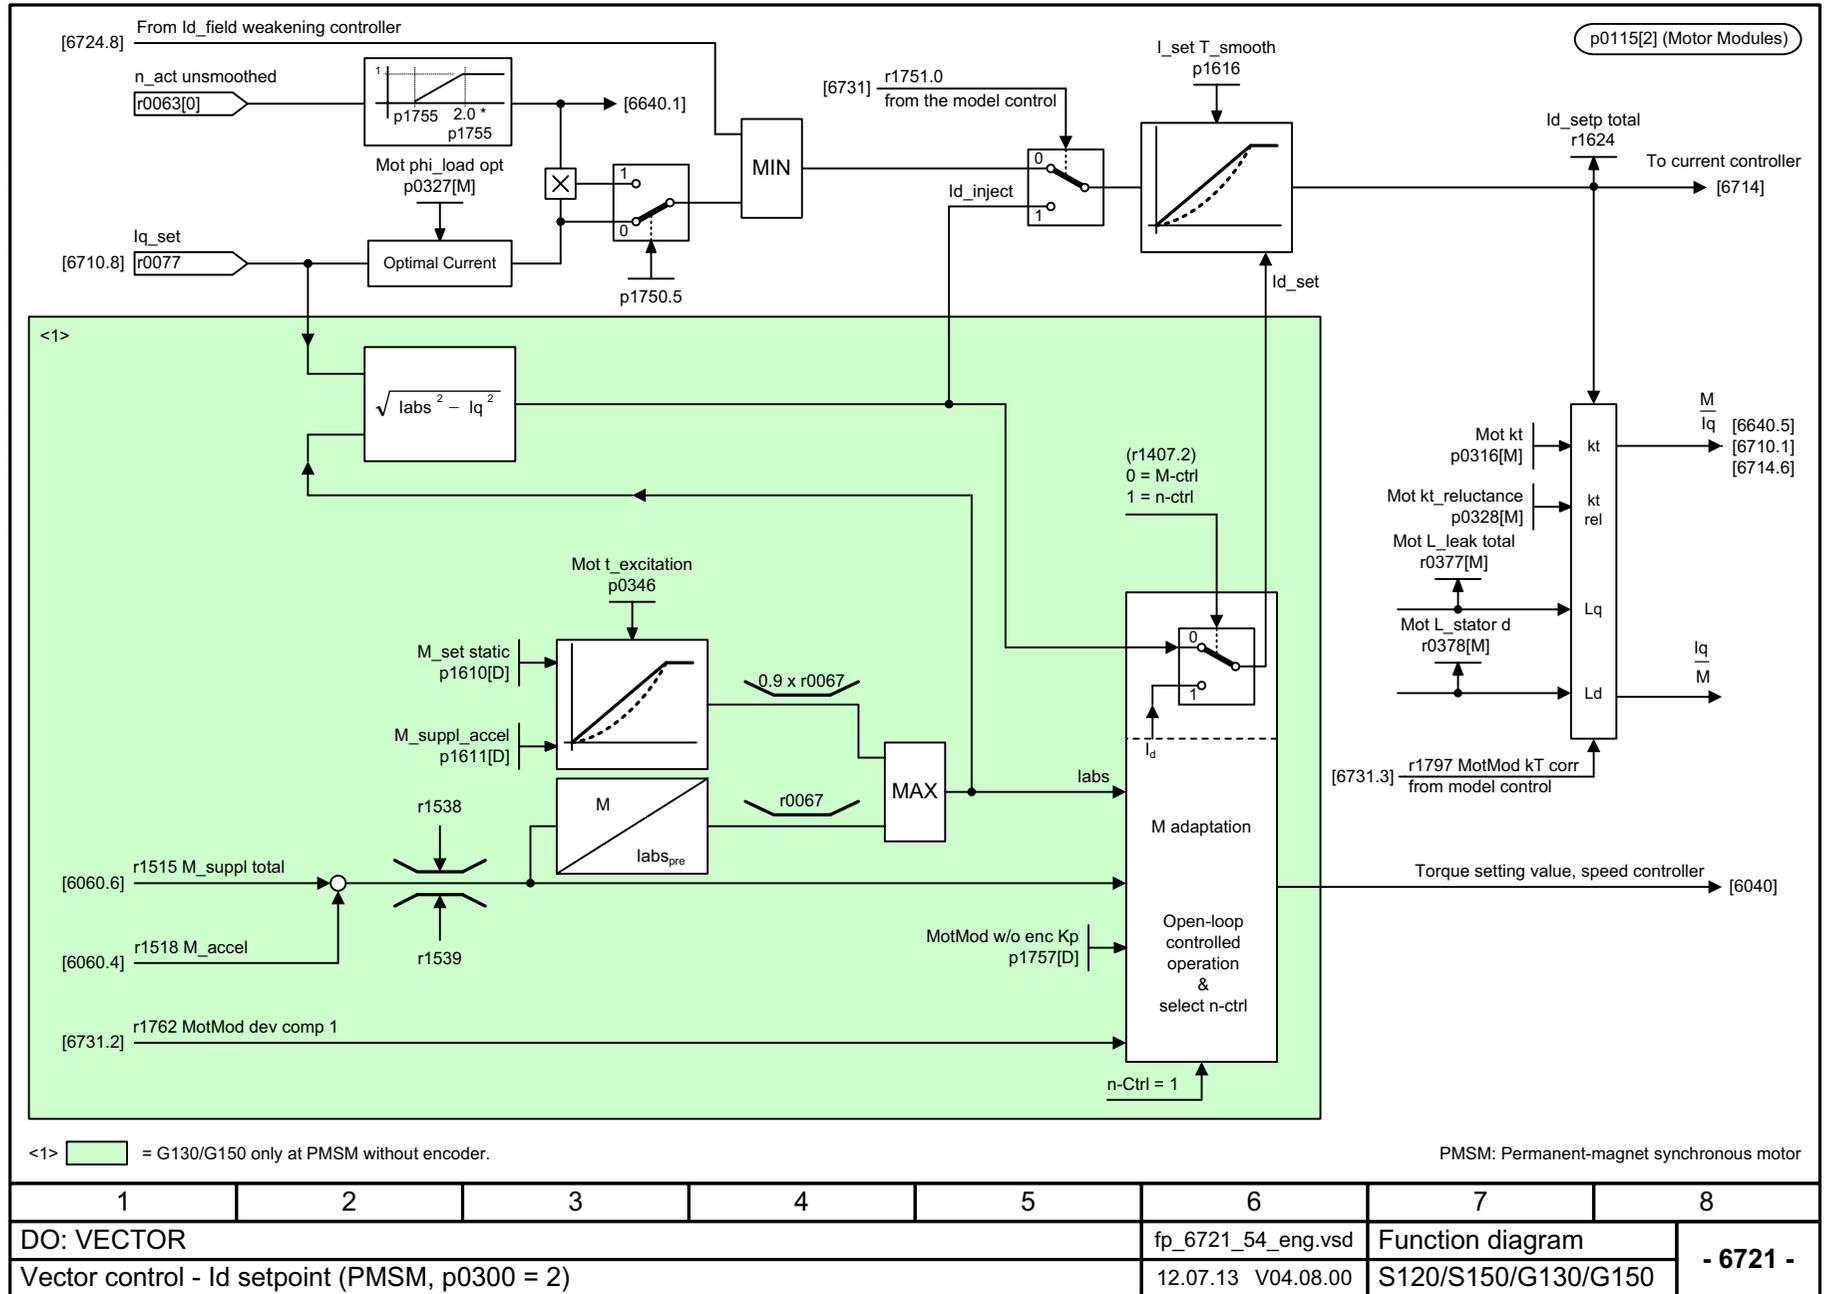


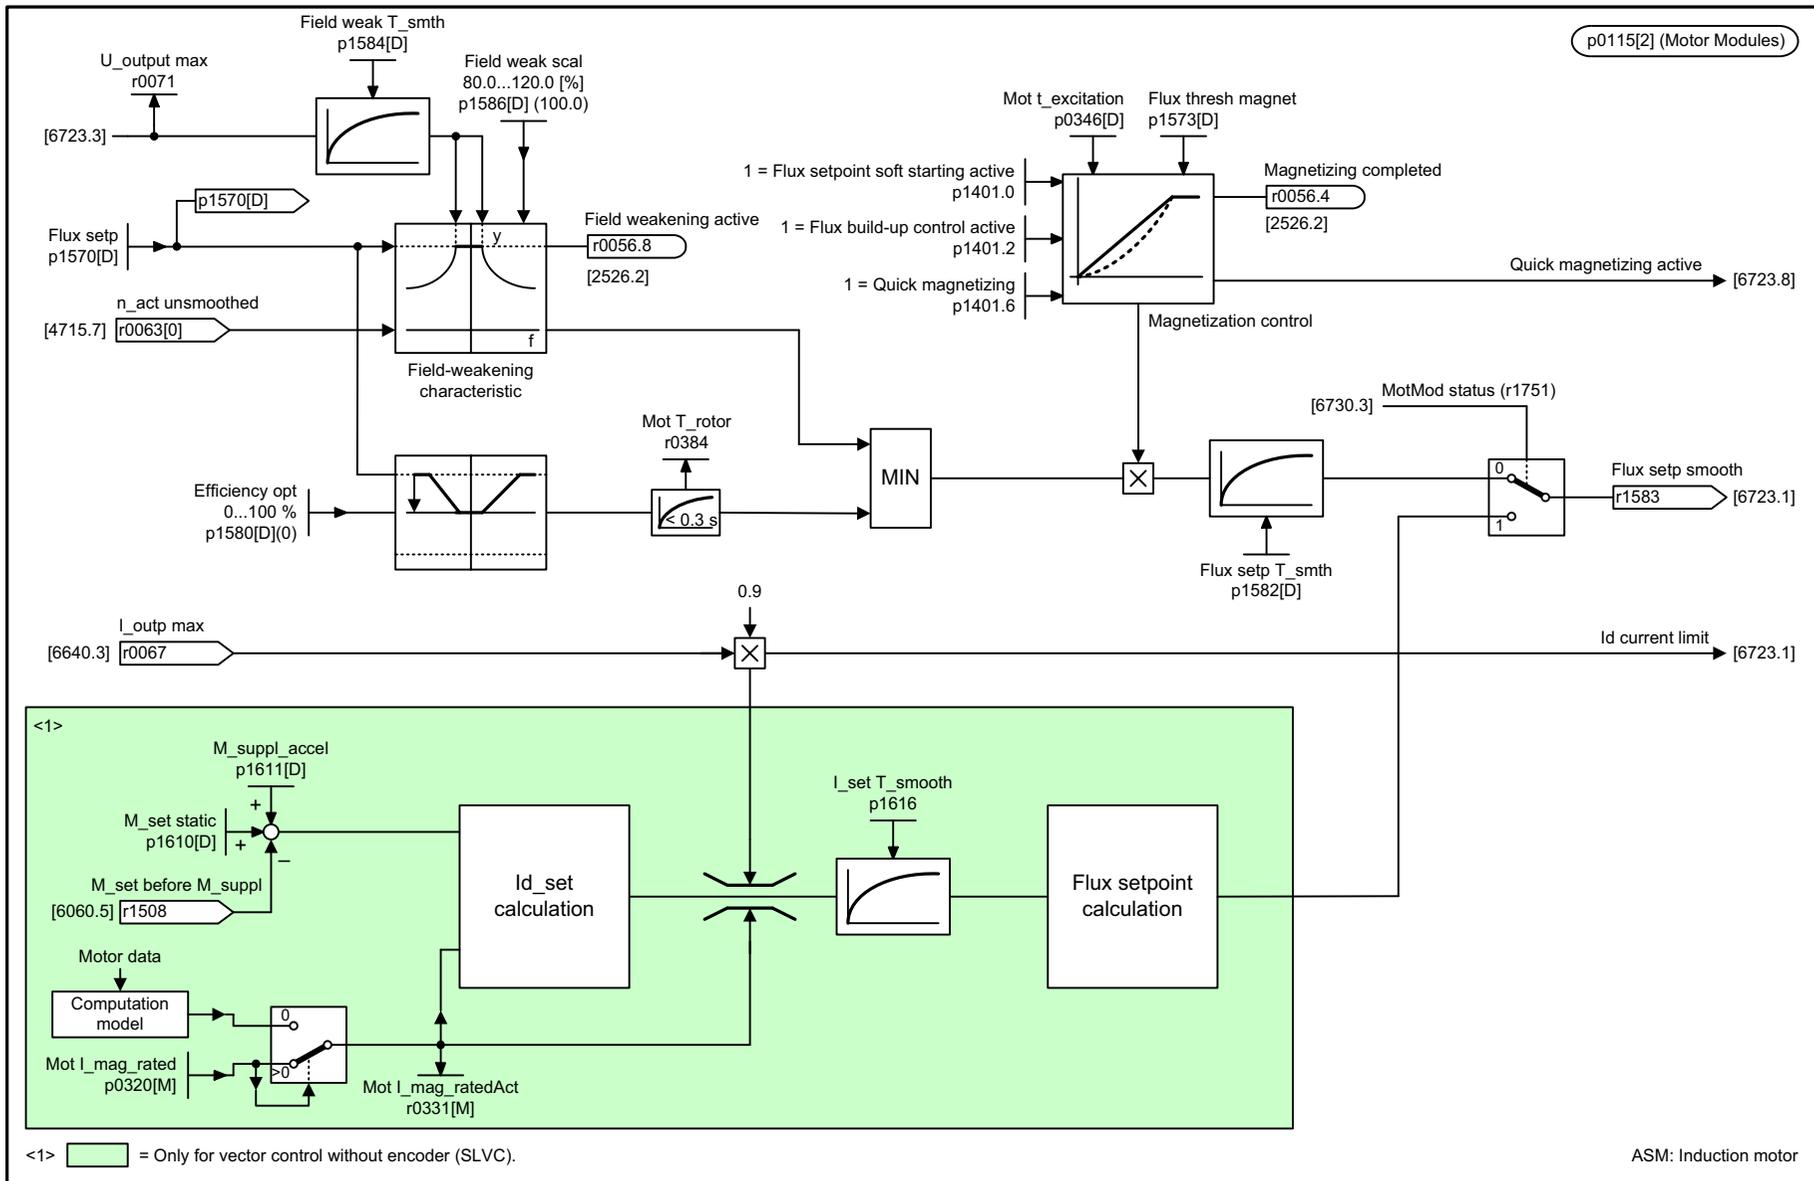



Fig. 3-145 6722 - Field weakening characteristic, Id setpoint (ASM, p0300 = 1)

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6722_54_eng.vsd	Function diagram	
Vector control - Field weakening characteristic, Id setpoint (ASM, p0300 = 1)					15.02.16 V04.08.00	S120/S150/G130/G150	
							<b>- 6722 -</b>

Fig. 3-146 6723 - Field weakening controller, flux controller (ASM, p0300 = 1)

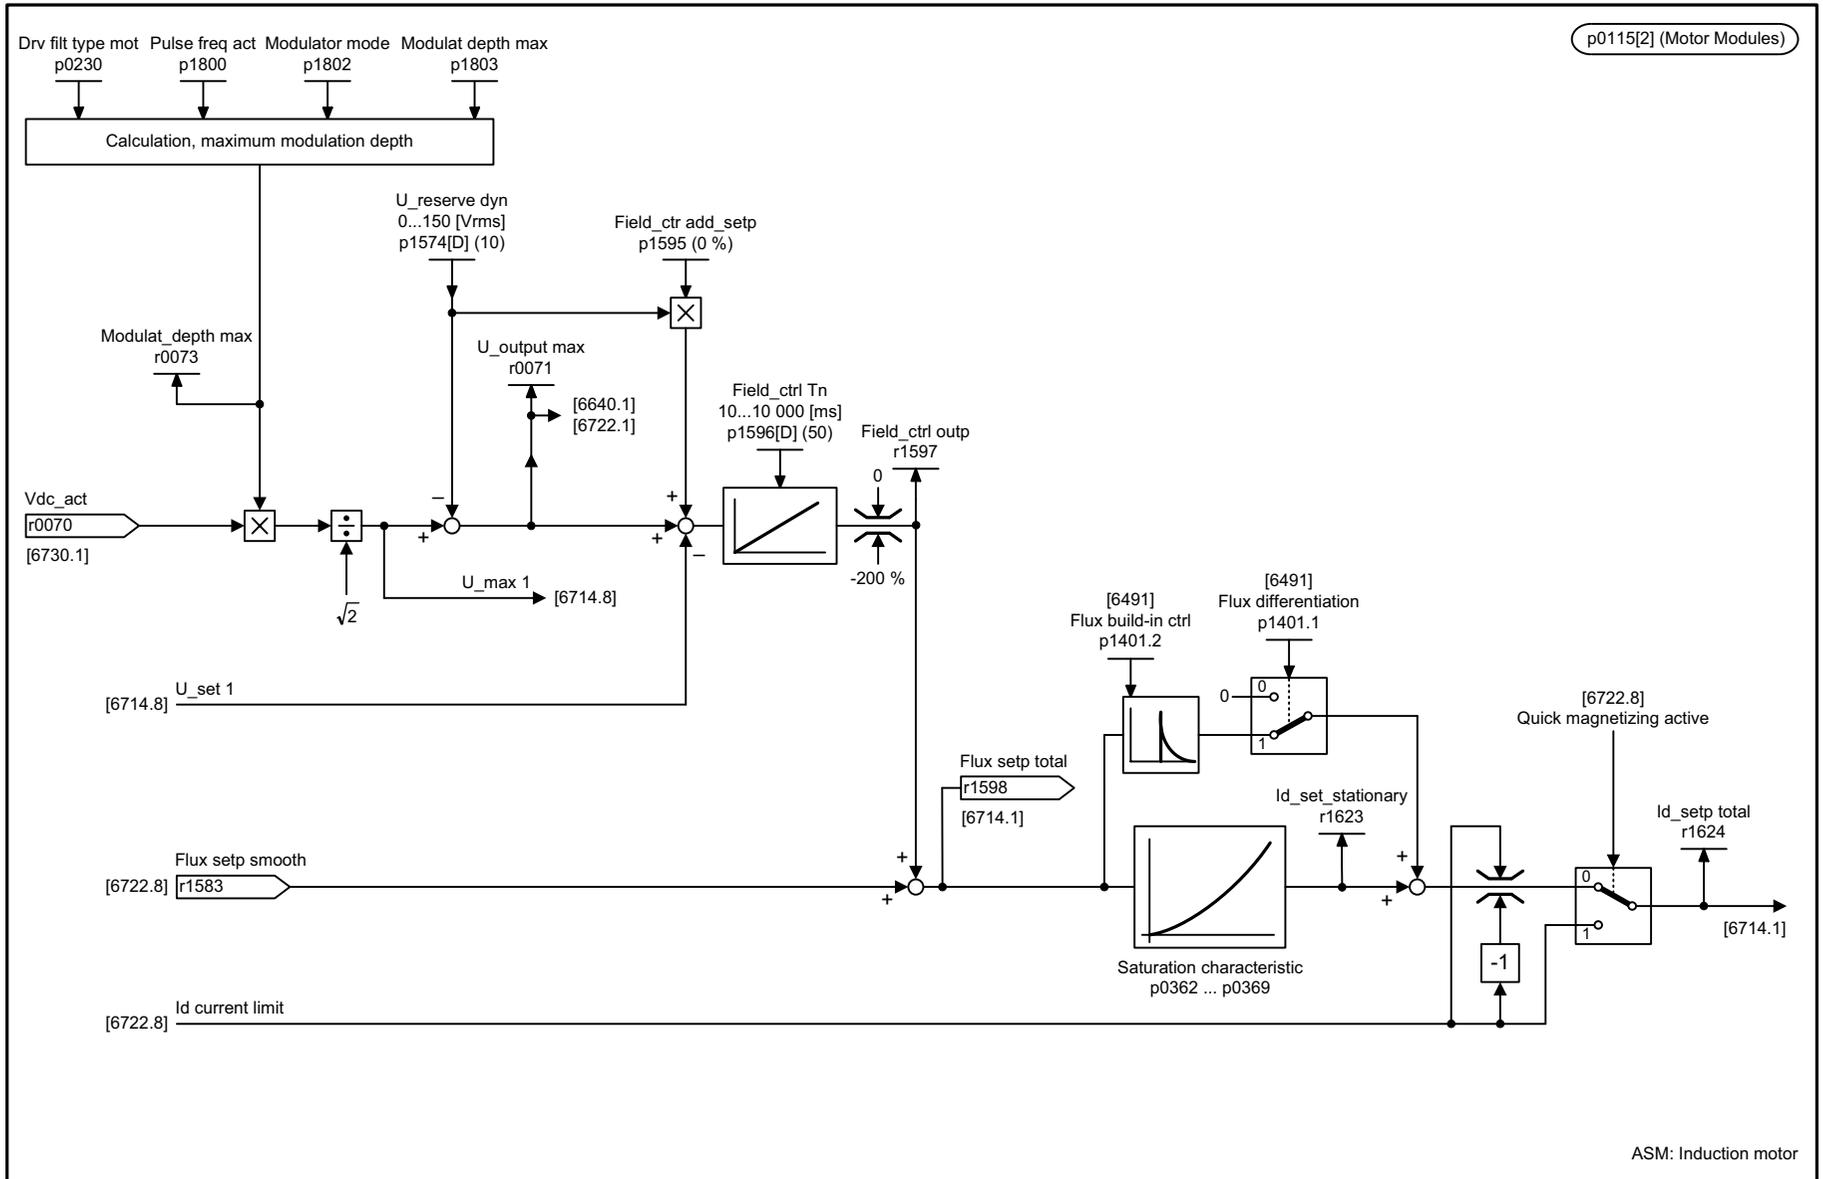

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6723_54_eng.vsd	Function diagram	
Vector control - Field weakening controller, flux controller (ASM, p0300 = 1)					15.02.16 V04.08.00	S120/S150/G130/G150	
							- 6723 -

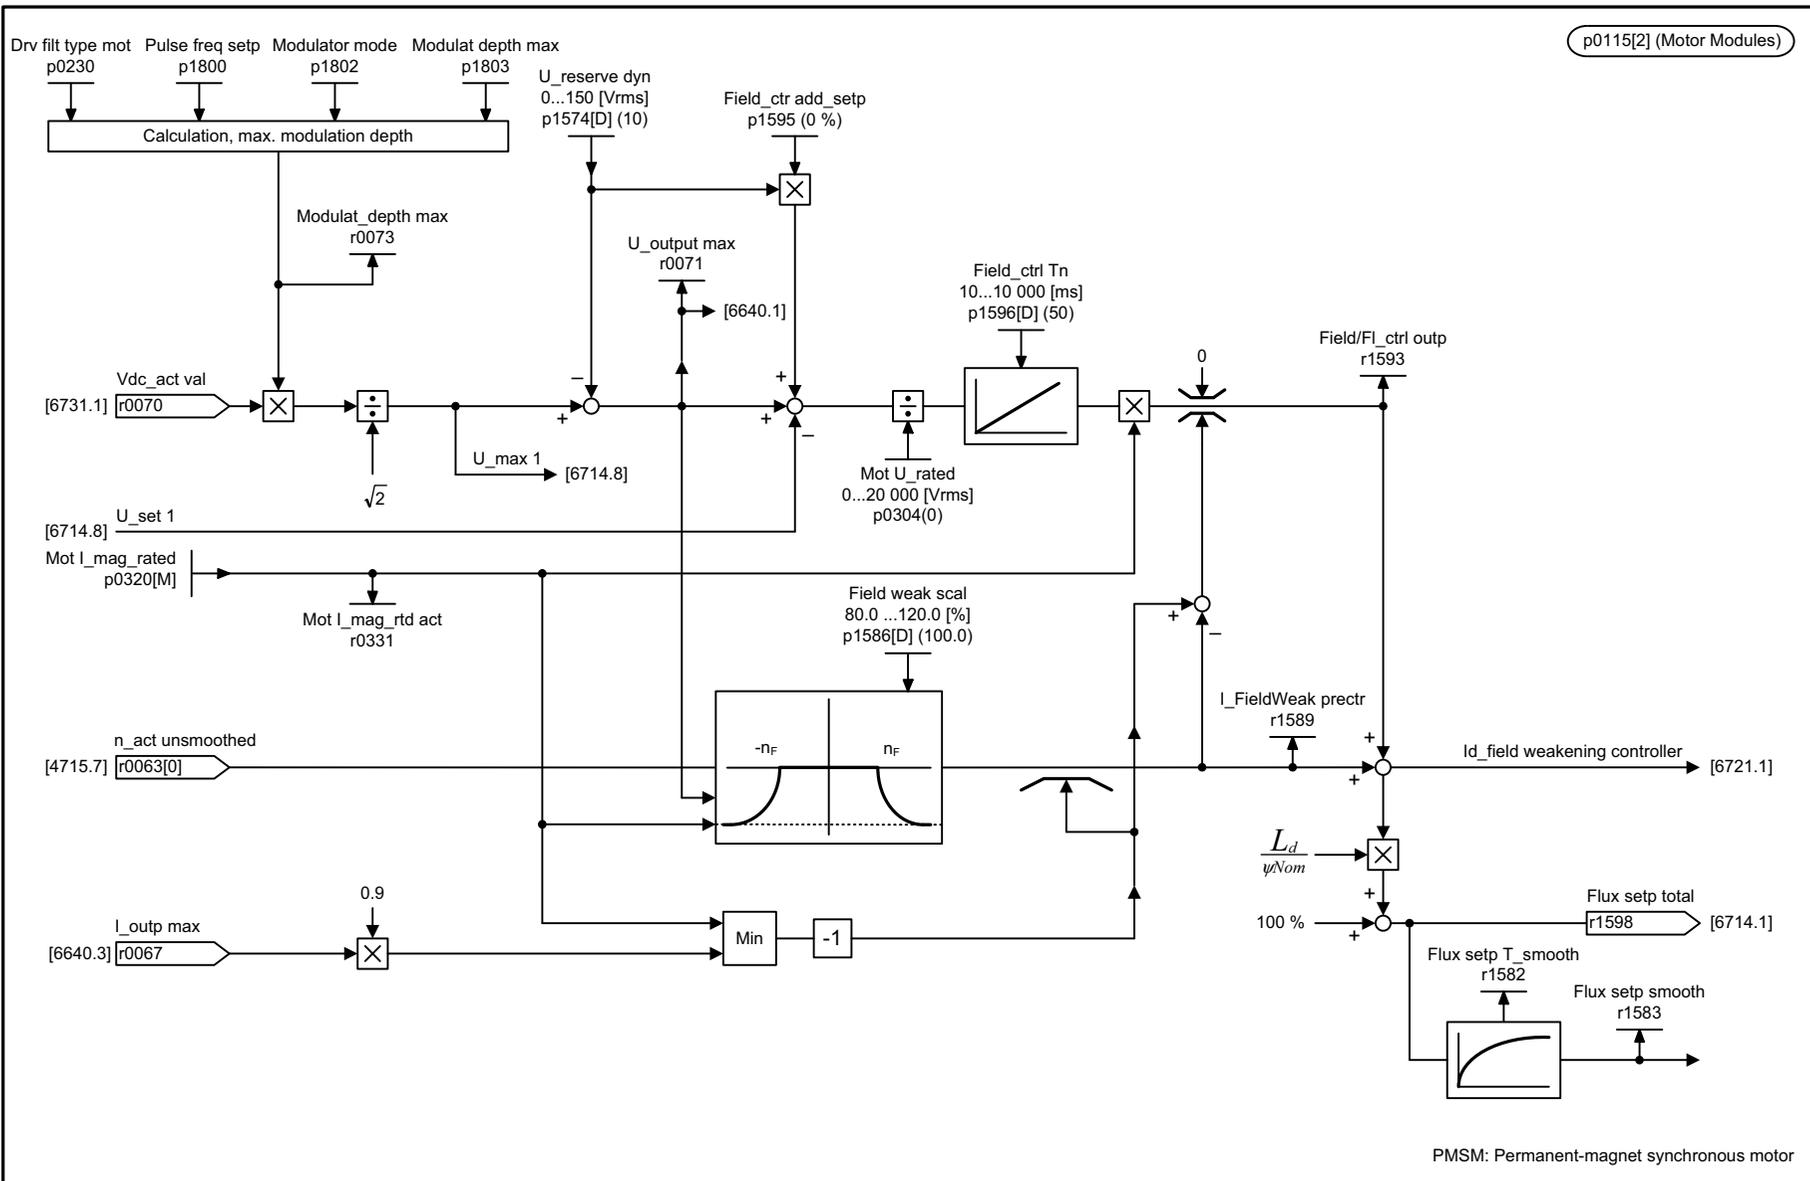


PMSM: Permanent-magnet synchronous motor

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6724_54_eng.vsd	Function diagram	
Vector control - Field weakening controller (PMSM, p0300 = 2)					15.02.16 V04.08.00	S120/S150/G130/G150	
							- 6724 -

Fig. 3-147 6724 - Field weakening controller (PEM; p0300 = 2)

Fig. 3-148 6730 – Interface to the Motor Module (ASM, p0300 = 1)

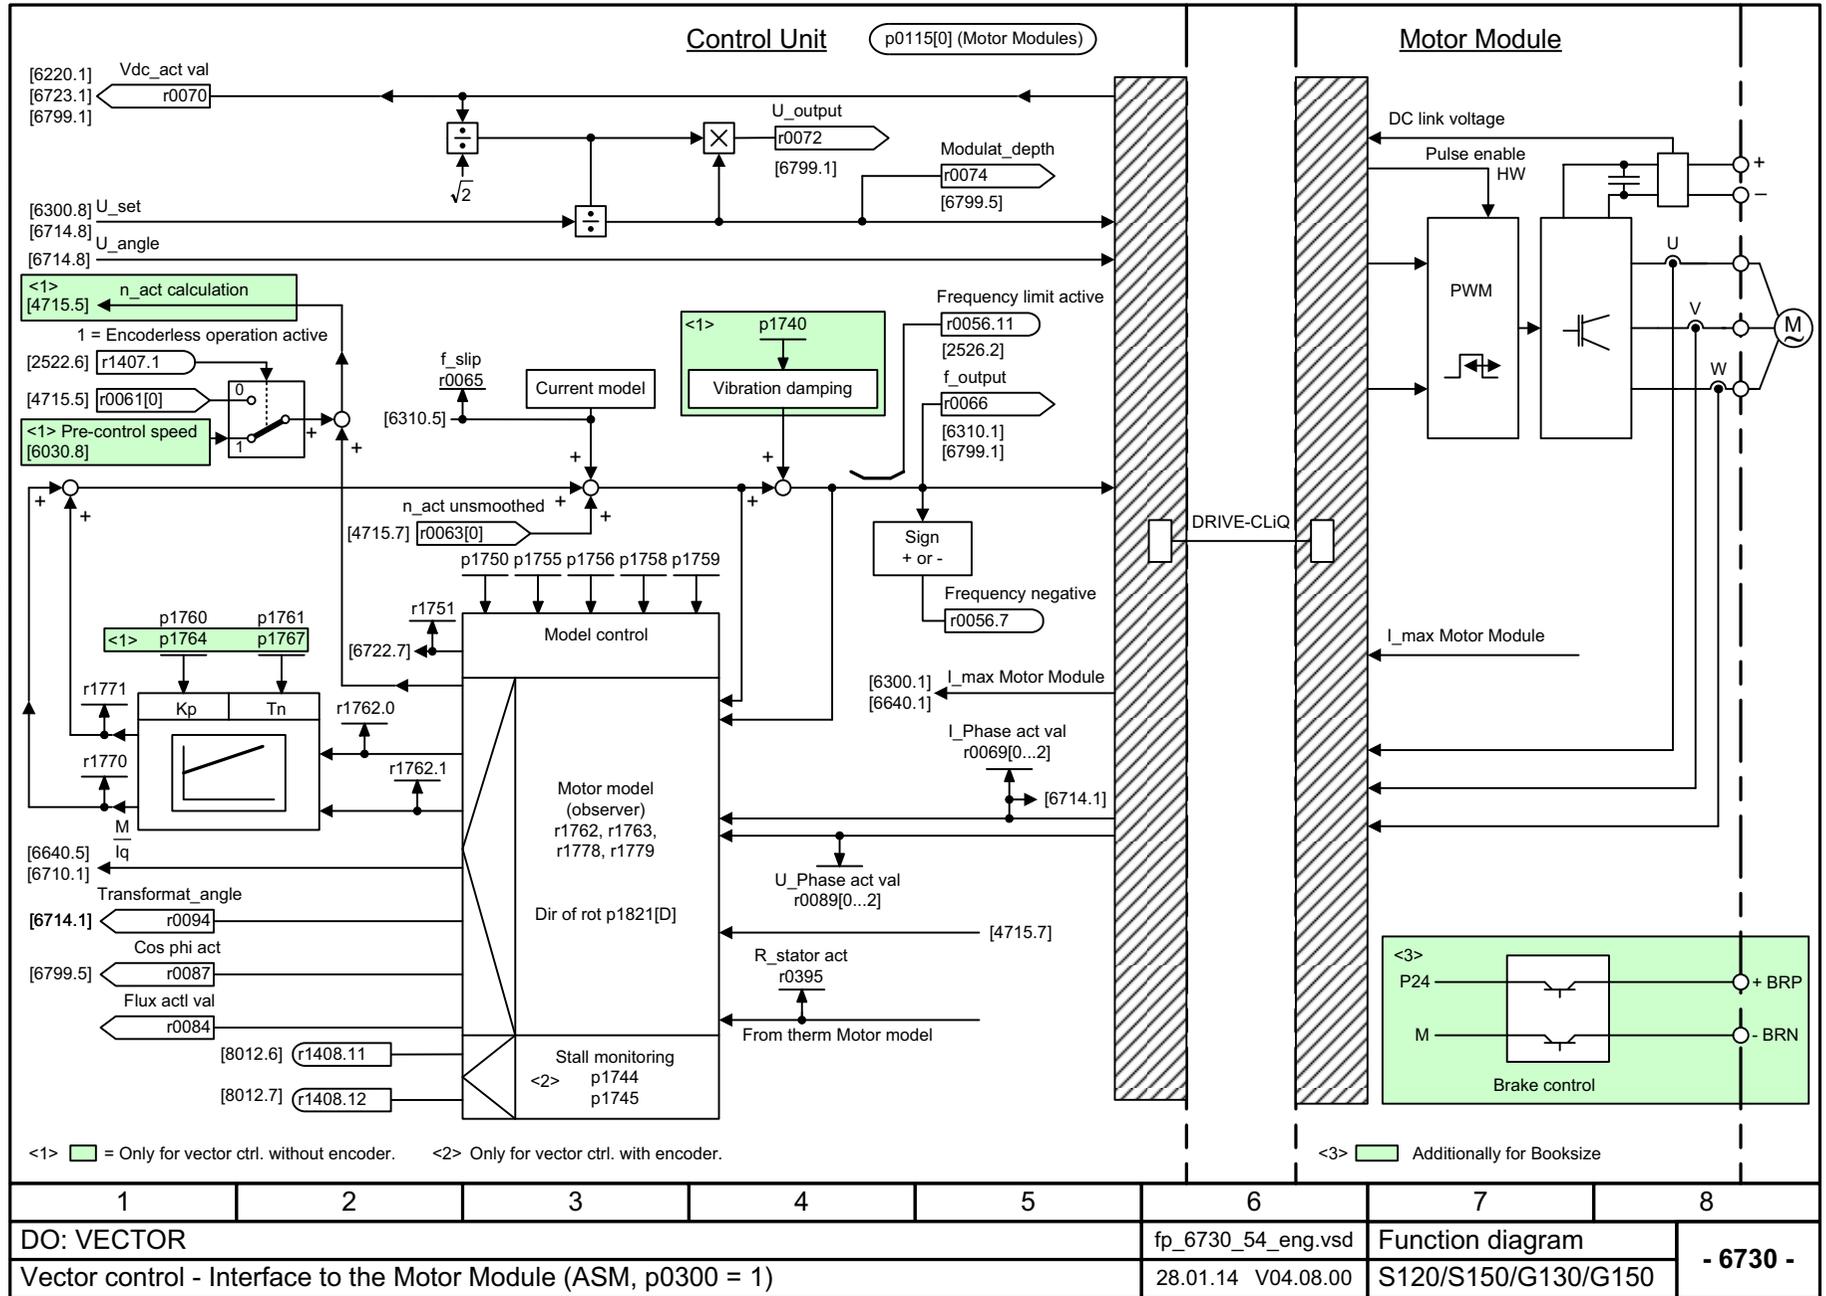


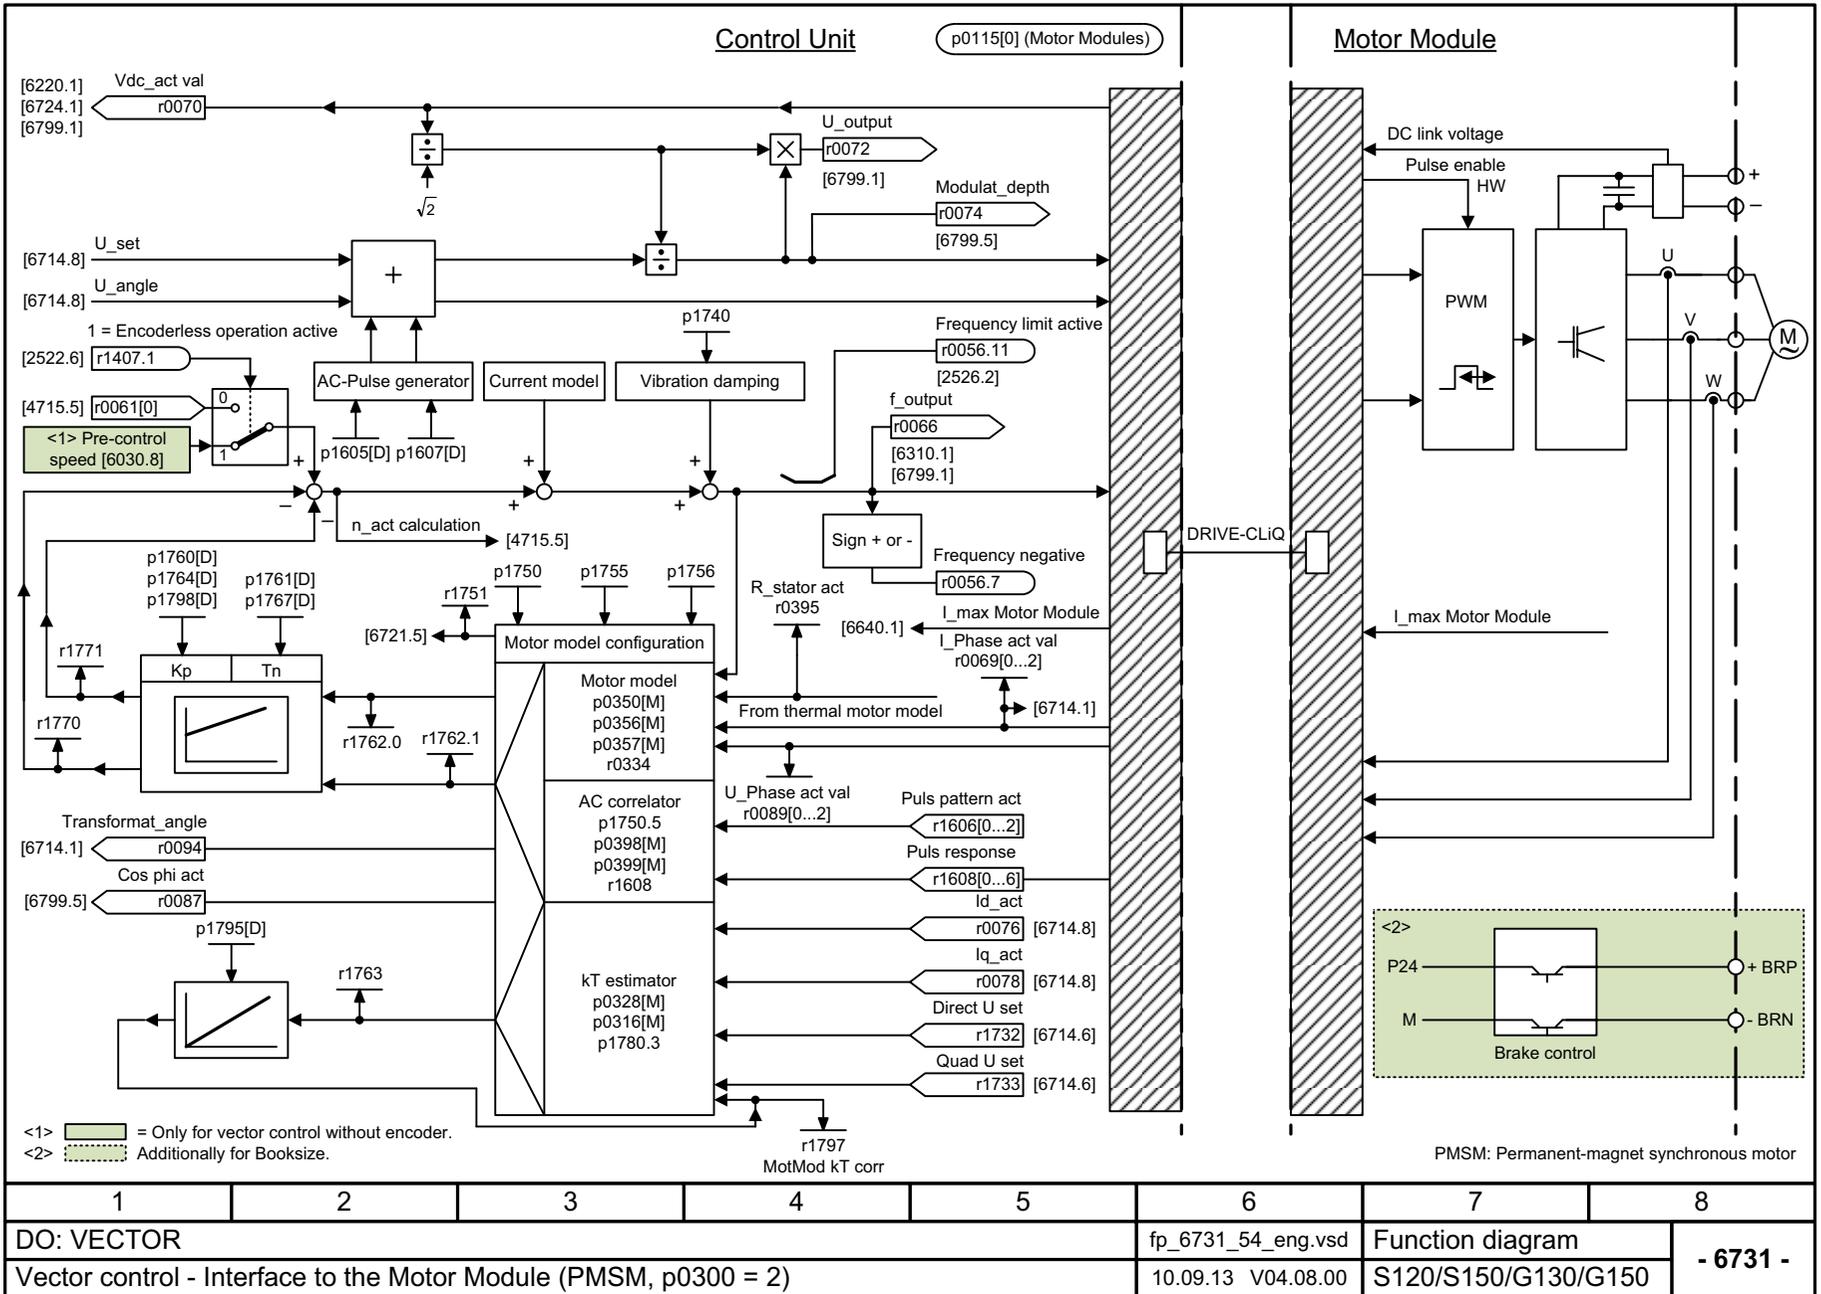


Fig. 3-149 6731 – Interface to the Motor Module (PEM, p0300 = 2)


Fig. 3-150 6790 – Flux setpoint (RESM, p0300 = 6)


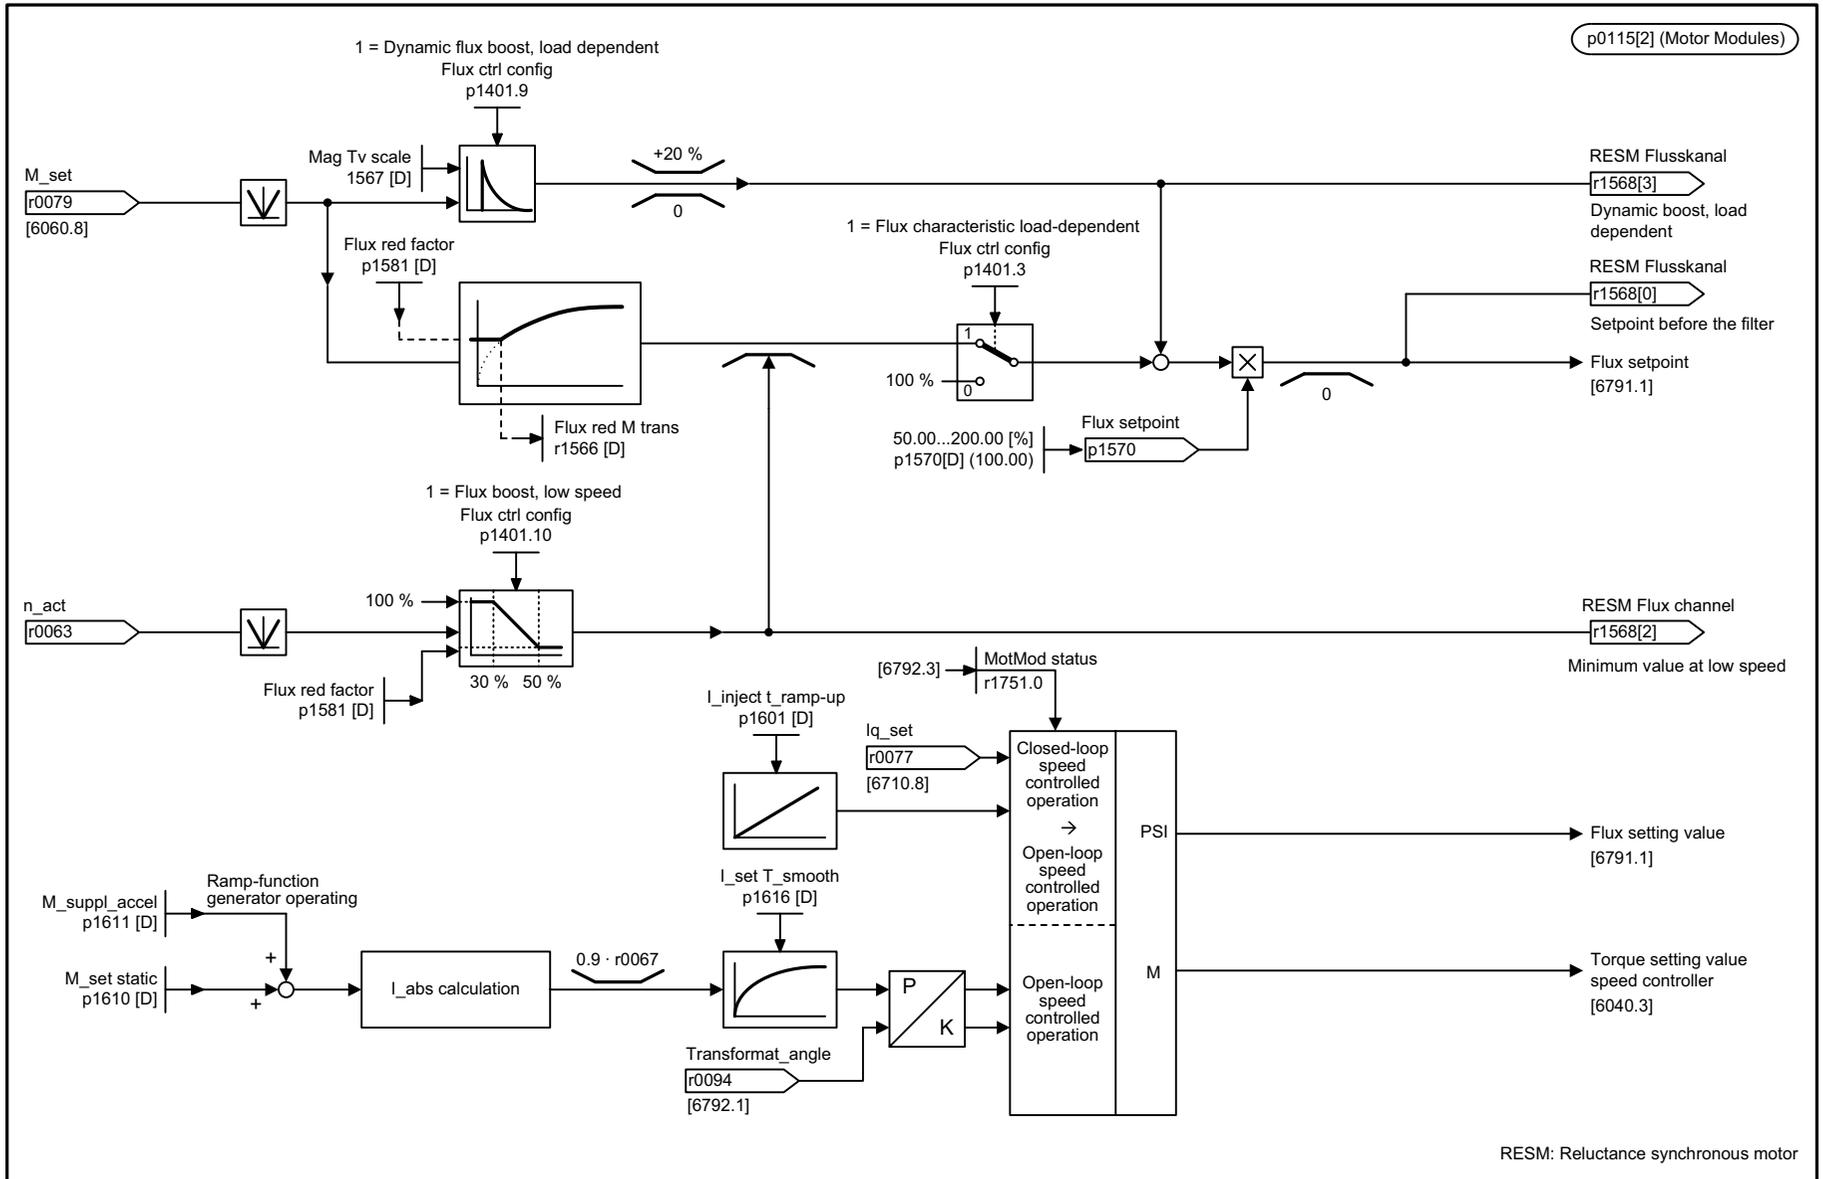


1	2	3	4	5	6	7	8
DO: VECTOR					fp_6790_54_eng.vsd	Function diagram	
Vector control - Flux setpoint (RESM, p0300 = 6)					07.03.16 V04.08.00	S120/S150/G130/G150	
							<b>- 6790 -</b>



Fig. 3-152 6792 – Interface to the Motor Module (RESM, p0300 = 6)

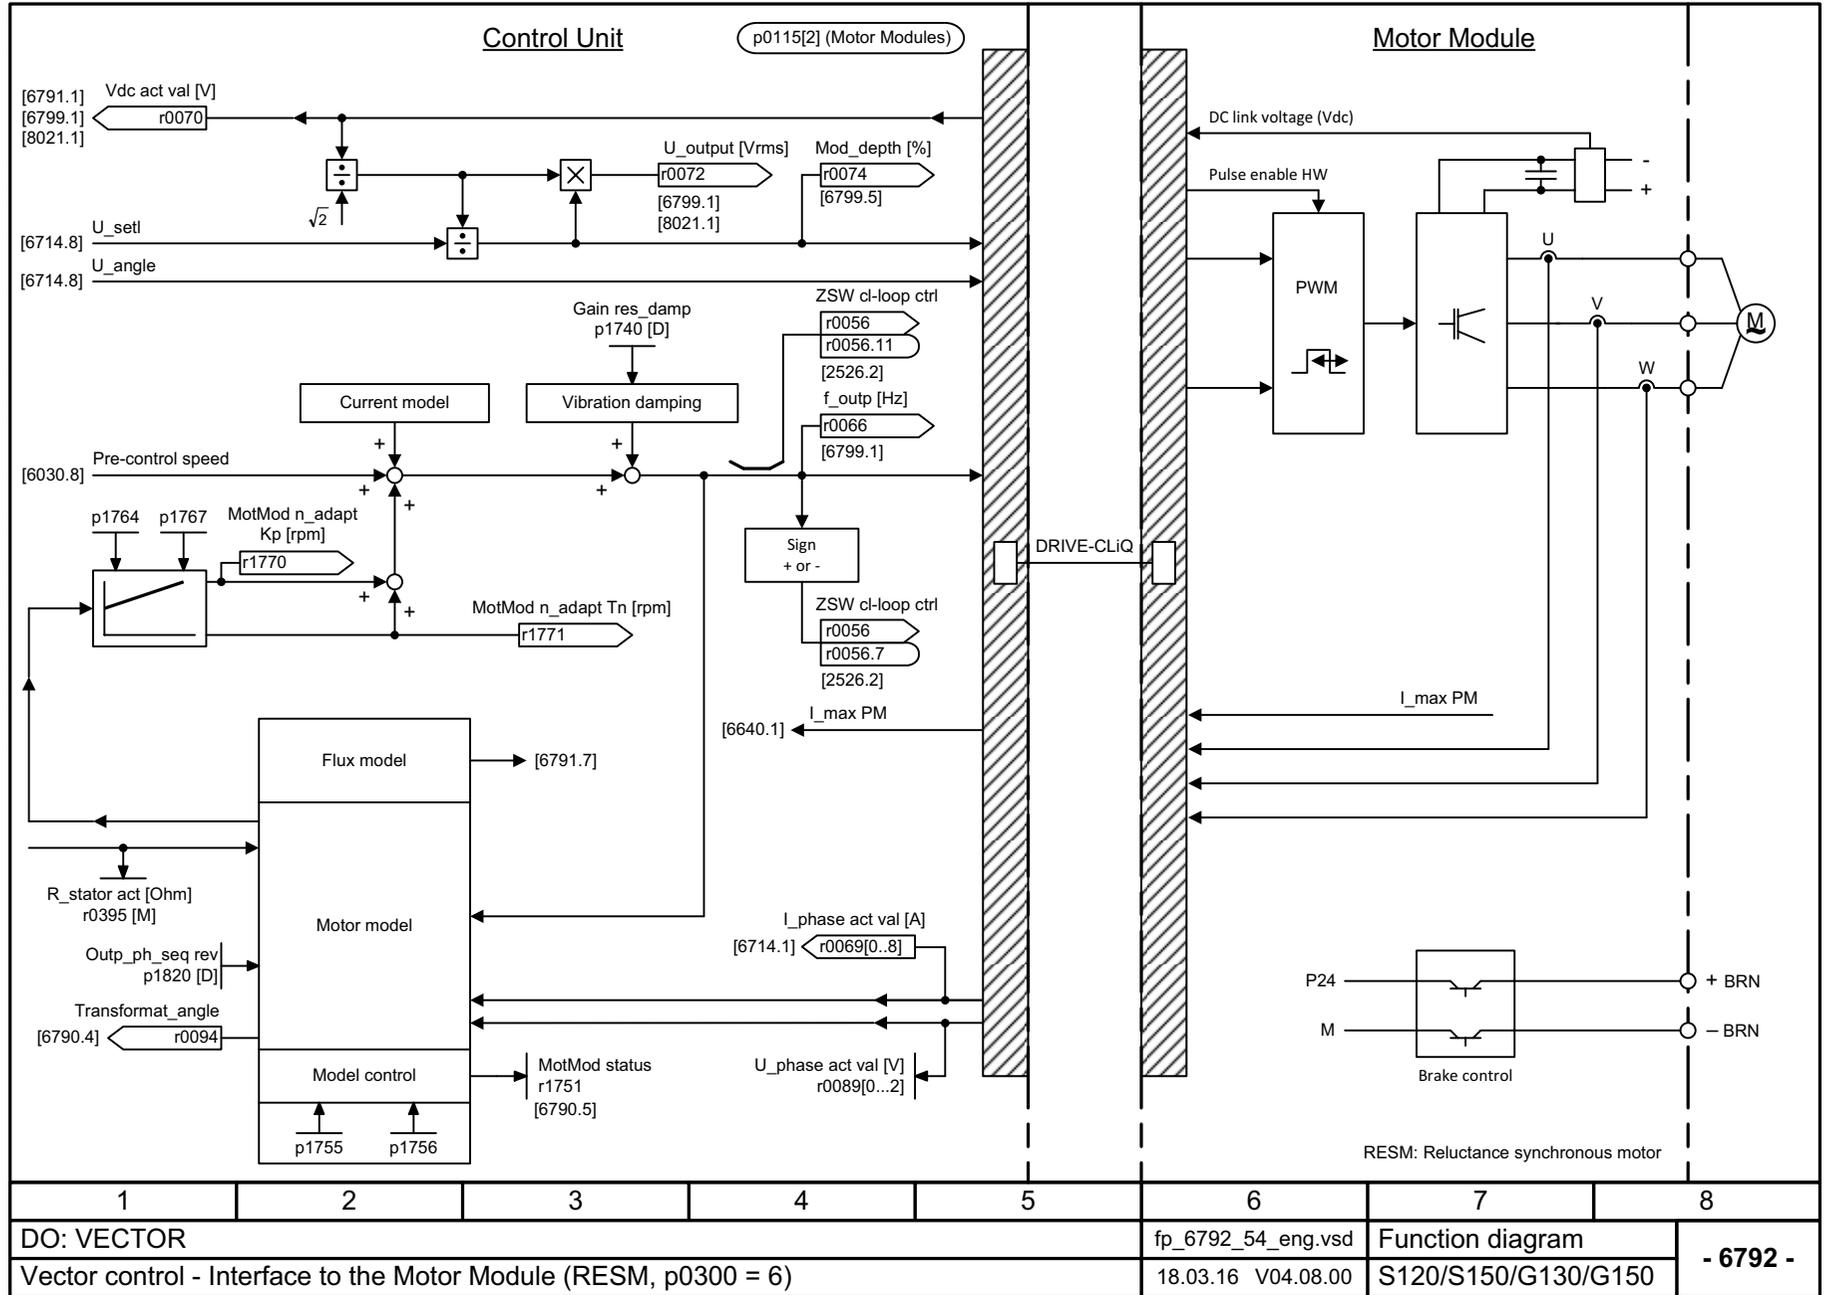

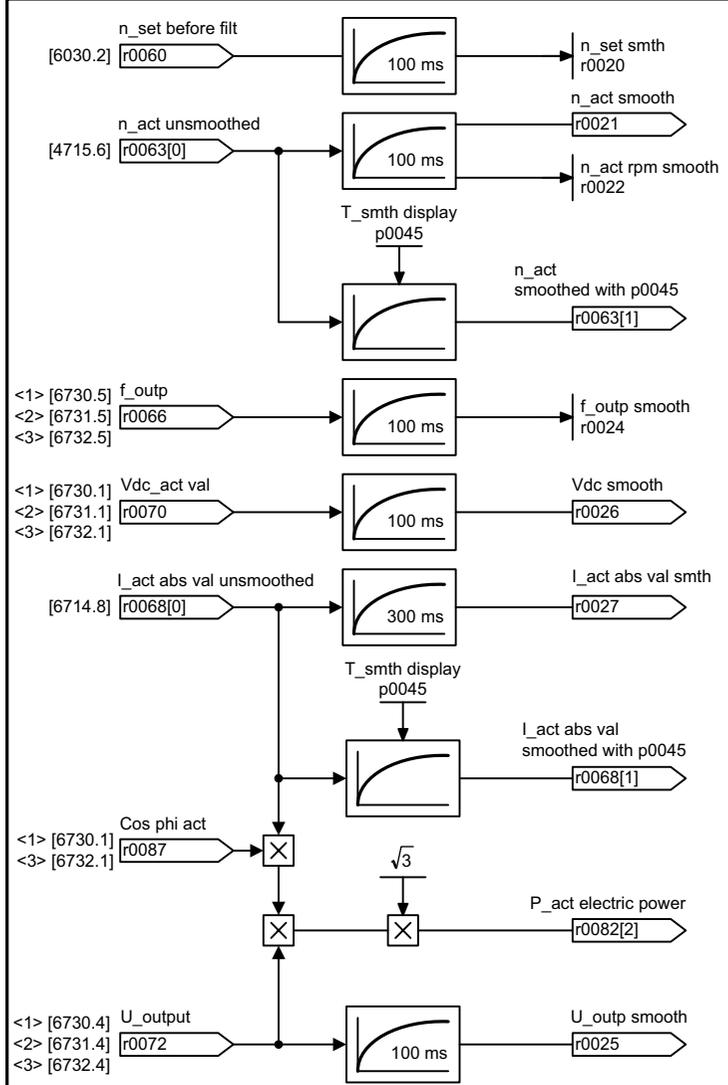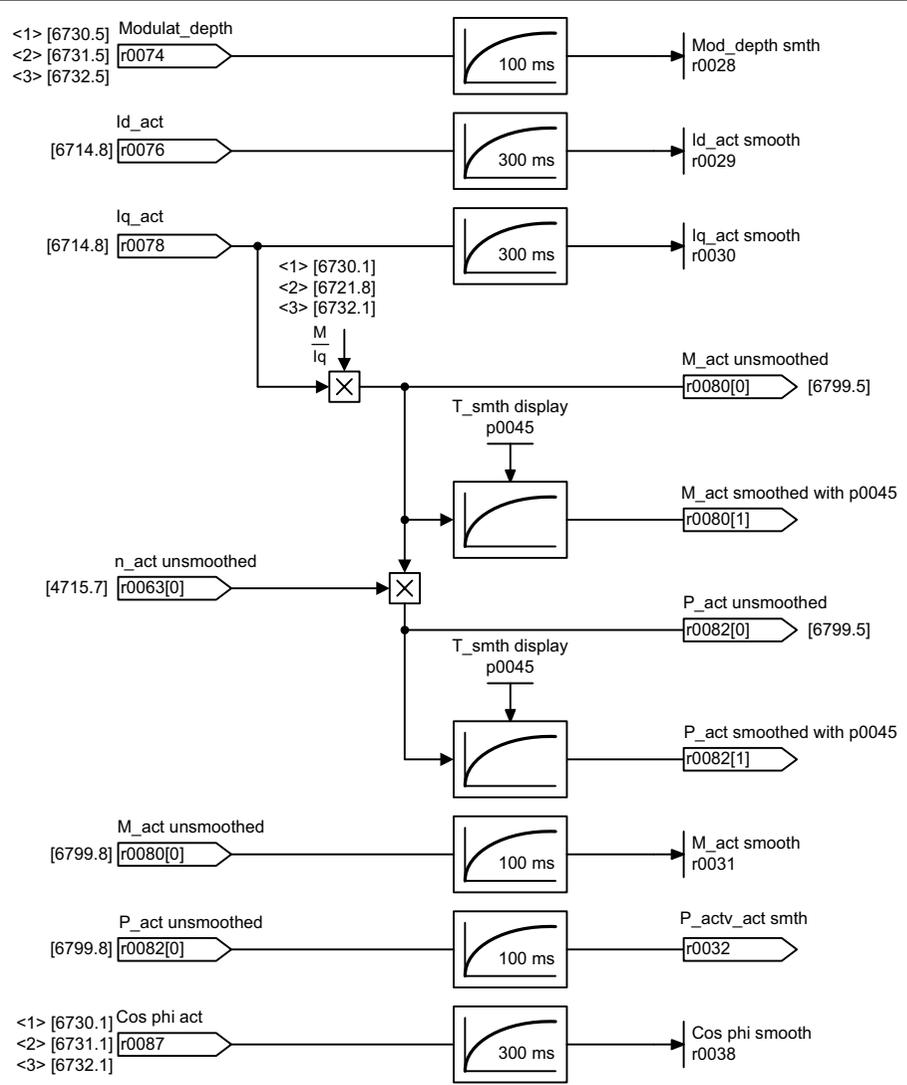

<1> For induction motors.  
 <2> For synchronous motors.  
 <3> Only for SINAMICS S120/S150 and separately-excited synchronous motors.

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6799_54_eng.vsd	Function diagram	
Vector control - Display signals					11.06.13 V04.08.00	S120/S150/G130/G150	
- 6799 -							


Fig. 3-153 6799 – Display signals

## 3.17 Technology functions

### Function diagrams


7010 – Friction characteristic	1272
7014 – External Armature Short-Circuit (EASC, p0300 = 2xx or 4xx)	1273
7016 – Internal Armature Short-Circuit (IASC, p0300 = 2xx or 4xx)	1274
7017 – DC braking (p0300 = 1xx)	1275
7020 – Synchronization	1276
7033 – Essential service mode (ESM)	1277



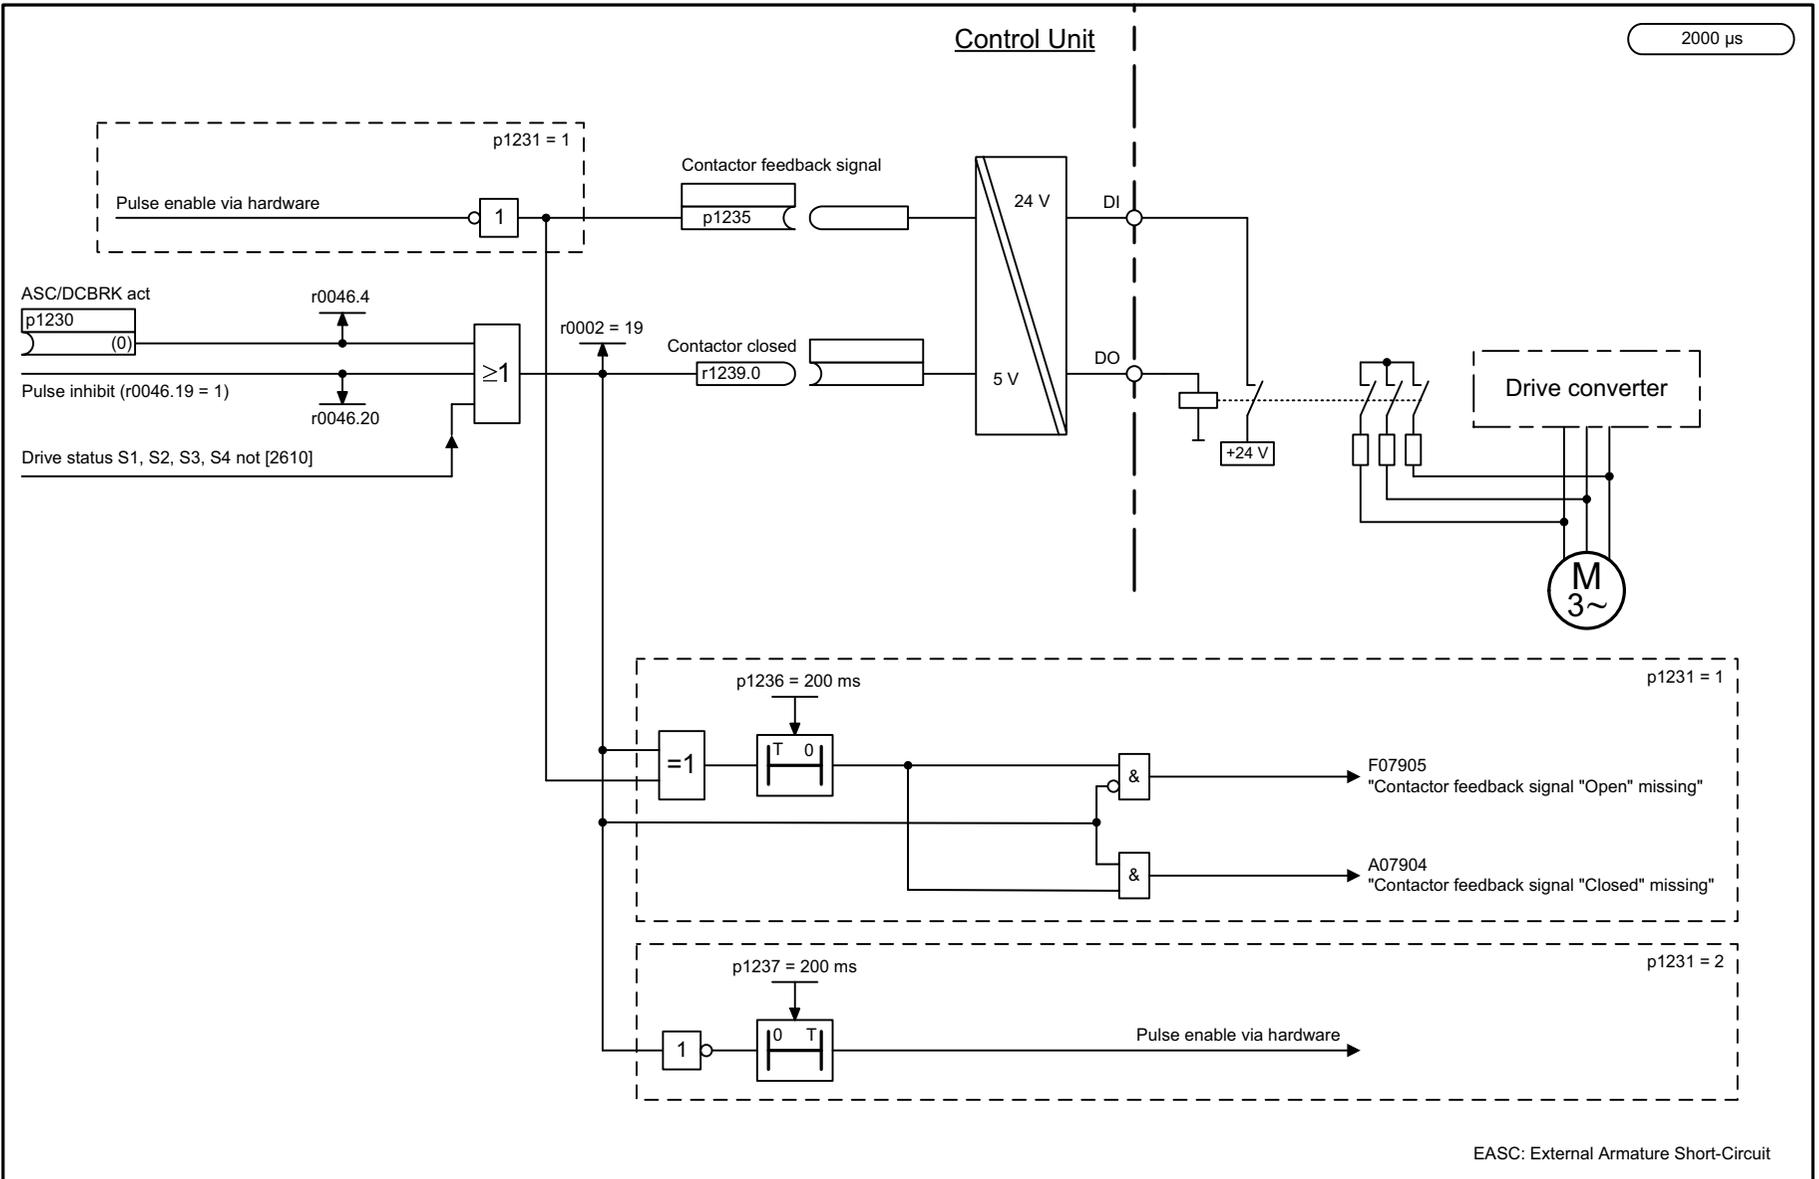

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_7014_54_eng.vsd	Function diagram	
Technology functions - External Armature Short-Circuit (EASC, p0300 = 2xx or 4xx)					04.05.16 V04.08.00	S120/S150/G130/G150	
							<b>- 7014 -</b>

Fig. 3-155 7014 – External Armature Short-Circuit (EASC, p0300 = 2xx or 4xx)

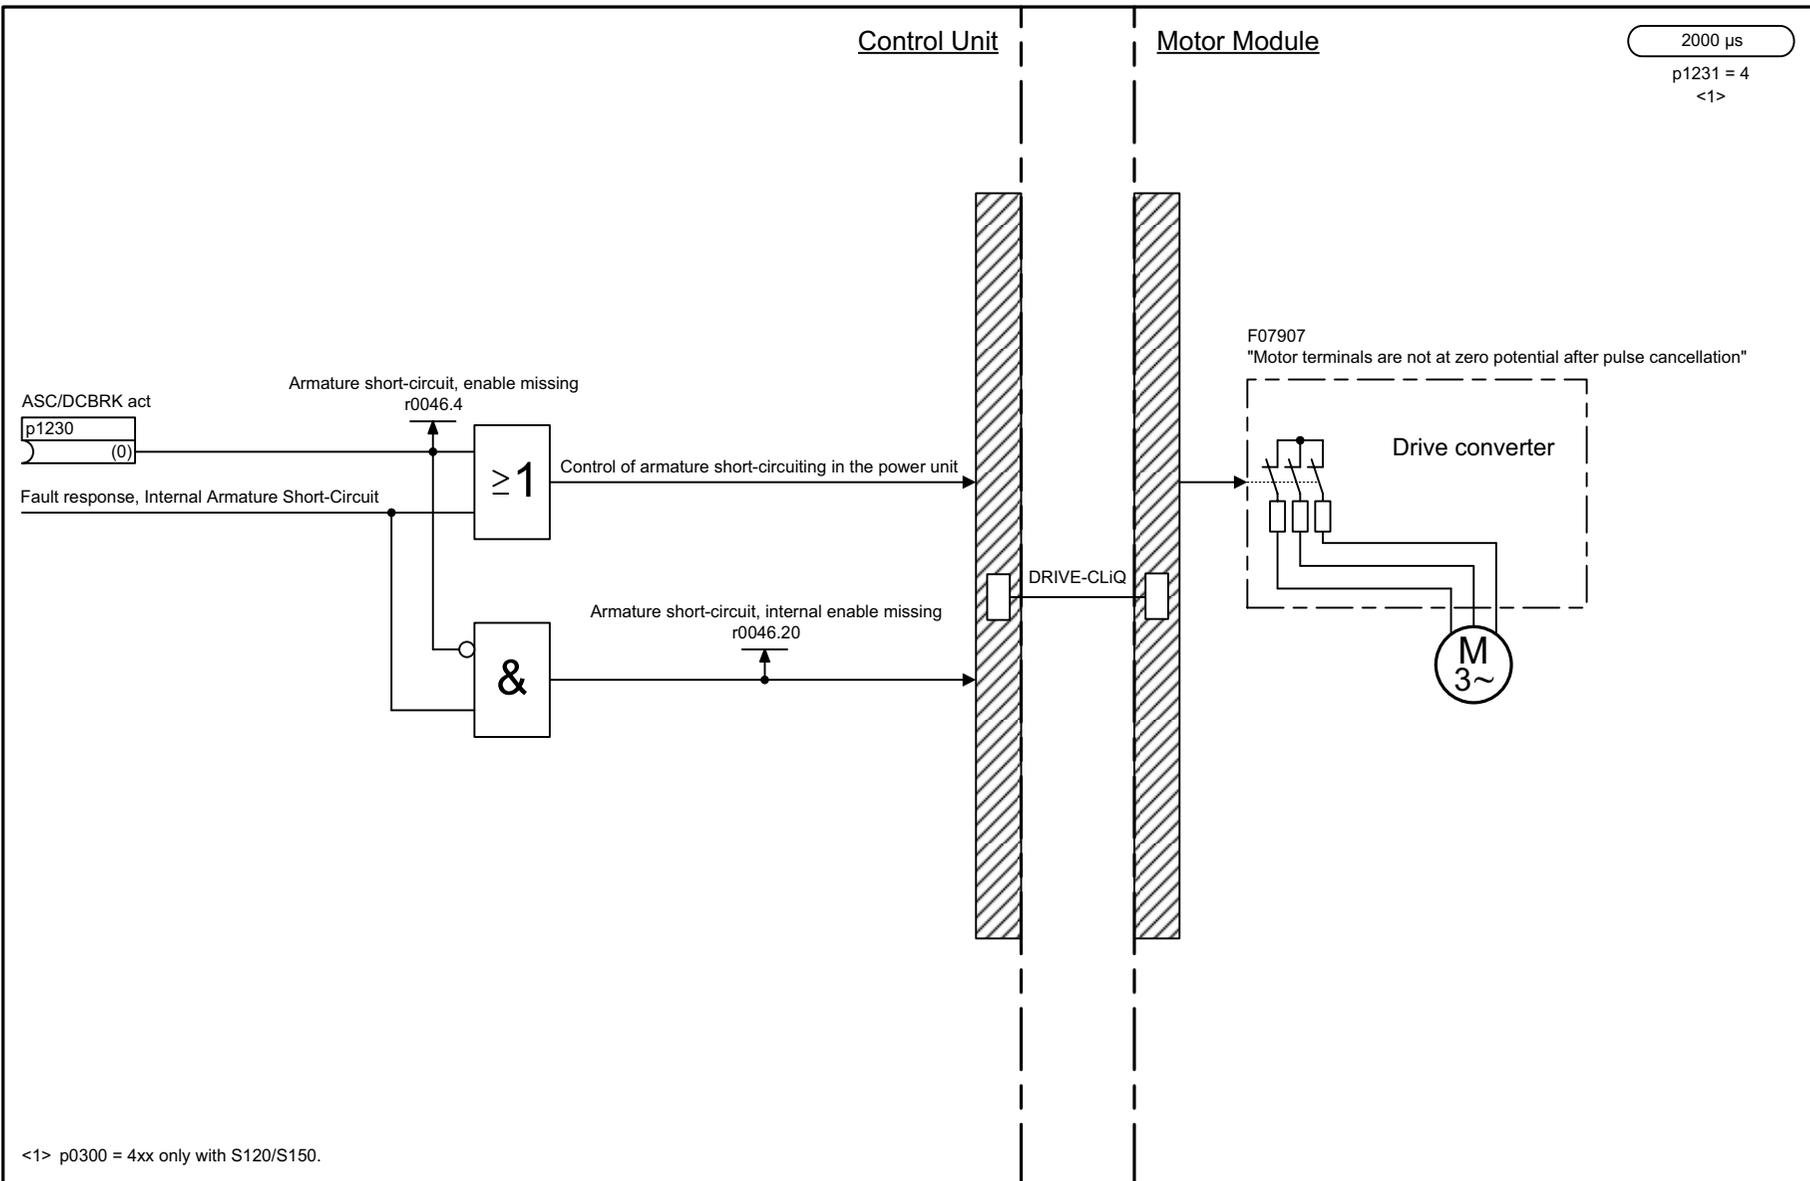


<1> p0300 = 4xx only with S120/S150.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_7016_54_eng.vsd	Function diagram	
Technology functions - Internal Armature Short-Circuit (IASC, p0300 = 2xx or 4xx)					20.12.13 V04.08.00	S120/S150/G130/G150	
							<b>- 7016 -</b>

Fig. 3-156 7016 – Internal Armature Short-Circuit (IASC, p0300 = 2xx or 4xx)

Fig. 3-157 7017 – DC braking (p0300 = 1xx)

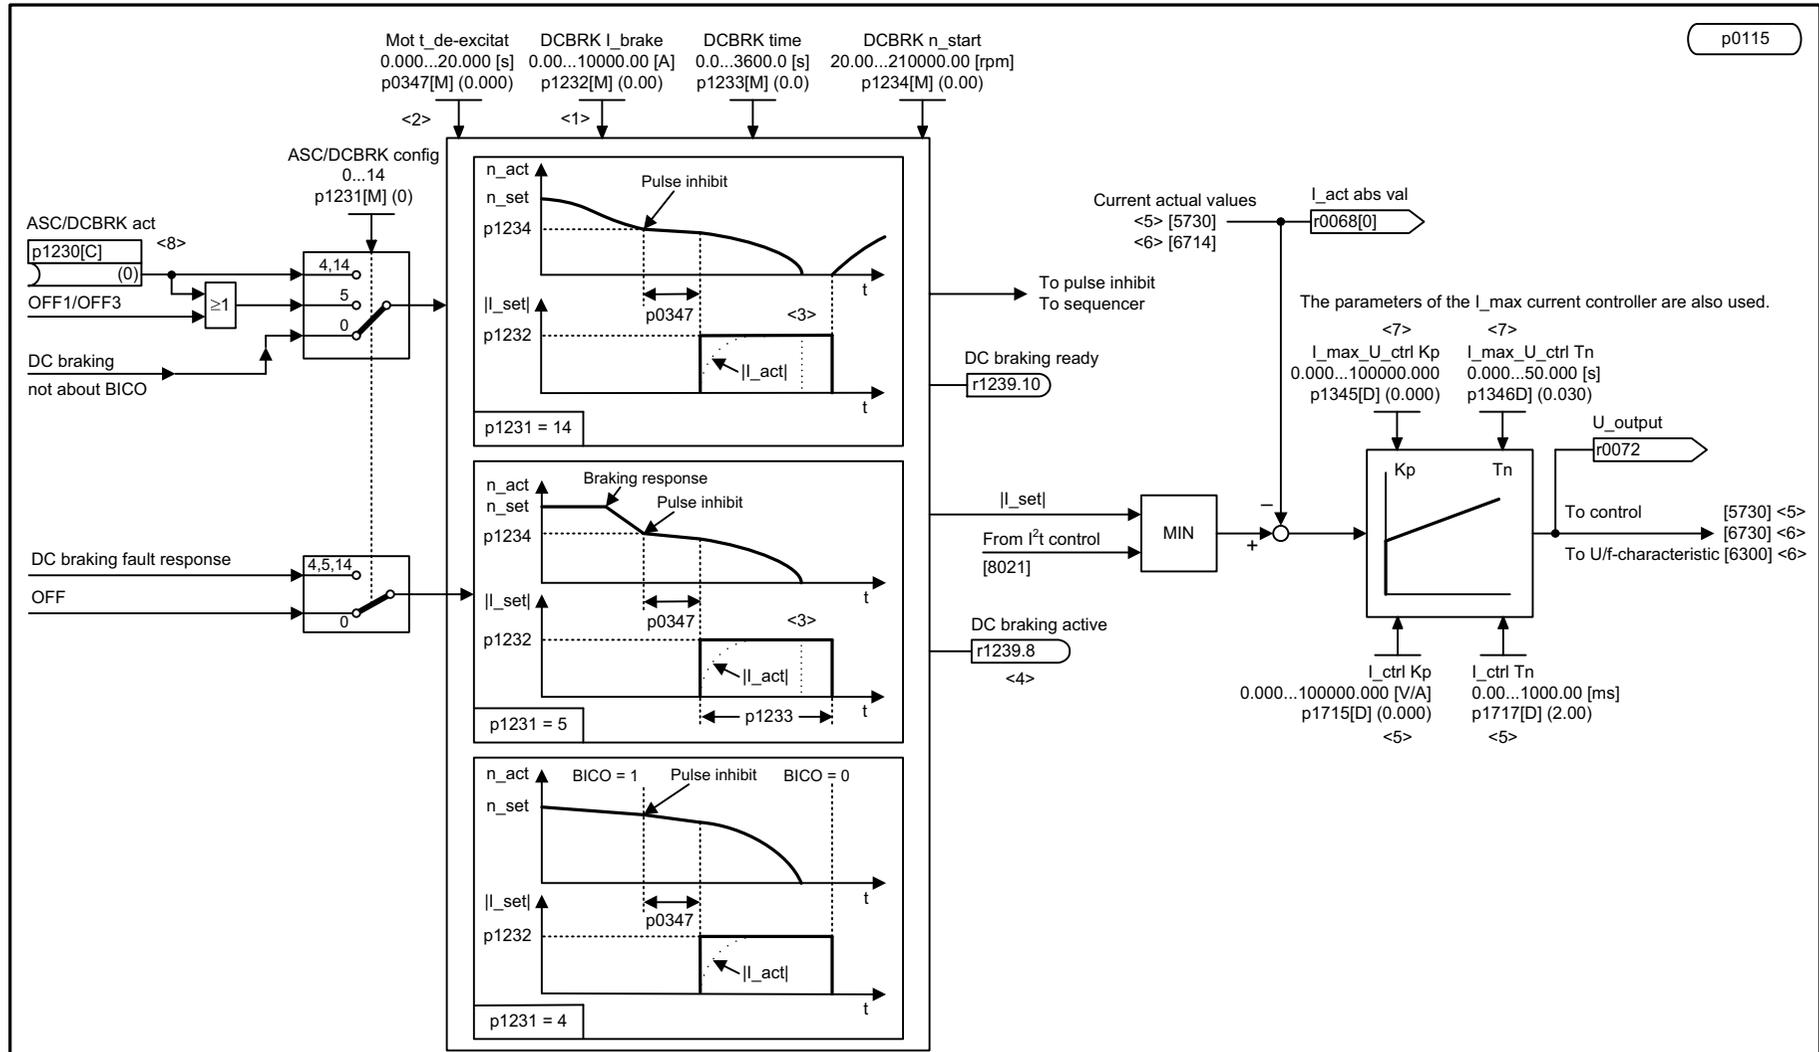

<1> The DC brake current is determined during automatic calculation (p0340 = 1).  
 <2> The de-magnetization time is determined during automatic calculation (p0340 = 1, 3).  
 <3> As soon as the standstill threshold (p1226) has been reached, the DC current injection will be aborted prematurely.  
 <4> Signal r1239.8 is only set while the DC brake is active.

<5> Only for SINAMICS S120 and SERVO.  
 <6> Only for SINAMICS S120 and VECTOR.  
 <7> Only for VECTOR.  
 <8> DC brake upon falling below the starting speed for DC brake (p1234).

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_7017_54_eng.vsd	Function diagram	
Technology functions - DC brake (p0300 = 1xx)					01.04.11 V04.08.00	S120/S150/G130/G150	
							- 7017 -


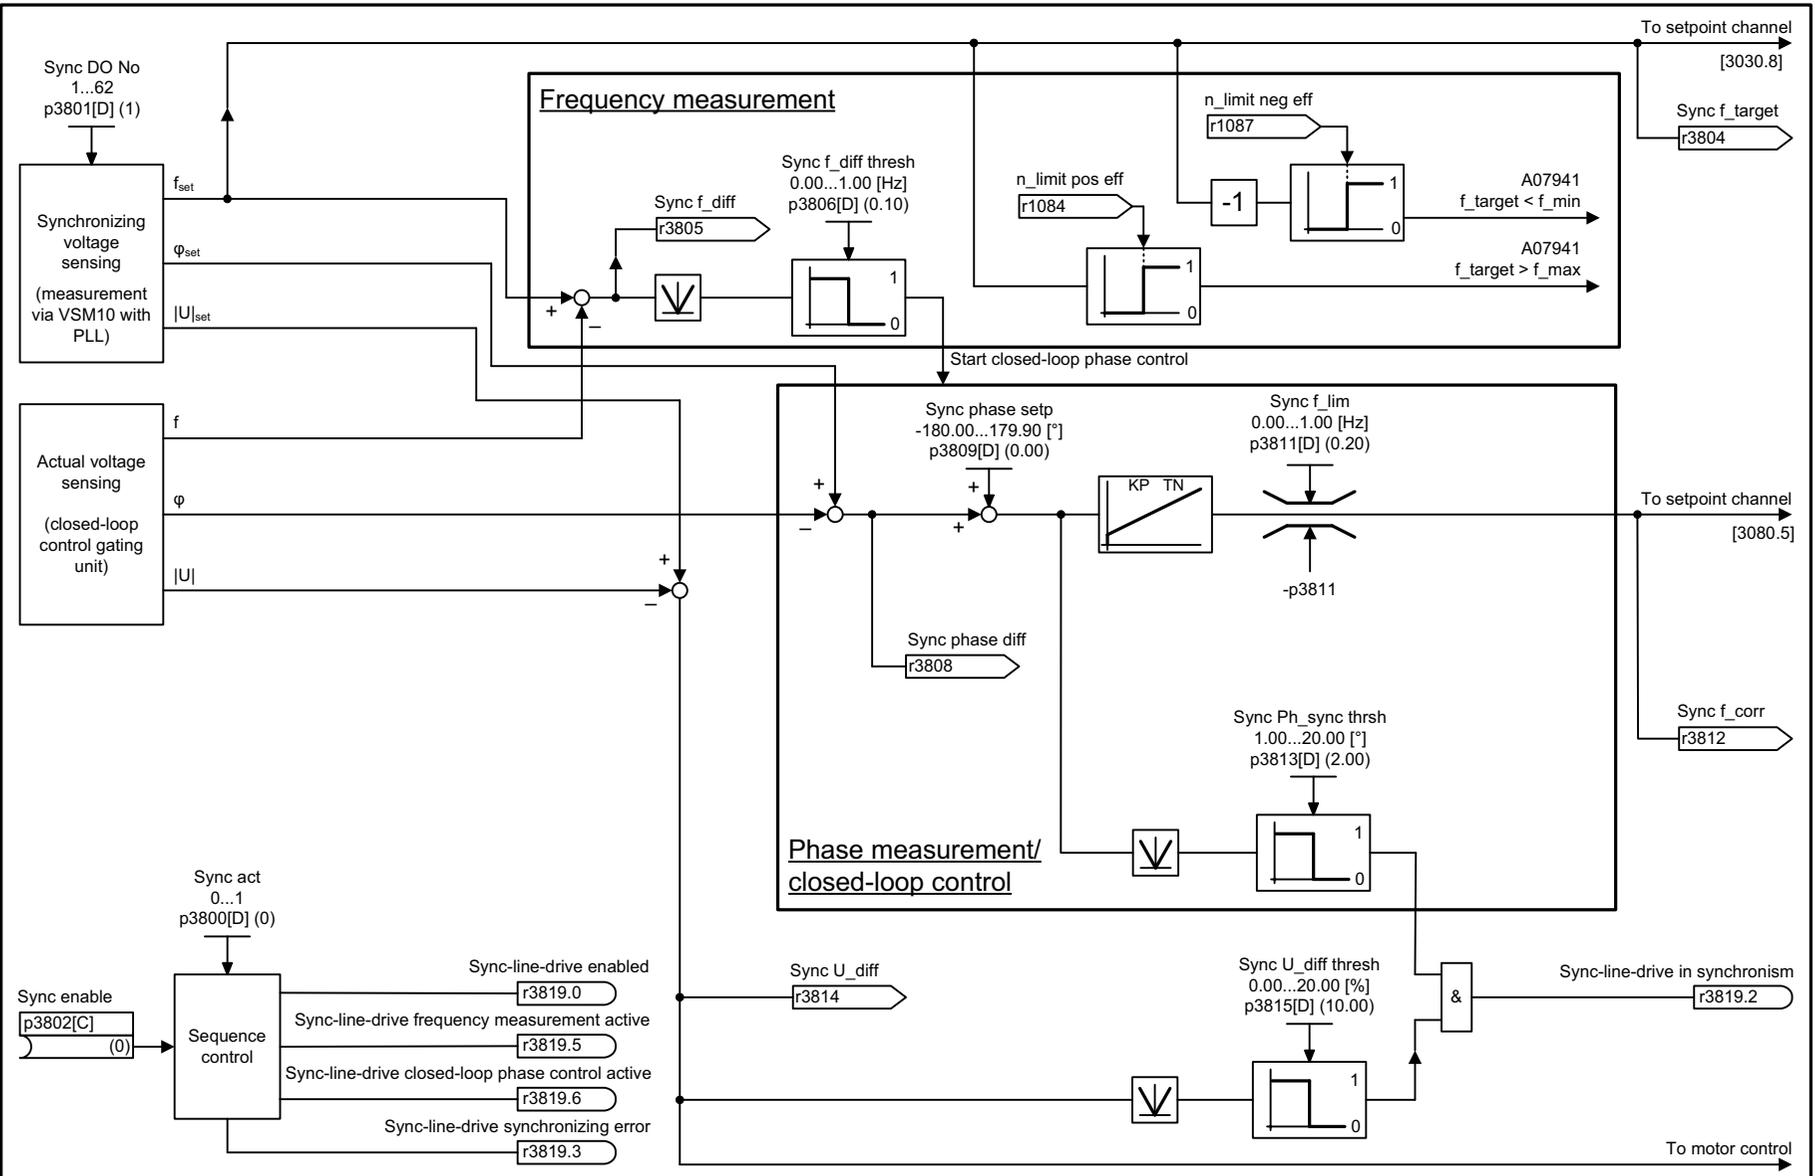


Fig. 3-158 7020 – Synchronization

1	2	3	4	5	6	7	8
DO: VECTOR, VECTOR3P, VECTORMV					fp_7020_51_eng.vsd	Function diagram	
Technology functions - Synchronization					16.01.15 V04.08.00	SINAMICS	
							<b>- 7020 -</b>

Fig. 3-159 7033 – Essential service mode (ESM)

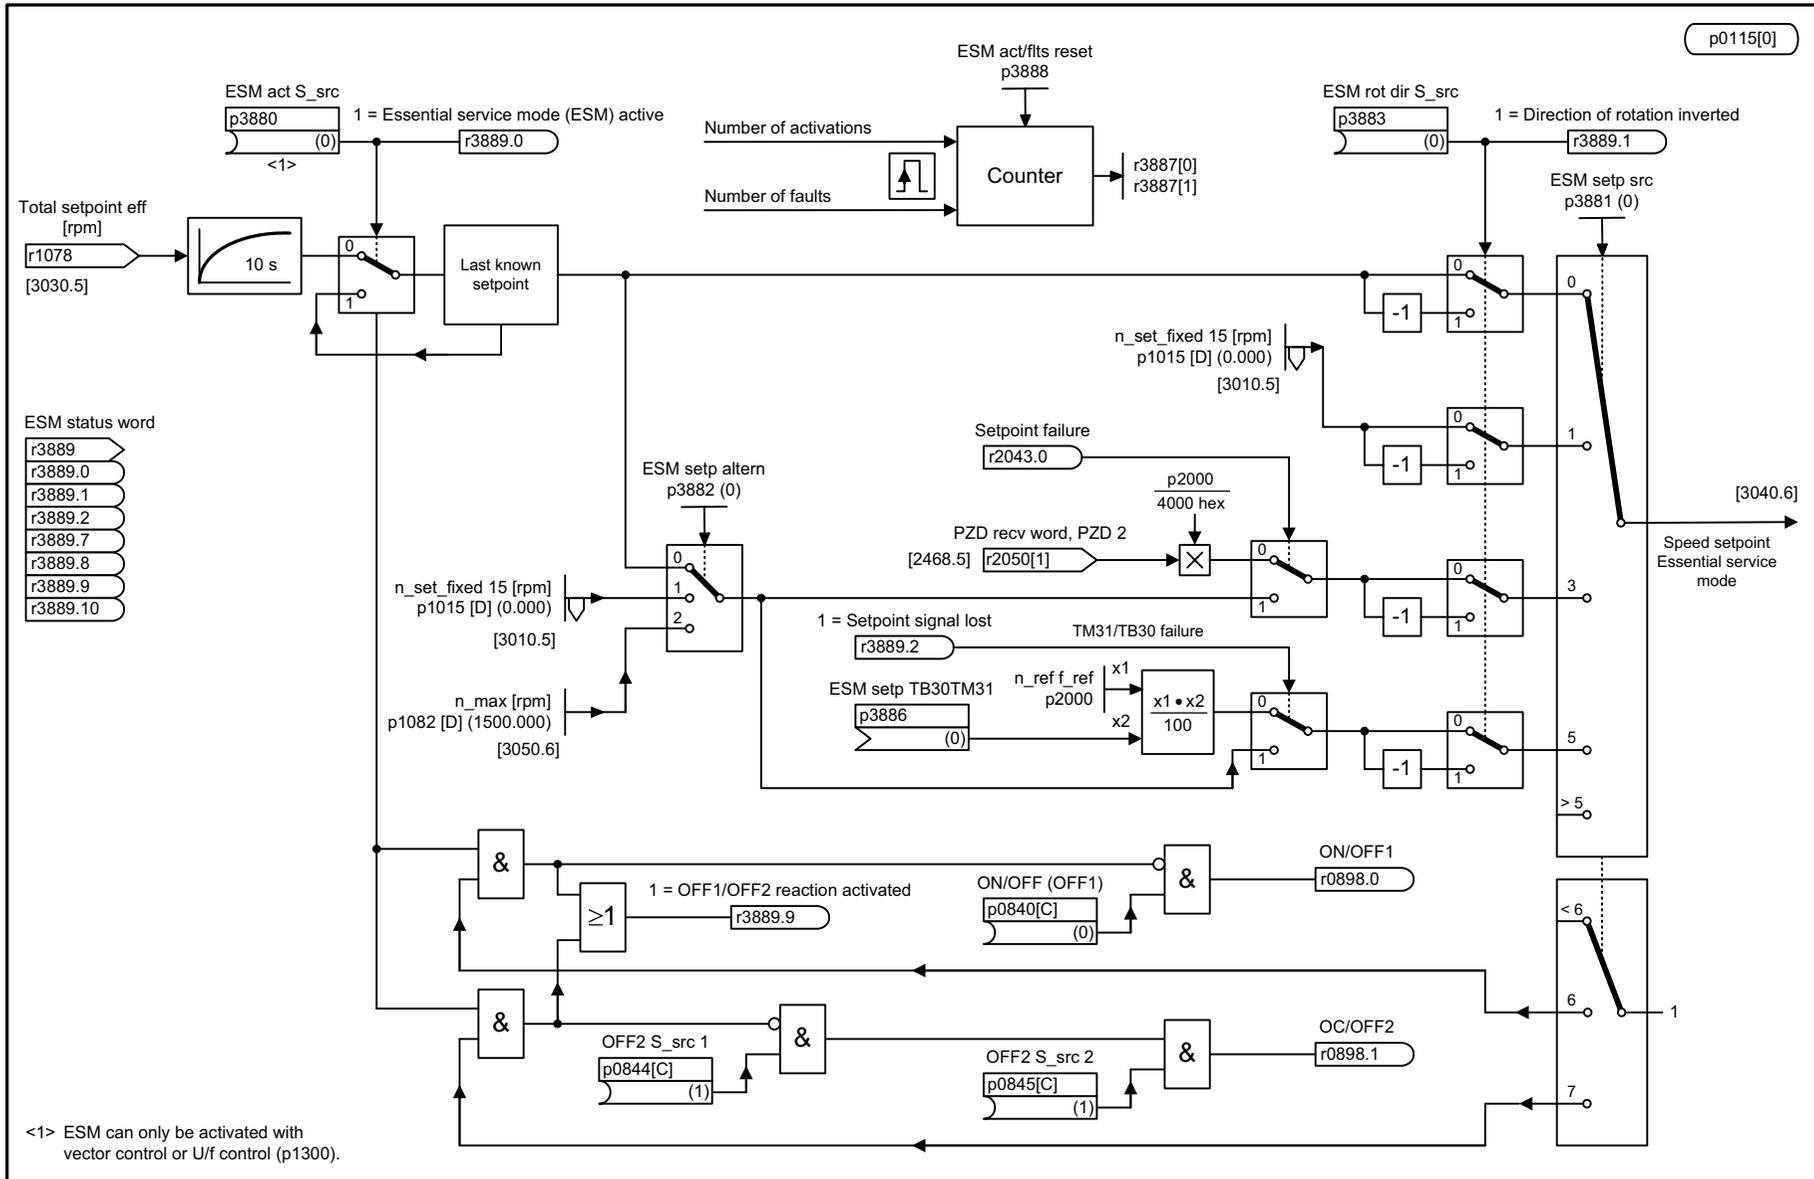


<1> ESM can only be activated with vector control or U/f control (p1300).

1	2	3	4	5	6	7	8
DO: VECTOR					fp_7033_54_eng.vsd	Function diagram	
Technology functions - Essential Service Mode (ESM)					12.05.14 V04.08.00	S150/G130/G150	
							- 7033 -

## 3.18 Technology controller

### Function diagrams

7950 – Fixed values, binary selection (r0108.16 = 1 and p2216 = 2)	1279
7951 – Fixed values, direct selection (r0108.16 = 1 and p2216 = 1)	1280
7954 – Motorized potentiometer (r0108.16 = 1)	1281
7958 – Closed-loop control (r0108.16 = 1)	1282
7960 – DC-link voltage controller (r0108.16 = 1)	1283

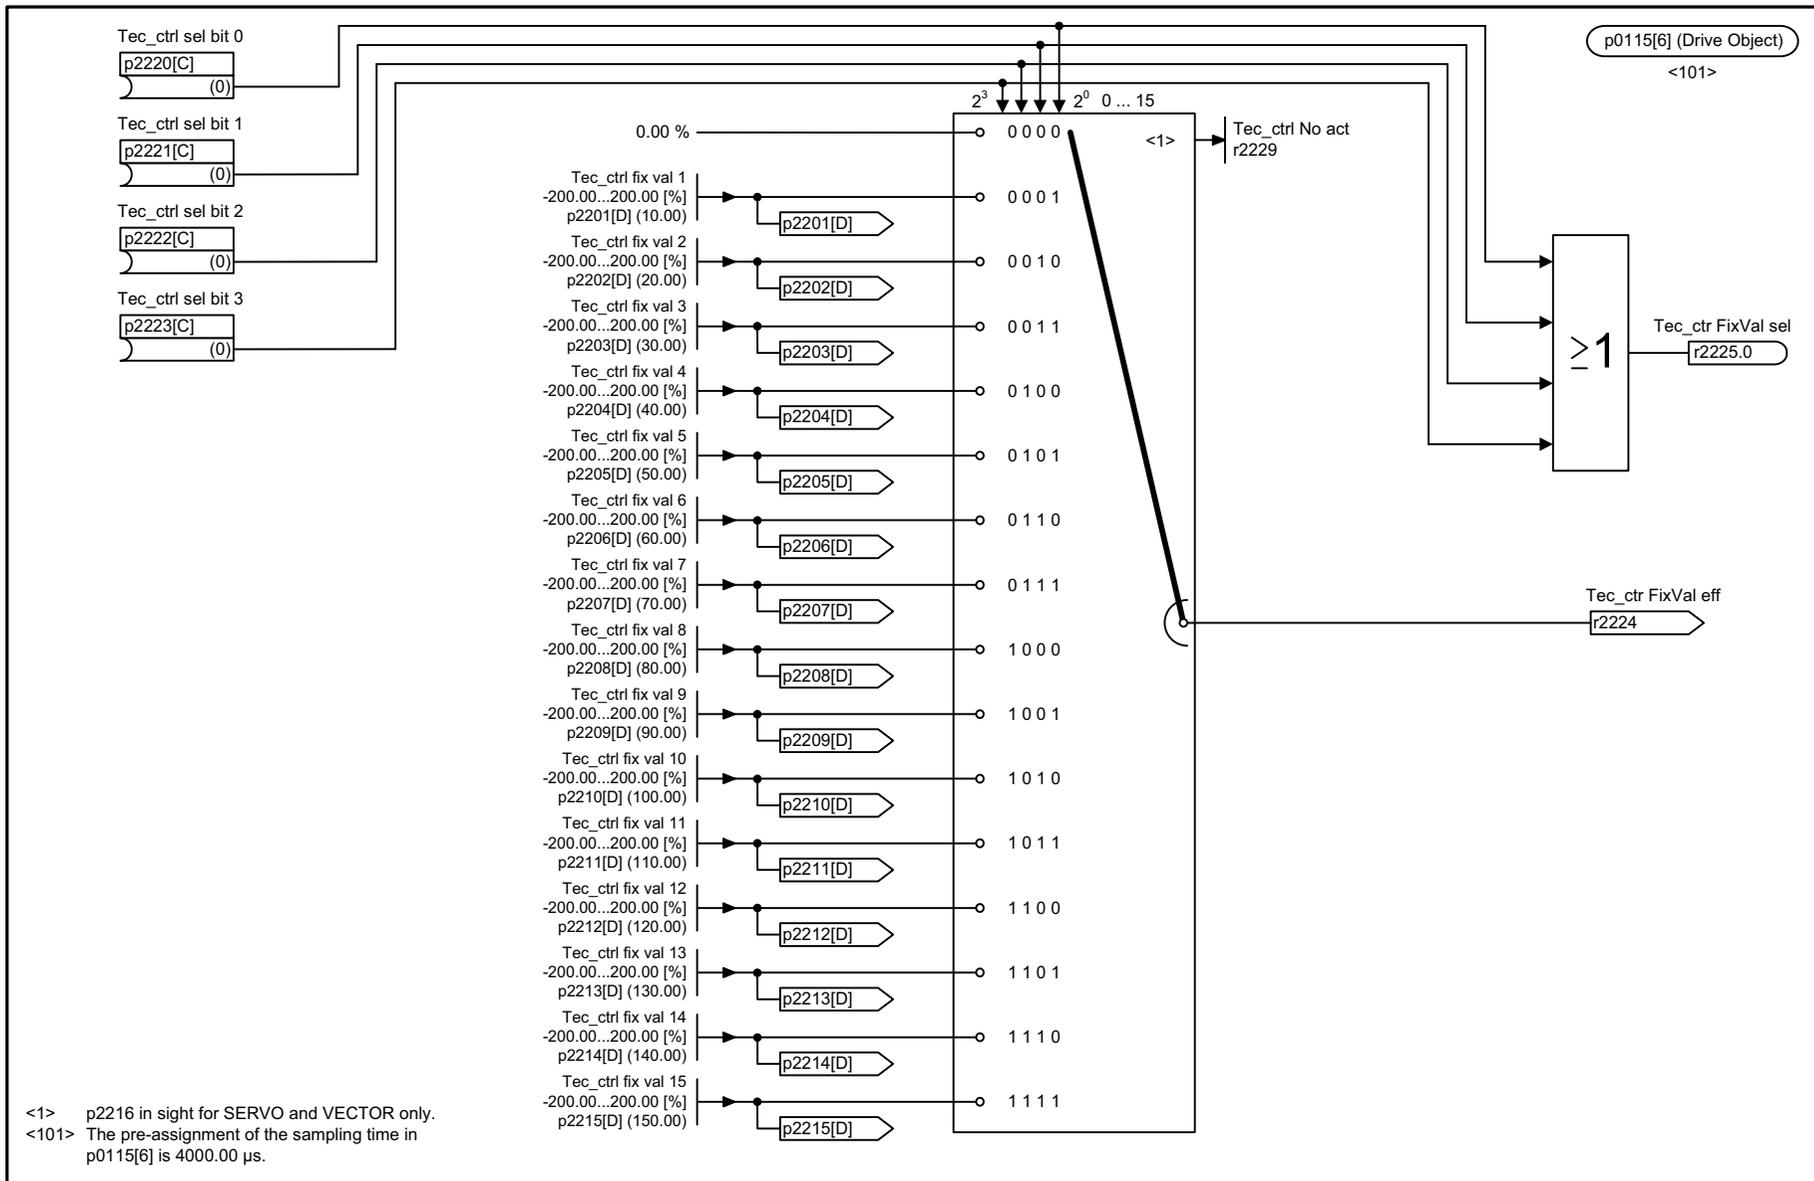

<1> p2216 in sight for SERVO and VECTOR only.  
<101> The pre-assignment of the sampling time in p0115[6] is 4000.00 μs.

Fig. 3-160 7950 – Fixed values, binary selection (r0108.16 = 1 and p2216 = 2)

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORM2C, VECTORMV					fp_7950_51_eng.vsd	Function diagram	
Technology controller - Fixed value selection binary (r0108.16 = 1 and p2216 = 2)					07.01.15 V04.08.00	SINAMICS	
							- 7950 -



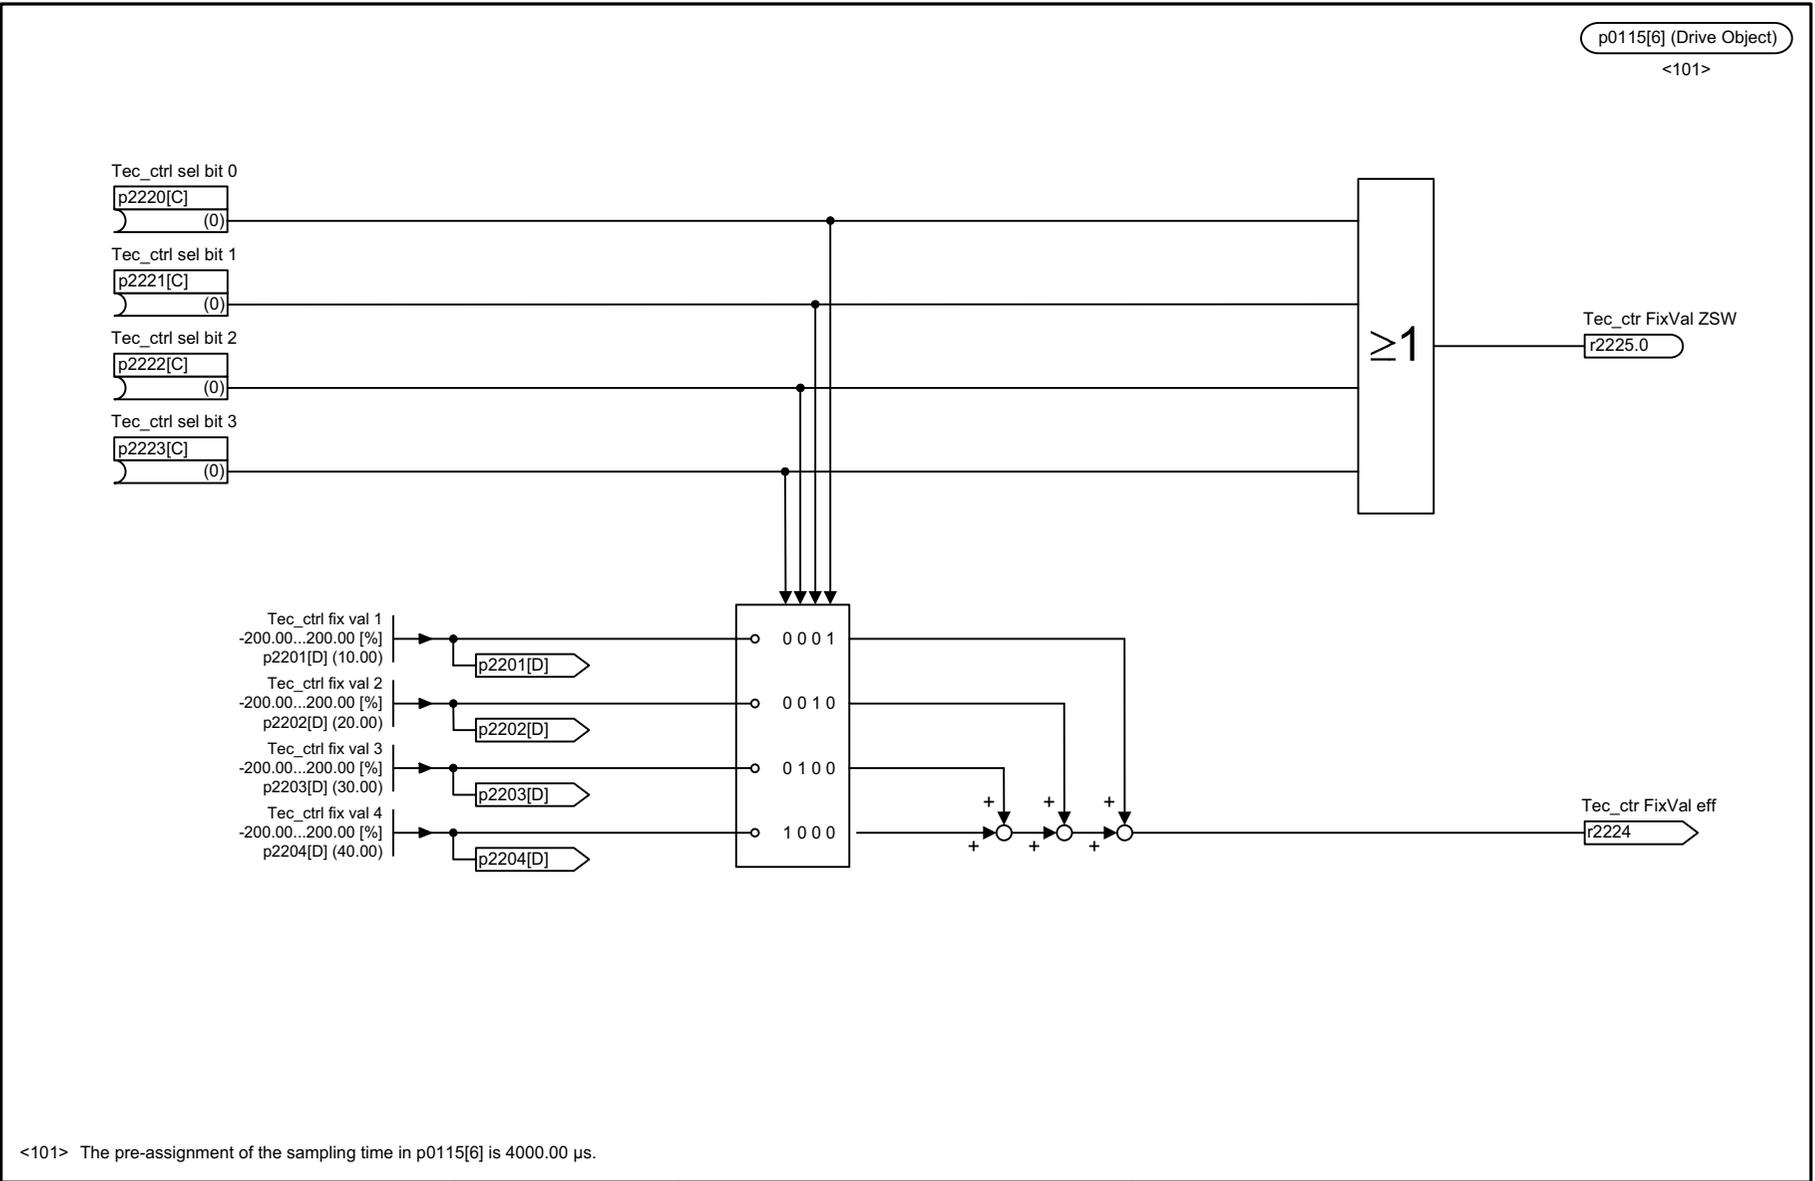


Fig. 3-161 7951 – Fixed values, direct selection (r0108.16 = 1 and p2216 = 1)

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_7951_54_eng.vsd	Function diagram	
Technology controller - Fixed value selection direct (r0108.16 = 1 and p2216 = 1)					12.07.13 V04.08.00	S120/S150/G130/G150	
							<b>- 7951 -</b>

Fig. 3-162 7954 – Motorized potentiometer (r0108.16 = 1)

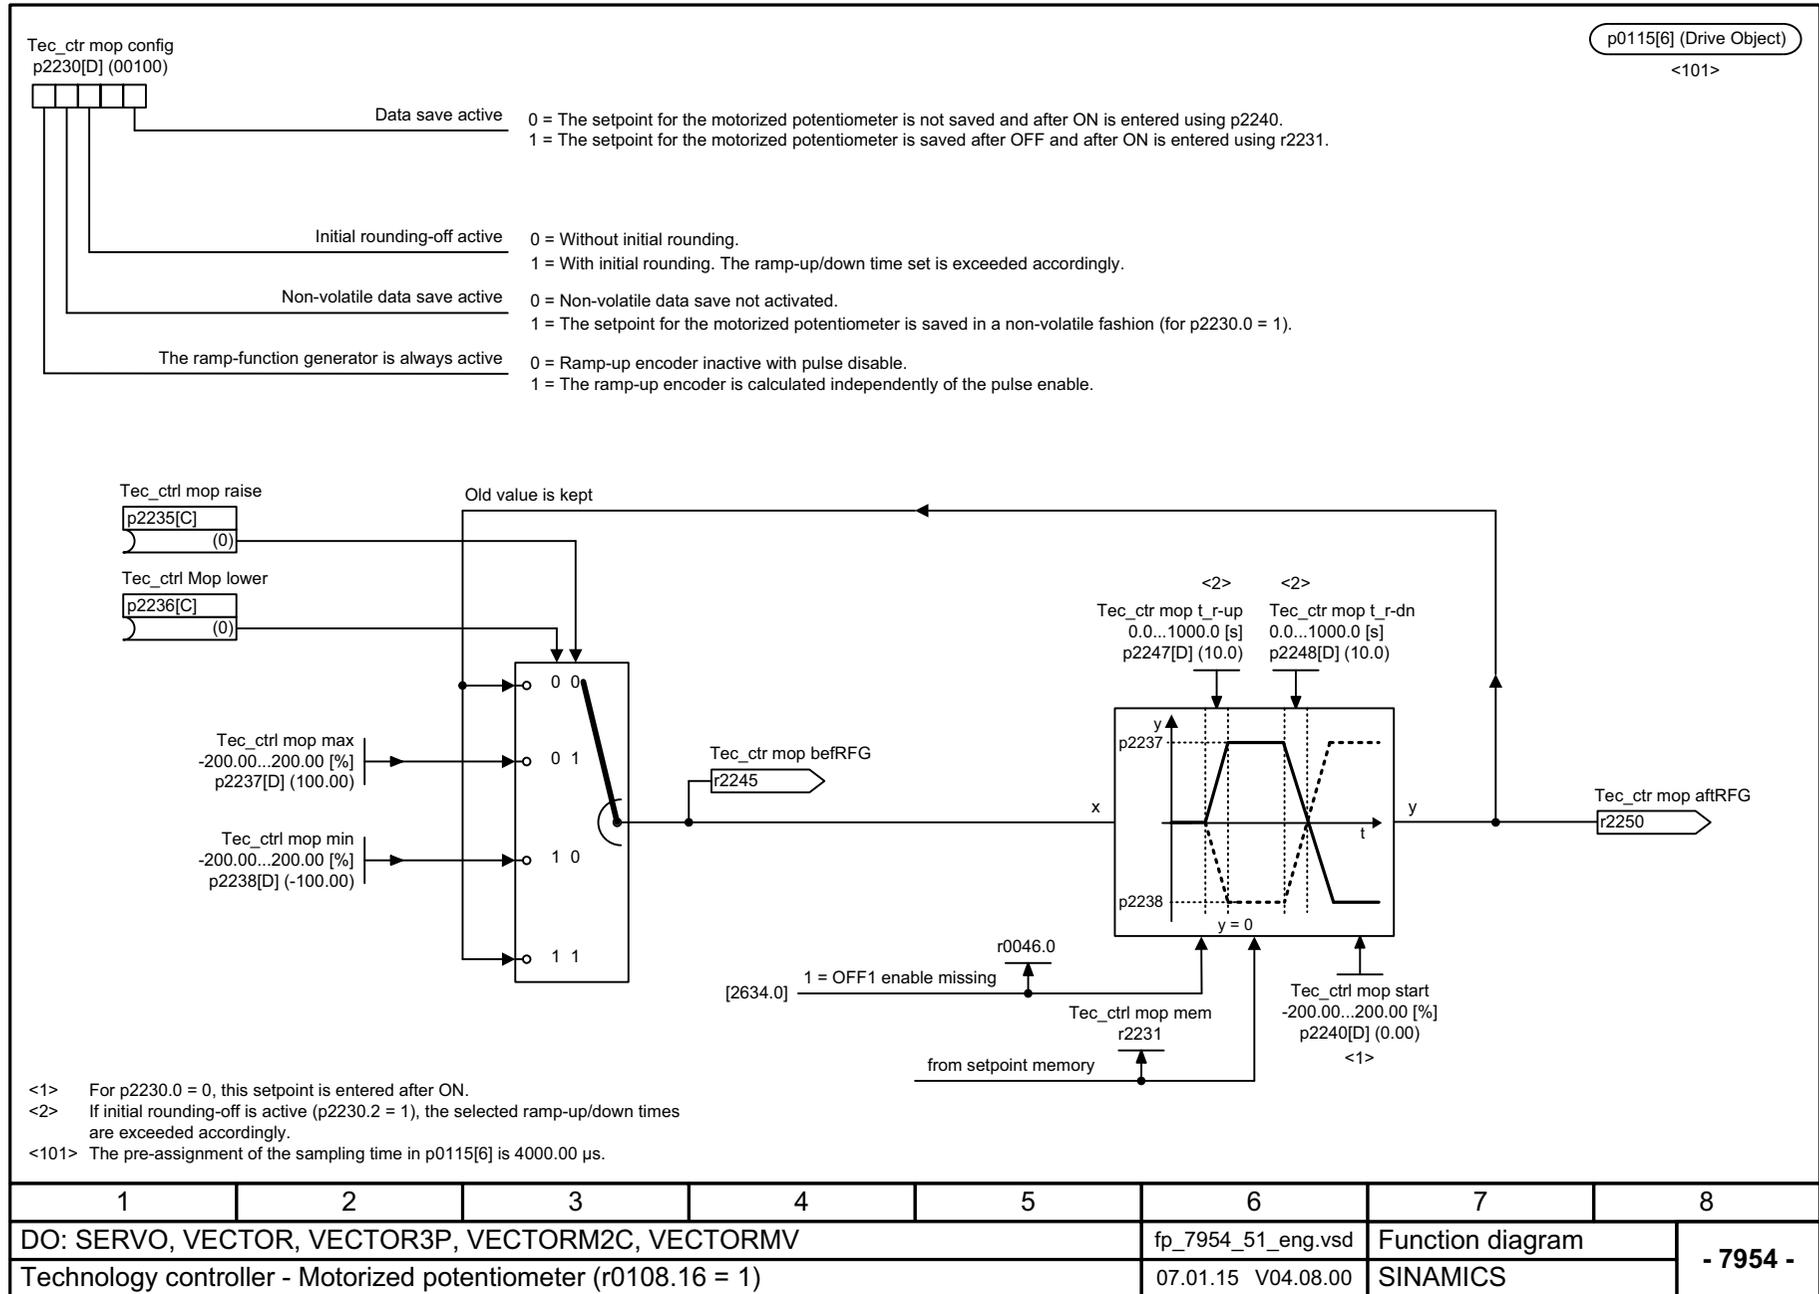

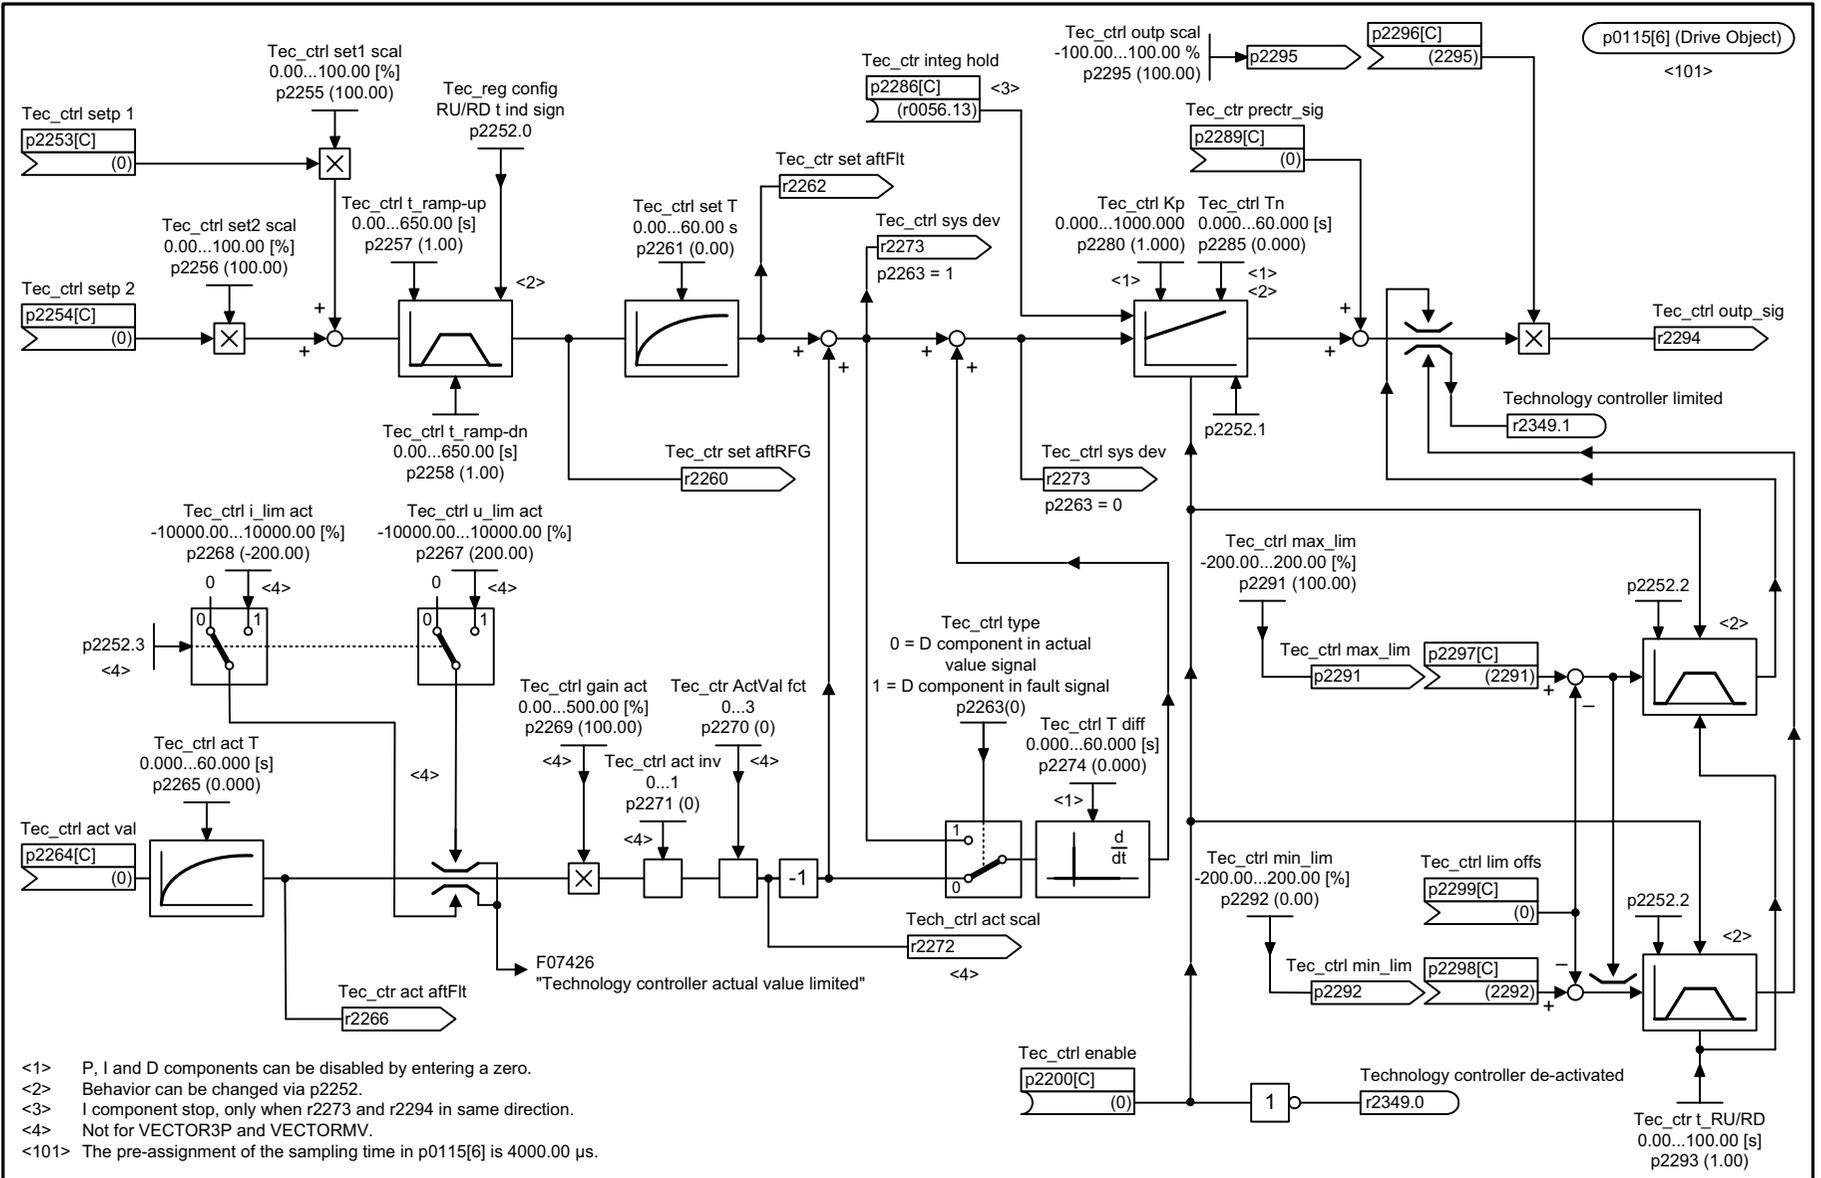


- <1> P, I and D components can be disabled by entering a zero.
- <2> Behavior can be changed via p2252.
- <3> I component stop, only when r2273 and r2294 in same direction.
- <4> Not for VECTOR3P and VECTORMV.
- <101> The pre-assignment of the sampling time in p0115[6] is 4000.00 μs.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORM2C, VECTORMV					fp_7958_51_eng.vsd	Function diagram	
Technology controller - Closed-loop control (r0108.16 = 1)					07.01.15 V04.08.00	SINAMICS	

Fig. 3-163 7958 – Closed-loop control (r0108.16 = 1)

Fig. 3-164 7960 – DC-link voltage controller (r0108.16 = 1)

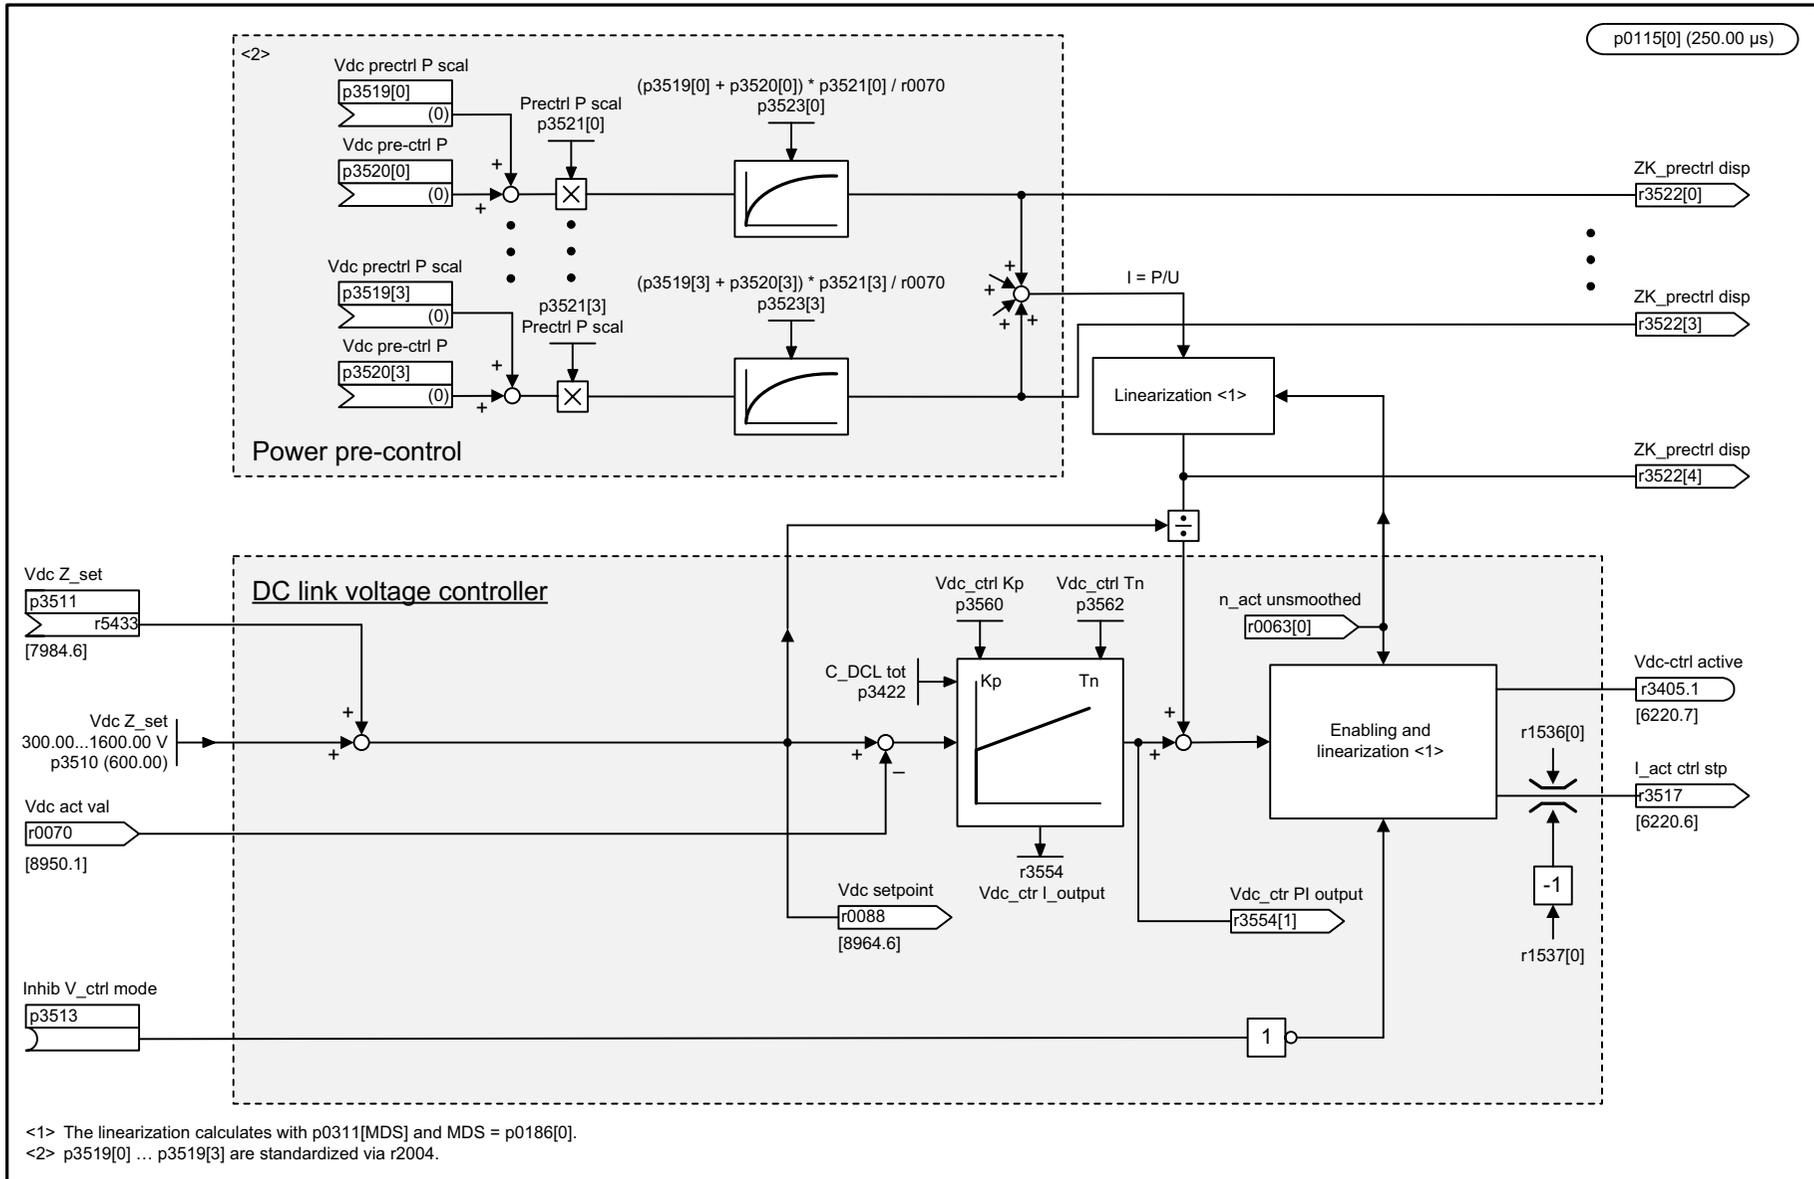


1	2	3	4	5	6	7	8
DO: VECTOR					fp_7960_54_eng.vsd	Function diagram	
Technology controller - DC link voltage controller (r0108.16 = 1)					05.04.16 V04.08.00	S120/S150/G130/G150	
							- 7960 -

## 3.19 Signals and monitoring functions


### Function diagrams

8005 – Overview	1285
8010 – Speed signals 1	1286
8011 – Speed signals 2	1287
8012 – Torque signals, motor blocked/stalled	1288
8013 – Load monitoring (r0108.17 = 1)	1289
8016 – Thermal monitoring, motor, motor temperature status word faults/alarms	1290
8017 – Motor temperature model 1 (I2t)	1291
8018 – Motor temperature model 2	1292
8019 – Motor temperature model 3	1293
8021 – Thermal monitoring, power unit	1294
8022 – Freely parameterized I2t monitoring (SESM)	1295

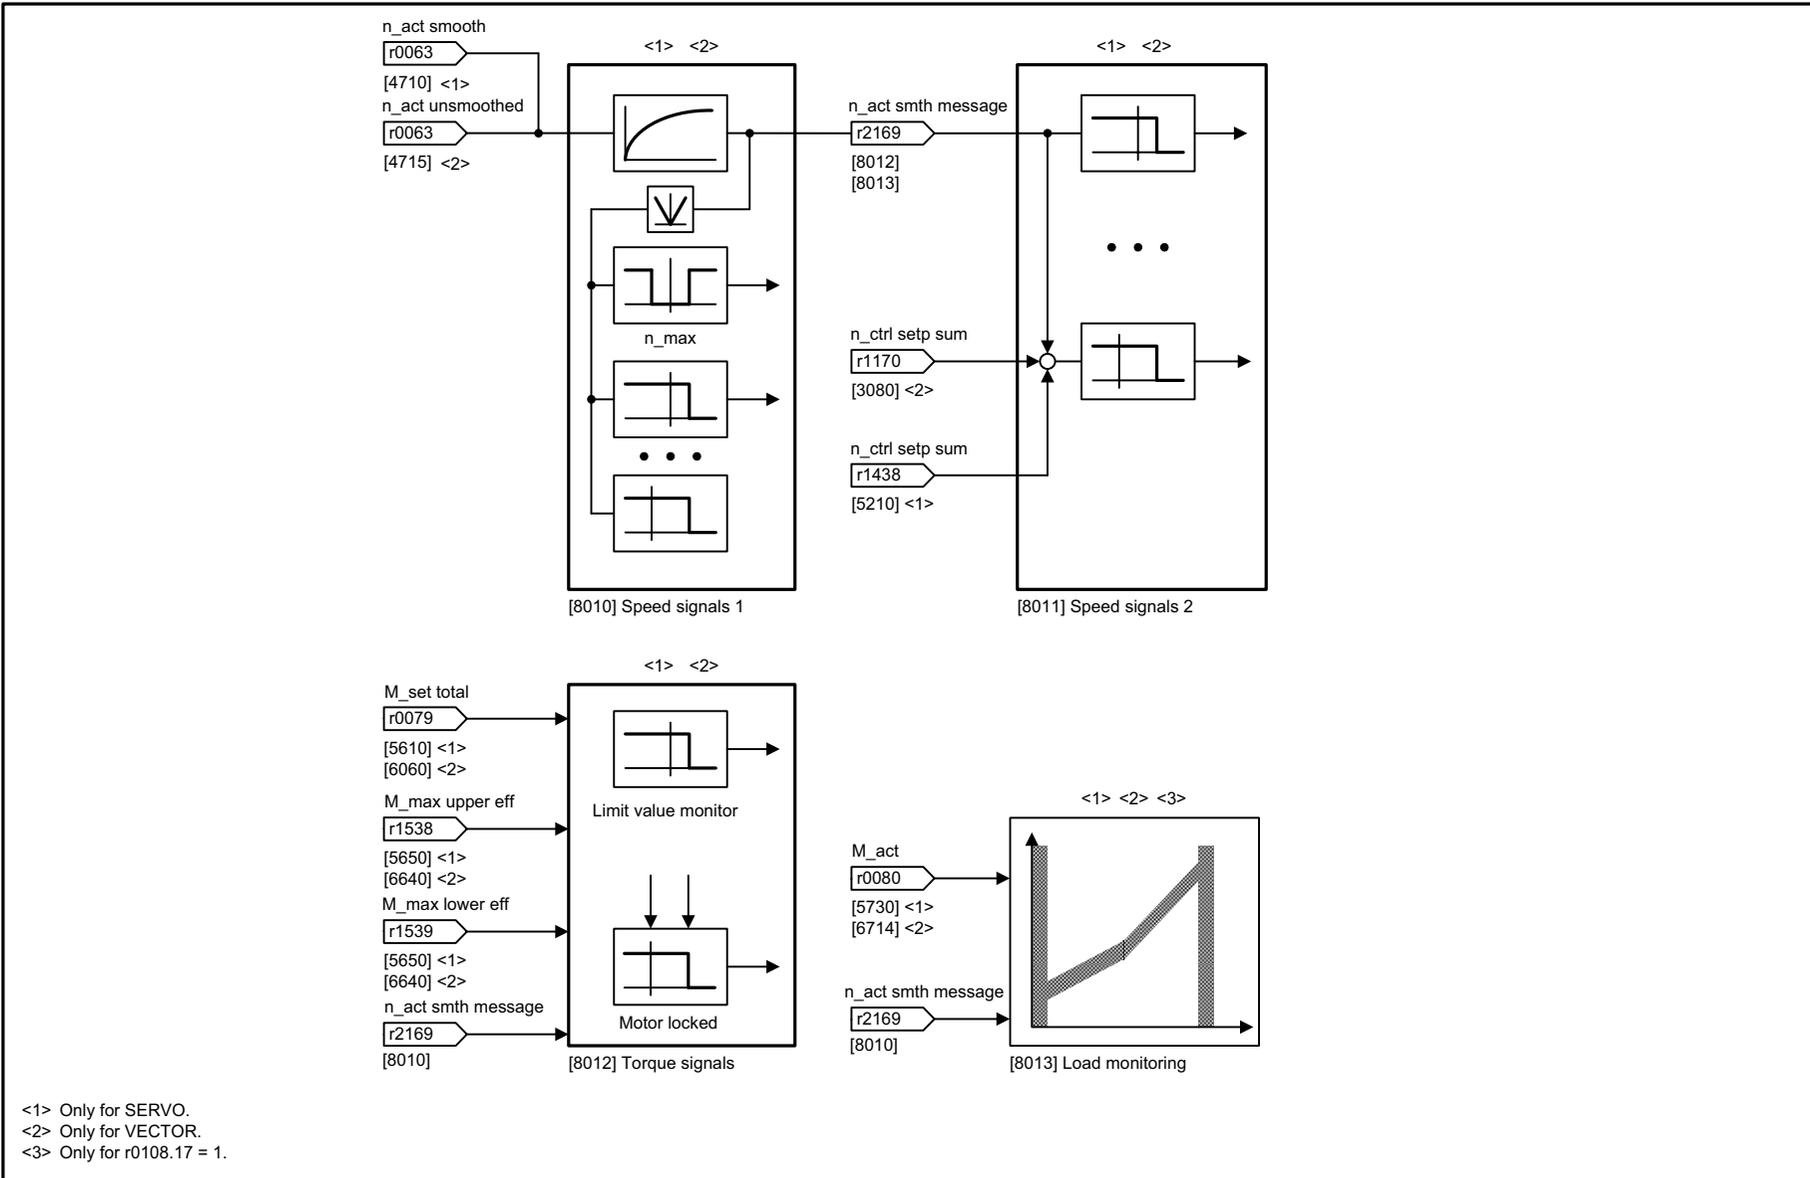

1	2	3	4	5	6	7	8
DO: All objects					fp_8005_51_eng.vsd	Function diagram	
Signals and monitoring functions - Overview					12.03.13 V04.08.00	SINAMICS	
							<b>- 8005 -</b>

Fig. 3-165 8005 – Overview

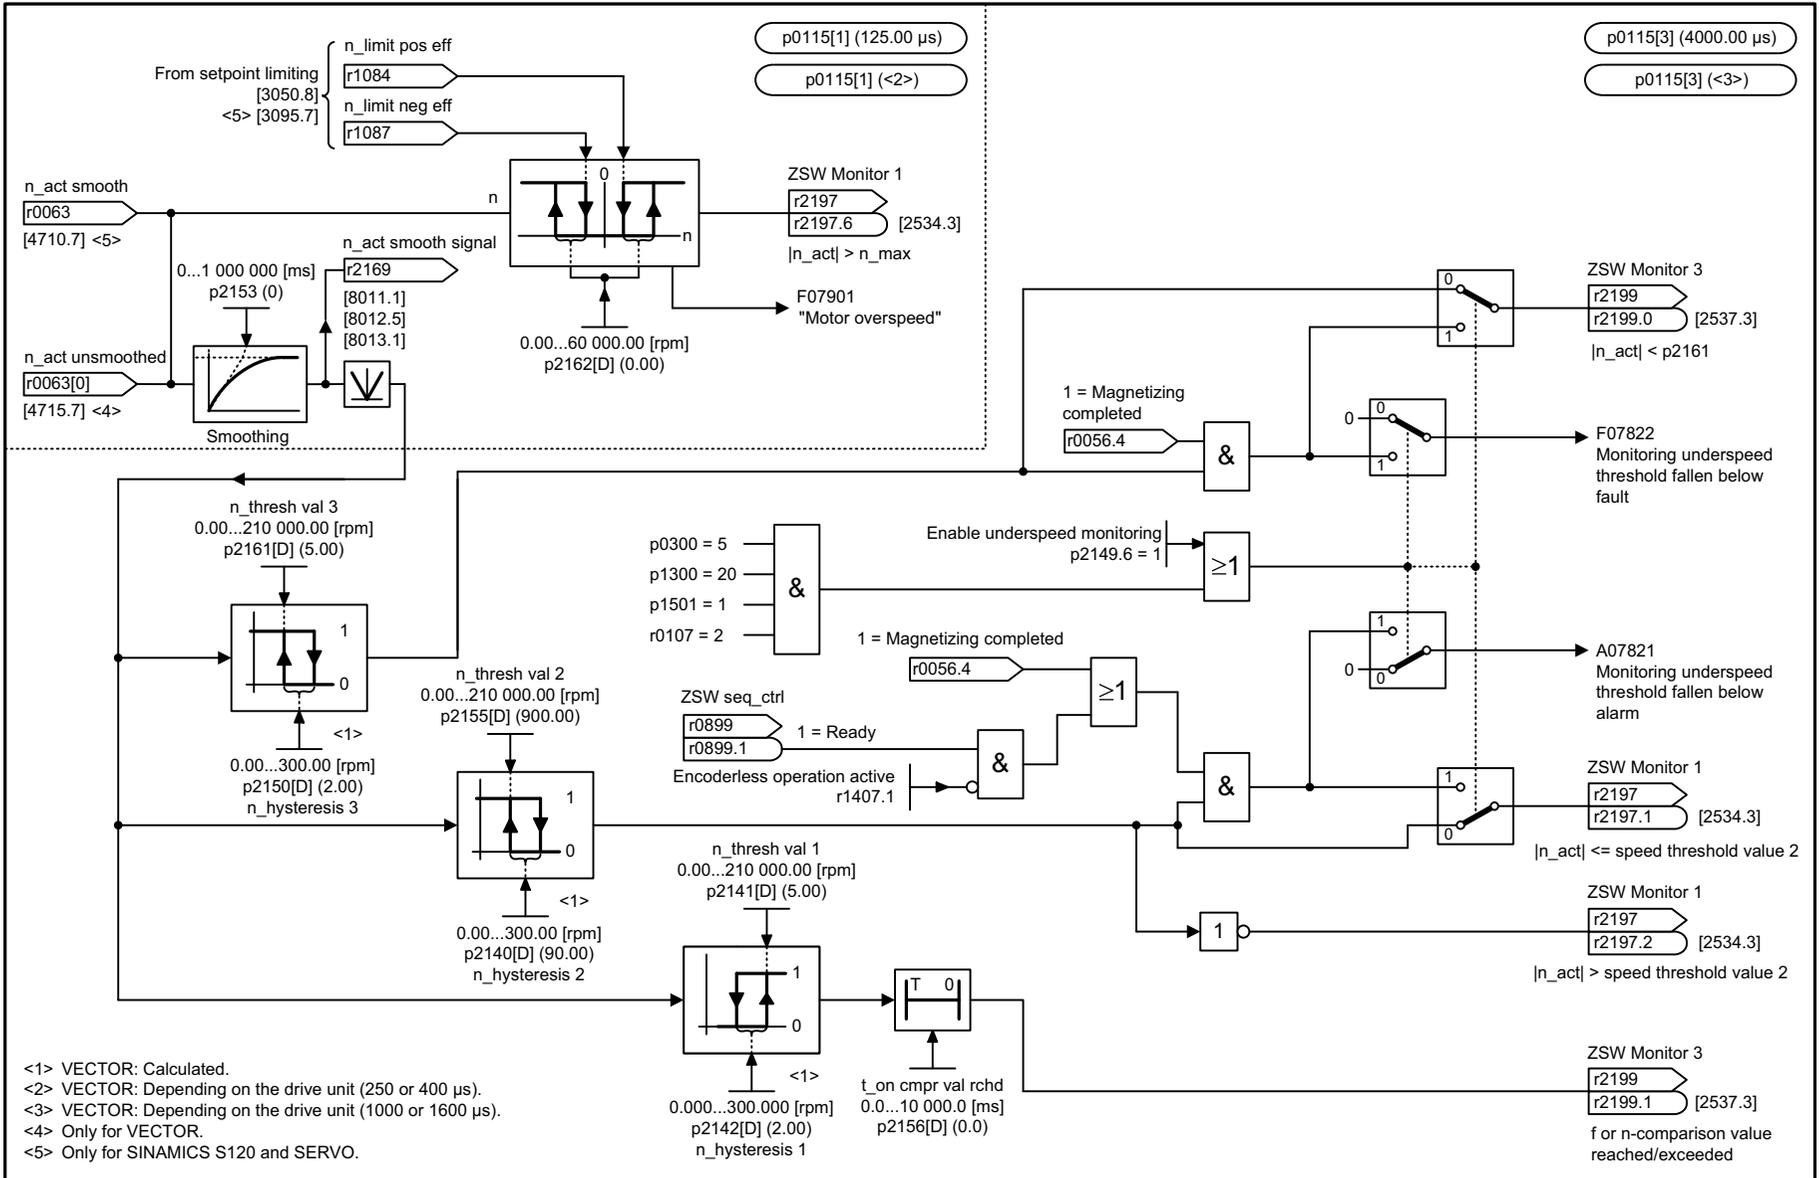


<1> VECTOR: Calculated.  
 <2> VECTOR: Depending on the drive unit (250 or 400 μs).  
 <3> VECTOR: Depending on the drive unit (1000 or 1600 μs).  
 <4> Only for VECTOR.  
 <5> Only for SINAMICS S120 and SERVO.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_8010_54_eng.vsd	Function diagram	
Signals and monitoring functions - Speed signals 1					01.06.16 V04.08.00	S120/S150/G130/G150	

- 8010 -


Fig. 3-166 8010 – Speed signals 1

Fig. 3-167 8011 – Speed signals 2

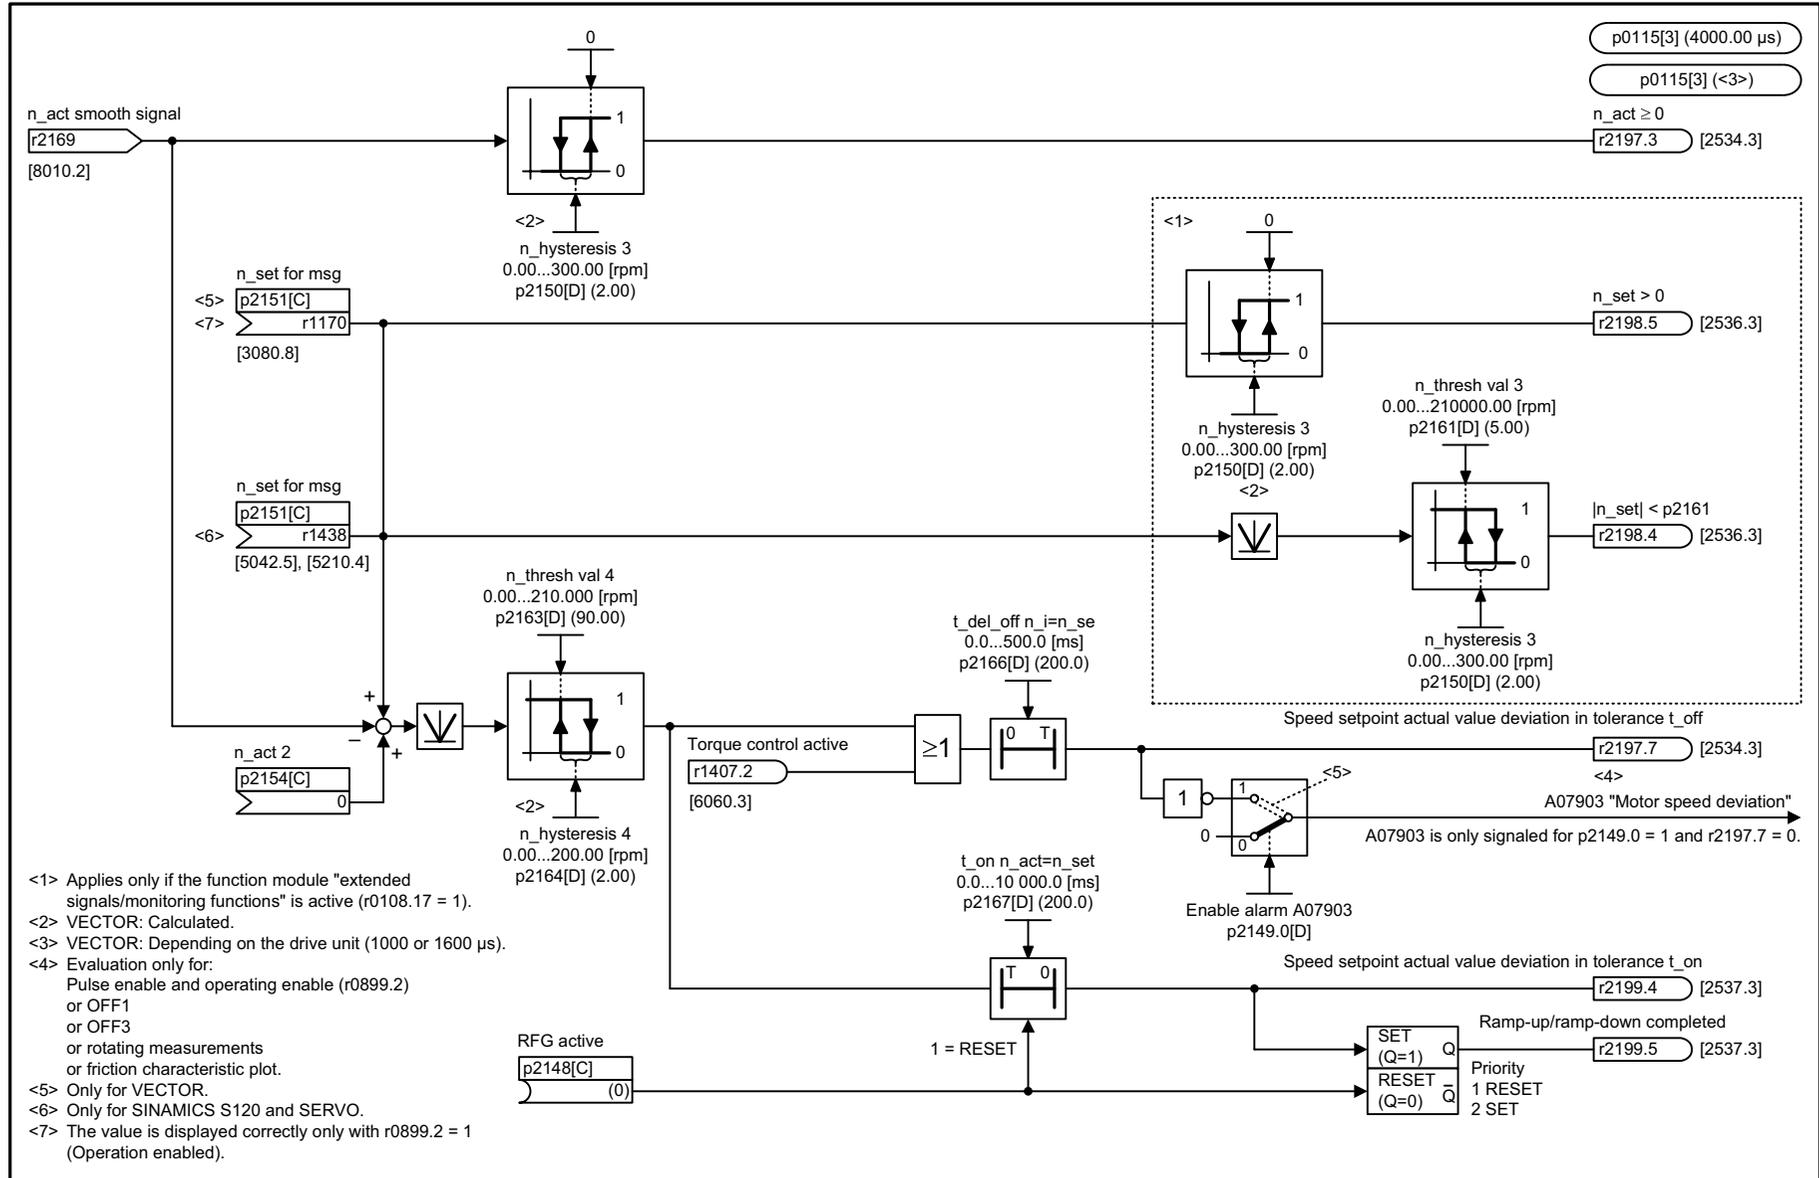

- <1> Applies only if the function module "extended signals/monitoring functions" is active (r0108.17 = 1).
- <2> VECTOR: Calculated.
- <3> VECTOR: Depending on the drive unit (1000 or 1600 μs).
- <4> Evaluation only for:  
Pulse enable and operating enable (r0899.2)  
or OFF1  
or OFF3  
or rotating measurements  
or friction characteristic plot.
- <5> Only for VECTOR.
- <6> Only for SINAMICS S120 and SERVO.
- <7> The value is displayed correctly only with r0899.2 = 1 (Operation enabled).

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_8011_54_eng.vsd	Function diagram	
Signals and monitoring functions - Speed signals 2					11.04.12 V04.08.00	S120/S150/G130/G150	
							- 8011 -

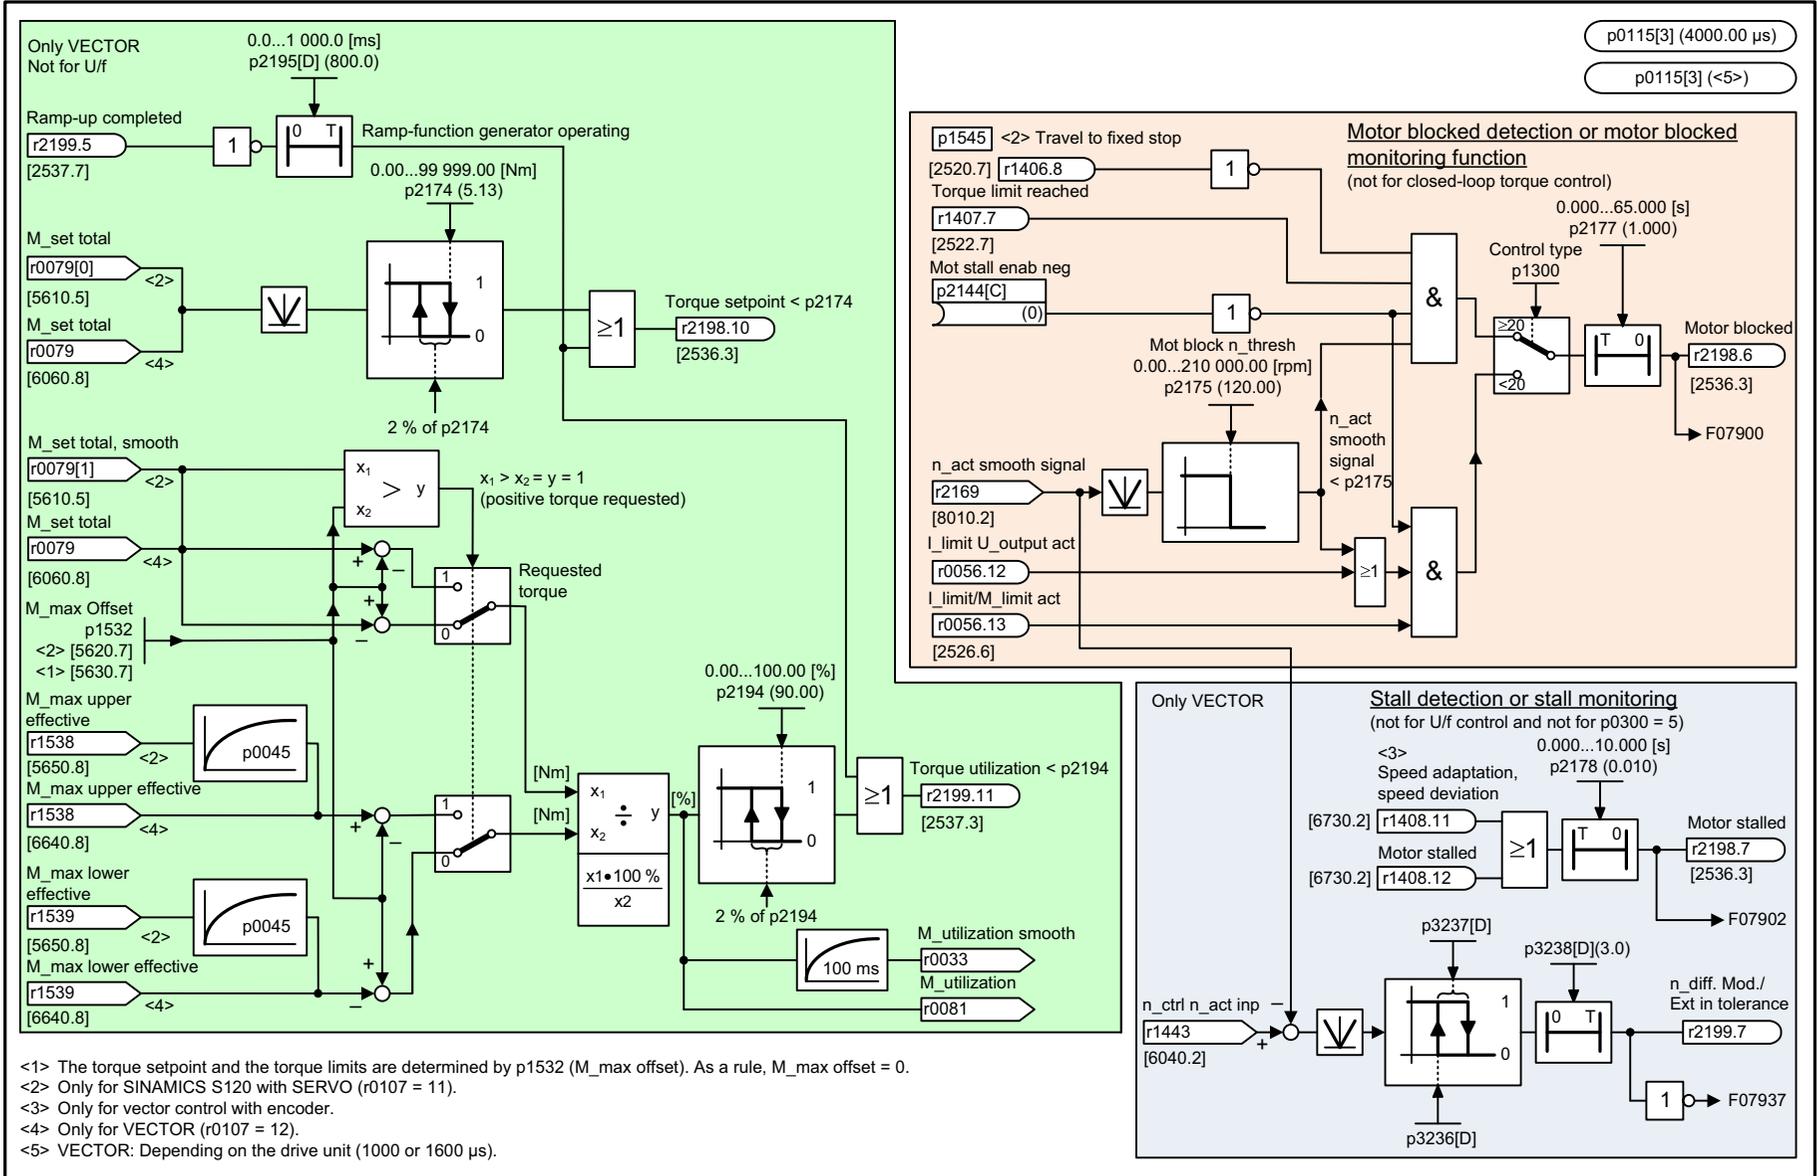


<1> The torque setpoint and the torque limits are determined by p1532 (M\_max offset). As a rule, M\_max offset = 0.  
 <2> Only for SINAMICS S120 with SERVO (r0107 = 11).  
 <3> Only for vector control with encoder.  
 <4> Only for VECTOR (r0107 = 12).  
 <5> VECTOR: Depending on the drive unit (1000 or 1600 μs).

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_8012_54_eng.vsd	Function diagram	
Signals and monitoring functions - Torque signals, motor blocked/stalled					16.05.14 V04.08.00	S120/S150/G130/G150	

- 8012 -

Fig. 3-168 8012 – Torque signals, motor blocked/stalled

Fig. 3-169 8013 – Load monitoring (r0108.17 = 1)

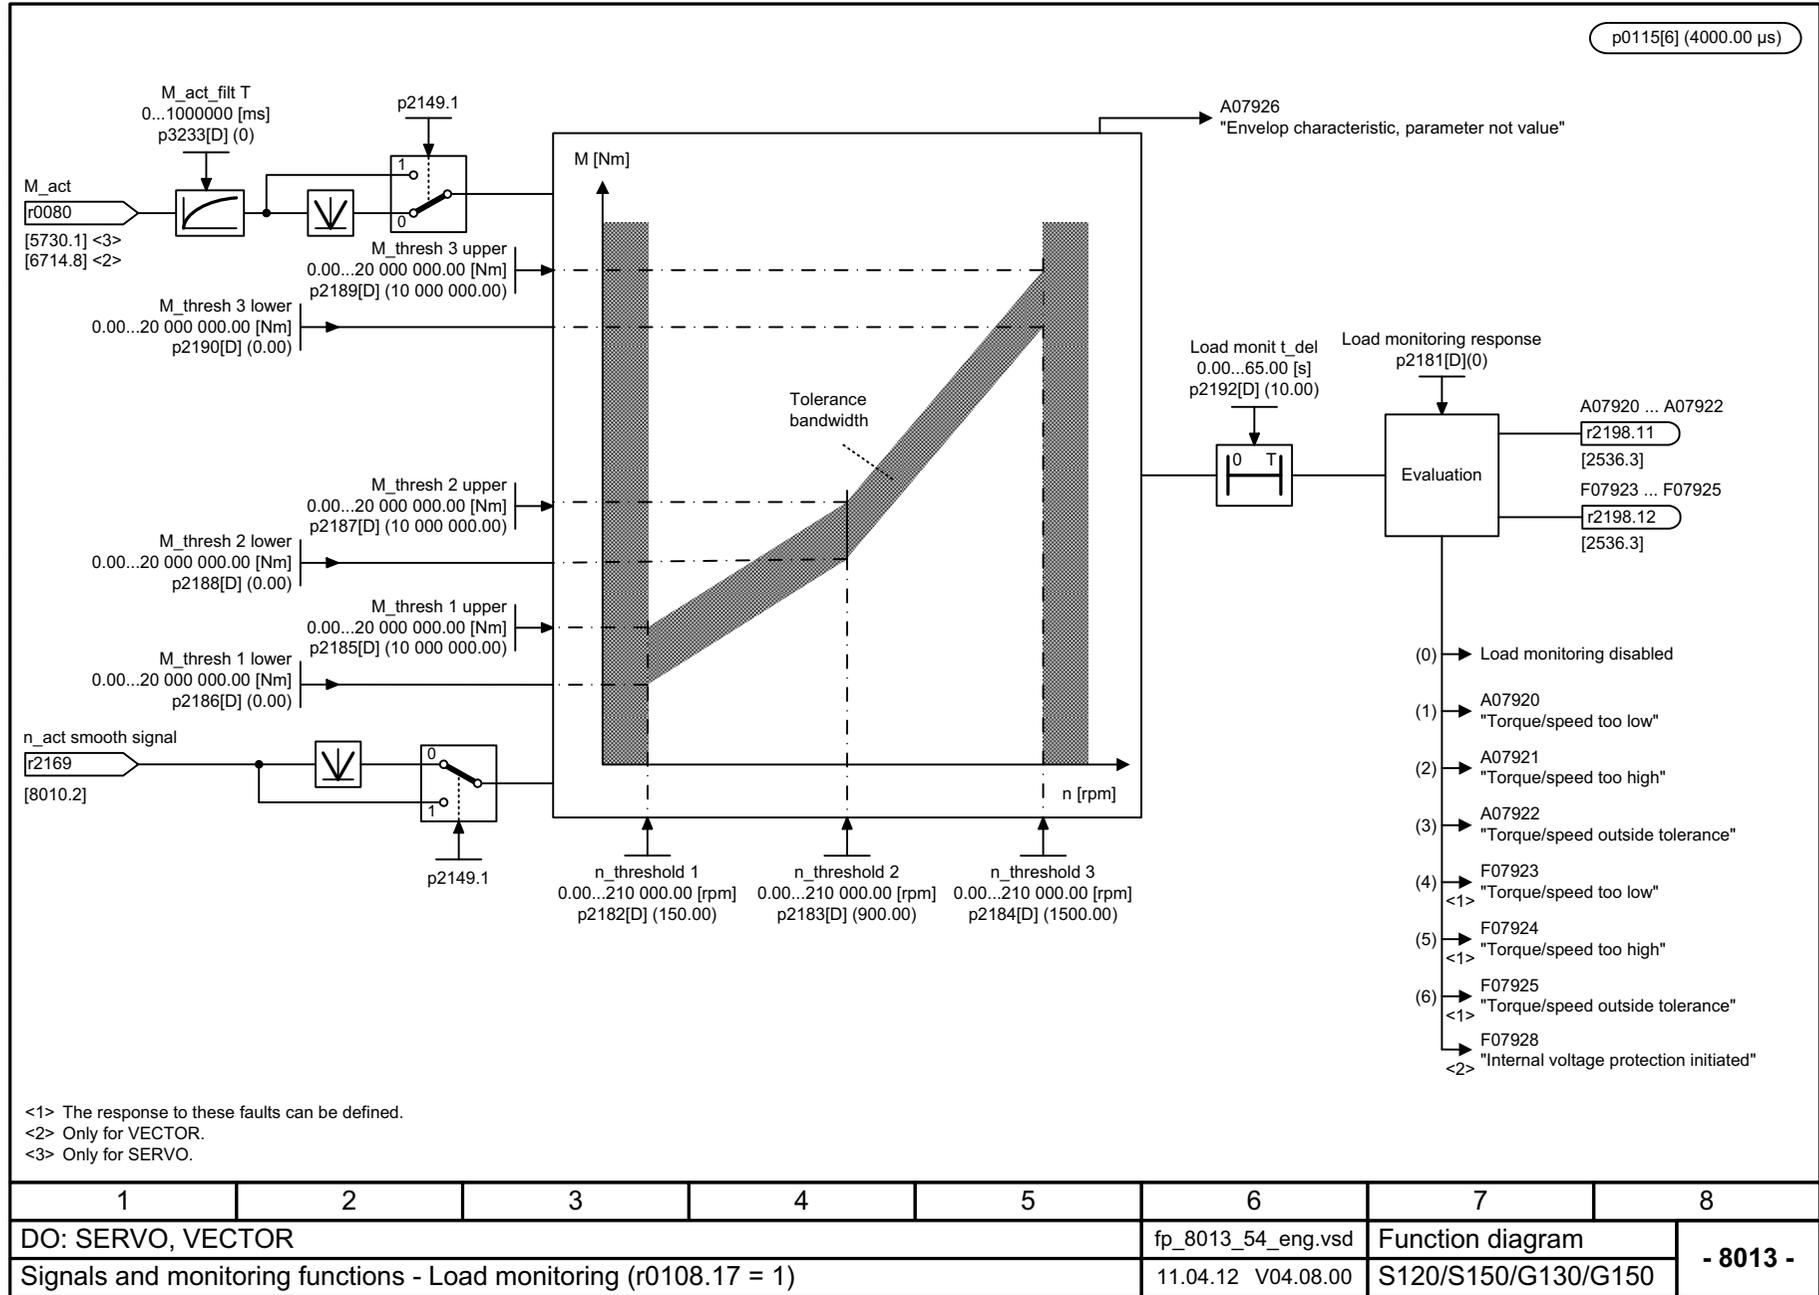

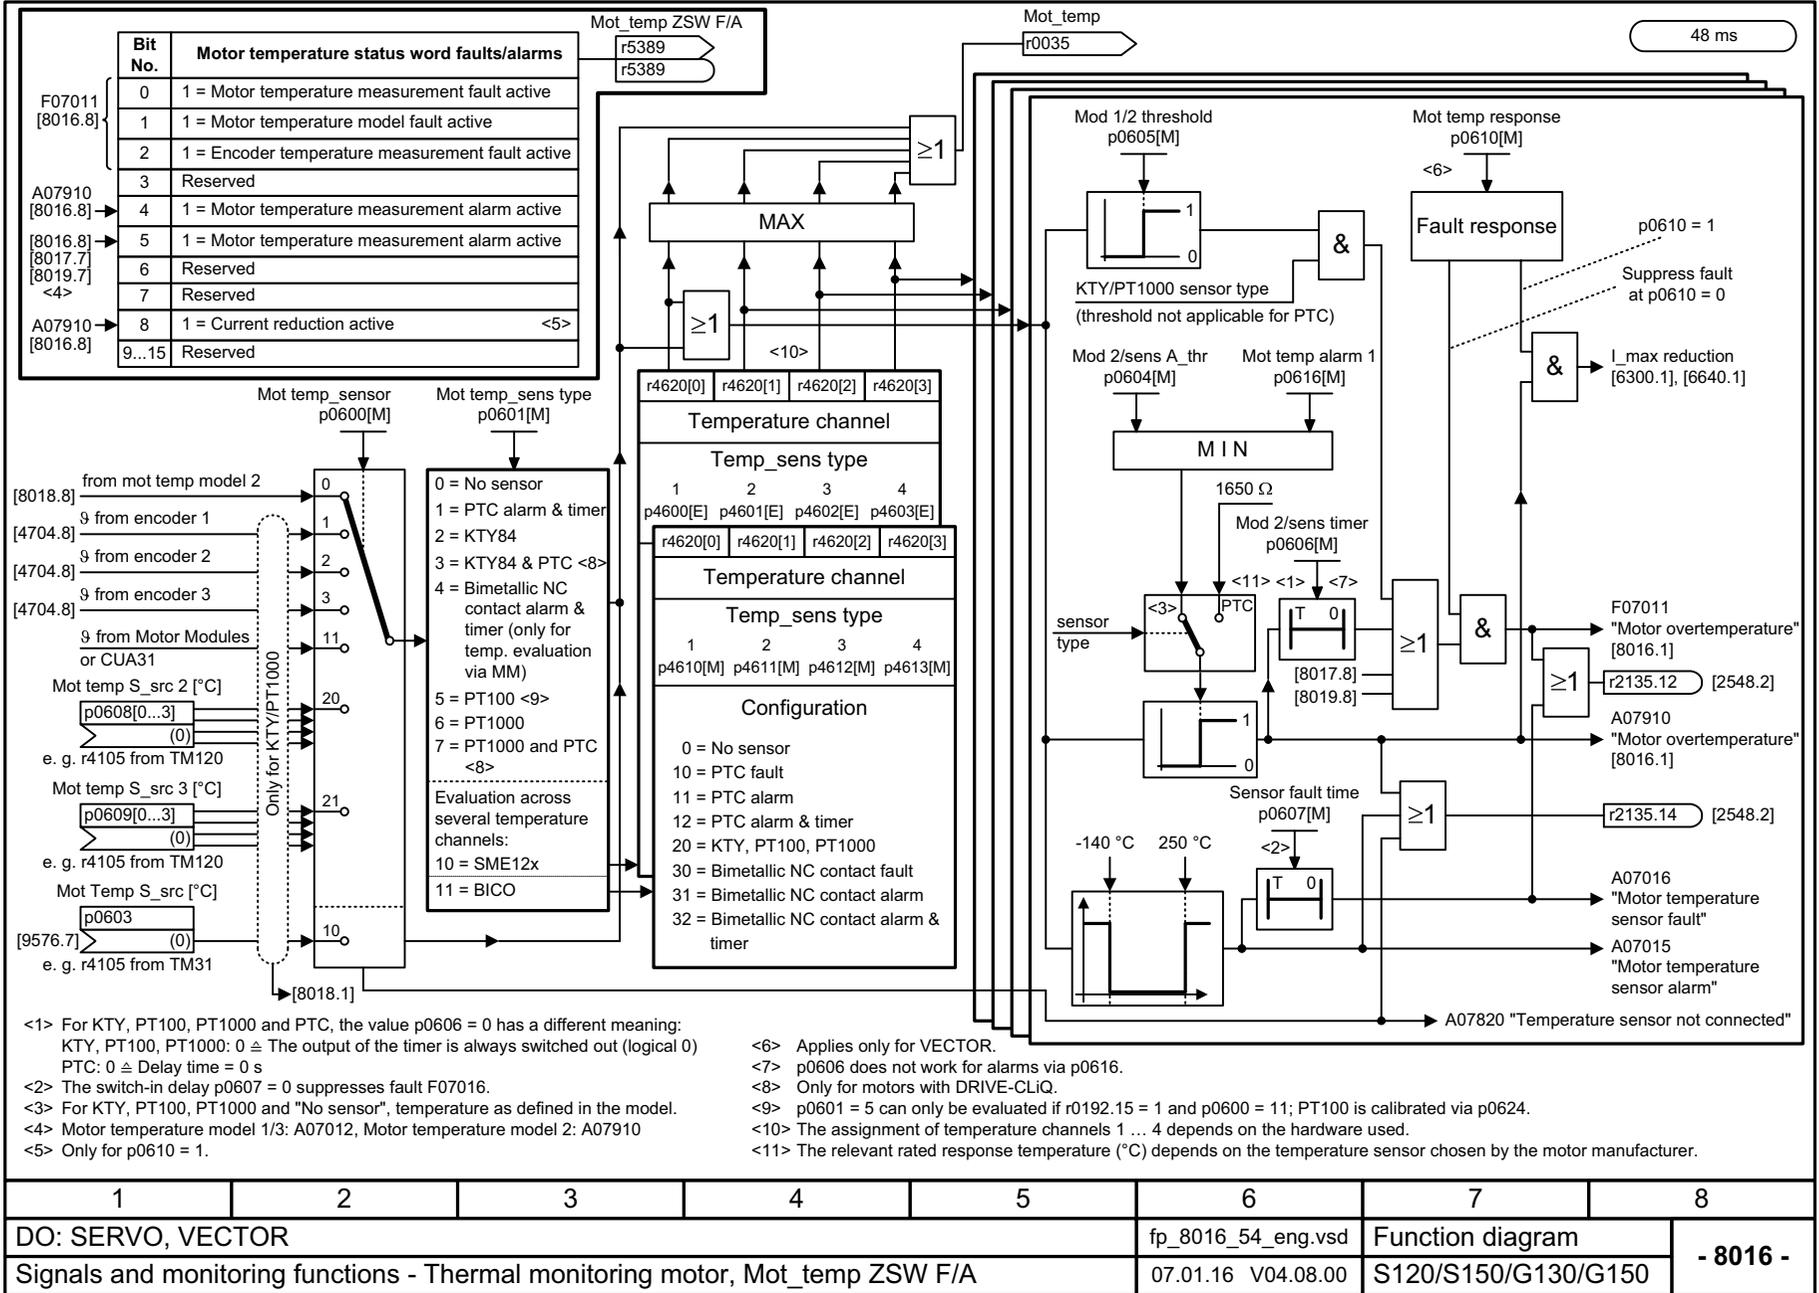


Fig. 3-170 8016 – Thermal monitoring, motor, motor temperature status word faults/alarms

48 ms

p0610 = 1  
Suppress fault at p0610 = 0  
I\_max reduction [6300.1], [6640.1]

F07011 "Motor overtemperature" [8016.1]

A07910 "Motor overtemperature" [8016.1]

r2135.12 [2548.2]

A07016 "Motor temperature sensor fault"


A07015 "Motor temperature sensor alarm"


A07820 "Temperature sensor not connected"

<1> For KTY, PT100, PT1000 and PTC, the value p0606 = 0 has a different meaning:  
KTY, PT100, PT1000: 0 ≙ The output of the timer is always switched out (logical 0)  
PTC: 0 ≙ Delay time = 0 s  
<2> The switch-in delay p0607 = 0 suppresses fault F07016.  
<3> For KTY, PT100, PT1000 and "No sensor", temperature as defined in the model.  
<4> Motor temperature model 1/3: A07012, Motor temperature model 2: A07910  
<5> Only for p0610 = 1.

<6> Applies only for VECTOR.  
<7> p0606 does not work for alarms via p0616.  
<8> Only for motors with DRIVE-CLiQ.  
<9> p0601 = 5 can only be evaluated if r0192.15 = 1 and p0600 = 11; PT100 is calibrated via p0624.  
<10> The assignment of temperature channels 1 ... 4 depends on the hardware used.  
<11> The relevant rated response temperature (°C) depends on the temperature sensor chosen by the motor manufacturer.

Fig. 3-171 8017 – Motor temperature model 1 (I2t)

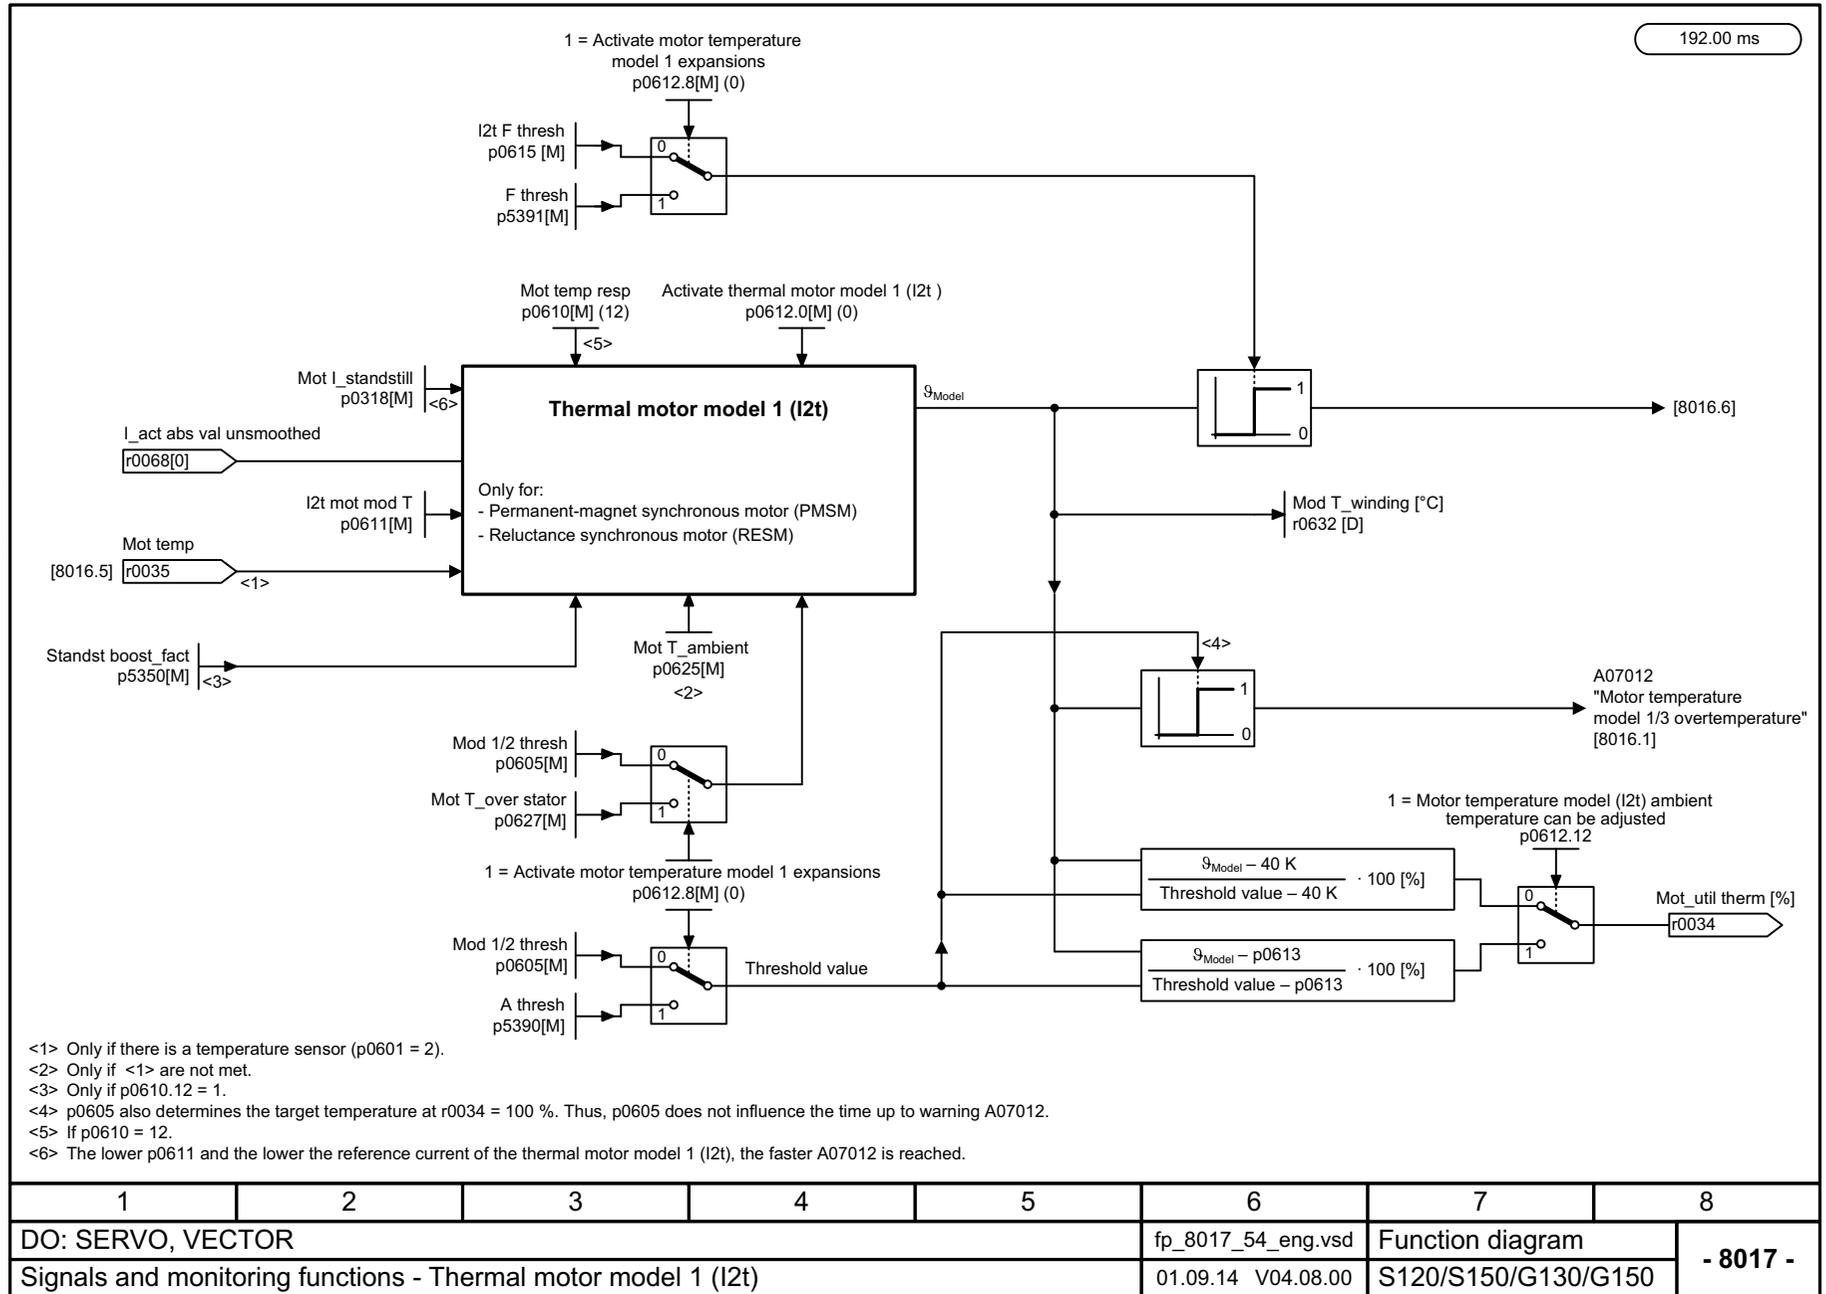

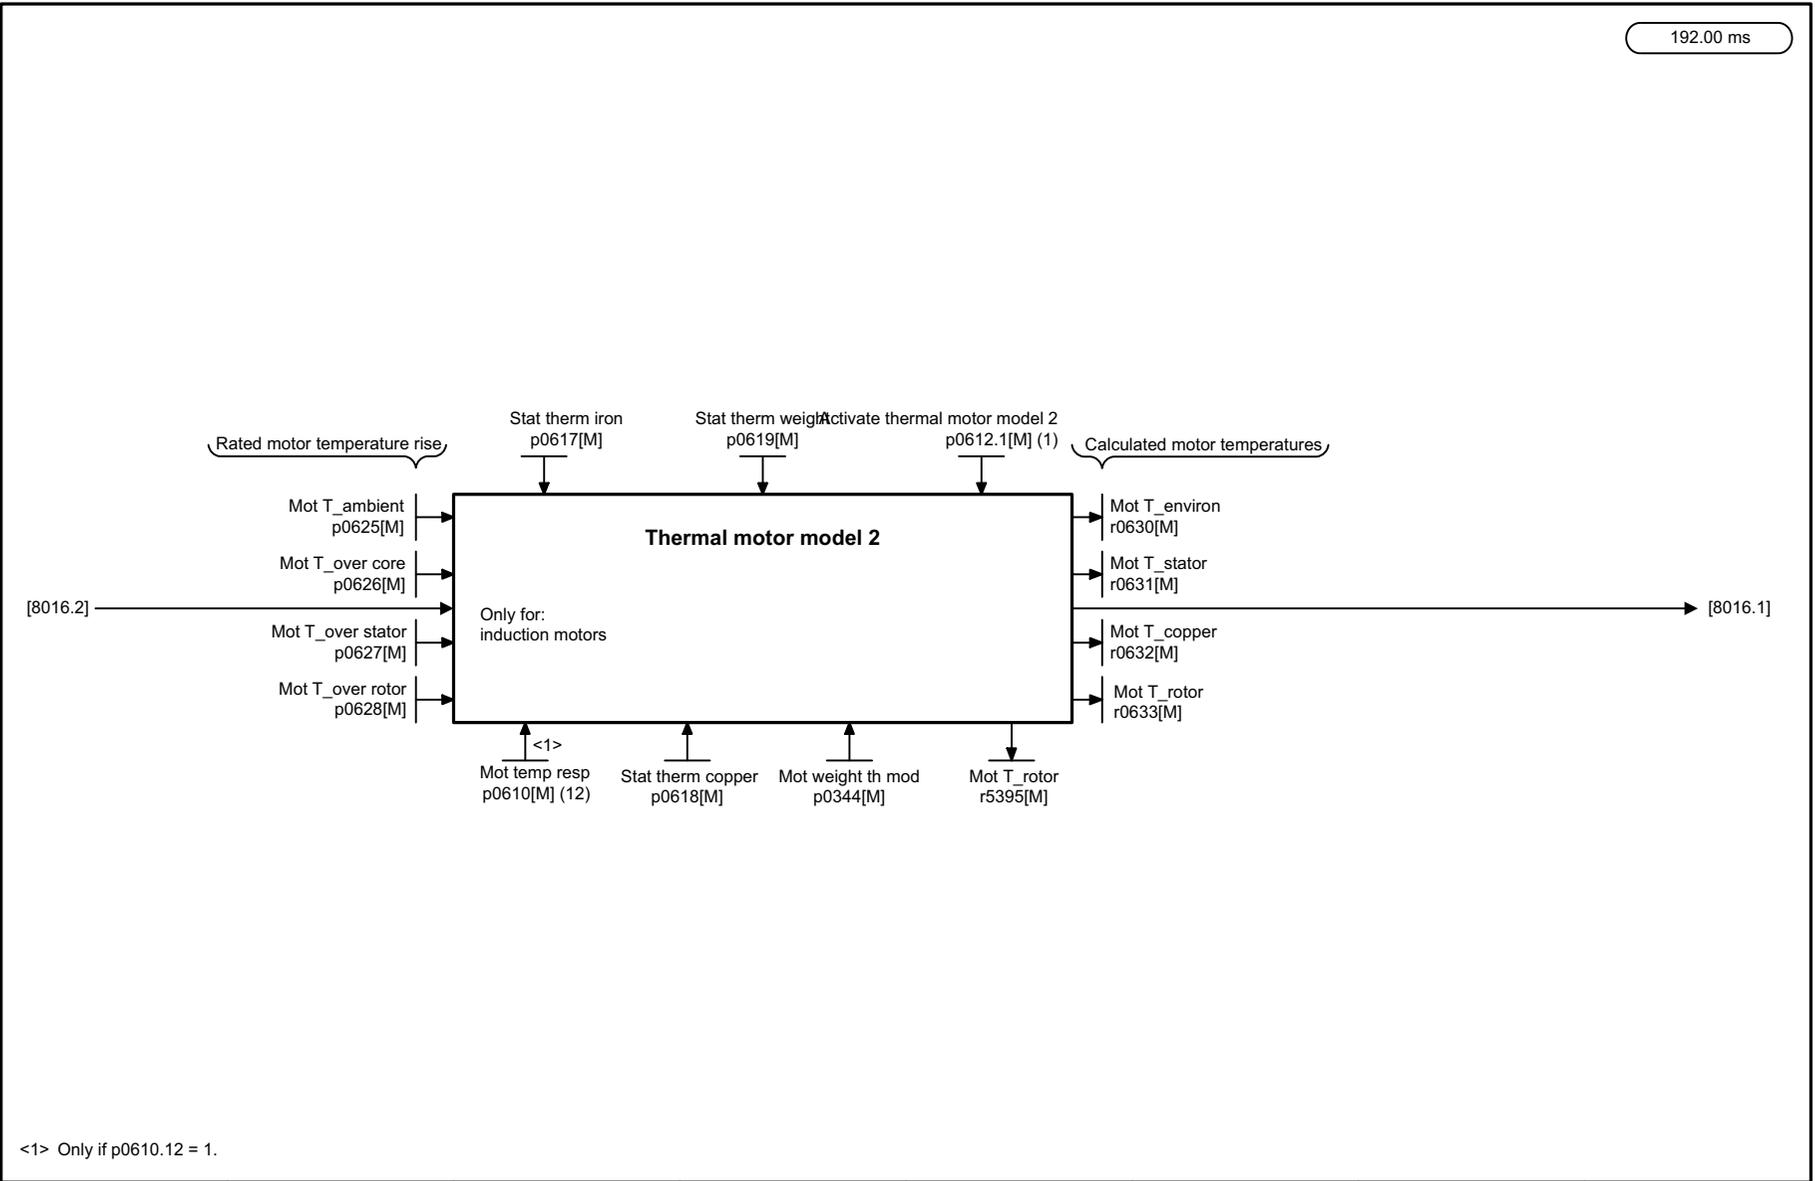


<1> Only if p0610.12 = 1.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_8018_54_eng.vsd	Function diagram	
Signals and monitoring functions - Thermal motor model 2					23.12.15 V04.08.00	S120/S150/G130/G150	
<b>- 8018 -</b>							


Fig. 3-172 8018 – Motor temperature model 2

Fig. 3-173 8019 – Motor temperature model 3

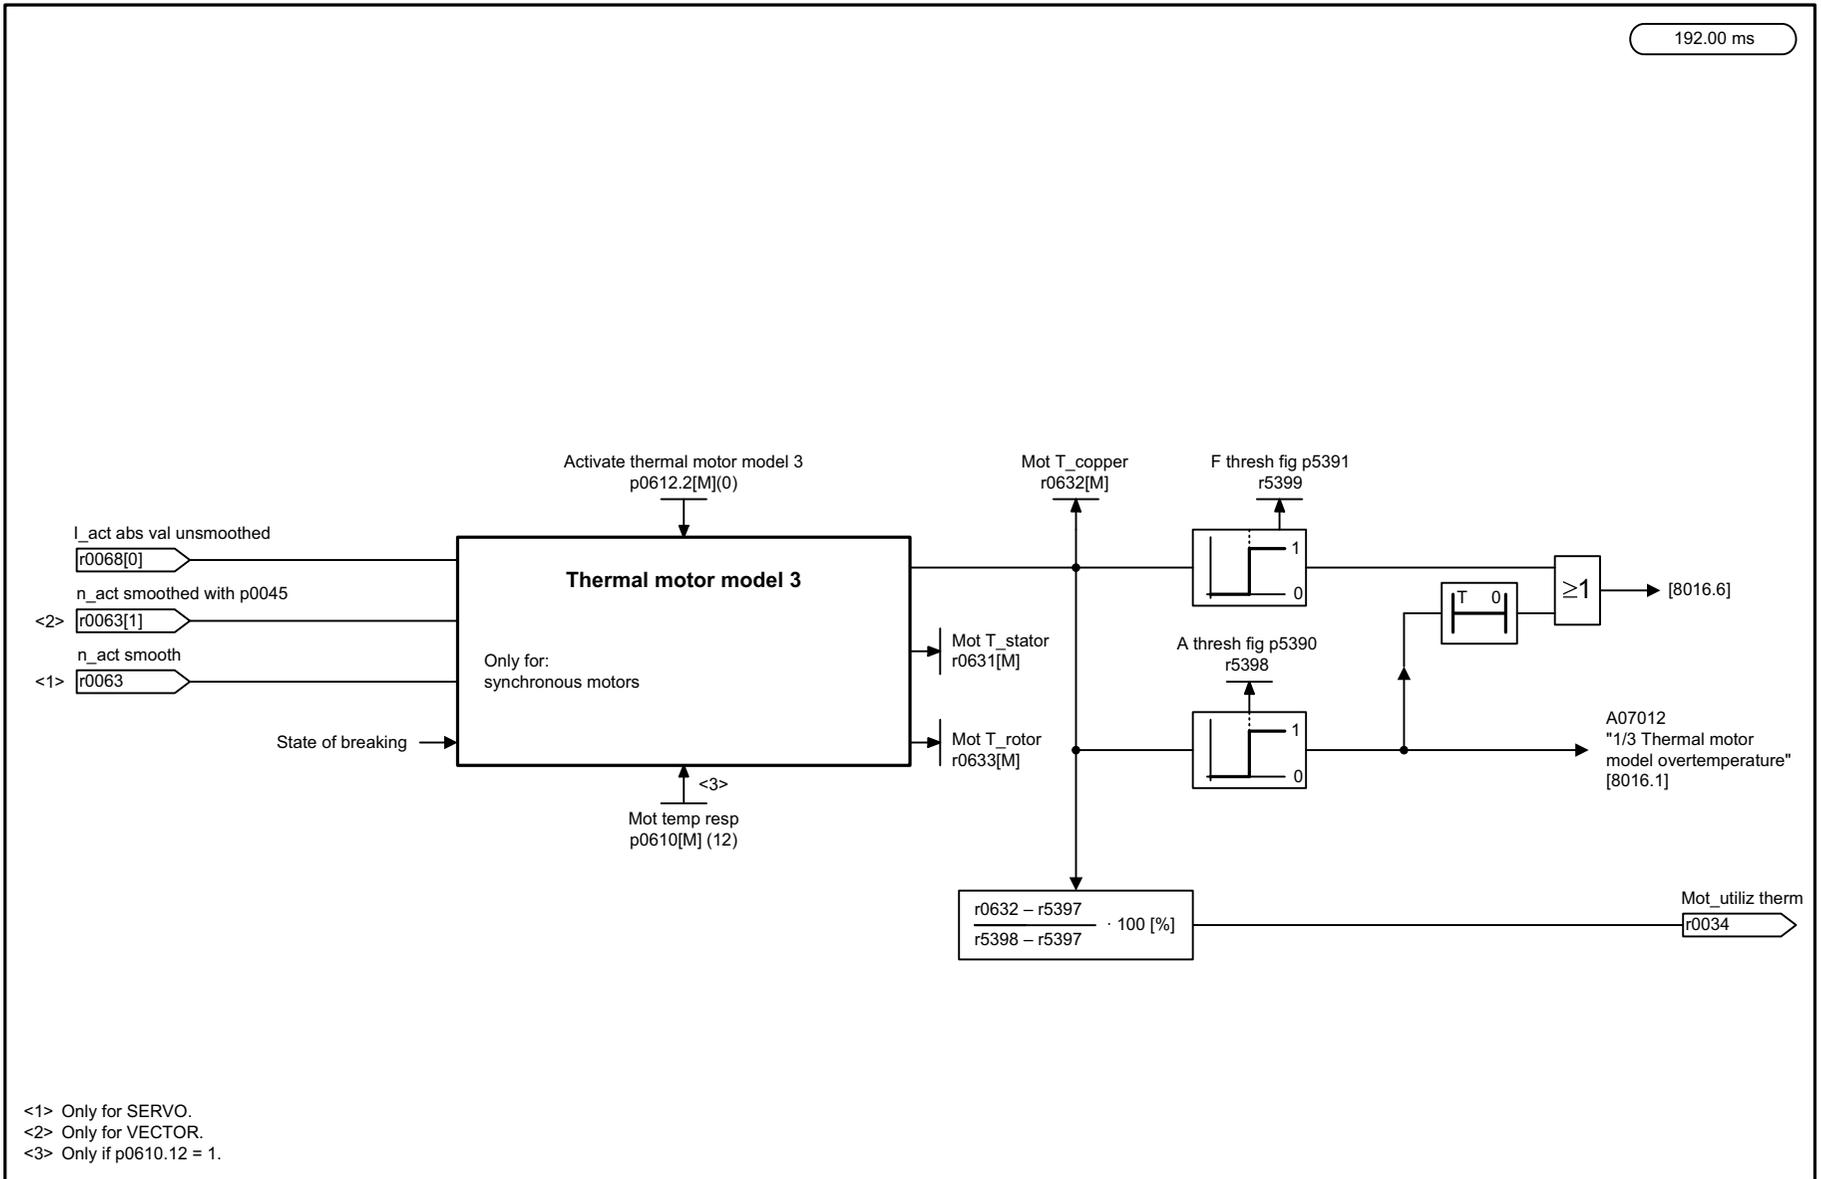

<1> Only for SERVO.  
<2> Only for VECTOR.  
<3> Only if p0610.12 = 1.


1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_8019_54_eng.vsd	Function diagram	
Signals and monitoring functions - Thermal motor model 3					23.12.15 V04.08.00	S120/S150/G130/G150	
							- 8019 -

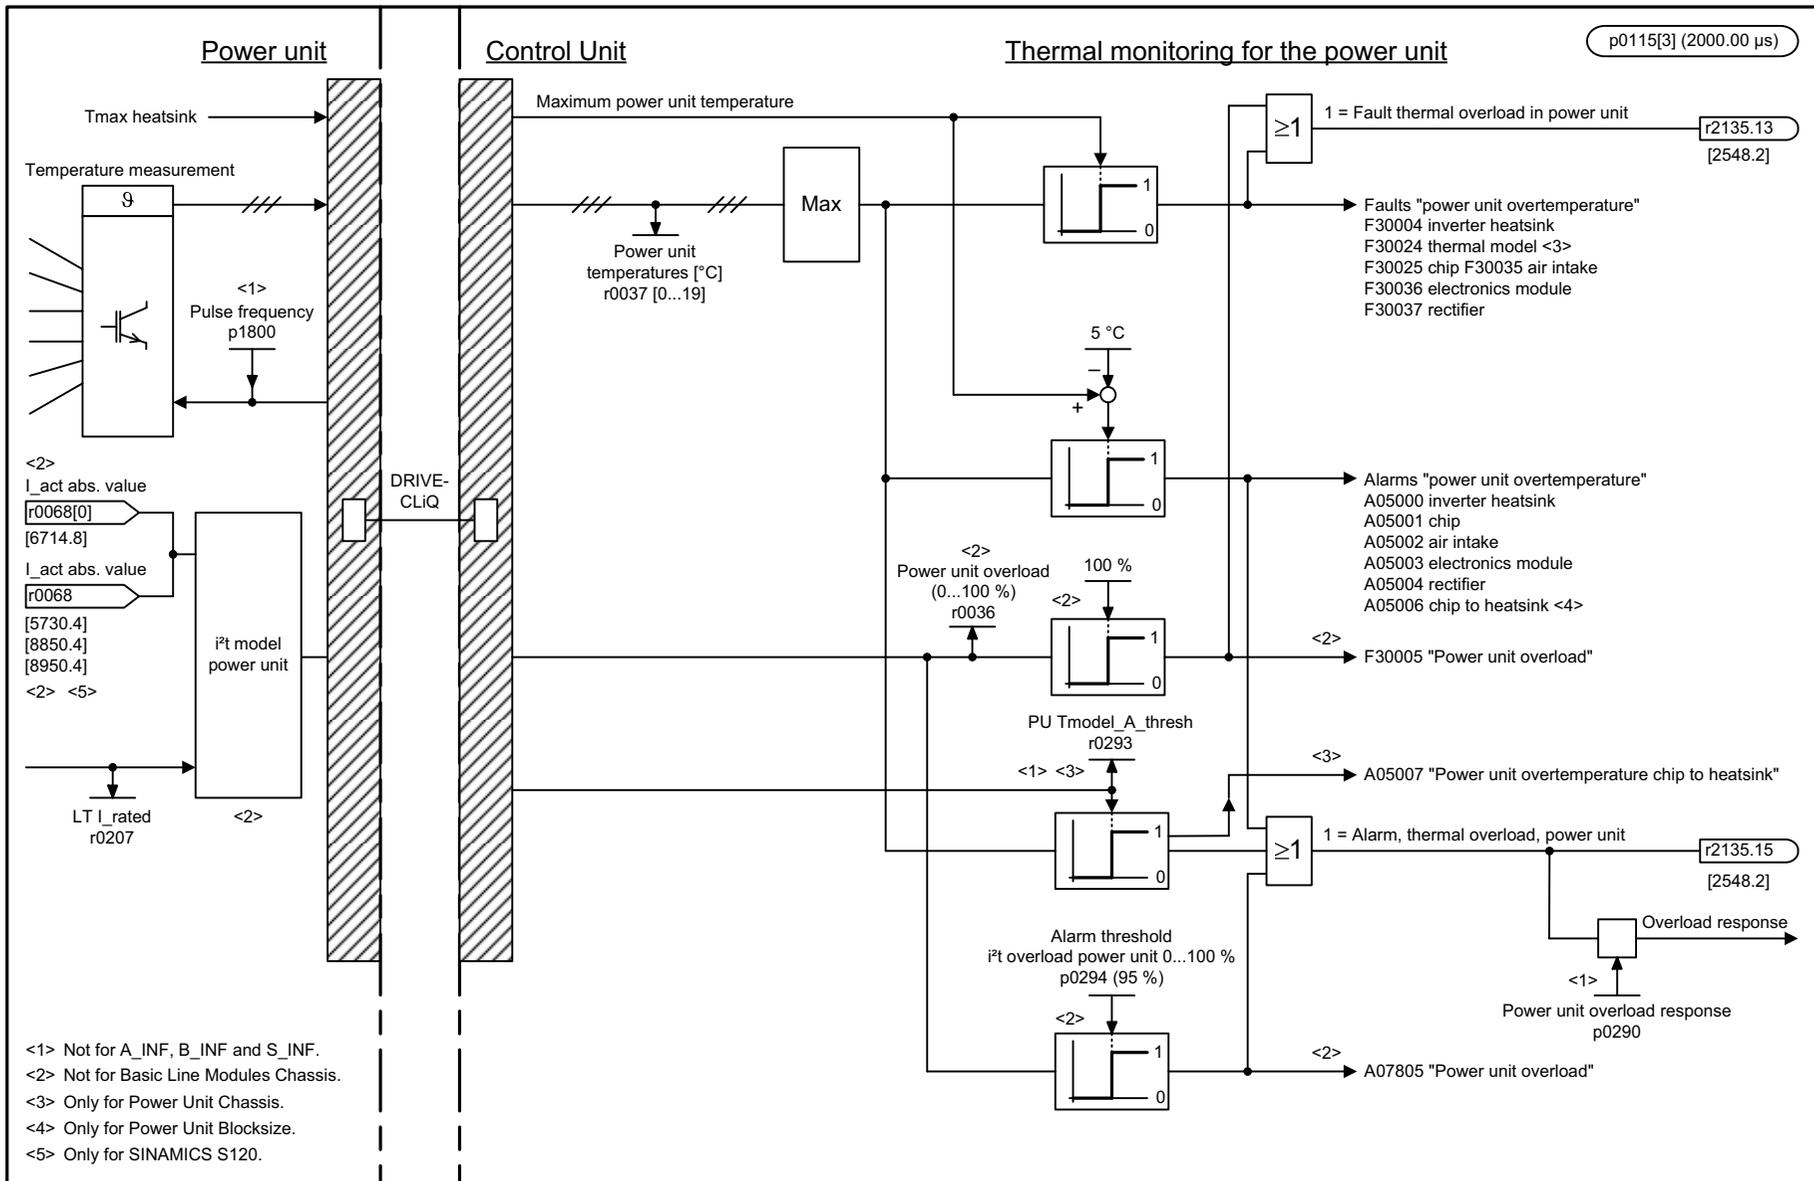

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, S_INF, SERVO, VECTOR					fp_8021_54_eng.vsd	Function diagram	
Signals and monitoring functions - Thermal monitoring, power unit					05.09.14 V04.08.00	S120/S150/G130/G150	
<b>- 8021 -</b>							

Fig. 3-174 8021 – Thermal monitoring, power unit

Fig. 3-175 8022 – Freely parameterized I2t monitoring (SESM)

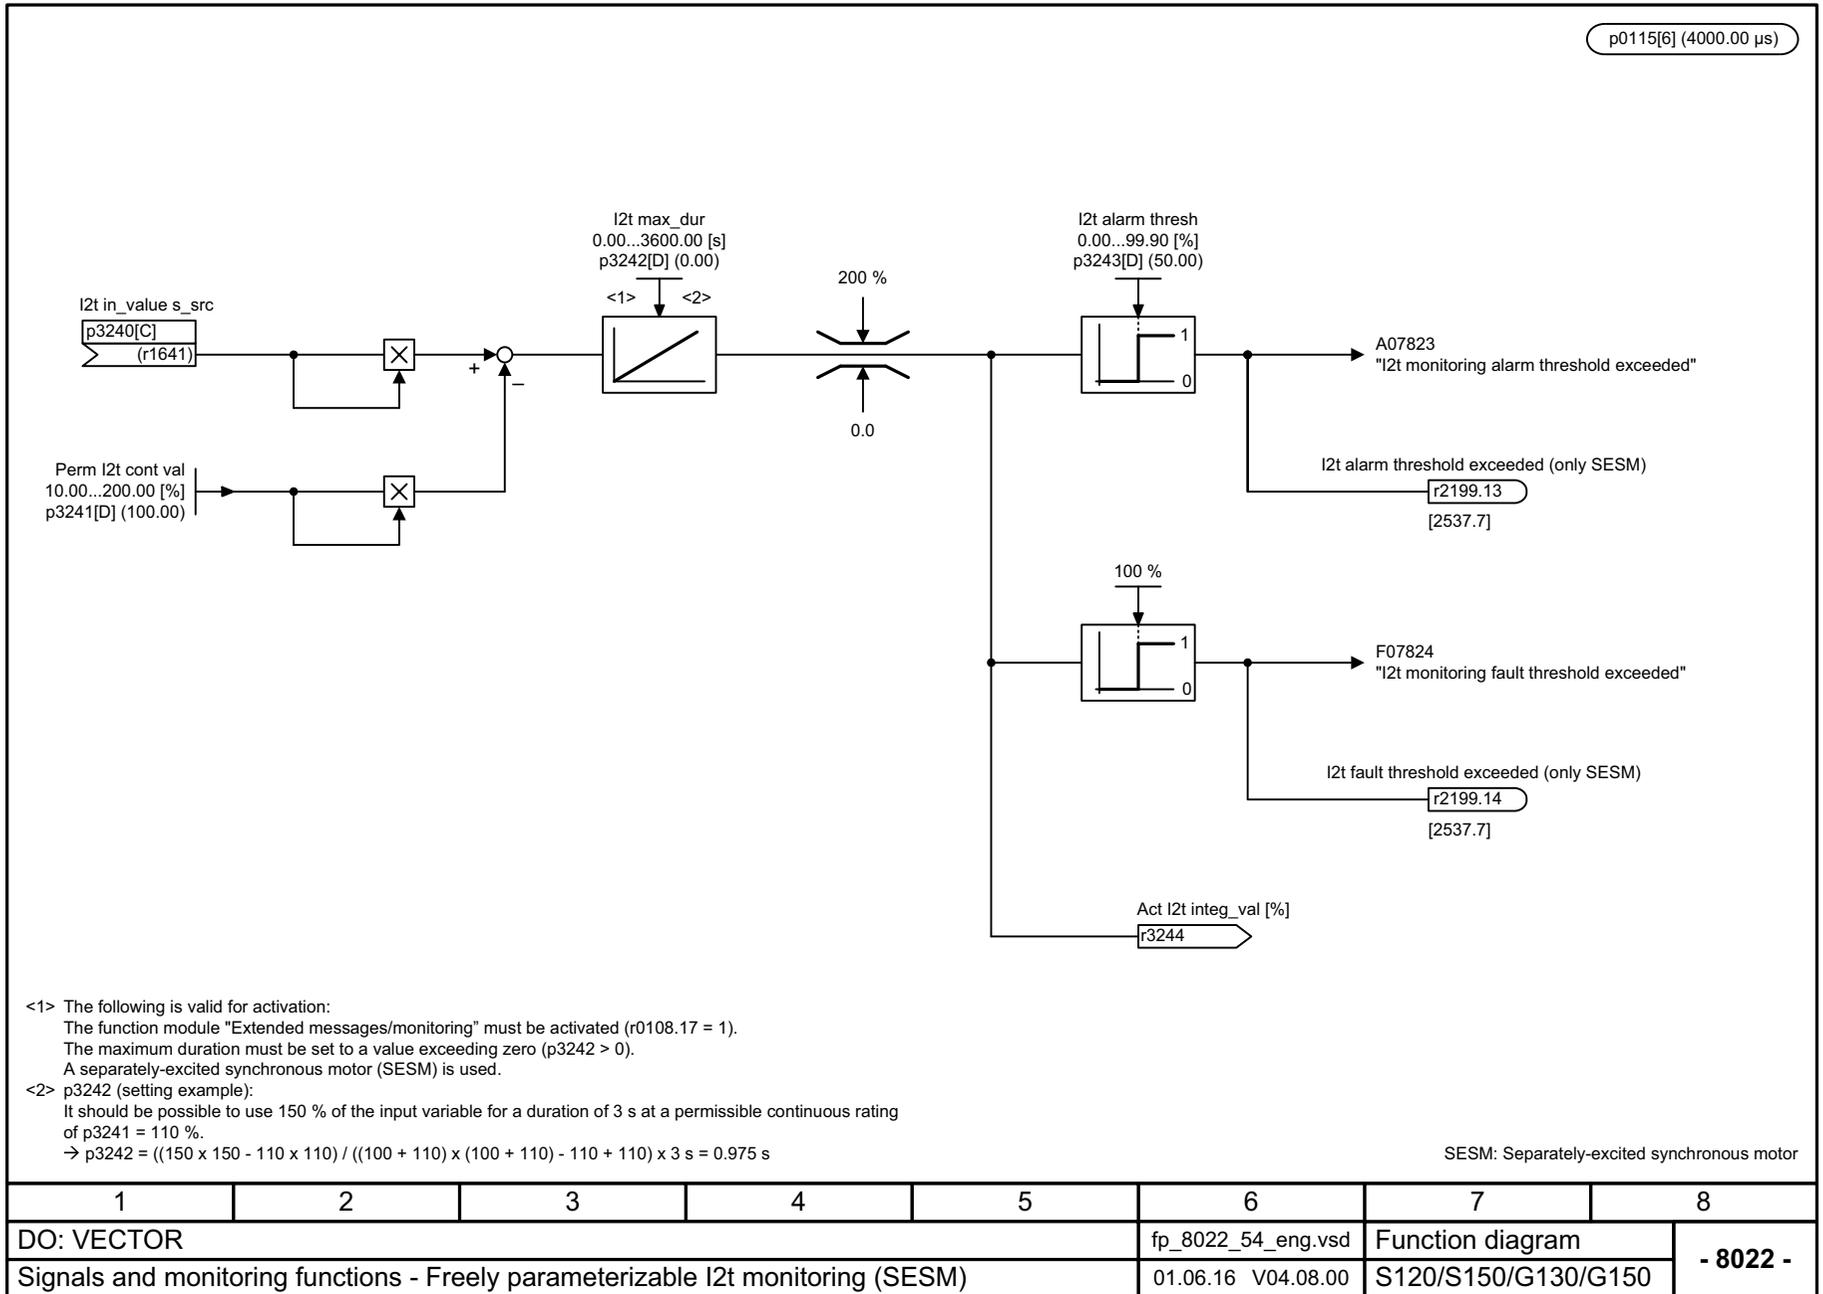


## 3.20 Diagnostics

### Function diagrams

8050 – Overview	1297
8060 – Fault buffer	1298
8065 – Alarm buffer	1299
8070 – Faults/alarms trigger word (r2129)	1300
8075 – Faults/alarms configuration	1301
8134 – Measuring sockets (T0, T1, T2)	1302
8144 – Recorder overview (r0108.5 = 1)	1303
8145 – Recorder sequence control (r0108.5 = 1)	1304

Fig. 3-176 8050 – Overview

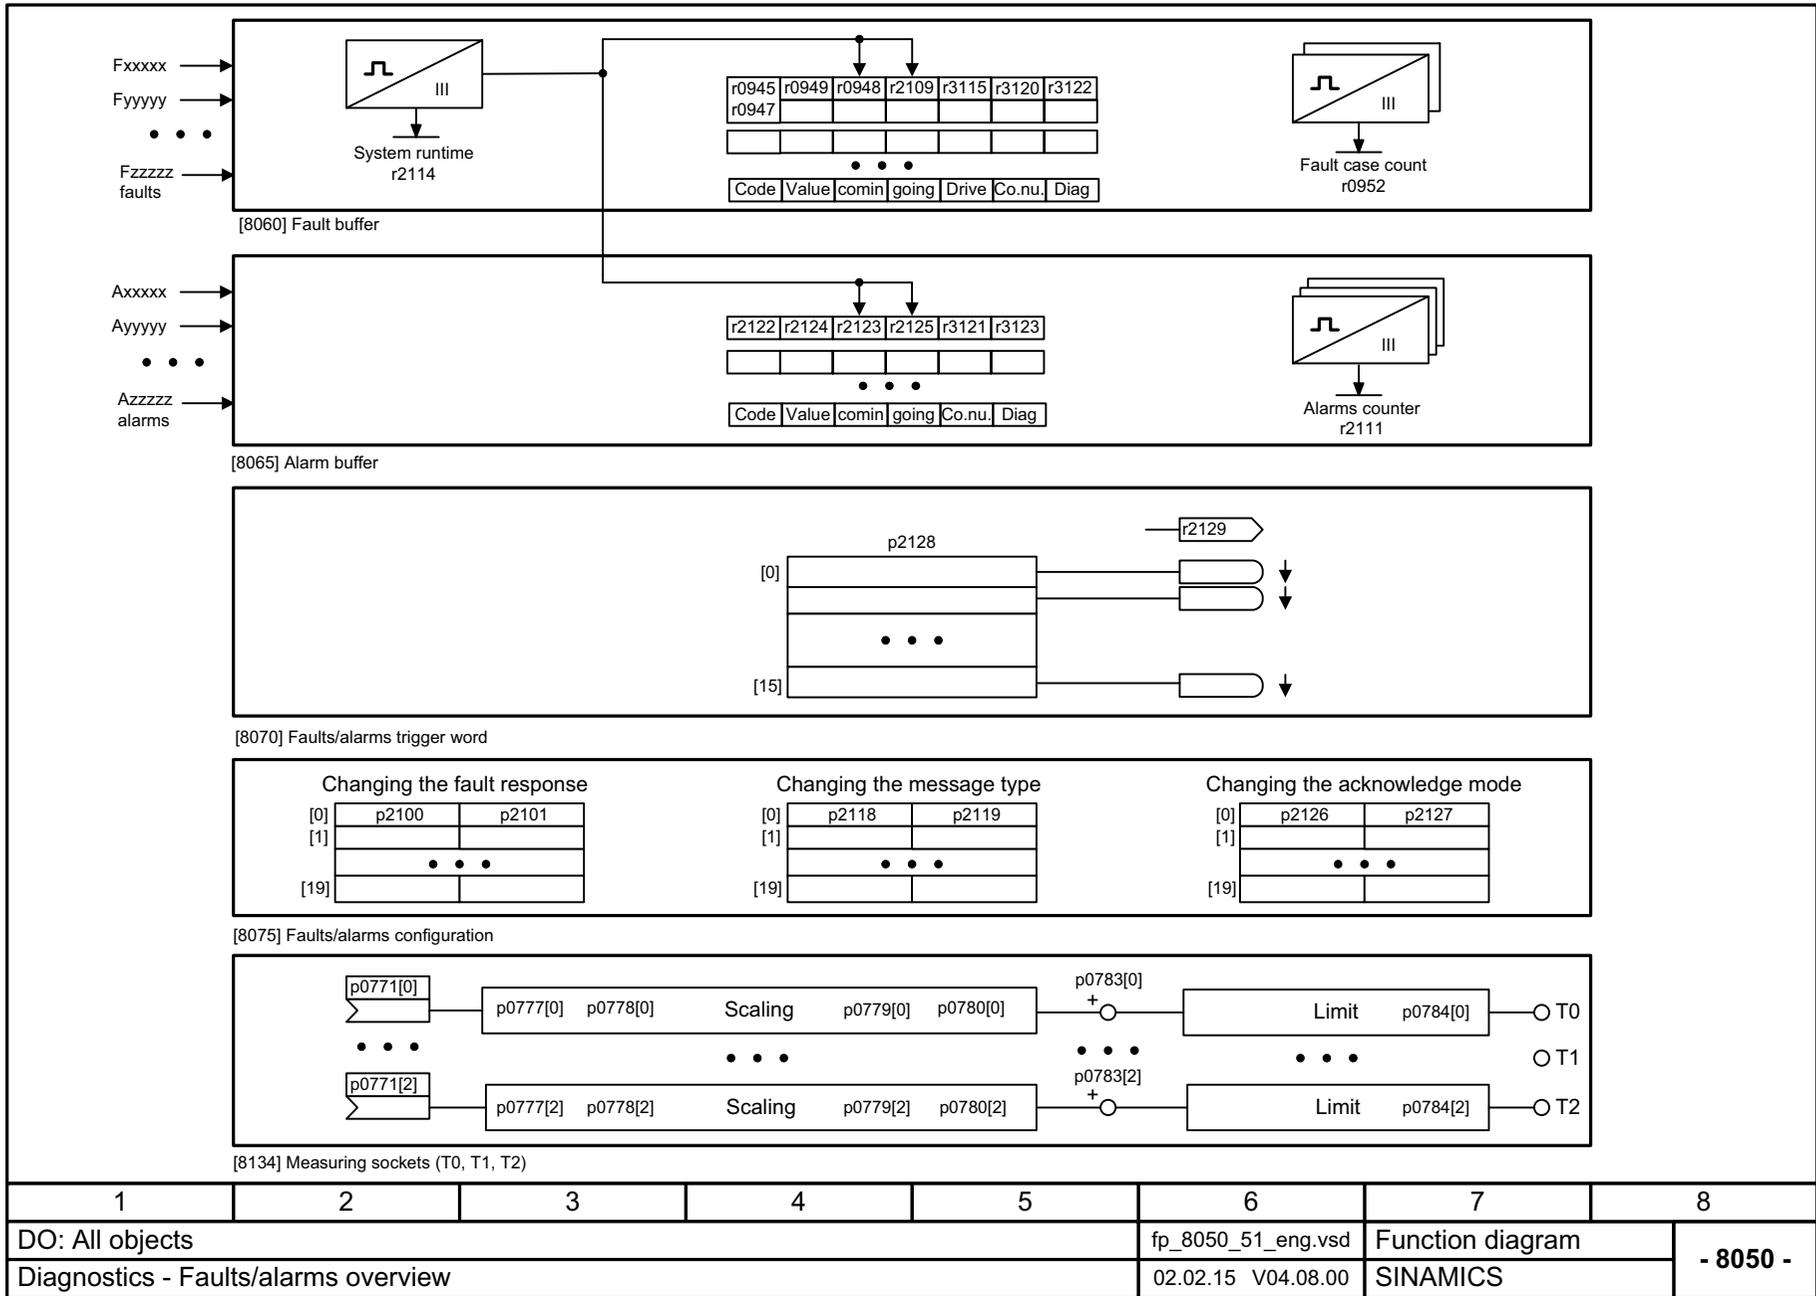

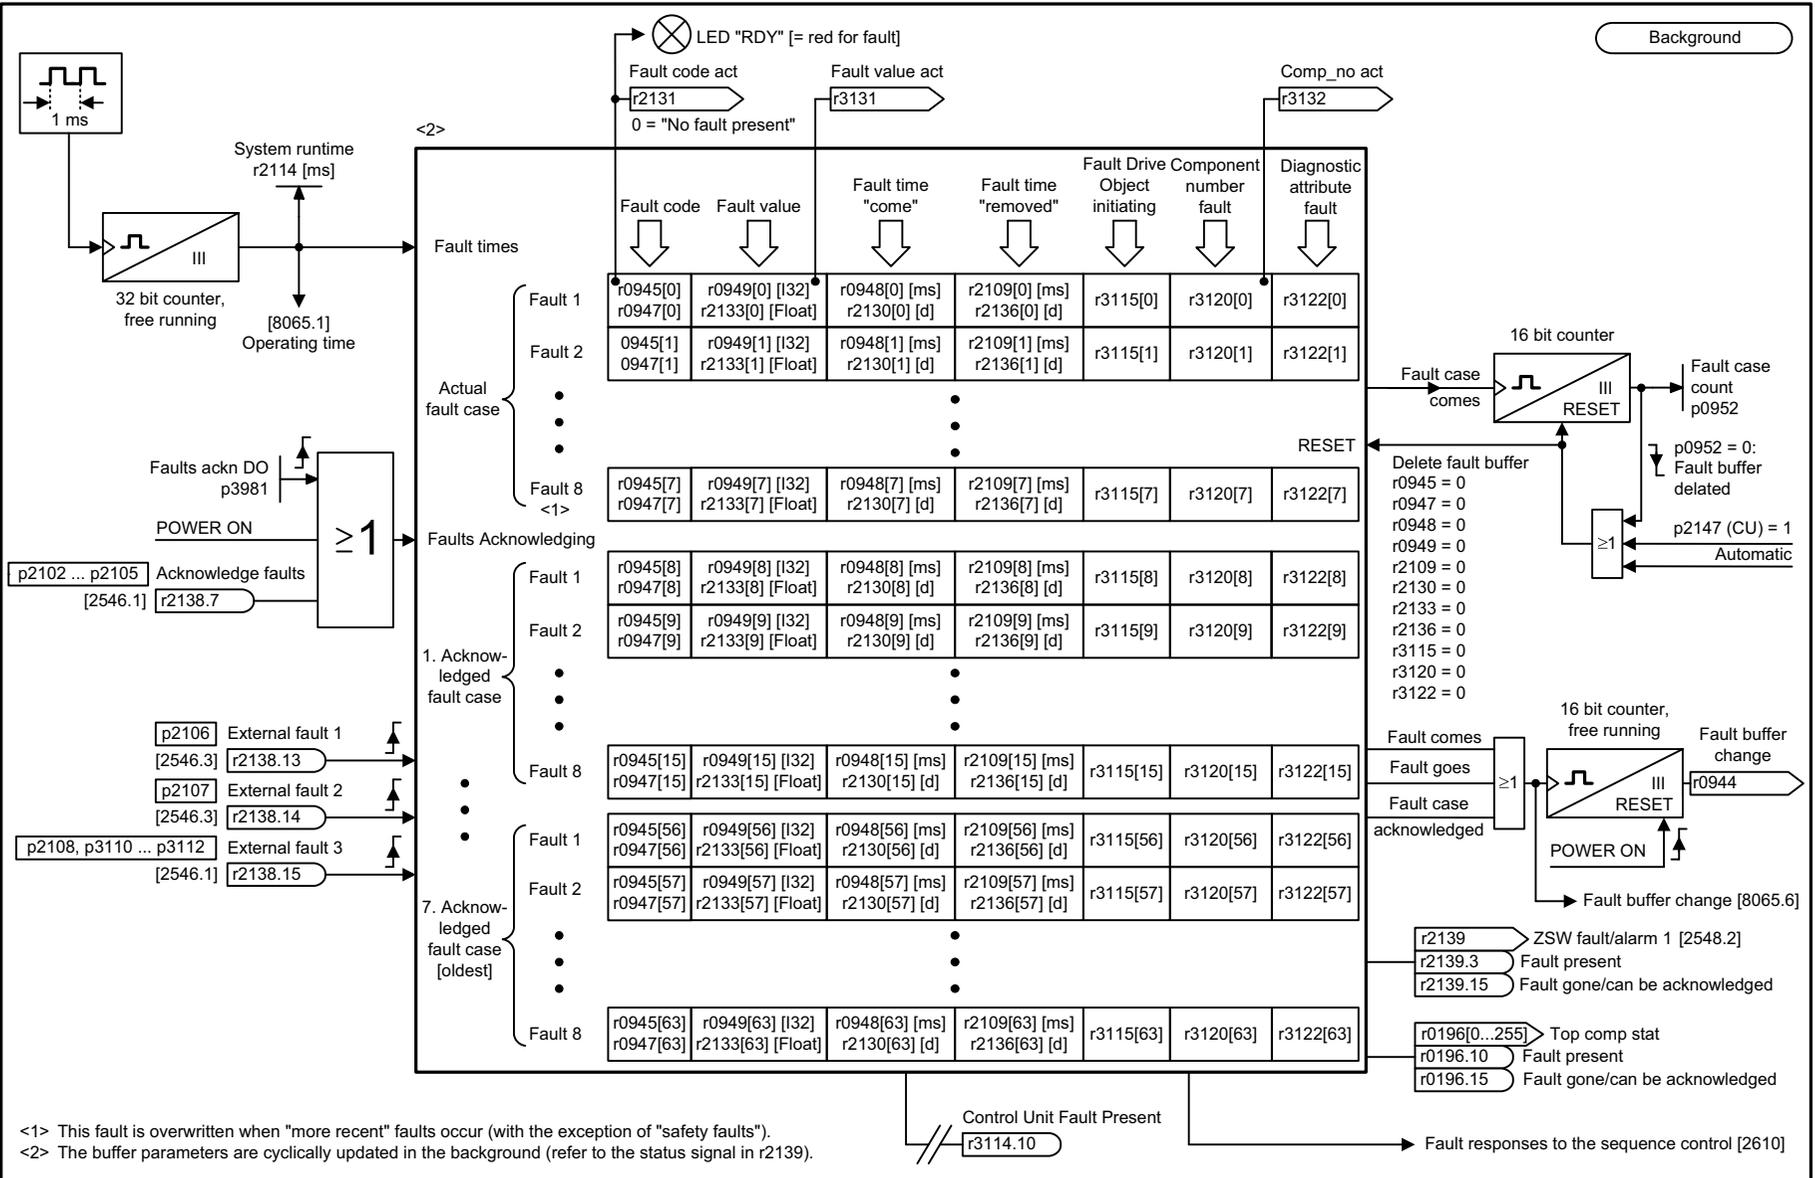
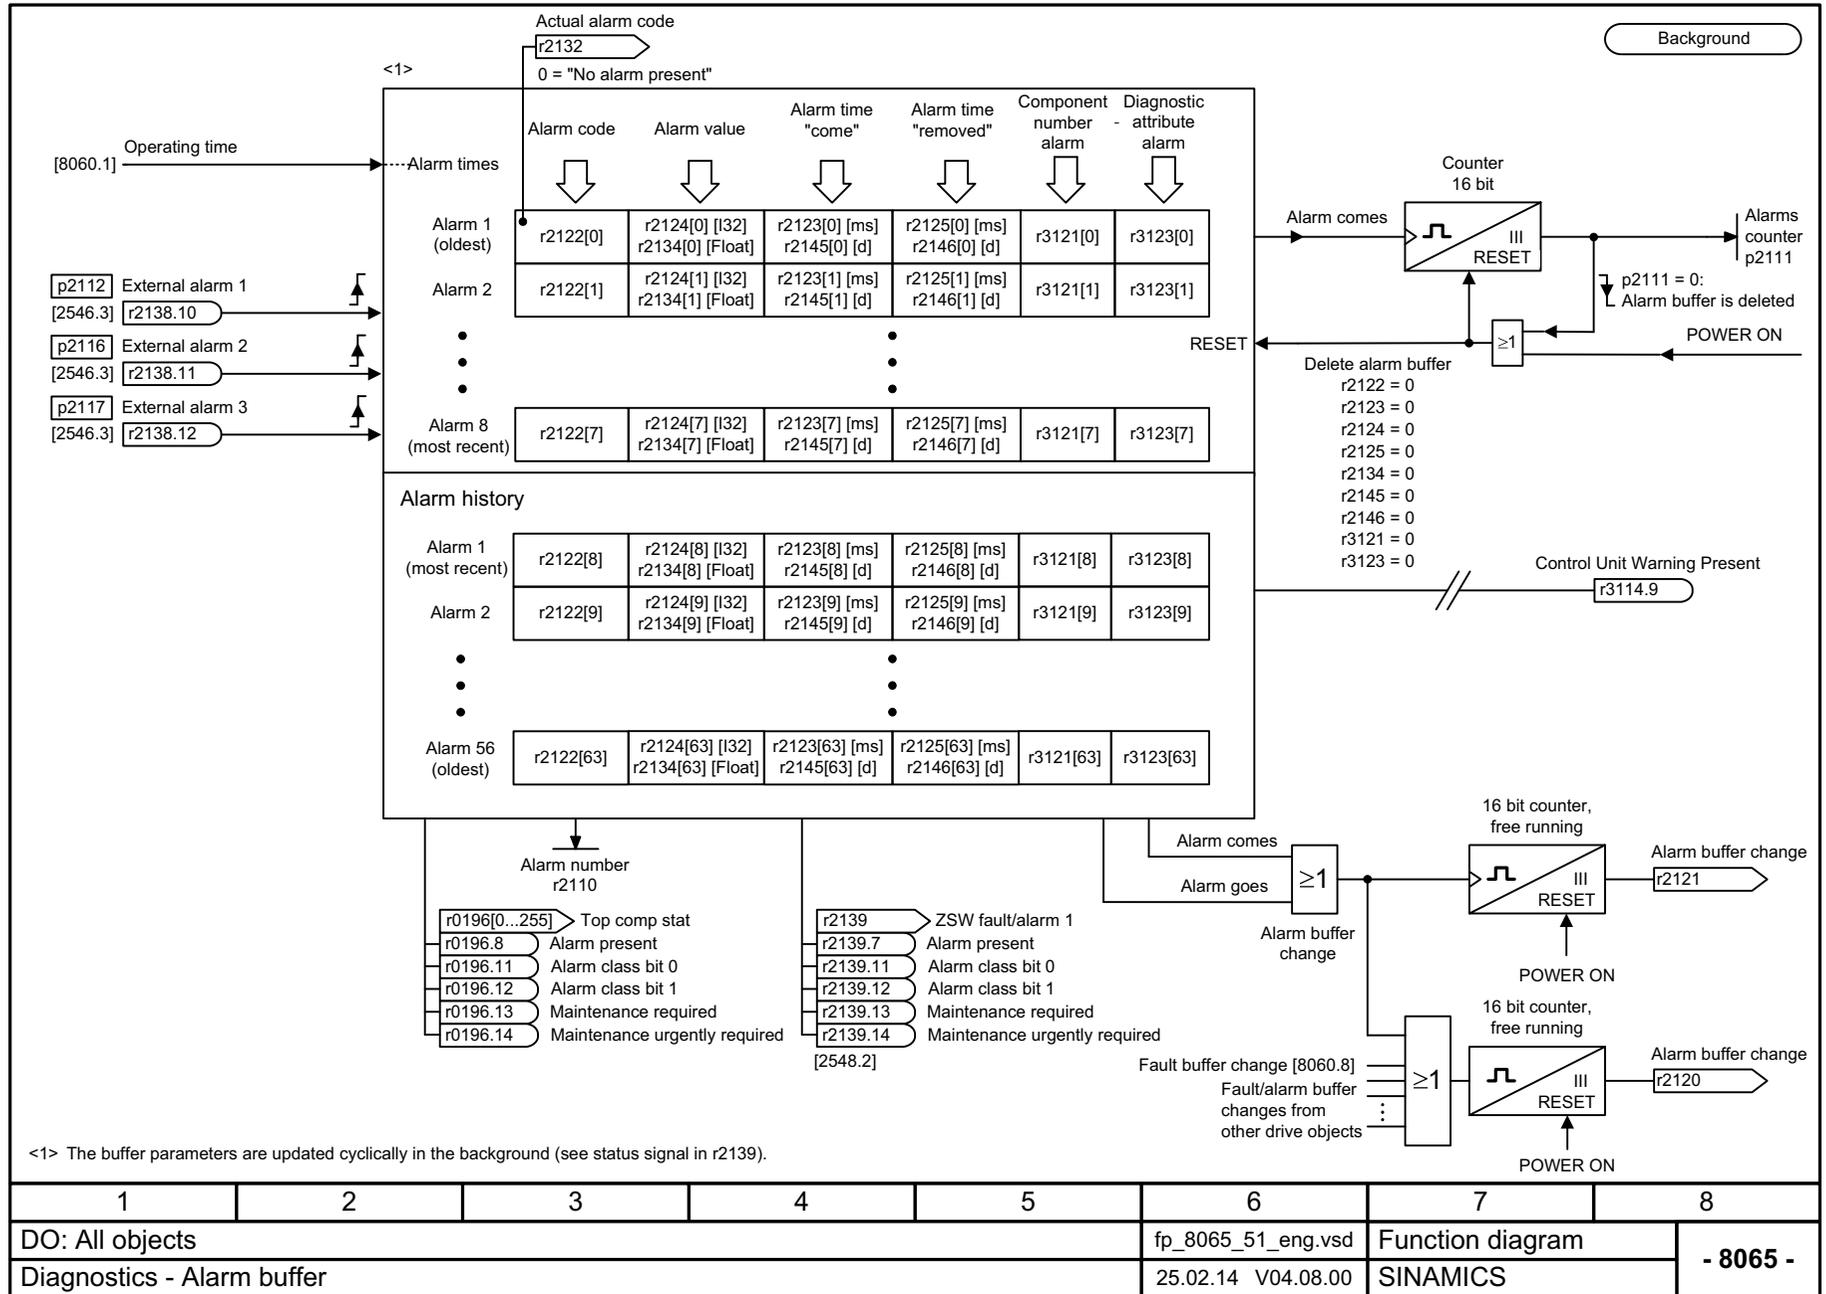


Fig. 3-177 8060 – Fault buffer

1	2	3	4	5	6	7	8
DO: All objects					fp_8060_51_eng.vsd	Function diagram	
Diagnostics - Fault buffer					19.02.14 V04.08.00	SINAMICS	
							<b>- 8060 -</b>

Fig. 3-178 8065 – Alarm buffer




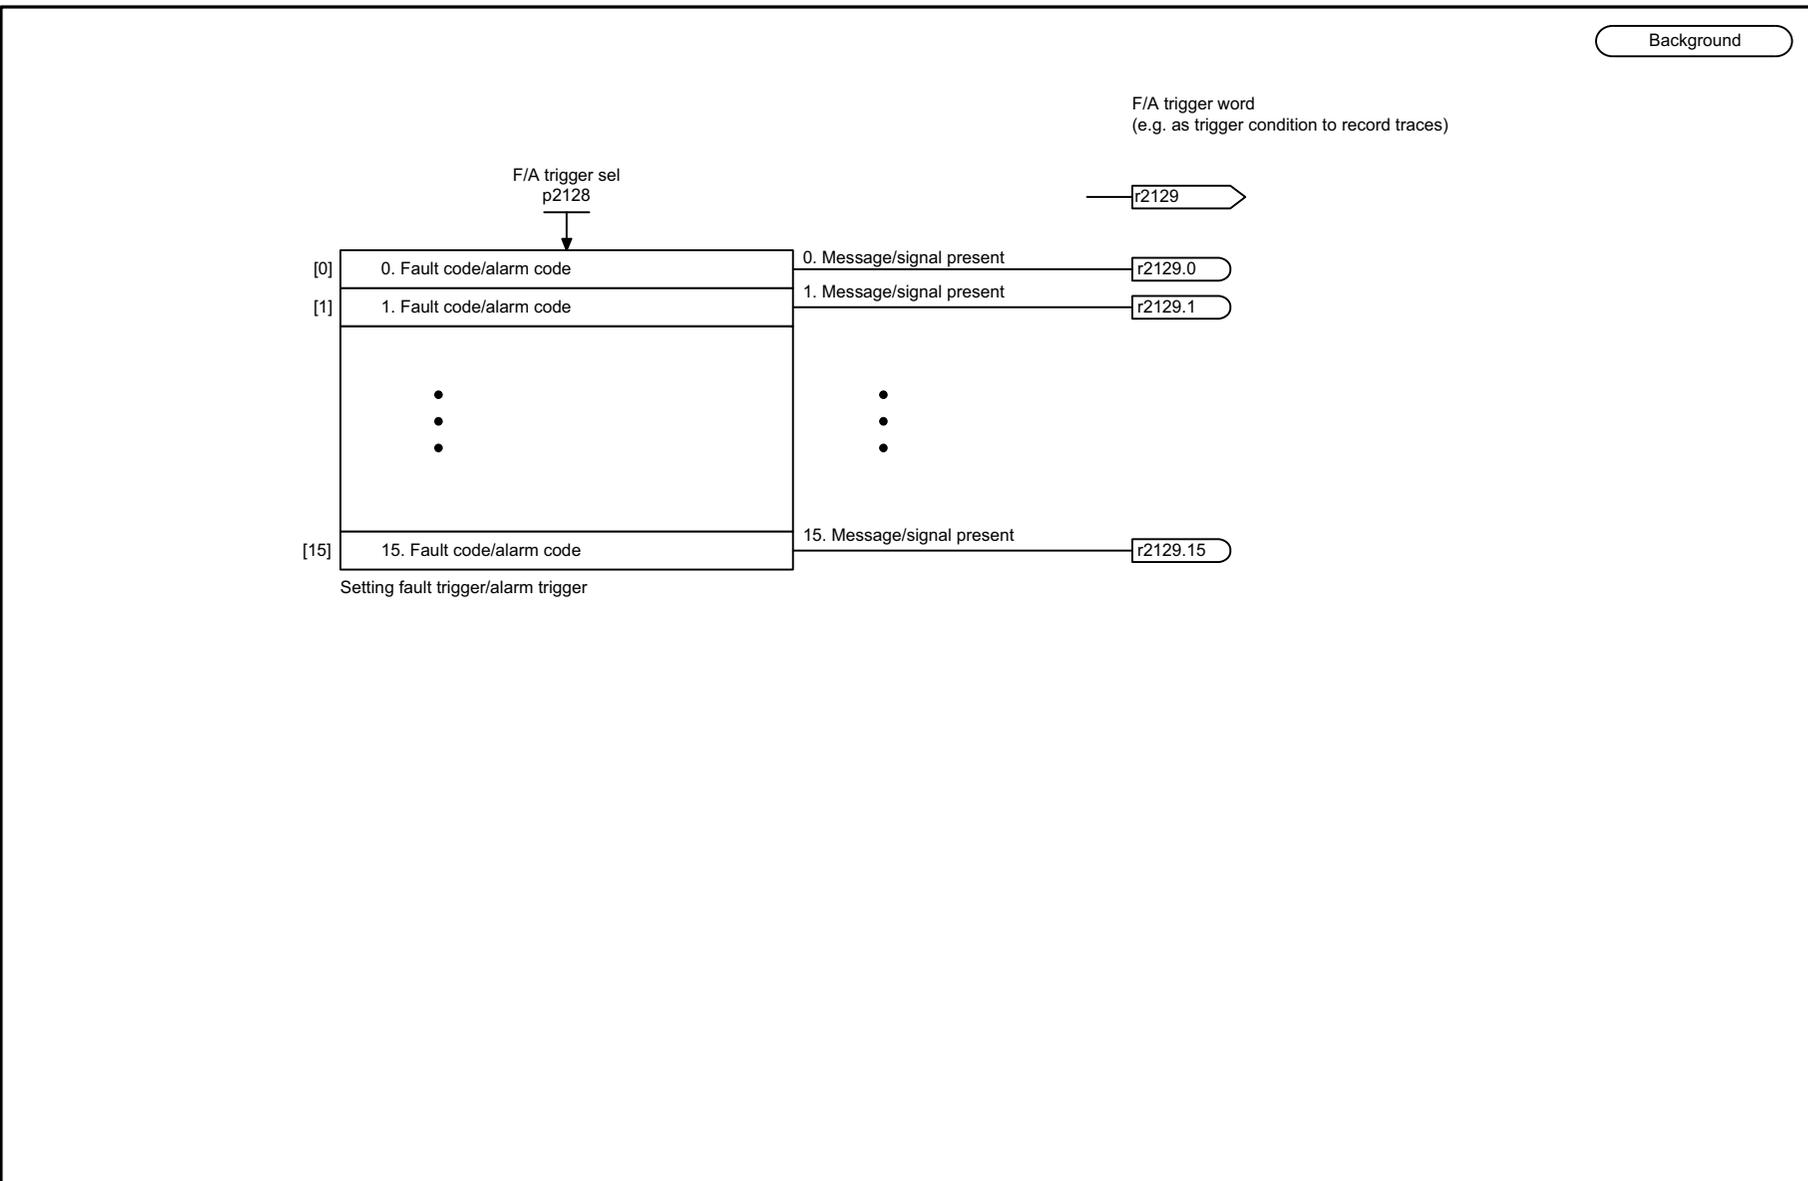


Fig. 3-179 8070 – Faults/alarms trigger word (r2129)


1	2	3	4	5	6	7	8
DO: All objects					fp_8070_51_eng.vsd	Function diagram	
Diagnostics - Faults/alarms trigger word (r2129)					05.11.13 V04.08.00	SINAMICS	
							<b>- 8070 -</b>

Fig. 3-180 8075 – Faults/alarms configuration

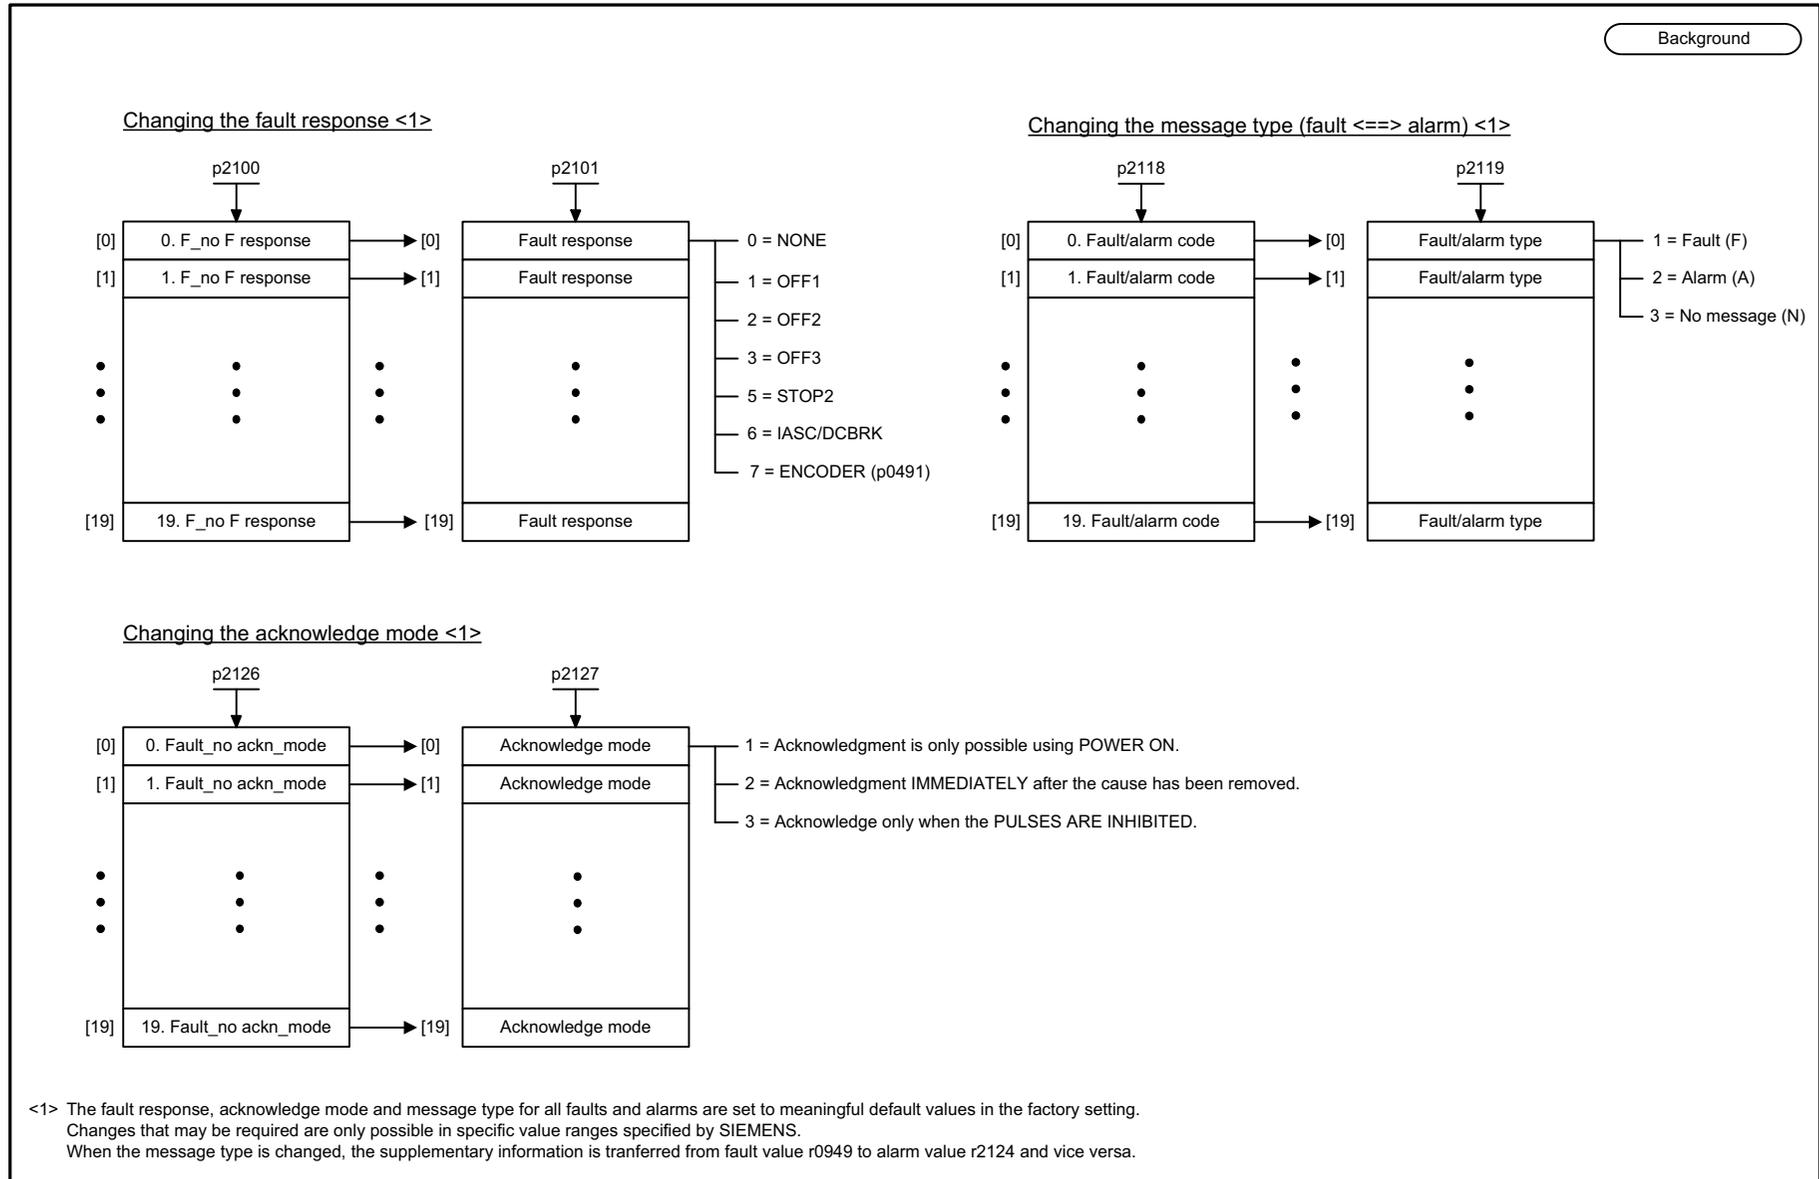

<1> The fault response, acknowledge mode and message type for all faults and alarms are set to meaningful default values in the factory setting. Changes that may be required are only possible in specific value ranges specified by SIEMENS. When the message type is changed, the supplementary information is transferred from fault value r0949 to alarm value r2124 and vice versa.

1	2	3	4	5	6	7	8
DO: All objects					fp_8075_51_eng.vsd	Function diagram	
Diagnostics - Faults/alarms configuration					22.01.14 V04.08.00	SINAMICS	
							<b>- 8075 -</b>

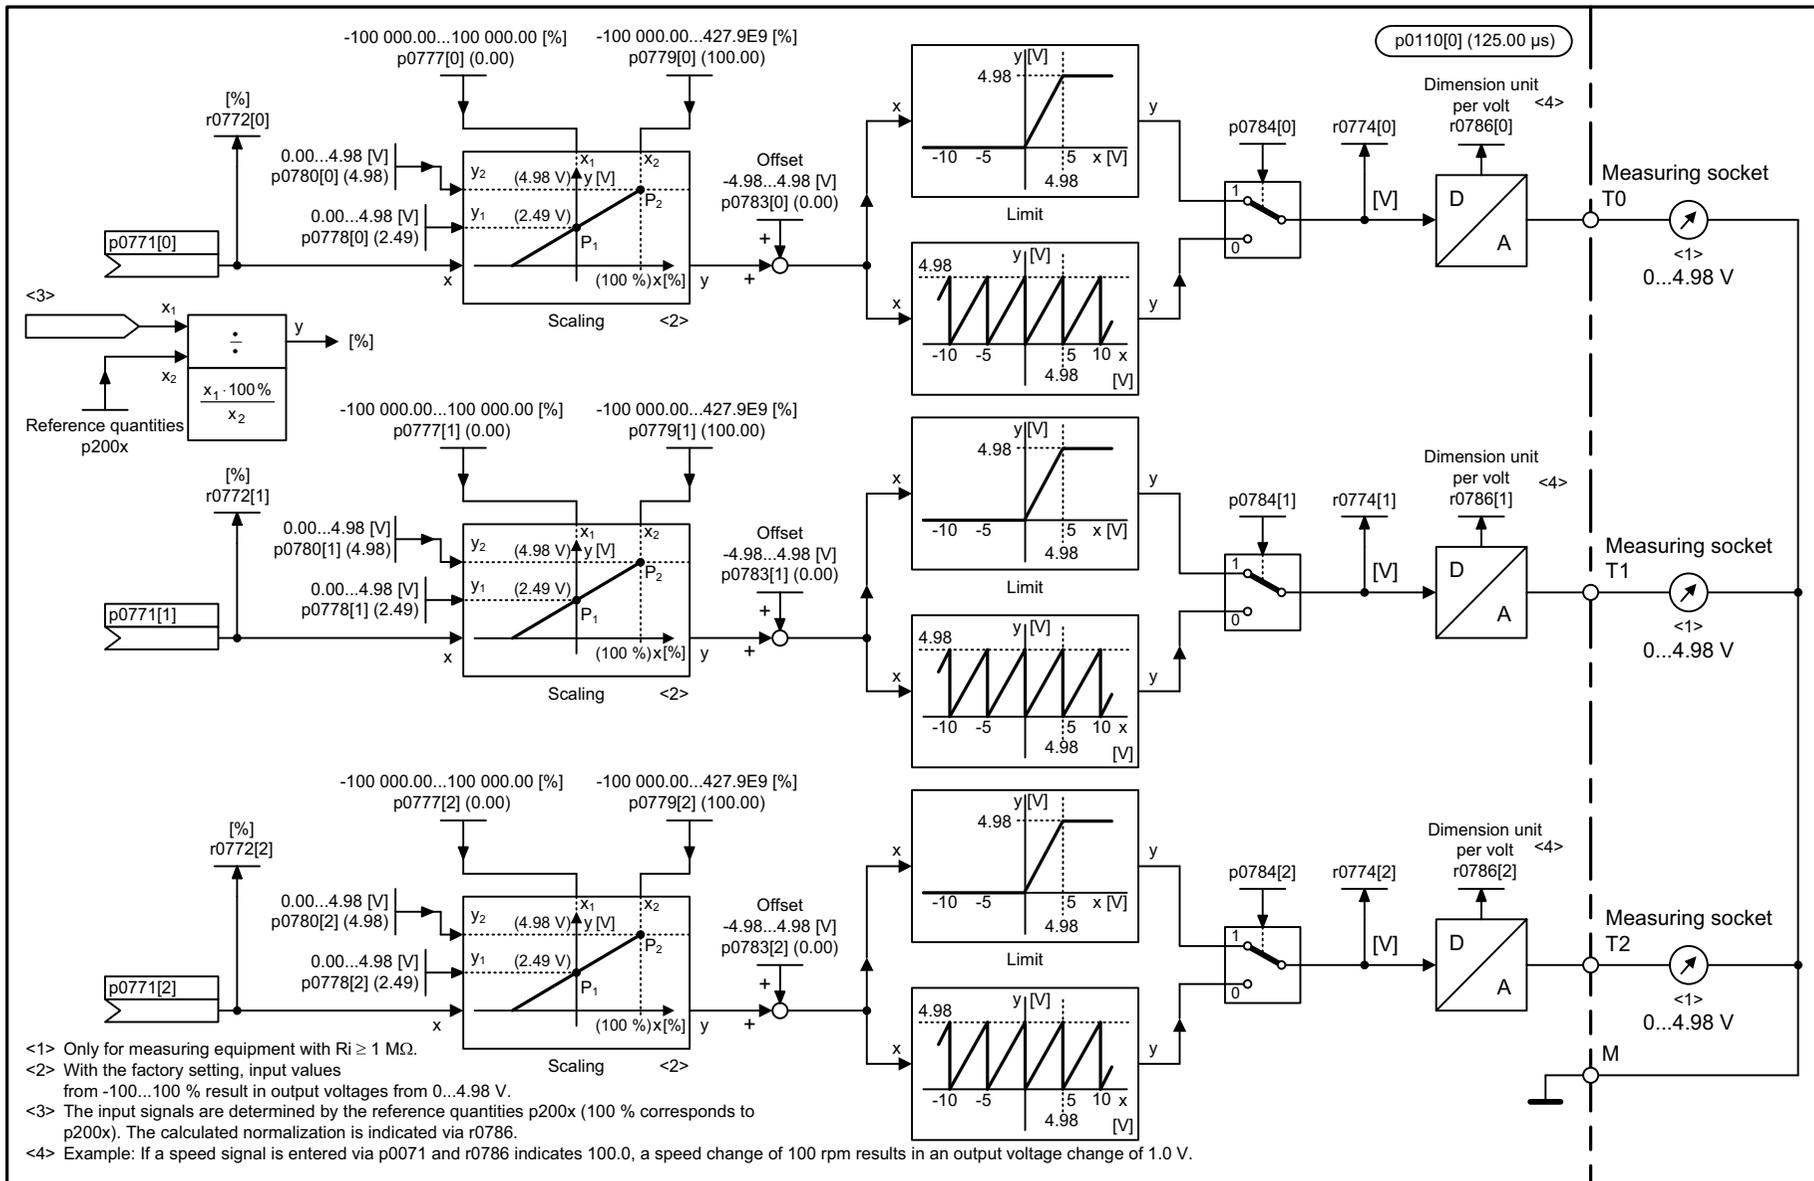


- <1> Only for measuring equipment with  $R_i \geq 1 \text{ M}\Omega$ .
- <2> With the factory setting, input values from -100...100 % result in output voltages from 0...4.98 V.
- <3> The input signals are determined by the reference quantities p200x (100 % corresponds to p200x). The calculated normalization is indicated via r0786.
- <4> Example: If a speed signal is entered via p0071 and r0786 indicates 100.0, a speed change of 100 rpm results in an output voltage change of 1.0 V.

1	2	3	4	5	6	7	8
DO: CU_CX32, CU_G, CU_I, CU_MV, CU_S					fp_8134_51_eng.vsd	Function diagram	
Diagnostics - Measuring sockets (T0, T1, T2)					12.07.12 V04.08.00	SINAMICS	
							<b>- 8134 -</b>

Fig. 3-181 8134 – Measuring sockets (T0, T1, T2)

Fig. 3-182 8144 - Recorder overview (r0108.5 = 1)

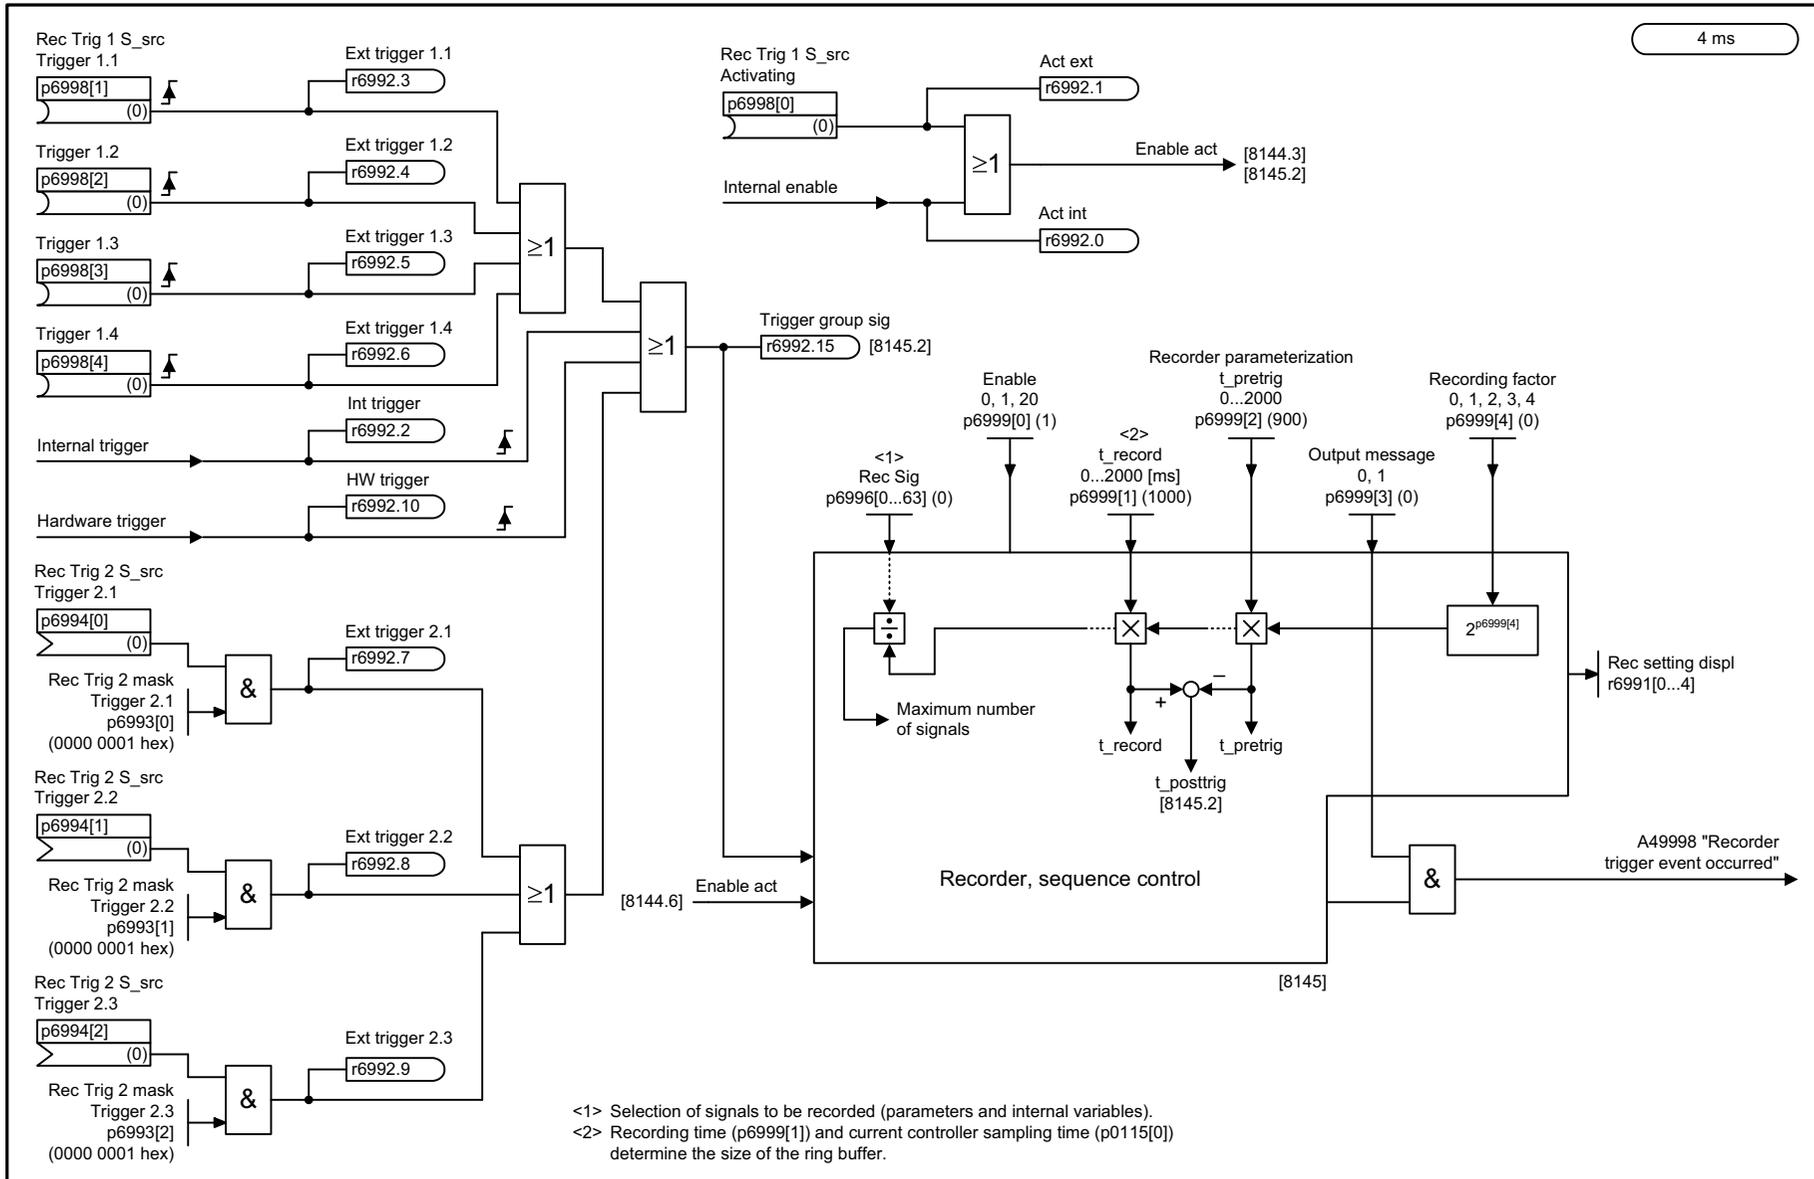

<1> Selection of signals to be recorded (parameters and internal variables).  
<2> Recording time (p6999[1]) and current controller sampling time (p0115[0]) determine the size of the ring buffer.

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, R_INF, S_INF, SERVO, VECTOR					fp_8144_54_eng.vsd	Function diagram	
Diagnostics - Recorder overview (r0108.5 = 1)					10.09.15 V04.08.00	S120/S150/G130/G150	
							- 8144 -

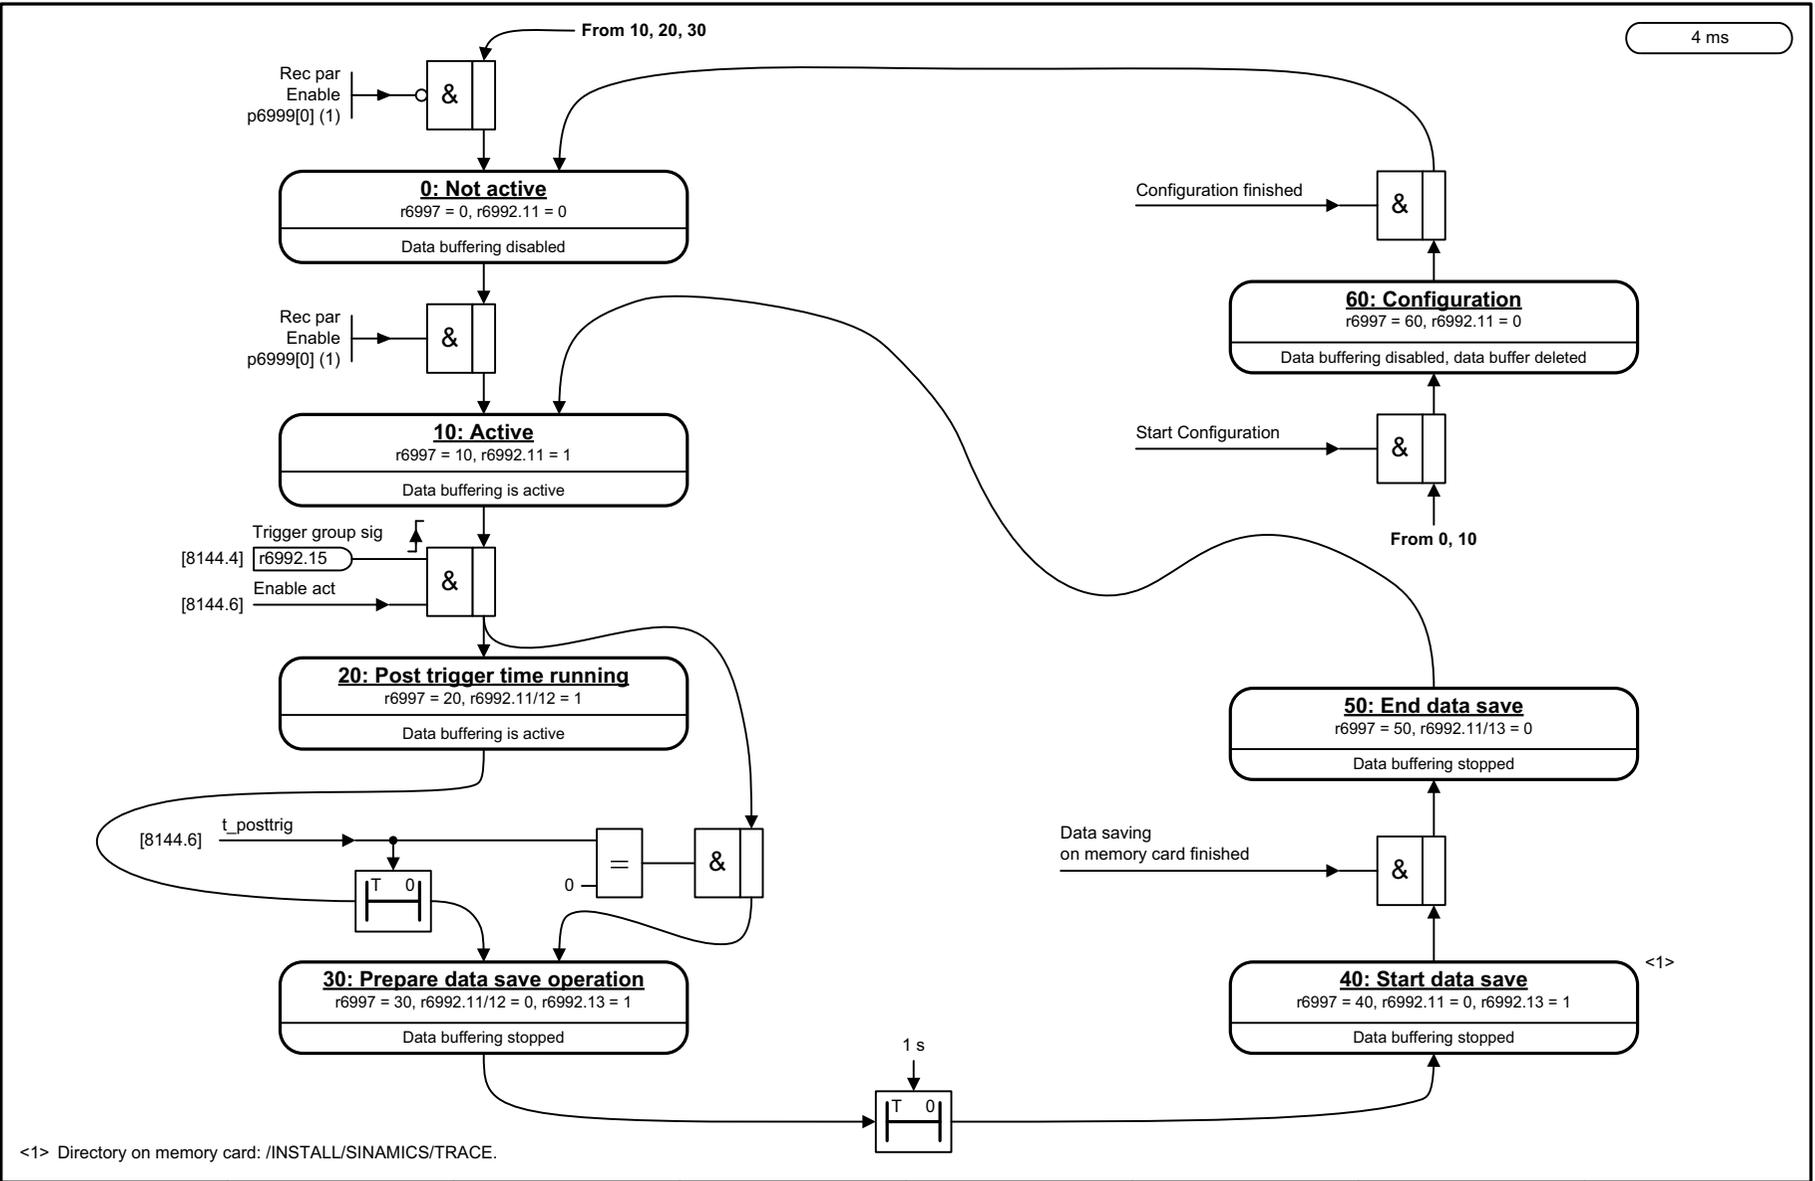



Fig. 3-183 8145 – Recorder sequence control (r0108.5 = 1)

1	2	3	4	5	6	7	8
DO: A_INF, B_INF, R_INF, S_INF, SERVO, VECTOR					fp_8145_54_eng.vsd	Function diagram	
Diagnostics - Recorder sequence control (r0108.5 = 1)					10.09.15 V04.08.00	S120/S150/G130/G150	

## 3.21 Data sets

### Function diagrams

8560 – Command Data Sets (CDS)	1306
8565 – Drive Data Sets (DDS)	1307
8570 – Encoder Data Sets (EDS)	1308
8575 – Motor Data Sets (MDS)	1309
8580 – Power unit Data Sets (PDS)	1310

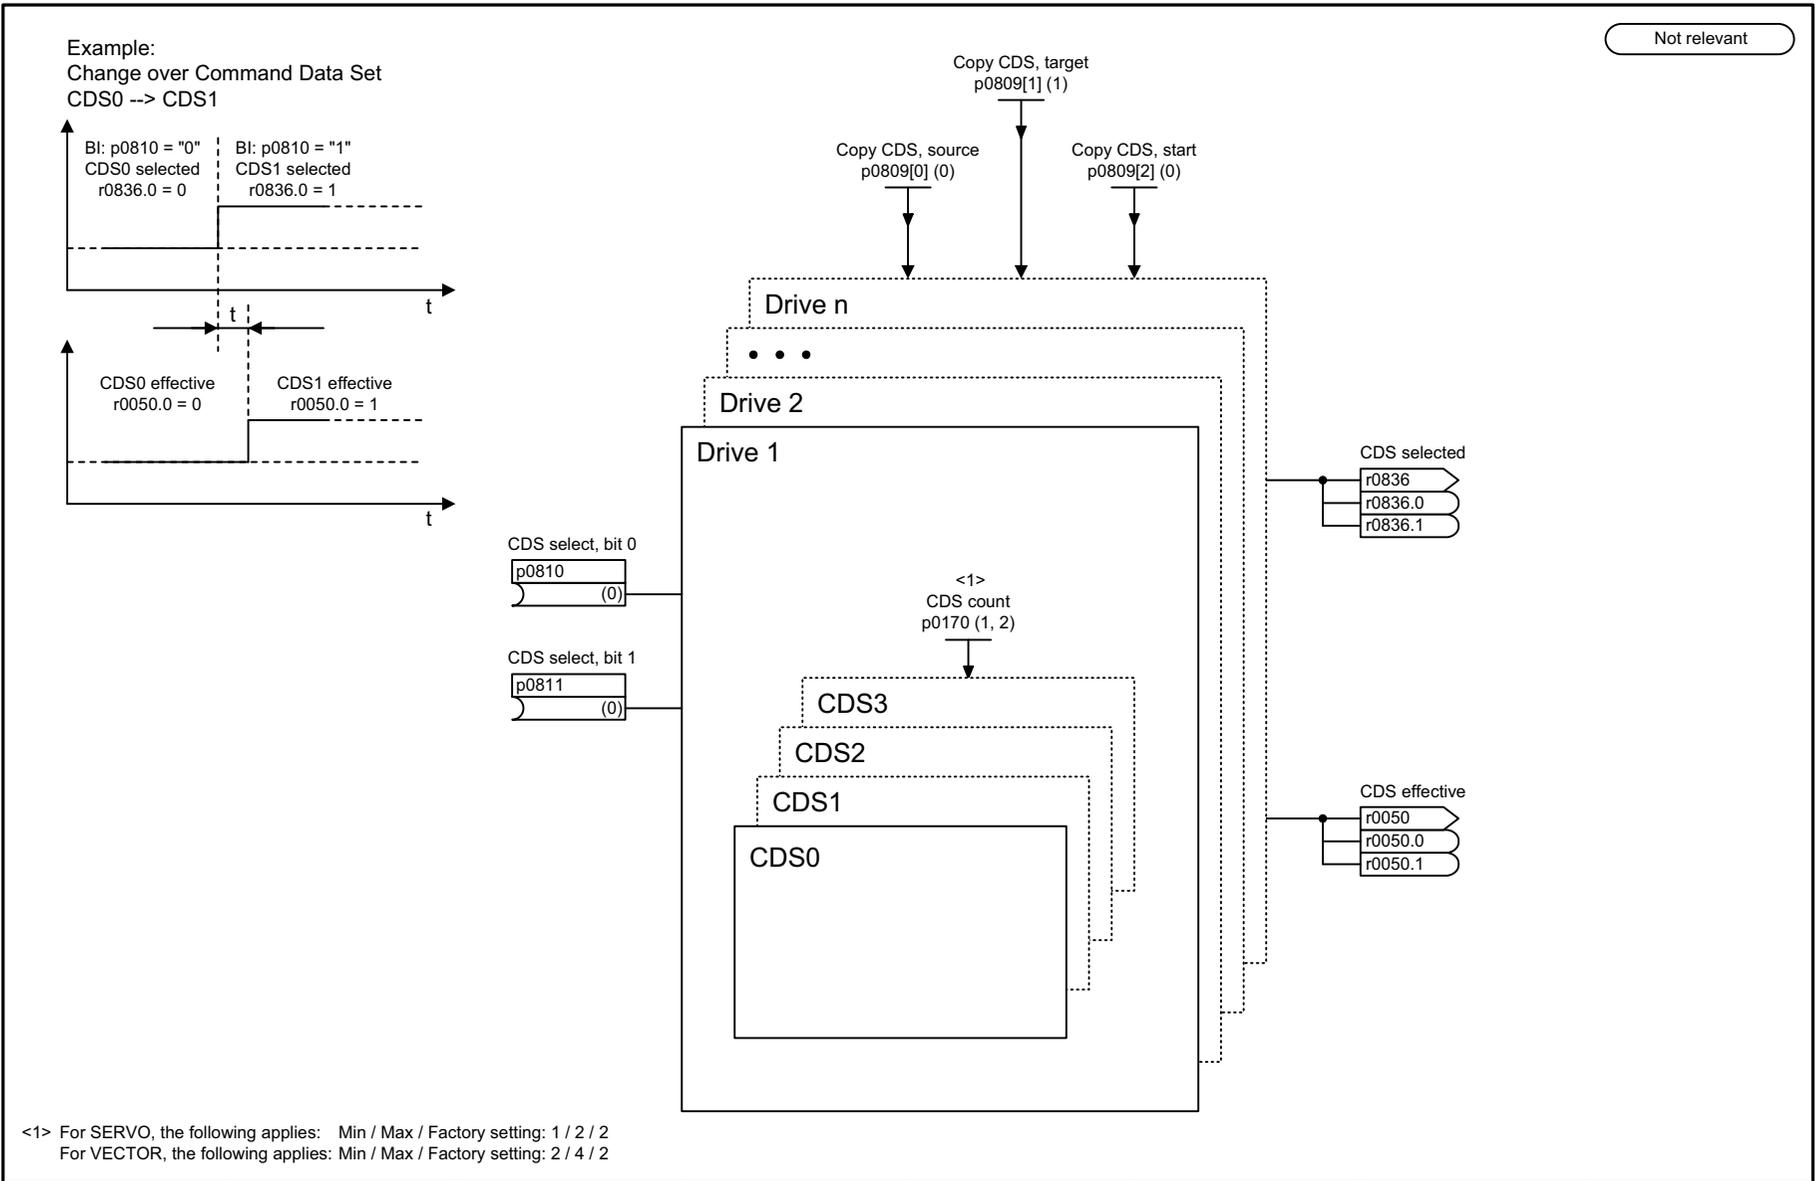


<1> For SERVO, the following applies: Min / Max / Factory setting: 1 / 2 / 2  
For VECTOR, the following applies: Min / Max / Factory setting: 2 / 4 / 2

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_8560_54_eng.vsd	Function diagram	
Data sets - Command Data Sets (CDS)					03.07.13 V04.08.00	S120/S150/G130/G150	

Fig. 3-184 8560 – Command Data Sets (CDS)

Fig. 3-185 8565 – Drive Data Sets (DDS)

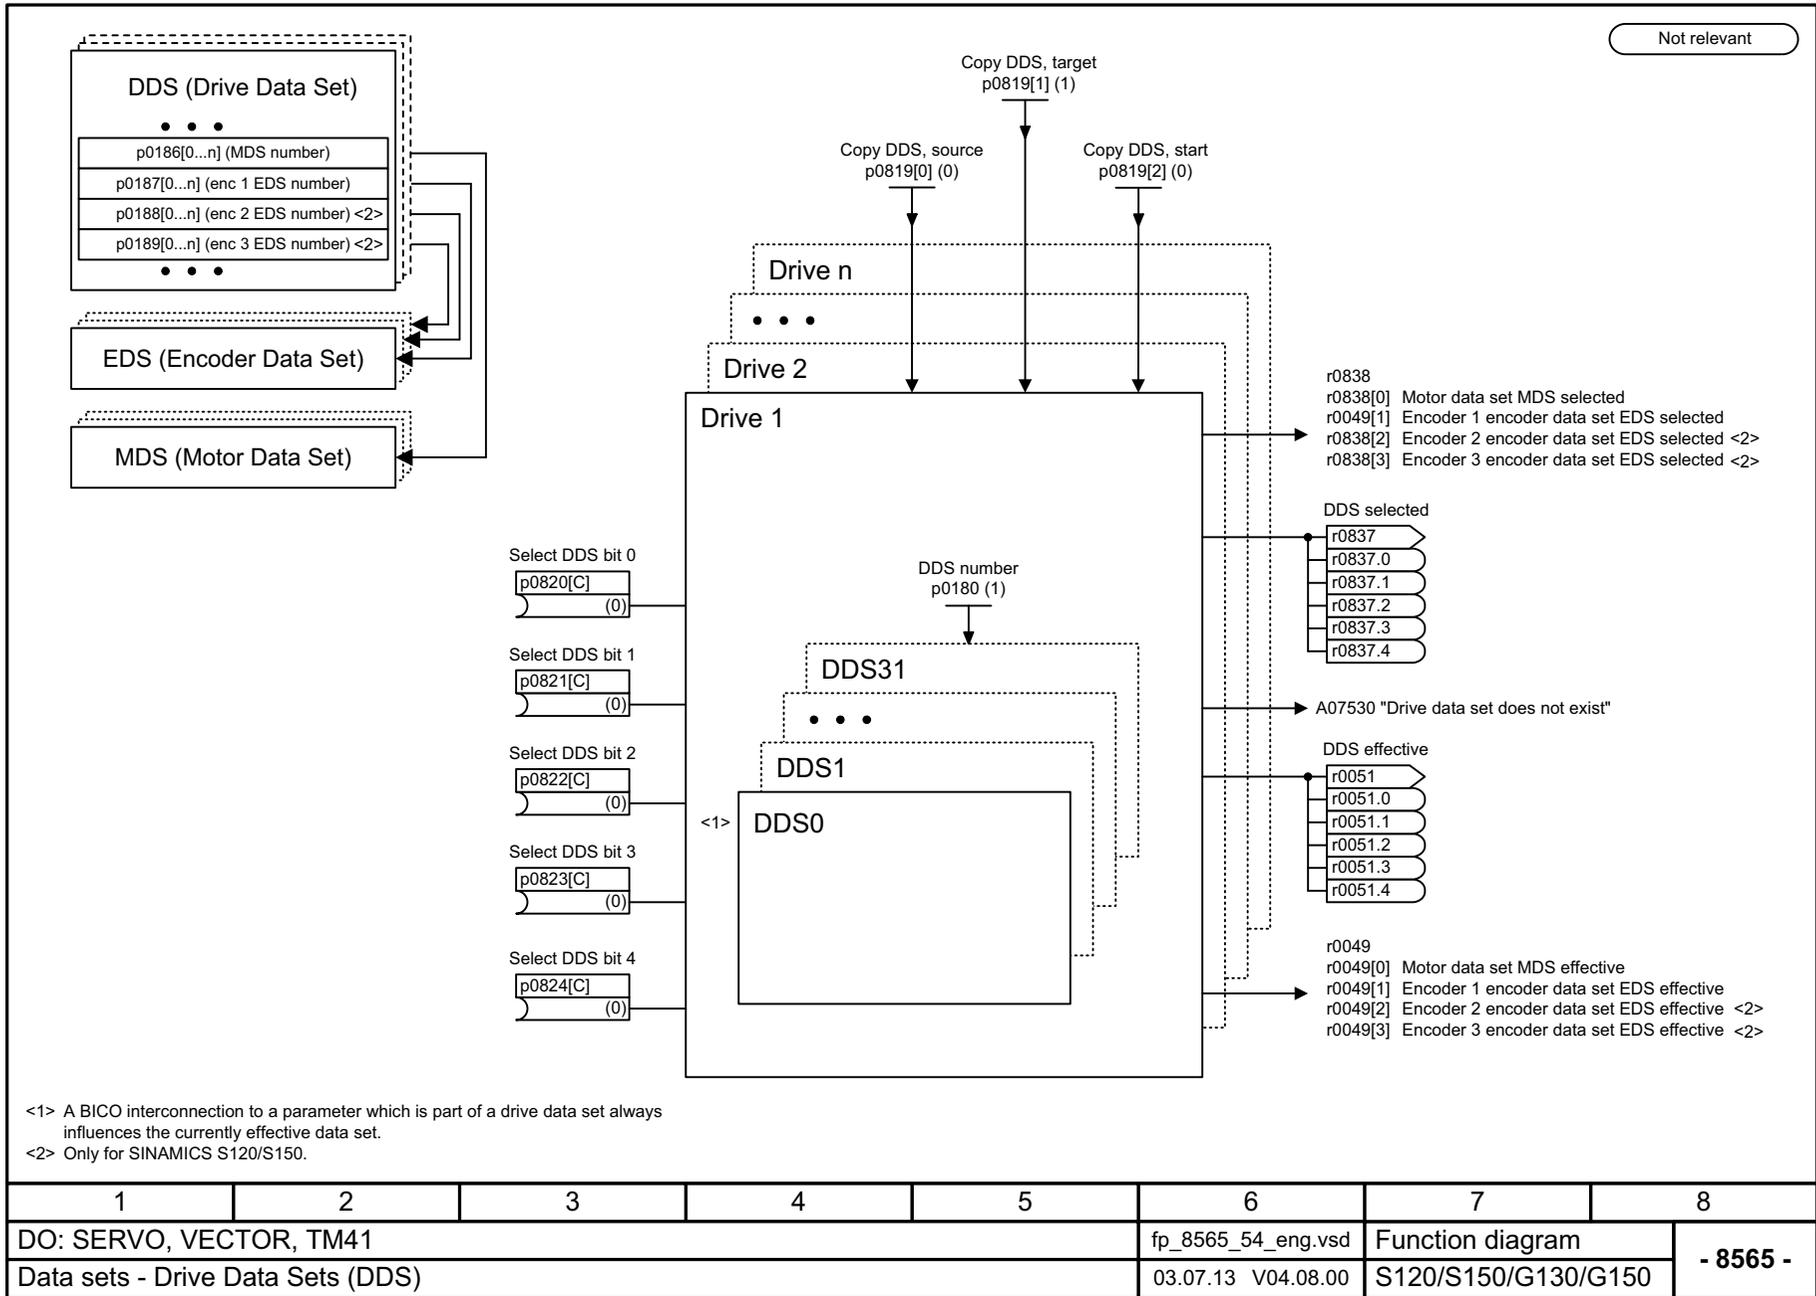

<1> A BICO interconnection to a parameter which is part of a drive data set always influences the currently effective data set.  
<2> Only for SINAMICS S120/S150.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, TM41					fp_8565_54_eng.vsd	Function diagram	
Data sets - Drive Data Sets (DDS)					03.07.13 V04.08.00	S120/S150/G130/G150	
							- 8565 -


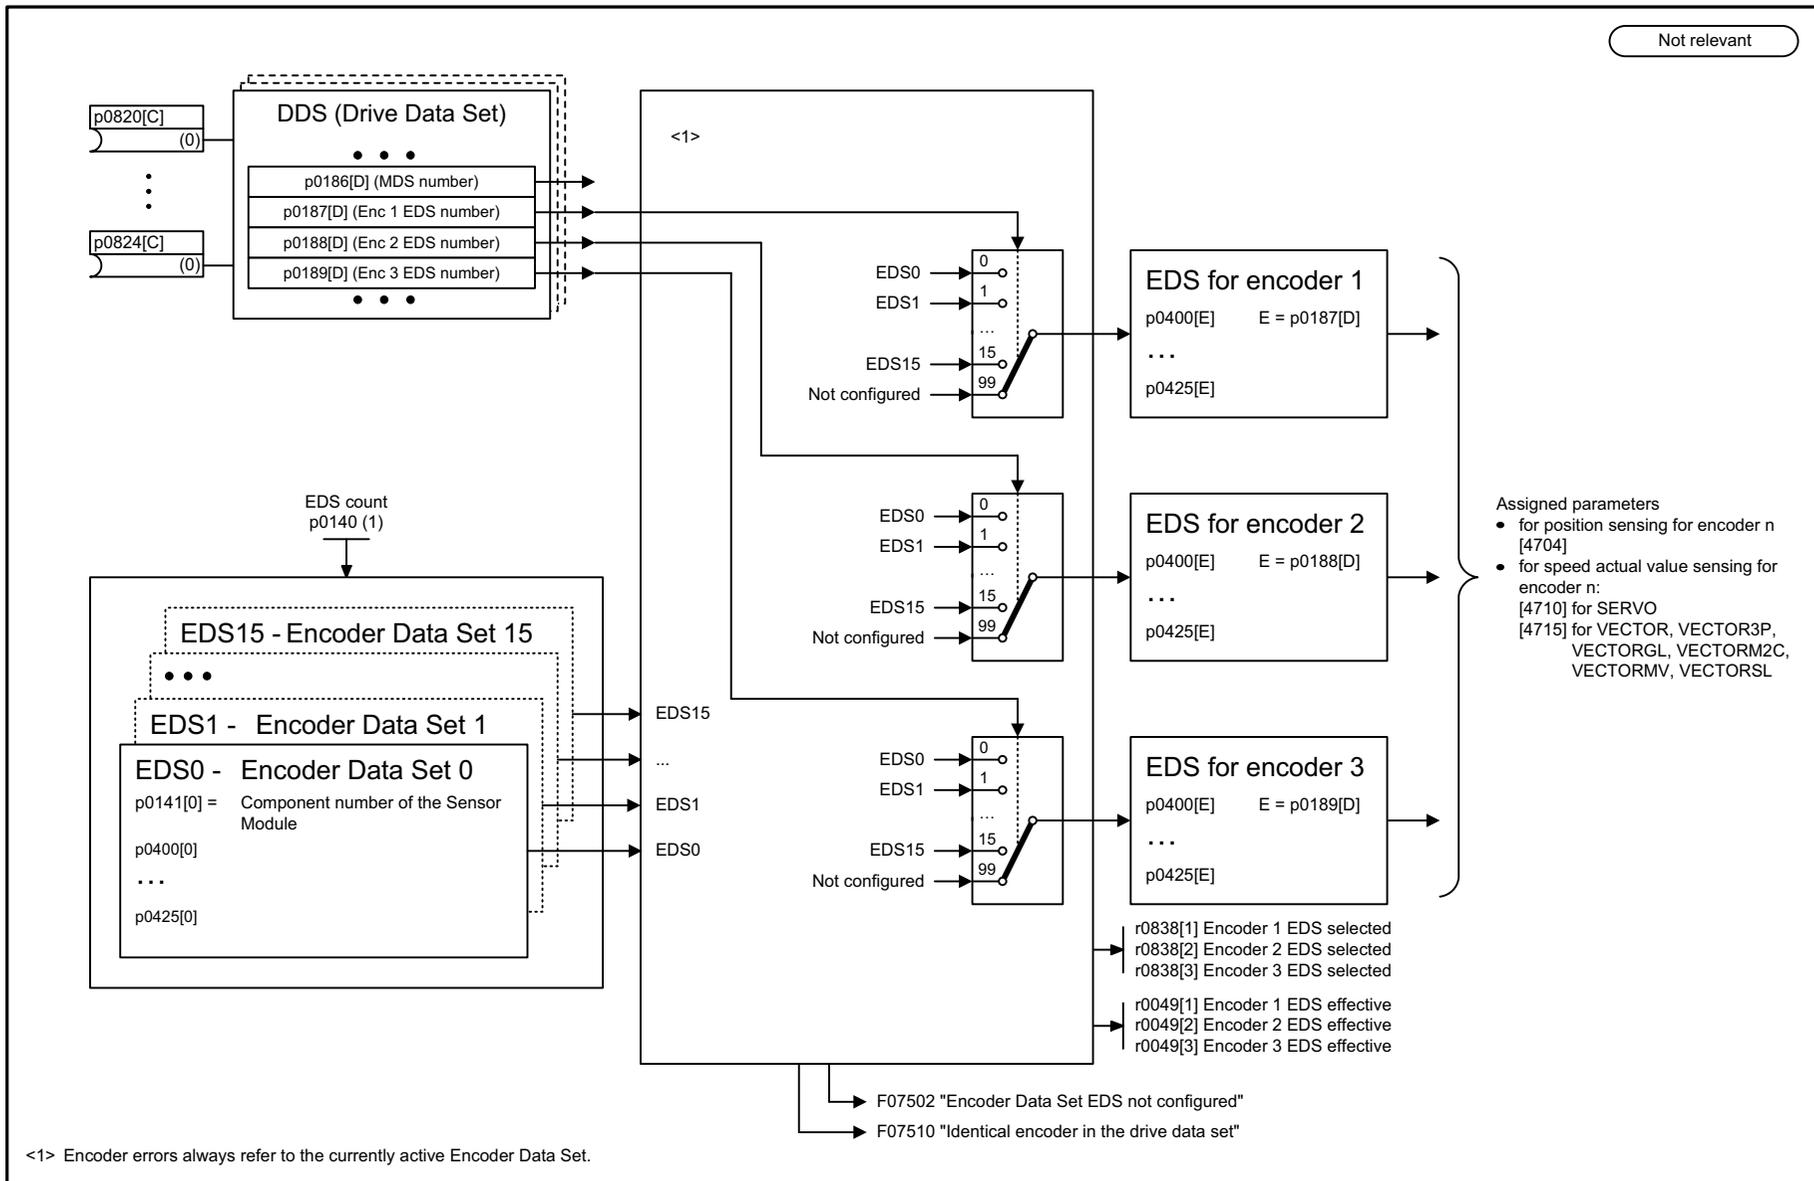


Fig. 3-186 8570 – Encoder Data Sets (EDS)


1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORGL, VECTORM2C, VECTORMV, VECTORSL					fp_8570_51_eng.vsd	Function diagram	
Data sets - Encoder Data Sets (EDS)					19.12.14 V04.08.00	SINAMICS	

Fig. 3-187 8575 – Motor Data Sets (MDS)

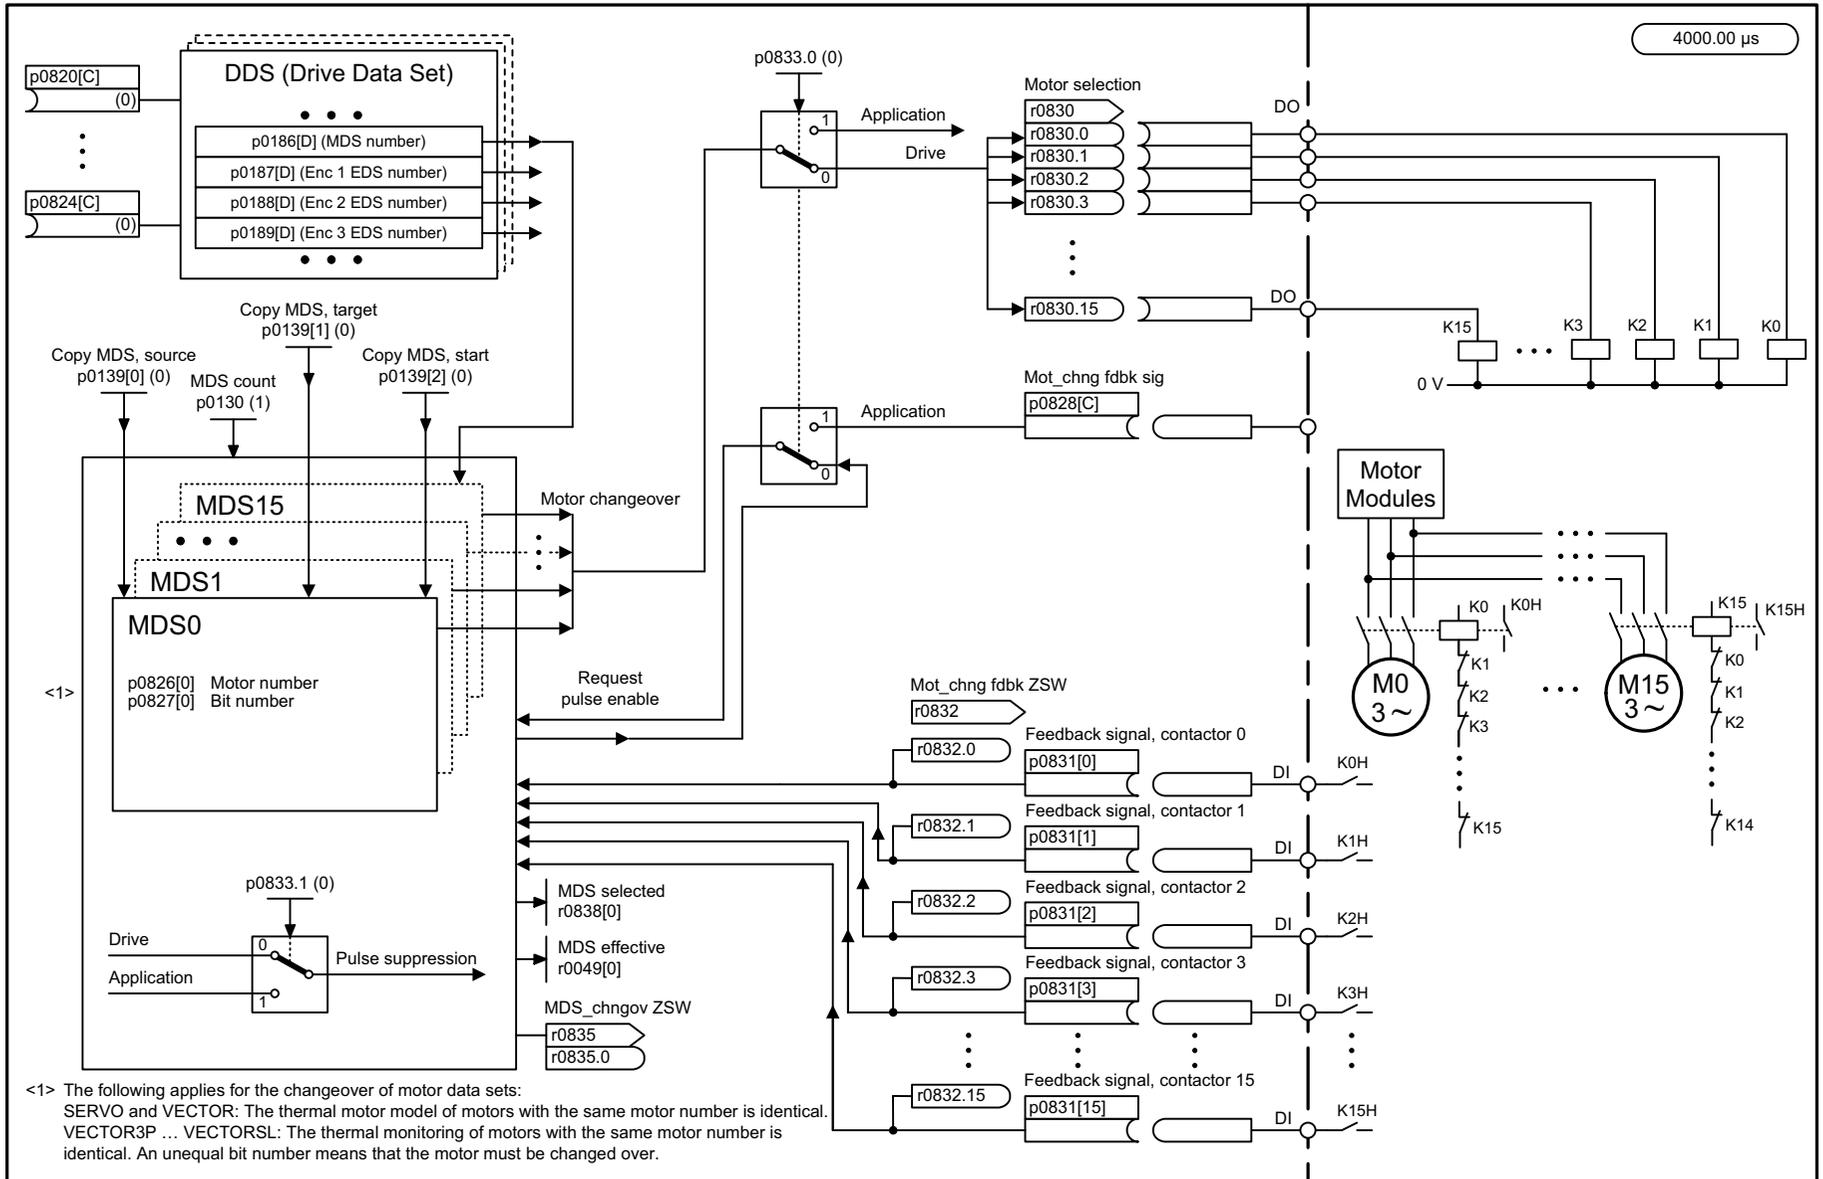

<1> The following applies for the changeover of motor data sets:  
SERVO and VECTOR: The thermal motor model of motors with the same motor number is identical.  
VECTOR3P ... VECTORSL: The thermal monitoring of motors with the same motor number is identical. An unequal bit number means that the motor must be changed over.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR, VECTOR3P, VECTORM2C, VECTORMV, VECTORSL					fp_8575_51_eng.vsd	Function diagram	
Data sets - Motor Data Sets (MDS)					22.08.13 V04.08.00	SINAMICS	
							- 8575 -

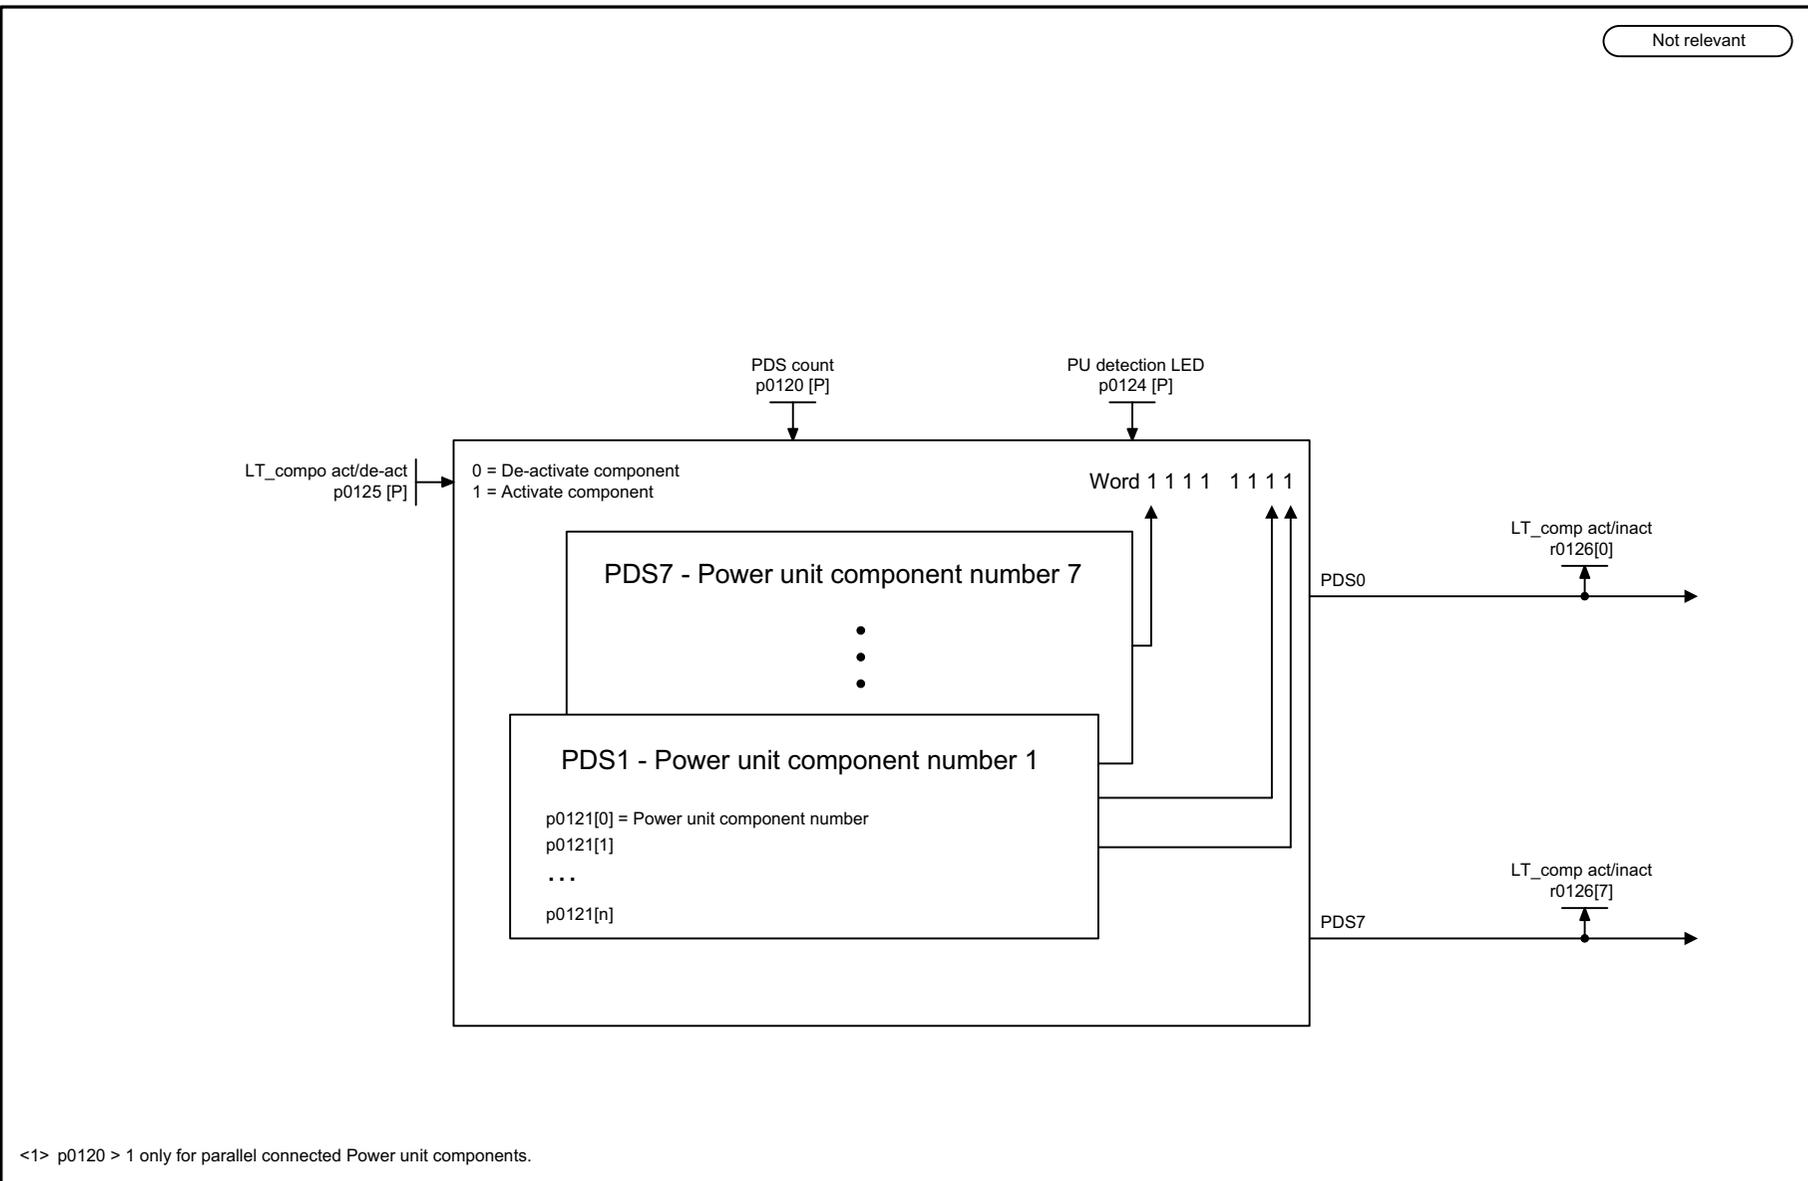

<1> p0120 > 1 only for parallel connected Power unit components.

1	2	3	4	5	6	7	8
DO: SERVO, VECTOR					fp_8580_54_eng.vsd	Function diagram	
Data sets - Power unit Data Sets (PDS)					14.03.14 V04.08.00	S120/S150/G130/G150	
- 8580 -							

Fig. 3-188 8580 – Power unit Data Sets (PDS)

## 3.22 Basic Infeed

### Function diagrams

8710 – Overview	1312
8720 – Control word, sequence control infeed	1313
8726 – Status word, sequence control infeed	1314
8732 – Sequencer	1315
8738 – Missing enables, line contactor control	1316
8750 – Interface to the Basic Infeed power unit (control signals, actual values)	1317
8760 – Signals and monitoring functions (p3400.0 = 0)	1318

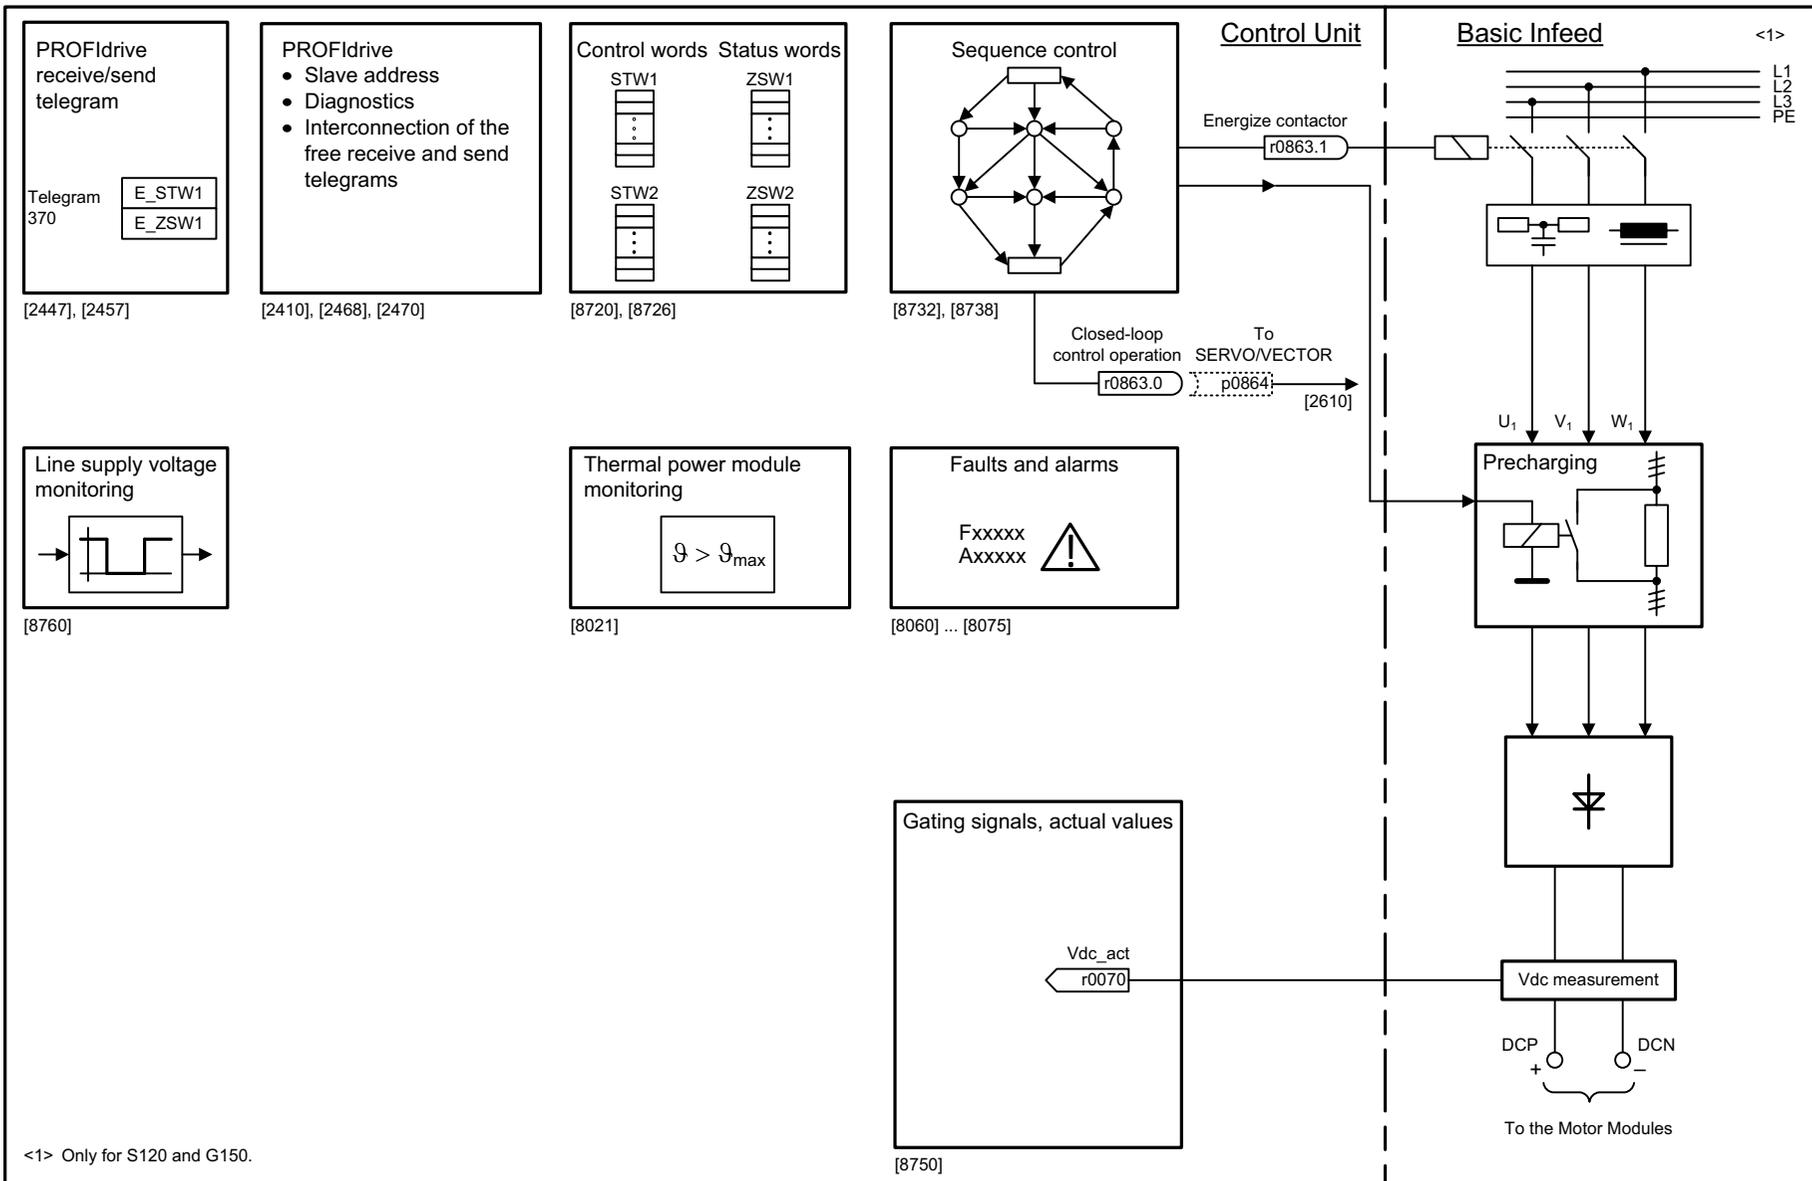
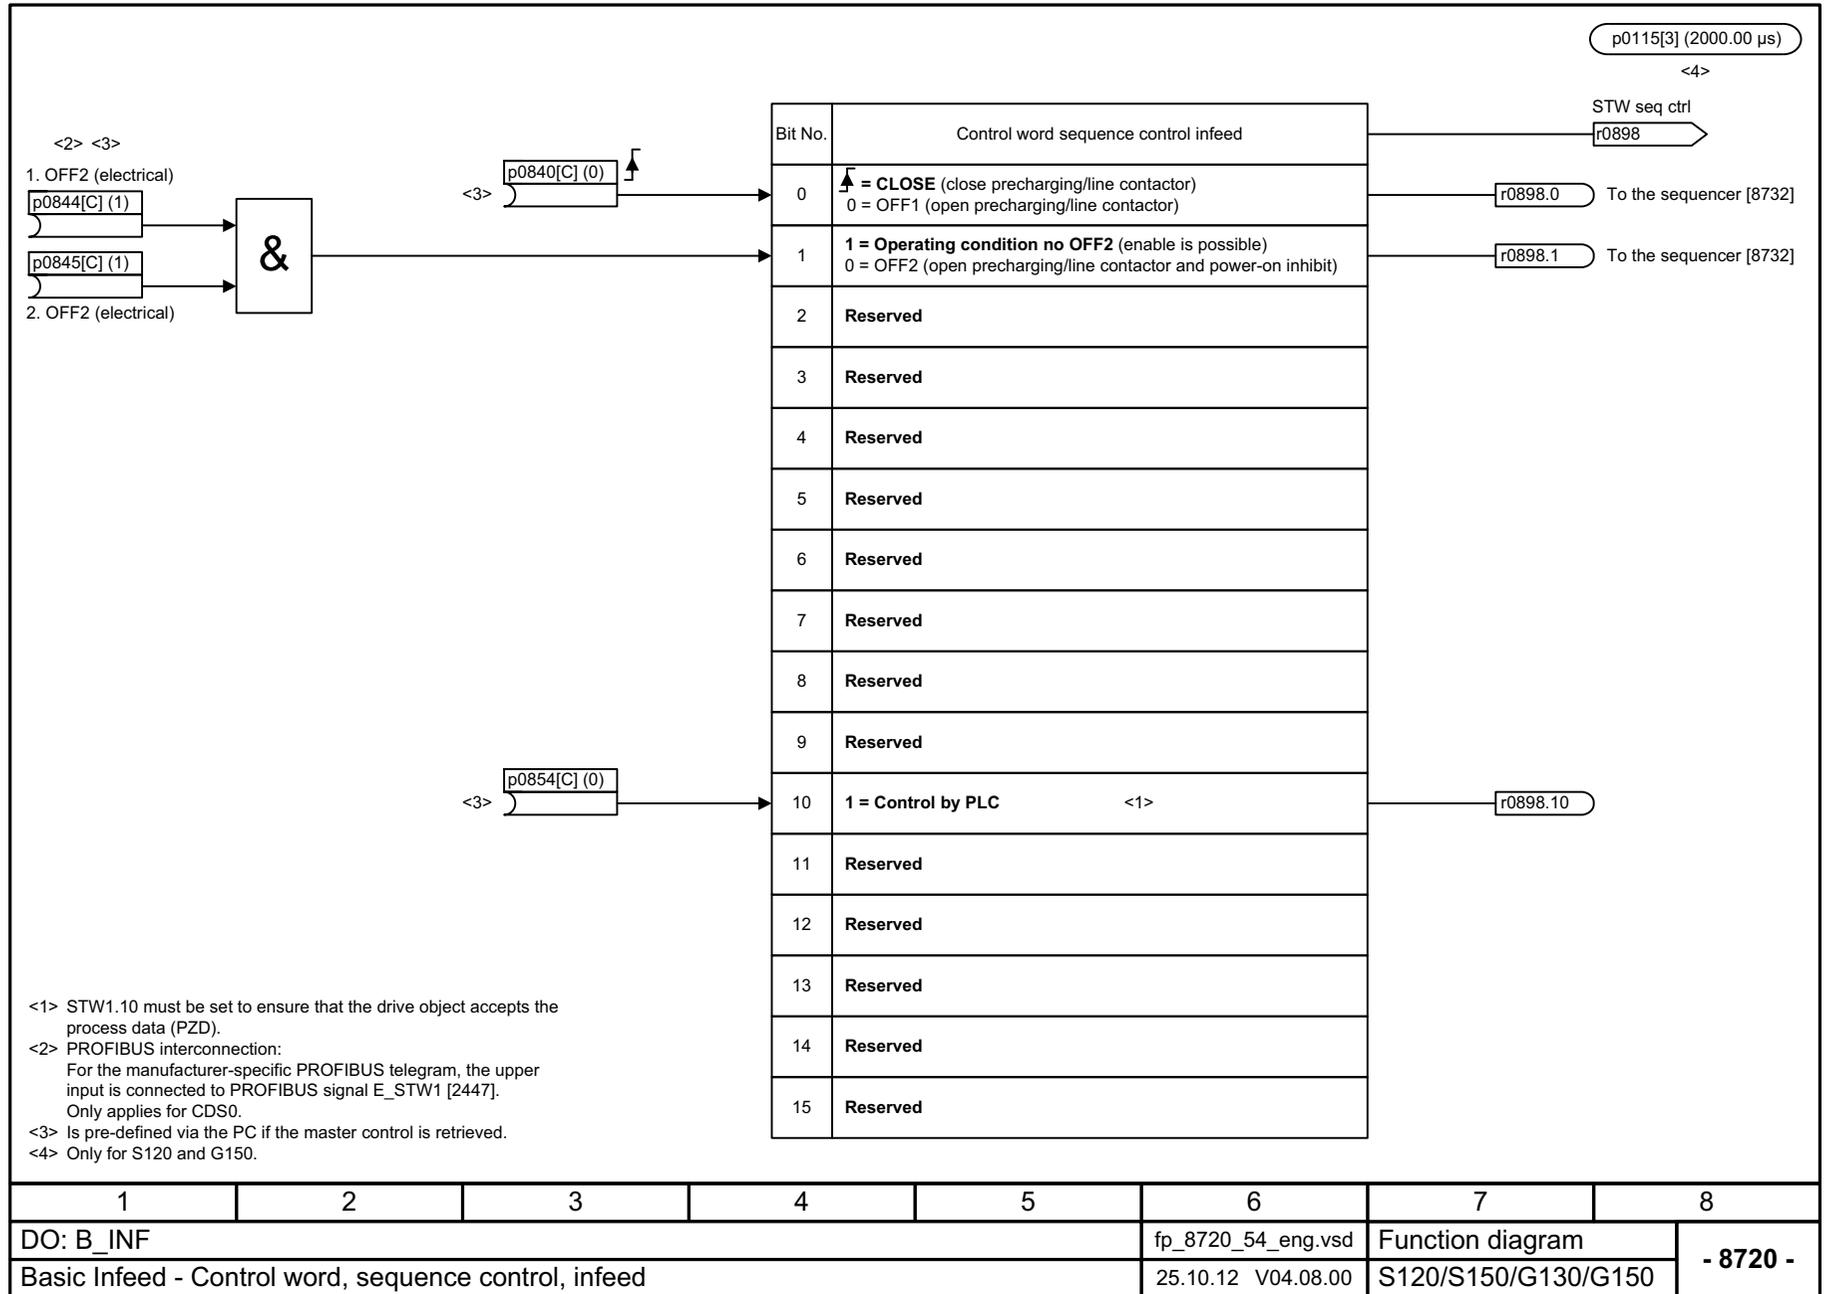


Fig. 3-189 8710 – Overview

1	2	3	4	5	6	7	8
DO: B_INF					fp_8710_54_eng.vsd	Function diagram	
Basic Infeed - Overview					19.06.15 V04.08.00	S120/S150/G130/G150	
							<b>- 8710 -</b>

Fig. 3-190 8720 – Control word, sequence control infeed




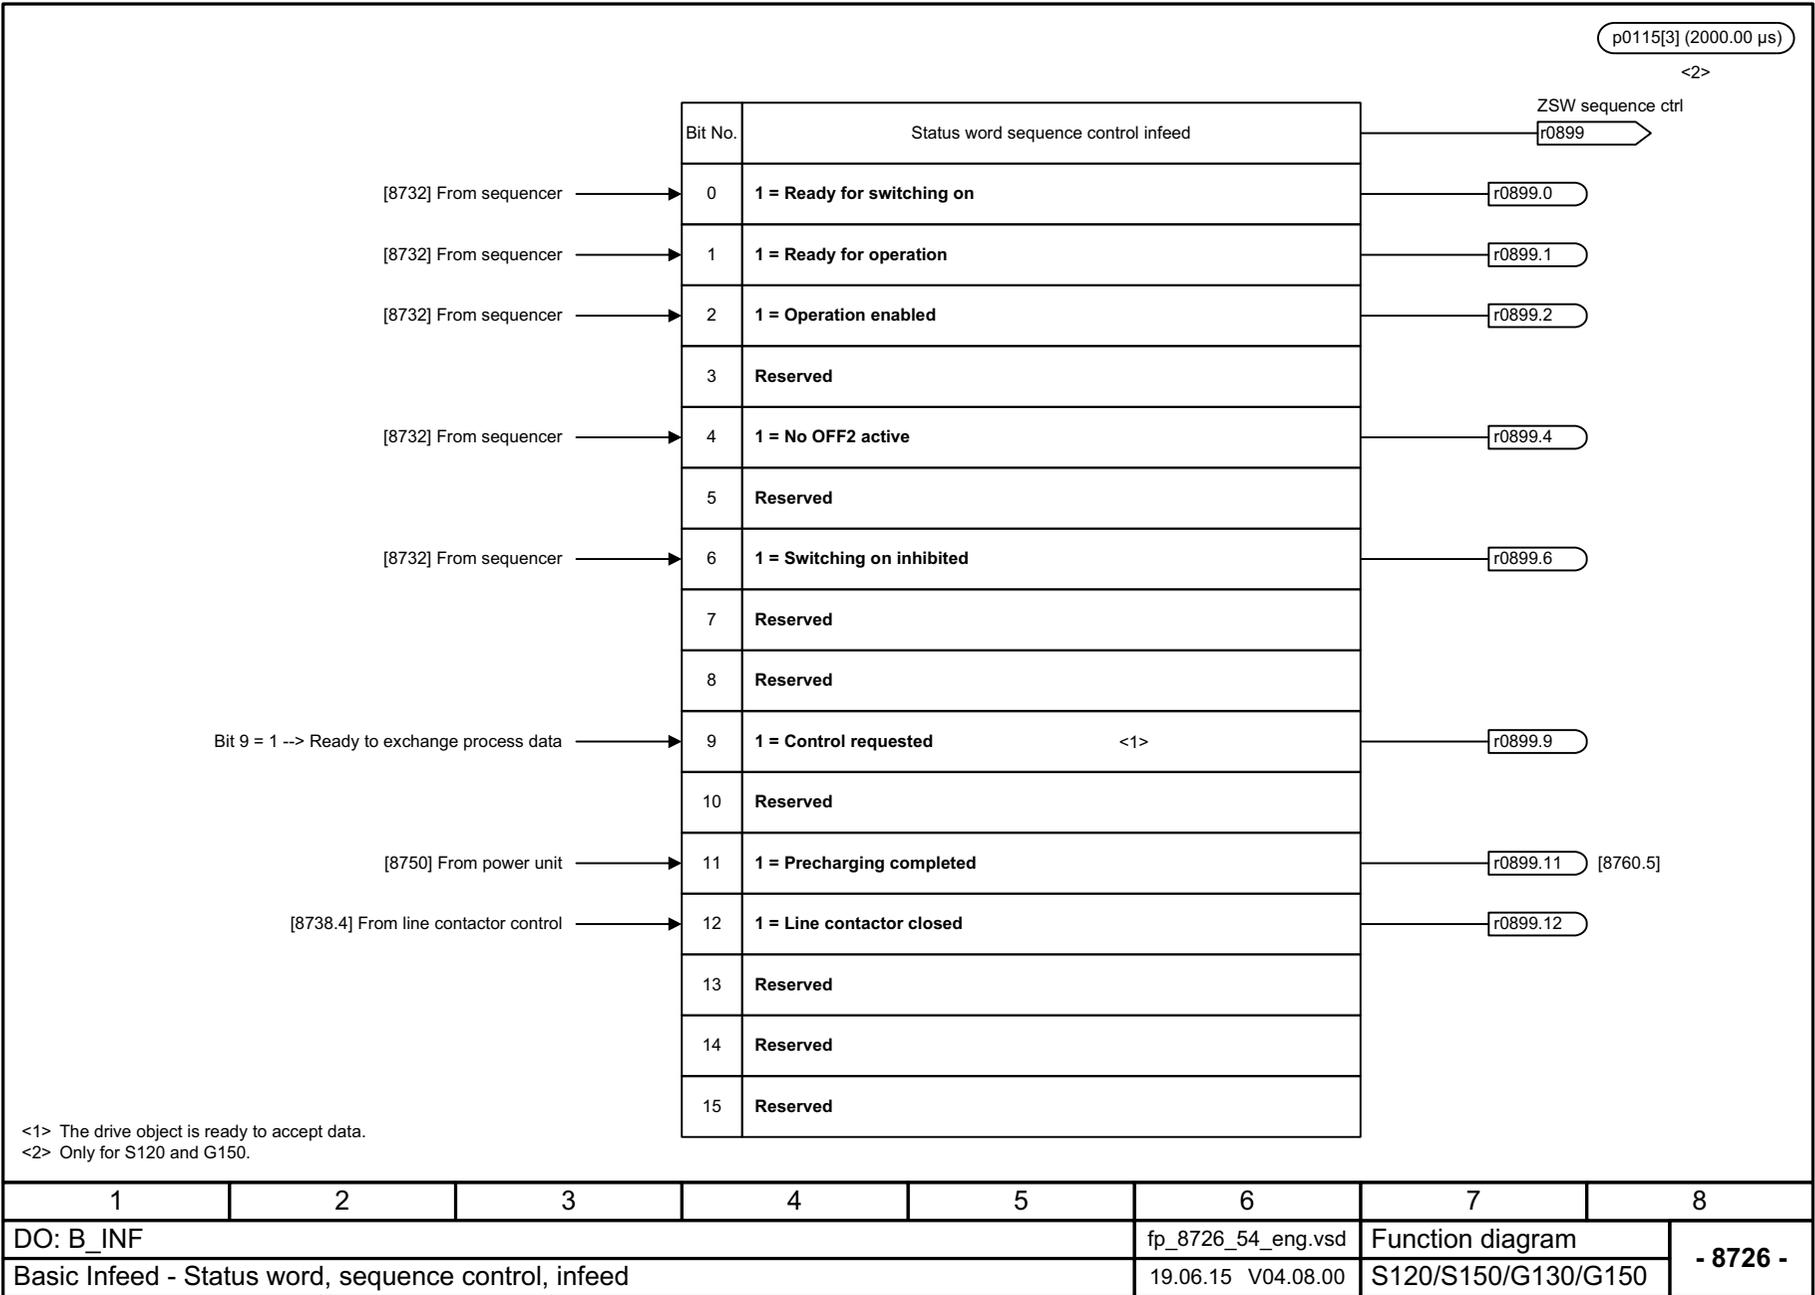


Fig. 3-191 8726 – Status word, sequence control infeed

Fig. 3-192 8732 – Sequencer

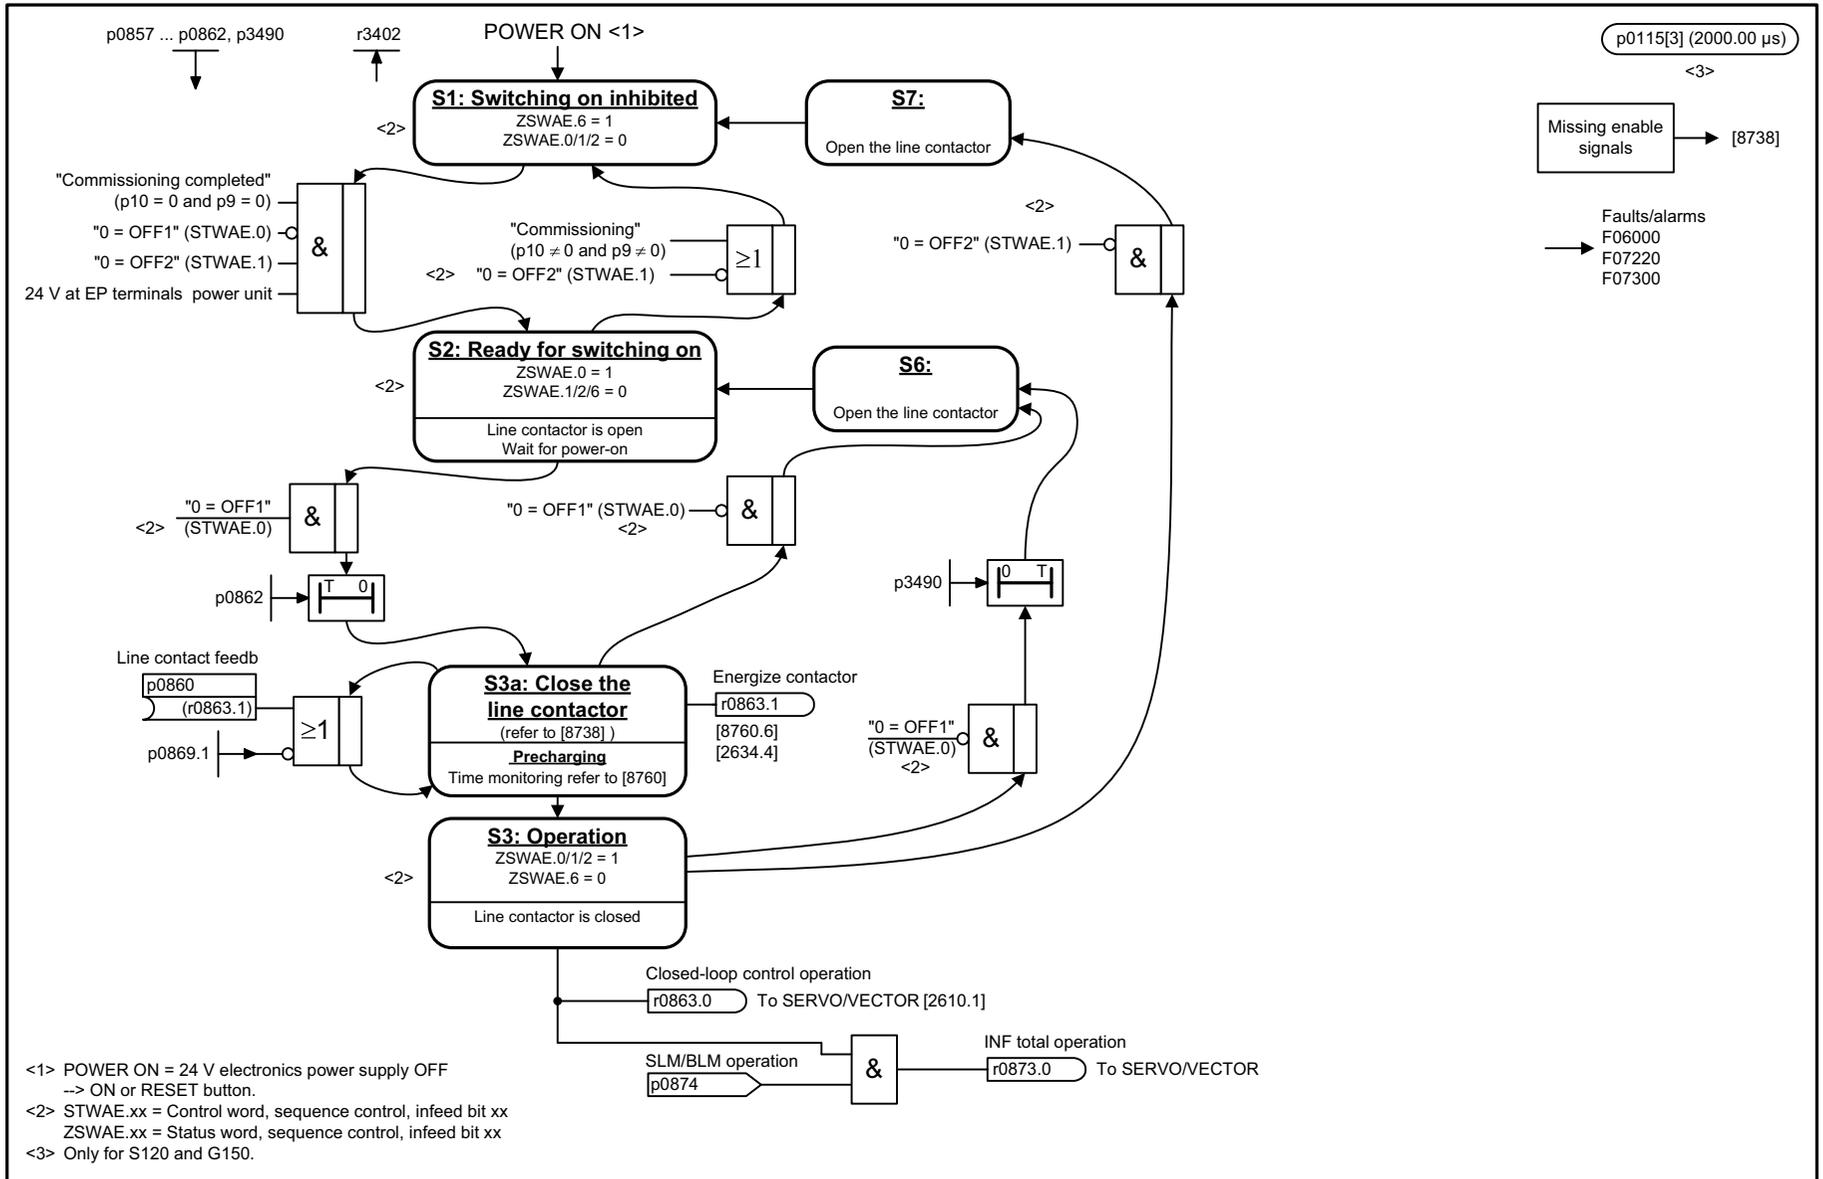

1	2	3	4	5	6	7	8
DO: B_INF					fp_8732_54_eng.vsd	Function diagram	
Basic Infeed - Sequencer					10.06.16 V04.08.00	S120/S150/G130/G150	
							- 8732 -



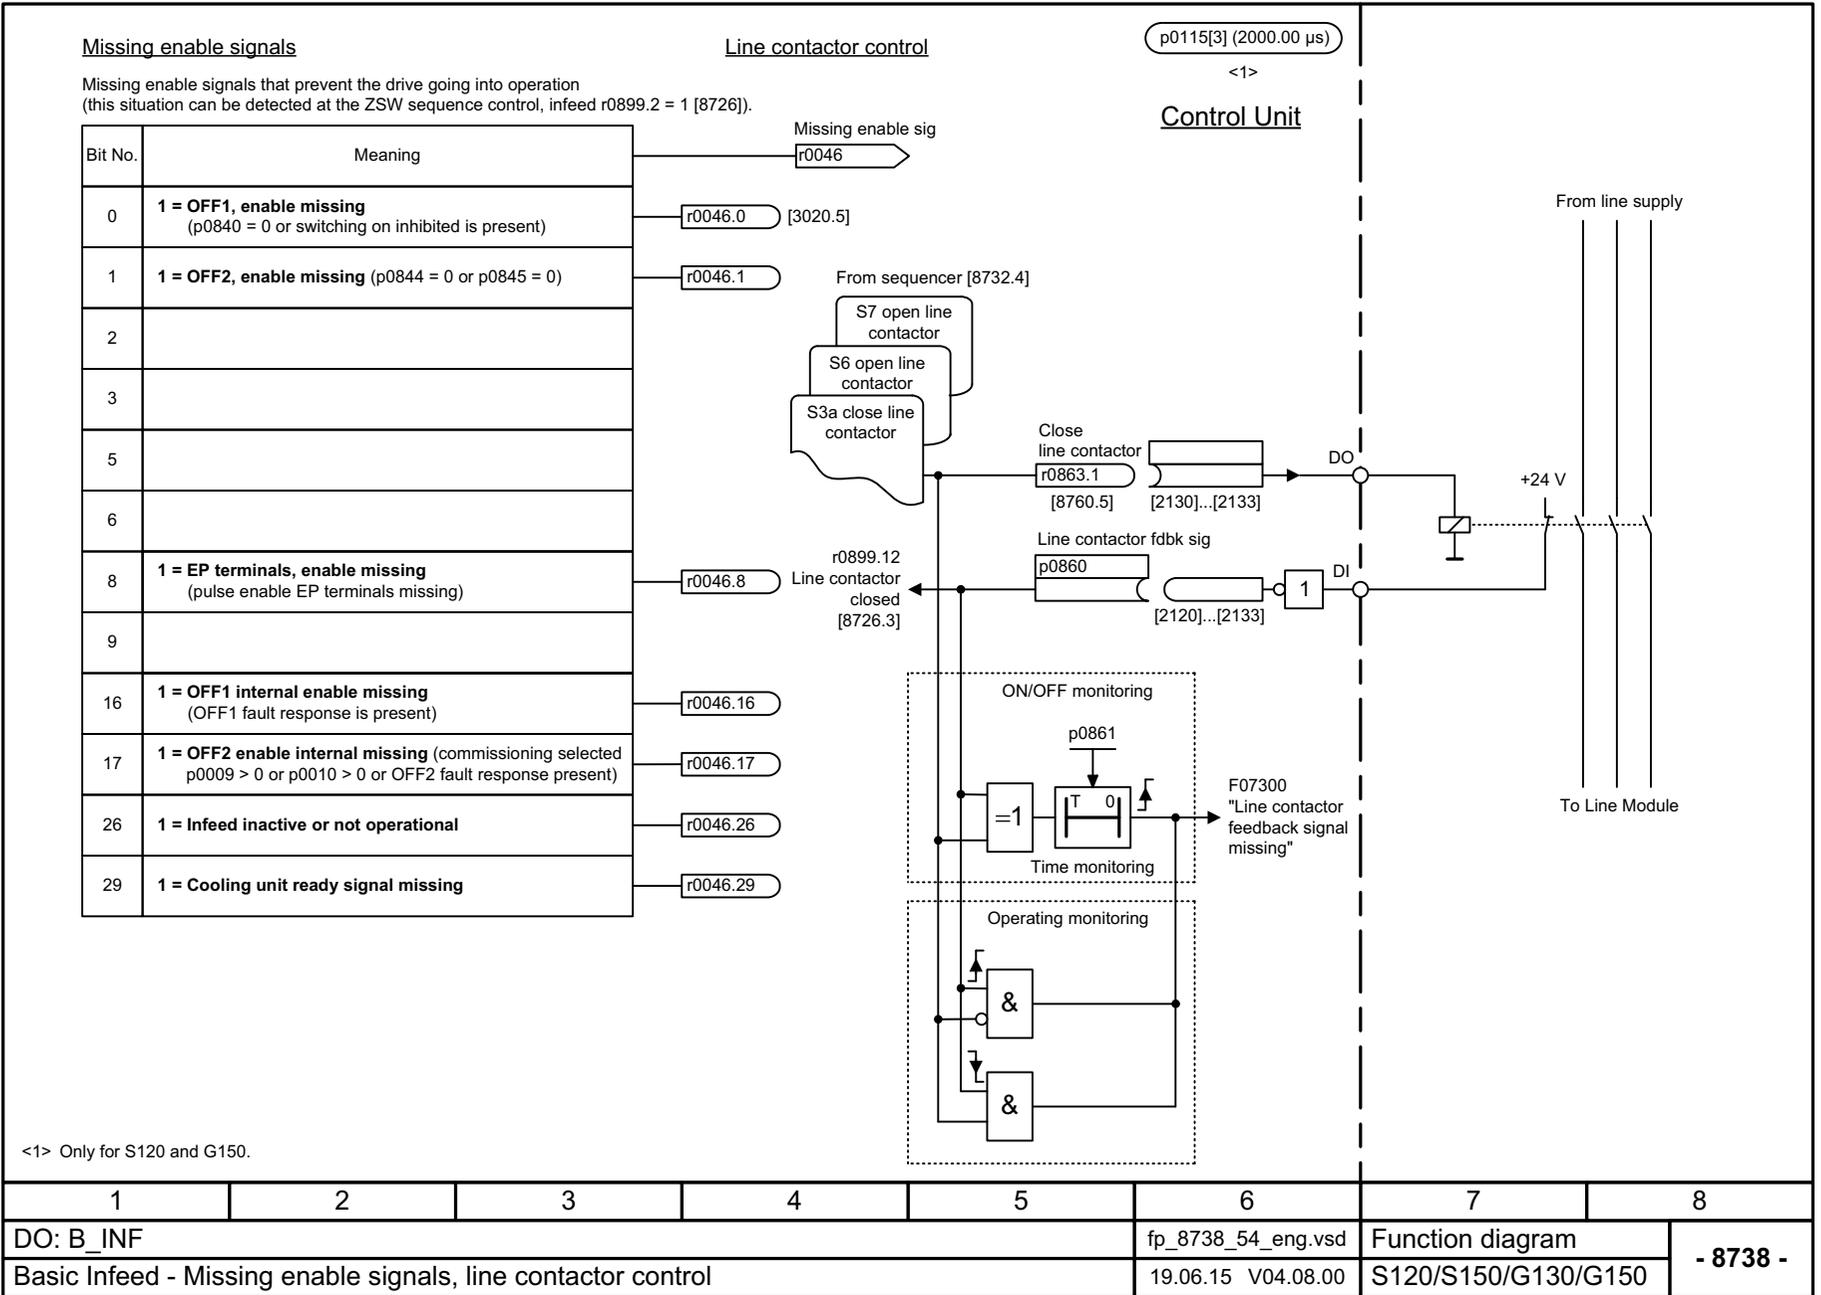


Fig. 3-193 8738 – Missing enables, line contactor control

1	2	3	4	5	6	7	8
DO: B_INF					fp_8738_54_eng.vsd	Function diagram	
Basic Infeed - Missing enable signals, line contactor control					19.06.15 V04.08.00	S120/S150/G130/G150	
- 8738 -							

Fig. 3-194 8750 – Interface to the Basic Infeed power unit (control signals, actual values)

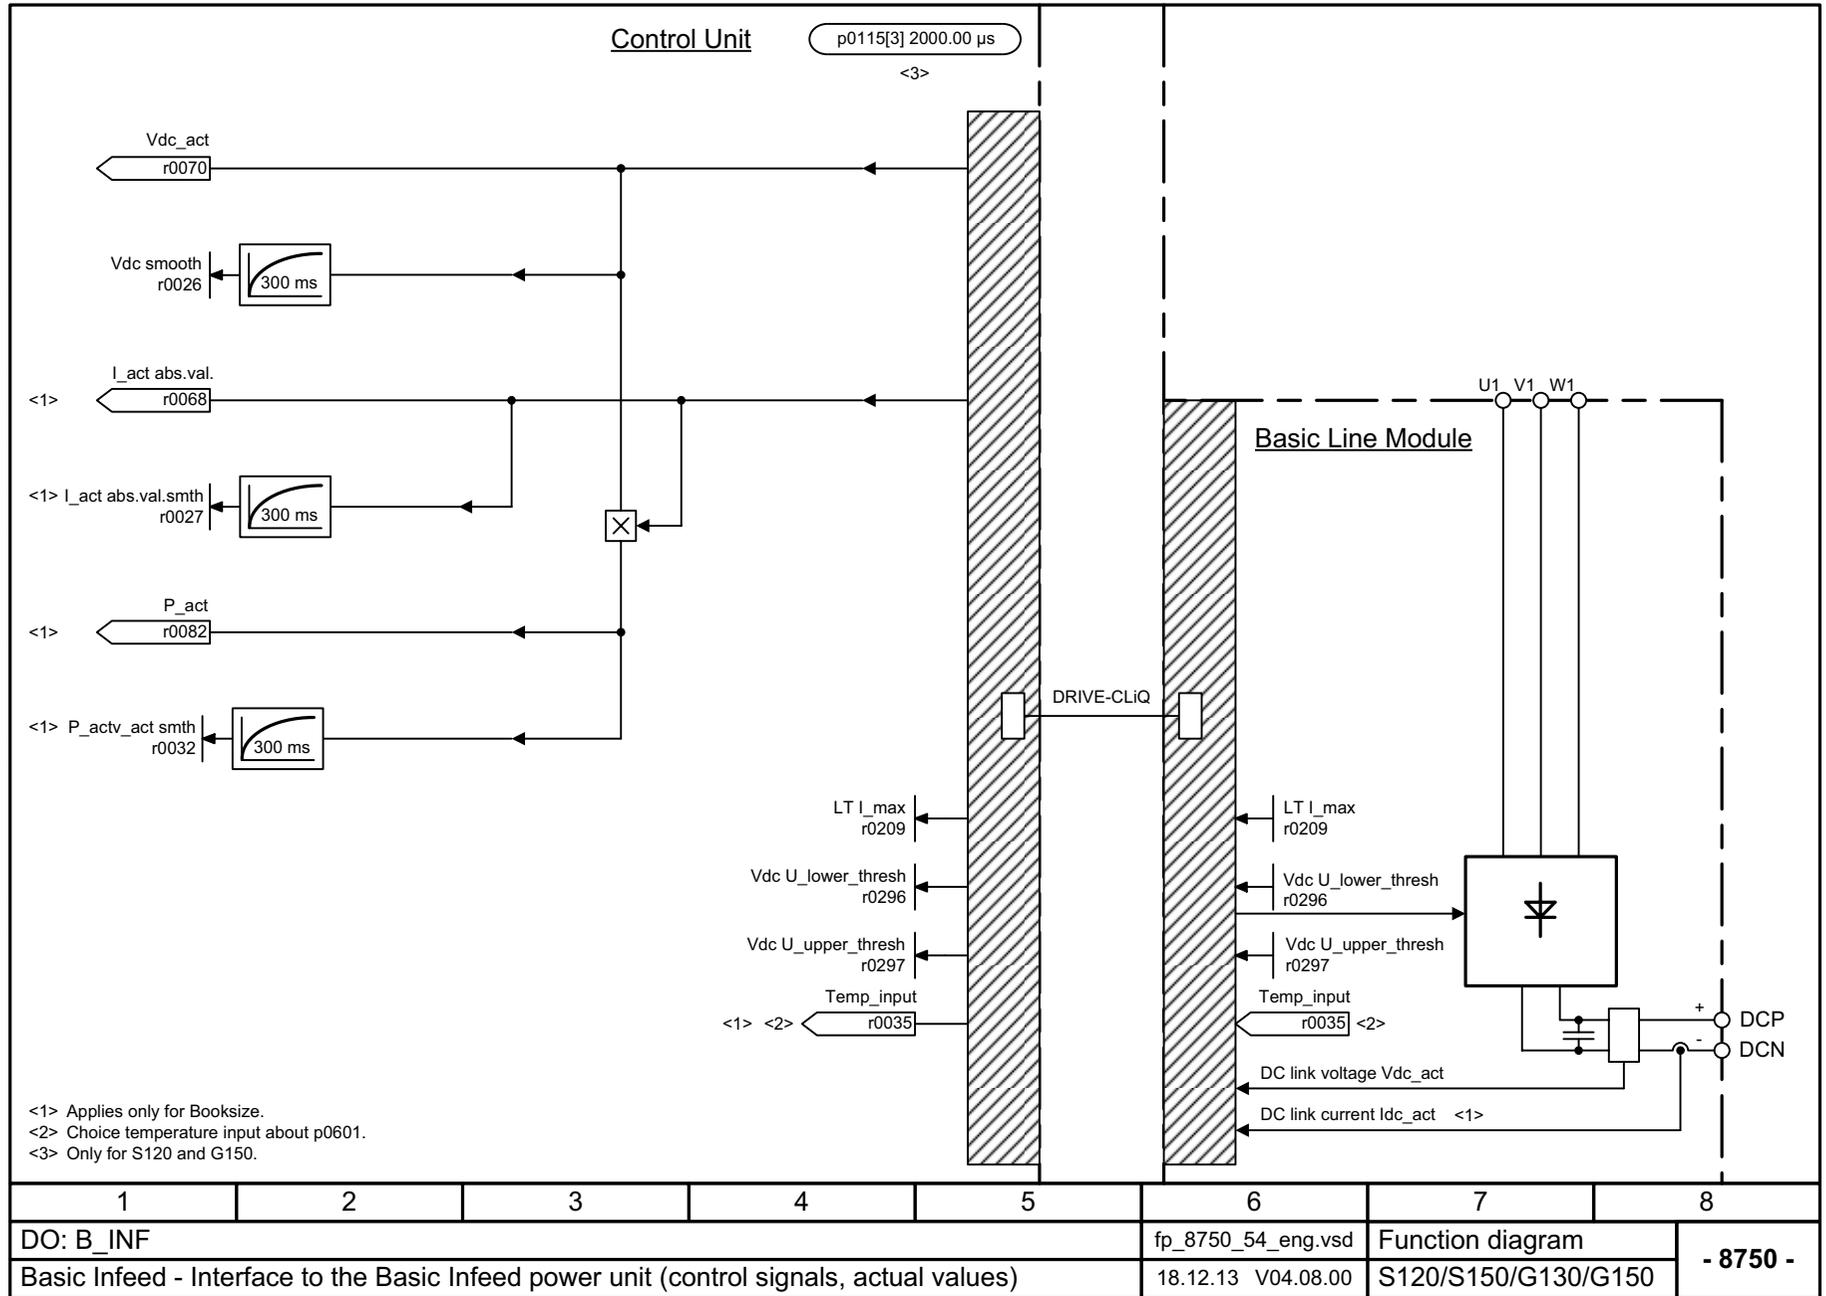

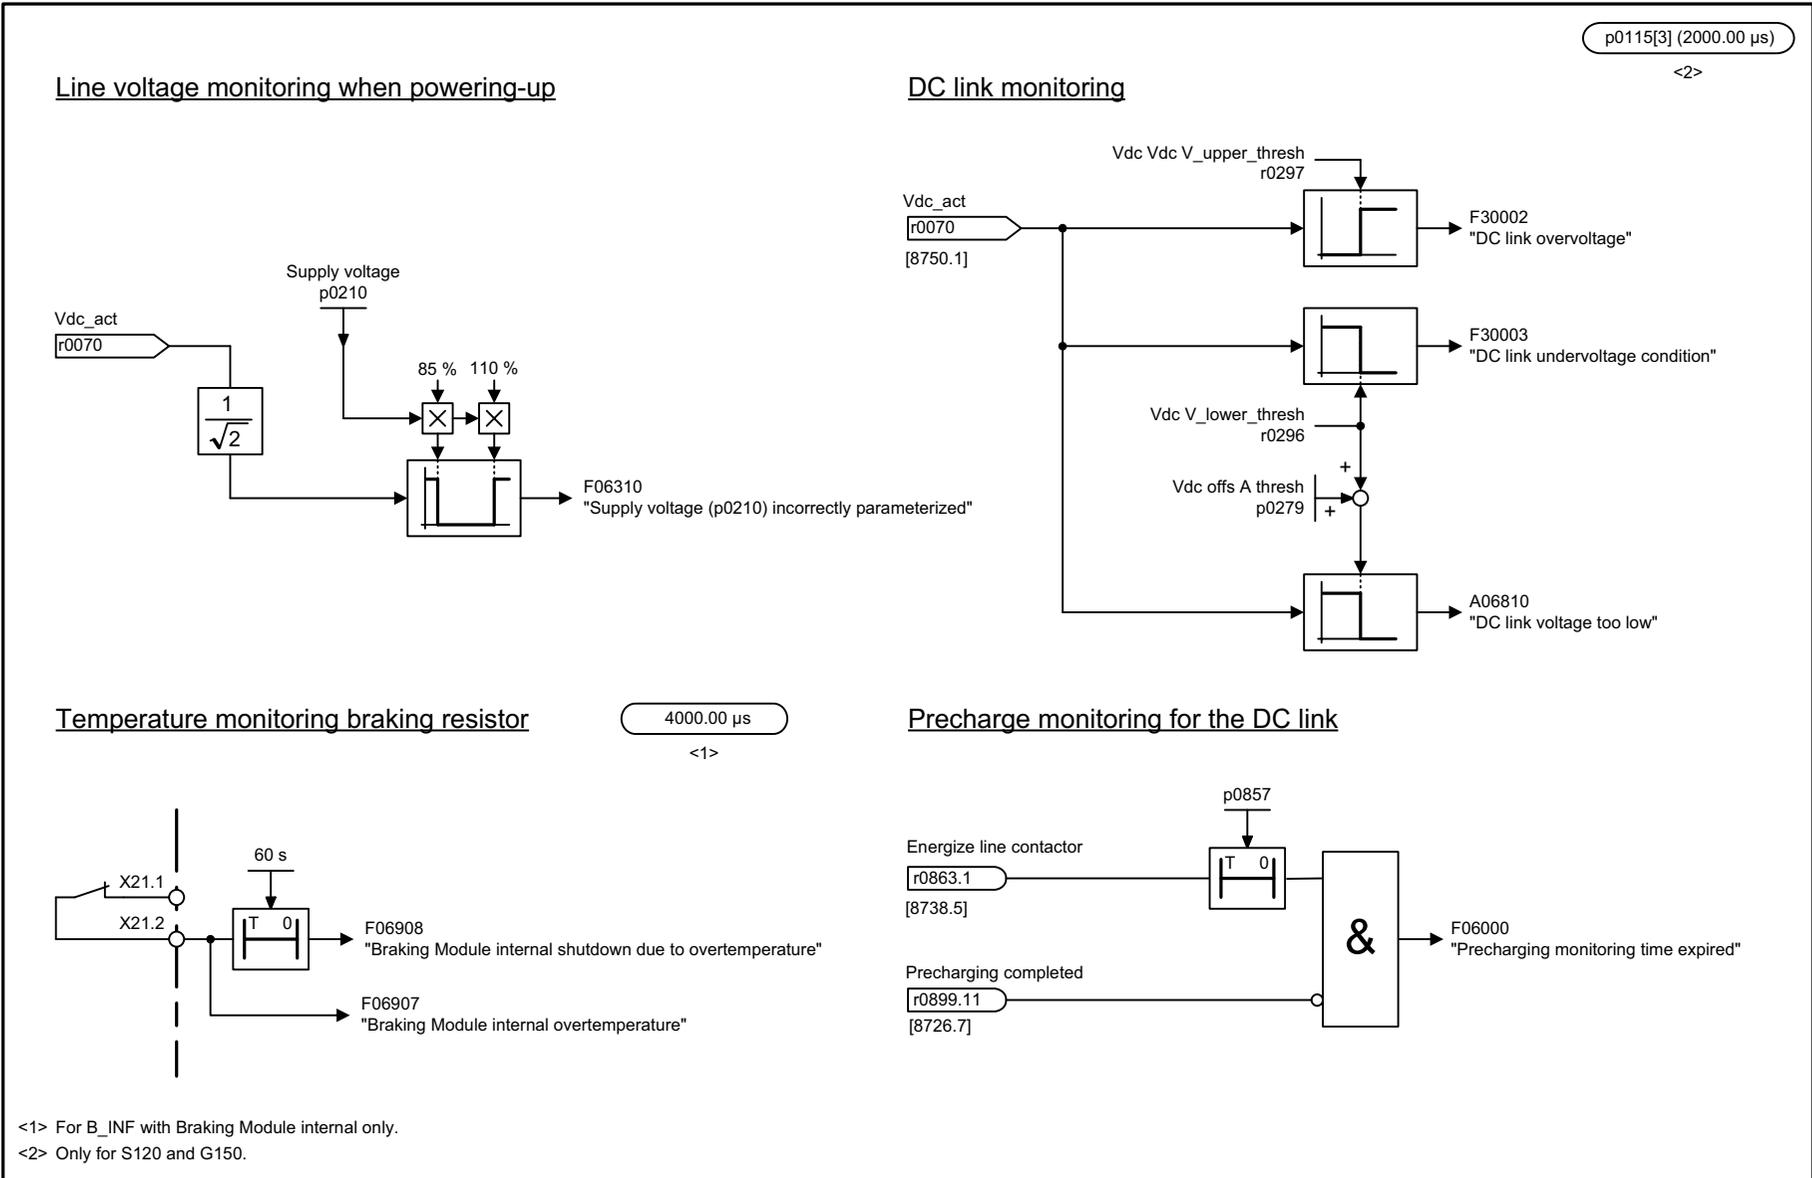

<1> For B\_INF with Braking Module internal only.  
<2> Only for S120 and G150.

1	2	3	4	5	6	7	8
DO: B_INF					fp_8760_54_eng.vsd	Function diagram	
Basic Infeed - Signals and monitoring functions (p3400.0 = 0)					19.06.15 V04.08.00	S120/S150/G130/G150	
							<b>- 8760 -</b>

Fig. 3-195 8760 – Signals and monitoring functions (p3400.0 = 0)

## 3.23 Terminal Board 30 (TB30)

### Function diagrams

9099 – Overview	1320
9100 – Digital inputs, electrically isolated (DI 0 ... DI 3)	1321
9102 – Digital outputs, electrically isolated (DO 0 ... DO 3)	1322
9104 – Analog inputs (AI 0 ... AI 1)	1323
9106 – Analog outputs (AO 0 ... AO 1)	1324


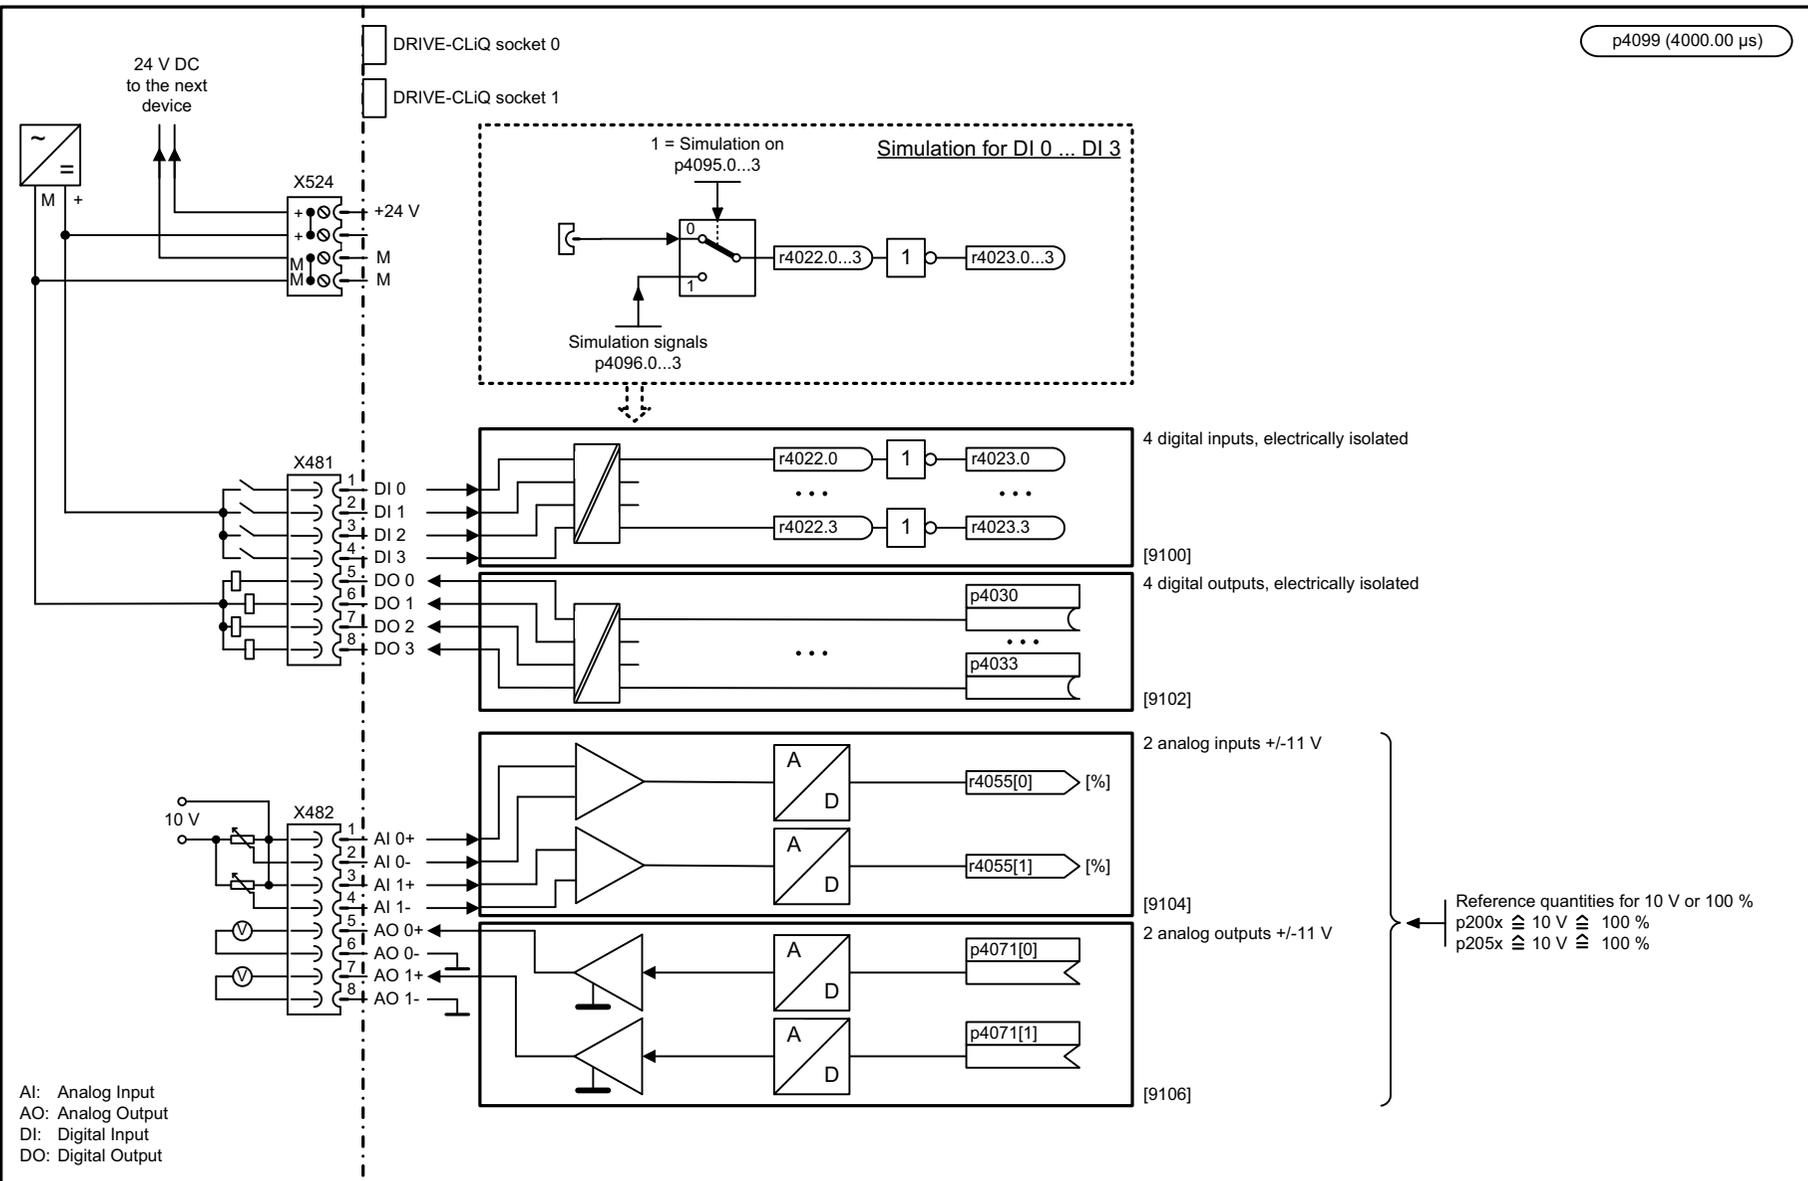



Fig. 3-196 9099 – Overview

1	2	3	4	5	6	7	8
DO: TB30					fp_9099_51_eng.vsd	Function diagram	
Terminal Board 30 (TB30) - Overview					12.03.13 V04.08.00	SINAMICS	
							- 9099 -

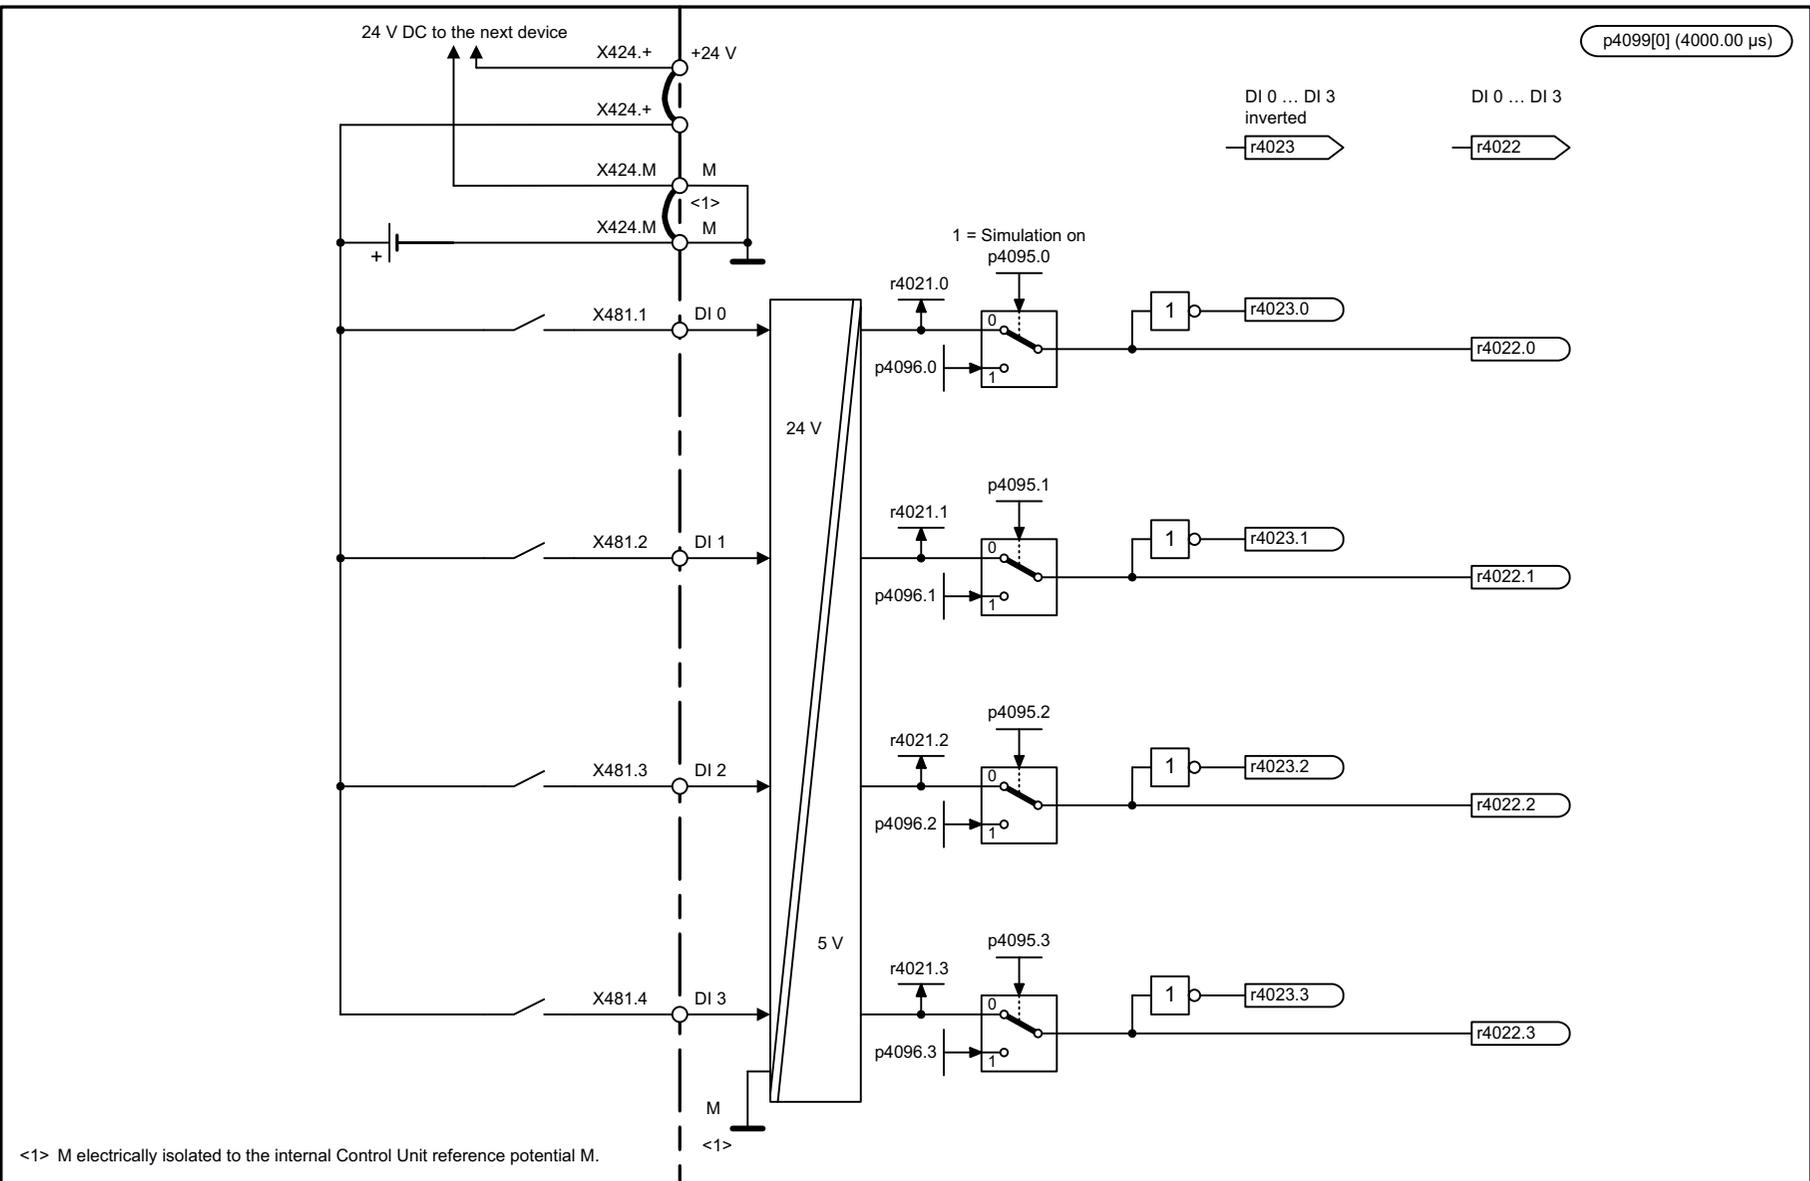

1	2	3	4	5	6	7	8
DO: TB30					fp_9100_51_eng.vsd	Function diagram	
Terminal Board 30 (TB30) - Digital inputs, electrically isolated (DI 0 ... DI 3)					24.11.09 V04.08.00	SINAMICS	
							- 9100 -


Fig. 3-197 9100 – Digital inputs, electrically isolated (DI 0 ... DI 3)

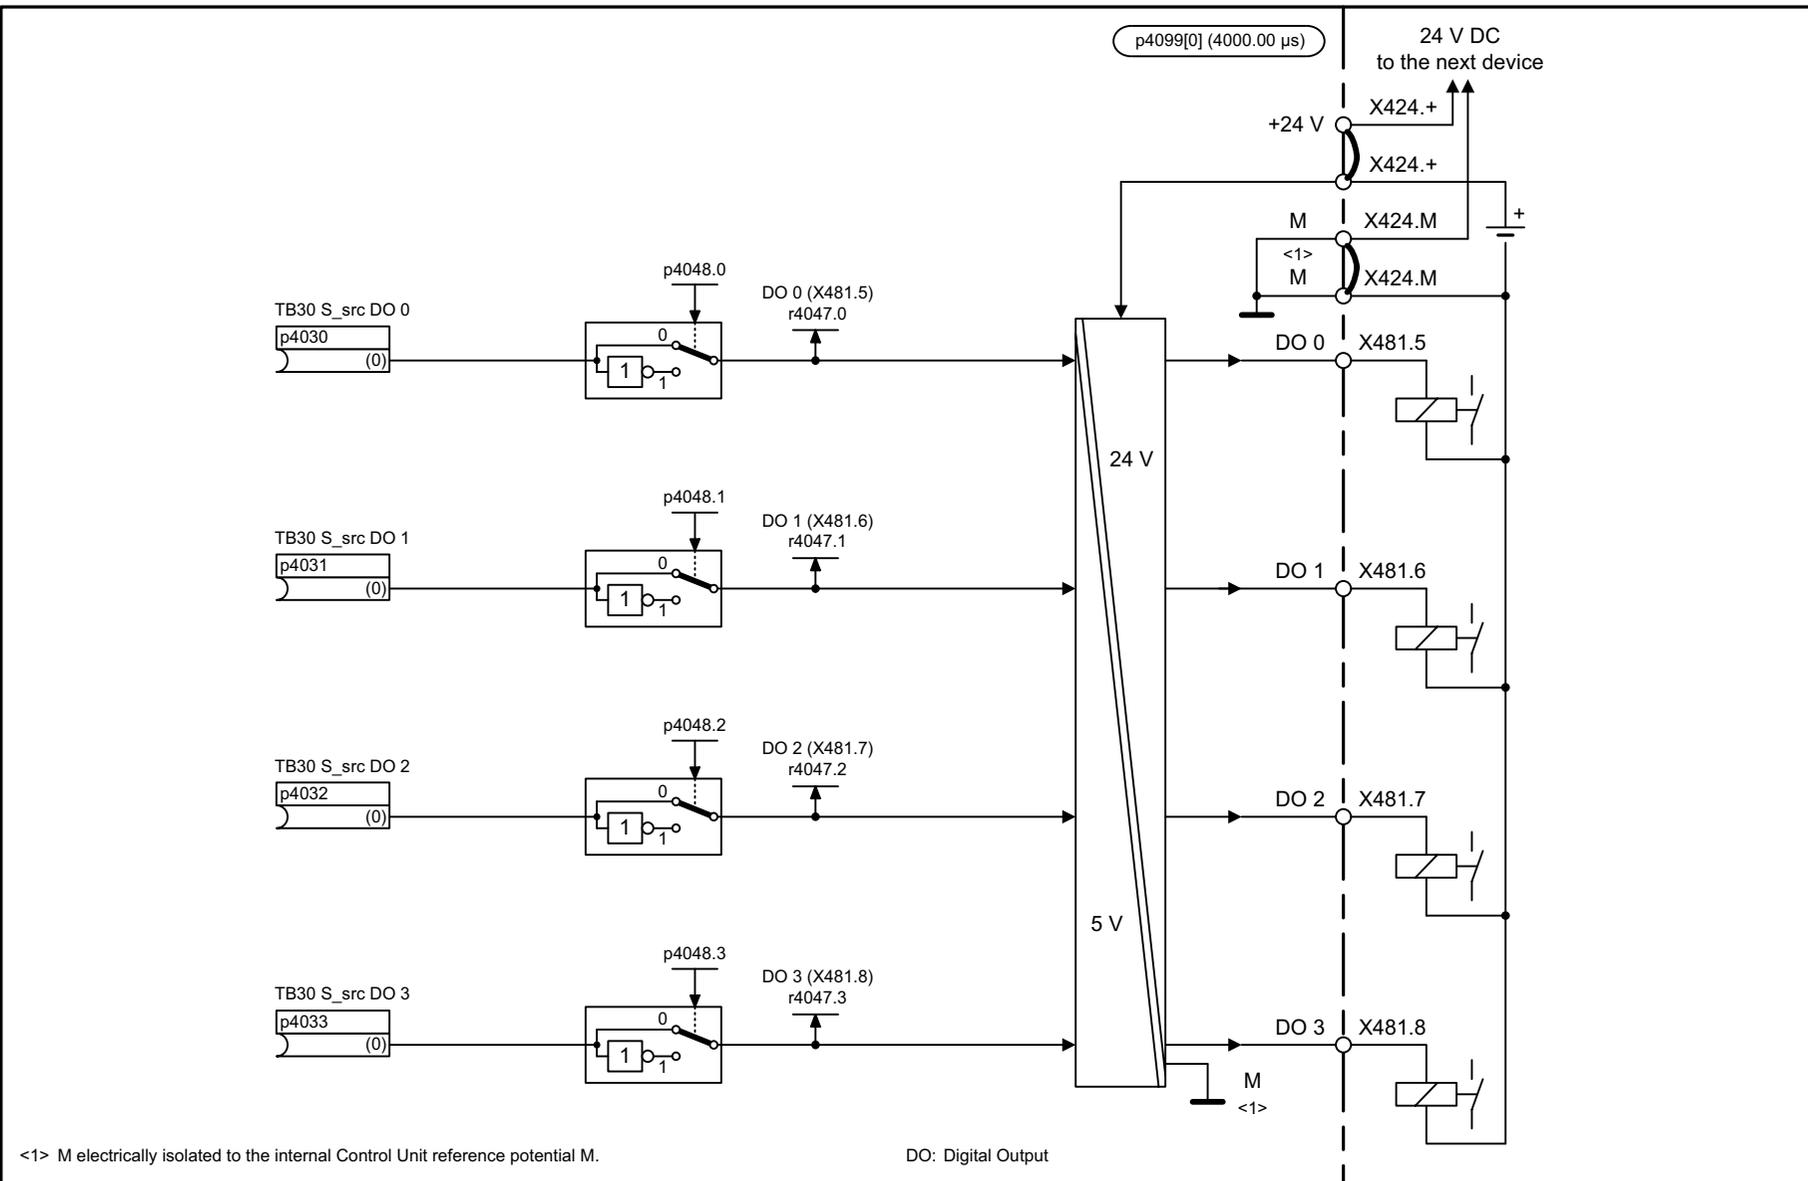


1	2	3	4	5	6	7	8
DO: TB30					fp_9102_51_eng.vsd	Function diagram	
Terminal Board 30 (TB30) - Digital outputs, electrically isolated (DO 0 ... DO 3)					24.11.09 V04.08.00	SINAMICS	
							- 9102 -

Fig. 3-198 9102 – Digital outputs, electrically isolated (DO 0 ... DO 3)

Fig. 3-199 9104 – Analog inputs (AI 0 ... AI 1)

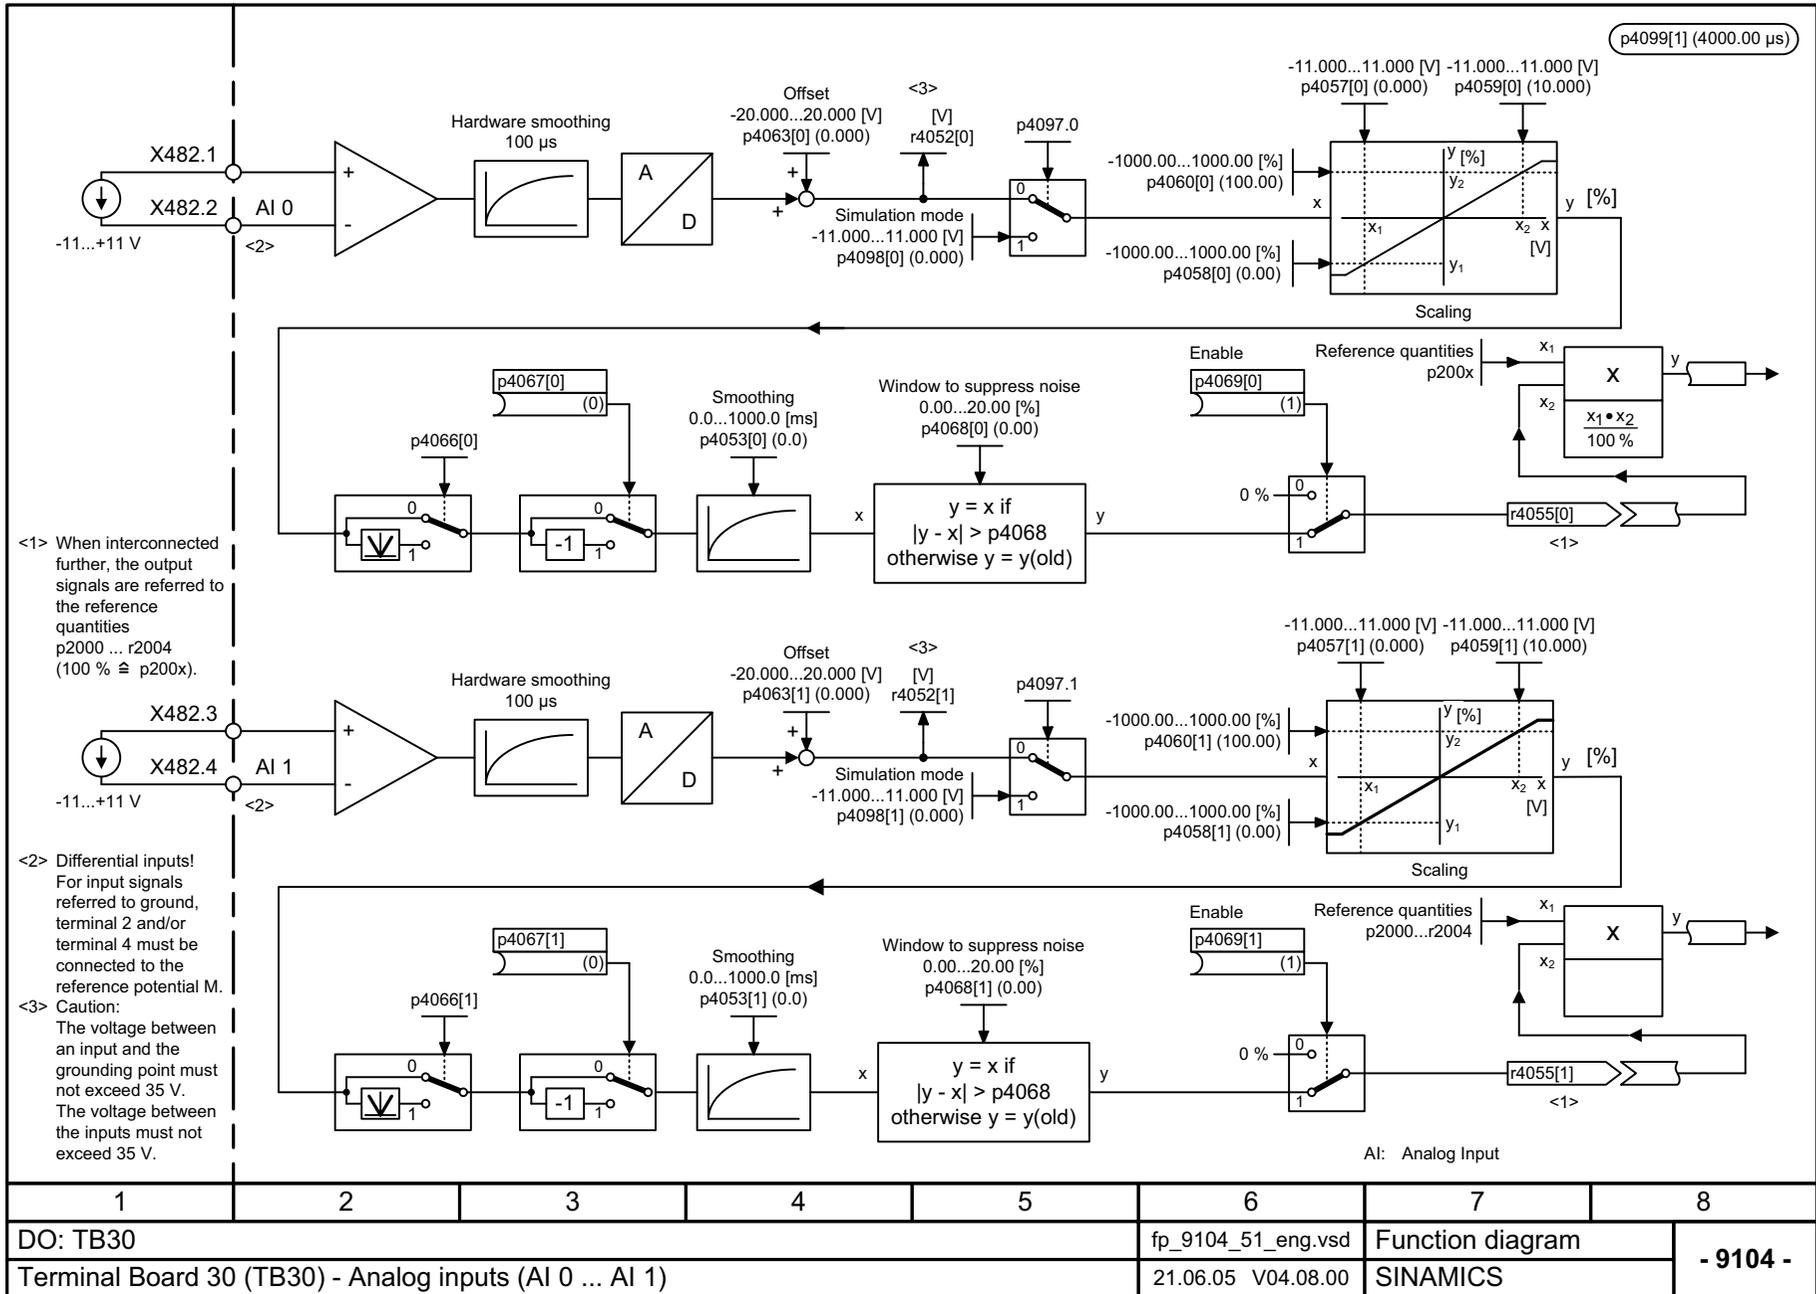

1	2	3	4	5	6	7	8
DO: TB30					fp_9104_51_eng.vsd	Function diagram	
Terminal Board 30 (TB30) - Analog inputs (AI 0 ... AI 1)					21.06.05 V04.08.00	SINAMICS	
							- 9104 -

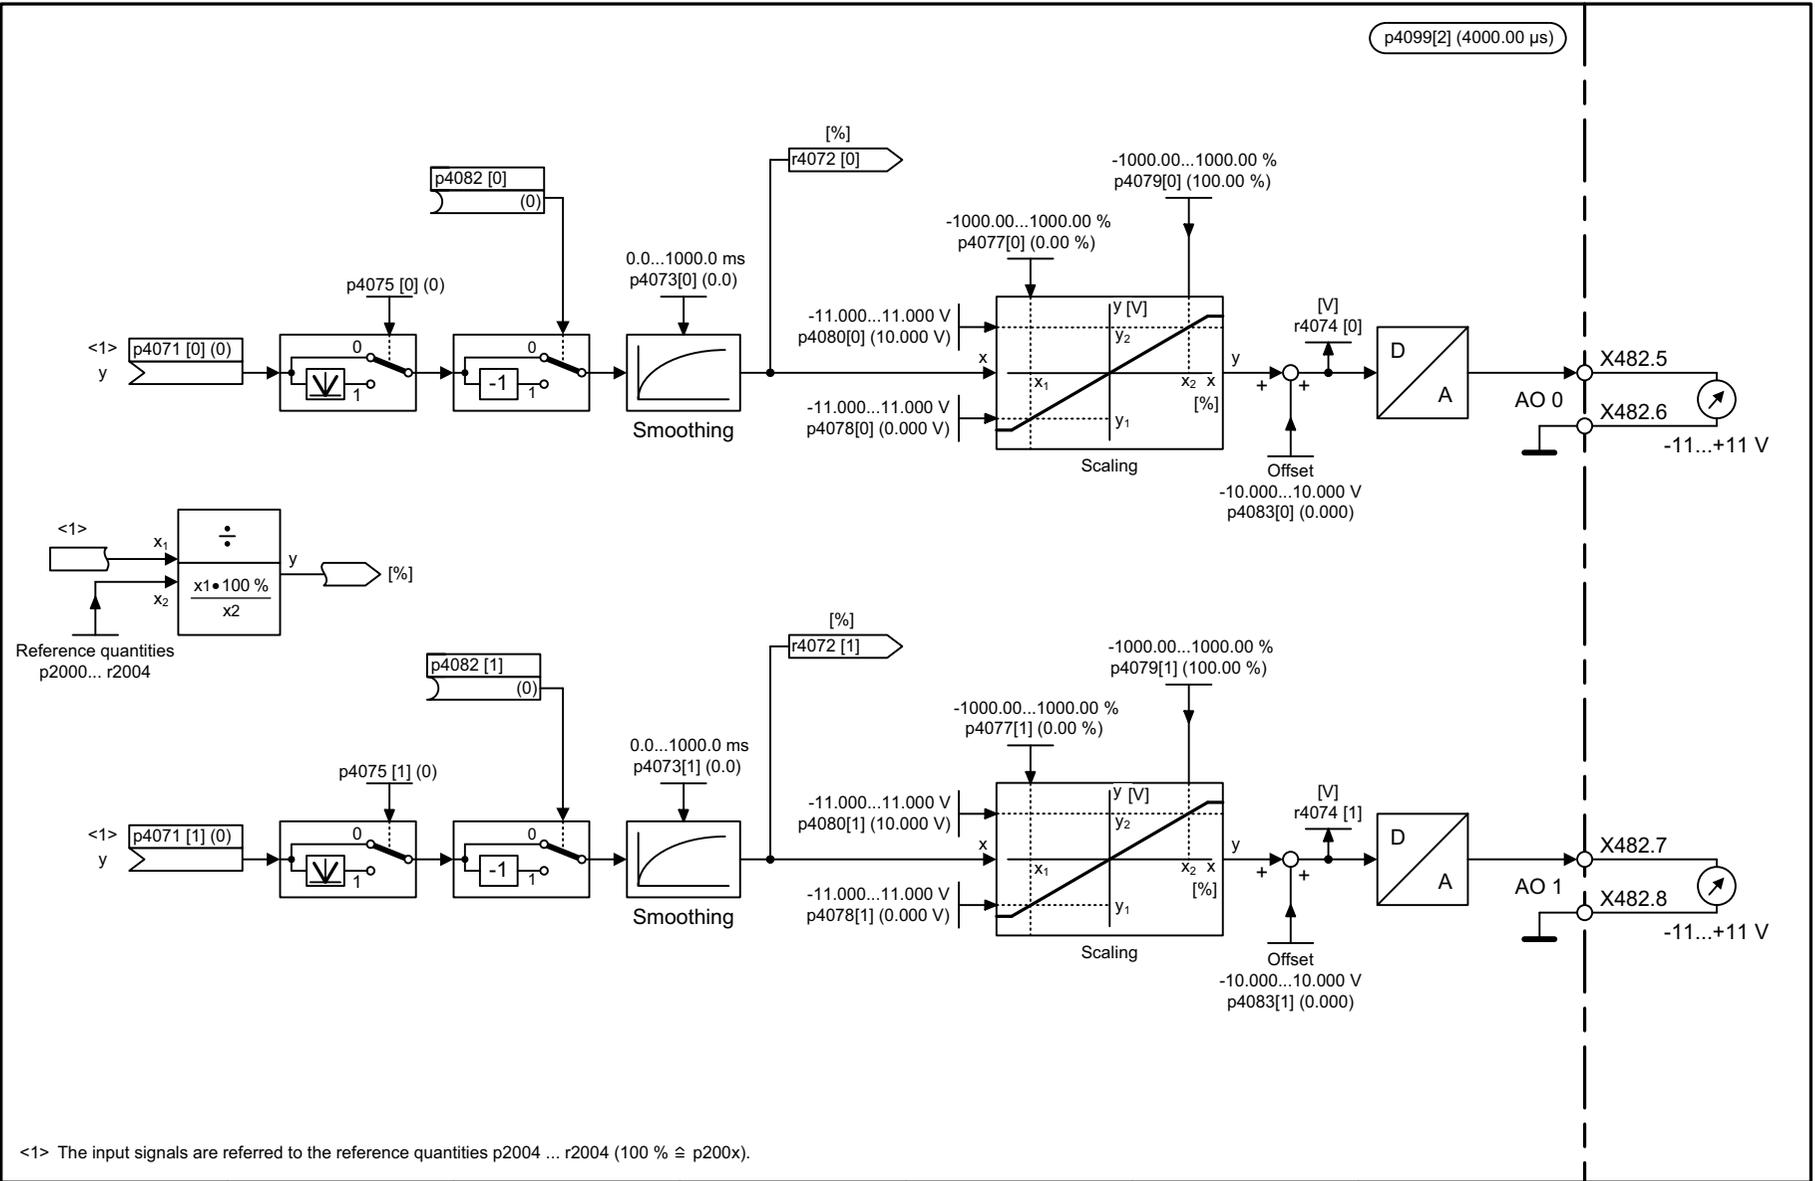

1	2	3	4	5	6	7	8
DO: TB30					fp_9106_51_eng.vsd	Function diagram	
Terminal Board 30 (TB30) - Analog outputs (AO 0 ... AO 1)					25.10.05 V04.08.00	SINAMICS	

- 9106 -

Fig. 3-200 9106 – Analog outputs (AO 0 ... AO 1)

## 3.24 Communication Board CAN10 (CBC10)

### Function diagrams

---

9204 – Receive telegram, free PDO mapping (p8744 = 2)	1326
9206 – Receive telegram, Predefined Connection Set (p8744 = 1)	1327
9208 – Send telegram, free PDO mapping (p8744 = 2)	1328
9210 – Send telegram, Predefined Connection Set (p8744 = 1)	1329
9220 – Control word, CANopen	1330
9226 – Status word, CANopen	1331

---

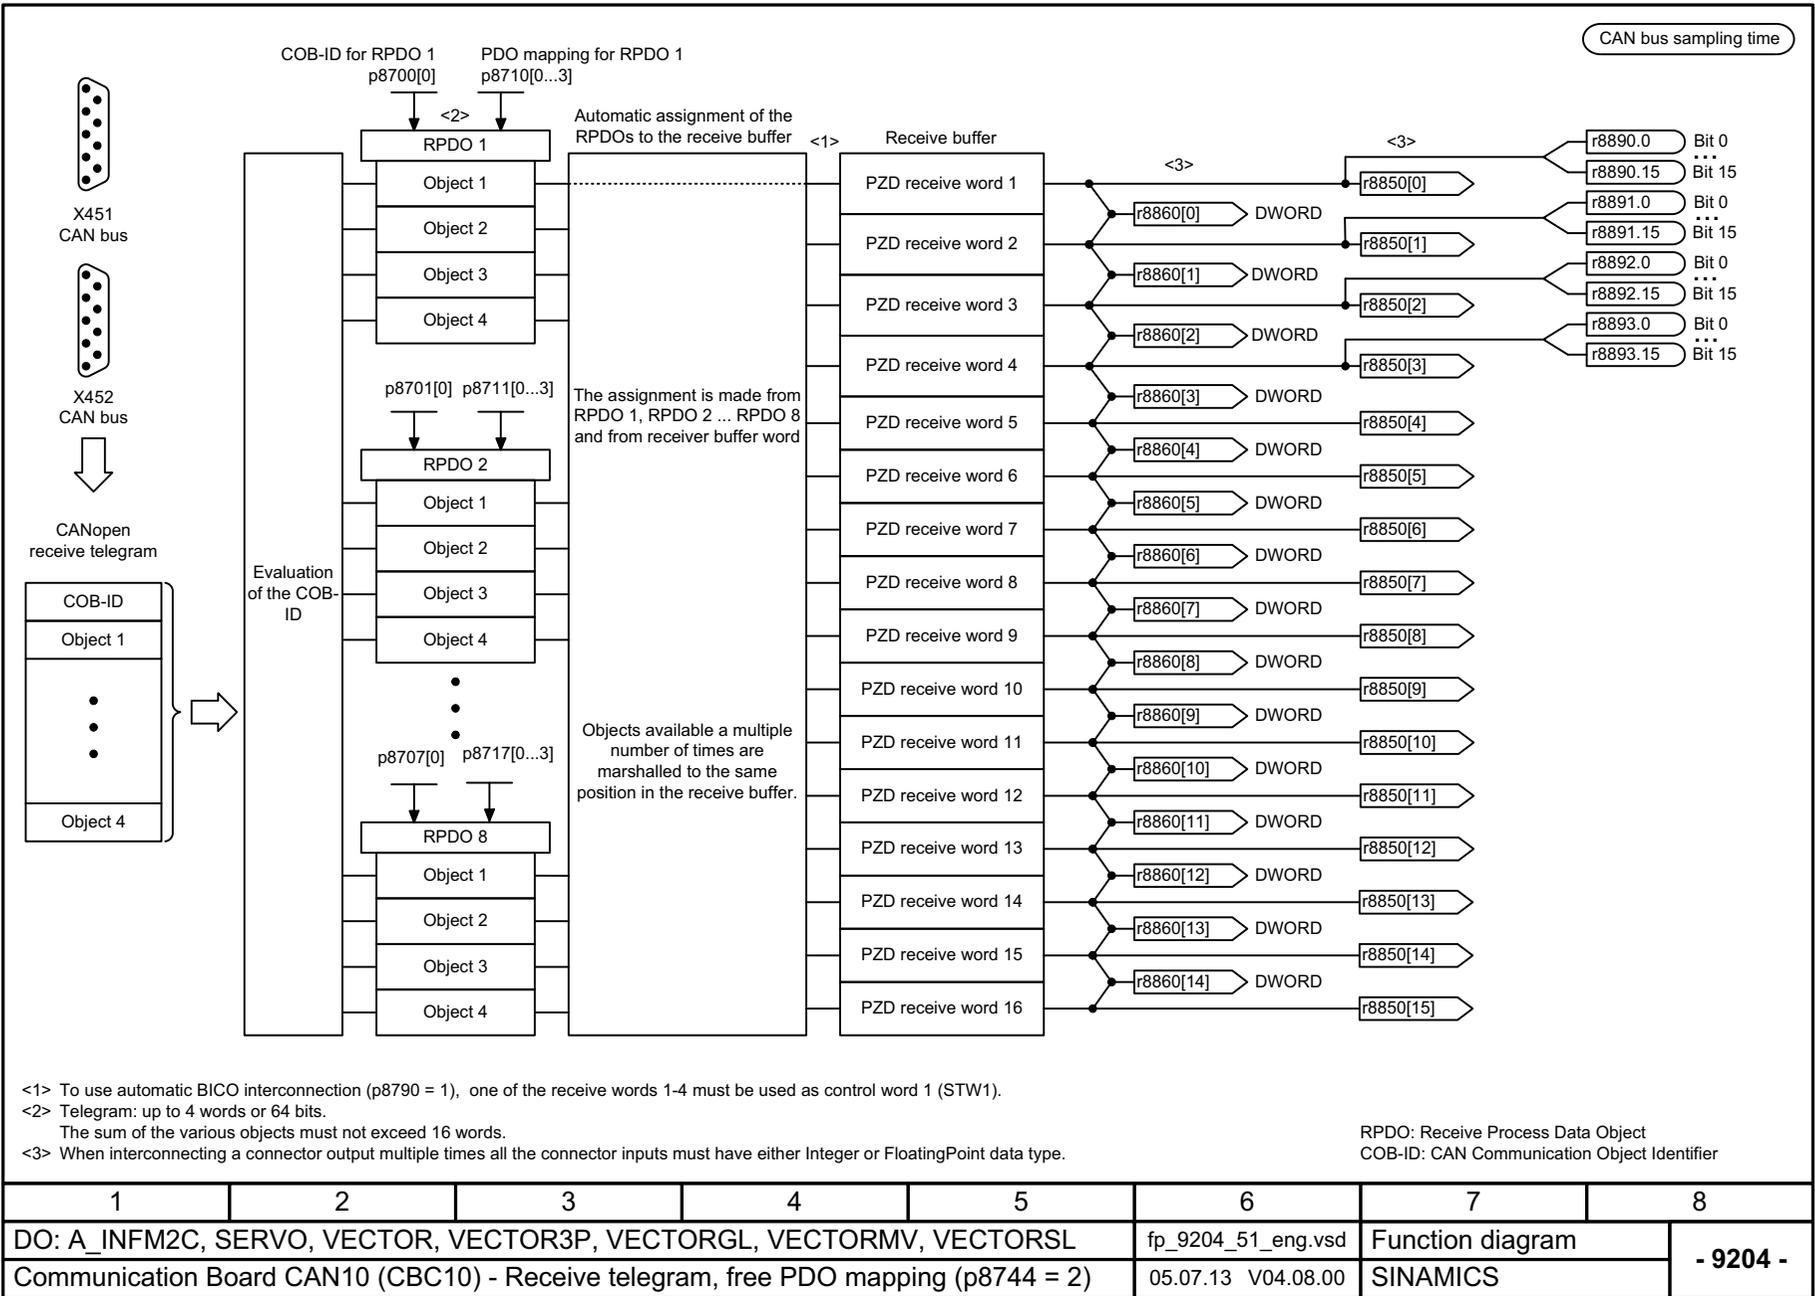
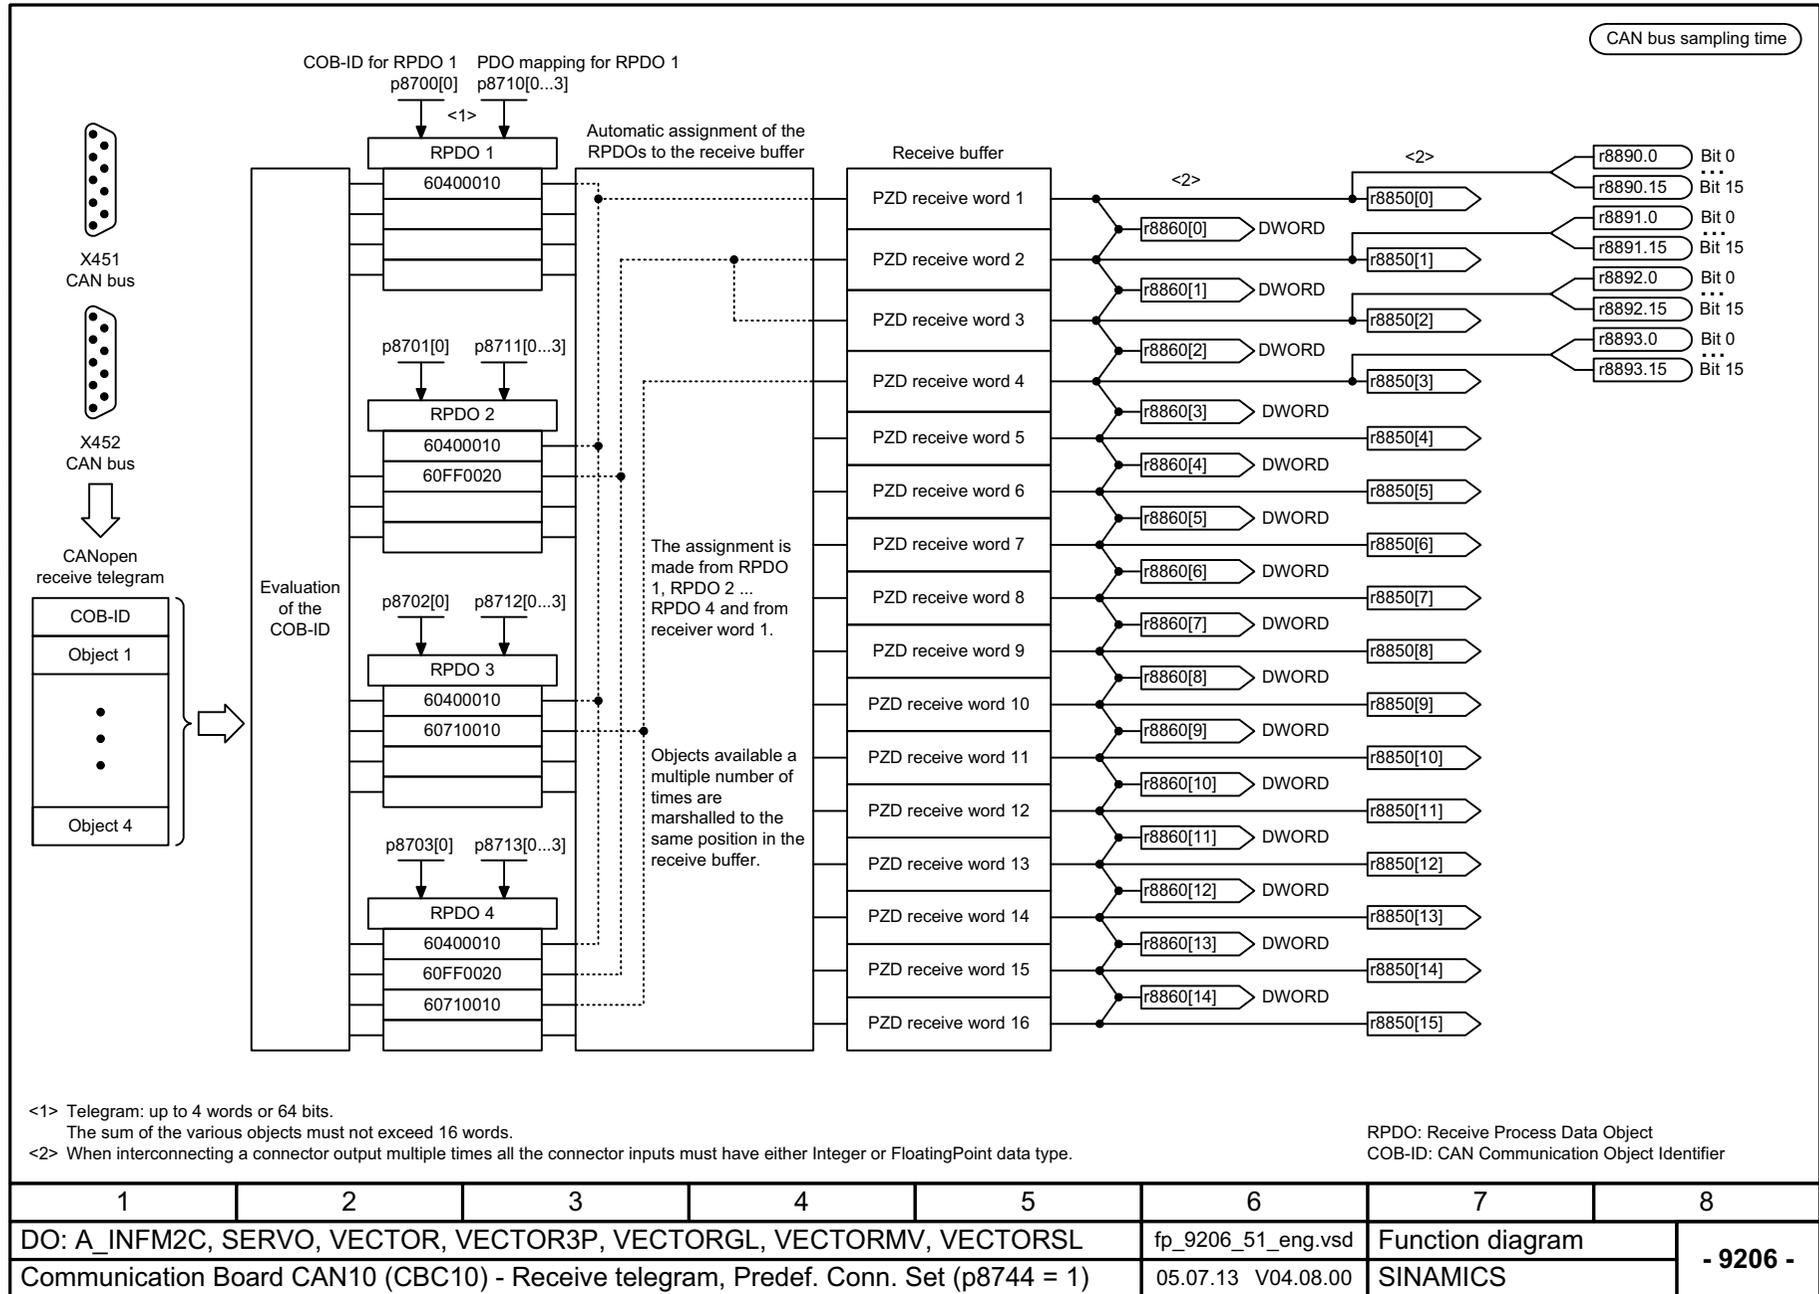


Fig. 3-201 9204 – Receive telegram, free PDO mapping (p8744 = 2)

Fig. 3-202 9206 – Receive telegram, Predefined Connection Set (p8744 = 1)




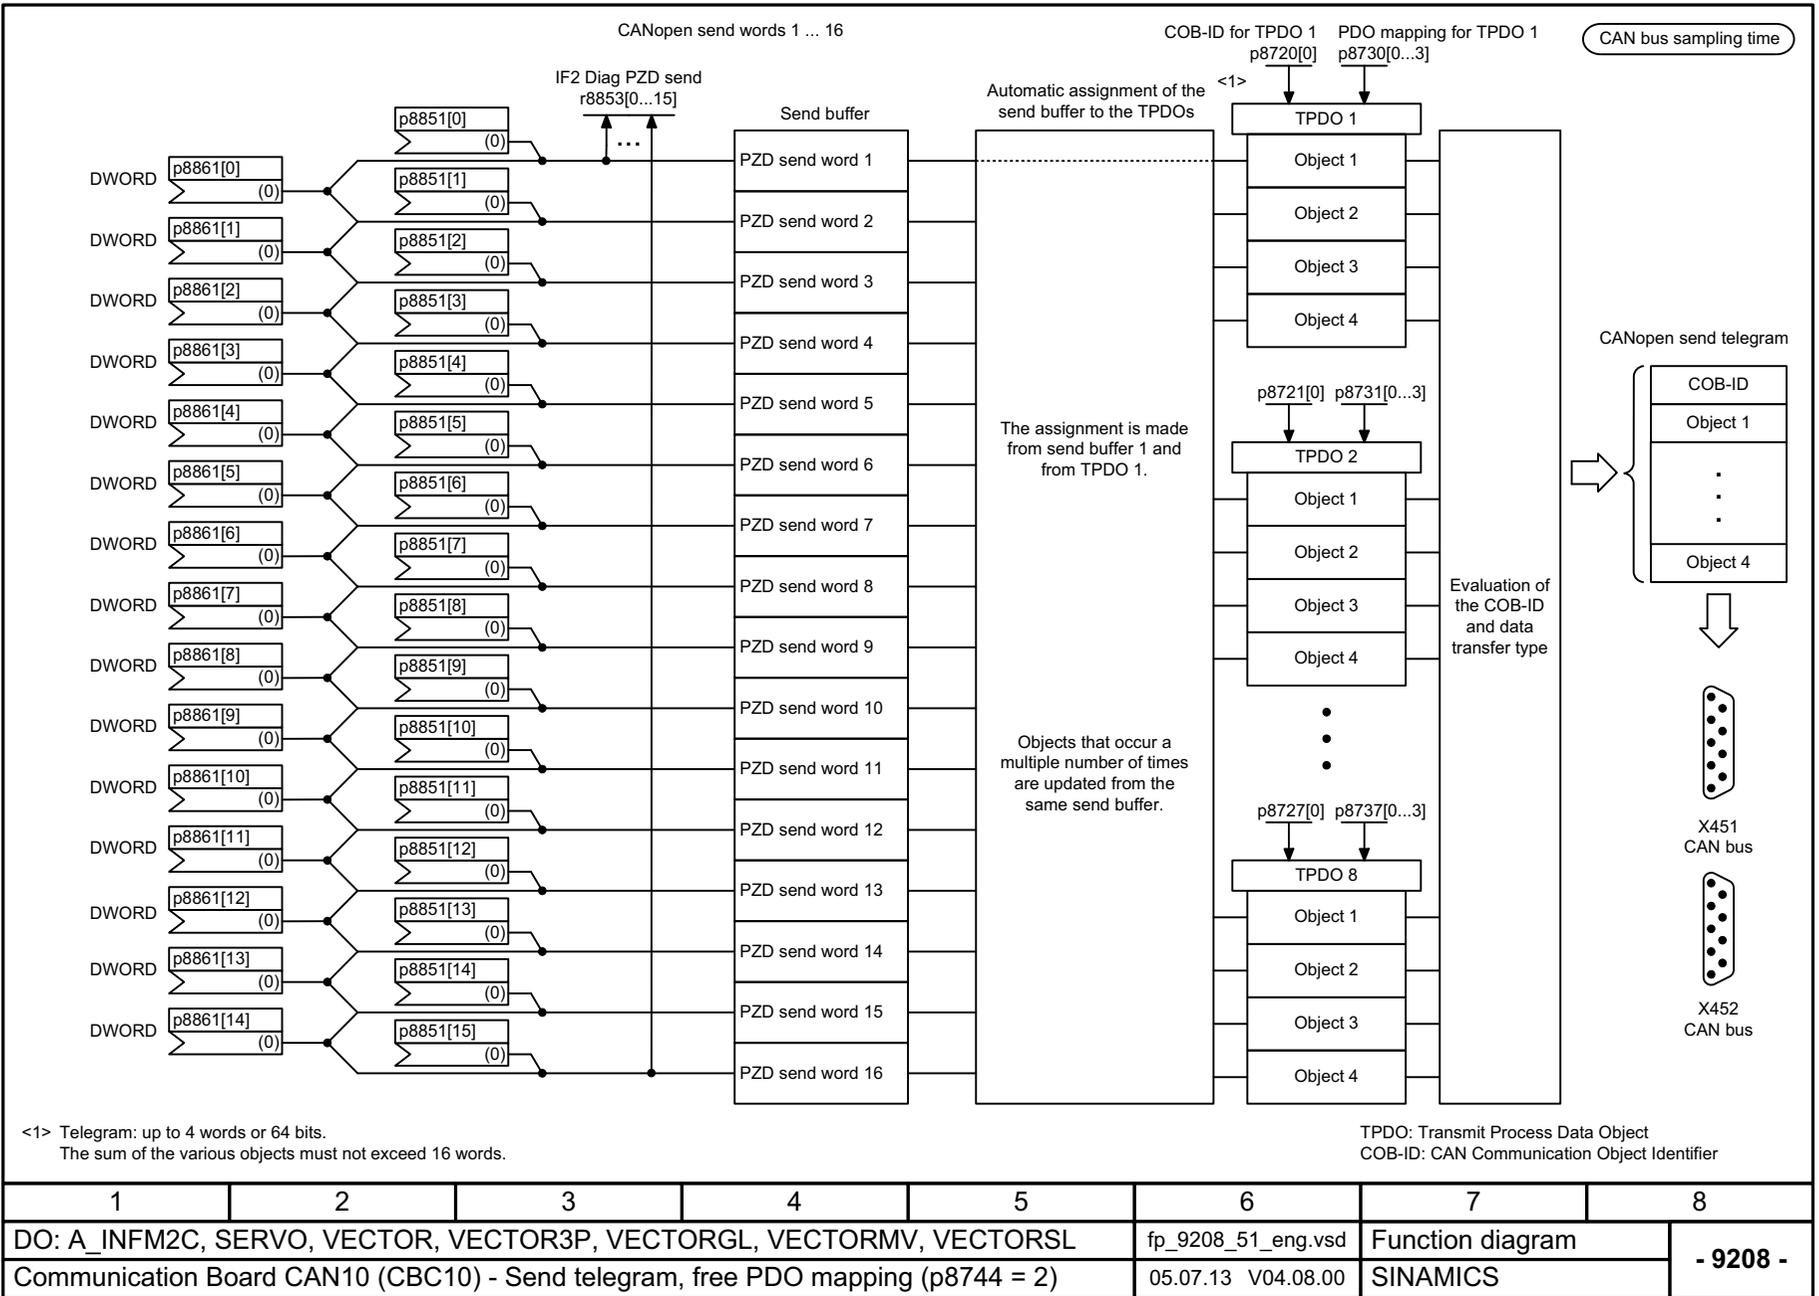


Fig. 3-204 9210 – Send telegram, Predefined Connection Set (p8744 = 1)

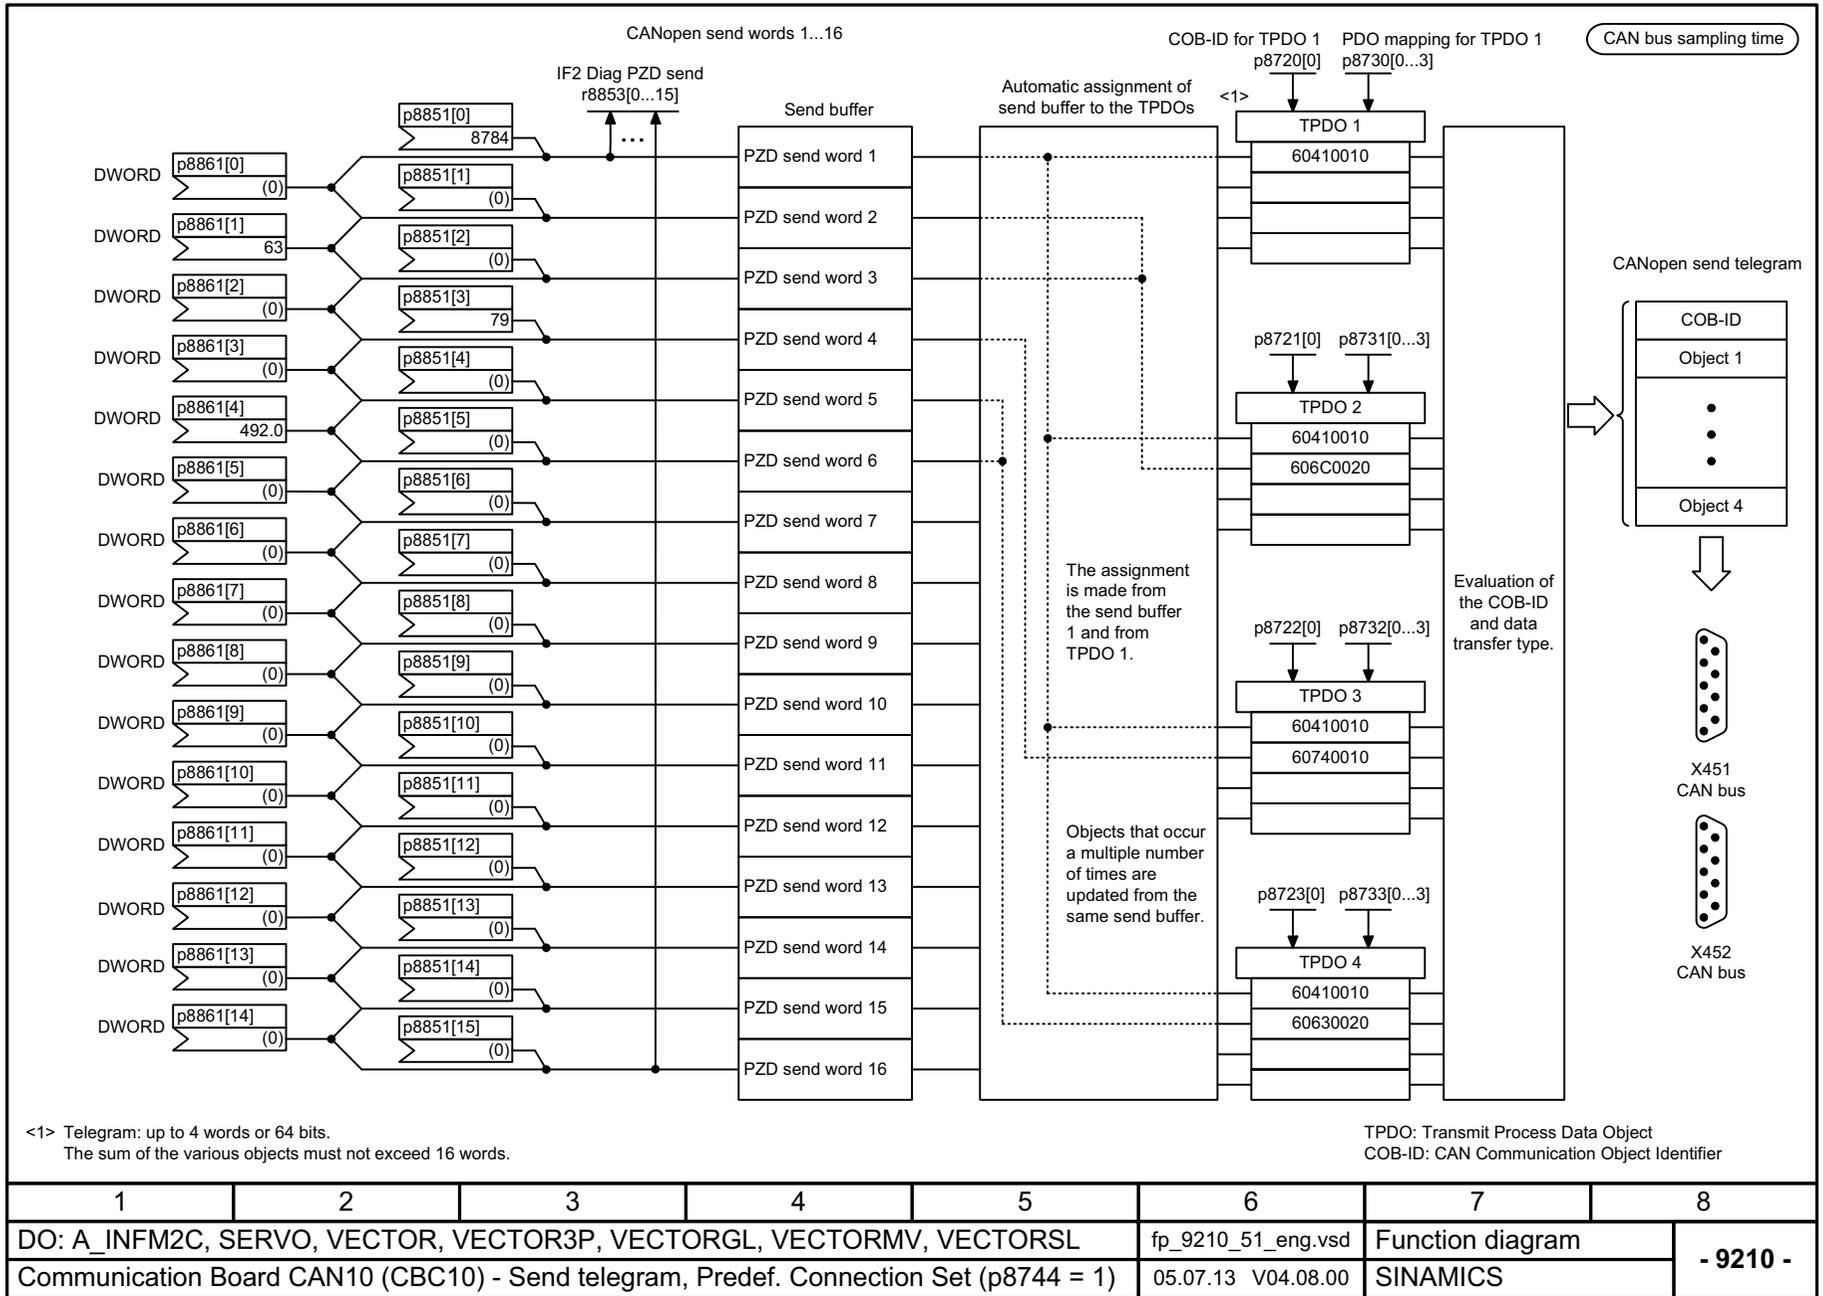

CAN bus sampling time

**Signal targets for control word CANopen**

Signal	Meaning	Interconnection parameters <1>	[Function diagram] internal control word	[Function diagram] signal target	Inverted
STW1.0	<b>▲</b> = ON (pulses can be enabled) 0 = <b>OFF1</b> (braking with ramp-function generator, then pulse cancellation and ready for switching on)	p0840[0] = r8890.0	[2501.3]	[2610]	-
STW1.1	1 = <b>No coast-down activated</b> (enable possible) 0 = Activate coast-down (immediate pulse cancellation and power-on inhibit)	p0844[0] = r8890.1	[2501.3]	[2610]	-
STW1.2	1 = <b>No quick stop activated</b> (enable possible) 0 = Activate quick stop (braking along an OFF3 ramp p1135, then pulse cancellation and power-oninhibit)	p0848[0] = r8890.2	[2501.3]	[2610]	-
STW1.3	1 = <b>Enable operation</b> (pulses can be enabled) 0 = Inhibit operation (cancel pulses)	p0852[0] = r8890.3	[2501.3]	[2610]	-
STW1.4	1 = <b>Enable ramp-function generator</b> 0 = Inhibit ramp-function generator	<2> p1140[0] = r8890.4	[2501.3]	[3060]	-
STW1.5	1 = <b>Continue ramp-function generator</b> 0 = Freeze ramp-function generator	<2> p1141[0] = r8890.5	[2501.3]	[3060]	-
STW1.6	1 = <b>Enable speed setpoint ramp-function generator input</b> 0 = Inhibit setpoint (the ramp-function generator input is set to zero)	<2> p1142[0] = r8890.6	[2501.1]	[3060]	-
STW1.7	<b>▲</b> = <b>Acknowledge fault</b>	p2103[0] = r8890.7	[2546.1]	[8060]	-
STW1.8	1 = <b>Stop</b>	<2> <3>	-	[3060]	-
STW1.9	<b>Reserved</b>	-	-	-	-
STW1.10	<b>Reserved</b>	-	-	-	-
STW1.11	<b>Can be freely connected</b>	pxxxx[y] = r8890.11			-
STW1.12	<b>Can be freely connected</b>	pxxxx[y] = r8890.12	-	-	-
STW1.13	<b>Can be freely connected</b>	pxxxx[y] = r8890.13	-	-	-
STW1.14	<b>Can be freely connected</b>	pxxxx[y] = r8890.14	-	-	-
STW1.15	<b>Can be freely connected</b>	pxxxx[y] = r8890.15	-	-	-

<1> Depending on the position of the CANopen control word in p8750, the number of the binector to be connected changes.

<3> Interconnection via p8791.

<2> Ignored by automatic control word interconnection (p8790).

1	2	3	4	5	6	7	8
DO: A_INF2C, SERVO, VECTOR, VECTOR3P, VECTORGL, VECTORMV, VECTORSL					fp_9220_51_eng.vsd	Function diagram	
Communication Board CAN10 (CBC10) - Control word, CANopen					04.07.13 V04.08.00	SINAMICS	
							<b>- 9220 -</b>

Fig. 3-205 9220 – Control word, CANopen

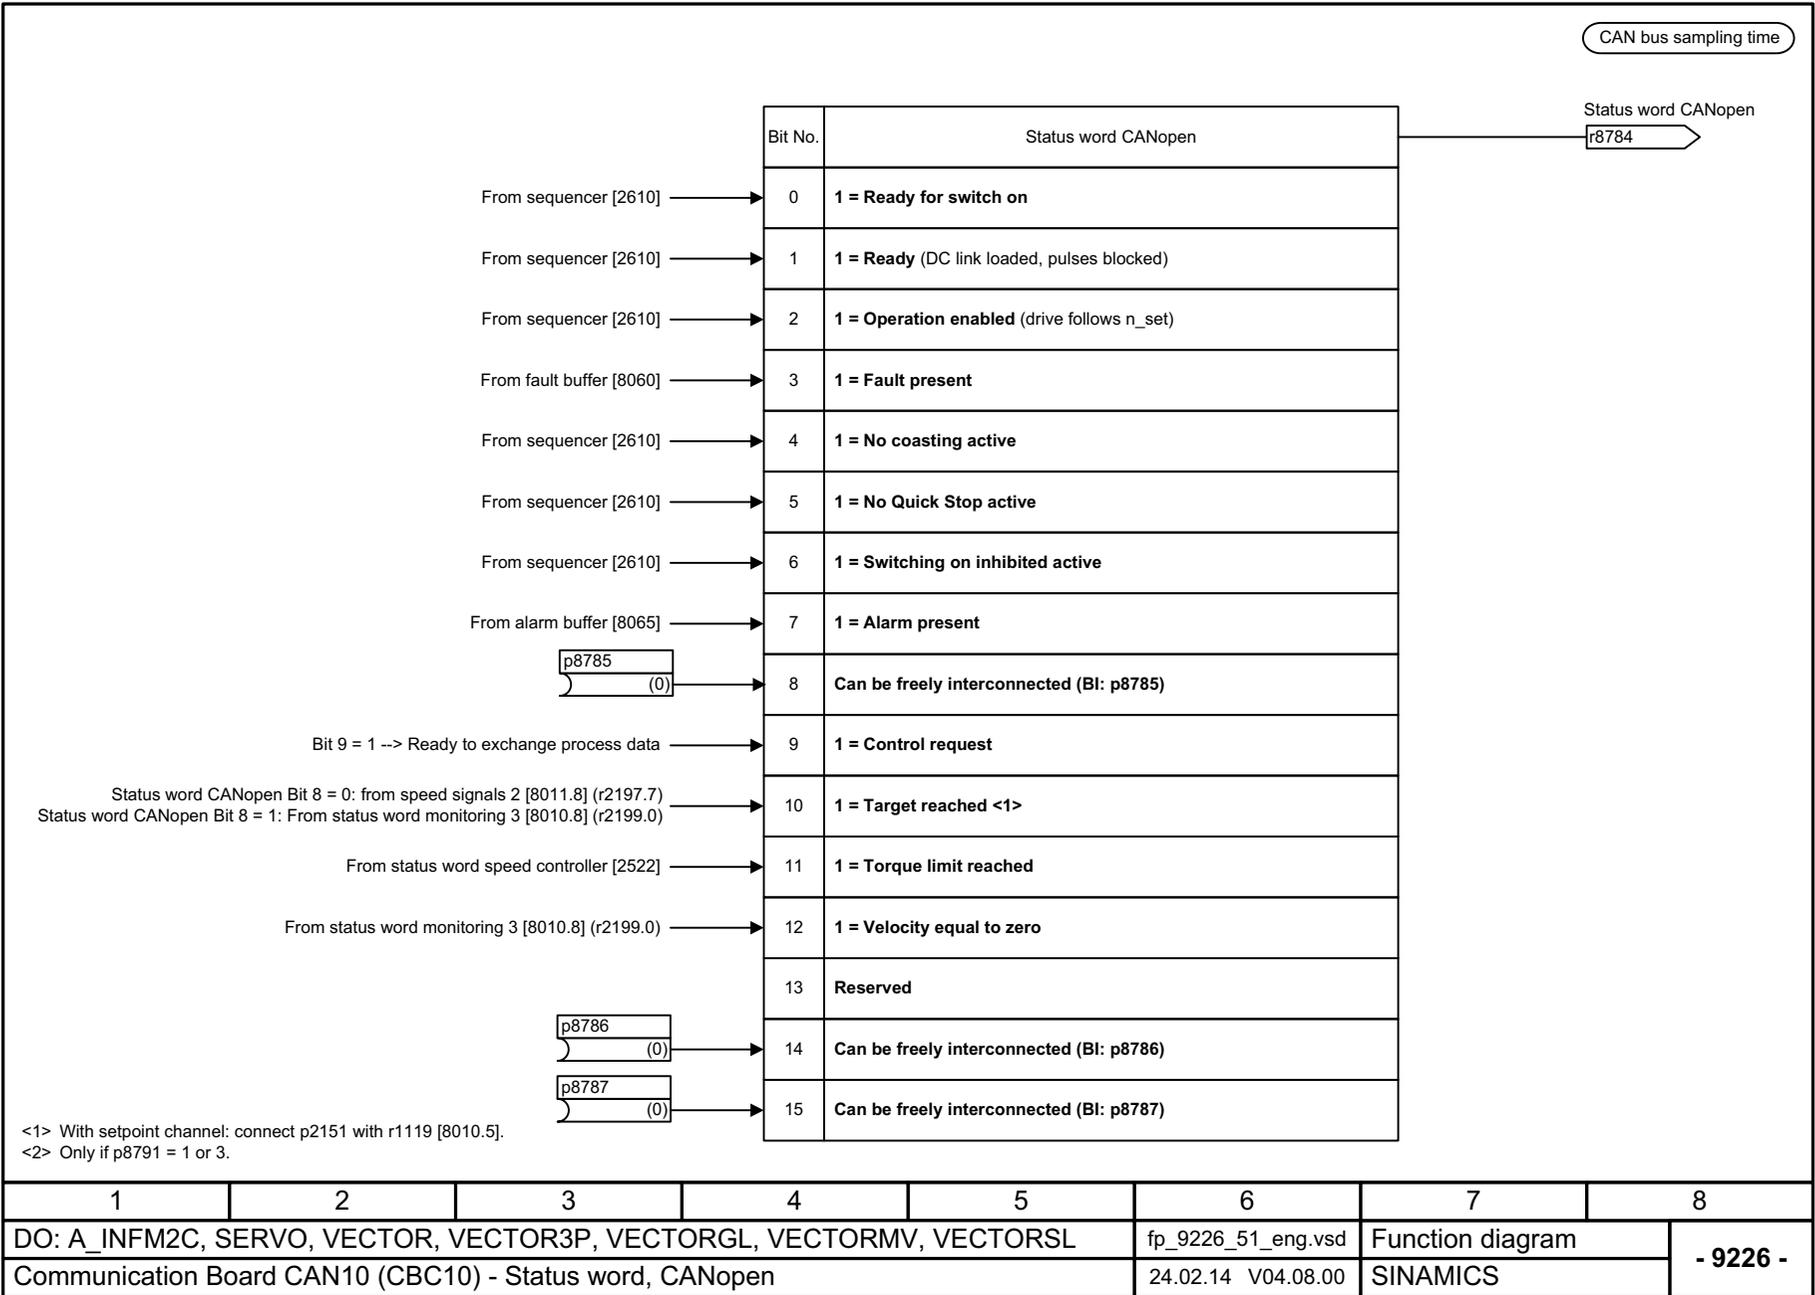



Fig. 3-206 9226 – Status word, CANOpen

## 3.25 Terminal Module 31 (TM31)

### Function diagrams


9549 – Overview	1333
9550 – Digital inputs, electrically isolated (DI 0 ... DI 3)	1334
9552 – Digital inputs, electrically isolated (DI 4 ... DI 7)	1335
9556 – Digital relay outputs, electrically isolated (DO 0 ... DO 1)	1336
9560 – Digital inputs/outputs, bidirectional (DI/DO 8 ... DI/DO 9)	1337
9562 – Digital inputs/outputs, bidirectional (DI/DO 10 ... DI/DO 11)	1338
9566 – Analog input 0 (AI 0)	1339
9568 – Analog input 1 (AI 1)	1340
9572 – Analog outputs (AO 0 ... AO 1)	1341
9576 – Temperature evaluation	1342

---

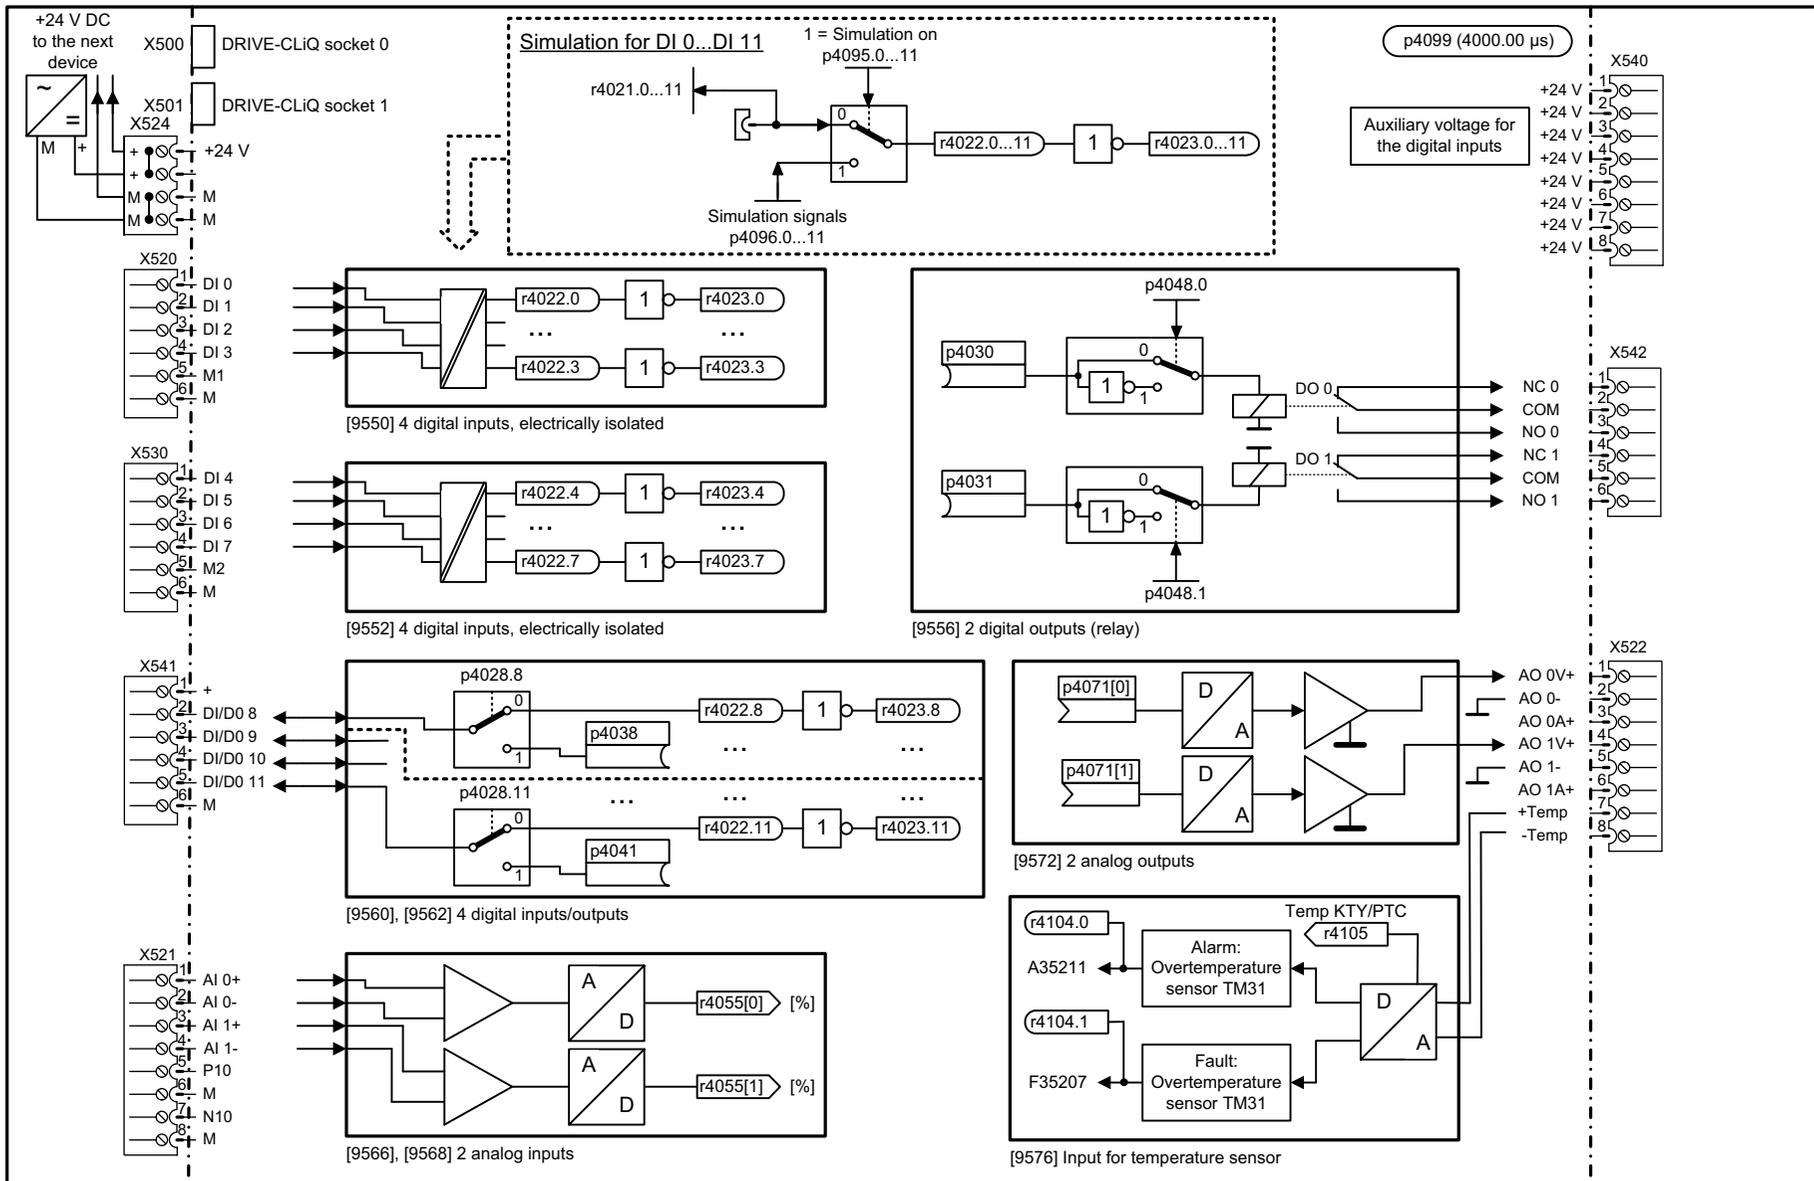

1	2	3	4	5	6	7	8
DO: TM31					fp_9549_51_eng.vsd	Function diagram	
Terminal Module 31 (TM31) - Overview					12.03.13 V04.08.00	SINAMICS	
							- 9549 -


Fig. 3-207 9549 - Overview

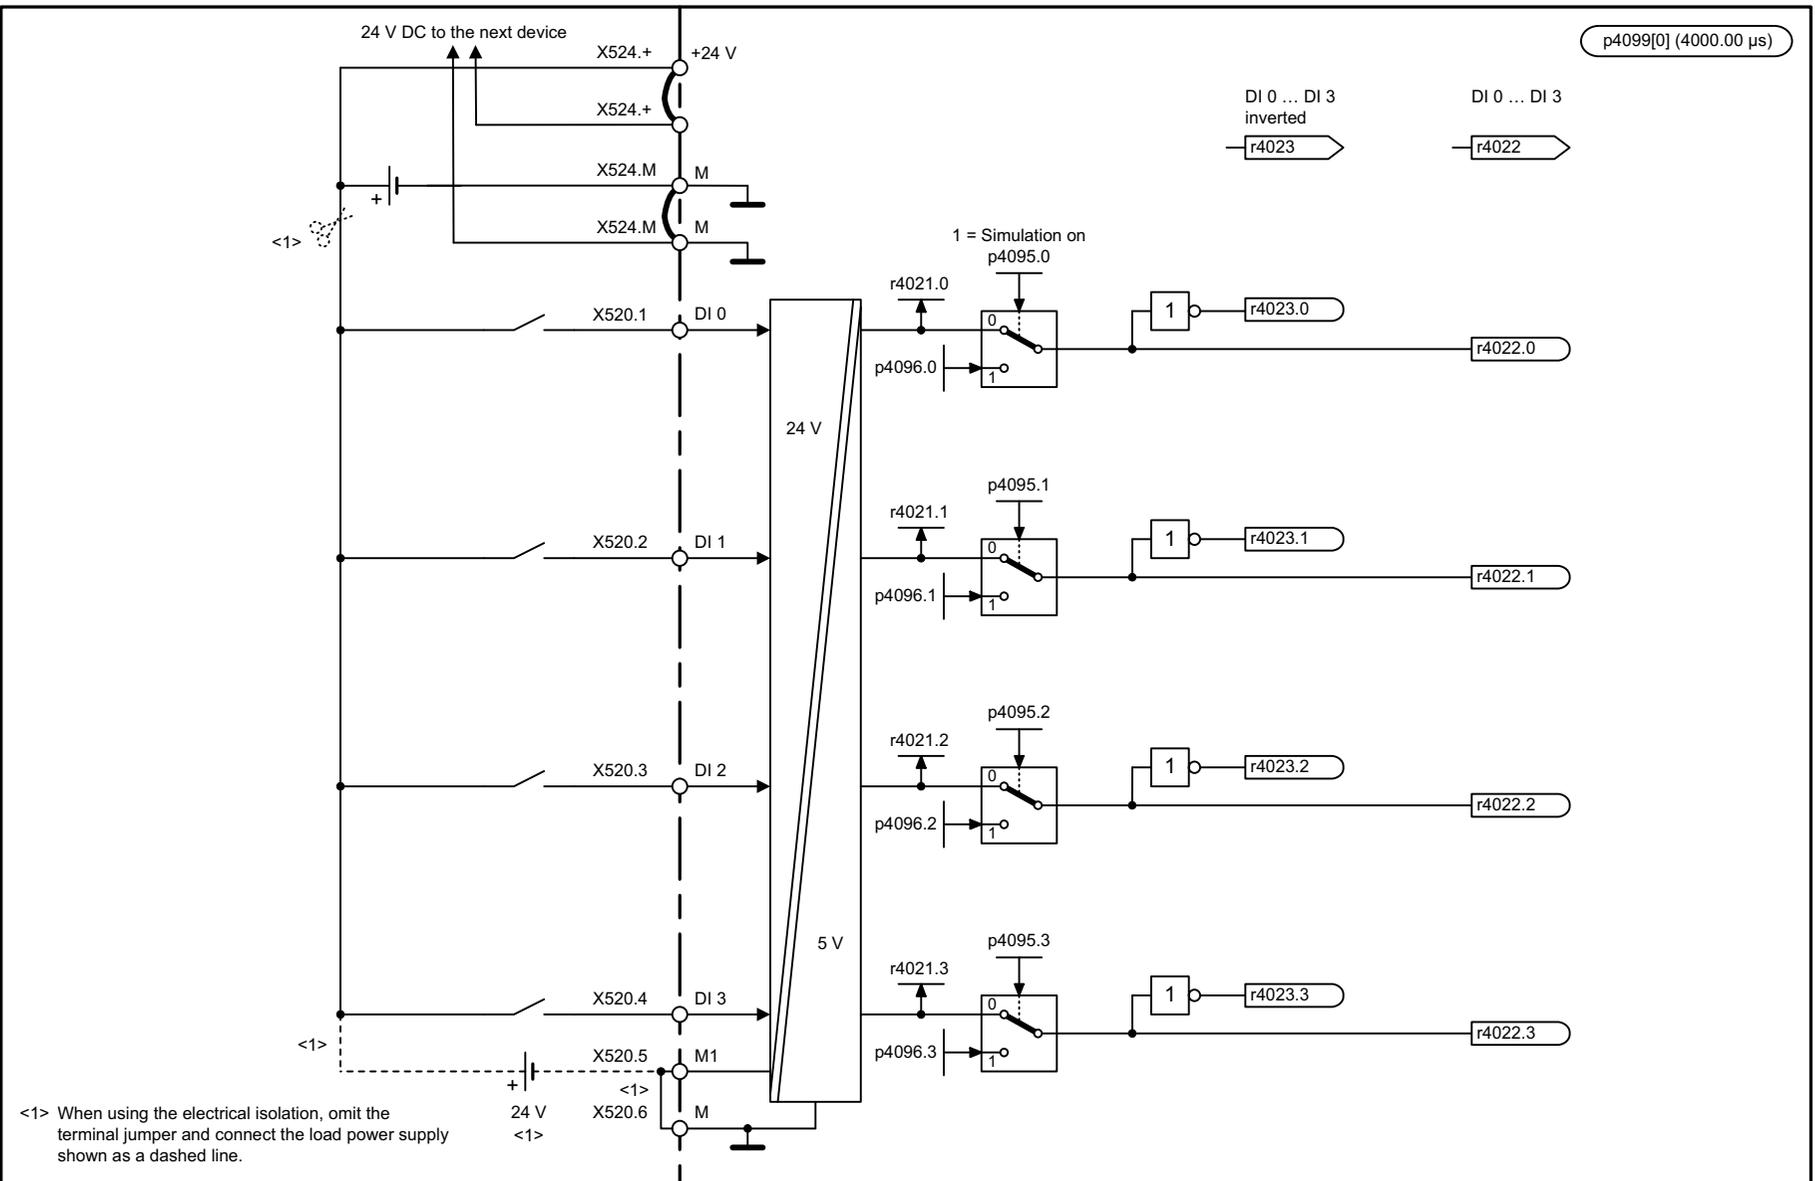

<1> When using the electrical isolation, omit the terminal jumper and connect the load power supply shown as a dashed line.

1	2	3	4	5	6	7	8
DO: TM31					fp_9550_51_eng.vsd	Function diagram	
Terminal Module 31 (TM31) - Digital inputs, electrically isolated (DI 0 ... DI 3)					25.03.09 V04.08.00	SINAMICS	
							- 9550 -

Fig. 3-208 9550 – Digital inputs, electrically isolated (DI 0 ... DI 3)

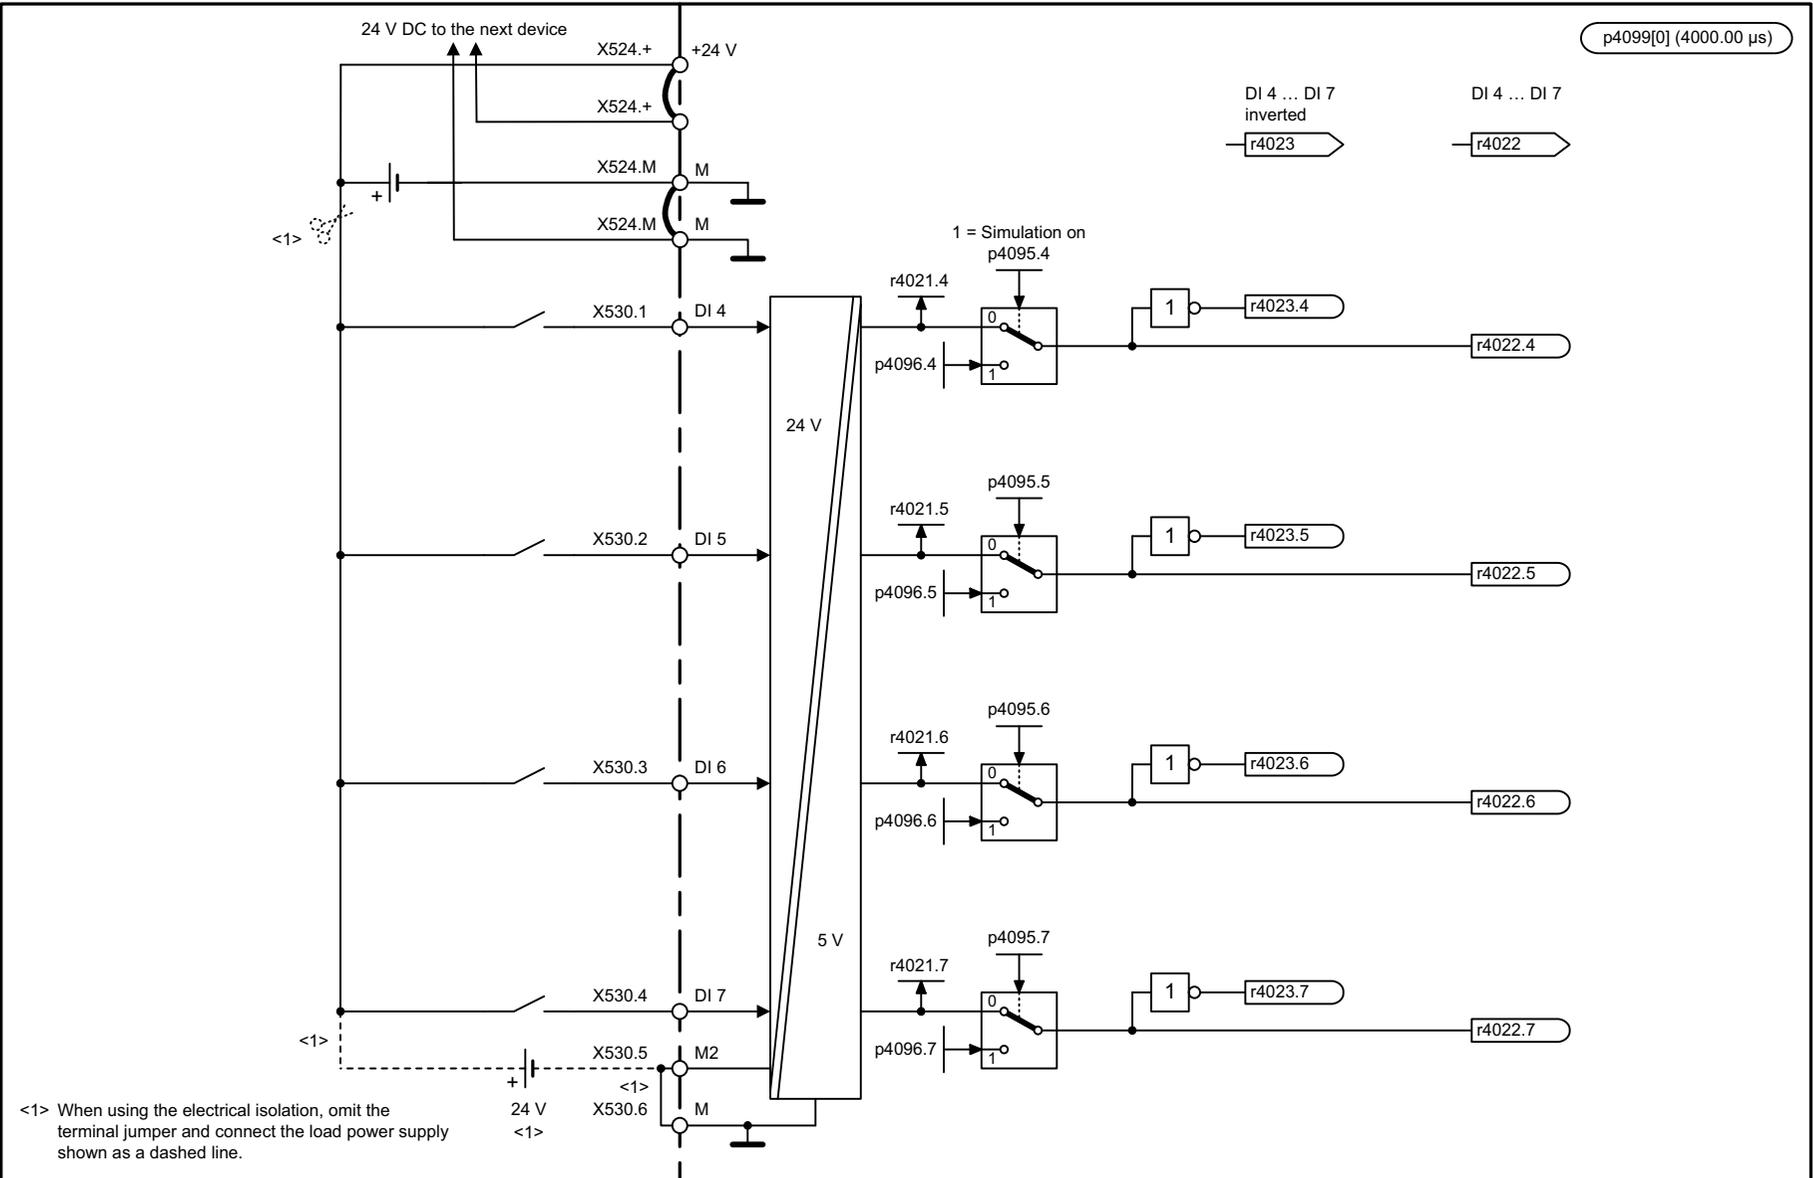

1	2	3	4	5	6	7	8
DO: TM31					fp_9552_51_eng.vsd	Function diagram	
Terminal Module 31 (TM31) - Digital inputs, electrically isolated (DI 4 ... DI 7)					25.03.09 V04.08.00	SINAMICS	
							- 9552 -

Fig. 3-209 9552 – Digital inputs, electrically isolated (DI 4 ... DI 7)



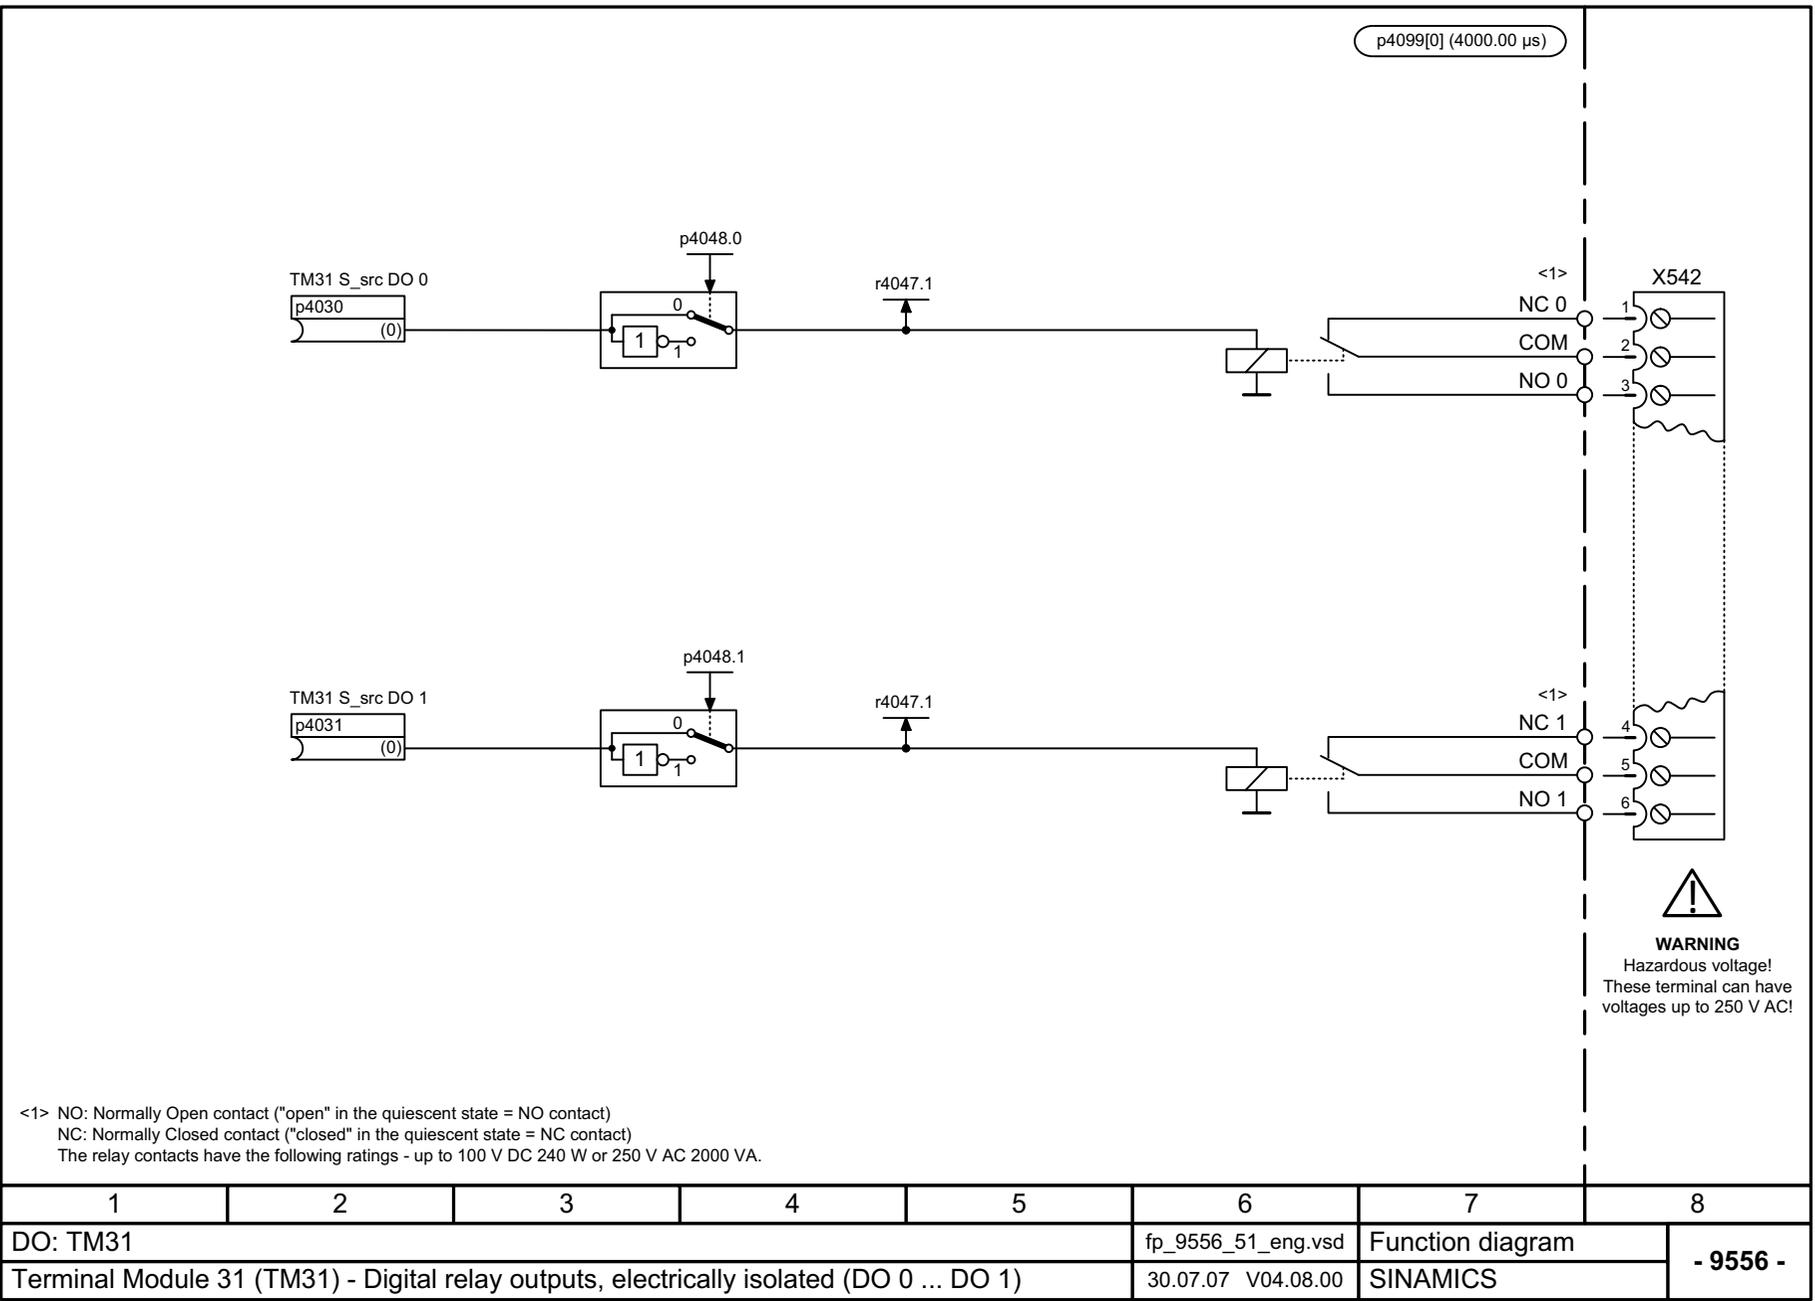


Fig. 3-210 9556 – Digital relay outputs, electrically isolated (DO 0 ... DO 1)

Fig. 3-211 9560 – Digital inputs/outputs, bidirectional (DI/DO 8 ... DI/DO 9)

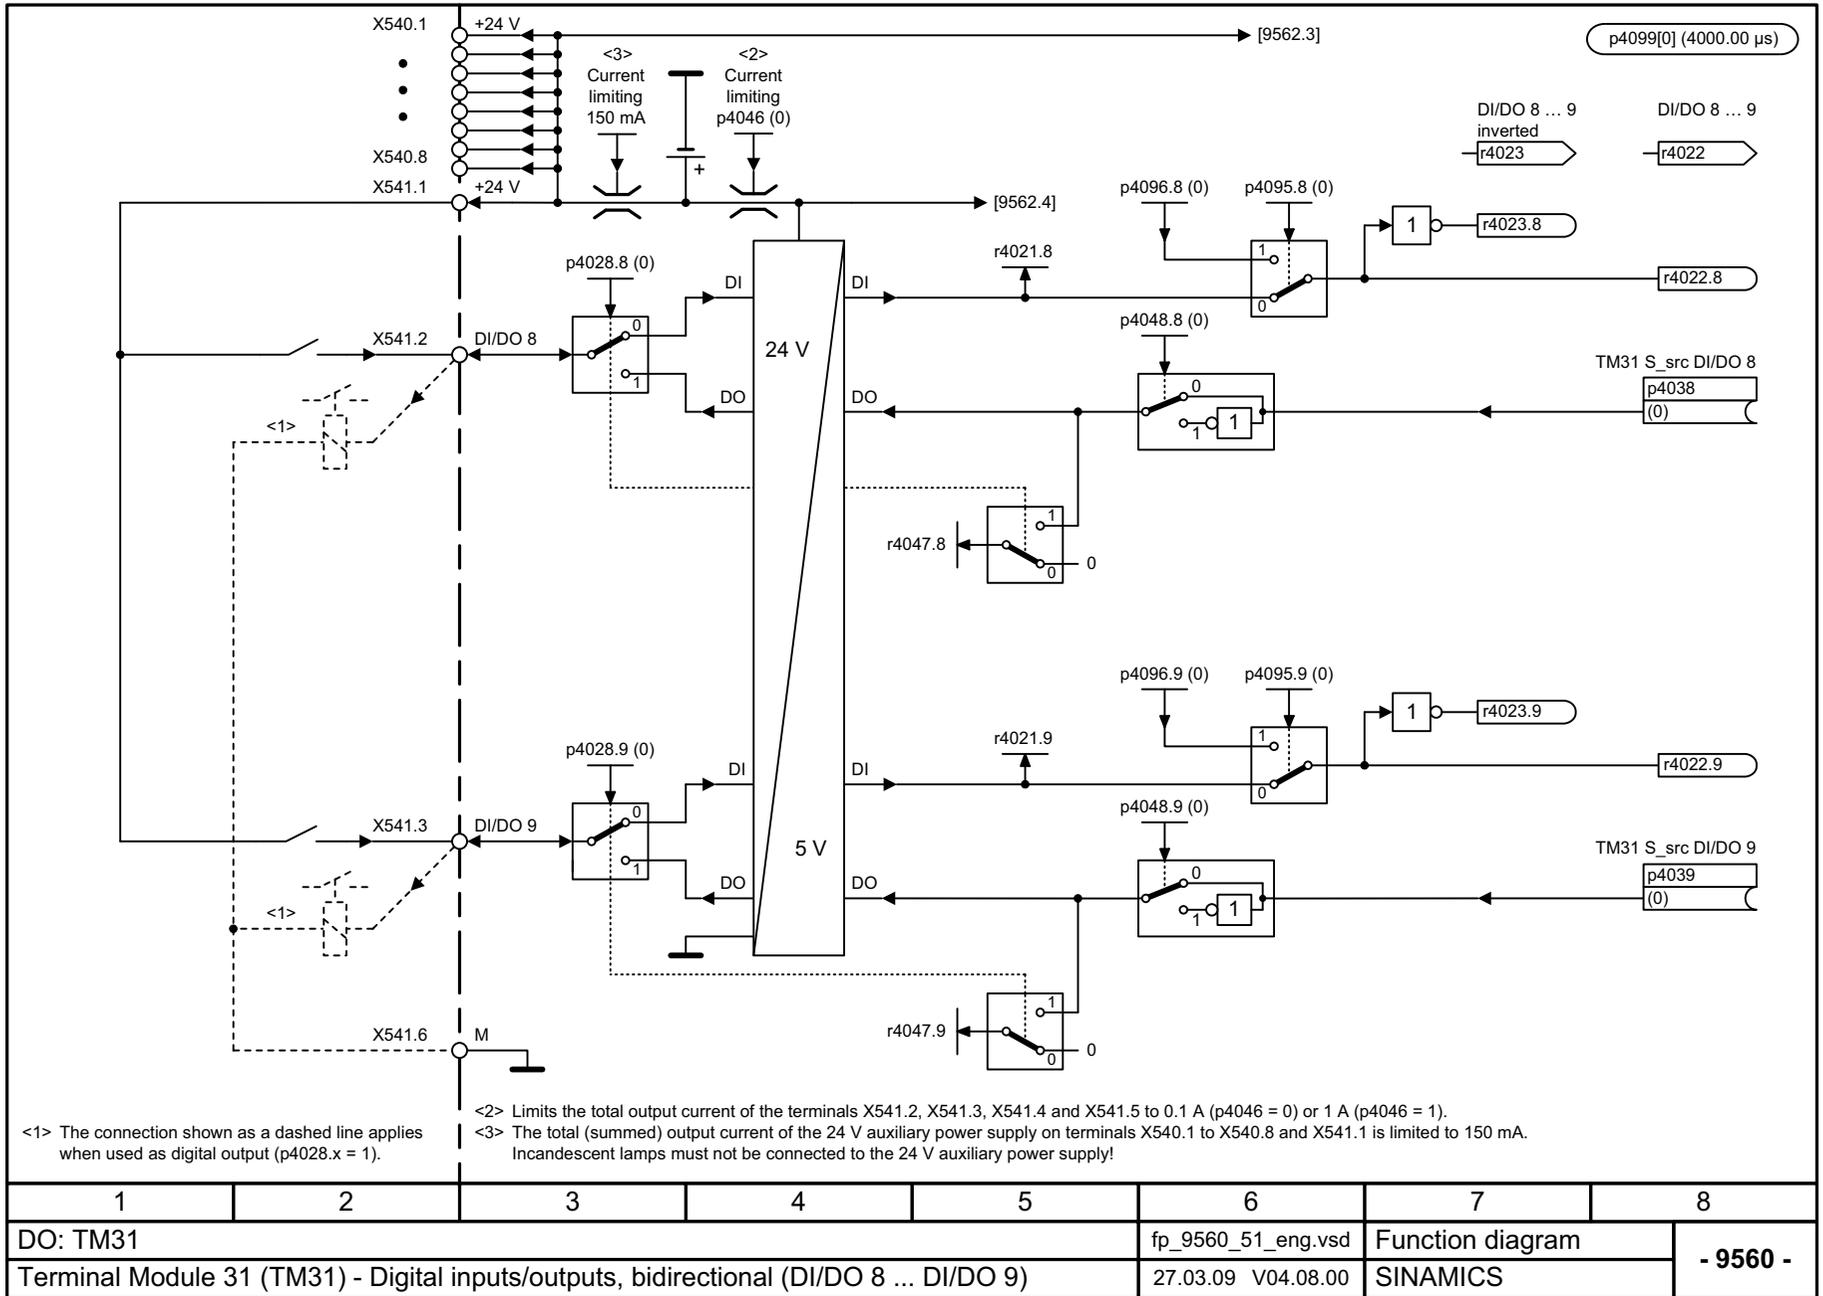

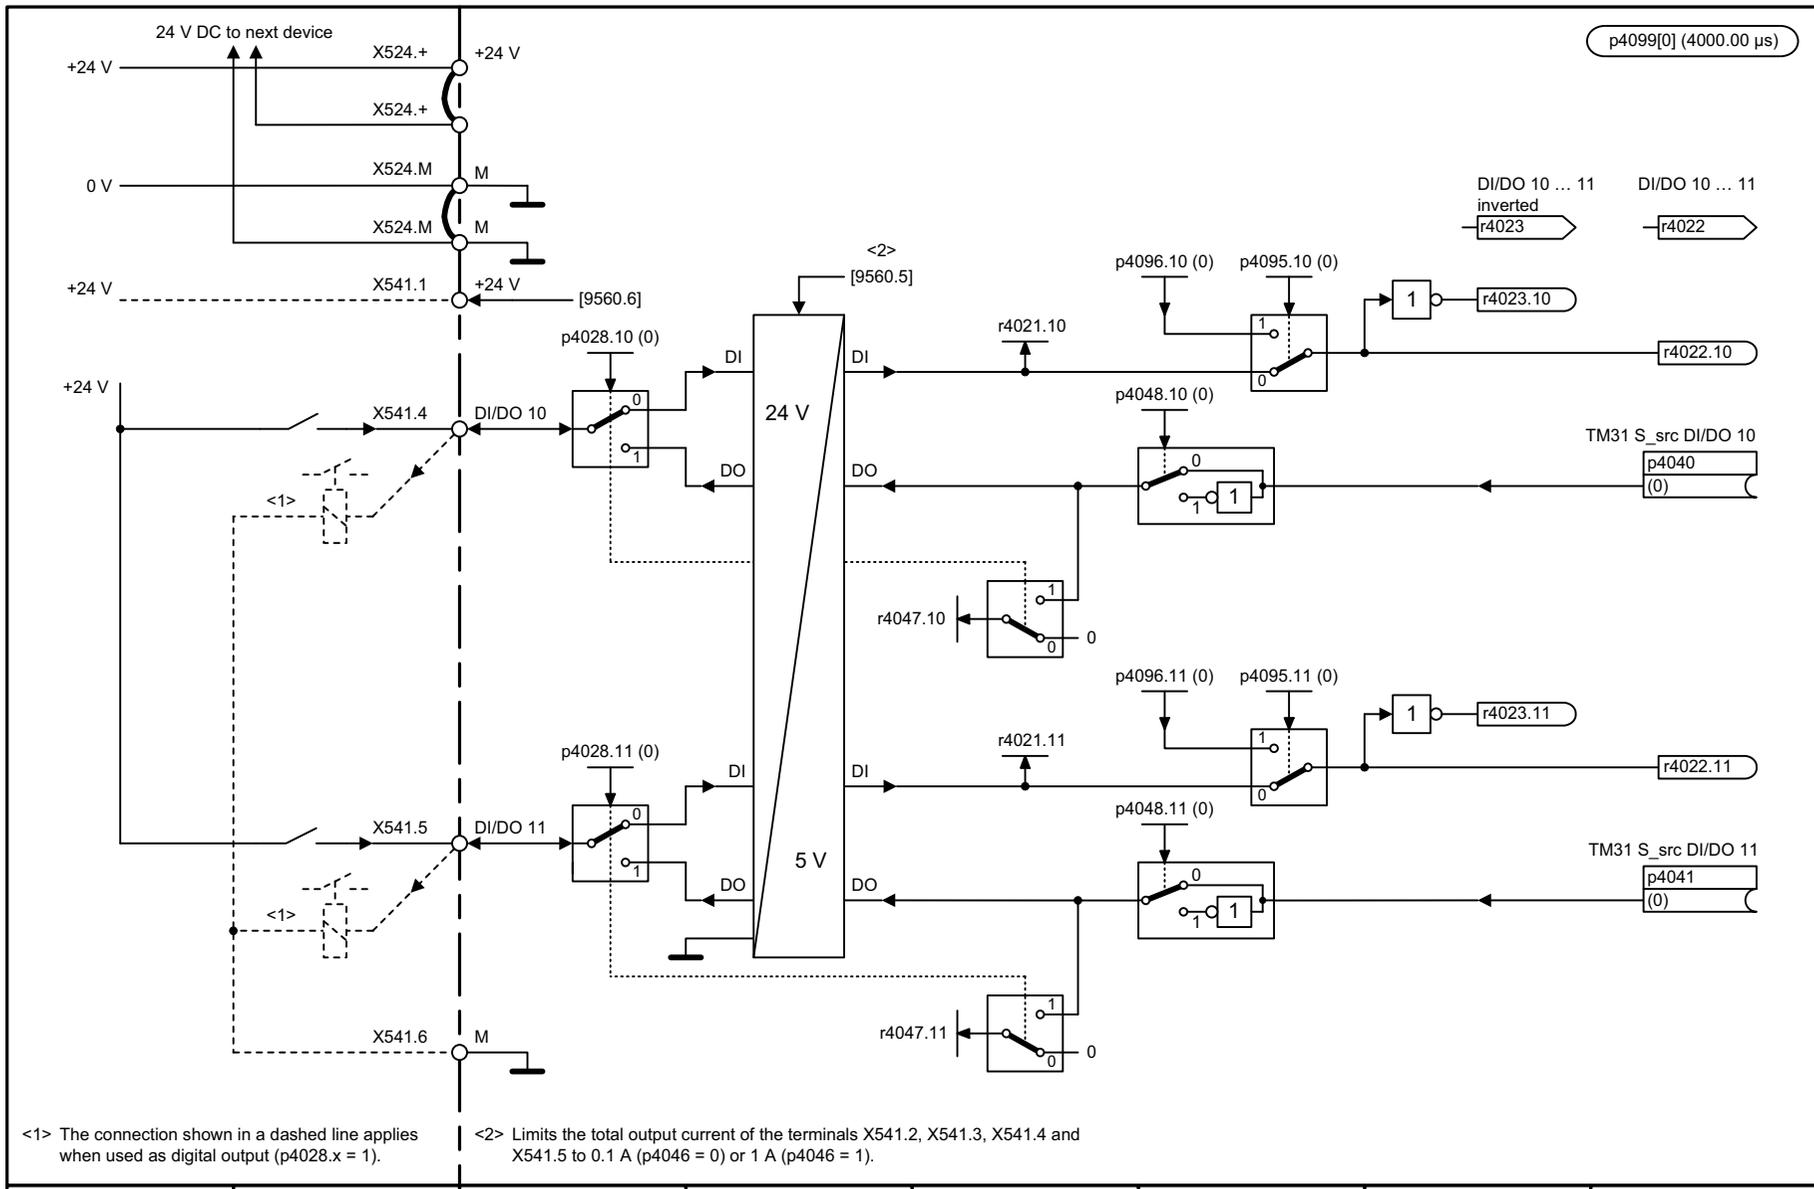


<1> The connection shown in a dashed line applies when used as digital output (p4028.x = 1).  
<2> Limits the total output current of the terminals X541.2, X541.3, X541.4 and X541.5 to 0.1 A (p4046 = 0) or 1 A (p4046 = 1).


1	2	3	4	5	6	7	8
DO: TM31					fp_9562_51_eng.vsd	Function diagram	
Terminal Module 31 (TM31) - Digital inputs/outputs, bidirectional (DI/DO 10 ... DI/DO 11)					27.03.09 V04.08.00	SINAMICS	
							- 9562 -

Fig. 3-212 9562 – Digital inputs/outputs, bidirectional (DI/DO 10 ... DI/DO 11)

Fig. 3-213 9566 – Analog input 0 (AI 0)

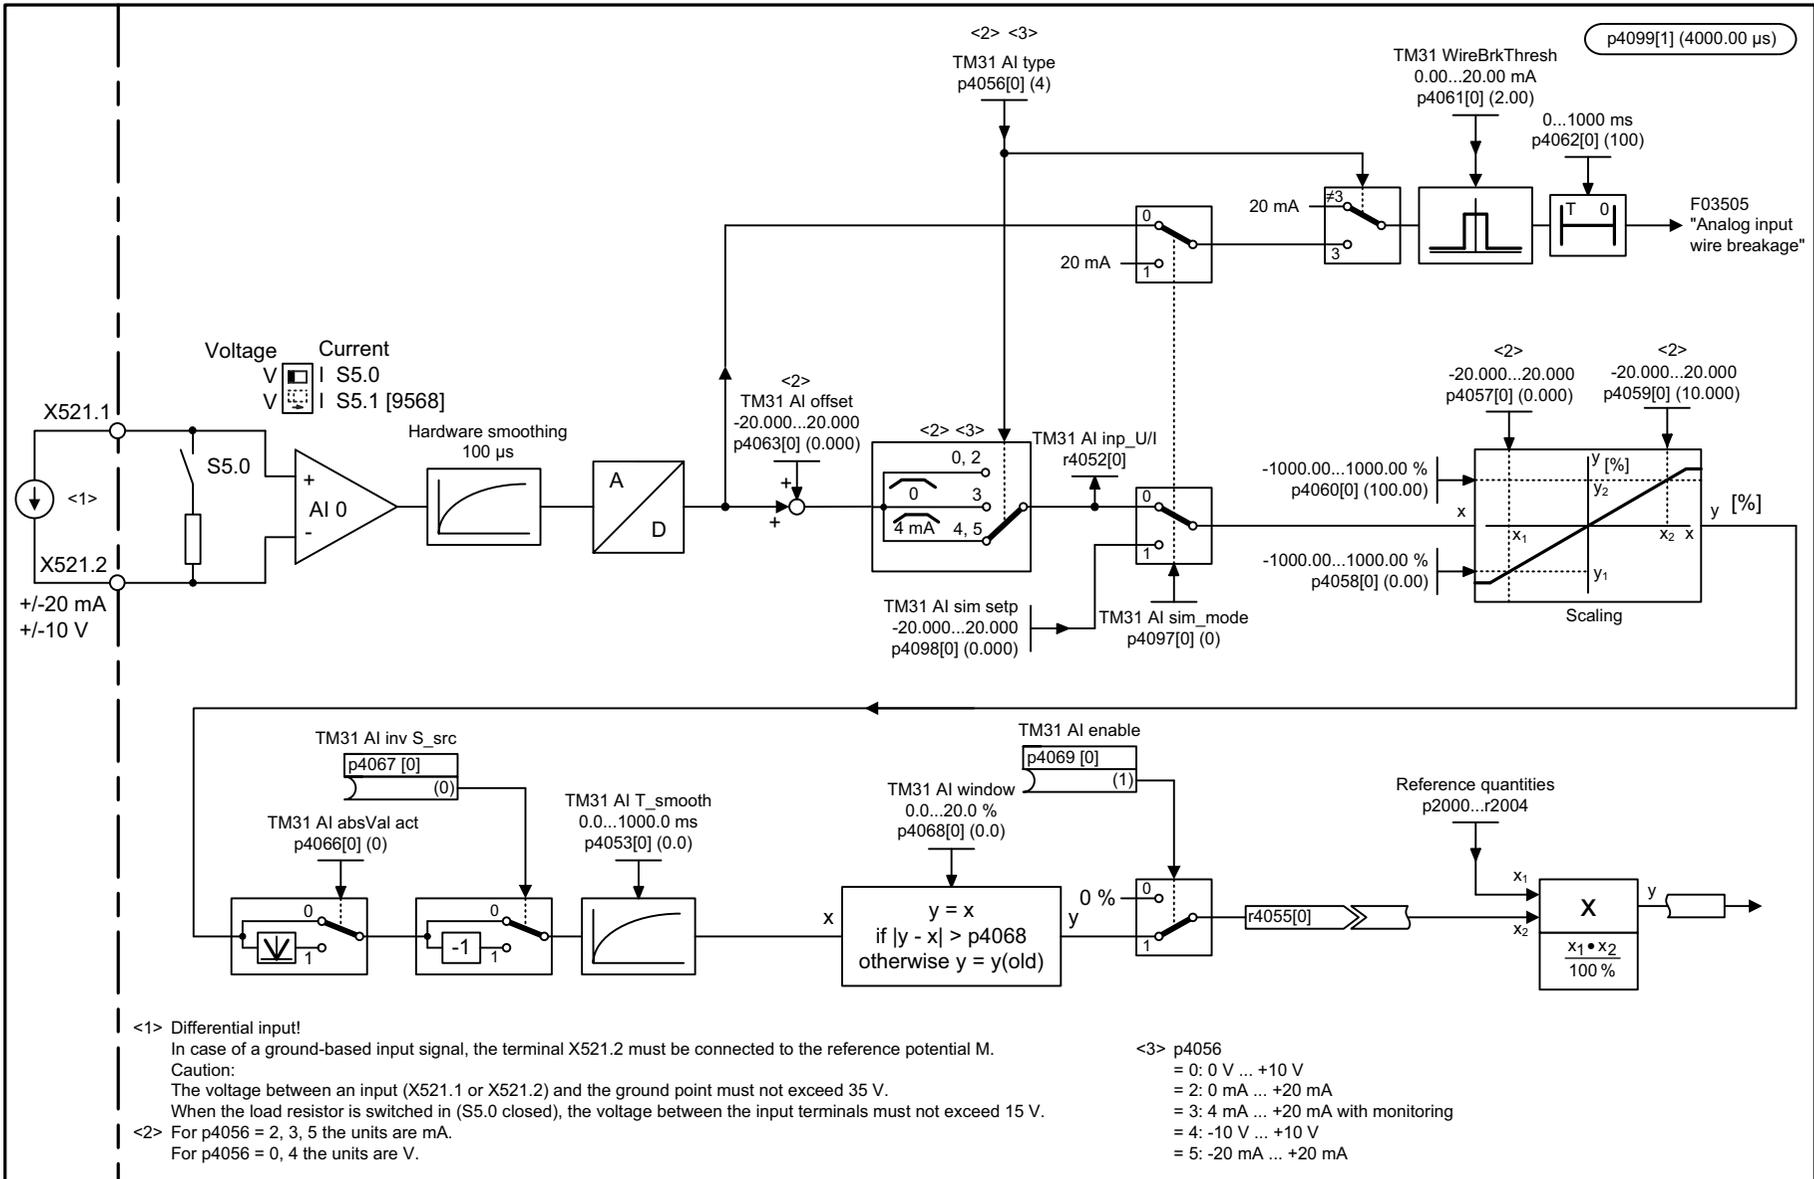

1	2	3	4	5	6	7	8
DO: TM31					fp_9566_51_eng.vsd	Function diagram	
Terminal Module 31 (TM31) - Analog input 0 (AI 0)					29.12.10 V04.08.00	SINAMICS	
							- 9566 -

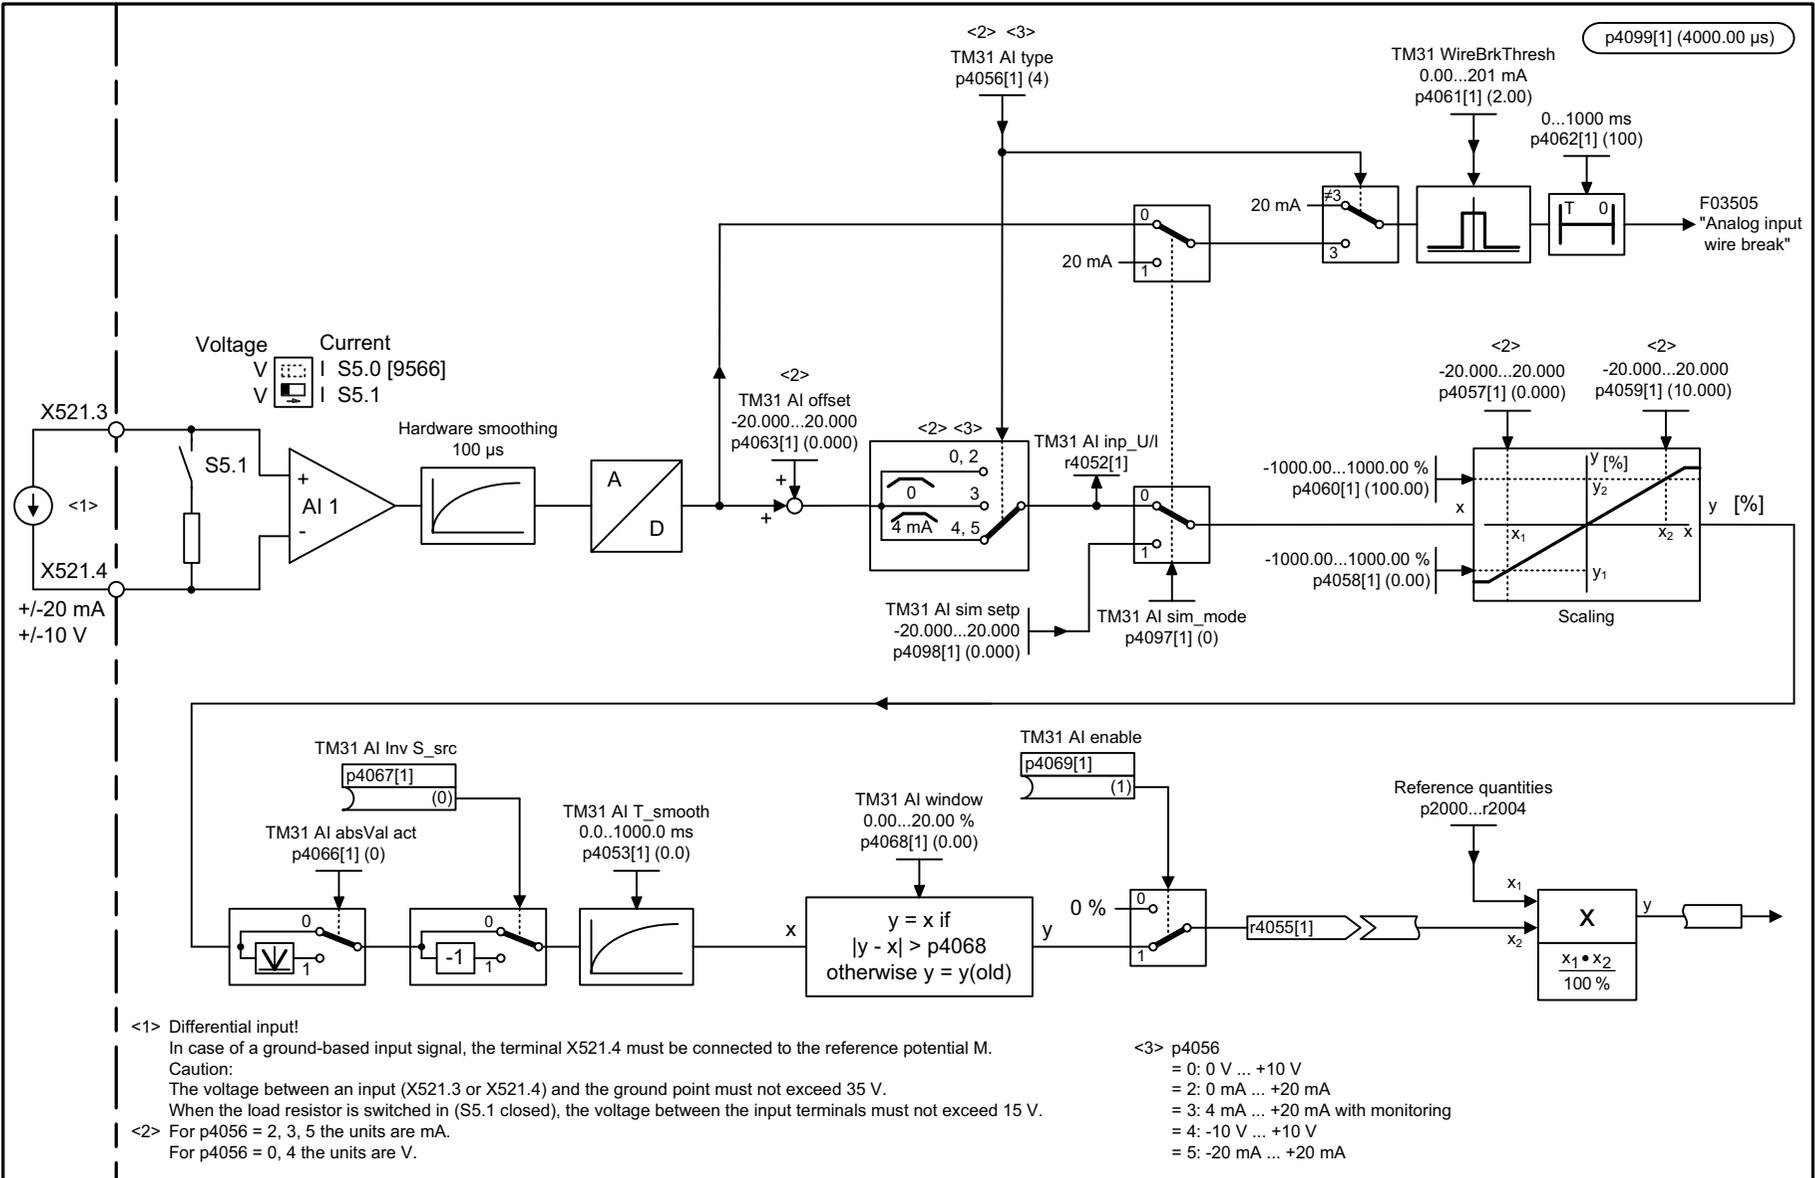

<1> Differential input!  
In case of a ground-based input signal, the terminal X521.4 must be connected to the reference potential M.  
Caution:  
The voltage between an input (X521.3 or X521.4) and the ground point must not exceed 35 V.  
When the load resistor is switched in (S5.1 closed), the voltage between the input terminals must not exceed 15 V.


<2> For p4056 = 2, 3, 5 the units are mA.  
For p4056 = 0, 4 the units are V.

<3> p4056  
= 0: 0 V ... +10 V  
= 2: 0 mA ... +20 mA  
= 3: 4 mA ... +20 mA with monitoring  
= 4: -10 V ... +10 V  
= 5: -20 mA ... +20 mA


Fig. 3-214 9568 – Analog input 1 (AI 1)

1	2	3	4	5	6	7	8
DO: TM31					fp_9568_51_eng.vsd	Function diagram	
Terminal Module 31 (TM31) - Analog input 1 (AI 1)					29.12.10 V04.08.00	SINAMICS	
							- 9568 -

Fig. 3-215 9572 – Analog outputs (AO 0 ... AO 1)

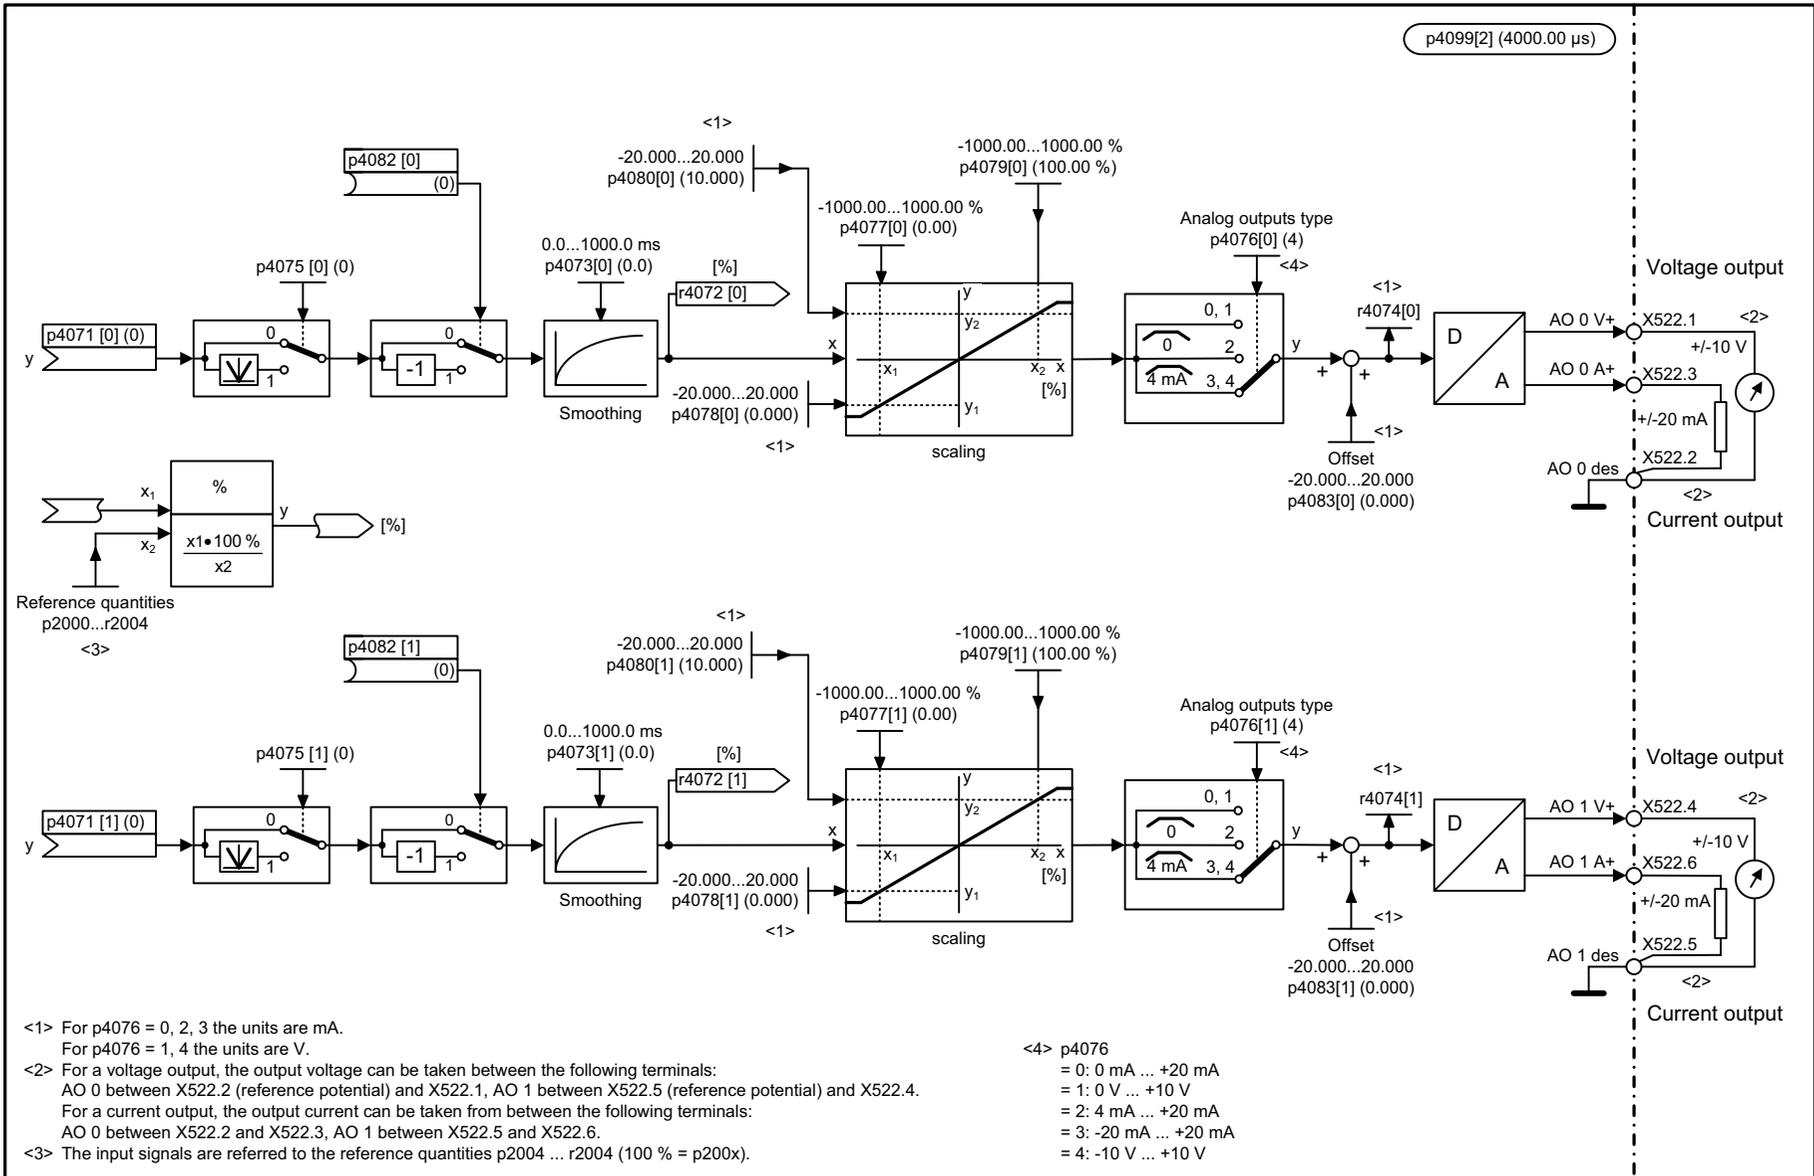

1	2	3	4	5	6	7	8
DO: TM31					fp_9572_51_eng.vsd	Function diagram	
Terminal Module 31 (TM31) - Analog outputs (AO 0 ... AO 1)					17.03.09 V04.08.00	SINAMICS	
							- 9572 -

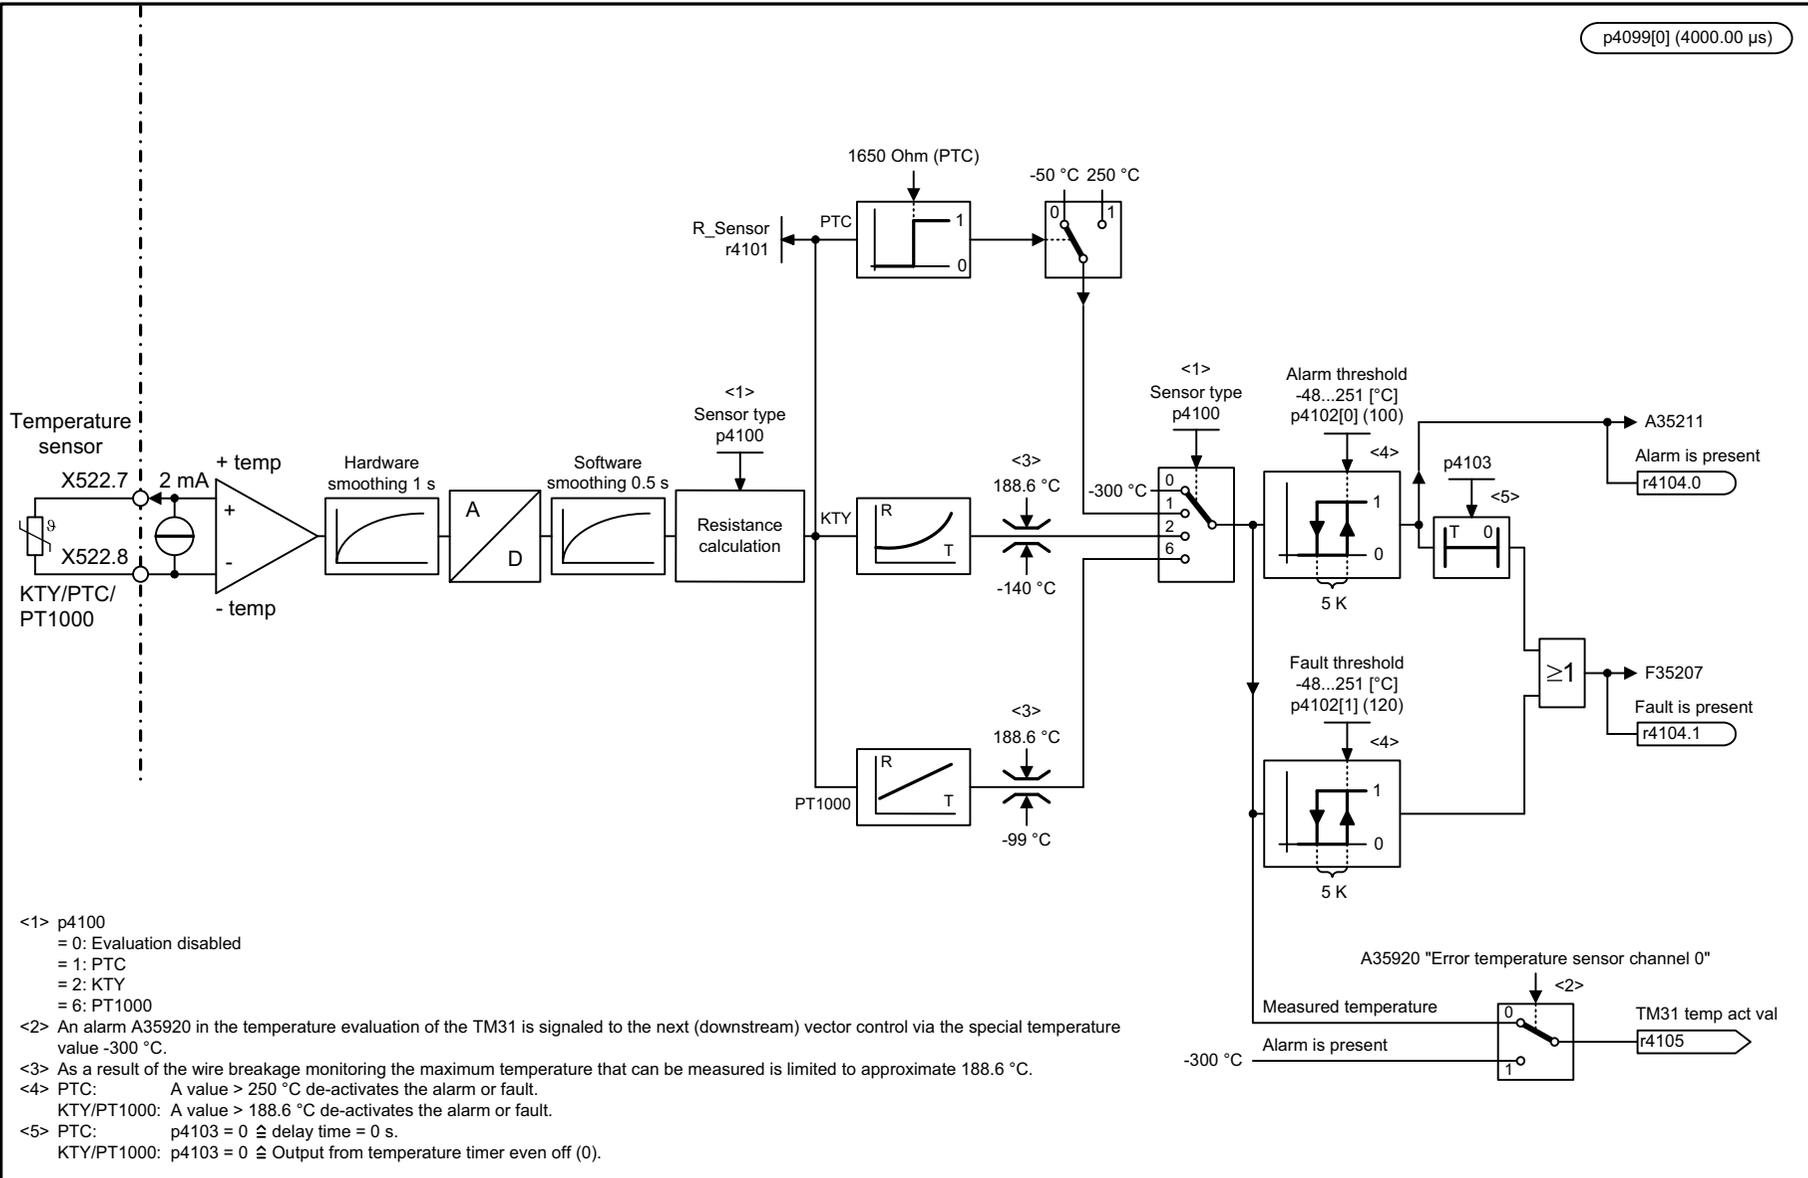

- <1> p4100  
= 0: Evaluation disabled  
= 1: PTC  
= 2: KTY  
= 6: PT1000
- <2> An alarm A35920 in the temperature evaluation of the TM31 is signaled to the next (downstream) vector control via the special temperature value -300 °C.
- <3> As a result of the wire breakage monitoring the maximum temperature that can be measured is limited to approximate 188.6 °C.
- <4> PTC: A value > 250 °C de-activates the alarm or fault.  
KTY/PT1000: A value > 188.6 °C de-activates the alarm or fault.
- <5> PTC: p4103 = 0  $\hat{=}$  delay time = 0 s.  
KTY/PT1000: p4103 = 0  $\hat{=}$  Output from temperature timer even off (0).

1	2	3	4	5	6	7	8
DO: TM31					fp_9576_51_eng.vsd	Function diagram	
Terminal Module 31 (TM31) - Temperature evaluation					10.05.16 V04.08.00	SINAMICS	
							<b>- 9576 -</b>

Fig. 3-216 9576 – Temperature evaluation

## 3.26 Terminal Module 120 (TM120)

### Function diagrams

---

9605 – Temperature evaluation channels 0 and 1 (KTY/PTC/bimetal)	1344
9606 – Temperature evaluation channels 2 and 3 (KTY/PTC/bimetal)	1345

---


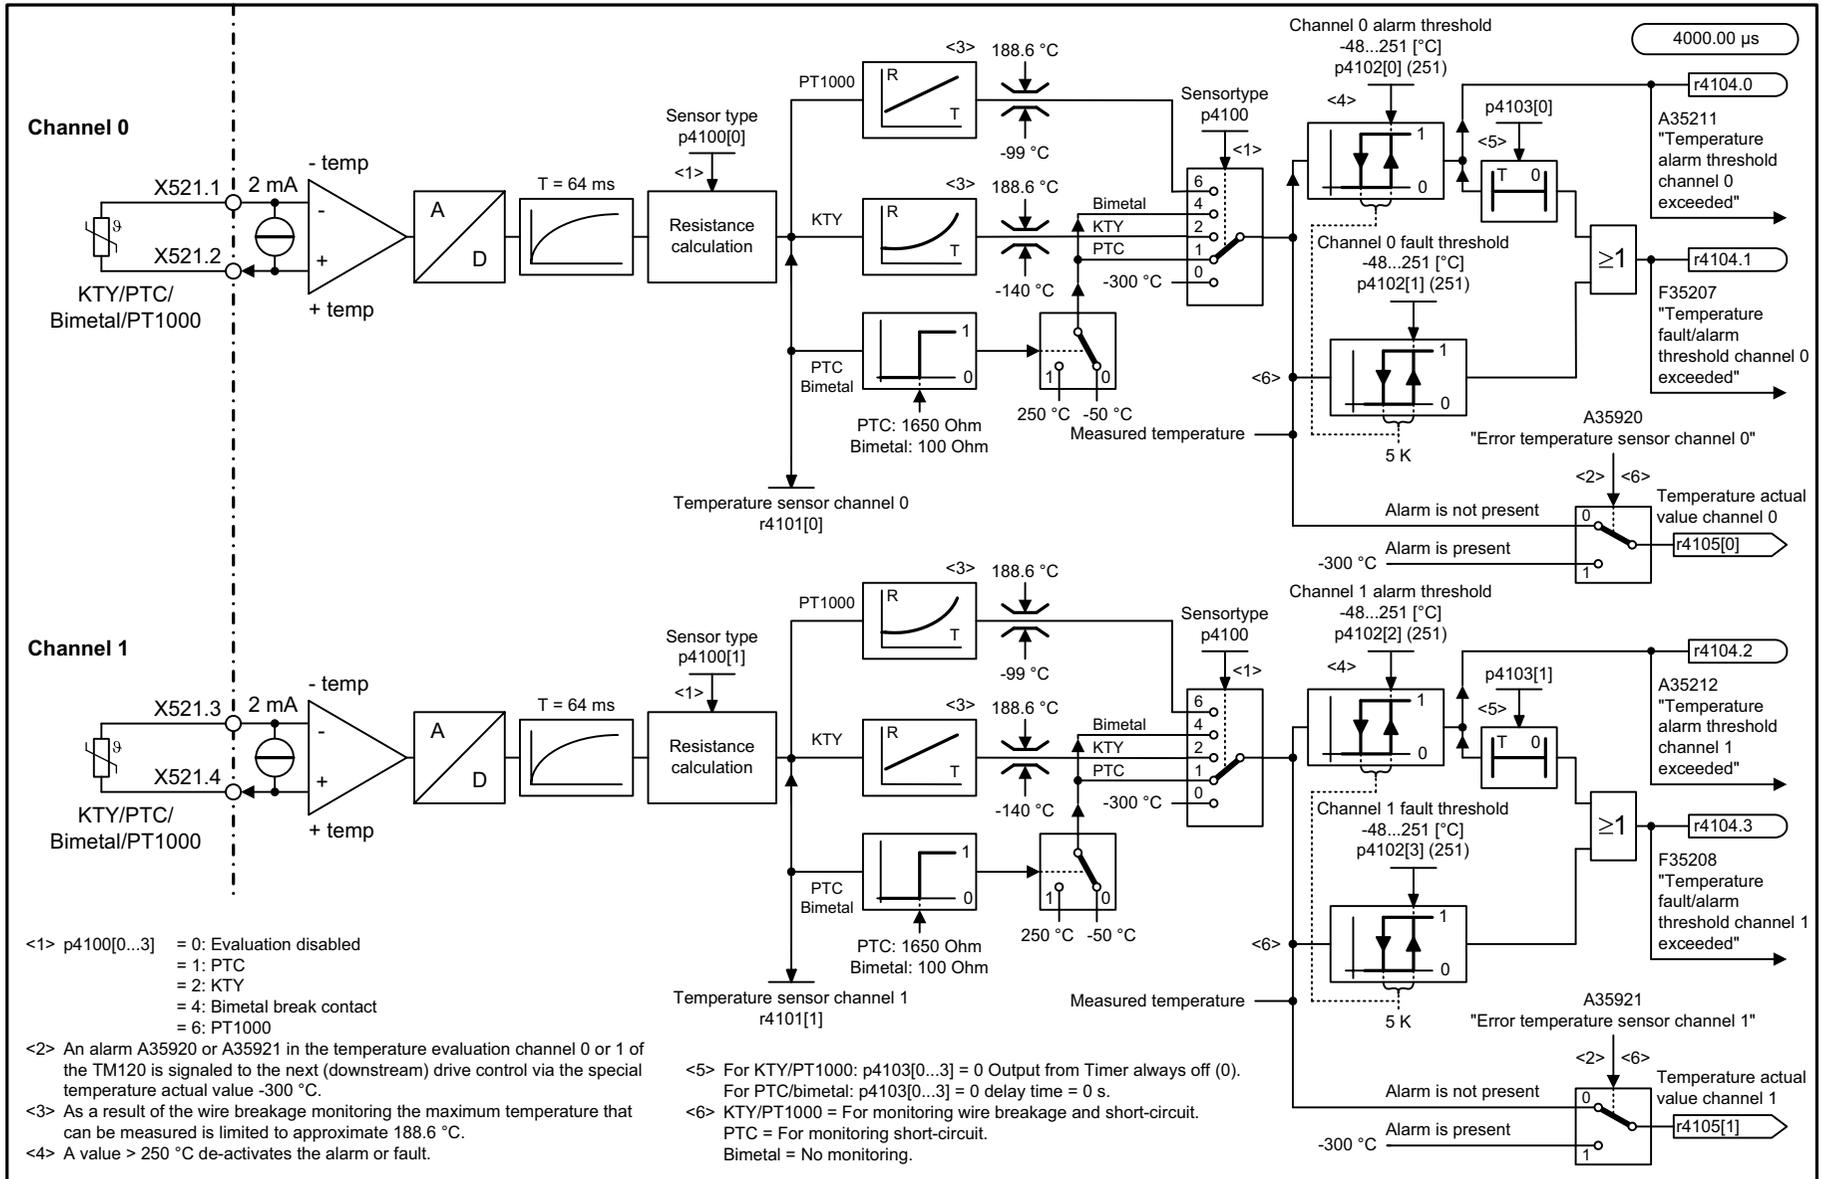


Fig. 3-217 9605 - Temperature evaluation channels 0 and 1 (KTY/PTC/bimetal)

1	2	3	4	5	6	7	8
DO: TM120					fp_9605_51_eng.vsd	Function diagram	
Terminal Module 120 (TM120) - Temperature evaluation channels 0 and 1					11.02.16 V04.08.00	SINAMICS	
							<b>- 9605 -</b>

Fig. 3-218 9606 – Temperature evaluation channels 2 and 3 (KTY/PTC/bimetal)

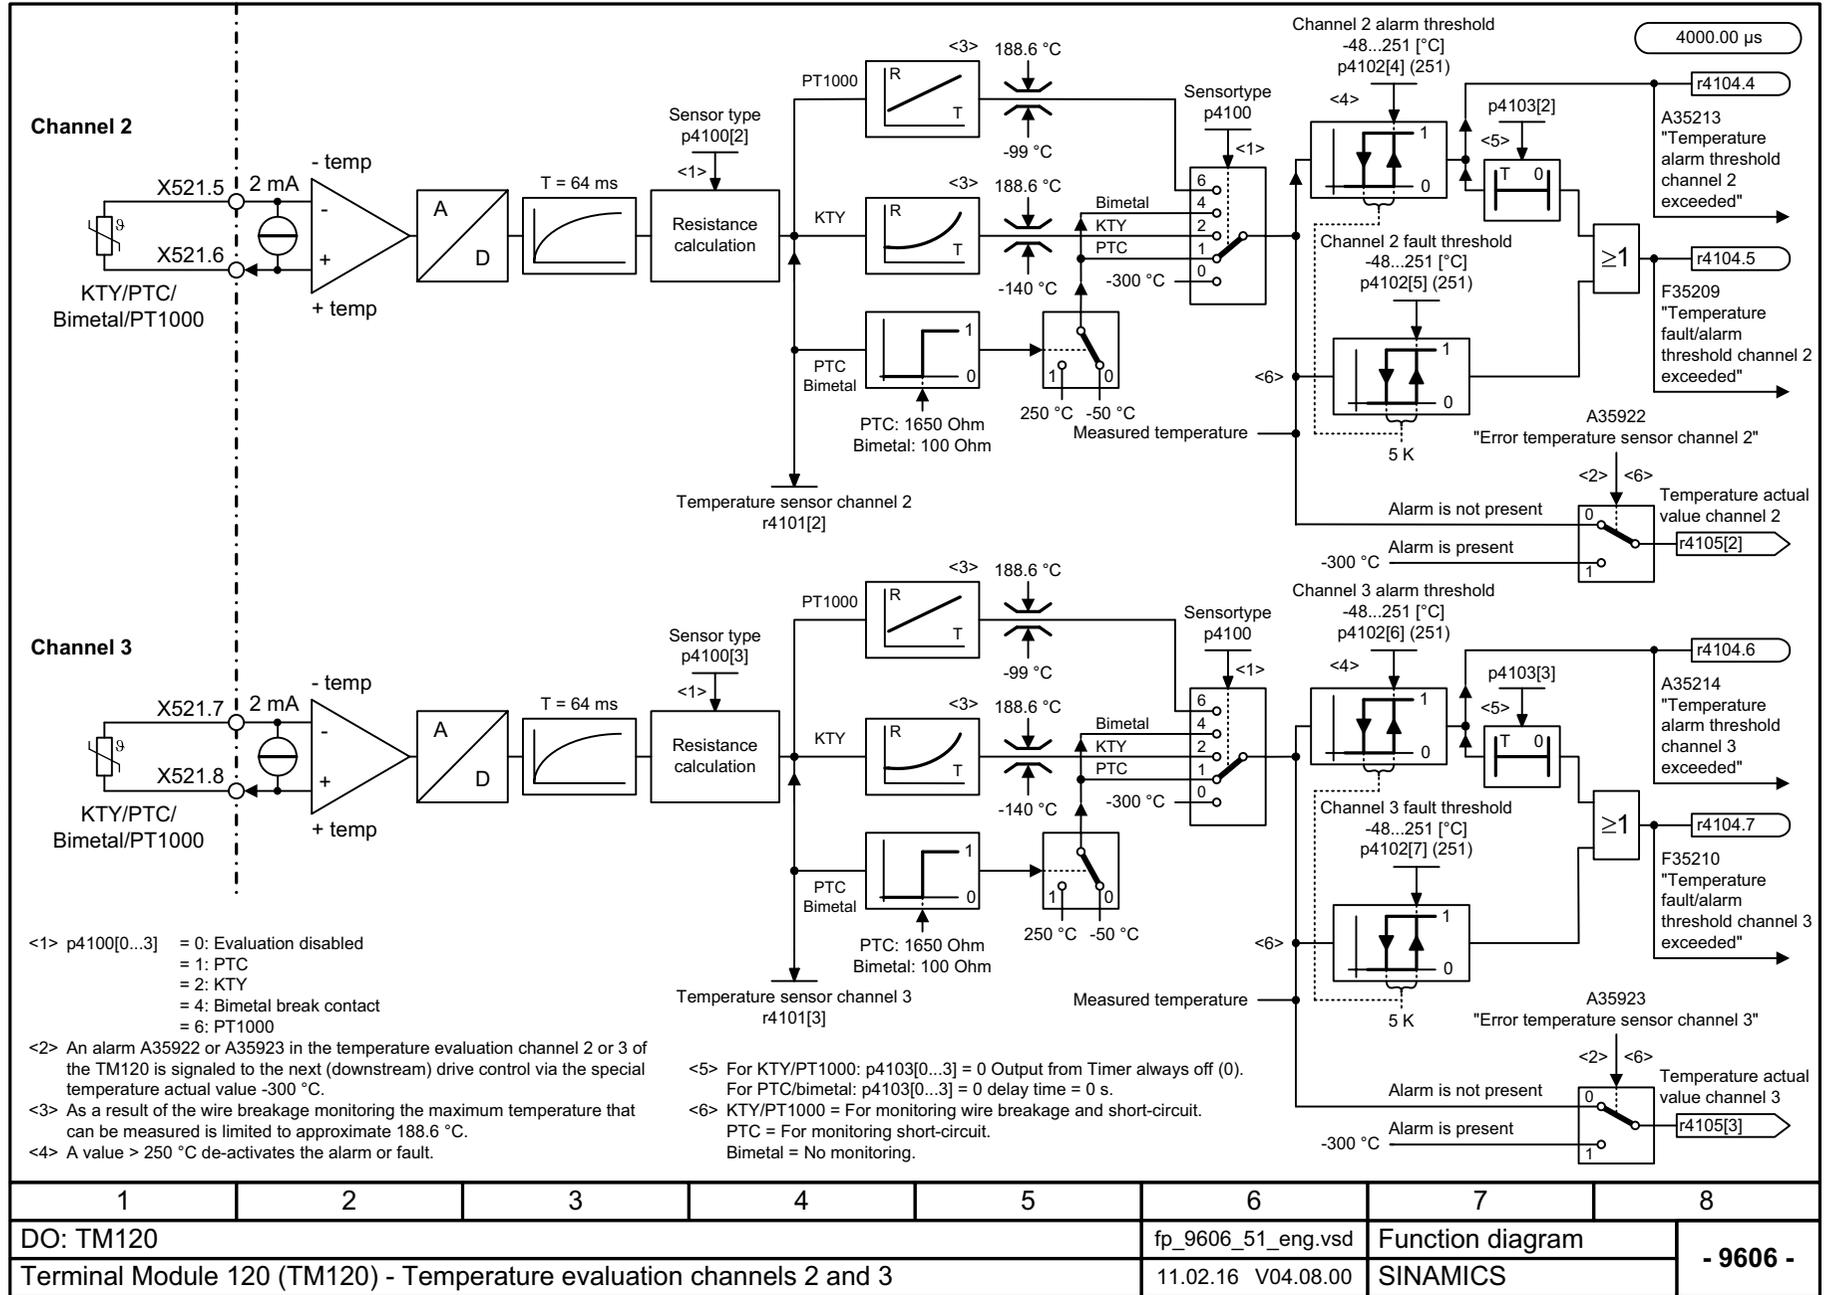

1	2	3	4	5	6	7	8
DO: TM120					fp_9606_51_eng.vsd	Function diagram	
Terminal Module 120 (TM120) - Temperature evaluation channels 2 and 3					11.02.16 V04.08.00	SINAMICS	
							- 9606 -

## 3.27 Terminal Module 150 (TM150)


### Function diagrams

---


9625 – Temperature evaluation structure (channels 0 ... 11)	1347
9626 – Temperature evaluation 1x2-, 3-, 4-wire (channels 0 ... 5)	1348
9627 – Temperature evaluation 2x2-wire (channels 0 ... 11)	1349

---

Fig. 3-219 9625 – Temperature evaluation structure (channels 0 ... 11)

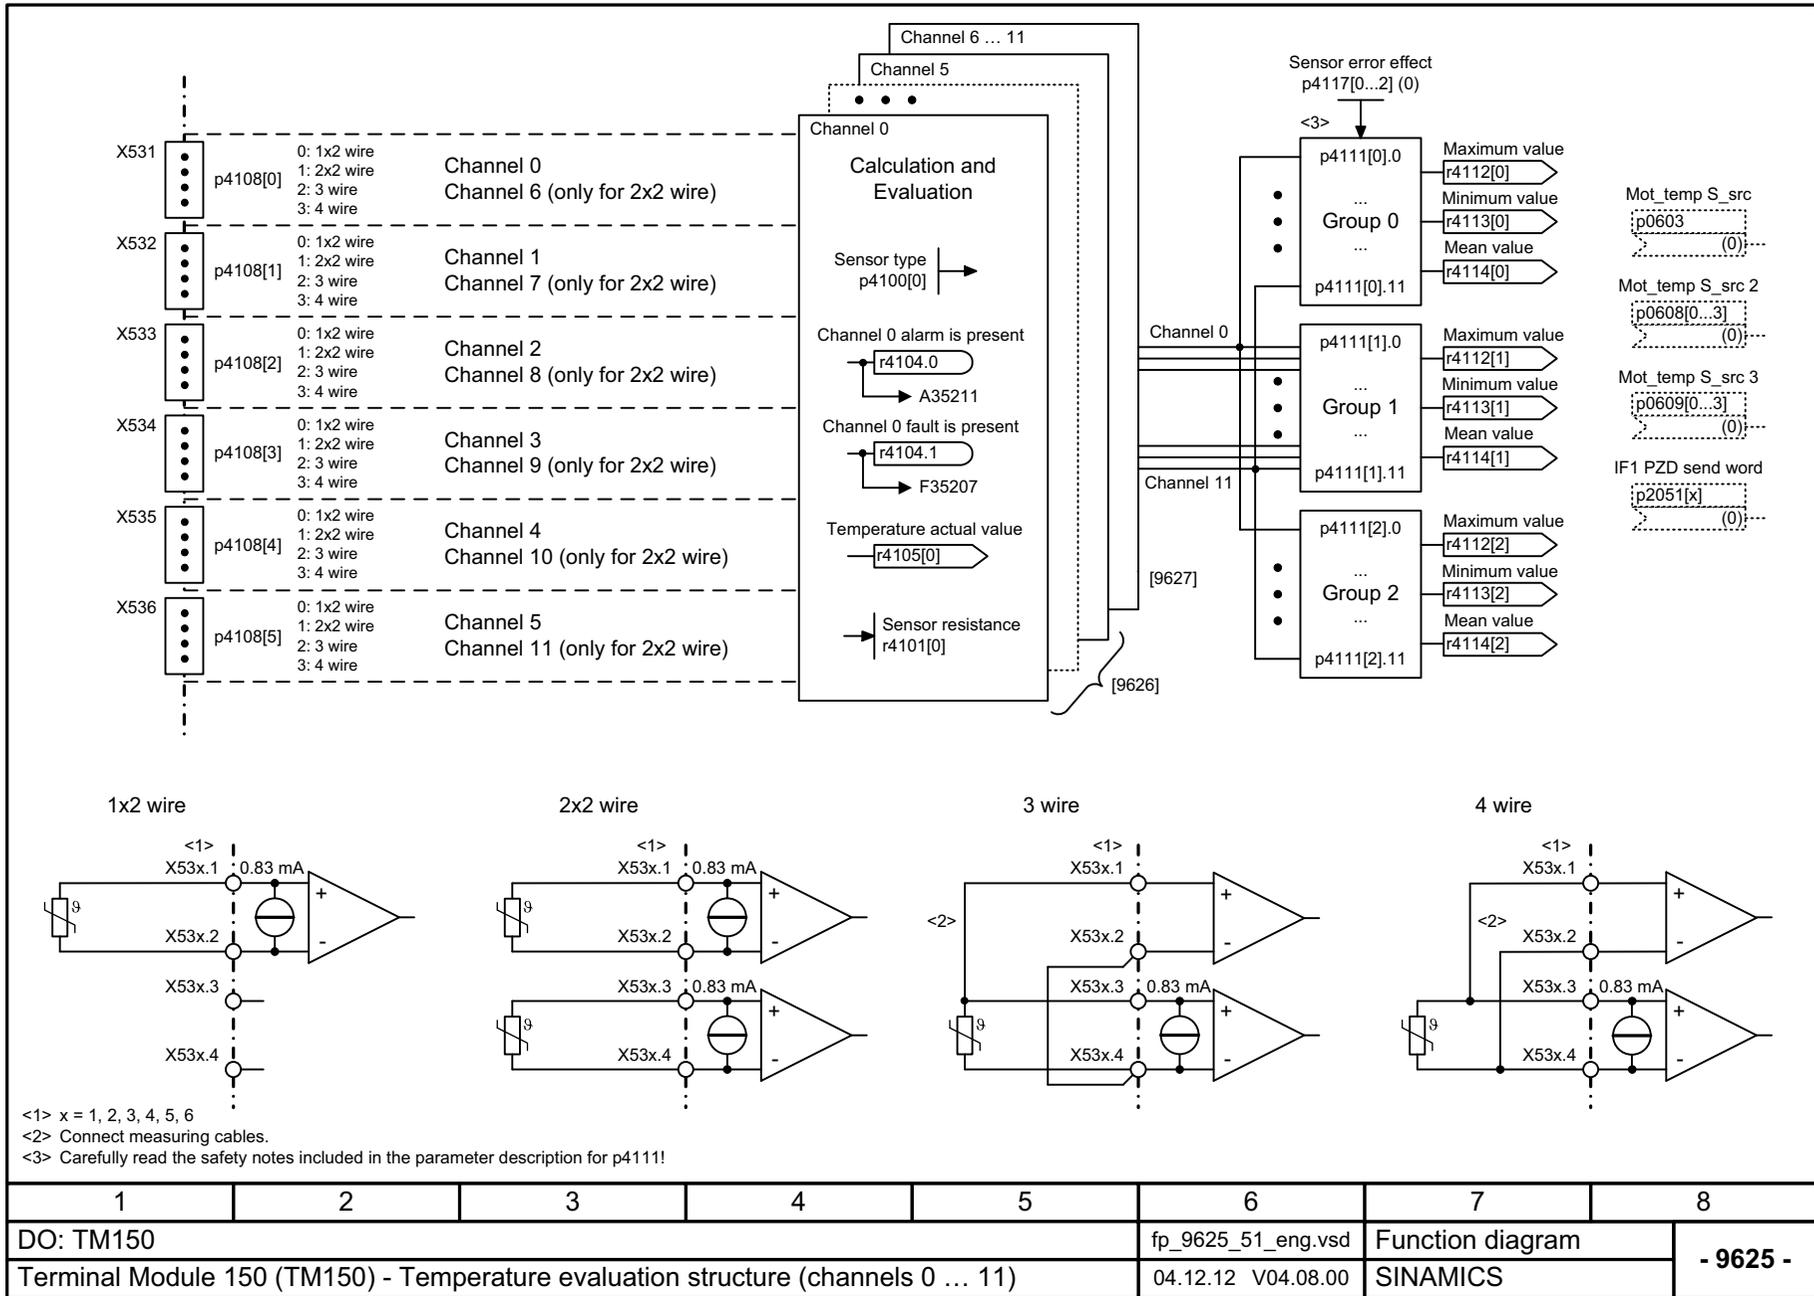

1	2	3	4	5	6	7	8
DO: TM150					fp_9625_51_eng.vsd	Function diagram	
Terminal Module 150 (TM150) - Temperature evaluation structure (channels 0 ... 11)					04.12.12 V04.08.00	SINAMICS	
							- 9625 -

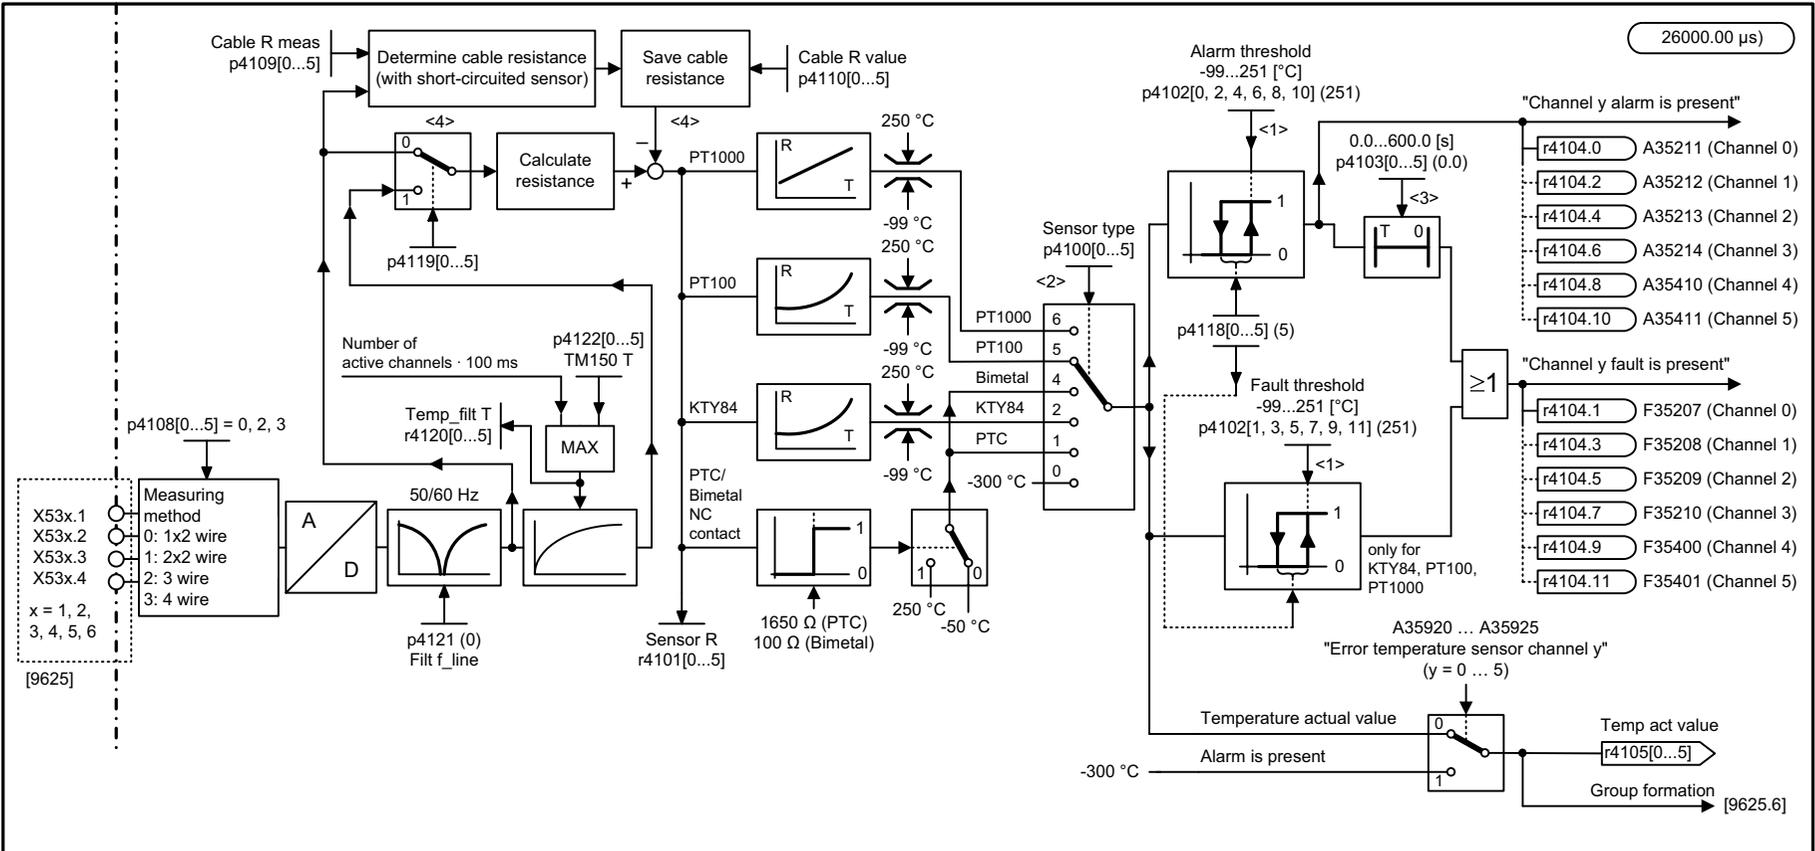


- <1> For p4102[0...23] = 251 °C the evaluation of the appropriate threshold is deactivated.
- <2> p4100[0...11]
  - = 0: Evaluation disabled
  - = 1: PTC thermistor (with monitoring for short-circuit)
  - = 2: KTY84 (with monitoring for wire break and short-circuit)
  - = 4: Bimetal NC contact (no monitoring)
  - = 5: PT100 (with monitoring for wire break and short-circuit)
  - = 6: PT1000 (with monitoring for wire break and short-circuit)
- <3> For p4103 = 0 s and sensor type "KTY84", "PT100", "PT1000" (p4100[0...11] = 2, 5, 6) the following applies:
  - The relevant fault can only be triggered via the fault threshold (the timer output is always logical 0).
 For p4103 = 0 s and sensor type "PTC thermistor", "Bimetal NC contact" (p4100[0...11] = 1, 4) the following applies:
  - The corresponding alarm and fault are output simultaneously (delay time = 0 s).
- <4> Only for 1x2/2x2 wire evaluation (p4108[0...5] = 0, 1).

1	2	3	4	5	6	7	8
DO: TM150					fp_9626_51_eng.vsd	Function diagram	
Terminal Module 150 (TM150) - Temperature evaluation 1x2, 3, 4 wire (channels 0 ... 5)					25.04.16 V04.08.00	SINAMICS	
							<b>- 9626 -</b>

Fig. 3-220 9626 – Temperature evaluation 1x2-, 3-, 4-wire (channels 0 ... 5)

Fig. 3-221 9627 – Temperature evaluation 2x2-wire (channels 0 ... 11)

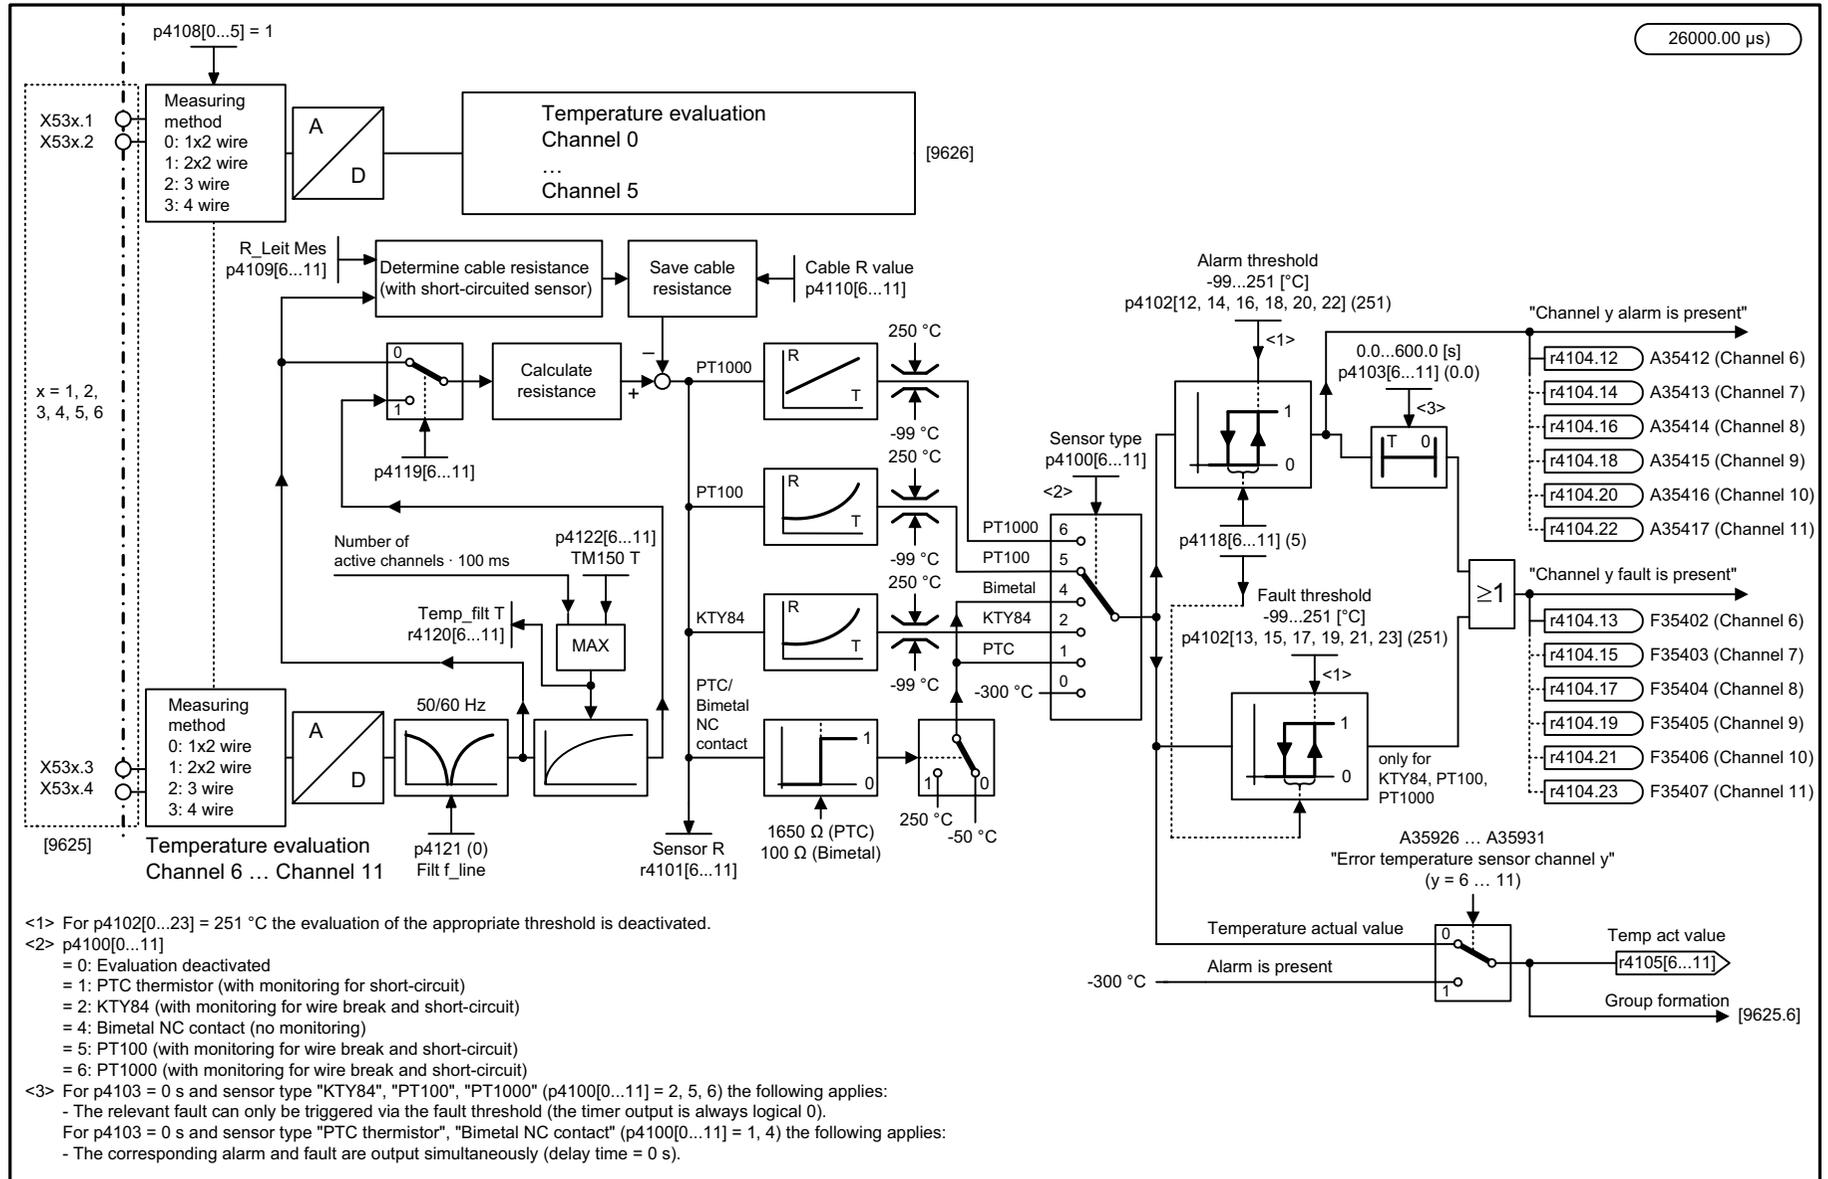

1	2	3	4	5	6	7	8
DO: TM150					fp_9627_51_eng.vsd	Function diagram	
Terminal Module 150 (TM150) - Temperature evaluation 2x2 wire (channels 0 ... 11)					25.04.16 V04.08.00	SINAMICS	
							- 9627 -

## 3.28 Voltage Sensing Module (VSM)


### Function diagrams

---

9880 – Analog inputs (AI 0 ... AI 3)	1351
9886 – Temperature evaluation	1352

---

Fig. 3-222 9880 – Analog inputs (AI 0 ... AI 3)

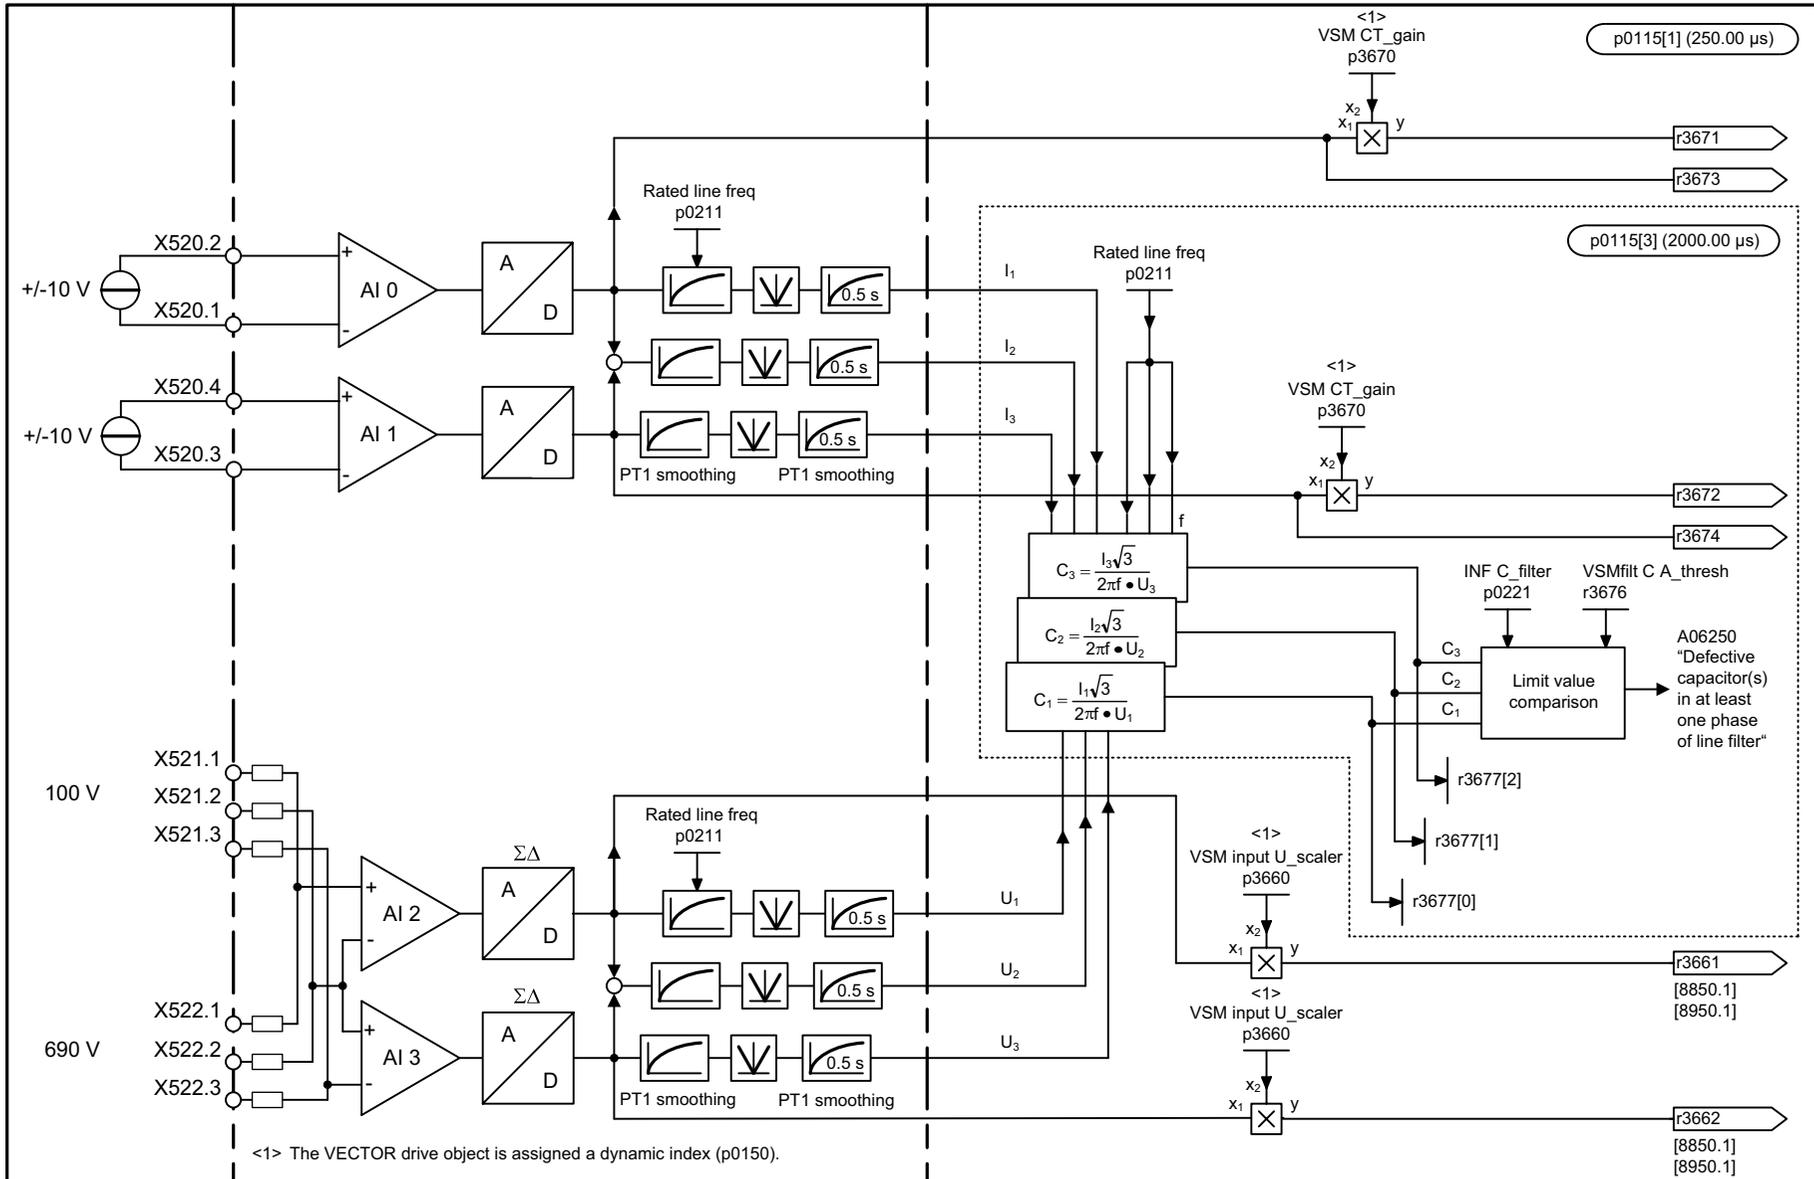

1	2	3	4	5	6	7	8
DO: A_INF, S_INF, VECTOR					fp_9880_54_eng.vsd	Function diagram	
Voltage Sensing Module (VSM) - Analog inputs (AI 0 ... AI 3)					18.12.13 V04.08.00	S120/S150/G130/G150	
							- 9880 -

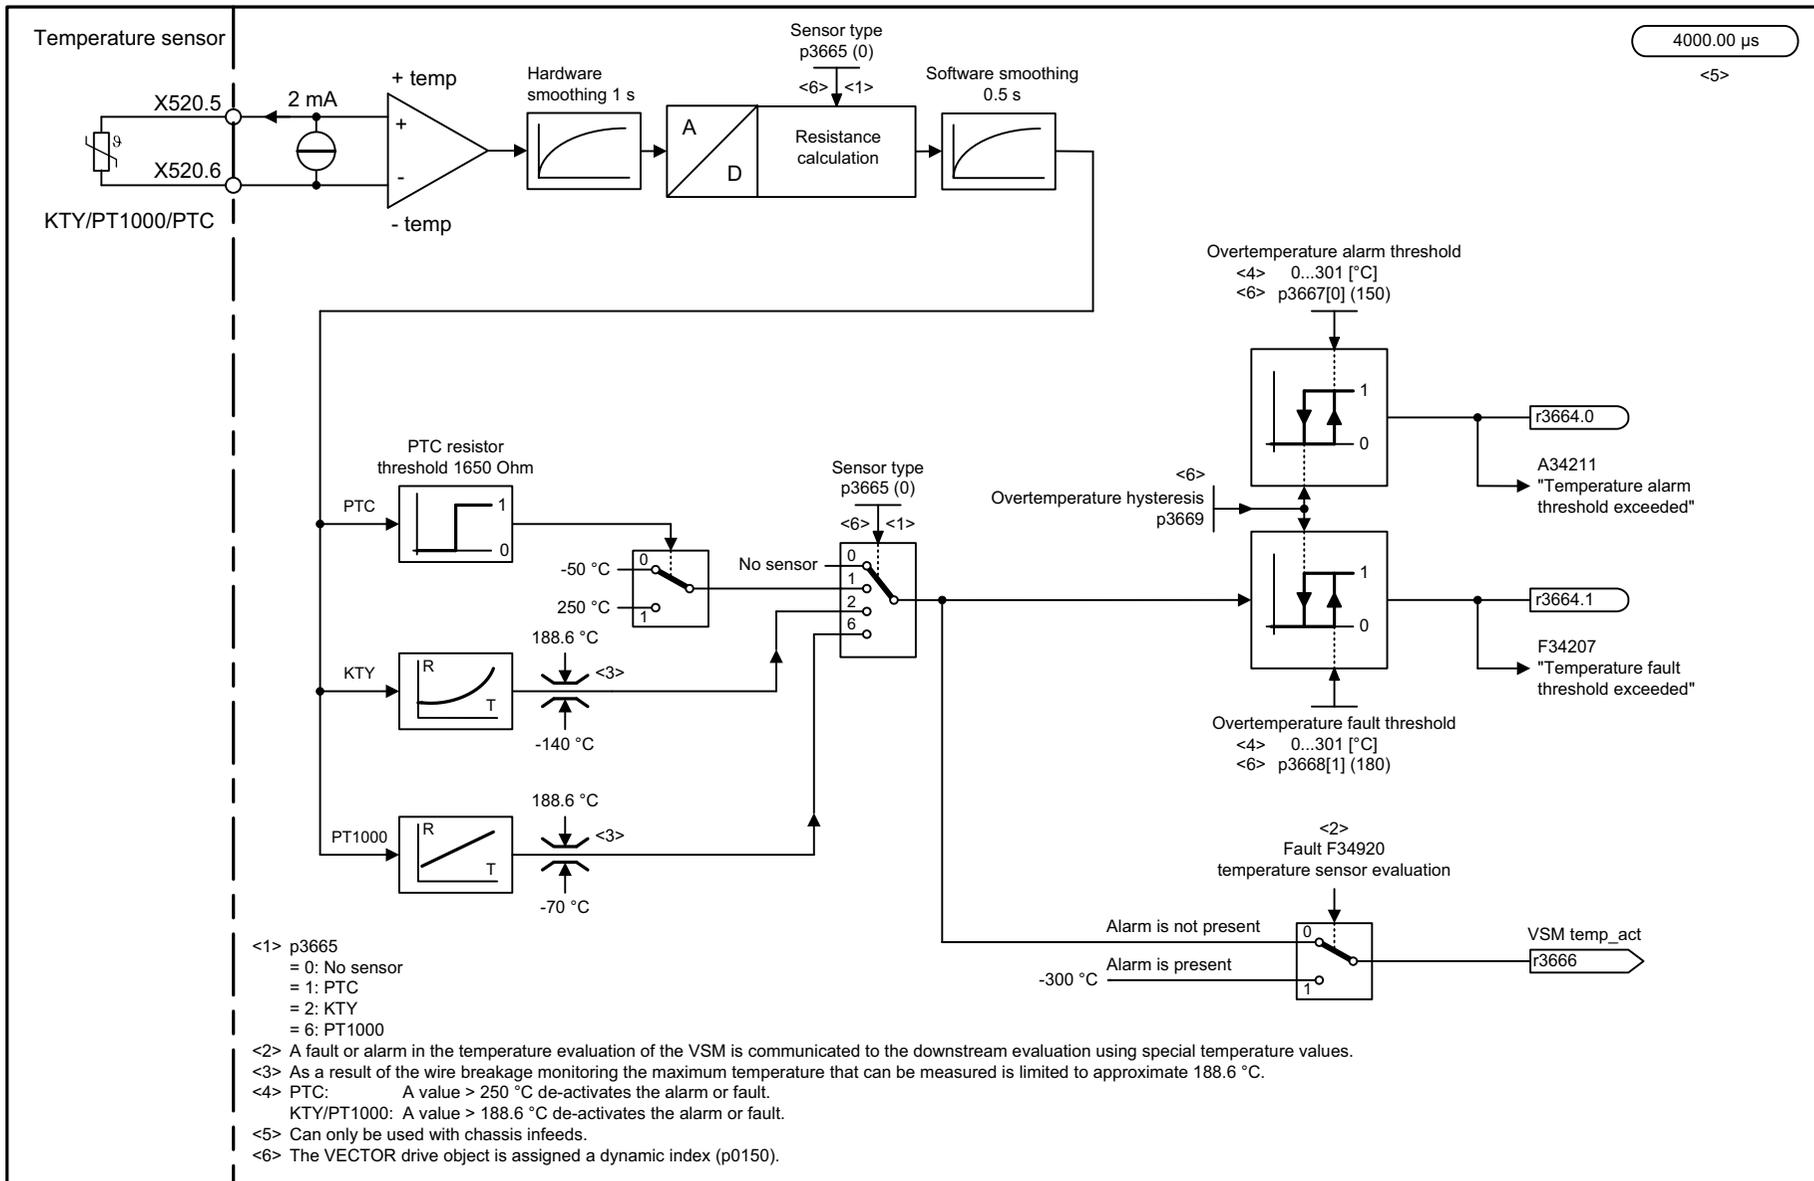


Fig. 3-223 9886 – Temperature evaluation

1	2	3	4	5	6	7	8
DO: A_INF, S_INF, VECTOR					fp_9886_54_eng.vsd	Function diagram	
Voltage Sensing Module (VSM) - Temperature evaluation					11.02.16 V04.08.00	S120/S150/G130/G150	
- 9886 -							

## 3.29 Basic Operator Panel 20 (BOP20)

### Function diagrams

---

9912 – Control word interconnection

1354

---

PROFIdrive sampling time

Interconnection STW BOP (r0019)		<1>
Signal	Meaning	Interconnection parameters
STW BOP.0	1 = ON 0 = OFF (OFF1)	p0840[0] = r0019.0
STW BOP.1	1 = No coast down 0 = Coast down (OFF2)	p0844[0] = r0019.1
STW BOP.2	1 = No quick stop 0 = Quick stop (OFF3)	p0848[0] = r0019.2
STW BOP.3	Reserved	-
STW BOP.4	Reserved	-
STW BOP.5	Reserved	-
STW BOP.6	Reserved	-
STW BOP.7	 = Acknowledge fault	p2102[0] = r0019.7
STW BOP.8	Reserved	-
STW BOP.9	Reserved	-
STW BOP.10	Reserved	-
STW BOP.11	Reserved	-
STW BOP.12	Reserved	-
STW BOP.13	1 = Motorized potentiometer, raise	p1035[0] = r0019.13
STW BOP.14	1 = Motorized potentiometer, lower	p1036[0] = r0019.14
STW BOP.15	Reserved	-

<1> The BICO interconnection represents an example that can be changed by the user.

1	2	3	4	5	6	7	8
DO: CU_G, CU_S					fp_9912_54_eng.vsd	Function diagram	
Basic Operator Panel 20 (BOP20) - Control word interconnection					03.07.13 V04.08.00	S120/S150/G130/G150	
- 9912 -							

Fig. 3-224 9912 – Control word interconnection

# Faults and alarms

## Content

4.1	Overview of faults and alarms	1356
4.2	List of faults and alarms	1369

## 4.1 Overview of faults and alarms

### 4.1.1 General information on faults and alarms

#### Display of faults/alarms (messages)

In the case of a fault, the drive signals the corresponding fault(s) and/or alarm(s).

For example, the following methods for displaying faults and alarms are available:

- Display via the fault and alarm buffer with PROFIBUS/PROFINET.
- Display online using the commissioning software.

#### Differences between faults and alarms

The differences between faults and alarms are as follows:

Table 4-1 Differences between faults and alarms

Type	Description
Faults	<p>What happens when a fault occurs?</p> <ul style="list-style-type: none"> <li>• The appropriate fault reaction is triggered.</li> <li>• Status signal ZSW1.3 is set.</li> <li>• The fault is entered in the fault buffer.</li> </ul> <p>How are faults eliminated?</p> <ul style="list-style-type: none"> <li>• Remove the original cause of the fault.</li> <li>• Acknowledge the fault.</li> </ul>
Alarms	<p>What happens when an alarm occurs?</p> <ul style="list-style-type: none"> <li>• Status signal ZSW1.7 is set.</li> <li>• The alarm is entered in the alarm buffer.</li> </ul> <p>How are alarms eliminated?</p> <ul style="list-style-type: none"> <li>• Alarms acknowledge themselves. If the cause of the alarm is no longer present, it automatically reset itself.</li> </ul>

## Fault reactions

### Note

The following table lists all fault reactions and their meanings used for the entire SINAMICS drive family.

The following fault reactions are defined:

Table 4-2 Fault reactions

List	PROFIdrive	Reaction	Description
NONE	-	None	<p>No reaction when a fault occurs.</p> <p><b>Note</b></p> <p>When the "Basic positioner" function module is activated (r0108.4 = 1), the following applies:</p> <p>When a fault occurs with fault reaction "NONE", an active traversing task is interrupted and the system switches to tracking mode until the fault has been rectified and acknowledged.</p>
OFF1	ON/ OFF	Brake along the ramp-function generator down ramp followed by pulse inhibit	<p><b>Closed-loop speed control (p1300 = 20, 21)</b></p> <ul style="list-style-type: none"> <li>• n_set = 0 is input immediately to brake the drive along the ramp-function generator ramp down (p1121).</li> <li>• When zero speed is detected, the motor holding brake (if parameterized) is closed (p1215). The pulses are suppressed when the brake application time (p1217) expires.</li> </ul> <p>Zero speed is detected if the actual speed drops below the threshold (p1226) or if the monitoring time (p1227) started when the speed setpoint &lt;= speed threshold (p1226) has expired.</p> <p><b>Torque control (p1300 = 23)</b></p> <ul style="list-style-type: none"> <li>• The following applies for torque control: Reaction as for OFF2.</li> <li>• When the system switches to torque control with p1501, the following applies: No separate braking reaction.</li> </ul> <p>If the actual speed value drops below the speed threshold (p1226) or the timer stage (p1227) has expired, the motor holding brake (if one is being used) is closed. The pulses are suppressed when the brake application time (p1217) expires.</p>
OFF1_ DELAYED	-	As for OFF1, however delayed	<p>Faults with this fault reaction only become effective after the delay time in p3136 has expired.</p> <p>The remaining time up to OFF1 is displayed in r3137.</p>
OFF2	COAST STOP	Internal/external pulse inhibit	<p><b>Closed-loop speed and torque control</b></p> <ul style="list-style-type: none"> <li>• Instantaneous pulse suppression, the drive "coasts" to a standstill.</li> <li>• The motor holding brake (if one is being used) is closed immediately.</li> <li>• Switching on inhibited is activated.</li> </ul>

## 4 Faults and alarms

### 4.1 Overview of faults and alarms

Table 4-2 Fault reactions, continued

List	PROFIdrive	Reaction	Description
OFF3	QUICK STOP	Braking along the OFF3 down ramp followed by pulse inhibit	<p><b>Closed-loop speed control (p1300 = 20, 21)</b></p> <ul style="list-style-type: none"> <li>n_set = 0 is input immediately to brake the drive along the OFF3 ramp down (p1135).</li> <li>When zero speed is detected, the motor holding brake (if parameterized) is closed. The pulses are suppressed when the closing time of the holding brake (p1217) expires.</li> </ul> <p>Zero speed is detected if the actual speed drops below the threshold (p1226) or if the monitoring time (p1227) started when the speed setpoint &lt;= speed threshold (p1226) has expired.</p> <ul style="list-style-type: none"> <li>Switching on inhibited is activated.</li> </ul> <p><b>Torque control (p1300 = 23)</b></p> <ul style="list-style-type: none"> <li>Changeover to speed-controlled operation and other reactions as described for speed-controlled operation.</li> </ul>
STOP2	-	n_set = 0	<ul style="list-style-type: none"> <li>n_set = 0 is input immediately to brake the drive along the OFF3 ramp down (p1135).</li> <li>The drive remains in closed-loop speed control.</li> </ul>
IASC/ DCBRK	-	-	<ul style="list-style-type: none"> <li>For synchronous motors, the following applies: If a fault occurs with this fault reaction, an internal armature short-circuit is triggered. The conditions for p1231 = 4 must be observed.</li> <li>For induction motors, the following applies: If a fault occurs with this fault reaction, DC braking is triggered. DC braking must have been commissioned (p1232, p1233, p1234).</li> </ul>
ENCODER	-	Internal/external pulse inhibit (p0491)	<p>The fault reaction ENCODER is applied as a function of the setting in p0491.</p> <p>Factory setting: p0491 = 0 --&gt; Encoder fault causes OFF2</p> <p><b>Notice</b></p> <p>When changing p0491, it is imperative that the information in the description of this parameter is carefully observed.</p>

## Acknowledging faults

The list of faults and alarms specifies how to acknowledge each fault after the cause has been removed.

Table 4-3 Acknowledging faults

Acknowledgment	Description								
POWER ON	<p>The fault is acknowledged by a POWER ON (switch drive unit off and on again).</p> <p><b>Note</b> If this action has not eliminated the fault cause, the fault is displayed again immediately after power up.</p>								
IMMEDIATELY	<p>Faults can be acknowledged on one drive object (Points 1 to 3) or on all drive objects (Point 4) as follows:</p> <p>1 Acknowledge by setting parameter: p3981 = 0 --&gt; 1</p> <p>2 Acknowledge via binector inputs:</p> <table> <tr> <td>p2103</td> <td>BI: 1. Acknowledge faults</td> </tr> <tr> <td>p2104</td> <td>BI: 2. Acknowledge faults</td> </tr> <tr> <td>p2105</td> <td>BI: 3. Acknowledge faults</td> </tr> </table> <p>3 Acknowledging via a PROFIdrive control signal: STW1.7 = 0 --&gt; 1 (edge)</p> <p>4 Acknowledge all faults</p> <table> <tr> <td>p2102</td> <td>BI: Acknowledge all faults</td> </tr> </table> <p>All of the faults on all of the drive objects of the drive system can be acknowledged using this binector input.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• These faults can also be acknowledged by a POWER ON.</li> <li>• If the cause of the fault has not been eliminated, the fault will continue to be displayed after acknowledgment.</li> <li>• Safety Integrated faults The "Safe standstill" (SH) function must be deselected before these faults are acknowledged.</li> </ul>	p2103	BI: 1. Acknowledge faults	p2104	BI: 2. Acknowledge faults	p2105	BI: 3. Acknowledge faults	p2102	BI: Acknowledge all faults
p2103	BI: 1. Acknowledge faults								
p2104	BI: 2. Acknowledge faults								
p2105	BI: 3. Acknowledge faults								
p2102	BI: Acknowledge all faults								
PULSE INHIBIT	<p>The fault can only be acknowledged when the pulses are inhibited (r0899.11 = 0).</p> <p>The same options are available for acknowledging as described under acknowledge IMMEDIATELY.</p>								

## Fault buffer - saved when switching off

The contents of the fault buffer are saved to the non-volatile memory when the Control Unit is switched off, i.e. the fault buffer history is still available when the unit is switched on again.

The fault buffer of a drive object comprises the following parameters:

- r0945[0...63], r0947[0...63], r0948[0...63], r0949[0...63]
- r2109[0...63], r2130[0...63], r2133[0...63], r2136[0...63]

The fault buffer contents can be deleted manually as follows:

- Delete fault buffer for all drive objects:  
p2147 = 1 --> p2147 = 0 is automatically set after execution.
- Delete fault buffer for a specific drive object:  
p0952 = 0 --> The parameter belongs to the specified drive object.

The fault buffer contents are automatically deleted when the following occurs:

- Restore factory setting (p0009 = 30 and p0976 = 1).
- Download with modified structure (e.g. number of drive objects changed).
- Power-up after other parameter values have been loaded (e.g. p0976 = 10).
- Upgrade firmware to later version.

### 4.1.2 Explanation of the list of faults and alarms

The data in the following example has been chosen at random. The information listed below is the maximum amount of information that a description can contain. Some of the information is optional.

The "List of faults and alarms" (Page 1369) has the following layout:

----- **Start of example** -----

<b>Axxxxx (F, N)</b>	<b>Fault location (optional): Name</b>		
<b>Message value:</b>	Component number: %1, fault cause: %2		
<b>Message class:</b>	Text of the message class (number according to PROFIdrive)		
<b>Drive object:</b>	List of objects.		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledgement:</b>	NONE		
<b>Cause:</b>	Description of possible causes. Fault value (r0949, interpret format): or alarm value (r2124, interpret format): (optional) Information about fault or alarm values (optional).		
<b>Remedy:</b>	Description of possible remedies.		
<b>Response to F:</b>	A_INFEED: OFF2 (OFF1, NONE) SERVO: NONE (OFF1, OFF2, OFF3) VECTOR: NONE (OFF1, OFF2, OFF3)		
<b>Acknowl. upon F:</b>	IMMEDIATELY (POWER ON)		
<b>Response upon N:</b>	NONE		
<b>Acknowl. upon N:</b>	NONE		

----- **End of example** -----

<b>Axxxxx</b>	<b>Alarm xxxxx</b>
<b>Axxxxx (F, N)</b>	<b>Alarm xxxxx (message type can be changed to F or N)</b>
<b>Fxxxxx</b>	<b>Fault xxxxx</b>
<b>Fxxxxx (A, N)</b>	<b>Fault xxxxx (report type can be changed to A or N)</b>
<b>Nxxxxx</b>	<b>No message</b>
<b>Nxxxxx (A)</b>	<b>No message (message type can be changed to A)</b>
<b>Cxxxxx</b>	<b>Safety message (separate message buffer)</b>

A message comprises a letter followed by the relevant number.

The meaning of the letters is as follows:

- A means "Alarm"
- F means "Fault"
- N means "No message" or "Internal message"
- C means "Safety message"

The optional brackets indicate whether the type specified for this message can be changed and which message types can be adjusted via parameters (p2118, p2119).

Information about reaction and acknowledgment is specified independently for a message with adjustable message type (e.g. reaction to F, acknowledgment to F).

---

#### Note

You can change the default properties of a fault or alarm by setting parameters.

The "List of faults and alarms" (Page 1369) supplies information referred to the properties of a message set as default. If the properties of a specific message are changed, the corresponding information may have to be modified in this list.

---

#### Fault location (optional): Name

The fault location (optional), the name of the fault or alarm and the message number are all used to identify the message (e.g. with the commissioning software).

#### Message value:

The information provided under the message value informs you about the composition of the fault/alarm value.

#### Example:

Message value: Component number: %1, fault cause: %2

This message value contains information about the component number and cause of the fault. The entries %1 and %2 are placeholders, which are filled appropriately in online operation (e.g. with the commissioning software).

#### Message class:

For each message, specifies the associated message class with the following structure:

Text of the message class (number according to PROFIdrive)

The message classes are transferred at different interfaces to higher-level control systems and their associated display and operating units.

The message classes that are available are shown in Table "Message classes and coding of various diagnostic interfaces" (Page 1363). In addition to the text of the message class and their number according to PROFIdrive – as well as a brief help text regarding the cause and remedy – they also include information about the various diagnostic interfaces:

- PN (hex)
  - Specifies the "Channel error type" of the PROFINET channel diagnostics.
  - When activating the channel diagnostics, using the GSDML file, the texts listed in the table can be displayed.
- DS1 (dec)
  - Specifies the bit number in data set DS1 of the diagnostic alarm for SIMATIC S7.
  - When the diagnostic alarms are activated, the texts listed in the table can be displayed.
- DP (dec)
  - Specifies the "Error type" of the channel-related diagnostics for PROFIBUS.
  - When the channel diagnostics are activated, the texts listed in the standard and the GSD file can be displayed.

- ET 200 (dec)

Specifies the "Error type" of the channel-related diagnostics for the SIMATIC ET 200pro FC-2 device.

When the channel diagnostics are activated, the texts listed in the standard and the GSD file of the ET 200pro can be displayed.

- NAMUR (r3113.x)

Specifies the bit number in parameter r3113.

For the interfaces DP, ET 200, NAMUR, in some instances, the message classes are combined.

Table 4-4 Message classes and coding of various diagnostic interfaces

Text of the message class (number according to PROFIdrive) Cause and remedy.	Diagnostics interface				
	PN (hex)	DS1 (dec)	DP (dec)	ET 200 (dec)	NAMUR (r3113.x)
<b>Hardware/software errors (1)</b> A hardware or software malfunction was detected. Carry out a POWER ON for the relevant component. If it occurs again, contact the hotline.	9000	0	16	9	0
<b>Line fault (2)</b> A line supply fault has occurred (phase failure, voltage level ...). Check the line supply and fuses. Check the supply voltage. Check the wiring.	9001	1	17	24	1
<b>Supply voltage fault (3)</b> An electronics supply voltage fault (48 V, 24 V, 5 V ...) was detected. Check the wiring. Check the voltage level.	9002	2	2 <sup>1</sup> 3 <sup>2</sup>	2 <sup>1</sup> 3 <sup>2</sup>	15
<b>DC-link overvoltage (4)</b> The DC-link voltage has assumed an inadmissibly high value. Check the dimensioning of the system (line supply, reactor, voltages). Check the infeed settings.	9003	3	18	24	2
<b>Power electronics fault (5)</b> An impermissible operating state of the power electronics was detected (overcurrent, overtemperature, IGBT failure ...). Check compliance with the permissible load cycles. Check the ambient temperatures (fan).	9004	4	19	24	3
<b>Overtemperature of the electronic component (6)</b> The temperature in the component has exceeded the highest permissible limit. Check the ambient temperature / control cabinet ventilation.	9005	5	20	5	4
<b>Ground fault / inter-phase short-circuit detected (7)</b> A ground fault / inter-phase short-circuit was detected in the power cables or in the motor windings. Check the power cables (connection). Check the motor.	9006	6	21	20	5
<b>Motor overload (8)</b> The motor was operated outside the permissible limits (temperature, current, torque ...). Check the load cycles and set limits. Check the ambient temperature / motor cooling.	9007	7	22	24	6

## 4 Faults and alarms

### 4.1 Overview of faults and alarms

Table 4-4 Message classes and coding of various diagnostic interfaces, continued

Text of the message class (number according to PROFIdrive) Cause and remedy.	Diagnostics interface				
	PN (hex)	DS1 (dec)	DP (dec)	ET 200 (dec)	NAMUR (r3113.x)
<b>Communication to the higher-level controller faulted (9)</b> The communication to the higher-level controller (internal coupling, PROFIBUS, PROFINET ...) is faulted or interrupted. Check the state of the higher-level controller. Check the communication connection/-wiring. Check the bus configuration/cycles.	9008	8	23	19	7
<b>Safety monitoring channel has detected an error (10)</b> A safe operation monitoring function has detected an error.	9009	9	24	25	8
<b>Actual position/speed value incorrect or not available (11)</b> An illegal signal state was detected while evaluating the encoder signals (track signals, zero marks, absolute values ...). Check the encoder / state of the encoder signals. Observe the maximum permissible frequencies.	900A	10	25	29	9
<b>Internal (DRIVE-CLiQ) communication faulted (12)</b> The internal communication between the SINAMICS components is faulted or interrupted. Check the DRIVE-CLiQ wiring. Ensure an EMC-compliant installation. Observe the maximum permissible quantity structures / cycles.	900B	11	26	31	10
<b>Infeed fault (13)</b> The infeed is faulty or has failed. Check the infeed and its environment (line supply, filters, reactors, fuses ...). Check the infeed control.	900C	12	27	24	11
<b>Braking controller / Braking Module faulted (14)</b> The internal or external Braking Module is faulted or overloaded (temperature). Check the connection/state of the Braking Module. Comply with the permissible number of braking operations and their duration.	900D	13	28	24	15
<b>Line filter fault (15)</b> The line filter monitoring has detected an excessively high temperature or another impermissible state. Check the temperature / temperature monitoring. Check the configuration to ensure that it is permissible (filter type, infeed, thresholds).	900E	14	17	24	15
<b>External measured value / signal state outside of the permissible range (16)</b> A measured value / signal state read in via the input area (digital/analog/temperature) has assumed an impermissible value/state. Identify and check the relevant signal. Check the set thresholds.	900F	15	29	26	15
<b>Application / technological function faulty (17)</b> The application / technological function has exceeded a (set) limit (position, velocity, torque ...). Identify and check the relevant limit. Check the setpoint specification of the higher-level controller.	9010	16	30	9	15

Table 4-4 Message classes and coding of various diagnostic interfaces, continued

Text of the message class (number according to PROFIdrive) Cause and remedy.	Diagnostics interface				
	PN (hex)	DS1 (dec)	DP (dec)	ET 200 (dec)	NAMUR (r3113.x)
<b>Error in the parameterization/configuration/commissioning procedure (18)</b> An error was identified in the parameterization or in a commissioning procedure, or the parameterization does not match the actual device configuration. Determine the precise cause of the fault using the commissioning tool. Adapt the parameterization or device configuration.	9011	17	31	16	15
<b>General drive fault (19)</b> Group fault. Determine the precise cause of the fault using the commissioning tool.	9012	18	9	9	15
<b>Auxiliary unit fault (20)</b> The monitoring of an auxiliary unit (incoming transformer, cooling unit ...) has detected an illegal state. Determine the exact cause of the fault and check the relevant device.	9013	19	29	26	15

1. Undervoltage condition of the electronics power supply
2. Overvoltage condition of the electronics power supply

### Drive object:

Each message (fault/alarm) specifies the drive object in which it can be found.

A message can belong to either one, several, or all drive objects.

### Component

Type of hardware component that has triggered the fault or alarm.

With "Component: None" it is not possible to assign the message to a hardware component.

### Propagation

In the case of faults that are, for example, triggered by the Control Unit or a Terminal Module, central functions of the drive are also often affected. Using propagation, faults that are triggered by one drive object are therefore passed on to other drive objects.

There are the following types of propagation:

- BICO  
The fault is passed on to all active drive objects with closed-loop control functions (infeed, drive) to which there is a BICO interconnection.
- DRIVE  
The fault is passed on to all active drive objects with closed-loop control functions.
- GLOBAL  
The fault is passed on to all active drive objects.

- LOCAL

The response of this type of propagation is dependent on parameter p3116.

With binector input p3116 = 0 (factory setting) the following applies:

The fault is passed on to the first active drive object with closed-loop control functions.

With binector input p3116 = 1-signal, the following applies:

The fault is not passed on.

#### **Reaction: Default fault reaction (adjustable fault reaction)**

Specifies the default reaction in the event of a fault.

The optional parentheses indicate whether the default fault reactions can be changed and which fault reactions can be adjusted via parameters (p2100, p2101).

---

**Note**

See Table "Fault reactions" (Page 1357).

---

#### **Acknowledgment: Default acknowledgment (adjustable acknowledgment)**

Specifies the default method of acknowledging faults after the cause has been eliminated.

The optional parentheses indicate whether the default acknowledgment can be changed and which acknowledgment can be adjusted via parameters (p2126, p2127).

---

**Note**

See Table "Acknowledging faults" (Page 1359).

---

#### **Cause:**

Describes the possible causes of the fault or alarm. A fault or alarm value can also be specified (optional).

Fault value (r0949, format):

The fault value is entered into the fault buffer in r0949[0...63] and specifies additional, more precise information about a fault.

Alarm value (r2124, format):

The alarm value specifies additional, more precise information about an alarm.

The alarm value is entered in the alarm buffer in r2124[0...7] and specifies additional, more precise information about an alarm.

#### **Remedy:**

Description of the methods available for eliminating the cause of the active fault/alarm.

 <b>WARNING</b>
--

In certain cases, servicing and maintenance personnel are responsible for choosing a suitable method for eliminating the cause of faults.
---

### 4.1.3 Number ranges of faults and alarms

#### Note

The following number ranges represent an overview of all faults and alarms used in the SINAMICS drive family.

The faults and alarms for the product described in this List Manual are described in detail in "List of faults and alarms" (Page 1369).

Faults and alarms are organized into the following number ranges:

Table 4-5 Number ranges of faults and alarms

of	To	Area
1000	3999	Control Unit
4000	4999	Reserved
5000	5999	Power section
6000	6899	Infeed
6900	6999	Braking Module
7000	7999	Drive
8000	8999	Option Board
9000	12999	Reserved
13000	13020	Licensing
13021	13099	Reserved
13100	13102	Know-how protection
13103	19999	Reserved
20000	29999	OEM
30000	30999	DRIVE-CLiQ component power unit
31000	31999	DRIVE-CLiQ component encoder 1
32000	32999	DRIVE-CLiQ component encoder 2 <b>Note</b> Faults that occur are automatically output as an alarm if the encoder is parameterized as a direct measuring system and does not intervene in the motor control.
33000	33999	DRIVE-CLiQ component encoder 3 <b>Note</b> Faults that occur are automatically output as an alarm if the encoder is parameterized as a direct measuring system and does not intervene in the motor control.
34000	34999	Voltage Sensing Module (VSM)
35000	35199	Terminal Module 54F (TM54F)
35200	35999	Terminal Module 31 (TM31)
36000	36999	DRIVE-CLiQ Hub Module
37000	37999	HF Damping Module

## 4 Faults and alarms

### 4.1 Overview of faults and alarms

---

Table 4-5 Number ranges of faults and alarms, continued

<b>of</b>	<b>To</b>	<b>Area</b>
40000	40999	Controller Extension 32 (CX32)
41000	48999	Reserved
49000	49999	SINAMICS GM/SM/GL
50000	50499	Communication Board (COMM BOARD)
50500	59999	OEM Siemens
60000	65535	SINAMICS DC MASTER (closed-loop DC current control)

## 4.2 List of faults and alarms

Product: SINAMICS G130/G150, Version: 4806000, Language: eng  
Objects: B\_INF, CU\_G130\_DP, CU\_G130\_PN, CU\_G150\_DP, CU\_G150\_PN, ENC, HUB, TB30, TM120, TM150, TM31, TM54F\_MA, TM54F\_SL, VECTOR\_G

<b>F01000</b>	<b>Internal software error</b>
<b>Message value:</b>	Module: %1, line: %2
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	An internal software error has occurred. Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- evaluate fault buffer (r0945).</li> <li>- carry out a POWER ON (switch-off/switch-on) for all components.</li> <li>- if required, check the data on the non-volatile memory (e.g. memory card).</li> <li>- upgrade firmware to later version.</li> <li>- contact Technical Support.</li> <li>- replace the Control Unit.</li> </ul>
<b>F01001</b>	<b>FloatingPoint exception</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	An exception occurred during an operation with the FloatingPoint data type. The error may be caused by the basic system or a technology function (e.g. FBLOCKS, DCC, TEC). Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting. Note: Refer to r9999 for further information about this fault. r9999[0]: Fault number. r9999[1]: Program counter at the time when the exception occurred. r9999[2]: Cause of the FloatingPoint exception. Bit 0 = 1: Operation invalid Bit 1 = 1: Division by zero Bit 2 = 1: Overflow Bit 3 = 1: Underflow Bit 4 = 1: Inaccurate result
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- carry out a POWER ON (switch-off/switch-on) for all components.</li> <li>- check configuration and signals of the blocks in FBLOCKS.</li> <li>- check configuration and signals of DCC charts.</li> <li>- check configuration and signals of TEC charts.</li> <li>- upgrade firmware to later version.</li> <li>- contact Technical Support.</li> </ul>

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F01002</b>	<b>Internal software error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	An internal software error has occurred. Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on) for all components. - upgrade firmware to later version. - contact Technical Support.		

---

<b>F01003</b>	<b>Acknowledgment delay when accessing the memory</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	A memory area was accessed that does not return a "READY". Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on) for all components. - contact Technical Support.		

---

<b>N01004 (F, A)</b>	<b>Internal software error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	An internal software error has occurred. Fault value (r0949, hexadecimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	- read out diagnostics parameter (r9999). - contact Technical Support. See also: r9999 (Software error internal supplementary diagnostics)		
Reaction upon F:	OFF2		
Acknowl. upon F:	POWER ON		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F01005</b>	<b>Firmware download for DRIVE-CLiQ component unsuccessful</b>		
<b>Message value:</b>	Component number: %1, fault cause: %2		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	It was not possible to download the firmware to a DRIVE-CLiQ component. Fault value (r0949, interpret hexadecimal): yyxxxx hex: yy = component number, xxxx = fault cause		

xxxx = 000B hex = 11 dec:  
DRIVE-CLiQ component has detected a checksum error.

xxxx = 000F hex = 15 dec:  
The selected DRIVE-CLiQ component did not accept the contents of the firmware file.

xxxx = 0012 hex = 18 dec:  
Firmware version is too old and is not accepted by the component.

xxxx = 0013 hex = 19 dec:  
Firmware version is not suitable for the hardware release of the component.

xxxx = 0065 hex = 101 dec:  
After several communication attempts, no response from the DRIVE-CLiQ component.

xxxx = 008B hex = 139 dec:  
Initially, a new boot loader is loaded (must be repeated after POWER ON).

xxxx = 008C hex = 140 dec:  
Firmware file for the DRIVE-CLiQ component not available on the memory card.

xxxx = 008D hex = 141 dec:  
An inconsistent length of the firmware file was signaled. The firmware download may have been caused by a loss of connection to the firmware file. This can occur during a project download/reset in the case of a SINAMICS Integrated Control Unit, for example.

xxxx = 008F hex = 143 dec:  
Component has not changed to the mode for firmware download. It was not possible to delete the existing firmware.

xxxx = 0090 hex = 144 dec:  
When checking the firmware that was downloaded (checksum), the component detected a fault. It is possible that the file on the memory card is defective.

xxxx = 0091 hex = 145 dec:  
Checking the loaded firmware (checksum) was not completed by the component in the appropriate time.

xxxx = 009C hex = 156 dec:  
Component with the specified component number is not available (p7828).

xxxx = Additional values:  
Only for internal Siemens troubleshooting.

**Remedy:**

- check the selected component number (p7828).
- check the DRIVE-CLiQ wiring.
- save suitable firmware file for download in the directory "/siemens/sinamics/code/sac/".
- use a component with a suitable hardware version
- after POWER ON has been carried out again for the DRIVE-CLiQ component, download firmware again. Depending on p7826, the firmware will be automatically downloaded.

---

<b>A01006</b>	<b>Firmware update for DRIVE-CLiQ component required</b>		
<b>Message value:</b>	Component number: %1		
<b>Message class:</b>	General drive fault (19)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The firmware of a DRIVE-CLiQ component must be updated as there is no suitable firmware or firmware version in the component for operation with the Control Unit. Alarm value (r2124, interpret decimal): Component number of the DRIVE-CLiQ component.		
<b>Remedy:</b>	Firmware update using the commissioning software: The firmware version of all of the components on the "Version overview" page can be read in the Project Navigator under "Configuration" of the associated drive unit and an appropriate firmware update can be carried out. Firmware update via parameter: - take the component number from the alarm value and enter into p7828. - start the firmware download with p7829 = 1.		

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>A01007</b>	<b>POWER ON for DRIVE-CLiQ component required</b>		
<b>Message value:</b>	Component number: %1		
<b>Message class:</b>	General drive fault (19)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	A DRIVE-CLiQ component must be switched on again (POWER ON) (e.g. due to a firmware update). Alarm value (r2124, interpret decimal): Component number of the DRIVE-CLiQ component. Note: For a component number = 1, a POWER ON of the Control Unit is required.		
<b>Remedy:</b>	- Switch off the power supply of the specified DRIVE-CLiQ component and switch it on again. - For SINUMERIK, auto commissioning is prevented. In this case, a POWER ON is required for all components and the auto commissioning must be restarted.		

---

<b>A01009 (N)</b>	<b>CU: Control module overtemperature</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Overtemperature of the electronic components (6)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The temperature (r0037[0]) of the control module (Control Unit) has exceeded the specified limit value.		
<b>Remedy:</b>	- check the air intake for the Control Unit. - check the Control Unit fan. Note: The alarm is automatically withdrawn once the limit value has been fallen below.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>F01010</b>	<b>Drive type unknown</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	An unknown drive type was found. Fault value (r0949, interpret decimal): Drive object number (refer to p0101, p0107).		
<b>Remedy:</b>	- replace Power Module. - carry out a POWER ON (switch-off/switch-on) for all components. - upgrade firmware to later version. - contact Technical Support.		



<b>F01015</b>	<b>Internal software error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	An internal software error has occurred. Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on) for all components. - upgrade firmware to later version. - contact Technical Support.
<b>A01016 (F)</b>	<b>Firmware changed</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	At least one firmware file in the directory was illegally changed on the non-volatile memory (memory card/device memory) with respect to the version when shipped from the factory. Alarm value (r2124, interpret decimal): 0: Checksum of one file is incorrect. 1: File missing. 2: Too many files. 3: Incorrect firmware version. 4: Incorrect checksum of the back-up file.
<b>Remedy:</b>	For the non-volatile memory for the firmware (memory card/device memory), restore the delivery condition. Note: The file involved can be read out using parameter r9925. The status of the firmware check is displayed using r9926. See also: r9925 (Firmware file incorrect), r9926 (Firmware check status)
Reaction upon F:	OFF2
Acknowled. upon F:	POWER ON
<b>A01017</b>	<b>Component lists changed</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	On the memory card, one file in the directory /SIEMENS/SINAMICS/DATA or /ADDON/SINAMICS/DATA has been illegally changed with respect to that supplied from the factory. No changes are permitted in this directory. Alarm value (r2124, interpret decimal): zyx dec: x = Problem, y = Directory, z = File name x = 1: File does not exist. x = 2: Firmware version of the file does not match the software version. x = 3: File checksum is incorrect. y = 0: Directory /SIEMENS/SINAMICS/DATA/ y = 1: Directory /ADDON/SINAMICS/DATA/ z = 0: File MOTARM.ACX z = 1: File MOTSRM.ACX

z = 2: File MOTSLM.ACX  
z = 3: File ENCDATA.ACX  
z = 4: File FILTDATA.ACX  
z = 5: File BRKDATA.ACX  
z = 6: File DAT\_BEAR.ACX  
z = 7: File CFG\_BEAR.ACX  
z = 8: File ENC\_GEAR.ACX  
z = 9: File CFG\_BRK.ACX  
z = 10: File THERMMOTMOD.ACX  
z = 11: File MAPPING.ACX  
z = 12: File LOADGEAR.ACX  
z = 13: File MOTRSM.ACX

**Remedy:** For the file on the memory card involved, restore the status originally supplied from the factory.

**A01020 Writing to RAM disk unsuccessful**

**Message value:** -  
**Message class:** Hardware/software error (1)  
**Drive object:** All objects  
**Component:** Control Unit (CU) **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** A write access to the internal RAM disk was unsuccessful.  
**Remedy:** Adapt the file size for the system logbook to the internal RAM disk (p9930).  
See also: p9930 (System logbook activation)

**F01023 Software timeout (internal)**

**Message value:** %1  
**Message class:** Hardware/software error (1)  
**Drive object:** All objects  
**Component:** Control Unit (CU) **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY  
**Cause:** An internal software timeout has occurred.  
Fault value (r0949, interpret decimal):  
Only for internal Siemens troubleshooting.  
**Remedy:** - carry out a POWER ON (switch-off/switch-on) for all components.  
- upgrade firmware to later version.  
- contact Technical Support.

**F01030 Sign-of-life failure for master control**

**Message value:** -  
**Message class:** Communication error to the higher-level control system (9)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** Vector: OFF3 (IASC/DCBRK, NONE, OFF1, OFF2, STOP2)  
Infeed: OFF1 (NONE, OFF2)  
**Acknowledge:** IMMEDIATELY  
**Cause:** For active PC master control, no sign-of-life was received within the monitoring time.  
The master control was returned to the active BICO interconnection.  
**Remedy:** Set the monitoring time higher at the PC or, if required, completely disable the monitoring function.  
For the commissioning software, the monitoring time is set as follows:  
<Drive> -> Commissioning -> Control panel -> Button "Fetch master control" -> A window is displayed to set the monitoring time in milliseconds.  
**Notice:**  
The monitoring time should be set as short as possible. A long monitoring time means a late response when the communication fails!

---

<b>F01031</b>	<b>Sign-of-life failure for OFF in REMOTE</b>
<b>Message value:</b>	-
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF3 (IASC/DCBRK, NONE, OFF1, OFF2, STOP2) Infeed: OFF1 (NONE, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	With the "OFF in REMOTE" mode active, no sign-of-life was received within 3 seconds.
<b>Remedy:</b>	- check the data cable connection at the serial interface for the Control Unit (CU) and operator panel. - check the data cable between the Control Unit and operator panel.

---

<b>A01032 (F)</b>	<b>ACX: all parameters must be saved</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The parameters of an individual drive object were saved (p0971 = 1), although there is still no backup of all drive system parameters. The saved object-specific parameters are not loaded the next time that the system powers up. For the system to successfully power up, all of the parameters must have been completely backed up. Alarm value (r2124, interpret decimal): Only for internal Siemens troubleshooting. See also: p0971 (Save drive object parameters)
<b>Remedy:</b>	Save all parameters (p0977 = 1 or "copy RAM to ROM"). See also: p0977 (Save all parameters)
<b>Reaction upon F:</b>	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)
<b>Acknowl. upon F:</b>	IMMEDIATELY

---

<b>F01033</b>	<b>Units changeover: Reference parameter value invalid</b>
<b>Message value:</b>	Parameter: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	When changing over the units to the referred representation type, it is not permissible for any of the required reference parameters to be equal to 0.0 Fault value (r0949, parameter): Reference parameter whose value is 0.0. See also: p0349 (System of units motor equivalent circuit diagram data), p0505 (Selecting the system of units), p0595 (Technological unit selection)
<b>Remedy:</b>	Set the value of the reference parameter to a number different than 0.0. See also: p0304, p0305, p0310, p0596, p2000, p2001, p2002, p2003, r2004

<b>F01034</b>	<b>Units changeover: Calculation parameter values after reference value change unsuccessful</b>
<b>Message value:</b>	Parameter: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The change of a reference parameter meant that for an involved parameter the selected value was not able to be re-calculated in the per unit representation. The change was rejected and the original parameter value restored. Fault value (r0949, parameter): Parameter whose value was not able to be re-calculated. See also: p0304, p0305, p0310, p0596, p2000, p2001, p2002, p2003, r2004
<b>Remedy:</b>	- Select the value of the reference parameter such that the parameter involved can be calculated in the per unit representation. - Technology unit selection (p0595) before changing the reference parameter p0596, set p0595 = 1.
<b>A01035 (F)</b>	<b>ACX: Parameter back-up file corrupted</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	When the Control Unit is booted, no complete data set was found from the parameter back-up files. The last time that the parameterization was saved, it was not completely carried out. It is possible that the backup was interrupted by switching off or withdrawing the memory card. Alarm value (r2124, interpret hexadecimal): ddccbbaa hex: aa = 01 hex: Power up was realized without data backup. The drive is in the factory setting. aa = 02 hex: The last available backup data record was loaded. The parameterization must be checked. It is recommended that the parameterization is downloaded again. dd, cc, bb: Only for internal Siemens troubleshooting. See also: p0971 (Save drive object parameters), p0977 (Save all parameters)
<b>Remedy:</b>	- Download the project again with the commissioning software. - save all parameters (p0977 = 1 or "copy RAM to ROM"). See also: p0977 (Save all parameters)
Reaction upon F:	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY
<b>F01036 (A)</b>	<b>ACX: Parameter back-up file missing</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	When downloading the device parameterization, a parameter back-up file PSxxxxyy.ACX associated with a drive object cannot be found.

## 4 Faults and alarms

### 4.2 List of faults and alarms

Fault value (r0949, interpret hexadecimal):  
Byte 1: yyy in the file name PSxxxxyy.ACX  
yyy = 000 --> consistency back-up file  
yyy = 001 ... 062 --> drive object number  
yyy = 099 --> PROFIBUS parameter back-up file  
Byte 2, 3, 4:

Only for internal Siemens troubleshooting.

**Remedy:** If you have saved the project data using the commissioning software, carry out a new download for your project. Save using the function "Copy RAM to ROM" or with p0977 = 1.

This means that the parameter files are again completely written into the non-volatile memory.

**Note:**

If the project data have not been backed up, then a new first commissioning is required.

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F01038 (A) ACX: Loading the parameter back-up file unsuccessful**

**Message value:** %1

**Message class:** Hardware/software error (1)

**Drive object:** All objects

**Component:** Control Unit (CU)

**Propagation:** LOCAL

**Reaction:** Vector: NONE (OFF1, OFF2, OFF3)

Infeed: NONE (OFF2)

**Acknowledge:** IMMEDIATELY

**Cause:** An error has occurred when downloading PSxxxxyy.ACX or PTxxxxyy.ACX files from the non-volatile memory.

Fault value (r0949, interpret hexadecimal):

Byte 1: yyy in the file name PSxxxxyy.ACX

yyy = 000 --> consistency back-up file

yyy = 001 ... 062 --> drive object number

yyy = 099 --> PROFIBUS parameter back-up file

Byte 2:

255: Incorrect drive object type.

254: Topology comparison unsuccessful -> drive object type was not able to be identified.

Reasons could be:

- incorrect component type in the actual topology
- Component does not exist in the actual topology.
- Component not active.

Additional values:

Only for internal Siemens troubleshooting.

Byte 4, 3:

Only for internal Siemens troubleshooting.

**Remedy:** - if you have saved the project data using the commissioning software, download the project again. Save using the function "Copy RAM to ROM" or with p0977 = 1. This means that the parameter files are again completely written to the non-volatile memory.

- replace the memory card or Control Unit.

For byte 2 = 255:

- correct the drive object type (see p0107).

Reaction upon A: NONE

Acknowl. upon A: NONE

<b>F01039 (A)</b>	<b>ACX: Writing to the parameter back-up file was unsuccessful</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Writing to at least one parameter back-up file PSxxxxyy.*** in the non-volatile memory was unsuccessful. - in the directory /USER/SINAMICS/DATA/ at least one parameter back-up file PSxxxxyy.*** has the "read only" file attribute and cannot be overwritten. - there is not sufficient free memory space available. - the non-volatile memory is defective and cannot be written to. Fault value (r0949, interpret hexadecimal): dcba hex a = yyy in the file names PSxxxxyy.*** a = 000 --> consistency back-up file a = 001 ... 062 --> drive object number a = 070 --> FEPR0M.BIN a = 080 --> DEL4BOOT.TXT a = 099 --> PROFIBUS parameter back-up file b = xxx in the file names PSxxxxyy.*** b = 000 --> data save started with p0977 = 1 or p0971 = 1 b = 010 --> data save started with p0977 = 10 b = 011 --> data save started with p0977 = 11 b = 012 --> data save started with p0977 = 12 d, c: Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- check the file attribute of the files (PSxxxxyy.***, CAxxxxyy.***, CCxxxxyy.***) and, if required, change from "read only" to "writeable". - check the free memory space in the non-volatile memory. Approx. 80 kbyte of free memory space is required for every drive object in the system. - replace the memory card or Control Unit.
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>F01040</b>	<b>Save parameter settings and carry out a POWER ON</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, CU_G130_DP, CU_G130_PN, CU_G150_DP, CU_G150_PN, ENC, HUB, TB30, TM120, TM150, TM31, TM54F_MA, TM54F_SL
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	A parameter was changed in the drive system which means that it is necessary to save the parameters and re-boot.
<b>Remedy:</b>	- save parameters (p0971, p0977). - carry out a POWER ON (switch-off/switch-on) for all components. Then: - upload the drive unit (commissioning software).

---

<b>F01040</b>	<b>Save parameter settings and carry out a POWER ON</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	A parameter was changed in the drive system which means that it is necessary to save the parameters and re-boot. Examples: - p1810.2 (wobulation of the pulse frequency) and p1802 (edge modulation) - p1750.5 (cl.-loop control mode PMSM up to f=0Hz with HF signal injection)
<b>Remedy:</b>	- save parameters (p0971, p0977). - carry out a POWER ON for all components (switch on the Control Unit with or after the power units). When changing p1750.5 or p1810.2 for edge modulation, a warm restart is sufficient (p0009 = 30, p0976 = 3). Then: - upload the drive unit (commissioning software).

---

<b>F01041</b>	<b>Parameter save necessary</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Defective or missing files were detected on the memory card when booting. Fault value (r0949, interpret decimal): 1: Source file cannot be opened. 2: Source file cannot be read. 3: Target directory cannot be set up. 4: Target file cannot be set up/opened. 5: Target file cannot be written to. Additional values: Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- save the parameters. - download the project again to the drive unit. - update the firmware - if required, replace the Control Unit and/or memory card card.

---

<b>F01042</b>	<b>Parameter error during project download</b>
<b>Message value:</b>	Parameter: %1, Index: %2, fault cause: %3
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	Vector: OFF2 (NONE, OFF1, OFF3) Infeed: NONE (OFF1, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	An error was detected when downloading a project using the commissioning software (e.g. incorrect parameter value). It is possible that the parameter limits are dependent on other parameters. The detailed cause of the fault can be determined using the fault value. Fault value (r0949, interpret hexadecimal): ccbbaaaa hex aaaa = Parameter bb = Index cc = fault cause

- 0: Parameter number illegal.
- 1: Parameter value cannot be changed.
- 2: Lower or upper value limit exceeded.
- 3: Sub-index incorrect.
- 4: No array, no sub-index.
- 5: Data type incorrect.
- 6: Setting not permitted (only resetting).
- 7: Descriptive element cannot be changed.
- 9: Descriptive data not available.
- 11: No master control.
- 15: No text array available.
- 17: Task cannot be executed due to operating state.
- 20: Illegal value.
- 21: Response too long.
- 22: Parameter address illegal.
- 23: Format illegal.
- 24: Number of values not consistent.
- 25: Drive object does not exist.
- 101: Presently deactivated.
- 104: Illegal value.
- 107: Write access not permitted when controller enabled.
- 108: Unit unknown.
- 109: Write access only in the commissioning state, encoder (p0010 = 4).
- 110: Write access only in the commissioning state, motor (p0010 = 3).
- 111: Write access only in the commissioning state, power unit (p0010 = 2).
- 112: Write access only in the quick commissioning mode (p0010 = 1).
- 113: Write access only in the ready mode (p0010 = 0).
- 114: Write access only in the commissioning state, parameter reset (p0010 = 30).
- 115: Write access only in the Safety Integrated commissioning state (p0010 = 95).
- 116: Write access only in the commissioning state, technological application/units (p0010 = 5).
- 117: Write access only in the commissioning state (p0010 not equal to 0).
- 118: Write access only in the commissioning state, download (p0010 = 29).
- 119: Parameter may not be written in download.
- 120: Write access only in the commissioning state, drive basic configuration (device: p0009 = 3).
- 121: Write access only in the commissioning state, define drive type (device: p0009 = 2).
- 122: Write access only in the commissioning state, data set basic configuration (device: p0009 = 4).
- 123: Write access only in the commissioning state, device configuration (device: p0009 = 1).
- 124: Write access only in the commissioning state, device download (device: p0009 = 29).
- 125: Write access only in the commissioning state, device parameter reset (device: p0009 = 30).
- 126: Write access only in the commissioning state, device ready (device: p0009 = 0).
- 127: Write access only in the commissioning state, device (device: p0009 not equal to 0).
- 129: Parameter may not be written in download.
- 130: Transfer of the master control is inhibited via binector input p0806.
- 131: Required BICO interconnection not possible because BICO output does not supply floating value
- 132: Free BICO interconnection inhibited via p0922.
- 133: Access method not defined.
- 200: Below the valid values.
- 201: Above the valid values.
- 202: Cannot be accessed from the Basic Operator Panel (BOP).
- 203: Cannot be read from the Basic Operator Panel (BOP).
- 204: Write access not permitted.

**Remedy:**

- correct the parameterization in the commissioning tool and download the project again.
- enter the correct value in the specified parameter.
- identify the parameter that restricts the limits of the specified parameter.

<b>F01043</b>	<b>Fatal error at project download</b>
<b>Message value:</b>	Fault cause: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A fatal error was detected when downloading a project using the commissioning software. Fault value (r0949, interpret decimal): 1: Device status cannot be changed to Device Download (drive object ON?). 2: Incorrect drive object number. 3: A drive object that has already been deleted is deleted again. 4: Deleting of a drive object that has already been registered for generation. 5: Deleting a drive object that does not exist. 6: Generating an undeleted drive object that already existed. 7: Regenerating a drive object already registered for generation. 8: Maximum number of drive objects that can be generated exceeded. 9: Error while generating a device drive object. 10: Error while generating target topology parameters (p9902 and p9903). 11: Error while generating a drive object (global component). 12: Error while generating a drive object (drive component). 13: Unknown drive object type. 14: Drive status cannot be changed to "ready for operation" (r0947 and r0949). 15: Drive status cannot be changed to drive download. 16: Device status cannot be changed to "ready for operation". 17: It is not possible to download the topology. The component wiring should be checked, taking into account the various messages/signals. 18: A new download is only possible if the factory settings are restored for the drive unit. 19: The slot for the option module has been configured several times (e.g. CAN and COMM BOARD) 20: The configuration is inconsistent (e.g. CAN for Control Unit, however no CAN configured for drive objects A_INF, SERVO or VECTOR). 21: Error when accepting the download parameters. 22: Software-internal download error. Additional values: only for internal Siemens troubleshooting.
<b>Remedy:</b>	- use the current version of the commissioning software. - modify the offline project and carry out a new download (e.g. compare the number of drive objects, motor, encoder, power unit in the offline project and at the drive). - change the drive state (is a drive rotating or is there a message/signal?). - carefully note any other messages/signals and remove their cause. - boot from previously saved files (switch-off/switch-on or p0976).
<b>F01044</b>	<b>CU: Descriptive data error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	An error was detected when loading the descriptive data saved in the non-volatile memory.
<b>Remedy:</b>	Replace the memory card or Control Unit.

---

<b>A01045</b>	<b>CU: Configuring data invalid</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	An error was detected when evaluating the parameter files PSxxxxxyy.ACX, PTxxxxyy.ACX, CAxxxxyy.ACX, or CCxxxxyy.ACX saved in the non-volatile memory. Because of this, under certain circumstances, several of the saved parameter values were not able to be accepted. Also see r9406 up to r9408. Alarm value (r2124, interpret hexadecimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- check the parameters displayed in r9406 up to r9408, and correct these if required. - Restore the factory setting using (p0976 = 1) and re-load the project into the drive unit. Then save the parameterization in STARTER using the function "Copy RAM to ROM" or with p0977 = 1. This overwrites the incorrect parameter files in the non-volatile memory – and the alarm is withdrawn. See also: r9406 (PS file parameter number parameter not transferred), r9407 (PS file parameter index parameter not transferred), r9408 (PS file fault code parameter not transferred)

---

<b>A01049</b>	<b>CU: It is not possible to write to file</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	It is not possible to write into a write-protected file (PSxxxxxx.acx). The write request was interrupted. Alarm value (r2124, interpret decimal): Drive object number.
<b>Remedy:</b>	Check whether the "write protected" attribute has been set for the files in the non-volatile memory under .../USER/SINAMICS/DATA/... When required, remove write protection and save again (e.g. set p0977 to 1).

---

<b>F01050</b>	<b>Memory card and device incompatible</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF2 (NONE, OFF1, OFF3) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The memory card and the device type do not match (e.g. a memory card for SINAMICS S is inserted in SINAMICS G).
<b>Remedy:</b>	- insert the matching memory card. - use the matching Control Unit or power unit.

<b>F01054</b>	<b>CU: System limit exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	At least one system overload has been identified. Fault value (r0949, interpret decimal): 1: Computing time load too high (r9976[1]). 5: Peak load too high (r9976[5]). Note: As long as this fault is present, it is not possible to save the parameters (p0971, p0977). See also: r9976 (System utilization)
<b>Remedy:</b>	For fault value = 1, 5: - reduce the computing time load of the drive unit (r9976[1] and r9976[5]) to under 100 %. - check the sampling times and adjust if necessary (p0115, p0799, p4099). - deactivate function modules. - deactivate drive objects. - remove drive objects from the target topology. - note the DRIVE-CLiQ topology rules and if required, change the DRIVE-CLiQ topology. When using the Drive Control Chart (DCC) or free function blocks (FBLOCKS), the following applies: - the computing time load of the individual run-time groups on a drive object can be read out in r21005 (DCC) or r20005 (FBLOCKS). - if necessary, the assignment of the run-time group (p21000, p20000) can be changed in order to increase the sampling time (r21001, r20001). - if necessary, reduce the number of cyclically calculated blocks (DCC) and/or function blocks (FBLOCKS).
<b>F01055</b>	<b>CU: Internal error (SYNO of port and application not identical)</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, TM150, VECTOR_G
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	DRIVE
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	All applications that operate with slaves at one port must be derived from the same SYNO clock cycle. The first application whose registration (log-on) connects a slave to a port defines the SYNO clock cycle that will be used as basis for the port. Fault value (r0949, interpret hexadecimal): Method ID. Note: Only for internal Siemens troubleshooting.
<b>Remedy:</b>	Contact Technical Support.
<b>F01056</b>	<b>CU: Internal error (clock cycle of parameter group already assigned differently)</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, TM150, VECTOR_G
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	DRIVE
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The requested parameter group (IREG, NREG, ...) is already being used in a different clock cycle. Fault value (r0949, interpret hexadecimal): Method ID.



## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F01060</b>	<b>CU: Internal error (parameter group not available)</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, TM150, VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	DRIVE
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The requested parameter group (IREG, NREG, ...) is not offered by this slave type. Fault value (r0949, interpret hexadecimal): Method ID. Note: Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	Contact Technical Support.		

---

<b>F01061</b>	<b>CU: Internal error (application not known)</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, TM150, VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	DRIVE
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	An application that is not registered with TSM has attempted to register with registerSlaves(). The cause can be an unsuccessful TSM registration or an incorrect registration sequence. It is always necessary to log in to the TSM before registerSlaves() can be used. Fault value (r0949, interpret hexadecimal): Method ID. Note: Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	Contact Technical Support.		

---

<b>F01063</b>	<b>CU: Internal error (PDM)</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, TM150, VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	An internal software error has occurred. Fault value (r0949, interpret hexadecimal): Method ID. Note: Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	Contact Technical Support.		

---

<b>A01064 (F)</b>	<b>CU: Internal error (CRC)</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	A checksum error (CRC error) has occurred in the Control Unit program memory		
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on) for all components. - upgrade firmware to later version. - contact Technical Support.		

Reaction upon F: Vector: NONE (OFF1, OFF2, OFF3, STOP2)  
 Infeed: NONE (OFF1, OFF2)  
 Acknowl. upon F: IMMEDIATELY (POWER ON)

---

<b>F01068</b>	<b>CU: Data memory memory overflow</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The utilization for a data memory area is too large. Fault value (r0949, interpret binary): Bit 0 = 1: High-speed data memory 1 overloaded Bit 1 = 1: High-speed data memory 2 overloaded Bit 2 = 1: High-speed data memory 3 overloaded Bit 3 = 1: High-speed data memory 4 overloaded
<b>Remedy:</b>	- deactivate the function module. - deactivate drive object. - remove the drive object from the target topology.

---

<b>A01069</b>	<b>Parameter backup and device incompatible</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The parameter backup on the memory card and the drive unit do not match. The module boots with the factory settings. Example: Devices A and B. are not compatible and a memory card with the parameter backup for device A is inserted in device B.
<b>Remedy:</b>	- insert a memory card with compatible parameter backup and carry out a POWER ON. - insert a memory card without parameter backup and carry out a POWER ON. - save the parameters (p0977 = 1).

---

<b>F01070</b>	<b>Project/firmware is being downloaded to the memory card</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	An upgrade (project/firmware download) was initiated on the memory card. While this fault is present, the corresponding update takes place with plausibility and consistency checks. After this, depending on the command option, a new boot (reset) for the Control Unit is initiated. Caution: During the upgrade and while this fault is present, it is not permissible to switch off the Control Unit. If the operation is interrupted, this can destroy the file system on the memory card. The memory card will then no longer work properly and must be repaired.
<b>Remedy:</b>	Not necessary. The fault is automatically withdrawn after the upgrade has been completed.



- 15: No text array available.
- 17: Task cannot be executed due to operating state.
- 20: Illegal value.
- 21: Response too long.
- 22: Parameter address illegal.
- 23: Format illegal.
- 24: Number of values not consistent.
- 25: Drive object does not exist.
- 101: Presently deactivated.
- 104: Illegal value.
- 107: Write access not permitted when controller enabled.
- 108: Unit unknown.
- 109: Write access only in the commissioning state, encoder (p0010 = 4).
- 110: Write access only in the commissioning state, motor (p0010 = 3).
- 111: Write access only in the commissioning state, power unit (p0010 = 2).
- 112: Write access only in the quick commissioning mode (p0010 = 1).
- 113: Write access only in the ready mode (p0010 = 0).
- 114: Write access only in the commissioning state, parameter reset (p0010 = 30).
- 115: Write access only in the Safety Integrated commissioning state (p0010 = 95).
- 116: Write access only in the commissioning state, technological application/units (p0010 = 5).
- 117: Write access only in the commissioning state (p0010 not equal to 0).
- 118: Write access only in the commissioning state, download (p0010 = 29).
- 119: Parameter may not be written in download.
- 120: Write access only in the commissioning state, drive basic configuration (device: p0009 = 3).
- 121: Write access only in the commissioning state, define drive type (device: p0009 = 2).
- 122: Write access only in the commissioning state, data set basic configuration (device: p0009 = 4).
- 123: Write access only in the commissioning state, device configuration (device: p0009 = 1).
- 124: Write access only in the commissioning state, device download (device: p0009 = 29).
- 125: Write access only in the commissioning state, device parameter reset (device: p0009 = 30).
- 126: Write access only in the commissioning state, device ready (device: p0009 = 0).
- 127: Write access only in the commissioning state, device (device: p0009 not equal to 0).
- 129: Parameter may not be written in download.
- 130: Transfer of the master control is inhibited via binector input p0806.
- 131: Required BICO interconnection not possible because BICO output does not supply floating value
- 132: Free BICO interconnection inhibited via p0922.
- 133: Access method not defined.
- 200: Below the valid values.
- 201: Above the valid values.
- 202: Cannot be accessed from the Basic Operator Panel (BOP).
- 203: Cannot be read from the Basic Operator Panel (BOP).
- 204: Write access not permitted.

**Remedy:**

- correct the parameterization in the commissioning tool and download the project again.
- enter the correct value in the specified parameter.
- identify the parameter that restricts the limits of the specified parameter.

---

<b>A01099 (N)</b>	<b>UTC synchronization tolerance violated</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The tolerance (p3109) set for UTC synchronization was violated.		
	Note:		
	UTC: Universal Time Coordinates		

## 4 Faults and alarms

### 4.2 List of faults and alarms

See also: p3109 (UTC synchronization tolerance)

**Remedy:** Select the synchronization intervals shorter so that the deviation between the time of day master and drive system lies within the tolerance.

**Note:**  
The deviation when synchronizing is shown in r3107.  
See also: r3107 (UTC synchronization time out of tolerance)

Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **A01100 CU: Memory card withdrawn**

**Message value:** -  
**Message class:** General drive fault (19)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Control Unit (CU) **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The memory card (non-volatile memory) was withdrawn during operation.  
**Notice:**  
It is not permissible for the memory card to be withdrawn or inserted under voltage.

**Remedy:**

- switch off the drive system.
- re-insert the memory card that was withdrawn - this card must match the drive system.
- switch on the drive system again.

---

#### **F01105 (A) CU: Insufficient memory**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** Control Unit (CU) **Propagation:** GLOBAL  
**Reaction:** OFF1  
**Acknowledge:** POWER ON  
**Cause:** Too many functions have been configured on this Control Unit (e.g. too many drives, function modules, data sets, Technology Extensions, blocks, etc).  
Fault value (r0949, interpret decimal):  
Only for internal Siemens troubleshooting.

**Remedy:**

- change the configuration on this Control Unit (e.g. fewer drives, function modules, data sets, Technology Extensions, blocks, etc).
- use an additional Control Unit.

Reaction upon A: NONE  
Acknowl. upon A: NONE

---

#### **F01106 CU: Insufficient memory**

**Message value:** %1  
**Message class:** Hardware/software error (1)  
**Drive object:** B\_INF, TM150, VECTOR\_G  
**Component:** Control Unit (CU) **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY  
**Cause:** There is not sufficient free memory space available.

**Remedy:** Not necessary.

<b>F01107</b>	<b>CU: Save to memory card unsuccessful</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A data save in the non-volatile memory was not able to be successfully carried out. - non-volatile memory is defective. - insufficient space in the non-volatile memory. Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- try to save again. - replace the memory card or Control Unit.
<b>F01110</b>	<b>CU: More than one SINAMICS G on one Control Unit</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	More than one SINAMICS G type power unit is being operated from the Control Unit. Fault value (r0949, interpret decimal): Number of the second drive with a SINAMICS G type power unit.
<b>Remedy:</b>	Only one SINAMICS G drive type is permitted.
<b>F01111</b>	<b>CU: Mixed operation of drive units illegal</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Illegal operation of various drive units on one Control Unit: - SINAMICS S together with SINAMICS G - SINAMICS S together with SINAMICS S Value or Combi Fault value (r0949, interpret decimal): Number of the first drive object with a different power unit type.
<b>Remedy:</b>	Only power units of one particular drive type may be operated with one Control Unit.
<b>F01112</b>	<b>CU: Power unit not permissible</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The connected power unit cannot be used together with this Control Unit. Fault value (r0949, interpret decimal): 1: Power unit is not supported (e.g. PM240). 2: DC/AC power unit connected to CU310 not permissible. 3: Power unit (S120M) not permitted for vector control.
<b>Remedy:</b>	Replace the power unit that is not permissible by a component that is permissible.

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F01120 (A)</b>	<b>Terminal initialization has failed</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	OFF1 (OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	An internal software error occurred while the terminal functions were being initialized. Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on) for all components. - upgrade firmware to later version. - contact Technical Support. - replace the Control Unit.		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F01122 (A)</b>	<b>Frequency at the measuring probe input too high</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	OFF1 (OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The frequency of the pulses at the measuring probe input is too high. Fault value (r0949, interpret decimal): 1: DI/DO 9 (X122.8) 2: DI/DO 10 (X122.10) 4: DI/DO 11 (X122.11) 8: DI/DO 13 (X132.8) 16: DI/DO 14 (X132.10) 32: DI/DO 15 (X132.11) 64: DI/DO 8 (X122.7) 128: DI/DO 12 (X132.7)		
<b>Remedy:</b>	Reduce the frequency of the pulses at the measuring probe input.		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F01150</b>	<b>CU: Number of instances of a drive object type exceeded</b>		
<b>Message value:</b>	Drive object type: %1, number permitted: %2, actual number: %3		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The maximum permissible number of instances of a drive object type was exceeded. Drive object type: Drive object type (p0107), for which the maximum permissible number of instances was exceeded. Number permitted: Max. permissible number of instances for this drive object type. Actual number: Current number of instances for this drive object type. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): ddccbbaa hex: aa = drive object type, bb = number limited, cc = actual number, dd = no significance		

**Remedy:**

- switch off the unit.
- suitably restrict the number of instances of a drive object type by reducing the number of inserted components.
- re-commission the unit.

---

**F01151 CU: Number of drive objects of a category exceeded**

**Message value:** Drive object category: %1, number permitted: %2, actual number: %3

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None **Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY

**Cause:** The maximum permissible number of drive objects of a category was exceeded.  
 Drive object category:  
 Drive object category, for which the maximum permissible number of drive objects was exceeded.  
 Number permitted:  
 Max. permissible number for this drive object category.  
 Actual number:  
 Actual number for this drive object category.  
 Note regarding the message value:  
 The individual information is coded as follows in the message value (r0949/r2124):  
 ddcbbaa hex: aa = drive object category, bb = number limited, cc = actual number, dd = no significance

**Remedy:**

- switch off the unit.
- suitably restrict the number of drive objects of the specified category by reducing the number of inserted components.
- re-commission the unit.

---

**F01152 CU: Invalid constellation of drive object types**

**Message value:** -

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None **Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** POWER ON

**Cause:** It is not possible to simultaneously operate drive object types SERVO, VECTOR and HLA.  
 A maximum of 2 of these drive object types can be operated on a Control Unit.

**Remedy:**

- switch off the unit.
- restrict the use of drive object types SERVO, VECTOR, HLA to a maximum of 2.
- re-commission the unit.

---

**F01200 CU: Time slice management internal software error**

**Message value:** %1

**Message class:** Hardware/software error (1)

**Drive object:** All objects

**Component:** Control Unit (CU) **Propagation:** GLOBAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** A time slice management error has occurred.  
 It is possible that the sampling times have been inadmissibly set.  
 Fault value (r0949, interpret hexadecimal):  
 998:  
 Too many time slices occupied by technology functions (e.g. DCC).  
 999:  
 Too many time slices occupied by the basic system. Too many different sampling times may have been set.  
 Additional values:  
 Only for internal Siemens troubleshooting.

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:**

- check the sampling time setting (p0112, p0115, p4099, p9500, p9511).
- contact Technical Support.

---

**F01205**      **CU: Time slice overflow**

**Message value:**      %1

**Message class:**      Hardware/software error (1)

**Drive object:**      All objects

**Component:**      Control Unit (CU)      **Propagation:**      GLOBAL

**Reaction:**      OFF2

**Acknowledge:**      POWER ON

**Cause:**      Insufficient processing time is available for the existing topology.  
Fault value (r0949, interpret hexadecimal):  
Only for internal Siemens troubleshooting.

**Remedy:**

- reduce the number of drives.
- increase the sampling times.

---

**F01221**      **CU: Bas clk cyc too low**

**Message value:**      %1

**Message class:**      Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**      All objects

**Component:**      None      **Propagation:**      LOCAL

**Reaction:**      NONE

**Acknowledge:**      IMMEDIATELY

**Cause:**      The closed-loop control / monitoring cannot maintain the envisaged clock cycle.  
The runtime of the closed-loop control/monitoring is too long for the particular clock cycle or the computing time remaining in the system is not sufficient for the closed-loop control/monitoring.  
Fault value (r0949, interpret hexadecimal):  
Only for internal Siemens troubleshooting.

**Remedy:**      Increase the basic clock cycle of DRIVE-CLiQ communication.  
See also: p0112 (Sampling times pre-setting p0115)

---

**F01222**      **CU: Basic clock cycle too low (computing time for communication not available)**

**Message value:**      %1

**Message class:**      Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**      B\_INF, TM150, VECTOR\_G

**Component:**      None      **Propagation:**      LOCAL

**Reaction:**      NONE

**Acknowledge:**      IMMEDIATELY

**Cause:**      A time slice has not been defined that fulfills the requirements.  
The port cannot be correctly operated as the alternating cyclic clock cycle cannot be maintained.  
Fault value (r0949, interpret hexadecimal):  
Method ID.  
Note:  
Only for internal Siemens troubleshooting.

**Remedy:**      Contact Technical Support.

<b>A01223</b>	<b>CU: Sampling time inconsistent</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>When changing a sampling time (p0115[0], p0799 or p4099), inconsistency between the clock cycles has been identified.</p> <p>Alarm value (r2124, interpret decimal):</p> <p>1: Value lower than minimum value.</p> <p>2: Value higher than maximum value.</p> <p>3: Value not a multiple of 1.25 <math>\mu</math>s.</p> <p>4: Value does not match clock-cycle synchronous PROFIBUS operation.</p> <p>5: Value not a multiple of 125 <math>\mu</math>s.</p> <p>6: Value not a multiple of 250 <math>\mu</math>s.</p> <p>7: Value not a multiple of 375 <math>\mu</math>s.</p> <p>8: Value not a multiple of 400 <math>\mu</math>s.</p> <p>10: Special restriction of the drive object violated.</p> <p>20: On a SERVO with a sampling time of 62.5 <math>\mu</math>s, more than two drive objects or one drive object of a type other than SERVO have been detected on the same DRIVE-CLiQ line (a maximum of two SERVO type drive objects are permitted).</p> <p>21: Value can be a multiple of the current controller sampling time of a servo or vector drive in the system (e.g. for TB30, the values of all of the indices should be taken into account).</p> <p>30: Value less than 31.25 <math>\mu</math>s.</p> <p>31: Value less than 62.5 <math>\mu</math>s (31.25 <math>\mu</math>s is not supported for SMC10, SMC30, SMI10 and Double Motor Modules).</p> <p>32: Value less than 125 <math>\mu</math>s.</p> <p>33: Value less than 250 <math>\mu</math>s.</p> <p>40: Nodes have been identified on the DRIVE-CLiQ line whose highest common denominator of the sampling times is less than 125 <math>\mu</math>s. Further, none of the nodes has a sampling time of less than 125 <math>\mu</math>s.</p> <p>41: A chassis unit was identified on the DRIVE-CLiQ line as a node. Further, the highest common denominator of the sampling times of all of the nodes connected to the line is less than 250 <math>\mu</math>s.</p> <p>42: An Active Line Module was identified on the DRIVE-CLiQ line as a node. Further, the highest common denominator of the sampling times of all of the nodes connected to the line is less than 125 <math>\mu</math>s.</p> <p>43: A Voltage Sensing Module (VSM) was identified on the DRIVE-CLiQ line as a node. Further, the highest common denominator of the sampling times of all of the nodes connected to the line is not equal to the current controller sampling time of the drive object of the VSM.</p> <p>44: The highest common denominator of the sampling times of all of the components connected to the DRIVE-CLiQ line is not the same for all components of this drive object (e.g. there are components on different DRIVE-CLiQ lines on which different highest common denominators are generated).</p> <p>45: A chassis parallel unit was identified on the DRIVE-CLiQ line as a node. Further, the highest common denominator of the sampling times of all of the nodes connected to the line is less than 162.5 <math>\mu</math>s or 187.5 <math>\mu</math>s (for a 2 or 3x parallel connection).</p> <p>46: A node has been identified on the DRIVE-CLiQ line whose sampling time is not a multiple of the lowest sampling time on this line.</p> <p>52: Nodes have been identified on the DRIVE-CLiQ line whose highest common denominator of the sampling times is less than 31.25 <math>\mu</math>s.</p> <p>54: Nodes have been identified on the DRIVE-CLiQ line whose highest common denominator of the sampling times is less than 62.5 <math>\mu</math>s.</p> <p>56: Nodes have been identified on the DRIVE-CLiQ line whose highest common denominator of the sampling times is less than 125 <math>\mu</math>s.</p> <p>58: Nodes have been identified on the DRIVE-CLiQ line whose highest common denominator of the sampling times is less than 250 <math>\mu</math>s.</p> <p>99: Inconsistency of cross drive objects detected.</p> <p>116: Recommended clock cycle in r0116[0...1].</p>

## 4 Faults and alarms

### 4.2 List of faults and alarms

General note:

The topology rules should be noted when connecting up DRIVE-CLiQ (refer to the appropriate product documentation).

The parameters of the sampling times can also be changed with automatic calculations.

Example for highest common denominator: 125 s, 125 µs, 62.5 µs --> 62.5 µs

**Remedy:**

- check the DRIVE-CLiQ cables.
- set a valid sampling time.

See also: p0115, p0799, p4099

---

<b>A01224</b>	<b>CU: Pulse frequency inconsistent</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	When changing the minimum pulse frequency (p0113) inconsistency between the pulse frequencies was identified. Alarm value (r2124, interpret decimal): 1: Value lower than minimum value. 2: Value higher than maximum value. 3: Resulting sampling time is not a multiple of 1.25 µs. 4: Value does not match clock-cycle synchronous PROFIBUS operation. 10: Special restriction of the drive object violated. 99: Inconsistency of cross drive objects detected. 116: Recommended clock cycle in r0116[0...1].		
<b>Remedy:</b>	Set a valid pulse frequency. See also: p0113 (Minimum pulse frequency, selection)		

---

<b>F01250</b>	<b>CU: CU-EEPROM incorrect read-only data</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE (OFF2)		
<b>Acknowledge:</b>	POWER ON		
<b>Cause:</b>	Error when reading the read-only data of the EEPROM in the Control Unit. Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	- carry out a POWER ON. - replace the Control Unit.		

---

<b>A01251</b>	<b>CU: CU-EEPROM incorrect read-write data</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Error when reading the read-write data of the EEPROM in the Control Unit. Alarm value (r2124, interpret decimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	For alarm value r2124 < 256, the following applies: - carry out a POWER ON. - replace the Control Unit.		



<b>F01303</b>	<b>Component does not support the required function</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A function requested by the Control Unit is not supported by a DRIVE-CLiQ component. Fault value (r0949, interpret decimal): 1: The component does not support the deactivation. 101: The Motor Module does not support an internal armature short-circuit. 102: The Motor Module does not support the deactivation. 201: The Sensor Module does not support actual value inversion (p0410.0 = 1) when using a Hall sensor (p0404.6 = 1) for the commutation. 202: The Sensor Module does not support parking/unparking. 203: The Sensor Module does not support the deactivation. 204: The firmware of this Terminal Module 15 (TM15) does not support the application TM15DI/DO. 205: The Sensor Module does not support the selected temperature evaluation (r0458, r0459). 206: The firmware of this Terminal Modules TM41/TM31/TM15 refers to an old firmware version. It is urgently necessary to upgrade the firmware to ensure disturbance-free operation. 207: The power unit with this hardware version does not support operation with device supply voltages of less than 380 V. 208: The Sensor Module does not support de-selection of commutation with zero mark (via p0430.23). 211: The Sensor Module does not support single-track encoders (r0459.10). 212: The Sensor Module does not support LVDT sensors (p4677.0). 213: The Sensor Module does not support the characteristic type (p4662). 214: The power unit does not support the temperature evaluation via PT1000 (r0193). 215: The Terminal Module does not support the temperature evaluation via PT1000 216: The Voltage Sensing Module (VSM) does not support operation with a PT1000 temperature sensor.
<b>Remedy:</b>	Upgrade the firmware of the DRIVE-CLiQ component involved. For fault value = 205, 214, 215: - check parameter p0600 and p0601 and if required, adapt. For fault value = 207: - replace the power unit or if required set the device supply voltage higher (p0210). For fault value = 208: - check parameter p0430.23 and reset if necessary. For fault value = 216: - check the setting of the sensor type (p3665). - use a Voltage Sensing module that supports operation with PT1000 (MLFB ...-xxx1).
<b>A01304 (F)</b>	<b>Firmware version of DRIVE-CLiQ component is not up-to-date</b>
<b>Message value:</b>	%1
<b>Message class:</b>	General drive fault (19)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The non-volatile memory has a more recent firmware version than the one in the connected DRIVE-CLiQ component. Alarm value (r2124, interpret decimal): Component number of the DRIVE-CLiQ component involved.
<b>Remedy:</b>	Update the firmware (p7828, p7829 and commissioning software).
<b>Reaction upon F:</b>	NONE
<b>Acknowl. upon F:</b>	IMMEDIATELY

<b>F01305</b>	<b>Topology: Component number missing</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The component number from the topology was not parameterized (p0121 (for power unit, refer to p0107), p0131 (for servo/vector drives, refer to p0107), p0141, p0151, p0161). Fault value (r0949, interpret decimal): Data set number. Note: The fault also occurs if encoders have been configured (p0187 to p0189) but no component numbers exist for them. In this case, the fault value includes the drive data set number plus 100 * encoder number (e.g. 3xx, if a component number was not entered in p0141 for encoder 3 (p0189)). See also: p0121, p0131, p0141, p0142, p0151, p0161, p0186, p0187, p0188, p0189
<b>Remedy:</b>	- enter missing component number. - if required, remove the component and restart commissioning. See also: p0121, p0131, p0141, p0142, p0151, p0161, p0186, p0187, p0188, p0189
<b>A01306</b>	<b>Firmware of the DRIVE-CLiQ component being updated</b>
<b>Message value:</b>	%1
<b>Message class:</b>	General drive fault (19)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Firmware update is active for at least one DRIVE-CLiQ component. Alarm value (r2124, interpret decimal): Component number of the DRIVE-CLiQ component.
<b>Remedy:</b>	Not necessary. This alarm automatically disappears after the firmware has been updated.
<b>A01314</b>	<b>Topology: Component must not be present</b>
<b>Message value:</b>	%1, to %2, %3, connection: %4
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	For a component, "deactivate and not present" is set but this component is still in the topology. Alarm value (r2124, interpret hexadecimal): ddccbbaa hex: aa = component number bb = component class of the component cc = connection number Note: Component class and connection number are described in F01375.
<b>Remedy:</b>	- remove the corresponding component. - change the setting "deactivate and not present". Note: Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison). See also: p0105, p0125, p0145, p0155

<b>A01317 (N)</b>	<b>Deactivated component again present</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	If a component of the target topology for an active drive object is inserted and the associated parameter of the component is set to "deactivate" (p0125, p0145, p0155, p0165). Note: This is the only message that is displayed for a deactivated component.
<b>Remedy:</b>	The alarm automatically disappears again with the following actions: - activate the components involved (p0125 = 1, p0145 = 1, p0155 = 1, p0165 = 1). - again withdraw the component involved. See also: p0125 (Activate/deactivate power unit components), p0145 (Activate/deactivate encoder interface), p0155 (Voltage Sensing Module activate/deactivate)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>A01318</b>	<b>BICO: Deactivated interconnections present</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	This alarm is used in the following cases: - if an inactive/non-operational drive object is active again/ready for operation - if there are items in the list of BI/CI parameters (r9498[0...29], r9499[0...29]) - if the BICO interconnections saved in the list of BI/CI parameters (r9498[0...29], r9499[0...29]) have actually been changed
<b>Remedy:</b>	Reset alarm: - set p9496 to 1 or 2 or - deactivate the drive object again.
<b>A01319</b>	<b>Inserted component not initialized</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, HUB, TB30, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Initialization is required for at least one inserted component. This is only possible if the pulses are inhibited for all the drive objects.
<b>Remedy:</b>	Activate pulse inhibit for all drive objects.

---

**A01320 Topology: Drive object number does not exist in configuration**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** A drive object number is missing in p0978  
Alarm value (r2124, interpret decimal):  
Index of p0101 under which the missing drive object number can be determined.  
**Remedy:** Set p0009 to 1 and change p0978:  
Rules:  
- p0978 must include all of the drive object numbers (p0101).  
- it is not permissible for a drive object number to be repeated.  
- by entering a 0, the drive objects with PZD are separated from those without PZD.  
- only 2 partial lists are permitted. After the second 0, all values must be 0.  
- dummy drive object numbers (255) are only permitted in the first partial list.

---

**A01321 Topology: Drive object number does not exist in configuration**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** p0978 contains a drive object number that does not exist.  
Alarm value (r2124, interpret decimal):  
Index of p0978 under which the drive object number can be determined.  
**Remedy:** Set p0009 to 1 and change p0978:  
Rules:  
- p0978 must include all of the drive object numbers (p0101).  
- it is not permissible for a drive object number to be repeated.  
- by entering a 0, the drive objects with PZD are separated from those without PZD.  
- only 2 partial lists are permitted. After the second 0, all values must be 0.  
- dummy drive object numbers (255) are only permitted in the first partial list.

---

**A01322 Topology: Drive object number present twice in configuration**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** A drive object number is present more than once in p0978.  
Alarm value (r2124, interpret decimal):  
Index of p0978 under which the involved drive object number is located.  
**Remedy:** Set parameter p0009 = 1 and change p0978:  
Rules:  
- p0978 must include all of the drive object numbers (p0101).  
- it is not permissible for a drive object number to be repeated.  
- by entering a 0, the drive objects with PZD are separated from those without PZD.  
- only 2 partial lists are permitted. After the second 0, all values must be 0.  
- dummy drive object numbers (255) are only permitted in the first partial list.

---

<b>A01323</b>	<b>Topology: More than two partial lists created</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Partial lists are available more than twice in p0978. After the second 0, all must be 0. Alarm value (r2124, interpret decimal): Index of p0978 under which the illegal value is located.		
<b>Remedy:</b>	Set p0009 to 1 and change p0978: Rules: <ul style="list-style-type: none"><li>- p0978 must include all of the drive object numbers (p0101).</li><li>- it is not permissible for a drive object number to be repeated.</li><li>- by entering a 0, the drive objects with PZD are separated from those without PZD.</li><li>- only 2 partial lists are permitted. After the second 0, all values must be 0.</li><li>- dummy drive object numbers (255) are only permitted in the first partial list.</li></ul>		

---

<b>A01324</b>	<b>Topology: Dummy drive object number incorrectly created</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	In p0978, dummy drive object numbers (255) are only permitted in the first partial list. Alarm value (r2124, interpret decimal): Index of p0978 under which the illegal value is located.		
<b>Remedy:</b>	Set p0009 to 1 and change p0978: Rules: <ul style="list-style-type: none"><li>- p0978 must include all of the drive object numbers (p0101).</li><li>- it is not permissible for a drive object number to be repeated.</li><li>- by entering a 0, the drive objects with PZD are separated from those without PZD.</li><li>- only 2 partial lists are permitted. After the second 0, all values must be 0.</li><li>- dummy drive object numbers (255) are only permitted in the first partial list.</li></ul>		

---

<b>F01325</b>	<b>Topology: Component number not present in target topology</b>		
<b>Message value:</b>	Component number: %1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The component configured in a parameter (e.g. p0121, p0131, etc.) is not present in the target topology. Fault value (r0949, interpret decimal): Configured component number that is not present in target topology.		
<b>Remedy:</b>	Establish topology and DO configuration consistency.		

---

**A01330****Topology: Quick commissioning not possible**

<b>Message value:</b>	Fault cause: %1, supplementary information: %2, preliminary component number: %3		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Unable to carry out a quick commissioning. The existing actual topology does not fulfill the requirements.		

Alarm value (r2124, interpret hexadecimal):

ccccbbaa hex: cccc = preliminary component number, bb = supplementary information, aa = fault cause  
aa = 01 hex = 1 dec:

On one component illegal connections were detected.

- bb = 01 hex = 1 dec: For a Motor Module, more than one motor with DRIVE-CLiQ was detected.

- bb = 02 hex = 2 dec: For a motor with DRIVE-CLiQ, the DRIVE-CLiQ cable is not connected to a Motor Module.

aa = 02 hex = 2 dec:

The topology contains too many components of a particular type.

- bb = 01 hex = 1 dec: There is more than one master Control Unit.

- bb = 02 hex = 2 dec: There is more than 1 infeed (8 for a parallel circuit configuration).

- bb = 03 hex = 3 dec: There are more than 10 Motor Modules (8 for a parallel circuit configuration).

- bb = 04 hex = 4 dec: There are more than 9 encoders.

- bb = 05 hex = 5 dec: There are more than 8 Terminal Modules.

- bb = 07 hex = 7 dec: Unknown component type

- bb = 08 hex = 8 dec: There are more than 6 drive slaves.

- bb = 09 hex = 9 dec: Connection of a drive slave not permitted.

- bb = 0a hex = 10 dec: There is no drive master.

- bb = 0b hex = 11 dec: There is more than one motor with DRIVE-CLiQ for a parallel circuit.

- bb = 0c hex = 12 dec: Different power units are being used in a parallel connection.

- cccc: Not used.

aa = 03 hex = 3 dec:

More than 16 components are connected at a DRIVE-CLiQ socket of the Control Unit.

- bb = 0, 1, 2, 3 means e.g. detected at the DRIVE-CLiQ socket X100, X101, X102, X103.

- cccc: Not used.

aa = 04 hex = 4 dec:

The number of components connected one after the other is greater than 125.

- bb: Not used.

- cccc = preliminary component number of the first component and component that resulted in the fault.

aa = 05 hex = 5 dec:

The component is not permissible for SERVO.

- bb = 01 hex = 1 dec: SINAMICS G available.

- bb = 02 hex = 2 dec: Chassis available.

- cccc = preliminary component number of the first component and component that resulted in the fault.

aa = 06 hex = 6 dec:

On one component illegal EEPROM data was detected. These must be corrected before the system continues to boot.

- bb = 01 hex = 1 dec: The Article No. [MLFB] of the power unit that was replaced includes a space retainer. The space retainer (\*) must be replaced by a correct character.

- cccc = preliminary component number of the component with illegal EEPROM data.

aa = 07 hex = 7 dec:

The actual topology contains an illegal combination of components.

- bb = 01 hex = 1 dec: Active Line Module (ALM) and Basic Line Module (BLM).

- bb = 02 hex = 2 dec: Active Line Module (ALM) and Smart Line Module (SLM).

- bb = 03 hex = 3 dec: SIMOTION control (e.g. SIMOTION D445) and SINUMERIK component (e.g. NX15).

- bb = 04 hex = 4 dec: SINUMERIK control (e.g. SINUMERIK 730.net) and SIMOTION component (e.g. CX32).

- cccc: Not used.

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Note:**

Connection type and connection number are described in F01375.

See also: p0097 (Select drive object type), r0098 (Actual device topology), p0099 (Device target topology)

**Remedy:**

- adapt the output topology to the permissible requirements.
  - carry out commissioning using the commissioning software.
  - for motors with DRIVE-CLiQ, connect the power and DRIVE-CLiQ cable to the same Motor Module (Single Motor Module: DRIVE-CLiQ at X202, Double Motor Module: DRIVE-CLiQ from motor 1 (X1) to X202, from motor 2 (X2) to X203).
- For aa = 06 hex = 6 dec and bb = 01 hex = 1 dec:  
Correct the Article No. when commissioning using the commissioning software.  
See also: p0097 (Select drive object type), r0098 (Actual device topology), p0099 (Device target topology)

---

#### A01331

#### **Topology: At least one component not assigned to a drive object**

**Message value:**

Component number: %1

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

All objects

**Component:**

None

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

NONE

**Cause:**

At least one component is not assigned to a drive object.

- when commissioning, a component was not able to be automatically assigned to a drive object.
- the parameters for the data sets are not correctly set.

Alarm value (r2124, interpret decimal):

Component number of the unassigned component.

**Remedy:**

This component is assigned to a drive object.

Check the parameters for the data sets.

Examples:

- power unit (p0121).
- motor (p0131, p0186).
- encoder interface (p0140, p0141, p0187 ... p0189).
- encoder (p0140, p0142, p0187 ... p0189).
- Terminal Module (p0151).
- option board (p0161).

---

#### F01340

#### **Topology: Too many components on one line**

**Message value:**

Component number or connection number: %1, fault cause: %2

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

All objects

**Component:**

None

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

IMMEDIATELY

**Cause:**

For the selected communications clock cycle, too many DRIVE-CLiQ components are connected to one line of the Control Unit.

Fault value (r0949, interpret hexadecimal):

xyy hex: x = fault cause, yy = component number or connection number.

1yy:

The communications clock cycle of the DRIVE-CLiQ connection on the Control Unit is not sufficient for all read transfers.

2yy:

The communications clock cycle of the DRIVE-CLiQ connection on the Control Unit is not sufficient for all write transfers.

3yy:

Cyclic communication is fully utilized.

4yy:  
The DRIVE-CLiQ cycle starts before the earliest end of the application. An additional dead time must be added to the control. Sign-of-life errors can be expected.

The conditions of operation with a current controller sampling time of 31.25 µs have not been maintained.

5yy:  
Internal buffer overflow for net data of a DRIVE-CLiQ connection.

6yy:  
Internal buffer overflow for receive data of a DRIVE-CLiQ connection.

7yy:  
Internal buffer overflow for send data of a DRIVE-CLiQ connection.

8yy:  
The component clock cycles cannot be combined with one another

900:  
The lowest common multiple of the clock cycles in the system is too high to be determined.

901:  
The lowest common multiple of the clock cycles in the system cannot be generated with the hardware.

**Remedy:**

- check the DRIVE-CLiQ wiring.
  - reduce the number of components on the DRIVE-CLiQ line involved and distribute these to other DRIVE-CLiQ sockets of the Control Unit. This means that communication is uniformly distributed over several lines.
- For fault value = 1yy - 4yy in addition:
- increase the sampling times (p0112, p0115, p4099). If necessary, for DCC or FBLOCKS, change the assignment of the run-time group (p21000, p20000) so that the sampling time (r21001, r20001) is increased.
  - if necessary, reduce the number of cyclically calculated blocks (DCC) and/or function blocks (FBLOCKS).
  - reduce the function modules (r0108).
  - establish the conditions for operation with a current controller sampling time of 31.25 µs (at the DRIVE-CLiQ line, only operate Motor Modules and Sensor Modules with this sampling time and only use a permitted Sensor Module (e.g. SMC20, this means a 3 at the last position of the Article No.)).
  - For an NX, the corresponding Sensor Module for a possibly existing second measuring system should be connected to a free DRIVE-CLiQ socket of the NX.
- For fault value = 8yy in addition:
- check the clock cycles settings (p0112, p0115, p4099). Clock cycles on a DRIVE-CLiQ line must be perfect integer multiples of one another. As clock cycle on a line, all clock cycles of all drive objects in the previously mentioned parameters apply, which have components on the line involved.
- For fault value = 9yy in addition:
- check the clock cycles settings (p0112, p0115, p4099). The lower the numerical value difference between two clock cycles, the higher the lowest common multiple. This behavior has a significantly stronger influence, the higher the numerical values of the clock cycles.

---

<b>F01341</b>	<b>Topology: Maximum number of DRIVE-CLiQ components exceeded</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	Too many DRIVE-CLiQ components were defined in the actual topology.		
	Note:		
	Pulse enable is withdrawn and prevented.		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the DRIVE-CLiQ wiring.</li> <li>- reduce the number components on the DRIVE-CLiQ line involved in order to maintain the maximum quantity structure.</li> </ul>		







For fault cause = 3, 4, 5:  
Establish a valid combination.  
For fault cause = 6, 7:  
Connect the expansion module directly to a permitted Control Unit.  
For fault cause = 8:  
Remove component or use a permissible component.  
For fault cause = 9:  
Upgrade the firmware of the Control Unit to a later version.  
For fault cause = 10, 11:  
Reduce the number of components.

---

<b>A01361</b>	<b>Topology: Actual topology contains SINUMERIK and SIMOTION components</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>The detected actual topology contains SINUMERIK and SIMOTION components. The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled. Alarm value (r2124, interpret hexadecimal): ddccbbaa hex: cc = fault cause, bb = component class of the actual topology, aa = component number of the component cc = 01 hex = 1 dec: An NX10 or NX15 was connected to a SIMOTION control. cc = 02 hex = 2 dec: A CX32 was connected to a SINUMERIK control.</p>		
<b>Remedy:</b>	<p>For alarm value = 1: Replace all NX10 or NX15 by a CX32. For alarm value = 2: Replace all CX32 by an NX10 or NX15.</p>		

---

<b>A01362</b>	<b>Topology: Topology rule(s) broken</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>At least one topology rule for the SINAMICS S120 Combi has been broken. In the event of a fault, the ramping up of the drive system is aborted and closed-loop drive control is not enabled. Alarm value (r2124, interpret decimal): The alarm value indicates which rule has been violated.</p> <ol style="list-style-type: none"> <li>1: The S120 Combi may only be wired via DRIVE-CLiQ socket X200 to X100 on the NCU.</li> <li>2: Only one Single Motor Module (SMM) or one Double Motor Module (DMM) may be connected via X200 to the DRIVE-CLiQ socket X101 on the NCU.</li> <li>3: Only one Terminal Module 54F (TM54F) or one DRIVE-CLiQ Hub Module (hub) may be connected via X500 to the DRIVE-CLiQ socket X102 on the NCU.</li> <li>4: Only Sensor Modules may be connected to DRIVE-CLiQ sockets X201 up to X203 (3-axis) or X204 (4-axis) on the S120 Combi.</li> <li>5: Only one Sensor Module, type SMC20 or SME20 may be connected to DRIVE-CLiQ socket X205 (X204 is not available for 3-axis).</li> <li>6: If a Single Motor Module is being used as the first expansion axis, only one more Single Motor Module may be connected (via X200 to X201 on the first Single Motor Module).</li> <li>7: Only Sensor Modules may be connected to the corresponding DRIVE-CLiQ socket X202 on any Single Motor Modules which may be present.</li> </ol>		

## 4 Faults and alarms

### 4.2 List of faults and alarms

8: For a second Single Motor Module or for a Double Motor Module, it is not permissible to connect anything at X201.  
9: If a Double Motor Module is used as an expansion axis, only Sensor Modules may be connected to X202 and X203.

10: If a Terminal Module 54F (TM54F) is configured, only one DRIVE-CLiQ Hub Module (DMC20, DME20) may be connected to X501 of the TM54F module via DRIVE-CLiQ socket X500.

11: On the DRIVE-CLiQ Hub Module, only Sensor Modules Cabinet (SMC) and Sensor Modules External (SME) may be connected to X501 through X505.

12: Only certain Motor Modules may be used for expansion axes.

13: For an S120 Combi with 3 axes, nothing must be connected at the DRIVE-CLiQ Hub Module at X503.

**Remedy:** Evaluate the alarm value and ensure compliance with the corresponding topology rule(s).

---

#### F01375

#### Topology: Connection duplicated between two components

**Message value:** Component: %1, %2, connection: %3

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY

**Cause:** When checking the actual topology, a ring-type connection was detected.

The fault value describes a component contained in the ring.

Fault value (r0949, interpret hexadecimal):

ccbbaaaa hex:

cc = connection number (%3)

bb = component class (% 2)

aaaa = preliminary component number (%1)

Component class:

0: Component unknown.

1: Control Unit

2: Motor Module

3: Line Module

4: Sensor Module

5: Voltage Sensing Module

6: Terminal Module

7: DRIVE-CLiQ Hub Module

8: Controller Extension

9: Filter Module

10: Hydraulic Module.

49: DRIVE-CLiQ component

50: Option slot

60: Encoder

70: DRIVE-CLiQ motor

71: Hydraulic cylinder

72: Hydraulic valve

80: Motor

Connection number:

0: Port 0, 1: Port 1, 2: Port 2, 3: Port 3, 4: Port 4, 5: Port 5

10: X100, 11: X101, 12: X102, 13: X103, 14: X104, 15: X105

20: X200, 21: X201, 22: X202, 23: X203

50: X500, 51: X501, 52: X502, 53: X503, 54: X504, 55: X505

**Remedy:** Output the fault value and remove the specified connection.

Note:

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

<b>F01380</b>	<b>Topology: Actual topology EEPROM defective</b>
<b>Message value:</b>	Preliminary component number: %1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	When detecting the actual topology, a component with a defective EEPROM was detected. Fault value (r0949, interpret hexadecimal): bbbbaaaa hex: bbbb = reserved aaaa = preliminary component number of the defective components
<b>Remedy:</b>	Output the fault value and remove the defected component.
<b>A01381</b>	<b>Topology: power unit incorrectly inserted</b>
<b>Message value:</b>	Component: %1, to %2, %3, connection: %4
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	CU_G130_DP, CU_G130_PN, CU_G150_DP, CU_G150_PN, ENC, HUB, TB30, TM120, TM150, TM31, TM54F_MA, TM54F_SL
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The topology comparison has detected a power unit in the actual topology that has been incorrectly inserted. Alarm value (r2124, interpret hexadecimal): ddccbbaa hex: dd = connection number (%4) cc = component number (%3) bb = component class (% 2) aa = component number of the incorrectly inserted component (% 1) Note: The component is described in dd, cc and bb, where the component involved is incorrectly inserted. Component class and connection number are described in F01375. The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.
<b>Remedy:</b>	Adapting topologies: - insert the components involved at the right connection (correct the actual topology). - adapt the project/parameterization in the commissioning software (correct the target topology). - automatically remove the topology error (p9904). Note: Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).
<b>A01381</b>	<b>Topology: Motor Module incorrectly inserted</b>
<b>Message value:</b>	Component: %1, to %2, %3, connection: %4
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The topology comparison has detected a Motor Module in the actual topology that has been incorrectly inserted with respect to the target technology. Alarm value (r2124, interpret hexadecimal): ddccbbaa hex: dd = connection number (%4) cc = component number (%3)

## 4 Faults and alarms

### 4.2 List of faults and alarms

bb = component class (% 2)

aa = component number of the incorrectly inserted component (% 1)

Note:

The component is described in dd, cc and bb, where the component involved is incorrectly inserted.

Component class and connection number are described in F01375.

The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.

#### Remedy:

Adapting topologies:

- insert the components involved at the right connection (correct the actual topology).
- adapt the project/parameterization in the commissioning software (correct the target topology).
- automatically remove the topology error (p9904).

Note:

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

#### A01381

#### Topology: Line Module incorrectly inserted

**Message value:**

Component: %1, to %2, %3, connection: %4

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

B\_INF

**Component:**

None

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

NONE

**Cause:**

The topology comparison has detected a Line Module in the actual topology that has been incorrectly inserted with respect to the target technology.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

dd = connection number (%4)

cc = component number (%3)

bb = component class (% 2)

aa = component number of the incorrectly inserted component (% 1)

Note:

The component is described in dd, cc and bb, where the component involved is incorrectly inserted.

Component class and connection number are described in F01375.

The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.

#### Remedy:

Adapting topologies:

- insert the components involved at the right connection (correct the actual topology).
- adapt the project/parameterization in the commissioning software (correct the target topology).
- automatically remove the topology error (p9904).

Note:

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

#### A01382

#### Topology: Sensor Module incorrectly inserted

**Message value:**

Component: %1, to %2, %3, connection: %4

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

All objects

**Component:**

None

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

NONE

**Cause:**

The topology comparison has detected a Sensor Module in the actual topology that has been incorrectly inserted with respect to the target technology.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

dd = connection number (%4)

cc = component number (%3)

bb = component class (% 2)

aa = component number of the incorrectly inserted component (% 1)

Note:  
The component is described in dd, cc and bb, where the component involved is incorrectly inserted.  
Component class and connection number are described in F01375.  
The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.

**Remedy:**

Adapting topologies:  
- insert the components involved at the right connection (correct the actual topology).  
- adapt the project/parameterization in the commissioning software (correct the target topology).  
- automatically remove the topology error (p9904).

Note:  
Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

**A01383**

**Topology: Terminal Module incorrectly inserted**

**Message value:** Component: %1, to %2, %3, connection: %4  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The topology comparison has detected a Terminal Module in the actual topology that has been incorrectly inserted with respect to the target technology.

Alarm value (r2124, interpret hexadecimal):  
ddccbbaa hex:  
dd = connection number (%4)  
cc = component number (%3)  
bb = component class (% 2)  
aa = component number of the incorrectly inserted component (% 1)

Note:  
The component is described in dd, cc and bb, where the component involved is incorrectly inserted.  
Component class and connection number are described in F01375.  
The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.

**Remedy:**

Adapting topologies:  
- insert the components involved at the right connection (correct the actual topology).  
- adapt the project/parameterization in the commissioning software (correct the target topology).  
- automatically remove the topology error (p9904).

Note:  
Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

**A01384**

**Topology: DRIVE-CLiQ Hub Module incorrectly inserted**

**Message value:** Component: %1, to %2, %3, connection: %4  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The topology comparison has detected a DRIVE-CLiQ Hub Module in the actual topology that has been incorrectly inserted with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):  
ddccbbaa hex:  
dd = connection number (%4)  
cc = component number (%3)  
bb = component class (% 2)  
aa = component number of the incorrectly inserted component (% 1)

Note:

The component is described in dd, cc and bb, where the component involved is incorrectly inserted.

Component class and connection number are described in F01375.

The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.

**Remedy:**

Adapting topologies:

- insert the components involved at the right connection (correct the actual topology).
- adapt the project/parameterization in the commissioning software (correct the target topology).
- automatically remove the topology error (p9904).

Note:

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

**A01385**

**Topology: Controller Extension incorrectly inserted**

**Message value:**

Component: %1, to %2, %3, connection: %4

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

All objects

**Component:**

None

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

NONE

**Cause:**

The topology comparison has detected a controller extension 32 (CX32) in the actual topology that has been incorrectly inserted with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

dd = connection number (%4)

cc = component number (%3)

bb = component class (% 2)

aa = component number of the incorrectly inserted component (% 1)

Note:

The component is described in dd, cc and bb, where the component involved is incorrectly inserted.

Component class and connection number are described in F01375.

The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.

**Remedy:**

Adapting topologies:

- insert the components involved at the right connection (correct the actual topology).
- adapt the project/parameterization in the commissioning software (correct the target topology).
- automatically remove the topology error (p9904).

Note:

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

**A01386**

**Topology: DRIVE-CLiQ component incorrectly inserted**

**Message value:**

Component: %1, to %2, %3, connection: %4

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

All objects

**Component:**

None

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

NONE

**Cause:**

The topology comparison has detected a DRIVE-CLiQ component in the actual topology that has been incorrectly inserted with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

dd = connection number (%4)

cc = component number (%3)

bb = component class (% 2)

aa = component number of the incorrectly inserted component (% 1)

Note:  
The component is described in dd, cc and bb, where the component involved is incorrectly inserted.  
Component class and connection number are described in F01375.  
The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.

**Remedy:**

Adapting topologies:  
- insert the components involved at the right connection (correct the actual topology).  
- adapt the project/parameterization in the commissioning software (correct the target topology).  
- automatically remove the topology error (p9904).

Note:  
Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

**A01389**

**Topology: Motor with DRIVE-CLiQ incorrectly inserted**

**Message value:** Component: %1, to %2, %3, connection: %4  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The topology comparison has detected a motor with DRIVE-CLiQ in the actual topology that has been incorrectly inserted with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):  
 ddccbbaa hex:  
 dd = connection number (%4)  
 cc = component number (%3)  
 bb = component class (% 2)  
 aa = component number of the incorrectly inserted component (% 1)

Note:  
The component is described in dd, cc and bb, where the component involved is incorrectly inserted.  
Component class and connection number are described in F01375.  
The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.

**Remedy:**

Adapting topologies:  
- insert the components involved at the right connection (correct the actual topology).  
- adapt the project/parameterization in the commissioning software (correct the target topology).  
- automatically remove the topology error (p9904).

Note:  
Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

**A01416**

**Topology: Component additionally inserted**

**Message value:** %1, to %2, %3, connection: %4  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The topology comparison has found a component in the actual topology which is not specified in the target topology.

Alarm value (r2124, interpret hexadecimal):  
 ddccbbaa hex:  
 dd = component class (% 2)  
 cc = connection number (%4)  
 bb = component class of the additional component (%1)  
 aa = component number (%3)

## 4 Faults and alarms

### 4.2 List of faults and alarms

Note:

The component class of the additional component is contained in bb.

The component is described in dd, cc and aa, where the additional component is inserted.

Component class and connection number are described in F01375.

**Remedy:**

Adapting topologies:

- remove the additional component (correct the actual topology).
- adapt the project/parameterization in the commissioning software (correct the target topology).

Note:

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

#### A01420

#### Topology: Component different

**Message value:**

Component: %1, Soll: %2, actual: %3, difference: %4

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

All objects

**Component:**

None

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

NONE

**Cause:**

The topology comparison has detected differences in the actual topology and target topologies in the electronic rating plate.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex: aa = component number (%1), bb = component class of the target topology (%2), cc = component class of the actual topology (%3), dd = difference (%4)

dd = 01 hex = 1 dec:

Different component type.

dd = 02 hex = 2 dec:

Different article number.

dd = 03 hex = 3 dec:

Different manufacturer.

dd = 04 hex = 4 dec:

For a multi-component slave, the incorrect subcomponent (index) is connected (e.g. Double Motor Module X201 instead of X200) - or only a part of a multi-component slave is set to "deactivate and not available".

dd = 05 hex = 5 dec:

NX10 or NX15 used instead of CX32.

dd = 06 hex = 6 dec:

NX10 or NX15 used instead of CX32.

dd = 07 hex = 7 dec:

Different number of connections.

Note:

The component class is described in F01375.

The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.

**Remedy:**

Adapting topologies:

- connect the expected component (correct the actual topology).
- adapt the project/parameterization in the commissioning software (correct the target topology).

Topology comparison - if required, adapt the comparison level:

- parameterize the topology comparison of all components (p9906).
- parameterize the topology comparison of one components (p9907, p9908).

Note:

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

<b>A01425</b>	<b>Topology: Serial number different</b>		
<b>Message value:</b>	Component: %1, %2, differences: %3		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The topology comparison has detected differences in the actual and target topologies in relation to one component. The serial number is different. Alarm value (r2124, interpret hexadecimal): ddccbbaa hex: dd = reserved cc = number of differences (%3) bb = component class (% 2) aa = component number (%1) Note: The component class is described in F01375. The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.		
<b>Remedy:</b>	Adapting topologies: - change over the actual topology to match the target topology. - download the target topology that matches the actual topology (commissioning software). For byte cc: cc = 1 --> can be acknowledged using p9904 or p9905. cc > 1 --> can be acknowledged using p9905 and can be deactivated using p9906 or p9907/p9908. Note: Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison). See also: p9904 (Topology comparison acknowledge differences), p9905 (Device specialization), p9906 (Topology comparison comparison stage of all components), p9907 (Topology comparison comparison stage of the component number), p9908 (Topology comparison comparison stage of a component)		

---

<b>A01428</b>	<b>Topology: Incorrect connection used</b>		
<b>Message value:</b>	Component: %1, %2, connection (actual): %3, connection (target): %4		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The topology comparison has detected differences in the actual and target topologies in relation to one component. For a component, another connection was used. The different connections of a component are described in the alarm value. Alarm value (r2124, interpret hexadecimal): ddccbbaa hex: dd = connection number of the target topology (%4) cc = connection number of the actual topology (%3) bb = component class (% 2) aa = component number (%1) Note: Component class and connection number are described in F01375. The drive system is no longer booted. In this state, the drive control (closed-loop) cannot be enabled.		
<b>Remedy:</b>	Adapting topologies: - reinsert the DRIVE-CLiQ cable to the component (correct the actual topology). - adapt the project/parameterization in the commissioning software (correct the target topology). - automatically remove the topology error (p9904).		

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Note:**

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

See also: p9904 (Topology comparison acknowledge differences)

---

<b>F01451</b>	<b>Topology: Target topology is invalid</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	An error was detected in the target topology. The target topology is invalid. Fault value (r0949, interpret hexadecimal): ccccbbaa hex: cccc = index error, bb = component number, aa = fault cause aa = 1B hex = 27 dec: Error not specified. aa = 1C hex = 28 dec: Value illegal. aa = 1D hex = 29 dec: Incorrect ID. aa = 1E hex = 30 dec: Incorrect ID length. aa = 1F hex = 31 dec: Too few indices left. aa = 20 hex = 32 dec: component not connected to Control Unit.		
<b>Remedy:</b>	Reload the target topology using the commissioning software.		

---

<b>A01481 (N)</b>	<b>Topology: power unit not connected</b>		
<b>Message value:</b>	Component: %1, to %2, %3, connection: %4		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	CU_G130_DP, CU_G130_PN, CU_G150_DP, CU_G150_PN, ENC, HUB, TB30, TM120, TM150, TM31, TM54F_MA, TM54F_SL		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The topology comparison has detected a power unit that is missing in the actual topology with respect to the target topology. Alarm value (r2124, interpret hexadecimal): ddccbbaa hex: dd = connection number (%4) cc = component number (%3) bb = component class (% 2) aa = component number of the component that has not been inserted (% 1) Note: The component is described in dd, cc and bb, where the component has not been inserted. Component class and connection number are described in F01375.		
<b>Remedy:</b>	Adapting topologies: - insert the components involved at the right connection (correct the actual topology). - adapt the project/parameterization in the commissioning software (correct the target topology). Check the hardware: - check the 24 V supply voltage. - check DRIVE-CLiQ cables for interruption and contact problems. - check that the component is working properly. Note: Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

<b>A01481 (N)</b>	<b>Topology: Motor Module not connected</b>
<b>Message value:</b>	Component: %1, to %2, %3, connection: %4
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The topology comparison has detected a Motor Module that is missing in the actual topology with respect to the target topology. Alarm value (r2124, interpret hexadecimal): ddccbbaa hex: dd = connection number (%4) cc = component number (%3) bb = component class (% 2) aa = component number of the component that has not been inserted (% 1) Note: The component is described in dd, cc and bb, where the component has not been inserted. Component class and connection number are described in F01375.
<b>Remedy:</b>	Adapting topologies: - insert the components involved at the right connection (correct the actual topology). - adapt the project/parameterization in the commissioning software (correct the target topology). Check the hardware: - check the 24 V supply voltage. - check DRIVE-CLiQ cables for interruption and contact problems. - check that the component is working properly. Note: Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).
Reaction upon N:	NONE
Acknowl. upon N:	NONE

<b>A01481 (N)</b>	<b>Topology: Line Module not connected</b>
<b>Message value:</b>	Component: %1, to %2, %3, connection: %4
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF
<b>Component:</b>	None <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The topology comparison has detected a Line Module that is missing in the actual topology with respect to the target topology. Alarm value (r2124, interpret hexadecimal): ddccbbaa hex: dd = connection number (%4) cc = component number (%3) bb = component class (% 2) aa = component number of the component that has not been inserted (% 1) Note: The component is described in dd, cc and bb, where the component has not been inserted. Component class and connection number are described in F01375.
<b>Remedy:</b>	Adapting topologies: - insert the components involved at the right connection (correct the actual topology). - adapt the project/parameterization in the commissioning software (correct the target topology).

Check the hardware:

- check the 24 V supply voltage.
- check DRIVE-CLiQ cables for interruption and contact problems.
- check that the component is working properly.

Note:

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **A01482**

#### **Topology: Sensor Module not connected**

**Message value:** Component: %1, to %2, %3, connection: %4

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The topology comparison has detected a Sensor Module that is missing in the actual topology with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

dd = connection number (%4)

cc = component number (%3)

bb = component class (% 2)

aa = component number of the component that has not been inserted (% 1)

Note:

The component is described in dd, cc and bb, where the component has not been inserted.

Component class and connection number are described in F01375.

**Remedy:**

Adapting topologies:

- insert the components involved at the right connection (correct the actual topology).
- adapt the project/parameterization in the commissioning software (correct the target topology).

Check the hardware:

- check the 24 V supply voltage.
- check DRIVE-CLiQ cables for interruption and contact problems.
- check that the component is working properly.

Note:

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

#### **A01483**

#### **Topology: Terminal Module not connected**

**Message value:** Component: %1, to %2, %3, connection: %4

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The topology comparison has detected a Terminal Module that is missing in the actual topology with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

dd = connection number (%4)

cc = component number (%3)

bb = component class (% 2)

aa = component number of the component that has not been inserted (% 1)

Note:

The component is described in dd, cc and bb, where the component has not been inserted.  
Component class and connection number are described in F01375.

**Remedy:**

Adapting topologies:

- insert the components involved at the right connection (correct the actual topology).
- adapt the project/parameterization in the commissioning software (correct the target topology).

Check the hardware:

- check the 24 V supply voltage.
- check DRIVE-CLiQ cables for interruption and contact problems.
- check that the component is working properly.

Note:

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

**A01484**

**Topology: DRIVE-CLiQ Hub Module not connected**

**Message value:**

Component: %1, to %2, %3, connection: %4

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

All objects

**Component:**

None

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

NONE

**Cause:**

The topology comparison has detected a DRIVE-CLiQ Hub Module missing in the actual topology with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

dd = connection number (%4)

cc = component number (%3)

bb = component class (% 2)

aa = component number of the component that has not been inserted (% 1)

Note:

The component is described in dd, cc and bb, where the component has not been inserted.  
Component class and connection number are described in F01375.

**Remedy:**

Adapting topologies:

- insert the components involved at the right connection (correct the actual topology).
- adapt the project/parameterization in the commissioning software (correct the target topology).

Check the hardware:

- check the 24 V supply voltage.
- check DRIVE-CLiQ cables for interruption and contact problems.
- check that the component is working properly.

Note:

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

**A01485**

**Topology: Controller Extension not connected**

**Message value:**

Component: %1, to %2, %3, connection: %4

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

All objects

**Component:**

None

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

NONE

**Cause:**

The topology comparison has detected a Control Extension (CX32) missing in the actual topology with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

dd = connection number (%4)

cc = component number (%3)

## 4 Faults and alarms

### 4.2 List of faults and alarms

bb = component class (% 2)

aa = component number of the component that has not been inserted (% 1)

Note:

The component is described in dd, cc and bb, where the component has not been inserted.

Component class and connection number are described in F01375.

**Remedy:**

Adapting topologies:

- insert the components involved at the right connection (correct the actual topology).
- adapt the project/parameterization in the commissioning software (correct the target topology).

Check the hardware:

- check the 24 V supply voltage.
- check DRIVE-CLiQ cables for interruption and contact problems.
- check that the component is working properly.

Note:

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

#### A01486

#### Topology: DRIVE-CLiQ component not connected

**Message value:**

Component: %1, to %2, %3, connection: %4

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

All objects

**Component:**

None

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

NONE

**Cause:**

The topology comparison has detected a DRIVE-CLiQ component missing in the actual topology with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):

ddccbbaa hex:

dd = connection number (%4)

cc = component number (%3)

bb = component class (% 2)

aa = component number of the component that has not been inserted (% 1)

Note:

The component is described in dd, cc and bb, where the component has not been inserted.

Component class and connection number are described in F01375.

**Remedy:**

Adapting topologies:

- insert the components involved at the right connection (correct the actual topology).
- adapt the project/parameterization in the commissioning software (correct the target topology).

Check the hardware:

- check the 24 V supply voltage.
- check DRIVE-CLiQ cables for interruption and contact problems.
- check that the component is working properly.

Note:

Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

#### A01487

#### Topology: Option slot component not inserted

**Message value:**

Component: %1, to %2, %3, connection: %4

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

All objects

**Component:**

None

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

NONE

**Cause:**

The topology comparison has detected an option slot component missing in the actual topology with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):  
 ddccbbaa hex:  
 dd = connection number (%4)  
 cc = component number (%3)  
 bb = component class (% 2)  
 aa = component number of the component that has not been inserted (% 1)

Note:  
 The component is described in dd, cc and bb, where the component has not been inserted.  
 Component class and connection number are described in F01375.

**Remedy:**

Adapting topologies:  
 - insert the components involved at the right connection (correct the actual topology).  
 - adapt the project/parameterization in the commissioning software (correct the target topology).

Check the hardware:  
 - check the 24 V supply voltage.  
 - check DRIVE-CLiQ cables for interruption and contact problems.  
 - check that the component is working properly.

Note:  
 Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

**A01489**

**Topology: motor with DRIVE-CLiQ not connected**

**Message value:** Component: %1, to %2, %3, connection: %4  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE

**Cause:**

The topology comparison has detected a motor with DRIVE-CLiQ missing in the actual topology with respect to the target topology.

Alarm value (r2124, interpret hexadecimal):  
 ddccbbaa hex:  
 dd = connection number (%4)  
 cc = component number (%3)  
 bb = component class (% 2)  
 aa = component number of the component that has not been inserted (% 1)

Note:  
 The component is described in dd, cc and bb, where the component has not been inserted.  
 Component class and connection number are described in F01375.

**Remedy:**

Adapting topologies:  
 - insert the components involved at the right connection (correct the actual topology).  
 - adapt the project/parameterization in the commissioning software (correct the target topology).

Check the hardware:  
 - check the 24 V supply voltage.  
 - check DRIVE-CLiQ cables for interruption and contact problems.  
 - check that the component is working properly.

Note:  
 Under "Topology --> Topology view" the commissioning software where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

---

<b>A01507 (F, N)</b>	<b>BICO: Interconnections to inactive objects present</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	There are BICO interconnections to an inactive/inoperable drive object. The BI/CI parameters involved are listed in r9498. The associated BO/CO parameters are listed in r9499. The list of the BICO interconnections to other drive objects is displayed in r9491 and r9492 of the deactivated drive object. Note: r9498 and r9499 are only written to, if p9495 is not set to 0. Alarm value (r2124, interpret decimal): Number of BICO interconnections found to inactive drive objects.
<b>Remedy:</b>	- set all open BICO interconnections centrally to the factory setting with p9495 = 2. - make the non-operational drive object active/operational again (re-insert or activate components).
Reaction upon F:	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A01508</b>	<b>BICO: Interconnections to inactive objects exceeded</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The maximum number of BICO interconnections (signal sinks) when deactivating a drive object was exceeded. When deactivating a drive object, all BICO interconnections (signal sinks) are listed in the following parameters: - r9498[0...29]: List of the BI/CI parameters involved. - r9499[0...29]: List of the associated BO/CO parameters.
<b>Remedy:</b>	The alarm automatically disappears as soon as no BICO interconnection (value = 0) is entered in r9498[29] and r9499[29]. Notice: When re-activating the drive object, all BICO interconnections should be checked and if required, re-established.

---

<b>F01510</b>	<b>BICO: Signal source is not float type</b>
<b>Message value:</b>	Parameter: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The requested connector output does not have the correct data type. This interconnection is not established. Fault value (r0949, interpret decimal): Parameter number to which an interconnection should be made (connector output).
<b>Remedy:</b>	Interconnect this connector input with a connector output having a float data type.

---

<b>F01511 (A)</b>	<b>BICO: Interconnection with different scalings</b>
<b>Message value:</b>	Parameter: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The requested BICO interconnection was established. However, a conversion is made between the BICO output and BICO input using the reference values. - the BICO output has different normalized units than the BICO input. - message only for interconnections within a drive object. Example: The BICO output has, as normalized unit, voltage and the BICO input has current. This means that the factor p2002/p2001 is calculated between the BICO output and the BICO input. p2002: contains the reference value for current p2001: contains the reference value for voltage Fault value (r0949, interpret decimal): Parameter number of the BICO input (signal sink).
<b>Remedy:</b>	Not necessary.
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F01512</b>	<b>BICO: No scaling available</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None <b>Propagation:</b> BICO
<b>Reaction:</b>	Vector: OFF2 Infeed: OFF2 (OFF1)
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	An attempt was made to determine a conversion factor for a scaling that does not exist. Fault value (r0949, interpret decimal): Unit (e.g. corresponding to SPEED) for which an attempt was made to determine a factor.
<b>Remedy:</b>	Apply scaling or check the transfer value.

---

<b>F01513 (N, A)</b>	<b>BICO: Interconnection cross DO with different scalings</b>
<b>Message value:</b>	Parameter: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The requested BICO interconnection was established. However, a conversion is made between the BICO output and BICO input using the reference values. An interconnection is made between different drive objects and the BICO output has different normalized units than the BICO input or the normalized units are the same but the reference values are different. Example 1: BICO output with voltage normalized unit, BICO input with current normalized unit, BICO output and BICO input lie in different drive objects. This means that the factor p2002/p2001 is calculated between the BICO output and the BICO input. p2002: contains the reference value for current p2001: contains the reference value for voltage

## 4 Faults and alarms

### 4.2 List of faults and alarms

Example 2:

BICO output with voltage normalized unit in drive object 1 (DO1), BICO input with voltage normalized unit in drive object 2 (DO2). The reference values for voltage (p2001) of the two drive objects have different values. This means that the factor  $p2001(DO1)/p2001(DO2)$  is calculated between the BICO output and the BICO input.

p2001: contains the reference value for voltage, drive objects 1, 2

Fault value (r0949, interpret decimal):

Parameter number of the BICO input (signal sink).

**Remedy:** Not necessary.  
Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

#### **A01514 (F) BICO: Error when writing during a reconnect**

**Message value:** Parameter: %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None **Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** During a reconnect operation (e.g. while booting or downloading - but can also occur in normal operation) a parameter was not able to be written to.

Example:

When writing to BICO input with double word format (DWORD), in the second index, the memory areas overlap (e.g. p8861). The parameter is then reset to the factory setting.

Alarm value (r2124, interpret decimal):

Parameter number of the BICO input (signal sink).

**Remedy:** Not necessary.  
Reaction upon F: NONE  
Acknowl. upon F: IMMEDIATELY

---

#### **F01515 (A) BICO: Writing to parameter not permitted as the master control is active**

**Message value:** -

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY

**Cause:** When changing the number of CDS or when copying from CDS, the master control is active.

**Remedy:** If required, return the master control and repeat the operation.

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **A01590 (F) Drive: Motor maintenance interval expired**

**Message value:** Fault cause: %1 bin

**Message class:** General drive fault (19)

**Drive object:** All objects

**Component:** Motor **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The selected service/maintenance interval for this motor was reached.

Alarm value (r2124, interpret decimal):

Motor data set number.

See also: p0650 (Actual motor operating hours), p0651 (Motor operating hours maintenance interval)

**Remedy:** carry out service/maintenance and reset the service/maintenance interval (p0651).



- 12: SI Safe Brake Adapter relay ON time (p9622[0], p9822[0]).
- 13: SI Safe Brake Adapter relay OFF time (p9622[1], p9822[1]).
- 14: SI PROFIsafe telegram selection (p9611, p9811).
- 15: SI PROFIsafe bus failure response (p9612, p9812).
- 1000: Watchdog timer has expired.
- Within the time of approx. 5 x p9650, alternatively, the following was defined:
- the signal at terminal EP of the Motor Module continually changed with time intervals less than or equal to the discrepancy time (p9650/p9850).
  - via PROFIsafe/TM54F, STO (also as subsequent response) was continually selected and deselected with time intervals less than or equal to the discrepancy time (p9650/p9850).
  - safe pulse cancellation (r9723.9 - also as subsequent response) was continually selected and deselected with time intervals less than or equal to the discrepancy time (p9650/p9850).
- 1001, 1002: Initialization error, change timer / check timer.
- 1900: CRC error in the SAFETY sector.
- 1901: CRC error in the ITCM sector.
- 1902: Overloading in the ITCM sector has occurred in operation.
- 1903: Internal parameterizing error for CRC calculation.
- 1950: Module temperature outside the permissible temperature range.
- 1951: Module temperature not plausible.
- 2000: Status of the STO selection for both monitoring channels different.
- 2001: Feedback signal of STO shutdown for both monitoring channels different.
- 2002: Status of the delay timer SS1 for both monitoring channels different (status of the timer in p9650/p9850).
- 2003: Status of the STO terminal for both monitoring channels different.
- 2004: Status of the STO selection for Motor Modules connected in parallel different.
- 2005: Feedback signal of the safe pulse suppression on the Control Unit and Motor Modules connected in parallel different.
- 6000 ... 6999:
- Error in the PROFIsafe control.
- For these fault values, the failsafe control signals (failsafe values) are transferred to the safety functions. If "STOP B after failure of the PROFIsafe communication" (p9612) is parameterized, the transfer of the failsafe value is delayed.
- 6000: A fatal PROFIsafe communication error has occurred.
- 6064 ... 6071: error when evaluating the F parameter. The values of the transferred F parameters do not match the expected values in the PROFIsafe driver.
- 6064: Destination address and PROFIsafe address are different (F\_Dest\_Add).
- 6065: Destination address not valid (F\_Dest\_Add).
- 6066: Source address not valid (F\_Source\_Add).
- 6067: Watchdog time not valid (F\_WD\_Time).
- 6068: Incorrect SIL level (F\_SIL).
- 6069: Incorrect F-CRC length (F\_CRC\_Length).
- 6070: Incorrect F parameter version (F\_Par\_Version).
- 6071: CRC error for the F parameters (CRC1). The transferred CRC value of the F parameters does not match the value calculated in the PROFIsafe driver.
- 6072: F parameterization is inconsistent.
- 6165: A communications error was identified when receiving the PROFIsafe telegram. The fault may also occur if an inconsistent or out-of-date PROFIsafe telegram has been received after switching the Control Unit off and on or after plugging in the PROFIBUS/PROFINET cable.
- 6166: A time monitoring error (timeout) was identified when receiving the PROFIsafe telegram.

#### Remedy:

- For fault value = 1 ... 5 and 7 ... 999:
- check the cross data comparison that resulted in a STOP F.
  - carry out a POWER ON (switch-off/switch-on) for all components.
  - upgrade the Motor Module software.
  - upgrade the Control Unit software.
- For fault value = 6:
- carry out a POWER ON (switch-off/switch-on) for all components.
  - upgrade the Motor Module software.
  - upgrade the Control Unit software.

For fault value = 1000:

- check the EP terminal at the Motor Module (contact problems).
- PROFIsafe: Remove contact problems/faults at the PROFIBUS master/PROFINET controller.
- check the wiring of the failsafe inputs at the TM54F (contact problems).
- check the discrepancy time, and if required, increase the value (p9650/p9850).

For fault value = 1001, 1002:

- carry out a POWER ON (switch-off/switch-on) for all components.
- upgrade the Motor Module software.
- upgrade the Control Unit software.

For fault value = 1900, 1901, 1902:

- carry out a POWER ON (switch-off/switch-on) for all components.
- upgrade the Control Unit software.
- replace Control Unit.

For fault value = 2000, 2001, 2002, 2003, 2004, 2005:

- check the discrepancy time, and if required, increase the value (p9650/p9850, p9652/p9852).
- check the wiring of the safety-relevant inputs (SGE) (contact problems).
- check the causes of the STO selection in r9772. When the SMM functions are active (p9501 = 1), STO can also be selected using these functions.
- replace the Motor Module involved.

Note:

This fault can be acknowledged after removing the cause of the error and after correct selection/deselection of STO.

For fault value = 6000:

- carry out a POWER ON (switch-off/switch-on) for all components.

Check whether there is a DRIVE-CLiQ communication error between the two monitoring channels and, if required, carry out a diagnostics routine for the faults identified.

- increase the monitoring cycle clock settings (p9500, p9511).
- upgrade firmware to later version.
- contact Technical Support.
- replace the Control Unit.

For fault value = 6064:

- check the setting of the value in the F parameter F\_Dest\_Add at the PROFIsafe slave.
- check the setting of the PROFIsafe address of the Control Unit (p9610) and that of the Motor Module (p9810).

For fault value = 6065:

- check the setting of the value in the F parameter F\_Dest\_Add at the PROFIsafe slave. It is not permissible for the destination address to be either 0 or FFFF!

For fault value = 6066:

- check the setting of the value in the F parameter F\_Source\_Add at the PROFIsafe slave. It is not permissible for the source address to be either 0 or FFFF!

For fault value = 6067:

- check the setting of the value in the F parameter F\_WD\_Time at the PROFIsafe slave. It is not permissible for the watch time to be 0!

For fault value = 6068:

- check the setting of the value in the F parameter F\_SIL at the PROFIsafe slave. The SIL level must correspond to SIL2!

For fault value = 6069:

- check the setting of the value in the F parameter F\_CRC\_Length at the PROFIsafe slave. The setting of the CRC2 length is 2-byte CRC in the V1 mode and 3-byte CRC in the V2 mode!

For fault value = 6070:

- check the setting of the value in the F parameter F\_Par\_Version at the PROFIsafe slave. The value for the F parameter version is 0 in the V1 mode and 1 in the V2 mode!

For fault value = 6071:

- check the settings of the values of the F parameters and the F parameter CRC (CRC1) calculated from these at the PROFIsafe slave and, if required, update.

For fault value = 6072:

- check the settings of the values for the F parameters and, if required, correct.

## 4 Faults and alarms

### 4.2 List of faults and alarms

The following combinations are permissible for F parameters F\_CRC\_Length and F\_Par\_Version:

F\_CRC\_Length = 2-byte CRC and F\_Par\_Version = 0

F\_CRC\_Length = 3-byte CRC and F\_Par\_Version = 1

For fault value = 6165:

- if the fault occurs after powering up the Control Unit or after plugging in the PROFIBUS/PROFINET cable, acknowledge the fault.

- check the configuration and communication at the PROFIsafe slave.

- check the setting of the value for F parameter F\_WD\_Time on the PROFIsafe slave and increase if necessary.

Check whether there is a DRIVE-CLiQ communication error between the two monitoring channels and, if required, carry out a diagnostics routine for the faults identified.

- check whether all F parameters of the drive match the F parameters of the F host.

For fault value = 6166:

- check the configuration and communication at the PROFIsafe slave.

- check the setting of the value for F parameter F\_WD\_Time on the PROFIsafe slave and increase if necessary.

- evaluate diagnostic information in the F host.

- check PROFIsafe connection.

- check whether all F parameters of the drive match the F parameters of the F host.

Note:

CU: Control Unit

EP: Enable Pulses (pulse enable)

ESR: Extended Stop and Retract

MM: Motor Module

SGE: Safety-relevant input

SI: Safety Integrated

SMM: Safe Motion Monitoring

SS1: Safe Stop 1 (corresponds to Stop Category 1 acc. to EN60204)

STO: Safe Torque Off / SH: Safe standstill

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F01612 SI P1 (CU): STO inputs for power units connected in parallel different**

**Message value:** Fault cause: %1 bin

**Message class:** Safety monitoring channel has identified an error (10)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE (OFF1, OFF2, OFF3)

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The drive-integrated "Safety Integrated" function on the Control Unit (CU) has identified different states of the AND'ed STO inputs for power units connected in parallel and has initiated a STOP F.

As a result of this fault, after the parameterized transition has expired (p9658), fault F01600 (SI CU: STOP A initiated) is output.

Fault value (r0949, interpret binary):

Binary image of the digital inputs of the Control Unit that are used as signal source for the function "Safe Torque Off".

**Remedy:** - check the tolerance time SGE changeover and if required, increase the value (p9650).

- check the wiring of the safety-relevant inputs (SGE) (contact problems).

Note:

CU: Control Unit

SGE: Safety-relevant input

SI: Safety Integrated

STO: Safe Torque Off / SH: Safe standstill

---

<b>N01620 (F, A)</b>	<b>SI P1 (CU): Safe Torque Off active</b>
<b>Message value:</b>	-
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The "Safe Torque Off" (STO) function of the basic functions has been selected on the Control Unit (CU) using the input terminal and is active. Note: - this message does not result in a safety stop response. - this message is not output when STO is selected using the Extended Functions.
<b>Remedy:</b>	Not necessary. Note: CU: Control Unit SI: Safety Integrated STO: Safe Torque Off / SH: Safe standstill
Reaction upon F:	OFF2
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>N01621 (F, A)</b>	<b>SI P1 (CU): Safe Stop 1 active</b>
<b>Message value:</b>	-
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The "Safe Stop 1" (SS1) function has been selected on the Control Unit (CU) and is active. Note: This message does not result in a safety stop response.
<b>Remedy:</b>	Not necessary. Note: CU: Control Unit SI: Safety Integrated SS1: Safe Stop 1 (corresponds to Stop Category 1 acc. to EN60204)
Reaction upon F:	NONE (OFF3)
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F01625</b>	<b>SI P1 (CU): Sign-of-life error in safety data</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The drive-integrated "Safety Integrated" function on the Control Unit (CU) has detected an error in the sign-of-life of the safety data between the two monitoring channels and has initiated a STOP A. - there is either a DRIVE-CLiQ communication error or communication has failed. - a time slice overflow of the safety software has occurred. Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.

## 4 Faults and alarms

### 4.2 List of faults and alarms

- Remedy:**
- select STO and then de-select again.
  - carry out a POWER ON (switch-off/switch-on) for all components.
- Check whether there is a DRIVE-CLiQ communication error between the two monitoring channels and, if required, carry out a diagnostics routine for the faults identified.
- de-select all drive functions that are not absolutely necessary.
  - reduce the number of drives.
  - check the electrical cabinet design and cable routing for EMC compliance
- Note:
- CU: Control Unit  
MM: Motor Module  
SI: Safety Integrated  
STO: Safe Torque Off

---

<b>F01630</b>	<b>SI P1 (CU): Brake control error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The drive-integrated "Safety Integrated" function on the Control Unit (CU) has detected a brake control fault and initiated a STOP A.		
	- motor cable is not shielded correctly.		
	- defect in control circuit of the Motor Module.		
	Fault value (r0949, interpret decimal):		
	10, 11:		
	Fault in "open holding brake" operation.		
	- parameter p1278 incorrectly set.		
	- no brake connected or wire breakage (check whether brake releases for p1278 = 1 and p9602/p9802 = 0 (SBC deactivated)).		
	- ground fault in brake cable.		
	20:		
	Fault in "brake open" state.		
	- short-circuit in brake winding.		
	30, 31:		
	Fault in "close holding brake" operation.		
	- no brake connected or wire breakage (check whether brake releases for p1278 = 1 and p9602/p9802 = 0 (SBC deactivated)).		
	- short-circuit in brake winding.		
	40:		
	Fault in "brake closed" state.		
	50:		
	Fault in the brake control circuit of the Control Unit or communication fault between the Control Unit and Motor Module (brake control).		
	80:		
	Safe Brake Adapter.		
	Fault in the brake control circuit of the Control Unit or communication fault between the Control Unit and Motor Module (brake control).		
	90:		
	Brake released for service purposes (X4).		
<b>Remedy:</b>	- check parameter p1278 (for SBC, only p1278 = 0 is permissible).		
	- for a parallel connection, check the setting of the power unit data set to control the holding brake (p7015).		
	- select Safe Torque Off and de-select again.		
	- check the motor holding brake connection.		
	- check the function of the motor holding brake.		

- check whether there is a DRIVE-CLiQ communication error between the Control Unit and the Motor Module involved and, if required, carry out a diagnostics routine for the faults identified.
- check that the electrical cabinet design and cable routing are in compliance with EMC regulations (e.g. shield of the motor cable and brake conductors are connected with the shield connecting plate and the motor connectors are tightly screwed to the housing).
- replace the Motor Module involved.

Operation with Safe Brake Module or Safe Brake Adapter:

- check the Safe Brake Module or Safe Brake Adapter connection.
- Replace the Safe Brake Module or Safe Brake Adapter.

Note:

CU: Control Unit

SBC: Safe Brake Control

SI: Safety Integrated

---

<b>A01631 (F, N)</b>	<b>SI P1 (CU): motor holding brake/SBC configuration not practical</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	A configuration of motor holding brake and SBC was detected that is not practical. The following configurations can result in this message: - "No motor holding brake available" (p1215 = 0) and "SBC" enabled (p9602 = 1). - "Motor holding brake just like the sequence control, connection via BICO" (p1215 = 3) and "SBC" enabled (p9602 = 1).		
	Note: SBC: Safe Brake Control		
<b>Remedy:</b>	Check the parameterization of the motor holding brake and SBC and correct. See also: p1215 (Motor holding brake configuration), p9602 (SI enable Safe Brake Control (Control Unit)), p9802 (SI enable Safe Brake Control (Motor Module))		
Reaction upon F:	NONE (OFF1, OFF2, OFF3)		
Acknowl. upon F:	IMMEDIATELY		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>F01640</b>	<b>SI P1 (CU): component replacement identified and acknowledgment/save required</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	General drive fault (19)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The "Safety Integrated" function integrated in the drive has identified that a component has been replaced. It is no longer possible to operate the particular drive without fault. When safety functions are active, after a component has been replaced it is necessary to carry out a partial acceptance test. Fault value (r0949, interpret binary): Bit 0 = 1: It has been identified that the Control Unit has been replaced. Bit 1 = 1: It has been identified that the Motor Module/Hydraulic Module has been replaced. Bit 2 = 1: It has been identified that the Power Module has been replaced. Bit 3 = 1: It has been identified that the Sensor Module channel 1 has been replaced.		

## 4 Faults and alarms

### 4.2 List of faults and alarms

Bit 4 = 1:

It has been identified that the Sensor Module channel 2 has been replaced.

Bit 5 = 1:

It has been identified that the sensor channel 1 has been replaced.

Bit 6 = 1:

It has been identified that the sensor channel 2 has been replaced.

**Remedy:**

- acknowledge component replacement (p9702 = 29).
- save all parameters (p0977 = 1 or p0971 = 1 or "copy RAM to ROM").
- acknowledge fault (e.g. BI: p2103).

Note:

In addition to the fault, diagnostics bits r9776.2 and r9776.3 are set.

See also: p9702 (SI Acknowledge component replacement), r9776 (SI diagnostics)

---

#### F01641

#### SI P1 (CU): component replacement identified and save required

**Message value:**

%1

**Message class:**

General drive fault (19)

**Drive object:**

B\_INF, VECTOR\_G

**Component:**

Control Unit (CU)

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

IMMEDIATELY

**Cause:**

The "Safety Integrated" function integrated in the drive has identified that a component has been replaced. No additional fault response is initiated, therefore operation of the particular drive is not restricted. When safety functions are active, after a component has been replaced it is necessary to carry out a partial acceptance test.

Fault value (r0949, interpret binary):

Bit 0 = 1:

It has been identified that the Control Unit has been replaced.

Bit 1 = 1:

It has been identified that the Motor Module/Hydraulic Module has been replaced.

Bit 2 = 1:

It has been identified that the Power Module has been replaced.

Bit 3 = 1:

It has been identified that the Sensor Module channel 1 has been replaced.

Bit 4 = 1:

It has been identified that the Sensor Module channel 2 has been replaced.

Bit 5 = 1:

It has been identified that the sensor channel 1 has been replaced.

Bit 6 = 1:

It has been identified that the sensor channel 2 has been replaced.

**Remedy:**

- save all parameters (p0977 = 1 or p0971 = 1 or "copy RAM to ROM").
  - acknowledge fault (e.g. BI: p2103).
- See also: r9776 (SI diagnostics)

---

#### F01641

#### SI P1 (CU): component replacement identified and save required

**Message value:**

%1

**Message class:**

General drive fault (19)

**Drive object:**

TM54F\_MA

**Component:**

Control Unit (CU)

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

IMMEDIATELY

**Cause:**

The "Safety Integrated" function integrated in the drive has identified that a Terminal Module 54F (TM54F) has been replaced.

**Remedy:**

- save all parameters (p0977 = 1 or p0971 = 1 or "copy RAM to ROM").
  - acknowledge fault (e.g. BI: p2103).
- See also: r9776 (SI diagnostics)

---

<b>F01649</b>	<b>SI P1 (CU): Internal software error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU)
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	An internal error in the Safety Integrated software on the Control Unit has occurred. Note: This fault results in a STOP A that cannot be acknowledged. Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on) for all components. - re-commission the "Safety Integrated" function and carry out a POWER ON. - Upgrade the firmware of the Control Unit to a later version. - contact Technical Support. - replace the Control Unit. Note: CU: Control Unit SI: Safety Integrated

---

<b>F01650</b>	<b>SI P1 (CU): Acceptance test required</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The drive-integrated "Safety Integrated" function on monitoring channel 1 requires an acceptance test. Note: This fault results in a STOP A that can be acknowledged. Fault value (r0949, interpret decimal): 130: Safety parameters for monitoring channel 2 not available. Note: This fault value is always output when Safety Integrated is commissioned for the first time. 1000: Reference and actual checksum on monitoring channel 1 are not identical (booting). - as a result of the changed current controller sampling time (p0115[0]), the clock cycle time for the Safety Integrated Basic Functions (r9780) was adapted. - at least one checksum-checked piece of data is defective. - safety parameters set offline and loaded into the Control Unit. 2000: Reference and actual checksum on monitoring channel 1 are not identical (commissioning mode). - reference checksum on monitoring channel 1 incorrectly entered (p9799 not equal to r9798). - when deactivating the safety functions, p9501 or p9503 were not deleted. 2001: Reference and actual checksum on monitoring channel 2 are not identical (commissioning mode). - reference checksum on monitoring channel 2 incorrectly entered (p9899 not equal to r9898). - when deactivating the safety functions, p9501 or p9503 are not deleted. 2002: Enable of safety-related functions between the two monitoring channels differ (p9601 not equal to p9801). 2003: Acceptance test is required as a safety parameter has been changed. 2004: An acceptance test is required because a project with enabled safety-functions has been downloaded. 2005: The Safety logbook has identified that a functional safety checksum has changed. An acceptance test is required. 2010: Enable of safety-related brake control between the two monitoring channels differ (p9602 not equal to p9802). 2020: Error when saving the safety parameters for the monitoring channel 2. 3003: Acceptance test is required as a hardware-related safety parameter has been changed.

3005: The Safety logbook has identified that a hardware-related safety checksum has changed. An acceptance test is required.

9999: Subsequent response of another safety-related fault that occurred when booting that requires an acceptance test.

**Remedy:**

For fault value = 130:

- carry out safety commissioning routine.

For fault value = 1000:

- check the Safety Integrated Basic Functions (r9780) and adapt the reference checksum (p9799).
- again carry out safety commissioning routine.
- replace the memory card or Control Unit.
- Using STARTER, activate the safety parameters for the drive involved (change settings, copy parameters, activate settings).

For fault value = 2000:

- check the safety parameters on monitoring channel 1 and adapt the reference checksum (p9799).

For fault value = 2001:

- check the safety parameters on monitoring channel 2 and adapt the reference checksum (p9899).

For fault value = 2002:

- check the enable the safety-related functions on both monitoring channels (p9601 = p9801).

For fault value = 2003, 2004, 2005:

- carry out an acceptance test and generate an acceptance report.

The procedure when carrying out an acceptance test as well as an example of the acceptance report are provided in the following literature:

SINAMICS S120 Function Manual Safety Integrated

The fault with fault value 2005 can only be acknowledged when the "STO" function is de-selected.

For fault value = 2010:

- check the enable the safety-related brake control on both monitoring channels (p9602 = p9802).

For fault value = 2020:

- again carry out safety commissioning routine.
- replace the memory card or Control Unit.

For fault value = 3003:

- carry out the function checks for the modified hardware and generate an acceptance report.

The procedure when carrying out an acceptance test as well as an example of the acceptance report are provided in the following literature:

SINAMICS S120 Function Manual Safety Integrated

For fault value = 3005:

- carry out the function checks for the modified hardware and generate an acceptance report.

The fault with fault value 3005 can only be acknowledged when the "STO" function is de-selected.

For fault value = 9999:

- carry out diagnostics for the other safety-related fault that is present.

Note:

CU: Control Unit

MM: Motor Module

SI: Safety Integrated

STO: Safe Torque Off

See also: p9799 (SI reference checksum SI parameters (Control Unit)), p9899 (SI reference checksum SI parameters (Motor Module))

---

<b>F01651</b>	<b>SI P1 (CU): Synchronization safety time slices unsuccessful</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The "Safety Integrated" function requires a synchronization of the safety time slices between the two monitoring channels and between the Control Unit and the higher-level control. This synchronization routine was unsuccessful.		

Note:

This fault results in a STOP A that cannot be acknowledged.

Fault value (r0949, interpret decimal):

121:

- with SINUMERIK Safety Integrated enabled, a drive-side warm restart was performed on the CU/NX.
- with SINUMERIK Safety Integrated enabled, the function "restore factory setting" was selected on a drive object of the CU and a drive-side warm restart was initiated.

150:

- fault in the synchronization to the PROFIBUS master.

All other values:

- only for internal Siemens troubleshooting.

See also: p9510 (SI Motion clock-cycle synchronous PROFIBUS master)

**Remedy:**

For fault value = 121:

- carry out a common POWER ON/warm restart for the higher-level control and SINAMICS.

For fault value = 150:

- check the setting of p9510 (SI Motion clock-cycle synchronous PROFIBUS master) and if required, correct.

General:

- carry out a POWER ON (switch-off/switch-on) for all components.
- upgrade the Motor Module/Hydraulic Module software.
- upgrade the Control Unit software.
- upgrade the software of the higher-level control.

Note:

CU: Control Unit

SI: Safety Integrated

---

**F01652**

**SI P1 (CU): Illegal monitoring clock cycle**

**Message value:**

%1

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

VECTOR\_G

**Component:**

None

**Propagation:**

GLOBAL

**Reaction:**

OFF2

**Acknowledge:**

IMMEDIATELY (POWER ON)

**Cause:**

One of the Safety Integrated monitoring clock cycles is not permissible.

- the monitoring clock cycle integrated in the drive cannot be maintained due to the communication conditions required in the system.

- the monitoring clock cycle for safe motion monitoring functions is not permissible (p9500).

- the actual value sensing clock cycle for safe motion monitoring functions is not permissible (p9511).

- the sampling time for the current controller (p0112, p0115[0]) cannot be supported.

Note:

This fault results in a STOP A that cannot be acknowledged.

Fault value (r0949, interpret decimal):

For motion monitoring functions that are not enabled (p9601.2 = p9801.2 = 0, p9501 = 0), the following applies:

- Minimum setting for the monitoring clock cycle (in  $\mu$ s).

For motion monitoring functions that are enabled (p9601.2 = p9801.2 = 1 and/or p9501 > 0), the following applies:

100:

- no matching monitoring clock cycle was able to be found.

- an illegal actual value sensing clock cycle was set for S120M (p9511).

101:

- the monitoring clock cycle is not an integer multiple of the actual value sensing clock cycle.

- SINAMICS S120M: the monitoring clock cycle (p9500) is not an integer multiple of 2 ms.

102:

- An error has occurred when transferring the actual value sensing clock cycle to the Motor Module.

103:

- An error has occurred when transferring the actual value sensing clock cycle to the Sensor Module.

104, 105:

- four times the current controller sampling time (p0115[0]) is greater than 1 ms when operating with a non-isochronous PROFIBUS.
- four times the current controller sampling time (p0115[0]) is greater than the DP clock cycle when operating with an isochronous PROFIBUS.
- the DP clock cycle is not an integer multiple of the sampling time of the current controller (p0115[0]).

106:

- the monitoring clock cycle does not match the monitoring clock cycle of the TM54F.

107:

- the actual value sensing clock cycle (p9511) is less than four times the current controller sampling time (p0115[0]).
- the actual value sensing clock cycle (p9511) is not an integer multiple of the sampling time of the current controller (p0115[0]).

108:

- the parameterized actual value sensing clock cycle cannot be set on this component

109:

- if the motion monitoring functions have been parameterized as encoderless (p9506), the actual value sensing clock cycle (p9511) and the current controller clock cycle (p0115[0]) must be identical.

- SINAMICS S110: if the motion monitoring functions have been parameterized as encoderless (p9506), the actual value sensing clock cycle p9511 must be = 250 µs.

110:

- the actual value sensing clock cycle (p9511) for safety with encoder (p9506 = 0) is less than 2 ms for this Control Unit (e.g. CU305).

111:

- the monitoring clock cycle is not an integer multiple of the sampling time of the current controller (p0115[0]).

112:

- An actual value sensing clock cycle p9511 = 0 on a drive object of a Double Motor Module is not permissible in the existing configuration.

200, 201:

- S120M: the monitoring clock cycle cannot be maintained as a result of the conditions required in the system.

202:

- the current controller sampling time is set to zero (p0115[0]).

#### Remedy:

For enabled SI monitoring integrated in the drive (p9601/p9801 > 0):

- Upgrade the firmware of the Control Unit to a later version.

For enabled motion monitoring function (p9501 > 0):

- correct the monitoring clock cycle (p9500) and carry out POWER ON.

For fault value = 100:

- for S120M, set the actual value sensing clock cycle to p9511 = 0.

For fault value = 101:

- actual value sensing clock cycle corresponds to position control clock cycle/DP clock cycle (factory setting).
- for motion monitoring functions integrated in the drive (p9601/p9801bit 2 = 1) the actual value sensing clock cycle can be directly parameterized in p9511/p9311.
- SINAMICS S120M: set the monitoring clock cycle (p9500) to an integer multiple of 2 ms.

For fault value = 104, 105:

- set a separate actual value sensing clock cycle in p9511.
- restrict operation to a maximum of two vector drives. For the standard setting in p0112, p0115, the current controller sampling time is automatically reduced to 250 µs. If the standard values were changed, then the current controller sampling time (p0112, p0115) should be appropriately set.
- increase the DP clock cycle for operation with a clock-cycle synchronous PROFIBUS so that there is a multiple clock cycle ratio of at least 4:1 between the DP clock cycle and the current controller sampling time. A clock cycle ratio of at least 8:1 is recommended.
- With firmware version 2.5, please ensure that parameter p9510 is set to 1 in the drive (clock cycle synchronous operation).

For fault value = 106:

- set the parameters for the monitoring clock cycles the same (p10000 and p9500 / p9300).

For fault value = 107:

- set an actual value sensing clock cycle that matches the current controller clock cycle (p9511 >= 4 \* p0115[0], 8 \* p0115[0]) is recommended.

Note:

An actual value sensing clock cycle (p9511) that is set too low, can sporadically mean that safety messages C01711/C30711 are output with message value 1020 or 1021.

For fault value = 108:

- set a suitable actual value sensing clock cycle in p9511.
- if the DP clock cycle is used as the actual value sensing clock cycle for operation with isochronous PROFIBUS (p9511 = 0), then a suitable DP clock cycle must be configured. This must be set to less than 8 ms. If this is not possible, then p9511 must be set to the required actual value sensing clock cycle (< 8 ms).
- For SIMOTION D410-2, a suitable multiple of the DP clock cycle (e.g. 1, 2, 3, 4, 5, 6, 8, 10) must be parameterized. Otherwise, the clock cycle must be set to less than 8 ms.

For fault value = 109:

- set the actual value sensing clock cycle in p9511 to the same value as the current controller clock cycle (p0115[0]).
- SINAMICS S110: set the actual value sensing clock cycle to p9511 = 250 µs.

For fault value = 110:

- set the actual value sensing clock cycle in p9511 to 2 ms or higher.

For fault value = 111:

- set the monitoring clock cycle in p9500 as an integer multiple of the sampling time of the current controller (p0115[0]).

For fault value = 112:

- set the actual value sensing clock cycle p9511 to the required value (not equal to zero).

For fault value = 200, 201:

- increase the current controller sampling time (p0115[0]).
- if required, reduce the number of components connected to the corresponding DRIVE-CLiQ line, or distribute the components across several DRIVE-CLiQ sockets.

For fault value = 202:

- set the current controller sampling time to a sensible value (p0115[0]).

Note:

CU: Control Unit

MM: Motor Module

SI: Safety Integrated

---

<b>F01653</b>	<b>SI P1 (CU): PROFIBUS/PROFINET configuration error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE (OFF1, OFF2, OFF3)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	There is a PROFIBUS/PROFINET configuration error for using Safety Integrated monitoring functions with a higher-level control (SINUMERIK or F-PLC).		
	Note:		
	For safety functions that have been enabled, this fault results in a STOP A that cannot be acknowledged.		
	Fault value (r0949, interpret decimal):		
	200: A safety slot for receive data from the control has not been configured.		
	210, 220: The configured safety slot for the receive data from the control has an unknown format.		
	230: The configured safety slot for the receive data from the F-PLC has the incorrect length.		
	231: The configured safety slot for the receive data from the F-PLC has the incorrect length.		
	240: The configured safety slot for the receive data from the SINUMERIK has the incorrect length.		
	250: A PROFIsafe slot is configured in the higher-level F control, however PROFIsafe is not enabled in the drive.		
	300: A safety slot for the send data to the control has not been configured.		
	310, 320: The configured safety slot for the send data to the control has an unknown format.		
	330: The configured safety slot for the send data to the F-PLC has the incorrect length.		
	331: The configured safety slot for the send data to the F-PLC has the incorrect length.		
	340: The configured safety slot for the send data to the SINUMERIK has the incorrect length.		

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:** The following generally applies:

- check and, if necessary, correct the PROFIBUS/PROFINET configuration of the safety slot on the master side.
- upgrade the Control Unit software.

For fault value = 250:

- remove the PROFIsafe configuring in the higher-level F control or enable PROFIsafe in the drive.

For fault value = 231, 331:

- in the drive, parameterize the appropriate PROFIsafe telegram (p9611/p9811) to be set on the F-PLC and to be set in p60022.
- Configure the PROFIsafe telegram matching the parameterization (p9611/p9811) in the F-PLC.

---

**A01654 (F, N) SI P1 (CU): Deviating PROFIsafe configuration**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The configuration of a PROFIsafe telegram in the higher-level control (F-PLC) does not match the parameterization in the drive.  
**Note:**  
This message does not result in a safety stop response.  
Alarm value (r2124, interpret decimal):  
1:  
A PROFIsafe telegram is configured in the higher-level control, however PROFIsafe is not enabled in the drive (p9601.3).  
2:  
PROFIsafe is parameterized in the drive; however, a PROFIsafe telegram has not been configured in the higher-level control.

**Remedy:** The following generally applies:

- check and, if necessary, correct the PROFIsafe configuration in the higher-level control.

For alarm value = 1:

- remove the PROFIsafe configuring in the higher-level F control or enable PROFIsafe in the drive.

For alarm value = 2:

- configure the PROFIsafe telegram to match the parameterization in the higher-level F-control.

Reaction upon F: NONE (OFF1, OFF2, OFF3)  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**F01655 SI P1 (CU): Align monitoring functions**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** An error has occurred when aligning the Safety Integrated monitoring functions of both monitoring channels. No common set of supported SI monitoring functions was able to be determined.  
- there is either a DRIVE-CLiQ communication error or communication has failed.  
- Safety Integrated software releases on the Control Unit and Motor Module/Hydraulic Module are not compatible with one another.  
**Note:**  
This fault results in a STOP A that cannot be acknowledged.  
Fault value (r0949, interpret hexadecimal):  
Only for internal Siemens troubleshooting.

- Remedy:**
- carry out a POWER ON (switch-off/switch-on) for all components.
  - upgrade the Motor Module/Hydraulic Module software.
  - upgrade the Control Unit software.
  - check the electrical cabinet design and cable routing for EMC compliance

Note:

CU: Control Unit

SI: Safety Integrated

**F01656**

**SI CU: Parameter monitoring channel 2 error**

**Message value:** %1

**Message class:** Hardware/software error (1)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** When accessing the Safety Integrated parameters for monitoring channel 2 in the non-volatile memory, an error has occurred.

Note:

This fault results in a STOP A that can be acknowledged.

Fault value (r0949, interpret decimal):

129:

- safety parameters for monitoring channel 2 corrupted.
- drive with enabled safety functions was possibly copied offline using the commissioning software and the project downloaded.

131: Internal Motor Module/Hydraulic Module software error.

132: Communication errors when uploading or downloading the safety parameters for monitoring channel 2.

255: Internal software error on the Control Unit.

**Remedy:**

- re-commission the safety functions.
- upgrade the Control Unit software.
- upgrade the Motor Module/Hydraulic Module software.
- replace the memory card or Control Unit.

For fault value = 129:

- activate the safety commissioning mode (p0010 = 95).
- adapt the PROFIsafe address (p9610).
- start the copy function for SI parameters (p9700 = D0 hex).
- acknowledge data change (p9701 = DC hex).
- exit the safety commissioning mode (p0010 = 0).
- save all parameters (p0977 = 1 or "copy RAM to ROM").
- carry out a POWER ON (switch-off/switch-on) for all components.

For fault value = 132:

- check the electrical cabinet design and cable routing for EMC compliance

Note:

CU: Control Unit

SI: Safety Integrated

**F01657**

**SI P1 (CU): PROFIsafe telegram number invalid**

**Message value:** -

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** OFF2

**Acknowledge:** POWER ON

**Cause:** The PROFIsafe telegram number set in p9611 is not valid.

When PROFIsafe is enabled (p9601.3 = 1), then a telegram number greater than zero must be entered in p9611.

## 4 Faults and alarms

### 4.2 List of faults and alarms

Note:

This fault does not result in a safety stop response.

See also: p9611 (SI PROFIsafe telegram selection (Control Unit)), p60022 (PROFIsafe telegram selection)

**Remedy:** Check the telegram number setting (p9611).

---

**F01658****SI P1 (CU): PROFIsafe telegram number differ**

**Message value:** -

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The PROFIsafe telegram number is set differently in p9611 and p60022.

For p9611 not equal to 998, the following applies:

The telegram number must be identically set in both parameters.

The following applies for p9611 = 998:

As a result of the compatibility to firmware versions < 4.5, then only the values 0 and 30 are permitted in p60022.

Note:

This fault does not result in a safety stop response.

See also: p9611 (SI PROFIsafe telegram selection (Control Unit)), p60022 (PROFIsafe telegram selection)

**Remedy:** Match the telegram number in both parameters so that they are the same (p9611, p60022).

---

**F01659****SI P1 (CU): Write request for parameter rejected**

**Message value:** %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** B\_INF, VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The write request for one or several Safety Integrated parameters on the Control Unit (CU) was rejected.

Note:

This fault does not result in a safety stop response.

Fault value (r0949, interpret decimal):

1: The Safety Integrated password is not set.

2: A reset of the drive parameters was selected. However, the Safety Integrated parameters were not reset, as Safety Integrated is presently enabled.

3: The interconnected STO input is in the simulation mode.

10: An attempt was made to enable the STO function although this cannot be supported.

11: An attempt was made to enable the SBC function although this cannot be supported.

12: An attempt was made to enable the SBC function although this cannot be supported for a parallel circuit configuration (r9871.14).

13: An attempt was made to enable the SS1 function although this cannot be supported.

14: An attempt was made to enable the PROFIsafe communication - although this cannot be supported or the version of the PROFIsafe driver used on both monitoring channels is different.

15: An attempt was made to enable the motion monitoring functions integrated in the drive although these cannot be supported.

16: An attempt was made to enable the STO function although this cannot be supported when the internal voltage protection (p1231) is enabled.

17: An attempt was made to enable the PROFIsafe function although this cannot be supported for a parallel circuit configuration.

18: An attempt was made to enable the PROFIsafe function for Basic Functions although this cannot be supported.

19: An attempt was made to enable the SBA (Safe Brake Adapter), although this cannot be supported.

20: An attempt was made to enable the motion monitoring functions integrated in the drive and the STO function, both controlled via F-DI.

21: An attempt was made to enable the motion monitoring functions integrated in the drive for a parallel connection, although these cannot be supported.

22: An attempt was made to enable the Safety Integrated functions although these cannot be supported by the connected Power Module.

23: For ESR, an attempt was made to enable the delay of STO, although this cannot be supported.

24: An attempt was made to enable the SBC function, although no power unit data set is set for the brake control (p7015 = 99).

25: An attempt was made to parameterize a PROFIsafe telegram although this cannot be supported.

26: With the selected signal source for STO/SS1, an attempt was made to activate the simulation mode.

27: An attempt was made to activate the Basic Functions by controlling via TM54F although this cannot be supported.

28: An attempt was made to enable the "STO via terminals at the Power Module" function although this cannot be supported.

29: An attempt was made to parameterize the stop response for PROFIsafe failure to STOP B although this is not supported.

See also: p0970, p3900, r9771, r9871

#### Remedy:

For fault value = 1:

- set the Safety Integrated password (p9761).

For fault value = 2:

- inhibit Safety Integrated (p9501, p9601) or reset safety parameters (p0970 = 5), then reset the drive parameters again.

For fault value = 3:

- end the simulation mode for the digital input (p0795).

For fault value = 10, 11, 12, 13, 14, 15, 17, 18, 19, 21, 22, 23, 27:

- check whether there are faults in the safety function alignment between the two monitoring channels (F01655, F30655) and if required, carry out diagnostics for the faults involved.

- use a Motor Module that supports the required function.

- upgrade the Motor Module software.

- upgrade the Control Unit software.

For fault value = 16:

- inhibit the internal voltage protection (p1231).

For fault value = 20:

- correct the enable setting (p9601).

For fault value = 22:

- use a Power Module that supports the Safety Integrated functions.

For fault value = 24:

- set the power unit data set for the holding brake (p7015).

For fault value = 25:

- use a Power Module that supports the PROFIsafe telegram selection.

- correct the telegram number setting (p9611).

For fault value = 26:

- deactivate the simulation mode for the set signal source for STO/SS1 (p9620) (p0795).

For fault value = 28:

- use the power unit with the feature "STO via terminals at the Power Module".

For fault value = 29:

- use a Motor Module that supports the required function.

- upgrade the Motor Module software.

- upgrade the Control Unit software.

- if required, parameterize the stop response for PROFIsafe failure to STOP A (p9612 = p9812 = 0).

For fault value = 33:

- deselect drive integrated motion monitoring without selection (p9601.5, p9801.5) and select safety functions that are supported (see p9771/p9871).

- use a Motor Module that supports the required function.

- upgrade the Motor Module software.

- upgrade the Control Unit software.

Note:

CU: Control Unit

ESR: Extended Stop and Retract

## 4 Faults and alarms

### 4.2 List of faults and alarms

F-DI: Failsafe Digital Input

SBA: Safe Brake Adapter

SBC: Safe Brake Control

SI: Safety Integrated

SS1: Safe Stop 1 (corresponds to Stop Category 1 acc. to EN60204)

STO: Safe Torque Off / SH: Safe standstill

See also: p9501 (SI Motion enable safety functions (Control Unit)), p9601 (SI enable functions integrated in the drive (Control Unit)), p9620 (SI signal source for STO (SH)/SBC/SS1 (Control Unit)), p9761 (SI password input), p9801 (SI enable functions integrated in the drive (Motor Module))

---

#### F01659

#### SI P1 (CU): Write request for parameter rejected

**Message value:**

%1

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

TM54F\_MA, TM54F\_SL

**Component:**

None

**Propagation:**

GLOBAL

**Reaction:**

NONE

**Acknowledge:**

IMMEDIATELY (POWER ON)

**Cause:**

The write request for one or several Safety Integrated parameters on the Control Unit (CU) was rejected.

**Note:**

This fault does not result in a safety stop response.

Fault value (r0949, interpret decimal):

1: The Safety Integrated password is not set.

2: A reset of the drive parameters was selected. However, the Safety Integrated parameters were not reset, as Safety Integrated is presently enabled.

27: An attempt was made to activate the Basic Functions by controlling via TM54F although this cannot be supported.

See also: p0970, p3900, r9771, r9871

**Remedy:**

For fault value = 1:

- set the Safety Integrated password (p10061).

For fault value = 2:

- inhibit Safety Integrated (p9501, p9601) or reset safety parameters (p0970 = 5), then reset the drive parameters again.

For fault value = 27:

- check whether there are faults in the safety function alignment between the Control Unit and the Motor Module involved (F01655, F30655) and if required, carry out diagnostics for the faults involved.

- use Motor Modules that supports the required function.

- upgrade the Motor Module software.

- upgrade the Control Unit software.

**Note:**

CU: Control Unit

MM: Motor Module

SI: Safety Integrated

See also: p9501 (SI Motion enable safety functions (Control Unit)), p9601 (SI enable functions integrated in the drive (Control Unit)), p9620 (SI signal source for STO (SH)/SBC/SS1 (Control Unit)), p9761 (SI password input), p9801 (SI enable functions integrated in the drive (Motor Module))

---

#### F01660

#### SI P1 (CU): Safety-related functions not supported

**Message value:**

-

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

VECTOR\_G

**Component:**

Control Unit (CU)

**Propagation:**

GLOBAL

**Reaction:**

OFF2

**Acknowledge:**

IMMEDIATELY (POWER ON)

**Cause:**

The Motor Module/Hydraulic Module does not support the safety-related functions (e.g. the Motor Module/Hydraulic Module version is not the correct one). Safety Integrated cannot be commissioned.

**Note:**

This fault does not result in a safety stop response.

**Remedy:**

- use a Motor Module/Hydraulic Module that supports the safety-related functions.
- upgrade the Motor Module/Hydraulic Module software.

**Note:**  
 CU: Control Unit  
 SI: Safety Integrated

---

**F01661**      **SI P1 (CU): Simulation of the safety inputs active**

**Message value:**      Fault cause: %1 bin  
**Message class:**      General drive fault (19)  
**Drive object:**      VECTOR\_G  
**Component:**      Control Unit (CU)                      **Propagation:**      DRIVE  
**Reaction:**      OFF2  
**Acknowledge:**      IMMEDIATELY  
**Cause:**      The simulation of the digital inputs of the Control Unit (p0795) is active.  
                  It is not permissible that safety inputs are simulated.  
                  Fault value (r0949, interpret binary):  
                  The displayed bits indicate which digital inputs must not be simulated.

**Remedy:**

- deactivate the simulation of the digital inputs of the Control Unit for the safety inputs (p0795).
- acknowledge fault.

---

**F01663**      **SI P1 (CU): Copying the SI parameters rejected**

**Message value:**      -  
**Message class:**      Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:**      VECTOR\_G  
**Component:**      None                                      **Propagation:**      DRIVE  
**Reaction:**      OFF2  
**Acknowledge:**      IMMEDIATELY (POWER ON)  
**Cause:**      In p9700, the value 87 or 208 is saved or was entered offline.  
                  This is the reason that when booting, an attempt is made to copy Safety Integrated parameters from monitoring channel 1 to monitoring channel 2. However, no safety-relevant function has been selected in monitoring channel 1 (p9501 = 0, p9601 = 0). Copying was rejected for safety reasons.  
                  As a consequence, inconsistent parameterization can occur in both monitoring channels, which in turn results in additional error messages.  
                  Especially for inconsistent enabling of the safety functions on both monitoring channels (p9601 = 0, p9801 <> 0), fault F30625 is output.  
**Note:**  
                  This fault does not result in a safety stop response.  
                  SI: Safety Integrated  
                  See also: p9700 (SI Motion copy function)

**Remedy:**

- set p9700 to 0.
- check p9501 and p9601 and if required, correct.
- restart the copying function by entering the corresponding value into p9700.

Alternatively, using the STARTER commissioning tool, perform the following steps in the online mode:

- call the "Safety Integrated" screen form (the field "Select safety functions" is at "No Safety Integrated").
- click on "Change settings".
- click on "Activate settings" (as a consequence, Safety Integrated is inhibited on both monitoring channels).
- save all parameters (p0977 = 1 or "copy RAM to ROM").
- carry out a POWER ON (switch-off/switch-on) for all components.

<b>F01664</b>	<b>SI P1 (CU): No automatic firmware update</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	DRIVE
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	During booting, the system detected that the "Firmware update automatic" function (p7826 = 1) was not activated. This function must be activated for automatic firmware updates/downgrades to prevent impermissible version combinations when safety functions are enabled. Note: This fault does not result in a safety stop response. See also: p7826 (Firmware update automatic)		
<b>Remedy:</b>	When safety functions are enabled (p9501 <> 0 and/or p9601 <> 0): 1. Activate the "Firmware update automatic" function (p7826 = 1). 2. Backup the parameters (p0977 = 1) and carry out a POWER ON. When deactivating the safety functions (p9501 = 0, p9601 = 0), the fault can be acknowledged after exiting the safety commissioning mode.		

---

<b>F01665</b>	<b>SI P1 (CU): System is defective</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	A system defect was detected before the last boot or in the actual one. The system might have been rebooted (reset). Fault value (r0949, interpret hexadecimal): 200000 hex, 400000 hex, 8000yy hex (yy any): - fault in the actual booting/operation. 800004 hex: - parameters p9500/p9300 are, under certain circumstances, not the same. In addition, Safety message C01711/C30711 is displayed. Additional values: - defect before the last time that the system booted.		
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on). - upgrade firmware to later version. - contact Technical Support. For fault value = 200000 hex, 400000 hex, 8000yy hex (yy any): - ensure that the Control Unit is connected to the Power Module. For fault value = 800004 hex: - check that parameters p9500/p9300 are the same. Note: PM: Power Module STO: Safe Torque Off		

---

<b>A01666 (F)</b>	<b>SI Motion P1 (CU): Steady-state (static) 1 signal at the F-DI for safe acknowledgment</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A logical 1 signal is present at the F-DI configured in p10006 for more than 10 seconds. If, at the F-DI no acknowledgment was performed for safe acknowledgment, then a steady-state logical and 0 signal must be present. This avoids unintentional safety-relevant acknowledgment (or the "Internal Event Acknowledge" signal) if a wire breaks or one of the two digital inputs bounces.
<b>Remedy:</b>	Set the fail-safe digital input (F-DI) to a logical 0 signal (p10006). Note: F-DI: Failsafe Digital Input
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY

---

<b>A01669 (F, N)</b>	<b>SI Motion: Unfavorable combination of motor and power unit</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The combination of motor and power unit used is not suitable for using safe motion monitoring functions without an encoder. The ratio between the power unit rated current (r0207[0]) and rated motor current (p0305) is greater than 5. Alarm value (r2124, interpret decimal): Number of the motor data set, which caused the fault. Notice: If this alarm is not observed, then message C01711 or C30711 – with the value 1041 ... 1044 – can sporadically occur.
<b>Remedy:</b>	Use a suitable power unit with a lower power rating or a motor with a higher power rating.
Reaction upon F:	NONE (OFF1, OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>F01670</b>	<b>SI Motion: Invalid parameterization Sensor Module</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The parameterization of a Sensor Module used for Safety Integrated is not permissible. Note: This fault results in a STOP A that cannot be acknowledged. Fault value (r0949, interpret decimal): 1: No encoder was parameterized for Safety Integrated. 2: An encoder was parameterized for Safety Integrated that does not have an A/B track (sine/cosine). 3: The encoder data set selected for Safety Integrated is still not valid. 4: A communication error with the encoder has occurred. 5: Number of relevant bits in the encoder coarse position invalid. 6: DRIVE-CLiQ encoder configuration invalid.

- 7: Non-safety relevant component of the encoder coarse position for the linear DRIVE-CLiQ encoder not valid.
- 8: Parameterized Safety comparison algorithm not supported.
- 9: Relationship between the grid division and measuring step for linear DRIVE-CLiQ encoder is not binary.
- 10: For an encoder used for Safety Integrated, not all of the Drive Data Sets (DDS) are assigned to the same Encoder Data Set (EDS) (p0187 ... p0189).
- 11: The zero point setting of a linear DRIVE-CLiQ encoder used in Safety Integrated is not zero.
- 12: The second encoder is not parameterized (p9526 = 1 is not permissible).
- 13: Hydraulic Module: A second encoder has not been parameterized and a DRIVE-CLiQ encoder is not being used.
- 14: SCSE encoder is used in conjunction with an HTL/TTL encoder, another SCSE encoder or in a 1-encoder system.

**Remedy:**

- For fault value = 1, 2:
    - use and parameterize an encoder that Safety Integrated supports (encoder with track A/B sine-wave, p0404.4 = 1).
  - For fault value = 3:
    - check whether the drive or drive commissioning function is active and if required, exit this (p0009 = p00010 = 0), save the parameters (p0971 = 1) and carry out a POWER ON
  - For fault value = 4:
    - check whether there is a DRIVE-CLiQ communication error between the Control Unit and the Sensor Module involved and if required, carry out a diagnostics routine for the faults identified.
  - For fault value = 5:
    - p9525 = 0 (not permissible). Check the encoder parameterization on the Sensor Modules involved.
  - For fault value = 6:
    - check p9515.0 (for DRIVE-CLiQ encoders, the following applies: p9515.0 = 1). Check the encoder parameterization on the Sensor Modules involved.
  - For fault value = 7:
    - p12033 for an encoder used for Safety Integrated is not equal to 1. Use a linear DRIVE-CLiQ encoder and parameterize for p12033 = 1.
  - For fault value = 8:
    - check p9541. Use and parameterize an encoder that implements an algorithm supported by Safety Integrated.
  - For fault value = 9:
    - check p9514 and p9522. Use an encoder and parameterize, where the ratio between p9514 and p9522 is binary.
  - For fault value = 10:
    - align the EDS assignment of all of the encoders used for Safety Integrated (p0187 ... p0189).
  - For fault value = 11:
    - use and parameterize a linear DRIVE-CLiQ encoder, where the zero point setting is equal to 0.
  - For fault value = 12:
    - parameterize an encoder for the second channel (p9526 > 1).
  - For fault value = 13:
    - parameterize a second encoder or use a DRIVE-CLiQ encoder.
  - For fault value = 14:
    - use a DRIVE-CLiQ encoder for channel 1 in conjunction with an SCSE encoder for channel 2.
- Note:  
 SCSE: Single Channel Safety Encoder (single-channel encoder)  
 SI: Safety Integrated

---

<b>F01671</b>	<b>SI Motion: Parameterization encoder error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The parameterization of the encoder used by Safety Integrated is different to the parameterization of the standard encoder.		
	Note: This fault does not result in a safety stop response.		



Note:  
SI: Safety Integrated

---

<b>F01674</b>	<b>SI Motion P1 (CU): Safety function not supported by PROFIsafe telegram</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	The monitoring function enabled in p9501 and p9601 is not supported by the currently set PROFIsafe telegram (p9611). Note: This fault results in a STOP A that cannot be acknowledged. Fault value (r0949, interpret bitwise binary): Bit 18 = 1: SS2E via PROFIsafe is not supported (p9501.18). Bit 24 = 1: Transfer SLS (SG) limit value via PROFIsafe not supported (p9501.24). Bit 25 = 1: Transfer safe position via PROFIsafe is not supported (p9501.25). Bit 26 = 1: Gearbox stage switchover via PROFIsafe is not supported (p9501.26).
<b>Remedy:</b>	- Deselect the monitoring function involved (p9501, p9601). - set the matching PROFIsafe telegram (p9611). Note: SI: Safety Integrated SLS: Safely Limited Speed / SG: Safely reduced speed SP: Safe Position SS2E: Safe Stop 2 external (Safe Stop 2 with external stop, external STOP D)

---

<b>F01679</b>	<b>SI CU: Safety parameter settings and topology changed, warm restart/POWER ON required</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2 (OFF1, OFF3)
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	Safety parameters have been changed; these will only take effect following a warm restart or POWER ON (see alarm A01693). A partial power up (boot) with modified configuration was then performed.
<b>Remedy:</b>	- carry out a warm restart (p0009 = 30, p0976 = 2, 3). - carry out a POWER ON (switch-off/switch-on) for all components.

---

<b>F01680</b>	<b>SI Motion P1 (CU): Checksum error safety monitoring functions</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The actual checksum calculated by the drive and entered in r9728 via the safety-relevant parameters does not match the reference checksum saved in p9729 at the last machine acceptance. Safety-relevant parameters have been changed or a fault is present.

Note:

This fault results in a STOP A that can be acknowledged.

Fault value (r0949, interpret decimal):

0: Checksum error for SI parameters for motion monitoring.

1: Checksum error for SI parameters for actual values.

2: Checksum error for SI parameters for component assignment.

Remedy:

- check the safety-relevant parameters and if required, correct.
- execute the function "Copy RAM to ROM".
- perform a POWER ON if safety parameters requiring a POWER ON have been modified.
- carry out an acceptance test.

**F01681**

**SI Motion P1 (CU): Incorrect parameter value**

**Message value:**

Parameter: %1, supplementary information: %2

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

VECTOR\_G

**Component:**

None

**Propagation:**

GLOBAL

**Reaction:**

OFF2

**Acknowledge:**

IMMEDIATELY (POWER ON)

**Cause:**

The parameter cannot be parameterized with this value.

Note:

This message does not result in a safety stop response.

Fault value (r0949, interpret decimal):

yyyyxxxx dec: yyyy = supplementary information, xxxx = parameter

yyyy = 0:

No information available.

xxxx = 9500 and yyyy = 1:

Parameter p9500 is not equal to p9300 or not an integer multiple of the sampling time of the current controller (p0115[0]).

xxxx = 9501:

It is not permissible to enable the function "n < nx hysteresis and filtering" (p9501.16) in conjunction with the function "Extended functions without selection" (p9601.5).

xxxx = 9501 and yyyy = 8:

Referencing via SCC (p9501.27 = 1) is enabled without enabling an absolute motion monitoring function (p9501.1 or p9501.2).

xxxx = 9501 and yyyy = 10:

Referencing via SCC (p9501.27 = 1) and epos (r0108.4 = 1) are simultaneously enabled.

xxxx = 9505:

When SLP is active (p9501.1 = 1), the modulo function is activated and this is not permitted (p9505 not equal to 0).

xxxx = 9506 and yyyy = 1:

Parameter p9506 is not equal to p9306.

xxxx = 9511 and yyyy = 1:

Parameter p9511 is not equal to p9311.

xxxx = 9511 and yyyy = 2:

On a Double Motor Module, between the drive objects, no different values in p9511 and p0115[0] is permitted.

xxxx = 9319:

The fine resolution of the encoder for the second channel is too high.

xxxx = 9522:

The gear stage was set too high.

xxxx = 9534 or 9535:

The limit values of SLP have been set too high (absolute values).

xxxx = 9544:

For linear axes, the maximum value is limited to 1 mm.

xxxx = 9547:

The hysteresis tolerance is not permissible.

xxxx = 9573:

"Referencing via safety control channel" was requested (p9573=263), without enabling the function "Referencing via SCC" (p9501.27=0).

xxxx = 9585:

For Safety without encoder and synchronous motor, p9585 must be set to 4.

xxxx = 9601 and yyyy = 1:

If motion monitoring functions integrated in the drive (p9601.2 = 1) and extended functions without selection (p9601.5 = 1) are enabled, then PROFIsafe (p9601.3 = 1) or onboard F-DI (p9601.4 = 1) is not possible.

xxxx = 9601 and yyyy = 2:

Extended functions without selection (p9601.5 = 1) are enabled without enabling motion monitoring functions integrated in the drive (p9601.2).

xxxx = 9601 and yyyy = 3:

Onboard F-DI are enabled without enabling motion monitoring functions integrated in the drive (p9601.2).

xxxx = 9601 and yyyy = 4:

Onboard F-DI are enabled. Then, it is not permissible to simultaneously set PROFIsafe and F-DI via PROFIsafe (p9501.30).

xxxx = 9601 and yyyy = 5:

Transfer of the SLS limit value via PROFIsafe (p9501.24) has been enabled, without enabling PROFIsafe.

xxxx = 9601 and yyyy = 6:

Transfer of the safe position via PROFIsafe (p9501.25) has been enabled, without enabling PROFIsafe.

xxxx = 9601 and yyyy = 7:

Safe switchover of the gearbox stages (p9501.26) has been enabled without enabling PROFIsafe.

xxxx = 9601 and yyyy = 11:

SS2E (p9501.18 = 1) is enabled without PROFIsafe being enabled.

#### Remedy:

Correct parameter (if required, also on another monitoring channel, p9801).

If xxxx = 9500 and yyyy = 1:

- set p9500 "SI Motion monitoring clock cycle" as an integer multiple of p0115[0] "Current controller sampling time".

- align parameters 9300 and 9500, backup parameters (p0971 = 1) and carry out a POWER ON.

If xxxx = 9501:

- correct parameters p9501.16 and p9301.16, or deselect the extended functions without selection (p9601.5).

If xxxx = 9501 and yyyy = 8:

Inhibit referencing via SCC (p9501.27) or enable an absolute motion monitoring function (p9501.1 or p9501.2).

If xxxx = 9501 and yyyy = 10:

Inhibit referencing via SCC (p9501.27) or epos (r108.4).

If xxxx = 9505:

Correct parameter p9501.1 or p9505.

If xxxx = 9507:

Set synchronous or induction motor according to p0300.

If xxxx = 9506:

Align parameters p9306 and p9506, backup parameters (p0971 = 1) and carry out a POWER ON.

If xxxx = 9511:

Align parameters p9311 and p9511, backup parameters (p0971 = 1) and carry out a POWER ON.

If xxxx = 9517:

Parameter p9516.0 should also be checked.

For xxxx = 9319:

For the SCSE encoder, parameter p9319 must not be set higher than 11.

If xxxx = 9522:

Correct the corresponding parameter.

If xxxx = 9534 or 9535:

Reduce the limit values (absolute values) of SLP.

If xxxx = 9544:

Correct parameter (for linear axes, the maximum value is limited to 1 mm).

If xxxx = 9547:  
With hysteresis/filtering enabled (p9501.16 = 1), the following applies:  
- set parameters p9546 and p9547 according to the following rule:  $p9547 \leq 0.75 \times p9546$ ;  
- the following rule must also be adhered to when actual value synchronization (p9501.3 = 1) is enabled:  $p9547 \geq p9549$ ;  
If xxxx = 9585:  
Correct parameter (if required, also on the second monitoring channel, p9385).  
If xxxx = 9601:  
yyyy = 1:  
Only enable motion monitoring functions integrated in the drive (p9601.2 = 1) and extended functions without selection (p9601.5 = 1), or only enable PROFIsafe (p9601.3 = 1) or only onboard F-DI (p9601.4 = 1).  
yyyy = 2, 3:  
Enable motion monitoring functions integrated in the drive (p9601.2 = 1).  
yyyy = 4:  
If onboard F-DI are enabled, then it is not permissible to simultaneously set PROFIsafe and F-DI via PROFIsafe (p9501.30), deselect PROFIsafe functionality or onboard F-DI.  
yyyy = 5:  
To transfer the SLS limit values via PROFIsafe (p9501.24 = 1), also enable PROFIsafe (p9601.3 = 1) and motion monitoring functions integrated in the drive (p9601.2 = 1).  
yyyy = 6:  
For the safe position via PROFIsafe (p9501.25 = 1), also enable PROFIsafe (p9601.3 = 1) and motion monitoring functions integrated in the drive (p9601.2 = 1).  
yyyy = 7:  
For safe switchover of gearbox stages (p9501.26 = 1) also enable PROFIsafe (p9601.3 = 1) and motion monitoring functions integrated in the drive (p9601.2 = 1).  
Note:  
SCSE: Single Channel Safety Encoder (single-channel encoder)  
SS2E: Safe Stop 2 external (Safe Stop 2 with external stop, external STOP D)

<b>F01682</b>	<b>SI Motion P1 (CU): Monitoring function not supported</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The monitoring function enabled in p9501, p9601, p9801, p9307 or p9507 is not supported in this firmware version. Note: This fault results in a STOP A that cannot be acknowledged. Fault value (r0949, interpret decimal): 1: Monitoring function SLP not supported (p9501.1). 2: Monitoring function SCA not supported (p9501.7 and p9501.8 ... 15 and p9503). 3: Monitoring function SLS override not supported (p9501.5). 4: Monitoring function external ESR activation not supported (p9501.4). 5: Monitoring function F-DI in PROFIsafe not supported (p9501.30). 6: Enable actual value synchronization not supported (p9501.3). 9: Monitoring function not supported by the firmware or enable bit not used. 10: Monitoring functions only supported for a SERVO drive object. 11: Encoderless monitoring functions (p9506.1) only supported for motion monitoring integrated in the drive (p9601.2). 12: Monitoring functions for ncSI are not supported for CU305. 20: Motion monitoring functions integrated in the drive are only supported in conjunction with PROFIsafe (p9501, p9601.1 ... 2 and p9801.1 ... 2). 21: Enable a safe motion monitoring function (in p9501), not supported for enabled basic functions via PROFIsafe (p9601.2 = 0, p9601.3 = 1). 22: Encoderless monitoring functions in "chassis" format not supported. 23: CU240 does not support monitoring functions requiring an encoder.		

- 24: Monitoring function SDI not supported (p9501.17).
- 25: Drive-integrated motion monitoring functions not supported (p9501, p9601.2).
- 26: Hysteresis and filtering for SSM monitoring function without an encoder not supported (p9501.16).
- 27: This hardware does not support onboard F-DI and F-DO.
- 28: Encoderless monitoring functions are not supported for synchronous motors (p9507.2).
- 29: SINAMICS S120M: Safety Extended Functions without encoder not supported.
- 31: This hardware does not support transfer SLS (SG) limit value via PROFIsafe (p9301/p9501.24).
- 33: Safety functions without selection not supported (p9601.5, p9801.5).
- 34: This module does not support safe position via PROFIsafe.
- 36: Function "SS1E" not supported.
- 37: Safe actual value sensing with HTL/TTL encoder (SMC30) not supported.
- 38: It is not permissible to simultaneously enable the safety functions (p9601) and the essential service mode (ESM, Essential Service Mode, p3880).
- 39: This module or software version of the CU/MM does not support safe gearbox stage switchover (p9501.26).
- 40: SIMOTION D410-2: Motion monitoring functions integrated in the drive or PROFIsafe control not supported.
- 41: SIMOTION D410-2: Safety functions not supported for the "Chassis" format.
- 42: Motion monitoring functions SLP and SP not supported for D4x5-2 and CX32-2 (p9501.1/25).
- 43: Motion monitoring functions SLP and SP as well as PROFIsafe telegrams 31/901/902 not supported for D410-2 (p9501.1/24/25/30, p9611).
- 44: This module/this software version does not support referencing via the safety control channel (p9501.27).
- 45: Deactivating SOS/SLS during an external STOP A is not supported (p9501.23).
- 46: This software version does not support control of the basis functions via TM54F and the simultaneous enable of the extended functions or ncSI or Profisafe.
- 50: Shortening the switchover times for SOS (p9569/p9369, p9567/p9367) is not supported.
- 51: Safe actual value sensing with SCSE is not supported for dbSi (motion monitoring functions integrated in the drive, p9601.2 = 1).
- 52: "SBR with encoder" function is not supported (p9506 = 2).
- 53: SS2E function not supported (p9501.18).
- 9586: The set value of p9586/p9386 is greater than the supported maximum value.
- 9588: The set value of p9588/p9388 is greater than the supported maximum value.
- 9589: The set value of p9589/p9389 is greater than the supported maximum value.
- 9612: The setting p9612/p9812 = 1 is not supported for control via TM54F.

**Remedy:**

- deselect the monitoring function involved (p9501, p9503, p9506, p9601, p9801, p9307, p9507).
- reduce the set value (p9586, p9588, p9589).

For fault value = 9612:

- set parameter p9612/p9812 = 0.

Note:

ESR: Extended Stop and Retract

SBR: Safe Brake Ramp (safe brake ramp monitoring)

SCA: Safe Cam / SN: Safe software cam

SDI: Safe Direction (safe motion direction)

SI: Safety Integrated

SLP: Safely Limited Position / SE: Safe software limit switches

SLS: Safely Limited Speed / SG: Safely reduced speed

SP: Safe Position

SPL: Safe programmable logic

SS1E: Safe Stop 1 External (Safe Stop 1 with external stop)

SS2E: Safe Stop 2 external (Safe Stop 2 with external stop, external STOP D)

SOS: Safe Operating Stop / SBH: Safe operating stop

SCSE: Single Channel Safety Encoder (single-channel encoder)

See also: p9501 (SI Motion enable safety functions (Control Unit)), p9503 (SI Motion SCA (SN) enable (Control Unit)), r9771 (SI common functions (Control Unit))

<b>F01683</b>	<b>SI Motion P1 (CU): SOS/SLS enable missing</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The safety-relevant basic function "SOS/SLS" is not enabled in p9501 although other safety-relevant monitoring functions are enabled. Note: This fault does not result in a safety stop response.
<b>Remedy:</b>	Enable the function "SOS/SLS" (p9501.0) and carry out a POWER ON. Note: SI: Safety Integrated SLS: Safely Limited Speed / SG: Safely reduced speed SOS: Safe Operating Stop / SBH: Safe operating stop See also: p9501 (SI Motion enable safety functions (Control Unit))
<b>F01684</b>	<b>SI Motion P1 (CU): Safely limited position limit values interchanged</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	For the function "Safely Limited Position" (SLP), a lower value is in p9534 than in p9535. Note: This fault does not result in a safety stop response. Fault value (r0949, interpret decimal): 1: Limit values SLP1 interchanged. 2: Limit values SLP2 interchanged. See also: p9534 (SI Motion SLP (SE) upper limit values (Control Unit)), p9535 (SI Motion SLP (SE) lower limit values (Control Unit))
<b>Remedy:</b>	- correct the lower and upper limit values (p9535, p9534). - carry out a POWER ON (switch off/on). Note: SI: Safety Integrated SLP: Safely Limited Position / SE: Safe software limit switches
<b>F01685</b>	<b>SI Motion P1 (CU): Safely limited speed limit value too high</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The limit value for the function "Safely Limited Speed" (SLS) is greater than the speed that corresponds to an encoder limit frequency of 500 kHz. Note: This fault does not result in a safety stop response. Fault value (r0949, interpret decimal): Maximum permissible speed.



<b>F01688</b>	<b>SI Motion CU: Actual value synchronization not permissible</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	<ul style="list-style-type: none"> <li>- it is not permissible to enable actual value synchronization for a 1-encoder system.</li> <li>- it is not permissible to simultaneously enable actual value synchronization and a monitoring function with absolute reference (SCA/SLP).</li> <li>- it is not permissible to simultaneously enable actual value synchronization and safe position via PROFIsafe.</li> </ul> <p>Note:</p> <p>This fault results in a STOP A that cannot be acknowledged.</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- Either select the "actual value synchronization" function or parameterize a 2-encoder system.</li> <li>- either deselect the function "actual value synchronization" or the monitoring functions with absolute reference (SCA/SLP) and carry out a POWER ON.</li> <li>- either deselect the "actual value synchronization" function or do not enable "Safe position via PROFIsafe".</li> </ul> <p>Note:</p> <p>SCA: Safe Cam / SN: Safe software cam  SI: Safety Integrated  SLP: Safely Limited Position / SE: Safe software limit switches  SP: Safe Position</p> <p>See also: p9501 (SI Motion enable safety functions (Control Unit)), p9526 (SI Motion encoder assignment second channel)</p>
<b>C01689</b>	<b>SI Motion: Axis re-configured</b>
<b>Message value:</b>	Parameter: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	<p>The axis configuration was changed (e.g. changeover between linear axis and rotary axis).  Parameter p0108.13 is internally set to the correct value.</p> <p>Note:</p> <p>This fault does not result in a safety stop response.  Fault value (r0949, interpret decimal):  Parameter number of parameter that initiated the change.  See also: p9502 (SI Motion axis type (Control Unit))</p>
<b>Remedy:</b>	<p>The following should be carried out after the changeover:</p> <ul style="list-style-type: none"> <li>- exit the safety commissioning mode (p0010).</li> <li>- save all parameters (p0977 = 1 or "copy RAM to ROM").</li> <li>- carry out a POWER ON.</li> </ul> <p>Once the Control Unit has been switched on, safety message F01680 or F30680 indicates that the checksums in r9398[0] and r9728[0] have changed in the drive. The following must, therefore, be carried out:</p> <ul style="list-style-type: none"> <li>- activate safety commissioning mode again.</li> <li>- complete safety commissioning of the drive.</li> <li>- exit the safety commissioning mode (p0010).</li> <li>- save all parameters (p0977 = 1 or "copy RAM to ROM").</li> <li>- carry out a POWER ON.</li> </ul> <p>Note:</p> <p>For the commissioning software, the units are only consistently displayed after a project upload.</p>

---

<b>F01690</b>	<b>SI Motion: Data save problem for the NVRAM</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)		
<b>Acknowledge:</b>	POWER ON		
<b>Cause:</b>	There is not sufficient memory space in the NVRAM on the drive to save parameters r9781 and r9782 (safety logbook). Note: This fault does not result in a safety stop response. Fault value (r0949, interpret decimal): 0: There is no physical NVRAM available in the drive. 1: There is no longer any free memory space in the NVRAM.		
<b>Remedy:</b>	For fault value = 0: - use a Control Unit NVRAM. For fault value = 1: - deselect functions that are not required and that take up memory space in the NVRAM. - contact Technical Support. Note: NVRAM: Non-Volatile Random Access Memory (non-volatile read and write memory)		

---

<b>A01691 (F)</b>	<b>SI Motion: Ti and To unsuitable for DP cycle</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The configured times for PROFIBUS communication are not permitted and the DP cycle is used as the actual value acquisition cycle for the safe movement monitoring functions. Isochronous PROFIBUS: The sum of Ti and To is too high for the selected DP cycle. The DP cycle should be at least 1 current controller cycle greater than the sum of Ti and To. No isochronous PROFIBUS: The DP clock cycle must be at least 4x the current controller clock cycle. Notice: If this alarm is not observed, then message C01711 or C30711 – with the value 1020 ... 1021 – can sporadically occur.		
<b>Remedy:</b>	Configure Ti and To low so that they are suitable for the DP cycle or increase the DP cycle time. Alternative when SI monitoring integrated in the drive is enabled (p9601/p9801 > 0): Use the actual value acquisition cycle p9511/p9311 and, in turn, set independently from DP cycle. The actual values sensing clock cycle must be at least 4x the current controller clock cycle. A clock cycle ratio of at least 8:1 is recommended. See also: p9511 (SI Motion actual value sensing cycle clock (Control Unit))		
<b>Reaction upon F:</b>	NONE (OFF1, OFF2, OFF3)		
<b>Acknowl. upon F:</b>	IMMEDIATELY (POWER ON)		

<b>F01692</b>	<b>SI Motion P1 (CU): Parameter value not permitted for encoderless</b>
<b>Message value:</b>	Parameter: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The parameter cannot be set to this value if encoderless motion monitoring functions have been selected in p9506. Note: This fault does not result in a safety stop response. Fault value (r0949, interpret decimal): Parameter number with the incorrect value. See also: p9501 (SI Motion enable safety functions (Control Unit))
<b>Remedy:</b>	- correct the parameter specified in the fault value. - if necessary, de-select encoderless motion monitoring functions (p9506). See also: p9501 (SI Motion enable safety functions (Control Unit))
<b>A01693 (F)</b>	<b>SI P1 (CU): Safety parameter setting changed, warm restart/POWER ON required</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Safety parameters have been changed; these will only take effect following a warm restart or POWER ON. Notice: All changed parameters of the safety motion monitoring functions will only take effect following a warm restart or POWER ON. Alarm value (r2124, interpret decimal): Parameter number of the safety parameter which has changed, necessitating a warm restart or POWER ON.
<b>Remedy:</b>	- carry out a warm restart (p0009 = 30, p0976 = 2, 3). - carry out a POWER ON (switch-off/switch-on) for all components. Note: Before performing an acceptance test, a POWER ON must be carried out for all components.
<b>Reaction upon F:</b>	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)
<b>Acknowl. upon F:</b>	POWER ON
<b>F01694 (A)</b>	<b>SI Motion CU: Firmware version Motor Module/Hydraulic Module older Control Unit</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The firmware version of the Motor Module/Hydraulic Module is older than the version of the Control Unit. It is possible that safety functions are not available (r9771/r9871). Note: This message does not result in a safety stop response. This message can also occur, if after an automatic firmware update, a POWER ON was not carried out (Alarm A01007).
<b>Remedy:</b>	Upgrade the firmware of the Motor Module/Hydraulic Module to a later version. See also: r9390 (SI Motion version safety motion monitoring (Motor Module)), r9590 (SI Motion version safety motion monitoring (Control Unit))

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon A: NONE  
Acknowl. upon A: NONE

---

<b>A01695 (F)</b>	<b>SI Motion: Sensor Module was replaced</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	A Sensor Module, which is used for safe motion monitoring functions, was replaced. The hardware replacement must be acknowledged. An acceptance test must be subsequently performed. Note: This message does not result in a safety stop response.		
<b>Remedy:</b>	Carry out the following steps using the STARTER commissioning software: - press the "Acknowledge hardware replacement" button in the safety screen form. - execute the function "Copy RAM to ROM". - carry out a POWER ON (switch-off/switch-on) for all components. As an alternative, carry out the following steps in the expert list of the commissioning software: - start the copy function for the node identifier on the drive (p9700 = 1D hex). - acknowledge the hardware CRC on the drive (p9701 = EC hex). - save all parameters (p0977 = 1). - carry out a POWER ON (switch-off/switch-on) for all components. Then carry out an acceptance test (refer to the Safety Integrated Function Manual). For SINUMERIK, the following applies: HMI supports the replacement of components with Safety functions (operating area "Diagnostics" --> Softkey "Alarm list" --> Softkey "Confirm SI HW" etc.). The precise procedure is given in the following document: SINUMERIK Function Manual Safety Integrated See also: p9700 (SI Motion copy function), p9701 (Acknowledge SI motion data change)		
Reaction upon F:	NONE (OFF1, OFF2, OFF3)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

---

<b>A01696 (F)</b>	<b>SI Motion: Test stop for the motion monitoring functions selected when booting</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The forced checking procedure (test stop) for the safe motion monitoring functions is already selected when booting, which is not permissible. This is the reason that the test is only carried out again after first selecting the forced checking procedure. Note: This message does not result in a safety stop response. See also: p9705 (SI Motion: Test stop signal source)		
<b>Remedy:</b>	De-select the forced checking procedure for the safe motion monitoring functions and then select again. Notice: It is not permissible to use TM54F inputs to select the test stop. Note: The signal source to select the forced checking procedure is set via binector input p9705. SI: Safety Integrated		
Reaction upon F:	NONE (OFF1, OFF2, OFF3)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

---

<b>A01697 (F)</b>	<b>SI Motion: Test stop for motion monitoring functions required</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>The time set in p9559 for the forced checking procedure (test stop) for the safe motion monitoring functions has been exceeded. A new forced checking procedure is required.</p> <p>After the next time the forced checking procedure is selected, the message is withdrawn and the monitoring time is reset.</p> <p>Note:</p> <ul style="list-style-type: none"> <li>- this message does not result in a safety stop response.</li> <li>- As the switch-off signal paths are not automatically checked during booting, an alarm is always issued once booting is complete.</li> <li>- the test must be performed within a defined, maximum time interval (p9559, maximum of 9000 hours) in order to comply with the requirements as laid down in the standards for timely fault detection and the conditions to calculate the failure rates of safety functions (PFH value). Operation beyond this maximum time period is permissible if it can be ensured that the forced checking procedure is performed before persons enter the hazardous area and who are depending on the safety functions correctly functioning.</li> </ul> <p>See also: p9559 (SI Motion forced checking procedure timer (Control Unit)), r9765 (SI Motion forced check procedure remaining time (Control Unit))</p>		
<b>Remedy:</b>	<p>Carry out the forced checking procedure of the safety motion monitoring functions.</p> <p>The signal source to select the forced checking procedure is set via binector input p9705.</p> <p>Notice:</p> <p>It is not permissible to use TM54F inputs to select the forced checking procedure.</p> <p>Note:</p> <p>SI: Safety Integrated</p> <p>See also: p9705 (SI Motion: Test stop signal source)</p>		
Reaction upon F:	NONE (OFF1, OFF2, OFF3)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

---

<b>A01698 (F)</b>	<b>SI P1 (CU): Commissioning mode active</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	General drive fault (19)		
<b>Drive object:</b>	B_INF, TM54F_MA, VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>The commissioning of the "Safety Integrated" function is selected.</p> <p>This message is withdrawn after the safety functions have been commissioned.</p> <p>Note:</p> <ul style="list-style-type: none"> <li>- this message does not result in a safety stop response.</li> <li>- in the safety commissioning mode, the "STO" function is internally selected.</li> </ul> <p>See also: p0010</p>		
<b>Remedy:</b>	<p>Not necessary.</p> <p>Note:</p> <p>CU: Control Unit</p> <p>SI: Safety Integrated</p>		
Reaction upon F:	Vector: NONE (OFF1, OFF2, OFF3)		
	Infeed: NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

---

<b>A01699 (F)</b>	<b>SI P1 (CU): Test stop for STO required</b>
<b>Message value:</b>	-
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>The time set in p9659 for the forced checking procedure (test stop) for the "STO" function has been exceeded. A new forced checking procedure is required.</p> <p>After the next time the "STO" function is de-selected, the message is withdrawn and the monitoring time is reset.</p> <p>Note:</p> <ul style="list-style-type: none"><li>- this message does not result in a safety stop response.</li><li>- the test must be performed within a defined, maximum time interval (p9659, maximum of 9000 hours) in order to comply with the requirements as laid down in the standards for timely fault detection and the conditions to calculate the failure rates of safety functions (PFH value). Operation beyond this maximum time period is permissible if it can be ensured that the forced checking procedure is performed before persons enter the hazardous area and who are depending on the safety functions correctly functioning.</li></ul> <p>See also: p9659 (SI forced checking procedure timer), r9660 (SI forced checking procedure remaining time)</p>
<b>Remedy:</b>	<p>Select STO and then de-select again.</p> <p>Note:</p> <p>CU: Control Unit SI: Safety Integrated STO: Safe Torque Off / SH: Safe standstill</p>
Reaction upon F:	NONE (OFF1, OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY (POWER ON)

---

<b>C01700</b>	<b>SI Motion P1 (CU): STOP A initiated</b>
<b>Message value:</b>	-
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	<p>The drive is stopped via a STOP A (STO via the safety switch-off signal path of the Control Unit).</p> <p>Possible causes:</p> <ul style="list-style-type: none"><li>- stop request from the second monitoring channel.</li><li>- STO not active after a parameterized time (p9557) after test stop selection.</li><li>- subsequent response to the message C01706 "SI Motion CU: SAM/SBR limit exceeded".</li><li>- subsequent response to the message C01714 "SI Motion CU: Safely Limited Speed exceeded".</li><li>- subsequent response to the message C01701 "SI Motion CU: STOP B initiated".</li><li>- subsequent response to the message C01715 "SI Motion CU: Safely Limited Position exceeded".</li><li>- subsequent response to the message C01716 "SI Motion CU: tolerance for safe motion direction exceeded".</li></ul>
<b>Remedy:</b>	<ul style="list-style-type: none"><li>- remove the cause of the fault on the second monitoring channel.</li><li>- carry out a diagnostics routine for message C01706.</li><li>- carry out a diagnostics routine for message C01714.</li><li>- carry out a diagnostics routine for message C01701.</li><li>- carry out a diagnostics routine for message C01715.</li><li>- carry out a diagnostics routine for message C01716.</li><li>- check the value in p9557 (where available), increase the value if necessary, and carry out a POWER ON</li><li>- check the switch-off signal path of the Control Unit (check DRIVE-CLiQ communication if it has been implemented)</li><li>- replace the Motor Module, Power Module or Hydraulic Module.</li><li>- replace Control Unit.</li></ul>

This message can be acknowledged without a POWER ON as follows (safe acknowledgment):

- Terminal Module 54F (TM54F).
- onboard F-DI (only CU310-2).
- PROFIsafe.
- machine control panel.

Note:

SAM: Safe Acceleration Monitor (safe acceleration monitoring)

SBR: Safe Brake Ramp (safe brake ramp monitoring)

SI: Safety Integrated

---

<b>C01701</b>	<b>SI Motion P1 (CU): STOP B initiated</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE (OFF3)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	<p>The drive is stopped via a STOP B (braking along the OFF3 deceleration ramp).            As a result of this fault, after the time parameterized in p9556 has expired, or the speed threshold parameterized in p9560 has been undershot, message C01700 "STOP A initiated" is output.            Possible causes:</p> <ul style="list-style-type: none"> <li>- stop request from the second monitoring channel.</li> <li>- subsequent response to the message C01714 "SI Motion CU: Safely Limited Speed exceeded".</li> <li>- subsequent response to the message C01711 "SI Motion CU: Defect in a monitoring channel".</li> <li>- subsequent response to the message C01707 "SI Motion CU: tolerance for safe operating stop exceeded".</li> <li>- subsequent response to the message C01715 "SI Motion CU: Safely Limited Position exceeded".</li> <li>- subsequent response to the message C01716 "SI Motion CU: tolerance for safe motion direction exceeded".</li> </ul>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- remove the cause of the fault on the second monitoring channel.</li> <li>- carry out a diagnostics routine for message C01714.</li> <li>- carry out a diagnostics routine for message C01711.</li> <li>- carry out a diagnostics routine for message C01707.</li> <li>- carry out a diagnostics routine for message C01715.</li> <li>- carry out a diagnostics routine for message C01716.</li> </ul> <p>This message can be acknowledged without a POWER ON as follows (safe acknowledgment):</p> <ul style="list-style-type: none"> <li>- Terminal Module 54F (TM54F).</li> <li>- onboard F-DI (only CU310-2).</li> <li>- PROFIsafe.</li> <li>- machine control panel.</li> </ul> <p>Note:</p> <p>SI: Safety Integrated</p>		

---

<b>C01706</b>	<b>SI Motion P1 (CU): SAM/SBR limit exceeded</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	<p>Motion monitoring functions with encoder (p9506 = 0) or encoderless with set acceleration monitoring (SAM, p9506 = 3):</p> <ul style="list-style-type: none"> <li>- after initiating STOP B (SS1) or STOP C (SS2), the speed has exceeded the selected tolerance.</li> </ul> <p>Motion monitoring functions encoderless with set brake ramp monitoring (SBR p9506 = 1):</p> <ul style="list-style-type: none"> <li>- after initiating STOP B (SS1) or SLS changeover to the lower speed level, the speed has exceeded the selected tolerance.</li> </ul> <p>The drive is shut down by the message C01700 "SI Motion: STOP A initiated".</p>		

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:** Check the braking behavior and, if necessary, adapt the parameterization of the parameter settings of the "SAM" or the "SBR" function.  
This message can be acknowledged without a POWER ON as follows (safe acknowledgment):

- Terminal Module 54F (TM54F).
- onboard F-DI (only CU310-2).
- PROFIsafe.
- machine control panel.

**Note:**  
SAM: Safe Acceleration Monitor (safe acceleration monitoring)  
SBR: Safe Brake Ramp (safe ramp monitoring)  
SI: Safety Integrated

See also: p9548 (SI Motion SAM actual velocity tolerance (Control Unit)), p9581 (SI Motion brake ramp reference value (Control Unit)), p9582 (SI Motion brake ramp delay time (Control Unit)), p9583 (SI Motion brake ramp monitoring time (Control Unit))

---

#### **C01707 SI Motion P1 (CU): Tolerance for safe operating stop exceeded**

**Message value:** -

**Message class:** Safety monitoring channel has identified an error (10)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The actual position has distanced itself further from the target position than the standstill tolerance.  
The drive is shut down by the message C01701 "SI Motion: STOP B initiated".

**Remedy:**

- check whether safety faults are present and if required carry out the appropriate diagnostic routines for the particular faults.
- check whether the standstill tolerance matches the accuracy and control dynamic performance of the axis.
- carry out a POWER ON.

This message can be acknowledged without a POWER ON as follows (safe acknowledgment):

- Terminal Module 54F (TM54F).
- onboard F-DI (only CU310-2).
- PROFIsafe.
- machine control panel.

**Note:**  
SI: Safety Integrated  
SOS: Safe Operating Stop / SBH: Safe operating stop  
See also: p9530 (SI Motion standstill tolerance (Control Unit))

---

#### **C01708 SI Motion P1 (CU): STOP C initiated**

**Message value:** -

**Message class:** Safety monitoring channel has identified an error (10)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** STOP2

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The drive is stopped via a STOP C (braking along the OFF3 deceleration ramp).  
"Safe Operating Stop" (SOS) is activated after the parameterized time has expired.  
Possible causes:

- stop request from the higher-level control.
- subsequent response to the message C01714 "SI Motion CU: Safely Limited Speed exceeded".
- subsequent response to the message C01715 "SI Motion CU: Safely Limited Position exceeded".
- subsequent response to the message C01716 "SI Motion CU: tolerance for safe motion direction exceeded".

See also: p9552 (SI Motion transition time STOP C to SOS (SBH) (Control Unit))

**Remedy:**

- remove the cause of the fault at the control.
- carry out a diagnostics routine for message C01714/C01715/C01716.

This message can be acknowledged without a POWER ON as follows (safe acknowledgment):

- Terminal Module 54F (TM54F).
- onboard F-DI (only CU310-2).
- PROFIsafe.
- machine control panel.

Note:

SI: Safety Integrated

SOS: Safe Operating Stop / SBH: Safe operating stop

### C01709

#### SI Motion P1 (CU): STOP D initiated

**Message value:** -

**Message class:** Safety monitoring channel has identified an error (10)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The drive is stopped via a STOP D (braking along the path).  
"Safe Operating Stop" (SOS) is activated after the parameterized time has expired.

Possible causes:

- stop request from the higher-level control.
- subsequent response to the message C01714 "SI Motion CU: Safely Limited Speed exceeded".
- subsequent response to the message C01715 "SI Motion CU: Safely Limited Position exceeded".
- subsequent response to the message C01716 "SI Motion CU: tolerance for safe motion direction exceeded".

See also: p9553 (SI Motion transition time STOP D to SOS (SBH) (Control Unit))

**Remedy:**

- remove the cause of the fault at the control.
- carry out a diagnostics routine for message C01714/C01715/C01716.

This message can be acknowledged without a POWER ON as follows (safe acknowledgment):

- Terminal Module 54F (TM54F).
- onboard F-DI (only CU310-2).
- PROFIsafe.
- machine control panel.

Note:

SI: Safety Integrated

SOS: Safe Operating Stop / SBH: Safe operating stop

### C01710

#### SI Motion P1 (CU): STOP E initiated

**Message value:** -

**Message class:** Safety monitoring channel has identified an error (10)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The drive is stopped via a STOP E (retraction motion).  
"Safe Operating Stop" (SOS) is activated after the parameterized time has expired.

Possible causes:

- stop request from the higher-level control.
- subsequent response to the message C01714 "SI Motion CU: Safely Limited Speed exceeded".
- subsequent response to the message C01715 "SI Motion CU: Safely Limited Position exceeded".
- subsequent response to the message C01716 "SI Motion CU: tolerance for safe motion direction exceeded".

See also: p9554 (SI Motion transition time STOP E to SOS (SBH) (Control Unit))

**Remedy:**

- remove the cause of the fault at the control.
- carry out a diagnostics routine for message C01714/C01715/C01716.

This message can be acknowledged without a POWER ON as follows (safe acknowledgment):

- Terminal Module 54F (TM54F).
- onboard F-DI (only CU310-2).
- PROFIsafe.
- machine control panel.

Note:

SI: Safety Integrated

SOS: Safe Operating Stop / SBH: Safe operating stop

---

<b>C01711</b>	<b>SI Motion P1 (CU): Defect in a monitoring channel</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	<p>When cross-comparing the two monitoring channels, the drive detected a difference between the input data or results of the monitoring functions and initiated a STOP F. One of the monitoring functions no longer reliably functions - i.e. safe operation is no longer possible.</p> <p>If at least one monitoring function is active, then after the parameterized timer has expired, the message C01701 "SI Motion: STOP B initiated" is output.</p> <p>The message value that resulted in a STOP F is displayed in r9725.</p> <p>If the drive is operated together with a SINUMERIK, the message values are described in message 27001 of SINUMERIK, with the exception of the following message values, which can only occur in SINAMICS:</p> <p>1007: communication error with the PLC (sign-of-life).</p> <p>1008: communication error with the PLC (CRC).</p> <p>The following described message values involve the crosswise data comparison between the two monitoring channels (safety functions integrated in the drive).</p> <p>The message values may also occur in the following cases if the cause that is explicitly mentioned does not apply:</p> <ul style="list-style-type: none"> <li>- cycle times not uniformly parameterized (p9500/p9300 and p9511/p9311)</li> <li>- differently parameterized axis types (p9502/p9302).</li> <li>- excessively fast cycle times (p9500/p9300, p9511/p9311).</li> <li>- For message values 3, 44 ... 57, 232 and 1-encoder system, differently set encoder parameters.</li> <li>- For message values 3, 44 ... 57, 232 and 2-encoder system, encoder parameters that have not been correctly set.</li> <li>- incorrect synchronization.</li> </ul> <p>Message value (r9749, interpret decimal):</p> <p>0 to 999: Number of the cross-compared data that resulted in this fault.</p> <p>Message values that are not subsequently listed are only for internal Siemens troubleshooting.</p> <p>0: Stop request from the other monitoring channel.</p> <p>1: Status image of monitoring functions SOS, SLS or SLP (result list 1) (r9710[0], r9710[1]).</p> <p>2: Status image of monitoring function SCA or n &lt; nx (result list 2) (r9711[0], r9711[1]).</p> <p>3: The position actual value differential (r9713[0/1]) between the two monitoring channels is greater than the tolerance in p9542/p9342. When actual value synchronization is enabled (p9501.3/p9301.3), the velocity differential (based on the position actual value) is greater than the tolerance in p9549/p9349.</p> <p>4: Error when synchronizing the crosswise data comparison between the two channels.</p> <p>5: Function enable signals (p9501/p9301) Safety monitoring clock cycle too small (p9500/p9300).</p> <p>6: Limit value for SLS1 (p9531[0]/p9331[0])</p> <p>7: Limit value for SLS2 (p9531[1]/p9331[1])</p> <p>8: Limit value for SLS3 (p9531[2]/p9331[2])</p> <p>9: Limit value for SLS4 (p9531[3]/p9331[3])</p> <p>10: Standstill tol. (p9530/p9330)</p> <p>11: Upper limit value for SLP1 (p9534[0]/p9334[0]).</p> <p>12: Lower limit value for SLP1 (p9535[0]/p9335[0]).</p> <p>13: Upper limit value for SLP2 (p9534[1]/p9334[1]).</p> <p>14: Lower limit value for SLP2 (p9535[1]/p9335[1]).</p>		

- 31: Position tolerance (p9542/p9342) or (p9549/p9349) when actual value synchronization is enabled (p9501.3/p9301.3)
- 32: Position tolerance for safe referencing (p9544/p9344).
- 33: Time, velocity changeover (p9551/p9351)
- 35: Delay time, STOP A (p9556/p9356)
- 36: Checking time, STO (p9557/p9357)
- 37: Trans. time, STOP C to SOS (p9552/p9352)
- 38: Trans. time STOP D to SOS (p9553/p9353)
- 39: Trans. time, STOP E to SOS (p9554/p9354)
- 40: Stop response for SLS (p9561/p9361)
- 41: Stop response for SLP1 (p9562[0]/p9362[0])
- 42: Shutdown speed, STO (p9560/p9360)
- 43: Memory test, stop response (STOP A).
- 44 ... 57: General

Possible cause 1 (during commissioning or parameter modification)

The tolerance value for the monitoring function is not the same on the two monitoring channels.

Possible cause 2 (during active operation)

The limit values are based on the actual value (r9713[0/1]). If the safe actual values on the two monitoring channels do not match, the limit values, which have been set at a defined interval, will also be different (i.e. corresponding to message value 3). This can be ascertained by checking the safe actual positions.

Permissible deviation between the two monitoring channels: p9542/p9342.

44: Position actual value (r9713[0/1]) + limit value SLS1 (p9531[0]/p9331[0]) \* safety monitoring clock cycle (p9500/p9300).

45: Position actual value (r9713[0/1]) - limit value SLS1 (p9531[0]/p9331[0]) \* safety monitoring clock cycle (p9500/p9300).

46: Position actual value (r9713[0/1]) + limit value SLS2 (p9531[1]/p9331[1]) \* safety monitoring clock cycle (p9500/p9300).

47: Position actual value (r9713[0/1]) - limit value SLS2 (p9531[1]/p9331[1]) \* safety monitoring clock cycle (p9500/p9300).

48: Position actual value (r9713[0/1]) + limit value SLS3 (p9531[2]/p9331[2]) \* safety monitoring clock cycle (p9500/p9300).

49: Position actual value (r9713[0/1]) - limit value SLS3 (p9531[2]/p9331[2]) \* safety monitoring clock cycle (p9500/p9300).

50: Position actual value (r9713[0/1]) + limit value SLS4 (p9531[3]/p9331[3]) \* safety monitoring clock cycle (p9500/p9300).

51: Position actual value (r9713[0/1]) - limit value SLS4 (p9531[3]/p9331[3]) \* safety monitoring clock cycle (p9500/p9300).

52: Standstill position + tolerance (p9530/9330)

53: Standstill position - tolerance (p9530/9330)

54: Position actual value (r9713[0/1]) + limit value nx (p9546/p9346) \* safety monitoring clock cycle (p9500/p9300) + tolerance (p9542/p9342).

55: Position actual value (r9713[0/1]) + limit value nx (p9546/p9346) \* safety monitoring clock cycle (p9500/p9300).

56: Position actual value (r9713[0/1]) - limit value nx (p9546/p9346) \* safety monitoring clock cycle (p9500/p9300).

57: Position actual value (r9713[0/1]) - limit value nx (p9546/p9346) \* safety monitoring clock cycle (p9500/p9300) - tolerance (p9542/p9342).

58: Actual stop request.

75: Velocity limit nx (p9546, p9346).

When the function "n < nx: hysteresis and filtering" (p9501.16 = 1) is enabled, this message value is also output for a different hysteresis tolerance (p9547/p9347).

76: Stop response for SLS1 (p9563[0]/p9363[0])

77: Stop response for SLS2 (p9563[1]/p9363[1])

78: Stop response for SLS3 (p9563[2]/p9363[2])

79: Stop response for SLS4 (p9563[3]/p9363[3])

80: Modulo value for SP for rotary axes (p9505/p9305).

81: Velocity tolerance for SAM (p9548/p9348)

82: SGEs for SLS correction factor.

83: Acceptance test timer (p9558/p9358)

## 4 Faults and alarms

### 4.2 List of faults and alarms

- 84: Trans. time STOP F (p9555/p9355)
- 85: Trans. time bus failure (p9580/p9380)
- 86: ID 1-encoder system (p9526/p9326).
- 87: Encoder assignment, second channel (p9526/p9326)
- 89: Encoder limit freq.
- 230: Filter time constant for  $n < n_x$ .
- 231: Hysteresis tolerance for  $n < n_x$ .
- 232: Smoothed velocity actual value.
- 233: Limit value  $n_x$  / safety monitoring clock cycle + hysteresis tolerance.
- 234: Limit value  $n_x$  / Safety monitoring clock cycle.
- 235: -Limit value  $n_x$  / Safety monitoring clock cycle.
- 236: -Limit value  $n_x$  / safety monitoring clock cycle - hysteresis tolerance.
- 237: SGA  $n < n_x$ .
- 238: speed limit value for SAM (p9568/p9368 or p9346/p9346).
- 239: Acceleration for SBR (p9581/p9381 and p9583/p9383).
- 240: Inverse value of acceleration for SBR (p9581/p9381 and p9583/p9383).
- 241: Deceleration time for SBR (p9582/p9382).
- 242: Encoderless safety (p9506/p9306).
- 243: Function configuration (p9507/p9307).
- 244: Encoderless actual value sensing filter time (p9587/p9387).
- 245: Encoderless actual value sensing minimum current (p9588/p9388).
- 246: Voltage tolerance acceleration (p9589/p9389).
- 247: SDI tolerance (p9564/p9364).
- 248: SDI positive upper limit (7FFFFFFF hex).
- 249: Position actual value (r9713[0/1]) - SDI tolerance (p9564/p9364).
- 250: Position actual value (r9713[0/1]) + SDI tolerance (p9564/p9364).
- 251: SDI negative lower limit (80000001 hex).
- 252: SDI stop response (p9566/p9366).
- 253: SDI delay time (p9565/p9365).
- 254: Setting the evaluation delay for actual value sensing after pulse enable (p9586/p9386).
- 255: Setting, behavior during pulse suppression (p9509/p9309).
- 256: Status image of monitoring functions SOS, SLS, SLP, test stop, SBR, SDI (result list 1 ext) (r9710).
- 257: Safety functions for motion monitoring functions without selection (p9512/p9312) different.
- 258: Fault tolerance, actual value sensing encoderless (p9585/p9385).
- 259: Scaling factor for safe position via PROFIsafe (p9574/p9374) or PROFIsafe telegram (p9611/p9811) different.
- 260: Modulo value including scaling (p9505/p9305 and p9574/p9374) for SP with 16 bit.
- 261: Scaling factor for acceleration for SBR different.
- 262: Scaling factor for the inverse value of the acceleration for SBR different.
- 263: Stop response for SLP2 (p9562[1]/p9362[1])
- 264: Position tolerance including scaling (p9542/p9342 and p9574/p9374) for SP with 16 bit.
- 265: Status image of all change functions (results list 1) (r9710).
- 266: The switchover speed to SOS differs (p9567/p9367).
- 267: The transition time to SOS after standstill differs (p9569/p9369).
- 268: SLP delay time differs (p9577/p9377).
- 269: Factor to increase the position tolerance when switching over the gearbox stage (p9543/p9343).
- 270: Screen form for SGE image: all functions, which are not supported/enabled for the actual parameterization (p9501/p9301, p9601/p9801 and p9506/p9306)..
- 271: Screen form for SGE image: Deselect all bits for the "Safe gearbox switchover" function.
- 272: activation of the increased position tolerance for the "Safe gearbox switchover" function different (p9568/p9368 or p9346/p9346 or "0").
- 273: speed limit value for flattening the ramp for SAM/SBR different.
- 1000: Watchdog timer has expired. Too many signal changes have occurred at safety-relevant inputs.
- 1001: Initialization error of watchdog timer.
- 1002:  
User agreement after the timer has expired different.

The user agreement is not consistent. After a time of 4 s has expired, the status of the user agreement is different in both monitoring channels.

1003:

Reference tolerance exceeded.

When the user agreement is set, the difference between the new reference point that has been determined after the system boots (absolute encoder) or reference point approach (distance-coded or incremental measuring system) and the safe actual position (saved value + traversing distance) is greater than the reference tolerance (p9544). In this case, the user agreement is withdrawn.

1004:

Plausibility error for user agreement.

1. If the user agreement has already been set, then the setting is initiated again. In this case, the user agreement is withdrawn.

2. The user agreement was set, although the axis has still not been referenced.

1005:

- for safe motion monitoring functions without encoder: pulses already suppressed for test stop selection.

- for safe motion monitoring functions with encoder: STO already active for test stop selection.

1011: Acceptance test status between the monitoring channels differ.

1012: Plausibility violation of the actual value from the encoder.

1015: Gearbox switchover (bit 27 in PROFIsafe telegram) takes longer than 2 min.

1020: Cyc. communication failure between the monit. channels.

1021: Cyc. communication failure between the monit. channel and Sensor Module.

1022: Sign-of-life error for DRIVE-CLiQ encoders monitoring channel 1.

1023: Error in the effectiveness test in the DRIVE-CLiQ encoder

1024: Sign-of-life error for HTL/TTL encoders.

1032: Sign-of-life error for DRIVE-CLiQ encoders monitoring channel 2.

1033: Error checking offset between POS1 and POS2 for DRIVE-CLiQ encoder monitoring channel 1.

1034: Error checking offset between POS1 and POS2 for DRIVE-CLiQ encoder monitoring channel 2.

1035: offset between POS1 and POS2 for DRIVE-CLiQ encoder on one of the monitoring channels has changed since the last commissioning.

1039: Overflow when calculating the position.

1041: Current absolute value too low (encoderless)

1042: Current/voltage plausibility error

1043: Too many acceleration phases

1044: Actual current values plausibility error.

5000 ... 5140:

PROFIsafe message values.

For these message values, the failsafe control signals (failsafe values) are transferred to the safety functions.

5000, 5014, 5023, 5024, 5030 ... 5032, 5042, 5043, 5052, 5053, 5068, 5072, 5073, 5082 ... 5087, 5090, 5091, 5122 ... 5125, 5132 ... 5135, 5140:

An internal software error has occurred (only for internal Siemens troubleshooting).

5012: Error when initializing the PROFIsafe driver.

5013: The result of the initialization is different for the two controllers.

5022: Error when evaluating the F parameters. The values of the transferred F parameters do not match the expected values in the PROFIsafe driver.

5025: The result of the F parameterization is different for the two controllers.

5026: CRC error for the F parameters. The transferred CRC value of the F parameters does not match the value calculated in the PST.

5065: A communications error was identified when receiving the PROFIsafe telegram.

5066: A time monitoring error (timeout) was identified when receiving the PROFIsafe telegram.

6000 ... 6166:

PROFIsafe message values (PROFIsafe driver for PROFIBUS DP V1/V2 and PROFINET).

For these message values, the failsafe control signals (failsafe values) are transferred to the safety functions. If "Stop B after failure of the PROFIsafe communication" (p9612) is parameterized, the transfer of the failsafe value is delayed.

The significance of the individual message values is described in safety fault F01611.

7000: Difference of the safe position is greater than the parameterized tolerance (p9542/p9342).

7001: Scaling value for the safe position in the 16 bit notation, too low (p9574/p9374).

#### Remedy:

7002: Cycle counter for transferring the safe position is different in both monitoring channels.

See also: p9555 (SI Motion transition time STOP F to STOP B (Control Unit)), r9725 (SI Motion diagnostics STOP F)

The following generally applies:

The monitoring clock cycles in both channels and the axis types should be checked for equality and the same setting applied if necessary. If the error continues to be identified, increasing the monitoring clock cycles may resolve it.

For message value = 0:

- no error was identified in this monitoring channel. Note the error message of the other monitoring channel (for MM: C30711).

For message value = 3:

Commissioning phase:

- check the encoder parameters, and if required, correct (p9516/p9316, p9517/p9317, p9518/p9318, p9520/p9320, p9521/p9321, p9522/p9322, p9526/p9326).

In operation:

- check the mechanical design and the encoder signals.

- if closed-loop control with edge modulation is parameterized (p1802[x] = 9): parameterize edge modulation for actual value sensing without encoder (p9507.5 = p9307.5 = 1).

For message value = 4:

The monitoring clock cycles in both channels should be checked for equality and if required, set the same. In combination with message value 5 from the other monitoring channel (with MM: C30711), the monitoring clock cycle settings must be increased.

For message value = 11 ... 14:

- the limit values in p9534/p9334 or p9535/p9335 are not equal or have been set too high. Correct the values.

For message value = 232:

- increase the hysteresis tolerance (p9547/p9347). Possibly set the filtering higher (p9545/p9345).

For message value = 1 ... 999:

- if the message value is listed under cause: Check the crosswise-compared parameters to which the message value refers.

- copy the safety parameters.

- carry out a POWER ON (switch-off/switch-on) for all components.

- upgrade the Motor Module software.

- upgrade the Control Unit software.

- correction of the encoder evaluation. The actual values differ as a result of mechanical faults (V belts, travel to a mechanical endstop, wear and window setting that is too narrow, encoder fault, ...).

Note:

For SINAMICS firmware version  $\geq 4.7$ , the CDC list is increased when setting p9567  $> 0$ . For a non-compatible version of SINUMERIK this can lead to an error for the crosswise data comparison (is indicated with message value  $\geq 237$ ). If necessary, p9567 must be set = 0, or the firmware version of SINUMERIK upgraded.

For message value = 1000:

- investigate the signal associated with the safety-relevant input (contact problems).

For message value = 1001:

- carry out a POWER ON (switch-off/switch-on) for all components.

- upgrade the Motor Module software.

- upgrade the Control Unit software.

For message value = 1002:

- perform safe acknowledgment, set the user agreement in both monitoring channels simultaneously (within 4 s).

For message value = 1003:

- check the mechanical system of the axis. It is possible that the axis was shifted when switched-off, and the last saved actual position no longer corresponds with the new actual position after the system has been powered up again.

- increase the tolerance for the actual value comparison when referencing (p9544).

Then check the actual values, perform a POWER ON and set the user agreement again.

For message value = 1004:

For 1., the following applies: Perform safe acknowledgment. Set the user agreement again.

For 2., the following applies: Perform safe acknowledgment. Only set the user agreement again if the axis has been referenced.

For message value = 1005:

- for safe motion monitoring functions without encoder: check the conditions for pulse enable.
- for safe motion monitoring functions with encoder: check the conditions for STO deselection.

Note:

For a Power Module, the test stop should always be performed for pulse enable (independent of whether with encoder or without encoder).

For message value = 1007:

- check the PLC for the correct operating state (run state, basic program).

For message value = 1008:

- check whether incorrect or overlapping address ranges have been set in SINUMERIK machine data MD10393.

For message value = 1011:

- for diagnostics, refer to parameter (r9571).

For message value = 1012:

- upgrade the Sensor Module firmware to a more recent version.
- for 1-encoder systems, the following applies: check the encoder parameters for equality (p9515/p9315, p9519/p9319, p9523/p9323, p9524/p9324, p9525/p9325, p9529/p9329).
- for a 1-encoder system and 2-encoder system the following applies: in order to correctly copy the encoder parameters from p04xx, p9700 must be set to 46 and p9701 must be set to 172.
- for DQI encoders the following applies: If required, upgrade the firmware version of the Control Unit to a more recent version, which is released for DQI encoders.
- check the electrical cabinet design and cable routing for EMC compliance
- carry out a POWER ON (switch-off/switch-on) for all components or a warm restart (p0009 = 30, p0976 = 2, 3).
- replace the hardware.

For message value = 1020, 1021, 1024:

- check the communication link.
- if required, increase the monitoring cycle clock settings (p9500, p9511).
- carry out a POWER ON (switch-off/switch-on) for all components or a warm restart (p0009 = 30, p0976 = 2, 3).
- replace the hardware.

For message value = 1033, 1034:

- if required, upgrade the firmware version of the Control Unit to a more recent version, which is released for DQI encoders.

For message value = 1035, if one of the safety encoders was replaced:

- confirm the hardware replacement (p9700 = 29, p9701 = 236 or p9702 = 29).
- save all parameters (p0977 = 1 or p0971 = 1 or "copy RAM to ROM").
- acknowledge fault (e.g. BI: p2103).

For message value = 1039:

- check the conversion factors such as spindle pitch or gearbox ratios.

For message value = 1041:

- check whether the motor has sufficient current (>r9785[0]).
- reduce the minimum current (p9588).
- for synchronous motors increase the absolute value of p9783.
- check whether the function "Closed-loop controlled operation with HF signal injection" is activated (p1750.5 = 1) and if required, deactivate.

For message value = 1042:

- increase the ramp-function generator ramp-up/down time (p1120/p1121).
- check that the current/speed control is set correctly (torque-generating/field-generating current and actual speed value may not fluctuate).
- reduce the dynamic response of the setpoint value.
- check the absolute current and voltage values, and set the control behavior so that this is greater than 3% of the rated converter data in operation or in the case of a fault.
- increase the minimum current (p9588/p9388).

For message value = 1043:

- increase the voltage tolerance (p9589).
- increase the ramp-function generator ramp-up/down time (p1120/p1121).
- check that the current/speed control is set correctly (torque-generating/field-generating current and actual speed value may not fluctuate).
- reduce the dynamic response of the setpoint value.

For message value = 5000, 5014, 5023, 5024, 5030, 5031, 5032, 5042, 5043, 5052, 5053, 5068, 5072, 5073, 5082 ... 5087, 5090, 5091, 5122 ... 5125, 5132 ... 5135, 5140:

- carry out a POWER ON (switch-off/switch-on) for all components.
- check whether there is a DRIVE-CLiQ communication error between the Control Unit and the Motor Module involved and, if required, carry out a diagnostics routine for the faults identified.
- upgrade firmware to later version.
- contact Technical Support.
- replace the Control Unit.

For message value = 5012:

- check the setting of the PROFIsafe address of the Control Unit (p9610) and that of the Motor Module (p9810). It is not permissible for the PROFIsafe address to be 0 or FFFF!

For message value = 5013, 5025:

- carry out a POWER ON (switch-off/switch-on) for all components.
- check the setting of the PROFIsafe address of the Control Unit (p9610) and that of the Motor Module (p9810).
- check whether there is a DRIVE-CLiQ communication error between the Control Unit and the Motor Module involved and, if required, carry out a diagnostics routine for the faults identified.

For message value = 5022:

- check the setting of the values of the F parameters at the PROFIsafe slave (F\_SIL, F\_CRC\_Length, F\_Par\_Version, F\_Source\_Add, F\_Dest\_add, F\_WD\_Time).

For message value = 5026:

- check the settings of the values of the F parameters and the F parameter CRC (CRC1) calculated from these at the PROFIsafe slave and update.

For message value = 5065:

- check the configuration and communication at the PROFIsafe slave (cons. No. / CRC).
- check the setting of the value for F parameter F\_WD\_Time on the PROFIsafe slave and increase if necessary.
- check whether there is a DRIVE-CLiQ communication error between the Control Unit and the Motor Module involved and, if required, carry out a diagnostics routine for the faults identified.

For message value = 5066:

- check the setting of the value for F parameter F\_WD\_Time on the PROFIsafe slave and increase if necessary.
- evaluate diagnostic information in the F host.
- check PROFIsafe connection.

For message value = 6000 ... 6999:

Refer to the description of the message values in safety fault F01611.

For message value = 7000:

- increase the position tolerance (p9542/p9342).
- determine the actual position of CU (r9713[0] and the second channel r9713[1], and check the difference for plausibility.
- reduce the difference of the actual position from CU (r9713[0] and the second channel r9713[1] for a 2-encoder system.

For message value = 7001:

- increase the scaling value for the safe position in the 16 bit notation (p9574/p9374).
- if required, reduce the traversing range.

For message value = 7002:

- carry out a POWER ON (switch-off/switch-on) for all components.
- check whether there is a DRIVE-CLiQ communication error between the Control Unit and the Motor Module involved and, if required, carry out a diagnostics routine for the faults identified.

This message can be acknowledged without a POWER ON as follows (safe acknowledgment):

- Terminal Module 54F (TM54F).
- onboard F-DI (only CU310-2).
- PROFIsafe.
- machine control panel.

See also: p9300 (SI Motion monitoring clock cycle (Motor Module)), p9500 (SI Motion monitoring clock cycle (Control Unit))

<b>C01712</b>	<b>SI Motion P1 (CU): Defect in F-IO processing</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	<p>When cross checking and comparing the two monitoring channels, the drive detected a difference between parameters or results of the F-IO processing and initiated a STOP F. One of the monitoring functions no longer reliably functions - i.e. safe operation is no longer possible.</p> <p>The safety message C01711 with message value 0 is also displayed due to initiation of STOP F.</p> <p>If at least one monitoring function is active, the safety message C01701 "SI Motion: STOP B initiated" is output after the parameterized timer has expired.</p> <p>Message value (r9749, interpret decimal):</p> <p>Number of the cross-compared data that resulted in this message.</p> <ol style="list-style-type: none"> <li>1: SI discrepancy monitoring time inputs (p10002, p10102).</li> <li>2: SI acknowledgment internal event input terminal (p10006, p10106).</li> <li>3: SI STO input terminal (p10022, p10122).</li> <li>4: SI SS1 input terminal (p10023, p10123).</li> <li>5: SI SS2 input terminal (p10024, p10124).</li> <li>6: SI SOS input terminal (p10025, p10125).</li> <li>7: SI SLS input terminal (p10026, p10126).</li> <li>8: SI SLS_Limit(1) input terminal (p10027, p10127).</li> <li>9: SI SLS_Limit(2) input terminal (p10028, p10128).</li> <li>10: SI Safe State signal selection (p10039, p10139).</li> <li>11 SI F-DI input mode (p10040, p10140).</li> <li>12: SI F-DO 0 signal sources (p10042, p10142).</li> <li>13: Different states for static inactive signal sources (p10006, p10022 ... p10031).</li> <li>14: SI discrepancy monitoring time outputs (p10002, p10102).</li> <li>15: SI acknowledgment internal event (p10006, p10106).</li> <li>16: SI test sensor feedback signal test mode selected for test stop (p10046, p10146, p10047, p10147).</li> <li>17: SI delay time for test stop at DOs (p10001).</li> <li>18 ... 25: SI test sensor feedback signal (p10046, p10146, p10047, p10147). Expected state of internal readback signal, generated from the selected test stop mode.</li> <li>26 ... 33: SI test sensor feedback signal (p10046, p10146, p10047, p10147). Expected state of external readback signal, generated from the selected test stop mode.</li> <li>34 ... 41: SI test sensor feedback signal (p10046, p10146, p10047, p10147). Expected state of second internal readback signal, generated from the selected test stop mode.</li> <li>42: Internal data for processing the second internal readback signal, generated from the selected test stop mode (p10047, p10147).</li> <li>43: Internal data for processing the internal readback signal, generated from the selected test stop mode (p10047, p10147).</li> <li>44: Internal data for processing the external readback signal, generated from the selected test stop mode (p10047, p10147).</li> <li>45: Internal data for initialization state of test stop mode, dependent upon test stop parameters.</li> <li>46: SI digital inputs debounce time (p10017, p10117)</li> <li>47: Selection F-DI for PROFIsafe (p10050, p10150)</li> <li>48: Screen form of the F-DIs used (p10006, p10022 ... p10031).</li> <li>49: SI SDI positive input terminal (p10030, p10130).</li> </ol>		

## 4 Faults and alarms

### 4.2 List of faults and alarms

- 50: SI SDI negative input terminal (p10031, p10131).
- 51: SI SLP input terminal (p10032, p10132).
- 52: SI SLP select input terminal (p10033, p10133).
- 53: Internal data for retraction logic (p10009, p100109).
- 54: SI F-DI for retraction SLP (p10009, p100109).

**Remedy:**

- check parameterization in the parameters involved and correct if required.
- ensure equality by copying the SI data to the second channel and then carry out an acceptance test.
- check monitoring clock cycle in p9500 and p9300 for equality.

This message can be acknowledged without a POWER ON as follows (safe acknowledgment):

- onboard F-DI (only CU310-2).
- PROFIsafe.
- machine control panel.

See also: p9300 (SI Motion monitoring clock cycle (Motor Module)), p9500 (SI Motion monitoring clock cycle (Control Unit))

---

**C01714****SI Motion P1 (CU): Safely Limited Speed exceeded**

**Message value:** %1

**Message class:** Safety monitoring channel has identified an error (10)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:**

The drive has moved faster than that specified by the velocity limit value (p9531). The drive is stopped as a result of the configured stop response (p9563).

Message value (r9749, interpret decimal):

- 100: SLS1 exceeded.
- 200: SLS2 exceeded.
- 300: SLS3 exceeded.
- 400: SLS4 exceeded.
- 1000: Encoder limit frequency exceeded.

**Remedy:**

- check the traversing/motion program in the control.
- check limits for SLS and if required adapt accordingly (p9531).

This message can be acknowledged without a POWER ON as follows (safe acknowledgment):

- Terminal Module 54F (TM54F).
- onboard F-DI (only CU310-2).
- PROFIsafe.
- machine control panel.

Note:

SI: Safety Integrated

SLS: Safely Limited Speed / SG: Safely reduced speed

See also: p9531 (SI Motion SLS (SG) limit values (Control Unit)), p9563 (SI Motion SLS (SG)-specific stop response (Control Unit))

---

**C01715****SI Motion P1 (CU): Safely Limited Position exceeded**

**Message value:** %1

**Message class:** Safety monitoring channel has identified an error (10)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:**

The axis has moved past a parameterized position that is monitored by the "SLP" function.

Message value (r9749, interpret decimal):

- 10: SLP1 violated.
- 20: SLP2 violated.



## 4 Faults and alarms

### 4.2 List of faults and alarms

Message value (r9749, interpret decimal):  
requested, invalid reference block.

**Remedy:**

In the PROFIsafe telegram, input data S\_SLS\_LIMIT\_IST must be corrected.  
This message can be acknowledged without a POWER ON as follows (safe acknowledgment):  
- PROFIsafe.

Note:

SI: Safety Integrated

SLS: Safely Limited Speed / SG: Safely reduced speed

---

**C01745****SI Motion P1 (CU): Checking braking torque for the brake test**

**Message value:**

-

**Message class:**

Safety monitoring channel has identified an error (10)

**Drive object:**

VECTOR\_G

**Component:**

None

**Propagation:**

GLOBAL

**Reaction:**

NONE

**Acknowledge:**

POWER ON (IMMEDIATELY)

**Cause:**

The scaling of the brake torque for the brake test can be changed using parameter p2003.  
An acceptance test must be carried out again for the braking test. This determines whether the braking test is still carried out with the correct braking torque.

**Remedy:**

- carry out a POWER ON (switch-off/switch-on) for all components.  
- repeat the acceptance test for the safe brake test if the brake test is used.  
See also: p2003 (Reference torque)

---

**C01750****SI Motion P1 (CU): Hardware fault safety-relevant encoder**

**Message value:**

%1

**Message class:**

Hardware/software error (1)

**Drive object:**

VECTOR\_G

**Component:**

Encoder 1

**Propagation:**

GLOBAL

**Reaction:**

NONE

**Acknowledge:**

IMMEDIATELY (POWER ON)

**Cause:**

The encoder that is used for the safety-relevant motion monitoring functions signals a hardware fault.  
Message value (r9749, interpret decimal):  
Encoder status word 1, encoder status word 2 that resulted in the message.

**Remedy:**

- check the encoder connection.  
- replace encoder.  
This message can be acknowledged without a POWER ON as follows (safe acknowledgment):  
- Terminal Module 54F (TM54F).  
- onboard F-DI (only CU310-2).  
- PROFIsafe.  
- machine control panel.  
Note regarding encoder replacement for a third-party motor:  
The serial number of the encoder must be copied in order to acknowledge this safety message.  
This can be realized using p0440 = 1 or p1990 = 1.

---

**C01751****SI Motion P1 (CU): Effectivity test fault safety-relevant encoder**

**Message value:**

%1

**Message class:**

Safety monitoring channel has identified an error (10)

**Drive object:**

VECTOR\_G

**Component:**

Encoder 1

**Propagation:**

GLOBAL

**Reaction:**

NONE

**Acknowledge:**

IMMEDIATELY (POWER ON)

**Cause:**

The DRIVE-CLiQ encoder for safe motion monitoring signals an error for the effectivity tests.  
Message value (r9749, interpret decimal):  
Only for internal Siemens troubleshooting.

**Remedy:**

- check the encoder connection.  
- replace encoder.

This message can be acknowledged without a POWER ON as follows (safe acknowledgment):

- Terminal Module 54F (TM54F).
- onboard F-DI (only CU310-2).
- PROFIsafe.
- machine control panel.

---

<b>C01752</b>	<b>SI Motion P1 (CU): reference position invalid</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The transferred reference position is invalid. Message value (r9749, interpret decimal): 1: It is not possible to directly transfer the reference position (p9573=89). 2: It is not possible to transfer the reference position into the motion.		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- unpark axis/encoder.</li> <li>- acknowledge encoder fault</li> <li>- deactivate gearbox stage switchover.</li> <li>- when referencing via the Safety Control Channel (SCC), enable the function "Referencing via SCC" (p9501.27/9301.27).</li> </ul> <p>This message can be acknowledged as follows:</p> <ul style="list-style-type: none"> <li>- motion monitoring functions integrated in the drive: Via Terminal Module 54F (TM54F) or PROFIsafe</li> </ul>		

---

<b>C01770</b>	<b>SI Motion P1 (CU): Discrepancy error of the fail-safe inputs/outputs</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The fail-safe digital inputs/digital outputs (F-DI/F-DO) show a different state longer than that parameterized in p10002 / p10102. Fault value (r0949, interpret bitwise binary): yyyyxxxx bin xxxx: Discrepancy error for fail-safe digital inputs (F-DI). Bit 0: Discrepancy error for F-DI 0 Bit 1: Discrepancy error for F-DI 1 ... yyyy: Discrepancy error for fail-safe digital outputs (F-DO). Bit 0: Discrepancy error for F-DO 0 ... Note: If several discrepancy errors occur consecutively, then this message is only signaled for the first error that occurs.		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the wiring of the F-DI (contact problems).</li> </ul> <p>Note:</p> <p>This message can be acknowledged via F-DI or PROFIsafe (safe acknowledgment).</p> <p>Discrepancy errors of an F-DI can only be acknowledged if safe acknowledgment was carried out once after the cause of the error was resolved (p10006, acknowledgment via PROFIsafe, extended message acknowledgment). As long as safety acknowledgment was not carried out, the corresponding F-DI stays in the safe state internally.</p> <p>When the "Extended message acknowledgment" function (p9507.0) is active, the following applies: If the F-DI assigned for STO or SS1 is in a fail-safe state due to a discrepancy error, then when deselecting via this F-DI, safe acknowledgment can no longer be executed.</p> <p>For cyclic switching operations at the F-DI, it may be necessary to adapt the discrepancy time to the switching frequency.</p>		

If the period of a cyclic switching pulse corresponds to twice the value of p10002, then the following formulas should be checked:

- $p10002 < (tp / 2) - td$  (discrepancy time must be less than half the period minus the actual discrepancy time)
- $p10002 \geq p9500$  (discrepancy time must be no less than p9500)
- $p10002 > td$  (discrepancy time must be greater than the switch discrepancy time which may actually apply)

td = possible actual discrepancy time (in ms) that can occur with a switching operation. This must correspond to at least 1 SI monitoring cycle (see p9500).

tp = period for a switching operation in ms.

When debounce p10017 is active, the discrepancy time is directly specified by the debounce time.

If the period of a cyclic switching pulse corresponds to twice the debounce time, then the following formulas should be checked.

- $p10002 < p10017 + 1 \text{ ms} - td$
- $p10002 > td$
- $p10002 \geq p9500$

Example:

For a 12 ms SI monitoring cycle and a switching frequency of 110 ms (p10017 = 0), the maximum discrepancy time which can be set is as follows:

$$p10002 \leq (110/2 \text{ ms}) - 12 \text{ ms} = 43 \text{ ms}$$

Rounded-off, p10002 ≤ 36 ms is obtained (since the discrepancy time can only be accepted as a whole SI monitoring cycle, the value will need to be rounded up or down to a whole SI monitoring cycle if the result is not an exact multiple of an SI monitoring cycle).

Note:

F-DI: Failsafe Digital Input

F-DO: Failsafe Digital Output

---

<b>A01772</b>	<b>SI Motion P1 (CU): Test stop for fail-safe digital outputs running</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The forced checking procedure (test stop) for the fail-safe digital inputs is currently in progress.		
<b>Remedy:</b>	The alarm is automatically withdraw after successfully ending or canceling (when a fault condition occurs) the test stop.		
	Note:		
	F-DO: Failsafe Digital Output		

---

<b>F01773</b>	<b>SI Motion P1 (CU): Test stop fail-safe digital output error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	A fault has occurred on processor 1 during the forced checking procedure (test stop) of the fail-safe digital output.		
	Fault value (r0949, interpret hexadecimal):		
	RRRVWXYZ hex:		
	R: Reserved.		
	V: Actual state of the DO channel concerned (see X) on processor 1 (corresponds to the states read back from the hardware, bit 0 = DO 0, bit 1 = DO 1, etc.).		
	W: Required state of the DO channel concerned (see X, bit 0 = DO 0, bit 1 = DO 1, etc.).		
	X: DO channels involved, which indicate an error (bit 0 = DO 0, bit 1 = DO 1, etc.).		
	Y: Reason for the test stop fault.		
	Z: State of the test stop in which the fault has occurred.		

Y: Reason for the test stop fault

Y = 1: Processor 2 in incorrect test stop state (internal fault).

Y = 2: Expected states of the DOs were not fulfilled (CU305: readback via DI 22 / CU240 readback DI 5).

Y = 3: Incorrect timer state on processor 1 (internal fault)

Y = 4: Expected states of the diag DOs were not fulfilled (CU305: internal readback on processor 2).

Y = 5: Expected states of the second diag DOs were not fulfilled (CU305: internal readback on processor 1).

X and V indicate the DI or Diag-DO state dependent upon the reason for the fault (2, 4 or 5).

In the event of multiple test stop faults, the first one that occurred is shown.

Z: Test stop state and associated test actions

Z = 0 ... 3: Synchronization phase of test stop between processor 1 and processor 2 no switching operations

Z = 4: DO + OFF and DO - OFF

Z = 5: Check to see if states are as expected

Z = 6: DO + ON and DO - ON

Z = 7: Check to see if states are as expected

Z = 8: DO + OFF and DO - ON

Z = 9: Check to see if states are as expected

Z = 10: DO + ON and DO - OFF

Z = 11: Check to see if states are as expected

Z = 12: DO + OFF and DO - OFF

Z = 13: Check to see if states are as expected

Z = 14: End of test stop

Diag expected states in table format:

Test stop state: Expectation Mode 1 / Mode 2 / Mode 3 / Mode 4

5: 0/-/-1

7: 0/-/-0

9: 0/-/-0

11: 1/-/-1

13: 0/-/-1

Second diag expected states in table format:

Test stop state: Expectation Mode 1 / Mode 2 / Mode 3 / Mode 4

5: -/-/-1

7: -/-/-0

9: -/-/-1

11: -/-/-0

13: -/-/-1

DI expected states in table format:

Test stop state: Expectation Mode 1 / Mode 2 / Mode 3 / Mode 4

5: -/1/1/-

7: -/0/0/-

9: -/0/1/-

11: -/0/1/-

13: -/1/1/-

Example:

Fault F01773 (P1) is signaled with fault value = 0001\_0127 and fault F30773 (P2) is signaled with fault value 0000\_0127.

This means that in state 7 (Z = 7) the state of the external readback signal was not set correctly (Y = 2) after DO-0 (X = 1) was switched to ON/ON.

Fault value 0001\_0127 indicates that 0 was expected (W = 0) and 1 (V = 1) was read back from the hardware.

Fault value 0000\_0127 on the processor 2 indicates that the states were as expected.

In the case of fault F30773, W and V are always identical; a value of 0 always means that 0 was expected at the readback input but was not present on processor 1.

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:** Check the wiring of the fail-safe digital output (F-DO) and restart the test stop.  
**Note:**  
- the fault is withdrawn if the test stop is successfully completed.  
- in the event of multiple test stop faults, the first one that occurred is shown. Once the test stop has been restarted the next queued test stop fault will be signaled (if there is one).  
F-DO: Failsafe Digital Output

---

#### **A01774 SI Motion P1 (CU): Test stop for fail-safe digital outputs required**

**Message value:** -  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** Control Unit (CU) **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The time set in p10003 for the forced checking procedure (test stop) for the fail-safe digital outputs has been exceeded. A new forced checking procedure is required.  
After the next time the forced checking procedure is selected, the message is withdrawn and the monitoring time is reset.  
**Note:**  
- this message does not result in a safety stop response.  
- the test must be performed within a defined, maximum time interval (p10003, maximum of 8760 hours) in order to comply with the requirements as laid down in the standards for timely fault detection and the conditions to calculate the failure rates of safety functions (PFH value). Operation beyond this maximum time period is permissible if it can be ensured that the forced checking procedure is performed before persons enter the hazardous area and who are depending on the safety functions correctly functioning.  
See also: p10003 (SI TM54F forced checking procedure timer)  
**Remedy:** Carry out the forced checking procedure for the digital outputs.  
The signal source to select the forced checking procedure is set via binector input p10007.  
**Note:**  
F-DO: Failsafe Digital Output  
See also: p10007 (SI TM54F forced checking procedure F-DI/F-DO signal source)

---

#### **A01780 SBT When selected, the brake is closed**

**Message value:** Following brakes are closed: %1 bin  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** When selecting the brake test or starting the brake test, not all of the brakes were open.  
Alarm value (r2124, interpret binary):  
Bit 0 = 1:  
The internal brake is closed.  
Bit 1 = 1:  
The external brake is closed (p10230.5, p10235.5, p10202).  
**Note:**  
The alarm is also issued, if a brake has not been configured in p10202.  
SBT: Safe Brake Test  
See also: p10202 (SI Motion SBT brake selection), p10230 (SI Motion SBT control word), p10235 (SI Safety Control Channel control word S\_STW3B)  
**Remedy:** Open all brakes and reselect the brake test (p10230.0, p10235.0).

---

**A01781 SBT brake opening time exceeded**

**Message value:** Fault cause: %1 bin  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The maximum time (11 s) to open the brake during the brake test was exceeded.  
Possible causes:  
- during the brake test the drive went into a fault condition, and therefore the brake was closed by the drive.  
- for an external brake, the feedback signal "Brake closed" was signaled too long (p10230.5, p10235).  
Alarm value (r2124, interpret binary):  
Bit 0 = 1:  
Internal brake was not able to be opened.  
Bit 1 = 1:  
External brake was not able to be opened.  
Note:  
SBT: Safe Brake Test  
**Remedy:**  
- carry out a safe acknowledgment.  
- restart the brake test (p10230.1, p10235.1).  
See also: p10230 (SI Motion SBT control word), p10235 (SI Safety Control Channel control word S\_STW3B)

---

**A01782 SBT brake test incorrect control**

**Message value:** Fault cause: %1 bin  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The brake test was canceled as a result of incorrect control.  
Alarm value (r2124, evaluate binary):  
Alarm value 0:  
The brake test was canceled as a result of a fault (brake opening time or brake closing time exceeded).  
Bit 0:  
The safe brake test was canceled by resetting the brake test selection.  
Bit 1:  
The safe brake test was canceled by resetting the brake test start.  
Bit 2:  
The brake, which was selected at the start of the brake test, has not been configured in p10202.  
When starting the brake test, as a result of the test top selection, brake 1 is not configured as internal brake.  
There is a brake test configuration error. In this case, alarm A01785 is also output.  
Note:  
SBT: Safe Brake Test  
See also: p10202 (SI Motion SBT brake selection)  
**Remedy:**  
- check parameterization of the brake test (p10202).  
- check as to whether alarm A01785 is present, and if so, evaluate.  
- carry out a safe acknowledgment.  
- if required, restart the brake test.

---

<b>A01783</b>	<b>SBT brake closing time exceeded</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The maximum time (11 s) to close the brake during the brake test was exceeded. Alarm value (r2124, interpret binary): Bit 0 = 1: Internal brake was not able to be closed. Bit 1 = 1: External brake was not able to be closed. Note: SBT: Safe Brake Test
<b>Remedy:</b>	- When using an external brake, check that the feedback signal "brake closed" is correctly interconnected with the control word of the brake test (p10230.5, p10235.5). - When using an internal brake with external feedback signal, check whether the feedback signal is correctly interconnected with the extended brake control. - carry out a safe acknowledgment. - restart the brake test (p10230.1, p10235.1).

---

<b>A01784</b>	<b>SBT brake test canceled with fault</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The safe brake test was canceled as a result of a fault. Alarm value (r2124, interpret binary): Bit 17 = 1: fault in the brake test sequence (cause, see bits 0 ... 10). Bit 18 = 1: the internal brake is closed. It must be open when the external brake is tested (p10202). Bit 19 = 1: the external brake is closed. It must be open when the internal brake is tested (p10202). Bit 20 = 1: not all brakes are open (p10202). Bit 21 = 1: axis position during the brake test not valid due to parking axis. Bit 22 = 1: internal software error. Bit 23 = 1: the permissible position range of the axis was violated with the brake closed (p10212/ p10222). Bit 24 = 1: the tested internal brake was opened while the brake test was active. Bit 25 = 1: the tested external brake was opened while the brake test was active. Bit 26 = 1: during the active brake test, the test torque left its tolerance bandwidth (20 %). Cause for alarm value bit 17: Bit 0 = 1: operation when selecting the brake test not enabled (r0899.2 = 0). Bit 1 = 1: external fault occurred (e.g. the brake test that has already started is canceled by the user). Bit 2 = 1: when selecting the brake test a brake is closed. Bit 3 = 1: when determining the load torque a brake is closed. Bit 4 = 1: a fault with a stop response has occurred (e.g. OFF1, OFF2 or OFF3) - or pulse enable was withdrawn (e.g. STO selected or operation no longer enabled). Bit 5 = 1: when selecting the brake test the axis speed setpoint is too high. Bit 6 = 1: the actual speed (r0063) of the axis is too high (e.g. brake does not hold during the brake test). Bit 7 = 1: incorrect speed controller mode (e.g. encoderless speed control or U/f operation). Bit 8 = 1: closed-loop control not enabled or function generator active. Bit 9 = 1: control does not switch over to the brake test (e.g. because PI speed control has not been parameterized). Bit 10 = 1: torque limit reached (r1407.7, r1408.8).

<b>Remedy:</b>	<p>Note: SBT: Safe Brake Test</p> <ul style="list-style-type: none"> <li>- remove the fault cause.</li> <li>- carry out a safe acknowledgment.</li> <li>- if required, restart the brake test.</li> </ul> <p>For bit 17 = 1 with bit 6 = 1 or bit 23 = 1: If the brake closing time of the motor holding brake (p1217) has been set too low, then at the start of the brake test, the brake is closed too late. The brake closing time should be adapted (p1217).</p>
<hr/>	
<b>A01785</b>	<b>SBT brake test configuration error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>Error when parameterizing the brake test. In this configuration, the brake test cannot be started or cannot be started without error. Alarm value (r2124, interpret decimal):</p> <p>1: No motion monitoring functions have been enabled.</p> <p>2: Two internal brakes were configured (p10202).</p> <p>4: No internal brakes were configured (p10202).</p> <p>8: The brake test is configured for an internal brake, however the safety brake control is not enabled (p9602/p9802).</p> <p>16: The safe brake test and Safety without encoder are simultaneously enabled (p9306/p9506). This is not permissible.</p> <p>32: The safe brake test and vector u/f control have been enabled. The safe brake test is not possible in this control mode.</p> <p>Note: SBT: Safe Brake Test</p>
<b>Remedy:</b>	Check parameterization of the brake test.
<hr/>	
<b>F01786</b>	<b>SCC signal source changed</b>
<b>Message value:</b>	-
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	<p>The signal source in p10235 or p10250 was changed. The new signal source is effective immediately.</p> <p>Note: SCC: Safety Control Channel See also: p10235 (SI Safety Control Channel control word S_STW3B), p10250 (SI Safety Control Channel control word S_STW1B)</p>
<b>Remedy:</b>	Acknowledge fault.

---

**F01787 SBT motor type different**

**Message value:** -  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** The motor type set for the safe brake test (p10204) does not match the motor type set via the function module (r0108.12).  
**Remedy:** Adapt the motor type set for the safe brake test.  
Note:  
All of the parameters for the brake test, whose unit depends on the motor type, should be checked.  
See also: p10204 (SI Motion SBT motor type), p10209 (SI Motion SBT brake holding torque)

---

**A01788 SI: Automatic test stop waits for STO deselection via motion monitoring functions**

**Message value:** -  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** Control Unit (CU) **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The automatic test stop (forced checking procedure) was not able to be carried out after powering up.  
Possible causes:  
- the STO function is selected via safe motion monitoring functions.  
- a safety message is present, that resulted in a STO.  
Note:  
STO: Safe Torque Off  
**Remedy:** - deselect STO via safe motion monitoring functions.  
- remove the cause of the safety messages and acknowledge the messages.  
Note:  
The automatic test stop is performed after removing the cause.

---

**A01789 SI: Automatic test stop and brake test when test stop is selected not permitted**

**Message value:** -  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** Control Unit (CU) **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The parameterization of the automatic test stop (p9507.6/p9307.6) and the brake test when a test stop is selected (p10203 = 2) are not permissible.  
The test stop is not automatically carried out when the powering up.  
**Remedy:** - correct the parameter assignment.  
- set p10203 not equal to 2 or deactivate the automatic test stop.  
Note:  
A warm restart or POWER ON is required to carry out the automatic test stop.

<b>A01794 (N)</b>	<b>SI Motion: check modulo value for safe position via PROFIsafe</b>
<b>Message value:</b>	-
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	When parameterizing the modulo value for safe position via PROFIsafe (p9505) the position actual value can jump when the range that can be represented overflows. Range that can be represented: - 32-bit value: +/- 2048 revolutions - 16-bit value: +/- 2048 revolutions (depending on p9574)
<b>Remedy:</b>	Correct the parameter assignment. Set p9505 to $2^n$ revolutions - and to complete revolutions (i.e. a multiple of $360^\circ$ ). Note: This alarm can be hidden for the case that the possible position actual value jump can be tolerated for the particular application, or does not represent a problem; for example because the parameterized modulo range fits "almost as integer number" in the range of +/- 2048 revolutions that can be represented. To re-parameterize the alarm to "NO REPORT", it is not permissible that the alarm is present. As a consequence, the following sequence is required for the re-parameterization: - correct p9505 to " $2^n$ ". - re-parameterize the alarm using p2118 and p2119. - set p9505 back to the required value.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>A01795</b>	<b>SI Motion P1 (CU): Wait time after exiting the safe pulse cancellation expired</b>
<b>Message value:</b>	-
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	After exiting safe pulse cancellation, within the wait time of 5 seconds, encoderless actual value sensing was not able to be activated for the extended functions without selection. A change is again made into the "safe pulse cancellation" state.
<b>Remedy:</b>	- check missing enable signals, which prevent the drive control from being commissioned (r0046). - evaluate possible fault messages of the encoderless actual value sensing and remove.
<b>A01796 (F, N)</b>	<b>SI P1 (CU): Wait for communication</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The drive waits for communication to be established to execute the safety-relevant motion monitoring functions. Note: STO is active in this state. Alarm value (r2124, interpret decimal): 1: Wait for communication to be established to SINUMERIK. 2: Wait for communication to be established to TM54F. 3: Wait for communication to be established to PROFIsafe F-Host.

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:** If, after a longer period of time, the message is not automatically withdrawn, the following checks have to be made as appropriate:  
For communication with SINUMERIK, the following applies:  
- check any other PROFIBUS messages/signals present and remove their cause.  
- check that assignment of the axes on the higher-level control to the drives in the drive unit is correct.  
- check enable signal of the safety-relevant motion monitoring functions for the corresponding axis on the higher-level control and if required, set it.  
For communication with TM54F, the following applies:  
- check any other messages/signals present for DRIVE-CLiQ communication with the TM54F and remove their cause.  
- check the setting of p10010. All the drive objects controlled by the TM54F must be listed.  
For communication with PROFIsafe F-Host, the following applies:  
- check any other PROFIsafe communication messages/signals present and evaluate them.  
- check the operating state of the F-Host.  
- check the communication connection to the F Host.  
- check the communication connection to the Motor Module/Hydraulic Module. It must be ensured that when the Control Unit powers up, the Motor Module/Hydraulic Module is connected and at the latest is also switched-on with the Control Unit. Otherwise, if the Motor Module/Hydraulic Module is subsequently inserted or switched on, a POWER ON must be performed at the Control Unit.  
Note:  
STO: Safe Torque Off  
See also: p9601 (SI enable functions integrated in the drive (Control Unit)), p9801 (SI enable functions integrated in the drive (Motor Module)), p10010 (SI TM54F drive object assignment)  
Reaction upon F: NONE (OFF1, OFF2, OFF3)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **C01797 SI Motion P1 (CU): Axis not safely referenced**

**Message value:** %1  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** The standstill position saved before switching off does not match the actual position determined at switch-on.  
Message value (r9749, interpret decimal):  
1: Axis not safely referenced.  
2: User agreement missing.  
**Remedy:** If safe automatic referencing is not possible the user must issue a user agreement for the new position using the softkey. This means that this position is then designated as safety-relevant.  
Note:  
SI: Safety Integrated

---

#### **C01798 SI Motion P1 (CU): Test stop for motion monitoring functions running**

**Message value:** -  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** Control Unit (CU) **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** The forced checking procedure (test stop) for the safe motion monitoring functions is currently in progress.  
**Remedy:** Not necessary.  
The message is automatically withdrawn when the test stop has been completed.  
Note:  
SI: Safety Integrated

---

<b>C01799</b>	<b>SI Motion P1 (CU): Acceptance test mode active</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The acceptance test mode is active. This means the following: - the setpoint velocity limiting is deactivated (r9733). - the standard limit switches are deactivated during the acceptance test for function SLP (SE) (for EPOS internal, otherwise via r10234). - for safety functions with SINUMERIK, the following applies: The POWER ON signals of the safety-relevant motion monitoring functions can be acknowledged during the acceptance test using the acknowledgment functions of the higher-level control.		
<b>Remedy:</b>	Not necessary. The message is withdrawn when exiting the acceptance test mode. Note: SI: Safety Integrated SLP: Safely Limited Position / SE: Safe software limit switches		

---

<b>F01800</b>	<b>DRIVE-CLiQ: Hardware/configuration error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	A DRIVE-CLiQ connection fault has occurred. Fault value (r0949, interpret decimal): 100 ... 107: Communication via DRIVE-CLiQ socket X100 ... X107 has not been switched to cyclic operation. The cause may be an incorrect structure or a configuration that results in an impossible bus timing. 10: Loss of the DRIVE-CLiQ connection. The cause may be, for example, that the DRIVE-CLiQ cable was withdrawn from the Control Unit or as a result of a short-circuit for motors with DRIVE-CLiQ. This fault can only be acknowledged in cyclic communication. 11: Repeated faults when detecting the connection. This fault can only be acknowledged in cyclic communication. 12: A connection was detected but the node ID exchange mechanism does not function. The reason is probably that the component is defective. This fault can only be acknowledged in cyclic communication.		
<b>Remedy:</b>	For fault value = 100 ... 107: - ensure that the DRIVE-CLiQ components have the same firmware versions. - avoid longer topologies for short current controller clock cycles. For fault value = 10: - check the DRIVE-CLiQ cables at the Control Unit. - remove any short-circuit for motors with DRIVE-CLiQ. - carry out a POWER ON. For fault value = 11: - check the electrical cabinet design and cable routing for EMC compliance For fault value = 12: - replace the component involved.		

---

<b>A01839</b>	<b>DRIVE-CLiQ diagnostics: cable fault to the component</b>
<b>Message value:</b>	Component number: %1
<b>Message class:</b>	General drive fault (19)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The fault counter (r9936[0...199]) to monitor the DRIVE-CLiQ connections/cables has been incremented. Alarm value (r2124, interpret decimal): Component number. Note: The component number specifies the component whose feeder cable from the direction of the Control Unit is faulted. The alarm automatically disappears after 5 seconds, assuming that no other data transfer error has occurred. See also: r9936 (DRIVE-CLiQ diagnostic error counter connection)
<b>Propagation:</b>	GLOBAL
<b>Remedy:</b>	- check the corresponding DRIVE-CLiQ cables. - check the electrical cabinet design and cable routing for EMC compliance

---

<b>A01840</b>	<b>SMI: Component found without motor data</b>
<b>Message value:</b>	Component number: %1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	An SMI/DQI without motor data has been found (e.g. SMI installed as replacement part). Alarm value (r2124, interpret decimal): Component number from target topology.
<b>Propagation:</b>	DRIVE
<b>Remedy:</b>	1. Download the SMI/DQI data (motor/encoder data) from the data backup again (p4690, p4691). 2. Carry out a POWER ON (switch-off/switch-on) for this component. Note: DQI: DRIVE-CLiQ Sensor Integrated SMI: SINAMICS Sensor Module Integrated See also: p4690 (SMI spare part component number), p4691 (SMI spare part save/download data)

---

<b>A01900 (F)</b>	<b>PB/PN: Configuration telegram error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A controller attempts to establish a connection using an incorrect configuring telegram. Alarm value (r2124, interpret decimal): 1: Connection established to more drive objects than configured in the device. The drive objects for process data exchange and their sequence are defined in p0978. 2: Too many PZD data words for output or input to a drive object. The number of possible PZD items in a drive object is determined by the number of indices in r2050/p2051. 3: Uneven number of bytes for input or output. 4: Setting data for synchronization not accepted. For more information, see A01902. 211: Unknown parameterizing block.
<b>Propagation:</b>	LOCAL

223:  
Clock synchronization for the PZD interface set in p8815[0] is not permissible.  
More than one PZD interface is operated in clock synchronism.

253:  
PN Shared Device: Illegal mixed configuration of PROFIsafe and PZD.

254:  
PN Shared Device: Illegal double assignment of a slot/subslot.

255:  
PN: Configured drive object and existing drive object do not match.

500:  
Illegal PROFIsafe configuration for the interface set in p8815[1].  
More than one PZD interface is operated with PROFIsafe.

501:  
PROFIsafe parameter error (e.g. F\_dest).

502:  
PROFIsafe telegram does not match.

503:  
PROFIsafe connection is rejected as long as there is no isochronous connection (p8969).

Additional values:  
Only for internal Siemens troubleshooting.

**Remedy:**

Check the bus configuration on the master and the slave sides.

For alarm value = 1, 2:  
- check the list of the drive objects with process data exchange (p0978).

Note:  
With p0978[x] = 0, all of the following drive objects in the list are excluded from the process data exchange.

For alarm value = 2:  
- check the number of data words for output and input to a drive object.

For alarm value = 211:  
- Ensure offline version <= online version.

For alarm value = 223, 500:  
- check the setting in p8839 and p8815.  
- check for inserted but not configured CBE20.  
- Ensure that only one PZD interface is operated in clock synchronism or with PROFIsafe.

For alarm value = 255:  
- check configured drive objects.

For alarm value = 501:  
- check the set PROFIsafe address (p9610).

For alarm value = 502:  
- check the set PROFIsafe telegram (p60022, p9611).

Reaction upon F: NONE (OFF1)  
Acknowl. upon F: IMMEDIATELY

---

**A01902 PB/PN: clock cycle synchronous operation parameterization not permissible**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** Parameterization for isochronous operation is not permissible.  
 Alarm value (r2124, interpret decimal):  
 0: Bus cycle time Tdp < 0.5 ms.  
 1: Bus cycle time Tdp > 32 ms.  
 2: Bus cycle time Tdp is not an integer multiple of the current controller sampling time.  
 3: Instant of the actual value sensing Ti > Bus cycle time Tdp or Ti = 0.

## 4 Faults and alarms

### 4.2 List of faults and alarms

- 4: Instant of the actual value sensing  $T_i$  is not an integer multiple of the current controller sampling time.
- 5: Instant of the setpoint acceptance  $T_o \geq$  Bus cycle time  $T_{dp}$  or  $T_o = 0$ .
- 6: Instant of the setpoint acceptance  $T_o$  is not an integer multiple of the current controller sampling time.
- 7: Master application cycle time  $T_{mapc}$  is not an integer multiple of the speed controller sampling time.
- 8: Bus reserve bus cycle time  $T_{dp}$  - data exchange time  $T_{dx}$  less than two current controller sampling times.
- 10: Instant of the setpoint acceptance  $T_o \leq$  data exchange time  $T_{dx}$  + current controller sampling time
- 11: Master application cycle time  $T_{mapc} > 14 \times T_{dp}$  or  $T_{mapc} = 0$ .
- 12: PLL tolerance window  $T_{pll\_w} > T_{pll\_w\_max}$ .
- 13: Bus cycle time  $T_{dp}$  is not a multiple of all basic clock cycles  $p0110[x]$ .
- 16: For COMM BOARD, the instant in time for the actual value sensing  $T_i$  is less than two current controller sampling times.

**Remedy:**

- Adapt the bus parameterization  $T_{dp}$ ,  $T_i$ ,  $T_o$ .
- adapt the sampling time for the current controller or speed controller.

For alarm value = 10:

- reduce  $T_{dx}$  by using fewer bus participants or shorter telegrams.

Note:  
PB: PROFIBUS  
PN: PROFINET

---

#### **F01910 (N, A) Fieldbus: setpoint timeout**

**Message value:** -

**Message class:** Communication error to the higher-level control system (9)

**Drive object:** B\_INF, ENC, TB30, TM120, TM150, TM31, VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** Vector: OFF3 (IASC/DCBRK, NONE, OFF1, OFF2, STOP2)  
Infeed: OFF2 (NONE, OFF1)

**Acknowledge:** IMMEDIATELY

**Cause:** The reception of setpoints from the fieldbus interface (onboard, PROFIBUS/PROFINET/USS) has been interrupted.

- bus connection interrupted.
- controller switched off.
- controller set into the STOP state.

See also: p2040 (Fieldbus interface monitoring time), p2047 (PROFIBUS additional monitoring time)

**Remedy:** Restore the bus connection and set the controller to RUN.

Note regarding PROFIBUS slave redundancy:  
For operation on a Y link, it must be ensured that "DP alarm mode = DPV1" is set in the slave parameterization.

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

#### **F01911 (N, A) PB/PN: clock cycle synchronous operation clock cycle failure**

**Message value:** -

**Message class:** Communication error to the higher-level control system (9)

**Drive object:** All objects

**Component:** None **Propagation:** GLOBAL

**Reaction:** Vector: OFF1 (OFF3)  
Infeed: OFF1

**Acknowledge:** IMMEDIATELY

**Cause:** The global control telegram to synchronize the clock cycles has failed - in cyclic operation - for several DP clock cycles or has violated the time grid specified in the parameterizing telegram over several consecutive DP clock cycles (refer to the bus cycle time,  $T_{dp}$  and  $T_{pllw}$ ).

**Remedy:**

- check the physical bus configuration (cable, connector, terminating resistor, shielding, etc.).
- check whether communication was briefly or permanently interrupted.
- check the bus and controller for utilization level (e.g. bus cycle time  $T_{dp}$  was set too short).

PB: PROFIBUS  
PN: PROFINET

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F01912 (N, A) PB/PN: clock cycle synchronous operation sign-of-life failure**

**Message value:** -  
**Message class:** Communication error to the higher-level control system (9)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** None **Propagation:** LOCAL  
**Reaction:** Vector: OFF1 (OFF3)  
 Infeed: OFF1  
**Acknowledge:** IMMEDIATELY  
**Cause:** The maximum permissible number of errors in the controller sign-of-life (clock synchronous operation) has been exceeded in cyclic operation.  
**Remedy:** - physically check the bus (cables, connectors, terminating resistor, shielding, etc.).  
 - correct the interconnection of the controller sign-of-life (p2045).  
 - check whether the controller correctly sends the sign-of-life (e.g. create a trace with STW2.12 ... STW2.15 and trigger signal ZSW1.3).  
 - check the permissible telegram failure rate (p0925).  
 - check the bus and controller for utilization level (e.g. bus cycle time Tdp was set too short).  
**Note:**  
 PB: PROFIBUS  
 PN: PROFINET

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**A01920 (F) PROFIBUS: Interruption cyclic connection**

**Message value:** -  
**Message class:** Communication error to the higher-level control system (9)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The cyclic connection to the PROFIBUS master is interrupted.  
**Remedy:** Establish the PROFIBUS connection and activate the PROFIBUS master in the cyclic mode.  
**Note:**  
 If there is no communication to a higher-level control system, then p2030 should be set = 0 to suppress this message.  
 See also: p2030 (Field bus int protocol selection)

Reaction upon F: NONE (OFF1)  
 Acknowl. upon F: IMMEDIATELY

**A01921 (F) PROFIBUS: Receive setpoints after To**

**Message value:** -  
**Message class:** Communication error to the higher-level control system (9)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** Output data of PROFIBUS master (setpoints) received at the incorrect instant in time within the PROFIBUS clock cycle.  
**Remedy:** - check bus configuration.  
 - check parameters for clock cycle synchronization (ensure To > Tdx).

## 4 Faults and alarms

### 4.2 List of faults and alarms

Note:

To: Time of setpoint acceptance

Tdx: Data exchange time

Reaction upon F: NONE (OFF1)

Acknowl. upon F: IMMEDIATELY

---

#### **A01925 (F) Modbus TCP: connection interrupted**

**Message value:** -

**Message class:** Communication error to the higher-level control system (9)

**Drive object:** CU\_G130\_DP, CU\_G130\_PN, CU\_G150\_DP, CU\_G150\_PN

**Component:** None **Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The Ethernet connection to the Modbus controller is interrupted.

**Remedy:** - establish an Ethernet connection.

- activate the Modbus controller.

Reaction upon F: NONE

Acknowl. upon F: IMMEDIATELY

---

#### **A01930 PB/PN: current controller sampling time clock cycle synch. not equal**

**Message value:** %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The current controller sampling time of all drives must be set the same for the clock cycle synchronous operation.

Alarm value (r2124, interpret decimal):

Number of the drive object with different current controller sampling time.

**Remedy:** Set current controller sampling time to identical values (p0115[0]).

Note:

PB: PROFIBUS

PN: PROFINET

See also: p0115

---

#### **A01931 PB/PN: speed controller sampling time clock cycle synch. not equal**

**Message value:** %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None **Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The speed controller sampling time of all drives must be set the same for the clock cycle synchronous operation.

Alarm value (r2124, interpret decimal):

Number of the drive object with the different speed controller sampling time.

**Remedy:** Set the speed controller sampling times to identical values (p0115[1]).

Note:

PB: PROFIBUS

PN: PROFINET

See also: p0115

<b>A01932</b>	<b>PB/PN: clock cycle synchronization missing for DSC</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	There is no clock synchronization or clock synchronous sign of life and DSC is selected. Note: DSC: Dynamic Servo Control See also: p0922 (IF1 PROFIdrive PZD telegram selection)
<b>Remedy:</b>	Set clock synchronization across the bus configuration and transfer clock synchronous sign-of-life. See also: r2064 (PB/PN diagnostics clock cycle synchronism)
<b>A01940</b>	<b>PB/PN: clock cycle synchronism not reached</b>
<b>Message value:</b>	-
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The bus is in the data exchange state and clock synchronous operation has been selected using the parameterizing telegram. It was not possible to synchronize to the clock cycle specified by the master. - the master does not send a clock synchronous global control telegram although clock synchronous operation was selected when configuring the bus. - the master is using another clock synchronous DP clock cycle than was transferred to the slave in the parameterizing telegram. - at least one drive object has a pulse enable (not controlled from PROFIBUS/PROFINET either).
<b>Remedy:</b>	- check the master application and bus configuration. - check the consistency between the clock cycle input when configuring the slave and clock cycle setting at the master. - check that no drive object has a pulse enable. Only enable the pulses after synchronizing the PROFIBUS/PROFINET drives. Note: PB: PROFIBUS PN: PROFINET
<b>A01941</b>	<b>PB/PN: clock cycle signal missing when establishing bus communication</b>
<b>Message value:</b>	-
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The bus is in the data exchange state and clock synchronous operation has been selected using the parameterizing telegram. The global control telegram for synchronization is not being received.
<b>Remedy:</b>	Check the master application and bus configuration. Note: PB: PROFIBUS PN: PROFINET

---

<b>A01943</b>	<b>PB/PN: clock cycle signal error when establishing bus communication</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Communication error to the higher-level control system (9)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>The bus is in the data exchange state and clock synchronous operation has been selected using the parameterizing telegram.</p> <p>The global control telegram for synchronization is being irregularly received.</p> <ul style="list-style-type: none"> <li>- the master is sending an irregular global control telegram.</li> <li>- the master is using another clock synchronous DP clock cycle than was transferred to the slave in the parameterizing telegram.</li> </ul>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the master application and bus configuration.</li> <li>- check the consistency between the clock cycle input when configuring the slave and clock cycle setting at the master.</li> </ul> <p>Note:</p> <p>PB: PROFIBUS PN: PROFINET</p>		

---

<b>A01944</b>	<b>PB/PN: sign-of-life synchronism not reached</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Communication error to the higher-level control system (9)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>The bus is in the data exchange state and clock synchronous operation has been selected using the parameterizing telegram.</p> <p>Synchronization with the master sign-of-life (STW2.12 ... STW2.15) could not be completed because the sign-of-life is changing differently to how it was configured in the Tmapc time grid.</p>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- ensure that the master correctly increments the sign-of-life in the master application clock cycle Tmapc.</li> <li>- correct the interconnection of the master sign-of-life (p2045).</li> </ul> <p>Note:</p> <p>PB: PROFIBUS PN: PROFINET</p>		

---

<b>A01945</b>	<b>PROFIBUS: Connection to the Publisher failed</b>		
<b>Message value:</b>	Fault cause: %1 bin		
<b>Message class:</b>	Communication error to the higher-level control system (9)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>For PROFIBUS peer-to-peer data transfer, the connection to at least one Publisher has failed.</p> <p>Alarm value (r2124, interpret binary):</p> <p>Bit 0 = 1: Publisher with address in r2077[0], connection failed.</p> <p>...</p> <p>Bit 15 = 1: Publisher with address in r2077[15], connection failed.</p>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the PROFIBUS cables.</li> <li>- carry out a first commissioning of the Publisher that has the failed connection.</li> </ul> <p>See also: r2077 (PROFIBUS diagnostics peer-to-peer data transfer addresses)</p>		

<b>F01946 (A)</b>	<b>PROFIBUS: Connection to the Publisher aborted</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	All objects
<b>Component:</b>	None <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: OFF1 (NONE, OFF2, OFF3) Infeed: OFF1 (NONE, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	At this drive object, the connection to at least one Publisher for PROFIBUS peer-to-peer data transfer in cyclic operation has been aborted. Fault value (r0949, interpret binary): Bit 0 = 1: Publisher with address in r2077[0], connection aborted. ... Bit 15 = 1: Publisher with address in r2077[15], connection aborted.
<b>Remedy:</b>	- check the PROFIBUS cables. - check the state of the Publisher that has the aborted connection. See also: r2077 (PROFIBUS diagnostics peer-to-peer data transfer addresses)
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>F01950 (N, A)</b>	<b>PB/PN: clock cycle synchronous operation synchronization unsuccessful</b>
<b>Message value:</b>	-
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	All objects
<b>Component:</b>	None <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (NONE)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	Synchronization of the internal clock cycle to the global control telegram has failed. The internal clock cycle exhibits an unexpected shift.
<b>Remedy:</b>	Only for internal Siemens troubleshooting. Note: PB: PROFIBUS PN: PROFINET
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>F01951</b>	<b>CU SYNC: Synchronization application clock cycle missing</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	All objects
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2 (NONE)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	If DRIVE-CLiQ components with different application clock cycle are operated on a DRIVE-CLiQ port, this requires synchronization with the Control Unit. This synchronization routine was unsuccessful. Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on) for all components. - upgrade the software of the DRIVE-CLiQ components. - upgrade the Control Unit software. Note: If a Controller Extension is being used (e.g. CX32, NX10), then the following applies: Check whether the Controller Extension is issuing error messages, and if required, remove these.

---

<b>F01952</b>	<b>CU DRIVE-CLiQ: Synchronization of component not supported</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	DRIVE
<b>Reaction:</b>	OFF2 (NONE)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The existing system configuration requires that the connected DRIVE-CLiQ components support the synchronization between the basic clock cycle, DRIVE-CLiQ clock cycle and the application clock cycle. However, not all DRIVE-CLiQ components have this functionality. Fault value (r0949, interpret decimal): Component number of the first faulty DRIVE-CLiQ component.
<b>Remedy:</b>	Upgrade the firmware of the component specified in the fault value. Note: If required, also upgrade additional components in the DRIVE-CLiQ line.

---

<b>A01953</b>	<b>CU SYNC: Synchronization not completed</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	After the drive system is switched on, the synchronization between the basic clock cycle, DRIVE-CLiQ clock cycle and application clock cycle was started but was not completed within the selected time tolerance. Alarm value (r2124, interpret decimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	Carry out a POWER ON (switch-off/switch-on) for all components. If the error occurs after the drive sampling times were changed, and if a Terminal Module 31 (TM31) is being used, the sampling times (p0115, p4099) should be set as integer multiples to the drive clock cycles (p0115).

---

<b>F01954</b>	<b>CU DRIVE-CLiQ: Synchronization unsuccessful</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	Synchronization between the basic clock cycle, DRIVE-CLiQ clock cycle and application clock cycle was started and was not able to be successfully completed (e.g. after switch-on). Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	1. Remove the cause of a possible DRIVE-CLiQ fault. 2. Initiate a new synchronization, e.g. as follows: - remove the PROFIBUS master and re-insert again. - restart the PROFIBUS master. - switch off the Control Unit and switch on again. - carry out a Control Unit hardware reset (RESET button, p0972). - carry out a parameter reset and download the saved parameters (p0009 = 30, p0976 = 2, 3).

<b>A01955</b>	<b>CU DRIVE-CLiQ: Synchronization DO not completed</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	After the drive system is switched on, the synchronization between the basic clock cycle, DRIVE-CLiQ clock cycle and application clock cycle was started but was not completed within the selected time tolerance. Alarm value (r2124, interpret decimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	Carry out a POWER ON (switch-off/switch-on) for all components of the DO.
<b>A01980</b>	<b>PN: cyclic connection interrupted</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The cyclic connection to the PROFINET controller is interrupted. See also: r8936 (PN cyclic connection state)
<b>Remedy:</b>	Establish the PROFINET connection and activate the PROFINET controller in the cyclic mode.
<b>A01981</b>	<b>PN: Maximum number of controllers exceeded</b>
<b>Message value:</b>	Info. 1: %1, info. 2: %2
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A controller attempts to establish a connection to the drive, and as a consequence exceeds the permitted number of PROFINET connections. The alarm disappears automatically after approx. 30 seconds. Alarm value (r2124, interpret hexadecimal): yyyyxxxx hex: yyyy = info. 1, xxxx = info. 2 Info 1 = 0: number of RT connections exceeded Info 1 > 0: number of IRT connections exceeded Info 2: permitted number of connections
<b>Remedy:</b>	Check the configuration of the PROFINET controllers as well as the p8929 setting. See also: p8929 (PN remote controller number)
<b>A01982</b>	<b>PN: second controller missing</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Connections to two PROFINET controllers are expected. However, only the connection to a PROFINET controller is present. - the PROFINET function "Shared Device" is activated (p8929 = 2). - system redundancy is activated.
<b>Remedy:</b>	Check the configuration of the PROFINET controllers as well as the p8929 setting. See also: p8929 (PN remote controller number)

**A01983 PN: system redundancy switchover running**

**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The "PROFINET system redundancy" function is configured and the connection between the primary control and drive device is interrupted. The backup controller assumes control of the drive device.  
**Remedy:** Not necessary.  
The alarm is automatically withdrawn after switchover has been successfully completed.

**A01989 PN: internal cyclic data transfer error**

**Message value:** %1  
**Message class:** Communication error to the higher-level control system (9)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The cyclic actual values and/or setpoints were not transferred within the specified times.  
Alarm value (r2124, interpret hexadecimal):  
Only for internal Siemens troubleshooting.  
**Remedy:** Correctly set T\_io\_input or T\_io\_output.

**A01990 (F) USS: PZD configuration error**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The configuration of the process data (PZD) for the USS protocol is incorrect.  
Alarm value (r2124, interpret decimal):  
2: PZD amount (p2022) too great for the first drive object (p978[0]).  
The number of possible PZD items in a drive object is determined by the number of indices in r2050/p2051.  
**Remedy:** For alarm value = 2:  
Check the amount of USS PZD (p2022) and the maximum PZD amount (r2050/p2051) for the first drive object (p978[0]).  
Reaction upon F: NONE (OFF1)  
Acknowl. upon F: IMMEDIATELY

**A02000 Function generator: Start not possible**

**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The function generator has already been started.  
**Remedy:** Stop the function generator and restart again if necessary.  
Note:  
The alarm is reset as follows:  
- remove the cause of this alarm.  
- restart the function generator.  
See also: p4800 (Function generator control)

---

<b>A02005</b>	<b>Function generator: Drive does not exist</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The drive object specified for connection does not exist. See also: p4815 (Function generator drive number)		
<b>Remedy:</b>	Use the existing drive object with the corresponding number. Note: The alarm is reset as follows: - remove the cause of this alarm. - restart the function generator. See also: p4815 (Function generator drive number)		

---

<b>A02006</b>	<b>Function generator: No drive specified for connection</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	No drive specified for connection in p4815. See also: p4815 (Function generator drive number)		
<b>Remedy:</b>	At least one drive to be connected must be specified in p4815. Note: The alarm is reset as follows: - remove the cause of this alarm. - restart the function generator. See also: p4815 (Function generator drive number)		

---

<b>A02007</b>	<b>Function generator: Drive not SERVO / VECTOR / DC_CTRL</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The drive object specified for connection is not a SERVO / VECTOR or DC_CTRL. See also: p4815 (Function generator drive number)		
<b>Remedy:</b>	Use a SERVO / VECTOR / DC_CTRL drive object with the corresponding number. Note: The alarm is reset as follows: - remove the cause of this alarm. - restart the function generator.		

---

<b>A02008</b>	<b>Function generator: Drive specified a multiple number of times</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The drive object specified for connection is already specified. Alarm value (r2124, interpret decimal): Drive object number of the drive object that is specified a multiple number of times.		
<b>Remedy:</b>	Specify a different drive object. Note: The alarm is reset as follows: - remove the cause of this alarm. - restart the function generator.		

---

<b>A02009</b>	<b>Function generator: Illegal mode</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The set operating mode (p1300) of the drive object is not permissible when using the function generator. Alarm value (r2124, interpret decimal): Number of the drive object involved.		
<b>Remedy:</b>	Change the operating mode for this drive object to p1300 = 20 (encoderless speed control) or p1300 = 21 (speed control with encoder). Note: The alarm is reset as follows: - remove the cause of this alarm. - restart the function generator.		

---

<b>A02010</b>	<b>Function generator: Speed setpoint from the drive is not zero</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The speed setpoint of a drive selected for connection is greater than the value for the standstill detection set using p1226.		
<b>Remedy:</b>	For all of the drives specified for connection, set the speed setpoints to zero. Note: The alarm is reset as follows: - remove the cause of this alarm. - restart the function generator.		

---

<b>A02011</b>	<b>Function generator: The actual drive speed is not zero</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The speed actual value of a drive selected for connection is greater than the value for the standstill detection set using p1226.		
<b>Remedy:</b>	Set the relevant drives to zero speed before starting the function generator.		
	Note: The alarm is reset as follows: - remove the cause of this alarm. - restart the function generator.		

---

<b>A02015</b>	<b>Function generator: Drive enable signals missing</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The master control and/or enable signals are missing to connect to the specified drive. See also: p4815 (Function generator drive number)		
<b>Remedy:</b>	Fetch the master control to the specified drive object and set all enable signals.		
	Note: The alarm is reset as follows: - remove the cause of this alarm. - restart the function generator.		

---

<b>A02016</b>	<b>Function generator: Magnetizing running</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Magnetizing has not yet been completed on a drive object specified for connection. Alarm value (r2124, interpret decimal): Number of the drive object involved. See also: p4815 (Function generator drive number)		
<b>Remedy:</b>	Wait for magnetizing of the motor (r0056.4).		
	Note: The alarm is reset as follows: - restart the function generator. See also: r0056 (Status word, closed-loop control)		



---

**A02030 Function generator: Physical address equals zero**

**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The specified physical address is zero.  
See also: p4812 (Function generator physical address)  
**Remedy:** Set a physical address with a value other than zero.  
Note:  
The alarm is reset as follows:  
- remove the cause of this alarm.  
- restart the function generator.  
See also: p4812 (Function generator physical address)

---

**A02040 Function generator: Illegal value for offset**

**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The value for the offset is higher than the value for the upper limit or lower than the value for the lower limit.  
See also: p4826 (Function generator offset)  
**Remedy:** Adjust the offset value accordingly.  
Note:  
The alarm is reset as follows:  
- remove the cause of this alarm.  
- restart the function generator.  
See also: p4826 (Function generator offset), p4828 (Function generator lower limit), p4829 (Function generator upper limit)

---

**A02041 Function generator: Illegal value for bandwidth**

**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The bandwidth referred to the time slice clock cycle of the function generator has either been set too low or too high.  
Depending on the time slice clock cycle, the bandwidth is defined as follows:  
$$\text{Bandwidth\_max} = 1 / (2 \times \text{time slice clock cycle})$$
$$\text{Bandwidth\_min} = \text{Bandwidth\_max} / 100000$$
**Example:**  
Assumption: p4830 = 125  $\mu$ s  
-->  $\text{Bandwidth\_max} = 1 / (2 \times 125 \mu\text{s}) = 4000 \text{ Hz}$   
-->  $\text{Bandwidth\_min} = 4000 \text{ Hz} / 100000 = 0.04 \text{ Hz}$   
Note:  
p4823: Function generator bandwidth  
p4830: Function generator time slice clock cycle  
See also: p4823 (Function generator bandwidth), p4830 (Function generator time slice cycle)

**Remedy:** Check the value for the bandwidth and adapt accordingly.

Note:

The alarm is reset as follows:

- remove the cause of this alarm.
- restart the function generator.

---

#### **A02047 Function generator: Time slice clock cycle invalid**

**Message value:** -

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None

**Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The time slice clock cycle selected does not match any of the existing time slices.

See also: p4830 (Function generator time slice cycle)

**Remedy:** Enter an existing time slice clock cycle. The existing time slices can be read out via p7901.

Note:

The alarm is reset as follows:

- remove the cause of this alarm.
- restart the function generator.

See also: r7901 (Sampling times)

---

#### **A02050 Trace: Start not possible**

**Message value:** -

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None

**Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The trace has already been started.

See also: p4700 (Trace control)

**Remedy:** Stop the trace and, if necessary, start again.

---

#### **A02051 Trace: recording not possible as a result of know-how protection**

**Message value:** involves %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None

**Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** TRACE recording is not possible as at least one signal or trigger signal being used is under know-how protection.

Alarm value (r2124, interpret decimal):

1: Recorder 0

2: Recorder 1

3: Recorders 0 and 1

See also: p4700, p4711, p4730, p4731, p4732, p4733, p4734, p4735, p4736, p4737

**Remedy:** - Temporarily activate or deactivate know-how protection (p7766).

- include the signal in the OEM exception list (p7763, p7764).

- Where relevant do not record the signal.

See also: p7763 (KHP OEM exception list number of indices for p7764), p7764 (KHP OEM exception list)

---

**A02055 Trace: Recording time too short**

**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The trace duration is too short.  
The minimum is twice the value of the trace clock cycle.  
See also: p4721 (Trace recording time)  
**Remedy:** Check the selected recording time and, if necessary, adjust.

---

**A02056 Trace: Recording cycle too short**

**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The selected recording cycle is shorter than the selected basic clock cycle 0 (p0110[0]).  
See also: p4720 (Trace recording cycle)  
**Remedy:** Increase the value for the trace cycle.

---

**A02057 Trace: Time slice clock cycle invalid**

**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The time slice clock cycle selected does not match any of the existing time slices.  
See also: p4723 (Trace time slice cycle)  
**Remedy:** Enter an existing time slice clock cycle. The existing time slices can be read out via p7901.  
See also: r7901 (Sampling times)

---

**A02058 Trace: Time slice clock cycle for endless trace not valid**

**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The selected time slice clock cycle cannot be used for the endless trace  
See also: p4723 (Trace time slice cycle)  
**Remedy:** Enter the clock cycle of an existing time slice with a cycle time  $\geq 2$  ms for up to 4 recording channels or  $\geq 4$  ms from 5 recording channels per trace.  
The existing time slices can be read out via p7901.  
See also: r7901 (Sampling times)

<b>A02059</b>	<b>Trace: Time slice clock cycle for 2 x 8 recording channels not valid</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The selected time slice clock cycle cannot be used for more than 4 recording channels. See also: p4723 (Trace time slice cycle)		
<b>Remedy:</b>	Enter the clock cycle of an existing time slice with a cycle time $\geq 4$ ms or reduce the number of recording channels to 4 per trace. The existing time slices can be read out via p7901. See also: r7901 (Sampling times)		
<b>A02060</b>	<b>Trace: Signal to be traced missing</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	- a signal to be traced was not specified. - the specified signals are not valid. See also: p4730 (Trace record signal 0), p4731 (Trace record signal 1), p4732 (Trace record signal 2), p4733 (Trace record signal 3)		
<b>Remedy:</b>	- specify the signal to be traced. - check whether the relevant signal can be traced.		
<b>A02061</b>	<b>Trace: Invalid signal</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	- the specified signal does not exist. - the specified signal can no longer be traced (recorded). See also: p4730 (Trace record signal 0), p4731 (Trace record signal 1), p4732 (Trace record signal 2), p4733 (Trace record signal 3)		
<b>Remedy:</b>	- specify the signal to be traced. - check whether the relevant signal can be traced.		
<b>A02062</b>	<b>Trace: Invalid trigger signal</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	- a trigger signal was not specified. - the specified signal does not exist. - the specified signal is not a fixed-point signal. - the specified signal cannot be used as a trigger signal for the trace. See also: p4711 (Trace trigger signal)		
<b>Remedy:</b>	Specify a valid trigger signal.		

---

<b>A02063</b>	<b>Trace: Invalid data type</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The specified data type to select a signal using a physical address is invalid. See also: p4711 (Trace trigger signal), p4730 (Trace record signal 0), p4731 (Trace record signal 1), p4732 (Trace record signal 2), p4733 (Trace record signal 3)
<b>Remedy:</b>	Use a valid data type.

---

<b>A02070</b>	<b>Trace: Parameter cannot be changed</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The trace parameter settings cannot be changed when the trace is active. See also: p4700, p4710, p4711, p4712, p4713, p4714, p4715, p4716, p4720, p4721, p4722, p4730, p4731, p4732, p4733, p4780, p4781, p4782, p4783, p4789, p4795
<b>Remedy:</b>	- stop the trace before parameterization. - if required, start the trace.

---

<b>A02075</b>	<b>Trace: Pretrigger time too long</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The selected pretrigger time must be shorter than the trace time. See also: p4721 (Trace recording time), p4722 (Trace trigger delay)
<b>Remedy:</b>	Check the pretrigger time setting and change if necessary.

---

<b>F02080</b>	<b>Trace: Parameterization deleted due to unit changeover</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The trace parameterization in the drive unit was deleted due to a unit changeover or a change in the reference parameters.
<b>Remedy:</b>	Restart trace.



---

<b>A02098</b>	<b>MTrace 1: cannot be saved</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>It is not possible to save the measurement results of a multiple trace on the memory card (trace recorder 1).  A multiple trace is not started or is canceled.  Alarm value (r2124, interpret decimal):  1: Memory card cannot be accessed.  - card is not inserted or is blocked by a mounted USB drive.  3: data save operation to slow.  - a second trace has been completed before the measurement results of the first trace were able to be saved.  - writing the measurement result files to the card is blocked by the parameter save.  4: Data save operation canceled.  - for instance, the file required for the data save operation was not able to be found.  See also: p4840 (MTrace cycle number setting)</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- insert or remove the memory card.</li> <li>- use a larger memory card.</li> <li>- configure a longer trace time or use an endless trace.</li> <li>- avoid saving parameters while a multiple trace is running.</li> <li>- check whether other functions are presently accessing measurement result files.</li> </ul>

---

<b>A02099</b>	<b>Trace: Insufficient Control Unit memory</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The memory space still available on the Control Unit is no longer sufficient for the trace function.
<b>Remedy:</b>	<p>Reduce the memory required, e.g. as follows:</p> <ul style="list-style-type: none"> <li>- reduce the trace time.</li> <li>- increase the trace clock cycle.</li> <li>- reduce the number of signals to be traced.</li> </ul> <p>See also: r4708 (Trace memory space required), r4799 (Trace memory location free)</p>

---

<b>A02100</b>	<b>Drive: Computing dead time current controller too short</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>The value in p0118 produces a dead time of one clock cycle because it is prior to setpoint availability.  Possible causes:</p> <ul style="list-style-type: none"> <li>- a parameter backup with a version higher than 4.3 was loaded to a version less than or equal to 4.3.</li> <li>- the system properties after replacing a component no longer match the parameter assignment.</li> </ul> <p>Alarm value (r2134, floating point):  Minimum value for p0118 where dead time no longer occurs.</p>

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:**

- set p0118 to zero.
- set p0118 to a value greater than or equal to the alarm value (for p1810.11 = 1)
- set p0117 (from the device) to an automatic setting (p0117 = 1).
- check the firmware versions of the components involved.

See also: p0117 (Current controller computing dead time mode), p0118 (Current controller computing dead time)

---

**A02150**      **TEC: Technology Extension cannot be loaded**

**Message value:** %1  
**Message class:** Hardware/software error (1)  
**Drive object:** All objects  
**Component:** None      **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The system was not able to load a Technology Extension.  
Alarm value (r2124, interpret hexadecimal):  
10 hex (16 dec):  
The interface version in the DCB user library is not compatible to the DCC standard library that has been loaded.  
12 hex (18 dec):  
A technology package was not able to be downloaded to a Control Unit because the warm restart necessary was not able to be performed.  
Only for internal Siemens troubleshooting.

**Remedy:**

- carry out a warm restart (p0009 = 30, p0976 = 2, 3).
- carry out a POWER ON (switch-off/switch-on) for all components.
- upgrade firmware to later version.
- contact Technical Support.

For alarm value = 10 hex (16 dec):  
Load a compatible DCB user library (compatible to the interface of the DCC standard library).  
For alarm value = 12 hex (18 dec):  
Carry out a POWER ON (switch-off/switch-on) for all components.

Note:  
DCB: Drive Control Block  
DCC: Drive Control Chart  
TEC: Technology Extension  
See also: r4950, r4955, p4956, r4957

---

**F02151 (A)**      **TEC: internal software error**

**Message value:** %1  
**Message class:** Hardware/software error (1)  
**Drive object:** All objects  
**Component:** None      **Propagation:** GLOBAL  
**Reaction:** Vector: OFF2 (NONE, OFF1, OFF3)  
Infeed: OFF2 (NONE, OFF1)  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** An internal software error has occurred within a Technology Extension.  
Fault value (r0949, interpret hexadecimal):  
Only for internal Siemens troubleshooting.

**Remedy:**

- carry out a POWER ON (switch-off/switch-on) for all components.
- upgrade firmware to later version.
- contact Technical Support.
- replace the Control Unit.

Note:  
TEC: Technology Extension  
See also: r4950, r4955, p4956, r4957

Reaction upon A: NONE  
Acknowl. upon A: NONE



## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:** - Perform the remedy according to the results of the troubleshooting.  
- if necessary, start the action again.

---

<b>F03001</b>	<b>NVRAM checksum incorrect</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	A checksum error occurred when evaluating the non-volatile data (NVRAM) on the Control Unit. The NVRAM data affected was deleted.		
<b>Remedy:</b>	Carry out a POWER ON (switch-off/switch-on) for all components.		

---

<b>F03500 (A)</b>	<b>TM: Initialization</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	BICO
<b>Reaction:</b>	OFF1 (OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	When initializing the Terminal Modules, the terminals of the Control Unit or the Terminal Board 30, an internal software error has occurred. Fault value (r0949, interpret decimal): yxxx dex y = Only for internal Siemens troubleshooting xxx = component number (p0151)		
<b>Remedy:</b>	- switch-off/switch-on the power supply for the Control Unit. - check the DRIVE-CLiQ connection. - if required, replace the Terminal Module. The Terminal Module should be directly connected to a DRIVE-CLiQ socket of the Control Unit. If the fault occurs again, replace the Terminal Module.		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>A03501</b>	<b>TM: Sampling time change</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The sampling times of the inputs/outputs were changed. This change only becomes valid after the next boot.		
<b>Remedy:</b>	Carry out a POWER ON.		

---

<b>F03505 (N, A)</b>	<b>Analog input wire breakage</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)		
<b>Drive object:</b>	CU_G130_DP, CU_G130_PN, CU_G150_DP, CU_G150_PN		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The wire-break monitoring for an analog input has responded. The input value of the analog input has exceeded the threshold value parameterized in p0761[0]. p0756[0]: analog input 0 (X131.7/X131.8)		

Fault value (r0949, interpret decimal):

Note:

For the following analog input type, the wire breakage monitoring is active:

p0756[0] = 3 (4 ... 20 mA with monitoring)

**Remedy:**

- check the wiring to the signal source for interruptions.
- check the magnitude of the injected current - it is possible that the infed signal is too low.
- check the load resistor (250 Ohm).

Note:

The input current measured by the analog input can be read in r0752[0].

For p756[0] = 3 (unipolar current input monitored (+4 ... +20 mA)) the following applies:

A current less than 4 mA is not displayed in r752[0] - but instead r752[0] = 4 mA is output.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

**F03505 (N, A) Analog input wire breakage**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, ENC, HUB, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** OFF1 (NONE, OFF2)

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The wire-break monitoring for an analog input has responded.

**Remedy:** Check the wiring for interruptions.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

**F03505 (N, A) TB: Analog input wire breakage**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** TB30

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The wire-break monitoring for an analog input has responded.

**Remedy:** Check the wiring for interruptions.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

**F03505 (N, A) TM: Analog input wire breakage**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** TM31

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The wire-break monitoring for an analog input has responded.

The input value of the analog input has exceeded the threshold value parameterized in p4061[x].

Index x = 0: Analog input 0 (X521.1/X521.2)

Index x = 1: Analog input 1 (X521.3/X521.4)

## 4 Faults and alarms

### 4.2 List of faults and alarms

Fault value (r0949, interpret decimal):

yxxx dec

y = analog input (0 = analog input 0 (AI 0), 1 = analog input 1 (AI 1))

xxx = component number (p0151)

Note:

For the following analog input type, the wire breakage monitoring is active:

p4056[x] = 3 (unipolar current input monitored (+4 ... +20 mA)

**Remedy:**

- check the wiring for interruptions.

- check the magnitude of the injected current - it is possible that the infed signal is too low.

- check the load resistor (250 Ohm).

Note:

The input current measured by the Terminal Module can be read out from r4052[x].

For p4056[x] = 3 (unipolar current input monitored (+4 ... +20 mA)) the following applies:

A current less than 4 mA is not displayed in r4052[x] - but instead r4052[x] = 4 mA is output.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F03505 (N, A) Analog input wire breakage**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** TM120, TM150, TM54F\_MA, TM54F\_SL

**Component:** Terminal Module (TM)

**Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The wire-break monitoring for an analog input has responded.

The input value of the analog input has exceeded the threshold value parameterized in p4061[x].

Index x = 0: Analog input 0 (X521.1/X521.2)

Index x = 1: Analog input 1 (X521.3/X521.4)

Fault value (r0949, interpret decimal):

yxxx dec

y = analog input (0 = analog input 0 (AI 0), 1 = analog input 1 (AI 1))

xxx = component number (p0151)

Note:

For the following analog input type, the wire breakage monitoring is active:

p4056[x] = 3 (unipolar current input monitored (+4 ... +20 mA)

**Remedy:**

- check the wiring for interruptions.

- check the magnitude of the injected current - it is possible that the infed signal is too low.

- check the load resistor (250 Ohm).

Note:

The input current measured by the Terminal Module can be read out from r4052[x].

For p4056[x] = 3 (unipolar current input monitored (+4 ... +20 mA)) the following applies:

A current less than 4 mA is not displayed in r4052[x] - but instead r4052[x] = 4 mA is output.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

<b>A03506 (F, N)</b>	<b>24 V power supply missing</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The 24 V power supply for the digital outputs (X124) is missing.		
<b>Remedy:</b>	Check the terminals for the power supply voltage (X124, L1+, M).		
Reaction upon F:	NONE		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A03507 (F, N)</b>	<b>Digital output not set</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	General drive fault (19)		
<b>Drive object:</b>	CU_G130_DP, CU_G130_PN, CU_G150_DP, CU_G150_PN, ENC, HUB, TB30, TM120, TM150, TM31, TM54F_MA, TM54F_SL		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Despite specification by the signal source the digital output has not been set. Possible causes:		
	- power supply missing.		
	- the digital output is in current limiting (e.g. due to short-circuit).		
	- the digital output is being used for Safety Extended Functions.		
	- the control has authority to access the digital output by means of direct access (see also r0729).		
	Alarm value (r2124, interpret bitwise binary): Digital output involved (structured the same as r0747).		
<b>Remedy:</b>	- check the 24 V power supply (e.g. X130.6 for CU310-2, ground is X130.5).		
	- check the output terminals for short-circuits.		
	- reset the signal source of the digital output for use by Safety Extended functions.		
	- carry out a POWER ON (switch-off/switch-on).		
Reaction upon F:	NONE		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A03507 (F, N)</b>	<b>Digital output not set</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	General drive fault (19)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Despite specification by the signal source the digital output has not been set. Possible causes:		
	- power supply missing.		
	- the digital output is in current limiting (e.g. due to short-circuit).		
	- the digital output is being used for Safety Extended Functions.		
	- the control has authority to access the digital output by means of direct access (see also r0729).		
	Alarm value (r2124, interpret bitwise binary): Digital output involved (structured the same as r0747).		

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:**

- check the 24 V power supply (e.g. X131.7 for CU305, ground is X131.8).
- check the output terminals for short-circuits.
- reset the signal source of the digital output for use by Safety Extended functions.
- carry out a POWER ON (switch-off/switch-on).

Reaction upon F: NONE  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **A03510 (F, N) Calibration data not plausible**

**Message value:** %1  
**Message class:** Hardware/software error (1)  
**Drive object:** B\_INF, CU\_G130\_DP, CU\_G130\_PN, CU\_G150\_DP, CU\_G150\_PN, ENC, HUB, TB30, TM54F\_MA, TM54F\_SL  
**Component:** Terminal Module (TM) **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** During ramp-up, the Terminal Module 31 (TM31) calibration data is read in and checked for plausibility.  
At least one calibration data point was determined to be invalid.

Alarm value (r2124, interpret binary):  
Bit 1: 10 V value, analog input 0 invalid.  
Bit 3: 10 V value, analog input 1 invalid.  
Bit 4: Offset, analog output 0 invalid.  
Bit 5: 10 V value, analog output 0 invalid.  
Bit 6: Offset, analog output 1 invalid.  
Bit 7: 10 V value, analog input 1 invalid.

**Remedy:**

- switch-off/switch-on the power supply for the Control Unit.
- check the DRIVE-CLiQ wiring.

**Note:**  
If it reoccurs, then replace the module.  
In principle, operation could continue.  
The analog channel involved possibly does not achieve the specified accuracy.

Reaction upon F: NONE (OFF1, OFF2)  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **A03510 (F, N) Calibration data not plausible**

**Message value:** %1  
**Message class:** Hardware/software error (1)  
**Drive object:** VECTOR\_G  
**Component:** Terminal Module (TM) **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** During booting, the calibration data for the analog inputs is read and checked with respect to plausibility.  
At least one calibration data point was determined to be invalid.

**Remedy:**

- switch-off/switch-on the power supply for the Control Unit.
- check the DRIVE-CLiQ wiring.

**Note:**  
If it reoccurs, then replace the module.  
In principle, operation could continue.  
The analog channel involved possibly does not achieve the specified accuracy.

Reaction upon F: NONE  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

<b>A03510 (F, N)</b>	<b>TM: Calibration data not plausible</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	TM120, TM150, TM31
<b>Component:</b>	Terminal Module (TM)
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>During ramp-up, the Terminal Module 31 (TM31) calibration data is read in and checked for plausibility. At least one calibration data point was determined to be invalid.</p> <p>Alarm value (r2124, interpret binary):</p> <p>Bit 1: 10 V value, analog input 0 invalid.</p> <p>Bit 3: 10 V value, analog input 1 invalid.</p> <p>Bit 4: Offset, analog output 0 invalid.</p> <p>Bit 5: 10 V value, analog output 0 invalid.</p> <p>Bit 6: Offset, analog output 1 invalid.</p> <p>Bit 7: 10 V value, analog input 1 invalid.</p>
<b>Remedy:</b>	<p>- switch-off/switch-on the power supply for the Control Unit.</p> <p>- check the DRIVE-CLiQ wiring.</p> <p>Note:</p> <p>If it reoccurs, then replace the module.</p> <p>In principle, operation could continue.</p> <p>The analog channel involved possibly does not achieve the specified accuracy.</p>
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>A03550</b>	<b>TM: Speed setpoint filter natural frequency &gt; Shannon frequency</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>The natural filter frequency of the speed setpoint filter (p1417) is greater than or equal to the Shannon frequency. The Shannon frequency is calculated according to the following formula:</p> $0.5 / p4099[3]$
<b>Remedy:</b>	Reduce the natural frequency of the speed setpoint filter (PT2 low pass) (p1417).
<b>F03590 (N, A)</b>	<b>TM: Module not ready</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	Terminal Module (TM)
<b>Reaction:</b>	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	<p>The Terminal Module involved does not send a ready signal and no valid cyclic data.</p> <p>Fault value (r0949, interpret decimal):</p> <p>Drive object number of the Terminal Module involved.</p>
<b>Remedy:</b>	<p>- check the 24 V power supply.</p> <p>- check the DRIVE-CLiQ wiring.</p> <p>- check whether the sampling time of the drive object involved is not equal to zero (p4099[0]).</p>
Reaction upon N:	NONE
Acknowl. upon N:	NONE

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon A: NONE  
Acknowl. upon A: NONE

---

<b>A05000 (N)</b>	<b>Power unit: Overtemperature heat sink AC inverter</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The alarm threshold for overtemperature at the inverter heat sink has been reached. The response is set using p0290. If the temperature of the heat sink increases by an additional 5 K, then fault F30004 is initiated.		
<b>Remedy:</b>	Check the following: <ul style="list-style-type: none"><li>- is the ambient temperature within the defined limit values?</li><li>- have the load conditions and the load duty cycle been appropriately dimensioned?</li><li>- has the cooling failed?</li></ul>		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A05001 (N)</b>	<b>Power unit: Overtemperature depletion layer chip</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Alarm threshold for overtemperature of the power semiconductor in the AC converter has been reached. Note: <ul style="list-style-type: none"><li>- the response is set using p0290.</li><li>- if the depletion layer temperature increases by an additional 15 K, then fault F30025 is triggered.</li></ul>		
<b>Remedy:</b>	Check the following: <ul style="list-style-type: none"><li>- is the ambient temperature within the defined limit values?</li><li>- have the load conditions and the load duty cycle been appropriately dimensioned?</li><li>- has the cooling failed?</li><li>- pulse frequency too high?</li></ul> Note: If the alarm occurs after reducing the current controller sampling time (p0115[0]) during the motor data identification (standstill measurement), then it is recommended that this is initially performed using the standard sampling time and then the sampling time should be subsequently changed over. See also: r0037, p0290 (Power unit overload response)		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A05001 (N)</b>	<b>Power unit: Overtemperature depletion layer chip</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Alarm threshold for overtemperature of the power semiconductor in the AC converter has been reached. Note: <ul style="list-style-type: none"><li>- the response is set using p0290.</li><li>- if the depletion layer temperature increases by an additional 15 K, then fault F30025 is triggered.</li></ul>		

**Remedy:** Check the following:

- is the ambient temperature within the defined limit values?
- have the load conditions and the load duty cycle been appropriately dimensioned?
- has the cooling failed?
- pulse frequency too high?

See also: r0037, p0290 (Power unit overload response)

Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **A05002 (N) Power unit: Air intake overtemperature**

**Message value:** -

**Message class:** Power electronics faulted (5)

**Drive object:** B\_INF, VECTOR\_G

**Component:** Power Module **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The alarm threshold for the air intake overtemperature has been reached. For air-cooled power units, the threshold is 42 °C (hysteresis 2 K). The response is set using p0290.  
If the air intake temperature increases by an additional 13 K, then fault F30035 is output.

**Remedy:** Check the following:

- is the ambient temperature within the defined limit values?
- has the fan failed? Check the direction of rotation.

Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **A05003 (N) Power unit: Internal overtemperature**

**Message value:** -

**Message class:** Power electronics faulted (5)

**Drive object:** B\_INF, VECTOR\_G

**Component:** Power Module **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The alarm threshold for internal overtemperature has been reached.  
If the temperature inside the power unit increases by an additional 5 K, then fault F30036 is triggered.

**Remedy:** Check the following:

- is the ambient temperature within the defined limit values?
- has the fan failed? Check the direction of rotation.

Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **A05004 (N) Power unit: Rectifier overtemperature**

**Message value:** -

**Message class:** Power electronics faulted (5)

**Drive object:** B\_INF, VECTOR\_G

**Component:** Power Module **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The alarm threshold for the overtemperature of the rectifier has been reached. The response is set using p0290.  
If the temperature of the rectifier increases by an additional 5 K, then fault F30037 is triggered.

**Remedy:** Check the following:

- is the ambient temperature within the defined limit values?
- have the load conditions and the load duty cycle been appropriately dimensioned?
- has the fan failed? Check the direction of rotation.
- has a phase of the line supply failed?
- is an arm of the supply (incoming) rectifier defective?

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**A05005 Cooling unit: Cooling medium flow rate too low**  
**Message value:** %1  
**Message class:** Auxiliary unit faulted (20)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Power Module **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** Cooling unit: Alarm - flow rate has fallen below the alarm value  
**Remedy:** - check the feedback signals and parameter assignment (p0260 ... p0267).  
- check the coolant feed.

---

**A05006 (N) Power unit: Overtemperature thermal model**  
**Message value:** -  
**Message class:** Power electronics faulted (5)  
**Drive object:** VECTOR\_G  
**Component:** Power Module **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The temperature difference between the chip and heat sink has exceeded the permissible limit value (blocksize power units only).  
Depending on p0290, an appropriate overload response is initiated.  
See also: r0037  
**Remedy:** Not necessary.  
The alarm disappears automatically once the limit value is undershot.  
Note:  
If the alarm does not disappear automatically and the temperature continues to rise, this can result in fault F30024.  
See also: p0290 (Power unit overload response)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**N05007 (A) Power unit: Overtemperature thermal model (chassis PU)**  
**Message value:** -  
**Message class:** Power electronics faulted (5)  
**Drive object:** VECTOR\_G  
**Component:** Power Module **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The temperature difference between the chip and heat sink has exceeded the permissible limit value (r0293) (chassis power units only).  
Depending on p0290, an appropriate overload response is initiated.  
See also: r0037, r0293 (Power unit alarm threshold model temperature)  
**Remedy:** Not necessary.  
The alarm disappears automatically once the limit value is undershot.  
See also: p0290 (Power unit overload response)  
Reaction upon A: NONE  
Acknowl. upon A: NONE

<b>F05050</b>	<b>Parallel circuit: Pulse enable in spite of pulse inhibit</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF2 (NONE, OFF1, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A power unit signals that the pulses are enabled although the pulses are inhibited. Fault value (r0949, interpret decimal): Number of the power unit involved.
<b>Remedy:</b>	The power unit is defective and must be replaced.
<b>F05051</b>	<b>Parallel circuit: Power unit pulse enable missing</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF2 (NONE, OFF1, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	For one or several power units, the pulses were not able to be enabled. Fault value (r0949, interpret decimal): Number of the power unit involved.
<b>Remedy:</b>	- acknowledge power unit faults that are still present. - inhibit the pulses of the power unit involved (p7001).
<b>A05052 (F)</b>	<b>Parallel circuit: Illegal current asymmetry</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The deviation of the individual currents of the power units exceeds the alarm threshold specified in p7010. Alarm value (r2124, interpret decimal): 1: Phase U. 2: Phase V. 3: Phase W.
<b>Remedy:</b>	- inhibit the pulses of the faulted power unit (p7001). - check the connecting cables. Loose contacts can cause current spikes. - the motor reactors are non-symmetrical or faulty and must be replaced. - the CTs must be calibrated or replaced.
<b>Reaction upon F:</b>	Vector: NONE (OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
<b>Acknowl. upon F:</b>	IMMEDIATELY

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>A05053 (F)</b>	<b>Parallel circuit: Inadmissible DC link voltage asymmetry</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The deviation of the DC link voltage measured values exceeds the alarm threshold specified in p7011.		
<b>Remedy:</b>	- inhibit the pulses of the faulted power unit (p7001). - check the DC link connecting cables. - the DC link voltage measurement is incorrect and must be calibrated or renewed.		
Reaction upon F:	Vector: NONE (OFF1, OFF2, OFF3, STOP2)		
	Infeed: NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY		

---

<b>A05054</b>	<b>Parallel circuit: Power unit deactivated</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	For the drive object involved, fewer power units connected in parallel are active than exist in the target topology. Operation is only possible at reduced power (power derating).		
<b>Remedy:</b>	Re-activate the deactivated power units if required. See also: p0125 (Activate/deactivate power unit components), p0895 (Activate/deactivate power unit components), p0897 (Parking axis selection)		

---

<b>F05055</b>	<b>Parallel connection: Power units with illegal code numbers</b>		
<b>Message value:</b>	Parameter: %1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The code numbers of the power units do not match. Fault value (r0949, interpret decimal): Parameter in which the first different power unit code number was detected.		
<b>Remedy:</b>	Use power units with the same code number. For parallel circuit configurations, only power units with identical power unit data may be used.		

---

<b>F05055</b>	<b>Parallel connection: Power units with illegal code numbers</b>		
<b>Message value:</b>	Parameter: %1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The code numbers of the power units are not permissible. For parallel circuit configurations, only power units with identical power unit data may be used. Possible causes: - the code numbers of the power units do not match. For booksize drive units, the following additionally applies: - a parallel connection is not possible for the power units being used. - there are too many power units being used in the parallel connection.		

Fault value (r0949, interpret decimal):  
Parameter in which the inadmissible power unit code number was detected.  
**Remedy:**  
- Use power units with the same code number.  
For booksize drive units, the following additionally applies:  
- use power units which are permitted for a parallel connection.  
- reduce the number of power units being used in the parallel connection.

**F05056**

**Parallel circuit: Power unit EEPROM versions differ**

**Message value:** Parameter: %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Power Module **Propagation:** GLOBAL  
**Reaction:** OFF2 (NONE)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The EEPROM versions of the power units do not match.

Fault value (r0949, interpret decimal):  
Parameter in which the first different version number was detected.

**Remedy:** Use power units with the same EEPROM version.  
Note:  
For parallel circuit configurations, only power units with identical EEPROM versions may be used.

**F05057**

**Parallel circuit: Power unit firmware versions differ**

**Message value:** Parameter: %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Power Module **Propagation:** GLOBAL  
**Reaction:** OFF2 (NONE)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The firmware versions of the power units connected in parallel do not match.

Fault value (r0949, interpret decimal):  
Parameter in which the first different version number was detected.

**Remedy:** Use power units with the same firmware version.  
For parallel circuit configurations, only power units with identical firmware versions may be used.

**F05058**

**Parallel circuit: VSM EEPROM versions differ**

**Message value:** Parameter: %1  
**Message class:** General drive fault (19)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Power Module **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY  
**Cause:** The EEPROM versions of the Voltage Sensing Modules (VSM) do not match.

Fault value (r0949, interpret decimal):  
Parameter in which the first different version number was detected.

**Remedy:** For parallel circuit configurations, only Voltage Sensing Modules (VSM) with identical EEPROM versions may be used.

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F05059</b>	<b>Parallel circuit: VSM firmware versions differ</b>		
<b>Message value:</b>	Parameter: %1		
<b>Message class:</b>	General drive fault (19)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The firmware versions of the Voltage Sensing Module (VSM) do not match. Fault value (r0949, interpret decimal): Parameter in which the first different version number was detected.		
<b>Remedy:</b>	For parallel circuit configurations, only Voltage Sensing Modules (VSM) with identical firmware versions may be used.		

---

<b>F05060</b>	<b>Parallel circuit: Power unit firmware version does not match</b>		
<b>Message value:</b>	Parameter: %1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	Firmware from version V02.30.01.00 is required when connecting the power units in parallel.		
<b>Remedy:</b>	Update the firmware of the power units (at least V02.30.01.00).		

---

<b>F05061</b>	<b>Infeed VSM count</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Voltage Sensing Module (VSM)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The number of active Voltage Sensing Modules (VSM) for the drive object infeed with chassis power units is not correct. For A_Infeed, each active power unit must be assigned an active VSM also for a parallel circuit configuration. For S_Infeed, the active drive object, must be assigned at least one active VSM. Fault value (r0949, interpret decimal): Number of VSMs that are currently assigned to the drive object.		
<b>Remedy:</b>	Adapts the number of active Voltage Sensing Modules (VSM).		

---

<b>F05064</b>	<b>Parallel connection: Pulse synchronization error</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	General drive fault (19)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (OFF1, OFF3)		
<b>Acknowledge:</b>	POWER ON (IMMEDIATELY)		
<b>Cause:</b>	The pulse synchronization of at least one of the power units connected in parallel is incorrect.		
<b>Remedy:</b>	Restart the drive system.		

<b>A05065 (F, N)</b>	<b>Voltage measured values not plausible</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Power electronics faulted (5)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The voltage measurement does not supply any plausible values and is not used. Alarm value (r2124, interpret bitwise binary): Bit 1: Phase U Bit 2: Phase V Bit 3: Phase W
<b>Remedy:</b>	The following parameterization must be made in order to deactivate the alarm: - Deactivate voltage measurement (p0247.0 = 0). - Deactivate flying restart with voltage measurement (p0247.5 = 0) and deactivate fast flying restart (p1780.11 = 0).
Reaction upon F:	NONE (OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>F05118 (A)</b>	<b>Precharging contactor simultaneity monitoring time exceeded</b>
<b>Message value:</b>	fault cause: %1, additional information: %2
<b>Message class:</b>	Infeed faulted (13)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	A feedback signal for the precharging contactor (ALM, SLM, BLM diode) or the line contactor (BLM thyristor) interconnected and the simultaneity monitoring (p0255[4, 6]) activated. After opening or closing a contactor of the parallel connection, after a monitoring time has elapsed, not all of the contactors have assumed the same state. Fault value (r0949, interpret binary): yyyyxxxx hex: yyyy = supplementary information, xxxx = fault cause Fault cause: Bit 0 = 1: simultaneity error when closing the contactors. Bit 1 = 1: simultaneity error when opening the contactors. Supplementary information: Bit 0 = 1: PDS0 contactor is closed. Bit 1 = 1: PDS1 contactor is closed. Bit 2 = 1: PDS2 contactor is closed. Bit 3 = 1: PDS3 contactor is closed. Bit 4 = 1: PDS4 contactor is closed. Bit 5 = 1: PDS5 contactor is closed. Bit 6 = 1: PDS6 contactor is closed. Bit 7 = 1: PDS7 contactor is closed. Note: ALM: Active Line Module BLM: Basic Line Module PDS: Power unit Data Set SLM: Smart Line Module
<b>Remedy:</b>	- check the monitoring time setting (p0255[4, 6]). - check the wiring and control of the contactor. - if required, replace the contactor. See also: p0255 (Power unit contactor monitoring time)

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon A: NONE  
Acknowl. upon A: NONE

---

<b>F05119 (A)</b>	<b>Bypass contactor simultaneity monitoring time exceeded</b>		
<b>Message value:</b>	fault cause: %1, additional information: %2		
<b>Message class:</b>	Infeed faulted (13)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE, OFF1)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	A feedback signal for the bypass contactor is interconnected and the simultaneity monitoring (p0255[5, 7]) activated. After opening or closing a contactor of the parallel connection, after a monitoring time has elapsed, not all of the contactors have assumed the same state. Fault value (r0949, interpret binary): yyyyxxxx hex: yyyy = supplementary information, xxxx = fault cause Fault cause: Bit 0 = 1: simultaneity error when closing the contactors. Bit 1 = 1: simultaneity error when opening the contactors. Supplementary information: Bit 0 = 1: PDS0 contactor is closed. Bit 1 = 1: PDS1 contactor is closed. Bit 2 = 1: PDS2 contactor is closed. Bit 3 = 1: PDS3 contactor is closed. Bit 4 = 1: PDS4 contactor is closed. Bit 5 = 1: PDS5 contactor is closed. Bit 6 = 1: PDS6 contactor is closed. Bit 7 = 1: PDS7 contactor is closed. Note: PDS: Power unit Data Set		
<b>Remedy:</b>	- check the monitoring time setting (p0255[5, 7]). - check the wiring and control of the contactor. - if required, replace the contactor. See also: p0255 (Power unit contactor monitoring time)		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F06000</b>	<b>Infeed: Precharging monitoring time expired</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Infeed faulted (13)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (OFF1)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	After the line contactor closes the power unit does not signal the READY state within the monitoring time (p0857). The end of the DC link precharging was not able to be completed for one of the following reasons: 1) There is no line supply voltage connected. 2) The line contactor/line side switch has not been closed. 3) The line supply voltage is too low. 4) Line supply voltage incorrectly set (p0210). 5) The precharging resistors are overheated as there were too many precharging operations per time unit. 6) The precharging resistors are overheated as the DC link capacitance is too high. 7) The precharging resistors are overheated because when there is no "ready for operation" (r0863.0) of the infeed unit, power is taken from the DC link. 8) The precharging resistors are overheated as the line contactor was closed during the DC link fast discharge through the Braking Module.		



---

<b>A06105 (F)</b>	<b>Infeed: Line supply undervoltage</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Network fault (2)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The filtered (steady-state) value of line supply voltage is lower than the alarm threshold (p0282). Alarm condition: $V_{rms} < p0282 * p0210$ Alarm value (r2124, floating point): Actual steady-state line supply voltage.		
<b>Remedy:</b>	- check the line supply. - check the line supply voltage (p0210). - check the alarm threshold (p0282).		
Reaction upon F:	NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

---

<b>F06211</b>	<b>Infeed: Summation current impermissibly high</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Ground fault / inter-phase short-circuit detected (7)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The smoothed sum of the phase currents (i1 + i2 + i3) is impermissibly high. The summed current has exceeded the parameterized threshold for the ground fault monitoring (p0287). Possible causes: - there is a ground fault that results in a high summation current (r0069.6). The DC component in the line currents can damage/destroy the power unit, reactor, filter or motor! - the current measurement in the power unit is defective. Fault value (r0949, floating point): Smoothed total of the phase currents.		
<b>Remedy:</b>	- check the line supply for ground faults and remove any that are present. - check the set threshold for the ground fault monitoring (p0287). - if required, replace the power unit. See also: p0287 (Ground fault monitoring threshold)		

---

<b>A06301 (F)</b>	<b>Infeed: Line supply overvoltage</b>		
<b>Message value:</b>	Line supply voltage: %1		
<b>Message class:</b>	Network fault (2)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The filtered (steady-state) value of the rms line supply voltage $V_{rms}$ is higher than the alarm threshold (p0281). Alarm condition: $V_{rms} > p0281 * p0210$ . Alarm value (r2124, floating point): Actual steady-state line supply voltage.		
<b>Remedy:</b>	- check the line supply. - check the line supply voltage (p0210). - check the alarm threshold (p0281). See also: p0210 (Drive unit line supply voltage)		
Reaction upon F:	NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

**F06310 (A) Supply voltage (p0210) incorrectly parameterized**

**Message value:** -  
**Message class:** Network fault (2)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE (OFF1, OFF2)  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** For AC/AC drive units, the measured DC voltage lies outside the tolerance range after precharging has been completed.  
The following applies for the tolerance range:  $1.16 * p0210 < r0070 < 1.6 * p0210$   
**Note:**  
The fault can only be acknowledged when the drive is switched off.  
See also: p0210 (Drive unit line supply voltage)  
**Remedy:** - check the parameterized supply voltage and if required change (p0210).  
- check the line supply voltage.  
See also: p0210 (Drive unit line supply voltage)  
Reaction upon A: NONE  
Acknowl. upon A: NONE

**F06310 (A) Infeed: Supply voltage (p0210) incorrectly parameterized**

**Message value:** Line supply voltage: %1  
**Message class:** Network fault (2)  
**Drive object:** B\_INF  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE (OFF1, OFF2)  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** After precharging was completed, the line supply voltage  $V_{rms}$  was calculated using the measured DC link voltage. This voltage  $V_{rms}$  is not within the tolerance range of the supply voltage.  
The following applies for the tolerance range:  $85 \% * p0210 < V_{rms} < 110 \% * p0210$   
**Fault value (r0949, floating point):**  
Line supply voltage  $V_{rms}$  present.  
See also: p0210 (Drive unit line supply voltage)  
**Remedy:** - check the parameterized supply voltage and if required change (p0210).  
- check the line supply voltage.  
See also: p0210 (Drive unit line supply voltage)  
Reaction upon A: NONE  
Acknowl. upon A: NONE

**F06311 Infeed: Supply voltage (p0210) incorrect**

**Message value:** Line supply voltage: %1  
**Message class:** Network fault (2)  
**Drive object:** B\_INF  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2 (OFF1)  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** The line voltage nominal value indicated in p0210 is outside the nominal voltage range of the power unit.  
After precharging was completed, the actual line supply voltage  $V_{rms}$  was calculated using the measured DC link voltage. This voltage  $V_{rms}$  does not lie within the extended tolerance range of the supply voltage set in p0210.  
The following applies for the extended tolerance range:  $75 \% * p0210 < V_{rms} < 120 \% * p0210$   
**Alarm value (r2124, floating point):**  
Line supply voltage  $V_{rms}$  present.  
See also: p0210 (Drive unit line supply voltage)  
**Remedy:** - check the parameterized supply voltage and if required change (p0210).  
- check the line supply voltage.  
See also: p0210 (Drive unit line supply voltage)

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F06700 (A)</b>	<b>Infeed: Switch line contactor for load condition</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Infeed faulted (13)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE (OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	For an ON command, the infeed line contactor should be switched under load.		
<b>Remedy:</b>	- do not load the DC link if the infeed has not issued an operating signal (r0863.0 = 1). - after the infeed has been switched off, all power units connected to the DC link should be switched off. To realize this, the operating signal of the infeed (r0863.0) must be suitably interconnected.		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>A06810 (F)</b>	<b>Infeed: DC link voltage alarm threshold</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Infeed faulted (13)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	In operation, the DC link voltage has dropped to below the alarm threshold. The alarm threshold is obtained from the sum of p0279 and r0296. The status is also displayed in r3405.bit7. Possible causes include: - line supply voltage dip or another line supply fault. - overload of the infeed. - for Active Line Module: Controller incorrectly parameterized.		
<b>Remedy:</b>	See also: p0279 (DC link voltage offset alarm threshold), r0296 (DC link voltage undervoltage threshold), r3405 - check the line voltage and line supply quality. - reduce the power drawn, avoid step-like load changes - for Active Line Module: Adapt the controller parameterization (e.g. automatic line supply identification (p3410 = 4, 5)).		
Reaction upon F:	NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

---

<b>A06900 (F)</b>	<b>Braking Module: Fault (1 -&gt; 0)</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Braking Module faulted (14)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The Braking Module signals a fault (1 -> 0) via X21.4 ("booksize" format) or X21.5 ("chassis" format). This signal is wired to a system digital input and correspondingly interconnected using binector input p3866[0...7]. Possible causes: - wiring of the signal or BICO interconnection of the signal source incorrect. - overtemperature - electronics power supply missing. - ground fault/short-circuit. - internal component fault. See also: p3866 (Braking Module fault)		



<b>F06906 (A)</b>	<b>Braking Module internal fault</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Braking Module faulted (14)
<b>Drive object:</b>	B_INF
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The internal Braking Module outputs a fault due to overcurrent or an excessively high I2t value and is therefore inhibited. Note: This message is also displayed via BO: p3686. Fault value (r0949, interpret bitwise binary): Bit 0 = 1: I2t exceeded Bit 1 = 1: overcurrent See also: r3686 (Digital Braking Module fault)
<b>Remedy:</b>	Reduce the number of braking operations.
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>F06907</b>	<b>Braking Module internal overtemperature</b>
<b>Message value:</b>	-
<b>Message class:</b>	Braking Module faulted (14)
<b>Drive object:</b>	B_INF
<b>Component:</b>	None
<b>Reaction:</b>	OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The temperature sensor connected to the braking resistor signals an overtemperature. The Braking Module is still active. If the overtemperature persists for more than 60 s, fault F06908 is output, and the braking module is switched off. See also: r3687 (Digital Braking Module pre-alarm overtemperature)
<b>Remedy:</b>	- reduce the temperature at the sensor. - check the temperature sensor connection.
<b>F06908</b>	<b>Braking Module internal overtemperature shutdown</b>
<b>Message value:</b>	-
<b>Message class:</b>	Braking Module faulted (14)
<b>Drive object:</b>	B_INF
<b>Component:</b>	None
<b>Reaction:</b>	OFF2 (OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Braking module shut down due to overtemperature at the temperature sensor of the braking resistor. The overtemperature is detected by the sensor for longer than 60 s. See also: r3688 (Braking Module internal overtemperature shutdown)
<b>Remedy:</b>	- reduce the temperature at the sensor. - check the temperature sensor connection.

<b>F06909</b>	<b>Braking Module internal Vce fault</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Braking Module faulted (14)
<b>Drive object:</b>	B_INF
<b>Component:</b>	None
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	In the power unit, the monitoring of the collector-emitter voltage (U <sub>ce</sub> ) of the power semiconductor to control the braking resistor has responded. Possible causes: - short circuit at the braking resistor terminals. - defective power semiconductor in the braking resistor control. Note: Under certain circumstances, this alarm is also output if a braking resistor has not been connected and power is fed back into the Braking Module. See also: r3689 (Digital Braking Module Uce fault)
<b>Remedy:</b>	- connect a braking resistor. - check the braking resistor connection. - check the braking resistor. - carry out a POWER ON (switch-off/switch-on). - replace the unit.
<b>F06921 (N)</b>	<b>Braking resistor phase unsymmetry</b>
<b>Message value:</b>	-
<b>Message class:</b>	Braking Module faulted (14)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	- the three resistors of the braking chopper are not symmetrical. - DC link voltage oscillations caused by fluctuating loads of the connected drives.
<b>Remedy:</b>	- check the feeder cables to the braking resistors. - if required, increase the value for detecting asymmetry (p1364). See also: p1360 (Braking chopper braking resistor cold), p1362 (Braking chopper activation threshold), r1363 (Braking chopper output voltage), p1364 (Braking chopper resistor asymmetry)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>F06922</b>	<b>Braking resistor phase failure</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Braking Module faulted (14)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A phase failure for the brake resistor was detected. Fault value (r0949, interpret decimal): 11: Phase U 12: Phase V 13: Phase W See also: p3235 (Phase failure signal motor monitoring time)
<b>Remedy:</b>	Check the feeder cables to the braking resistors. See also: p1360 (Braking chopper braking resistor cold), p1362 (Braking chopper activation threshold), r1363 (Braking chopper output voltage), p1364 (Braking chopper resistor asymmetry)

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F07011</b>	<b>Drive: Motor overtemperature</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Motor overload (8)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Motor	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE, OFF1, OFF3, STOP2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	KTY84/PT1000 or no sensor: The measured motor temperature or model temperature has exceeded the fault threshold (p0605) or the timer (p0606) has elapsed following the alarm threshold (p0604) being exceeded. The response parameterized in p0610 becomes active. PTC or bimetallic NC contact: The response threshold of 1650 Ohm was exceeded or the NC contact opened and the timer (p0606) has expired. The response parameterized in p0610 becomes active. Possible causes: - motor is overloaded. - the motor ambient temperature is too high. - PTC / bimetallic NC contact: Wire breakage or sensor not connected. Fault value (r0949, interpret decimal): 200: The motor temperature model 1 (I2t) signals an overtemperature (p0612.0 = 1, p0611 > 0, p0615 reached). Number of the temperature channel leading to the message (for SME/TM120 (p0601 = 10, 11)). See also: p0604, p0605, p0606, p0612, p0613, p0625, p0626, p0627, p0628		
<b>Remedy:</b>	- reduce the motor load. - check the ambient temperature and the motor ventilation. - check the wiring and the connection of the PTC or bimetallic NC contact. See also: p0604, p0605, p0606, p0612, p0625, p0626, p0627, p0628		

---

<b>A07012 (N)</b>	<b>Drive: Motor temperature model 1/3 overtemperature</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Motor overload (8)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Motor	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The motor temperature model 1/3 identified that the alarm threshold was exceeded. Hysteresis:2K. Alarm value (r2124, interpret decimal): 200: Motor temperature model 1 (I2t): Temperature too high (p0605). 300: Motor temperature model 3: Temperature too high (p5398). See also: r0034 (Motor utilization thermal), p0605 (Mot_temp_mod 1/2 sensor threshold and temperature value), p0611 (I2t motor model thermal time constant), p0612 (Mot_temp_mod activation), p0613 (Mot_temp_mod 1/3 ambient temperature)		
<b>Remedy:</b>	- check the motor load and if required, reduce. - check the motor ambient temperature. - check activation of the motor temperature model (p0612). Motor temperature model 1 (I2t): - check the thermal time constant (p0611). - check the alarm threshold (p0605). Motor temperature model 3: - check the motor type. - check the alarm threshold (p5398). - check the model parameters.		

See also: r0034 (Motor utilization thermal), p0605 (Mot\_temp\_mod 1/2 sensor threshold and temperature value), p0611 (I2t motor model thermal time constant), p0612 (Mot\_temp\_mod activation), r5397 (Mot\_temp\_mod 3 ambient temperature image p0613)

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **A07014 (N) Drive: Motor temperature model configuration alarm**

**Message value:** %1

**Message class:** Motor overload (8)

**Drive object:** VECTOR\_G

**Component:** Motor

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** A fault has occurred in the configuration of the motor temperature model.

Alarm value (r2124, interpret decimal):

1:

All motor temperature models: It is not possible to save the model temperature

See also: p0610 (Motor overtemperature response)

**Remedy:** - set the response for motor overtemperature to "Alarm and fault, no reduction of I\_max" (p0610 = 2).

See also: p0610 (Motor overtemperature response)

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **A07015 Drive: Motor temperature sensor alarm**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** VECTOR\_G

**Component:** Motor

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** An error was detected when evaluating the temperature sensor set in p0600 and p0601.

With the fault, the time in p0607 is started. If the fault is still present after this time has expired, then fault F07016 is output; however, at the earliest, 50 ms after alarm A07015.

Possible causes:

- wire breakage or sensor not connected (KTY: R > 1630 Ohm, PT1000: R > 1720 Ohm).

- measured resistance too low (PTC: R < 20 Ohm, KTY: R < 50 Ohm, PT1000: R < 603 Ohm).

Alarm value (r2124, interpret decimal):

- if SME/TM120 is selected (p0601 = 10, 11),

this is the number of the temperature channel leading to the message.

**Remedy:** - make sure that the sensor is connected correctly.

- check the parameterization (p0600, p0601).

See also: r0035, p0600 (Motor temperature sensor for monitoring), p0601, p0607 (Temperature sensor fault timer)

---

#### **F07016 Drive: Motor temperature sensor fault**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** VECTOR\_G

**Component:** Motor

**Propagation:** GLOBAL

**Reaction:** OFF1 (NONE, OFF2, OFF3, STOP2)

**Acknowledge:** IMMEDIATELY

**Cause:** An error was detected when evaluating the temperature sensor set in p0600 and p0601.

Possible causes:

- wire breakage or sensor not connected (KTY: R > 1630 Ohm, PT1000: R > 1720 Ohm).

- measured resistance too low (PTC: R < 20 Ohm, KTY: R < 50 Ohm, PT1000: R < 603 Ohm).

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Note:**

If alarm A07015 is present, the time in p0607 is started. If the fault is still present after this time has expired, then fault F07016 is output; however, at the earliest, 50 ms after alarm A07015.

Fault value (r0949, interpret decimal):

- if SME/TM120 is selected (p0601 = 10, 11),

this is the number of the temperature channel leading to the message.

See also: p0607 (Temperature sensor fault timer)

**Remedy:**

- make sure that the sensor is connected correctly.

- check the parameterization (p0600, p0601).

- induction motors: Deactivate temperature sensor fault (p0607 = 0).

- When TM120 and SMC/SME (p0601 = 10, 11) are being used, set the same sensor type on the drive (p4610 ... p4613) as for TM120.

See also: r0035, p0600 (Motor temperature sensor for monitoring), p0601, p0607 (Temperature sensor fault timer)

---

#### F07080

#### Drive: Incorrect control parameter

**Message value:**

Parameter: %1

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

B\_INF, ENC, HUB, TB30, TM120, TM150, TM31, TM54F\_MA, TM54F\_SL, VECTOR\_G

**Component:**

None

**Propagation:**

GLOBAL

**Reaction:**

NONE

**Acknowledge:**

IMMEDIATELY (POWER ON)

**Cause:**

The closed-loop control parameters have been parameterized incorrectly (e.g. p0356 = L\_spread = 0).

Fault value (r0949, interpret decimal):

The fault value includes the parameter number involved.

See also: p0310, p0311, p0341, p0344, p0350, p0354, p0356, p0357, p0358, p0360, p0400, p0404, p0408, p0640, p1082, p1300

**Remedy:**

Modify the parameter indicated in the fault value (r0949) (e.g. p0640 = current limit > 0).

See also: p0311, p0341, p0344, p0350, p0354, p0356, p0358, p0360, p0400, p0404, p0408, p0640, p1082

---

#### F07082

#### Macro: Execution not possible

**Message value:**

Fault cause: %1, supplementary information: %2, preliminary parameter number: %3

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

All objects

**Component:**

None

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

IMMEDIATELY

**Cause:**

The macro cannot be executed.

Fault value (r0949, interpret hexadecimal):

ccccbbaa hex:

cccc = preliminary parameter number, bb = supplementary information, aa = fault cause

Fault causes for the trigger parameter itself:

19: Called file is not valid for the trigger parameter.

20: Called file is not valid for parameter 15.

21: Called file is not valid for parameter 700.

22: Called file is not valid for parameter 1000.

23: Called file is not valid for parameter 1500.

24: Data type of a TAG is incorrect (e.g. Index, number or bit is not U16).

Fault causes for the parameters to be set:

25: Error level has an undefined value.

26: Mode has an undefined value.

27: A value was entered as string in the tag value that is not "DEFAULT".

31: Entered drive object type unknown.

32: A device was not able to be found for the determined drive object number.

34: A trigger parameter was recursively called.

35: It is not permissible to write to the parameter via macro.

36: Check, writing to a parameter unsuccessful, parameter can only be read, not available, incorrect data type, value range or assignment incorrect.

37: Source parameter for a BICO interconnection was not able to be determined.

38: An index was set for a non-indexed (or CDS-dependent) parameter.

39: No index was set for an indexed parameter.

41: A bit operation is only permissible for parameters with the parameter format DISPLAY\_BIN.

42: A value not equal to 0 or 1 was set for a BitOperation.

43: Reading the parameter to be changed by the BitOperation was unsuccessful.

51: Factory setting for DEVICE may only be executed on the DEVICE.

61: The setting of a value was unsuccessful.

**Remedy:**

- check the parameter involved.
- check the macro file and BICO interconnection.

See also: p0015, p0700, p1000, p1500

**F07083****Macro: ACX file not found**

**Message value:** Parameter: %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY

**Cause:** The ACX file (macro) to be executed was not able to be found in the appropriate directory.  
Fault value (r0949, interpret decimal):  
Parameter number with which the execution was started.  
See also: p0015, p0700, p1000, p1500

**Remedy:**

- check whether the file is saved in the appropriate directory on the memory card.

Example:  
If p0015 is set to 1501, then the selected ACX file must be located in the following directory:  
... /PMACROS/DEVICE/P15/PM001501.ACX

**F07084****Macro: Condition for WaitUntil not fulfilled**

**Message value:** Parameter: %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY

**Cause:** The WaitUntil condition set in the macro was not fulfilled in a certain number of attempts.  
Fault value (r0949, interpret decimal):  
Parameter number for which the condition was set.

**Remedy:** Check and correct the conditions for the WaitUntil loop.

**F07085****Drive: Open-loop/closed-loop control parameters changed**

**Message value:** Parameter: %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** B\_INF, VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** Open-loop/closed-loop control parameters have had to be changed.  
Possible causes:

1. As a result of other parameters, they have exceeded the dynamic limits.
2. They cannot be used due to the fact that the hardware detected not having certain features.
3. The value is estimated as the thermal time constant is missing.
4. Motor temperature model 1 is activated as thermal motor protection is missing.

## 4 Faults and alarms

### 4.2 List of faults and alarms

Fault value (r0949, interpret decimal):

Changed parameter number.

340:

The motor and control parameters were automatically calculated (p0340 = 1), because the vector control was subsequently activated as configuration (r0108.2).

611:

The time constant for thermal motor model 1 was estimated.

612:

Thermal motor model 1 was activated (p0612.0 = 1).

See also: p0640 (Current limit), p1082 (Maximum speed), p1300 (Open-loop/closed-loop control operating mode), p1800 (Pulse frequency setpoint)

**Remedy:**

Not necessary.

It is not necessary to change the parameters as they have already been correctly limited.

---

#### **F07086      Units changeover: Parameter limit violation due to reference value change**

**Message value:** Parameter: %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY

**Cause:** A reference parameter was changed in the system. This resulted in the fact that for the parameters involved, the selected value was not able to be written in the per unit notation.

The values of the parameters were set to the corresponding violated minimum limit/maximum limit or to the factory setting.

Possible causes:

- the steady-state minimum limit/maximum limit or that defined in the application was violated.

Fault value (r0949, parameter):

Diagnostics parameter to display the parameters that were not able to be re-calculated.

See also: p0304, p0305, p0310, p0596, p2000, p2001, p2002, p2003, r2004

**Remedy:**

Check the adapted parameter value and if required correct.

See also: r9450 (Reference value change parameter with unsuccessful calculation)

---

#### **F07088      Units changeover: Parameter limit violation due to units changeover**

**Message value:** Parameter: %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY

**Cause:** A changeover of units was initiated. This resulted in a violation of a parameter limit

Possible causes for the violation of a parameter limit:

- When rounding off a parameter corresponding to its decimal places, the steady-state minimum limit or maximum limit was violated.

- inaccuracies for the data type "FloatingPoint".

In these cases, when the minimum limit is violated then the parameter value is rounded up and when the maximum limited is violated the parameter value is rounded down.

Fault value (r0949, interpret decimal):

Diagnostics parameter r9451 to display all parameters whose value had to be adapted.

See also: p0100 (IEC/NEMA mot stds), p0349 (System of units motor equivalent circuit diagram data), p0505 (Selecting the system of units), p0595 (Technological unit selection)

**Remedy:**

Check the adapted parameter values and if required correct.

See also: r9451 (Units changeover adapted parameters)



## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:**

- continue to work with the set sampling times.
- before resetting the drive parameters, set the basic clock cycle p0110[0] to the original value.

See also: r0110 (Basic sampling times)

---

#### **F07110 Drive: Sampling times and basic clock cycle do not match**

**Message value:** Parameter: %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY

**Cause:** The parameterized sampling times do not match the basic clock cycle.

Fault value (r0949, interpret decimal):

The fault value specifies the parameter involved.

See also: r0110, r0111, p0115

**Remedy:** Enter the current controller sampling times so that they are identical to the basic clock cycle, e.g. by selecting p0112. Note which basic clock cycle is selected in p0111.

The sampling times in p0115 can only be changed manually in the sampling times pre-setting "Expert" (p0112).

See also: r0110, r0111, p0112, p0115

---

#### **A07200 Drive: Master control ON command present**

**Message value:** -

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The ON/OFF1 command is present (no 0 signal).

The command is either influenced via binector input p0840 (current CDS) or control word bit 0 via the master control.

**Remedy:** Switch the signal via binector input p0840 (current CDS) or control word bit 0 via the master control to 0.

---

#### **F07220 (N, A) Drive: Master control by PLC missing**

**Message value:** -

**Message class:** Communication error to the higher-level control system (9)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** Vector: OFF1 (NONE, OFF2, OFF3, STOP2)

Infeed: OFF1 (NONE, OFF2)

**Acknowledge:** IMMEDIATELY

**Cause:** The "master control by PLC" signal was missing in operation.

- interconnection of the binector input for "master control by PLC" is incorrect (p0854).

- the higher-level control has withdrawn the "master control by PLC" signal.

- data transfer via the fieldbus (master/drive) was interrupted.

**Remedy:** - check the interconnection of the binector input for "master control by PLC" (p0854).

- check the "master control by PLC" signal and, if required, switch in.

- check the data transfer via the fieldbus (master/drive).

Note:

If the drive should continue to operate after withdrawing "master control by PLC" then fault response must be parameterized to NONE or the message type should be parameterized as alarm.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

<b>F07300 (A)</b>	<b>Drive: Line contactor feedback signal missing</b>
<b>Message value:</b>	-
<b>Message class:</b>	Auxiliary unit faulted (20)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	OFF2 (NONE)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	<ul style="list-style-type: none"> <li>- the line contactor was not able to be closed within the time in p0861.</li> <li>- the line contactor was not able to be opened within the time in p0861.</li> <li>- the line contactor dropped out during operation</li> <li>- the line contactor has closed although the drive converter is switched off.</li> </ul>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the setting of p0860.</li> <li>- check the feedback circuit from the line contactor.</li> <li>- increase the monitoring time in p0861.</li> </ul> <p>See also: p0860 (Line contactor feedback signal), p0861 (Line contactor monitoring time)</p>
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F07311</b>	<b>Bypass motor switch</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	<p>Fault value (r0949, interpret bitwise binary):</p> <ul style="list-style-type: none"> <li>Bit 1: Switch "Closed" feedback signal missing.</li> <li>Bit 2: Switch "Open" feedback signal missing.</li> <li>Bit 3: Switch feedback signal too slow.</li> </ul> <p>After switching, the system waits for the positive feedback signal. If the feedback signal is received later than the specified time, then a fault trip (shutdown) is issued.</p> <ul style="list-style-type: none"> <li>Bit 6: Drive switch feedback signal not consistent with the bypass state.</li> </ul> <p>The drive switch is closed when switching-on or when switching-in the motor.</p> <p>See also: p1260 (Bypass configuration), r1261 (Bypass control/status word), p1266 (Bypass control command), p1267 (Bypass changeover source configuration), p1269 (Bypass switch feedback signal), p1274 (Bypass switch monitoring time)</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the transfer of the feedback signals.</li> <li>- check the switch.</li> </ul>

---

<b>F07312</b>	<b>Bypass LSS:</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	<p>Fault value (r0949, interpret bitwise binary):</p> <ul style="list-style-type: none"> <li>Bit 1: Switch "Closed" feedback signal missing.</li> <li>Bit 2: Switch "Open" feedback signal missing.</li> <li>Bit 3: Switch feedback signal too slow.</li> </ul> <p>After switching, the system waits for the positive feedback signal. If the feedback signal is received later than the specified time, then a fault trip (shutdown) is issued.</p> <ul style="list-style-type: none"> <li>Bit 6: Line Side Switch feedback signal not consistent with the bypass state.</li> </ul> <p>When switching-on or when switching-in the motor, the line side switch is closed without this having been requested from the bypass.</p>

## 4 Faults and alarms

### 4.2 List of faults and alarms

See also: p1260 (Bypass configuration), r1261 (Bypass control/status word), p1266 (Bypass control command), p1267 (Bypass changeover source configuration), p1269 (Bypass switch feedback signal), p1274 (Bypass switch monitoring time)

**Remedy:**

- check the transfer of the feedback signals.
- check the switch.

---

#### **F07320 Drive: Automatic restart interrupted**

**Message value:** %1

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY

**Cause:**

- the specified number of restart attempts (p1211) has been completely used up because within the monitoring time (p1213) the faults were not able to be acknowledged. The number of restart attempts (p1211) is decremented at each new start attempt.

- the monitoring time for the power unit has expired (p0857).

- when exiting commissioning or at the end of the motor identification routine or the speed controller optimization, the drive unit is not automatically switched on again.

Fault value (r0949, interpret hexadecimal):

Only for internal Siemens troubleshooting.

**Remedy:**

- increase the number of restart attempts (p1211). The actual number of starting attempts is displayed in r1214.
- increase the delay time in p1212 and/or the monitoring time in p1213.
- either increase or disable the monitoring time of the power unit (p0857).
- reduce the delay time to reset the start counter p1213[1] so that fewer faults are registered in the time interval.

---

#### **F07320 Drive: Automatic restart interrupted**

**Message value:** %1

**Message class:** Application/technological function faulted (17)

**Drive object:** B\_INF

**Component:** None

**Propagation:** GLOBAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY

**Cause:**

- the specified number of restart attempts (p1211) has been completely used up because within the monitoring time (p1213) the faults were not able to be acknowledged. The number of restart attempts (p1211) is decremented at each new start attempt.

- the monitoring time for the power unit has expired (p0857).

- when exiting commissioning or at the end of the motor identification routine or the speed controller optimization, the drive unit is not automatically switched on again.

Fault value (r0949, interpret hexadecimal):

Only for internal Siemens troubleshooting.

**Remedy:**

- increase the number of restart attempts (p1211). The actual number of starting attempts is displayed in r1214.
- increase the delay time in p1212 and/or the monitoring time in p1213.
- either increase or disable the monitoring time of the power unit (p0857).

---

#### **A07321 Drive: Automatic restart active**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** B\_INF, VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The automatic restart (AR) is active. When the line supply returns and/or the causes of the existing faults are removed the drive is automatically restarted. The pulses are enabled and the motor starts to rotate.

**Remedy:**

- the automatic restart (AR) should, if required, be inhibited (p1210 = 0).
- an automatic restart can be directly interrupted by withdrawing the switch-on command (BI: p0840).

<b>F07330</b>	<b>Flying restart: Measured search current too low</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	During a flying restart, it was identified that the search current reached is too low. It is possible that the motor is not connected.
<b>Remedy:</b>	Check the motor feeder cables.
<b>F07331</b>	<b>Flying restart: Function not supported</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	It is not possible to power up with the motor rotating (no flying restart). In the following cases, the "flying restart" function is not supported: Permanent-magnet synchronous motor (PMSM): - operation with U/f characteristic. - encoderless operation without a Voltage Sensing Module (VSM) being connected. Separately excited synchronous motor (SESM): - operation with U/f characteristic.
<b>Remedy:</b>	- deactivate the "flying restart" function (p1200 = 0). - change the open-loop/closed-loop control mode (p1300). - connect a Voltage Sensing Module (VSM) (voltage measurement).
<b>N07332</b>	<b>Flying restart: maximum speed reduced</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The maximum speed that can be reached is reduced; at very high speeds problems associated with the flying restart can be encountered. Possible causes: - power ratio, power unit/motor too high
<b>Remedy:</b>	Parameter changes are not required. Note: A flying restart at speeds above 3000 rpm should be avoided.
<b>A07350 (F)</b>	<b>Drive: Measuring probe parameterized to a digital output</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The measuring probe is connected to a bi-directional digital input/output and the terminal is set as output. Alarm value (r2124, interpret decimal): 8: DI/DO 8 (X122.9/X132.1) 9: DI/DO 9 (X122.10/X132.2)

## 4 Faults and alarms

### 4.2 List of faults and alarms

10: DI/DO 10 (X122.12/X132.3)

11: DI/DO 11 (X122.13/X132.4)

12: DI/DO 12 (X132.9)

13: DI/DO 13 (X132.10)

14: DI/DO 14 (X132.12)

15: DI/DO 15 (X132.13)

Regarding the terminal designation:

The first designation is valid for CU320, the second for CU305.

**Remedy:**  
- set the terminal as input (p0728).  
- de-select the measuring probe (p0488, p0489, p0580).

Reaction upon F: OFF1

Acknowl. upon F: IMMEDIATELY

---

#### **A07400 (N) Drive: DC link voltage maximum controller active**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The DC link voltage controller has been activated because the upper switch-in threshold has been exceeded (r1242, r1282).

The ramp-down times are automatically increased in order to maintain the DC link voltage (r0070) within the permissible limits. There is a system deviation between the setpoint and actual speeds.

When the DC link voltage controller is switched out (disabled), this is the reason that the ramp-function generator output is set to the speed actual value.

See also: r0056 (Status word, closed-loop control), p1240 (Vdc controller or Vdc monitoring configuration), p1280 (Vdc controller or Vdc monitoring configuration (U/f))

**Remedy:**  
If the controller is not to intervene:  
- increase the ramp-down times.  
- switch off the Vdc\_max controller (p1240 = 0 for vector control, p1280 = 0 for U/f control).  
If the ramp-down times are not to be changed:  
- use a chopper or regenerative feedback unit.

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **A07401 (N) Drive: DC link voltage maximum controller deactivated**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The Vdc\_max controller can no longer maintain the DC link voltage (r0070) below the limit value (r1242, r1282) and was therefore switched out (disabled).

- the line supply voltage is permanently higher than specified for the power unit.

- the motor is permanently in the regenerative mode as a result of a load that is driving the motor.

**Remedy:**  
- check whether the input voltage is within the permissible range (if required, increase the value in p0210).  
- check whether the load duty cycle and load limits are within the permissible limits.

Reaction upon N: NONE

Acknowl. upon N: NONE

---

<b>A07402 (N)</b>	<b>Drive: DC link voltage minimum controller active</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The DC link voltage controller has been activated as the lower switch-in threshold has been undershot (r1246, r1286). The kinetic energy of the motor is used to buffer the DC link. The drive is therefore braked. See also: r0056 (Status word, closed-loop control), p1240 (Vdc controller or Vdc monitoring configuration), p1280 (Vdc controller or Vdc monitoring configuration (U/f))
<b>Remedy:</b>	The alarm disappears when power supply returns.
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>F07403 (N, A)</b>	<b>Drive: Lower DC link voltage threshold reached</b>
<b>Message value:</b>	-
<b>Message class:</b>	Infeed faulted (13)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The DC link voltage monitoring is active (p1240, p1280 = 5, 6) and the lower DC link voltage threshold (r1246, r1286) was reached in the "Operation" state.
<b>Remedy:</b>	- check the line supply voltage. - check the infeed. - adapt the device supply voltage (p0210) or the switch-on level (p1245, p1285). - disable the DC link voltage monitoring (p1240, p1280 = 0).
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F07404</b>	<b>Drive: Upper DC link voltage threshold reached</b>
<b>Message value:</b>	-
<b>Message class:</b>	DC link overvoltage (4)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE, OFF1, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	- the DC link voltage monitoring is active (p1240, p1280 = 4, 6) and the upper DC link voltage threshold (r1242, r1282) was reached in the "Operation" state. - the monitoring of the DC link voltage p1284 has responded (only U/f control).
<b>Remedy:</b>	- check the line supply voltage. - check the infeed. - adapt the device supply voltage (p0210). - if necessary, deactivate the DC link voltage monitoring (p1240, p1280 = 0). - adapt the monitoring of the DC link voltage (p1284, only U/f).

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F07405 (N, A)</b>	<b>Drive: Kinetic buffering minimum speed fallen below</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	During kinetic buffering the speed fell below minimum speed (p1257 or p1297 for vector drives with U/f control) and the line supply did not return.		
<b>Remedy:</b>	Check the speed threshold for the Vdc_min controller (kinetic buffering) (p1257, p1297). See also: p1257 (Vdc_min controller speed threshold), p1297 (Vdc_min controller speed threshold (U/f))		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F07406 (N, A)</b>	<b>Drive: Kinetic buffering maximum time exceeded</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF3 (IASC/DCBRK, NONE, OFF1, OFF2, STOP2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The maximum buffer time (p1255 and p1295 for vector drives with U/f control) has been exceeded without the line supply having returned.		
<b>Remedy:</b>	Check the time threshold for Vdc-min controller (kinetic buffering) (p1255, p1295). See also: p1255 (Vdc_min controller time threshold), p1295 (Vdc_min controller time threshold (U/f))		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F07407</b>	<b>Drive: Vdc reduction not permissible</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	For chassis power units, the reduction of the line voltage (see r0212.0) is only possible for closed-loop control of the DC link voltage.		
<b>Remedy:</b>	- Activate DC link voltage control for the motor/generator. - deactivate line voltage reduction (p0212.0 = 0). See also: p0212 (Power unit configuration)		

---

<b>A07409 (N)</b>	<b>Drive: U/f control, current limiting controller active</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The current limiting controller of the U/f control was activated because the current limit was exceeded.		

**Remedy:** The alarm is automatically withdrawn after one of the following measures:  
 - increase current limit (p0640).  
 - reduce the load.  
 - slow down the ramp up to the setpoint speed.

Reaction upon N: NONE  
 Acknowl. upon N: NONE

**F07410 Drive: Current controller output limited**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2 (NONE, OFF1)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The condition " $I_{act} = 0$  and  $U_{q\_set\_1}$  longer than 16 ms at its limit" is present and can be caused by the following:  
 - motor not connected or motor contactor open.  
 - motor data and motor configuration (star-delta) do not match.  
 - no DC link voltage present.  
 - power unit defective.  
 - the "flying restart" function is not activated.

**Remedy:**  
 - connect the motor or check the motor contactor.  
 - check the motor parameterization and the connection type (star-delta).  
 - check the DC link voltage (r0070).  
 - check the power unit.  
 - activate the "flying restart" function (p1200).

**F07411 Drive: Flux setpoint not reached when building up excitation**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** When quick magnetizing is configured ( $p1401.6 = 1$ ) the specified flux setpoint is not reached although 90% of the maximum current is specified.  
 - incorrect motor data.  
 - motor data and motor configuration (star-delta) do not match.  
 - the current limit has been set too low for the motor.  
 - induction motor (encoderless, open-loop controlled) in I2t limiting.  
 - the Motor Module is too small.  
 - the magnetizing time p0346 is too short.

**Remedy:**  
 - correct the motor data. Perform motor data identification and rotating measurement.  
 - check the motor configuration.  
 - correct the current limits (p0640).  
 - reduce the induction motor load.  
 - if required, use a larger Motor Module.  
 - check motor supply cable.  
 - check power unit.  
 - increase p0346.

---

<b>F07412</b>	<b>Drive: Commutation angle incorrect (motor model)</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	ENCODER (NONE, OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	An incorrect commutation angle was detected that can result in a positive coupling in the speed controller. Possible causes: <ul style="list-style-type: none"><li>- the phase sequence of the output phases for the motor is incorrect (e.g. the phases are interchanged).</li><li>- the motor encoder is incorrectly adjusted with respect to the magnet position.</li><li>- the motor encoder is damaged.</li><li>- the angular commutation offset is incorrectly set (p0431).</li><li>- data to calculate the motor model has been incorrectly set (p0356 (motor-stator leakage inductance) and/or p0350 (motor-stator resistance) and/or p0352 (cable resistance)).</li><li>- the changeover speed for the motor model is too low (p1752). The monitoring function only becomes effective above the changeover speed.</li><li>- pole position identification might have calculated an incorrect value when activated (p1982 = 1).</li><li>- the motor encoder speed signal is faulted.</li><li>- the control loop is instable due to incorrect parameterization.</li></ul> Fault value (r0949, interpret decimal): SERVO: 0: The comparison of the pole position angle from the encoder and motor model resulted in an excessively high value (> 80 ° electrical). 1: - VECTOR: 0: The comparison of the pole position angle from the encoder and motor model resulted in an excessively high value (> 45 ° electrical). 1: The change in the speed signal from the motor encoder has changed by > p0492 within a current controller clock cycle.		
<b>Remedy:</b>	<ul style="list-style-type: none"><li>- check the phase sequence for the motor, and if required, correct (wiring, p1820).</li><li>- if the encoder mounting was changed - re-adjust the encoder.</li><li>- replace the defective motor encoder.</li><li>- correctly set the angular commutation offset (p0431). If required, determine using p1990.</li><li>- correctly set the motor stator resistance, cable resistance and motor-stator leakage inductance (p0350, p0352, p0356).</li></ul> Calculate the cable resistance from the cross-section and length, check the inductance and stator resistance using the motor data sheet, measure the stator resistance, e.g. using a multimeter - and if required, again identify the values using the stationary motor data identification (p1910). <ul style="list-style-type: none"><li>- increase the changeover speed for the motor model (p1752). The monitoring is completely deactivated for p1752 &gt; p1082 (maximum speed).</li><li>- with pole position identification activated (p1982 = 1) check the procedure for pole position identification (p1980) and force a new pole position identification procedure by means of de-selection followed by selection (p1982 = 0 -&gt; 1).</li></ul> Note: For High Dynamic Motors (1FK7xxx-7xxx), for applications with a higher current, if necessary, the monitoring should be disabled.		

---

<b>F07413</b>	<b>Drive: Commutation angle incorrect (pole position identification)</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 1
<b>Reaction:</b>	ENCODER (NONE, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	An incorrect commutation angle was detected that can result in a positive coupling in the speed controller. Within the pole position identification routine (p1982 = 2): - a difference of > 45 ° electrical to the encoder angle was determined. For VECTOR, within the encoder adjustment (p1990 = 2): - a difference of > 6 ° electrical to the encoder angle was determined.
<b>Remedy:</b>	- correctly set the angular commutation offset (p0431). - re-adjust the motor encoder after the encoder has been replaced. - replace the defective motor encoder. - check the pole position identification routine. If the pole position identification routine is not suitable for this motor type, then disable the plausibility check (p1982 = 0).

---

<b>A07416</b>	<b>Drive: Flux controller configuration</b>
<b>Message value:</b>	Parameter: %1, Index: %2, fault cause: %3
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The configuration of the flux control (p1401) is contradictory. Alarm value (r2124, interpret hexadecimal): ccbbaaaa hex aaaa = Parameter bb = Index cc = fault cause cc = 01 hex = 1 dec: Quick magnetizing (p1401.6) for soft start (p1401.0). cc = 02 hex = 2 dec: Quick magnetizing (p1401.6) for flux build-up control (p1401.2). cc = 03 hex = 3 dec: Quick magnetizing (p1401.6) for Rs identification after restart (p0621 = 2).
<b>Remedy:</b>	For fault cause = 1: - Shut down soft start (p1401.0 = 0). - Shut down quick magnetizing (p1401.6 = 0). For fault cause = 2: - De-energize flux build-up control (p1401.2 = 0). - Shut down quick magnetizing (p1401.6 = 0). For fault cause = 3: - Re-parameterize Rs identification (p0621 = 0, 1) - Shut down quick magnetizing (p1401.6 = 0).

---

<b>F07417</b>	<b>Drive: Pulse technique not plausible (motor model)</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	<p>The evaluation of the test pulse response indicated incorrect values.</p> <p>Fault value (r0949, interpret decimal):</p> <p>0:</p> <p>An impermissible pulse technique configuration was detected during ramp-up.</p> <p>Possible causes:</p> <ul style="list-style-type: none"> <li>- the pulse technique was initially selected when the system powered up (p1750.5 = 1) but the power unit component does not support the current oversampling required (see r0192.23). As a consequence, p1750.0 was de-selected automatically.</li> </ul> <p>10:</p> <p>The pulse response is repeatedly implausible.</p> <p>Possible causes:</p> <ul style="list-style-type: none"> <li>- incorrect configuration of the power unit component</li> <li>- the power unit component is faulty.</li> </ul> <p>20:</p> <p>For the specified pulse amplitude, the measured pulse response is much higher than the expected value.</p> <p>Possible causes:</p> <ul style="list-style-type: none"> <li>- Strong oscillations have occurred.</li> <li>- the motor is short-circuited for high frequencies (output filter).</li> <li>- the motor is damaged.</li> </ul>		
<b>Remedy:</b>	<p>For fault value = 0:</p> <p>Once the pulse technique has been de-selected automatically (p1750.5 = 0), there are two possible options:</p> <ul style="list-style-type: none"> <li>- acknowledge the fault and save parameter p1750.5 = 0 -&gt; field-oriented control mode to standstill is not used and replaced by transition to open-loop control at low speeds.</li> <li>- upgrade the power unit firmware (at least V4.3) -&gt; field-oriented control mode to standstill is available.</li> </ul> <p>For fault value = 10:</p> <p>With active selection of the pulse technique (p1750.5 = 1):</p> <ul style="list-style-type: none"> <li>- POWER ON (switch-off/switch-on) the Control Unit and the power unit together again.</li> </ul> <p>or</p> <ul style="list-style-type: none"> <li>- carry out a manual warm restart (p0009 = 30, p0976 = 2, 3).</li> </ul> <p>If this does not solve the problem: Replace the power unit component.</p> <p>For fault value = 20:</p> <ul style="list-style-type: none"> <li>- control parameters might have been adjusted (factory setting, commissioning).</li> <li>- filters must not be connected between motor and converter/inverter.</li> <li>- check the motor.</li> </ul>		

---

<b>F07422</b>	<b>Drive: Reference model natural frequency &gt; Shannon frequency</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE (OFF1, OFF2, OFF3)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	<p>The natural filter frequency of the PT2 element for the reference model (p1433) is greater than the Shannon frequency.</p> <p>The Shannon frequency is calculated according to the following formula: <math>0.5 / p0115[1]</math></p>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- reduce the natural frequency of PT2 element for reference model (p1433).</li> <li>- reduce the speed controller sampling time (p0115[1]).</li> </ul>		

<b>F07426 (A)</b>	<b>Technology controller actual value limited</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The actual value for the technology controller, interconnected via connector input p2264, has reached a limit. Fault value (r0949, interpret decimal): 1: upper limit reached. 2: lower limit reached.
<b>Remedy:</b>	- adapt the limits to the signal level (p2267, p2268). - check the actual value normalization (p0595, p0596). - Deactivate evaluation of the limits (p2252.3) See also: p0595 (Technological unit selection), p0596 (Technological unit reference quantity), p2264 (Technology controller actual value), p2267 (Technology controller upper limit actual value), p2268 (Technology controller lower limit actual value)
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>A07428 (N)</b>	<b>Technology controller parameterizing error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The technology controller has a parameterizing error. Alarm value (r2124, interpret decimal): 1: The upper output limit in p2291 is set lower than the lower output limit in p2292.
<b>Remedy:</b>	For alarm value = 1: Set the output limit in p2291 higher than in p2292. See also: p2291 (Technology controller maximum limiting), p2292 (Technology controller minimum limiting)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>F07434</b>	<b>Drive: It is not possible to change the direction of rotation with the pulses enabled</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A drive data set was selected - with the pulses enabled - which has a different parameterized direction of rotation (p1821). It is only possible to change the motor direction of rotation using p1821 when the pulses are inhibited.
<b>Remedy:</b>	- change over the drive data set with the pulses inhibited. - ensure that the changeover to a drive data set does not result in the motor direction of rotation being changed (i.e. for these drive data sets, the same value must be in p1821). See also: p1821 (Dir of rot)

---

<b>F07435 (N)</b>	<b>Drive: Setting the ramp-function generator for sensorless vector control</b>
<b>Message value:</b>	Parameter: %1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (IASC/DCBRK, NONE, OFF1, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	<p>During operation with sensorless vector control (r1407.1) the ramp-function generator was stopped (p1141) or bypassed (p1122). An internal setting command of the ramp-function generator output caused the set setpoint speed to be frozen or was not able to be realized.</p> <p>The drive is switched-on with flying restart activated (p1200), and at the same time the ramp-function generator is bypassed (p1122).</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- deactivate the holding command for the ramp-function generator (p1141).</li> <li>- do not bypass the ramp-function generator (p1122).</li> <li>- suppress the fault (p2101, p2119). This is necessary if the ramp-function generator is held using jogging and the speed setpoint is simultaneously inhibited (r0898.6).</li> </ul> <p>Note:</p> <p>For sensorless vector control it is not practical to read in the main setpoint of the speed control via p1155 or p1160 (p0922). In this case, the main setpoint should be injected before the ramp-function generator (p1070). The reason for this is that the ramp-function generator output is automatically set when transitioning from closed-loop speed controlled into open-loop speed controlled operation.</p>
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A07440</b>	<b>EPOS: Jerk time is limited</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>The calculation of the jerk time <math>T_r = \max(p2572, p2573) / p2574</math> resulted in an excessively high value so that the jerk time is internally limited to 1000 ms.</p> <p>Note:</p> <p>The alarm is also output if jerk limiting is not active.</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- increase the jerk limiting (p2574).</li> <li>- reduce maximum acceleration or maximum deceleration (p2572, p2573).</li> </ul>

---

<b>A07441</b>	<b>LR: Save the position offset of the absolute encoder adjustment</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>The status of the absolute encoder adjustment has changed.</p> <p>In order to permanently save the determined position offset (p2525) and the determined number of the drive data set (p2733), they must be saved in a non-volatile fashion (p0971, p0977).</p> <p>Possible causes:</p> <ul style="list-style-type: none"> <li>- motor or encoder were replaced (applies to EQN and DQI).</li> <li>- position-relevant parameters were changed.</li> <li>- an encoder that was not adjusted was adjusted (save the project in a non-volatile fashion using "Copy RAM to ROM").</li> </ul> <p>Note:</p> <p>This message is not output when switching-on the axis after having first moved it in the switched-off state, as long as the parameterizable monitoring window was not exited.</p>
<b>Remedy:</b>	Readjust the encoder.

<b>F07442 (A)</b>	<b>LR: Multiturn does not match the modulo range</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (OFF2, OFF3)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	<p>The ratio between the multiturn resolution and the modulo range (p2576) is not an integer number. This results in the adjustment being set back, as the position actual value cannot be reproduced after switch-off/switch-on.</p>		
<b>Remedy:</b>	<p>Make the ration between the multiturn resolution and the modulo range an integer number. The ratio v is calculated as follows:</p> <ol style="list-style-type: none"> <li>1. Motor encoder without position tracking  <math>v = (p0421 * p2506 * p0433 * p2505) / (p0432 * p2504 * p2576)</math></li> <li>2. Motor encoder with position tracking for the measuring gear  <math>v = (p0412 * p2506 * p2505) / (p2504 * p2576)</math></li> <li>3. Motor encoder with position tracking for the load gear  <math>v = (p2721 * p2506 * p0433) / (p0432 * p2576)</math></li> <li>4. Motor encoder with position tracking for the load and measuring gear  <math>v = (p2721 * p2506) / p2576</math></li> <li>5. Direct encoder without position tracking  <math>v = (p0421 * p2506 * p0433) / (p0432 * p2576)</math></li> <li>6. Direct encoder with position tracking for the measuring gear  <math>v = (p0412 * p2506) / p2576</math></li> </ol> <p>Note:            With position tracking, it is recommended that p0412 and p2721 are changed            See also: p0412 (Measuring gear absolute encoder rotary revolutions virtual), p0432 (Gearbox factor encoder revolutions), p0433 (Gearbox factor motor/load revolutions), p2721 (Load gear rotary absolute encoder revolutions virtual)</p>		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

<b>F07443 (A)</b>	<b>LR: Reference point coordinate not in the permissible range</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (OFF2, OFF3)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	<p>The reference point coordinate received when adjusting the encoder via connector input p2599 lies outside the half of the encoder range and cannot be set as actual axis position.</p> <p>Fault value (r0949, interpret decimal):            Maximum permissible value for the reference point coordinate.</p>		
<b>Remedy:</b>	Set the reference point coordinate to a lower value than specified in the fault value.		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F07446 (A)</b>	<b>Load gear: Position tracking cannot be reset</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (OFF2, OFF3)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The position tracking cannot be reset.		
<b>Remedy:</b>	Reset the position tracking as follows: - select encoder commissioning (p0010 = 4). - reset position tracking, position (p2720.2 = 1). - deselect encoder commissioning (p0010 = 0). Then acknowledge the fault and, if necessary, re-adjust the absolute encoder (p2507).		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F07447</b>	<b>Load gear: Position tracking, maximum actual value exceeded</b>		
<b>Message value:</b>	Component number: %1, encoder data set: %2, drive data set: %3		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	When the position tracking of the load gear is configured, the drive/encoder (motor encoder) identifies a maximum possible absolute position actual value (r2723) that can no longer be represented within 32 bits. Maximum value: $p0408 * p2721 * 2^{p0419}$ Fault value (r0949, interpret hexadecimal): ccbbaa hex aa = encoder data set bb = component number cc = drive data set See also: p0408 (Rotary encoder pulse number), p0419 (Fine resolution absolute value Gx_XIST2 (in bits)), p2721 (Load gear rotary absolute encoder revolutions virtual)		
<b>Remedy:</b>	- reduce the fine resolution (p0419). - reduce the multiturn resolution (p2721). See also: p0419 (Fine resolution absolute value Gx_XIST2 (in bits)), p2721 (Load gear rotary absolute encoder revolutions virtual)		

---

<b>F07448 (A)</b>	<b>Load gear: Position tracking, linear axis has exceeded the maximum range</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF1 (NONE, OFF2, OFF3) Infeed: NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	For a configured linear axis/no modulo axis, the currently effective motor encoder (encoder 1) has exceeded the maximum possible traversing range. For the configured linear axis, the maximum traversing range is defined to be 64x (+/- 32x) of p0421. It should be read in p2721 and interpreted as the number of load revolutions. Note: Only the motor encoder in the currently effective drive data set is monitored here. The actual effective drive data set is displayed in x = r0051 and the corresponding motor encoder is specified in in p0187[x].		

**Remedy:** The fault should be resolved as follows:  
 - select encoder commissioning (p0010 = 4).  
 - reset position tracking, position (p2720.2 = 1).  
 - deselect encoder commissioning (p0010 = 0).  
 The fault should then be acknowledged and the absolute encoder adjusted.

Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F07449 (A) Load gear: Position tracking actual position outside tolerance window**

**Message value:** %1  
**Message class:** Application/technological function faulted (17)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** Vector: OFF1 (NONE, OFF2, OFF3)  
 Infeed: NONE  
**Acknowledge:** IMMEDIATELY  
**Cause:** When switched off, the currently effective motor encoder was moved through a distance greater than was parameterized in the tolerance window. It is possible that there is no longer any reference between the mechanical system and encoder.  
 Note:  
 Only the motor encoder in the currently effective drive data set is monitored here. The actual effective drive data set is displayed in x = r0051 and the corresponding motor encoder is specified in in p0187[x].  
 Fault value (r0949, interpret decimal):  
 Deviation (difference) to the last encoder position in increments of the absolute value after the measuring gear - if one is being used. The sign designates the traversing direction.  
 Note:  
 The deviation (difference) found is also displayed in r2724.  
 See also: p2722 (Load gear position tracking tolerance window), r2724 (Load gear position difference)

**Remedy:** Reset the position tracking as follows:  
 - select encoder commissioning (p0010 = 4).  
 - reset position tracking, position (p2720.2 = 1).  
 - deselect encoder commissioning (p0010 = 0).  
 The fault should then be acknowledged and, if necessary, the absolute encoder adjusted (p2507).  
 See also: p0010

Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F07450 (A) LR: Standstill monitoring has responded**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF1 (OFF2, OFF3)  
**Acknowledge:** IMMEDIATELY  
**Cause:** After the standstill monitoring time (p2543) expired, the drive left the standstill window (p2542).  
 - position actual value inversion incorrectly set (p0410).  
 - standstill window set too small (p2542).  
 - standstill monitoring time set too low (p2543).  
 - position loop gain too low (p2538).  
 - position loop gain too high (instability/oscillation, p2538).  
 - mechanical overload.  
 - Connecting cable, motor/drive converter incorrect (phase missing, interchanged).  
 - when selecting motor identification, select tracking mode (BI: p2655[0] = 1 signal).  
 - when selecting function generator, select tracking mode (BI: p2655[0] = 1 signal) and deactivate position control (BI:p2550 = 0 signal).

**Remedy:** Check the causes and resolve.

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon A: NONE  
Acknowl. upon A: NONE

---

**F07451 (A) LR: Position monitoring has responded**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF1 (OFF2, OFF3)  
**Acknowledge:** IMMEDIATELY  
**Cause:** When the position monitoring time (p2545) expired, the drive had still not reached the positioning window (p2544).  
- positioning window parameterized too small (p2544).  
- position monitoring time parameterized too short (p2545).  
- position loop gain too low (p2538).  
- position loop gain too high (instability/oscillation, p2538).  
- drive mechanically locked.  
**Remedy:** Check the causes and resolve.  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

**F07452 (A) LR: Following error too high**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF1 (OFF2, OFF3)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The difference between the position setpoint position actual value (following error dynamic model, r2563) is higher than the tolerance (p2546).  
- the drive torque or accelerating capacity exceeded.  
- position measuring system fault.  
- encoder cable interrupted.  
- position control sense incorrect.  
- mechanical system locked.  
- excessively high traversing velocity or excessively high position reference value (setpoint) differences  
**Remedy:** Check the causes and resolve.  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

**F07453 LR: Position actual value preprocessing error**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF1 (OFF2, OFF3)  
**Acknowledge:** IMMEDIATELY  
**Cause:** An error has occurred during the position actual value preprocessing.  
**Remedy:** Check the encoder for the position actual value preprocessing.

<b>A07454</b>	<b>LR: Position actual value preprocessing does not have a valid encoder</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	One of the following problems has occurred with the position actual value preprocessing: - an encoder is not assigned for the position actual value preprocessing (p2502 = 0). - an encoder is assigned, but no encoder data set (p0187 = 99 or p0188 = 99 or p0189 = 99). - an encoder an an encoder data set have been assigned, however, the encoder data set does not contain any encoder data (p0400 = 0) or invalid data (e.g. p0408 = 0).
<b>Remedy:</b>	Check the drive data sets, encoder data sets and encoder assignment. See also: p0187 (Encoder 1 encoder data set number), p0188 (Encoder 2 encoder data set number), p0189 (Encoder 3 encoder data set number), p0400 (Encoder type selection)
<b>A07455</b>	<b>EPOS: Maximum velocity limited</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The maximum velocity (p2571) is too high to correctly calculate the modulo correction. Within the sampling time for positioning (p0115[5]), with the maximum velocity, a maximum of the half modulo length must be moved through. p2571 was limited to this value.
<b>Remedy:</b>	- reduce the maximum velocity (p2571). - increase the sampling time for positioning (p0115[5]).
<b>A07456</b>	<b>EPOS: Setpoint velocity limited</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The actual setpoint velocity is greater than the parameterized maximum velocity (p2571) and is therefore limited.
<b>Remedy:</b>	- check the entered setpoint velocity. - reduce the velocity override (CI: p2646). - increase the maximum velocity (p2571). - check the signal source for the externally limited velocity (CI: p2594).
<b>A07457</b>	<b>EPOS: Combination of input signals illegal</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	An illegal combination of input signals that are simultaneously set was identified. Alarm value (r2124, interpret decimal): 0: Jog 1 and jog 2 (p2589, p2590). 1: Jog 1 or jog 2 and direct setpoint input/MDI (p2589, p2590, p2647). 2: Jog 1 or jog 2 and start referencing (p2589, p2590, p2595). 3: Jog 1 or jog 2 and activate traversing task (p2589, p2590, p2631).

## 4 Faults and alarms

### 4.2 List of faults and alarms

- 4: Direct setpoint input/MDI and starting referencing (p2647, p2595).
- 5: Direct setpoint input/MDI and activate traversing task (p2647, p2631).
- 6: Start referencing and activate traversing task (p2595, p2631).

**Remedy:** Check the appropriate input signals and correct.

---

**F07458 EPOS: Reference cam not found**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** OFF1 (OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** After starting the search for reference, the axis moved through the maximum permissible distance to search for the reference cam without actually finding the reference cam.

**Remedy:**

- check the "reference cam" binector input (BI: p2612).
- check the maximum permissible distance to the reference cam (p2606).
- if axis does not have any reference cam, then set p2607 to 0.

---

**F07459 EPOS: No zero mark**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** OFF1 (OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** After leaving the reference cam, the axis has traversed the maximum permissible distance between the reference cam and zero mark without finding the zero mark.

**Remedy:**

- check the encoder regarding the zero mark
- check the maximum permissible distance between the reference cam and zero mark (p2609).
- use an external encoder zero mark (equivalent zero mark) (p0495).

See also: p0495 (Equivalent zero mark input terminal)

---

**F07460 EPOS: End of reference cam not found**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** OFF1 (OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** During the search for reference, when the axis reached the zero mark it also reached the end of the traversing range without detecting an edge at the binector input "reference cam" (BI: p2612).

Maximum traversing range: -2147483648 [LU] ... -2147483647 [LU]

**Remedy:**

- check the "reference cam" binector input (BI: p2612).
- repeat the search for reference.

---

**A07461 EPOS: Reference point not set**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** When starting a traversing block/direct setpoint input, a reference point is not set (r2684.11 = 0).

**Remedy:** Reference the system (search for reference, flying referencing, set reference point).

<b>A07462</b>	<b>EPOS: Selected traversing block number does not exist</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A traversing block selected via binector input p2625 ... p2630 was started via binector input p2631 = 0/1 edge "Activate traversing task". - the number of the started traversing block is not contained in p2616[0...n]. - the started traversing block is suppressed. Alarm value (r2124, interpret decimal): Number of the selected traversing block that is also not available.
<b>Remedy:</b>	- correct the traversing program. - select an available traversing block number.
<b>A07463 (F)</b>	<b>EPOS: External block change not requested in the traversing block</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	For a traversing block with the block change enable CONTINUE_EXTERNAL_ALARM, the external block change was not requested. Alarm value (r2124, interpret decimal): Number of the traversing block.
<b>Remedy:</b>	Resolve the reason as to why the edge is missing at binector input (BI: p2632).
Reaction upon F:	OFF1
Acknowl. upon F:	IMMEDIATELY
<b>F07464</b>	<b>EPOS: Traversing block is inconsistent</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The traversing block does not contain valid information. Alarm value (r2124, interpret decimal): Number of the traversing block with invalid information.
<b>Remedy:</b>	Check the traversing block and where relevant, take into consideration alarms that are present.
<b>A07465</b>	<b>EPOS: Traversing block does not have a subsequent block</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	There is no subsequent block in the traversing block. Alarm value (r2124, interpret decimal): Number of the traversing block with the missing subsequent block.

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:**

- parameterize this traversing block with the block change enable END.
- parameterize additional traversing blocks with a higher block number and for the last block, using the block change enable END.

---

#### **A07466 EPOS: Traversing block number assigned a multiple number of times**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The same traversing block number was assigned a multiple number of times.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block that was assigned a multiple number of times.  
**Remedy:** Correct the traversing blocks.

---

#### **A07467 EPOS: Traversing block has illegal task parameters**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The task parameter in the traversing block contains an illegal value.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block with an illegal task parameter.  
**Remedy:** Correct the task parameter in the traversing block.

---

#### **A07468 EPOS: Traversing block jump destination does not exist**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** In a traversing block, a jump was programmed to a non-existent block.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block with a jump destination that does not exist.  
**Remedy:**

- correct the traversing block.
- add the missing traversing block.

---

#### **A07469 EPOS: Traversing block < target position < software limit switch minus**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** In the traversing block the specified absolute target position lies outside the range limited by the software limit switch minus.  
Alarm value (r2124, interpret decimal):  
Number of the traversing block with illegal target position.  
**Remedy:**

- correct the traversing block.
- change software limit switch minus (CI: p2578, p2580).

<b>A07470</b>	<b>EPOS: Traversing block&gt; target position &gt; software limit switch plus</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	In the traversing block the specified absolute target position lies outside the range limited by the software limit switch plus. Alarm value (r2124, interpret decimal): Number of the traversing block with illegal target position.
<b>Remedy:</b>	- correct the traversing block. - change software limit switch plus (CI: p2579, p2581).
<b>A07471</b>	<b>EPOS: Traversing block target position outside the modulo range</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	In the traversing block the target position lies outside the modulo range. Alarm value (r2124, interpret decimal): Number of the traversing block with illegal target position.
<b>Remedy:</b>	- in the traversing block, correct the target position. - change the modulo range (p2576).
<b>A07472</b>	<b>EPOS: Traversing block ABS_POS/ABS_NEG not possible</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	In the traversing block the positioning mode ABS_POS or ABS_NEG were parameterized with the modulo correction not activated. Alarm value (r2124, interpret decimal): Number of the traversing block with the illegal positioning mode.
<b>Remedy:</b>	Correct the traversing block.
<b>A07473 (F)</b>	<b>EPOS: Beginning of traversing range reached</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	When traversing, the axis has moved to the traversing range limit.
<b>Remedy:</b>	Move away in the positive direction.
<b>Reaction upon F:</b>	OFF1 (OFF2, OFF3)
<b>Acknowl. upon F:</b>	IMMEDIATELY

<b>A07474 (F)</b>	<b>EPOS: End of traversing range reached</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	When traversing, the axis has moved to the traversing range limit.
<b>Remedy:</b>	Move away in the negative direction.
Reaction upon F:	OFF1 (OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY
<b>F07475 (A)</b>	<b>EPOS: Target position &lt; start of traversing range</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	OFF1 (OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The target position for relative traversing lies outside the traversing range.
<b>Remedy:</b>	Correct the target position.
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>F07476 (A)</b>	<b>EPOS: Target position &gt; end of the traversing range</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	OFF1 (OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The target position for relative traversing lies outside the traversing range.
<b>Remedy:</b>	Correct the target position.
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>A07477 (F)</b>	<b>EPOS: Target position &lt; software limit switch minus</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	In the actual traversing operation, the target position is less than the software limit switch minus.
<b>Remedy:</b>	- correct the target position. - change software limit switch minus (CI: p2578, p2580).
Reaction upon F:	OFF1 (OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY

---

**A07478 (F) EPOS: Target position > software limit switch plus**

**Message value:** -

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** In the actual traversing operation, the target position is greater than the software limit switch plus.

**Remedy:**

- correct the target position.
- change software limit switch plus (CI: p2579, p2581).

Reaction upon F: OFF1 (OFF2, OFF3)

Acknowl. upon F: IMMEDIATELY

---

**A07479 EPOS: Software limit switch minus reached**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The axis is at the position of the software limit switch minus. An active traversing block was interrupted.

**Remedy:**

- correct the target position.
- change software limit switch minus (CI: p2578, p2580).

---

**A07480 EPOS: Software limit switch plus reached**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The axis is at the position of the software limit switch plus. An active traversing block was interrupted.

**Remedy:**

- correct the target position.
- change software limit switch plus (CI: p2579, p2581).

---

**F07481 (A) EPOS: Axis position < software limit switch minus**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** OFF1 (OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** The actual position of the axis is less than the position of the software limit switch minus.

**Remedy:**

- correct the target position.
- change software limit switch minus (CI: p2578, p2580).

Reaction upon A: NONE

Acknowl. upon A: NONE

---

<b>F07482 (A)</b>	<b>EPOS: Axis position &gt; software limit switch plus</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (OFF2, OFF3)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The actual position of the axis is greater than the position of the software limit switch plus.		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- correct the target position.</li> <li>- change software limit switch plus (CI: p2579, p2581).</li> </ul>		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>A07483</b>	<b>EPOS: Travel to fixed stop clamping torque not reached</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The fixed stop in the traversing block was reached without the clamping torque/clamping force having been achieved.		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the maximum torque-generating current (r1533).</li> <li>- check the torque limits (p1520, p1521).</li> <li>- check the power limits (p1530, p1531).</li> <li>- check the BICO interconnections of the torque limits (p1522, p1523, p1528, p1529).</li> </ul>		

---

<b>F07484</b>	<b>EPOS: Fixed stop outside the monitoring window</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF3 (OFF1, OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	In the "fixed stop reached" state, the axis has moved outside the defined monitoring window (p2635).		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the monitoring window (p2635).</li> <li>- check the mechanical system.</li> </ul>		

---

<b>F07485 (A)</b>	<b>EPOS: Fixed stop not reached</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (OFF2, OFF3)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	In a traversing block with the task FIXED STOP, the end position was reached without detecting a fixed stop.		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the traversing block and locate the target position further into the workpiece.</li> <li>- check the "fixed stop reached" control signal (p2637).</li> <li>- if required, reduce the maximum following error window to detect the fixed stop (p2634).</li> </ul>		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

<b>A07486</b>	<b>EPOS: Intermediate stop missing</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	In the modes "traversing blocks" or "direct setpoint input/MDI" at the start of motion, the binector input "no intermediate stop/intermediate stop" (BI: p2640) did not have a 1 signal.
<b>Remedy:</b>	Connect a 1 signal to the binector input "no intermediate stop/intermediate stop" (BI: p2640) and re-start motion.
<b>A07487</b>	<b>EPOS: Reject traversing task missing</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	In the modes "traversing blocks" or "direct setpoint input/MDI" at the start of motion, the binector input "do not reject traversing task/reject traversing task" (BI: p2641) does not have a 1 signal.
<b>Remedy:</b>	Connect a 1 signal to the binector input "do not reject traversing task/reject traversing task" (BI: p2641) and restart motion.
<b>F07488</b>	<b>EPOS: Relative positioning not possible</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	OFF1 (OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	In the mode "direct setpoint input/MDI", for continuous transfer (p2649 = 1) relative positioning was selected (BI: p2648 = 0 signal).
<b>Remedy:</b>	Check the control.
<b>A07489</b>	<b>EPOS: Reference point correction outside the window</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	For the function "flying referencing" the difference between the measured position at the measuring probe and the reference point coordinate lies outside the parameterized window.
<b>Remedy:</b>	- check the mechanical system. - check the parameterization of the window (p2602).
<b>F07490 (N)</b>	<b>EPOS: Enable signal withdrawn while traversing</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	OFF1 (OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	- for a standard assignment, another fault may have occurred as a result of withdrawing the enable signals. - the drive is in the "switching-on inhibited" state (for a standard assignment).

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:** - set the enable signals or check the cause of the fault that first occurred and then result (for a standard assignment).  
- check the assignment to enable the basic positioning function.

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **F07491 (A) EPOS: STOP cam minus reached**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** OFF3

**Acknowledge:** IMMEDIATELY

**Cause:** A 0 signal was detected at binector input BI: p2569, i.e. the STOP cam minus was reached.  
For a positive traversing direction, the STOP cam minus was reached - i.e. the wiring of the STOP cam is incorrect.

**Remedy:** - leave the STOP cam minus in the positive traversing direction and return the axis to the valid traversing range.  
- check the wiring of the STOP cam.

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F07492 (A) EPOS: STOP cam plus reached**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** OFF3

**Acknowledge:** IMMEDIATELY

**Cause:** A 0 signal was detected at binector input BI: p2570, i.e. the STOP cam plus was reached.  
For a negative traversing direction, the STOP cam plus was reached - i.e. the wiring of the STOP cam is incorrect.

**Remedy:** - leave the STOP cam plus in the negative traversing direction and return the axis to the valid traversing range.  
- check the wiring of the STOP cam.

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F07493 LR: Overflow of the value range for position actual value**

**Message value:** %1

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** OFF1 (OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** The value range (-2147483648 ... 2147483647) for the position actual value representation was exceeded.  
When the overflow occurs, the "referenced" or "adjustment absolute measuring system" status is reset.  
Fault value (r0949, interpret decimal):  
1: The position actual value (r2521) has exceeded the value range.  
2: The encoder position actual value Gn\_XIST2 (r0483) or the absolute value after the load gear (r2723) has exceeded the value range.  
3: The maximum encoder value times the factor to convert the absolute position (r0483 and/or r2723) from increments to length units (LU) has exceeded the value range for displaying the position actual value.

Note:

For a linear encoder, the following must be maintained:

-  $p0407 * p2503 / (2^{p0418} * 10^7) < 1$

-  $p0407 * p2503 / (2^{p0419} * 10^7) < 1$

**Remedy:** If required, reduce the traversing range or position resolution (p2506).

Increase the fine resolution of absolute position actual value (p0419).

Note for fault value = 3:

If the value for the maximum possible absolute position (LU) is greater than 4294967296, then it is not possible to make an adjustment due to an overflow.

For rotary encoders, the maximum possible absolute position (LU) is calculated as follows:

1. Motor encoder without position tracking  
 $p2506 * p0433 * p2505 / (p0432 * p2504)$   
 $p2506 * p0433 * p2505 * p0421 / (p0432 * p2504)$  for multiturn encoders
2. Motor encoder with position tracking for measuring gear  
 $p2506 * p0412 * p2505 / p2504$
3. Motor encoder with position tracking for load gear  
 $p2506 * p2721 * p0433 / p0432$
4. Motor encoder with position tracking for load and measuring gear  
 $p2506 * p2721$
5. Direct encoder without position tracking  
 $p2506 * p0433 / p0432$   
 $p2506 * p0433 * p0421 / p0432$  for multiturn encoders
6. Direct encoder with position tracking for measuring gear  
 $p2506 * p0412$

<b>F07494</b>	<b>LR: Drive Data Set changeover in operation</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A Drive Data Set changeover (DDS) with a change of the mechanical relationships (p2503 ... 2506), direction of rotation (p1821) or the encoder assignment (p2502) was requested in operation. Note: DDS: Drive Data Set
<b>Remedy:</b>	To changeover the drive data set, initially, exit the "operation" mode.
<b>A07495 (F, N)</b>	<b>LR: Reference function interrupted</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	An activated reference function (reference mark search or measuring probe evaluation) was interrupted. Possible causes: - an encoder fault has occurred (Gn_ZSW.15 = 1). - position actual value was set during an activated reference function. - simultaneously activate reference mark search and measuring probe evaluation (BI: p2508 and BI: p2509 = 1 signal). - activated reference function (reference mark search or measuring probe evaluation) was deactivated (BI: p2508 and BI: p2509 = 0 signal). - the input terminal for the measuring probe is not set.
<b>Remedy:</b>	- check the causes and resolve. - reset the control (BI: p2508 and BI: p2509 = 0 signal) and activate the requested function. - set the input terminal for the measuring probe (p0488, p0489 or p2517, p2518).
<b>Reaction upon F:</b>	OFF1 (OFF2, OFF3)
<b>Acknowl. upon F:</b>	IMMEDIATELY
<b>Reaction upon N:</b>	NONE
<b>Acknowl. upon N:</b>	NONE

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>A07496</b>	<b>EPOS: Enable not possible</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	It is not possible to enable the basic positioner because at least one signal is missing. Alarm value (r2124, interpret decimal): 1: EPOS enable missing (BI: p2656). 2: Position actual value, valid feedback signal missing (BI: p2658).		
<b>Remedy:</b>	Check the appropriate binector inputs and signals.		

---

<b>A07497 (N)</b>	<b>LR: Position setting value activated</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The position actual value is set to the value received via CI: p2515 while BI: p2514 = 1 signal. A possible system deviation cannot be corrected.		
<b>Remedy:</b>	Not necessary. The alarm automatically disappears with BI: p2514 = 0 signal.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A07498 (F)</b>	<b>LR: Measuring probe evaluation not possible</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	When evaluating the measuring probe, an error occurred. Alarm value (r2124, interpret decimal): 6: The input terminal for the measuring probe is not set. 4098: Error when initializing the measuring probe. 4100: The measuring pulse frequency is too high. > 50000: The measuring clock cycle is not a multiple integer of the position controller clock cycle.		
<b>Remedy:</b>	Deactivate the measuring probe evaluation (BI: p2509 = 0 signal). For alarm value = 6: Set the input terminal for the measuring probe (p0488, p0489 or p2517, p2518). For alarm value = 4098: Check the Control Unit hardware. For alarm value = 4100: Reduce the frequency of the measuring pulses at the measuring probe. For alarm value > 50000: Set the clock cycle ratio of the measuring clock cycle to the position controller clock cycle to an integer multiple.		

To do this, the currently effective measuring clock cycle can be determined from the alarm value as follows:

$T_{meas} [125 \mu s] = \text{alarm value} - 50000$

With PROFIBUS, the measuring clock cycle corresponds to the PROFIBUS clock cycle (r2064[1]).

Without PROFIBUS, the measuring clock cycle is an internal cycle time that cannot be influenced.

Reaction upon F: OFF1  
Acknowl. upon F: IMMEDIATELY

---

**F07499 (A) EPOS: Reversing cam approached with the incorrect traversing direction**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF3  
**Acknowledge:** IMMEDIATELY  
**Cause:** The reversing cam MINUS was approached in the positive traversing direction or the reversing cam PLUS was approached in the negative traversing direction.  
**Remedy:** - check the wiring of the reversing cam (BI: p2613, BI: p2614).  
 - check the traversing direction to approach the reversing cam.  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

**F07500 Drive: Power unit data set PDS not configured**

**Message value:** Drive data set: %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY  
**Cause:** Only for controlled line supply infeed/regenerative feedback units:  
 The power unit data set was not configured - this means that a data set number was not entered into the drive data set.  
 Fault value (r0949, interpret decimal):  
 Drive data set number of p0185.  
**Remedy:** The index of the power unit data set associated with the drive data set should be entered into p0185.

---

**F07501 Drive: Motor Data Set MDS not configured**

**Message value:** Drive data set: %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** All objects  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** Only for power units:  
 The motor data set was not configured - this means that a data set number was not entered into the associated drive data set.  
 Fault value (r0949, interpret decimal):  
 The fault value includes the drive data set number of p0186.  
**Remedy:** The index of the motor data set associated with the drive data set should be entered into p0186.  
 See also: p0186 (Motor Data Sets (MDS) number)

---

**F07502 Drive: Encoder Data Set EDS not configured**

**Message value:** Drive data set: %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None **Propagation:** GLOBAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY

**Cause:** Only for power units:  
 The encoder data set was not configured - this means that a data set number was not entered into the associated drive data set.  
 Fault value (r0949, interpret decimal):  
 The fault value includes the drive data set number of p0187, p0188 and p0189.  
 The fault value is increased by 100 \* encoder number (e.g. for p0189: Fault value 3xx with xx = data set number).

**Remedy:** The index of the encoder data set associated with the drive data set should be entered into p0187 (1st encoder), p0188 (2nd encoder) and p0189 (3rd encoder).

---

**F07503 EPOS: STOP cam approached with the incorrect traversing direction**

**Message value:** %1

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY

**Cause:** The STOP cam MINUS was approached in the positive traversing direction or the STOP cam PLUS was approached in the negative traversing direction.

**Remedy:** - check the wiring of the STOP cam (BI: p2569, BI: p2570).  
 - check the traversing direction to approach the STOP cam.

---

**A07504 Drive: Motor data set is not assigned to a drive data set**

**Message value:** %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** A motor data set is not assigned to a drive object.  
 All of the existing motor data sets in the drive data sets must be assigned using the MDS number (p0186[0...n]).  
 There must be at least as many drive data sets as motor data sets.  
 Alarm value (r2124, interpret decimal):  
 Number of the motor data set that has not been assigned.

**Remedy:** In the drive data sets, assign the non-assigned motor data set using the MDS number (p0186[0...n]).  
 - check whether all of the motor data sets are assigned to drive data sets.  
 - if required, delete superfluous motor data sets.  
 - if required, set up new drive data sets and assign to the corresponding motor data sets.  
 See also: p0186 (Motor Data Sets (MDS) number)

---

<b>A07505</b>	<b>EPOS: Task fixed stop not possible in the U/f/SLVC mode</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	In the U/f/SLVC mode, an attempt was made to execute a traversing block with the "fixed stop" task. This is not possible. Alarm value (r2124, interpret decimal): Number of the traversing block with an illegal task parameter.
<b>Remedy:</b>	- check the traversing block and change the task. - change the open-loop/closed-loop control mode (p1300). See also: p1300 (Open-loop/closed-loop control operating mode)

---

<b>A07506</b>	<b>EPOS: check BICO interconnection between EPOS and position controller</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The BICO interconnections to transfer setpoints between EPOS and LR (position control) have not been set, although the BICO interconnections to transfer the fine resolutions have been set.
<b>Remedy:</b>	1. Disconnect BICO interconnections for the fine resolutions (CI: p2694 = 0, CI: p2695 = 0). 2. Set BICO interconnections for the setpoints (CI: p2530 = r2665, CI: p2531 = r2666). 3. Set BICO interconnections for the fine resolutions (CI: p2694 = r2696, CI: p2695 = r2697).

---

<b>F07509</b>	<b>Drive: Component assignment missing</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A Drive Data Set (DDS) is assigned to a Motor Data Set (MDS) or Encoder Data Set (EDS) that does not have a component number. Fault value (r0949, interpret decimal): nnmmmxyyy nn: Number of the MDS/EDS. mmm: Parameter number of the missing component number. xx: Number of the DDS that is assigned to the MDS/EDS. yyy: Parameter number that references the MDS/EDS. Example: p0186[7] = 5: DDS 7 is assigned MDS 5. p0131[5] = 0: There is no component number set in MDS 5. Alarm value = 0513107186
<b>Remedy:</b>	In the drive data sets, no longer assign MDS/EDS using p0186, p0187, p0188, p0189 or set a valid component number. See also: p0131, p0141, p0142, p0186, p0187, p0188, p0189

---

<b>F07510</b>	<b>Drive: Identical encoder in the drive data set</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	More than one encoder with identical component number is assigned to a single drive data set. In one drive data set, it is not permissible that identical encoders are operated together. Fault value (r0949, interpret decimal): 1000 * first identical encoder + 100 * second identical encoder + drive data set. Example: Fault value = 1203 means: In drive data set 3, the first (p0187[3]) and second encoder (p0188[3]) are identical.
<b>Remedy:</b>	Assign the drive data set to different encoders. See also: p0141 (Encoder interface (Sensor Module) component number), p0187 (Encoder 1 encoder data set number), p0188 (Encoder 2 encoder data set number), p0189 (Encoder 3 encoder data set number)

---

<b>F07511</b>	<b>Drive: Encoder used a multiple number of times</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Each encoder may only be assigned to one drive and within a drive must - in each drive data set - either always be encoder 1, always encoder 2 or always encoder 3. This unique assignment has been violated. Fault value (r0949, interpret decimal): The two parameters in coded form, that refer to the same component number. First parameter: Index: First and second decimal place (99 for EDS, not assigned DDS) Parameter number: Third decimal place (1 for p0187, 2 for p0188, 3 for p0189, 4 for EDS not assigned DDS) Drive number: Fourth and fifth decimal place Second parameter: Index: Sixth and seventh decimal place (99 for EDS, not assigned DDS) Parameter number: Eighth decimal place (1 for p0187, 2 for p0188, 3 for p0189, 4 for EDS, not assigned DDS) Drive number: Ninth and tenth decimal place See also: p0141 (Encoder interface (Sensor Module) component number)
<b>Remedy:</b>	Correct the double use of a component number using the two parameters coded in the fault value.

---

<b>F07512</b>	<b>Drive: Encoder data set changeover cannot be parameterized</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Using p0141, a changeover of the encoder data set is prepared that is illegal. In this firmware release, an encoder data set changeover is only permitted for the components in the actual topology. Fault value (r0949, interpret decimal): Incorrect EDS data set number. See also: p0187 (Encoder 1 encoder data set number), p0188 (Encoder 2 encoder data set number), p0189 (Encoder 3 encoder data set number)
<b>Remedy:</b>	Every encoder data set must be assigned its own dedicated DRIVE-CLiQ socket. The component numbers of the encoder interfaces (p0141) must have different values within a drive object.

The following must apply:  
p0141[0] not equal to p0141[1] not equal to ... not equal to p0141[n]

---

<b>A07514 (N)</b>	<b>Drive: Data structure does not correspond to the interface module</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>The interface mode "SIMODRIVE 611 universal" was set (p2038 = 1) and the data structure does not correspond to this mode.</p> <p>The following settings are possible, depending on the number of data sets:</p> <p>Number of DDS/MDS (p0180/p0130): p0186</p> <p>1/1: p0186[0] = 0</p> <p>2/2: p0186[0] = 0, p0186[1] = 1</p> <p>4/4: p0186[0] = 0, p0186[1] = 1, p0186[2] = 2, p0186[3] = 3</p> <p>8/8: p0186[0] = 0, p0186[1] = 1, p0186[2] = 2 ... p0186[7] = 7</p> <p>16/16: p0186[0] = 0, p0186[1] = 1, p0186[2] = 2 ... p0186[15] = 15</p> <p>32/32: p0186[0] = 0, p0186[1] = 1, p0186[2] = 2 ... p0186[31] = 31</p> <p>2/1: p0186[0, 1] = 0</p> <p>4/2: p0186[0, 1] = 0, p0186[1, 2] = 1</p> <p>8/4: p0186[0, 1] = 0, p0186[1, 2] = 1, p0186[3, 4] = 2, p0186[5, 6] = 3</p> <p>16/8: p0186[0, 1] = 0, p0186[1, 2] = 1, p0186[3, 4] = 2 ... p0186[14, 15] = 7</p> <p>32/16: p0186[0, 1] = 0, p0186[1, 2] = 1, p0186[3, 4] = 2 ... p0186[30, 31] = 15</p> <p>4/1: p0186[0, 1, 2, 3] = 0</p> <p>8/2: p0186[0, 1, 2, 3] = 0, p0186[4, 5, 6, 7] = 1</p> <p>16/4: p0186[0, 1, 2, 3] = 0, p0186[4, 5, 6, 7] = 1, p0186[8, 9, 10, 11] = 2, p0186[12, 13, 14, 15] = 3</p> <p>32/8: p0186[0, 1, 2, 3] = 0, p0186[4, 5, 6, 7] = 1, p0186[8, 9, 10, 11] = 2 ... p0186[28, 29, 30, 31] = 7</p> <p>8/1: p0186[0...7] = 0</p> <p>16/2: p0186[0...7] = 0, p0186[8...15] = 1</p> <p>32/4: p0186[0...7] = 0, p0186[8...15] = 1, p0186[16...23] = 2, p0186[24...31] = 3</p> <p>16/1: p0186[0...15] = 0</p> <p>32/2: p0186[0...15] = 0, p0186[16...31] = 1</p> <p>32/1: p0186[0...31] = 0</p> <p>9/2: p0186[0...7] = 0, p0186[8] = 1</p> <p>10/2: p0186[0...7] = 0, p0186[8, 9] = 1</p> <p>12/2: p0186[0...7] = 0, p0186[8...11] = 1</p> <p>See also: p0180 (Number of Drive Data Sets (DDS)), p0186 (Motor Data Sets (MDS) number), p2038 (IF1 PROFIdrive STW/ZSW interface mode)</p>		
<b>Remedy:</b>	<p>- check the data structure according to the possible settings mentioned in the cause.</p> <p>- check the interface mode (p2038).</p>		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>F07515</b>	<b>Drive: Power unit and motor incorrectly connected</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	<p>A power unit (via PDS) was assigned to a motor (via MDS) in a drive data set that is not connected in the target topology. It is possible that a motor has not been assigned to the power unit (p0131).</p> <p>Fault value (r0949, interpret decimal):</p> <p>Number of the incorrectly parameterized drive data set.</p>		

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:**

- assign the drive data set to a combination of motor and power unit permitted by the target topology.
- adapt the target topology.
- if required, for a missing motor, recreate the component (drive Wizard).

See also: p0121 (Power unit component number), p0131 (Motor component number), p0186 (Motor Data Sets (MDS) number)

---

**F07516 Drive: Re-commission the data set**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY  
**Cause:** The assignment between the drive data set and motor data set (p0186) or between the drive data set and the encoder data set was modified (p0187). This is the reason that the drive data set must re-commissioned.  
Fault value (r0949, interpret decimal):  
Drive data set to be re-commissioned.

**Remedy:** Commission the drive data set specified in the fault value (r0949).

---

**F07517 Drive: Encoder data set changeover incorrectly parameterized**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** An MDS cannot have different motor encoders in two different DDS.  
The following parameterization therefore results results in an error:  
p0186[0] = 0, p0187[0] = 0  
p0186[0] = 0, p0187[0] = 1  
Fault value (r0949, interpret decimal):  
The lower 16 bits indicate the first DDS and the upper 16 bits indicate the second DDS.

**Remedy:** If you wish to operate a motor once with one motor encoder and then another time with the other motor encoder, then you must set up two different MDSs, in which the motor data are the same.  
Example:  
p0186[0] = 0, p0187[0] = 0  
p0186[0] = 1, p0187[0] = 1

---

**F07518 Drive: Motor data set changeover incorrectly parameterized**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY  
**Cause:** The system has identified that two motor data sets were incorrectly parameterized.  
Parameter r0313 (calculated from p0314, p0310, p0311), r0315 and p1982 may only have different values if the motor data sets are assigned different motors. p0827 is used to assign the motors and/contactors.  
It is not possible to toggle between motor data sets.  
Fault value (r0949, interpret hexadecimal):  
xxxxyyyy:  
xxxx: First DDS with assigned MDS, yyyy: Second DDS with assigned MDS

**Remedy:** Correct the parameterization of the motor data sets.



## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>A07531</b>	<b>Drive: Command Data Set CDS not present</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The selected command data set is not available (p0836 > p0170). The command data set was not changed over. See also: p0810 (Command data set selection CDS bit 0), p0811 (Command data set selection CDS bit 1), r0836 (Command Data Set CDS selected)		
<b>Remedy:</b>	- select the existing command data set. - set up additional command data sets.		

---

<b>A07541</b>	<b>Drive: Data set changeover not possible</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The selected drive data set changeover and the assigned motor changeover are not possible and are not carried out. For synchronous motors, the motor contactor may only be switched for actual speeds less than the speed at the start of field weakening (r0063 < p0348). See also: r0063 (Speed actual value)		
<b>Remedy:</b>	Reduce the speed to below the speed at the start of field weakening (r0063 < p0348).		

---

<b>A07550 (F, N)</b>	<b>Drive: Not possible to reset encoder parameters</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	When carrying out a factory setting (e.g. using p0970 = 1), it was not possible to reset the encoder parameters. The encoder parameters are directly read out of the encoder via DRIVE-CLiQ. Alarm value (r2124, interpret decimal): Component number of the encoder involved.		
<b>Remedy:</b>	- repeat the operation. - check the DRIVE-CLiQ connection.		
Reaction upon F:	Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>F07551</b>	<b>Drive encoder: No commutation angle information</b>		
<b>Message value:</b>	Fault cause: %1, drive data set: %2		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 1	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (IASC/DCBRK)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The commutation angle information is missing. This means that synchronous motors cannot be controlled (closed-loop control) Fault value (r0949, interpret decimal): yyyyxxxx dec: yyyy = fault cause, xxxx = drive data set		

yyyy = 1 dec:  
The motor encoder used does not supply an absolute commutation angle.  
yyyy = 2 dec:  
The selected ratio of the measuring gear does not match the motor pole pair number.

**Remedy:**

For fault cause = 1:  
- check the encoder parameterization (p0404).  
- use an encoder with track C/D, EnDat interface of Hall sensors.  
- use an encoder with sinusoidal A/B track for which the motor pole pair number (r0313) multiplied by the gear ratio (p0432/p0433) is less than the encoder pulse number (p0408) – or is an integer multiple of the encoder pulse number (p0408).  
- activate the pole position identification routine (p1982 = 1) for motor encoders without absolute position information. Then, using an encoder adjustment (p1990), the angular commutation offset should be determined.  
For fault cause = 2:  
- the quotient of the pole pair number divided by the ratio of the measuring gear must be an integer number:  $(p0314 * p0433) / p0432$ .  
Note:  
For operation with track C/D, this quotient must be less than 8.  
See also: p0402 (Gearbox type selection), p0404 (Encoder configuration effective), p0432 (Gearbox factor encoder revolutions), p0433 (Gearbox factor motor/load revolutions)

**F07552 (A)**

**Drive encoder: Encoder configuration not supported**

**Message value:** Fault cause: %1, component number: %2, encoder data set: %3  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)  
 Infeed: OFF2 (NONE, OFF1)  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** The requested encoder configuration is not supported. Only bits may be requested in p0404 that are signaled as being supported by the encoder evaluation in r0456.  
 Fault value (r0949, interpret decimal):  
 ccccbbaa hex: cccc = fault cause, bb = component number, aa = encoder data set  
 cccc = 1: encoder sin/cos with absolute track (is supported by SME25).  
 cccc = 3: Squarewave encoder (this is supported by SMC30).  
 cccc = 4: sin/cos encoder (this is supported by SMC20, SMI20, SME20, SME25).  
 cccc = 10: DRIVE-CLiQ encoder (is supported by DQI).  
 cccc = 12: sin/cos encoder with reference mark (this is supported by SME20).  
 cccc = 15: Commutation with zero mark for separately excited synchronous motors with VECTORMV.  
 cccc = 23: Resolver (this is supported by SMC10, SMI10).  
 cccc = 65535: Other function (compare r0456 and p0404).  
 See also: p0404 (Encoder configuration effective), r0456 (Encoder configuration supported)  
**Remedy:**  
 - check the encoder parameterization (p0400, p0404).  
 - use the matching encoder evaluation (r0456).  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

<b>F07553 (A)</b>	<b>Drive encoder: Sensor Module configuration not supported</b>
<b>Message value:</b>	Encoder data set: %1, first incorrect bit: %2, incorrect parameter: %3
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	None <span style="float: right;"><b>Propagation:</b> GLOBAL</span>
<b>Reaction:</b>	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The Sensor Module does not support the requested configuration. For incorrect p0430 (cc = 0), the following applies: - in p0430 (requested functions), at least 1 bit was set that is not set in r0458 (supported functions) (exception: Bit 19, 28, 29, 30, 31). - p1982 > 0 (pole position identification requested), but r0458.16 = 0 (pole position identification not supported). For incorrect p0437 (cc = 1), the following applies: - in p0437 (requested functions), at least 1 bit was set that is not set in r0459 (supported functions). Fault value (r0949, interpret hexadecimal): ddccbbaa hex aa: encoder data set number bb: first incorrect bit cc: incorrect parameter cc = 0: incorrect parameter is p0430 cc = 1: incorrect parameter is p0437 cc = 2: incorrect parameter is r0459 dd: reserved (always 0)
<b>Remedy:</b>	- check the encoder parameterization (p0430, p0437). - check the pole position identification routine (p1982). - use the matching encoder evaluation (r0458, r0459). See also: p0430, p0437, r0458, r0459, p1982
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F07555 (A)</b>	<b>Drive encoder: Configuration position tracking</b>
<b>Message value:</b>	Component number: %1, encoder data set: %2, drive data set: %3, fault cause: %4
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1 <span style="float: right;"><b>Propagation:</b> GLOBAL</span>
<b>Reaction:</b>	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	For position tracking, the configuration is not supported. Position tracking can only be activated for absolute encoders. For linear axes, it is not possible to simultaneously activate the position tracking for load and measuring gears. Fault value (r0949, interpret hexadecimal): ddccbbaa hex aa = encoder data set bb = component number cc = drive data set dd = fault cause dd = 00 hex = 0 dec An absolute encoder is not being used. dd = 01 hex = 1 dec Position tracking cannot be activated because the memory of the internal NVRAM is not sufficient or a Control Unit does not have an NVRAM. dd = 02 hex = 2 dec For a linear axis, the position tracking was activated for the load and measuring gear.

dd = 03 hex = 3 dec

Position tracking cannot be activated because position tracking with another gear ratio, axis type or tolerance window has already been detected for this encoder data set.

dd = 04 hex = 4 dec

A linear encoder is being used.

See also: p0404 (Encoder configuration effective), p0411 (Measuring gear configuration)

**Remedy:**

For fault value 0:

- use an absolute encoder.

For fault value 1:

- use a Control Unit with sufficient NVRAM.

For fault value = 2, 4:

- if necessary, de-select the position tracking (p0411 for the measuring gear, p2720 for the load gear).

For fault value 3:

- Only activate position tracking of the load gear in the same encoder data set if the gear ratio (p2504, p2505), axis type (p2720.1) and tolerance window (p2722) are also the same. These parameters must be the same in all drive data sets, which use the same motor encoder (p187).

Reaction upon A: NONE

Acknowl. upon A: NONE

---

**F07556 Measuring gear: Position tracking, maximum actual value exceeded**

**Message value:** Component number: %1, encoder data set: %2

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY

**Cause:** When the position tracking of the measuring gear is configured, the drive/encoder identifies a maximum possible absolute position actual value (r0483) that cannot be represented within 32 bits.

Maximum value:  $p0408 * p0412 * 2^{p0419}$

Fault value (r0949, interpret decimal):

aaaayyxx hex: yy = component number, xx = encoder data set

See also: p0408 (Rotary encoder pulse number), p0412 (Measuring gear absolute encoder rotary revolutions virtual), p0419 (Fine resolution absolute value Gx\_XIST2 (in bits))

**Remedy:**

- reduce the fine resolution (p0419).

- reduce the multiturn resolution (p0412).

See also: p0412 (Measuring gear absolute encoder rotary revolutions virtual), p0419 (Fine resolution absolute value Gx\_XIST2 (in bits))

---

**A07557 (F) Encoder 1: Reference point coordinate not in the permissible range**

**Message value:** %1

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The reference point coordinate received when adjusting the encoder via connector input CI:p2599 lies outside the half of the encoder range and cannot be set as actual axis position. The maximum permissible value is displayed in the supplementary information.

**Remedy:** Set the reference point coordinate less than the value from the supplementary information.

Reaction upon F: OFF1 (OFF2, OFF3)

Acknowl. upon F: IMMEDIATELY

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>A07558 (F)</b>	<b>Encoder 2: Reference point coordinate not in the permissible range</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The reference point coordinate received when adjusting the encoder via connector input CI:p2599 lies outside the half of the encoder range and cannot be set as actual axis position. The maximum permissible value is displayed in the supplementary information.		
<b>Remedy:</b>	Set the reference point coordinate less than the value from the supplementary information.		
Reaction upon F:	OFF1 (OFF2, OFF3)		
Acknowl. upon F:	IMMEDIATELY		

---

<b>A07559 (F)</b>	<b>Encoder 3: Reference point coordinate not in the permissible range</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The reference point coordinate received when adjusting the encoder via connector input CI:p2599 lies outside the half of the encoder range and cannot be set as actual axis position. The maximum permissible value is displayed in the supplementary information.		
<b>Remedy:</b>	Set the reference point coordinate less than the value from the supplementary information.		
Reaction upon F:	OFF1 (OFF2, OFF3)		
Acknowl. upon F:	IMMEDIATELY		

---

<b>F07560</b>	<b>Drive encoder: Number of pulses is not to the power of two</b>		
<b>Message value:</b>	Encoder data set: %1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	For rotary absolute encoders, the pulse number in p0408 must be to the power of two. Fault value (r0949, interpret decimal): The fault value includes the encoder data set number involved.		
<b>Remedy:</b>	- check the parameterization (p0408, p0404.1, r0458.5). - upgrade the Sensor Module firmware if necessary		

---

<b>F07561</b>	<b>Drive encoder: Number of multiturn pulses is not to the power of two</b>		
<b>Message value:</b>	Encoder data set: %1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The multiturn resolution in p0421 must be to the power of two. Fault value (r0949, interpret decimal): The fault value includes the encoder data set number involved.		
<b>Remedy:</b>	- check the parameterization (p0421, p0404.1, r0458.5). - upgrade the Sensor Module firmware if necessary		

---

---

<b>F07562 (A)</b>	<b>Drive, encoder: Position tracking, incremental encoder not possible</b>
<b>Message value:</b>	Fault cause: %1, component number: %2, encoder data set: %3
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The requested position tracking for incremental encoders is not supported. Fault value (r0949, interpret hexadecimal): ccccbbaa hex aa = encoder data set bb = component number cccc = fault cause cccc = 00 hex = 0 dec The encoder type does not support the "Position tracking incremental encoder" function. cccc = 01 hex = 1 dec Position tracking cannot be activated because the memory of the internal NVRAM is not sufficient or a Control Unit does not have an NVRAM. cccc = 04 hex = 4 dec A linear encoder is used that does not support the "position tracking" function. See also: p0404 (Encoder configuration effective), p0411 (Measuring gear configuration), r0456 (Encoder configuration supported)
<b>Remedy:</b>	- check the encoder parameterization (p0400, p0404). - use a Control Unit with sufficient NVRAM. - if required, de-select position tracking for the incremental encoder (p0411.3 = 0).
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F07563 (A)</b>	<b>Drive encoder: XIST1_ERW configuration incorrect</b>
<b>Message value:</b>	Fault cause: %1, encoder data set: %2
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	An incorrect configuration was identified for the "Absolute position for incremental encoder" function. Fault value (r0949, interpret decimal): Fault cause: 1 (= 01 hex): The "Absolute value for incremental encoder" function is not supported (r0459.13 = 0). Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): yyxx dec: yy = fault cause, xx = encoder data set See also: r0459 (Sensor Module properties extended), p4652 (XIST1_ERW reset mode)
<b>Remedy:</b>	For fault value = 1: - upgrade the Sensor Module firmware version. - check the mode (p4652 = 1, 3 requires the property r0459.13 = 1).
Reaction upon A:	NONE
Acknowl. upon A:	NONE



<b>A07569 (F)</b>	<b>Enc identification active</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	During encoder identification (waiting) with p0400 = 10100, the encoder could still not be identified. Either the wrong encoder has been installed or no encoder has been installed, the wrong encoder cable has been connected or no encoder cable has been connected to the Sensor Module, or the DRIVE-CLiQ component has not been connected. Note: Encoder identification must be supported by the encoder and is possible in the following cases: - Encoder with EnDat interface. - Encoder with SSI interface. - Motor with DRIVE-CLiQ.
<b>Remedy:</b>	- check and, if necessary, connect the encoder / encoder cable. - check and, if necessary, establish the DRIVE-CLiQ connection. - for SSI encoders, carry out the required operator actions (see the Function Manual). - in the case of encoders that cannot be identified (e.g. encoders without EnDat interface), enter the correct encoder type in p0400.
Reaction upon F:	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY
<b>N07570 (F)</b>	<b>Encoder identification data transfer running</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The encoder type was automatically determined using p0400 = 10100. Note: This fault causes the pulses to be suppressed - this is necessary to transfer the encoder parameterization to p0400 and the following. See also: p0400 (Encoder type selection)
<b>Remedy:</b>	Acknowledge the fault without taking additional measures.
Reaction upon F:	OFF2
Acknowl. upon F:	IMMEDIATELY
<b>F07575</b>	<b>Drive: Motor encoder not ready</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF2 (ENCODER) Infeed: OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The motor encoder signals that it is not ready. - initialization of encoder 1 (motor encoder) was unsuccessful. - the function "parking encoder" is active (encoder control word G1_STW.14 = 1). - the encoder interface (Sensor Module) is deactivated (p0145). - the Sensor Module is defective.
<b>Remedy:</b>	Evaluate other queued faults via encoder 1.

---

<b>A07576</b>	<b>Drive: Encoderless operation due to a fault active</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Encoderless operation is active due to a fault (r1407.13 = 1). Note: The behavior for faults has been set to ENCODER fault response in p0491. See also: p0491 (Motor encoder fault response ENCODER)		
<b>Remedy:</b>	- remove the cause of a possible encoder fault. - carry out a POWER ON (switch-off/switch-on) for all components.		

---

<b>A07577 (F)</b>	<b>Encoder 1: Measuring probe evaluation not possible</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	When evaluating the measuring probe, an error occurred. Alarm value (r2124, interpret decimal): 6: The input terminal for the measuring probe is not set. 4098: Error when initializing the measuring probe. 4100: The measuring pulse frequency is too high. 4200: The PROFIBUS clock cycle is not a multiple of integer of the position controller clock cycle.		
<b>Remedy:</b>	Deactivate the measuring probe evaluation (BI: p2509 = 0 signal). For alarm value = 6: Set the input terminal for the measuring probe (p0488, p0489 or p2517, p2518). For alarm value = 4098: Check the Control Unit hardware. For alarm value = 4100: Reduce the frequency of the measuring pulses at the measuring probe. For alarm value = 4200: Set the clock cycle ratio between the PROFIBUS clock cycle and the position controller clock cycle to an integer multiple.		
Reaction upon F:	OFF1		
Acknowl. upon F:	IMMEDIATELY		

---

<b>A07578 (F)</b>	<b>Encoder 2: Measuring probe evaluation not possible</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	When evaluating the measuring probe, an error occurred. Alarm value (r2124, interpret decimal): 6: The input terminal for the measuring probe is not set. 4098: Error when initializing the measuring probe. 4100: The measuring pulse frequency is too high. 4200: The PROFIBUS clock cycle is not a multiple of integer of the position controller clock cycle.		

**Remedy:** Deactivate the measuring probe evaluation (BI: p2509 = 0 signal).  
 For alarm value = 6:  
 Set the input terminal for the measuring probe (p0488, p0489 or p2517, p2518).  
 For alarm value = 4098:  
 Check the Control Unit hardware.  
 For alarm value = 4100:  
 Reduce the frequency of the measuring pulses at the measuring probe.  
 For alarm value = 4200:  
 Set the clock cycle ratio between the PROFIBUS clock cycle and the position controller clock cycle to an integer multiple.

Reaction upon F: OFF1  
 Acknowl. upon F: IMMEDIATELY

---

### **A07579 (F) Encoder 3: Measuring probe evaluation not possible**

**Message value:** %1  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** When evaluating the measuring probe, an error occurred.  
 Alarm value (r2124, interpret decimal):  
 6: The input terminal for the measuring probe is not set.  
 4098: Error when initializing the measuring probe.  
 4100: The measuring pulse frequency is too high.  
 4200: The PROFIBUS clock cycle is not a multiple of integer of the position controller clock cycle.

**Remedy:** Deactivate the measuring probe evaluation (BI: p2509 = 0 signal).  
 For alarm value = 6:  
 Set the input terminal for the measuring probe (p0488, p0489 or p2517, p2518).  
 For alarm value = 4098:  
 Check the Control Unit hardware.  
 For alarm value = 4100:  
 Reduce the frequency of the measuring pulses at the measuring probe.  
 For alarm value = 4200:  
 Set the clock cycle ratio between the PROFIBUS clock cycle and the position controller clock cycle to an integer multiple.

Reaction upon F: OFF1  
 Acknowl. upon F: IMMEDIATELY

---

### **A07580 (F, N) Drive: No Sensor Module with matching component number**

**Message value:** Encoder data set: %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** A Sensor Module with the component number specified in p0141 was not found.  
 Alarm value (r2124, interpret decimal):  
 Encoder data set involved (index of p0141).

**Remedy:** Correct parameter p0141.

Reaction upon F: Vector: OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)  
 Infeed: OFF1 (NONE, OFF2)

Acknowl. upon F: IMMEDIATELY (POWER ON)  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE

---

<b>A07581 (F)</b>	<b>Encoder 1: Position actual value preprocessing error</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 1	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	An error has occurred during the position actual value preprocessing.		
<b>Remedy:</b>	Check the encoder for the position actual value preprocessing.		
Reaction upon F:	OFF1 (OFF2, OFF3)		
Acknowl. upon F:	IMMEDIATELY		

---

<b>A07582 (F)</b>	<b>Encoder 2: Position actual value preprocessing error</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 2	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	An error has occurred during the position actual value preprocessing.		
<b>Remedy:</b>	Check the encoder for the position actual value preprocessing.		
Reaction upon F:	OFF1 (OFF2, OFF3)		
Acknowl. upon F:	IMMEDIATELY		

---

<b>A07583 (F)</b>	<b>Encoder 3: Position actual value preprocessing error</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 3	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	An error has occurred during the position actual value preprocessing.		
<b>Remedy:</b>	Check the encoder for the position actual value preprocessing.		
Reaction upon F:	OFF1 (OFF2, OFF3)		
Acknowl. upon F:	IMMEDIATELY		

---

<b>A07584</b>	<b>Encoder 1: Position setting value activated</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 1	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The position actual value is set to the value received via CI: p2515 while BI: p2514 = 1 signal. A possible system deviation cannot be corrected.		
<b>Remedy:</b>	Not necessary. The alarm automatically disappears with BI: p2514 = 0 signal.		

<b>A07585</b>	<b>Encoder 2: Position setting value activated</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The position actual value is set to the value received via CI: p2515while BI: p2514 = 1 signal. A possible system deviation cannot be corrected.
<b>Remedy:</b>	Not necessary. The alarm automatically disappears with BI: p2514 = 0 signal.
<b>A07586</b>	<b>Encoder 3: Position setting value activated</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The position actual value is set to the value received via CI: p2515while BI: p2514 = 1 signal. A possible system deviation cannot be corrected.
<b>Remedy:</b>	Not necessary. The alarm automatically disappears with BI: p2514 = 0 signal.
<b>A07587</b>	<b>Encoder 1: Position actual value preprocessing does not have a valid encoder</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 1
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The following problem has occurred during the position actual value preprocessing. - an encoder data set has been assigned, however, the encoder data set does not contain any encoder data (p0400 = 0) or invalid data (e.g. p0408 = 0).
<b>Remedy:</b>	Check the drive data sets, encoder data sets. See also: p0187 (Encoder 1 encoder data set number), p0188 (Encoder 2 encoder data set number), p0189 (Encoder 3 encoder data set number), p0400 (Encoder type selection)
<b>A07588</b>	<b>Encoder 2: Position actual value preprocessing does not have a valid encoder</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The following problem has occurred during the position actual value preprocessing. - an encoder data set has been assigned, however, the encoder data set does not contain any encoder data (p0400 = 0) or invalid data (e.g. p0408 = 0).
<b>Remedy:</b>	Check the drive data sets, encoder data sets. See also: p0187 (Encoder 1 encoder data set number), p0188 (Encoder 2 encoder data set number), p0189 (Encoder 3 encoder data set number), p0400 (Encoder type selection)

<b>A07589</b>	<b>Encoder 3: Position actual value preprocessing does not have a valid encoder</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The following problem has occurred during the position actual value preprocessing. - an encoder data set has been assigned, however, the encoder data set does not contain any encoder data (p0400 = 0) or invalid data (e.g. p0408 = 0).
<b>Remedy:</b>	Check the drive data sets, encoder data sets. See also: p0187 (Encoder 1 encoder data set number), p0188 (Encoder 2 encoder data set number), p0189 (Encoder 3 encoder data set number), p0400 (Encoder type selection)
<b>A07590 (F)</b>	<b>Encoder 1: Drive Data Set changeover in operation</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A Drive Data Set changeover (DDS) with a change of the mechanical relationships and the encoder assignment (p2502) was requested in operation.
<b>Remedy:</b>	To changeover the drive data set, initially, exit the "operation" mode.
Reaction upon F:	OFF1 (OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY
<b>A07591 (F)</b>	<b>Encoder 2: Drive Data Set changeover in operation</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A Drive Data Set changeover (DDS) with a change of the mechanical relationships and the encoder assignment (p2502) was requested in operation.
<b>Remedy:</b>	To changeover the drive data set, initially, exit the "operation" mode.
Reaction upon F:	OFF1 (OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY
<b>A07592 (F)</b>	<b>Encoder 3: Drive Data Set changeover in operation</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A Drive Data Set changeover (DDS) with a change of the mechanical relationships and the encoder assignment (p2502) was requested in operation.
<b>Remedy:</b>	To changeover the drive data set, initially, exit the "operation" mode.
Reaction upon F:	OFF1 (OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY

---

<b>A07593 (F, N)</b>	<b>Encoder 1: Value range for position actual value exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The value range (-2147483648 ... 2147483647) for the position actual value representation was exceeded. When the overflow occurs, the "referenced" or "absolute encoder adjusted" status is reset. Alarm value (r2124, interpret decimal): 1: The position actual value (r2521) has exceeded the value range. 2: The encoder position actual value Gn_XIST2 (r0483) or the absolute value after the load gear (r2723) has exceeded the value range. 3: The maximum encoder value multiplied by the factor to convert the absolute position (r0483, r2723) from increments to length units (LU) has exceeded the value range for displaying the position actual value.
<b>Remedy:</b>	If required, reduce the traversing range or position resolution. For alarm value = 3: Reducing the position resolution and conversion factor: - reduce the length unit (LU) per load revolution for rotary encoders (p2506). - increase the fine resolution of absolute position actual values (p0419).
Reaction upon F:	OFF1 (OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A07594 (F, N)</b>	<b>Encoder 2: Value range for position actual value exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The value range (-2147483648 ... 2147483647) for the position actual value representation was exceeded. When the overflow occurs, the "referenced" or "absolute encoder adjusted" status is reset. Alarm value (r2124, interpret decimal): 1: The position actual value (r2521) has exceeded the value range. 2: The encoder position actual value Gn_XIST2 (r0483) or the absolute value after the load gear (r2723) has exceeded the value range. 3: The maximum encoder value times the factor to convert the absolute position (r0483 and/or r2723) from increments to length units (LU) has exceeded the value range for displaying the position actual value.
<b>Remedy:</b>	If required, reduce the traversing range or position resolution. For alarm value = 3: Reducing the position resolution and conversion factor: - reduce the length unit (LU) per load revolution for rotary encoders (p2506). - increase the fine resolution of absolute position actual values (p0419).
Reaction upon F:	OFF1 (OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A07595 (F, N)</b>	<b>Encoder 3: Value range for position actual value exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The value range (-2147483648 ... 2147483647) for the position actual value representation was exceeded. When the overflow occurs, the "referenced" or "absolute encoder adjusted" status is reset. Alarm value (r2124, interpret decimal): 1: The position actual value (r2521) has exceeded the value range. 2: The encoder position actual value Gn_XIST2 (r0483) or the absolute value after the load gear (r2723) has exceeded the value range. 3: The maximum encoder value times the factor to convert the absolute position (r0483 and/or r2723) from increments to length units (LU) has exceeded the value range for displaying the position actual value.
<b>Remedy:</b>	If required, reduce the traversing range or position resolution. For alarm value = 3: Reducing the position resolution and conversion factor: - reduce the length unit (LU) per load revolution for rotary encoders (p2506). - increase the fine resolution of absolute position actual values (p0419).
Reaction upon F:	OFF1 (OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A07596 (F, N)</b>	<b>Encoder 1: Reference function interrupted</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	An activated reference function (reference mark search or measuring probe evaluation) was interrupted. - an encoder fault has occurred (Gn_ZSW.15 = 1). - position actual value was set during an activated reference function. - simultaneously activate reference mark search and measuring probe evaluation (BI: p2508 and BI: p2509 = 1 signal). - activated reference function (reference mark search or measuring probe evaluation) was deactivated (BI: p2508 and BI: p2509 = 0 signal).
<b>Remedy:</b>	- check the causes and resolve. - reset the control (BI: p2508 and BI: p2509 = 0 signal) and activate the requested function.
Reaction upon F:	OFF1 (OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

**A07597 (F, N) Encoder 2: Reference function interrupted**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** An activated reference function (reference mark search or measuring probe evaluation) was interrupted.  
- an encoder fault has occurred (Gn\_ZSW.15 = 1).  
- position actual value was set during an activated reference function.  
- simultaneously activate reference mark search and measuring probe evaluation (BI: p2508 and BI: p2509 = 1 signal).  
- activated reference function (reference mark search or measuring probe evaluation) was deactivated (BI: p2508 and BI: p2509 = 0 signal).  
**Remedy:**  
- check the causes and resolve.  
- reset the control (BI: p2508 and BI: p2509 = 0 signal) and activate the requested function.  
Reaction upon F: OFF1 (OFF2, OFF3)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

**A07598 (F, N) Encoder 3: Reference function interrupted**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** An activated reference function (reference mark search or measuring probe evaluation) was interrupted.  
- an encoder fault has occurred (Gn\_ZSW.15 = 1).  
- position actual value was set during an activated reference function.  
- simultaneously activate reference mark search and measuring probe evaluation (BI: p2508 and BI: p2509 = 1 signal).  
- activated reference function (reference mark search or measuring probe evaluation) was deactivated (BI: p2508 and BI: p2509 = 0 signal).  
**Remedy:**  
- check the causes and resolve.  
- reset the control (BI: p2508 and BI: p2509 = 0 signal) and activate the requested function.  
Reaction upon F: OFF1 (OFF2, OFF3)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

**F07599 (A) Encoder 1: Adjustment not possible**

**Message value:** Drive data set: %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 1 **Propagation:** GLOBAL  
**Reaction:** OFF1 (NONE, OFF2, OFF3)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The maximum encoder value multiplied by the factor to convert the absolute position (r0483 and/or r2723) from increments to length units (LU - Length Unit) has exceeded the value range (-2147483648 ... 2147483647) for displaying the position actual value.  
Fault value (r0949, interpret decimal):  
Number of the drive data set.  
**Remedy:** If the value for the maximum possible absolute position (LU) is greater than 4294967296, then it is not possible to make an adjustment due to an overflow.

## 4 Faults and alarms

### 4.2 List of faults and alarms

For rotary encoders, the maximum possible absolute position (LU) is calculated as follows:

1. Motor encoder without position tracking:  
 $p2506 * p0433 * p2505 / (p0432 * p2504)$   
 $p2506 * p0433 * p2505 * p0421 / (p0432 * p2504)$  for multiturn encoders
2. Motor encoder with position tracking for measuring gear  
 $p2506 * p0412 * p2505 / p2504$
3. Motor encoder with position tracking for load gear:  
 $p2506 * p2721 * p0433 / p0432$
4. Motor encoder with position tracking for load and measuring gear:  
 $p2506 * p2721$
5. Direct encoder without position tracking:  
 $p2506 * p0433 / p0432$   
 $p2506 * p0433 * p0421 / p0432$  for multiturn encoders
6. Direct encoder with position tracking for measuring gear:  
 $p2506 * p0412$

For a linear encoder, the following must be maintained:

$$- p0407 * p2503 / (2^p0419 * 10^7) \leq 1.0$$

Reaction upon A: NONE

Acknowl. upon A: NONE

---

<b>F07600 (A)</b>	<b>Encoder 2: Adjustment not possible</b>
<b>Message value:</b>	Drive data set: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Reaction:</b>	OFF1 (NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The maximum encoder value times the factor to convert the absolute position (r0483 and/or r2723) from increments to length units (LU) has exceeded the value range (-2147483648 ... 2147483647) for displaying the position actual value.
<b>Remedy:</b>	If the value for the maximum possible absolute position (LU) is greater than 4294967296, then it is not possible to make an adjustment due to an overflow. For rotary encoders, the maximum possible absolute position (LU) is calculated as follows: <ol style="list-style-type: none"><li>1. Motor encoder without position tracking: <math>p2506 * p0433 * p2505 / (p0432 * p2504)</math> <math>p2506 * p0433 * p2505 * p0421 / (p0432 * p2504)</math> for multiturn encoders</li><li>2. Motor encoder with position tracking for measuring gear <math>p2506 * p0412 * p2505 / p2504</math></li><li>3. Motor encoder with position tracking for load gear: <math>p2506 * p2721 * p0433 / p0432</math></li><li>4. Motor encoder with position tracking for load and measuring gear: <math>p2506 * p2721</math></li><li>5. Direct encoder without position tracking: <math>p2506 * p0433 / p0432</math> <math>p2506 * p0433 * p0421 / p0432</math> for multiturn encoders</li><li>6. Direct encoder with position tracking for measuring gear: <math>p2506 * p0412</math></li></ol> For a linear encoder, the following must be maintained: $- p0407 * p2503 / (2^p0419 * 10^7) \leq 1.0$
Reaction upon A:	NONE
Acknowl. upon A:	NONE

<b>F07601 (A)</b>	<b>Encoder 3: Adjustment not possible</b>
<b>Message value:</b>	Drive data set: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The maximum encoder value times the factor to convert the absolute position (r0483 and/or r2723) from increments to length units (LU) has exceeded the value range (-2147483648 ... 2147483647) for displaying the position actual value.
<b>Remedy:</b>	<p>If the value for the maximum possible absolute position (LU) is greater than 4294967296, then it is not possible to make an adjustment due to an overflow.</p> <p>For rotary encoders, the maximum possible absolute position (LU) is calculated as follows:</p> <ol style="list-style-type: none"> <li>Motor encoder without position tracking:  <math>p2506 * p0433 * p2505 / (p0432 * p2504)</math>  <math>p2506 * p0433 * p2505 * p0421 / (p0432 * p2504)</math> for multiturn encoders</li> <li>Motor encoder with position tracking for measuring gear  <math>p2506 * p0412 * p2505 / p2504</math></li> <li>Motor encoder with position tracking for load gear:  <math>p2506 * p2721 * p0433 / p0432</math></li> <li>Motor encoder with position tracking for load and measuring gear:  <math>p2506 * p2721</math></li> <li>Direct encoder without position tracking:  <math>p2506 * p0433 / p0432</math>  <math>p2506 * p0433 * p0421 / p0432</math> for multiturn encoders</li> <li>Direct encoder with position tracking for measuring gear:  <math>p2506 * p0412</math></li> </ol> <p>For a linear encoder, the following must be maintained:  <math>- p0407 * p2503 / (2^p0419 * 10^7) \leq 1.0</math></p>
Reaction upon A:	NONE
Acknowled. upon A:	NONE
<b>F07754</b>	<b>Drive: Incorrect shutoff valve configuration</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	An incorrect shutoff valve configuration was detected.
	Fault value (r0949, interpret decimal):
	100:
	Enable Safety Integrated (p9601/p9801), but p0218.0 = 0 (shutoff valve not available).
	101:
	The manipulated variable inhibit time is set less than the wait time to evaluate the feedback signal contacts when switching on the shutoff valve ( $p0230 < p9625[0]/p9825[0]$ ).
	102:
	The manipulated variable inhibit time is set less than the wait time to evaluate the feedback signal contacts when switching off the shutoff valve ( $p0230 < p9625[1]/p9825[1]$ ).
<b>Remedy:</b>	<p>For fault value = 100:  Check the enable of Safety Integrated and the shutoff valve (p9601/p9801, p0218.0).</p> <p>For fault value = 101:  Set the manipulated variable inhibit time higher than the wait time to evaluate the feedback signal contacts when switching on the shutoff valve (<math>p0230 &gt; p9625[0]/p9825[0]</math>).</p>

## 4 Faults and alarms

### 4.2 List of faults and alarms

For fault value = 102:

Set the manipulated variable inhibit time higher than the wait time to evaluate the feedback signal contacts when switching off the shutoff valve (p0230 > p9625[1]/p9825[1]).

See also: p0230 (Drive filter type motor side)

---

<b>F07800</b>	<b>Drive: No power unit present</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The power unit parameters cannot be read or no parameters are stored in the power unit. It is possible that the DRIVE-CLiQ cable between the Control Unit and power unit is interrupted or defective. Note: This fault also occurs if an incorrect topology was selected in the commissioning software and this parameterization is then downloaded to the Control Unit. See also: r0200 (Power unit code number actual)		
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on) for all components. - check the DRIVE-CLiQ cable between the Control Unit and power unit. - check the power unit and replace if necessary. - check the Control Unit, and if required replace it. - after correcting the topology, the parameters must be again downloaded using the commissioning software.		

---

<b>F07801</b>	<b>Drive: Motor overcurrent</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Motor overload (8)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Motor	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE, OFF1, OFF3)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The permissible motor limit current was exceeded. - effective current limit set too low. - current controller not correctly set. - U/f operation: Up ramp was set too short or the load is too high. - U/f operation: Short-circuit in the motor cable or ground fault. - U/f operation: Motor current does not match current of power unit. - Switch to rotating motor without flying restart function (p1200). Note: Limit current = 2 x minimum (p0640, 4 x p0305 x p0306) >= 2 x p0305 x p0306		
<b>Remedy:</b>	- check the current limits (p0640). - vector control: Check the current controller (p1715, p1717). - U/f control: Check the current limiting controller (p1340 ... p1346). - increase the up ramp (p1120) or reduce the load. - check the motor and motor cables for short-circuit and ground fault. - check the motor for the star-delta configuration and rating plate parameterization. - check the power unit and motor combination. - Choose "flying restart" function (p1200) if switched to rotating motor.		

---

<b>F07802</b>	<b>Drive: Infeed or power unit not ready</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Infeed faulted (13)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	After an internal switch-on command, the infeed or drive does not signal ready. - monitoring time is too short. - DC link voltage is not present. - associated infeed or drive of the signaling component is defective. - supply voltage incorrectly set.		
<b>Remedy:</b>	- increase the monitoring time (p0857). - ensure that there is a DC link voltage. Check the DC link busbar. Enable the infeed. - replace the associated infeed or drive of the signaling component. - check the line supply voltage setting (p0210). See also: p0857 (Power unit monitoring time)		

---

<b>A07805 (N)</b>	<b>Drive: Power unit overload I2t</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Alarm threshold for I2t overload (p0294) of the power unit exceeded. The response parameterized in p0290 becomes active. See also: p0290 (Power unit overload response)		
<b>Remedy:</b>	- reduce the continuous load. - adapt the load duty cycle. - check the assignment of the rated currents of the motor and Motor Module.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A07805 (N)</b>	<b>Infeed: Power unit overload I2t</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Alarm threshold for I2t overload (p0294) of the power unit exceeded.		
<b>Remedy:</b>	- reduce the continuous load. - adapt the load duty cycle.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>F07807</b>	<b>Drive: Short-circuit/ground fault detected</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Ground fault / inter-phase short-circuit detected (7)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
	<b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2 (NONE)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A phase-phase short-circuit or ground fault was detected at the motor-side output terminals of the converter. Fault value (r0949, interpret decimal): 1: Short-circuit, phase UV. 2: Short-circuit, phase UW. 3: Short-circuit, phase VW. 4: Ground fault with overcurrent. 1yxxx: Ground fault with current in phase U detected (y = pulse number, xxxx = component of the current in phase V in per mille). 2yxxx: Ground fault with current in phase V detected (y = pulse number, xxxx = component of the current in phase U in per mille). Note: Also when interchanging the line and motor cables is identified as a motor-side short circuit. The ground fault test only functions when the motor is stationary. Connecting to a motor that is either not de-energized or partially de-energized is possibly detected as ground fault.
<b>Remedy:</b>	- check the motor-side converter connection for a phase-phase short-circuit. - rule-out interchanged line and motor cables. - check for a ground fault. For a ground fault the following applies: - do not enable the pulses when connecting to a rotating motor without the "Flying restart" function activated (p1200). - increase the de-energization time (p0347). - increase pulse suppression delay time (p1228) to ensure standstill. - if required, deactivate the monitoring (p1901).

---

<b>F07808 (A)</b>	<b>HF Damping Module: damping not ready</b>
<b>Message value:</b>	New message: %1
<b>Message class:</b>	Power electronics faulted (5)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
	<b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2 (NONE, OFF1, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	When switching on or in the switched-on state, the HF Damping Module does not return a ready signal.
<b>Remedy:</b>	- check the DRIVE-CLiQ wiring to the HF Damping Module. - check the 24 V supply voltage. - if required, replace the HF Damping Module. Note: HF Damping Module
Reaction upon A:	NONE
Acknowl. upon A:	NONE

<b>F07810</b>	<b>Drive: Power unit EEPROM without rated data</b>
<b>Message value:</b>	-
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	No rated data are stored in the power unit EEPROM. See also: p0205 (Power unit application), r0206 (Rated power unit power), r0207 (Rated power unit current), r0208 (Rated power unit line supply voltage), r0209 (Power unit maximum current)
<b>Remedy:</b>	Replace the power unit or inform Siemens Customer Service.
<b>F07815</b>	<b>Drive: Power unit has been changed</b>
<b>Message value:</b>	Parameter: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The code number of the actual power unit does not match the saved number. This only occurs if the comparator in p9906 or p9908 is not at 2 (low) or 3 (minimum). Fault value (r0949, interpret decimal): Number of the incorrect parameter. See also: r0200 (Power unit code number actual), p0201 (Power unit code number)
<b>Remedy:</b>	- Connect the original power unit and switch on the Control Unit again (POWER ON). - set p0201 to r0200 and exit commissioning with p0010 = 0. Note: If the power unit type was changed (see r0203) or the motor replaced, then the motor must be recommissioned (e.g. using p0010 = 1, p3900 = 3, p1900 = 1, 2). This is also necessary if motor data is still to be downloaded via DRIVE-CLiQ. If the new power unit is accepted, then if required, the current limit p0640 can be reduced by a lower maximum current of the power unit (r0209) (torque limits stay the same). If the comparison stage in p9906 is set to 2, 3, then commissioning can be exited (p0010 = 0) and the fault acknowledged. This procedure is not recommended for different power unit types. See also: r0200 (Power unit code number actual)
<b>F07815</b>	<b>Drive: Power unit has been changed</b>
<b>Message value:</b>	Parameter: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF
<b>Component:</b>	Power Module
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The code number of the actual power unit does not match the saved number. This only occurs if the comparator in p9906 or p9908 is not at 2 (low) or 3 (minimum). Fault value (r0949, interpret decimal): Number of the incorrect parameter. See also: r0200 (Power unit code number actual), p0201 (Power unit code number)
<b>Remedy:</b>	Connect the original power unit and switch on the Control Unit again (POWER ON) or set p0201 to r0200 and exit commissioning with p0010 = 0. For infeeds, the following applies: Line reactors or line filters must be used that are specified for the new power unit. A line supply and DC link identification routine (p3410 = 5) must then be carried out. It is not possible to change the power unit without re-commissioning the system if the type of infeed (A_Infeed, B_Infeed, S_Infeed), the type of construction/design (booksize, chassis) or the voltage class differ between the old and new power units.

For inverters, the following applies:

If the new power unit is accepted, then if required, the current limit (p0640) can be reduced by a lower maximum current of the power unit (r0209) (torque limits stay the same).

If not only the power unit is changed, but also the motor, then the motor must be re-commissioned (e.g. using p0010 = 1). This is also necessary if motor data is still to be downloaded via DRIVE-CLiQ.

See also: r0200 (Power unit code number actual)

---

<b>A07820</b>	<b>Drive: Temperature sensor not connected</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>The temperature sensor for monitoring the motor temperature, specified in p0600, is not available.</p> <p>Alarm value (r2124, interpret decimal):</p> <p>1: p0601 = 10 (SME), but in p0600 - not evaluated via encoder is selected.</p> <p>2: p0600 = 10 (BICO), but the signal source (p0603) is not interconnected.</p> <p>3: p0601 = 11 (BICO), but in p0600 - not evaluated via BICO interconnection is selected (20 or 21).</p> <p>4: p0601 = 11 (BICO) and p4610-p4613 &gt; 0, but the associated signal source (p0608, p0609) is not interconnected.</p> <p>5: Component with sensor evaluation not present or has been removed in the meantime.</p> <p>6: Evaluation via Motor Module not possible (r0192.21).</p>		
<b>Remedy:</b>	<p>For alarm value = 1:</p> <ul style="list-style-type: none"> <li>- in p0600 set an encoder with temperature sensor.</li> </ul> <p>For alarm value = 2:</p> <ul style="list-style-type: none"> <li>- interconnect p0603 with the temperature signal.</li> </ul> <p>For alarm value = 3, 4:</p> <ul style="list-style-type: none"> <li>- set the available temperature sensor (p0600, p0601).</li> <li>- set p4610 ... p4613 = 0 (no sensor), or interconnect p0608 or p0609 with an external temperature signal.</li> </ul> <p>For alarm value = 5:</p> <ul style="list-style-type: none"> <li>- connect the component with the temperature sensor. Check the DRIVE-CLiQ connection.</li> </ul> <p>For alarm value = 6:</p> <ul style="list-style-type: none"> <li>- update the Motor Module firmware. Connect temperature sensor via encoder.</li> </ul> <p>See also: p0600 (Motor temperature sensor for monitoring), p0601</p>		

---

<b>A07821</b>	<b>Monitoring underspeed threshold fallen below alarm</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>The alarm threshold for the lower speed was fallen below.</p> <p>Note:</p> <ul style="list-style-type: none"> <li>- the monitoring is activated using p2149.6 = 1.</li> <li>- status bit r2197.1 = 1 indicates that the value has been fallen below.</li> <li>- for closed-loop control without encoder, this alarm is only output for an excited motor (r0056.4 = 1); for closed-loop control with encoder, it is always output.</li> <li>- for a separately excited synchronous motor in closed-loop torque control without an encoder (p1300 = 20, p1501 set), the monitoring for an underspeed condition is automatically activated internally.</li> </ul> <p>See also: p2140 (Hysteresis speed 2), p2149 (Monitoring configuration), p2155 (Speed threshold 2), r2197 (Status word monitoring 1)</p>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the parameterization (p2155, p2140).</li> <li>- if required, reduce the load.</li> <li>- switch-on additional unit for generator applications.</li> </ul>		

<b>F07822 (N)</b>	<b>Monitoring underspeed threshold fallen below fault</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The fault threshold for the lower speed was fallen below. Note: - the monitoring is activated using p2149.6 = 1. - status bit r2199.0 = 1 indicates that the value has been fallen below. - the fault is only output if the machine is excited (r0056.4 = 1). - for a separately excited synchronous motor in closed-loop torque control without an encoder (p1300 = 20, p1501 = 1 signal), the monitoring for an underspeed condition is automatically activated internally. See also: p2149 (Monitoring configuration), p2150 (Hysteresis speed 3), p2161 (Speed threshold 3), r2199 (Status word monitoring 3)
<b>Remedy:</b>	- check the parameterization (p2161, p2150). - if required, reduce the load. - switch-on additional unit for generator applications.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>A07823</b>	<b>I2t monitoring alarm threshold exceeded</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	For the freely parameterizable I2t monitoring, the alarm threshold (p3243) was exceeded. Note: Status bit r2199.13 = 1 indicates that the value is exceeded. See also: p3240 (I2t input value signal source), p3241 (Permissible I2t continuous value), p3242 (I2t maximum duration), p3243 (I2t alarm thresh), r3244 (Actual I2t integrator value)
<b>Remedy:</b>	- check the received input value (p3240). - if required, reduce the load. - check the parameterization (p3241, p3242, p3243). Note: The alarm and status bit r2199.13 are reset if the I2t integrator value (r3244) falls below half of the value set in p3243.
<b>F07824</b>	<b>I2t monitoring fault threshold exceeded</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE (OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	For the freely parameterizable I2t monitoring, the fault threshold (100 %) was exceeded. Note: Status bit r2199.14 = 1 indicates that the value is exceeded. See also: p3240 (I2t input value signal source), p3241 (Permissible I2t continuous value), p3242 (I2t maximum duration), p3243 (I2t alarm thresh), r3244 (Actual I2t integrator value)
<b>Remedy:</b>	- check the received input value (p3240). - if required, reduce the load. - check the parameterization (p3241, p3242, p3243).

## 4 Faults and alarms

### 4.2 List of faults and alarms

Note:

Fault and status bit r2199.14 are reset if the I2t integrator value (r3244) falls below a value of 99%.

---

<b>A07825 (N)</b>	<b>Drive: Simulation mode activated</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The simulation mode is activated. The drive can only be switched on if the DC link voltage is less than 40 V.		
<b>Remedy:</b>	Not necessary. The alarm automatically disappears if simulation mode is deactivated with p1272 = 0.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>F07826</b>	<b>Drive: DC link voltage for simulation operation too high</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The simulation mode is activated and the DC link voltage is greater than the permissible value of 40 V.		
<b>Remedy:</b>	- switch out (disable) simulation mode (p1272 = 0) and acknowledge the fault. - reduce the input voltage in order to reach a DC link voltage below 40 V.		

---

<b>F07840</b>	<b>Drive: Infeed operation missing</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Infeed faulted (13)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The signal "infeed operation" is not present although the enable signals for the drive have been present for longer than the parameterized monitoring time (p0857). - infeed not operational. - interconnection of the binector input for the ready signal is either incorrect or missing (p0864). - infeed is presently carrying out a line supply identification routine.		
<b>Remedy:</b>	- bring the infeed into an operational state. - check the interconnection of the binector input for the signal "infeed operation" (p0864). - increase the monitoring time (p0857). - wait until the infeed has completed the line supply identification routine. See also: p0857 (Power unit monitoring time), p0864 (Infeed operation)		

**F07841 (A) Drive: Infeed operation withdrawn**

**Message value:** -  
**Message class:** Infeed faulted (13)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2 (IASC/DCBRK, NONE, OFF1, OFF3)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The signal "infeed operation" was withdrawn in operation.  
- interconnection of the binector input for the signal "infeed operation" is either incorrect or missing (p0864).  
- the enable signals of the infeed were disabled.  
- due to a fault, the infeed withdraws the signal "infeed operation".  
**Remedy:** - check the interconnection of the binector input for the "infeed operation" signal (p0864).  
- check the enable signals of the infeed and if required, enable.  
- remove and acknowledge an infeed fault.  
**Note:**  
If this drive is intended to back up the DC link regeneratively, then the fault response must be parameterized for NONE, OFF1 or OFF3. so that the drive can continue to operate even after the infeed fails.  
**Reaction upon A:** NONE  
**Acknowl. upon A:** NONE

**A07850 (F) External alarm 1**

**Message value:** -  
**Message class:** External measured value / signal state outside the permissible range (16)  
**Drive object:** All objects  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The condition for "External alarm 1" is satisfied.  
**Note:**  
The "External alarm 1" is initiated by a 1/0 edge via binector input p2112.  
See also: p2112 (External alarm 1)  
**Remedy:** Eliminate the causes of this alarm.  
**Reaction upon F:** Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Infeed: NONE (OFF1, OFF2)  
**Acknowl. upon F:** IMMEDIATELY (POWER ON)

**A07851 (F) External alarm 2**

**Message value:** -  
**Message class:** External measured value / signal state outside the permissible range (16)  
**Drive object:** All objects  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The condition for "External alarm 2" is satisfied.  
**Note:**  
The "External alarm 2" is initiated by a 1/0 edge via binector input p2116.  
See also: p2116 (External alarm 2)  
**Remedy:** Eliminate the causes of this alarm.  
**Reaction upon F:** Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Infeed: NONE (OFF1, OFF2)  
**Acknowl. upon F:** IMMEDIATELY (POWER ON)

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>A07852 (F)</b>	<b>External alarm 3</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The condition for "External alarm 3" is satisfied.		
	Note:		
	The "External alarm 3" is initiated by a 1/0 edge via binector input p2117.		
	See also: p2117 (External alarm 3)		
<b>Remedy:</b>	Eliminate the causes of this alarm.		
Reaction upon F:	Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)		
	Infeed: NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

---

<b>F07860 (A)</b>	<b>External fault 1</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)		
	Infeed: OFF2 (NONE, OFF1)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The condition for "External fault 1" is satisfied.		
	Note:		
	The "External fault 1" is initiated by a 1/0 edge via binector input p2106.		
	See also: p2106 (External fault 1)		
<b>Remedy:</b>	- eliminate the causes of this fault.		
	- acknowledge fault.		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F07861 (A)</b>	<b>External fault 2</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)		
	Infeed: OFF2 (NONE, OFF1)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The condition for "External fault 2" is satisfied.		
	Note:		
	The "External fault 2" is initiated by a 1/0 edge via binector input p2107.		
	See also: p2107 (External fault 2)		
<b>Remedy:</b>	- eliminate the causes of this fault.		
	- acknowledge fault.		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

**F07862 (A) External fault 3**

**Message value:** -  
**Message class:** External measured value / signal state outside the permissible range (16)  
**Drive object:** All objects  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)  
 Infeed: OFF2 (NONE, OFF1)  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** The condition for "External fault 3" is satisfied.  
 Note:  
 The "External fault 3" is initiated by a 1/0 edge via the following parameters.  
 - AND logic operation, binector input p2108, p3111, p3112.  
 - switch-on delay p3110.  
 See also: p2108, p3110, p3111, p3112  
**Remedy:** - eliminate the causes of this fault.  
 - acknowledge fault.  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F07890 Internal voltage protection / internal armature short-circuit with STO active**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** The internal armature short-circuit (p1231 = 4) is not possible as Safe Torque Off (STO) is enabled. The pulses cannot be enabled.  
**Remedy:** Switch out the internal armature short-circuit (p1231=0) or deactivate Safe Torque Off (p9501 = p9561 = 0).  
 Note:  
 STO: Safe Torque Off / SH: Safe standstill

**F07898 Drive: flying restart unsuccessful due to excessively low flux**

**Message value:** -  
**Message class:** Motor overload (8)  
**Drive object:** VECTOR\_G  
**Component:** Control Unit (CU) **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** While identifying the rotor position of a separately excited synchronous motor based on voltage measurement, after the excitation time had elapsed, the flux was too low.  
**Remedy:** Increase the excitation time (p0346).  
 See also: p0346 (Motor excitation build-up time)

**A07899 (N) Drive: Stall monitoring not possible**

**Message value:** Parameter: %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** Stall monitoring is not possible, because a change was made into the open-loop speed controlled mode before the wait time p2177 had expired.

## 4 Faults and alarms

### 4.2 List of faults and alarms

This situation can only occur, if the following conditions apply:

p1300 = 20  
p2177 > p1758  
p1750.2 = 0  
p1750.6 = 0

**Remedy:** - Deactivate the changeover into open-loop speed controlled operation when operating at the torque limit (p1750.6 = 0).

Condition:

No slow reversing through the open-loop speed controlled operating range p1755 within the time p1758 when operating at the torque limit.

- shorten the stall detection wait time (p2177 < p1758).  
- Activate closed-loop controlled operation from standstill and higher (p1750.2 = 1).

Condition:

There is no active load, for example, a hoisting gear

- Use an operating mode with encoder (p1300 = 21).

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **F07900 (N, A) Drive: Motor blocked**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** Motor **Propagation:** GLOBAL

**Reaction:** OFF2 (NONE, OFF1, OFF3, STOP2)

**Acknowledge:** IMMEDIATELY

**Cause:** Motor has been operating at the torque limit longer than the time specified in p2177 and below the speed threshold in p2175.

This signal can also be initiated if the speed actual value is oscillating and the speed controller output repeatedly goes to its limit.

If the simulation mode is enabled (p1272 = 1) and the closed-loop control with speed encoder activated (p1300 = 21), then the inhibit signal is generated if the encoder signal is not received from a motor that is driven with the torque setpoint of the closed-loop control.

See also: p2175 (Motor blocked speed threshold), p2177 (Motor blocked delay time)

**Remedy:**

- check that the motor can freely move.
- check the effective torque limit (r1538, r1539).
- check the parameter, message "Motor blocked" and if required, correct (p2175, p2177).
- check the inversion of the actual value (p0410).
- check the motor encoder connection.
- check the encoder pulse number (p0408).
- after de-selecting the "Basic positioner" (EPOS) function mode, check the motoring (p1528) and regenerative (p1529) torque limit and modify again.
- in the simulation mode and operation with speed encoder, the power unit to which the motor is connected must be switched on and must be supplied with the torque setpoint of the simulated closed-loop control. Otherwise, change over to encoderless control (see p1300).
- check the direction of rotation enable signals for a flying restart of the motor (p1110, p1111).
- for U/f control: check the current limits and acceleration times (p0640, p1120).

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

<b>F07901</b>	<b>Drive: Motor overspeed</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (IASC/DCBRK)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The maximum permissible speed was either positively or negatively exceeded. The maximum permissible positive speed is formed as follows: Minimum (p1082, CI: p1085) + p2162 The maximum permissible negative speed is formed as follows: Maximum (-p1082, CI: 1088) - p2162
<b>Remedy:</b>	The following applies for a positive direction of rotation: - check r1084 and if required, correct p1082, CI:p1085 and p2162. The following applies for a negative direction of rotation: - check r1087 and if required, correct p1082, CI:p1088 and p2162. Activate pre-control of the speed limiting controller (p1401.7 = 1). Increase the hysteresis for the overspeed signal p2162. This upper limit is dependent upon the maximum motor speed p0322 and the maximum speed p1082 of the setpoint channel.
<b>F07902 (N, A)</b>	<b>Drive: Motor stalled</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The system has identified that the motor has stalled for a time longer than is set in p2178. Fault value (r0949, interpret decimal): 1: Stall detection using r1408.11 (p1744, p0492). 2: Stall detection using r1408.12 (p1745) or via the flux difference (r0083 ... r0084). 3: Stall detection using r0056.11 (only for separately excited synchronous motors). See also: p1744 (Motor model speed threshold stall detection), p2178 (Motor stalled delay time)
<b>Remedy:</b>	It should always be carefully ensured that the motor data identification (p1910) as well as the rotating measurement (p1960) were carried out (also refer to r3925). For synchronous motors with encoder, the encoder must have been adjusted (p1990). For closed-loop speed and torque control with speed encoder, the following applies: - check the speed signal (interrupted cable, polarity, pulse number, broken encoder shaft). - check the speed encoder, if another speed encoder was selected using the data set changeover. This must be connected to the same motor that is controlled for the data set changeover. If there is no fault, then the fault tolerance (p1744 or p0492) can be increased. For resolvers with a high signal ripple, for example p0492 should be increased and the speed signal smoothed (p1441, p1442). If the stalled motor should take place in the range of the monitor model and for speeds of less than 30 % of the rated motor speed, then a change can be made directly from the current model into the flux impression (p1401.5 = 1). We therefore recommend that the time-controlled model change is switched in (p1750.4 = 1) or the model changeover limits are significantly increased (p1752 > 0.35 x p0311; p1753 = 5 %). - check the speed encoder, if another speed encoder was selected using the data set changeover. This must be connected to the motor that is controlled for the data set changeover. For closed-loop speed and torque control without speed encoder, the following applies: - check whether the drive stalls solely due to the load in controlled mode (r1750.0) or when the speed setpoint is still zero. If so, increase the current setpoint via p1610 or set p1750.2 = 1 (sensorless vector control to standstill for passive loads). - if the motor excitation time (p0346) was significantly reduced and the drive stalls when it is switched on and run immediately, p0346 should be increased again or quick magnetizing selected (p1401). - check the current controller (p1715, p1717) and the speed adaptation controller (p1764, p1767). If the dynamic response was significantly reduced, then this should be increased again. - if there is no fault, then the fault tolerance (p1745) or the delay time (p2178) can be increased.

## 4 Faults and alarms

### 4.2 List of faults and alarms

The following generally apply for closed-loop and torque control:

- check whether the motor cables are disconnected.
- check the current limits (p0640, r0067, r0289). If the current limits are too low, then the drive cannot be magnetized.
- if the fault occurs with fault value 2 when the motor accelerates very quickly to the field weakening range, the deviation between the flux setpoint and flux actual value can be reduced and, in turn, the message prevented, by reducing p1596 or p1553.

For separately excited synchronous motors (closed-loop control with speed encoder), the following applies:

- check the speed signal (interrupted cable, polarity, pulse number).
- ensure the correct motor parameterization (rating plate and equivalent circuit diagram parameters).
- check the excitation equipment and the interface to the closed-loop control.
- encoder the highest possible dynamic response of the closed-loop excitation current control.
- check the speed control for any tendency to oscillate and if resonance effects occur, use a bandstop filter.
- do not exceed the maximum speed (p2162).

If there is no fault, then the delay time can be increased (p2178).

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

#### **A07903 Drive: Motor speed deviation**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** Motor **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The absolute value of the speed difference from the two setpoints (p2151, p2154) and the speed actual value (r2169) exceeds the tolerance threshold (p2163) longer than tolerated (p2164, p2166).  
The alarm is only enabled for p2149.0 = 1.  
Possible causes could be:

- the load torque is greater than the torque setpoint.
- when accelerating, the torque/current/power limit is reached. If the limits are not sufficient, then it is possible that the drive has been dimensioned too small.
- for closed-loop torque control, the speed setpoint does not track the speed actual value.
- for active Vdc controller.

For U/f control, the overload condition is detected as the I<sub>max</sub> controller is active.  
See also: p2149 (Monitoring configuration)  
**Remedy:**

- increase p2163 and/or p2166.
- increase the torque/current/power limits.
- for closed-loop torque control: The speed setpoint should track the speed actual value.
- deactivate alarm with p2149.0 = 0.

---

#### **F07904 (N, A) External armature short-circuit: Contactor feedback signal "Closed" missing**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2 (NONE)  
**Acknowledge:** IMMEDIATELY  
**Cause:** When closing, the contactor feedback signal (p1235) did not issue the signal "Closed" (r1239.1 = 1) within the monitoring time (p1236).  
**Remedy:**

- check that the contactor feedback signal is correctly connected (p1235).
- check the logic of the contactor feedback signal (r1239.1 = 1: "Closed", r1239.1 = 0: "Open").
- increase the monitoring time (p1236).
- if required, set the external armature short-circuit without contactor feedback signal (p1231 = 2).

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F07905 (N, A) External armature short-circuit: Contactor feedback signal "Open" missing**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2 (NONE)  
**Acknowledge:** IMMEDIATELY  
**Cause:** When opening, the contactor feedback signal (p1235) did not issue the signal "Open" (r1239.1 = 0) within the monitoring time (p1236).  
**Remedy:**  
 - check that the contactor feedback signal is correctly connected (p1235).  
 - check the logic of the contactor feedback signal (r1239.1 = 1: "Closed", r1239.1 = 0: "Open").  
 - increase the monitoring time (p1236).  
 - if required, set the external armature short-circuit without contactor feedback signal (p1231 = 2).

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F07906 Armature short-circuit / internal voltage protection: Parameterization error**

**Message value:** Fault cause: %1, motor data set: %2  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** The armature short-circuit is incorrectly parameterized.  
 Fault value (r0949, interpret decimal):  
 zzzzyyxx: zzzz = fault cause, xx = motor data set  
 zzzz = 0001 hex = 1 dec:  
 A permanent-magnet synchronous motor has not been selected.  
 zzzz = 0002 hex = 2 dec:  
 No induction motor selected.  
 zzzz = 0065 hex = 101 dec:  
 External armature short-circuit: Output (r1239.0) not wired.  
 zzzz = 0066 hex = 102 dec:  
 External armature short-circuit with contactor feedback signal: No feedback signal connected (BI:p1235). The feedback signal must be interconnected in all command data sets (CDS).  
 zzzz = 0067 hex = 103 dec:  
 External armature short-circuit without contactor feedback signal: Wait time when opening (p1237) is 0.  
 zzzz = 00C9 hex = 201 dec:  
 Internal voltage protection: The maximum output current of the Motor Module (r0209) is less than 1.8 x motor short-circuit current (r0331).  
 zzzz = 00CA hex = 202 dec:  
 Internal voltage protection: A Motor Module in booksize or chassis format is not being used.  
 zzzz = 00CB hex = 203 dec:  
 Internal voltage protection: The motor short-circuit current (p0320) is greater than the maximum motor current (p0323).  
 zzzz = 00CC hex = 204 dec:  
 Internal voltage protection: The activation (p1231 = 4) is not given for all motor data sets with synchronous motors (p0300 = 2xx, 4xx).



---

<b>A07908</b>	<b>Internal armature short-circuit active</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The Motor Module signals that the motor is short-circuited through the power semiconductors (r1239.5 = 1). The pulses cannot be enabled. The internal armature short-circuit is selected (p1231 = 4):
<b>Remedy:</b>	For synchronous motors, the armature short-circuit braking is activated with binector input p1230 = 1 signal. See also: p1230 (Armature short-circuit / DC braking activation), p1231 (Armature short-circuit / DC braking configuration)

---

<b>F07909</b>	<b>Internal voltage protection: Deactivation only effective after POWER ON</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	The deactivation of the internal voltage protection (p1231 not equal to 3) only becomes effective after POWER ON. The status signal r1239.6 = 1 indicates that the internal voltage protection is ready.
<b>Remedy:</b>	Not necessary. This a note for the user.

---

<b>A07910 (N)</b>	<b>Drive: Motor overtemperature</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Motor overload (8)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	KTY84/PT1000 or no sensor: The measured motor temperature or temperature of motor temperature model 2 has exceeded the alarm threshold (p0604, p0616). The response parameterized in p0610 becomes active. PTC or bimetallic NC contact: The response threshold of 1650 Ohm was exceeded or the NC contact opened. Alarm value (r2124, interpret decimal): - SME not selected in p0601: 11: No output current reduction. 12: Output current reduction active. - SME or TM120 selected in p0601 (p0601 = 10, 11): this is the number of the temperature channel leading to the message. See also: p0604 (Mot_temp_mod 2: sensor alarm threshold), p0610 (Motor overtemperature response)
<b>Remedy:</b>	- check the motor load. - check the motor ambient temperature and cooling. - check PTC or bimetallic NC contact. - check the monitoring limits (p0604, p0605). - activate/check the parameters of the motor temperature model (p0612, p0626 and following). See also: p0612 (Mot_temp_mod activation), p0625 (Motor ambient temperature during commissioning), p0626 (Motor overtemperature, stator core), p0627 (Motor overtemperature, stator winding), p0628 (Motor overtemperature rotor)
<b>Reaction upon N:</b>	NONE
<b>Acknowl. upon N:</b>	NONE

<b>F07913</b>	<b>Excitation current outside the tolerance range</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The difference between the excitation current actual value and setpoint has exceeded the tolerance: $\text{abs}(r1641 - r1626) > p3201 + p3202$ The cause of this fault is again reset for $\text{abs}(r1641 - r1626) < p3201$ .
<b>Remedy:</b>	- check the parameterization (p1640, p3201, p3202). - check the interfaces to the excitation equipment (r1626, p1640). - check the excitation equipment.
<b>F07914</b>	<b>Flux out of tolerance</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The difference between the flux actual value and setpoint has exceeded the tolerance: $\text{abs}(r0084 - r1598) > p3204 + p3205$ The cause of this fault is again reset for $\text{abs}(r0084 - r1598) < p3204$ . The fault is only issued after the delay time in p3206 has expired.
<b>Remedy:</b>	- check the parameterization (p3204, p3205). - check the interfaces to the excitation equipment (r1626, p1640). - check the excitation equipment. - check the flux control (p1590, p1592, p1597). - check the control for oscillation and take the appropriate counter measures (e.g. optimize the speed control loop, parameterize a bandstop filter).
<b>A07918 (N)</b>	<b>Three-phase setpoint generator operation selected/active</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Only for separately excited synchronous motors (p0300 = 5): The actual open-loop/closed-loop control mode is I/f control (open-loop) with a fixed current (p1300 = 18). The speed is entered via the setpoint channel and the current setpoint is given by the minimum current (p1620). It must be ensured that in this mode, the control dynamic performance is very limited. This is the reason that longer ramp-up times should be set for the setpoint speed than for normal operation. See also: p1620 (Stator current minimum)
<b>Remedy:</b>	Select another open-loop/closed-loop control mode See also: p1300 (Open-loop/closed-loop control operating mode)
<b>Reaction upon N:</b>	NONE
<b>Acknowl. upon N:</b>	NONE

<b>A07920</b>	<b>Drive: Torque/speed too low</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The torque deviates from the torque/speed envelope characteristic (too low). See also: p2181 (Load monitoring response)
<b>Remedy:</b>	- check the connection between the motor and load. - adapt the parameterization corresponding to the load.
<b>A07921</b>	<b>Drive: Torque/speed too high</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The torque deviates from the torque/speed envelope characteristic (too high).
<b>Remedy:</b>	- check the connection between the motor and load. - adapt the parameterization corresponding to the load.
<b>A07922</b>	<b>Drive: Torque/speed out of tolerance</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The torque deviates from the torque/speed envelope characteristic.
<b>Remedy:</b>	- check the connection between the motor and load. - adapt the parameterization corresponding to the load.
<b>F07923</b>	<b>Drive: Torque/speed too low</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The torque deviates from the torque/speed envelope characteristic (too low).
<b>Remedy:</b>	- check the connection between the motor and load. - adapt the parameterization corresponding to the load.
<b>F07924</b>	<b>Drive: Torque/speed too high</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The torque deviates from the torque/speed envelope characteristic (too high).
<b>Remedy:</b>	- check the connection between the motor and load. - adapt the parameterization corresponding to the load.

---

**F07925 Drive: Torque/speed out of tolerance**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** Motor **Propagation:** GLOBAL  
**Reaction:** OFF1 (NONE, OFF2, OFF3)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The torque deviates from the torque/speed envelope characteristic.  
**Remedy:** - check the connection between the motor and load.  
- adapt the parameterization corresponding to the load.

---

**A07926 Drive: Envelope curve parameter invalid**

**Message value:** Parameter: %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** Invalid parameter values were entered for the envelope characteristic of the load monitoring.  
The following rules apply for the speed thresholds:  
p2182 < p2183 < p2184  
The following rules apply for the torque thresholds:  
p2185 > p2186  
p2187 > p2188  
p2189 > p2190  
Load monitoring configuration and response must match.  
It is not permissible that the individual load torque monitoring areas overlap.  
Alarm value (r2124, interpret decimal):  
Number of the parameter with the invalid value.  
Note:  
The load torque monitoring has not been activated as long as the alarm is active.  
**Remedy:** - set the parameters for the load monitoring according to the applicable rules.  
- if necessary, deactivate the load monitoring (p2181 = 0, p2193 = 0).

---

**A07927 DC braking active**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** Motor **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The motor is braked with DC current. DC braking is active.  
1)  
A message with response DCBRK is active. The motor is braked with the braking current set in p1232 for the duration set in p1233. If the standstill threshold p1226 is undershot, then braking is prematurely canceled.  
2)  
DC braking has been activated at binector input p1230 with the DC braking set (p1230 = 4). Braking current p1232 is injected until this binector input becomes inactive.  
**Remedy:** Not necessary.  
The alarm automatically disappears once DC braking has been executed.

---

<b>F07928</b>	<b>Internal voltage protection initiated</b>
<b>Message value:</b>	-
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Power Module
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The Motor Module signals that the motor is short-circuited through the power semiconductors (r1239.5 = 1). The pulses cannot be enabled. The internal voltage protection is selected (p1231 = 3).
<b>Remedy:</b>	If the Motor Module supports the autonomous internal voltage protection (r0192.10 = 1), then the Motor Module automatically decides - using the DC link voltage - as to whether the armature short-circuit should be activated. The armature short-circuit is activated and response OFF2 is initiated if the DC link voltage exceeds 800 V. If the DC link voltage falls below 450 V, then the armature short-circuit is withdrawn. If the motor is still in a critical speed range, the armature short-circuit is re-activated once the DC link voltage exceeds the threshold of 800 V. If the autonomous (independent) internal voltage protection is active (r1239.5 = 1) and the line supply returns (450 V < DC link voltage < 800 V), the armature short-circuit is withdrawn after 3 minutes.

---

<b>F07930</b>	<b>Drive: Brake control error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
<b>Reaction:</b>	OFF1 (NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The Control Unit has detected a brake control error. - motor cable is not shielded correctly. - defect in control circuit of the Motor Module. Fault value (r0949, interpret decimal): 10, 11: Fault in "open holding brake" operation. - no brake connected or wire breakage (check whether brake releases for p1278 = 1). - ground fault in brake cable. - S120M: brake opened via terminal X4.1 for mounting purposes (this is only permissible when the power supply voltage is switched off). 20: Fault in "brake open" state. - short-circuit in brake winding. 30, 31: Fault in "close holding brake" operation. - no brake connected or wire breakage (check whether brake releases for p1278 = 1). - short-circuit in brake winding. 40: Fault in "brake closed" state. 50: Fault in the brake control circuit of the Control Unit or communication fault between the Control Unit and Motor Module (brake control). 80: When using the Safe Brake Adapter (SBA), a fault has occurred in the brake control of the Control Unit. See also: p1278 (Brake control diagnostics evaluation)
<b>Remedy:</b>	- check the motor holding brake connection. - for a parallel connection, check the setting of the power unit data set to control the holding brake (p7015). - check the function of the motor holding brake. - check whether there is a DRIVE-CLiQ communication error between the Control Unit and the Motor Module involved and, if required, carry out a diagnostics routine for the faults identified.

## 4 Faults and alarms

### 4.2 List of faults and alarms

- check that the electrical cabinet design and cable routing are in compliance with EMC regulations (e.g. shield of the motor cable and brake conductors are connected with the shield connecting plate and the motor connectors are tightly screwed to the housing).

- replace the Motor Module involved.

Operation with Safe Brake Module:

- check the Safe Brake Module connection.

- replace the Safe Brake Module.

Operation with Safe Brake Module (SBA):

- check the SBA connection and if required, replace the SBA.

See also: p1215 (Motor holding brake configuration), p1278 (Brake control diagnostics evaluation)

---

#### A07931 (F, N)

#### Brake does not open

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** Motor

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** This alarm is output for r1229.4 = 1.

See also: p1216 (Motor holding brake opening time), r1229 (Motor holding brake status word)

**Remedy:** - check the functionality of the motor holding brake.

- check the feedback signal (p1223).

Reaction upon F: NONE (OFF1, OFF2, OFF3)

Acknowl. upon F: IMMEDIATELY

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### A07932

#### Brake does not close

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** VECTOR\_G

**Component:** Motor

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** This alarm is output for r1229.5 = 1.

For r1229.5 = 1, OFF1/OFF3 are suppressed to prevent the drive accelerating by a load that drives the motor - whereby OFF2 remains effective.

See also: p1217 (Motor holding brake closing time), r1229 (Motor holding brake status word)

**Remedy:** - check the functionality of the motor holding brake.

- check the feedback signal (p1222).

---

#### F07934 (N)

#### Drive: S120 Combi motor holding brake configuration

**Message value:** %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE (OFF1, OFF2, OFF3)

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** A connected motor holding brake has been detected with an S120 Combi. However, this brake has not been assigned to just one Combi feed drive and, therefore, brake control is not configured (correctly).

Fault value (r0949, interpret decimal):

0: No motor holding brake is assigned (p1215 = 0 or 3 on all S120 Combi feed drives).

1: More than one motor holding brake has been assigned (p1215 = 1 or 2 on more than one S120 Combi feed drive)

- or there is more than one DRIVE-CLiQ motor with motor holding brake.

2: Brake was accidentally assigned to the spindle (p1215 = 1); this is not permitted for this software release.  
 3: An attempt was made to enable the function "Safe brake control" (SBC, p9602 = p9802 = 1) for the spindle. This is not permitted for this software release.

**Remedy:**

Check whether the motor holding brake has been assigned to one S120 Combi feed drive exclusively (p1215 = 1 or 2).

The fault will only be withdrawn once the motor holding brake has been assigned to just one of the S120 Combi feed drives (p1215 = 1 or 2 for this one drive). From this point, the motor holding brake will be controlled by this drive.

See also: p1215 (Motor holding brake configuration)

Reaction upon N: NONE

Acknowl. upon N: NONE

**F07935 (N) Drive: Incorrect motor holding brake configuration**

**Message value:** %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE (OFF1, OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** An incorrect motor holding brake configuration was detected.

Fault value (r0949, interpret decimal):

0:

A motor holding brake was detected where the brake control has not been configured (p1215 = 0).

The brake control configuration was set to "motor holding brake the same as sequence control" (p1215 = 1) (only when commissioning for the first time).

For a chassis unit with Safe Brake Adapter (SBA), the interconnection p9621 = r9872.3 was established (only when commissioning for the first time).

For a parallel connection, the power unit was set in p7015, to which the motor holding brake is connected (only when commissioning for the first time).

1:

A motor holding brake was detected where the brake control has not been configured (p1215 = 0).

The brake control configuration was left at "No motor holding brake available" (p1215 = 0).

11:

The identification had detected more than one motor holding brake for a parallel connection.

12:

For the parallel connection, in p0121 there is no valid component number for the power unit data set that is set in p7015.

13:

With the "Safe brake control" (SBC) function activated, an attempt was made to change the value in p7015.

14:

For a parallel connection, the power units set in p7015 cannot be addressed.

**Remedy:**

For fault value = 0:

- no remedy required.

For fault value = 1:

- if required change the motor holding brake configuration (p1215 = 1, 2).

- if this fault value unexpectedly occurs, then the motor connections should be checked in order to rule out that they have been interchanged.

For fault value = 11:

For a parallel connection, only connect one motor holding brake.

For fault value = 12:

Check the setting of the power unit data set for a parallel connection (p7015).

For fault value = 13:

Before changing p7015, deactivate the "Safe brake control" function (SBC) (p9602).

For fault value = 14:

Check whether the power unit supports the brake control for a parallel connection (r9771.14).

Check whether there is a DRIVE-CLiQ communication error between the Control Unit and the power unit involved and, if required, carry out a diagnostics routine for the faults identified.

See also: p1215 (Motor holding brake configuration)

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon N: NONE  
Acknowl. upon N: NONE

---

<b>F07937 (N)</b>	<b>Drive: Speed deviation between motor model and external speed</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Motor	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE, OFF1, OFF3)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The absolute value of the speed difference from the two actual values (r2169, r1443) exceeds the tolerance threshold (p3236) for longer than permitted (p3238). Possible causes: <ul style="list-style-type: none"><li>- the interconnection or scaling of the external encoder signal is incorrect (p1440, p2000).</li><li>- speed encoder for external encoder signal faulty.</li><li>- encoder signal's polarity or gain incorrect.</li><li>- smoothing time constant for model speed for monitoring too high (p2157).</li><li>- smoothing time constant or threshold values for monitoring too low (p3236, p3238).</li></ul> If an external encoder signal is not being used: <ul style="list-style-type: none"><li>- check speed signal r0061. For significant signal ripple, check the speed encoder and if required increase p0492.</li></ul> See also: p2149 (Monitoring configuration)		
<b>Remedy:</b>	<ul style="list-style-type: none"><li>- check that the external speed matches the motor speed (p1440, r1443).</li><li>- check the polarity of the external speed (r1443).</li><li>- check the interconnection of the connector input and the scaling of the signal (p1440, p2000).</li></ul>		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>F07940</b>	<b>Sync-line-drive: Synchronizing error</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	After synchronization has been completed, the phase difference (r3808) is greater than the threshold value, phase synchronism (p3813). OFF1 or OFF3 response, while the closed-loop phase control is active (r3819.6 = 1) or synchronism reached (r3819.2 = 1). Enable signal withdrawn (p3802 = 0), while the closed-loop phase control was active (r3819.6 = 1).		
<b>Remedy:</b>	If required increase the threshold value phase synchronism (p3813) for synchronizing the line supply to the drive. Before OFF1 or OFF3, complete synchronizing (r03819.0 = 0). Before withdrawing the enable signal (p3802 = 0), reach synchronism (r3819.2 = 1). See also: p3813 (Sync-line-drive phase synchronism threshold value)		

---

<b>A07941</b>	<b>Sync-line-drive: Target frequency not permissible</b>		
<b>Message value:</b>	Parameter: %1		
<b>Message class:</b>	Application/technological function faulted (17)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The target frequency is outside the permissible value range. Alarm value (r2124, interpret decimal): 1084: Target frequency greater than the positive speed limit, $f_{sync} > f_{max}$ (r1084). 1087: Target frequency less than the negative speed limit, $f_{sync} < f_{min}$ (r1087).		



---

<b>F07950 (A)</b>	<b>Drive: Incorrect motor parameter</b>
<b>Message value:</b>	Parameter: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	- the motor parameters were incorrectly entered while commissioning (e.g. p0300 = 0, no motor) - the braking resistor has still not been parameterized - commissioning cannot be completed. Fault value (r0949, interpret decimal): Parameter number involved. 300 (CU250S-2): For this control mode, the motor type is not supported. 307: The following motor parameters could be incorrect: p0304, p0305, p0307, p0308, p0309 See also: p0300, p0301, p0304, p0305, p0307, p0310, p0311, p0314, p0316, p0320, p0322, p0323
<b>Remedy:</b>	Compare the motor data with the rating plate data and if required, correct. For fault value = 300 (CU250S-2): Operate a motor type supported by the selected control mode.
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F07955</b>	<b>Drive: Motor has been changed</b>
<b>Message value:</b>	Parameter: %1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The code number of the actual motor with DRIVE-CLiQ does not match the saved number. Fault value (r0949, interpret decimal): Number of the incorrect parameter. See also: p0301 (Motor code number selection), r0302 (Motor code number of motor with DRIVE-CLiQ)
<b>Remedy:</b>	Connect the original motor, switch on the Control Unit again (POWER ON) and exit quick commissioning with p0010 = 0. Or set p0300 = 10000 (load the parameters from the motor with DRIVE-CLiQ) and re-commission. Quick commissioning (p0010 = 1) is automatically exited with p3900 > 0. If quick commissioning was exited with p0010 = 0, then an automatic controller calculation (p0340 = 1) is not carried out.

---

<b>F07956 (A)</b>	<b>Drive: Motor code does not match the list (catalog) motor</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Motor
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The motor code of the connected motor with DRIVE-CLiQ does not match the possible list motor types (see selection in p0300). The connected motor with DRIVE-CLiQ might not be supported by this firmware version. Fault value (r0949, interpret decimal): Motor code of the connected motor with DRIVE-CLiQ. Note: The first three digits of the motor code generally correspond to the list motor type.

**Remedy:** Use a motor with DRIVE-CLiQ and the matching motor code.  
**Reaction upon A:** NONE  
**Acknowl. upon A:** NONE

---

**A07960 Drive: Incorrect friction characteristic**

**Message value:** Parameter: %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The friction characteristic is incorrect.  
Alarm value (r2124, interpret decimal):  
1538:  
The friction torque is greater than the maximum from the upper effective torque limit (p1538) and zero. This is the reason that the output of the friction characteristic (r3841) is limited to this value.  
1539:  
The friction torque is less than the minimum from the lower effective torque limit (p1539) and zero. This is the reason that the output of the friction characteristic (r3841) is limited to this value.  
3820 ... 3829:  
Incorrect parameter number. The speeds entered in the parameters for the friction characteristic do not correspond to the following condition:  
 $0.0 < p3820 < p3821 < \dots < p3829 \leq p0322$  or  $p1082$ , if  $p0322 = 0$   
Therefore the output of the friction characteristic (r3841) is set to zero.  
3830 ... 3839:  
Incorrect parameter number. The torques entered in the parameters for the friction characteristic do not correspond to the following condition:  
 $0 \leq p3830, p3831 \dots p3839 \leq p0333$   
Therefore the output of the friction characteristic (r3841) is set to zero.  
See also: r3840 (Friction characteristic status word)  
**Remedy:** Fulfill the conditions for the friction characteristic.  
For alarm value = 1538:  
Check the upper effective torque limit (e.g. in the field weakening range).  
For alarm value = 1539:  
Check the lower effective torque limit (e.g. in the field weakening range).  
For alarm value = 3820 ... 3839:  
Fulfill the conditions to set the parameters of the friction characteristic.  
If the motor data (e.g. the maximum speed p0322) are changed during commissioning ( $p0010 = 1, 3$ ), then the technological limits and threshold values, dependent on this, must be re-calculated by selecting  $p0340 = 5$ .

---

**A07961 Drive: Friction characteristic record activated**

**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The automatic friction characteristic record is activated.  
The friction characteristic is recorded at the next switch-on command.  
When plotting the friction characteristic, it is not possible to save the parameters (p0971, p0977).  
**Remedy:** Not necessary.  
The alarm disappears automatically after the friction characteristic record has been successfully completed or the record is deactivated ( $p3845 = 0$ ).

---

<b>F07963</b>	<b>Drive: Friction characteristic record interrupted</b>		
<b>Message value:</b>	Parameter: %1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The conditions to record the friction characteristic are not fulfilled. Fault value (r0949, interpret decimal): 0046: Missing enable signals (r0046). 1082: The highest speed value to be approached (p3829) is greater than the maximum speed (p1082). 1084: The highest speed value to be approached (p3829) is greater than the maximum speed (r1084, p1083, p1085). 1087: The highest speed value to be approached (p3829) is greater than the maximum speed (r1087, p1086, p1088). 1110: Friction characteristic record, negative direction selected (p3845) and negative direction inhibited (p1110). 1111: Friction characteristic record, positive direction selected (p3845) and positive direction inhibited (p1111). 1198: Friction characteristic record selected (p3845 > 0) and negative (p1110) and positive directions (p1111) inhibited (r1198). 1300: The control mode (p1300) has not been set to closed-loop speed control. 1755: For encoderless closed-loop control (p1300 = 20), the lowest speed value to be approached (p3820) is less than or equal to the changeover speed, open-loop controlled operation (p1755). 1910: Motor data identification activated. 1960: Speed controller optimization activated. 3820 ... 3829: speed (p382x) cannot be approached. 3840: Friction characteristic incorrect. 3845: Friction characteristic record de-selected.		
<b>Remedy:</b>	Fulfill the conditions to record the friction characteristic. For fault value = 0046: - establish missing enable signals. For fault value = 1082, 1084, 1087: - Select the highest speed value to be approached (p3829) less than or equal to the maximum speed (p1082, r1084, r1087). - Re-calculate the speed points along the friction characteristic (p0340 = 5). For fault value = 1110: - Select the friction characteristic record, positive direction (p3845). For fault value = 1111: - Select the friction characteristic record, negative direction (p3845). For fault value = 1198: - Enable the permitted direction (p1110, p1111, r1198). For fault value = 1300: - set the control mode (p1300) on the closed-loop speed control (p1300 = 20, 21). For fault value = 1755: - For encoderless closed-loop speed control (p1300 = 20) select the lowest speed value to be approached (p3820) greater than the changeover speed of open-loop controlled operation (p1755). - Re-calculate the speed points along the friction characteristic (p0340 = 5). For fault value = 1910: - Exit the motor data identification routine (p1910). For fault value = 1960: - Exit the speed controller optimization routine (p1960). For fault value 3820 ... 3829: - check the load at speed p382x. - check the speed signal (r0063) for oscillation at speed p382x. Check the settings of the speed controller if applicable.		

For fault value = 3840:

- Make the friction characteristic error-free (p3820 ... p3829, p3830 ... p3839, p3840).

For fault value = 3845:

- Activate the friction characteristic record (p3845).

---

**F07967 Drive: Automatic encoder adjustment/pole position identification incorrect**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2 (NONE, OFF1)  
**Acknowledge:** IMMEDIATELY  
**Cause:** A fault has occurred during the automatic encoder adjustment or the pole position identification.  
 Only for internal Siemens troubleshooting.  
**Remedy:** Carry out a POWER ON.

---

**F07968 Drive: Lq-Ld measurement incorrect**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** A fault has occurred during the Lq-Ld measurement.  
 Fault value (r0949, interpret decimal):  
 10: Stage 1: The ratio between the measured current and zero current is too low.  
 12: Stage 1: The maximum current was exceeded.  
 15: Second harmonic too low.  
 16: Drive converter too small for the measuring technique.  
 17: Abort due to pulse inhibit.  
**Remedy:** For fault value = 10:  
 Check whether the motor is correctly connected.  
 Replace the power unit involved.  
 Deactivate technique (p1909).  
 For fault value = 12:  
 Check whether motor data have been correctly entered.  
 Deactivate technique (p1909).  
 For fault value = 16:  
 Deactivate technique (p1909).  
 For fault value = 17:  
 Repeat technique.

---

**F07969 Drive: Incorrect pole position identification**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** A fault has occurred during the pole position identification routine.  
 Fault value (r0949, interpret decimal):  
 1: Current controller limited  
 2: Motor shaft locked.  
 4: Encoder speed signal not plausible.  
 10: Stage 1: The ratio between the measured current and zero current is too low.

- 11: Stage 2: The ratio between the measured current and zero current is too low.
- 12: Stage 1: The maximum current was exceeded.
- 13: Stage 2: The maximum current was exceeded.
- 14: Current difference to determine the +d axis too low.
- 15: Second harmonic too low.
- 16: Drive converter too small for the measuring technique.
- 17: Abort due to pulse inhibit.
- 18: First harmonic too low.
- 20: Pole position identification requested with the motor shaft rotating and activated "flying restart" function.

**Remedy:**

For fault value = 1:

- check whether the motor is correctly connected.
- check whether motor data have been correctly entered.
- replace the Motor Module involved.

For fault value = 2:

- open the motor holding brake (p1215 = 2) and bring the motor into a no-load condition.

For fault value = 4:

- check whether the encoder pulse number (p0408) and gearbox ratio (p0432, p0433) are correct.
- check whether the motor pole pair number is correct (p0314).

For fault value = 10:

- when selecting p1980 = 4: increase the value for p0325.
- when selecting p1980 = 1: increase the value for p0329.
- check whether the motor is correctly connected.
- replace the Motor Module involved.

For fault value = 11:

- increase the value for p0329.
- check whether the motor is correctly connected.
- replace the Motor Module involved.

For fault value = 12:

- when selecting p1980 = 4: reduce the value for p0325.
- when selecting p1980 = 1: reduce the value for p0329 (minimum, p0305).
- if p0329 = p0305: then reduce p0356, p0357.
- check whether motor data have been correctly entered.

For fault value = 13:

- reduce the value for p0329.
- check whether motor data have been correctly entered.

For fault value = 14:

- increase the value for p0329.
- motor not sufficiently anisotropic, change the technique (p1980 = 1, 10).

For fault value = 15:

- increase the value for p0325.
- motor not sufficiently anisotropic, change the technique (p1980 = 1, 10).

For fault value = 16:

- deactivate the technique (p1982).

For fault value = 17:

- the same as fault value 12 – or repeat the technique.

For fault value = 18:

- increase the value for p0329.
- saturation not sufficient, change the technique (p1980 = 10).

For fault value = 20:

- before carrying out a pole position identification routine ensure that the motor shaft is absolutely stationary (zero speed).

---

<b>F07970</b>	<b>Drive: Automatic encoder adjustment incorrect</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	A fault has occurred during the automatic encoder adjustment. Fault value (r0949, interpret decimal): 1: Current controller limited 2: Motor shaft locked. 4: Encoder speed signal not plausible. 5: Deselect U/f (p1300) or deactivate encoder calibration (p1990). 10: Stage 1: The ratio between the measured current and zero current is too low. 11: Stage 2: The ratio between the measured current and zero current is too low. 12: Stage 1: The maximum current was exceeded. 13: Stage 2: The maximum current was exceeded. 14: Current difference to determine the +d axis too low. 15: Second harmonic too low. 16: Drive converter too small for the measuring technique. 17: Abort due to pulse inhibit.		
<b>Remedy:</b>	For fault value = 1: Check whether the motor is correctly connected. Check whether motor data have been correctly entered. Replace the power unit involved. For fault value = 2: Open the motor holding brake (p1215 = 2) and bring the motor into a no-load condition. For fault value = 4: Check whether the speed actual value inversion is correct (p0410.0). Check whether the motor is correctly connected. Check whether the encoder pulse number (p0408) and gearbox factor (p0432, p0433) are correct. Check whether the motor pole pair number is correct (p0314). For fault value = 5: Deselect U/f (p1300) or deactivate encoder calibration (p1990). For fault value = 10: Increase the value for p0325. Check whether the motor is correctly connected. Replace the power unit involved. For fault value = 11: Increase the value for p0329. Check whether the motor is correctly connected. Replace the power unit involved. For fault value = 12: Reduce the value for p0325. Check whether motor data have been correctly entered. For fault value = 13: Reduce the value for p0329. Check whether motor data have been correctly entered. For fault value = 14: Increase the value for p0329. For fault value = 15: Increase the value for p0325.		

## 4 Faults and alarms

### 4.2 List of faults and alarms

For fault value = 16:  
Deactivate technique (p1982).  
For fault value = 17:  
Repeat technique.

---

<b>A07971 (N)</b>	<b>Drive: Angular commutation offset determination activated</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The automatic determination of the angular commutation offset (encoder adjustment) is activated (p1990 = 1, 3). Note: The automatic determination is carried out at the next switch-on command. See also: p1990 (Encoder adjustment determine angular commutation offset)		
<b>Remedy:</b>	Not necessary. The alarm automatically disappears after determination or for the setting p1990 = 0.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A07975 (N)</b>	<b>Drive: Travel to the zero mark - setpoint input expected</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The zero mark must be evaluated in order to adjust the encoder. It is expected that a speed or torque setpoint is entered. See also: p1990 (Encoder adjustment determine angular commutation offset)		
<b>Remedy:</b>	Not necessary. The alarm disappears once the zero mark has been detected.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A07976</b>	<b>Drive: Fine encoder calibration activated</b>		
<b>Message value:</b>	Parameter: %1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The alarm indicates the phases of the fine encoder calibration using the alarm value. Alarm value (interpret decimal): 1: Fine encoder calibration active. 2: Rotating measurement started (set the setpoint speed > 40 % rated motor speed). 3: Rotating measurement lies within the speed and torque range. 4: Rotating measurement successful: pulse inhibit can be initiated to accept the values. 5: Fine encoder calibration is calculated. 10: Speed too low, rotating measurement interrupted. 12: Torque too high, rotating measurement interrupted. See also: p1905 (Parameter tuning selection)		

**Remedy:** For alarm value = 10:  
Increase the speed.  
For alarm value = 12:  
Bring the drive into a no-load condition.

---

**A07980 Drive: Rotating measurement activated**  
**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The rotating measurement (automatic speed controller optimization) is activated.  
The rotating measurement is carried out at the next switch-on command.  
**Note:**  
During the rotating measurement it is not possible to save the parameters (p0971, p0977).  
See also: p1960 (Rotating measurement selection)  
**Remedy:** Not necessary.  
The alarm disappears automatically after the speed controller optimization has been successfully completed or for the setting p1900 = 0.

---

**A07981 Drive: Enable signals for the rotating measurement missing**  
**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The rotating measurement cannot be started due to missing enable signals.  
For p1959.13 = 1, the following applies:  
- enable signals for the ramp-function generator missing (see p1140 ... p1142).  
- enable signals for the speed controller integrator missing (see p1476, p1477).  
**Remedy:** - acknowledge faults that are present.  
- establish missing enable signals.  
See also: r0002, r0046

---

**F07982 Drive: Rotating measurement encoder test**  
**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF1 (NONE, OFF2)  
**Acknowledge:** IMMEDIATELY  
**Cause:** A fault has occurred during the encoder test.  
Fault value (r0949, interpret decimal):  
1: The speed did not reach a steady-state condition.  
2: The speed setpoint was not able to be approached as the minimum limiting is active.  
3: The speed setpoint was not able to be approached as the suppression (skip) bandwidth is active.  
4: The speed setpoint was not able to be approached as the maximum limiting is active.  
5: The encoder does not supply a signal.  
6: Incorrect polarity.  
7: Incorrect pulse number.  
8: Noise in the encoder signal or speed controller unstable.  
9: Voltage Sensing Module (VSM) incorrectly connected.

- Remedy:**
- For fault value = 1:
    - check the motor parameters.
    - carry out a motor data identification routine (p1910).
    - if required, reduce the dynamic factor (p1967 < 25 %).
  - For fault value = 2:
    - adapt the speed setpoint (p1965) or adapt the minimum limit (p1080).
  - For fault value = 3:
    - adapt the speed setpoint (p1965) or suppression (skip) bandwidths (p1091 ... p1094, p1101).
  - For fault value = 4:
    - adapt the speed setpoint (p1965) or maximum limit (p1082, p1083 and p1086).
  - For fault value = 5:
    - check the encoder connection. If required, replace the encoder.
  - For fault value = 6:
    - check the connection assignment of the encoder cable. Adapt the polarity (p0410).
  - For fault value = 7:
    - adapt the pulse number (p0408).
  - For fault value = 8:
    - check the encoder connection and encoder cable. It is possible that there is a problem associated with the ground connection.
    - reduce the dynamic response of the speed controller (p1460, p1462 and p1470, p1472).
  - For fault value = 9:
    - check the connections of the Voltage Sensing Module (VSM).
- Note:**  
 The encoder test can be switched out (disabled) using p1959.0.  
 See also: p1959 (Rotating measurement configuration)

---

<b>F07983</b>	<b>Drive: Rotating measurement saturation characteristic</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (NONE, OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	A fault has occurred while determining the saturation characteristic. Fault value (r0949, interpret decimal): 1: The speed did not reach a steady-state condition. 2: The rotor flux did not reach a steady-state condition. 3: The adaptation circuit did not reach a steady-state condition. 4: The adaptation circuit was not enabled. 5: Field weakening active. 6: The speed setpoint was not able to be approached as the minimum limiting is active. 7: The speed setpoint was not able to be approached as the suppression (skip) bandwidth is active. 8: The speed setpoint was not able to be approached as the maximum limiting is active. 9: Several values of the determined saturation characteristic are not plausible. 10: Saturation characteristic could not be sensibly determined because load torque too high.		
<b>Remedy:</b>	For fault value = 1: - the total drive moment of inertia is far higher than that of the motor (p0341, p0342). De-select rotating measurement (p1960), enter the moment of inertia p0342, re-calculate the speed controller p0340 = 4 and repeat the measurement. For fault value = 1 ... 2: - increase the measuring speed (p1961) and repeat the measurement.		

For fault value = 1 ... 4:

- check the motor parameters (rating plate data). After the change: Calculate p0340 = 3.
- check the moment of inertia (p0341, p0342). After the change: Calculate p0340 = 3.
- carry out a motor data identification routine (p1910).
- if required, reduce the dynamic factor (p1967 < 25 %).

For fault value = 5:

- the speed setpoint (p1961) is too high. Reduce the speed.

For fault value = 6:

- adapt the speed setpoint (p1961) or minimum limiting (p1080).

For fault value = 7:

- adapt the speed setpoint (p1961) or suppression (skip) bandwidths (p1091 ... p1094, p1101).

For fault value = 8:

- adapt the speed setpoint (p1961) or maximum limit (p1082, p1083 and p1086).

For fault value = 9, 10:

- the measurement was carried out at an operating point where the load torque is too high. Select a more suitable operating point, either by changing the speed setpoint (p1961) or by reducing the load torque. The load torque may not be varied while making measurements.

Note:

The saturation characteristic identification routine can be disabled using p1959.1.

See also: p1959 (Rotating measurement configuration)

<b>F07984</b>	<b>Drive: Speed controller optimization, moment of inertia</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (NONE, OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	<p>A fault has occurred while identifying the moment of inertia.</p> <p>Fault value (r0949, interpret decimal):</p> <ol style="list-style-type: none"> <li>1: The speed did not reach a steady-state condition.</li> <li>2: The speed setpoint was not able to be approached as the minimum limiting is active.</li> <li>3: The speed setpoint was not able to be approached as the suppression (skip) bandwidth is active.</li> <li>4: The speed setpoint was not able to be approached as the maximum limiting is active.</li> <li>5: It is not possible to increase the speed by 10% as the minimum limiting is active.</li> <li>6: It is not possible to increase the speed by 10% as the suppression (skip) bandwidth is active.</li> <li>7: It is not possible to increase the speed by 10% as the maximum limiting is active.</li> <li>8: The torque difference after the speed setpoint step is too low in order to be able to still reliably identify the moment of inertia.</li> <li>9: Too few data to be able to reliably identify the moment of inertia.</li> <li>10: After the setpoint step, the speed either changed too little or in the incorrect direction.</li> <li>11: The identified moment of inertia is not plausible. The measured moment of inertia is less than the 0.05x or greater than 500x the preset moment of inertia of the motor p0341.</li> </ol>		
<b>Remedy:</b>	<p>For fault value = 1:</p> <ul style="list-style-type: none"> <li>- check the motor parameters (rating plate data). After the change: Calculate p0340 = 3.</li> <li>- check the moment of inertia (p0341, p0342). After the change: Calculate p0340 = 3.</li> <li>- carry out a motor data identification routine (p1910).</li> <li>- if required, reduce the dynamic factor (p1967 &lt; 25 %).</li> </ul> <p>For fault value = 2, 5:</p> <ul style="list-style-type: none"> <li>- adapt the speed setpoint (p1965) or adapt the minimum limit (p1080).</li> </ul> <p>For fault value = 3, 6:</p> <ul style="list-style-type: none"> <li>- adapt the speed setpoint (p1965) or suppression (skip) bandwidths (p1091 ... p1094, p1101).</li> </ul> <p>For fault value = 4, 7:</p> <ul style="list-style-type: none"> <li>- adapt the speed setpoint (p1965) or maximum limit (p1082, p1083 and p1086).</li> </ul>		

## 4 Faults and alarms

### 4.2 List of faults and alarms

For fault value = 8:

- the total drive moment of inertia is far higher than that of the motor (refer to p0341, p0342). De-select rotating measurement (p1960), enter the moment of inertia p0342, re-calculate the speed controller p0340 = 4 and repeat the measurement.

For fault value = 9:

- check the moment of inertia (p0341, p0342). After the change, re-calculate (p0340 = 3 or 4).

For fault value = 10:

- check the moment of inertia (p0341, p0342). After the change: Calculate p0340 = 3.

For fault value = 11:

- reduce the moment of inertia of the motor p0341 (e.g. by a factor of 0.2) or increase (e.g. by a factor of 5) and repeat the measurement.

Note:

The moment of inertia identification routine can be disabled using p1959.2.

See also: p1959 (Rotating measurement configuration)

---

#### F07985

#### Drive: Speed controller optimization (oscillation test)

**Message value:** %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** OFF1 (NONE, OFF2)

**Acknowledge:** IMMEDIATELY

**Cause:** A fault has occurred during the vibration test.

Fault value (r0949, interpret decimal):

1: The speed did not reach a steady-state condition.

2: The speed setpoint was not able to be approached as the minimum limiting is active.

3: The speed setpoint was not able to be approached as the suppression (skip) bandwidth is active.

4: The speed setpoint was not able to be approached as the maximum limiting is active.

5: Torque limits too low for a torque step.

6: No suitable speed controller setting was found.

**Remedy:**

For fault value = 1:

- check the motor parameters (rating plate data). After the change: Calculate p0340 = 3.

- check the moment of inertia (p0341, p0342). After the change: Calculate p0340 = 3.

- carry out a motor data identification routine (p1910).

- if required, reduce the dynamic factor (p1967 < 25 %).

For fault value = 2:

- adapt the speed setpoint (p1965) or adapt the minimum limit (p1080).

For fault value = 3:

- adapt the speed setpoint (p1965) or suppression (skip) bandwidths (p1091 ... p1094, p1101).

For fault value = 4:

- adapt the speed setpoint (p1965) or maximum limit (p1082, p1083 and p1086).

For fault value = 5:

- increase the torque limits (e.g. p1520, p1521).

For fault value = 6:

- reduce the dynamic factor (p1967).

- disable the vibration test (p1959.4 = 0) and repeat the rotating measurement.

See also: p1959 (Rotating measurement configuration)

<b>F07986</b>	<b>Drive: Rotating measurement ramp-function generator</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (NONE, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	During the rotating measurements, problems with the ramp-function generator occurred. Fault value (r0949, interpret decimal): 1: The positive and negative directions are inhibited.
<b>Remedy:</b>	For fault value = 1: Enable the direction (p1110 or p1111).
<b>A07987</b>	<b>Drive: Rotating measurement, no encoder available</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	No encoder available. The rotating measurement was carried out without encoder.
<b>Remedy:</b>	Connect encoder or select p1960 = 1, 3.
<b>F07988</b>	<b>Drive: Rotating measurement, no configuration selected</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	When configuring the rotating measurement (p1959), no function was selected.
<b>Remedy:</b>	Select at least one function for automatic optimization of the speed controller (p1959). See also: p1959 (Rotating measurement configuration)
<b>F07989</b>	<b>Drive: Rotating measurement leakage inductance (q-axis)</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (NONE, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	An error has occurred while measuring the dynamic leakage inductance. Fault value (r0949, interpret decimal): 1: The speed did not reach a steady-state condition. 2: The speed setpoint was not able to be approached as the minimum limiting is active. 3: The speed setpoint was not able to be approached as the suppression (skip) bandwidth is active. 4: The speed setpoint was not able to be approached as the maximum limiting is active. 5: The 100% flux setpoint was not reached. 6: No Lq measurement possible because field weakening is active. 7: Speed actual value exceeds the maximum speed p1082 or 75% of the rated motor speed. 8: Speed actual value is below 2 % of the rated motor speed.
<b>Remedy:</b>	For fault value = 1: - check the motor parameters. - carry out a motor data identification routine (p1910). - if required, reduce the dynamic factor (p1967 < 25 %).

For fault value = 2:

- adapt the speed setpoint (p1965) or adapt the minimum limit (p1080).

For fault value = 3:

- adapt the speed setpoint (p1965) or suppression (skip) bandwidths (p1091 ... p1094, p1101).

For fault value = 4:

- adapt the speed setpoint (p1965) or maximum limit (p1082, p1083 and p1086).

For fault value = 5:

- flux setpoint p1570 = 100 % and current setpoint p1610 = 0 % kept during the Lq measurement.

For fault value = 6:

- reduce the regenerative load so that the drive does not reach field weakening when accelerating.

- reduce p1965 so that the q leakage inductance is recorded at lower speeds.

For fault value = 7:

- increase p1082, if this is technically permissible.

- reduce p1965 so that the q leakage inductance is recorded at lower speeds.

For fault value = 8:

- reduce the load when motoring so that the drive is not braked.

- increase p1965 so that the measurement may be taken at higher speeds.

Note:

The measurement of the q leakage inductance can be disabled using p1959.5. If only p1959.5 is set, then only this measurement is carried out if p1960 is set to 1, 2 and the drive is switched on.

See also: p1959 (Rotating measurement configuration)

<b>F07990</b>	<b>Drive: Incorrect motor data identification</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Motor	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2 (NONE, OFF1)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	<p>A fault has occurred during the identification routine.</p> <p>Fault value (r0949, interpret decimal):</p> <p>1: Current limit value reached.</p> <p>2: Identified stator resistance lies outside the expected range 0.02 ... 100% of Zn.</p> <p>3: Identified rotor resistance lies outside the expected range 0.1 ... 100% of Zn. Separately excited synchronous motors: damping resistance outside 1.0 ...15 % of Zn.</p> <p>4: Identified stator reactance lies outside the expected range 50 ... 900 % of Zn. Separately excited synchronous motors: stator reactance outside 20 ...500 % of Zn.</p> <p>5: Identified magnetizing reactance lies outside the expected range 50 ... 900 % of Zn. Separately excited synchronous motors: magnetizing reactance outside 20 ...500 % of Zn.</p> <p>6: Identified rotor time constant lies outside the expected range 10 ms ... 5 s. Separately excited synchronous motors: damping time constant outside of 5 ms ... 1 s.</p> <p>7: Identified total leakage reactance lies outside the expected range 4 ... 100 % of Zn.</p> <p>8: Identified stator leakage reactance lies outside the expected range 2 ... 50% of Zn. Separately excited synchronous motors: stator leakage reactance outside 2 ...40 % of Zn.</p> <p>9: Identified rotor leakage reactance lies outside the expected range 2 ... 50% of Zn. Separately excited synchronous motors: damping leakage reactance outside 1.5 ...20 % of Zn.</p> <p>10: Motor has been incorrectly connected.</p> <p>11: Motor shaft rotates.</p> <p>12: Ground fault detected.</p> <p>15: Pulse inhibit occurred during motor data identification.</p> <p>16: during the Rs measurement an error occurred when activating one or several power modules connected in parallel.</p> <p>17: after the Rs measurement an error occurred when activating one or several power modules connected in parallel.</p> <p>20: Identified threshold voltage of the semiconductor devices lies outside the expected range 0 ... 10 V.</p> <p>30: Current controller in voltage limiting.</p> <p>40: At least one identification contains errors. The identified parameters are not saved to prevent inconsistencies.</p>		

50: The selected sampling time is too low for the motor identification (p0115[0]).

70: Identification of the circle center point canceled (reluctance motor).

Note:

Percentage values are referred to the rated motor impedance:

$$Z_n = V_{\text{mot,nom}} / \sqrt{3} / I_{\text{mot,nom}}$$

**Remedy:**

For fault value = 1 ... 40:

- check whether motor data have been correctly entered in p0300, p0304 ... p0311.

- is there an appropriate relationship between the motor power rating and that of the Motor Module? The ratio of the Motor Module to the rated motor current should not be less than 0.5 and not be greater than 4.

- check connection type (star-delta).

For fault value = 11 in addition:

- deactivate oscillation monitoring (p1909.7 = 1).

For fault value = 2:

- for parallel circuits, check the motor winding system in p7003. If, for power units connected in parallel, a motor is specified with a single-winding system (p7003 = 0), although a multi-winding system is being used, then a large proportion of the stator resistance is interpreted as feeder cable resistance and entered in p0352.

For fault value = 4, 7:

- check whether inductances are correctly set in p0233 and p0353.

- check whether motor has been correctly connected (star-delta).

- set p1909.0 = 1.

For fault value = 12:

- check the power cable connections.

- check the motor.

- check the CT.

For fault value = 50:

- perform a motor data identification with a higher sampling time, and after this, change to the required higher sampling time (p0115[0]).

---

**A07991 (N)**

**Drive: Motor data identification activated**

**Message value:**

-

**Message class:**

Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:**

VECTOR\_G

**Component:**

None

**Propagation:**

GLOBAL

**Reaction:**

NONE

**Acknowledge:**

NONE

**Cause:**

The motor data identification routine is activated.

The motor data identification routine is carried out at the next switch-on command.

If rotating measurement is selected (see p1900, p1960), it will not be possible to save the parameter assignment.

Once motor data identification has been completed or deactivated, the option to save the parameter assignment will be made available again.

See also: p1910 (Motor data identification selection)

**Remedy:**

Not necessary.

The alarm automatically disappears after the motor data identification routine has been successfully completed or for the setting p1900 = 0.

Reaction upon N:

NONE

Acknowl. upon N:

NONE

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>A07994 (F, N)</b>	<b>Drive: motor data identification not performed</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The "vector control" mode has been selected and a motor data identification has still not been performed. The alarm is initiated when changing the drive data set (see r0051) in the following cases: - vector control is parameterized in the actual drive data set (p1300 >= 20). and - motor data identification has still not been performed in the actual drive data set (see r3925). Note: For SINAMICS G120, a check is made and an alarm is output also when exiting commissioning and when the system powers up.		
<b>Remedy:</b>	- Perform motor data identification (see p1900). - if required, parameterize "U/f control" (p1300 < 20). - switch over to a drive data set, in which the conditions do not apply.		
Reaction upon F:	NONE (OFF2)		
Acknowl. upon F:	IMMEDIATELY		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>F08000 (N, A)</b>	<b>TB: +/-15 V power supply faulted</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Controller Extension (CX)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	Terminal Board 30 detects an incorrect internal power supply voltage. Fault value (r0949, interpret decimal): 0: Error when testing the monitoring circuit. 1: Fault in normal operation.		
<b>Remedy:</b>	- replace Terminal Board 30. - replace Control Unit.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F08010 (N, A)</b>	<b>TB: Analog-digital converter</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Controller Extension (CX)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The analog/digital converter on Terminal Board 30 has not supplied any converted data.		
<b>Remedy:</b>	- check the power supply. - replace Terminal Board 30.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

Reaction upon A: NONE  
Acknowl. upon A: NONE

**F08500 (A) COMM BOARD: Monitoring time configuration expired**  
**Message value:** %1  
**Message class:** Communication error to the higher-level control system (9)  
**Drive object:** All objects  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** Vector: OFF1 (OFF2, OFF3)  
Infeed: OFF1 (OFF2)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The monitoring time for the configuration has expired.  
Fault value (r0949, interpret decimal):  
0: The transfer time of the send configuration data has been exceeded.  
1: The transfer time of the receive configuration data has been exceeded.  
**Remedy:** Check communications link.  
Reaction upon A: NONE  
Acknowl. upon A: NONE

**F08501 (N, A) PN/COMM BOARD: Setpoint timeout**  
**Message value:** -  
**Message class:** Communication error to the higher-level control system (9)  
**Drive object:** B\_INF, ENC, TM120, TM150, TM31, VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** Vector: OFF3 (IASC/DCBRK, NONE, OFF1, OFF2, STOP2)  
Infeed: OFF1 (OFF2)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The reception of setpoints from the COMM BOARD has been interrupted.  
- bus connection interrupted.  
- controller switched off.  
- controller set into the STOP state.  
- COMM BOARD defective.  
**Remedy:** - Restore the bus connection and set the controller to RUN.  
- if the error is repeated, check the update time set in the bus configuration (HW Config).  
See also: p8840 (COMM BOARD monitoring time)  
Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

**F08502 (A) PN/COMM BOARD: Monitoring time sign-of-life expired**  
**Message value:** -  
**Message class:** Communication error to the higher-level control system (9)  
**Drive object:** All objects  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** Vector: OFF1 (OFF2, OFF3)  
Infeed: OFF1 (OFF2)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The monitoring time for the sign-of-life counter has expired.  
The connection to the COMM BOARD was interrupted.  
**Remedy:** - check communications link.  
- check COMM BOARD.  
Reaction upon A: NONE  
Acknowl. upon A: NONE

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>A08504 (F)</b>	<b>PN/COMM BOARD: Internal cyclic data transfer error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Communication error to the higher-level control system (9)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The cyclic actual and/or setpoint values were not transferred within the specified times. Alarm value (r2124, interpret decimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	Check the parameterizing telegram (Ti, To, Tdp, etc.).		
Reaction upon F:	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY		

---

<b>F08510 (A)</b>	<b>PN/COMM BOARD: Send configuration data invalid</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF1 (OFF2, OFF3) Infeed: OFF1 (OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	COMM BOARD did not accept the send-configuration data. Fault value (r0949, interpret decimal): Return value of the send-configuration data check.		
<b>Remedy:</b>	Check the send configuration data.		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>A08511 (F)</b>	<b>PN/COMM BOARD: Receive configuration data invalid</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The drive unit did not accept the receive configuration data. Alarm value (r2124, interpret decimal): Return value of the receive configuration data check. 1: Connection established to more drive objects than configured in the device. The drive objects for process data exchange and their sequence are defined in p0978. 2: Too many PZD data words for output or input to a drive object. The number of possible PZD items in a drive object is determined by the number of indices in r2050/p2051 for PZD IF1, and in r8850/p8851 for PZD IF2. 3: Uneven number of bytes for input or output. 4: Setting data for synchronization not accepted. For more information, see A01902. 5: Cyclic operation not active. 17: CBE20 Shared Device: Configuration of the F-CPU has been changed. 223: Illegal clock synchronization for the PZD interface set in p8815[0]. 500: Illegal PROFIsafe configuration for the interface set in p8815[1]. 501: PROFIsafe parameter error (e.g. F_dest). 503: PROFIsafe connection is rejected as long as there is no isochronous connection (p8969). Additional values: Only for internal Siemens troubleshooting.		

**Remedy:** Check the receive configuration data.  
 For alarm value = 1, 2:  
 - check the list of the drive objects with process data exchange (p0978). With p0978[x] = 0, all of the following drive objects in the list are excluded from the process data exchange.  
 For alarm value = 2:  
 - check the number of data words for output and input to a drive object.  
 For alarm value = 17:  
 - CBE20 Shared Device: Unplug/plug A-CPU.  
 For alarm value = 223, 500:  
 - check the setting in p8839 and p8815.  
 - ensure that only one PZD interface is operated in clock synchronism or with PROFIsafe.  
 For alarm value = 501:  
 - check the set PROFIsafe address (p9610).

Reaction upon F: Vector: NONE (OFF1, OFF2, OFF3)  
 Infeed: NONE (OFF1, OFF2)

Acknowl. upon F: IMMEDIATELY

**A08520 (F) PN/COMM BOARD: Non-cyclic channel error**

**Message value:** %1  
**Message class:** Communication error to the higher-level control system (9)  
**Drive object:** All objects  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The memory or the buffer status of the non-cyclic channel has an error.  
 Alarm value (r2124, interpret decimal):  
 0: Error in the buffer status.  
 1: Error in the memory.

**Remedy:** Check communications link.

Reaction upon F: Vector: NONE (OFF1, OFF2, OFF3)  
 Infeed: NONE (OFF1, OFF2)

Acknowl. upon F: IMMEDIATELY

**A08526 (F) PN/COMM BOARD: No cyclic connection**

**Message value:** -  
**Message class:** Communication error to the higher-level control system (9)  
**Drive object:** All objects  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** There is no cyclic connection to the control.  
**Remedy:** Establish the cyclic connection and activate the control with cyclic operation.  
 For PROFINET, check the parameters "Name of Station" and "IP of Station" (r61000, r61001).  
 If a CBE20 is inserted and PROFIBUS is to communicate via PZD Interface 1, then this must be parameterized using the STARTER commissioning tool or directly using p8839.

Reaction upon F: NONE (OFF1)  
 Acknowl. upon F: IMMEDIATELY

---

<b>A08530 (F)</b>	<b>PN/COMM BOARD: Message channel error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The memory or the buffer status of the message channel has an error. Alarm value (r2124, interpret decimal): 0: Error in the buffer status. 1: Error in the memory.
<b>Remedy:</b>	Check communications link.
Reaction upon F:	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY

---

<b>A08531 (F)</b>	<b>CBE20 POWER ON required</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	At least one parameter of the CBE20 (e.g. a parameter associated with SINAMICS Link) was changed as a result of a project download. A POWER ON is required to activate the values. Note: CBE20: Communication Board Ethernet 20 See also: p8811 (SINAMICS Link project selection), p8812 (SINAMICS Link clock cycle settings), p8835 (CBE20 firmware selection), p8836 (SINAMICS link node address)
<b>Remedy:</b>	Back up the parameters and carry out a POWER ON (switch-off/switch-on).
Reaction upon F:	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY

---

<b>A08550</b>	<b>PZD Interface Hardware assignment error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The assignment of the hardware to the PZD interface has been incorrectly parameterized. Alarm value (r2124, interpret decimal): 1: Only one of the two indices is not equal to 99 (automatic). 2: Both PZD interfaces are assigned to the same hardware. 3: Assigned COMM BOARD missing. 4: CBC10 is assigned to interface 1. See also: p8839 (PZD interface hardware assignment)
<b>Remedy:</b>	Check the parameterization and if required, correct (p8839).

---

<b>A08555</b>	<b>Modbus TCP: commissioning error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	CU_G130_DP, CU_G130_PN, CU_G150_DP, CU_G150_PN
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A setting for the "Modbus TCP" protocol is incorrect. Alarm value (r2124, interpret decimal): 1: Modbus simultaneously activated on the onboard interface (p2030) and CBE20 (p8835). CBE20 is not activated. 2: A drive object supported by Modbus is not available under p0978[0]. Modbus is not activated. 3: drive object SERVO is under p0978[0] - and FM bit LINMOT is set, Modbus is not activated. See also: p0978 (List of drive objects), p2030 (Field bus int protocol selection), p8835 (CBE20 firmware selection)
<b>Remedy:</b>	For alarm value = 1: Check the parameterization and if required, correct (p2030, p8835). For alarm value = 2: Appropriately resort the list of drive objects in p0978. Modbus supports the following drive object: VECTOR

---

<b>A08560</b>	<b>IE: Syntax error in configuration file</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A syntax error has been detected in the ASCII configuration file for the Industrial Ethernet interface (X127). The saved configuration file has not been loaded. Note: IE: Industrial Ethernet
<b>Remedy:</b>	- Check the interface configuration (p8900 and following), correct if necessary, and activate (p8905 = 1). - Save the parameters for interface configuration (e.g. p8905 = 2) or - reconfigure the station via the "Edit Ethernet node" screen form (e.g. with STARTER commissioning software). See also: p8905 (IE Interface configuration)

---

<b>A08561</b>	<b>IE: Consistency error affecting adjustable parameters</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A consistency error was detected when activating the configuration (p8905) for the Industrial Ethernet interface (X127). Alarm value (r2124, interpret decimal): 0: general consistency error 1: error in the IP configuration (IP address, subnet mask or standard gateway). 2: Error in the station names. 5: standard gateway is also set at the PROFINET onboard interface. 6: the station name is also set at the PROFINET onboard interface. 7: IP address is located in the same subnet as the IP address of the PROFINET onboard interface. Note: For alarm value = 0, 1, 2, 5, 7 the following applies: the configuration was not changed. For alarm value = 6 the following applies: The new configuration was however activated.

## 4 Faults and alarms

### 4.2 List of faults and alarms

IE: Industrial Ethernet

See also: p8900 (IE Name of Station), p8901 (IE IP address), p8902 (IE def gateway), p8903 (IE Subnet Mask)

**Remedy:**

- check the required interface configuration (p8900 and following), correct if necessary, and activate (p8905).

or

- reconfigure the station via the "Edit Ethernet node" screen form (e.g. with STARTER commissioning software).

See also: p8905 (IE Interface configuration)

---

#### **A08562 PROFINET: Syntax error in configuration file**

**Message value:** -

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** A syntax error has been detected in the ASCII configuration file for the onboard PROFINET interface. The saved configuration file has not been loaded.

**Remedy:**

- Check the interface configuration (p8920 and following), correct if necessary, and activate (p8925 = 1).

- Save the parameters for interface configuration (e.g. p8925 = 2).

or

- reconfigure the station via the "Edit Ethernet node" screen form (e.g. with STARTER commissioning software).

See also: p8925 (PN interface configuration)

---

#### **A08563 PROFINET: Consistency error affecting adjustable parameters**

**Message value:** %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** All objects

**Component:** None

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** A consistency error was detected when activating the configuration (p8925) for the PROFINET interface.

Alarm value (r2124, interpret decimal):

0: general consistency error

1: error in the IP configuration (IP address, subnet mask or standard gateway).

2: Error in the station names.

3: DHCP was not able to be activated, as a cyclic PROFINET connection already exists.

4: a cyclic PROFINET connection is not possible as DHCP is activated.

5: standard gateway is also set at the Industrial Ethernet interface (X127).

6: standard station name is also set at the Industrial Ethernet interface (X127).

7: IP address is located in the same subnet as the IP address of the Industrial Ethernet interface (X127).

Note:

For alarm value = 0, 1, 2, 3, 4, 5, 7, the following applies: the configuration was not changed.

For alarm value = 6 the following applies: The new configuration was however activated.

DHCP: Dynamic Host Configuration Protocol

See also: p8920 (PN Name of Station), p8921 (PN IP address), p8922 (PN Def Gateway), p8923 (PN Subnet Mask)

**Remedy:**

- check the required interface configuration (p8940 and following), correct if necessary, and activate (p8945).

or

- reconfigure the station via the "Edit Ethernet node" screen form (e.g. with STARTER commissioning software).

See also: p8925 (PN interface configuration)

<b>A08564</b>	<b>PN/COMM BOARD: syntax error in the configuration file</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A syntax error has been detected in the ASCII configuration file for the Communication Board Ethernet 20 (CBE20). The saved configuration file has not been loaded.
<b>Remedy:</b>	- check the CBE20 configuration (p8940 and following), correct if necessary, and activate (p8945 = 2). - reinitialize the CBE20 (e.g. using the STARTER commissioning software) Note: The configuration is not applied until the next POWER ON! See also: p8945 (CBE2x interface configuration)
<b>A08565</b>	<b>PNCOMM BOARD: Consistency error affecting adjustable parameters</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A consistency error was detected when activating the configuration (p8945) for the Communication Board Ethernet 20 (CBE20). Alarm value (r2124, interpret decimal): 0: general consistency error 1: error in the IP configuration (IP address, subnet mask or standard gateway). 2: Error in the station names. 3: DHCP was not able to be activated, as a cyclic PROFINET connection already exists. 4: a cyclic PROFINET connection is not possible as DHCP is activated. Note: For all alarm values, the following applies: currently set configuration has not been activated. DHCP: Dynamic Host Configuration Protocol See also: p8940 (CBE2x Name of Station), p8941 (CBE2x IP address), p8942 (CBE2x Default Gateway), p8943 (CBE2x Subnet Mask), p8944 (CBE2x DHCP Mode)
<b>Remedy:</b>	- check the required interface configuration (p8940 and following), correct if necessary, and activate (p8945). or - reconfigure the station via the "Edit Ethernet node" screen form (e.g. with STARTER commissioning software). See also: p8945 (CBE2x interface configuration)
<b>F08700 (A)</b>	<b>CAN: Communications error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	Vector: OFF3 (NONE, OFF1, OFF2) Infeed: NONE (OFF1, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A CAN communications error has occurred. Fault value (r0949, interpret decimal): 1: The error counter for the send telegrams has exceeded the BUS OFF value 255. The bus disables the CAN controller. - bus cable short circuit. - incorrect baud rate. - incorrect bit timing.

## 4 Faults and alarms

### 4.2 List of faults and alarms

2: The master no longer interrogated the CAN node status longer than for its "life time". The "life time" is obtained from the "guard time" (p8604[0]) multiplied by the "life time factor" (p8604[1]).

- bus cable interrupted.
- bus cable not connected.
- incorrect baud rate.
- incorrect bit timing.
- master fault.

Note:

The fault response can be set as required using p8641.

See also: p8604 (CAN life guarding), p8641 (CAN Abort Connection Option Code)

#### Remedy:

- check the bus cable
- check the baud rate (p8622).
- check the bit timing (p8623).
- check the master.

The CAN controller must be manually restarted with p8608 = 1 after the cause of the fault has been resolved!

See also: p8608 (CAN Clear Bus Off Error), p8622 (CAN bit rate), p8623 (CAN Bit Timing selection)

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F08701**      **CAN: NMT state change**

**Message value:** %1

**Message class:** Communication error to the higher-level control system (9)

**Drive object:** All objects

**Component:** None

**Propagation:** GLOBAL

**Reaction:** Vector: OFF3

Infeed: OFF2

**Acknowledge:** IMMEDIATELY

**Cause:** A CANopen NMT state transition from "operational" to "pre-operational" or after "stopped".

Fault value (r0949, interpret decimal):

1: CANopen NMT state transition from "operational" to "pre-operational".

2: CANopen NMT state transition from "operational" to "stopped".

Note:

In the NMT state "pre-operational", process data cannot be transferred and in the NMT state "stopped", no process data and no service data can be transferred.

#### Remedy:

Not necessary.

Acknowledge the fault and continue operation.

---

#### **F08702 (A)**      **CAN: RPDO Timeout**

**Message value:** -

**Message class:** Communication error to the higher-level control system (9)

**Drive object:** All objects

**Component:** None

**Propagation:** GLOBAL

**Reaction:** Vector: OFF3 (NONE, OFF1, OFF2)

Infeed: OFF2 (NONE, OFF1)

**Acknowledge:** IMMEDIATELY

**Cause:** The monitoring time of the CANopen RPDO telegram has expired because the bus connection was either interrupted or the CANopen Master was switched-off.

See also: p8699 (CAN: RPDO monitoring time)

#### Remedy:

- check the bus cable
- check the master.
- If required, increase the monitoring time (p8699).

Reaction upon A: NONE

Acknowl. upon A: NONE

<b>F08703 (A)</b>	<b>CAN: Maximum number of drive objects exceeded</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF3 (NONE, OFF1, OFF2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The maximum number of 8 drive objects with the "CAN" function module was exceeded. Note: In the CANopen standard, a maximum of 8 CANopen device modules (drive objects with function module "CAN") are defined for each CANopen slave.
<b>Remedy:</b>	- New commissioning of maximum 8 drive objects with the "CAN" function module in the topology. - For the drive objects, if required, deselect the "CAN" function module (r0108.29).
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>A08751 (N)</b>	<b>CAN: Telegram loss</b>
<b>Message value:</b>	-
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The CAN controller has lost a receive message (telegram).
<b>Remedy:</b>	Reduce the cycle times of the receive messages.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>A08752</b>	<b>CAN: Error counter for error passive exceeded</b>
<b>Message value:</b>	-
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The error counter for the send or receive telegrams has exceeded the value 127.
<b>Remedy:</b>	- check the bus cable - set a higher baud rate (p8622). - check the bit timing and if required optimize (p8623). See also: p8622 (CAN bit rate), p8623 (CAN Bit Timing selection)
<b>A08753</b>	<b>CAN: Message buffer overflow</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A message buffer overflow. Alarm value (r2124, interpret decimal): 1: Non-cyclic send buffer (SDO response buffer) overflow. 2: Non-cyclic receive buffer (SDO receive buffer) overflow. 3: Cyclic send buffer (PDO send buffer) overflow.



---

<b>A08757</b>	<b>CAN: Set COB-ID invalid</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	For online operation, the appropriate COB-ID must be set invalid before mapping. Example: Mapping for RPDO 1 should be changed (p8710[0]). --> set p8700[0] = C00006E0 hex (invalid COB-ID) --> set p8710[0] as required. --> p8700[0] enter a valid COB-ID		
<b>Remedy:</b>	Set the COB-ID to invalid.		
<hr/>			
<b>A08758</b>	<b>CAN: Maximum number of valid PDO exceeded</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	An attempt was made to exceed the maximum number of valid PDO. Alarm value (r2124, interpret decimal): 1: An attempt was made to exceed the total number of valid RPDO of all CANopen supported drive objects. As a result of the hardware, the limit is 25 valid RPDO. 2: An attempt was made to exceed the total number of valid TPDO of all CANopen supported drive objects. The limit is defined by the following ratio: CAN sampling time (p8848) / CAN minimum processing time (r8739) Note: RPDO: Receive Process Data Object TPDO: Transmit Process Data Object See also: r8739 (Minimum CAN processing time), r8742 (CAN PDO available number)		
<b>Remedy:</b>	Comply with the limit for the maximum number of valid RPDO or TPDO. Apply one of the following options to delete the alarm: - successfully write to the COB ID index of a PDO communication parameter (p870x[0], p872x[0]). - change CANopen NMT state. - execute CANopen NMT command reset node. - execute CANopen NMT command reset communication. - carry out a warm restart (p0009 = 30, p0976 = 2). - carry out a POWER ON (switch off/on). Note: The remaining available RPDO or TPDO are indicated in r8742.		

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>A08759</b>	<b>CAN: PDO COB-ID already available</b>		
<b>Message value:</b>	Parameter: %1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	An existing PDO COB-ID was allocated. Alarm value (r2124, interpret decimal): Parameter number. Note: The COB-ID is included in index zero (p870x[0], p872x[0]).		
<b>Remedy:</b>	Select another PDO COB-ID.		

---

<b>A08760</b>	<b>CAN: maximum size of the IF PZD exceeded</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The maximum size of the IF PZD was exceeded. Alarm value (r2124, interpret decimal): 1: error for IF PZD receive. 2: error for IF PZD send. Note: IF: interface		
<b>Remedy:</b>	Map fewer process data in PDO. Apply one of the following options to delete the alarm: - POWER ON (switch-off/switch-on). - carry out a warm restart (p0009 = 30, p0976 = 2). - execute CANopen NMT command reset node. - change CANopen NMT state. - delete alarm buffer [0...7] (p2111 = 0).		

---

<b>A08800</b>	<b>PROFenergy energy-saving mode active</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Communication error to the higher-level control system (9)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The PROFenergy energy-saving mode is active Alarm value (r2124, interpret decimal): Mode ID of the active PROFenergy energy-saving mode. See also: r5600 (Pe energy-saving mode ID)		
<b>Remedy:</b>	The alarm is automatically withdrawn when the energy-saving mode is exited. Note: The energy-saving mode is exited after the following events: - the PROFenergy command end_pause is received from the higher-level control. - the higher-level control has changed into the STOP operating state. - the PROFINET connection to the higher-level control has been disconnected.		



<b>F13009</b>	<b>Licensing Technology Extension not licensed</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	At least one Technology Extension that requires a license does not have a license. Note: Refer to r4955 and p4955 for information about the installed Technology Extensions.
<b>Remedy:</b>	- enter and activate the license key for Technology Extensions that require a license (p9920, p9921). - if necessary, deactivate Technology Extensions that are not licensed (p4956). See also: p9920 (Licensing enter license key), p9921 (Licensing activate license key)
<b>F13010</b>	<b>Licensing function module not licensed</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	At least one function module which is under license does not have a license. Fault value (r0949, interpret hexadecimal): Bit x = 1: The corresponding function module does not have a license. Note: Refer to p0108 or r0108 for the assignment between the bit number and function module.
<b>Remedy:</b>	- enter and activate the license key for function modules under license (p9920, p9921). - if necessary, deactivate unlicensed function modules (p0108, r0108). See also: p9920 (Licensing enter license key), p9921 (Licensing activate license key)
<b>F13100</b>	<b>Know-how protection: Copy protection error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	All objects
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The know-how protection with copy protection for the memory card is active. An error has occurred when checking the memory card. Fault value (r0949, interpret decimal): 0: A memory card is not inserted. 2: An invalid memory card is inserted. 3: The memory card is being used in another Control Unit. 12: An invalid memory card is inserted (OEM input incorrect, p7769). 13: The memory card is being used in another Control Unit (OEM input incorrect, p7759). See also: p7765 (KHP configuration)
<b>Remedy:</b>	For fault value = 0: - insert the correct memory card and carry out POWER ON. For fault value = 2, 3, 12, 13: - contact the responsible OEM. - Deactivate copy protection (p7765) and acknowledge the fault (p3981). - Deactivate know-how protection (p7766 ... p7768) and acknowledge the fault (p3981).

Note:

In general, the copy protection can only be changed when know-how protection is deactivated.

KHP: Know-How Protection

See also: p3981 (Acknowledge drive object faults), p7765 (KHP configuration)

---

<b>F13101</b>	<b>Know-how protection: Copy protection cannot be activated</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	An error occurred when attempting to activate the copy protection for the memory card. Fault value (r0949, interpret decimal): 0: A memory card is not inserted. Note: KHP: Know-How Protection		
<b>Remedy:</b>	- insert the memory card and carry out POWER ON. - Try to activate copy protection again (p7765). See also: p7765 (KHP configuration)		

---

<b>F13102</b>	<b>Know-how protection: Consistency error of the protected data</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	An error was identified when checking the consistency of the protected files. As a consequence, the project on the memory card cannot be run. Fault value (r0949, interpret hexadecimal): yyyyxxxx hex: yyyy = object number, xxxx = fault cause xxxx = 1: A file has a checksum error. xxxx = 2: The files are not consistent with one another. xxxx = 3: The project files, which were loaded into the file system via load (download from the memory card), are inconsistent. Note: KHP: Know-How Protection		
<b>Remedy:</b>	- Replace the project on the memory card or replace project files for download from the memory card. - Restore the factory setting and download again.		

---

<b>F30001</b>	<b>Power unit: Overcurrent</b>		
<b>Message value:</b>	Fault cause: %1 bin		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The power unit has detected an overcurrent condition. - closed-loop control is incorrectly parameterized. - motor has a short-circuit or fault to ground (frame). - U/f operation: Up ramp set too low. - U/f operation: Rated motor current is significantly greater than that of the Motor Module. - infeed: High discharge and post-charging currents for voltage dip.		

## 4 Faults and alarms

### 4.2 List of faults and alarms

- infeed: High post-charging currents for overload when motoring and DC link voltage dip.
- infeed: Short-circuit currents at power up due to the missing line reactor.
- power cables are not correctly connected.
- the power cables exceed the maximum permissible length.
- power unit defective.
- line phase interrupted.

Additional causes for a parallel switching device (r0108.15 = 1):

- a power unit has tripped (powered down) due to a ground fault.
- the closed-loop circulating current control is either too slow or has been set too fast.

Fault value (r0949, interpret bitwise binary):

Bit 0: Phase U.

Bit 1: Phase V.

Bit 2: Phase W.

Bit 3: Overcurrent in the DC link.

Note:

Fault value = 0 means that the phase with overcurrent is not recognized (e.g. for blocksize device).

#### Remedy:

- check the motor data - if required, carry out commissioning.
- check the motor circuit configuration (star/delta).
- U/f operation: Increase up ramp.
- U/f operation: Check the assignment of the rated currents of the motor and Motor Module.
- infeed: Check the line supply quality.
- infeed: Reduce the motor load.
- infeed: Check the correct connection of the line filter and the line commutating reactor.
- check the power cable connections.
- check the power cables for short-circuit or ground fault.
- check the length of the power cables.
- replace power unit.
- check the line supply phases.

For a parallel switching device (r0108.15 = 1) the following additionally applies:

- check the ground fault monitoring thresholds (p0287).
- check the setting of the closed-loop circulating current control (p7036, p7037).

---

#### F30002

#### Power unit: DC link voltage overvoltage

**Message value:**

%1

**Message class:**

DC link overvoltage (4)

**Drive object:**

VECTOR\_G

**Component:**

Power Module

**Propagation:**

LOCAL

**Reaction:**

OFF2

**Acknowledge:**

IMMEDIATELY

**Cause:**

The power unit has detected overvoltage in the DC link.

- motor regenerates too much energy.
- device connection voltage too high.
- when operating with a Voltage Sensing Module (VSM), the phase assignment L1, L2, L3 at the VSM differs from the phase assignment at the power unit.
- line phase interrupted.

Fault value (r0949, interpret decimal):

DC link voltage at the time of trip [0.1 V].

#### Remedy:

- increase the ramp-down time
- activate the DC link voltage controller
- use a brake resistor or Active Line Module
- increase the current limit of the infeed or use a larger module (for the Active Line Module)
- check the device supply voltage
- check and correct the phase assignment at the VSM and at the power unit

- check the line supply phases.
  - set the rounding times (p1130, p1136). This is particularly recommended in U/f operation to relieve the DC link voltage controller with rapid ramp-down times of the ramp-function generator.
- See also: p0210 (Drive unit line supply voltage), p1240 (Vdc controller or Vdc monitoring configuration)

---

<b>F30002</b>	<b>Power unit: DC link voltage overvoltage</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	DC link overvoltage (4)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	<p>The power unit has detected overvoltage in the DC link.</p> <ul style="list-style-type: none"> <li>- motor regenerates too much energy.</li> <li>- device connection voltage too high.</li> <li>- when operating with a Voltage Sensing Module (VSM), the phase assignment L1, L2, L3 at the VSM differs from the phase assignment at the power unit.</li> <li>- line phase interrupted.</li> </ul> <p>Fault value (r0949, interpret decimal): DC link voltage at the time of trip [0.1 V].</p>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- increase the ramp-down time</li> <li>- activate the DC link voltage controller (p1240)</li> <li>- use a brake resistor or Active Line Module</li> <li>- increase the current limit of the infeed or use a larger module (for the Active Line Module)</li> <li>- check the device supply voltage</li> <li>- check and correct the phase assignment at the VSM and at the power unit</li> <li>- check the line supply phases.</li> </ul> <p>See also: p0210 (Drive unit line supply voltage), p1240 (Vdc controller or Vdc monitoring configuration)</p>		

---

<b>F30003</b>	<b>Power unit: DC link voltage undervoltage</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Infeed faulted (13)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	<p>The power unit has detected an undervoltage condition in the DC link.</p> <ul style="list-style-type: none"> <li>- line supply failure</li> <li>- line supply voltage below the permissible value.</li> <li>- line supply infeed failed or interrupted.</li> <li>- line phase interrupted.</li> </ul> <p>Note: The monitoring threshold for undervoltage in the DC link is indicated in r0296.</p>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the line supply voltage</li> <li>- check the line supply infeed and observe the fault messages relating to it (if there are any)</li> <li>- check the line supply phases.</li> <li>- check the line supply voltage setting (p0210).</li> <li>- booksize units: check the setting of p0278.</li> </ul> <p>Note: The ready signal for the infeed (r0863) must be interconnected to the associated drive inputs (p0864). See also: p0210 (Drive unit line supply voltage)</p>		

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F30004</b>	<b>Power unit: Overtemperature heat sink AC inverter</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The temperature of the power unit heat sink has exceeded the permissible limit value. - insufficient cooling, fan failure. - overload. - ambient temperature too high. - pulse frequency too high. Fault value (r0949, interpret decimal): Temperature [0.01 °C].		
<b>Remedy:</b>	- check whether the fan is running. - check the fan elements. - check whether the ambient temperature is in the permissible range. - check the motor load. - reduce the pulse frequency if this is higher than the rated pulse frequency. Notice: This fault can only be acknowledged after the alarm threshold for alarm A05000 has been undershot. See also: p1800 (Pulse frequency setpoint)		

---

<b>F30005</b>	<b>Power unit: Overload I2t</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The power unit was overloaded (r0036 = 100 %). - the permissible rated power unit current was exceeded for an inadmissibly long time. - the permissible load duty cycle was not maintained. Fault value (r0949, interpret decimal): I2t [100 % = 16384].		
<b>Remedy:</b>	- reduce the continuous load. - adapt the load duty cycle. - check the motor and power unit rated currents. - increase p0294 See also: r0036 (Power unit overload I2t), r0206 (Rated power unit power), p0307 (Rated motor power)		

---

<b>F30005</b>	<b>Power unit: Overload I2t</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The power unit was overloaded (r0036 = 100 %). - the permissible rated power unit current was exceeded for an inadmissibly long time. - the permissible load duty cycle was not maintained. Fault value (r0949, interpret decimal): I2t [100 % = 16384].		

**Remedy:**

- reduce the continuous load.
- adapt the load duty cycle.
- check the motor and power unit rated currents.

See also: r0036 (Power unit overload I2t), r0206 (Rated power unit power), p0307 (Rated motor power)

**F30006 Power unit: Thyristor Control Board**

**Message value:** -  
**Message class:** Power electronics faulted (5)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Power Module **Propagation:** LOCAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:**

The Thyristor Control Board (TCB) of the Basic Line Module signals a fault.

- there is no line supply voltage.
- the line contactor is not closed.
- the line supply voltage is too low.
- line supply frequency outside the permissible range (45 ... 66 Hz).
- there is a DC link short-circuit.
- there is a DC link short-circuit (during the precharging phase).
- the motor either has a short-circuit or insulation fault (from an inverter connected to the DC link).
- voltage supply for the Thyristor Control Board outside the nominal range (5 ... 18 V) and line voltage >30 V.
- there is an internal fault in the Thyristor Control Board.

**Remedy:** The faults must be saved in the Thyristor Control Board and must be acknowledged. To do this, the supply voltage of the Thyristor Control Board must be switched out for at least 10 s!

- check the line supply voltage
- check or energize the line contactor.
- check the monitoring time and, if required, increase (p0857).
- if required, observe additional power unit messages/signals.
- check the DC link regarding short-circuit or ground fault.
- check the motor regarding short-circuit or ground fault.
- evaluate diagnostic LEDs for the Thyristor Control Board.

**F30008 Power unit: Sign-of-life error cyclic data**

**Message value:** -  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Control Unit (CU) **Propagation:** LOCAL  
**Reaction:** Vector: NONE (OFF1, OFF2, OFF3)  
 Infeed: NONE (OFF1, OFF2)  
**Acknowledge:** IMMEDIATELY  
**Cause:**

The Control Unit has not punctually updated the cyclic setpoint telegram. The number of consecutive sign-of-life errors has exceeded the fault threshold (p7789).

**Remedy:**

- for projects with the VECTOR drive object, check whether p0117 = 6 has been set on the Control Unit.
- increase the fault threshold (p7789).
- check the Motor Module, and if required replace.

See also: p0117 (Current controller computing dead time mode)

---

<b>A30010 (F)</b>	<b>Power unit: Sign-of-life error cyclic data</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred between the Control Unit and the power unit involved. The cyclic setpoint telegrams of the Control Unit were not received on time by the power unit for at least one clock cycle.		
<b>Remedy:</b>	Check the Motor Module and if required, replace.		
Reaction upon F:	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

---

<b>F30011</b>	<b>Power unit: Line phase failure in main circuit</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Network fault (2)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2 (OFF1)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	At the power unit, the DC link voltage ripple has exceeded the permissible limit value. Possible causes: - a line phase has failed. - the 3 line phases are inadmissibly unsymmetrical. - the capacitance of the DC link capacitor forms a resonance frequency with the line inductance and the reactor integrated in the power unit. - the fuse of a phase of a main circuit has ruptured. - a motor phase has failed. Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	- check the main circuit fuses. - check whether a single-phase load is distorting the line voltages. - Detune the resonant frequency with the line inductance by using an upstream line reactor. - Dampen the resonant frequency with the line inductance by switching over the DC link voltage compensation in the software (see p1810) – or increase the smoothing (see p1806). However, this can have a negative impact on the torque ripple at the motor output. - check the motor feeder cables.		

---

<b>F30012</b>	<b>Power unit: Temperature sensor heat sink wire breakage</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The connection to a heat sink temperature sensor in the power unit is interrupted. Fault value (r0949, interpret hexadecimal): Bit 0: Module slot (electronics slot) Bit 1: Air intake Bit 2: Inverter 1 Bit 3: Inverter 2 Bit 4: Inverter 3 Bit 5: Inverter 4		

Bit 6: Inverter 5  
 Bit 7: Inverter 6  
 Bit 8: Rectifier 1  
 Bit 9: Rectifier 2  
**Remedy:** Contact the manufacturer.

---

**F30013 Power unit: Temperature sensor heat sink short-circuit**

**Message value:** %1  
**Message class:** Power electronics faulted (5)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Power Module **Propagation:** LOCAL  
**Reaction:** OFF1 (OFF2)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The heat sink temperature sensor in the power unit is short-circuited.  
 Fault value (r0949, interpret hexadecimal):  
 Bit 0: Module slot (electronics slot)  
 Bit 1: Air intake  
 Bit 2: Inverter 1  
 Bit 3: Inverter 2  
 Bit 4: Inverter 3  
 Bit 5: Inverter 4  
 Bit 6: Inverter 5  
 Bit 7: Inverter 6  
 Bit 8: Rectifier 1  
 Bit 9: Rectifier 2  
**Remedy:** Contact the manufacturer.

---

**F30015 (N, A) Power unit: Phase failure motor cable**

**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** VECTOR\_G  
**Component:** Motor **Propagation:** GLOBAL  
**Reaction:** OFF2 (NONE, OFF1, OFF3)  
**Acknowledge:** IMMEDIATELY  
**Cause:** A phase failure in the motor feeder cable was detected.  
 The signal can also be output in the following cases:  
 - the motor is correctly connected, but the drive has stalled in U/f control. In this case, a current of 0 A is possibly measured in one phase due to asymmetry of the currents.  
 - the motor is correctly connected, however the closed-speed control is instable and therefore an oscillating torque is generated.  
**Note:**  
 Chassis power units do not feature phase failure monitoring.  
**Remedy:**  
 - check the motor feeder cables.  
 - increase the ramp-up or ramp-down time (p1120) if the drive has stalled in U/f control.  
 - check the speed controller settings.  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

<b>A30016 (N)</b>	<b>Power unit: Load supply switched out</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Network fault (2)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The DC link voltage is too low. Alarm value (r2124, interpret decimal): DC link voltage at the time of trip [0.1 V].		
<b>Remedy:</b>	- switch on load supply. - check the line supply if necessary.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>F30017</b>	<b>Power unit: Hardware current limit has responded too often</b>		
<b>Message value:</b>	Fault cause: %1 bin		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The hardware current limitation in the relevant phase (see A30031, A30032, A30033) has responded too often. The number of times the limit has been exceeded depends on the design and type of power unit. For infeed units, the following applies: - closed-loop control is incorrectly parameterized. - load on the infeed is too high. - Voltage Sensing Module incorrectly connected. - line reactor missing or the incorrect type. - power unit defective. The following applies to Motor Modules: - closed-loop control is incorrectly parameterized. - fault in the motor or in the power cables. - the power cables exceed the maximum permissible length. - motor load too high - power unit defective. Fault value (r0949, interpret binary): Bit 3: phase U Bit 4: phase V Bit 5: phase W Additional bits: Only for internal Siemens troubleshooting. Note: Fault value = 0 means that the phase with current limiting is not recognized (e.g. for blocksize device).		
<b>Remedy:</b>	For infeed units, the following applies: - check the controller settings and reset and identify the controller if necessary (p0340 = 2, p3410 = 5) - reduce the load and increase the DC link capacitance or use a higher-rating infeed if necessary - check the connection of the optional Voltage Sensing Module - check the connection and technical data of the line reactor - check the power cables for short-circuit or ground fault. - replace power unit. The following applies to Motor Modules: - check the motor data and if required, recalculate the controller parameters (p0340 = 3). As an alternative, run a motor data identification (p1910 = 1, p1960 = 1). - check the motor circuit configuration (star-delta).		

- check the motor load.
- check the power cable connections.
- check the power cables for short-circuit or ground fault.
- check the length of the power cables.
- replace power unit.

---

<b>F30020</b>	<b>Power unit: Configuration not supported</b>		
<b>Message value:</b>	fault cause: %1, additional information: %2		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	<p>A configuration is requested that is not supported by the power unit.</p> <p>Fault value (r0949, interpret hexadecimal):</p> <p>yyyyxxxx hex: xxxx = fault cause, yyyy = additional information (internal Siemens)</p> <p>xxxx = 0: Autonomous operation is requested but is not supported.</p> <p>xxxx = 1: The requested DRIVE-CLiQ timing is not permissible.</p> <p>xxxx = 2: A PM260 has been detected with PS-ASIC version 2. This combination is not supported.</p> <p>xxxx = 3: Initialization was not able to be successfully completed. It is possible that the Control Unit was withdrawn from the Power Module before or during power up.</p> <p>xxxx = 4: The combination of power unit and Control Unit or Control Unit Adapter is not supported.</p> <p>xxxx = 5: The higher current controller dynamic performance is not supported.</p>		
<b>Remedy:</b>	<p>For fault cause = 0:</p> <p>If required, deactivate an active internal voltage protection (p1231).</p> <p>For fault cause = 1:</p> <p>Update the Control Unit firmware or change the DRIVE-CLiQ topology.</p> <p>For fault cause = 2:</p> <p>Replace the power unit with a PM260 with PS-ASIC version 3 (or higher).</p> <p>For fault cause = 3, 4:</p> <p>Insert a Control Unit or Control Unit Adapter (CUAxx) on an appropriate Power Module and perform a POWER ON for the Control Unit or the Control Units Adapter.</p> <p>For fault cause = 5:</p> <ul style="list-style-type: none"> <li>- use a booksize format power unit.</li> <li>- for a Double Motor Module operate the two drive controls with the same current controller sampling time (p0115[0]). Otherwise, the higher current controller dynamics can only be activated on the drive with the longer sampling time.</li> <li>- if required, de-select the higher current controller dynamic performance (p1810.11 = 0). After deselecting the computing dead time, recalculate the controller gains (p0340 = 4). If required, optimize the speed controller.</li> </ul> <p>See also: p0115, p1231, p1810</p>		

---

<b>F30021</b>	<b>Power unit: Ground fault</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Ground fault / inter-phase short-circuit detected (7)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	<p>The power has detected a ground fault.</p> <p>Possible causes:</p> <ul style="list-style-type: none"> <li>- ground fault in the power cables.</li> <li>- ground fault at the motor.</li> <li>- CT defective.</li> <li>- when the brake closes, this causes the hardware DC current monitoring to respond.</li> <li>- short-circuit at the braking resistor.</li> <li>- the closed-loop circulating current control for devices connected in parallel (r0108.15 = 1) is either too slow or has been set too fast.</li> </ul>		

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Note:**

For power units, a ground fault is also emulated in r3113.5.

Fault value (r0949, interpret decimal):

0:

- the hardware DC current monitoring has responded.
- short-circuit at the braking resistor.

> 0:

Absolute value, total current amplitude [20479 = r0209 \* 1.4142].

**Remedy:**

- check the power cable connections.
- check the motor.
- check the CT.
- check the cables and contacts of the brake connection (a wire is possibly broken).
- check the braking resistor.

For parallel switching devices (r0108.15 = 1) the following additionally applies:

- check the ground fault monitoring thresholds (p0287).
- check the setting of the closed-loop circulating current control (p7036, p7037).

See also: p0287 (Ground fault monitoring threshold)

---

#### F30022

#### Power unit: Monitoring U<sub>ce</sub>

**Message value:**

Fault cause: %1 bin

**Message class:**

Ground fault / inter-phase short-circuit detected (7)

**Drive object:**

B\_INF, VECTOR\_G

**Component:**

Power Module

**Propagation:**

LOCAL

**Reaction:**

OFF2

**Acknowledge:**

POWER ON

**Cause:**

In the power unit, the monitoring of the collector-emitter voltage (U<sub>ce</sub>) of the semiconductor has responded.

Possible causes:

- fiber-optic cable interrupted.
- power supply of the IGBT gating module missing.
- short-circuit at the power unit output.
- defective semiconductor in the power unit.

Fault value (r0949, interpret binary):

Bit 0: Short-circuit in phase U

Bit 1: Short circuit in phase V

Bit 2: Short-circuit in phase W

Bit 3: Light transmitter enable defective

Bit 4: U<sub>ce</sub> group fault signal interrupted

See also: r0949 (Fault value)

**Remedy:**

- check the fiber-optic cable and if required, replace.
- check the power supply of the IGBT gating module (24 V).
- check the power cable connections.
- select the defective semiconductor and replace.

---

#### F30024

#### Power unit: Overtemperature thermal model

**Message value:**

-

**Message class:**

Power electronics faulted (5)

**Drive object:**

VECTOR\_G

**Component:**

Power Module

**Propagation:**

LOCAL

**Reaction:**

OFF2

**Acknowledge:**

IMMEDIATELY

**Cause:**

The temperature difference between the heat sink and chip has exceeded the permissible limit value.

- the permissible load duty cycle was not maintained.
- insufficient cooling, fan failure.
- overload.

- ambient temperature too high.
- pulse frequency too high.

See also: r0037

**Remedy:**

- adapt the load duty cycle.
- check whether the fan is running.
- check the fan elements.
- check whether the ambient temperature is in the permissible range.
- check the motor load.
- reduce the pulse frequency if this is higher than the rated pulse frequency.
- if DC braking is active: reduce braking current (p1232).

**F30024**

**Power unit: Overtemperature thermal model**

**Message value:** -

**Message class:** Power electronics faulted (5)

**Drive object:** B\_INF

**Component:** Power Module

**Propagation:** LOCAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY

**Cause:** The temperature difference between the heat sink and chip has exceeded the permissible limit value.

- the permissible load duty cycle was not maintained.
- insufficient cooling, fan failure.
- overload.

- ambient temperature too high.
- pulse frequency too high.

See also: r0037

**Remedy:**

- adapt the load duty cycle.
- check whether the fan is running.
- check the fan elements.
- check whether the ambient temperature is in the permissible range.
- check the motor load.
- reduce the pulse frequency if this is higher than the rated pulse frequency.

**F30025**

**Power unit: Chip overtemperature**

**Message value:** %1

**Message class:** Power electronics faulted (5)

**Drive object:** B\_INF, VECTOR\_G

**Component:** Power Module

**Propagation:** LOCAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY

**Cause:** The chip temperature of the semiconductor has exceeded the permissible limit value.

- the permissible load duty cycle was not maintained.
- insufficient cooling, fan failure.
- overload.

- ambient temperature too high.
- pulse frequency too high.

Fault value (r0949, interpret decimal):

Temperature difference between the heat sink and chip [0.01 °C].

**Remedy:**

- adapt the load duty cycle.
- check whether the fan is running.
- check the fan elements.
- check whether the ambient temperature is in the permissible range.
- check the motor load.
- reduce the pulse frequency if this is higher than the rated pulse frequency.

## 4 Faults and alarms

### 4.2 List of faults and alarms

Notice:

This fault can only be acknowledged after the alarm threshold for alarm A05001 has been undershot.

See also: r0037

---

<b>F30027</b>	<b>Power unit: Precharging DC link time monitoring</b>		
<b>Message value:</b>	Enable signals: %1, Status: %2		
<b>Message class:</b>	Infeed faulted (13)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The power unit DC link was not able to be precharged within the expected time. 1) There is no line supply voltage connected. 2) The line contactor/line side switch has not been closed. 3) The line supply voltage is too low. 4) Line supply voltage incorrectly set (p0210). 5) The precharging resistors are overheated as there were too many precharging operations per time unit. 6) The precharging resistors are overheated as the DC link capacitance is too high. 7) The precharging resistors are overheated because when there is no "ready for operation" (r0863.0) of the infeed unit, power is taken from the DC link. 8) The precharging resistors are overheated as the line contactor was closed during the DC link fast discharge through the Braking Module. 9) The DC link has either a ground fault or a short-circuit. 10) The precharging circuit is possibly defective (only for chassis units). 11) Infeed is defective and/or fuse has ruptured in the Motor Module (only Booksize units). Fault value (r0949, interpret binary): yyyyxxxx hex: yyyy = power unit state 0: Fault status (wait for OFF and fault acknowledgment). 1: Restart inhibit (wait for OFF). 2: Overvoltage condition detected -> change into the fault state. 3: Undervoltage condition detected -> change into the fault state. 4: Wait for bridging contactor to open -> change into the fault state. 5: Wait for bridging contactor to open -> change into restart inhibit. 6: Commissioning. 7: Ready for precharging. 8: Precharging started, DC link voltage less than the minimum switch-on voltage. 9: Precharging, DC link voltage end of precharging still not detected. 10: Wait for the end of the de-bounce time of the main contactor after precharging has been completed. 11: Precharging completed, ready for pulse enable. 12: It was detected that the STO terminal was energized at the power unit. xxxx = Missing internal enable signals, power unit (inverted bit-coded, FFFF hex -> all internal enable signals available) Bit 0: Power supply of the IGBT gating shut down. Bit 1: Ground fault detected. Bit 2: Peak current intervention. Bit 3: I2t exceeded. Bit 4: Thermal model overtemperature calculated. Bit 5: (heat sink, gating module, power unit) overtemperature measured. Bit 6: Reserved. Bit 7: Overvoltage detected. Bit 8: Power unit has completed precharging, ready for pulse enable. Bit 9: STO terminal missing. Bit 10: Overcurrent detected. Bit 11: Armature short-circuit active. Bit 12: DRIVE-CLiQ fault active.		

Bit 13: Vce fault detected, transistor de-saturated due to overcurrent/short-circuit.

Bit 14: Undervoltage detected.

See also: p0210 (Drive unit line supply voltage)

**Remedy:**

In general:

- check the line supply voltage at the input terminals.
- check the line supply voltage setting (p0210).

For booksize drive units, the following applies:

- wait (approx. 8 minutes) until the precharging resistors have cooled down. For this purpose, preferably disconnect the infeed unit from the line supply.

For 5):

- carefully observe the permissible precharging frequency (refer to the appropriate Equipment Manual).

For 6):

- check the total capacitance of the DC link and reduce in accordance with the maximum permissible DC link capacitance if necessary (refer to the appropriate Equipment Manual)

For 7):

- interconnect the ready-for-operation signal from the infeed unit (r0863.0) in the enable logic of the drives connected to this DC link

For 8):

- check the connections of the external line contactor. The line contactor must be open during DC link fast discharge.

For 9):

- check the DC link for ground faults or short circuits.

For 11):

- check the DC link voltage of the infeed (r0070) and Motor Modules (r0070).

If the DC link voltage generated by the infeed (or external) is not displayed for the Motor Modules (r0070), then a fuse has ruptured in the Motor Module.

See also: p0210 (Drive unit line supply voltage)

**A30030**

**Power unit: Internal overtemperature alarm**

**Message value:** %1

**Message class:** Power electronics faulted (5)

**Drive object:** B\_INF, VECTOR\_G

**Component:** Power Module

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The temperature inside the drive converter has exceeded the permissible temperature limit.

- insufficient cooling, fan failure.
- overload.
- ambient temperature too high.

Alarm value (r2124, interpret decimal):

Only for internal Siemens troubleshooting.

**Remedy:**

- possibly use an additional fan.
- check whether the ambient temperature is in the permissible range.

Notice:

This fault can only be acknowledged once the permissible temperature limit minus 5 K has been fallen below.

**A30031**

**Power unit: Hardware current limiting in phase U**

**Message value:** -

**Message class:** Power electronics faulted (5)

**Drive object:** B\_INF, VECTOR\_G

**Component:** Power Module

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** Hardware current limit for phase U responded. The pulsing in this phase is inhibited for one pulse period.

- closed-loop control is incorrectly parameterized.
- fault in the motor or in the power cables.
- the power cables exceed the maximum permissible length.

## 4 Faults and alarms

### 4.2 List of faults and alarms

- motor load too high
- power unit defective.

Note:

Alarm A30031 is always output if, for a Power Module, the hardware current limiting of phase U, V or W responds.

**Remedy:**

- check the motor data and if required, recalculate the control parameters (p0340 = 3). As an alternative, run a motor data identification (p1910 = 1, p1960 = 1).
- check the motor circuit configuration (star/delta).
- check the motor load.
- check the power cable connections.
- check the power cables for short-circuit or ground fault.
- check the length of the power cables.

---

#### **A30032 Power unit: Hardware current limiting in phase V**

**Message value:** -

**Message class:** Power electronics faulted (5)

**Drive object:** B\_INF, VECTOR\_G

**Component:** Power Module

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** Hardware current limit for phase V responded. The pulsing in this phase is inhibited for one pulse period.

- closed-loop control is incorrectly parameterized.
- fault in the motor or in the power cables.
- the power cables exceed the maximum permissible length.
- motor load too high
- power unit defective.

Note:

Alarm A30031 is always output if, for a Power Module, the hardware current limiting of phase U, V or W responds.

**Remedy:**

- Check the motor data and if required, recalculate the control parameters (p0340 = 3). As an alternative, run a motor data identification (p1910 = 1, p1960 = 1).
- check the motor circuit configuration (star/delta).
- check the motor load.
- check the power cable connections.
- check the power cables for short-circuit or ground fault.
- check the length of the power cables.

---

#### **A30033 Power unit: Hardware current limiting in phase W**

**Message value:** -

**Message class:** Power electronics faulted (5)

**Drive object:** B\_INF, VECTOR\_G

**Component:** Power Module

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** Hardware current limit for phase W responded. The pulsing in this phase is inhibited for one pulse period.

- closed-loop control is incorrectly parameterized.
- fault in the motor or in the power cables.
- the power cables exceed the maximum permissible length.
- motor load too high
- power unit defective.

Note:

Alarm A30031 is always output if, for a Power Module, the hardware current limiting of phase U, V or W responds.

**Remedy:**

- check the motor data and if required, recalculate the control parameters (p0340 = 3). As an alternative, run a motor data identification (p1910 = 1, p1960 = 1).
- check the motor circuit configuration (star/delta).
- check the motor load.
- check the power cable connections.



## 4 Faults and alarms

### 4.2 List of faults and alarms

- Remedy:**
- check whether the fan is running.
  - check the fan elements.
  - check whether the ambient temperature is in the permissible range.

Notice:

This fault can only be acknowledged once the permissible temperature limit minus 5 K has been fallen below.

---

#### **F30037 Power unit: Rectifier overtemperature**

**Message value:** %1

**Message class:** Power electronics faulted (5)

**Drive object:** B\_INF, VECTOR\_G

**Component:** Power Module

**Propagation:** LOCAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY

**Cause:** The temperature in the rectifier of the power unit has exceeded the permissible temperature limit.

- insufficient cooling, fan failure.

- overload.

- ambient temperature too high.

- line supply phase failure.

Fault value (r0949, interpret decimal):

Temperature [0.01 °C].

**Remedy:**

- check whether the fan is running.

- check the fan elements.

- check whether the ambient temperature is in the permissible range.

- check the motor load.

- check the line supply phases.

Notice:

This fault can only be acknowledged after the alarm threshold for alarm A05004 has been undershot.

---

#### **A30038 Power unit: Capacitor fan monitoring**

**Message value:** %1

**Message class:** Infeed faulted (13)

**Drive object:** B\_INF

**Component:** Power Module

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The capacitor fan signals a fault.

**Remedy:** Replace the capacitor fan in the power unit.

---

#### **F30039 Power unit: Failure capacitor fan**

**Message value:** %1

**Message class:** Infeed faulted (13)

**Drive object:** B\_INF

**Component:** Power Module

**Propagation:** GLOBAL

**Reaction:** OFF1

**Acknowledge:** IMMEDIATELY

**Cause:** The capacitor fan has failed.

**Remedy:** Replace the capacitor fan in the power unit.

---

<b>F30040</b>	<b>Power unit: Undervolt 24 V</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The undervoltage threshold of the 24 V power supply for the power unit was fallen below for longer than 3 ms. Note: - for booksize power units, the undervoltage threshold is 15 V. - for CU310-2, CUA31 and CUA32 the undervoltage threshold is 16 V. - for all other power units, the undervoltage threshold depends on the power unit, and is not displayed. Fault value (r0949, interpret decimal): 24 V voltage [0.1 V].		
<b>Remedy:</b>	- check the power supply of the power unit. - carry out a POWER ON (switch-off/switch-on) for the component.		

---

<b>F30040</b>	<b>Power unit: Undervolt 24 V</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The undervoltage threshold of the 24 V power supply for the power unit was fallen below for longer than 3 ms. Note: - for booksize power units, the undervoltage threshold is 15 V. - for all other power units, the undervoltage threshold depends on the power unit, and is not displayed. Fault value (r0949, interpret decimal): 24 V voltage [0.1 V].		
<b>Remedy:</b>	- check the power supply of the power unit. - carry out a POWER ON (switch-off/switch-on) for the component.		

---

<b>A30041 (F)</b>	<b>Power unit: Undervoltage 24 V alarm</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	For the power unit power supply, the lower threshold has been violated. Alarm value (r2124, interpret decimal): 24 V voltage [0.1 V].		
<b>Remedy:</b>	- check the power supply of the power unit. - carry out a POWER ON (switch-off/switch-on) for the component.		
Reaction upon F:	NONE (OFF1, OFF2, OFF3)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

---

<b>A30041 (F)</b>	<b>Power unit: Undervoltage 24 V alarm</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	For the power unit power supply, the lower threshold has been violated. Alarm value (r2124, interpret hexadecimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	- check the power supply of the power unit. - carry out a POWER ON (switch-off/switch-on) for the component.		
Reaction upon F:	NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

---

<b>A30042</b>	<b>Power unit: Fan has reached the maximum operating hours</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The maximum operating time of at least one fan will soon be reached, or has already been exceeded. Alarm value (r2124, interpret binary): Bit 0: heat sink fan will reach the maximum operating time in 500 hours. Bit 1: heat sink fan has exceeded the maximum operating time. Bit 8: internal device fan will reach the maximum operating time in 500 hours. Bit 9: internal device fan has exceeded the maximum operating time. Note: The maximum operating time of the heat sink fan in the power unit is displayed in p0252. The maximum operating time of the internal device fan in the power unit is internally specified and is fixed.		
<b>Remedy:</b>	For the fan involved, carry out the following: - replace the fan. - reset the operating hours counter (p0251, p0254). See also: p0251 (Operating hours counter power unit fan), p0252 (Maximum operating time power unit fan), p0254 (Operating hours counter power unit fan inside the converter)		

---

<b>F30043</b>	<b>Power unit: Overvolt 24 V</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (overvoltage) (3)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	POWER ON		
<b>Cause:</b>	For the power unit power supply, the upper threshold has been violated. Fault value (r0949, interpret decimal): 24 V voltage [0.1 V].		
<b>Remedy:</b>	Check the power supply of the power unit.		

---

<b>A30044 (F)</b>	<b>Power unit: Overvoltage 24 V alarm</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (overvoltage) (3)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	For the power unit power supply, the upper threshold has been violated. Alarm value (r2124, interpret decimal): 24 V voltage [0.1 V].		
<b>Remedy:</b>	Check the power supply of the power unit.		
Reaction upon F:	NONE (OFF1, OFF2, OFF3)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

---

<b>A30044 (F)</b>	<b>Power unit: Overvoltage 24 V alarm</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (overvoltage) (3)		
<b>Drive object:</b>	B_INF		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	For the power unit power supply, the upper threshold has been violated. Alarm value (r2124, interpret decimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	Check the power supply of the power unit.		
Reaction upon F:	NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

---

<b>F30045</b>	<b>Power unit: Supply undervoltage</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	Power supply fault in the power unit. - the voltage monitor signals an undervoltage fault on the module. The following applies for CU31x: - the voltage monitoring on the DAC board signals an undervoltage fault on the module.		
<b>Remedy:</b>	- check the power supply of the power unit. - carry out a POWER ON (switch-off/switch-on) for the component. - replace the module if necessary.		

---

<b>A30046 (F)</b>	<b>Power unit: Undervoltage alarm</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Before the last restart, a problem occurred at the power unit power supply. The voltage monitor in the internal FPGA of the PSA signals an undervoltage fault on the module. Alarm value (r2124, interpret decimal): Register value of the voltage fault register.		

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:**

- check the 24 V DC voltage supply to power unit.
- carry out a POWER ON (switch-off/switch-on) for the component.
- replace the module if necessary.

Reaction upon F: NONE (OFF1, OFF2, OFF3)

Acknowl. upon F: IMMEDIATELY (POWER ON)

---

#### **A30046 (F) Power unit: Undervoltage alarm**

**Message value:** %1

**Message class:** Power electronics faulted (5)

**Drive object:** B\_INF

**Component:** Power Module

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** Before the last restart, a problem occurred at the power unit power supply.  
The voltage monitor in the internal FPGA of the PSA signals an undervoltage fault on the module.  
Alarm value (r2124, interpret decimal):  
Only for internal Siemens troubleshooting.

**Remedy:**

- check the 24 V DC voltage supply to power unit.
- carry out a POWER ON (switch-off/switch-on) for the component.
- replace the module if necessary.

Reaction upon F: NONE (OFF1, OFF2)

Acknowl. upon F: IMMEDIATELY (POWER ON)

---

#### **F30047 Cooling unit: Cooling medium flow rate too low**

**Message value:** %1

**Message class:** Application/technological function faulted (17)

**Drive object:** B\_INF, VECTOR\_G

**Component:** Power Module

**Propagation:** GLOBAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY

**Cause:** The flowrate of the cooling unit has fallen below the fault threshold.

**Remedy:**

- check the feedback signals and parameter assignment (p0260 ... p0267).
- check the coolant feed.
- check the thermal conductivity of the coolant.
- check the coolant concentration.

---

#### **A30048 Power unit: External fan faulty**

**Message value:** -

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, VECTOR\_G

**Component:** Power Module

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The feedback signal from the external fan indicates a fault.  
- fan faulty, blocked.  
- feedback signal inaccurate.

**Remedy:**

- check the external fan and replace if necessary.
- if you are using an external fan with feedback, check its wiring (X12.2 or X13.2).

Note:

If you are using an external fan without feedback, check that the feedback terminal wiring on the power unit is connected to ground and make this connection if necessary (X12.1/2 or X13.1/2).

<b>A30049</b>	<b>Power unit: Internal fan faulty</b>
<b>Message value:</b>	-
<b>Message class:</b>	Auxiliary unit faulted (20)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The internal fan has failed.
<b>Remedy:</b>	Check the internal fan and replace if necessary.
<b>F30050</b>	<b>Power unit: 24 V supply overvoltage</b>
<b>Message value:</b>	-
<b>Message class:</b>	Supply voltage fault (overvoltage) (3)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	The voltage monitor signals an overvoltage fault on the module.
<b>Remedy:</b>	- check the 24 V power supply. - replace the module if necessary.
<b>F30051</b>	<b>Power unit: Motor holding brake short circuit detected</b>
<b>Message value:</b>	%1
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A short-circuit at the motor holding brake terminals has been detected. Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- check the motor holding brake for a short-circuit. - check the connection and cable for the motor holding brake.
<b>F30052</b>	<b>EEPROM data error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	EEPROM data error of the power unit module. Fault value (r0949, interpret decimal): 0, 2, 3, 4: The EEPROM data read in from the power unit module are incorrect. 1: EEPROM data is not compatible to the firmware of the power unit application. Additional values: Only for internal Siemens troubleshooting.
<b>Remedy:</b>	For fault value = 0, 2, 3, 4: Replace the power unit module or update the EEPROM data. For fault value = 1: The following applies for CU31x and CUA31: Update the firmware \SIEMENS\SINAMICS\CODE\SAC\cu31xi.ufw (cua31.ufw)

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F30053</b>	<b>FPGA data faulty</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	POWER ON		
<b>Cause:</b>	The FPGA data of the power unit are faulty. For example, this can be caused when a firmware update is canceled.		
<b>Remedy:</b>	Replace the power unit or update the FPGA data by updating the firmware.		
	Update the firmware again if this error occurs after updating the firmware.		

---

<b>A30054 (F, N)</b>	<b>Power unit: Undervoltage when opening the brake</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	When the brake is being opened, it is detected that the power supply voltage is less than 21.4 V Alarm value (r2124, interpret decimal): Supply voltage fault [0.1 V]. Example: Alarm value = 195 --> voltage = 19.5 V		
<b>Remedy:</b>	Check the 24 V voltage for stability and value.		
Reaction upon F:	NONE (OFF1, OFF2, OFF3)		
Acknowl. upon F:	IMMEDIATELY		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>F30055</b>	<b>Power unit: Braking chopper overcurrent</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Braking Module faulted (14)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	An overcurrent condition has occurred in the braking chopper.		
<b>Remedy:</b>	- check whether the braking resistor has a short circuit. - for an external braking resistor, check whether the resistor may have been dimensioned too small.		
	Note: The braking chopper is only enabled again at pulse enable after the fault has been acknowledged.		

---

<b>A30057</b>	<b>Power unit: Line asymmetry</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Network fault (2)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Frequencies have been detected on the DC link voltage that would suggest line asymmetry or failure of a line phase. It is also possible that a motor phase has failed. Fault F30011 is output if the alarm is present and at the latest after 5 minutes. The precise duration depends on the power unit type and the particular frequencies. For booksize and chassis power units, the duration also depends on how long the alarm has been active.		



## 4 Faults and alarms

### 4.2 List of faults and alarms

---

**Remedy:**

- check the monitoring time setting (p0255[1, 3]).
- check the contactor wiring and activation.
- replace the contactor.

See also: p0255 (Power unit contactor monitoring time)

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **A30065 (F, N) Voltage measured values not plausible**

**Message value:** %1

**Message class:** Power electronics faulted (5)

**Drive object:** VECTOR\_G

**Component:** Power Module **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The voltage measurement is not supplying any plausible values

Alarm value (r2124, interpret bitwise binary):

Bit 1: Phase U.

Bit 2: Phase V.

Bit 3: Phase W.

**Remedy:**

- Deactivate voltage measurement (p0247.0 = 0).
- Deactivate flying restart with voltage measurement (p0247.5 = 0) and deactivate fast flying restart (p1780.11 = 0).

Reaction upon F: NONE (OFF1, OFF2, OFF3, STOP2)

Acknowl. upon F: IMMEDIATELY

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **F30070 Cycle requested by the power unit module not supported**

**Message value:** %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** B\_INF, VECTOR\_G

**Component:** Power Module **Propagation:** LOCAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY

**Cause:** A cycle is requested that is not supported by the power unit.

Fault value (r0949, interpret hexadecimal):

0: The current control cycle is not supported.

1: The DRIVE-CLiQ cycle is not supported.

2: Internal timing problem (clearance between RX and TX instants too low).

3: Internal timing problem (TX instant too early).

**Remedy:** The power unit only supports the following cycles:  
62.5  $\mu$ s, 125  $\mu$ s, 250  $\mu$ s and 500  $\mu$ s

For fault value = 0:  
Set a permitted current control cycle.

For fault value = 1:  
Set a permitted DRIVE-CLiQ cycle.

For fault value = 2, 3:  
Contact the manufacturer (you may have an incompatible firmware version).

<b>F30071</b>	<b>No new actual values received from the power unit</b>
<b>Message value:</b>	-
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The number of actual value telegrams from the power unit module that have failed has exceeded the permissible number.
<b>Remedy:</b>	Check the interface (adjustment and locking) to the power unit module.
<b>F30072</b>	<b>Setpoints can no longer be transferred to the power unit</b>
<b>Message value:</b>	-
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The following applies for CU31x and CUA31: More than one setpoint telegram was not able to be transferred to the power unit module.
<b>Remedy:</b>	The following applies for CU31x and CUA31: Check the interface (adjustment and locking) to the power unit module.
<b>A30073 (N)</b>	<b>Actual value/setpoint preprocessing no longer synchronous</b>
<b>Message value:</b>	-
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Communication with the power unit module is no longer in synchronism with the current control cycle.
<b>Remedy:</b>	Wait until synchronization is re-established.
<b>Reaction upon N:</b>	NONE
<b>Acknowl. upon N:</b>	NONE
<b>F30074 (A)</b>	<b>Communication error between the Control Unit and Power Module</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Communications between the Control Unit (CU) and Power Module (PM) via the interface no longer possible. The CU may have been withdrawn or is incorrectly inserted. Fault value (r0949, interpret hexadecimal): 0 hex: - a Control Unit with external 24 V supply was withdrawn from the Power Module during operation. - with the Power Module switched off, the external 24 V supply for the Control Unit was interrupted for some time. 1 hex: The Control Unit was withdrawn from the Power Module during operation, although the encoderless safe motion monitoring functions are enabled. This is not supported. After re-inserting the Control Unit in operation, communications to the Power Module no longer possible. 20A hex: The Control Unit was inserted on a Power Module, which has another code number.

## 4 Faults and alarms

### 4.2 List of faults and alarms

20B hex:

The Control Unit was inserted on a Power Module, which although it has the same code number, has a different serial number.

601 hex:

The Control Unit was inserted on a Power Module, whose power/performance class (chassis unit) is not supported.

**Remedy:**

Reinsert the Control Unit (CU) or the Control Unit Adapter (CUAxx) onto the original Power Module and continue operation. If required, carry out a POWER ON for the CU and/or the CUA.

Reaction upon A:

NONE

Acknowl. upon A:

NONE

---

#### **F30075 Configuration of the power unit unsuccessful**

**Message value:**

%1

**Message class:**

Internal (DRIVE-CLiQ) communication error (12)

**Drive object:**

VECTOR\_G

**Component:**

Control Unit (CU)

**Propagation:**

LOCAL

**Reaction:**

OFF2

**Acknowledge:**

IMMEDIATELY

**Cause:**

A communication error has occurred while configuring the power unit using the Control Unit. The cause is not clear.

Fault value (r0949, interpret decimal):

0:

The output filter initialization was unsuccessful.

1:

Activation/deactivation of the regenerative feedback functionality was unsuccessful.

**Remedy:**

- acknowledge the fault and continue operation.

- if the fault reoccurs, carry out a POWER ON (switch-off/switch-on).

- if required, replace the power unit.

---

#### **F30080 Power unit: Current increasing too quickly**

**Message value:**

Fault cause: %1 bin

**Message class:**

Power electronics faulted (5)

**Drive object:**

B\_INF, VECTOR\_G

**Component:**

Power Module

**Propagation:**

LOCAL

**Reaction:**

OFF2

**Acknowledge:**

IMMEDIATELY

**Cause:**

The power unit has detected an excessive rate of rise in the overvoltage range.

- closed-loop control is incorrectly parameterized.

- motor has a short-circuit or fault to ground (frame).

- U/f operation: Up ramp set too low.

- U/f operation: rated current of motor much greater than that of power unit.

- infeed: High discharge and post-charging currents for voltage dip.

- infeed: High post-charging currents for overload when motoring and DC link voltage dip.

- infeed: Short-circuit currents at switch-on due to the missing line reactor.

- power cables are not correctly connected.

- power cables exceed the maximum permissible length.

- power unit defective.

Additional causes for a parallel switching device (r0108.15 = 1):

- a power unit has tripped (switched off) due to a ground fault.

- the closed-loop circulating current control is either too slow or has been set too fast.

Fault value (r0949, interpret bitwise binary):

Bit 0: Phase U.

Bit 1: Phase V.

Bit 2: Phase W.

**Remedy:**

- check the motor data - if required, carry out commissioning.

- check the motor circuit configuration (star-delta)

- U/f operation: Increase up ramp.

- U/f operation: Check assignment of rated currents of motor and power unit.

- infeed: Check the line supply quality.
- infeed: Reduce the motor load.
- infeed: Correct connection of the line reactor.
- check the power cable connections.
- check the power cables for short-circuit or ground fault.
- check the length of the power cables.
- replace power unit.

For a parallel switching device (r0108.15 = 1) the following additionally applies:

- check the ground fault monitoring thresholds (p0287).
- check the setting of the closed-loop circulating current control (p7036, p7037).

---

### F30081

#### Power unit: Switching operations too frequent

**Message value:**

Fault cause: %1 bin

**Message class:**

Power electronics faulted (5)

**Drive object:**

B\_INF, VECTOR\_G

**Component:**

Power Module

**Propagation:**

LOCAL

**Reaction:**

OFF2

**Acknowledge:**

IMMEDIATELY

**Cause:**

The power unit has executed too many switching operations for current limitation.

- closed-loop control is incorrectly parameterized.
- motor has a short-circuit or fault to ground (frame).
- U/f operation: Up ramp set too low.
- U/f operation: rated current of motor much greater than that of power unit.
- infeed: High discharge and post-charging currents for voltage dip.
- infeed: High post-charging currents for overload when motoring and DC link voltage dip.
- infeed: Short-circuit currents at switch-on due to the missing line reactor.
- power cables are not correctly connected.
- power cables exceed the maximum permissible length.
- power unit defective.

Additional causes for a parallel switching device (r0108.15 = 1):

- a power unit has tripped (switched off) due to a ground fault.
- the closed-loop circulating current control is either too slow or has been set too fast.

Fault value (r0949, interpret bitwise binary):

Bit 0: Phase U.

Bit 1: Phase V.

Bit 2: Phase W.

**Remedy:**

- check the motor data - if required, carry out commissioning.
  - check the motor circuit configuration (star-delta)
  - U/f operation: Increase up ramp.
  - U/f operation: Check assignment of rated currents of motor and power unit.
  - infeed: Check the line supply quality.
  - infeed: Reduce the motor load.
  - infeed: Correct connection of the line reactor.
  - check the power cable connections.
  - check the power cables for short-circuit or ground fault.
  - check the length of the power cables.
  - replace power unit.
- For a parallel switching device (r0108.15 = 1) the following additionally applies:
- check the ground fault monitoring thresholds (p0287).
  - check the setting of the closed-loop circulating current control (p7036, p7037).

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

#### **F30105 PU: Actual value sensing fault**

**Message value:** -  
**Message class:** Power electronics faulted (5)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Power Module **Propagation:** LOCAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** At least one incorrect actual value channel was detected on the Power Stack Adapter (PSA).  
The incorrect actual value channels are displayed in the following diagnostic parameters.  
**Remedy:** Evaluate the diagnostic parameters.  
If the actual value channel is incorrect, check the components and if required, replace.

---

#### **F30314 Power unit: 24 V power supply overloaded by PM**

**Message value:** -  
**Message class:** Supply voltage fault (undervoltage) (3)  
**Drive object:** VECTOR\_G  
**Component:** Power Module **Propagation:** LOCAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** The 24 V power supply through the Power Module (PM) is overloaded.  
An external 24 V power supply via X124 on the Control Unit is not connected.  
**Remedy:** Connect an external 24 V power supply via X124 at the Control Unit.

---

#### **A30315 (F) Power unit: 24 V power supply overloaded by PM**

**Message value:** -  
**Message class:** Supply voltage fault (undervoltage) (3)  
**Drive object:** VECTOR\_G  
**Component:** Power Module **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The 24 V power supply through the Power Module (PM) is overloaded.  
An external 24 V power supply via X124 on the Control Unit is not connected.  
**Remedy:** Connect an external 24 V power supply via X124 at the Control Unit.  
**Reaction upon F:** NONE (OFF1, OFF2, OFF3)  
**Acknowl. upon F:** IMMEDIATELY (POWER ON)

---

#### **A30502 Power unit: DC link overvoltage**

**Message value:** %1  
**Message class:** DC link overvoltage (4)  
**Drive object:** VECTOR\_G  
**Component:** Power Module **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The power unit has detected overvoltage in the DC link on a pulse inhibit.  
- device connection voltage too high.  
- line reactor incorrectly dimensioned.  
Alarm value (r0949, interpret decimal):  
DC link voltage [1 bit = 100 mV].  
See also: r0070 (Actual DC link voltage)  
**Remedy:** - check the device supply voltage (p0210).  
- check the dimensioning of the line reactor.  
See also: p0210 (Drive unit line supply voltage)

---

<b>F30600</b>	<b>SI P2: STOP A initiated</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	<p>The drive-integrated "Safety Integrated" function in monitoring channel 2 has detected a fault and initiated a STOP A (STO via the safety switch-off signal path of monitoring channel 2).</p> <ul style="list-style-type: none"> <li>- forced checking procedure (test stop) of the safety switch-off signal path of monitoring channel 2 unsuccessful.</li> <li>- subsequent response to fault F30611 (defect in a monitoring channel).</li> </ul> <p>Fault value (r0949, interpret decimal):</p> <p>0: Stop request from the Control Unit.</p> <p>1005: STO active although STO not selected and there is no internal STOP A present.</p> <p>1010: STO inactive although STO is selected or an internal STOP A is present.</p> <p>1011: internal error for STO deselected in monitoring channel 2.</p> <p>1020: Internal software error in the "Internal voltage protection" function. The "internal voltage protection" function is withdrawn. A STOP A that cannot be acknowledged is initiated.</p> <p>9999: Subsequent response to fault F30611.</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- select Safe Torque Off and de-select again.</li> <li>- carry out a POWER ON (switch-off/switch-on) for all components.</li> <li>- replace the Motor Module/Hydraulic Module involved.</li> </ul> <p>For fault value = 1020:</p> <ul style="list-style-type: none"> <li>- upgrade the Motor Module/Hydraulic Module software.</li> <li>- replace the Motor Module/Hydraulic Module.</li> </ul> <p>For fault value = 9999:</p> <ul style="list-style-type: none"> <li>- carry out diagnostics for fault F30611.</li> </ul> <p>Note:</p> <p>CU: Control Unit</p> <p>MM: Motor Module</p> <p>SI: Safety Integrated</p> <p>STO: Safe Torque Off / SH: Safe standstill</p>

---

<b>F30611 (A)</b>	<b>SI P2: Defect in a monitoring channel</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE (OFF1, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	<p>The drive-integrated "Safety Integrated" function on processor 2 has detected a fault in the crosswise data comparison between the two monitoring channels and has initiated a STOP F.</p> <p>As a result of this fault, after the parameterized transition has expired (p9858), fault F30600 is output (SI MM: STOP A initiated).</p> <p>Fault value (r0949, interpret decimal):</p> <p>0: Stop request from the other monitoring channel.</p> <p>1 ... 999:</p> <p>Number of the cross-compared data that resulted in this fault. This number is also displayed in r9895.</p> <ol style="list-style-type: none"> <li>1: SI monitoring clock cycle (r9780, r9880).</li> <li>2: SI enable safety functions (p9601, p9801). Crosswise data comparison is only carried out for the supported bits.</li> <li>3: SI SGE changeover discrepancy time (p9650, p9850).</li> <li>4: SI transition period STOP F to STOP A (p9658, p9858).</li> <li>5: SI enable Safe Brake Control (p9602, p9802).</li> <li>6: SI Motion enable, safety-relevant functions (p9501, internal value).</li> <li>7: SI delay time of STO for Safe Stop 1 (p9652, p9852).</li> </ol>

- 8: SI PROFIsafe address (p9610, p9810).
- 9: SI debounce time for STO/SBC/SS1 (MM) (p9651, p9851).
- 10: SI delay time for initiating STO for ESR (p9697, p9897).
- 11: SI Safe Brake Adapter mode, BICO interconnection (p9621, p9821).
- 12: SI Safe Brake Adapter relay ON time (p9622[0], p9822[0]).
- 13: SI Safe Brake Adapter relay OFF time (p9622[1], p9822[1]).
- 14: SI PROFIsafe telegram selection (p9611, p9811).
- 15: SI PROFIsafe bus failure response (p9612, p9812).

1000: Watchdog timer has expired.

Within the time of approx. 5 x p9650, alternatively, the following was defined:

- the signal at terminal EP of the Motor Module continually changed with time intervals less than or equal to the discrepancy time (p9650/p9850).
  - via PROFIsafe/TM54F, STO (also as subsequent response) was continually selected and deselected with time intervals less than or equal to the discrepancy time (p9650/p9850).
  - safe pulse cancellation (r9723.9 - also as subsequent response) was continually selected and deselected with time intervals less than or equal to the discrepancy time (p9650/p9850).
- 1001, 1002: Initialization error, change timer / check timer.
- 1950: Module temperature outside the permissible temperature range.
- 1951: Module temperature not plausible.
- 1952: S120M: hardware access fault.
- 2000: Status of the STO selection for both monitoring channels different.
- 2001: Feedback signal of STO shutdown for both monitoring channels different.
- 2002: Status of the delay timer SS1 for both monitoring channels different (status of the timer in p9650/p9850).
- 2003: Status of the STO terminal for both monitoring channels different.

6000 ... 6999:

Error in the PROFIsafe control.

For these fault values, the failsafe control signals (failsafe values) are transferred to the safety functions. If "STOP B after failure of the PROFIsafe communication" (p9812) is parameterized, the transfer of the failsafe value is delayed. The significance of the individual message values is described in safety message C01611.

#### Remedy:

For fault value = 1 ... 5 and 7 ... 999:

- check the cross data comparison that resulted in a STOP F.
- carry out a POWER ON (switch-off/switch-on) for all components.
- upgrade the Motor Module software.
- upgrade the Control Unit software.

For fault value = 6:

- carry out a POWER ON (switch-off/switch-on) for all components.
- upgrade the Motor Module software.
- upgrade the Control Unit software.

For fault value = 1000:

- check the wiring of the safety-relevant inputs (SGE) on the Control Unit (contact problems).
- PROFIsafe: Remove contact problems/faults at the PROFIBUS master/PROFINET controller.
- check the wiring of the failsafe inputs at the TM54F (contact problems).
- check the discrepancy time, and if required, increase the value (p9650/p9850).

For fault value = 1001, 1002:

- carry out a POWER ON (switch-off/switch-on) for all components.
- upgrade the Motor Module software.
- upgrade the Control Unit software.

For fault value = 1950:

- operate the module in the permissible range.
- check the module fan, replace the Motor Module involved.

- For fault value = 1951:
  - operate the module in the permissible range.
  - replace the Motor Module involved.
- For fault value = 1952:
  - replace the Motor Module involved.
- For fault value = 2000, 2001, 2002, 2003:
  - check the discrepancy time, and if required, increase the value (p9650/p9850, p9652/p9852).
  - check the wiring of the safety-relevant inputs (SGE) (contact problems).
  - check why STO was selected in r9872. When the SMM functions are active (p9501 = 1), STO can also be selected using these functions.
  - replace the Motor Module involved.

**Note:**

This fault can be acknowledged after removing the cause of the error and after correct selection/deselection of STO.

For fault value = 6000 ... 6999:

Refer to the description of the message values in safety message C01611.

**Note:**

- CU: Control Unit
- EP: Enable Pulses (pulse enable)
- ESR: Extended Stop and Retract
- MM: Motor Module
- SGE: Safety-relevant input
- SI: Safety Integrated
- SMM: Safe Motion Monitoring
- SS1: Safe Stop 1 (corresponds to Stop Category 1 acc. to EN60204)
- STO: Safe Torque Off / SH: Safe standstill

Reaction upon A: NONE  
Acknowl. upon A: NONE

**N30620 (F, A) SI P2: Safe Torque Off active**

**Message value:** -  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The "Safe Torque Off" (STO) function of the basic functions has been selected in monitoring channel 2 using the input terminal and is active.

**Note:**

- this message does not result in a safety stop response.
- this message is not output when STO is selected using the Extended Functions.

**Remedy:** Not necessary.

**Note:**

- MM: Motor Module
- SI: Safety Integrated
- STO: Safe Torque Off / SH: Safe standstill

Reaction upon F: OFF2  
 Acknowl. upon F: IMMEDIATELY (POWER ON)  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

<b>N30621 (F, A)</b>	<b>SI P2: Safe Stop 1 active</b>
<b>Message value:</b>	-
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The "Safe Stop 1" function (SS1) was selected in monitoring channel 2 and is active. Note: This message does not result in a safety stop response.
<b>Remedy:</b>	Not necessary. Note: MM: Motor Module SI: Safety Integrated SS1: Safe Stop 1 (corresponds to Stop Category 1 acc. to EN60204)
Reaction upon F:	NONE (OFF3)
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F30625</b>	<b>SI P2: Sign-of-life error in safety data</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The drive-integrated "Safety Integrated" function in monitoring channel 2 has detected an error in the sign-of-life of the safety data between the two monitoring channels and initiated a STOP A. - there is either a DRIVE-CLiQ communication error or communication has failed. - a time slice overflow of the safety software has occurred. - the enable of the safety functions in both monitoring channels is inconsistent (p9601 = 0, p9801 <> 0). Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- select Safe Torque Off and de-select again. - carry out a POWER ON (switch-off/switch-on) for all components. Check whether there is a DRIVE-CLiQ communication error between the two monitoring channels and, if required, carry out a diagnostics routine for the faults identified. - de-select all drive functions that are not absolutely necessary. - reduce the number of drives. - check the electrical cabinet design and cable routing for EMC compliance - check the enable of the safety functions for both of the monitoring channels and if required, correct (p9601, p9801). Note: CU: Control Unit MM: Motor Module SI: Safety Integrated

<b>F30630</b>	<b>SI P2: Brake control error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	<p>The "Safety Integrated" function integrated in the drive on the Motor Module (MM) has detected a brake control error and initiated a STOP A.</p> <ul style="list-style-type: none"> <li>- motor cable is not shielded correctly.</li> <li>- defect in control circuit of the Motor Module.</li> </ul> <p>Fault value (r0949, interpret decimal):</p> <p>10: Fault in "open holding brake" operation.</p> <ul style="list-style-type: none"> <li>- parameter p1278 incorrectly set.</li> <li>- no brake connected or wire breakage (check whether brake releases for p1278 = 1 and p9602/p9802 = 0 (SBC deactivated)).</li> <li>- ground fault in brake cable.</li> </ul> <p>30: Fault in "close holding brake" operation.</p> <ul style="list-style-type: none"> <li>- no brake connected or wire breakage (check whether brake releases for p1278 = 1 and p9602/p9802 = 0 (SBC deactivated)).</li> <li>- short-circuit in brake winding.</li> </ul> <p>40: Fault in "brake closed" state.</p> <p>60, 70: Fault in the brake control circuit of the Control Unit or communication fault between the Control Unit and Motor Module (brake control).</p> <p>81: Safe Brake Adapter: Fault in "brake closed" state.</p> <p>82: Safe Brake Adapter: Fault for the operation "open brake".</p> <p>83: Safe Brake Adapter: Fault for the operation "close brake".</p> <p>84, 85: Safe Brake Adapter: Fault in the brake control circuit of the Control Unit or communication fault between the Control Unit and Motor Module (brake control).</p> <p>90: Brake released for service purposes (X4).</p> <p>91: Fault in "open holding brake" operation.</p> <ul style="list-style-type: none"> <li>- no brake connected or wire breakage (check whether brake releases for p1278 = 1 and p9602/p9802 = 0 (SBC deactivated)).</li> </ul>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check parameter p1278 (for SBC, only p1278 = 0 is permissible).</li> <li>- select Safe Torque Off and de-select again.</li> <li>- check the motor holding brake connection.</li> <li>- check the function of the motor holding brake.</li> <li>- check whether there is a DRIVE-CLiQ communication error between the Control Unit and the Motor Module involved and, if required, carry out a diagnostics routine for the faults identified.</li> <li>- check that the electrical cabinet design and cable routing are in compliance with EMC regulations (e.g. shield of the motor cable and brake conductors are connected with the shield connecting plate and the motor connectors are tightly screwed to the housing).</li> <li>- replace the Motor Module involved.</li> </ul> <p>Operation with Safe Brake Module or Safe Brake Adapter:</p> <ul style="list-style-type: none"> <li>- check the Safe Brake Module or Safe Brake Adapter connection.</li> <li>- Replace the Safe Brake Module or Safe Brake Adapter.</li> </ul>

## 4 Faults and alarms

### 4.2 List of faults and alarms

Note:  
MM: Motor Module  
SBC: Safe Brake Control  
SI: Safety Integrated

---

<b>F30631</b>	<b>Brake control: External release active</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	For mounting purposes, the brake is supplied with voltage via terminal X4.1 and released.		
<b>Remedy:</b>	If required, again remove the power supply at X4.1.		

---

<b>A30640 (F)</b>	<b>SI P2: Fault in the switch-off signal path of the second channel</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The Motor Module has detected a communication error with the higher-level control or the TM54F to transfer the safety-relevant information or there is a communication error between Motor Modules connected in parallel. Note: This fault results in a STOP A that can be acknowledged. Alarm value (r2124, interpret decimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	For the higher-level control, the following applies: - check the PROFIsafe address in the higher-level control and Motor Modules and if required, align. - save all parameters (p0977 = 1). - carry out a POWER ON (switch-off/switch-on) for all components. For TM54F, carry out the following steps: - start the copy function for the node identifier (p9700 = 1D hex). - acknowledge hardware CRC (p9701 = EC hex). - save all parameters (p0977 = 1). - carry out a POWER ON (switch-off/switch-on) for all components. For a parallel connection, the following applies: - check the PROFIsafe address in both monitoring channels and if required, align. - save all parameters (p0977 = 1). - carry out a POWER ON (switch-off/switch-on) for all components. The following generally applies: - upgrade the Motor Module software. Note: MM: Motor Module SI: Safety Integrated See also: p9810 (SI PROFIsafe address (Motor Module))		
Reaction upon F:	NONE (OFF2)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		

<b>F30649</b>	<b>SI P2: Internal software error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	An internal error in the Safety Integrated software in monitoring channel 2 has occurred. Note: This fault results in a STOP A that cannot be acknowledged. Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on) for all components. - re-commission the Safety Integrated function and carry out a POWER ON. - upgrade the Motor Module/Hydraulic Module software. - contact Technical Support. - replace the Motor Module/Hydraulic Module. Note: MM: Motor Module SI: Safety Integrated
<b>F30650</b>	<b>SI P2: Acceptance test required</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Power Module
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The "Safety Integrated" function on monitoring channel 2 requires an acceptance test. Note: This fault results in a STOP A that can be acknowledged. Fault value (r0949, interpret decimal): 130: Safety parameters for monitoring channel 2 not available. Note: This fault value is always output when Safety Integrated is commissioned for the first time. 1000: Reference and actual checksum in monitoring channel 2 are not identical (booting). - as a result of the changed current controller sampling time (p0115[0]), the clock cycle time for the Safety Integrated Basic Functions (r9880) was adapted. - safety parameters set offline and loaded into the Control Unit. - a download was made to the SINAMICS, whose firmware versions in monitoring channel 2 did not correspond to the latest version. The request to switch off the DRIVE-CLiQ component A1007 was present after the download. - at least one checksum-checked piece of data is defective. 2000: Reference and actual checksum in monitoring channel 2 are not identical (commissioning mode). - reference checksum on monitoring channel 2 incorrectly entered (p9899 not equal to r9898). 2003: Acceptance test is required as a safety parameter has been changed. 2005: The safety logbook has identified that the safety checksums have changed. An acceptance test is required. 3003: Acceptance test is required as a hardware-related safety parameter has been changed. 9999: Subsequent response of another safety-related fault that occurred when booting that requires an acceptance test.
<b>Remedy:</b>	For fault value = 130: - carry out safety commissioning routine. For fault value = 1000: - check the Safety Integrated Basic Functions (r9880) and adapt the reference checksum (p9899). - again carry out safety commissioning routine.

## 4 Faults and alarms

### 4.2 List of faults and alarms

- Using STARTER, activate the safety parameters for the drive involved (change settings, copy parameters, activate settings).
- switch off and switch on the drive unit and DRIVE-CLiQ components. If A30650 is still present, repeat the download.
- replace the memory card or Control Unit.

For fault value = 2000:

- check the safety parameters on monitoring channel 2 and adapt the reference checksum (p9899).

For fault value = 2003, 2005:

- carry out an acceptance test and generate an acceptance report.

The procedure when carrying out an acceptance test as well as an example of the acceptance report are provided in the following literature:

SINAMICS S120 Function Manual Safety Integrated

For fault value = 3003:

- carry out the function checks for the modified hardware and generate an acceptance report.

The procedure when carrying out an acceptance test as well as an example of the acceptance report are provided in the following literature:

SINAMICS S120 Function Manual Safety Integrated

For fault value = 9999:

- carry out diagnostics for the other safety-related fault that is present.

Note:

MM: Motor Module

SI: Safety Integrated

See also: p9799 (SI reference checksum SI parameters (Control Unit)), p9899 (SI reference checksum SI parameters (Motor Module))

---

<b>F30651</b>	<b>SI P2: Synchronization with Control Unit unsuccessful</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The drive-integrated "Safety Integrated" function requires synchronization of the safety time slices in both monitoring channels. This synchronization routine was unsuccessful.		
	Note:		
	This fault results in a STOP A that cannot be acknowledged.		
	Fault value (r0949, interpret decimal):		
	Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on) for all components.		
	- upgrade the Motor Module/Hydraulic Module software.		
	- upgrade the Control Unit software.		
	Note:		
	MM: Motor Module		
	SI: Safety Integrated		

---

<b>F30652</b>	<b>SI P2: Illegal monitoring clock cycle</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The Safety Integrated monitoring clock cycle cannot be maintained due to the communication conditions requested in the system.		
	Note:		
	This fault results in a STOP A that cannot be acknowledged.		



For fault value = 129:

- activate the safety commissioning mode (p0010 = 95).
- adapt the PROFIsafe address (p9610).
- start the copy function for SI parameters (p9700 = D0 hex).
- acknowledge data change (p9701 = DC hex).
- exit the safety commissioning mode (p0010 = 0).
- save all parameters (p0977 = 1 or "copy RAM to ROM").
- carry out a POWER ON (switch-off/switch-on) for all components.

Note:

MM: Motor Module

SI: Safety Integrated

---

<b>F30657</b>	<b>SI P2: PROFIsafe telegram number invalid</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None <span style="float: right;"><b>Propagation:</b> GLOBAL</span>
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	The PROFIsafe telegram number set in p9811 is not valid. When PROFIsafe is enabled (p9801.3 = 1), then a telegram number greater than zero must be entered in p9811.
	Note: This fault does not result in a safety stop response. See also: p9611 (SI PROFIsafe telegram selection (Control Unit)), p60022 (PROFIsafe telegram selection)
<b>Remedy:</b>	Check the telegram number setting (p9811).

---

<b>F30659</b>	<b>SI P2: Write request for parameter rejected</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The write request for one or several Safety Integrated parameters in monitoring channel 2 was rejected.
	Note: This fault does not result in a safety stop response. Fault value (r0949, interpret decimal): 10: An attempt was made to enable the STO function although this cannot be supported. 11: An attempt was made to enable the SBC function although this cannot be supported. 13: An attempt was made to enable the SS1 function although this cannot be supported. 14: An attempt was made to enable the safe motion monitoring function with the higher-level control, although this cannot be supported. 15: An attempt was made to enable the motion monitoring functions integrated in the drive although these cannot be supported. 16: An attempt was made to enable the PROFIsafe communication - although this cannot be supported or the version of the PROFIsafe driver used on both monitoring channels is different. 18: An attempt was made to enable the PROFIsafe function for Basic Functions although this cannot be supported. 19: For ESR, an attempt was made to enable the delay for pulse suppression, although this cannot be supported. 27: An attempt was made to activate the Basic Functions by controlling via TM54F although this cannot be supported. 28: An attempt was made to enable the "STO via terminals at the Power Module" function although this cannot be supported. 29: An attempt was made to parameterize the stop response for PROFIsafe failure to STOP B although this is not supported. See also: r9771 (SI common functions (Control Unit)), r9871 (SI common functions (Motor Module))



## 4 Faults and alarms

### 4.2 List of faults and alarms

For fault value = 2:

- check parameters p9500 and p9300 to see if they are the same (if Safety message C30711 is displayed at the same time).

For fault value = 400000 hex:

- ensure that the Control Unit is connected to the Power Module.

---

<b>A30666 (F)</b>	<b>SI Motion P2: Steady-state (static) 1 signal at the F-DI for safe acknowledgment</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	A logical 1 signal is present at the F-DI configured in p10106 for more than 10 seconds. If, at the F-DI no acknowledgment was performed for safe acknowledgment, then a steady-state logical and 0 signal must be present. This avoids unintentional safety-relevant acknowledgment (or the "Internal Event Acknowledge" signal) if a wire breaks or one of the two digital inputs bounces.		
<b>Remedy:</b>	Set the fail-safe digital input (F-DI) to a logical 0 signal (p10106). Note: F-DI: Failsafe Digital Input		
Reaction upon F:	NONE		
Acknowl. upon F:	IMMEDIATELY		

---

<b>F30672</b>	<b>SI P2: Control Unit software incompatible</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The existing Control Unit software does not support the safe drive-based motion monitoring function. Note: This fault results in a STOP A that cannot be acknowledged. Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	- check whether there are faults in the safety function alignment between the two monitoring channels (F01655, F30655) and if required, carry out diagnostics for the faults involved. - use a Control Unit that supports the safe motion monitoring function. - upgrade the Control Unit software. Note: SI: Safety Integrated		

---

<b>F30674</b>	<b>SI Motion P2: Safety function not supported by PROFIsafe telegram</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	POWER ON		
<b>Cause:</b>	The monitoring function enabled in p9301 and p9801 is not supported by the currently set PROFIsafe telegram (p9811). Note: This fault does not result in a safety stop response. Fault value (r0949, interpret bitwise binary): Bit 18 = 1: SS2E via PROFIsafe is not supported (p9301.18).		

Bit 24 = 1:  
Transfer SLS (SG) limit value via PROFIsafe not supported (p9301.24).  
Bit 25 = 1:  
Transfer safe position via PROFIsafe is not supported (p9301.25).  
Bit 26 = 1:  
Gearbox stage switchover via PROFIsafe is not supported (p9301.26).

**Remedy:**  
- deselect the monitoring function involved (p9301, p9801).  
- set the matching PROFIsafe telegram (p9811).

Note:  
SI: Safety Integrated  
SLS: Safely Limited Speed  
SP: Safe Position  
SS2E: Safe Stop 2 external (Safe Stop 2 with external stop, external STOP D)

**F30680 SI Motion P2: Checksum error safety monitoring functions**

**Message value:** %1  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** Power Module **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** The actual checksum calculated by the Motor Module/Hydraulic Module and entered in r9398 via the safety-relevant parameters does not match the reference checksum saved in p9399 at the last machine acceptance. Safety-relevant parameters have been changed or a fault is present.

Note:  
This fault results in a STOP A that can be acknowledged.  
Fault value (r0949, interpret decimal):  
0: Checksum error for SI parameters for motion monitoring.  
1: Checksum error for SI parameters for component assignment.

**Remedy:**  
- check the safety-relevant parameters and if required, correct.  
- set the reference checksum to the actual checksum.  
- execute the function "Copy RAM to ROM".  
- perform a POWER ON if safety parameters requiring a POWER ON have been modified.  
- carry out an acceptance test.

**F30681 SI Motion P1: Incorrect parameter value**

**Message value:** Parameter: %1, supplementary information: %2  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** The parameter cannot be parameterized with this value.

Note:  
This message does not result in a safety stop response.  
Fault value (r0949, interpret decimal):  
yyyyxxxx dec: yyyy = supplementary information, xxxx = parameter  
yyyy = 0:  
No information available.

xxxx = 9301:  
It is not permissible to enable the function "n < nx hysteresis and filtering" (p9301.16) in conjunction with the function "Extended functions without selection" (p9801.5).  
xxxx = 9301 and yyyy = 8:  
Referencing via SCC (p9301.27 = 1) is enabled without enabling absolute motion monitoring functions (p9301.1 or p9301.2).

xxxx = 9334 or 9335:

The limit values of SLP have been set too high (absolute values).

xxxx = 9347:

The hysteresis tolerance is not permissible.

xxxx = 9385:

For Safety without encoder and synchronous motor, p9385 must be set to 4.

xxxx = 9801 and yyyy = 1:

If motion monitoring functions integrated in the drive (p9801.2 = 1) and extended functions without selection (p9801.5 = 1) are activated, then PROFIsafe (p9801.3 = 1) is not possible.

xxxx = 9801 and yyyy = 2:

Extended functions without selection (p9801.5 = 1) are enabled without enabling motion monitoring functions integrated in the drive (p9801.2).

xxxx = 9801 and yyyy = 3:

Onboard F-DI are enabled without enabling motion monitoring functions integrated in the drive (p9801.2).

xxxx = 9801 and yyyy = 5:

Transfer of the SLS limit value via PROFIsafe (p9301.24) has been enabled, without enabling PROFIsafe.

xxxx = 9801 and yyyy = 6:

Transfer of the safe position via PROFIsafe (p9301.25) has been enabled without enabling PROFIsafe.

xxxx = 9801 and yyyy = 7:

Safe switchover of the gearbox stages (p9301.26 = 1) has been enabled without enabling PROFIsafe.

xxxx = 9801 and yyyy = 11:

SS2E (p9301.18 = 1) is enabled without enabling PROFIsafe.

#### Remedy:

Correct parameter (if required, also on another monitoring channel, p9601).

Note:

For different values in the two monitoring channels, start the copy function for SI parameters on the drive (p9700 = 57 hex).

If xxxx = 9301:

Correct parameters p9501.16 and p9301.16 or deselect the extended functions without selection (p9801.5).

If xxxx = 9501 and yyyy = 8:

Inhibit referencing via SCC (p9501.27 = 1) or enable an absolute motion monitoring function (p9501.1 or p9501.2).

If xxxx = 9317:

Further, p9316.0 should be checked.

If xxxx = 9334 or 9335:

Reduce the limit values (absolute values) of SLP.

If xxxx = 9347:

With hysteresis/filtering enabled (p9301.16 = 1), the following applies:

- set parameters p9346 and p9347 according to the following rule:  $p9347 \leq 0.75 \times p9346$ ;

- the following rule must also be adhered to when actual value synchronization (p9301.3 = 1) is enabled:  $p9347 \geq p9349$ ;

If xxxx = 9801:

yyyy = 1:

Only enable motion monitoring functions integrated in the drive (p9801.2 = 1) and extended functions without selection (p9801.5 = 1) – or only PROFIsafe (p9801.3 = 1).

yyyy = 2, 3:

Enable motion monitoring functions integrated in the drive (p9801.2 = 1).

yyyy = 5:

To transfer the SLS limit values via PROFIsafe (p9301.24 = 1), also enable PROFIsafe (p9801.3 = 1) and motion monitoring functions integrated in the drive (p9801.2 = 1).

yyyy = 6:

For the safe position via PROFIsafe (p9301.25 = 1), also enable PROFIsafe (p9801.3 = 1) and motion monitoring functions integrated in the drive (p9801.2 = 1).

yyyy = 7:

For safe switchover of gearbox stages (p9301.26 = 1) also enable PROFIsafe (p9801.3 = 1) and motion monitoring functions integrated in the drive (p9801.2 = 1).

<b>F30682</b>	<b>SI Motion P2: Monitoring function not supported</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The monitoring function enabled in p9301, p9501, p9601, p9801, p9306, p9506, p9307 or p9507 is not supported in this firmware version. Note: This message does not result in a safety stop response. Fault value (r0949, interpret decimal): 1: Monitoring function SLP not supported (p9301.1). 2: Monitoring function SCA not supported (p9301.7 and p9301.8 ... 15). 3: Monitoring function SLS override not supported (p9301.5). 4: Monitoring function external ESR activation not supported (p9301.4). 5: Monitoring function F-DI in PROFIsafe not supported (p9301.30). 6: Enable actual value synchronization not supported (p9301.3). 9: Monitoring function not supported by the firmware or enable bit not used. 12: This Control Unit does not support operation of safety functions with a higher-level control (e.g. SINUMERIK). 24: Monitoring function SDI not supported. 26: Hysteresis and filtering for SSM monitoring function without an encoder not supported (p9301.16). 27: This hardware does not support onboard F-DI and F-DO. 30: The firmware version of the Motor Module is older than the version of the Control Unit. 33: Safety functions without selection not supported (p9601.5, p9801.5). 34: This module does not support safe position via PROFIsafe. 36: Function "SS1E" not supported. 39: This module or software version of the CU/MM does not support safe gearbox stage switchover (p9501.26). 44: this module/this software version does not support referencing via the safety control channel (p9501.27). 50: Shortening the switchover times for SOS (p9569/p9369, p9567/p9367) is not supported. 52: "SBR with encoder" function is not supported (p9306 = 2). 53: function SS2E not supported (p9301.18).
<b>Remedy:</b>	- deselect monitoring function involved (p9301, p9501, p9601, p9801, p9307, p9507, p9506, p9306). - Upgrade the Motor Module firmware. Note: ESR: Extended Stop and Retract F-DI: Failsafe Digital Input SBR: Safe Brake Ramp (safe brake ramp monitoring) SCA: Safe Cam / SN: Safe software cam SDI: Safe Direction (safe motion direction) SI: Safety Integrated SLP: Safely Limited Position / SE: Safe software limit switches SLS: Safely Limited Speed / SG: Safely reduced speed SP: Safe Position SS1E: Safe Stop 1 External (Safe Stop 1 with external stop) SS2E: Safe Stop 2 external (Safe Stop 2 with external stop, external STOP D) See also: p9301 (SI Motion enable safety functions (Motor Module)), p9501 (SI Motion enable safety functions (Control Unit)), p9503 (SI Motion SCA (SN) enable (Control Unit)), p9601 (SI enable functions integrated in the drive (Control Unit)), p9801 (SI enable functions integrated in the drive (Motor Module)), r9871 (SI common functions (Motor Module))

---

**F30683 SI Motion P2: SOS/SLS enable missing**

**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** The safety-relevant basic function "SOS/SLS" is not enabled in p9301 although other safety-relevant monitoring functions are enabled.  
**Note:**  
This message does not result in a safety stop response.  
**Remedy:** Enable the function "SOS/SLS" (p9301.0) and carry out a POWER ON.  
**Note:**  
SI: Safety Integrated  
SLS: Safely Limited Speed / SG: Safely reduced speed  
SOS: Safe Operating Stop / SBH: Safe operating stop  
See also: p9301 (SI Motion enable safety functions (Motor Module))

---

**F30684 SI Motion P2: Safely limited position limit values interchanged**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** For the function "Safely Limited Position" (SLP), a lower value is in p9334 than in p9335.  
**Note:**  
This fault does not result in a safety stop response.  
Fault value (r0949, interpret decimal):  
1: Limit values SLP1 interchanged.  
2: Limit values SLP2 interchanged.  
See also: p9334 (SI Motion SLP upper limit values (Motor Module)), p9335 (SI Motion SLP lower limit values (Motor Module))  
**Remedy:** - correct the lower and upper limit values (p9335, p9334).  
- carry out a POWER ON (switch off/on).  
**Note:**  
SI: Safety Integrated  
SLP: Safely Limited Position / SE: Safe software limit switches

---

**F30685 SI Motion P2: Safely Limited Speed limit value too high**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** The limit value for the function "Safely Limited Speed" (SLS) is greater than the speed that corresponds to an encoder limit frequency of 500 kHz.  
**Note:**  
This message does not result in a safety stop response.  
Fault value (r0949, interpret decimal):  
Maximum permissible speed.



---

<b>A30693 (F)</b>	<b>SI P2: Safety parameter settings changed, warm restart/POWER ON required</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Safety parameters have been changed; these will only take effect following a warm restart or POWER ON. Notice: All changed parameters of the safety motion monitoring functions will only take effect following a warm restart or POWER ON. Alarm value (r2124, interpret decimal): Parameter number of the safety parameter which has changed, necessitating a warm restart or POWER ON.
<b>Remedy:</b>	- carry out a warm restart (p0009 = 30, p0976 = 2, 3). - carry out a POWER ON (switch off/on) for all components. Note: Before performing an acceptance test, a POWER ON must be carried out for all components.
Reaction upon F:	NONE (OFF1, OFF2, OFF3)
Acknowl. upon F:	POWER ON

---

<b>C30700</b>	<b>SI Motion P2: STOP A initiated</b>
<b>Message value:</b>	-
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The drive is stopped via a STOP A (STO via the safety switch-off signal path of the Control Unit). Possible causes: - stop request from the Control Unit. - STO not active after a parameterized time (p9357) after test stop selection. - subsequent response to the message C30706 "SI Motion MM: SAM/SBR limit exceeded". - subsequent response to the message C30714 "SI Motion MM: Safely Limited Speed exceeded". - subsequent response to the message C30701 "SI Motion MM: STOP B initiated". - subsequent response to the message C01715 "SI Motion CU: Safely Limited Position exceeded". - subsequent response to the message C30716 "SI Motion MM: tolerance for safe motion direction exceeded".
<b>Remedy:</b>	- remove the cause to the fault on the Control Unit. - check the value in p9357, if required, increase the value. - check the switch-off signal path of the Control Unit (check DRIVE-CLiQ communication). - carry out a diagnostics routine for message C30706. - carry out a diagnostics routine for message C30714. - carry out a diagnostics routine for message C30701. - carry out a diagnostics routine for message C30715. - carry out a diagnostics routine for message C30716. - replace the Motor Module, Power Module or Hydraulic Module. - replace Control Unit. This message can be acknowledged without a POWER ON as follows (safe acknowledgment): - Terminal Module 54F (TM54F). - onboard F-DI (only CU310-2). - PROFIsafe. - machine control panel. Note: SAM: Safe Acceleration Monitor (safe acceleration monitoring) SBR: Safe Brake Ramp (safe brake ramp monitoring) SI: Safety Integrated

**C30701 SI Motion P2: STOP B initiated**

<b>Message value:</b>	-		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE (OFF3)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	<p>The drive is stopped via a STOP B (braking along the OFF3 ramp).</p> <p>As a result of this fault, after the time parameterized in p9356 has expired or after the speed threshold parameterized in p9360 has been fallen below, message C30700 "SI Motion MM: STOP A initiated" is output.</p> <p>Possible causes:</p> <ul style="list-style-type: none"> <li>- stop request from the Control Unit.</li> <li>- subsequent response to the message C30714 "SI Motion MM: Safely Limited Speed exceeded".</li> <li>- subsequent response to the message C30711 "SI Motion MM: Defect in a monitoring channel".</li> <li>- subsequent response to the message C30707 "SI Motion MM: tolerance for safe operating stop exceeded".</li> <li>- subsequent response to the message C01715 "SI Motion CU: Safely Limited Position exceeded".</li> <li>- subsequent response to the message C30716 "SI Motion MM: tolerance for safe motion direction exceeded".</li> </ul>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- remove the cause to the fault on the Control Unit.</li> <li>- carry out a diagnostics routine for message C30714.</li> <li>- carry out a diagnostics routine for message C30711.</li> <li>- carry out a diagnostics routine for message C30707.</li> <li>- carry out a diagnostics routine for message C30715.</li> <li>- carry out a diagnostics routine for message C30716.</li> </ul> <p>This message can be acknowledged without a POWER ON as follows (safe acknowledgment):</p> <ul style="list-style-type: none"> <li>- Terminal Module 54F (TM54F).</li> <li>- onboard F-DI (only CU310-2).</li> <li>- PROFIsafe.</li> <li>- machine control panel.</li> </ul> <p>Note:</p> <p>SI: Safety Integrated</p>		

**C30706 SI Motion P2: SAM/SBR limit exceeded**

<b>Message value:</b>	-		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	<p>Motion monitoring functions with encoder (p9306 = 0) or encoderless with set acceleration monitoring (SAM, p9306 = 3):</p> <ul style="list-style-type: none"> <li>- after initiating STOP B (SS1) or STOP C (SS2), the speed has exceeded the selected tolerance.</li> </ul> <p>Motion monitoring functions encoderless with set brake ramp monitoring (SBR p9306 = 1):</p> <ul style="list-style-type: none"> <li>- after initiating STOP B (SS1) or SLS changeover to the lower speed level, the speed has exceeded the selected tolerance.</li> </ul> <p>The drive is shut down by the message C30700 "SI Motion MM: STOP A initiated".</p>		
<b>Remedy:</b>	<p>Check the braking behavior and, if necessary, adapt the parameterization of the parameter settings of the "SAM" or the "SBR" function.</p> <p>This message can be acknowledged without a POWER ON as follows (safe acknowledgment):</p> <ul style="list-style-type: none"> <li>- Terminal Module 54F (TM54F).</li> <li>- onboard F-DI (only CU310-2).</li> <li>- PROFIsafe.</li> <li>- machine control panel.</li> </ul>		

Note:

SAM: Safe Acceleration Monitor (safe acceleration monitoring)

SBR: Safe Brake Ramp (safe ramp monitoring)

SI: Safety Integrated

See also: p9348, p9381, p9382, p9383, p9548

---

#### C30707

#### SI Motion P2: Tolerance for safe operating stop exceeded

**Message value:** -

**Message class:** Safety monitoring channel has identified an error (10)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The actual position has distanced itself further from the target position than the standstill tolerance.  
The drive is shut down by the message C30701 "SI Motion MM: STOP B initiated".

**Remedy:** - check whether safety faults are present and if required carry out the appropriate diagnostic routines for the particular faults.

- check whether the standstill tolerance matches the accuracy and control dynamic performance of the axis.

This message can be acknowledged without a POWER ON as follows (safe acknowledgment):

- Terminal Module 54F (TM54F).

- onboard F-DI (only CU310-2).

- PROFIsafe.

- machine control panel.

Note:

SI: Safety Integrated

SOS: Safe Operating Stop / SBH: Safe operating stop

See also: p9530 (SI Motion standstill tolerance (Control Unit))

---

#### C30708

#### SI Motion P2: STOP C initiated

**Message value:** -

**Message class:** Safety monitoring channel has identified an error (10)

**Drive object:** VECTOR\_G

**Component:** None

**Propagation:** GLOBAL

**Reaction:** STOP2

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The drive is stopped via a STOP C (braking along the OFF3 ramp).  
"Safe Operating Stop" (SOS) is activated after the parameterized time has expired.

Possible causes:

- stop request from the higher-level control.

- subsequent response to the message C30714 "SI Motion MM: Safely Limited Speed exceeded".

- subsequent response to the message C01715 "SI Motion CU: Safely Limited Position exceeded".

- subsequent response to the message C30716 "SI Motion MM: tolerance for safe motion direction exceeded".

See also: p9552 (SI Motion transition time STOP C to SOS (SBH) (Control Unit))

**Remedy:** - remove the cause of the fault at the control.

- carry out a diagnostics routine for messages C30714, C30715, C30716.

This message can be acknowledged without a POWER ON as follows (safe acknowledgment):

- Terminal Module 54F (TM54F).

- onboard F-DI (only CU310-2).

- PROFIsafe.

- machine control panel.

Note:

SI: Safety Integrated

SOS: Safe Operating Stop / SBH: Safe operating stop

---

**C30709 SI Motion P2: STOP D initiated**

**Message value:** -  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** The drive is stopped via a STOP D (braking along the path).  
"Safe Operating Stop" (SOS) is activated after the parameterized time has expired.  
Possible causes:  
- stop request from the Control Unit.  
- subsequent response to the message C30714 "SI Motion MM: Safely Limited Speed exceeded".  
- subsequent response to the message C01715 "SI Motion CU: Safely Limited Position exceeded".  
- subsequent response to the message C30716 "SI Motion MM: tolerance for safe motion direction exceeded".  
See also: p9353 (SI Motion transition time STOP D to SOS (Motor Module)), p9553 (SI Motion transition time STOP D to SOS (SBH) (Control Unit))  
**Remedy:**  
- remove the cause of the fault at the control.  
- carry out a diagnostics routine for messages C30714, C30715, C30716.  
This message can be acknowledged without a POWER ON as follows (safe acknowledgment):  
- Terminal Module 54F (TM54F).  
- onboard F-DI (only CU310-2).  
- PROFIsafe.  
- machine control panel.  
**Note:**  
SI: Safety Integrated  
SOS: Safe Operating Stop / SBH: Safe operating stop

---

**C30710 SI Motion P2: STOP E initiated**

**Message value:** -  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** The drive is stopped via a STOP E (retraction motion).  
"Safe Operating Stop" (SOS) is activated after the parameterized time has expired.  
Possible causes:  
- stop request from the higher-level control.  
- subsequent response to the message C30714 "SI Motion MM: Safely Limited Speed exceeded".  
- subsequent response to the message C01715 "SI Motion CU: Safely Limited Position exceeded".  
- subsequent response to the message C30716 "SI Motion MM: tolerance for safe motion direction exceeded".  
See also: p9354 (SI Motion transition time STOP E to SOS (Motor Module)), p9554 (SI Motion transition time STOP E to SOS (SBH) (Control Unit))  
**Remedy:**  
- remove the cause of the fault at the control.  
- carry out a diagnostics routine for messages C30714, C30715, C30716.  
This message can be acknowledged without a POWER ON as follows (safe acknowledgment):  
- Terminal Module 54F (TM54F).  
- onboard F-DI (only CU310-2).  
- PROFIsafe.  
- machine control panel.  
**Note:**  
SI: Safety Integrated  
SOS: Safe Operating Stop / SBH: Safe operating stop

<b>C30711</b>	<b>SI Motion P2: Defect in a monitoring channel</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	<p>When cross-comparing the two monitoring channels, the drive detected a difference between the input data or results of the monitoring functions and initiated a STOP F. One of the monitoring functions no longer reliably functions - i.e. safe operation is no longer possible.</p> <p>If at least one monitoring function is active, then after the parameterized timer has expired, the message C30701 "SI Motion: STOP B initiated" is output. The message is output with message value 1031 when the Sensor Module hardware is replaced.</p> <p>The following message values may also occur in the following cases if the cause that is explicitly mentioned does not apply:</p> <ul style="list-style-type: none"> <li>- differently parameterized cycle times (p9500/p9300, p9511/p9311).</li> <li>- differently parameterized axis types (p9502/p9302).</li> <li>- excessively fast cycle times (p9500/p9300, p9511/p9311).</li> <li>- incorrect synchronization.</li> </ul> <p>Message value (r9749, interpret decimal):</p> <p>0 ... 999:</p> <p>Number of the cross-compared data that resulted in this message.</p> <p>The significance of the individual message values is described in safety message C01711 of the Control Unit.</p> <p>1000: Watchdog timer has expired. Too many signal changes have occurred at safety-relevant inputs.</p> <p>1001: Initialization error of watchdog timer.</p> <p>1002:</p> <p>User agreement after the timer has expired different.</p> <p>The user agreement is not consistent. After a time of 4 s has expired, the status of the user agreement is different in both monitoring channels.</p> <p>1003: Reference tolerance exceeded. When the user agreement is set, the difference between the new reference point that has been determined after power up (absolute encoder) or reference point approach (distance-coded or incremental measuring system) and the safe actual position (saved value + traversing distance) is greater than the reference tolerance (p9344). In this case, the user agreement is withdrawn.</p> <p>1004:</p> <p>Plausibility error for user agreement.</p> <ol style="list-style-type: none"> <li>1. If the user agreement has already been set, then the setting is initiated again. In this case, the user agreement is withdrawn.</li> <li>2. The user agreement was set, although the axis has still not been referenced.</li> </ol> <p>1005:</p> <ul style="list-style-type: none"> <li>- for safe motion monitoring functions without encoder: pulses already suppressed for test stop selection.</li> <li>- for safe motion monitoring functions with encoder: STO already active for test stop selection.</li> </ul> <p>1011: Acceptance test status between the monitoring channels differ.</p> <p>1012: Plausibility violation of the actual value from the encoder.</p> <p>1015: Gearbox switchover (bit 27 in PROFIsafe telegram) takes longer than 2 min.</p> <p>1020: Cyc. communication failure between the monit. channels.</p> <p>1021: Cyc. communication failure between the monit. channel and Sensor Module.</p> <p>1023: Error in the effectiveness test in the DRIVE-CLiQ encoder</p> <p>1024: Sign-of-life error for HTL/TTL encoders.</p> <p>1030: Encoder fault detected from another monitoring channel.</p> <p>1031:</p> <ul style="list-style-type: none"> <li>- data transfer error between the monitoring channel and the Sensor Module (p9526/p9326).</li> <li>- the Sensor Module for the second channel was replaced.</li> <li>- the encoder for the second channel has been incorrectly parameterized.</li> </ul> <p>1040: Pulses suppressed with active encoderless monitoring functions.</p> <p>1041: Current absolute value too low (encoderless)</p> <p>1042: Current/voltage plausibility error</p>

1043: Too many acceleration phases

1044: Actual current values plausibility error.

1045: CRC of the standstill position incorrect.

5000 ... 5140:

PROFIsafe message values.

For these message values, the failsafe control signals (failsafe values) are transferred to the safety functions.

The significance of the individual message values is described in safety message C01711 of the Control Unit.

6000 ... 6166:

PROFIsafe message values (PROFIsafe driver for PROFIBUS DP V1/V2 and PROFINET).

For these message values, the failsafe control signals (failsafe values) are transferred to the safety functions. If "Stop B after failure of the PROFISafe communication" (p9812) is parameterized, the transfer of the failsafe value is delayed.

The significance of the individual message values is described in safety fault F01611 of the Control Unit.

7000 ... 7002:

Message values of the "Safe position via PROFIsafe" function.

See also: p9555 (SI Motion transition time STOP F to STOP B (Control Unit)), r9725 (SI Motion diagnostics STOP F)

For message value = 1002:

- perform safe acknowledgment, set the user agreement in both monitoring channels simultaneously (within 4 s).

For message value = 1003:

- check the mechanical system of the axis. It is possible that the axis was shifted when switched-off, and the last saved actual position no longer corresponds with the new actual position after the system has been powered up again.

- increase the tolerance for the actual value comparison when referencing (p9344).

Then check the actual values, perform a POWER ON and set the user agreement again.

For message value = 1004:

For 1., the following applies: Perform safe acknowledgment. Set the user agreement again.

For 2., the following applies: Perform safe acknowledgment. Only set the user agreement again if the axis has been referenced.

For message value = 1005:

- for safe motion monitoring functions without encoder: check the conditions for pulse enable.

- for safe motion monitoring functions with encoder: check the conditions for STO deselection.

Note:

For a Power Module, the test stop should always be performed for pulse enable (independent of whether with encoder or without encoder).

For message value = 1012:

- upgrade the Sensor Module firmware to a more recent version.

- for 1-encoder systems, the following applies: check the encoder parameters for equality (p9515/p9315, p9519/p9319, p9523/p9323, p9524/p9324, p9525/p9325, p9529/p9329).

- for a 1-encoder system and 2-encoder system the following applies: in order to correctly copy the encoder parameters from p04xx, p9700 must be set to 46 and p9701 must be set to 172.

- for DQI encoders the following applies: If required, upgrade the firmware version of the Control Unit to a more recent version, which is released for DQI encoders.

- check the electrical cabinet design and cable routing for EMC compliance

- carry out a POWER ON (switch-off/switch-on) for all components or a warm restart (p0009 = 30, p0976 = 2, 3).

- replace the hardware.

For message value = 1024:

- check the communication link.

- if required, increase the monitoring cycle clock settings (p9500, p9511).

- carry out a POWER ON (switch off/on) for all components.

- replace the hardware.

For message value = 1030:

- check the encoder connection.

- if required, replace the encoder.

**Remedy:**

For message value = 1031:

When replacing a Sensor Module, carry out the following steps:

- start the copy function for the node identifier on the drive (p9700 = 1D hex).
- acknowledge the hardware CRC on the drive (p9701 = EC hex).
- save all parameters (p0977 = 1).
- carry out a POWER ON (switch off/on) for all components.

Adapt the encoder parameterization for the second channel as follows:

- set the encoder type (p0400).
- activate the safety commissioning mode (p0010 = 95).
- start the copy function for encoder parameters (p9700 = 46).
- exit the safety commissioning mode (p0010 = 0).
- save parameter in a non-volatile fashion (copy RAM to ROM).
- carry out a POWER ON (switch off/on) for all components.

The following always applies:

- check the encoder connection.
- if required, replace the encoder.

For message value = 1040:

- deselect encoderless monitoring functions, select and deselect STO.
- if monitoring function is active, issue "SLS" pulse enable within 5 s of deselecting STO.

For message value = 6000 ... 6999:

- the significance of the individual message values is described in safety fault F01611 of the Control Unit.

For other message values:

- the significance of the individual message values is described in safety message C01711.

This message can be acknowledged without a POWER ON as follows (safe acknowledgment):

- Terminal Module 54F (TM54F).
- onboard F-DI (only CU310-2).
- PROFIsafe.
- machine control panel.

See also: p9300 (SI Motion monitoring clock cycle (Motor Module)), p9500 (SI Motion monitoring clock cycle (Control Unit))

<b>C30712</b>	<b>SI Motion P2: Defect in F-IO processing</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	<p>When cross checking and comparing the two monitoring channels, the drive detected a difference between parameters or results of the F-IO processing and initiated a STOP F. One of the monitoring functions no longer reliably functions - i.e. safe operation is no longer possible.</p> <p>The safety message C30711 with message value 0 is also displayed due to initiation of STOP F.</p> <p>If at least one monitoring function is active, the safety message C30701 "SI Motion: STOP B initiated" is output after the parameterized timer has expired.</p> <p>Message value (r9749, interpret decimal):</p> <p>Number of the cross-compared data that resulted in this message.</p> <p>Refer to the description of the message values in safety message C01712.</p>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check parameterization in the parameters involved and correct if required.</li> <li>- ensure equality by copying the SI data to the second channel and then carry out an acceptance test.</li> <li>- check monitoring clock cycle for equality (p9500, p9300).</li> </ul> <p>This message can be acknowledged without a POWER ON as follows (safe acknowledgment):</p> <ul style="list-style-type: none"> <li>- onboard F-DI (only CU310-2).</li> <li>- PROFIsafe.</li> <li>- machine control panel.</li> </ul> <p>See also: p9300 (SI Motion monitoring clock cycle (Motor Module)), p9500 (SI Motion monitoring clock cycle (Control Unit))</p>		

---

<b>C30714</b>	<b>SI Motion P2: Safely Limited Speed exceeded</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The drive had moved faster than that specified by the velocity limit value (p9331). The drive is stopped as a result of the configured stop response (p9363). Message value (r9749, interpret decimal): 100: SLS1 exceeded. 200: SLS2 exceeded. 300: SLS3 exceeded. 400: SLS4 exceeded. 1000: Encoder limit frequency exceeded.		
<b>Remedy:</b>	- check the traversing/motion program in the control. - check the limits for "SLS" function and if required, adapt (p9331). This message can be acknowledged without a POWER ON as follows (safe acknowledgment): - Terminal Module 54F (TM54F). - onboard F-DI (only CU310-2). - PROFIsafe. - machine control panel. Note: SI: Safety Integrated SLS: Safely Limited Speed / SG: Safely reduced speed See also: p9331 (SI Motion SLS limit values (Motor Module)), p9363 (SI Motion SLS stop response (Motor Module))		

---

<b>C30715</b>	<b>SI Motion P2: Safely Limited Position exceeded</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The axis has moved past a parameterized position that is monitored by the "SLP" function. Message value (r9749, interpret decimal): 10: SLP1 violated. 20: SLP2 violated.		
<b>Remedy:</b>	- check the traversing/motion program in the control. - check the limits for "SLP" function and if required, adapt (p9534, p9535). This message can be acknowledged without a POWER ON as follows (safe acknowledgment): Prerequisite: - deselect "SLP" function and retract the axis into the permitted position range. Carry out a safe acknowledgment using one of the following options: - Terminal Module 54F (TM54F). - onboard F-DI (only CU310-2). - PROFIsafe. - machine control panel. Note: SI: Safety Integrated SLP: Safely Limited Position / SE: Safe software limit switches See also: p9334 (SI Motion SLP upper limit values (Motor Module)), p9335 (SI Motion SLP lower limit values (Motor Module))		

<b>C30716</b>	<b>SI Motion P2: Tolerance for safe motion direction exceeded</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The tolerance for the "safe motion direction" function was exceeded. The drive is stopped as a result of the configured stop response (p9366). Message value (r9749, interpret decimal): 0: Tolerance for the "safe motion direction positive" function exceeded. 1: Tolerance for the "safe motion direction negative" function exceeded.		
<b>Remedy:</b>	- check the traversing/motion program in the control. - check the tolerance for "SDI" function and if required, adapt (p9364). This message can be acknowledged without a POWER ON as follows (safe acknowledgment): Prerequisite: - deselect the "SDI" function and if required select again. Carry out a safe acknowledgment using one of the following options: - Terminal Module 54F (TM54F). - onboard F-DI (only CU310-2). - PROFIsafe. - machine control panel. Note: SDI: Safe Direction (safe motion direction) SI: Safety Integrated See also: p9364 (SI Motion SDI tolerance (Motor Module)), p9365 (SI Motion SDI delay time (Motor Module)), p9366 (SI Motion SDI stop response (Motor Module))		

---

<b>C30730</b>	<b>SI Motion P2: Reference block for dynamic safely limited speed invalid</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The reference block transferred via PROFIsafe is negative. A reference block is used to generate a referred velocity limit value based on the reference quantity "Velocity limit value SLS1" (p9331[0]). The drive is stopped as a result of the configured stop response (p9363[0]). Message value (r9749, interpret decimal): requested, invalid reference block.		
<b>Remedy:</b>	In the PROFIsafe telegram, input data S_SLS_LIMIT_IST must be corrected. This message can be acknowledged without a POWER ON as follows (safe acknowledgment): - PROFIsafe. Note: SI: Safety Integrated SLS: Safely Limited Speed		

<b>C30770</b>	<b>SI Motion P2: Discrepancy error of the fail-safe inputs/outputs</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	<p>The fail-safe digital inputs/digital outputs (F-DI/F-DO) show a different state longer than that parameterized in p10002 / p10102.</p> <p>Fault value (r0949, interpret hexadecimal): yyyyxxxx hex xxxx: Discrepancy error for fail-safe digital inputs (F-DI). Bit 0: Discrepancy error for F-DI 0 Bit 1: Discrepancy error for F-DI 1 ... yyyy: Discrepancy error for fail-safe digital outputs (F-DO). Bit 0: Discrepancy error for F-DO 0 ... Note: If several discrepancy errors occur consecutively, then this message is only signaled for the first error that occurs.</p>
<b>Remedy:</b>	<p>- check the wiring of the F-DI (contact problems).</p> <p>Note: This message can be acknowledged via F-DI or PROFIsafe (safe acknowledgment). Discrepancy errors of an F-DI can only be acknowledged if safe acknowledgment was carried out once after the cause of the error was resolved (p10106, acknowledgment via PROFIsafe, extended message acknowledgment). As long as safety acknowledgment was not carried out, the corresponding F-DI stays in the safe state internally. When the "Extended message acknowledgment" function (p9307.0) is active, the following applies: If the F-DI assigned for STO or SS1 is in a fail-safe state due to a discrepancy error, then when deselecting via this F-DI, safe acknowledgment can no longer be executed. For cyclic switching operations at the F-DI, it may be necessary to adapt the discrepancy time to the switching frequency. If the period of a cyclic switching pulse corresponds to twice the value of p10102, then the following formulas should be checked: - <math>p10102 &lt; (tp / 2) - td</math> (discrepancy time must be less than half the period minus the actual discrepancy time) - <math>p10102 \geq p9300</math> (discrepancy time must be at least p9300) - <math>p10102 &gt; td</math> (discrepancy time must be greater than the switch discrepancy time that may actually occur) td = possible actual discrepancy time (in ms) that can occur with a switching operation. This must correspond to at least 1 SI monitoring cycle (see p9300). tp = period for a switching operation in ms. When debounce p10017 is active, the discrepancy time is directly specified by the debounce time. If the period of a cyclic switching pulse corresponds to twice the debounce time, then the following formulas should be checked. - <math>p11002 &lt; p10117 + 1 \text{ ms} - td</math> - <math>p10102 &gt; td</math> - <math>p10102 \geq p9300</math> Example: For a 12 ms SI monitoring cycle and a switching frequency of 110 ms (p10117 = 0), the maximum discrepancy time which can be set is as follows: <math>p10102 \leq (110/2 \text{ ms}) - 12 \text{ ms} = 43 \text{ ms}</math> Rounded-off, <math>p10102 \leq 36 \text{ ms}</math> is obtained (since the discrepancy time can only be accepted as a whole SI monitoring cycle, the value will need to be rounded up or down to a whole SI monitoring cycle if the result is not an exact multiple of an SI monitoring cycle). Note: F-DI: Failsafe Digital Input F-DO: Failsafe Digital Output</p>

---

<b>A30772</b>	<b>SI Motion P2: Test stop for fail-safe digital outputs running</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The forced checking procedure (test stop) for the fail-safe digital inputs is currently in progress.		
<b>Remedy:</b>	The alarm is automatically withdraw after successfully ending or canceling (when a fault condition occurs) the test stop.		
	Note:		
	F-DO: Failsafe Digital Output		

---

<b>F30773</b>	<b>SI Motion P2: Test stop fail-safe digital output error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Safety monitoring channel has identified an error (10)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	A fault has occurred on processor 2 during the forced checking procedure (test stop) of the fail-safe digital output.		
	Fault value (r0949, interpret hexadecimal):		
	RRRVWXYZ hex:		
	R: Reserved.		
	V: Actual state of the DO channel concerned (see X) on processor 2 (corresponds to the states read back from the hardware, bit 0 = DO 0, bit 1 = DO 1, etc.).		
	W: Required state of the DO channel concerned (see X, bit 0 = DO 0, bit 1 = DO 1, etc.).		
	X: DO channels involved, which indicate an error (bit 0 = DO 0, bit 1 = DO 1, etc.).		
	Y: Reason for the test stop fault.		
	Z: State of the test stop in which the fault has occurred.		
	Y: Reason for the test stop fault		
	Y = 1: Processor 1 in incorrect test stop state (internal fault).		
	Y = 2: Expected states of the DOs were not fulfilled (CU305: readback via DI 22 / CU240 readback DI 2).		
	Y = 3: Incorrect timer state on processor 1 (internal fault)		
	Y = 4: Expected states of the diag DOs were not fulfilled (CU305: internal readback on processor 2).		
	Y = 5: Expected states of the second diag DOs were not fulfilled (CU305: internal readback on processor 1).		
	X and V indicate the DI or Diag-DO state dependent upon the reason for the fault (2, 4 or 5).		
	In the event of multiple test stop faults, the first one that occurred is shown.		
	Z: Test stop state and associated test actions		
	Z = 0 ... 3: Synchronization phase of test stop between processor 1 and processor 2 no switching operations		
	Z = 4: DO + OFF and DO - OFF		
	Z = 5: Check to see if states are as expected		
	Z = 6: DO + ON and DO - ON		
	Z = 7: Check to see if states are as expected		
	Z = 8: DO + OFF and DO - ON		
	Z = 9: Check to see if states are as expected		
	Z = 10: DO + ON and DO - OFF		
	Z = 11: Check to see if states are as expected		
	Z = 12: DO + OFF and DO - OFF		
	Z = 13: Check to see if states are as expected		
	Z = 14: End of test stop		

Diag expected states in table format:

Test stop state: Expectation Mode 1 / Mode 2 / Mode 3 / Mode 4

5: 0/-/-1

7: 0/-/-0

9: 0/-/-0

11: 1/-/-1

13: 0/-/-1

Second diag expected states in table format:

Test stop state: Expectation Mode 1 / Mode 2 / Mode 3 / Mode 4

5: -/-/-1

7: -/-/-0

9: -/-/-1

11: -/-/-0

13: -/-/-1

DI expected states in table format:

Test stop state: Expectation Mode 1 / Mode 2 / Mode 3 / Mode 4

5: -/1/1/-

7: -/0/0/-

9: -/0/1/-

11: -/0/1/-

13: -/1/1/-

Example:

Fault F01773 (P1) is signaled with fault value = 0001\_0127 and fault F30773 (P2) is signaled with fault value 0000\_0127.

This means that in state 7 (Z = 7) the state of the external readback signal was not set correctly (Y = 2) after DO-0 (X = 1) was switched to ON/ON.

Fault value 0001\_0127 indicates that 0 was expected (W = 0) and 1 (V = 1) was read back from the hardware.

Fault value 0000\_0127 on the processor 2 indicates that the states were as expected.

In the case of fault F30773, W and V are always identical; a value of 0 always means that 0 was expected at the readback input but was not present on processor 1.

**Remedy:**

Check the wiring of the fail-safe digital output (F-DO) and restart the test stop.

Note:

- the fault is withdrawn if the test stop is successfully completed.

- in the event of multiple test stop faults, the first one that occurred is shown. Once the test stop has been restarted the next queued test stop fault will be signaled (if there is one).

F-DO: Failsafe Digital Output

---

**A30788 Automatic test stop: wait for STO deselection via SMM**

**Message value:**

-

**Message class:**

Safety monitoring channel has identified an error (10)

**Drive object:**

VECTOR\_G

**Component:**

Motor

**Propagation:**

GLOBAL

**Reaction:**

NONE

**Acknowledge:**

NONE

**Cause:**

The automatic test stop was not able to be carried out after powering up.

Possible causes:

- the STO function is selected via Safety Extended Functions.

- a safety message is present, that resulted in a STO.

**Remedy:**

- Deselect STO via Safety Extended Functions.

- remove the cause of the safety messages and acknowledge the messages.

The automatic test stop is performed after removing the cause.



<b>N30800 (F)</b>	<b>Power unit: Group signal</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Power electronics faulted (5)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The power unit has detected at least one fault.		
<b>Remedy:</b>	Evaluate the other messages that are presently available.		
Reaction upon F:	OFF2		
Acknowl. upon F:	IMMEDIATELY		
<b>F30801</b>	<b>Power unit DRIVE-CLiQ: Sign-of-life missing</b>		
<b>Message value:</b>	Component number: %1, fault cause: %2		
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Control Unit to the power unit concerned. The computing time load might be too high. Fault cause: 10 (= 0A hex): The sign-of-life bit in the receive telegram is not set. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- deselect functions that are not required.</li> <li>- if required, increase the sampling times (p0112, p0115).</li> <li>- replace the component involved (power unit, Control Unit).</li> </ul>		
<b>F30802</b>	<b>Power unit: Time slice overflow</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	A time slice overflow has occurred. Fault value (r0949, interpret decimal): xx: time slice number		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- carry out a POWER ON (switch off/on) for all components.</li> <li>- upgrade firmware to later version.</li> <li>- contact Technical Support.</li> </ul>		

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F30804 (N, A)</b>	<b>Power unit: CRC</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: OFF2 (OFF1, OFF3) Infeed: OFF2 (OFF1)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	A checksum error (CRC error) has occurred for the power unit.		
<b>Remedy:</b>	- carry out a POWER ON (switch off/on) for all components. - upgrade firmware to later version. - contact Technical Support.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F30805</b>	<b>Power unit: EEPROM checksum error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	Internal parameter data is corrupted. Fault value (r0949, interpret hexadecimal): 01: EEPROM access error. 02: Too many blocks in the EEPROM.		
<b>Remedy:</b>	Replace the module.		

---

<b>F30809</b>	<b>Power unit: Switching information not valid</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	For 3P gating unit, the following applies: The last switching status word in the setpoint telegram is identified by the end ID. Such an end ID was not found.		
<b>Remedy:</b>	- carry out a POWER ON (switch off/on) for all components. - upgrade firmware to later version. - contact Technical Support.		

---

<b>A30810 (F)</b>	<b>Power unit: Watchdog timer</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	When booting it was detected that the cause of the previous reset was an SAC watchdog timer overflow.		
<b>Remedy:</b>	- carry out a POWER ON (switch off/on) for all components. - upgrade firmware to later version. - contact Technical Support.		

Reaction upon F: NONE (OFF2)  
Acknowl. upon F: IMMEDIATELY

---

<b>F30820</b>	<b>Power unit DRIVE-CLiQ: Telegram error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Control Unit to the power unit concerned. Fault cause: 1 (= 01 hex): Checksum error (CRC error). 2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list. 3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list. 4 (= 04 hex): The length of the receive telegram does not match the receive list. 5 (= 05 hex): The type of the receive telegram does not match the receive list. 6 (= 06 hex): The address of the component in the telegram and in the receive list do not match. 7 (= 07 hex): A SYNC telegram is expected - but the received telegram is not a SYNC telegram. 8 (= 08 hex): No SYNC telegram is expected - but the received telegram is one. 9 (= 09 hex): The error bit in the receive telegram is set. 16 (= 10 hex): The receive telegram is too early. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- carry out a POWER ON (switch off/on). - check the electrical cabinet design and cable routing for EMC compliance - check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...). See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

---

<b>F30835</b>	<b>Power unit DRIVE-CLiQ: Cyclic data transfer error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Control Unit to the power unit concerned. The nodes do not send and receive in synchronism. Fault cause: 33 (= 21 hex): The cyclic telegram has not been received. 34 (= 22 hex): Timeout in the telegram receive list.

## 4 Faults and alarms

### 4.2 List of faults and alarms

64 (= 40 hex):

Timeout in the telegram send list.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON.

- replace the component involved (power unit, Control Unit).

See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

---

**F30836****Power unit DRIVE-CLiQ: Send error for DRIVE-CLiQ data**

**Message value:**

Component number: %1, fault cause: %2

**Message class:**

Internal (DRIVE-CLiQ) communication error (12)

**Drive object:**

B\_INF, VECTOR\_G

**Component:**

Power Module

**Propagation:**

LOCAL

**Reaction:**

OFF2

**Acknowledge:**

IMMEDIATELY

**Cause:**

A DRIVE-CLiQ communication error has occurred from the Control Unit to the power unit concerned. Data were not able to be sent.

Fault cause:

65 (= 41 hex):

Telegram type does not match send list.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

Carry out a POWER ON.

---

**F30837****Power unit DRIVE-CLiQ: Component fault**

**Message value:**

Component number: %1, fault cause: %2

**Message class:**

Internal (DRIVE-CLiQ) communication error (12)

**Drive object:**

B\_INF, VECTOR\_G

**Component:**

Power Module

**Propagation:**

LOCAL

**Reaction:**

OFF2

**Acknowledge:**

IMMEDIATELY

**Cause:**

Fault detected on the DRIVE-CLiQ component concerned. Faulty hardware cannot be excluded.

Fault cause:

32 (= 20 hex):

Error in the telegram header.

35 (= 23 hex):

Receive error: The telegram buffer memory contains an error.

66 (= 42 hex):

Send error: The telegram buffer memory contains an error.

67 (= 43 hex):

Send error: The telegram buffer memory contains an error.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).

- check the electrical cabinet design and cable routing for EMC compliance

- if required, use another DRIVE-CLiQ socket (p9904).

- replace the component involved.



---

<b>A30853</b>	<b>Power unit: Sign-of-life error cyclic data</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	General drive fault (19)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Control Unit (CU)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The power unit has detected that the cyclic setpoint telegrams of the Control Unit have not been updated on time. At least two sign-of-life errors have occurred within the window set in p7788.		
<b>Remedy:</b>	- reduce the size of the window (p7788) for monitoring. - check the Motor Module, and if required replace.		

---

<b>F30860</b>	<b>Power unit DRIVE-CLiQ (CU): Telegram error</b>		
<b>Message value:</b>	Component number: %1, fault cause: %2		
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the power unit to the Control Unit involved. Fault cause: 1 (= 01 hex): Checksum error (CRC error). 2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list. 3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list. 4 (= 04 hex): The length of the receive telegram does not match the receive list. 5 (= 05 hex): The type of the receive telegram does not match the receive list. 6 (= 06 hex): The address of the power unit in the telegram and in the receive list do not match. 9 (= 09 hex): The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed. 16 (= 10 hex): The receive telegram is too early. 17 (= 11 hex): CRC error and the receive telegram is too early. 18 (= 12 hex): The telegram is shorter than that specified in the length byte or in the receive list and the receive telegram is too early. 19 (= 13 hex): The telegram is longer than that specified in the length byte or in the receive list and the receive telegram is too early. 20 (= 14 hex): The length of the receive telegram does not match the receive list and the receive telegram is too early. 21 (= 15 hex): The type of the receive telegram does not match the receive list and the receive telegram is too early. 22 (= 16 hex): The address of the power unit in the telegram and in the receive list does not match and the receive telegram is too early. 25 (= 19 hex): The error bit in the receive telegram is set and the receive telegram is too early.		

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON (switch off/on).
- check the electrical cabinet design and cable routing for EMC compliance
- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).

See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)

---

**F30875**

**Power unit: power supply voltage failed**

**Message value:**

Component number: %1, fault cause: %2

**Message class:**

Supply voltage fault (undervoltage) (3)

**Drive object:**

B\_INF, VECTOR\_G

**Component:**

Power Module

**Propagation:**

LOCAL

**Reaction:**

OFF2

**Acknowledge:**

IMMEDIATELY

**Cause:**

The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed.

Fault cause:

9 (= 09 hex):

The power supply voltage for the components has failed.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON (switch off/on).
- check the power supply voltage wiring for the DRIVE-CLiQ component (interrupted cable, contacts, ...).
- check the dimensioning of the power supply for the DRIVE-CLiQ component.

---

**F30885**

**CU DRIVE-CLiQ (CU): Cyclic data transfer error**

**Message value:**

Component number: %1, fault cause: %2

**Message class:**

Internal (DRIVE-CLiQ) communication error (12)

**Drive object:**

B\_INF, VECTOR\_G

**Component:**

Power Module

**Propagation:**

LOCAL

**Reaction:**

OFF2

**Acknowledge:**

IMMEDIATELY

**Cause:**

A DRIVE-CLiQ communication error has occurred from the power unit to the Control Unit involved.

The nodes do not send and receive in synchronism.

Fault cause:

26 (= 1A hex):

Sign-of-life bit in the receive telegram not set and the receive telegram is too early.

33 (= 21 hex):

The cyclic telegram has not been received.

34 (= 22 hex):

Timeout in the telegram receive list.

64 (= 40 hex):

Timeout in the telegram send list.

98 (= 62 hex):

Error at the transition to cyclic operation.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- check the power supply voltage of the component involved.
  - carry out a POWER ON.
  - replace the component involved.
- See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)

---

<b>F30886</b>	<b>PU DRIVE-CLiQ (CU): Error when sending DRIVE-CLiQ data</b>		
<b>Message value:</b>	Component number: %1, fault cause: %2		
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the power unit to the Control Unit involved. Data were not able to be sent. Fault cause: 65 (= 41 hex): Telegram type does not match send list. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause		
<b>Remedy:</b>	Carry out a POWER ON.		
<hr/>			
<b>F30887</b>	<b>Power unit DRIVE-CLiQ (CU): Component fault</b>		
<b>Message value:</b>	Component number: %1, fault cause: %2		
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Power Module	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	Fault detected on the DRIVE-CLiQ component (power unit) involved. Faulty hardware cannot be excluded. Fault cause: 32 (= 20 hex): Error in the telegram header. 35 (= 23 hex): Receive error: The telegram buffer memory contains an error. 66 (= 42 hex): Send error: The telegram buffer memory contains an error. 67 (= 43 hex): Send error: The telegram buffer memory contains an error. 96 (= 60 hex): Response received too late during runtime measurement. 97 (= 61 hex): Time taken to exchange characteristic data too long. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause		
<b>Remedy:</b>	<ul style="list-style-type: none"><li>- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).</li><li>- check the electrical cabinet design and cable routing for EMC compliance</li><li>- if required, use another DRIVE-CLiQ socket (p9904).</li><li>- replace the component involved.</li></ul>		

<b>F30895</b>	<b>PU DRIVE-CLiQ (CU): Alternating cyclic data transfer error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the power unit to the Control Unit involved. Fault cause: 11 (= 0B hex): Synchronization error during alternating cyclic data transfer. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	Carry out a POWER ON. See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)
<b>F30896</b>	<b>Power unit DRIVE-CLiQ (CU): Inconsistent component properties</b>
<b>Message value:</b>	Component number: %1
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The properties of the DRIVE-CLiQ component (power unit), specified by the fault value, have changed in an incompatible fashion with respect to the properties when booted. One cause can be, e.g. that a DRIVE-CLiQ cable or DRIVE-CLiQ component has been replaced. Fault value (r0949, interpret decimal): Component number.
<b>Remedy:</b>	- carry out a POWER ON. - when a component is replaced, the same component type and if possible the same firmware version should be used. - when a cable is replaced, only cables whose length is the same as or as close as possible to the length of the original cables should be used (ensure compliance with the maximum cable length).
<b>F30899 (N, A)</b>	<b>Power unit: Unknown fault</b>
<b>Message value:</b>	New message: %1
<b>Message class:</b>	Power electronics faulted (5)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Power Module <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	A fault occurred on the power unit that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit. Fault value (r0949, interpret decimal): Fault number. Note: If required, the significance of this new fault can be read about in a more recent description of the Control Unit.
<b>Remedy:</b>	- replace the firmware on the power unit by an older firmware version (r0128). - upgrade the firmware on the Control Unit (r0018).
Reaction upon N:	NONE
Acknowl. upon N:	NONE



Reaction upon F: Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Infeed: NONE (OFF1, OFF2)  
Acknowl. upon F: IMMEDIATELY

---

**A30930 (N) Power unit: Component trace has saved data**  
**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Power Module **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** Trace data was saved in the component.  
**Remedy:** Not necessary.  
 Note:  
 For p7792= 1, the trace data of the component can be written to the memory card.  
 See also: p7792 (Upload component trace data)

Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**F30950 Power unit: Internal software error**  
**Message value:** %1  
**Message class:** Hardware/software error (1)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Power Module **Propagation:** LOCAL  
**Reaction:** OFF2  
**Acknowledge:** POWER ON  
**Cause:** An internal software error has occurred.  
 Fault value (r0949, interpret decimal):  
 Information about the fault source.  
 Only for internal Siemens troubleshooting.

**Remedy:** - if necessary, upgrade the firmware in the power unit to a later version.  
- contact Technical Support.

---

**A30999 (F, N) Power unit: Unknown alarm**  
**Message value:** New message: %1  
**Message class:** Power electronics faulted (5)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Power Module **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** An alarm occurred on the power unit that cannot be interpreted by the Control Unit firmware.  
 This can occur if the firmware on this component is more recent than the firmware on the Control Unit.  
 Alarm value (r2124, interpret decimal):  
 Alarm number.  
 Note:  
 If required, the significance of this new alarm can be read about in a more recent description of the Control Unit.

**Remedy:** - replace the firmware on the power unit by an older firmware version (r0128).  
- upgrade the firmware on the Control Unit (r0018).

Reaction upon F: Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Infeed: NONE (OFF1, OFF2)  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

<b>F31100 (N, A)</b>	<b>Encoder 1: Zero mark distance error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The measured zero mark distance does not correspond to the parameterized zero mark distance. For distance-coded encoders, the zero mark distance is determined from zero marks detected pairs. This means that if a zero mark is missing, depending on the pair generation, this cannot result in a fault and also has no effect in the system. The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder). Fault value (r0949, interpret decimal): Last measured zero mark distance in increments (4 increments = 1 encoder pulse). The sign designates the direction of motion when detecting the zero mark distance. See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- check that the encoder cables are routed in compliance with EMC. - check the plug connections. - check the encoder type (encoder with equidistant zero marks). - adapt the parameter for the distance between zero marks (p0424, p0425). - if message output above speed threshold, reduce filter time if necessary (p0438). - replace the encoder or encoder cable.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F31101 (N, A)</b>	<b>Encoder 1: Zero mark failed</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The 1.5 x parameterized zero mark distance was exceeded. The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder). Fault value (r0949, interpret decimal): Number of increments after POWER ON or since the last zero mark that was detected (4 increments = 1 encoder pulse). See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- check that the encoder cables are routed in compliance with EMC. - check the plug connections. - check the encoder type (encoder with equidistant zero marks). - adapt the parameter for the clearance between zero marks (p0425). - if message output above speed threshold, reduce filter time if necessary (p0438). - when p0437.1 is active, check p4686. - replace the encoder or encoder cable.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F31103 (N, A)</b>	<b>Encoder 1: Amplitude error track R</b>
<b>Message value:</b>	R track: %1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The amplitude of the reference track signal (track R) does not lie within the tolerance bandwidth for encoder 1. The fault can be initiated when the unipolar voltage level is exceeded (RP/RN) or if the differential amplitude is undershot. Fault value (r0949, interpret hexadecimal): yyyyxxxx hex: yyyy = 0, xxxx = Signal level, track R (16 bits with sign) The response thresholds of the unipolar signal levels of the encoder are between < 1400 mV and > 3500 mV. The response threshold for the differential signal level of the encoder is < -1600 mV. A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec. Note: The analog value of the amplitude error is not measured at the same time with the hardware fault output by the Sensor Module. The fault value can only be represented between -32768 ... 32767 dec (-770 ... 770 mV). The signal level is not evaluated unless the following conditions are satisfied: - Sensor Module properties available (r0459.31 = 1). - monitoring active (p0437.31 = 1). See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- check the speed range; frequency characteristic (amplitude characteristic) of the measuring equipment might not be sufficient for the speed range - check that the encoder cables and shielding are routed in compliance with EMC. - check the plug connections and contacts of the encoder cable. - check the encoder type (encoder with zero marks). - check whether the zero mark is connected and the signal cables RP and RN have been connected correctly. - replace the encoder cable. - if the coding disk is soiled or the lighting aged, replace the encoder.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F31110 (N, A)</b>	<b>Encoder 1: Serial communications error</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	Serial communication protocol transfer error between the encoder and evaluation module. Fault value (r0949, interpret binary): Bit 0: Alarm bit in the position protocol. Bit 1: Incorrect quiescent level on the data line. Bit 2: Encoder does not respond (does not supply a start bit within 50 ms). Bit 3: CRC error: The checksum in the protocol from the encoder does not match the data. Bit 4: Encoder acknowledgment error: The encoder incorrectly understood the task (request) or cannot execute it. Bit 5: Internal error in the serial driver: An illegal mode command was requested. Bit 6: Timeout when cyclically reading. Bit 7: Timeout for the register communication.

- Bit 8: Protocol is too long (e.g. > 64 bits).
- Bit 9: Receive buffer overflow.
- Bit 10: Frame error when reading twice.
- Bit 11: Parity error.
- Bit 12: Data line signal level error during the monoflop time.
- Bit 13: Data line incorrect.
- Bit 14: Fault for the register communication.
- Bit 15: Internal communication error.

Note:

For an EnDat 2.2 encoder, the significance of the fault value for F3x135 (x = 1, 2, 3) is described.

**Remedy:**

For fault value, bit 0 = 1:

- Enc defect F31111 may provide additional details.

For fault value, bit 1 = 1:

- incorrect encoder type / replace the encoder or encoder cable.

For fault value, bit 2 = 1:

- incorrect encoder type / replace the encoder or encoder cable.

For fault value, bit 3 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable.

For fault value, bit 4 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable, replace the Sensor Module.

For fault value, bit 5 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable, replace the Sensor Module.

For fault value, bit 6 = 1:

- Update Sensor Module firmware.

For fault value, bit 7 = 1:

- incorrect encoder type / replace the encoder or encoder cable.

For fault value, bit 8 = 1:

- check parameterization (p0429.2).

For fault value, bit 9 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable, replace the Sensor Module.

For fault value, bit 10 = 1:

- check parameterization (p0429.2, p0449).

For fault value, bit 11 = 1:

- check parameterization (p0436).

For fault value, bit 12 = 1:

- check parameterization (p0429.6).

For fault value, bit 13 = 1:

- check data line.

For fault value, bit 14 = 1:

- incorrect encoder type / replace the encoder or encoder cable.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

<b>F31111 (N, A)</b>	<b>Encoder 1: Absolute encoder internal error</b>
<b>Message value:</b>	Fault cause: %1 bin, additional information: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE
<b>Propagation:</b>	LOCAL
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The absolute encoder fault word supplies fault bits that have been set. For p0404.8 = 0, the following applies: Fault value for internal Siemens troubleshooting. For p0404.8 = 1, the following applies: Fault value (r0949, interpret binary): yyyyxxxx hex: yyyy = supplementary information, xxxx = fault cause yyyy = 0: Bit 0: Lighting system failed. Bit 1: Signal amplitude too low. Bit 2: Position value incorrect. Bit 3: Encoder power supply overvoltage condition. Bit 4: Encoder power supply undervoltage condition. Bit 5: Encoder power supply overcurrent condition. Bit 6: The battery must be changed. See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	For yyyy = 0: For fault value, bit 0 = 1: Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor. For fault value, bit 1 = 1: Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor. For fault value, bit 2 = 1: Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor. For fault value, bit 3 = 1: 5 V power supply voltage fault. When using an SMC: Check the plug-in cable between the encoder and SMC or replace the SMC. When a motor encoder with a direct DRIVE-CLiQ connection is used: Replace the motor. For fault value, bit 4 = 1: 5 V power supply voltage fault. When using an SMC: Check the plug-in cable between the encoder and SMC or replace the SMC. When using a motor with DRIVE-CLiQ: Replace the motor. For fault value, bit 5 = 1: Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor. For fault value, bit 6 = 1: The battery must be changed (only for encoders with battery back-up). For yyyy = 1: Encoder is defective. Replace encoder.
<b>Reaction upon N:</b>	NONE
<b>Acknowl. upon N:</b>	NONE
<b>Reaction upon A:</b>	NONE
<b>Acknowl. upon A:</b>	NONE

---

<b>F31112 (N, A)</b>	<b>Encoder 1: Error bit set in the serial protocol</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	Encoder 1	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE		
<b>Acknowledge:</b>	PULSE INHIBIT		
<b>Cause:</b>	The encoder sends a set error bit via the serial protocol. Fault value (r0949, interpret binary): Bit 0: Fault bit in the position protocol.		
<b>Remedy:</b>	For fault value, bit 0 = 1: In the case of an EnDat encoder, F31111 may provide further details.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F31115 (N, A)</b>	<b>Encoder 1: Amplitude error track A or B (<math>A^2 + B^2</math>)</b>		
<b>Message value:</b>	A track: %1, B-track: %2		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	Encoder 1	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE		
<b>Acknowledge:</b>	PULSE INHIBIT		
<b>Cause:</b>	The amplitude (root of $A^2 + B^2$ ) for encoder 1 exceeds the permissible tolerance. Fault value (r0949, interpret hexadecimal): yyyyxxxx hex: yyyy = Signal level, track B (16 bits with sign). xxxx = Signal level, track A (16 bits with sign). The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %). The response thresholds are < 170 mV (observe the frequency response of the encoder) and > 750 mV. A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec. Note for Sensor Modules for resolvers (e.g. SMC10): The nominal signal level is at 2900 mV (2.0 Vrms). The response thresholds are < 1070 mV and > 3582 mV. A signal level of 2900 mV peak value corresponds to the numerical value 6666 hex = 26214 dec. Note: The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module. See also: p0491 (Motor encoder fault response ENCODER)		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check that the encoder cables and shielding are routed in compliance with EMC.</li> <li>- check the plug connections.</li> <li>- replace the encoder or encoder cable.</li> <li>- check the Sensor Module (e.g. contacts).</li> </ul> The following applies to measuring systems without their own bearing system: <ul style="list-style-type: none"> <li>- adjust the scanning head and check the bearing system of the measuring wheel.</li> </ul> The following applies for measuring systems with their own bearing system: <ul style="list-style-type: none"> <li>- ensure that the encoder housing is not subject to any axial force.</li> </ul>		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F31116 (N, A)</b>	<b>Encoder 1: Amplitude error monitoring track A + B</b>
<b>Message value:</b>	A track: %1, B-track: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The amplitude of the rectified encoder signals A and B and the amplitude from the roots of $A^2 + B^2$ for encoder 1 are not within the tolerance bandwidth. Fault value (r0949, interpret hexadecimal): yyyyxxxx hex: yyyy = Signal level, track B (16 bits with sign). xxxx = Signal level, track A (16 bits with sign). The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %). The response thresholds are < 130 mV (observe the frequency response of the encoder) and > 955 mV. A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec. Note: The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module. See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- check that the encoder cables and shielding are routed in compliance with EMC. - check the plug connections. - replace the encoder or encoder cable. - check the Sensor Module (e.g. contacts).
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F31117 (N, A)</b>	<b>Encoder 1: Inversion error signals A/B/R</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	For a square-wave encoder (bipolar, double ended) signals A*, B* and R* are not inverted with respect to signals A, B and R. Fault value (r0949, interpret binary): Bits 0 ... 15: Only for internal Siemens troubleshooting. Bit 16: Error track A. Bit 17: Error track B. Bit 18: Error track R. Note: For SMC30 (only Article No. 6SL3055-0AA00-5CA0 and 6SL3055-0AA00-5CA1), CUA32, and CU310, the following applies: A square-wave encoder without track R is used and track monitoring (p0405.2 = 1) is activated. See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- check the encoder/cable. - Does the encoder supply signals and the associated inverted signals? Note: For SMC30 (only Article Number 6SL3055-0AA00-5CA0 and 6SL3055-0AA00-5CA1), the following applies: - check the setting of p0405 (p0405.2 = 1 is only possible if the encoder is connected at X520).

## 4 Faults and alarms

### 4.2 List of faults and alarms

For a square-wave encoder without track R, the following jumpers must be set for the connection at X520 (SMC30) or X23 (CUA32, CU310):

- pin 10 (reference signal R) <--> pin 7 (encoder power supply, ground)
- pin 11 (reference signal R inverted) <--> pin 4 (encoder power supply)

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

#### **F31118 (N, A) Encoder 1: Speed difference outside the tolerance range**

**Message value:** %1

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** Encoder 1

**Propagation:** LOCAL

**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE)

Infeed: NONE

**Acknowledge:** PULSE INHIBIT

**Cause:** For an HTL/TTL encoder, the speed difference has exceeded the value in p0492 over several sampling cycles. The change to the averaged speed actual value - if applicable - is monitored in the current controller sampling time. Encoder 1 is used as motor encoder and can be effective has fault response to change over to encoderless operation.

Fault value (r0949, interpret decimal):

Only for internal Siemens troubleshooting.

See also: p0491 (Motor encoder fault response ENCODER), p0492

**Remedy:**

- check the tachometer feeder cable for interruptions.
- check the grounding of the tachometer shielding.
- if required, increase the maximum speed difference per sampling cycle (p0492).

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

#### **F31120 (N, A) Encoder 1: Power supply voltage fault**

**Message value:** Fault cause: %1 bin

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** Encoder 1

**Propagation:** LOCAL

**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE)

Infeed: NONE

**Acknowledge:** PULSE INHIBIT

**Cause:** A power supply fault was detected for encoder 1.

Fault value (r0949, interpret binary):

Bit 0: Undervoltage condition on the sense line.

Bit 1: Overcurrent condition for the encoder power supply.

Bit 2: Overcurrent condition for encoder power supply on cable resolver excitation negative.

Bit 3: Overcurrent condition for encoder power supply on cable resolver excitation positive.

Bit 4: The 24 V power supply through the Power Module (PM) is overloaded.

Bit 5: Overcurrent at the EnDat connection of the converter.

Bit 6: Overvoltage at the EnDat connection of the converter.

Bit 7: Hardware fault at the EnDat connection of the converter.

Note:

If the encoder cables 6FX2002-2EQ00-.... and 6FX2002-2CH00-.... are interchanged, this can result in the encoder being destroyed because the pins of the operating voltage are reversed.

See also: p0491 (Motor encoder fault response ENCODER)

**Remedy:**

For fault value, bit 0 = 1:

- correct encoder cable connected?
- check the plug connections of the encoder cable.
- SMC30: Check the parameterization (p0404.22).

For fault value, bit 1 = 1:

- correct encoder cable connected?
- replace the encoder or encoder cable.

For fault value, bit 2 = 1:

- correct encoder cable connected?
- replace the encoder or encoder cable.

For fault value, bit 3 = 1:

- correct encoder cable connected?
- replace the encoder or encoder cable.

For fault value, bit 5 = 1:

- Measuring unit correctly connected at the converter?
- Replace the measuring unit or the cable to the measuring unit.

For fault value, bit 6, 7 = 1:

- Replace the defective EnDat 2.2 converter.

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

**F31121 (N, A) Encoder 1: Coarse position error**

**Message value:** -

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** Encoder 1 **Propagation:** LOCAL

**Reaction:** Vector: ENCODER (NONE)  
 Infeed: NONE

**Acknowledge:** PULSE INHIBIT

**Cause:** For the actual value sensing, an error was detected on the module.  
 As a result of this error, it must be assumed that the actual value sensing supplies an incorrect coarse position.  
 See also: p0491 (Motor encoder fault response ENCODER)

**Remedy:** Replace the motor with DRIVE-CLiQ or the appropriate Sensor Module.

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

**F31122 Encoder 1: Internal power supply voltage faulty**

**Message value:** %1

**Message class:** Supply voltage fault (undervoltage) (3)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** Sensor Module Encoder 1 **Propagation:** GLOBAL

**Reaction:** Vector: ENCODER  
 Infeed: NONE

**Acknowledge:** IMMEDIATELY

**Cause:** Fault in internal reference voltage of ASICs for encoder 1.  
 Fault value (r0949, interpret decimal):  
 1: Reference voltage error.  
 2: Internal undervoltage.  
 3: Internal overvoltage.

**Remedy:** Replace the motor with DRIVE-CLiQ or the appropriate Sensor Module.

<b>F31123 (N, A)</b>	<b>Encoder 1: Signal level A/B unipolar outside tolerance</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The unipolar level (AP/AN or BP/BN) for encoder 1 is outside the permissible tolerance. Fault value (r0949, interpret binary): Bit 0 = 1: Either AP or AN outside the tolerance. Bit 16 = 1: Either BP or BN outside the tolerance. The unipolar nominal signal level of the encoder must lie in the range 2500 mV +/- 500 mV. The response thresholds are < 1700 mV and > 3300 mV. Note: The signal level is not evaluated unless the following conditions are satisfied: - Sensor Module properties available (r0459.31 = 1). - monitoring active (p0437.31 = 1). See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- make sure that the encoder cables and shielding are installed in an EMC-compliant manner. - check the plug connections and contacts of the encoder cable. - check the short-circuit of a signal cable with mass or the operating voltage. - replace the encoder cable.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>F31125 (N, A)</b>	<b>Encoder 1: Amplitude error track A or B overcontrolled</b>
<b>Message value:</b>	A track: %1, B-track: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The amplitude of track A or B for encoder 1 exceeds the permissible tolerance band. Fault value (r0949, interpret hexadecimal): yyyyxxxx hex: yyyy = Signal level, track B (16 bits with sign). xxxx = Signal level, track A (16 bits with sign). The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %). The response threshold is > 750 mV. This fault also occurs if the analog/digital converter is overcontrolled. A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec. Note for Sensor Modules for resolvers (e.g. SMC10): The nominal signal level is at 2900 mV (2.0 Vrms). The response threshold is > 3582 mV. A signal level of 2900 mV peak value corresponds to the numerical value 6666 hex = 26214 dec. Note: The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module. See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- check that the encoder cables and shielding are routed in compliance with EMC. - replace the encoder or encoder cable.
Reaction upon N:	NONE
Acknowl. upon N:	NONE

Reaction upon A: NONE  
Acknowl. upon A: NONE

---

**F31126 (N, A) Encoder 1: Amplitude AB too high**

**Message value:** Amplitude: %1, Angle: %2  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Encoder 1 **Propagation:** LOCAL  
**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE)  
 Infeed: NONE  
**Acknowledge:** PULSE INHIBIT  
**Cause:** The amplitude (root of  $A^2 + B^2$  or  $|A| + |B|$ ) for encoder 1 exceeds the permissible tolerance.  
 Fault value (r0949, interpret hexadecimal):  
 yyyxxxx hex:  
 yyyy = Angle  
 xxxx = amplitude, i.e. root of  $A^2 + B^2$  (16 bits without sign)  
 The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %).  
 The response threshold for ( $|A| + |B|$ ) is > 1120 mV or the root of ( $A^2 + B^2$ ) > 955 mV.  
 A signal level of 500 mV peak value corresponds to the numerical value of 299A hex = 10650 dec.  
 The angle 0 ... FFFF hex corresponds to 0 ... 360 degrees of the fine position. Zero degrees is present at the negative zero crossover of track B.  
 Note:  
 The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module.  
 See also: p0491 (Motor encoder fault response ENCODER)  
**Remedy:** - check that the encoder cables and shielding are routed in compliance with EMC.  
 - replace the encoder or encoder cable.

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

**F31129 (N, A) Encoder 1: Position difference hall sensor/track C/D and A/B too large**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Encoder 1 **Propagation:** LOCAL  
**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE)  
 Infeed: NONE  
**Acknowledge:** PULSE INHIBIT  
**Cause:** The error for track C/D is greater than +/-15 ° mechanical or +/-60 ° electrical or the error for the Hall signals is greater than +/-60 ° electrical.  
 One period of track C/D corresponds to 360 ° mechanical.  
 One period of the Hall signal corresponds to 360 ° electrical.  
 The monitoring responds if, for example, Hall sensors are connected as equivalent for the C/D tracks with the incorrect rotational sense or supply values that are not accurate enough.  
 After the fine synchronization using one reference mark or 2 reference marks for distance-coded encoders, this fault is no longer initiated, but instead, Alarm A31429.  
 Fault value (r0949, interpret decimal):  
 For track C/D, the following applies:  
 Measured deviation as mechanical angle (16 bits with sign, 182 dec corresponds to 1 °).  
 For Hall signals, the following applies:  
 Measured deviation as electrical angle (16 bits with sign, 182 dec corresponds to 1 °).  
 See also: p0491 (Motor encoder fault response ENCODER)

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:**

- track C or D not connected.
- correct the direction of rotation of the Hall sensor possibly connected as equivalent for track C/D.
- check that the encoder cables are routed in compliance with EMC.
- check the adjustment of the Hall sensor.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F31130 (N, A) Encoder 1: Zero mark and position error from the coarse synchronization**

**Message value:** Angular deviation, electrical: %1, angle, mechanical: %2

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** Encoder 1 **Propagation:** LOCAL

**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP2)

Infeed: NONE

**Acknowledge:** PULSE INHIBIT

**Cause:** After initializing the pole position using track C/D, Hall signals or pole position identification routine, the zero mark was detected outside the permissible range. For distance-coded encoders, the test is carried out after passing 2 zero marks. Fine synchronization was not carried out.

When initializing via track C/D (p0404) then it is checked whether the zero mark occurs in an angular range of +/-18 ° mechanical.

When initializing via Hall sensors (p0404) or pole position identification (p1982) it is checked whether the zero mark occurs in an angular range of +/-60 ° electrical.

Fault value (r0949, interpret hexadecimal):

yyyyxxxx hex

yyyy: Determined mechanical zero mark position (can only be used for track C/D).

xxxx: Deviation of the zero mark from the expected position as electrical angle.

Scaling: 32768 dec = 180 °

See also: p0491 (Motor encoder fault response ENCODER)

**Remedy:**

- check p0431 and, if necessary, correct (trigger via p1990 = 1 if necessary).
- check that the encoder cables are routed in compliance with EMC.
- check the plug connections.
- if the Hall sensor is used as an equivalent for track C/D, check the connection.
- check the connection of track C or D.
- replace the encoder or encoder cable.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F31131 (N, A) Encoder 1: Deviation position incremental/absolute too large**

**Message value:** %1

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** Encoder 1 **Propagation:** LOCAL

**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP2)

Infeed: NONE

**Acknowledge:** PULSE INHIBIT

**Cause:** Absolute encoder:

When cyclically reading the absolute position, an excessively high difference to the incremental position was detected. The absolute position that was read is rejected.

Limit value for the deviation:

- EnDat encoder: Is supplied from the encoder and is a minimum of 2 quadrants (e.g. EQI 1325 > 2 quadrants, EQN 1325 > 50 quadrants).

- other encoders: 15 pulses = 60 quadrants.

Incremental encoder:

When the zero pulse is passed, a deviation in the incremental position was detected.

For equidistant zero marks, the following applies:

- the first zero mark passed supplies the reference point for all subsequent checks. The other zero marks must have n times the distance referred to the first zero mark.

For distance-coded zero marks, the following applies:

- the first zero mark pair supplies the reference point for all subsequent checks. The other zero mark pairs must have the expected distance to the first zero mark pair.

Fault value (r0949, interpret decimal):

Deviation in quadrants (1 pulse = 4 quadrants).

See also: p0491 (Motor encoder fault response ENCODER)

**Remedy:**

- check that the encoder cables are routed in compliance with EMC.
- check the plug connections.
- replace the encoder or encoder cable.
- check whether the coding disk is dirty or there are strong ambient magnetic fields.
- adapt the parameter for the clearance between zero marks (p0425).
- if message output above speed threshold, reduce filter time if necessary (p0438).

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

**F31135 Encoder 1: Fault when determining the position**

**Message value:** Fault cause: %1 bin

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** Encoder 1 **Propagation:** GLOBAL

**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE)

Infeed: NONE

**Acknowledge:** PULSE INHIBIT

**Cause:** The encoder supplies status information bit by bit in an internal status/fault word. Some of these bits cause this fault to be triggered. Other bits are status displays. The status/fault word is displayed in the fault value.

Note regarding the bit designation:

The first designation is valid for DRIVE-CLiQ encoders, the second for EnDat 2.2 encoders.

Fault value (r0949, interpret binary):

Bit 0: F1 (safety status display).

Bit 1: F2 (safety status display).

Bit 2: Reserved (lighting).

Bit 3: Reserved (signal amplitude).

Bit 4: Reserved (position value).

Bit 5: Reserved (overvoltage).

Bit 6: Reserved (undervoltage)/hardware fault EnDat supply (--> F3x110, x = 1, 2, 3).

Bit 7: Reserved (overcurrent)/EnDat encoder withdrawn when not in the parked state (--> F3x110, x = 1, 2, 3).

Bit 8: Reserved (battery)/overcurrent EnDat supply (--> F3x110, x = 1, 2, 3).

Bit 9: Reserved/overvoltage EnDat supply (--> F3x110, x = 1, 2, 3).

Bit 11: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).

Bit 12: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).

Bit 13: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).

Bit 14: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).

Bit 15: Internal communication error (--> F3x110, x = 1, 2, 3).

Bit 16: Lighting (--> F3x135, x = 1, 2, 3).

Bit 17: Signal amplitude (--> F3x135, x = 1, 2, 3).

Bit 18: Singleturn position 1 (--> F3x135, x = 1, 2, 3).

Bit 19: Overvoltage (--> F3x135, x = 1, 2, 3).

Bit 20: Undervoltage (--> F3x135, x = 1, 2, 3).

- Bit 21: Overcurrent (--> F3x135, x = 1, 2, 3).
- Bit 22: Temperature exceeded (--> F3x405, x = 1, 2, 3).
- Bit 23: Singleturn position 2 (safety status display).
- Bit 24: Singleturn system (--> F3x135, x = 1, 2, 3).
- Bit 25: Singleturn power down (--> F3x135, x = 1, 2, 3).
- Bit 26: Multiturn position 1 (--> F3x136, x = 1, 2, 3).
- Bit 27: Multiturn position 2 (--> F3x136, x = 1, 2, 3).
- Bit 28: Multiturn system (--> F3x136, x = 1, 2, 3).
- Bit 29: Multiturn power down (--> F3x136, x = 1, 2, 3).
- Bit 30: Multiturn overflow/underflow (--> F3x136, x = 1, 2, 3).
- Bit 31: Multiturn battery (reserved).

**Remedy:**

- determine the detailed cause of the fault using the fault value.
- replace the encoder if necessary.

**Note:**

An EnDat 2.2 encoder may only be removed and inserted in the "Park" state.

If an EnDat 2.2 encoder was removed when not in the "Park" state, then after inserting the encoder, a POWER ON (switch-off/switch-on) is necessary to acknowledge the fault.

**F31136**

**Encoder 1: Error when determining multiturn information**

**Message value:**

Fault cause: %1 bin

**Message class:**

Actual position/speed value incorrect or not available (11)

**Drive object:**

B\_INF, ENC, VECTOR\_G

**Component:**

Encoder 1

**Propagation:**

GLOBAL

**Reaction:**

Vector: ENCODER (IASC/DCBRK, NONE)

Infeed: NONE

**Acknowledge:**

PULSE INHIBIT

**Cause:**

The encoder supplies status information bit by bit in an internal status/fault word.

Some of these bits cause this fault to be triggered. Other bits are status displays. The status/fault word is displayed in the fault value.

Note regarding the bit designation:

The first designation is valid for DRIVE-CLiQ encoders, the second for EnDat 2.2 encoders.

Fault value (r0949, interpret binary):

Bit 0: F1 (safety status display).

Bit 1: F2 (safety status display).

Bit 2: Reserved (lighting).

Bit 3: Reserved (signal amplitude).

Bit 4: Reserved (position value).

Bit 5: Reserved (overvoltage).

Bit 6: Reserved (undervoltage)/hardware fault EnDat supply (--> F3x110, x = 1, 2, 3).

Bit 7: Reserved (overcurrent)/EnDat encoder withdrawn when not in the parked state (--> F3x110, x = 1, 2, 3).

Bit 8: Reserved (battery)/overcurrent EnDat supply (--> F3x110, x = 1, 2, 3).

Bit 9: Reserved/overvoltage EnDat supply (--> F3x110, x = 1, 2, 3).

Bit 11: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).

Bit 12: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).

Bit 13: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).

Bit 14: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).

Bit 15: Internal communication error (--> F3x110, x = 1, 2, 3).

Bit 16: Lighting (--> F3x135, x = 1, 2, 3).

Bit 17: Signal amplitude (--> F3x135, x = 1, 2, 3).

Bit 18: Singleturn position 1 (--> F3x135, x = 1, 2, 3).

Bit 19: Overvoltage (--> F3x135, x = 1, 2, 3).

Bit 20: Undervoltage (--> F3x135, x = 1, 2, 3).

Bit 21: Overcurrent (--> F3x135, x = 1, 2, 3).

Bit 22: Temperature exceeded (--> F3x405, x = 1, 2, 3).

Bit 23: Singleturn position 2 (safety status display).

Bit 24: Singleturn system (--> F3x135, x = 1, 2, 3).  
 Bit 25: Singleturn power down (--> F3x135, x = 1, 2, 3).  
 Bit 26: Multiturn position 1 (--> F3x136, x = 1, 2, 3).  
 Bit 27: Multiturn position 2 (--> F3x136, x = 1, 2, 3).  
 Bit 28: Multiturn system (--> F3x136, x = 1, 2, 3).  
 Bit 29: Multiturn power down (--> F3x136, x = 1, 2, 3).  
 Bit 30: Multiturn overflow/underflow (--> F3x136, x = 1, 2, 3).  
 Bit 31: Multiturn battery (reserved).

**Remedy:**  
 - determine the detailed cause of the fault using the fault value.  
 - replace the encoder if necessary.

**Note:**

An EnDat 2.2 encoder may only be removed and inserted in the "Park" state.

If an EnDat 2.2 encoder was removed when not in the "Park" state, then after inserting the encoder, a POWER ON (switch-off/switch-on) is necessary to acknowledge the fault.

**F31137**

**Encoder 1: Internal fault when determining the position**

**Message value:** Fault cause: %1 bin  
**Message class:** Hardware/software error (1)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Encoder 1 **Propagation:** GLOBAL  
**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE)  
 Infeed: NONE

**Acknowledge:** PULSE INHIBIT

**Cause:** A position determination fault has occurred in the DRIVE-CLiQ encoder.  
 Fault value (r0949, interpret binary):  
 yyxxxxxx hex: yy = encoder version, xxxxxx = bit coding of the fault cause  
 For yy = 08 hex (bit 27 = 1), the following bit definition applies:  
 Bit 1: Signal monitoring (sin/cos).  
 Bit 8: F1 (safety status display) fault position word 1.  
 Bit 9: F2 (safety status display) fault position word 2.  
 Bit 16: LED monitoring iC-LG (opto ASIC).  
 Bit 17: Fault in the multiturn.  
 Bit 23: Temperature outside the limit values.

**Note:**

For an encoder version that is not described here, please contact the encoder manufacturer for more detailed information on the bit coding.

**Remedy:**  
 - determine the detailed cause of the fault using the fault value.  
 - if required, replace the DRIVE-CLiQ encoder.

**F31138**

**Encoder 1: Internal error when determining multiturn information**

**Message value:** Fault cause: %1 bin  
**Message class:** Hardware/software error (1)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Encoder 1 **Propagation:** GLOBAL  
**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE)  
 Infeed: NONE

**Acknowledge:** PULSE INHIBIT

**Cause:** A position determination fault has occurred in the DRIVE-CLiQ encoder.  
 Fault value (r0949, interpret binary):  
 yyxxxxxx hex: yy = encoder version, xxxxxx = bit coding of the fault cause  
 For yy = 08 hex (bit 27 = 1), the following bit definition applies:  
 Bit 1: Signal monitoring (sin/cos).  
 Bit 8: F1 (safety status display) fault position word 1.  
 Bit 9: F2 (safety status display) fault position word 2.  
 Bit 16: LED monitoring iC-LG (opto ASIC).

## 4 Faults and alarms

### 4.2 List of faults and alarms

Bit 17: Fault in the multiturn.

Bit 23: Temperature outside the limit values.

Note:

For an encoder version that is not described here, please contact the encoder manufacturer for more detailed information on the bit coding.

**Remedy:** - determine the detailed cause of the fault using the fault value.  
- if required, replace the DRIVE-CLiQ encoder.

---

#### **F31142 (N, A) Encoder 1: Battery voltage fault**

**Message value:** -

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** VECTOR\_G

**Component:** Encoder 1 **Propagation:** LOCAL

**Reaction:** ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP2)

**Acknowledge:** IMMEDIATELY

**Cause:** When switched-off, the encoder uses a battery to back up the multiturn information. The battery voltage is no longer sufficient to check the multiturn information.

**Remedy:** Replace battery.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F31150 (N, A) Encoder 1: Initialization error**

**Message value:** %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** Sensor Module Encoder 1 **Propagation:** LOCAL

**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP2)

Infeed: NONE

**Acknowledge:** PULSE INHIBIT

**Cause:** Encoder functionality selected in p0404 is not operating correctly.

Fault value (r0949, interpret hexadecimal):

Encoder malfunction.

The bit assignment corresponds to that of p0404 (e.g. bit 5 set: Error track C/D).

See also: p0404 (Encoder configuration effective), p0491 (Motor encoder fault response ENCODER)

**Remedy:** - check that p0404 is correctly set.

- check the encoder type used (incremental/absolute) and for SMCxx, the encoder cable.

- if relevant, note additional fault messages that describe the fault in detail.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F31151 (N, A) Encoder 1: Encoder speed for initialization AB too high**

**Message value:** %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** Sensor Module Encoder 1 **Propagation:** LOCAL

**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP2)

Infeed: NONE

**Acknowledge:** PULSE INHIBIT

**Cause:** The encoder speed is too high while initializing the Sensor Module.

**Remedy:** Reduce the speed of the encoder accordingly during initialization.

If necessary, deactivate monitoring (p0437.29).

See also: p0437 (Sensor Module configuration extended)

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

**F31152 (N, A) Encoder 1: Maximum input frequency exceeded**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Sensor Module Encoder 1 **Propagation:** LOCAL  
**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP2)  
Infeed: ENCODER (NONE, OFF1, OFF2)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** The maximum input frequency of the encoder evaluation has been exceeded.  
Fault value (r0949, interpret decimal):  
Actual input frequency in Hz.  
See also: p0408 (Rotary encoder pulse number)  
**Remedy:**  
- reduce the speed.  
- Use an encoder with a lower pulse number (p0408).

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

**F31153 (N, A) Encoder 1: Identification error**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Sensor Module Encoder 1 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY  
**Cause:** An error has occurred when identifying the encoder (waiting) p0400 = 10100.  
The connected encoder was not able to be identified.  
Fault value (r0949, interpret hexadecimal):  
Bit 0: Data length incorrect.  
See also: p0400 (Encoder type selection)  
**Remedy:** Manually configure the encoder according to the data sheet.

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

**F31160 (N, A) Encoder 1: Analog sensor channel A failed**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Encoder 1 **Propagation:** LOCAL  
**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE)  
Infeed: ENCODER (NONE)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** The input voltage of the analog sensor is outside the permissible limits.  
Fault value (r0949, interpret decimal):  
1: Input voltage outside detectable measuring range.  
2: Input voltage outside the measuring range set in (p4673).  
3: The absolute value of the input voltage has exceeded the range limit (p4676).

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:** For fault value = 1:  
- check the output voltage of the analog sensor.  
For fault value = 2:  
- check the voltage setting for each encoder period (p4673).  
For fault value = 3:  
- check the range limit setting and increase it if necessary (p4676).

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

**F31161 (N, A) Encoder 1: Analog sensor channel B failed**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Encoder 1 **Propagation:** LOCAL  
**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE)  
Infeed: ENCODER (NONE)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** The input voltage of the analog sensor is outside the permissible limits.  
Fault value (r0949, interpret decimal):  
1: Input voltage outside detectable measuring range.  
2: Input voltage outside the selected measuring range (p4675).  
3: The absolute value of the input voltage has exceeded the range limit (p4676).

**Remedy:** For fault value = 1:  
- check the output voltage of the analog sensor.  
For fault value = 2:  
- check the voltage setting for each encoder period (p4675).  
For fault value = 3:  
- check the range limit setting and increase it if necessary (p4676).

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

**F31163 (N, A) Encoder 1: Analog sensor position value exceeds limit value**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Encoder 1 **Propagation:** LOCAL  
**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE)  
Infeed: ENCODER (NONE)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** The position value has exceeded the permissible range of -0.5 ... +0.5.  
Fault value (r0949, interpret decimal):  
1: Position value from the LVDT sensor.  
2: Position value from the encoder characteristic.

**Remedy:** For fault value = 1:  
- check the LVDT ratio (p4678).  
- check the reference signal connection at track B.  
For fault value = 2:  
- check the coefficients of the characteristic (p4663 ... p4666).

Reaction upon N: NONE  
Acknowl. upon N: NONE

Reaction upon A: NONE  
Acknowl. upon A: NONE

---

**A31400 (F, N) Encoder 1: Alarm threshold zero mark distance error**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Encoder 1 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE

**Cause:** The measured zero mark distance does not correspond to the parameterized zero mark distance.  
For distance-coded encoders, the zero mark distance is determined from zero marks detected pairs. This means that if a zero mark is missing, depending on the pair generation, this cannot result in a fault and also has no effect in the system.  
The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder).  
Alarm value (r2124, interpret decimal):  
Last measured zero mark distance in increments (4 increments = 1 encoder pulse).  
The sign designates the direction of motion when detecting the zero mark distance.

**Remedy:**

- check that the encoder cables are routed in compliance with EMC.
- check the plug connections.
- check the encoder type (encoder with equidistant zero marks).
- adapt the parameter for the distance between zero marks (p0424, p0425).
- replace the encoder or encoder cable.

Reaction upon F: Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Infeed: NONE (OFF1, OFF2)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**A31401 (F, N) Encoder 1: Alarm threshold zero mark failed**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Encoder 1 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE

**Cause:** The 1.5 x parameterized zero mark distance was exceeded.  
The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder).  
Alarm value (r2124, interpret decimal):  
Number of increments after POWER ON or since the last zero mark that was detected (4 increments = 1 encoder pulse).

**Remedy:**

- check that the encoder cables are routed in compliance with EMC.
- check the plug connections.
- check the encoder type (encoder with equidistant zero marks).
- adapt the parameter for the clearance between zero marks (p0425).
- replace the encoder or encoder cable.

Reaction upon F: Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Infeed: NONE (OFF1, OFF2)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

<b>F31405 (N, A)</b>	<b>Encoder 1: Temperature in the encoder evaluation inadmissible</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Overtemperature of the electronic components (6)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The encoder evaluation for a motor with DRIVE-CLiQ has detected an inadmissible temperature. The fault threshold is 125 ° C. Fault value (r0949, interpret decimal): Measured board/module temperature in 0.1 °C.
<b>Remedy:</b>	Reduce the ambient temperature for the DRIVE-CLiQ connection of the motor.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>A31407 (F, N)</b>	<b>Encoder 1: Function limit reached</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The encoder has reached one of its function limits. A service is recommended. Alarm value (r2124, interpret decimal): 1: Incremental signals 3: Absolute track 4: Code connection
<b>Remedy:</b>	Perform service. Replace the encoder if necessary. Note: The actual functional reserve of an encoder can be displayed via r4651. See also: p4650 (Encoder functional reserve component number), r4651 (Encoder functional reserve)
Reaction upon F:	Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>A31410 (F, N)</b>	<b>Encoder 1: Serial communications</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Serial communication protocol transfer error between the encoder and evaluation module. Alarm value (r2124, interpret binary): Bit 0: Alarm bit in the position protocol. Bit 1: Incorrect quiescent level on the data line. Bit 2: Encoder does not respond (does not supply a start bit within 50 ms). Bit 3: CRC error: The checksum in the protocol from the encoder does not match the data. Bit 4: Encoder acknowledgment error: The encoder incorrectly understood the task (request) or cannot execute it. Bit 5: Internal error in the serial driver: An illegal mode command was requested.

Bit 6: Timeout when cyclically reading.  
 Bit 8: Protocol is too long (e.g. > 64 bits).  
 Bit 9: Receive buffer overflow.  
 Bit 10: Frame error when reading twice.  
 Bit 11: Parity error.  
 Bit 12: Data line signal level error during the monoflop time.

**Remedy:**  
 - check that the encoder cables are routed in compliance with EMC.  
 - check the plug connections.  
 - replace encoder.

Reaction upon F: Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
 Infeed: NONE (OFF1, OFF2)

Acknowl. upon F: IMMEDIATELY

Reaction upon N: NONE

Acknowl. upon N: NONE

**A31411 (F, N) Encoder 1: Absolute encoder signals internal alarms**

**Message value:** Fault cause: %1 bin, additional information: %2

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** Encoder 1 **Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The absolute encoder fault word includes alarm bits that have been set.

Alarm value (r2124, interpret binary):

yyyyxxxx hex: yyyy = supplementary information, xxxx = fault cause

yyyy = 0:

Bit 0: Frequency exceeded (speed too high).  
 Bit 1: Temperature exceeded.  
 Bit 2: Control reserve, lighting system exceeded.  
 Bit 3: Battery discharged.  
 Bit 4: Reference point passed.

yyyy = 1:

Bit 0: Signal amplitude outside the control range.  
 Bit 1: Error multiturn interface  
 Bit 2: Internal data error (singleturn/multiturn not with single steps).  
 Bit 3: Error EEPROM interface.  
 Bit 4: SAR\_converter error.  
 Bit 5: Fault for the register data transfer.  
 Bit 6: Internal error identified at the error pin (nErr).  
 Bit 7: Temperature threshold exceeded or fallen below.

See also: p0491 (Motor encoder fault response ENCODER)

**Remedy:** Replace encoder.

Reaction upon F: Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
 Infeed: NONE (OFF1, OFF2)

Acknowl. upon F: IMMEDIATELY

Reaction upon N: NONE

Acknowl. upon N: NONE

<b>A31412 (F, N)</b>	<b>Encoder 1: Error bit set in the serial protocol</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The encoder sends a set error bit via the serial protocol. Alarm value (r2124, interpret binary): Bit 0: Fault bit in the position protocol. Bit 1: Alarm bit in the position protocol.
<b>Remedy:</b>	- carry out a POWER ON (switch off/on) for all components. - check that the encoder cables are routed in compliance with EMC. - check the plug connections. - replace encoder.
Reaction upon F:	Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>A31414 (F, N)</b>	<b>Encoder 1: Amplitude error track C or D (C^2 + D^2)</b>
<b>Message value:</b>	C track: %1, D track: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The amplitude (C^2 + D^2) of track C or D of the encoder or from the Hall signals, is not within the tolerance bandwidth. Alarm value (r2124, interpret hexadecimal): yyyyxxxx hex: yyyy = Signal level, track D (16 bits with sign). xxxx = Signal level, track C (16 bits with sign). The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %). The response thresholds are < 230 mV (observe the frequency response of the encoder) and > 750 mV. A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec. Note: If the amplitude is not within the tolerance bandwidth, then it cannot be used to initialize the start position.
<b>Remedy:</b>	- check that the encoder cables are routed in compliance with EMC. - check the plug connections. - replace the encoder or encoder cable. - check the Sensor Module (e.g. contacts). - check the Hall sensor box.
Reaction upon F:	Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>N31415 (F, A)</b>	<b>Encoder 1: Amplitude alarm track A or B (A<sup>2</sup> + B<sup>2</sup>)</b>
<b>Message value:</b>	Amplitude: %1, Angle: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1 <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The amplitude (root of A <sup>2</sup> + B <sup>2</sup> ) for encoder 1 exceeds the permissible tolerance. Alarm value (r2124, interpret hexadecimal): yyyyxxxx hex: yyyy = Angle xxxx = amplitude, i.e. root of A <sup>2</sup> + B <sup>2</sup> (16 bits without sign) The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %). The response threshold is < 230 mV (observe the frequency response of the encoder). A signal level of 500 mV peak value corresponds to the numerical value 299A hex = 10650 dec. The angle 0 ... FFFF hex corresponds to 0 ... 360 degrees of the fine position. Zero degrees is present at the negative zero crossover of track B. Note for Sensor Modules for resolvers (e.g. SMC10): The nominal signal level is at 2900 mV (2.0 Vrms). The response threshold is < 1414 mV (1.0 Vrms). A signal level of 2900 mV peak value corresponds to the numerical value 3333 hex = 13107 dec. Note: The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module. See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- check the speed range, frequency characteristic (amplitude characteristic) of the measuring equipment is not sufficient for the speed range. - check that the encoder cables and shielding are routed in compliance with EMC. - check the plug connections. - replace the encoder or encoder cable. - check the Sensor Module (e.g. contacts). - if the coding disk is soiled or the lighting aged, replace the encoder.
Reaction upon F:	Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>A31418 (F, N)</b>	<b>Encoder 1: Speed difference per sampling rate exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1 <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	For an HTL/TTL encoder, the speed difference between two sampling cycles has exceeded the value in p0492. The change to the averaged speed actual value - if applicable - is monitored in the current controller sampling time. Alarm value (r2124, interpret decimal): Only for internal Siemens troubleshooting. See also: p0492
<b>Remedy:</b>	- check the tachometer feeder cable for interruptions. - check the grounding of the tachometer shielding. - if required, increase the setting of p0492.
Reaction upon F:	Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon N: NONE  
Acknowl. upon N: NONE

---

<b>A31419 (F, N)</b>	<b>Encoder 1: Track A or B outside tolerance</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	Encoder 1	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The amplitude/phase/offset correction for track A or B is at the limit. Amplitude error correction: Amplitude B / Amplitude A = 0.78 ... 1.27 Phase: <84 degrees or >96 degrees SMC20: Offset correction: +/-140 mV SMC10: Offset correction: +/-650 mV Alarm value (r2124, interpret hexadecimal): xxxx1: Minimum of the offset correction, track B xxxx2: Maximum of the offset correction, track B xxx1x: Minimum of the offset correction, track A xxx2x: Maximum of the offset correction, track A xx1xx: Minimum of the amplitude correction, track B/A xx2xx: Maximum of the amplitude correction, track B/A x1xxx: Minimum of the phase error correction x2xxx: Maximum of the phase error correction 1xxxx: Minimum of the cubic correction 2xxxx: Maximum of the cubic correction See also: p0491 (Motor encoder fault response ENCODER)		
<b>Remedy:</b>	- check mechanical mounting tolerances for encoders without their own bearings (e.g. toothed-wheel encoders). - check the plug connections (also the transition resistance). - check the encoder signals. - replace the encoder or encoder cable.		
Reaction upon F:	Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A31421 (F, N)</b>	<b>Encoder 1: Coarse position error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	Encoder 1	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	For the actual value sensing, an error was detected. As a result of this error, it must be assumed that the actual value sensing supplies an incorrect coarse position. Alarm value (r2124, interpret decimal): 3: The absolute position of the serial protocol and track A/B differ by half an encoder pulse. The absolute position must have its zero position in the quadrants in which both tracks are negative. In the case of a fault, the position can be incorrect by one encoder pulse.		
<b>Remedy:</b>	For alarm value = 3: - For a standard encoder with cable, contact the manufacturer where relevant. - correct the assignment of the tracks to the position value that is serially transferred. To do this, the two tracks must be connected, inverted, at the Sensor Module (interchange A with A* and B with B*) or, for a programmable encoder, check the zero offset of the position.		

Reaction upon F: Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
 Infeed: NONE (OFF1, OFF2)  
 Acknowl. upon F: IMMEDIATELY  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE

---

**A31422 (F, N) Encoder 1: Pulses per revolution square-wave encoder outside tolerance bandwidth**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Encoder 1 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The measured zero mark distance does not correspond to the parameterized zero mark distance.  
 This alarm is triggered with active square-wave encoder PPR correction and re-parameterized fault 31131 if the accumulator contains larger values than p4683 or p4684.  
 The zero mark distance for zero mark monitoring is set in p0425 (rotary encoder).  
 Alarm value (r2124, interpret decimal):  
 accumulated differential pulses in encoder pulses.  
 See also: p0491 (Motor encoder fault response ENCODER)  
**Remedy:** - check that the encoder cables are routed in compliance with EMC.  
 - check the plug connections.  
 - check the encoder type (encoder with equidistant zero marks).  
 - adapt the parameter for the distance between zero marks (p0424, p0425).  
 - replace the encoder or encoder cable.

Reaction upon F: Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
 Infeed: NONE (OFF1, OFF2)  
 Acknowl. upon F: IMMEDIATELY  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE

---

**A31429 (F, N) Encoder 1: Position difference hall sensor/track C/D and A/B too large**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Encoder 1 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The error for track C/D is greater than +/-15 ° mechanical or +/-60 ° electrical or the error for the Hall signals is greater than +/-60 ° electrical.  
 One period of track C/D corresponds to 360 ° mechanical.  
 One period of the Hall signal corresponds to 360 ° electrical.  
 The monitoring responds if, for example, Hall sensors are connected as equivalent for the C/D tracks with the incorrect rotational sense or supply values that are not accurate enough.  
 Alarm value (r2124, interpret decimal):  
 For track C/D, the following applies:  
 Measured deviation as mechanical angle (16 bits with sign, 182 dec corresponds to 1 °).  
 For Hall signals, the following applies:  
 Measured deviation as electrical angle (16 bits with sign, 182 dec corresponds to 1 °).  
 See also: p0491 (Motor encoder fault response ENCODER)  
**Remedy:** - track C or D not connected.  
 - correct the direction of rotation of the Hall sensor possibly connected as equivalent for track C/D.  
 - check that the encoder cables are routed in compliance with EMC.  
 - check the adjustment of the Hall sensor.

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon F: Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Infeed: NONE (OFF1, OFF2)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **A31431 (F, N) Encoder 1: Deviation position incremental/absolute too large**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Encoder 1 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** When the zero pulse is passed, a deviation in the incremental position was detected.  
For equidistant zero marks, the following applies:  
- the first zero mark passed supplies the reference point for all subsequent checks. The other zero marks must have n times the distance referred to the first zero mark.  
For distance-coded zero marks, the following applies:  
- the first zero mark pair supplies the reference point for all subsequent checks. The other zero mark pairs must have the expected distance to the first zero mark pair.  
Alarm value (r2124, interpret decimal):  
Deviation in quadrants (1 pulse = 4 quadrants).  
See also: p0491 (Motor encoder fault response ENCODER)  
**Remedy:**  
- check that the encoder cables are routed in compliance with EMC.  
- check the plug connections.  
- replace the encoder or encoder cable.  
- Clean coding disk or remove strong magnetic fields.

Reaction upon F: Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Infeed: NONE (OFF1, OFF2)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **A31432 (F, N) Encoder 1: Rotor position adaptation corrects deviation**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** B\_INF, ENC, VECTOR\_G  
**Component:** Encoder 1 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** For track A/B, pulses have been lost or too many have been counted. These pulses are presently being corrected.  
Alarm value (r2124, interpret decimal):  
Last measured deviation of zero mark in increments (4 increments = 1 encoder pulse).  
The sign designates the direction of motion when detecting the zero mark distance.  
**Remedy:**  
- check that the encoder cables are routed in compliance with EMC.  
- check the plug connections.  
- replace the encoder or encoder cable.  
- check encoder limit frequency.  
- adapt the parameter for the distance between zero marks (p0424, p0425).

Reaction upon F: Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Infeed: NONE (OFF1, OFF2)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

<b>A31442 (F, N)</b>	<b>Encoder 1: Battery voltage pre-alarm</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	When switched-off, the encoder uses a battery to back up the multiturn information. The multiturn information can no longer be buffered if the battery voltage drops even further.
<b>Remedy:</b>	Replace battery.
Reaction upon F:	Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A31443 (F, N)</b>	<b>Encoder 1: Unipolar CD signal level outside specification</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The unipolar level (CP/CN or DP/DN) for encoder 1 is outside the permissible tolerance. Alarm value (r2124, interpret binary): Bit 0 = 1: Either CP or CN outside the tolerance. Bit 16 = 1: Either DP or DN outside the tolerance. The unipolar nominal signal level of the encoder must lie in the range 2500 mV +/- 500 mV. The response thresholds are < 1700 mV and > 3300 mV. Note: The signal level is not evaluated unless the following conditions are satisfied: - Sensor Module properties available (r0459.31 = 1). - monitoring active (p0437.31 = 1). See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- check that the encoder cables and shielding are routed in compliance with EMC. - check the plug connections and contacts of the encoder cable. - are the C/D tracks connected correctly (have the signal lines CP and CN or DP and DN been interchanged)? - replace the encoder cable.
Reaction upon F:	Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A31460 (N)</b>	<b>Encoder 1: Analog sensor channel A failed</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The input voltage of the analog sensor is outside the permissible limits. Alarm value (r2124, interpret decimal): 1: Input voltage outside detectable measuring range. 2: Input voltage outside measuring range set in p4673. 3: The absolute value of the input voltage has exceeded the range limit (p4676).
<b>Remedy:</b>	For alarm value = 1: - check the output voltage of the analog sensor. For alarm value = 2: - check the voltage setting for each encoder period (p4673). For alarm value = 3: - check the range limit setting and increase it if necessary (p4676).
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A31461 (N)</b>	<b>Encoder 1: Analog sensor channel B failed</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The input voltage of the analog sensor is outside the permissible limits. Alarm value (r2124, interpret decimal): 1: Input voltage outside detectable measuring range. 2: Input voltage outside the selected measuring range (p4675). 3: The absolute value of the input voltage has exceeded the range limit (p4676).
<b>Remedy:</b>	For alarm value = 1: - check the output voltage of the analog sensor. For alarm value = 2: - check the voltage setting for each encoder period (p4675). For alarm value = 3: - check the range limit setting and increase it if necessary (p4676).
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A31462 (N)</b>	<b>Encoder 1: Analog sensor no channel active</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Channel A and B are not activated for the analog sensor.
<b>Remedy:</b>	- activate channel A and/or channel B (p4670). - check the encoder configuration (p0404.17). See also: p4670 (Analog sensor configuration)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

---

<b>A31463 (N)</b>	<b>Encoder 1: Analog sensor position value exceeds limit value</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The position value has exceeded the permissible range of -0.5 ... +0.5. Alarm value (r2124, interpret decimal): 1: Position value from the LVDT sensor. 2: Position value from the encoder characteristic.
<b>Remedy:</b>	For alarm value = 1: - check the LVDT ratio (p4678). - check the reference signal connection at track B. For alarm value = 2: - check the coefficients of the characteristic (p4663 ... p4666).
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A31470 (F, N)</b>	<b>Encoder 1: Soiling detected</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	In the case of the alternative encoder system interface on the Sensor Module Cabinet 30 (SMC30), a dirty encoder is signaled via a 0 signal at terminal X521.7.
<b>Remedy:</b>	- check the plug connections. - replace the encoder or encoder cable.
Reaction upon F:	Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>F31500 (N, A)</b>	<b>Encoder 1: Position tracking traversing range exceeded</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	Vector: OFF1 (NONE, OFF2, OFF3) Infeed: OFF1 (NONE, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	For a configured linear axis without modulo correction, the drive/encoder has exceeded the maximum possible traversing range. The value should be read in p0412 and interpreted as the number of motor revolutions. For p0411.0 = 1, the maximum traversing range for the configured linear axis is defined to be 64x (+/- 32x) of p0421. For p0411.3 = 1, the maximum traversing range for the configured linear axis is preset (default value) to the highest possible value and is +/-p0412/2 (rounded off to complete revolutions). The highest possible value depends on the pulse number (p0408) and the fine resolution (p0419).
<b>Remedy:</b>	The fault should be resolved as follows: - select encoder commissioning (p0010 = 4). - reset the position tracking as follows (p0411.2 = 1). - deselect encoder commissioning (p0010 = 0). The fault should then be acknowledged and the absolute encoder adjusted.

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

<b>F31501 (N, A)</b>	<b>Encoder 1: Position tracking encoder position outside tolerance window</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF1 (NONE, OFF2, OFF3) Infeed: OFF1 (NONE, OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	When switched off, the drive/encoder was moved through a distance greater than was parameterized in the tolerance window. It is possible that there is no longer any reference between the mechanical system and encoder. Fault value (r0949, interpret decimal): Deviation (difference) to the last encoder position in increments of the absolute value. The sign designates the traversing direction. Note: The deviation (difference) found is also displayed in r0477. See also: p0413 (Measuring gear position tracking tolerance window), r0477 (Measuring gear position difference)		
<b>Remedy:</b>	Reset the position tracking as follows: - select encoder commissioning (p0010 = 4). - reset the position tracking as follows (p0411.2 = 1). - deselect encoder commissioning (p0010 = 0). The fault should then be acknowledged and, if necessary, the absolute encoder adjusted (p2507). See also: p0010		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F31502 (N, A)</b>	<b>Encoder 1: Encoder with measuring gear without valid signals</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	B_INF, ENC, VECTOR_G		
<b>Component:</b>	Sensor Module Encoder 1	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: OFF1 (OFF2, OFF3) Infeed: OFF1 (OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The encoder with measuring gear no longer provides any valid signals.		
<b>Remedy:</b>	It must be ensured that all of the encoders, with mounted measuring gear, provide valid actual values in operation.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

**F31503 (N, A) Encoder 1: Position tracking cannot be reset**

**Message value:** -

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** Vector: OFF1 (NONE, OFF2, OFF3)  
Infeed: OFF1 (NONE, OFF2)

**Acknowledge:** IMMEDIATELY

**Cause:** The position tracking for the measuring gear cannot be reset.

**Remedy:** The fault should be resolved as follows:  
- select encoder commissioning (p0010 = 4).  
- reset the position tracking as follows (p0411.2 = 1).  
- deselect encoder commissioning (p0010 = 0).  
The fault should then be acknowledged and the absolute encoder adjusted.

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

**A31700 Encoder 1: Effectivity test does not supply the expected value**

**Message value:** Fault cause: %1 bin

**Message class:** Safety monitoring channel has identified an error (10)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** Sensor Module Encoder 1 **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The DRIVE-CLiQ encoder fault word supplies fault bits that have been set.  
Alarm value (r2124, interpret binary):  
Bit x = 1: Effectivity test x unsuccessful.

**Remedy:** Replace encoder.

**N31800 (F) Encoder 1: Group signal**

**Message value:** -

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** None **Propagation:** LOCAL

**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE)  
Infeed: OFF2 (NONE)

**Acknowledge:** NONE

**Cause:** The motor encoder has detected at least one fault.  
See also: p0491 (Motor encoder fault response ENCODER)

**Remedy:** Evaluate the other messages that are presently available.

Reaction upon F: Vector: ENCODER (IASC/DCBRK, NONE)  
Infeed: OFF2 (NONE)

Acknowl. upon F: IMMEDIATELY

---

<b>F31801 (N, A)</b>	<b>Encoder 1 DRIVE-CLiQ: Sign-of-life missing</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: OFF2 (NONE)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder involved. Fault cause: 10 (= 0A hex): The sign-of-life bit in the receive telegram is not set. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- check the electrical cabinet design and cable routing for EMC compliance - replace the component involved. See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F31802 (N, A)</b>	<b>Encoder 1: Time slice overflow</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: OFF2 (NONE)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A time slice overflow has occurred in encoder 1. Fault value (r0949, interpret hexadecimal): yx hex: y = function involved (Siemens-internal fault diagnostics), x = time slice involved x = 9: Time slice overflow of the fast (current controller clock cycle) time slice. x = A: Time slice overflow of the average time slice. x = C: Time slice overflow of the slow time slice. yx = 3E7: Timeout when waiting for SYNO (e.g. unexpected return to non-cyclic operation). See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	Increase the current controller sampling time Note: For a current controller sampling time = 31.25 µs, use an SMx20 with Article No. 6SL3055-0AA00-5xA3.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F31804 (N, A)</b>	<b>Encoder 1: Checksum error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: OFF2 (NONE)
<b>Acknowledge:</b>	POWER ON (IMMEDIATELY)
<b>Cause:</b>	A checksum error has occurred when reading-out the program memory on the Sensor Module. Fault value (r0949, interpret hexadecimal): yyyyxxxx hex yyyy: Memory area involved. xxxx: Difference between the checksum at POWER ON and the actual checksum. See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- carry out a POWER ON (switch off/on). - upgrade firmware to later version (>= V2.6 HF3, >= V4.3 SP2, >= V4.4). - check whether the permissible ambient temperature for the component is maintained. - replace the Sensor Module.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F31805 (N, A)</b>	<b>Encoder 1: EEPROM checksum error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: OFF2 (NONE)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Internal parameter data is corrupted. Fault value (r0949, interpret hexadecimal): 01: EEPROM access error. 02: Too many blocks in the EEPROM. See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	Replace the module.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F31806 (N, A)</b>	<b>Encoder 1: Initialization error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: OFF2 (NONE)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The encoder was not successfully initialized. Fault value (r0949, interpret hexadecimal): Bit 0, 1: Encoder initialization with the motor rotating has failed (deviation involving coarse and fine position in encoder pulses/4). Bit 2: Mid-voltage matching for track A unsuccessful.

- Bit 3: Mid-voltage matching for track B unsuccessful.
- Bit 4: Mid-voltage matching for acceleration input unsuccessful.
- Bit 5: Mid-voltage matching for track safety A unsuccessful.
- Bit 6: Mid-voltage matching for track safety B unsuccessful.
- Bit 7: Mid-voltage matching for track C unsuccessful.
- Bit 8: Mid-voltage matching for track D unsuccessful.
- Bit 9: Mid-voltage matching for track R unsuccessful.
- Bit 10: The difference in mid-voltages between A and B is too great (> 0.5 V)
- Bit 11: The difference in mid-voltages between C and D is too great (> 0.5 V)
- Bit 12: The difference in mid-voltages between safety A and safety B is too great (> 0.5 V)
- Bit 13: The difference in mid-voltages between A and safety B is too great (> 0.5 V)
- Bit 14: The difference in mid-voltages between B and safety A is too great (> 0.5 V)
- Bit 15: The standard deviation of the calculated mid-voltages is too great (> 0.3 V)
- Bit 16: Internal fault - fault when reading a register (CAFE)
- Bit 17: Internal fault - fault when writing a register (CAFE)
- Bit 18: Internal fault: No mid-voltage matching available
- Bit 19: Internal error - ADC access error.
- Bit 20: Internal error - no zero crossover found.
- Bit 28: Error while initializing the EnDat 2.2 measuring unit.
- Bit 29: Error when reading out the data from the EnDat 2.2 measuring unit.
- Bit 30: EEPROM checksum of the EnDat 2.2 measuring unit incorrect.
- Bit 31: Data of the EnDat 2.2 measuring unit inconsistent.

Note:

- Bit 0, 1: Up to 6SL3055-0AA00-5\*A0
- Bits 2 ... 20: 6SL3055-0AA00-5\*A1 and higher
- See also: p0491 (Motor encoder fault response ENCODER)

**Remedy:**

- Acknowledge fault.
- If the fault cannot be acknowledged:
- Bits 2 ... 9: Check encoder power supply.
- Bits 2 ... 14: Check the corresponding cable.
- Bit 15 with no other bits: Check track R, check settings in p0404.
- Bit 28: Check the cable between the EnDat 2.2 converter and the measuring unit.
- Bit 29 ... 31: Replace the defective measuring unit.

- Reaction upon N: NONE
- Acknowl. upon N: NONE
- Reaction upon A: NONE
- Acknowl. upon A: NONE

---

**A31811 (F, N) Encoder 1: Encoder serial number changed**

- Message value:** -
- Message class:** Error in the parameterization / configuration / commissioning procedure (18)
- Drive object:** B\_INF, ENC, VECTOR\_G
- Component:** Encoder 1 **Propagation:** LOCAL
- Reaction:** NONE
- Acknowledge:** NONE

- Cause:** The serial number of the motor encoder of a synchronous motor has changed. The change was only checked for encoders with serial number (e.g. EnDat encoders) and build-in motors (e.g. p0300 = 401) or third-party motors (p0300 = 2).
  - Cause 1:
    - the encoder was replaced.
  - Cause 2:
    - a third-party, built-in or linear motor was re-commissioned.
  - Cause 3:
    - the motor with integrated and adjusted encoder was replaced.

**Cause 4:**

- the firmware was updated to a version that checks the encoder serial number.

**Note:**

With closed-loop position control, the serial number is accepted when starting the adjustment (p2507 = 2).

When the encoder is adjusted (p2507 = 3), the serial number is checked for changes and if required, the adjustment is reset (p2507 = 1).

Proceed as follows to hide serial number monitoring:

- set the following serial numbers for the corresponding Encoder Data Set: p0441= FF, p0442 = 0, p0443 = 0, p0444 = 0, p0445 = 0.

- parameterize F07414 as message type N (p2118, p2119).

See also: p0491 (Motor encoder fault response ENCODER)

**Remedy:**

For causes 1, 2:

Carry out an automatic adjustment using the pole position identification routine. Acknowledge fault. Initiate the pole position identification routine with p1990 = 1. Then check that the pole position identification routine is correctly executed.

**SERVO:**

If a pole position identification technique is selected in p1980, and if p0301 does not contain a motor type with an encoder adjusted in the factory, then p1990 is automatically activated.

or

Set the adjustment via p0431. In this case, the new serial number is automatically accepted.

or

Mechanically adjust the encoder. Accept the new serial number with p0440 = 1.

For causes 3, 4:

Accept the new serial number with p0440 = 1.

Reaction upon F: Vector: NONE (ENCODER, OFF2)

Infeed: OFF2 (NONE)

Acknowl. upon F: IMMEDIATELY

Reaction upon N: NONE

Acknowl. upon N: NONE

**F31812 (N, A) Encoder 1: Requested cycle or RX-/TX timing not supported**

**Message value:** %1

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** B\_INF, ENC, VECTOR\_G

**Component:** Sensor Module Encoder 1

**Propagation:** LOCAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY

**Cause:** A cycle requested from the Control Unit or RX/TX timing is not supported.

Fault value (r0949, interpret decimal):

0: Application cycle is not supported.

1: DRIVE-CLiQ cycle is not supported.

2: Distance between RX and TX instants in time too low.

3: TX instant in time too early.

**Remedy:** Carry out a POWER ON (switch-off/switch-on) for all components.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

<b>F31813</b>	<b>Encoder 1: Hardware logic unit failed</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The DRIVE-CLiQ encoder fault word supplies fault bits that have been set. Fault value (r0949, interpret binary): Bit 0: ALU watchdog has responded. Bit 1: ALU has detected a sign-of-life error.
<b>Remedy:</b>	Replace encoder.
<b>F31820 (N, A)</b>	<b>Encoder 1 DRIVE-CLiQ: Telegram error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder concerned. Fault cause: 1 (= 01 hex): Checksum error (CRC error). 2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list. 3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list. 4 (= 04 hex): The length of the receive telegram does not match the receive list. 5 (= 05 hex): The type of the receive telegram does not match the receive list. 6 (= 06 hex): The address of the component in the telegram and in the receive list do not match. 7 (= 07 hex): A SYNC telegram is expected - but the received telegram is not a SYNC telegram. 8 (= 08 hex): No SYNC telegram is expected - but the received telegram is one. 9 (= 09 hex): The error bit in the receive telegram is set. 16 (= 10 hex): The receive telegram is too early. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause See also: p0491 (Motor encoder fault response ENCODER) - carry out a POWER ON (switch-off/switch-on). - check the electrical cabinet design and cable routing for EMC compliance - check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...). See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)
<b>Remedy:</b>	
Reaction upon N:	NONE
Acknowl. upon N:	NONE



---

<b>F31837 (N, A)</b>	<b>Encoder 1 DRIVE-CLiQ: Component fault</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: OFF2
<b>Propagation:</b>	LOCAL
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Fault detected on the DRIVE-CLiQ component concerned. Faulty hardware cannot be excluded. Fault cause: 32 (= 20 hex): Error in the telegram header. 35 (= 23 hex): Receive error: The telegram buffer memory contains an error. 66 (= 42 hex): Send error: The telegram buffer memory contains an error. 67 (= 43 hex): Send error: The telegram buffer memory contains an error. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...). - check the electrical cabinet design and cable routing for EMC compliance - if required, use another DRIVE-CLiQ socket (p9904). - replace the component involved.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F31845 (N, A)</b>	<b>Encoder 1 DRIVE-CLiQ: Cyclic data transfer error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: OFF2
<b>Propagation:</b>	LOCAL
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder involved. Fault cause: 11 (= 0B hex): Synchronization error during alternating cyclic data transfer. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	Carry out a POWER ON (switch-off/switch-on). See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

<b>F31850 (N, A)</b>	<b>Encoder 1: Encoder evaluation internal software error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: OFF2 (NONE)
<b>Propagation:</b>	LOCAL
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	An internal software error has occurred in the Sensor Module of encoder 1. Fault value (r0949, interpret decimal): 1: Background time slice is blocked. 2: Checksum over the code memory is not OK. 10000: OEM memory of the EnDat encoder contains data that cannot be interpreted. 11000 ... 11499: Descriptive data from EEPROM incorrect. 11500 ... 11899: Calibration data from EEPROM incorrect. 11900 ... 11999: Configuration data from EEPROM incorrect. 12000 ... 12008: communication with analog/digital converter faulted. 16000: DRIVE-CLiQ encoder initialization application error. 16001: DRIVE-CLiQ encoder initialization ALU error. 16002: DRIVE-CLiQ encoder HISI / SISI initialization error. 16003: DRIVE-CLiQ encoder safety initialization error. 16004: DRIVE-CLiQ encoder internal system error. See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- replace the Sensor Module. - if required, upgrade the firmware in the Sensor Module. - contact Technical Support.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>F31851 (N, A)</b>	<b>Encoder 1 DRIVE-CLiQ (CU): Sign-of-life missing</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE (OFF1, OFF2)
<b>Propagation:</b>	LOCAL
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Sensor Module (encoder 1) involved to the Control Unit. The DRIVE-CLiQ component did not set the sign-of-life to the Control Unit. Fault cause: 10 (= 0A hex): The sign-of-life bit in the receive telegram is not set. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- Upgrade the firmware of the component involved. - carry out a POWER ON (switch-off/switch-on) for the component involved.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

<b>F31860 (N, A)</b>	<b>Encoder 1 DRIVE-CLiQ (CU): Telegram error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE (OFF1, OFF2)
<b>Propagation:</b>	LOCAL
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Sensor Module (encoder 1) involved to the Control Unit. Fault cause: 1 (= 01 hex): Checksum error (CRC error). 2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list. 3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list. 4 (= 04 hex): The length of the receive telegram does not match the receive list. 5 (= 05 hex): The type of the receive telegram does not match the receive list. 6 (= 06 hex): The address of the power unit in the telegram and in the receive list do not match. 9 (= 09 hex): The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed. 16 (= 10 hex): The receive telegram is too early. 17 (= 11 hex): CRC error and the receive telegram is too early. 18 (= 12 hex): The telegram is shorter than that specified in the length byte or in the receive list and the receive telegram is too early. 19 (= 13 hex): The telegram is longer than that specified in the length byte or in the receive list and the receive telegram is too early. 20 (= 14 hex): The length of the receive telegram does not match the receive list and the receive telegram is too early. 21 (= 15 hex): The type of the receive telegram does not match the receive list and the receive telegram is too early. 22 (= 16 hex): The address of the power unit in the telegram and in the receive list does not match and the receive telegram is too early. 25 (= 19 hex): The error bit in the receive telegram is set and the receive telegram is too early. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on). - check the electrical cabinet design and cable routing for EMC compliance - check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...). See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F31875 (N, A)</b>	<b>Encoder 1: power supply voltage failed</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed. Fault cause: 9 (= 09 hex): The power supply voltage for the components has failed. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on). - check the power supply voltage wiring for the DRIVE-CLiQ component (interrupted cable, contacts, ...). - check the dimensioning of the power supply for the DRIVE-CLiQ component.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F31885 (N, A)</b>	<b>Encoder 1 DRIVE-CLiQ (CU): Cyclic data transfer error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE (OFF1, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Sensor Module (encoder 1) involved to the Control Unit. The nodes do not send and receive in synchronism. Fault cause: 26 (= 1A hex): Sign-of-life bit in the receive telegram not set and the receive telegram is too early. 33 (= 21 hex): The cyclic telegram has not been received. 34 (= 22 hex): Timeout in the telegram receive list. 64 (= 40 hex): Timeout in the telegram send list. 98 (= 62 hex): Error at the transition to cyclic operation. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- check the power supply voltage of the component involved. - carry out a POWER ON. - replace the component involved. See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon A: NONE  
Acknowl. upon A: NONE

---

<b>F31886 (N, A)</b>	<b>Encoder 1 DRIVE-CLiQ (CU): Error when sending DRIVE-CLiQ data</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE (OFF1, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Sensor Module (encoder 1) involved to the Control Unit. Data were not able to be sent. Fault cause: 65 (= 41 hex): Telegram type does not match send list. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- carry out a POWER ON. - check whether the firmware version of the encoder (r0148) matches the firmware version of Control Unit (r0018).
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F31887 (N, A)</b>	<b>Encoder 1 DRIVE-CLiQ (CU): Component fault</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: NONE (OFF1, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Fault detected on the DRIVE-CLiQ component involved (Sensor Module for encoder 1). Faulty hardware cannot be excluded. Fault cause: 32 (= 20 hex): Error in the telegram header. 35 (= 23 hex): Receive error: The telegram buffer memory contains an error. 66 (= 42 hex): Send error: The telegram buffer memory contains an error. 67 (= 43 hex): Send error: The telegram buffer memory contains an error. 96 (= 60 hex): Response received too late during runtime measurement. 97 (= 61 hex): Time taken to exchange characteristic data too long. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause



---

<b>F31899 (N, A)</b>	<b>Encoder 1: Unknown fault</b>
<b>Message value:</b>	New message: %1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	A fault occurred on the Sensor Module for encoder 1 that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit. Fault value (r0949, interpret decimal): Fault number. Note: If required, the significance of this new fault can be read about in a more recent description of the Control Unit. See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- replace the firmware on the Sensor Module by an older firmware version (r0148). - upgrade the firmware on the Control Unit (r0018).
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>A31902 (F, N)</b>	<b>Encoder 1: SPI-BUS error occurred</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Error when operating the internal SPI bus. Alarm value (r2124, interpret hexadecimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- replace the Sensor Module. - if required, upgrade the firmware in the Sensor Module. - contact Technical Support.
Reaction upon F:	Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A31903 (F, N)</b>	<b>Encoder 1: I2C-BUS error occurred</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Error when operating the internal I2C bus. Alarm value (r2124, interpret hexadecimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- replace the Sensor Module. - if required, upgrade the firmware in the Sensor Module. - contact Technical Support.



## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

<b>F31912</b>	<b>Encoder 1: Device combination is not permissible</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	Vector: ENCODER (IASC/DCBRK, NONE) Infeed: ENCODER (NONE)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The selected device combination is not supported. Fault value (r0949, interpret decimal): 1003: The connected measuring unit cannot be operated with the EnDat 2.2 converter. For instance, the measuring unit has a pulse number/resolution of $2^n$ . 1005: The type of measuring unit (incremental) is not supported by the EnDat 2.2 converter. 1006: The maximum duration of the EnDat transfer (31.25 $\mu$ s) was exceeded. 2001: The set combination of current controller cycle, DP cycle and Safety cycle is not supported by the EnDat 2.2 converter. 2002: The resolution of the linear measuring unit does not match the pole pair width of the linear motor Pole pair width, minimum = $p0422 * 2^{20}$
<b>Remedy:</b>	For fault value = 1003, 1005, 1006: - Use a measuring unit that is permissible. For fault value = 2001: - set a permissible cycle combination (if required, use standard settings). For fault value = 2002: - Use a measuring unit with a lower resolution (p0422).

---

<b>A31915 (F, N)</b>	<b>Encoder 1: Configuration error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The configuration for encoder 1 is incorrect. Alarm value (r2124, interpret decimal): 1: Re-parameterization between fault/alarm is not permissible. 419: When the fine resolution Gx_XIST2 is configured, the encoder identifies a maximum possible absolute position actual value (r0483) that can no longer be represented within 32 bits.
<b>Remedy:</b>	For alarm value = 1: No re-parameterization between fault/alarm. For alarm value = 419: Reduce the fine resolution (p0419) or deactivate the monitoring (p0437.25), if the complete multiturn range is not required.

Reaction upon F: Vector: NONE (ENCODER, IASC/DCBRK)  
Infeed: NONE (OFF1, OFF2)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**F31916 (N, A) Encoder 1: Parameterization fault**  
**Message value:** Parameter: %1, supplementary information: %2  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Sensor Module Encoder 1 **Propagation:** GLOBAL  
**Reaction:** Vector: ENCODER (IASC/DCBRK, NONE, OFF1, OFF2, OFF3, STOP2)  
Infeed: OFF2 (NONE, OFF1)  
**Acknowledge:** IMMEDIATELY  
**Cause:** A parameter of encoder 1 was detected as being incorrect.  
It is possible that the parameterized encoder type does not match the connected encoder.  
The parameter involved can be determined as follows:  
- determine the parameter number using the fault value (r0949).  
- determine the parameter index (p0187).  
Fault value (r0949, interpret decimal):  
Parameter number.  
See also: p0491 (Motor encoder fault response ENCODER)  
**Remedy:** - check whether the connected encoder type matches the encoder that has been parameterized.  
- correct the parameter specified by the fault value (r0949) and p0187.  
Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

**F31916 (N, A) Encoder 1: Parameterization fault**  
**Message value:** Parameter: %1, supplementary information: %2  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** ENC  
**Component:** Sensor Module Encoder 1 **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY  
**Cause:** A parameter of encoder 1 was detected as being incorrect.  
In the case of the ENCODER drive object, the selected encoder type (rotary/linear) might not match the function module setting (r0108.12).  
The parameter involved can be determined as follows:  
- determine the parameter number using the fault value (r0949).  
- determine the parameter index (p0187).  
Fault value (r0949, interpret decimal):  
Parameter number.  
See also: p0491 (Motor encoder fault response ENCODER)  
**Remedy:** - check whether the connected encoder type matches the encoder that has been parameterized.  
- correct the parameter specified by the fault value (r0949) and p0187.  
- if a linear encoder has been selected in parameter p0400/p0404, the "linear encoder" function module has to be activated (r0108.12 = 1)  
- if a rotary encoder has been selected in parameter p0400/p0404, the "linear encoder" function module should not be activated (r0108.12 = 0)  
Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

<b>A31920 (F, N)</b>	<b>Encoder 1: Temperature sensor fault</b>
<b>Message value:</b>	Fault cause: %1, channel number: %2
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	When evaluating the temperature sensor, an error occurred. Fault cause: 1 (= 01 hex): Wire breakage or sensor not connected. KTY: R > 1630 Ohm, PT1000: R > 1720 Ohm 2 (= 02 hex): Measured resistance too low. PTC: R < 20 Ohm, KTY: R < 50 Ohm, PT1000: R < 603 Ohm Additional values: Only for internal Siemens troubleshooting. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = channel number, xx = error cause See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- check that the encoder cable is the correct type and is correctly connected. - check the temperature sensor selection in p0600 to p0603. - replace the Sensor Module (hardware defect or incorrect calibration data).
Reaction upon F:	Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A31930 (N)</b>	<b>Encoder 1: Data logger has saved data</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1 <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	For the activated function "Data logger" (p0437.0 = 1) a fault has occurred with the Sensor Module. This alarm indicates that the diagnostics data corresponding to the fault was saved on the memory card. The diagnostics data is saved in the following folder: /USER/SINAMICS/DATA/SMTRC00.BIN ... /USER/SINAMICS/DATA/SMTRC07.BIN /USER/SINAMICS/DATA/SMTRCIDX.TXT The following information is contained in the TXT file: - Display of the last written BIN file. - Number of write operations that are still possible (from 10000 downwards). Note: Only Siemens can evaluate the BIN files.
<b>Remedy:</b>	Not necessary. The alarm disappears automatically. The data logger is ready to record the next fault case.
Reaction upon N:	NONE
Acknowl. upon N:	NONE

<b>A31940 (F, N)</b>	<b>Encoder 1: Spindle sensor S1 voltage incorrect</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The voltage of analog sensor S1 is outside the permissible range. Alarm value (r2124, interpret decimal): Signal level from sensor S1. Note: A signal level of 500 mV corresponds to the numerical value 500 dec.
<b>Remedy:</b>	- check the clamped tool. - check the tolerance and if required, adapt (p5040). - check the thresholds and if required, adapt (p5041). - check analog sensor S1 and connections.
Reaction upon F:	Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>F31950</b>	<b>Encoder 1: Internal software error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	ENCODER (OFF2)
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	An internal software error has occurred. Fault value (r0949, interpret decimal): The fault value contains information regarding the fault source. Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- if necessary, upgrade the firmware in the Sensor Module to a later version. - contact Technical Support.
<b>A31999 (F, N)</b>	<b>Encoder 1: Unknown alarm</b>
<b>Message value:</b>	New message: %1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	B_INF, ENC, VECTOR_G
<b>Component:</b>	Sensor Module Encoder 1
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A alarm has occurred on the Sensor Module for encoder 1 that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit. Alarm value (r2124, interpret decimal): Alarm number. Note: If required, the significance of this new alarm can be read about in a more recent description of the Control Unit. See also: p0491 (Motor encoder fault response ENCODER)
<b>Remedy:</b>	- replace the firmware on the Sensor Module by an older firmware version (r0148). - upgrade the firmware on the Control Unit (r0018).
Reaction upon F:	Vector: NONE (ENCODER, IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY (POWER ON)

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **F32100 (N, A) Encoder 2: Zero mark distance error**

**Message value:** %1

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** VECTOR\_G

**Component:** Encoder 2

**Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)

**Acknowledge:** PULSE INHIBIT

**Cause:**

The measured zero mark distance does not correspond to the parameterized zero mark distance.

For distance-coded encoders, the zero mark distance is determined from zero marks detected pairs. This means that if a zero mark is missing, depending on the pair generation, this cannot result in a fault and also has no effect in the system.

The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder).

Fault value (r0949, interpret decimal):

Last measured zero mark distance in increments (4 increments = 1 encoder pulse).

The sign designates the direction of motion when detecting the zero mark distance.

**Remedy:**

- check that the encoder cables are routed in compliance with EMC.

- check the plug connections.

- check the encoder type (encoder with equidistant zero marks).

- adapt the parameter for the distance between zero marks (p0424, p0425).

- if message output above speed threshold, reduce filter time if necessary (p0438).

- replace the encoder or encoder cable.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F32101 (N, A) Encoder 2: Zero mark failed**

**Message value:** %1

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** VECTOR\_G

**Component:** Encoder 2

**Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)

**Acknowledge:** PULSE INHIBIT

**Cause:**

The 1.5 x parameterized zero mark distance was exceeded.

The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder).

Fault value (r0949, interpret decimal):

Number of increments after POWER ON or since the last zero mark that was detected (4 increments = 1 encoder pulse).

**Remedy:**

- check that the encoder cables are routed in compliance with EMC.

- check the plug connections.

- check the encoder type (encoder with equidistant zero marks).

- adapt the parameter for the clearance between zero marks (p0425).

- if message output above speed threshold, reduce filter time if necessary (p0438).

- when p0437.1 is active, check p4686.

- replace the encoder or encoder cable.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

<b>F32103 (N, A)</b>	<b>Encoder 2: Amplitude error track R</b>
<b>Message value:</b>	R track: %1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	<p>The amplitude of the reference track signal (track R) does not lie within the tolerance bandwidth for encoder 2. The fault can be initiated when the unipolar voltage level is exceeded (RP/RN) or if the differential amplitude is undershot.</p> <p>Fault value (r0949, interpret hexadecimal):            yyyxxxx hex: yyyy = 0, xxxx = Signal level, track R (16 bits with sign)            The response thresholds of the unipolar signal levels of the encoder are between &lt; 1400 mV and &gt; 3500 mV.            The response threshold for the differential signal level of the encoder is &lt; -1600 mV.            A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec.</p> <p>Note:            The analog value of the amplitude error is not measured at the same time with the hardware fault output by the Sensor Module.            The fault value can only be represented between -32768 ... 32767 dec (-770 ... 770 mV).            The signal level is not evaluated unless the following conditions are satisfied:</p> <ul style="list-style-type: none"> <li>- Sensor Module properties available (r0459.31 = 1).</li> <li>- monitoring active (p0437.31 = 1).</li> </ul>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the speed range; frequency characteristic (amplitude characteristic) of the measuring equipment might not be sufficient for the speed range</li> <li>- check that the encoder cables and shielding are routed in compliance with EMC.</li> <li>- check the plug connections and contacts of the encoder cable.</li> <li>- check the encoder type (encoder with zero marks).</li> <li>- check whether the zero mark is connected and the signal cables RP and RN have been connected correctly.</li> <li>- replace the encoder cable.</li> <li>- if the coding disk is soiled or the lighting aged, replace the encoder.</li> </ul>
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32110 (N, A)</b>	<b>Encoder 2: Serial communications error</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	<p>Serial communication protocol transfer error between the encoder and evaluation module.</p> <p>Fault value (r0949, interpret binary):</p> <ul style="list-style-type: none"> <li>Bit 0: Alarm bit in the position protocol.</li> <li>Bit 1: Incorrect quiescent level on the data line.</li> <li>Bit 2: Encoder does not respond (does not supply a start bit within 50 ms).</li> <li>Bit 3: CRC error: The checksum in the protocol from the encoder does not match the data.</li> <li>Bit 4: Encoder acknowledgment error: The encoder incorrectly understood the task (request) or cannot execute it.</li> <li>Bit 5: Internal error in the serial driver: An illegal mode command was requested.</li> <li>Bit 6: Timeout when cyclically reading.</li> <li>Bit 7: Timeout for the register communication.</li> <li>Bit 8: Protocol is too long (e.g. &gt; 64 bits).</li> <li>Bit 9: Receive buffer overflow.</li> <li>Bit 10: Frame error when reading twice.</li> </ul>

## 4 Faults and alarms

### 4.2 List of faults and alarms

- Bit 11: Parity error.
- Bit 12: Data line signal level error during the monoflop time.
- Bit 13: Data line incorrect.
- Bit 14: Fault for the register communication.
- Bit 15: Internal communication error.

Note:

For an EnDat 2.2 encoder, the significance of the fault value for F3x135 (x = 1, 2, 3) is described.

**Remedy:**

For fault value, bit 0 = 1:

- Enc defect F31111 may provide additional details.

For fault value, bit 1 = 1:

- incorrect encoder type / replace the encoder or encoder cable.

For fault value, bit 2 = 1:

- incorrect encoder type / replace the encoder or encoder cable.

For fault value, bit 3 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable.

For fault value, bit 4 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable, replace the Sensor Module.

For fault value, bit 5 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable, replace the Sensor Module.

For fault value, bit 6 = 1:

- Update Sensor Module firmware.

For fault value, bit 7 = 1:

- incorrect encoder type / replace the encoder or encoder cable.

For fault value, bit 8 = 1:

- check parameterization (p0429.2).

For fault value, bit 9 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable, replace the Sensor Module.

For fault value, bit 10 = 1:

- check parameterization (p0429.2, p0449).

For fault value, bit 11 = 1:

- check parameterization (p0436).

For fault value, bit 12 = 1:

- check parameterization (p0429.6).

For fault value, bit 13 = 1:

- check data line.

For fault value, bit 14 = 1:

- incorrect encoder type / replace the encoder or encoder cable.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F32111 (N, A)**

#### **Encoder 2: Absolute encoder internal fault**

**Message value:** Fault cause: %1 bin, additional information: %2

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** VECTOR\_G

**Component:** Encoder 2

**Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)

**Acknowledge:** PULSE INHIBIT

**Cause:** The absolute encoder fault word supplies fault bits that have been set.

For p0404.8 = 0, the following applies:

Fault value for internal Siemens troubleshooting.

For p0404.8 = 1, the following applies:

Fault value (r0949, interpret binary):

yyyyxxxx hex: yyyy = supplementary information, xxxx = fault cause

yyyy = 0:  
 Bit 0: Lighting system failed.  
 Bit 1: Signal amplitude too low.  
 Bit 2: Position value incorrect.  
 Bit 3: Encoder power supply overvoltage condition.  
 Bit 4: Encoder power supply undervoltage condition.  
 Bit 5: Encoder power supply overcurrent condition.  
 Bit 6: The battery must be changed.

**Remedy:**

For yyyy = 0:  
 For fault value, bit 0 = 1:  
 Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor.  
 For fault value, bit 1 = 1:  
 Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor.  
 For fault value, bit 2 = 1:  
 Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor.  
 For fault value, bit 3 = 1:  
 5 V power supply voltage fault.  
 When using an SMC: Check the plug-in cable between the encoder and SMC or replace the SMC.  
 When a motor encoder with a direct DRIVE-CLiQ connection is used: Replace the motor.  
 For fault value, bit 4 = 1:  
 5 V power supply voltage fault.  
 When using an SMC: Check the plug-in cable between the encoder and SMC or replace the SMC.  
 When using a motor with DRIVE-CLiQ: Replace the motor.  
 For fault value, bit 5 = 1:  
 Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor.  
 For fault value, bit 6 = 1:  
 The battery must be changed (only for encoders with battery back-up).  
 For yyyy = 1:  
 Encoder is defective. Replace encoder.

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

**F32115 (N, A) Encoder 2: Amplitude error track A or B ( $A^2 + B^2$ )**

**Message value:** A track: %1, B-track: %2  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 2 **Propagation:** LOCAL  
**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** The amplitude (root of  $A^2 + B^2$ ) for encoder 2 exceeds the permissible tolerance.  
 Fault value (r0949, interpret hexadecimal):  
 yyyyxxxx hex:  
 yyyy = Signal level, track B (16 bits with sign).  
 xxxx = Signal level, track A (16 bits with sign).  
 The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %).  
 The response thresholds are < 170 mV (observe the frequency response of the encoder) and > 750 mV.  
 A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec.  
 Note for Sensor Modules for resolvers (e.g. SMC10):  
 The nominal signal level is at 2900 mV (2.0 Vrms). The response thresholds are < 1070 mV and > 3582 mV.  
 A signal level of 2900 mV peak value corresponds to the numerical value 6666 hex = 26214 dec.

## 4 Faults and alarms

### 4.2 List of faults and alarms

Note:

The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module.

**Remedy:**

- check that the encoder cables and shielding are routed in compliance with EMC.
- check the plug connections.
- replace the encoder or encoder cable.
- check the Sensor Module (e.g. contacts).

The following applies to measuring systems without their own bearing system:

- adjust the scanning head and check the bearing system of the measuring wheel.

The following applies for measuring systems with their own bearing system:

- ensure that the encoder housing is not subject to any axial force.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### F32116 (N, A)

#### Encoder 2: Amplitude error monitoring track A + B

**Message value:**

A track: %1, B-track: %2

**Message class:**

Actual position/speed value incorrect or not available (11)

**Drive object:**

VECTOR\_G

**Component:**

Encoder 2

**Propagation:**

LOCAL

**Reaction:**

OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)

**Acknowledge:**

IMMEDIATELY

**Cause:**

The amplitude of the rectified encoder signals A and B and the amplitude from the roots of  $A^2 + B^2$  for encoder 2 are not within the tolerance bandwidth.

Fault value (r0949, interpret hexadecimal):

yyyyxxxx hex:

yyyy = Signal level, track B (16 bits with sign).

xxxx = Signal level, track A (16 bits with sign).

The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %).

The response thresholds are < 130 mV (observe the frequency response of the encoder) and > 955 mV.

A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec.

Note:

The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module.

**Remedy:**

- check that the encoder cables and shielding are routed in compliance with EMC.
- check the plug connections.
- replace the encoder or encoder cable.
- check the Sensor Module (e.g. contacts).

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### F32117 (N, A)

#### Encoder 2: Inversion error signals A/B/R

**Message value:**

Fault cause: %1 bin

**Message class:**

Actual position/speed value incorrect or not available (11)

**Drive object:**

VECTOR\_G

**Component:**

Encoder 2

**Propagation:**

LOCAL

**Reaction:**

OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)

**Acknowledge:**

IMMEDIATELY

**Cause:**

For a square-wave encoder (bipolar, double ended) signals A\*, B\* and R\* are not inverted with respect to signals A, B and R.

Fault value (r0949, interpret binary):

Bits 0 ... 15: Only for internal Siemens troubleshooting.

Bit 16: Error track A.



## 4 Faults and alarms

### 4.2 List of faults and alarms

Bit 7: Hardware fault at the EnDat connection of the converter.

Note:

If the encoder cables 6FX2002-2EQ00-.... and 6FX2002-2CH00-.... are interchanged, this can result in the encoder being destroyed because the pins of the operating voltage are reversed.

**Remedy:**

For fault value, bit 0 = 1:

- correct encoder cable connected?
- check the plug connections of the encoder cable.
- SMC30: Check the parameterization (p0404.22).

For fault value, bit 1 = 1:

- correct encoder cable connected?
- replace the encoder or encoder cable.

For fault value, bit 2 = 1:

- correct encoder cable connected?
- replace the encoder or encoder cable.

For fault value, bit 3 = 1:

- correct encoder cable connected?
- replace the encoder or encoder cable.

For fault value, bit 5 = 1:

- Measuring unit correctly connected at the converter?
- Replace the measuring unit or the cable to the measuring unit.

For fault value, bit 6, 7 = 1:

- Replace the defective EnDat 2.2 converter.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F32121 (N, A) Encoder 2: Coarse position error**

**Message value:** -

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** VECTOR\_G

**Component:** Encoder 2

**Propagation:** LOCAL

**Reaction:** OFF1 (NONE, OFF2, OFF3)

**Acknowledge:** PULSE INHIBIT

**Cause:** For the actual value sensing, an error was detected on the module.

As a result of this error, it must be assumed that the actual value sensing supplies an incorrect coarse position.

**Remedy:** Replace the motor with DRIVE-CLiQ or the appropriate Sensor Module.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F32122 Encoder 2: Internal power supply voltage faulty**

**Message value:** %1

**Message class:** Supply voltage fault (undervoltage) (3)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 2

**Propagation:** GLOBAL

**Reaction:** OFF1

**Acknowledge:** IMMEDIATELY

**Cause:** Fault in internal reference voltage of ASICs for encoder 2.

Fault value (r0949, interpret decimal):

- 1: Reference voltage error.
- 2: Internal undervoltage.
- 3: Internal overvoltage.

**Remedy:** Replace the motor with DRIVE-CLiQ or the appropriate Sensor Module.

---

<b>F32123 (N, A)</b>	<b>Encoder 2: Signal level A/B unipolar outside tolerance</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The unipolar level (AP/AN or BP/BN) for encoder 2 is outside the permissible tolerance. Fault value (r0949, interpret binary): Bit 0 = 1: Either AP or AN outside the tolerance. Bit 16 = 1: Either BP or BN outside the tolerance. The unipolar nominal signal level of the encoder must lie in the range 2500 mV +/- 500 mV. The response thresholds are < 1700 mV and > 3300 mV. Note: The signal level is not evaluated unless the following conditions are satisfied: - Sensor Module properties available (r0459.31 = 1). - monitoring active (p0437.31 = 1).
<b>Remedy:</b>	- make sure that the encoder cables and shielding are installed in an EMC-compliant manner. - check the plug connections and contacts of the encoder cable. - check the short-circuit of a signal cable with mass or the operating voltage. - replace the encoder cable.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32125 (N, A)</b>	<b>Encoder 2: Amplitude error track A or B overcontrolled</b>
<b>Message value:</b>	A track: %1, B-track: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The amplitude of track A or B for encoder 2 exceeds the permissible tolerance band. Fault value (r0949, interpret hexadecimal): yyyyxxxx hex: yyyy = Signal level, track B (16 bits with sign). xxxx = Signal level, track A (16 bits with sign). The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %). The response threshold is > 750 mV. This fault also occurs if the analog/digital converter is overcontrolled. A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec. Note for Sensor Modules for resolvers (e.g. SMC10): The nominal signal level is at 2900 mV (2.0 Vrms). The response threshold is > 3582 mV. A signal level of 2900 mV peak value corresponds to the numerical value 6666 hex = 26214 dec. Note: The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module.
<b>Remedy:</b>	- check that the encoder cables and shielding are routed in compliance with EMC. - replace the encoder or encoder cable.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32126 (N, A)</b>	<b>Encoder 2: Amplitude AB too high</b>
<b>Message value:</b>	Amplitude: %1, Angle: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2 <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The amplitude (root of $A^2 + B^2$ or $ A  +  B $ ) for encoder 2 exceeds the permissible tolerance. Fault value (r0949, interpret hexadecimal): yyyyxxxx hex: yyyy = Angle xxxx = amplitude, i.e. root of $A^2 + B^2$ (16 bits without sign) The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %). The response threshold for ( $ A  +  B $ ) is $> 1120$ mV or the root of $(A^2 + B^2) > 955$ mV. A signal level of 500 mV peak value corresponds to the numerical value of 299A hex = 10650 dec. The angle 0 ... FFFF hex corresponds to 0 ... 360 degrees of the fine position. Zero degrees is present at the negative zero crossover of track B. Note: The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module.
<b>Remedy:</b>	- check that the encoder cables and shielding are routed in compliance with EMC. - replace the encoder or encoder cable.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32129 (N, A)</b>	<b>Encoder 2: Position difference hall sensor/track C/D and A/B too large</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2 <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The error for track C/D is greater than $\pm 15^\circ$ mechanical or $\pm 60^\circ$ electrical or the error for the Hall signals is greater than $\pm 60^\circ$ electrical. One period of track C/D corresponds to $360^\circ$ mechanical. One period of the Hall signal corresponds to $360^\circ$ electrical. The monitoring responds if, for example, Hall sensors are connected as equivalent for the C/D tracks with the incorrect rotational sense or supply values that are not accurate enough. After the fine synchronization using one reference mark or 2 reference marks for distance-coded encoders, this fault is no longer initiated, but instead, Alarm A32429. Fault value (r0949, interpret decimal): For track C/D, the following applies: Measured deviation as mechanical angle (16 bits with sign, 182 dec corresponds to $1^\circ$ ). For Hall signals, the following applies: Measured deviation as electrical angle (16 bits with sign, 182 dec corresponds to $1^\circ$ ).
<b>Remedy:</b>	- track C or D not connected. - correct the direction of rotation of the Hall sensor possibly connected as equivalent for track C/D. - check that the encoder cables are routed in compliance with EMC. - check the adjustment of the Hall sensor.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

<b>F32130 (N, A)</b>	<b>Encoder 2: Zero mark and position error from the coarse synchronization</b>
<b>Message value:</b>	Angular deviation, electrical: %1, angle, mechanical: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	<p>After initializing the pole position using track C/D, Hall signals or pole position identification routine, the zero mark was detected outside the permissible range. For distance-coded encoders, the test is carried out after passing 2 zero marks. Fine synchronization was not carried out.</p> <p>When initializing via track C/D (p0404) then it is checked whether the zero mark occurs in an angular range of +/-18 ° mechanical.</p> <p>When initializing via Hall sensors (p0404) or pole position identification (p1982) it is checked whether the zero mark occurs in an angular range of +/-60 ° electrical.</p> <p>Fault value (r0949, interpret hexadecimal):          yyyxxxx hex          yyyy: Determined mechanical zero mark position (can only be used for track C/D).          xxxx: Deviation of the zero mark from the expected position as electrical angle.          Scaling: 32768 dec = 180 °</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check that the encoder cables are routed in compliance with EMC.</li> <li>- check the plug connections.</li> <li>- if the Hall sensor is used as an equivalent for track C/D, check the connection.</li> <li>- check the connection of track C or D.</li> <li>- replace the encoder or encoder cable.</li> </ul>
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>F32131 (N, A)</b>	<b>Encoder 2: Deviation position incremental/absolute too large</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	<p>Absolute encoder:</p> <p>When cyclically reading the absolute position, an excessively high difference to the incremental position was detected. The absolute position that was read is rejected.</p> <p>Limit value for the deviation:</p> <ul style="list-style-type: none"> <li>- EnDat encoder: Is supplied from the encoder and is a minimum of 2 quadrants (e.g. EQI 1325 &gt; 2 quadrants, EQN 1325 &gt; 50 quadrants).</li> <li>- other encoders: 15 pulses = 60 quadrants.</li> </ul> <p>Incremental encoder:</p> <p>When the zero pulse is passed, a deviation in the incremental position was detected.</p> <p>For equidistant zero marks, the following applies:</p> <ul style="list-style-type: none"> <li>- the first zero mark passed supplies the reference point for all subsequent checks. The other zero marks must have n times the distance referred to the first zero mark.</li> </ul> <p>For distance-coded zero marks, the following applies:</p> <ul style="list-style-type: none"> <li>- the first zero mark pair supplies the reference point for all subsequent checks. The other zero mark pairs must have the expected distance to the first zero mark pair.</li> </ul> <p>Fault value (r0949, interpret decimal):          Deviation in quadrants (1 pulse = 4 quadrants).</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check that the encoder cables are routed in compliance with EMC.</li> <li>- check the plug connections.</li> <li>- replace the encoder or encoder cable.</li> </ul>



**Note:**

An EnDat 2.2 encoder may only be removed and inserted in the "Park" state.

If an EnDat 2.2 encoder was removed when not in the "Park" state, then after inserting the encoder, a POWER ON (switch-off/switch-on) is necessary to acknowledge the fault.

<b>F32136</b>	<b>Encoder 2: Error when determining multiturn information</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	<p>The encoder supplies status information bit by bit in an internal status/fault word.</p> <p>Some of these bits cause this fault to be triggered. Other bits are status displays. The status/fault word is displayed in the fault value.</p> <p>Note regarding the bit designation: The first designation is valid for DRIVE-CLiQ encoders, the second for EnDat 2.2 encoders.</p> <p>Fault value (r0949, interpret binary):</p> <p>Bit 0: F1 (safety status display). Bit 1: F2 (safety status display). Bit 2: Reserved (lighting). Bit 3: Reserved (signal amplitude). Bit 4: Reserved (position value). Bit 5: Reserved (overvoltage). Bit 6: Reserved (undervoltage)/hardware fault EnDat supply (--&gt; F3x110, x = 1, 2, 3). Bit 7: Reserved (overcurrent)/EnDat encoder withdrawn when not in the parked state (--&gt; F3x110, x = 1, 2, 3). Bit 8: Reserved (battery)/overcurrent EnDat supply (--&gt; F3x110, x = 1, 2, 3). Bit 9: Reserved/overvoltage EnDat supply (--&gt; F3x110, x = 1, 2, 3). Bit 11: Reserved/internal communication error (--&gt; F3x110, x = 1, 2, 3). Bit 12: Reserved/internal communication error (--&gt; F3x110, x = 1, 2, 3). Bit 13: Reserved/internal communication error (--&gt; F3x110, x = 1, 2, 3). Bit 14: Reserved/internal communication error (--&gt; F3x110, x = 1, 2, 3). Bit 15: Internal communication error (--&gt; F3x110, x = 1, 2, 3). Bit 16: Lighting (--&gt; F3x135, x = 1, 2, 3). Bit 17: Signal amplitude (--&gt; F3x135, x = 1, 2, 3). Bit 18: Singleturn position 1 (--&gt; F3x135, x = 1, 2, 3). Bit 19: Overvoltage (--&gt; F3x135, x = 1, 2, 3). Bit 20: Undervoltage (--&gt; F3x135, x = 1, 2, 3). Bit 21: Overcurrent (--&gt; F3x135, x = 1, 2, 3). Bit 22: Temperature exceeded (--&gt; F3x405, x = 1, 2, 3). Bit 23: Singleturn position 2 (safety status display). Bit 24: Singleturn system (--&gt; F3x135, x = 1, 2, 3). Bit 25: Singleturn power down (--&gt; F3x135, x = 1, 2, 3). Bit 26: Multiturn position 1 (--&gt; F3x136, x = 1, 2, 3). Bit 27: Multiturn position 2 (--&gt; F3x136, x = 1, 2, 3). Bit 28: Multiturn system (--&gt; F3x136, x = 1, 2, 3). Bit 29: Multiturn power down (--&gt; F3x136, x = 1, 2, 3). Bit 30: Multiturn overflow/underflow (--&gt; F3x136, x = 1, 2, 3). Bit 31: Multiturn battery (reserved).</p>
<b>Remedy:</b>	<p>- determine the detailed cause of the fault using the fault value.</p> <p>- replace the encoder if necessary.</p> <p>Note: An EnDat 2.2 encoder may only be removed and inserted in the "Park" state. If an EnDat 2.2 encoder was removed when not in the "Park" state, then after inserting the encoder, a POWER ON (switch-off/switch-on) is necessary to acknowledge the fault.</p>

---

<b>F32137</b>	<b>Encoder 2: Internal fault when determining the position</b>		
<b>Message value:</b>	Fault cause: %1 bin		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 2	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)		
<b>Acknowledge:</b>	PULSE INHIBIT		
<b>Cause:</b>	<p>A position determination fault has occurred in the DRIVE-CLiQ encoder.</p> <p>Fault value (r0949, interpret binary):</p> <p>yyxxxxxx hex: yy = encoder version, xxxxxx = bit coding of the fault cause</p> <p>For yy = 08 hex (bit 27 = 1), the following bit definition applies:</p> <p>Bit 1: Signal monitoring (sin/cos).</p> <p>Bit 8: F1 (safety status display) fault position word 1.</p> <p>Bit 9: F2 (safety status display) fault position word 2.</p> <p>Bit 16: LED monitoring iC-LG (opto ASIC).</p> <p>Bit 17: Fault in the multiturn.</p> <p>Bit 23: Temperature outside the limit values.</p> <p>Note:</p> <p>For an encoder version that is not described here, please contact the encoder manufacturer for more detailed information on the bit coding.</p>		
<b>Remedy:</b>	<p>- determine the detailed cause of the fault using the fault value.</p> <p>- if required, replace the DRIVE-CLiQ encoder.</p>		

---

<b>F32138</b>	<b>Encoder 2: Internal error when determining multiturn information</b>		
<b>Message value:</b>	Fault cause: %1 bin		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 2	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)		
<b>Acknowledge:</b>	PULSE INHIBIT		
<b>Cause:</b>	<p>A position determination fault has occurred in the DRIVE-CLiQ encoder.</p> <p>Fault value (r0949, interpret binary):</p> <p>yyxxxxxx hex: yy = encoder version, xxxxxx = bit coding of the fault cause</p> <p>For yy = 08 hex (bit 27 = 1), the following bit definition applies:</p> <p>Bit 1: Signal monitoring (sin/cos).</p> <p>Bit 8: F1 (safety status display) fault position word 1.</p> <p>Bit 9: F2 (safety status display) fault position word 2.</p> <p>Bit 16: LED monitoring iC-LG (opto ASIC).</p> <p>Bit 17: Fault in the multiturn.</p> <p>Bit 23: Temperature outside the limit values.</p> <p>Note:</p> <p>For an encoder version that is not described here, please contact the encoder manufacturer for more detailed information on the bit coding.</p>		
<b>Remedy:</b>	<p>- determine the detailed cause of the fault using the fault value.</p> <p>- if required, replace the DRIVE-CLiQ encoder.</p>		

---

<b>F32142 (N, A)</b>	<b>Encoder 2: Battery voltage fault</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 2	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	When switched-off, the encoder uses a battery to back up the multiturn information. The battery voltage is no longer sufficient to check the multiturn information.		

**Remedy:** Replace battery.  
**Reaction upon N:** NONE  
**Acknowl. upon N:** NONE  
**Reaction upon A:** NONE  
**Acknowl. upon A:** NONE

---

**F32150 (N, A) Encoder 2: Initialization error**  
**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** Sensor Module Encoder 2 **Propagation:** LOCAL  
**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** Encoder functionality selected in p0404 is not operating correctly.  
 Fault value (r0949, interpret hexadecimal):  
 Encoder malfunction.  
 The bit assignment corresponds to that of p0404 (e.g. bit 5 set: Error track C/D).  
**Remedy:**  
 - check that p0404 is correctly set.  
 - check the encoder type used (incremental/absolute) and for SMCxx, the encoder cable.  
 - if relevant, note additional fault messages that describe the fault in detail.  
**Reaction upon N:** NONE  
**Acknowl. upon N:** NONE  
**Reaction upon A:** NONE  
**Acknowl. upon A:** NONE

---

**F32151 (N, A) Encoder 2: Encoder speed for initialization AB too high**  
**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** Sensor Module Encoder 2 **Propagation:** LOCAL  
**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** The encoder speed is too high while initializing the Sensor Module.  
**Remedy:** Reduce the speed of the encoder accordingly during initialization.  
 If necessary, deactivate monitoring (p0437.29).  
 See also: p0437 (Sensor Module configuration extended)  
**Reaction upon N:** NONE  
**Acknowl. upon N:** NONE  
**Reaction upon A:** NONE  
**Acknowl. upon A:** NONE

---

**F32152 (N, A) Encoder 2: Maximum input frequency exceeded**  
**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** Sensor Module Encoder 2 **Propagation:** LOCAL  
**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** The maximum input frequency of the encoder evaluation has been exceeded.  
 Fault value (r0949, interpret decimal):  
 Actual input frequency in Hz.  
 See also: p0408 (Rotary encoder pulse number)  
**Remedy:**  
 - reduce the speed.  
 - Use an encoder with a lower pulse number (p0408).



---

<b>F32161 (N, A)</b>	<b>Encoder 2: Analog sensor channel B failed</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The input voltage of the analog sensor is outside the permissible limits. Fault value (r0949, interpret decimal): 1: Input voltage outside detectable measuring range. 2: Input voltage outside the selected measuring range (p4675). 3: The absolute value of the input voltage has exceeded the range limit (p4676).
<b>Remedy:</b>	For fault value = 1: - check the output voltage of the analog sensor. For fault value = 2: - check the voltage setting for each encoder period (p4675). For fault value = 3: - check the range limit setting and increase it if necessary (p4676).
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32163 (N, A)</b>	<b>Encoder 2: Analog sensor position value exceeds limit value</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The position value has exceeded the permissible range of -0.5 ... +0.5. Fault value (r0949, interpret decimal): 1: Position value from the LVDT sensor. 2: Position value from the encoder characteristic.
<b>Remedy:</b>	For fault value = 1: - check the LVDT ratio (p4678). - check the reference signal connection at track B. For fault value = 2: - check the coefficients of the characteristic (p4663 ... p4666).
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>A32400 (F, N)</b>	<b>Encoder 2: Alarm threshold zero mark distance error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The measured zero mark distance does not correspond to the parameterized zero mark distance. For distance-coded encoders, the zero mark distance is determined from zero marks detected pairs. This means that if a zero mark is missing, depending on the pair generation, this cannot result in a fault and also has no effect in the system.

## 4 Faults and alarms

### 4.2 List of faults and alarms

The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder).

Alarm value (r2124, interpret decimal):

Last measured zero mark distance in increments (4 increments = 1 encoder pulse).

The sign designates the direction of motion when detecting the zero mark distance.

**Remedy:**

- check that the encoder cables are routed in compliance with EMC.
- check the plug connections.
- check the encoder type (encoder with equidistant zero marks).
- adapt the parameter for the distance between zero marks (p0424, p0425).
- replace the encoder or encoder cable.

Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)

Acknowl. upon F: IMMEDIATELY

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **A32401 (F, N) Encoder 2: Alarm threshold zero mark failed**

**Message value:** %1

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** VECTOR\_G

**Component:** Encoder 2

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:**

The 1.5 x parameterized zero mark distance was exceeded.

The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder).

Alarm value (r2124, interpret decimal):

Number of increments after POWER ON or since the last zero mark that was detected (4 increments = 1 encoder pulse).

**Remedy:**

- check that the encoder cables are routed in compliance with EMC.
- check the plug connections.
- check the encoder type (encoder with equidistant zero marks).
- adapt the parameter for the clearance between zero marks (p0425).
- replace the encoder or encoder cable.

Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)

Acknowl. upon F: IMMEDIATELY

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **F32405 (N, A) Encoder 2: Temperature in the encoder evaluation inadmissible**

**Message value:** %1

**Message class:** Overtemperature of the electronic components (6)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 2

**Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:**

The encoder evaluation for a motor with DRIVE-CLiQ has detected an inadmissible temperature.

The fault threshold is 125 °C.

Fault value (r0949, interpret decimal):

Measured board/module temperature in 0.1 °C.

**Remedy:**

Reduce the ambient temperature for the DRIVE-CLiQ connection of the motor.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

<b>A32407 (F, N)</b>	<b>Encoder 2: Function limit reached</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The encoder has reached one of its function limits. A service is recommended. Alarm value (r2124, interpret decimal): 1: Incremental signals 3: Absolute track 4: Code connection
<b>Remedy:</b>	Perform service. Replace the encoder if necessary. Note: The actual functional reserve of an encoder can be displayed via r4651. See also: p4650 (Encoder functional reserve component number), r4651 (Encoder functional reserve)
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A32410 (F, N)</b>	<b>Encoder 2: Serial communications</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Serial communication protocol transfer error between the encoder and evaluation module. Alarm value (r2124, interpret binary): Bit 0: Alarm bit in the position protocol. Bit 1: Incorrect quiescent level on the data line. Bit 2: Encoder does not respond (does not supply a start bit within 50 ms). Bit 3: CRC error: The checksum in the protocol from the encoder does not match the data. Bit 4: Encoder acknowledgment error: The encoder incorrectly understood the task (request) or cannot execute it. Bit 5: Internal error in the serial driver: An illegal mode command was requested. Bit 6: Timeout when cyclically reading. Bit 8: Protocol is too long (e.g. > 64 bits). Bit 9: Receive buffer overflow. Bit 10: Frame error when reading twice. Bit 11: Parity error. Bit 12: Data line signal level error during the monoflop time.
<b>Remedy:</b>	- check that the encoder cables are routed in compliance with EMC. - check the plug connections. - replace encoder.
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A32411 (F, N)</b>	<b>Encoder 2: Absolute encoder signals internal alarms</b>		
<b>Message value:</b>	Fault cause: %1 bin, additional information: %2		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 2	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>The absolute encoder fault word includes alarm bits that have been set.</p> <p>Alarm value (r2124, interpret binary):</p> <p>yyyyxxxx hex: yyyy = supplementary information, xxxx = fault cause</p> <p>yyyy = 0:</p> <p>Bit 0: Frequency exceeded (speed too high).</p> <p>Bit 1: Temperature exceeded.</p> <p>Bit 2: Control reserve, lighting system exceeded.</p> <p>Bit 3: Battery discharged.</p> <p>Bit 4: Reference point passed.</p> <p>yyyy = 1:</p> <p>Bit 0: Signal amplitude outside the control range.</p> <p>Bit 1: Error multiturn interface</p> <p>Bit 2: Internal data error (singleturn/multiturn not with single steps).</p> <p>Bit 3: Error EEPROM interface.</p> <p>Bit 4: SAR converter error.</p> <p>Bit 5: Fault for the register data transfer.</p> <p>Bit 6: Internal error identified at the error pin (nErr).</p> <p>Bit 7: Temperature threshold exceeded or fallen below.</p>		
<b>Remedy:</b>	Replace encoder.		
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)		
Acknowl. upon F:	IMMEDIATELY		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A32412 (F, N)</b>	<b>Encoder 2: Error bit set in the serial protocol</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 2	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>The encoder sends a set error bit via the serial protocol.</p> <p>Alarm value (r2124, interpret binary):</p> <p>Bit 0: Fault bit in the position protocol.</p> <p>Bit 1: Alarm bit in the position protocol.</p>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- carry out a POWER ON (switch-off/switch-on) for all components.</li> <li>- check that the encoder cables are routed in compliance with EMC.</li> <li>- check the plug connections.</li> <li>- replace encoder.</li> </ul>		
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)		
Acknowl. upon F:	IMMEDIATELY		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A32414 (F, N)</b>	<b>Encoder 2: Amplitude error track C or D (C<sup>2</sup> + D<sup>2</sup>)</b>
<b>Message value:</b>	C track: %1, D track: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The amplitude (C <sup>2</sup> + D <sup>2</sup> ) of track C or D of the encoder or from the Hall signals, is not within the tolerance bandwidth. Alarm value (r2124, interpret hexadecimal): yyyyxxxx hex: yyyy = Signal level, track D (16 bits with sign). xxxx = Signal level, track C (16 bits with sign). The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %). The response thresholds are < 230 mV (observe the frequency response of the encoder) and > 750 mV. A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec. Note: If the amplitude is not within the tolerance bandwidth, then it cannot be used to initialize the start position.
<b>Remedy:</b>	- check that the encoder cables are routed in compliance with EMC. - check the plug connections. - replace the encoder or encoder cable. - check the Sensor Module (e.g. contacts). - check the Hall sensor box.
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>N32415 (F, A)</b>	<b>Encoder 2: Amplitude alarm track A or B (A<sup>2</sup> + B<sup>2</sup>)</b>
<b>Message value:</b>	Amplitude: %1, Angle: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The amplitude (root of A <sup>2</sup> + B <sup>2</sup> ) for encoder 2 exceeds the permissible tolerance. Alarm value (r2124, interpret hexadecimal): yyyyxxxx hex: yyyy = Angle xxxx = amplitude, i.e. root of A <sup>2</sup> + B <sup>2</sup> (16 bits without sign) The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %). The response threshold is < 230 mV (observe the frequency response of the encoder). A signal level of 500 mV peak value corresponds to the numerical value 299A hex = 10650 dec. The angle 0 ... FFFF hex corresponds to 0 ... 360 degrees of the fine position. Zero degrees is present at the negative zero crossover of track B. Note for Sensor Modules for resolvers (e.g. SMC10): The nominal signal level is at 2900 mV (2.0 Vrms). The response threshold is < 1414 mV (1.0 Vrms). A signal level of 2900 mV peak value corresponds to the numerical value 3333 hex = 13107 dec. Note: The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module.
<b>Remedy:</b>	- check the speed range, frequency characteristic (amplitude characteristic) of the measuring equipment is not sufficient for the speed range. - check that the encoder cables and shielding are routed in compliance with EMC. - check the plug connections.

## 4 Faults and alarms

### 4.2 List of faults and alarms

- replace the encoder or encoder cable.  
- check the Sensor Module (e.g. contacts).  
- if the coding disk is soiled or the lighting aged, replace the encoder.

Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

#### **A32418 (F, N) Encoder 2: Speed difference per sampling rate exceeded**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 2 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** For an HTL/TTL encoder, the speed difference between two sampling cycles has exceeded the value in p0492. The change to the averaged speed actual value - if applicable - is monitored in the current controller sampling time. Alarm value (r2124, interpret decimal):  
Only for internal Siemens troubleshooting.  
See also: p0492

**Remedy:**

- check the tachometer feeder cable for interruptions.
- check the grounding of the tachometer shielding.
- if required, increase the setting of p0492.

Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **A32419 (F, N) Encoder 2: Track A or B outside tolerance**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 2 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The amplitude/phase/offset correction for track A or B is at the limit.  
Amplitude error correction: Amplitude B / Amplitude A = 0.78 ... 1.27  
Phase: <84 degrees or >96 degrees  
SMC20: Offset correction: +/-140 mV  
SMC10: Offset correction: +/-650 mV  
Alarm value (r2124, interpret hexadecimal):  
xxxx1: Minimum of the offset correction, track B  
xxxx2: Maximum of the offset correction, track B  
xxx1x: Minimum of the offset correction, track A  
xxx2x: Maximum of the offset correction, track A  
xx1xx: Minimum of the amplitude correction, track B/A  
xx2xx: Maximum of the amplitude correction, track B/A  
x1xxx: Minimum of the phase error correction  
x2xxx: Maximum of the phase error correction  
1xxxx: Minimum of the cubic correction  
2xxxx: Maximum of the cubic correction

**Remedy:**

- check mechanical mounting tolerances for encoders without their own bearings (e.g. toothed-wheel encoders).
- check the plug connections (also the transition resistance).
- check the encoder signals.
- replace the encoder or encoder cable.

Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
 Acknowl. upon F: IMMEDIATELY  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE

**A32421 (F, N) Encoder 2: Coarse position error**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 2 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** For the actual value sensing, an error was detected. As a result of this error, it must be assumed that the actual value sensing supplies an incorrect coarse position.  
 Alarm value (r2124, interpret decimal):  
 3: The absolute position of the serial protocol and track A/B differ by half an encoder pulse. The absolute position must have its zero position in the quadrants in which both tracks are negative. In the case of a fault, the position can be incorrect by one encoder pulse.

**Remedy:** For alarm value = 3:  
 - For a standard encoder with cable, contact the manufacturer where relevant.  
 - correct the assignment of the tracks to the position value that is serially transferred. To do this, the two tracks must be connected, inverted, at the Sensor Module (interchange A with A\* and B with B\*) or, for a programmable encoder, check the zero offset of the position.

Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
 Acknowl. upon F: IMMEDIATELY  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE

**A32422 (F, N) Encoder 2: Pulses per revolution square-wave encoder outside tolerance bandwidth**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 2 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The measured zero mark distance does not correspond to the parameterized zero mark distance.  
 This alarm is triggered with active square-wave encoder PPR correction and re-parameterized fault 31131 if the accumulator contains larger values than p4683 or p4684.  
 The zero mark distance for zero mark monitoring is set in p0425 (rotary encoder).  
 Alarm value (r2124, interpret decimal):  
 accumulated differential pulses in encoder pulses.

**Remedy:**  
 - check that the encoder cables are routed in compliance with EMC.  
 - check the plug connections.  
 - check the encoder type (encoder with equidistant zero marks).  
 - adapt the parameter for the distance between zero marks (p0424, p0425).  
 - replace the encoder or encoder cable.

Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
 Acknowl. upon F: IMMEDIATELY  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE

---

<b>A32429 (F, N)</b>	<b>Encoder 2: Position difference hall sensor/track C/D and A/B too large</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>The error for track C/D is greater than +/-15 ° mechanical or +/-60 ° electrical or the error for the Hall signals is greater than +/-60 ° electrical.</p> <p>One period of track C/D corresponds to 360 ° mechanical.</p> <p>One period of the Hall signal corresponds to 360 ° electrical.</p> <p>The monitoring responds if, for example, Hall sensors are connected as equivalent for the C/D tracks with the incorrect rotational sense or supply values that are not accurate enough.</p> <p>Alarm value (r2124, interpret decimal):</p> <p>For track C/D, the following applies:</p> <p>Measured deviation as mechanical angle (16 bits with sign, 182 dec corresponds to 1 °).</p> <p>For Hall signals, the following applies:</p> <p>Measured deviation as electrical angle (16 bits with sign, 182 dec corresponds to 1 °).</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- track C or D not connected.</li> <li>- correct the direction of rotation of the Hall sensor possibly connected as equivalent for track C/D.</li> <li>- check that the encoder cables are routed in compliance with EMC.</li> <li>- check the adjustment of the Hall sensor.</li> </ul>
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A32431 (F, N)</b>	<b>Encoder 2: Deviation position incremental/absolute too large</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>When the zero pulse is passed, a deviation in the incremental position was detected.</p> <p>For equidistant zero marks, the following applies:</p> <ul style="list-style-type: none"> <li>- the first zero mark passed supplies the reference point for all subsequent checks. The other zero marks must have n times the distance referred to the first zero mark.</li> </ul> <p>For distance-coded zero marks, the following applies:</p> <ul style="list-style-type: none"> <li>- the first zero mark pair supplies the reference point for all subsequent checks. The other zero mark pairs must have the expected distance to the first zero mark pair.</li> </ul> <p>Alarm value (r2124, interpret decimal):</p> <p>Deviation in quadrants (1 pulse = 4 quadrants).</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check that the encoder cables are routed in compliance with EMC.</li> <li>- check the plug connections.</li> <li>- replace the encoder or encoder cable.</li> <li>- Clean coding disk or remove strong magnetic fields.</li> </ul>
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A32432 (F, N)</b>	<b>Encoder 2: Rotor position adaptation corrects deviation</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	For track A/B, pulses have been lost or too many have been counted. These pulses are presently being corrected. Alarm value (r2124, interpret decimal): Last measured deviation of zero mark in increments (4 increments = 1 encoder pulse). The sign designates the direction of motion when detecting the zero mark distance.
<b>Remedy:</b>	- check that the encoder cables are routed in compliance with EMC. - check the plug connections. - replace the encoder or encoder cable. - check encoder limit frequency. - adapt the parameter for the distance between zero marks (p0424, p0425).
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A32442 (F, N)</b>	<b>Encoder 2: Battery voltage pre-alarm</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	When switched-off, the encoder uses a battery to back up the multiturn information. The multiturn information can no longer be buffered if the battery voltage drops even further.
<b>Remedy:</b>	Replace battery.
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A32443 (F, N)</b>	<b>Encoder 2: Unipolar CD signal level outside specification</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The unipolar level (CP/CN or DP/DN) for encoder 2 is outside the permissible tolerance. Alarm value (r2124, interpret binary): Bit 0 = 1: Either CP or CN outside the tolerance. Bit 16 = 1: Either DP or DN outside the tolerance. The unipolar nominal signal level of the encoder must lie in the range 2500 mV +/- 500 mV. The response thresholds are < 1700 mV and > 3300 mV. Note: The signal level is not evaluated unless the following conditions are satisfied: - Sensor Module properties available (r0459.31 = 1). - monitoring active (p0437.31 = 1).

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:**

- check that the encoder cables and shielding are routed in compliance with EMC.
- check the plug connections and contacts of the encoder cable.
- are the C/D tracks connected correctly (have the signal lines CP and CN or DP and DN been interchanged)?
- replace the encoder cable.

Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)

Acknowl. upon F: IMMEDIATELY

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **A32460 (N) Encoder 2: Analog sensor channel A failed**

**Message value:** %1

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** VECTOR\_G

**Component:** Encoder 2

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The input voltage of the analog sensor is outside the permissible limits.

Alarm value (r2124, interpret decimal):

1: Input voltage outside detectable measuring range.

2: Input voltage outside measuring range set in p4673.

3: The absolute value of the input voltage has exceeded the range limit (p4676).

**Remedy:** For alarm value = 1:

- check the output voltage of the analog sensor.

For alarm value = 2:

- check the voltage setting for each encoder period (p4673).

For alarm value = 3:

- check the range limit setting and increase it if necessary (p4676).

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **A32461 (N) Encoder 2: Analog sensor channel B failed**

**Message value:** %1

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** VECTOR\_G

**Component:** Encoder 2

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The input voltage of the analog sensor is outside the permissible limits.

Alarm value (r2124, interpret decimal):

1: Input voltage outside detectable measuring range.

2: Input voltage outside the selected measuring range (p4675).

3: The absolute value of the input voltage has exceeded the range limit (p4676).

**Remedy:** For alarm value = 1:

- check the output voltage of the analog sensor.

For alarm value = 2:

- check the voltage setting for each encoder period (p4675).

For alarm value = 3:

- check the range limit setting and increase it if necessary (p4676).

Reaction upon N: NONE

Acknowl. upon N: NONE

---

<b>A32462 (N)</b>	<b>Encoder 2: Analog sensor no channel active</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Channel A and B are not activated for the analog sensor.
<b>Remedy:</b>	- activate channel A and/or channel B (p4670). - check the encoder configuration (p0404.17). See also: p4670 (Analog sensor configuration)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A32463 (N)</b>	<b>Encoder 2: Analog sensor position value exceeds limit value</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The position value has exceeded the permissible range of -0.5 ... +0.5. Alarm value (r2124, interpret decimal): 1: Position value from the LVDT sensor. 2: Position value from the encoder characteristic.
<b>Remedy:</b>	For alarm value = 1: - check the LVDT ratio (p4678). - check the reference signal connection at track B. For alarm value = 2: - check the coefficients of the characteristic (p4663 ... p4666).
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A32470 (F, N)</b>	<b>Encoder 2: Soiling detected</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	In the case of the alternative encoder system interface on the Sensor Module Cabinet 30 (SMC30), a dirty encoder is signaled via a 0 signal at terminal X521.7.
<b>Remedy:</b>	- check the plug connections. - replace the encoder or encoder cable.
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>F32500 (N, A)</b>	<b>Encoder 2: Position tracking traversing range exceeded</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None <span style="float: right;"><b>Propagation:</b> GLOBAL</span>
<b>Reaction:</b>	OFF1 (NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	For a configured linear axis without modulo correction, the drive/encoder has exceeded the maximum possible traversing range. The value should be read in p0412 and interpreted as the number of motor revolutions. For p0411.0 = 1, the maximum traversing range for the configured linear axis is defined to be 64x (+/- 32x) of p0421. For p0411.3 = 1, the maximum traversing range for the configured linear axis is preset (default value) to the highest possible value and is +/-p0412/2 (rounded off to complete revolutions). The highest possible value depends on the pulse number (p0408) and the fine resolution (p0419).
<b>Remedy:</b>	The fault should be resolved as follows: - select encoder commissioning (p0010 = 4). - reset the position tracking as follows (p0411.2 = 1). - deselect encoder commissioning (p0010 = 0). The fault should then be acknowledged and the absolute encoder adjusted.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32501 (N, A)</b>	<b>Encoder 2: Position tracking encoder position outside tolerance window</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None <span style="float: right;"><b>Propagation:</b> GLOBAL</span>
<b>Reaction:</b>	OFF1 (NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	When switched off, the drive/encoder was moved through a distance greater than was parameterized in the tolerance window. It is possible that there is no longer any reference between the mechanical system and encoder. Fault value (r0949, interpret decimal): Deviation (difference) to the last encoder position in increments of the absolute value. The sign designates the traversing direction. Note: The deviation (difference) found is also displayed in r0477. See also: p0413 (Measuring gear position tracking tolerance window), r0477 (Measuring gear position difference)
<b>Remedy:</b>	Reset the position tracking as follows: - select encoder commissioning (p0010 = 4). - reset the position tracking as follows (p0411.2 = 1). - deselect encoder commissioning (p0010 = 0). The fault should then be acknowledged and, if necessary, the absolute encoder adjusted (p2507). See also: p0010
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

<b>F32502 (N, A)</b>	<b>Encoder 2: Encoder with measuring gear without valid signals</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The encoder with measuring gear no longer provides any valid signals.
<b>Remedy:</b>	It must be ensured that all of the encoders, with mounted measuring gear, provide valid actual values in operation.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>F32503 (N, A)</b>	<b>Encoder 2: Position tracking cannot be reset</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The position tracking for the measuring gear cannot be reset.
<b>Remedy:</b>	The fault should be resolved as follows: - select encoder commissioning (p0010 = 4). - reset the position tracking as follows (p0411.2 = 1). - deselect encoder commissioning (p0010 = 0). The fault should then be acknowledged and the absolute encoder adjusted.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>A32700</b>	<b>Encoder 2: Effectivity test does not supply the expected value</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The DRIVE-CLiQ encoder fault word supplies fault bits that have been set. Alarm value (r2124, interpret binary): Bit x = 1: Effectivity test x unsuccessful.
<b>Remedy:</b>	Replace encoder.
<b>N32800 (F)</b>	<b>Encoder 2: Group signal</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The motor encoder has detected at least one fault.
<b>Remedy:</b>	Evaluates other actual messages.
Reaction upon F:	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY

---

<b>F32801 (N, A)</b>	<b>Encoder 2 DRIVE-CLiQ: Sign-of-life missing</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder involved. Fault cause: 10 (= 0A hex): The sign-of-life bit in the receive telegram is not set. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- check the electrical cabinet design and cable routing for EMC compliance - replace the component involved. See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32802 (N, A)</b>	<b>Encoder 2: Time slice overflow</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A time slice overflow has occurred in encoder 2. Fault value (r0949, interpret hexadecimal): yx hex: y = function involved (Siemens-internal fault diagnostics), x = time slice involved x = 9: Time slice overflow of the fast (current controller clock cycle) time slice. x = A: Time slice overflow of the average time slice. x = C: Time slice overflow of the slow time slice. yx = 3E7: Timeout when waiting for SYNO (e.g. unexpected return to non-cyclic operation).
<b>Remedy:</b>	Increase the current controller sampling time Note: For a current controller sampling time = 31.25 µs, use an SMx20 with Article No. 6SL3055-0AA00-5xA3.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32804 (N, A)</b>	<b>Encoder 2: Checksum error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	POWER ON (IMMEDIATELY)
<b>Cause:</b>	A checksum error has occurred when reading-out the program memory on the Sensor Module. Fault value (r0949, interpret hexadecimal): yyyyxxxx hex yyyy: Memory area involved. xxxx: Difference between the checksum at POWER ON and the actual checksum.
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on). - upgrade firmware to later version (>= V2.6 HF3, >= V4.3 SP2, >= V4.4). - check whether the permissible ambient temperature for the component is maintained. - replace the Sensor Module.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32805 (N, A)</b>	<b>Encoder 2: EEPROM checksum error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Internal parameter data is corrupted. Fault value (r0949, interpret hexadecimal): 01: EEPROM access error. 02: Too many blocks in the EEPROM.
<b>Remedy:</b>	Replace the module.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32806 (N, A)</b>	<b>Encoder 2: Initialization error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The encoder was not successfully initialized. Fault value (r0949, interpret hexadecimal): Bit 0, 1: Encoder initialization with the motor rotating has failed (deviation involving coarse and fine position in encoder pulses/4). Bit 2: Mid-voltage matching for track A unsuccessful. Bit 3: Mid-voltage matching for track B unsuccessful. Bit 4: Mid-voltage matching for acceleration input unsuccessful. Bit 5: Mid-voltage matching for track safety A unsuccessful. Bit 6: Mid-voltage matching for track safety B unsuccessful. Bit 7: Mid-voltage matching for track C unsuccessful.

- Bit 8: Mid-voltage matching for track D unsuccessful.
- Bit 9: Mid-voltage matching for track R unsuccessful.
- Bit 10: The difference in mid-voltages between A and B is too great (> 0.5 V)
- Bit 11: The difference in mid-voltages between C and D is too great (> 0.5 V)
- Bit 12: The difference in mid-voltages between safety A and safety B is too great (> 0.5 V)
- Bit 13: The difference in mid-voltages between A and safety B is too great (> 0.5 V)
- Bit 14: The difference in mid-voltages between B and safety A is too great (> 0.5 V)
- Bit 15: The standard deviation of the calculated mid-voltages is too great (> 0.3 V)
- Bit 16: Internal fault - fault when reading a register (CAFE)
- Bit 17: Internal fault - fault when writing a register (CAFE)
- Bit 18: Internal fault: No mid-voltage matching available
- Bit 19: Internal error - ADC access error.
- Bit 20: Internal error - no zero crossover found.
- Bit 28: Error while initializing the EnDat 2.2 measuring unit.
- Bit 29: Error when reading out the data from the EnDat 2.2 measuring unit.
- Bit 30: EEPROM checksum of the EnDat 2.2 measuring unit incorrect.
- Bit 31: Data of the EnDat 2.2 measuring unit inconsistent.

Note:

- Bit 0, 1: Up to 6SL3055-0AA00-5\*A0
- Bits 2 ... 20: 6SL3055-0AA00-5\*A1 and higher

**Remedy:**

- Acknowledge fault.
- If the fault cannot be acknowledged:
- Bits 2 ... 9: Check encoder power supply.
- Bits 2 ... 14: Check the corresponding cable.
- Bit 15 with no other bits: Check track R, check settings in p0404.
- Bit 28: Check the cable between the EnDat 2.2 converter and the measuring unit.
- Bit 29 ... 31: Replace the defective measuring unit.

- Reaction upon N: NONE
- Acknowl. upon N: NONE
- Reaction upon A: NONE
- Acknowl. upon A: NONE

**A32811 (F, N)**

**Encoder 2: Encoder serial number changed**

- Message value:** -
- Message class:** Error in the parameterization / configuration / commissioning procedure (18)
- Drive object:** VECTOR\_G
- Component:** Encoder 2 **Propagation:** LOCAL
- Reaction:** NONE
- Acknowledge:** NONE
- Cause:** The encoder serial number has changed. The change is only checked for encoders with serial number (e.g. EnDat encoders).
  - the encoder was replaced.
- Note:**
  - With closed-loop position control, the serial number is accepted when starting the adjustment (p2507 = 2).
  - When the encoder is adjusted (p2507 = 3), the serial number is checked for changes and if required, the adjustment is reset (p2507 = 1).
  - Proceed as follows to hide serial number monitoring:
    - set the following serial numbers for the corresponding Encoder Data Set: p0441= FF, p0442 = 0, p0443 = 0, p0444 = 0, p0445 = 0.
- Remedy:** Mechanically adjust the encoder. Accept the new serial number with p0440 = 1.
- Reaction upon F: NONE (OFF1, OFF2, OFF3)
- Acknowl. upon F: IMMEDIATELY
- Reaction upon N: NONE
- Acknowl. upon N: NONE



## 4 Faults and alarms

### 4.2 List of faults and alarms

8 (= 08 hex):

No SYNC telegram is expected - but the received telegram is one.

9 (= 09 hex):

The error bit in the receive telegram is set.

16 (= 10 hex):

The receive telegram is too early.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON (switch-off/switch-on).

- check the electrical cabinet design and cable routing for EMC compliance

- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).

See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F32835 (N, A)**

#### **Encoder 2 DRIVE-CLiQ: Cyclic data transfer error**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 2

**Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder concerned. The nodes do not send and receive in synchronism.

Fault cause:

33 (= 21 hex):

The cyclic telegram has not been received.

34 (= 22 hex):

Timeout in the telegram receive list.

64 (= 40 hex):

Timeout in the telegram send list.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON.

- replace the component involved.

See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F32836 (N, A)**

#### **Encoder 2 DRIVE-CLiQ: Send error for DRIVE-CLiQ data**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 2

**Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder involved. Data were not able to be sent.





Reaction upon A: NONE  
Acknowl. upon A: NONE

---

<b>F32860 (N, A)</b>	<b>Encoder 2 DRIVE-CLiQ (CU): Telegram error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Sensor Module (encoder 2) involved to the Control Unit. Fault cause: 1 (= 01 hex): Checksum error (CRC error). 2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list. 3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list. 4 (= 04 hex): The length of the receive telegram does not match the receive list. 5 (= 05 hex): The type of the receive telegram does not match the receive list. 6 (= 06 hex): The address of the power unit in the telegram and in the receive list do not match. 9 (= 09 hex): The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed. 16 (= 10 hex): The receive telegram is too early. 17 (= 11 hex): CRC error and the receive telegram is too early. 18 (= 12 hex): The telegram is shorter than that specified in the length byte or in the receive list and the receive telegram is too early. 19 (= 13 hex): The telegram is longer than that specified in the length byte or in the receive list and the receive telegram is too early. 20 (= 14 hex): The length of the receive telegram does not match the receive list and the receive telegram is too early. 21 (= 15 hex): The type of the receive telegram does not match the receive list and the receive telegram is too early. 22 (= 16 hex): The address of the power unit in the telegram and in the receive list does not match and the receive telegram is too early. 25 (= 19 hex): The error bit in the receive telegram is set and the receive telegram is too early. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on). - check the electrical cabinet design and cable routing for EMC compliance - check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...). See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32875 (N, A)</b>	<b>Encoder 2: power supply voltage failed</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed. Fault cause: 9 (= 09 hex): The power supply voltage for the components has failed. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on). - check the power supply voltage wiring for the DRIVE-CLiQ component (interrupted cable, contacts, ...). - check the dimensioning of the power supply for the DRIVE-CLiQ component.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32885 (N, A)</b>	<b>Encoder 2 DRIVE-CLiQ (CU): Cyclic data transfer error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Sensor Module (encoder 2) involved to the Control Unit. The nodes do not send and receive in synchronism. Fault cause: 26 (= 1A hex): Sign-of-life bit in the receive telegram not set and the receive telegram is too early. 33 (= 21 hex): The cyclic telegram has not been received. 34 (= 22 hex): Timeout in the telegram receive list. 64 (= 40 hex): Timeout in the telegram send list. 98 (= 62 hex): Error at the transition to cyclic operation. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- check the power supply voltage of the component involved. - carry out a POWER ON. - replace the component involved. See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32886 (N, A)</b>	<b>Encoder 2 DRIVE-CLiQ (CU): Error when sending DRIVE-CLiQ data</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Sensor Module (encoder 2) involved to the Control Unit. Data were not able to be sent. Fault cause: 65 (= 41 hex): Telegram type does not match send list. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	Carry out a POWER ON.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32887 (N, A)</b>	<b>Encoder 2 DRIVE-CLiQ (CU): Component fault</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Fault detected on the DRIVE-CLiQ component involved (Sensor Module for encoder 2). Faulty hardware cannot be excluded. Fault cause: 32 (= 20 hex): Error in the telegram header. 35 (= 23 hex): Receive error: The telegram buffer memory contains an error. 66 (= 42 hex): Send error: The telegram buffer memory contains an error. 67 (= 43 hex): Send error: The telegram buffer memory contains an error. 96 (= 60 hex): Response received too late during runtime measurement. 97 (= 61 hex): Time taken to exchange characteristic data too long. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...). - check the electrical cabinet design and cable routing for EMC compliance - if required, use another DRIVE-CLiQ socket (p9904). - replace the component involved.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32895 (N, A)</b>	<b>Encoder 2 DRIVE-CLiQ (CU): Alternating cyclic data transfer error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Sensor Module (encoder 2) involved to the Control Unit. Fault cause: 11 (= 0B hex): Synchronization error during alternating cyclic data transfer. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	Carry out a POWER ON. See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32896 (N, A)</b>	<b>Encoder 2 DRIVE-CLiQ (CU): Inconsistent component properties</b>
<b>Message value:</b>	Component number: %1
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The properties of the DRIVE-CLiQ component (Sensor Module for encoder 2), specified by the fault value, have changed in an incompatible fashion with respect to the properties when booted. One cause can be, e.g. that a DRIVE-CLiQ cable or DRIVE-CLiQ component has been replaced. Fault value (r0949, interpret decimal): Component number.
<b>Remedy:</b>	- carry out a POWER ON. - when a component is replaced, the same component type and if possible the same firmware version should be used. - when a cable is replaced, only cables whose length is the same as or as close as possible to the length of the original cables should be used (ensure compliance with the maximum cable length).
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F32899 (N, A)</b>	<b>Encoder 2: Unknown fault</b>
<b>Message value:</b>	New message: %1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	A fault occurred on the Sensor Module for encoder 2 that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit. Fault value (r0949, interpret decimal): Fault number.

## Note:

If required, the significance of this new fault can be read about in a more recent description of the Control Unit.

**Remedy:**

- replace the firmware on the Sensor Module by an older firmware version (r0148).
- upgrade the firmware on the Control Unit (r0018).

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

**A32902 (F, N) Encoder 2: SPI-BUS error occurred**

**Message value:** %1

**Message class:** Hardware/software error (1)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 2

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** Error when operating the internal SPI bus.  
Alarm value (r2124, interpret hexadecimal):  
Only for internal Siemens troubleshooting.

**Remedy:**

- replace the Sensor Module.
- if required, upgrade the firmware in the Sensor Module.
- contact Technical Support.

Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)

Acknowl. upon F: IMMEDIATELY

Reaction upon N: NONE

Acknowl. upon N: NONE

**F32905 (N, A) Encoder 2: Parameterization error**

**Message value:** Parameter: %1, supplementary information: %2

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 2

**Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)

**Acknowledge:** IMMEDIATELY

**Cause:** A parameter of encoder 2 was detected as being incorrect.  
It is possible that the parameterized encoder type does not match the connected encoder.  
The parameter involved can be determined as follows:

- determine the parameter number using the fault value (r0949).
- determine the parameter index (p0187).

Fault value (r0949, interpret decimal):

yyyyxxxx dec: yyyy = supplementary information, xxxx = parameter

xxxx = 421:

For an EnDat/SSI encoder, the absolute position in the protocol must be less than or equal to 30 bits.

yyyy = 0:

No information available.

yyyy = 1:

The component does not support HTL level (p0405.1 = 0) combined with track monitoring A/B <- -A/B (p0405.2 = 1).

yyyy = 2:

A code number for an identified encoder has been entered into p0400, however, no identification was carried out. Please start a new encoder identification.

yyyy = 3:

A code number for an identified encoder has been entered into p0400, however, no identification was carried out. Please select a listed encoder in p0400 with a code number < 10000.

yyyy = 4:

This component does not support SSI encoders (p0404.9 = 1) without track A/B.



<b>A32915 (F, N)</b>	<b>Encoder 2: Configuration error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Sensor Module Encoder 2	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>The configuration for encoder 2 is incorrect.</p> <p>Alarm value (r2124, interpret decimal):</p> <p>1:</p> <p>Re-parameterization between fault/alarm is not permissible.</p> <p>419:</p> <p>When the fine resolution Gx_XIST2 is configured, the encoder identifies a maximum possible absolute position actual value (r0483) that can no longer be represented within 32 bits.</p>		
<b>Remedy:</b>	<p>For alarm value = 1:</p> <p>No re-parameterization between fault/alarm.</p> <p>For alarm value = 419:</p> <p>Reduce the fine resolution (p0419) or deactivate the monitoring (p0437.25), if the complete multiturn range is not required.</p>		
Reaction upon F:	NONE (IASC/DCBRK)		
Acknowl. upon F:	IMMEDIATELY		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

<b>F32916 (N, A)</b>	<b>Encoder 2: Parameterization fault</b>		
<b>Message value:</b>	Parameter: %1, supplementary information: %2		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Sensor Module Encoder 2	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	<p>A parameter of encoder 2 was detected as being incorrect.</p> <p>It is possible that the parameterized encoder type does not match the connected encoder.</p> <p>The parameter involved can be determined as follows:</p> <ul style="list-style-type: none"> <li>- determine the parameter number using the fault value (r0949).</li> <li>- determine the parameter index (p0187).</li> </ul> <p>Fault value (r0949, interpret decimal):</p> <p>Parameter number.</p>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check whether the connected encoder type matches the encoder that has been parameterized.</li> <li>- correct the parameter specified by the fault value (r0949) and p0187.</li> </ul>		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>A32920 (F, N)</b>	<b>Encoder 2: Temperature sensor fault</b>
<b>Message value:</b>	Fault cause: %1, channel number: %2
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	When evaluating the temperature sensor, an error occurred. Fault cause: 1 (= 01 hex): Wire breakage or sensor not connected. KTY: R > 1630 Ohm, PT1000: R > 1720 Ohm 2 (= 02 hex): Measured resistance too low. PTC: R < 20 Ohm, KTY: R < 50 Ohm, PT1000: R < 603 Ohm Additional values: Only for internal Siemens troubleshooting. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = channel number, xx = error cause
<b>Remedy:</b>	- check that the encoder cable is the correct type and is correctly connected. - check the temperature sensor selection in p0600 to p0603. - replace the Sensor Module (hardware defect or incorrect calibration data).
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A32930 (N)</b>	<b>Encoder 2: Data logger has saved data</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	For the activated function "Data logger" (p0437.0 = 1) a fault has occurred with the Sensor Module. This alarm indicates that the diagnostics data corresponding to the fault was saved on the memory card. The diagnostics data is saved in the following folder: /USER/SINAMICS/DATA/SMTRC00.BIN ... /USER/SINAMICS/DATA/SMTRC07.BIN /USER/SINAMICS/DATA/SMTRCIDX.TXT The following information is contained in the TXT file: - Display of the last written BIN file. - Number of write operations that are still possible (from 10000 downwards). Note: Only Siemens can evaluate the BIN files.
<b>Remedy:</b>	Not necessary. The alarm disappears automatically. The data logger is ready to record the next fault case.
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A32940 (F, N)</b>	<b>Encoder 2: Spindle sensor S1 voltage incorrect</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Application/technological function faulted (17)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The voltage of analog sensor S1 is outside the permissible range. Alarm value (r2124, interpret decimal): Signal level from sensor S1. Note: A signal level of 500 mV corresponds to the numerical value 500 dec.
<b>Remedy:</b>	- check the clamped tool. - check the tolerance and if required, adapt (p5040). - check the thresholds and if required, adapt (p5041). - check analog sensor S1 and connections.
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>F32950</b>	<b>Encoder 2: Internal software error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (OFF2)
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	An internal software error has occurred. Fault value (r0949, interpret decimal): Information about the fault source. Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- if necessary, upgrade the firmware in the Sensor Module to a later version. - contact Technical Support.

---

<b>A32999 (F, N)</b>	<b>Encoder 2: Unknown alarm</b>
<b>Message value:</b>	New message: %1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 2
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A alarm has occurred on the Sensor Module for encoder 2 that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit. Alarm value (r2124, interpret decimal): Alarm number. Note: If required, the significance of this new alarm can be read about in a more recent description of the Control Unit.
<b>Remedy:</b>	- replace the firmware on the Sensor Module by an older firmware version (r0148). - upgrade the firmware on the Control Unit (r0018).
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>F33100 (N, A)</b>	<b>Encoder 3: Zero mark distance error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3 <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The measured zero mark distance does not correspond to the parameterized zero mark distance. For distance-coded encoders, the zero mark distance is determined from zero marks detected pairs. This means that if a zero mark is missing, depending on the pair generation, this cannot result in a fault and also has no effect in the system. The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder). Fault value (r0949, interpret decimal): Last measured zero mark distance in increments (4 increments = 1 encoder pulse). The sign designates the direction of motion when detecting the zero mark distance.
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check that the encoder cables are routed in compliance with EMC.</li> <li>- check the plug connections.</li> <li>- check the encoder type (encoder with equidistant zero marks).</li> <li>- adapt the parameter for the distance between zero marks (p0424, p0425).</li> <li>- if message output above speed threshold, reduce filter time if necessary (p0438).</li> <li>- replace the encoder or encoder cable.</li> </ul>
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33101 (N, A)</b>	<b>Encoder 3: Zero mark failed</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3 <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The 1.5 x parameterized zero mark distance was exceeded. The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder). Fault value (r0949, interpret decimal): Number of increments after POWER ON or since the last zero mark that was detected (4 increments = 1 encoder pulse).
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check that the encoder cables are routed in compliance with EMC.</li> <li>- check the plug connections.</li> <li>- check the encoder type (encoder with equidistant zero marks).</li> <li>- adapt the parameter for the clearance between zero marks (p0425).</li> <li>- if message output above speed threshold, reduce filter time if necessary (p0438).</li> <li>- when p0437.1 is active, check p4686.</li> <li>- replace the encoder or encoder cable.</li> </ul>
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33103 (N, A)</b>	<b>Encoder 3: Amplitude error track R</b>
<b>Message value:</b>	R track: %1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	<p>The amplitude of the reference track signal (track R) does not lie within the tolerance bandwidth for encoder 3. The fault can be initiated when the unipolar voltage level is exceeded (RP/RN) or if the differential amplitude is undershot.</p> <p>Fault value (r0949, interpret hexadecimal):            yyyxxxx hex: yyyy = 0, xxxx = Signal level, track R (16 bits with sign)            The response thresholds of the unipolar signal levels of the encoder are between &lt; 1400 mV and &gt; 3500 mV.            The response threshold for the differential signal level of the encoder is &lt; -1600 mV.            A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec.</p> <p>Note:            The analog value of the amplitude error is not measured at the same time with the hardware fault output by the Sensor Module.            The fault value can only be represented between -32768 ... 32767 dec (-770 ... 770 mV).            The signal level is not evaluated unless the following conditions are satisfied:</p> <ul style="list-style-type: none"> <li>- Sensor Module properties available (r0459.31 = 1).</li> <li>- monitoring active (p0437.31 = 1).</li> </ul>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the speed range; frequency characteristic (amplitude characteristic) of the measuring equipment might not be sufficient for the speed range</li> <li>- check that the encoder cables and shielding are routed in compliance with EMC.</li> <li>- check the plug connections and contacts of the encoder cable.</li> <li>- check the encoder type (encoder with zero marks).</li> <li>- check whether the zero mark is connected and the signal cables RP and RN have been connected correctly.</li> <li>- replace the encoder cable.</li> <li>- if the coding disk is soiled or the lighting aged, replace the encoder.</li> </ul>
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33110 (N, A)</b>	<b>Encoder 3: Serial communications error</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	<p>Serial communication protocol transfer error between the encoder and evaluation module.</p> <p>Fault value (r0949, interpret binary):</p> <ul style="list-style-type: none"> <li>Bit 0: Alarm bit in the position protocol.</li> <li>Bit 1: Incorrect quiescent level on the data line.</li> <li>Bit 2: Encoder does not respond (does not supply a start bit within 50 ms).</li> <li>Bit 3: CRC error: The checksum in the protocol from the encoder does not match the data.</li> <li>Bit 4: Encoder acknowledgment error: The encoder incorrectly understood the task (request) or cannot execute it.</li> <li>Bit 5: Internal error in the serial driver: An illegal mode command was requested.</li> <li>Bit 6: Timeout when cyclically reading.</li> <li>Bit 7: Timeout for the register communication.</li> <li>Bit 8: Protocol is too long (e.g. &gt; 64 bits).</li> <li>Bit 9: Receive buffer overflow.</li> <li>Bit 10: Frame error when reading twice.</li> </ul>

## 4 Faults and alarms

### 4.2 List of faults and alarms

Bit 11: Parity error.

Bit 12: Data line signal level error during the monoflop time.

Bit 13: Data line incorrect.

Bit 14: Fault for the register communication.

Bit 15: Internal communication error.

Note:

For an EnDat 2.2 encoder, the significance of the fault value for F3x135 (x = 1, 2, 3) is described.

#### Remedy:

For fault value, bit 0 = 1:

- Enc defect F31111 may provide additional details.

For fault value, bit 1 = 1:

- incorrect encoder type / replace the encoder or encoder cable.

For fault value, bit 2 = 1:

- incorrect encoder type / replace the encoder or encoder cable.

For fault value, bit 3 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable.

For fault value, bit 4 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable, replace the Sensor Module.

For fault value, bit 5 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable, replace the Sensor Module.

For fault value, bit 6 = 1:

- Update Sensor Module firmware.

For fault value, bit 7 = 1:

- incorrect encoder type / replace the encoder or encoder cable.

For fault value, bit 8 = 1:

- check parameterization (p0429.2).

For fault value, bit 9 = 1:

- EMC / connect the cable shield, replace the encoder or encoder cable, replace the Sensor Module.

For fault value, bit 10 = 1:

- check parameterization (p0429.2, p0449).

For fault value, bit 11 = 1:

- check parameterization (p0436).

For fault value, bit 12 = 1:

- check parameterization (p0429.6).

For fault value, bit 13 = 1:

- check data line.

For fault value, bit 14 = 1:

- incorrect encoder type / replace the encoder or encoder cable.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### F33111 (N, A)

#### Encoder 3: Absolute encoder internal fault

**Message value:** Fault cause: %1 bin, additional information: %2

**Message class:** Actual position/speed value incorrect or not available (11)

**Drive object:** VECTOR\_G

**Component:** Encoder 3

**Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)

**Acknowledge:** PULSE INHIBIT

**Cause:** The absolute encoder fault word supplies fault bits that have been set.

For p0404.8 = 0, the following applies:

Fault value for internal Siemens troubleshooting.

For p0404.8 = 1, the following applies:

Fault value (r0949, interpret binary):

yyyyxxxx hex: yyyy = supplementary information, xxxx = fault cause

yyyy = 0:  
 Bit 0: Lighting system failed.  
 Bit 1: Signal amplitude too low.  
 Bit 2: Position value incorrect.  
 Bit 3: Encoder power supply overvoltage condition.  
 Bit 4: Encoder power supply undervoltage condition.  
 Bit 5: Encoder power supply overcurrent condition.  
 Bit 6: The battery must be changed.

**Remedy:**

For yyyy = 0:  
 For fault value, bit 0 = 1:  
 Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor.  
 For fault value, bit 1 = 1:  
 Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor.  
 For fault value, bit 2 = 1:  
 Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor.  
 For fault value, bit 3 = 1:  
 5 V power supply voltage fault.  
 When using an SMC: Check the plug-in cable between the encoder and SMC or replace the SMC.  
 When a motor encoder with a direct DRIVE-CLiQ connection is used: Replace the motor.  
 For fault value, bit 4 = 1:  
 5 V power supply voltage fault.  
 When using an SMC: Check the plug-in cable between the encoder and SMC or replace the SMC.  
 When using a motor with DRIVE-CLiQ: Replace the motor.  
 For fault value, bit 5 = 1:  
 Encoder is defective. Replace the encoder, where the motor encoder has a direct DRIVE-CLiQ socket: Replace the motor.  
 For fault value, bit 6 = 1:  
 The battery must be changed (only for encoders with battery back-up).  
 For yyyy = 1:  
 Encoder is defective. Replace encoder.

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

**F33112 (N, A) Encoder 3: Error bit set in the serial protocol**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 3 **Propagation:** LOCAL  
**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** The encoder sends a set error bit via the serial protocol.

Fault value (r0949, interpret binary):  
 Bit 0: Fault bit in the position protocol.

**Remedy:**  
 For fault value, bit 0 = 1:  
 In the case of an EnDat encoder, F31111 may provide further details.

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

<b>F33115 (N, A)</b>	<b>Encoder 3: Amplitude error track A or B (<math>A^2 + B^2</math>)</b>
<b>Message value:</b>	A track: %1, B-track: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	<p>The amplitude (root of <math>A^2 + B^2</math>) for encoder 3 exceeds the permissible tolerance.</p> <p>Fault value (r0949, interpret hexadecimal):                      yyyyxxxx hex:                      yyyy = Signal level, track B (16 bits with sign).                      xxxx = Signal level, track A (16 bits with sign).</p> <p>The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %).                      The response thresholds are &lt; 170 mV (observe the frequency response of the encoder) and &gt; 750 mV.                      A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec.</p> <p>Note for Sensor Modules for resolvers (e.g. SMC10):                      The nominal signal level is at 2900 mV (2.0 Vrms). The response thresholds are &lt; 1070 mV and &gt; 3582 mV.                      A signal level of 2900 mV peak value corresponds to the numerical value 6666 hex = 26214 dec.</p> <p>Note:                      The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module.</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check that the encoder cables and shielding are routed in compliance with EMC.</li> <li>- check the plug connections.</li> <li>- replace the encoder or encoder cable.</li> <li>- check the Sensor Module (e.g. contacts).</li> </ul> <p>The following applies to measuring systems without their own bearing system:</p> <ul style="list-style-type: none"> <li>- adjust the scanning head and check the bearing system of the measuring wheel.</li> </ul> <p>The following applies for measuring systems with their own bearing system:</p> <ul style="list-style-type: none"> <li>- ensure that the encoder housing is not subject to any axial force.</li> </ul>
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>F33116 (N, A)</b>	<b>Encoder 3: Amplitude error monitoring track A + B</b>
<b>Message value:</b>	A track: %1, B-track: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	<p>The amplitude of the rectified encoder signals A and B and the amplitude from the roots of <math>A^2 + B^2</math> for encoder 3 are not within the tolerance bandwidth.</p> <p>Fault value (r0949, interpret hexadecimal):                      yyyyxxxx hex:                      yyyy = Signal level, track B (16 bits with sign).                      xxxx = Signal level, track A (16 bits with sign).</p> <p>The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %).                      The response thresholds are &lt; 130 mV (observe the frequency response of the encoder) and &gt; 955 mV.                      A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec.</p> <p>Note:                      The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module.</p>

**Remedy:**

- check that the encoder cables and shielding are routed in compliance with EMC.
- check the plug connections.
- replace the encoder or encoder cable.
- check the Sensor Module (e.g. contacts).

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F33117 (N, A) Encoder 3: Inversion error signals A/B/R**

**Message value:** Fault cause: %1 bin  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 3 **Propagation:** LOCAL  
**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)  
**Acknowledge:** IMMEDIATELY  
**Cause:** For a square-wave encoder (bipolar, double ended) signals A\*, B\* and R\* are not inverted with respect to signals A, B and R.  
 Fault value (r0949, interpret binary):  
 Bits 0 ... 15: Only for internal Siemens troubleshooting.  
 Bit 16: Error track A.  
 Bit 17: Error track B.  
 Bit 18: Error track R.

**Note:**  
 For SMC30 (only Article No. 6SL3055-0AA00-5CA0 and 6SL3055-0AA00-5CA1), CUA32, and CU310, the following applies:

A square-wave encoder without track R is used and track monitoring (p0405.2 = 1) is activated.

**Remedy:**

- check the encoder/cable.
- Does the encoder supply signals and the associated inverted signals?

**Note:**  
 For SMC30 (only Article Number 6SL3055-0AA00-5CA0 and 6SL3055-0AA00-5CA1), the following applies:  
 - check the setting of p0405 (p0405.2 = 1 is only possible if the encoder is connected at X520).  
 For a square-wave encoder without track R, the following jumpers must be set for the connection at X520 (SMC30) or X23 (CUA32, CU310):  
 - pin 10 (reference signal R) <--> pin 7 (encoder power supply, ground)  
 - pin 11 (reference signal R inverted) <--> pin 4 (encoder power supply)

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F33118 (N, A) Encoder 3: Speed difference outside the tolerance range**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 3 **Propagation:** LOCAL  
**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** For an HTL/TTL encoder, the speed difference has exceeded the value in p0492 over several sampling cycles.  
 The change to the averaged speed actual value - if applicable - is monitored in the current controller sampling time.  
 Fault value (r0949, interpret decimal):  
 Only for internal Siemens troubleshooting.  
 See also: p0492

**Remedy:**

- check the tachometer feeder cable for interruptions.
- check the grounding of the tachometer shielding.
- if required, increase the maximum speed difference per sampling cycle (p0492).

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

<b>F33120 (N, A)</b>	<b>Encoder 3: Power supply voltage fault</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	A power supply fault was detected for encoder 3. Fault value (r0949, interpret binary): Bit 0: Undervoltage condition on the sense line. Bit 1: Overcurrent condition for the encoder power supply. Bit 2: Overcurrent condition for encoder power supply on cable resolver excitation negative. Bit 3: Overcurrent condition for encoder power supply on cable resolver excitation positive. Bit 4: The 24 V power supply of the Power Module (PM) is overloaded. Bit 5: Overcurrent at the EnDat connection of the converter. Bit 6: Overvoltage at the EnDat connection of the converter. Bit 7: Hardware fault at the EnDat connection of the converter. Note: If the encoder cables 6FX2002-2EQ00-.... and 6FX2002-2CH00-.... are interchanged, this can result in the encoder being destroyed because the pins of the operating voltage are reversed.
<b>Remedy:</b>	For fault value, bit 0 = 1: - correct encoder cable connected? - check the plug connections of the encoder cable. - SMC30: Check the parameterization (p0404.22). For fault value, bit 1 = 1: - correct encoder cable connected? - replace the encoder or encoder cable. For fault value, bit 2 = 1: - correct encoder cable connected? - replace the encoder or encoder cable. For fault value, bit 3 = 1: - correct encoder cable connected? - replace the encoder or encoder cable. For fault value, bit 5 = 1: - Measuring unit correctly connected at the converter? - Replace the measuring unit or the cable to the measuring unit. For fault value, bit 6, 7 = 1: - Replace the defective EnDat 2.2 converter.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

<b>F33121 (N, A)</b>	<b>Encoder 3: Coarse position error</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (NONE, OFF2, OFF3)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	For the actual value sensing, an error was detected on the module. As a result of this error, it must be assumed that the actual value sensing supplies an incorrect coarse position.
<b>Remedy:</b>	Replace the motor with DRIVE-CLiQ or the appropriate Sensor Module.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>F33122</b>	<b>Encoder 3: Internal power supply voltage faulty</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 3
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Fault in internal reference voltage of ASICs for encoder 3. Fault value (r0949, interpret decimal): 1: Reference voltage error. 2: Internal undervoltage. 3: Internal overvoltage.
<b>Remedy:</b>	Replace the motor with DRIVE-CLiQ or the appropriate Sensor Module.
<b>F33123 (N, A)</b>	<b>Encoder 3: Signal level A/B unipolar outside tolerance</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The unipolar level (AP/AN or BP/BN) for encoder 3 is outside the permissible tolerance. Fault value (r0949, interpret binary): Bit 0 = 1: Either AP or AN outside the tolerance. Bit 16 = 1: Either BP or BN outside the tolerance. The unipolar nominal signal level of the encoder must lie in the range 2500 mV +/- 500 mV. The response thresholds are < 1700 mV and > 3300 mV. Note: The signal level is not evaluated unless the following conditions are satisfied: - Sensor Module properties available (r0459.31 = 1). - monitoring active (p0437.31 = 1).
<b>Remedy:</b>	- make sure that the encoder cables and shielding are installed in an EMC-compliant manner. - check the plug connections and contacts of the encoder cable. - check the short-circuit of a signal cable with mass or the operating voltage. - replace the encoder cable.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33125 (N, A)</b>	<b>Encoder 3: Amplitude error track A or B overcontrolled</b>
<b>Message value:</b>	A track: %1, B-track: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3 <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The amplitude of track A or B for encoder 3 exceeds the permissible tolerance band. Fault value (r0949, interpret hexadecimal): yyyyxxxx hex: yyyy = Signal level, track B (16 bits with sign). xxxx = Signal level, track A (16 bits with sign). The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %). The response threshold is > 750 mV. This fault also occurs if the analog/digital converter is overcontrolled. A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec. Note for Sensor Modules for resolvers (e.g. SMC10): The nominal signal level is at 2900 mV (2.0 Vrms). The response threshold is > 3582 mV. A signal level of 2900 mV peak value corresponds to the numerical value 6666 hex = 26214 dec. Note: The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module.
<b>Remedy:</b>	- check that the encoder cables and shielding are routed in compliance with EMC. - replace the encoder or encoder cable.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33126 (N, A)</b>	<b>Encoder 3: Amplitude AB too high</b>
<b>Message value:</b>	Amplitude: %1, Angle: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3 <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The amplitude (root of $A^2 + B^2$ or $ A  +  B $ ) for encoder 3 exceeds the permissible tolerance. Fault value (r0949, interpret hexadecimal): yyyyxxxx hex: yyyy = Angle xxxx = amplitude, i.e. root of $A^2 + B^2$ (16 bits without sign) The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %). The response threshold for ( $ A  +  B $ ) is > 1120 mV or the root of ( $A^2 + B^2$ ) > 955 mV. A signal level of 500 mV peak value corresponds to the numerical value of 299A hex = 10650 dec. The angle 0 ... FFFF hex corresponds to 0 ... 360 degrees of the fine position. Zero degrees is present at the negative zero crossover of track B. Note: The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module.
<b>Remedy:</b>	- check that the encoder cables and shielding are routed in compliance with EMC. - replace the encoder or encoder cable.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33129 (N, A)</b>	<b>Encoder 3: Position difference hall sensor/track C/D and A/B too large</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	<p>The error for track C/D is greater than +/-15 ° mechanical or +/-60 ° electrical or the error for the Hall signals is greater than +/-60 ° electrical.</p> <p>One period of track C/D corresponds to 360 ° mechanical.</p> <p>One period of the Hall signal corresponds to 360 ° electrical.</p> <p>The monitoring responds if, for example, Hall sensors are connected as equivalent for the C/D tracks with the incorrect rotational sense or supply values that are not accurate enough.</p> <p>After the fine synchronization using one reference mark or 2 reference marks for distance-coded encoders, this fault is no longer initiated, but instead, Alarm A33429.</p> <p>Fault value (r0949, interpret decimal):</p> <p>For track C/D, the following applies:</p> <p>Measured deviation as mechanical angle (16 bits with sign, 182 dec corresponds to 1 °).</p> <p>For Hall signals, the following applies:</p> <p>Measured deviation as electrical angle (16 bits with sign, 182 dec corresponds to 1 °).</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- track C or D not connected.</li> <li>- correct the direction of rotation of the Hall sensor possibly connected as equivalent for track C/D.</li> <li>- check that the encoder cables are routed in compliance with EMC.</li> <li>- check the adjustment of the Hall sensor.</li> </ul>
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33130 (N, A)</b>	<b>Encoder 3: Zero mark and position error from the coarse synchronization</b>
<b>Message value:</b>	Angular deviation, electrical: %1, angle, mechanical: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	<p>After initializing the pole position using track C/D, Hall signals or pole position identification routine, the zero mark was detected outside the permissible range. For distance-coded encoders, the test is carried out after passing 2 zero marks. Fine synchronization was not carried out.</p> <p>When initializing via track C/D (p0404) then it is checked whether the zero mark occurs in an angular range of +/-18 ° mechanical.</p> <p>When initializing via Hall sensors (p0404) or pole position identification (p1982) it is checked whether the zero mark occurs in an angular range of +/-60 ° electrical.</p> <p>Fault value (r0949, interpret hexadecimal):</p> <p>yyyyxxxx hex</p> <p>yyyy: Determined mechanical zero mark position (can only be used for track C/D).</p> <p>xxxx: Deviation of the zero mark from the expected position as electrical angle.</p> <p>Scaling: 32768 dec = 180 °</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check that the encoder cables are routed in compliance with EMC.</li> <li>- check the plug connections.</li> <li>- if the Hall sensor is used as an equivalent for track C/D, check the connection.</li> <li>- check the connection of track C or D.</li> <li>- replace the encoder or encoder cable.</li> </ul>
Reaction upon N:	NONE
Acknowl. upon N:	NONE

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon A: NONE

Acknowl. upon A: NONE

---

<b>F33131 (N, A)</b>	<b>Encoder 3: Deviation position incremental/absolute too large</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	Absolute encoder: When cyclically reading the absolute position, an excessively high difference to the incremental position was detected. The absolute position that was read is rejected. Limit value for the deviation: - EnDat encoder: Is supplied from the encoder and is a minimum of 2 quadrants (e.g. EQI 1325 > 2 quadrants, EQN 1325 > 50 quadrants). - other encoders: 15 pulses = 60 quadrants. Incremental encoder: When the zero pulse is passed, a deviation in the incremental position was detected. For equidistant zero marks, the following applies: - the first zero mark passed supplies the reference point for all subsequent checks. The other zero marks must have n times the distance referred to the first zero mark. For distance-coded zero marks, the following applies: - the first zero mark pair supplies the reference point for all subsequent checks. The other zero mark pairs must have the expected distance to the first zero mark pair. Fault value (r0949, interpret decimal): Deviation in quadrants (1 pulse = 4 quadrants).
<b>Remedy:</b>	- check that the encoder cables are routed in compliance with EMC. - check the plug connections. - replace the encoder or encoder cable. - check whether the coding disk is dirty or there are strong ambient magnetic fields. - adapt the parameter for the clearance between zero marks (p0425). - if message output above speed threshold, reduce filter time if necessary (p0438).
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33135</b>	<b>Encoder 3: Fault when determining the position</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The encoder supplies status information bit by bit in an internal status/fault word. Some of these bits cause this fault to be triggered. Other bits are status displays. The status/fault word is displayed in the fault value. Note regarding the bit designation: The first designation is valid for DRIVE-CLiQ encoders, the second for EnDat 2.2 encoders. Fault value (r0949, interpret binary): Bit 0: F1 (safety status display). Bit 1: F2 (safety status display). Bit 2: Reserved (lighting). Bit 3: Reserved (signal amplitude). Bit 4: Reserved (position value).

- Bit 5: Reserved (overvoltage).
- Bit 6: Reserved (undervoltage)/hardware fault EnDat supply (--> F3x110, x = 1, 2, 3).
- Bit 7: Reserved (overcurrent)/EnDat encoder withdrawn when not in the parked state (--> F3x110, x = 1, 2, 3).
- Bit 8: Reserved (battery)/overcurrent EnDat supply (--> F3x110, x = 1, 2, 3).
- Bit 9: Reserved/overvoltage EnDat supply (--> F3x110, x = 1, 2, 3).
- Bit 11: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).
- Bit 12: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).
- Bit 13: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).
- Bit 14: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).
- Bit 15: Internal communication error (--> F3x110, x = 1, 2, 3).
- Bit 16: Lighting (--> F3x135, x = 1, 2, 3).
- Bit 17: Signal amplitude (--> F3x135, x = 1, 2, 3).
- Bit 18: Singleturn position 1 (--> F3x135, x = 1, 2, 3).
- Bit 19: Overvoltage (--> F3x135, x = 1, 2, 3).
- Bit 20: Undervoltage (--> F3x135, x = 1, 2, 3).
- Bit 21: Overcurrent (--> F3x135, x = 1, 2, 3).
- Bit 22: Temperature exceeded (--> F3x405, x = 1, 2, 3).
- Bit 23: Singleturn position 2 (safety status display).
- Bit 24: Singleturn system (--> F3x135, x = 1, 2, 3).
- Bit 25: Singleturn power down (--> F3x135, x = 1, 2, 3).
- Bit 26: Multiturn position 1 (--> F3x136, x = 1, 2, 3).
- Bit 27: Multiturn position 2 (--> F3x136, x = 1, 2, 3).
- Bit 28: Multiturn system (--> F3x136, x = 1, 2, 3).
- Bit 29: Multiturn power down (--> F3x136, x = 1, 2, 3).
- Bit 30: Multiturn overflow/underflow (--> F3x136, x = 1, 2, 3).
- Bit 31: Multiturn battery (reserved).

**Remedy:**

- determine the detailed cause of the fault using the fault value.
- replace the encoder if necessary.

Note:

An EnDat 2.2 encoder may only be removed and inserted in the "Park" state.

If an EnDat 2.2 encoder was removed when not in the "Park" state, then after inserting the encoder, a POWER ON (switch-off/switch-on) is necessary to acknowledge the fault.

### F33136

### Encoder 3: Error when determining multiturn information

<b>Message value:</b>	Fault cause: %1 bin		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 3	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)		
<b>Acknowledge:</b>	PULSE INHIBIT		
<b>Cause:</b>	<p>The encoder supplies status information bit by bit in an internal status/fault word.</p> <p>Some of these bits cause this fault to be triggered. Other bits are status displays. The status/fault word is displayed in the fault value.</p> <p>Note regarding the bit designation:</p> <p>The first designation is valid for DRIVE-CLiQ encoders, the second for EnDat 2.2 encoders.</p> <p>Fault value (r0949, interpret binary):</p> <ul style="list-style-type: none"> <li>Bit 0: F1 (safety status display).</li> <li>Bit 1: F2 (safety status display).</li> <li>Bit 2: Reserved (lighting).</li> <li>Bit 3: Reserved (signal amplitude).</li> <li>Bit 4: Reserved (position value).</li> <li>Bit 5: Reserved (overvoltage).</li> <li>Bit 6: Reserved (undervoltage)/hardware fault EnDat supply (--&gt; F3x110, x = 1, 2, 3).</li> <li>Bit 7: Reserved (overcurrent)/EnDat encoder withdrawn when not in the parked state (--&gt; F3x110, x = 1, 2, 3).</li> <li>Bit 8: Reserved (battery)/overcurrent EnDat supply (--&gt; F3x110, x = 1, 2, 3).</li> </ul>		

- Bit 9: Reserved/overvoltage EnDat supply (--> F3x110, x = 1, 2, 3).
- Bit 11: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).
- Bit 12: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).
- Bit 13: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).
- Bit 14: Reserved/internal communication error (--> F3x110, x = 1, 2, 3).
- Bit 15: Internal communication error (--> F3x110, x = 1, 2, 3).
- Bit 16: Lighting (--> F3x135, x = 1, 2, 3).
- Bit 17: Signal amplitude (--> F3x135, x = 1, 2, 3).
- Bit 18: Singleturn position 1 (--> F3x135, x = 1, 2, 3).
- Bit 19: Overvoltage (--> F3x135, x = 1, 2, 3).
- Bit 20: Undervoltage (--> F3x135, x = 1, 2, 3).
- Bit 21: Overcurrent (--> F3x135, x = 1, 2, 3).
- Bit 22: Temperature exceeded (--> F3x405, x = 1, 2, 3).
- Bit 23: Singleturn position 2 (safety status display).
- Bit 24: Singleturn system (--> F3x135, x = 1, 2, 3).
- Bit 25: Singleturn power down (--> F3x135, x = 1, 2, 3).
- Bit 26: Multiturn position 1 (--> F3x136, x = 1, 2, 3).
- Bit 27: Multiturn position 2 (--> F3x136, x = 1, 2, 3).
- Bit 28: Multiturn system (--> F3x136, x = 1, 2, 3).
- Bit 29: Multiturn power down (--> F3x136, x = 1, 2, 3).
- Bit 30: Multiturn overflow/underflow (--> F3x136, x = 1, 2, 3).
- Bit 31: Multiturn battery (reserved).

**Remedy:**

- determine the detailed cause of the fault using the fault value.
- replace the encoder if necessary.

**Note:**

An EnDat 2.2 encoder may only be removed and inserted in the "Park" state.

If an EnDat 2.2 encoder was removed when not in the "Park" state, then after inserting the encoder, a POWER ON (switch-off/switch-on) is necessary to acknowledge the fault.

**F33137**

**Encoder 3: Internal fault when determining the position**

**Message value:** Fault cause: %1 bin  
**Message class:** Hardware/software error (1)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 3 **Propagation:** GLOBAL  
**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** A position determination fault has occurred in the DRIVE-CLiQ encoder.

Fault value (r0949, interpret binary):  
 yyxxxxxx hex: yy = encoder version, xxxxxx = bit coding of the fault cause  
 For yy = 08 hex (bit 27 = 1), the following bit definition applies:  
 Bit 1: Signal monitoring (sin/cos).  
 Bit 8: F1 (safety status display) fault position word 1.  
 Bit 9: F2 (safety status display) fault position word 2.  
 Bit 16: LED monitoring iC-LG (opto ASIC).  
 Bit 17: Fault in the multiturn.  
 Bit 23: Temperature outside the limit values.

**Note:**

For an encoder version that is not described here, please contact the encoder manufacturer for more detailed information on the bit coding.

**Remedy:**

- determine the detailed cause of the fault using the fault value.
- if required, replace the DRIVE-CLiQ encoder.

**F33138 Encoder 3: Internal error when determining multiturn information**

**Message value:** Fault cause: %1 bin  
**Message class:** Hardware/software error (1)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 3 **Propagation:** GLOBAL  
**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** A position determination fault has occurred in the DRIVE-CLiQ encoder.  
 Fault value (r0949, interpret binary):  
 yyxxxxx hex: yy = encoder version, xxxxxx = bit coding of the fault cause  
 For yy = 08 hex (bit 27 = 1), the following bit definition applies:  
 Bit 1: Signal monitoring (sin/cos).  
 Bit 8: F1 (safety status display) fault position word 1.  
 Bit 9: F2 (safety status display) fault position word 2.  
 Bit 16: LED monitoring iC-LG (opto ASIC).  
 Bit 17: Fault in the multiturn.  
 Bit 23: Temperature outside the limit values.  
 Note:  
 For an encoder version that is not described here, please contact the encoder manufacturer for more detailed information on the bit coding.  
**Remedy:**  
 - determine the detailed cause of the fault using the fault value.  
 - if required, replace the DRIVE-CLiQ encoder.

**F33142 (N, A) Encoder 3: Battery voltage fault**

**Message value:** -  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 3 **Propagation:** LOCAL  
**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)  
**Acknowledge:** IMMEDIATELY  
**Cause:** When switched-off, the encoder uses a battery to back up the multiturn information. The battery voltage is no longer sufficient to check the multiturn information.  
**Remedy:** Replace battery.  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F33150 (N, A) Encoder 3: Initialization error**

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** Sensor Module Encoder 3 **Propagation:** LOCAL  
**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** Encoder functionality selected in p0404 is not operating correctly.  
 Fault value (r0949, interpret hexadecimal):  
 Encoder malfunction.  
 The bit assignment corresponds to that of p0404 (e.g. bit 5 set: Error track C/D).  
**Remedy:**  
 - check that p0404 is correctly set.  
 - check the encoder type used (incremental/absolute) and for SMCxx, the encoder cable.  
 - if relevant, note additional fault messages that describe the fault in detail.  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon A: NONE

Acknowl. upon A: NONE

---

<b>F33151 (N, A)</b>	<b>Encoder 3: Encoder speed for initialization AB too high</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The encoder speed is too high while initializing the Sensor Module.
<b>Remedy:</b>	Reduce the speed of the encoder accordingly during initialization. If necessary, deactivate monitoring (p0437.29). See also: p0437 (Sensor Module configuration extended)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33152 (N, A)</b>	<b>Encoder 3: Maximum input frequency exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The maximum input frequency of the encoder evaluation has been exceeded. Fault value (r0949, interpret decimal): Actual input frequency in Hz. See also: p0408 (Rotary encoder pulse number)
<b>Remedy:</b>	- reduce the speed. - Use an encoder with a lower pulse number (p0408).
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33153 (N, A)</b>	<b>Encoder 3: Identification error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	An error has occurred when identifying the encoder (waiting) p0400 = 10100. The connected encoder was not able to be identified. Fault value (r0949, interpret hexadecimal): Bit 0: Data length incorrect. See also: p0400 (Encoder type selection)
<b>Remedy:</b>	Manually configure the encoder according to the data sheet.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33160 (N, A)</b>	<b>Encoder 3: Analog sensor channel A failed</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 3	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE)		
<b>Acknowledge:</b>	PULSE INHIBIT		
<b>Cause:</b>	The input voltage of the analog sensor is outside the permissible limits. Fault value (r0949, interpret decimal): 1: Input voltage outside detectable measuring range. 2: Input voltage outside the measuring range set in (p4673). 3: The absolute value of the input voltage has exceeded the range limit (p4676).		
<b>Remedy:</b>	For fault value = 1: - check the output voltage of the analog sensor. For fault value = 2: - check the voltage setting for each encoder period (p4673). For fault value = 3: - check the range limit setting and increase it if necessary (p4676).		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F33161 (N, A)</b>	<b>Encoder 3: Analog sensor channel B failed</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 3	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE)		
<b>Acknowledge:</b>	PULSE INHIBIT		
<b>Cause:</b>	The input voltage of the analog sensor is outside the permissible limits. Fault value (r0949, interpret decimal): 1: Input voltage outside detectable measuring range. 2: Input voltage outside the selected measuring range (p4675). 3: The absolute value of the input voltage has exceeded the range limit (p4676).		
<b>Remedy:</b>	For fault value = 1: - check the output voltage of the analog sensor. For fault value = 2: - check the voltage setting for each encoder period (p4675). For fault value = 3: - check the range limit setting and increase it if necessary (p4676).		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

<b>F33163 (N, A)</b>	<b>Encoder 3: Analog sensor position value exceeds limit value</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE)
<b>Acknowledge:</b>	PULSE INHIBIT
<b>Cause:</b>	The position value has exceeded the permissible range of -0.5 ... +0.5. Fault value (r0949, interpret decimal): 1: Position value from the LVDT sensor. 2: Position value from the encoder characteristic.
<b>Remedy:</b>	For fault value = 1: - check the LVDT ratio (p4678). - check the reference signal connection at track B. For fault value = 2: - check the coefficients of the characteristic (p4663 ... p4666).
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>A33400 (F, N)</b>	<b>Encoder 3: Alarm threshold zero mark distance error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The measured zero mark distance does not correspond to the parameterized zero mark distance. For distance-coded encoders, the zero mark distance is determined from zero marks detected pairs. This means that if a zero mark is missing, depending on the pair generation, this cannot result in a fault and also has no effect in the system. The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder). Alarm value (r2124, interpret decimal): Last measured zero mark distance in increments (4 increments = 1 encoder pulse). The sign designates the direction of motion when detecting the zero mark distance.
<b>Remedy:</b>	- check that the encoder cables are routed in compliance with EMC. - check the plug connections. - check the encoder type (encoder with equidistant zero marks). - adapt the parameter for the distance between zero marks (p0424, p0425). - replace the encoder or encoder cable.
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>A33401 (F, N)</b>	<b>Encoder 3: Alarm threshold zero mark failed</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3 <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The 1.5 x parameterized zero mark distance was exceeded. The zero mark distance for the zero mark monitoring is set in p0425 (rotary encoder) or p0424 (linear encoder).



---

<b>A33410 (F, N)</b>	<b>Encoder 3: Serial communications</b>		
<b>Message value:</b>	Fault cause: %1 bin		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 3	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Serial communication protocol transfer error between the encoder and evaluation module. Alarm value (r2124, interpret binary): Bit 0: Alarm bit in the position protocol. Bit 1: Incorrect quiescent level on the data line. Bit 2: Encoder does not respond (does not supply a start bit within 50 ms). Bit 3: CRC error: The checksum in the protocol from the encoder does not match the data. Bit 4: Encoder acknowledgment error: The encoder incorrectly understood the task (request) or cannot execute it. Bit 5: Internal error in the serial driver: An illegal mode command was requested. Bit 6: Timeout when cyclically reading. Bit 8: Protocol is too long (e.g. > 64 bits). Bit 9: Receive buffer overflow. Bit 10: Frame error when reading twice. Bit 11: Parity error. Bit 12: Data line signal level error during the monoflop time.		
<b>Remedy:</b>	- check that the encoder cables are routed in compliance with EMC. - check the plug connections. - replace encoder.		
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)		
Acknowl. upon F:	IMMEDIATELY		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A33411 (F, N)</b>	<b>Encoder 3: Absolute encoder signals internal alarms</b>		
<b>Message value:</b>	Fault cause: %1 bin, additional information: %2		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 3	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The absolute encoder fault word includes alarm bits that have been set. Alarm value (r2124, interpret binary): yyyyxxxx hex: yyyy = supplementary information, xxxx = fault cause yyyy = 0: Bit 0: Frequency exceeded (speed too high). Bit 1: Temperature exceeded. Bit 2: Control reserve, lighting system exceeded. Bit 3: Battery discharged. Bit 4: Reference point passed. yyyy = 1: Bit 0: Signal amplitude outside the control range. Bit 1: Error multiturn interface Bit 2: Internal data error (singleturn/multiturn not with single steps). Bit 3: Error EEPROM interface. Bit 4: SAR converter error. Bit 5: Fault for the register data transfer. Bit 6: Internal error identified at the error pin (nErr). Bit 7: Temperature threshold exceeded or fallen below.		
<b>Remedy:</b>	Replace encoder.		

Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
 Acknowl. upon F: IMMEDIATELY  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE

---

**A33412 (F, N) Encoder 3: Error bit set in the serial protocol**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 3 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE

**Cause:** The encoder sends a set error bit via the serial protocol.  
 Alarm value (r2124, interpret binary):  
 Bit 0: Fault bit in the position protocol.  
 Bit 1: Alarm bit in the position protocol.

**Remedy:**

- carry out a POWER ON (switch-off/switch-on) for all components.
- check that the encoder cables are routed in compliance with EMC.
- check the plug connections.
- replace encoder.

Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
 Acknowl. upon F: IMMEDIATELY  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE

---

**A33414 (F, N) Encoder 3: Amplitude error track C or D (C<sup>2</sup> + D<sup>2</sup>)**

**Message value:** C track: %1, D track: %2  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 3 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE

**Cause:** The amplitude (C<sup>2</sup> + D<sup>2</sup>) of track C or D of the encoder or from the Hall signals, is not within the tolerance bandwidth.  
 Alarm value (r2124, interpret hexadecimal):  
 yyyyxxxx hex:  
 yyyy = Signal level, track D (16 bits with sign).  
 xxxx = Signal level, track C (16 bits with sign).  
 The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %).  
 The response thresholds are < 230 mV (observe the frequency response of the encoder) and > 750 mV.  
 A signal level of 500 mV peak value corresponds to the numerical value 5333 hex = 21299 dec.  
 Note:

If the amplitude is not within the tolerance bandwidth, then it cannot be used to initialize the start position.

**Remedy:**

- check that the encoder cables are routed in compliance with EMC.
- check the plug connections.
- replace the encoder or encoder cable.
- check the Sensor Module (e.g. contacts).
- check the Hall sensor box.

Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
 Acknowl. upon F: IMMEDIATELY  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE

<b>N33415 (F, A)</b>	<b>Encoder 3: Amplitude alarm track A or B (A<sup>2</sup> + B<sup>2</sup>)</b>
<b>Message value:</b>	Amplitude: %1, Angle: %2
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>The amplitude (root of A<sup>2</sup> + B<sup>2</sup>) for encoder 3 exceeds the permissible tolerance.</p> <p>Alarm value (r2124, interpret hexadecimal):                      yyyyxxxx hex:                      yyyy = Angle                      xxxx = amplitude, i.e. root of A<sup>2</sup> + B<sup>2</sup> (16 bits without sign)</p> <p>The nominal signal level of the encoder must lie in the range 375 mV to 600 mV (500 mV -25/+20 %).                      The response threshold is &lt; 230 mV (observe the frequency response of the encoder).                      A signal level of 500 mV peak value corresponds to the numerical value 299A hex = 10650 dec.                      The angle 0 ... FFFF hex corresponds to 0 ... 360 degrees of the fine position. Zero degrees is present at the negative zero crossover of track B.</p> <p>Note for Sensor Modules for resolvers (e.g. SMC10):                      The nominal signal level is at 2900 mV (2.0 Vrms). The response threshold is &lt; 1414 mV (1.0 Vrms).                      A signal level of 2900 mV peak value corresponds to the numerical value 3333 hex = 13107 dec.</p> <p>Note:                      The analog values of the amplitude error are not measured at the same time with the hardware fault output by the Sensor Module.</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the speed range, frequency characteristic (amplitude characteristic) of the measuring equipment is not sufficient for the speed range.</li> <li>- check that the encoder cables and shielding are routed in compliance with EMC.</li> <li>- check the plug connections.</li> <li>- replace the encoder or encoder cable.</li> <li>- check the Sensor Module (e.g. contacts).</li> <li>- if the coding disk is soiled or the lighting aged, replace the encoder.</li> </ul>
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>A33418 (F, N)</b>	<b>Encoder 3: Speed difference per sampling rate exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>For an HTL/TTL encoder, the speed difference between two sampling cycles has exceeded the value in p0492.                      The change to the averaged speed actual value - if applicable - is monitored in the current controller sampling time.</p> <p>Alarm value (r2124, interpret decimal):                      Only for internal Siemens troubleshooting.                      See also: p0492</p>
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the tachometer feeder cable for interruptions.</li> <li>- check the grounding of the tachometer shielding.</li> <li>- if required, increase the setting of p0492.</li> </ul>
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A33419 (F, N)</b>	<b>Encoder 3: Track A or B outside tolerance</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The amplitude/phase/offset correction for track A or B is at the limit. Amplitude error correction: Amplitude B / Amplitude A = 0.78 ... 1.27 Phase: <84 degrees or >96 degrees SMC20: Offset correction: +/-140 mV SMC10: Offset correction: +/-650 mV Alarm value (r2124, interpret hexadecimal): xxxx1: Minimum of the offset correction, track B xxxx2: Maximum of the offset correction, track B xxx1x: Minimum of the offset correction, track A xxx2x: Maximum of the offset correction, track A xx1xx: Minimum of the amplitude correction, track B/A xx2xx: Maximum of the amplitude correction, track B/A x1xxx: Minimum of the phase error correction x2xxx: Maximum of the phase error correction 1xxxx: Minimum of the cubic correction 2xxxx: Maximum of the cubic correction
<b>Remedy:</b>	- check mechanical mounting tolerances for encoders without their own bearings (e.g. toothed-wheel encoders). - check the plug connections (also the transition resistance). - check the encoder signals. - replace the encoder or encoder cable.
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A33421 (F, N)</b>	<b>Encoder 3: Coarse position error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	For the actual value sensing, an error was detected. As a result of this error, it must be assumed that the actual value sensing supplies an incorrect coarse position. Alarm value (r2124, interpret decimal): 3: The absolute position of the serial protocol and track A/B differ by half an encoder pulse. The absolute position must have its zero position in the quadrants in which both tracks are negative. In the case of a fault, the position can be incorrect by one encoder pulse.
<b>Remedy:</b>	For alarm value = 3: - For a standard encoder with cable, contact the manufacturer where relevant. - correct the assignment of the tracks to the position value that is serially transferred. To do this, the two tracks must be connected, inverted, at the Sensor Module (interchange A with A* and B with B*) or, for a programmable encoder, check the zero offset of the position.
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

**A33422 (F, N) Encoder 3: Pulses per revolution square-wave encoder outside tolerance bandwidth**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 3 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The measured zero mark distance does not correspond to the parameterized zero mark distance.  
This alarm is triggered with active square-wave encoder PPR correction and re-parameterized fault 31131 if the accumulator contains larger values than p4683 or p4684.  
The zero mark distance for zero mark monitoring is set in p0425 (rotary encoder).  
Alarm value (r2124, interpret decimal):  
accumulated differential pulses in encoder pulses.  
**Remedy:**  
- check that the encoder cables are routed in compliance with EMC.  
- check the plug connections.  
- check the encoder type (encoder with equidistant zero marks).  
- adapt the parameter for the distance between zero marks (p0424, p0425).  
- replace the encoder or encoder cable.  
Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**A33429 (F, N) Encoder 3: Position difference hall sensor/track C/D and A/B too large**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 3 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The error for track C/D is greater than +/-15 ° mechanical or +/-60 ° electrical or the error for the Hall signals is greater than +/-60 ° electrical.  
One period of track C/D corresponds to 360 ° mechanical.  
One period of the Hall signal corresponds to 360 ° electrical.  
The monitoring responds if, for example, Hall sensors are connected as equivalent for the C/D tracks with the incorrect rotational sense or supply values that are not accurate enough.  
Alarm value (r2124, interpret decimal):  
For track C/D, the following applies:  
Measured deviation as mechanical angle (16 bits with sign, 182 dec corresponds to 1 °).  
For Hall signals, the following applies:  
Measured deviation as electrical angle (16 bits with sign, 182 dec corresponds to 1 °).  
**Remedy:**  
- track C or D not connected.  
- correct the direction of rotation of the Hall sensor possibly connected as equivalent for track C/D.  
- check that the encoder cables are routed in compliance with EMC.  
- check the adjustment of the Hall sensor.  
Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

<b>A33431 (F, N)</b>	<b>Encoder 3: Deviation position incremental/absolute too large</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 3	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>When the zero pulse is passed, a deviation in the incremental position was detected.</p> <p>For equidistant zero marks, the following applies:</p> <ul style="list-style-type: none"> <li>- the first zero mark passed supplies the reference point for all subsequent checks. The other zero marks must have n times the distance referred to the first zero mark.</li> </ul> <p>For distance-coded zero marks, the following applies:</p> <ul style="list-style-type: none"> <li>- the first zero mark pair supplies the reference point for all subsequent checks. The other zero mark pairs must have the expected distance to the first zero mark pair.</li> </ul> <p>Alarm value (r2124, interpret decimal):</p> <p>Deviation in quadrants (1 pulse = 4 quadrants).</p>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check that the encoder cables are routed in compliance with EMC.</li> <li>- check the plug connections.</li> <li>- replace the encoder or encoder cable.</li> <li>- Clean coding disk or remove strong magnetic fields.</li> </ul>		
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)		
Acknowl. upon F:	IMMEDIATELY		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
<hr/>			
<b>A33432 (F, N)</b>	<b>Encoder 3: Rotor position adaptation corrects deviation</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 3	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>For track A/B, pulses have been lost or too many have been counted. These pulses are presently being corrected.</p> <p>Alarm value (r2124, interpret decimal):</p> <p>Last measured deviation of zero mark in increments (4 increments = 1 encoder pulse).</p> <p>The sign designates the direction of motion when detecting the zero mark distance.</p>		
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check that the encoder cables are routed in compliance with EMC.</li> <li>- check the plug connections.</li> <li>- replace the encoder or encoder cable.</li> <li>- check encoder limit frequency.</li> <li>- adapt the parameter for the distance between zero marks (p0424, p0425).</li> </ul>		
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)		
Acknowl. upon F:	IMMEDIATELY		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
<hr/>			
<b>A33442 (F, N)</b>	<b>Encoder 3: Battery voltage pre-alarm</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 3	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	<p>When switched-off, the encoder uses a battery to back up the multiturn information. The multiturn information can no longer be buffered if the battery voltage drops even further.</p>		

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:** Replace battery.  
Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**A33443 (F, N)****Encoder 3: Unipolar CD signal level outside specification**

**Message value:** Fault cause: %1 bin  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 3 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The unipolar level (CP/CN or DP/DN) for encoder 3 is outside the permissible tolerance.  
Alarm value (r2124, interpret binary):  
Bit 0 = 1: Either CP or CN outside the tolerance.  
Bit 16 = 1: Either DP or DN outside the tolerance.  
The unipolar nominal signal level of the encoder must lie in the range 2500 mV +/- 500 mV.  
The response thresholds are < 1700 mV and > 3300 mV.

**Note:**

The signal level is not evaluated unless the following conditions are satisfied:

- Sensor Module properties available (r0459.31 = 1).
- monitoring active (p0437.31 = 1).

**Remedy:**

- check that the encoder cables and shielding are routed in compliance with EMC.
- check the plug connections and contacts of the encoder cable.
- are the C/D tracks connected correctly (have the signal lines CP and CN or DP and DN been interchanged)?
- replace the encoder cable.

Reaction upon F: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Acknowl. upon F: IMMEDIATELY  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**A33460 (N)****Encoder 3: Analog sensor channel A failed**

**Message value:** %1  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 3 **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The input voltage of the analog sensor is outside the permissible limits.  
Alarm value (r2124, interpret decimal):  
1: Input voltage outside detectable measuring range.  
2: Input voltage outside measuring range set in p4673.  
3: The absolute value of the input voltage has exceeded the range limit (p4676).

**Remedy:**

For alarm value = 1:  
- check the output voltage of the analog sensor.

For alarm value = 2:  
- check the voltage setting for each encoder period (p4673).

For alarm value = 3:  
- check the range limit setting and increase it if necessary (p4676).

Reaction upon N: NONE  
Acknowl. upon N: NONE

---

<b>A33461 (N)</b>	<b>Encoder 3: Analog sensor channel B failed</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 3	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The input voltage of the analog sensor is outside the permissible limits. Alarm value (r2124, interpret decimal): 1: Input voltage outside detectable measuring range. 2: Input voltage outside the selected measuring range (p4675). 3: The absolute value of the input voltage has exceeded the range limit (p4676).		
<b>Remedy:</b>	For alarm value = 1: - check the output voltage of the analog sensor. For alarm value = 2: - check the voltage setting for each encoder period (p4675). For alarm value = 3: - check the range limit setting and increase it if necessary (p4676).		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A33462 (N)</b>	<b>Encoder 3: Analog sensor no channel active</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 3	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Channel A and B are not activated for the analog sensor.		
<b>Remedy:</b>	- activate channel A and/or channel B (p4670). - check the encoder configuration (p0404.17). See also: p4670 (Analog sensor configuration)		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A33463 (N)</b>	<b>Encoder 3: Analog sensor position value exceeds limit value</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Encoder 3	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The position value has exceeded the permissible range of -0.5 ... +0.5. Alarm value (r2124, interpret decimal): 1: Position value from the LVDT sensor. 2: Position value from the encoder characteristic.		
<b>Remedy:</b>	For alarm value = 1: - check the LVDT ratio (p4678). - check the reference signal connection at track B. For alarm value = 2: - check the coefficients of the characteristic (p4663 ... p4666).		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A33470 (F, N)</b>	<b>Encoder 3: Soiling detected</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	In the case of the alternative encoder system interface on the Sensor Module Cabinet 30 (SMC30), a dirty encoder is signaled via a 0 signal at terminal X521.7.
<b>Remedy:</b>	- check the plug connections. - replace the encoder or encoder cable.
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>F33500 (N, A)</b>	<b>Encoder 3: Position tracking traversing range exceeded</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	For a configured linear axis without modulo correction, the drive/encoder has exceeded the maximum possible traversing range. The value should be read in p0412 and interpreted as the number of motor revolutions. For p0411.0 = 1, the maximum traversing range for the configured linear axis is defined to be 64x (+/- 32x) of p0421. For p0411.3 = 1, the maximum traversing range for the configured linear axis is preset (default value) to the highest possible value and is +/-p0412/2 (rounded off to complete revolutions). The highest possible value depends on the pulse number (p0408) and the fine resolution (p0419).
<b>Remedy:</b>	The fault should be resolved as follows: - select encoder commissioning (p0010 = 4). - reset the position tracking as follows (p0411.2 = 1). - deselect encoder commissioning (p0010 = 0). The fault should then be acknowledged and the absolute encoder adjusted.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33501 (N, A)</b>	<b>Encoder 3: Position tracking encoder position outside tolerance window</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF1 (NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	When switched off, the drive/encoder was moved through a distance greater than was parameterized in the tolerance window. It is possible that there is no longer any reference between the mechanical system and encoder. Fault value (r0949, interpret decimal): Deviation (difference) to the last encoder position in increments of the absolute value. The sign designates the traversing direction. Note: The deviation (difference) found is also displayed in r0477. See also: p0413 (Measuring gear position tracking tolerance window), r0477 (Measuring gear position difference)

**Remedy:** Reset the position tracking as follows:  
 - select encoder commissioning (p0010 = 4).  
 - reset the position tracking as follows (p0411.2 = 1).  
 - deselect encoder commissioning (p0010 = 0).  
 The fault should then be acknowledged and, if necessary, the absolute encoder adjusted (p2507).  
 See also: p0010

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

**F33502 (N, A) Encoder 3: Encoder with measuring gear without valid signals**

**Message value:** -  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** Sensor Module Encoder 3 **Propagation:** GLOBAL  
**Reaction:** OFF1 (OFF2, OFF3)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The encoder with measuring gear no longer provides any valid signals.  
**Remedy:** It must be ensured that all of the encoders, with mounted measuring gear, provide valid actual values in operation.

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

**F33503 (N, A) Encoder 3: Position tracking cannot be reset**

**Message value:** -  
**Message class:** Actual position/speed value incorrect or not available (11)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** OFF1 (NONE, OFF2, OFF3)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The position tracking for the measuring gear cannot be reset.  
**Remedy:** The fault should be resolved as follows:  
 - select encoder commissioning (p0010 = 4).  
 - reset the position tracking as follows (p0411.2 = 1).  
 - deselect encoder commissioning (p0010 = 0).  
 The fault should then be acknowledged and the absolute encoder adjusted.

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

**A33700 Encoder 3: Effectivity test does not supply the expected value**

**Message value:** Fault cause: %1 bin  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** VECTOR\_G  
**Component:** Sensor Module Encoder 3 **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The DRIVE-CLiQ encoder fault word supplies fault bits that have been set.  
 Alarm value (r2124, interpret binary):  
 Bit x = 1: Effectivity test x unsuccessful.  
**Remedy:** Replace encoder.

---

<b>N33800 (F)</b>	<b>Encoder 3: Group signal</b>
<b>Message value:</b>	-
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The motor encoder has detected at least one fault.
<b>Remedy:</b>	Evaluate the other messages that are presently available.
Reaction upon F:	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY

---

<b>F33801 (N, A)</b>	<b>Encoder 3 DRIVE-CLiQ: Sign-of-life missing</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU)
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder involved. Fault cause: 10 (= 0A hex): The sign-of-life bit in the receive telegram is not set. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- check the electrical cabinet design and cable routing for EMC compliance - replace the component involved. See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33802 (N, A)</b>	<b>Encoder 3: Time slice overflow</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 3
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A time slice overflow has occurred in encoder 3. Fault value (r0949, interpret hexadecimal): yx hex: y = function involved (Siemens-internal fault diagnostics), x = time slice involved x = 9: Time slice overflow of the fast (current controller clock cycle) time slice. x = A: Time slice overflow of the average time slice. x = C: Time slice overflow of the slow time slice. yx = 3E7: Timeout when waiting for SYNO (e.g. unexpected return to non-cyclic operation).
<b>Remedy:</b>	Increase the current controller sampling time Note: For a current controller sampling time = 31.25 µs, use an SMx20 with Article No. 6SL3055-0AA00-5xA3.

---



- Bit 4: Mid-voltage matching for acceleration input unsuccessful.
- Bit 5: Mid-voltage matching for track safety A unsuccessful.
- Bit 6: Mid-voltage matching for track safety B unsuccessful.
- Bit 7: Mid-voltage matching for track C unsuccessful.
- Bit 8: Mid-voltage matching for track D unsuccessful.
- Bit 9: Mid-voltage matching for track R unsuccessful.
- Bit 10: The difference in mid-voltages between A and B is too great (> 0.5 V)
- Bit 11: The difference in mid-voltages between C and D is too great (> 0.5 V)
- Bit 12: The difference in mid-voltages between safety A and safety B is too great (> 0.5 V)
- Bit 13: The difference in mid-voltages between A and safety B is too great (> 0.5 V)
- Bit 14: The difference in mid-voltages between B and safety A is too great (> 0.5 V)
- Bit 15: The standard deviation of the calculated mid-voltages is too great (> 0.3 V)
- Bit 16: Internal fault - fault when reading a register (CAFE)
- Bit 17: Internal fault - fault when writing a register (CAFE)
- Bit 18: Internal fault: No mid-voltage matching available
- Bit 19: Internal error - ADC access error.
- Bit 20: Internal error - no zero crossover found.
- Bit 28: Error while initializing the EnDat 2.2 measuring unit.
- Bit 29: Error when reading out the data from the EnDat 2.2 measuring unit.
- Bit 30: EEPROM checksum of the EnDat 2.2 measuring unit incorrect.
- Bit 31: Data of the EnDat 2.2 measuring unit inconsistent.

Note:

- Bit 0, 1: Up to 6SL3055-0AA00-5\*A0
- Bits 2 ... 20: 6SL3055-0AA00-5\*A1 and higher

**Remedy:**

- Acknowledge fault.
- If the fault cannot be acknowledged:
- Bits 2 ... 9: Check encoder power supply.
- Bits 2 ... 14: Check the corresponding cable.
- Bit 15 with no other bits: Check track R, check settings in p0404.
- Bit 28: Check the cable between the EnDat 2.2 converter and the measuring unit.
- Bit 29 ... 31: Replace the defective measuring unit.

- Reaction upon N: NONE
- Acknowl. upon N: NONE
- Reaction upon A: NONE
- Acknowl. upon A: NONE

---

<b>A33811 (F, N)</b>	<b>Encoder 3: Encoder serial number changed</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Encoder 3 <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	<p>The encoder serial number has changed. The change is only checked for encoders with serial number (e.g. EnDat encoders).</p> <ul style="list-style-type: none"> <li>- the encoder was replaced.</li> </ul> <p>Note:</p> <p>With closed-loop position control, the serial number is accepted when starting the adjustment (p2507 = 2).                      When the encoder is adjusted (p2507 = 3), the serial number is checked for changes and if required, the adjustment is reset (p2507 = 1).</p> <p>Proceed as follows to hide serial number monitoring:</p> <ul style="list-style-type: none"> <li>- set the following serial numbers for the corresponding Encoder Data Set: p0441= FF, p0442 = 0, p0443 = 0, p0444 = 0, p0445 = 0.</li> </ul>
<b>Remedy:</b>	Mechanically adjust the encoder. Accept the new serial number with p0440 = 1.
Reaction upon F:	NONE (OFF1, OFF2, OFF3)
Acknowl. upon F:	IMMEDIATELY



## 4 Faults and alarms

### 4.2 List of faults and alarms

6 (= 06 hex):

The address of the component in the telegram and in the receive list do not match.

7 (= 07 hex):

A SYNC telegram is expected - but the received telegram is not a SYNC telegram.

8 (= 08 hex):

No SYNC telegram is expected - but the received telegram is one.

9 (= 09 hex):

The error bit in the receive telegram is set.

16 (= 10 hex):

The receive telegram is too early.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON (switch-off/switch-on).

- check the electrical cabinet design and cable routing for EMC compliance

- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).

See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F33835 (N, A)**

#### **Encoder 3 DRIVE-CLiQ: Cyclic data transfer error**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 3

**Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder concerned. The nodes do not send and receive in synchronism.

Fault cause:

33 (= 21 hex):

The cyclic telegram has not been received.

34 (= 22 hex):

Timeout in the telegram receive list.

64 (= 40 hex):

Timeout in the telegram send list.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON.

- replace the component involved.

See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

<b>F33836 (N, A)</b>	<b>Encoder 3 DRIVE-CLiQ: Send error for DRIVE-CLiQ data</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder involved. Data were not able to be sent. Fault cause: 65 (= 41 hex): Telegram type does not match send list. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	Carry out a POWER ON.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33837 (N, A)</b>	<b>Encoder 3 DRIVE-CLiQ: Component fault</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Fault detected on the DRIVE-CLiQ component concerned. Faulty hardware cannot be excluded. Fault cause: 32 (= 20 hex): Error in the telegram header. 35 (= 23 hex): Receive error: The telegram buffer memory contains an error. 66 (= 42 hex): Send error: The telegram buffer memory contains an error. 67 (= 43 hex): Send error: The telegram buffer memory contains an error. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...). - check the electrical cabinet design and cable routing for EMC compliance - if required, use another DRIVE-CLiQ socket (p9904). - replace the component involved.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33845 (N, A)</b>	<b>Encoder 3 DRIVE-CLiQ: Cyclic data transfer error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder involved. Fault cause: 11 (= 0B hex): Synchronization error during alternating cyclic data transfer. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	Carry out a POWER ON (switch-off/switch-on). See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33850 (N, A)</b>	<b>Encoder 3: Encoder evaluation internal software error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	An internal software error has occurred in the Sensor Module of encoder 3. Fault value (r0949, interpret decimal): 1: Background time slice is blocked. 2: Checksum over the code memory is not OK. 10000: OEM memory of the EnDat encoder contains data that cannot be interpreted. 11000 ... 11499: Descriptive data from EEPROM incorrect. 11500 ... 11899: Calibration data from EEPROM incorrect. 11900 ... 11999: Configuration data from EEPROM incorrect. 12000 ... 12008: communication with analog/digital converter faulted. 16000: DRIVE-CLiQ encoder initialization application error. 16001: DRIVE-CLiQ encoder initialization ALU error. 16002: DRIVE-CLiQ encoder HISI / SISI initialization error. 16003: DRIVE-CLiQ encoder safety initialization error. 16004: DRIVE-CLiQ encoder internal system error.
<b>Remedy:</b>	- replace the Sensor Module. - if required, upgrade the firmware in the Sensor Module. - contact Technical Support.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33851 (N, A)</b>	<b>Encoder 3 DRIVE-CLiQ (CU): Sign-of-life missing</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Sensor Module (encoder 3) involved to the Control Unit. The DRIVE-CLiQ component did not set the sign-of-life to the Control Unit. Fault cause: 10 (= 0A hex): The sign-of-life bit in the receive telegram is not set. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- Upgrade the firmware of the component involved. - carry out a POWER ON (switch-off/switch-on) for the component involved.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F33860 (N, A)</b>	<b>Encoder 3 DRIVE-CLiQ (CU): Telegram error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Sensor Module (encoder 3) involved to the Control Unit. Fault cause: 1 (= 01 hex): Checksum error (CRC error). 2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list. 3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list. 4 (= 04 hex): The length of the receive telegram does not match the receive list. 5 (= 05 hex): The type of the receive telegram does not match the receive list. 6 (= 06 hex): The address of the power unit in the telegram and in the receive list do not match. 9 (= 09 hex): The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed. 16 (= 10 hex): The receive telegram is too early. 17 (= 11 hex): CRC error and the receive telegram is too early. 18 (= 12 hex): The telegram is shorter than that specified in the length byte or in the receive list and the receive telegram is too early. 19 (= 13 hex): The telegram is longer than that specified in the length byte or in the receive list and the receive telegram is too early.

20 (= 14 hex):

The length of the receive telegram does not match the receive list and the receive telegram is too early.

21 (= 15 hex):

The type of the receive telegram does not match the receive list and the receive telegram is too early.

22 (= 16 hex):

The address of the power unit in the telegram and in the receive list does not match and the receive telegram is too early.

25 (= 19 hex):

The error bit in the receive telegram is set and the receive telegram is too early.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON (switch-off/switch-on).
  - check the electrical cabinet design and cable routing for EMC compliance
  - check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).
- See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F33875 (N, A) Encoder 3: power supply voltage failed**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Supply voltage fault (undervoltage) (3)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 3 **Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed.

Fault cause:

9 (= 09 hex):

The power supply voltage for the components has failed.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON (switch-off/switch-on).
- check the power supply voltage wiring for the DRIVE-CLiQ component (interrupted cable, contacts, ...).
- check the dimensioning of the power supply for the DRIVE-CLiQ component.

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F33885 (N, A) Encoder 3 DRIVE-CLiQ (CU): Cyclic data transfer error**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 3 **Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** A DRIVE-CLiQ communication error has occurred from the Sensor Module (encoder 3) involved to the Control Unit. The nodes do not send and receive in synchronism.

Fault cause:

26 (= 1A hex):

Sign-of-life bit in the receive telegram not set and the receive telegram is too early.

33 (= 21 hex):  
The cyclic telegram has not been received.  
34 (= 22 hex):  
Timeout in the telegram receive list.  
64 (= 40 hex):  
Timeout in the telegram send list.  
98 (= 62 hex):  
Error at the transition to cyclic operation.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- check the power supply voltage of the component involved.
- carry out a POWER ON.
- replace the component involved.

See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

**F33886 (N, A) Encoder 3 DRIVE-CLiQ (CU): Error when sending DRIVE-CLiQ data**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 3 **Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** A DRIVE-CLiQ communication error has occurred from the Sensor Module (encoder 3) involved to the Control Unit. Data were not able to be sent.

Fault cause:

65 (= 41 hex):

Telegram type does not match send list.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

Carry out a POWER ON.

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

**F33887 (N, A) Encoder 3 DRIVE-CLiQ (CU): Component fault**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 3 **Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** Fault detected on the DRIVE-CLiQ component involved (Sensor Module for encoder 3). Faulty hardware cannot be excluded.

Fault cause:

32 (= 20 hex):

Error in the telegram header.

35 (= 23 hex):

Receive error: The telegram buffer memory contains an error.

## 4 Faults and alarms

### 4.2 List of faults and alarms

66 (= 42 hex):

Send error: The telegram buffer memory contains an error.

67 (= 43 hex):

Send error: The telegram buffer memory contains an error.

96 (= 60 hex):

Response received too late during runtime measurement.

97 (= 61 hex):

Time taken to exchange characteristic data too long.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

#### Remedy:

- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).
- check the electrical cabinet design and cable routing for EMC compliance
- if required, use another DRIVE-CLiQ socket (p9904).
- replace the component involved.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F33895 (N, A) Encoder 3 DRIVE-CLiQ (CU): Alternating cyclic data transfer error**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 3 **Propagation:** LOCAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3)

**Acknowledge:** IMMEDIATELY

**Cause:** A DRIVE-CLiQ communication error has occurred from the Sensor Module (encoder 3) involved to the Control Unit.

Fault cause:

11 (= 0B hex):

Synchronization error during alternating cyclic data transfer.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

#### Remedy:

Carry out a POWER ON.

See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F33896 (N, A) Encoder 3 DRIVE-CLiQ (CU): Inconsistent component properties**

**Message value:** Component number: %1

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 3 **Propagation:** LOCAL

**Reaction:** OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2)

**Acknowledge:** IMMEDIATELY

**Cause:** The properties of the DRIVE-CLiQ component (Sensor Module for encoder 3), specified by the fault value, have changed in an incompatible fashion with respect to the properties when booted. One cause can be, e.g. that a DRIVE-CLiQ cable or DRIVE-CLiQ component has been replaced.

Fault value (r0949, interpret decimal):

Component number.



<b>A33903 (F, N)</b>	<b>Encoder 3: I2C-BUS error occurred</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	Error when operating the internal I2C bus. Alarm value (r2124, interpret hexadecimal): Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- replace the Sensor Module. - if required, upgrade the firmware in the Sensor Module. - contact Technical Support.
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>F33905 (N, A)</b>	<b>Encoder 3: Parameterization error</b>
<b>Message value:</b>	Parameter: %1, supplementary information: %2
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Sensor Module Encoder 3
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A parameter of encoder 3 was detected as being incorrect. It is possible that the parameterized encoder type does not match the connected encoder. The parameter involved can be determined as follows: - determine the parameter number using the fault value (r0949). - determine the parameter index (p0187). Fault value (r0949, interpret decimal): yyyyxxxx dec: yyyy = supplementary information, xxxx = parameter xxxx = 421: For an EnDat/SSI encoder, the absolute position in the protocol must be less than or equal to 30 bits. yyyy = 0: No information available. yyyy = 1: The component does not support HTL level (p0405.1 = 0) combined with track monitoring A/B <> -A/B (p0405.2 = 1). yyyy = 2: A code number for an identified encoder has been entered into p0400, however, no identification was carried out. Please start a new encoder identification. yyyy = 3: A code number for an identified encoder has been entered into p0400, however, no identification was carried out. Please select a listed encoder in p0400 with a code number < 10000. yyyy = 4: This component does not support SSI encoders (p0404.9 = 1) without track A/B. yyyy = 5: For SQW encoder, value in p4686 greater than in p0425. yyyy = 6: DRIVE-CLiQ encoder cannot be used with this firmware version. yyyy = 7: For an SQW encoder, the XIST1 correction (p0437.2) is only permitted for equidistant zero marks. yyyy = 8: The motor pole pair width is not supported by the linear scale being used.

yyyy = 9:  
The length of the position in the EnDat protocol may be a maximum of 32 bits.

yyyy = 10:  
The connected encoder is not supported.

yyyy = 11:  
The hardware does not support track monitoring.

**Remedy:**

- check whether the connected encoder type matches the encoder that has been parameterized.
- correct the parameter specified by the fault value (r0949) and p0187.
- re parameter number = 314:
- check the pole pair number and measuring gear ratio. The quotient of the "pole pair number" divided by the "measuring gear ratio" must be less than or equal to 1000 ((r0313 \* p0433) / p0432 <= 1000).

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

### F33912 Encoder 3: Device combination is not permissible

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** Encoder 3 **Propagation:** GLOBAL  
**Reaction:** OFF1 (IASC/DCBRK, NONE)  
**Acknowledge:** PULSE INHIBIT  
**Cause:** The selected device combination is not supported.  
Fault value (r0949, interpret decimal):  
1003:  
The connected measuring unit cannot be operated with the EnDat 2.2 converter. For instance, the measuring unit has a pulse number/resolution of  $2^n$ .  
1005:  
The type of measuring unit (incremental) is not supported by the EnDat 2.2 converter.  
1006:  
The maximum duration of the EnDat transfer (31.25  $\mu$ s) was exceeded.  
2001:  
The set combination of current controller cycle, DP cycle and Safety cycle is not supported by the EnDat 2.2 converter.  
2002:  
The resolution of the linear measuring unit does not match the pole pair width of the linear motor  
Pole pair width, minimum =  $p0422 * 2^{20}$   
**Remedy:**  
For fault value = 1003, 1005, 1006:  
- Use a measuring unit that is permissible.  
For fault value = 2001:  
- set a permissible cycle combination (if required, use standard settings).  
For fault value = 2002:  
- Use a measuring unit with a lower resolution (p0422).

---

### A33915 (F, N) Encoder 3: Configuration error

**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** VECTOR\_G  
**Component:** Sensor Module Encoder 3 **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The configuration for encoder 3 is incorrect.  
Alarm value (r2124, interpret decimal):  
1:  
Re-parameterization between fault/alarm is not permissible.

## 4 Faults and alarms

### 4.2 List of faults and alarms

419:

When the fine resolution Gx\_XIST2 is configured, the encoder identifies a maximum possible absolute position actual value (r0483) that can no longer be represented within 32 bits.

**Remedy:**

For alarm value = 1:

No re-parameterization between fault/alarm.

For alarm value = 419:

Reduce the fine resolution (p0419) or deactivate the monitoring (p0437.25), if the complete multiturn range is not required.

Reaction upon F: NONE (IASC/DCBRK)

Acknowl. upon F: IMMEDIATELY

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **F33916 (N, A)**

#### **Encoder 3: Parameterization fault**

**Message value:** Parameter: %1, supplementary information: %2

**Message class:** Error in the parameterization / configuration / commissioning procedure (18)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 3

**Propagation:** GLOBAL

**Reaction:** OFF1 (IASC/DCBRK, NONE, OFF2, OFF3, STOP2)

**Acknowledge:** IMMEDIATELY

**Cause:**

A parameter of encoder 3 was detected as being incorrect.

It is possible that the parameterized encoder type does not match the connected encoder.

The parameter involved can be determined as follows:

- determine the parameter number using the fault value (r0949).

- determine the parameter index (p0187).

Fault value (r0949, interpret decimal):

Parameter number.

**Remedy:**

- check whether the connected encoder type matches the encoder that has been parameterized.

- correct the parameter specified by the fault value (r0949) and p0187.

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **A33920 (F, N)**

#### **Encoder 3: Temperature sensor fault**

**Message value:** Fault cause: %1, channel number: %2

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** VECTOR\_G

**Component:** Sensor Module Encoder 3

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:**

When evaluating the temperature sensor, an error occurred.

Fault cause:

1 (= 01 hex):

Wire breakage or sensor not connected.

KTY: R > 1630 Ohm, PT1000: R > 1720 Ohm

2 (= 02 hex):

Measured resistance too low.

PTC: R < 20 Ohm, KTY: R < 50 Ohm, PT1000: R < 603 Ohm

Additional values:

Only for internal Siemens troubleshooting.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = channel number, xx = error cause



## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F33950</b>	<b>Encoder 3: Internal software error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Sensor Module Encoder 3	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF1 (OFF2)		
<b>Acknowledge:</b>	POWER ON		
<b>Cause:</b>	An internal software error has occurred. Fault value (r0949, interpret decimal): Information about the fault source. Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	- if necessary, upgrade the firmware in the Sensor Module to a later version. - contact Technical Support.		

---

<b>A33999 (F, N)</b>	<b>Encoder 3: Unknown alarm</b>		
<b>Message value:</b>	New message: %1		
<b>Message class:</b>	Actual position/speed value incorrect or not available (11)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Sensor Module Encoder 3	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	A alarm has occurred on the Sensor Module for encoder 3 that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit. Alarm value (r2124, interpret decimal): Alarm number. Note: If required, the significance of this new alarm can be read about in a more recent description of the Control Unit.		
<b>Remedy:</b>	- replace the firmware on the Sensor Module by an older firmware version (r0148). - upgrade the firmware on the Control Unit (r0018).		
Reaction upon F:	NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>F34207 (N, A)</b>	<b>VSM: Temperature fault threshold exceeded</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Infeed faulted (13)		
<b>Drive object:</b>	VECTOR_G		
<b>Component:</b>	Voltage Sensing Module (VSM)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The temperature (r3666) measured using the Voltage Sensing Module (VSM) has exceeded the threshold value (p3668). Note: This fault can only be output if the temperature evaluation was activated (p3665 > 0). Fault value (r0949, interpret decimal): Temperature actual value at the time of initiation [0.1 °C]. See also: r3666 (VSM temperature actual value), p3668 (VSM overtemperature shutdown threshold)		
<b>Remedy:</b>	- check the fan. - reduce the power.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F34207 (N, A)</b>	<b>VSM: Temperature fault threshold exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Infeed faulted (13)
<b>Drive object:</b>	B_INF
<b>Component:</b>	Voltage Sensing Module (VSM)
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The temperature (r3666) measured using the Voltage Sensing Module (VSM) has exceeded the threshold value (p3668). Note: This fault can only be output if the temperature evaluation was activated (p3665 > 0). Fault value (r0949, interpret decimal): Temperature actual value at the time of initiation [0.1 °C]. See also: r3666 (VSM temperature actual value), p3668 (VSM overtemperature shutdown threshold)
<b>Remedy:</b>	- check the fan. - reduce the power. - check the temperature sensor type setting (p3665). - infeed: check the line filter type setting (p0220). See also: p3665 (VSM temperature evaluation sensor type)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>A34211 (F, N)</b>	<b>VSM: Temperature alarm threshold exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Infeed faulted (13)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Voltage Sensing Module (VSM)
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The temperature (r3666) measured using the Voltage Sensing Module (VSM) has exceeded the threshold value (p3667). Alarm value (r2124, interpret decimal): Temperature actual value at the time of initiation [0.1 °C]. See also: r3666 (VSM temperature actual value), p3667 (VSM overtemperature alarm threshold)
<b>Remedy:</b>	- check the fan. - reduce the power.
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A34211 (F, N)</b>	<b>VSM: Temperature alarm threshold exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Infeed faulted (13)
<b>Drive object:</b>	B_INF
<b>Component:</b>	Voltage Sensing Module (VSM)
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The temperature (r3666) measured using the Voltage Sensing Module (VSM) has exceeded the threshold value (p3667). Alarm value (r2124, interpret decimal): Temperature actual value at the time of initiation [0.1 °C]. See also: r3666 (VSM temperature actual value), p3667 (VSM overtemperature alarm threshold)

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

**Remedy:**

- check the fan.
- reduce the power.
- check the temperature sensor type setting (p3665).
- infeed: check the line filter type setting (p0220).

See also: p3665 (VSM temperature evaluation sensor type)

Reaction upon F: NONE (OFF1, OFF2)  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **N34800 (F) VSM: Group signal**

**Message value:** -  
**Message class:** Infeed faulted (13)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** None **Propagation:** LOCAL  
**Reaction:** Vector: NONE (OFF1, OFF2, OFF3)  
Infeed: OFF2 (NONE, OFF1)  
**Acknowledge:** NONE  
**Cause:** The Voltage Sensing Module (VSM) has detected at least one fault.  
**Remedy:** Evaluates other actual messages.  
Reaction upon F: Vector: NONE (OFF1, OFF2, OFF3)  
Infeed: OFF2 (NONE, OFF1)  
Acknowl. upon F: IMMEDIATELY

---

#### **F34801 (N, A) VSM DRIVE-CLiQ: Sign-of-life missing**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** VECTOR\_G  
**Component:** Control Unit (CU) **Propagation:** LOCAL  
**Reaction:** NONE (OFF1, OFF2, OFF3)  
**Acknowledge:** IMMEDIATELY  
**Cause:** A DRIVE-CLiQ communications error has occurred from the Control Unit to the Voltage Sensing Module (VSM).  
Fault cause:  
10 (= 0A hex):  
The sign-of-life bit in the receive telegram is not set.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause  
**Remedy:**  

- check the DRIVE-CLiQ connection.
- replace the component involved.

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

**F34801 (N, A) VSM DRIVE-CLiQ: Sign-of-life missing**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** B\_INF  
**Component:** Control Unit (CU) **Propagation:** LOCAL  
**Reaction:** OFF2 (NONE, OFF1)  
**Acknowledge:** IMMEDIATELY  
**Cause:** A DRIVE-CLiQ communications error has occurred from the Control Unit to the Voltage Sensing Module (VSM).  
 Fault cause:  
 10 (= 0A hex):  
 The sign-of-life bit in the receive telegram is not set.  
 Note regarding the message value:  
 The individual information is coded as follows in the message value (r0949/r2124):  
 0000yyxx hex: yy = component number, xx = error cause  
**Remedy:**  
 - check the DRIVE-CLiQ connection.  
 - replace the Voltage Sensing Module (VSM).  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F34802 (N, A) VSM: Time slice overflow**

**Message value:** -  
**Message class:** Hardware/software error (1)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Voltage Sensing Module (VSM) **Propagation:** LOCAL  
**Reaction:** Vector: NONE (OFF1, OFF2, OFF3)  
 Infeed: OFF2 (NONE, OFF1)  
**Acknowledge:** IMMEDIATELY  
**Cause:** A time slice overflow has occurred on the Voltage Sensing Module.  
**Remedy:** Replace the Voltage Sensing Module.  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F34803 VSM: Memory test**

**Message value:** -  
**Message class:** Hardware/software error (1)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Voltage Sensing Module (VSM) **Propagation:** LOCAL  
**Reaction:** Vector: NONE (OFF1, OFF2, OFF3)  
 Infeed: OFF2 (NONE, OFF1)  
**Acknowledge:** IMMEDIATELY  
**Cause:** An error has occurred during the memory test on the Voltage Sensing Module.  
**Remedy:**  
 - check whether the permissible ambient temperature for the Voltage Sensing Module is being maintained.  
 - replace the Voltage Sensing Module.

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F34804 (N, A)</b>	<b>VSM: CRC</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Voltage Sensing Module (VSM)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2, OFF3) Infeed: OFF2 (NONE, OFF1)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	A checksum error has occurred when reading-out the program memory on the Voltage Sensing Module (VSM).		
<b>Remedy:</b>	- check whether the permissible ambient temperature for the component is maintained. - replace the Voltage Sensing Module.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F34805 (N, A)</b>	<b>VSM: EEPROM checksum error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Voltage Sensing Module (VSM)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2, OFF3) Infeed: OFF2 (NONE, OFF1)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	Internal parameter data is corrupted. Fault value (r0949, interpret hexadecimal): 01: EEPROM access error. 02: Too many blocks in the EEPROM.		
<b>Remedy:</b>	- check whether the permissible ambient temperature for the component is maintained. - replace the Voltage Sensing Module (VSM).		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F34806</b>	<b>VSM: Initialization</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Voltage Sensing Module (VSM)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2, OFF3) Infeed: OFF2 (NONE, OFF1)		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	For the Voltage Sensing Module (VSM), a fault has occurred while initializing.		
<b>Remedy:</b>	Replace the Voltage Sensing Module.		

---

<b>A34807 (F, N)</b>	<b>VSM: Sequence control time monitoring</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	Voltage Sensing Module (VSM)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	Error, timeout in the sequence control on the Voltage Sensing Module (VSM).		
<b>Remedy:</b>	Replace the Voltage Sensing Module.		

Reaction upon F: NONE  
 Acknowl. upon F: IMMEDIATELY (POWER ON)  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE

**F34820 VSM DRIVE-CLiQ: Telegram error**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Voltage Sensing Module (VSM) **Propagation:** LOCAL  
**Reaction:** Vector: NONE (OFF1, OFF2)  
 Infeed: OFF2 (NONE, OFF1)  
**Acknowledge:** IMMEDIATELY  
**Cause:** A DRIVE-CLiQ communications error has occurred from the Control Unit to the Voltage Sensing Module involved.  
 Fault cause:  
 1 (= 01 hex):  
 Checksum error (CRC error).  
 2 (= 02 hex):  
 Telegram is shorter than specified in the length byte or in the receive list.  
 3 (= 03 hex):  
 Telegram is longer than specified in the length byte or in the receive list.  
 4 (= 04 hex):  
 The length of the receive telegram does not match the receive list.  
 5 (= 05 hex):  
 The type of the receive telegram does not match the receive list.  
 6 (= 06 hex):  
 The address of the component in the telegram and in the receive list do not match.  
 7 (= 07 hex):  
 A SYNC telegram is expected - but the received telegram is not a SYNC telegram.  
 8 (= 08 hex):  
 No SYNC telegram is expected - but the received telegram is one.  
 9 (= 09 hex):  
 The error bit in the receive telegram is set.  
 16 (= 10 hex):  
 The receive telegram is too early.  
 Note regarding the message value:  
 The individual information is coded as follows in the message value (r0949/r2124):  
 0000yyxx hex: yy = component number, xx = error cause  
**Remedy:**  
 - carry out a POWER ON (switch-off/switch-on).  
 - check the electrical cabinet design and cable routing for EMC compliance  
 - check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).  
 See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

**F34835 VSM DRIVE-CLiQ: Cyclic data transfer error**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Voltage Sensing Module (VSM) **Propagation:** LOCAL  
**Reaction:** Vector: NONE (OFF1, OFF2)  
 Infeed: OFF2 (NONE, OFF1)  
**Acknowledge:** IMMEDIATELY  
**Cause:** A DRIVE-CLiQ communications error has occurred from the Control Unit to the Voltage Sensing Module involved.  
 The nodes do not send and receive in synchronism.



- if required, use another DRIVE-CLiQ socket (p9904).
- replace the component involved.

---

<b>F34845</b>	<b>VSM DRIVE-CLiQ: Cyclic data transfer error</b>	
<b>Message value:</b>	Component number: %1, fault cause: %2	
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)	
<b>Drive object:</b>	B_INF, VECTOR_G	
<b>Component:</b>	Voltage Sensing Module (VSM)	<b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2) Infeed: OFF2 (NONE, OFF1)	
<b>Acknowledge:</b>	IMMEDIATELY	
<b>Cause:</b>	A DRIVE-CLiQ communications error has occurred from the Control Unit to the Voltage Sensing Module (VSM). Fault cause: 11 (= 0B hex): Synchronization error during alternating cyclic data transfer. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause	
<b>Remedy:</b>	Carry out a POWER ON. See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)	

---

<b>F34850</b>	<b>VSM: Internal software error</b>	
<b>Message value:</b>	%1	
<b>Message class:</b>	Hardware/software error (1)	
<b>Drive object:</b>	B_INF, VECTOR_G	
<b>Component:</b>	Voltage Sensing Module (VSM)	<b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: OFF1 (NONE, OFF2, OFF3) Infeed: OFF1 (NONE, OFF2)	
<b>Acknowledge:</b>	POWER ON	
<b>Cause:</b>	An internal software error in the Voltage Sensing Module (VSM) has occurred. Fault value (r0949, interpret decimal): 1: Background time slice is blocked. 2: Checksum over the code memory is not OK.	
<b>Remedy:</b>	- replace the Voltage Sensing Module (VSM). - if required, upgrade the firmware in the Voltage Sensing Module. - contact Technical Support.	

---

<b>F34851</b>	<b>VSM DRIVE-CLiQ (CU): Sign-of-life missing</b>	
<b>Message value:</b>	Component number: %1, fault cause: %2	
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)	
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G	
<b>Component:</b>	Voltage Sensing Module (VSM)	<b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2) Infeed: OFF2 (NONE, OFF1)	
<b>Acknowledge:</b>	IMMEDIATELY	
<b>Cause:</b>	A DRIVE-CLiQ communications error has occurred from the Voltage Sensing Module involved (VSM) to the Control Unit. The DRIVE-CLiQ component did not set the sign-of-life to the Control Unit. Fault cause: 10 (= 0A hex): The sign-of-life bit in the receive telegram is not set. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause	
<b>Remedy:</b>	Upgrade the firmware of the component involved.	

---

<b>F34860</b>	<b>VSM DRIVE-CLiQ (CU): Telegram error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Voltage Sensing Module (VSM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communications error has occurred from the Voltage Sensing Module involved (VSM) to the Control Unit. Fault cause: 1 (= 01 hex): Checksum error (CRC error). 2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list. 3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list. 4 (= 04 hex): The length of the receive telegram does not match the receive list. 5 (= 05 hex): The type of the receive telegram does not match the receive list. 6 (= 06 hex): The address of the power unit in the telegram and in the receive list do not match. 9 (= 09 hex): The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed. 16 (= 10 hex): The receive telegram is too early. 17 (= 11 hex): CRC error and the receive telegram is too early. 18 (= 12 hex): The telegram is shorter than that specified in the length byte or in the receive list and the receive telegram is too early. 19 (= 13 hex): The telegram is longer than that specified in the length byte or in the receive list and the receive telegram is too early. 20 (= 14 hex): The length of the receive telegram does not match the receive list and the receive telegram is too early. 21 (= 15 hex): The type of the receive telegram does not match the receive list and the receive telegram is too early. 22 (= 16 hex): The address of the power unit in the telegram and in the receive list does not match and the receive telegram is too early. 25 (= 19 hex): The error bit in the receive telegram is set and the receive telegram is too early. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on). - check the electrical cabinet design and cable routing for EMC compliance - check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...). See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)

---

<b>F34875</b>	<b>VSM: power supply voltage failed</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Voltage Sensing Module (VSM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed. Fault cause: 9 (= 09 hex): The power supply voltage for the components has failed. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on). - check the power supply voltage wiring for the DRIVE-CLiQ component (interrupted cable, contacts, ...). - check the dimensioning of the power supply for the DRIVE-CLiQ component.

---

<b>F34885</b>	<b>VSM DRIVE-CLiQ (CU): Cyclic data transfer error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Voltage Sensing Module (VSM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communications error has occurred from the Voltage Sensing Module involved (VSM) to the Control Unit. The nodes do not send and receive in synchronism. Fault cause: 26 (= 1A hex): Sign-of-life bit in the receive telegram not set and the receive telegram is too early. 33 (= 21 hex): The cyclic telegram has not been received. 34 (= 22 hex): Timeout in the telegram receive list. 64 (= 40 hex): Timeout in the telegram send list. 98 (= 62 hex): Error at the transition to cyclic operation. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- check the power supply voltage of the component involved. - carry out a POWER ON. - replace the component involved. See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)

---

<b>F34886</b>	<b>VSM DRIVE-CLiQ (CU): Error when sending DRIVE-CLiQ data</b>	
<b>Message value:</b>	Component number: %1, fault cause: %2	
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)	
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G	
<b>Component:</b>	Voltage Sensing Module (VSM)	<b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2) Infeed: OFF2 (NONE, OFF1)	
<b>Acknowledge:</b>	IMMEDIATELY	
<b>Cause:</b>	A DRIVE-CLiQ communications error has occurred from the Voltage Sensing Module involved (VSM) to the Control Unit. Data were not able to be sent. Fault cause: 65 (= 41 hex): Telegram type does not match send list. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause	
<b>Remedy:</b>	Carry out a POWER ON.	

---

<b>F34887</b>	<b>VSM DRIVE-CLiQ (CU): Component fault</b>	
<b>Message value:</b>	Component number: %1, fault cause: %2	
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)	
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G	
<b>Component:</b>	Voltage Sensing Module (VSM)	<b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2) Infeed: OFF2 (NONE, OFF1)	
<b>Acknowledge:</b>	IMMEDIATELY	
<b>Cause:</b>	Fault detected on the DRIVE-CLiQ component (Voltage Sensing Module) involved. Faulty hardware cannot be excluded. Fault cause: 32 (= 20 hex): Error in the telegram header. 35 (= 23 hex): Receive error: The telegram buffer memory contains an error. 66 (= 42 hex): Send error: The telegram buffer memory contains an error. 67 (= 43 hex): Send error: The telegram buffer memory contains an error. 96 (= 60 hex): Response received too late during runtime measurement. 97 (= 61 hex): Time taken to exchange characteristic data too long. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause	
<b>Remedy:</b>	<ul style="list-style-type: none"> <li>- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).</li> <li>- check the electrical cabinet design and cable routing for EMC compliance</li> <li>- if required, use another DRIVE-CLiQ socket (p9904).</li> <li>- replace the component involved.</li> </ul>	

<b>F34895</b>	<b>VSM DRIVE-CLiQ (CU): Alternating cyclic data transfer error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Voltage Sensing Module (VSM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communications error has occurred from the Voltage Sensing Module involved (VSM) to the Control Unit. Fault cause: 11 (= 0B hex): Synchronization error during alternating cyclic data transfer. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	Carry out a POWER ON. See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)
<b>F34896</b>	<b>VSM DRIVE-CLiQ (CU): Inconsistent component properties</b>
<b>Message value:</b>	Component number: %1
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Voltage Sensing Module (VSM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The properties of the DRIVE-CLiQ component (Voltage Sensing Module), specified by the fault value, have changed in an incompatible fashion with respect to the properties when booted. One cause can be, e.g. that a DRIVE-CLiQ cable or DRIVE-CLiQ component has been replaced. Fault value (r0949, interpret decimal): Component number.
<b>Remedy:</b>	- carry out a POWER ON. - when a component is replaced, the same component type and if possible the same firmware version should be used. - when a cable is replaced, only cables whose length is the same as or as close as possible to the length of the original cables should be used (ensure compliance with the maximum cable length).
<b>F34899 (N, A)</b>	<b>VSM: Unknown fault</b>
<b>Message value:</b>	New message: %1
<b>Message class:</b>	Infeed faulted (13)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Voltage Sensing Module (VSM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	A fault occurred on the Voltage Sensing Module that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit. Fault value (r0949, interpret decimal): Fault number. Note: If required, the significance of this new fault can be read about in a more recent description of the Control Unit.
<b>Remedy:</b>	- replace the firmware on the Voltage Sensing Module by an older firmware version (r0158). - upgrade the firmware on the Control Unit (r0018).
Reaction upon N:	NONE
Acknowl. upon N:	NONE

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon A: NONE

Acknowl. upon A: NONE

---

**A34903 (F, N) VSM: I2C bus error occurred**  
**Message value:** -  
**Message class:** Hardware/software error (1)  
**Drive object:** VECTOR\_G  
**Component:** Voltage Sensing Module (VSM) **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** An error has occurred when accessing the module-internal I2C bus.  
**Remedy:** Replace the Terminal Module.  
Reaction upon F: NONE  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**A34903 (F, N) VSM: I2C bus error occurred**  
**Message value:** -  
**Message class:** Hardware/software error (1)  
**Drive object:** B\_INF  
**Component:** Voltage Sensing Module (VSM) **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** An error has occurred when accessing the module-internal I2C bus.  
**Remedy:** Replace the Voltage Sensing Module (VSM).  
Reaction upon F: NONE (OFF1, OFF2)  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**A34904 (F, N) VSM: EEPROM**  
**Message value:** -  
**Message class:** Hardware/software error (1)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Voltage Sensing Module (VSM) **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** An error has occurred accessing the non-volatile memory on the Terminal Module.  
**Remedy:** Replace the Voltage Sensing Module (VSM).  
Reaction upon F: Vector: NONE  
Infeed: NONE (OFF1, OFF2)  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**A34905 (F, N) VSM: Parameter access**  
**Message value:** -  
**Message class:** Hardware/software error (1)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** Voltage Sensing Module (VSM) **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The Control Unit attempted to write an illegal parameter value to the Voltage Sensing Module (VSM).  
**Remedy:**  
- check whether the firmware version of the VSM (r0158) matches the firmware version of Control Unit (r0018).  
- if required, replace the Voltage Sensing Module.

## Note:

The firmware versions that match each other are in the readme.txt file on the memory card.

Reaction upon F: Vector: NONE  
 Infeed: NONE (OFF1, OFF2)  
 Acknowl. upon F: IMMEDIATELY (POWER ON)  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE

---

**F34920 (N, A) VSM: overtemperature or temperature sensor fault**  
**Message value:** %1  
**Message class:** External measured value / signal state outside the permissible range (16)  
**Drive object:** VECTOR\_G  
**Component:** Voltage Sensing Module (VSM) **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** When evaluating the temperature sensor, a resistance value outside the permissible range was detected.  
 Fault value (r0949, interpret decimal):  
 1: overtemperature, wire breakage or sensor not connected.  
 KTY: R > 1630 Ohm, PT1000: R > 1720 Ohm  
 2: Measured resistance too low.  
 PTC: R < 20 Ohm, KTY: R < 50 Ohm, PT1000: R < 723 Ohm  
**Remedy:**  
 - make sure that the sensor is connected correctly.  
 - replace the sensor.  
 - allow to cool down and then check the ambient conditions, load cycle and cooling (fan fuse).  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

**F34920 (N, A) VSM: overtemperature or temperature sensor fault**  
**Message value:** %1  
**Message class:** External measured value / signal state outside the permissible range (16)  
**Drive object:** B\_INF  
**Component:** Voltage Sensing Module (VSM) **Propagation:** LOCAL  
**Reaction:** NONE (OFF1, OFF2)  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** When evaluating the temperature sensor, a resistance value outside the permissible range was detected.  
 Fault value (r0949, interpret decimal):  
 1: overtemperature, wire breakage or sensor not connected.  
 KTY: R > 1630 Ohm, PT1000: R > 1720 Ohm  
 2: Measured resistance too low.  
 PTC: R < 20 Ohm, KTY: R < 50 Ohm, PT1000: R < 723 Ohm  
**Remedy:**  
 - make sure that the sensor is connected correctly.  
 - replace the sensor.  
 - allow to cool down and then check the ambient conditions, load cycle and cooling (fan fuse).  
 - check the temperature sensor type setting (p3665).  
 - infeed: check the line filter type setting (p0220).  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

<b>F34950</b>	<b>VSM: Internal software error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Voltage Sensing Module (VSM)
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	An internal software error in the Voltage Sensing Module (VSM) has occurred. Fault value (r0949, interpret decimal): Information about the fault source. Only for internal Siemens troubleshooting.
<b>Remedy:</b>	- if necessary, upgrade the firmware in the Voltage Sensing Module to a later version. - contact Technical Support.

---

<b>A34999 (F, N)</b>	<b>VSM: Unknown alarm</b>
<b>Message value:</b>	New message: %1
<b>Message class:</b>	Infeed faulted (13)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	Voltage Sensing Module (VSM)
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A fault occurred on the Voltage Sensing Module (VSM) an alarm has occurred that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit. Alarm value (r2124, interpret decimal): Alarm number. Note: If required, the significance of this new alarm can be read about in a more recent description of the Control Unit.
<b>Remedy:</b>	- replace the firmware on the Voltage Sensing Module by an older firmware version (r0148). - upgrade the firmware on the Control Unit (r0018).
<b>Reaction upon F:</b>	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)
<b>Acknowl. upon F:</b>	IMMEDIATELY (POWER ON)
<b>Reaction upon N:</b>	NONE
<b>Acknowl. upon N:</b>	NONE

---

<b>F35000</b>	<b>TM54F: Sampling time invalid</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	The set sampling time is invalid. - not a multiple integer of the DP clock cycle. Fault value (r0949, floating point): Recommended valid sampling time.
<b>Remedy:</b>	Adapt the sampling time (e.g. set the recommended valid sampling time). See also: p10000 (SI TM54F communication clock cycle)

---

<b>F35001</b>	<b>TM54F: Parameter value invalid</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The functionality of Safety Basic Functions via TM54F is used. TM54F has been incorrectly parameterized (incorrect parameter assignment). Only the following signals may be parameterized: - STO active - SS1 active - internal event - safe state Possible causes: - p10024 ... p10038 not set to 0 or 255. - p10039, p10042 ... p10045 use signals from Safety Extended Functions. Fault value (r0949, interpret binary): Bits 0 ... 3 specifies for which drive group an illegal F-DI was parameterized: Bit 0 = 1: drive group 1 error Bit 1 = 1: drive group 2 error Bit 2 = 1: drive group 3 error Bit 3 = 1: drive group 4 error Bits 4 ... 7 specifies for which F-DOs incorrect links were specified: Bit 4 = 1: F-DO 0 error (p10042) Bit 5 = 1: F-DO 1 error (p10043) Bit 6 = 1: F-DO 2 error (p10044) Bit 7 = 1: F-DO 3 error (p10045)
<b>Remedy:</b>	- check the setting of the fail-safe digital inputs (F-DI) for the Safety Extended Functions - and set to a value of 0 or 255 (p10024 ... p10039). - check the setting of the signal sources for the fail-safe digital outputs (F-DO) and if necessary, correct (p10042 ... p10045). Note: F-DI: Failsafe Digital Input F-DO: Failsafe Digital Output

---

<b>F35002</b>	<b>TM54F: Commissioning not possible</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The commissioning mode activation was rejected because at least one drive belonging to the TM54F is enabled for operation. Fault value (r0949, interpret decimal): Drive object number of the first drive found without pulse suppression/power inhibit.
<b>Remedy:</b>	Withdraw the operating enable for the drive specified in the fault value.

---

<b>F35003</b>	<b>TM54F: Acknowledgment on the Control Unit is required</b>
<b>Message value:</b>	-
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	None <span style="float: right;"><b>Propagation:</b> GLOBAL</span>
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A fault on the Terminal Module 54F (TM54) was acknowledged using the safe acknowledgment (p10006). An additional acknowledgment is also required at the Control Unit.
<b>Remedy:</b>	- acknowledge all faults on the Control Unit (BI: p2102). or - acknowledge all faults on the drive object TM54F (BI: p2103, p2104 or p2105).
	<b>Note:</b> A fault acknowledgment is triggered with a 0/1 signal.

---

<b>F35004</b>	<b>TM54F: communication cycle invalid</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <span style="float: right;"><b>Propagation:</b> GLOBAL</span>
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	- the communication cycle specified in p10000[x] does not correspond with the monitoring cycle of the drive object, which was specified in p10010[x]. As long as this fault is present, fail safe values are activated in TM54F. All the drives are not enabled. Fault value (r0949, interpret binary):  If a bit is set in the range bit 0 ... 5, then the following applies: The communication cycle specified in p10000[x] does not correspond with the monitoring cycle of the drive object which was specified in p10010[x]. (if only p10000[0] used, then this value must be identical with all monitoring cycles of the drive objects used in p10010[0..5].) Bit 0 = 1: p10000[0] does not correspond with the monitoring cycle of p10010[0] Bit 1 = 1: p10000[1] does not correspond with the monitoring cycle of p10010[1] .. Bit 5 = 1: p10000[5] does not correspond with the monitoring cycle of p10010[5]  If a bit is set in the range bit 16 ... 21, then the following applies: Bit 16 = 1: p10000[0] has been selected too low. Bit 17 = 1: p10000[1] has been selected too low. .. Bit 21 = 1: p10000[5] has been selected too low. When using an axis with Basic Safety Functions with TM54F, then the monitoring cycle should be greater than 500us + 8 * current controller clock cycles of the drive.  <b>Note:</b> This error is also signaled if a drive controlled with TM54F is parameterized so that the basic functions are controlled via TM54F - and simultaneously the extended safety functions or ncSI have been parameterized.  The following applies for fault value = 0: - since the firmware update of the TM54F it has not been switched off. - the firmware of the connected TM54F is too old. See also: p10010 (SI TM54F drive object assignment)

- Remedy:**
- For a fault value in the range from bit 0 ... 5:
- First check that all drives are entered in p10010, extended safety functions or basic functions have been enabled via TM54F.
  - Execute the copy function for TM54F(p9700 = 87).
  - adapt the checksums for TM54F(p9701 = 172).
  - copy RAM to ROM.
  - carry out a POWER ON.
- For a fault value in the range from bit 16 ... 21:
- Increase the current controller sampling time of the corresponding drive, in order to avoid faults in operation.
- Execute the copy function for TM54F(p9700 = 87).
  - adapt the checksums for TM54F(p9701 = 172).
  - copy RAM to ROM.
  - carry out a POWER ON.

---

**F35005**      **TM54F:parallel connection not supported**

**Message value:**      Fault cause: %1 bin

**Message class:**      Safety monitoring channel has identified an error (10)

**Drive object:**      VECTOR\_G

**Component:**      Terminal Module (TM)                      **Propagation:**      GLOBAL

**Reaction:**      NONE

**Acknowledge:**      POWER ON

**Cause:**      The TM54F function with Basic Safety Functions is used. This function is not supported when power units are connected in parallel.  
All drives of the TM54F assume fail safe values, and are not enabled.  
See also: p10010 (SI TM54F drive object assignment)

**Remedy:**

- deactivate parallel connection or TM54F with Basic Safety Functions.
- copy RAM to ROM.
- carry out a POWER ON (switch-off/switch-on).

---

**F35006**      **TM54F: drive groups invalid**

**Message value:**      %1

**Message class:**      Safety monitoring channel has identified an error (10)

**Drive object:**      B\_INF, TM54F\_MA, TM54F\_SL, VECTOR\_G

**Component:**      Terminal Module (TM)                      **Propagation:**      GLOBAL

**Reaction:**      NONE

**Acknowledge:**      POWER ON

**Cause:**      The functionality of the basic functions via TM54F is used.  
Drive groups have been incorrectly parameterized (incorrect parameter assignment).  
Fault value (r0949, interpret binary):  
The value specifies in which drive group Basic Safety drives are mixed with Extended Safety drives.  
Bit 0 = 1: drive group 1 error  
Bit 1 = 1: drive group 2 error  
Bit 2 = 1: drive group 3 error  
Bit 3 = 1: drive group 4 error  
As long as this fault is present, fail safe values are activated in TM54F. All the drives are not enabled.  
Note:  
-this error is also signaled if a drive controlled with TM54F is parameterized so that the basic functions are controlled via TM54F and simultaneously extended safety functions or ncSI have been parameterized.

**Remedy:**

Corresponding to the fault value, p10011 should be checked to ensure that no Basic Safety drives are mixed with Extended Safety drives in a drive group.

<b>F35009</b>	<b>TM54F: Safety commissioning drive incomplete</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	B_INF, TM54F_MA, VECTOR_G
<b>Component:</b>	Terminal Module (TM)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	For Terminal Module 54F (TM54F), a drive object was assigned (p10010), for which no safety functions or faulty safety functions are parameterized (p9501, p9601). Fault value (r0949, interpret bitwise binary): Bit 0 = 1: drive 1 error Bit 1 = 1: drive 2 error Bit 2 = 1: drive 3 error Bit 3 = 1: drive 4 error Bit 4 = 1: drive 5 error Bit 5 = 1: drive 6 error
<b>Remedy:</b>	- carry out the safety commissioning of the drive involved and enable the safety functions for TM54F. - commission the TM54F – and just set p9700 = 87d and p9701 = 172d.
<b>F35011</b>	<b>TM54F: Drive object number assignment illegal</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	A drive object number was assigned twice. Each drive object number can be assigned only once.
<b>Remedy:</b>	Correct the assignment of the drive object numbers. See also: p10010 (SI TM54F drive object assignment)
<b>A35012</b>	<b>TM54F: Test stop for fail-safe digital inputs/outputs</b>
<b>Message value:</b>	-
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The forced checking procedure (test stop) for the fail-safe digital inputs/outputs (F-DI/F-DO) is currently in progress.
<b>Remedy:</b>	The alarm is automatically withdraw after successfully ending or canceling (when a fault condition occurs) the test stop. Note: F-DI: Failsafe Digital Input F-DO: Failsafe Digital Output
<b>F35013</b>	<b>TM54F: Test stop error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	A fault has been detected during the forced checking procedure (test stop) of the fail-safe digital inputs/outputs on the TM54F. Failsafe control signals (failsafe values) are transferred to the safety functions.

Fault value (r0949, interpret hexadecimal):

aaaabbcc hex:

aaaa: DO or F-DI (dependent on test step cc), where the expected state was not assumed (bit 0 = F-DI 0 or F-DO 0, bit 1 = F-DI 1 or F-DO 1, etc.).

bb: Fault cause

bb = 01 hex: Internal fault.

bb = 02 hex: Fault when comparing the switching signals of the two channels (F-DI or DI).

bb = 03 hex: Internal fault.

bb = 04 hex: Fault when comparing the switching signals of the two channels (Diag-DO).

cc: State of the test stop in which the fault has occurred.

The display format is as follows:

Slave fault state: (test actions)(test actions) | corresponding step for the master: (test actions)(test actions) | Description

00 hex: (L1+OFF)(L2+ON) | 0A hex: ( ) ( ) | Synchronization / switching step

0A hex: (L1+OFF)(L2+ON) | 15 hex: ( ) ( ) | Wait step

15 hex: (L1+OFF)(L2+OFF) | 20 hex: ( ) ( ) | 1.) F-DI 0 ... 4 check for 0 V 2.) Switch step to new level

20 hex: (L1+OFF)(L2+OFF) | 2B hex: ( ) ( ) | Wait step

2B hex: (L1+ON)(L2+ON) | 36 hex: ( ) ( ) | 1.) F-DI 5 ... 9 check for 0 V 2.) Switch step to new level

36 hex: (DO OFF)( ) | 41 hex: (DO OFF)( ) | Wait step / switching step

41 hex: (DO OFF)( ) | 4C hex: (DO OFF)( ) | Wait step

4C hex: (DO ON)( ) | 57 hex: (DO ON)( ) | 1.) Check diag-DO or diag-DI 2.) Switch step to new level

57 hex: (DO ON)( ) | 62 hex: (DO ON)( ) | Wait step

62 hex: (DO OFF)( ) | 6D hex: (DO ON)( ) | 1.) Check diag-DO or diag-DI 2.) Switch step

6D hex: (DO OFF)( ) | 78 hex: (DO ON)( ) | Wait step

78 hex: (DO ON)( ) | 83 hex: (DO OFF)( ) | 1.) Check diag-DO or diag-DI 2.) Switch step

83 hex: (DO ON)( ) | 8E hex: (DO OFF)( ) | Wait step

8E hex: (DO OFF)( ) | 99 hex: (DO OFF)( ) | 1.) Check diag-DO or diag-DI 2.) Switch step

99 hex: (DO OFF)( ) | A4 hex: (DO OFF)( ) | Wait step

A4 hex: (DO OFF)( ) | AF hex: (DO OFF)( ) | Check Diag-DO or Diag-DI

AF hex: (DO original state)( ) | C5 hex: (DO original state)( ) | Switching step

C5 hex: End of test

The expected states to be checked depend on the parameterized test mode (p10047).

The following expected states are tested in the test steps when testing the F-DOs:

The display format is as follows:

Test step (SL MA): Expected Diag-DO mode 1 | Expected DI 20 ... 23 mode 2 | Expected DI 20 ... 23 mode 3

(4C hex 57 hex): Diag-DO = 0 V | DI = 24 V | DI = 24 V

(62 hex 6D hex): Diag-DO = 0 V | DI = 0 V | DI = 0 V

(78 hex 83 hex): Diag-DO = 0 V | DI = 0 V | DI = 24 V

(8E hex 99 hex): Diag-DO = 24 V | DI = 0 V | DI = 24 V

(A4 hex AF hex): Diag-DO = 0 V | DI = 24 V | DI = 24 V

Example:

If an error with fault causes bb = 02 hex or 04 hex occurs in a test stop step, the test action for the fault took place in the previous test stop step. The expected states are tested in the next step.

Master signals fault value 0001\_04AF and slave signals fault value 0001\_04A4.

aaaa = 1 --> F-DO 0 is involved.

bb = 04 hex --> the test of the Diag-DO was unsuccessful.

cc = The expected states were tested in test stop step AF on the master and A4 on the slave.

The expected state Diag-DO = 0 V was checked in the table, i.e. Diag-DO was at 0 V instead of the expected 24 V.

The associated test action took place in the previous step (99 hex DO OFF, A4 hex DO OFF). Both DOs were switched to OFF.

**Remedy:** Check the wiring of the F-DIs and F-DOs and restart the test stop.  
**Note:**  
The fault is withdrawn if the test stop is successfully completed.  
For fault value = CCCCCCCC hex, DDDDDDDD hex, EEEEEEEE hex the following applies:  
These fault values occur together with fault F35152. Possible countermeasure:  
- check all parameters for the test stop.  
- you should also check whether the firmware version of the TM54F matches that of the Control Unit.  
- check p10001, p10017, p10046 and p10047.  
A POWER ON must be carried out after correcting the parameters.  
F-DI: Failsafe Digital Input  
F-DO: Failsafe Digital Output

---

**A35014**      **TM54F: Test stop for fail-safe digital inputs/outputs**

**Message value:** -  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** B\_INF, TM54F\_MA, TM54F\_SL, VECTOR\_G  
**Component:** Terminal Module (TM)      **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The time set in p10003 for the forced checking procedure (test stop) for the digital inputs/outputs has been exceeded. A new forced checking procedure is required.  
After the next time the forced checking procedure is selected, the message is withdrawn and the monitoring time is reset.  
**Note:**  
- this message does not result in a safety stop response.  
- the test must be performed within a defined, maximum time interval (p10003, maximum of 8760 hours) in order to comply with the requirements as laid down in the standards for timely fault detection and the conditions to calculate the failure rates of safety functions (PFH value). Operation beyond this maximum time period is permissible if it can be ensured that the forced checking procedure is performed before persons enter the hazardous area and who are depending on the safety functions correctly functioning.  
See also: p10003 (SI TM54F forced checking procedure timer)

**Remedy:** Carry out the forced checking procedure for the digital inputs/outputs.  
The signal source to select the forced checking procedure is set via binector input p10007.  
See also: p10007 (SI TM54F forced checking procedure F-DI/F-DO signal source)

---

**A35015**      **TM54F: Motor/Hydraulic Module replaced or configuration inconsistent**

**Message value:** Fault cause: %1 bin  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, TM54F\_MA, TM54F\_SL, VECTOR\_G  
**Component:** None      **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** Cyclic communication of at least one drive with the Terminal Module 54F (TM54F) is not active.  
Possible causes:  
- at least one Motor Module/Hydraulic Module was replaced (e.g. hardware was replaced).  
- the parameterization of the TM54F (p10010) is inconsistent with the number of drives, which have drive-based motion monitoring functions activated with TM54F.  
- For the signaled drive, it is not permissible that the "Safe motion monitoring without selection" (p9601.5 = 1) is parameterized.  
- And activated drive has no communication via DRIVE-CLiQ.  
- p10010 of the TM54F master module is not the same as p10010 of the TM54F slave module (in this case, F35051 is also output).  
- in p10010 of the TM54F master or slave module, the number of a drive object was entered several times.  
- the control of the Basis Functions via TM54F was parameterized, and simultaneously the Extended Safety Functions or ncSI were parameterized.

Alarm value (r2124, interpret binary):  
 yyyy yyyy xxxx xxxx bin  
 xxxx xxxx bin: inconsistent configuration  
 Bit 0 = 1: No communication with drive 1.  
 ...  
 Bit 5 = 1: No communication with drive 6.  
 yyyy yyyy bin: Motor Module/Hydraulic Module replaced or a DRIVE-CLiQ cable of a Motor Module/Hydraulic Module not inserted.  
 Bit 8 = 1: Motor Module/Hydraulic Module from drive 1 was replaced or does not communicate.  
 ...  
 Bit 13 = 1: Motor Module/Hydraulic Module from drive 6 was replaced or does not communicate.

**Note:**

When this alarm is active, none of the drives listed in the alarm value, which have drive-based motion monitoring functions operating with TM54F, are enabled.

For alarm value = 0:

The number of drive objects specified in p10010 is not equal to the number of drives that have drive-based motion monitoring functions that have been enabled.

See also: p10010 (SI TM54F drive object assignment)

**Remedy:**

For all drive objects specified in p10010, check whether the drive-based motion monitoring functions with TM54F are enabled (p9601).

Check as to whether F35051 is also output and remove the cause.

Check whether each drive object number is listed only once in the indices of p10010.

**Note:**

If a drive was deactivated and activated without first having established the DRIVE-CLiQ connection, then this alarm is also output.

When replacing a Motor Module/Hydraulic Module, carry out the following steps:

- start the copy function for the node identifier on the TM54F (p9700 = 1D hex).
- acknowledge the hardware CRC on the TM54F (p9701 = EC hex).
- save all parameters (p0977 = 1).
- carry out a POWER ON (switch-off/switch-on) for all components.

For SINUMERIK, the following applies:

HMI supports the replacement of components with Safety functions (operating area "Diagnostics" --> Softkey "Alarm list" --> Softkey "Confirm SI HW" etc.).

The precise procedure is given in the following document:

SINUMERIK Function Manual Safety Integrated

---

<b>A35016</b>	<b>TM54F: Net data communication with drive not established</b>
<b>Message value:</b>	-
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The cyclic net data communication within the Terminal Module 54F (TM54F) is still not active for at least one drive. <b>Note:</b> This message is output after the TM54F master and TM54F slave have booted and is automatically withdrawn as soon as communications have been established.
<b>Remedy:</b>	When replacing a Motor Module/Hydraulic Module, carry out the following steps: - start the copy function for the node identifier on the TM54F (p9700 = 1D hex). - acknowledge the hardware CRC on the TM54F (p9701 = EC hex). - save all parameters (p0977 = 1). - carry out a POWER ON (switch-off/switch-on) for all components. The following always applies: - for all drive objects specified in p10010, check whether the drive-based motion monitoring functions with TM54F are enabled (p9601). - check whether fault F35150 is present and if required, remove the cause of this fault.

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Note:**

The communication status of the individual drives is indicated in r10055. The corresponding drive objects can be identified together with p10010.

See also: r10055 (SI TM54F communication status drive-specific)

---

<b>F35040</b>	<b>TM54F: 24 V undervoltage</b>
<b>Message value:</b>	Fault cause: %1 bin
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	For the 24 V power supply for the Terminal Module 54F (TM54F) an undervoltage condition was detected. As fault response fail-safe input terminal signals are transferred to the motion monitoring functions. Fault value (r0949, interpret binary): Bit 0 = 1: Power supply undervoltage at connection X524. Bit 1 = 1: Power supply undervoltage at connection X514.
<b>Remedy:</b>	- check the 24 V DC power supply for the TM54F. - carry out safe acknowledgment (p10006).

---

<b>F35043</b>	<b>TM54F: 24 V overvoltage</b>
<b>Message value:</b>	-
<b>Message class:</b>	Supply voltage fault (overvoltage) (3)
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	For the 24 V power supply for the Terminal Module 54F (TM54F) an overvoltage condition was detected. As fault response fail-safe input terminal signals are transferred to the motion monitoring functions.
<b>Remedy:</b>	- check the 24 V DC power supply for the TM54F. - carry out safe acknowledgment (p10006).

---

<b>F35051</b>	<b>TM54F: Defect in a monitoring channel</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Safety monitoring channel has identified an error (10)
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The Terminal Module 54F (TM54F) has identified an error in the crosswise data comparison between the two control channels. This can be the result of incorrect parameterization. However, a fault may have occurred, which was identified by the Safety Integrated software (e.g. defective hardware). Perform the steps listed under "Remedy" in order to rule out any defective hardware. As fault response fail-safe input terminal signals are transferred to the motion monitoring functions. Fault value (r0949, interpret hexadecimal): aaaabbcc hex aaaa: A value greater than zero indicates an internal software error. bb: Data to be cross-compared that resulted in the error. If specified, check the specified parameters to ensure that they are the same for both the TM54F master and TM54F slave. bb = 00 hex: p10000[0] bb = 01 hex: p10001 bb = 02 hex: p10002 bb = 03 hex: p10006 bb = 04 hex: p10008

bb = 05 hex: p10010  
bb = 06 hex: p10011  
bb = 07 hex: p10020  
bb = 08 hex: p10021  
bb = 09 hex: p10022  
bb = 0A hex: p10023  
bb = 0B hex: p10024  
bb = 0C hex: p10025  
bb = 0D hex: p10026  
bb = 0E hex: p10027  
bb = 0F hex: p10028  
bb = 10 hex: p10036  
bb = 11 hex: p10037  
bb = 12 hex: p10038  
bb = 13 hex: p10039  
bb = 14 hex: p10040  
bb = 15 hex: p10041  
bb = 16 hex: p10042  
bb = 17 hex: p10043  
bb = 18 hex: p10044  
bb = 19 hex: p10045  
bb = 1A hex: p10046  
bb = 1B hex: p10041  
bb = 1C hex: p10046  
bb = 1D ... 1F hex: p10017, p10002, p10000  
bb = 20 ... 2A hex: p10040, p10046, p10047  
bb = 2B hex: error in the data for test stop initialization  
bb = 2C hex: error in the data for initializing the input/output calculation  
bb = 2D ... 45 hex: error in the data for the output calculation p10042 ... p10045  
bb = 46 ... 63 hex: error in the data for the calculation of drive group 1  
bb = 64 ... 81 hex: error in the data for the calculation of drive group 2  
bb = 82 ... 9F hex: error in the data for the calculation of drive group 3  
bb = A0 ... BD hex: error in the data for the calculation of the drive group 4  
bb = BE hex: debounce time of the fail-safe inputs (F-DI) p10017  
bb = BF hex: debounce time of the single-channel inputs (DI) p10017  
bb = C0 hex: debounce time of the Diag inputs p10017  
bb = C1 hex: error in the internal data for p10030 SDI positive  
bb = C2 hex: error in the internal data for p10031 SDI negative  
bb = C3 ... CA hex: error in the data to calculate the drive groups p10030 ... p10031  
bb = CB hex: p10032  
bb = CC hex: p10033  
bb = CD hex: p10009  
bb = CE ... CF error in the data for drive group 1 SLP parameter p10032 ... p10033  
bb = D0 ... D1 error in the data for drive group 2 SLP parameter p10032 ... p10033  
bb = D2 ... D3 error in the data for drive group 3 SLP parameter p10032 ... p10033  
bb = D4 ... D5 error in the data for drive group 4 SLP parameter p10032 ... p10033  
bb = D6 error in the data for initializing the retract function  
bb = D7 error in the data for the retract function SLP  
bb = D8 error in parameter p10000[1...5]  
bb = D9 ... E3 error in the internal data of the axis communication  
bb = E4 ... F2 error in the internal data of the discrepancy check  
cc: indicates the index of the data to be cross-compared that resulted in the error.

## 4 Faults and alarms

### 4.2 List of faults and alarms

- Remedy:**
- Carry out the following steps on the TM54F:
    - check the specified parameters for incorrect parameterization.
    - activate the safety commissioning mode (p0010 = 95).
    - start the copy function for SI parameters (p9700 = 57 hex).
    - acknowledge complete data change (p9701 = AC hex).
    - exit the safety commissioning mode (p0010 = 0).
    - save all parameters (p0977 = 1).
    - carry out safe acknowledgment (p10006).
- For an internal software error (aaaa > 0):
- For TM54F, upgrade the firmware to a later version.
  - contact Technical Support.
  - replace the TM54F.

---

<b>F35052 (A)</b>	<b>TM54F: Internal hardware error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	An internal software/hardware error has been detected on the Terminal Module 54F (TM54F). Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	<ul style="list-style-type: none"><li>- check the electrical cabinet design and cable routing for EMC compliance</li><li>- upgrade TM54F firmware to more recent version.</li><li>- contact Technical Support.</li><li>- replace the TM54F.</li></ul>		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F35053</b>	<b>TM54F: Temperature fault threshold exceeded</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Overtemperature of the electronic components (6)		
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The temperature measured using the temperature sensing on the TM54F has exceeded the threshold value to initiate this fault. As fault response fail-safe input terminal signals are transferred to the motion monitoring functions. Fault value (r0949, interpret decimal): Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	<ul style="list-style-type: none"><li>- allow the TM54F to cool down.</li><li>- carry out safe acknowledgment (p10006).</li></ul>		

---

<b>A35054</b>	<b>TM54F: Temperature alarm threshold exceeded</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Overtemperature of the electronic components (6)		
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The temperature measured using the temperature sensing on the TM54F has exceeded the threshold value to initiate this alarm.		
<b>Remedy:</b>	<ul style="list-style-type: none"><li>- allow the TM54F to cool down.</li><li>- carry out safe acknowledgment (p10006).</li></ul>		

---

**A35075 (F) TM54F: Error during internal communication**

**Message value:** %1  
**Message class:** Hardware/software error (1)  
**Drive object:** B\_INF, TM54F\_MA, TM54F\_SL, VECTOR\_G  
**Component:** Terminal Module (TM) **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** An internal communications error has occurred in the Terminal Module 54F (TM54F).  
This message is also output in the following cases:  
- parameter p10000 (TM54F master) is not set the same as p10000 (TM54F slave).  
- parameter p10010 (TM54F master) is not set the same as p10010 (TM54F slave).  
Alarm value (r2124, interpret decimal):  
Only for internal Siemens diagnostics.  
**Remedy:** For p10010/p10000 from the TM54F master not equal to the TM54F slave:  
- start the copy function for the node identifier on the TM54F (p9700 = 1D hex).  
- acknowledge the hardware CRC on the TM54F (p9701 = EC hex).  
- save all parameters (p0977 = 1).  
- carry out a POWER ON (switch-off/switch-on) for all components.  
For internal communication errors:  
- check the electrical cabinet design and cable routing for EMC compliance  
- upgrade the software on the TM54F.  
- contact Technical Support.  
- replace the TM54F.  
Reaction upon F: NONE  
Acknowl. upon F: IMMEDIATELY (POWER ON)

---

**A35080 (F) TM54F: Checksum error safety parameters**

**Message value:** %1  
**Message class:** Safety monitoring channel has identified an error (10)  
**Drive object:** B\_INF, TM54F\_MA, TM54F\_SL, VECTOR\_G  
**Component:** Terminal Module (TM) **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The calculated checksum entered in r10004 over the safety-relevant parameters does not match the reference checksum saved in p10005 at the last machine acceptance.  
Fault value (r0949, interpret binary):  
Bit 0 = 1: Checksum error for functional SI parameters.  
Bit 1 = 1: Checksum error for SI parameters for component assignment.  
**Remedy:**  
- check the safety-relevant parameters and if required, correct.  
- set the reference checksum to the actual checksum.  
- acknowledge the hardware replacement.  
- carry out a POWER ON (switch off/on).  
- carry out an acceptance test.  
Reaction upon F: NONE  
Acknowl. upon F: IMMEDIATELY (POWER ON)

---

<b>A35081 (F)</b>	<b>TM54F: Static (steady state) 1 signal at the F-DI for safe acknowledgment</b>	
<b>Message value:</b>	-	
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)	
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G	
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE	
<b>Acknowledge:</b>	NONE	
<b>Cause:</b>	A logical 1 signal is present at the F-DI configured in p10006 for more than 10 seconds. If, at the F-DI no acknowledgment was performed for safe acknowledgment, then a steady-state logical and 0 signal must be present. This avoids unintentional safety-relevant acknowledgment (or the "Internal Event Acknowledge" signal) if a wire breaks or one of the two digital inputs bounces.	
<b>Remedy:</b>	Set the fail-safe digital input (F-DI) to a logical 0 signal (p10006). Note: F-DI: Failsafe Digital Input	
Reaction upon F:	NONE	
Acknowl. upon F:	IMMEDIATELY	

---

<b>F35150</b>	<b>TM54F: Communication error</b>	
<b>Message value:</b>	%1	
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)	
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G	
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE	
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)	
<b>Cause:</b>	A communication error between the TM54F master and Control Unit or between the TM54F slave and the Motor Module/Hydraulic Module was detected. Fault value (r0949, interpret hexadecimal): Only for internal Siemens troubleshooting.	
<b>Remedy:</b>	When replacing a Motor Module/Hydraulic Module, carry out the following steps: - start the copy function for the node identifier on the TM54F (p9700 = 1D hex). - acknowledge the hardware CRC on the TM54F (p9701 = EC hex). - save all parameters (p0977 = 1). - carry out a POWER ON (switch off/on) for all components. The following always applies: - check the electrical cabinet design and cable routing for EMC compliance - upgrade the software on the TM54F. - contact Technical Support. - replace the TM54F.	

---

<b>F35151</b>	<b>TM54F: Discrepancy error</b>	
<b>Message value:</b>	%1	
<b>Message class:</b>	Error in the parameterization / configuration / commissioning procedure (18)	
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G	
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b> GLOBAL
<b>Reaction:</b>	NONE	
<b>Acknowledge:</b>	IMMEDIATELY	
<b>Cause:</b>	The safety input terminals or output terminals show a different state longer than that parameterized in p10002. Fault value (r0949, interpret hexadecimal): yyyyxxxx hex xxxx: The safety-relevant input terminals F-DI indicate a discrepancy. Bit 0: Discrepancy for F-DI 0 ... Bit 9: Discrepancy for F-DI 9 yyyy: The safety-relevant output terminals F-DO indicate a discrepancy.	

Bit 0: Discrepancy for F-DO 0

...

Bit 3: Discrepancy for F-DO 3

Note:

If several discrepancy errors occur consecutively, then this fault is only signaled for the first error that occurs.

The following options are available to analyze all of the discrepancy errors:

- using the commissioning software, evaluate the input states and output states of the TM54F. All discrepancy errors are displayed here.

- compare parameters p10051 and p10052 from the TM54F master and TM54F slave for discrepancy.

**Remedy:**

Check the wiring of the corresponding F-DI (contact problems).

Discrepancy errors in the fail-safe digital inputs (F-DI) can only be completely acknowledged if, after the cause of the error was resolved, safe acknowledgment was carried out (see p10006). As long as safety acknowledgment was not carried out, the corresponding F-DI stays in the safe state internally.

Sets the discrepancy time for cyclic switching operations at the F-DIs:

For cyclic switching operations at the fail-safe digital inputs (F-DI), it may be necessary to adapt the discrepancy time to the switching frequency:

If the period of a cyclic switching pulse corresponds to twice the value of p10002, then the following formulas should be checked:

-  $p10002 < (tp / 2) - td$  (discrepancy time must be less than half the period minus the actual discrepancy time)

-  $p10002 \geq p10000$  (discrepancy time must be no less than p10000)

-  $p10002 > td$  (discrepancy time must be greater than the switch discrepancy time which may actually apply)

td: possible actual discrepancy time (in ms) that can occur with a switching operation. This must correspond to at least 1 SI sampling cycle (see p10000).

tp: period for a switching operation in ms.

For cyclic switching operations and when debounce (p10017) is active, the discrepancy time is directly specified by the debounce time.

If the period of a cyclic switching pulse corresponds to twice the debounce time, then the following formulas should be checked.

-  $p10002 < p10017 + 1ms - td$

-  $p10002 > td$

-  $p10002 \geq p10000$

Example:

If the SI sampling cycle is 12 ms and the switching frequency is 110 ms (p10017 = 0), the maximum discrepancy time which can be set is as follows:

$p10002 \leq 110/2 \text{ ms} - 12 \text{ ms} = 43 \text{ ms}$  --> rounded-off, the following is obtained  $p10002 \leq 36 \text{ ms}$

Since the discrepancy time can only be accepted as a whole SI sampling time, the value will need to be rounded up or down to a whole SI sampling time value if it is not an exact integer multiple of an SI sampling time.

Basic secondary condition to set the discrepancy time:

The discrepancy time of the FDIs must always be set higher than the highest value p9780 (the drives that use safety with TM54F).

F-DI: Failsafe Digital Input

F-DO: Failsafe Digital Output

**F35152**

**TM54F: Internal software error**

**Message value:**

%1

**Message class:**

Hardware/software error (1)

**Drive object:**

B\_INF, TM54F\_MA, TM54F\_SL, VECTOR\_G

**Component:**

Terminal Module (TM)

**Propagation:**

GLOBAL

**Reaction:**

NONE

**Acknowledge:**

IMMEDIATELY

**Cause:**

An internal software error has occurred in the Terminal Module 54F (TM54F).

The fail-safe digital inputs and digital outputs (F-DI, F-DO) on the TM54F have been set to the safe state.

Fault value (r0949, interpret decimal):

Only for internal Siemens troubleshooting.

## 4 Faults and alarms

### 4.2 List of faults and alarms

Note:

F-DI: Failsafe Digital Input

F-DO: Failsafe Digital Output

**Remedy:**

Check that the firmware version of the TM54F matches the Control Unit's firmware version.

The automatic firmware update must be activated in the project.

Note:

This signal will also appear, for example, in conjunction with fault F35013. In this case you should check all the parameters for the test stop on the TM54F (p10001, p10003, p10007, p10041, p10046, p10047). In this case, a POWER ON is required after the parameters have been corrected.

---

#### **A35200 (F, N)**

#### **TM: Calibration data**

**Message value:**

%1

**Message class:**

Hardware/software error (1)

**Drive object:**

B\_INF, TM120, TM150, TM31, VECTOR\_G

**Component:**

Terminal Module (TM)

**Propagation:**

BICO

**Reaction:**

NONE

**Acknowledge:**

NONE

**Cause:**

An error was detected in the calibration data of the Terminal Module.

Alarm value (r2124, interpret decimal):

ddcbaa dec: dd = component number, c = AI/AO, b = fault type, aa = number

c = 0: analog input (AI)

c = 1: analog output (AO)

b = 0: No calibration data available.

b = 1: Offset too high (> 100 mV).

**Remedy:**

- carry out a POWER ON (switch off/on) for all components.

- replace the component if necessary.

Reaction upon F:

NONE

Acknowl. upon F:

IMMEDIATELY (POWER ON)

Reaction upon N:

NONE

Acknowl. upon N:

NONE

---

#### **F35207 (N, A)**

#### **TM: Temperature fault/alarm threshold channel 0 exceeded**

**Message value:**

%1

**Message class:**

External measured value / signal state outside the permissible range (16)

**Drive object:**

B\_INF, TM120, TM150, TM31, VECTOR\_G

**Component:**

Terminal Module (TM)

**Propagation:**

BICO

**Reaction:**

Vector: OFF2 (NONE, OFF1, OFF3)

Infeed: OFF2 (NONE, OFF1)

**Acknowledge:**

IMMEDIATELY (POWER ON)

**Cause:**

For the temperature evaluation via the Terminal Module (TM), at least one of the following conditions to initiate this fault is fulfilled:

- alarm threshold has been exceeded longer than that set in the timer (p4102[0], p4103[0]).

or

- fault threshold exceeded (p4102[1]).

Note:

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[0] = 1, 4), the following applies:

- if r4101[0] > 1650 ohms, the temperature r4105[0] = 250 °C

- if r4101[0] <= 1650 ohms, the temperature r4105[0] = -50 °C

The temperature actual value is displayed via connector output r4105[0] and can be interconnected.

Notice:

This fault only causes the drive to shut down if there is at least one BICO interconnection between the drive and the Terminal Module.

Fault value (r0949, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

<b>Remedy:</b>	- allow the temperature sensor to cool down to below p4102[1] - hysteresis (5 K, for TM150, can be set using p4118[0]). - if required, set the fault response to NONE (p2100, p2101). See also: p4102
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F35208 (N, A)</b>	<b>TM: Temperature fault/alarm threshold channel 1 exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	B_INF, TM120, TM150, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	Vector: OFF2 (NONE, OFF1, OFF3) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	For the temperature evaluation via the Terminal Module (TM), at least one of the following conditions to initiate this fault is fulfilled: - alarm threshold has been exceeded longer than that set in the timer (p4102[2], p4103[1]). or - fault threshold exceeded (p4102[3]). Note: For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[1] = 1, 4), the following applies: - if r4101[1] > 1650 ohms, the temperature r4105[1] = 250 °C - if r4101[1] <= 1650 ohms, the temperature r4105[1] = -50 °C The temperature actual value is displayed via connector output r4105[1] and can be interconnected. Notice: This fault only causes the drive to shut down if there is at least one BICO interconnection between the drive and the Terminal Module. Fault value (r0949, interpret decimal): Temperature actual value at the time of initiation [0.1 °C].
<b>Remedy:</b>	- allow the temperature sensor to cool down to below p4102[3] - hysteresis (5 K, for TM150, can be set using p4118[1]). - if required, set the fault response to NONE (p2100, p2101). See also: p4102
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F35209 (N, A)</b>	<b>TM: Temperature fault/alarm threshold channel 2 exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	B_INF, TM120, TM150, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	Vector: OFF2 (NONE, OFF1, OFF3) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	For the temperature evaluation via the Terminal Module (TM), at least one of the following conditions to initiate this fault is fulfilled: - alarm threshold has been exceeded longer than that set in the timer (p4102[4], p4103[2]). or - fault threshold exceeded (p4102[5]).

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Note:**

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[2] = 1, 4), the following applies:

- if r4101[2] > 1650 ohms, the temperature r4105[2] = 250 °C
- if r4101[2] <= 1650 ohms, the temperature r4105[2] = -50 °C

The temperature actual value is displayed via connector output r4105[2] and can be interconnected.

**Notice:**

This fault only causes the drive to shut down if there is at least one BICO interconnection between the drive and the Terminal Module.

Fault value (r0949, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:**

- allow the temperature sensor to cool down to below p4102[5] - hysteresis (5 K, for TM150, can be set using p4118[2]).
- if required, set the fault response to NONE (p2100, p2101).

See also: p4102

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

#### **F35210 (N, A)**

#### **TM: Temperature fault/alarm threshold channel 3 exceeded**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, TM120, TM150, VECTOR\_G

**Component:** Terminal Module (TM)

**Propagation:** BICO

**Reaction:** Vector: OFF2 (NONE, OFF1, OFF3)

Infeed: OFF2 (NONE, OFF1)

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** For the temperature evaluation via the Terminal Module (TM), at least one of the following conditions to initiate this fault is fulfilled:

- alarm threshold has been exceeded longer than that set in the timer (p4102[6], p4103[3]).
- or
- fault threshold exceeded (p4102[7]).

**Note:**

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[3] = 1, 4), the following applies:

- if r4101[3] > 1650 ohms, the temperature r4105[3] = 250 °C
- if r4101[3] <= 1650 ohms, the temperature r4105[3] = -50 °C

The temperature actual value is displayed via connector output r4105[3] and can be interconnected.

**Notice:**

This fault only causes the drive to shut down if there is at least one BICO interconnection between the drive and the Terminal Module.

Fault value (r0949, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:**

- allow the temperature sensor to cool down to below p4102[7] - hysteresis (5 K, for TM150, can be set using p4118[3]).
- if required, set the fault response to NONE (p2100, p2101).

See also: p4102

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

<b>A35211 (F, N)</b>	<b>TM: Temperature alarm threshold channel 0 exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The temperature measured using the temperature sensing of the Terminal Module (TM) (r4105[0]) has exceeded the threshold value to initiate this alarm (p4102[0]). Note: For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[0] = 1, 4), the following applies: - if r4101[0] > 1650 ohms, the temperature r4105[0] = 250 °C - if r4101[0] <= 1650 ohms, the temperature r4105[0] = -50 °C Alarm value (r2124, interpret decimal): Temperature actual value at the time of initiation [0.1 °C].
<b>Remedy:</b>	Allow the temperature sensor to cool down to below p4102[0] - hysteresis (5 K, for TM150, can be set using p4118[0]). See also: p4102
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A35212 (F, N)</b>	<b>TM: Temperature alarm threshold channel 1 exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	B_INF, TM120, TM150, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The temperature measured using the temperature sensing of the Terminal Module (TM) (r4105[1]) has exceeded the threshold value to initiate this alarm (p4102[2]). Note: For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[1] = 1, 4), the following applies: - if r4101[1] > 1650 ohms, the temperature r4105[1] = 250 °C - if r4101[1] <= 1650 ohms, the temperature r4105[1] = -50 °C Alarm value (r2124, interpret decimal): Temperature actual value at the time of initiation [0.1 °C].
<b>Remedy:</b>	Allow the temperature sensor to cool down to below p4102[4] - hysteresis (5 K, for TM150, can be set using p4118[1]). See also: p4102
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A35213 (F, N)</b>	<b>TM: Temperature alarm threshold channel 2 exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	B_INF, TM120, TM150, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The temperature measured using the temperature sensing of the Terminal Module (TM) (r4105[2]) has exceeded the threshold value to initiate this alarm (p4102[4]).

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Note:**

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[2] = 1, 4), the following applies:

- if r4101[2] > 1650 ohms, the temperature r4105[2] = 250 °C
- if r4101[2] <= 1650 ohms, the temperature r4105[2] = -50 °C

Alarm value (r2124, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:** Allow the temperature sensor to cool down to below p4102[4] - hysteresis (5 K, for TM150, can be set using p4118[2]).

See also: p4102

Reaction upon F: NONE  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **A35214 (F, N) TM: Temperature alarm threshold channel 3 exceeded**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, TM120, TM150, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The temperature measured using the temperature sensing of the Terminal Module (TM) (r4105[3]) has exceeded the threshold value to initiate this alarm (p4102[6]).

**Note:**

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[3] = 1, 4), the following applies:

- if r4101[3] > 1650 ohms, the temperature r4105[3] = 250 °C
- if r4101[3] <= 1650 ohms, the temperature r4105[3] = -50 °C

Alarm value (r2124, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:** Allow the temperature sensor to cool down to below p4102[6] - hysteresis (5 K, for TM150, can be set using p4118[3]).

See also: p4102

Reaction upon F: NONE  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **F35220 (N, A) TM: Frequency limit reached for signal output**

**Message value:** -

**Message class:** Application/technological function faulted (17)

**Drive object:** B\_INF, TM31, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** Vector: OFF1 (NONE, OFF2, OFF3)

Infeed: OFF1 (NONE, OFF2)

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** The signals output from the Terminal Module 41 (TM41) for tracks A/B have reached the limit frequency. The output signals are no longer in synchronism with the specified setpoint.

SIMOTION (p4400 = 0) operating mode:

- if the TM41 has been configured as the technology project, this fault is also output in response to short-circuited A/B signals in X520.

SINAMICS (p4400 = 1) operating mode:

- the fine resolution of TM41 in p0418 does not match that of the connector input that was interconnected at p4420
- the encoder position actual value r0479 interconnected at connector input p4420 has an excessively high actual speed
- the output signals correspond to a speed, which is greater than the maximum speed (r1082 of TM41).

**Remedy:** SIMOTION (p4400 = 0) operating mode:  
 - enter a lower speed setpoint (p1155).  
 - reduce the encoder pulse number (p0408).  
 - check track A/B for short-circuits.  
 SINAMICS (p4400 = 1) operating mode:  
 - enter a lower speed setpoint (p1155).  
 - reduce the encoder pulse number (p0408).  
 Notice:  
 The output signal is no longer monitored after changing the message type to "Alarm" (A).  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F35221 (N, A) TM: Setpoint - actual value deviation outside the tolerance range**  
**Message value:** -  
**Message class:** Application/technological function faulted (17)  
**Drive object:** B\_INF, TM31, VECTOR\_G  
**Component:** Terminal Module (TM) **Propagation:** BICO  
**Reaction:** Vector: OFF1 (NONE, OFF2, OFF3)  
 Infeed: OFF1 (NONE, OFF2)  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** The deviation between the setpoint and the output signals (track A/B) exceeds the tolerance of +/-3 %. The deviation between the internal and external measured value is too high (> 1000 pulses).  
**Remedy:**  
 - reduce the basic clock cycle (p0110, p0111).  
 - if required, replace the component (e.g. internal short-circuit).  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**A35222 (F, N) TM: Encoder pulse number not permissible**  
**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, TM31, VECTOR\_G  
**Component:** None **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The encoder pulse number entered does not match the permissible pulse number from a hardware perspective.  
 Alarm value (r2124, interpret decimal):  
 1: Encoder pulse number is too high.  
 2: Encoder pulse number is too low.  
 4: Encoder pulse number is less than the zero mark offset (p4426).  
**Remedy:**  
 - enter the encoder pulse number in the permissible range (p0408).  
 - if necessary, replace TM41 SAC with TM41 DAC.  
 Note:  
 TM41 SAC: Article No. = 6SL3055-0AA00-3PA0  
 TM41 DAC: Article No. = 6SL3055-0AA00-3PA1  
 The following applies for TM41 SAC:  
 - minimum/maximum value for p0408: 1000/8192  
 The following applies for TM41 DAC:  
 - minimum/maximum value for p0408: 1000/16384  
 See also: p0408 (Rotary encoder pulse number)

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon F: Vector: OFF1 (NONE, OFF2, OFF3)  
Infeed: OFF1 (NONE, OFF2)  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**A35223 (F, N) TM: Zero mark offset not permissible**  
**Message value:** %1  
**Message class:** Application/technological function faulted (17)  
**Drive object:** B\_INF, TM31, VECTOR\_G  
**Component:** None **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The entered zero mark offset is not permissible.  
Alarm value (r2124, interpret decimal):  
1: Zero mark offset is too high.  
**Remedy:** Enter the zero mark offset in the permissible range (p4426).  
Reaction upon F: Vector: OFF1 (NONE, OFF2, OFF3)  
Infeed: OFF1 (NONE, OFF2)  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**F35230 TM: Hardware fault**  
**Message value:** %1  
**Message class:** Hardware/software error (1)  
**Drive object:** B\_INF, TM120, TM150, TM31, VECTOR\_G  
**Component:** Terminal Module (TM) **Propagation:** GLOBAL  
**Reaction:** Vector: NONE  
Infeed: OFF1 (NONE, OFF2)  
**Acknowledge:** POWER ON  
**Cause:** The Terminal Module (TM) used has signaled internal errors.  
Signals from this module may not be evaluated because they are very likely to be incorrect.  
**Remedy:** If required, replace the Terminal Module.

---

**F35233 DRIVE-CLiQ component function not supported**  
**Message value:** %1  
**Message class:** Error in the parameterization / configuration / commissioning procedure (18)  
**Drive object:** B\_INF, TM120, TM150, TM31, VECTOR\_G  
**Component:** Terminal Module (TM) **Propagation:** BICO  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** A function requested by the Control Unit is not supported by a DRIVE-CLiQ component.  
Fault value (r0949, interpret decimal):  
1: Terminal Module 31 does not support the function "Timer for temperature evaluation" (X522.7/8, p4103 > 0.000).  
4: The improved actual value resolution is not supported (p4401.4).  
5: The improved setpoint resolution is not supported (p4401.5).  
6: The residual value handling in the setpoint channel cannot be deactivated (p4401.6).  
7: Output frequencies greater than 750 kHz cannot be activated (p4401.7).  
**Remedy:** For fault value = 1:  
- Deactivate timer for temperature evaluation (X522.7/8) (p4103 = 0.000).  
- use Terminal Module 31 and the relevant firmware version to enable the "Timer for temperature evaluation" function (Article No. 6SL3055-0AA00-3AA1, firmware version 2.6 and higher).  
See also: p4103

---

<b>F35400 (N, A)</b>	<b>TM: Temperature fault/alarm threshold channel 4 exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	B_INF, TM150, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	Vector: OFF2 (NONE, OFF1, OFF3) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	For the temperature evaluation via the Terminal Module 150 (TM150), at least one of the following conditions to initiate this fault is fulfilled: - alarm threshold has been exceeded longer than that set in the timer (p4102[8], p4103[4]). or - fault threshold exceeded (p4102[9]). Note: For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[4] = 1, 4), the following applies: - if r4101[4] > 1650 ohms, the temperature r4105[4] = 250 °C - if r4101[4] <= 1650 ohms, the temperature r4105[4] = -50 °C The temperature actual value is displayed via connector output r4105[4] and can be interconnected. Notice: This fault only causes the drive to shut down if there is at least one BICO interconnection between the drive and the Terminal Module. Fault value (r0949, interpret decimal): Temperature actual value at the time of initiation [0.1 °C].
<b>Remedy:</b>	- allow the temperature sensor to cool down to below p4102[9] - hysteresis (p4118[4]). - if required, set the fault response to NONE (p2100, p2101). See also: p4102
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F35401 (N, A)</b>	<b>TM: Temperature fault/alarm threshold channel 5 exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	B_INF, TM150, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	Vector: OFF2 (NONE, OFF1, OFF3) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	For the temperature evaluation via the Terminal Module 150 (TM150), at least one of the following conditions to initiate this fault is fulfilled: - alarm threshold has been exceeded longer than that set in the timer (p4102[10], p4103[5]). or - fault threshold exceeded (p4102[11]). Note: For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[5] = 1, 4), the following applies: - if r4101[5] > 1650 ohms, the temperature r4105[5] = 250 °C - if r4101[5] <= 1650 ohms, the temperature r4105[5] = -50 °C The temperature actual value is displayed via connector output r4105[5] and can be interconnected. Notice: This fault only causes the drive to shut down if there is at least one BICO interconnection between the drive and the Terminal Module. Fault value (r0949, interpret decimal): Temperature actual value at the time of initiation [0.1 °C].

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:** - allow the temperature sensor to cool down to below p4102[11] - hysteresis (p4118[5]).  
- if required, set the fault response to NONE (p2100, p2101).  
See also: p4102

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

#### **F35402 (N, A) TM: Temperature fault/alarm threshold channel 6 exceeded**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, TM150, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** Vector: OFF2 (NONE, OFF1, OFF3)  
Infeed: OFF2 (NONE, OFF1)

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** For the temperature evaluation via the Terminal Module 150 (TM150), at least one of the following conditions to initiate this fault is fulfilled:

- alarm threshold has been exceeded longer than that set in the timer (p4102[12], p4103[6]).
- or
- fault threshold exceeded (p4102[13]).

Note:

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[6] = 1, 4), the following applies:

- if r4101[6] > 1650 ohms, the temperature r4105[6] = 250 °C
- if r4101[6] <= 1650 ohms, the temperature r4105[6] = -50 °C

The temperature actual value is displayed via connector output r4105[6] and can be interconnected.

Notice:

This fault only causes the drive to shut down if there is at least one BICO interconnection between the drive and the Terminal Module.

Fault value (r0949, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:** - allow the temperature sensor to cool down to below p4102[13] - hysteresis (p4118[6]).  
- if required, set the fault response to NONE (p2100, p2101).  
See also: p4102

Reaction upon N: NONE  
Acknowl. upon N: NONE  
Reaction upon A: NONE  
Acknowl. upon A: NONE

---

#### **F35403 (N, A) TM: Temperature fault/alarm threshold channel 7 exceeded**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, TM150, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** Vector: OFF2 (NONE, OFF1, OFF3)  
Infeed: OFF2 (NONE, OFF1)

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** For the temperature evaluation via the Terminal Module 150 (TM150), at least one of the following conditions to initiate this fault is fulfilled:

- alarm threshold has been exceeded longer than that set in the timer (p4102[14], p4103[7]).
- or
- fault threshold exceeded (p4102[15]).

**Note:**

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[7] = 1, 4), the following applies:

- if r4101[7] > 1650 ohms, the temperature r4105[7] = 250 °C
- if r4101[7] <= 1650 ohms, the temperature r4105[7] = -50 °C

The temperature actual value is displayed via connector output r4105[7] and can be interconnected.

**Notice:**

This fault only causes the drive to shut down if there is at least one BICO interconnection between the drive and the Terminal Module.

Fault value (r0949, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:**

- allow the temperature sensor to cool down to below p4102[15] - hysteresis (p4118[7]).
- if required, set the fault response to NONE (p2100, p2101).

See also: p4102

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

**F35404 (N, A) TM: Temperature fault/alarm threshold channel 8 exceeded**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, TM150, VECTOR\_G

**Component:** Terminal Module (TM)

**Propagation:** BICO

**Reaction:** Vector: OFF2 (NONE, OFF1, OFF3)

Infeed: OFF2 (NONE, OFF1)

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** For the temperature evaluation via the Terminal Module 150 (TM150), at least one of the following conditions to initiate this fault is fulfilled:

- alarm threshold has been exceeded longer than that set in the timer (p4102[16], p4103[8]).
- or
- fault threshold exceeded (p4102[17]).

**Note:**

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[8] = 1, 4), the following applies:

- if r4101[8] > 1650 ohms, the temperature r4105[8] = 250 °C
- if r4101[8] <= 1650 ohms, the temperature r4105[8] = -50 °C

The temperature actual value is displayed via connector output r4105[8] and can be interconnected.

**Notice:**

This fault only causes the drive to shut down if there is at least one BICO interconnection between the drive and the Terminal Module.

Fault value (r0949, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:**

- allow the temperature sensor to cool down to below p4102[17] - hysteresis (p4118[8]).
- if required, set the fault response to NONE (p2100, p2101).

See also: p4102

Reaction upon N: NONE

Acknowl. upon N: NONE

Reaction upon A: NONE

Acknowl. upon A: NONE

---

<b>F35405 (N, A)</b>	<b>TM: Temperature fault/alarm threshold channel 9 exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	B_INF, TM150, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <span style="float: right;"><b>Propagation:</b> BICO</span>
<b>Reaction:</b>	Vector: OFF2 (NONE, OFF1, OFF3) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	For the temperature evaluation via the Terminal Module 150 (TM150), at least one of the following conditions to initiate this fault is fulfilled: - alarm threshold has been exceeded longer than that set in the timer (p4102[18], p4103[9]). or - fault threshold exceeded (p4102[19]). Note: For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[9] = 1, 4), the following applies: - if r4101[9] > 1650 ohms, the temperature r4105[9] = 250 °C - if r4101[9] <= 1650 ohms, the temperature r4105[9] = -50 °C The temperature actual value is displayed via connector output r4105[9] and can be interconnected. Notice: This fault only causes the drive to shut down if there is at least one BICO interconnection between the drive and the Terminal Module. Fault value (r0949, interpret decimal): Temperature actual value at the time of initiation [0.1 °C].
<b>Remedy:</b>	- allow the temperature sensor to cool down to below p4102[19] - hysteresis (p4118[9]). - if required, set the fault response to NONE (p2100, p2101). See also: p4102
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F35406 (N, A)</b>	<b>TM: Temperature fault/alarm threshold channel 10 exceeded</b>
<b>Message value:</b>	%1
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	B_INF, TM150, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <span style="float: right;"><b>Propagation:</b> BICO</span>
<b>Reaction:</b>	Vector: OFF2 (NONE, OFF1, OFF3) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	For the temperature evaluation via the Terminal Module 150 (TM150), at least one of the following conditions to initiate this fault is fulfilled: - alarm threshold has been exceeded longer than that set in the timer (p4102[20], p4103[10]). or - fault threshold exceeded (p4102[21]). Note: For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[10] = 1, 4), the following applies: - if r4101[10] > 1650 ohms, the temperature r4105[10] = 250 °C - if r4101[10] <= 1650 ohms, the temperature r4105[10] = -50 °C The temperature actual value is displayed via connector output r4105[10] and can be interconnected. Notice: This fault only causes the drive to shut down if there is at least one BICO interconnection between the drive and the Terminal Module. Fault value (r0949, interpret decimal): Temperature actual value at the time of initiation [0.1 °C].

**Remedy:** - allow the temperature sensor to cool down to below p4102[21] - hysteresis (p4118[10]).  
 - if required, set the fault response to NONE (p2100, p2101).  
 See also: p4102

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

### **F35407 (N, A) TM: Temperature fault/alarm threshold channel 11 exceeded**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, TM150, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** Vector: OFF2 (NONE, OFF1, OFF3)  
 Infeed: OFF2 (NONE, OFF1)

**Acknowledge:** IMMEDIATELY (POWER ON)

**Cause:** For the temperature evaluation via the Terminal Module 150 (TM150), at least one of the following conditions to initiate this fault is fulfilled:

- alarm threshold has been exceeded longer than that set in the timer (p4102[22], p4103[11]).  
 or

- fault threshold exceeded (p4102[23]).

Note:

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[11] = 1, 4), the following applies:

- if r4101[11] > 1650 ohms, the temperature r4105[11] = 250 °C

- if r4101[11] <= 1650 ohms, the temperature r4105[11] = -50 °C

The temperature actual value is displayed via connector output r4105[11] and can be interconnected.

Notice:

This fault only causes the drive to shut down if there is at least one BICO interconnection between the drive and the Terminal Module.

Fault value (r0949, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:** - allow the temperature sensor to cool down to below p4102[23] - hysteresis (p4118[11]).  
 - if required, set the fault response to NONE (p2100, p2101).  
 See also: p4102

Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

---

### **A35410 (F, N) TM: Temperature alarm threshold channel 4 exceeded**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, TM150, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The temperature (r4105[4]) measured using the temperature sensing of the Terminal Module 150 (TM150) has exceeded the threshold value to initiate this alarm (p4102[8]).

Note:

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[4] = 1, 4), the following applies:

- if r4101[4] > 1650 ohms, the temperature r4105[4] = 250 °C

- if r4101[4] <= 1650 ohms, the temperature r4105[4] = -50 °C

Alarm value (r2124, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:** Allow the temperature sensor to cool down to below p4102[8] - hysteresis (p4118[4]).  
 See also: p4102

## 4 Faults and alarms

### 4.2 List of faults and alarms

Reaction upon F: NONE  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

#### **A35411 (F, N) TM: Temperature alarm threshold channel 5 exceeded**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, TM150, VECTOR\_G

**Component:** Terminal Module (TM)

**Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The temperature (r4105[5]) measured using the temperature sensing of the Terminal Module 150 (TM150) has exceeded the threshold value to initiate this alarm (p4102[10]).

Note:

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[5] = 1, 4), the following applies:

- if r4101[5] > 1650 ohms, the temperature r4105[5] = 250 °C

- if r4101[5] <= 1650 ohms, the temperature r4105[5] = -50 °C

Alarm value (r2124, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:** Allow the temperature sensor to cool down to below p4102[10] - hysteresis (p4118[5]).

See also: p4102

Reaction upon F: NONE

Acknowl. upon F: IMMEDIATELY (POWER ON)

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **A35412 (F, N) TM: Temperature alarm threshold channel 6 exceeded**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, TM150, VECTOR\_G

**Component:** Terminal Module (TM)

**Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The temperature (r4105[6]) measured using the temperature sensing of the Terminal Module 150 (TM150) has exceeded the threshold value to initiate this alarm (p4102[12]).

Note:

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[6] = 1, 4), the following applies:

- if r4101[6] > 1650 ohms, the temperature r4105[6] = 250 °C

- if r4101[6] <= 1650 ohms, the temperature r4105[6] = -50 °C

Alarm value (r2124, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:** Allow the temperature sensor to cool down to below p4102[12] - hysteresis (p4118[6]).

See also: p4102

Reaction upon F: NONE

Acknowl. upon F: IMMEDIATELY (POWER ON)

Reaction upon N: NONE

Acknowl. upon N: NONE

---

<b>A35413 (F, N)</b>	<b>TM: Temperature alarm threshold channel 7 exceeded</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)		
<b>Drive object:</b>	B_INF, TM150, VECTOR_G		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The temperature (r4105[7]) measured using the temperature sensing of the Terminal Module 150 (TM150) has exceeded the threshold value to initiate this alarm (p4102[14]). Note: For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[7] = 1, 4), the following applies: - if r4101[7] > 1650 ohms, the temperature r4105[7] = 250 °C - if r4101[7] <= 1650 ohms, the temperature r4105[7] = -50 °C Alarm value (r2124, interpret decimal): Temperature actual value at the time of initiation [0.1 °C].		
<b>Remedy:</b>	Allow the temperature sensor to cool down to below p4102[14] - hysteresis (p4118[7]). See also: p4102		
Reaction upon F:	NONE		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A35414 (F, N)</b>	<b>TM: Temperature alarm threshold channel 8 exceeded</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)		
<b>Drive object:</b>	B_INF, TM150, VECTOR_G		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The temperature (r4105[8]) measured using the temperature sensing of the Terminal Module 150 (TM150) has exceeded the threshold value to initiate this alarm (p4102[16]). Note: For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[8] = 1, 4), the following applies: - if r4101[8] > 1650 ohms, the temperature r4105[8] = 250 °C - if r4101[8] <= 1650 ohms, the temperature r4105[8] = -50 °C Alarm value (r2124, interpret decimal): Temperature actual value at the time of initiation [0.1 °C].		
<b>Remedy:</b>	Allow the temperature sensor to cool down to below p4102[16] - hysteresis (p4118[8]). See also: p4102		
Reaction upon F:	NONE		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A35415 (F, N)</b>	<b>TM: Temperature alarm threshold channel 9 exceeded</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)		
<b>Drive object:</b>	B_INF, TM150, VECTOR_G		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The temperature (r4105[9]) measured using the temperature sensing of the Terminal Module 150 (TM150) has exceeded the threshold value to initiate this alarm (p4102[18]).		

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Note:**

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[9] = 1, 4), the following applies:

- if r4101[9] > 1650 ohms, the temperature r4105[9] = 250 °C

- if r4101[9] <= 1650 ohms, the temperature r4105[9] = -50 °C

Alarm value (r2124, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:**

Allow the temperature sensor to cool down to below p4102[18] - hysteresis (p4118[9]).

See also: p4102

Reaction upon F: NONE

Acknowl. upon F: IMMEDIATELY (POWER ON)

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **A35416 (F, N) TM: Temperature alarm threshold channel 10 exceeded**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, TM150, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The temperature (r4105[10]) measured using the temperature sensing of the Terminal Module 150 (TM150) has exceeded the threshold value to initiate this alarm (p4102[20]).

**Note:**

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[10] = 1, 4), the following applies:

- if r4101[10] > 1650 ohms, the temperature r4105[10] = 250 °C

- if r4101[10] <= 1650 ohms, the temperature r4105[10] = -50 °C

Alarm value (r2124, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:**

Allow the temperature sensor to cool down to below p4102[20] - hysteresis (p4118[10]).

See also: p4102

Reaction upon F: NONE

Acknowl. upon F: IMMEDIATELY (POWER ON)

Reaction upon N: NONE

Acknowl. upon N: NONE

---

#### **A35417 (F, N) TM: Temperature alarm threshold channel 11 exceeded**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, TM150, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The temperature (r4105[11]) measured using the temperature sensing of the Terminal Module 150 (TM150) has exceeded the threshold value to initiate this alarm (p4102[22]).

**Note:**

For sensor type "PTC thermistor" and "Bimetallic NC contact" (p4100[11] = 1, 4), the following applies:

- if r4101[11] > 1650 ohms, the temperature r4105[11] = 250 °C

- if r4101[11] <= 1650 ohms, the temperature r4105[11] = -50 °C

Alarm value (r2124, interpret decimal):

Temperature actual value at the time of initiation [0.1 °C].

**Remedy:**

Allow the temperature sensor to cool down to below p4102[22] - hysteresis (p4118[11]).

See also: p4102

Reaction upon F: NONE

Acknowl. upon F: IMMEDIATELY (POWER ON)

Reaction upon N: NONE

Acknowl. upon N: NONE



## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F35804 (N, A)</b>	<b>TM: CRC</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	A checksum error has occurred when reading-out the program memory on the Terminal Module. Fault value (r0949, interpret hexadecimal): Difference between the checksum at POWER ON and the actual checksum.
<b>Remedy:</b>	- check whether the permissible ambient temperature for the component is maintained. - replace the Terminal Module.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F35805 (N, A)</b>	<b>TM: EEPROM checksum error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	Internal parameter data is corrupted. Alarm value (r2124, interpret hexadecimal): 01: EEPROM access error. 02: Too many blocks in the EEPROM.
<b>Remedy:</b>	- check whether the permissible ambient temperature for the component is maintained. - replace the Terminal Module 31 (TM31).
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>F35820</b>	<b>TM DRIVE-CLiQ: Telegram error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	OFF1 (OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Control Unit to the Terminal Module involved. Fault cause: 1 (= 01 hex): Checksum error (CRC error). 2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list. 3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list. 4 (= 04 hex): The length of the receive telegram does not match the receive list. 5 (= 05 hex): The type of the receive telegram does not match the receive list.

6 (= 06 hex):

The address of the component in the telegram and in the receive list do not match.

7 (= 07 hex):

A SYNC telegram is expected - but the received telegram is not a SYNC telegram.

8 (= 08 hex):

No SYNC telegram is expected - but the received telegram is one.

9 (= 09 hex):

The error bit in the receive telegram is set.

16 (= 10 hex):

The receive telegram is too early.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON (switch off/on).

- check the electrical cabinet design and cable routing for EMC compliance

- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).

See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

**F35835**

**TM DRIVE-CLiQ: Cyclic data transfer error**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** B\_INF, TM120, TM150, TM31, TM54F\_MA, TM54F\_SL, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** OFF1 (OFF2)

**Acknowledge:** IMMEDIATELY

**Cause:** A DRIVE-CLiQ communication error has occurred from the Control Unit to the Terminal Module involved. The nodes do not send and receive in synchronism.

Fault cause:

33 (= 21 hex):

The cyclic telegram has not been received.

34 (= 22 hex):

Timeout in the telegram receive list.

64 (= 40 hex):

Timeout in the telegram send list.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON.

- replace the component involved.

See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

**F35836**

**TM DRIVE-CLiQ: Send error for DRIVE-CLiQ data**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** B\_INF, TM120, TM150, TM31, TM54F\_MA, TM54F\_SL, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** OFF1 (OFF2)

**Acknowledge:** IMMEDIATELY

**Cause:** A DRIVE-CLiQ communication error has occurred between the Control Unit and the Terminal Module involved. Data were not able to be sent.

Fault cause:

65 (= 41 hex):

Telegram type does not match send list.

## 4 Faults and alarms

### 4.2 List of faults and alarms

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:** Carry out a POWER ON.

---

**F35837****PTM DRIVE-CLiQ: Component fault**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** B\_INF, TM120, TM150, TM31, TM54F\_MA, TM54F\_SL, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** OFF1 (OFF2)

**Acknowledge:** IMMEDIATELY

**Cause:** Fault detected on the DRIVE-CLiQ component concerned. Faulty hardware cannot be excluded.

Fault cause:

32 (= 20 hex):

Error in the telegram header.

35 (= 23 hex):

Receive error: The telegram buffer memory contains an error.

66 (= 42 hex):

Send error: The telegram buffer memory contains an error.

67 (= 43 hex):

Send error: The telegram buffer memory contains an error.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).
- check the electrical cabinet design and cable routing for EMC compliance
- if required, use another DRIVE-CLiQ socket (p9904).
- replace the component involved.

---

**F35845****TM DRIVE-CLiQ: Cyclic data transfer error**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** B\_INF, TM120, TM150, TM31, TM54F\_MA, TM54F\_SL, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** OFF1 (OFF2)

**Acknowledge:** IMMEDIATELY

**Cause:** A DRIVE-CLiQ communication error has occurred between the Control Unit and the Terminal Module (TM) involved.

Fault cause:

11 (= 0B hex):

Synchronization error during alternating cyclic data transfer.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:** Carry out a POWER ON.

See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

<b>F35850</b>	<b>TM: Internal software error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	Vector: OFF1 (NONE, OFF2, OFF3) Infeed: OFF1 (NONE, OFF2)
<b>Acknowledge:</b>	POWER ON
<b>Cause:</b>	An internal software error in the Terminal Module (TM) has occurred. Fault value (r0949, interpret decimal): 1: Background time slice is blocked. 2: Checksum over the code memory is not OK.
<b>Remedy:</b>	- replace the Terminal Module (TM). - if required, upgrade the firmware in the Terminal Module. - contact Technical Support.
<b>F35851</b>	<b>TM DRIVE-CLiQ (CU): Sign-of-life missing</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Terminal Module involved (TM) to the Control Unit. The DRIVE-CLiQ component did not set the sign-of-life to the Control Unit. Fault cause: 10 (= 0A hex): The sign-of-life bit in the receive telegram is not set. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	Upgrade the firmware of the component involved.
<b>F35860</b>	<b>TM DRIVE-CLiQ (CU): Telegram error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Terminal Module involved (TM) to the Control Unit. Fault cause: 1 (= 01 hex): Checksum error (CRC error). 2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list. 3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list. 4 (= 04 hex): The length of the receive telegram does not match the receive list. 5 (= 05 hex): The type of the receive telegram does not match the receive list. 6 (= 06 hex): The address of the power unit in the telegram and in the receive list do not match.

## 4 Faults and alarms

### 4.2 List of faults and alarms

9 (= 09 hex):

The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed.

16 (= 10 hex):

The receive telegram is too early.

17 (= 11 hex):

CRC error and the receive telegram is too early.

18 (= 12 hex):

The telegram is shorter than that specified in the length byte or in the receive list and the receive telegram is too early.

19 (= 13 hex):

The telegram is longer than that specified in the length byte or in the receive list and the receive telegram is too early.

20 (= 14 hex):

The length of the receive telegram does not match the receive list and the receive telegram is too early.

21 (= 15 hex):

The type of the receive telegram does not match the receive list and the receive telegram is too early.

22 (= 16 hex):

The address of the power unit in the telegram and in the receive list does not match and the receive telegram is too early.

25 (= 19 hex):

The error bit in the receive telegram is set and the receive telegram is too early.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON (switch off/on).
  - check the electrical cabinet design and cable routing for EMC compliance
  - check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).
- See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)

---

#### F35875

#### TM: power supply voltage failed

**Message value:**

Component number: %1, fault cause: %2

**Message class:**

Supply voltage fault (undervoltage) (3)

**Drive object:**

B\_INF, TM120, TM150, TM31, TM54F\_MA, TM54F\_SL, VECTOR\_G

**Component:**

Terminal Module (TM)

**Propagation:**

LOCAL

**Reaction:**

OFF1 (OFF2)

**Acknowledge:**

IMMEDIATELY

**Cause:**

The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed.

Fault cause:

9 (= 09 hex):

The power supply voltage for the components has failed.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON (switch off/on).
- check the power supply voltage wiring for the DRIVE-CLiQ component (interrupted cable, contacts, ...).
- check the dimensioning of the power supply for the DRIVE-CLiQ component.

---

<b>F35885</b>	<b>TM DRIVE-CLiQ (CU): Cyclic data transfer error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Terminal Module involved (TM) to the Control Unit. The nodes do not send and receive in synchronism. Fault cause: 26 (= 1A hex): Sign-of-life bit in the receive telegram not set and the receive telegram is too early. 33 (= 21 hex): The cyclic telegram has not been received. 34 (= 22 hex): Timeout in the telegram receive list. 64 (= 40 hex): Timeout in the telegram send list. 98 (= 62 hex): Error at the transition to cyclic operation. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- check the power supply voltage of the component involved. - carry out a POWER ON. - replace the component involved. See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)

---

<b>F35886</b>	<b>TM DRIVE-CLiQ (CU): Error when sending DRIVE-CLiQ data</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Terminal Module involved (TM) to the Control Unit. Data were not able to be sent. Fault cause: 65 (= 41 hex): Telegram type does not match send list. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	Carry out a POWER ON.

---

**F35887 TM DRIVE-CLiQ (CU): Component fault**

<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	Fault detected on the DRIVE-CLiQ component (Terminal Module) involved. Faulty hardware cannot be excluded. Fault cause: 32 (= 20 hex): Error in the telegram header. 35 (= 23 hex): Receive error: The telegram buffer memory contains an error. 66 (= 42 hex): Send error: The telegram buffer memory contains an error. 67 (= 43 hex): Send error: The telegram buffer memory contains an error. 96 (= 60 hex): Response received too late during runtime measurement. 97 (= 61 hex): Time taken to exchange characteristic data too long. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...). - check the electrical cabinet design and cable routing for EMC compliance - if required, use another DRIVE-CLiQ socket (p9904). - replace the component involved.

---

**F35895 TM DRIVE-CLiQ (CU): Alternating cyclic data transfer error**

<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF1 (OFF2)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communication error has occurred from the Terminal Module involved (TM) to the Control Unit. Fault cause: 11 (= 0B hex): Synchronization error during alternating cyclic data transfer. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	Carry out a POWER ON. See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)

<b>F35896</b>	<b>TM DRIVE-CLiQ (CU): Inconsistent component properties</b>
<b>Message value:</b>	Component number: %1
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	Vector: OFF2 (IASC/DCBRK, NONE, OFF1, OFF3, STOP2) Infeed: OFF2 (NONE, OFF1)
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The properties of the DRIVE-CLiQ component (Terminal Module), specified by the fault value, have changed in an incompatible fashion with respect to the properties when booted. One cause can be, e.g. that a DRIVE-CLiQ cable or DRIVE-CLiQ component has been replaced. Fault value (r0949, interpret decimal): Component number.
<b>Remedy:</b>	- carry out a POWER ON. - when a component is replaced, the same component type and if possible the same firmware version should be used. - when a cable is replaced, only cables whose length is the same as or as close as possible to the length of the original cables should be used (ensure compliance with the maximum cable length).
<b>F35899 (N, A)</b>	<b>TM: Unknown fault</b>
<b>Message value:</b>	New message: %1
<b>Message class:</b>	General drive fault (19)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	A fault has occurred on the Terminal Module that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit. Fault value (r0949, interpret decimal): Fault number. Note: If required, the significance of this new fault can be read about in a more recent description of the Control Unit.
<b>Remedy:</b>	- replace the firmware on the Terminal Module by an older firmware version (r0158). - upgrade the firmware on the Control Unit (r0018).
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE
<b>A35903 (F, N)</b>	<b>TM: I2C bus error occurred</b>
<b>Message value:</b>	-
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	An error has occurred while accessing the internal I2C bus of the Terminal Module.
<b>Remedy:</b>	Replace the Terminal Module.
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A35904 (F, N)</b>	<b>TM: EEPROM</b>
<b>Message value:</b>	-
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	An error has occurred accessing the non-volatile memory on the Terminal Module.
<b>Remedy:</b>	Replace the Terminal Module.
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A35905 (F, N)</b>	<b>TM: Parameter access</b>
<b>Message value:</b>	-
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The Control Unit attempted to write an illegal parameter value to the Terminal Module.
<b>Remedy:</b>	- check whether the firmware version of the Terminal Module (r0158) matches the firmware version of Control Unit (r0018). - if required, replace the Terminal Module.
<b>Note:</b>	The firmware versions that match each other are in the readme.txt file on the memory card.
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A35906 (F, N)</b>	<b>TM: 24 V power supply missing</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The 24 V power supply for the digital outputs is missing. Alarm value (r2124, interpret hexadecimal): 01: TM17 24 V power supply for DI/DO 0 ... 7 missing. 02: TM17 24 V power supply for DI/DO 8 ... 15 missing. 04: TM15 24 V power supply for DI/DO 0 ... 7 (X520) missing. 08: TM15 24 V power supply for DI/DO 8 ... 15 (X521) missing. 10: TM15 24 V power supply for DI/DO 16 ... 23 (X522) missing. 20: TM41 24 V power supply for DI/DO 0 ... 3 missing.
<b>Remedy:</b>	Check the terminals for the power supply voltage (L1+, L2+, L3+, M or +24 V_1 for TM41).
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A35907 (F, N)</b>	<b>TM: Hardware initialization error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The Terminal Module was not successfully initialized. Alarm value (r2124, interpret hexadecimal): 01: TM17 or TM41 - incorrect configuration request. 02: TM17 or TM41 - programming not successful. 04: TM17 or TM41 - invalid time stamp
<b>Remedy:</b>	Carry out a POWER ON.
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A35910 (F, N)</b>	<b>TM: Module overtemperature</b>
<b>Message value:</b>	-
<b>Message class:</b>	Overtemperature of the electronic components (6)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The temperature in the module has exceeded the highest permissible limit.
<b>Remedy:</b>	- reduce the ambient temperature. - replace the Terminal Module.
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A35911 (F, N)</b>	<b>TM: Clock synchronous operation sign-of-life missing</b>
<b>Message value:</b>	-
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The maximum permissible number of errors in the master sign-of-life (clock synchronous operation) has been exceeded in cyclic operation. When the alarm is output, the module outputs are reset up to the next synchronization.
<b>Remedy:</b>	- check the physical bus configuration (terminating resistor, shielding, etc.). - check the interconnection of the master sign-of-life (r4201 via p0915). - check whether the master correctly sends the sign-of-life (e.g. set up a trace with r4201.12 ... r4201.15 and trigger signal r4301.9). - check the bus and master for utilization level (e.g. bus cycle time Tdp was set too short).
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A35920 (F, N)</b>	<b>TM: Error temperature sensor channel 0</b>
<b>Message value:</b>	%1
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	When evaluating the temperature sensor, an error occurred. Alarm value (r2124, interpret decimal): 1: Wire breakage or sensor not connected. KTY84: R > 1630 Ohm (TM150: R > 2170 Ohm), PT100: R > 194 Ohm, PT1000: R > 1720 Ohm (TM150: R > 1944 Ohm) 2: Measured resistance too low. PTC thermistor: R < 20 Ohm, KTY84: R < 50 Ohm (TM150: R < 180 Ohm), PT100: R < 60 Ohm, PT1000: R < 603 Ohm
<b>Remedy:</b>	- make sure that the sensor is connected correctly. - replace the sensor.
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A35921 (F, N)</b>	<b>TM: Error temperature sensor channel 1</b>
<b>Message value:</b>	%1
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	B_INF, TM120, TM150, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	When evaluating the temperature sensor, an error occurred. Alarm value (r2124, interpret decimal): 1: Wire breakage or sensor not connected. KTY84: R > 1630 Ohm (TM150: R > 2170 Ohm), PT100: R > 194 Ohm, PT1000: R > 1720 Ohm (TM150: R > 1944 Ohm) 2: Measured resistance too low. PTC thermistor: R < 20 Ohm, KTY84: R < 50 Ohm (TM150: R < 180 Ohm), PT100: R < 60 Ohm, PT1000: R < 603 Ohm
<b>Remedy:</b>	- make sure that the sensor is connected correctly. - replace the sensor.
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>A35922 (F, N)</b>	<b>TM: Error temperature sensor channel 2</b>
<b>Message value:</b>	%1
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)
<b>Drive object:</b>	B_INF, TM120, TM150, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> BICO
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	When evaluating the temperature sensor, an error occurred. Alarm value (r2124, interpret decimal): 1: Wire breakage or sensor not connected. KTY84: R > 1630 Ohm (TM150: R > 2170 Ohm), PT100: R > 194 Ohm, PT1000: R > 1720 Ohm (TM150: R > 1944 Ohm)

2: Measured resistance too low.

PTC thermistor: R < 20 Ohm, KTY84: R < 50 Ohm (TM150: R < 180 Ohm), PT100: R < 60 Ohm, PT1000: R < 603 Ohm

**Remedy:**  
- make sure that the sensor is connected correctly.  
- replace the sensor.

Reaction upon F: NONE

Acknowl. upon F: IMMEDIATELY (POWER ON)

Reaction upon N: NONE

Acknowl. upon N: NONE

### **A35923 (F, N) TM: Error temperature sensor channel 3**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, TM120, TM150, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** When evaluating the temperature sensor, an error occurred.

Alarm value (r2124, interpret decimal):

1: Wire breakage or sensor not connected.

KTY84: R > 1630 Ohm (TM150: R > 2170 Ohm), PT100: R > 194 Ohm, PT1000: R > 1720 Ohm (TM150: R > 1944 Ohm)

2: Measured resistance too low.

PTC thermistor: R < 20 Ohm, KTY84: R < 50 Ohm (TM150: R < 180 Ohm), PT100: R < 60 Ohm, PT1000: R < 603 Ohm

**Remedy:**  
- make sure that the sensor is connected correctly.  
- replace the sensor.

Reaction upon F: NONE

Acknowl. upon F: IMMEDIATELY (POWER ON)

Reaction upon N: NONE

Acknowl. upon N: NONE

### **A35924 (F, N) TM: Error temperature sensor channel 4**

**Message value:** %1

**Message class:** External measured value / signal state outside the permissible range (16)

**Drive object:** B\_INF, TM150, VECTOR\_G

**Component:** Terminal Module (TM) **Propagation:** BICO

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** When evaluating the temperature sensor, an error occurred.

Alarm value (r2124, interpret decimal):

1: Wire breakage or sensor not connected.

KTY84: R > 2170 Ohm, PT100: R > 194 Ohm, PT1000: R > 1944 Ohm

2: Measured resistance too low.

PTC thermistor: R < 20 Ohm, KTY84: R < 180 Ohm, PT100: R < 60 Ohm, PT1000: R < 603 Ohm

**Remedy:**  
- make sure that the sensor is connected correctly.  
- replace the sensor.

Reaction upon F: NONE

Acknowl. upon F: IMMEDIATELY (POWER ON)

Reaction upon N: NONE

Acknowl. upon N: NONE

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>A35925 (F, N)</b>	<b>TM: Error temperature sensor channel 5</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)		
<b>Drive object:</b>	B_INF, TM150, VECTOR_G		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	When evaluating the temperature sensor, an error occurred. Alarm value (r2124, interpret decimal): 1: Wire breakage or sensor not connected. KTY84: R > 2170 Ohm, PT100: R > 194 Ohm, PT1000: R > 1944 Ohm 2: Measured resistance too low. PTC thermistor: R < 20 Ohm, KTY84: R < 180 Ohm, PT100: R < 60 Ohm, PT1000: R < 603 Ohm		
<b>Remedy:</b>	- make sure that the sensor is connected correctly. - replace the sensor.		
Reaction upon F:	NONE		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A35926 (F, N)</b>	<b>TM: Error temperature sensor channel 6</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)		
<b>Drive object:</b>	B_INF, TM150, VECTOR_G		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	When evaluating the temperature sensor, an error occurred. Alarm value (r2124, interpret decimal): 1: Wire breakage or sensor not connected. KTY84: R > 2170 Ohm, PT100: R > 194 Ohm, PT1000: R > 1944 Ohm 2: Measured resistance too low. PTC thermistor: R < 20 Ohm, KTY84: R < 180 Ohm, PT100: R < 60 Ohm, PT1000: R < 603 Ohm		
<b>Remedy:</b>	- make sure that the sensor is connected correctly. - replace the sensor.		
Reaction upon F:	NONE		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A35927 (F, N)</b>	<b>TM: Error temperature sensor channel 7</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)		
<b>Drive object:</b>	B_INF, TM150, VECTOR_G		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	When evaluating the temperature sensor, an error occurred. Alarm value (r2124, interpret decimal): 1: Wire breakage or sensor not connected. KTY84: R > 2170 Ohm, PT100: R > 194 Ohm, PT1000: R > 1944 Ohm 2: Measured resistance too low. PTC thermistor: R < 20 Ohm, KTY84: R < 180 Ohm, PT100: R < 60 Ohm, PT1000: R < 603 Ohm		
<b>Remedy:</b>	- make sure that the sensor is connected correctly. - replace the sensor.		

Reaction upon F: NONE  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**A35928 (F, N) TM: Error temperature sensor channel 8**

**Message value:** %1  
**Message class:** External measured value / signal state outside the permissible range (16)  
**Drive object:** B\_INF, TM150, VECTOR\_G  
**Component:** Terminal Module (TM) **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** When evaluating the temperature sensor, an error occurred.  
Alarm value (r2124, interpret decimal):  
1: Wire breakage or sensor not connected.  
KTY84: R > 2170 Ohm, PT100: R > 194 Ohm, PT1000: R > 1944 Ohm  
2: Measured resistance too low.  
PTC thermistor: R < 20 Ohm, KTY84: R < 180 Ohm, PT100: R < 60 Ohm, PT1000: R < 603 Ohm  
**Remedy:**  
- make sure that the sensor is connected correctly.  
- replace the sensor.  
Reaction upon F: NONE  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**A35929 (F, N) TM: Error temperature sensor channel 9**

**Message value:** %1  
**Message class:** External measured value / signal state outside the permissible range (16)  
**Drive object:** B\_INF, TM150, VECTOR\_G  
**Component:** Terminal Module (TM) **Propagation:** BICO  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** When evaluating the temperature sensor, an error occurred.  
Alarm value (r2124, interpret decimal):  
1: Wire breakage or sensor not connected.  
KTY84: R > 2170 Ohm, PT100: R > 194 Ohm, PT1000: R > 1944 Ohm  
2: Measured resistance too low.  
PTC thermistor: R < 20 Ohm, KTY84: R < 180 Ohm, PT100: R < 60 Ohm, PT1000: R < 603 Ohm  
**Remedy:**  
- make sure that the sensor is connected correctly.  
- replace the sensor.  
Reaction upon F: NONE  
Acknowl. upon F: IMMEDIATELY (POWER ON)  
Reaction upon N: NONE  
Acknowl. upon N: NONE

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>A35930 (F, N)</b>	<b>TM: Error temperature sensor channel 10</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)		
<b>Drive object:</b>	B_INF, TM150, VECTOR_G		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	When evaluating the temperature sensor, an error occurred. Alarm value (r2124, interpret decimal): 1: Wire breakage or sensor not connected. KTY84: R > 2170 Ohm, PT100: R > 194 Ohm, PT1000: R > 1944 Ohm 2: Measured resistance too low. PTC thermistor: R < 20 Ohm, KTY84: R < 180 Ohm, PT100: R < 60 Ohm, PT1000: R < 603 Ohm		
<b>Remedy:</b>	- make sure that the sensor is connected correctly. - replace the sensor.		
Reaction upon F:	NONE		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>A35931 (F, N)</b>	<b>TM: Error temperature sensor channel 11</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	External measured value / signal state outside the permissible range (16)		
<b>Drive object:</b>	B_INF, TM150, VECTOR_G		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	BICO
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	When evaluating the temperature sensor, an error occurred. Alarm value (r2124, interpret decimal): 1: Wire breakage or sensor not connected. KTY84: R > 2170 Ohm, PT100: R > 194 Ohm, PT1000: R > 1944 Ohm 2: Measured resistance too low. PTC thermistor: R < 20 Ohm, KTY84: R < 180 Ohm, PT100: R < 60 Ohm, PT1000: R < 603 Ohm		
<b>Remedy:</b>	- make sure that the sensor is connected correctly. - replace the sensor.		
Reaction upon F:	NONE		
Acknowl. upon F:	IMMEDIATELY (POWER ON)		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

---

<b>F35950</b>	<b>TM: Internal software error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, TM54F_MA, TM54F_SL, VECTOR_G		
<b>Component:</b>	Terminal Module (TM)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	OFF2 (NONE)		
<b>Acknowledge:</b>	POWER ON		
<b>Cause:</b>	An internal software error has occurred. Fault value (r0949, interpret decimal): Information about the fault source. Only for internal Siemens troubleshooting.		
<b>Remedy:</b>	- if necessary, upgrade the firmware in the Terminal Module to a later version. - contact Technical Support.		

---

<b>A35999 (F, N)</b>	<b>TM: Unknown alarm</b>
<b>Message value:</b>	New message: %1
<b>Message class:</b>	General drive fault (19)
<b>Drive object:</b>	B_INF, TM120, TM150, TM31, TM54F_MA, TM54F_SL, VECTOR_G
<b>Component:</b>	Terminal Module (TM) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	An alarm has occurred on the Terminal Module that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit. Alarm value (r2124, interpret decimal): Alarm number. Note: If required, the significance of this new alarm can be read about in a more recent description of the Control Unit.
<b>Remedy:</b>	- replace the firmware on the Terminal Module by an older firmware version (r0158). - upgrade the firmware on the Control Unit (r0018).
Reaction upon F:	Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

---

<b>F36207 (N, A)</b>	<b>Hub: Overtemperature component</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Overtemperature of the electronic components (6)
<b>Drive object:</b>	B_INF, HUB, VECTOR_G
<b>Component:</b>	Terminal Board (TB) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE (OFF1, OFF2)
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)
<b>Cause:</b>	The temperature on the DRIVE-CLiQ Hub Module has exceeded the fault threshold. Fault value (r0949, interpret decimal): Actual temperature in 0.1 °C resolution.
<b>Remedy:</b>	- check ambient temperature at component installation location. - replace the component involved.
Reaction upon N:	NONE
Acknowl. upon N:	NONE
Reaction upon A:	NONE
Acknowl. upon A:	NONE

---

<b>A36211 (F, N)</b>	<b>Hub: Overtemperature alarm component</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Overtemperature of the electronic components (6)
<b>Drive object:</b>	B_INF, HUB, VECTOR_G
<b>Component:</b>	Terminal Board (TB) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The temperature on the DRIVE-CLiQ Hub Module has exceeded the alarm threshold. Alarm value (r2124, interpret decimal): Actual temperature in 0.1 °C resolution.
<b>Remedy:</b>	- check ambient temperature at component installation location. - replace the component involved.
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F36214 (N, A)</b>	<b>Hub: overvoltage fault 24 V supply</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (overvoltage) (3)		
<b>Drive object:</b>	B_INF, HUB, VECTOR_G		
<b>Component:</b>	Terminal Board (TB)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE (OFF1, OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The 24 V power supply on the DRIVE-CLiQ Hub Module has exceeded the fault threshold. Fault value (r0949, interpret decimal): Actual operating voltage in 0.1 °C resolution		
<b>Remedy:</b>	- check the supply voltage of the component involved. - replace the component involved.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F36216 (N, A)</b>	<b>Hub: undervoltage fault 24 V supply</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)		
<b>Drive object:</b>	B_INF, HUB, VECTOR_G		
<b>Component:</b>	Terminal Board (TB)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE (OFF1, OFF2)		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The 24 V power supply on the DRIVE-CLiQ Hub Module has undershot the fault threshold. Fault value (r0949, interpret decimal): Actual operating voltage in 0.1 °C resolution		
<b>Remedy:</b>	- check the supply voltage of the component involved. - replace the component involved.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>A36217 (N)</b>	<b>Hub: undervoltage alarm 24 V supply</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Supply voltage fault (undervoltage) (3)		
<b>Drive object:</b>	B_INF, HUB, VECTOR_G		
<b>Component:</b>	Terminal Board (TB)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	The 24 V power supply on the DRIVE-CLiQ Hub Module has undershot the alarm threshold. Alarm value (r2124, interpret decimal): Actual operating voltage in 0.1 °C resolution		
<b>Remedy:</b>	- check the supply voltage of the component involved. - replace the component involved.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		

<b>N36800 (F)</b>	<b>Hub: Group signal</b>
<b>Message value:</b>	-
<b>Message class:</b>	General drive fault (19)
<b>Drive object:</b>	B_INF, HUB, VECTOR_G
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	The DRIVE-CLiQ Hub Module has detected at least one fault.
<b>Remedy:</b>	Evaluates other actual messages.
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY
<b>A36801 (F, N)</b>	<b>Hub DRIVE-CLiQ: Sign-of-life missing</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, HUB, VECTOR_G
<b>Component:</b>	Control Unit (CU)
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A DRIVE-CLiQ communications error has occurred from the Control Unit to the DRIVE-CLiQ Hub Module involved. Fault cause: 10 (= 0A hex): The sign-of-life bit in the receive telegram is not set. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	- check the DRIVE-CLiQ connection. - replace the component involved. See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)
Reaction upon F:	NONE
Acknowl. upon F:	IMMEDIATELY
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>A36802 (F, N)</b>	<b>Hub: Time slice overflow</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, HUB, VECTOR_G
<b>Component:</b>	Terminal Board (TB)
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A time slice overflow has occurred on the DRIVE-CLiQ Hub Module. Fault value (r0949, interpret decimal): xx: Time slice number xx
<b>Remedy:</b>	- reduce the current controller frequency. - carry out a POWER ON (switch off/on) for all components. - upgrade firmware to later version. - contact Technical Support.
Reaction upon F:	Vector: NONE Infeed: OFF2 (NONE)
Acknowl. upon F:	IMMEDIATELY (POWER ON)
Reaction upon N:	NONE
Acknowl. upon N:	NONE

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>F36804 (N, A)</b>	<b>Hub: Checksum error</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, HUB, VECTOR_G		
<b>Component:</b>	Terminal Board (TB)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	A checksum error has occurred when reading out the program memory on the DRIVE-CLiQ Hub Module. Fault value (r0949, interpret hexadecimal): Difference between the checksum at POWER ON and the actual checksum.		
<b>Remedy:</b>	- check whether the permissible ambient temperature for the component is maintained. - replace the DRIVE-CLiQ Hub Module.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F36805 (N, A)</b>	<b>Hub: EEPROM checksum incorrect</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Hardware/software error (1)		
<b>Drive object:</b>	B_INF, HUB, VECTOR_G		
<b>Component:</b>	Terminal Board (TB)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY (POWER ON)		
<b>Cause:</b>	The internal parameter data on the DRIVE-CLiQ Hub Module is incorrect. Alarm value (r2124, interpret hexadecimal): 01: EEPROM access error. 02: Too many blocks in the EEPROM.		
<b>Remedy:</b>	- check whether the permissible ambient temperature for the component is maintained. - replace the DRIVE-CLiQ Hub Module.		
Reaction upon N:	NONE		
Acknowl. upon N:	NONE		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F36820</b>	<b>Hub DRIVE-CLiQ: Telegram error</b>		
<b>Message value:</b>	Component number: %1, fault cause: %2		
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)		
<b>Drive object:</b>	B_INF, HUB, VECTOR_G		
<b>Component:</b>	Terminal Board (TB)	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	A DRIVE-CLiQ communications error has occurred from the Control Unit to the DRIVE-CLiQ Hub Module involved. Fault cause: 1 (= 01 hex): Checksum error (CRC error). 2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list. 3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list. 4 (= 04 hex): The length of the receive telegram does not match the receive list.		



## 4 Faults and alarms

### 4.2 List of faults and alarms

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:** Carry out a POWER ON.

---

**F36837****Hub DRIVE-CLiQ: Component fault**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** B\_INF, HUB, VECTOR\_G

**Component:** Terminal Board (TB)

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY

**Cause:** Fault detected on the DRIVE-CLiQ component concerned. Faulty hardware cannot be excluded.

Fault cause:

32 (= 20 hex):

Error in the telegram header.

35 (= 23 hex):

Receive error: The telegram buffer memory contains an error.

66 (= 42 hex):

Send error: The telegram buffer memory contains an error.

67 (= 43 hex):

Send error: The telegram buffer memory contains an error.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:** - check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).

- check the electrical cabinet design and cable routing for EMC compliance

- if required, use another DRIVE-CLiQ socket (p9904).

- replace the component involved.

---

**F36845****Hub DRIVE-CLiQ: Cyclic data transfer error**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** B\_INF, HUB, VECTOR\_G

**Component:** Terminal Board (TB)

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY

**Cause:** A DRIVE-CLiQ communications error has occurred from the Control Unit to the DRIVE-CLiQ Hub Module involved.

Fault cause:

11 (= 0B hex):

Synchronization error during alternating cyclic data transfer.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:** Carry out a POWER ON.

See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

---

<b>F36851</b>	<b>Hub DRIVE-CLiQ (CU): Sign-of-life missing</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, HUB, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Terminal Board (TB) <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	DRIVE-CLiQ communication error from DRIVE-CLiQ Hub Module in question to Control Unit. The DRIVE-CLiQ component did not set the sign-of-life to the Control Unit. Fault cause: 10 (= 0A hex): The sign-of-life bit in the receive telegram is not set. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	Upgrade the firmware of the component involved.

---

<b>F36860</b>	<b>Hub DRIVE-CLiQ (CU): Telegram error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	B_INF, HUB, TM120, TM150, TM31, VECTOR_G
<b>Component:</b>	Terminal Board (TB) <span style="float: right;"><b>Propagation:</b> LOCAL</span>
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	DRIVE-CLiQ communication error from DRIVE-CLiQ Hub Module in question to Control Unit. Fault cause: 1 (= 01 hex): Checksum error (CRC error). 2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list. 3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list. 4 (= 04 hex): The length of the receive telegram does not match the receive list. 5 (= 05 hex): The type of the receive telegram does not match the receive list. 6 (= 06 hex): The address of the power unit in the telegram and in the receive list do not match. 9 (= 09 hex): The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed. 16 (= 10 hex): The receive telegram is too early. 17 (= 11 hex): CRC error and the receive telegram is too early. 18 (= 12 hex): The telegram is shorter than that specified in the length byte or in the receive list and the receive telegram is too early. 19 (= 13 hex): The telegram is longer than that specified in the length byte or in the receive list and the receive telegram is too early. 20 (= 14 hex): The length of the receive telegram does not match the receive list and the receive telegram is too early. 21 (= 15 hex): The type of the receive telegram does not match the receive list and the receive telegram is too early.

## 4 Faults and alarms

### 4.2 List of faults and alarms

22 (= 16 hex):

The address of the power unit in the telegram and in the receive list does not match and the receive telegram is too early.

25 (= 19 hex):

The error bit in the receive telegram is set and the receive telegram is too early.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON (switch off/on).
- check the electrical cabinet design and cable routing for EMC compliance
- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).

---

#### F36875

#### HUB: power supply voltage failed

**Message value:**

Component number: %1, fault cause: %2

**Message class:**

Supply voltage fault (undervoltage) (3)

**Drive object:**

B\_INF, HUB, TM120, TM150, TM31, VECTOR\_G

**Component:**

Terminal Board (TB)

**Propagation:**

LOCAL

**Reaction:**

OFF1 (OFF2)

**Acknowledge:**

IMMEDIATELY

**Cause:**

The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed.

Fault cause:

9 (= 09 hex):

The power supply voltage for the components has failed.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON (switch off/on).
- check the power supply voltage wiring for the DRIVE-CLiQ component (interrupted cable, contacts, ...).
- check the dimensioning of the power supply for the DRIVE-CLiQ component.

---

#### F36885

#### Hub DRIVE-CLiQ (CU): Cyclic data transfer error

**Message value:**

Component number: %1, fault cause: %2

**Message class:**

Internal (DRIVE-CLiQ) communication error (12)

**Drive object:**

B\_INF, HUB, TM120, TM150, TM31, VECTOR\_G

**Component:**

Terminal Board (TB)

**Propagation:**

LOCAL

**Reaction:**

NONE

**Acknowledge:**

IMMEDIATELY

**Cause:**

DRIVE-CLiQ communication error from DRIVE-CLiQ Hub Module in question to the Control Unit.

The nodes do not send and receive in synchronism.

Fault cause:

26 (= 1A hex):

Sign-of-life bit in the receive telegram not set and the receive telegram is too early.

33 (= 21 hex):

The cyclic telegram has not been received.

34 (= 22 hex):

Timeout in the telegram receive list.

64 (= 40 hex):

Timeout in the telegram send list.

98 (= 62 hex):

Error at the transition to cyclic operation.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- check the supply voltage of the component involved.
- carry out a POWER ON.
- replace the component involved.

---

**F36886 Hub DRIVE-CLiQ (CU): Error when sending DRIVE-CLiQ data**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** B\_INF, HUB, TM120, TM150, TM31, VECTOR\_G  
**Component:** Terminal Board (TB) **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY  
**Cause:** DRIVE-CLiQ communication error from DRIVE-CLiQ Hub Module in question to Control Unit.  
Data were not able to be sent.  
Fault cause:  
65 (= 41 hex):  
Telegram type does not match send list.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause  
**Remedy:** Carry out a POWER ON.

---

**F36887 Hub DRIVE-CLiQ (CU): Component fault**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** B\_INF, HUB, TM120, TM150, TM31, VECTOR\_G  
**Component:** Terminal Board (TB) **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY  
**Cause:** Fault detected on the DRIVE-CLiQ component (DRIVE-CLiQ Hub Module) involved. Faulty hardware cannot be excluded.  
Fault cause:  
32 (= 20 hex):  
Error in the telegram header.  
35 (= 23 hex):  
Receive error: The telegram buffer memory contains an error.  
66 (= 42 hex):  
Send error: The telegram buffer memory contains an error.  
67 (= 43 hex):  
Send error: The telegram buffer memory contains an error.  
96 (= 60 hex):  
Response received too late during runtime measurement.  
97 (= 61 hex):  
Time taken to exchange characteristic data too long.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause  
**Remedy:**

- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).
- check the electrical cabinet design and cable routing for EMC compliance
- if required, use another DRIVE-CLiQ socket (p9904).
- replace the component involved.

---

**F36895 Hub DRIVE-CLiQ (CU): Alternating cyclic data transfer error**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** B\_INF, HUB, TM120, TM150, TM31, VECTOR\_G  
**Component:** Terminal Board (TB) **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY  
**Cause:** DRIVE-CLiQ communication error from DRIVE-CLiQ Hub Module in question to Control Unit.  
 Fault cause:  
 11 (= 0B hex):  
 Synchronization error during alternating cyclic data transfer.  
 Note regarding the message value:  
 The individual information is coded as follows in the message value (r0949/r2124):  
 0000yyxx hex: yy = component number, xx = error cause  
**Remedy:** Carry out a POWER ON.  
 See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)

---

**F36896 Hub DRIVE-CLiQ (CU): Inconsistent component properties**

**Message value:** Component number: %1  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** B\_INF, HUB, TM120, TM150, TM31, VECTOR\_G  
**Component:** Terminal Board (TB) **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** IMMEDIATELY  
**Cause:** The properties of the DRIVE-CLiQ component (DRIVE-CLiQ Hub Module), specified by the fault value, have changed in an incompatible fashion with respect to the properties when booted. One cause can be, e.g. that a DRIVE-CLiQ cable or DRIVE-CLiQ component has been replaced.  
 Fault value (r0949, interpret decimal):  
 Component number.  
**Remedy:** - carry out a POWER ON.  
 - when a component is replaced, the same component type and if possible the same firmware version should be used.  
 - when a cable is replaced, only cables whose length is the same as or as close as possible to the length of the original cables should be used (ensure compliance with the maximum cable length).

---

**F36899 (N, A) Hub: Unknown fault**

**Message value:** New message: %1  
**Message class:** General drive fault (19)  
**Drive object:** B\_INF, HUB, VECTOR\_G  
**Component:** Terminal Board (TB) **Propagation:** LOCAL  
**Reaction:** Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
 Infeed: NONE (OFF1, OFF2)  
**Acknowledge:** IMMEDIATELY (POWER ON)  
**Cause:** A fault occurred on the DRIVE-CLiQ Hub Module that cannot be interpreted by the Control Unit firmware.  
 This can occur if the firmware on this component is more recent than the firmware on the Control Unit.  
 Fault value (r0949, interpret decimal):  
 Fault number.  
 Note:  
 If required, the significance of this new fault can be read about in a more recent description of the Control Unit.  
**Remedy:** - replace the firmware on the DRIVE-CLiQ Hub Module with older firmware (r0158).  
 - upgrade the firmware on the Control Unit (r0018).  
 Reaction upon N: NONE  
 Acknowl. upon N: NONE  
 Reaction upon A: NONE  
 Acknowl. upon A: NONE

**F36950**      **Hub: Internal software error**

**Message value:** %1

**Message class:** Hardware/software error (1)

**Drive object:** VECTOR\_G

**Component:** Terminal Board (TB)                      **Propagation:** LOCAL

**Reaction:** OFF2 (NONE)

**Acknowledge:** POWER ON

**Cause:** An internal software error has occurred.  
Fault value (r0949, interpret decimal):  
Information about the fault source.  
Only for internal Siemens troubleshooting.

**Remedy:** - if required, upgrade the firmware in the DRIVE-CLiQ hub module to a more recent version.  
- contact Technical Support.

**A36999 (F, N)**      **Hub: Unknown alarm**

**Message value:** New message: %1

**Message class:** General drive fault (19)

**Drive object:** B\_INF, HUB, VECTOR\_G

**Component:** Terminal Board (TB)                      **Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** An alarm occurred on the DRIVE-CLiQ Hub Module that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit.  
Alarm value (r2124, interpret decimal):  
Alarm number.  
Note:  
If required, the significance of this new alarm can be read about in a more recent description of the Control Unit.

**Remedy:** - replace the firmware on the DRIVE-CLiQ Hub Module with older firmware (r0158).  
- upgrade the firmware on the Control Unit (r0018).

Reaction upon F: Vector: NONE (IASC/DCBRK, OFF1, OFF2, OFF3, STOP2)  
Infeed: NONE (OFF1, OFF2)

Acknowl. upon F: IMMEDIATELY (POWER ON)

Reaction upon N: NONE

Acknowl. upon N: NONE

**F4000**      **Fault at DRIVE-CLiQ socket X100**

**Message value:** %1

**Message class:** General drive fault (19)

**Drive object:** All objects

**Component:** None                                      **Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** IMMEDIATELY

**Cause:** A fault has occurred at the drive object at the DRIVE-CLiQ socket X100.  
Fault value (r0949, interpret decimal):  
First fault that has occurred for this drive object.

**Remedy:** Evaluate the fault buffer of the specified object.





---

<b>A40103</b>	<b>Alarm at DRIVE-CLiQ socket X103</b>
<b>Message value:</b>	%1
<b>Message class:</b>	General drive fault (19)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	An alarm has occurred at the drive object at the DRIVE-CLiQ socket X103. Alarm value (r2124, interpret decimal): First alarm that has occurred for this drive object.
<b>Remedy:</b>	Evaluate the alarm buffer of the specified object.

---

<b>A40104</b>	<b>Alarm at DRIVE-CLiQ socket X104</b>
<b>Message value:</b>	%1
<b>Message class:</b>	General drive fault (19)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	An alarm has occurred at the drive object at the DRIVE-CLiQ socket X104. Alarm value (r2124, interpret decimal): First alarm that has occurred for this drive object.
<b>Remedy:</b>	Evaluate the alarm buffer of the specified object.

---

<b>A40105</b>	<b>Alarm at DRIVE-CLiQ socket X105</b>
<b>Message value:</b>	%1
<b>Message class:</b>	General drive fault (19)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	An alarm has occurred at the drive object at the DRIVE-CLiQ socket X105. Alarm value (r2124, interpret decimal): First alarm that has occurred for this drive object.
<b>Remedy:</b>	Evaluate the alarm buffer of the specified object.

---

<b>F40799</b>	<b>CX32: Configured transfer end time exceeded</b>
<b>Message value:</b>	-
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The configured transfer end time when transferring the cyclic actual values was exceeded.
<b>Remedy:</b>	- carry out a POWER ON (switch-off/switch-on) for all components. - contact Technical Support.

---

**F40801 CX32 DRIVE-CLiQ: Sign-of-life missing**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** All objects  
**Component:** Control Unit (CU) **Propagation:** LOCAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** A DRIVE-CLiQ communications error has occurred from the Control Unit to the controller extension involved.  
Fault cause:  
10 (= 0A hex):  
The sign-of-life bit in the receive telegram is not set.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause  
**Remedy:**  
- carry out a POWER ON (switch-off/switch-on).  
- replace the component involved.  
See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

---

**F40820 CX32 DRIVE-CLiQ: Telegram error**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** All objects  
**Component:** DRIVE-CLiQ Hub Module (Hub) **Propagation:** LOCAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** A DRIVE-CLiQ communications error has occurred from the Control Unit to the controller extension involved.  
Fault cause:  
1 (= 01 hex):  
Checksum error (CRC error).  
2 (= 02 hex):  
Telegram is shorter than specified in the length byte or in the receive list.  
3 (= 03 hex):  
Telegram is longer than specified in the length byte or in the receive list.  
4 (= 04 hex):  
The length of the receive telegram does not match the receive list.  
5 (= 05 hex):  
The type of the receive telegram does not match the receive list.  
6 (= 06 hex):  
The address of the component in the telegram and in the receive list do not match.  
7 (= 07 hex):  
A SYNC telegram is expected - but the received telegram is not a SYNC telegram.  
8 (= 08 hex):  
No SYNC telegram is expected - but the received telegram is one.  
9 (= 09 hex):  
The error bit in the receive telegram is set.  
16 (= 10 hex):  
The receive telegram is too early.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause  
**Remedy:**  
- carry out a POWER ON (switch-off/switch-on).  
- check the electrical cabinet design and cable routing for EMC compliance  
- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).  
See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

---

**F40825 CX32 DRIVE-CLiQ: Supply voltage failed**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Supply voltage fault (undervoltage) (3)  
**Drive object:** All objects  
**Component:** DRIVE-CLiQ Hub Module (Hub)                      **Propagation:** LOCAL  
**Reaction:** OFF1 (OFF2)  
**Acknowledge:** IMMEDIATELY  
**Cause:** The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed.  
Fault cause:  
9 (= 09 hex):  
The power supply voltage for the components has failed.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause  
**Remedy:**  
- carry out a POWER ON (switch-off/switch-on).  
- check the supply voltage wiring of the DRIVE-CLiQ component (interrupted cable, contacts, ...).  
- check the dimensioning of the DRIVE-CLiQ component power supply.

---

**F40835 CX32 DRIVE-CLiQ: Cyclic data transfer error**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** All objects  
**Component:** DRIVE-CLiQ Hub Module (Hub)                      **Propagation:** LOCAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** A DRIVE-CLiQ communications error has occurred from the Control Unit to the controller extension involved. The nodes do not send and receive in synchronism.  
Fault cause:  
33 (= 21 hex):  
The cyclic telegram has not been received.  
34 (= 22 hex):  
Timeout in the telegram receive list.  
64 (= 40 hex):  
Timeout in the telegram send list.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause  
**Remedy:**  
- carry out a POWER ON (switch-off/switch-on).  
- replace the component involved.  
See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

---

**F40836 CX32 DRIVE-CLiQ: Send error for DRIVE-CLiQ data**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** All objects  
**Component:** DRIVE-CLiQ Hub Module (Hub)                      **Propagation:** LOCAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** A DRIVE-CLiQ communications error has occurred from the Control Unit to the controller extension involved. Data were not able to be sent.  
Fault cause:  
65 (= 41 hex):  
Telegram type does not match send list.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:** Carry out a POWER ON (switch-off/switch-on).

---

**F40837**
**CX32 DRIVE-CLiQ: Component fault**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** All objects

**Component:** DRIVE-CLiQ Hub Module (Hub)

**Propagation:** LOCAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY

**Cause:** Fault detected on the DRIVE-CLiQ component concerned. Faulty hardware cannot be excluded.

Fault cause:

32 (= 20 hex):

Error in the telegram header.

35 (= 23 hex):

Receive error: The telegram buffer memory contains an error.

66 (= 42 hex):

Send error: The telegram buffer memory contains an error.

67 (= 43 hex):

Send error: The telegram buffer memory contains an error.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:** - check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).

- check the electrical cabinet design and cable routing for EMC compliance

- if required, use another DRIVE-CLiQ socket (p9904).

- replace the component involved.

---

**F40845**
**CX32 DRIVE-CLiQ: Cyclic data transfer error**

**Message value:** Component number: %1, fault cause: %2

**Message class:** Internal (DRIVE-CLiQ) communication error (12)

**Drive object:** All objects

**Component:** DRIVE-CLiQ Hub Module (Hub)

**Propagation:** LOCAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY

**Cause:** A DRIVE-CLiQ communications error has occurred from the Control Unit to the controller extension involved.

Fault cause:

11 (= 0B hex):

Synchronization error during alternating cyclic data transfer.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:** Carry out a POWER ON (switch-off/switch-on).

See also: p9916 (DRIVE-CLiQ data transfer error shutdown threshold slave)

<b>F40851</b>	<b>CX32 DRIVE-CLiQ (CU): Sign-of-life missing</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	All objects
<b>Component:</b>	DRIVE-CLiQ Hub Module (Hub) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communications error has occurred from the controller extension involved to the Control Unit. The DRIVE-CLiQ component did not set the sign-of-life to the Control Unit. Fault cause: 10 (= 0A hex): The sign-of-life bit in the receive telegram is not set. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	Upgrade the firmware of the component involved.
<b>F40860</b>	<b>CX32 DRIVE-CLiQ (CU): Telegram error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	All objects
<b>Component:</b>	DRIVE-CLiQ Hub Module (Hub) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communications error has occurred from the controller extension involved to the Control Unit. Fault cause: 1 (= 01 hex): Checksum error (CRC error). 2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list. 3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list. 4 (= 04 hex): The length of the receive telegram does not match the receive list. 5 (= 05 hex): The type of the receive telegram does not match the receive list. 6 (= 06 hex): The address of the power unit in the telegram and in the receive list do not match. 9 (= 09 hex): The error bit in the receive telegram is set. 16 (= 10 hex): The receive telegram is too early. 17 (= 11 hex): CRC error and the receive telegram is too early. 18 (= 12 hex): The telegram is shorter than that specified in the length byte or in the receive list and the receive telegram is too early. 19 (= 13 hex): The telegram is longer than that specified in the length byte or in the receive list and the receive telegram is too early. 20 (= 14 hex): The length of the receive telegram does not match the receive list and the receive telegram is too early. 21 (= 15 hex): The type of the receive telegram does not match the receive list and the receive telegram is too early.

22 (= 16 hex):

The address of the power unit in the telegram and in the receive list does not match and the receive telegram is too early.

25 (= 19 hex):

The error bit in the receive telegram is set and the receive telegram is too early.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON (switch-off/switch-on).
- check the electrical cabinet design and cable routing for EMC compliance
- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).

See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)

**F40875**

**CX32 DRIVE-CLiQ (CU): Supply voltage failed**

**Message value:**

Component number: %1, fault cause: %2

**Message class:**

Supply voltage fault (undervoltage) (3)

**Drive object:**

All objects

**Component:**

DRIVE-CLiQ Hub Module (Hub)

**Propagation:**

LOCAL

**Reaction:**

OFF1 (OFF2)

**Acknowledge:**

IMMEDIATELY

**Cause:**

The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed.

Fault cause:

9 (= 09 hex):

The power supply voltage for the components has failed.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- carry out a POWER ON (switch-off/switch-on).
- check the supply voltage wiring of the DRIVE-CLiQ component (interrupted cable, contacts, ...).
- check the dimensioning of the DRIVE-CLiQ component power supply.

**F40885**

**CX32 DRIVE-CLiQ (CU): Cyclic data transfer error**

**Message value:**

Component number: %1, fault cause: %2

**Message class:**

Internal (DRIVE-CLiQ) communication error (12)

**Drive object:**

All objects

**Component:**

DRIVE-CLiQ Hub Module (Hub)

**Propagation:**

LOCAL

**Reaction:**

OFF2

**Acknowledge:**

IMMEDIATELY

**Cause:**

A DRIVE-CLiQ communications error has occurred from the controller extension involved to the Control Unit. The nodes do not send and receive in synchronism.

Fault cause:

26 (= 1A hex):

Sign-of-life bit in the receive telegram not set and the receive telegram is too early.

33 (= 21 hex):

The cyclic telegram has not been received.

34 (= 22 hex):

Timeout in the telegram receive list.

64 (= 40 hex):

Timeout in the telegram send list.

98 (= 62 hex):

Error at the transition to cyclic operation.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

## 4 Faults and alarms

### 4.2 List of faults and alarms

**Remedy:**

- check the power supply voltage of the component involved.
- carry out a POWER ON (switch-off/switch-on).
- replace the component involved.

See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)

---

**F40886**      **CX32 DRIVE-CLiQ (CU): Error when sending DRIVE-CLiQ data**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** All objects  
**Component:** DRIVE-CLiQ Hub Module (Hub)      **Propagation:** LOCAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** A DRIVE-CLiQ communications error has occurred from the controller extension involved to the Control Unit.  
Data were not able to be sent.  
Fault cause:  
65 (= 41 hex):  
Telegram type does not match send list.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause

**Remedy:** Carry out a POWER ON (switch-off/switch-on).

---

**F40887**      **CX32 DRIVE-CLiQ (CU): Component fault**

**Message value:** Component number: %1, fault cause: %2  
**Message class:** Internal (DRIVE-CLiQ) communication error (12)  
**Drive object:** All objects  
**Component:** DRIVE-CLiQ Hub Module (Hub)      **Propagation:** LOCAL  
**Reaction:** OFF2  
**Acknowledge:** IMMEDIATELY  
**Cause:** Fault detected on the DRIVE-CLiQ component concerned. Faulty hardware cannot be excluded.  
Fault cause:  
32 (= 20 hex):  
Error in the telegram header.  
35 (= 23 hex):  
Receive error: The telegram buffer memory contains an error.  
66 (= 42 hex):  
Send error: The telegram buffer memory contains an error.  
67 (= 43 hex):  
Send error: The telegram buffer memory contains an error.  
96 (= 60 hex):  
Response received too late during runtime measurement.  
97 (= 61 hex):  
Time taken to exchange characteristic data too long.  
Note regarding the message value:  
The individual information is coded as follows in the message value (r0949/r2124):  
0000yyxx hex: yy = component number, xx = error cause

**Remedy:**

- check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).
- check the electrical cabinet design and cable routing for EMC compliance
- if required, use another DRIVE-CLiQ socket (p9904).
- replace the component involved.

<b>F40895</b>	<b>CX32 DRIVE-CLiQ (CU): Cyclic data transfer error</b>
<b>Message value:</b>	Component number: %1, fault cause: %2
<b>Message class:</b>	Internal (DRIVE-CLiQ) communication error (12)
<b>Drive object:</b>	All objects
<b>Component:</b>	DRIVE-CLiQ Hub Module (Hub) <b>Propagation:</b> LOCAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	A DRIVE-CLiQ communications error has occurred from the controller extension involved to the Control Unit. Fault cause: 11 (= 0B hex): Synchronization error during alternating cyclic data transfer. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
<b>Remedy:</b>	Carry out a POWER ON (switch-off/switch-on). See also: p9915 (DRIVE-CLiQ data transfer error shutdown threshold master)
<b>F49150</b>	<b>Cooling unit: Fault occurred</b>
<b>Message value:</b>	-
<b>Message class:</b>	Auxiliary unit faulted (20)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The cooling unit signals a general fault.
<b>Remedy:</b>	- check the wiring between the cooling unit and the input terminal (Terminal Module). - check the external control device for the cooling unit. See also: p0266 (Cooling unit feedback signals signal source)
<b>F49151</b>	<b>Cooling unit: Conductivity has exceeded the fault threshold</b>
<b>Message value:</b>	-
<b>Message class:</b>	Auxiliary unit faulted (20)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The conductivity of the cooling liquid has exceeded the selected fault threshold (p0269[2]). See also: p0261 (Cooling unit starting time 2), p0262 (Cooling unit fault conductivity delay time), p0266 (Cooling unit feedback signals signal source)
<b>Remedy:</b>	Check the device to de-ionize the cooling liquid.
<b>F49152</b>	<b>Cooling unit: ON command feedback signal missing</b>
<b>Message value:</b>	-
<b>Message class:</b>	Auxiliary unit faulted (20)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	None <b>Propagation:</b> GLOBAL
<b>Reaction:</b>	OFF2
<b>Acknowledge:</b>	IMMEDIATELY
<b>Cause:</b>	The feedback signal of the ON command of the cooling unit is missing. - after the ON command, the feedback signal has not been received within the selected starting time (p0260). - the feedback signal has failed in operation. - the cooling system was stopped by an external signal. See also: p0260 (Cooling unit starting time 1), r0267 (Cooling unit status word)

## 4 Faults and alarms

### 4.2 List of faults and alarms

- Remedy:**
- check the wiring between the cooling unit and the input terminal (Terminal Module).
  - check the wiring between the output terminal (Terminal Module) and the cooling system.
  - check the external control device for the cooling unit.

---

<b>F49153</b>	<b>Cooling unit: Liquid flow too low</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Auxiliary unit faulted (20)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The drive converter cooling unit signals that the cooling liquid flow is too low. <ul style="list-style-type: none"><li>- after the ON command, the feedback signal has not been received within the selected starting time (p0260).</li><li>- in operation, the feedback signal has failed for longer than the permitted failure time (p0263).</li></ul> See also: p0260 (Cooling unit starting time 1), p0263 (Cooling unit fault liquid flow delay time), r0267 (Cooling unit status word)		
<b>Remedy:</b>	<ul style="list-style-type: none"><li>- check the wiring between the cooling unit and the input terminal (Terminal Module).</li><li>- check the external control device for the cooling unit.</li></ul>		

---

<b>F49154 (A)</b>	<b>Cooling unit: Liquid leak is present</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Auxiliary unit faulted (20)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The liquid leakage monitoring function has responded. Caution: If this fault is reparameterized as an alarm, then using other monitoring functions it must be ensured that when cooling water is lost, the drive is switched off! See also: r0267 (Cooling unit status word)		
<b>Remedy:</b>	<ul style="list-style-type: none"><li>- check the cooling system for leaks in the cooling circuit.</li><li>- check the wiring of the input terminal (Terminal Module) used to monitor leaking fluid.</li></ul>		
Reaction upon A:	NONE		
Acknowl. upon A:	NONE		

---

<b>F49155</b>	<b>Cooling unit: Power Stack Adapter, firmware version too old</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Auxiliary unit faulted (20)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	POWER ON		
<b>Cause:</b>	The firmware version in the Power Stack Adapter (PSA) is too old and does not support the liquid cooling.		
<b>Remedy:</b>	Upgrade the firmware. Check EEPROM data.		

---

<b>F49156</b>	<b>Cooling unit: Cooling liquid temperature has exceeded the fault threshold</b>		
<b>Message value:</b>	-		
<b>Message class:</b>	Auxiliary unit faulted (20)		
<b>Drive object:</b>	B_INF, VECTOR_G		
<b>Component:</b>	None	<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	OFF2		
<b>Acknowledge:</b>	IMMEDIATELY		
<b>Cause:</b>	The cooling liquid intake temperature has exceeded the specified fault threshold. Note: The value for the fault threshold depends on the power unit (hardware description data, e.g. 52 ... 55 °C).		

**Remedy:** Check the cooling system and the ambient conditions.

---

**A49170 Cooling unit: Alarm has occurred**

**Message value:** -  
**Message class:** Auxiliary unit faulted (20)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The cooling unit signals a general alarm.  
**Remedy:** - check the wiring between the cooling unit and the input terminal (Terminal Module).  
- check the external control device for the cooling unit.

---

**A49171 (N) Cooling unit: Conductivity has exceeded the alarm threshold**

**Message value:** -  
**Message class:** Auxiliary unit faulted (20)  
**Drive object:** VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** Conductivity monitoring is set for the cooling liquid (r0267.7, from p0266[7]).  
See also: p0261 (Cooling unit starting time 2), p0262 (Cooling unit fault conductivity delay time), p0266 (Cooling unit feedback signals signal source), r0267 (Cooling unit status word)  
**Remedy:** Check the device to de-ionize the cooling liquid.  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**A49171 (N) Cooling unit: Conductivity has exceeded the alarm threshold**

**Message value:** -  
**Message class:** Auxiliary unit faulted (20)  
**Drive object:** B\_INF  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** The conductivity of the cooling liquid has exceeded the selected alarm threshold (p0269[1]).  
Note:  
The threshold cannot be set higher than the fault threshold specified in the equipment description.  
**Remedy:** Check the device to de-ionize the cooling liquid.  
Reaction upon N: NONE  
Acknowl. upon N: NONE

---

**A49172 Cooling unit: Conductivity actual value is not valid**

**Message value:** -  
**Message class:** Auxiliary unit faulted (20)  
**Drive object:** B\_INF, VECTOR\_G  
**Component:** None **Propagation:** GLOBAL  
**Reaction:** NONE  
**Acknowledge:** NONE  
**Cause:** When monitoring the conductivity of the cooling liquid, there is a fault in the wiring or in the sensor.  
**Remedy:** - check the wiring between the cooling unit and the Power Stack Adapter (PSA).  
- check the function of the sensor to measure the conductivity.

---

**A49173 Cooling unit: Cooling liquid temperature has exceeded the alarm threshold**

**Message value:** -

**Message class:** Auxiliary unit faulted (20)

**Drive object:** B\_INF, VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The cooling liquid intake temperature has exceeded the specified alarm threshold.  
 Note:  
 The value for the alarm threshold depends on the power unit (hardware description data, e.g. 42 ... 50 °C).

**Remedy:** Check the cooling system and the ambient conditions.

---

**F49200 Excitation group signal fault**

**Message value:** %1

**Message class:** General drive fault (19)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** OFF2

**Acknowledge:** IMMEDIATELY

**Cause:** The excitation sequence control signals a fault.  
 Fault value (r0949, interpret hexadecimal):  
 Bit 0:  
 When switched off or when switching off the excitation, the signal "excitation ready feedback signal" was not received within the monitoring time.  
 Bit 1:  
 After an ON command, the signal "excitation ready feedback signal" was not received within the monitoring time.  
 Bit 2:  
 After the pulses were enabled, the signal "excitation operational feedback signal" was not received within the monitoring time.  
 Bit 3:  
 The "excitation group signal fault" signal is present.  
 Bit 4:  
 The switch-on command for the excitation was reset, although pulse enable (r0899.11) is still available, or the excitation current actual value has still not fallen below a minimum value.  
 Note:  
 This signal can be generated via p6500[59].

**Remedy:** - check the excitation.  
 - check commands, feedback signals and BICO interconnections.  
 - re bit 4: increase the switch-off delay time (p1647).

---

**A49201 (F) Excitation group signal alarm**

**Message value:** -

**Message class:** General drive fault (19)

**Drive object:** VECTOR\_G

**Component:** None **Propagation:** GLOBAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** The "excitation group signal alarm" signal is present.  
 Note:  
 This signal can be generated via p6500[58].

**Remedy:** Check the excitation equipment.

Reaction upon F: NONE

Acknowl. upon F: IMMEDIATELY

<b>A49204 (N)</b>	<b>Excitation switch-off alarm</b>
<b>Message value:</b>	-
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	VECTOR_G
<b>Component:</b>	Control Unit (CU)
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	When switching off the excitation, after the delay time (p1647) has expired, the excitation current has still not decayed to zero.
<b>Remedy:</b>	Extend the switch-off delay time in (p1647). Note: The alarm is automatically reset after adapting p1647. See also: p1647 (Excitation switch-off delay time)
Reaction upon N:	NONE
Acknowl. upon N:	NONE
<b>A49998</b>	<b>Recorder trigger event occurred</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Hardware/software error (1)
<b>Drive object:</b>	B_INF, VECTOR_G
<b>Component:</b>	None
<b>Propagation:</b>	GLOBAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	A recorder trigger event has occurred. The data are then written to the memory card, specifying the event number. Alarm value (r2124, interpret decimal): Event number.
<b>Remedy:</b>	Not necessary. This message disappears automatically.
<b>A50001 (F)</b>	<b>PN/COMM BOARD: Configuration error</b>
<b>Message value:</b>	%1
<b>Message class:</b>	Communication error to the higher-level control system (9)
<b>Drive object:</b>	All objects
<b>Component:</b>	None
<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE
<b>Acknowledge:</b>	NONE
<b>Cause:</b>	CBE20: A PROFINET controller attempts to establish a connection using an incorrect configuring telegram. The "Shared Device" function has been activated (p8829 = 2). Alarm value (r2124, interpret decimal): 10: A CPU sends a PROFIsafe telegram. 11: F CPU sends a PZD telegram. 12: F CPU without an A CPU. 13: F CPU with more PROFIsafe subslots than activated with p9601.3. 14: F CPU with fewer PROFIsafe subslots than activated with p9601.3. 15: PROFIsafe telegram of the F-CPU does not match the setting in p60022. See also: p8829 (CBE2x remote controller number), p9601 (SI enable functions integrated in the drive (Control Unit))
<b>Remedy:</b>	CBE20: Check the configuration of the PROFINET controllers as well as the p8829 and p9601.3 setting.
Reaction upon F:	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)
Acknowl. upon F:	IMMEDIATELY

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>A50002 (F)</b>	<b>COMM BOARD: Alarm 2</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Communication error to the higher-level control system (9)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	CBE20 SINAMICS Link: A specific telegram word (send) is being used twice. Alarm value (r2124, interpret decimal): Telegram word used twice See also: p8871 (SINAMICS Link PZD send word)		
<b>Remedy:</b>	CBE20 SINAMICS Link: Correct the parameter assignment. See also: p8871 (SINAMICS Link PZD send word)		
Reaction upon F:	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY		

---

<b>A50003 (F)</b>	<b>COMM BOARD: Alarm 3</b>		
<b>Message value:</b>	Info. 1: %1, info. 2: %2		
<b>Message class:</b>	Communication error to the higher-level control system (9)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	CBE20 SINAMICS Link: A specific telegram word (receive) is being used twice. Alarm value (r2124, interpret hexadecimal): yyyyxxxx hex: yyyy = info. 1, xxxx = info. 2 Info. 1 (decimal) = Address of sender Info. 2 (decimal) = Receive telegram word See also: p8870 (SINAMICS Link PZD receive word), p8872 (SINAMICS Link PZD receive address)		
<b>Remedy:</b>	CBE20 SINAMICS Link: Correct the parameter assignment.		
Reaction upon F:	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY		

---

<b>A50004 (F)</b>	<b>COMM BOARD: Alarm 4</b>		
<b>Message value:</b>	Info. 1: %1, info. 2: %2		
<b>Message class:</b>	Communication error to the higher-level control system (9)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	CBE20 SINAMICS Link: - telegram word (receive) and address of sender inconsistent. Both values have to be either equal to zero or not equal to zero. - address of the sender > maximum project address. Alarm value (r2124, interpret hexadecimal): yyyyxxxx hex: yyyy = info. 1, xxxx = info. 2 Info. 1 (decimal) = Drive object number from p8870, p8872 Info. 2 (decimal) = Index from p8870, p8872 See also: p8811, p8870, p8872		

**Remedy:** In the case of CBE20 SINAMICS Link:  
Correct the parameter assignment.

Reaction upon F: Vector: NONE (OFF1, OFF2, OFF3)  
Infeed: NONE (OFF1, OFF2)

Acknowl. upon F: IMMEDIATELY

**A50005 (F) COMM BOARD: Alarm 5**

**Message value:** %1  
**Message class:** Communication error to the higher-level control system (9)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE

**Cause:** CBE20 SINAMICS Link:  
Sender not found on SINAMICS Link.  
Alarm value (r2124, interpret decimal):  
0: synchronization to the bus clock cycle unsuccessful.  
1 ... 64: address of the sender that was not found.  
See also: p8872 (SINAMICS Link PZD receive address)

**Remedy:** CBE20 SINAMICS Link:  
Check the connection to the sender.  
Set parameters p8811, p8812[1] to identical values for all participants/nodes.  
See also: p8811 (SINAMICS Link project selection), p8812 (SINAMICS Link clock cycle settings)

Reaction upon F: Vector: NONE (OFF1, OFF2, OFF3)  
Infeed: NONE (OFF1, OFF2)

Acknowl. upon F: IMMEDIATELY

**A50006 (F) COMM BOARD: Alarm 6**

**Message value:** Info. 1: %1, info. 2: %2  
**Message class:** Communication error to the higher-level control system (9)  
**Drive object:** All objects  
**Component:** None **Propagation:** LOCAL  
**Reaction:** NONE  
**Acknowledge:** NONE

**Cause:** CBE20 SINAMICS Link:  
The parameter assignment indicates that the sender and the receiver are one and the same. This is not permitted.  
Alarm value (r2124, interpret hexadecimal):  
yyyyxxxx hex: yyyy = info. 1, xxxx = info. 2  
Info. 1 (decimal) = Drive object number from p8872  
Info. 2 (decimal) = Index from p8872  
See also: p8836 (SINAMICS link node address), p8872 (SINAMICS Link PZD receive address)

**Remedy:** In the case of CBE20 SINAMICS Link:  
Correct the parameter assignment. All p8872[index] must be set to a value not equal to p8836.

Reaction upon F: Vector: NONE (OFF1, OFF2, OFF3)  
Infeed: NONE (OFF1, OFF2)

Acknowl. upon F: IMMEDIATELY

## 4 Faults and alarms

### 4.2 List of faults and alarms

---

<b>A50007 (F)</b>	<b>COMM BOARD: Alarm 7</b>		
<b>Message value:</b>	Info. 1: %1, info. 2: %2		
<b>Message class:</b>	Communication error to the higher-level control system (9)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	CBE20 SINAMICS Link: A send telegram word is greater than possible in the project. Alarm value (r2124, interpret hexadecimal): yyyyxxxx hex: yyyy = info. 1, xxxx = info. 2 Info. 1 (decimal) = drive object number from p8871 Info. 2 (decimal) = index from p8871 See also: p8811 (SINAMICS Link project selection), p8871 (SINAMICS Link PZD send word)		
<b>Remedy:</b>	In the case of CBE20 SINAMICS Link: Correct the parameter assignment.		
Reaction upon F:	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY		

---

<b>A50008 (F)</b>	<b>COMM BOARD: Alarm 8</b>		
<b>Message value:</b>	Info. 1: %1, info. 2: %2		
<b>Message class:</b>	Communication error to the higher-level control system (9)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	CBE20 SINAMICS Link: A receive telegram word is greater than possible in the project. Alarm value (r2124, interpret hexadecimal): yyyyxxxx hex: yyyy = info. 1, xxxx = info. 2 Info. 1 (decimal) = drive object number from p8870 Info. 2 (decimal) = index from p8870 See also: p8811 (SINAMICS Link project selection), p8870 (SINAMICS Link PZD receive word)		
<b>Remedy:</b>	In the case of CBE20 SINAMICS Link: Correct the parameter assignment.		
Reaction upon F:	Vector: NONE (OFF1, OFF2, OFF3) Infeed: NONE (OFF1, OFF2)		
Acknowl. upon F:	IMMEDIATELY		

---

<b>A50010 (F)</b>	<b>PNCOMM BOARD: Consistency error affecting adjustable parameters</b>		
<b>Message value:</b>	%1		
<b>Message class:</b>	Communication error to the higher-level control system (9)		
<b>Drive object:</b>	All objects		
<b>Component:</b>	None	<b>Propagation:</b>	LOCAL
<b>Reaction:</b>	NONE		
<b>Acknowledge:</b>	NONE		
<b>Cause:</b>	A consistency error was detected when activating the configuration (p8945) for the Communication Board Ethernet 20 (CBE20). Alarm value (r2124, interpret decimal): 0: general consistency error 1: error in the IP configuration (IP address, subnet mask or standard gateway). 2: Error in the station names. 3: DHCP was not able to be activated, as a cyclic PROFINET connection already exists. 4: a cyclic PROFINET connection is not possible as DHCP is activated.		

**Note:**

For all alarm values, the following applies: currently set configuration has not been activated.

DHCP: Dynamic Host Configuration Protocol

See also: p8940 (CBE2x Name of Station), p8941 (CBE2x IP address), p8942 (CBE2x Default Gateway), p8943 (CBE2x Subnet Mask), p8944 (CBE2x DHCP Mode)

**Remedy:** - check the required interface configuration (p8940 and following), correct if necessary, and activate (p8945).  
or  
- reconfigure the station via the "Edit Ethernet node" screen form (e.g. with STARTER commissioning software).  
See also: p8945 (CBE2x interface configuration)

Reaction upon F: Vector: NONE (OFF1, OFF2, OFF3)

Infeed: NONE (OFF1, OFF2)

Acknowl. upon F: IMMEDIATELY

**A50011 (F) EtherNet/IP/COMM BOARD: configuration error**

**Message value:** %1

**Message class:** Communication error to the higher-level control system (9)

**Drive object:** All objects

**Component:** None

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** CBE20 EtherNet/IP:

An EtherNet/IP controller attempts to establish a connection using an incorrect configuring telegram. The telegram length set in the controller does not match the parameterization in the drive device.

**Remedy:** Check the set telegram length.  
For p0922 not equal to 999, then the length of the selected telegram applies.  
For p0922 = 999, the maximum interconnected PZD (r2067) applies.  
See also: p0922, r2067, r8867

Reaction upon F: Vector: NONE (OFF1, OFF2, OFF3)

Infeed: NONE (OFF1, OFF2)

Acknowl. upon F: IMMEDIATELY

**A50020 (F) PNCOMM BOARD: Second controller missing**

**Message value:** -

**Message class:** Communication error to the higher-level control system (9)

**Drive object:** All objects

**Component:** None

**Propagation:** LOCAL

**Reaction:** NONE

**Acknowledge:** NONE

**Cause:** CBE20:

The PROFINET function "Shared Device" has been activated (p8829 = 2). However, only the connection to a PROFINET controller is present.

See also: p8829 (CBE2x remote controller number)

**Remedy:** CBE20:  
Check the configuration of the PROFINET controllers as well as the p8829 setting.

Reaction upon F: Vector: NONE (OFF1, OFF2, OFF3)

Infeed: NONE (OFF1, OFF2)

Acknowl. upon F: IMMEDIATELY



# Appendix

# A

## Content

A.1	ASCII table (characters that can be displayed)	1942
A.2	List of abbreviations	1945
A.3	References	1954

## A.1 ASCII table (characters that can be displayed)

The following table includes the decimal and hexadecimal notation of ASCII characters that can be displayed (printable).

Table A-1 ASCII table (characters that can be displayed)

Character	Decimal	Hexadecimal	Meaning
	32	20	Space
!	33	21	Exclamation mark
"	34	22	Quotation mark
#	35	23	Number sign
\$	36	24	Dollar
%	37	25	Percent
&	38	26	Ampersand
'	39	27	Apostrophe, closing single quotation mark
(	40	28	Opening parenthesis
)	41	29	Closing parenthesis
*	42	2A	Asterisk
+	43	2B	Plus
,	44	2C	Comma
-	45	2D	Hyphen, minus
.	46	2E	Period, decimal point
/	47	2F	Slash, slant
0	48	30	Digit 0
1	49	31	Digit 1
2	50	32	Digit 2
3	51	33	Digit 3
4	52	34	Digit 4
5	53	35	Digit 5
6	54	36	Digit 6
7	55	37	Digit 7
8	56	38	Digit 8
9	57	39	Digit 9
:	58	3A	Colon
;	59	3B	Semicolon
<	60	3C	Less than
=	61	3D	Equals
>	62	3E	Greater than
?	63	3F	Question mark
@	64	40	Commercial At

Table A-1 ASCII table (characters that can be displayed), continued

Character	Decimal	Hexadecimal	Meaning
A	65	41	Capital letter A
B	66	42	Capital letter B
C	67	43	Capital letter C
D	68	44	Capital letter D
E	69	45	Capital letter E
F	70	46	Capital letter F
G	71	47	Capital letter G
H	72	48	Capital letter H
I	73	49	Capital letter I
J	74	4A	Capital letter J
K	75	4B	Capital letter K
L	76	4C	Capital letter L
M	77	4D	Capital letter M
N	78	4E	Capital letter N
O	79	4F	Capital letter O
P	80	50	Capital letter P
Q	81	51	Capital letter Q
R	82	52	Capital letter R
S	83	53	Capital letter S
T	84	54	Capital letter T
U	85	55	Capital letter U
V	86	56	Capital letter V
W	87	57	Capital letter W
X	88	58	Capital letter X
Y	89	59	Capital letter Y
Z	90	5A	Capital letter Z
[	91	5B	Opening bracket
\	92	5C	Backslash
]	93	5D	Closing bracket
^	94	5E	Circumflex
_	95	5F	Underline
'	96	60	Opening single quotation mark
a	97	61	Small letter a
b	98	62	Small letter b
c	99	63	Small letter c
d	100	64	Small letter d

Table A-1 ASCII table (characters that can be displayed), continued

Character	Decimal	Hexadecimal	Meaning
e	101	65	Small letter e
f	102	66	Small letter f
g	103	67	Small letter g
h	104	68	Small letter h
i	105	69	Small letter i
j	106	6A	Small letter j
k	107	6B	Small letter k
l	108	6C	Small letter l
m	109	6D	Small letter m
n	110	6E	Small letter n
o	111	6F	Small letter o
p	112	70	Small letter p
q	113	71	Small letter q
r	114	72	Small letter r
s	115	73	Small letter s
t	116	74	Small letter t
u	117	75	Small letter u
v	118	76	Small letter v
w	119	77	Small letter w
x	120	78	Small letter x
y	121	79	Small letter y
z	122	7A	Small letter z
{	123	7B	Opening brace
	124	7C	Vertical line
}	125	7D	Closing brace
~	126	7E	Tilde

## A.2 List of abbreviations

---

### Note

The following list of abbreviations includes all abbreviations and their meanings used in the entire SINAMICS family of drives.

---

Abbreviation	Source of abbreviation	Significance
<b>A</b>		
A...	Alarm	Warning
AC	Alternating Current	Alternating current
ADC	Analog Digital Converter	Analog-Digital converter
AI	Analog Input	Analog input
AIM	Active Interface Module	Active Interface Module
ALM	Active Line Module	Active Line Module
AO	Analog Output	Analog output
AOP	Advanced Operator Panel	Advanced Operator Panel
APC	Advanced Positioning Control	Advanced Positioning Control
AR	Automatic Restart	Automatic restart
ASC	Armature Short Circuit	Armature short-circuit
ASCII	American Standard Code for Information Interchange	American coding standard for the exchange of information
AS-i	AS-Interface (Actuator Sensor Interface)	AS-interface (open bus system in automation technology)
ASM	Asynchronmotor	Induction motor
<b>B</b>		
BB	Betriebsbedingung	Operation condition
BERO	-	Contactless proximity switch
BI	Binector Input	Binector input
BIA	Berufsgenossenschaftliches Institut für Arbeitssicherheit	BG-Institute for Occupational Safety and Health
BICO	Binector Connector Technology	Binector connector technology
BLM	Basic Line Module	Basic Line Module
BO	Binector Output	Binector output
BOP	Basic Operator Panel	Basic operator panel
<b>C</b>		
C	Capacitance	Capacitance
C...	-	Safety message
CAN	Controller Area Network	Serial bus system
CBC	Communication Board CAN	Communication Board CAN
CBE	Communication Board Ethernet	PROFINET communication module (Ethernet)
CD	Compact Disc	Compact disk
CDS	Command Data Set	Command data set
CF Card	CompactFlash Card	CompactFlash card
CI	Connector Input	Connector input

<b>Abbreviation</b>	<b>Source of abbreviation</b>	<b>Significance</b>
CLC	Clearance Control	Clearance control
CNC	Computerized Numerical Control	Computer-supported numerical control
CO	Connector Output	Connector output
CO/BO	Connector Output / Binector Output	Connector Output / Binector Output
COB ID	CAN Object-Identification	CAN Object-Identification
CoL	Certificate of License	Certificate of License
COM	Common contact of a changeover relay	Center contact of a changeover contact
COMM	Commissioning	Startup
CP	Communication Processor	Communications processor
CPU	Central Processing Unit	Central processing unit
CRC	Cyclic Redundancy Check	Cyclic redundancy check
CSM	Control Supply Module	Control Supply Module
CU	Control Unit	Control Unit
CUA	Control Unit Adapter	Control Unit Adapter
CUD	Control Unit DC	Control Unit DC
<b>D</b>		
DAC	Digital Analog Converter	Digital analog converter
DC	Direct Current	DC current
DCB	Drive Control Block	Drive Control Block
DCBRK	DC Brake	DC braking
DCC	Drive Control Chart	Drive Control Chart
DCN	Direct Current Negative	Direct current negative
DCP	Direct Current Positive	Direct current positive
DDC	Dynamic Drive Control	Dynamic Drive Control
DDS	Drive Data Set	Drive Data Set
DI	Digital Input	Digital input
DI/DO	Digital Input / Digital Output	Digital input/output, bidirectional
DMC	DRIVE-CLiQ Hub Module Cabinet	DRIVE-CLiQ Hub Module Cabinet
DME	DRIVE-CLiQ Hub Module External	DRIVE-CLiQ Hub Module External
DMM	Double Motor Module	Double Motor Module
DO	Digital Output	Digital output
DO	Drive Object	Drive object
DP	Decentralized Peripherals	Distributed I/O
DPRAM	Dual-Port Random Access Memory	Dual-Port Random Access Memory
DQ	DRIVE-CLiQ	DRIVE-CLiQ
DRAM	Dynamic Random Access Memory	Dynamic Random Access Memory
DRIVE-CLiQ	Drive Component Link with IQ	Drive Component Link with IQ
DSC	Dynamic Servo Control	Dynamic Servo Control
DTC	Digital Time Clock	Timer
<b>E</b>		
EASC	External Armature Short-Circuit	External armature short-circuit
EDS	Encoder Data Set	Encoder data set

<b>Abbreviation</b>	<b>Source of abbreviation</b>	<b>Significance</b>
EEPROM	Electrically Erasable Programmable Read-Only Memory	Electrically Erasable Programmable Read-Only-Memory
EGB	Elektrostatisch gefährdete Baugruppen	Electrostatic sensitive devices
ELCB	Earth Leakage Circuit-Breaker	Residual current operated circuit breaker
ELP	Earth Leakage Protection	Ground-fault monitoring
EMC	Electromagnetic Compatibility	Electromagnetic compatibility
EMF	Electromotive Force	Electromotive force
EMK	Elektromotorische Kraft	Electromotive force
EMV	Elektromagnetische Verträglichkeit	Electromagnetic compatibility
EN	Europäische Norm	European Standard
EnDat	Encoder-Data-Interface	Encoder interface
EP	Enable Pulses	Pulse enable
EPOS	Einfachpositionierer	Basic positioner
ES	Engineering System	Engineering system
ESB	Ersatzschaltbild	Equivalent circuit diagram
ESD	Electrostatically Sensitive Devices	Electrostatic sensitive devices
ESM	Essential Service Mode	Essential service mode
ESR	Extended Stop and Retract	Extended stop and retract
<b>F</b>		
F...	Fault	Fault
FAQ	Frequently Asked Questions	Frequently Asked Questions
FBLOCKS	Free Blocks	Free function blocks
FCC	Function control chart	Function control chart
FCC	Flux Current Control	Flux current control
FD	Function Diagram	Function diagram
F-DI	Fail-safe Digital Input	Failsafe digital input
F-DO	Fail-safe Digital Output	Fail-safe digital output
FEEPROM	Flash-EPROM	Non-volatile write and read memory
FG	Function Generator	Function Generator
FI	-	Fault current
FOC	Fiber-Optic Cable	Fiber-optic cable
FP	Funktionsplan	Function diagram
FPGA	Field Programmable Gate Array	Field Programmable Gate Array
FW	Firmware	Firmware
<b>G</b>		
GB	Gigabyte	Gigabyte
GC	Global Control	Global control telegram (broadcast telegram)
GND	Ground	Reference potential for all signal and operating voltages, usually defined as 0 V (also referred to as M)
GSD	Gerätstammdatei	Generic Station Description: Describes the features of a PROFIBUS slave
GSV	Gate Supply Voltage	Gate supply voltage
GUID	Globally Unique Identifier	Globally Unique Identifier

Abbreviation	Source of abbreviation	Significance
<b>H</b>		
HF	High Frequency	High frequency
HFD	Hochfrequenzdrossel	Radio frequency reactor
HLA	Hydraulic Linear Actuator	Hydraulic linear actuator
HLG	Hochlaufgeber	Ramp-function Generator
HM	Hydraulic Module	Hydraulic Module
HMI	Human Machine Interface	Human Machine Interface
HTL	High-Threshold Logic	Logic with high interference threshold
HW	Hardware	Hardware
<b>I</b>		
i. V.	In Vorbereitung	Under development: This property is currently not available
I/O	Input/Output	Input/output
I2C	Inter-Integrated Circuit	Internal serial data bus
IASC	Internal Armature Short-Circuit	Internal armature short-circuit
IBN	Inbetriebnahme	Startup
ID	Identifier	Identification
IE	Industrial Ethernet	Industrial Ethernet
IEC	International Electrotechnical Commission	International Electrotechnical Commission
IF	Interface	Interface
IGBT	Insulated Gate Bipolar Transistor	Insulated gate bipolar transistor
IGCT	Integrated Gate-Controlled Thyristor	Semiconductor power switch with integrated control electrode
IL	Impulslöschung	Pulse suppression
IP	Internet Protocol	Internet protocol
IPO	Interpolator	Interpolator
IT	Isolé Terre	Non-grounded three-phase line supply
IVP	Internal Voltage Protection	Internal voltage protection
<b>J</b>		
JOG	Jogging	Jogging
<b>K</b>		
KDV	Kreuzweiser Datenvergleich	Data cross-check
KHP	Know-How Protection	Know-how protection
KIP	Kinetische Pufferung	Kinetic buffering
Kp	-	Proportional gain
KTY84	-	Temperature sensor
<b>L</b>		
L	-	Symbol for inductance
LED	Light Emitting Diode	Light emitting diode
LIN	Linearmotor	Linear motor
LR	Lageregler	Position controller
LSB	Least Significant Bit	Least Significant Bit
LSC	Line-side converter	Line-side converter

<b>Abbreviation</b>	<b>Source of abbreviation</b>	<b>Significance</b>
LSS	Line-Side Switch	Line-side switch
LU	Length Unit	Length unit
LWL	Lichtwellenleiter	Fiber-optic cable
<b>M</b>		
M	-	Symbol for torque
M	Masse	Reference potential for all signal and operating voltages, usually defined as 0 V (also referred to as GND)
MB	Megabyte	Megabyte
MCC	Motion Control Chart	Motion Control Chart
MDI	Manual Data Input	Manual data input
MDS	Motor Data Set	Motor data set
MLFB	Maschinenlesbare Fabrikatebezeichnung	Machine-readable product code
MM	Motor Module	Motor Module
MMC	Man-Machine Communication	Man-machine communication
MMC	Micro Memory Card	Micro memory card
MSB	Most Significant Bit	Most significant bit
MSC	Motor Side Converter	Motor-side converter
MSCY_C1	Master Slave Cycle Class 1	Cyclic communication between master (class 1) and slave
MSC	Motorstromrichter	Motor-side converter
MT	Messtaster	Probe
<b>N</b>		
N. C.	Not Connected	Not connected
N...	No Report	No report or internal message
NAMUR	Normenarbeitsgemeinschaft für Mess- und Regeltechnik in der chemischen Industrie	Standardization association for measurement and control in chemical industries
NC	Normally Closed (contact)	NC contacts
NC	Numerical Control	Numerical control
NEMA	National Electrical Manufacturers Association	Standardization association in USA (United States of America)
NM	Nullmarke	Zero mark
NO	Normally Open (contact)	NO contacts
NSR	Netzstromrichter	Line-side converter
NVRAM	Non-Volatile Random Access Memory	Non-volatile read/write memory
<b>O</b>		
OA	Open Architecture	Software component which provides additional functions for the SINAMICS drive system
OAIF	Open Architecture Interface	Version of the SINAMICS firmware as of which the OA-application can be used
OASP	Open Architecture Support Package	Expands the STARTER commissioning tool by the corresponding OA-application
OC	Operating Condition	Operation condition
OEM	Original Equipment Manufacturer	Original equipment manufacturer

<b>Abbreviation</b>	<b>Source of abbreviation</b>	<b>Significance</b>
OLP	Optical Link Plug	Bus connector for fiber-optic cable
OMI	Option Module Interface	Option Module Interface
<b>P</b>		
p...	-	Adjustable parameters
P1	Processor 1	CPU 1
P2	Processor 2	CPU 2
PB	PROFIBUS	PROFIBUS
PcCtrl	PC Control	Master control
PD	PROFIdrive	PROFIdrive
PDC	Precision Drive Control	Precision Drive Control
PDS	Power Unit Data Set	Power unit data set
PE	Protective Earth	Protective ground
PELV	Protective Extra-Low Voltage	Safety extra-low voltage
PFH	Probability of dangerous failure per hour	Probability of dangerous failure per hour
PG	Programmiergerät	Programming device
PI	Proportional integral	Proportional integral
PID	Proportional integral differential	Proportional integral differential
PLC	Programmable Logic Controller	Programmable logic controller
PLL	Phase-locked loop	Phase-locked loop
PM	Power Module	Power Module
PMSM	Permanent-Magnet Synchronous Motor	Permanent-magnet synchronous motor
PN	PROFINET	PROFINET
PNO	PROFIBUS Nutzerorganisation	PROFIBUS user organization
PPI	Point-to-Point Interface	Point-to-point interface
PRBS	Pseudo Random Binary Signal	White noise
PROFIBUS	Process Field Bus	Serial data bus
PS	Power Supply	Power supply
PSA	Power Stack Adapter	Power Stack Adapter
PT1000	-	Temperature sensor
PTC	Positive Temperature Coefficient	Positive temperature coefficient
PTP	Point-To-Point	Point-to-point
PWM	Pulse Width Modulation	Pulse width modulation
PZD	Prozessdaten	Process data
<b>Q</b>		
<b>R</b>		
r...	-	Display parameters (read only)
RAM	Random Access Memory	Speicher zum Lesen und Schreiben
RCCB	Residual Current Circuit Breaker	Residual current operated circuit breaker
RCD	Residual Current Device	Residual current operated circuit breaker
RCM	Residual Current Monitor	Residual current monitor
REL	Reluctance motor textile	Reluctance motor textile
RESM	Reluctance Synchronous Motor	Synchronous reluctance motor
RFG	Ramp-Function Generator	Ramp-function Generator

<b>Abbreviation</b>	<b>Source of abbreviation</b>	<b>Significance</b>
RJ45	Registered Jack 45	Term for an 8-pin socket system for data transmission with shielded or non-shielded multi-wire copper cables
RKA	Rückkühlanlage	Cooling unit
RLM	Renewable Line Module	Renewable Line Module
RO	Read Only	Read only
ROM	Read-Only Memory	Read-only memory
RPDO	Receive Process Data Object	Receive Process Data Object
RS232	Recommended Standard 232	Interface standard for a cable-connected serial data transmission between a sender and receiver (also known as EIA232)
RS485	Recommended Standard 485	Interface standard for a cable-connected differential, parallel, and/or serial bus system (data transmission between a number of senders and receivers, also known as EIA485)
RTC	Real-Time Clock	Real-time clock
RZA	Raumzeigerapproximation	Space-vector approximation
<b>S</b>		
S1	-	Continuous operation
S3	-	Intermittent duty
SAM	Safe Acceleration Monitor	Safe acceleration monitoring
SBC	Safe Brake Control	Safe brake control
SBH	Sicherer Betriebshalt	Safe operating stop
SBR	Safe Brake Ramp	Safe brake ramp monitoring
SBT	Safe Brake Test	Safe brake test
SCA	Safe Cam	Safe cam
SCC	Safety Control Channel	Safety Control Channel
SD Card	SecureDigital Card	Secure digital memory card
SDC	Standard Drive Control	Standard Drive Control
SDI	Safe Direction	Safe motion direction
SE	Sicherer Software-Endschalter	Safe software limit switch
SESM	Separately Excited Synchronous Motor	Separately excited synchronous motor
SG	Sicher reduzierte Geschwindigkeit	Safely-limited speed
SGA	Sicherheitsgerichteter Ausgang	Safety-related output
SGE	Sicherheitsgerichteter Eingang	Safety-related input
SH	Sicherer Halt	Safe stop
SI	Safety Integrated	Safety Integrated
SIC	Safety Info Channel	Safety Info Channel
SIL	Safety Integrity Level	Safety Integrity Level
SITOP	-	Siemens power supply system
SLM	Smart Line Module	Smart Line Module
SLP	Safely Limited Position	Safely Limited Position
SLS	Safely-Limited Speed	Safely-limited speed
SLVC	Sensorless Vector Control	Sensorless vector control

<b>Abbreviation</b>	<b>Source of abbreviation</b>	<b>Significance</b>
SM	Sensor Module	Sensor Module
SMC	Sensor Module Cabinet	Sensor Module Cabinet
SME	Sensor Module External	Sensor Module External
SMI	SINAMICS Sensor Module Integrated	SINAMICS Sensor Module Integrated
SMM	Single Motor Module	Single Motor Module
SN	Sicherer Software-Nocken	Safe software cam
SOS	Safe Operating Stop	Safe operating stop
SP	Service Pack	Service pack
SP	Safe Position	Safe position
SPC	Setpoint Channel	Setpoint channel
SPI	Serial Peripheral Interface	Serial peripheral interface
SPS	Speicherprogrammierbare Steuerung	Programmable logic controller
SS1	Safe Stop 1	Safe Stop 1 (monitored for time and ramp)
SS1E	Safe Stop 1 External	Safe Stop 1 with external stop
SS2	Safe Stop 2	Safe Stop 2
SS2E	Safe Stop 2 External	Safe Stop 2 with external stop
SSI	Synchronous Serial Interface	Synchronous serial interface
SSM	Safe Speed Monitor	Safe feedback from speed monitor
SSP	SINAMICS support package	SINAMICS support package
STO	Safe Torque Off	Safe torque off
STW	Steuerwort	Control word
<b>T</b>		
TB	Terminal Board	Terminal Board
TEC	Technology Extension	Software component which is installed as an additional technology package and which expands the functionality of SINAMICS (previously OA-application)
TIA	Totally Integrated Automation	Totally Integrated Automation
TM	Terminal Module	Terminal Module
TN	Terre Neutre	Grounded three-phase line supply
Tn	-	Integral time
TPDO	Transmit Process Data Object	Transmit Process Data Object
TT	Terre Terre	Grounded three-phase line supply
TTL	Transistor-Transistor Logic	Transistor-Transistor-Logik
Tv	-	Rate time
<b>U</b>		
UL	Underwriters Laboratories Inc.	Underwriters Laboratories Inc.
UPS	Uninterruptible Power Supply	Uninterruptible power supply
USV	Unterbrechungsfreie Stromversorgung	Uninterruptible power supply
UTC	Universal Time Coordinated	Universal time coordinated
<b>V</b>		
VC	Vector Control	Vector control
Vdc	-	DC-link voltage

<b>Abbreviation</b>	<b>Source of abbreviation</b>	<b>Significance</b>
VdcN	-	Partial DC-link voltage negative
VdcP	-	Partial DC-link voltage positive
VDE	Verband Deutscher Elektrotechniker	Verband Deutscher Elektrotechniker [Association of German Electrical Engineers]
VDI	Verein Deutscher Ingenieure	Verein Deutscher Ingenieure [Association of German Engineers]
VPM	Voltage Protection Module	Voltage Protection Module
Vpp	Volt peak to peak	Volt peak to peak
VSM	Voltage Sensing Module	Voltage Sensing Module
<b>W</b>		
WEA	Wiedereinschaltautomatik	Automatic restart
WZM	Werkzeugmaschine	Machine tool
<b>X</b>		
XML	Extensible Markup Language	Extensible markup language (standard language for Web publishing and document management)
<b>Y</b>		
<b>Z</b>		
ZK	Zwischenkreis	DC link
ZM	Zero Mark	Zero mark
ZSW	Zustandswort	Status Word

## A.3 References

### Documentation for SINAMICS

#### Catalogs

<b>/D 31/</b>	<b>SINAMICS Inverters for Single-Axis Drives and SIMOTICS Motors</b>	
	Article number: E86060-K5531-A101-A2	Edition: 2015
<b>/D 31 News/</b>	<b>SINAMICS Converters for Single-Axis Drives and SIMOTICS Motors</b>	
	Article number: E86060-E5531-A101-A2	Edition: 03/2016
<b>/D 11/</b>	<b>SINAMICS G130 Drive Converter Chassis Units SINAMICS G150 Drive Converter Cabinet Units</b>	
	Article number: E86060-K5511-A101-A6	Edition: 2015
<b>/PM 21/</b>	<b>SIMOTION, SINAMICS S120 and SIMOTICS, Equipment for Production Machines</b>	
	Article number: E86060-K4921-A101-A3	Edition: 2013
<b>/D 21.3/</b>	<b>SINAMICS S120 Chassis Format Units and Cabinet Modules SINAMICS S150 Converter Cabinet Units</b>	
	Article number: E86060-K5521-A131-A5	Edition: 2015
<b>/D 35/</b>	<b>Inverters for Pumps, Fans, Compressors SINAMICS G120P and SINAMICS G120P Cabinet</b>	
	Article number: E86060-K5535-A101-A1	Edition: 2014

#### Related catalogs

<b>/ST 70/</b>	<b>SIMATIC Products for Totally Integrated Automation</b>	
	Article number: E86060-K4670-A101-B5	Edition: 2015
<b>/ST 70 N/</b>	<b>SIMATIC Products for Totally Integrated Automation</b>	
	Article number: E86060-K4670-A151-A8	Edition: 2016
<b>/NC 62/</b>	<b>SINUMERIK 840D, Equipment for Machine Tools</b>	
	Article number: E86060-K4462-A101-A2	Edition: 2016
<b>/NC 81.1/</b>	<b>SINUMERIK 808, Equipment for Machine Tools</b>	
	Article number: E86060-K4481-A111-A2-7600	Edition: 2013
<b>/NC 82/</b>	<b>SINUMERIK 828, Equipment for Machine Tools</b>	
	Article number: E86060-K4482-A101-A4	Edition: 2015

## Interactive catalogs

<b>/CA 01/</b>	<b>Products for Automation and Drive Technology</b> DVD Article number: e86060-d4001-a500-d6	Edition: 10/2015
<b>/Mall/</b>	<b>Industry Mall, Catalog and Ordering System for Automation and Drives</b> <a href="http://www.siemens.com/industrymall">http://www.siemens.com/industrymall</a>	

## User documentation

<b>/BA1/</b>	<b>SINAMICS G150</b> Operating instructions Article number: On request	Edition: 07/2016
<b>/BA2/</b>	<b>SINAMICS G130</b> Operating instructions Article number: On request	Edition: 07/2016
<b>/BA3/</b>	<b>SINAMICS S150</b> Operating instructions Article number: On request	Edition: 07/2016
<b>/GH1/</b>	<b>SINAMICS S120</b> Control Units and Additional System Components Manual Article number: 6SL3097-4AH00-0?P6	Edition: 07/2016
<b>/GH2/</b>	<b>SINAMICS S120</b> Booksize Power Units Manual Article number: 6SL3097-4AC00-0?P8	Edition: 07/2016
<b>/GH3/</b>	<b>SINAMICS S120</b> Chassis Power Units Equipment Manual Air-Cooled Article number: 6SL3097-4AE00-0?P5	Edition: 07/2016
<b>/GH4/</b>	<b>SINAMICS S120</b> Manual Booksize C/D Type Article number: 6SL3097-4AC20-0?P0	Edition: 10/2015
<b>/GH5/</b>	<b>SINAMICS S120</b> Cabinet Modules Manual Article number: On request	Edition: 07/2016

<b>/GH6/</b>	<b>SINAMICS S120</b> AC Drive Manual Article number: 6SL3097-4AL00-0?P5	Edition: 07/2016
<b>/GH7/</b>	<b>SINAMICS S120</b> Chassis Power Units Equipment Manual Liquid-Cooled Article number: 6SL3097-4AM00-0?P6	Edition: 09/2015
<b>/GH12/</b>	<b>SINAMICS S120M</b> Distributed Drive Technology Manual Article number: 6SL3097-4AW00-0?P3	Edition: 12/2014
<b>/GS1/</b>	<b>SINAMICS S120</b> Getting Started with STARTER Article number: 6SL3097-4AG00-0?P4	Edition: 07/2016
<b>/IH1/</b>	<b>SINAMICS S120</b> Commissioning Manual with STARTER Article number: 6SL3097-4AF00-0?P5	Edition: 07/2016
<b>/IH2/</b>	<b>SINAMICS S120</b> CANopen Commissioning Manual Article number: 6SL3097-4AA00-0?P2	Edition: 07/2016
<b>/FH1/</b>	<b>SINAMICS S120</b> Drive Functions Function Manual Article number: 6SL3097-4AB00-0?P5	Edition: 07/2016
<b>/FHS/</b>	<b>SINAMICS S120</b> Function Manual for Safety Integrated Article number: 6SL3097-4AR00-0?P6	Edition: 07/2016
<b>/FH4/</b>	<b>SINAMICS/SIMOTION</b> DCC Standard Blocks Function Manual Article number: 6SL3097-4AQ00-0?P4	Edition: 07/2016
<b>/PB1/</b>	<b>SINAMICS/SIMOTION</b> Programming and Operating Manual for DCC Editor Description Article number: 6SL3097-4AN00-0?P3	Edition: 07/2016
<b>/LH1/</b>	<b>SINAMICS S120/S150</b> List Manual Article number: 6SL3097-4AP00-0?P8	Edition: 07/2016
<b>/MA1/</b>	<b>SINAMICS/SINUMERIK</b> Machine Configuration Guidelines Article number: 6FC5397-6CP10-0?A2	Edition: 01/2013

<b>/SH1/</b>	<b>SINAMICS S120 and SIMODRIVE 611</b> Control Cabinet Integration Guidelines Article number: 6SL3097-0AT00-0?P0	Edition: 09/2007
<b>/SH2/</b>	<b>SINAMICS S120 High Frequency Drive</b> System Manual Article number: 6SL3097-4AH10-0?P3	Edition: 04/2015
<b>/SH3/</b>	<b>SINAMICS S120 Hydraulic Drive</b> System Manual Article number: 6SL3097-4BA00-0?P2	Edition: 07/2016
<b>/PFK7S/</b>	<b>SIMOTICS S-1FK7 Synchronous Motors for SINAMICS S110/S120</b> Configuration Manual Article number: 6SN1197-0AD16-0?P4	Edition: 10/2011
<b>/PFT7S/</b>	<b>SIMOTICS S-1FT7 Synchronous Motors for SINAMICS S120</b> Configuration Manual Article number: 6SN1197-0AD13-0?P5	Edition: 09/2015
<b>/PKTS/</b>	<b>Complete SIMOTICS T-1FW3 Torque Motors</b> Configuration Manual Article number: 6SN1197-0AD70-0?P8	Edition: 11/2015
<b>/PJ1FN3/</b>	<b>SIMOTICS L-1FN3 Linear Motors</b> Configuration Manual Article number: 6SN1197-0AB86-0?P1	Edition: 03/2015
<b>/1FN3_BE/</b>	<b>SIMOTICS L-1FN3 Linear Motors</b> Operating instructions Article number: 6SN1197-0AF01-0?P0	Edition: 03/2012
<b>/PJTMS/</b>	<b>SIMOTICS T-1FW6 Built-In Torque Motors</b> Configuration Manual Article number: 6SN1197-0AE00-0?P6	Edition: 09/2012
<b>/1FW6_BE/</b>	<b>SIMOTICS T-1FW6 Built-In Torque Motors</b> Operating Instructions Article number: 6SN1197-0AF00-0?P2	Edition: 01/2016
<b>/PJTMS2/</b>	<b>Non-Ventilated SIMOTICS T-1FW6 Built-In Torque Motors</b> Configuration Manual Article number: 6SN1197-0AE01-0?P2	Edition: 02/2015
<b>/1FW6_BE2/</b>	<b>Non-Ventilated SIMOTICS T-1FW6 Built-In Torque Motors</b> Operating Instructions Article number: 6SN1197-0AF02-0?P1	Edition: 10/2014

<b>/PH8S/</b>	<b>SIMOTICS M-1PH8 Synchronous/Induction Motors</b> Configuration Manual Article number: 6SN1197-0AD74-0?P1	Edition: 05/2012
<b>/PMH2/</b>	<b>SINAMICS SIMAG H2 Hollow-Shaft Measuring System</b> Configuration Manual Article number: 6SN1197-0AB31-0?P8	Edition: 01/2011
<b>/PH1/</b>	<b>EMC Installation Guidelines</b> Configuration Manual Article number: 6FC5297-0AD30-0?P3	Edition: 01/2012

### Documentation for PROFIBUS/PROFINET/PROFlenergy

<b>/P1/</b>	<b>PROFIBUS-DP/DPV1 IEC 61158</b> Basics, Tips and Tricks for Users Hüthig; Manfred Popp, 2nd Edition ISBN 3-7785-2781-9	
<b>/P2/</b>	<b>PROFIBUS-DP, Getting Started</b> PROFIBUS Nutzerorganisation e.V.; Manfred Popp Article number: 4.071	
<b>/P3/</b>	<b>Manual for PROFIBUS Networks, SIEMENS</b> Article number: 6GK1970-5CA20-0AA0	
<b>/P4/</b>	<b>PROFIBUS and PROFINET, PROFIdrive Profile Drive Technology</b> PROFIBUS Nutzerorganisation e. V. Haid-und-Neu-Straße 7, D-76131 Karlsruhe, Germany <a href="http://www.profibus.com">http://www.profibus.com</a> – <a href="http://www.profinet.com">http://www.profinet.com</a> Article number: 3.172	Version 4.0 August 2005
<b>/P5/</b>	<b>The PROFINET IO Book</b> Basics and Tips for Successful Use VDE-Verlag Berlin; Manfred Popp ISBN: 978-3-8007-3274-6	2nd Edition, 2010
<b>/P6/</b>	<b>Automation with PROFINET</b> Industrial Communication Based on Industrial Ethernet Publicis Publishing; Raimond Pigan, Mark Metter ISBN: 978-3-8957-8293-0	2nd Edition, 2008





# Index

## Numbers

- 1020
  - Explanation of the symbols (part 1), 1102
- 1021
  - Explanation of the symbols (part 2), 1103
- 1022
  - Explanation of the symbols (part 3), 1104
- 1030
  - Handling BICO technology, 1105
- 2119
  - CU320-2 Overview, 1107
- 2120
  - CU320-2 digital inputs, electrically isolated (DI 0 ... DI 3, DI 16, DI 17), 1108
- 2121
  - CU320-2 digital inputs, electrically isolated (DI 4 ... DI 7, DI 20, DI 21), 1109
- 2130
  - CU320-2 digital inputs/outputs, bidirectional (DI/DO 8 ... DI/DO 9), 1110
- 2131
  - CU320-2 digital inputs/outputs, bidirectional (DI/DO 10 ... DI/DO 11), 1111
- 2132
  - CU320-2 digital inputs/outputs, bidirectional (DI/DO 12 ... DI/DO 13), 1112
- 2133
  - CU320-2 digital inputs/outputs, bidirectional (DI/DO 14 ... DI/DO 15), 1113
- 2197
  - SINAMICS Link overview (r0108.31 = 1, p8835 = 3), 1115
- 2198
  - SINAMICS Link configuration (r0108.31 = 1, p8835 = 3), 1116
- 2199
  - SINAMICS Link receive data (r0108.31 = 1, p8835 = 3), 1117
- 2200
  - SINAMICS Link send data (r0108.31 = 1, p8835 = 3), 1118
- 2381
  - Control commands / interrogation commands, 1120
- 2382
  - States, 1121
- 2401
  - PROFIdrive overview, 1124
- 2410
  - PROFIBUS (PB) / PROFINET (PN), addresses and diagnostics, 1125
- 2415
  - Standard telegrams and process data 1, 1126
- 2416
  - Standard telegrams and process data 2, 1127
- 2419
  - Manufacturer-specific telegrams and process data 1, 1128
- 2420
  - Manufacturer-specific telegrams and process data 2, 1129
- 2421
  - Manufacturer-specific telegrams and process data 3, 1130
- 2422
  - Manufacturer-specific telegrams and process data 4, 1131
- 2423
  - Manufacturer-specific/free telegrams and process data, 1132
- 2425
  - STW1\_BM control word, metal industry interconnection, 1133
- 2426
  - STW2\_BM control word, metal industry interconnection, 1134
- 2427
  - E\_STW1\_BM control word, infeed metal industry interconnection, 1135
- 2428
  - ZSW1\_BM status word, metal industry interconnection, 1136
- 2429
  - ZSW2\_BM status word, metal industry interconnection, 1137
- 2430
  - E\_ZSW1\_BM status word, infeed metal industry interconnection, 1138
- 2439
  - PZD receive signals interconnection, profile-specific, 1139
- 2440
  - PZD receive signals interconnection, manufacturer-specific, 1140

- 2441  
STW1 control word interconnection (p2038 = 2),  
1141
- 2442  
STW1 control word interconnection (p2038 = 0),  
1142
- 2444  
STW2 control word interconnection (p2038 = 0),  
1143
- 2447  
E\_STW1 control word infeed interconnection, 1144
- 2449  
PZD send signals interconnection, profile-specific,  
1145
- 2450  
PZD send signals interconnection, manufacturer-  
specific, 1146
- 2451  
ZSW1 status word interconnection (p2038 = 2), 1147
- 2452  
ZSW1 status word interconnection (p2038 = 0), 1148
- 2454  
ZSW2 status word interconnection (p2038 = 0), 1149
- 2457  
E\_ZSW1 status word, infeed interconnection, 1150
- 2468  
IF1 receive telegram, free interconnection via BICO  
(p0922 = 999), 1151
- 2470  
IF1 send telegram, free interconnection via BICO  
(p0922 = 999), 1152
- 2472  
IF1 status words, free interconnection, 1153
- 2481  
IF1 receive telegram, free interconnection via BICO  
(p0922 = 999), 1154
- 2483  
IF1 send telegram, free interconnection via BICO  
(p0922 = 999), 1155
- 2485  
IF2 receive telegram, free interconnection, 1156
- 2487  
IF2 send telegram, free interconnection, 1157
- 2489  
IF2 status words, free interconnection, 1158
- 2491  
IF2 receive telegram, free interconnection, 1159
- 2493  
IF2 send telegram, free interconnection, 1160
- 2495  
CU\_STW1 control word 1, Control Unit  
interconnection, 1161
- 2496  
CU\_ZSW1 status word 1, Control Unit  
interconnection, 1162
- 2497  
A\_DIGITAL interconnection, 1163
- 2498  
E\_DIGITAL interconnection, 1164
- 2499  
A\_DIGITAL\_1 interconnection, 1165
- 2500  
E\_DIGITAL\_1 interconnection, 1166
- 2501  
Control word, sequence control, 1168
- 2503  
Status word, sequence control, 1169
- 2505  
Control word, setpoint channel, 1170
- 2520  
Control word, speed controller, 1171
- 2522  
Status word, speed controller, 1172
- 2526  
Status word, closed-loop control, 1173
- 2530  
Status word, closed-loop current control, 1174
- 2534  
Status word, monitoring functions 1, 1175
- 2536  
Status word, monitoring functions 2, 1176
- 2537  
Status word, monitoring functions 3, 1177
- 2546  
Control word, faults/alarms, 1178
- 2548  
Status word, faults/alarms 1 and 2, 1179
- 2610  
Sequencer, 1181
- 2634  
Missing enables, line contactor control, logic  
operation, 1182
- 2701  
Basic brake control (r0108.14 = 0), 1184
- 2704  
Extended brake control, zero-speed detection  
(r0108.14 = 1), 1185
- 2707  
Extended brake control, open/close brake  
(r0108.14 = 1), 1186
- 2711  
Extended brake control, signal outputs  
(r0108.14 = 1), 1187
- 2800  
Basic Functions, parameter manager, 1189
- 2802  
Monitoring functions and  
faults/alarms, 1190
- 2804  
SI status CU, MM, CU + MM, group STO, 1191

- 2806  
S\_STW1/2 Safety control word 1/2, S\_ZSW1/2  
Safety status word 1/2, 1192
- 2810  
STO (Safe Torque Off),  
SS1 (Safe Stop 1), 1193
- 2811  
STO (Safe Torque Off),  
safe pulse suppression, 1194
- 2814  
SBC (Safe Brake Control),  
SBA (Safe Brake Adapter), 1195
- 2818  
SI Extended Functions, parameter manager, 1197
- 2819  
SS1, SS2, SOS, internal STOP B, C, D, F, 1198
- 2820  
SLS (Safely-Limited Speed), 1199
- 2821  
Safe referencing, 1200
- 2822  
SLP (Safely-Limited Position), 1201
- 2823  
SSM (Safe Speed Monitor), 1202
- 2824  
SDI (Safe Direction), 1203
- 2825  
SAM (Safe Acceleration Monitor), SBR (Safe Brake  
Ramp), 1204
- 2836  
SBT (Safe Brake Test), 1205
- 2837  
Selection of active control word, 1206
- 2840  
SI Motion drive-integrated control signals / status  
signals, 1207
- 2842  
S\_STW1 Safety control word 1, S\_ZSW1 Safety  
status word 1, 1208
- 2843  
S\_STW2 Safety control word 2, S\_ZSW2 Safety  
status word 2, 1209
- 2890  
TM54F overview, 1211
- 2891  
TM54F parameter manager, 1212
- 2892  
TM54F Configuration, F-DI/F-DO Test, 1213
- 2893  
TM54F fail-safe digital inputs (F-DI 0 ... F-DI 4), 1214
- 2894  
TM54F fail-safe digital inputs (F-DI 5 ... F-DI 9), 1215
- 2895  
TM54F fail-safe digital outputs (F-DO 0 ... F-DO 3),  
digital inputs (DI 20 ... DI 23), 1216
- 2900  
TM54F Basic Functions control interface  
(p9601.2/3 = 0 & p9601.6 = 1), 1217
- 2901  
TM54F Basic Functions Safe State selection, 1218
- 2902  
TM54F Basic Functions assignment  
(F-DO 0 ... F-DO 3), 1219
- 2905  
TM54F Extended Functions control interface  
(p9601.2 = 1 & p9601.3 = 0), 1220
- 2906  
TM54F Extended Functions Safe State selection,  
1221
- 2907  
TM54F Extended Functions assignment  
(F-DO 0 ... F-DO 3), 1222
- 2915  
Standard telegrams, 1224
- 2917  
Manufacturer-specific telegrams, 1225
- 3001  
Setpoint channel overview, 1227
- 3010  
Fixed speed setpoints, 1228
- 3020  
Motorized potentiometer, 1229
- 3030  
Main/supplementary setpoint, setpoint scaling,  
jogging, 1230
- 3040  
Direction limitation and direction reversal, 1231
- 3050  
Skip frequency bands and speed limitations, 1232
- 3060  
Basic ramp-function generator, 1233
- 3070  
Extended ramp-function generator, 1234
- 3080  
Ramp-function generator selection, -status word,  
-tracking, 1235
- 4702  
Encoder evaluation overview, 1237
- 4704  
Raw signal sensing, 1238
- 4715  
Actual speed value and pole position sensing,  
encoder 1, n\_act\_filter 5, 1239
- 6020  
Speed control and generation of the torque limits,  
overview, 1242
- 6030  
Speed setpoint, droop, 1243

- 6031
  - Pre-control balancing, reference/acceleration model, 1244
- 6035
  - Moment of inertia estimator (r0108.10 = 1), 1245
- 6040
  - Speed controller with/without encoder, 1246
- 6050
  - Speed controller adaptation (Kp\_n/Tn\_n adaptation), 1247
- 6060
  - Torque setpoint, 1248
- 6220
  - Vdc\_max controller and Vdc\_min controller, 1249
- 6300
  - U/f control, overview, 1250
- 6301
  - U/f characteristic and voltage boost, 1251
- 6310
  - Resonance damping and slip compensation, 1252
- 6320
  - Vdc\_max controller and Vdc\_min controller (U/f), 1253
- 6490
  - Speed control configuration, 1254
- 6491
  - Flux control configuration, 1255
- 6630
  - Upper/lower torque limit, 1256
- 6640
  - Current/power/torque limits, 1257
- 6700
  - Current control, overview, 1258
- 6710
  - Current setpoint filter, 1259
- 6714
  - Iq and Id controllers, 1260
- 6721
  - Id setpoint (PEM, p0300 = 2), 1261
- 6722
  - Field weakening characteristic, Id setpoint (ASM, p0300 = 1), 1262
- 6723
  - Field weakening controller, flux controller (ASM, p0300 = 1), 1263
- 6724
  - Field weakening controller (PEM, p0300 = 2), 1264
- 6730
  - Interface to the Motor Module (ASM, p0300 = 1), 1265
- 6731
  - Interface to the Motor Module (PEM, p0300 = 2), 1266
- 6790
  - Flux setpoint (RESM, p0300 = 6), 1267
- 6791
  - Id setpoint (RESM, p0300 = 6), 1268
- 6792
  - Interface to the Motor Module (RESM, p0300 = 6), 1269
- 6799
  - Display signals, 1270
- 7010
  - Friction characteristic, 1272
- 7014
  - External Armature Short-Circuit (EASC, p0300 = 2xx or 4xx), 1273
- 7016
  - Internal Armature Short-Circuit (IASC, p0300 = 2xx or 4xx), 1274
- 7017
  - DC braking (p0300 = 1xx), 1275
- 7020
  - Synchronization, 1276
- 7033
  - Essential service mode (ESM), 1277
- 7950
  - Fixed values, binary selection (r0108.16 = 1 and p2216 = 2), 1279
- 7951
  - Fixed values, direct selection (r0108.16 = 1 and p2216 = 1), 1280
- 7954
  - Motorized potentiometer (r0108.16 = 1), 1281
- 7958
  - Closed-loop control (r0108.16 = 1), 1282
- 7960
  - DC-link voltage controller (r0108.16 = 1), 1283
- 8005
  - Signals and monitoring functions overview, 1285
- 8010
  - Speed signals 1, 1286
- 8011
  - Speed signals 2, 1287
- 8012
  - Torque signals, motor blocked/stalled, 1288
- 8013
  - Load monitoring (r0108.17 = 1), 1289
- 8016
  - Thermal monitoring, motor, motor temperature status word faults/alarms, 1290
- 8017
  - Motor temperature model 1 (I2t), 1291
- 8018
  - Motor temperature model 2, 1292
- 8019
  - Motor temperature model 3, 1293
- 8021
  - Thermal monitoring, power unit, 1294

- 8022
  - Freely parameterized I2t monitoring (SESM), 1295
- 8050
  - Diagnostics overview, 1297
- 8060
  - Fault buffer, 1298
- 8065
  - Alarm buffer, 1299
- 8070
  - Faults/alarms trigger word (r2129), 1300
- 8075
  - Faults/alarms configuration, 1301
- 8134
  - Measuring sockets (T0, T1, T2), 1302
- 8144
  - Recorder overview (r0108.5 = 1), 1303
- 8145
  - Recorder sequence control, 1304
- 8560
  - Command Data Sets (CDS), 1306
- 8565
  - Drive Data Sets (DDS), 1307
- 8570
  - Encoder Data Sets (EDS), 1308
- 8575
  - Motor Data Sets (MDS), 1309
- 8580
  - Power unit Data Sets (PDS), 1310
- 8710
  - Basic Infeed overview, 1312
- 8720
  - Control word,
    - sequence control infeed, 1313
- 8726
  - Status word,
    - sequence control infeed, 1314
- 8732
  - Sequencer, 1315
- 8738
  - Missing enables, line contactor control, 1316
- 8750
  - Interface to the Basic Infeed power unit (control signals, actual values), 1317
- 8760
  - Signals and monitoring functions (p3400 = 0), 1318
- 9099
  - TB30 overview, 1320
- 9100
  - TB30 digital inputs, electrically isolated (DI 0 to DI 3), 1321
- 9102
  - TB30 digital outputs, electrically isolated (DO 0 ... DO 3), 1322
- 9104
  - TB30 analog inputs (AI 0 ... AI 1), 1323
- 9106
  - TB30 analog outputs (AO 0 ... AO 1), 1324
- 9204
  - Receive telegram, free PDO mapping (p8744 = 2), 1326
- 9206
  - Receive telegram, Predefined Connection Set (p8744 = 1), 1327
- 9208
  - Send telegram, free PDO mapping (p8744 = 2), 1328
- 9210
  - Send telegram, Predefined Connection Set (p8744 = 1), 1329
- 9220
  - Control word, CANopen, 1330
- 9226
  - Status word, CANopen, 1331
- 9549
  - TM31 overview, 1333
- 9550
  - TM31 digital inputs, electrically isolated (DI 0 ... DI 3), 1334
- 9552
  - TM31 digital inputs, electrically isolated (DI 4 ... DI 7), 1335
- 9556
  - TM31 digital relay outputs, electrically isolated (DO 0 ... DO 1), 1336
- 9560
  - TM31 digital inputs/outputs,
    - bidirectional (DI/DO 8 ... DI/DO 9), 1337
- 9562
  - TM31 digital inputs/outputs,
    - bidirectional (DI/DO 10 ... DI/DO 11), 1338
- 9566
  - TM31 analog input 0 (AI 0), 1339
- 9568
  - TM31 analog input 1 (AI 1), 1340
- 9572
  - TM31 analog outputs (AO 0 ... AO 1), 1341
- 9576
  - TM31 temperature evaluation, 1342
- 9605
  - TM120 temperature evaluation channels 0 and 1 (KTY/PTC/bimetal), 1344
- 9606
  - TM120 temperature evaluation channels 2 and 3 (KTY/PTC/bimetal), 1345
- 9625
  - TM150 temperature evaluation structure (channels 0 ... 11), 1347
- 9626
  - TM150 temperature evaluation 1x2-, 3-, 4-wire (channels 0 ... 5), 1348

- 9627
  - TM150 temperature evaluation 2x2-wire (channel 0 ... 11), 1349
- 9880
  - VSM analog inputs (AI 0 ... AI 3), 1351
- 9886
  - VSM temperature evaluation, 1352
- 9912
  - BOP20 control word interconnection, 1354

## A

- Access level (parameter), 22
- Acknowledgment
  - Adjustable, 1366
  - Default, 1366
  - IMMEDIATELY, 1359
  - POWER ON, 1359
  - PULSE INHIBIT, 1359
- Active (parameter, C1(x), C2(x), U, T), 21
- Address
  - PROFIBUS, 1125
  - PROFINET, 1125
  - Technical Support, 7
- Adjustable parameters, 17
- Alarm
  - Cause, 1366
  - Component, 1365
  - Display, 1356
  - Drive object, 1365
  - Explanation of list, 1361
  - Fault location, 1362
  - General information, 1356
  - How to distinguish an alarm from a fault, 1356
  - List of all alarms, 1369
  - Message class, 1362
  - Message value, 1362
  - Name, 1362
  - Number, 1361
  - Number range, 1367
  - Remedy, 1366
- Alarm buffer, 1296
- Alarm value, 1366
- Analog inputs
  - Terminal Board 30 (TB30), 1319
  - Terminal Module 31 (TM31), 1332
- Analog outputs
  - Terminal Board 30 (TB30), 1319
  - Terminal Module 31 (TM31), 1332
- ASCII table, 1942
- Axxxx, 1361

## B

- Basic Infeed, 1311
  - Control word, sequence control, 1313
  - Interface (control signals, actual values), 1317

- Missing enables, line contactor control, 1316
- Overview, 1312
- Sequencer, 1315
- Signals and monitoring functions, 1311, 1318
- Status word, sequence control, 1314
- Table of contents, 1311

Basic Operator Panel (BOP), 1353

Basic/extended brake control, 1183

BI, Binector Input, 18

BICO technology, 1105

Binector

- Input (BI), 18

- Output (BO), 18

Bit field (parameter), 29

BO, Binector Output, 18

Brake control

- Basic, 1183

- Extended, 1183

## C

- C1(x) - State commissioning device, 21
- C2(x) - State commissioning drive, 21
- Calculated (parameter), 22
- Can be changed (parameter, C1(x), C2(x), U, T), 21
- Catalogs, 1954
- CDS, (Command Data Set), 24, 1305, 1306
- CI, Connector Input, 18
- CO, Connector Output, 18
- CO/BO, Connector/Binector Output, 18
- Command data sets, 1305
- Communication
  - CANopen, 1325
- Communication Board CAN 10 (CBC10), 1325
- Component, 1365
- Connector
  - Input (CI), 18
  - Output (CO), 18
- Control
  - Basic Infeed, 1311
  - Technology controller, 1282
  - Vector, 1240
- Control Unit 320-2 (CU320-2)
  - Digital inputs, 1106
  - Digital inputs/outputs, 1106
- Control Unit communication (SINAMICS Link), 1114
- Control words, 1122
  - Internal, 1167
  - Standard telegrams, 1122
- Converter
  - Binector/connector, 1153, 1158
  - Connector-binector, 1151, 1154, 1156, 1159
- Cxxxxx, 1361

- D**
- Data Set, 24
    - Command data set, CDS, 24
    - Drive Data Set, DDS, 24
    - Encoder Data Set, EDS, 24
    - Motor Data Set, MDS, 24
    - Power unit Data Set, PDS, 24
  - Data set, 24
  - Data sets, 1305
    - Command data set, 24
    - Drive data set, 24
    - Encoder data set, 24
    - Motor data set, 24
    - Power unit data set, 24
  - Data type (parameter, signal source), 23
  - DCBRK, 1358
  - DDS, (Drive Data Set), 1305, 1307
  - DDS, drive data set, 24
  - Dependency (parameter), 29
  - Description (parameter), 28
  - Digital inputs
    - Control Unit 320-2 (CU320-2), 1106
    - Terminal Board 30 (TB30), 1319
    - Terminal Module 31 (TM31), 1332
  - Digital inputs/outputs
    - Control Unit 320-2 (CU320-2), 1106
    - Terminal Module 31 (TM31), 1332
  - Digital outputs
    - Control Unit 320-2 (CU320-2), 1106
    - Terminal Board 30 (TB30), 1319
    - Terminal Module 31 (TM31), 1332
  - Direction limitation, 1226
  - Direction reversal, 1226
  - Directory
    - ASCII table, 1942
    - Complete table of contents, 9
    - Index, 1961
    - List of abbreviations, 1945
    - References, 1954
    - Table of contents, function diagrams, 1093
  - Display
    - Alarms, 1356
    - Faults, 1356
  - Display parameters, 17
  - DO, Drive Object, 18
  - Drive data sets, 1305
  - Drive object, 18
  - DSC (Dynamic Servo Control), 1226
- E**
- EDS, (Encoder Data Set), 24, 1305, 1308
  - ENCODER, 1358
  - Encoder data sets, 1305
  - Encoder evaluation, 1236
  - Essential service mode (ESM), 1277
  - Expert list, 28
  - Explanations
    - on function diagrams, 1101
- F**
- Factory setting, 27
  - Fault
    - Acknowledgment, 1359, 1366
    - Cause, 1366
    - Component, 1365
    - Display, 1356
    - Drive object, 1365
    - Explanation of list, 1361
    - Fault location, 1362
    - Fault reaction, 1357, 1366
    - General information, 1356
    - How to distinguish a fault from an alarm, 1356
    - List of all faults, 1369
    - Message class, 1362
    - Message value, 1362
    - Name, 1362
    - Number, 1361
    - Number range, 1367
    - Propagation, 1365
    - Remedy, 1366
    - Save when switching off, 1359
  - Fault buffer, 1296
    - Configuration, 1297, 1298
    - Save when switching off, 1359
  - Fault value, 1366
  - Faults/alarms configuring, 1296
  - Faults/alarms triggering (r2129), 1296
  - Fixed speed setpoints, 1226
  - Fixed values, 1103, 1279, 1280
  - Free interconnection via BICO, 1122
  - Free interconnection, status words, 1153, 1158
  - Friction characteristic, 1272
  - Function (parameter), 28
  - Function diagrams, Basic Infeed
    - Control word,
      - sequence control infeed, 1313
    - Interface to the Basic Infeed power unit (control signals, actual values), 1317
    - Missing enables, line contactor control, 1316
    - Overview, 1312
    - Sequencer, 1315
    - Signals and monitoring functions (p3400 = 0), 1318
    - Status word,
      - sequence control infeed, 1314
  - Function diagrams, Basic Operator Panel 20 (BOP20)
    - Control word BOP20 interconnection, 1354

- Function diagrams, brake control
  - Basic brake control (r0108.14 = 0), 1184
  - Extended brake control, open/close brake (r0108.14 = 1), 1186
  - Extended brake control, signal outputs (r0108.14 = 1), 1187
  - Extended brake control, zero-speed detection (r0108.14 = 1), 1185
- Function diagrams, Communication Board CAN
  - Control word, CANopen, 1330
  - Receive telegram, free PDO mapping (p8744 = 2), 1326
  - Receive telegram, Predefined Connection Set (p8744 = 1), 1327
  - Send telegram, free PDO mapping (p8744 = 2), 1328
  - Send telegram, Predefined Connection Set (p8744 = 1), 1329
  - Status word, CANopen, 1331
- Function diagrams, Control Unit communication
  - SINAMICS Link configuration (r0108.31 = 1, p8835 = 3), 1116
  - SINAMICS Link overview (r0108.31 = 1, p8835 = 3), 1115
  - SINAMICS Link receive data (r0108.31 = 1, p8835 = 3), 1117
  - SINAMICS Link send data (r0108.31 = 1, p8835 = 3), 1118
- Function diagrams, CU320-2 input/output terminals
  - Digital inputs, electrically isolated (DI 0 to DI 3, DI 16, DI 17), 1108
  - Digital inputs, electrically isolated (DI 4 ... DI 7, DI 20, DI 21), 1109
  - Digital inputs/outputs, bidirectional (DI/DO 10 ... DI/DO 11), 1111
  - Digital inputs/outputs, bidirectional (DI/DO 12 ... DI/DO 13), 1112
  - Digital inputs/outputs, bidirectional (DI/DO 14 ... DI/DO 15), 1113
  - Digital inputs/outputs, bidirectional (DI/DO 8 ... DI/DO 9), 1110
  - Overview, 1107
- Function diagrams, data sets
  - Command Data Sets (CDS), 1306
  - Drive Data Sets (DDS), 1307
  - Encoder Data Sets (EDS), 1308
  - Motor Data Sets (MDS), 1309
  - Power unit Data Sets (PDS), 1310
- Function diagrams, diagnostics
  - Alarm buffer, 1299
  - Fault buffer, 1298
  - Faults/alarms configuration, 1301
  - Faults/alarms trigger word (r2129), 1300
  - Measuring sockets (T0, T1, T2), 1302
  - Overview, 1297
  - Recorder overview (r0108.5 = 1), 1303
  - Recorder sequence control (r0108.5 = 1), 1304
- Function diagrams, encoder evaluation
  - Actual speed value and pole position sensing, encoder 1, n\_act\_filter 5, 1239
  - Overview, 1237
  - Raw signal sensing, 1238
- Function diagrams, explanations
  - Explanation of the symbols (part 1), 1102
  - Explanation of the symbols (part 2), 1103
  - Explanation of the symbols (part 3), 1104
  - Handling BICO technology, 1105
- Function diagrams, internal control/status words
  - Control word, faults/alarms, 1178
  - Control word, sequence control, 1168
  - Control word, setpoint channel, 1170
  - Control word, speed controller, 1171
  - Status word, closed-loop control, 1173
  - Status word, closed-loop current control, 1174
  - Status word, faults/alarms 1 and 2, 1179
  - Status word, monitoring functions 1, 1175
  - Status word, monitoring functions 2, 1176
  - Status word, monitoring functions 3, 1177
  - Status word, sequence control, 1169
  - Status word, speed controller, 1172

- Function diagrams, PROFIdrive
  - A\_DIGITAL interconnection, 1163
  - A\_DIGITAL\_1 interconnection, 1165
  - CU\_STW1 control word 1, Control Unit interconnection, 1161
  - CU\_ZSW1 status word 1, Control Unit interconnection, 1162
  - E\_DIGITAL interconnection, 1164
  - E\_DIGITAL\_1 interconnection, 1166
  - E\_STW1 control word infeed interconnection, 1144
  - E\_STW1\_BM control word, infeed metal industry interconnection, 1135
  - E\_ZSW1 status word, infeed interconnection, 1150
  - E\_ZSW1\_BM status word, infeed metal industry interconnection, 1138
  - IF1 receive telegram, free interconnection via BICO (p0922 = 999), 1151, 1154
  - IF1 send telegram, free interconnection via BICO (p0922 = 999), 1152, 1155
  - IF1 status words, free interconnection, 1153
  - IF2 receive telegram, free interconnection, 1156, 1159
  - IF2 send telegram, free interconnection, 1157, 1160
  - IF2 status words, free interconnection, 1158
  - Manufacturer-specific telegrams and process data 1, 1128
  - Manufacturer-specific telegrams and process data 2, 1129
  - Manufacturer-specific telegrams and process data 3, 1130
  - Manufacturer-specific telegrams and process data 4, 1131
  - Manufacturer-specific/free telegrams and process data, 1132
  - Overview, 1124
  - PROFIBUS (PB) / PROFINET (PN), addresses and diagnostics, 1125
  - PZD receive signals interconnection, manufacturer-specific, 1140
  - PZD receive signals interconnection, profile-specific, 1139
  - PZD send signals interconnection, manufacturer-specific, 1146
  - PZD send signals interconnection, profile-specific, 1145
  - Standard telegrams and process data 1, 1126
  - Standard telegrams and process data 2, 1127
  - STW1 control word interconnection (p2038 = 0), 1142
  - STW1 control word interconnection (p2038 = 2), 1141
  - STW1\_BM control word, metal industry interconnection, 1133
  - STW2 control word interconnection (p2038 = 0), 1143
  - STW2\_BM control word, metal industry interconnection, 1134
  - ZSW1 status word interconnection (p2038 = 0), 1148
  - ZSW1 status word interconnection (p2038 = 2), 1147
  - ZSW1\_BM status word, metal industry interconnection, 1136
  - ZSW2 status word interconnection (p2038 = 0), 1149
  - ZSW2\_BM status word, metal industry interconnection, 1137
- Function diagrams, PROFIenergy
  - Control commands / interrogation commands, 1120
  - States, 1121
- Function diagrams, sequence control
  - Missing enables, line contactor control, logic operation, 1182
  - Sequencer, 1181
- Function diagrams, setpoint channel
  - Direction limitation and direction reversal, 1231
  - Fixed speed setpoints, 1228
  - Main/supplementary setpoint, setpoint scaling, jogging, 1230
  - Motorized potentiometer, 1229
  - Overview, 1227
  - Ramp-function generator (basic), 1233
  - Ramp-function generator (extended), 1234
  - Ramp-function generator selection, -status word, -tracking, 1235
  - Skip frequency bands and speed limitations, 1232
- Function diagrams, SI Basic Functions
  - Monitoring functions and faults/alarms, 1190
  - Parameter manager, 1189
  - S\_STW1/2 Safety control word 1/2, 1192
  - S\_ZSW1/2 Safety status word 1/2, 1192
  - SBC (Safe Brake Control),
    - SBA (Safe Brake Adapter), 1195
  - SI status CU, MM, CU + MM, group STO, 1191
  - STO (Safe Torque Off),
    - safe pulse suppression, 1194
  - STO (Safe Torque Off),
    - SS1 (Safe Stop 1), 1193

- Function diagrams, SI Extended Functions
  - Parameter manager, 1197
  - S\_STW1 Safety control word 1, 1208
  - S\_STW2 Safety control word 2, 1209
  - S\_ZSW1 Safety status word 1, 1208
  - S\_ZSW2 Safety status word 2, 1209
  - Safe referencing, 1200
  - SAM (Safe Acceleration Monitor), 1204
  - SBR (Safe Brake Ramp), 1204
  - SBT (Safe Brake Test), 1205
  - SDI (Safe Direction), 1203
  - Selection of active control word, 1206
  - SI Motion drive-integrated control signals / status signals, 1207
  - SLP (Safely-Limited Position), 1201
  - SLS (Safely-Limited Speed), 1199
  - SS1, SS2, SOS, internal STOP B, C, D, F, 1198
  - SSM (Safe Speed Monitor), 1202
- Function diagrams, SI PROFIsafe
  - Manufacturer-specific telegrams, 1225
  - Standard telegrams, 1224
- Function diagrams, SI TM54F
  - Basic Functions assignment (F-DO 0 ... F-DO 3), 1219
  - Basic Functions Safe State selection, 1218
  - Configuration, F-DI/F-DO Test, 1213
  - Control interface (p9601.2 = 1 & p9601.3 = 0), 1220
  - Control interface (p9601.2/3 = 0 & p9601.6 = 1), 1217
  - Extended Functions assignment (F-DO 0 ... F-DO 3), 1222
  - Extended Functions Safe State selection, 1221
  - Fail-safe digital inputs (F-DI 0 ... F-DI 4), 1214
  - Fail-safe digital inputs (F-DI 5 ... F-DI 9), 1215
  - Fail-safe digital outputs (F-DO 0 ... F-DO 3), digital inputs (DI 20 ... DI 23), 1216
  - Overview, 1211
  - Parameter manager, 1212
- Function diagrams, signals and monitoring functions
  - Freely parameterized I2t monitoring (SESM), 1295
  - Load monitoring (r0108.17 = 1), 1289
  - Motor temperature model 1 (I2t), 1291
  - Motor temperature model 2, 1292
  - Motor temperature model 3, 1293
  - Overview, 1285
  - Speed signals 1, 1286
  - Speed signals 2, 1287
  - Thermal monitoring, motor, motor temperature status word faults/alarms, 1290
  - Thermal monitoring, power unit, 1294
  - Torque signals, motor blocked/stalled, 1288
- Function diagrams, TB30
  - Analog inputs (AI 0 to AI 1), 1323
  - Analog outputs (AO 0 ... AO 1), 1324
  - Digital inputs, electrically isolated (DI 0 ... DI 3), 1321
  - Digital outputs, electrically isolated (DO 0 ... DO 3), 1322
  - Overview, 1320
- Function diagrams, technology controller
  - Closed-loop control (r0108.16 = 1), 1282
  - DC-link voltage controller (r0108.16 = 1), 1283
  - Fixed values, binary selection (r0108.16 = 1 and p2216 = 2), 1279
  - Fixed values, direct selection (r0108.16 = 1 and p2216 = 1), 1280
  - Motorized potentiometer (r0108.16 = 1), 1281
- Function diagrams, technology functions
  - DC braking (p0300 = 1xx), 1275
  - Essential service mode (ESM), 1277
  - External Armature Short-Circuit (EASC, p0300 = 2xx or 4xx), 1273
  - Friction characteristic, 1272
  - Internal Armature Short-Circuit (IASC, p0300 = 2xx or 4xx), 1274
  - Synchronization, 1276
- Function diagrams, TM120
  - Temperature evaluation channels 0 and 1 (KTY/PTC/bimetal), 1344
  - Temperature evaluation channels 2 and 3 (KTY/PTC/bimetal), 1345
- Function diagrams, TM150
  - Temperature evaluation 1x2-, 3-, 4-wire (channels 0 ... 5), 1348
  - Temperature evaluation 2x2-wire (channels 0 ... 11), 1349
  - Temperature evaluation structure (channels 0 ... 11), 1347
- Function diagrams, TM31
  - Analog input 0 (AI 0), 1339
  - Analog input 1 (AI 1), 1340
  - Analog outputs (AO 0 ... AO 1), 1341
  - Digital inputs, electrically isolated (DI 0 ... DI 3), 1334
  - Digital inputs, electrically isolated (DI 4 ... DI 7), 1335
  - Digital inputs/outputs, bidirectional (DI/DO 10 ... DI/DO 11), 1338
  - Digital inputs/outputs, bidirectional (DI/DO 8 ... DI/DO 9), 1337
  - Digital relay outputs, electrically isolated (DO 0 ... DO 1), 1336
  - Overview, 1333
  - Temperature evaluation, 1342

- Function diagrams, vector control
  - Current control, overview, 1258
  - Current setpoint filter, 1259
  - Current/power/torque limits, 1257
  - Display signals, 1270
  - Field weakening characteristic, Id setpoint (ASM, p0300 = 1), 1262
  - Field weakening controller (PEM, p0300 = 2), 1264
  - Field weakening controller, flux controller (ASM, p0300 = 1), 1263
  - Flux control configuration, 1255
  - Flux setpoint (RESM, p0300 = 6), 1267
  - Id setpoint (PEM, p0300 = 2), 1261
  - Id setpoint (RESM, p0300 = 6), 1268
  - Interface to the Motor Module (ASM, p0300 = 1), 1265
  - Interface to the Motor Module (PEM, p0300 = 2), 1266
  - Interface to the Motor Module (RESM, p0300 = 6), 1269
  - Iq and Id controllers, 1260
  - Moment of inertia estimator (r0108.10 = 1), 1245
  - Pre-control balancing, reference/acceleration model, 1244
  - Resonance damping and slip compensation, 1252
  - Speed control and generation of the torque limits, overview, 1242
  - Speed control configuration, 1254
  - Speed controller adaptation (Kp\_n/Tn\_n adaptation), 1247
  - Speed controller with/without encoder, 1246
  - Speed setpoint, droop, 1243
  - Torque setpoint, 1248
  - U/f characteristic and voltage boost, 1251
  - U/f control, overview, 1250
  - Upper/lower torque limit, 1256
  - Vdc\_max controller and Vdc\_min controller, 1249
  - Vdc\_max controller and Vdc\_min controller (U/f), 1253
- Function diagrams, VSM
  - Analog inputs (AI 0 ... AI 3), 1351
  - Temperature evaluation, 1352
- Function module, 18
- Fxxxx, 1361
- G**
- General information
  - about parameters, 16
  - on faults and alarms, 1356
  - on function diagrams, 1101
- H**
- Holding brake, 1183
- Hotline, 7
- I**
- IASC, 1358
- Index
  - Factory setting, 29
  - Parameters, 17, 29
- Industrial security, 13
- Information
  - Product information, 5
- Input terminals
  - Control Unit 320-2 (CU320-2), 1106
  - Terminal Board 30 (TB30), 1319
  - Terminal Module 31 (TM31), 1332
- Internal control/status words, 1167
- J**
- Jogging, 1226, 1230
- L**
- Line contactor control, 1182, 1311
- Linked parameters, 17
- List
  - Abbreviations, 1945
  - ASCII table, 1942
  - Faults and alarms, 1369
  - Message ranges, 1367
  - Parameter ranges, 31
  - Parameters for command data sets, 1069
  - Parameters for drive data sets, 1071
  - Parameters for encoder data sets, 1079
  - Parameters for motor data sets, 1081
  - Parameters for power unit data sets, 1084
  - Parameters for write protection and know-how protection, 1086
  - Parameters, all, 34
  - References, 1954
- List of abbreviations, 1945
- Load monitoring (r0108.17 = 1), 1284
- M**
- Main/supplementary setpoint, 1226
- Manufacturer-specific telegrams, 1122
- MDS, (Motor Data Set), 1305, 1309
- MDS, Motor Data Set, 24
- Measuring sockets, 1296
- Message buffer, 1296
- Message class, 1362
- Message value, 1362
- Missing enables
  - Basic Infeed, 1316
  - Drive, 1182
- Monitoring functions, 1284
- Motor data sets, 1305
- Motor holding brake, 1183
- Motorized potentiometer, 1226, 1281

**N**

## Name

- Alarm, 1362
- Fault, 1362
- Parameters, 18

## Normalization, 28

## Not for motor type, 28

## Notes

- Hotline, 7
- Technical Support, 7

## Number

- Alarm, 1361
- Fault, 1361
- Parameters, 17

## Number range

- Alarms, 1367
- Faults, 1367
- Parameters, 31

**O**

## Object, 18

## OFF1, 1357

## OFF1\_DELAYED, 1357

## OFF2, 1357

## OFF3, 1358

## Output terminals

- Control Unit 320-2 (CU320-2), 1106
- Terminal Board 30 (TB30), 1319
- Terminal Module 31 (TM31), 1332

**P**

## Parameter

- Normalization, 28
- Not for motor type, 28

## Parameters

- Access level, 22
- Calculated, 22
- Can be changed, 21
- Data type, 23
- Description, 28
- Dynamic index, 24
- Expert list, 28
- Full name, 18
- Function, 28
- Index, 17, 29
- Linked parameters, 17
- List of all parameters, 34
- List of parameters for
  - command data sets, 1069
- List of parameters for
  - drive data sets, 1071
- List of parameters for
  - encoder data sets, 1079
- List of parameters for
  - motor data sets, 1081
- List of parameters for
  - power unit data sets, 1084
- Name, 18
- Number, 17
- Number range, 31
- P-Group, 24
- Safety instructions, 29
- Short name, 18
- Unit, 24
- Unit group, 24
- Unit selection, 24
- Values, 28

## Password for access level 4, 22

## PDS (Power unit Data Set), 24

## PDS, (Power unit Data Set), 1305, 1310

## P-Group (parameter), 24

## PID controller (p0108.16 = 1), 1278

## Power unit data sets, 1305

## Process data, 1122

## Product information, 5

## PROFIdrive, 1122

## PROFIenergy, 1119

## PROFI-safe, 1223

## Propagation, 1365

## pxxxx, 17

**R**

## Ramp-function generator, 1226

## Reaction to faults, 1357

## References, 1954

## Relay outputs, 1332

## Resetting faults, 1366

## rxxxx, 17

- S**
- Safety instructions
    - Fundamental, 11
    - General, 12
    - Industrial security, 13
  - Safety instructions (parameter), 29
  - Safety Integrated
    - Basic Functions, 1188
    - Extended Functions, 1196
    - PROFIsafe, 1223
    - TM54F, 1210
  - Search aids for this manual, 7
  - Sequence control, 1180
  - Servo control
    - Encoder evaluation, 1236
  - Setpoint channel, 1226
  - Signal path in function diagrams, 1102
  - Signals, 1284
  - SINAMICS Link, 1114
  - Skip frequency bands, 1226
  - Speed control
    - Vector, 1240
  - Speed signals, 1284
  - Status words
    - Internal, 1167
    - Standard telegrams, 1122
  - STOP2, 1358
  - Support, 7
  - Support Request, 7
  - Synchronization, 1276
- T**
- T - Ready state, 21
  - Target group, 6
  - Technical Support, 7
  - Technology controller (p0108.16 = 1), 1278
  - Technology functions, 1271
  - Telegrams, 1122
  - Temperature evaluation
    - Terminal Module 120 (TM120), 1343
    - Terminal Module 150 (TM150), 1346
    - Terminal Module 31 (TM31), 1332
  - Terminal Board 30 (TB30), 1319
  - Terminal Module 120 (TM120), 1343
  - Terminal Module 150 (TM150), 1346
  - Terminal Module 31 (TM31), 1332
  - Terminal Module 54F (TM54F), 1210
- Terminals
- Control Unit 320-2 (CU320-2), 1106
  - Terminal Board 30 (TB30), 1319
  - Terminal Module 31 (TM31), 1332
- Thermal monitoring, 1284
- Torque signals, 1284
- U**
- U - Operation state, 21
  - U/f control
    - Vector, 1251
  - Unit (parameter), 24
  - Usage phases, 6
- V**
- Values (parameter), 28
  - Vector control
    - Current setpoint filter, 1259
    - Droop, 1243
    - Encoder evaluation, 1236
    - Field weakening characteristic, Id setpoint, 1262
    - Flux control, 1255
    - Iq and Id controllers, 1260
    - Kp\_n-/Tn\_n adaptation, 1247
    - Resonance damping and slip compensation, 1252
    - Speed control configuration, 1254
    - Speed controller with/without encoder, 1246
    - Table of contents, 1240
    - Torque setpoint, 1248
    - U/f characteristic, 1251
    - Vdc\_max controller and Vdc\_min controller, 1249, 1253
- Version
- List of all parameters, 34
  - List of faults and alarms, 1369
  - List of parameters for
    - command data sets, 1069
  - List of parameters for
    - drive data sets, 1071
  - List of parameters for
    - encoder data sets, 1079
  - List of parameters for
    - motor data sets, 1081
  - List of parameters for
    - power unit data sets, 1084
- Voltage Sensing Module (VSM)
- Analog inputs, 1350
  - Sensor monitoring KTY/PTC, 1350
  - Temperature evaluation, 1350





Siemens AG  
Process Industries and Drives  
Large Drives  
P.O. Box 4743  
90025 NUREMBERG  
GERMANY

Subject to change without prior notice  
© Siemens AG 2003 - 2016

[www.siemens.com/drives](http://www.siemens.com/drives)